



Junos[®] OS

Interfaces Fundamentals for Routing Devices



Modified: 2018-12-18

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos® OS Interfaces Fundamentals for Routing Devices
Copyright © 2018 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

About the Documentation	xlili
Documentation and Release Notes	xlili
Using the Examples in This Manual	xlili
Merging a Full Example	xliv
Merging a Snippet	xliv
Documentation Conventions	xlvi
Documentation Feedback	xlvi
Requesting Technical Support	xlvi
Self-Help Online Tools and Resources	xlvi
Opening a Case with JTAC	xlvi

Part 1

Chapter 1

Router Interfaces

Router Interfaces Overview	3
Router Interfaces Overview	4
Types of Interfaces Overview	4
Understanding Permanent Interfaces	5
Understanding Transient Interfaces	5
Understanding Services Interfaces	7
Understanding Container Interfaces	8
Understanding Traditional APS Concept	8
Container Interfaces Concept	9
APS Support for Container-Based Interfaces	9
Autocopy of APS Parameters	9
Understanding Management Ethernet Interfaces	10
Understanding Interfaces on ACX Series Universal Metro Routers	11
T1 and E1 Time-Division Multiplexing (TDM) Interfaces	12
Inverse Multiplexing for ATM (IMA)	13
Gigabit Ethernet interfaces	13
TX Matrix Plus and T1600 Router (Routing Matrix) Management Ethernet Interfaces	14
Understanding Internal Ethernet Interfaces	15
T1600 Routers (Routing Matrix) Internal Ethernet Interfaces	17
Supported Routing Engines by Router	17
M7i Routing Engines	18
M10i Routing Engines	19
M40e Routing Engines	19
M120 Routing Engines	19
M320 Routing Engines	20
MX5, MX10, MX40, and MX80 Routing Engine	21
MX104 Routing Engines	21

	MX240 Routing Engines	21
	MX480 Routing Engines	22
	MX960 Routing Engines	23
	MX2008 Routing Engines	24
	MX2010 Routing Engines	25
	MX2020 Supported Routing Engines	25
	MX10003 Routing Engines	26
	MX10008 Routing Engines	26
	PTX1000 Routing Engines	27
	PTX3000 Routing Engines	27
	PTX5000 Routing Engines	27
	PTX10008 and PTX10016 Routing Engines	28
	T320 Routing Engines	29
	T640 Routing Engines	29
	T1600 Routing Engines	30
	T4000 Routing Engines	31
	TX Matrix Routing Engines	31
	TX Matrix Plus Routing Engines	32
	TX Matrix Plus (with 3D SIBs) Routing Engines	32
	Interface Naming Overview	33
	Physical Part of an Interface Name	34
	Logical Part of an Interface Name	40
	Separators in an Interface Name	40
	Channel Part of an Interface Name	40
	Interface Naming for a Routing Matrix Based on a TX Matrix Router	41
	Interface Naming for a Routing Matrix Based on a TX Matrix Plus Router	43
	Chassis Interface Naming	45
	Examples: Interface Naming	46
	Interface Encapsulations Overview	48
	Interface Descriptors Overview	59
	Physical Part of an Interface Name	60
	Interface Names for ACX Series Universal Metro Routers	60
	Interface Names for M Series and T Series Routers	61
	MX Series Router Interface Names	61
	Interface Names for PTX Series Routers	62
	Displaying Interface Configurations Overview	62
Chapter 2	Configuring Physical Interface Properties	63
	Physical Interface Configuration Statements Overview	64
	Physical Interfaces Properties Statements List	74
	Configuring Interface Ranges	90
	Configuring Interface Ranges	90
	Expanding Interface Range Member and Member Range Statements	94
	Configuration Inheritance for Member Interfaces	96
	Member Interfaces Inheriting Configuration from Configuration Groups	97
	Interfaces Inheriting Common Configuration	98
	Configuring Inheritance Range Priorities	98
	Configuration Expansion Where Interface Range Is Used	99
	Specifying an Aggregated Interface	100

Media MTU Overview	100
Media MTU Sizes by Interface Type	101
.	101
Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers	102
Media MTU Sizes by Interface Type for M40e Routers	103
Media MTU Sizes by Interface Type for M160 Routers	104
Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers	105
Media MTU Sizes by Interface Type for MX Series Routers	106
Media MTU Sizes by Interface Type for T320 Routers	107
Media MTU Sizes by Interface Type for T640 Platforms	108
Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers	108
Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers	109
Configuring the Media MTU on ACX Series Routers	110
Media MTU Overview	110
How to Configure the Media MTU	111
Encapsulation Overhead by Encapsulation Type	111
Media MTU Sizes by Interface Type for ACX Series Routers	112
Encapsulation Overhead by Interface Encapsulation Type	113
Configuring Interface Description	114
Configuring the Media MTU	115
Configuring the Interface Speed	116
Configuring the Interface Speed on Ethernet Interfaces	116
Configuring Aggregated Ethernet Link Speed	118
Configuring SONET/SDH Interface Speed	121
Configuring the Link Characteristics	122
Interface Alias Names Overview	123
Example: Adding an Interface Alias Name	124
Clock Source Overview	128
Configuring the Clock Source	129
Configuring Interface Encapsulation on Physical Interfaces	130
Understanding Interface Encapsulation on Physical Interfaces	130
Encapsulation Capabilities of Physical Interfaces	131
Configuring the Encapsulation on a Physical Interface	132
Displaying the Encapsulation on a Physical SONET/SDH Interface	132
Configuring Interface Encapsulation on PTX Series Packet Transport Routers	133
Configuring Keepalives	135
Configuring the PPP Challenge Handshake Authentication Protocol	137
PPP Challenge Handshake Authentication Protocol	137
Configuring the PPP Challenge Handshake Authentication Protocol	138
Displaying the Configured PPP Challenge Handshake Authentication Protocol	139

Configuring the PPP Password Authentication Protocol On a Physical Interface	140
Understanding PPP Password Authentication Protocol	140
Configuring the PPP Password Authentication Protocol On a Physical Interface	141
Configuring the PPP Password Authentication Protocol On a Logical Interface	142
Configuring the PPP Authentication Protocol	143
PPP Encapsulation on ACX Series Routers	144
Configuring Interface Encapsulation on Physical Interfaces in ACX Series	146
Configuring the Encapsulation on a Physical Interface	146
Encapsulation Capabilities	148
Example: Configuring the Encapsulation on a Physical Interface	149
Configuring PPP Address and Control Field Compression	150
Configuring the PPP Protocol Field Compression	152
Monitoring a PPP Session	153
Tracing Operations of the pppd Process	154
Configuring the Router as a DCE with Frame Relay Encapsulation	155
Receive and Transmit Leaky Bucket Properties Overview	156
Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion	157
Understanding Unidirectional Traffic Flow on Physical Interfaces	158
Enabling Unidirectional Traffic Flow on Physical Interfaces	159
Physical Interface Damping Overview	160
Damping Overview for Shorter Physical Interface Transitions	160
Damping Overview for Longer Physical Interface Transitions	161
Damping Shorter Physical Interface Transitions	166
Damping Longer Physical Interface Transitions	167
Example: Configuring Physical Interface Damping	169
Configuring Multiservice Physical Interface Properties	171
Enabling or Disabling SNMP Notifications on Physical Interfaces	172
Configuring Accounting for the Physical Interface	173
Accounting Profiles Overview	173
Configuring Accounting for the Physical Interface	173
Displaying Accounting Profile for the Physical Interface	174
Disabling a Physical Interface	175
Disabling a Physical Interface	175
Example: Disabling a Physical Interface	176
Effect of Disabling Interfaces on T series PICs	177
Chapter 3	
Configuring Logical Interface Properties	179
Logical Interfaces Configuration Properties Overview	179
Logical Interfaces Configuration Statements	180
Logical Interfaces Statements List	183
Specifying the Logical Interface Number	190
Adding a Logical Unit Description to the Configuration	190

Configuring the Interface Bandwidth	191
Configuring Interface Encapsulation on Logical Interfaces	192
Understanding Interface Encapsulation on Logical Interfaces	192
Configuring the Encapsulation on a Logical Interface	193
Displaying the Encapsulation on a Logical Interface	193
Configuring Interface Encapsulation on PTX Series Packet Transport Routers	194
Configuring a Point-to-Point Connection	195
Configuring a Multipoint Connection	195
Configuring the PPP Restart Timers	196
Configuring the PPP Clear Loop Detected Timer	196
Configuring the LCP Configure-Request Maximum Sent	197
Configuring the NCP Configure-Request Maximum Sent	197
Configuring Dynamic Profiles for PPP	198
Configuring PPP CHAP Authentication	198
Configuring the PPP Password Authentication Protocol On a Logical Interface	199
Understanding PPP Password Authentication Protocol	199
Configuring the PPP Password Authentication Protocol On a Logical Interface	199
Configuring Accounting for the Logical Interface	201
Accounting Profiles Overview	201
Configuring Accounting for the Logical Interface	201
Displaying Accounting Profile for the Logical Interface	202
Enabling or Disabling SNMP Notifications on Logical Interfaces	203
Disabling a Logical Interface	203
Configuring Logical System Interface Properties	204
Chapter 4 Configuring Protocol Family and Interface Address Properties	205
Protocol Family Configuration and Interface Address Statements	205
Configuring the Protocol Family	208
Configuring the Interface Address	209
Configuring Default, Primary, and Preferred Addresses and Interfaces	211
Default, Primary, and Preferred Addresses and Interfaces	211
Configuring the Primary Interface for the Router	212
Configuring the Primary Address for an Interface	212
Configuring the Preferred Address for an Interface	213
Operational Behavior of Interfaces When the Same IPv4 Address Is Assigned to Them	213
Configuring ICCP for MC-LAG	216
Configuring IPCP Options for Interfaces with PPP Encapsulation	218
Configuring an Unnumbered Interface	220
Overview of Unnumbered Interfaces	220
Configuring an Unnumbered Point-to-Point Interface	220
Configuring an Unnumbered Ethernet or Demux Interface	221

Configuring a Preferred Source Address for Unnumbered Ethernet or Demux Interfaces	222
Restrictions for Configuring Unnumbered Ethernet Interfaces	223
Displaying the Unnumbered Ethernet Interface Configuration	224
Displaying the Configured Preferred Source Address for an Unnumbered Ethernet Interface	225
Displaying the Configuration for Unnumbered Ethernet Interface as the Next Hop for a Static Route	226
Setting the Protocol MTU	226
Disabling the Removal of Address and Control Bytes	227
Disabling the Transmission of Redirect Messages on an Interface	228
Applying Policers	228
Overview of Applying Policers	228
Applying Aggregate Policers	229
Applying Aggregate Policers	229
Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs	232
Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs	232
Configuring Hierarchical Policers	234
Configuring a Single-Rate Two-Color Policer	235
Configuring a Single-Rate Color-Blind Policer	235
Configuring a Two-Rate Tricolor Marker Policer	236
Applying a Filter to an Interface	238
Defining Interface Groups in Firewall Filters	238
Filter-Based Forwarding on the Output Interface	238
Applying a Filter to an Interface	239
Guidelines for Configuring Unicast RPF on ACX Series Routers	243
Configuring Unicast RPF	244
Configuring Unicast RPF	244
Unicast RPF and Default Route	245
Unicast RPF Behavior with a Default Route	245
Unicast RPF Behavior Without a Default Route	246
Unicast RPF with Routing Asymmetry	246
Configuring Unicast RPF Strict Mode	247
Configuring Unicast RPF Loose Mode	249
Configuring Unicast RPF Loose Mode with Ability to Discard Packets	250
Configuring Unicast RPF on a VPN	252
Configuring Unicast RPF	253
Verifying Unicast RPF Status	254
Example: Configuring Unicast Reverse-Path-Forwarding Check	256
Understanding How Unicast Reverse Path Forwarding Prevents Spoofed IP Packet Forwarding	256
Example: Configuring Unicast Reverse-Path-Forwarding Checking to Prevent DoS and DDoS Attacks	257

	Enabling Source Class and Destination Class Usage	265
	Source Class and Destination Class Usage	266
	Enabling Source Class and Destination Class Usage	269
	Understanding Targeted Broadcast	274
	Configuring Targeted Broadcast	275
	Configuring Targeted Broadcast and Its Options	276
	Display Targeted Broadcast Configuration Options	277
	Forward IP Packets On the Egress Interface and To the Routing Engine	277
	Forward IP Packets On the Egress Interface Only	277
Chapter 5	Configuring Circuit and Translational Cross-Connects	279
	Circuit and Translational Cross-Connects Overview	279
	Defining the Encapsulation for Switching Cross-Connects	281
	Defining the Encapsulation for Switching Cross-Connects	282
	Configuring PPP or Cisco HDLC Circuits	282
	Configuring ATM Circuits	282
	Configuring Frame Relay Circuits	283
	Configuring Ethernet CCC Circuits	284
	Configuring Ethernet VLAN Circuits	284
	Defining the Connection for Switching Cross-Connects	285
	Configuring MPLS for Switching Cross-Connects	285
	Configuring IS-IS or MPLS Traffic for TCC Interfaces	286
	Configuring ATM-to-Ethernet Interworking	286
	ATM-to-Ethernet Interworking	287
	Enabling ATM-to-Ethernet Interworking	287
	Configuring the Ethernet Interface	288
	Configuring Ethernet Encapsulation	288
	Configuring the Outer VLAN Identifier	288
	Configuring the Inner VLAN Identifier Range	288
	Configuring the Physical Interface VPI	289
	Configuring the ATM Logical Interface	289
	Configuring the Protocol Family	289
	Configuring the Logical Interface VPI	290
	Configuring the Logical Interface VCI	290
	ATM-To-Ethernet Interworking on ATM MICs	291
	Limitations	291
	Example: Configuring a CCC over Frame Relay Encapsulated Interface	292
	Example: Configuring a TCC	293
	Example: Configuring CCC over Aggregated Ethernet	294
	Example: Configuring a Remote LSP CCC over Aggregated Ethernet	296
	Example: Configuring ATM-to-Ethernet Interworking	298
	Example: Configuring ATM-to-Ethernet Interworking on ATM MIC	299
	Verifying ATM-to-Ethernet Interworking Configuration on ATM MICs	305
	Verifying That The ATM Interface on Router1 Is Configured Correctly	305
	Verifying The Status of the MIC on Router1	306
	Verify That OSPF Configuration on Router1 Is Accurate	306
	Verify That LDP Configuration on Router1 Is Accurate	307

	Verify That Layer 2 Virtual Circuit Session Configuration on Router1 Is Accurate	307
	Verifying That the Ethernet Interface on Router2 Is Configured Correctly . .	308
	Verifying the Status of the MIC on Router2	308
	Verify That OSPF Configuration on Router2 Is Accurate	308
	Verify That LDP Configuration on Router2 Is Accurate	309
	Verify That Layer 2 Virtual Circuit Session Configuration on Router2 Is Accurate	309
Part 2	Special Router Interfaces	
Chapter 6	Configuring Discard Interfaces	313
	Discard Interfaces Overview	313
	Understanding Discard Interfaces	313
	Guidelines to Follow When Configuring a Discard Interface	313
	Configuring Discard Interfaces	314
	Configure a Discard Interface	314
	Configure an Input Filter with Input policy	315
	Configure an Output Filter with Output policy	316
Chapter 7	Configuring IP Demultiplexing Interfaces	319
	Demultiplexing Interface Overview	319
	IP Demux Interface Overview	319
	VLAN Demux Interface Overview	320
	Guidelines to Remember When Configuring A Demux Interface	320
	Points to Remember When Configuring an IP Demux Interface	321
	Points to Remember When Configuring a VLAN Demux Interface	321
	MAC Address Validation on Static Demux Interfaces	321
	Loose	322
	Strict	322
	Configuring an IP Demultiplexing Interface	322
	Configuring an IP Demux Underlying Interface	323
	Configuring the IP Demux Interface	324
	Configuring MAC Address Validation on Static IP Demux Interfaces	326
	Configuring a VLAN Demultiplexing Interface	327
	Configuring a VLAN Demux Underlying Interface	327
	Configuring the VLAN Demux Interface	329
	Configuring MAC Address Validation on Static VLAN Demux Interfaces . . .	331
	Verifying a Demux Interface Configuration	332
Chapter 8	Configuring the Loopback Interface	335
	Understanding the Loopback Interface	335
	Configuring the Loopback Interface	336
	Configuring the Loopback Interface	336
	Example: Configuring Two Addresses on the Loopback Interface with Host Routes	337
	Example: Configuring Two Addresses on the Loopback Interface with Subnetwork Routes	337
	Example: Configuring an IPv4 and an IPv6 Address on the Loopback Interface with Subnetwork Routes	338

Part 3	Serial Interfaces	
Chapter 9	Serial Interfaces Overview	343
	Serial Interfaces Overview	343
Chapter 10	Configuring Serial Interfaces	345
	Example: Physical Interface Configuration Statements for Serial Interfaces	345
	Configuring the Serial Line Protocol	346
	Configuring the Serial Line Protocol	346
	Serial Interface Default Settings	346
	Serial Interface Default Settings	347
	Invalid Serial Interface Statements	348
	Configuring the Serial Clocking Mode	350
	Configuring the Serial Clocking Mode	350
	Inverting the Serial Interface Transmit Clock	351
	Configuring the DTE Clock Rate	351
	Configuring the Serial Signal Handling	352
	Configuring the Serial DTR Circuit	355
	Configuring Serial Signal Polarities	355
	Configuring Serial Loopback Capability	356
	Configuring Serial Line Encoding	358
	Specifying a USB Modem Interface on J Series Routers	359
Part 4	Monitoring and Troubleshooting Interfaces	
Chapter 11	Monitoring Interfaces	363
	Tracing Interface Operations Overview	363
	Tracing Operations of an Individual Router Interface	363
	Tracing Operations of the Interface Process	364
	Monitoring a PPP Session	366
	Tracing Operations of the pppd Process	366
Chapter 12	Troubleshooting Interfaces	369
	Configuring Interface Diagnostics Tools to Test the Physical Layer	
	Connections	369
	Configuring Loopback Testing	369
	Configuring BERT Testing	371
	Starting and Stopping a BERT Test	375
	Troubleshooting: em0 Management Interface Link is Down	376
	Troubleshooting: fxp0 Management Interface Link is Down	377
	Troubleshooting: Faulty Ethernet Physical Interface on an M Series, an MX Series, or a T Series Router	379
	Checking the Cable Connection	380
	Checking the Physical Link Status of the Interface	381
	Checking the Interface Statistics in Detail	382
	Performing the Loopback Diagnostic Test	384
	Checking Other Possibilities	386
	To Enable a Physical Interface	387
	Time Domain Reflectometry on ACX Series Routers Overview	387
	Diagnosing a Faulty Twisted-Pair Cable on ACX Series Routers	390

Part 5	Configuration Statements and Operational Commands	
Chapter 13	Configuration Statements	397
	802.3ad	416
	accept	417
	accept-source-mac	419
	access-concentrator	421
	access-profile	422
	accounting	423
	accounting-profile	424
	acfc	425
	acknowledge-retries	426
	acknowledge-timer	427
	action (OAM)	428
	action (Policer)	428
	action-profile (Applying to CFM)	429
	action-profile (Defining for CFM)	430
	action-profile	431
	action-red-differential-delay	432
	activation-delay	433
	activation-priority	434
	address	435
	advertise-interval	437
	age	438
	agent-specifier	439
	aggregate (Gigabit Ethernet CoS Policer)	440
	aggregate (Hierarchical Policer)	441
	aggregate (SONET/SDH)	442
	aggregate-ports	442
	aggregated-ether-options	443
	aggregated-sonet-options	444
	alarm (optics-options)	445
	alias (Interfaces)	446
	allow-any-vci	447
	allow-fragmentation	448
	allow-remote-loopback	449
	annex	449
	apply-action-profile	450
	aps	451
	arp (Interfaces)	452
	asynchronous-notification	454
	atm-encapsulation	455
	atm-options	456
	atm-scheduler-map	457
	authentication	458
	authentication-key	459
	authentication-profile-name	459
	authenticator	460
	auto-configure	461

auto-discovery	462
auto-negotiation	463
backup-destination	465
backup-interface	465
backup-options	466
bandwidth (Interfaces)	467
bandwidth-limit (Hierarchical Policer)	468
bandwidth-limit (Policer for Gigabit Ethernet Interfaces)	469
bearer-bandwidth-limit	470
bert-algorithm	471
bert-error-rate	473
bert-period	475
bridge-domain	476
broadcast	477
buildout (E3 or T3 over ATM Interfaces)	478
buildout (T1 Interfaces)	479
bundle	480
burst-size-limit (Hierarchical Policer)	481
burst-size-limit (Policer for Gigabit Ethernet Interfaces)	482
byte-encoding	483
bytes	484
calculation-weight	485
callback	486
callback-wait-period	487
caller	488
calling-number	489
cbit-parity	490
cbr	491
cell-bundle-size	492
chap	493
chap-secret	494
circuit-type	495
cisco-interoperability	495
classifier	496
clear-dont-fragment-bit	497
clock-rate	498
clocking	499
clocking-mode	500
community (Policy Options)	501
compatibility-mode	504
compression (PPP Properties)	505
compression (Voice Services)	506
compression-device	507
connections	507
connection-protection-tlv	508
connectivity-fault-management	509
container-devices	511
container-list	512
container-options	513

container-type	514
continuity-check	515
control-channel	516
control-polarity	517
control-signal	518
copy-tos-to-outer-ip-header	519
core-dump	519
crc-major-alarm-threshold	520
crc-minor-alarm-threshold	521
cts	522
cts-polarity	523
cycle-time	524
damping (Interfaces)	525
data-channel	527
data-tlv-size	528
dcd	529
dcd-polarity	530
dce	530
deactivation-delay	531
dce-options	532
default-actions	533
default-chap-secret	534
default-pap-password	535
delimiter	535
demux-destination (Underlying Interface)	536
demux-destination (Demux Interface)	537
demux-options (Static Interface)	538
demux-source (Demux Interface)	539
demux-source (Underlying Interface)	540
demux0 (Static Interface)	541
demux0 (Dynamic Interface)	542
description (Interfaces)	544
destination (IPCP)	545
destination (Routing Instance)	546
destination (Tunnels)	547
destination-class-usage	548
destination-profile	549
dial-options	550
dial-string	551
dialer	551
dialer-options	552
dialin	553
direction	554
disable (Interface)	555
disable (Link Protection)	556
disable-mlppp-inner-ppp-pfc	557
dlci	558
do-not-fragment	559
domain-name	560

dot1x	561
down-count	562
drop (PPPoE Service Name Tables)	563
drop-timeout	564
ds0-options	565
dsl-options	566
dsr	567
dsr-polarity	568
dte-options	569
dtr	570
dtr-circuit	571
dtr-polarity	571
dump-on-flow-control	572
dynamic-call-admission-control	573
dynamic-profile (PPP)	574
dynamic-profile (PPPoE Service Name Tables)	575
dynamic-profile (Stacked VLAN)	576
dynamic-profile (VLAN)	577
dynamic-profiles	578
e1-options	587
e3-options	588
east-interface	589
egress-policer-overhead	590
encapsulation (Container Interface)	591
encapsulation (Logical Interface)	592
encapsulation	596
encoding	603
epd-threshold (Logical Interface)	604
epd-threshold (Physical Interface)	605
es-options	606
ethernet (Protocols OAM)	607
ethernet-policer-profile	613
ethernet-ring	615
ethernet-switch-profile	616
eui-64	618
evcs	619
event (LFM)	620
event-thresholds	621
fast-aps-switch	622
f-max-period	623
facility-override	623
failover-delay	624
family (Dynamic Standard Interface)	625
family	627
fastether-options	632
fcs	633
feac-loop-respond	634
fec (gigether)	635
filter	636

filter (Applying to an Interface)	637
flexible-vlan-tagging	638
flow-control	639
flow-control-options	640
force	641
forward-and-send-to-re	642
forwarding-class (ATM2 IQ Scheduler Maps)	643
forwarding-class (Gigabit Ethernet IQ Classifier)	644
forward-only	645
fragment-threshold	646
frame-error	647
frame-period	648
frame-period-summary	649
framing (E1, E3, and T1 Interfaces)	650
framing (10-Gigabit Ethernet Interfaces)	651
framing (SONET and SDH Interfaces)	652
gether-options	653
gratuitous-arp-reply	654
guard-interval	655
hardware-assisted-timestamping	656
high-plp-threshold	657
hello-timer	658
hierarchical-policer	659
hierarchical-scheduler (Subscriber Interfaces on MX Series Routers)	660
high-plp-max-threshold	661
high-plp-threshold	662
hold-interval (OAM)	663
hold-interval (Protection Group)	664
hold-time (APS)	665
hold-time (Physical Interface)	666
hold-time (SONET/SDH Defect Triggers)	668
host (Interfaces)	669
host-prefix-only	670
iccp	671
idle-cycle-flag	673
idle-timeout	674
ieee802.1p	675
if-exceeding (Hierarchical Policer)	676
if-exceeding-pps (Hierarchical Policer)	677
igmp-snooping	678
ignore	681
ignore-all	682
ignore-l3-incompletes	682
ilmi	683
ima-group-options	684
ima-link-options	686
inactivity-timeout	686
incoming-map	687
indication	688

indication-polarity	689
ingress-policer-overhead	690
ingress-rate-limit	692
init-command-string	693
initial-route-check	694
inner-tag-protocol-id	695
inner-vlan-id	696
inner-vlan-id-range	697
input	698
input-list	699
input-policer	700
input-priority-map	701
input-three-color	702
input-vlan-map (Aggregated Ethernet)	703
input-vlan-map	704
instance	705
interface (Hierarchical CoS Schedulers)	705
interface (IEEE 802.1x)	706
interface (IEEE 802.1ag OAM Connectivity-Fault Management)	708
interface (OAM Link-Fault Management)	709
interface (Port Mirroring)	710
interface-down	711
interface-name	711
interface-none	712
interface-range	713
interface-transmit-statistics	714
interface-set (Ethernet Interfaces)	715
interface-set (IP Demux Interfaces)	716
interface-shared-with	717
interface-status-tlv	718
interface-switch	719
interface-type (Interfaces)	720
interfaces	722
interfaces (Static and Dynamic Subscribers)	723
interleave-fragments	728
interval	729
inverse-arp	730
invert-data	731
ipsec-sa	732
isdn-options	733
iteration-count	734
iteration-period	735
keep-address-and-control	736
keepalives	737
key	738
l2tp-interface-id	739
lACP (Protocols)	740
lACP (802.3ad)	741
lACP (Aggregated Ethernet)	742

layer2-policer	745
lcp-max-conf-req	746
lcp-restart-timer	747
level	748
line-encoding	749
line-protocol	750
line-rate	751
linear-red-profile	752
linear-red-profiles	753
link-adjacency-loss	754
link-discovery	754
link-down	755
link-event-rate	755
link-fault-management	756
link-layer-overhead	757
link-mode	758
link-protection	760
link-speed (Aggregated Ethernet)	761
link-speed (Aggregated SONET/SDH)	763
linktrace	764
lmi (Frame Relay)	765
lmi (Ethernet OAM)	767
lmi-type	768
load-interval	769
load-threshold	770
local-name	771
local-password	772
lockout	772
log-prefix (Interfaces)	773
logical-interface-fpc-redundancy (Aggregated Ethernet Subscriber Interfaces)	773
logical-interface-policer	774
logical-systems	776
long-buildout	777
loop-timing	778
loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3)	779
loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)	781
loopback (Serial)	782
loopback-clear-timer	783
loss-priority	784
loss-threshold	785
low-plp-max-threshold	786
low-plp-threshold	787
lowest-priority-defect	788
lsq-failure-options	789
mac	790
mac-address (Accept Source Mac)	791
mac-address (VLAN and Stacked VLAN Interfaces)	792
mac-learn-enable	793

mac-validate	794
maintenance-association	795
maintenance-domain	796
master-only	797
maximum-contexts	798
maximum-requests	799
maximum-vcs	800
mc-ae	801
member-interface-speed	804
member-interface-type	805
mep	806
minimum-links	807
mip-half-function	808
mlfr-uni-nni-bundle-options	809
mode (Dynamic Profiles)	810
mode (Interfaces)	811
modem-options	812
monitor-session	813
mpls (Interfaces)	814
mrru	815
mtu	816
multi-chassis-protection	820
multicast-dlci	821
multicast-only	822
multicast-statistics	823
multicast-vci	824
multilink-max-classes	825
multipoint	825
multipoint-destination	826
multiservice-options	827
n391	828
n392	829
n393	830
name-format	831
native-vlan-id	832
ncp-max-conf-req	834
ncp-restart-timer	835
nd6-stale-time	836
negotiate-address	837
negotiation-options	838
neighbor (Automatic Protection Switching for SONET/SDH)	839
no-allow-link-events	839
no-aggregate-delegate-processing	840
asynchronous-notification	841
no-auto-mdix	842
auto-negotiation	843
cbit-parity	845
core-dump	846
feac-loop-respond	847

flow-control	848
gratuitous-arp-reply	849
no-gratuitous-arp-request	850
no-keepalives	851
long-buildout	852
loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)	853
mac-learn-enable	854
no-partition	855
payload-scrambler	857
no-pre-classifier	858
no-redirects	859
source-filtering	860
syslog (Monitoring)	861
no-termination-request	862
translate-discard-eligible	863
translate-fecn-and-becn	863
unframed	864
z0-increment	864
node-id	865
non-revertive (Interfaces)	865
oam	866
oam-liveness	869
oam-period	870
oc-slice	871
open-timeout	872
operating-mode	873
optics-options	874
option-82	875
otn-options	876
output	878
output-list	879
output-policer	880
output-priority-map	881
output-three-color	882
output-vlan-map (Aggregated Ethernet)	883
output-vlan-map	884
overflow (Receive Bucket)	885
overflow (Transmit Bucket)	885
override	886
pado-advertise	887
paired-group	888
pap	889
pap-password	890
partition	891
passive (CHAP)	892
passive (PAP)	893
passive-monitor-mode	894
password (Interfaces)	895
path-database-size	895

path-trace	896
payload-scrambler	897
payload-size	898
pdu-interval	899
pdu-threshold	900
peer	901
peer-unit	902
per-unit-scheduler	903
performance-monitoring	905
periodic	906
pfc	907
pic-type	907
plp-to-clp	908
plp1	909
point-to-point	910
policer (CFM Firewall)	911
policer (CFM Global)	912
policer (CFM Session)	913
policer (CoS)	914
policer (Interface)	915
policer (MAC)	916
policy-statement	917
pool	921
pop	922
pop-all-labels	923
pop-pop	924
pop-swap	925
port	926
port-priority	927
port-status-tlv	928
post-service-filter	929
ppp-options	930
pppoe-options	932
pppoe-underlying-options (Static and Dynamic Subscribers)	933
preferred	934
preferred-source-address	935
preferred-source-address	936
premium (Hierarchical Policer)	938
premium (Output Priority Map)	939
premium (Policer)	940
preserve-interface	941
primary (Address on Interface)	942
primary (Interface for Router)	943
primary (AS PIC or Multiservices PIC Interfaces)	944
priority (OAM Connectivity-Fault Management)	945
priority (Schedulers)	946
promiscuous-mode	947
protect-circuit	948
protection-group	949

protocol-down	951
protocols	952
proxy	953
proxy-arp	954
push	955
push-push	956
queue-depth	957
queue-length	958
queues	959
quiet-period	960
radius-realm	961
ranges (Dynamic Stacked VLAN)	962
ranges (Dynamic VLAN)	963
rate	964
rate	964
rdi	965
reassemble-packets	965
reauthentication	966
receive-bucket	967
receive-options-packets	968
receive-ttl-exceeded	968
red-differential-delay	969
redial-delay	970
redundancy-options	971
remote	972
remote-loopback	973
remote-loopback-respond	974
remote-mep	975
remove-when-no-subscribers	976
request	976
required-depth	977
restore-interval	978
retries	979
revert-time (Interfaces)	980
revertive	981
rfc-2615	982
ring-protection-link-end	982
ring-protection-link-owner	983
routing-instance	984
routing-instance (PPPoE Service Name Tables)	985
rpf-check (Dynamic Profiles)	986
rpf-check	987
rpf-loose-mode-discard	988
rtp	989
rts	990
rts-polarity	991
rtvbr	992
sa-multicast (100-Gigabit Ethernet)	994
sampling (Interfaces)	995

satop-options	996
shared-interface	997
scheduler-maps (For ATM2 IQ Interfaces)	998
schedulers	999
secondary	999
send-critical-event	1000
serial-options	1001
server	1002
server-timeout	1003
service (Logical Interfaces)	1004
service (PPPoE)	1005
service-domain	1006
service-filter (Interfaces)	1007
service-name-table	1008
service-name-tables	1009
service-set	1010
services (Priority Level)	1011
services-options	1012
shaping	1013
shdsl-options	1014
short-name-format	1015
short-sequence	1016
sla-iterator-profile	1017
sla-iterator-profiles	1018
snr-margin	1019
snext	1020
sonet-options	1021
source	1023
source-address-filter	1024
source-class-usage	1025
source-filtering	1026
speed (Ethernet)	1027
speed (MX Series DPC)	1032
speed (SONET/SDH)	1033
spid1	1034
spid2	1034
stacked-vlan-ranges	1035
stacked-vlan-tagging	1036
start-end-flag	1037
static-interface	1038
static-tei-val	1039
supplicant	1040
supplicant-timeout	1041
swap	1042
swap-push	1043
swap-swap	1044
switch-options	1045
switch-port	1046
switch-type	1047

switching-mode	1048
symbol-period	1049
syslog (Interfaces)	1050
syslog (Monitoring)	1051
syslog (OAM Action)	1052
system-priority	1053
t1-options	1054
t310	1055
t391	1056
t392	1057
t3-options	1058
tag-protocol-id (TPIDs Expected to Be Sent or Received)	1059
tag-protocol-id (TPID to Rewrite)	1060
targeted-broadcast	1061
targeted-distribution (Static Interfaces over Aggregated Ethernet)	1062
tei-option	1063
terminate (PPPoE Service Name Tables)	1064
then	1065
threshold	1066
timeslots	1067
tm	1068
tm-polarity	1069
traceoptions (Individual Interfaces)	1070
traceoptions (Individual Interfaces)	1077
traceoptions (LACP)	1084
traceoptions (PPP Process)	1086
traceoptions (PPPoE)	1089
translate-discard-eligible	1091
translate-fecn-and-becn	1092
translate-plp-control-word-de	1092
transmit-bucket	1093
transmit-clock	1094
transmit-period	1095
transmit-weight (ATM2 IQ CoS Forwarding Class)	1096
transmit-weight (ATM2 IQ Virtual Circuit)	1097
traps	1098
trigger	1099
trigger-link-failure	1100
trunk-bandwidth	1101
trunk-id	1102
ttl	1103
tunnel	1104
underlying-interface	1105
unframed	1106
unidirectional	1107
unit (Dynamic Profiles Standard Interface)	1108
unit	1112
unnumbered-address (Demux)	1119
unnumbered-address (Dynamic Profiles)	1120

unnumbered-address (Ethernet)	1122
unnumbered-address (PPP)	1123
up-count	1124
user-prefix	1125
username-include (Interfaces)	1126
vbr	1128
vc-cos-mode	1129
vci	1130
vci-range	1131
virtual-switch	1131
vlan-id (Logical Port in Bridge Domain)	1132
vlan-id (Outer VLAN ID)	1133
vlan-id (VLAN ID to Be Bound to a Logical Interface)	1134
native-vlan-id	1135
vlan-id-list (Ethernet VLAN Circuit)	1138
vlan-id-list (Interface in Bridge Domain)	1140
vlan-id-range	1141
vlan-ranges	1142
vlan-rewrite	1143
vlan-rule (100-Gigabit Ethernet Type 4 PIC with CFP)	1144
vlan-steering (100-Gigabit Ethernet Type 4 PIC with CFP)	1145
vlan-tagging	1146
vlan-tags (Dual-Tagged Logical Interface)	1148
vlan-tags (Stacked VLAN Tags)	1150
vlan-tags-outer	1151
vlan-vci-tagging	1152
vpi (ATM CCC Cell-Relay Promiscuous Mode)	1152
vpi (Define Virtual Path)	1153
vpi (Logical Interface and Interworking)	1154
vtmapping	1155
warning	1156
watch-list	1157
wavelength	1158
west-interface	1162
working-circuit	1163
yellow-differential-delay	1164
z0-increment	1165
Chapter 14	
Interface Operational Commands	1167
Common Output Fields Description	1168
Damping Field	1168
Destination Class Field	1168
Enabled Field	1169
Filters Field	1169
Flags Fields	1169
Addresses, Flags Field	1170
Device Flags Field	1170
Family Flags Field	1171
Interface Flags Field	1172

Link Flags Field	1172
Logical Interface Flags Field	1173
Label-Switched Interface Traffic Statistics Field	1173
Policer Field	1174
Protocol Field	1174
RPF Failures Field	1175
Source Class Field	1175
Improvements to Interface Transmit Statistics Reporting	1176
show interfaces	1177
show interfaces (ATM)	1258
show interfaces (Channelized DS3-to-DS0)	1294
show interfaces (Channelized DS3-to-DS1)	1305
show interfaces (Channelized E1 IQ)	1308
show interfaces (Channelized E1)	1312
show interfaces (Channelized OC12 IQ and IQE)	1323
show interfaces (Channelized OC12)	1327
show interfaces (Channelized OC3 IQ and IQE)	1331
show interfaces (Channelized STM1 IQ)	1350
show interfaces (Channelized STM1)	1354
show interfaces (Channelized T1 IQ)	1369
show interfaces (Channelized T3 IQ)	1382
show interfaces (Discard)	1384
show interfaces (Fast Ethernet)	1390
show interfaces	1407
show interfaces (M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet)	1488
show interfaces (PPPoE)	1505
show interfaces (PTX Series Packet Transport Routers)	1515
show interfaces (SONET/SDH)	1530
show interfaces (Serial)	1558
show interfaces (T1, E1, or DS)	1571
show interfaces (T3 or E3)	1596
show interfaces demux0 (Demux Interfaces)	1614
show interfaces extensive	1624
show interfaces lsi (Label-Switched Interface)	1669
show interfaces media	1672
show interfaces terse	1675
Chapter 15	
ANCP Operational Commands	1679
clear ancp neighbor	1680
clear ancp statistics	1682
clear ancp subscriber	1685
request ancp oam interface	1687
request ancp oam neighbor	1689
show ancp cos	1691
show ancp neighbor	1696
show ancp statistics	1704
show ancp subscriber	1709
show ancp summary	1716

	show ancp summary neighbor	1718
	show ancp summary subscriber	1720
Chapter 16	BFD Operational Commands	1723
	clear bfd adaptation	1724
	clear bfd session	1725
	show bfd session	1727
Chapter 17	BGP Operational Commands	1739
	clear bgp damping	1740
	clear bgp neighbor	1741
	clear bgp table	1744
	show bgp bmp	1746
	show bgp group	1748
	show bgp group traffic-statistics	1756
	show bgp neighbor	1759
	show bgp replication	1779
	show bgp summary	1782
	show policy damping	1788
Chapter 18	ES-IS Operational Commands	1791
	clear esis adjacency	1792
	clear esis statistics	1793
	show esis adjacency	1794
	show esis interface	1797
	show esis statistics	1799
Chapter 19	IP Multicast Operational Commands	1801
	clear amt statistics	1804
	clear amt tunnel	1805
	clear igmp membership	1807
	clear igmp snooping membership	1810
	clear igmp snooping statistics	1812
	clear igmp statistics	1813
	clear mld membership	1815
	clear mld statistics	1816
	clear msdp cache	1817
	clear msdp statistics	1818
	clear multicast bandwidth-admission	1819
	clear multicast forwarding-cache	1821
	clear multicast scope	1822
	clear multicast sessions	1824
	clear multicast snooping statistics	1825
	clear multicast statistics	1826
	clear pim join	1828
	clear pim join-distribution	1830
	clear pim register	1832
	clear pim snooping join	1834
	clear pim snooping statistics	1836
	clear pim statistics	1838

request pim multicast-tunnel rebalance	1841
show amt statistics	1842
show amt summary	1845
show amt tunnel	1847
show dvmrp interfaces	1851
show dvmrp neighbors	1854
show dvmrp prefix	1856
show dvmrp prunes	1859
show igmp group	1861
show igmp interface	1865
show igmp snooping interface	1869
show igmp snooping membership	1875
show igmp snooping statistics	1881
show igmp statistics	1886
show mld group	1889
show mld interface	1893
show mld statistics	1897
show msdp	1900
show msdp source	1903
show msdp source-active	1905
show msdp statistics	1908
show multicast backup-pe-groups	1912
show multicast flow-map	1914
show multicast forwarding-cache statistics	1916
show multicast interface	1918
show multicast mrinfo	1921
show multicast next-hops	1923
show multicast pim-to-igmp-proxy	1927
show multicast pim-to-mld-proxy	1929
show multicast route	1931
show multicast rpf	1943
show multicast scope	1947
show multicast snooping next-hops	1949
show multicast sessions	1953
show multicast snooping route	1957
show multicast statistics	1961
show multicast usage	1966
show pim bootstrap	1969
show pim interfaces	1971
show pim join	1974
show pim mdt	1990
show pim mdt data-mdt-joins	1994
show pim mdt data-mdt-limit	1996
show pim neighbors	1998
show pim rps	2003
show pim snooping interfaces	2011
show pim snooping join	2014
show pim snooping neighbors	2018
show pim snooping statistics	2023

	show pim source	2028
	show pim statistics	2031
	show sap listen	2044
	test msdp	2046
Chapter 20	IPv6 Operational Commands	2047
	clear ipv6 neighbors	2048
	clear ipv6 router-advertisement	2050
	show ipv6 neighbors	2051
	show ipv6 router-advertisement	2054
Chapter 21	IS-IS Operational Commands	2057
	clear isis adjacency	2058
	clear isis database	2060
	clear isis overload	2062
	clear isis statistics	2064
	show isis adjacency	2066
	show isis authentication	2071
	show isis backup coverage	2073
	show isis backup label-switched-path	2075
	show isis backup spf results	2077
	show isis context-identifier	2081
	show isis database	2083
	show isis hostname	2098
	show isis interface	2100
	show isis overview	2105
	show isis route	2110
	show isis spf	2115
	show isis statistics	2120
Chapter 22	LLDP Operational Commands	2123
	clear lldp neighbors	2124
	clear lldp statistics	2125
	show lldp	2126
	show lldp local-information	2129
	show lldp neighbors	2132
	show lldp remote-global-statistics	2138
	show lldp statistics	2140
Chapter 23	MVRP Operational Commands	2143
	show mvrp	2144
	show mvrp applicant-state	2147
	show mvrp dynamic-vlan-memberships	2150
	show mvrp interface	2152
	show mvrp registration-state	2154
	show mvrp statistics	2156
Chapter 24	OSPF Operational Commands	2161
	clear (ospf ospf3) database	2162
	clear (ospf ospf3) io-statistics	2165
	clear (ospf ospf3) neighbor	2166

	clear (ospf ospf3) overload	2168
	clear (ospf ospf3) statistics	2169
	show (ospf ospf3) backup coverage	2172
	show (ospf ospf3) backup lsp	2175
	show (ospf ospf3) backup neighbor	2177
	show (ospf ospf3) backup spf	2179
	show ospf context-identifier	2186
	show ospf database	2188
	show ospf3 database	2199
	show (ospf ospf3) interface	2210
	show (ospf ospf3) io-statistics	2216
	show (ospf ospf3) log	2218
	show (ospf ospf3) neighbor	2221
	show (ospf ospf3) overview	2228
	show (ospf ospf3) route	2233
	show (ospf ospf3) statistics	2240
Chapter 25	Protocol-Independent Routing Operational Commands	2245
	show as-path	2247
	show as-path domain	2252
	show as-path summary	2255
	show route	2257
	show route active-path	2279
	show route advertising-protocol	2284
	show route all	2290
	show route aspath-regex	2292
	show route best	2294
	show route brief	2297
	show route ccc	2299
	show route community	2301
	show route community-name	2303
	show route damping	2305
	show route detail	2310
	show route exact	2330
	show route export	2332
	show route export vrf-target	2335
	show route extensive	2337
	show route flow validation	2356
	show route forwarding-table	2359
	show route forwarding-table interface-name	2377
	show route hidden	2380
	show route inactive-path	2383
	show route inactive-prefix	2387
	show route instance	2389
	show route label	2397
	show route label-switched-path	2402
	show route localization	2404
	show route martians	2406
	show route match-prefix	2409

	show route next-hop	2410
	show route no-community	2416
	show route output	2419
	show route protocol	2424
	show route range	2438
	show route receive-protocol	2443
	show route resolution	2453
	show route snooping	2458
	show route source-gateway	2461
	show route summary	2467
	show route table	2471
	show route terse	2514
Chapter 26	RIP Operational Commands	2517
	clear rip general-statistics	2518
	clear rip statistics	2519
	show rip general-statistics	2521
	show rip neighbor	2523
	show rip statistics	2526
Chapter 27	RIPng Operational Commands	2529
	clear ripng general-statistics	2530
	clear ripng statistics	2531
	show ripng general-statistics	2532
	show ripng neighbor	2534
	show ripng statistics	2536
Chapter 28	Firewall Filter Operational Commands	2539
	clear firewall	2540
	show firewall	2542
	show firewall filter version	2550
	show firewall log	2551
	show firewall prefix-action-stats	2554
	show firewall templates-in-use	2556
	show policer	2558
Chapter 29	Layer 2 Bridging and Switching Operational Commands	2561
	clear bridge mac-table	2562
	clear error bpdu interface	2563
	clear error mac-rewrite	2564
	show bridge domain	2565
	show bridge flood	2567
	show bridge mac-table	2574
	show bridge statistics	2580
	show l2-learning global-information	2583
	show l2-learning global-mac-count	2585
	show l2-learning instance	2586
	show l2-learning interface	2588
	show mac-rewrite interface	2590

Chapter 30	VPN Operational Commands	2593
	clear vpls mac-address	2594
	clear vpls mac-table	2595
	request l2circuit-switchover	2596
	show dynamic-tunnels database	2597
	show hfr profiles	2601
	show ingress-replication mvpn	2603
	show l2circuit connections	2605
	show l2vpn connections	2613
	show mvpn c-multicast	2620
	show mvpn instance	2623
	show mvpn neighbor	2627
	show vpls connections	2632
	show vpls flood event-queue	2643
	show vpls flood instance	2645
	show vpls flood route	2647
	show vpls mac-table	2649
	show vpls statistics	2655

List of Figures

Part 1	Router Interfaces	
Chapter 1	Router Interfaces Overview	3
	Figure 1: APS Interface	8
	Figure 2: Container Interface	9
	Figure 3: Routing Matrix	41
	Figure 4: Routing Matrix Based on a TX Matrix Plus Router	43
	Figure 5: Interface Slot, PIC, and Port Locations	46
Chapter 2	Configuring Physical Interface Properties	63
	Figure 6: Two Router Interfaces Connected Through Transport Equipment	160
	Figure 7: Multiple Flaps of Short Duration (Milliseconds)	161
	Figure 8: Periodic Flaps of Long Duration (Seconds)	162
	Figure 9: Physical-Level Link Is Down When the Penalty Falls Below the Reuse Level	164
	Figure 10: Physical-Level Link Is Up When the Penalty Falls Below the Reuse Level	165
Chapter 4	Configuring Protocol Family and Interface Address Properties	205
	Figure 11: Hierarchical Policer	232
	Figure 12: Unicast RPF with Routing Asymmetry	247
	Figure 13: Unicast RPF Sample Topoolgy	258
	Figure 14: Prefix Accounting with Source and Destination Classes	267
	Figure 15: Prefix Accounting with Source and Destination Classes	269
Chapter 5	Configuring Circuit and Translational Cross-Connects	279
	Figure 16: Layer 2 Switching Circuit Cross-Connect	280
	Figure 17: Example Topology of a Switching Circuit Cross-Connect with Frame Relay CCC Encapsulation	292
	Figure 18: Layer 2.5 Switching Translational Cross-Connect	293
	Figure 19: Interface-to-Interface Circuit Cross-Connect over Aggregated Ethernet Interfaces	295
	Figure 20: Remote Interface-LSP-Interface Circuit Cross-Connect over Aggregated Ethernet Interfaces	296
	Figure 21: ATM-to-Ethernet Interworking	298
Part 3	Serial Interfaces	
Chapter 10	Configuring Serial Interfaces	345
	Figure 22: Serial Interface Clocking Mode	350
	Figure 23: Serial Interface LIU Loopback	356
	Figure 24: Serial Interface Local Loopback	357

List of Tables

	About the Documentation	xlili
	Table 1: Notice Icons	xlvi
	Table 2: Text and Syntax Conventions	xlvi
Part 1	Router Interfaces	
Chapter 1	Router Interfaces Overview	3
	Table 3: M7i Routing Engines	18
	Table 4: M10i Routing Engines	19
	Table 5: M40e Routing Engines	19
	Table 6: M120 Routing Engines	19
	Table 7: M320 Routing Engines	20
	Table 8: MX5, MX10, MX40, and MX80 Routing Engine	21
	Table 9: MX104 Routing Engines	21
	Table 10: MX240 Supported Routing Engines	21
	Table 11: MX480 Supported Routing Engines	22
	Table 12: MX960 Supported Routing Engines	23
	Table 13: MX2008 Supported Routing Engines	24
	Table 14: MX2010 Supported Routing Engines	25
	Table 15: MX2020 Supported Routing Engines	26
	Table 16: MX10003 Supported Routing Engines	26
	Table 17: MX10008 Routing Engines	27
	Table 18: PTX1000 Routing Engines	27
	Table 19: PTX3000 Routing Engines	27
	Table 20: PTX5000 Routing Engines	28
	Table 21: PTX10008 and PTX10016 Routing Engines	28
	Table 22: T320 Routing Engines	29
	Table 23: T640 Routing Engines	29
	Table 24: T1600 Routing Engines	30
	Table 25: T4000 Routing Engines	31
	Table 26: TX Matrix Routing Engines	32
	Table 27: TX Matrix Plus Routing Engines	32
	Table 28: Routing Engines on TX Matrix Plus with 3D SIBs	33
	Table 29: FPC Numbering for T640 Routers in a Routing Matrix	42
	Table 30: One-to-One FPC Numbering for T640 Routers in a Routing Matrix	42
	Table 31: FPC Numbering for T1600 Routers in a Routing Matrix	44
	Table 32: One-to-One FPC Numbering for T1600 Routers in a Routing Matrix	44
	Table 33: Encapsulation Support by Interface Type	48
Chapter 2	Configuring Physical Interface Properties	63
	Table 34: Statements for Physical Interface Properties	74

	Table 35: Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers	102
	Table 36: Media MTU Sizes by Interface Type for M40e Routers	103
	Table 37: Media MTU Sizes by Interface Type for M160 Routers	104
	Table 38: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers	105
	Table 39: Media MTU Sizes by Interface Type for MX Series Routers	106
	Table 40: Media MTU Sizes by Interface Type for T320 Routers	107
	Table 41: Media MTU Sizes by Interface Type for T640 Platforms	108
	Table 42: Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers	108
	Table 43: Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers	109
	Table 44: Encapsulation Overhead by Encapsulation Type	111
	Table 45: Media MTU Sizes by Interface Type for ACX Series Routers	112
	Table 46: Encapsulation Overhead by Encapsulation Type	113
	Table 47: Effect of set interfaces disable <interface_name> on T series PICs	177
Chapter 3	Configuring Logical Interface Properties	179
	Table 48: Statements for Logical Interface Properties	183
Chapter 4	Configuring Protocol Family and Interface Address Properties	205
	Table 49: Protocol Family Configuration Tasks	208
Part 3	Serial Interfaces	
Chapter 10	Configuring Serial Interfaces	345
	Table 50: Signal Handling by Serial Interface Type	352
Part 4	Monitoring and Troubleshooting Interfaces	
Chapter 12	Troubleshooting Interfaces	369
	Table 51: Loopback Modes by Interface Type	370
	Table 52: BERT Capabilities by Interface Type	374
Part 5	Configuration Statements and Operational Commands	
Chapter 13	Configuration Statements	397
	Table 53: Options for speed	1030
	Table 54: Options for traceoptions	1073
	Table 55: Options for traceoptions	1080
Chapter 14	Interface Operational Commands	1167
	Table 56: show interfaces (Gigabit Ethernet) Output Fields	1182
	Table 57: Gigabit and 10 Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type	1210
	Table 58: show interfaces Output Fields	1211
	Table 59: ATM show interfaces Output Fields	1259
	Table 60: Channelized DS3 show interfaces Output Fields	1294
	Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields	1312

	Table 62: Channelized OC show interfaces Output Fields	1332
	Table 63: Channelized STM1 show interfaces Output Fields	1354
	Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields	1370
	Table 65: Discard show interfaces Output Fields	1384
	Table 66: show interfaces Fast Ethernet Output Fields	1390
	Table 67: show interfaces (Gigabit Ethernet) Output Fields	1412
	Table 68: Gigabit and 10 Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type	1440
	Table 69: show interfaces Output Fields	1441
	Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface	1489
	Table 71: show interfaces (PPPoE) Output Fields	1505
	Table 72: show interfaces PTX Series Output Fields	1516
	Table 73: SONET/SDH show interfaces Output Fields	1531
	Table 74: show interfaces (Serial) Output Fields	1558
	Table 75: T1 or E1 show interfaces Output Fields	1572
	Table 76: T3 or E3 show interfaces Output Fields	1596
	Table 77: show interfaces demux0 (Demux Interfaces) Output Fields	1614
	Table 78: Logical Tunnel show interfaces Output Fields	1669
	Table 79: show interfaces terse Output Fields	1675
Chapter 15	ANCP Operational Commands	1679
	Table 80: show ancp cos Output Fields	1691
	Table 81: show ancp neighbor Output Fields	1696
	Table 82: show ancp statistics Output Fields	1704
	Table 83: show ancp subscriber Output Fields	1710
	Table 84: show ancp summary Output Fields	1716
	Table 85: show ancp summary neighbor Output Fields	1718
	Table 86: show ancp summary subscriber Output Fields	1720
Chapter 16	BFD Operational Commands	1723
	Table 87: show bfd session Output Fields	1729
Chapter 17	BGP Operational Commands	1739
	Table 88: show bgp bmp Output Fields	1746
	Table 89: show bgp group Output Fields	1749
	Table 90: show bgp group traffic-statistics Output Fields	1756
	Table 91: show bgp neighbor Output Fields	1760
	Table 92: show bgp replication Output Fields	1780
	Table 93: show bgp summary Output Fields	1783
	Table 94: show policy damping Output Fields	1789
Chapter 18	ES-IS Operational Commands	1791
	Table 95: show esis adjacency Output Fields	1794
	Table 96: show esis interface Output Fields	1797
	Table 97: show esis statistics Output Fields	1799
Chapter 19	IP Multicast Operational Commands	1801
	Table 98: show amt statistics Output Fields	1842
	Table 99: show amt summary Output Fields	1845
	Table 100: show amt tunnel Output Fields	1848

Table 101: show dvmrp interfaces Output Fields	1851
Table 102: show dvmrp neighbors Output Fields	1854
Table 103: show dvmrp prefix Output Fields	1856
Table 104: show dvmrp prunes Output Fields	1859
Table 105: show igmp group Output Fields	1862
Table 106: show igmp interface Output Fields	1866
Table 107: show igmp snooping interface Output Fields	1870
Table 108: show igmp snooping membership Output Fields	1876
Table 109: show igmp snooping statistics Output Fields	1882
Table 110: show igmp statistics Output Fields	1887
Table 111: show mld group Output Fields	1889
Table 112: show mld interface Output Fields	1893
Table 113: show mld statistics Output Fields	1897
Table 114: show msdp Output Fields	1900
Table 115: show msdp source Output Fields	1904
Table 116: show msdp source-active Output Fields	1906
Table 117: show msdp statistics Output Fields	1908
Table 118: show multicast backup-pe-groups Output Fields	1912
Table 119: show multicast flow-map Output Fields	1914
Table 120: show multicast forwarding-cache statistics Output Fields	1916
Table 121: show multicast interface Output Fields	1918
Table 122: show multicast minfo Output Fields	1921
Table 123: show multicast next-hops Output Fields	1924
Table 124: show multicast pim-to-igmp-proxy Output Fields	1928
Table 125: show multicast pim-to-mld-proxy Output Fields	1929
Table 126: show multicast route Output Fields	1933
Table 127: show multicast rpf Output Fields	1944
Table 128: show multicast scope Output Fields	1948
Table 129: show multicast snooping next-hops Output Fields	1949
Table 130: show multicast sessions Output Fields	1954
Table 131: show multicast snooping route Output Fields	1958
Table 132: show multicast statistics Output Fields	1961
Table 133: show multicast usage Output Fields	1967
Table 134: show pim bootstrap Output Fields	1969
Table 135: show pim interfaces Output Fields	1972
Table 136: show pim join Output Fields	1976
Table 137: show pim mdt Output Fields	1991
Table 138: show pim mdt data-mdt-joins Output Fields	1995
Table 139: show pim mdt data-mdt-limit Output Fields	1996
Table 140: show pim neighbors Output Fields	1999
Table 141: show pim rps Output Fields	2004
Table 142: show pim snooping interface Output Fields	2012
Table 143: show pim snooping join Output Fields	2014
Table 144: show pim snooping neighbors Output Fields	2019
Table 145: show pim snooping statistics Output Fields	2023
Table 146: show pim source Output Fields	2029
Table 147: show pim statistics Output Fields	2032
Table 148: show sap listen Output Fields	2044

Chapter 20

IPv6 Operational Commands 2047

	Table 149: show ipv6 neighbors Output Fields	2052
	Table 150: show ipv6 router-advertisement Output Fields	2055
Chapter 21	IS-IS Operational Commands	2057
	Table 151: show isis adjacency Output Fields	2067
	Table 152: show isis authentication Output Fields	2072
	Table 153: show isis backup coverage Output Fields	2073
	Table 154: show isis backup label-switched-path Output Fields	2075
	Table 155: show isis backup spf results Output Fields	2078
	Table 156: show isis context-identifier Output Fields	2081
	Table 157: show isis database Output Fields	2084
	Table 158: show isis hostname Output Fields	2098
	Table 159: show isis interface Output Fields	2101
	Table 160: show isis overview Output Fields	2105
	Table 161: show isis route Output Fields	2111
	Table 162: show isis spf Output Fields	2116
	Table 163: show isis statistics Output Fields	2121
Chapter 22	LLDP Operational Commands	2123
	Table 164: show lldp Output Fields	2126
	Table 165: show lldp local-information Output Fields	2129
	Table 166: show lldp neighbors Output Fields	2132
	Table 167: show lldp remote-global-statistics Output Fields	2138
	Table 168: show lldp statistics Output Fields	2140
Chapter 23	MVRP Operational Commands	2143
	Table 169: show mvrp Output Fields	2144
	Table 170: show mvrp applicant-state Output Fields	2147
	Table 171: show mvrp dynamic-vlan-memberships Output Fields	2150
	Table 172: show mvrp interface Output Fields	2152
	Table 173: show mvrp registration-state Output Fields	2154
	Table 174: show mvrp statistics Output Fields	2157
	Table 175: show mvrp statistics Output Fields	2158
Chapter 24	OSPF Operational Commands	2161
	Table 176: show (ospf ospf3) backup coverage Output Fields	2173
	Table 177: show (ospf ospf3) backup lsp Output Fields	2175
	Table 178: show (ospf ospf3) backup neighbor Output Fields	2178
	Table 179: show (ospf ospf3) backup spf Output Fields	2180
	Table 180: show ospf context-identifier Output Fields	2187
	Table 181: show ospf database Output Fields	2189
	Table 182: show ospf3 database Output Fields	2201
	Table 183: show (ospf ospf3) interface Output Fields	2211
	Table 184: show (ospf ospf3) io-statistics Output Fields	2216
	Table 185: show (ospf ospf3) log Output Fields	2219
	Table 186: show (ospf ospf3) neighbor Output Fields	2222
	Table 187: show ospf overview Output Fields	2229
	Table 188: show (ospf ospf3) route Output Fields	2234
	Table 189: show (ospf ospf3) statistics Output Fields	2241
Chapter 25	Protocol-Independent Routing Operational Commands	2245

	Table 190: show as-path Output Fields	2248
	Table 191: show as-path domain Output Fields	2252
	Table 192: show as-path summary Output Fields	2255
	Table 193: show route Output Fields	2258
	Table 194: show route advertising-protocol Output Fields	2285
	Table 195: show route damping Output Fields	2306
	Table 196: show route detail Output Fields	2310
	Table 197: Next-hop Types Output Field Values	2316
	Table 198: State Output Field Values	2318
	Table 199: Communities Output Field Values	2320
	Table 200: show route export Output Fields	2333
	Table 201: show route export vrf-target Output Fields	2335
	Table 202: show route extensive Output Fields	2337
	Table 203: show route flow validation Output Fields	2357
	Table 204: show route forwarding-table Output Fields	2362
	Table 205: show route forwarding-table interface-name Output Fields	2377
	Table 206: show route instance Output Fields	2390
	Table 207: show route localization Output Fields	2404
	Table 208: show route martians Output Fields	2406
	Table 209: show route receive-protocol Output Fields	2444
	Table 210: show route resolution Output Fields	2455
	Table 211: show route summary Output Fields	2468
	Table 212: show route table Output Fields	2472
	Table 213: Next-hop Types Output Field Values	2478
	Table 214: State Output Field Values	2480
	Table 215: Communities Output Field Values	2482
	Table 216: show route terse Output Fields	2514
Chapter 26	RIP Operational Commands	2517
	Table 217: show rip general-statistics Output Fields	2521
	Table 218: show rip neighbor Output Fields	2524
	Table 219: show rip statistics Output Fields	2527
Chapter 27	RIPng Operational Commands	2529
	Table 220: show ripng general-statistics Output Fields	2532
	Table 221: show ripng neighbor Output Fields	2534
	Table 222: show ripng statistics Output Fields	2537
Chapter 28	Firewall Filter Operational Commands	2539
	Table 223: show firewall Output Fields	2544
	Table 224: show firewall filter version Output Fields	2550
	Table 225: show firewall log Output Fields	2551
	Table 226: show firewall prefix-action-stats Output Fields	2555
	Table 227: show firewall templates-in-use Output Fields	2556
	Table 228: show policer Output Fields	2558
Chapter 29	Layer 2 Bridging and Switching Operational Commands	2561
	Table 229: show bridge mac-table Output Fields	2575
	Table 230: show l2-learning global-information Output Fields	2583
	Table 231: show l2-learning instance Output Fields	2586

Chapter 30

Table 232: show l2-learning interface	Output Fields	2588
Table 233: show mac-rewrite interface	Output Fields	2590
VPN Operational Commands		2593
Table 234: show dynamic-tunnels database	Output Fields	2597
Table 235: show hfrr profiles	Output Fields	2601
Table 236: show ingress-replication mvpn	Output Fields	2603
Table 237: show l2circuit connections	Output Fields	2606
Table 238: show l2vpn connections	Output Fields	2614
Table 239: show mvpn c-multicast	Output Fields	2620
Table 240: show mvpn instance	Output Fields	2623
Table 241: show mvpn neighbor	Output Fields	2627
Table 242: show vpls connections	Output Fields	2633
Table 243: show vpls flood event-queue	Output Fields	2643
Table 244: show vpls flood instance	Output Fields	2645
Table 245: show vpls flood route	Output Fields	2647
Table 246: show vpls mac-table	Output fields	2650
Table 247: show vpls statistics	Output Fields	2655

About the Documentation

- Documentation and Release Notes on page xliii
- Using the Examples in This Manual on page xliii
- Documentation Conventions on page xlv
- Documentation Feedback on page xlvii
- Requesting Technical Support on page xlvii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```


2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

Documentation Conventions

Table 1 on page xlv defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xlv defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	


Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

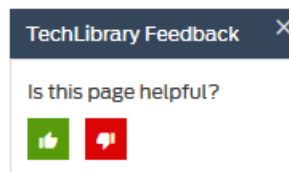

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.

- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <https://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <https://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://www.juniper.net/support/requesting-support.html>.

PART 1

Router Interfaces

- [Router Interfaces Overview on page 3](#)
- [Configuring Physical Interface Properties on page 63](#)
- [Configuring Logical Interface Properties on page 179](#)
- [Configuring Protocol Family and Interface Address Properties on page 205](#)
- [Configuring Circuit and Translational Cross-Connects on page 279](#)

CHAPTER 1

Router Interfaces Overview

- [Router Interfaces Overview on page 4](#)
- [Types of Interfaces Overview on page 4](#)
- [Understanding Permanent Interfaces on page 5](#)
- [Understanding Transient Interfaces on page 5](#)
- [Understanding Services Interfaces on page 7](#)
- [Understanding Container Interfaces on page 8](#)
- [Understanding Management Ethernet Interfaces on page 10](#)
- [Understanding Interfaces on ACX Series Universal Metro Routers on page 11](#)
- [TX Matrix Plus and T1600 Router \(Routing Matrix\) Management Ethernet Interfaces on page 14](#)
- [Understanding Internal Ethernet Interfaces on page 15](#)
- [T1600 Routers \(Routing Matrix\) Internal Ethernet Interfaces on page 17](#)
- [Supported Routing Engines by Router on page 17](#)
- [Interface Naming Overview on page 33](#)
- [Interface Encapsulations Overview on page 48](#)
- [Interface Descriptors Overview on page 59](#)
- [Physical Part of an Interface Name on page 60](#)
- [Displaying Interface Configurations Overview on page 62](#)

Router Interfaces Overview

Routers typically contain several different types of interfaces suited to various functions. For the interfaces on a router to function, you must configure them. Specify the interface location (that is, the slot where the Flexible PIC Concentrator [FPC], Dense Port Concentrator [DPC], or Modular Port Concentrator [MPC] is installed. You must also specify the location of the Physical Interface Card [PIC] or Modular Interface Card [MIC], and the interface type, for example, SONET/SDH, Asynchronous Transfer Mode [ATM], or Ethernet). Finally, you must specify the encapsulation type and any interface-specific properties that may apply.

You can configure interfaces that are currently present in the router, as well as interfaces that are not currently present but that are expected to be added in the future. Junos OS detects the interface once the hardware has been installed and applies the pre-set configuration to it.

To see which interfaces are currently installed in the router, issue the **show interfaces terse** operational mode command. If an interface is listed in the output, it is physically installed in the router. If an interface is not listed in the output, it is not installed in the router.

For information about which interfaces are supported on your router, see your router's *Interface Module Reference*.

You can configure Junos OS class-of-service (CoS) properties to provide a variety of classes of service for different applications, including multiple forwarding classes for managing packet transmission, congestion management, and CoS-based forwarding. For more information about configuring CoS properties, see the *Class of Service Feature Guide for Routers and EX9200 Switches*.

Related Documentation

- *Interfaces Fundamentals for Routing Devices*

Types of Interfaces Overview

Interfaces can be permanent or transient, and are used for networking or services:

- Permanent interfaces—Interfaces that are always present in the router.
- Transient interfaces—Interfaces that can be inserted into or removed from the router depending on your network configuration needs.
- Networking interfaces—Interfaces, such as Ethernet or SONET/SDH interfaces, that primarily provide traffic connectivity.
- Services interfaces—Interfaces that provide specific capabilities for manipulating traffic before it is delivered to its destination.
- Container interfaces—Interfaces that support automatic protection switching (APS) on physical SONET links using a virtual container infrastructure.

Junos OS internally generates nonconfigurable interfaces which are described in *Interfaces Command Reference* and *Services Interfaces*.

Related Documentation

- [Understanding Permanent Interfaces on page 5](#)
- [Understanding Transient Interfaces on page 5](#)
- [Understanding Services Interfaces on page 7](#) and *Junos OS Services Interfaces Library for Routing Devices*
- [Understanding Container Interfaces on page 8](#)
- See also the following sections regarding specific networking interface technologies used in your routers:
 - *ATM Interfaces Overview*
 - *Channelized Interfaces Overview*
 - *Circuit Emulation Interfaces: Understanding Mobile Backhaul*
 - *E1 Interfaces Overview* and *E3 Interfaces Overview*
 - *Ethernet Interfaces Overview*
 - *Frame Relay Overview*
 - *SONET/SDH Interfaces Overview*
 - *T1 Interfaces Overview* and *T3 Interfaces Overview*

Understanding Permanent Interfaces

Permanent interfaces in the router consist of management Ethernet interfaces and internal Ethernet interfaces, which are described separately in the following topics:

- [Understanding Management Ethernet Interfaces on page 10](#)
- [Understanding Internal Ethernet Interfaces on page 15](#)

Understanding Transient Interfaces

The M Series, MX Series, and T Series routers contain slots for installing Flexible PIC Concentrator [FPC] or Dense Port Concentrator [DPC] (for MX Series routers) or Modular Port Concentrator [MPC] (for MX Series routers). Physical Interface Card [PIC] can be installed in FPCs. Modular Interface Card [MIC] can be inserted into MPCs.

The number of PICs that can be installed varies by router and type of FPC. The PICs provide the actual physical interfaces to the network. The MX Series routers contain slots for installing either DPC boards that provide the physical interfaces to the network or for installing FPCs in which PICs can be installed.

You can insert any DPC or FPC into any slot that supports them in the appropriate router. Typically, you can place any combination of PICs, compatible with your router, in any location on an FPC. (You are limited by the total FPC bandwidth, and by the fact that

some PICs physically require two or four of the PIC locations on the FPC. In some cases, power limitations or microcode limitations may also apply.) To determine DPC and PIC compatibility, see the see your router's *Interface Module Reference*.

You can insert MPC into any slot that supports them in the appropriate router. You can install up to two MICs of different media types in the same MPC as long as the MPC supports those MICs.

These physical interfaces are transient interfaces of the router. They are referred to as transient because you can hot-swap a DPC or FPC or MPC and its PICs or MICs at any time.

You must configure each transient interface based on the slot in which the FPC or DPC or MPC is installed, the location in which the PIC or MIC is installed, and for multiple port PICs or MICs , the port to which you are connecting.

You can configure the interfaces on PICs or MICs that are already installed in the router as well as interfaces on PICs or MICs that you plan to install later. The Junos OS detects which interfaces are actually present, so when the software activates its configuration, it activates only the present interfaces and retains the configuration information for the interfaces that are not present. When the Junos OS detects that an FPC containing PICs or MPC containing MICs has been inserted into the router, the software activates the configuration for those interfaces.

**Related
Documentation**

- [Types of Interfaces Overview on page 4](#)
- [Understanding Permanent Interfaces on page 5](#)
- [Understanding Management Ethernet Interfaces on page 10](#)
- [Understanding Internal Ethernet Interfaces on page 15](#)
- [Supported Routing Engines by Router on page 17](#)
- [Understanding Services Interfaces on page 7](#)
- [Understanding Container Interfaces on page 8](#)
- [Interface Encapsulations Overview on page 48](#)
- [Interface Descriptors Overview on page 59](#)
- [Interface Naming Overview on page 33](#)
- [Displaying Interface Configurations Overview on page 62](#)

Understanding Services Interfaces

Services interfaces enable you to incrementally add services to your network. The Junos OS supports the following services PICs:

- Adaptive Services (AS) PICs—Allow you to provide multiple services on a single PIC by configuring a set of services and applications. The AS PICs offer a special range of services you configure in one or more service sets.
- ES PIC—Provides a security suite for the IP version 4 (IPv4) and IP version 6 (IPv6) network layers. The suite provides functionality such as authentication of origin, data integrity, confidentiality, replay protection, and nonrepudiation of source. It also defines mechanisms for key generation and exchange, management of security associations, and support for digital certificates.
- Monitoring Services PICs—Enable you to monitor traffic flow and export the monitored traffic. Monitoring traffic allows you to gather and export detailed information about IPv4 traffic flows between source and destination nodes in your network; sample all incoming IPv4 traffic on the monitoring interface and present the data in cflowd record format; perform discard accounting on an incoming traffic flow; encrypt or tunnel outgoing cflowd records, intercepted IPv4 traffic, or both; and direct filtered traffic to different packet analyzers and present the data in its original format. On a Monitoring Services II PIC, you can configure either monitoring interfaces or collector interfaces. A collector interface allows you to combine multiple cflowd records into a compressed ASCII data file and export the file to an FTP server.
- Multilink Services, MultiServices, Link Services, and Voice Services PICs—Enable you to split, recombine, and sequence datagrams across multiple logical data links. The goal of multilink operation is to coordinate multiple independent links between a fixed pair of systems, providing a virtual link with greater bandwidth than any of the members.
- Tunnel Services PIC—By encapsulating arbitrary packets inside a transport protocol, tunneling provides a private, secure path through an otherwise public network. Tunnels connect discontinuous subnetworks and enable encryption interfaces, virtual private networks (VPNs), and Multiprotocol Label Switching (MPLS).
- On M Series and T Series routers, logical tunnel interfaces allow you to connect logical systems, virtual routers, or VPN instances. For more information about VPNs, see the *Junos OS VPNs Library for Routing Devices*. For more information about configuring tunnels, see the *Junos OS Services Interfaces Library for Routing Devices*.

**Related
Documentation**

- [Types of Interfaces Overview on page 4](#)

Understanding Container Interfaces

Container interfaces provide the following features:

- Automatic protection switching (APS) on SONET/SDH and ATM links are supported using the container infrastructure.
- Container physical interfaces and logical interfaces remain up on switchover.
- APS parameters are auto-copied from the container interface to the member links.



NOTE: Paired groups and true unidirectional APS are not currently supported.

For more information on SONET/SDH configuration, see *Configuring Container Interfaces for APS on SONET Links*.


Container interfaces features are described in the following sections:

- [Understanding Traditional APS Concept on page 8](#)
- [Container Interfaces Concept on page 9](#)
- [APS Support for Container-Based Interfaces on page 9](#)
- [Autocopy of APS Parameters on page 9](#)

Understanding Traditional APS Concept

Traditional APS is configured on two independent physical SONET/SDH interfaces: one configured as the working circuit and the other as the protect circuit (see [Figure 1 on page 8](#)). The circuit, named Circuit X in the figure, is the link between the two SONET interfaces.

Figure 1: APS Interface

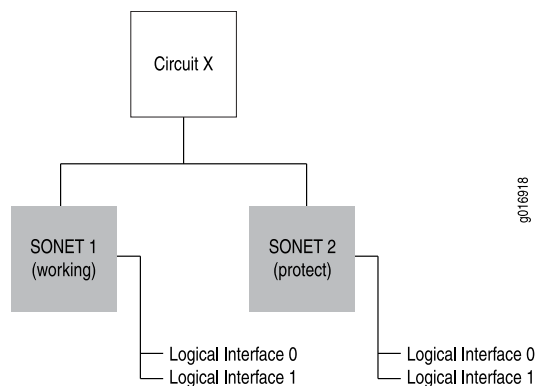


Traditional APS uses routing protocols that run on each individual SONET/SDH interface (since circuit is an abstract construct, instead of being an actual interface). When the working link goes down, the APS infrastructure brings up the protect link and its underlying logical interfaces, and brings down the working link and its underlying logical interfaces,

causing the routing protocols to reconverge. This consumes time and leads to traffic loss even though the APS infrastructure has performed the switch quickly.

Container Interfaces Concept

To solve this problem, the Junos OS provides a soft interface construct called a container interface (see [Figure 2 on page 9](#)).

Figure 2: Container Interface

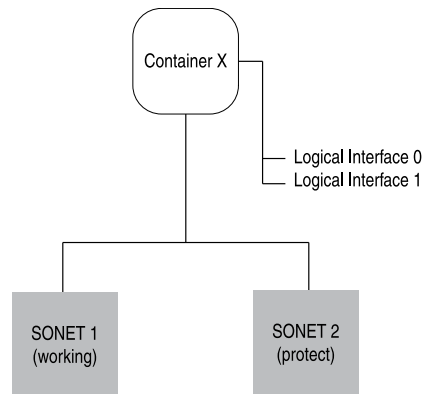

The container interface allows routing protocols to run on the logical interfaces associated with a virtual *container interface* instead of on the physical SONET/SDH and ATM interfaces. When APS switches the underlying physical link based on a fault condition, the container interface remains up, and the logical interface on the container interface does not flap. The routing protocols remain unaware of the APS switching.

APS Support for Container-Based Interfaces

With the container interface, APS is configured on the container interface itself. Individual member SONET/SDH and ATM links are either marked as primary (corresponding to the working circuit) or standby (corresponding to the protect circuit) in the configuration. No circuit or group name is specified in the container interface model; physical SONET/SDH and ATM links are put in an APS group by linking them to a single container interface. APS parameters are specified at the container interface level, and are propagated to the individual SONET/SDH and ATM links by the APS daemon.

Autocopy of APS Parameters

Typical applications require copying APS parameters from the working circuit to the protect circuit, since most of the parameters must be the same for both circuits. This is automatically done in the container interface. APS parameters are specified only once under the container physical interface configuration, and are internally copied over to the individual physical SONET/SDH and ATM links.

Related Documentation

- *Configuring Container Interfaces for APS on SONET Links*
- *Displaying APS Using a Container Interface with ATM Encapsulation*

Understanding Management Ethernet Interfaces

Management interfaces are the primary interfaces for accessing the device remotely. Typically, a management interface is not connected to the in-band network, but is connected instead to the device's internal network. Through a management interface you can access the device over the network using utilities such as **ssh** and **telnet** and configure the device from anywhere, regardless of its physical location. SNMP can use the management interface to gather statistics from the device.

A management interface lets authorized users and management systems connect to the device over the network. Some Juniper Networks devices have a dedicated management port on the front panel. For other types of platforms, you can configure a management interface on one of the network interfaces. This interface can be dedicated to management or shared with other traffic. Before users can access the management interface, you must configure it. Information required to set up the management interface includes its IP address and prefix. In many types of Junos OS devices (or recommended configurations), it is not possible to route traffic between the management interface and the other ports. Therefore, you should select an IP address in a separate (logical) network, with a separate prefix (netmask).

For devices with dedicated management ports, Junos OS automatically configures the router's management Ethernet interface, as either **em0** or **fxp0**. You can use the **show interfaces terse | match fxp0** or **show interfaces terse | match em0** command to display management interface information.

To use the management Ethernet interface as a management port, you must configure its logical port, **em0.0** or **fxp0.0**, with a valid IP address.

For some SRX Series Services Gateways and J Series Services Routers, you can use any of the built-in Ethernet ports as a management interface. (Platform support depends on the Junos OS release in your installation.) To use a built-in interface as a management Ethernet interface, configure it with a valid IP address. To manually configure J-Web access, include the **interface interface-name** statement at the **[edit system services web-management http]** hierarchy level.

For PTX Series Packet Transport Routers, the Junos OS automatically creates the router's management Ethernet interface, **em0**. To use **em0** as an out-of-band management port, you must configure its logical port (for example, **em0.0**) with a valid IP address.

Internal Ethernet interfaces are automatically created to connect the Routing Engines to the Packet Forwarding Engines in the FPCs.

When you enter the **show interfaces** command on a PTX Series Packet Transport Router, the management Ethernet interface and internal Ethernet interfaces (and logical interfaces) are displayed:

```
user@host> show interfaces ?
```

```
...
em0
  em0.0
```

```

ixgbe0
ixgbe0.0
ixgbe1
ixgbe1.0
...

```



NOTE: *Routing Engine upgrade considerations*—When upgrading to a Routing Engine that supports em0 from a Routing Engine that supports fxp0, you must convert existing management Ethernet interface references in the router configuration files from fxp0, fxp1, or fxp2 interfaces to em0 interfaces. Whether you use an automated script or edit the configuration files manually, you must revise any command lines that reference the fxp0 management Ethernet interface by replacing “fxp0” with “em0.”

Reusing scripts for standalone T1600 routers on T1600 routers in a routing matrix—Automated scripts that you have developed for standalone T1600 routers (T1600 routers that are not in a routing matrix) might contain references to the fxp0 management Ethernet interface. Before reusing the scripts on T1600 routers in a routing matrix, edit the command lines that reference the fxp0 management Ethernet interface so that the commands reference the em0 management Ethernet interface instead.

Restricted load-sharing next hops with fxp0—On M Series Multiservices Edge Routers and T Series Core Routers running Junos OS later than Release 7.0R2.7 or Release 7.1R2.2, the fxp0 interface does not support load-sharing next hops. This restriction only affects fxp0 routes.

CoS not supported on fxp0—The fxp0 interface does not support class of service (CoS).

The Routing Engines in the PTX Series Packet Transport Routers do not support the management Ethernet interface fxp0, or the internal Ethernet interfaces fxp1 or fxp2.

Related Documentation • [Supported Routing Engines by Router on page 17](#)

Understanding Interfaces on ACX Series Universal Metro Routers

The ACX Series routers support time-division multiplexing (TDM) T1 and E1 interfaces and Ethernet (1 GbE copper, 1GbE, 10 GbE, and 40 GbE fiber) interfaces to support both the legacy and evolution needs of the mobile network. Support for Power over Ethernet (PoE+) at 65 watts per port mitigates the need for additional electrical cabling for microwaves or other access interfaces.

The ACX Series routers support the following:

- TDM T1 and E1 ports:

- The ACX1000 router contains eight T1 or E1 ports.
- The ACX2000 router contains 16 T1 or E1 ports.
- Inverse Multiplexing for ATM (IMA)



NOTE: ACX5048 and ACX5096 routers do not support T1 or E1 ports and Inverse Multiplexing for ATM (IMA).

- Gigabit Ethernet ports:
 - The ACX1000 router contains eight Gigabit Ethernet ports. The ACX1000 router also supports either four RJ45 (Cu) ports or installation of four Gigabit Ethernet small form-factor pluggable (SFP) transceivers.
 - The ACX2000 router contains 16 Gigabit Ethernet ports and two PoE ports. The ACX2000 router also supports installation of two Gigabit Ethernet SFP transceivers and two 10-Gigabit Ethernet SFP+ transceivers.
 - The ACX5448 router is a 10-Gigabit Ethernet enhanced small form-factor pluggable (SFP+) top-of-rack router with 48 SFP+ ports, and four 100-Gigabit Ethernet QSFP28 ports. Each SFP+ port can operate as a native 10-Gigabit Ethernet port, or as a 1-Gigabit Ethernet port when 1-Gigabit optics are inserted. The 48 ports on ACX5448 router can be configured as 1GE or 10GE modes and these ports are represented by **xe** interface type. The PIC 1 of FPC 0 has 4x100GE ports, where each port can be channelized as 1x100GE, or 1x40GE, or 4x25GE modes and these ports are represented by **et** interface type. By default, the port speed in PIC 1 is 100GE.



NOTE: The ACX5448 router do not support Pseudowire Services interface.



NOTE: 40GbE is supported only on ACX5048 and ACX5096 routers.

T1 and E1 Time-Division Multiplexing (TDM) Interfaces

On the ACX Series routers, existing Junos OS TDM features are supported without changes to statements or functionality. The following key TDM features for T1 (**ct1**) interfaces and E1 (**ce1**) interfaces are supported:

- T1 and E1 channelization
- T1 and E1 encapsulation
- Alarms, defects, and statistics
- External and internal loopback
- TDM class of service (CoS)

T1 and E1 mode selection is at the PIC level. To set the T1 or E1 mode at the PIC level, include the **framing** statement with the **t1** or **e1** option at the [**chassis fpc slot-number pic slot-number**] hierarchy level. All ports can be T1 or E1. Mixing T1s and E1s is not supported.

T1 or E1 BITS Interface (ACX2000)

The ACX2000 router has a T1 or E1 building-integrated timing supply (BITS) interface that you can connect to an external clock. After you connect the interface to the external clock, you can configure the BITS interface so that the BITS interface becomes a candidate source for chassis synchronization to the external clock. The frequency of the BITS interface depends on the Synchronous Ethernet equipment slave clock (EEC) selected with the **network-option** statement at the [**edit chassis synchronization**] hierarchy level.



NOTE: The ACX1000 router does not support the BITS interface.

Inverse Multiplexing for ATM (IMA)

Defined by the ATM Forum, IMA specification version 1.1 is a standardized technology used to transport ATM traffic over a bundle of T1 and E1 interfaces, also known as an IMA group. Up to eight links per bundle and 16 bundles per PIC are supported. The following key IMA features are supported:

- IMA Layer 2 encapsulation
- ATM CoS
- ATM policing and shaping
- Denied packets counter in the output for the **show interfaces at-fpc/pic/port extensive** command

Gigabit Ethernet interfaces

On the ACX Series routers, existing Junos OS Ethernet features are supported without changes to statements or functionality. The following key features are supported:

- Media type specification (ACX1000 router with Gigabit Ethernet SFP and RJ45 interfaces)
- Autonegotiation for RJ45 Gigabit Ethernet interfaces
- Event handling of SFP insertion and removal
- Explicit disabling of the physical interface
- Flow control



NOTE: The ACX Series router does not support flow control based on PAUSE frames.

- Loopback

- Loss of signal (LOS) alarm
- Media access control (MAC) layer features
- Maximum transmission unit (MTU)
- Remote fault notification for 10-Gigabit Ethernet interfaces
- Statistics collection and handling
- Power over Ethernet (PoE) (ACX2000 router)
- High power mode

The Gigabit Ethernet ports on the router have the capacity to work as a 1 or 10-Gigabit Ethernet interface, depending on the type of small form-factor pluggable (SFP) transceiver inserted. When you insert an SFP+ transceiver, the interface works at the 10-Gigabit speed. When you insert an SFP transceiver, the interface works at the 1-Gigabit speed. Configuration is not required because the speed is determined automatically based on the type of inserted SFP transceiver. The dual-speed interface is automatically created with the **xe** prefix, for example, **xe-4/0/0**.

The same configuration statements are used for both speeds and CoS parameters are scaled as a percentage of the port speed. To configure a dual-speed Gigabit Ethernet interface, include the **interface xe-fpc/pic/port** statement at the **[edit interfaces]** hierarchy level. To display the interface speed and other details, issue the **show interfaces** command.



NOTE: You need to use industrial grade of SFP below 0dC for ACX 1100 and ACX 2100 boards.

Related Documentation

- *Understanding Encapsulation on an Interface*
- *Configuring Inverse Multiplexing for ATM (IMA) on ACX Series*
- [Interface Names for ACX Series Universal Metro Routers on page 60](#)

TX Matrix Plus and T1600 Router (Routing Matrix) Management Ethernet Interfaces

For TX Matrix Plus Routers and for T1600 Core Routers with RE-C1800 configured in a routing matrix, the Junos OS automatically creates the router's management Ethernet interface, **em0**. To use **em0** as a management port, you must configure its logical port, **em0.0**, with a valid IP address.

When you enter the **show interfaces** command on a TX Matrix Plus router, the management Ethernet interfaces (and logical interfaces) are displayed:

```
user@host> show interfaces ?
```

```
...
em0
em0.0
...
```



NOTE: The Routing Engines in the TX Matrix Plus router and in the T1600 routers with RE-C1800 configured in a routing matrix do not support the management Ethernet interface `fxp0`, or the internal Ethernet interfaces `fxp1` or `fxp2`.

Related Documentation

- [Understanding Internal Ethernet Interfaces on page 15](#)
- [T1600 Routers \(Routing Matrix\) Internal Ethernet Interfaces on page 17](#)
- [Displaying Internal Ethernet Interfaces for a Routing Matrix with a TX Matrix Plus Router](#)
- [show interfaces \(M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet\) on page 1488](#)

Understanding Internal Ethernet Interfaces

Within a router or packet transport router, internal Ethernet interfaces provide communication between the Routing Engine and the Packet Forwarding Engines. The Junos OS automatically configures internal Ethernet interfaces when the Junos OS boots. The Junos OS boots the packet-forwarding component hardware. When these components are running, the Control Board uses the internal Ethernet interface to transmit hardware status information to the Routing Engine. Information transmitted includes the internal router temperature, the condition of the fans, whether an FPC has been removed or inserted, and information from the LCD on the craft interface.

To determine the supported internal Ethernet interfaces for your router, see [“Supported Routing Engines by Router” on page 17](#).



NOTE: Do not modify or remove the configuration for the internal Ethernet interface that the Junos OS automatically configures. If you do, the router or packet transport router will stop functioning.

- M Series, and MX Series routers and T Series routers—The Junos OS creates the internal Ethernet interface. The internal Ethernet interface connects the Routing Engine `re0` to the Packet Forwarding Engines.

If the router has redundant Routing Engines, another internal Ethernet interface is created on each Routing Engine (`re0` and `re1`) in order to support fault tolerance, two physical links between `re0` and `re1` connect the independent control planes. If one of the links fails, both Routing Engines can use the other link for IP communication.

- TX Matrix Plus routers—On a TX Matrix Plus router, the Routing Engine and Control Board function as a unit, or host subsystem. For each host subsystem in the router, the Junos OS automatically creates two internal Ethernet interfaces, `ixgbe0` and `ixgbe1`.

The **ixgbe0** and **ixgbe1** interfaces connect the TX Matrix Plus Routing Engine to the Routing Engines of every line-card chassis (LCC) configured in the routing matrix.

The TX Matrix Plus Routing Engine connects to a high-speed switch through a 10-Gbps link within the host subsystem. The switch provides a 1-Gbps link to each T1600 Routing Engine. The 1-Gbps links are provided through the UTP Category 5 Ethernet cable connections between the TXP-CBs and the LCC-CBs in the LCCs.

- The TX Matrix Plus Routing Engine connects to a high-speed switch in the local Control Board through a 10-Gbps link within the host subsystem.
- The Gigabit Ethernet switch connects the Control Board to the remote Routing Engines of every LCC configured in the routing matrix.

If a TX Matrix Plus router contains redundant host subsystems, the independent control planes are connected by two physical links between the two 10-Gigabit Ethernet ports on their respective Routing Engines.

- The primary link to the remote Routing Engine is at the **ixgbe0** interface; the 10-Gigabit Ethernet switch on the local Control Board also connects the Routing Engine to the 10-Gigabit Ethernet port accessed by the **ixgbe1** interface on the remote Routing Engine.
- The alternate link to the remote Routing Engine is the 10-Gigabit Ethernet port at the **ixgbe1** interface. This second port connects the Routing Engine to the 10-Gigabit Ethernet switch on the remote Control Board, which connects to the 10-Gigabit Ethernet port at the **ixgbe0** interface on the remote Routing Engine.

If one of the two links between the host subsystems fails, both Routing Engines can use the other link for IP communication.

- LCC in a routing matrix—On an LCC configured in a routing matrix, the Routing Engine and Control Board function as a unit, or host subsystem. For each host subsystem in the LCC, the Junos OS automatically creates two internal Ethernet interfaces, **bcm0** and **em1**, for the two Gigabit Ethernet ports on the Routing Engine.

The **bcm0** interface connects the Routing Engine in each LCC to the Routing Engines of every other LCC configured in the routing matrix.

- The Routing Engine connects to a Gigabit Ethernet switch on the local Control Board through a.
- The switch connects the Control Board to the remote Routing Engines of every other LCC configured in the routing matrix.

If an LCC in a routing matrix contains redundant host subsystems, the independent control planes are connected by two physical links between the Gigabit Ethernet ports on their respective Routing Engines.

- The primary link to the remote Routing Engine is at the **bcm0** interface; the Gigabit Ethernet switch on the local Control Board also connects the Routing Engine to the Gigabit Ethernet port accessed by the **em1** interface on the remote Routing Engine.

- The alternate link to the remote Routing Engine is at the **em1** interface. This second port connects the Routing Engine to the Gigabit Ethernet switch on the remote Control Board, which connects to the Gigabit Ethernet port at the **bcm0** interface on the remote Routing Engine.

If one of the two links between the host subsystems fails, both Routing Engines can use the other link for IP communication.

Each router also has two serial ports, labeled *console* and *auxiliary*, for connecting tty type terminals to the router using standard PC-type tty cables. Although these ports are not network interfaces, they do provide access to the router.

Related Documentation

- [Understanding Permanent Interfaces on page 5](#)
- [Supported Routing Engines by Router on page 17](#)
- [TX Matrix Plus and T1600 Router \(Routing Matrix\) Management Ethernet Interfaces on page 14](#)
- [T1600 Routers \(Routing Matrix\) Internal Ethernet Interfaces on page 17](#)
- [Displaying Internal Ethernet Interfaces for a Routing Matrix with a TX Matrix Plus Router](#)
- [show interfaces \(M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet\) on page 1488](#)

T1600 Routers (Routing Matrix) Internal Ethernet Interfaces

On a T1600 router configured in a routing matrix, the Routing Engine (RE-TXP-LCC) and Control Board (LCC-CB) function as a unit, or host subsystem. For each host subsystem in the router, the Junos OS automatically creates two internal Ethernet interfaces, **bcm0** and **em1**, for the two Gigabit Ethernet ports on the Routing Engine.

Related Documentation

- [Understanding Internal Ethernet Interfaces on page 15](#)
- [Displaying Internal Ethernet Interfaces for a Routing Matrix with a TX Matrix Plus Router](#)
- [show interfaces \(M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet\) on page 1488](#)

Supported Routing Engines by Router

The following tables list the Routing Engines that each router supports, the first supported release for the Routing Engine in the specified router, the management Ethernet interface, and the internal Ethernet interfaces for each Routing Engine.

- [M7i Routing Engines on page 18](#)
- [M10i Routing Engines on page 19](#)
- [M40e Routing Engines on page 19](#)
- [M120 Routing Engines on page 19](#)

- [M320 Routing Engines on page 20](#)
- [MX5, MX10, MX40, and MX80 Routing Engine on page 21](#)
- [MX104 Routing Engines on page 21](#)
- [MX240 Routing Engines on page 21](#)
- [MX480 Routing Engines on page 22](#)
- [MX960 Routing Engines on page 23](#)
- [MX2008 Routing Engines on page 24](#)
- [MX2010 Routing Engines on page 25](#)
- [MX2020 Supported Routing Engines on page 25](#)
- [MX10003 Routing Engines on page 26](#)
- [MX10008 Routing Engines on page 26](#)
- [PTX1000 Routing Engines on page 27](#)
- [PTX3000 Routing Engines on page 27](#)
- [PTX5000 Routing Engines on page 27](#)
- [PTX10008 and PTX10016 Routing Engines on page 28](#)
- [T320 Routing Engines on page 29](#)
- [T640 Routing Engines on page 29](#)
- [T1600 Routing Engines on page 30](#)
- [T4000 Routing Engines on page 31](#)
- [TX Matrix Routing Engines on page 31](#)
- [TX Matrix Plus Routing Engines on page 32](#)
- [TX Matrix Plus \(with 3D SIBs\) Routing Engines on page 32](#)

M7i Routing Engines

[Table 3 on page 18](#) lists the Routing Engines supported by the M7i router. The M7i router supports 32-bit Junos OS only.

Table 3: M7i Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: TSB16445)	RE-5.0	9.0	fxp0	fxp1
RE-850-1536 (EOL details: TSB15553)	RE-850	7.2	fxp0	fxp1
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

M10i Routing Engines

Table 4 on page 19 lists the Routing Engines supported by the M10i router. The M10i router supports 32-bit Junos OS only.

Table 4: M10i Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: TSB16445)	RE-5.0	9.0	fxp0	fxp1 fxp2
RE-850-1536 (EOL details: TSB15553)	RE-850	7.2	fxp0	fxp1 fxp2
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

M40e Routing Engines

Table 5 on page 19 lists the Routing Engines supported by the M40e router.

Table 5: M40e Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-A-1000-2048	RE-A-1000	8.1	fxp0	fxp1 fxp2

M120 Routing Engines

Table 6 on page 19 lists the Routing Engines supported by the M120 router.

Table 6: M120 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1000-2048	RE-A-1000	8.0R2	–	fxp0	fxp1 fxp2

Table 6: M120 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-2000-4096	RE-A-2000	8.0R2	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	fxp1 fxp2
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	fxp1 fxp2
RE-A-1800X4-16G	RE-A-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

M320 Routing Engines

Table 7 on page 20 lists the Routing Engines supported by the M320 router.

Table 7: M320 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 bcm0
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 bcm0
RE-A-1800X4-8G	RE-A-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 12.2 	10.4	fxp0	em0 em1

MX5, MX10, MX40, and MX80 Routing Engine

Table 8 on page 21 lists the Routing Engines supported by the MX5, MX10, MX40, and MX80 routers.

Table 8: MX5, MX10, MX40, and MX80 Routing Engine

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	Routing Engine RE-MX80	12.3	-	fxp0	em0 em1 <small>NOTE: em1 is used to communicate with the MS-MIC when it is inserted.</small>

MX104 Routing Engines

Table 9 on page 21 lists the Routing Engines supported by MX104 routers.

Table 9: MX104 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-MX104	Routing Engine	13.2	—	fxp0	fxp1 fxp2

MX240 Routing Engines

Table 10 on page 21 lists the Routing Engines supported by MX240 routers.

Table 10: MX240 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	9.0	—	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	9.0	—	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

Table 10: MX240 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800x2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800x4-8G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800x4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800x4-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0, em1
RE-S-X6-64G	RE-S-2X00x6	—	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	—	17.2R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	—	18.1R1	fxp0	ixlv0, igb0 em0

MX480 Routing Engines

Table 11 on page 22 lists the Routing Engines supported by MX480 routers.

Table 11: MX480 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	8.4	—	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	8.4	—	fxp0	fxp1 fxp2
RE-S-1800x2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

Table 11: MX480 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800X2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800X4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800X4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	—	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	—	17.2R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	—	18.1R1	fxp0	ixlv0, igb0 em0

MX960 Routing Engines

Table 12 on page 23 lists the Routing Engines supported by MX960 routers.

Table 12: MX960 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	8.2	—	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	8.2	—	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

Table 12: MX960 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800X2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	—	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G (For MX960-VC)	RE-S-2X00x6	—	17.1R2	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	—	17.2R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	—	18.1R1	fxp0	ixlv0, igb0 em0

MX2008 Routing Engines

Table 13 on page 24 lists the Routing Engines supported by MX2008 routers.

Table 13: MX2008 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2008-X8-64G	RE-MX2008-X8-64G	15.1F7	fxp0	ixlv0 ixlv1
REMX2008-X8-64G-LT	REMX2008-X8-64G-LT	17.2R1	fxp0	ixlv0 ixlv1

Table 13: MX2008 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2008-X8-128G	RE-MX2008-X8-128G	18.2R1	fxp0	ixlv0 ixlv1

MX2010 Routing Engines

Table 14 on page 25 lists the Routing Engines supported by MX2010 routers.

Table 14: MX2010 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> 15.1F5-S1 16.1R2 16.2R1 	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-64G-LT	RE-S-2X00x8	17.2R1	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-128G	RE-MX200X8-128G	18.1R1	fxp0	ixlv0 ixlv1

MX2020 Supported Routing Engines

Table 15 on page 26 lists the Routing Engines supported by MX2020 routers.

Table 15: MX2020 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> 15.1F5-S1 16.1R2 16.2R1 	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-64G-LT	RE-S-2X00x8	17.2R1	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-128G	RE-MX200X8-128G	18.1R1	fxp0	ixlv0 ixlv1 em0

MX10003 Routing Engines

Table 16 on page 26 lists the Routing Engines supported by MX10003 routers.

Table 16: MX10003 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10003-RE1	RE-S-2X00x6	17.3R1	fxp0	em3 em4
JNP10003-RE1-LT	RE-S-1600x8	18.1R1	fxp0	em3 em4

MX10008 Routing Engines

Table 17 on page 27 lists the Routing Engines supported on the MX10008 router.

Table 17: MX10008 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE1	RE X10	18.2R1	em0	bme0 bme1

PTX1000 Routing Engines

Table 18 on page 27 lists the Routing Engine supported on the PTX1000.



NOTE: The PTX1000 supports 64-bit Junos OS only.

Table 18: PTX1000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	RE-PTX1000	<ul style="list-style-type: none"> 16.1X65-D30 17.2R1 	em0	bme0 em1

PTX3000 Routing Engines

Table 19 on page 27 lists the Routing Engines supported on the PTX3000.



NOTE: The PTX3000 supports 64-bit Junos OS only.

Table 19: PTX3000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	13.2R2	em0	ixgbe0 ixgbe1
RCB-PTX-X6-32G	RE-PTX-2X00x6	16.1R4 17.1R1 This Routing Engine does not support Junos OS Release 16.2.	em0	ixlv0 ixlv1

PTX5000 Routing Engines

Table 20 on page 28 lists the Routing Engines supported on the PTX5000.

**NOTE:**

- PTX5000 supports 64-bit Junos OS only.
- The PTX5000 router supports two midplanes. The midplane identified as **Midplane-8S** in the CLI output is supported in Junos OS releases, 12.1X48, 12.3, and 13.2. The enhanced midplane, identified as **Midplane-8SeP** is supported from Junos OS release 14.1 onwards.

The RE-DUO-2600 routing engine with Junos OS 13.2 or earlier is not supported on the PTX5000BASE2 midplane.

Table 20: PTX5000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	12.1X48	em0	ixgbe0
		12.3		ixgbe1
		13.2		
		NOTE: The PTX5000 does not support Junos OS Releases 12.1, 12.2, or 13.1.		
RE-PTX-X8-64G	RE-PTX-2X00x8	15.1F4	em0	ixlv0
		16.1R1		ixlv1
				em1
RE-PTX-X8-128G	RE-PTX-2X00x8-128G	18.1R1	em0	ixlv0
				ixlv1
				em1

PTX10008 and PTX10016 Routing Engines

Table 21 on page 28 lists the Routing Engines supported on the PTX10008 and PTX10016 routers.

Table 21: PTX10008 and PTX10016 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE0	RE-PTX-2X00x4	17.2R1	em0, em1	bme0
				bme1

Table 21: PTX10008 and PTX10016 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE1 (on PTX10008)	RE X10	18.2R1	em0	bme0 bme1

T320 Routing Engines

Table 22 on page 29 lists the Routing Engines supported by the T320 router.

Table 22: T320 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	fxp0	fxp1 fxp2

The T320 router supports the CB-T control board.

T640 Routing Engines

Table 23 on page 29 lists the Routing Engines supported by the T640 router.

Table 23: T640 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0

Table 23: T640 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.2	64-bit Junos OS on a standalone T640 router: 11.3	em0	bcm0
		32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a T640 router in a routing matrix: 11.4R9		em1
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.4R2	64-bit Junos OS on a standalone T640 router: 11.4R2	em0	bcm0
		32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a T640 router in a routing matrix: 11.4R9		em1

The T640 standalone router supports CB-T control board and CB-LCC in a T640 routing matrix.

T1600 Routing Engines

Table 24 on page 30 lists the Routing Engines supported by the T1600 router.



NOTE: (Two RE-DUO-C1800-8G or two RE-DUO-C1800-16G are required to connect to a Routing Matrix)

Table 24: T1600 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	8.5	—	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0 (RE-1600)	8.5	—	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	—	fxp0	em0 bcm0

Table 24: T1600 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-TXP-LCC or RE-DUO-1800	32-bit Junos OS on a T1600 router in a routing matrix: 9.6 <i>NOTE:</i> Junos OS Releases 9.6 through 10.4 support RE-DUO-C1800-8G only during upgrade to a line-card chassis (LCC) in a routing matrix. 32-bit Junos OS on a standalone T1600 router: 11.1	64-bit Junos OS on a T1600 router in a routing matrix: 9.6 64-bit Junos OS on a standalone T1600 router: 11.1	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T1600 router: 11.4R2 32-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	64-bit Junos OS on a standalone T1600 router: 11.4R2 64-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	em0	bcm0 em1

T4000 Routing Engines

Table 25 on page 31 lists the Routing Engines supported by the T4000 router.



NOTE: The T4000 router supports 64-bit Junos OS only.

Table 25: T4000 Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	Standalone T4000 router: 12.1 T4000 router in a routing matrix: 13.1	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	Standalone T4000 router: 12.1R2 T4000 router in a routing matrix: 13.1	em0	bcm0 em1

The T4000 router supports the CB-LCC control board.

TX Matrix Routing Engines

Table 26 on page 32 lists the Routing Engines supported by the TX Matrix router.

Table 26: TX Matrix Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	7.0	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0 (RE-1600)	7.0	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0
RE-DUO-C1800-8G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1

The TXP router supports two control boards, CB-TX and CB-LCC. The CB-LCC is required for both RE-DUO-C1800-8G and RE-DUO-C1800-16G Routing Engines.

TX Matrix Plus Routing Engines

Table 27 on page 32 lists the Routing Engines supported by the TX Matrix Plus router.

Table 27: TX Matrix Plus Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	32-bit Junos OS: 9.6	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

The TX Matrix Plus router supports the CB-TXP control board.

TX Matrix Plus (with 3D SIBs) Routing Engines

Table 28 on page 33 lists the Routing Engines supported by the TX Matrix Plus router with 3D SIBs.

Table 28: Routing Engines on TX Matrix Plus with 3D SIBs

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	-	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

- Related Documentation**
- [Understanding Internal Ethernet Interfaces on page 15](#)
 - [Understanding Management Ethernet Interfaces on page 10](#)

Interface Naming Overview

Each interface has an interface name, which specifies the media type, the slot in which the FPC or DPC is located, the location on the FPC where the PIC is installed, and the PIC or DPC port. The interface name uniquely identifies an individual network connector in the system. You use the interface name when configuring interfaces and when enabling various functions and properties, such as routing protocols, on individual interfaces. The system uses the interface name when displaying information about the interface, for example, in the **show interfaces** command.

The interface name is represented by a physical part, a channel part, and a logical part in the following format:

```
physical<:channel>.logical
```

The channel part of the name is optional for all interfaces except channelized DS3, E1, OC12, and STM1 interfaces.

The EX Series, QFX Series, NFX Series, OCX1100, QFabric System, and EX4600 devices use a naming convention for defining the interfaces that are similar to that of other platforms running under Juniper Networks Junos OS. For more information about the naming conventions used for interfaces on the QFX Series and on EX4600 switches, see *Understanding Interface Naming Conventions*.

The following sections provide interface naming configuration guidelines:

- [Physical Part of an Interface Name on page 34](#)
- [Logical Part of an Interface Name on page 40](#)
- [Separators in an Interface Name on page 40](#)
- [Channel Part of an Interface Name on page 40](#)
- [Interface Naming for a Routing Matrix Based on a TX Matrix Router on page 41](#)
- [Interface Naming for a Routing Matrix Based on a TX Matrix Plus Router on page 43](#)
- [Chassis Interface Naming on page 45](#)
- [Examples: Interface Naming on page 46](#)

Physical Part of an Interface Name

The physical part of an interface name identifies the physical device, which corresponds to a single physical network connector.



NOTE:

The internal interface is dependent on the Routing Engine. To identify if the Routing Engine is using this type of interface, use the following command:

```
user@host> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
pfe-1/0/0	up	up			
pfe-1/0/0.16383	up	up	inet		
			inet6		
pfh-1/0/0	up	up			
pfh-1/0/0.16383	up	up	inet		
[.....]					
bcm0	up	up	<-----		
bcm0.0	up	up	inet	10.0.0.1/8	
[.....]					
lsi	up	up			
mtun	up	up			
pimd	up	up			
pime	up	up			
tap	up	up			

For more information on the Routing Engines that each chassis supports, the first supported release for the Routing Engine in the specified chassis, the management Ethernet interface, and the internal Ethernet interfaces for each Routing Engine, please refer the link titled *Supported Routing Engines by Chassis* under Related Documentation section.

This part of the interface name has the following format:

```
type-fpc/pic/port
```

type is the media type, which identifies the network device that can be one of the following:

- **ae**—Aggregated Ethernet interface. This is a virtual aggregated link and has a different naming format from most PICs; for more information, see *Aggregated Ethernet Interfaces Overview*.
- **as**—Aggregated SONET/SDH interface. This is a virtual aggregated link and has a different naming format from most PICs; for more information, see *Configuring Aggregated SONET/SDH Interfaces*.
- **at**—ATM1 or ATM2 intelligent queuing (IQ) interface or a virtual ATM interface on a circuit emulation (CE) interface.

- **bcm**—The bcm0 internal Ethernet process is supported on specific Routing engines for various M series and T series routers. For more information please refer the link titled *Supported Routing Engines by Chassis* under Related Documentation section.
- **cau4**—Channelized AU-4 IQ interface (configured on the Channelized STM1 IQ or IQE PIC or Channelized OC12 IQ and IQE PICs).
- **ce1**—Channelized E1 IQ interface (configured on the Channelized E1 IQ PIC or Channelized STM1 IQ or IQE PIC).
- **ci**—Container interface.
- **coc1**—Channelized OC1 IQ interface (configured on the Channelized OC12 IQ and IQE or Channelized OC3 IQ and IQE PICs).
- **coc3**—Channelized OC3 IQ interface (configured on the Channelized OC3 IQ and IQE PICs).
- **coc12**—Channelized OC12 IQ interface (configured on the Channelized OC12 IQ and IQE PICs).
- **coc48**—Channelized OC48 interface (configured on the Channelized OC48 and Channelized OC48 IQE PICs).
- **cp**—Collector interface (configured on the Monitoring Services II PIC).
- **cstm1**—Channelized STM1 IQ interface (configured on the Channelized STM1 IQ or IQE PIC).
- **cstm4**—Channelized STM4 IQ interface (configured on the Channelized OC12 IQ and IQE PICs).
- **cstm16**—Channelized STM16 IQ interface (configured on the Channelized OC48/STM16 and Channelized OC48/STM16 IQE PICs).
- **ct1**—Channelized T1 IQ interface (configured on the Channelized DS3 IQ and IQE PICs, Channelized OC3 IQ and IQE PICs, Channelized OC12 IQ and IQE PICs, or Channelized T1 IQ PIC).
- **ct3**—Channelized T3 IQ interface (configured on the Channelized DS3 IQ and IQE PICs, Channelized OC3 IQ and IQE PICs, or Channelized OC12 IQ and IQE PICs).
- **demux**—Interface that supports logical IP interfaces that use the IP source or destination address to demultiplex received packets. Only one demux interface (**demux0**) exists per chassis. All demux logical interfaces must be associated with an underlying logical interface.
- **dfc**—Interface that supports dynamic flow capture processing on T Series or M320 routers containing one or more Monitoring Services III PICs. Dynamic flow capture enables you to capture packet flows on the basis of dynamic filtering criteria. Specifically, you can use this feature to forward passively monitored packet flows that match a particular filter list to one or more destinations using an on-demand control protocol.
- **ds**—DS0 interface (configured on the Multichannel DS3 PIC, Channelized E1 PIC, Channelized OC3 IQ and IQE PICs, Channelized OC12 IQ and IQE PICs, Channelized

DS3 IQ and IQE PICs, Channelized E1 IQ PIC, Channelized STM1 IQ or IQE PIC, or Channelized T1 IQ).

- **dsc**—Discard interface.
- **e1**—E1 interface (including channelized STM1-to-E1 interfaces).
- **e3**—E3 interface (including E3 IQ interfaces).
- **em**—Management and internal Ethernet interfaces. For M Series routers, MX Series routers, T Series routers, and TX Series routers, you can use the **show chassis hardware** command to display hardware information about the router, including its Routing Engine model. To determine which management interface is supported on your router and Routing Engine combination, see [“Understanding Management Ethernet Interfaces” on page 10](#) and [“Supported Routing Engines by Router” on page 17](#).
- **es**—Encryption interface.
- **et**—100-Gigabit Ethernet interfaces (10, 40, and 100-Gigabit Ethernet interface for PTX Series Packet Transport Routers only).
- **fe**—Fast Ethernet interface.
- **fxp**—Management and internal Ethernet interfaces. For M Series routers, MX Series routers, T Series routers, and TX Series routers, you can use the **show chassis hardware** command to display hardware information about the router, including its Routing Engine model. To determine which management interface is supported on your router and Routing Engine combination, see [“Understanding Management Ethernet Interfaces” on page 10](#) and [“Supported Routing Engines by Router” on page 17](#).
- **ge**—Gigabit Ethernet interface.

**NOTE:**

- The XENPAK 10-Gigabit Ethernet interface PIC, which is supported only on M series routers, is configured using the **ge** interface naming convention instead of the **xe** interface naming convention. Refer the following show commands for more information:

```
user@host> show chassis hardware
```

```
..
FPC 4          REV 02   710-015839   CZ1853          M120 FPC
Type 3
  PIC 0        REV 09   750-009567   NH1857          1x
10GE(LAN), XENPAK
  Xcvr 0       REV 01   740-012045   535TFZX6        XENPAK-SR
```

```
user@host> show configuration interfaces ge-4/0/0
```

```
unit 0 {
  family inet {
    address 100.0.0.1/24;
  }
}
```

- In MX and SRX series devices, the 1 and 10-Gigabit SFP or SFP+ optical interfaces are always named as **xe** even if a 1-Gigabit SFP is inserted. However, in EX and QFX series devices, the interface name is shown as **ge** or **xe** based on the speed of the optical device inserted.

- **gr**—Generic routing encapsulation (GRE) tunnel interface.
- **gre**—Internally generated interface that is configurable only as the control channel for Generalized MPLS (GMPLS). For more information about GMPLS, see the *MPLS Applications Feature Guide*.



NOTE: You can configure GRE interfaces (**gre-x/y/z**) only for GMPLS control channels. GRE interfaces are not supported or configurable for other applications..

- **ip**—IP-over-IP encapsulation tunnel interface.
- **ipip**—Internally generated interface that is not configurable.
- **ixgbe**—The internal Ethernet process **ixgbe0** and **ixgbe1** are used by the RE-DUO-C2600-16G Routing Engine, which is supported on TX Matrix Plus and PTX5000.
- **iw**—Logical interfaces associated with the endpoints of Layer 2 circuit and Layer 2 VPN connections (pseudowire stitching Layer 2 VPNs). For more information about VPNs, see the *Junos OS VPNs Library for Routing Devices*.
- **lc**—Internally generated interface that is not configurable.

- **lo**—Loopback interface. The Junos OS automatically configures one loopback interface (**lo0**). The logical interface **lo0.16383** is a nonconfigurable interface for router control traffic.
- **ls**—Link services interface.
- **lsi**—Internally generated interface that is not configurable.
- **ml**—Multilink interface (including Multilink Frame Relay and MLPPP).
- **mo**—Monitoring services interface (including monitoring services and monitoring services II). The logical interface **mo-fpc/pic/port.16383** is an internally generated, nonconfigurable interface for router control traffic.
- **ms**—Multiservices interface.
- **mt**—Multicast tunnel interface (internal router interface for VPNs). If your router has a Tunnel PIC, the Junos OS automatically configures one multicast tunnel interface (**mt**) for each virtual private network (VPN) you configure. Although it is not necessary to configure multicast interfaces, you can use the **multicast-only** statement to configure the unit and family so that the tunnel can transmit and receive multicast traffic only. For more information, see [multicast-only](#).
- **mtun**—Internally generated interface that is not configurable.
- **oc3**—OC3 IQ interface (configured on the Channelized OC12 IQ and IQE PICs or Channelized OC3 IQ and IQE PICs).
- **pd**—Interface on the rendezvous point (RP) that de-encapsulates packets.
- **pe**—Interface on the first-hop PIM router that encapsulates packets destined for the RP router.
- **pimd**—Internally generated interface that is not configurable.
- **pime**—Internally generated interface that is not configurable.
- **rlsq**—Container interface, numbered from 0 through 127, used to tie the primary and secondary LSQ PICs together in high availability configurations. Any failure of the primary PIC results in a switch to the secondary PIC and vice versa.
- **rms**—Redundant interface for two multiservices interfaces.
- **rsp**—Redundant virtual interface for the adaptive services interface.
- **se**—Serial interface (including EIA-530, V.35, and X.21 interfaces).
- **si**—Services-inline interface, which is hosted on a Trio-based line card.
- **so**—SONET/SDH interface.
- **sp**—Adaptive services interface. The logical interface **sp-fpc/pic/port.16383** is an internally generated, nonconfigurable interface for router control traffic.
- **stm1**—STM1 interface (configured on the OC3/STM1 interfaces).
- **stm4**—STM4 interface (configured on the OC12/STM4 interfaces).
- **stm16**—STM16 interface (configured on the OC48/STM16 interfaces).

- **t1**—T1 interface (including channelized DS3-to-DS1 interfaces).
- **t3**—T3 interface (including channelized OC12-to-DS3 interfaces).
- **tap**—Internally generated interface that is not configurable.
- **umd**—USB modem interface.
- **vsp**—Voice services interface.
- **vc4**—Virtually concatenated interface.
- **vt**—Virtual loopback tunnel interface.
- **xe**—10-Gigabit Ethernet interface. Some older 10-Gigabit Ethernet interfaces use the **ge** media type (rather than **xe**) to identify the physical part of the network device.
- **xt**—Logical interface for Protected System Domains to establish a Layer 2 tunnel connection.

fpc identifies the number of the FPC or DPC card on which the physical interface is located. Specifically, it is the number of the slot in which the card is installed.

M40, M40e, M160, M320, M120, T320, T640, and T1600 routers each have eight FPC slots that are numbered 0 through 7, from left to right as you are facing the front of the chassis. For information about compatible FPCs and PICs, see the hardware guide for your router.

On PTX1000 routers, the FPC number is always 0.

The M20 router has four FPC slots that are numbered 0 through 3, from top to bottom as you are facing the front of the chassis. The slot number is printed adjacent to each slot.

MX Series routers support DPCs, FPCs, and Modular Interface Cards (MICs). For information about compatible DPCs, FPCs, PICs, and MICs, see the [MX Series Interface Module Reference](#).

For M5, M7i, M10, and M10i routers, the FPCs are built into the chassis; you install the PICs into the chassis.

The M5 and M7i routers have space for up to four PICs. The M7i router also comes with an integrated Tunnel PIC, or an optional integrated AS PIC, or an optional integrated MS PIC.

The M10 and M10i routers have space for up to eight PICs.

A routing matrix can have up to 32 FPCs (numbered 0 through 31).

For more information about interface naming for a routing matrix, see [“Interface Naming for a Routing Matrix Based on a TX Matrix Router” on page 41](#).

pic identifies the number of the PIC on which the physical interface is located. Specifically, it is the number of the PIC location on the FPC. FPCs with four PIC slots are numbered 0 through 3. FPCs with three PIC slots are numbered 0 through 2. The PIC location is printed

on the FPC carrier board. For PICs that occupy more than one PIC slot, the lower PIC slot number identifies the PIC location.

port identifies a specific port on a PIC or DPC. The number of ports varies depending on the PIC. The port numbers are printed on the PIC.

Logical Part of an Interface Name

The logical unit part of the interface name corresponds to the logical unit number, which can be a number from 0 through 16,385 for all interface types except demux and PPPoE. For these two interface types only, the range is 0 through 65,535.

In the virtual part of the name, a period (.) separates the port and logical unit numbers:

- Other platforms:

```
type-fpc/pic/port.logical
```

Separators in an Interface Name

There is a separator between each element of an interface name.

In the physical part of the name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers.

In the virtual part of the name, a period (.) separates the channel and logical unit numbers.

A colon (:) separates the physical and virtual parts of the interface name.

Channel Part of an Interface Name

The channel identifier part of the interface name is required only on channelized interfaces. For channelized interfaces, channel 0 identifies the first channelized interface. For channelized IQ and channelized IQE interfaces, channel 1 identifies the first channelized interface. A nonconcatenated (that is, channelized) SONET/SDH OC48 interface has four OC12 channels, numbered 0 through 3.

To determine which types of channelized PICs are currently installed in the router, use the **show chassis hardware** command from the top level of the command-line interface (CLI). Channelized IQ and IQE PICs are listed in the output with “intelligent queuing IQ” or “enhanced intelligent queuing IQE” in the description. For more information, see *Channelized Interfaces Overview*.

For ISDN interfaces, you specify the B-channel in the form **bc-pim/0/port:n.n** is the B-channel ID and can be 1 or 2. You specify the D-channel in the form **dc-pim/0/port:0**.



NOTE: For ISDN, the B-channel and D-channel interfaces do not have any configurable parameters. However, when interface statistics are displayed, B-channel and D-channel interfaces have statistical values.




NOTE: In the Junos OS implementation, the term *logical interfaces* generally refers to interfaces you configure by including the unit statement at the [edit interfaces *interface-name*] hierarchy level. Logical interfaces have the *.logical* descriptor at the end of the interface name, as in `ge-0/0/0.1` or `t1-0/0/0.0.1`, where the logical unit number is 1.

Although channelized interfaces are generally thought of as logical or virtual, the Junos OS sees T3, T1, and NxDS0 interfaces within a channelized IQ or IQE PIC as physical interfaces. For example, both `t3-0/0/0` and `t3-0/0/0:1` are treated as physical interfaces by the Junos OS. In contrast, `t3-0/0/0.2` and `t3-0/0/0:1.2` are considered logical interfaces because they have the `.2` at the end of the interface names.

Interface Naming for a Routing Matrix Based on a TX Matrix Router

A routing matrix based on a Juniper Networks TX Matrix router is a multichassis architecture composed of one TX Matrix router and from one to four interconnected T640 routers. From the perspective of the user interface, the routing matrix appears as a single router. The TX Matrix router controls all the T640 routers, as shown in [Figure 3 on page 41](#).

Figure 3: Routing Matrix

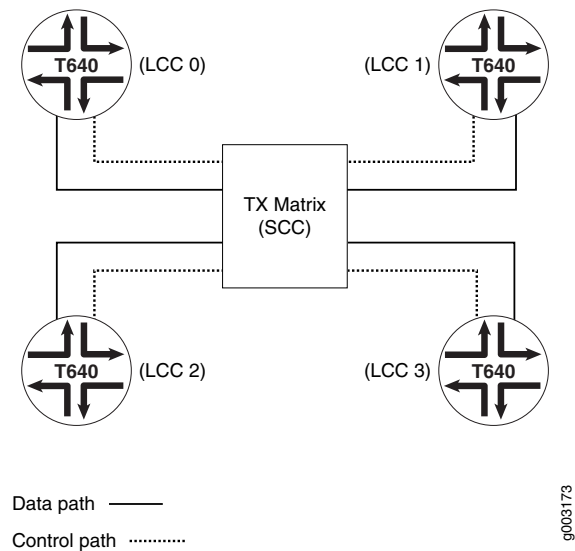

A TX Matrix router is also referred to as a *switch-card chassis* (SCC). The CLI uses `scc` to refer to the TX Matrix router. A T640 router in a routing matrix is also referred to as a *line-card chassis* (LCC). The CLI uses `lcc` as a prefix to refer to a specific T640 router.

LCCs are assigned numbers 0 through 3, depending on the hardware setup and connectivity to the TX Matrix router. For more information, see the [TX Matrix Router Hardware Guide](#). A routing matrix can have up to four T640 routers, and each T640 router has up to eight FPCs. Therefore, the routing matrix as a whole can have up to 32 FPCs (0 through 31).

In the Junos OS CLI, an interface name has the following format:

type-fpc/pic/port

When you specify the **fpc** number for a T640 router in a routing matrix, the Junos OS determines which T640 router contains the specified FPC based on the following assignment:

- On LCC 0, FPC hardware slots 0 through 7 are configured as 0 through 7.
- On LCC 1, FPC hardware slots 0 through 7 are configured as 8 through 15.
- On LCC 2, FPC hardware slots 0 through 7 are configured as 16 through 23.
- On LCC 3, FPC hardware slots 0 through 7 are configured as 24 through 31.

For example, the 1 in **se-1/0/0** refers to FPC hardware slot 1 on the T640 router labeled **lcc0**. The 11 in **t1-11/2/0** refers to FPC hardware slot 3 on the T640 router labeled **lcc1**. The 20 in **so-20/0/1** refers to FPC hardware slot 4 on the T640 router labeled **lcc2**. The 31 in **t3-31/1/0** refers to FPC hardware slot 7 on the T640 router labeled **lcc3**.

[Table 29 on page 42](#) summarizes the FPC numbering for a T640 router in a routing matrix.

Table 29: FPC Numbering for T640 Routers in a Routing Matrix

LCC Numbers Assigned to the T640 Router	Configuration Numbers
0	0 through 7
1	8 through 15
2	16 through 23
3	24 through 31

[Table 30 on page 42](#) lists each FPC hardware slot and the corresponding configuration numbers for LCCs 0 through 3.

Table 30: One-to-One FPC Numbering for T640 Routers in a Routing Matrix

FPC Numbering	T640 Routers							
LCC 0								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	0	1	2	3	4	5	6	7
LCC 1								
Hardware Slots	0	1	2	3	4	5	6	7


Table 30: One-to-One FPC Numbering for T640 Routers in a Routing Matrix (continued)

FPC Numbering	T640 Routers							
Configuration Numbers	8	9	10	11	12	13	14	15
LCC 2								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	16	17	18	19	20	21	22	23
LCC 3								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	24	25	26	27	28	29	30	31

Interface Naming for a Routing Matrix Based on a TX Matrix Plus Router

A routing matrix based on a Juniper Networks TX Matrix Plus Router is a multichassis architecture composed of one TX Matrix Plus router and from one to four interconnected T1600 routers. From the perspective of the user interface, the routing matrix appears as a single router. The TX Matrix Plus router controls all the T1600 routers, as shown in [Figure 4 on page 43](#).

Figure 4: Routing Matrix Based on a TX Matrix Plus Router

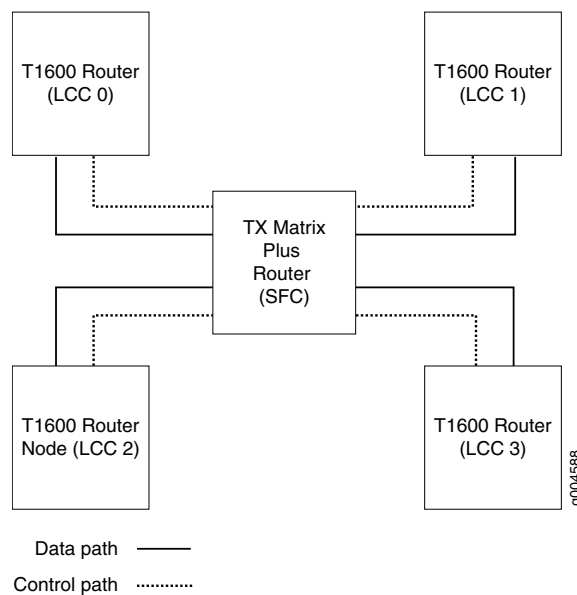

A TX Matrix Plus router is also referred to as a *switch-fabric chassis* (SFC). The CLI uses **sfc** to refer to the TX Matrix Plus router. A T1600 router in a routing matrix is also referred to as a *line-card chassis* (LCC). The CLI uses **lcc** as a prefix to refer to a specific T1600 router.

LCCs are assigned numbers, 0 through 3, depending on the hardware setup and connectivity to the TX Matrix Plus router. For more information, see the *TX Matrix Plus Router Hardware Guide*. A routing matrix based on a TX Matrix Plus router can have up to four T1600 routers, and each T1600 router has up to eight FPCs. Therefore, the routing matrix as a whole can have up to 32 FPCs (0 through 31).

In the Junos OS CLI, an interface name has the following format:

type-fpc/pic/port

When you specify the **fpc** number for a T1600 router in a routing matrix, the Junos OS determines which T1600 router contains the specified FPC based on the following assignment:

- On LCC 0, FPC hardware slots 0 through 7 are configured as 0 through 7.
- On LCC 1, FPC hardware slots 0 through 7 are configured as 8 through 15.
- On LCC 2, FPC hardware slots 0 through 7 are configured as 16 through 23.
- On LCC 3, FPC hardware slots 0 through 7 are configured as 24 through 31.

For example, the 1 in **se-1/0/0** refers to FPC hardware slot 1 on the T1600 router labeled **lcc0**. The 11 in **t1-11/2/0** refers to FPC hardware slot 3 on the T1600 router labeled **lcc1**. The 20 in **so-20/0/1** refers to FPC hardware slot 4 on the T1600 router labeled **lcc2**. The 31 in **t3-31/1/0** refers to FPC hardware slot 7 on the T1600 router labeled **lcc3**.

[Table 31 on page 44](#) summarizes the FPC numbering for a routing matrix based on a TX Matrix Plus router.

Table 31: FPC Numbering for T1600 Routers in a Routing Matrix

LCC Numbers Assigned to the T1600 Router	Configuration Numbers
0	0 through 7
1	8 through 15
2	16 through 23
3	24 through 31

[Table 32 on page 44](#) lists each FPC hardware slot and the corresponding configuration numbers for LCCs 0 through 3.

Table 32: One-to-One FPC Numbering for T1600 Routers in a Routing Matrix

FPC Numbering	T1600 Routers							
	LCC 0							
Hardware Slots	0	1	2	3	4	5	6	7

Table 32: One-to-One FPC Numbering for T1600 Routers in a Routing Matrix (continued)

FPC Numbering	T1600 Routers							
Configuration Numbers	0	1	2	3	4	5	6	7
LCC 1								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	8	9	10	11	12	13	14	15
LCC 2								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	16	17	18	19	20	21	22	23
LCC 3								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	24	25	26	27	28	29	30	31

Chassis Interface Naming

You configure some PIC properties, such as framing, at the **[edit chassis]** hierarchy level. Chassis interface naming varies depending on the routing hardware.

- To configure PIC properties for a standalone router, you must specify the FPC and PIC numbers, as follows:

```
[edit chassis]
fpc slot-number {
  pic pic-number {
    ...
  }
}
```

- To configure PIC properties for a T640 or T1600 router configured in a routing matrix, you must specify the LCC, FPC, and PIC numbers, as follows:

```
[edit chassis]
lcc lcc-number {
  fpc slot-number { # Use the hardware FPC slot number
    pic pic-number {
      ...
    }
  }
}
```

For the FPC slot in a T640 router in a routing matrix, specify the actual hardware slot number, as labeled on the T640 router chassis. Do not use the corresponding software FPC configuration numbers shown in [Table 30 on page 42](#).


For the FPC slot in a T1600 router in a routing matrix, specify the actual hardware slot number, as labeled on the T1600 router chassis. Do not use the corresponding software FPC configuration numbers shown in [Table 31 on page 44](#).

For more information about the **[edit chassis]** hierarchy, see the *Junos OS Administration Library*.

Examples: Interface Naming

This section provides examples of naming interfaces. For an illustration of where slots, PICs, and ports are located, see [Figure 5 on page 46](#).

Figure 5: Interface Slot, PIC, and Port Locations

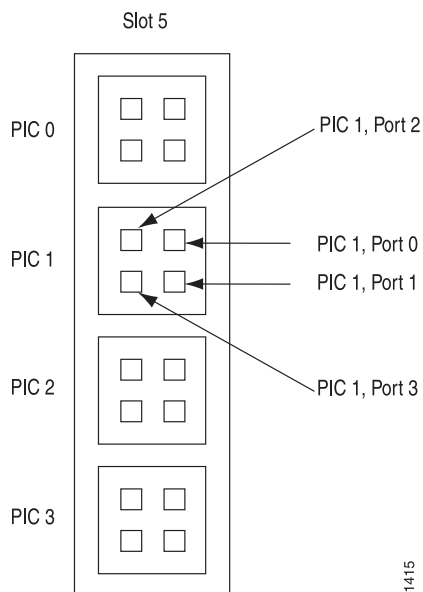

For an FPC in slot 1 with two OC3 SONET/SDH PICs in PIC positions 0 and 1, each PIC with two ports uses the following names:

```
so-1/0/0.0
so-1/0/1.0
so-1/1/0.0
so-1/1/1.0
```

An OC48 SONET/SDH PIC in slot 1 and in concatenated mode appears as a single FPC with a single PIC, which has a single port. If this interface has a single logical unit, it has the following name:

```
so-1/0/0.0
```

An OC48 SONET/SDH PIC in slot 1 and in channelized mode has a number for each channel. For example:

```
so-1/0/0:0
so-1/0/0:1
```

For an FPC in slot 1 with a Channelized OC12 PIC in PIC position 2, the DS3 channels have the following names:

```
t3-1/2/0:0
t3-1/2/0:1
t3-1/2/0:2
...
t3-1/2/0:11
```

For an FPC in slot 1 with four OC12 ATM PICs (the FPC is fully populated), the four PICs, each with a single port and a single logical unit, have the following names:

```
at-1/0/0.0
at-1/1/0.0
at-1/2/0.0
at-1/3/0.0
```

In a routing matrix on the T640 router labeled **lcc1**, for an FPC in slot 5 with four SONET OC192 PICs, the four PICs, each with a single port and a single logical unit, have the following names:

```
so-13/0/0.0
so-13/1/0.0
so-13/2/0.0
so-13/3/0.0
```

For an FPC in slot 1 with one 4-port ISDN BRI interface card, port 4 has the following name:

```
br-1/0/4
```

The first B-channel, the second B-channel, and the control channel have the following names:

```
bc-1/0/4:1
bc-1/0/4:2
dc-1/0/4:0
```

Related Documentation

- [Router Interfaces Overview on page 4](#)
- [Physical Part of an Interface Name on page 60](#)
- [Supported Routing Engines by Chassis](#)

Interface Encapsulations Overview

Table 33 on page 48 lists encapsulation support by interface type.

Table 33: Encapsulation Support by Interface Type

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
ae —Aggregated Ethernet interface	ethernet-ccc —Ethernet cross-connect	dix —Ethernet DIXv2 (RFC 894)
	extended-vlan-ccc —Nonstandard TPID tagging for a cross-connect	vlan-ccc —802.1Q tagging for a cross-connect
	extended-vlan-vpls —Extended VLAN virtual private LAN service	
	flexible-ethernet-services —Allows per-unit Ethernet encapsulation configuration	
	vlan-ccc —802.1Q tagging for a cross-connect	
	ethernet-vpls —Ethernet virtual private LAN service	
	vlan-vpls —VLAN virtual private LAN service	
as —Aggregated SONET/SDH interface	cisco-hdlc —Cisco-compatible HDLC framing	NA
	ppp —Serial PPP device	
at —ATM1 interface	atm-ccc-cell-relay —ATM cell relay encapsulation for a cross-connect	atm-ccc-cell-relay —ATM cell relay for CCC
	atm-pvc —ATM permanent virtual circuits	atm-ccc-vc-mux —ATM VC for CCC
	ethernet-over-atm —Ethernet over ATM encapsulation	atm-cisco-nlpid —Cisco-compatible ATM NLPID encapsulation
		atm-nlpid —ATM NLPID encapsulation
		atm-snap —ATM LLC/SNAP encapsulation
		atm-tcc-snap —ATM LLC/SNAP for a translational cross-connect
		atm-tcc-vc-mux —ATM VC for a translational cross-connect
		atm-vc-mux —ATM VC multiplexing
		ether-over-atm-llc —Ethernet over ATM (LLC/SNAP) encapsulation

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
at —ATM2 intelligent queuing (IQ) interface	atm-ccc-cell-relay —ATM cell relay encapsulation for a cross-connect atm-pvc —ATM permanent virtual circuits ethernet-over-atm —Ethernet over ATM encapsulation	atm-ccc-cell-relay —ATM cell relay for CCC atm-ccc-vc-mux —ATM VC for CCC atm-cisco-nlpid —Cisco-compatible ATM NLPID encapsulation atm-mlppp-llc —ATM MLPPP over AAL5/LLC atm-nlpid —ATM NLPID encapsulation atm-ppp-llc —ATM PPP over AAL5/LLC atm-ppp-vc-mux —ATM PPP over raw AAL5 atm-snap —ATM LLC/SNAP encapsulation atm-tcc-snap —ATM LLC/SNAP for a translational cross-connect atm-tcc-vc-mux —ATM VC for a translational cross-connect atm-vc-mux —ATM VC multiplexing ether-over-atm-llc —Ethernet over ATM (LLC/SNAP) encapsulation ether-vpls-over-atm-llc —Ethernet VPLS over ATM (bridging) encapsulation
bcm —Gigabit Ethernet internal interfaces	NA	NA
br —Integrated Services Digital Network (ISDN) interface	NA	NA
ci —Container interface	cisco-hdlc —Cisco-compatible HDLC framing ppp —Serial PPP device	aps —SONET interface required for APS configuration.

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
ds —DS0 interface	cisco-hdlc —Cisco-compatible HDLC framing cisco-hdlc-ccc —Cisco-compatible HDLC framing for a cross-connect cisco-hdlc-tcc —Cisco-compatible HDLC framing for a translational cross-connect extended-frame-relay-ccc —Any Frame Relay DLCI for a cross-connect extended-frame-relay-tcc —Any Frame Relay DLCI for a translational cross-connect flexible-frame-relay —Multiple Frame Relay encapsulations frame-relay —Frame Relay encapsulation frame-relay-ccc —Frame Relay for a cross-connect frame-relay-port-ccc —Frame Relay port encapsulation for a cross-connect frame-relay-tcc —Frame Relay for a translational cross-connect multilink-frame-relay-uni-nni —Multilink Frame Relay UNI NNI (FRF.16) encapsulation ppp —Serial PPP device ppp-ccc —Serial PPP device for a cross-connect ppp-tcc —Serial PPP device for a translational cross-connect	frame-relay-ccc —Frame Relay DLCI for CCC frame-relay-ppp —PPP over Frame Relay frame-relay-tcc —Frame Relay DLCI for a translational cross-connect
dsc —Discard interface	NA	NA

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
e1 —E1 interface (including channelized STM1-to-E1 interfaces)	cisco-hdlc —Cisco-compatible HDLC framing	frame-relay-ccc —Frame Relay DLCI for CCC
	cisco-hdlc-ccc —Cisco-compatible HDLC framing for a cross-connect	frame-relay-ppp —PPP over Frame Relay
	cisco-hdlc-tcc —Cisco-compatible HDLC framing for a translational cross-connect	frame-relay-tcc —Frame Relay DLCI for a translational cross-connect
	extended-frame-relay-ccc —Any Frame Relay DLCI for a cross-connect	
	extended-frame-relay-tcc —Any Frame Relay DLCI for a translational cross-connect	
	flexible-frame-relay —Multiple Frame Relay encapsulations	
	frame-relay —Frame Relay encapsulation	
	frame-relay-ccc —Frame Relay for a cross-connect	
	frame-relay-port-ccc —Frame Relay port encapsulation for a cross-connect	
	frame-relay-tcc —Frame Relay for a translational cross-connect	
	multilink-frame-relay-uni-nni —Multilink Frame Relay UNI NNI (FRF.16) encapsulation	
	ppp —Serial PPP device	
	ppp-ccc —Serial PPP device for a cross-connect	
	ppp-tcc —Serial PPP device for a translational cross-connect	

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
e3 —E3 interface (including E3 IQ and IQE interfaces)	cisco-hdlc —Cisco-compatible HDLC framing	frame-relay-ccc —Frame Relay DLCI for CCC
	cisco-hdlc-ccc —Cisco-compatible HDLC framing for a cross-connect	frame-relay-ppp —PPP over Frame Relay
	cisco-hdlc-tcc —Cisco-compatible HDLC framing for a translational cross-connect	frame-relay-tcc —Frame Relay DLCI for a translational cross-connect
	extended-frame-relay-ccc —Any Frame Relay DLCI for a cross-connect	
	extended-frame-relay-tcc —Any Frame Relay DLCI for a translational cross-connect	
	flexible-frame-relay —Multiple Frame Relay encapsulations	
	frame-relay —Frame Relay encapsulation	
	frame-relay-ccc —Frame Relay for a cross-connect	
	frame-relay-port-ccc —Frame Relay port encapsulation for a cross-connect	
	frame-relay-tcc —Frame Relay for a translational cross-connect	
	ppp —Serial PPP device	
	ppp-ccc —Serial PPP device for a cross-connect	
	ppp-tcc —Serial PPP device for a translational cross-connect	
em —Management and internal Ethernet interfaces	NA	NA

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
fe —Fast Ethernet interface	ethernet-ccc —Ethernet cross-connect ethernet-tcc —Ethernet translational cross-connect ethernet-vpls —Ethernet virtual private LAN service extended-vlan-ccc —Nonstandard TPID tagging for a cross-connect extended-vlan-tcc —802.1Q tagging for a translational cross-connect extended-vlan-vpls —Extended VLAN virtual private LAN service vlan-ccc —802.1Q tagging for a cross-connect vlan-vpls —VLAN virtual private LAN service	dix —Ethernet DIXv2 (RFC 894) vlan-ccc —802.1Q tagging for a cross-connect vlan-vpls —VLAN virtual private LAN service
fxp —Management and internal Ethernet interfaces	NA	NA
ge —Gigabit Ethernet interface (including Gigabit Ethernet IQ interfaces)	ethernet-ccc —Ethernet cross-connect ethernet-tcc —Ethernet translational cross-connect ethernet-vpls —Ethernet virtual private LAN service extended-vlan-ccc —Nonstandard TPID tagging for a cross-connect extended-vlan-tcc —802.1Q tagging for a translational cross-connect extended-vlan-vpls —Extended VLAN virtual private LAN service flexible-ethernet-services —Allows per-unit Ethernet encapsulation configuration vlan-ccc —802.1Q tagging for a cross-connect vlan-vpls —VLAN virtual private LAN service	dix —Ethernet DIXv2 (RFC 894) vlan-ccc —802.1Q tagging for a cross-connect vlan-tcc —802.1Q tagging for a translational cross-connect vlan-vpls —VLAN virtual private LAN service
ixgbe —10-Gigabit Ethernet internal interfaces	NA	NA
lo —Loopback interface; the Junos OS automatically configures one loopback interface (lo0)	NA	NA

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
ls —Link services interface	multilink-frame-relay-uni-nni —Multilink Frame Relay UNI NNI (FRF.16) encapsulation	multilink-frame-relay-end-to-end —Multilink Frame Relay end-to-end (FRF.15) multilink-ppp —Multilink PPP
lsq —Link services IQ interface	multilink-frame-relay-uni-nni —Multilink Frame Relay UNI NNI (FRF.16) encapsulation	multilink-frame-relay-end-to-end —Multilink Frame Relay end-to-end (FRF.15) multilink-ppp —Multilink PPP
lt —Logical tunnel interface	NA	ethernet —Ethernet service ethernet-vpls —Ethernet virtual private LAN service ethernet-ccc —Ethernet cross-connect frame-relay —Frame Relay encapsulation frame-relay-ccc —Frame Relay for a cross-connect vlan —VLAN service vlan-ccc —802.1Q tagging for a cross-connect vlan-vpls —VLAN virtual private LAN service
ml —Multilink interface (including Multilink Frame Relay and MLPPP)	NA	multilink-frame-relay-end-to-end —Multilink Frame Relay end-to-end (FRF.15) multilink-ppp —Multilink PPP

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
se —Serial interface (including EIA-530, V.35, and X.21 interfaces)	cisco-hdlc —Cisco-compatible HDLC framing	frame-relay-ccc —Frame Relay DLCI for CCC
	cisco-hdlc-ccc —Cisco-compatible HDLC framing for a cross-connect	frame-relay-ppp —PPP over Frame Relay
	cisco-hdlc-tcc —Cisco-compatible HDLC framing for a translational cross-connect	frame-relay-tcc —Frame Relay DLCI for a translational cross-connect
	frame-relay —Frame Relay encapsulation	
	frame-relay-ccc —Frame Relay for a cross-connect	
	frame-relay-port-ccc —Frame Relay port encapsulation for a cross-connect	
	frame-relay-tcc —Frame Relay for a translational cross-connect	
	ppp —Serial PPP device	
	ppp-ccc —Serial PPP device for a cross-connect	
	ppp-tcc —Serial PPP device for a translational cross-connect	

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
so—SONET/SDH interface	<p>cisco-hdlc—Cisco-compatible HDLC framing</p> <p>cisco-hdlc-ccc—Cisco-compatible HDLC framing for a cross-connect</p> <p>cisco-hdlc-tcc—Cisco-compatible HDLC framing for a translational cross-connect</p> <p>extended-frame-relay-ccc—Any Frame Relay DLCI for a cross-connect</p> <p>extended-frame-relay-tcc—Any Frame Relay DLCI for a translational cross-connect</p> <p>flexible-frame-relay—Multiple Frame Relay encapsulations</p> <p>frame-relay—Frame Relay encapsulation</p> <p>frame-relay-ccc—Frame Relay for a cross-connect</p> <p>frame-relay-port-ccc—Frame Relay port encapsulation for a cross-connect</p> <p>frame-relay-tcc—Frame Relay for a translational cross-connect</p> <p>ppp—Serial PPP device</p> <p>ppp-ccc—Serial PPP device for a cross-connect</p> <p>ppp-tcc—Serial PPP device for a translational cross-connect</p>	<p>frame-relay-ccc—Frame Relay DLCI for CCC</p> <p>frame-relay-ppp—PPP over Frame Relay</p> <p>frame-relay-tcc—Frame Relay DLCI for a translational cross-connect</p> <p>multilink-frame-relay-end-to-end—IQE SONET PICs support Multilink Frame Relay end-to-end (FRF.15)</p> <p>multilink-ppp—IQE SONET PICs support Multilink PPP</p>

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
t1 —T1 interface (including channelized DS3-to-DS1 interfaces)	cisco-hdlc —Cisco-compatible HDLC framing	frame-relay-ccc —Frame Relay DLCI for CCC
	cisco-hdlc-ccc —Cisco-compatible HDLC framing for a cross-connect	frame-relay-ppp —PPP over Frame Relay
	cisco-hdlc-tcc —Cisco-compatible HDLC framing for a translational cross-connect	frame-relay-tcc —Frame Relay DLCI for a translational cross-connect
	extended-frame-relay-ccc —Any Frame Relay DLCI for a cross-connect	
	extended-frame-relay-tcc —Any Frame Relay DLCI for a translational cross-connect	
	flexible-frame-relay —Multiple Frame Relay encapsulations	
	frame-relay —Frame Relay encapsulation	
	frame-relay-ccc —Frame Relay for a cross-connect	
	frame-relay-port-ccc —Frame Relay port encapsulation for a cross-connect	
	frame-relay-tcc —Frame Relay for a translational cross-connect	
	multilink-frame-relay-uni-nni —Multilink Frame Relay UNI NNI (FRF.16) encapsulation	
	ppp —Serial PPP device	
	ppp-ccc —Serial PPP device for a cross-connect	
	ppp-tcc —Serial PPP device for a translational cross-connect	

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
t3 —T3 interface (including channelized OC12-to-DS3 interfaces)	cisco-hdlc —Cisco-compatible HDLC framing cisco-hdlc-ccc —Cisco-compatible HDLC framing for a cross-connect cisco-hdlc-tcc —Cisco-compatible HDLC framing for a translational cross-connect extended-frame-relay-ccc —Any Frame Relay DLCI for a cross-connect extended-frame-relay-tcc —Any Frame Relay DLCI for a translational cross-connect flexible-frame-relay —Multiple Frame Relay encapsulations frame-relay —Frame Relay encapsulation frame-relay-ccc —Frame Relay for a cross-connect frame-relay-port-ccc —Frame Relay port encapsulation for a cross-connect frame-relay-tcc —Frame Relay for a translational cross-connect ppp —Serial PPP device ppp-ccc —Serial PPP device for a cross-connect ppp-tcc —Serial PPP device for a translational cross-connect	frame-relay-ccc —Frame Relay DLCI for CCC frame-relay-ppp —PPP over Frame Relay frame-relay-tcc —Frame Relay DLCI for a translational cross-connect
Controller-level channelized IQ interfaces (cau4 , coc1 , coc3 , coc12 , cstm1 , ct1 , ct3 , ce1)	NA	NA
Services interfaces (cp , gr , ip , mo , vt , es , mo , rsp , sp)	NA	NA
Unconfigurable, internally generated interfaces (gre , ipip , learning-chip (lc), lsi , tap , mt , mtun , pd , pe , pimd , pime)	NA	NA



NOTE: You can configure GRE interfaces (**gre-x/y/z**) only for GMPLS control channels. GRE interfaces are not supported or configurable for other applications. For more information about GMPLS, see the *MPLS Applications Feature Guide*.

- Related Documentation**
- [Understanding Transient Interfaces on page 5](#)
 - [Router Interfaces Overview on page 4](#)
 - [Types of Interfaces Overview on page 4](#)

Interface Descriptors Overview

When you configure an interface, you are effectively specifying the properties for a physical interface descriptor. In most cases, the physical interface descriptor corresponds to a single physical device and consists of the following parts:

- The interface name, which defines the media type
- The slot in which the FPC or DPC is located
- The location on the FPC in which the PIC is installed
- The PIC or DPC port
- The interface's channel and logical unit numbers (optional)

Each physical interface descriptor can contain one or more logical interface descriptors. These allow you to map one or more logical (or virtual) interfaces to a single physical device. Creating multiple logical interfaces is useful for ATM, Frame Relay, and Gigabit Ethernet networks, in which you can associate multiple virtual circuits, data-link connections, or virtual LANs (VLANs) with a single interface device.

Each logical interface descriptor can have one or more family descriptors to define the protocol family that is associated with and allowed to run over the logical interface.

The following protocol families are supported:

- Internet Protocol version 4 (IPv4) suite (inet)
- Internet Protocol version 6 (IPv6) suite (inet6)
- Circuit cross-connect (CCC)
- Translational cross-connect (TCC)
- International Organization for Standardization (ISO)
- Multilink Frame Relay end-to-end (MLFR end-to-end)
- Multilink Frame Relay user-to-network interface network-to-network interface (MLFR UNI NNI)
- Multilink Point-to-Point Protocol (MLPPP)
- Multiprotocol Label Switching (MPLS)
- Trivial Network Protocol (TNP)
- (M Series, T Series, and MX Series routers only) Virtual private LAN service (VPLS)

Finally, each family descriptor can have one or more address entries, which associate a network address with a logical interface and hence with the physical interface.

You configure the various interface descriptors as follows:

- You configure the physical interface descriptor by including the **interfaces** *interface-name* statement.
- You configure the logical interface descriptor by including the **unit** statement within the **interfaces** *interface-name* statement or by including the **.logical** descriptor at the end of the interface name, as in **t3-0/0/0.1**, where the logical unit number is 1, as shown in the following examples:

```
[edit]
user@host# set interfaces t3-0/0/0 unit 1
[edit]
user@host# edit interfaces t3-0/0/0.1
[edit interfaces t3-0/0/0]
user@host# set unit 1
```

- You configure the family descriptor by including the **family** statement within the **unit** statement.
- You configure address entries by including the **address** statement within the **family** statement.
- You configure tunnels by including the **tunnel** statement within the **unit** statement.



NOTE: The address of a logical interface cannot be the same as a tunnel interface's source or destination address. If you try to configure a logical interface with a tunnel interface's address or vice versa, a commit failure will occur.

Related Documentation

- [Router Interfaces Overview on page 4](#)

Physical Part of an Interface Name

- [Interface Names for ACX Series Universal Metro Routers on page 60](#)
- [Interface Names for M Series and T Series Routers on page 61](#)
- [MX Series Router Interface Names on page 61](#)
- [Interface Names for PTX Series Routers on page 62](#)

Interface Names for ACX Series Universal Metro Routers

ACX Series routers do not have actual PIC devices. Instead they have built-in network ports on the front panel of the router. These ports are named using the same naming convention used for routers with PIC devices with the understanding that the FPC, PIC and port are pseudo devices. When you display information about one of these ports,

you specify the interface type, the slot for the Flexible PIC Concentrator (FPC), the slot on the FPC for the Physical Interface Card (PIC), and the configured port number.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

type-fpc/pic/port

- See Also**
- *Understanding Encapsulation on an Interface*
 - *Configuring Inverse Multiplexing for ATM (IMA) on ACX Series*

Interface Names for M Series and T Series Routers

On M Series and T Series routers, when you display information about an interface, you specify the interface type, the slot in which the Flexible PIC Concentrator (FPC) is installed, the slot on the FPC in which the Physical Interface Card (PIC) is located, and the configured port number.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

type-fpc/pic/port



NOTE: Exceptions to the *type-fpc/pic/port* physical description include the aggregated Ethernet and aggregated SONET/SDH interfaces, which use the syntax *ae number* and *as number*, respectively.

MX Series Router Interface Names

On MX Series routers when you display information about an interface, you specify the interface type, the Dense Port Concentrator (DPC), Flexible PIC Concentrator (FPC), or Modular Port Concentrator (MPC) slot, the PIC or MIC slot, and the configured port number.



NOTE: Although the MX Series routers use DPCs, FPCs, MPCs, MICs, and PICs, command syntax in this book is shown as *fpc/pic/port* for simplicity.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the DPC, FPC or MPC, MIC or PIC, and port numbers:

type-fpc/pic/port

- *fpc*—Slot in which the DPC, FPC, or MPC is installed.
- *pic*—Slot on the FPC in which the PIC is located.

For DPCs, MICs, and the 16-port MPC, the PIC value is a logical grouping of ports and varies on different platforms.

- *port*—Port number on the DPC, PIC, MPC, or MIC.

Interface Names for PTX Series Routers

On PTX Series Packet Transport Routers, when you display information about an interface, you specify the interface type, the slot in which the Flexible PIC Concentrator (FPC) is installed, the slot on the FPC in which the Physical Interface Card (PIC) is located, and the configured port number.



NOTE:

- The PTX router supports Ethernet type interfaces only. The media type portion of the physical interface name, *type* supports the Ethernet interface type only: **et**.
 - In the CLI, all PTX3000 PICs are represented as **pic0**. For more information, see *PTX3000 PIC Description*
-

In the physical part of the interface name, a hyphen (-) separates the media type (**et**) from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

```
type-fpc/pic/port
```

Related Documentation

- [Interface Naming Overview on page 33](#)
- [Logical Part of an Interface Name on page 40](#)

Displaying Interface Configurations Overview

To display a configuration, use either the **show** command in configuration mode or the **show configuration** top-level command. Interfaces are listed in numerical order, from lowest to highest slot number, then from lowest to highest PIC number, and finally from lowest to highest port number.

Related Documentation

- [Router Interfaces Overview on page 4](#)

CHAPTER 2

Configuring Physical Interface Properties

- [Physical Interface Configuration Statements Overview on page 64](#)
- [Physical Interfaces Properties Statements List on page 74](#)
- [Configuring Interface Ranges on page 90](#)
- [Specifying an Aggregated Interface on page 100](#)
- [Media MTU Overview on page 100](#)
- [Media MTU Sizes by Interface Type on page 101](#)
- [Configuring the Media MTU on ACX Series Routers on page 110](#)
- [Encapsulation Overhead by Interface Encapsulation Type on page 113](#)
- [Configuring Interface Description on page 114](#)
- [Configuring the Media MTU on page 115](#)
- [Configuring the Interface Speed on page 116](#)
- [Configuring the Link Characteristics on page 122](#)
- [Interface Alias Names Overview on page 123](#)
- [Example: Adding an Interface Alias Name on page 124](#)
- [Clock Source Overview on page 128](#)
- [Configuring the Clock Source on page 129](#)
- [Configuring Interface Encapsulation on Physical Interfaces on page 130](#)
- [Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 133](#)
- [Configuring Keepalives on page 135](#)
- [Configuring the PPP Challenge Handshake Authentication Protocol on page 137](#)
- [Configuring the PPP Password Authentication Protocol On a Physical Interface on page 140](#)
- [Configuring the PPP Authentication Protocol on page 143](#)
- [PPP Encapsulation on ACX Series Routers on page 144](#)
- [Configuring Interface Encapsulation on Physical Interfaces in ACX Series on page 146](#)
- [Configuring PPP Address and Control Field Compression on page 150](#)
- [Configuring the PPP Protocol Field Compression on page 152](#)
- [Monitoring a PPP Session on page 153](#)

- [Tracing Operations of the pppd Process on page 154](#)
- [Configuring the Router as a DCE with Frame Relay Encapsulation on page 155](#)
- [Receive and Transmit Leaky Bucket Properties Overview on page 156](#)
- [Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 157](#)
- [Understanding Unidirectional Traffic Flow on Physical Interfaces on page 158](#)
- [Enabling Unidirectional Traffic Flow on Physical Interfaces on page 159](#)
- [Physical Interface Damping Overview on page 160](#)
- [Damping Shorter Physical Interface Transitions on page 166](#)
- [Damping Longer Physical Interface Transitions on page 167](#)
- [Example: Configuring Physical Interface Damping on page 169](#)
- [Configuring Multiservice Physical Interface Properties on page 171](#)
- [Enabling or Disabling SNMP Notifications on Physical Interfaces on page 172](#)
- [Configuring Accounting for the Physical Interface on page 173](#)
- [Disabling a Physical Interface on page 175](#)

Physical Interface Configuration Statements Overview

The software driver for each network media type sets reasonable default values for general interface properties, such as the interface's maximum transmission unit (MTU) size, receive and transmit leaky bucket properties, link operational mode, and clock source.

M Series, MX Series, and T Series routers are factory configured according to the specific router, its features, and its physical interfaces. This section includes a default configuration example showing the statements used to configure the physical interfaces properties. Additional statements are used to set properties for specific interface types and are described in ["Physical Interfaces Properties Statements List" on page 74](#).

To modify any of the default general interface properties, include the appropriate statements at the `[edit interfaces interface-name]` hierarchy level:



NOTE: The following configuration hierarchy and its included statements are shown only as an example of a configuration statement hierarchy and should not be referenced for resolving actual configurations. For information on a specific hierarchy level, see the hierarchy level document for that specific hierarchy, for example `[edit interfaces]` Hierarchy Level.

```
interfaces {
  traceoptions {
    file filename <files number> <match regular-expression> <size size> <world-readable |
      no-world-readable>;
    flag flag <disable>;
  }
  interface-name {
    accounting-profile name;
```

```

aggregated-ether-options {
  (flow-control | no-flow-control);
  lacp {
    (active | passive);
    link-protection {
      disable;
      (revertive | non-revertive (Interfaces));
      periodic interval;
      system-priority priority;
    }
    link-protection;
    link-speed speed;
    (loopback | no-loopback);
    minimum-links number;
    source-address-filter {
      mac-address
    }
    (source-filtering | no-source-filtering);
  }
aggregated-sonet-options {
  link-speed speed | mixed;
  minimum-links number;
}
atm-options {
  cell-bundle-size cells;
  ilmi;
  linear-red-profiles profile-name {
    high-plp-max-threshold percent;
    low-plp-max-threshold percent;
    queue-depth cells high-plp-threshold percent low-plp-threshold percent;
  }
  mpls {
    pop-all-labels {
      required-depth number;
    }
  }
  pic-type (atm1 | atm2);
  plp-to-clp;
  promiscuous-mode {
    vpi vpi-identifier;
  }
  scheduler-maps map-name {
    forwarding-class class-name {
      epd-threshold cells plp1 cells;
      linear-red-profile profile-name;
      priority (high | low);
      transmit-weight (cells number | percent number);
    }
    vc-cos-mode (alternate | strict);
  }
  vpi vpi-identifier {
    maximum-vcs maximum-vcs;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
  }
}

```

```

    }
    oam-period (seconds | disable);
    shaping {
        (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
         rate burst length);
        queue-length number;
    }
}
clocking clock-source;
data-input (system | interface interface-name);
dce;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
description text;
dialer-options {
    pool pool-name <priority priority>;
}

```

```

disable;
ds0-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    byte-encoding (nx56 | nx64);
    fcs (16 | 32);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback payload;
    start-end-flag (filler | shared);
}
e1-options {
    bert-error-rate rate;
    bert-period seconds;
    fcs (16 | 32);
    framing (g704 | g704-no-crc4 | unframed);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback (local | remote);
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
e3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout feet;
    compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
    fcs (16 | 32);
    framing (g.751 | g.832);
    idle-cycle-flag (filler | shared);
    invert-data;
    loopback (local | remote);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
    (unframed | no-unframed);
}
encapsulation type;
es-options {
    backup-interface es-fpc/pic/port;
}
fastether-options {
    802.3ad aex;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    ingress-rate-limit rate;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
}
source-address-filter {

```

```
mac-address;
}
(source-filtering | no-source-filtering);
}
flexible-vlan-tagging;
gigether-options {
    802.3ad aex;
    (asynchronous-notification | no-asynchronous-notification);
    (auto-negotiation | no-auto-negotiation) remote-fault <local-interface-online |
        local-interface-offline>;
    auto-reconnect seconds;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
    source-address-filter {
        mac-address;
    }
    (source-filtering | no-source-filtering);
    ethernet-switch-profile {
        (mac-learn-enable | no-mac-learn-enable);
        tag-protocol-id [ tpids ];
        ethernet-policer-profile {
            input-priority-map {
                ieee802.1p premium [ values ];
            }
            output-priority-map {
                classifier {
                    premium {
                        forwarding-class class-name {
                            loss-priority (high | low);
                        }
                    }
                }
            }
        }
        policer cos-policer-name {
            aggregate {
                bandwidth-limit bps;
                burst-size-limit bytes;
            }
            premium {
                bandwidth-limit bps;
                burst-size-limit bytes;
            }
        }
    }
}
(gratuitous-arp-reply | no-gratuitous-arp-reply);
hold-time up milliseconds down milliseconds;
interface-set interface-set-name {
```



```

interface ethernet-interface-name {
    (unit unit-number | vlan-tags-outer vlan-tag);
}
}
isdn-options {
    bchannel-allocation (ascending | descending);
    calling-number number;
    pool pool-name <priority priority>;
    spid1 spid-string;
    spid2 spid-string;
    static-tei-val value;
    switch-type (att5e | etsi | nil | ntdms100 | ntt);
    t310 seconds;
    tei-option (first-call | power-up);
}
keepalives <down-count number> <interval seconds> <up-count number>;
link-mode mode;
lmi {
    lmi-type (ansi | itu | c-lmi);
    n391dte number;
    n392dce number;
    n392dte number;
    n393dce number;
    n393dte number;
    t391dte seconds;
    t392dce seconds;
}
lsq-failure-options {
    no-termination-request;
    [ trigger-link-failure interface-name ];
}
mac mac-address;
mlfr-uni-nni-bundle-options {
    acknowledge-retries number;
    acknowledge-timer milliseconds;
    action-red-differential-delay (disable-tx | remove-link);
    cisco-interoperability send-lip-remove-link-for-link-reject;
    drop-timeout milliseconds;
    fragment-threshold bytes;
    hello-timer milliseconds;
    link-layer-overhead percent;
    lmi-type (ansi | itu | c-lmi);
    minimum-links number;
    mrru bytes;
    n391 number;
    n392 number;
    n393 number;
    red-differential-delay milliseconds;
    t391 seconds;
    t392 seconds;
    yellow-differential-delay milliseconds;
    encapsulation type;
}
modem-options {
    dialin (console | routable);
}

```

```

init-command-string initialization-command-string;
}
mtu bytes;
multiservice-options {
    (core-dump | no-core-dump);
    (syslog | no-syslog);
    (dump-on-flow-control);
    flow-control-options {
        down-on-flow-control;
        dump-on-flow-control;
        reset-on-flow-control;
    }
}
native-vlan-id number;
no-gratuitous-arp-request;
no-keepalives;
no-partition {
    interface-type type;
}
optics-options {
    wavelength nm;
    alarm alarm-name {
        (syslog | link-down);
    }
    warning warning-name {
        (syslog | link-down);
    }
}
partition partition-number oc-slice oc-slice-range interface-type type;
timeslots time-slot-range;
passive-monitor-mode;
per-unit-scheduler;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    no-termination-request;
    pap {
        access-profile name;
        local-name name;
        local-password password;
        passive;
    }
}
receive-bucket {
    overflow (discard | tag);
    rate percentage;
}

```

```

    threshold bytes;
}
redundancy-options {
    primary sp-fpc/pic/port;
    secondary sp-fpc/pic/port;
}
schedulers number;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback-mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
services-options {
    inactivity-timeout seconds;
    open-timeout seconds;
    syslog {
        host hostname {
            facility-override facility-name;
            log-prefix prefix-number;
            services priority-level;
        }
    }
}

```

```

    }
  }
  shdsl-options {
    annex (annex-a | annex-b);
    line-rate line-rate;
    loopback (local | remote);
    snr-margin {
      snext margin;
    }
  }
  sonet-options {
    aggregate asx;
    aps {
      advertise-interval milliseconds;
      authentication-key key;
      force;
      hold-time milliseconds;
      lockout;
      neighbor address;
      paired-group group-name;
      preserve-interface;
      protect-circuit group-name;
      request;
      revert-time seconds;
      switching-mode (bidirectional | unidirectional);
      working-circuit group-name;
    }
    bytes {
      c2 value;
      e1-quiet value;
      f1 value;
      f2 value;
      s1 value;
      z3 value;
      z4 value;
    }
    fcs (16 | 32);
    loopback (local | remote);
    mpls {
      pop-all-labels {
        required-depth number;
      }
    }
    path-trace trace-string;
    (payload-scrambler | no-payload-scrambler);
    rfc-2615;
    trigger {
      defect ignore;
      hold-time up milliseconds down milliseconds;
    }
    vtmapping (itu-t | klm);
    (z0-increment | no-z0-increment);
  }
  (speed (10m | 100m | 1g | auto) | speed (auto | 1Gbps | 100Mbps | 10Mbps) | speed
    (oc3 | oc12 | oc48));

```

```

stacked-vlan-tagging;
switch-options {
  switch-port port-number {
    (auto-negotiation | no-auto-negotiation);
    speed (10m | 100m | 1g);
    link-mode (full-duplex | half-duplex);
  }
}
multicast-statistics
t1-options {
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
  buildout value;
  byte-encoding (nx56 | nx64);
  crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
  crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
  fcs (16 | 32);
  framing (esf | sf);
  idle-cycle-flag (flags | ones);
  invert-data;
  line-encoding (ami | b8zs);
  loopback (local | payload | remote);
  remote-loopback-respond;
  start-end-flag (filler | shared);
  timeslots time-slot-range;
}
t3-options {
  atm-encapsulation (direct | plcp);
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
  buildout feet;
  (cbit-parity | no-cbit-parity);
  compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate
    value>;
  fcs (16 | 32);
  (feac-loop-respond | no-feac-loop-respond);
  idle-cycle-flag value;
  (long-buildout | no-long-buildout);
  (loop-timing | no-loop-timing);
  loopback (local | payload | remote);
  (mac | no-mac);
  (payload-scrambler | no-payload-scrambler);
  start-end-flag (filler | shared);
}
traceoptions {
  flag flag <flag-modifier> <disable>;
}
transmit-bucket {
  overflow discard;
  rate percentage;
  threshold bytes;
}
(traps | no-traps);

```

```

    unidirectional;
    vlan-tagging;
    vlan-vci-tagging;
    unit logical-unit-number {
        logical-interface-statements;
    }
}
}

```

Related • [Router Interfaces Overview on page 4](#)
Documentation

Physical Interfaces Properties Statements List

Table 34 on page 74 lists statements that you can use to configure physical interfaces.

Table 34: Statements for Physical Interface Properties

Statement	Interface Types	Usage Guidelines
802.3ad <i>aex</i>	Aggregated Ethernet interfaces	<i>Aggregated Ethernet Interfaces Overview</i>
access-profile <i>name</i>	Interfaces with Point-to-Point Protocol (PPP) encapsulation	“Configuring the PPP Challenge Handshake Authentication Protocol” on page 137
accounting-profile <i>name</i>	All	“Configuring Accounting for the Physical Interface” on page 173
acfc	Interfaces with PPP encapsulation	<i>Identifying the Access Concentrator</i>
acknowledge-retries <i>number</i>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
acknowledge-timer <i>milliseconds</i>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
action-red-differential-delay (disable-tx remove-link)	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
advertise-interval <i>milliseconds</i>	SONET/SDH interfaces	<i>Configuring APS Timers</i>
aggregate	Gigabit Ethernet intelligent queuing (IQ and IQE) interfaces and Gigabit Ethernet interfaces with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
aggregate <i>asx</i>	Aggregated SONET/SDH interfaces	<i>Configuring Aggregated SONET/SDH Interfaces</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>aggregated-ether-options</code>	Aggregated Ethernet interfaces	<i>Aggregated Ethernet Interfaces Overview</i>
<code>aggregate-ports</code>	SONET/SDH interfaces	<i>Configuring 4-Port OC192 PIC to Operate in OC768-over-OC192 Mode</i>
<code>aggregated-sonet-options</code>	Aggregated SONET/SDH interfaces	<i>Configuring Aggregated SONET/SDH Interfaces</i>
<code>alarm alarm-name (syslog link-down)</code>	10-Gigabit Ethernet interfaces	<i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i>
<code>alias alias-name;</code>	All	“Example: Adding an Interface Alias Name” on page 124
<code>annex (annex-a annex-b)</code>	SONET interfaces using annex-b for MSP switching on M320 and M120 Routers	<i>Configuring Basic Automatic Protect Switching</i>
<code>aps</code>	SONET/SDH interfaces	<i>SONET/SDH Interfaces Overview</i>
<code>atm-encapsulation (direct plcp)</code>	E3 and T3 traffic over Asynchronous Transfer Mode (ATM) interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces</i>
<code>atm-options</code>	ATM1 and ATM2 IQ interfaces	“Interface Encapsulations Overview” on page 48
<code>authentication-key key</code>	SONET/SDH interfaces	<i>SONET/SDH Interfaces Overview</i>
<code>bandwidth-limit bps</code>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
<code>bert-algorithm algorithm</code>	E3, T1, T3, multichannel DS3, channelized interfaces (DS3, OC12, and STM1), and channelized IQ and IQE interfaces (E1 and DS3)	<i>Configuring Interface Diagnostics Tools to Test the Physical Layer Connections</i>
<code>bert-error-rate rate</code>	E1, E3, T1, T3, and channelized interfaces (DS3, OC3, OC12, and STM1)	<i>Configuring Interface Diagnostics Tools to Test the Physical Layer Connections</i>
<code>bert-period seconds</code>	E1, E3, T1, T3, and channelized interfaces (DS3, OC12, and STM1)	<i>Configuring Interface Diagnostics Tools to Test the Physical Layer Connections</i>
Configuring the T1 Buildout <i>value</i>	T1 interfaces	<i>Configuring the T1 Buildout</i>
<code>buildout feet</code>	E3 and T3 traffic over ATM interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
burst-size-limit <i>bytes</i>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
byte-encoding (nx56 nx64)	DS0 and T1 interfaces	<i>Configuring T1 Byte Encoding</i>
bytes [<i>values</i>]	SONET/SDH interfaces	<i>Configuring SONET/SDH Header Byte Values to Identify Error Conditions</i>
cbit-parity no-cbit-parity	T3 interfaces	<i>Disabling T3 C-Bit Parity Mode</i>
cbr <i>rate</i>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
cell-bundle-size <i>cells</i>	ATM2 IQ interfaces using ATM Layer 2 circuit cell-relay transport mode	<i>Configuring the Layer 2 Circuit Cell-Relay Cell Maximum Overview</i>
chap	Interfaces with PPP encapsulation	“Configuring the PPP Challenge Handshake Authentication Protocol” on page 137
cisco-interoperability send-lip-remove-link-for-link-reject	link services IQ (lsq) interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
classifier	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
clocking <i>clock-source</i>	ATM, DS0, E1, E3, SONET/SDH, T1, and T3 interfaces	“Configuring the Clock Source” on page 129
clocking-mode (dce internal loop)	Serial interfaces (EIA-530 and V.35)	“Configuring the Serial Clocking Mode” on page 350
clock-rate <i>rate</i>	Serial interfaces (EIA-530 and V.35)	“Configuring the DTE Clock Rate” on page 351
compatibility-mode <i>mode</i>	E3 and T3 interfaces	<i>Configuring the E3 CSU Compatibility Mode and Configuring the T3 CSU Compatibility Mode</i>
compression	Interfaces with PPP encapsulation	“Configuring the PPP Protocol Field Compression” on page 152
control-polarity (negative positive)	Serial interfaces (X.21)	“Configuring Serial Signal Polarities” on page 355
control-signal (assert de-assert normal)	Serial interfaces (X.21)	“Configuring the Serial Signal Handling” on page 352

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>core-dump</code> <code>no-core-dump</code>)	Adaptive services, monitoring services, and collector interfaces	"Configuring Multiservice Physical Interface Properties" on page 171
<code>cts</code> (ignore normal require)	Serial interfaces (EIA-530 and V.35)	"Configuring the Serial Signal Handling" on page 352
<code>cts-polarity</code> (negative positive)	Serial interfaces (EIA-530 and V.35)	"Configuring Serial Signal Polarities" on page 355
<code>dcd</code> (ignore normal require)	Serial interfaces (EIA-530 and V.35)	"Configuring the Serial Signal Handling" on page 352
<code>dcd-polarity</code> (negative positive)	Serial interfaces (EIA-530 and V.35)	"Configuring Serial Signal Polarities" on page 355
<code>dce</code>	Interfaces with Frame Relay encapsulation	"Configuring the Router as a DCE with Frame Relay Encapsulation" on page 155
<code>default-chap-secret</code> <i>name</i>	Interfaces with Point-to-Point Protocol (PPP) encapsulation	<i>Configuring the PPP Challenge Handshake Authentication Protocol</i>
<code>description</code> <i>text</i>	All	"Configuring Interface Description" on page 114
<code>disable</code>	All	"Disabling a Physical Interface" on page 175 and "Tracing Operations of an Individual Router Interface" on page 363
<code>dot1x</code>	802.1x Port-Based Network Access Control	<i>IEEE 802.1x Port-Based Network Access Control Overview</i>
<code>down-count</code>	ATM interfaces	<i>Configuring the ATM OAM F5 Loopback Cell Threshold</i>
<code>drop-timeout</code> <i>milliseconds</i>	Multilink, link services, and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>ds0-options</code>	DS0 interfaces	<i>Channelized Interfaces Overview</i>
<code>dsr</code> (ignore normal require)	Serial interfaces (EIA-530 and V.35)	"Configuring the Serial Signal Handling" on page 352
<code>dsr-polarity</code> (negative positive)	Serial interfaces (EIA-530 and V.35)	"Configuring Serial Signal Polarities" on page 355
<code>dte-options</code>	Serial interfaces (EIA-530, V.35, and X.21) on M Series and T Series routers	"Configuring the Serial Signal Handling" on page 352

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
dtr signal-handling-option	Serial interfaces (EIA-530 and V.35)	"Configuring the Serial Signal Handling" on page 352
dtr-circuit (balanced unbalanced)	Serial interfaces (EIA-530 and V.35)	"Configuring the Serial DTR Circuit" on page 355
dtr-polarity (negative positive)	Serial interfaces (EIA-530 and V.35)	"Configuring Serial Signal Polarities" on page 355
e1-options	E1 interfaces	E1 Interfaces Overview
e3-options	E3 interfaces	E3 Interfaces Overview
encapsulation type	All interfaces, except loopback and multicast tunnel	"Configuring Interface Encapsulation on Physical Interfaces" on page 130
encoding (nrz nrzi)	Serial interfaces (EIA-530, V.35, and X.21)	"Configuring Serial Line Encoding" on page 358
epd-threshold cells	ATM2 interfaces	ATM2 IQ VC Tunnel CoS Components Overview
es-options	ES interfaces	Junos OS Services Interfaces Library for Routing Devices
ethernet-policer-profile	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC, and the built-in Gigabit Ethernet port on the M7i router)	Configuring Gigabit Ethernet Policers
ethernet-switch-profile	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC, Aggregated Ethernet with Gigabit Ethernet IQ interfaces, and the built-in Gigabit Ethernet port on the M7i router)	Configuring Gigabit Ethernet Policers, Configuring MAC Address Filtering, and Configuring the Management Ethernet Interface
facility-override facility-name	Adaptive services interfaces	Junos OS Services Interfaces Library for Routing Devices
fastether-options	Fast Ethernet interfaces	Ethernet Interfaces Overview
fcs (16 32)	E1/E3, SONET/SDH, and T1/T3 interfaces	Configuring the E1 Frame Checksum, Configuring the E3 Frame Checksum, Configuring the SONET/SDH Frame Checksum, Configuring the T1 Frame Checksum, and Configuring the T3 Frame Checksum

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>feac-loop-respond</code> <code>no-feac-loop-respond</code>)	T3 interfaces	<i>Configuring the T3 FEAC Response</i>
<code>flow-control</code> <code>no-flow-control</code>)	Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces	<i>Configuring Flow Control</i>
<code>force</code>	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>
<code>forwarding-class</code> <i>class-name</i>	ATM2 IQ interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>forwarding-class</code> <i>class-name</i>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<code>fragment-threshold</code> <i>bytes</i>	Multilink, link services, and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>framing</code> <i>framing-type</i>	E1, E3, and T1 interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces, Configuring E1 Framing, and Configuring T1 Framing</i>
<code>framing</code> <i>framing-type</i>	10-Gigabit Ethernet interfaces	<i>10-Gigabit Ethernet Framing Overview</i>
<code>framing</code> <i>framing-type</i>	SONET interfaces	<i>Configuring SONET/SDH Framing Mode for Ports</i>
<code>gether-options</code>	Gigabit Ethernet and Tri-Rate Ethernet copper interfaces	<i>Ethernet Interfaces Overview</i>
(<code>gratuitous-arp-reply</code> <code>no-gratuitous-arp-reply</code>)	Ethernet interfaces	<i>Configuring Gratuitous ARP</i>
<code>hello-timer</code> <i>milliseconds</i>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>high-plp-max-threshold</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>high-plp-threshold</code> <i>percent</i>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>hold-time</code> <i>milliseconds</i>	SONET/SDH interfaces	<i>SONET/SDH Interfaces Overview</i>
<code>hold-time</code> <i>up milliseconds down milliseconds</i>	All interfaces, except aggregated SONET/SDH, generalized routing encapsulation (GRE) tunnel, and IP tunnel	<i>Configuring SONET/SDH Defect Triggers</i>
<code>host</code> <i>hostname</i>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>ieee802.1p premium [values]</code>	Gigabit Ethernet IQ interfaces	<i>Specifying an Input Priority Map</i>
<code>idle-cycle-flag value</code>	E1, E3, T1, and T3 interfaces	<i>Configuring the E1 Idle Cycle Flag, Configuring the E3 Idle Cycle Flag, Configuring the T1 Idle Cycle Flag, and Configuring the T3 Idle Cycle Flag</i>
<code>ignore-all</code>	Serial interfaces (EIA-530, V.35, and X.21)	“Configuring the Serial Signal Handling” on page 352
<code>ilmi</code>	ATM interfaces	<i>Configuring Communication with Directly Attached ATM Switches and Routers</i>
<code>inactivity-timeout seconds</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>indication (ignore normal require)</code>	Serial interfaces (X.21)	“Configuring the Serial Signal Handling” on page 352
<code>indication-polarity (negative positive)</code>	Serial interfaces (X.21)	“Configuring Serial Signal Polarities” on page 355
<code>ingress-rate-limit rate</code>	8-port, 12-port, and 48-port Fast Ethernet interfaces	<i>Configuring the Ingress Rate Limit</i>
<code>input-priority-map</code>	Gigabit Ethernet IQ interfaces	<i>Specifying an Input Priority Map</i>
<code>interface-type type</code>	Channelized IQ and IQE interfaces	<i>Channelized Interfaces Overview</i>
<code>invert-data</code>	DS0, E1, E3, and T1 interfaces	<i>Configuring E1 Data Inversion, Configuring E3 Data Inversion, and Configuring T1 Data Inversion</i>
<code>keepalives <down-count number <interval seconds> <up-count number></code>	Aggregated SONET/SDH, DS0, E1, E3, SONET/SDH, T1, and T3 interfaces	“Configuring Keepalives” on page 135
<code>lACP mode</code>	Aggregated Ethernet interfaces	<i>Configuring LACP for Aggregated Ethernet Interfaces</i>
<code>line-encoding (ami b8zs)</code>	T1 interfaces	<i>Configuring T1 Line Encoding</i>
<code>line-protocol protocol</code>	Serial interfaces (EIA-530, V.35, and X.21)	“Configuring the Serial Line Protocol” on page 346
<code>linear-red-profile profile-name</code>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>linear-red-profiles profile-name</code>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>link-layer-overhead percent</code>	AS PIC link services IQ interfaces (lsq)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>link-mode mode</code>	Management Ethernet (fxp0 or em0) and Fast Ethernet interfaces	“Configuring the Link Characteristics” on page 122 , “Understanding Management Ethernet Interfaces” on page 10
<code>link-speed speed</code>	Aggregated Ethernet interfaces	“Configuring Aggregated Ethernet Link Speed” on page 118
<code>link-speed speed</code>	Aggregated SONET/SDH interfaces	<i>Configuring Aggregated SONET/SDH Interfaces</i>
<code>lmi lmi-options</code>	Interfaces with Frame Relay encapsulation	<i>Configuring Frame Relay Keepalives and Junos OS Services Interfaces Library for Routing Devices</i>
<code>lmi</code>	OAM CFM Ethernet Local Management Interface	<i>Configuring Ethernet Local Management Interface</i>
<code>lmi-type (ansi itu c-lmi)</code>	Link services interfaces and interfaces with Frame Relay encapsulation	<i>Configuring Frame Relay Keepalives</i>
<code>local-name name</code>	Interfaces with PPP encapsulation	“Configuring the PPP Challenge Handshake Authentication Protocol” on page 137
<code>lockout</code>	SONET/SDH interfaces	<i>Configuring Lockout of Protection for SDH Interfaces</i>
<code>log-prefix prefix-number</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>(long-buildout no-long-buildout)</code>	T3 interfaces	<i>Configuring the T3 Line Buildout</i>
<code>(loop-timing no-loop-timing)</code>	Channelized IQ interfaces	<i>Configuring the Channelized T3 Loop Timing</i>
<code>loopback mode</code>	DS0, E1, E3, T1, T3, SHDSL on ATM and SONET/SDH interfaces	<i>Configuring E1 Loopback Capability, Configuring E3 Loopback Capability, Configuring T1 Loopback Capability, Configuring T3 Loopback Capability, Configuring SHDSL Operating Mode on an ATM Physical Interface, Configuring SONET/SDH Loopback Capability to Identify a Problem as Internal or External, and Configuring Ethernet Loopback Capability</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>loopback mode</code>	Ethernet and 10-Gigabit Ethernet interfaces in WAN PHY mode	<i>Configuring Ethernet Loopback Capability</i>
<code>loopback mode</code>	Serial interfaces	“Configuring Serial Loopback Capability” on page 356
<code>(loopback no-loopback)</code>	Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces	<i>Configuring Ethernet Loopback Capability</i>
<code>loss-priority (high low)</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<code>lowest-priority-defect (all-defects err-xcon mac-rem-err-xcon no-defect rem-err-xcon xcon)</code>	Configuring IEEE 802.1ag OAM connectivity-fault management	<i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i>
<code>low-plp-max-threshold percent</code>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>low-plp-threshold percent</code>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>lsq-failure-options</code>	Link services IQ (lsq) interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>mac mac-address</code>	Management Ethernet interface (<code>fxp0</code> or <code>em0</code>)	<i>Configuring the MAC Address on the Management Ethernet Interface, “Understanding Management Ethernet Interfaces” on page 10</i>
<code>(mac-learn-enable no-mac-learn-enable)</code>	Gigabit Ethernet IQ and IQE, Tri-Rate Ethernet copper, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring MAC Address Filtering</i>
<code>master-only;</code>	Management Ethernet (<code>fxp0</code> or <code>em0</code>) and Fast Ethernet interfaces	<i>Configuring a Consistent Management IP Address, “Understanding Management Ethernet Interfaces” on page 10</i>
<code>maximum-vc maximum-vc</code>	ATM interfaces	<i>Configuring the Maximum Number of ATM1 VCs on a VP</i>
<code>mc-ae</code>	Aggregated Ethernet interfaces	<i>Configuring Multichassis Link Aggregation on MX Series Routers</i>
<code>minimum-links number</code>	Multilink, link services, and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>mip-half-function</code>	Connectivity Fault Management	<i>Configuring IEEE 802.3ah OAM Link-Fault Management</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
mlfr-uni-nni-bundle-options bundle-options	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
mpls	10-Gigabit Ethernet interfaces in WAN PHY mode and ATM and SONET/SDH interfaces in passive monitoring mode	<i>Removing MPLS Labels from Incoming Packets, Enabling Packet Flow Monitoring on SONET/SDH Interfaces, and SONET/SDH Interfaces Overview</i>
mrru bytes	Link services and voice services interfaces	<i>Junos Services Interfaces Configuration Guide</i>
mtu bytes	All interfaces, except management Ethernet (fxp0 or em0), loopback, multilink, and multicast tunnel	"Understanding Management Ethernet Interfaces" on page 10 , "Media MTU Overview" on page 100 , "Configuring the Media MTU" on page 115
multicast-statistics	Ethernet, SONET, aggregated Ethernet, and aggregated SONET interfaces.	<i>Configuring Multicast Statistics Collection on Aggregated Ethernet Interfaces, Configuring Multicast Statistics Collection on SONET Interfaces, Configuring Multicast Statistics Collection on Ethernet Interfaces, and Configuring Multicast Statistics Collection on Aggregated SONET Interfaces</i>
multiservice-options	Adaptive services, monitoring services, and collector interfaces	"Configuring Multiservice Physical Interface Properties" on page 171
n391 number	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
n392 number	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
n393 number	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
neighbor address	SONET/SDH interfaces	<i>SONET/SDH Interfaces Overview</i>
no-gratuitous-arp-request	Ethernet interfaces	<i>Configuring Gratuitous ARP</i>
no-keepalives	Interfaces with PPP, Frame Relay, or Cisco High-level Data Link Control (HDLC) encapsulation	"Configuring Keepalives" on page 135
no-partition	Channelized IQ interfaces	<i>Channelized Interfaces Overview</i>
no-termination-request	Link Services IQ (LSQ) interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
oam-liveness	ATM interfaces	<i>Configuring the OAM F4 Cell Flows</i>
oam-period (seconds disable)	ATM interfaces	<i>Defining the ATM OAM F5 Loopback Cell Period</i>
oc-slice oc-slice-range	Channelized OC12 IQ interfaces	<i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i>
open-timeout seconds	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
optics-options	Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces	<i>Ethernet DWDM Interface Wavelength Overview</i>
output-priority-map	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
overflow (discard tag) (Receive bucket)	All interfaces, except ATM, channelized E1, E1, Fast Ethernet, Gigabit Ethernet, and channelized IQ interfaces	"Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion" on page 157
overflow (discard) (Transmit bucket)		
paired-group group-name	SONET/SDH interfaces	<i>Configuring APS Load Sharing</i>
partition partition-number	Channelized IQ interfaces	<i>Channelized Interfaces Overview</i>
passive	Interfaces with PPP encapsulation	"Configuring the PPP Challenge Handshake Authentication Protocol" on page 137
passive-monitor-mode	SONET/SDH interfaces	<i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>
path-trace trace-string	10-Gigabit Ethernet interfaces in WAN PHY mode and SONET/SDH interfaces	<i>Configuring the SONET/SDH Path Trace Identifier for a Circuit</i>
(payload-scrambler no-payload-scrambler)	E3, SONET/SDH, and T3 interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces, Configuring E3 HDLC Payload Scrambling, Configuring SONET/SDH HDLC Payload Scrambling for Link Stability, and Configuring T3 HDLC Payload Scrambling</i>
periodic interval	Aggregated Ethernet interfaces	<i>Configuring LACP for Aggregated Ethernet Interfaces</i>
per-unit-scheduler	IQ interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
ppp	Interfaces with PPP encapsulation	"Configuring the PPP Protocol Field Compression" on page 152
pic-type (atm1 atm2)	ATM2 IQ interfaces	<i>Configuring the ATM PIC Type</i>
plp1 cells	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
plp-to-clp	ATM2 IQ interfaces	<i>Enabling the PLP Setting to Be Copied to the CLP Bit</i>
policer <i>cos-policer-name</i>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
pop-all-labels	ATM and SONET/SDH interfaces in passive monitoring mode	<i>Removing MPLS Labels from Incoming Packets and Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>
ppp-options	Interfaces with PPP encapsulation	"Configuring the PPP Challenge Handshake Authentication Protocol" on page 137
premium	Enhanced Intelligent Queuing (IQE) interfaces (hierarchical policer)	"Applying Policers" on page 228 and <i>Class of Service Feature Guide for Routers and EX9200 Switches</i>
premium	Gigabit Ethernet IQ interfaces (policer)	<i>Configuring Gigabit Ethernet Policers</i>
premium	Gigabit Ethernet IQ interfaces (output priority map)	<i>Configuring MAC Address Filtering</i>
primary <i>sp-fpc/pic/port</i>	Redundant interfaces for adaptive services interfaces (rsp-)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
priority (high low)	ATM2 IQ interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
priority <i>number</i>	Ethernet protocols (OAM CFM)	<i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i>
promiscuous-mode	ATM2 IQ interfaces	<i>Configuring ATM Cell-Relay Promiscuous Mode</i>
protect-circuit <i>group-name</i>	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
queue-depth <i>cells</i>	ATM2 interfaces	ATM2 IQ VC Tunnel CoS Components Overview
queue-length <i>number</i>	ATM1 interfaces	Configuring the ATM1 Queue Length
rate <i>percentage</i>	All interfaces, except ATM, channelized E1, E1, Fast Ethernet, Gigabit Ethernet, and channelized IQ	“Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion” on page 157
receive-bucket	All interfaces, except ATM, Fast Ethernet, and Gigabit Ethernet	“Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion” on page 157
red-differential-delay <i>milliseconds</i>	Link services and voice services interfaces	Junos OS Services Interfaces Library for Routing Devices
redundancy-options	Redundant interfaces for adaptive services interfaces (rsp-)	Junos OS Services Interfaces Library for Routing Devices
remote-loopback-respond	T1 interfaces	Configuring the T1 Remote Loopback Response
request	SONET/SDH interfaces	Configuring Switching Between the Working and Protect Circuits
required-depth <i>number</i>	ATM and SONET/SDH interfaces in passive monitoring mode	Removing MPLS Labels from Incoming Packets and Enabling Packet Flow Monitoring on SONET/SDH Interfaces
revert-time <i>seconds</i>	SONET/SDH interfaces	Configuring Revertive Mode
rfc-2615	SONET/SDH interfaces	Configuring PPP Support on SONET/SDH Interfaces
rts (assert de-assert normal)	Serial interfaces (EIA-530 and V.35)	“Configuring the Serial Signal Handling” on page 352
rts-polarity (negative positive)	Serial interfaces (EIA-530 and V.35)	“Configuring Serial Signal Polarities” on page 355
rtvbr <i>peak rate sustained rate burst length</i>	ATM interfaces	Configuring ATM CBR
scheduler-maps <i>map-name</i>	ATM2 interfaces	ATM2 IQ VC Tunnel CoS Components Overview
schedulers <i>number</i>	Ethernet IQ2 and IQ2-E PICs port interfaces	Junos OS Services Interfaces Library for Routing Devices

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>secondary sp-fpc/pic/port</code>	Redundant interfaces for adaptive services interfaces (rsp-)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>services-options</code>	Services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>serial-options</code>	Serial interfaces (EIA-530, V.35, and X.21)	"Serial Interfaces Overview" on page 343
<code>services priority-level</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>size</code>	All	"Tracing Operations of the Interface Process" on page 364
<code>shaping</code>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
<code>shaping</code>	Circuit Emulation PICs	<i>Configuring ATM QoS or Shaping</i>
<code>sonet-options</code>	SONET/SDH interfaces	<i>SONET/SDH Interfaces Overview</i>
<code>source-address-filter mac-address</code>	Aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, and Gigabit Ethernet interfaces	<i>Configuring MAC Address Filtering for Ethernet Interfaces</i>
<code>(source-filtering no-source-filtering)</code>	Aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, Gigabit Ethernet IQ and IQE, and Gigabit Ethernet interfaces with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring MAC Address Filtering for Ethernet Interfaces</i>
<code>speed (10m 100m 1g auto)</code>	Management Ethernet interface (fxp0 or em0), Tri-Rate Ethernet copper interfaces, and 12-port and 48-port Fast Ethernet interfaces	"Configuring the Interface Speed on Ethernet Interfaces" on page 116, "Understanding Management Ethernet Interfaces" on page 10
<code>speed (oc3 oc12 oc48)</code>	SONET/SDH PICs with SFP	"Configuring SONET/SDH Interface Speed" on page 121
<code>stacked-vlan-tagging</code>	Gigabit Ethernet IQ interfaces	<i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i>
<code>start-end-flag (filler shared)</code>	DS0, E1, E3, T1, and T3 interfaces	<i>Configuring E1 Start and End Flags, Configuring the E3 Start and End Flags, Configuring T1 Start and End Flags, and Configuring T3 Start and End Flags</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
switching-mode (bidirectional unidirectional)	Unchannelized OC3, OC12, and OC48 SONET/SDH interfaces on T Series routers	<i>Configuring Switching Mode</i>
syslog	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
(syslog no-syslog)	Adaptive services, monitoring services, and collector interfaces	" Configuring Multiservice Physical Interface Properties " on page 171
t1-options	T1 interfaces	<i>T1 Interfaces Overview</i>
t3-options	T3 interfaces	<i>T3 Interfaces Overview</i>
t391 seconds	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
t392 number	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
threshold bytes	All interfaces, except ATM, channelized E1, E1, Fast Ethernet, Gigabit Ethernet, and channelized IQ	" Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion " on page 157
timeslots time-slot-range	Channelized T1 IQ and channelized E1 IQ interfaces	<i>Channelized Interfaces Overview</i>
tm (ignore normal require)	Serial interfaces (EIA-530)	" Configuring the Serial Signal Handling " on page 352
tm-polarity (negative positive)	Serial interfaces (EIA-530)	" Configuring Serial Signal Polarities " on page 355
traceoptions	All	" Tracing Operations of an Individual Router Interface " on page 363
traceoptions	All	" Tracing Operations of the Interface Process " on page 364
transmit-bucket	All interfaces, except ATM, Fast Ethernet, Tri-Rate Ethernet copper, and Gigabit Ethernet	" Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion " on page 157
transmit-clock invert	Serial interfaces (EIA-530, V.35, and X.21)	" Configuring the Serial Clocking Mode " on page 350
transmit-weight (cells <i>number</i> percent <i>number</i>)	ATM2 IQ interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
(traps no-traps)	All	“Enabling or Disabling SNMP Notifications on Physical Interfaces” on page 172
trigger defect ignore defect hold-time up milliseconds down milliseconds;	10-Gigabit Ethernet interfaces in WAN PHY mode and ATM over SONET/SDH and SONET/SDH interfaces	<i>Configuring SONET/SDH Defect Triggers</i>
(unframed no-unframed)	E3 IQ interfaces	<i>Configuring E3 IQ and IQE Unframed Mode</i>
unidirectional	10-Gigabit Ethernet interfaces on: <ul style="list-style-type: none"> • MX960 4-Port 10-Gigabit Ethernet DPC • T Series 10-Gigabit Ethernet IQ2 PIC • T Series 10-Gigabit Ethernet IQ2E PIC 	“Enabling Unidirectional Traffic Flow on Physical Interfaces” on page 159
vbr peak rate sustained rate burst length	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
vc-cos-mode (alternate strict)	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
vlan-tagging	Fast Ethernet, Tri-Rate Ethernet copper, and Gigabit Ethernet interfaces	<i>802.1Q VLANs Overview</i>
vlan-vci-tagging	Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet interfaces	“Configuring ATM-to-Ethernet Interworking” on page 286
vpi vpi-identifier	ATM interfaces	<i>Configuring ATM Cell-Relay Promiscuous Mode and Configuring the Maximum Number of ATM1 VCs on a VP</i>
vtmapping	Channelized STM1 interfaces	<i>Configuring Virtual Tributary Mapping of Channelized STM1 Interfaces</i>
warning warning-name (syslog link-down)	10-Gigabit Ethernet interfaces	<i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i>
wavelength nm	Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces	<i>Ethernet DWDM Interface Wavelength Overview</i>
working-circuit group-name	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>
yellow-differential-delay milliseconds	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
(z0-increment no-z0-increment)	SONET/SDH interfaces	<i>Configuring an Incrementing STM ID to Interoperate with Older Equipment in SDH Mode</i>

Related Documentation

- [Junos OS Services Interfaces Library for Routing Devices](#)

Configuring Interface Ranges



NOTE: This task uses Junos OS for EX Series switches that does not support the Enhanced Layer 2 Software (ELS) configuration style. If your switch runs software that supports ELS, see *Configuring Interface Ranges for EX Series Switches with ELS*. For ELS details, see *Using the Enhanced Layer 2 Software CLI*.

The Junos OS allows you to group a range of identical interfaces into an *interface range*. You first specify the group of identical interfaces in the interface range. Then you can apply a common configuration to the specified interface range, reducing the number of configuration statements required and saving time while producing a compact configuration.

- [Configuring Interface Ranges on page 90](#)
- [Expanding Interface Range Member and Member Range Statements on page 94](#)
- [Configuration Inheritance for Member Interfaces on page 96](#)
- [Member Interfaces Inheriting Configuration from Configuration Groups on page 97](#)
- [Interfaces Inheriting Common Configuration on page 98](#)
- [Configuring Inheritance Range Priorities on page 98](#)
- [Configuration Expansion Where Interface Range Is Used on page 99](#)

Configuring Interface Ranges

To configure an interface range, include the **interface-range** statement at the **[edit interfaces]** hierarchy level.

The **interface-range** statement accepts only physical networking interface names in its definition. The following interface types are supported and example CLI descriptors are shown:

- ATM—**at-fpc/pic/port**
- Channelized—**(coc | cstm)n-fpc/pic/port**
- DPC—**xe-fpc/pic/port**

- E1/E3—(e1 | e3)-*fpc/pic/port*
- Ethernet—(xe | ge | fe)-*fpc/pic/port*
- ISDN—*isdn-fpc/pic/port*
- Serial—*se-fpc/pic/port*
- SONET/SDH—*so-fpc/pic/port*
- T1/T3—(t1 | t3)-*fpc/pic/port*

Interfaces can be grouped either as a range of interfaces or using a number range under the **interface-range** statement definition.

Interfaces in an **interface-range** definition can be added as part of a member range or as individual members or multiple members using a number range.

To specify a member range, use the **member-range** statement at the [edit interfaces **interface-range name**] hierarchy level.

To specify interfaces in lexical order, use the **member-range start-range to end-range** statement.

A range for a member statement should contain the following:

- *—All, specifies sequential interfaces from 0 through 47.



CAUTION: The wildcard * in a member statement does not take into account the interface numbers supported by a specific interface type. Irrespective of the interface type, * includes interface numbers ranging from 0 through 47 to the interface group. Therefore, use * in a member statement with caution.

- **num**—Number, specifies one specific interface by its number.
- [**low-high**]—Numbers between low to high, specifies a range of sequential interfaces.
- [**num1, num2, num3**]—Numbers **num1**, **num2**, and **num3** specify multiple specific interfaces.

Example: Specifying an Interface Range Member Range

```
member-range ge-0/0/0 to ge-4/0/40;
```

To specify one or multiple members, use the **member** statement at the [edit interfaces **interface-range name**] hierarchy level.

To specify the list of interface range members individually or for multiple interfaces using regex, use the **member list of interface names** statement.

Example: Specifying an Interface Range Member

```
member ge-0/0/0;
member ge-0/*/*
member ge-0/[1-10]/0;
member ge-0/[1,2,3]/3;
```

Regex or wildcards are not supported for interface-type prefixes. For example, prefixes **ge**, **fe**, and **xe** must be mentioned explicitly.

An **interface-range** definition can contain both **member** and **member-range** statements within it. There is no maximum limit on the number of **member** or **member-range** statements within an interface-range. However, at least one **member** or **member-range** statement must exist within an **interface-range** definition.

Example: Interface Range Common Configuration

Configuration common to an interface range can be added as a part of the **interface-range** definition, as follows:

```
[edit]
interfaces {
+ interface-range foo {
+ member-range ge-1/0/0 to ge-4/0/40;
+ member ge-0/1/1;
+ member ge-5/[1-10]/*;
/*Common configuration is added as part of interface-range definition*/
mtu 256;
hold-time up 10;
ether-options {
    flow-control;
    speed {
        100m;
    }
    802.3ad primary;
}
}
}
```

An **interface-range** definition having just **member** or **member-range** statements and no common configurations statements is valid.

These defined interface ranges can be used in other configuration hierarchies, in places where an **interface** node exists.

Example: Interface-Range foo Used Under the Protocols Hierarchy

```
protocols {
    dot1x {
        authenticator {
            interface foo{
                retries 1;
            }
        }
    }
}
```


foo should be an **interface-range** defined at the **[interfaces]** hierarchy level. In the above example, the **interface** node can accept both individual interfaces and interface ranges.



TIP: To view an interface range in expanded configuration, use the **(show | display inheritance)** command. For more information, see the *CLI User Guide*.

By default, **interface-range** is not available to configure in the CLI where the **interface** statement is available. The following locations are supported; however, some of the hierarchies shown in this list are product specific:

- protocols dot1x authentication interface
- protocols dvmrp interface
- protocols oam ethernet lmi interface
- protocols esis interface
- protocols igmp interface
- protocols igmp-host client *num* interface
- protocols mld-host client *num* interface
- protocols router-advertisement interface
- protocols isis interface
- protocols ldp interface
- protocols oam ethernet link-fault-management interface
- protocols lldp interface
- protocols link-management peer lmp-control-channel interface
- protocols link-management peer control-channel
- protocols link-management te-link *name* interface
- protocols mld interface
- protocols ospf area *id* interface
- protocols pim interface
- protocols router-discovery interface
- protocols rip group *name* neighbour
- protocols ripng group *name* neighbour
- protocols rsvp interface
- protocols snmp interface
- protocols layer2-control bpdu-block interface
- protocols layer2-control mac-rewrite interface

- protocols mpls interface
- protocols stp interface
- protocols rstp interface
- protocols mstp interface
- protocols vstp interface
- protocols mstp msti *id* interface
- protocols mstp msti vlan *id* interface
- protocols vstp vlan *name* interface
- protocols gvrp interface
- protocols igmp-snooping vlan *name* interface
- protocols lldp interface
- protocols lldp-med interface
- protocols sflow interfaces
- ethernet-switching-options analyzer *name* input [egress | ingress] interface
- ethernet-switching-options analyzer *name* output interface
- ethernet-switching-options secure-access-port interface
- ethernet-switching-options interfaces ethernet-switching-options voip interface
- ethernet-switching-options redundant-trunk-group group g1 interface
- ethernet-switching-options redundant-trunk-group group g1 interface
- ethernet-switching-options bpdu-block interface
- poe interface vlans pro-bng-mc1-bsd1 interface

- See Also**
- [Expanding Interface Range Member and Member Range Statements on page 94](#)
 - [Configuration Inheritance for Member Interfaces on page 96](#)
 - [Member Interfaces Inheriting Configuration from Configuration Groups on page 97](#)
 - [Interfaces Inheriting Common Configuration on page 98](#)
 - [Configuring Inheritance Range Priorities on page 98](#)
 - [Configuration Expansion Where Interface Range Is Used on page 99](#)
 - *Physical Interfaces*

Expanding Interface Range Member and Member Range Statements

All **member** and **member-range** statements in an interface range definition are expanded to generate the final list of interface names for the specified interface range.

Example: Expanding Interface Range Member and Member Range Statements

```
[edit]
interfaces {
  interface-range range-1 {
    member-range ge-0/0/0 to ge-4/0/20;
    member ge-10/1/1;
    member ge-5/[0-5]/*;
    /*Common configuration is added part of the interface-range definition*/
    mtu 256;
    hold-time up 10;
    ether-options {
      flow-control;
      speed {
        100m;
      }
      802.3ad primary;
    }
  }
}
```

For the **member-range** statement, all possible interfaces between **start-range** and **end-range** are considered in expanding the members. For example, the following **member-range** statement:

member-range ge-0/0/0 to ge-4/0/20

expands to:

```
[ge-0/0/0, ge-0/0/1 ... ge-0/0/max_ports
ge-0/1/0 ge-0/1/1 ... ge-0/1/max_ports
ge-0/2/0 ge-0/2/1 ... ge-0/2/max_ports
.
.
ge-0/MAX_PICS/0 ... ge-0/max_pics/max_ports
ge-1/0/0 ge-1/0/1 ... ge-1/0/max_ports
.
ge-1/MAX_PICS/0 ... ge-1/max_pics/max_ports
.
.
ge-4/0/0 ge-4/0/1 ... ge-4/0/max_ports]
```

The following **member** statement:

ge-5/[0-5]/*

expands to:

```
ge-5/0/0 ... ge-5/0/max_ports
ge-5/1/0 ... ge-5/0/max_ports
.
.
ge-5/5/0 ... ge-5/5/max_ports
```

The following **member** statement:

```
ge-5/1/[2,3,6,10]
```

expands to:

```
ge-5/1/2
ge-5/1/3
ge-5/1/6
ge-5/1/10
```

Configuration Inheritance for Member Interfaces

When the Junos OS expands the **member** and **member-range** statements present in an **interface-range**, it creates *interface objects* if they are not explicitly defined in the configuration. The common configuration is copied to all its member interfaces in the **interface-range**.

Example: Foreground interface configuration takes priority compared to configuration inherited by the interface through the **interface-range**.

```
interfaces {
  interface-range range-1 {
    member-range ge-1/0/0/ to ge-10/0/47;
    mtu 256;
  }
  ge-1/0/1 {
    mtu 1024;
  }
}
```

In the preceding example, interface **ge-1/0/1** will have an MTU value of 1024.

This can be verified with output of the **show interfaces | display inheritance** command, as follows:

```
user@host: # show interfaces | display inheritance
## 'ge-1/0/0' was expanded from interface-range 'range-1'
##
ge-1/0/0 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
}
ge-1/0/1 {
  mtu 1024;
}
##
## 'ge-1/0/2' was expanded from interface-range 'range-1'
##
ge-1/0/2 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
}
```

```

.....
.....
##
## 'ge-10/0/47' was expanded from interface-range 'range-1'
##
ge-10/0/47 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
}

```

Member Interfaces Inheriting Configuration from Configuration Groups

Interface range member interfaces inherit the config-groups configuration like any other foreground configuration. **interface-range** is similar to any other foreground configuration statement. The only difference is that the **interface-range** goes through a member interfaces expansion before Junos OS reads this configuration.

```

groups {
  global {
    interfaces {
      <*> {
        hold-time up 10;
      }
    }
  }
  apply-groups [global];
  interfaces {
    interface-range range-1 {
      member-range ge-1/0/0 to ge-10/0/47;
      mtu 256;
    }
  }
}

```

The **hold-time** configuration is applied to all members of **interface-range range-1**.

This can be verified with **show interfaces | display inheritance** as follows:

```

user@host# show interfaces | display inheritance
ge-1/0/0 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
  ##
  ## 'hold-time' was inherited from group 'global'
  ## '10' was inherited from group 'global'
  ##
  hold-time up 10;
}
ge-1/0/1 {
  ##
  ## '256' was expanded from interface-range 'range-1'

```

```
##
mtu 256;
##
## 'hold-time' was inherited from group 'global'
## '10' was inherited from group 'global'
##
hold-time up 10;
}
ge-10/0/47 {
##
## '256' was expanded from interface-range 'range-1'
##
mtu 256;
##
## 'hold-time' was inherited from group 'global'
## '10' was inherited from group 'global'
##
hold-time up 10;
}
```

See Also • *Using Wildcards with Configuration Groups*

Interfaces Inheriting Common Configuration

If an interface is a member of several interface ranges, that interface will inherit the common configuration from all of those interface ranges.

```
[edit]
interfaces {
  interface-range range-1 {
    member-range ge-1/0/0 to ge-10/0/47;
    mtu 256;
  }
}
interfaces {
  interface-range range-1 {
    member-range ge-10/0/0 to ge-10/0/47;
    hold-time up 10;
  }
}
```

In this example, interfaces **ge-10/0/0** through **ge-10/0/47** will have both **hold-time** and **mtu**.

Configuring Inheritance Range Priorities

The interface ranges are defined in the order of inheritance priority, with the first interface range configuration data taking priority over subsequent interface ranges.

```
[edit]
interfaces {
  interface-range int-grp-one {
    member-range ge-0/0/0 to ge-4/0/40;
    member ge-1/1/1;
  }
}
```

```

/*Common config is added part of the interface-range definition*/
mtu 256;
hold-time up 10;
}
}
interfaces {
  interface-range int-grp-two {
    member-range ge-5/0/0 to ge-10/0/40;
    member ge-1/1/1;
    mtu 1024;
  }
}

```

Interface **ge-1/1/1** exists in both **interface-range *int-grp-one*** and **interface-range *int-grp-two***. This interface inherits **mtu 256** from **interface-range *int-grp-one*** because it was defined first.

Configuration Expansion Where Interface Range Is Used

In this example, **interface-range *range-1*** is used under the **protocols** hierarchy:

```

[edit]
interfaces {
  interface-range range-1 {
    member ge-10/1/1;
    member ge-5/5/1;
    mtu 256;
    hold-time up 10;
    ether-options {
      flow-control;
      speed {
        100m;
      }
      802.3ad primary;
    }
  }
}
protocols {
  dot1x {
    authenticator {
      interface range-1 {
        retries 1;
      }
    }
  }
}
}

```

The **interface** node present under **authenticator** is expanded into member interfaces of the **interface-range *range-1*** as follows:

```

protocols {
  dot1x {
    authenticator {
      interface ge-10/1/1 {

```

```
        retries 1;
    }
    interface ge-5/5/1 {
        retries 1;
    }
}
}
```

The **interface range-1** statement is expanded into two interfaces, ge-10/1/1 and ge-5/5/1, and configuration **retries 1** is copied under those two interfaces.

This configuration can be verified using the **show protocols dot1x | display inheritance** command.

Related Documentation

- *Physical Interfaces*

Specifying an Aggregated Interface

The M Series, MX Series, and T Series routers support aggregated interfaces. To specify an aggregated interface assign a number with the aggregated interface name. For example, configure **aex** at the **[edit interfaces]** hierarchy level, where *x* is an integer ranging 0 through 127 for M Series and T Series routers and 0 through 479 on MX Series routers.

For aggregated SONET/SDH interfaces, configure **asx** at the **[edit interfaces]** hierarchy level.



NOTE: SONET/SDH aggregation is proprietary to the Junos OS and might not work with other software.

If you are configuring VLANs for aggregated Ethernet interfaces, you must include the **vlan-tagging** statement at the **[edit interfaces aex]** hierarchy level to complete the association.

Related Documentation

- *Aggregated Ethernet Interfaces Overview*
- *Configuring Aggregated SONET/SDH Interfaces*

Media MTU Overview

The media maximum transmission unit (MTU) is the largest data unit that can be forwarded without fragmentation.

The default media MTU size used on a physical interface depends on the encapsulation used on that interface. In some cases, the default IP Protocol MTU depends on whether the protocol used is IP version 4 (IPv4) or International Organization for Standardization (ISO).

The default media MTU is calculated as follows:

$$\text{Default media MTU} = \text{Default IP MTU} + \text{encapsulation overhead}$$

When you are configuring point-to-point connections, the MTU sizes on both sides of the connections must be the same. Also, when you are configuring point-to-multipoint connections, all interfaces in the subnet must use the same MTU size.



NOTE: The actual frames transmitted also contain cyclic redundancy check (CRC) bits, which are not part of the media MTU. For example, the media MTU for a Gigabit Ethernet Version 2 interface is specified as 1514 bytes, but the largest possible frame size is actually 1518 bytes; you need to consider the extra bits in calculations of MTUs for interoperability.

The physical MTU for Ethernet interfaces does not include the 4-byte frame check sequence (FCS) field of the Ethernet frame.

A SONET/SDH interface operating in concatenated mode has a “c” added to the rate descriptor. For example, a concatenated OC48 interface is referred to as OC48c.

If you do not configure an MPLS MTU, the Junos OS derives the MPLS MTU from the physical interface MTU. From this value, the software subtracts the encapsulation-specific overhead and space for the maximum number of labels that might be pushed in the Packet Forwarding Engine. Currently, the software provides for three labels of four bytes each, for a total of 12 bytes.

In other words, the formula used to determine the MPLS MTU is the following:

$$\text{MPLS MTU} = \text{physical interface MTU} - \text{encapsulation overhead} - 12$$

Related Documentation

- [Configuring the Media MTU on page 115](#)
- [Encapsulation Overhead by Interface Encapsulation Type on page 113](#)
- [Encapsulation Overhead by Interface Encapsulation Type on page 113](#)

Media MTU Sizes by Interface Type

The media maximum transmission unit (MTU) is the largest data unit that can be forwarded without fragmentation.

If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead.

This topic includes following information:

- [Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers on page 102](#)
- [Media MTU Sizes by Interface Type for M40e Routers on page 103](#)
- [Media MTU Sizes by Interface Type for M160 Routers on page 104](#)
- [Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers on page 105](#)
- [Media MTU Sizes by Interface Type for MX Series Routers on page 106](#)
- [Media MTU Sizes by Interface Type for T320 Routers on page 107](#)
- [Media MTU Sizes by Interface Type for T640 Platforms on page 108](#)
- [Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers on page 108](#)
- [Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers on page 109](#)

Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers

Table 35: Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	9192	1500
E3/T3	4474	9192	4470
Fast Ethernet	1514	1533 (4-port) 1532 (8-port) 1532 (12-port) <i>NOTE:</i> The maximum MTU for two 100Base-TX Fast Ethernet port FIC is 9192 bytes.	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 <i>NOTE:</i> The maximum MTU for one Gigabit Ethernet port FIC is 9192 bytes.	1500 (IPv4), 1497 (ISO)

Table 35: Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers (continued)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470

Media MTU Sizes by Interface Type for M40e Routers

Table 36: Media MTU Sizes by Interface Type for M40e Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	4500	1500
E3/T3	4474	4500 9192 (4-port)	4470
E3/DS3 IQ	4474	9192	4470
Fast Ethernet	1514	1533	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 (1- or 2-port) 9192 (4-port)	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)

Table 36: Media MTU Sizes by Interface Type for M40e Routers (continued)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
SONET/SDH	4474	4500 (1-port nonconcatenated)	4470
		9192 (4-port OC3)	
		9192 (4-port OC3c)	
		4500 (1-port OC12)	
		4500 (4-port OC12)	
		4500 (4-port OC12c)	
		4500 (1-port OC48)	
		9192 (2-port OC3)	
		9192 (2-port OC3c)	
		9192 (1-port OC12c)	
		9192 (1-port OC48c)	
		4500 (1-port OC192)	
		9192 (1-port OC192c)	

Media MTU Sizes by Interface Type for M160 Routers

Table 37: Media MTU Sizes by Interface Type for M160 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	4500	1500
E3/T3	4474	4500	4470
E3/DS3 IQ	4474	9192	4470
Fast Ethernet	1514	1533	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 (1- or 2-port) 4500 (4-port)	1500 (IPv4), 1497 (ISO)

Table 37: Media MTU Sizes by Interface Type for M160 Routers (continued)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	4500 (1-port nonconcatenated) 9192 (1- or 2-port) 4500 (4-port)	4470

Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers

Table 38: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM2 IQ	4482	9192	4470
Channelized DS3 IQ	4471	4500	4470
Channelized E1 IQ	1504	4500	1500
Channelized OC12 IQ	4474	9192	4470
Channelized STM1 IQ	4474	9192	4470
DS3	4471	4500	4470
E1	1504	4500	1500
E3 IQ	4471	4500	4470
Fast Ethernet	1514	1533 (4-port) 1532 (8-, 12- and 48-port)	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
T1	1504	4500	1500

Table 38: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers (continued)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
CT3 IQ (excluding M120)	4474	9192	4470

Media MTU Sizes by Interface Type for MX Series Routers

Table 39: Media MTU Sizes by Interface Type for MX Series Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	<ul style="list-style-type: none"> 9192 9500 (Junos OS 16.1R1 and later releases) 	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
10-Gigabit Ethernet	1514	<ul style="list-style-type: none"> 9192 9500 (Junos OS 16.1R1 and later releases) 	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
Multi-Rate Ethernet	1514	<ul style="list-style-type: none"> 9192 9500 (Junos OS 16.1R1 and later releases) 	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
Tri-Rate Ethernet	1514	<ul style="list-style-type: none"> 9192 9500 (Junos OS 16.1R1 and later releases) 	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
Channelized SONET/SDH OC3/STM1 (Multi-Rate)	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
DS3/E3 (Multi-Rate)	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

NOTE: Starting in Junos OS Release 16.1R1, the MTU size for a media or protocol is increased from 9192 to 9500 for Ethernet interfaces on the following MX Series MPCs:

- MPC1
- MPC2
- MPC2E
- MPC3E
- MPC4E
- MPC5E
- MPC6E



NOTE: Starting in Junos OS Release 16.1R1, the MTU size for a media or protocol is increased from 9192 to 9500 for Ethernet interfaces on the following MX Series MPCs:

- MPC1
- MPC2
- MPC2E
- MPC3E
- MPC4E
- MPC5E
- MPC6E

Starting in Junos OS Release 16.1R1, the MTU size has been increased to 16,000 bytes for certain MPCs. The MTU size for the following MPCs has been increased to 16000 bytes:

- MPC7E (MPC7E-MRATE and MP7E-10G)
- MPC8E (MX2K-MPC8E)
- MPC9E (MX2K-MPC9E)

Starting in Junos OS Release 17.3R1, the MTU size for MX10003 MPC is 16,000 bytes.

Starting in Junos OS Release 17.4R1, the MTU size for MX204 is 16,000 bytes.

Media MTU Sizes by Interface Type for T320 Routers

Table 40: Media MTU Sizes by Interface Type for T320 Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM	4482	9192	4470
ATM2 IQ	4482	9192	4470
Channelized OC12 IQ	4474	9192	4470
Channelized STM1 IQ	4474	9192	4470
DS3	4471	4500	4470
Fast Ethernet	1514	1533 (4-port) 1532 (12- and 48-port)	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)

Table 40: Media MTU Sizes by Interface Type for T320 Routers (continued)

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
SONET/SDH	4474	9192	4470
CT3 IQ	4474	9192	4470

Media MTU Sizes by Interface Type for T640 Platforms*Table 41: Media MTU Sizes by Interface Type for T640 Platforms*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM2 IQ	4482	9192	4470
48-port Fast Ethernet	1514	1532	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
CT3 IQ	4474	9192	4470

Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers*Table 42: Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
10-Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)



NOTE: On ACX Series routers, you can configure the protocol MTU by including the `mtu` statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet] or [edit interfaces *interface-name* unit *logical-unit-number* family inet6] hierarchy level.

- If you configure the protocol MTU at any of these hierarchy levels, the configured value is applied to all families that are configured on the logical interface.
- If you are configuring the protocol MTU for both inet and inet6 families on the same logical interface, you must configure the same value for both the families. It is not recommended to configure different MTU size values for inet and inet6 families that are configured on the same logical interface.

Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers

Table 43: Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
10-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
40-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
100-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

Release History Table

Release	Description
17.4R1	Starting in Junos OS Release 17.4R1, the MTU size for MX204 is 16,000 bytes.
17.3R1	Starting in Junos OS Release 17.3R1, the MTU size for MX10003 MPC is 16,000 bytes.
16.1R1	Starting in Junos OS Release 16.1R1, the MTU size has been increased to 16,000 bytes for certain MPCs.

Related Documentation

- [Encapsulation Overhead by Interface Encapsulation Type on page 113](#)
- [Configuring the Media MTU on page 115](#)
- [Media MTU Overview on page 100](#)

- [Setting the Protocol MTU on page 226](#)

Configuring the Media MTU on ACX Series Routers

- [Media MTU Overview on page 110](#)
- [How to Configure the Media MTU on page 111](#)
- [Encapsulation Overhead by Encapsulation Type on page 111](#)
- [Media MTU Sizes by Interface Type for ACX Series Routers on page 112](#)

Media MTU Overview

The default media MTU size used on a physical interface depends on the encapsulation used on that interface. In some cases, the default IP Protocol MTU depends on whether the protocol used is IP version 4 (IPv4) or International Organization for Standardization (ISO).

The default media MTU is calculated as follows:

Default media MTU = Default IP MTU + encapsulation overhead

When you are configuring point-to-point connections, the MTU sizes on both sides of the connections must be the same. Also, when you are configuring point-to-multipoint connections, all interfaces in the subnet must use the same MTU size. For details about encapsulation overhead, see [“Encapsulation Overhead by Encapsulation Type” on page 111](#).



NOTE: The actual frames transmitted also contain cyclic redundancy check (CRC) bits, which are not part of the media MTU. For example, the media MTU for a Gigabit Ethernet Version 2 interface is specified as 1514 bytes, but the largest possible frame size is actually 1518 bytes; you need to consider the extra bits in calculations of MTUs for interoperability.

The physical MTU for Ethernet interfaces does not include the 4-byte frame check sequence (FCS) field of the Ethernet frame.

If you do not configure an MPLS MTU, the Junos OS derives the MPLS MTU from the physical interface MTU. From this value, the software subtracts the encapsulation-specific overhead and space for the maximum number of labels that might be pushed in the Packet Forwarding Engine. Currently, the software provides for three labels of four bytes each, for a total of 12 bytes.

In other words, the formula used to determine the MPLS MTU is the following:

MPLS MTU = physical interface MTU – encapsulation overhead – 12

If you configure an MTU value by including the `mtu` statement at the `[edit interfaces interface-name unit logical-unit-number family mpls]` hierarchy level, the configured value is used. Junos OS Release 16.2R1.6 and later releases do not support family mpls MTU.

How to Configure the Media MTU

To modify the default media MTU size for a physical interface, include the **mtu** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
mtu bytes;
```

If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead.



NOTE: Changing the media MTU or protocol MTU causes an interface to be deleted and added again.

You configure the protocol MTU by including the **mtu** statement at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number* family inet]**
- **[edit interfaces *interface-name* unit *logical-unit-number* family inet6]**

If you configure the protocol MTU at any of these hierarchy levels, the configured value is applied to all families that are configured on the logical interface.



NOTE: If you are configuring the protocol MTU for both **inet** and **inet6** families on the same logical interface, you must configure the same value for both the families. It is not recommended to configure different MTU size values for **inet** and **inet6** families that are configured on the same logical interface.

Encapsulation Overhead by Encapsulation Type

Table 44: Encapsulation Overhead by Encapsulation Type

Interface Encapsulation	Encapsulation Overhead (Bytes)
802.1Q/Ethernet 802.3	21
802.1Q/Ethernet Subnetwork Access Protocol (SNAP)	26
802.1Q/Ethernet version 2	18
ATM Cell Relay	4
ATM permanent virtual connection (PVC)	12
Cisco HDLC	4
Ethernet 802.3	17

Table 44: Encapsulation Overhead by Encapsulation Type (continued)

Interface Encapsulation	Encapsulation Overhead (Bytes)
Ethernet circuit cross-connect (CCC) and virtual private LAN service (VPLS)	4
Ethernet over ATM	32
Ethernet SNAP	22
Ethernet translational cross-connect (TCC)	18
Ethernet version 2	14
Extended virtual local area network (VLAN) CCC and VPLS	4
Extended VLAN TCC	22
Frame Relay	4
PPP	4
VLAN CCC	4
VLAN VPLS	4
VLAN TCC	22

Media MTU Sizes by Interface Type for ACX Series Routers

Table 45: Media MTU Sizes by Interface Type for ACX Series Routers

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
10-Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)

Related Documentation

- [Configuring Interface Encapsulation on Physical Interfaces on page 130](#)
- [Setting the Protocol MTU on page 226](#)

Encapsulation Overhead by Interface Encapsulation Type

If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead. The following table lists the interface encapsulation and corresponding encapsulation overhead.

Table 46: Encapsulation Overhead by Encapsulation Type

Interface Encapsulation	Encapsulation Overhead (Bytes)
802.1Q/Ethernet 802.3	21
802.1Q/Ethernet Subnetwork Access Protocol (SNAP)	26
802.1Q/Ethernet version 2	18
ATM Cell Relay	4
ATM permanent virtual connection (PVC)	12
Cisco HDLC	4
Ethernet 802.3	17
Ethernet circuit cross-connect (CCC) and virtual private LAN service (VPLS)	4
Ethernet over ATM	32
Ethernet SNAP	22
Ethernet translational cross-connect (TCC)	18
Ethernet version 2	14
Extended virtual local area network (VLAN) CCC and VPLS	4
Extended VLAN TCC	22
Frame Relay	4
PPP	4
VLAN CCC	4
VLAN VPLS	4
VLAN TCC	22

Related Documentation

- [Media MTU Overview on page 100](#)
- [Configuring the Media MTU on page 115](#)
- [Encapsulation Overhead by Interface Encapsulation Type on page 113](#)
- [Setting the Protocol MTU on page 226](#)

Configuring Interface Description

You can include a text description of each physical interface in the configuration file. Any descriptive text you include is displayed in the output of the **show interfaces** commands, and is also exposed in the **ifAlias** Management Information Base (MIB) object. It has no impact on the interface's configuration.

To add a text description, include the **description** statement at the **[edit interfaces interface-name]** hierarchy level:

```
[edit]
user@host# set interfaces interface-name description text
```

For example:

```
[edit]
user@host# set interfaces fe-0/0/1 description "Backbone connection to PHL01"
```

The description can be a single line of text. If the text contains spaces, enclose it in quotation marks.



NOTE: You can configure the extended DHCP relay to include the interface description in the option 82 Agent Circuit ID suboption. See *Using DHCP Relay Agent Option 82 Information* in the *Junos OS Broadband Subscriber Management and Services Library*.

For information about describing logical units, see [“Adding a Logical Unit Description to the Configuration” on page 190](#).

To display the description from the router or switch CLI, use the **show interfaces** command:

```
user@host> show interfaces fe-0/0/1

Physical interface: fe-0/0/1, Enabled, Physical link is Up
  Interface index: 129, SNMP ifIndex: 23
  Description: Backbone connection to PHL01
  ...
```

To display the interface description from the interfaces MIB, use the **snmpwalk** command from a server. To isolate information for a specific interface, search for the interface index

shown in the **SNMP ifIndex** field of the **show interfaces** command output. The **ifAlias** object is in **ifXTable**.

```
user-server> snmpwalk host-fxp0.mylab public ifXTable | grep -e '\.23'
snmpwalk host-fxp0.mylab public ifXTable | grep -e '\.23'
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifName.23 = fe-0/0/1
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifInMulticastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifInBroadcastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifOutMulticastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifOutBroadcastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInOctets.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInUcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInMulticastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInBroadcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOutOctets.23 = Counter64: 42
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOutUcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOutMulticastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOutBroadcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifLinkUpDownTrapEnable.23 = enabled(1)
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHighSpeed.23 = Gauge32: 100
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifPromiscuousMode.23 = false(2)
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifConnectorPresent.23 = true(1)
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifAlias.23 = Backbone connection to PHL01
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifCounterDiscontinuityTime.23 = Timeticks:
(0) 0:00:00.00
```

Related Documentation

- [Using DHCP Relay Agent Option 82 Information](#)
- [Adding a Logical Unit Description to the Configuration on page 190](#)

Configuring the Media MTU

The media maximum transmission unit (MTU) is the largest data unit that can be forwarded without fragmentation. The default media MTU size used on a physical interface depends on the encapsulation being used on that interface. For a listing of MTU sizes for each encapsulation type, see [“Media MTU Sizes by Interface Type” on page 101](#).

To configure the media-MTU size:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# [edit interfaces interface-name]
```

2. Include the **mtu** statement.

```
[edit interfaces interface-name]
mtu bytes;
```

- If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead. You

configure the protocol MTU by including the **mtu** statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]



NOTE:

- Changing the media MTU or protocol MTU causes an interface to be deleted and added again.
 - Because tunnel services interfaces are considered logical interfaces, you cannot configure the MTU setting for the physical interface. This means you cannot include the **mtu** statement at the [edit interfaces *interface-name*] hierarchy level for the following interface types: generic routing encapsulation (gr-), IP-IP (ip-), loopback (lo-), link services (ls-), multilink services (ml-), and multicast (pe-, pd-). You can, however, configure the protocol MTU on all tunnel interfaces except virtual tunnel (vt) interfaces. Starting in Junos OS Release 17.1R3, you cannot configure the maximum transmission unit (MTU) size for vt interfaces because the **mtu bytes** option is deprecated for vt interfaces. Junos OS sets the MTU size for vt interfaces by default to unlimited.
 - If you configure an MTU value by including the **mtu** statement at the [edit interfaces *interface-name* unit *logical-unit-number* family mpls] hierarchy level, the configured value is used.
-

Related
Documentation

- [Media MTU Overview on page 100](#)
- [Media MTU Sizes by Interface Type on page 101](#)
- [Encapsulation Overhead by Interface Encapsulation Type on page 113](#)

Configuring the Interface Speed

You can configure the interface speed in following ways:

- [Configuring the Interface Speed on Ethernet Interfaces on page 116](#)
- [Configuring Aggregated Ethernet Link Speed on page 118](#)
- [Configuring SONET/SDH Interface Speed on page 121](#)

Configuring the Interface Speed on Ethernet Interfaces

For M Series and T Series Fast Ethernet 12-port and 48-port PIC interfaces, the management Ethernet interface (**fxp0** or **em0**), and the MX Series Tri-Rate Ethernet copper interfaces, you can explicitly set the interface speed. The Fast Ethernet, **fxp0**, and **em0** interfaces can be configured for 10 Mbps or 100 Mbps (**10m** | **100m**). The MX Series Tri-Rate Ethernet copper interfaces can be configured for 10 Mbps, 100 Mbps, or 1 Gbps

(10m | 100m | 1g). For information about management Ethernet interfaces and to determine the management Ethernet interface type for your router, see “[Understanding Management Ethernet Interfaces](#)” on page 10 and “[Supported Routing Engines by Router](#)” on page 17. MX Series routers, with MX-DPC and Tri-Rate Copper SFPs, support 20x1 Copper to provide backwards compatibility with 100/10BASE-T and 1000BASE-T operation through an Serial Gigabit Media Independent Interface (SGMII) interface.

1. In configuration mode, go to the **[edit interfaces interface-name]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. To configure the speed, include the **speed** statement at the **[edit interfaces interface-name]** hierarchy level.

```
[edit interfaces interface-name]
user@host# set speed (10m | 100m | 1g | auto | auto-10m-100m);
```



NOTE:

- By default, the M Series and T Series routers management Ethernet interface autonegotiates whether to operate at 10 megabits per second (Mbps) or 100 Mbps. All other interfaces automatically choose the correct speed based on the PIC type and whether the PIC is configured to operate in multiplexed mode (using the `no-concatenate` statement in the `[edit chassis]` configuration hierarchy.
 - Starting with Junos OS Release 14.2 the `auto-10m-100m` option allows the fixed tri-speed port to auto negotiate with ports limited by 100m or 10m maximum speed. This option must be enabled only for Tri-rate MPC port, that is, 3D 40x 1GE (LAN) RJ45 MIC on MX platform. This option does not support other MICs on MX platform.,
 - When you manually configure Fast Ethernet interfaces on the M Series and T Series routers, link mode and speed must both be configured. If both these values are not configured, the router uses autonegotiation for the link and ignores the user-configured settings.
 - If the link partner does not support autonegotiation, configure either Fast Ethernet port manually to match its link partner's speed and link mode. When the link mode is configured, autonegotiation is disabled.
 - On MX Series routers with tri-rate copper SFP interfaces, if the port speed is negotiated to the configured value and the negotiated speed and interface speed do not match, the link will not be brought up.
 - When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled.
 - Starting with Junos OS Release 11.4, half-duplex mode is not supported on Tri-Rate Ethernet copper interfaces. When you include the `speed` statement, you must include the `link-mode full-duplex` statement at the same hierarchy level.
-

- See Also**
- [speed on page 1027](#)
 - *Ethernet Interfaces Overview*
 - *Ethernet Interfaces Feature Guide for Routing Devices*

Configuring Aggregated Ethernet Link Speed

On aggregated Ethernet interfaces, you can set the required link speed for all interfaces included in the bundle. Generally, all interfaces that make up a bundle must have the same speed. If you include in the aggregated Ethernet interface an individual link that has a speed different from the speed that you specify in the **link-speed** parameter, an error message is logged. However, there are exceptions.

Starting with Junos OS Release 13.2, aggregated Ethernet supports mixed rates and mixed modes on T640, T1600, T4000, and TX Matrix Plus routers. For example, these mixes are supported:

- Member links of different modes (WAN and LAN) for 10-Gigabit Ethernet links.
- Member links of different rates: 10-Gigabit Ethernet, 40-Gigabit Ethernet, 50-Gigabit Ethernet, 100-Gigabit Ethernet, and OC192 (10-Gigabit Ethernet WAN mode)

Starting with Junos OS Release 14.1R1 and 14.2, support for mixed rates on aggregated Ethernet bundles is extended to MX240, MX480, MX960, MX2010, and MX2020 routers.

Starting with Junos OS Release 14.2, aggregated Ethernet supports mixed link speeds on PTX Series Packet Transport Routers.



NOTE:

- Member links of 50-Gigabit Ethernet can only be configured using the 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP (PD-1CE-CFP-FPC4).
- Starting with Junos OS Release 13.2, 100-Gigabit Ethernet member links can be configured using the two 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP. This 100-Gigabit Ethernet member link can be included in an aggregated Ethernet link that includes member links of other interfaces as well. In releases before Junos OS Release 13.2, the 100-Gigabit Ethernet member link configured using the two 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP cannot be included in an aggregated Ethernet link that includes member links of other interfaces.

To configure member links of mixed rates and mixed modes on T640, T1600, T4000, TX Matrix Plus, and PTX routers, you need to configure the **mixed** option for the **[edit interfaces *aex* aggregated-ether-options link-speed]** statement.

To set the required link speed:

1. Specify that you want to configure the aggregated Ethernet options.

```
user@host# edit interfaces interface-name aggregated-ether-options
```

2. Configure the link speed.

```
[edit interfaces interface-name aggregated-ether-options ]
user@host# set link-speed speed
```

speed can be in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

Aggregated Ethernet interfaces on the M120 router can have one of the following speeds:

- **100m**—Links are 100 Mbps.
- **10g**—Links are 10 Gbps.
- **1g**—Links are 1 Gbps.
- **oc192**—Links are OC192 or STM64c.

Aggregated Ethernet links on EX Series switches can be configured to operate at one of the following speeds:

- **10m**—Links are 10 Mbps.
- **100m**—Links are 100 Mbps.
- **1g**—Links are 1 Gbps.
- **10g**—Links are 10 Gbps.
- **50g**—Links are 50 Gbps.

Aggregated Ethernet links on T Series, MX Series, PTX Series routers, and QFX5100, QFX10002, QFX10008, and QFX10016 switches can be configured to operate at one of the following speeds:

- **100g**—Links are 100 Gbps.
- **100m**—Links are 100 Mbps.
- **10g**—Links are 10 Gbps.
- **1g**—Links are 1 Gbps.
- **40g**—Links are 40 Gbps.
- **50g**—Links are 50 Gbps.
- **80g**—Links are 80 Gbps.
- **8g**—Links are 8 Gbps.
- **mixed**—Links are of various speeds.
- **oc192**—Links are OC192.

See Also • [aggregated-ether-options on page 443](#)

- *Configuring Mixed Rates and Mixed Modes on Aggregated Ethernet Bundles*
- *Ethernet Interfaces Feature Guide for Routing Devices*

Configuring SONET/SDH Interface Speed

To configure the speed of SONET/SDH interfaces in concatenated mode:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level, where the *interface-name* is *so-fpc/pic/port*.

```
[edit]
user@host# edit interfaces so-fpc/pic/port
```

2. Configure interface speed in concatenated mode.

For example, each port of 4-port OC12 PIC can be configured to be in OC3 or OC12 speed independently when this PIC is in 4xOC12 concatenated mode.

```
[edit interfaces so-fpc/pic/port]
user@host# set speed (oc3 | oc12 | oc48)
```

To configure the speed of SONET/SDH interfaces in nonconcatenated mode:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level, where the *interface-name* is *so-fpc/pic/port*.

```
[edit]
user@host# edit interfaces so-fpc/pic/port
```

2. Configure interface speed in nonconcatenated mode.

For example, each port of 4-port OC12 PIC can be configured to be in OC3 or OC12 speed independently when this PIC is in 4xOC12 concatenated mode.

```
[edit interfaces so-fpc/pic/port]
user@host# set speed (oc3 | oc12)
```

To configure the PIC to operate in channelized (multiplexed) mode:

1. In configuration mode, go to the **[edit chassis fpc *slot-number* pic *pic-number*]** hierarchy level.

```
[edit]
user@host# [edit chassis fpc slot-number pic pic-number]
```

2. Configure the **no-concatenate** option.

```
[edit interfaces so-fpc/pic/port]
user@host# set no-concatenate
```



NOTE: On SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, and Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP, you cannot set the interface speed at the [edit interfaces] hierarchy level. To enable the speed on these MICs, you need to set the port speed at the [edit chassis fpc slot-number pic pic-number port port-number] hierarchy level.

For more information about using the `non-concatenate` statement, see the *Junos OS Administration Library*.

- See Also**
- *Configuring SONET/SDH Physical Interface Properties*
 - *SONET/SDH Interface Speed Overview*
 - *SONET/SDH Interfaces Overview*

Release History Table

Release	Description
14.2	Starting with Junos OS Release 14.2 the auto-10m-100m option allows the fixed tri-speed port to auto negotiate with ports limited by 100m or 10m maximum speed. This option must be enabled only for Tri-rate MPC port, that is, 3D 40x 1GE (LAN) RJ45 MIC on MX platform. This option does not support other MICs on MX platform.
14.2	Starting with Junos OS Release 14.2, aggregated Ethernet supports mixed link speeds on PTX Series Packet Transport Routers.
14.1	Starting with Junos OS Release 14.1R1 and 14.2, support for mixed rates on aggregated Ethernet bundles is extended to MX240, MX480, MX960, MX2010, and MX2020 routers.
13.2	Starting with Junos OS Release 13.2, aggregated Ethernet supports mixed rates and mixed modes on T640, T1600, T4000, and TX Matrix Plus routers.
13.2	Starting with Junos OS Release 13.2, 100-Gigabit Ethernet member links can be configured using the two 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP.
11.4	Starting with Junos OS Release 11.4, half-duplex mode is not supported on Tri-Rate Ethernet copper interfaces. When you include the speed statement, you must include the link-mode full-duplex statement at the same hierarchy level.

- Related Documentation**
-

Configuring the Link Characteristics

By default, the router's management Ethernet interface, **fxp0** or **em0**, autonegotiates whether to operate in full-duplex or half-duplex mode. Fast Ethernet interfaces can

operate in either full-duplex or half-duplex mode, and all other interfaces can operate only in full-duplex mode. For Gigabit Ethernet, the link partner must also be set to full duplex.



NOTE: When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled.



NOTE: When you manually configure Fast Ethernet interfaces on the M Series and T Series routers, link mode and speed must both be configured. If both these values are not configured, the router uses autonegotiation for the link and ignores the user-configured settings.



NOTE: When the Fast Ethernet interface on Juniper Networks routers with autonegotiation enabled interoperates with a device configured to operate in half-duplex mode (autonegotiation disabled), the interface defaults to half-duplex mode after the PIC is taken offline and brought back online. This results in packet loss and cyclic redundancy check (CRC) errors.

To explicitly configure an Ethernet interface to operate in either full-duplex or half-duplex mode, include the **link-mode** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
link-mode (full-duplex | half-duplex);
```

Interface Alias Names Overview

You can configure a textual description of a logical unit on a physical interface to be the alias of an interface name. Interface aliasing is supported only at the unit level. If you configure an alias name, the alias name is displayed instead of the interface name in the output of all **show**, **show interfaces**, and other operational mode commands. In Junos OS Release 12.3R8 and later, display of the alias can be suppressed in favor of the actual interface name by using the **display no-interface-alias** parameter along with the **show** command. Configuring an alias for a logical unit of an interface has no effect on how the interface on the router or switch operates.

When you configure the alias name of an interface, the CLI saves the alias name as the value of the ***interface-name*** variable in the configuration database. To enable backward compatibility with Junos OS releases in which the support for interface aliases is not available, when the Junos OS processes query the configuration database for the ***interface-name*** variable, the actual, exact value of the ***interface-name*** variable is returned instead of the alias name for system operations and computations.

This capability to define interface alias names for physical and logical interfaces is useful in a Junos Node Unifier (JNU) environment that contains a Juniper Networks MX Series

5G Universal Routing Platform as a controller and EX Series Ethernet switches, QFX Series devices, and ACX Series Universal Metro Routers as satellite devices. The following are the benefits of configuring an alias name, which enables a meaningful, single, and easily identifiable name to be allocated to an interface:

- You can group physical interfaces as one aggregated interface (link aggregation group or LAG bundle) and name that bundle as a satellite connection interface (for example, sat1).
- You can select a logical interface as a member of the LAG bundle or the entire LAG, and name that interface to represent a satellite device port or a service instance (for example, ge-0/0/1).
- You can combine the satellite name and the interface name aliases to wholly represent the satellite port name (for example, sat1:ge-0/0/1 or ge-sat1/0/0/1 or ge-1/0/0/1) in the most easily distinguishable format that denotes a combination of port and satellite parts of the name.

To specify an interface alias, you can use the **alias** statement at the **[edit interfaces interface-name unit logical-unit-number]** and **[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]** hierarchy levels.



NOTE: In Juniper Networks M Series Multiservice Edge Routers, if the same alias name is configured on more than one logical interface, the router displays an error message and commit fails.

**Related
Documentation**

- [Example: Adding an Interface Alias Name on page 124](#)
- [alias on page 446](#)

Example: Adding an Interface Alias Name

This example shows how to add an alias to the logical unit of an interface. Using an alias to identify interfaces as they appear in the output for operational commands can allow for more meaningful naming conventions and easier identification.

- [Requirements on page 124](#)
- [Overview on page 125](#)
- [Configuration on page 125](#)
- [Verification on page 127](#)

Requirements

This example uses the following hardware and software components:

- One MX Series router that acts as a controller
- One EX4200 switch that acts as a satellite device

- Junos OS Release 13.3R1 or later

Overview

You can create an alias for each logical unit on a physical interface. The descriptive text you define for the alias is displayed in the output of the **show interfaces** commands. In Junos OS Release 12.3R8 and later, display of the alias can be suppressed in favor of the actual interface name by using the **display no-interface-alias** parameter along with the show command. The alias configured for a logical unit of an interface has no effect on how the interface on the router or switch operates – it is only a cosmetic label.

Configuration

Consider a scenario in which alias names are configured on the interfaces of a JNU controller that are connected to a satellite, sat1, in the downlink direction in the JNU management network by using two links. The alias names enable effective, streamlined identification of these interfaces in the operational mode commands that are run on the controller and satellites.

- [Configuring Alias Names for the Controller Interfaces on page 125](#)
- [Results on page 126](#)

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them in a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level:

```
set interfaces ae0 unit 0 alias "controller-sat1-downlink1"
set interfaces ae0.0 family inet address 10.0.0.1/24
set interfaces ae1 unit 0 alias "controller-sat1-downlink1"
set interfaces ae0.0 family inet address 192.0.2.128/25
set interfaces ge-0/0/0 vlan-tagging
set interfaces ge-0/0/0 unit 0 alias "ge-to-corp-gw1"
set interfaces ge-0/0/0.0 vlan-id 101
set interfaces ge-0/0/0.0 family inet address 1.1.1.1/23
set interfaces ge-0/1/0 gigether-options 802.3ad ae0
set interfaces ge-0/1/1 gigether-options 802.3ad ae0
set protocols rip group corporate-firewall neighbor ge-to-corp-gw1
```

Configuring Alias Names for the Controller Interfaces

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To add an alias name to the controller interfaces that are used to connect to the satellite devices in the downlink direction:

1. Configure an alias name for the logical unit of an aggregated Ethernet interface that is used to connect to a satellite, sat1, in the downlink direction. Configure **inet** family and address for the interface.

```
[edit]
user@host# set interfaces ae0 unit 0 alias "controller-sat1-downlink1"
user@host# set interfaces ae0.0 family inet address 10.0.0.1/24
```

2. Configure an alias name for the logical unit of another aggregated Ethernet interface that is used to connect to the same satellite, sat1, in downlink direction. Configure INET family and address for the interface.

```
[edit]
user@host# set interfaces ae0 unit 1 alias "controller-sat1-downlink2"
user@host# set interfaces ae0.0 family inet address 10.0.0.3/24
```

3. Configure an alias name for the Gigabit Ethernet interface on the controller and configure its parameters.

```
[edit]
user@host# set interfaces ge-0/0/0 vlan-tagging
user@host# set interfaces ge-0/0/0 unit 0 alias "ge-to-corp-gw1"
user@host# set interfaces ge-0/0/0.0 vlan-id 101
user@host# set interfaces ge-0/0/0.0 family inet address 1.1.1.1/23
```

4. Configure Gigabit Ethernet interfaces to be member links of an **ae**- logical interface.

```
[edit]
user@host# set interfaces ge-0/1/0 gigether-options 802.3ad ae0
user@host# set interfaces ge-0/1/1 gigether-options 802.3ad ae0
```

5. Configure RIP in the network between the controller and the firewall gateway.

```
[edit]
user@host# set protocols rip group corporate-firewall neighbor ge-to-corp-gw1
```

Results

In configuration mode, confirm your configuration by entering the **show** command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
interfaces {
  ae0 {
    unit 0 {
      alias "controller-sat1-downlink1";
      family inet {
        address 10.0.0.1/24;
      }
    }
    unit 1 {
```

```

        alias "controller-sat1-downlink2";
        family inet {
            address 10.0.0.3/24;
        }
    }
    ge-0/0/0 {
        vlan-tagging;
        unit 0 {
            alias "ge-to-corp-gw1";
            vlan-id 101;
            family inet {
                address 1.1.1.1/23;
            }
        }
    }
    ge-0/1/0 {
        gigether-options {
            802.3ad ae0;
        }
    }
    ge-0/1/1 {
        gigether-options {
            802.3ad ae0;
        }
    }
}
protocols rip {
    group corporate-firewall {
        neighbor ge-to-corp-gw1;
    }
}

```

After you have confirmed that the interfaces are configured, enter the **commit** command in configuration mode.



NOTE: In Juniper Networks M Series Multiservice Edge Routers, if the same alias name is configured on more than one logical interface, the router displays an error message and commit fails.

Verification

To verify that the alias name is displayed instead of the interface name, perform these steps:

- [Verifying the Configuration of the Alias Name for the Controller Interfaces on page 127](#)

[Verifying the Configuration of the Alias Name for the Controller Interfaces](#)

Purpose Verify that the alias name is displayed instead of the interface name.

Action Display information about all RIP neighbors.

```
user@router> show rip neighbor
```

Neighbor	Local State	Source Address	Destination Address	Send Mode	Receive Mode	In Met
ge-to-corp-gw1	DN	(null)	255.255.255.255	mcast	both	1

Meaning The output displays the details of the benchmarking test that was performed. For more information about the **show rip neighbor** operational command, see **show rip neighbor** in the [CLI Explorer](#).

Related Documentation

- [Interface Alias Names Overview on page 123](#)
- [alias on page 446](#)

Clock Source Overview

For both the router and interfaces, the clock source can be an external clock that is received on the interface or the router's internal Stratum 3 clock.

For example, interface A can transmit on interface A's received clock (external, loop timing) or the Stratum 3 clock (internal, line timing, or normal timing). Interface A cannot use a clock from any other source. For interfaces such as SONET/SDH that can use different clock sources, you can configure the source of the transmit clock on each interface.

The clock source resides on the System Control Board (SCB) for M40 routers, the System and Switch Board (SSB) for M20 routers, the Control Board (CB) for M120 routers, and the Miscellaneous Control Subsystem (MCS) for M40e and M160 routers. M7i and M10i routers have a clock source on the Compact Forwarding Engine Board (CFEB) and Enhanced Compact Forwarding Engine Board (CFEB-E).

For T Series and MX Series, the clock source internal Stratum 3 clock resides on the SONET Clock Generator and Switch Control Board (SCB) respectively. By default, the 19.44-MHz Stratum 3 reference clock generates the clock signal for all serial PICs (SONET/SDH) and Plesiochronous Digital Hierarchy (PDH) PICs. PDH PICs include DS3, E3, T1, and E1 PICs.



NOTE: M7i and M10i routers do not support external clocking of SONET interfaces.

For information about clocking on channelized interfaces, see *Channelized IQ and IQE Interfaces Properties*. Also see *Configuring the Clock Source on SONET/SDH Interfaces* and *Configuring the Channelized T3 Loop Timing*.

For information about configuring an external synchronization interface that can be used to synchronize the internal Stratum 3 clock to an external source on the M40e, M120, M320, routers and T Series routers, see *Junos OS Administration Library, Configuring Junos OS to Support an External Clock Synchronization Interface for M Series, MX Series, and T Series Routers*.

For information about configuring Synchronous Ethernet on MX 80, MX240, MX480, and MX960 Universal Routing Platforms, see *Junos OS Administration Library, Synchronous Ethernet Overview and Configuring Clock Synchronization Interface on MX Series Routers*.

Related Documentation

- [Configuring an External Synchronization Interface](#)
- [Configuring the Clock Source on page 129](#)
- [Configuring Junos OS to Support an External Clock Synchronization Interface for M Series, MX Series, and T Series Routers](#)
- [Synchronous Ethernet Overview](#)
- [Configuring Clock Synchronization Interface on MX Series Routers](#)

Configuring the Clock Source

For both the router and interfaces, the clock source can be an external clock that is received on the interface or the router's internal Stratum 3 clock.

To set the clock source as external or internal:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **clocking** option as external or internal.

```
[edit interfaces interface-name]
user@host# set clocking (external | internal)
```



NOTE: M7i and M10i routers do not support external clocking of SONET interfaces.



NOTE: On Channelized SONET/SDH PICs, if you set the parent (or the master) controller clock to external, then you must set the child controller clocks to the default value—that is, internal.

For example, on the Channelized STM1 PIC, if the clock on the Channelized STM1 interface (which is the master controller) is set to external, then you must not configure the CE1 interface (which is the child controller) clock to external. Instead you must configure the CE1 interface clock to internal.

For information about clocking on channelized interfaces, see *Channelized IQ and IQE Interfaces Properties*. Also see *Configuring the Clock Source on SONET/SDH Interfaces* and *Configuring the Channelized T3 Loop Timing*.

For information about configuring an external synchronization interface that can be used to synchronize the internal Stratum 3 clock to an external source on the M40e, M120, and M320 routers and on the T Series routers, see *Junos OS Administration Library, Configuring Junos OS to Support an External Clock Synchronization Interface for M Series, MX Series, and T Series Routers*.

For information about configuring Synchronous Ethernet on MX80, MX240, MX480, and MX960 Universal Routing Platforms, see *Junos OS Administration Library, Synchronous Ethernet Overview* and *Configuring Clock Synchronization Interface on MX Series Routers*.

**Related
Documentation**

- [Configuring an External Synchronization Interface](#)
- [clocking on page 499](#)
- [Clock Source Overview on page 128](#)
- [Configuring Junos OS to Support an External Clock Synchronization Interface for M Series, MX Series, and T Series Routers](#)
- [Synchronous Ethernet Overview](#)
- [Configuring Clock Synchronization Interface on MX Series Routers](#)

Configuring Interface Encapsulation on Physical Interfaces

- [Understanding Interface Encapsulation on Physical Interfaces on page 130](#)
- [Encapsulation Capabilities of Physical Interfaces on page 131](#)
- [Configuring the Encapsulation on a Physical Interface on page 132](#)
- [Displaying the Encapsulation on a Physical SONET/SDH Interface on page 132](#)

Understanding Interface Encapsulation on Physical Interfaces

Point-to-Point Protocol (PPP) encapsulation is the default encapsulation type for physical interfaces. You need not configure encapsulation for any physical interfaces that support PPP encapsulation. If you do not configure encapsulation, PPP is used by default.

For physical interfaces that do not support PPP encapsulation, you must configure an encapsulation to use for packets transmitted on the interface. You can optionally configure an encapsulation on a logical interface, which is the encapsulation used within certain packet types.

Encapsulation Capabilities of Physical Interfaces

When you configure a point-to-point encapsulation (such as PPP or Cisco HDLC) on a physical interface, the physical interface can have only one logical interface (that is, only one **unit** statement) associated with it. When you configure a multipoint encapsulation (such as Frame Relay), the physical interface can have multiple logical units, and the units can be either point-to-point or multipoint.

Ethernet CCC encapsulation for Ethernet interfaces with standard TPID tagging requires that the physical interface have only a single logical interface. Ethernet interfaces in VLAN mode can have multiple logical interfaces.

For Ethernet interfaces in VLAN mode, VLAN IDs are applicable as follows:

- VLAN ID 0 is reserved for tagging the priority of frames.
- For encapsulation type **vlan-ccc**, VLAN IDs 1 through 511 are reserved for normal VLANs. VLAN IDs 512 and above are reserved for VLAN CCCs.
- For encapsulation type **vlan-vpls**, VLAN IDs 1 through 511 are reserved for normal VLANs, and VLAN IDs 512 through 4094 are reserved for VPLS VLANs. For 4-port Fast Ethernet interfaces, you can use VLAN IDs 512 through 1024 for VPLS VLANs.
- For Gigabit Ethernet interfaces and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), you can configure flexible Ethernet services encapsulation on the physical interface. For interfaces with **flexible-ethernet-services** encapsulation, all VLAN IDs are valid. VLAN IDs from 1 through 511 are not reserved.
- For encapsulation types **extended-vlan-ccc** and **extended-vlan-vpls**, all VLAN IDs are valid.

The upper limits for configurable VLAN IDs vary by interface type.

When you configure a TCC encapsulation, some modifications are needed to handle VPN connections over unlike Layer 2 and Layer 2.5 links and terminate the Layer 2 and Layer 2.5 protocol locally.

The router performs the following media-specific changes:

- PPP TCC—Both Link Control Protocol (LCP) and Network Control Protocol (NCP) are terminated on the router. Internet Protocol Control Protocol (IPCP) IP address negotiation is not supported. The Junos OS strips all PPP encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to PPP encapsulation.
- Cisco HDLC TCC—Keepalive processing is terminated on the router. The Junos OS strips all Cisco HDLC encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to Cisco HDLC encapsulation.

- Frame Relay TCC—All Local Management Interface (LMI) processing is terminated on the router. The Junos OS strips all Frame Relay encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to Frame Relay encapsulation.
- ATM—Operation, Administration, and Maintenance (OAM) and Interim Local Management Interface (ILMI) processing is terminated at the router. Cell relay is not supported. The Junos OS strips all ATM encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to ATM encapsulation.

Configuring the Encapsulation on a Physical Interface

By default, PPP is the encapsulation type for physical interfaces. To configure the encapsulation on a physical interface, include the encapsulation statement at the **[edit interfaces *interface-name*]** hierarchy level:

To configure encapsulation on a physical interface:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit]
user@host# set interfaces so-fpc/pic/port
```

2. Configure the encapsulation type as described in [encapsulation](#).

```
[edit interfaces mo-fpc/pic/port]
user@host# set encapsulation encapsulation-type
```



NOTE:

- When you configure a point-to-point encapsulation (such as PPP or Cisco HDLC) on a physical interface, the physical interface can have only one logical interface (that is, only one unit statement) associated with it. When you configure a multipoint encapsulation (such as Frame Relay), the physical interface can have multiple logical units, and the units can be either point-to-point or multipoint.
- When the encapsulation type is set to Cisco-compatible Frame Relay encapsulation, ensure that the LMI type is set to ANSI or Q933-A.
- When vlan-vpls encapsulation is set at the physical interface level, commit check will validate that there should not be any inet family configured within it.

Displaying the Encapsulation on a Physical SONET/SDH Interface

Purpose To display the configured encapsulation and its associated set options on a physical interface when the following are set at the **[edit interfaces *interface-name*]** hierarchy level:

- interface-name—so-7/0/0
- Encapsulation—**ppp**
- Unit—0
- Family—**inet**
- Address—192.168.1.113/32
- Destination—192.168.1.114
- Family—**iso** and **mpls**

Action Run the **show** command at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces so-7/0/0]
user@host# show
encapsulation ppp;
unit 0 {
  point-to-point;
  family inet {
    address 192.168.1.113/32 {
      destination 192.168.1.114;
    }
  }
  family iso;
  family mpls;
}
```

Meaning The configured encapsulation and its associated set options are displayed as expected. Note that the second set of two **family** statements allow IS-IS and MPLS to run on the interface.

Related Documentation

- [encapsulation on page 596](#)
- [Configuring the Media MTU on page 115](#)

Configuring Interface Encapsulation on PTX Series Packet Transport Routers

This topic describes how to configure interface encapsulation on PTX Series Packet Transport Routers. Use the **flexible-ethernet-services** configuration statement to configure different encapsulation for different logical interfaces under a physical interface. With flexible Ethernet services encapsulation, you can configure each logical interface encapsulation without range restrictions for VLAN IDs.

Supported encapsulations for physical interfaces include:

- **flexible-ethernet-services**
- **ethernet-ccc**

- **ethernet-tcc**

Supported encapsulations for logical interfaces include:

- **ethernet**
- **vlan-ccc**
- **vlan-tcc**



NOTE: PTX Series Packet Transport Routers do not support **extended-vlan-cc** and **extended-vlan-tcc** encapsulation on logical interfaces. Instead, you can configure a tag protocol ID (TPID) value of 0x9100 to achieve the same results.

To configure flexible Ethernet services encapsulation, include the **encapsulation flexible-ethernet-services** statement at the **[edit interfaces et-*fpc/pic/port*]** hierarchy level. For example:

```
interfaces {
  et-fpc/pic/port {
    vlan-tagging;
    encapsulation flexible-ethernet-services;
    unit 0 {
      vlan-id 1000;
      family inet {
        address 11.0.0.20/24;
      }
    }
    unit 1 {
      encapsulation vlan-ccc;
      vlan-id 1010;
    }
    unit 2 {
      encapsulation vlan-tcc;
      vlan-id 1020;
      family tcc {
        proxy {
          inet-address 11.0.2.160;
        }
        remote {
          inet-address 11.0.2.10;
        }
      }
    }
  }
}
```

**Related
Documentation**

- [Configuring Interface Encapsulation on Physical Interfaces on page 130](#)

Configuring Keepalives

By default, physical interfaces configured with Cisco HDLC or PPP encapsulation send keepalive packets at 10-second intervals. The Frame Relay term for keepalives is LMI packets; the Junos OS supports both ANSI T1.617 Annex D LMIs and ITU Q933 Annex A LMIs. On ATM networks, OAM cells perform the same function. You configure OAM cells at the logical interface level; for more information, see *Defining the ATM OAM F5 Loopback Cell Period*.

To disable the sending of keepalives:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **no-keepalives** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]
no-keepalives;
```

To disable the sending of keepalives on a physical interface configured with Cisco HDLC encapsulation for a translational cross-connection:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **no-keepalives** statement with the **encapsulation cisco-hdlc-tcc** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]
encapsulation cisco-hdlc-tcc;
no-keepalives;
```

To disable the sending of keepalives on a physical interface configured with PPP encapsulation for a translational cross-connection:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **no-keepalives** statement with the **encapsulation ppp-tcc** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]  
encapsulation ppp-tcc;  
no-keepalives;
```

For more information about translation cross-connections, see [Circuit and Translational Cross-Connects Overview](#).

When you configure PPP over ATM or Multilink PPP over ATM encapsulation, you can enable or disable keepalives on the logical interface. For more information, see [Configuring PPP over ATM2 Encapsulation](#).

To explicitly enable the sending of keepalives:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]  
user@host# edit interfaces interface-name
```

2. Include the **keepalives** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]  
keepalives;
```

To change one or more of the default keepalive values:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]  
user@host# edit interfaces interface-name
```

2. Include the **keepalives** statement with the appropriate option as **interval *seconds***, **down-count *number***, and the **up-count *number***.

```
[edit interfaces interface-name]  
keepalives;  
keepalives <interval seconds> <down-count number> <up-count number>;
```

On interfaces configured with Cisco HDLC or PPP encapsulation, you can include the following three keepalive statements; note that Frame Relay encapsulation is not affected by these statements:

- **interval *seconds***—The time in seconds between successive keepalive requests. The range is from 1 second through 32767 seconds, with a default of 10 seconds.
- **down-count *number***—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is from 1 through 255, with a default of 3.

- **up-count *number***—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is from 1 through 255, with a default of 1.



CAUTION: If interface keepalives are configured on an interface that does not support the keepalives configuration statement (for example, 10-Gigabit Ethernet), the link layer may go down when the PIC is restarted. Avoid configuring the keepalives on interfaces that do not support the keepalives configuration statement.

For information about Frame Relay keepalive settings, see *Configuring Frame Relay Keepalives*.

On MX Series routers with Modular Port Concentrators/Modular Interface Cards (MPCs/MICs), the Packet Forwarding Engine on an MPC/MIC processes and responds to Link Control Protocol (LCP) Echo-Request keepalive packets that the PPP subscriber (client) initiates and sends to the router. The mechanism by which LCP Echo-Request packets are processed by the Packet Forwarding Engine instead of by the Routing Engine is referred to as *PPP fast keepalive*. For more information about how PPP fast keepalive works on an MX Series router with MPCs/MICs, see the *Junos OS Subscriber Access Configuration Guide*.

Related Documentation

- *Defining the ATM OAM F5 Loopback Cell Period*
- *Disabling the Sending of PPPoE Keepalive Messages*
- *Understanding How the Router Processes Subscriber-Initiated PPP Fast Keepalive Requests*
- [keepalives on page 737](#)
- [no-keepalives on page 851](#)
- *Configuring Frame Relay Keepalives*
- [Circuit and Translational Cross-Connects Overview on page 279](#)
- *Configuring PPP over ATM2 Encapsulation Overview*

Configuring the PPP Challenge Handshake Authentication Protocol

- *PPP Challenge Handshake Authentication Protocol on page 137*
- *Configuring the PPP Challenge Handshake Authentication Protocol on page 138*
- *Displaying the Configured PPP Challenge Handshake Authentication Protocol on page 139*

PPP Challenge Handshake Authentication Protocol

For interfaces with PPP encapsulation, you can configure interfaces to support the PPP Challenge Handshake Authentication Protocol (CHAP), as defined in RFC 1994, PPP

Challenge Handshake Authentication Protocol (CHAP). When you enable CHAP on an interface, the interface can authenticate its peer and can be authenticated by its peer. By default, PPP CHAP is disabled. If CHAP is not explicitly enabled, the interface makes no CHAP challenges and denies all incoming CHAP challenges. To enable CHAP, you must create an access profile, and you must configure the interfaces to use CHAP.

Configuring the PPP Challenge Handshake Authentication Protocol

When you configure an interface to use CHAP, you must assign an access profile to the interface. When an interface receives CHAP challenges and responses, the access profile in the packet is used to look up the shared secret, as defined in RFC 1994. If no matching access profile is found for the CHAP challenge that was received by the interface, the optionally configured default CHAP secret is used. The default CHAP secret is useful if the CHAP name of the peer is unknown, or if the CHAP name changes during PPP link negotiation.

To enable CHAP, you must create an access profile, and you must configure the interfaces to use PAP. For more information on how to configure access profile, see *Configuring Access Profiles for L2TP or PPP Parameters*.

To configure the PPP challenge handshake authentication protocol, on each physical interface with PPP encapsulation, perform the following steps.

1. To assign an access profile to an interface, include the **access-profile** statement at the **[edit interfaces interface-name ppp-options chap]** hierarchy level.

```
[edit interfaces interface-name ppp-options chap]
user@host# set access-profile name
```



NOTE: You must include the **access-profile** statement when you configure the CHAP authentication method. If an interface receives a CHAP challenge or response from a peer that is not in the applied access profile, the link is immediately dropped unless a default CHAP secret has been configured.

2. The default CHAP secret is used when no matching CHAP access profile exists, or if the CHAP name changes during PPP link negotiation. To configure a default CHAP secret for an interface, include the **default-chap-secret** statement at the **[edit interfaces interface-name ppp-options chap]** hierarchy level.

```
[edit interfaces interface-name ppp-options chap]
user@host# set default-chap-secret name
```

3. To configure the name the interface uses in CHAP challenge and response packets, include the **local-name** statement at the **[edit interfaces interface-name ppp-options chap]** hierarchy level:

```
[edit interfaces interface-name ppp-options chap]
user@host# set local-name name
```

**NOTE:**

- The local name is any string from 1 through 32 characters in length, starting with an alphanumeric or underscore character, and including only the following characters:

```
a-z A-Z 0-9 % @ # / \ . _ -
```

- By default, when CHAP is enabled on an interface, the interface uses the router's system hostname as the name sent in CHAP challenge and response packets.

- You can configure the interface not to challenge its peer, and only respond when challenged. To configure the interface not to challenge its peer, include the **passive** statement at the **[edit interfaces *interface-name* ppp-options chap]** hierarchy level:

```
[edit interfaces interface-name ppp-options chap]
user@host# set passive;
```



NOTE: By default, when CHAP is enabled on an interface, the interface always challenges its peer and responds to challenges from its peer.

See Also • [Configuring the PPP Authentication Protocol on page 143](#)

Displaying the Configured PPP Challenge Handshake Authentication Protocol

Purpose To display the configured PPP CHAP at the **[edit access]** and **[edit interfaces]** hierarchy levels.

- Access profile—**pe-A-ppp-clients**
- default CHAP secret data—**"\$ABC123"**
- hostname for the CHAP challenge and response packets—**"pe-A-so-1/1/1"**
- Interface—**so-1/1/2**

Action • Run the **show** command at the **[edit access]** hierarchy level.

```
profile pe-A-ppp-clients;
client cpe-1 chap-secret "$ABC123";
# SECRET-DATA
[edit interfaces so-1/2/0]
encapsulation ppp;
ppp-options {
  chap {
    access-profile pe-A-ppp-clients;
```

```
default-chap-secret "$ABC123";  
local-name "pe-A-so-1/1/1";  
}  
}
```

- Run the **show** command at the **[edit interfaces s0-1/1/2]** hierarchy level.

```
ppp-options {  
  chap {  
    access-profile pe-A-ppp-clients;  
    default-chap-secret "$ABC123";  
    local-name "pe-A-so-1/1/2";  
  }  
}
```

Meaning The configured CHAP and its associated set options are displayed as expected.

Configuring the PPP Password Authentication Protocol On a Physical Interface

- [Understanding PPP Password Authentication Protocol on page 140](#)
- [Configuring the PPP Password Authentication Protocol On a Physical Interface on page 141](#)
- [Configuring the PPP Password Authentication Protocol On a Logical Interface on page 142](#)

Understanding PPP Password Authentication Protocol

For interfaces with PPP encapsulation, you can configure interfaces to support the Password Authentication Protocol (PAP), as defined in RFC 1334, *PAP Authentication Protocols*. If authentication is configured, the PPP link negotiates using CHAP or PAP protocol for authentication during the Link Control Protocol (LCP) negotiation phase. PAP is only performed after the link establishment phase (LCP up) portion of the authentication phase.

During authentication, the PPP link sends a PAP authentication-request packet to the peer with an ID and password. The authentication-request packet is sent every 2 seconds, similar to the CHAP challenge, until a response is received (acknowledgment packet, nonacknowledgment packet). If an acknowledgment packet is received, the PPP link transitions to the next state, the network phase. If a nonacknowledgment packet is received, an LCP terminate request is sent, and the PPP link goes back to the link establishment phase. If no response is received, and an optional retry counter is set to **true**, a new request acknowledgment packet is resent. If the retry counter expires, the PPP link transitions to the LCP negotiate phase.

You can configure the PPP link with PAP in passive mode. By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP

option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

Configuring the PPP Password Authentication Protocol On a Physical Interface

When you configure an interface to use PAP, you must assign an access profile to the interface. When an interface receives PAP authentication requests, the access profile in the packet is used to look up the password.

To enable PAP, you must create an access profile, and you must configure the interfaces to use PAP. For more information on how to configure access profile, see *Configuring Access Profiles for L2TP or PPP Parameters*.

To configure the PPP password authentication protocol, on each physical interface with PPP encapsulation, perform the following steps.

1. To assign an access profile to an interface, include the **access-profile** statement at the **[edit interfaces interface-name ppp-options pap]** hierarchy level.

```
[edit interfaces interface-name ppp-options pap]
user@host# set access-profile name
```

2. To configure the name the interface uses in PAP request and response packets, include the **local-name** statement at the **[edit interfaces interface-name ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set local-name name
```

3. You need to configure the password to be used for authentication. To configure the host password for sending PAP requests, include the **local-password** statement at the **[edit interfaces interface-name ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set local-password password
```



NOTE: By default, when PAP is enabled on an interface, the interface uses the router's system hostname as the name sent in PAP request and response packets.

4. To configure the interface to authenticate with PAP in passive mode, include the **passive** statement at the **[edit interfaces interface-name ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set passive
```



NOTE: By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

See Also • [Configuring the PPP Authentication Protocol on page 143](#)

Configuring the PPP Password Authentication Protocol On a Logical Interface

When you configure an interface to use PAP, you must assign an access profile to the interface. When an interface receives PAP authentication requests, the access profile in the packet is used to look up the password. If no matching access profile is found for the PAP authentication request that was received by the interface, the optionally configured default PAP password is used.

To configure the PPP password authentication protocol, on each logical interface with PPP encapsulation, perform the following steps.

1. To configure the default PAP password, include the **pap-password** statement at the **[edit interfaces *interface-name* unit *logical-unit-number* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set default-pap-password password
```

2. To configure the name the interface uses in PAP request and response packets, include the **local-name** statement at the **[edit interfaces *interface-name* unit *logical-unt-number* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set local-name name
```

3. You need to configure the password to be used for authentication. To configure the host password for sending PAP requests, include the **local-password** statement at the **[edit interfaces *interface-name* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set local-password password
```



NOTE: By default, when PAP is enabled on an interface, the interface uses the router's system hostname as the name sent in PAP request and response packets.

4. To configure the interface to authenticate with PAP in passive mode, include the **passive** statement at the **[edit interfaces *interface-name* unit *logical-unt-number* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set passive
```



NOTE: By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

See Also • [Configuring the PPP Authentication Protocol on page 143](#)

Configuring the PPP Authentication Protocol

The Point-to-Point Protocol (PPP) is an encapsulation protocol for transporting IP traffic across point-to-point links. To configure PPP, you can configure the Challenge Handshake Authentication Protocol (CHAP). CHAP allows each end of a PPP link to authenticate its peer, as defined in RFC 1994. The authenticator sends its peer a randomly-generated challenge that the peer must encrypt using a one-way hash; the peer must then respond with that encrypted result. The key to the hash is a secret known only to the authenticator and authenticated. When the response is received, the authenticator compares its calculated result with the peer's response. If they match, the peer is authenticated.

Each end of the link identifies itself to its peer by including its name in the CHAP challenge and response packets it sends to the peer. This name defaults to the local hostname, or you can explicitly set it using the **local-name** option. When a host receives a CHAP challenge or CHAP response packet on a particular interface, it uses the peer identity to look up the CHAP secret key to use.

To configure CHAP, include the **profile** statement at the **[edit access]** hierarchy level:

```
[edit access]
profile profile-name {
  client client-name chap-secret chap-secret;
```

```
}
```

Then reference the CHAP profile name at the **[edit interfaces]** hierarchy level.

You can configure multiple CHAP profiles, and configure multiple clients for each profile.

Definitions:

- **profile** is the mapping between peer identifiers and CHAP secret keys. The identity of the peer contained in the CHAP challenge or response queries the profile for the secret key to use.
- **client** is the peer identity.
- **chap-secret** is the secret key associated with that peer.

**Related
Documentation**

- *Example: Configuring PPP CHAP*
- *Example: Configuring CHAP Authentication with RADIUS*

PPP Encapsulation on ACX Series Routers

You can configure Point-to-Point Protocol (PPP) encapsulation on physical interfaces on ACX Series routers. PPP provides a standard method for transporting multiprotocol datagrams over a point-to-point link. PPP uses the High-Speed Data Link Control (HDLC) protocol for its physical interface and provides a packet-oriented interface for the network-layer protocols.

PPP is supported on the following MICs on ACX Series routers:

- On ACX1000 routers with 8-port built-in T1/E1 TDM MICs.
- On ACX2000, ACX2100, ACX2200, and ACX4000 routers with 16-port built-in T1/E1 TDM MICs.
- On ACX4000 routers with 16-Port Channelized E1/T1 Circuit Emulation MICs.

Starting with Release 12.3X54, you can configure Point-to-Point Protocol (PPP) encapsulation on physical interfaces on Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP on ACX4000 Series routers

On ACX Series routers, E1, T1, and NxDS0 interfaces support PPP encapsulation.

PPP is the default encapsulation type for physical interfaces. You need not configure encapsulation for any physical interfaces that support PPP encapsulation. If you do not configure encapsulation, PPP is used by default. For physical interfaces that do not support PPP encapsulation, you must configure an encapsulation to use for packets transmitted on the interface.

To configure the encapsulation on a physical interface, include the **encapsulation ppp** statement at the **[edit interfaces *interface-name*]** hierarchy level.

IP class of service (CoS) is not supported on PPP interfaces. All the traffic is sent to the best effort queue (queue 0) and CoS code points are not processed. Also, fixed classifiers are not supported. Circuit cross-connect (CCC) version of PPP (**ppp-ccc** option) and translational cross-connect (TCC) version of PPP (**ppp-tcc** option) are not supported for configuration with the **encapsulation** statement.

PPP is supported only for IPv4 networks. If you configure PPP encapsulation, you can configure an INET family by including the **family inet** statement at the **[edit interfaces interface-name unit logical-unit-number]** hierarchy level. MPLS family is not supported on logical interfaces if you configured PPP encapsulation. On interfaces with PPP encapsulation, configure PPP-specific interface properties by including the **ppp-options** statement at the **[edit interfaces interface-name]** hierarchy level. For interfaces with PPP encapsulation, you can configure interfaces to support the PPP Challenge Handshake Authentication Protocol (CHAP) and Password Authentication Protocol (PAP).

For full T1/E1 interfaces on which PPP encapsulation needs to be enabled, create the T1/E1 interfaces out of channelized T1/E1 interfaces (CT1/CE1) by including the **framing** statement at the **[edit chassis fpc fpc-slot pic pic-slot]** hierarchy level:

```
[edit chassis fpc fpc-slot pic pic-slot]
user@host# set framing (t1 | e1);
```

Configure a CT1 port down to a T1 channel. On the CT1 interface, set the **no-partition** option and then set the interface type as T1.

```
[edit interfaces ct1-mpc-slot/mic-slot/port-number]
user@host# set no-partition interface-type t1
```

Configure a CE1 port down to an E1 channel. On the CE1 interface, set the **no-partition** option and then set the interface type as E1.

```
[edit interfaces ce1-mpc-slot/mic-slot/port-number]
user@host# set no-partition interface-type t1
```

For NxDS0 interfaces on which PPP encapsulation needs to be enabled, partition the CE1 and CT1 interfaces by including the **ce1-x/y/z partition partition-number timeslots timeslots interface-type ds** and **ct1-x/y/z partition partition-number timeslots timeslots interface-type ds** statements at the **[edit interfaces interface-name]** hierarchy level.

The following operational mode commands can be used to view PPP configuration settings and statistical details:

- The **show ppp address-pool** command is used to display PPP address pool information.
- The **show ppp interface** command is used to display PPP session information for an interface.
- The **show ppp statistics** command is used to display PPP session statistics.

- The **show ppp summary** command is used to display summary information about PPP-configured interfaces.
- The **show interfaces e1-fpc/pic/port**, **show interfaces t1-fpc/pic/port**, and **show interfaces ds-fpc/pic/port** commands are used to display the PPP settings of a specific E1, T1, and DS interface, respectively.

Related Documentation

- [Configuring Interface Encapsulation on Physical Interfaces in ACX Series on page 146](#)
- [encapsulation](#)
- [ppp-options on page 930](#)

Configuring Interface Encapsulation on Physical Interfaces in ACX Series

Point-to-Point Protocol (PPP) encapsulation is the default encapsulation type for physical interfaces. You need not configure encapsulation for any physical interfaces that support PPP encapsulation. If you do not configure encapsulation, PPP is used by default. For physical interfaces that do not support PPP encapsulation, you must configure an encapsulation to use for packets transmitted on the interface.

You can optionally configure an encapsulation on a logical interface, which is the encapsulation used within certain packet types. For more information about logical interface encapsulation, see *Configuring Interface Encapsulation on Logical Interfaces*.

This section contains the following topics:

- [Configuring the Encapsulation on a Physical Interface on page 146](#)
- [Encapsulation Capabilities on page 148](#)

Configuring the Encapsulation on a Physical Interface

By default, PPP is the encapsulation type for physical interfaces. To configure the encapsulation on a physical interface, include the **encapsulation** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
encapsulation (atm-ccc-cell-relay | atm-pvc | cisco-hdlc | cisco-hdlc-ccc | cisco-hdlc-tcc
| ethernet-ccc | ethernet-over-atm | ethernet-tcc | ethernet-vpls |
extended-frame-relay-ccc | extended-frame-relay-ether-type-tcc |
extended-frame-relay-tcc | extended-vlan-ccc | extended-vlan-tcc | extended-vlan-vpls
| flexible-ethernet-services | flexible-frame-relay | frame-relay | frame-relay-ccc |
frame-relay-ether-type | frame-relay-ether-type-tcc | frame-relay-port-ccc |
frame-relay-tcc | multilink-frame-relay-uni-nni | ppp | ppp-ccc | ppp-tcc | vlan-ccc |
vlan-vpls);
```



NOTE: ACX Series routers do not support *cisco-hdlc* encapsulation.

The physical interface encapsulation can be one of the following:

- ATM CCC cell relay—Connects two remote virtual circuits or ATM physical interfaces with a label-switched path (LSP). Traffic on the circuit is ATM cells.

For more information, see the *Junos OS Administration Library*.

- ATM PVC—Defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*. When you configure physical ATM interfaces with ATM PVC encapsulation, an RFC 2684-compliant ATM Adaptation Layer 5 (AAL5) tunnel is set up to route the ATM cells over a Multiprotocol Label Switching (MPLS) path that is typically established between two MPLS-capable routers using the Label Distribution Protocol (LDP).
- Ethernet cross-connect—Ethernet interfaces without VLAN tagging can use Ethernet CCC encapsulation. Two related versions are supported:
 - CCC version (**ethernet-ccc**)—Ethernet interfaces with standard Tag Protocol ID (TPID) tagging can use Ethernet CCC encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
 - TCC version (**ethernet-tcc**)—Similar to CCC, but used for circuits with different media on either side of the connection.

For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC is not supported.

- VLAN CCC (**vlan-ccc**)—Ethernet interfaces with VLAN tagging enabled can use VLAN CCC encapsulation. VLAN CCC encapsulation supports TPID 0x8100 only. When you use this encapsulation type, you can configure the **ccc** family only.
- Extended VLAN cross-connect—Gigabit Ethernet interfaces with VLAN 802.1Q tagging enabled can use extended VLAN cross-connect encapsulation. (Ethernet interfaces with standard TPID tagging can use VLAN CCC encapsulation.) Two related versions of extended VLAN cross-connect are supported:
 - CCC version (**extended-vlan-ccc**)—Extended VLAN CCC encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. When you use this encapsulation type, you can configure the **ccc** family only.
 - TCC version (**extended-vlan-tcc**)—Similar to CCC, but used for circuits with different media on either side of the connection.

For 8-port, 12-port, and 48-port Fast Ethernet PICs, extended VLAN CCC is not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC and extended VLAN TCC are not supported.



NOTE: In ACX Series routers, VPLS is supported only on ACX5048 and ACX5096 routers.

- Ethernet VPLS (**ethernet-vpls**)—Ethernet interfaces with VPLS enabled can use Ethernet VPLS encapsulation. For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices*.
- Ethernet VLAN VPLS (**vlan-vpls**)—Ethernet interfaces with VLAN tagging and VPLS enabled can use Ethernet VLAN VPLS encapsulation. For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices*.
- Extended VLAN VPLS (**extended-vlan-vpls**)—Ethernet interfaces with VLAN 802.1Q tagging and VPLS enabled can use Ethernet Extended VLAN VPLS encapsulation. (Ethernet interfaces with standard TPID tagging can use Ethernet VLAN VPLS encapsulation.) Extended Ethernet VLAN VPLS encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices*.
- Flexible Ethernet services (**flexible-ethernet-services**)—Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router) can use flexible Ethernet services encapsulation. Aggregated Ethernet bundles can use this encapsulation type. You use this encapsulation type when you want to configure multiple per-unit Ethernet encapsulations. This encapsulation type allows you to configure any combination of route, TCC, CCC, Layer 2 virtual private networks (VPNs), and VPLS encapsulations on a single physical port. If you configure flexible Ethernet services encapsulation on the physical interface, VLAN IDs from 1 through 511 are no longer reserved for normal VLANs.
- PPP—Defined in RFC 1661, *The Point-to-Point Protocol (PPP) for the Transmission of Multiprotocol Datagrams over Point-to-Point Links*. PPP is the default encapsulation type for physical interfaces. E1, E3, SONET/SDH, T1, and T3 interfaces can use PPP encapsulation.



NOTE: When the encapsulation type is set to Cisco-compatible Frame Relay encapsulation, ensure that the LMI type is set to ANSI or Q933-A.

In ACX Series routers, VPLS is supported only on ACX5048 and ACX5096 routers.

Encapsulation Capabilities

When you configure a point-to-point encapsulation (such as PPP or Cisco HDLC) on a physical interface, the physical interface can have only one logical interface (that is, only one **unit** statement) associated with it. When you configure a multipoint encapsulation (such as Frame Relay), the physical interface can have multiple logical units, and the units can be either point-to-point or multipoint.

Ethernet CCC encapsulation for Ethernet interfaces with standard TPID tagging requires that the physical interface have only a single logical interface. Ethernet interfaces in VLAN mode can have multiple logical interfaces.

For Ethernet interfaces in VLAN mode, VLAN IDs are applicable as follows:

- VLAN ID 0 is reserved for tagging the priority of frames.
- For encapsulation type **vlan-ccc**, VLAN IDs 1 through 511 are reserved for normal VLANs. VLAN IDs 512 and above are reserved for VLAN CCCs.

When you configure Ethernet virtual LAN (VLAN) encapsulation on CCC circuits (by using the **encapsulation vlan-ccc** statement at the **[edit interfaces *interface-name*]** hierarchy level), you can bind a list of VLAN IDs to the interface by using the **vlan-id-list [*vlan-id-numbers*]** statement to configure a CCC for multiple VLANs. Configuring this statement creates a CCC for:

- Each VLAN listed—for example, **vlan-id-list [100 200 300]**
- Each VLAN in a range—for example, **vlan-id-list [100-200]**
- Each VLAN in a list and range combination—for example, **vlan-id-list [50, 100-200, 300]**
- For encapsulation type **vlan-vpls**, VLAN IDs 1 through 511 are reserved for normal VLANs, and VLAN IDs 512 through 4094 are reserved for VPLS VLANs. For 4-port Fast Ethernet interfaces, you can use VLAN IDs 512 through 1024 for VPLS VLANs.
- For Gigabit Ethernet interfaces and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), you can configure flexible Ethernet services encapsulation on the physical interface. For interfaces with **flexible-ethernet-services** encapsulation, all VLAN IDs are valid. VLAN IDs from 1 through 511 are not reserved.
- For encapsulation types **extended-vlan-ccc** and **extended-vlan-vpls**, all VLAN IDs are valid.

The upper limits for configurable VLAN IDs vary by interface type.

When you configure a TCC encapsulation, some modifications are needed to handle VPN connections over unlike Layer 2 and Layer 2.5 links and terminate the Layer 2 and Layer 2.5 protocol locally.

The router performs the following media-specific change:

- ATM—Operation, Administration, and Maintenance (OAM) and Interim Local Management Interface (ILMI) processing is terminated at the router. Cell relay is not supported. The Junos OS strips all ATM encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to ATM encapsulation.

Example: Configuring the Encapsulation on a Physical Interface

Configure PPP encapsulation on a SONET/SDH interface. The second and third **family** statements allow Intermediate System-to-Intermediate System (IS-IS) and MPLS to run on the interface.

```
[edit interfaces]
so-7/0/0 {
```

```

encapsulation ppp;
unit 0 {
  point-to-point;
  family inet {
    address 192.168.1.113/32 {
      destination 192.168.1.114;
    }
  }
  family iso;
  family mpls;
}
}

```

Related Documentation

- [Configuring Interface Encapsulation on Logical Interfaces](#)

Configuring PPP Address and Control Field Compression

For interfaces with PPP, PPP CCC, or PPP TCC encapsulation, you can configure compression of the Data Link Layer address and control fields, as defined in RFC 1661, *The Point-to-Point Protocol (PPP)*. By default, the address and control fields are not compressed. This means PPP-encapsulated packets are transmitted with two 1-byte fields (0xff and 0x03). If you configure address and control field compression (ACFC) and ACFC is successfully negotiated with the local router's peer, the local router transmits packets without these 2 bytes. ACFC allows you to conserve bandwidth by transmitting less data.

On M320, M120, and T Series routers, ACFC is not supported for any ISO family protocols. Do not include the **acfc** statement at the **[edit interfaces *interface-name* ppp-options compression]** hierarchy level when you include the **family iso** statement at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.



NOTE: The address and control fields cannot be compressed in Link Control Protocol (LCP) packets.

The PPP session restarts when you configure or modify compression options.

To configure ACFC:

1. In configuration mode, go to the **[edit interfaces *interface-name* ppp-options]** hierarchy level.

```

[edit ]
user@host# edit interfaces interface-name ppp-options

```

2. Include the **compression** statement at the **[edit interfaces *interface-name* ppp-options]** hierarchy level, and specify **acfc**.

```
[edit interfaces interface-name ppp-options]
compression acfc;
```

To monitor the configuration, issue the **show interfaces *interface-name*** command. Configured options are displayed in the **link flags** field for the physical interface. Successfully negotiated options are displayed in the **flags** field for the logical interface. In this example, both ACFC and PFC are configured, but neither compression feature has been successfully negotiated.

```
user@router# run show interfaces so-0/1/1
```

```
Physical interface: so-0/1/1, Enabled, Physical link is Up
  Interface index: 133, SNMP ifIndex: 27
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3,
  Loopback: None, FCS: 16
    Payload scrambler: Enabled
    Device flags   : Present Running
    Interface flags: Point-To-Point SNMP-Traps 16384
    Link flags     : No-Keepalives ACFC PFC
    LCP state: Opened
    NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
    CHAP state: Not-configured
    CoS queues  : 4 supported
    Last flapped : 2004-12-29 10:49:32 PST (00:18:35 ago)
    Input rate   : 0 bps (0 pps)
    Output rate  : 0 bps (0 pps)
    SONET alarms : None
    SONET defects: None
  Logical interface so-0/1/1.0 (Index 68) (SNMP ifIndex 169)
    Flags: Point-To-Point SNMP-Traps ACFC Encapsulation: PPP
    Protocol inet, MTU: 4470
      Flags: None
      Addresses, Flags: Is-Preferred Is-Primary
        Destination: 3.3.3/24, Local: 3.3.3.2, Broadcast: 3.3.3.255
```

This configuration causes the local router to try to negotiate ACFC with its peer. If ACFC is successfully negotiated, the local router sends packets with compressed address and control fields. When you include the **compression acfc** statement in the configuration, the PPP session restarts, and the local router sends the ACFC option in the LCP Configure-Request packet. The ACFC option informs the local router's peer that the local router can receive packets with compression. If the peer indicates that it, too, can receive packets with compression, then ACFC is negotiated. If ACFC is successfully negotiated, the local router can receive packets with or without the address and control bytes included.

- Related Documentation
- [ppp-options on page 930](#)
 - [compression on page 505](#)
 - [acfc on page 425](#)

Configuring the PPP Protocol Field Compression

For interfaces with PPP, PPP CCC, or PPP TCC encapsulation, you can configure protocol field compression. By default, the protocol field is not compressed. This means PPP-encapsulated packets are transmitted with a two-byte protocol field. For example, IPv4 packets are transmitted with the protocol field set to 0x0021, and MPLS packets are transmitted with the protocol field set to 0x0281.

For all protocols with identifiers in the range 0x0000 through 0x00ff, you can configure the router to compress the protocol field to one byte, as defined in RFC 1661, *The Point-to-Point Protocol (PPP)*. Protocol field compression (PFC) allows you to conserve bandwidth by transmitting less data.



NOTE: The protocol field cannot be compressed in Link Control Protocol (LCP) packets.

The PPP session restarts when you configure or modify compression options.

To configure PFC:

1. In configuration mode, go to the `[edit interfaces interface-name ppp-options]` hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name ppp-options
```

2. Include the **compression** statement at the `[edit interfaces interface-name ppp-options]` hierarchy level, and specify **pfc**.

```
[edit interfaces interface-name ppp-options]
compression pfc;
```

To monitor the configuration, issue the **show interfaces *interface-name*** command. Configured options are displayed in the **link flags** field for the physical interface. Successfully negotiated options are displayed in the **flags** field for the logical interface. In this example, both ACFC and PFC are configured, but neither compression feature has been successfully negotiated.

```
user@router# run show interfaces so-0/1/1
```

```
Physical interface: so-0/1/1, Enabled, Physical link is Up
  Interface index: 133, SNMP ifIndex: 27
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3,
  Loopback: None, FCS: 16,
  Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : No-Keepalives ACFC PFC
  LCP state: Opened
```

```

NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Not-configured
CoS queues      : 4 supported
Last flapped    : 2004-12-29 10:49:32 PST (00:18:35 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
SONET alarms    : None
SONET defects   : None
Logical interface so-0/1/1.0 (Index 68) (SNMP ifIndex 169)
  Flags: Point-To-Point SNMP-Traps ACFC Encapsulation: PPP
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 3.3.3/24, Local: 3.3.3.2, Broadcast: 3.3.3.255

```

This configuration causes the local router to try to negotiate PFC with its peer. If PFC is successfully negotiated, the local router sends packets with compressed protocol fields. When you include the **compression pfc** statement in the configuration, the PPP session restarts, and the local router sends the PFC option in the LCP Configure-Request packet. The PFC option informs the local router's peer that the local router can receive packets with compression. If the peer indicates that it, too, can receive packets with compression, then PFC is negotiated. If PFC is successfully negotiated, the local router can receive packets with either 2-byte (uncompressed) or 1-byte (compressed) protocol fields.

Related Documentation

- [ppp-options on page 930](#)
- [compression on page 505](#)
- [pfc on page 907](#)

Monitoring a PPP Session

You can monitor PPP packet exchanges. When monitoring is enabled, packets exchanged during a session are logged by default to `/var/log/pppd`, or to the file specified in the **traceoptions** statement.

To monitor a PPP session:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```

[edit ]
user@host# edit protocols ppp

```

2. Include the **monitor-session** statement.

```

[edit protocols ppp]
user@host# monitor-session (interface-name | all);

```

When monitoring is configured, the operational mode commands **show ppp summary** and **show ppp interface** display a **Monitored** flag in the **Session flags** column or line.

Related Documentation [monitor-session on page 813](#)

Tracing Operations of the pppd Process

You can trace the operations of the router's pppd process.

To trace the router's pppd process:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **traceoptions** statement.

```
[edit protocols ppp]
traceoptions {
  file filename <files number> <match regular-expression> <size size> <world-readable |
    no-world-readable>;
  flag flag;
  level severity-level;
  no-remote-trace;
}
```

- To specify more than one tracing operation, include multiple **flag** statements.

You can specify the following flags in the **traceoptions** statement:

- **access**—Trace access code
- **address-pool**—Trace address pool code
- **all**—Trace all areas of code
- **auth**—Trace authentication code
- **chap**—Trace challenge handshake authentication protocol code
- **ci**—Trace CI code
- **config**—Trace configuration code
- **ifdb**—Trace interface database code
- **lcp**—Trace LCP state machine code
- **memory**—Trace memory management code
- **message**—Trace message processing code
- **mlppp**—Trace multilink point-to-point protocol code

- **ncp**—Trace NCP state machine code
- **pap**—Trace password authentication protocol code
- **ppp**—Trace PPP protocol processing code
- **radius**—Trace RADIUS processing code
- **redundancy**—Trace redundancy code
- **rtsock**—Trace routing socket code
- **session**—Trace session management code
- **signal**—Trace signal handling code
- **timer**—Trace timer code
- **ui**—Trace user interface code

Related [traceoptions on page 1086](#)
Documentation

Configuring the Router as a DCE with Frame Relay Encapsulation

By default, when you configure an interface with Frame Relay encapsulation, the routing platform is assumed to be data terminal equipment (DTE). That is, the routing platform is assumed to be at a terminal point on the network.

When you configure the router to be a data circuit-terminating equipment (DCE), keepalives are disabled by default.

To configure the router to be DCE:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **dce** option to respond to Frame Relay status enquiry messages.

```
[edit interfaces interface-name]
user@host# set dce
```

Perform one of the following tasks for back-to-back Frame Relay connections:

- Disable sending of keepalives on both sides of the connection.
- Configure one side of the connection as a DTE (the default Junos configuration) by removing the **dce** statement from the configuration and the other as a DCE.

Related Documentation • [dce on page 530](#)

Receive and Transmit Leaky Bucket Properties Overview

Congestion control is particularly difficult in high-speed networks with high volumes of traffic. When congestion occurs in such a network, it is usually too late to react. You can avoid congestion by regulating the flow of packets into your network. Smoother flows prevent bursts of packets from arriving at (or being transmitted from) the same interface and causing congestion.

For all interface types except ATM, Fast Ethernet, Gigabit Ethernet, and channelized IQ and IQE, you can configure leaky bucket properties, which allow you to limit the amount of traffic received on and transmitted by a particular interface. You effectively specify what percentage of the interface's total capacity can be used to receive or transmit packets. You might want to set leaky bucket properties to limit the traffic flow from a link that is known to transmit high volumes of traffic.



NOTE: Instead of configuring leaky bucket properties, you can limit traffic flow by configuring policers. Policers work on all interfaces. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

The leaky bucket is used at the host-network interface to allow packets into the network at a constant rate. Packets might be generated in a bursty manner, but after they pass through the leaky bucket, they enter the network evenly spaced. In some cases, you might want to allow short bursts of packets to enter the network without smoothing them out. By controlling the number of packets that can accumulate in the bucket, the **threshold** property controls burstiness. The maximum number of packets entering the network in t time units is **threshold + rate * t**.

By default, leaky buckets are disabled and the interface can receive and transmit packets at the maximum line rate.

For each DS3 channel on a channelized OC12 interface, you can configure unique receive and transmit buckets.



NOTE: HDLC payload scrambling conflicts with traffic shaping configured using leaky bucket properties. If you configure leaky bucket properties, you must disable payload scrambling, because the Junos OS rejects configurations that have both features enabled. For more information, see *Configuring SONET/SDH HDLC Payload Scrambling for Link Stability*.

Related Documentation • [Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 157](#)

• [SONET/SDH Interfaces Overview](#)

- [receive-bucket on page 967](#)
- [transmit-bucket on page 1093](#)

Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion

You can configure leaky bucket properties which allow you to limit the amount of traffic received on and transmitted by a particular interface. You can specify what percentage of the interface's total capacity can be used to receive or transmit packets. You might want to set leaky bucket properties to limit the traffic flow from a link that is known to transmit high volumes of traffic.

To configure leaky bucket properties:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **receive-bucket** statement.

```
[edit interfaces interface-name]
user@host# set receive-bucket
```

3. Configure the **overflow** option, the **threshold** option, and the **rate** option for the receive leaky bucket, which specifies what percentage of the interface's total capacity can be used to receive packets.

```
[edit interfaces interface-name receive-bucket]
user@host# set overflow (discard | tag)
user@host# set threshold bytes
user@host# set rate percentage
```

4. Configure the **transmit-bucket** statement.

```
[edit interfaces interface-name]
user@host# set transmit-bucket
```

5. Configure the **overflow** option, the **threshold** option, and the **rate** option for the transmit leaky bucket, which specifies what percentage of the interface's total capacity can be used to transmit packets.

```
[edit interfaces interface-name transmit-bucket]
user@host# set overflow (discard | tag)
user@host# set threshold bytes
user@host# set rate percentage
```

Related Documentation

- [Receive and Transmit Leaky Bucket Properties Overview on page 156](#)
- [SONET/SDH Interfaces Overview](#)
- [receive-bucket on page 967](#)
- [transmit-bucket on page 1093](#)

Understanding Unidirectional Traffic Flow on Physical Interfaces

By default, physical interfaces are bidirectional; that is, they both transmit and receive traffic. You can configure unidirectional link mode on a 10-Gigabit Ethernet interface that creates two new physical interfaces that are unidirectional. The new transmit-only and receive-only interfaces operate independently, but both are subordinate to the original parent interface.

The unidirectional interfaces enable the configuration of a unidirectional link topology. Unidirectional links are useful for applications such as broadband video services where almost all traffic flow is in one direction, from the provider to the user. Unidirectional link mode conserves bandwidth by enabling it to be differentially dedicated to transmit and receive interfaces. In addition, unidirectional link mode conserves ports for such applications because the transmit-only and receive-only interfaces act independently. Each can be connected to different routers, for example, reducing the total number of ports required.



NOTE: Unidirectional link mode is currently supported on only the following hardware:

- 4-port 10-Gigabit Ethernet DPC on the MX960 router
- 10-Gigabit Ethernet IQ2 PIC and 10-Gigabit Ethernet IQ2E PIC on the T Series router

The transmit-only interface is always operationally up. The operational status of the receive-only interface depends only on local faults; it is independent of remote faults and of the status of the transmit-only interface.

On the parent interface, you can configure attributes common to both interfaces, such as clocking, framing, `gether-options`, and `sonet-options`. On each of the unidirectional interfaces, you can configure encapsulation, MAC address, MTU size, and logical interfaces.

Unidirectional interfaces support IP and IPv6. Packet forwarding takes place by means of static routes and static ARP entries, which you can configure independently on both unidirectional interfaces.

Only transmit statistics are reported on the transmit-only interface (and shown as zero on the receive-only interface). Only receive statistics are reported on the receive-only interface (and shown as zero on the transmit-only interface). Both transmit and receive statistics are reported on the parent interface.

- Related Documentation
- [unidirectional on page 1107](#)
 - [Enabling Unidirectional Traffic Flow on Physical Interfaces on page 159](#)

Enabling Unidirectional Traffic Flow on Physical Interfaces

By default, physical interfaces are bidirectional; that is, they both transmit and receive traffic. You can configure unidirectional link mode on a 10-Gigabit Ethernet interface that creates two new physical interfaces that are unidirectional. The new transmit-only and receive-only interfaces operate independently, but both are subordinate to the original parent interface.

To enable unidirectional link mode on a physical interface, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **unidirectional** option to create two new, unidirectional (transmit-only and receive-only) physical interfaces subordinate to the original parent interface.

```
[edit interfaces interface-name]
user@host# set unidirectional
```



NOTE: Unidirectional link mode is currently supported on only the following hardware:

- 4-port 10-Gigabit Ethernet DPC on the MX960 router
- 10-Gigabit Ethernet IQ2 PIC and 10-Gigabit Ethernet IQ2E PIC on the T Series router

- Related Documentation
- [unidirectional on page 1107](#)
 - [Understanding Unidirectional Traffic Flow on Physical Interfaces on page 158](#)

Physical Interface Damping Overview

Physical interface damping limits the advertisement of the up and down transitions (flapping) on an interface. Each time a transition occurs, the interface state is changed, which generates an advertisement to the upper-level routing protocols. Damping helps reduce the number of these advertisements.

From the viewpoint of network deployment, physical interface flaps fall into the following categories:

- Nearly instantaneous multiple flaps of short duration (milliseconds).
- Periodic flaps of long duration (seconds).

Figure 6 on page 160 is used to describe these types of interface flaps and the damping configuration that you can use in each case.

Figure 6: Two Router Interfaces Connected Through Transport Equipment



NOTE: We recommend that you use similar damping configurations on both ends of the physical interface. Configuring damping on one end and not having interface damping on the other end can result in undesired behavior.

The following sections describe the types of interface damping depending upon the transition time length.

- [Damping Overview for Shorter Physical Interface Transitions on page 160](#)
- [Damping Overview for Longer Physical Interface Transitions on page 161](#)

Damping Overview for Shorter Physical Interface Transitions


Figure 6 on page 160 shows two routers with two transport devices between them. If a redundant link between the two transport devices fails, link switching is performed. Link switching takes a number of milliseconds. As shown in Figure 7 on page 161, during switching, both router interfaces might encounter multiple flaps with an up-and-down duration of several milliseconds. These multiple flaps, if advertised to the upper-level routing protocols, might result in undesired route updates. This is why you might want to damp these interface flaps.



NOTE: Damping is suitable only with routing protocols.

For shorter physical interface transitions, you configure interface damping with the **hold-time** statement on the interface. The hold timer enables interface damping by not advertising interface transitions until the hold timer duration has passed. When a hold-down timer is configured and the interface goes from up to down, the down hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still *down*, then the router begins to advertise the interface as being down. Similarly, when a hold-up timer is configured and an interface goes from down to up, the up hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still *up*, then the router begins to advertise the interface as being up.


Figure 7: Multiple Flaps of Short Duration (Milliseconds)

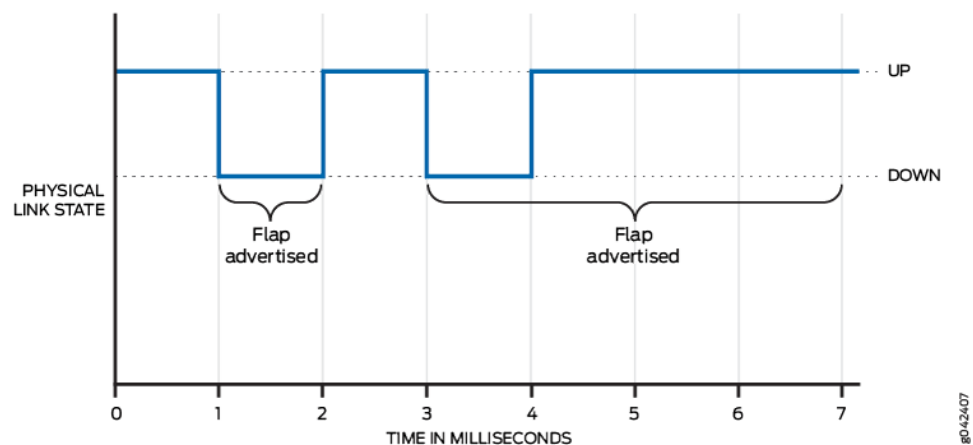

Damping Overview for Longer Physical Interface Transitions

When the link between a router interface and the transport devices is not stable, this can lead to periodic flapping, as shown in [Figure 8 on page 162](#). Flaps occur in the order of seconds or more, with an up-and-down flap duration in the order of a second or more. In this case, using the hold timer feature might not produce optimal results as it cannot suppress the relatively longer and repeated interface flaps. Increasing the hold time duration to seconds still allows the system to send route updates on the flapping interface, so fails to suppress periodically flapping interfaces on the system.

Figure 8: Periodic Flaps of Long Duration (Seconds)

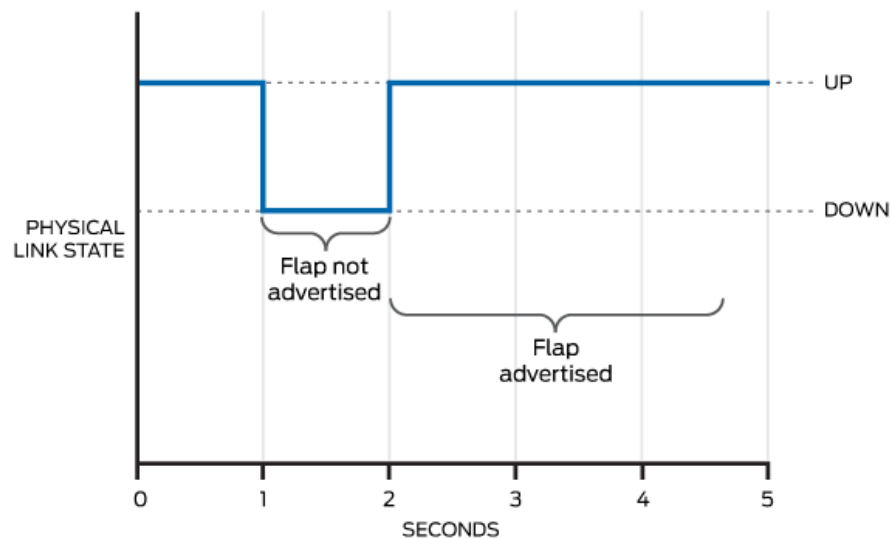

g042408

For longer periodic interface flaps, you configure interface damping with the **damping** statement on the interface. This damping method uses an exponential back-off algorithm to suppress interface up-and-down event reporting to the upper-level protocols. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level, the interface is placed in the suppress state, and further interface link up and down events are not reported to the upper-level protocols.

**NOTE:**

- Only PTX Series routers, T Series routers, MX960 routers, MX480 routers, MX240 routers, MX80 routers, and M10i routers support interface damping for longer periodic interface flaps on all the line cards.
- Penalty added on every interface flap is 1000.
- The system does not indicate whether an interface is down because of suppression or that is the actual state of the physical interface. Because of this, SNMP link traps and Operation, Administration, and Maintenance (OAM) protocols cannot differentiate the damped version of the link state from the real version. Therefore, the traps and protocols might not work as expected.
- You can verify suppression by viewing the information in the Damping field of the `show interface extensive` command output.

At all times, the interface penalty counter follows an exponential decay process.

[Figure 9 on page 164](#) and [Figure 10 on page 165](#) show the decay process as it applies to recovery when the physical level link is down or up. As soon as the accumulated penalty reaches the lower boundary of the reuse level, the interface is marked as unsuppressed,

and further changes in the interface link state are again reported to the upper-level protocols. You use the **max-suppress** option to configure the maximum time for restricting the accumulation of the penalty beyond the value of the maximum penalty. The value of the maximum penalty is calculated by the software. The maximum penalty corresponds to the time it would take max-suppress to decay and reach the reuse level. The penalty continues to decay after crossing the reuse level.

[Figure 9 on page 164](#) and [Figure 10 on page 165](#) show the accumulated penalty, and the decay over time as a curve. Whenever the penalty is below the reuse level and the physical level link changes state, state changes are advertised to the system and cause SNMP state changes.

[Figure 9 on page 164](#) shows the penalty dropping below the reuse level when the physical link is down. The system is notified of a state change only after the physical level link transitions to up.

Figure 9: Physical-Level Link Is Down When the Penalty Falls Below the Reuse Level


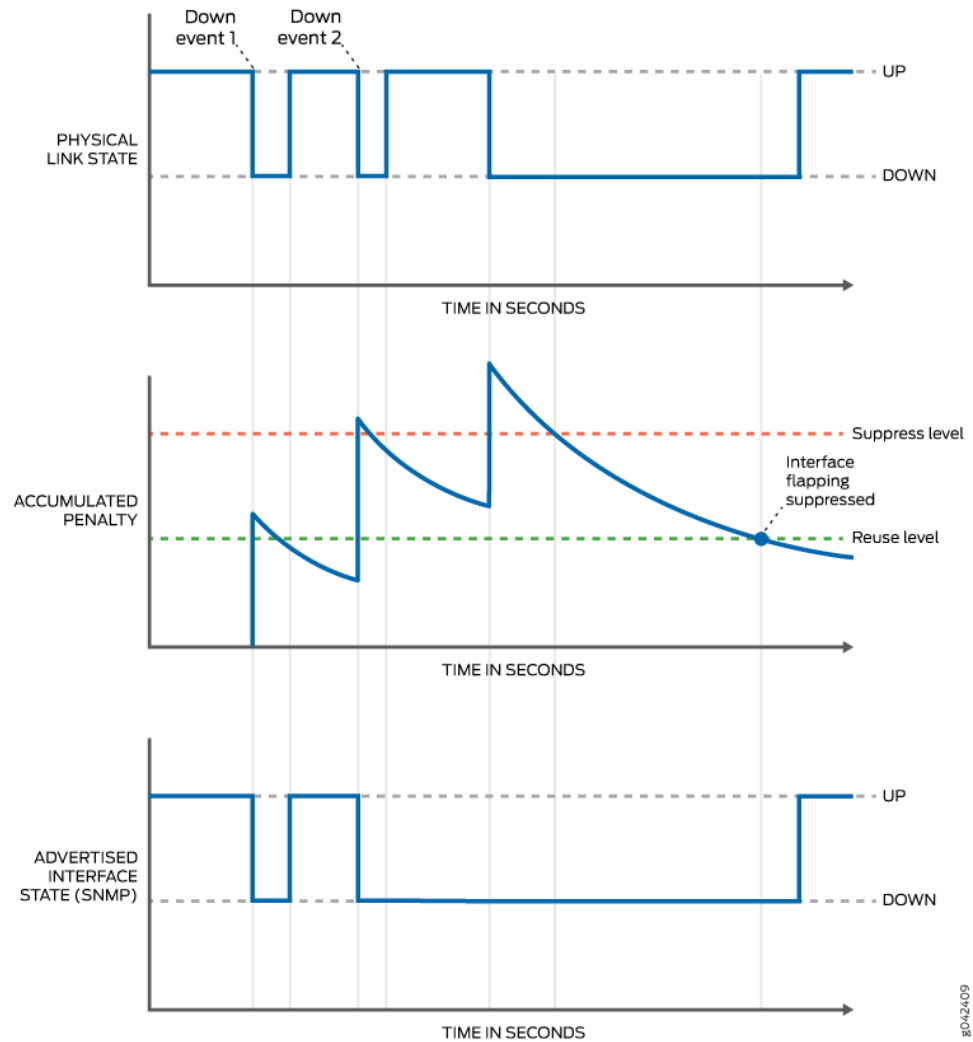


Figure 10 on page 165 shows the penalty dropping below the reuse level when the physical link is up. The system is notified of a state change immediately.

Figure 10: Physical-Level Link Is Up When the Penalty Falls Below the Reuse Level

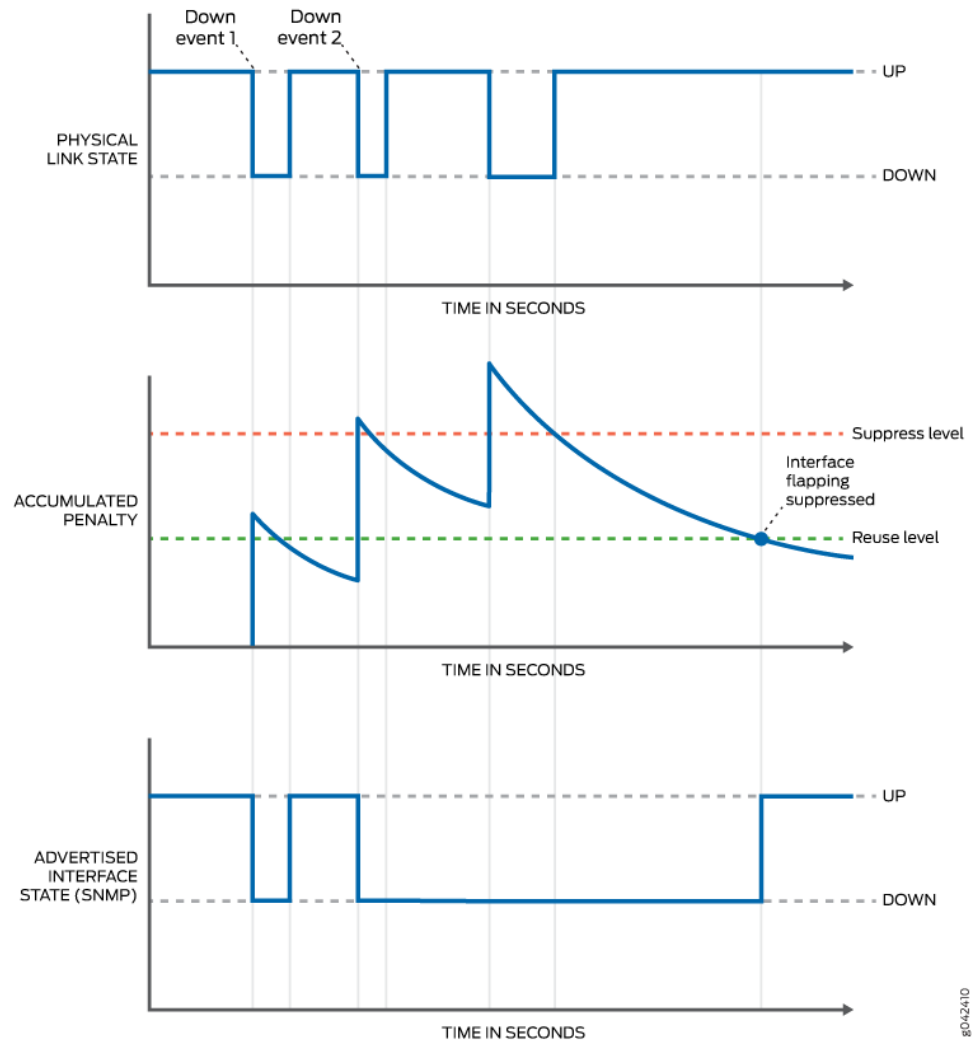

Related Documentation

- [Damping Shorter Physical Interface Transitions on page 166](#)
- [Damping Longer Physical Interface Transitions on page 167](#)
- [Understanding Damping Parameters](#)
- [damping on page 525](#)
- [hold-time on page 666](#)

Damping Shorter Physical Interface Transitions

By default, when an interface changes from being up to being down, or from down to up, this transition is advertised immediately to the hardware and Junos OS. In some situations—for example, when an interface is connected to an add/drop multiplexer (ADM) or wavelength-division multiplexer (WDM), or to protect against SONET/SDH framer holes—you might want to damp interface transitions. This means not advertising the interface's transition until a certain period of time has passed, called the *hold-time*. When you have damped interface transitions and the interface goes from up to down, the down hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still *down*, then the router begins to advertise the interface as being down. Similarly, when an interface goes from down to up, the up hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still *up*, then the router begins to advertise the interface as being up. For information about physical interface damping, see [“Physical Interface Damping Overview” on page 160](#).

This task applies to damping shorter physical interface transitions in milliseconds. To damp longer physical interface transitions in seconds, see [“Damping Longer Physical Interface Transitions” on page 167](#).

To configure damping of shorter physical interface transitions:

1. Select the interface to damp, where the interface name is *interface-type-fpc/pic/port*:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the hold-time for link up and link down.

```
[edit interfaces interface-name]
user@host# set hold-time up milliseconds down milliseconds
```

The hold time can be a value from 0 through 4,294,967,295 milliseconds. The default value is 0, which means that interface transitions are not damped. Junos OS advertises the transition within 100 milliseconds of the time value you specify.

For most Ethernet interfaces, hold timers are implemented using a one-second polling algorithm. For 1-port, 2-port, and 4-port Gigabit Ethernet interfaces with small form-factor pluggable transceivers (SFPs), hold timers are interrupt-driven.



NOTE: The hold-time option is not available for controller interfaces.

Related Documentation

- [Physical Interface Damping Overview on page 160](#)
- [Damping Longer Physical Interface Transitions on page 167](#)

- *SONET/SDH Defect Hold Times for Damping Interface Transitions Overview*
- *Configuring SONET/SDH Defect Triggers*
- [hold-time on page 666](#)

Damping Longer Physical Interface Transitions

Physical interface damping limits the advertisement of the up and down transitions (flapping) on an interface. An unstable link between a router interface and the transport devices can lead to periodic flapping. Longer flaps occur with a period of about five seconds or more, with an up-and-down duration of one second. For these longer periodic interface flaps, you configure interface damping with the **damping** statement on the interface. This damping method uses an exponential back-off algorithm to suppress interface up and down event reporting to the upper-level protocols. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level **max-suppress**, the interface is placed in the suppress state, and further interface state up and down transitions are not reported to the upper-level protocols.



NOTE:

- Only PTX Series routers, T Series routers, MX2010 routers, MX2020 routers, MX960 routers, MX480 routers, MX240 routers, MX80 routers, and M10i routers support interface damping for longer periodic interface flaps.
- The system does not indicate whether an interface is down because of suppression or that is the actual state of the physical interface. Because of this, SNMP link traps and Operation, Administration, and Maintenance (OAM) protocols cannot differentiate the damped version of the link state from the real version. Therefore, the traps and protocols might not work as expected.
- You can verify suppression by viewing the information in the Damping field of the **show interface extensive** command output.

You can view the damping parameters with the **show interfaces extensive** command.

To configure damping of longer physical interface transitions:

1. Select the interface to damp, where the interface name is *interface-type-fpc/pic/port* or an interface range:

```
[edit]
user@host# edit interfaces interface-name
```

2. Enable longer interface transition damping on a physical interface:

```
[edit interfaces interface-name damping]
```

```
user@host# set enable
```

3. (Optional) Set the maximum time in seconds that an interface can be suppressed no matter how unstable the interface has been.



NOTE: Configure `max-suppress` to a value that is greater than the value of `half-life`; otherwise, the configuration is rejected.

```
[edit interfaces interface-name damping]
user@host# set max-suppress maximum-seconds
```

4. (Optional) Set the decay half-life in seconds, which is the interval after which the accumulated interface penalty counter is reduced by half if the interface remains stable.



NOTE: Configure `max-suppress` to a value that is greater than the value of `half-life`; otherwise, the configuration is rejected.

```
[edit interfaces interface-name damping]
user@host# set half-life seconds
```

5. (Optional) Set the reuse threshold (no units). When the accumulated interface penalty counter falls below this value, the interface is no longer suppressed.

```
[edit interfaces interface-name damping]
user@host# set reuse number
```

6. (Optional) Set the suppression threshold (no units). When the accumulated interface penalty counter exceeds this value, the interface is suppressed.

```
[edit interfaces interface-name damping]
user@host# set suppress number
```

Related Documentation

- [Physical Interface Damping Overview on page 160](#)
- [show interfaces extensive on page 1624](#)
- [Damping Shorter Physical Interface Transitions on page 166](#)
- [damping on page 525](#)

Example: Configuring Physical Interface Damping

This example shows how to configure damping for a physical interface on a PTX Series Packet Transport Router.

- [Requirements on page 169](#)
- [Overview on page 169](#)
- [Configuration on page 170](#)
- [Verification on page 170](#)

Requirements

This example uses the following hardware and software components:

- One PTX Series Packet Transport Router
- One or more routers that provide input packets and receive output packets
- Junos OS Release 14.1 or later

Overview

Physical interface damping provides a smoothing of the up and down transitions (flapping) on an interface. Each time a transition occurs, the interface state is changed, which generates an advertisement to the upper-level routing protocols. Damping helps reduce the number of these advertisements.

From the viewpoint of network deployment, physical interface flaps fall into these categories:

- Nearly instantaneous multiple flaps of short duration (milliseconds). For shorter physical interface transitions, you configure interface damping with the **hold-time** statement on the interface. The hold timer enables interface damping by not advertising interface transitions until the hold timer duration has passed. When a hold-down timer is configured and the interface goes from up to down, the interface is not advertised to the rest of the system as being down until it has remained down for the hold-down timer period. Similarly, when a hold-up timer is configured and an interface goes from down to up, it is not advertised as being up until it has remained up for the hold-up timer period.
- Periodic flaps of long duration (seconds). For longer periodic interface flaps, you configure interface damping with the **damping** statement on the interface. This damping method uses an exponential back-off algorithm to suppress interface up and down event reporting to the upper-level protocols. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level, the interface is placed in the suppress state, and further interface state up transitions are not reported to the upper-level protocols.

Configuration

CLI Quick Configuration To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set interfaces xe-6/0/0 damping half-life 11 max-suppress 2222 reuse 3333 suppress 4444
```

Step-by-Step Procedure To configure damping on the PTX Series Packet Transport Router:

1. Enable damping on the interface, set the half-life interval, maximum suppression, reuse, and suppress values:

```
[edit interface]
user@router# set xe-6/0/0 damping half-life 11 max-suppress 2222 reuse 3333 suppress 4444
```

2. Commit configuration:

```
[edit]
user@router# commit
```

Results

From configuration mode, confirm your configuration by entering the **show interfaces** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@router# show interfaces
xe-6 {
  damping {
    half-life 11;
    max-suppress 2222;
    reuse 3333;
    suppress 4444;
  }
}
```

Verification

To confirm that the configuration is working properly, perform this task:

- [Verifying Interface Damping on xe6 on page 171](#)

Verifying Interface Damping on xe6

Purpose Verify that damping is enabled on the interface and that the damping parameter values are correctly set.

Action From operational mode, run the **show interfaces extensive** command.

```
user@router# run show interfaces xe-6/0/0 extensive
```

```
Physical interface: xe-6/0/0, Enabled, Physical link is Up
Interface index: 158, SNMP ifIndex: 535, Generation: 161
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None,
Source filtering: Disabled, Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 8 supported, 8 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Damping       : half-life: 11 sec, max-suppress: 2222 sec, reuse: 3333,
suppress: 4444, state: unsuppressed
```

Meaning Damping is enabled and configured successfully on the xe-6 interface.

Related Documentation

- [Physical Interface Damping Overview on page 160](#)
- [damping on page 525](#)

Configuring Multiservice Physical Interface Properties

The adaptive services (AS), collector, monitoring services, and monitoring services II interfaces are multiservice interfaces specifically designed to enable IP services. To configure multiservice physical interface properties on the collector, monitoring services, and AS interfaces, include the **multiservice-options** statement:

```
multiservice-options {
  (core-dump | no-core-dump);
  (syslog | no-syslog);
  flow-control-options {
    down-on-flow-control;
    dump-on-flow-control;
    reset-on-flow-control;
  }
}
```

You can include these statements at the following hierarchy levels:

- **[edit interfaces cp-fpc/pic/port]**

- `[edit interfaces mo-fpc/pic/port]`
- `[edit interfaces sp-fpc/pic/port]`

For more information about the services interfaces, see the *Junos OS Services Interfaces Library for Routing Devices*.

Enabling or Disabling SNMP Notifications on Physical Interfaces

By default, Simple Network Management Protocol (SNMP) notifications are sent when the state of an interface or a connection changes. You can enable or disable these notification based on you requirements.

To explicitly enable sending SNMP notifications on the physical interface, perform the following steps:

1. In configuration mode, go to the `[edit interfaces interface-name]` hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **traps** option to enable sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.

```
[edit interfaces interface-name]
user@host# set traps
```

To disable sending SNMP notifications on the physical interface, perform the following steps:

1. In configuration mode, go to the `[edit interfaces interface-name]` hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **no-traps** option to disable sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.

```
[edit interfaces interface-name]
user@host# set no-traps
```

Related
Documentation

- [traps on page 1098](#)

Configuring Accounting for the Physical Interface

- [Accounting Profiles Overview on page 173](#)
- [Configuring Accounting for the Physical Interface on page 173](#)
- [Displaying Accounting Profile for the Physical Interface on page 174](#)

Accounting Profiles Overview

Juniper Networks routers and switches can collect various kinds of data about traffic passing through the router and switch. You can set up one or more *accounting profiles* that specify some common characteristics of this data, including the following:

- The fields used in the accounting records
- The number of files that the router or switch retains before discarding, and the number of bytes per file
- The polling period that the system uses to record the data

You configure the profiles and define a unique name for each profile using statements at the **[edit accounting-options]** hierarchy level. There are two types of accounting profiles: interface profiles and filter profiles. You configure interface profiles by including the **interface-profile** statement at the **[edit accounting-options]** hierarchy level. You configure filter profiles by including the **filter-profile** statement at the **[edit accounting-options]** hierarchy level. For more information, see the *Network Management and Monitoring Guide*.

You apply filter profiles by including the **accounting-profile** statement at the **[edit firewall filter *filter-name*]** and **[edit firewall family *family* filter *filter-name*]** hierarchy levels. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

Configuring Accounting for the Physical Interface

Before you begin

You must configure a profile to collect error and statistic information for input and output packets on a particular physical interface. An accounting profile specifies what statistics should be collected and written to a log file. For more information on how to configure an accounting-data log file, see the *Configuring Accounting-Data Log Files*.

An interface profile specifies the information collected and written to a log file. You can configure a profile to collect error and statistic information for input and output packets on a particular physical interface.

1. To configure which statistics should be collected for an interface, include the **fields** statement at the **[edit accounting-options interface-profile *profile-name*]** hierarchy level.

```
[edit accounting-options interface-profile profile-name]  
user@host# set fields field-name
```

- Each accounting profile logs its statistics to a file in the `/var/log` directory. To configure which file to use, include the `file` statement at the `[edit accounting-options interface-profile profile-name]` hierarchy level.

```
[edit accounting-options interface-profile profile-name]
user@host# set file filename
```



NOTE: You must specify a file statement for the interface profile that has already been configured at the `[edit accounting-options]` hierarchy level. For more information, see the [Configuring Accounting-Data Log Files](#)

- Each interface with an accounting profile enabled has statistics collected once per interval time specified for the accounting profile. Statistics collection time is scheduled evenly over the configured interval. To configure the interval, include the `interval` statement at the `[edit accounting-options interface-profile profile-name]` hierarchy level.

```
[edit accounting-options interface-profile profile-name]
user@host# set interval minutes
```



NOTE: The minimum interval allowed is 1 minute. Configuring a low interval in an accounting profile for a large number of interfaces might cause serious performance degradation.

- To configure the interfaces on which the accounting needs to be performed, apply the interface profile to a physical interface by including the `accounting-profile` statement at the `[edit interfaces interface-name]` hierarchy level.

```
[edit interfaces]
user@host# set interface-name accounting-profile profile-name
```

See Also • [Configuring Accounting-Data Log Files](#)

Displaying Accounting Profile for the Physical Interface

Purpose To display the configured accounting profile a particular physical interface at the `[edit accounting-options interface-profile profile-name]` hierarchy level:

- interface-name—`ge-1/0/1`
- Interface profile —`if_profile`
- File name—`if_stats`
- Interval—15 minutes

- Action**
- Run the **show** command at the **[edit edit interfaces ge-1/0/1]** hierarchy level.

```
[edit interfaces ge-1/0/1]
accounting-profile if_profile;
```

- Run the **show** command at the **[edit accounting-options]** hierarchy level.

```
interface-profile if_profile {
  interval 15;
  file if_stats {
    fields {
      input-bytes;
      output-bytes;
      input-packets;
      output-packets;
      input-errors;
      output-errors;
    }
  }
}
```

Meaning The configured accounting and its associated set options are displayed as expected.

Disabling a Physical Interface

- [Disabling a Physical Interface on page 175](#)
- [Example: Disabling a Physical Interface on page 176](#)
- [Effect of Disabling Interfaces on T series PICs on page 177](#)

Disabling a Physical Interface

You can disable a physical interface, marking it as being down, without removing the interface configuration statements from the configuration.



CAUTION: Dynamic subscribers and logical interfaces use physical interfaces for connection to the network. The Junos OS allows you to set the interface to disable and commit the change while dynamic subscribers and logical interfaces are still active. This action results in the loss of all subscriber connections on the interface. Use care when disabling interfaces.

To disable a physical interface:

- In configuration mode, go to **[edit interfaces *interface-name*]** hierarchy level.

```
[edit]
user@host# edit interfaces ge-fpc/pic/port
```

- Include the **disable** statement.

```
[edit interfaces at-fpc/pic/port ]
user@host# set disable
```



NOTE: On the router, when you use the `disable` statement at the `edit interfaces` hierarchy level, depending on the PIC type, the interface might or might not turn off the laser. Older PIC transceivers do not support turning off the laser, but newer Gigabit Ethernet PICs with SFP and XFP transceivers do support it and the laser will be turned off when the interface is disabled.



WARNING: Do not stare into the laser beam or view it directly with optical instruments even if the interface has been disabled.

Example: Disabling a Physical Interface

Sample interface configuration:

```
[edit interfaces]
user@host# show
ge-0/3/2 {
  unit 0 {
    description CE2-to-PE1;
    family inet {
      address 20.1.1.6/24;
    }
  }
}
```

Disabling the interface:

```
[edit interfaces ge-0/3/2]
user@host# set disable
```

Verifying the interface configuration:

```
[edit interfaces ge-0/3/2]
user@host# show
disable; # Interface is marked as disabled.
unit 0 {
  description CE2-to-PE1;
  family inet {
    address 20.1.1.6/24;
  }
}
```

Effect of Disabling Interfaces on T series PICs

The following table describes the effect of using the **set interfaces disable *interface_name*** statement on T series PICs.

Table 47: Effect of set interfaces disable <interface_name> on T series PICs

PIC Model Number	PIC Description	Type of PIC	Behaviour
PF-12XGE-SFPP	10-Gigabit Ethernet LAN/WAN PIC with SFP+ (T4000 Router)	5	Tx laser disabled
PF-24XGE-SFPP	10-Gigabit Ethernet LAN/WAN PIC with Oversubscription and SFP+ (T4000 Router)	5	Tx laser disabled
PF-1CGE-CFP	100-Gigabit Ethernet PIC with CFP (T4000 Router)	5	Tx laser disabled
PD-4XGE-XFP	10-Gigabit Ethernet, 4-port LAN/WAN XFP	4	Tx laser disabled
PD-5-10XGE-SFPP	10-Gigabit LAN/WAN with SFP+	4	Tx laser disabled
PD-1XLE-CFP	40-Gigabit with CFP	4	Tx laser disabled
PD-1CE-CFP-FPC4	100-Gigabit with CFP	4	Tx laser disabled
PD-TUNNEL	40-Gigabit Tunnel Services	4	NA
PD-4OC192-SON-XFP	OC192/STM64, 4-port XFP	4	Tx laser not disabled
PD-1OC768-SON-SR	OC768c/STM256, 1-port	4	Tx laser not disabled

Related Documentation • [disable on page 555](#)

CHAPTER 3

Configuring Logical Interface Properties

- [Logical Interfaces Configuration Properties Overview on page 179](#)
- [Logical Interfaces Configuration Statements on page 180](#)
- [Logical Interfaces Statements List on page 183](#)
- [Specifying the Logical Interface Number on page 190](#)
- [Adding a Logical Unit Description to the Configuration on page 190](#)
- [Configuring the Interface Bandwidth on page 191](#)
- [Configuring Interface Encapsulation on Logical Interfaces on page 192](#)
- [Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 194](#)
- [Configuring a Point-to-Point Connection on page 195](#)
- [Configuring a Multipoint Connection on page 195](#)
- [Configuring the PPP Restart Timers on page 196](#)
- [Configuring the PPP Clear Loop Detected Timer on page 196](#)
- [Configuring the LCP Configure-Request Maximum Sent on page 197](#)
- [Configuring the NCP Configure-Request Maximum Sent on page 197](#)
- [Configuring Dynamic Profiles for PPP on page 198](#)
- [Configuring PPP CHAP Authentication on page 198](#)
- [Configuring the PPP Password Authentication Protocol On a Logical Interface on page 199](#)
- [Configuring Accounting for the Logical Interface on page 201](#)
- [Enabling or Disabling SNMP Notifications on Logical Interfaces on page 203](#)
- [Disabling a Logical Interface on page 203](#)
- [Configuring Logical System Interface Properties on page 204](#)

Logical Interfaces Configuration Properties Overview

For a physical interface device to function, you must configure at least one logical interface on that device. For each logical interface, you must specify the protocol family that the interface supports. You can also configure other logical interface properties. These vary by Physical Interface Card (PIC) and encapsulation type, but include the IP address of the interface, and whether the interface supports multicast traffic, data-link connection

identifiers (DLCIs), virtual channel identifiers (VCIs) and virtual path identifiers (VPIs), and traffic shaping.

Related Documentation

- [Logical Part of an Interface Name on page 40](#)

Logical Interfaces Configuration Statements

To configure logical interface properties, include the following statements:

```
unit logical-unit-number {
  accept-source-mac {
    mac-address mac-address {
      policer {
        input cos-policer-name;
        output cos-policer-name;
      }
    }
  }
  accounting-profile name;
  allow-any-vci;
  atm-scheduler-map (map-name | default);
  backup-options {
    interface interface-name;
  }
  bandwidth rate;
  cell-bundle-size cells;
  clear-dont-fragment-bit;
  compression {
    rtp {
      f-max-period number;
      queues [ queue-numbers ];
      port {
        minimum port-number;
        maximum port-number;
      }
    }
  }
  compression-device interface-name;
  copy-tos-to-outer-ip-header;
  demux-destination family;
  demux-source family;
  demux-options {
    underlying-interface interface-name;
  }
  description text;
  interface {
    l2tp-interface-id name;
    (dedicated | shared);
  }
  dialer-options {
    activation-delay seconds;
    callback;
```



```

callback-wait-period time;
deactivation-delay seconds;
dial-string [ dial-string-numbers ];
idle-timeout seconds;
incoming-map {
    caller (caller-id| accept-all);
    initial-route-check seconds;
    load-interval seconds;
    load-threshold number;
    pool pool-name;
    redial-delay time;
    watch-list {
        [ routes ];
    }
}
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold plp1 cells;
filter filter-name;
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
link-layer-overhead percent;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    up-count cells;
    down-count cells;
}

```

```

oam-period (seconds | disable);
output-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    lcp-restart-timer milliseconds;
    loopback-clear-timer seconds;
    ncp-restart-timer milliseconds;
    pap {
        default-pap-password password;
        local-name name;
        local-password password;
        passive;
    }
}
pppoe-options {
    access-concentrator name;
    auto-reconnect seconds;
    (client | server);
    service-name name;
    underlying-interface interface-name;
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
    length);
    queue-length number;
}
short-sequence;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
}

```

```

key number;
routing-instance {
    destination routing-instance-name;
}
source source-address;
ttl number;
}
vci vpi-identifier.vci-identifier;
vci-range start start-vci end end-vci;
vpi vpi-identifier;
vlan-id number;
vlan-id-range number-number;
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
family family {
    [ family-statements ];
}
}

```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

For information about interface-specific logical properties, see [Table 48 on page 183](#).

Logical Interfaces Statements List

[Table 48 on page 183](#) lists statements that you can use to configure logical interfaces.

Table 48: Statements for Logical Interface Properties

Statement	Interface Types	Usage Guidelines
<code>access-profile name</code>	ATM2 IQ interfaces	"Configuring the PPP Password Authentication Protocol On a Logical Interface" on page 199
<code>accept-source-mac</code>	Gigabit Ethernet intelligent queuing (IQ) interfaces	<i>Configuring MAC Address Filtering</i>
<code>accounting-profile name</code>	All	"Configuring Accounting for the Logical Interface" on page 201
<code>allow-any-vci</code>	Asynchronous Transfer Mode (ATM) interfaces	<i>Configuring ATM Interface Encapsulation</i>
<code>atm-scheduler-map (map-name default)</code>	ATM2 IQ interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>backup-destination address</code>	Encryption interfaces	<i>Class of Service Feature Guide for Routers and EX9200 Switches</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
bandwidth <i>rate</i>	All interfaces, except multilink and aggregated	"Configuring the Interface Bandwidth" on page 191
cbr <i>rate</i>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
cell-bundle-size <i>cells</i>	ATM2 IQ interfaces	<i>Configuring the Layer 2 Circuit Cell-Relay Cell Maximum Overview</i>
clear-dont-fragment-bit	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
compression	AS PIC or MultiServices PIC link services IQ interfaces (lsq) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
copy-tos-to-outer-ip-header	GRE tunnel interfaces	<i>Class of Service Feature Guide for Routers and EX9200 Switches</i>
demux-destination <i>family</i>	IP demux interfaces	"Configuring an IP Demultiplexing Interface" on page 322
demux-options <i>family</i>	IP demux interfaces	"Configuring an IP Demultiplexing Interface" on page 322
demux-source <i>family</i>	IP demux interfaces	"Configuring an IP Demultiplexing Interface" on page 322
description <i>text</i>	All	"Adding a Logical Unit Description to the Configuration" on page 190
destination (<i>address routing-instance-name</i>)	Encryption generic routing encapsulation (GRE) tunnel, and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
disable	All	"Disabling a Logical Interface" on page 203
disable-mlppp-inner-ppp-pfc	MLPPP interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
dlci <i>dlci-identifier</i>	Point-to-point interfaces with Frame Relay encapsulation	<i>Configuring Frame Relay DLCIs</i>
drop-timeout <i>milliseconds</i>	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
dynamic-profile <i>profile-name</i>	1-Gigabit Ethernet and 10-Gigabit Ethernet interfaces configured with PPP over Ethernet on M120 and M320 routers	<i>Junos Subscriber Access Configuration Guide</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>encapsulation type</code>	All interfaces, except aggregated SONET/SDH and loopback	<i>Configuring Interface Encapsulation on Logical Interfaces</i>
<code>epd-threshold cells</code>	ATM2 IQ interfaces	<i>Configuring the ATM2 IQ EPD Threshold</i>
<code>f-max-period number</code>	AS PIC or MultiServices link services IQ interfaces (<code>lsq-</code>) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>family</code>	All	“Configuring the Protocol Family” on page 208
<code>fragment-threshold bytes</code>	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>inner-tag-protocol-id</code>	Gigabit Ethernet IQ interfaces	<i>802.1Q VLANs Overview</i>
<code>inner-vlan-id</code>	Gigabit Ethernet IQ interfaces	<i>802.1Q VLANs Overview</i>
<code>inner-vlan-id-range</code>	Gigabit Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet IQ interfaces	“Configuring ATM-to-Ethernet Interworking” on page 286
<code>input</code>	AS PIC or MultiServices link services	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>input-policer policer-name</code>	For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series and T Series routers	<i>Junos OS Services Interfaces Library for Routing Devices and Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>
<code>input-three-color policer-name</code>	For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series and T Series routers	<i>Class of Service Feature Guide for Routers and EX9200 Switches and Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>
<code>input-vlan-map</code>	Gigabit Ethernet IQ interfaces	<i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i>
<code>interleave-fragments</code>	Link services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>inverse-arp</code>	Interfaces with ATM and Frame Relay encapsulation	<i>Configuring Inverse ATM1 or ATM2 ARP and Configuring Inverse Frame Relay ARP</i>
<code>key number</code>	GRE tunnel interfaces on Adaptive Services PICs	<i>Junos OS Services Interfaces Library for Routing Devices</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>layer2-policer</code>	1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces	<i>Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>
<code>lcp-restart-timer</code>	Interfaces with PPP encapsulation	“Configuring the PPP Restart Timers” on page 196
<code>l2tp-interface-id name</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>link-layer-overhead percent</code>	AS PIC or MultiServices link services IQ interfaces (lsq)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>local-name name</code>	ATM2 IQ interfaces	“Configuring PPP CHAP Authentication” on page 198 and “Configuring the PPP Password Authentication Protocol On a Logical Interface” on page 199
<code>mac-address mac-address</code>	Gigabit Ethernet interfaces and Gigabit Ethernet IQ and IQE interfaces with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring MAC Address Filtering</i>
<code>minimum-links number</code>	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>mrru bytes</code>	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>multicast-dlci dlci-identifier</code>	Point-to-multipoint Frame Relay interfaces	<i>Configuring a Multicast-Capable Frame Relay Connection</i>
<code>multicast-vci vpi-identifier vci-identifier</code>	Point-to-multipoint ATM1 and ATM2 IQ interfaces	<i>Configuring the ATM OAM F5 Loopback Cell Threshold</i>
<code>multilink-max-classes number</code>	AS PIC or MultiServices link services IQ interfaces (lsq-)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>multipoint</code>	All	“Configuring a Multipoint Connection” on page 195
<code>ncp-restart-timer</code>	Interfaces with PPP encapsulation	“Configuring the PPP Restart Timers” on page 196
<code>oam-liveness</code>	ATM1 and ATM2 IQ interfaces	<i>Configuring the ATM OAM F5 Loopback Cell Threshold</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>oam-period</code> (disable seconds)	ATM1 and ATM2 IQ interfaces	<i>Defining the ATM OAM F5 Loopback Cell Period</i>
<code>output</code>	All	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>output-policer</code> <i>policer-name</i>	For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series and T Series routers	<i>Class of Service Feature Guide for Routers and EX9200 Switches and Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>
<code>output-three-color</code> <i>policer-name</i>	For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series and T Series routers	<i>Class of Service Feature Guide for Routers and EX9200 Switches and Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>
<code>output-vlan-map</code>	Gigabit Ethernet IQ interfaces	<i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i>
<code>passive</code> (CHAP)	ATM2 IQ interfaces	“Configuring PPP CHAP Authentication” on page 198
<code>passive</code> (PAP)	ATM2 IQ interfaces	“Configuring the PPP Password Authentication Protocol On a Logical Interface” on page 199
<code>passive-monitor-mode</code>	SONET/SDH interfaces	<i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>
<code>peer-unit</code> <i>unit-number</i>	Logical tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>pfc</code>	Interfaces with PPP, PPP CCC, or PPP TCC encapsulation	“Configuring the PPP Protocol Field Compression” on page 152
<code>plp1 cells</code>	ATM2 IQ interfaces	<i>Configuring the ATM2 IQ EPD Threshold</i>
<code>plp-to-clp</code>	ATM2 IQ interfaces	<i>Enabling the PLP Setting to Be Copied to the CLP Bit</i>
<code>point-to-point</code>	All	“Configuring a Point-to-Point Connection” on page 195
<code>policer</code>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring MAC Address Filtering</i>
<code>pop</code>	Gigabit Ethernet IQ interfaces	<i>Removing a VLAN Tag</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
pop-pop	Gigabit Ethernet IQ interfaces	<i>Removing the Outer and Inner VLAN Tags</i>
pop-swap	Gigabit Ethernet IQ interfaces	<i>Removing the Outer VLAN Tag and Rewriting the Inner VLAN Tag</i>
port	AS PIC or MultiServices or MultiServices link services IQ interfaces (lsq) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
ppp-options	Interfaces with PPP, PPP CCC, or PPP TCC encapsulation	“Configuring PPP CHAP Authentication” on page 198 and “Configuring the PPP Password Authentication Protocol On a Logical Interface” on page 199
proxy-arp	Ethernet interfaces	<i>Configuring Restricted and Unrestricted Proxy ARP</i>
push	Gigabit Ethernet IQ interfaces	<i>Stacking a VLAN Tag</i>
push-push	Gigabit Ethernet IQ interfaces	<i>Stacking Two VLAN Tags</i>
queue-length number	ATM1 interfaces	<i>Configuring the ATM1 Queue Length</i>
queues [queue-numbers]	AS PIC or MultiServices link services IQ interfaces (lsq) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
routing-instance	GRE tunnel and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
rtp	AS PIC or MultiServices link services IQ interfaces (lsq) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
rtvbr peak rate sustained rate burst length	ATM2 interfaces	<i>Configuring ATM CBR</i>
service-domain (inside outside)	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
shaping	ATM1 and ATM2 IQ interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
short-sequence	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
source source-address	Encryption, GRE tunnel, and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>swap</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Frames with Particular TPIDs to Be Processed as Tagged Frames</i>
<code>swap-push</code>	Gigabit Ethernet IQ interfaces	<i>Rewriting a VLAN Tag and Adding a New Tag</i>
<code>swap-swap</code>	Gigabit Ethernet IQ interfaces	<i>Rewriting the Inner and Outer VLAN Tags</i>
<code>tag-protocol-id</code> <i>tpid</i>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC, Aggregated Ethernet with Gigabit Ethernet IQ interfaces, and the built-in Gigabit Ethernet port on the M7i router)	<i>Rewriting the VLAN Tag on Tagged Frames</i>
<code>transmit-weight</code> <i>number</i>	ATM2 IQ interfaces	<i>Configuring the ATM2 IQ Transmission Weight</i>
<code>(traps no-traps)</code>	All	<i>"Enabling or Disabling SNMP Notifications on Logical Interfaces" on page 203</i>
<code>trunk-bandwidth</code> <i>rate</i>	ATM2 IQ interfaces	<i>Configuring Layer 2 Circuit Trunk Mode Scheduling Overview</i>
<code>trunk-id</code> <i>number</i>	ATM2 IQ interfaces	<i>Configuring Layer 2 Circuit Transport Mode</i>
<code>ttl</code> <i>number</i>	GRE tunnel and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>tunnel</code>	Encryption, GRE tunnel, and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>underlying-interface</code>	IP demux interfaces	<i>"Configuring an IP Demultiplexing Interface" on page 322</i>
<code>vbr</code> <i>peak rate</i> <i>sustained rate</i> <i>burst length</i>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
<code>vci</code> <i>vpi-identifier</i> <i>vci-identifier</i>	ATM1 and ATM2 IQ point-to-point interfaces	<i>Configuring a Point-to-Point ATM1 or ATM2 IQ Connection</i>
<code>vci-range</code>	ATM2 IQ interfaces	<i>"Configuring ATM-to-Ethernet Interworking" on page 286</i>
<code>vpi</code> <i>vpi-identifier</i>	ATM1 and ATM2 IQ point-to-point interfaces	<i>Configuring a Point-to-Point ATM1 or ATM2 IQ Connection</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>vlan-id number</code>	Fast Ethernet, Gigabit Ethernet, and Gigabit Ethernet IQ interfaces and aggregated Ethernet using Gigabit Ethernet IQ interfaces	<i>Binding VLAN IDs to Logical Interfaces and Rewriting the VLAN Tag on Tagged Frames</i>
<code>vlan-tags inner tpidvlan-id outer tpidvlan-id</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Dual VLAN Tags</i>

Specifying the Logical Interface Number

Each logical interface must have a logical unit number. The logical unit number corresponds to the logical unit part of the interface name. For more information, see [“Interface Naming Overview” on page 33](#).

Point-to-Point Protocol (PPP), Cisco High-level Data Link Control (HDLC), and Ethernet circuit cross-connect (CCC) encapsulations support only a single logical interface, whose logical unit number must be 0. Frame Relay and ATM encapsulations support multiple logical interfaces, so you can configure one or more logical unit numbers.

You specify the logical unit number by including the **unit** statement:

```
unit logical-unit-number {
  ...
}
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces *interface-name*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name*]**

The logical unit number can be in the range 0 through 65,535 for demux and PPPoE static interfaces only. The logical unit number can be in the range 0 through 16,385 for all other static interface types.

Adding a Logical Unit Description to the Configuration

You can include a text description of each logical unit in the configuration file. Any descriptive text you include is displayed in the output of the **show interfaces** commands, and is also exposed in the **ifAlias** Management Information Base (MIB) object. It has no impact on the interface's configuration. To add a text description, include the **description** statement:

```
description text;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

The description can be a single line of text. If the text contains spaces, enclose it in quotation marks.



NOTE: You can configure the extended DHCP relay to include the interface description in the option 82 Agent Circuit ID suboption. See “*Using DHCP Relay Agent Option 82 Information*” in the *Junos OS Broadband Subscriber Management and Services Library*.

For information about describing physical interfaces, see “[Configuring Interface Description](#)” on page 114.

Configuring the Interface Bandwidth

By default, the Junos OS uses the physical interface’s speed for the MIB-II object, **ifSpeed**. You can configure the logical unit to populate the **ifSpeed** variable by configuring a bandwidth value for the logical interface. The **bandwidth** statement sets an informational-only parameter; you cannot adjust the actual bandwidth of an interface with this statement.



NOTE: We recommend that you be careful when setting this value. Any interface bandwidth value that you configure using the **bandwidth** statement affects how the interface cost is calculated for a dynamic routing protocol, such as OSPF. By default, the interface cost for a dynamic routing protocol is calculated using the following formula:

$$\text{cost} = \text{reference-bandwidth} / \text{bandwidth},$$

where bandwidth is the physical interface speed. However, if you specify a value for bandwidth using the **bandwidth** statement, that value is used to calculate the interface cost, rather than the actual physical interface bandwidth.

To configure the bandwidth value for a logical interface, include the **bandwidth** statement:

```
bandwidth rate;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]

- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

rate is the peak rate, in bps or cps. You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation **c**; values expressed in cells per second are converted to bits per second using the formula 1 cps = 384 bps. The value can be any positive integer. The **bandwidth** statement is valid for all logical interfaces, except multilink interfaces.

Configuring Interface Encapsulation on Logical Interfaces

- [Understanding Interface Encapsulation on Logical Interfaces on page 192](#)
- [Configuring the Encapsulation on a Logical Interface on page 193](#)
- [Displaying the Encapsulation on a Logical Interface on page 193](#)

Understanding Interface Encapsulation on Logical Interfaces

You can configure an encapsulation on a logical interface, which is the encapsulation used within certain packet types.

The following restrictions apply to logical interface encapsulation:

- With the atm-nlpid, atm-cisco-nlpid, and atm-vc-mux encapsulations, you can configure the inet family only.
- With the CCC circuit encapsulations, you cannot configure a family on the logical interface.
- A logical interface cannot have frame-relay-ccc encapsulation unless the physical device also has frame-relay-ccc encapsulation.
- A logical interface cannot have frame-relay-tcc encapsulation unless the physical device also has frame-relay-tcc encapsulation. In addition, you must assign this logical interface a DLCI from 512 through 1022 and configure it as point-to-point.
- A logical interface cannot have frame-relay-ether-type or frame-relay-ether-type-tcc encapsulation unless the physical interface has flexible-frame-relay encapsulation and is on an IQ or IQE PIC.
- For frame-relay-ether-type-tcc encapsulation, you must assign this logical interface a DLCI from 512 through 1022.
- For interfaces that carry IP version 6 (IPv6) traffic, you cannot configure ether-over-atm-llc encapsulation.
- When you use ether-over-atm-llc encapsulation, you cannot configure multipoint interfaces.
- A logical interface cannot have vlan-ccc or vlan-vpls encapsulation unless the physical device also has vlan-ccc or vlan-vpls encapsulation, respectively. In addition, you must assign this logical interface a VLAN ID from 512 through 1023; if the VLAN ID is 511 or

lower, it is subject to the normal destination filter lookups in addition to source address filtering. For more information, see *Configuring VLAN and Extended VLAN Encapsulation*.

- You can create an ATM cell-relay circuit by configuring an entire ATM physical device or an individual virtual circuit (VC). When you configure an entire device, only cell-relay encapsulation is allowed on the logical interfaces. For more information, see *Configuring an ATM Cell-Relay Circuit Overview*.

Configuring the Encapsulation on a Logical Interface

Generally, you configure an interface's encapsulation at the `[edit interfaces interface-name]` hierarchy level. However, for some encapsulation types, such as Frame Relay, ATM, and Ethernet virtual local area network (VLAN) encapsulations, you can also configure the encapsulation type that is used inside the Frame Relay, ATM, or VLAN circuit itself.

To configure encapsulation on a logical interface:

1. In configuration mode, go to the `[edit interfaces interface-name unit logical-unit-number]` or `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.

```
[edit]
user@host# set interfaces at-fpc/pic/port unit logical-unit-number
```

2. Configure the encapsulation type as described in [encapsulation \(Logical Interface\)](#).

```
[edit interfaces at-fpc/pic/port unit logical-unit-number]
user@host# set encapsulation encapsulation-type
```

Displaying the Encapsulation on a Logical Interface

Purpose To display the configured encapsulation and its associated set options on a physical interface when the following are set at the `[edit interfaces interface-name]` or `[edit logical-systems logical-system-name interfaces interface-name]` hierarchy level:

- interface-name—at-1/1/0
- Encapsulation—atm-ccc-cell-relay
- Unit—120

Action Run the `show` command at the `[edit interfaces interface-name]` hierarchy level.

```
[edit interfaces at-1/1/0]
user@host# show
encapsulation atm-ccc-cell-relay;
unit 120 {
  encapsulation atm-ccc-cell-relay;
}
```

Meaning The configured encapsulation and its associated set options are displayed as expected.

- Related Documentation**
- [encapsulation \(Logical Interface\) on page 592](#)
 - *Configuring VLAN and Extended VLAN Encapsulation*
 - *Configuring an ATM1 Cell-Relay Circuit Overview*

Configuring Interface Encapsulation on PTX Series Packet Transport Routers

This topic describes how to configure interface encapsulation on PTX Series Packet Transport Routers. Use the **flexible-ethernet-services** configuration statement to configure different encapsulation for different logical interfaces under a physical interface. With flexible Ethernet services encapsulation, you can configure each logical interface encapsulation without range restrictions for VLAN IDs.

Supported encapsulations for physical interfaces include:

- **flexible-ethernet-services**
- **ethernet-ccc**
- **ethernet-tcc**

Supported encapsulations for logical interfaces include:

- **ethernet**
- **vlan-ccc**
- **vlan-tcc**



NOTE: PTX Series Packet Transport Routers do not support **extended-vlan-cc** and **extended-vlan-tcc** encapsulation on logical interfaces. Instead, you can configure a tag protocol ID (TPID) value of 0x9100 to achieve the same results.

To configure flexible Ethernet services encapsulation, include the **encapsulation flexible-ethernet-services** statement at the **[edit interfaces et-fpc/pic/port]** hierarchy level. For example:

```
interfaces {
  et-fpc/pic/port {
    vlan-tagging;
    encapsulation flexible-ethernet-services;
    unit 0 {
      vlan-id 1000;
      family inet {
        address 11.0.0.20/24;
      }
    }
  }
}
```

```

}
unit 1 {
  encapsulation vlan-ccc;
  vlan-id 1010;
}
unit 2 {
  encapsulation vlan-tcc;
  vlan-id 1020;
  family tcc {
    proxy {
      inet-address 11.0.2.160;
    }
    remote {
      inet-address 11.0.2.10;
    }
  }
}
}
}
}

```

Related Documentation • [Configuring Interface Encapsulation on Physical Interfaces on page 130](#)

Configuring a Point-to-Point Connection

By default, all interfaces are assumed to be point-to-point connections. You must ensure that the maximum transmission unit (MTU) sizes on both sides of the connection are the same.

For all interfaces except aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet, you can explicitly configure an interface to be a point-to-point connection by including the **point-to-point** statement:

```
point-to-point;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

Configuring a Multipoint Connection

By default, all interfaces are assumed to be point-to-point connections. To configure an interface to be a multipoint connection, include the **multipoint** statement:

```
multipoint;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

Configuring the PPP Restart Timers

You can configure a restart timer for the Link Control Protocol (LCP) and Network Control Protocol (NCP) components of a PPP session. You can configure the LCP restart timer on interfaces with PPP, PPP TCC, PPP over Ethernet, PPP over ATM, and PPP over Frame Relay encapsulations. You can configure the NCP restart timer on interfaces with PPP and PPP TCC encapsulations and on multilink PPP bundle interfaces.

To configure the restart timer for the NCP component of a PPP session, include the **ncp-restart-timer** statement, and specify the number of milliseconds.

To configure the restart timer for the LCP component of a PPP session, include the **lcp-restart-timer** statement, and specify the number of milliseconds:

```
lcp-restart-timer milliseconds;  
ncp-restart-timer milliseconds;
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* ppp-options]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* ppp-options]

To monitor the configuration, issue the **show interfaces *interface-name*** command. Configured options are displayed in the **PPP parameters** field for the physical interface.

```
user@host> run show interfaces tl-0/0/0:1:1.0 detail
```

```
Logical interface tl-0/0/0:1:1.0 (Index 67) (SNMP ifIndex 40)  
(Generation 156)  
Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps 0x4000  
Encapsulation: PPP  
PPP parameters:  
  LCP restart timer: 2000 msec  
  NCP restart timer: 2000 msec  
Protocol inet, MTU: 1500, Generation: 163, Route table: 0  
Flags: Protocol-Down  
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary  
  Destination: 1.1.1/24, Local: 1.1.1.2, Broadcast: 1.1.1.255,
```

Configuring the PPP Clear Loop Detected Timer

When a Point-to-Point Protocol (PPP) session detects a loop, the loop detected flag is set. If the flag is not cleared by the protocol after the loopback is cleared, the clear loop detected timer clears the flag after the specified time has elapsed.

To configure the clear loop detected timer for the LCP component of a PPP session, include the **loopback-clear-timer** statement, and specify the number of seconds.

```
loopback-clear-timer seconds;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* ppp-options]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* ppp-options]

To monitor the configuration, issue the **show interfaces *interface-name* extensive** command.

Configuring the LCP Configure-Request Maximum Sent

Link Control Protocol (LCP) Configure-Request is used to establish a link. You can configure the maximum number of LCP Configure-Requests to send. The router stops sending LCP Configure-Requests after the specified maximum number is sent. To configure the LCP Configure-Request maximum, use the **lcp-max-conf-req** statement at the [edit interfaces *interface-name* unit *number* ppp-options] hierarchy level. The *number* range is from 0 to 65,535; where 0 specifies no limit and the LCP Configure-Request is sent indefinitely. The default is 254.

Related
Documentation

- [lcp-max-conf-req on page 746](#)

Configuring the NCP Configure-Request Maximum Sent

Network Control Protocol (NCP) Configure-Request is used to establish a link. You can configure the maximum number of NCP Configure-Requests to send. The router stops sending NCP Configure-Requests after the specified maximum number is sent. To configure the NCP Configure-Request maximum, use the **ncp-max-conf-req** statement at the [edit interfaces *interface-name* unit *number* ppp-options] hierarchy level. The *number* range is from 0 to 65,535; where 0 specifies no limit and NCP Configure-Request is sent indefinitely. The default is 254.

Related
Documentation

- [ppp-options on page 930](#)

Configuring Dynamic Profiles for PPP

A dynamic profile acts as a template that enables you to create, update, or remove a configuration that includes attributes for client access (for example, interface or protocol) or service (for example, IGMP). Using these profiles you can consolidate all of the common attributes of a client (and eventually a group of clients) and apply the attributes simultaneously.

After they are created, the profiles reside in a profile library on the router. You can then use the **dynamic-profile** statement to attach profiles to interfaces. To assign a dynamic profile to a PPP interface, you can include the **dynamic-profile** statement at the **[edit interfaces *interface-name* unit *logical-unit-number* ppp-options]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number ppp-options]  
dynamic-profile profile-name;
```

To monitor the configuration, issue the **show interfaces *interface-name*** command.

For information about dynamic profiles, see *Dynamic Profiles Overview* in the *Junos Subscriber Access Configuration Guide*.

For information about creating dynamic profiles, see *Configuring a Basic Dynamic Profile* in the *Junos Subscriber Access Configuration Guide*.

For information about assigning a dynamic profile to a PPP interface, see *Attaching Dynamic Profiles to Static PPP Subscriber Interfaces* in the *Junos Subscriber Access Configuration Guide*.



NOTE: Dynamic profiles for PPP subscribers are supported only on PPPoE interfaces for this release.

Related Documentation

- [Configuring Dynamic Authentication for PPP Subscribers](#)

Configuring PPP CHAP Authentication

For interfaces with PPP encapsulation, you can configure interfaces to support the PPP Challenge Handshake Authentication Protocol (CHAP), as defined in RFC 1994, *PPP Challenge Handshake Authentication Protocol (CHAP)*. When you enable CHAP on an interface, the interface can authenticate its peer and can be authenticated by its peer.

For information about configuring CHAP, see [“Configuring the PPP Challenge Handshake Authentication Protocol” on page 137](#).

Configuring the PPP Password Authentication Protocol On a Logical Interface

- [Understanding PPP Password Authentication Protocol on page 199](#)
- [Configuring the PPP Password Authentication Protocol On a Logical Interface on page 199](#)

Understanding PPP Password Authentication Protocol

The Password Authentication Protocol (PAP) provides a simple method for the peer to establish its identity using a two-way handshake. This is done only upon initial link establishment.

After the link is established, an ID and password pair is repeatedly sent by the peer to the authenticator until authentication is acknowledged or the connection is terminated.

For interfaces with PPP encapsulation, you can configure interfaces to support the Password Authentication Protocol (PAP), as defined in RFC 1334, *PAP Authentication Protocols*. If authentication is configured, the PPP link negotiates using CHAP or PAP protocol for authentication during the Link Control Protocol (LCP) negotiation phase. PAP is only performed after the link establishment phase (LCP up) portion of the authentication phase.

During authentication, the PPP link sends a PAP authentication-request packet to the peer with an ID and password. The authentication-request packet is sent every 2 seconds, similar to the CHAP challenge, until a response is received (acknowledgment packet, nonacknowledgment packet). If an acknowledgment packet is received, the PPP link transitions to the next state, the network phase. If a nonacknowledgment packet is received, an LCP terminate request is sent, and the PPP link goes back to the link establishment phase. If no response is received, and an optional retry counter is set to **true**, a new request acknowledgment packet is resent. If the retry counter expires, the PPP link transitions to the LCP negotiate phase.

You can configure the PPP link with PAP in passive mode. By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

Configuring the PPP Password Authentication Protocol On a Logical Interface

When you configure an interface to use PAP, you must assign an access profile to the interface. When an interface receives PAP authentication requests, the access profile in the packet is used to look up the password. If no matching access profile is found for the PAP authentication request that was received by the interface, the optionally configured default PAP password is used.

To configure the PPP password authentication protocol, on each logical interface with PPP encapsulation, perform the following steps.

1. The default PAP password is used when no matching PAP access profile exists, or if the PAP access profile name changes during PPP link negotiation. To configure the default PAP password, include the **pap-password** statement at the **[edit interfaces interface-name unit logical-unit-number ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set default-pap-password password
```

2. To configure the name the interface uses in PAP request and response packets, include the **local-name** statement at the **[edit interfaces interface-name unit logical-unt-number ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set local-name name
```



NOTE: By default, when PAP is enabled on an interface, the interface uses the router's system hostname as the name sent in PAP request and response packets.

3. You need to configure the password to be used for authentication. To configure the host password for sending PAP requests, include the **local-password** statement at the **[edit interfaces interface-name ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set local-password password
```

4. To configure the interface to authenticate with PAP in passive mode, include the **passive** statement at the **[edit interfaces interface-name unit logical-unt-number ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set passive
```



NOTE: By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

See Also [Configuring the PPP Authentication Protocol on page 143](#)

Configuring Accounting for the Logical Interface

- [Accounting Profiles Overview on page 201](#)
- [Configuring Accounting for the Logical Interface on page 201](#)
- [Displaying Accounting Profile for the Logical Interface on page 202](#)

Accounting Profiles Overview

Juniper Networks routers and switches can collect various kinds of data about traffic passing through the router and switch. You can set up one or more *accounting profiles* that specify some common characteristics of this data, including the following:

- The fields used in the accounting records
- The number of files that the router or switch retains before discarding, and the number of bytes per file
- The polling period that the system uses to record the data

You configure the profiles and define a unique name for each profile using statements at the **[edit accounting-options]** hierarchy level. There are two types of accounting profiles: interface profiles and filter profiles. You configure interface profiles by including the **interface-profile** statement at the **[edit accounting-options]** hierarchy level. You configure filter profiles by including the **filter-profile** statement at the **[edit accounting-options]** hierarchy level. For more information, see the *Network Management and Monitoring Guide*.

You apply filter profiles by including the **accounting-profile** statement at the **[edit firewall filter *filter-name*]** and **[edit firewall family *family* filter *filter-name*]** hierarchy levels. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

Configuring Accounting for the Logical Interface

Before you begin

You must configure a profile to collect error and statistic information for input and output packets on a particular logical interface. An accounting profile specifies what statistics should be collected and written to a log file. For more information on how to configure an accounting-data log file, see the *Configuring Accounting-Data Log Files*.

An interface profile specifies the information collected and written to a log file. You can configure a profile to collect error and statistic information for input and output packets on a particular logical interface.

1. To configure which statistics should be collected for an interface, include the **fields** statement at the **[edit accounting-options interface-profile *profile-name*]** hierarchy level.

```
[edit accounting-options interface-profile profile-name]  
user@host# set fields field-name
```

- Each accounting profile logs its statistics to a file in the `/var/log` directory. To configure which file to use, include the `file` statement at the `[edit accounting-options interface-profile profile-name]` hierarchy level.

```
[edit accounting-options interface-profile profile-name]
user@host# set file filename
```



NOTE: You must specify a file statement for the interface profile that has already been configured at the `[edit accounting-options]` hierarchy level. For more information, see the [Configuring Accounting-Data Log Files](#)

- Each interface with an accounting profile enabled has statistics collected once per interval time specified for the accounting profile. Statistics collection time is scheduled evenly over the configured interval. To configure the interval, include the `interval` statement at the `[edit accounting-options interface-profile profile-name]` hierarchy level.

```
[edit accounting-options interface-profile profile-name]
user@host# set interval minutes
```



NOTE: The minimum interval allowed is 1 minute. Configuring a low interval in an accounting profile for a large number of interfaces might cause serious performance degradation.

- To configure the interfaces on which the accounting needs to be performed, apply the interface profile to a logical interface by including the `accounting-profile` statement at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level.

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number accounting-profile profile-name
```

- See Also**
- [Accounting Options Overview](#)
 - [Configuring Accounting-Data Log Files](#)

Displaying Accounting Profile for the Logical Interface

Purpose To display the configured accounting profile a particular logical interface at the `[edit accounting-options interface-profile profile-name]` hierarchy level:

- interface-name—`ge-1/0/1`
- Logical unit number—`1`
- Interface profile —`if_profile`

- File name—**if_stats**
- Interval—15 minutes

Action • Run the **show** command at the **[edit interfaces ge-1/0/1 unit 1]** hierarchy level.

```
[edit interfaces ge-1/0/1 unit 1]
accounting-profile if_profile;
```

- Run the **show** command at the **[edit accounting-options]** hierarchy level.

```
interface-profile if_profile {
  interval 15;
  file if_stats {
    fields {
      input-bytes;
      output-bytes;
      input-packets;
      output-packets;
      input-errors;
      output-errors;
    }
  }
}
```

Meaning The configured accounting and its associated set options are displayed as expected.

Enabling or Disabling SNMP Notifications on Logical Interfaces

By default, Simple Network Management Protocol (SNMP) notifications are sent when the state of an interface or a connection changes. To explicitly enable these notifications on the logical interface, include the **traps** statement; to disable these notifications on the logical interface, include the **no-traps** statement:

```
(traps | no-traps);
```

You can include these statements at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]**

Disabling a Logical Interface

You can unconfigure a logical interface, effectively disabling that interface, without removing the logical interface configuration statements from the configuration. To do this, include the **disable** statement:

```
disable;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

When an interface is disabled, a route (pointing to the reserved target “REJECT”) with the IP address of the interface and a 32-bit subnet mask is installed in the routing table. See *Routing Protocols*.

Configuring Logical System Interface Properties

With Junos OS, you can partition a single physical router into multiple logical devices that perform independent routing tasks. Because logical systems perform a subset of the tasks once handled by the physical router, logical systems offer an effective way to maximize the use of a single router.

1. Configure the physical interface that needs to be partitioned into multiple logical systems.

```
[edit]
user@host# set interfaces interface-name description description
```

2. Create the logical system interface on the logical unit.

```
[edit]
user@host# set logical-systems name interfaces interface-name unit
logical-unit-number description description
```

3. Configure the required properties for the logical system.

```
[edit logical-systems name]
user@host# set interfaces interface-name unit logical-unit-number family name
address address
```

Related Documentation

- *Examples: Using Logical Systems*

CHAPTER 4

Configuring Protocol Family and Interface Address Properties

- [Protocol Family Configuration and Interface Address Statements on page 205](#)
- [Configuring the Protocol Family on page 208](#)
- [Configuring the Interface Address on page 209](#)
- [Configuring Default, Primary, and Preferred Addresses and Interfaces on page 211](#)
- [Operational Behavior of Interfaces When the Same IPv4 Address Is Assigned to Them on page 213](#)
- [Configuring ICCP for MC-LAG on page 216](#)
- [Configuring IPCP Options for Interfaces with PPP Encapsulation on page 218](#)
- [Configuring an Unnumbered Interface on page 220](#)
- [Setting the Protocol MTU on page 226](#)
- [Disabling the Removal of Address and Control Bytes on page 227](#)
- [Disabling the Transmission of Redirect Messages on an Interface on page 228](#)
- [Applying Policers on page 228](#)
- [Applying a Filter to an Interface on page 238](#)
- [Guidelines for Configuring Unicast RPF on ACX Series Routers on page 243](#)
- [Configuring Unicast RPF on page 244](#)
- [Verifying Unicast RPF Status on page 254](#)
- [Example: Configuring Unicast Reverse-Path-Forwarding Check on page 256](#)
- [Enabling Source Class and Destination Class Usage on page 265](#)
- [Understanding Targeted Broadcast on page 274](#)
- [Configuring Targeted Broadcast on page 275](#)

Protocol Family Configuration and Interface Address Statements

For each logical interface, you must configure one or more protocol families. You can also configure interface address properties. To do this, include the following statements:

```
family family {
```

```
accounting {
    destination-class-usage;
    source-class-usage {
        direction;
    }
}
address address {
    destination address;
}
bundle interface-name;
filter {
    dialer filter-name;
    input filter-name;
    output filter-name;
    group filter-group-number;
}
interface-mode (access | trunk);
ipsec-sa sa-name;
keep-address-and-control;
mtu bytes;
multicast-only;
negotiate-address;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
protocols [inet iso mpls];
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check <fail-filter filter-name>;
sampling {
    direction;
}
service {
    input {
        service-set service-set-name <service-filter filter-name>;
        post-service-filter filter-name;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
targeted-broadcast {
    forward-and-send-to-re;
    forward-only;
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
vlan-id number;
```

```

vlan-id-list [number number-number];
unnumbered-address interface-name destination address destination-profile
profile-name;
address address {
  arp ip-address (mac | multicast-mac) mac-address <publish>;
  broadcast address;
  destination address;
  destination-profile name;
  eui-64;
  multipoint-destination address dlcid dlcid-identifier;
  multipoint-destination address {
    epd-threshold cells;
    inverse-arp;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
    oam-period (disable | seconds);
    shaping {
      (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
      burst length);
      queue-length number;
    }
    vci vpi-identifier.vci-identifier;
  }
  primary;
  preferred;
  (vrrp-group | vrrp-inet6-group) group-number {
    (accept-data | no-accept-data);
    advertise-interval seconds;
    authentication-type authentication;
    authentication-key key;
    fast-interval milliseconds;
    (preempt | no-preempt) {
      hold-time seconds;
    }
    priority-number number;
    track {
      priority-cost seconds;
      priority-hold-time interface-name {
        interface priority;
        bandwidth-threshold bits-per-second {
          priority;
        }
      }
    }
    route ip-address/mask routing-instance instance-name priority-cost cost;
  }
  virtual-address [ addresses ];
}
}
}

```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]

- `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]`

For information about interface-specific protocol and address properties, see *Configuring T1 and NxDSO Interfaces*.

Related Documentation

- *Configuring T1 and NxDSO Interfaces*

Configuring the Protocol Family

A protocol family is a group of logical properties within an interface configuration. Protocol families include all the protocols that make up a protocol suite. To use a protocol within a particular suite, you must configure the entire protocol family as a logical property for an interface.

Junos OS protocol families include the following common protocol suites:

- Inet—Supports IP protocol traffic, including OSPF, BGP, and Internet Control Message Protocol (ICMP).
- Inet6—Supports IPv6 protocol traffic, including RIP for IPv6 (RIPng), IS-IS, and BGP.
- ISO—Supports IS-IS traffic.
- MPLS—Supports MPLS.

In addition to the common protocol suites, JUNOS protocol families sometimes use the following protocol suites. For more information see, [family](#).

To configure the logical interface's protocol family, include the **family** statement, specifying the selected family. To configure the protocol family, following are the minimum configuration tasks under the `[edit interfaces interface-name unit logical-unit-number family family]` hierarchy.

Table 49: Protocol Family Configuration Tasks

Task	Find Details Here
Configure MTU	"Configuring the Media MTU" on page 115
Configure the unit and family so that the interface can transmit and receive multicast traffic only	Restricting Tunnels to Multicast Traffic
Disable the sending of redirect messages by the router	Configuring Junos OS to Disable Protocol Redirect Messages on the Router or Switch
Assign an address to an interface	"Configuring the Interface Address" on page 209

Related Documentation

- [family on page 627](#)

Configuring the Interface Address

You assign an address to an interface by specifying the address when configuring the protocol family. For the **inet** or **inet6** family, configure the interface IP address. For the **iso** family, configure one or more addresses for the loopback interface. For the **ccc**, **ethernet-switching**, **tcc**, **mpls**, **tnp**, and **vppls** families, you never configure an address.



NOTE: The point-to-point (PPP) address is taken from the loopback interface address that has the primary attribute. When the loopback interface is configured as an unnumbered interface, it takes the primary address from the donor interface.

To assign an address to an interface, perform the following steps:

1. Configure the interface address at the **[edit interfaces *interface-name* unit *logical-unit-number* family *family*]** hierarchy level.
 - To configure an IPv4 address on routers and switches running Junos OS, use the **interface *interface-name* unit *number* family inet address *a.b.c.d/nn*** statement at the **[edit interfaces]** hierarchy level.

```
[edit interfaces ]
```

```
user@host# set interface-name unit logical-unit-number family inet address a.b.c.d/nn
```



NOTE:

- Juniper Networks routers and switches support /31 destination prefixes when used in point-to-point Ethernet configurations; however, they are not supported by many other devices, such as hosts, hubs, routers, or switches. You must determine if the peer system also supports /31 destination prefixes before configuration.
- You can configure the same IPv4 address on multiple physical interfaces. When you assign the same IPv4 address to multiple physical interfaces, the operational behavior of those interfaces differs, depending on whether they are implicitly or explicitly point-to-point .
- By default, all interfaces are assumed to be point-to-point (PPP) interfaces. For all interfaces except aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet, you can explicitly configure an interface to be a point-to-point connection.
- If you configure the same IP address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration. The remaining IP address configurations are ignored, leaving some interfaces without an assigned address. Interfaces without an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.

- To configure an IPv6 address on routers and switches running Junos OS, use the **interface *interface-name* unit *number* family inet6 address *aaaa:bbb:...:zzzz/nn*** statement at the **[edit interfaces]** hierarchy level.

```
[edit interfaces ]
```

```
user@host# set interface-name unit logical-unit-number family inet6 address  
aaaa:bbb:...:zzzz/nn
```



NOTE:

- You represent IP version 6 (IPv6) addresses in hexadecimal notation using a colon-separated list of 16-bit values. The double colon (::) represents all bits set to 0.

- You must manually configure the router or switch advertisement and advertise the default prefix for autoconfiguration to work on a specific interface.

2. [Optional] Set the broadcast address on the network or subnet .

```
[edit interfaces interface-name unit logical-unit-number family family address address],
user@host# set broadcast address
```



NOTE: The broadcast address must have a host portion of either all ones or all zeros. You cannot specify the addresses 0.0.0.0 or 255.255.255.255

3. [Optional] specify the remote address of the connection for the encrypted, PPP-encapsulated, and tunnel interfaces.

```
[edit logical-systems logical-system-name interfaces interface-name unit
  logical-unit-number family family address address]
user@host# set destination address
```

4. [Optional] For interfaces that carry IP version 6 (IPv6) traffic, configure the host to assign itself a unique 64-Bit IP Version 6 interface identifier (EUI-64).

```
[edit logical-systems logical-system-name interfaces interface-name unit
  logical-unit-number family family address address]
user@host# set eui-64
```

Related Documentation

- [Configuring Default, Primary, and Preferred Addresses and Interfaces on page 211](#)

Configuring Default, Primary, and Preferred Addresses and Interfaces

- [Default, Primary, and Preferred Addresses and Interfaces on page 211](#)
- [Configuring the Primary Interface for the Router on page 212](#)
- [Configuring the Primary Address for an Interface on page 212](#)
- [Configuring the Preferred Address for an Interface on page 213](#)

Default, Primary, and Preferred Addresses and Interfaces

The router has a default address and a primary interface, and interfaces have primary and preferred addresses.

The *default address* of the router is used as the source address on unnumbered interfaces. The routing protocol process tries to pick the default address as the router ID, which is used by protocols, including OSPF and internal BGP (IBGP).

The *primary interface* for the router is the interface that packets go out when no interface name is specified and when the destination address does not imply a particular outgoing interface.

An interface's *primary address* is used by default as the local address for broadcast and multicast packets sourced locally and sent out the interface. An interface's *preferred address* is the default local address used for packets sourced by the local router to destinations on the subnet.

The default address of the router is chosen using the following sequence:

1. The primary address on the loopback interface **lo0** that is not **127.0.0.1** is used.
2. The primary address on the primary interface is used.

Configuring the Primary Interface for the Router

The *primary interface* for the router has the following characteristics:

- It is the interface that packets go out when you type a command such as ping 255.255.255.255—that is, a command that does not include an interface name (there is no interface **type-0/0/0.0** qualifier) and where the destination address does not imply any particular outgoing interface.
- It is the interface on which multicast applications running locally on the router, such as Session Announcement Protocol (SAP), do group joins by default.
- It is the interface from which the default local address is derived for packets sourced out an unnumbered interface if there are no non-127 addresses configured on the loopback interface, lo0.

By default, the multicast-capable interface with the lowest-index address is chosen as the primary interface. If there is no such interface, the point-to-point interface with the lowest index address is chosen. Otherwise, any interface with an address could be picked. In practice, this means that, on the router, the **fxp0** or **em0** interface is picked by default.

To configure a different interface to be the primary interface, include the **primary** statement:

```
primary;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

Configuring the Primary Address for an Interface

The *primary address* on an interface is the address that is used by default as the local address for broadcast and multicast packets sourced locally and sent out the interface. For example, the local address in the packets sent by a **ping interface so-0/0/0.0**

255.255.255.255 command is the primary address on interface **so-0/0/0.0**. The primary address flag also can be useful for selecting the local address used for packets sent out unnumbered interfaces when multiple non-127 addresses are configured on the loopback interface, **lo0**. By default, the primary address on an interface is selected as the numerically lowest local address configured on the interface.

To set a different primary address, include the **primary** statement:

```
primary;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family* address *address*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family* address *address*]

Configuring the Preferred Address for an Interface

The *preferred address* on an interface is the default local address used for packets sourced by the local router to destinations on the subnet. By default, the numerically lowest local address is chosen. For example, if the addresses **172.16.1.1/12**, **172.16.1.2/12**, and **172.16.1.3/12** are configured on the same interface, the preferred address on the subnet (by default, **172.16.1.1**) would be used as a local address when you issue a **ping 172.16.1.5** command.

To set a different preferred address for the subnet, include the **preferred** statement:

```
preferred;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family* address *address*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family* address *address*]

- See Also**
- [Configuring the Interface Address on page 209](#)
 - *Junos OS Administration Library*

Operational Behavior of Interfaces When the Same IPv4 Address Is Assigned to Them

You can configure the same IPv4 address on multiple physical interfaces. When you assign the same IPv4 address to multiple physical interfaces, the operational behavior of those interfaces differs, depending on whether they are implicitly or explicitly point-to-point .



NOTE: By default, all interfaces are assumed to be point-to-point (PPP) interfaces. For all interfaces except aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet, you can explicitly configure an interface to be a point-to-point connection.



NOTE: If you configure the same IP address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration. The remaining IP address configurations are ignored, leaving some interfaces without an assigned address. Interfaces without an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.

In the following example, the IP address configuration for interface xe-0/0/1.0 is ignored:

```
interfaces {
  xe-0/0/0 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
  xe-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
}
```

The following examples show the sample configuration of assigning the same IPv4 address to implicitly and explicitly point-to-point interfaces, and their corresponding **show interfaces terse** command outputs to see their operational status.

```
[edit]
user@host# show
ge-0/1/0 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
```

```
ge-3/0/1 {
  unit 0 {
    family inet {
```

```

        address 200.1.1.1/24;
    }
}
}

```

The sample output shown below for the above configuration reveals that only **ge-0/1/0.0** was assigned the same IPv4 address **200.1.1.1/24** and its **link** state was **up**, while **ge-3/0/1.0** was not assigned the IPv4 address, though its **link** state was up, which means that it will be operational only when it gets a unique IPv4 address other than **200.1.1.1/24**.

```
user@host> show interfaces terse ge*
```

Interface	Admin	Link	Proto	Local	Remote
ge-0/1/0		up	up		
ge-0/1/0.0		up	up	inet 200.1.1.1/24	
				multiservice	
ge-0/1/1		up	down		
ge-3/0/0		up	down		
ge-3/0/1		up	up		
ge-3/0/1.0		up	up	inet	
				multiservice	

```

[edit]
user@host# show
so-0/0/0 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
so-0/0/3 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
}

```

The sample output shown below for the above configuration reveals that both **so-0/0/0.0** and **so-0/0/3.0** were assigned the same IPv4 address **200.1.1.1/24** and that their **link** states were down, which means that to make them operational at least one of them will have to be configured with a unique IPv4 address other than **200.1.1.1/24**.

```
user@host> show interfaces terse so*
```

Interface	Admin	Link	Proto	Local	Remote
so-0/0/0	up	up			
so-0/0/0.0	up	down	inet	200.1.1.1/24	
so-0/0/1	up	up			
so-0/0/2	up	down			
so-0/0/3	up	up			
so-0/0/3.0	up	down	inet	200.1.1.1/24	
so-1/1/0	up	down			

so-1/1/1	up	down
so-1/1/2	up	up
so-1/1/3	up	up
so-2/0/0	up	up
so-2/0/1	up	up
so-2/0/2	up	up
so-2/0/3	up	down

- Related Documentation**
- [Configuring IPCP Options for Interfaces with PPP Encapsulation on page 218](#)
 - [Configuring Default, Primary, and Preferred Addresses and Interfaces on page 211](#)

Configuring ICCP for MC-LAG

For multichassis link aggregation (MC-LAG), you must configure Inter-Control Center Communications Protocol (ICCP) to exchange information between two MC-LAG peers.

To enable ICCP, include the **iccp** statement at the **[edit protocols]** hierarchy level:

```
[edit protocols]
iccp {
  authentication-key string;
  local-ip-addr ipv4-address;
  peer ip-address {
    authentication-key string;
    liveness-detection {
      detection-time {
        threshold milliseconds;
      }
      minimum-interval milliseconds;
      minimum-receive-interval milliseconds;
      multiplier number;
      no-adaptation;
      transmit-interval {
        minimum-interval milliseconds;
        threshold milliseconds;
      }
      version (1 | automatic);
    }
    local-ip-addr ipv4-address;
    redundancy-group-id-list [ redundancy-groups ];
    session-establishment-hold-time value;
  }
  session-establishment-hold-time value;
  traceoptions;
}
```

The **local-ip-address** statement sets the source address. This could be a specified address or interface address. The **session-establishment-hold-time** statement determines whether a chassis takes over as the master at the ICCP session.

The **authentication-key** statement is provided by TCP Message Digest 5 (md5) option for an ICCP TCP session. The **redundancy-group-id-list** statement specifies the redundancy groups between ICCP peers and the **liveness-detection** hierarchy configures Bidirectional Forwarding Detection (BFD) protocol options.



NOTE: ICCP is based on TCP and it uses IP routes to reach the MC-LAG peer. To ensure that the ICCP session is as resilient as possible, we recommend that you configure alternative routes between the ICCP end-point IP addresses. Alternatively, configure a LAG interface that has two or more interfaces between the MC-LAG pairs to prevent session failure when there are no alternative routes.

For Inter-Control Center Communications Protocol (ICCP) in a multichassis link aggregation group (MC-LAG) configured in an active-active bridge domain, you must ensure that you configure the same peer IP address hosting the MC-LAG by including the **peer ip-address** statement at the **[edit protocols iccp]** hierarchy level and the **multi-chassis-protection peer ip-address** statement at the **[edit interfaces interface-name]** hierarchy level. Multichassis protection reduces the configuration at the logical interface level for MX Series routers with multichassis aggregated Ethernet (MC-AE) interfaces. If the ICCP is UP and the interchassis data link (ICL) comes UP, the router configured as standby will bring up the MC-AE interfaces shared with the peer active-active node specified by the **peer** statement.

For example, the following statements illustrate how the same peer IP address can be configured for both the ICCP peer and multichassis protection link:

```
set interfaces ae1 unit 0 multi-chassis-protection 10.255.34.112 interface ae0
set protocols iccp peer 10.255.34.112 redundancy-group-id-list 1
```

Although you can commit an MC-LAG configuration with various parameters defined for it, you can configure multichassis protection between two peers without configuring the ICCP peer address. You can also configure multiple ICCP peers and commit such a configuration.

**Related
Documentation**

Configuring IPCP Options for Interfaces with PPP Encapsulation

For interfaces with PPP encapsulation, you can configure IPCP to negotiate IP address assignments and to pass network-related information such as Windows Name Service (WINS) and Domain Name System (DNS) servers, as defined in RFC 1877, *PPP Internet Protocol Control Protocol Extensions for Name Server Addresses*.

When you enable a PPP interface, you can configure an IP address, enable the interface to negotiate an IP address assignment from the remote end, or allow the interface to be unnumbered. You can also assign a destination profile to the remote end. The destination profile includes PPP properties, such as primary and secondary DNS and NetBIOS Name Servers (NBNSs). These options are described in the following sections:



NOTE: The Junos OS does not request name servers from the remote end; the software does, however, send name servers to the remote end if requested.

Before you begin

You must configure the PPP encapsulation on the interface before configuring the IPCP option. On the logical interface, the following PPP encapsulation types are supported:

- `atm-mlppp-llc`
- `atm-ppp-llc`
- `atm-ppp-vc-mux`
- `multilink-ppp`

For more information about PPP encapsulation, see [“Configuring Interface Encapsulation on Logical Interfaces” on page 192](#) and [Configuring ATM Interface Encapsulation](#)

- To configure an IP address for the interface, include the **address** statement in the configuration. For more information, see [“Configuring the Interface Address” on page 209](#).

If you include the **address** statement in the configuration, you cannot include the **negotiate-address** or **unnumbered-address** statement in the configuration.

When you include the **address** statement in the interface configuration, you can assign PPP properties to the remote end.



NOTE: The option to negotiate an IP address is not allowed in MLFR and MFR encapsulations.

- To enable the interface to obtain an IP address from the remote end, include the **negotiate-address** statement at the `[edit interfaces interface-name unit logical-unit-number family inet]` hierarchy level.

```
[edit interfaces interface-name unit logical-unit-number family inet]
user@host# set negotiate-address
```



NOTE: If you include the `negotiate-address` statement in the configuration, you cannot include the `address` or `unnumbered-address` statement in the configuration.

- To configure an interface to be unnumbered, include the `unnumbered-address` and `destination` statements in the configuration.

```
[edit interfaces interface-name unit logical-unit-number family inet]
user@host# set unnumbered-address interface-name
user@host# set destination address
```



NOTE:

- The `unnumbered-address` statement enables the local address to be derived from the specified interface. The interface name must include a logical unit number and must have a configured address (see “[Configuring the Interface Address](#)” on page 209). Specify the IP address of the remote interface with the `destination` statement.
- If you include the `unnumbered-address` statement in the configuration, you cannot include the `address` or `negotiate-address` statement in the interface configuration.

- To assign PPP properties to the remote end include the `destination-profile` statement:

```
[edit interfaces interface-name unit logical-unit-number family inet address address]
user@host# set destination-profile name
```

```
[edit interfaces interface-name unit logical-unit-number family inet unnumbered-address
interface-name]
user@host# set destination-profile name
```



NOTE:

- You can assign PPP properties to the remote end, after you include the `address` or `unnumbered-address` statement in the interface configuration.
- You define the profile at the `[edit access group-profile name ppp]` hierarchy level. For more information, see *Example: Group Profile Configuration*

Related Documentation

- [Example: Group Profile Configuration](#)
- [Configuring Interface Encapsulation on Logical Interfaces on page 192](#)

Configuring an Unnumbered Interface

This topic includes the following information:

- [Overview of Unnumbered Interfaces on page 220](#)
- [Configuring an Unnumbered Point-to-Point Interface on page 220](#)
- [Configuring an Unnumbered Ethernet or Demux Interface on page 221](#)
- [Configuring a Preferred Source Address for Unnumbered Ethernet or Demux Interfaces on page 222](#)
- [Restrictions for Configuring Unnumbered Ethernet Interfaces on page 223](#)
- [Displaying the Unnumbered Ethernet Interface Configuration on page 224](#)
- [Displaying the Configured Preferred Source Address for an Unnumbered Ethernet Interface on page 225](#)
- [Displaying the Configuration for Unnumbered Ethernet Interface as the Next Hop for a Static Route on page 226](#)

Overview of Unnumbered Interfaces

When you need to conserve IP addresses, you can configure unnumbered interfaces. Setting up an unnumbered interface enables IP processing on the interface without assigning an explicit IP address to the interface. For IPv6, in which conserving addresses is not a major concern, you can configure unnumbered interfaces to share the same subnet across multiple interfaces. IPv6 unnumbered interfaces are only supported on Ethernet interfaces. The statements you use to configure an unnumbered interface depend on the type of interface you are configuring: a point-to-point interface or an Ethernet interface:

Configuring an Unnumbered Point-to-Point Interface

1. In configuration mode, go to the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name unit logical-unit-number
```

2. To configure an unnumbered point-to-point interface, configure the protocol family, but do not include the **address** statement.

```
[edit interfaces interface-name unit logical-unit-number]
user@host# set family
```


**NOTE:**

- For interfaces with PPP encapsulation, you can configure an unnumbered interface by including the `unnumbered-interface` statement in the configuration. For more information, see [“Configuring IPCP Options for Interfaces with PPP Encapsulation” on page 218](#).
- When configuring unnumbered interfaces, you must ensure that a source address is configured on some interface in the router. This address is the default address. We recommend that you do this by assigning an address to the loopback interface (lo0), as described in [“Configuring the Loopback Interface” on page 336](#). If you configure an address (other than a martian) on the lo0 interface, that address is always the default address, which is preferable because the loopback interface is independent of any physical interfaces and therefore is always accessible.

Configuring an Unnumbered Ethernet or Demux Interface

1. In configuration mode, go to the `[edit interfaces interface-name unit logical-unit-number family family-name]` hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name unit logical-unit-number family family-name
```

2. To configure an unnumbered Ethernet or demultiplexing interface, include the `unnumbered-address` statement in the configuration.

```
[edit interfaces interface-name unit logical-unit-number family family-name]
user@host# set unnumbered-address interface-name
```

3. (Optional) To specify the unnumbered Ethernet interface as the next-hop interface for a configured static route, include the `qualified-next-hop` statement at the `[edit routing-options static route destination-prefix]` hierarchy level. This feature enables you to specify independent preferences and metrics for static routes on a next-hop basis.

```
[edit routing-options static route destination-prefix]
user@host# set qualified-next-hop (address | interface-name)
```



NOTE:

- The `unnumbered-address` statement currently supports configuration of unnumbered demux interfaces only for the IPv4 address family. You can configure unnumbered Ethernet interfaces for both IPv4 and IPv6 address families.
 - The interface that you configure to be unnumbered *borrow*s an assigned IP address from another interface, and is referred to as the *borrower interface*. The interface from which the IP address is borrowed is referred to as the *donor interface*. In the `unnumbered-address` statement, *interface-name* specifies the donor interface. For an unnumbered Ethernet interface, the donor interface can be an Ethernet, ATM, SONET, or loopback interface that has a logical unit number and configured IP address and is not itself an unnumbered interface. For an unnumbered IP demultiplexing interface, the donor interface can be an Ethernet or loopback interface that has a logical unit number and configured IP address and is not itself an unnumbered interface. In addition, for either Ethernet or demux, the donor interface and the borrower interface must be members of the same routing instance and the same logical system.
 - When you configure an unnumbered Ethernet or demux interface, the IP address of the donor interface becomes the source address in packets generated by the unnumbered interface.
 - You can configure a host route that points to an unnumbered Ethernet or demux interface. For information about host routes, see the *MPLS Applications Feature Guide*.
-

Configuring a Preferred Source Address for Unnumbered Ethernet or Demux Interfaces

When a loopback interface with multiple secondary IP addresses is configured as the donor interface for an unnumbered Ethernet or demux interface, you can optionally specify any one of the loopback interface's secondary addresses as the preferred source address for the unnumbered Ethernet or demux interface. This feature enables you to use an IP address other than the primary IP address on some of the unnumbered Ethernet or demux interfaces in your network.

1. In configuration mode, go to the `[edit interfaces interface-name unit logical-unit-number family family-name]` hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name unit logical-unit-number family family-name
```

2. To configure a secondary address on a loopback donor interface as the preferred source address for an unnumbered Ethernet or demux interface, include the `preferred-source-address` option in the `unnumbered-address` statement:

```
[edit interfaces interface-name unit logical-unit-number family family-name]
```

```
user@host# set unnumbered-address interface-name <preferred-source-address  
address
```

**NOTE:**

The following considerations apply when you configure a preferred source address on an unnumbered Ethernet or demux interface:

- The **unnumbered-address** statement currently supports the configuration of a preferred source address only for the IPv4 address family for demux interfaces, and for IPv4 and IPv6 address families for Ethernet interfaces.
- If you do not specify the preferred source address, the router uses the default primary IP address of the donor interface.
- You cannot delete an address on a donor loopback interface while it is being used as the preferred source address for an unnumbered Ethernet or demux interface.

Restrictions for Configuring Unnumbered Ethernet Interfaces

The following restrictions apply when you configure unnumbered Ethernet interfaces:

- The **unnumbered-address** statement currently supports the configuration of unnumbered Ethernet interfaces for IPv4 and IPv6 address families.
- You cannot assign an IP address to an Ethernet interface that is already configured as an unnumbered interface.
- The donor interface for an unnumbered Ethernet interface must have one or more configured IP addresses.
- The donor interface for an unnumbered Ethernet interfaced cannot be configured as unnumbered.
- An unnumbered Ethernet interface does not support configuration of the following **address** statement options: **arp**, **broadcast**, **primary**, **preferred**, and **vrrp-group**. For information about these options, see [“Configuring the Interface Address” on page 209](#).
- Running IGMP and PIM are supported only on unnumbered Ethernet interfaces that directly face the host and have no downstream PIM neighbors. IGMP and PIM are not supported on unnumbered Ethernet interfaces that act as upstream interfaces in a PIM topology.
- Running OSPF and IS-IS on unnumbered Ethernet interfaces is not supported. However, you can run OSPF over unnumbered Ethernet interfaces configured as a Point-to-Point connection.

For link-state distribution using an interior gateway protocol (IGP), ensure that OSPF is enabled on the donor interface for an unnumbered interface configuration, so the donor IP address is reachable to establish OSPF sessions.



NOTE: If you configure the same address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration, the remaining address configurations are ignored and can leave interfaces without an address. Interfaces that do not have an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.

For example, in the following configuration the address configuration of interface xe-0/0/1.0 is ignored:

```
interfaces {
  xe-0/0/0 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
  xe-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
}
```

For more information on configuring the same address on multiple interfaces, see [“Configuring the Interface Address” on page 209](#).

Displaying the Unnumbered Ethernet Interface Configuration

Purpose To display the configured unnumbered interface at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

- Unnumbered interface —ge-1/0/0
- Donor interface —ge-0/0/0
- Donor interface address —4.4.4.1/24

The unnumbered interface “borrows” an IP address from the donor interface.

Action • Run the **show** command at the **[edit]** hierarchy level.

```
interfaces {
  ge-0/0/0 {
    unit 0 {
      family inet {
        address 4.4.4.1/24;
      }
    }
  }
  ge-1/0/0 {
```

```

unit 0 {
  family inet {
    unnumbered-address ge-0/0/0.0;
  }
}

```

Meaning The sample configuration that is described works correctly on M and T Series routers. For unnumbered interfaces on MX Series routers, you must additionally configure static routes on an unnumbered Ethernet interface by including the **qualified-next-hop** statement at the **[edit routing-options static route destination-prefix]** hierarchy level to specify the unnumbered Ethernet interface as the next-hop interface for a configured static route.

Displaying the Configured Preferred Source Address for an Unnumbered Ethernet Interface

Purpose To display the configuration of preferred source address for an unnumbered interface at the **[edit interfaces interface-name unit logical-unit-number family inet]** hierarchy level:

- Unnumbered interface —ge-4/0/0
- Donor interface —lo0
- Donor interface primary address—2.2.2.1/32
- Donor interface secondary address—3.3.3.1/32

Action • Run the **show** command at the **[edit]** hierarchy level.

```

interfaces {
  lo0 {
    unit 0 {
      family inet {
        address 2.2.2.1/32;
        address 3.3.3.1/32;
      }
    }
  }
}
interfaces {
  ge-4/0/0 {
    unit 0 {
      family inet {
        unnumbered-address lo0.0 preferred-source-address 3.3.3.1;
      }
    }
  }
}

```

Meaning The loopback interface **lo0** is the donor interface from which unnumbered Ethernet interface **ge-4/0/0** “borrows” an IP address.

The example shows one of the loopback interface’s secondary addresses, 3.3.3.1, as the preferred source address for the unnumbered Ethernet interface.

Displaying the Configuration for Unnumbered Ethernet Interface as the Next Hop for a Static Route

Purpose To display the unnumbered interface configured as the next hop for the static route at the **[edit interfaces interface-name unit logical-unit-number family inet]** hierarchy level:

- Unnumbered interface —**ge-0/0/0**
- Donor interface —**lo0**
- Donor interface primary address—**5.5.5.1/32**
- Donor interface secondary address—**6.6.6.1/32**
- Static route—**7.7.7.1/32**

Action • Run the **show** command at the **[edit]** hierarchy level.

```
interfaces {
  lo0 {
    unit 0 {
      family inet {
        address 5.5.5.1/32;
        address 6.6.6.1/32;
        address 7.7.7.1/32;
      }
    }
  }
}
```

Meaning In this example, **ge-0/0/0** is the unnumbered interface and a loopback interface, **lo0**, is the donor interface from which **ge-0/0/0** “borrows” an IP address. The example also configures a static route to **7.7.7.1/32** with a next hop through unnumbered interface **ge-0/0/0.0**.

Setting the Protocol MTU

When you initially configure an interface, the protocol maximum transmission unit (MTU) is calculated automatically. If you subsequently change the media MTU, the protocol MTU on existing address families automatically changes.

For a list of default protocol MTU values, see [“Media MTU Sizes by Interface Type” on page 101](#).

To modify the MTU for a particular protocol family, include the **mtu** statement:

```
mtu bytes;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

If you increase the size of the protocol MTU, you must ensure that the size of the media MTU is equal to or greater than the sum of the protocol MTU and the encapsulation overhead. For a list of encapsulation overhead values, see “[Encapsulation Overhead by Interface Encapsulation Type](#)” on page 113. If you reduce the media MTU size, but there are already one or more address families configured and active on the interface, you must also reduce the protocol MTU size. (You configure the media MTU by including the `mtu` statement at the [edit interfaces *interface-name*] hierarchy level.)



NOTE: Changing the media MTU or protocol MTU causes an interface to be deleted and added again.

The maximum number of data-link connection identifiers (DLCIs) is determined by the MTU on the interface. If you have keepalives enabled, the maximum number of DLCIs is 1000, with the MTU set to 5012.

The actual frames transmitted also contain cyclic redundancy check (CRC) bits, which are not part of the MTU. For example, the default protocol MTU for a Gigabit Ethernet interface is 1500 bytes, but the largest possible frame size is actually 1504 bytes; you need to consider the extra bits in calculations of MTUs for interoperability.

Related Documentation

- [Media MTU Overview on page 100](#)

Disabling the Removal of Address and Control Bytes

For Point-to-Point Protocol (PPP) CCC-encapsulated interfaces, the address and control bytes are removed by default before the packet is encapsulated into a tunnel.

You can disable the removal of address and control bytes. To do this, include the `keep-address-and-control` statement:

```
keep-address-and-control;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *ccc*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *ccc*]

Related Documentation • [keep-address-and-control on page 736](#)

Disabling the Transmission of Redirect Messages on an Interface

By default, the interface sends protocol redirect messages. To disable the sending of these messages on an interface, include the **no-redirects** statement:

```
no-redirects;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

To disable the sending of protocol redirect messages for the entire router or switch, include the **no-redirects** statement at the [edit system] hierarchy level.

Related Documentation • [no-redirects on page 859](#)

Applying Policers

- [Overview of Applying Policers on page 228](#)
- [Applying Aggregate Policers on page 229](#)
- [Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs on page 232](#)
- [Configuring Hierarchical Policers on page 234](#)
- [Configuring a Single-Rate Two-Color Policer on page 235](#)
- [Configuring a Single-Rate Color-Blind Policer on page 235](#)
- [Configuring a Two-Rate Tricolor Marker Policer on page 236](#)

Overview of Applying Policers

Policies allow you to perform simple traffic policing on specific interfaces or Layer 2 virtual private networks (VPNs) without configuring a firewall filter. To apply policies, include the **policer** statement:

```
policer {  
  arp policer-template-name;  
  input policer-template-name;  
  output policer-template-name;  
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]

- `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family family]`

In the **family** statement, the protocol family can be **ccc**, **inet**, **inet6**, **mpls**, **tcc**, or **vpls**.

In the **arp** statement, list the name of one policer template to be evaluated when Address Resolution Protocol (ARP) packets are received on the interface. By default, an ARP policer is installed that is shared among all the Ethernet interfaces on which you have configured the **family inet** statement. If you want more stringent or lenient policing of ARP packets, you can configure an interface-specific policer and apply it to the interface. You configure an ARP policer just as you would configure any other policer, at the **[edit firewall policer]** hierarchy level. If you apply this policer to an interface, the default ARP packet policer is overridden. If you delete this policer, the default policer takes effect again.

In the **input** statement, list the name of one policer template to be evaluated when packets are received on the interface.

In the **output** statement, list the name of one policer template to be evaluated when packets are transmitted on the interface.



NOTE: To use policing on a CCC or TCC interface, you must configure the CCC or TCC protocol family.

You can configure a different policer on each protocol family on an interface, with one input policer and one output policer for each family. When you apply policers, you can configure the family **ccc**, **inet**, **inet6**, **mpls**, **tcc**, or **vpls** only, and one ARP policer for the family **inet** protocol only. Each time a policer is referenced, a separate copy of the policer is installed on the packet forwarding components for that interface.

If you apply both policers and firewall filters to an interface, input policers are evaluated before input firewall filters, and output policers are evaluated after output firewall filters.

If you apply the policer to the interface **lo0**, it is applied to packets received or transmitted by the Routing Engine.

On T Series, M120, and M320 platforms, if the interfaces are on the same FPC, the filters or policers do not act on the sum of traffic entering and exiting the interfaces.

For more information about policers, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

Applying Aggregate Policers

- [Applying Aggregate Policers on page 229](#)

Applying Aggregate Policers

By default, if you apply a policer to multiple protocol families on the same logical interface, the policer restricts traffic for each protocol family individually. For example, a policer

with a 50 Mbps bandwidth limit applied to both IPv4 and IPv6 traffic would allow the interface to accept 50 Mbps of IPv4 traffic and 50 Mbps of IPv6 traffic. If you apply an aggregate policer, the policer would allow the interface to receive only 50 Mbps of IPv4 and IPv6 traffic combined.

To configure an aggregate policer, include the **logical-interface-policer** statement at the **[edit firewall policer *policer-template-name*]** hierarchy level:

```
[edit firewall policer policer-template-name]  
logical-interface-policer;
```

For the policer to be treated as an aggregate, you must apply it to multiple protocol families on a single logical interface by including the **policer** statement:

```
policer {  
  arp policer-template-name;  
  input policer-template-name;  
  output policer-template-name;  
}
```

You can include these statements at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number* family *family*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]**

In the **family** statement, the protocol family can be **ccc**, **inet**, **inet6**, **mpls**, **tcc**, or **vpls**.

The protocol families on which you do not apply the policer are not affected by the policer. For example, if you configure a single logical interface to accept MPLS, IPv4, and IPv6 traffic and you apply the logical interface policer **policer1** to only the IPv4 and IPv6 protocol families, MPLS traffic is not subject to the constraints of **policer1**.

If you apply **policer1** to a different logical interface, there are two instances of the policer. This means the Junos OS polices traffic on separate logical interfaces separately, not as an aggregate, even if the same logical-interface policer is applied to multiple logical interfaces on the same physical interface port.

Example: Applying Aggregate Policers

Configure two logical interface policers: **aggregate_police1** and **aggregate_police2**. Apply **aggregate_police1** to IPv4 and IPv6 traffic received on logical interface **fe-0/0/0.0**. Apply **aggregate_police2** to CCC and MPLS traffic received on logical interface **fe-0/0/0.0**. This configuration causes the software to create only one instance of **aggregate_police1** and one instance of **aggregate_police2**.

Apply **aggregate_police1** to IPv4 and IPv6 traffic received on another logical interface **fe-0/0/0.1**. This configuration causes the software to create a new instance of **aggregate_police1**, one that applies to unit 0 and another that applies to unit 1.

```
[edit firewall]
```

```

policer aggregate_police1 {
  logical-interface-policer;
  if-exceeding {
    bandwidth-limit 100m;
    burst-size-limit 500k;
  }
  then {
    discard;
  }
}
policer aggregate_police2 {
  logical-interface-policer;
  if-exceeding {
    bandwidth-limit 10m;
    burst-size-limit 200k;
  }
  then {
    discard;
  }
}
[edit interfaces fe-0/0/0]
unit 0 {
  family inet {
    policer {
      input aggregate_police1;
    }
  }
  family inet6 {
    policer {
      input aggregate_police1;
    }
  }
  family ccc {
    policer {
      input aggregate_police2;
    }
  }
  family mpls {
    policer {
      input aggregate_police2;
    }
  }
}
unit 1 {
  family inet {
    policer {
      input aggregate_police1;
    }
  }
  family inet6 {
    policer {
      input aggregate_police1;
    }
  }
}
}
```

Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs

- [Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs on page 232](#)

Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs

M40e, M120, and M320 edge routers and T Series core routers with Enhanced Intelligent Queuing (IQE) PICs support hierarchical policers in the ingress direction and allow you to apply a hierarchical policer for the premium and aggregate (premium plus normal) traffic levels to an interface. Hierarchical policers provide cross-functionality between the configured physical interface and the Packet Forwarding Engine.


Before you begin, there are some general restrictions that apply to hierarchical policers:

- Only one type of policer can be configured for a logical or physical interface. For example, a hierarchical policer and a regular policer in the same direction for the same logical interface is not allowed.
- The chaining of the policers—that is, applying policers to both a port and the logical interfaces of that port—is not allowed.
- There is a limit of 64 policers per interface in case there is no BA classification, providing a single policer per DLCI.
- Only one kind of policer can be applied on a physical or logical interface.
- The policer should be independent of BA classification. Without BA classification, all traffic on an interface will be treated either as EF or non-EF, based on the configuration. With BA classification, an interface can support up to 64 policers. Again, the interface here may be a physical interface or logical interface (for example, DLCI).
- With BA classification, the miscellaneous traffic (the traffic *not* matching with any of the BA classification DSCP/EXP bits) will be policed as non-EF traffic. No separate policers will be installed for this traffic.

Hierarchical Policer Overview

Hierarchical policing uses two token buckets, one for aggregate (non-EF) traffic and one for premium (EF) traffic. Which traffic is EF and which is non-EF is determined by the class-of-service configuration. Logically, hierarchical policing is achieved by chaining two policers.

Figure 11: Hierarchical Policer

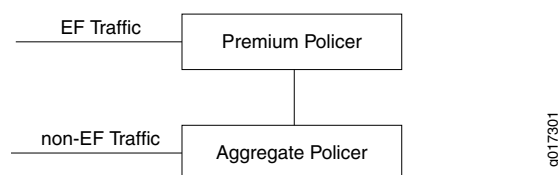

In the example in [Figure 11 on page 232](#), EF traffic is policed by Premium Policer and non EF traffic is policed by Aggregate Policer. What that means is, for EF traffic the out-of-spec action will be the one that is configured for Premium Policer, but the in-spec EF traffic will still consume the tokens from the Aggregate Policer.

But EF traffic will never be submitted to the out-of-spec action of the Aggregate Policer. Also, if the out-of-spec action of the Premium Policer is not set to Discard, those out-of-spec packets will not consume the tokens from the Aggregate Policer. Aggregate Policer only polices the non-EF traffic. As you can see, the Aggregate Policer token bucket can go negative, if all the tokens are consumed by the non-EF traffic and then you get bursts of EF traffic. But that will be for a very short time, and over a period of time it will average out. For example:

- *Premium Policer*: Bandwidth 2 Mbps, OOS Action: Discard
- *Aggregate Policer*: Bandwidth 10 Mbps, OOS Action: Discard

In the above case, EF traffic is guaranteed 2 Mbps and the non-EF traffic will get from 8 Mbps to 10 Mbps, depending on the input rate of the EF traffic.

Hierarchical Policing Characteristics

Hierarchical token bucket features include:

- Ingress traffic is first classified into EF and non-EF traffic prior to applying a policer:
 - Classification is performed by Q-tree lookup
- Channel number selects a shared token bucket policer:
 - Dual token bucket policer is divided into two single bucket policers:
 - Policer1—EF traffic
 - Policer2—non-EF traffic
- Shared token bucket is used to police the traffic as follows:
 - Policer1 is set to EF rate (for example, 2 Mbps)
 - Policer2 is set to aggregate interface policed rate (for example, 10 Mbps).
 - EF traffic gets applied to Policer1.
 - If traffic is in-spec it is allowed to pass and decrement from both Policer1 and Policer2.
 - If traffic is out-of-spec it can be discarded or marked with a new FC or loss priority. Policer2 will not do anything with out-of-spec EF traffic.
 - Non-EF traffic gets applied only to Policer2.
 - If traffic is in-spec it is allowed to pass through and decremented Policer2.
 - If traffic is out-of-spec it is discarded or marked with a new FC or set with a new drop priority.
- Rate-limit the port speed to a desired rate at Layer 2
- Rate-limit the EF traffic
- Rate-limit the non-EF traffic
- Policing drops counted per color

See Also • *Class of Service Feature Guide for Routers and EX9200 Switches*

Configuring Hierarchical Policers

To configure a hierarchical policer, apply the **policing-priority** statement to the proper forwarding class and configure a hierarchical policer for the aggregate and premium level. For more information about class of service, see the *Class of Service Feature Guide for Routers and EX9200 Switches*.



NOTE: Hierarchical policers can only be configured on SONET physical interfaces hosted on an IQE PIC. Only aggregate and premium levels are supported.

CoS Configuration of Forwarding Classes for Hierarchical Policers

```
[edit class-of-service forwarding-classes]
class fc1 queue-num 0 priority high policing-priority premium;
class fc2 queue-num 1 priority low policing-priority normal;
class fc3 queue-num 2 priority low policing-priority normal;
class fc4 queue-num 3 priority low policing-priority normal;
```

For detailed information on class-of-service configuration and statements, see the *Class of Service Feature Guide for Routers and EX9200 Switches*.

Firewall Configuration for Hierarchical Policers

```
[edit firewall hierarchical-policer foo]
aggregate {
  if-exceeding {
    bandwidth-limit 70m;
    burst-size-limit 1500;
  }
  then {
    discard;
  }
}
premium {
  if-exceeding {
    bandwidth-limit 50m;
    burst-size-limit 1500;
  }
  then {
    discard;
  }
}
```

You can apply the hierarchical policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]
input-hierarchical-policer foo;
```

You also have the option to apply the policer at the physical port level as follows:

```
[edit interfaces so-0/1/0 layer2-policer]
input-hierarchical-policer foo;
```

Configuring a Single-Rate Two-Color Policer

You can configure a single-rate two-color policer as follows:

```
[edit firewall policer foo]
  if-exceeding {
    bandwidth-limit 50m;
    burst-size-limit 1500;
  }
  then {
    discard;
  }
```

You can apply the policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]
input-policer foo;
```

You also have the option to apply the policer at the physical port level as follows:

```
[edit interfaces so-0/1/0 layer2-policer]
input-policer foo;
```

Configuring a Single-Rate Color-Blind Policer

This section describes single-rate color blind and color aware policers.

You can configure a single-rate color blind policer as follows:

```
[edit firewall three-color-policer foo]
single-rate {
  color-blind;
  committed-information-rate 50m;
  committed-burst-size 1500;
  excess-burst-size 1500;
}
```

You can apply the single-rate color blind policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]
input-three-color foo;
```

You can configure a single-rate color-aware policer as follows:

```
[edit firewall three-color-policer bar]
single-rate {
  color-aware;
  committed-information-rate 50m;
```

```
committed-burst-size 1500;  
excess-burst-size 1500;  
}
```

You can apply the single-rate color-aware policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]  
input-three-color foo;
```

You also have the option to apply the policer at the physical port level as follows:

```
[edit interfaces so-0/1/0 layer2-policer]  
input-three-color bar;
```

Configuring a Two-Rate Tricolor Marker Policer

Ingress policing is implemented using a two-rate tricolor marker (trTCM). This is done with a dual token bucket (DTB) that maintains two rates, committed, and a peak. Egress static policing also uses a token bucket.

The token buckets perform the following ingress policing functions:

- (1K) trTCM - Dual token bucket (red, yellow, and green marking)
- Policing is based on Layer 2 packet size:
 - After +/- byte adjust offset
- Marking is color aware and color blind:
 - Color aware needs to have the color set by q-tree lookup based on:
 - ToS
 - EXP
- Programmable marking actions:
 - Color (red, yellow, green)
 - Drop based on color and congestion profile
- Policer is selected based on the arriving channel number:
 - Channel number LUT produces policer index and queue index
 - Multiple channels can share the same policer (LUT produces same policer index)
- Support ingress policing and trTCM at the following levels:
 - Queue
 - Logical interface (ifl/DLCI)
 - Physical interface (ifd)

- Physical port (controller ifd)
- Any combinations of logical interface, physical interface, and port
- Support percentage of interface speed and bits per second

Rate limits may be applied to selected queues on ingress and on predefined queues at egress. The token bucket operates in color aware and color blind modes (specified by RFC 2698).

Configuring a Color-Blind trTCM

```
[edit firewall three-color-policer foo]
two-rate {
  color-blind;
  committed-information-rate 50m;
  committed-burst-size 1500;
  peak-information-rate 100m;
  peak-burst-size 3k;
}
```

You can apply the three-color two-rate color-blind policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]
input-three-color foo;
```

You also have the option to apply the policer at the physical port level as follows:

```
[edit interfaces so-0/1/0 layer2-policer]
input-three-color foo;
```

Configuring a Color-Aware trTCM

```
[edit firewall three-color-policer bar]
two-rate {
  color-aware;
  committed-information-rate 50m;
  committed-burst-size 1500;
  peak-information-rate 100m;
  peak-burst-size 3k;
}
```

You can apply the three-color two-rate color-aware policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]
input-three-color bar;
```

You also have the option to apply the policer at the physical port level as follows:

```
[edit interfaces so-0/1/0 layer2-policer]
input-three-color bar;
```

See Also • *Class of Service Feature Guide for Routers and EX9200 Switches*

Applying a Filter to an Interface

- [Defining Interface Groups in Firewall Filters on page 238](#)
- [Applying a Filter to an Interface on page 239](#)

Defining Interface Groups in Firewall Filters

When applying a firewall filter, you can define an interface to be part of an *interface group*. Packets received on that interface are tagged as being part of the group. You can then match these packets using the **interface-group** match statement, as described in the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

To define the interface to be part of an interface group, include the **group** statement:

```
group filter-group-number;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family* filter]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family* filter]



NOTE: The number 0 is not a valid interface group number.

Filter-Based Forwarding on the Output Interface

If port-mirrored packets are to be distributed to multiple monitoring or collection interfaces, based on patterns in packet headers, it is helpful to configure a filter-based forwarding (FBF) filter on the port-mirroring egress interface.

When an FBF filter is installed as an output filter, a packet that is forwarded to the filter has already undergone at least one route lookup. After the packet is classified at the egress interface by the FBF filter, it is redirected to another routing table for additional route lookup. To avoid packet looping inside the Packet Forwarding Engine, the route lookup in the latter routing table (designated by an FBF routing instance) must result in a different next hop from any next hop specified in a table that has already been applied to the packet.

If an input interface is configured for FBF, the source lookup is disabled for those packets headings to a different routing instance, since the routing table is not set up to handle the source lookup.

For more information about FBF configuration, see the *Junos OS Routing Protocols Library*. For more information about port mirroring, see the *Junos OS Services Interfaces Library for Routing Devices*.

Applying a Filter to an Interface

To apply firewall filters to an interface, include the **filter** statement:

```
filter {
  group filter-group-number;
  input filter-name;
  input-list [ filter-names ];
  output filter-name;
  output-list [ filter-names ];
}
```

To apply a single filter, include the **input** statement:

```
filter {
  input filter-name;
}
```

To apply a list of filters to evaluate packets received on an interface, include the **input-list** statement.

```
filter {
  input-list [ filter-names ];
}
```

Up to 16 filter names can be included in an input list.

To apply a list of filters to evaluate packets transmitted on an interface, include the **output-list** statement.

```
filter {
  output-list [ filter-names ];
}
```

When you apply filters using the **input-list** statement or the **output-list** statement, a new filter is created with the name *<interface-name>.<unit-direction>*. This filter is exclusively interface-specific.

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

In the **family** statement, the protocol family can be **ccc**, **inet**, **inet6**, **mpls**, or **vpls**.

In the **group** statement, specify the interface group number to associate with the filter.

In the **input** statement, list the name of one firewall filter to be evaluated when packets are received on the interface.

In the **input-list** statement, list the names of filters to evaluate when packets are received on the interface. You can include up to 16 filter names.

In the **output** statement, list the name of one firewall filter to be evaluated when packets are transmitted on the interface.



NOTE: Output filters do not work for broadcast and multicast traffic, including VPLS traffic (except in MX Series routers with MPC/MIC interfaces), as shown in [“Applying a Filter to an Interface” on page 239](#).



NOTE: On an MX Series router, you cannot apply as an output filter, a firewall filter configured at the `[edit firewall filter family ccc]` hierarchy level. Firewall filters configured for the `family ccc` statement can be applied only as input filters.

In the **output-list** statement, list the names of filters to evaluate when packets are transmitted on the interface. You can include up to 16 filter names.

You can use the same filter one or more times. On M Series routers (except the M320 and M120 routers), if you apply a firewall filter or policer to multiple interfaces, the filter or policer acts on the sum of traffic entering or exiting those interfaces.

On T Series, M120, and M320 routers, interfaces are distributed among multiple packet forwarding components. Therefore, on these routers, if you apply a firewall filter or policer to multiple interfaces, the filter or policer acts on the traffic stream entering or exiting each interface, regardless of the sum of traffic on the multiple interfaces.

For more information on Understanding Ethernet Frame Statistics, see the *MX Series Layer 2 Configuration Guide*.

If you apply the filter to the interface `lo0`, it is applied to packets received or transmitted by the Routing Engine. You cannot apply MPLS filters to the management interface (`fxp0` or `em0`) or the loopback interface (`lo0`).

Filters applied at the `[set interfaces lo0 unit 0 family any filter input]` hierarchy level are not installed on T4000 Type 5 FPCs.

For more information about firewall filters, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*. For more information about MPLS filters, see the *MPLS Applications Feature Guide*.

Example: Input Filter for VPLS Traffic

For M Series and T Series routers only, apply an input filter to VPLS traffic. Output filters do not work for broadcast and multicast traffic, including VPLS traffic. Note that on MX Series routers with MPC/MIC interfaces, the VPLS filters on the egress is applicable to broadcast, multicast, and unknown unicast traffic.

```
[edit interfaces]
fe-2/2/3 {
```

```

vlan-tagging;
encapsulation vlan-vpls;
unit 601 {
    encapsulation vlan-vpls;
    vlan-id 601;
    family vpls {
        filter {
            input filter1; # Works for multicast destination MAC address
            output filter1; # Does not work for multicast destination MAC address
        }
    }
}
[edit firewall]
family vpls {
    filter filter1 {
        term 1 {
            from {
                destination-mac-address {
                    01:00:0c:cc:cc:cd/48;
                }
            }
            then {
                discard;
            }
        }
        term 2 {
            then {
                accept;
            }
        }
    }
}

```

Example: Filter-Based Forwarding at the Output Interface

The following example illustrates the configuration of filter-based forwarding at the output interface. In this example, the packet flow follows this path:

1. A packet arrives at interface **fe-1/2/0.0** with source and destination addresses **10.50.200.1** and **10.50.100.1** respectively.
2. The route lookup in routing table **inet.0** points to the egress interface **so-0/0/3.0**.
3. The output filter installed at **so-0/0/3.0** redirects the packet to routing table **fbf.inet.0**.
4. The packet matches the entry **10.50.100.0/25** in the **fbf.inet.0** table, and finally leaves the router from interface **so-2/0/0.0**.

```

[edit interfaces]
so-0/0/3 {
    unit 0 {
        family inet {
            filter {

```

```
        output fbf;
    }
    address 10.50.10.2/25;
}
}
}
fe-1/2/0 {
    unit 0 {
        family inet {
            address 10.50.50.2/25;
        }
    }
}
so-2/0/0 {
    unit 0 {
        family inet {
            address 10.50.20.2/25;
        }
    }
}
[edit firewall]
filter fbf {
    term 0 {
        from {
            source-address {
                10.50.200.0/25;
            }
        }
        then routing-instance fbf;
    }
    term d {
        then count d;
    }
}
[edit routing-instances]
fbf {
    instance-type forwarding;
    routing-options {
        static {
            route 10.50.100.0/25 next-hop so-2/0/0.0;
        }
    }
}
[edit routing-options]
interface-routes {
    rib-group inet fbf-group;
}
static {
    route 10.50.100.0/25 next-hop 10.50.10.1;
}
rib-groups {
    fbf-group {
        import-rib [inet.0 fbf.inet.0];
    }
}
```

Guidelines for Configuring Unicast RPF on ACX Series Routers

Observe the following guidelines while configuring unicast RPF on ACX Series routers:

- Support for physical interfaces impacts inet families only.
- The RPF check to be used when routing is asymmetrical is not supported because the **unicast-reverse-path (active-paths | feasible-paths)** statement at the **[edit routing-instances *routing-instance-name* instance-type *name* routing-options forwarding-table]** hierarchy level is not supported.
- Even if uRPF checking is enabled, the reverse path checking is not performed if the following conditions apply:
 - The destination IP address is not a unicast address. This applies for both IPV4 and IPV6 packets.
 - The source IP address is IPV6 and the address is a link local address (FE80::/10)
 - The received packet is a BOOTP/DHCP packet (SIP=0.0.0.0 and DIP=255.255.255.255)
- If you enable/disable unicast RPF on live traffic, some packets are dropped while the packet forwarding components are updating. This behavior occurs because route reinstallation is initiated while you enable or disable uRPF.
- uRPF is supported at the logical interface level. Due to hardware limitations, support is available only at the logical interface level.
- Strict mode on ECMP routes is not supported in ACX. This condition occurs because the hardware treats ECMP routes as Loose Mode although the port is configured as Strict mode. Because ECMP uses multiple physical paths for the route the reverse path check results in utilizing many paths (routes) and the source port validation method is not used in case of Strict mode. As a result, such a network scenario operates in the same manner as loose mode.
- When the strict mode is enabled on the interface, if the packet is coming with an SIP address which ARP resolution is pending will be dropped as it points to RESOLVE_NH.
- uRPF fail filter can be configured for family *<inet | inet6>* in ACX.



NOTE: The uRPF fail filter cannot match packets failed at ingress port check (strict mode).

The uRPF fail filter can match packets failing source IP lookup but cannot match packets failing the input interface check (strict mode).

The uRPF fail filter applies only to interface-specific instances of the firewall filter.

The uRPF fail filters do not support reject and routing-instance actions.

- uRPF can be configured for family *<inet | inet6>* on IRB interfaces in ACX.

- uRPF implementation in ACX does not consider all feasible paths for reverse path verification and only active path based verification is supported.
- uRPF failure packets statistics are not supported in ACX.
- You can use either the **show interfaces extensive** command or the **show interfaces detail** command to verify that unicast RPF is enabled and working on the interface. In the **Flags** section of the output, if unicast reverse-path forwarding (RPF) is explicitly configured on the specified interface, the uRPF flag is displayed. If unicast RPF was configured on a different interface (and therefore is enabled on all switch interfaces) but was not explicitly configured on the specified interface, the uRPF flag is not displayed even though unicast RPF is enabled.
- The uRPF detail in the **Flags** section of the output of the **show interfaces (detail | extensive)** commands is displayed only for logical interfaces on which uRPF is configured. Otherwise, this information is not shown.

Related •
Documentation

Configuring Unicast RPF

- [Configuring Unicast RPF on page 244](#)
- [Unicast RPF and Default Route on page 245](#)
- [Configuring Unicast RPF Strict Mode on page 247](#)
- [Configuring Unicast RPF Loose Mode on page 249](#)
- [Configuring Unicast RPF Loose Mode with Ability to Discard Packets on page 250](#)
- [Configuring Unicast RPF on a VPN on page 252](#)
- [Configuring Unicast RPF on page 253](#)

Configuring Unicast RPF

For interfaces that carry IPv4 or IPv6 traffic, you can reduce the impact of denial of service (DoS) attacks by configuring unicast reverse path forwarding (RPF). Unicast RPF helps determine the source of attacks and rejects packets from unexpected source addresses on interfaces where unicast RPF is enabled.

**NOTE:**

- You can protect a network by applying unicast RPF check feature at the edge (on customer facing interfaces) of the network. In an ISP environment, this can impact the network which can impose on a scaled setup. In case if you have already protected the edge of your network, a packet with a spoofed IP source address would not even appear in a core facing interface. In this case, unicast RPF check is not necessary. Enabling unicast RPF feature can impact the control plane performance, so use it where it is required. So it is strongly recommended not to enable this feature on the network core (internal) interfaces.

The following sections describe unicast RPF in detail:

Unicast RPF and Default Route

When the active route cannot be chosen from the routes in a routing table, the router chooses a default route. A default route is equivalent to an IP address of 0.0.0.0/0. If you configure a default route, and you configure unicast RPF on an interface that the default route uses, unicast RPF behaves differently than it does otherwise. For information about configuring default routes, see the *Junos OS Routing Protocols Library*.

To determine whether the default route uses an interface, enter the **show route** command:

```
user@host> show route address
```

address is the next-hop address of the configured default route. The default route uses the interfaces shown in the output of the **show route** command.

The following sections describe how unicast RPF behaves when a default route uses an interface and when a default route does not use an interface:

- [Unicast RPF Behavior with a Default Route on page 245](#)
- [Unicast RPF Behavior Without a Default Route on page 246](#)
- [Unicast RPF with Routing Asymmetry on page 246](#)

Unicast RPF Behavior with a Default Route

On all routers except those with MPCs and the MX80 router, unicast RPF behaves as follows if you configure a default route that uses an interface configured with unicast RPF:

- Loose mode—All packets are automatically accepted. For this reason, we recommend that you not configure unicast RPF loose mode on interfaces that the default route uses.
- Strict mode—The packet is accepted when the source address of the packet matches any of the routes (either default or learned) that can be reachable through the interface. Note that routes can have multiple destinations associated with them; therefore, if

one of the destinations matches the incoming interface of the packet, the packet is accepted.

On all routers with MPCs and the MX80 router, unicast RPF behaves as follows if you configure a default route that uses an interface configured with unicast RPF:

- Loose mode—All packets except the packets whose source is learned from the default route are accepted. All packets whose source is learned from the default route are dropped at the Packet Forwarding Engine. The default route is treated as if the route does not exist.
- Strict mode—The packet is accepted when the source address of the packet matches any of the routes (either default or learned) that can be reachable through the interface. Note that routes can have multiple destinations associated with them; therefore, if one of the destinations matches the incoming interface of the packet, the packet is accepted.

On all routers, the packet is not accepted when either of the following is true:

- The source address of the packet does not match a prefix in the routing table.
- The interface does not expect to receive a packet with this source address prefix.

Unicast RPF Behavior Without a Default Route


If you do not configure a default route, or if the default route does not use an interface configured with unicast RPF, unicast RPF behaves as described in [“Configuring Unicast RPF Strict Mode” on page 247](#) and [“Configuring Unicast RPF Loose Mode” on page 249](#). To summarize, unicast RPF without a default route behaves as follows:

- Strict mode—The packet is not accepted when either of the following is true:
 - The packet has a source address that does not match a prefix in the routing table.
 - The interface does not expect to receive a packet with this source address prefix.
- Loose mode—The packet is not accepted when the packet has a source address that does not match a prefix in the routing table.

Unicast RPF with Routing Asymmetry

In general, we recommend that you not enable unicast RPF on interfaces that are internal to the network because internal interfaces are likely to have *routing asymmetry*. Routing asymmetry means that a packet’s outgoing and return paths are different. Routers in the core of the network are more likely to have asymmetric reverse paths than routers at the customer or provider edge. [Figure 12 on page 247](#) shows unicast RPF in an environment with routing asymmetry.

Figure 12: Unicast RPF with Routing Asymmetry

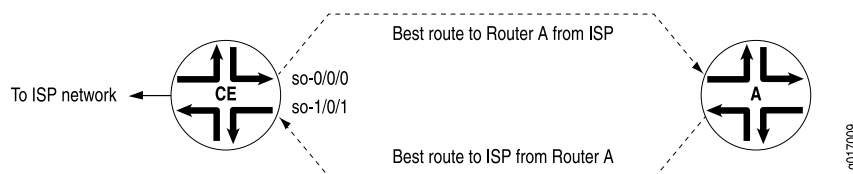

In Figure 12 on page 247, if you enable unicast RPF on interface `so-0/0/0`, traffic destined for Router A is not rejected. If you enable unicast RPF on interface `so-1/0/1`, traffic from Router A is rejected.

If you need to enable unicast RPF in an asymmetric routing environment, you can use fail filters to allow the router to accept incoming packets that are known to be arriving by specific paths. For an example of a fail filter that accepts packets with a specific source and destination address, see “Configuring Unicast RPF” on page 253.

Configuring Unicast RPF Strict Mode

In strict mode, unicast RPF checks whether the incoming packet has a source address that matches a prefix in the routing table, and whether the interface expects to receive a packet with this source address prefix.

If the incoming packet fails the unicast RPF check, the packet is not accepted on the interface. When a packet is not accepted on an interface, unicast RPF counts the packet and sends it to an optional fail filter. If the fail filter is not configured, the default action is to silently discard the packet.

The optional fail filter allows you to apply a filter to packets that fail the unicast RPF check. You can define the fail filter to perform any filter operation, including accepting, rejecting, logging, sampling, or policing.

When unicast RPF is enabled on an interface, Bootstrap Protocol (BOOTP) packets and Dynamic Host Configuration Protocol (DHCP) packets are not accepted on the interface. To allow the interface to accept BOOTP packets and DHCP packets, you must apply a fail filter that accepts all packets with a source address of `0.0.0.0` and a destination address of `255.255.255.255`. For a configuration example, see “Configuring Unicast RPF” on page 253.

For more information about unicast RPF, see the *Junos OS Routing Protocols Library*. For more information about defining fail filters, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

To configure unicast RPF, include the `rpf-check` statement:

```
rpf-check <fail-filter filter-name>;
```

You can include this statement at the following hierarchy levels:

- `[edit interfaces interface-name unit logical-unit-number family (inet | inet6)]`
- `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family (inet | inet6)]`

Using unicast RPF can have several consequences when implemented with traffic filters:

- RPF fail filters are evaluated after input filters and before output filters.
- If you configure a filter counter for packets dropped by an input filter, and you want to know the total number of packets dropped, you must also configure a filter counter for packets dropped by the RPF check.
- To count packets that fail the RPF check and are accepted by the RPF fail filter, you must configure a filter counter.
- If an input filter forwards packets anywhere other than the inet.0 or inet6.0 routing tables, the unicast RPF check is not performed.
- If an input filter forwards packets anywhere other than the routing instance the input interface is configured for, the unicast RPF check is not performed.

Configure unicast RPF strict mode, and apply a fail filter that allows the interface to accept BOOTP packets and DHCP packets. The filter accepts all packets with a source address of **0.0.0.0** and a destination address of **255.255.255.255**.

To configure unicast RPF in strict mode:

1. Configure the fail filter:

```
[edit firewall]
filter rpf-special-case-dhcp-bootp {
  term allow-dhcp-bootp {
    from {
      source-address {
        0.0.0.0/32;
      }
      address {
        255.255.255.255/32;
      }
    }
    then {
      count rpf-dhcp-bootp-traffic;
      accept;
    }
  }
  term default {
    then {
      log;
      reject;
    }
  }
}
```

2. Configure unicast RPF on interfaces:

```
[edit]
interfaces {
  so-0/0/0 {
```

```

unit 0 {
    family inet {
        rpf-check fail-filter rpf-special-case-dhcp-bootp;
    }
}

```

3. Commit the configuration.

```

[edit]
commit;

```

Configuring Unicast RPF Loose Mode

By default, unicast RPF uses strict mode. Unicast RPF loose mode is similar to unicast RPF strict mode and has the same configuration restrictions. The only check in loose mode is whether the packet has a source address with a corresponding prefix in the routing table; loose mode does not check whether the interface expects to receive a packet with a specific source address prefix. If a corresponding prefix is not found, unicast RPF loose mode does not accept the packet. As in strict mode, loose mode counts the failed packet and optionally forwards it to a fail filter, which either accepts, rejects, logs, samples, or polices the packet.

To configure unicast RPF loose mode, include the **mode**:

1. `mode loose;`

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family (inet | inet6) rpf-check <fail-filter *filter-name*>]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family (inet | inet6) rpf-check <fail-filter *filter-name*>]

2. For example:

In this example, no special configuration beyond device initialization is required.

Configure unicast RPF loose mode, and apply a fail filter that allows the interface to accept BOOTP packets and DHCP packets. The filter accepts all packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255.

To configure unicast RPF in loose mode:

- a. Configure the fail filter:

```

[edit firewall]
filter rpf-special-case-dhcp-bootp {
    term allow-dhcp-bootp {
        from {

```

```

source-address {
  0.0.0.0/32;
}
address {
  255.255.255.255/32;
}
}
then {
  count rpf-dhcp-bootp-traffic;
  accept;
}
}
term default {
  then {
    log;
    reject;
  }
}
}
}

```

- b. Configure unicast RPF on interfaces:

```

[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        rpf-check fail-filter rpf-special-case-dhcp-bootp;
        mode loose;
      }
    }
  }
}

```

- c. Commit the configuration.

```

[edit]
commit;

```

Configuring Unicast RPF Loose Mode with Ability to Discard Packets

Starting with Junos OS Release 12.1, unicast RPF loose mode has the ability to discard packets with the source address pointing to the discard interface. This feature is supported on MX Series routers and on T Series routers with Type 1 FPCs, Type 2 FPCs, and Type 3 FPCs. Using unicast RPF loose mode, along with Remote Triggered Black Hole (RTBH) filtering, provides an efficient way to discard packets coming from known attack sources. BGP policies in edge routers ensure that packets with untrusted source addresses have their next hop set to a discard route. When a packet arrives at the router with an untrusted source address, unicast RPF performs a route lookup of the source address. Because the source address route points to a discard next hop, the packet is dropped and a counter

is incremented. This feature is supported on both IPv4 (inet) and IPv6 (inet6) address families.

To configure unicast RPF loose mode with the ability to discard packets, include the **rpf-loose-mode-discard family inet** statement at the **[edit forwarding-options]** hierarchy level:

```
rpf-loose-mode-discard {
  family {
    inet;
  }
}
```

In this example, no special configuration beyond device initialization is required.

Configure unicast RPF loose mode, and apply a fail filter that allows the interface to accept BOOTP packets and DHCP packets. The filter accepts all packets with a source address of **0.0.0.0** and a destination address of **255.255.255.255**.

To configure unicast RPF loose mode with the ability to discard packets:

1. Configure the fail filter:

```
[edit firewall]
filter rpf-special-case-dhcp-bootp {
  term allow-dhcp-bootp {
    from {
      source-address {
        0.0.0.0/32;
      }
      address {
        255.255.255.255/32;
      }
    }
    then {
      count rpf-dhcp-bootp-traffic;
      accept;
    }
  }
  term default {
    then {
      log;
      reject;
    }
  }
}
```

2. Configure unicast RPF on interfaces:

```
[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
```

```

        family inet {
            rpf-check fail-filter rpf-special-case-dhcp-bootp;
            mode loose;
        }
    }
}

```

3. Configure the ability to discard packets.

```

[edit]
forwarding-options{
    rpf-loose-mode-discard {
        family {
            inet;
        }
    }
}

```

4. Commit the configuration.

```

[edit]
commit;

```

Configuring Unicast RPF on a VPN

You can configure unicast RPF on a VPN interface by enabling unicast RPF on the interface and including the **interface** statement at the **[edit routing-instances routing-instance-name]** hierarchy level.

You can configure unicast RPF only on the interfaces you specify in the routing instance. This means the following:

- For Layer 3 VPNs, unicast RPF is supported on the CE router interface.
- Unicast RPF is not supported on core-facing interfaces.
- For virtual-router routing instances, unicast RPF is supported on all interfaces you specify in the routing instance.
- If an input filter forwards packets anywhere other than the routing instance the input interface is configured for, the unicast RPF check is not performed.

For more information about VPNs and virtual-router routing instances, see the *Junos OS VPNs Library for Routing Devices*. For more information about FBF, see the *Junos OS Routing Protocols Library*.

Configure unicast RPF on a Layer 3 VPN interface:

```

[edit interfaces]
so-0/0/0 {

```



```

unit 0 {
    family inet {
        rpf-check;
    }
}
[edit routing-instance]
VPN-A {
    interface so-0/0/0.0;
}

```

Configuring Unicast RPF

Configure unicast RPF strict mode, and apply a fail filter that allows the interface to accept BOOTP packets and DHCP packets. The filter accepts all packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255.

```

[edit firewall]
filter rpf-special-case-dhcp-bootp {
    term allow-dhcp-bootp {
        from {
            source-address {
                0.0.0.0/32;
            }
            address {
                255.255.255.255/32;
            }
        }
        then {
            count rpf-dhcp-bootp-traffic;
            accept;
        }
    }
    term default {
        then {
            log;
            reject;
        }
    }
}
[edit]
interfaces {
    so-0/0/0 {
        unit 0 {
            family inet {
                rpf-check fail-filter rpf-special-case-dhcp-bootp;
            }
        }
    }
}

```

- See Also**
- *unicast-reverse-path*
 - [Example: Configuring Unicast Reverse-Path-Forwarding Check on page 256](#)

Verifying Unicast RPF Status

Purpose Verify that unicast reverse-path forwarding (RPF) is enabled and is working on the interface.

Action Use one of the **show interfaces *interface-name*** commands with either the **extensive** or **detail** options to verify that unicast RPF is enabled and working on the switch. The example below displays output from the **show interfaces ge- extensive** command.

```
user@switch> show interfaces ge1/0/10 extensive
```

```
Physical interface: ge-1/0/10, Enabled, Physical link is Down
Interface index: 139, SNMP ifIndex: 58, Generation: 140
Link-level type: Ethernet, MTU: 1514, Speed: Auto, MAC-REWRITE Error: None,
Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled,
Auto-negotiation: Enabled, Remote fault: Online
Device flags      : Present Running
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags       : None
CoS queues       : 8 supported, 8 maximum usable queues
Hold-times       : Up 0 ms, Down 0 ms
Current address: 00:19:e2:50:95:ab, Hardware address: 00:19:e2:50:95:ab
Last flapped     : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes   : 0          0 bps
  Output bytes  : 0          0 bps
  Input packets : 0          0 pps
  Output packets: 0          0 pps
IPv6 transit statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets  Dropped packets

  0 best-effort      0          0          0
  1 assured-forw     0          0          0
  5 expedited-fo     0          0          0
  7 network-cont     0          0          0

Active alarms  : LINK
Active defects : LINK
MAC statistics:      Receive      Transmit
  Total octets      0          0
```

```

Total packets                0                0
Unicast packets              0                0
Broadcast packets            0                0
Multicast packets            0                0
CRC/Align errors             0                0
FIFO errors                  0                0
MAC control frames           0                0
MAC pause frames             0                0
Oversized frames             0
Jabber frames                0
Fragment frames              0
VLAN tagged frames           0
Code violations               0
Filter statistics:
  Input packet count          0
  Input packet rejects        0
  Input DA rejects            0
  Input SA rejects            0
  Output packet count         0                0
  Output packet pad count     0                0
  Output packet error count   0                0
  CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Incomplete
Packet Forwarding Engine configuration:
  Destination slot: 1

Logical interface ge-1/0/10.0 (Index 69) (SNMP ifIndex 59) (Generation 135)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:                0
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:                0
Local statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:                0
Transit statistics:
  Input bytes :                0                0 bps
  Output bytes :                0                0 bps
  Input packets:                0                0 pps
  Output packets:                0                0 pps
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:                0
  Protocol inet, Generation: 144, Route table: 0
Flags: URPF
Addresses, Flags: Is-Preferred Is-Primary

```

Meaning The `show interfaces ge-1/0/10 extensive` command (and the `show interfaces ge-1/0/10 detail` command) displays in-depth information about the interface. The **Flags:** output field near the bottom of the display reports the unicast RPF status. If unicast RPF has not been enabled, the **uRPF** flag is not displayed.

On EX3200 and EX4200 switches, unicast RPF is implicitly enabled on *all* switch interfaces, including aggregated Ethernet interfaces (also referred to as link aggregation groups or LAGs) and routed VLAN interfaces (RVIs) when you enable unicast RPF on a single interface. However, the unicast RPF status is shown as enabled only on interfaces for which you have explicitly configured unicast RPF. Thus, the **uRPF** flag is not displayed on interfaces for which you have not explicitly configured unicast RPF even though unicast RPF is implicitly enabled on all interfaces on EX3200 and EX4200 switches.

- Related Documentation**
- [show interfaces xe](#)
 - [Example: Configuring Unicast RPF on an EX Series Switch](#)
 - [Configuring Unicast RPF on ACX Series Routers](#)
 - [Configuring Unicast RPF \(CLI Procedure\)](#)
 - [Disabling Unicast RPF \(CLI Procedure\)](#)
 - [Troubleshooting Unicast RPF](#)

Example: Configuring Unicast Reverse-Path-Forwarding Check

- [Understanding How Unicast Reverse Path Forwarding Prevents Spoofed IP Packet Forwarding on page 256](#)
- [Example: Configuring Unicast Reverse-Path-Forwarding Checking to Prevent DoS and DDoS Attacks on page 257](#)

Understanding How Unicast Reverse Path Forwarding Prevents Spoofed IP Packet Forwarding

IP spoofing can occur during a denial-of-service (DoS) attack. IP spoofing allows an intruder to pass IP packets to a destination as genuine traffic, when in fact the packets are not actually meant for the destination. This type of spoofing is harmful because it consumes the destination's resources.

A unicast reverse-path-forwarding (RPF) check is a tool to reduce forwarding of IP packets that might be spoofing an address. A unicast RPF check performs a forwarding table lookup on an IP packet's source address, and checks the incoming interface. The router or switch determines whether the packet is arriving from a path that the sender would use to reach the destination. If the packet is from a valid path, the router or switch forwards the packet to the destination address. If it is not from a valid path, the router or switch discards the packet. Unicast RPF is supported for the IPv4 and IPv6 protocol families, as well as for the virtual private network (VPN) address family.



NOTE: Reverse path forwarding is not supported on the interfaces you configure as tunnel sources. This affects only the transit packets exiting the tunnel.

- See Also**
- [Example: Configuring Unicast Reverse-Path-Forwarding Checking to Prevent DoS and DDoS Attacks on page 257](#)

Example: Configuring Unicast Reverse-Path-Forwarding Checking to Prevent DoS and DDoS Attacks

Unicast reverse path forwarding (RPF) helps protect against DoS and DDoS attacks by verifying the unicast source address of each packet that arrives on an ingress interface where unicast RPF is enabled.

This example shows how to help defend ingress interfaces against denial-of-service (DoS) and distributed denial-of-service (DDoS) attacks by configuring unicast RPF to filter incoming traffic.

- [Requirements on page 257](#)
- [Overview on page 257](#)
- [Configuration on page 258](#)
- [Verification on page 264](#)

Requirements

In this example, no special configuration beyond device initialization is required.

Overview

Large amounts of unauthorized traffic such as attempts to flood a network with fake (bogus) service requests in a DoS attack can consume network resources and deny service to legitimate users. One way to help prevent DoS and DDoS attacks is to verify that incoming traffic originates from legitimate network sources.

Unicast RPF helps ensure that a traffic source is legitimate (authorized) by comparing the source address of each packet that arrives on an interface to the forwarding table entry for its source address. If the device uses the same interface that the packet arrived on to reply to the packet's source, this verifies that the packet originated from an authorized source, and the device forwards the packet. If the device does not use the same interface that the packet arrived on to reply to the packet's source, the packet might have originated from an unauthorized source, and the device discards the packet.


In this example, Device B has unicast RPF configured. Device A is using OSPF to advertise a prefix for the link that connects to Device D. OSPF is enabled on the links between Device B and Device C and the links between Device A and Device C, but not on the links between Device A and Device B. Therefore, Device B learns about the route to Device D through Device C.

If ingress filtering is used in an environment where DHCP or BOOTP is used, it should be ensured that the packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255 are allowed to reach the relay agent in routers when appropriate.

This example also includes a fail filter. When a packet fails the unicast RPF check, the fail filter is evaluated to determine if the packet should be accepted anyway. The fail filter in this example allows Device B's interfaces to accept Dynamic Host Configuration Protocol (DHCP) packets. The filter accepts all packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255.

Figure 13 on page 258 shows the sample network.

Figure 13: Unicast RPF Sample Topology

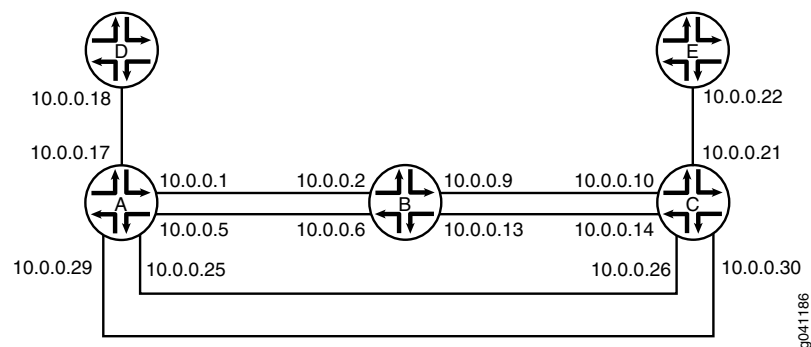

Configuration

CLI Quick Configuration To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

Device A

```
set interfaces fe-1/2/0 unit 1 family inet address 10.0.0.1/30
set interfaces fe-0/0/2 unit 5 family inet address 10.0.0.5/30
set interfaces fe-0/0/1 unit 17 family inet address 10.0.0.17/30
set interfaces fe-0/1/1 unit 25 family inet address 10.0.0.25/30
set interfaces fe-1/1/1 unit 29 family inet address 10.0.0.29/30
set protocols ospf export send-direct
set protocols ospf area 0.0.0.0 interface fe-0/1/1.25
set protocols ospf area 0.0.0.0 interface fe-1/1/1.29
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct from route-filter 10.0.0.16/30 exact
set policy-options policy-statement send-direct then accept
```

Device B

```
set interfaces fe-1/2/0 unit 2 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-1/2/0 unit 2 family inet address 10.0.0.2/30
set interfaces fe-1/1/1 unit 6 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-1/1/1 unit 6 family inet address 10.0.0.6/30
set interfaces fe-0/1/1 unit 9 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-0/1/1 unit 9 family inet address 10.0.0.9/30
```

```

set interfaces fe-0/1/0 unit 13 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-0/1/0 unit 13 family inet address 10.0.0.13/30
set protocols ospf area 0.0.0.0 interface fe-0/1/1.9
set protocols ospf area 0.0.0.0 interface fe-0/1/0.13
set routing-options forwarding-table unicast-reverse-path active-paths
set firewall filter rpf-special-case-dhcp term allow-dhcp from source-address 0.0.0.0/32
set firewall filter rpf-special-case-dhcp term allow-dhcp from destination-address
  255.255.255.255/32
set firewall filter rpf-special-case-dhcp term allow-dhcp then count rpf-dhcp-traffic
set firewall filter rpf-special-case-dhcp term allow-dhcp then accept
set firewall filter rpf-special-case-dhcp term default then log
set firewall filter rpf-special-case-dhcp term default then reject

```

Device C

```

set interfaces fe-1/2/0 unit 10 family inet address 10.0.0.10/30
set interfaces fe-0/0/2 unit 14 family inet address 10.0.0.14/30
set interfaces fe-1/0/2 unit 21 family inet address 10.0.0.21/30
set interfaces fe-1/2/2 unit 26 family inet address 10.0.0.26/30
set interfaces fe-1/2/1 unit 30 family inet address 10.0.0.30/30
set protocols ospf area 0.0.0.0 interface fe-1/2/0.10
set protocols ospf area 0.0.0.0 interface fe-0/0/2.14
set protocols ospf area 0.0.0.0 interface fe-1/2/2.26
set protocols ospf area 0.0.0.0 interface fe-1/2/1.30

```

Device D

```

set interfaces fe-1/2/0 unit 18 family inet address 10.0.0.18/30

```

Device E

```

set interfaces fe-1/2/0 unit 22 family inet address 10.0.0.22/30

```

Configuring Device A**Step-by-Step
Procedure**

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device A:

1. Configure the interfaces.

```

[edit interfaces]
user@A# set fe-1/2/0 unit 1 family inet address 10.0.0.1/30
user@A# set fe-0/0/2 unit 5 family inet address 10.0.0.5/30
user@A# set fe-0/0/1 unit 17 family inet address 10.0.0.17/30
user@A# set fe-0/1/1 unit 25 family inet address 10.0.0.25/30
user@A# set fe-1/1/1 unit 29 family inet address 10.0.0.29/30

```

2. Configure OSPF.

```

[edit protocols ospf]
user@A# set export send-direct

```

```
user@A# set area 0.0.0.0 interface fe-0/1/1.25
user@A# set area 0.0.0.0 interface fe-1/1/1.29
```

3. Configure the routing policy.

```
[edit policy-options policy-statement send-direct]
user@A# set from protocol direct
user@A# set from route-filter 10.0.0.16/30 exact
user@A# set then accept
```

4. If you are done configuring Device A, commit the configuration.

```
[edit]
user@A# commit
```

Configuring Device B

Step-by-Step Procedure The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device B:

1. Configure the interfaces.

```
[edit interfaces]
user@B# set fe-1/2/0 unit 2 family inet address 10.0.0.2/30
user@B# set fe-1/1/1 unit 6 family inet address 10.0.0.6/30
user@B# set fe-0/1/1 unit 9 family inet address 10.0.0.9/30
user@B# set fe-0/1/0 unit 13 family inet address 10.0.0.13/30
```

2. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@B# set interface fe-0/1/1.9
user@B# set interface fe-0/1/0.13
```

3. Configure unicast RPF, and apply the optional fail filter.

```
[edit interfaces]
user@B# set fe-1/2/0 unit 2 family inet rpf-check fail-filter rpf-special-case-dhcp
user@B# set fe-1/1/1 unit 6 family inet rpf-check fail-filter rpf-special-case-dhcp
user@B# set fe-0/1/1 unit 9 family inet rpf-check fail-filter rpf-special-case-dhcp
user@B# set fe-0/1/0 unit 13 family inet rpf-check fail-filter rpf-special-case-dhcp
```

4. (Optional) Configure the fail filter that gets evaluated if a packet fails the RPF check.


```
[edit firewall filter rpf-special-case-dhcp]
user@B# set term allow-dhcp from source-address 0.0.0.0/32
user@B# set term allow-dhcp from destination-address 255.255.255.255/32
user@B# set term allow-dhcp then count rpf-dhcp-traffic
user@B# set term allow-dhcp then accept
user@B# set term default then log
user@B# set term default then reject
```

5. (Optional) Configure only active paths to be considered in the RPF check.

This is the default behavior.

```
[edit routing-options forwarding-table]
user@B# set unicast-reverse-path active-paths
```

6. If you are done configuring Device B, commit the configuration.

```
[edit]
user@B# commit
```

Results

Confirm your configuration by issuing the **show firewall**, **show interfaces**, **show protocols**, **show routing-options**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

Device A

```
user@A# show interfaces
fe-1/2/0 {
  unit 1 {
    family inet {
      address 10.0.0.1/30;
    }
  }
}
fe-0/0/2 {
  unit 5 {
    family inet {
      address 10.0.0.5/30;
    }
  }
}
fe-0/0/1 {
  unit 17 {
    family inet {
      address 10.0.0.17/30;
    }
  }
}
fe-0/1/1 {
```

```
unit 25 {  
    family inet {  
        address 10.0.0.25/30;  
    }  
}  
fe-1/1/1 {  
    unit 29 {  
        family inet {  
            address 10.0.0.29/30;  
        }  
    }  
}
```

```
user@A# show protocols  
ospf {  
    export send-direct;  
    area 0.0.0.0 {  
        interface fe-0/1/1.25;  
        interface fe-1/1/1.29;  
    }  
}
```

```
user@A# show policy-options  
policy-statement send-direct {  
    from {  
        protocol direct;  
        route-filter 10.0.0.16/30 exact;  
    }  
    then accept;  
}
```

Device B

```
user@B# show firewall  
filter rpf-special-case-dhcp {  
    term allow-dhcp {  
        from {  
            source-address {  
                0.0.0.0/32;  
            }  
            destination-address {  
                255.255.255.255/32;  
            }  
        }  
        then {  
            count rpf-dhcp-traffic;  
            accept;  
        }  
    }  
    term default {  
        then {  
            log;  
            reject;  
        }  
    }  
}
```

```

    }
  }
}
user@B# show interfaces
fe-1/2/0 {
  unit 2 {
    family inet {
      rpf-check fail-filter rpf-special-case-dhcp;
      address 10.0.0.2/30;
    }
  }
}
fe-1/1/1 {
  unit 6 {
    family inet {
      rpf-check fail-filter rpf-special-case-dhcp;
      address 10.0.0.6/30;
    }
  }
}
fe-0/1/1 {
  unit 9 {
    family inet {
      rpf-check fail-filter rpf-special-case-dhcp;
      address 10.0.0.9/30;
    }
  }
}
fe-0/1/0 {
  unit 13 {
    family inet {
      rpf-check fail-filter rpf-special-case-dhcp;
      address 10.0.0.13/30;
    }
  }
}
}

```

```

user@B# show protocols
ospf {
  area 0.0.0.0 {
    interface fe-0/1/1.9;
    interface fe-0/1/0.13;
  }
}

```

```

user@B# show routing-options
forwarding-table {
  unicast-reverse-path active-paths;
}

```

Enter the configurations on Device C, Device D, and Device E, as shown in [“CLI Quick Configuration” on page 258](#).

Verification

Confirm that the configuration is working properly.

- [Confirm That Unicast RPF Is Enabled on page 264](#)
- [Confirm That the Source Addresses Are Blocked on page 264](#)
- [Confirm That the Source Addresses Are Unblocked on page 265](#)

Confirm That Unicast RPF Is Enabled

Purpose Make sure that the interfaces on Device B have unicast RPF enabled.

Action user@B> show interfaces fe-0/1/0.13 extensive

```
Logical interface fe-0/1/0.13 (Index 73) (SNMP ifIndex 553) (Generation 208)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Traffic statistics:
  Input bytes :          999390
  Output bytes :         1230122
  Input packets:          12563
  Output packets:         12613
Local statistics:
  Input bytes :          998994
  Output bytes :         1230122
  Input packets:          12563
  Output packets:         12613
Transit statistics:
  Input bytes :           396           0 bps
  Output bytes :           0           0 bps
  Input packets:           0           0 pps
  Output packets:          0           0 pps
Protocol inet, MTU: 1500, Generation: 289, Route table: 22
  Flags: Sendbcst-pkt-to-re, uRPF
  RPF Failures: Packets: 0, Bytes: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.0.12/30, Local: 10.0.0.13, Broadcast: 10.0.0.15,
  Generation: 241
```

Meaning The **uRPF** flag confirms that unicast RPF is enabled on this interface.

Confirm That the Source Addresses Are Blocked

Purpose Use the **ping** command to make sure that Device B blocks traffic from unexpected source addresses.

Action From Device A, ping Device B's interfaces, using 10.0.0.17 as the source address.

```
user@A> ping 10.0.0.6 source 10.0.0.17
PING 10.0.0.6 (10.0.0.6): 56 data bytes
^C
--- 10.0.0.6 ping statistics ---
3 packets transmitted, 0 packets received, 100% packet loss
```

Meaning As expected, the ping operation fails.

Confirm That the Source Addresses Are Unblocked

Purpose Use the **ping** command to make sure that Device B does not block traffic when the RPF check is deactivated.

Action

1. Deactivate the RPF check on one of the interfaces.
2. Rerun the ping operation.

```
user@B> deactivate interfaces fe-1/1/1.6 family inet rpf-check

user@A> ping 10.0.0.6 source 10.0.0.17
PING 10.0.0.2 (10.0.0.2): 56 data bytes
64 bytes from 10.0.0.2: icmp_seq=0 ttl=63 time=1.316 ms
64 bytes from 10.0.0.2: icmp_seq=1 ttl=63 time=1.263 ms
^C
--- 10.0.0.2 ping statistics ---
2 packets transmitted, 2 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.263/1.289/1.316/0.027 ms
```

Meaning As expected, the ping operation succeeds.

See Also

- [Understanding How Unicast Reverse Path Forwarding Prevents Spoofed IP Packet Forwarding on page 256](#)

Related Documentation

- [Example: Enabling Indirect Next Hops on the Packet Forwarding Engine](#)

Enabling Source Class and Destination Class Usage

- [Source Class and Destination Class Usage on page 266](#)
- [Enabling Source Class and Destination Class Usage on page 269](#)

Source Class and Destination Class Usage

For interfaces that carry IPv4, IPv6, MPLS, or peer AS billing traffic, you can maintain packet counts based on the entry and exit points for traffic passing through your network. Entry and exit points are identified by source and destination prefixes grouped into disjoint sets defined as *source classes* and *destination classes*. You can define classes based on a variety of parameters, such as routing neighbors, autonomous systems, and route filters.

Source class usage (SCU) counts packets sent to customers by performing lookup on the IP source address. SCU makes it possible to track traffic originating from specific prefixes on the provider core and destined for specific prefixes on the customer edge. You must enable SCU accounting on both the inbound and outbound physical interfaces, and the route for the source of the packet must be in located in the forwarding table.



NOTE: SCU and DCU accounting do not work with directly connected interface routes. Source class usage does not count packets coming from sources with direct routes in the forwarding table because of software architecture limitations.

Destination class usage (DCU) counts packets from customers by performing lookup of the IP destination address. DCU makes it possible to track traffic originating from the customer edge and destined for specific prefixes on the provider core router.




NOTE: We recommend that you stop the network traffic on an interface before you modify the DCU or SCU configuration for that interface. Modifying the DCU or SCU configuration without stopping the traffic might corrupt the DCU or SCU statistics. Before you restart the traffic after modifying the configuration, enter the `clear interfaces statistics` command.

Figure 14 on page 267 illustrates an Internet service provider (ISP) network. In this topology, you can use DCU to count packets customers send to specific prefixes. For example, you can have three counters, one per customer, that count the packets destined for prefix 210.210/16 and 220.220/16.

You can use SCU to count packets the provider sends from specific prefixes. For example, you can count the packets sent from prefix 210.210/16 and 215.215/16 and transmitted on a specific output interface.

Figure 14: Prefix Accounting with Source and Destination Classes

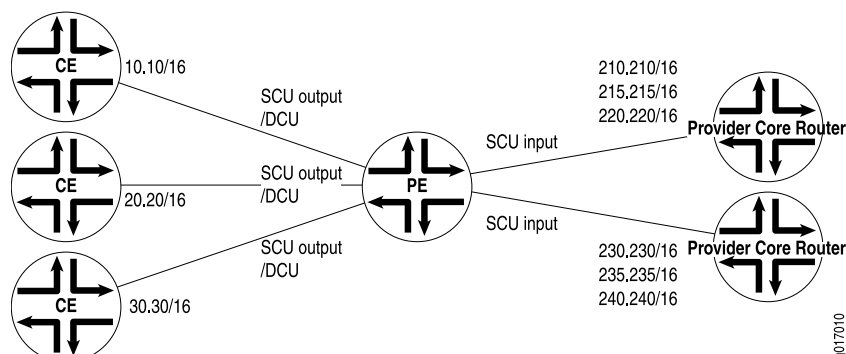

You can configure up to 126 source classes and 126 destination classes. For each interface on which you enable destination class usage and source class usage, the Junos OS maintains an interface-specific counter for each corresponding class up to the 126 class limit.



NOTE: For transit packets exiting the router through the tunnel, forwarding path features, such as RPF, forwarding table filtering, source class usage, and destination class usage are not supported on the interfaces you configure as the output interface for tunnel traffic. For firewall filtering, you must allow the output tunnel packets through the firewall filter applied to input traffic on the interface that is the next-hop interface towards the tunnel destination.



NOTE:

Performing DCU accounting when an output service is enabled produces inconsistent behavior in the following configuration:

- Both SCU input and DCU are configured on the packet input interface.
- SCU output is configured on the packet output interface.
- Interface services is enabled on the output interface.

For an incoming packet with source and destination prefixes matching the SCU and DCU classes respectively configured in the router, both SCU and DCU counters will be incremented. This behavior is not harmful or negative. However, it is inconsistent with non-serviced packets, in that only the SCU count will be incremented (because the SCU class ID will override the DCU class ID in this case).

To enable packet counting on an interface, include the **accounting** statement:

```
accounting {
  destination-class-usage;
  source-class-usage {
    direction;
```

```
}  
}
```

direction can be one of the following:

- **input**—Configure at least one expected ingress point.
- **output**—Configure at least one expected egress point.
- **input output**—On a single interface, configure at least one expected ingress point and one expected egress point.

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family (inet | inet6 | mpls)]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family (inet | inet6 | mpls)]

For SCU to work, you must configure at least one input interface and at least one output interface.

The ability to count a single packet for both SCU and DCU accounting depends on the underlying physical interface.

- For traffic over MPC/MIC interfaces, a single incoming packet is counted for both SCU and DCU accounting if both SCU and DCU are configured. To ensure the outgoing packet is counted, include the **source-class-usage output** statements in the configuration of the outgoing interface.
- For traffic over DPC interfaces, an incoming packet is counted only once, and SCU takes priority over DCU. This means that when a packet arrives on an interface on which you include the **source-class-usage input** and **destination-class-usage** statements in the configuration, and when the source and destination both match accounting prefixes, the Junos OS associates the packet with the source class only.

For traffic over MPC interfaces, SCU and DCU accounting is performed after output filters are evaluated. If a packet matches a firewall filter match condition, the packet is included in SCU or DCU accounting except in the case where the action of the matched term is **discard**.

On T Series, M120, and M320 routers, the source class and destination classes are not carried across the router fabric. The implications of this are as follows:

- On T Series, M120, and M320 routers, SCU and DCU accounting is performed before the packet enters the fabric.
- On M7i, M10i, M120, and M320 routers, on MX Series routers with non-MPC, and on T Series routers, SCU and DCU accounting is performed before output filters are evaluated. Consequently, if a packet matches a firewall filter match condition, the packet is included in SCU or DCU accounting; the packet is counted for any term action (including the **discard** action).

- On M120, M320, and T Series routers, the **destination-class** and **source-class** statements are supported at the `[edit firewall family family-name filter filter-name term term-name from]` hierarchy level only for the filter applied to the forwarding table. On M7i, M10i, and MX Series routers, these statements are supported.

Once you enable accounting on an interface, the Junos OS maintains packet counters for that interface, with separate counters for **inet**, **inet6**, and **mpls** protocol families. You must then configure the source class and destination class attributes in policy action statements, which must be included in forwarding-table export policies.



NOTE: When configuring policy action statements, you can configure only one source class for each matching route. In other words, more than one source class cannot be applied to the same route.

In Junos OS Release 9.3 and later, you can configure SCU accounting for Layer 3 VPNs configured with the **vrf-table-label** statement. Include the **source-class-usage** statement at the `[edit routing-instances routing-instance-name vrf-table-label]` hierarchy level. The **source-class-usage** statement at this hierarchy level is supported only for the virtual routing and forwarding (VRF) instance type.




NOTE: DCU counters cannot be enabled on the label-switched interface (LSI) that is created dynamically when the **vrf-table-label** statement is configured within a VRF. For more information, see the *Junos OS VPNs Library for Routing Devices*.

For a complete discussion about source and destination class accounting profiles, see the *Network Management and Monitoring Guide*. For more information about MPLS, see the *MPLS Applications Feature Guide*.

Enabling Source Class and Destination Class Usage

Figure 15: Prefix Accounting with Source and Destination Classes

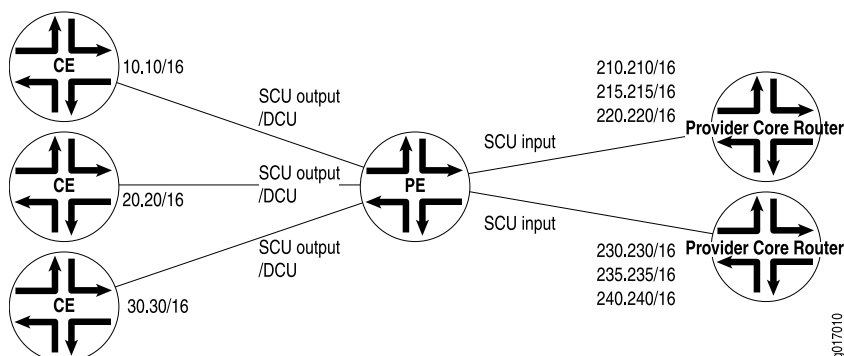

Configure DCU and SCU output on one interface:

```
[edit]
```

```

interfaces {
  so-6/1/0 {
    unit 0 {
      family inet {
        accounting {
          destination-class-usage;
          source-class-usage {
            output;
          }
        }
      }
    }
  }
}

```

1. Source routers A and B use loopback addresses as the prefixes to be monitored. Most of the configuration tasks and actual monitoring occur on transit Router SCU.

The loopback address on Router A contains the origin of the prefix that is to be assigned to source class A on Router SCU. However, no SCU processing happens on this router. Therefore, configure Router A for basic OSPF routing and include your loopback interface and interface **so-0/0/2** in the OSPF process.

2.


```

[edit]
interfaces {
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.255.50.2/24;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.192.10/32;
      }
    }
  }
}
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/2.0;
      interface lo0.0;
    }
  }
}

```

3. Last, apply the policy to the forwarding table.

Router SCU handles the bulk of the activity in this example. On Router SCU, enable source class usage on the inbound and outbound interfaces at the **[edit interfaces interface-name unit unit-number family inet accounting]** hierarchy level. Make sure you specify the expected traffic: input, output, or, in this case, both.

Next, configure a route filter policy statement that matches the prefixes of the loopback addresses from routers A and B. Include statements in the policy that classify packets from Router A in one group named **scu-class-a** and packets from Router B in a second class named **scu-class-b**. Notice the efficient use of a single policy containing multiple terms.

```
[edit]
interfaces {
  so-0/0/1 {
    unit 0 {
      family inet {
        accounting {
          source-class-usage {
            input;
            output;
          }
        }
        address 10.255.50.1/24;
      }
    }
  }
  so-0/0/3 {
    unit 0 {
      family inet {
        accounting {
          source-class-usage {
            input;
            output;
          }
        }
        address 10.255.10.3/24;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.6.111/32;
      }
    }
  }
}
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/1.0;
      interface so-0/0/3.0;
    }
  }
}
```

```

    }
  }
  routing-options {
    forwarding-table {
      export scu-policy;
    }
  }
  policy-options {
    policy-statement scu-policy {
      term 0 {
        from {
          route-filter 10.255.192.0/24 orlonger;
        }
        then source-class scu-class-a;
      }
      term 1 {
        from {
          route-filter 10.255.165.0/24 orlonger;
        }
        then source-class scu-class-b;
      }
    }
  }
}

```

4. Just as Router A provides a source prefix, Router B's loopback address matches the prefix assigned to **scu-class-b** on Router SCU. Again, no SCU processing happens on this router, so configure Router B for basic OSPF routing and include your loopback interface and interface **so-0/0/4** in the OSPF process.

```

interfaces {
  so-0/0/4 {
    unit 0 {
      family inet {
        address 10.255.10.4/24;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.165.226/32;
      }
    }
  }
}
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/4.0;
      interface lo0.0;
    }
  }
}

```

5. You can use SCU and DCU to count packets on Layer 3 VPNs. To enable packet counting for Layer 3 VPN implementations at the egress point of the MPLS tunnel, you must configure a virtual loopback tunnel interface (**vt**) on the PE router, map the virtual routing and forwarding (VRF) instance type to the virtual loopback tunnel interface, and send the traffic received from the VPN out the source class output interface, as shown in the following example:

Configure a virtual loopback tunnel interface on a provider edge router equipped with a tunnel PIC:

```
[edit interfaces]
vt-0/3/0 {
  unit 0 {
    family inet {
      accounting {
        source-class-usage {
          input;
        }
      }
    }
  }
}
```

6. Map the VRF instance type to the virtual loopback tunnel interface.

In Junos OS Release 9.3 and later, you can configure SCU accounting for Layer 3 VPNs configured with the **vrf-table-label** statement. Include the **source-class-usage** statement at the **[edit routing-instances routing-instance-name vrf-table-label]** hierarchy level. The **source-class-usage** statement at this hierarchy level is supported only for the virtual routing and forwarding (VRF) instance type. DCU is not supported when the **vrf-table-label** statement is configured. For more information, see the *Junos OS VPNs Library for Routing Devices*.

```
[edit routing-instances]
VPN-A {
  instance-type vrf;
  interface at-2/1/1.0;
  interface vt-0/3/0.0;
  route-distinguisher 10.255.14.225:100;
  vrf-import import-policy-A;
  vrf-export export-policy-A;
  protocols {
    bgp {
      group to-r4 {
        local-address 10.27.253.1;
        peer-as 400;
        neighbor 10.27.253.2;
      }
    }
  }
}
```

7. Send traffic received from the VPN out the source class output interface:

```
[edit interfaces]
at-2/1/0 {
  unit 0 {
    family inet {
      accounting {
        source-class-usage {
          output;
        }
      }
    }
  }
}
```

For more information about VPNs, see the *Junos OS VPNs Library for Routing Devices*.
For more information about virtual loopback tunnel interfaces, see the *Junos OS Services Interfaces Library for Routing Devices*.

- See Also
- [accounting on page 423](#)
 - *destination-classes*
 - [family on page 627](#)
 - [forward-and-send-to-re on page 642](#)
 - *source-classes*
 - [targeted-broadcast on page 1061](#)
 - [unit on page 1112](#)

Understanding Targeted Broadcast

Targeted broadcast is a process of flooding a target subnet with Layer 3 broadcast IP packets originating from a different subnet. The intent of targeted broadcast is to flood the target subnet with the broadcast packets on a LAN interface without broadcasting to the entire network. Targeted broadcast is configured with various options on the egress interface of the router or switch and the IP packets are broadcast only on the LAN (egress) interface. Targeted broadcast helps you implement remote administration tasks such as backups and wake-on LAN (WOL) on a LAN interface, and supports virtual routing and forwarding (VRF) instances.

Regular Layer 3 broadcast IP packets originating from a subnet are broadcast within the same subnet. When these IP packets reach a different subnet, they are forwarded to the Routing Engine (to be forwarded to other applications). Because of this, remote administration tasks such as backups cannot be performed on a particular subnet through another subnet. As a workaround you can enable targeted broadcast, to forward broadcast packets that originate from a different subnet.

Layer 3 broadcast IP packets have a destination IP address that is a valid broadcast address for the target subnet. These IP packets traverse the network in the same way

as unicast IP packets until they reach the destination subnet. In the destination subnet, if the receiving router has targeted broadcast enabled on the egress interface, the IP packets are forwarded to an egress interface and the Routing Engine or to an egress interface only. The IP packets are then translated into broadcast IP packets which flood the target subnet only through the LAN interface (if there is no LAN interface, the packets are discarded), and all hosts on the target subnet receive the IP packets. If targeted broadcast is not enabled on the receiving router, the IP packets are treated as regular Layer 3 broadcast IP packets and are forwarded to the Routing Engine. If targeted broadcast is enabled without any options, the IP packets are forwarded to the Routing Engine.

Targeted broadcast can be configured to forward the IP packets only to an egress interface, which is helpful when the router is flooded with packets to process, or to both an egress interface and the Routing Engine.



NOTE: Targeted broadcast does not work when the targeted broadcast option `forward-and-send-to-re` and the traffic sampling option `sampling` are configured on the same egress interface of an M320 router, a T640 router, or an MX960 router. To overcome this scenario, you must either disable one of these options or enable the sampling option with the targeted broadcast option `forward-only` on the egress interface. For information about traffic sampling, see *Configuring Traffic Sampling*.



NOTE: Any firewall filter that is configured on the Routing Engine loopback interface (lo0) cannot be applied to IP packets that are forwarded to the Routing Engine as a result of a targeted broadcast. This is because broadcast packets are forwarded as flood next hop and not as local next hop traffic, and you can only apply a firewall filter to local next hop routes for traffic directed towards the Routing Engine.

Related Documentation • [targeted-broadcast on page 1061](#)

Configuring Targeted Broadcast

The following sections explain how to configure targeted broadcast on an egress interface and its options:

- [Configuring Targeted Broadcast and Its Options on page 276](#)
- [Display Targeted Broadcast Configuration Options on page 277](#)

Configuring Targeted Broadcast and Its Options

You can configure targeted broadcast on an egress interface with different options. You can either allow the IP packets destined for a Layer 3 broadcast address to be forwarded on the egress interface and to send a copy of the IP packets to the Routing Engine or you can allow the IP packets to be forwarded on the egress interface only. Note that the packets are broadcast only if the egress interface is a LAN interface.

To configure targeted broadcast and its options:

1. Configure the physical interface.

```
[edit]
user@host# set interfaces interface-name
```

2. Configure the logical unit number at the `[edit interfaces interface-name` hierarchy level.

```
[edit interfaces interface-name]
user@host# set unit logical-unit-number
```

3. Configure the protocol family as `inet` at the `[edit interfaces interface-name unit interface-unit-number` hierarchy level.

```
[edit interfaces interface-name unit interface--unit-number]
user@host# set family inet
```

4. Configure targeted broadcast at the `[edit interfaces interface-name unit interface-unit-number family inet` hierarchy level

```
[edit interfaces interface-name unit interface--unit-number family inet]
user@host# set targeted-broadcast
```

5. Specify one of the following options as per requirement:

- To allow IP packets destined for a Layer 3 broadcast address to be forwarded on the egress interface and to send a copy of the IP packets to the Routing Engine.

```
[edit interfaces interface-name unit interface-unit-number family inet
targeted-broadcast]
user@host# set forward-and-send-to-re
```

- To allow IP packets to be forwarded on the egress interface only.

```
[edit interfaces interface-name unit interface-unit-number family inet
targeted-broadcast]
user@host# set forward-only
```




NOTE: Targeted broadcast does not work when the targeted broadcast option `forward-and-send-to-re` and the traffic sampling option `sampling` are configured on the same egress interface of an M320 router, a T640 router, or an MX960 router. To overcome this scenario, you must either disable one of these options or enable the sampling option with the targeted broadcast option `forward-only` on the egress interface. For information about traffic sampling, see *Configuring Traffic Sampling*.

Display Targeted Broadcast Configuration Options

The following topics display targeted broadcast configuration with its various options:

- [Forward IP Packets On the Egress Interface and To the Routing Engine on page 277](#)
- [Forward IP Packets On the Egress Interface Only on page 277](#)

Forward IP Packets On the Egress Interface and To the Routing Engine

Purpose Display the configuration when targeted broadcast is configured on the egress interface to forward the IP packets on the egress interface and to send a copy of the IP packets to the Routing Engine.

Action To display the configuration run the **show** command at the **[edit interfaces *interface-name* unit *interface-unit-number* family inet]** where the interface name is `ge-2/0/0`, the unit value is set to 0, the protocol family is set to `inet`.

```
[edit interfaces interface-name unit interface-unit-number family inet]
user@host#show
targeted-broadcast {
    forward-and-send-to-re;
}
```

Forward IP Packets On the Egress Interface Only

Purpose Display the configuration when targeted broadcast is configured on the egress interface to forward the IP packets on the egress interface only.

Action To display the configuration run the **show** command at the **[edit interfaces *interface-name* unit *interface-unit-number* family inet]** where the interface name is `ge-2/0/0`, the unit value is set to 0, the protocol family is set to `inet`.

```
[edit interfaces interface-name unit interface-unit-number family inet]
user@host#show
targeted-broadcast {
    forward-only;
}
```

Related • [targeted-broadcast on page 1061](#)
Documentation

CHAPTER 5

Configuring Circuit and Translational Cross-Connects

- [Circuit and Translational Cross-Connects Overview on page 279](#)
- [Defining the Encapsulation for Switching Cross-Connects on page 281](#)
- [Defining the Connection for Switching Cross-Connects on page 285](#)
- [Configuring MPLS for Switching Cross-Connects on page 285](#)
- [Configuring IS-IS or MPLS Traffic for TCC Interfaces on page 286](#)
- [Configuring ATM-to-Ethernet Interworking on page 286](#)
- [ATM-To-Ethernet Interworking on ATM MICs on page 291](#)
- [Example: Configuring a CCC over Frame Relay Encapsulated Interface on page 292](#)
- [Example: Configuring a TCC on page 293](#)
- [Example: Configuring CCC over Aggregated Ethernet on page 294](#)
- [Example: Configuring a Remote LSP CCC over Aggregated Ethernet on page 296](#)
- [Example: Configuring ATM-to-Ethernet Interworking on page 298](#)
- [Example: Configuring ATM-to-Ethernet Interworking on ATM MIC on page 299](#)
- [Verifying ATM-to-Ethernet Interworking Configuration on ATM MICs on page 305](#)

Circuit and Translational Cross-Connects Overview

Circuit cross-connect (CCC) and translational cross-connect (TCC) allow you to configure transparent connections between two circuits, where a circuit can be a Frame Relay data-link connection identifier (DLCI), an Asynchronous Transfer Mode (ATM) virtual circuit (VC), a Point-to-Point Protocol (PPP) interface, a Cisco High-level Data Link Control (HDLC) interface, or a Multiprotocol Label Switching (MPLS) label-switched path (LSP).

Using CCC or TCC, packets from the source circuit are delivered to the destination circuit with, at most, the Layer 2 address being changed. No other processing, such as header checksums, time-to-live (TTL) decrementing, or protocol processing, is done.

To connect interfaces of the same type, use CCC. To connect unlike interfaces, use TCC.

CCC and TCC circuits fall into three categories: logical interfaces, which include ATM VCs and Frame Relay DLCIs; physical interfaces, which include PPP and Cisco HDLC; and paths, which include LSPs. The three circuit categories provide three types of cross-connect:

- Layer 2 switching (interface-to-interface)—Cross-connects between logical interfaces provide what is essentially Layer 2 switching.
- MPLS tunneling (interface-to-LSP)—Cross-connects between interfaces and LSPs allow you to connect two distant interface circuits by creating MPLS tunnels that use LSPs as the conduit.
- LSP stitching (LSP-to-LSP)—Cross-connects between LSPs provide a way to “stitch” together two label-switched paths, including paths that fall in two different traffic engineering database (TED) areas.

The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first interface.

For most CCC connections that connect interfaces, the interfaces must be of the same type; that is, ATM to ATM, Frame Relay to Frame Relay, PPP to PPP, or Cisco HDLC to Cisco HDLC.


ATM-to-Ethernet interworking cross-connect circuits connect logical interfaces configured on an ATM2 and Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet IQ2 and IQ2-E physical interfaces.

For all TCC connections that connect interfaces, the interfaces can be of unlike types. Mainly, TCC is used for Layer 2.5 virtual private networks (VPNs), but it can also be used as a simple “unlike circuit” switch.

Switching cross-connects join logical interfaces to form what is essentially Layer 2 switching.

[Figure 16 on page 280](#) illustrates a Layer 2 switching circuit cross-connect. In this topology, Router A and Router C have Frame Relay connections to Router B, which is a Juniper Networks router. CCC allows you to configure Router B to act as a Frame Relay (Layer 2) switch. To do this, configure a circuit from Router A to Router C that passes through Router B, effectively configuring Router B as a Frame Relay switch with respect to these routers. This configuration allows Router B to transparently switch packets (frames) between Router A and Router C without regard to the packets’ contents or the Layer 3 protocols. The only processing that Router B performs is to translate DLCI 600 to 750.

Figure 16: Layer 2 Switching Circuit Cross-Connect

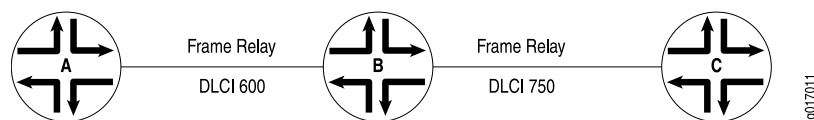

If the Router A-to-Router B and Router B-to-Router C circuits are PPP, for example, the Link Control Protocol and Network Control Protocol exchanges occur between Router A and Router C. These messages are handled transparently by Router B, allowing Router A and Router C to use various PPP options (such as header or address compression and authentication) that Router B might not support. Similarly, Router A and Router C exchange keepalives, providing circuit-to-circuit connectivity status.

You can configure Layer 2 switching cross-connects on PPP, Cisco HDLC, Frame Relay, Ethernet CCC, Ethernet VLAN, and ATM circuits. With CCC, only like interfaces can be connected in a single cross-connect. With TCC, unlike interfaces can be connected in a single cross-connect. In Layer 2 switching cross-connects, the exchanges take place between point-to-point links.

This chapter discusses the Layer 2 switching cross-connect configuration tasks. For information about MPLS tunneling and LSP stitching, see the *MPLS Applications Feature Guide*.

For information about Layer 2 and Layer 2.5 VPNs, see the *Junos OS VPNs Library for Routing Devices*.

For restrictions for MPLS on QFX switches, see *MPLS Feature Support on QFX Series and EX4600 Switches*.

Related Documentation

- [Defining the Encapsulation for Switching Cross-Connects on page 281](#)
- [Defining the Connection for Switching Cross-Connects on page 285](#)
- [Configuring MPLS for Switching Cross-Connects on page 285](#)
- [Configuring IS-IS or MPLS Traffic for TCC Interfaces on page 286](#)
- [Configuring ATM-to-Ethernet Interworking on page 286](#)
- [Example: Configuring a CCC over Frame Relay Encapsulated Interface on page 292](#)
- [Example: Configuring a TCC on page 293](#)
- [Example: Configuring CCC over Aggregated Ethernet on page 294](#)
- [Example: Configuring a Remote LSP CCC over Aggregated Ethernet on page 296](#)
- [Example: Configuring ATM-to-Ethernet Interworking on page 298](#)

Defining the Encapsulation for Switching Cross-Connects

- [Defining the Encapsulation for Switching Cross-Connects on page 282](#)
- [Configuring PPP or Cisco HDLC Circuits on page 282](#)
- [Configuring ATM Circuits on page 282](#)
- [Configuring Frame Relay Circuits on page 283](#)
- [Configuring Ethernet CCC Circuits on page 284](#)
- [Configuring Ethernet VLAN Circuits on page 284](#)

Defining the Encapsulation for Switching Cross-Connects

To configure Layer 2 or Layer 2.5 switching cross-connects, configure the CCC or TCC encapsulation on the router that is acting as the switch (Router B in [Figure 16 on page 280](#)).



NOTE: When you use CCC encapsulation, you can configure the `ccc` family only. Likewise, when you use TCC encapsulation, you can configure the `tcc` family only.

This section contains the following topics:

Configuring PPP or Cisco HDLC Circuits

For PPP or Cisco HDLC circuits, specify the encapsulation by including the **encapsulation** statement at the `[edit interfaces interface-name]` hierarchy level. This statement configures the entire physical device. For these circuits to work, you must configure a logical interface unit 0.

```
[edit interfaces interface-name]  
encapsulation (ppp-ccc | cisco-hdlc-ccc | ppp-tcc | cisco-hdlc-tcc);  
unit 0;
```

Configuring ATM Circuits

For ATM circuits, include the **vpi** statement `[edit interfaces interface-name atm-options]` hierarchy level:

```
[edit interfaces at-fpc/pic/port]  
atm-options {  
  vpi vpi-identifier;  
}
```

On the logical interface, include the following statements:

```
point-to-point;  
encapsulation (atm-ccc-cell-relay | atm-ccc-vc-mux | atm-tcc-vc-mux | atm-tcc-snap);  
vci vpi-identifier.vci-identifier;
```

You can include the logical interface statements at the following hierarchy levels:

- `[edit interfaces at-fpc/pic/port unit logical-unit-number]`
- `[edit logical-systems logical-system-name interfaces at-fpc/pic/port unit logical-unit-number]`

For each VC, configure whether it is a circuit or a regular logical interface. The default interface type is point-to-point.

Configuring Frame Relay Circuits

For Frame Relay circuits, include the **encapsulation** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
encapsulation type;
```

On the logical interface, include the following statements:

```
point-to-point;  
encapsulation type;  
dlci dlci-identifier;
```

You can include the logical interface statements at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]**

The encapsulation type can be one of the following:

- Flexible Frame Relay (**flexible-frame-relay**)—Intelligent queuing (IQ) interfaces can use flexible Frame Relay encapsulation. You use flexible Frame Relay encapsulation when you want to configure multiple per-unit Frame Relay encapsulations. This encapsulation type allows you to configure any combination of TCC, CCC, and standard Frame Relay encapsulations on a single physical port. Also, each logical interface can have any DLCI value from 1 through 1022.
- Frame Relay CCC version (**frame-relay-ccc**)—For E1, E3, SONET/SDH, T1, and T3 interfaces, this encapsulation type is the same as standard Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to CCC. The logical interface must also have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
- Frame Relay TCC version (**frame-relay-tcc**)—Similar to Frame Relay CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.
- Extended CCC version (**extended-frame-relay-ccc**)—This encapsulation type allows you to dedicate DLCIs 1 through 1022 to CCC. The logical interface must have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
- Extended TCC version (**extended-frame-relay-tcc**)—Similar to extended Frame Relay CCC, this encapsulation type allows you to dedicate DLCIs 1 through 1022 to TCC, which is used for circuits with different media on either side of the connection.
- Port CCC version (**frame-relay-port-ccc**)—Defined in the IETF document *Frame Relay Encapsulation over Pseudo-Wires* (expired December 2002). This encapsulation type allows you to transparently carry all the DLCIs between two customer edge (CE) routers without explicitly configuring each DLCI on the two provider edge (PE) routers with

Frame Relay transport. The connection between the two CE routers can be either user-to-network interface (UNI) or network-to-network interface (NNI); this is completely transparent to the PE routers. The logical interface does not require an encapsulation statement. When you use this encapsulation type, you can configure the **ccc** family only.

For each DLCI, configure whether it is a circuit or a regular logical interface. The DLCI for regular interfaces must be from 1 through 511. For CCC and TCC interfaces, it must be from 512 through 1022. This restriction does not apply to IQ interfaces. The default interface type is point to point.

Configuring Ethernet CCC Circuits

You can configure Ethernet CCC encapsulation on Fast Ethernet, Gigabit Ethernet, and aggregated Ethernet interfaces.



NOTE: CCC over aggregated Ethernet requires an M Series Enhanced Flexible PIC Concentrator (FPC).

For Ethernet CCC circuits, specify the encapsulation by including the **encapsulation** statement at the **[edit interfaces *interface-name*]** hierarchy level. This statement configures the entire physical device.

```
[edit interfaces interface-name]  
encapsulation ethernet-ccc;  
unit logical-unit-number {  
  ...  
}  
[edit interfaces aex]  
encapsulation ethernet-ccc;  
unit logical-unit-number {  
  ...  
}
```

Configuring Ethernet VLAN Circuits

You can configure Ethernet virtual local area network (VLAN) circuits on Fast Ethernet, Gigabit Ethernet, and aggregated Ethernet interfaces. For Ethernet VLAN circuits, specify the encapsulation by including the **encapsulation** statement at the **[edit interfaces *interface-name*]** hierarchy level. This statement configures the entire physical device. You must also enable VLAN tagging. To do this, include the following statements:

```
[edit interfaces interface-name]  
vlan-tagging;  
encapsulation (extended-vlan-ccc | vlan-ccc);  
[edit interfaces aex]  
vlan-tagging;  
encapsulation vlan-ccc;
```

On the logical interface, include the following statements:


```
encapsulation vlan-ccc;
vlan-id number;
```

You can include the logical interface statements at the following hierarchy levels:

- [edit interfaces *interface-name* **unit** *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* **unit** *logical-unit-number*]

Ethernet interfaces in VLAN mode can have multiple logical interfaces. For encapsulation type **vlan-ccc**, VLAN IDs 1 through 511 are reserved for normal VLANs, and VLAN IDs 512 through 1023 are reserved for CCC VLANs. For encapsulation type **extended-vlan-ccc**, VLAN IDs 1 through 4094 are valid. VLAN ID 0 is reserved for tagging the priority of frames.

- See Also**
- [Figure 16 on page 280](#)
 - [Circuit and Translational Cross-Connects Overview on page 279](#)

Defining the Connection for Switching Cross-Connects

To configure Layer 2 switching cross-connects, define the connection between the two circuits. You configure this on the router that is acting as the switch (Router B in [Figure 16 on page 280](#)). The connection joins the interface that comes from the circuit's source to the interface that leads to the circuit's destination. When you specify the interface names, include the logical portion of the name, which corresponds to the logical unit number. The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first interface.

```
[edit protocols]
connections {
  remote-interface-switch connection-name {
    interface interface-name.unit-number;
  }
  lsp-switch connection-name {
    transmit-lsp lsp-number;
    receive-lsp lsp-number;
  }
}
```

Configuring MPLS for Switching Cross-Connects

For Layer 2 switching cross-connects to work, you must configure MPLS. The following is a minimal MPLS configuration:

```
[edit protocols]
mpls {
  interface (interface-name | all);
}
```

For more information, see the *MPLS Applications Feature Guide*.

**Related
Documentation**

- [Defining the Connection for Switching Cross-Connects on page 285](#)

Configuring IS-IS or MPLS Traffic for TCC Interfaces

Layer 2.5 VPNs on T Series, M120, MX Series, and M320 routers support IPv4, IS-IS, and MPLS traffic types. By default, IPv4 traffic runs on T Series, M120, MX Series, and M320 routers and over TCC interfaces. To configure IS-IS (ISO traffic) or MPLS traffic on Layer 2.5 VPNs, you must configure the same traffic type on both ends of the Layer 2.5 VPN.



NOTE: Some platform and FPC combinations can not pass TCC encapsulated ISO traffic. See *Platforms/FPCs That Cannot Forward TCC Encapsulated ISO Traffic* for details.

To specify which traffic can run over a TCC interface, include the **protocols** statement with the appropriate value (**inet**, **mpls**, and **iso**) at the **[edit interfaces *interface-name* unit *logical-unit-number* family *tcc*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number family tcc]  
  protocols [ inet iso mpls ];
```



NOTE: Layer 2.5 VPNs running on M Series Multiservice Edge Routers support only IPv4 traffic. IPv6 is not supported on Layer 2.5 VPNs.

When enabling ISO over a Layer 2.5 VPN that is configured on a CE Ethernet interface, you must also include the **point-to-point** statement at the **[edit protocols isis interface *interface-name*]** hierarchy level:

```
[edit protocols isis interface interface-name]  
  point-to-point;
```

For more information about Layer 2.5 VPNs, see the *Junos OS VPNs Library for Routing Devices* and the *Translational Cross-Connect and Layer 2.5 VPNs Feature Guide*.

Configuring ATM-to-Ethernet Interworking

- [ATM-to-Ethernet Interworking on page 287](#)
- [Enabling ATM-to-Ethernet Interworking on page 287](#)
- [Configuring the Ethernet Interface on page 288](#)
- [Configuring Ethernet Encapsulation on page 288](#)
- [Configuring the Outer VLAN Identifier on page 288](#)
- [Configuring the Inner VLAN Identifier Range on page 288](#)

- [Configuring the Physical Interface VPI on page 289](#)
- [Configuring the ATM Logical Interface on page 289](#)
- [Configuring the Protocol Family on page 289](#)
- [Configuring the Logical Interface VPI on page 290](#)
- [Configuring the Logical Interface VCI on page 290](#)

ATM-to-Ethernet Interworking

The ATM-to-Ethernet interworking feature is useful where ATM2 interfaces are used to terminate ATM DSLAM traffic. The ATM traffic can be forwarded with encapsulation type **ccc** (circuit cross-connect) to a local or remote Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet IQ2 and IQ2-E interface or label-switched path (LSP). The ATM VPI and VCI are converted to stacked VLAN inner and outer VLAN tags.

These ATM-to-Ethernet interworking circuits can be mapped to individual logical interfaces configured on an ATM2 IQ interface and Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet IQ2 and IQ2-E physical interface.

The ATM-to-Ethernet interworking cross-connect essentially provides Layer 2 switching, and statistics are reported at the logical interface level.

During conversion from ATM to Ethernet, the least significant 12 bits of the ATM cell VCI are copied to the Ethernet frame inner VLAN tag. Cells received on an ATM logical interface configured with encapsulation type **vlan-vci-ccc** and falling within the configured VCI range are reassembled into packets and forwarded to a designated Ethernet logical interface that is configured with encapsulation type **vlan-vci-ccc**.

During conversion from Ethernet to ATM, the Ethernet frame inner VLAN tags that fall within the configured range, are copied to the least significant 12 bits of the ATM cell VCI. The ATM logical interface uses its configured VPI when segmenting the Ethernet packets into cells.

ATM-to-Ethernet interworking is supported on M120, M320, and T Series routers.

ATM-to-Ethernet interworking is supported on MX Series routers with aggregated Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces. This feature is available on all Enhanced Queuing (EQ) DPCs and Enhanced DPCS for MX Series routers.



NOTE: This feature is *not* supported on MX Series routers with ATM interfaces.

For more information on MX Series ATM-to-Ethernet interworking, see the *MX Series Solutions Guide*.

The following sections discuss ATM-to-Ethernet interworking:

Enabling ATM-to-Ethernet Interworking

To enable the ATM-to-Ethernet interworking cross-connect function, include the **vlan-vci-tagging** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
vlan-vci-tagging;
```

Configuring the Ethernet Interface

Configure the Ethernet or aggregated Ethernet physical interface by including the **encapsulation** statement with the **vlan-vci-ccc** option at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
encapsulation vlan-vci-ccc;
```

When the encapsulation type **vlan-vci-ccc** is configured on the physical interface, all logical interfaces configured on the Ethernet interface must also have the encapsulation type set to **vlan-vci-ccc**.

Configuring Ethernet Encapsulation

Configure the Ethernet logical interface by including the **encapsulation** statement with the **vlan-vci-ccc** option at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
encapsulation vlan-vci-ccc;
```

The chassis configuration cannot contain the **atm-l2circuit-mode** statement if any logical interfaces are configured with the **vlan-vci-ccc** encapsulation option.

Configuring the Outer VLAN Identifier

Configure the Ethernet logical interface outer VLAN ID by including the **vlan-id** statement specifying the outer VLAN ID at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
vlan-id outer-vlan-identifier;
```

It is the administrator's responsibility to ensure that the outer VLAN tag and VPI match and the inner VLAN tags fall within the VCI range of the VPI.

The allowable VPI range is from 0 to 255. So the outer VLAN tags must not be configured for values above 255.

Configuring the Inner VLAN Identifier Range

Configure the Ethernet logical interface inner VLAN ID range by including the **inner-vlan-id-range** statement and specifying the starting VLAN ID and ending VLAN ID at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
inner-vlan-id-range start start-id end end-id;
```

VLAN IDs 0 and 4095 are reserved by IEEE 801.1q and must not be used for the inner or outer VLAN ID.

VCIs 0 through 31 are reserved for ATM management purposes by convention. Therefore inner VLAN IDs 1 through 31 should not be used.

VLAN ID 1 might be used by Ethernet switches for certain bridge management services, so using VLAN ID 1 for the inner or outer VLAN ID is discouraged.

Configuring the Physical Interface VPI

Configure the ATM physical interface VPI by including the **vpi** statement at the **[edit interfaces *interface-name* atm-options]** hierarchy level:

```
[edit interfaces interface-name atm-options]
vpi virtual-path-identifier;
```

VPI 0 is reserved, and must not be used.

ATM F4/F5 OAM is not supported for VPIs used in ATM-to-Ethernet interworking cross-connects. Any F4/F5 OAM cells received are discarded.

Only one logical interface may be declared per virtual path specified in the **atm-options** statement hierarchy.

It is not necessary to dedicate all the VPIs of an ATM2 interface for ATM-to-Ethernet interworking cross-connects.

Configuring the ATM Logical Interface

Configure the ATM logical interface by including the **encapsulation** statement and specifying the encapsulation type **vlan-vci-ccc** at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]
encapsulation vlan-vci-ccc;
```

An ATM logical interface configured with the encapsulation type **vlan-vci-ccc** only supports the **epd-threshold**, **shaping**, **traps | no-traps**, **disable**, and **description** statements. No other configuration statements are supported. ATM interface CoS features are not supported by logical interfaces configured with the encapsulation type **vlan-vci-ccc**.

The ATM2 OC48 PIC does not support the encapsulation type **vlan-vci-ccc**.

The encapsulation type **vlan-vci-ccc** only supports the **ccc** protocol family. Attempts to configure any other interface protocol family are rejected.

Configuring the Protocol Family

Configure the ATM logical interface protocol family by including the **family** statement and specifying the **ccc** option at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
family ccc;
```

Configuring the Logical Interface VPI

Configure the ATM logical interface virtual path identifier by including the **vpi** statement at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
vpi virtual-path-identifier;
```

VPI 0 is reserved, and must not be used.

It is the administrator's responsibility to ensure the outer VLAN tag and VPI match and the inner VLAN tags fall within the VCI range of the VPI.

Once a VPI is used in an ATM-to-Ethernet interworking cross-connect, it cannot be used with any other logical interface, even if the **vpi.vci** value falls outside the VCI range for the cross-connect.

Configuring the Logical Interface VCI

Configure the ATM logical interface virtual channel identifier range by including the **vci-range** statement and specifying the starting VCI and ending VCI at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
vci-range start start-vci end end-vci;
```

Do not use VCIs 0 through 31, which are reserved for ATM management purposes by convention.

- See Also
- [encapsulation on page 592](#)
 - [family on page 627](#)
 - [inner-vlan-id-range on page 697](#)
 - [vci-range on page 1131](#)
 - [vlan-id on page 1133](#)
 - [vlan-vci-tagging on page 1152](#)
 - [vpi \(ATM CCC Cell-Relay Promiscuous Mode\) on page 1152](#)
 - [vpi \(Logical Interface and Interworking\) on page 1154](#)

ATM-To-Ethernet Interworking on ATM MICs

ATM-to-Ethernet interworking supports transmission of ATM packets over Ethernet. It specifically provides support for exchange of Layer 2 and Layer 3 Protocol Data Units (PDUs) between ATM and Ethernet domains. On MX Series 5G Universal Routing Platforms with ATM MICs, you can exchange Ethernet frames between ATM and Ethernet domains over a MPLS pseudowire or a Layer 2 cross-connect by using translational cross connect (TCC). For more information about TCC, see [“Circuit and Translational Cross-Connects Overview” on page 279](#).

Consider the following basic ATM-to-Ethernet Interworking topology where the provider edge router PE1 is connected to an ATM domain and the Provider Edge router PE2 is connected to an Ethernet domain (see Figure 1). The customer edge routers CE1 and CE2 are customer-managed devices. The PE routers are connected by means of an MPLS pseudowire. The ATM traffic on the PE1–CE1 link can comprise untagged Ethernet frames over ATM format. The Ethernet traffic on PE2–CE2 link can comprise untagged, single-VLAN or double-VLAN tagged Ethernet frames depending on the configuration of the PE2 router.

For ATM-to-Ethernet Interworking, the virtual path identifier (VPI) and virtual circuit identifier (VCI) values on the ATM link are mapped to the outer and inner VLAN tag on the Ethernet link. Mapping implies that either the same value is copied or a one-to-one translation is performed. If VLAN translation is enabled, instead of copying the value, a one-to-one translation is performed on the Ethernet facing PE, using a lookup table.

ATM cells that are received on the PE1 router are reassembled into ATM Adaptation Layer 5 (AAL5) logical link control (LLC) frames. The router removes the header and footer and adds two VLAN tags (outer and inner) to the untagged Ethernet payload based on the configuration. The VLAN IDs must correspond to the VPI and VCI of the ATM cell. You must add an MPLS label before transmitting the dual-VLAN-tagged Ethernet frame over the MPLS pseudowire. You can also add other optional MPLS tags.



NOTE: If the AAL5 frame sent by CE1 is not encapsulated with LLC and if the untagged Ethernet payload includes the frame check sequence (FCS), PE1 rejects the AAL5 frame. Also, PE1 can transmit and receive only a dual VLAN-tagged Ethernet frame without FCS. Inclusion of FCS can result in packet drops or data corruption.

On the PE2 router, the MPLS label and optional MPLS tags are removed and the Ethernet frame is transmitted toward the CE2 router. You can modify or remove one or both VLAN tags before forwarding the frame to the CE2 router.

Limitations

Following are the limitations of the ATM-to-Ethernet interworking feature on MX Series routers with ATM MICs:

- The ATM-to-Ethernet interworking feature is not backward compatible or does not interoperate with the ATM-Ethernet interworking feature supported on M Series and T Series Routers. The functionality is the same but the implementation is different.
- The total number of VCIs supported is 4000 for the ATM MIC. This is an existing system limit.
- If an ATM logical interface is configured with **vci-range** of *N* VCIs, then *N* VCIs are deducted from the available pool of 4000 VCIs.
- ATM quality of service (QoS) is not supported with the **vlan-vci-ccc** encapsulation. If you use the **vci-range** statement then the **vlan-vci-ccc** encapsulation supports multiple VCIs on a single logical interface. This is a hardware limitation.


Related Documentation

- [Example: Configuring ATM-to-Ethernet Interworking on ATM MIC on page 299](#)

Example: Configuring a CCC over Frame Relay Encapsulated Interface

Configure a full-duplex Layer 2 switching circuit cross-connect between Router A and Router C, using a Juniper Networks router, Router B, as the virtual switch. See the topology in [Figure 17 on page 292](#).

Figure 17: Example Topology of a Switching Circuit Cross-Connect with Frame Relay CCC Encapsulation

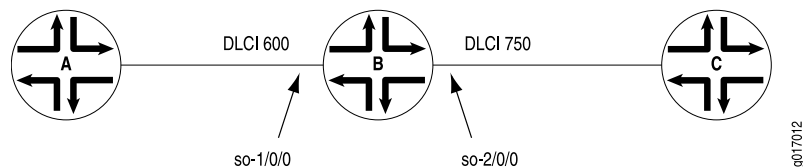

```
[edit]
interfaces {
  so-1/0/0 {
    encapsulation frame-relay-ccc;
    unit 1 {
      point-to-point;
      eui-64 frame-relay-ccc;
      dlci 600;
    }
  }
  so-2/0/0 {
    encapsulation frame-relay-ccc;
    unit 2 {
      point-to-point;
      encapsulation frame-relay-ccc;
      dlci 750;
    }
  }
}
protocols {
  connections {
```



```

interface-switch router-a-router-c {
  interface so-1/0/0.1;
  interface so-2/0/0.2;
}
}
mpls {
  interface all;
}
}

```

Related Documentation

- [Configuring Layer 2 Switching Cross-Connects Using CCC](#)

Example: Configuring a TCC

Configure a full-duplex switching translational cross-connect with PPP TCC encapsulation between Router A and Router C, using a Juniper Networks router, Router B, as the virtual switch. See the topology in [Figure 18 on page 293](#).

In this topology, Router B has a PPP connection to Router A and an ATM connection to Router C.

Figure 18: Layer 2.5 Switching Translational Cross-Connect



On Router A

```

[edit]
interfaces {
  so-0/1/0 {
    description "to Router B so-1/0/0";
    encapsulation ppp;
    unit 0 {
      family inet {
        address 10.1.1.1/30;
      }
    }
  }
}

```

On Router B

```

[edit]
interfaces {
  so-1/0/0 {
    description "to Router A so-0/1/0";
    encapsulation ppp-tcc;
    unit 0 {
    }
  }
  at-1/1/0 {
  }
}

```

```

description "to Router C at-0/3/0";
atm-options {
    vpi 0 maximum-vcs 2000;
}
unit 32 {
    vci 32;
    encapsulation atm-tcc-vc-mux;
}
}
[edit]
protocols {
    mpls {
        interface so-1/0/0.0;
        interface at-1/1/0.32;
    }
    connections {
        interface-switch PPP-to-ATM {
            interface so-1/0/0.0;
            interface at-1/1/0.32;
        }
    }
}

```

On Router C

```

[edit]
interfaces {
    at-0/3/0 {
        description "to Router B at-1/1/0";
        atm-options {
            vpi 0 maximum-vcs 2000;
        }
        unit 32 {
            vci 32;
            encapsulation atm-vc-mux;
            family inet {
                address 10.1.1.2/30;
            }
        }
    }
}

```

**Related
Documentation**


- [Circuit and Translational Cross-Connects Overview on page 279](#)

Example: Configuring CCC over Aggregated Ethernet

See the topology in [Figure 19 on page 295](#). In this topology, CE Routers A and C have aggregated Ethernet connections to PE Router B. With CCC, you specify that the circuit from Router A is connected to the circuit from Router C. Router B functions as a cross-connect switch between the two circuits. For a back-to-back connection, all VLAN IDs must be the same on Router A through Router C. You configure Router A and Router

C as standard aggregated Ethernet interfaces. For more information about aggregated Ethernet, see *Aggregated Ethernet Interfaces Overview*.

Figure 19: Interface-to-Interface Circuit Cross-Connect over Aggregated Ethernet Interfaces



On Router A

```
[edit interfaces]
ae0 {
  vlan-tagging;
  aggregated-ether-options {
    minimum-links 1;
    link-speed 1g;
  }
  unit 0 {
    vlan-id 600;
    family inet {
      address 192.168.1.1/30;
    }
  }
}
```

On Router B

```
[edit interfaces]
ae0 {
  encapsulation vlan-ccc;
  vlan-tagging;
  aggregated-ether-options {
    minimum-links 1;
    link-speed 1g;
  }
}
unit 0 { # CCC switch
  encapsulation vlan-ccc;
  vlan-id 600;
  family ccc;
}
ae1 {
  encapsulation vlan-ccc;
  vlan-tagging;
  aggregated-ether-options {
    minimum-links 1;
    link-speed 100m;
  }
}
unit 0 {
  encapsulation vlan-ccc;
  vlan-id 600;
  family ccc;
}
}
[edit protocols]
```

```

mpls {
  interface all;
}
connections {
  interface-switch layer2-cross-connect {
    interface ae0.0;
    interface ae1.0;
  }
}

```

On Router C

```


[edit interfaces]
ae1 {
  vlan-tagging;
  aggregated-ether-options {
    minimum-links 1;
    link-speed 1g;
  }
  unit 0 {
    vlan-id 600;
    family inet {
      address 192.168.1.2/30;
    }
  }
}

```

Example: Configuring a Remote LSP CCC over Aggregated Ethernet

See the topology in [Figure 20 on page 296](#). In this topology, CE Router G has an aggregated Ethernet connection to PE Router F. CE Router D has an aggregated Ethernet connection to PE Router E. Router E and Router F have an MPLS LSP between them. With remote CCC, you specify that the circuit from Router D is connected to the circuit from Router G. The circuit from Router D is connected to the LSP on Router E; the circuit from Router G is connected to the LSP on Router F. In other words, **ae0.0** and **ae1.0** are connected using **lsp1-2** and **lsp2-1**. You configure Router D and Router G as standard aggregated Ethernet interfaces. For more information about aggregated Ethernet, see *Aggregated Ethernet Interfaces Overview*.

Figure 20: Remote Interface-LSP-Interface Circuit Cross-Connect over Aggregated Ethernet Interfaces

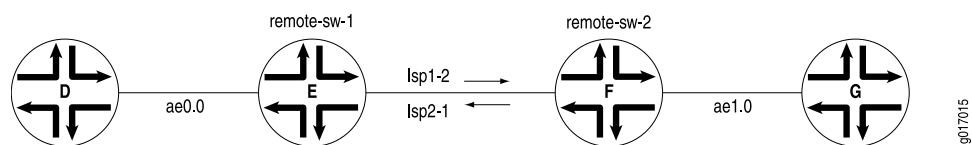

On Router D

```

[edit interface]
ae0 {
  aggregated-ether-options {
    minimum-links 1;
    link-speed 1g;
  }
}

```

```

    lacp {
        active;
        periodic fast;
    }
}
unit 0 {
    family inet {
        address 192.168.2.1/30;
    }
}
}

```

On Router E

```

[edit interfaces]
ae0 {
    encapsulation ethernet-ccc;
    aggregated-ether-options {
        minimum-links 1;
        link-speed 100m;
        lacp {
            active;
            periodic fast;
        }
    }
}
unit 0 {
    encapsulation vlan-ccc; # default
    family ccc; # default
}
}
[edit protocols]
mpls {
    interface all;
}
}
connections {
    remote-interface-switch remote-sw-1 {
        interface ae0.0;
        receive-lsp lsp2_1;
        transmit-lsp lsp1_2;
    }
}
}

```

On Router F

```

[edit interfaces]
ae1 {
    encapsulation ethernet-ccc;
    aggregated-ether-options {
        minimum-links 1;
        link-speed 100m;
        lacp {
            active;
            periodic fast;
        }
    }
}
unit 0 {

```

```

    encapsulation vlan-ccc; # default
    family ccc; # default
  }
}
[edit protocols]
mpls {
  interface all;
}
connections {
  remote-interface-switch remote-sw-2 {
    interface ae1.0;
    receive-lsp lsp1_2;
    transmit-lsp lsp2_1;
  }
}

```

On Router G

```


[edit interface]
ae1 {
  aggregated-ether-options {
    minimum-links 1;
    link-speed 1g;
    lacp {
      active;
      periodic fast;
    }
  }
}
unit 0 {
  family inet {
    address 192.168.2.2/30;
  }
}
}

```

Example: Configuring ATM-to-Ethernet Interworking

The following example shows the configuration of the ATM and Ethernet interfaces for an ATM-to-Ethernet interworking cross connect. In the example ATM DSLAM traffic is terminated on an ATM2 interface. The ATM traffic is forwarded using encapsulation type **vlan-vci-ccc** to a local Ethernet IQ2 and IQ2-E interface. See the topology in [Figure 21 on page 298](#).

Figure 21: ATM-to-Ethernet Interworking

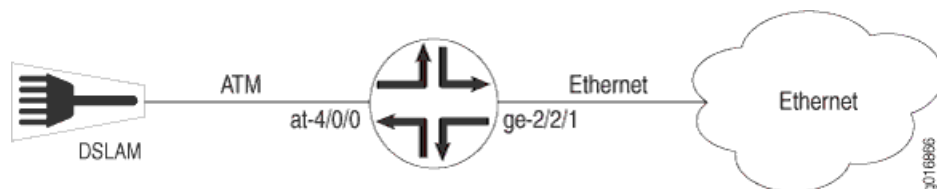

In this example, the ATM traffic comes from the DSLAM to the router on ATM interface **at-4/0/0** and is forwarded out on Ethernet interface **ge-2/2/1**.

```
[edit interfaces]
ge-2/2/1 {
  vlan-vci-tagging;
  encapsulation vlan-vci-ccc;
  unit 0 {
    encapsulation vlan-vci-ccc;
    vlan-id 100;
    inner-vlan-id-range start 100 end 500;
  }
}
at-4/0/0 {
  atm-options {
    vpi 100;
  }
  unit 0 {
    encapsulation vlan-vci-ccc;
    family ccc;
    vpi 100;
    vci-range start 100 end 500;
  }
}
```

Related Documentation

- [Configuring ATM-to-Ethernet Interworking on page 286](#)

Example: Configuring ATM-to-Ethernet Interworking on ATM MIC

This example shows how to configure the ATM and Ethernet interfaces for an ATM-to-Ethernet interworking cross-connect.

- [Requirements on page 299](#)
- [Overview on page 299](#)
- [Configuration on page 300](#)

Requirements

This example uses the following hardware and software components:

- One MX Series router with ATM MIC
- One MX Series router with Ethernet MIC
- Junos OS Release 16.1R1 or later release

Overview

Configuring ATM-to-Ethernet Interworking enables exchange of Ethernet frames between an ATM domain and an Ethernet domain on MX Series routers with ATM MIC. The ATM domain can be connected to the Ethernet domain over an MPLS pseudowire.

Topology

Consider a sample topology in which provider edge (PE) router (ATMRouter) is an MX Series router with an ATM MIC and PE router (EthernetRouter) is an MX Series router with an Ethernet MIC. CE1 and CE2 are the customer edge routers or customer-managed devices. ATMRouter and EthernetRouter are connected by means of an MPLS pseudowire. The ATM traffic between ATMRouter and CE1 comprises untagged Ethernet over ATM cells. The Ethernet traffic between EthernetRouter and CE2 comprises double-VLAN-tagged Ethernet frames.

When a packet is sent from CE1 to CE2 (ATM-to-Ethernet), ATMRouter accepts ATM cells from CE1 with virtual circuit identifier (VCI) in the range 10/50 to 10/100 and reassembles ATM cells into AAL5 frames. ATMRouter extracts the Ethernet frame from the AAL5 frame payload. ATMRouter adds two VLAN tags with VLAN IDs corresponding to the virtual path identifier (VPI) and VCI of the received ATM cell. The dual-tagged-Ethernet frame is then encapsulated into a MPLS packet and sent over the pseudowire to EthernetRouter.

EthernetRouter strips the MPLS encapsulation and the dual-VLAN-tagged Ethernet frame is sent to CE2. The outer VLAN ID is rewritten to 20 and the inner VLAN ID remains the same. The packet arrives at CE2.

The reverse happens when a packet is sent from CE2 to CE1.

Configuration

To enable exchange of Ethernet frames between an ATM domain and an Ethernet domain according to the topology mentioned in the overview section, perform these tasks:

- [Configuring ATMRouter on page 300](#)
- [Configuring EthernetRouter on page 303](#)

Configuring ATMRouter

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure the interfaces on ATMRouter:

1. To configure the MIC to use SONET framing, include the **framing** statement at the **[edit chassis]** hierarchy level.

```
[edit chassis]
user@host# set fpc 1 pic 0 framing sonet port 0 framing sonet speed oc3-stm1
```

2. In configuration mode, go to the **[edit interfaces]** hierarchy level. Configure the Ethernet core interface that connects ATMRouter to EthernetRouter and specify the description of the Ethernet interface for your reference.


```
[edit]
user@host# edit interfaces
user@host# edit ge-1/0/0
user@host# set description PE2Facing
```

3. Configure a logical unit for the Ethernet interface, specify the family as **inet**, and assign an IP address to the interface. Also, specify the family as **mpls** to enable ATMRouter to connect to EthernetRouter.

```
[edit interfaces ge-1/0/0]
user@host# edit unit 0
user@host# set family inet address 192.0.0.1/24
user@host# set family mpls
user@host# top
```

4. In configuration mode, at the **[edit interfaces]** hierarchy level, configure the ATM interface that connects to CE1 and specify the description of the ATM interface for your reference. Also, define the virtual path identifier for this interface by using the **vpi** statement and specify a value from 1 through 255. The value zero (0) is reserved and must not be used.

```
[edit]
user@host# edit interfaces
user@host# edit at-1/2/0
user@host# set description CE1Facing
user@host# set atm-options vpi 10
```

5. Configure a logical unit for the ATM interface. Also, configure the ATM logical interface by specifying the encapsulation and the protocol family. The encapsulation type **vlan-vci-vcc** supports only the **ccc** protocol family. Any attempts to configure any other interface protocol family is rejected.

```
[edit interfaces at-1/2/0]
user@host# edit unit 0
user@host# set encapsulation vlan-vci-vcc family ccc
```

6. Configure the VPI and VCI for the logical interface. The VPI value 0 is reserved and must not be used. VCI values from 0 through 31 are reserved for ATM management purposes by convention.

```
[edit interfaces at-1/2/0 unit 0]
user@host# set vpi 10 vci-range start 100 end 110
user@host# top
```

7. Configure the physical loopback interface at the **[edit interfaces]** hierarchy level.

```
[edit]
```

```
user@host# set interfaces lo0 unit 0 family inet address 198.51.100.1/32
```

8. Configure the route identifier that specifies the routing device's IP address. The router identifier is used by BGP and OSPF to identify the routing device from which a packet originated. The router identifier is usually the IP address of the local routing device. If you do not configure a router identifier, the IP address of the first interface to come online is used. This is usually the loopback interface. Otherwise, the first hardware interface with an IP address is used.

```
[edit]  
user@host # set router-options router-id 198.51.100.1
```

9. At the **[edit protocols]** hierarchy level, configure the interface on which to configure MPLS as well as the loopback interface.

```
[edit protocols]  
user@host# edit mpls  
user@host# set interface ge-1/0/0.0  
user@host# set interface lo0.0  
user@host# top
```

10. At the **[edit protocols]** hierarchy level, configure a single-area OSPF network by specifying the area ID and associated interfaces (Ethernet interface and the loopback interface).

```
[edit protocols]  
user@host# edit ospf  
user@host# set area 0.0.0.0 interface ge-1/0/0.0  
user@host# set area 0.0.0.0 interface lo0.0  
user@host# top
```

11. Create an LDP instance on the Ethernet interface and the loopback interface at the **[edit]** hierarchy level. LDP is required as the signaling protocol for Layer 2 circuits.

```
[edit]  
user@host# edit protocols ldp  
user@host# set interface ge-1/0/0.0  
user@host# set interface lo0.0  
user@host# top
```

12. Establish the Layer 2 circuit by specifying the **l2circuit** statement at the **[edit protocols]** hierarchy level. The neighbor parameter specifies the IP address of the PE neighbor. The interface name refers to the local CE-facing interface that forms the Layer 2 circuit. The VCI ID must match the ID of the PE neighbor.

```
[edit]  
user@host# edit protocols l2circuit
```

```

user@host# edit neighbor 198.51.100.2 interface at-1/2/0.0
user@host# set static incoming label 1000000 outgoing label 1000000
user@host# set virtual-circuit-id 5
user@host# set no-control-word
user@host# set ignore-encapsulation-mismatch
user@host# set ignore-mtu-mismatch

```

Configuring EthernetRouter

Step-by-Step Procedure The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure the interfaces on EthernetRouter:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level. Configure the Ethernet core interface that connects EthernetRouter to ATMRouter and specify the description of the Ethernet interface for your reference.

```

[edit]
user@host# edit interfaces
user@host# edit ge-1/0/0
user@host# set description PE1Facing

```

2. Configure a logical unit for the Ethernet interface and specify the family as **inet** and assign an IP address to the Ethernet interface. Also, specify the family as **mpls** to enable EthernetRouter to connect to ATMRouter.

```

[edit interfaces ge-1/0/0]
user@host# edit unit 0
user@host# set family inet address 192.0.0.2/24
user@host# set family mpls
user@host# top

```

3. At the **[edit interfaces]** hierarchy level, configure the Ethernet interface that connects to CE2 and specify the description of the interface for your reference. Also, specify **flexible-vlan-tagging** to support transmission of 802.1Q VLAN single-tag and dual-tag frames on the same port. Specify **extended-vlan-ccc** as the encapsulation to enable tagging for translational cross-connect (TCC).

```

[edit]
user@host# edit interfaces
user@host# edit ge-1/0/1
user@host# set description CE2Facing
user@host# set flexible-vlan-tagging
user@host# set encapsulation extended-vlan-ccc
user@host# set gicether-options ethernet-switch-profile tag-protocol-id [0x8100
0x9100 0x88a8]

```

4. Configure a logical unit for the Ethernet interface. Also, configure mixed tagging. Mixed tagging enables you to configure two logical interfaces on the same Ethernet port, one with single-tag framing and one with dual-tag framing. You can also specify the protocol family.

```
[edit interfaces ge-1/0/1]
user@host# edit unit 0
user@host# set vlan-tags outer 0x88a8.10 inner-range 0x8100.100-110
user2host# set family ccc;
```

5. Configure the physical loopback interface at the **[edit interfaces]** hierarchy level.

```
[edit]
user@host# set interfaces lo0 unit 0 family inet address 198.51.100.2/32
```

6. Configure the route identifier that specifies the routing device's IP address. The router identifier is used by BGP and OSPF to identify the routing device from which a packet originated. The router identifier is usually the IP address of the local routing device. If you do not configure a router identifier, the IP address of the first interface to come online is used. This is usually the loopback interface. Otherwise, the first hardware interface with an IP address is used.

```
[edit]
user@host # set router-options router-id 198.51.100.2
```

7. At the **[edit protocols]** hierarchy level, configure the interface on which to configure MPLS as well as the loopback interface.

```
[edit protocols]
user@host# edit mpls
user@host# set interface ge-1/0/0.0
user@host# set interface lo0.0
user@host# top
```

8. At the **[edit protocols]** hierarchy level, configure a single-area OSPF network by specifying the area ID and associated interfaces (Ethernet interface and the loopback interface).

```
[edit protocols]
user@host# edit ospf
user@host# set area 0.0.0.0 interface ge-1/0/0.0
user@host# set area 0.0.0.0 interface lo0.0
user@host# top
```

9. Create an LDP instance on the Ethernet interface and the loopback interface at the **[edit]** hierarchy level. LDP is required as the signaling protocol for Layer 2 circuits.

```
[edit]
```

```

user@host# edit protocols ldp
user@host# set interface ge-1/0/0.0
user@host# set interface lo0.0
user@host# top

```

10. Establish the Layer 2 circuit by specifying the **l2circuit** statement at the **[edit protocols]** hierarchy level. The **neighbor** parameter specifies the IP address of the PE neighbor. The interface name refers to the local CE-facing interface that forms the Layer 2 circuit. The VCI ID must match the ID of the PE neighbor.

```

[edit]
user@host# edit protocols l2circuit
user@host# edit neighbor 198.51.100.1 interface ge-1/0/1.0
user@host# set static incoming label 1000000 outgoing label 1000000
user@host# set virtual-circuit-id 5
user@host# set no-control-word
user@host# set ignore-encapsulation-mismatch
user@host# set ignore-mtu-mismatch

```

- Related Documentation**
- [ATM-To-Ethernet Interworking on ATM MICs on page 291](#)
 - [Verifying ATM-to-Ethernet Interworking Configuration on ATM MICs on page 305](#)

Verifying ATM-to-Ethernet Interworking Configuration on ATM MICs

To verify that the ATM-to-Ethernet interworking feature is configured correctly, perform these tasks on both the routers:

- [Verifying That The ATM Interface on Router1 Is Configured Correctly on page 305](#)
- [Verifying The Status of the MIC on Router1 on page 306](#)
- [Verify That OSPF Configuration on Router1 Is Accurate on page 306](#)
- [Verify That LDP Configuration on Router1 Is Accurate on page 307](#)
- [Verify That Layer 2 Virtual Circuit Session Configuration on Router1 Is Accurate on page 307](#)
- [Verifying That the Ethernet Interface on Router2 Is Configured Correctly on page 308](#)
- [Verifying the Status of the MIC on Router2 on page 308](#)
- [Verify That OSPF Configuration on Router2 Is Accurate on page 308](#)
- [Verify That LDP Configuration on Router2 Is Accurate on page 309](#)
- [Verify That Layer 2 Virtual Circuit Session Configuration on Router2 Is Accurate on page 309](#)

Verifying That The ATM Interface on Router1 Is Configured Correctly

Purpose To verify that the ATM interface (at-1/2/0) on Router1 is configured correctly.

Action From operational mode, enter the **show interfaces** command.

```
user@host> show interfaces at-1/2/0 terse
```

Interface	Admin	Link	Proto	Local	Remote
at-1/2/0	up	up			
at-1/2/0.0	up	up	ccc		
at-1/2/0.32767	up	up			

Meaning The ATM interface on Router1 is operational.

Verifying The Status of the MIC on Router1

Purpose To verify the status of the MIC.

Action From operational mode, enter the **show chassis fpc pic-status** command.

```
user@host> show chassis fpc pic-status
```

```
Slot 0 Online
  PIC 2 Online 10x 1GE(LAN) -EH SFP
  PIC 3 Online 10x 1GE(LAN) -EH SFP
Slot 1 Online
  PIC 0 Online 2x0C12/8x0C3 CC-CE
  PIC 2 Online 10x 1GE(LAN) SFP
  PIC 3 Online 10x 1GE(LAN) SFP
Slot 2 Online
  PIC 0 Online 4x 10GE(LAN) SFP+
```

Meaning ATM MIC on FPC slot 1 is online and operational.

Verify That OSPF Configuration on Router1 Is Accurate

Purpose To verify that routers are adjacent and able to exchange OSPF data.

Action From operational mode, enter the **show ospf neighbor** command.

```
user@host> show ospf neighbor
```

Address	Interface	State	ID	Pri	Dead
192.0.0.1	ge-1/0/0.0	Full	198.51.100.2	128	36

Meaning The adjacent router is online and can accept OSPF data.

Verify That LDP Configuration on Router1 Is Accurate

Purpose To view LDP session information.

Action From operational mode, enter the **show ldp session** command.

```
user@host> show ldp session
Address State Connection Hold time Adv. Mode
198.51.100.2 Operational Open 26 DU
```

Meaning The output indicates that the session is operational and that the connection is open. It also indicates that the session will close in 26 seconds.

Verify That Layer 2 Virtual Circuit Session Configuration on Router1 Is Accurate

Purpose To view the Layer 2 virtual circuits from the local PE router (Router1) to its neighbors.

Action From operational mode, enter the **show l2circuit connections** command.

```
user@host> show l2circuit connections
Layer-2 Circuit Connections:
Legend for connection status (St)
EI -- encapsulation invalid NP -- interface h/w not present
MM -- mtu mismatch Dn -- down
EM -- encapsulation mismatch VC-Dn -- Virtual circuit Down
CM -- control-word mismatch Up -- operational
VM -- vlan id mismatch CF -- Call admission control failure
OL -- no outgoing label IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC TM -- TDM misconfiguration
BK -- Backup Connection ST -- Standby Connection
CB -- rcvd cell-bundle size bad SP -- Static Pseudowire
LD -- local site signaled down RS -- remote site standby
RD -- remote site signaled down HS -- Hot-standby Connection
XX -- unknown
Legend for interface status
Up -- operational
Dn -- down

Neighbor: 198.51.100.2
Interface Type St Time last up # Up
trans
at-1/0/0.0(vc 5) rmt Up May 24 22:01:44 2016
1
Remote PE: 198.51.100.2, Negotiated control-word: No Encapsulation:
VLAN
Incoming label: 299776, Outgoing label: 300192
Negotiated PW status TLV: No
Local interface: at-1/0/0.0, Status: Up, Encapsulation: VLAN Qin-Q
and VCI Interworking
Flow Label Transmit: No, Flow Label Receive: No
```

Meaning The command output displays the Layer 2 virtual circuits from Router1 to its neighbors.

Verifying That the Ethernet Interface on Router2 Is Configured Correctly

Purpose To verify that the Ethernet interface (ge-1/0/1) on Router2 is configured correctly.

Action From operational mode, enter the **show interfaces** command.

```
user@host> show interfaces ge-1/0/1 terse
Interface Admin Link Proto Local Remote
ge-1/0/1      up   up
ge-1/0/1.0    up   up   ccc
ge-1/0/1.32767 up   up   multiservice
```

Meaning The Ethernet interface on Router2 is operational.

Verifying the Status of the MIC on Router2

Purpose To verify the status of the MIC.

Action From operational mode, enter the **show chassis fpc pic-status** command.

```
user@host> show chassis fpc pic-status
Slot 2 Online MPC Type 1 3D Q
PIC 0 Online 10x 1GE(LAN) SFP
PIC 1 Online 10x 1GE(LAN) SFP
PIC 2 Online 2x0C12/8x0C3 CC-CE
PIC 0 Online 4x 10GE(LAN) SFP+
```

Meaning MIC 2 on MPC slot 2 is online and operational.

Verify That OSPF Configuration on Router2 Is Accurate

Purpose To verify that routers are adjacent and able to exchange OSPF data.

Action From operational mode, enter the **show ospf neighbor** command.

```
user@host> show ospf neighbor
Address      Interface      State      ID          Pri  Dead
192.0.0.1    ge-1/0/0.0     Full      198.51.100.0 128  32
```


Meaning The adjacent router is online and can accept OSPF data.

Verify That LDP Configuration on Router2 Is Accurate

Purpose To view LDP session information.

Action From operational mode, enter the **show ldp session** command.

```
user@host> show ldp session
Address State Connection Hold time Adv. Mode
198.51.100.0 Operational Open 22 DU
```

Meaning The output indicates that the session is operational and that the connection is open. It also indicates that the session will close in 22 seconds.

Verify That Layer 2 Virtual Circuit Session Configuration on Router2 Is Accurate

Purpose To view the Layer 2 virtual circuits from the local PE router (Router2) to its neighbors.

Action From operational mode, enter the **show l2circuit connections** command.

```
user@host> show l2circuit connections
Layer-2 Circuit Connections:
Legend for connection status (St)
EI -- encapsulation invalid NP -- interface h/w not present
MM -- mtu mismatch Dn -- down
EM -- encapsulation mismatch VC-Dn -- Virtual circuit Down
CM -- control-word mismatch Up -- operational
VM -- vlan id mismatch CF -- Call admission control failure
OL -- no outgoing label IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC TM -- TDM misconfiguration
BK -- Backup Connection ST -- Standby Connection
CB -- rcvd cell-bundle size bad SP -- Static Pseudowire
LD -- local site signaled down RS -- remote site standby
RD -- remote site signaled down HS -- Hot-standby Connection
XX -- unknown
Legend for interface status
Up -- operational
Dn -- down

Neighbor: 198.51.100.0
Interface Type St Time last up # Up
trans
ge-1/0/1.0(vc 5) rmt Up May 24 22:01:45 2016
1
Remote PE: 198.51.100.0, Negotiated control-word: No Encapsulation:
VLAN Qin-Q and VCI Interworking
Incoming label: 300192, Outgoing label: 299776 Negotiated PW
status TLV: No
Local interface: ge-1/0/1.0, Status: Up, Encapsulation: VLAN
Flow Label Transmit: No, Flow Label Receive: No
```

Meaning The command output displays the Layer 2 virtual circuits from Router2 to its neighbors.

- Related Documentation**
- [ATM-To-Ethernet Interworking on ATM MICs on page 291](#)
 - [Example: Configuring ATM-to-Ethernet Interworking on ATM MIC on page 299](#)

PART 2

Special Router Interfaces

- [Configuring Discard Interfaces on page 313](#)
- [Configuring IP Demultiplexing Interfaces on page 319](#)
- [Configuring the Loopback Interface on page 335](#)

CHAPTER 6

Configuring Discard Interfaces

- [Discard Interfaces Overview on page 313](#)
- [Configuring Discard Interfaces on page 314](#)

Discard Interfaces Overview

The discard interface *dsc* is not a physical interface, but a virtual interface that discards packets.

The following sections explain discard interfaces in detail:

- [Understanding Discard Interfaces on page 313](#)
- [Guidelines to Follow When Configuring a Discard Interface on page 313](#)

Understanding Discard Interfaces

The discard interface allows you to identify the ingress point of a denial-of-service (DoS) attack. When your network is under attack, the target host IP address is identified, and the local policy forwards attacking packets to the discard interface. When traffic is routed out of the discard interface, the traffic is silently discarded.

The discard interface allows you to protect a network from DoS attacks by identifying the target IP address that is being attacked and configuring a policy to forward all packets to a discard interface. All packets forwarded to the discard interface are dropped. See *Example: Forwarding Packets to the Discard Interface*.

You can configure the **inet** family protocol on the discard interface, which allows you to apply an output filter to the interface. If you apply an output filter to the interface, the action specified by the filter is executed before the traffic is discarded.

Once you configure a discard interface, you must then configure a local policy to forward attacking traffic to the discard interface.

Guidelines to Follow When Configuring a Discard Interface

Keep the following guidelines in mind when configuring the discard interface:

- Only the logical interface unit 0 is supported.
- The **filter** and **address** statements are optional.

- Although you can configure an input filter and a filter group, these configuration statements have no effect because traffic is not transmitted from the discard interface.
- The discard interface does not support class of service (CoS).

**Related
Documentation**

- [Configuring Discard Interfaces on page 314](#)
- [Example: Forwarding Packets to the Discard Interface](#)

Configuring Discard Interfaces

The discard (dsc) interface is not a physical interface, but a virtual interface that discards packets. You can configure one discard interface. This interface allows you to identify the ingress point of a denial-of-service (DoS) attack. When your network is under attack, the target host IP address is identified, and the local policy forwards attacking packets to the discard interface. Traffic routed out of the discard interface is silently discarded.

The following sections explain how to forward packets to a discard interface by configuring a discard interface with an input filter and an output filter along with an input policy to associate a community with the discard interface and an output policy to set up the community on the routes injected into the network:

- [Configure a Discard Interface on page 314](#)
- [Configure an Input Filter with Input policy on page 315](#)
- [Configure an Output Filter with Output policy on page 316](#)

Configure a Discard Interface

To configure a discard interface:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level.

```
[edit]  
user@host# edit interfaces
```

2. Configure the discard interface.

```
[edit interfaces]  
user@host# edit dsc
```

3. Configure the logical interface and the protocol family.

```
[edit interfaces dsc]  
user@host# edit unit 0 family family
```

4. Configure an input filter to be applied to received packets.

```
[edit interfaces dsc unit 0 family family]
```

```
user@host# set filter input filter-name
```

5. Configure an output filter to be applied to transmitted packets.

```
[edit interfaces dsc unit 0 family family]  
user@host# set filter output filter-name
```

6. Configure the interface IP address and the remote address of the connection.

```
[edit interfaces dsc unit 0 family family]  
user@host# set address ip-address destination ip-address
```

7. Commit the configuration and go to the top of the hierarchy level.

```
[edit interfaces dsc unit 0 family family]  
user@host# commit  
user@host# top
```

Configure an Input Filter with Input policy

You must configure an input policy to associate a community with the discard interface.

To configure an input policy to associate a community with the discard interface:

1. In configuration mode, go to the **[edit policy-options]** hierarchy level.

```
[edit]  
user@host# edit policy-options
```

2. Configure the BGP community information option with a name and configure the number of community members as needed.

```
[edit policy-options]  
user@host# set community community-name members community-id
```

3. Configure a routing policy.

```
[edit policy-options]  
user@host# edit policy-statement statement-name
```

4. Configure a policy term with a name.

```
[edit policy-options policy-statement statement-name]  
user@host# edit term term-variable
```

5. Configure the conditions to match the source of a route with the **from** statement with the BGP community members.

```
[edit policy-options policy-statement statement-name term term-variable]  
user@host# set from community value
```

6. Configure the action that is to be taken when the if and to conditions match with the **then** statement. In this case, configure the next-hop address of the remote end of the point-to-point interface and accept the action.

```
[edit policy-options policy-statement statement-name term term-variable]  
user@host# set then next-hop address  
user@host# set then accept
```

7. Commit the configuration and go to the top of the hierarchy level.

```
[edit policy-options policy-statement statement-name term term-variable]  
user@host# commit  
user@host# top
```

Configure an Output Filter with Output policy

You must configure an output policy to set up the community on the routes injected into the network.

To configure an output policy.

1. In configuration mode, go to the **[edit policy-options]** hierarchy level.

```
[edit]  
user@host# edit policy-options
```

2. Configure a routing policy.

```
[edit policy-options]  
user@host# edit policy-statement statement-name
```

3. Configure a policy term with a name.

```
[edit policy-options policy-statement statement-name]  
user@host# edit term term-variable
```

4. Configure the list of prefix-lists of routes to match with a name.

```
[edit policy-options policy-statement statement-name term term-variable]  
user@host# set from prefix-list name
```


5. Configure the action that is to be taken when the if and to conditions match with the **then** statement. In this case, configure the BGP community properties (set, add, and delete) associated with a route.

```
[edit policy-options policy-statement statement-name term term-variable]  
user@host# set then community (set | add | delete) community-name
```

6. Commit the configuration and go to the top of the hierarchy level.

```
[edit interfaces dsc unit 0 family family]  
user@host# commit  
user@host# top
```

Related Documentation

- [Discard Interfaces Overview on page 313](#)

CHAPTER 7

Configuring IP Demultiplexing Interfaces

- [Demultiplexing Interface Overview on page 319](#)
- [Configuring an IP Demultiplexing Interface on page 322](#)
- [Configuring a VLAN Demultiplexing Interface on page 327](#)

Demultiplexing Interface Overview

Demultiplexing (demux) interfaces are logical interfaces that share a common, underlying interface. You can create logical subscriber interfaces using static or dynamic demultiplexing interfaces. In addition, you can use IP demultiplexing interfaces or VLAN demultiplexing interfaces when creating logical subscriber interfaces.

Demux interfaces are supported on M120 or MX Series routers only.

Demux interfaces support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.



NOTE: You can also configure demux interfaces dynamically. For information about how to configure dynamic IP demux or dynamic VLAN demux interfaces, see *Configuring Dynamic Subscriber Interfaces Using IP Demux Interfaces in Dynamic Profiles* or *Configuring Dynamic Subscriber Interfaces Using VLAN Demux Interfaces in Dynamic Profiles*.

To configure static demux interfaces, see “[Configuring a VLAN Demultiplexing Interface](#)” on page 327 and “[Configuring an IP Demultiplexing Interface](#)” on page 322.

- [IP Demux Interface Overview on page 319](#)
- [VLAN Demux Interface Overview on page 320](#)
- [Guidelines to Remember When Configuring A Demux Interface on page 320](#)
- [MAC Address Validation on Static Demux Interfaces on page 321](#)

IP Demux Interface Overview

IP demux interfaces use the IP source address or IP destination address to demultiplex received packets when the subscriber is not uniquely identified by a Layer 2 circuit.

To determine which IP demux interface to use, the destination or source prefix is matched against the destination or source address of packets that the underlying interface receives. The underlying interface family type must match the demux interface prefix type.

VLAN Demux Interface Overview

VLAN demux interfaces use the VLAN ID to demultiplex received packets when the subscriber is not uniquely identified. A VLAN demux interface uses an underlying logical interface to receive packets.

To determine which VLAN demux interface to use, the VLAN ID is matched against that which the underlying interface receives.



.....

NOTE: VLAN demux subscriber interfaces over aggregated Ethernet physical interfaces are supported only for MX Series routers that have only Trio MPCs installed. If the router has other MPCs in addition to Trio MPCs, the CLI accepts the configuration but errors are reported when the subscriber interfaces are brought up.

.....

Guidelines to Remember When Configuring A Demux Interface

Keep the following guidelines in mind when configuring the demux interface:

- Demux interfaces are supported on M120 or MX Series routers only.
- Only demux0 is supported. If you configure another demux interface, such as demux1, the configuration commit fails.
- You can configure only one **demux0** interface per chassis, but you can define logical demux interfaces on top of it (for example, **demux0.1**, **demux0.2**, and so on).
- If the address in a received packet does not match any demux prefix, the packet is logically received on the underlying interface. For this reason, the underlying interface is often referred to as the *primary* interface.
- [Points to Remember When Configuring an IP Demux Interface on page 321](#)
- [Points to Remember When Configuring a VLAN Demux Interface on page 321](#)

Points to Remember When Configuring an IP Demux Interface

In addition to the guidelines in “[Guidelines to Remember When Configuring A Demux Interface](#)” on page 320, the following guidelines are to be noted when configuring an IP demux interface:

- You must associate demux interfaces with an underlying logical interface.



NOTE: IP demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

- The demux underlying interface must reside on the same logical system as the demux interfaces that you configure over it.
- IP demux interfaces currently supports the Internet Protocol version 4 (IPv4) suite inet and Internet Protocol version 6 (IPv6) suite inet6 family types.
- You can configure more than one demux prefix for a given demux unit. However, you cannot configure the exact same demux prefix on two different demux units with the same underlying interface.
- You can configure overlapping demux prefixes on two different demux units with the same underlying prefix. However, under this configuration, best match rules apply (in other words, the most specific prefix wins).

Points to Remember When Configuring a VLAN Demux Interface

In addition to the guidelines in “[Guidelines to Remember When Configuring A Demux Interface](#)” on page 320, the following guidelines are to be noted when configuring a VLAN demux interface:

- You must associate VLAN demux interfaces with an underlying logical interface.



NOTE: VLAN demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

- The demux underlying interface must reside on the same logical system as the demux interfaces that you configure over it.
- VLAN demux interfaces currently supports the Internet Protocol version 4 (IPv4) suite inet and Internet Protocol version 6 (IPv6) suite inet6 family types.

MAC Address Validation on Static Demux Interfaces

MAC address validation enables the router to validate that received packets contain a trusted IP source and an Ethernet MAC source address.

MAC address validation is supported on static demux interfaces on MX Series routers only.

There are two types of MAC address validation that you can configure:

- [Loose on page 322](#)
- [Strict on page 322](#)

Loose

Forwards packets when both the IP source address and the MAC source address match one of the trusted address tuples.

Drops packets when the IP source address matches one of the trusted tuples, but the MAC address does not support the MAC address of the tuple

Continues to forward packets when the source address of the incoming packet does not match any of the trusted IP addresses.

Strict

Forwards packets when both the IP source address and the MAC source address match one of the trusted address tuples.

Drops packets when the MAC address does not match the tuple's MAC source address, or when IP source address of the incoming packet does not match any of the trusted IP addresses.

Related Documentation

- [Associating VLAN IDs to VLAN Demux Interfaces](#)
- [Binding VLAN IDs to Logical Interfaces](#)
- [Configuring an IP Demultiplexing Interface on page 322](#)
- [Configuring a VLAN Demultiplexing Interface on page 327](#)
- [Subscriber Interfaces and Demultiplexing Overview](#)

Configuring an IP Demultiplexing Interface

Demultiplexing (demux) interfaces are logical interfaces that share a common, underlying interface. You can configure IP demultiplexing interfaces or VLAN demultiplexing interfaces.

To configure an IP demux interface, you must configure the demux prefixes that are used by the underlying interface and then configure the IP demultiplexing interface as explained in the following tasks:

1. [Configuring an IP Demux Underlying Interface on page 323](#)
2. [Configuring the IP Demux Interface on page 324](#)
3. [Configuring MAC Address Validation on Static IP Demux Interfaces on page 326](#)

Configuring an IP Demux Underlying Interface

An IP demux interface uses an underlying logical interface to receive packets. To determine which IP demux interface to use, the destination or source prefix is matched against the destination or source address of packets that the underlying interface receives. The underlying interface family type must match the demux interface prefix type.



NOTE: IP demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

To configure a logical interface as an IP demux underlying interface with demux source:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as fe-x/y/z and the logical interface with the **unit** statement. Note that IP demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces. In this procedure, we show a Fast Ethernet interface as an example.

```
[edit interfaces]
user@host# edit fe-x/y/z unit logical-unit-number
```

3. Configure the logical demux source family type on the IP demux underlying interface as inet or inet6, or both.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set demux-source (inet | inet6)
```

or

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set demux-source [inet inet6]
```

4. (Optional) To improve datapath performance for DHCPv4 subscribers, specify that only subscribers with 32-bit prefixes are allowed to come up on the interface.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set host-prefix-only
```



NOTE: This step requires that you specify the **demux-source** as only inet. A commit error occurs if you specify only inet6 or both inet and inet6.

5. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces fe-x/y/z unit logical-unit-number]  
user@host# commit  
user@host# top
```

To configure a logical interface as an IP demux underlying interface with demux destination:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]  
user@host# edit interfaces
```

2. Configure the interface as fe-x/y/z and the logical interface with the **unit** statement. Note that IP demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

```
[edit interfaces]  
user@host# edit fe-x/y/z unit logical-unit-number unit logical-unit-number
```

3. Configure the logical demux destination family type on the IP demux underlying interface as inet or inet6.

```
[edit interfaces fe-x/y/z unit logical-unit-number]  
user@host# set demux-destination (inet | inet6)
```

4. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces fe-x/y/z unit logical-unit-number]  
user@host# commit  
user@host# top
```

Configuring the IP Demux Interface

You can configure one or more logical demux source prefixes or destination prefixes after specifying an underlying interface for the static demux interface to use. This underlying interface must reside on the same logical system as the demux interface.

You configure demux prefixes for use by the underlying interface. The demux prefixes can represent individual hosts or networks. For a given demux interface unit, you can configure either demux source or demux destination prefixes but not both.

You can choose not to configure a demux source or demux destination prefix. This type of configuration results in a transmit-only interface.

To configure the IP demux interface with source prefix:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:


```
[edit]
user@host# edit interfaces
```

2. Configure the interface as a logical demux interface (for example, demux0 interface) and configure the logical interface with the **unit** statement.



NOTE: You can configure only one demux0 interface per chassis, but you can define logical demux interfaces on top of it (for example, demux0.1, demux0.2, and so on).

```
[edit interfaces]
user@host# edit demux0 unit logical-unit-number
```

3. Configure the underlying interface on which the demux interface is running under the **demux-options** statement.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# set demux-options underlying-interface interface-name
```

4. Configure the protocol family.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# edit family family
```

5. Configure one or more logical demux source prefixes (IP address). The prefixes are matched against the source address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# set demux-source source-prefix
```

6. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# commit
user@host# top
```

To configure the IP demux interface with destination prefix:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as a logical demux interface (for example, demux0 interface) and configure the logical interface with the **unit** statement.



NOTE: You can configure only one demux0 interface per chassis, but you can define logical demux interfaces on top of it (for example, demux0.1, demux0.2, and so on).

```
[edit interfaces]
user@host# edit demux0 unit logical-unit-number
```

3. Configure the underlying interface on which the demux interface is running under the **demux-options** statement.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# set demux-options underlying-interface interface-name
```

4. Configure the protocol family.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# edit family family
```

5. Configure one or more logical demux destination prefixes. The prefixes are matched against the destination address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# set demux-destination destination-prefix
```

6. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# commit
user@host# top
```

Configuring MAC Address Validation on Static IP Demux Interfaces

MAC address validation enables the router to validate that received packets contain a trusted IP source and an Ethernet MAC source address.

To configure MAC address validation for an IP demux interface:

1. In configuration mode, go to the **[edit interfaces demux0 unit *logical-unit-number*]** hierarchy level:

```
[edit]
```

```
user@host# edit interfaces demux0 unit logical-unit-number
```

2. Configure the protocol family for the interface.

```
[edit interfaces demux0 unit logical-unit-number]  
user@host# edit family family
```

3. Configure the **mac-validate** statement to validate source MAC address with loose or strict options.

```
[edit interfaces demux0 unit logical-unit-number family family]  
user@host# set mac-validate (loose | strict)
```

4. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number family family]  
user@host# commit  
user@host# top
```

Related Documentation

- [Configuring a VLAN Demultiplexing Interface on page 327](#)
- [Demultiplexing Interface Overview on page 319](#)

Configuring a VLAN Demultiplexing Interface

Demultiplexing (demux) interfaces are logical interfaces that share a common, underlying interface. You can configure IP demultiplexing interfaces or VLAN demultiplexing interfaces.

To configure a VLAN demux interface, you must configure the demux prefixes that are used by the underlying interface and then configure the VLAN demultiplexing interface as explained by the following tasks:

1. [Configuring a VLAN Demux Underlying Interface on page 327](#)
2. [Configuring the VLAN Demux Interface on page 329](#)
3. [Configuring MAC Address Validation on Static VLAN Demux Interfaces on page 331](#)
4. [Verifying a Demux Interface Configuration on page 332](#)

Configuring a VLAN Demux Underlying Interface

A VLAN demux interface uses an underlying logical interface to receive packets. To determine which VLAN demux interface to use, the VLAN ID is matched against that which the underlying interface receives.



NOTE: VLAN demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

VLAN demux subscriber interfaces over aggregated Ethernet physical interfaces are supported only for MX Series routers that have only Trio MPCs installed. If the router has other MPCs in addition to Trio MPCs, the CLI accepts the configuration but errors are reported when the subscriber interfaces are brought up

To configure a logical interface as a VLAN demux underlying interface with demux source:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as fe-x/y/z and the logical interface with the **unit** option.

```
[edit interfaces]
user@host# edit fe-x/y/z unit logical-unit-number unit logical-unit-number
```

3. Configure the VLAN ID. The VLAN ID is used to determine which VLAN demux interface to use, that is the VLAN ID is matched against that which the underlying interface receives.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set vlan-id number
```

4. Configure the logical demux source family type on the VLAN demux underlying interface as inet or inet6.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set demux-source (inet | inet6)
```

5. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# commit
user@host# top
```

To configure a logical interface as a VLAN demux underlying interface with demux destination:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
```

```
user@host# edit interfaces
```

2. Configure the interface as fe-x/y/z and the logical interface with the **unit** option.

```
[edit interfaces]
user@host# edit fe-x/y/z unit logical-unit-number unit logical-unit-number
```

3. Configure the VLAN ID. The VLAN ID is used to determine which VLAN demux interface to use, that is the VLAN ID is matched against that which the underlying interface receives.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set vlan-id number
```

4. Configure the logical demux destination family type on the VLAN demux underlying interface as inet or inet6.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set demux-destination (inet | inet6)
```

5. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# commit
user@host# top
```

Configuring the VLAN Demux Interface

You can configure one or more logical demux source prefixes or destination prefixes after specifying an underlying interface for the static demux interface to use. This underlying interface must reside on the same logical system as the demux interface.

You configure demux prefixes for use by the underlying interface. The demux prefixes can represent individual hosts or networks. For a given demux interface unit, you can configure either demux source prefix or demux destination prefixes but not both.

You can choose not to configure a demux source prefix or a demux destination prefix. This type of configuration results in a transmit-only interface

To configure VLAN demux interface with demux source prefix:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as a logical demux interface (for example, demux0 interface) and configure the logical interface with the **unit** statement.



NOTE: You can configure only one demux0 interface per chassis, but you can define logical demux interfaces on top of it (for example, demux0.1, demux0.2, and so on).

```
[edit interfaces]
user@host# edit demux0 unit logical-unit-number
```

3. Configure the underlying interface on which the demux interface is running under the **demux-options** statement.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# set demux-options underlying-interface interface-name
```

4. Configure the protocol family for the interface.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# edit family family
```

5. Configure one or more logical demux source prefixes. The prefixes are matched against the source address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# set demux-source source-prefix
```

6. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# commit
user@host# top
```

To configure VLAN demux interface with demux destination prefix:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as a logical demux interface (for example, demux0 interface) and configure the logical interface with the **unit** statement.



NOTE: You can configure only one demux0 interface per chassis, but you can define logical demux interfaces on top of it (for example, demux0.1, demux0.2, and so on).

```
[edit interfaces]
user@host# edit demux0 unit logical-unit-number
```

3. Configure the underlying interface on which the demux interface is running under the **demux-options** statement.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# set demux-options underlying-interface interface-name
```

4. Configure the protocol family for the interface.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# edit family family
```

5. Configure one or more logical demux destination prefixes. The prefixes are matched against the destination address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# set demux-destination destination-prefix
```

6. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# commit
user@host# top
```

Configuring MAC Address Validation on Static VLAN Demux Interfaces

MAC address validation enables the router to validate that received packets contain a trusted IP source and an Ethernet MAC source address.

To configure MAC address validation for a VLAN demux interface:

1. In configuration mode, go to the **[edit interfaces demux0 unit *logical-unit-number*]** hierarchy level:

```
[edit]
user@host# edit interfaces demux0 unit logical-unit-number
```

2. Configure the protocol family for the interface.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# edit family family
```

3. Configure the **mac-validate** statement to validate source MAC address with loose or strict options.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# set mac-validate (loose | strict)
```

4. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# commit
user@host# top
```

Verifying a Demux Interface Configuration

Purpose Check the configuration of a demux interface and its underlying interface when the following are configured:

- Two VLANs are configured, where each VLAN consists of two IP demux interfaces.
- One VLAN demultiplexes based on the source address
- The other VLAN demultiplexes based on the destination address.

Action From configuration mode on the MX Series router, run the **show interfaces fe-0/0/0** and **show interfaces demux0** configuration mode commands.

```
user@host> show interfaces fe-0/0/0
```

```
vlan-tagging;
unit 100 {
  vlan-id 100;
  demux-source inet; # Enable demux of inet prefixes
  family inet {
    address 10.1.1.1/24;
    filter {
      input vlan1-primary-in-filter;
      output vlan1-primary-out-filter;
    }
    mac-validate loose;
  }
}
unit 200 {
  vlan-id 200;
  demux-destination inet; # Enable demux of inet using destination addresses
  family inet {
    address 20.1.1.1/24;
  }
}
```



```

}
unit 300 {
  vlan-id 300;
  demux-source inet; # Enable demux of inet using source addresses
  family inet {
    address 20.1.2.1/24;
  }
}

```

user@host> show interfaces demux0

```

unit 101 {
  description vlan1-sub1;
  demux-options {
    underlying-interface fe-0/0/0.100;
  }
  family inet {
    demux-source 10.1.1.0/24;
    filter {
      input vlan1-sub1-in-filter;
      output vlan1-sub1-out-filter;
    }
  }
  mac-validate loose;
}
unit 102 {
  description vlan1-sub2;
  demux-options {
    underlying-interface fe-0/0/0.100;
  }
  family inet {
    demux-source {
      10.1.0.0/16;
      10.2.1.0/24;
    }
    filter {
      input vlan1-sub2-in-filter;
      output vlan1-sub2-out-filter;
    }
  }
  mac-validate loose;
}
unit 202 {
  description vlan2-sub2;
  demux-options {
    underlying-interface fe-0/0/0.200;
  }
  family inet {
    demux-destination 100.1.2.0/24;
  }
}
unit 302 {
  description vlan2-sub2;
  demux-options {
    underlying-interface fe-0/0/0.300;
  }
  family inet {
    demux-source 100.1.2.0/24;
  }
}

```

```
}  
}
```

**Related
Documentation**

- [Configuring an IP Demultiplexing Interface on page 322](#)
- [Demultiplexing Interface Overview on page 319](#)

Configuring the Loopback Interface

- [Understanding the Loopback Interface on page 335](#)
- [Configuring the Loopback Interface on page 336](#)

Understanding the Loopback Interface

The loopback address (**lo0**) has several uses, depending on the particular Junos feature being configured. It can perform the following functions:

- Device identification—The loopback interface is used to identify the device. While any interface address can be used to determine if the device is online, the loopback address is the preferred method. Whereas interfaces might be removed or addresses changed based on network topology changes, the loopback address never changes.

When you ping an individual interface address, the results do not always indicate the health of the device. For example, a subnet mismatch in the configuration of two endpoints on a point-to-point link makes the link appear to be inoperable. Pinging the interface to determine whether the device is online provides a misleading result. An interface might be unavailable because of a problem unrelated to the device's configuration or operation.

- Routing information—The loopback address is used by protocols such as OSPF to determine protocol-specific properties for the device or network. Further, some commands such as **ping mpls** require a loopback address to function correctly.
- Packet filtering—Stateless firewall filters can be applied to the loopback address to filter packets originating from, or destined for, the Routing Engine.

The Internet Protocol (IP) specifies a loopback network with the (IPv4) address **127.0.0.0/8**. Most IP implementations support a loopback interface (**lo0**) to represent the loopback facility. Any traffic that a computer program sends on the loopback network is addressed to the same computer. The most commonly used IP address on the loopback network is **127.0.0.1** for IPv4 and **::1** for IPv6. The standard domain name for the address is **localhost**.

The device also includes an internal loopback address (**lo0.16384**). The internal loopback address is a particular instance of the loopback address with the logical unit number 16384. Junos OS creates the loopback interface for the internal routing instance. This interface prevents any filter on **lo0.0** from disrupting internal traffic.

- Related Documentation**
- [Configuring a Loopback Interface](#)
 - [Understanding Interfaces](#)
 - [Understanding Management Interfaces](#)
 - [Understanding the Discard Interface](#)

Configuring the Loopback Interface

- [Configuring the Loopback Interface on page 336](#)
- [Example: Configuring Two Addresses on the Loopback Interface with Host Routes on page 337](#)
- [Example: Configuring Two Addresses on the Loopback Interface with Subnetwork Routes on page 337](#)
- [Example: Configuring an IPv4 and an IPv6 Address on the Loopback Interface with Subnetwork Routes on page 338](#)

Configuring the Loopback Interface

When specifying the loopback address, do not include a destination prefix. Also, in most cases, do not specify a loopback address on any unit other than unit 0.



NOTE: For Layer 3 virtual private networks (VPNs), you can configure multiple logical units for the loopback interface. This allows you to configure a logical loopback interface for each virtual routing and forwarding (VRF) routing instance. For more information, see the *Junos OS VPNs Library for Routing Devices*.

For some applications, such as SSL for Junos XML protocol, the address for the interface `lo0.0` must be `127.0.0.1`.

You can configure loopback interfaces using a subnetwork address for both `inet` and `inet6` address families. Many protocols require a subnetwork address as their source address. Configuring a subnetwork loopback address as a donor interface enables these protocols to run on unnumbered interfaces.

If you configure the loopback interface, it is automatically used for unnumbered interfaces. If you do not configure the loopback interface, the router chooses the first interface to come online as the default. If you configure more than one address on the loopback interface, we recommend that you configure one to be the primary address to ensure that it is selected for use with unnumbered interfaces. By default, the primary address is used as the source address when packets originate from the interface.

For more information about unnumbered interfaces, see [“Configuring an Unnumbered Interface” on page 220](#). For more information about primary addresses, see [“Configuring the Interface Address” on page 209](#).

On the router, you can configure one physical loopback interface, **lo0**, and one or more addresses on the interface.

1. To configure the physical loopback interface, include the following statements at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
lo0 {
  unit 0 {
    family inet {
      address loopback-address;
      address <loopback-address2>;
      ...
    }
    family inet6 {
      address loopback-address;
    }
  }
}
```

Example: Configuring Two Addresses on the Loopback Interface with Host Routes

To configure two addresses on the loopback interface with host routes:

```
[edit]
user@host# edit interfaces lo0 unit 0 family inet
[edit interfaces lo0 unit 0 family inet]
user@host# set address 172.16.0.1
[edit interfaces lo0 unit 0 family inet]
user@host# set address 10.0.0.1
[edit interfaces lo0 unit 0 family inet]
user@host# top
[edit]
user@host# show
interfaces {
  lo0 {
    unit 0 {
      family inet {
        10.0.0.1;
        127.0.0.1;
        172.16.0.1;
      }
    }
  }
}
```

Example: Configuring Two Addresses on the Loopback Interface with Subnetwork Routes

To configure two addresses on the loopback interface with subnetwork routes:

```
[edit]
user@host# edit interfaces lo0 unit 0 family inet
```

```

[edit interfaces lo0 unit 0 family inet]
user@host# set address 192.16.0.1/24
[edit interfaces lo0 unit 0 family inet]
user@host# set address 10.2.0.1/16
[edit interfaces lo0 unit 0 family inet]
user@host# top
[edit]
user@host# show
interfaces {
  lo0 {
    unit 0 {
      family inet {
        10.2.0.1/16;
        127.0.0.1/32;
        192.16.0.1/24;
      }
    }
  }
}

```

Example: Configuring an IPv4 and an IPv6 Address on the Loopback Interface with Subnetwork Routes

To configure an IPv4 and an IPv6 address on the loopback interface with subnetwork routes:

```

[edit]
user@host# edit interfaces lo0 unit 0 family inet
[edit interfaces lo0 unit 0 family inet]
user@host# set address 192.16.0.1/24
[edit interfaces lo0 unit 0 family inet]
user@host# up
[edit interfaces lo0 unit 0 family]
user@host# edit interfaces lo0 unit 0 family inet6
[edit interfaces lo0 unit 0 family inet6]
user@host# set address 3ffe::1:200:f8ff:fe75:50df/64
[edit interfaces lo0 unit 0 family inet6]
user@host# top
[edit]
user@host# show
interfaces {
  lo0 {
    unit 0 {
      family inet {
        127.0.0.1/32;
        192.16.0.1/24;
      }
      family inet6 {
        3ffe::1:200:f8ff:fe75:50df/64;
      }
    }
  }
}

```

- Related Documentation**
- *Junos OS VPNs Library for Routing Devices*
 - [Configuring an Unnumbered Interface on page 220](#)
 - [Configuring the Interface Address on page 209](#)

PART 3

Serial Interfaces

- [Serial Interfaces Overview on page 343](#)
- [Configuring Serial Interfaces on page 345](#)

CHAPTER 9

Serial Interfaces Overview

- [Serial Interfaces Overview on page 343](#)

Serial Interfaces Overview

Devices that communicate over a serial interface are divided into two classes: data terminal equipment (DTE) and data circuit-terminating equipment (DCE). Juniper Networks Serial Physical Interface Cards (PICs) have two ports per PIC and support full-duplex data transmission. These PICs support DTE mode only. On the Serial PIC, you can configure three types of serial interfaces:

- EIA-530—An Electronics Industries Alliance (EIA) standard for the interconnection of DTE and DCE using serial binary data interchange with control information exchanged on separate control circuits.
- V.35—An ITU-T standard describing a synchronous, physical layer protocol used for communications between a network access device and a packet network. V.35 is most commonly used in the United States and in Europe.
- X.21—An ITU-T standard for serial communications over synchronous digital lines. The X.21 protocol is used primarily in Europe and Japan.

The following standards apply to serial interfaces:

- TIA/EIA Standard 530, *High-Speed 25-Position Interface for Data Terminal Equipment and Data Circuit-Terminating Equipment*, defines the signals on the cable and specifies the connector at the end of the cable.
- TIA/EIA Standard 232, *Interface between Data Terminal Equipment and Data Circuit-Terminating Equipment Employing Serial Binary Data Interchange*, describes the physical interface and protocol for serial data communication.
- ITU-T Recommendation V.35, *Data Transmission at 48 kbit/s Using 60-108 kHz Group Band Circuits*. Note that the Juniper Networks Serial PIC supports V.35 interfaces with speeds higher than 48 kilobits per second.
- ITU-T Recommendation X.21, *Interface Between Data Terminal Equipment and Data Circuit-Terminating Equipment for Synchronous Operation on Public Data Networks*.

There are no serial interface-specific logical properties. For information about general logical properties that you can configure, see *Configuring Logical Interface Properties*. This

support on serial interfaces is the same as the existing LFI and MLPPP support on T1 and E1 interfaces.

**Related
Documentation**

- [Example: Physical Interface Configuration Statements for Serial Interfaces on page 345](#)
- [Configuring the Serial Line Protocol on page 346](#)
- [Configuring the Serial Clocking Mode on page 350](#)
- [Configuring the Serial Signal Handling on page 352](#)
- [Configuring the Serial DTR Circuit on page 355](#)
- [Configuring Serial Signal Polarities on page 355](#)
- [Configuring Serial Loopback Capability on page 356](#)
- [Configuring Serial Line Encoding on page 358](#)

CHAPTER 10

Configuring Serial Interfaces

- [Example: Physical Interface Configuration Statements for Serial Interfaces on page 345](#)
- [Configuring the Serial Line Protocol on page 346](#)
- [Configuring the Serial Clocking Mode on page 350](#)
- [Configuring the Serial Signal Handling on page 352](#)
- [Configuring the Serial DTR Circuit on page 355](#)
- [Configuring Serial Signal Polarities on page 355](#)
- [Configuring Serial Loopback Capability on page 356](#)
- [Configuring Serial Line Encoding on page 358](#)
- [Specifying a USB Modem Interface on J Series Routers on page 359](#)

Example: Physical Interface Configuration Statements for Serial Interfaces

To configure serial physical interface properties, include the **serial-options** statement at the **[edit interfaces se- *fpc/pic/port*]** hierarchy level .

```
[edit interfaces se-fpc/pic/port]  
serial-options {  
  clock-rate rate;  
  clocking-mode (dce | internal | loop);  
  control-polarity (negative | positive);  
  cts-polarity (negative | positive);  
  dcd-polarity (negative | positive);  
  dce-options {  
    control-signal (assert | de-assert | normal);  
    cts (ignore | normal | require);  
    dcd (ignore | normal | require);  
    dsr (ignore | normal | require);  
    dtr signal-handling-option;  
    ignore-all;  
    indication (ignore | normal | require);  
    rts (assert | de-assert | normal);  
    tm (ignore | normal | require);  
  }  
  dsr-polarity (negative | positive);  
  dte-options {  
    control-signal (assert | de-assert | normal);  
    cts (ignore | normal | require);
```

```
dcd (ignore | normal | require);
dsr (ignore | normal | require);
dtr signal-handling-option;
ignore-all;
indication (ignore | normal | require);
rts (assert | de-assert | normal);
tm (ignore | normal | require);
}
dtr-circuit (negative | positive);
dtr-polarity (negative | positive);
encoding (nrz | nrzi);
idle-cycle-flag flag;
indication-polarity (negative | positive);
line-protocol protocol;
loopback mode;
rts-polarity (negative | positive);
tm-polarity (negative | positive);
transmit-clock invert;
}
```

Configuring the Serial Line Protocol

- [Configuring the Serial Line Protocol on page 346](#)
- [Serial Interface Default Settings on page 346](#)

Configuring the Serial Line Protocol

By default, serial interfaces use the EIA-530 line protocol. You can configure each port on the PIC independently to use one of the following line protocols:

- EIA-530
- V.35
- X.21

To configure the serial line protocol:

1. Include the **line-protocol** statement, specifying the **eia530**, **v.35**, or **x.21** option:

```
line-protocol protocol;
```

You can include these statements at the following hierarchy levels:

- **[edit interfaces se-*pim*/0/*port* serial-options]**
- **[edit interfaces se-*fpc*/*pic*/*port* serial-options]**

For more information about serial interfaces, see the following sections:

Serial Interface Default Settings

- [Serial Interface Default Settings on page 347](#)
- [Invalid Serial Interface Statements on page 348](#)

Serial Interface Default Settings

- [EIA-530 Interface Default Settings on page 347](#)
- [V.35 Interface Default Settings on page 347](#)
- [X.21 Interface Default Settings on page 348](#)

EIA-530 Interface Default Settings

If you do not include the **line-protocol** statement or if you explicitly configure the default EIA-530 line protocol, the default settings are as follows:

```
dce-options | dte-options {
  cts normal;
  dcd normal;
  dsr normal;
  dtr normal;
  rts normal;
  tm normal;
}
clock-rate 16.384mhz;
clocking-mode loop;
cts-polarity positive;
dcd-polarity positive;
dsr-polarity positive;
dtr-circuit balanced;
dtr-polarity positive;
encoding nrz;
rts-polarity positive;
tm-polarity positive;
```



NOTE: On M Series routers, you can set the DCE clocking mode for EIA-530 interfaces and commit. An error message is not displayed and the CLI is not blocked.

You can include the **line-protocol** statement at the following hierarchy levels:

- **[edit interfaces se-*pim*/0/*port* serial-options]**
- **[edit interfaces se-*fpc*/*pic*/*port* serial-options]**

V.35 Interface Default Settings

If you include the **line-protocol v.35** statement, the default settings are as follows:

```
dce-options | dte-options {
  cts normal;
  dcd normal;
  dsr normal;
  dtr normal;
  rts normal;
}
```

```
clock-rate 16.384mhz;  
clocking-mode loop;  
cts-polarity positive;  
dcd-polarity positive;  
dsr-polarity positive;  
dtr-circuit balanced;  
dtr-polarity positive;  
encoding nrz;  
rts-polarity positive;
```

You can include the **line-protocol** statement at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options]**
- **[edit interfaces se-fpc/pic/port serial-options]**

X.21 Interface Default Settings

If you include the **line-protocol x.21** statement, the default settings are as follows:

```
dce-options | dte-options {  
  control-signal normal;  
  indication normal;  
}  
clock-rate 16.384mhz;  
clocking-mode loop;  
control-polarity positive;  
encoding nrz;  
indication-polarity positive;
```

You can include the **line-protocol** statement at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options]**
- **[edit interfaces se-fpc/pic/port serial-options]**

Invalid Serial Interface Statements

The following sections show the invalid configuration statements for each type of serial interface. If you include the following statements in the configuration, an error message indicates the location of the error and the configuration is not activated.

- [Invalid EIA-530 Interface Statements on page 348](#)
- [Invalid V.35 interface Statements on page 349](#)
- [Invalid X.21 Interface Statements on page 349](#)

Invalid EIA-530 Interface Statements

If you do not include the **line-protocol** statement or if you explicitly configure the default EIA-530 line protocol, the following statements are invalid:

```
dce-options | dte-options {  
  control-signal (assert | de-assert | normal);  
  indication (ignore | normal | require);
```



```

}
control-polarity (negative | positive);
indication-polarity (negative | positive);

```

You can include the **line-protocol** statement at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

Invalid V.35 Interface Statements

If you include the **line-protocol v.35** statement, the following statements are invalid:

```

dce-options | dte-options {
  control-signal (assert | de-assert | normal);
  indication (ignore | normal | require);
  tm (ignore | normal | require);
}
control-polarity (negative | positive);
indication-polarity (negative | positive);
loopback (dce-local | dce-remote);
tm-polarity (negative | positive);

```

You can include the **line-protocol** statement at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

Invalid X.21 Interface Statements

If you include the **line-protocol x.21** statement, the following statements are invalid:

```

dce-options | dte-options {
  cts (ignore | normal | require);
  dcd (ignore | normal | require);
  dsr (ignore | normal | require);
  dtr (assert | de-assert | normal);
  rts (assert | de-assert | normal);
  tm (ignore | normal | require);
}
clocking-mode (dce | internal);
cts-polarity (negative | positive);
dce-polarity (negative | positive);
dsr-polarity (negative | positive);
dtr-circuit (balanced | unbalanced);
dtr-polarity (negative | positive);
loopback (dce-local | dce-remote);
rts-polarity (negative | positive);
tm-polarity (negative | positive);

```

You can include the **line-protocol** statement at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]

- [\[edit interfaces se-fpc/pic/port serial-options\]](#)

See Also [Serial Interfaces Overview on page 343](#)

Configuring the Serial Clocking Mode

- [Configuring the Serial Clocking Mode on page 350](#)
- [Inverting the Serial Interface Transmit Clock on page 351](#)
- [Configuring the DTE Clock Rate on page 351](#)

Configuring the Serial Clocking Mode

By default, serial interfaces use loop clocking mode. For EIA-530 and V.35 interfaces, you can configure each port on the PIC independently to use loop, DCE, or internal clocking mode. For X.21 interfaces, only loop clocking mode is supported.


The three clocking modes work as follows:

- Loop clocking mode—Uses the DCE's RX clock to clock data from the DCE to the DTE.
- DCE clocking mode—Uses the TXC clock, which is generated by the DCE specifically to be used by the DTE as the DTE's transmit clock.
- Internal clocking mode—Also known as line timing, uses an internally generated clock. You can configure the speed of this clock by including the **clock-rate** statement at the [\[edit interfaces se-pim/0/port serial-options\]](#) or [\[edit interfaces se-fpc/pic/port dte-options\]](#) hierarchy levels. For more information about the DTE clock rate, see [“Configuring the DTE Clock Rate” on page 351](#).

Note that DCE clocking mode and loop clocking mode use external clocks generated by the DCE.

[Figure 22 on page 350](#) shows the clock sources of loop, DCE, and internal clocking modes.

Figure 22: Serial Interface Clocking Mode

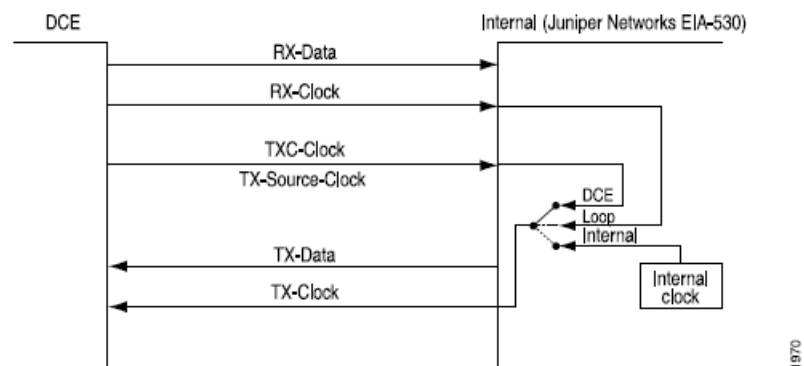

To configure the clocking mode of a serial interface, include the **clocking-mode** statement:

```
clocking-mode (dce | internal | loop);
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

Inverting the Serial Interface Transmit Clock

When an externally timed clocking mode (DCE or loop) is used, long cables might introduce a phase shift of the DTE-transmitted clock and data. At high speeds, this phase shift might cause errors. Inverting the transmit clock corrects the phase shift, thereby reducing error rates.

By default, the transmit clock is not inverted. To invert the transmit clock, include the **transmit-clock invert** statement:

```
transmit-clock invert;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

Configuring the DTE Clock Rate

By default, the serial interface has a clock rate of 16.384 MHz. For EIA-530 and V.35 interfaces with internal clocking mode configured, you can configure the clock rate.

To configure the clock rate, include the **clock-rate** statement:

```
clock-rate rate;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

You can configure the following interface speeds:

- 2.048 MHz
- 2.341 MHz
- 2.731 MHz
- 3.277 MHz
- 4.096 MHz
- 5.461 MHz

- 8.192 MHz
- 16.384 MHz

Although the serial interface is intended for use at the default rate of 16.384 MHz, you might need to use a slower rate if any of the following conditions prevail:

- The interconnecting cable is too long for effective operation.
- The interconnecting cable is exposed to an extraneous noise source that might cause an unwanted voltage in excess of +1 volt measured differentially between the signal conductor and circuit common at the load end of the cable, with a 50-ohm resistor substituted for the generator.
- You need to minimize interference with other signals.
- You need to invert signals.

For detailed information about the relationship between signaling rate and interface cable distance, see the following standards:

- EIA-422-A, *Electrical Characteristics of Balanced Voltage Digital Interface Circuits*
- EIA-423-A, *Electrical Characteristics of Unbalanced Voltage Digital Interface Circuits*

Related Documentation

- [Serial Interfaces Overview on page 343](#)

Configuring the Serial Signal Handling

By default, normal signal handling is enabled for all signals. For each signal, the **normal** option applies to the normal signal handling for that signal, as defined by the following standards:

- TIA/EIA Standard 530
- ITU-T Recommendation V.35
- ITU-T Recommendation X.21

[Table 50 on page 352](#) shows the serial interface modes that support each signal type.

Table 50: Signal Handling by Serial Interface Type

Signal	Serial Interfaces
From-DCE signals	
Clear to send (CTS)	EIA-530 and V.35
Data carrier detect (DCD)	EIA-530 and V.35
Data set ready (DSR)	EIA-530 and V.35
Indication	X.21 only

Table 50: Signal Handling by Serial Interface Type (continued)

Signal	Serial Interfaces
Test mode (TM)	EIA-530 only
To-DCE signals	
Control signal	X.21 only
Data transfer ready (DTR)	EIA-530 and V.35
Request to send (RTS)	EIA-530 and V.35

You configure serial interface signal characteristics by including the **dce-options** or **dte-options** statement:

```
dce-options | dte-options {
  control-signal (assert | de-assert | normal);
  cts (ignore | normal | require);
  dcd (ignore | normal | require);
  dsr (ignore | normal | require);
  dtr signal-handling-option;
  ignore-all;
  indication (ignore | normal | require);
  rts (assert | de-assert | normal);
  tm (ignore | normal | require);
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

For EIA-530 and V.35 interfaces, configure to-DCE signals by including the **dtr** and **rts** statements, specifying the **assert**, **de-assert**, or **normal** option:

```
dtr (assert | de-assert | normal);
rts (assert | de-assert | normal);
```

For X.21 interfaces, configure to-DCE signals by including the **control-signal** statement, specifying the **assert**, **de-assert**, or **normal** option:

```
control-signal (assert | de-assert | normal);
```

Assertion is when the positive side of a given signal is at potential high-level output voltage (Voh), while the negative side of the same signal is at potential low-level output voltage (Vol). *Deassertion* is when the positive side of a given signal is at potential Vol, while the negative side of the same signal is at potential Voh.

For the DTR signal, you can configure normal signal handling using the signal for automatic resynchronization by including the **dtr** statement, and specifying the **auto-synchronize** option:

```
dtr {
  auto-synchronize {
    duration milliseconds;
    interval seconds;
  }
}
```

The pulse duration of resynchronization can be from 1 through 1000 milliseconds. The offset interval for resynchronization can be from 1 through 31 seconds.

For EIA-530 and V.35 interfaces, configure from-DCE signals by including the **cts**, **dcd**, and **dsr** statements, specifying the **ignore**, **normal**, or **require** option:

```
cts (ignore | normal | require);
dcd (ignore | normal | require);
dsr (ignore | normal | require);
```

For X.21 interfaces, configure from-DCE signals by including the **indication** statement, specifying the **ignore**, **normal**, or **require** option:

```
indication (ignore | normal | require);
```

For EIA-530 interfaces only, you can configure from-DCE test-mode (TM) signaling by including the **tm** statement, specifying the **ignore**, **normal**, or **require** option:

```
tm (ignore | normal | require);
```

To specify that the from-DCE signal must be asserted, include the **require** option in the configuration. To specify that the from-DCE signal must be ignored, include the **ignore** option in the configuration.



NOTE: For V.35 and X.21 interfaces, you cannot include the **tm** statement in the configuration.

For X.21 interfaces, you cannot include the **cts**, **dcd**, **dsr**, **dtr**, and **rts** statements in the configuration.

For EIA-530 and V.35 interfaces, you cannot include the **control-signal** and **indication** statements in the configuration.

For a complete list of serial options statements that are not supported by each serial interface mode, see [“Invalid Serial Interface Statements” on page 348](#).

To return to the default normal signal handling, delete the **require**, **ignore**, **assert**, **de-assert**, or **auto-synchronize** statement from the configuration, as shown in the following example:

```
[edit]
user@host# delete interfaces se-fpc/pic/port dte-options control-leads cts require
```

To explicitly configure normal signal handling, include the **control-signal** statement with the **normal** option:

```
control-signal normal;
```

You can configure the serial interface to ignore all control leads by including the **ignore-all** statement:

```
ignore-all;
```

You can include the **ignore-all** statement in the configuration only if you do not explicitly enable other signal handling options at the **[edit interfaces se-pim/0/port serial-options dce-options]** or **[edit interfaces se-fpc/pic/port serial-options dte-options]** hierarchy levels.

You can include the **control-signal**, **cts**, **dcd**, **dsr**, **dtr**, **indication**, **rts**, and **tm** statements at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options dte-options]**
- **[edit interfaces se-fpc/pic/port serial-options dte-options]**

Configuring the Serial DTR Circuit

A balanced circuit has two currents that are equal in magnitude and opposite in phase. An unbalanced circuit has one current and a ground; if a pair of terminals is unbalanced, one side is connected to electrical ground and the other carries the signal. By default, the DTR circuit is balanced.

For EIA-530 and V.35 interfaces, configure the DTR circuit by including the **dtr-circuit** statement:

```
dtr-circuit (balanced | unbalanced);
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options]**
- **[edit interfaces se-fpc/pic/port serial-options]**

Configuring Serial Signal Polarities

Serial interfaces use a differential protocol signaling technique. Of the two serial signals associated with a circuit, the one referred to as the A signal is denoted with a plus sign, and the one referred to as the B signal is denoted with a minus sign; for example, DTR+ and DTR-. If DTR is low, then DTR+ is negative with respect to DTR-. If DTR is high, then DTR+ is positive with respect to DTR-.

By default, all signal polarities are positive. You can reverse this polarity on a Juniper Networks serial interface. You might need to do this if signals are miswired as a result of reversed polarities.

For EIA-530 and V.35 interfaces, configure signal polarities by including the **cts-polarity**, **dcd-polarity**, **dsr-polarity**, **dtr-polarity**, **rts-polarity**, and **tm-polarity** statements:

```
cts-polarity (negative | positive);
dcd-polarity (negative | positive);
dsr-polarity (negative | positive);
dtr-polarity (negative | positive);
rts-polarity (negative | positive);
tm-polarity (negative | positive);
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

For X.21 interfaces, configure signal polarities by including the **control-polarity** and **indication-polarity** statements:

```
control-polarity (negative | positive);
indication-polarity (negative | positive);
```


You can include these statements at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

Configuring Serial Loopback Capability

From the router, remote line interface unit (LIU) loopback loops the TX (transmit) data and TX clock back to the router as RX (receive) data and RX clock. From the line, LIU loopback loops the RX data and RX clock back out the line as TX data and TX clock, as shown in [Figure 23 on page 356](#).


Figure 23: Serial Interface LIU Loopback

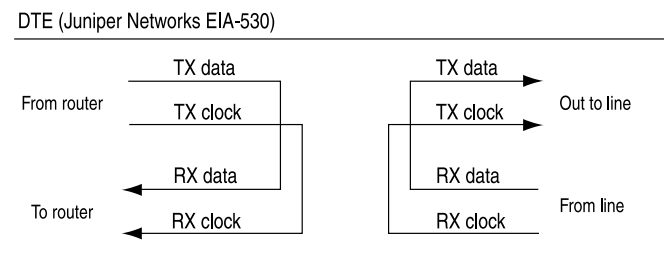

1972

DCE local and DCE remote control the EIA-530 interface-specific signals for enabling local and remote loopback on the link partner DCE. Local loopback is shown in [Figure 24 on page 357](#).

Figure 24: Serial Interface Local Loopback

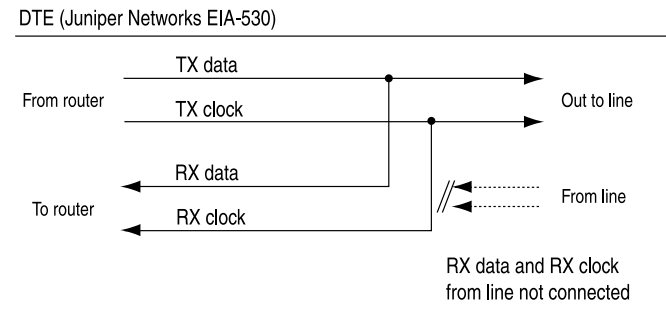

1971

For EIA-530 interfaces, you can configure DCE local, DCE remote, local, and remote (LIU) loopback capability.

For V.35, you can configure remote LIU and local loopback capability. DCE local and DCE remote loopbacks are not supported on V.35 and X.21 interfaces. Local and remote loopbacks are not supported on X.21 interfaces.

To configure the loopback capability on a serial interface, include the **loopback** statement, specifying the **dce-local**, **dce-remote**, **local**, or **remote** option:

```
loopback mode;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *se-pim*/*O/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

To disable the loopback capability, remove the **loopback** statement from the configuration:

```
[edit]
user@host# delete interfaces se-fpc/pic/port serial-options loopback
```

You can determine whether there is an internal or external problem by checking the error counters in the output of the **show interface *se-fpc/pic/port* extensive** command:

```
user@host> show interfaces se-fpc/pic/port extensive
```

To Configure Serial Loopback Capability:

1. To determine the source of a problem, loop the packets on the local router, the local DCE, the remote DCE, and the remote line interface unit (LIU).

2. To do this, include the **no-keepalives** and **encapsulation cisco-hdlc** statements at the **[edit interfaces se-fpc/pic/port]** hierarchy level, and the **loopback local** option at the **[edit interfaces se-pim/0/port serial-options]** or **[edit interfaces se-fpc/pic/port serial-options]** hierarchy level. With this configuration, the link stays up, so you can loop ping packets to a remote router. The **loopback local** statement causes the interface to loop within the PIC just before the data reaches the transceiver.

```
[edit interfaces]
se-1/0/0 {
  no-keepalives;
  encapsulation cisco-hdlc;
  serial-options {
    loopback local;
  }
  unit 0 {
    family inet {
      address 10.100.100.1/24;
    }
  }
}
```

Related Documentation

- [Serial Interfaces Overview on page 343](#)

Configuring Serial Line Encoding

By default, serial interfaces use non-return to zero (NRZ) line encoding. You can configure non-return to zero inverted (NRZI) line encoding if necessary.

To have the interface use NRZI line encoding, include the **encoding** statement, specifying the **nrzi** option:

```
encoding nrzi;
```

To explicitly configure the default NRZ line encoding, include the **encoding** statement, specifying the **nrz** option:

```
encoding nrz;
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options]**
- **[edit interfaces se-fpc/pic/port serial-options]**

When setting the line encoding parameter, you must set the same value for paired ports. Ports 0 and 1 must share the same value.

Specifying a USB Modem Interface on J Series Routers

The J Series routers contain two USB ports controlled by a single USB controller. One USB port can support USB devices, while the other one can act as a USB modem.

The USB modem provides a dial-in remote management interface, and supports dialer interface features by sharing the same dial pool as a dialer interface. The dial pool allows the logical dialer interface (**dln**) and the physical interface (**umd0**) to be bound together dynamically on a per-call basis.

The following dialer interface features are supported by the USB modem interface:

- Encapsulation PPP
- CoS
- NAT
- Interface statistics
- Packet capture
- GRE tunnel
- Stateful firewall
- Traffic sampling

To configure a USB modem interface, include the following statements at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
umd0 {
  dialer-options {
    pool pool-name <priority priority>;
  }
  modem-options {
    dialin (console | routable);
    init-command-string initialization-command-string;
  }
}
```

The pool name specified at the **[edit interfaces umd0 dialer-options pool]** hierarchy level must be the same as the pool name specified at the **[edit interfaces dln unit logical-unit-number dialer-options pool]** hierarchy level.

Configure the USB modem to operate as a dial-in WAN backup interface by including the **dialin** statement and specifying the **routable** option. If the USB modem is to be used as a dial-in console, specify the **console** option in the **dialin** statement.

When the Services Router applies the modem AT commands configured in the **init-command-string** statement or the default sequence of initialization commands to the modem, it compares them to the initialization commands already configured on the modem and makes the following changes:

- If the commands are the same, the router overrides the existing modem values that do not match. For example, if the initialization commands on the modem include S0=0 and the router's **init-command-string** configuration includes S0=2, the Services Router applies S0=2.
- If the initialization commands on the modem do not include a command in the router's **init-command-string** statement configuration, the router adds it. For example, if the **init-command-string** statement includes the command L2, but the modem commands do not include it, the router adds L2 to the initialization commands configured on the modem.

Include the following statements at the **[edit interfaces dln]** hierarchy level to support a minimum configuration for a dialer interface connected to a USB modem:

```
[edit interfaces dln]
encapsulation ppp;
unit logical-unit-number;
dialer-options {
    dial-string dial-string-numbers;
    pool pool-name <priority priority>;
}
ppp-options {
    chap;
    access-profile name;
    local-name name;
    passive;
}
family inet {
    mtu bytes;
    address address {
        destination address;
    }
}
```

PART 4

Monitoring and Troubleshooting Interfaces

- [Monitoring Interfaces on page 363](#)
- [Troubleshooting Interfaces on page 369](#)

Monitoring Interfaces

- [Tracing Interface Operations Overview on page 363](#)
- [Tracing Operations of an Individual Router Interface on page 363](#)
- [Tracing Operations of the Interface Process on page 364](#)
- [Monitoring a PPP Session on page 366](#)
- [Tracing Operations of the pppd Process on page 366](#)

Tracing Interface Operations Overview

You can trace the operations of individual router interfaces and those of the interface process (dcd). For a general discussion of tracing and of the precedence of multiple tracing operations, see the *Junos OS Administration Library*.

For information about the operations of Virtual Router Resolution Protocol (VRRP)-enabled interfaces, see the *High Availability Feature Guide*.

Related Documentation

- [Tracing Operations of an Individual Router Interface on page 363](#)
- [Tracing Operations of the Interface Process on page 364](#)

Tracing Operations of an Individual Router Interface

To trace the operations of individual router interfaces, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **traceoptions** option.

```
[edit interfaces interface-name]
user@host# edit traceoptions
```

3. Configure the tracing flag.

```
[edit interfaces interface-name traceoptions]  
user@host# set flag flag-option
```

You can specify the following interface tracing flags:

- **all**—Trace all interface operations.
- **event**—Trace all interface events.
- **ipc**—Trace all interface interprocess communication (IPC) messages.
- **media**—Trace all interface media changes.

The interfaces **traceoptions** statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system **syslog** files.

For more information about trace operations, see [“Tracing Operations of the Interface Process” on page 364](#).

**Related
Documentation**

- [traceoptions on page 1070](#)

Tracing Operations of the Interface Process

To trace the operations of the router or switch interface process, dcd, perform the following steps:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]  
user@host# edit interfaces
```

2. Configure the **traceoptions** statement.

```
[edit interfaces]  
user@host# edit traceoptions
```

3. Configure the **no-remote-trace** option to disable remote tracing.

```
[edit interfaces traceoptions]  
user@host# set no-remote-trace
```

4. Configure the **file filename** option.

```
[edit interfaces traceoptions]  
user@host# edit file
```

5. Configure the **files number** option, **match regular-expression** option, **size size** option, and **world-readable | no-world-readable** option.


```
[edit interfaces traceoptions file]
user@host# set files number
user@host# set match regular-expression
user@host# set size size
user@host# set word-readable | no-world-readable
```

6. Configure the tracing flag.

```
[edit interfaces traceoptions]
user@host# set flag flag-option
```

7. Configure the **disable** option in **flag *flag-option*** statement to disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as **all**.

```
[edit interfaces traceoptions]
user@host# set flag flag-option disable
```

You can specify the following flags in the **interfaces traceoptions** statement:

- **all**—Enable all configuration logging.
- **change-events**—Log changes that produce configuration events.
- **gres-events**—Log the events related to GRES.
- **resource-usage**—Log the resource usage for different states.
- **config-states**—Log the configuration state machine changes.
- **kernel**—Log configuration IPC messages to kernel.
- **kernel-detail**—Log details of configuration messages to kernel.
- **select-events**—Log the events on select state machine.

By default, interface process operations are placed in the file named `dcd` and three 1-MB files of tracing information are maintained.

For general information about tracing, see the tracing and logging information in the *Junos OS Administration Library*.

Related Documentation

- [Tracing Interface Operations Overview on page 363](#)
- [Tracing Operations of an Individual Router Interface on page 363](#)
- [traceoptions on page 1070](#)

Monitoring a PPP Session

You can monitor PPP packet exchanges. When monitoring is enabled, packets exchanged during a session are logged by default to `/var/log/pppd`, or to the file specified in the **traceoptions** statement.

To monitor a PPP session:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **monitor-session** statement.

```
[edit protocols ppp]
user@host# monitor-session (interface-name | all);
```

When monitoring is configured, the operational mode commands **show ppp summary** and **show ppp interface** display a **Monitored** flag in the **Session flags** column or line.

Related [monitor-session on page 813](#)
Documentation

Tracing Operations of the pppd Process

You can trace the operations of the router's pppd process.

To trace the router's pppd process:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **traceoptions** statement.

```
[edit protocols ppp]
traceoptions {
  file filename <files number> <match regular-expression> <size size> <world-readable |
    no-world-readable>;
  flag flag;
  level severity-level;
  no-remote-trace;
}
```

- To specify more than one tracing operation, include multiple **flag** statements.

You can specify the following flags in the **traceoptions** statement:

- **access**—Trace access code
- **address-pool**—Trace address pool code
- **all**—Trace all areas of code
- **auth**—Trace authentication code
- **chap**—Trace challenge handshake authentication protocol code
- **ci**—Trace CI code
- **config**—Trace configuration code
- **ifdb**—Trace interface database code
- **lcp**—Trace LCP state machine code
- **memory**—Trace memory management code
- **message**—Trace message processing code
- **mlppp**—Trace multilink point-to-point protocol code
- **ncp**—Trace NCP state machine code
- **pap**—Trace password authentication protocol code
- **ppp**—Trace PPP protocol processing code
- **radius**—Trace RADIUS processing code
- **redundancy**—Trace redundancy code
- **rtsock**—Trace routing socket code
- **session**—Trace session management code
- **signal**—Trace signal handling code
- **timer**—Trace timer code
- **ui**—Trace user interface code

Related [traceoptions on page 1086](#)
Documentation

CHAPTER 12

Troubleshooting Interfaces

- [Configuring Interface Diagnostics Tools to Test the Physical Layer Connections on page 369](#)
- [Troubleshooting: em0 Management Interface Link is Down on page 376](#)
- [Troubleshooting: fxp0 Management Interface Link is Down on page 377](#)
- [Troubleshooting: Faulty Ethernet Physical Interface on an M Series, an MX Series, or a T Series Router on page 379](#)
- [Time Domain Reflectometry on ACX Series Routers Overview on page 387](#)
- [Diagnosing a Faulty Twisted-Pair Cable on ACX Series Routers on page 390](#)

Configuring Interface Diagnostics Tools to Test the Physical Layer Connections

- [Configuring Loopback Testing on page 369](#)
- [Configuring BERT Testing on page 371](#)
- [Starting and Stopping a BERT Test on page 375](#)

Configuring Loopback Testing

Loopback testing allows you to verify the connectivity of a circuit. You can configure any of the following interfaces to execute a loopback test: aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, E1, E3, NxDSO, serial, SONET/SDH, T1, and T3.

The physical path of a network data circuit usually consists of segments interconnected by devices that repeat and regenerate the transmission signal. The transmit path on one device connects to the receive path on the next device. If a circuit fault occurs in the form of a line break or a signal corruption, you can isolate the problem by using a loopback test. Loopback tests allow you to isolate segments of the circuit and test them separately.

To do this, configure a *line loopback* on one of the routers. Instead of transmitting the signal toward the far-end device, the line loopback sends the signal back to the originating router. If the originating router receives back its own Data Link Layer packets, you have verified that the problem is beyond the originating router. Next, configure a line loopback farther away from the local router. If this originating router does not receive its own Data Link Layer packets, you can assume that the problem is on one of the segments between the local router and the remote router's interface card. In this case, the next troubleshooting step is to configure a line loopback closer to the local router to find the source of the problem.

The following types of loopback testing are supported by Junos OS:

- DCE local—Loops packets back on the local data circuit-terminating equipment (DCE).
- DCE remote—Loops packets back on the remote DCE.
- Local—Useful for troubleshooting physical PIC errors. Configuring local loopback on an interface allows transmission of packets to the channel service unit (CSU) and then to the circuit toward the far-end device. The interface receives its own transmission, which includes data and timing information, on the local router's PIC. The data received from the CSU is ignored. To test a local loopback, issue the **show interfaces *interface-name*** command. If PPP keepalives transmitted on the interface are received by the PIC, the **Device Flags** field contains the output **Loop-Detected**.
- Payload—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A payload loopback loops data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated.
- Remote—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A remote loopback loops packets, including both data and timing information, back on the remote router's interface card. A router at one end of the circuit initiates a remote loopback toward its remote partner. When you configure a remote loopback, the packets received from the physical circuit and CSU are received by the interface. Those packets are then retransmitted by the PIC back toward the CSU and the circuit. This loopback tests all the intermediate transmission segments.

Table 51 on page 370 shows the loopback modes supported on the various interface types.

Table 51: Loopback Modes by Interface Type

Interface	Loopback Modes	Usage Guidelines
Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet	Local	<i>Configuring Ethernet Loopback Capability</i>
Circuit Emulation E1	Local and remote	<i>Configuring E1 Loopback Capability</i>
Circuit Emulation T1	Local and remote	<i>Configuring T1 Loopback Capability</i>
E1 and E3	Local and remote	<i>Configuring E1 Loopback Capability and Configuring E3 Loopback Capability</i>
NxDS0	Payload	<i>Configuring NxDS0 IQ and IQE Interfaces, Configuring T1 and NxDS0 Interfaces, Configuring Channelized OC12/STM4 IQ and IQE Interfaces (SONET Mode), Configuring Fractional E1 IQ and IQE Interfaces, and Configuring Channelized T3 IQ Interfaces</i>
Serial (V.35 and X.21)	Local and remote	"Configuring Serial Loopback Capability" on page 356

Table 51: Loopback Modes by Interface Type (continued)

Interface	Loopback Modes	Usage Guidelines
Serial (EIA-530)	DCE local, DCE remote, local, and remote	"Configuring Serial Loopback Capability" on page 356
SONET/SDH	Local and remote	<i>Configuring SONET/SDH Loopback Capability to Identify a Problem as Internal or External</i>
T1 and T3	Local, payload, and remote	<i>Configuring T1 Loopback Capability and Configuring T3 Loopback Capability</i> <i>See also Configuring the T1 Remote Loopback Response</i>

To configure loopback testing, include the **loopback** statement:

```
user@host# loopback mode;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* [aggregated-ether-options](#)]
- [edit interfaces *interface-name* [ds0-options](#)]
- [edit interfaces *interface-name* [e1-options](#)]
- [edit interfaces *interface-name* [e3-options](#)]
- [edit interfaces *interface-name* [fastether-options](#)]
- [edit interfaces *interface-name* [gigether-options](#)]
- [edit interfaces *interface-name* [serial-options](#)]
- [edit interfaces *interface-name* [sonet-options](#)]
- [edit interfaces *interface-name* [t1-options](#)]
- [edit interfaces *interface-name* [t3-options](#)]

Configuring BERT Testing

To configure BERT:

- Configure the duration of the test.

```
[edit interfaces interface-name interface-type-options]
user@host# bert-period seconds;
```

You can configure the BERT period to last from 1 through 239 seconds on some PICs and from 1 through 240 seconds on other PICs. By default, the BERT period is 10 seconds.

- Configure the error rate to monitor when the inbound pattern is received.

```
[edit interfaces interface-name interface-type-options]
user@host# bert-error-rate rate;
```

rate is the bit error rate. This can be an integer from 0 through 7, which corresponds to a bit error rate from 10^{-0} (1 error per bit) to 10^{-7} (1 error per 10 million bits).

- Configure the bit pattern to send on the transmit path.

```
[edit interfaces interface-name interface-type-options]
user@host# bert-algorithm algorithm;
```

algorithm is the pattern to send in the bit stream. For a list of supported algorithms, enter a ? after the **bert-algorithm** statement; for example:

```
[edit interfaces t1-0/0/0 t1-options]
```

```
user@host# set bert-algorithm ?
```

Possible completions:

pseudo-2e11-o152	Pattern is 2^11 -1 (per 0.152 standard)
pseudo-2e15-o151	Pattern is 2^15 - 1 (per 0.152 standard)
pseudo-2e20-o151	Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153	Pattern is 2^20 - 1 (per 0.153 standard)
...	

For specific hierarchy information, see the individual interface types.



NOTE: The four-port E1 PIC supports only the following algorithms:

pseudo-2e11-o152	Pattern is 2^11 -1 (per 0.152 standard)
pseudo-2e15-o151	Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151	Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e23-o151	Pattern is 2^23 (per 0.151 standard)

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: The 12-port T1/E1 Circuit Emulation (CE) PIC supports only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e11-o152     Pattern is 2^11 -1 (per 0.152 standard)
pseudo-2e15-o151     Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151     Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e7           Pattern is 2^7 - 1
pseudo-2e9-o153      Pattern is 2^9 - 1 (per 0.153 standard)
repeating-1-in-4      1 bit in 4 is set
repeating-1-in-8      1 bit in 8 is set
repeating-3-in-24     3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: The IQE PICs support only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e9-o153       Pattern is 2^9 -1 (per 0.153 (511 type) standard)
pseudo-2e11-o152      Pattern is 2^11 -1 (per 0.152 and 0.153 (2047 type)
standards)
pseudo-2e15-o151      Pattern is 2^15 -1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 -1 (per 0.151 standard)
pseudo-2e20-o153      Pattern is 2^20 -1 (per 0.153 standard)
pseudo-2e23-o151      Pattern is 2^23 -1 (per 0.151 standard)
repeating-1-in-4       1 bit in 4 is set
repeating-1-in-8       1 bit in 8 is set
repeating-3-in-24      3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: BERT is supported on the PDH interfaces of the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP and the DS3/E3 MIC. The following BERT algorithms are supported:

all-ones-repeating	Repeating one bits
all-zeros-repeating	Repeating zero bits
alternating-double-ones-zeros	Alternating pairs of ones and zeros
alternating-ones-zeros	Alternating ones and zeros
repeating-1-in-4	1 bit in 4 is set
repeating-1-in-8	1 bit in 8 is set
repeating-3-in-24	3 bits in 24 are set
pseudo-2e9-o153	Pattern is $2^9 - 1$ (per 0.153 standard)
pseudo-2e11-o152	Pattern is $2^{11} - 1$ (per 0.152 standard)
pseudo-2e15-o151	Pattern is $2^{15} - 1$ (per 0.151 standard)
pseudo-2e20-o151	Pattern is $2^{20} - 1$ (per 0.151 standard)
pseudo-2e20-o153	Pattern is $2^{20} - 1$ (per 0.153 standard)
pseudo-2e23-o151	Pattern is 2^{23} (per 0.151 standard)

Table 52 on page 374 shows the BERT capabilities for various interface types.

Table 52: BERT Capabilities by Interface Type

Interface	T1 BERT	T3 BERT	Comments
12-port T1/E1 Circuit Emulation	Yes (ports 0–11)	—	<ul style="list-style-type: none"> Limited algorithms
4-port Channelized OC3/STM1 Circuit Emulation	Yes (port 0–3)	—	<ul style="list-style-type: none"> Limited algorithms
E1 or T1	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> Single port at a time Limited algorithms
E3 or T3	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> Single port at a time
Channelized OC12	—	Yes (channel 0–11)	<ul style="list-style-type: none"> Single channel at a time Limited algorithms No bit count
Channelized STM1	Yes (channel 0–62)	—	<ul style="list-style-type: none"> Multiple channels Only one algorithm No error insert No bit count
Channelized T3 and Multichannel T3	Yes (channel 0–27)	Yes (port 0–3 on channel 0)	<ul style="list-style-type: none"> Multiple ports and channels Limited algorithms for T1 No error insert for T1 No bit count for T1

These limitations do not apply to channelized IQ interfaces. For information about BERT capabilities on channelized IQ interfaces, see *Channelized IQ and IQE Interfaces Properties*.

Starting and Stopping a BERT Test

Before you can start the BERT test, you must disable the interface. To do this, include the **disable** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
disable;
```

After you configure the BERT properties and commit the configuration, begin the test by issuing the **test interface *interface-name interface-type-bert-start*** operational mode command:

```
user@host> test interface interface-name interface-type-bert-start
```

The test runs for the duration you specify with the **bert-period** statement. If you want to terminate the test sooner, issue the **test interface *interface-name interface-type-bert-stop*** command:

```
user@host> test interface interface-name interface-type-bert-stop
```

For example:

```
user@host> test interface t3-1/2/0 t3-bert-start  
user@host> test interface t3-1/2/0 t3-bert-stop
```

To view the results of the BERT test, issue the **show interfaces extensive | find BERT** command:

```
user@host> show interfaces interface-name extensive | find BERT
```

For more information about running and evaluating the results of the BERT procedure, see the [CLI Explorer](#).



NOTE: To exchange BERT patterns between a local router and a remote router, include the **loopback remote** statement in the interface configuration at the remote end of the link. From the local router, issue the **test interface** command.

Related Documentation

- *show interfaces diagnostics optics (Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, 100-Gigabit Ethernet, and Virtual Chassis Port)*

Troubleshooting: em0 Management Interface Link is Down

Problem **Description:** **Ethernet Link Down** alarm is raised when you run the **show chassis alarm** operational mode command on a T640 router, a T1600 router, T4000 router, or a TX Matrix Plus router.

Diagnosis Perform the following tests to check if the em0 management interface is down on the master Routing Engine or the backup Routing Engine:

1. Run the **show chassis alarms** command.

show chassis alarms

```
user@host0> show chassis alarms
1 alarms currently active
Alarm time Class Description
2011-10-19 11:13:02 MYT Major Host 1 em0 : Ethernet Link Down
```

Is the alarm **Ethernet Link Down** displayed against the em0 interface of the master Routing Engine (Host 0)?

- Yes: Contact JTAC for further assistance.
 - No: Continue to the next diagnostic test.
2. Run the **show interfaces em0** and the **show interfaces em0 terse** operational mode commands.

show interfaces em0

```
user@host> show interfaces em0
Physical interface: em0, Enabled, Physical link is Up
Interface index: 1, SNMP ifIndex: 1
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
Device flags : Present Running
Interface flags: SNMP-Traps
...
```

show interfaces em0 terse

```
user@host> show interfaces em0 terse
Interface Admin Link Proto Local Remote
em0 up up
em0.0 up up inet 10.100.100.1/30
```

Is the em0 interface on the master Routing Engine **up**?

- Yes: Continue to resolution.

- No: Contact JTAC for further assistance

Resolution *To Resolve This Issue*

From the aforementioned diagnosis, we ascertain that the chassis alarm has been raised for the em0 management interface in the backup Routing Engine (Host 1) and not for the master Routing Engine (Host 0).

Implement one of the following solutions on the backup Routing Engine to resolve this issue:

- Disable the em0 interface in the backup Routing Engine:
 1. In configuration mode, go to the **[edit groups re1]** hierarchy level.

```
user@host1# edit groups re1
```

2. Disable the em0 interface.

```
[edit groups re1]
user@host1# set interfaces em0 disable
```

- Ignore the alarm:
 1. In configuration mode, go to the **[edit chassis]** hierarchy level.

```
user@host1# edit chassis
```

2. Ignore the **Ethernet link down** alarm on the management interface by setting the **management-ethernet link-down** alarm option to **ignore**.

```
[edit chassis]
user@host1# set alarm management-ethernet link-down ignore
```

- Related Documentation**
- [Supported Routing Engines by Router on page 17](#)
 - *show chassis alarms*

Troubleshooting: fxp0 Management Interface Link is Down

- Problem Description:** Ethernet Link Down alarm is raised when you run the **show chassis alarm** operational mode command on an M Series router, an MX Series router, a T320 router, a T640 router, a T1600 router, or on a TX Matrix router.

Diagnosis Perform the following tests to check if the fxp0 interface is down on the master Routing Engine or the backup Routing Engine:

1. Run the **show chassis alarms** command.

show chassis alarms

```
user@host0> show chassis alarms
1 alarms currently active
Alarm time Class Description
2011-10-19 11:13:02 MYT Major Host 1 fxp0 : Ethernet Link Down
```

Is the alarm **Ethernet Link Down** displayed against the fxp0 interface of the master Routing Engine (Host 0)?

- Yes: Contact JTAC for further assistance.
 - No: Continue to the next diagnostic test.
2. Run the **show interfaces fxp0** and the **show interfaces fxp0 terse** operational mode commands.

show interfaces fxp0

```
user@host> show interfaces fxp0
Physical interface: fxp0, Enabled, Physical link is Up
Interface index: 1, SNMP ifIndex: 1
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
Device flags : Present Running
Interface flags: SNMP-Traps
...
```

show interfaces fxp0 terse

```
user@host> show interfaces fxp0 terse
Interface Admin Link Proto Local Remote
fxp0 up up
fxp0.0 up up inet 10.100.100.1/30
```

Is the fxp0 interface on the master Routing Engine **up**?

- Yes: Continue to resolution.
- No: Contact JTAC for further assistance

Resolution *To Resolve This Issue*

From the diagnosis, we ascertain that the chassis alarm has been raised for the fxp0 management interface in the backup Routing Engine (Host 1) and not for the master Routing Engine (Host 0).

Implement one of the following solutions on the backup Routing Engine to avoid this issue:

- Disable the fxp0 interface in the backup Routing Engine:
 1. In configuration mode, go to the **[edit groups re1]** hierarchy level.

```
user@host1# edit groups re1
```

2. Disable the fxp0 interface.

```
[edit groups re1]
user@host1# set interfaces fxp0 disable
```

- Ignore the alarm:
 1. In configuration mode, go to the **[edit chassis]** hierarchy level.

```
user@host1# edit chassis
```

2. Ignore the **Ethernet link down** alarm on the management interface by setting the **management-ethernet link-down** alarm option to **ignore**.

```
[edit chassis]
user@host1# set alarm management-ethernet link-down ignore
```

Related Documentation

- [Supported Routing Engines by Router on page 17](#)
- [show chassis alarms](#)

Troubleshooting: Faulty Ethernet Physical Interface on an M Series, an MX Series, or a T Series Router

You can follow the basic troubleshooting checklist as explained in the following topics from one through five to troubleshoot an Ethernet physical interface on an M Series, MX Series, or a T Series router.

1. [Checking the Cable Connection on page 380](#)
2. [Checking the Physical Link Status of the Interface on page 381](#)
3. [Checking the Interface Statistics in Detail on page 382](#)
4. [Performing the Loopback Diagnostic Test on page 384](#)
5. [Checking Other Possibilities on page 386](#)
6. [To Enable a Physical Interface on page 387](#)

Checking the Cable Connection

Problem **Description:** Packets are not received or transmitted over the Ethernet physical interface.

- Diagnosis**
1. Is the correct cable connected to the correct port?
 - Yes: Continue to [“Checking the Physical Link Status of the Interface” on page 381.](#)
 - No: See [“Resolving Cabling Issue” on page 380.](#)
-

Resolution ***Resolving Cabling Issue***

Perform one or more of the following steps to resolve the cabling issue:

1. Connect the cable properly on the local and remote ends without any loose connections.
2. Swap the Ethernet cable for a known good cable if the existing cable is damaged.
3. Connect a single-mode fiber cable to a single-mode interface only and a multimode fiber cable to a multimode interface only. To check fiber optic cable integrity, see [“Checking Fiber Optic Cable Integrity” on page 380.](#)
4. Connect the correct small form-factor pluggable transceiver (SFP) on both sides of the cable.

Checking Fiber Optic Cable Integrity

To check the integrity of fiber optic cable with an external cable diagnostic testing tool:



NOTE: A single-mode fiber cable must be connected to a single-mode interface and a multi-mode fiber cable must be connected to a multi-mode interface.

1. Measure the received light level at the receiver (R_x) port to see whether the received light level is within the receiver specification of the Ethernet interface.
2. Measure transmitted light level at the transmitter (T_x) port to see whether the transmitted light level is within the transmitter specification of the Ethernet interface.

Checking the Physical Link Status of the Interface

Problem **Description:** Unable to transmit and receive packets on the Ethernet interface even though the cable connection is correct.

Solution To display the physical link status of the interface, run the **show interface *interface-name* media** operational mode command. For example, on the ge-5/0/1 interface.

```
user@host> show interfaces ge-5/0/1 media
Physical interface: ge-5/0/1, Enabled, Physical link is Up
  Interface index: 317, SNMP ifIndex: 1602
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online, Speed-negotiation: Disabled,
  Auto-MDIX: Enabled
  Device flags      : Present Running
  Interface flags:  SNMP-Traps Internal: 0x4000
  Link flags       : None
  CoS queues       : 8 supported, 8 maximum usable queues
  Current address:  2c:6b:f5:4c:26:73, Hardware address: 2c:6b:f5:4c:26:73
  Last flapped     : 2012-11-30 01:25:37 UTC (03:46:55 ago)
  Input rate       : 880 bps (1 pps)
  Output rate      : 312 bps (0 pps)
  Active alarms    : None
  Active defects   : None
  MAC statistics:
    Input bytes: 901296, Input packets: 9799, Output bytes: 976587, Output packets:
    10451
  Filter statistics:
    Filtered packets: 68, Padded packets: 0, Output packet errors: 0
  Autonegotiation information:
    Negotiation status: Complete
    Link partner:
      Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
      OK
    Local resolution:
      Flow control: Symmetric, Remote fault: Link OK
  Interface transmit statistics: Disabled
```

For information about **show interfaces *interface-name* media**, see [show interfaces](#).

- Diagnosis**
- Are there any connectivity problems such as input errors and packet loss even though the **Enabled** field displays **Physical link is Up** status and the **Active alarms** and **Active defect** field displays **None**?
 - Yes: Go to [“Checking the Interface Statistics in Detail”](#) on page 382.
 - No: Continue to the next diagnostic test.

2. Does the **Enabled** field display **Physical link is Down** status and the **Active alarms and Active defect** field display **Link**?
 - Yes: The interface is either not connected correctly or is not receiving a valid signal. Go to [“Resolving Cabling Issue” on page 380](#).
 - No: Continue.

Checking the Interface Statistics in Detail

Problem **Description:** The physical interface is not working even though the **Enabled** field displays **Physical link is Up** status and the **Active alarms and Active defect** field displays **None**.

Solution To display the interface statistics in detail, run the **show interface *interface-name* extensive** operational command. For example, on ge-5/0/1 interface.

```

user@host> show interfaces ge-5/0/1 extensive
Physical interface: ge-5/0/1, Enabled, Physical link is Up
  Interface index: 317, SNMP ifIndex: 1602, Generation: 322
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online, Speed-negotiation: Disabled,
  Auto-MDIX: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 8 maximum usable queues
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: 2c:6b:f5:4c:26:73, Hardware address: 2c:6b:f5:4c:26:73
  Last flapped  : 2012-11-30 01:25:37 UTC (04:38:32 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :           806283           0 bps
    Output bytes :        1153215        424 bps
    Input packets:         10818           0 pps
    Output packets:        11536           0 pps
  IPv6 transit statistics:
    Input bytes :           0
    Output bytes :           0
    Input packets:           0
    Output packets:           0
  Label-switched interface (LSI) traffic statistics:
    Input bytes :           0           0 bps
    Input packets:           0           0 pps
  Dropped traffic statistics due to STP State:
    Input bytes :           0
    Output bytes :           0
    Input packets:           0
    Output packets:           0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 233060,
    L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0

```

```

Output errors:
  Carrier transitions: 11, Errors: 0, Drops: 0, Collisions: 0, Aged packets:
0, FIFO errors: 0, HS link CRC errors: 0,
  MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          3216              3216              0
  1 expedited-fo          0              0              0
  2 assured-forw          0              0              0
  3 network-cont          8320             8320              0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control

Active alarms : None
Active defects : None
MAC statistics:
Total octets      1007655      Transmit
Total packets    10886      1082219
Unicast packets   4350      4184
Broadcast packets  32      77
Multicast packets 6504      7275
CRC/Align errors  0      0
FIFO errors       0      0
MAC control frames 0      0
MAC pause frames  0      0
Oversized frames  0
Jabber frames     0
Fragment frames   0
VLAN tagged frames 0
Code violations    0

Filter statistics:
Input packet count      10886
Input packet rejects    68
Input DA rejects        68
Input SA rejects        0
Output packet count      11536
Output packet pad count  0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
  Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
Local resolution:
  Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
Destination slot: 5
CoS information:
Direction : Output
CoS transmit queue      Bandwidth      Buffer Priority
Limit                   %      bps      %      usec

```

```

0 best-effort          95          950000000    95          0          low
none
3 network-control      5           500000000    5          0          low
none
Interface transmit statistics: Disabled

```

For information about `show interfaces interface-name detail`, see [show interfaces](#).

- Diagnosis**
1. Does the **Policed discards**, **L2 channel errors**, **Input DA rejects**, or the **Input SA rejects** field display any errors?

For information about the errors, see [show interfaces](#).

- Yes: Resolve the errors as needed. Resolving these errors is beyond the scope of this topic.
- No: Continue with “[Performing the Loopback Diagnostic Test](#)” on page 384.

Performing the Loopback Diagnostic Test

Problem **Description:** The interface cable is connected correctly and there are no alarms or errors associated with the Ethernet physical interface yet the interface is not working.

Solution To check whether the Ethernet port or PIC is faulty, you must perform the internal loopback test and hardware loopback test.

To perform a internal loopback diagnostic test on an Ethernet interface, for example on `ge-5/0/1` interface:

1. In configuration mode, go to the `[edit interfaces ge-5/0/1]` hierarchy level.

```

[edit]
user@host# edit interface ge-5/0/1

```

2. Set the **gigether-options** option as loopback, commit the configuration and quit configuration mode.

```

[edit interfaces ge-5/0/1
user@host# set gigether-options loopback
user@host# commit
user@host# quit

```

3. In operational mode, execute the `show interfaces ge-5/0/1 media` command.

```

user@host> show interfaces ge-5/0/1 media
Physical interface: ge-5/0/1, Enabled, Physical link is Up
  Interface index: 317, SNMP ifIndex: 1602
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Enabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online, Speed-negotiation: Disabled,
  Auto-MDIX: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Current address: 2c:6b:f5:4c:26:73, Hardware address: 2c:6b:f5:4c:26:73
  Last flapped   : 2012-11-30 01:25:37 UTC (03:46:55 ago)
  Input rate     : 880 bps (1 pps)
  Output rate    : 312 bps (0 pps)
  Active alarms  : None
  Active defects : None
  MAC statistics:
    Input bytes: 901296, Input packets: 9799, Output bytes: 976587, Output
packets: 10451
  Filter statistics:
    Filtered packets: 68, Padded packets: 0, Output packet errors: 0
  Autonegotiation information:
    Negotiation status: Complete
    Link partner:
      Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote
fault: OK
    Local resolution:
      Flow control: Symmetric, Remote fault: Link OK
  Interface transmit statistics: Disabled

```



NOTE: Delete the loopback statement after completing your diagnosis.

Execute one of the following steps for a hardware loopback diagnostic test as needed:

- For an Ethernet PIC with a fiber optic interface—Physically loop the T_x and R_x port and check the status of the physical link with the **show interfaces *interface-name* media** operational mode command.
- For an Ethernet PIC with an RJ-45 Ethernet interface—Build a loopback plug by crossing pin 1 (T_x +) to pin 3 (R_x +) together and pin 2 (T_x -) and pin 6 (R_x -) together and check the status of the physical link with the **show interfaces *interface-name* media** operational mode command.



NOTE: For information about loopback testing, see *Performing Loopback Testing for Fast Ethernet and Gigabit Ethernet Interfaces*.

- Diagnosis**
- Does the **Enabled** field display **Physical link is Up** status and the **Active alarms and Active defect** field display **None** when you perform the loopback test?
 - Yes: Go to the [“Checking Other Possibilities” on page 386](#) section.
 - No: Continue to the next diagnostic test.
 - When the Ethernet interface is connected to a remote Ethernet device over multiple patch panels, check to see whether the connection can be looped back at the different patch panels so you can conduct a loopback diagnostic test. Is the loopback diagnostic test successful?
 - Yes: Go to the [“Checking Other Possibilities” on page 386](#) section.
 - No: Contact JTAC for further assistance.

Checking Other Possibilities

Problem **Description:** Loopback diagnostic test is successful but unable to transmit and receive packets on the Ethernet interface.

Solution Use the following commands as needed to troubleshoot an Ethernet interface, for example, an ge-5/0/1 interface:

- Run the **show interfaces *interface-name* terse** operational command to check if the physical interface and logical interfaces are administratively disabled. For example, on ge-5/0/1 interface.

```
user@host> show interfaces ge-5/0/1 terse
Interface      Admin Link Proto  Local          Remote
ge-5/0/1       up    up
ge-5/0/1.0     up    up   inet   20.1.1.2/24
```

- Diagnosis**
- Does the physical interface and its corresponding logical interfaces display **down** in the output of the **show interfaces *interface-name* terse** operational mode command?
 - Yes: Enable the interfaces as shown in [“To Enable a Physical Interface” on page 387](#).
 - No: Continue to the next diagnostic test.

2. Are the **speed**, **duplex**, and **auto-negotiation** fields in the output of **show interfaces interface-name extensive** operational mode command correctly set for the interface?



NOTE: Check if the associated Flexible PIC Concentrator (FPC), Modular Port Concentrator (MPC), or Dense Port Concentrator (DPC) and its Modular Interface Card (MIC) or PIC with its 10-gigabit small form-factor pluggable transceiver (XFP) or SFP supports speed and auto-negotiation settings.

- Yes: Check *Monitoring Fast Ethernet and Gigabit Ethernet Interfaces* for more troubleshooting tips.
- No: Contact JTAC for further assistance.

To Enable a Physical Interface

To enable a physical interface:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level.

```
[edit]
user@host# edit interfaces
```

2. Check if the interface is administratively disabled by executing the **show** command on the interface. For example on ge-5/0/1 interface.

```
user@host# show ge-5/0/1
```

```
disable;
```

If you encounter trouble in enabling the interface, contact JTAC for further assistance.

3. Enable the interface and commit.

```
[edit interfaces]
user@host# delete interface-name disable
user@host# commit
```

See Also • [show interfaces on page 1177](#)

Time Domain Reflectometry on ACX Series Routers Overview

Time Domain Reflectometry (TDR) is a technology used for diagnosing copper cable states. This technique can be used to determine if cabling is at fault when you cannot

establish a link. TDR detects the defects by sending a signal through a cable, and reflecting it from the end of the cable. Open circuits, short circuits, sharp bends and other defects in the cable, reflects the signal back, at different amplitudes, depending on the severity of the defect.

Several factors that result in degraded or low-quality cable plants can cause packet loss, suboptimal connection speed, reduced network efficiency, and complete connection failures. These types of problems can occur because of poor cable construction, identification of pair twists, loose connectors, poor contacts between the points, and stretched or broken pairs of cables. Broadcom transceivers enable you to analyze the condition of the cable plant or topology and identify any problems that have occurred. This functionality is effectively used in the following scenarios:

- Troubleshooting during initial network equipment installation.
- Discovery of failures when network problems occur.
- Maintenance of optimally functioning cable plants.
- Fault determination during the testing of network equipment in production cable networks.

TDR supports the following capabilities for examination of cable faults on ACX Series routers:

- Cable status pair (open or short)—When the router operates in Gigabit Ethernet mode, all the four pairs (8 wires) are used. Only Pair-A and Pair-B are required to operate in 10/100BASE-T Ethernet mode. If either of these required pairs is open or short-circuited, the transceiver reports the following faults:
 - Any open wire
 - Wires of a particular pair that are shorted
- Distance to fault per pair—Distance at which an open or a short-circuit is detected in meters. This measurement is also termed as cable length. The transceiver reports the following faults:
 - Cable length when the cable status is normal
 - Distance to fault when the cable status is not normal
- Pair Swap—Swapping of twisted-pairs in straight-through and cross-over cable plants are detected.
- Polarity Swap—Each cable pair carries a differential signal from one end to the other end of the cable. Each wire within the pair is assigned a polarity. The wires in a pair are normally connected in a one-to-one form. This connection enables the transmitter at one end to be connected to the receiver at the other end with same polarity. Sometimes, the wiring within the pair is also swapped. This type of connection is called polarity swap. Broadcom transceivers can detect such swapping and automatically adjust the connection to enable the links to operate normally. However, the transceiver reports polarity swaps that it detects in the cable plant.

On 4-port Gigabit Ethernet and 8-port Gigabit Ethernet MICs with copper SFP transceivers (using BCM54880) and 4-port Gigabit Ethernet, 6-port Gigabit Ethernet, and 8-port Gigabit Ethernet MICs with copper and optical SFP transceivers (using BCM54640E PHY), only 10BASE-T pair polarity is supported. 100BASE-T and 1000BASE-T polarities are not supported.

When the Gigabit Ethernet link cannot be established (for example, if only two pairs are present that are fully functional), TDR in the physical layer (PHY) brings down the link to a 100 MB link, which is called a downshift in the link. The physical layer might require 10-20 seconds for the link to come up if a downgrade in wire speed occurs because it attempts to connect at 1000 MB five times before it falls back to 100BASE-TX.

TDR diagnostics is supported only on copper interfaces and not on fiber interfaces.

Keep the following points in mind when you configure TDR:

- If you connect a port undergoing a TDR test to a Gigabit Ethernet interface that is enabled to automatically detect MDI (Media Dependent Interface) and MDIX (Media Dependent Interface with Crossover) port connections, the TDR result might be invalid.
- If you connect a port undergoing a TDR test to a 100BASE-T copper interface, the unused pairs are reported as faulty because the remote end does not terminate these pairs.
- You must not modify the port configuration while the TDR test is running.
- Because of cable characteristics, you need to run the TDR test multiple times to get accurate results.
- Do not change the port status (such as removing the cable at the near or far end) because such a change can result in inaccurate statistics in the results.
- While measuring the cable length or distance to fault (per pair), sometimes, a few cable length inconsistencies might be observed during a TDR test. Broadcom transceivers have the following cable length limitations:
 - For a properly-terminated good cable, the accuracy of the cable length reported is plus or minus 10 meters.
 - If a pair is open or short-circuited, the far-end termination does not affect the computed result for that pair.
 - The accuracy of the measured cable length, when open and short-circuit conditions are detected, is plus or minus 5 meters.
 - The accuracy of a good pair, when one or more pairs are open or short-circuited, is plus or minus 10 meters.
- Polarity swap detection is supported only in 10BASE-T mode.
- The TDR test does not impact the traffic if the interface operates at 10-Gigabit Ethernet per second of bandwidth, which is the default configuration. However, if the speed of the interface is configured to be other than 10-Gigabit Ethernet, running the TDR test affects the traffic.

TDR diagnostics might bring the link down and initialize the physical layer (PHY) with default configuration to perform its operation.

When the TDR validation test is completed, the PHY layer resumes operation in the same manner as before the cable diagnostics test was performed. However, link flaps might be momentarily observed. We recommend that you run the TDR test at a speed of 1 gigabit per second, which is the default configuration, to obtain more accurate results.

TDR is supported on the following interfaces on ACX Series routers:

- On ACX1000 routers, 4 RJ45 (Cu) ports or 8-port Gigabit Ethernet MICs with small form-factor pluggable (SFP) transceivers and RJ45 connectors.

On ACX1100 routers, 4-port or 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.

- On ACX2000 routers, 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX2100 and ACX2200 routers, 4-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX4000 routers, 4-port, 6-port, or 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.

You must select the media type as copper for the 1-Gigabit Ethernet interfaces. To specify the media type, include the **media-type** statement with the **copper** option at the **[edit interfaces interface-name]** hierarchy level. Media type selection is applicable to ports only in slot 2. When media-type is not set, the port accepts either type of connection. The media type is fiber if a transceiver is installed in the SFP connection. If no transceiver is installed, the media type is copper. The COMBO ports (combination ports) on ACX routers support both the copper and fiber-optic media types. On such ports or interfaces, you must configure the media type as copper to run the TDR test.

You can run the TDR test from operational mode and view the success or failure results of the test. To start a test on a specific interface, issue the **request diagnostics tdr start interface interface-name** command. To stop the TDR test currently in progress on the specified interface, issue the **request diagnostics tdr abort interface interface-name** command. To display the test results for all copper interfaces, enter the **show diagnostics tdr** command. To display the test results for a particular interface, enter the **show diagnostics tdr interface interface-name** command.

**Related
Documentation**

- [Diagnosing a Faulty Twisted-Pair Cable on ACX Series Routers on page 390](#)

Diagnosing a Faulty Twisted-Pair Cable on ACX Series Routers

Problem	Description: A 10/100BASE-T Ethernet interface has connectivity problems that you suspect might be caused by a faulty cable.
----------------	---

Solution Use the time domain reflectometry (TDR) test to determine whether a twisted-pair Ethernet cable is faulty.

The TDR test:

- Detects and reports faults for each twisted pair in an Ethernet cable. Faults detected include open circuits, short circuits, and impedance mismatches.
- Reports the distance to fault to within 1 meter.
- Detects and reports pair swaps, pair polarity reversals, and excessive pair skew.

The TDR test is supported on the following ACX routers and interfaces:

- On ACX1000 routers, 4 RJ45 (Cu) ports or 8-port Gigabit Ethernet MICs with small form-factor pluggable (SFP) transceivers and RJ45 connectors.
- On ACX1100 routers, 4-port or 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX2000 routers, 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX2100 and ACX2200 routers, 4-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX4000 routers, 4-port, 6-port, or 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.



NOTE: We recommend running the TDR test on an interface when there is no traffic on the interface.

TDR diagnostics are applicable for copper ports only and not for optical fiber ports.

To diagnose a cable problem by running the TDR test:

1. Run the **request diagnostics tdr** command.

```
user@host> request diagnostics tdr start interface ge-0/0/10
```

```
Interface TDR detail:
```

```
Test status                : Test successfully executed ge-0/0/10
```

2. View the results of the TDR test with the **show diagnostics tdr** command.

```
user@host> show diagnostics tdr interface ge-0/0/10
```

```
Interface TDR detail:
```

```
Interface name              : ge-0/0/10
Test status                 : Passed
Link status                 : Down
```

```

MDI pair           : 1-2
  Cable status      : Normal
  Distance fault    : 0 Meters
  Polartiy swap     : N/A
  Skew time         : N/A
MDI pair           : 3-6
  Cable status      : Normal
  Distance fault    : 0 Meters
  Polartiy swap     : N/A
  Skew time         : N/A
MDI pair           : 4-5
  Cable status      : Open
  Distance fault    : 1 Meters
  Polartiy swap     : N/A
  Skew time         : N/A
MDI pair           : 7-8
  Cable status      : Normal
  Distance fault    : 0 Meters
  Polartiy swap     : N/A
  Skew time         : N/A
Channel pair       : 1
  Pair swap         : N/A
Channel pair       : 2
  Pair swap         : N/A
Downshift          : N/A

```

3. Examine the **Cable status** field for the four MDI pairs to determine if the cable has a fault. In the preceding example, the twisted pair on pins 4 and 5 is broken or cut at approximately one meter from the **ge-0/0/10** port connection.



NOTE: The **Test Status** field indicates the status of the TDR test, not the cable. The value **Passed** means the test completed—it does not mean that the cable has no faults.

The following is additional information about the TDR test:

- The TDR test can take some seconds to complete. If the test is still running when you execute the **show diagnostics tdr** command, the **Test status** field displays **Started**. For example:

```

user@host> show diagnostics tdr interface ge-0/0/22

Interface TDR detail:
Interface name      : ge-0/0/22
Test status         : Started

```

- You can terminate a running TDR test before it completes by using the **request diagnostics tdr abort interface *interface-name*** command. The test terminates with no results, and the results from any previous test are cleared.

- You can display summary information about the last TDR test results for all interfaces on the router that support the TDR test by not specifying an interface name with the **show diagnostics tdr** command. For example:

```
user@host> show diagnostics tdr
```

Interface	Test status	Link status	Cable status	Max distance	fault
ge-0/0/0	Passed	UP	OK	0	
ge-0/0/1	Not Started	N/A	N/A	N/A	
ge-0/0/2	Passed	UP	OK	0	
ge-0/0/3	Not Started	N/A	N/A	N/A	
ge-0/0/4	Passed	UP	OK	0	
ge-0/0/5	Passed	UP	OK	0	
ge-0/0/6	Passed	UP	OK	0	
ge-0/0/7	Not Started	N/A	N/A	N/A	
ge-0/0/8	Passed	Down	OK	0	
ge-0/0/9	Not Started	N/A	N/A	N/A	
ge-0/0/10	Passed	Down	Fault	1	
ge-0/0/11	Passed	UP	OK	0	
ge-0/0/12	Not Started	N/A	N/A	N/A	
ge-0/0/13	Not Started	N/A	N/A	N/A	
ge-0/0/14	Not Started	N/A	N/A	N/A	
ge-0/0/15	Not Started	N/A	N/A	N/A	
ge-0/0/16	Not Started	N/A	N/A	N/A	
ge-0/0/17	Not Started	N/A	N/A	N/A	
ge-0/0/18	Not Started	N/A	N/A	N/A	
ge-0/0/19	Passed	Down	OK	0	
ge-0/0/20	Not Started	N/A	N/A	N/A	
ge-0/0/21	Not Started	N/A	N/A	N/A	
ge-0/0/22	Passed	UP	OK	0	
ge-0/0/23	Not Started	N/A	N/A	N/A	

Related Documentation

- [Time Domain Reflectometry on ACX Series Routers Overview on page 387](#)
- *request diagnostics tdr*
- *show diagnostics tdr*

PART 5

Configuration Statements and Operational Commands

- [Configuration Statements on page 397](#)
- [Interface Operational Commands on page 1167](#)
- [ANCP Operational Commands on page 1679](#)
- [BFD Operational Commands on page 1723](#)
- [BGP Operational Commands on page 1739](#)
- [ES-IS Operational Commands on page 1791](#)
- [IP Multicast Operational Commands on page 1801](#)
- [IPv6 Operational Commands on page 2047](#)
- [IS-IS Operational Commands on page 2057](#)
- [LLDP Operational Commands on page 2123](#)
- [MVRP Operational Commands on page 2143](#)
- [OSPF Operational Commands on page 2161](#)
- [Protocol-Independent Routing Operational Commands on page 2245](#)
- [RIP Operational Commands on page 2517](#)
- [RIPng Operational Commands on page 2529](#)
- [Firewall Filter Operational Commands on page 2539](#)
- [Layer 2 Bridging and Switching Operational Commands on page 2561](#)
- [VPN Operational Commands on page 2593](#)

CHAPTER 13

Configuration Statements

- 802.3ad on page 416
- accept on page 417
- accept-source-mac on page 419
- access-concentrator on page 421
- access-profile on page 422
- accounting on page 423
- accounting-profile on page 424
- acfc on page 425
- acknowledge-retries on page 426
- acknowledge-timer on page 427
- action (OAM) on page 428
- action (Policer) on page 428
- action-profile (Applying to CFM) on page 429
- action-profile (Defining for CFM) on page 430
- action-profile on page 431
- action-red-differential-delay on page 432
- activation-delay on page 433
- activation-priority on page 434
- address on page 435
- advertise-interval on page 437
- age on page 438
- agent-specifier on page 439
- aggregate (Gigabit Ethernet CoS Policer) on page 440
- aggregate (Hierarchical Policer) on page 441
- aggregate (SONET/SDH) on page 442
- aggregate-ports on page 442
- aggregated-ether-options on page 443
- aggregated-sonet-options on page 444

- [alarm \(optics-options\) on page 445](#)
- [alias \(Interfaces\) on page 446](#)
- [allow-any-vci on page 447](#)
- [allow-fragmentation on page 448](#)
- [allow-remote-loopback on page 449](#)
- [annex on page 449](#)
- [apply-action-profile on page 450](#)
- [aps on page 451](#)
- [arp \(Interfaces\) on page 452](#)
- [asynchronous-notification on page 454](#)
- [atm-encapsulation on page 455](#)
- [atm-options on page 456](#)
- [atm-scheduler-map on page 457](#)
- [authentication on page 458](#)
- [authentication-key on page 459](#)
- [authentication-profile-name on page 459](#)
- [authenticator on page 460](#)
- [auto-configure on page 461](#)
- [auto-discovery on page 462](#)
- [auto-negotiation on page 463](#)
- [backup-destination on page 465](#)
- [backup-interface on page 465](#)
- [backup-options on page 466](#)
- [bandwidth \(Interfaces\) on page 467](#)
- [bandwidth-limit \(Hierarchical Policer\) on page 468](#)
- [bandwidth-limit \(Policer for Gigabit Ethernet Interfaces\) on page 469](#)
- [bearer-bandwidth-limit on page 470](#)
- [bert-algorithm on page 471](#)
- [bert-error-rate on page 473](#)
- [bert-period on page 475](#)
- [bridge-domain on page 476](#)
- [broadcast on page 477](#)
- [buildout \(E3 or T3 over ATM Interfaces\) on page 478](#)
- [buildout \(T1 Interfaces\) on page 479](#)
- [bundle on page 480](#)
- [burst-size-limit \(Hierarchical Policer\) on page 481](#)
- [burst-size-limit \(Policer for Gigabit Ethernet Interfaces\) on page 482](#)

- [byte-encoding on page 483](#)
- [bytes on page 484](#)
- [calculation-weight on page 485](#)
- [callback on page 486](#)
- [callback-wait-period on page 487](#)
- [caller on page 488](#)
- [calling-number on page 489](#)
- [cbit-parity on page 490](#)
- [cbr on page 491](#)
- [cell-bundle-size on page 492](#)
- [chap on page 493](#)
- [chap-secret on page 494](#)
- [circuit-type on page 495](#)
- [cisco-interoperability on page 495](#)
- [classifier on page 496](#)
- [clear-dont-fragment-bit on page 497](#)
- [clock-rate on page 498](#)
- [clocking on page 499](#)
- [clocking-mode on page 500](#)
- [community \(Policy Options\) on page 501](#)
- [compatibility-mode on page 504](#)
- [compression \(PPP Properties\) on page 505](#)
- [compression \(Voice Services\) on page 506](#)
- [compression-device on page 507](#)
- [connections on page 507](#)
- [connection-protection-tlv on page 508](#)
- [connectivity-fault-management on page 509](#)
- [container-devices on page 511](#)
- [container-list on page 512](#)
- [container-options on page 513](#)
- [container-type on page 514](#)
- [continuity-check on page 515](#)
- [control-channel on page 516](#)
- [control-polarity on page 517](#)
- [control-signal on page 518](#)
- [copy-tos-to-outer-ip-header on page 519](#)
- [core-dump on page 519](#)

- [crc-major-alarm-threshold](#) on page 520
- [crc-minor-alarm-threshold](#) on page 521
- [cts](#) on page 522
- [cts-polarity](#) on page 523
- [cycle-time](#) on page 524
- [damping \(Interfaces\)](#) on page 525
- [data-channel](#) on page 527
- [data-tlv-size](#) on page 528
- [dcd](#) on page 529
- [dcd-polarity](#) on page 530
- [dce](#) on page 530
- [deactivation-delay](#) on page 531
- [dce-options](#) on page 532
- [default-actions](#) on page 533
- [default-chap-secret](#) on page 534
- [default-pap-password](#) on page 535
- [delimiter](#) on page 535
- [demux-destination \(Underlying Interface\)](#) on page 536
- [demux-destination \(Demux Interface\)](#) on page 537
- [demux-options \(Static Interface\)](#) on page 538
- [demux-source \(Demux Interface\)](#) on page 539
- [demux-source \(Underlying Interface\)](#) on page 540
- [demux0 \(Static Interface\)](#) on page 541
- [demux0 \(Dynamic Interface\)](#) on page 542
- [description \(Interfaces\)](#) on page 544
- [destination \(IPCP\)](#) on page 545
- [destination \(Routing Instance\)](#) on page 546
- [destination \(Tunnels\)](#) on page 547
- [destination-class-usage](#) on page 548
- [destination-profile](#) on page 549
- [dial-options](#) on page 550
- [dial-string](#) on page 551
- [dialer](#) on page 551
- [dialer-options](#) on page 552
- [dialin](#) on page 553
- [direction](#) on page 554
- [disable \(Interface\)](#) on page 555

- [disable \(Link Protection\) on page 556](#)
- [disable-mlppp-inner-ppp-pfc on page 557](#)
- [dlci on page 558](#)
- [do-not-fragment on page 559](#)
- [domain-name on page 560](#)
- [dot1x on page 561](#)
- [down-count on page 562](#)
- [drop \(PPPoE Service Name Tables\) on page 563](#)
- [drop-timeout on page 564](#)
- [ds0-options on page 565](#)
- [dsl-options on page 566](#)
- [dsr on page 567](#)
- [dsr-polarity on page 568](#)
- [dte-options on page 569](#)
- [dtr on page 570](#)
- [dtr-circuit on page 571](#)
- [dtr-polarity on page 571](#)
- [dump-on-flow-control on page 572](#)
- [dynamic-call-admission-control on page 573](#)
- [dynamic-profile \(PPP\) on page 574](#)
- [dynamic-profile \(PPPoE Service Name Tables\) on page 575](#)
- [dynamic-profile \(Stacked VLAN\) on page 576](#)
- [dynamic-profile \(VLAN\) on page 577](#)
- [dynamic-profiles on page 578](#)
- [e1-options on page 587](#)
- [e3-options on page 588](#)
- [east-interface on page 589](#)
- [egress-policer-overhead on page 590](#)
- [encapsulation \(Container Interface\) on page 591](#)
- [encapsulation \(Logical Interface\) on page 592](#)
- [encapsulation on page 596](#)
- [encoding on page 603](#)
- [epd-threshold \(Logical Interface\) on page 604](#)
- [epd-threshold \(Physical Interface\) on page 605](#)
- [es-options on page 606](#)
- [ethernet \(Protocols OAM\) on page 607](#)
- [ethernet-policer-profile on page 613](#)

- [ethernet-ring](#) on page 615
- [ethernet-switch-profile](#) on page 616
- [eui-64](#) on page 618
- [evcs](#) on page 619
- [event \(LFM\)](#) on page 620
- [event-thresholds](#) on page 621
- [fast-aps-switch](#) on page 622
- [f-max-period](#) on page 623
- [facility-override](#) on page 623
- [failover-delay](#) on page 624
- [family \(Dynamic Standard Interface\)](#) on page 625
- [family](#) on page 627
- [fastether-options](#) on page 632
- [fcs](#) on page 633
- [feac-loop-respond](#) on page 634
- [fec \(gigether\)](#) on page 635
- [filter](#) on page 636
- [filter \(Applying to an Interface\)](#) on page 637
- [flexible-vlan-tagging](#) on page 638
- [flow-control](#) on page 639
- [flow-control-options](#) on page 640
- [force](#) on page 641
- [forward-and-send-to-re](#) on page 642
- [forwarding-class \(ATM2 IQ Scheduler Maps\)](#) on page 643
- [forwarding-class \(Gigabit Ethernet IQ Classifier\)](#) on page 644
- [forward-only](#) on page 645
- [fragment-threshold](#) on page 646
- [frame-error](#) on page 647
- [frame-period](#) on page 648
- [frame-period-summary](#) on page 649
- [framing \(E1, E3, and T1 Interfaces\)](#) on page 650
- [framing \(10-Gigabit Ethernet Interfaces\)](#) on page 651
- [framing \(SONET and SDH Interfaces\)](#) on page 652
- [gigether-options](#) on page 653
- [gratuitous-arp-reply](#) on page 654
- [guard-interval](#) on page 655
- [hardware-assisted-timestamping](#) on page 656

- [high-plp-threshold](#) on page 657
- [hello-timer](#) on page 658
- [hierarchical-policer](#) on page 659
- [hierarchical-scheduler \(Subscriber Interfaces on MX Series Routers\)](#) on page 660
- [high-plp-max-threshold](#) on page 661
- [high-plp-threshold](#) on page 662
- [hold-interval \(OAM\)](#) on page 663
- [hold-interval \(Protection Group\)](#) on page 664
- [hold-time \(APS\)](#) on page 665
- [hold-time \(Physical Interface\)](#) on page 666
- [hold-time \(SONET/SDH Defect Triggers\)](#) on page 668
- [host \(Interfaces\)](#) on page 669
- [host-prefix-only](#) on page 670
- [iccp](#) on page 671
- [idle-cycle-flag](#) on page 673
- [idle-timeout](#) on page 674
- [ieee802.1p](#) on page 675
- [if-exceeding \(Hierarchical Policer\)](#) on page 676
- [if-exceeding-pps \(Hierarchical Policer\)](#) on page 677
- [igmp-snooping](#) on page 678
- [ignore](#) on page 681
- [ignore-all](#) on page 682
- [ignore-l3-incompletes](#) on page 682
- [ilmi](#) on page 683
- [ima-group-options](#) on page 684
- [ima-link-options](#) on page 686
- [inactivity-timeout](#) on page 686
- [incoming-map](#) on page 687
- [indication](#) on page 688
- [indication-polarity](#) on page 689
- [ingress-policer-overhead](#) on page 690
- [ingress-rate-limit](#) on page 692
- [init-command-string](#) on page 693
- [initial-route-check](#) on page 694
- [inner-tag-protocol-id](#) on page 695
- [inner-vlan-id](#) on page 696
- [inner-vlan-id-range](#) on page 697

- [input](#) on page 698
- [input-list](#) on page 699
- [input-policer](#) on page 700
- [input-priority-map](#) on page 701
- [input-three-color](#) on page 702
- [input-vlan-map \(Aggregated Ethernet\)](#) on page 703
- [input-vlan-map](#) on page 704
- [instance](#) on page 705
- [interface \(Hierarchical CoS Schedulers\)](#) on page 705
- [interface \(IEEE 802.1x\)](#) on page 706
- [interface \(IEEE 802.1ag OAM Connectivity-Fault Management\)](#) on page 708
- [interface \(OAM Link-Fault Management\)](#) on page 709
- [interface \(Port Mirroring\)](#) on page 710
- [interface-down](#) on page 711
- [interface-name](#) on page 711
- [interface-none](#) on page 712
- [interface-range](#) on page 713
- [interface-transmit-statistics](#) on page 714
- [interface-set \(Ethernet Interfaces\)](#) on page 715
- [interface-set \(IP Demux Interfaces\)](#) on page 716
- [interface-shared-with](#) on page 717
- [interface-status-tlv](#) on page 718
- [interface-switch](#) on page 719
- [interface-type \(Interfaces\)](#) on page 720
- [interfaces](#) on page 722
- [interfaces \(Static and Dynamic Subscribers\)](#) on page 723
- [interleave-fragments](#) on page 728
- [interval](#) on page 729
- [inverse-arp](#) on page 730
- [invert-data](#) on page 731
- [ipsec-sa](#) on page 732
- [isdn-options](#) on page 733
- [iteration-count](#) on page 734
- [iteration-period](#) on page 735
- [keep-address-and-control](#) on page 736
- [keepalives](#) on page 737
- [key](#) on page 738

- [l2tp-interface-id](#) on page 739
- [lcp \(Protocols\)](#) on page 740
- [lcp \(802.3ad\)](#) on page 741
- [lcp \(Aggregated Ethernet\)](#) on page 742
- [layer2-policer](#) on page 745
- [lcp-max-conf-req](#) on page 746
- [lcp-restart-timer](#) on page 747
- [level](#) on page 748
- [line-encoding](#) on page 749
- [line-protocol](#) on page 750
- [line-rate](#) on page 751
- [linear-red-profile](#) on page 752
- [linear-red-profiles](#) on page 753
- [link-adjacency-loss](#) on page 754
- [link-discovery](#) on page 754
- [link-down](#) on page 755
- [link-event-rate](#) on page 755
- [link-fault-management](#) on page 756
- [link-layer-overhead](#) on page 757
- [link-mode](#) on page 758
- [link-protection](#) on page 760
- [link-speed \(Aggregated Ethernet\)](#) on page 761
- [link-speed \(Aggregated SONET/SDH\)](#) on page 763
- [linktrace](#) on page 764
- [lmi \(Frame Relay\)](#) on page 765
- [lmi \(Ethernet OAM\)](#) on page 767
- [lmi-type](#) on page 768
- [load-interval](#) on page 769
- [load-threshold](#) on page 770
- [local-name](#) on page 771
- [local-password](#) on page 772
- [lockout](#) on page 772
- [log-prefix \(Interfaces\)](#) on page 773
- [logical-interface-fpc-redundancy \(Aggregated Ethernet Subscriber Interfaces\)](#) on page 773
- [logical-interface-policer](#) on page 774
- [logical-systems](#) on page 776

- [long-buildout on page 777](#)
- [loop-timing on page 778](#)
- [loopback \(ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3\) on page 779](#)
- [loopback \(Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet\) on page 781](#)
- [loopback \(Serial\) on page 782](#)
- [loopback-clear-timer on page 783](#)
- [loss-priority on page 784](#)
- [loss-threshold on page 785](#)
- [low-plp-max-threshold on page 786](#)
- [low-plp-threshold on page 787](#)
- [lowest-priority-defect on page 788](#)
- [lsq-failure-options on page 789](#)
- [mac on page 790](#)
- [mac-address \(Accept Source Mac\) on page 791](#)
- [mac-address \(VLAN and Stacked VLAN Interfaces\) on page 792](#)
- [mac-learn-enable on page 793](#)
- [mac-validate on page 794](#)
- [maintenance-association on page 795](#)
- [maintenance-domain on page 796](#)
- [master-only on page 797](#)
- [maximum-contexts on page 798](#)
- [maximum-requests on page 799](#)
- [maximum-vcs on page 800](#)
- [mc-ae on page 801](#)
- [member-interface-speed on page 804](#)
- [member-interface-type on page 805](#)
- [mep on page 806](#)
- [minimum-links on page 807](#)
- [mip-half-function on page 808](#)
- [mlfr-uni-nni-bundle-options on page 809](#)
- [mode \(Dynamic Profiles\) on page 810](#)
- [mode \(Interfaces\) on page 811](#)
- [modem-options on page 812](#)
- [monitor-session on page 813](#)
- [mpls \(Interfaces\) on page 814](#)
- [mrru on page 815](#)
- [mtu on page 816](#)

- [multi-chassis-protection](#) on page 820
- [multicast-dlci](#) on page 821
- [multicast-only](#) on page 822
- [multicast-statistics](#) on page 823
- [multicast-vci](#) on page 824
- [multilink-max-classes](#) on page 825
- [multipoint](#) on page 825
- [multipoint-destination](#) on page 826
- [multiservice-options](#) on page 827
- [n391](#) on page 828
- [n392](#) on page 829
- [n393](#) on page 830
- [name-format](#) on page 831
- [native-vlan-id](#) on page 832
- [ncp-max-conf-req](#) on page 834
- [ncp-restart-timer](#) on page 835
- [nd6-stale-time](#) on page 836
- [negotiate-address](#) on page 837
- [negotiation-options](#) on page 838
- [neighbor \(Automatic Protection Switching for SONET/SDH\)](#) on page 839
- [no-allow-link-events](#) on page 839
- [no-aggregate-delegate-processing](#) on page 840
- [asynchronous-notification](#) on page 841
- [no-auto-mdix](#) on page 842
- [auto-negotiation](#) on page 843
- [cbit-parity](#) on page 845
- [core-dump](#) on page 846
- [feac-loop-respond](#) on page 847
- [flow-control](#) on page 848
- [gratuitous-arp-reply](#) on page 849
- [no-gratuitous-arp-request](#) on page 850
- [no-keepalives](#) on page 851
- [long-buildout](#) on page 852
- [loopback \(Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet\)](#) on page 853
- [mac-learn-enable](#) on page 854
- [no-partition](#) on page 855
- [payload-scrambler](#) on page 857

- [no-pre-classifier](#) on page 858
- [no-redirects](#) on page 859
- [source-filtering](#) on page 860
- [syslog \(Monitoring\)](#) on page 861
- [no-termination-request](#) on page 862
- [translate-discard-eligible](#) on page 863
- [translate-fecn-and-becn](#) on page 863
- [unframed](#) on page 864
- [z0-increment](#) on page 864
- [node-id](#) on page 865
- [non-revertive \(Interfaces\)](#) on page 865
- [oam](#) on page 866
- [oam-liveness](#) on page 869
- [oam-period](#) on page 870
- [oc-slice](#) on page 871
- [open-timeout](#) on page 872
- [operating-mode](#) on page 873
- [optics-options](#) on page 874
- [option-82](#) on page 875
- [otn-options](#) on page 876
- [output](#) on page 878
- [output-list](#) on page 879
- [output-policer](#) on page 880
- [output-priority-map](#) on page 881
- [output-three-color](#) on page 882
- [output-vlan-map \(Aggregated Ethernet\)](#) on page 883
- [output-vlan-map](#) on page 884
- [overflow \(Receive Bucket\)](#) on page 885
- [overflow \(Transmit Bucket\)](#) on page 885
- [override](#) on page 886
- [pado-advertise](#) on page 887
- [paired-group](#) on page 888
- [pap](#) on page 889
- [pap-password](#) on page 890
- [partition](#) on page 891
- [passive \(CHAP\)](#) on page 892
- [passive \(PAP\)](#) on page 893

- [passive-monitor-mode](#) on page 894
- [password \(Interfaces\)](#) on page 895
- [path-database-size](#) on page 895
- [path-trace](#) on page 896
- [payload-scrambler](#) on page 897
- [payload-size](#) on page 898
- [pdu-interval](#) on page 899
- [pdu-threshold](#) on page 900
- [peer](#) on page 901
- [peer-unit](#) on page 902
- [per-unit-scheduler](#) on page 903
- [performance-monitoring](#) on page 905
- [periodic](#) on page 906
- [pfc](#) on page 907
- [pic-type](#) on page 907
- [plp-to-clp](#) on page 908
- [plp1](#) on page 909
- [point-to-point](#) on page 910
- [policer \(CFM Firewall\)](#) on page 911
- [policer \(CFM Global\)](#) on page 912
- [policer \(CFM Session\)](#) on page 913
- [policer \(CoS\)](#) on page 914
- [policer \(Interface\)](#) on page 915
- [policer \(MAC\)](#) on page 916
- [policy-statement](#) on page 917
- [pool](#) on page 921
- [pop](#) on page 922
- [pop-all-labels](#) on page 923
- [pop-pop](#) on page 924
- [pop-swap](#) on page 925
- [port](#) on page 926
- [port-priority](#) on page 927
- [port-status-tlv](#) on page 928
- [post-service-filter](#) on page 929
- [ppp-options](#) on page 930
- [pppoe-options](#) on page 932
- [pppoe-underlying-options \(Static and Dynamic Subscribers\)](#) on page 933

- [preferred](#) on page 934
- [preferred-source-address](#) on page 935
- [preferred-source-address](#) on page 936
- [premium \(Hierarchical Policer\)](#) on page 938
- [premium \(Output Priority Map\)](#) on page 939
- [premium \(Policer\)](#) on page 940
- [preserve-interface](#) on page 941
- [primary \(Address on Interface\)](#) on page 942
- [primary \(Interface for Router\)](#) on page 943
- [primary \(AS PIC or Multiservices PIC Interfaces\)](#) on page 944
- [priority \(OAM Connectivity-Fault Management\)](#) on page 945
- [priority \(Schedulers\)](#) on page 946
- [promiscuous-mode](#) on page 947
- [protect-circuit](#) on page 948
- [protection-group](#) on page 949
- [protocol-down](#) on page 951
- [protocols](#) on page 952
- [proxy](#) on page 953
- [proxy-arp](#) on page 954
- [push](#) on page 955
- [push-push](#) on page 956
- [queue-depth](#) on page 957
- [queue-length](#) on page 958
- [queues](#) on page 959
- [quiet-period](#) on page 960
- [radius-realm](#) on page 961
- [ranges \(Dynamic Stacked VLAN\)](#) on page 962
- [ranges \(Dynamic VLAN\)](#) on page 963
- [rate](#) on page 964
- [rate](#) on page 964
- [rdi](#) on page 965
- [reassemble-packets](#) on page 965
- [reauthentication](#) on page 966
- [receive-bucket](#) on page 967
- [receive-options-packets](#) on page 968
- [receive-ttl-exceeded](#) on page 968
- [red-differential-delay](#) on page 969

- [redial-delay](#) on page 970
- [redundancy-options](#) on page 971
- [remote](#) on page 972
- [remote-loopback](#) on page 973
- [remote-loopback-respond](#) on page 974
- [remote-mep](#) on page 975
- [remove-when-no-subscribers](#) on page 976
- [request](#) on page 976
- [required-depth](#) on page 977
- [restore-interval](#) on page 978
- [retries](#) on page 979
- [revert-time \(Interfaces\)](#) on page 980
- [revertive](#) on page 981
- [rfc-2615](#) on page 982
- [ring-protection-link-end](#) on page 982
- [ring-protection-link-owner](#) on page 983
- [routing-instance](#) on page 984
- [routing-instance \(PPPoE Service Name Tables\)](#) on page 985
- [rpf-check \(Dynamic Profiles\)](#) on page 986
- [rpf-check](#) on page 987
- [rpf-loose-mode-discard](#) on page 988
- [rtp](#) on page 989
- [rts](#) on page 990
- [rts-polarity](#) on page 991
- [rtvbr](#) on page 992
- [sa-multicast \(100-Gigabit Ethernet\)](#) on page 994
- [sampling \(Interfaces\)](#) on page 995
- [satop-options](#) on page 996
- [shared-interface](#) on page 997
- [scheduler-maps \(For ATM2 IQ Interfaces\)](#) on page 998
- [schedulers](#) on page 999
- [secondary](#) on page 999
- [send-critical-event](#) on page 1000
- [serial-options](#) on page 1001
- [server](#) on page 1002
- [server-timeout](#) on page 1003
- [service \(Logical Interfaces\)](#) on page 1004

- [service \(PPPoE\) on page 1005](#)
- [service-domain on page 1006](#)
- [service-filter \(Interfaces\) on page 1007](#)
- [service-name-table on page 1008](#)
- [service-name-tables on page 1009](#)
- [service-set on page 1010](#)
- [services \(Priority Level\) on page 1011](#)
- [services-options on page 1012](#)
- [shaping on page 1013](#)
- [shdsl-options on page 1014](#)
- [short-name-format on page 1015](#)
- [short-sequence on page 1016](#)
- [sla-iterator-profile on page 1017](#)
- [sla-iterator-profiles on page 1018](#)
- [snr-margin on page 1019](#)
- [snext on page 1020](#)
- [sonet-options on page 1021](#)
- [source on page 1023](#)
- [source-address-filter on page 1024](#)
- [source-class-usage on page 1025](#)
- [source-filtering on page 1026](#)
- [speed \(Ethernet\) on page 1027](#)
- [speed \(MX Series DPC\) on page 1032](#)
- [speed \(SONET/SDH\) on page 1033](#)
- [spid1 on page 1034](#)
- [spid2 on page 1034](#)
- [stacked-vlan-ranges on page 1035](#)
- [stacked-vlan-tagging on page 1036](#)
- [start-end-flag on page 1037](#)
- [static-interface on page 1038](#)
- [static-tei-val on page 1039](#)
- [supplicant on page 1040](#)
- [supplicant-timeout on page 1041](#)
- [swap on page 1042](#)
- [swap-push on page 1043](#)
- [swap-swap on page 1044](#)
- [switch-options on page 1045](#)

- [switch-port](#) on page 1046
- [switch-type](#) on page 1047
- [switching-mode](#) on page 1048
- [symbol-period](#) on page 1049
- [syslog \(Interfaces\)](#) on page 1050
- [syslog \(Monitoring\)](#) on page 1051
- [syslog \(OAM Action\)](#) on page 1052
- [system-priority](#) on page 1053
- [t1-options](#) on page 1054
- [t310](#) on page 1055
- [t391](#) on page 1056
- [t392](#) on page 1057
- [t3-options](#) on page 1058
- [tag-protocol-id \(TPIDs Expected to Be Sent or Received\)](#) on page 1059
- [tag-protocol-id \(TPID to Rewrite\)](#) on page 1060
- [targeted-broadcast](#) on page 1061
- [targeted-distribution \(Static Interfaces over Aggregated Ethernet\)](#) on page 1062
- [tei-option](#) on page 1063
- [terminate \(PPPoE Service Name Tables\)](#) on page 1064
- [then](#) on page 1065
- [threshold](#) on page 1066
- [timeslots](#) on page 1067
- [tm](#) on page 1068
- [tm-polarity](#) on page 1069
- [traceoptions \(Individual Interfaces\)](#) on page 1070
- [traceoptions \(Individual Interfaces\)](#) on page 1077
- [traceoptions \(LACP\)](#) on page 1084
- [traceoptions \(PPP Process\)](#) on page 1086
- [traceoptions \(PPPoE\)](#) on page 1089
- [translate-discard-eligible](#) on page 1091
- [translate-fecn-and-becn](#) on page 1092
- [translate-plp-control-word-de](#) on page 1092
- [transmit-bucket](#) on page 1093
- [transmit-clock](#) on page 1094
- [transmit-period](#) on page 1095
- [transmit-weight \(ATM2 IQ CoS Forwarding Class\)](#) on page 1096
- [transmit-weight \(ATM2 IQ Virtual Circuit\)](#) on page 1097



- [traps](#) on page 1098
- [trigger](#) on page 1099
- [trigger-link-failure](#) on page 1100
- [trunk-bandwidth](#) on page 1101
- [trunk-id](#) on page 1102
- [ttl](#) on page 1103
- [tunnel](#) on page 1104
- [underlying-interface](#) on page 1105
- [unframed](#) on page 1106
- [unidirectional](#) on page 1107
- [unit \(Dynamic Profiles Standard Interface\)](#) on page 1108
- [unit](#) on page 1112
- [unnumbered-address \(Demux\)](#) on page 1119
- [unnumbered-address \(Dynamic Profiles\)](#) on page 1120
- [unnumbered-address \(Ethernet\)](#) on page 1122
- [unnumbered-address \(PPP\)](#) on page 1123
- [up-count](#) on page 1124
- [user-prefix](#) on page 1125
- [username-include \(Interfaces\)](#) on page 1126
- [vbr](#) on page 1128
- [vc-cos-mode](#) on page 1129
- [vci](#) on page 1130
- [vci-range](#) on page 1131
- [virtual-switch](#) on page 1131
- [vlan-id \(Logical Port in Bridge Domain\)](#) on page 1132
- [vlan-id \(Outer VLAN ID\)](#) on page 1133
- [vlan-id \(VLAN ID to Be Bound to a Logical Interface\)](#) on page 1134
- [native-vlan-id](#) on page 1135
- [vlan-id-list \(Ethernet VLAN Circuit\)](#) on page 1138
- [vlan-id-list \(Interface in Bridge Domain\)](#) on page 1140
- [vlan-id-range](#) on page 1141
- [vlan-ranges](#) on page 1142
- [vlan-rewrite](#) on page 1143
- [vlan-rule \(100-Gigabit Ethernet Type 4 PIC with CFP\)](#) on page 1144
- [vlan-steering \(100-Gigabit Ethernet Type 4 PIC with CFP\)](#) on page 1145
- [vlan-tagging](#) on page 1146
- [vlan-tags \(Dual-Tagged Logical Interface\)](#) on page 1148

- [vlan-tags \(Stacked VLAN Tags\) on page 1150](#)
- [vlan-tags-outer on page 1151](#)
- [vlan-vci-tagging on page 1152](#)
- [vpi \(ATM CCC Cell-Relay Promiscuous Mode\) on page 1152](#)
- [vpi \(Define Virtual Path\) on page 1153](#)
- [vpi \(Logical Interface and Interworking\) on page 1154](#)
- [vtmapping on page 1155](#)
- [warning on page 1156](#)
- [watch-list on page 1157](#)
- [wavelength on page 1158](#)
- [west-interface on page 1162](#)
- [working-circuit on page 1163](#)
- [yellow-differential-delay on page 1164](#)
- [z0-increment on page 1165](#)

802.3ad

Syntax	<pre> 802.3ad { primary backup; ae <i>interface-number</i> ; lacp { port-priority <i>priority-number</i>; } link-index <i>index-number</i> distribution-list <i>distribution-list-number</i> } </pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> <i>fastether-options</i>],</p> <p>[edit interfaces <i>interface-name</i> <i>gigether-options</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>primary and backup options added in Junos OS Release 8.3.</p>
Description	Specify aggregated Ethernet logical interface number.
Options	<p>bundle—Join an aggregated Ethernet interface.</p> <p>ae <i>interface-number</i>—Aggregated Ethernet logical interface number. For MX Series routers running Junos release 14.2R3 and later you can configure a maximum of 1000 aggregated interfaces. On MX2010 and MX2020 routers you can configure a maximum of 800 aggregated interfaces.</p> <p>primary backup—For link protection configurations, specify the link as primary link or backup link for egress traffic.</p> <p>lacp—Configure Link Aggregation Control Protocol. Specify the port priority in the range 0 through 65535. Default port-priority is 127.</p> <p>link-index—Specify the desired child link index within the aggregated Ethernet Interface. Index number of the logical interface reflects its initialization sequence.</p> <p>distribution-list—For targeted distribution, specify the distribution list to which the interface belongs.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring an Aggregated Ethernet Interface Configuring Aggregated Ethernet Link Protection

accept

Syntax	<code>accept (any dhcp-v4 dhcp-v6 inet inet6 pppoe);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges dynamic-profile <i>profile-name</i>],</code> <code>[edit interfaces <i>interface-name</i> auto-configure vlan-ranges dynamic-profile <i>profile-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.5. dhcp-v4 option added in Junos OS Release 10.0. dhcp-v6 , inet6 and pppoe options added in Junos OS Release 10.2. any option added in Junos OS Release 10.4.
Description	Specify the type of VLAN Ethernet packet accepted by an interface that is associated with a VLAN dynamic profile or stacked VLAN dynamic profile.
Options	<p>any—Any packet type. Specifies that any incoming packets trigger the dynamic creation of a VLAN with properties determined by the auto-configure interface configuration stanza and associated profile attributes. This option is used when configuring wholesaling in a Layer 2 network.</p> <p>dhcp-v4—IPv4 DHCP packet type. Specifies that incoming IPv4 DHCP discover packets trigger the dynamic creation of a VLAN with properties determined by the auto-configure interface configuration stanza and associated profile attributes</p> <p>.....</p> <p> NOTE: The DHCP-specific mac-address and option-82 options are rejected if the accept statement is not set to dhcp-v4.</p> <p>.....</p> <p>dhcp-v6—IPv6 DHCP packet type. Specifies that incoming IPv6 DHCP discover packets trigger the dynamic creation of a VLAN with properties determined by the auto-configure interface configuration stanza and associated profile attributes.</p> <p>inet—IPv4 Ethernet and ARP packet type.</p> <p>inet6—IPv6 Ethernet packet type.</p> <p>pppoe—Point-to-Point Protocol over Ethernet packet type.</p>
	<p>.....</p> <p> NOTE: The pppoe VLAN Ethernet packet type option is supported only for MPC/MIC interfaces.</p> <p>.....</p>

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs*
- *Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs*
- *Configuring VLAN Interfaces for the Layer 2 Wholesale Solution*
- *Configuring Subscriber Packet Types to Trigger VLAN Authentication*

accept-source-mac

Syntax

```
accept-source-mac {
  mac-address mac-address {
    policer {
      input cos-policer-name;
      output cos-policer-name;
    }
  }
}
```

Hierarchy Level [edit interfaces *interface-name* **unit** *logical-unit-number*],
[edit logical-systems *logical-system-name* interfaces *interface-name* **unit** *logical-unit-number*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.
Statement introduced in Junos OS Release 13.2 for the QFX Series.

Description For Gigabit Ethernet intelligent queuing (IQ) interfaces only, accept traffic from and to the specified remote media access control (MAC) address.

The **accept-source-mac** statement is equivalent to the **source-address-filter** statement, which is valid for aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only. To allow the interface to receive packets from specific MAC addresses, include the **accept-source-mac** statement.

On untagged Gigabit Ethernet interfaces, you should not configure the **source-address-filter** statement and the **accept-source-mac** statement simultaneously. On tagged Gigabit Ethernet interfaces, you should not configure the **source-address-filter** statement and the **accept-source-mac** statement with an identical MAC address specified in both filters.

The remaining statements are explained separately. See [CLI Explorer](#).



NOTE: The **policer** statement is not supported on PTX Series Packet Transport Routers.




NOTE: On QFX platforms, if you configure source MAC addresses for an interface using the *static-mac* or *persistent-learning* statements and later configure a different MAC address for the same interface using the **accept-source-mac** statement, the MAC addresses that you previously configured for the interface remain in the ethernet-switching table and can still be used to send packets to the interface.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring MAC Address Filtering*
- *Configuring MAC Address Filtering on PTX Series Packet Transport Routers*
- [source-filtering on page 860](#)

access-concentrator

Syntax	<code>access-concentrator <i>name</i>;</code>
Hierarchy Level	<pre>[edit dynamic-profiles <i>profile-name</i> interfaces demux0 unit <i>logical-unit-number</i> family pppoe], [edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-underlying-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-underlying-options]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Support at the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-underlying-options]</code> and <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-underlying-options]</code> hierarchy levels introduced in Junos OS Release 10.1.</p> <p>Support at the <code>[edit ... family pppoe]</code> hierarchies introduced in Junos OS Release 11.2.</p>
Description	<p>Configure an alternative access concentrator name in the AC-NAME tag in a PPPoE control packet for use with a dynamic PPPoE subscriber interface. If you do not configure the access concentrator name, the AC-NAME tag contains the system name.</p>
	<p> NOTE: The <code>[edit ... family pppoe]</code> hierarchies are supported only on MX Series routers with MPCs.</p>
Options	<i>name</i> —Name of the access concentrator.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Identifying the Access Concentrator</i> • <i>Configuring the PPPoE Family for an Underlying Interface</i> • <i>Configuring Dynamic PPPoE Subscriber Interfaces</i> • <i>PPPoE Overview</i>

access-profile

Syntax	<code>access-profile <i>name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> ppp-options pap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> ppp-options chap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> ppp-options pap]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Support for PAP added in Junos OS Release 8.3. Support for VLAN and stacked VLAN ranges added in Junos OS Release 10.0.
Description	<p>For CHAP authentication, the mapping between peer names (or “clients”) and the secrets associated with their respective links. For PAP authentication, the peer's username and password.</p> <p>For Asynchronous Transfer Mode 2 (ATM2) IQ interfaces only, you can configure a Challenge Handshake Authentication Protocol (CHAP) access profile on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none">• <code>atm-ppp-llc</code>—PPP over AAL5 logical link control (LLC) encapsulation.• <code>atm-ppp-vc-mux</code>—PPP over AAL5 multiplex encapsulation.
Options	<code><i>name</i></code> —Name of the access profile.
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the PPP Challenge Handshake Authentication Protocol on page 137• Configuring the PPP Password Authentication Protocol On a Physical Interface on page 140

accounting

Syntax	<pre> accounting { destination-class-usage; source-class-usage { direction; } } </pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Enable IP packet counters on an interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Enabling Source Class and Destination Class Usage on page 265

accounting-profile

Syntax	<code>accounting-profile <i>name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit interfaces interface-range <i>name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 15.1F6 for PTX Series routers with third-generation FPCs installed.
Description	Enable collection of accounting data for the specified physical or logical interface or interface range.
Options	<i>name</i> —Name of the accounting profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Applying an Accounting Profile to the Physical Interface</i>• <i>Applying an Accounting Profile to the Logical Interface</i>

acfc

Syntax	acfc;
Hierarchy Level	[edit interfaces <i>interface-name</i> ppp-options compression], [edit interfaces <i>interface-name</i> unit logical-unit-number ppp-options compression], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit logical-unit-number ppp-options compression]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For interfaces with PPP encapsulation, configure compression of the Data Link Layer address and control fields. The acfc option is not supported with frame-relay-ppp encapsulation.</p> <p>On M320, M120, and T Series routers, address and control field compression (ACFC) is not supported for any ISO family protocols. Do not include the acfc statement at the [edit interfaces <i>interface-name</i> ppp-options compression] hierarchy level when you include the family iso statement at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>] hierarchy level.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring PPP Address and Control Field Compression on page 150

acknowledge-retries

Syntax	<code>acknowledge-retries <i>number</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, configure the number of retransmission attempts to be made for consecutive hello or remove link messages following the expiration of the acknowledgment timer.
Options	<p><i>number</i>—Number of retransmission attempts to be made following the expiration of the acknowledgment timer.</p> <p>Range: 1 through 5</p> <p>Default: 2</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• action-red-differential-delay on page 432• hello-timer on page 658

acknowledge-timer

Syntax	<code>acknowledge-timer <i>milliseconds</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, configure the maximum time, in milliseconds, to wait for an add link acknowledgment, hello acknowledgment, or remove link acknowledgment message.
Options	<p><code>milliseconds</code>—Time, in milliseconds, to wait for an add link acknowledgment, hello acknowledgment, or remove link acknowledgment message.</p> <p>Range: 1 through 10 milliseconds</p> <p>Default: 4 milliseconds</p>
Required Privilege Level	<p><code>interface</code>—To view this statement in the configuration.</p> <p><code>interface-control</code>—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • address on page 435, hello-timer on page 658 • hello-timer on page 658

action (OAM)

Syntax	<pre>action { link-down; send-critical-event; syslog; }</pre>
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Define the action or actions to be taken when the OAM fault event occurs.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying the Actions to Be Taken for Link-Fault Management Events</i>

action (Policer)

Syntax	<pre>action { loss-priority high then discard; }</pre>
Hierarchy Level	[edit firewall three-color-policer <i>policer-name</i>]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	This statement discards high loss priority traffic as part of a configuration using tricolor marking on a logical interface.
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Class of Service Feature Guide for Routers and EX9200 Switches</i>• logical-interface-policer on page 774

action-profile (Applying to CFM)

Syntax	<code>action-profile <i>profile-name</i>;</code>
Hierarchy Level	<code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i> remote-mep <i>mep-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 8.4.
Description	Identify the action profile to use.
Options	<i>profile-name</i> —Name of the action profile to use.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i>

action-profile (Defining for CFM)

```
Syntax action-profile profile-name {
    event {
        ais-trigger-condition {
            adjacency-loss;
            all-defects;
            cross-connect-ccm;
            erroneous-ccm;
            receive-ais;
        }
        interface-status-tlv (down | lower-layer-down);
        port-status-tlv blocked;
        rdi;
    }
    action {
        interface-down;
        log-and-generate-ais {
            interval(1m | 1s);
            level value;
            priority value;
        }
    }
    default-actions {
        interface-down;
    }
}
```

Hierarchy Level [edit protocols oam ethernet [connectivity-fault-management](#)]

Release Information Statement introduced in Junos OS Release 8.4.

Description Configure a name and default action for an action profile.

Options *profile-name*—Name of the action profile.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring a CFM Action Profile to Specify CFM Actions for CFM Events](#)
- [default-actions on page 533](#)
- [event \(CFM\)](#)
- [interface-down on page 711](#)

action-profile

List of Syntax	<p>Syntax: T, M, MX and ACX Series Routers, SRX Series Firewalls and EX Series Switches on page 431</p> <p>Syntax: EX Series Switches and NFX Series Devices on page 431</p>
<p>Syntax: T, M, MX and ACX Series Routers, SRX Series Firewalls and EX Series Switches</p>	<pre> action-profile <i>profile-name</i> { action { link-down; send-critical-event; syslog; } event { link-adjacency-loss; link-event-rate { frame-error <i>count</i>; frame-period <i>count</i>; frame-period-summary <i>count</i>; symbol-period <i>count</i>; } protocol-down; } } </pre>
<p>Syntax: EX Series Switches and NFX Series Devices</p>	<pre> action-profile <i>profile-name</i>; action { syslog; link-down; } event { link-adjacency-loss; link-event-rate { frame-error <i>count</i>; frame-period <i>count</i>; frame-period-summary <i>count</i>; symbol-period <i>count</i>; } } </pre>
Hierarchy Level	[edit protocols oam ethernet link-fault-management]
Release Information	<p>Statement introduced in Junos OS Release 8.5 for T, M, MX and ACX Series Routers, SRX Series Firewalls, and EX Series Switches, .</p> <p>Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.</p>
Description	Configure an Ethernet OAM link fault management (LFM) action profile by specifying a profile name.

The remaining statements are explained separately. See [CLI Explorer](#).

Options *profile-name*—Name of the action profile.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.
routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Documentation

- *Configuring an OAM Action Profile*
- *Configuring Ethernet OAM Link Fault Management*

action-red-differential-delay

Syntax action-red-differential-delay (disable-tx | remove-link);

Hierarchy Level [edit interfaces *interface-name* [mlfr-uni-nni-bundle-options](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description For link services and voice services interfaces only, configure the action to be taken when the differential delay exceeds the red limit.

Options **disable-tx**—Disable transmission on the bundle link.
remove-link—Remove bundle link from service.
Default: disable-tx

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Junos OS Services Interfaces Library for Routing Devices*
- [remote on page 972](#)
- [yellow-differential-delay on page 1164](#)

activation-delay

Syntax	<code>activation-delay <i>seconds</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>dl</i>n unit <i>logical-unit-number</i> dialer-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	(J Series Services Routers) For ISDN interfaces, configure the ISDN dialer activation delay. Used only for dialer backup and dialer watch cases.
Options	<p><i>seconds</i>—Interval before the backup interface is activated after the primary interface has gone down.</p> <p>Range: 1 through 4,294,967,295 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

activation-priority

Syntax	<code>activation-priority <i>priority</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> dynamic-call-admission-control], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> dynamic-call-admission-control]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	(J4350 and J6350 Services Routers supporting voice over IP with the TGM550 media gateway module) For Fast Ethernet and Gigabit Ethernet interfaces, ISDN BRI interfaces, and serial interfaces with PPP or Frame Relay encapsulation, configure the dynamic call admission control (dynamic CAC) activation priority value.
Options	<p>priority—The activation priority in which the interface is used for providing call bandwidth. The interface with the highest activation priority value is used as the primary link for providing call bandwidth. If the primary link becomes unavailable, the TGM550 switches over to the next active interface with the highest activation priority value, and so on.</p> <p>Range: 0 through 255</p> <p>Default: 50</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

address

```

Syntax address address {
  arp ip-address (mac | multicast-mac) mac-address <publish>;
  broadcast address;
  destination address;
  destination-profile name;
  eui-64;
  master-only;
  multipoint-destination address dlci dlcid-identifier;
  multipoint-destination address {
    epd-threshold cells;
    inverse-arp;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
    oam-period (disable | seconds);
    shaping {
      (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
        length);
      queue-length number;
    }
    vci vpi-identifier.vci-identifier;
  }
  primary;
  preferred;
  virtual-gateway-address
  (vrrp-group | vrrp-inet6-group) group-number {
    (accept-data | no-accept-data);
    advertise-interval seconds;
    authentication-type authentication;
    authentication-key key;
    fast-interval milliseconds;
    (preempt | no-preempt) {
      hold-time seconds;
    }
  }
  priority-number number;
  track {
    priority-cost seconds;
    priority-hold-time interface-name {
      interface priority;
      bandwidth-threshold bits-per-second {
        priority;
      }
    }
  }
  route ip-address/mask routing-instance instance-name priority-cost cost;
}
virtual-address [ addresses ];
}

```

Hierarchy Level [edit interfaces *interface-name* unit *logical-unit-number* family *family*],
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*
family *family*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 11.1 for the QFX Series.

Description Configure the interface address.



NOTE: If you configure the same address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration, and the remaining address configurations are ignored and can leave interfaces without an address. Interfaces that do not have an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.

For example, in the following configuration the address configuration of interface xe-0/0/1.0 is ignored:

```
interfaces {
  xe-0/0/0 {
    unit 0 {
      family inet {
        address 192.168.1.1/8;
      }
    }
  }
  xe-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.1.1/8;
      }
    }
  }
}
```

For more information on configuring the same address on multiple interfaces, see [“Configuring the Interface Address” on page 209](#).

- In Junos OS Release 13.3 and later, when you configure an IPv6 host address and an IPv6 subnet address on an interface, the commit operation fails.
- In releases earlier than Junos OS Release 13.3, when you use the same configuration on an interface, the commit operation succeeds, but only one of the IPv6 addresses that was entered is assigned to the interface. The other address is not applied.

Options *address*—Address of the interface.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.



NOTE: The edit logical-systems hierarchy is not available on QFabric systems.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring the Protocol Family on page 208](#)
- *family*
- [negotiate-address on page 837](#)
- [unnumbered-address \(Ethernet\) on page 1122](#)

advertise-interval

Syntax `advertise-interval milliseconds;`

Hierarchy Level [edit interfaces *interface-name* sonet-options [aps](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description Modify the Automatic Protection Switching (APS) interval at which the protect and working routers send packets to their neighbors to advertise that they are operational. A router considers its neighbor to be operational for a period, called the hold time, that is, by default, three times the advertisement interval.

Options *milliseconds*—Interval between advertisement packets.
Range: 1 through 65,534 milliseconds
Default: 1000 milliseconds

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring APS Timers](#)

age

Syntax	age (30m 10m 1m 30s 10s);
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management linktrace]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Time to wait (in minutes or seconds) for a response. If no response is received, the request and response entry is deleted from the linktrace database.
Default	10 minutes
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Linktrace Protocol in CFM</i>

agent-specifier

Syntax	<pre> agent-specifier { aci <i>circuit-id-string</i> ari <i>remote-id-string</i> { drop; delay <i>seconds</i>; terminate; dynamic-profile <i>profile-name</i>; routing-instance <i>routing-instance-name</i>; static-interface <i>interface-name</i>; } } </pre>
Hierarchy Level	[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i>]
Release Information	<p>Statement introduced in Junos OS Release 10.0.</p> <p>drop, delay, terminate, dynamic-profile, routing-instance, and static-interface options introduced in Junos OS Release 10.2.</p>
Description	<p>Specify the action taken by the interface for the specified agent circuit identifier/agent remote identifier (ACI/ARI) pair when the interface receives a PPPoE Active Discovery Initiation (PADI) control packet that includes the vendor-specific tag with ACI/ARI pair information. You can configure an ACI/ARI pair for a named service, empty service, or any service in a PPPoE service name table. A maximum of 8000 ACI/ARI pairs are supported per PPPoE service name table. You can distribute the ACI/ARI pairs in any combination among the named, empty, and any service entries in the service name table.</p> <p>You can use an asterisk (*) as a wildcard character to match ACI/ARI pairs, the ACI alone, or the ARI alone. The asterisk can be placed only at the beginning, the end, or both the beginning and end of the identifier string. You can also specify an asterisk alone for either the ACI or the ARI. You cannot specify only an asterisk for both the ACI and the ARI. When you specify a single asterisk as the identifier, that identifier is ignored in the PADI packet.</p> <p>For example, suppose you care about matching only the ACI and do not care what value the ARI has in the PADI packet, or even whether the packet contains an ARI value. In this case you can set the remote-id-string to a single asterisk. Then the interface ignores the ARI received in the packet and the interface takes action based only on matching the specified ACI.</p>
Default	The default action is terminate.
Options	<p>aci <i>circuit-id-string</i>—Identifier for the agent circuit ID that corresponds to the DSLAM interface that initiated the service request. This is a string of up to 63 characters.</p> <p>ari <i>remote-id-string</i>—Identifier for the subscriber associated with the DSLAM interface that initiated the service request. This is a string of up to 63 characters.</p>

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring PPPoE Service Name Tables*
- *Assigning an ACI/ARI Pair to a Service Name and Configuring the Action Taken When the Client Request Includes ACI/ARI Information*

aggregate (Gigabit Ethernet CoS Policer)

Syntax

```
aggregate {  
    bandwidth-limit bps;  
    burst-size-limit bytes;  
}
```

Hierarchy Level [edit interfaces *interface-name* gigether-options [ethernet-switch-profile](#)
[ethernet-policer-profile](#) [policer](#) *cos-policer-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Define a policer to apply to nonpremium traffic.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Gigabit Ethernet Policers*
- [premium \(Hierarchical Policer\) on page 938](#)
- [ieee802.1p on page 675](#)

aggregate (Hierarchical Policier)

Syntax

```

aggregate {
  if-exceeding {
    bandwidth-limit bandwidth;
    burst-size-limit burst;
  }
  then {
    discard;
  }
}

```

Hierarchy Level [edit firewall [hierarchical-policer](#)]

Release Information Statement introduced in Junos OS Release 9.5.

Description On M40e, M120, and M320 (with FFPC and SFPC) edge routers and T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs, T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, configure an aggregate hierarchical policer.

Options Options are described separately.

Required Privilege Level firewall—To view this statement in the configuration.
 firewall-control—To add this statement to the configuration.

Related Documentation

- [Applying Policers on page 228](#)
- *Class of Service Feature Guide for Routers and EX9200 Switches*

aggregate (SONET/SDH)

Syntax	aggregate asx;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify aggregated SONET/SDH logical interface number.
Options	asx —Aggregated SONET/SDH logical interface number. Range: 0 through 15
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Aggregated SONET/SDH Interfaces</i>

aggregate-ports

Syntax	aggregate-ports;
Hierarchy Level	[edit chassis fpc <i>slot-number</i> pic <i>pic-number</i>]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	For T Series routers only, specify OC768-over-OC192 mode on the 4-port OC192C PIC. Four OC192 links are aggregated into one OC768 link with one logical interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring 4-Port OC192 PIC to Operate in OC768-over-OC192 Mode</i>

aggregated-ether-options

```
Syntax aggregated-ether-options {
    ethernet-switch-profile {
        ethernet-policer-profile {
            input-priority-map {
                ieee802.1p premium [ values ];
            }
            output-priority-map {
                classifier {
                    premium {
                        forwarding-class class-name {
                            loss-priority (high | low);
                        }
                    }
                }
            }
        }
        policer cos-policer-name {
            aggregate {
                bandwidth-limit bps;
                burst-size-limit bytes;
            }
            premium {
                bandwidth-limit bps;
                burst-size-limit bytes;
            }
        }
    }
    (mac-learn-enable | no-mac-learn-enable);
}
(flow-control | no-flow-control);
lACP {
    (active | passive);
    link-protection {
        disable;
        (revertive | non-revertive);
        periodic interval;
        system-priority priority;
        system-id system-id;
    }
    link-protection;
    load-balance;
    link-speed speed;
    logical-interface-chassis-redundancy;
    logical-interface-fpc-redundancy;
    (loopback | no-loopback);
    minimum-links number;
    rebalance-periodic time hour:minute <interval hours>;
    source-address-filter {
        mac-address;
        (source-filtering | no-source-filtering);
    }
}
```

Hierarchy Level [edit interfaces aex]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure aggregated Ethernet-specific interface properties.
The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Ethernet Interfaces Overview*

aggregated-sonet-options

Syntax

```
aggregated-sonet-options {  
  link-speed speed;  
  minimum-links number;  
}
```

Hierarchy Level [edit interfaces asx]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure aggregated SONET/SDH-specific interface properties.
The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Aggregated SONET/SDH Interfaces*

alarm (optics-options)

Syntax	alarm low-light-alarm { (link-down syslog); }
Hierarchy Level	[edit interfaces <i>interface-name</i> optics-options]
Release Information	Statement introduced in Junos OS Release 10.0. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 18.3R1 for PTX10K-LC1104 on the PTX10008 and PTX10016 routers.
Description	Specify the action to take if the receiving optics signal is below the optics low-light alarm threshold.
Options	link-down —Drop the 10-Gigabit Ethernet link and marks link as down. syslog —Write the optics information to the system log.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i> <i>100-Gigabit Ethernet OTN Options Configuration Overview</i>

alias (Interfaces)

Syntax	<code>alias <i>alias-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced in Junos OS Release 13.3.
Description	Configure a textual description of a physical interface or the logical unit of an interface to be the alias of an interface name. The alias name can be a single line of text. If the text contains spaces, enclose it in quotation marks. If you configure an alias name, the alias name is displayed instead of the interface name in the output of all show , show interfaces , and other operational mode commands. In Junos OS Release 12.3R8 and later, display of the alias can be suppressed in favor of the actual interface name by using the display no-interface-alias parameter along with the show command.
Options	<i>alias-name</i> —Text to denote an easily identifiable, meaningful alias name for the interface. If the text includes spaces, enclose the entire text in quotation marks.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Example: Adding an Interface Alias Name on page 124• <i>Junos OS Network Interfaces Library for Routing Devices</i>

allow-any-vci

Syntax	<code>allow-any-vci;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit 0],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit 0]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro routers.
Description	Dedicate entire ATM device to ATM cell relay circuit.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring an ATM1 Cell-Relay Circuit Overview</i>

allow-fragmentation

Syntax	<code>allow-fragmentation;</code>
Hierarchy Level	<code>[edit interfaces gr-fpc/pic/port unit logical-unit-number tunnel],</code> <code>[edit logical-systems logical-system-name interfaces gr-fpc/pic/port unit logical-unit-number tunnel]</code>
Release Information	Statement introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 15.1X53-D10 for QFX10000 switches.
Description	<p>For a generic routing encapsulation (GRE) tunnel, enable fragmentation of GRE-encapsulated packets whose size exceeds the maximum transmission unit (MTU) value of a link that the packet passes through. The don't fragment (DF) bit is not set in the outer IP header of GRE-encapsulated packets.</p> <p>To enable the reassembly of fragmented GRE-encapsulated packets on GRE tunnel interfaces at the endpoint of the GRE tunnel, include the <i>reassemble-packets</i> statement for the interface.</p>
Default	If you do not include the allow-fragmentation statement, fragmentation of GRE-encapsulated packets is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>reassemble-packets</i>• <i>Enabling Fragmentation and Reassembly on Packets After GRE-Encapsulation</i>• <i>Junos OS Services Interfaces Library for Routing Devices</i>

allow-remote-loopback

Syntax	<code>allow-remote-loopback;</code>
Hierarchy Level	<code>[edit protocols oam link-fault-management interface interface-name negotiation-options]</code>
Release Information	Statement introduced in Junos OS Release 8.4.
Description	Enable the remote loopback on IQ2 and IQ2-E Gigabit Ethernet interfaces, and Ethernet interfaces on the MX Series routers and EX Series switches.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Enabling Remote Loopback Support on the Local Interface</i>

annex

Syntax	<code>annex (annex-a annex-b);</code>
Hierarchy Level	<code>[edit interfaces interface-name shdsl-options],</code> <code>[edit interfaces interface-name sonet-options aps],</code> <code>[edit logical-systems logical-system-name interfaces interface-name shdsl-options]</code>
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For M320 and M120 routers only, for Multiplex Section Protection (MSP) switching on SDH interfaces, set annex-b . You must also configure the working protection circuit under the <code>[edit interfaces so-fpc/pic/port sonet-options aps]</code> hierarchy level.
Default	annex-b
Options	annex-a —Use for North American SHDSL network implementations. annex-b —Use for European SHDSL network implementations.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

apply-action-profile

Syntax	<code>apply-action-profile <i>profile-name</i>;</code>
Hierarchy Level	[edit protocols oam ethernet link-fault-management interface]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Apply the specified action profile to the interface for link-fault management.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Applying an Action Profile</i>

aps

Syntax

```
aps {
  advertise-interval milliseconds;
  annex-b
  authentication-key key;
  (break-before-make | no-break-before-make);
  fast-aps-switch;
  force;
  hold-time milliseconds;
  lockout;
  neighbor address;
  paired-group group-name;
  preserve-interface;
  protect-circuit group-name;
  request;
  revert-time seconds;
  switching-mode (bidirectional | unidirectional);
  working-circuit group-name;
}
```

Hierarchy Level [edit interfaces *interface-name* [sonet-options](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure Automatic Protection Switching (APS) on the router.

For DS3 channels on a channelized OC12 interface, configure APS on channel 0 only. If you configure APS on channels 1 through 11, it is ignored.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Automatic Protection Switching and Multiplex Section Protection Overview*

arp (Interfaces)

Syntax `arp ip-address (mac | multicast-mac) mac-address publish;`

```
arp {
  aging-timer minutes;
  gratuitous-arp-delayseconds;
  gratuitous-arp-on-ifup;
  interfaces {
    interface-name {
      aging-timer minutes;
    }
  }
  passive-learning;
  purging;
}
```

Syntax (EX Series) `arp {
 aging-timer minutes;
}`

Hierarchy Level `[edit system]`

`[edit interfaces interface-name unit logical-unit-number family inet address address],`

`[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet address address]`



NOTE: The edit logical-systems hierarchy is not available on QFabric systems.

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 9.0 for EX Series switches.
Statement introduced in Junos OS Release 11.1 for the QFX Series.
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description For Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, configure Address Resolution Protocol (ARP) table entries, mapping IP addresses to MAC addresses. You can enable backup VRRP routers to learn ARP requests for VRRP-IP to VRRP-MAC address translation. You can also set the time interval between ARP updates.



NOTE: By default, an ARP policer is installed that is shared among all the Ethernet interfaces on which you have configured the family inet statement. By including the arp statement at the `[edit interfaces interface-name unit`

logical-unit-number family inet policer] hierarchy level, you can apply a specific ARP-packet policer to an interface. This feature is not available on EX Series switches.

When you need to conserve IP addresses, you can configure an Ethernet interface to be unnumbered by including the *unnumbered-address* statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet] hierarchy level.



NOTE: For EX-Series switches, set only the time interval between ARP updates.

Options **ip-address**—IP address to map to the MAC address. The IP address specified must be part of the subnet defined in the enclosing **address** statement.

mac *mac-address*—MAC address to map to the IP address. Specify the MAC address as six hexadecimal bytes in one of the following formats: *nnnn.nnnn.nnnn* or *nn:nn:nn:nn:nn:nn*. For example, **0000.5e00.5355** or **00:00:5e:00:53:55**.

multicast-mac *mac-address*—Multicast MAC address to map to the IP address. Specify the multicast MAC address as six hexadecimal bytes in one of the following formats: *nnnn.nnnn.nnnn* or *nn:nn:nn:nn:nn:nn*. For example, **0000.5e00.5355** or **00:00:5e:00:53:55**.

publish—(Optional) Have the router or switch reply to ARP requests for the specified IP address. If you omit this option, the router or switch uses the entry to reach the destination but does not reply to ARP requests.



NOTE: For unicast MAC addresses only, if you include the **publish** option, the router or switch replies to proxy ARP requests.

aging-timer—Time interval in minutes between ARP updates. In environments where the number of ARP entries to update is high (for example, on routers only, metro Ethernet environments), increasing the time between updates can improve system performance.

passive-learning (QFX-Series only)—Configure backup VRRP routers or switches to learn the ARP mappings (IP-to-MAC address) for hosts sending the requests. By default, the backup VRRP router drops these requests; therefore, if the master router fails, the backup router must learn all entries present in the ARP cache of the master router. Configuring passive learning reduces transition delay when the backup router is activated.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Static ARP Table Entries For Mapping IP Addresses to MAC Addresses</i>• <i>Configuring Junos OS ARP Learning and Aging Options for Mapping IPv4 Network Addresses to MAC Addresses</i>• <i>Junos OS Network Interfaces Library for Routing Devices</i>• Junos OS System Basics Configuration Guide .

asynchronous-notification

Syntax	(asynchronous-notification no-asynchronous-notification);
Hierarchy Level	[edit interfaces <i>ge-fpc/pic/port</i> gigether-options]
Release Information	Statement introduced in Junos OS Release 8.3. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	<p>(MX Series routers, T Series routers) For all Gigabit Ethernet interfaces (1-Gigabit, 10-Gigabit, and 100-Gigabit), configure support for notification of link down alarm generation and transfer.</p> <p>(M120 and M320 routers) For all 10-Gigabit Ethernet PIC interfaces, configure support for notification of link down alarm generation and transfer.</p> <ul style="list-style-type: none">• asynchronous-notification—Support notification of link down alarm generation and transfer.• no-asynchronous-notification—Prohibit notification of link down alarm generation and transfer.
Default	Support for notification of link down alarm generation and transfer is not enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Gigabit Ethernet Notification of Link Down Alarm Overview</i>• <i>Configuring Gigabit Ethernet Notification of Link Down Alarm</i>

atm-encapsulation

Syntax	<code>atm-encapsulation (direct plcp);</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> e3-options], [edit interfaces at- <i>fpc/pic/port</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure encapsulation for E3 and T3 traffic over ATM interfaces.
Default	Physical Layer Convergence Protocol (PLCP) encapsulation is the default for T3 traffic and for E3 traffic using G.751 framing.
Options	direct —Use direct encapsulation. G.832 framing on E3 interfaces requires direct encapsulation. plcp —Use PLCP encapsulation.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E3 and T3 Parameters on ATM Interfaces</i> • encapsulation on page 596

atm-options

Syntax

```

atm-options {
  cell-bundle-size cells;
  ilmi;
  linear-red-profiles profile-name {
    high-plp-max-threshold percent;
    low-plp-max-threshold percent;
    queue-depth cells high-plp-threshold percent low-plp-threshold percent;
  }
  mpls {
    pop-all-labels {
      required-depth number;
    }
  }
  pic-type (atm1 | atm2);
  plp-to-clp;
  promiscuous-mode {
    vpi vpi-identifier;
  }
  scheduler-maps map-name {
    forwarding-class class-name {
      epd-threshold cells plp1 cells;
      linear-red-profile profile-name;
      priority (high | low);
      transmit-weight (cells number | percent number);
    }
    vc-cos-mode (alternate | strict);
  }
  use-null-cw;
  vpi vpi-identifier {
    maximum-vcs maximum-vcs;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
    oam-period (disable | seconds);
    shaping {
      (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
      length);
      queue-length number;
    }
  }
}

```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

Description Configure ATM-specific physical interface properties.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.



NOTE: Certain options apply only to specific platforms.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Interface Encapsulations Overview on page 48](#)
- [multipoint-destination on page 826](#)
- [shaping on page 1013](#)
- [vci on page 1130](#)

atm-scheduler-map

Syntax atm-scheduler-map (*map-name* | default);

Hierarchy Level [edit interfaces *interface-name* **unit** *logical-unit-number*],
[edit logical-systems *logical-system-name* interfaces *interface-name* **unit** *logical-unit-number*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Associate a scheduler map with a virtual circuit on a logical interface.

Options *map-name*—Name of scheduler map that you define at the [edit interfaces *interface-name* **atm-options scheduler-maps**] hierarchy level.
default—The default scheduler mapping.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [ATM2 IQ VC Tunnel CoS Components Overview](#)
- [scheduler-maps \(For ATM2 IQ Interfaces\) on page 998](#)

authentication

Syntax

```
authentication {
  packet-types [packet-types];
  password password-string;
  username-include {
    circuit-id;
    circuit-type;
    delimiter delimiter-character;
    domain-name domain-name-string;
    interface-name;
    mac-address;
    option-18;
    option-37;
    option-82 <circuit-id> <remote-id>;
    radius-realm radius-realm-string;
    remote-id;
    user-prefix user-prefix-string;
    vlan-tags;
  }
}
```

Hierarchy Level [edit interfaces *interface-name* auto-configure [vlan-ranges](#)],
[edit interfaces *interface-name* auto-configure [stacked-vlan-ranges](#)]

Release Information Statement introduced in Junos OS Release 10.0.

Description Specify the authentication parameters that trigger the Access-Request message to AAA for the interface.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Documentation

- *Subscribers over Static Interfaces Configuration Overview*
- *Configuring the Static Subscriber Global Authentication Password*
- *Configuring a Username for Authentication of Out-of-Band Triggered Dynamic VLANs*
- *Layer 2 Wholesale with ANCP-Triggered VLANs Overview*

authentication-key

Syntax	<code>authentication-key key;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> sonet-options aps]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the Automatic Protection Switching (APS) authentication key (password).
Options	key —Authentication password. It can be 1 through 8 characters long. Configure the same key for both the working and protect routers.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Basic Automatic Protect Switching</i> • For information about the authentication-key statement at the <code>[edit interfaces <i>interface-name</i> unit <i>unit-number</i> family inet address <i>address</i> (vrrp-group vrrp-inet6-group) <i>group-number</i>]</code> or <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>unit-number</i> family (inet inet6) address <i>address</i> (vrrp-group vrrp-inet6-group) <i>group-number</i>]</code> hierarchy level, see the <i>High Availability Feature Guide</i>.

authentication-profile-name

Syntax	<code>authentication-profile-name access-profile-name;</code>
Hierarchy Level	<code>[edit protocols dot1x authenticator]</code>
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Specify the RADIUS authentication profile to use for user authentication when establishing an IEEE 802.1x Port-Based Network Access Control (dot1x) connection.
Required Privilege Level	interface—To view this statement in the configuration. interface control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>IEEE 802.1x Port-Based Network Access Control Overview</i> • authenticator on page 460 • dot1x on page 561

authenticator

Syntax

```
authenticator {
  authentication-profile-name access-profile-name;
  interface interface-id {
    maximum-requests integer;
    quiet-period seconds;
    reauthentication (disable | interval seconds);
    retries integer;
    server-timeout seconds;
    supplicant (single);
    supplicant-timeout seconds;
    transmit-period seconds;
  }
}
```

Hierarchy Level [edit protocols dot1x]

Release Information Statement introduced in Junos OS Release 9.3.

Description Specify an authentication profile for user or client authentication and configure the Ethernet interface for 802.1x protocol operation.

Options **authentication-profile-name *access-profile-name***—Specifies the RADIUS authentication profile for user or client authentication.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level protocols—To view this statement in the configuration.
protocols-control—To add this statement to the configuration.

Related Documentation

- [IEEE 802.1x Port-Based Network Access Control Overview](#)
- [authentication-profile-name on page 459](#)
- [dot1x on page 561](#)

auto-configure

```
Syntax auto-configure {
  vlan-ranges {
    access-profile profile-name;
    authentication {
      packet-types [packet-types];
      password password-string;
      username-include {
        circuit-id;
        circuit-type;
        delimiter delimiter-character;
        domain-name domain-name-string;
        interface-name;
        mac-address;
        option-18;
        option-37;
        option-82 <circuit-id> <remote-id>;
        radius-realm radius-realm-string;
        remote-id;
        user-prefix user-prefix-string;
        vlan-tags;
      }
    }
    dynamic-profile profile-name {
      accept (any | dhcp-v4 | dhcp-v6 | inet | inet6 | pppoe);
      accept-out-of-band protocol;
      ranges (any | low-tag)–(any | high-tag);
    }
    override;
  }
  stacked-vlan-ranges {
    access-profile profile-name;
    authentication {
      packet-types [packet-types];
      password password-string;
      username-include {
        circuit-type;
        delimiter delimiter-character;
        domain-name domain-name-string;
        interface-name;
        mac-address;
        option-18;
        option-37;
        option-82 <circuit-id> <remote-id>;
        radius-realm radius-realm-string;
        user-prefix user-prefix-string;
        vlan-tags;
      }
    }
    dynamic-profile profile-name {
      accept (any | dhcp-v4 | dhcp-v6 | inet | inet6 | pppoe);
      ranges (any | low-tag–high-tag),(any | low-tag–high-tag);
    }
  }
}
```

```
    }  
    override;  
  }  
  remove-when-no-subscribers;  
}
```

Hierarchy Level [edit [interfaces](#) *interface-name*]

Release Information Statement introduced in Junos OS Release 9.5.

Description Enable the configuration of dynamic, auto-sensed VLANs.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs*
- *Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs*

auto-discovery

Syntax auto-discovery;

Hierarchy Level [edit protocols [oam ethernet connectivity-fault-management](#) maintenance-domain *domain-name* maintenance-association *ma-name* [mep](#) *mep-id*]

Release Information Statement introduced in Junos OS Release 8.4.

Description Enable the MEP to accept continuity check messages from all remote MEPs.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring a MEP to Generate and Respond to CFM Protocol Messages*

auto-negotiation

Syntax	(auto-negotiation no-auto-negotiation) <remote-fault (local-interface-online local-interface-offline)>;
Hierarchy Level	[edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> gigether-options], [edit interfaces <i>ge-pim</i> /0/0 switch-options switch-port <i>port-number</i>]
Release Information	Statement introduced in Junos OS Release 7.6. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	For Gigabit Ethernet interfaces on M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers explicitly enable autonegotiation and remote fault. For EX Series switches, explicitly enable autonegotiation only. <ul style="list-style-type: none"> • auto-negotiation—Enables autonegotiation. This is the default. • no-auto-negotiation—Disable autonegotiation. When autonegotiation is disabled, you must explicitly configure the link mode and speed. <p>When you configure Tri-Rate Ethernet copper interfaces to operate at 1 Gbps, autonegotiation must be enabled.</p>



NOTE: On EX Series switches, an interface configuration that disables autonegotiation and manually sets the link speed to 1 Gbps is accepted when you commit the configuration; however, if the interface you are configuring is a Tri-Rate Ethernet copper interface, the configuration is ignored as invalid and autonegotiation is enabled by default.

To correct the invalid configuration and disable autonegotiation:

1. Delete the **no-auto-negotiation** statement and commit the configuration.
2. Set the link speed to 10 or 100 Mbps, set **no-auto-negotiation**, and commit the configuration.

On EX Series switches, if the link speed and duplex mode are also configured, the interfaces use the values configured as the desired values in the negotiation. If autonegotiation is disabled, the link speed and link mode must be configured.



NOTE: On T4000 routers, the **auto-negotiation** command is ignored for interfaces other than Gigabit Ethernet.



NOTE: On ACX Series routers, when you configure fiber interfaces (fiber media mode) to operate at 1 Gbps, autonegotiation is enabled by default to negotiate the speed and duplex settings. You can disable autonegotiation by using the (no-auto-negotiation) statement, and commit the configuration, in the fiber media mode. In copper interfaces (copper media mode), autonegotiation is enabled by default. To disable autonegotiation, you need to explicitly configure the link speed to 10 or 100 Mbps, set no-auto-negotiation, and commit the configuration.

Default Autonegotiation is automatically enabled. No explicit action is taken after the autonegotiation is complete or if the negotiation fails.

Options **remote-fault (local-interface-online | local-interface-offline)**—(Optional) For M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers only, manually configure remote fault on an interface.

Default: local-interface-online

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Gigabit Ethernet Autonegotiation Overview*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces for EX Series Switches with ELS support*

backup-destination

Syntax	<code>backup-destination <i>address</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For tunnel interfaces, specify the remote address of the backup tunnel.
Options	<i>address</i> —Address of the remote side of the connection.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • destination (Tunnels) on page 547

backup-interface

Syntax	<code>backup-interface <i>es-fpc/pic/port</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>es-fpc/pic/port</i> es-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure a backup ES Physical Interface Card (PIC). If the primary ES PIC fails, the backup becomes active, inherits all the tunnels and security associations (SAs), and acts as the new next hop for IP Security (IPsec) traffic.
Options	<i>es-fpc/pic/port</i> —Name of ES interface to serve as the backup.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

backup-options

Syntax	<pre>backup-options { interface <i>interface-name</i>; }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure an interface to be used as a backup interface if the primary interface goes down. This is used to support ISDN dial backup operation.</p> <p>The remaining statement is explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

bandwidth (Interfaces)

Syntax	<code>bandwidth rate;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Configure the bandwidth value for an interface. This statement is valid for all logical interface types except multilink and aggregated interfaces.




NOTE: We recommend that you be careful when setting this value. Any interface bandwidth value that you configure using the **bandwidth** statement affects how the interface cost is calculated for a dynamic routing protocol, such as OSPF. By default, the interface cost for a dynamic routing protocol is calculated using the following formula:

$$\text{cost} = \text{reference-bandwidth} / \text{bandwidth},$$

where bandwidth is the physical interface speed. However, if you specify a value for bandwidth using the **bandwidth** statement, that value is used to calculate the interface cost, rather than the actual physical interface bandwidth.

Options	rate —Peak rate, in bits per second (bps) or cells per second (cps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation c ; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps. Range: Not limited.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring the Interface Bandwidth on page 191

bandwidth-limit (Hierarchical Policer)

Syntax	<code>bandwidth-limit bps;</code>
Hierarchy Level	[edit dynamic-profiles profile-name firewall hierarchical-policer aggregate if-exceeding], [edit dynamic-profiles profile-name firewall hierarchical-policer premium if-exceeding], [edit firewall hierarchical-policer aggregate if-exceeding], [edit firewall hierarchical-policer premium if-exceeding]
Release Information	Statement introduced in Junos OS Release 9.5. Support at the [edit dynamic-profiles ... if-exceeding] hierarchy level introduced in Junos OS Release 11.4.
Description	On M40e, M120, and M320 (with FFPC and SFPC) edge routers; on MPCs hosted on MX Series routers; on T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs; and on T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, configure the maximum average bandwidth for premium or aggregate traffic in a hierarchical policer.
Options	<p>bps—You can specify the number of bits per second either as a decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Range:</p> <ul style="list-style-type: none"> • 32,000 through 50,000,000,000 on M Series routers • 32,000 through 100,000,000,000 on T Series routers • 32,000 through 18,446,744,073,709,551,615 on MX Series routers
	<p> NOTE: When you specify a numeric value beyond the supported bandwidth of the PFE, the router caps the bandwidth at the maximum supported bandwidth of the PFE.</p>
Required Privilege Level	<p>firewall—To view this statement in the configuration.</p> <p>firewall-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Hierarchical Policer Configuration Overview</i> • <i>Policer Bandwidth and Burst-Size Limits</i> • <i>Policer Color-Marking and Actions</i> • <i>Single Token Bucket Algorithm</i> • <i>Determining Proper Burst Size for Traffic Policers</i>

- *aggregate* (Hierarchical Policer)
- [burst-size-limit](#) (Hierarchical Policer) on page 481
- [premium](#) (Hierarchical Policer) on page 938


[bandwidth-limit \(Policer for Gigabit Ethernet Interfaces\)](#)

Syntax	<code>bandwidth-limit <i>bps</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <i>gigether-options</i> ethernet-switch-profile ethernet-policer-profile <i>policer cos-policer-name</i> aggregate], [edit interfaces <i>interface-name</i> <i>gigether-options</i> ethernet-switch-profile ethernet-policer-profile <i>policer cos-policer-name</i> premium]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define a policer to apply to nonpremium traffic.
Options	<p><i>bps</i>—Bandwidth limit, in bits per second. Specify either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Range: 32 Kbps through 32 gigabits per second (Gbps). For IQ2 and IQ2-E interfaces 65,536 bps through 1 Gbps. For 10-Gigabit IQ2 and IQ2-E interfaces 65,536 bps through 10 Gbps.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Gigabit Ethernet Policers • burst-size-limit (Policer for Gigabit Ethernet Interfaces) on page 482

bearer-bandwidth-limit

Syntax	<code>bearer-bandwidth-limit <i>kilobits-per-second</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> dynamic-call-admission-control], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> dynamic-call-admission-control]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	(J4350 and J6350 Services Routers supporting voice over IP with the TGM550 media gateway module) For Fast Ethernet and Gigabit Ethernet interfaces, ISDN BRI interfaces, and serial interfaces with PPP or Frame Relay encapsulation, configure the bearer bandwidth limit (BBL). BBL is used for dynamic call admission control (dynamic CAC) to provide enhanced control over WAN bandwidth.
Options	<i>kilobits-per-second</i> —The bearer bandwidth limit to be reported to a TGM550 media gateway module, in kilobits per second (kbps). Range: 0 through 9999 kbps Default: 1 (dynamic CAC is not enabled on the interface)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

bert-algorithm

Syntax	<code>bert-algorithm <i>algorithm</i>;</code>
Hierarchy Level	<code>[edit interfaces ce1-<i>fpc/pic/port</i>],</code> <code>[edit interfaces ct1-<i>fpc/pic/port</i>],</code> <code>[edit interfaces <i>interface-name</i> ds0-options],</code> <code>[edit interfaces <i>interface-name</i> e1-options],</code> <code>[edit interfaces <i>interface-name</i> e3-options],</code> <code>[edit interfaces <i>interface-name</i> t1-options],</code> <code>[edit interfaces <i>interface-name</i> t3-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	<p>Configure the pattern to send in the bit stream during a bit error rate test (BERT). Applies to T1, E3, T3, and multichannel DS3 interfaces, the channelized interfaces (DS3, OC12, STM1), and channelized IQ and IQE interfaces (E1, E3 and DS3).</p>
	<p> NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>bert-algorithm</code> statement must be included at the <code>[edit interfaces ce1-<i>fpc/pic/port</i>]</code> or <code>[edit interfaces ct1-<i>fpc/pic/port</i>]</code> hierarchy level as appropriate.</p>
Options	<p><i>algorithm</i>—Pattern to send in the bit stream. There are two categories of test patterns: pseudorandom and repetitive. Both patterns conform to CCITT/ITU O.151, O.152, O.153, and O.161 standards. The algorithm can be one of the following patterns:</p> <ul style="list-style-type: none"> • all-ones-repeating—Pattern is all ones. • all-zeros-repeating—Pattern is all zeros. • alternating-double-ones-zeros—Pattern is alternating pairs of ones and zeros. • alternating-ones-zeros—Pattern is alternating ones and zeros. • pseudo-2e3—Pattern is $2^3 - 1$. • pseudo-2e4—Pattern is $2^4 - 1$. • pseudo-2e5—Pattern is $2^5 - 1$. • pseudo-2e6—Pattern is $2^6 - 1$. • pseudo-2e7—Pattern is $2^7 - 1$. • pseudo-2e9-o153—Pattern is $2^9 - 1$, as defined in the O153 standard. • pseudo-2e10—Pattern is $2^{10} - 1$.


- **pseudo-2e11-o152**—Pattern is $2^{11} - 1$, as defined in the O152 standard.
- **pseudo-2e15-o151**—Pattern is $2^{15} - 1$, as defined in the O151 standard.
- **pseudo-2e17**—Pattern is $2^{17} - 1$.
- **pseudo-2e18**—Pattern is $2^{18} - 1$.
- **pseudo-2e20-o151**—Pattern is $2^{20} - 1$, as defined in the O151 standard.
- **pseudo-2e20-o153**—Pattern is $2^{20} - 1$, as defined in the O153 standard.
- **pseudo-2e21**—Pattern is $2^{21} - 1$.
- **pseudo-2e22**—Pattern is $2^{22} - 1$.
- **pseudo-2e23-o151**—Pattern is $2^{23} - 1$, as defined in the O151 standard.
- **pseudo-2e25**—Pattern is $2^{25} - 1$.
- **pseudo-2e28**—Pattern is $2^{28} - 1$.
- **pseudo-2e29**—Pattern is $2^{29} - 1$.
- **pseudo-2e31**—Pattern is $2^{31} - 1$.
- **pseudo-2e32**—Pattern is $2^{32} - 1$.
- **repeating-1-in-4**—One bit in four is set to 1; the others are set to 0.
- **repeating-1-in-8**—One bit in eight is set to 1; the others are set to 0.
- **repeating-3-in-24**—Three bits in twenty four are set to 1; the others are set to 0.

Default: pseudo-2e3

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.


Related Documentation	<ul style="list-style-type: none">• <i>Interface Diagnostics</i>• <i>Configuring E1 BERT Properties</i>• <i>Configuring E3 BERT Properties</i>• <i>Configuring T1 BERT Properties</i>• <i>Configuring T3 BERT Properties</i>• <i>Examples: Configuring T3 Interfaces</i>• bert-error-rate on page 473• bert-period on page 475
------------------------------	---

bert-error-rate

Syntax	<code>bert-error-rate rate;</code>
Hierarchy Level	<code>[edit interfaces ce1-fpc/pic/port],</code> <code>[edit interfaces ct1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	<p>Configure the bit error rate to use in a BERT procedure. Applies to E1, E3, T1, or T3 interfaces, and to the channelized interfaces (DS3, OC3, OC12, and STM1).</p>
	<p> NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>bert-error-rate</code> statement must be included at the <code>[edit interfaces ce1-fpc/pic/port]</code> or <code>[edit interfaces ct1-fpc/pic/port]</code> hierarchy level as appropriate.</p>
Options	<p>rate—Bit error rate.</p> <p>Range: 0 through 7, which corresponds to 10^{-1} (1 error per bit) to 10^{-7} (1 error per 10 million bits)</p> <p>Default: 0</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • bert-algorithm on page 471 • bert-period on page 475 • ds0-options on page 565 • e1-options on page 587 • e3-options on page 588 • t1-options on page 1054 • t3-options on page 1058 • Interface Diagnostics

- *Configuring E1 BERT Properties*
- *Configuring E3 BERT Properties*
- *Configuring T1 BERT Properties*
- *Configuring T3 BERT Properties*
- *Examples: Configuring T3 Interfaces*

bert-period


Syntax	<code>bert-period <i>seconds</i>;</code>
Hierarchy Level	<code>[edit interfaces ce1-<i>fpc/pic/port</i>],</code> <code>[edit interfaces ct1-<i>fpc/pic/port</i>],</code> <code>[edit interfaces <i>interface-name</i> ds0-options],</code> <code>[edit interfaces <i>interface-name</i> e1-options],</code> <code>[edit interfaces <i>interface-name</i> e3-options],</code> <code>[edit interfaces <i>interface-name</i> t1-options],</code> <code>[edit interfaces <i>interface-name</i> t3-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	<p>Configure the duration of a BERT test. Applies to E1, E3, T1, and T3 interfaces, and to E1, E3, T1, and T3 partitions on the channelized interfaces (CE1, CT1, DS3, OC3, OC12, OC48, STM1, STM4, and STM16).</p> <p>E1 and T1 IQ, IQE, and standard interfaces support an extended BERT period range, up to 86,400 seconds (24 hours).</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p> NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>bert-period</code> statement must be included at the <code>[edit interfaces ce1-<i>fpc/pic/port</i>]</code> or <code>[edit interfaces ct1-<i>fpc/pic/port</i>]</code> hierarchy level as appropriate.</p> </div>
Options	<p><i>seconds</i>—Test duration. Range and default values vary by interface type.</p> <p>Range:</p> <ul style="list-style-type: none"> PIC-dependent—Normal BERT period: either 1 through 239 seconds or 1 through 240 seconds PIC-dependent—Extended BERT period: from 1 through 86,400 seconds <p>Default:</p> <ul style="list-style-type: none"> Normal BERT period: 10 seconds Extended BERT period (on supported E1 interfaces): 10 seconds Extended BERT period (on supported T1 interfaces): 240 seconds
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- *Interface Diagnostics*
 - *Configuring E1 BERT Properties*
 - *Configuring E3 BERT Properties*
 - *Configuring T1 BERT Properties*
 - *Configuring T3 BERT Properties*
 - [bert-algorithm on page 471](#)
 - [bert-error-rate on page 473](#)

bridge-domain

Syntax	<pre>bridge-domain name; vlan-id [vlan-identifiers]; }</pre>
Hierarchy Level	<pre>[edit protocols oam ethernet connectivity-fault-management maintenance-domain maintenance-domain-name], [edit protocols oam ethernet connectivity-fault-management maintenance-domain maintenance-domain-name virtual-switch virtual-switch-name]</pre>
Release Information	Statement introduced in Junos OS Release 9.4.
Description	(MX Series routers only) Specify the OAM Ethernet CFM maintenance domain bridge domain.
Options	<p>name—Specify the name of the bridge domain.</p> <p>vlan-identifiers—Specify one or more VLAN identifiers.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Maintenance Intermediate Points (MIPs)</i>• maintenance-domain on page 796


broadcast

Syntax	<code>broadcast <i>address</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Set the broadcast address on the network or subnet. On a subnet you cannot specify a host address of 0 (0.0.0.0), nor can you specify a broadcast address (255.255.255.255). For example, in the statement <code>set interface ge-0/0/0 unit 0 family inet address 10.1.1.0/24</code> , the subnet address 10.1.1.0 has the host address of 0. Hence, you cannot configure this address. Similarly, for the subnet, you cannot use the broadcast address 10.1.1.255/24.
Default	The default broadcast address has a host portion of all ones.
Options	address —Broadcast address. The address must have a host portion of either all ones or all zeros. You cannot specify the addresses 0.0.0.0 or 255.255.255.255.
<div>  NOTE: The edit logical-systems hierarchy is not available on QFabric systems. </div>	
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring the Interface Address on page 209


buildout (E3 or T3 over ATM Interfaces)

Syntax	<code>buildout <i>feet</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> e3-options], [edit interfaces at- <i>fpc/pic/port</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For E3 and T3 traffic over ATM interfaces, set the buildout value.
Options	<i>feet</i> —The buildout value in feet. Range: 0 through 450 feet (137 meters) Default: 10 feet (3 meters)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i>

buildout (T1 Interfaces)

Syntax	<code>buildout value;</code>
Hierarchy Level	<code>[edit interfaces ct1-<i>fpc/pic/port</i>]</code> <code>[edit interfaces <i>interface-name</i> t1-<i>options</i>]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	For T1 interfaces, set the buildout value.
	<div>  <p>NOTE: When configuring CT1 interfaces on 10-port Channelized E1/T1 IQE PICs and 16-Port Channelized E1/T1 Circuit Emulation MICs, the buildout statement must be included at the hierarchy level.</p> </div>
Default	The default buildout value is 0 through 132 feet.
Options	<p>You can set the buildout value to one of the following:</p> <ul style="list-style-type: none"> • 0-132—0 through 132 feet (0 through 40 meters) • 133-265—133 through 265 feet (40 through 81 meters) • 266-398—266 through 398 feet (81 through 121 meters) • 399-531—399 through 531 feet (121 through 162 meters) • 532-655—532 through 655 feet (162 through 200 meters) • long-7.5db—For MX Series only, long buildout with 7.5 dB transmit attenuation • long-15db—For MX Series only, long buildout with 15 dB transmit attenuation • long-22.5db—For MX Series only, long buildout with 22.5 dB transmit attenuation
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the T1 Buildout</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

bundle

Syntax	<code>bundle (ml-fpc/pic/port ls-fpc/pic/port);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Associate the multilink interface with the logical interface it is joining. You can include this statement for the mlfr-end-to-end and mlfr-uni-nni protocol families only.
<div> NOTE: For M Series routers and T Series routers, the following caveats apply:<ul style="list-style-type: none">• Maximum supported throughput on the bundle interfaces is 45 Mbps.• Bundling of the logical interfaces under a T3 physical interface into the same or different bundles is not supported.</div>	
Options	ml-fpc/pic/port —Name of the multilink interface you are linking. ls-fpc/pic/port —Name of the link services interface you are linking.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>


burst-size-limit (Hierarchical Policer)

Syntax	<code>burst-size-limit bytes;</code>
Hierarchy Level	[edit dynamic-profiles profile-name firewall hierarchical-policer aggregate if-exceeding], [edit dynamic-profiles profile-name firewall hierarchical-policer premium if-exceeding], [edit firewall hierarchical-policer aggregate if-exceeding], [edit firewall hierarchical-policer premium if-exceeding]
Release Information	Statement introduced in Junos OS Release 9.5. Support at the [edit dynamic-profiles ... if exceeding] hierarchy level introduced in Junos OS Release 11.4.
Description	On M40e, M120, and M320 (with FFPC and SFPC) edge routers; on MPCs hosted on MX Series routers; on T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs; and on T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, configure the burst-size limit for premium or aggregate traffic in a hierarchical policer.
Options	bytes —Burst-size limit in bytes. The minimum recommended value is the maximum transmission unit (MTU) of the IP packets being policed. You can specify the value either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). Range: 1500 through 2,147,450,880 (1500 through 100,000,000,000 on MPCs hosted on MX Series routers)
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Hierarchical Policer Configuration Overview</i> • <i>Policer Bandwidth and Burst-Size Limits</i> • <i>Policer Color-Marking and Actions</i> • <i>Single Token Bucket Algorithm</i> • <i>Determining Proper Burst Size for Traffic Policers</i> • <i>Hierarchical Policers</i> • <i>aggregate (Hierarchical Policer)</i> • bandwidth-limit (Hierarchical Policer) on page 468 • premium (Hierarchical Policer) on page 938

burst-size-limit (Policer for Gigabit Ethernet Interfaces)

Syntax	<code>burst-size-limit <i>bytes</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile policer <i>cos-policer-name</i> aggregate],</code> <code>[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile policer <i>cos-policer-name</i> premium]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define a policer to apply to nonpremium traffic.
Options	bytes —Burst length. Range: 1500 through 100,000,000 bytes
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Gigabit Ethernet Policers</i>• bandwidth-limit (Policer for Gigabit Ethernet Interfaces) on page 469

byte-encoding

Syntax	byte-encoding (nx56 nx64);
Hierarchy Level	[edit interfaces t1- <i>fpc/pic/port</i>], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> t1-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
Description	Set the byte encoding on a DS0 or T1 interface to use 7 bits per byte or 8 bits per byte.
	<div>  <p>NOTE: When configuring T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the <code>byte-encoding</code> statement must be included at the [edit interfaces t1-<i>fpc/pic/port</i>] hierarchy level.</p> </div>
Default	The default byte encoding is 8 bits per byte (nx64).
Options	nx56—Use 7 bits per byte. nx64—Use 8 bits per byte.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring T1 Byte Encoding

bytes

Syntax	<pre>bytes { c2 <i>value</i>; e1-quiet <i>value</i>; f1 <i>value</i>; f2 <i>value</i>; s1 <i>value</i>; z3 <i>value</i>; z4 <i>value</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Set values in some SONET/SDH header bytes.
Options	<p>c2 <i>value</i>—Path signal label SONET/SDH overhead byte. SONET/SDH frames use the C2 byte to indicate the contents of the payload inside the frame. SONET/SDH interfaces use the C2 byte to indicate whether the payload is scrambled.</p> <p>Range: 0 through 255</p> <p>Default: 0xCF</p> <p>e1-quiet <i>value</i>—Default idle byte sent on the orderwire SONET/SDH overhead bytes. The router does not support the orderwire channel, and hence sends this byte continuously.</p> <p>Range: 0 through 255</p> <p>Default: 0x7F</p> <p>f1 <i>value</i>, f2 <i>value</i>, z3 <i>value</i>, z4 <i>value</i>—SONET/SDH overhead bytes.</p> <p>Range: 0 through 255</p> <p>Default: 0x00</p> <p>s1 <i>value</i>—Synchronization message SONET overhead byte. This byte is normally controlled as a side effect of the system reference clock configuration and the state of the external clock coming from an interface if the system reference clocks have been configured to use an external reference.</p> <p>Range: 0 through 255</p> <p>Default: 0xCC</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

- Related Documentation**
- *Configuring SONET/SDH Header Byte Values to Identify Error Conditions*
 - *no-concatenate*

calculation-weight

Syntax

```
calculation-weight {
    delay delay-value;
    delay-variation delay-variation-value;
}
```

Hierarchy Level [edit protocols [oam ethernet connectivity-fault-management performance-monitoring sla-iterator-profiles](#) *profile-name*]

Release Information Statement introduced in Junos OS Release 11.1.
Statement introduced in Junos OS Release 11.4 for EX Series switches.

Description Configure the calculation weight for delay and delay variation.




NOTE: This option is applicable only for two-way delay measurement.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level Configure—To enter configuration mode.
Control—To modify any configuration.

- Related Documentation**
- *Configuring an Iterator Profile*
 - *Configuring an Iterator Profile on a Switch (CLI Procedure)*
 - *delay*
 - *delay-variation*

callback

Syntax	callback;
Hierarchy Level	[edit interfaces <i>dl n unit logical-unit-number</i> dialer-options incoming-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>dl n unit logical-unit-number</i> dialer-options incoming-map]
Release Information	Statement introduced in Junos OS Release 7.5.
Description	<p>On J Series Services Routers with interfaces configured for ISDN, configure the dialer to terminate the incoming call and call back the originator after the callback wait period. The default wait time is 5 seconds. To configure the wait time, include the callback-wait-period statement at the [edit interfaces <i>dl n unit logical-unit-number dialer-options</i>] hierarchy level.</p> <div> NOTE: The incoming-map statement is mandatory for the router to accept any incoming ISDN calls.</div> <p>If the callback statement is configured, you cannot use the caller <i>caller-id</i> statement at the [edit interfaces <i>dl n unit logical-unit-number dialer-options</i>] hierarchy level.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>• callback-wait-period on page 487

callback-wait-period

Syntax	<code>callback-wait-period <i>time</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i> dialer-options],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i></code> <code>dialer-options]</code>
Release Information	Statement introduced in Junos OS Release 7.5.
Description	<p>On J Series Services Routers with interfaces configured for ISDN with callback, specify the amount of time the dialer waits before calling back the caller. The default wait time is 5 seconds. The wait time is necessary because, when a call is rejected, the switch waits for up to 4 seconds on point-to-multipoint connections to ensure no other device accepts the call before sending the DISCONNECT message to the originator of the call. However, the default time of 5 seconds may not be sufficient for different switches or may not be needed on point-to-point connections.</p> <p>To configure callback mode, include the callback statement at the <code>[edit interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i> dialer-options]</code> hierarchy level.</p> <p>If the callback statement is configured, you cannot use the caller <i>caller-id</i> statement at the <code>[edit interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i> dialer-options]</code> hierarchy level.</p>
Options	<i>time</i> —Time the dialer waits before calling back the caller.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

caller

Syntax	<code>caller (<i>caller-id</i> accept-all);</code>
Hierarchy Level	<code>[edit interfaces dln unit <i>logical-unit-number</i> dialer-options incoming-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces dln unit <i>logical-unit-number</i></code> <code>dialer-options incoming-map]</code>
Release Information	Statement introduced in Junos OS Release 7.5.
Description	On J Series Services Routers with interfaces configured for ISDN, specify the dialer to accept a specified caller number or accept all incoming calls.
Options	<p>caller-id—Incoming caller number. You can configure multiple caller IDs on a dialer. The caller ID of the incoming call is matched against all caller IDs configured on all dialers. The dialer matching the caller ID is looked at for further processing. Only a precise match is a valid match. For example, the configured caller ID 1-222-333-4444 or 222-333-4444 will match the incoming caller ID 1-222-333-4444.</p> <p>If the incoming caller ID has fewer digits than the number configured, it is not a valid match. Duplicate caller IDs are not allowed on different dialers; however, for example, the numbers 1-408-532-1091, 408-532-1091, and 532-1091 can still be configured on different dialers.</p> <p>Only one B-channel can map to one dialer. If one dialer is already mapped, any other call mapping to the same dialer is rejected (except in the case of a multilink dialer). If no dialer caller is configured on a dialer, that dialer will not accept any calls.</p> <p>accept-all—Any incoming call in an associated interface is accepted.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

calling-number

Syntax	<code>calling-number <i>number</i>;</code>
Hierarchy Level	<code>[edit interfaces br-pim/0/port isdn-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers with ISDN interfaces, configure the calling number to include in outgoing calls.
Options	<i>number</i> —Calling number.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring ISDN Physical Interface Properties</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>


cbit-parity

Syntax	(cbit-parity no-cbit-parity);
Hierarchy Level	[edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For T3 interfaces only, enable or disable C-bit parity mode, which controls the type of framing that is present on the transmitted T3 signal. When C-bit parity mode is enabled, the C-bit positions are used for the far-end block error (FEBE), far-end alarm and control (FEAC), terminal data link, path parity, and mode indicator bits, as defined in ANSI T1.107a-1989. For ATM and ATM2 IQ2 and IQ2-E interfaces, M23 framing is used when the no-cbit-parity statement is included. For all other interfaces, M13 framing is used when the no-cbit-parity statement is included.
Default	C-bit parity mode is enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i>• <i>Disabling T3 C-Bit Parity Mode</i>


cbr

Syntax	<code>cbr rate;</code>
Hierarchy Level	<p>[edit interfaces at-<i>fpc/pic/port</i> atm-options vpi <i>vpi-identifier</i> shaping],</p> <p>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> shaping]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM encapsulation only, define a constant bit rate bandwidth utilization in the traffic-shaping profile.
Default	Unspecified bit rate (UBR); that is, bandwidth utilization is unlimited.
Options	<p>rate—Peak rate, in bits per second (bps) or cells per second (cps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation c; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.</p> <p>For ATM1 and ATM2 OC3 interfaces, the maximum available rate is 100 percent of <i>line-rate</i>, or 135,600,000 bps. For ATM1 OC12 interfaces, the maximum available rate is 50 percent of <i>line-rate</i>, or 271,263,396 bps. For ATM2 IQ interfaces, the maximum available rate is 542,526,792 bps.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Defining the ATM Traffic-Shaping Profile Overview</i> • rtvbr on page 992 • shaping on page 1013 • vbr on page 1128


cell-bundle-size

Syntax	<code>cell-bundle-size <i>cells</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options], [edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces using ATM Layer 2 circuit cell-relay transport mode only, configure the maximum number of ATM cells per frame.
	<div>  <p>NOTE: For MIC-3D-8OC3-2OC12-ATM on MX104 routers, ensure that the configured <code>cell-bundle-size</code> is less than 30 for an ATM interface that is configured with <code>atm-ccc-cell-relay</code> encapsulation. If the configured <code>cell-bundle-size</code> is greater than or equal to 30 and the traffic is passing through the interface at line rate, it might lead to AFEB crash.</p> </div>
Options	<i>cells</i> —Maximum number of cells. Default: 1 cell Range: 1 through 176 cells
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring the Layer 2 Circuit Cell-Relay Cell Maximum Overview</i>

chap

Syntax	<pre> chap { access-profile name; challenge-length minimum <i>minimum-length</i> maximum <i>maximum-length</i>; default-chap-secret name; local-name name; passive; } </pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> ppp-options],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Allow each side of a link to challenge its peer, using a “secret” known only to the authenticator and that peer. The secret is not sent over the link.</p> <p>By default, PPP CHAP is disabled. If CHAP is not explicitly enabled, the interface makes no CHAP challenges and denies all incoming CHAP challenges.</p> <p>For ATM2 IQ interfaces only, you can configure CHAP on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"> • atm-ppp-llc—PPP over AAL5 LLC encapsulation. • atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation. <div style="border: 1px solid #ccc; padding: 10px; margin-top: 20px;"> <p> BEST PRACTICE: On inline service (si) interfaces for L2TP, only the <code>chap</code> statement itself is typically used for subscriber management. We recommend that you leave the subordinate statements at their default values.</p> </div> <p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring the PPP Challenge Handshake Authentication Protocol on page 137 • Applying PPP Attributes to L2TP LNS Subscribers with a User Group Profile • Applying PPP Attributes to L2TP LNS Subscribers per Inline Service Interface

chap-secret

Syntax	<code>chap-secret <i>chap-secret</i>;</code>
Hierarchy Level	<code>[edit access profile <i>profile-name</i> client <i>client-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with PPP encapsulation on which the PPP Challenge Handshake Authentication Protocol (CHAP) is configured, configure the shared secret (the CHAP secret key associated with a peer), as defined in RFC 1994. <div> NOTE: This statement is not supported for L2TP LNS on MX Series routers.</div>
Options	<i>chap-secret</i> —The secret key associated with a peer.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the CHAP Secret for an L2TP Profile• Configuring PPP CHAP Authentication on page 198• pap-password on page 890• Junos OS Administration Library

circuit-type

Syntax	<code>circuit-type;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure <code>vlan-ranges authentication username-include</code>], [edit interfaces <i>interface-name</i> auto-configure <code>stacked-vlan-ranges authentication username-include</code>],
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Specify that the circuit type is concatenated with the username during the subscriber authentication process.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring VLAN Interface Username Information for AAA Authentication</i>

cisco-interoperability

Syntax	<code>cisco-interoperability send-lip-remove-link-for-link-reject;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	FRF.16 interoperability settings.
Options	<code>send-lip-remove-link-for-link-reject</code> —Send Link Integrity Protocol remove link when an add-link rejection message is received.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

classifier

Syntax	<pre>classifier { per-unit-scheduler { forwarding-class <i>class-name</i> { loss-priority (high low); } } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile output-priority-map]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, define the classifier for the output priority map to be applied to outgoing frames on this interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying an Output Priority Map</i>• input-priority-map on page 701

clear-dont-fragment-bit

Syntax	<code>clear-dont-fragment-bit;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Clear the don't-fragment (DF) bit on all IP version 4 (IPv4) packets entering a generic routing encapsulation (GRE) tunnel. If the encapsulated packet's size exceeds the tunnel's maximum transmission unit (MTU), the packet is fragmented before encapsulation. The statement is supported only on MX Series routers and all M Series routers except the M320 router.</p> <p>When you configure the clear-dont-fragment-bit statement on an interface with the MPLS protocol family enabled, you must specify an MTU value. This MTU value must not be greater than maximum supported value, which is 9192.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

clock-rate

Syntax	<code>clock-rate <i>rate</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> serial-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces, configure the interface speed, in megahertz (MHz).
Options	<p><i>rate</i>—You can specify one of the following rates:</p> <ul style="list-style-type: none">• 2.048 MHz• 2.341 MHz• 2.731 MHz• 3.277 MHz• 4.096 MHz• 5.461 MHz• 8.192 MHz• 16.384 MHz <p>Default: 16.384 MHz</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Clocking Mode on page 350

clocking

Syntax	<code>clocking (external [interface <i>interface-name</i>] internal);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. interface option added in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
Description	For interfaces that can use various clock sources, configure the source of the transmit clock on each interface.



NOTE: On Channelized SONET/SDH PICs, if you set the parent (or the master) controller clock to external, then you must set the child controller clocks to the default value—that is, internal.

For example, on the Channelized STM1 PIC, if the clock on the Channelized STM1 interface (which is the master controller) is set to external, then you must not configure the CE1 interface (which is the child controller) clock to external. Instead you must configure the CE1 interface clock to internal.

Options	<p>external—The clock source is provided by the data communication equipment (DCE).</p> <p>interface <i>interface-name</i>—Configure clocking for the drop-and insert feature. When configuring this feature, both ports must use the same clock source: either the router's internal clock or an external clock on one of the interfaces. If an external clock source is required, one interface must specify clocking external and the other must specify the same clock.</p> <p>internal—Use the internal stratum 3 clock as the reference clock.</p> <p>Default: internal</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

Related Documentation	<ul style="list-style-type: none"> • Configuring the Clock Source on page 129 • Configuring the Clock Source on SONET/SDH Interfaces • Clock Sources on Channelized Interfaces • Configuring a Channelized T1/E1 Interface to Drop and Insert Time Slots • loop-timing on page 778
------------------------------	---

clocking-mode

Syntax	<code>clocking-mode (dce internal loop);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces, configure the clock mode. You cannot configure clocking-mode dce on a DTE router using an X.21 serial line protocol (detected automatically when an X.21 cable is plugged into the serial interface).
Options	dce —DCE timing (DTE mode only, not valid for X.21). internal —Internal baud timing. loop —Loop timing. Default: loop
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Clocking Mode on page 350

community (Policy Options)

Syntax	<pre>community <i>name</i> { invert-match; members [<i>community-ids</i>]; }</pre>
Hierarchy Level	[edit dynamic policy-options], [edit logical-systems <i>logical-system-name</i> policy-options], [edit policy-options]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for configuration in the dynamic database introduced in Junos OS Release 9.5.</p> <p>Support for configuration in the dynamic database introduced in Junos OS Release 9.5 for EX Series switches.</p> <p>Support for BGP large community introduced in Junos OS Release 17.3 for MX Series, PTX Series, and QFX Series.</p>
Description	<p>Define a community, extended community or large community for use in a routing policy match condition.</p>
Options	<p><i>name</i>—Name that identifies the regular expression. The name can contain letters, numbers, and hyphens (-) and can be up to 255 characters. To include spaces in the name, enclose it in quotation marks (" ").</p> <p><i>invert-match</i>—Invert the results of the community expression matching. The community match condition defines a regular expression and if it matches the community attribute of the received prefix, Junos OS returns a TRUE result. If not, Junos OS returns a FALSE result. The <i>invert-match</i> statement makes Junos OS behave to the contrary. If there is a match, Junos OS returns a FALSE result. If there is no match, Junos OS returns a TRUE result.</p> <p><i>members community-ids</i>—One or more community members. If you specify more than one member, you must enclose all members in brackets.</p> <p>The format for <i>community-ids</i> is:</p> <pre><i>as-number:community-value</i></pre> <p>Starting in Junos OS Release 15.1, you can apply a wildcard member <i>segmented-nh.*:0</i> to apply the BGP policy to all the S-PMSI A-D routes carrying extended community information.</p> <p><i>as-number</i> is the AS number and can be a value in the range from 0 through 65,535.</p> <p><i>community-value</i> is the community identifier and can be a number in the range from 0 through 65,535.</p>

You also can specify **community-ids** for communities as one of the following well-known community names, which are defined in RFC 1997, *BGP Communities Attribute*:

- **no-export**—Routes containing this community name are not advertised outside a BGP confederation boundary.
- **no-advertise**—Routes containing this community name are not advertised to other BGP peers.
- **no-export-subconfed**—Routes containing this community name are not advertised to external BGP peers, including peers in other members' ASs inside a BGP confederation.

You can explicitly exclude BGP community information with a static route using the **none** option. Include **none** when configuring an individual route in the **route** portion of the **static** statement to override a **community** option specified in the **defaults** portion of the statement.

The format for extended **community-ids** is the following:

```
type:administrator:assigned-number
```

type is the type of extended community and can be either a **bandwidth**, **target**, **origin**, **domain-id**, **src-as**, or **rt-import** community or a 16-bit number that identifies a specific BGP extended community. The **target** community identifies the destination to which the route is going. The **origin** community identifies where the route originated. The **domain-id** community identifies the OSPF domain from which the route originated. The **src-as** community identifies the autonomous system from which the route originated. The **rt-import** community identifies the route to install in the routing table.



NOTE: For **src-as**, you can specify only an AS number and not an IP address. For **rt-import**, you can specify only an IP address and not an AS number.

administrator is the administrator. It is either an AS number or an IPv4 address prefix, depending on the type of extended community.

assigned-number identifies the local provider.

The format for linking a bandwidth with an AS number is:

```
bandwidth:as-number:bandwidth
```

as-number specifies the AS number and **bandwidth** specifies the bandwidth in bytes per second.



NOTE: In Junos OS Release 9.1 and later, you can specify 4-byte AS numbers as defined in RFC 4893, *BGP Support for Four-octet AS Number Space*, as well as the 2-byte AS numbers that are supported in earlier releases of the Junos OS. In plain-number format, you can configure a value in the range from 1 through 4,294,967,295. To configure a target or origin extended community that includes a 4-byte AS number in the plain-number format, append the letter “L” to the end of number. For example, a target community with the 4-byte AS number 334,324 and an assigned number of 132 is represented as `target:334324L:132`.

In Junos OS Release 9.2 and later, you can also use AS-dot notation when defining a 4-byte AS number for the target and origin extended communities. Specify two integers joined by a period: *16-bit high-order value in decimal.16-bit low-order value in decimal*. For example, the 4-byte AS number represented in plain-number format as 65546 is represented in AS-dot notation as 1.10.

As defined in RFC 8092, BGP large community uses 12-byte encoding and the format for BGP large *community-ids* is:

```
large: global-administrator:assigned-number:assigned-number
```

large indicates BGP large community.



global-administrator is the administrator. It is a 4-byte AS number.

assigned-number is a 4-byte value used to identify the local provider. BGP large community uses two 4-byte assigned number to identify the local provider.

Required Privilege	routing—To view this statement in the configuration.
Level	routing-control—To add this statement to the configuration.

Related Documentation	<ul style="list-style-type: none"> • <i>Understanding BGP Communities, Extended Communities, and Large Communities as Routing Policy Match Conditions</i> • <i>Understanding How to Define BGP Communities and Extended Communities</i> • <i>dynamic-db</i>
------------------------------	--

compatibility-mode

Syntax	<code>compatibility-mode (adtran digital-link kentrox larscom verilink) <subrate value>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> e3-options], [edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the E3 or T3 interface to be compatible with the channel service unit (CSU) at the remote end of the line.
	<p> NOTE: The <code>compatibility-mode</code> statement at the [edit interfaces <i>interface-name</i> e3-options] hierarchy level is not valid for IQE PICs.</p>
Default	If you omit this option, the full E3 or T3 rate is used.
Options	<p>adtran—For T3 IQ interfaces only, configure compatibility with Adtran CSUs.</p> <p>digital-link—Configure compatibility with Digital Link CSUs. If you include this option on an E3 interface, you must also disable payload scrambling.</p> <p>kentrox—Configure compatibility with Kentrox CSUs. Kentrox subrate is valid for E3 IQ and T3 IQ interfaces only.</p> <p>larscom—For T3 and T3 IQ interfaces only, configure compatibility with Larscom CSUs.</p> <p>verilink—For T3 IQ and T3 IQE interfaces only, configure compatibility with Verilink CSUs.</p> <p> NOTE: Verilink configuration is not functional if an IQ interface is paired with an IQE interface.</p> <p>subrate value—Subrate of the E3 or T3 line.</p> <p>Range: For Kentrox CSUs on E3 IQ interfaces and T3 IQ interfaces the subrate value must match the value configured on the CSU. Each increment of the subrate value corresponds to a rate increment of about 0.5 Mbps.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- [Configuring the E3 CSU Compatibility Mode](#)
 - [Configuring the T3 CSU Compatibility Mode](#)
 - [payload-scrambler on page 857](#)

compression (PPP Properties)

Syntax	<pre>compression { acfc; pfc; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> ppp-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For interfaces with PPP encapsulation, set Link Control Protocol (LCP) compression options.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring PPP Address and Control Field Compression on page 150 • Configuring the PPP Protocol Field Compression on page 152

compression (Voice Services)

Syntax	<pre>compression { rtp { f-max-period <i>number</i>; queues [<i>queue-numbers</i>]; port { minimum <i>port-number</i>; maximum <i>port-number</i>; } } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the compression properties for voice services traffic. The remaining statements are described separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

compression-device

Syntax	<code>compression-device <i>interface-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the compression interface for voice services traffic.
Options	<i>interface-name</i> —Logical interface used for compression.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

connections

Syntax	<pre>connections { interface-switch <i>connection-name</i> { interface <i>interface-name.unit-number</i>; interface <i>interface-name.unit-number</i>; } }</pre>
Hierarchy Level	<code>[edit protocols]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Define the connection between two circuits in a circuit cross-connect (CCC) connection.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Defining the Connection for Switching Cross-Connects on page 285 • <i>MPLS Applications Feature Guide</i>

connection-protection-tlv

Syntax	connection-protection-tlv;
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> continuity-check]
Description	Includes connection protection OUI TLV in continuity check messages (CCM) .The TLV is responsible for carrying the flag information within CCM PDUs. Though this OUI TLV will be included in the CCM frames by provider edge devices, the value is updated by the provider routers in case the traffic to the other end of the network is forwarded by the facility protection tunnel .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• connectivity-fault-management on page 509• <i>Configuring MAC Flush Message Processing in CET Mode</i>• <i>Example: Configuring an Action Profile Based on Connection Protection TLVs</i>

connectivity-fault-management

```
Syntax connectivity-fault-management {
    action-profile profile-name {
        action {
            interface-down;
            log-and-generate-ais {
                interval (1m | 1s);
                level value;
                priority value;
            }
        }
    }
    default-actions {
        interface-down;
    }
    event {
        ais-trigger-condition {
            adjacency-loss;
            all-defects;
            cross-connect-ccm;
            erroneous-ccm;
            receive-ais;
        }
        adjacency-loss;
        interface-status-tlv (down | lower-layer-down);
        port-status-tlv blocked;
        rdi;
    }
}
linktrace {
    age (30m | 10m | 1m | 30s | 10s);
    path-database-size path-database-size;
}
maintenance-domain domain-name {
    bridge-domain <vlan-id [ vlan-ids ]>;
    instance routing-instance-name;
    interface interface-name;
    level number;
    name-format (character-string | none | dns | mac+2oct);
    maintenance-association ma-name {
        protect-maintenance-association protect-ma-name;
        remote-maintenance-association remote-ma-name;
        short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
        continuity-check {
            convey-loss-threshold;
            hold-interval minutes;
            interface-status-tlv;
            interval (10m | 10s | 1m | 1s | 100ms);
            loss-threshold number;
            port-status-tlv;
        }
    }
    mep mep-id {
        auto-discovery;
    }
}
```

```

    direction (up | down);
    interface interface-name (protect | working);
    lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
        rem-err-xcon | xcon );
    priority number;
    remote-mep mep-id {
        action-profile profile-name;
        sla-iterator-profile profile-name {
            data-tlv-size size;
            iteration-count count-value;
            priority priority-value;
            detect-loc;
        }
    }
}
}
}
virtual-switch routing-instance-name {
    bridge-domain name <vlan-ids [ vlan-ids ]>;
}
}
no-aggregate-delegate-processing;
performance-monitoring {
    delegate-server-processing;
    hardware-assisted-timestamping;
    hardware-assisted-keepalives;
    sla-iterator-profiles {
        profile-name {
            avg-fd-twoway-threshold;
            avg-ifdv-twoway-threshold;
            avg-flr-forward-threshold;
            avg-flr-backward-threshold;
            disable;
            calculation-weight {
                delay delay-weight;
                delay-variation delay-variation-weight;
            }
            cycle-time milliseconds;
            iteration-period connections;
            measurement-type (loss | statistical-frame-loss | two-way-delay);
        }
    }
}
}
}

```

Hierarchy Level [edit protocols [oam](#) [ethernet](#)]

Release Information Statement introduced in Junos OS Release 8.4.

Description For Ethernet interfaces on M7i and M10i routers with Enhanced CFEB (CFEB-E), and on M120, M320, MX Series, and T Series routers, specify connectivity fault management for IEEE 802.1ag Operation, Administration, and Management (OAM) support. In Junos OS Release 9.3 and later, this statement is also supported on aggregated Ethernet interfaces.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *IEEE 802.1ag OAM Connectivity Fault Management Overview*

container-devices

Syntax

```
container-devices {
  device-count number;
}
```

Hierarchy Level [edit chassis]

Release Information Statement introduced in Junos OS Release 9.2.

Description Specify the container devices configuration. The **number** option specifies the number of sequentially numbered container interfaces, from **ci0** to **ci127** maximum.

Options **number**—Number of container devices.
Range: 1 through 128

Required Privilege Level chassis—To view this statement in the configuration.
chassis-control—To add this statement to the configuration.

Related Documentation

- *Displaying APS Using a Container Interface with ATM Encapsulation*
- *Configuring Container Interfaces for APS on SONET Links*

container-list

Syntax	container-list [<i>container-interface-names</i>];
Hierarchy Level	[edit interfaces container-options]
Release Information	Statement introduced in Junos OS Release 9.2.
Description	Specify a list of container interfaces; for example: ci0 , ci1 , and up to ci127 .
Options	<i>container-interface-names</i> —Name of each container interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i>• <i>Configuring Container Interfaces for APS on SONET Links</i>• container-options on page 513

container-options

Syntax	<pre> container-options { container-list [container-interface-names]; container-type aps; member-interface-type sonet { member-interface-speed [speed]; } } </pre>
Hierarchy Level	[edit interfaces]
Release Information	Statement introduced in Junos OS Release 9.2.
Description	Specify the container interface options.
Options	<p>interface-name—Name of the SONET or the container interface.</p> <p>aps—Specify the member link interface type of the container as APS.</p> <p>sonet—Protocol type of the container interface.</p> <p>speed—Set interface speed to OC3, OC12, OC48, OC192, OC768, or mixed.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Displaying APS Using a Container Interface with ATM Encapsulation</i> • <i>Configuring Container Interfaces for APS on SONET Links</i>

container-type

Syntax	<code>container-type aps;</code>
Hierarchy Level	[edit interfaces container-options]
Release Information	Statement introduced in Junos OS Release 9.2.
Description	Specify the container-options interface type.
Options	aps —Configure the interface type to be Automatic Protection Switching (APS).
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i>• <i>Configuring Container Interfaces for APS on SONET Links</i>

continuity-check

Syntax	<pre>continuity-check { convey-loss-threshold; hold-interval <i>minutes</i>; interface-status-tlv; interval (10m 10s 1m 1s 100ms 10ms); loss-threshold <i>number</i>; port-status-tlv; }</pre>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i>]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	Specify continuity check protocol options.
Options	<p>convey-loss-threshold—Enable loss-threshold-tlv transmission.</p> <p>hold-interval <i>minutes</i>—Specify the continuity check hold-interval, in minutes.</p> <p>interface-status-tlv—Enable interface-status-tlv transmission.</p> <p>interval (<i>10m 10s 1m 1s 100ms 10ms</i>)—Specify the continuity check interval.</p> <p>loss-threshold <i>minutes</i>—Specify the loss-threshold, in minutes.</p> <p>port-status-tlv—Enable port-status-tlv transmission.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Continuity Check Protocol Parameters for Fault Detection</i>

control-channel

Syntax	<pre>control-channel <i>channel-name</i> { vlan <i>vlan-id</i>; interface name <i>interface-name</i> }</pre>
Hierarchy Level	[edit protocols protection-group ethernet-ring name (east-interface west-interface)]
Release Information	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.
Description	Configure the Ethernet RPS control channel logical interface to carry the RAPS PDU. The related physical interface is the physical ring port.
Options	<p>vlan <i>vlan-id</i>—If the control channel logical interface is a trunk port, then a dedicated vlan <i>vlan-id</i> defines the dedicated VLAN channel to carry the RAPS traffic. Only configure the vlan-id when the control channel logical interface is the trunk port.</p> <p>interface name <i>interface-name</i>—Interface name of the control channel.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Ethernet Ring Protection Switching Overview</i>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i>

control-polarity

Syntax	control-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For X.21 interfaces only, configure the control signal polarity.
Options	positive —Positive signal polarity. negative —Negative signal polarity. Default: positive
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Serial Signal Polarities on page 355

control-signal

Syntax	<code>control-signal (assert de-assert normal);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For X.21 interfaces only, configure the to-DCE signal.
Options	assert —The to-DCE signal must be asserted. de-assert —The to-DCE signal must be deasserted. normal —Normal request-to-send (RTS) signal handling, as defined by ITU-T Recommendation X.21. Default: normal
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Signal Handling on page 352

copy-tos-to-outer-ip-header

Syntax	<code>copy-tos-to-outer-ip-header;</code>
Hierarchy Level	<code>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced in Junos OS Release 8.2.
Description	For GRE tunnel interfaces only, enable the inner IP header's TOS bits to be copied to the outer IP packet header.
Default	If you omit this statement, the TOS bits in the outer IP header are set to 0.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Class of Service Feature Guide for Routers and EX9200 Switches</i>

core-dump

Syntax	<code>(core-dump no-core-dump);</code>
Hierarchy Level	<code>[edit interfaces mo-<i>fpc/pic/port</i> multiservice-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For monitoring services interfaces only, a useful tool for isolating the cause of a problem. Core dumping is enabled by default. The directory <code>/var/tmp</code> contains core files. The Junos OS saves the current core file (0) and the four previous core files, which are numbered 1 through 4 (from newest to oldest):</p> <ul style="list-style-type: none"> • core-dump—Enable the core dumping operation. • no-core-dump—Disable the core dumping operation.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Multiservice Physical Interface Properties on page 171 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

crc-major-alarm-threshold

Syntax	<code>crc-major-alarm-threshold (1e-3 5e-4 1e-4 5e-5 1e-5);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> t1-options]
Release Information	Statement introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
Description	Major alarm error thresholds for T1 CRC errors. When the threshold is exceeded for one second, a defect condition is declared. If the defect condition continues for the monitoring period, an alarm condition is declared.
Default	10-second monitoring period for all settings except 1e-5 . The 1e-5 value uses a 50-second monitoring period.
Options	<p>1e-3—Error rate expressed as the number of errors per number of bits. The value 1e-3 is one crc error in 10^3 bits.</p> <p>1e-4—Error rate expressed as the number of errors per number of bits. The value 1e-4 is one crc error in 10^4 bits.</p> <p>1e-5—Error rate expressed as the number of errors per number of bits. The value 1e-5 is one crc error in 10^5 bits.</p> <p>5e-4—Error rate expressed as the number of errors per number of bits. The value 5e-4 is five crc errors in 10^4 bits.</p> <p>5e-5—Error rate expressed as the number of errors per number of bits. The value 5e-5 is five crc errors in 10^5 bits.</p> <p>Default: 5e-5</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring T1 CRC Error Major Alarm Thresholds</i>

crc-minor-alarm-threshold

Syntax	<code>crc-minor-alarm-threshold (1e-3 5e-4 1e-4 5e-5 1e-5 5e-6 1e-6);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> t1-options]</code>
Release Information	Statement introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
Description	Minor alarm error thresholds for T1 CRC errors. When the threshold is exceeded for one second, a defect condition is declared. If the defect condition continues for the monitoring period, an alarm condition is declared.
Default	10-second monitoring period for values 1e-3 , 5e-4 , 1e-4 , and 5e-5 . The 1e-5 value uses a 50-second monitoring period. The 5e-6 value uses a 100-second monitoring period. The 1e-6 value uses a 500-second monitoring period.
Options	<p>1e-3—Error rate expressed as the number of errors per number of bits. The value 1e-3 is one crc error in 10^3 bits.</p> <p>1e-4—Error rate expressed as the number of errors per number of bits. The value 1e-4 is one crc error in 10^4 bits.</p> <p>1e-5—Error rate expressed as the number of errors per number of bits. The value 1e-5 is one crc error in 10^5 bits.</p> <p>1e-6—Error rate expressed as the number of errors per number of bits. The value 1e-5 is one crc error in 10^6 bits.</p> <p>5e-4—Error rate expressed as the number of errors per number of bits. The value 5e-4 is five crc errors in 10^4 bits.</p> <p>5e-5—Error rate expressed as the number of errors per number of bits. The value 5e-5 is five crc errors in 10^5 bits.</p> <p>5e-6—Error rate expressed as the number of errors per number of bits. The value 5e-5 is five crc errors in 10^6 bits.</p> <p>Default: 5e-6</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring T1 CRC Error Minor Alarm Thresholds</i>

cts

Syntax	cts (ignore normal require);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, clear-to-send (CTS).
Options	ignore —The from-DCE signal is ignored. normal —Normal CTS signal handling as defined by the TIA/EIA Standard 530. require —The from-DCE signal must be asserted. Default: normal
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Signal Handling on page 352

cts-polarity

Syntax	<code>cts-polarity (negative positive);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> serial-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure CTS signal polarity.
Options	<p>positive—Positive signal polarity.</p> <p>negative—Negative signal polarity.</p> <p>Default: positive</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Serial Signal Polarities on page 355

cycle-time

Syntax	<code>cycle-time <i>cycle-time-value</i>;</code>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management performance-monitoring sla-iterator-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 11.1. Statement introduced in Junos OS Release 11.4 for EX Series switches.
Description	Configure the time (in milliseconds) taken between back-to-back transmissions of SLA frames for a single connection.
Options	<i>cycle-time-value</i> —Cycle time value in milliseconds. Range: 10 through 3,600,000 Default: 1000
Required Privilege Level	Configure—To enter configuration mode. Control—To modify any configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring an Iterator Profile</i>• <i>Configuring an Iterator Profile on a Switch (CLI Procedure)</i>

damping (Interfaces)

Syntax

```
damping {
  enable;
  half-life seconds;
  max-suppress seconds;
  reuse number;
  suppress number;
}
```

Hierarchy Level [edit interfaces *interface--name*],
[edit interfaces *interface--range*]

Release Information Statement introduced in Junos OS Release 14.1 for PTX Series Packet Transport Routers and T Series Core Routers.
Statement introduced in Junos OS Release 14.2 for MX960, MX480, MX240, and MX80 Universal Routing Platforms and M10i Multiservice Edge Routers.

Description Limit the number of advertisements of the up and down transitions (flapping) on an interface. Each time a transition occurs, the interface state is changed, which generates an advertisement to the upper-level routing protocols. Damping helps reduce the number of these advertisements. Every time an interface goes down, a penalty is added to the interface penalty counter. Penalty added on every interface flap is 1000.

If at some point the accumulated penalty exceeds the suppress level **max-suppress**, the interface is placed in the suppress state, and further interface state up and down transitions are not reported to the upper-level protocols.

Options **enable**—Enable damping on a per-interface basis. If damping is enabled on an interface, it is suppressed during interface flaps that match the configuration settings.

Default: Disabled

half-life *seconds*—Decay half-life. ***seconds*** is the interval after which the accumulated interface penalty counter is reduced by half if the interface remains stable.



NOTE: For the half-life, configure a value that is less than the max-suppress value. If you do not, the configuration is rejected.

Range: 1 through 30

Default: 5

max-suppress *seconds*—Maximum hold-down time. ***seconds*** is the maximum time that an interface can be suppressed no matter how unstable the interface has been.



NOTE: For max-suppress, configure a value that is greater than the half-life. If you do not, the configuration is rejected.

Range: 1 through 20,000

Default: 20

reuse *number*—Reuse threshold. When the accumulated interface penalty counter falls below *number*, the interface is no longer suppressed.

Range: 1 through 20,000

Default: 1000

suppress *number*—Cutoff (suppression) threshold. When the accumulated interface penalty counter exceeds *number*, the interface is suppressed.

Range: 1 through 20,000

Default: 2000


Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
---------------------------------	---

Related Documentation	<ul style="list-style-type: none">• Physical Interface Damping Overview on page 160• Damping Shorter Physical Interface Transitions on page 166• Damping Longer Physical Interface Transitions on page 167• show interfaces extensive on page 1624• hold-time on page 666
------------------------------	---

data-channel

Syntax	<pre>data-channel { vlan <i>number</i>; }</pre>
Hierarchy Level	[edit protocols protection-group ethernet-ring <i>ring-name</i>]
Release Information	<p>Statement introduced in Junos OS Release 10.2.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.</p>
Description	<p>For Ethernet ring protection, configure a data channel to define a set of VLAN IDs that belong to a ring instance.</p> <p>VLANs specified in the data channel use the same topology used by the ERPS PDU in the control channel. Therefore, if a ring interface is blocked in the control channel, all traffic in the data channel is also blocked on that interface.</p>
Options	vlan <i>number</i> —Specify (by VLAN ID) one or more VLANs that belong to a ring instance.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Ethernet Ring Protection Using Ring Instances for Load Balancing</i> • <i>Example: Configuring Load Balancing Within Ethernet Ring Protection for MX Series Routers</i> • <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i> • <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i>

data-tlv-size

Syntax	<code>data-tlv-size size;</code>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain md-name maintenance-association ma-name mep mep-id remote-mep remote-mep-id sla-iterator-profile profile-name]
Release Information	Statement introduced in Junos OS Release 11.1.
Description	Configure the size of the data TLV portion of the Y.1731 data frame.
Options	<p>size—Size of the data TLV portion of the Y.1731 data frame.</p> <hr/> <div>  <p>NOTE: This option is applicable only for two-way delay measurement.</p> </div> <hr/> <p>Range: 1 through 1400 bytes Default: 1</p>
Required Privilege Level	Configure—To enter configuration mode. Control—To modify any configuration.
Related Documentation	<ul style="list-style-type: none"> • sla-iterator-profile on page 1017 • <i>Configuring a Remote MEP with an Iterator Profile</i>

dcd

Syntax	<code>dcd (ignore normal require);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, data-carrier-detect (DCD).
Options	<p>ignore—The from-DCE signal is ignored.</p> <p>normal—Normal DCD signal handling as defined by the TIA/EIA Standard 530.</p> <p>require—The from-DCE signal must be asserted.</p> <p>Default: normal</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring the Serial Signal Handling on page 352

dcd-polarity

Syntax	dcd-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure DCD signal polarity.
Options	positive —Positive signal polarity. negative —Negative signal polarity. Default: positive
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Serial Signal Polarities on page 355

dce

Syntax	dce;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> serial-options clocking-mode]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Frame Relay only, respond to status enquiry message keepalives. When you configure the router to be a DCE, keepalives are disabled by default.
Default	The router operates in DTE mode.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Router as a DCE with Frame Relay Encapsulation on page 155

deactivation-delay

Syntax	<code>deactivation-delay <i>seconds</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>dl</i>n unit <i>logical-unit-number</i> dialer-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers with ISDN interfaces, configure the ISDN deactivation delay. Used only for dialer backup and dialer watch cases.
Options	<p><i>seconds</i>—Interval before the backup interface is deactivated after the primary interface has comes up.</p> <p>Range: 1 through 4,294,967,295 seconds</p> <p>Default: 0 (zero)</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

dce-options

Syntax

```
dce-options {  
  control-signal (assert | de-assert | normal);  
  cts (ignore | normal | require);  
  dcd (ignore | normal | require);  
  dsr (ignore | normal | require);  
  dtr signal-handling-option;  
  ignore-all;  
  indication (ignore | normal | require);  
  rts (assert | de-assert | normal);  
  tm (ignore | normal | require);  
}
```

Hierarchy Level [edit interfaces *interface-name* **serial-options**]

Release Information Statement introduced in Junos OS Release 8.3.
Statement previously known as **control-leads**.

Description For J Series Services Routers, configure the serial interface signal characteristics.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring the Serial Signal Handling on page 352](#)

default-actions

Syntax	<pre>default-actions { interface-down; }</pre>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management action-profile <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	Define the action to be taken when connectivity to the remote MEP is lost.
Default	If no action is configured, no action is taken.
Options	interface-down —When a remote MEP connectivity failure is detected, bring the interface down.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring a CFM Action Profile to Specify CFM Actions for CFM Events</i>

default-chap-secret

Syntax	<code>default-chap-secret <i>name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap]</code>
Release Information	Statement introduced in Junos OS Release 8.0.
Description	<p>Define the default CHAP secret to be used when no matching CHAP access profile exists.</p> <p>For ATM2 IQ interfaces only, you can configure a default CHAP secret on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none">• atm-ppp-llc—PPP over AAL5 LLC encapsulation.• atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation.
Default	If you do not include the default-chap-secret statement in the configuration, and an interface receives a CHAP challenge or response from a peer that is not in the applied access profile, the link is immediately dropped.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a Default CHAP Secret• access-profile on page 422

default-pap-password

Syntax	<code>default-pap-password <i>password</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	For PAP authentication, the default PAP password.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring a Default PAP Password • access-profile on page 422

delimiter

Syntax	<code>delimiter <i>delimiter-character</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure vlan-ranges authentication username-include], [edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges authentication username-include]
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Specify the character used as the delimiter between the concatenated components of the username. You cannot use the semicolon (;) as a delimiter.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring VLAN Interface Username Information for AAA Authentication

demux-destination (Underlying Interface)

Syntax	<code>demux-destination family;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces</code> <code> <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
Description	Configure the logical demultiplexing (demux) destination family type on the IP demux underlying interface.



NOTE: The IP demux interface feature currently supports only Fast Ethernet, Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.

Related Documentation	<ul style="list-style-type: none">• Configuring an IP Demultiplexing Interface on page 322• Configuring a VLAN Demultiplexing Interface on page 327
------------------------------	--

demux-destination (Demux Interface)

Syntax	<pre>demux-destination { destination-prefix; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</p>
Release Information	<p>Statement introduced in Junos OS Release 9.0.</p> <p>Support for aggregated Ethernet added in Junos OS Release 9.4.</p>
Description	<p>Configure one or more logical demultiplexing (demux) destination prefixes. The prefixes are matched against the destination address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring an IP Demultiplexing Interface on page 322 • Configuring a VLAN Demultiplexing Interface on page 327


demux-options (Static Interface)

Syntax	<pre>demux-options { <i>underlying-interface</i> <i>interface-name</i> }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</pre>
Release Information	Statement introduced in Junos OS Release 9.0.
Description	<p>Configure logical demultiplexing (demux) interface options.</p> <p>The remaining statement is explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring an IP Demultiplexing Interface on page 322• Configuring a VLAN Demultiplexing Interface on page 327

demux-source (Demux Interface)

Syntax	<pre>demux-source { source-prefix; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</p>
Release Information	<p>Statement introduced in Junos OS Release 9.0.</p> <p>Support for aggregated Ethernet added in Junos OS Release 9.4.</p>
Description	<p>Configure one or more logical demultiplexing (demux) source prefixes. The prefixes are matched against the source address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring an IP Demultiplexing Interface on page 322 • Configuring a VLAN Demultiplexing Interface on page 327

demux-source (Underlying Interface)

Syntax	<code>demux-source <i>family</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces</code> <code> <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
Description	Configure the logical demultiplexing (demux) source family type on the IP demux underlying interface.
<div> NOTE: The IP demux interface feature currently supports only Fast Ethernet, Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.</div>	
Options	<i>family</i> —Protocol family: <ul style="list-style-type: none">• inet—Internet Protocol version 4 suite• inet6—Internet Protocol version 6 suite
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring an IP Demultiplexing Interface on page 322• Configuring a VLAN Demultiplexing Interface on page 327

demux0 (Static Interface)

```

Syntax  demux0 {
        unit logical-unit-number {
            demux-options {
                underlying-interface interface-name
            }
            family family {
                access-concentrator name;
                {
                    destination-prefix;
                }
                direct-connect;
                duplicate-protection;
                dynamic-profile profile-name;
                {
                    source-prefix;
                }
                max-sessions number;
                service-name-table table-name
                targeted-distribution;
                unnumbered-address interface-name <preferred-source-address address>;
            }
            vlan-id number;
            vlan-tags outer [tpid].vlan-id [inner [tpid].vlan-id];
        }
    }

```

Hierarchy Level [edit interfaces],
[edit logical-systems *logical-system-name* interfaces]

Release Information Statement introduced in Junos OS Release 9.0.

Description Configure the logical demultiplexing (demux) interface.

Logical IP demux interfaces do not support IPv4 and IPv6 dual stack.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring an IP Demultiplexing Interface on page 322](#)
- [Configuring a VLAN Demultiplexing Interface on page 327](#)

demux0 (Dynamic Interface)

Syntax

```

demux0 {
  unit logical-unit-number {
    demux-options {
      underlying-interface interface-name
    }
    family family {
      access-concentrator name;
      address address;
      demux-source {
        source-prefix;
      }
      direct-connect;
      duplicate-protection;
      dynamic-profile profile-name;
      filter {
        input filter-name;
        output filter-name;
      }
      mac-validate (loose | strict);
      max-sessions number;
      max-sessions-vs-a-ignore;
      rpf-check {
        fail-filter filter-name;
        mode loose;
      }
      service-name-table table-name
      short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
        maximum-seconds>;
      unnumbered-address interface-name <preferred-source-address address>;
    }
    filter {
      input filter-name;
      output filter-name;
    }
    vlan-id number;
  }
}

```

Hierarchy Level [edit [dynamic-profiles](#) *profile-name* [interfaces](#)]

Release Information Statement introduced in Junos OS Release 9.3.

Description Configure the logical demultiplexing (demux) interface in a dynamic profile.

Logical IP demux interfaces do not support IPv4 and IPv6 dual stack.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege interface—To view this statement in the configuration.

Level interface-control—To add this statement to the configuration.

- Related Documentation**
- *Configuring Dynamic Subscriber Interfaces Using IP Demux Interfaces in Dynamic Profiles*
 - [Demultiplexing Interface Overview on page 319](#)

description (Interfaces)

Syntax	<code>description text;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Provide a textual description of the interface or the logical unit. Any descriptive text you include is displayed in the output of the show interfaces commands, and is also exposed in the ifAlias Management Information Base (MIB) object. It has no effect on the operation of the interface on the router or switch.</p> <p>The textual description can also be included in the extended DHCP relay option 82 Agent Circuit ID suboption.</p>
Options	text —Text to describe the interface. If the text includes spaces, enclose the entire text in quotation marks.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Interface Description on page 114 • Adding a Logical Unit Description to the Configuration on page 190 • <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i> • <i>Configuring Gigabit and 10-Gigabit Ethernet Interfaces for OCX Series Switches</i> • <i>Configuring Gigabit Ethernet Interfaces for EX Series Switches with ELS support</i> • <i>Configuring Gigabit and 10-Gigabit Ethernet Interfaces for EX4600 and QFX Series Switches</i> • <i>Using DHCP Relay Agent Option 82 Information</i> • <i>Junos OS Network Interfaces Library for Routing Devices</i> • <i>Example: Connecting Access Switches with ELS Support to a Distribution Switch with ELS Support</i>

destination (IPCP)

Syntax	<code>destination address destination-profile <i>profile-name</i>;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i>]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For unnumbered interfaces with PPP encapsulation, specify the IP address of the remote interface.
Options	<p><i>address</i>—IP address of the remote interface.</p> <p>The remaining statement is explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring IPCP Options for Interfaces with PPP Encapsulation on page 218 • address on page 435 • negotiate-address on page 837 • <i>Junos OS Administration Library</i>

destination (Routing Instance)

Syntax	<code>destination <i>routing-instance-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel routing-instance], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel routing-instance]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the destination routing instance that points to the routing table containing the tunnel destination address.
Default	The default Internet routing table inet.0 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

destination (Tunnels)

Syntax	<code>destination <i>address</i>;</code>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	For encrypted, PPP-encapsulated, and tunnel interfaces, specify the remote address of the connection.
Options	<i>address</i> —Address of the remote side of the connection.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring the Interface Address on page 209 • Configuring Generic Routing Encapsulation Tunneling (CLI Procedure) • Junos OS Services Interfaces Library for Routing Devices

destination-class-usage

Syntax	<code>destination-class-usage;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet accounting], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet accounting]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Enable packet counters on an interface that count packets that arrive from specific customers and are destined for specific prefixes on the provider core router.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Enabling Source Class and Destination Class Usage on page 265• accounting on page 423• source-class-usage on page 1025

destination-profile

Syntax	<code>destination-profile <i>name</i>;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i> destination <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i> destination <i>address</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	For interfaces with PPP encapsulation, assign PPP properties to the remote destination end. You define the profile at the <code>[edit access group-profile <i>name</i> ppp]</code> hierarchy level.
Options	<i>name</i> —Profile name defined at the <code>[edit access group-profile <i>name</i> ppp]</code> hierarchy level.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring IPCP Options for Interfaces with PPP Encapsulation on page 218 • destination (IPCP) on page 545 • <i>Junos OS Administration Library</i>

dial-options

Syntax	<pre>dial-options { ipsec-interface-id <i>name</i>; l2tp-interface-id <i>name</i>; (shared dedicated); }</pre>
Hierarchy Level	<pre>[edit interfaces <i>sp-fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit interfaces <i>si-fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>sp-fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>si-fpc/pic/port</i> unit <i>logical-unit-number</i>]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>The [edit ...si-...] hierarchy levels introduced in Junos OS Release 11.4.</p>
Description	Specify the options for configuring logical interfaces for group and user sessions in L2TP or IPsec dynamic endpoint tunneling.
Options	<p>dedicated—(LNS on M Series routers and MX Series routers only) Specify that a logical interface can host only one session at a time.</p> <p>ipsec-interface-id <i>name</i>—(M Series routers only) Interface identifier for group of dynamic peers. This identifier must be replicated at the [edit access profile <i>name</i> client * ike] hierarchy level.</p> <p>l2tp-interface-id <i>name</i>—Interface identifier that must be replicated at the [edit access profile <i>name</i>] hierarchy level.</p> <p>shared—(LNS on M Series routers only) Specify that a logical interface can host multiple (shared) sessions at a time.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring the Identifier for Logical Interfaces that Provide L2TP Services</i> <i>Configuring Dynamic Endpoints for IPsec Tunnels</i> <i>Configuring Options for the LNS Inline Services Logical Interface</i>

dial-string

Syntax	<code>dial-string [<i>dial-string-numbers</i>];</code>
Hierarchy Level	[edit interfaces <i>br-pim</i> / <i>O/port</i> unit <i>logical-unit-number</i> dialer-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>br-pim</i> / <i>O/port</i> unit <i>logical-unit-number</i> dialer-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers with ISDN interfaces, specify one or more ISDN dial strings used to reach a destination subnetwork.
Options	<i>dial-string-numbers</i> —One or more strings of numbers to call.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	None

dialer

Syntax	<code>dialer <i>filter-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Apply a dialer filter to an interface. To create the dialer filter, include the dialer-filter statement at the [edit firewall filter family <i>family</i>] hierarchy level.
Options	<i>filter-name</i> —Dialer filter name.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Interfaces and Routing Configuration Guide</i>


dialer-options

Syntax	<pre> dialer-options { activation-delay seconds; callback; callback-wait-period time; deactivation-delay seconds; dial-string [dial-string-numbers]; idle-timeout seconds; incoming-map { caller caller-number accept-all; initial-route-check seconds; load-interval seconds; load-threshold percent; pool pool-name; redial-delay time; watch-list { [routes]; } } } </pre>
Hierarchy Level	<pre> [edit interfaces umd0], [edit interfaces dln unit logical-unit-number], [edit logical-systems logical-system-name interfaces dln unit logical-unit-number] </pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Specify the dialer options for configuring logical interfaces for group and user sessions.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Junos OS Services Interfaces Library for Routing Devices</i>

dialin

Syntax	dialin (console routable);
Hierarchy Level	[edit interfaces umd0 modem-options]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	For J Series Services Routers, configure a USB modem port to act as a dial-in console or WAN backup port.
Options	console —Configure the USB modem port to operate as a dial-in console for management. routable —Configure the USB modem port to operate as a dial-in WAN backup interface. Default: console
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Specifying a USB Modem Interface on J Series Routers on page 359

direction

Syntax	direction (up down);
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep mep-id]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	Configure the direction of the MEP.
Options	up —An UP MEP CCM is transmitted out of every logical interface which is part of the same bridging or vpls instance except for the interface configured on this MEP.
<hr/> <div> NOTE: The up direction for MEP is not supported on T Series routers.</div> <hr/>	
down —Down MEP CCMs are transmitted only out the interface configured on this MEP.	
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i>• <i>IEEE 802.1ag OAM Connectivity Fault Management Overview</i>

disable (Interface)

Syntax	<code>disable;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	Disable a physical or a logical interface, effectively unconfiguring it.



CAUTION:

- Dynamic subscribers and logical interfaces use physical interfaces for connection to the network. The Junos OS allows you to set the interface to disable and commit the change while dynamic subscribers and logical interfaces are still active. This action results in the loss of all subscriber connections on the interface. Use care when disabling interfaces.
- If aggregated SONET links are configured between a T1600 router and a T4000 router, interface traffic is disrupted when you disable the physical interface configured on the T1600 router. If you want to remove the interface, we recommend that you deactivate the interface instead of disabling it.



NOTE:

- When you use the `disable` statement at the `[edit interfaces]` hierarchy level, depending on the PIC type, the interface might or might not turn off the laser. Older PIC transceivers do not support turning off the laser, but newer Gigabit Ethernet (GE) PICs with SFP and XFP transceivers and ATM MIC with SFP do support it and the laser will be turned off when the interface is disabled. If the ATM MIC with SFP is part of an APS group, then the laser will not be turned off when you use the `disable` statement at the `[edit interfaces]` hierarchy level..
- When you disable or deactivate an interface, then all the references made to the deactivated interface must be removed from the routing instance.
- For abstracted fabric interfaces, the `disable` command disables AF interface on the local GNF only.



WARNING: Do not stare into the laser beam or view it directly with optical instruments even if the interface has been disabled.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Disabling a Physical Interface on page 175](#)
- [Disabling a Logical Interface on page 203](#)

disable (Link Protection)

Syntax disable;

Hierarchy Level [edit interfaces aeX aggregated-ether-options lacp link-protection]

Release Information Statement introduced in Junos OS Release 9.3.
Statement introduced in Junos OS Release 11.4 for EX Series switches.
Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.

Description Disable LACP link protection on the interface.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring LACP for Aggregated Ethernet Interfaces*
- *Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches*

disable-mlppp-inner-ppp-pfc

Syntax	<code>disable-mlppp-inner-ppp-pfc;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	For MLPPP interfaces only, disable compression of the inner PPP header in the MLPPP payload. By default, compression is enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

dlci

Syntax	<code>dlci <i>dlci-identifier</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Starting with Junos OS Release 18.2R1, the SRX Series devices support frame-relay encapsulation and adds DLCI information to the given frame.
Description	<p>For Frame Relay and Multilink Frame Relay (MLFR) user-to-network interface (UNI) network-to-network interface (NNI) encapsulation only, and for link services, voice services and point-to-point interfaces only, configure the data-link connection identifier (DLCI) for a permanent virtual circuit (PVC) or an switched virtual circuit (SVC). The DLCI setups a frame-relay PVC to form a L2 point-to-point connection. This is used for peering different LT IFL pairs.</p> <p>To configure a DLCI for a point-to-multipoint interface, use the multipoint-destination statement to specify the DLCI.</p>
Options	<i>dlci-identifier</i> —Data-link connection identifier. Range: 16 through 1022.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Data-Link Connection Identifiers on Channelized Interfaces• Configuring Frame Relay DLCIs• Junos OS Services Interfaces Library for Routing Devices• encapsulation (Logical Interface) on page 592• multicast-dlci on page 821• multipoint-destination on page 826

do-not-fragment

Syntax	do-not-fragment;
Hierarchy Level	[edit interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i> tunnel], [edit logical-systems <i>logical-system-name</i> interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i> tunnel]
Release Information	Statement introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 15.1X53-D10 for QFX10000 switches.
Description	For a generic routing encapsulation (GRE) tunnel, disable fragmentation of GRE-encapsulated packets. This sets the do-not-fragment (DF) bit in the outer IP header of the GRE-encapsulated packets so that they do not get fragmented anywhere in the path. When the size of a GRE-encapsulated packet is greater than the MTU of a link that the packet passes through, the GRE-encapsulated packet is dropped.
Default	By default, fragmentation of GRE-encapsulated packets is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • allow-fragmentation on page 448 • <i>reassemble-packets</i> • <i>Enabling Fragmentation and Reassembly on Packets After GRE-Encapsulation</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

domain-name

Syntax	<code>domain-name <i>domain-name-string</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure vlan-ranges authentication username-include], [edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges authentication username-include]
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Specify the domain name that is concatenated with the username during the subscriber authentication process.
Options	<i>domain-name-string</i> —The domain name formatted string.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring VLAN Interface Username Information for AAA Authentication</i>

dot1x

Syntax

```
dot1x {
  authenticator {
    authentication-profile-name access-profile-name;
    interface interface-id {
      maximum-requests integer;
      quiet-period seconds;
      reauthentication (disable | interval seconds);
      retries integer;
      server-timeout seconds;
      supplicant (single);
      supplicant-timeout seconds;
      transmit-period seconds;
    }
  }
}
```

Hierarchy Level [edit protocols]

Release Information Statement introduced in Junos OS Release 9.3.

Description For the MX Series only, specifies settings for using 802.1x Port-Based Network Access Control.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *IEEE 802.1x Port-Based Network Access Control Overview*
- [authenticator on page 460](#)
- [authentication-profile-name on page 459](#)
- [interface \(IEEE 802.1x\) on page 706](#)

down-count

Syntax	<code>down-count <i>cells</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> oam-liveness]</code> , <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> oam-liveness]</code> , <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i> oam-liveness]</code> , <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> oam-liveness]</code> , <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i> oam-liveness]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM encapsulation only, configure Operation, Administration, and Maintenance (OAM) F5 loopback cell count thresholds. This feature is not supported on ATM-over-SHDSL interfaces.</p> <p>For ATM2 IQ PICs only, configure OAM F4 loopback cell count thresholds at the <code>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>]</code> hierarchy level.</p>
Options	<p>cells—Minimum number of consecutive OAM F4 or F5 loopback cells lost before a VC is declared down.</p> <p>Range: 1 through 255</p> <p>Default: 5 cells</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the ATM OAM F5 Loopback Cell Threshold</i>

drop (PPPoE Service Name Tables)

Syntax	<code>drop;</code>
Hierarchy Level	<code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i>],</code> <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> agent-specifier</code> <code>aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code>
Release Information	Statement introduced in Junos OS Release 10.0. Support at <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> agent-specifier aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code> hierarchy level introduced in Junos OS Release 10.2.
Description	Direct the router to drop (ignore) a PPPoE Active Discovery Initiation (PADI) control packet received from a PPPoE client that contains the specified service name tag or agent circuit identifier/agent remote identifier (ACI/ARI) information. This action effectively denies the client's request to provide the specified service, or to accept requests from the subscriber or subscribers represented by the ACI/ARI information.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring PPPoE Service Name Tables</i>

drop-timeout

Syntax	<code>drop-timeout <i>milliseconds</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services, multilink, and voice services interfaces only, configure the drop timeout period, in milliseconds.
Options	<i>milliseconds</i> —Drop timeout period. Range: 0 through 2000 milliseconds Default: 0 ms (disabled)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

ds0-options

Syntax	<pre>ds0-options { bert-algorithm <i>algorithm</i>; bert-error-rate <i>rate</i>; bert-period <i>seconds</i>; byte-encoding (nx56 nx64); fcs (16 32); idle-cycle-flag (flags ones); invert-data; loopback <i>payload</i>; start-end-flag (filler shared); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure DS0-specific physical interface properties.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Channelized DS3-to-DS0 Interfaces</i>

dsl-options

Syntax	<pre>dsl-options { loopback local; operating-mode mode; }</pre>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For J Series Services Routers only, modify the properties of the digital subscriber line for an ATM interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>ATM-over-ADSL Overview</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

dsr

Syntax	<code>dsr (ignore normal require);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, data-set-ready (DSR).
Options	<p>ignore—The from-DCE signal is ignored.</p> <p>normal—Normal DSR signal handling as defined by the TIA/EIA Standard 530.</p> <p>require—The from-DCE signal must be asserted.</p> <p>Default: normal</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Signal Handling on page 352

dsr-polarity

Syntax	<code>dsr-polarity (negative positive);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> serial-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure DSR signal polarity.
Options	<p>positive—Positive signal polarity.</p> <p>negative—Negative signal polarity.</p> <p>Default: positive</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Serial Signal Polarities on page 355

dte-options

Syntax	<pre> dte-options { control-signal (assert de-assert normal); cts (ignore normal require); dcd (ignore normal require); dsr (ignore normal require); dtr signal-handling-option; ignore-all; indication (ignore normal require); rts (assert de-assert normal); tm (ignore normal require); } </pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced in Junos OS Release 8.3. Statement previously known as control-leads .
Description	For M Series and T Series routers, configure the serial interface signal characteristics. The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring the Serial Signal Handling on page 352

dtr

Syntax	<code>dtr <i>signal-handling-option</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the to-DCE signal, data-transmit-ready (DTR).
Options	<p><i>signal-handling-option</i>—Signal handling for the DTR signal. The signal handling can be one of the following:</p> <p>assert—The to-DCE signal must be asserted.</p> <p>auto-synchronize—Normal DTR signal with automatic synchronization. This statement has two substatements:</p> <p>duration <i>milliseconds</i>—Pulse duration of resynchronization. Range: 1 through 1000 milliseconds Default: 1000 milliseconds</p> <p>interval <i>seconds</i>—Offset interval for resynchronization. Range: 1 through 31 seconds Default: 15 seconds</p> <p>de-assert—The to-DCE signal must be deasserted.</p> <p>normal—Normal DTR signal handling as defined by the TIA/EIA Standard 530. Default: normal</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Signal Handling on page 352

dtr-circuit

Syntax	<code>dtr-circuit (balanced unbalanced);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> serial-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure a DTR circuit.
Options	<p>balanced—Balanced DTR signal.</p> <p>unbalanced—Unbalanced DTR signal.</p> <p>Default: balanced</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring the Serial DTR Circuit on page 355

dtr-polarity

Syntax	<code>dtr-polarity (negative positive);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> serial-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure DTR signal polarity.
Options	<p>positive—Positive signal polarity.</p> <p>negative—Negative signal polarity.</p> <p>Default: positive</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Serial Signal Polarities on page 355

dump-on-flow-control

Syntax	dump-on-flow-control;
Hierarchy Level	[edit interfaces <i>interface-name</i> multiservice-options]
Release Information	Statement introduced in Junos OS Release 9.5.
Description	This option supports high availability functionality and can be used with various service interfaces, including rsp , rms , lsq , and rlsq .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Multiservice Physical Interface Properties on page 171• <i>Junos OS Services Interfaces Library for Routing Devices</i>• passive-monitor-mode on page 894

dynamic-call-admission-control

Syntax	<pre>dynamic-call-admission-control { activation-priority <i>priority</i>; bearer-bandwidth-limit <i>kilobits-per-second</i>; }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</pre>
Release Information	Statement introduced in Junos OS Release 8.2.
Description	<p>(J4350 and J6350 Services Routers supporting voice over IP with the TGM550 media gateway module) For Fast Ethernet and Gigabit Ethernet interfaces, ISDN BRI interfaces, and serial interfaces with PPP or Frame Relay encapsulation, configure dynamic call admission control (CAC). Dynamic CAC provides enhanced control over WAN bandwidth. When dynamic CAC is configured on an interface responsible for providing call bandwidth, the TGM550 informs the Media Gateway Controller (MGC) of the bandwidth limit available for voice packets on the interface and requests the MGC to block new calls when the bandwidth is exhausted.</p> <p>Dynamic CAC must be configured on each Services Router interface responsible for providing call bandwidth.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Dynamic Call Admission Control</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

dynamic-profile (PPP)

Syntax	<code>dynamic-profile <i>profile-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]</code>
Release Information	Statement introduced in Junos OS Release 9.5. Support for MLPPP on LSQ interfaces introduced in Junos OS Release 10.2.
Description	Specify the dynamic profile that is attached to the interface. On the MX Series routers, this statement is supported on PPPoE interfaces only.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Dynamic Profiles Overview</i>• <i>Configuring a Basic Dynamic Profile</i>• <i>Attaching Dynamic Profiles to Static PPP Subscriber Interfaces</i>• <i>Attaching Dynamic Profiles to MLPPP Bundles</i>• For hardware requirements, see <i>Hardware Requirements for PPP Subscriber Services on Non-Ethernet Interfaces</i>

dynamic-profile (PPPoE Service Name Tables)

Syntax	<code>dynamic-profile <i>profile-name</i>;</code>
Hierarchy Level	<code>[edit protocols pppoe service-name-tables <i>table-name</i> <i>service</i> <i>service-name</i>],</code> <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> <i>agent-specifier</i></code> <code>aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code>
Release Information	Statement introduced in Junos OS Release 10.2.
Description	<p>Specify a dynamic profile to instantiate a dynamic PPPoE interface. You can associate a dynamic profile with a named service entry, empty service entry, or any service entry configured in a PPPoE service name table, or with an agent circuit identifier/agent remote identifier (ACI/ARI) pair defined for these services.</p> <p>The dynamic profile associated with a service entry in a PPPoE service name table overrides the dynamic profile associated with the PPPoE underlying interface on which the dynamic PPPoE interface is created.</p> <p>If you include the dynamic-profile statement at the <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> <i>agent-specifier</i> aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code> hierarchy level, you cannot also include the static-interface statement at this level. The dynamic-profile and static-interface statements are mutually exclusive for ACI/ARI pair configurations.</p>
Options	<i>profile-name</i> —Name of the dynamic profile that the router uses to instantiate a dynamic PPPoE interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring PPPoE Service Name Tables</i> <i>Assigning a Dynamic Profile and Routing Instance to a Service Name or ACI/ARI Pair for Dynamic PPPoE Interface Creation</i>

dynamic-profile (Stacked VLAN)

Syntax	<pre>dynamic-profile <i>profile-name</i> { accept (any dhcp-v4 dhcp-v6 inet inet6 pppoe); access-profile <i>vlan-dynamic-profile-name</i>; ranges (any <i>low-tag-high-tag</i>), (any <i>low-tag-high-tag</i>); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges]
Release Information	Statement introduced in Junos OS Release 9.5.
Description	Configure a dynamic profile for use when configuring dynamic stacked VLANs.
Options	<p>profile-name—Name of the dynamic profile that you want to use when configuring dynamic stacked VLANs.</p> <p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Dynamic Profiles Overview</i>• <i>Configuring a Basic Dynamic Profile</i>• <i>Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs</i>

dynamic-profile (VLAN)

Syntax	<pre>dynamic-profile <i>profile-name</i> { accept (any dhcp-v4 dhcp-v6 inet inet6 pppoe); accept-out-of-band <i>protocol</i>; access-profile <i>vlan-dynamic-profile-name</i>; ranges (any <i>low-tag</i>)—(any <i>high-tag</i>); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure <i>vlan-ranges</i>]
Release Information	Statement introduced in Junos OS Release 9.5.
Description	Configure a dynamic profile for use when configuring dynamic VLANs.
Options	<p><i>profile-name</i>—Name of the dynamic profile that you want to use when configuring dynamic VLANs.</p> <p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Dynamic Profiles Overview</i> • <i>Configuring a Basic Dynamic Profile</i> • <i>Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs</i>

dynamic-profiles

```

Syntax  dynamic-profiles {
        profile-name {
            class-of-service {
                interfaces {
                    interface-name ;
                }
                unit logical-unit-number {
                    classifiers {
                        type (classifier-name | default);
                    }
                    output-traffic-control-profile (profile-name | $junos-cos-traffic-control-profile);
                    report-ingress-shaping-rate bps;
                    rewrite-rules {
                        dscp (rewrite-name | default);
                        dscp-ipv6 (rewrite-name | default);
                        ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
                        inet-precedence (rewrite-name | default);
                    }
                }
            }
        }
        scheduler-maps {
            map-name {
                forwarding-class class-name scheduler scheduler-name;
            }
        }
        schedulers {
            (scheduler-name) {
                buffer-size (seconds | percent percentage | remainder | temporal microseconds);
                drop-profile-map loss-priority (any | low | medium-low | medium-high | high)
                    protocol (any | non-tcp | tcp) drop-profile profile-name;
                excess-priority (low | high | $junos-cos-scheduler-excess-priority);
                excess-rate (percent percentage | percent $junos-cos-scheduler-excess-rate);
                overhead-accounting (shaping-mode) <bytes (byte-value)>;
                priority priority-level;
                shaping-rate (rate | predefined-variable);
                transmit-rate (percent percentage | rate | remainder) <exact | rate-limit>;
            }
        }
        traffic-control-profiles profile-name {
            delay-buffer-rate (percent percentage | rate | $junos-cos-delay-buffer-rate);
            excess-rate (percent percentage | proportion value | percent $junos-cos-excess-rate);
            guaranteed-rate (percent percentage | rate | $junos-cos-guaranteed-rate);
            overhead-accounting (shaping-mode) <bytes (byte-value)>;
            scheduler-map map-name;
            shaping-rate (rate | predefined-variable);
        }
    }
    firewall {
        family family {
            fast-update-filter filter-name {

```

```

interface-specific;
match-order [match-order];
term term-name {
    from {
        match-conditions;
    }
    then {
        action;
        action-modifiers;
    }
    only-at-create;
}
}
filter filter-name {
    enhanced-mode-override;
    fast-lookup-filter;
    instance-shared;
    interface-shared;
interface-specific;
    term term-name {
        from {
            match-conditions;
        }
        then {
            action;
            action-modifiers;
        }
        only-at-create;
    }
}
filter filter-name {
interface-specific;
    term term-name {
        from {
            match-conditions;
        }
        then {
            action;
            action-modifiers;
        }
    }
}
}
hierarchical-policer uid {
    aggregate {
        if-exceeding {
            bandwidth-limit-limit bps;
            burst-size-limit bytes;
        }
        then {
            policer-action;
        }
    }
}
premium {
    if-exceeding {
        bandwidth-limit bps;
        burst-size-limit bytes;
    }
    then {

```

```

        policer-action;
    }
}
}
policer uid {
    filter-specific;
    if-exceeding {
        (bandwidth-limit bps | bandwidth-percent percentage);
        burst-size-limit bytes;
    }
    logical-bandwidth-policer;
    logical-interface-policer;
    physical-interface-policer;
    then {
        policer-action;
    }
}
three-color-policer uid {
    action {
        loss-priority high then discard;
    }
    logical-interface-policer;
    single-rate {
        (color-aware | color-blind);
        committed-burst-size bytes;
        committed-information-rate bps;
        excess-burst-size bytes;
    }
    two-rate {
        (color-aware | color-blind);
        committed-burst-size bytes;
        committed-information-rate bps;
        peak-burst-size bytes;
        peak-information-rate bps;
    }
}
}
}
interfaces interface-name {
    interface-set interface-set-name {
        interface interface-name {
            unit logical unit number {
                advisory-options {
                    downstream-rate rate;
                    upstream-rate rate;
                }
            }
        }
    }
}
unit logical-unit-number {
    actual-transit-statistics;
    auto-configure {
        agent-circuit-identifier {
            dynamic-profile profile-name;
        }
    }
}

```



```

line-identity {
  include {
    accept-no-ids;
    circuit-id;
    remote-id;
  }
  dynamic-profile profile-name;
}
}
encapsulation (atm-ccc-cell-relay | atm-ccc-vc-mux | atm-cisco-nlpid |
atm-tcc-vc-mux | atm-mlppp-llc | atm-nlpid | atm-ppp-llc | atm-ppp-vc-mux |
atm-snap | atm-tcc-snap | atm-vc-mux | ether-over-atm-llc |
ether-vpls-over-atm-llc | ether-vpls-over-fr | ether-vpls-over-ppp | ethernet |
frame-relay-ccc | frame-relay-ppp | frame-relay-tcc | frame-relay-ether-type |
frame-relay-ether-type-tcc | multilink-frame-relay-end-to-end | multilink-ppp |
ppp-over-ether | ppp-over-ether-over-atm-llc | vlan-bridge | vlan-ccc | vlan-vci-ccc
| vlan-tcc | vlan-vpls);
family family {
  address address;
  filter {
    adf {
      counter;
      input-precedence precedence;
      not-mandatory;
      output-precedence precedence;
      rule rule-value;
    }
    input filter-name (
      precedence precedence;
      shared-name filter-shared-name;
    )
    output filter-name {
      precedence precedence;
      shared-name filter-shared-name;
    }
  }
}
rpf-check {
  fail-filter filter-name;
  mode loose;
}
service {
  input {
    service-set service-set-name {
      service-filter filter-name;
    }
    post-service-filter filter-name;
  }
  input-vlan-map {
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    (push | swap);
    tag-protocol-id tpid;
    vlan-id number;
  }
  output {

```

```

        service-set service-set-name {
            service-filter filter-name;
        }
    }
    output-vlan-map {
        inner-tag-protocol-id tpid;
        inner-vlan-id number;
        (pop | swap);
        tag-protocol-id tpid;
        vlan-id number;
    }
    pcef pcef-profile-name {
        activate rule-name | activate-all;
    }
}
unnumbered-address interface-name <preferred-source-address address>;
}
filter {
    input filter-name (
        shared-name filter-shared-name;
    )
    output filter-name {
        shared-name filter-shared-name;
    }
}
host-prefix-only;
ppp-options {
    aaa-options aaa-options-name;
    authentication [ authentication-protocols ];
    chap {
        challenge-length minimum minimum-length maximum maximum-length;
        local-name name;
    }
    ignore-magic-number-mismatch;
    initiate-ncp (dual-stack-passive | ipv6 | ip)
    ipcp-suggest-dns-option;
    mru size;
    mtu (size | use-lower-layer);
    on-demand-ip-address;
    pap;
    peer-ip-address-optional;
    local-authentication {
        password password;
        username-include {
            circuit-id;
            delimiter character;
            domain-name name;
            mac-address;
            remote-id;
        }
    }
}
targeted-options {
    backup backup;
    group group;
}

```

```

    primary primary;
    weight ($junos-interface-target-weight | weight-value);
}
telemetry {
  subscriber-statistics;
  queue-statistics {
    interface $junos-interface-name {
      refresh rate;
      queues queue set;
    }
    interface-set $junos-interface-set-name {
      refresh rate;
      queues queue set;
    }
  }
}
vlan-id number;
vlan-tags outer [tpid].vlan-id [inner [tpid].vlan-id];
}
}
interfaces {
  demux0 {...}
}
interfaces {
  pp0 {...}
}
}
policy-options {
  prefix-list uid {
    ip-addresses;
    dynamic-db;
  }
}
}
predefined-variable-defaults predefined-variable <variable-option> default-value;
profile-type remote-device-service;
protocols {
  igmp {
    interface interface-name {
      accounting;
      disable;
      group-limit limit;
      group-policy;
      group-threshold value;
      immediate-leave;
      log-interval seconds;
      no-accounting;
      oif-map;
      passive;
      promiscuous-mode;
      ssm-map ssm-map-name;
      ssm-map-policy ssm-map-policy-name
      static {
        group group {
          source source;
        }
      }
    }
  }
}

```

```

        version version;
    }
}
mld {
    interface interface-name {
        (accounting | no-accounting);
        disable;
        group-limit limit;
        group-policy;
        group-threshold value;
        immediate-leave;
        log-interval seconds;
        oif-map;
        passive;
        ssm-map ssm-map-name;
        ssm-map-policy ssm-map-policy-name;
        static {
            group multicast-group-address {
                exclude;
                group-count number;
                group-increment increment;
                source ip-address {
                    source-count number;
                    source-increment increment;
                }
            }
        }
    }
    version version;
}
}
router-advertisement {
    interface interface-name {
        current-hop-limit number;
        default-lifetime seconds;
        (managed-configuration | no-managed-configuration);
        max-advertisement-interval seconds;
        min-advertisement-interval seconds;
        (other-stateful-configuration | no-other-stateful-configuration);
        prefix prefix;
        reachable-time milliseconds;
        retransmit-timer milliseconds;
    }
}
}
routing-instances routing-instance-name {
    interface interface-name;
    routing-options {
        access {
            route prefix {
                next-hop next-hop;
                metric route-cost;
                preference route-distance;
                tag route-tag;
                tag2 route-tag2;
            }
        }
    }
}

```

```

    }
    access-internal {
        route subscriber-ip-address {
            qualified-next-hop underlying-interface {
                mac-address address;
            }
        }
    }
    multicast {
        interface interface-name {
            no-qos-adjust;
        }
    }
}
rib routing-table-name {
    access {
        route prefix {
            next-hop next-hop;
            metric route-cost;
            preference route-distance;
            tag route-tag;
            tag2 route-tag2;
        }
    }
    access-internal {
        route subscriber-ip-address {
            qualified-next-hop underlying-interface {
                mac-address address;
            }
        }
    }
}
}
routing-options {
    access {
        route prefix {
            next-hop next-hop;
            metric route-cost;
            preference route-distance;
            tag route-tag;
            tag2 route-tag2;
        }
    }
    access-internal {
        route subscriber-ip-address {
            qualified-next-hop underlying-interface {
                mac-address address;
            }
        }
    }
    multicast {
        interface interface-name {
            no-qos-adjust;
        }
    }
}

```

```

}
services {
  captive-portal-content-delivery {
    rule name {
      match-direction (input | input-output | output);
      term name {
        from {
          applications application-name {
            application-protocol type;
            destination-port port-type;
            protocol ip-protocol-type;
            source-port port-type;
          }
          destination-address name <except>;
          destination-address-range low minimum-value high maximum-value <except>;
          destination-prefix-list name <except>;
        }
        then {
          accept;
          redirect url;
          rewrite destination-address address <destination-port port-number>;
          syslog;
        }
      }
    }
  }
}
variables {
  variable-name {
    default-value default-value;
    equals expression;
    mandatory;
    uid;
    uid-reference;
  }
}
}

```

Hierarchy Level [\[edit\]](#)

Release Information Statement introduced in Junos OS Release 9.2.
Support at the **filter**, **policer**, **hierarchical-policer**, **three-color-policer**, and **policy options** hierarchy levels introduced in Junos OS Release 11.4.

Description Create dynamic profiles for use with DHCP or PPP client access.

Options *profile-name*—Name of the dynamic profile; string of up to 80 alphanumeric characters.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Documentation

- *Configuring a Basic Dynamic Profile*
- *Configuring Dynamic VLANs Based on Agent Circuit Identifier Information*
- *Dynamic Profiles Overview*

e1-options

Syntax

```
e1-options {
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
  fcs (16 | 32);
  framing (g704 | g704-no-crc4 | unframed);
  idle-cycle-flag (flags | ones);
  invert-data;
  loopback (local | remote);
  start-end-flag (filler | shared);
  timeslots time-slot-range;
}
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

Description Configure E1-specific physical interface properties.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Channelized E1 IQ and IQE Interfaces Overview*
- *Channelized STM1 Interfaces Overview*
- *E1 Interfaces Overview*
- *T1 Interfaces Overview*

e3-options

Syntax

```
e3-options {
  atm-encapsulation (direct | plcp);
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
  buildout feet;
  compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
  fcs (16 | 32);
  framing (g.751 | g.832);
  idle-cycle-flag value;
  invert-data;
  loopback (local | remote);
  (payload-scrambler | no-payload-scrambler);
  start-end-flag value;
  (unframed | no-unframed);
}
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure E3-specific physical interface properties.

For ATM1 interfaces, you can configure a subset of E3 options statements.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [E3 Interfaces Overview](#)
- [T3 Interfaces Overview](#)
- [atm-options on page 456](#)

east-interface

Syntax

```
east-interface {
  node-id mac-address;
  control-channel channel-name {
    vlan number;
    interface name interface-name
  }
  interface-none
  ring-protection-link-end;
}
```

Hierarchy Level [edit protocols [protection-group ethernet-ring ring-name](#)]

Release Information Statement introduced in Junos OS Release 9.4.
Statement introduced in Junos OS Release 12.1 for EX Series switches.
Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.

Description Define one of the two interface ports for Ethernet ring protection, the other being defined by the **west-interface** statement at the same hierarchy level. The interface must use the control channel's logical interface name. The control channel is a dedicated VLAN channel for the ring port.

EX Series switches do not use the node-id statement--the node ID is automatically configured on the switches using the MAC address.



NOTE: Always configure this port first, before configuring the **west-interface** statement.



NOTE: The Node ID is not configurable on EX Series switches. The node ID is automatically configured using the MAC address.

The remaining statements are explained separately. See [CLI Explorer](#).


Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Ethernet Ring Protection Switching Overview](#)
- [Ethernet Ring Protection Using Ring Instances for Load Balancing](#)
- [west-interface on page 1162](#)

- [ethernet-ring on page 615](#)
- *Example: Configuring Ethernet Ring Protection Switching on EX Series Switches*
- *Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS*
- *Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)*

egress-policer-overhead

Syntax	<code>egress-policer-overhead bytes;</code>
Hierarchy Level	<code>[edit chassis fpc slot-number pic pic-number]</code>
Release Information	Statement introduced before Junos OS Release 11.1.
Description	<p>Add the specified number of bytes to the actual length of an Ethernet frame when determining the actions of Layer 2 policers, MAC policers, or queue rate limits applied to output traffic on the line card. You can configure egress policer overhead to account for egress <i>shaping</i> overhead bytes added to output traffic on the line card.</p> <p>On M Series and T Series routers, this statement is supported on Gigabit Ethernet Intelligent Queuing 2 (IQ2) PICs and Enhanced IQ2 (IQ2E) PICs. On MX Series routers, this statement is supported for interfaces configured on Dense Port Concentrators (DPCs).</p>
	<p> NOTE: This statement is not supported on Modular Interface Cards (MICs) or Modular Port Concentrators (MPCs) in MX Series routers.</p>
Options	<p>bytes—Number of bytes added to a packet exiting an interface.</p> <p>Range: 0–255 bytes</p> <p>Default: 0</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>egress-shaping-overhead</i> • <i>Policer Overhead to Account for Rate Shaping Overview</i> • <i>Example: Configuring Policer Overhead to Account for Rate Shaping</i> • <i>Configuring a Policer Overhead</i> • <i>CoS on Enhanced IQ2 PICs Overview</i>

encapsulation (Container Interface)

Syntax	<code>encapsulation (cisco-hdlc ppp);</code>
Hierarchy Level	<code>[edit interfaces cin]</code>
Release Information	Statement introduced in Junos OS Release 9.2.
Description	Container link-layer encapsulation type.
Options	cisco-hdlc —Use Cisco-compatible High-Level Data Link Control (HDLC) framing. ppp —Use serial PPP encapsulation.
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i>• <i>Configuring Container Interfaces for APS on SONET Links</i>

encapsulation (Logical Interface)

Syntax	<pre>encapsulation (atm-ccc-cell-relay atm-ccc-vc-mux atm-cisco-nlpid atm-mlppp-llc atm-nlpid atm-ppp-llc atm-ppp-vc-mux atm-snap atm-tcc-snap atm-tcc-vc-mux atm-vc-mux ether-over-atm-llc ether-vpls-over-atm-llc ether-vpls-over-fr ether-vpls-over-ppp ethernet ethernet-ccc ethernet-vpls ethernet-vpls-fr frame-relay-ccc frame-relay-ether-type frame-relay-ether-type-tcc frame-relay-ppp frame-relay-tcc gre-fragmentation multilink-frame-relay-end-to-end multilink-ppp ppp-over-ether ppp-over-ether-over-atm-llc vlan-bridge vlan-ccc vlan-vci-ccc vlan-tcc vlan-vpls vxlan);</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces rlsq <i>number</i> unit <i>logical-unit-number</i>] [edit protocols evpn]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers (ethernet, vlan-ccc, and vlan-tcc options only).</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers. Only the atm-ccc-cell-relay and atm-ccc-vc-mux options are supported on ACX Series routers.</p> <p>Statement introduced in Junos OS Release 17.3R1 for QFX10000 Series switches (ethernet-ccc and vlan-ccc options only).</p>
Description	Configure a logical link-layer encapsulation type. Not all encapsulation types are supported on the switches. See the switch CLI.
Options	<p>atm-ccc-cell-relay—Use ATM cell-relay encapsulation.</p> <p>atm-ccc-vc-mux—Use ATM virtual circuit (VC) multiplex encapsulation on CCC circuits. When you use this encapsulation type, you can configure the ccc family only.</p> <p>atm-cisco-nlpid—Use Cisco ATM network layer protocol identifier (NLPID) encapsulation. When you use this encapsulation type, you can configure the inet family only.</p> <p>atm-mlppp-llc—For ATM2 IQ interfaces only, use Multilink Point-to-Point (MLPPP) over AAL5 LLC. For this encapsulation type, your router must be equipped with a Link Services or Voice Services PIC. MLPPP over ATM encapsulation is not supported on ATM2 IQ OC48 interfaces.</p> <p>atm-nlpid—Use ATM NLPID encapsulation. When you use this encapsulation type, you can configure the inet family only.</p> <p>atm-ppp-llc—(ATM2 IQ interfaces and MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP only) Use PPP over AAL5 LLC encapsulation.</p>

atm-ppp-vc-mux—(ATM2 IQ interfaces and MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP only) Use PPP over ATM AAL5 multiplex encapsulation.

atm-snap—(All interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) Use ATM subnetwork attachment point (SNAP) encapsulation.

atm-tcc-snap—Use ATM SNAP encapsulation on translational cross-connect (TCC) circuits.

atm-tcc-vc-mux—Use ATM VC multiplex encapsulation on TCC circuits. When you use this encapsulation type, you can configure the **tcc** family only.

atm-vc-mux—(All interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) Use ATM VC multiplex encapsulation. When you use this encapsulation type, you can configure the **inet** family only.

ether-over-atm-llc—(All IP interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) For interfaces that carry IP traffic, use Ethernet over ATM LLC encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces.

ether-vpls-over-atm-llc—For ATM2 IQ interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.

ether-vpls-over-fr—For E1, T1, E3, T3, and SONET interfaces only, use the Ethernet virtual private LAN service (VPLS) over Frame Relay encapsulation to support Bridged Ethernet over Frame Relay encapsulated TDM interfaces for VPLS applications, per RFC 2427, *Multiprotocol Interconnect over Frame Relay*.



NOTE: The SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, and the DS3/E3 MIC do not support Ethernet over Frame Relay encapsulation.

ether-vpls-over-ppp—For E1, T1, E3, T3, and SONET interfaces only, use the Ethernet virtual private LAN service (VPLS) over Point-to-Point Protocol (PPP) encapsulation to support Bridged Ethernet over PPP-encapsulated TDM interfaces for VPLS applications.

ethernet—Use Ethernet II encapsulation (as described in RFC 894, *A Standard for the Transmission of IP Datagrams over Ethernet Networks*).

ethernet-ccc—Use Ethernet CCC encapsulation on Ethernet interfaces.

ethernet-vpls—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard Tag Protocol ID (TPID) values.



NOTE: The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

ethernet-vpls-fr—Use in a VPLS setup when a CE device is connected to a PE router over a time-division multiplexing (TDM) link. This encapsulation type enables the PE router to terminate the outer layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.

frame-relay-ccc—Use Frame Relay encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

frame-relay-ether-type—Use Frame Relay ether type encapsulation for compatibility with Cisco Frame Relay. The physical interface must be configured with flexible-frame-relay encapsulation.

frame-relay-ether-type-tcc—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media. The physical interface must be configured with flexible-frame-relay encapsulation.

frame-relay-ppp—Use PPP over Frame Relay circuits. When you use this encapsulation type, you can configure the **ppp** family only.

frame-relay-tcc—Use Frame Relay encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.

gre-fragmentation—For adaptive services interfaces only, use GRE fragmentation encapsulation to enable fragmentation of IPv4 packets in GRE tunnels. This encapsulation clears the do not fragment (DF) bit in the packet header. If the packet's size exceeds the tunnel's maximum transmission unit (MTU) value, the packet is fragmented before encapsulation.

multilink-frame-relay-end-to-end—Use MLFR FRF.15 encapsulation. This encapsulation is used only on multilink, link services, and voice services interfaces and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.

multilink-ppp—Use MLPPP encapsulation. This encapsulation is used only on multilink, link services, and voice services interfaces and their constituent T1 or E1 interfaces.

ppp-over-ether—Use PPP over Ethernet encapsulation to configure an underlying Ethernet interface for a dynamic PPPoE logical interface on M120 and M320 routers with Intelligent Queuing 2 (IQ2) PICs, and on MX Series routers with MPCs.

ppp-over-ether-over-atm-llc—(MX Series routers with MPCs using the ATM MIC with SFP only) For underlying ATM interfaces, use PPP over Ethernet over ATM LLC encapsulation. When you use this encapsulation type, you cannot configure the interface address. Instead, configure the interface address on the PPP interface.

vlan-bridge—Use Ethernet VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q tagging, flexible-ethernet-services, and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.

vlan-ccc—Use Ethernet virtual LAN (VLAN) encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

vlan-vci-ccc—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

vlan-tcc—Use Ethernet VLAN encapsulation on TCC circuits. When you use this encapsulation type, you can configure the **tcc** family only.

vlan-vpls—Use Ethernet VLAN encapsulation on VPLS circuits.


vxlan—Use VXLAN data plane encapsulation for EVPN.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Layer 2 Switching Cross-Connects Using CCC*
- *Configuring the Encapsulation for Layer 2 Switching TCCs*
- [Configuring Interface Encapsulation on Logical Interfaces on page 192](#)
- *Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects*
- [Circuit and Translational Cross-Connects Overview on page 279](#)
- *Identifying the Access Concentrator*
- *Configuring ATM Interface Encapsulation*
- *Configuring VLAN and Extended VLAN Encapsulation*
- [Configuring ATM-to-Ethernet Interworking on page 286](#)
- [Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 133](#)
- *Configuring CCC Encapsulation for Layer 2 VPNs*
- *Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits*
- *Configuring ATM for Subscriber Access*
- *Understanding CoS on ATM IMA Pseudowire Interfaces Overview*
- *Configuring Policing on an ATM IMA Pseudowire*

encapsulation

List of Syntax	Syntax for Physical Interfaces: M Series, MX Series, QFX Series, T Series, PTX Series on page 596 Syntax for Logical Interfaces: SRX Series on page 596
Syntax for Physical Interfaces: M Series, MX Series, QFX Series, T Series, PTX Series	<pre>encapsulation (atm-ccc-cell-relay atm-pvc cisco-hdlc cisco-hdlc-ccc cisco-hdlc-tcc ethernet-bridge ethernet-ccc ethernet-over-atm ethernet-tcc ethernet-vpls ethernet-vpls-fr ether-vpls-over-atm-llc ethernet-vpls-ppp extended-frame-relay-ccc extended-frame-relay-ether-type-tcc extended-frame-relay-tcc extended-vlan-bridge extended-vlan-ccc extended-vlan-tcc extended-vlan-vpls flexible-ethernet-services flexible-frame-relay frame-relay frame-relay-ccc frame-relay-ether-type frame-relay-ether-type-tcc frame-relay-port-ccc frame-relay-tcc generic-services multilink-frame-relay-uni-nni ppp ppp-ccc ppp-tcc vlan-ccc vlan-vci-ccc vlan-vpls);</pre>
Syntax for Logical Interfaces: SRX Series	<pre>encapsulation (ether-vpls-ppp ethernet-bridge ethernet-ccc ethernet-tcc ethernet-vpls extended-frame-relay-ccc extended-frame-relay-tcc extended-vlan-bridge extended-vlan-ccc extended-vlan-tcc extended-vlan-vpls frame-relay-port-ccc vlan-ccc vlan-vpls);</pre>
Physical Interfaces: M Series, MX Series, QFX Series, T Series, PTX Series	<pre>[edit interfaces <i>interface-name</i>], [edit interfaces rlsq <i>number:number</i>]</pre>
Logical Interfaces: SRX Series	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.5.</p> <p>Statement introduced in Junos OS Release 11.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers (flexible-ethernet-services, ethernet-ccc, and ethernet-tcc options only).</p>
Description	<p>For M Series, MX Series, QFX Series, T Series, PTX Series, specify the physical link-layer encapsulation type.</p> <p>For SRX Series, specify logical link layer encapsulation.</p>
	<div>  <p>NOTE: Not all encapsulation types are supported on the switches. See the switch CLI.</p> </div>
Default	ppp —Use serial PPP encapsulation.

Physical Interface Options and Logical Interface Options

[Warning: element unresolved in stylesheets: <title> (in <config-options>). This is probably a new element that is not yet supported in the stylesheets.]

Physical Interface Options and Logical Interface Options

For physical interfaces:



NOTE: Frame Relay, ATM, PPP, SONET, and SATSOP options are not supported on EX Series switches.

- **atm-ccc-cell-relay**—Use ATM cell-relay encapsulation.
- **atm-pvc**—Defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*. When you configure physical ATM interfaces with ATM PVC encapsulation, an RFC 2684-compliant ATM Adaptation Layer 5 (AAL5) tunnel is set up to route the ATM cells over a Multiprotocol Label Switching (MPLS) path that is typically established between two MPLS-capable routers using the Label Distribution Protocol (LDP).
- **cisco-hdlc**—Use Cisco-compatible High-Level Data Link Control (HDLC) framing. E1, E3, SONET/SDH, T1, and T3 interfaces can use Cisco HDLC encapsulation. Two related versions are supported:
 - CCC version (**cisco-hdlc-ccc**)—The logical interface does not require an encapsulation statement. When you use this encapsulation type, you can configure the **ccc** family only.
 - TCC version (**cisco-hdlc-tcc**)—Similar to CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.
- **cisco-hdlc-ccc**—Use Cisco-compatible HDLC framing on CCC circuits.
- **cisco-hdlc-tcc**—Use Cisco-compatible HDLC framing on TCC circuits for connecting different media.
- **ethernet-bridge**—Use Ethernet bridge encapsulation on Ethernet interfaces that have bridging enabled and that must accept all packets.
- **ethernet-over-atm**—For interfaces that carry IPv4 traffic, use Ethernet over ATM encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces. As defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*, this encapsulation type allows ATM interfaces to connect to devices that support only bridge protocol data units (BPDUs). Junos OS does not completely support bridging, but accepts BPDU packets as a default gateway. If you use the router as an edge device, then the router acts as a default gateway. It accepts Ethernet LLC/SNAP frames with IP or ARP in the payload, and drops the rest. For packets destined to the Ethernet LAN, a route lookup is done using the destination IP address. If the route lookup yields a full address match, the packet is encapsulated with an LLC/SNAP and MAC header, and the packet is forwarded to the ATM interface.
- **ethernet-tcc**—For interfaces that carry IPv4 traffic, use Ethernet TCC encapsulation on interfaces that must accept packets carrying standard TPID values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC is not supported.

- **ethernet-vpls**—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard TPID values. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.
- **ethernet-vpls-fr**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.
- **ethernet-vpls-ppp**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 PPP connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use it to forward the packet into a given VPLS instance.
- **ether-vpls-over-atm-llc**—For ATM intelligent queuing (IQ) interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.
- **extended-frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to CCC. When you use this encapsulation type, you can configure the **ccc** family only.
- **extended-frame-relay-ether-type-tcc**—Use extended Frame Relay ether type TCC for Cisco-compatible Frame Relay for DLCIs 1 through 1022. This encapsulation type is used for circuits with different media on either side of the connection.
- **extended-frame-relay-tcc**—Use Frame Relay encapsulation on TCC circuits to connect different media. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to TCC.
- **extended-vlan-bridge**—Use extended VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q VLAN tagging and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.
- **extended-vlan-ccc**—Use extended VLAN encapsulation on CCC circuits with Gigabit Ethernet and 4-port Fast Ethernet interfaces that must accept packets carrying 802.1Q values. Extended VLAN CCC encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. When you use this encapsulation type, you can configure the **ccc** family only. For 8-port, 12-port, and 48-port Fast Ethernet PICs, extended VLAN CCC is not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC is not supported.
- **extended-vlan-tcc**—For interfaces that carry IPv4 traffic, use extended VLAN encapsulation on TCC circuits with Gigabit Ethernet interfaces on which you want to use 802.1Q tagging. For 4-port Gigabit Ethernet PICs, extended VLAN TCC is not supported.

- **extended-vlan-vpls**—Use extended VLAN VPLS encapsulation on Ethernet interfaces that have VLAN 802.1Q tagging and VPLS enabled and that must accept packets carrying TPIDs 0x8100, 0x9100, and 0x9901. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.



NOTE: The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

- **flexible-ethernet-services**—For Gigabit Ethernet IQ interfaces and Gigabit Ethernet PICs with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and for Gigabit Ethernet interfaces, use flexible Ethernet services encapsulation when you want to configure multiple per-unit Ethernet encapsulations. Aggregated Ethernet bundles can use this encapsulation type. This encapsulation type allows you to configure any combination of route, TCC, CCC, Layer 2 virtual private networks (VPNs), and VPLS encapsulations on a single physical port. If you configure flexible Ethernet services encapsulation on the physical interface, VLAN IDs from 1 through 511 are no longer reserved for normal VLANs.
- **flexible-frame-relay**—For IQ interfaces only, use flexible Frame Relay encapsulation when you want to configure multiple per-unit Frame Relay encapsulations. This encapsulation type allows you to configure any combination of TCC, CCC, and standard Frame Relay encapsulations on a single physical port. Also, each logical interface can have any DLCI value from 1 through 1022.
- **frame-relay**—Use Frame Relay encapsulation is defined in RFC 1490, *Multiprotocol Interconnect over Frame Relay*. E1, E3, link services, SONET/SDH, T1, T3, and voice services interfaces can use Frame Relay encapsulation.
- **frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. This encapsulation is same as standard Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to CCC. The logical interface must also have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
- **frame-relay-ether-type**—Use Frame Relay ether type encapsulation for compatibility with the Cisco Frame Relay. IETF frame relay encapsulation identifies the payload format using NLPID and SNAP formats. Cisco-compatible Frame Relay encapsulation uses the Ethernet type to identify the type of payload.



NOTE: When the encapsulation type is set to Cisco-compatible Frame Relay encapsulation, ensure that the LMI type is set to ANSI or Q933-A.

- **frame-relay-ether-type-tcc**—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media. This encapsulation is Cisco-compatible Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to TCC.

- **frame-relay-port-ccc**—Use Frame Relay port CCC encapsulation to transparently carry all the DLCIs between two customer edge (CE) routers without explicitly configuring each DLCI on the two provider edge (PE) routers with Frame Relay transport. The connection between the two CE routers can be either user-to-network interface (UNI) or network-to-network interface (NNI); this is completely transparent to the PE routers. When you use this encapsulation type, you can configure the **ccc** family only.
- **frame-relay-tcc**—This encapsulation is similar to Frame Relay CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.
- **generic-services**—Use generic services encapsulation for services with a hierarchical scheduler.
- **multilink-frame-relay-uni-nni**—Use MLFR UNI NNI encapsulation. This encapsulation is used on link services, voice services interfaces functioning as FRF.16 bundles, and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.
-
- **ppp**—Use serial PPP encapsulation. This encapsulation is defined in RFC 1661, *The Point-to-Point Protocol (PPP) for the Transmission of Multiprotocol Datagrams over Point-to-Point Links*. PPP is the default encapsulation type for physical interfaces. E1, E3, SONET/SDH, T1, and T3 interfaces can use PPP encapsulation.
- **ppp-ccc**—Use serial PPP encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.
- **ppp-tcc**—Use serial PPP encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.
- **vlan-ccc**—Use Ethernet VLAN encapsulation on CCC circuits. VLAN CCC encapsulation supports TPID 0x8100 only. When you use this encapsulation type, you can configure the **ccc** family only.

- **vlan-vci-ccc**—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only. All logical interfaces configured on the Ethernet interface must also have the encapsulation type set to **vlan-vci-ccc**.
- **vlan-vpls**—Use VLAN VPLS encapsulation on Ethernet interfaces with VLAN tagging and VPLS enabled. Interfaces with VLAN VPLS encapsulation accept packets carrying standard TPID values only. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.

**NOTE:**

- Label-switched interfaces (LSIs) do not support VLAN VPLS encapsulation. Therefore, you can only use VLAN VPLS encapsulation on a PE-router-to-CE-router interface and not a core-facing interface.
- Starting with Junos OS release 13.3, a commit error occurs when you configure **vlan-vpls** encapsulation on a physical interface and configure **family inet** on one of the logical units. Previously, it was possible to commit this invalid configuration.

For logical interfaces:

- **frame-relay**—Configure a Frame Relay encapsulation when the physical interface has multiple logical units, and the units are either point to point or multipoint.
- **multilink-frame-relay-uni-nni**—Link services interfaces functioning as FRF.16 bundles can use Multilink Frame Relay UNI NNI encapsulation.
- **ppp**—For normal mode (when the device is using only one ISDN B-channel per call). Point-to-Point Protocol is for communication between two computers using a serial interface.
- **ppp-over-ether**—This encapsulation is used for underlying interfaces of pp0 interfaces.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
---------------------------------	---

**Related
Documentation**

- *Understanding Physical Encapsulation on an Interface*
- [Configuring Interface Encapsulation on Physical Interfaces on page 130](#)
- *Configuring CCC Encapsulation for Layer 2 VPNs*
- *Configuring Layer 2 Switching Cross-Connects Using CCC*
- *Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits*
- *Configuring ATM Interface Encapsulation*
- [Configuring ATM-to-Ethernet Interworking on page 286](#)
- *Configuring VLAN and Extended VLAN Encapsulation*
- *Configuring VLAN and Extended VLAN Encapsulation*
- *Configuring Encapsulation for Layer 2 Wholesale VLAN Interfaces*
- *Configuring Interfaces for Layer 2 Circuits*
- [Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 133](#)
- *Configuring MPLS LSP Tunnel Cross-Connects Using CCC*
- *Configuring TCC*
- *Configuring VPLS Interface Encapsulation*
- *Configuring Interfaces for VPLS Routing*
- [Defining the Encapsulation for Switching Cross-Connects on page 281](#)
- *Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)*

encoding

Syntax	encoding (nrz nrzi);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For serial interfaces, set the line encoding format.
Default	The default line encoding is non-return to zero (NRZ).
Options	nrz —Use NRZ line encoding. nrzi —Use non-return to zero inverted (NRZI) line encoding.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Serial Line Encoding on page 358

epd-threshold (Logical Interface)

Syntax	<code>epd-threshold cells plp1 cells;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i></code> <code> multipoint-destination <i>address</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i>]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	<p>For ATM2 IQ interfaces only, define the early packet discard (EPD) threshold on a VC. The EPD threshold is a limit on the number of transmit packets that can be queued. Packets that exceed the limit are discarded. For interfaces configured in trunk mode, you can also configure dual EPD thresholds depending on the packet loss priorities (PLPs).</p>
Default	<p>Approximately 1 percent of the available cell buffers. If shaping is enabled, the default EPD threshold is proportional to the shaping rate according to the following formula:</p> $\text{default epd-threshold} = \text{number of buffers} * \text{shaping rate} / \text{line rate}$ <p>The minimum EPD threshold value is 48 cells. If the default EPD threshold formula results in an EPD threshold of less than 48 cells, the result will be ignored, and the minimum value of 48 cells will be used.</p>
Options	<p>cells—Maximum number of cells.</p> <p>Range: For 1-port and 2-port OC12 interfaces, 48 through 425,984 cells</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring the ATM2 IQ EPD Threshold Configuring Two EPD Thresholds per Queue

epd-threshold (Physical Interface)

Syntax	<code>epd-threshold cells plp1 cells;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the EPD threshold on a VC. The EPD threshold is a limit on the number of transmit packets that can be queued. Packets that exceed the limit are discarded.
Default	If you do not include either the epd-threshold or the linear-red-profile statement in the forwarding class configuration, the Junos OS uses an EPD threshold based on the available bandwidth and other parameters.
Options	<p>cells—Maximum number of cells.</p> <p>Range: For 1-port and 2-port OC12 interfaces, 48 through 425,984 cells. For 1-port OC48 interfaces, 48 through 425,984 cells. For 2-port OC3, DS3, and E3 interfaces, 48 through 212,992 cells. For 4-port DS3 and E3 interfaces, 48 through 106,496 cells.</p> <p>The plp1 statement is explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring an ATM Scheduler Map</i> • linear-red-profile on page 752

es-options

Syntax	<pre>es-options { backup-interface interface-name; }</pre>
Hierarchy Level	[edit interfaces es- <i>fpc/pic/port</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>On ES interfaces, configure ES interface-specific interface properties.</p> <p>The backup-interface statement is explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

ethernet (Protocols OAM)

List of Syntax Syntax: MX, T, ACX Series Routers, SRX Firewalls, M320 and EX Series Switches on page 607
 Syntax: EX Series Switches and NFX Series Devices on page 610

Syntax: MX, T, ACX Series Routers, SRX Firewalls, M320 and EX Series Switches

```
ethernet {
  connectivity-fault-management {
    action-profile profile-name {
      default-actions {
        interface-down;
      }
    }
  }
  performance-monitoring {
    delegate-server-processing;
    hardware-assisted-timestamping;
    hardware-assisted-keepalives;
    sla-iterator-profiles {
      profile-name {
        avg-fd-twoway-threshold;
        avg-ifdv-twoway-threshold;
        avg-flr-forward-threshold;
        avg-flr-backward-threshold;
        disable;
        calculation-weight {
          delay delay-weight;
          delay-variation delay-variation-weight;
        }
        cycle-time milliseconds;
        iteration-period connections;
        measurement-type (loss | statistical-frame-loss | two-way-delay);
      }
    }
  }
  linktrace {
    age (30m | 10m | 1m | 30s | 10s);
    path-database-size path-database-size;
  }
  maintenance-domain domain-name {
    level number;
    name-format (character-string | none | dns | mac+2octet);
    maintenance-association ma-name {
      short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
      protect-maintenance-association protect-ma-name;
      remote-maintenance-association remote-ma-name;
      continuity-check {
        convey-loss-threshold;
        hold-interval minutes;
        interface-status-tlv;
        interval (10m | 10s | 1m | 1s | 100ms);
        loss-threshold number;
        port-status-tlv;
      }
    }
  }
}
```

```
mep mep-id {  
    auto-discovery;  
    direction (up | down);  
    interface interface-name (protect | working);  
    lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |  
        rem-err-xcon | xcon );  
    priority number;  
    remote-mep mep-id {  
        action-profile profile-name;  
        sla-iterator-profile profile-name {  
            data-tlv-size size;  
            iteration-count count-value;  
            priority priority-value;  
        }  
    }  
}  
  
} }  
  
} }  
  
}  
  
}  
  
}  
  
evcs evc-id {  
    evc-protocol cfm management-domain domain-id (management-association  
        association-id | vpls (routing-instance instance-id));  
    remote-uni-count count;  
    multipoint-to-multipoint;  
}  
  
link-fault-management {  
    action-profile profile-name {  
        action {  
            link-down;  
            send-critical-event;  
            syslog;  
        }  
    event {  
        link-adjacency-loss;  
        link-event-rate {  
            frame-error count;  
            frame-period count;  
            frame-period-summary count;  
            symbol-period count;  
        }  
        protocol-down;  
    }  
}  
  
}  
  
Interface interface-name {  
    apply-action-profile;  
    link-discovery (active | passive);  
    loopback-tracking;  
    pdu-interval interval;  
    pdu-threshold threshold-value;  
    remote-loopback;  
    event-thresholds {  
        frame-error count;  
        frame-period count;  
        frame-period-summary count;  
        symbol-period count;
```

```
    }  
    negotiation-options {  
        allow-remote-loopback;  
        no-allow-link-events;  
    }  
}  
lmi {  
    status-counter count;  
    polling-verification-timer value;  
    interface name {  
        uni-id uni-name;  
        status-counter number;  
        polling-verification-timer value;  
        evc-map-type (all-to-one-bundling | bundling | service-multiplexing);  
        evc evc-name {  
            default-evc;  
            vlan-list vlan-id-list;  
        }  
    }  
}  
}
```

**Syntax: EX Series
Switches and NFX
Series Devices**

```

ethernet {
  connectivity-fault-management {
    action-profile profile-name {
      action {
        interface-down;
      }
      default-actions {
        interface-down;
      }
      event {
        adjacency-loss;
      }
    }
  }
  esp-traceoptions {
    file filename <files number> <no-stamp> <replace> <size size> <world-readable |
      no-world-readable>;
    flag (all | error | esp | interface | krt | lib | normal | task | timer);
  }
  linktrace {
    age (30m | 10m | 1m | 30s | 10s);
    path-database-size path-database-size;
  }
  maintenance-domain domain-name {
    level number;
    mip-half-function (none | default | explicit);
    name-format (character-string | none | dns | mac+2oct);
    maintenance-association ma-name {
      continuity-check {
        hold-interval minutes;
        interface-status-tlv;
        interval (10m | 10s | 1m | 1s | 100ms);
        loss-threshold number;
        port-status-tlv;
      }
      mep mep-id {
        auto-discovery;
        direction down;
        interface interface-name;
        priority
      }
      remote-mep mep-id {
        action-profile profile-name;
        sla-iterator-profile profile-name {
          data-tlv-size size;
          iteration-count count-value;
          priority priority-value;
        }
      }
    }
    short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
  }
}
performance-monitoring {
  sla-iterator-profiles {
    profile-name {
      calculation-weight {

```

```

        delay delay-value;
        delay-variation delay-variation-value;
    }
    cycle-time cycle-time-value;
    iteration-period iteration-period-value;
    measurement-type two-way-delay;
    passive;
}
}
}
}
traceoptions {
    file filename <files number> <match regex> <size size> <world-readable |
        no-world-readable>;
    flag flag ;
    no-remote-trace;
}
}
link-fault-management {
    action-profile profile-name;
    action {
        syslog;
        link-down;
    }
    event {
        link-adjacency-loss;
        link-event-rate {
            frame-error count;
            frame-period count;
            frame-period-summary count;
            symbol-period count;
        }
    }
}
interface interface-name {
    link-discovery (active | passive);
    pdu-interval interval;
    pdu-threshold threshold-value;
    remote-loopback;
    event-thresholds {
        frame-error count;
        frame-period count;
        frame-period-summary count;
        symbol-period count;
    }
    negotiation-options {
        allow-remote-loopback;
        no-allow-link-events;
    }
}
traceoptions {
    file filename <files number> <match regex> <size size> <world-readable |
        no-world-readable>;
    flag flag ;
    no-remote-trace;
}
}
}

```

```
}
```

Hierarchy Level [edit protocols [oam](#)]

Release Information Statement introduced in Junos OS Release 8.2 for MX, T, ACX Series routers, SRX firewalls, M320 and EX Series switches.
Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.
connectivity-fault-management introduced in Junos OS Release 10.2 for EX Series switches.

Description Provide IEEE 802.3ah Operation, Administration, and Maintenance (OAM) support for Ethernet interfaces or configure connectivity fault management (CFM) for IEEE 802.1ag Operation, Administration, and Management (OAM) support.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.
routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Documentation

- *Enabling IEEE 802.3ah OAM Support*
- *Example: Configuring Ethernet OAM Link Fault Management*

ethernet-policer-profile

```
Syntax ethernet-policer-profile {
    input-priority-map {
        ieee802.1p premium [ values ];
    }
    output-priority-map {
        classifier {
            premium {
                forwarding-class class-name {
                    loss-priority (high | low);
                }
            }
        }
    }
    policer cos-policer-name {
        aggregate {
            bandwidth-limit bps;
            burst-size-limit bytes;
        }
        premium {
            bandwidth-limit bps;
            burst-size-limit bytes;
        }
    }
}
```

Hierarchy Level [edit interfaces *interface-name* gigether-options [ethernet-switch-profile](#)],
[edit interfaces *interface-name* aggregated-ether-options [ethernet-switch-profile](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description



NOTE: On QFX Series standalone switches, this statement hierarchy is only supported on the Enhanced Layer 2 Switching CLI.

For Gigabit Ethernet IQ, 10-Gigabit Ethernet, Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and 100-Gigabit Ethernet Type 5 PIC with CFP, configure a class of service (CoS)-based policer. Policing applies to the inner VLAN identifiers, not to the outer tag. For Gigabit Ethernet interfaces with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), the **premium** policer is not supported.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation • *Configuring Gigabit Ethernet Policers*

ethernet-ring

Syntax

```
ethernet-ring ring-name {
  control-vlan (vlan-id | vlan-name);
  data-channel {
    vlan number
  }
  east-interface {
    control-channel channel-name {
      vlan number;
      interface name interface-name
    }
  }
  guard-interval number;
  node-id mac-address;
  restore-interval number;
  ring-protection-link-owner;
  west-interface {
    control-channel channel-name {
      vlan number;
    }
  }
}
```

Hierarchy Level [edit protocols [protection-group](#)]

Release Information Statement introduced in Junos OS Release 9.4.
Statement introduced in Junos OS Release 12.1 for EX Series switches.
Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.

Description For Ethernet PICs on MX Series routers or for EX Series switches, , specify the Ethernet ring in an Ethernet ring protection switching configuration.

Options *ring-name*—Name of the Ethernet protection ring.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Ethernet Ring Protection Switching Overview*
- *Example: Configuring Ethernet Ring Protection Switching on EX Series Switches*
- *Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS*
- *Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)*

ethernet-switch-profile

Syntax

```

ethernet-switch-profile {
  ethernet-policer-profile {
    input-priority-map {
      ieee802.1p premium [values];
    }
    output-priority-map {
      classifier {
        premium {
          forwarding-class class-name {
            loss-priority (high | low);
          }
        }
      }
    }
  }
  policer cos-policer-name {
    aggregate {
      bandwidth-limit bps;
      burst-size-limit bytes;
    }
    premium {
      bandwidth-limit bps;
      burst-size-limit bytes;
    }
  }
  storm-control storm-control-profile;
  tag-protocol-id tpid;
}
mac-learn-enable;

```

Hierarchy Level [edit interfaces *interface-name* [gigether-options](#)],
 [edit interfaces *interface-name* [aggregated-ether-options](#)],
 [edit interfaces *interface-name* aggregated-ether-options],
 [edit interfaces *interface-name* ether-options]

Release Information Statement introduced before Junos OS Release 7.4.
 Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
 Statement introduced in Junos OS Release 13.2 for the QFX Series.
 Statement introduced in Junos OS Release 13.2X50-D15 for the EX Series switches.

Description



NOTE: On QFX Series standalone switches, the `ethernet-policer-profile` CLI hierarchy and the `mac-learn-enable` statement are supported only on the Enhanced Layer 2 Switching CLI.

For Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ2 and IQ2-E, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC, aggregated Ethernet with Gigabit Ethernet IQ interfaces, the built-in Gigabit Ethernet port on the M7i router); 100-Gigabit Ethernet Type 5 PIC with CFP; and Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces on EX Series switches, configure VLAN tag and MAC address accounting and filtering properties.

The remaining statements are explained separately. See [CLI Explorer](#).



NOTE: When you gather interfaces into a bridge domain, the `no-mac-learn-enable` statement at the [edit interfaces *interface-name* *gather-options* ethernet-switch-profile] hierarchy level is not supported. You must use the `no-mac-learning` statement at the [edit bridge-domains *bridge-domain-name* bridge-options interface *interface-name*] hierarchy level to disable MAC learning on an interface in a bridge domain. For information on disabling MAC learning for a bridge domain, see the *MX Series Layer 2 Configuration Guide*.

Default	If the <code>ethernet-switch-profile</code> statement is not configured, Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router) behave like Gigabit Ethernet interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Gigabit Ethernet Policers</i> • <i>Configuring MAC Address Filtering</i> • <i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i> • <i>Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support</i>

eui-64

Syntax	eui-64;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>number</i> family inet6 address <i>address</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.3 for EX Series switches. Statement introduced in Junos OS Release 12.2 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For interfaces that carry IP version 6 (IPv6) traffic, automatically generate the host number portion of interface addresses.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Interface Address on page 209

evcs

Syntax	<pre>evcs evc-id { evc-protocol cfm; remote-uni-count count; multipoint-to-multipoint; }</pre>
Hierarchy Level	[edit protocols oam ethernet]
Release Information	Statement introduced in Junos OS Release 9.5.
Description	On MX Series routers with ge , xe , or ae interfaces, configure an OAM Ethernet virtual connection.
Options	<p>remote-uni-count <i>count</i>—(Optional) Specify the number of remote UNIs in the EVC configuration, the default is 1.</p> <p>multipoint-to-multipoint—(Optional) Specify multiple points in the EVC configuration, the default is point-to-point if remote-uni-count is 1.</p> <p>Remaining options are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Ethernet Local Management Interface</i> lmi (Ethernet OAM) on page 767

event (LFM)

List of Syntax Syntax: MX, M, T, ACX Series Routers, SRX Firewalls and EX Series Switches on page 620
 Syntax: EX Series Switches and NFX Series Devices on page 620

Syntax: MX, M, T, ACX Series Routers, SRX Firewalls and EX Series Switches

```
event {
  link-adjacency-loss;
  link-event-rate {
    frame-error count;
    frame-period count;
    frame-period-summary count;
    symbol-period count;
  }
  protocol-down;
}
```

Syntax: EX Series Switches and NFX Series Devices

```
event {
  link-adjacency-loss;
  link-event-rate {
    frame-error count;
    frame-period count;
    frame-period-summary count;
    symbol-period count;
  }
}
```

Hierarchy Level [edit protocols [oam ethernet link-fault-management action-profile](#)]

Release Information Statement introduced in Junos OS Release 8.5 for MX, M, T, ACX Series routers, SRX Series firewalls and EX Series switches.
 Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX devices.

Description Configure link events in an action profile for Ethernet OAM link fault management (LFM).

The remaining statements are explained separately. See [CLI Explorer](#).


Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.
 routing—To view this statement in the configuration.
 routing-control—To add this statement to the configuration.

Related Documentation • *Monitoring Protocol Status*
 • *Configuring Ethernet OAM Link Fault Management*

event-thresholds

Syntax	<pre>event-thresholds { frame-error count; frame-period count; frame-period-summary count; symbol-period count; }</pre>
Hierarchy Level	[edit protocols oam link-fault-management interface interface-name]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	<p>Configure threshold limit values for link events in periodic OAM PDUs.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Threshold Values for Local Fault Events on an Interface</i>

fast-aps-switch

Syntax	<code>fast-aps-switch;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(M320 routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only, EX Series switches, and MX series routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only using container interfaces) Reduce the Automatic Protection Switching (APS) switchover time in Layer 2 circuits.
<div>  NOTE: <ul style="list-style-type: none"> • The fast APS switching feature is supported only within a single chassis on a MX series router using a container interface. • Configuring this statement reduces the APS switchover time only when the Layer 2 circuit encapsulation type for the interface receiving traffic from a Layer 2 circuit neighbor is SAToP. • When the <code>fast-aps-switch</code> statement is configured in revertive APS mode, you must configure an appropriate value for revert time to achieve reduction in APS switchover time. • To prevent the logical interfaces in the data path from being shut down, configure appropriate hold-time values on all the interfaces in the data path that support TDM. • The <code>fast-aps-switch</code> statement cannot be configured when the APS annex-b option is configured. • The interfaces that have the <code>fast-aps-switch</code> statement configured cannot be used in virtual private LAN service (VPLS) environments. </div>	
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Reducing APS Switchover Time in Layer 2 Circuits</i>

f-max-period

Syntax	<code>f-max-period <i>number</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rtp]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For all adaptive services interfaces and for ISDN interfaces on J Series Services Routers. Specify the maximum number of compressed packets allowed between the transmission of full headers in a compressed Real-Time Transport Protocol (RTP) traffic stream.
Options	<i>number</i> —Maximum number of packets. The value can be from 1 through 65535 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Bandwidth on Demand</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

facility-override

Syntax	<code>facility-override <i>facility-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> services-options sysloghost <i>hostname</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Override default facility for system log reporting.
Options	<i>facility-name</i> —Name of facility that overrides the default assignment.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

failover-delay

Syntax	<code>failover-delay <i>milliseconds</i>;</code>
Hierarchy Level	<code>[edit protocols vrrp]</code>
Release Information	Statement introduced in Junos OS Release 9.4.
Description	Configure the failover delay for VRRP and VRRP for IPv6 operations.
Options	<i>milliseconds</i> —Specify the failover delay time, in milliseconds. Range: 50 through 2000
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring VRRP and VRRP for IPv6</i>

family (Dynamic Standard Interface)

```

Syntax  family family {
    access-concentrator name;
    address address;
    direct-connect;
    duplicate-protection;
    dynamic-profile profile-name;
    filter {
        adf {
            counter;
            input-precedence precedence;
            not-mandatory;
            output-precedence precedence;
            rule rule-value;
        }
        input filter-name {
            precedence precedence;
            shared-name filter-shared-name;
        }
        output filter-name {
            precedence precedence;
            shared-name filter-shared-name;
        }
    }
    mac-validate (loose | strict);
    max-sessions number;
    max-sessions-vsa-ignore;
    rpf-check {
        fail-filter filter-name;
        mode loose;
    }
    service {
        input {
            service-set service-set-name {
                service-filter filter-name;
            }
            post-service-filter filter-name;
        }
        output {
            service-set service-set-name {
                service-filter filter-name;
            }
        }
    }
    service-name-table table-name;
    short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
        maximum-seconds> <filter [aci]>;
    unnumbered-address interface-name <preferred-source-address address>;
}

```

Hierarchy Level [edit **dynamic-profiles** *profile-name* **interfaces** *interface-name* **unit** *logical-unit-number*]

Release Information Statement introduced in Junos OS Release 9.2.
pppoe option added in Junos OS Release 11.2.

Description Configure protocol family information for the logical interface.



NOTE: Not all subordinate stanzas are available to every protocol family.

Options *family*—Protocol family:

- **inet**—IP version 4 suite
- **inet6**—IP version 6 suite
- **pppoe**—(MX Series routers with MPCs only) Point-to-Point Protocol over Ethernet
- **vpls**—Virtual private LAN service

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level *interface*—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Example: Configuring Static Routing on Logical Systems*
- [Configuring the Protocol Family on page 208](#)

family

```

Syntax  family family {
        accounting {
            destination-class-usage;
            source-class-usage {
                (input | output | input output);
            }
        }
        access-concentrator name;
        address address {
            ... the address subhierarchy appears after the main [edit interfaces interface-name unit
               logical-unit-number family family-name] hierarchy ...
        }
        bundle interface-name;
        core-facing;
        demux-destination {
            destination-prefix;
        }
        demux-source {
            source-prefix;
        }
        direct-connect;
        duplicate-protection;
        dynamic-profile profile-name;
        filter {
            group filter-group-number;
            input filter-name;
            input-list [ filter-names ];
            output filter-name;
            output-list [ filter-names ];
        }
        interface-mode (access | trunk);
        ipsec-sa sa-name;
        keep-address-and-control;
        mac-validate (loose | strict);
        max-sessions number;
        max-sessions-vs-a-ignore;
        mtu bytes;
        multicast-only;
        nd6-stale-time seconds;
        negotiate-address;
        no-neighbor-learn;
        no-redirects;
        policer {
            arp policer-template-name;
            input policer-template-name;
            output policer-template-name;
        }
        primary;
        protocols [inet iso mpls];
        proxy inet-address address;
        receive-options-packets;

```

```

receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
    fail-filter filter-name
    mode loose;
}
sampling {
    input;
    output;
}
service {
    input {
        post-service-filter filter-name;
        service-set service-set-name <service-filter filter-name>;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
service-name-table table-name;
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
    maximum-seconds> <filter [aci]>;
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name destination address destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    master-only;
    multipoint-destination address dlci dlci-identifier;
    multipoint-destination address {
        epd-threshold cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (disable | seconds);
        shaping {
            (cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
                sustained rate);
            queue-length number;
        }
        vci vpi-identifier.vci-identifier;
    }
    preferred;
    primary;
    vrrp-group group-id {
        (accept-data | no-accept-data);
    }
}

```



```

advertise-interval seconds;
authentication-key key;
authentication-type authentication;
fast-interval milliseconds;
(preempt | no-preempt) {
    hold-time seconds;
}
priority number;
track {
    interface interface-name {
        bandwidth-threshold bits-per-second priority-cost priority;
        priority-cost priority;
    }
    priority-hold-time seconds;
    route prefix routing-instance instance-name priority-cost priority;
}
}
virtual-address [ addresses ];
}
virtual-link-local-address ipv6-address;
}
}

```

Hierarchy Level [edit interfaces *interface-name* **unit** *logical-unit-number*],
[edit logical-systems *logical-system-name* interfaces *interface-name* **unit** *logical-unit-number*]

Release Information Statement introduced before Junos OS Release 7.4.
Option **max-sessions-vs-a-ignore** introduced in Junos OS Release 11.4.

Description Configure protocol family information for the logical interface.



NOTE: Not all subordinate statements are available to every protocol family.

Options *family*—Protocol family:

- **any**—Protocol-independent family used for Layer 2 packet filtering



NOTE: This option is not supported on T4000 Type 5 FPCs.

- **bridge**—(M Series and T Series routers only) Configure only when the physical interface is configured with **ethernet-bridge** type encapsulation or when the logical interface is configured with **vlan-bridge** type encapsulation. You can optionally configure this protocol family for the logical interface on which you configure VPLS.
- **ethernet-switching**—(M Series and T Series routers only) Configure only when the physical interface is configured with **ethernet-bridge** type encapsulation or when the logical interface is configured with **vlan-bridge** type encapsulation
- **ccc**—Circuit cross-connect protocol suite. You can configure this protocol family for the logical interface of CCC physical interfaces. When you use this encapsulation type, you can configure the **ccc** family only.
- **inet**—Internet Protocol version 4 suite. You must configure this protocol family for the logical interface to support IP protocol traffic, including Open Shortest Path First (OSPF), Border Gateway Protocol (BGP), Internet Control Message Protocol (ICMP), and Internet Protocol Control Protocol (IPCP).
- **inet6**—Internet Protocol version 6 suite. You must configure this protocol family for the logical interface to support IPv6 protocol traffic, including Routing Information Protocol for IPv6 (RIPng), Intermediate System-to-Intermediate System (IS-IS), BGP, and Virtual Router Redundancy Protocol for IPv6 (VRRP).
- **iso**—International Organization for Standardization Open Systems Interconnection (ISO OSI) protocol suite. You must configure this protocol family for the logical interface to support IS-IS traffic.
- **mlfr-end-to-end**—Multilink Frame Relay FRF.15. You must configure this protocol or multilink Point-to-Point Protocol (MLPPP) for the logical interface to support multilink bundling.
- **mlfr-uni-nni**—Multilink Frame Relay FRF.16. You must configure this protocol or **mlfr-end-to-end** for the logical interface to support link services and voice services bundling.
- **multilink-ppp**—Multilink Point-to-Point Protocol. You must configure this protocol (or **mlfr-end-to-end**) for the logical interface to support multilink bundling.
- **mpls**—Multiprotocol Label Switching (MPLS). You must configure this protocol family for the logical interface to participate in an MPLS path.
- **pppoe**—Point-to-Point Protocol over Ethernet
- **tcc**—Translational cross-connect protocol suite. You can configure this protocol family for the logical interface of TCC physical interfaces.

- **tnp**—Trivial Network Protocol. This protocol is used to communicate between the Routing Engine and the router's packet forwarding components. The Junos OS automatically configures this protocol family on the router's internal interfaces only, as discussed in [“Understanding Internal Ethernet Interfaces” on page 15](#).
- **vpls**—(M Series and T Series routers only) Virtual private LAN service. You can optionally configure this protocol family for the logical interface on which you configure VPLS. VPLS provides an Ethernet-based point-to-multipoint Layer 2 VPN to connect customer edge (CE) routers across an MPLS backbone. When you configure a VPLS encapsulation type, the **family vpls** statement is assumed by default.

MX Series routers support dynamic profiles for VPLS pseudowires, VLAN identifier translation, and automatic bridge domain configuration.

For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices*.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level	interface—To view this statement in the configuration.
	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Protocol Family on page 208

fastether-options

Syntax

```
fastether-options {
  802.3ad {
    aex (primary | backup);
    lacp {
      port-priority;
    }
  }
  (flow-control | no-flow-control);
  ignore-l3-incompletes;
  ingress-rate-limit rate;
  (loopback | no-loopback);
  mpls {
    pop-all-labels {
      required-depth number;
    }
  }
  source-address-filter {
    mac-address;
  }
  (source-filtering | no-source-filtering);
}
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure Fast Ethernet-specific interface properties.


The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Ethernet Interfaces Overview*

fcs

Syntax	<code>fcs (16 32);</code>
Hierarchy Level	<code>[edit interfaces e1-<i>fpc/pic/port</i>],</code> <code>[edit interfaces t1-<i>fpc/pic/port</i>],</code> <code>[edit interfaces <i>interface-name</i> ds0-options],</code> <code>[edit interfaces <i>interface-name</i> e1-options],</code> <code>[edit interfaces <i>interface-name</i> e3-options],</code> <code>[edit interfaces <i>interface-name</i> sonet-options],</code> <code>[edit interfaces <i>interface-name</i> t1-options],</code> <code>[edit interfaces <i>interface-name</i> t3-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	<p>For E1/E3, SONET/SDH, and T1/T3 interfaces, configure the frame checksum (FCS) on the interface. The checksum must be the same on both ends of the interface.</p> <p>On a channelized OC12 interface, the SONET/SDH fcs statement is not supported. To configure FCS on each DS3 channel, you must include the t3-options fcs statement in the configuration for each channel. For SONET/SDH, the channelized OC12 interface supports DS3 to STS-1 to OC12. For SDH, the channelized OC12 interface supports NxDS3 to NxVC3 to AU3 to STM.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 20px;"> <p> NOTE: When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the fcs statement must be included at the <code>[edit interfaces e1-<i>fpc/pic/port</i>]</code> or <code>[edit interfaces t1-<i>fpc/pic/port</i>]</code> hierarchy level as appropriate.</p> </div>
Options	<p>16—Use a 16-bit frame checksum on the interface.</p> <p>32—Use a 32-bit frame checksum on the interface. Using a 32-bit checksum provides more reliable packet verification, but some older equipment might not support 32-bit checksums.</p> <p>Default: 16</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the E1 Frame Checksum</i> • <i>Configuring the E3 Frame Checksum</i> • <i>Configuring the SONET/SDH Frame Checksum</i>

- [Configuring the T1 Frame Checksum](#)
- [Configuring the T3 Frame Checksum](#)


feac-loop-respond

Syntax	(feac-loop-respond no-feac-loop-respond);
Hierarchy Level	[edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For T3 interfaces only, configure the router so a remote CSU can place the local router into loopback.</p> <p>If you configure remote or local loopback with the T3 loopback statement, the router does not respond to FEAC requests from the CSU even if you include the feac-loop-respond statement in the configuration. For the router to respond, you must delete the loopback statement from the configuration.</p> <p>You must rollback the setting done on the remote CSU prior to deactivating the feac-loop-respond statement. If the remote CSU cannot comply, clear the remote loop through local configuration to achieve the cleanup. For example, configure remote loopback on the interface and then delete the remote loopback.</p>
Default	The router does not respond to FEAC requests.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the T3 FEAC Response• loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3) on page 779• remote-loopback-respond on page 974

fec (gigether)

Syntax	<code>fec (fec91 none)</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> gigether-options]</code>
Release Information	<p>Statement introduced in Junos OS Release 16.1R1</p> <p>Statement introduced in Junos OS Release 16.1X65D30 for PTX1000 routers</p> <p>Statement introduced in Junos OS Release 17.1R1 for PTX5000 routers</p> <p>Statement introduced in Junos OS Release 17.3R1 for MX10003 routers</p> <p>Statement introduced in Junos OS Release 17.4R1 for MX204 routers</p>
Description	<p>(MX Series Routers with MPC7E, MPC8E, and MPC9E, MX10003 Router with MX10003 MPC, MX204 Router, PTX1000, PTX5000) Enable or disable RS-FEC (Reed-Solomon Forward Error Correction) for a 100-Gigabit Ethernet interface. By default, the Junos OS software enables or disables forward error correction based on the plugged-in optics. For instance, Junos OS software enables RS-FEC for 100G SR4 optics and disables RS-FEC for 100G LR4 optics.</p> <p>This statement allows you to override the default behavior and explicitly enable or disable RS-FEC. For instance, you can extend the reach of 100G LR4 optics when you explicitly enable RS-FEC for the optics. RS-FEC is compliant with IEEE 802.3-2015 Clause 91.</p> <p>Once you enable or disable RS-FEC using this statement, this behavior applies to any 100-Gigabit Ethernet optical transceiver installed in the port associated with the interface. Delete the statement and commit the configuration to return to the default behavior.</p>
Default	Junos OS software automatically enables or disables RS-FEC based on the type of pluggable optics used.
Options	<p>fec91—Enables RS-FEC. RS-FEC is compliant with IEEE 802.3-2015 Clause 91.</p> <p>none—Disables RS-FEC.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>MPC7E (Multi-Rate) on MX Series Routers Overview</i> • <i>MPC8E on MX Series Routers Overview</i> • <i>MPC9E on MX Series Routers Overview</i> • <i>Determining Transceiver Support for the PTX1000</i>

filter

Syntax	<pre>filter { group <i>filter-group-number</i>; input <i>filter-name</i>; input-list [<i>filter-names</i>]; output <i>filter-name</i>; output-list [<i>filter-names</i>]; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	<p> NOTE: On EX Series switches, the <code>group</code>, <code>input-list</code>, <code>output-filter</code> statements are not supported under the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet6</i>], and [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>mpls</i>] hierarchies.</p> <p>Apply a filter to an interface. You can also use filters for encrypted traffic. When you configure filters, you can configure them under the family ethernet-switching, inet, inet6, mpls, or vpls only.</p>
Options	<p>group <i>filter-group-number</i>—Define an interface to be part of a filter group. The default filter group number is 0. Range: 0 through 255</p> <p>input <i>filter-name</i>—Name of one filter to evaluate when packets are received on the interface.</p> <p>output <i>filter-name</i>—Name of one filter to evaluate when packets are transmitted on the interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Applying a Filter to an Interface on page 238

- *Junos OS Administration Library*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Firewall Filters (CLI Procedure)*
- *family*



filter (Applying to an Interface)

Syntax	<pre>filter { input <i>filter-name</i>; output <i>filter-name</i>; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Apply a filter to an interface. You can also use filters for encrypted traffic. When you configure filters, you can configure the family inet , inet6 , mpls , or vpls only.
Options	<p>input <i>filter-name</i>—Name of one filter to evaluate when packets are received on the interface.</p> <p>output <i>filter-name</i>—Name of one filter to evaluate when packets are transmitted on the interface.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>simple-filter</i> • <i>Configuring and Applying Tricolor Marking Policers</i> • <i>Example: Classifying Packets Based on Their Destination Address</i> • <i>Example: Configuring and Verifying a Complex Multifield Filter</i> • <i>Example: Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets</i> • <i>Configuring a Simple Filter</i> • <i>Configuring Policers Based on Logical Interface Bandwidth</i> • <i>Effect of Two-Color Policers on Shaping Rate Changes</i>

flexible-vlan-tagging

Syntax	<code>flexible-vlan-tagging;</code>
Hierarchy Level	<code>[edit interfaces aex],</code> <code>[edit interfaces ge-<i>fpc/pic/port</i>],</code> <code>[edit interfaces et-<i>fpc/pic/port</i>],</code> <code>[edit interfaces ps0],</code> <code>[edit interfaces xe-<i>fpc/pic/port</i>]</code>
Release Information	<p>Statement introduced in Junos OS Release 8.1.</p> <p>Support for aggregated Ethernet added in Junos OS Release 9.0.</p> <p>Statement introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.</p> <p>Statement introduced in Junos OS Release 13.2X50-D15 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.</p>
Description	<p>Support simultaneous transmission of 802.1Q VLAN single-tag and dual-tag frames on logical interfaces on the same Ethernet port, and on pseudowire logical interfaces.</p> <p>This statement is supported on M Series and T Series routers, for Fast Ethernet and Gigabit Ethernet interfaces only on Gigabit Ethernet IQ2 and IQ2-E, IQ, and IQE PICs, and for aggregated Ethernet interfaces with member links in IQ2, IQ2-E, and IQ PICs or in MX Series DPCs, or on Ethernet interfaces for PTX Series Packet Transport Routers or 100-Gigabit Ethernet Type 5 PIC with CFP.</p> <p>This statement is supported on Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces on EX Series and QFX Series switches.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Enabling VLAN Tagging</i>• <i>Configuring Flexible VLAN Tagging on PTX Series Packet Transport Routers</i>• <i>Configuring Double-Tagged VLANs on Layer 3 Logical Interfaces</i>

flow-control

Syntax	(flow-control no-flow-control);
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options], [edit interfaces <i>interface-name</i> multiservice-options], [edit interfaces interface-range <i>name</i> aggregated-ether-options], [edit interfaces interface-range <i>name</i> ether-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 in EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	For aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, explicitly enable flow control, which regulates the flow of packets from the router or switch to the remote side of the connection. Enabling flow control is useful when the remote device is a Gigabit Ethernet switch. Flow control is not supported on the 4-port Fast Ethernet PIC.
	<div>  <p>NOTE: On the Type 5 FPC, to prioritize control packets in case of ingress oversubscription, you must ensure that the neighboring peers support MAC flow control. If the peers do not support MAC flow control, then you must disable flow control.</p> </div>
Default	Flow control is enabled.
	<div>  <p>NOTE: Flow control is enabled by default only on physical interfaces and it is disabled by default on aggregated Ethernet interfaces.</p> </div>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Flow Control</i> • <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i> • <i>Configuring Gigabit Ethernet Interfaces for EX Series Switches with ELS support</i>

flow-control-options

Syntax

```
flow-control-options {
  down-on-flow-control;
  dump-on-flow-control;
  reset-on-flow-control;
  up-on-flow-control;
}
```

Hierarchy Level [edit interfaces *mo-fpc/pic/port* multiservice-options]

Release Information Statement introduced before Junos OS Release 8.4.

Description Configure the flow control options for application recovery in case of a prolonged flow control failure.

- **down-on-flow-control**—Bring interface down during prolonged flow control.
- **dump-on-flow-control**—Cause core dump during prolonged flow control.



NOTE: Starting with Junos OS Release 15.1, on MX Series routers with MS-MICs and MS-MPCs, instead of an eJunos kernel core file, the multiservices PIC management daemon (mispmand) core file is generated when a prolonged flow control failure occurs and when you configure the setting to generate a core dump during prolonged flow control (by using the **dump-on-flow-control** option with the **flow-control-options** statement). The watchdog functionality continues to generate a kernel core file in such scenarios.

- **reset-on-flow-control**—Reset interface during prolonged flow control.



NOTE: Starting in Junos OS Release 16.1R7, the **reset-on-flow-control** option has no effect on the MS-MIC, MS-MPC, MS-DPC, MS-PIC 100, MS-PIC 400, and MS-PIC 500 line cards. This is because starting in Release 16.1R7, Junos OS restarts these line cards to recover them from stuck state due to prolonged flow control.

- **up-on-flow-control**—Cause interface to remain in stuck state until you manually restart the PICs.



NOTE: Starting in Junos OS Release 16.1R7, if interfaces on an MS-PIC or MS-DPC are in stuck state because of prolonged flow control, Junos OS restarts the service PICs to recover them from this state. However, if you

want the PICs to remain in stuck state until you manually restart the PICs, configure the `up-on-flow-control` option. In releases before Release 16.1R7, there is no action taken to recover service PICs from this state unless one of the options for the `flow-control-options` statement is configured, or service PIC is manually restarted.

Usage Guidelines See *Configuring Flow Monitoring on T Series and M Series Routers and EX9200 Switches*.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

force

Syntax `force (protect | working);`

Hierarchy Level [edit interfaces *interface-name* sonet-options [aps](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description Perform a forced switch between the protect and working circuits. This statement is honored only if there are no higher-priority reasons to switch. It can be overridden by a signal failure on the protect circuit, thus causing a switch to the working circuit.

Options **protect**—Request the circuit to become the protect circuit.
working—Request the circuit to become the working circuit.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Switching Between the Working and Protect Circuits*
- [request on page 976](#)

forward-and-send-to-re

Syntax	<code>forward-and-send-to-re;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet targeted-broadcast],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>family inet targeted-broadcast]</code>
Release Information	Statement introduced in Junos OS Release 10.2.
Description	Specify that IP packets destined for a Layer 3 broadcast address be forwarded to an egress interface and the Routing Engine. The packets are broadcast only if the egress interface is a LAN interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Targeted Broadcast on page 275• targeted-broadcast on page 1061• Understanding Targeted Broadcast on page 274

forwarding-class (ATM2 IQ Scheduler Maps)

Syntax	<pre>forwarding-class <i>class-name</i> { epd-threshold <i>cells plp1 cells</i>; linear-red-profile <i>profile-name</i>; priority (high low); transmit-weight (<i>cells number</i> percent <i>number</i>); }</pre>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define forwarding class name and option values.
Options	<p><i>class-name</i>—Name of forwarding class.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>ATM2 IQ VC Tunnel CoS Components Overview</i> • <i>Applying Scheduler Maps to ATM Interfaces</i>

forwarding-class (Gigabit Ethernet IQ Classifier)

Syntax	<pre>forwarding-class <i>class-name</i> { <i>loss-priority</i> (high low); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> <i>gigether-options</i> <i>ethernet-switch-profile</i> <i>ethernet-policer-profile</i> <i>output-priority-map</i> <i>classifier</i> <i>premium</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Gigabit Ethernet IQ interfaces only, define forwarding class name and option values.
Options	<p><i>class-name</i>—Name of forwarding class.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Specifying an Output Priority Map</i>• input-priority-map on page 701• forwarding-class statement in the <i>Class of Service Feature Guide for Routers and EX9200 Switches</i>

forward-only

Syntax	forward-only;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet targeted-broadcast], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet targeted-broadcast]
Release Information	Statement introduced in Junos OS Release 10.2.
Description	Specify that IP packets destined for a Layer 3 broadcast address be forwarded to an egress interface only. The packets are broadcast only if the egress interface is a LAN interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Targeted Broadcast on page 275 • targeted-broadcast on page 1061 • Understanding Targeted Broadcast on page 274

fragment-threshold

Syntax	<code>fragment-threshold <i>bytes</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For multilink, link services, and voice services interfaces, set the fragmentation threshold.
Options	bytes —Maximum size, in bytes, for multilink packet fragments. Any nonzero value must be a multiple of 64 bytes. Range: 128 through 16,320 bytes Default: 0 bytes (no fragmentation)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

frame-error

Syntax	<code>frame-error count;</code>
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile event link-event-rate], [edit protocols oam link-fault-management interface interface-name event-thresholds]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	<p>Threshold for sending frame error events or taking the action specified in the action profile.</p> <p>A frame error is any frame error on the underlying physical layer. The threshold is reached when the number of frame errors reaches the configured value within the window.</p> <p>The window or period during which frame errors are counted is 5 seconds or multiples of it (with a maximum value of 1 minute). This window denotes the duration as intervals of 100 milliseconds, encoded as a 16-bit unsigned integer. This window is not configurable in Junos OS. According to the IEEE 802.3ah standard, the default value of the frame-errors window is 1 second. This window has a lower bound of 1 second and an upper bound of 1 minute.</p>
Options	<p>count—Threshold count for frame error events.</p> <p>Range: 0 through 100</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Threshold Values for Local Fault Events on an Interface</i> <i>Configuring Threshold Values for Fault Events in an Action Profile</i>


frame-period

Syntax	<code>frame-period count;</code>
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile event link-event-rate], [edit protocols oam link-fault-management interface interface-name event-thresholds]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	<p>Threshold for sending frame period error events or taking the action specified in the action profile.</p> <p>A frame error is any frame error on the underlying physical layer. The frame period threshold is reached when the number of frame errors reaches the configured value within the period window. The default period window is the number of minimum-size frames that can be transmitted on the underlying physical layer in 1 second. The window is not configurable.</p>
Options	<p>count—Threshold count for frame period error events.</p> <p>Range: 0 through 100</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Threshold Values for Local Fault Events on an Interface</i>• <i>Configuring Threshold Values for Fault Events in an Action Profile</i>


frame-period-summary

Syntax	<code>frame-period-summary count;</code>
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile event link-event-rate], [edit protocols oam link-fault-management interface interface-name event-thresholds]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	<p>Threshold for sending frame period summary error events or taking the action specified in the action profile.</p> <p>An errored frame second is any 1-second period that has at least one errored frame. This event is generated if the number of errored frame seconds is equal to or greater than the specified threshold for that period window. The default window is 60 seconds. The window is not configurable.</p>
Options	<p>count—Threshold count for frame period summary error events.</p> <p>Range: 0 through 100</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Threshold Values for Local Fault Events on an Interface</i> • <i>Configuring Threshold Values for Fault Events in an Action Profile</i>

framing (E1, E3, and T1 Interfaces)

Syntax	<code>framing (g704 g704-no-crc4 g.751 g.832 unframed sf esf);</code>
Hierarchy Level	<code>[edit interfaces ce1-fpc/pic/port],</code> <code>[edit interfaces ct1-fpc/pic/port],</code> <code>[edit interfaces at-fpc/pic/port e3-options],</code> <code>[edit interfaces e1-fpc/pic/port e1-options],</code> <code>[edit interfaces t1-fpc/pic/port t1-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	Configure the framing format.
	<div>  <p>NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>framing</code> statement must be included at the <code>[edit interfaces ce1-fpc/pic/port]</code> or <code>[edit interfaces ct1-fpc/pic/port]</code> hierarchy level as appropriate.</p> </div>
Default	<code>esf</code> for T1 interfaces; <code>g704</code> for E1 interfaces. There is no default value for E3 over ATM interfaces.
Options	<p><code>esf</code>—Extended superframe (ESF) mode for T1 interfaces.</p> <p><code>g704</code>—G.704 framing format for E1 interfaces.</p> <p><code>g704-no-crc4</code>—G.704 framing with no cyclic redundancy check 4 (CRC4) for E1 interfaces.</p> <p><code>g.751</code>—G.751 framing format for E3 over ATM interfaces.</p> <p><code>g.832</code>—G.832 framing format for E3 over ATM interfaces.</p> <p><code>sf</code>—Superframe (SF) mode for T1 interfaces.</p> <p><code>unframed</code>—Unframed mode for E1 interfaces.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring E1 Framing Configuring E3 and T3 Parameters on ATM Interfaces Configuring T1 Framing

framing (10-Gigabit Ethernet Interfaces)

Syntax	<code>framing (lan-phy wan-phy);</code>
Hierarchy Level	<p><code>[edit interfaces xe-fpc/pic/port]</code></p> <p><code>[edit interfaces et-fpc/pic/port]</code> (PTX Series Packet Transport Routers and MX Series Routers)</p>
Release Information	<p>Statement introduced in Junos OS Release 8.0.</p> <p>Statement introduced in Junos OS Release 12.3R2 for PTX Series Packet Transport Routers.</p>
Description	<p>For routers supporting the 10-Gigabit Ethernet interface, configure the framing format. WAN PHY mode is supported on MX240, MX480, MX960, T640, T1600, T4000, and PTX Series Packet Transport Routers routers only.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p> NOTE:</p> <ul style="list-style-type: none"> The T4000 Core Router supports only LAN PHY mode in Junos OS Release 12.1R1. Starting with Junos OS Release 12.1R2, WAN PHY mode is supported on the T4000 routers with the 12-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-12XGE-SFPP). Starting with Junos OS Release 12.2, WAN PHY mode is supported on the T4000 routers with the 24-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-24XGE-SFPP). On PTX Series routers, WAN PHY mode is supported only on the 24-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ . When the PHY mode changes, interface traffic is disrupted because of port reinitialization. </div>
Default	Operates in LAN PHY mode.
Options	<p>lan-phy—10GBASE-R interface framing format that bypasses the WIS sublayer to directly stream block-encoded Ethernet frames on a 10-Gigabit Ethernet serial interface.</p> <p>wan-phy—10GBASE-W interface framing format that allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and SONET devices.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- *10-Gigabit Ethernet Framing Overview*
 - *Configuring SONET Options for 10-Gigabit Ethernet Interfaces*

framing (SONET and SDH Interfaces)

Syntax	framing (sdh sonet);
Hierarchy Level	[edit interfaces so-fpc/pic/port]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	<p>This functionality allows you to mix SONET and SDH modes on interfaces on the same PIC.</p> <ul style="list-style-type: none">• For the 4-port OC48 PIC with SFP installed and the 4-port OC192 PIC in T Series and M Series routers, configure SONET or SDH framing on a per-port basis.• For 1-port OC192/STM64 MICs with XFP on MX Series routers, configure the SONET or SDH framing on the single port.
Default	Default framing mode is SONET .
Options	<p>sdh—SDH framing.</p> <p>sonet—SONET framing.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring SONET/SDH Framing Mode for Ports</i>

gigether-options

```
Syntax  gigether-options {
    802.3ad {
        aex (primary | backup);
        lacp {
            port-priority;
        }
    }
    (asynchronous-notification | no-asynchronous-notification);
    (auto-negotiation | no-auto-negotiation) remote-fault <local-interface-online |
    local-interface-offline>;
    fec
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
    no-auto-mdix
    source-address-filter {
        mac-address;
    }
    (source-filtering | no-source-filtering);
    speed
    ethernet-switch-profile {
        (mac-learn-enable | no-mac-learn-enable);
        tag-protocol-id [ tpids ];
        ethernet-policer-profile {
            input-priority-map {
                ieee802.1p premium [ values ];
            }
            output-priority-map {
                classifier {
                    premium {
                        forwarding-class class-name {
                            loss-priority (high | low);
                        }
                    }
                }
            }
        }
    }
    policer cos-policer-name {
        aggregate {
            bandwidth-limit bps;
            burst-size-limit bytes;
        }
        premium {
            bandwidth-limit bps;
            burst-size-limit bytes;
        }
    }
}
```

```
}  
}  
}
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure Gigabit Ethernet specific interface properties.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Ethernet Interfaces Overview*
- *gether-options (ACX Series)*

gratuitous-arp-reply

Syntax (gratuitous-arp-reply | no-gratuitous-arp-reply);

Hierarchy Level [edit interfaces *interface-name*]
[edit interfaces *interface-range* *interface-range-name*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 9.0 in EX Series switches.
Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.

Description For Ethernet interfaces, enable updating of the Address Resolution Protocol (ARP) cache for gratuitous ARPs.

Default Updating of the ARP cache is disabled on all Ethernet interfaces.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Gratuitous ARP*
- [no-gratuitous-arp-request on page 850](#)

guard-interval

Syntax	<code>guard-interval <i>number</i>;</code>
Hierarchy Level	[edit protocols <code>protection-group ethernet-ring <i>ring-name</i></code>]
Release Information	<p>Statement introduced in Junos OS Release 9.4.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.</p>
Description	<p>When a link goes down, the ring protection link (RPL) activates. When the downed link comes back up, the RPL link receives notification, restores the link, and waits for the restore interval before issuing another block on the same link. This configuration is a global configuration and applies to all Ethernet rings if the Ethernet ring does not have a more specific configuration for this value. If no parameter is configured at the protection group level, the global configuration of this parameter uses the default value.</p>
Options	<p><i>number</i>—Guard timer interval, in milliseconds.</p> <p>Range: 10 through 2000 ms</p> <p>Default: 500 ms</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Ethernet Ring Protection Switching Overview</i> • <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i> • <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i> • <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i>

hardware-assisted-timestamping

Syntax	hardware-assisted-timestamping;
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management performance-monitoring]
Release Information	Statement introduced in Junos OS Release 9.5.
Description	<p>For Ethernet interfaces on Enhanced and Enhanced Queuing Dense Port Concentrators (DPCs) in MX Series routers only, enable hardware-assisted timestamping support for Ethernet frame delay measurement.</p> <p>By default, the ETH-DM feature calculates frame delays using software-based timestamping of the ETH-DM PDU frames sent and received by the MEPs in the session. As an option that can increase the accuracy of ETH-DM calculations when the DPC is loaded with heavy traffic in the receive direction, you can enable hardware-assisted timestamping of session frames in the receive direction.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Ethernet Frame Delay Measurements Overview</i>• <i>Guidelines for Configuring Routers to Support an ETH-DM Session</i>• <i>Enabling the Hardware-Assisted Timestamping Option</i>

high-plp-threshold

Syntax	<code>high-plp-threshold <i>percent</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options linear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS VC drop profile fill-level percentage when linear RED is applied to cells with high PLP. When the fill level exceeds the defined percentage, packets with high PLP are randomly dropped by RED. This statement is mandatory.
Options	<i>percent</i> —Fill-level percentage when linear RED is applied to cells with PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>ATM2 IQ VC Tunnel CoS Components Overview</i> • high-plp-max-threshold on page 661 • low-plp-max-threshold on page 786 • low-plp-threshold on page 787 • queue-depth on page 957

hello-timer

Syntax	<code>hello-timer <i>milliseconds</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, configure the rate at which hello messages are sent. A hello message is transmitted after a period defined in milliseconds has elapsed.
Options	milliseconds —The rate at which hello messages are sent. Range: 1 through 180 milliseconds Default: 10 milliseconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• acknowledge-timer on page 427• address on page 435

hierarchical-policer

```

Syntax hierarchical-policer name {
  aggregate {
    if-exceeding {
      bandwidth-limit bandwidth;
      burst-size-limit burst;
    }
    then {
      discard;
    }
  }
  premium {
    if-exceeding {
      bandwidth-limit bandwidth;
      burst-size-limit burst;
    }
    then {
      discard;
    }
  }
}

```

Hierarchy Level [edit firewall]

Release Information Statement introduced in Junos OS Release 9.5.

Description For M40e, M120, and M320 (with FFPC and SFPC) edge routers and T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs, specify a hierarchical policer.

Options Options are described separately.

Required Privilege Level firewall—To view this statement in the configuration.
firewall-control—To add this statement to the configuration.

Related Documentation

- [Applying Policers on page 228](#)
- *Class of Service Feature Guide for Routers and EX9200 Switches*

hierarchical-scheduler (Subscriber Interfaces on MX Series Routers)

Syntax	<pre>hierarchical-scheduler { implicit-hierarchy; maximum-hierarchy-levels <i>number</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	<p>Statement introduced in Junos OS Release 10.1.</p> <p>implicit-hierarchy option added in Junos OS Release 13.1.</p> <p>Support on GRE tunnel interfaces configured on physical interfaces on MICs or MPCs in MX Series routers added in Junos OS Release 13.3.</p> <p>Support for up to four hierarchy levels added in Junos OS Release 16.1.</p>
Description	<p>Configure hierarchical scheduling options on the interface.</p> <p>The statement is supported on the following interfaces:</p> <ul style="list-style-type: none">• MIC and MPC interfaces in MX Series routers• GRE tunnel interfaces configured on physical interfaces hosted on MIC or MPC line cards in MX Series routers <p>To enable hierarchical scheduling on MX Series routers, configure the hierarchical-scheduler statement at each member physical interface level of a particular aggregated Ethernet interface as well as at that aggregated Ethernet interface level. On other routing platforms, it is enough if you include this statement at the aggregated Ethernet interface level.</p>
Options	<p>implicit-hierarchy—Configure four-level hierarchical scheduling. When you include the implicit-hierarchy option, a hierarchical relationship is formed between the CoS scheduler nodes at level 1, level 2, level 3, and level 4. The implicit-hierarchy option is supported only on MPC/MIC subscriber interfaces and interface sets on MX Series routers.</p> <p>maximum-hierarchy-levels <i>number</i>—Specify the maximum number of hierarchical scheduling levels allowed for node scaling, from 2 through 4 levels. The default number of levels is 3. The maximum-hierarchy-levels option is supported on MPC/MIC or EQ DPC subscriber interfaces and interface sets on MX Series routers.</p> <ul style="list-style-type: none">• If you set maximum-hierarchy-levels to 2, interface sets are not allowed. In this case, if you configure a level 2 interface set, you generate Packet Forwarding Engine errors.• If you do not include the maximum-hierarchy-levels option, keeping the default number of hierarchy levels at 3, interface sets can be at either level 2 or level 3, depending on whether the member logical interfaces within the interface set have a traffic control profile. If any member logical interface has a traffic control profile, then the interface

set is a level 2 CoS scheduler node. If no member logical interface has a traffic control profile, the interface set is at level 3.



CAUTION: *MPC3E, 32x10GE MPC4E, and 2x100GE + 8x10GE MPC4E MPCs support only two levels of scheduling hierarchy. When enabling hierarchical scheduling on these cards, you must explicitly set `maximum-hierarchy-levels` to 2.*

Required Privilege Level	view-level—To view this statement in the configuration. control-level—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Understanding Hierarchical CoS for Subscriber Interfaces</i> • <i>Configuring Hierarchical CoS for a Subscriber Interface of Aggregated Ethernet Links</i> • <i>Configuring Hierarchical Schedulers for CoS</i> • <i>Configuring Hierarchical CoS on a Static PPPoE Subscriber Interface</i> • <i>Hierarchical CoS on MPLS Pseudowire Subscriber Interfaces Overview</i>


high-plp-max-threshold

Syntax	<code>high-plp-max-threshold percent;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options linear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the drop profile fill-level for the high PLP CoS VC. When the fill level exceeds the defined percentage, all packets are dropped.
Options	percent —Fill-level percentage when linear random early discard (RED) is applied to cells with PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>ATM2 IQ VC Tunnel CoS Components Overview</i> • low-plp-max-threshold on page 786 • low-plp-threshold on page 787 • queue-depth on page 957

high-plp-threshold

Syntax	<code>high-plp-threshold <i>percent</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options linear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS VC drop profile fill-level percentage when linear RED is applied to cells with high PLP. When the fill level exceeds the defined percentage, packets with high PLP are randomly dropped by RED. This statement is mandatory.
Options	<i>percent</i> —Fill-level percentage when linear RED is applied to cells with PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ATM2 IQ VC Tunnel CoS Components Overview</i>• high-plp-max-threshold on page 661• low-plp-max-threshold on page 786• low-plp-threshold on page 787• queue-depth on page 957

hold-interval (OAM)

Syntax	<code>hold-interval <i>minutes</i>;</code>
Hierarchy Level	<code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> continuity-check]</code>
Release Information	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
Description	The time to wait in minutes before flushing the maintenance association end point (MEP) database, if no updates occur. The configurable range is 1 minute through 30240 minutes. The default value is 10 minutes.
<div>  <p>NOTE: Hold timer based flushing is applicable only for auto discovered remote MEPs and not for statically configured remote MEPs.</p> </div>	
Options	<i>minutes</i> —Time to wait, in minutes.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Continuity Check Protocol Parameters Overview Configuring Continuity Check Protocol Parameters for Fault Detection



hold-interval (Protection Group)

Syntax	hold-interval <i>number</i> ;
Hierarchy Level	[edit protocols protection-group ethernet-ring name]
Release Information	Statement introduced in Junos OS Release 9.4.
Description	Specify the hold-off timer interval <i>for all rings</i> in 100 millisecond (ms) increments.
Options	<i>number</i> —Hold-timer interval, in milliseconds. Range: 0 through 10,000 ms Default: 100 ms
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Ethernet Ring Protection Switching Overview</i>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i>

hold-time (APS)

Syntax	hold-time <i>milliseconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Hold-time value to use to determine whether a neighbor APS router is operational.
Options	<i>milliseconds</i> —Hold-time value. Range: 1 through 65,534 milliseconds Default: 3000 milliseconds (3 times the advertisement interval)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring APS Timers</i>• advertise-interval on page 437

hold-time (Physical Interface)

Syntax	<code>hold-time up <i>milliseconds</i> down <i>milliseconds</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces interface-range <i>interface-range-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 10.4R5 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series. Statement introduced in Junos OS Release 12.1 for the SRX Series.
Description	Specify the hold-time value to use to damp shorter interface transitions milliseconds. The hold timer enables interface damping by not advertising interface transitions until the hold timer duration has passed. When a hold-down timer is configured and the interface goes from up to down, the down hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still down, then the router begins to advertise the interface as being down. Similarly, when a hold-up timer is configured and an interface goes from down to up, the up hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still up, then the router begins to advertise the interface as being up.
	<div>  NOTE: <ul style="list-style-type: none"> We recommend that you configure the hold-time value after determining an appropriate value by performing repeated tests in the actual hardware environment. This is because the appropriate value for hold-time depends on the hardware (XFP, SFP, SR, ER, or LR) used in the networking environment. The hold-time option is not available for controller interfaces. </div>
	<div>  NOTE: On MX Series routers with MPC3E and MPC4E, we recommend that you do not configure the hold-down timer to be less than 1 second. On MX Series routers with MPC5EQ-100G10G (MPC5EQ) or MPC6E (MX2K-MPC6E) with 100-Gigabit Ethernet MIC with CFP2 OTN interfaces, we recommend that you do not configure the hold-down timer to be less than 3 seconds. </div>
Default	Interface transitions are not damped.

Options **down *milliseconds***—Hold time to use when an interface transitions from up to down. Junos OS advertises the transition within 100 milliseconds of the time value you specify.

Range: 0 through 4,294,967,295

Default: 0 (interface transitions are not damped)

up *milliseconds*—Hold time to use when an interface transitions from down to up. Junos OS advertises the transition within 100 milliseconds of the time value you specify.


Range: 0 through 4,294,967,295

Default: 0 (interface transitions are not damped)

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

- Related Documentation**
- [advertise-interval on page 437](#)
 - [interfaces \(EX Series switches\)](#)
 - [Physical Interface Damping Overview on page 160](#)
 - [Damping Shorter Physical Interface Transitions on page 166](#)
 - [Damping Longer Physical Interface Transitions on page 167](#)

hold-time (SONET/SDH Defect Triggers)

Syntax	hold-time up <i>milliseconds</i> down <i>milliseconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options trigger defect]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM over SONET/SDH and SONET/SDH interfaces only, apply up and down hold times to SONET/SDH defect triggers. When you apply a down hold time to a defect, the defect must remain present for at least the hold-time period before the interface is marked down. When you apply an up hold time to a defect, the defect must remain absent for at least the hold-time period before the interface is marked up, assuming no other defect is outstanding.</p>
	<div>  <p>NOTE:</p> <ul style="list-style-type: none"> When up or down hold times are applied to SONET defect triggers of a 10-Gigabit Ethernet WAN-PHY interface, only the defects generated in the WAN Interface Sublayer (WIS) are damped. Therefore, if the hold times are applied to SONET defect triggers only, a 10-Gigabit Ethernet WAN-PHY interface might be marked up or down because of the faults that are generated in other layers, such as the Physical Coding Sublayer (PCS) or Physical Medium Attachment Sublayer (PMA), 10 Gigabit Media Independent Interface (XGMII) Extender Sublayer (XGXS), and Media Access Control (MAC). To damp the interface up or down events of a 10-Gigabit Ethernet WAN-PHY interface, you need to apply up or down hold-times for the interface at the [edit interfaces <i>interface-name</i>] hierarchy level. On M Series and T Series platforms with Channelized SONET IQ PICs and Channelized SONET IQE PICs, the SONET defect alarm trigger hold-time statement is not supported. </div>
Default	If you do not include this statement, when a defect is detected the interface is marked down immediately, and when the defect becomes absent the interface is marked up immediately.
Options	<p>down <i>milliseconds</i>—Hold time to wait before the interface is marked down.</p> <p>Range: 1 through 65,534 milliseconds</p> <p>Default: No hold time</p> <p>up <i>milliseconds</i>—Hold time to wait before the interface is marked up.</p>

Range: 1 through 65,534 milliseconds

Default: No hold time

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring SONET/SDH Defect Triggers*
- [hold-time \(Physical Interface\) on page 666](#)

host (Interfaces)

Syntax

```
host hostname {
    services severity-level;
    facility-override facility-name;
    log-prefix prefix-value;
    port port-number;
}
```

Hierarchy Level [edit interfaces *interface-name* services-options syslog]

Release Information Statement introduced before Junos OS Release 7.4.
You can configure multiple system log hosts from Junos OS Release 17.4R1 onwards.

Description Specify the hostname for the system logging utility.

Starting with Junos OS release 17.4R1, you can configure up to a maximum of four system log servers (combination of local system log hosts and remote system log collectors) for each service set for ms interface under [edit interfaces *interface-name* services-options] hierarchy.

Options *hostname*—Name of the system logging utility host machine. This can be the local Routing Engine or an external server address.

From Junos OS Release 17.4R1, you can configure up to four system log hosts.



The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Applying Filters and Services to Interfaces*

host-prefix-only

Syntax	host-prefix-only;
Hierarchy Level	[edit dynamic-profiles interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 17.2 on MX Series routers.
Description	(MPC5 and MPC6 cards) Improve datapath performance by allowing only DHCPv4 subscribers that negotiate a 32-bit prefix to come up on the underlying VLAN interface. All DHCP subscribers on the underlying interface must negotiate a 32-bit prefix. Subscribers that negotiate a subnet prefix are not brought up. You can configure this statement for static or dynamic subscribers.
	<div>  <p>NOTE: You must add or remove this statement before subscribers become active. The configuration fails if you attempt to configure the statement while subscribers are active.</p> </div>
	<div>  <p>NOTE: You must also configure <code>demux-source inet</code> for the logical interface. Only <code>inet</code> is supported. A commit error occurs if you specify <code>demux-source inet6</code> or <code>demux-source [inet inet6]</code>.</p> </div>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring an IP Demultiplexing Interface on page 322 • Configuring a VLAN Demultiplexing Interface on page 327

iccp

Syntax

```
iccp {
  traceoptions {
    file <filename> <files number> <match regular-expression> <microsecond-stamp>
      <size size> <world-readable | no-world-readable>;
    flag flag;
    no-remote-trace;
  }
  local-ip-address ip address;
  session-establishment-hold-time value;
  authentication-key string;
  peer ip-address {
    local-ip-address ip address;
    session-establishment-hold-time value;
    authentication-key string;
    redundancy-group-id-list redundancy-group-id-list;
    liveness-detection;
  }
}
```

Hierarchy Level [edit protocols iccp]
[edit logical-systems *logical-system-name* protocols iccp]

Release Information Statement introduced in Junos OS Release 10.0.
Support for logical systems introduced in Junos OS Release 14.1.

Description Configure Interchassis Control Protocol (ICCP) between the multichassis link aggregation group (MC-LAG) peers. ICCP replicates forwarding information, validates configurations, and propagates the operational state of the MC-LAG members.

Default If you do not include this statement, no ICCP protocol tracing operations are performed.


Options

- traceoptions**—Set Interchassis Control Protocol (ICCP) tracing options.
- local-ip-address**—Specify the source address where the ICCP packet is routed.
- session-establishment-hold-time**—Specify if the chassis takes over as the master at the ICCP session.
- authentication-key**—Specify TCP Message Digest 5 (MD5) option for an ICCP TCP session.
- peer ip-address**—Specify the IP address of the peer that hosts an MC-LAG. You must configure ICCP for both peers that host the MC-LAG.
- redundancy-group-id-list**—Specify the redundancy groups between two ICCP peers.
- liveness-detection**—Specify Bidirectional Forwarding Detection (BFD) protocol options.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation • [Configuring ICCP for MC-LAG on page 216](#)

idle-cycle-flag

Syntax	<code>idle-cycle-flag value;</code>
Hierarchy Level	<code>[edit interfaces e1-fpc/pic/port],</code> <code>[edit interfaces t1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name serial-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	<p>Configure the value that the DS0, E1, E3, T1, or T3 interface transmits during idle cycles.</p> <div>  <p>NOTE: When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>idle-cycle-flag</code> statement must be included at the <code>[edit interfaces e1-fpc/pic/port]</code> or <code>[edit interfaces t1-fpc/pic/port]</code> hierarchy level as appropriate.</p> </div>
Options	<p>value—Value to transmit in the idle cycles:</p> <ul style="list-style-type: none"> flags—Transmit the value 0x7E. ones—Transmit the value 0xFF (all ones). <p>Default: <code>Flags</code></p>
Required Privilege Level	<p><code>interface</code>—To view this statement in the configuration.</p> <p><code>interface-control</code>—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring the E1 Idle Cycle Flag</i> <i>Configuring the E3 Idle Cycle Flag</i> <i>Configuring the T1 Idle Cycle Flag</i> <i>Configuring the T3 Idle Cycle Flag</i>

idle-timeout

Syntax	<code>idle-timeout seconds;</code>
Hierarchy Level	<code>[edit interfaces dln unit <i>logical-unit-number</i> dialer-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers with ISDN interfaces, configure the number of seconds the link is idle before losing connectivity.
Options	seconds —Time for which the connection can remain idle. For interfaces configured to use a filter for traffic, the idle timeout is based on traffic. Range: 1 through 429497295 Default: 120 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

ieee802.1p

Syntax	<code>ieee802.1p premium [<i>values</i>];</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> <i>gigether-options</i> ethernet-switch-profile ethernet-policer-profile input-priority-map]</p> <p>[edit interfaces <i>interface-name</i> <i>ether-options</i> ethernet-switch-profile ethernet-policer-profile input-priority-map]</p>
Release Information	<p>Statement introduced before Junos Release 7.4.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p>
Description	For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, configure premium priority values for IEEE 802.1p input traffic.
Options	<p><i>values</i>—Define IEEE 802.1p priority values to be treated as premium.</p> <p>Range: 0 through 7</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Specifying an Input Priority Map</i>

if-exceeding (Hierarchical Policer)

Syntax	<pre>if-exceeding { bandwidth-limit <i>bps</i>; burst-size-limit <i>bytes</i>; }</pre>
Hierarchy Level	[edit dynamic-profiles <i>profile-name</i> firewall hierarchical-policer aggregate], [edit dynamic-profiles <i>profile-name</i> firewall hierarchical-policer premium], [edit firewall hierarchical-policer aggregate], [edit firewall hierarchical-policer premium]
Release Information	Statement introduced in Junos OS Release 9.5. Support at the [edit dynamic-profiles ... aggregate] and [edit dynamic-profiles ... premium] hierarchy level introduced in Junos OS Release 11.4.
Description	<p>For M40e, M120, and M320 (with FFPC and SFPC) edge routers and T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs, T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, specify bandwidth and burst limits for a premium or aggregate component of a hierarchical policer.</p> <p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Hierarchical Policer Configuration Overview</i>• <i>Hierarchical Policers</i>• <i>aggregate (Hierarchical Policer)</i>• bandwidth-limit (Hierarchical Policer) on page 468• burst-size-limit (Hierarchical Policer) on page 481• <i>hierarchical-policer</i>• premium (Hierarchical Policer) on page 938

if-exceeding-pps (Hierarchical Policer)

Syntax	<pre>if-exceeding-pps { pps-limit <i>pps</i>; packet-burst <i>packets</i>; }</pre>
Hierarchy Level	<p>[edit dynamic-profiles <i>profile-name</i> firewall hierarchical-policer <i>hierarchical-policer-name</i> aggregate],</p> <p>[edit dynamic-profiles <i>profile-name</i> firewall hierarchical-policer <i>hierarchical-policer-name</i> premium],</p> <p>[edit firewall hierarchical-policer <i>hierarchical-policer-name</i> aggregate],</p> <p>[edit firewall hierarchical-policer <i>hierarchical-policer-name</i> premium]</p>
Release Information	Statement introduced in Junos OS Release 15.2 for MX Series routers with MPCs.
Description	<p>For MX Series routers, if-exceeding-pps allows you to configure a packets-per-second (pps)-based trigger for a premium or aggregate component of a hierarchical policer. When applied to the loopback interface (lo0), this kind of trigger can help protect the Routing Engine from DDoS attacks. When applied in other areas, to either transit or control traffic, it is a more fine-grained monitor.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>firewall—To view this statement in the configuration.</p> <p>firewall-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Hierarchical Policer Configuration Overview</i> • <i>Hierarchical Policers</i> • <i>aggregate (Hierarchical Policer)</i> • bandwidth-limit (Hierarchical Policer) on page 468 • burst-size-limit (Hierarchical Policer) on page 481 • <i>hierarchical-policer</i> • premium (Hierarchical Policer) on page 938

igmp-snooping

List of Syntax [Syntax \(EX Series, QFX Series, and NFX Series\) on page 678](#)
[Syntax \(MX Series\) on page 678](#)
[Syntax \(SRX Series\) on page 680](#)

Syntax (EX Series, QFX Series, and NFX Series)

```
igmp-snooping {
  traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable> <match
      regex>;
    flag flag (detail | disable | receive | send);
  }
  vlan (vlan-name | all) {
    data-forwarding {
      receiver {
        install;
        mode (proxy | transparent);
        (source-list | source-vlans) vlan-list;
        translate;
      }
      source {
        groups group-prefix;
      }
    }
    disable;
    immediate-leave;
    interface interface-name {
      group-limit limit;
      host-only-interface;
      immediate-leave;
      multicast-router-interface;
      static {
        group multicast-ip-address;
      }
    }
    l2-querier {
      source-address ip-address;
    }
    proxy {
      source-address ip-address;
    }
    query-interval seconds;
    query-last-member-interval seconds;
    query-response-interval seconds;
    robust-count number;
    version number;
  }
}
```

Syntax (MX Series)

```
igmp-snooping {
  immediate-leave;
  interface interface-name {
```

```
group-limit limit;  
host-only-interface;  
immediate-leave;  
multicast-router-interface;  
static {  
    group ip-address {  
        source ip-address;  
    }  
}  
}  
proxy {  
    source-address ip-address;  
}  
query-interval seconds;  
query-last-member-interval seconds;  
query-response-interval seconds;  
robust-count number;  
vlan vlan-id {  
    immediate-leave;  
    interface interface-name {  
        group-limit limit;  
        host-only-interface;  
        immediate-leave;  
        multicast-router-interface;  
        static {  
            group ip-address {  
                source ip-address;  
            }  
        }  
    }  
    proxy {  
        source-address ip-address;  
    }  
    query-interval seconds;  
    query-last-member-interval seconds;  
    query-response-interval seconds;  
    robust-count number;  
}  
}
```

Syntax (SRX Series)	<pre> igmp-snooping { vlan (all <i>vlan-name</i>) { immediate-leave; interface <i>interface-name</i> { group-limit <i>range</i>; host-only-interface; multicast-router-interface; immediate-leave; static { group <i>multicast-ip-address</i> { source <i>ip-address</i>; } } } } l2-querier { source-address <i>ip-address</i>; } proxy { source-address <i>ip-address</i>; } qualified-vlan <i>vlan-id</i>; query-interval <i>number</i>; query-last-member-interval <i>number</i>; query-response-interval <i>number</i>; robust-count <i>number</i>; traceoptions { file <i>filename</i> <files <i>number</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i> <<i>flag-modifier</i>>; } } </pre>
Hierarchy Level	<p>[edit bridge-domains <i>bridge-domain-name</i> protocols],</p> <p>[edit routing-instances <i>routing-instance-name</i> bridge-domains <i>bridge-domain-name</i> protocols]</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols]</p> <p>[edit protocols]</p>
Release Information	<p>Statement introduced in Junos OS Release 8.5.</p> <p>Statement introduced in Junos OS Release 18.1R1 for SRX1500 devices.</p> <p>Statement introduced in Junos OS Release 9.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p>

Description Configure IGMP snooping to constrain multicast traffic to only the ports that have receivers attached. IGMP snooping enables the device to selectively send out multicast packets on only the ports that need them. Without IGMP snooping, the device floods the packets on every port. The device listens for the exchange of IGMP messages by the device and the end hosts. In this way, the device builds an IGMP snooping table that has a list of all the ports that have requested a particular multicast group. The factory default configuration enables IGMP snooping on all VLANs.



NOTE: IGMP snooping must be disabled on the device before enabling ISSU.

Default IGMP snooping is disabled on the device.

Options The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Documentation

- *IGMP Snooping in MC-LAG Active-Active Mode*
- *Example: Configuring IGMP Snooping on SRX Series Devices*
- *IGMP Snooping Overview*

ignore

Syntax ignore;

Hierarchy Level [edit interfaces *interface-name* sonet-options **trigger defect**]

Release Information Statement introduced before Junos OS Release 7.4.

Description For ATM over SONET/SDH and SONET/SDH interfaces only, ignore a specific SONET/SDH defect trigger.

Default If you do not include this statement, all defects are honored with no hold time.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring SONET/SDH Defect Triggers*
- [hold-time \(Physical Interface\) on page 666](#)

ignore-all

Syntax	ignore-all;
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Ignore all control leads. You can include the ignore-all statement in the configuration only if you do not explicitly enable other signal handling options at the dte-options hierarchy level.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Signal Handling on page 352

ignore-l3-incompletes

Syntax	ignore-l3-incompletes;
Hierarchy Level	[edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced in Junos OS Release 9.0. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	Ignore the counting of Layer 3 incomplete errors on Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Ignoring Layer 3 Incomplete Errors

ilmi

Syntax	ilmi;
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Enable the router to communicate with directly attached ATM switches and routers. The router uses the VC 0.16 to communicate with the ATM switch or router. Once configured, you can display the IP address and port number of an ATM switch or router using the show interfaces <i>interface-name</i> switch-id command.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Communication with Directly Attached ATM Switches and Routers</i>• <i>show ilmi</i>• <i>show ilmi statistics</i>

ima-group-options

```
Syntax  ima-group-options {
        differential-delay number;
        frame-length (32 |64 |128 |256);
        frame-synchronization {
            alpha number;
            beta number;
            gamma number;
        }
        minimum-links number;
        symmetry (symmetrical-config-and-operation |
            symmetrical-config-asymmetrical-operation);
        test-procedure {
            ima-test-start;
            ima-test-stop;
            interface name;
            pattern number;
            period number;
        }
        transmit-clock (common |independent);
        version (1.0 |1.1);
    }
```

Hierarchy Level [edit interfaces (t1-fpc/pic/port:m:n | e1-fpc/pic/port:n | t1|e1-fpc/pic/port)]

Release Information Statement introduced in Junos OS Release 10.0.
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

Description Specify IMA group options.

Options **differential-delay *msec***—Maximum differential delay among links in msec.

Range: 1 through 56

Default: 25

frame-length (32 |64 |128 |256)—IMA frame length in number of cells.

Default: 128

frame-synchronization—IMA group frame synchronization selection.

alpha *number*—Number of consecutive invalid ICP cells for IFSM.

Range: 1 through 2

Default: 2

beta *number*—Number of consecutive errored ICP cells for IFSM.

Range: 1 through 2

Default: 2

gamma *number*—Number of consecutive valid ICP cells for IFSM.

Range: 1 through 5

Default: 1

minimum-links *number*—IMA group minimum active links.

Range: 1 through 8

Default: 1

symmetry (symmetrical-config-and-operation | symmetrical-config-asymmetrical-operation)—IMA group symmetry mode selection.

test-procedure—Specify an IMA link interface test.

ima-test-start—Start IMA group test.

ima-test-stop—Stop IMA group test.

interface *name*—Interface name of the IMA link to test.

pattern *number*—IMA test pattern.

Range: 1 through 254

Default: 170

period *seconds*—Length of IMA pattern test in seconds.

Range: 1 through 4,294,967,294.

Default: 10

transmit-clock (common |independent)—Transmit clock configuration.

Default: common

version (1.0 |1.1)—IMA specification version.

Required Privilege Level	interface—To view this statement in the configuration.
	interface-control—To add this statement to the configuration.

Related Documentation	<ul style="list-style-type: none"> • <i>ATM Support on Circuit Emulation PICs Overview</i> • ima-link-options on page 686 • <i>Understanding Inverse Multiplexing for ATM</i>
------------------------------	--

ima-link-options

Syntax	<code>ima-link-options group <i>g</i></code>
Hierarchy Level	<code>[edit interfaces (t1-<i>fpc/pic/port:m:n</i> e1-<i>fpc/pic/port:n</i> t1 e1-<i>fpc/pic/port</i>)]</code>
Release Information	Statement introduced in Junos OS Release 10.0. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
Description	Specify an interface as a member of an IMA group.
Options	group <i>g</i> —Implying at-x/y/g .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ATM Support on Circuit Emulation PICs Overview</i>• ima-group-options on page 684

inactivity-timeout

Syntax	<code>inactivity-timeout <i>seconds</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> services-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For adaptive services interfaces, configure the inactivity timeout period for established flows. The timeout configured in the application protocol definition overrides this value.
Options	<i>seconds</i> —Timeout period, in seconds. Range: 4 through 86,400 seconds Default: 30 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

incoming-map

Syntax `incoming-map {
 caller caller-number | accept-all;
}`

Hierarchy Level `[edit interfaces dln unit logical-unit-number dialer-options],`
`[edit logical-systems logical-system-name interfaces dln unit logical-unit-number`
`dialer-options]`

Release Information Statement introduced in Junos OS Release 7.5.

Description On J Series Services Routers with interfaces configured for ISDN, specify the dialer to accept incoming calls.

The remaining statements are explained separately. See [CLI Explorer](#).



NOTE: The `incoming-map` statement is mandatory for the router to accept any incoming ISDN calls.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation

- *Junos OS Interfaces and Routing Configuration Guide*

indication

Syntax	<code>indication (ignore normal require);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For X.21 interfaces only, configure the from-DCE signal indication.
Options	<p>ignore—The from-DCE signal is ignored.</p> <p>normal—Normal indication signal handling as defined by ITU-T Recommendation X.21.</p> <p>require—The from-DCE signal must be asserted.</p> <p>Default: normal</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Signal Handling on page 352

indication-polarity

Syntax	indication-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For X.21 interfaces only, configure the indication signal polarity.
Options	positive —Positive signal polarity. negative —Negative signal polarity. Default: positive
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Serial Signal Polarities on page 355

ingress-policer-overhead

Syntax	<code>ingress-policer-overhead bytes;</code>
Hierarchy Level	<code>[edit chassis fpc slot-number pic pic-number]</code>
Release Information	Statement introduced before Junos OS Release 11.1. Statement introduced in Junos OS Release 15.1X49-D30 for vSRX.
Description	<p>Add the configured number of bytes to the length of a packet entering the interface.</p> <p>Configure a policer overhead to control the rate of traffic received on an interface. Use this feature to help prevent denial-of-service (DoS) attacks or to enforce traffic rates to conform to the service-level agreement (SLA). When you configure a policer overhead, the configured policer overhead value (bytes) is added to the length of the final Ethernet frame. This calculated length of frame is used to determine the policer or the rate-limiting action.</p> <p>Traffic policing combines the configured policy bandwidth limits and the burst size to determine how to meter the incoming traffic. If you configure a policer overhead on an interface, Junos OS adds those bytes to the length of incoming Ethernet frames. This added overhead fills each frame closer to the burst size, allowing you to control the rate of traffic received on an interface.</p> <p>You can configure the policer overhead to rate-limit queues and Layer 2 and Layer 3 policers, for standalone (SA) and high-availability (HA) deployments. The policer overhead and the shaping overhead can be configured simultaneously on an interface.</p>



NOTE: vSRX supports policer overhead on Layer 3 policers only.

The policer overhead applies to all interfaces on the PIC. In the following example, Junos OS adds 10 bytes of overhead to all incoming Ethernet frames on ports ge-0/0/0 through ge-0/0/4.

```
set chassis fpc 0 pic 0 ingress-policer-overhead 10
```



NOTE: vSRX only supports fpc 0 pic 0. When you commit the `ingress-policer-overhead` statement, the vSRX takes the PIC offline and then back online.

You need to craft the policer overhead size to match your network traffic. A value that is too low will have minimal impact on traffic bursts. A value that is too high will rate-limit too much of your incoming traffic.

In this example, the policer overhead of 255 bytes is configured for ge-0/0/0 through ge-0/0/4. The firewall policer is configured to discard traffic when the burst size is over 1500 bytes. This policer is applied to ge-0/0/0 and ge 0/0/1. Junos OS adds 255 bytes to every Ethernet frame that comes into the configured ports. If, during a burst of traffic, the combined length of incoming frames and the overhead bytes exceeds 1500 bytes, the policer starts to discard further incoming traffic.

```
set chassis fpc 0 pic 0 ingress-policer-overhead 255
set interfaces ge-0/0/0 unit 0 family inet policer input overhead_policer
set interfaces ge-0/0/0 unit 0 family inet address 10.9.1.2/24
set interfaces ge-0/0/1 unit 0 family inet policer input overhead_policer
set interfaces ge-0/0/1 unit 0 family inet address 10.9.2.2/24
set firewall policer overhead_policer if-exceeding bandwidth-limit 32k
set firewall policer overhead_policer if-exceeding burst-size-limit 1500
set firewall policer overhead_policer then discard
```

Options *bytes*—Number of bytes added to a frame entering an interface.
Range: 0–255 bytes
Default: 0

```
[edit chassis fpc 0 pic 0]
user@host# set ingress-policer-overhead 10;
```

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation

- *ingress-shaping-overhead*
- *Policer Overhead to Account for Rate Shaping Overview*
- *Example: Configuring Policer Overhead to Account for Rate Shaping*
- *Configuring a Policer Overhead*
- *CoS on Enhanced IQ2 PICs Overview*

ingress-rate-limit

Syntax	<code>ingress-rate-limit <i>rate</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> fastether-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Perform port-based rate limiting on ingress traffic arriving on Fast Ethernet 8-port, 12-port, and 48-port PICs.
Options	rate —Traffic rate, in megabits per second (Mbps). Range: 1 through 100 Mbps
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Ingress Rate Limit</i>

init-command-string

Syntax	<code>init-command-string <i>initialization-command-string</i>;</code>
Hierarchy Level	[edit interfaces umd0 modem-options]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	<p>For J Series Services Routers, configure the command string used to initialize the USB modem.</p> <p>When you connect the USB modem to the USB port on a Services Router, the router applies the modem AT commands configured in the init-command-string command to the initialization commands on the modem.</p> <p>For example, the initialization command string ATS0 = 2 configures the USB modem to pick up a call after 2 rings.</p> <p>If you do not include the init-command-string statement, the router applies the default initialization string to the modem.</p>
Options	<p><i>initialization-command-string</i>—Specify an initialization command string using the following AT command values:</p> <ul style="list-style-type: none"> • %C0—Disables data compression. • &C1—Disables reset of the modem when it loses the carrier signal. • &Q8—Enables Microcom Networking Protocol (MNP) error control mode. • AT—Attention. Informs the modem that a command follows. • E0—Disables the display on the local terminal of commands issued to the modem from the local terminal. • Q0—Enables the display of result codes. • S0=0—Disables the auto-answer feature, whereby the modem automatically answers calls. • S7=45—Instructs the modem to wait 45 seconds for a telecommunications service provider (carrier) signal before terminating the call. • V1—Displays result codes as words. <p>Default: <code>AT S7=45 S0=0 V1 X4 &C1 E0 Q0 &Q8 %C0</code></p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- [Specifying a USB Modem Interface on J Series Routers on page 359](#)

initial-route-check

Syntax	<code>initial-route-check <i>seconds</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>dl</i> unit <i>logical-unit-number</i> dialer-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers with ISDN interfaces, allows the router to check whether the primary route is up after the initial startup of the router is complete and the timer expires.
Options	<p><i>seconds</i>—How long to wait to check if the primary interface is up after the router comes up.</p> <p>Range: 1 through 300 seconds</p> <p>Default: 120 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• ISDN Interfaces Overview• Junos OS Interfaces and Routing Configuration Guide

inner-tag-protocol-id

Syntax	<code>inner-tag-protocol-id <i>tpid</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> input-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> output-vlan-map]</code>
Release Information	<p>Statement introduced in Junos OS Release 8.1.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>
Description	<p>Configure the IEEE 802.1Q TPID value to rewrite for the inner tag.</p> <p>All TPIDs you include in input and output VLAN maps must be among those you specify at the <code>[edit interfaces <i>interface-name</i> gather-options ethernet-switch-profile tag-protocol-id [<i>tpids</i>]]</code> hierarchy level.</p> <p>On MX Series routers, you can use this statement for Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs.</p>
Default	If the <code>inner-tag-protocol-id</code> statement is not configured, the TPID value is 0x8100.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Inner and Outer TPIDs and VLAN IDs</i>

inner-vlan-id

Syntax	<code>inner-vlan-id <i>number</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>input-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>output-vlan-map]</code>
Release Information	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	<p>For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers or 100-Gigabit Ethernet Type 5 PIC with CFP, or on Ethernet interfaces on EX Series switches, specify the VLAN ID to rewrite for the inner tag of the final packet.</p> <p>You cannot include the inner-vlan-id statement with the swap statement, swap-push statement, push-push statement, or push-swap statement and the inner-vlan-id statement at the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]</code> hierarchy level. If you include any of those statements in the output VLAN map, the VLAN ID in the outgoing frame is rewritten to the inner-vlan-id statement you include at the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code> hierarchy level.</p>
Options	number —VLAN ID number. Range: 0 through 4094
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Inner and Outer TPIDs and VLAN IDs</i>

inner-vlan-id-range

Syntax	<code>inner-vlan-id-range start <i>start-id</i> end <i>end-id</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code>
Release Information	Statement introduced in Junos OS Release 9.0.
Description	The range of VLAN IDs to be used in the ATM-to-Ethernet interworking cross-connect. Specify the starting VLAN ID and ending VLAN ID.
Options	<i>start-id</i> —The lowest VLAN ID to be used. <i>end-id</i> —The highest VLAN ID to be used. Range: 32 through 4094
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring ATM-to-Ethernet Interworking on page 286

input

Syntax	<pre>input { service-set service-set-name <service-filter filter-name>; post-service-filter filter-name; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet service], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet service]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define one or more input service sets and filters, and one postservice filter to be applied to traffic.
Options	The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

input-list

Syntax	<code>input-list [<i>filter-names</i>];</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> filter],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> filter]</code>
Release Information	Statement introduced in Junos OS Release 7.6.
Description	Apply a group of filters to evaluate when packets are received on an interface.
Options	<code>[<i>filter-names</i>]</code> —Name of a filter to evaluate when packets are received on the interface. Up to 16 filters can be included in a filter input list.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Applying a Filter to an Interface on page 238 • <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide</i> • <i>Junos OS Administration Library</i> • output-list on page 879

input-policer

Syntax	<code>input-policer <i>policer-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]</code>
Release Information	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Apply a single-rate two-color policer to the Layer 2 input traffic at the logical interface. The input-policer and input-three-color statements are mutually exclusive.
Options	<i>policer-name</i> —Name of the single-rate two-color policer that you define at the [edit firewall] hierarchy level.
Usage Guidelines	See <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Two-Color and Three-Color Policers at Layer 2</i>• <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i>• <i>Configuring a Gigabit Ethernet Policer</i>• input-three-color on page 702• layer2-policer on page 745• logical-interface-policer on page 774• output-policer on page 880• output-three-color on page 882

input-priority-map

Syntax	<pre>input-priority-map { ieee802.1p premium [values]; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile]</p> <p>[edit interfaces <i>interface-name</i> ether-options ethernet-switch-profile ethernet-policer-profile]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p>
Description	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, define the input policer priority map to be applied to incoming frames on this interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Specifying an Input Priority Map • output-priority-map on page 881


input-three-color

Syntax	<code>input-three-color <i>policer-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]</code>
Release Information	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Apply a single-rate or two-rate three-color policer to the Layer 2 input traffic at the logical interface. The input-three-color and input-policer statements are mutually exclusive.
Options	<i>policer-name</i> —Name of the single-rate or two-rate three-color policer.
Usage Guidelines	See <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Two-Color and Three-Color Policers at Layer 2</i>• <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i>• <i>Configuring a Gigabit Ethernet Policer</i>• input-policer on page 700• layer2-policer on page 745• logical-interface-policer on page 774• output-policer on page 880• output-three-color on page 882

input-vlan-map (Aggregated Ethernet)

Syntax	<pre>input-vlan-map { (pop push swap); tag-protocol-id <i>tpid</i>; vlan-id <i>number</i>; }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</pre>
Release Information	<p>Statement introduced in Junos OS Release 8.2.</p> <p>Starting in Junos OS Release 17.3R1, input-vlan-map for outer vlan is supported for L2 circuit over aggregated Ethernet interfaces for QFX10000 Series switches.</p>
Description	<p>Define the rewrite profile to be applied to incoming frames on this logical interface. On MX Series routers, this statement only applies to aggregated Ethernet interfaces using Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ2 and IQ2-E interfaces and 100-Gigabit Ethernet Type 5 PIC with CFP.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Stacking a VLAN Tag • output-vlan-map (Aggregated Ethernet) on page 883

input-vlan-map

Syntax	<pre>input-vlan-map { (pop pop-pop pop-swap push push-push swap swap-push swap-swap); inner-tag-protocol-id <i>tpid</i>; inner-vlan-id <i>number</i>; tag-protocol-id <i>tpid</i>; vlan-id <i>number</i>; }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>pop-pop, pop-swap, push-push, swap-push, and swap-swap statements introduced in Junos OS Release 8.1.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X50-D15 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.</p>
Description	<p>For Gigabit Ethernet IQ, 10-Gigabit Ethernet SFPP interfaces, 100-Gigabit Ethernet Type 5 PIC with CFP only as well as Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces, define the rewrite profile to be applied to incoming frames on this logical interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 20px;"> <p> NOTE: Connectivity fault management (CFM) sessions for all interfaces in which input-vlan-map is configured are supported only if the interface also has an explicit configuration for output-vlan-map as output-vlan-map pop. See output-vlan-map. This configuration is required for all the interfaces in the topology even when the CFM session is on that interface or on a different interface in the data path of the same topology.</p> </div>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Stacking a VLAN Tag output-vlan-map on page 884 Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support

instance

Syntax	<code>instance <i>vpls-instance-name</i>;</code>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>name</i>]
Release Information	Statement introduced in Junos OS Release 9.4.
Description	Specify the VPLS instance of the default maintenance domain.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Maintenance Intermediate Points (MIPs)</i> • maintenance-domain on page 796

interface (Hierarchical CoS Schedulers)

Syntax	<code>interface <i>interface-name</i>;</code>
Hierarchy Level	[edit interfaces interface-set <i>interface-set-name</i>]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Specify an interface that is a member of the interface set. Supported on Ethernet interfaces on an MX Series router, Ethernet interfaces on IQ2E PIC on M Series and T Series routers, and IP demux interfaces on an MX Series router.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Class of Service Feature Guide for Routers and EX9200 Switches</i>

interface (IEEE 802.1x)

Syntax	<pre>interface <i>interface-id</i> { maximum-requests <i>integer</i>; quiet-period <i>seconds</i>; reauthentication (disable interval <i>seconds</i>); retries <i>integer</i>; server-timeout <i>seconds</i>; supplicant (<i>single</i>); supplicant-timeout <i>seconds</i>; transmit-period <i>seconds</i>; }</pre>
Hierarchy Level	[edit protocols dot1x authenticator]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Use this statement to configure the 802.1x Port-Based Network Access Control protocol-specific Ethernet interface options.
Default	The default values are provided for the options below on the respective statement pages.
Options	<p>maximum-requests—Specify the maximum number of retransmission times for an EAPOL Request packet to the client before it times out the authentication session.</p> <p>quiet-period—Specify the number of seconds the port remains in the wait state following a failed authentication exchange with the client, before reattempting the authentication.</p> <p>reauthentication—Includes two options:</p> <ul style="list-style-type: none">• disable—Periodic reauthentication of the client is disabled.• interval—Specify the periodic reauthentication time interval. <p>retries—Specify the number of tries after which the port remains in the wait state for quiet-period seconds before reattempting the authentication.</p> <p>server-timeout—Specify the number of seconds the port waits for a reply when relaying a response from the client to the authentication server before timing out and invoking the server-fail action.</p> <p>supplicant (<i>single</i>)—Specify supplicant single mode. See the usage guidelines to configure other modes.</p> <p>supplicant-timeout—Specify the number of seconds the port waits for a response when relaying a request from the authentication server to the client before resending the request.</p>


transmit-period—Specify the number of seconds the port waits before retransmitting the initial EAPOL PDUs to the client.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- *IEEE 802.1x Port-Based Network Access Control Overview*
- [authenticator on page 460](#)
- [dot1x on page 561](#)

interface (IEEE 802.1ag OAM Connectivity-Fault Management)

Syntax	<code>interface (interface-name ((ge- xe-) (fpc/pic/port fpc/pic/port.unit-number fpc/pic/port.unit-number vlan vlan-id)));</code>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i>]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	<p>For Ethernet interfaces on M320, MX Series, and T Series routers, configure IEEE 802.1ag Operation, Administration, and Management (OAM) support.</p> <p>For Gigabit Ethernet interfaces and 10-Gigabit Ethernet interfaces on MX Series routers, configure IEEE 802.1ag Connectivity Fault Management (CFM) support on trunk interface ports.</p> <p>Starting in Junos OS 17.4R1, you can enable support for IEEE 802.1ag CFM on pseudowire service interfaces by configuring maintenance intermediate points (MIPs) on the pseudowire service interfaces.</p>
	<div>  <p>NOTE: The CFM MIP session is supported only on the pseudowire services interface and not on the pseudowire services tunnel interface.</p> </div>
Options	interface-name —Interface to which the MEP is attached. It could be a physical Ethernet interface, logical Ethernet interface, pseudowire services interfaces, or on a specific VLAN of a trunk port interface (MX Series only).
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i>

interface (OAM Link-Fault Management)

List of Syntax	<p>Syntax: T, M, MX and ACX Series Routers, SRX Series Firewalls and EX Series Switches on page 709</p> <p>Syntax: EX Series Switches and NFX Series Devices on page 709</p>
<p>Syntax: T, M, MX and ACX Series Routers, SRX Series Firewalls and EX Series Switches</p>	<pre> interface <i>interface-name</i> { apply-action-profile <i>profile-name</i>; link-discovery (active passive); pdu-interval <i>interval</i>; pdu-threshold <i>threshold-value</i>; remote-loopback; event-thresholds { frame-error <i>count</i>; frame-period <i>count</i>; frame-period-summary <i>count</i>; symbol-period <i>count</i>; } negotiation-options { allow-remote-loopback; no-allow-link-events; } } </pre>
<p>Syntax: EX Series Switches and NFX Series Devices</p>	<pre> interface <i>interface-name</i> { link-discovery (active passive); pdu-interval <i>interval</i>; pdu-threshold <i>threshold-value</i>; remote-loopback; event-thresholds { frame-error <i>count</i>; frame-period <i>count</i>; frame-period-summary <i>count</i>; symbol-period <i>count</i>; } negotiation-options { allow-remote-loopback; no-allow-link-events; } } </pre>
Hierarchy Level	[edit protocols oam ethernet link-fault-management]
Release Information	<p>Statement introduced in Junos OS Release 8.2 for T, M, MX and ACX Series Routers, SRX Series firewalls and EX Series switches.</p> <p>Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.</p>

Description	<p>Configure Ethernet OAM link fault management (LFM) for all interfaces or for specific interfaces.</p> <p>For Ethernet interfaces on M320, MX Series, and T Series routers, configure IEEE 802.3ah Operation, Administration, and Management (OAM) support.</p>
Options	<p>interface <i>interface-name</i>—Interface to be enabled for IEEE 802.3ah link fault management OAM support.</p> <p>The remaining statements are described separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p> <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Enabling IEEE 802.3ah OAM Support</i>• <i>Example: Configuring Ethernet OAM Link Fault Management</i>• <i>Configuring Ethernet OAM Link Fault Management</i>

interface (Port Mirroring)

Syntax	<pre>interface <i>interface-name</i> { next-hop <i>address</i>; }</pre>
Hierarchy Level	[edit forwarding-options port-mirroring family (inet inet6) output]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the output interface for sending copies of packets elsewhere to be analyzed.
Options	<p><i>interface-name</i>—Name of the interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Usage Guidelines	See <i>Configuring Port Mirroring on M, T MX, and PTX Series Routers</i> .
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

interface-down

Syntax	interface-down;
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management action-profile profile-name default-actions]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Bring the interface down when a remote MEP connectivity failure is detected.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring a CFM Action Profile to Specify CFM Actions for CFM Events</i>

interface-name

Syntax	interface-name;
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure vlan-ranges authentication username-include], [edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges authentication username-include],
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Append the interface name and VLAN ID or stacked VLAN ID to the username string used for authentication. The appended information takes the following format: <ul style="list-style-type: none"> • For single VLAN—<interface-name>:<4-digit-vlan-id> • For stack VLANs—<interface-name>:<4-digit-svlan-id>-<4-digit-vlan-id>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring VLAN Interface Username Information for AAA Authentication</i>

interface-none

Syntax	interface-none;
Hierarchy Level	[edit protocols protection-group ethernet-ring ring-name east-interface] [edit protocols protection-group ethernet-ring ring-name west-interface]
Description	Designates port as not used for Ethernet ring protection.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Ethernet Ring Protection Switching Overview</i>• <i>Ethernet Ring Protection Using Ring Instances for Load Balancing</i>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i>

interface-range

Syntax

```
interface-range name {
  member-range interface-name-fpc/pic/port to interface-name-fpc/pic/port;
  member interface-name-fpc/pic/port;
  member interface-name-fpc/[low-high]/*;
  member interface-name-fpc/[pic1,pic2,pic3...picN]/port
  /*Common config is added as part of interface-range definition, as follows*/
  mtu 256;
  hold-time up 10;
  ether-options {
    flow-control;
    speed {
      100m;
    }
    802.3ad primary;
  }
}
```

Hierarchy Level [edit [interfaces](#)]

Release Information Statement introduced in Junos OS Release 10.0.

Description Specify a set of identical interfaces as an interface group, to which you can apply a common configuration to the entire set of interfaces. This group can consist of both lexical member ranges of interfaces specified using the **member-range** *interface-type-fpc/pic/port to xx-fpc/pic/port* option (regex not supported), and of individual or non-sequential members using the **member** *interface-type-fpc/pic/port* option (with regex support to specify the *fpc/pic/port* values).

Options **member-range**—Adds interfaces in lexical order. Regex is not supported.

Format:—member-range <start-range> to <end-range>

Example:—member-range ge-0/0/0 to ge-4/0/40;

member—To add individual interfaces or multiple interfaces using regex.

Format:—member <list of interface names>

Example:—member ge-0/0/0;

member ge-0/1/1;

member ge-0/*/*;

member ge-0/[1-10]/0;

member ge-1/[1,3,6,10]/12

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring Interface Ranges on page 90](#)

interface-transmit-statistics

Syntax interface-transmit-statistics;

Hierarchy Level [edit interface *interface-name*]

Release Information Statement introduced in Junos OS Release 11.4R3 for MX Series devices.

Description Configure the interface to report the transmitted load statistics. If this statement is not included in the configuration, the interface statistics show the offered load on the interface, and not the actual transmitted load.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Improvements to Interface Transmit Statistics Reporting on page 1176](#)
- [show interfaces on page 1177](#)

interface-set (Ethernet Interfaces)

Syntax

```
interface-set interface-set-name {  
  interface ethernet-interface-name {  
    (unit unit-number | vlan-tags-outer vlan-tag);  
  }  
}
```

Hierarchy Level [edit interfaces]

Release Information Statement introduced in Junos OS Release 8.5.

Description The set of interfaces used to configure hierarchical CoS schedulers on Ethernet interfaces on the MX Series router and IQ2E PIC on M Series and T Series routers.

The remaining statements are described separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *interface-set (Hierarchical Schedulers)*

interface-set (IP Demux Interfaces)

Syntax

```
interface-set interface-set-name {  
  interface interface-name {  
    unit unit-number;  
  }  
}
```

Hierarchy Level [edit interfaces]

Release Information Statement introduced in Junos OS Release 9.2.

Description The set of interfaces used to configure hierarchical CoS schedulers for subscribers on IP demux interfaces on the MX Series router.

The remaining statements are described separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Junos Subscriber Access Configuration Guide*
- *Interfaces Fundamentals for Routing Devices*

interface-shared-with

Syntax	<code>interface-shared-with psdn;</code>
Hierarchy Level	[edit interfaces <i>ge-fpc/pic/slot</i> unit <i>logical-unit-number</i>], [edit interfaces <i>so-fpc/pic/slot</i> unit <i>logical-unit-number</i>], [edit interfaces <i>xe-fpc/pic/slot</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Assign a logical interface under a shared physical interface to a Protected System Domain (PSD).
Options	<i>n</i> —PSD identification as a numeric value. Range: 1 through 31
Required Privilege Level	view-level—To view this statement in the configuration. control-level—To add this statement to the configuration.
Related Documentation	

interface-status-tlv

Syntax	<code>interface-status-tlv [down lower-layer-down];</code>
Hierarchy Level	<code>[edit protocols oam ethernet connectivity-fault-management action-profile profile-name event]</code> <code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain domain-name maintenance-association ma-name continuity-check]</code>
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Defines an action-profile consisting of various events and the action. Based on values of interface-status-tlv in the received CCM packets, specific action such as <i>interface-down</i> can be taken using action-profile options.
Options	down —When the incoming CCM packet contains interface status TLV with value down, the action will be triggered for this action-profile. lower-layer-down —When the incoming CCM packet contains interface status TLV with value lower-layer-down, the action will be triggered for this action-profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Remote MEP Action Profile Support</i>

interface-switch

Syntax	<pre>interface-switch <i>connection-name</i> { interface <i>interface-name.unit-number</i>; }</pre>
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> protocols connections], [edit protocols connections]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure Layer 2 switching cross-connects. The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first.</p> <p>For Layer 2 switching cross-connects to work, you must also configure MPLS.</p>
Options	<p><i>connection-name</i>—Connection name (up to 128 characters in Junos 12.3 and later).</p> <p><i>interface interface-name.unit-number</i>—Interface name. Include the logical portion of the name, which corresponds to the logical unit number.</p>
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the CCC Connection for Layer 2 Switching Cross-Connects</i> • Defining the Connection for Switching Cross-Connects on page 285 • <i>MPLS Applications Feature Guide</i>

interface-type (Interfaces)

Syntax	<code>interface-type (bc coc1 ct1 ct3 dc ds so t1 t3);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-range name</i> no-partition],</code> <code>[edit interfaces <i>interface-range name</i> partition <i>partition-number</i>],</code> <code>[edit interfaces <i>interface-range name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i>],</code> <code>[edit interfaces <i>interface-range name</i> partition <i>partition-number</i> timeslot <i>timeslot-range</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For IQ and IQE interfaces only, configure the sublevel interface type.
Options	<p>bc—Dual—Port Channelized E1 and T1 ISDN PRI interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> timeslot <i>timeslot-range</i>]</code> hierarchy level to create a bearer (B) channel <code>bc-pim/0/port:channel</code> interface for each time you want to function as an ISDN PRI B-channel.</p> <p>coc1—Channelized OC1 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type coc12-fpc/pic/port]</code> hierarchy level.</p> <p>ct1—Channelized T1 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> interface-type ct3-fpc/pic/port<:channel>]</code> hierarchy level.</p> <p>ct3—Channelized T3 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type coc1-fpc/pic/port:channel no-partition]</code> hierarchy level.</p> <p>dc—Dual-Port Channelized E1 and T1 ISDN PRI interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> timeslot <i>timeslot-range</i>]</code> hierarchy level to create a (D) channel <code>dc-pim/0/port</code> to control the B-channels.</p> <p>ds—DS0 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> interface-type (ce1-fpc/pic/port ct1-fpc/pic/port<:channel>)]</code> hierarchy level.</p> <p>so—SONET/SDH interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type coc12-fpc/pic/port]</code> hierarchy level.</p> <p>t1—T1 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type (coc12-fpc/pic/port coc1-fpc/pic/port)]</code> hierarchy level.</p>

t3—T3 interface type. You can specify this interface type at the **[edit interfaces interface-name partition partition-number oc-slice oc-slice-range interface-type (coc12-fpc/pic/port | coc1-fpc/pic/port:channel no-partition)]** hierarchy level.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Channelized E1 IQ and IQE Interfaces Overview*
- *Channelized OC12/STM4 IQ and IQE Interfaces Overview*
- *Configuring Channelized T3 IQ Interfaces*

interfaces

List of Syntax	Syntax (QFX Series) on page 722 Syntax (EX Series, MX Series and T Series) on page 722
Syntax (QFX Series)	<pre>interfaces <i>interface-name</i> { no-mac-learning; }</pre>
Syntax (EX Series, MX Series and T Series)	<pre>interfaces { ... }</pre>
QFX Series	<pre>[edit ethernet-switching-options]</pre>
EX Series, MX Series and T Series	<pre>[edit]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	Configure settings for interfaces that have been assigned to family ethernet-switching .
Default	The management and internal Ethernet interfaces are automatically configured. You must configure all other interfaces.
Options	<p><i>interface-name</i> —Name of an interface that is configured for family ethernet-switching.</p> <p>The remaining statement is explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p> <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Physical Interface Configuration Statements Overview on page 64 • Configuring Aggregated Ethernet Link Protection

interfaces (Static and Dynamic Subscribers)

```
Syntax interfaces {
    interface-name {
        unit logical-unit-number {
            actual-transit-statistics;
            auto-configure {
                agent-circuit-identifier {
                    dynamic-profile profile-name;
                }
            }
            line-identity {
                include {
                    accept-no-ids;
                    circuit-id;
                    remote-id;
                }
                dynamic-profile profile-name;
            }
        }
    }
    family family {
        access-concentrator name;
        address address;
        direct-connect;
        duplicate-protection;
        dynamic-profile profile-name;
        filter {
            adf {
                counter;
                input-precedence precedence;
                not-mandatory;
                output-precedence precedence;
                rule rule-value;
            }
            input filter-name {
                precedence precedence;
                shared-name filter-shared-name;
            }
            output filter-name {
                precedence precedence;
                shared-name filter-shared-name;
            }
        }
        max-sessions number;
        max-sessions-vsa-ignore;
        rpf-check {
            mode loose;
        }
        service {
            input {
                service-set service-set-name {
                    service-filter filter-name;
                }
            }
            post-service-filter filter-name;
        }
    }
}
```

```

    }
    output {
        service-set service-set-name {
            service-filter filter-name;
        }
    }
}
service-name-table table-name
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
    maximum-seconds>;
unnumbered-address interface-name <preferred-source-address address>;
}
filter {
    input filter-name (
        precedence precedence;
        shared-name filter-shared-name;
    )
    output filter-name {
        precedence precedence;
        shared-name filter-shared-name;
    }
}
host-prefix-only;
ppp-options {
    chap;
    pap;
}
proxy-arp;
service {
    pcef pcef-profile-name {
        activate rule-name | activate-all;
    }
}
targeted-options {
    backup backup;
    group group;
    primary primary;
    weight ($junos-interface-target-weight | weight-value);
}
vlan-id;
vlan-tags outer [tpid].vlan-id [inner [tpid].vlan-id];
}
vlan-tagging;
}
interface-set interface-set-name {
    interface interface-name {
        unit logical unit number {
            advisory-options {
                downstream-rate rate;
                upstream-rate rate;
            }
        }
    }
}
pppoe-underlying-options {
    max-sessions number;
}

```



```


    }
  }
  demux0 {
    unit logical-unit-number {
      demux-options {
        underlying-interface interface-name
      }
      family family {
        access-concentrator name;
        address address;
        direct-connect;
        duplicate-protection;
        dynamic-profile profile-name;
        demux-source {
          source-prefix;
        }
        filter {
          input filter-name (
            precedence precedence;
            shared-name filter-shared-name;
          )
          output filter-name {
            precedence precedence;
            shared-name filter-shared-name;
          }
        }
        mac-validate (loose | strict);
        max-sessions number;
        max-sessions-vsa-ignore;
        rpf-check {
          fail-filter filter-name;
          mode loose;
        }
        service-name-table table-name
        short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
          maximum-seconds>;
        unnumbered-address interface-name <preferred-source-address address>;
      }
      filter {
        input filter-name;
        output filter-name;
      }
      vlan-id number;
      vlan-tags outer [tpid].vlan-id [inner [tpid].vlan-id];
    }
  }
  pp0 {
    unit logical-unit-number {
      keepalives interval seconds;
      no-keepalives;
      pppoe-options {
        underlying-interface interface-name;
        server;
      }
      ppp-options {

```

```

aaa-options aaa-options-name;
authentication [ authentication-protocols ];
chap {
    challenge-length minimum minimum-length maximum maximum-length;
    local-name name;
}
ignore-magic-number-mismatch;
initiate-ncp (dual-stack-passive | ipv6 | ip)
ipcp-suggest-dns-option;
mru size;
mtu (size | use-lower-layer);
on-demand-ip-address;
pap;
peer-ip-address-optional;
local-authentication {
    password password;
    username-include {
        circuit-id;
        delimiter character;
        domain-name name;
        mac-address;
        remote-id;
    }
}
}
family inet {
    unnumbered-address interface-name;
    address address;
    service {
        input {
            service-set service-set-name {
                service-filter filter-name;
            }
            post-service-filter filter-name;
        }
        output {
            service-set service-set-name {
                service-filter filter-name;
            }
        }
    }
    filter {
        input filter-name {
            precedence precedence;
            shared-name filter-shared-name;
        }
        output filter-name {
            precedence precedence;
            shared-name filter-shared-name;
        }
    }
}
}
}
}



```

Hierarchy Level	[edit dynamic-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 9.2.
Description	Define interfaces for dynamic client profiles.
Options	<p><i>interface-name</i>—The interface variable (<i>\$junos-interface-ifd-name</i>). The interface variable is dynamically replaced with the interface the DHCP client accesses when connecting to the router.</p>
<p> NOTE: Though we do not recommend it, you can also enter the specific name of the interface you want to assign to the dynamic profile.</p>	
<p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p>	
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Dynamic Subscriber Interfaces Using IP Demux Interfaces in Dynamic Profiles</i> • <i>Configuring Dynamic PPPoE Subscriber Interfaces</i> • <i>Configuring Dynamic VLANs Based on Agent Circuit Identifier Information</i> • <i>DHCP Subscriber Interface Overview</i> • <i>Subscribers over Static Interfaces Configuration Overview</i> • Demultiplexing Interface Overview on page 319

interleave-fragments

Syntax	<code>interleave-fragments;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For link services interfaces only, interleave long packets with high-priority packets.</p> <p>Allows small delay-sensitive packets, such as Voice over IP (VoIP) packets, to interleave with long fragmented packets. This minimizes the latency of delay-sensitive packets.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

interval

Syntax	interval (100ms 10m 10ms 10s 1m 1s);
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> continuity-check]
Release Information	Statement introduced in Junos OS Release 8.4. Option 10ms introduced in Junos OS Release 9.1. Third-party interoperability during a unified in-service software upgrade (ISSU) introduced in Junos OS Release 17.1.
Description	<p>Configure the interval between successive transmissions of continuity check messages (CCMs) as part of the connectivity fault detection strategy. When the receiving maintenance association end point (MEP) does not receive a CCM at the configured interval, the loss-threshold statement determines how many CCMs can be lost before the sending MEP is marked as down. The hold-interval statement then determines the frequency at which the database of MEPs in the maintenance association (MA) is flushed in the absence of updates.</p> <p>During a unified in-service software upgrade (ISSU), Junos OS connectivity fault management (CFM) works when the peer device is not a Juniper Networks router. Interoperating with the router of another vendor, the Juniper Networks router retains session information and continues to transmit CCM (continuity check message) PDUs during the unified ISSU upgrade. For this feature to work, you must enable Packet Forwarding Engine keepalives with the hardware-assisted-keepalives statement, and configure the interval between CCMs to be 1 second with interval statement.</p>
	<p> NOTE: For the continuity check message interval to be configured for 10 milliseconds, periodic packet management (PPM) runs on the Routing Engine and Packet Forwarding Engine by default. You can disable PPM only on the Packet Forwarding Engine. To disable PPM on the Packet Forwarding Engine, use the no-delegate-processing statement at the [edit routing-options ppm] hierarchy level.</p>
	<p> NOTE: A continuity check interval of 10 milliseconds is not supported for CFM sessions over a label-switched interface (LSI).</p>
Options	<p>100ms—100 milliseconds.</p> <p>10m—10 minutes.</p>

10ms—10 milliseconds.

10s—10 seconds.

1m—1 minute.

1s—1 second.

Default: 1m

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Continuity Check Protocol Parameters Overview*
- *Configuring Continuity Check Protocol Parameters for Fault Detection*
- *Configuring Connectivity Fault Management for Interoperability During Unified In-Service Software Upgrades*

inverse-arp

Syntax inverse-arp;

Hierarchy Level [edit interfaces *interface-name* unit *logical-unit-number*],
[edit interfaces *interface-name* unit *logical-unit-number* family inet address *address* multipoint-destination *destination*],
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*],
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family inet *address* *address* multipoint-destination *destination*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 11.1 for the QFX Series.

Description For ATM encapsulation, enable responses to receive inverse ATM ARP requests. For Frame Relay encapsulation, enable responses to receive inverse Frame Relay ARP requests.


Default Inverse ARP is disabled on all ATM and Frame Relay interfaces.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Inverse ATM1 or ATM2 ARP*
- *Configuring Inverse Frame Relay ARP*

invert-data

Syntax	invert-data;
Hierarchy Level	<pre>[edit interfaces e1-fpc/pic/port], [edit interfaces t1-fpc/pic/port], [edit interfaces interface-name ds0-options], [edit interfaces interface-name e1-options], [edit interfaces interface-name t1-options], [edit interfaces interface-name e3-options]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	<p>Invert the transmission of unused data bits on the DS0, E1, E3, and T1 interface.</p> <hr/> <div>  <p>NOTE: When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the invert-data statement must be included at the [edit interfaces e1-fpc/pic/port] or [edit interfaces t1-fpc/pic/port] hierarchy level as appropriate.</p> </div> <hr/>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E1 Data Inversion</i> • <i>Configuring E3 Data Inversion</i> • <i>Configuring T1 Data Inversion</i>

ipsec-sa

Syntax	<code>ipsec-sa <i>sa-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>es-fpc/pic/port</i> unit <i>logical-unit-number</i> family inet],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>es-fpc/pic/port</i> unit <i>logical-unit-number</i> family inet]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the IP Security (IPsec) security association (SA) name associated with the interface.
Options	<i>sa-name</i> —IPsec security association name.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• <i>Junos OS Administration Library</i>

isdn-options

Syntax	<pre> isdn-options { bchannel-allocation (ascending descending); calling-number number; incoming-called-number number <reject>; spid1 spid-string; spid2 spid-string; static-tei-val value; switch-type (att5e etsi nil ntdms100 ntt); t310 seconds; tei-option (first-call power-up); } </pre>
Hierarchy Level	<pre> [edit interfaces br-pim/O/port], [edit interfaces ct1-pim/O/port], [edit interfaces ce1-pim/O/port] </pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>bchannel-allocation option added in Junos OS Release 8.3.</p>
Description	<p>For J Series Services Routers only. Specify the ISDN options for configuring ISDN interfaces for group and user sessions.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring ISDN Physical Interface Properties</i> • <i>Allocating B-Channels for Dialout</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

iteration-count

Syntax	<code>iteration-count <i>count-value</i>;</code>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>md-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i> remote-mep <i>remote-mep-id</i> sla-iterator-profile <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 11.1.
Description	Configure the number of iterations for which the connection partakes in the iterator for acquiring SLA measurements.
Options	<i>count-value</i> —Number of iterations for which the connection should partake in the iterator for acquiring SLA measurements. Range: 1 through 65,535 Default: 0 (or infinite iterations)
Required Privilege Level	Configure—To enter configuration mode. Control—To modify any configuration.
Related Documentation	<ul style="list-style-type: none">• sla-iterator-profile on page 1017• <i>Configuring a Remote MEP with an Iterator Profile</i>

iteration-period

Syntax	<code>iteration-period <i>iteration-period-value</i>;</code>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management performance-monitoring sla-iterator-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 11.1. Statement introduced in Junos OS Release 11.4 for EX Series switches.
Description	Configure the iteration period, which is the maximum number of cycles per iteration (that is, the number of connections registered to an iterator cannot exceed this value).
Options	<i>iteration-period-value</i> —Maximum number of cycles per iteration. Range: 1 through 2000 Default: 2000
Required Privilege Level	Configure—To enter configuration mode. Control—To modify any configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring an Iterator Profile</i>• <i>Configuring an Iterator Profile on a Switch (CLI Procedure)</i>

keep-address-and-control

Syntax	keep-address-and-control;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with encapsulation type PPP CCC, do not remove the address and control bytes before encapsulating the packet into a tunnel.
Default	If you do not include this statement, address and control bytes are removed before encapsulating the packet into a tunnel.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Disabling the Removal of Address and Control Bytes on page 227

keepalives

Syntax	<code>keepalives <interval seconds> <down-count number> <up-count number>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Enable the sending of keepalives on a physical interface configured with PPP, Frame Relay, or Cisco HDLC encapsulation.</p> <p>For ATM2 IQ interfaces only, you can enable keepalives on a logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"> • atm-ppp-llc—PPP over AAL5 LLC encapsulation. • atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation.
Default	Sending of keepalives is enabled by default. The default keepalive interval is 10 seconds for PPP, Frame Relay, or Cisco HDLC. The default down-count is 3 and the default up-count is 1 for PPP or Cisco HDLC.
Options	<p>down-count <i>number</i>—The number of keepalive packets a destination must fail to receive before the network takes down a link. Range: 1 through 255 Default: 3</p> <p>interval <i>seconds</i>—The time in seconds between successive keepalive requests. Range: 1 through 32767 seconds Default: 10 seconds</p> <p>up-count <i>number</i>—The number of keepalive packets a destination must receive to change a link's status from down to up. Range: 1 through 255 Default: 1</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Keepalives on page 135 • Configuring Frame Relay Keepalives

- *Applying PPP Attributes to L2TP LNS Subscribers per Inline Service Interface*

key

Syntax	<code>key number;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit logical-unit-number tunnel],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit logical-unit-number tunnel]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Adaptive Services PICs on M Series routers (except the M320 and M120 routers), identify an individual traffic flow within a tunnel, as defined in RFC 2890, <i>Key and Sequence Number Extensions to GRE</i> .
Options	number —Value of the key. Range: 0 through 4,294,967,295
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

l2tp-interface-id

Syntax	<code>l2tp-interface-id <i>name</i>;</code> <code>(dedicated shared);</code>
Hierarchy Level	<code>[edit interfaces sp-<i>fpc</i>/<i>pic</i>/<i>port</i> <i>unit</i> <i>logical-unit-number</i> <i>interface</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces sp-<i>fpc</i>/<i>pic</i>/<i>port</i> <i>unit</i> <i>logical-unit-number</i></code> <code><i>interface</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the L2TP options for configuring logical interfaces for group and user sessions.
Options	(dedicated shared) —Specifies whether a logical interface can host one (dedicated) or multiple (shared) sessions at one time. <i>name</i> —Interface identifier that must be replicated at the [edit access profile <i>name</i>] hierarchy level.
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

lacp (Protocols)

Syntax	<pre>lacp { traceoptions { file <filename> <files number> <size size> <world-readable no-world-readable>; flag <flag>; no-remote-trace; } fast-hello-issu; ppm (Ethernet Switching) centralized; }</pre>
Hierarchy Level	[edit protocols]
Release Information	<p>Statement introduced in Junos OS Release 9.3.</p> <p>The ppm centralized option introduced in Junos OS Release 9.4.</p> <p>The fast-hello-issu option introduced in Junos OS Release 14.1.</p>
Description	<p>On MX and T Series routers, you can specify periodic packet management (PPM) as centralized. By default, the PPM is distributed.</p> <p>MX Series routers support Link Aggregation Control Protocol (LACP) with fast hellos during unified ISSU. This support is disabled by default. You must enable the fast-hello-issu option on the main router and on the peer routers before starting unified ISSU. Note that the peer router must also be an MX Series router for this functionality to work.</p>
Default	Distributed PPM processing is enabled for all packets that use PPM.
Options	<p>ppm—Set PPM to centralized.</p> <p>fast-hello-issu—Enable LACP with fast hellos during unified ISSU.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Tracing LACP Operations</i>

lacp (802.3ad)

Syntax	<pre>lacp { port-priority <i>port-priority</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> fastether-options 802.3ad], [edit interfaces <i>interface-name</i> gigether-options 802.3ad]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Configure the Link Aggregation Control Protocol (LACP) port priority for Ethernet interfaces.
Options	<p><i>port-priority</i>—Priority for being elected as the active port to collect and distribute traffic. A smaller value indicates a higher priority for selection.</p> <p>Range: 0 through 65,535</p> <p>Default: 127</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring LACP for Aggregated Ethernet Interfaces</i> • port-priority on page 927

lacp (Aggregated Ethernet)

List of Syntax [Syntax \(NFX Series\) on page 742](#)
[Syntax \(EX Series\) on page 742](#)

Syntax (NFX Series)

```
lacp (active | passive) {
  admin-key key;
  fast-failover;
  link-protection {
    disable;
    (revertive | non-revertive);
  }
  periodic interval
  system-ID mac-address;
  system-priority priority;
  force-up;
}
```

Syntax (EX Series)

```
lacp {
  (active | passive);
  admin-key key;
  accept-data;
  fast-failover;
  link-protection {
    disable;
    (revertive | non-revertive);
  }
  periodic interval;
  system-id mac-address;
  system-priority priority;
}
```

Hierarchy Level (EX Series) [edit interfaces aex [aggregated-ether-options](#)]
 [edit logical-systems *logical-system-name* interfaces aeX aggregated-ether-options]

Hierarchy Level (NFX Series) [edit interfaces *interface-name* aggregated-ether-options]

Release Information Statement introduced in Junos OS Release 9.0 for EX Series switches.
 Statement introduced in Junos OS Release 11.1 for the QFX Series.
 Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Configure the Link Aggregation Control Protocol (LACP) parameters for interfaces. The remaining statement is explained separately.

For EX Series, when you configure the **accept-data** statement at the **[edit interfaces aex aggregated-ether-options lacp]** hierarchy level, the router processes packets received on a member link irrespective of the LACP state if the aggregated Ethernet bundle is up.



NOTE: When you configure the `accept-data` statement at the `[edit interfaces aeX aggregated-ether-options lacp]` hierarchy level, this behavior occurs:

- By default, the `accept-data` statement is not configured when LACP is enabled.
- You can configure the `accept-data` statement to improve convergence and reduce the number of dropped packets when member links in the bundle are enabled or disabled.
- When LACP is down and a member link receives packets, the router or switch does not process packets as defined in the IEEE 802.1ax standard. According to this standard, the packets should be dropped, but they are processed instead because the `accept-data` statement is configured.



NOTE: The `force-up` statement is not supported on QFX10002 switches.

Default If you do not specify LACP as either **active** or **passive**, LACP remains passive.

Options **active**—Initiate transmission of LACP packets.

admin-key *number*—Specify an administrative key for the router or switch.



NOTE: You must also configure multichassis link aggregation (MC-LAG) when you configure the `admin-key`.

fast-failover—Specify to override the IEEE 802.3ad standard and allow the standby link to receive traffic. Overriding the default behavior facilitates subsecond failover.

passive—Respond to LACP packets.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level **interface**—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Documentation**
- *Configuring Link Aggregation*
 - *Configuring Aggregated Ethernet LACP (CLI Procedure)*
 - *Understanding Aggregated Ethernet Interfaces and LACP for Switches*
 - *Configuring LACP for Aggregated Ethernet Interfaces*

layer2-policer

Syntax	<pre>layer2-policer { input-policer <i>policer-name</i>; input-three-color <i>policer-name</i>; output-policer <i>policer-name</i>; output-three-color <i>policer-name</i>; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</p>
Release Information	<p>Statement introduced in Junos OS Release 8.2.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>
Description	<p>For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series, MX Series, and T Series routers, and for aggregated Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces on EX Series switches, apply Layer 2 logical interface policers. The following policers are supported:</p> <ul style="list-style-type: none"> • Two-color • Single-rate tricolor marking (srTCM) • Two-rate tricolor marking (trTCM) <p>Two-color and tricolor policers are configured at the [edit firewall] hierarchy level.</p>
Options	<p>input-policer <i>policer-name</i>—Two-color input policer to associate with the interface. This statement is mutually exclusive with the input-three-color statement.</p> <p>input-three-color <i>policer-name</i>—Tricolor input policer to associate with the interface. This statement is mutually exclusive with the input-policer statement.</p> <p>output-policer <i>policer-name</i>—Two-color output policer to associate with the interface. This statement is mutually exclusive with the output-three-color statement.</p> <p>output-three-color <i>policer-name</i>—Tricolor output policer to associate with the interface. This statement is mutually exclusive with the output-policer statement.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i> • <i>Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>

[lcp-max-conf-req](#)

Syntax	<code>lcp-max-conf-req <i>number</i></code>
Hierarchy Level	<code>[edit interfaces <i>so-fpc/pic/port</i> unit <i>number</i> ppp-options]</code>
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Set the maximum number of LCP Configure-Requests to be sent, after which the router goes to LCP down state.
Options	<i>number</i> —From 0 to 65,535, where 0 means send infinite LCP Configure-Requests, and any other value specifies the maximum number LCP Configure-Requests to send and then stop sending. <i>Default</i> —254
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the LCP Configure-Request Maximum Sent on page 197• ppp-options on page 930


lcp-restart-timer

Syntax	<code>lcp-restart-timer <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	For interfaces with PPP, PPP TCC, PPP over Ethernet, PPP over ATM, and PPP over Frame Relay encapsulations, configure a restart timer for the Link Control Protocol (LCP) component of a PPP session.
Options	<i>milliseconds</i> —The time, in milliseconds, between successive LCP configuration requests. Range: 20 through 10000 milliseconds Default: 3 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring the PPP Restart Timers on page 196

level

Syntax	<code>level <i>number</i>;</code>
Hierarchy Level	<code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 8.4. Statement introduced in junos os release 12.1X48 for PTX Series Packet Transport Routers.
Description	A number used in connectivity fault management (CFM) messages to identify the maintenance association. The number is embedded in each of the CFM frames. CFM messages within a given level are processed by maintenance end points (MEPs) at the same level. For example, the operator domain can be level 0, the provider domain can be level 3, and the customer domain can be level 7.
Options	<i>number</i> —A number used to identify the maintenance domain to which the CFM message belongs. Range: 0 through 7
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Creating a Maintenance Domain</i>

line-encoding

Syntax	<code>line-encoding (ami b8zs);</code>
Hierarchy Level	<code>[edit interfaces ct1-<i>fpc/pic/port</i>],</code> <code>[edit interfaces <i>interface-name</i> t1-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
Description	Set the line encoding format on the T1 interface.
	<div>  <p>NOTE: When configuring CT1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the <code>line-encoding</code> statement must be included at the <code>[edit interfaces ct1-<i>fpc/pic/port</i>]</code> hierarchy level.</p> </div>
Default	The default line encoding is B8ZS.
Options	ami —Use Alternate Mark Inversion (AMI) line encoding. b8zs —Use bipolar with 8-zeros substitution (B8ZS) line encoding.
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring T1 Line Encoding</i>

line-protocol

Syntax	<code>line-protocol <i>protocol</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For serial interfaces only, configure the line protocol.
Options	<i>protocol</i> —You can specify the one of the following line protocols: <ul style="list-style-type: none">• eia530—Line protocol EIA-530• v35—Line protocol V.35• x.21—Line protocol X.21
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Line Protocol on page 346

line-rate

Syntax	<code>line-rate <i>line-rate</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> shdsl-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> shdsl-options]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For J Series Services Routers only, configure the SHDSL line rate.
Options	<p><i>line-rate</i>—SHDSL line rate, in Kbps. Possible values are:</p> <p>2-wire (Kbps): 192, 256, 320, 384, 448, 512, 576, 640, 704, 768, 832, 896, 960, 1024, 1088, 1152, 1216, 1280, 1344, 1408, 1472, 1536, 1600, 1664, 1728, 1792, 1856, 1920, 1984, 2048, 2112, 2176, 2240, 2304, auto</p> <p>4-wire (Kbps): 384, 512, 640, 768, 896, 1024, 1152, 1280, 1408, 1536, 1664, 1792, 1920, 2048, 2176, 2304, 2432, 2560, 2688, 2816, 2944, 3072, 3200, 3328, 3456, 3584, 3712, 3840, 3968, 4096, 4224, 4352, 4480, 4608</p> <p>Default: For 2-wire mode, auto; for 4-wire mode, 4608 Kbps</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

linear-red-profile

Syntax	<code>linear-red-profile <i>profile-name</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, assign a linear RED profile to a specified forwarding class. To define the linear RED profiles, include the linear-red-profiles statement at the [edit interfaces at- <i>fpc/pic/port</i> atm-options] hierarchy level.
Default	If you do not include either the epd-threshold or the linear-red-profile statement in the forwarding class configuration, the Junos OS uses an EPD threshold based on the available bandwidth and other parameters.
Options	<i>profile-name</i> —Name of the linear RED profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring an ATM Scheduler Map</i>• linear-red-profiles on page 753• <i>Applying Scheduler Maps to ATM Interfaces</i>• <i>epd-threshold</i>

linear-red-profiles

Syntax	<pre>linear-red-profiles <i>profile-name</i> { high-plp-threshold <i>percent</i>; low-plp-threshold <i>percent</i>; queue-depth <i>cells</i>; }</pre>
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS virtual circuit drop profiles for RED. When a packet arrives, RED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the RED algorithm determines whether to drop the arriving packet.
Options	<p><i>profile-name</i>—Name of the drop profile.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>ATM2 IQ VC Tunnel CoS Components Overview</i> <i>Configuring Linear RED Profiles on ATM Interfaces</i>

link-adjacency-loss

Syntax	link-adjacency-loss;
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile event]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Loss of adjacency with IEEE 802.3ah link-fault management peer event. When included, the loss-of-adjacency event triggers the action specified under the action statement.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Monitoring the Loss of Link Adjacency</i>

link-discovery

Syntax	link-discovery (active passive);
Hierarchy Level	[edit protocols oam ethernet link-fault-management interface interface-name]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	For Ethernet interfaces on EX Series switches, and M320, M120, MX Series, and T Series routers, specify the discovery mode used for IEEE 802.3ah Operation, Administration, and Management (OAM) support. The discovery process is triggered automatically when OAM 802.3ah functionality is enabled on a port. Link monitoring is done when the interface sends periodic OAM PDUs.
Options	(active passive) —Passive or active mode. In active mode, the interface discovers and monitors the peer on the link if the peer also supports IEEE 802.3ah OAM functionality. In passive mode, the peer initiates the discovery process. Once the discovery process is initiated, both sides participate in discovery.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Link Discovery</i>

link-down

Syntax	link-down;
Hierarchy Level	[edit protocols oam ethernet link-fault-management]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Mark the interface down for transit traffic.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Specifying the Actions to Be Taken for Link-Fault Management Events</i>

link-event-rate

Syntax	<pre>link-event-rate { frame-error count; frame-period count; frame-period-summary count; symbol-period count; }</pre>
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile event]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Configure the number of link-fault management events per second.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Threshold Values for Fault Events in an Action Profile</i>

link-fault-management

```
Syntax link-fault-management {
    action-profile profile-name {
        action {
            link-down;
            send-critical-event;
            syslog;
        }
        event {
            link-adjacency-loss;
            link-event-rate {
                frame-error count;
                frame-period count;
                frame-period-summary count;
                symbol-period count;
            }
            protocol-down;
        }
    }
    interface interface-name {
        apply-action-profile profile-name;
        link-discovery (active | passive);
        loopback-tracking;
        pdu-interval interval;
        pdu-threshold threshold-value;
        remote-loopback;
        event-thresholds {
            frame-error count;
            frame-period count;
            frame-period-summary count;
            symbol-period count;
        }
        negotiation-options {
            allow-remote-loopback;
            no-allow-link-events;
        }
    }
}
```

Hierarchy Level [edit protocols [oam ethernet](#)]

Release Information Statement introduced in Junos OS Release 8.2.

Description For Ethernet interfaces on M320, M120, MX Series, and T Series routers and EX Series switches, specify fault signaling and detection for IEEE 802.3ah Operation, Administration, and Management (OAM) support.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation • *Enabling IEEE 802.3ah OAM Support*

link-layer-overhead

Syntax link-layer-overhead *percent*;

Hierarchy Level [edit interfaces *interface-name* [mlfr-uni-nni-bundle-options](#)],
[edit interfaces *interface-name* unit *logical-unit-number*],
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

Release Information Statement introduced before Junos OS Release 7.4.

Description For AS PIC or MultiServices PIC link services IQ interfaces (**lsq**) only, configure the percentage of total bundle bandwidth to be set aside for link-layer overhead.

Options *percent*—Percentage of total bundle bandwidth to be set aside for link-layer overhead.
Range: 0 through 50 percent
Default: 4 percent

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation • *Junos OS Services Interfaces Library for Routing Devices*

link-mode

Syntax	<code>link-mode <i>mode</i> (automatic full-duplex half-duplex);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> ether-options],</code> <code>[edit interfaces ge-<i>pim</i>/0/0 <i>switch-options</i> <i>switch-port</i> <i>port-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	Set the device's link connection characteristic.
Options	<p><i>mode</i>—Link characteristics:</p> <ul style="list-style-type: none"> • automatic—Link mode is negotiated. This is the default for EX Series switches. • full-duplex—Connection is full duplex. • half-duplex—Connection is half duplex. <p>Default: Fast Ethernet interfaces can operate in either full-duplex or half-duplex mode. The router's or switch's management Ethernet interface, fxp0 or em0, and the built-in Fast Ethernet interfaces on the FIC (M7i router) autonegotiate whether to operate in full-duplex or half-duplex mode. Unless otherwise noted here, all other interfaces operate only in full-duplex mode.</p>



NOTE: On EX Series switches, if **no-auto-negotiation** is specified in `[edit interfaces interface-name ether-options]`, you can select only **full-duplex** or **half-duplex**. If **auto-negotiation** is specified, you can select any mode.



NOTE:

- Member links of an aggregated Ethernet bundle must not be explicitly configured with a link mode. You must remove any such link-mode configuration before committing the aggregated Ethernet configuration.
- Starting with Junos OS release 17.4R1 and later, the link-mode configuration is not supported for 10-Gigabit Ethernet interfaces.
- Starting in Junos OS release 18.4R1, half-duplex mode is supported on SRX340 and SRX345 devices.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring the Link Characteristics on Ethernet Interfaces*
- [Understanding Management Ethernet Interfaces on page 10](#)
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces for EX Series Switches with ELS support*

link-protection

Syntax	<pre>link-protection { disable; (revertive non-revertive); }</pre>
Hierarchy Level	<pre>[edit interfaces aex aggregated-ether-options] [edit interfaces aex aggregated-ether-options lacp]</pre>
Release Information	<p>Statement introduced in Junos OS Release 8.3.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.</p> <p>Support for disable, revertive, and non-revertive statements added in Junos OS Release 9.3.</p>
Description	<p>On the router, for aggregated Ethernet interfaces only, configure link protection. In addition to enabling link protection, a primary and a secondary (backup) link must be configured to specify what links egress traffic should traverse. To configure primary and secondary links on the router, include the primary and backup statements at the [edit interfaces ge-fpc/pic/port gigether-options 802.3ad aex] hierarchy level or the [edit interfaces fe-fpc/pic/port fastether-options 802.3ad aex] hierarchy level.</p> <p>On the switch, you can configure either Junos OS link protection for aggregated Ethernet interfaces or the LACP standards link protection for aggregated Ethernet interfaces.</p> <p>For Junos OS link protection, specify link-protection at the following hierarchy levels:</p> <ul style="list-style-type: none"> • [edit interfaces ge-fpc/pic/port ether-options 802.3ad aex] • [edit interfaces xe-fpc/pic/port ether-options 802.3ad aex] hierarchy level or at the [edit interfaces xe-fpc/pic/port ether-options 802.3ad aex] hierarchy level. <p>To disable link protection, use the delete interface ae aggregate-ether-options link-protection statement at the [edit interfaces aex aggregated-ether-options] hierarchy level or the [edit interfaces aex aggregated-ether-options lacp] hierarchy level.</p>
Options	The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Aggregated Ethernet Link Protection</i> • <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches</i>

link-speed (Aggregated Ethernet)

Syntax	<code>link-speed <i>speed</i>;</code>
Hierarchy Level (EX Series)	[edit interfaces aex aggregated-ether-options], [edit interfaces interface-range <i>name</i> aggregated-ether-options], [edit interfaces interface-range <i>name</i> aggregated-sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. mixed option added in Junos OS Release 15.1F3 and 16.1R2 for PTX5000 routers and 15.1F6 and 16.1R2 for PTX3000 routers.
Description	For aggregated Ethernet interfaces only, set the required link speed.
Options	<p><i>speed</i>—For aggregated Ethernet links, you can specify <i>speed</i> in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Aggregated Ethernet links on the M120 router can have one of the following speeds:</p> <ul style="list-style-type: none"> • 100m—Links are 100 Mbps. • 10g—Links are 10 Gbps. • 1g—Links are 1 Gbps. • oc192—Links are OC192 or STM64c. <p>Aggregated Ethernet links on EX Series switches can be configured to operate at one of the following speeds:</p> <ul style="list-style-type: none"> • 10m—Links are 10 Mbps. • 100m—Links are 100 Mbps. • 1g—Links are 1 Gbps. • 10g—Links are 10 Gbps. <p>Aggregated Ethernet links on T Series, MX Series, PTX Series routers, and QFX5100, QFX10002, QFX10008, and QFX10016 switches can be configured to operate at one of the following speeds:</p> <ul style="list-style-type: none"> • 100g—Links are 100 Gbps. • 100m—Links are 100 Mbps. • 10g—Links are 10 Gbps. • 1g—Links are 1 Gbps.

- **40g**—Links are 40 Gbps.
- **50g**—Links are 50 Gbps.
- **80g**—Links are 80 Gbps.
- **8g**—Links are 8 Gbps.
- **mixed**—Links are of various speeds.
- **oc192**—Links are OC192.

mixed—Enables bundling of different Ethernet rate links in the same Aggregated Ethernet interface.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
---------------------------------	---

- | | |
|------------------------------|---|
| Related Documentation | <ul style="list-style-type: none">• <i>Aggregated Ethernet Interfaces Overview</i>• Configuring Aggregated Ethernet Link Speed on page 118• <i>Configuring Mixed Rates and Mixed Modes on Aggregated Ethernet Bundles</i>• <i>Configuring Aggregated Ethernet Links (CLI Procedure)</i>• <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i> |
|------------------------------|---|

link-speed (Aggregated SONET/SDH)

Syntax	<code>link-speed (<i>speed</i> <i>mixed</i>);</code>
Hierarchy Level	<code>[edit interfaces asx aggregated-sonet-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4. mixed option added in Release 8.0.
Description	For aggregated SONET/SDH interfaces only, set the required link speed.
Options	<p>speed—Aggregated SONET/SDH links can have one of the following speed values.</p> <ul style="list-style-type: none"> • oc3—Links are OC3c or STM1c. • oc12—Links are OC12c or STM4c. • oc48—Links are OC48c or STM16c. • oc192—Links are OC192c or STM64c. • oc768—Links are OC768c or STM256c. <p>mixed—For aggregated SONET/SDH links on T Series routers, you can mix interface speeds in SONET/SDH aggregation bundles. Interface speeds from OC3 through OC768 are supported.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Aggregated Ethernet Link Speed on page 118 • Configuring Aggregated SONET/SDH Interfaces

linktrace

Syntax	<pre>linktrace { age (30m 10m 1m 30s 10s); path-database-size path-database-size; }</pre>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Configure connectivity fault management linktrace parameters.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Linktrace Protocol in CFM</i>

lmi (Frame Relay)

Syntax	<pre>lmi { lmi-type (ansi itu c-lmi); n391dte number; n392dce seconds; n392dte number; n393dce number; n393dte number; t391dte number; t392dce seconds; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Set Frame Relay keepalive parameters.
Options	<p>n391dte—DTE full status polling interval. Range: 1 through 255 Default: 6</p> <p>n392dce—DCE error threshold, in number of errors. Range: 1 through 10 Default: 3</p> <p>n392dte—DTE error threshold, in number of errors. Range: 1 through 10 Default: 3</p> <p>n393dce—DCE monitored event-count. Range: 1 through 10 Default: 4</p> <p>n393dte—DTE monitored event-count. Range: 1 through 10 Default: 4</p> <p>t391dte—DTE polling timer. Range: 5 through 30 seconds Default: 10 seconds</p> <p>t392dce—DCE polling timer. Range: 5 through 30 seconds Default: 15 seconds</p>

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Tunable Keepalives for Frame Relay LMI</i>• lmi-type on page 768• mlfr-uni-nni-bundle-options on page 809

lmi (Ethernet OAM)

Syntax

```
lmi {
  status-counter count;
  polling-verification-timer value;
  interface name {
    uni-id uni-name;
    status-counter number;
    polling-verification-timer value;
    evc-map-type (all-to-one-bundling | bundling | service-multiplexing);
    evc evc-name {
      default-evc;
      vlan-list vlan-id-list;
    }
  }
}
```

Hierarchy Level [edit protocols [oam](#) [ethernet](#)]

Release Information Statement introduced in Junos OS Release 9.5.

Description On routers with **ge**, **xe**, or **ae** interfaces, configure an OAM Ethernet Local Management Interface (E-LMI).



NOTE: On MX Series routers, E-LMI is supported on Gigabit Ethernet (**ge**), 10-Gigabit Ethernet (**xe**), and Aggregated Ethernet (**ae**) interfaces configured on MX Series routers with DPC only.

Options

- status-counter *count***—Status counter (N393), defaults to 4.
- interface *name***—Polling verification timer (T392), defaults to 15 seconds.
- uni-id *uni-name***—(Optional) Defaults to the physical interface name.
- status-counter *number***—(Optional) Defaults to a global value.
- polling-verification-timer *value***—(Optional) Defaults to a global value.
- evc-map-type (all-to-one-bundling | bundling | service-multiplexing)**—Specify the Ethernet virtual connection (EVC) map type.
- evc *evc-name***—Specify the name of the EVC.
- default-evc**—Set the specified EVC as the default EVC.
- vlan-list *vlan-id-list***—Specify a group of VLANs to assign to the EVC.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Ethernet Local Management Interface*
- [evcs on page 619](#)

lmi-type

Syntax lmi-type (ansi | itu | c-lmi);

Hierarchy Level [edit interfaces *interface-name* [lmi](#)],
[edit interfaces *interface-name* [mlfr-uni-nni-bundle-options](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description Set Frame Relay Local Management Interface (LMI) type.



NOTE: Consortium LMI is supported on all MPCs and I-chip based FPCs.

Options ansi—Use ANSI T1.617 Annex D LMIs.

itu—Use ITU Q933 Annex A LMIs.

c-lmi—Use Consortium LMI.

Default: ansi

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Frame Relay Keepalives*
- [mlfr-uni-nni-bundle-options on page 809](#)
- [lmi \(Frame Relay\) on page 765](#)
- *Junos OS Services Interfaces Library for Routing Devices*

load-interval

Syntax	<code>load-interval <i>seconds</i>;</code>
Hierarchy Level	<code>[edit interfaces dln <i>unit</i> <i>logical-unit-number</i> <i>dialer-options</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces dln <i>unit</i> <i>logical-unit-number</i> <i>dialer-options</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers with ISDN logical interfaces, specify the interval used to calculate the average load on the network. By default, the average interface load is calculated every 60 seconds.
Options	<i>seconds</i> —Number of seconds at which the average load calculation is triggered. Range: 20 through 180, in 10-second intervals Default: 60 seconds
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

load-threshold

Syntax	<code>load-threshold <i>percent</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>dlr unit logical-unit-number dialer-options</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>dlr unit logical-unit-number dialer-options</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers with ISDN logical interfaces, specify the bandwidth threshold percentage used for adding interfaces. Another link is added to the multilink bundle when the load reaches the threshold value you set. Specify a percentage between 0 and 100.
Options	<i>percent</i> —Bandwidth threshold percentage used for adding interfaces. When set to 0, all available channels are dialed. Range: 0 through 100 seconds Default: 100 seconds
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

local-name

Syntax	<code>local-name <i>name</i>;</code>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> ppp-options chap], [edit interfaces <i>interface-name</i> ppp-options pap], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap] [edit dynamic-profiles <i>profile-name</i> interfaces pp0 unit "\$junos-interface-unit" ppp-options], [edit dynamic-profiles <i>profile-name</i> interfaces "\$junos-interface-ifd-name" unit "\$junos-interface-unit" ppp-options]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Support for PAP added in Junos OS Release 8.3.</p> <p>Support at the <code>[edit dynamic-profiles <i>profile-name</i> interfaces "\$junos-interface-ifd-name" unit "\$junos-interface-unit" ppp-options]</code> hierarchy level introduced in Junos OS Release 14.2.</p>
Description	<p>Specify the name of the interface used for CHAP or PAP authentication. Dynamic interfaces are supported only for CHAP authentication.</p> <p>For ATM2 IQ interfaces only, you can configure a CHAP local name on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"> <code>atm-ppp-llc</code>—PPP over AAL5 LLC encapsulation. <code>atm-ppp-vc-mux</code>—PPP over AAL5 multiplex encapsulation.
Options	<p>name—Name of the interface used as an identifier in CHAP challenge and response packets or PAP request and response packets.</p> <p>Default: When you do not include the local-name statement in the configuration, the interface sends the router's system hostname in CHAP challenge and response packets or PAP request and response packets.</p> <p>Range: For CHAP authentication, a string of 1 through 32 characters. For PAP authentication, a string of 1 through 8 characters.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring the PPP Challenge Handshake Authentication Protocol on page 137

- [Configuring the PPP Password Authentication Protocol On a Physical Interface on page 140](#)

local-password

Syntax	<code>local-password password;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <code>ppp-options pap</code>], [edit interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options pap</code>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options pap</code>]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Configure the host password for sending PAP requests.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Local Password• Configuring the PPP Password Authentication Protocol On a Physical Interface on page 140

lockout

Syntax	<code>lockout;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options <code>aps</code>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure a lockout of protection, forcing the use of the working circuit and locking out the protect circuit regardless of anything else.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Switching Between the Working and Protect Circuits

log-prefix (Interfaces)

Syntax	<code>log-prefix <i>prefix-value</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> services-options syslog host <i>hostname</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Set the system logging prefix value.
Options	<i>prefix-value</i> —System logging prefix value.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • <i>Configuring System Logging for Services Interfaces</i>

logical-interface-fpc-redundancy (Aggregated Ethernet Subscriber Interfaces)

Syntax	<code>logical-interface-fpc-redundancy;</code>
Hierarchy Level	<code>[edit interfaces aenumber aggregated-ether-options]</code>
Release Information	Statement introduced in Junos OS Release 11.2. Statement introduced in Junos OS Release 13.2R2 for EX Series switches.
Description	<p>Provide module redundancy for demux subscribers on aggregated Ethernet bundles configured with targeted distribution. Backup links for a subscriber are chosen on a different EQ DPC or MPC from the primary link, based on the link with the fewest number of subscribers among the links on different modules. If all links are on a single module when this is configured, backup links are not provisioned.</p> <p>By default, link redundancy is provided for the aggregated Ethernet bundle.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Link and Module Redundancy for Demux Subscribers in an Aggregated Ethernet Interface</i> • <i>Configuring Module Redundancy for a Virtual Chassis</i>

logical-interface-policer

Syntax	<code>logical-interface-policer;</code>
Hierarchy Level	<p>[edit dynamic-profiles <i>profile-name</i> firewall policer <i>policer-name</i>],</p> <p>[edit dynamic-profiles <i>profile-name</i> firewall three-color-policer <i>name</i>],</p> <p>[edit firewall atm-policer <i>atm-policer-name</i>],</p> <p>[edit firewall policer <i>policer-name</i>],</p> <p>[edit firewall policer <i>policer-template-name</i>],</p> <p>[edit firewall three-color-policer <i>policer-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> firewall policer <i>policer-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> firewall three-color-policer <i>name</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Support at the [edit firewall three-color-policer <i>policer-name</i>] hierarchy level introduced in Junos OS Release 8.2.</p> <p>Logical systems support introduced in Junos OS Release 9.3.</p> <p>Support at the [edit dynamic-profiles ... policer <i>policer-name</i>] and [edit dynamic-profiles ... three-color-policer <i>name</i>] hierarchy levels introduced in Junos OS Release 11.4.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>Support for PTX series routers with third-generation FPCs added in Junos OS Release 18.3R1.</p>
Description	<p>Configure a logical interface policer. For PTX series routers running Junos OS Release 18.3R1 or later, you can use this command to configure separate firewall filters for different family address types (IPv4 and IPv6) that share the same interface, and configure the same policer as an action for the filter.</p> <p>To configure the aggregate policer, configure the firewall policer you want to use as logical-interface-policer. And at the firewall family <i>family-name</i> filter <i>filter-name</i> hierarchy level where you will reference the policer, make the policer an interface-specific firewall filter action.</p> <p>The sample configuration shows the relationship.</p>

```

firewall {
  policer Shared_Policer {
    logical-interface-policer;
    if-exceeding {
      bandwidth-limit 100m;
      burst-size-limit 500k;
    }
    then {
      discard;
    }
  }
}

```

```

family inet {
  filter filter_name {
    interface-specific;
    term term_name {
      then {
        policer Shared_Policer;
        count cinet;
      }
    }
  }
}

```



NOTE: Starting in Junos OS Release 12.2R2, on T Series Core Routers only, you can configure an MPLS LSP policer for a specific LSP to be shared across different protocol family types. You must include the `logical-interface-policer` statement to do so.

Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Two-Color and Three-Color Logical Interface Policers</i> • <i>Traffic Policer Types</i> • <i>Configuring and Applying Tricolor Marking Policers</i> • <i>action</i> • <i>Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i> • action on page 428

logical-systems

Syntax

```
logical-systems {  
  logical-system-name {  
    ...logical-system-configuration...  
  }  
}
```

Hierarchy Level [\[edit\]](#)

Release Information Statement introduced before Junos OS Release 7.4.
Statement name changed from **logical-routers** in Junos OS Release 9.3.

Description Configure a logical system.

Options *logical-system-name*—Name of the logical system.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.


Related Documentation

- *Logical Systems Feature Guide*

long-buildout

Syntax	(long-buildout no-long-buildout);
Hierarchy Level	[edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure the T3 line buildout. A T3 interface has two settings for the T3 line buildout: a short setting, which is less than 255 feet (68 meters), and a long setting, which is greater than 255 feet and shorter than 450 feet (137 meters).</p> <p>This statement applies to copper-cable-based T3 interfaces only. You cannot configure a line buildout for a DS3 channel on a channelized OC12 interface, which runs over fiber-optic cable.</p>
Default	A T3 interface uses the short line buildout setting (no-long-buildout) for wires shorter than 255 feet (68 meters).
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the T3 Line Buildout</i>

loop-timing

Syntax	(loop-timing no-loop-timing);
Hierarchy Level	[edit interfaces ct3- <i>fpc/pic/port</i> t3-options], [edit interfaces e1- <i>fpc/pic/port:0</i> sonet-options], [edit interfaces stm1- <i>fpc/pic/port</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For channelized IQ interfaces and non-IQ channelized STM1 interfaces only, configure the SONET/SDH or DS3-level clocking source.
	<div>  <p>NOTE: On M Series, MX Series, and T Series routers, under E1 channels, loop timing can be configured only at channel 0. When you configure on channel 0, it is applicable on all channels as internal by default.</p> </div>
Options	<p>loop-timing—Configure loop timing (external) clocking.</p> <p>no-loop-timing—Configure line timing (internal) clocking.</p> <p>Default: no-loop-timing</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Channelized IQ and IQE SONET/SDH Loop Timing</i> • <i>Configuring the Channelized T3 Loop Timing</i> • clocking on page 499

loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3)

Syntax	<code>loopback (local payload remote);</code>
Hierarchy Level	<pre>[edit interfaces ce1-fpc/pic/port], [edit interfaces ct1-fpc/pic/port], [edit interfaces t1-fpc/pic/port], [edit interfaces interface-name ds0-options], [edit interfaces interface-name dsl-options], [edit interfaces interface-name e1-options], [edit interfaces interface-name e3-options], [edit interfaces interface-name shdsl-options], [edit interfaces interface-name sonet-options], [edit interfaces interface-name t1-options], [edit interfaces interface-name t3-options]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	Configure a loopback connection. To turn off the loopback capability, remove the loopback statement from the configuration.



NOTE: When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the loopback statement must be included with the **local** or **remote** option at the `[edit interfaces ce1-fpc/pic/port]` or `[edit interfaces ct1-fpc/pic/port]` hierarchy level as appropriate.

When configuring T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the loopback statement must be included with the **payload** option at the `[edit interfaces t1-fpc/pic/port]` hierarchy level.



NOTE: When configuring CE1 or CT1 interfaces on the 16-port Channelized E1/T1 MIC (MIC-3D-16CHE1-T1-CE), you must include the loopback statement at the `[edit interfaces ce1-fpc/pic/port]` hierarchy level, or `[edit interfaces ct1-fpc/pic/port]`

To configure loopback on channelized IQ and IQE PICs, SONET/SDH level, use the **sonet-options loopback** statement **local** and **remote** options at the controller interface (`coc48`, `cstm16`, `coc12`, `cstm4`, `coc3`, `cstm1`). It is ignored for path-level interfaces `so-fpc/pic/port` or `so-fpc/pic/port:channel`.

Options **local**—Loop packets, including both data and timing information, back on the local router's PIC. NxDSO IQ interfaces do not support local loopback.

payload—For channelized T3, T1, and NxDSO IQ interfaces only, loop back data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated. Neither ATM-over-asymmetrical digital subscriber line (ADSL) interfaces nor ATM-over-SHDSL interfaces support payload loopback.

remote—Loop packets, including both data and timing information, back on the remote router's interface card. NxDSO IQ interfaces do not support remote loopback.


Required Privilege interface—To view this statement in the configuration.

Level interface-control—To add this statement to the configuration.

**Related
Documentation**

- *Configuring E3 and T3 Parameters on ATM Interfaces*
- *Configuring E1 Loopback Capability*
- *Configuring E3 Loopback Capability*
- *Configuring SONET/SDH Loopback Capability to Identify a Problem as Internal or External*
- *Configuring SHDSL Operating Mode on an ATM Physical Interface*
- *Configuring T1 Loopback Capability*
- *Configuring T3 Loopback Capability*
- [feac-loop-respond on page 634](#)

loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)

Syntax	(loopback no-loopback);
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options], [edit interfaces <i>interface-range name</i> ether-options]</p> <p>For QFX Series and EX Series:</p> <p>[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> ether-options],</p> <p>For SRX Series Devices and vSRX:</p> <p>[edit interfaces <i>interface-name</i> redundant-ether-options]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4 for MX Series.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Statement modified in Junos OS Release 9.2 for the SRX Series.</p>
Description	For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces, enable or disable loopback mode.
<div>  <p>NOTE:</p> <ul style="list-style-type: none"> By default, local aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces connect to a remote system. IPv6 Neighbor Discovery Protocol (NDP) addresses are not supported on Gigabit Ethernet interfaces when loopback mode is enabled on the interface. That is, if the loopback statement is configured at the [edit interfaces <i>ge-fpc/pic/port</i> gigether-options] hierarchy level, an NDP address cannot be configured at the [edit interfaces <i>ge-fpc/pic/port</i> unit <i>logical-unit-number</i> family inet6 address] hierarchy level. </div>	
Default	By default, loopback is disabled.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Ethernet Loopback Capability*
- *Understanding Interfaces*

loopback (Serial)

Syntax `loopback mode;`

Hierarchy Level [edit interfaces *interface-name* [serial-options](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure a loopback connection.

Default If you do not include this statement, there is no loopback connection.

Options *mode*—You can specify the one of the following loopback modes:

- **dce-local**—For EIA-530 interfaces only, loop packets back on the local DCE.
- **dce-remote**—For EIA-530 interfaces only, loop packets back on the remote DCE.
- **local**—Loop packets back on the local router's PIC.
- **remote**—Loop packets back on the line interface unit (LIU).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring Serial Loopback Capability on page 356](#)

loopback-clear-timer

Syntax	<code>loopback-clear-timer <i>seconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	For interfaces with PPP, PPP TCC, PPP over Ethernet, PPP over ATM, and PPP over Frame Relay encapsulations, configure a loop detection clear timer for the Link Control Protocol (LCP) component of a PPP session.
Options	<p><i>seconds</i>—The time in seconds to wait before the loop detection flag is cleared if it is not cleared by the protocol.</p> <p>Range: 1 through 60 seconds</p> <p>Default: 9 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring the PPP Clear Loop Detected Timer on page 196

loss-priority

Syntax	<code>loss-priority (high low);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile output-priority-map classifier premium forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the packet loss priority value.
Options	high —Packet has high loss priority. low —Packet has low loss priority.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying an Output Priority Map</i>

loss-threshold

Syntax	<code>loss-threshold <i>number</i>;</code>
Hierarchy Level	<code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> continuity-check]</code>
Release Information	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
Description	Specify the number of continuity check messages lost before marking the remote MEP as down. The value can be from 3 to 256 protocol data units (PDUs). The default value is 3 PDUs.
Options	<i>number</i> —The number of continuity check messages that can be lost before the remote MEP is considered down.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Continuity Check Protocol Parameters Overview</i> <i>Configuring Continuity Check Protocol Parameters for Fault Detection</i>

low-plp-max-threshold

Syntax	<code>low-plp-max-threshold percent;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options linear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the drop profile fill-level for the low PLP CoS VC. When the fill level exceeds the defined percentage, all packets are dropped.
Options	percent —Fill-level percentage when linear RED is applied to cells with PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ATM2 IQ VC Tunnel CoS Components Overview</i>• high-plp-max-threshold on page 661• low-plp-threshold on page 787• <i>Configuring Linear RED Profiles on ATM Interfaces</i>• <i>high-plp-max-threshold</i>• queue-depth on page 957

low-plp-threshold

Syntax	<code>low-plp-threshold <i>percent</i>;</code>
Hierarchy Level	<code>[edit interfaces at-<i>fpc/pic/port</i> atm-options linear-red-profiles <i>profile-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the CoS VC drop profile fill-level percentage when linear RED is applied to cells with low PLP. When the fill level exceeds the defined percentage, packets with low PLP are randomly dropped by RED. This statement is mandatory.
Options	<i>percent</i> —Fill-level percentage when linear RED is applied to cells with low PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>ATM2 IQ VC Tunnel CoS Components Overview</i> • high-plp-max-threshold on page 661 • high-plp-threshold on page 657 • <i>Configuring Linear RED Profiles on ATM Interfaces</i> • <i>high-plp-max-threshold</i> • <i>high-plp-threshold</i> • low-plp-max-threshold on page 786 • queue-depth on page 957

lowest-priority-defect

Syntax	<code>lowest-priority-defect (all-defects err-xcon mac-rem-err-xcon no-defect rem-err-xcon xcon)</code>
Hierarchy Level	<code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Specify the lowest priority defect that is allowed to generate a Fault Alarm whenever CFM detects a defect. This configuration is done at the MEP level.
Options	<p>Specify one of the following lowest priority defect options:</p> <p>all-defects—Allows all defects.</p> <p>err-xcon—Allows only erroneous CCM and cross-connect CCM defects.</p> <p>mac-rem-err-xcon—Allows only MAC, not receiving CCM, erroneous CCM, and cross-connect defects.</p> <p>no-defect—Allows no defects.</p> <p>rem-err-xcon—Allows only not receiving CCM, erroneous CCM, and cross-connect CCM defects.</p> <p>xcon—Allows only cross-connect CCM defects.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Maintenance End Point Lowest Priority Defect</i>

lsq-failure-options

Syntax	<pre>lsq-failure-options { no-termination-request; [trigger-link-failure <i>interface-name</i>]; }</pre>
Hierarchy Level	[edit interfaces lsq- <i>fpc/pic/port</i>]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For AS PIC or MultiServices PIC link services IQ (lsq) interfaces only, define the failure recovery option settings.
Options	The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

mac

Syntax	<code>mac mac-address;</code>
Hierarchy Level	<code>[edit interfaces interface-name]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Set the MAC address of the interface.</p> <p>Use this statement at the [edit interfaces ... ps0] hierarchy level to configure the MAC address for a pseudowire logical device that is used for subscriber interfaces over point-to-point MPLS pseudowires.</p>
Options	<p>mac-address—MAC address. Specify the MAC address as six hexadecimal bytes in one of the following formats: <i>nnnn.nnnn.nnnn</i> or <i>nn:nn:nn:nn:nn:nn</i>. For example, 0000.5e00.5355 or 00:00:5e:00:53:55.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the MAC Address on the Management Ethernet Interface</i>• <i>Configuring a Pseudowire Subscriber Logical Interface Device</i>

mac-address (Accept Source Mac)

Syntax	<code>mac-address <i>mac-address</i> policer;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> accept-source-mac],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>accept-source-mac]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	For Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), for Gigabit Ethernet DPCs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP, specify a remote MAC address on which to count incoming and outgoing packets.
Options	<i>mac-address</i> —MAC address. Specify the MAC address as six hexadecimal bytes in one of the following formats: <i>nnnn.nnnn.nnnn</i> or <i>nn:nn:nn:nn:nn:nn</i> . For example, 0011.2233.4455 or 00:11:22:33:44:55. <i>policer</i> —MAC policer. For more information, see policer (MAC) .
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring MAC Address Filtering</i>

mac-address (VLAN and Stacked VLAN Interfaces)

Syntax	<code>mac-address;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure vlan-ranges authentication username-include], [edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges authentication username-include],
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Specify that the client hardware address (chaddr) from the incoming DHCP discover packet be concatenated with the username during the subscriber authentication process.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring VLAN Interface Username Information for AAA Authentication</i>

mac-learn-enable

Syntax	<code>mac-learn-enable;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <i>gigether-options</i> ethernet-switch-profile] [edit interfaces <i>aex</i> <i>aggregated-ether-options</i> ethernet-switch-profile]
Release Information	Statement introduced before Junos OS Release 7.4. Support for statement under the [edit interfaces <i>aex</i> <i>aggregated-ether-options</i> ethernet-switch-profile] hierarchy introduced in Junos OS Release 15.1.
Description	<p>For Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), for Gigabit Ethernet DPCs on MX Series routers, for 100-Gigabit Ethernet Type 5 PIC with CFP, and for MPC3E, MPC4E, MPC5E, MPC5EQ, and MPC6E MPCs, configure dynamic learning of the source and destination MAC addresses. By default, the interface is not allowed to dynamically learn source and destination MAC addresses.</p> <p>To disable dynamic learning of the source and destination MAC addresses after it has been configured, you must delete mac-learn-enable from the configuration.</p> <p>MPCs support MAC address accounting for an individual interface or an aggregated Ethernet interface member link only after the interface has received traffic from the MAC source. If traffic is only exiting an interface, the MAC address is not learned and MAC address accounting does not occur.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring MAC Address Filtering</i> • <i>Configuring MAC Address Accounting</i>

mac-validate

Syntax	mac-validate (loose strict);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Enable IP and MAC address validation for static Ethernet and IP demux interfaces.
Options	<p>loose—Forwards incoming packets when both the IP source address and the MAC source address match one of the trusted address tuples. Drops packets when the IP source address matches one of the trusted tuples, but the MAC address does not match the MAC address of the tuple. Continues to forward incoming packets when the source address of the incoming packet does not match any of the trusted IP addresses.</p> <p>strict—Forwards incoming packets when both the IP source address and the MAC source address match one of the trusted address tuples. Drops packets when the MAC address does not match the tuple's MAC source address, or when IP source address of the incoming packet does not match any of the trusted IP addresses.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>MAC Address Validation on Static Ethernet Interfaces Overview</i>• Configuring an IP Demultiplexing Interface on page 322• Configuring a VLAN Demultiplexing Interface on page 327

maintenance-association

Syntax	<pre> maintenance-association <i>ma-name</i> { short-name-format (character-string vlan 2octet rfc-2685-vpn-id); protect-maintenance-association <i>protect-ma-name</i>; remote-maintenance-association <i>remote-ma-name</i>; continuity-check { hold-interval <i>minutes</i>; interval (10m 10s 1m 1s 100ms); loss-threshold <i>number</i>; } mep <i>mep-id</i> { auto-discovery; direction (up down); interface <i>interface-name</i> (protect working); lowest-priority-defect (all-defects err-xcon mac-rem-err-xcon no-defect rem-err-xcon xcon); priority <i>number</i>; remote-mep <i>mep-id</i> { action-profile <i>profile-name</i>; sla-iterator-profile <i>profile-name</i> { data-tlv-size <i>size</i>; iteration-count <i>count-value</i>; priority <i>priority-value</i>; } } } } </pre>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i>]
Release Information	<p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p>
Description	Configure the name of the maintenance association in IEEE-compliant format.
Options	<p>ma-name—The name of the maintenance association within the maintenance domain.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Creating a Maintenance Association</i> • <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i>

maintenance-domain

Syntax

```

maintenance-domain domain-name {
  bridge-domain name <vlan-id [ vlan-ids ]>;
  instance vpls-instance-name;
  level number;
  maintenance-association ma-name {
    protect-maintenance-association protect-ma-name;
    remote-maintenance-association remote-ma-name;
    short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
    continuity-check {
      hold-interval minutes;
      interval (10m | 10s | 1m | 1s | 100ms);
      loss-threshold number
    }
    mep mep-id {
      auto-discovery;
      direction (up | down);
      interface interface-name (protect | working);
      lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
        rem-err-xcon | xcon );
      priority number;
      remote-mep mep-id {
        action-profile profile-name;
        sla-iterator-profile profile-name {
          data-tlv-size size;
          iteration-count count-value;
          priority priority-value;
        }
      }
    }
  }
  mip-half-function (none | default | explicit);
  name-format (character-string | none | dns | mac+2oct);
}
virtual-switch name {
  bridge-domain name <vlan-id [ vlan-ids ]>;
}
}

```

Hierarchy Level [edit protocols **oam ethernet connectivity-fault-management**]

Release Information Statement introduced in Junos OS Release 8.4.
Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
Support for multiple down MEP introduced in Junos OS Release 15.1R1 for MX Series Routers.

Description Configure the name of the maintenance domain in IEEE-compliant format.



NOTE: For MX Series Routers, you can configure multiple down MEPs for a single instance of maintenance domain identifier and maintenance association name to monitor services provided on Virtual Private LAN Service (VPLS), bridge, circuit cross-connect (CCC), and IPv4 domains.

Options *domain-name*—Name of the maintenance domain.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Creating a Maintenance Domain*
- *Configuring a MEP to Generate and Respond to CFM Protocol Messages*

master-only

Syntax `master-only;`

Hierarchy Level [edit groups rex interfaces (fxp0 | em0) unit *logical-unit-number* family *family* address],
[edit groups rex logical-systems *logical-system-name* interfaces fxp0 unit *logical-unit-number* family *family* address],
[edit interfaces (fxp0 | em0) unit *logical-unit-number* family *family* address],
[edit logical-systems *logical-system-name* interfaces fxp0 unit *logical-unit-number* family *family* address]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 11.1 for the QFX Series.

Description Configure the IP address to be used when the Routing Engine is the current master.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring a Consistent Management IP Address*
- *CLI User Guide*

maximum-contexts

Syntax	<code>maximum-contexts <i>number</i> <force>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <code>unit</code> <i>logical-unit-number</i> <code>compression</code> rtp], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <code>unit</code> <i>logical-unit-number</i> <code>compression</code> rtp]
Release Information	Statement introduced in Junos OS Release 7.5.
Description	Specify the maximum number of RTP contexts to accept during negotiation.
Options	<i>number</i> —Maximum number of contexts. <i>force</i> —(Optional) Requires the PIC to use the value specified for maximum RTP contexts, regardless of the negotiated value. This option allows the software to interoperate with Junos OS Releases that base the RTP context value on link speed.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

maximum-requests

Syntax	<code>maximum-requests <i>times</i>;</code>
Hierarchy Level	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Specify the maximum number of retransmission times of an EAPOL Request packet to the client before it times out the authentication session.
Options	times —Specify the maximum number of retransmission times. Range: 1 through 10 times Default: 2 times
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>IEEE 802.1x Port-Based Network Access Control Overview</i>• authenticator on page 460• dot1x on page 561• interface (IEEE 802.1x) on page 706

maximum-vcs

Syntax	<code>maximum-vcs <i>maximum-vcs</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options vpi vpi-identifier]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM1 interfaces, configure the maximum number of virtual circuits (VCs) allowed on a virtual path (VP). When configuring ATM1 interfaces on the router, you must include this statement.</p> <p>For a configured virtual path identifier (VPI), valid virtual channel identifier (VCI) numbers are from 0 through (<i>maximum-vcs</i> value – 1). VCI numbers 0 through 31 are reserved by the ATM Forum. It is recommended that you use a VCI number higher than 31 when connecting to an ATM switch.</p>
Options	<p><i>maximum-vcs</i>—Maximum number of VCs on the VP.</p> <p>Range: 1 through 4090</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the Maximum Number of ATM1 VCs on a VP</i>• multipoint-destination on page 826• promiscuous-mode on page 947• vci on page 1130

mc-ae

Syntax	<pre> mc-ae { chassis-id <i>chassis-id</i>; events { iccp-peer-down; force-icl-down; prefer-status-control-active; } init-delay-time <i>seconds</i>; mc-ae-id <i>mc-ae-id</i>; mode (active-active active-standby); redundancy-group <i>group-id</i>; revert-time <i>revert-time</i>; status-control (active standby); switchover-mode (non-revertive revertive); } </pre>
Hierarchy Level	[edit interfaces aeX aggregated-ether-options], [edit logical-systems <i>logical-system-name</i> interfaces aeX aggregated-ether-options]
Release Information	<p>Statement introduced in Junos OS Release 9.6 for MX Series routers.</p> <p>events statement introduced in Junos OS Release 11.4R4 for MX Series routers.</p> <p>Statement introduced in Junos OS Release 12.2 for the QFX Series. Only the chassis-id, mc-ae-id, mode active-active, and status-control (active standby) options are supported on QFX Series devices.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>prefer-status-control-active statement introduced in Junos OS Release 13.2R1 for EX Series switches.</p> <p>init-delay-time seconds statement introduced in Junos OS Release 13.2R3 for EX Series switches.</p> <p>switchover-mode and revert-time statements introduced in Junos OS Release 13.3.</p> <p>Support for logical systems introduced in Junos OS Release 14.1.</p>
Description	<p>Enable multichassis link aggregation groups (MC-LAG), which enables one device to form a logical LAG interface with two or more other devices.</p>
Options	<p>chassis-id—Specify the chassis ID for Link Aggregation Control Protocol (LACP) to calculate the port number of MC-LAG physical member links.</p> <p>Values: 0 or 1</p> <p>events—Specify an action if a specific MC-LAG event occurs.</p> <p>iccp-peer-down—Specify an action if the ICCP peer of this node goes down.</p> <p>force-icl-down—If the node's ICCP peer goes down, bring down the interchassis-link logical interface.</p>

prefer-status-control-active—Specify that the node configured as **status-control active** become the active node if the peer of this node goes down.

When ICCP goes down, you can use this keyword to make a mc-lag PE to become the active PE. For example, if you want mc-lag PE1 to be Active on ICCP down, then configure this keyword in PE1. It is not recommended to configure this keyword in both the mc-lag PEs.



NOTE: The **prefer-status-control-active** statement can be configured with the **status-control standby** configuration to prevent the LACP MC-LAG system ID from reverting to the default LACP system ID on ICCP failure. Use this configuration only if you can ensure that ICCP will not go down unless the router or switch is down. You must also configure the hold-time down value (at the [edit interfaces *interface-name*] hierarchy level) for the interchassis link with the **status-control standby** configuration to be higher than the ICCP BFD timeout. This configuration prevents data traffic loss by ensuring that when the router or switch with the **status-control active** configuration goes down, the router or switch with the **status-control standby** configuration does not go into standby mode.

To make the **prefer-status-control-active** configuration work with the **status-control standby** configuration when an interchassis-link logical interface is configured on aggregate Ethernet interface, you must either configure the **lacp periodic interval** statement at the [edit interface *interface-name* aggregated-ether-options] hierarchy level as **slow** or configure the **detection-time threshold** statement at the [edit protocols iccp peer liveness-detection] hierarchy level as less than 3 seconds.

init-delay-time seconds—To minimize traffic loss, specify the number of seconds in which to delay bringing the multichassis aggregated Ethernet interface back to the up state when you reboot an MC-LAG peer.

mc-ae-id mc-ae-id—Specify the identification number of the MC-LAG device. The two MC-LAG network devices that manage a given MC-LAG must have the same identification number.

Range: 1 through 65,535

mode (active-active | active-standby)—Specify whether the MC-LAG is in active-active or active-standby mode.



NOTE: You can configure IPv4 (inet) and IPv6 (inet6) addresses on mc-ae interfaces when the active-standby mode is configured.

redundancy-group *group-id*—Specify the redundancy group identification number. The Inter-Chassis Control Protocol (ICCP) uses the redundancy group ID to associate multiple chassis that perform similar redundancy functions.

Range: 1 through 4,294,967,294

revert-time—Wait interval (in minutes) before the switchover to the preferred node is performed when the **switchover-mode** is configured as revertive.

Range: 1 through 10

status-control (active | standby)—Specify whether the chassis becomes active or remains in standby mode when an interchassis link failure occurs.

switchover-mode (non-revertive | revertive)—Specify whether Junos OS should trigger a link switchover to the preferred node when the active node is available.



NOTE: For revertive mode to automatically switch over to the preferred node, the **status-control** statement should be configured as active.

init-delay-time *seconds*—To minimize traffic loss, specify the number of seconds by which to delay bringing the multichassis aggregated Ethernet (mc-ae) interface back to the up state when you reboot an MC-LAG peer.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.

member-interface-speed

Syntax	<code>member-interface-speed <i>speed</i>;</code>
Hierarchy Level	[edit interfaces container-options member-interface-type]
Release Information	Statement introduced in Junos OS Release 9.2.
Description	Specify container-interface member-interface speed options.
Options	<i>speed</i> —Set interface speed to OC3, OC12, OC48, OC192, OC768, or mixed.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i>• <i>Configuring Container Interfaces for APS on SONET Links</i>• container-options on page 513

member-interface-type

Syntax	<pre>member-interface-type sonet { member-interface-speed [speed]; }</pre>
Hierarchy Level	[edit interfaces container-options]
Release Information	Statement introduced in Junos OS Release 9.2.
Description	Specify container-interface member-interface type as sonet and speed options.
Options	<p>sonet—Protocol type of the container interface, specify sonet.</p> <p>speed—Set interface speed to OC3, OC12, OC48, OC192, OC768, or mixed.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i>• <i>Configuring Container Interfaces for APS on SONET Links</i>• container-options on page 513

mep

Syntax

```
mep mep-id {
  action-profile action-profile-name
  auto-discovery;
  direction (up | down);
  interface interface-name (protect | working);
  priority number;
  remote-mep mep-id {
    action-profile profile-name;
    sla-iterator-profile profile-name {
      data-tlv-size size;
      iteration-count count-value;
      priority priority-value;
    }
  }
}
```

Hierarchy Level [edit protocols [oam ethernet connectivity-fault-management maintenance-domain md-name](#) [maintenance-association ma-name](#)]

Release Information Statement introduced in Junos OS Release 8.4.

Description The numeric identifier of the maintenance association end point (MEP) within the maintenance association.

Options **mep mep-id**—Specify the numeric identifier of the MEP.

Range: 1 through 8191

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation


- [Ethernet Alarm Indication Signal \(ETH-AIS\) Function Overview](#)
- [Configuring ETH-AIS on a CFM MEP](#)
- [Configuring a MEP to Generate and Respond to CFM Protocol Messages](#)

minimum-links

Syntax (SRX, MX, T, M, EX, QFX Series, EX4600, Qfabric System)	<code>minimum-links <i>number</i>;</code>
Hierarchy Level (EX Series)	<code>[edit interfaces aex aggregated-ether-options],</code> <code>[edit interfaces aex aggregated-sonet-options],</code> <code>[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit interfaces interface-range <i>range</i> aggregated-ether-options],</code> <code>[edit interfaces interface-range <i>range</i> aggregated-sonet-options],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Hierarchy Level (QFX Series)	<code>[edit interfaces aex aggregated-ether-options]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	For aggregated Ethernet, SONET/SDH, multilink, link services, and voice services interfaces only, set the minimum number of links that must be up for the bundle to be labeled up.
Options	<p><i>number</i>—Number of links.</p> <p>Range: On M120, M320, MX Series, T Series, and TX Matrix routers with Ethernet interfaces, the valid range for minimum-links number is 1 through 64. When the maximum value (16) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On all other routers and on EX Series switches, other than EX8200 switches, the range of valid values for minimum-links number is 1 through 8. When the maximum value (8) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On EX8200 switches, the range of valid values for minimum-links number is 1 through 12. When the maximum value (12) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On EX4600, QFX Series and Q Fabric Systems, the range of valid values for minimum-links number is 1 through 8. When the maximum value (8) is specified, all configured links of a bundle must be up for the bundle to be labeled up.</p> <p>Default: 1</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Aggregated Ethernet Minimum Links</i> <i>Configuring Aggregated SONET/SDH Interfaces</i>

- *Configuring Aggregated Ethernet Links (CLI Procedure)*
- *Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*
- *Junos OS Services Interfaces Library for Routing Devices*
- *Configuring Link Aggregation*

mip-half-function

Syntax	mip-half-function (none default explicit);
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-managementmaintenance-domain md-name], [edit protocols oam ethernet connectivity-fault-managementmaintenance-association ma-name]
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Specify the OAM Ethernet CFM maintenance domain MIP half functions. <div> NOTE: Whenever a MIP is configured and a bridge domain is mapped to multiple maintenance domains or maintenance associations, it is essential that the <code>mip-half-function</code> value for all maintenance domains and maintenance associations are the same.</div>
Options	none —Specify to not use the mip-half-function. default —Specify to use the default mip-half-function. explicit —Specify an explicit mip-half-function.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Creating a Maintenance Domain</i>• maintenance-domain on page 796

mlfr-uni-nni-bundle-options

Syntax

```
mlfr-uni-nni-bundle-options {
  acknowledge-retries number;
  acknowledge-timer milliseconds;
  action-red-differential-delay (disable-tx | remove-link);
  drop-timeout milliseconds;
  fragment-threshold bytes;
  hello-timer milliseconds;
  link-layer-overhead percent;
  lmi-type (ansi | itu | c-lmi);
  minimum-links number;
  mrru bytes;
  n391 number;
  n392 number;
  n393 number;
  red-differential-delay milliseconds;
  t391 seconds;
  t392 number;
  yellow-differential-delay milliseconds;
}
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure link services and voice services interface management properties.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Documentation**
- *Configuring Frame Relay Keepalives*
 - [lmi \(Frame Relay\) on page 765](#)
 - [lmi-type on page 768](#)
 - *Junos OS Services Interfaces Library for Routing Devices*

mode (Dynamic Profiles)

Syntax	<code>mode loose;</code>
Hierarchy Level	<code>[edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family (inet) <i>rpf-check</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Check whether the packet has a source address with a corresponding prefix in the routing table. If a corresponding prefix is not found, unicast reverse path forwarding (RPF) loose mode does not accept the packet. Unlike strict mode, loose mode does not check whether the interface expects to receive a packet with a specific source address prefix.
Default	If you do not include this statement, unicast RPF is in strict mode.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Unicast RPF Strict Mode on page 247

mode (Interfaces)

Syntax	<code>mode loose;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family (inet inet6) rpf-check],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>family (inet inet6) rpf-check]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 15.1F6 for PTX Series routers with third-generations FPCs installed.
Description	Check whether the packet has a source address with a corresponding prefix in the routing table. If a corresponding prefix is not found, unicast reverse path forwarding (RPF) loose mode does not accept the packet. Unlike strict mode, loose mode does not check whether the interface expects to receive a packet with a specific source address prefix.
Default	If you do not include this statement, unicast RPF is in strict mode.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Unicast RPF Strict Mode on page 247

modem-options

Syntax

```
modem-options {  
    dialin (console | routable);  
    init-command-string initialization-command-string;  
}
```

Hierarchy Level [edit interfaces umd0]

Release Information Statement introduced in Junos OS Release 8.2.

Description For J Series Services Routers, configure a USB port to act as a USB modem.
The remaining statement is explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Specifying a USB Modem Interface on J Series Routers on page 359](#)

monitor-session

Syntax	<code>monitor-session (<i>interface-name</i> all);</code>
Hierarchy Level	[edit protocols ppp]
Release Information	Statement introduced in Junos OS Release 7.5.
Description	Monitor PPP packet exchanges. When monitoring is enabled, packets exchanged during a session are logged to the default log of <code>/var/log/pppd</code> .
Default	If you do not include this statement, no PPPD-specific monitoring operations are performed.
Options	<code>all</code> —Monitor PPP packet exchanges on all sessions. <code><i>interface-name</i></code> —Logical interface name on which to enable session monitoring.
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Monitoring a PPP Session on page 153

mpls (Interfaces)

Syntax	<pre>mpls { pop-all-labels { required-depth <i>number</i>; } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gige-ether-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For passive monitoring on ATM and SONET/SDH interfaces and 10-Gigabit Ethernet interfaces in WAN PHY mode, process incoming IP packets that have MPLS labels.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Removing MPLS Labels from Incoming Packets</i>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>• <i>Junos OS Services Interfaces Library for Routing Devices</i>

mrru

Syntax	<code>mrru bytes;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For multilink, link services, voice services, and J Series Services Routers ISDN interfaces only, set the maximum received reconstructed unit (MRRU). The MRRU is similar to the MTU, but is specific to multilink interfaces.
Options	<i>bytes</i> —MRRU size. Range: 1500 through 4500 bytes Default: 1500 bytes
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • mtu on page 816 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

mtu

Syntax	<code>mtu bytes;</code>
Hierarchy Level	<pre> [edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit interfaces <i>interface-range name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> protocols l2circuit local-switching interface <i>interface-name</i> backup-neighbor <i>address</i>], [edit logical-systems <i>logical-system-name</i> protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i> backup-neighbor <i>address</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols l2vpn interface <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols vpls], [edit protocols l2circuit local-switching interface <i>interface-name</i> backup-neighbor <i>address</i>], [edit protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i>] [edit protocols l2circuit neighbor <i>address</i> interface <i>interface-name</i> backup-neighbor <i>address</i>], [edit routing-instances <i>routing-instance-name</i> protocols l2vpn interface <i>interface-name</i>], [edit routing-instances <i>routing-instance-name</i> protocols vpls], [edit logical-systems <i>name</i> protocols ospf area <i>name</i> interface], [edit logical-systems <i>name</i> routing-instances <i>name</i> protocols ospf area <i>name</i> interface], [edit protocols ospf area <i>name</i> interface], [edit routing-instances <i>name</i> protocols ospf area <i>name</i> interface] </pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for Layer 2 VPNs and VPLS introduced in Junos OS Release 10.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Support at the <code>[set interfaces interface-name unit logical-unit-number family ccc]</code> hierarchy level introduced in Junos OS Release 12.3R3 for MX Series routers.</p> <p>Statement introduced in Junos OS 17.3R1 Release for MX Series Routers.</p>
Description	<p>Specify the maximum transmission unit (MTU) size for the media or protocol. The default MTU size depends on the device type. Changing the media MTU or protocol MTU causes an interface to be deleted and added again.</p> <p>To route jumbo data packets on an integrated routing and bridging (IRB) interface or routed VLAN interface (RVI) on EX Series switches, you must configure the jumbo MTU size on the member physical interfaces of the VLAN that you have associated with the IRB interface or RVI, as well as on the IRB interface or RVI itself (the interface named <code>irb</code> or <code>vlan</code>, respectively).</p>



.....

CAUTION: For EX Series switches, setting or deleting the jumbo MTU size on an IRB interface or RVI while the switch is transmitting packets might cause packets to be dropped.

.....



.....

NOTE:

The MTU for an IRB interface is calculated by removing the Ethernet header overhead [6(DMAC)+6(SMAC)+2(EtherType)]. Because, the MTU is the lower value of the MTU configured on the IRB interface and the MTU configured on the IRB's associated bridge domain IFDs or IFLs, the IRB MTU is calculated as follows:

- In case of Layer 2 IFL configured with the `flexible-vlan-tagging` statement, the IRB MTU is calculated by including 8 bytes overhead (SVLAN+CVLAN).
 - In case of Layer 2 IFL configured with the `vlan-tagging` statement, the IRB MTU is calculated by including a single VLAN 4 bytes overhead.
-



NOTE:

- If a packet whose size is larger than the configured MTU size is received on the receiving interface, the packet is eventually dropped. The value considered for MRU (maximum receive unit) size is also the same as the MTU size configured on that interface.
- Not all devices allow you to set an MTU value, and some devices have restrictions on the range of allowable MTU values. You cannot configure an MTU for management Ethernet interfaces (fxp0, em0, or me0) or for loopback, multilink, and multicast tunnel devices.
- On ACX Series routers, you can configure the protocol MTU by including the `mtu` statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet] or [edit interfaces *interface-name* unit *logical-unit-number* family inet6] hierarchy level.
 - If you configure the protocol MTU at any of these hierarchy levels, the configured value is applied to all families that are configured on the logical interface.
 - If you are configuring the protocol MTU for both inet and inet6 families on the same logical interface, you must configure the same value for both the families. It is not recommended to configure different MTU size values for inet and inet6 families that are configured on the same logical interface.
- Starting in Release 14.2, MTU for IRB interfaces is calculated by removing the Ethernet header overhead (6(DMAC)+6(SMAC)+2(EtherType)), and the MTU is a minimum of the two values:
 - Configured MTU
 - Associated bridge domain's physical or logical interface MTU
 - For Layer 2 logical interfaces configured with flexible-vlan-tagging, IRB MTU is calculated by including 8 bytes overhead (SVLAN+CVLAN).
 - For Layer 2 logical interfaces configured with vlan-tagging, IRB MTU is calculated by including single VLAN 4 bytes overhead.



NOTE: Changing the Layer 2 logical interface option from `vlan-tagging` to `flexible-vlan-tagging` or vice versa adjusts the logical interface MTU by 4 bytes with the existing MTU size. As a result, the Layer 2 logical interface is deleted and re-added, and the IRB MTU is re-computed appropriately.

For more information about configuring MTU for specific interfaces and router or switch combinations, see [“Configuring the Media MTU” on page 115](#).

Options *bytes*—MTU size.

Range: 256 through 9192 bytes, 256 through 9216 (EX Series switch interfaces), 256 through 9500 bytes (Junos OS 12.1X48R2 for PTX Series routers), 256 through 9500 bytes (Junos OS 16.1R1 for MX Series routers)



NOTE: Starting in Junos OS Release 16.1R1, the MTU size for a media or protocol is increased from 9192 to 9500 for Ethernet interfaces on the following MX Series MPCs:

- MPC1
- MPC2
- MPC2E
- MPC3E
- MPC4E
- MPC5E
- MPC6E


Default: 1500 bytes (INET, INET6, and ISO families), 1448 bytes (MPLS), 1514 bytes (EX Series switch interfaces)

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring the Media MTU on page 115](#)
- [Configuring the MTU for Layer 2 Interfaces](#)
- [Setting the Protocol MTU on page 226](#)

multi-chassis-protection

Syntax	<pre>multi-chassis-protection { peer a.b.c.d { interface <i>interface-name</i>; } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 11.1.
Description	<p>For MX Series routers with multichassis aggregated Ethernet (MC-AE) interfaces, you can use this statement under the physical interface level to reduce the configuration at the logical interface level if the following assumption exists:</p> <p>If there are $n + 1$ logical interfaces under ae0, from ae0.0 through ae0.n, there will be $n + 1$ logical interfaces under ge-0/0/0 as well, from ge-0/0/0.0 through ge-0/0/0.n, and each ge-0/0/0 logical interface will be a protection link for the ae0 logical interface.</p> <p> NOTE: A bridge domain cannot have MC-AE logical interfaces which belong to different redundancy groups.</p> <p>If the Inter-Chassis Control Protocol (ICCP) connection is UP and the interchassis data link (ICL) comes UP, the router configured as standby will bring up the MC-AE interfaces shared with the peer.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Options	interface <i>interface-name</i> —Specify the interface: interface <i>interface-name-fpc/pic/port</i>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Multichassis Link Aggregation on MX Series Routers</i> • <i>Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers and QFX Series Switches</i> • <i>Configuring Aggregated Ethernet Link Protection</i> • <i>Example: Configuring Aggregated Ethernet Link Protection</i> • peer on page 901

multicast-dlci

Syntax	<code>multicast-dlci <i>dlci-identifier</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For point-to-multipoint Frame Relay, link services, and voice services interfaces only, enable multicast support on the interface. You can configure multicast support on the interface if the Frame Relay switch performs multicast replication.
Options	<i>dlci-identifier</i> —DLCI identifier, a number from 16 through 1022 that defines the Frame Relay DLCI over which the switch expects to receive multicast packets for replication.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring a Multicast-Capable Frame Relay Connection</i> • dlci on page 558 • multipoint-destination on page 826 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

multicast-only

Syntax	multicast-only;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the unit and family so that it can transmit and receive multicast traffic only. You can configure this property on the IP family only.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Protocol Family on page 208• <i>Junos OS Services Interfaces Library for Routing Devices</i>• tunnel on page 1104

multicast-statistics

Syntax	multicast-statistics;
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 10.2.
Description	For Ethernet, SONET, aggregated Ethernet, and aggregated SONET interfaces in T Series or TX Matrix routers, specify support for multicast statistics on a physical interface to enable multicast accounting for all the logical interfaces below the physical interface.
Default	not enabled—must be configured to enable
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Multicast Statistics Collection on Aggregated Ethernet Interfaces</i> • <i>Configuring Multicast Statistics Collection on Aggregated SONET Interfaces</i> • <i>Configuring Multicast Statistics Collection on Ethernet Interfaces</i> • <i>Configuring Multicast Statistics Collection on SONET Interfaces</i>

multicast-vci

Syntax	<code>multicast-vci vpi-identifier.vci-identifier;</code>
Hierarchy Level	<code>[edit interfaces interface-name unit logical-unit-number],</code> <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM encapsulation only, and for point-to-multipoint ATM logical interfaces only, enable the support of multicast on the interface. You can configure multicast support on the interface if the ATM switch performs multicast replication.
Options	vci-identifier —ATM virtual circuit identifier. Range: 0 through 16,384 vpi-identifier —ATM virtual path identifier. Range: 0 through 255 Default: 0
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring a Multicast-Capable ATM1 or ATM2 IQ Connection</i>• multipoint-destination on page 826• vci on page 1130

multilink-max-classes

Syntax	<code>multilink-max-classes <i>number</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Adaptive Services (AS) PIC link services IQ interfaces (lsq) only, configure the number of multilink classes to be negotiated when a link joins the bundle.
Options	<i>number</i> —The number of multilink classes to be negotiated when a link joins the bundle. Range: 1 through 8 Default: None
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • multipoint on page 825

multipoint

Syntax	<code>multipoint;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the interface unit as a multipoint connection.
Default	If you omit this statement, the interface unit is configured as a point-to-point connection.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring a Multipoint Connection on page 195 • point-to-point on page 910

multipoint-destination

Syntax	<pre> multipoint-destination address dlcid dlcid-identifier; multipoint-destination address { epd-threshold cells; inverse-arp; oam-liveness { down-count cells; up-count cells; } oam-period (disable seconds); shaping { (cbr rate rtvbr peak rate sustained rate burst length vbr peak rate sustained rate burst length); queue-length number; } vci vpi-identifier.vci-identifier; } </pre>
Hierarchy Level	<pre> [edit interfaces interface-name unit logical-unit-number family family address address], [edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family family address address] </pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For point-to-multipoint Frame Relay or ATM interfaces only, enable the support of multicast on the interface. You can configure multicast support on the interface if the Frame Relay or ATM switch performs multicast replication.
Options	<p>address—Address of the remote side of the point-to-multipoint connection.</p> <p>dlcid-identifier—For Frame Relay interfaces, the data-link connection identifier. Range: 0 through 0xFFFFFFF (24 bits)</p> <p>vci-identifier—For ATM interfaces, the virtual circuit identifier. Range: 0 through 16,384</p> <p>vpi-identifier—For ATM interfaces, the virtual path identifier. Range: 0 through 255 Default: 0</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- *Configuring a Point-to-Point ATM1 or ATM2 IQ Connection*
 - *Configuring a Point-to-Multipoint Frame Relay Connection*
 - [dlci on page 558](#)
 - [encapsulation \(Logical Interface\) on page 592](#)

multiservice-options

Syntax

```
multiservice-options {
  (syslog | no-syslog);
  (core-dump | no-core-dump);
  (dump-on-flow-control);
  flow-control-options {
    down-on-flow-control;
    dump-on-flow-control;
    reset-on-flow-control;
  }
}
```

Hierarchy Level [edit interfaces mo-*fpc/pic/port*]

Release Information Statement introduced before Junos OS Release 7.4.

Description For monitoring services interfaces only, configure multiservice-specific interface properties.
The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Documentation**
- [Configuring Multiservice Physical Interface Properties on page 171](#)
 - *Junos OS Services Interfaces Library for Routing Devices*
 - [passive-monitor-mode on page 894](#)

n391

Syntax	<code>n391 <i>number</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, set the Frame Relay full status polling interval.
Options	<i>number</i> —Polling interval. Range: 1 through 255 Default: 6
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• n392 on page 829• n393 on page 830• timeslots on page 1067• t392 on page 1057

n392

Syntax	<code>n392 number;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, set the Frame Relay error threshold, in number of errors.
Options	<i>number</i> —Error threshold. Range: 1 through 10 Default: 3
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• n391 on page 828• n393 on page 830• timeslots on page 1067• t392 on page 1057

n393

Syntax	n393 <i>number</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, set the Frame Relay monitored event count.
Options	<i>number</i> —Number of event count. Range: 1 through 10 Default: 4
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• n391 on page 828• n392 on page 829• timeslots on page 1067• t392 on page 1057

name-format

Syntax	<code>name-format (character-string none dns mac+2oct);</code>
Hierarchy Level	<code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain domain-name]</code>
Release Information	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
Description	Specify the format of the maintenance domain name.
Options	<p>character-string—The name is an ASCII character string.</p> <p>none—The maintenance domain name is not used.</p> <p>dns—The name is in domain name service (DNS) format. For example: <code>www.juniper.net</code>.</p> <p>mac+2oct—Name is the MAC address plus a two-octet maintenance association identifier. For example: <code>08:00:22:33:44:55.100</code>.</p> <p>Default: <code>character-string</code></p>
Required Privilege Level	<p><code>interface</code>—To view this statement in the configuration.</p> <p><code>interface-control</code>—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Creating a Maintenance Association</i> • <i>Creating a Maintenance Domain</i>

native-vlan-id

Syntax	<code>native-vlan-id <i>vlan-id</i>;</code>
Hierarchy Level (QFX Series and EX4600)	<p>For platforms without ELS:</p> <pre>[edit interfaces (QFX Series) <i>interface-name</i> unit 0 family ethernet-switching]</pre> <p>For platforms with ELS:</p> <pre>[edit interfaces (QFX Series) <i>interface-name</i>]</pre>
Hierarchy Level (ACX Series, EX Series, SRX Series, M Series, MX Series, and T Series)	<pre>[edit interfaces <i>ge-fpc/pic/port</i>],</pre> <pre>[edit interfaces <i>interface-name</i>]</pre>
Hierarchy Level (SRX Series)	<pre>[edit interfaces<i>interface-name</i>]</pre>
Release Information	<p>Statement introduced in Junos OS Release 8.3.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 9.5 for SRX Series.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.</p>
Description	<p>Configure the VLAN identifier to associate with untagged packets received on the physical interface of a trunk mode interface for the following:</p> <ul style="list-style-type: none"> • QFX Series and EX4600 • M Series routers with Gigabit Ethernet IQ PICs with SFP and Gigabit Ethernet IQ2 PICs with SFP configured for 802.1Q flexible VLAN tagging • MX Series routers with Gigabit Ethernet DPCs and MICs, Tri-Rate Ethernet DPCs and MICs, and 10-Gigabit Ethernet DPCs and MICs and MPCs configured for 802.1Q flexible VLAN tagging • T4000 routers with 100-Gigabit Ethernet Type 5 PIC with CFP • EX Series switches with Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces <p>The logical interface on which untagged packets are received must be configured with the same VLAN ID as the native VLAN ID configured on the physical interface, otherwise the untagged packets are dropped. To configure the logical interface, include the vlan-id</p>

statement (matching the **native-vlan-id** statement on the physical interface) at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.

When the **native-vlan-id** statement is included with the **flexible-vlan-tagging** statement, untagged packets are accepted on the same mixed VLAN-tagged port and on the interfaces that are configured for Q-in-Q tunneling.

When the **native-vlan-id** statement is combined with the **interface-mode** statement, untagged packets are accepted and forwarded within the bridge domain or VLAN that is configured with the matching VLAN ID.

To configure the logical interface, include the **vlan-id** statement (matching the **native-vlan-id** statement on the physical interface) at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.



NOTE: Starting in Junos OS Release 17.1R1, you can send untagged traffic without a native VLAN ID to the remote end of the network. To do this, remove the native VLAN ID from the untagged traffic configuration by setting the **no-native-vlan-insert** statement. If you do not configure this statement, the native VLAN ID is added to the untagged traffic.

- | | |
|---------------------------------|---|
| Default | By default, the untagged packets are dropped. That is, if you do not configure the native-vlan-id option, the untagged packets are dropped. |
| Options | <p>vlan-id—Numeric identifier of the VLAN.</p> <p>Range: 1 through 4094</p> <p>number—VLAN ID number.</p> <p>Range: (ACX Series routers, SRX Series devices and EX Series switches) 0 through 4094.</p> |
| Required Privilege Level | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p> <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p> |

- Related Documentation**
- [Configuring Gigabit Ethernet Interfaces \(CLI Procedure\)](#)
 - [Configuring Gigabit Ethernet Interfaces \(J-Web Procedure\)](#)
 - [Understanding Bridging and VLANs on Switches](#)
 - [Enabling VLAN Tagging](#)
 - [Configuring Access Mode on a Logical Interface](#)
 - [Configuring the Native VLAN Identifier on Switches With ELS Support](#)
 - [Understanding Interfaces](#)
 - [Understanding Q-in-Q Tunneling and VLAN Translation](#)
 - [no-native-vlan-insert](#)
 - [Sending Untagged Traffic Without VLAN ID to Remote End](#)
 - [show ethernet-switching interfaces](#)
 - [show vlans](#)
 - [flexible-vlan-tagging on page 638](#)
 - [Junos OS Network Interfaces Configuration Guide](#)


ncp-max-conf-req

Syntax	<code>ncp-max-conf-req <i>number</i></code>
Hierarchy Level	<code>[edit interfaces so-fpc/pic/port <i>unit number</i> ppp-options]</code>
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Set the maximum number of NCP Configure-Requests to be sent, after which the router goes to NCP down state.
Options	<p><i>number</i>—Ranges from 0 to 65535, where 0 means send infinite NCP Configure-Requests and any other value specifies the maximum number NCP Configure-Requests to send and then stop sending.</p> <p>Default—254</p> <p>Range: 0 through 65,535</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the NCP Configure-Request Maximum Sent on page 197• ppp-options on page 930

ncp-restart-timer

Syntax	<code>ncp-restart-timer <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	For interfaces with PPP and PPP TCC encapsulations and on multilink PPP bundle interfaces, configure a restart timer for the Network Control Protocol (NCP) component of a PPP session.
Options	<i>milliseconds</i> —The time in milliseconds between successive NCP configuration requests. Range: 500 through 10,000 milliseconds Default: 3 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring the PPP Restart Timers on page 196

nd6-stale-time

Syntax	<code>nd6-stale-time seconds;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet6]
Release Information	Statement introduced in Junos OS Release 11.1. Statement introduced in Junos OS Release 11.1 for EX Series switches.
Description	<p>Set the stale timer for IPv6 neighbor reachability confirmation. Reachability of the IPv6 neighbors is confirmed only after the stale timer has expired. For example, by setting the stale timer to 180 seconds, users can specify that IPv6 neighbor reachability be confirmed every 180 seconds.</p> <div> NOTE: When the Routing Engine sends a control packet to an IPv6 neighbor, the stale timer is the maximum interval in which neighbor reachability is confirmed. In such cases, IPv6 neighbor reachability is confirmed before the stale timer expires.</div>
Default	Default is 20 minutes (1200 seconds)
Options	seconds —Duration in seconds. Range: 1 to 18000
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• IPv6 Neighbor Discovery Overview• show ipv6 neighbors on page 2051

negotiate-address

Syntax	<code>negotiate-address;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with PPP encapsulation, enable the interface to be assigned an IP address by the remote end.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring IPCP Options for Interfaces with PPP Encapsulation on page 218• address on page 435• unnumbered-address (PPP) on page 1123• <i>Junos OS Administration Library</i>

negotiation-options

Syntax	<pre>negotiation-options { allow-remote-loopback; no-allow-link-events; }</pre>
Hierarchy Level	[edit protocols oam link-fault-management interface <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	<p>Enable and disable IEEE 802.3ah Operation, Administration, and Management (OAM) features for Ethernet interfaces.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>IEEE 802.3ah OAM Link-Fault Management Overview</i>

neighbor (Automatic Protection Switching for SONET/SDH)

Syntax	<code>neighbor address;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>If you are configuring one router to be the working router and a second to be the protect router, configure the address of the remote interface. You configure this on one or both of the interfaces.</p> <p>The address you specify for the neighbor must never be routed through the interface on which APS is configured, or instability will result. We strongly recommend that you directly connect the working and protect routers and that you configure the interface address of this shared network as the neighbor address.</p>
Options	address —Neighbor's address.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Basic Automatic Protect Switching</i>

no-allow-link-events

Syntax	<code>no-allow-link-events;</code>
Hierarchy Level	[edit protocols oam ethernet link-fault-management interface <i>interface-name</i> negotiation-options]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	Disable the sending of link event TLVs.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Disabling the Sending of Link Event TLVs</i>

no-aggregate-delegate-processing

Syntax	no-aggregate-delegate-processing;
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management]
Release Information	Statement introduced in Junos OS Release 14.1.
Description	Disable distribution of connectivity fault management (CFM) sessions on aggregated Ethernet interfaces.
Default	CFM sessions on aggregated Ethernet interfaces are distributed by default.
Required Privilege Level	Configure—To enter configuration mode. Control—To modify any configuration.
Related Documentation	<ul style="list-style-type: none">• <i>IEEE 802.1ag OAM Connectivity Fault Management Overview</i>

asynchronous-notification

Syntax	(asynchronous-notification no-asynchronous-notification);
Hierarchy Level	[edit interfaces <i>ge-fpc/pic/port</i> together-options]
Release Information	Statement introduced in Junos OS Release 8.3. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	<p>(MX Series routers, T Series routers) For all Gigabit Ethernet interfaces (1-Gigabit, 10-Gigabit, and 100-Gigabit), configure support for notification of link down alarm generation and transfer.</p> <p>(M120 and M320 routers) For all 10-Gigabit Ethernet PIC interfaces, configure support for notification of link down alarm generation and transfer.</p> <ul style="list-style-type: none"> • asynchronous-notification—Support notification of link down alarm generation and transfer. • no-asynchronous-notification—Prohibit notification of link down alarm generation and transfer.
Default	Support for notification of link down alarm generation and transfer is not enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Gigabit Ethernet Notification of Link Down Alarm Overview</i> • <i>Configuring Gigabit Ethernet Notification of Link Down Alarm</i>

no-auto-mdix

Syntax	no-auto-mdix;
Hierarchy Level	[edit interface <i>ge-fpc/port/pic</i> <i>gigether-options</i>]
Release Information	Statement introduced in Junos OS Release 9.5. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	<p>Disable the Auto MDI/MDIX feature.</p> <p>MX Series routers with Gigabit Ethernet interfaces automatically detect MDI and MDIX port connections. Use this statement to override the default setting. Remove this statement to return to the default setting.</p>
Default	Auto MDI/MDIX is enabled by default.
Options	There are no options for this statement.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Ethernet Interfaces Overview</i>• gigether-options on page 653.

auto-negotiation

Syntax	(auto-negotiation no-auto-negotiation) <remote-fault (local-interface-online local-interface-offline)>;
Hierarchy Level	[edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> gigether-options], [edit interfaces <i>ge-pim</i> /0/0 switch-options switch-port <i>port-number</i>]
Release Information	Statement introduced in Junos OS Release 7.6. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	For Gigabit Ethernet interfaces on M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers explicitly enable autonegotiation and remote fault. For EX Series switches, explicitly enable autonegotiation only. <ul style="list-style-type: none"> • auto-negotiation—Enables autonegotiation. This is the default. • no-auto-negotiation—Disable autonegotiation. When autonegotiation is disabled, you must explicitly configure the link mode and speed. <p>When you configure Tri-Rate Ethernet copper interfaces to operate at 1 Gbps, autonegotiation must be enabled.</p>



NOTE: On EX Series switches, an interface configuration that disables autonegotiation and manually sets the link speed to 1 Gbps is accepted when you commit the configuration; however, if the interface you are configuring is a Tri-Rate Ethernet copper interface, the configuration is ignored as invalid and autonegotiation is enabled by default.

To correct the invalid configuration and disable autonegotiation:

1. Delete the **no-auto-negotiation** statement and commit the configuration.
2. Set the link speed to 10 or 100 Mbps, set **no-auto-negotiation**, and commit the configuration.

On EX Series switches, if the link speed and duplex mode are also configured, the interfaces use the values configured as the desired values in the negotiation. If autonegotiation is disabled, the link speed and link mode must be configured.



NOTE: On T4000 routers, the **auto-negotiation** command is ignored for interfaces other than Gigabit Ethernet.



NOTE: On ACX Series routers, when you configure fiber interfaces (fiber media mode) to operate at 1 Gbps, autonegotiation is enabled by default to negotiate the speed and duplex settings. You can disable autonegotiation by using the `(no-auto-negotiation)` statement, and commit the configuration, in the fiber media mode. In copper interfaces (copper media mode), autonegotiation is enabled by default. To disable autonegotiation, you need to explicitly configure the link speed to 10 or 100 Mbps, set `no-auto-negotiation`, and commit the configuration.

Default Autonegotiation is automatically enabled. No explicit action is taken after the autonegotiation is complete or if the negotiation fails.

Options `remote-fault (local-interface-online | local-interface-offline)`—(Optional) For M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers only, manually configure remote fault on an interface.

Default: `local-interface-online`

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Gigabit Ethernet Autonegotiation Overview*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces for EX Series Switches with ELS support*

cbit-parity

Syntax	(cbit-parity no-cbit-parity);
Hierarchy Level	[edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For T3 interfaces only, enable or disable C-bit parity mode, which controls the type of framing that is present on the transmitted T3 signal. When C-bit parity mode is enabled, the C-bit positions are used for the far-end block error (FEBE), far-end alarm and control (FEAC), terminal data link, path parity, and mode indicator bits, as defined in ANSI T1.107a-1989. For ATM and ATM2 IQ2 and IQ2-E interfaces, M23 framing is used when the no-cbit-parity statement is included. For all other interfaces, M13 framing is used when the no-cbit-parity statement is included.
Default	C-bit parity mode is enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E3 and T3 Parameters on ATM Interfaces</i> • <i>Disabling T3 C-Bit Parity Mode</i>



core-dump

Syntax	(core-dump no-core-dump);
Hierarchy Level	[edit interfaces mo- <i>fpc/pic/port</i> multiservice-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For monitoring services interfaces only, a useful tool for isolating the cause of a problem. Core dumping is enabled by default. The directory /var/tmp contains core files. The Junos OS saves the current core file (0) and the four previous core files, which are numbered 1 through 4 (from newest to oldest):</p> <ul style="list-style-type: none">• core-dump—Enable the core dumping operation.• no-core-dump—Disable the core dumping operation.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Multiservice Physical Interface Properties on page 171• <i>Junos OS Services Interfaces Library for Routing Devices</i>

feac-loop-respond

Syntax	(feac-loop-respond no-feac-loop-respond);
Hierarchy Level	[edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For T3 interfaces only, configure the router so a remote CSU can place the local router into loopback.</p> <p>If you configure remote or local loopback with the T3 loopback statement, the router does not respond to FEAC requests from the CSU even if you include the feac-loop-respond statement in the configuration. For the router to respond, you must delete the loopback statement from the configuration.</p> <p>You must rollback the setting done on the remote CSU prior to deactivating the feac-loop-respond statement. If the remote CSU cannot comply, clear the remote loop through local configuration to achieve the cleanup. For example, configure remote loopback on the interface and then delete the remote loopback.</p>
Default	The router does not respond to FEAC requests.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the T3 FEAC Response</i> • loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3) on page 779 • remote-loopback-respond on page 974

flow-control

Syntax	(flow-control no-flow-control);
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options], [edit interfaces <i>interface-name</i> multiservice-options], [edit interfaces interface-range <i>name</i> aggregated-ether-options], [edit interfaces interface-range <i>name</i> ether-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 in EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	For aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, explicitly enable flow control, which regulates the flow of packets from the router or switch to the remote side of the connection. Enabling flow control is useful when the remote device is a Gigabit Ethernet switch. Flow control is not supported on the 4-port Fast Ethernet PIC.
	<div>  <p>NOTE: On the Type 5 FPC, to prioritize control packets in case of ingress oversubscription, you must ensure that the neighboring peers support MAC flow control. If the peers do not support MAC flow control, then you must disable flow control.</p> </div>
Default	Flow control is enabled.
	<div>  <p>NOTE: Flow control is enabled by default only on physical interfaces and it is disabled by default on aggregated Ethernet interfaces.</p> </div>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Flow Control</i> <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i> <i>Configuring Gigabit Ethernet Interfaces for EX Series Switches with ELS support</i>

gratuitous-arp-reply

Syntax	(gratuitous-arp-reply no-gratuitous-arp-reply);
Hierarchy Level	[edit interfaces <i>interface-name</i>] [edit interfaces interface-range <i>interface-range-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 in EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	For Ethernet interfaces, enable updating of the Address Resolution Protocol (ARP) cache for gratuitous ARPs.
Default	Updating of the ARP cache is disabled on all Ethernet interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Gratuitous ARP</i> • no-gratuitous-arp-request on page 850

no-gratuitous-arp-request

Syntax	no-gratuitous-arp-request;
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 9.6 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	For Ethernet interfaces and pseudowire logical interfaces, do not respond to gratuitous ARP requests.
Default	Gratuitous ARP responses are enabled on all Ethernet interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Gratuitous ARP</i>

no-keepalives

Syntax	no-keepalives;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Disable the sending of keepalives on a physical interface configured with PPP, Frame Relay, or Cisco HDLC encapsulation. The default keepalive interval is 10 seconds.</p> <p>For ATM2 IQ interfaces only, you can disable keepalives on a logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"> • atm-ppp-llc—PPP over AAL5 LLC encapsulation. • atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Keepalives on page 135 • <i>Disabling the Sending of PPPoE Keepalive Messages</i> • <i>Configuring Frame Relay Keepalives</i>

long-buildout

Syntax	(long-buildout no-long-buildout);
Hierarchy Level	[edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure the T3 line buildout. A T3 interface has two settings for the T3 line buildout: a short setting, which is less than 255 feet (68 meters), and a long setting, which is greater than 255 feet and shorter than 450 feet (137 meters).</p> <p>This statement applies to copper-cable-based T3 interfaces only. You cannot configure a line buildout for a DS3 channel on a channelized OC12 interface, which runs over fiber-optic cable.</p>
Default	A T3 interface uses the short line buildout setting (no-long-buildout) for wires shorter than 255 feet (68 meters).
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the T3 Line Buildout</i>

loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)

Syntax	(loopback no-loopback);
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options], [edit interfaces <i>interface-range name</i> ether-options]</p> <p>For QFX Series and EX Series:</p> <p>[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> ether-options],</p> <p>For SRX Series Devices and vSRX:</p> <p>[edit interfaces <i>interface-name</i> redundant-ether-options]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4 for MX Series.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Statement modified in Junos OS Release 9.2 for the SRX Series.</p>
Description	For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces, enable or disable loopback mode.



NOTE:

- By default, local aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces connect to a remote system.
- IPv6 Neighbor Discovery Protocol (NDP) addresses are not supported on Gigabit Ethernet interfaces when loopback mode is enabled on the interface. That is, if the loopback statement is configured at the [edit interfaces *ge-fpc/pic/port* gigether-options] hierarchy level, an NDP address cannot be configured at the [edit interfaces *ge-fpc/pic/port* unit *logical-unit-number* family inet6 address] hierarchy level.

Default By default, loopback is disabled.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Ethernet Loopback Capability*
- *Understanding Interfaces*

mac-learn-enable

Syntax `mac-learn-enable;`

Hierarchy Level [edit interfaces *interface-name* gigether-options [ethernet-switch-profile](#)]
[edit interfaces aex aggregated-ether-options ethernet-switch-profile]

Release Information Statement introduced before Junos OS Release 7.4.
Support for statement under the **[edit interfaces aex aggregated-ether-options ethernet-switch-profile]** hierarchy introduced in Junos OS Release 15.1.

Description For Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), for Gigabit Ethernet DPCs on MX Series routers, for 100-Gigabit Ethernet Type 5 PIC with CFP, and for MPC3E, MPC4E, MPC5E, MPC5EQ, and MPC6E MPCs, configure dynamic learning of the source and destination MAC addresses. By default, the interface is not allowed to dynamically learn source and destination MAC addresses.

To disable dynamic learning of the source and destination MAC addresses after it has been configured, you must delete **mac-learn-enable** from the configuration.

MPCs support MAC address accounting for an individual interface or an aggregated Ethernet interface member link only after the interface has received traffic from the MAC source. If traffic is only exiting an interface, the MAC address is not learned and MAC address accounting does not occur.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring MAC Address Filtering*
- *Configuring MAC Address Accounting*


no-partition

Syntax	<code>no-partition interface-type (e1 (cau4 so) (ct3 t3) so t3);</code>
Hierarchy Level	<pre>[edit interfaces ce1-fpc/pic/port], [edit interfaces coc1-fpc/pic/port:channel], [edit interfaces coc12-fpc/pic/port], [edit interfaces cstm1-fpc/pic/port], [edit interfaces ct3-fpc/pic/port]</pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Channelized E1 IQ PICs only, configure the channelized E1 interface as an unpartitioned, clear channel.</p> <p>For Channelized OC12 PIC only, convert the channelized OC1 IQ interface into a channelized T3 interface or a T3 interface. You perform this configuration task for C-bit parity and M13-mapped configurations.</p> <p>For Channelized OC12 IQ PICs only, configure the channelized OC12 interface as an unpartitioned, clear channel.</p> <p>For Channelized STM1 PIC only, convert the channelized STM1 IQ interface into a channelized Administrative Unit 4 (AU-4) interface or a SONET/SDH STM1 interface.</p> <p>For Channelized DS3 PIC only, configure the channelized T3 interface as an unpartitioned, clear channel.</p>
Default	If you do not include either this statement or the partition statement, the Channelized IQ PIC is not partitioned, and no data channels are configured.
Options	<p>The option used must correspond to the physical interface type:</p> <p>e1—E1 interface type.</p> <p>coc12 so—Channelized OC12 interface type, in SONET mode.</p> <p>cau4—Channelized AU-4 interface type.</p> <p>cstm1—SONET/SDH STM1 interface type, in SDH mode.</p> <p>ct3—Channelized T3 interface type.</p> <p>t3—T3 interface type.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>


**Related
Documentation**

- *Channelized E1 IQ and IQE Interfaces Overview*
- *Channelized OC12/STM4 IQ and IQE Interfaces Overview*
- *Configuring an OC12/STM4 Interface*
- *Configuring Channelized STM1 IQ and IQE Interfaces*
- *Configuring T3 IQ Interfaces*
- [partition on page 891](#)
- *no-partition*

payload-scrambler

Syntax	(payload-scrambler no-payload-scrambler);
Hierarchy Level	[edit interfaces <i>interface-name</i> e3-options], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Enable or disable HDLC scrambling on an E3, a SONET/SDH, or a T3 interface. This type of scrambling provides better link stability. Both sides of a connection must either use or not use scrambling.</p> <p>If you commit a T3 interface configuration that has HDLC payload scrambling enabled, the interface must also be configured to be compatible with the channel service unit (CSU) at the remote end of the line.</p> <p>Disable payload scrambling on an E3 interface if Digital Link compatibility mode is used.</p> <p>On a channelized OC12 interface, the sonet payload-scrambler statement is ignored. To configure scrambling on the DS3 channels on the interface, you can include the t3-options payload-scrambler statement in the configuration for each DS3 channel.</p>
	<p> NOTE: The payload-scrambler statement at the [edit interfaces <i>interface-name</i> e3-options] hierarchy level is not valid for IQE PICs.</p>
Default	Payload scrambling is disabled on all E3 and T3 interfaces; it is enabled by default on E3/T3 over ATM interfaces and on SONET/SDH interfaces.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E3 and T3 Parameters on ATM Interfaces</i> • <i>Configuring E3 HDLC Payload Scrambling</i> • <i>Configuring SONET/SDH HDLC Payload Scrambling for Link Stability</i> • <i>Configuring T3 HDLC Payload Scrambling</i> • <i>Examples: Configuring T3 Interfaces</i> • compatibility-mode on page 504

no-pre-classifier

Syntax	no-pre-classifier;
Hierarchy Level	[edit chassis fpc <i>n</i> pic <i>n</i>]
Release Information	Statement introduced in Junos OS Release 10.4.
Description	<p>Specify disabling the control queue for all ports on the 10-Gigabit Ethernet LAN/WAN PIC. Deleting this configuration re-enables the control queue feature on all ports of the 10-Gigabit Ethernet LAN/WAN PIC.</p> <hr/> <div> NOTE: For the 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (model number PD-5-10XGE-SFPP), the control queue has a rate limiter to limit the control traffic to 2 Mbps (fixed, not user-configurable) per port. If the transit control traffic crosses this limit, then it can cause drops on locally terminating control traffic, causing flap of protocols such as BGP and OSPF. To avoid the control traffic being dropped, configure the no-pre-classifier statement to disable the control queue.</div> <hr/>
Default	The no-pre-classifier statement is not configured and the control queue is operational.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">10-port 10-Gigabit Ethernet LAN/WAN PIC OverviewConfiguring Control Queue Disable on a 10-port 10-Gigabit Ethernet LAN/WAN PIC

no-redirects

Syntax	no-redirects;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Do not send protocol redirect messages on the interface. To disable the sending of protocol redirect messages for the entire router or switch, include the no-redirects statement at the [edit system] hierarchy level.
Default	Interfaces send protocol redirect messages.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Disabling the Transmission of Redirect Messages on an Interface on page 228• <i>Junos OS Administration Library</i>

source-filtering

Syntax	(source-filtering no-source-filtering);
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.
Description	<p>For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and Gigabit Ethernet IQ interfaces only, enable the filtering of MAC source addresses, which blocks all incoming packets to that interface. To allow the interface to receive packets from specific MAC addresses, include the source-address-filter statement.</p> <p>If the remote Ethernet card is changed, the interface is no longer able to receive packets from the new card because it has a different MAC address.</p>
Default	Source address filtering is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring MAC Address Filtering for Ethernet Interfaces</i>• <i>Configuring MAC Address Filtering on PTX Series Packet Transport Routers</i>• accept-source-mac on page 419• source-address-filter on page 1024

syslog (Monitoring)

Syntax	(syslog no-syslog);
Hierarchy Level	[edit interfaces mo-fpc/pic/port multiservice-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>System logging is enabled by default. The system log information of the Monitoring Services PIC is passed to the kernel for logging in the <code>/var/log</code> directory.</p> <ul style="list-style-type: none">• syslog—Enable PIC system logging.• no-syslog—Disable PIC system logging.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Multiservice Physical Interface Properties on page 171• <i>Junos OS Services Interfaces Library for Routing Devices</i>

no-termination-request

Syntax	no-termination-request;
Hierarchy Level	[edit interfaces <i>interface-name</i> ppp-options], [edit interfaces lsq- <i>fpc/pic/port</i> lsq-failure-options]
Release Information	Statement introduced in Junos OS Release 7.4. Support at the [edit interfaces <i>interface-name</i> ppp-options] hierarchy level added in Junos OS Release 8.3.
Description	For LSQ PICs or link PICs in redundant LSQ configurations, you can inhibit the router from sending PPP termination-request messages to the remote host if the PIC fails.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Link PIC Failover on Channelized OC3 IQ and IQE Interfaces</i>• <i>Configuring Link PIC Failover on Channelized OC12/STM4 IQ and IQE Interfaces</i>• <i>Configuring Link PIC Failover on Channelized STM1 Interfaces</i>• <i>Junos OS Services Interfaces Library for Routing Devices</i>

translate-discard-eligible

Syntax	(translate-discard-eligible no-translate-discard-eligible);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with encapsulation type Frame Relay CCC, enable or disable translation of Frame Relay discard eligible (DE) control bits.
Default	DE bit translation is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Frame Relay Control Bit Translation</i>

translate-fecn-and-becn

Syntax	(translate-fecn-and-becn no-translate-fecn-and-becn);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with encapsulation type Frame Relay CCC, enable or disable translation of Frame Relay forward explicit congestion notification (FECN) control bits and Frame Relay backward explicit congestion notification (BECN) control bits.
Default	FECN and BECN bit translation is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Frame Relay Control Bit Translation</i>

unframed

Syntax	(unframed no-unframed);
Hierarchy Level	[edit interfaces <i>interface-name</i> e3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For E3 IQ interfaces only, enable or disable unframed mode. In unframed mode, the E3 IQ interface do not detect yellow (ylw) or loss-of-frame (lof) alarms.
Default	Unframed mode is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring E3 IQ and IQE Unframed Mode</i>

z0-increment

Syntax	(z0-increment no-z0-increment);
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure an incremental STM ID rather than a static one.
Default	no-Z0-increment
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring an Incrementing STM ID to Interoperate with Older Equipment in SDH Mode</i>• sonet-options on page 1021

node-id

Syntax	<code>node-id mac-address;</code>
Hierarchy Level	[edit protocols protection-group ethernet-ring ring-name]
Release Information	Statement introduced in Junos OS Release 9.4.
Description	<p>For EX Series switches and QFX Series switches, node-id is not configurable.</p> <p>For MX Series routers, optionally specify the MAC address of a node in the protection group. If this statement is not included, the router assigns the node's MAC address.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Ethernet Ring Protection Switching Overview</i> • <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i> • <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i>

non-revertive (Interfaces)

Syntax	<code>non-revertive;</code>
Hierarchy Level	[edit interfaces aeX aggregated-ether-options lacp link-protection]
Release Information	<p>Statement introduced in Junos OS Release 9.3.</p> <p>Statement introduced in Junos OS Release 11.4 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.</p>
Description	Disable the ability to switch to a better priority link (if one is available) once a link is established as active and collection distribution is enabled.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • link-protection on page 760 • <i>Configuring Aggregated Ethernet Link Protection</i> • <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches</i>

oam

```

Syntax  oam {
        ethernet {
            connectivity-fault-management {
                action-profile profile-name {
                    default-actions {
                        interface-down;
                    }
                }
            }
            performance-monitoring {
                delegate-server-processing;
                hardware-assisted-timestamping;
                hardware-assisted-keepalives;
                sla-iterator-profiles {
                    profile-name {
                        avg-fd-twoway-threshold;
                        avg-ifdv-twoway-threshold;
                        avg-flr-forward-threshold;
                        avg-flr-backward-threshold;
                        disable;
                        calculation-weight {
                            delay delay-weight;
                            delay-variation delay-variation-weight;
                        }
                        cycle-time milliseconds;
                        iteration-period connections;
                        measurement-type (loss | statistical-frame-loss | two-way-delay);
                    }
                }
            }
        }
        linktrace {
            age (30m | 10m | 1m | 30s | 10s);
            path-database-size path-database-size;
        }
        maintenance-domain domain-name {
            level number;
            name-format (character-string | none | dns | mac+2octet);
            maintenance-association ma-name {
                short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
                protect-maintenance-association protect-ma-name;
                remote-maintenance-association remote-ma-name;
                continuity-check {
                    convey-loss-threshold;
                    hold-interval minutes;
                    interface-status-tlv;
                    interval (100ms | 10m | 10ms | 10s | 1m | 1s);
                    loss-threshold number;
                    port-status-tlv;
                }
            }
            mep mep-id {
                auto-discovery;
                direction (up | down);
            }
        }
    }

```

```

interface interface-name (protect | working);
lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
    rem-err-xcon | xcon );
priority number;
remote-mep mep-id {
    action-profile profile-name;
    sla-iterator-profile profile-name {
        data-tlv-size size;
        iteration-count count-value;
        priority priority-value;
    }
}
}
}
}
}
link-fault-management {
    action-profile profile-name {
        action {
            link-down;
            send-critical-event;
            syslog;
        }
        event {
            link-adjacency-loss;
            link-event-rate {
                frame-error count;
                frame-period count;
                frame-period-summary count;
                symbol-period count;
            }
            protocol-down;
        }
    }
}
interface interface-name {
    apply-action-profile
    link-discovery (active | passive);
    loopback-tracking;
    pdu-interval interval;
    pdu-threshold threshold-value;
    remote-loopback;
    event-thresholds {
        frame-error count;
        frame-period count;
        frame-period-summary count;
        symbol-period count;
    }
    negotiation-options {
        allow-remote-loopback;
        no-allow-link-events;
    }
}
}
}
}
}

```

Hierarchy Level	[edit protocols]
Release Information	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
Description	For Ethernet interfaces on M320, M120, MX Series, and T Series routers and PTX Series Packet Transport Routers, provide IEEE 802.3ah Operation, Administration, and Maintenance (OAM) support. The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>IEEE 802.3ah OAM Link-Fault Management Overview</i>

oam-liveness

Syntax	<pre>oam-liveness { down-count cells; up-count cells; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
Description	<p>For ATM encapsulation only, configure Operation, Administration, and Maintenance (OAM) F5 loopback cell count thresholds. Not supported on ATM-over-SHDSL interfaces.</p> <p>For ATM2 IQ PICs only, configure OAM F4 loopback cell count thresholds at the [edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>] hierarchy level.</p>
Options	<p>down-count cells—Minimum number of consecutive OAM F4 or F5 loopback cells lost before a VC is declared down. Range: 1 through 255 Default: 5 cells</p> <p>up-count cells—Minimum number of consecutive OAM F4 or F5 loopback cells received before a VC is declared up. Range: 1 through 255 Default: 5 cells</p>
Required Privilege Level	<p>interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring the ATM OAM F5 Loopback Cell Threshold

oam-period

Syntax	<code>oam-period (disable seconds);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i></code> <code> multipoint-destination <i>address</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For ATM encapsulation only, configure the OAM F5 loopback cell period. Not supported on ATM-over-SHDSL interfaces. For ATM2 IQ PICs only, configure the OAM F4 loopback cell period at the [edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>] hierarchy level.
Default	If you omit this statement, OAM F5 loopback cells are not initiated, but the interface still responds if it receives OAM F5 loopback cells.
Options	disable —Disable the OAM loopback cell transmit feature. seconds —OAM loopback cell period. Range: 1 through 900 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Defining the ATM OAM F5 Loopback Cell Period</i>

oc-slice

Syntax	<code>oc-slice <i>oc-slice-range</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> partition <i>partition-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For channelized OC12 IQ interfaces only, configure the range of SONET/SDH slices.
Default	If you do not include either this statement or the no-partition statement, the Channelized OC12 IQ PICs not partitioned, and no data channels are configured.
Options	<p><i>oc-slice-range</i>—Range of SONET/SDH slices. OC3 interfaces must occupy three consecutive OC slices per interface, in the form 1–3, 4–6, 7–9, or 10–12. The T3, T1, and DS0 interface types each occupy one OC slice per interface.</p> <p>Range: For OC3 interfaces, 1–3, 4–6, 7–9, or 10–12; for SONET/SDH and T3 interfaces, 1–12</p> <p>The remaining statement is explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i>

open-timeout

Syntax	<code>open-timeout <i>seconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> services-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure timeout period for Transmission Control Protocol (TCP) session establishment.
Options	<i>seconds</i> —Timeout period in seconds. Range: 4 through 224 seconds Default: 5 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>


operating-mode

Syntax	<code>operating-mode <i>mode</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> dsl-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For J Series Services Routers only, modify the operating mode of the digital subscriber line for an ATM interface.
Options	<p>mode—Operating mode for ATM-over-ADSL interfaces. The mode can be one of the following:</p> <ul style="list-style-type: none"> • adsl2plus—Set the ADSL line to train in the ITU G.992.5 mode. • ansi-dmt—Set the ADSL line to train in the ANSI T1.413 Issue 2 mode. • auto—Set the ADSL line to autonegotiate the setting to match the setting of the DSL access multiplexer (DSLAM) located at the central office. The ADSL line trains in the ANSI T1.413 Issue 2 (ansi-dmt) or ITU G.992.1 (itu-dmt) mode. • etsi—Set the ADSL line to train in the ETSI TS 101 388 V1.3.1 mode. • itu-annexb-ur2—Set the ADSL line to train in the ITU G.992.1 UR-2 mode. • itu-annexb-non-ur2—Set the ADSL line to train in the ITU G.992.1 non-UR-2 mode. • itu-dmt—Set the ADSL line to train in the ITU G.992.1 mode. • itu-dmt-bis—Set the ADSL line to train in the ITU G.992.3 mode. <p>Default: auto</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>ATM-over-ADSL Overview</i> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

optics-options

Syntax	<pre> optics-options { alarm low-light-alarm { (link-down syslog); } tca <i>tca-identifier</i> (enable-tca no-enable-tca) (threshold <i>number</i> threshold-24hrs <i>number</i>); tx-power <i>dbm</i>; warning low-light-warning { (link-down syslog); } wavelength <i>nm</i>; } </pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>alarm option and warning options introduced in Junos OS Release 10.0.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement and tx-power option introduced in Junos OS Release 13.2 for PTX Series routers.</p> <p>tca option introduced in Junos OS Release 14.2 for PTX Series routers.</p> <p>Statement introduced in Junos OS Release 18.3R1 for PTX10K-LC1104 on the PTX10008 and PTX10016 routers.</p> <p>Statement introduced in Junos OS Release 18.3R1 for ACX6360 routers.</p>
Description	For 10-Gigabit Ethernet or 100-Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces only, configure full C-band International Telecommunication Union (ITU)-Grid tunable optics.
Options	The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Ethernet DWDM Interface Wavelength Overview</i> • <i>100-Gigabit Ethernet OTN Options Configuration Overview</i> • <i>Supported Forward Error Correction Modes on ACX6360 Router</i>

option-82

Syntax	<code>option-82 <circuit-id> <remote-id>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure vlan-ranges authentication username-include], [edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges authentication username-include]
Release Information	Statement introduced in Junos OS Release 10.0. Options circuit-id and remote-id introduced in Junos OS Release 11.4.
Description	<p>Specify that the option 82 information from the client PDU is concatenated with the username during the subscriber authentication process.</p> <p>For autosense VLANs, you can additionally specify Option 82 suboption information that is concatenated with the username. You can specify either both or neither of the Agent Circuit ID (suboption 1) and Agent Remote ID (suboption 1). If you specify both, the Agent Circuit ID is supplied first, followed by a delimiter, and then the Agent Remote ID. If you specify that neither suboption is supplied, the raw payload of Option 82 from the PDU is concatenated to the username.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p> NOTE: The option 82 value used in creating the username is based on the option 82 value that is encoded in the incoming DHCP discover packet. The use of suboptions is supported for DHCPv4 only.</p> </div>
Options	<p>none—Use the raw payload of Option 82 from the PDU.</p> <p>circuit-id—(Optional) Use the Agent Circuit ID suboption (suboption 1).</p> <p>remote-id—(Optional) Use the Agent Remote ID suboption (suboption 2).</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring VLAN Interface Username Information for AAA Authentication</i> • <i>Using DHCP Option 82 Suboptions in Authentication Usernames for Autosense VLANs</i>

otn-options

Syntax `otn-options {`

```

bytes (otn-options) transmit-payload-type value;
fec (efec | gfec | gfec-sdfec | none );
(is-ma | no-is-ma);
(laser-enable | no-laser-enable);
(line-loopback | no-line-loopback);
(local-loopback | no-local-loopback);
(odu-ttim-action-enable | no-odu-ttim-action-enable);
(otu-ttim-action-enable | no-odu-ttim-action-enable);
odu-delay-management {
    (bypass | no-bypass);
    (monitor-end-point | no-monitor-end-point);
    number-of-frames value;
    (no-start-measurement | start-measurement;
}
odu-signal-degrade {
    ber-threshold-clear value;
    ber-threshold-signal-degrade value;
    interval value;
}
(prbs | no-prbs);
preemptive-fast-reroute {
    (backward-frr-enable | no-backward-frr-enable);
    (signal-degrade-monitor-enable | no-signal-degrade-monitor-enable);
    odu-backward-frr-enable | no-odu-backward-frr-enable;
    odu-signal-degrade-monitor-enable | no-odu-signal-degrade-monitor-enable;
}
rate {
    (fixed-stuff-bytes | no-fixed-stuff-bytes);
    oc192;
    otu4;
    (pass-through | no-pass-through);
}
signal-degrade {
    ber-threshold-clear value;
    ber-threshold-signal-degrade value;
    interval value;
}
tca tca-identifier (enable-tca | no-enable-tca) (threshold number | threshold-24hrs number);
transport-monitoring;
trigger trigger-identifier;
tti tti-identifier;
}

```

Hierarchy Level [edit interfaces *ge-fpc/pic/port*]
 [edit interfaces *xe-fpc/pic/port*]
 [edit interfaces *et-fpc/pic/port*]

Release Information Statement introduced in Junos OS Release 9.4.

bytes, **is-ma**, **local-loopback**, **no-is-ma**, **no-local-loopback**, **no-odu-ttim-action-enable**, **no-otu-ttim-action-enable**, **no-prbs**, **odu-delay-management**, **odu-ttim-action-enable**, **otu-ttim-action-enable**, **prbs**, **preemptive-fast-reroute**, and **signal-degrade** statements introduced in Junos OS Release 13.2 for PTX Series routers.

oc192 statement introduced in Junos OS Release 13.3R3 for MX Series routers.

odu-signal-degrade, **odu-backward-frr-enable** | **no-odu-backward-frr-enable**, **odu-signal-degrade-monitor-enable** | **no-odu-signal-degrade-monitor-enable** statements introduced in Junos OS Release 14.1R2 and 14.2 for P2-100GE-OTN PIC in PTX5000 routers.

tca option introduced in Junos OS Release 14.2 for PTX Series routers.

bytes, **line-loopback**, **local-loopback**, **preemptive-fast-reroute**, **tca**, **trigger**, **prbs**, and **tti** statements introduced in 18.3R1 for ACX6360 routers.

Description	Specify the Ethernet optical transport network (OTN) interface and options.
Options	The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	<p>interfaces—To view this statement in the configuration.</p> <p>interfaces-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>10-Gigabit Ethernet OTN Options Configuration Overview</i> • <i>100-Gigabit Ethernet OTN Options Configuration Overview</i> • <i>Configuring 100-Gigabit DWDM OTN PICs</i>

output

Syntax	<pre>output { service-set <i>service-set-name</i> <service-filter <i>filter-name</i>>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet service], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet service]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define one or more output service sets and filters to be applied to traffic.
Options	The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

output-list

Syntax	<code>output-list [<i>filter-names</i>];</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> filter],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> filter]</code>
Release Information	Statement introduced in Junos OS Release 7.6.
Description	Apply a group of filters to evaluate when packets are transmitted on an interface.
Options	<code>[<i>filter-names</i>]</code> —Name of a filter to evaluate when packets are transmitted on the interface. Up to 16 filters can be included in a filter input list.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Applying a Filter to an Interface on page 238 • input-list on page 699 • <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • <i>Junos OS Administration Library</i>

output-policer

Syntax	<code>output-policer <i>policer-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]</code>
Release Information	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Apply a single-rate two-color policer to the Layer 2 output traffic at the logical interface. The output-policer and output-three-color statements are mutually exclusive.
Options	<i>policer-name</i> —Name of the single-rate two-color policer that you define at the [edit firewall] hierarchy level.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Two-Color and Three-Color Policers at Layer 2</i>• <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i>• <i>Configuring a Gigabit Ethernet Policer</i>• input-policer on page 700• input-three-color on page 702• layer2-policer on page 745• logical-interface-policer on page 774• output-three-color on page 882

output-priority-map

Syntax	<pre>output-priority-map { classifier { premium { forwarding-class class-name { loss-priority (high low); } } } }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile]</p> <p>[edit interfaces <i>interface-name</i> ether-options ethernet-switch-profile ethernet-policer-profile]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p>
Description	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, define the output policer priority map to be applied to outgoing frames on this interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Specifying an Output Priority Map</i> • input-priority-map on page 701

output-three-color

Syntax	<code>output-three-color <i>policer-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]</code>
Release Information	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Apply a single-rate or two-rate three-color policer to the Layer 2 output traffic at the logical interface. The output-three-color and output-policer statements are mutually exclusive.
Options	<i>policer-name</i> —Name of the single-rate or two-rate three-color policer.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Two-Color and Three-Color Policers at Layer 2</i>• <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i>• <i>Configuring a Gigabit Ethernet Policer</i>• input-three-color on page 702• input-policer on page 700• layer2-policer on page 745• logical-interface-policer on page 774• output-policer on page 880

output-vlan-map (Aggregated Ethernet)

Syntax	<pre>output-vlan-map { (pop push swap); tag-protocol-id <i>tpid</i>; vlan-id <i>number</i>; }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</pre>
Release Information	<p>Statement introduced in Junos OS Release 8.2.</p> <p>Starting in Junos OS Release 17.3R1, input-vlan-map for outer vlan is supported for L2 circuit over aggregated Ethernet interfaces for QFX10000 Series switches.</p>
Description	<p>Define the rewrite profile to be applied to outgoing frames on this logical interface. On MX Series routers, this statement only applies to aggregated Ethernet interfaces using Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ2 and IQ2-E interfaces and 100-Gigabit Ethernet Type 5 PIC with CFP..</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Stacking and Rewriting Gigabit Ethernet VLAN Tags • input-vlan-map (Aggregated Ethernet) on page 703

output-vlan-map

Syntax	<pre>output-vlan-map { (pop pop-pop pop-swap push push-push swap swap-push swap-swap); inner-tag-protocol-id <i>tpid</i>; inner-vlan-id <i>number</i>; tag-protocol-id <i>tpid</i>; vlan-id <i>number</i>; }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>pop-pop, pop-swap, push-push, swap-push, and swap-swap statements added in Junos OS Release 8.1.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>
Description	<p>For EX Series switches, defines the rewrite operation to be applied to outgoing frames.</p> <p>For MX Series routers and NFX Series devices' Gigabit Ethernet IQ and 10-Port 10-Gigabit Ethernet SFPP interfaces only, defines the rewrite operation to be applied to outgoing frames on this logical interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Stacking and Rewriting Gigabit Ethernet VLAN Tags</i>• input-vlan-map on page 704

overflow (Receive Bucket)

Syntax	<code>overflow (discard tag);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <code>receive-bucket</code>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify how to handle packets that exceed the threshold for the receive leaky bucket.
Options	<p>tag—Tag, count, and process received packets that exceed the threshold.</p> <p>discard—Discard received packets that exceed the threshold. No counting is done.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 157


overflow (Transmit Bucket)

Syntax	<code>overflow discard;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <code>transmit-bucket</code>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Discard packets that exceed the threshold for the transmit leaky bucket.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 157

override

Syntax	<code>override tag <i>vlan-tag</i> dynamic-profile <i>profile name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> auto-configure vlan-ranges],</code> <code>[edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges]</code>
Release Information	Statement introduced in Junos OS Release 11.2.
Description	Override dynamic profile assignment to individual VLANs that are already part of a previously defined VLAN range and dynamic profile.
Options	<i>vlan-tag</i> —VLAN tag that you want to override. <i>profile-name</i> —Name of the dynamic profile that you want to use when overriding the specified VLAN tag.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Overriding the Dynamic Profile Used for an Individual VLAN</i>• <i>Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs</i>• <i>Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs</i>


pado-advertise

Syntax	pado-advertise;
Hierarchy Level	[edit protocols pppoe]
Release Information	Statement introduced in Junos OS Release 10.2.
Description	<p>Enable named services configured in PPPoE service name tables to be advertised in PPPoE Active Discovery Offer (PADO) control packets. By default, advertisement of named services in PADO packets is disabled.</p> <hr/> <div>  <p>NOTE: If you enable advertisement of named services in PADO packets, make sure the number and length of all advertised service entries does not exceed the maximum transmission unit (MTU) size of the PPPoE underlying interface.</p> </div> <hr/>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring PPPoE Service Name Tables</i> • <i>Enabling Advertisement of Named Services in PADO Control Packets</i>


paired-group

Syntax	<code>paired-group <i>group-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure load sharing between two working protect circuit pairs.
Options	<i>group-name</i> —Circuit's group name, as configured with the protect-circuit or working-circuit statement.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring APS Load Sharing</i>• working-circuit on page 1163

pap

Syntax	<pre>pap { access-profile <i>name</i>; default-pap-password <i>password</i>; local-name <i>name</i>; local-password <i>password</i>; passive; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> ppp-options],</p> <p>[edit interfaces <i>interface-name</i> unit logical-unit-number ppp-options],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit logical-unit-number ppp-options]</p>
Release Information	Statement introduced in Junos OS Release 8.3.
Description	<p>Configure the Password Authentication Protocol (PAP). Use PAP authentication as a means to provide a simple method for the peer to establish its identity using a two-way handshake. This is done only upon initial link establishment.</p> <p>After the link is established, an ID and password pair is repeatedly sent by the peer to the authenticator until authentication is acknowledged or the connection is terminated.</p>
	<p> BEST PRACTICE: On inline service (si) interfaces for L2TP, only the <code>pap</code> statement itself is typically used for subscriber management. We recommend that you leave the subordinate statements at their default values.</p>
	<p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring the PPP Challenge Handshake Authentication Protocol on page 137 • Configuring the PPP Password Authentication Protocol On a Logical Interface on page 199 • Tracing Operations of the pppd Process on page 154 • traceoptions (PPP Process) on page 1086 • Example: Configuring PAP for an L2TP Profile • Applying PPP Attributes to L2TP LNS Subscribers per Inline Service Interface

pap-password

Syntax	<code>pap-password <i>password</i>;</code>
Hierarchy Level	<code>[edit access profile <i>profile-name</i> client <i>client-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Configure the Password Authentication Protocol (PAP) password.
	<div> NOTE: This statement is not supported for L2TP LNS on MX Series routers.</div>
Options	<i>password</i> —PAP password.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the PAP Password for an L2TP Profile</i>

partition

Syntax	<code>partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type <i>type</i> timeslots <i>time-slot-range</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	The partition number is correlated with the channel number. Partition and channel numbering on IQ interfaces begins with :1, not :0.
Default	If you omit this statement, the channelized PIC or PIM is not partitioned, and no data channels are configured.
Options	<p><i>partition-number</i>—Sublevel interface partition index.</p> <p>Range:</p> <ul style="list-style-type: none"> • 1 through 4 for an OC3 interface on a channelized OC12 IQ interface. • 1 through 12 for a T3 interface on a channelized OC12 IQ interface. • 1 through 4 for a T3 interface on a channelized T3 IQ interface. • 1 through 28 for a T1 IQ interface on a channelized OC12 IQ or channelized T3 IQ interface. • 1 through 10 for an E1 interface on a channelized E1 IQ interface. • 1 through 30 on a channelized E1 interface. • 1 through 23 on a channelized T1 interface. • 1 through 24 for NxDS0 interfaces on either channelized OC12 IQ or channelized DS3 IQ interfaces. • 0 through 31 (with 0 reserved for framing) for NxDS0 interfaces on channelized E1 IQ interfaces. <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Channelized E1 IQ and IQE Interfaces Overview • Channelized OC12/STM4 IQ and IQE Interfaces Overview • Configuring Channelized T3 IQ Interfaces • no-partition on page 855

passive (CHAP)

Syntax	<code>passive;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Do not challenge the peer, but respond if challenged. If you omit this statement from the configuration, the interface always challenges its peer.</p> <p>For ATM2 IQ interfaces only, you can configure CHAP on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none">• atm-ppp-llc—PPP over AAL5 LLC encapsulation.• atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Passive Mode</i>

passive (PAP)

Syntax	<code>passive;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> ppp-options pap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap]</code>
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Initiate an authentication request when the PAP option is received from a peer. If you omit this statement from the configuration, the interface requires the peer to initiate an authentication request.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Passive Mode</i> • <i>Junos OS Administration Library</i>

passive-monitor-mode

Syntax	<code>passive-monitor-mode;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Monitor packet flows from another router. If you include this statement in the configuration, the interface does not send keepalives or alarms, and does not participate actively on the network.</p> <p>This statement is supported on ATM, Ethernet, and SONET/SDH interfaces. For more information, see <i>ATM Interfaces Feature Guide for Routing Devices</i>.</p> <p>For ATM and Ethernet interfaces, you can include this statement on the physical interface only.</p> <p>For SONET/SDH interfaces, you can include this statement on the logical interface only.</p>
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Enabling Passive Monitoring on ATM Interfaces</i>• <i>Passive Monitoring on Ethernet Interfaces Overview</i>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>• multiservice-options on page 827• <i>Junos OS Services Interfaces Library for Routing Devices</i>

password (Interfaces)

Syntax	<code>password <i>password-string</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure vlan-ranges authentication], [edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges authentication]
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Configure the password that is sent to the external AAA authentication server for subscriber VLAN or stacked VLAN interface authentication.
Options	<i>password-string</i> —Authentication password.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring an Authentication Password for VLAN or Stacked VLAN Ranges


path-database-size

Syntax	<code>path-database-size <i>path-database-size</i>;</code>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management linktrace]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Number of linktrace reply entries to be stored per linktrace request.
Options	path-database-size —Database size. Range: 1 through 255 Default: 64
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Linktrace Protocol in CFM

path-trace

Syntax	<code>path-trace <i>trace-string</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> sonet-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For SONET/SDH interfaces and 10-Gigabit Ethernet interfaces in WAN PHY mode, configure a path trace identifier, which is a text string that identifies the circuit.</p> <p>On SONET/SDH OC48 interfaces that are configured for channelized (multiplexed) mode (by including the no-concatenate statement at the <code>[edit chassis fpc slot-number pic pic-number]</code> hierarchy level), the bytes e1-quiet and bytes f1 options have no effect. The bytes f2, bytes z3, bytes z4, and path-trace options work correctly on channel 0 and work in the transmit direction only on channels 1, 2, and 3.</p> <p>For DS3 channels on a channelized OC12 interface, you can configure a unique path trace for each of the 12 channels. Each path trace can be up to 16 bytes. For channels on a channelized OC12 IQ interface, each path trace can be up to 64 bytes.</p>
Options	<p>trace-string—Text string that identifies the circuit. If the string contains spaces, enclose it in quotation marks. A common convention is to use the circuit identifier as the path trace identifier. If you do not configure an identifier, the Junos OS uses the system and interface names to construct the default trace-string. For all nonchannelized SONET/SDH interfaces, the default trace-string is system-name interface-name. For channelized SONET/SDH interfaces and 10-Gigabit Ethernet WAN-PHY interfaces, the default trace-string is interface-name.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring the SONET/SDH Path Trace Identifier for a Circuit• sonet-options on page 1021

payload-scrambler

Syntax	(payload-scrambler no-payload-scrambler);
Hierarchy Level	[edit interfaces <i>interface-name</i> e3-options], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> t3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Enable or disable HDLC scrambling on an E3, a SONET/SDH, or a T3 interface. This type of scrambling provides better link stability. Both sides of a connection must either use or not use scrambling.</p> <p>If you commit a T3 interface configuration that has HDLC payload scrambling enabled, the interface must also be configured to be compatible with the channel service unit (CSU) at the remote end of the line.</p> <p>Disable payload scrambling on an E3 interface if Digital Link compatibility mode is used.</p> <p>On a channelized OC12 interface, the sonet payload-scrambler statement is ignored. To configure scrambling on the DS3 channels on the interface, you can include the t3-options payload-scrambler statement in the configuration for each DS3 channel.</p>
	<p> NOTE: The payload-scrambler statement at the [edit interfaces <i>interface-name</i> e3-options] hierarchy level is not valid for IQE PICs.</p>
Default	Payload scrambling is disabled on all E3 and T3 interfaces; it is enabled by default on E3/T3 over ATM interfaces and on SONET/SDH interfaces.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E3 and T3 Parameters on ATM Interfaces</i> • <i>Configuring E3 HDLC Payload Scrambling</i> • <i>Configuring SONET/SDH HDLC Payload Scrambling for Link Stability</i> • <i>Configuring T3 HDLC Payload Scrambling</i> • <i>Examples: Configuring T3 Interfaces</i> • compatibility-mode on page 504

payload-size

Syntax	payload-size <i>bytes</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> satop-options]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Specify the satop-options payload size in integer number of bytes.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ATM Support on Circuit Emulation PICs Overview</i>• satop-options on page 996

pdu-interval

Syntax	<code>pdu-interval <i>interval</i>;</code>
Hierarchy Level	[edit protocols oam ethernet link-fault-management interface <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 8.2 for MX, M, T, ACX, Series routers, SRX Series firewalls, and EX Series Switches. Statement introduced in Junos OS Release 9.4 for EX Series switches.
Description	For Ethernet interfaces on EX Series switches and M320, M120, MX Series, and T Series routers, specify the periodic OAM PDU sending interval for fault detection. Used for IEEE 802.3ah Operation, Administration, and Management (OAM) support.
Options	interval —Periodic OAM PDU sending interval. Range: For MX, M, T, ACX, Series routers, SRX Series firewalls and EX Series switches – 100 through 1000 milliseconds Default: For EX Series switches –1000 milliseconds
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration. routing —To view this statement in the configuration. routing-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring the OAM PDU Interval</i> • <i>Example: Configuring Ethernet OAM Link Fault Management</i> • <i>Configuring Ethernet OAM Link Fault Management</i>

pdu-threshold

Syntax	<code>pdu-threshold <i>threshold-value</i>;</code>
Hierarchy Level	[edit protocols oam ethernet link-fault-management interface <i>interface-name</i>]
Release Information	<p>Statement introduced in Junos OS Release 8.2 for T, M, MX and ACX Series routers, SRX Series firewalls and EX Series switches.</p> <p>Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.</p>
Description	<p>Configure how many protocol data units (PDUs) are missed before declaring the peer lost in Ethernet OAM link fault management (LFM) for all interfaces or for specific interfaces.</p> <p>For Ethernet interfaces on EX Series switches and M320, M120, MX Series, and T Series routers, specify the number of OAM PDUs to miss before an error is logged. Used for IEEE 802.3ah Operation, Administration, and Management (OAM) support.</p>
Options	<p><i>threshold-value</i>—The number of PDUs missed before declaring the peer lost.</p> <p>Range: 3 through 10 PDUs</p> <p>Default: 3 PDUs</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the OAM PDU Threshold</i>• <i>Configuring Ethernet OAM Link Fault Management</i>

peer

Syntax	<pre>peer <i>a.b.c.d</i> { interface <i>interface-name</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> multi-chassis-protection]
Release Information	Statement introduced in Junos OS Release 11.1.
Description	For MX Series routers with multichassis aggregated Ethernet (MC-AE) interfaces, use the multi-chassis-protection statement under the physical interface level to reduce the configuration at the logical interface level. If the interchassis control protocol connection (ICCP) is UP and the interchassis data link (ICL) comes UP, the router configured as standby will bring up the MC-AE interfaces shared with the peer active-active node specified by the peer statement. You must also specify the peer's physical interface.
Options	<p>a.b.c.d—Specify the IP address of the peer.</p> <p>interface <i>interface-name</i>—Specify the peer's physical interface: interface <i>interface-name-fpc/pic/port</i></p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Multichassis Link Aggregation on MX Series Routers</i> • <i>Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers and QFX Series Switches</i> • <i>Configuring Aggregated Ethernet Link Protection</i> • <i>Example: Configuring Aggregated Ethernet Link Protection</i> • multi-chassis-protection on page 820

peer-unit

Syntax	<code>peer-unit <i>unit-number</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure a peer relationship between two logical systems.
Options	<i>unit-number</i> —Peering logical system unit number.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

per-unit-scheduler

Syntax	<code>per-unit-scheduler;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 13.2 on 16x10GE MPC and MPC3E line cards.</p> <p>Statement introduced in Junos OS Release 13.2 on PTX Series Packet Transport Routers.</p> <p>Statement introduced in Junos OS Release 13.3 on MPC4E line cards.</p> <p>Statement introduced in Junos OS Release 15.1 on MPC6E line cards.</p>
Description	For Channelized OC3 IQ, Channelized OC12 IQ, Channelized STM1 IQ, Channelized T3 IQ, Channelized E1 IQ, E3 IQ, link services IQ interfaces (lsq-), Gigabit Ethernet IQ, Gigabit Ethernet IQ2 and IQ2-E, and 10-, 40-, and 100-Gigabit Ethernet interfaces (including the 16x10GE MPC), enable the association of scheduler maps with logical interfaces.



CAUTION: Turning on per-unit scheduling causes the interface to reinitialize, which means all logical interfaces (units) on the interface are deleted and recreated.



NOTE: To enable per-unit scheduling on MX80 and MX104 routers, configure the `per-unit-scheduler` statement at each member physical interface level of a particular aggregated Ethernet interface as well as at that aggregated Ethernet interface level. On other routing platforms, it is enough if you include this statement at the aggregated Ethernet interface level.



NOTE: Per-unit scheduling is not supported on T1 interfaces configured on the Channelized OC12 IQ PIC.



NOTE: On Gigabit Ethernet IQ2 and IQ2-E PICs without the `per-unit-scheduler` statement, the entire PIC supports 4071 VLANs and the user can configure all the VLANs on the same port.

On Gigabit Ethernet IQ2 and IQ2-E PICs with the `per-unit-scheduler` statement, the entire PIC supports $1024 - 2 * \text{number of ports}$ (1024 minus two times the number of ports), because each port is allocated two default schedulers.

When including the **per-unit-scheduler** statement, you must also include the **vlan-tagging** statement or the **flexible-vlan-tagging** statement (to apply scheduling to VLANs) or the **encapsulation frame-relay** statement (to apply scheduling to DLCIs) at the **[edit interfaces interface-name]** hierarchy level.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
---------------------------------	---

Related Documentation	<ul style="list-style-type: none">• <i>Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs</i>• vlan-tagging on page 1146• flexible-vlan-tagging on page 638• <i>Example: Applying Scheduling and Shaping to VLANs</i>• <i>Configuring Virtual LAN Queuing and Shaping on PTX Series Routers</i>
------------------------------	--

performance-monitoring

Syntax

```
performance-monitoring {
  delegate-server-processing;
  hardware-assisted-timestamping;
  hardware-assisted-keepalives;
  sla-iterator-profiles {
    profile-name {
      avg-fd-twoway-threshold;
      avg-ifdv-twoway-threshold;
      avg-flr-forward-threshold;
      avg-flr-backward-threshold;
      disable;
      calculation-weight {
        delay delay-weight;
        delay-variation delay-variation-weight;
      }
      cycle-time milliseconds;
      iteration-period connections;
      measurement-type (loss | statistical-frame-loss | two-way-delay);
    }
  }
}
```

Hierarchy Level [edit protocols [oam ethernet connectivity-fault-management](#)]

Release Information Statement introduced in Junos OS Release 9.5.

Description Specify performance monitoring support for Ethernet frame delay measurement.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level Configure—To enter configuration mode.
Control—To modify any configuration.

Related Documentation

- *Ethernet Frame Delay Measurements Overview*
- *Guidelines for Configuring Routers to Support an ETH-DM Session*
- *Enabling the Hardware-Assisted Timestamping Option*

periodic

List of Syntax	Syntax (EX Series) on page 906 Syntax (QFX Series) on page 906
Syntax (EX Series)	<code>periodic interval;</code>
Syntax (QFX Series)	<code>periodic (fast slow);</code>
Hierarchy Level (EX Series)	[edit interfaces aex aggregated-ether-options lacp], [edit interfaces interface-range <i>name</i> aggregated-ether-options lacp]
Hierarchy Level (QFX Series)	[edit interfaces aex aggregated-ether-options lacp]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series. Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.
Description	For aggregated Ethernet interfaces only, configure the interval for periodic transmission of LACP packets.
Options	<p><i>interval</i>—Interval for periodic transmission of LACP packets.</p> <ul style="list-style-type: none"> fast—Transmit packets every second. slow—Transmit packets every 30 seconds. <p>Default: fast</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring LACP for Aggregated Ethernet Interfaces</i> <i>Configuring Aggregated Ethernet LACP (CLI Procedure)</i> <i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i> <i>Configuring Aggregated Ethernet LACP (CLI Procedure)</i> <i>Understanding Aggregated Ethernet Interfaces and LACP for Switches</i> <i>Junos OS Network Interfaces Library for Routing Devices</i>

pfc

Syntax	pfc;
Hierarchy Level	[edit interfaces <i>interface-name</i> ppp-options compression], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options compression], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options compression]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with PPP encapsulation, configure the router to compress the protocol field to one byte.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring the PPP Protocol Field Compression on page 152

pic-type

Syntax	pic-type (atm1 atm2);
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM interfaces, configure the type of ATM PIC installed in your router.
Options	atm1 —ATM1 PIC. atm2 —ATM2 IQ PIC.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring the ATM PIC Type

plp-to-clp

Syntax	<code>plp-to-clp;</code>
Hierarchy Level	[edit interfaces at <i>fpc/pic/port</i> atm-options], [edit interfaces at <i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces at <i>--fpc/pic/port</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, enable the PLP setting to be copied to the cell-loss priority (CLP) bit.
Default	If you omit this statement, the Junos OS does not copy the PLP setting to the CLP bit.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Enabling the PLP Setting to Be Copied to the CLP Bit</i>• <i>Copying the Packet Loss Priority to the CLP Bit on ATM Interfaces</i>

plp1

Syntax	<code>plp1 cells;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i></code> <code> multipoint-destination <i>address</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i>]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for QFX Series switches.</p>
Description	For ATM2 IQ interfaces only, define the EPD threshold on a VC. The EPD threshold is a limit on the number of transmit packets that can be queued. Packets that exceed the limit are discarded. This threshold applies to packets that have a PLP of 1.
Default	EPD threshold is unregulated.
Options	<p>cells—Maximum number of cells.</p> <p>Range: For 1-port and 2-port OC12 interfaces, 1 through 425,984 cellsFor 1-port OC48 interfaces, 1 through 425,984 cellsFor 2-port OC3, DS3, and E3 interfaces, 1 through 212,992 cellsFor 4-port DS3 and E3 interfaces, 1 through 106,496 cells</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Two EPD Thresholds per Queue</i> • <i>Configuring an ATM Scheduler Map</i> • linear-red-profile on page 752

point-to-point

Syntax	<code>point-to-point;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For all interfaces except aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet, configure the interface unit as a point-to-point connection. This is the default connection type.
Default	If you omit this statement, the interface unit is configured as a point-to-point connection.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a Point-to-Point Connection on page 195• multipoint on page 825

policer (CFM Firewall)

Syntax

```
policer cfm-policer {  
  if-exceeding {  
    bandwidth-limit 8k;  
    burst-size-limit 2k;  
  }  
  then discard;  
}
```

Hierarchy Level [edit firewall]

Release Information Statement introduced in Junos OS Release 10.0.

Description Attach an explicit policer to CFM sessions.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Rate Limiting of Ethernet OAM Messages*
- [policer \(CFM Global\) on page 912](#)
- [policer \(CFM Session\) on page 913](#)

policer (CFM Global)

Syntax	<pre>policer { all <i>cfm-policer-name</i>; continuity-check <i>cfm-policer-name</i>; other <i>cfm-policer-name</i>; }</pre>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management]
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Specify a policer at the global level to police the CFM traffic belonging to all sessions.
Options	<p>continuity-check <i>cfm-policer-name</i>—Police all continuity check packets with the policer specified.</p> <p>other <i>cfm-policer-name</i>—Police all non-continuity check packets with the policer specified.</p> <p>all <i>cfm-policer-name</i>—Police all CFM packets with policer specified. If the all option is used, then you cannot specify above two options.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Rate Limiting of Ethernet OAM Messages</i>• policer (CFM Session) on page 913

policer (CFM Session)

Syntax	<pre> policer { all <i>cfm-policer-name</i>; continuity-check <i>cfm-policer-name</i>; other <i>cfm-policer-name</i>; } </pre>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>name</i> level <i>number</i> maintenance-association <i>name</i>]
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Specify a separate policer to rate-limit packets specific to that session.
Options	<ul style="list-style-type: none"> • continuity-check <i>cfm-policer-name</i>—Police continuity check packets belonging to this session. • other <i>cfm-policer-name</i>—Police all non-continuity check packets belonging to this session. • all <i>cfm-policer-name</i>—Police all CFM packets belonging to this session. If the all option is used, then you cannot specify the above two options.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Rate Limiting of Ethernet OAM Messages</i> • policer (CFM Global) on page 912


policer (CoS)

Syntax	<pre> policer <i>cos-policer-name</i> { aggregate { bandwidth-limit <i>bps</i>; burst-size-limit <i>bytes</i>; } premium { bandwidth-limit <i>bps</i>; burst-size-limit <i>bytes</i>; } } </pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Gigabit Ethernet IQ , Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and 100-Gigabit Ethernet Type 5 PIC with CFP, define a CoS policer template to specify the premium bandwidth and burst-size limits, and the aggregate bandwidth and burst-size limits. The premium policer is not supported on MX Series routers or for Gigabit Ethernet interfaces with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router).</p>
Options	<p><i>cos-policer-name</i>—Name of one policer to specify the premium bandwidth and burst-size limits, and the aggregate bandwidth and burst-size limits.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring Gigabit Ethernet Policers

policer (Interface)

Syntax	<pre> policer { arp <i>policer-template-name</i>; input <i>policer-template-name</i>; output <i>policer-template-name</i>; } </pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Apply a policer to an interface.
Options	<p>arp <i>policer-template-name</i>—For inet family only, name of one policer to evaluate when ARP packets are received on the interface.</p> <p>input <i>policer-template-name</i>—Name of one policer to evaluate when packets are received on the interface.</p> <p>output <i>policer-template-name</i>—Name of one policer to evaluate when packets are transmitted on the interface.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Applying Policers on page 228 • <i>Configuring Firewall Filters and Policers for VPLS</i> • <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

policer (MAC)

Syntax	<pre> policer { input <i>cos-policer-name</i>; output <i>cos-policer-name</i>; } </pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> accept-source-mac <i>mac-address</i> <i>mac-address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> accept-source-mac <i>mac-address</i> <i>mac-address</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>
Description	<p>For Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and 100-Gigabit Ethernet Type 5 PIC with CFP, configure MAC policing.</p>
	<p> NOTE:</p> <p>On MX Series routers with Gigabit Ethernet or Fast Ethernet PICs, the following considerations apply:</p> <ul style="list-style-type: none"> • Interface counters do not count the 7-byte preamble and 1-byte frame delimiter in Ethernet frames. • In MAC statistics, the frame size includes MAC header and CRC before any VLAN rewrite/imposition rules are applied. • In traffic statistics, the frame size encompasses the L2 header without CRC after any VLAN rewrite/imposition rule.
Options	<p>input <i>cos-policer-name</i>—Name of one policer to specify the premium bandwidth and aggregate bandwidth.</p> <p>output <i>cos-policer-name</i>—Name of one policer to specify the premium bandwidth and aggregate bandwidth.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring MAC Address Filtering</i>

policy-statement

```
Syntax  policy-statement policy-name {
        term term-name {
            from {
                as-path-unique-count count (equal | orhigher | orlower);
                family family-name;
                match-conditions;
                policy subroutine-policy-name;
                prefix-list prefix-list-name;
                prefix-list-filter prefix-list-name match-type <actions>;
                protocol protocol-name;
                route-filter destination-prefix match-type <actions>;
                source-address-filter source-prefix match-type <actions>;
                tag value;
                traffic-engineering;
            }
            to {
                match-conditions;
                policy subroutine-policy-name;
            }
            then actions;
        }
    then {
        aggregate-bandwidth;
        dynamic-tunnel-attributes dynamic-tunnel-attributes;
        limit-bandwidth limit-bandwidth;
        multipath-resolve multipath-resolve;
        no-entropy-label-capability;
        prefix-segment {
            index index;
            node-segment;
        }
        priority (high | medium | low);
    }
}
```

Hierarchy Level [edit dynamic-profiles *profile-name* policy-options],
[edit logical-systems *logical-system-name* policy-options],
[edit policy-options]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 9.0 for EX Series switches.
Support for configuration in the dynamic database introduced in Junos OS Release 9.5.
Support for configuration in the dynamic database introduced in Junos OS Release 9.5 for EX Series switches.
inet-mdt option introduced in Junos OS Release 10.0R2.
Statement introduced in Junos OS Release 11.3 for the QFX Series.
route-target option introduced in Junos OS Release 12.2.
Statement introduced in Junos OS 14.1X53-D20 for the OCX Series.

protocol and **traffic-engineering** options introduced in Junos OS Release 14.2.
no-entropy-label-capability option introduced in Junos OS Release 15.1.
priority and **tag value** options introduced in Junos OS Release 17.1.
as-path-unique-count option introduced in Junos OS Release 17.2R1.
prefix-segment option introduced in Junos OS Release 17.2R1 for MX Series routers, PTX Series routers, QFX5100 switches, and QFX10000 switches.
multipath-resolve and **dynamic-tunnel-attributes** options introduced in Junos OS Release 17.3R1.
aggregate-bandwidth and **limit-bandwidth** *limit-bandwidth* options introduced in Junos OS Release 17.4R1 for MX Series, PTX Series, and QFX Series.

Description Define a routing policy, including subroutine policies.

A *term* is a named structure in which match conditions and actions are defined. Routing policies are made up of one or more terms. Each routing policy term is identified by a term name. The name can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. To include spaces in the name, enclose the entire name in double quotation marks.

Each term contains a set of match conditions and a set of actions:

- Match conditions are criteria that a route must match before the actions can be applied. If a route matches all criteria, one or more actions are applied to the route.
- Actions specify whether to accept or reject the route, control how a series of policies are evaluated, and manipulate the characteristics associated with a route.

Generally, a router compares a route against the match conditions of each term in a routing policy, starting with the first and moving through the terms in the order in which they are defined, until a match is made and an explicitly configured or default action of **accept** or **reject** is taken. If none of the terms in the policy match the route, the router compares the route against the next policy, and so on, until either an action is taken or the default policy is evaluated.

If none of the match conditions of each term evaluates to true, the final action is executed. The final action is defined in an unnamed term. Additionally, you can define a default action (either **accept** or **reject**) that overrides any action intrinsic to the protocol.

The order of match conditions in a term is not relevant, because a route must match all match conditions in a term for an action to be taken.

To list the routing policies under the **[edit policy-options]** hierarchy level by **policy-statement** *policy-name* in alphabetical order, enter the **show policy-options** configuration command.

The statements are explained separately.

Options *actions*—(Optional) One or more actions to take if the conditions match. The actions are described in *Configuring Flow Control Actions*.

family *family-name*—(Optional) Specify an address family protocol. Specify **inet** for IPv4. Specify **inet6** for 128-bit IPv6, and to enable interpretation of IPv6 router filter addresses. For IS-IS traffic, specify **iso**. For IPv4 multicast VPN traffic, specify **inet-mvpn**. For IPv6 multicast VPN traffic, specify **inet6-mvpn**. For multicast-distribution-tree (MDT) IPv4 traffic, specify **inet-mdt**. For BGP route target VPN traffic, specify **route-target**. For traffic engineering, specify **traffic-engineering**.



NOTE: When *family* is not specified, the routing device or routing instance uses the address family or families carried by BGP. If multiprotocol BGP (MP-BGP) is enabled, the policy defaults to the protocol family or families carried in the network layer reachability information (NLRI) as configured in the *family* statement for BGP. If MP-BGP is not enabled, the policy uses the default BGP address family unicast IPv4.

from—(Optional) Match a route based on its source address.

as-path-unique-count *count* (**equal** | **orhigher** | **orlower**)—(Optional) Specify a number from 0 through 1024 to filter routes based on the number of unique autonomous systems (ASs) in the AS path. Specify the match condition for the unique AS path count.

aggregate-bandwidth—(Optional) Enable BGP to advertise aggregate outbound link bandwidth for load balancing.

dynamic-tunnel-attributes *dynamic-tunnel-attributes*—(Optional) Choose a set of defined dynamic tunnel attributes for forwarding traffic over V4oV6 tunnels.

match-conditions—(Optional in **from** statement; required in **to** statement) One or more conditions to use to make a match. The qualifiers are described in *Routing Policy Match Conditions*.

multipath-resolve *multipath-resolve*—(Optional) Enable the use of all paths for resolution over the specified prefix.

limit-bandwidth *limit-bandwidth*—(Optional) Specify the limit for advertised aggregate outbound link bandwidth for load balancing.

Range: 0 through 4,294,967,295 bytes

no-entropy-label-capability—(Optional) Disable the entropy label capability advertisement at egress or transit routes specified in the policy.

priority (**high** | **medium** | **low**)—(Optional) Configure the priority for an IS-IS route to change the default order in which the routes are installed in the routing table, in the event of a network topology change.

policy subroutine-policy-name—Use another policy as a match condition within this policy. The name identifying the subroutine policy can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" "). Policy names cannot take the form **__.*-internal__**, as this form is reserved. For information about how to configure subroutines, see *Understanding Policy Subroutines in Routing Policy Match Conditions*.

policy-name—Name that identifies the policy. The name can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" ").

prefix-list prefix-list-name—Name of a list of IPv4 or IPv6 prefixes.

prefix-list-filter prefix-list-name—Name of a prefix list to evaluate using qualifiers; **match-type** is the type of match, and **actions** is the action to take if the prefixes match.

protocol protocol-name—Name of the protocol used to control traffic engineering database import at the originating point.

route-filter destination-prefix match-type <actions>—(Optional) List of routes on which to perform an immediate match; **destination-prefix** is the IPv4 or IPv6 route prefix to match, **match-type** is the type of match (see *Configuring Route Lists*), and **actions** is the action to take if the **destination-prefix** matches.

source-address-filter source-prefix match-type <actions>—(Optional) Unicast source addresses in multiprotocol BGP (MBGP) and Multicast Source Discovery Protocol (MSDP) environments on which to perform an immediate match. **source-prefix** is the IPv4 or IPv6 route prefix to match, **match-type** is the type of match (see *Configuring Route Lists*), and **actions** is the action to take if the **source-prefix** matches.

tag value—(Optional) A numeric value that identifies a route. You can tag certain routes to prioritize them over other routes. In the event of a network topology change, Junos OS updates these routes in the routing table before updating other routes with lower priority. You can also tag some routes to identify and reject them based on your requirement.

term term-name—Name that identifies the term. The term name must be unique in the policy. It can contain letters, numbers, and hyphens (-) and can be up to 64 characters long. To include spaces in the name, enclose the entire name in quotation marks (" "). A policy statement can include multiple terms. We recommend that you name all terms. However, you do have the option to include an unnamed term which must be the final term in the policy. To configure an unnamed term, omit the **term** statement when defining match conditions and actions.

to—(Optional) Match a route based on its destination address or the protocols into which the route is being advertised.

then—(Optional) Actions to take on matching routes. The actions are described in *Configuring Flow Control Actions* and *Configuring Actions That Manipulate Route Characteristics*.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Documentation

- *dynamic-db*
- *Understanding Source Packet Routing in Networking (SPRING)*

pool

Syntax `pool pool-name <priority priority>;`

Hierarchy Level [edit interfaces *br-pim/0/port* [dialer-options](#)],
[edit interfaces *umd0* [dialer-options](#)],
[edit interfaces *dlm unit logical-unit-number* [dialer-options](#)],
[edit logical-systems *logical-system-name* interfaces *dlm unit logical-unit-number* [dialer-options](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description On J Series Services Routers, for logical and physical ISDN interfaces, specify the dial pool. The dial pool allows logical (dialer) and physical (**br-pim/0/port**) interfaces to be bound together dynamically on a per-call basis. On a dialer interface, **pool** directs the dialer interface which dial pool to use. On **br-pim/0/port** interface, **pool** defines the pool to which the interface belongs.

Options *pool-name*—Pool identifier.


priority priority—(Physical **br-pim/0/port** interfaces only) Specify a priority value of 0 (lowest) to 255 (highest) for the interface within the pool.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Junos OS Interfaces and Routing Configuration Guide*

pop

Syntax	pop;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches. Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.
Description	<p> NOTE: On EX4300 switches, pop is not supported at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map] hierarchy level.</p> <p>For Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ2, and IQ2-E interfaces; 10-Gigabit Ethernet LAN/WAN PIC; aggregated Ethernet interfaces using Gigabit Ethernet IQ interfaces; 100-Gigabit Ethernet Type 5 PIC with CFP; and Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces, specify the VLAN rewrite operation to remove a VLAN tag from the top of the VLAN tag stack. The outer VLAN tag of the frame is removed.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Removing a VLAN Tag Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support

pop-all-labels

Syntax	<pre>pop-all-labels { required-depth number; }</pre>
Hierarchy Level	<pre>[edit interfaces interface-name atm-options mpls], [edit interfaces interface-name sonet-options mpls], [edit interfaces interface-name fastether-options mpls], [edit interfaces interface-name gigether-options mpls]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p>
Description	<p>For passive monitoring on ATM, SONET/SDH, Fast Ethernet, and Gigabit Ethernet interfaces only, removes up to two MPLS labels from incoming IP packets. For passive monitoring on T Series devices, removes up to five MPLS labels from incoming IP packets.</p> <p>This statement has no effect on IP packets with more than two MPLS labels, or IP packets with more than five MPLS labels on T Series devices. Packets with MPLS labels cannot be processed by the Monitoring Services PIC; if packets with MPLS labels are forwarded to the Monitoring Services PIC, they are discarded.</p> <p>The remaining statement is explained separately. See CLI Explorer.</p>
Default	<p>If you omit this statement, the MPLS labels are not removed, and the packet is not processed by the Monitoring Services PIC.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Removing MPLS Labels from Incoming Packets</i> • <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

pop-pop

Syntax	pop-pop;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]
Release Information	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP, and for 10-Gigabit Ethernet SFP interfaces on EX Series switches, specify the VLAN rewrite operation to remove both the outer and inner VLAN tags of the frame.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Removing the Outer and Inner VLAN Tags</i>

pop-swap

Syntax	pop-swap;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]
Release Information	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	<p>Specify the VLAN rewrite operation to remove the outer VLAN tag of the frame, and replace the inner VLAN tag of the frame with a user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</p> <p>You can use this statement on Gigabit Ethernet IQ, IQ2, IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, on aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Removing the Outer VLAN Tag and Rewriting the Inner VLAN Tag

port

Syntax	<pre>port { minimum <i>port-number</i>; maximum <i>port-number</i>; }</pre>
Hierarchy Level	[edit interfaces vsp- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> compression <i>rtplib</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For voice services interfaces only, assign User Datagram Protocol (UDP) destination port numbers reserved for Real-Time Transport Protocol (RTP) traffic.
Options	<p>minimum <i>port-number</i>—Specify minimum port number. Range: 0 through 65,535</p> <p>maximum <i>port-number</i>—Specify maximum port number. Range: 0 through 65,535</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

port-priority

Syntax	<code>port-priority <i>priority</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <i>gigether-options</i> 802.3ad lacp]
Release Information	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 11.4 for EX Series switches. Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.
Description	Define LACP port priority at the interface level.
Options	<p><i>priority</i>—Priority for being elected to be the active port and both collect and distribute traffic. A smaller value indicates a higher priority for being elected.</p> <p>Range: 0 through 65535</p> <p>Default: 127</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches</i> • <i>Configuring Aggregated Ethernet LACP (CLI Procedure)</i>

port-status-tlv

Syntax	port-status-tlv blocked;
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management action-profile <i>tlv-action</i> event] [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> continuity-check]
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Define an action-profile consisting of various events and the action. Based on values of port-status-tlv in the received CCM packets, specific action such as <i>interface-down</i> can be taken using action-profile options.
Options	blocked —When the incoming CCM packet contains port status TLV with value blocked, the action will be triggered for this action-profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring a CFM Action Profile to Specify CFM Actions for CFM Events</i>• <i>Configuring Remote MEP Action Profile Support</i>

post-service-filter

Syntax	<code>post-service-filter <i>filter-name</i>;</code>
Hierarchy Level	[edit <code>interfaces</code> <i>interface-name</i> <code>unit</code> <i>logical-unit-number</i> <code>family</code> <i>inet</i> <code>service</code> <i>input</i>], [edit <code>logical-systems</code> <i>logical-system-name</i> <code>interfaces</code> <i>interface-name</i> <code>unit</code> <i>logical-unit-number</i> <code>family</code> <i>inet</i> <code>service</code> <i>input</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define the filter to be applied to traffic after service processing. The filter is applied only if a service set is configured and selected.
Options	<i>filter-name</i> —Identifier for postservice filter.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

ppp-options

Syntax

```

ppp-options {
  authentication [ authentication-protocols ];
  mru size;
  mtu (size | use-lower-layer);
  chap {
    access-profile name;
    challenge-length minimum minimum-length maximum maximum-length;
    default-chap-secret name;
    local-name name;
    passive;
  }
  compression {
    acfc;
    pfc;
  }
  dynamic-profile profile-name;
  initiate-ncp (ip | ipv6 | dual-stack-passive)
  ipcp-suggest-dns-option;
  lcp-max-conf-req number
  lcp-restart-timer milliseconds;
  loopback-clear-timer seconds;
  ncp-max-conf-req number
  ncp-restart-timer milliseconds;
  on-demand-ip-address
  pap {
    access-profile name;
    default-pap-password password;
    local-name name;
    local-password password;
    passive;
  }
}

```

Hierarchy Level [edit interfaces *interface-name*],
 [edit interfaces *interface-name* unit *logical-unit-number*],
 [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

Release Information Statement introduced before Junos OS Release 7.4.

Description On interfaces with PPP encapsulation, configure PPP-specific interface properties.

For ATM2 IQ interfaces only, you can configure CHAP on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:

- **atm-ppp-llc**—PPP over AAL5 LLC encapsulation.
- **atm-ppp-vc-mux**—PPP over AAL5 multiplex encapsulation.



BEST PRACTICE: On inline service (si) interfaces for L2TP, only the `chap` and `pap` statements are typically used for subscriber management. We recommend that you leave the other statements subordinate to `ppp-options`—including those subordinate to `chap` and `pap`—at their default values.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.

Related Documentation	<ul style="list-style-type: none">• Configuring the PPP Challenge Handshake Authentication Protocol on page 137• Applying PPP Attributes to L2TP LNS Subscribers per Inline Service Interface
------------------------------	--

pppoe-options

Syntax	<pre>pppoe-options { access-concentrator name; auto-reconnect seconds; (client server); service-name name; underlying-interface interface-name; ppp-max-payload ppp-max-payload }</pre>
Hierarchy Level	<pre>[edit interfaces pp0 unit logical-unit-number], [edit logical-systems logical-system-name interfaces pp0 unit logical-unit-number] [set interface ppp interfaceunit logical-unit-number ppp-max-payload ppp-max-payload],</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>client Statement introduced in Junos OS Release 8.5.</p> <p>server Statement introduced in Junos OS Release 8.5.</p> <p>client Statement introduced in Junos OS Release 15.1X49-D100.</p>
Description	<p>Configure PPP over Ethernet-specific interface properties.</p> <p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p> <p>The maximum payload allowed on an Ethernet frame is 1500 bytes. For a PPPoE interface, the PPPoE header uses 6 bytes and the PPP protocol ID uses 2 bytes. This restricts the maximum MTU size on a PPPoE interface to 1492 bytes, which can cause frequent fragmentation and reassembly of larger PPP packets received over the PPPoE interface. To prevent frequent fragmentation and reassembly for PPP packets over Ethernet, you can configure the maximum transmission unit (MTU) and MRU sizes for PPP subscribers.</p> <p>For PPPoE subscribers, the PPP MRU or PPP MTU size can be greater than 1492 bytes if the PPP-Max-Payload tag is received in the PPPoE Active Discovery Request (PADR) packets.</p> <p>The PPP-Max-Payload option allows you to override the default behavior of the PPPoE client by providing a maximum size that the PPP payload can support in both sending and receiving directions. The PPPoE server might allow the negotiation of an MRU larger than 1492 octets and the ability to use an MTU larger than 1500 octets.</p> <p>It is important to set an appropriate value for the MTU size of the physical interface before setting ppp-max-payload. The value of mtu must be greater than the value of ppp-max-payload.</p> <p>To enable Jumbo frames refer <i>Understanding Jumbo Frames Support for Ethernet Interfaces</i>.</p>

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring a PPPoE Interface*

pppoe-underlying-options (Static and Dynamic Subscribers)

Syntax

```
pppoe-underlying-options {
  access-concentrator name;
  dynamic-profile profile-name;
  direct-connect
  duplicate-protection;
  max-sessions number;
  max-sessions-vs-a-ignore;
  service-name-table table-name;
  short-cycle-protection <lockout-time-min minimum-seconds> <lockout-time-max
    maximum-seconds> <filter [aci]>;
}
```

Hierarchy Level [edit interfaces *interface-name* [unit](#) *logical-unit-number*],
 [edit logical-systems *logical-system-name* interfaces *interface-name* [unit](#) *logical-unit-number*]

Release Information Statement introduced in Junos OS Release 10.0.

Description Configure PPPoE-specific interface properties for the underlying interface on which the router creates a static or dynamic PPPoE logical interface. The underlying interface must be configured with PPPoE (**ppp-over-ether**) encapsulation.


The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring PPPoE* (for static interfaces)
- *Configuring an Underlying Interface for Dynamic PPPoE Subscriber Interfaces*
- *Assigning a Service Name Table to a PPPoE Underlying Interface*


preferred

Syntax	<code>preferred;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>family <i>family</i> address <i>address</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure this address to be the preferred address on the interface. If you configure more than one address on the same subnet, the preferred source address is chosen by default as the source address when you initiate frame transfers to destinations on the subnet.
<div> NOTE: The <code>edit logical-systems</code> hierarchy is not available on QFabric systems.</div>	
Default	The lowest-numbered address on the subnet is the preferred address.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Interface Address on page 209

preferred-source-address

Syntax	<code>preferred-source-address <i>address</i>;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> unnumbered-address <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> unnumbered-address <i>interface-name</i>]</p>
Release Information	Statement introduced in Junos OS Release 9.0.
Description	<p>For unnumbered Ethernet interfaces configured with a loopback interface as the donor interface, specify one of the loopback interface's secondary addresses as the preferred source address for the unnumbered Ethernet interface. Configuring the preferred source address enables you to use an IP address other than the primary IP address on some of the unnumbered Ethernet interfaces in your network.</p> <p>Configuration of a preferred source address for unnumbered Ethernet interfaces is supported for the IPv4 and IPv6 address families.</p>
Options	<i>address</i> —Secondary IP address of the donor loopback interface.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring a Preferred Source Address for Unnumbered Ethernet or Demux Interfaces on page 220 • address on page 435 • <i>Junos OS Administration Library</i>

preferred-source-address

Syntax	<code>preferred-source-address <i>address</i>;</code>
Hierarchy Level	<p>[edit <code>dynamic-profiles interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> unnumbered-address <i>interface-name</i></code>],</p> <p>[edit <code>dynamic-profiles <i>profile-name</i> interfaces demux0 unit <i>logical-unit-number</i> family <i>family</i></code>],</p>
Release Information	<p>Statement introduced in Junos OS Release 9.2.</p> <p>Support for the <code>\$junos-preferred-source-address</code> and <code>\$junos-preferred-source-ipv6-address</code> predefined variables introduced in Junos OS Release 9.6.</p>
Description	<p>For unnumbered Ethernet interfaces configured with a loopback interface as the donor interface, specify one of the loopback interface's secondary addresses as the preferred source address for the unnumbered Ethernet interface. Configuring the preferred source address enables you to use an IP address other than the primary IP address on some of the unnumbered Ethernet interfaces in your network. To configure the preferred source address dynamically, instead of using this statement, you must include the <code>\$junos-preferred-source-address</code> predefined variable for IPv4 (family inet) addresses or the <code>\$junos-preferred-source-ipv6-address</code> predefined variable for IPv6 (family inet6) addresses.</p> <p>Configuration of a preferred source address for unnumbered Ethernet interfaces is supported for IPv4 and IPv6 address families.</p>
	<p> NOTE: When you specify a static logical interface for the unnumbered interface in a dynamic profile that includes the <code>\$junos-routing-instance</code> predefined variable, you must not configure a preferred source address, whether with the <code>\$junos-preferred-source-address</code> predefined variable, the <code>\$junos-preferred-source-ipv6-address</code> predefined variable, or the <code>preferred-source-address</code> statement. Configuring the preferred source address in this circumstance causes a commit failure.</p>
Options	<p><i>address</i>—Secondary IP address of the donor loopback interface. Alternatively, use the <code>\$junos-preferred-source-address</code> or the <code>\$junos-preferred-source-ipv6-address</code> predefined variable to dynamically apply a preferred source address to the unnumbered Ethernet interface.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- [Configuring an Unnumbered Interface on page 220](#)
 - *Junos OS Network Interfaces Library for Routing Devices*
 - *Junos OS Administration Library*

premium (Hierarchical Policer)

Syntax	<pre>premium { if-exceeding { bandwidth-limit <i>bandwidth</i>; burst-size-limit <i>burst</i>; } then { discard; } }</pre>
Hierarchy Level	[edit dynamic-profiles <i>profile-name</i> firewall hierarchical-policer], [edit firewall hierarchical-policer]
Release Information	Statement introduced in Junos OS Release 9.5. Support at the [edit dynamic-profiles ... hierarchical-policer <i>name</i>] hierarchy level introduced in Junos OS Release 11.4.
Description	On M40e, M120, and M320 edge routers with FPC input as FFPC and FPC output as SFPC, and on MX Series, T320, T640, and T1600 edge routers with Enhanced Intelligent Queuing (IQE) PICs, T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, specify a premium level for a hierarchical policer.
Options	Options are described separately.
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Applying Policers on page 228• <i>Guidelines for Applying Traffic Policers</i>• <i>Hierarchical Policer Configuration Overview</i>• <i>Hierarchical Policers</i>• <i>aggregate (Hierarchical Policer)</i>• bandwidth-limit (Hierarchical Policer) on page 468• burst-size-limit (Hierarchical Policer) on page 481• <i>hierarchical-policer</i>• if-exceeding (Hierarchical Policer) on page 676

premium (Output Priority Map)

Syntax	<pre>premium { forwarding-class <i>class-name</i> { loss-priority (high low); } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile output-priority-map classifier]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Gigabit Ethernet IQ interfaces only, define the classifier for egress premium traffic.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Specifying an Output Priority Map</i> • input-priority-map on page 701


premium (Policer)

Syntax	<pre>premium { bandwidth-limit <i>bps</i>; burst-size-limit <i>bytes</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile ethernet-policer-profile policer cos-policer-name]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Define a policer to apply to nonpremium traffic.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Gigabit Ethernet Policers</i>• aggregate (Gigabit Ethernet CoS Policer) on page 440• ieee802.1p on page 675

preserve-interface

Syntax	<code>preserve-interface;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	<p>Provide link PIC replication, providing MLPPP link redundancy at the port level. This feature is supported with SONET APS and the following link PICs:</p> <ul style="list-style-type: none"> • Channelized OC3 IQ PIC • Channelized OC12 IQ PIC • Channelized STM1 IQ PIC <p>Link PIC replication provides the ability to add two sets of links, one from the active SONET PIC and the other from the standby SONET PIC, to the same bundle. If the active SONET PIC fails, links from the standby PIC are used without triggering link renegotiation. All the negotiated state is replicated from the active links to the standby links to prevent link renegotiation.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Link PIC Redundancy</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

primary (Address on Interface)

Syntax	<code>primary;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>family <i>family</i> address <i>address</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	Configure this address to be the primary address of the protocol on the interface. If the logical unit has more than one address, the primary address is used by default as the source address when packet transfer originates from the interface and the destination address does not indicate the subnet.
<div> NOTE: The <code>edit logical-systems</code> hierarchy is not available on QFabric systems.</div>	
Default	For unicast traffic, the primary address is the lowest non-127 (in other words, non-loopback) preferred address on the unit.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Interface Address on page 209

primary (Interface for Router)

Syntax	<code>primary;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure the primary interface for a device. By default, the multicast-capable interface with the lowest-index address is chosen as the primary interface. If there is no such interface, the point-to-point interface with the lowest-index address is chosen. Otherwise, any interface with an address can be picked. In practice, this means that, on the device, the fxp0 or em0 interface is picked by default. To configure a different interface to be the primary interface, you include this statement.</p> <p>The <i>primary interface</i> for the router has the following characteristics:</p> <ul style="list-style-type: none"> • It is the interface through which the packets go out when you type a command such as <code>ping 255.255.255.255</code>—that is, a command that does not include an interface name (there is no interface <i>type-0/0/0.0</i> qualifier) and where the destination address does not imply any particular outgoing interface. • It is the interface on which multicast applications running locally on the router, such as Session Announcement Protocol (SAP), perform group joins by default. • It is the interface from which the default local address is derived for packets sourced out of an unnumbered interface if there are no non-127 addresses configured on the loopback interface, lo0.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Default, Primary, and Preferred Addresses and Interfaces on page 211

primary (AS PIC or Multiservices PIC Interfaces)

Syntax	<code>primary <i>interface-name</i>;</code>
Hierarchy Level	[edit interfaces (rsp0 rsp1) redundancy-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the primary AS PIC or MultiServices PIC interface.
Options	<i>interface-name</i> —The identifier for the AS PIC interface or MultiServices PIC interface, which must be of the form sp-fpc/pic/port .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

priority (OAM Connectivity-Fault Management)

Syntax	<code>priority <i>number</i>;</code>
Hierarchy Level	<p>[edit protocols <code>oam ethernet connectivity-fault-management maintenance-domain <i>md-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i></code>]</p> <p>For EX Series Switches:</p> <p>[edit protocols <code>oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i></code>]</p>
Release Information	Statement introduced in Junos OS Release 8.4.
Description	IEEE 802.1p priority bits used by the continuity check messages.
Options	<p><i>number</i>—Configure the IEEE 802.1p priority bits to be used in the VLAN header of the CFM packets.</p> <p>Range: 0 through 7</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i>

priority (Schedulers)

Syntax	<code>priority (high low);</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, assign queuing priority to a forwarding class.
Options	low —Forwarding class has low priority. high —Forwarding class has high priority.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• ATM2 IQ VC Tunnel CoS Components Overview

promiscuous-mode

Syntax `promiscuous-mode {
 vpi vpi-identifier;
}`

Hierarchy Level [edit interfaces *interface-name* atm-options]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

Description For ATM interfaces with **atm-ccc-cell-relay** encapsulation, map all incoming cells from either an interface port or a VP to a single label-switched path (LSP) without restricting the VCI number. Promiscuous mode allows you to map traffic from all 65,535 VCIs to a single LSP, or from all 256 VPIs to a single LSP.



NOTE: In ACX Series routers, the statement supports only Inverse Multiplexing for ATM (IMA).

Options *vpi-identifier*—Open this VPI in promiscuous mode.
Range: 0 through 255

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring ATM Cell-Relay Promiscuous Mode*
- [vpi \(ATM CCC Cell-Relay Promiscuous Mode\) on page 1152](#)

protect-circuit

Syntax	<code>protect-circuit <i>group-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> sonet-options aps]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the protect router in an APS circuit pair. When the working interface fails, APS brings up the protection circuit and the traffic is moved to the protection circuit.
Options	<i>group-name</i> —Circuit's group name.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Basic Automatic Protect Switching</i>• working-circuit on page 1163

protection-group

```
Syntax  protection-group {
    ethernet-ring ring-name {
        data-channel {
            vlan number
        }
        east-interface {
            control-channel channel-name {
                vlan number;
                interface name interface-name
            }
        }
        guard-interval number;
        node-id mac-address;
        restore-interval number;
        ring-protection-link-owner;
        non-revertive;
        wait-to-block-interval number;
        major-ring-name name;
        propagate-tc;
        compatibility-version (1|2);
        ring-id number;
        non-vc-mode;
        dot1p-priority number;
        west-interface {
            control-channel channel-name {
                vlan number;
                interface name interface-name
            }
            virtual-control-channel {
                west-interface name;
                east-interface name;
            }
        }
    }
}
control-vlan (vlan-id | vlan-name);
east-interface {
    node-id mac-address;
    control-channel channel-name {
        vlan number;
        interface name interface-name
    }
    interface-none
    ring-protection-link-end;
}
control-channel channel-name {
    vlan number;
    interface name interface-name
}
data-channel {
```

```

    vlan number
  }
  guard-interval number;
  node-id mac-address;
  restore-interval number;
  ring-protection-link-owner;
  west-interface {
    node-id mac-address;
    control-channel channel-name {
      vlan number;
      interface name interface-name
    }
    interface-none
    ring-protection-link-end;
  }
  control-channel channel-name {
    vlan number;
    interface name interface-name
  }
}
}
guard-interval number;
restore-interval number;
traceoptions {
  file filename <no-stamp> <world-readable | no-world-readable> <replace> <size size>;
  flag flag;
}
}

```

Hierarchy Level [edit protocols]

Release Information Statement introduced in Junos OS Release 9.4.
Statement introduced in Junos OS Release 12.1 for EX Series switches.

Description Configure Ethernet ring protection switching.

The statements are explained separately. All statements apply to MX Series routers. EX Series switches do not assign **node-id** and use **control-vlan** instead of **control-channel**.


Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation	<ul style="list-style-type: none"> • <i>Ethernet Ring Protection Switching Overview</i> • <i>Ethernet Ring Protection Using Ring Instances for Load Balancing</i> • <i>Example: Configuring Load Balancing Within Ethernet Ring Protection for MX Series Routers</i> • <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i> • <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i> • <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i>
------------------------------	--

protocol-down

Syntax	protocol-down;
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile event]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Upper layer indication of protocol down event. When the protocol-down statement is included, the protocol down event triggers the action specified under the action statement.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring an OAM Action Profile</i>


protocols

Syntax	<code>protocols [inet iso mpls];</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit logical-unit-number family tcc]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	<p>For Layer 2.5 VPNs on T Series, MX Series, M120, and M320 routers support, configure IS-IS (ISO traffic) or MPLS traffic to traverse a TCC interface. By default, IPv4 (inet) traffic runs on T Series, MX, Series, M120, and M320 routers and over TCC interfaces. You must configure the same traffic type on both ends of the Layer 2.5 VPN.</p> <div> NOTE: Some platform and FPC combinations can not pass TCC encapsulated ISO traffic. See <i>Platforms/FPCs That Cannot Forward TCC Encapsulated ISO Traffic</i> for details.</div>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring IS-IS or MPLS Traffic for TCC Interfaces on page 286• <i>Platforms/FPCs That Cannot Forward TCC Encapsulated ISO Traffic</i>


proxy

Syntax	<code>proxy inet-address <i>address</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family tcc], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family tcc]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Layer 2.5 VPNs using an Ethernet interface as the TCC router, configure the IP address for which the TCC router is proxying. Ethernet TCC is supported on interfaces that carry IPv4 traffic only. Ethernet TCC encapsulation is supported on 1-port Gigabit Ethernet, 2-port Gigabit Ethernet, 4-port Gigabit Ethernet, and 4-port Fast Ethernet PICs only. Ethernet TCC is not supported on the T640 router.
Options	inet-address —Configure the IP address of the neighbor to the TCC router.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Translation Cross-Connect Interface Switching</i> • <i>Example: Configuring an Ethernet TCC or Extended VLAN TCC</i> • remote on page 972 • <i>Junos OS VPNs Library for Routing Devices</i>

proxy-arp

Syntax	proxy-arp (restricted unrestricted);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.6 for EX Series switches. restricted added in Junos OS Release 10.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for the QFX Series.
Description	For Ethernet interfaces only, configure the router or switch to respond to any ARP request, as long as the router or switch has an active route to the ARP request's target address.
	<div>  <p>NOTE: You must configure the IP address and the inet family for the interface when you enable proxy ARP.</p> </div>
Default	Proxy ARP is not enabled. The router or switch responds to an ARP request only if the destination IP address is its own.
Options	<ul style="list-style-type: none"> none—The router or switch responds to any ARP request for a local or remote address if the router or switch has a route to the target IP address. restricted—(Optional) The router or switch responds to ARP requests in which the physical networks of the source and target are different and does not respond if the source and target IP addresses are in the same subnet. The router or switch must also have a route to the target IP address. unrestricted—(Optional) The router or switch responds to any ARP request for a local or remote address if the router or switch has a route to the target IP address. <p>Default: unrestricted</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Restricted and Unrestricted Proxy ARP</i> <i>Configuring Proxy ARP on Switches</i> <i>Example: Configuring Proxy ARP on an EX Series Switch</i> <i>Configuring Gratuitous ARP</i>

push

Syntax	push;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches. Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.
Description	<p> NOTE: On EX4300 switches, push is not supported at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map] hierarchy level.</p> <p>Specify the VLAN rewrite operation to add a new VLAN tag to the top of the VLAN stack. An outer VLAN tag is pushed in front of the existing VLAN tag.</p> <p>You can use this statement on Gigabit Ethernet IQ and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces; 10-Gigabit Ethernet LAN/WAN PIC; aggregated Ethernet interfaces using Gigabit Ethernet IQ interfaces; 100-Gigabit Ethernet Type 5 PIC with CFP; and Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces.</p> <p>If you include the push statement in the configuration, you must also include the pop statement at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map] hierarchy level.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Stacking a VLAN Tag</i> <i>Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support</i>

push-push

Syntax	<code>push-push;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>input-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>output-vlan-map]</code>
Release Information	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	<p>Specify the VLAN rewrite operation to push two VLAN tags in front of the frame.</p> <p>You can use this statement on Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, on aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Stacking Two VLAN Tags</i>

queue-depth

Syntax	<code>queue-depth <i>cells</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> atm-options linear-red-profiles <i>profile-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define maximum queue depth in the CoS VC drop profile. Packets are always dropped beyond the defined maximum. This statement is mandatory; there is no default configuration.
Default	Buffer usage is unregulated.
Options	cells —Maximum number of cells the queue can contain. Range: 1 through 64,000 cells
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>ATM2 IQ VC Tunnel CoS Components Overview</i> • <i>Configuring Linear RED Profiles on ATM Interfaces</i> • high-plp-threshold on page 657 • low-plp-threshold on page 787

queue-length

Syntax	queue-length <i>number</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
Description	For ATM1 interfaces only, define the maximum queue length in the traffic-shaping profile. For ATM1 PICs, each VC has its own independent shaping parameters.
Default	Buffer usage is unregulated.
Options	number —Maximum number of packets the queue can contain. Range: 1 through 16,383 packets Default: 16,383 packets
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the ATM1 Queue Length</i>

queues

Syntax	<code>queues [<i>queue-numbers</i>];</code>
Hierarchy Level	<code>[edit interfaces vsp-<i>fpc</i>/<i>pic</i>/<i>port</i> <i>unit</i> <i>logical-unit-number</i> <i>compression</i> <i>rtp</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For voice services interfaces only, assign queue numbers for RTP traffic.
Options	<code>queues <i>queue-numbers</i></code> —Assign one or more of the following queues: q0 , q1 , q2 , q3 . For VRRP services, specify the q3 option instead of q0 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

quiet-period

Syntax	quiet-period <i>seconds</i> ;
Hierarchy Level	[edit protocols dot1x authenticator interface <i>interface-id</i>]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Specify the number of seconds the port remains in the wait state following a failed authentication exchange with the client, before reattempting authentication.
Options	seconds —Specify the number of seconds the port remains in the wait state following a failed authentication exchange with the client, before reattempting authentication. Range: 0 through 65,535 seconds Default: 60 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>IEEE 802.1x Port-Based Network Access Control Overview</i>• authenticator on page 460• dot1x on page 561• interface (IEEE 802.1x) on page 706

radius-realm

Syntax	<code>radius-realm <i>radius-realm-string</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure vlan-ranges authentication username-include], [edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges authentication username-include]
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Specify that the user-defined RADIUS realm string is appended as a last piece to the username and used by RADIUS to direct the authentication request to a profile that does not allocates addresses.
Options	<i>radius-realm-string</i> —A string to describe the RADIUS realm.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring VLAN Interface Username Information for AAA Authentication</i>

ranges (Dynamic Stacked VLAN)

Syntax	<code>ranges (any <i>low-tag-high-tag</i>),(any <i>low-tag-high-tag</i>);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges dynamic-profile <i>profile-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.5.
Description	Configure VLAN ranges for dynamic, auto-sensed stacked VLANs.
Options	<p>any—The entire VLAN range.</p> <p><i>low-tag</i>—The lower limit of the VLAN range.</p> <p><i>high-tag</i>—The upper limit of the VLAN range.</p> <p>Range: 1 through 4094</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs

ranges (Dynamic VLAN)

Syntax	<code>ranges (any <i>low-tag</i>)-(any <i>high-tag</i>);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> auto-configure vlan-ranges dynamic-profile <i>profile-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.5.
Description	Configure VLAN ranges for dynamic, auto-sensed VLANs.
Options	<p>any—The entire VLAN range.</p> <p><i>low-tag</i>—The lower limit of the VLAN range.</p> <p><i>high-tag</i>—The upper limit of the VLAN range.</p> <p>Range: 1 through 4094</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs</i>

rate

Syntax	<code>rate <i>percentage</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> receive-bucket], [edit interfaces <i>interface-name</i> transmit-bucket]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify percentage of the interface line rate that is available to receive or transmit packets.
Options	<i>percentage</i> —Percentage of the interface line rate that is available to receive or transmit packets. Range: 0 through 100
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 157

rate

Syntax	<code>rate <i>new-sessions-per-second</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> services-options session-limit]
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Specify the maximum number of new sessions allowed per second.
Options	<i>rate new-sessions-per-second</i> —Specify the maximum number of new sessions allowed per second. Range: 0, which indicates no limit, and 500 or greater.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

rdi

Syntax	<code>rdi;</code>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management action-profile tlv-action event]
Release Information	Statement introduced in Junos OS Release 10.1.
Description	<p>Define a new event rdi. The remote defect indication (rdi) event is triggered whenever CCM packets are received from a remote location with the rdi bit set.</p> <p>This event is cleared and action is reverted when none of the remote MEPs send the CCM packets with the RDI bit.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring a CFM Action Profile to Specify CFM Actions for CFM Events</i>

reassemble-packets

Syntax	<code>reassemble-packets;</code>
Hierarchy Level	<p>[edit interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i>]</p>
Release Information	Statement introduced in Junos OS Release 9.2.
Description	Enable reassembly of fragmented tunnel packets on generic routing encapsulation (GRE) tunnel interfaces.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • <i>Configuring Packet Reassembly</i>

reauthentication

Syntax	<code>reauthentication (disable interval <i>seconds</i>);</code>
Hierarchy Level	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Set or disable the periodic reauthentication of the client.
Options	<ul style="list-style-type: none">• disable—Disable the periodic reauthentication of the client.• interval <i>seconds</i>—Specify the periodic reauthentication time interval. <p>Range: 1 through 65,535 seconds</p> <p>Default: 3600 seconds</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>IEEE 802.1x Port-Based Network Access Control Overview</i>• dot1x on page 561• interface (IEEE 802.1x) on page 706• quiet-period on page 960

receive-bucket

Syntax	<pre>receive-bucket { overflow (discard tag); rate <i>percentage</i>; threshold <i>bytes</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Set parameters for the receive leaky bucket, which specifies what percentage of the interface's total capacity can be used to receive packets.</p> <p>For each DS3 channel on a channelized OC12 interface, you can configure a unique receive bucket.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 157 • transmit-bucket on page 1093

receive-options-packets

Syntax	receive-options-packets;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For a Monitoring Services PIC and an ATM or SONET/SDH PIC installed in an M160, M40e, or T Series router, guarantee conformity with cflowd records structure. This statement is required when you enable passive monitoring.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Enabling Passive Monitoring on ATM Interfaces</i>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>

receive-ttl-exceeded

Syntax	receive-ttl-exceeded;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Monitoring Services PIC and an ATM or SONET/SDH PIC installed in an M160, M40e, or T Series router, guarantee conformity with cflowd records structure. This statement is required when you enable passive monitoring.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Enabling Passive Monitoring on ATM Interfaces</i>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>

red-differential-delay

Syntax	<code>red-differential-delay <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voice services interfaces only, configure the red differential delay among bundle links to give warning when a link has a differential delay that exceeds the configured threshold.
Options	<p><i>milliseconds</i>—Red differential delay threshold.</p> <p>Range: 1 through 2000 milliseconds</p> <p>Default: 10 milliseconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • action-red-differential-delay on page 432 • yellow-differential-delay on page 1164 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

redial-delay

Syntax	<code>redial-delay <i>time</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i> dialer-options],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i> dialer-options]</code>
Release Information	Statement introduced in Junos OS Release 7.5.
Description	<p>On J Series Services Routers with interfaces configured for ISDN with dialout, specify the delay (in seconds) between two successive calls made by the dialer. To configure callback mode, include the callback statement at the <code>[edit interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i> dialer-options]</code> hierarchy level.</p> <p>If the callback statement is configured, you cannot use the caller <i>caller-id</i> statement at the <code>[edit interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i> dialer-options]</code> hierarchy level.</p>
Options	<p>time—Delay (in seconds) between two successive calls.</p> <p>Range: 2 through 255 seconds</p> <p>Default: 3 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>ISDN Interfaces Overview</i>• <i>Junos OS Interfaces and Routing Configuration Guide</i>

redundancy-options

Syntax	<pre> redundancy-options { primary <i>interface-name</i>; secondary <i>interface-name</i>; hot-standby; } </pre>
Hierarchy Level	<pre> [edit interfaces (rsp0 rsp1)], [edit interfaces <i>rlsnumber</i>] [edit interfaces <i>rspnumber</i>] [edit interfaces <i>rmsnumber</i>] </pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the primary and secondary (backup) AS PIC interfaces or MultiServices PIC interfaces.
Options	<p>primary <i>interface-name</i>—The identifier for the primary LSQ AS, rsp, or rms interface.</p> <p>secondary <i>interface-name</i>—The identifier for the secondary (backup) LSQ AS, rsp, or rmsinterface.</p> <p>hot-standby—For one-to-one AS, rsp, or rms redundancy configurations, specify that the failure detection and recovery must take place in less than 5 seconds.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Junos OS Services Interfaces Library for Routing Devices</i>


remote

Syntax	<pre>remote { (inet-address <i>address</i> mac-address <i>address</i>); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family tcc], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family tcc]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Layer 2.5 VPNs using an Ethernet interface as the TCC router, configure the location of the remote router. Ethernet TCC is supported on interfaces that carry IPv4 traffic only. Ethernet TCC encapsulation is supported on 1-port Gigabit Ethernet, 2-port Gigabit Ethernet, 4-port Gigabit Ethernet, and 4-port Fast Ethernet PICs only.
Options	mac-address —Configure the MAC address of the remote site. inet-address —Configure the IP address of the remote site.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Translation Cross-Connect Interface Switching</i>• <i>Example: Configuring an Ethernet TCC or Extended VLAN TCC</i>• proxy on page 953• <i>Junos OS VPNs Library for Routing Devices</i>

remote-loopback

Syntax	remote-loopback;
Hierarchy Level	[edit protocols oam link-fault-management interface <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	For Ethernet interfaces on EX Series switches and M320, M120, MX Series, and T Series routers, set the remote DTE into loopback mode. Remove the statement from the configuration to take the remote DTE out of loopback mode. Used for IEEE 802.3ah Operation, Administration, and Management (OAM) support.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Setting a Remote Interface into Loopback Mode</i>

remote-loopback-respond

Syntax	remote-loopback-respond;
Hierarchy Level	[edit interfaces <i>ct1-fpc/pic/port</i>], [edit interfaces <i>interface-name</i> t1-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
Description	For T1 interfaces only, configure the router to respond to remote loopback requests. Remote loopback requests can be from the facilities data link or inband.
<div> NOTE: When configuring CT1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the <code>remote-loopback-respond</code> statement must be included at the [edit interfaces <i>ct1-fpc/pic/port</i>] hierarchy level.</div>	
Default	The router does not respond to remote loop requests.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the T1 Remote Loopback Response</i>• feac-loop-respond on page 634• loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3) on page 779

remote-mep

Syntax	<pre>remote-mep mep-id { action-profile profile-name; sla-iterator-profile profile-name { data-tlv-size size; iteration-count count-value; priority priority-value; } detect-loc; }</pre>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>md-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i>]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	Configure the numeric identifier of the remote maintenance association end point (MEP) within the maintenance association.
Options	<p>mep-id—Numeric identifier of the MEP.</p> <p>Range: 1 through 8191</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>Configure—To enter configuration mode.</p> <p>Control—To modify any configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i> • <i>detect-loc</i>

remove-when-no-subscribers

Syntax	<code>remove-when-no-subscribers;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	Remove subscriber VLANs automatically when no client sessions (for example, DHCP or PPPoE) exist on the VLAN.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Automatically Removing VLANs with No Subscribers</i>

request

Syntax	<code>request (protect working);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Perform a manual switch between the protect and working circuits. This statement is honored only if there are no higher-priority reasons to switch.
Options	protect —Request that the circuit become the protect circuit. working —Request that the circuit become the working circuit.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Switching Between the Working and Protect Circuits</i>• force on page 641

required-depth

Syntax	<code>required-depth <i>number</i>;</code>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> atm-options mpls pop-all-labels], [edit interfaces <i>interface-name</i> sonet-options mpls pop-all-labels], [edit interfaces <i>interface-name</i> fastether-options mpls pop-all-labels], [edit interfaces <i>interface-name</i> gigether-options mpls pop-all-labels]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p>
Description	<p>For passive monitoring on ATM and SONET/SDH interfaces only, specify the number of MPLS labels an incoming packet must have for the pop-all-labels statement to take effect.</p> <p>If you include the required-depth 1 statement, the pop-all-labels statement takes effect for incoming packets with one label only. If you include the required-depth 2 statement, the pop-all-labels statement takes effect for incoming packets with two labels only.</p>
Options	<p><i>number</i>—Number of MPLS labels on incoming IP packets.</p> <p>Range: 1 or 2 labels</p> <p>Default: If you omit this statement, the pop-all-labels statement takes effect for incoming packets with one or two labels. The default is equivalent to including the required-depth [1 2] statement.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Removing MPLS Labels from Incoming Packets</i> • <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

restore-interval

Syntax	restore-interval <i>number</i> ;
Hierarchy Level	[edit protocols protection-group ethernet-ring <i>ring-name</i>]
Release Information	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.
Description	Configures the number of minutes that the node does not process any Ethernet ring protection (ERP) protocol data units (PDUs).. This configuration is a global configuration and applies to all Ethernet rings if the Ethernet ring does not have a more specific configuration for this value. If no parameter is configured at the protection group level, the global configuration of this parameter uses the default value.
Options	<i>number</i> —Specify the restore interval. Range: 1 through 12 minutes
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Ethernet Ring Protection Switching Overview</i>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i>


retries

Syntax	<code>retries <i>integer</i>;</code>
Hierarchy Level	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Set a limit on the number of failed authentication attempts between a port and a client. When the limit is exceeded, the port waits to reattempt authentication for the number of seconds set by the quiet-period statement configured at the same hierarchy level.
Options	<p><i>integer</i>—Specify the number of retries.</p> <p>Range: 1 through 10</p> <p>Default: 3 retries</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>IEEE 802.1x Port-Based Network Access Control Overview</i> • dot1x on page 561 • interface (IEEE 802.1x) on page 706 • quiet-period on page 960

revert-time (Interfaces)

Syntax	<code>revert-time <i>seconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure APS revertive mode.
Default	APS operates in nonrevertive mode.
Options	<i>seconds</i> —Amount of time to wait after the working circuit has again become functional before making the working circuit active again. Range: 1 through 65,535 seconds Default: None (APS operates in nonrevertive mode)
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Revertive Mode</i>

revertive

Syntax	revertive;
Hierarchy Level	[edit interfaces aeX aggregated-ether-options lacp link-protection]
Release Information	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 12.3 for EX Series switches. Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.
Description	Enable the ability to switch to a better priority link (if one is available).
	<div>  <p>NOTE: By default, LACP link protection is revertive. However, you can use this statement to define a specific aggregated Ethernet interface as revertive to override a global non-revertive statement specified at the [edit chassis] hierarchy level.</p> </div>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>non-revertive (Chassis)</i> <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches</i>

rfc-2615

Syntax	rfc-2615;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Include this statement to enable features described in RFC 2615, <i>PPP over SONET/SDH</i> .
Default	Settings required by RFC 1619, <i>PPP over SONET/SDH</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring PPP Support on SONET/SDH Interfaces</i>

ring-protection-link-end

Syntax	ring-protection-link-end;
Hierarchy Level	[edit protocols protection-group ethernet-ring <i>ring-name</i> (east-interface west-interface)]
Release Information	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches.
Description	Specify that the port is one side of a ring protection link (RPL) by setting the RPL end flag.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Ethernet Ring Protection Switching Overview</i>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i>

ring-protection-link-owner

Syntax	ring-protection-link-owner;
Hierarchy Level	[edit protocols protection-group ethernet-ring <i>ring-name</i>]
Release Information	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.
Description	Specify the ring protection link (RPL) owner flag in the Ethernet protection ring. Include this statement only once for each ring (only one node can function as the RPL owner).
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Ethernet Ring Protection Switching Overview</i> • <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i> • <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i>

routing-instance

Syntax	<pre>routing-instance { destination <i>routing-instance-name</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	To configure interfaces and logical-systems , specify the destination routing instance that points to the routing table containing the tunnel destination address.
Default	The default Internet routing table is inet.0 .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

routing-instance (PPPoE Service Name Tables)

Syntax	<code>routing-instance <i>routing-instance-name</i>;</code>
Hierarchy Level	<code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i>],</code> <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> agent-specifier</code> <code>aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code>
Release Information	Statement introduced in Junos OS Release 10.2.
Description	<p>Use in conjunction with the dynamic-profile statement at the same hierarchy levels to specify the routing instance in which to instantiate a dynamic PPPoE interface. You can associate a routing instance with a named service entry, empty service entry, or any service entry configured in a PPPoE service name table, or with an agent circuit identifier/agent remote identifier (ACI/ARI) pair defined for these services.</p> <p>The routing instance associated with a service entry in a PPPoE service name table overrides the routing instance associated with the PPPoE underlying interface on which the dynamic PPPoE interface is created.</p> <p>If you include the routing-instance statement at the <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> agent-specifier aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code> hierarchy level, you cannot also include the static-interface statement at this level. The routing-instance and static-interface statements are mutually exclusive for ACI/ARI pair configurations.</p>
Options	<i>routing-instance-name</i> —Name of the routing instance in which the router instantiates the dynamic PPPoE interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring PPPoE Service Name Tables</i> <i>Assigning a Dynamic Profile and Routing Instance to a Service Name or ACI/ARI Pair for Dynamic PPPoE Interface Creation</i>

rpf-check (Dynamic Profiles)

Syntax	<pre>rpf-check { fail-filter <i>filter-name</i>; mode loose; }</pre>
Hierarchy Level	[edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced in Junos OS Release 9.6.
Description	<p>Check whether traffic is arriving on an expected path. You can include this statement with the inet protocol family only.</p> <p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Unicast RPF Strict Mode on page 247• Configuring Unicast RPF and Fail Filters in Dynamic Profiles for Subscriber Interfaces

rpf-check

List of Syntax	Syntax (MX Series, SRX Series, M Series, T Series, PTX Series) on page 987 Syntax (EX Series) on page 987
Syntax (MX Series, SRX Series, M Series, T Series, PTX Series)	<pre>rpf-check { fail-filter <i>filter-name</i>; mode loose; }</pre>
Syntax (EX Series)	<pre>rpf-check;</pre>
Hierarchy Level (MX Series, SRX Series, M Series, T Series, PTX Series)	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet6</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet6</i>]</pre>
Hierarchy Level (EX Series)	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet6</i>]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.3 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Support for interface ps0 (pseudowire subscriber logical interface device) added in Junos OS Release 15.1.</p>
Description	<p>Enable a reverse-path forwarding (RPF) check on unicast traffic.</p> <p>On EX3200 and EX4200 switches, enable a reverse-path forwarding (RPF) check on unicast traffic (except ECMP packets) on all ingress interfaces.</p> <p>On EX4300 switches, enable a reverse-path forwarding (RPF) check on unicast traffic, including ECMP packets, on all ingress interfaces.</p> <p>On EX8200 and EX6200 switches, enable an RPF check on unicast traffic, including ECMP packets, on the selected ingress interfaces.</p> <p>On QFX Series switches, enable an RPF check on unicast traffic (except ECMP packets) on the selected ingress interfaces.</p> <p>The mode statement is explained separately.</p>
Default	Unicast RPF is disabled on all interfaces.

Options	fail-filter —A filter to evaluate when packets are received on the interface. If the RPF check fails, this optional filter is evaluated. If the fail filter is not configured, the default action is to silently discard the packet.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Unicast RPF Strict Mode on page 247• Configuring Unicast RPF Loose Mode on page 249• Example: Configuring Unicast Reverse-Path-Forwarding Check on page 256• <i>Configuring a Pseudowire Subscriber Logical Interface Device</i>• <i>Example: Configuring Unicast RPF on an EX Series Switch</i>• <i>Configuring Unicast RPF (CLI Procedure)</i>• <i>Disabling Unicast RPF (CLI Procedure)</i>• <i>Understanding Unicast RPF</i>

rpf-loose-mode-discard

Syntax	<pre>rpf-loose-mode-discard { family { inet; inet6; } }</pre>
Hierarchy Level	[edit forwarding-options]
Release Information	Statement introduced in Junos OS Release 12.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Configure unicast reverse path forwarding (unicast RPF) loose mode with the ability to discard packets with the source address pointing to the discard next hop.
Options	inet —IPv4 address family. inet6 —IPv6 address family.
Required Privilege Level	interface-control—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Unicast RPF on page 244

rtp

Syntax

```
rtp {
  f-max-period number;
  queues [ queue-numbers ];
  port {
    minimum port-number;
    maximum port-number;
  }
}
```

Hierarchy Level [edit interfaces *interface-name* **unit** *logical-unit-number* **compression**]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure the real-time transport protocol (RTP) properties for voice services traffic.
The remaining statements are described separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Junos OS Services Interfaces Library for Routing Devices*

rts

Syntax	<code>rts (assert de-assert normal);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the to-DCE signal, request to send (RTS).
Options	assert —The to-DCE signal must be asserted. de-assert —The to-DCE signal must be deasserted. normal —Normal RTS signal handling, as defined by the TIA/EIA Standard 530. Default: normal
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Signal Handling on page 352

rts-polarity


Syntax	<code>rts-polarity (negative positive);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure RTS signal polarity.
Options	negative —Negative signal polarity. positive —Positive signal polarity. Default: positive
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Serial Signal Polarities on page 355

rtvbr

Syntax	<code>rtvbr peak <i>rate</i> sustained <i>rate</i> burst <i>length</i>;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM2 IQ PICs only, define the real-time variable bandwidth utilization in the traffic-shaping profile.</p> <p>When you configure the real-time bandwidth utilization, you must specify all three options (burst, peak, and sustained). You can specify the rate in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify the rate in cells per second by entering a decimal number followed by the abbreviation c; values expressed in cells per second are converted to bits per second using the formula 1 cps = 384 bps.</p>
Default	If the rtvbr statement is not included, bandwidth utilization is unlimited.
Options	<p>burst <i>length</i>—Burst length, in cells. If you set the length to 1, the peak traffic rate is used. Range: 1 through 4000 cells</p> <p>peak <i>rate</i>—Peak rate, in bits per second or cells per second. Range: For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure..</p> <p>sustained <i>rate</i>—Sustained rate, in bps or cps. Range: For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- *Configuring ATM CBR*
 - *Configuring ATM2 IQ Real-Time VBR*
 - *Applying Scheduler Maps to Logical ATM Interfaces*
 - [cbr on page 491](#)
 - [vbr on page 1128](#)

sa-multicast (100-Gigabit Ethernet)

Syntax	sa-multicast;
Hierarchy Level	[edit chassis fpc slot pic slot forwarding-mode]
Release Information	Statement introduced in Junos OS Release 10.4.
Description	Configure the 100-Gigabit Ethernet PIC or MIC to interoperate with other Juniper Networks 100-Gigabit Ethernet PICs.
	<p> NOTE: The default packet steering mode for PD-1CE-CFP-FPC4 is SA multicast bit mode. No SA multicast configuration is required to enable this mode.</p>
	<p>sa-multicast supports interoperability between the following PICs and MICs:</p> <ul style="list-style-type: none"> • 100-Gigabit Ethernet Type 5 PIC with CFP (PF-1CGE-CFP) and the 100-Gigabit Ethernet Type 4 PIC with CFP (PD-1CE-CFP-FPC4) . • 100-Gigabit Ethernet MICs and the 100-Gigabit Ethernet Type 4 PIC with CFP (PD-1CE-CFP-FPC4).
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Interoperability Between the 100-Gigabit Ethernet PICs PD-1CE-CFP-FPC4 and PF-1CGE-CFP</i> • <i>Configuring the Interoperability Between the 100-Gigabit Ethernet PICs PF-1CGE-CFP and PD-1CE-CFP-FPC4</i> • <i>Configuring 100-Gigabit Ethernet MICs to Interoperate with Type 4 100-Gigabit Ethernet PICs (PD-1CE-CFP-FPC4) Using SA Multicast Mode</i> • <i>Interoperability Between MPC4E (MPC4E-3D-2CGE-8XGE) and 100-Gigabit Ethernet PICs on Type 4 FPC</i> • <i>Configuring MPC4E (MPC4E-3D-2CGE-8XGE) to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode</i> • <i>Interoperability Between the 100-Gigabit Ethernet PICs PD-1CE-CFP-FPC4 and P1-PTX-2-100GE-CFP</i> • <i>Configuring the Interoperability Between the 100-Gigabit Ethernet PICs P1-PTX-2-100GE-CFP and PD-1CE-CFP-FPC4</i>

- *forwarding-mode (100-Gigabit Ethernet)*
- *sa-multicast (PTX Series Packet Transport Routers)*
- *vlan-steering (100-Gigabit Ethernet Type 4 PIC with CFP) on page 1145*
- *Configuring VLAN Steering Mode for 100-Gigabit Ethernet Type 4 PIC with CFP*

sampling (Interfaces)

Syntax	<code>sampling <i>direction</i>;</code>
Hierarchy Level	[edit <code>interfaces interface-name unit logical-unit-number family inet</code>], [edit <code>logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet</code>]
Release Information	Statement introduced before Junos OS Release 7.4. Support for sampling on both input and output for bridge family introduced in Junos OS Release 18.2R1. Support for sampling on both input and output for vpls family introduced in Junos OS Release 18.2R1.
Description	Configure the direction of traffic to be sampled.
Options	<i>direction</i> can be one of the following: input —Configure at least one expected ingress point. output —Configure at least one expected egress point. input output —On a single interface, configure at least one expected ingress point and one expect egress point.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i> • <i>Configuring Flow Monitoring on T Series and M Series Routers and EX9200 Switches</i>

satop-options

Syntax	<pre> satop-options { excessive-packet-loss-rate { apply-groups <i>group-name</i> apply-groups-except <i>group-name</i> groups <i>group-name</i> sample-period <i>milliseconds</i> threshold <i>percentile</i> } idle-pattern <i>pattern</i> jitter-buffer-auto-adjust jitter-buffer-latency <i>milliseconds</i> jitter-buffer-packets <i>packets</i> payload-size <i>bytes</i>; } </pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	<p>Statement introduced in Junos OS Release 9.3.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	<p>Set Structure-Agnostic TDM over Packet (SAToP) protocol options.</p> <p>On ACX Series routers, the following statements are not supported:</p> <pre> apply-groups <i>group-name</i> apply-groups-except <i>group-name</i> groups <i>group-name</i> jitter-buffer-auto-adjust </pre>
Options	<p>excessive-packet-loss-rate options—Set packet loss options.</p> <ul style="list-style-type: none"> apply-groups <i>group-name</i>—Groups from which to inherit configuration data. apply-groups-except <i>group-name</i>—Don't inherit configuration data from these groups. groups <i>group-name</i>—Specify groups. sample-period <i>milliseconds</i>—Number of milliseconds over which excessive packet loss rate is calculated. threshold <i>percentile</i>—Percentile designating the threshold of excessive packet loss rate (from 1 to 100). <p>idle-pattern <i>pattern</i>—An 8-bit hexadecimal pattern to replace TDM data in a lost packet (from 0 to 255).</p> <p>jitter-buffer-auto-adjust—Automatically adjust the jitter buffer.</p>



NOTE: This option is not applicable on MX Series routers.

jitter-buffer-latency *milliseconds*—Number of milliseconds delay in jitter buffer (from 1 to 1000 milliseconds).

jitter-buffer-packets *packets*—Number of packets in jitter buffer (from 1 to 64).

payload-size *bytes*—Payload size in integer number of bytes.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring SAToP on 4-Port Channelized OC3/STM1 Circuit Emulation MICs*
- *Configuring SAToP Emulation on T1/E1 Interfaces on 12-Port Channelized T1/E1 Circuit Emulation PICs*
- *ATM Support on Circuit Emulation PICs Overview*

shared-interface

Syntax shared-interface;

Hierarchy Level [edit interfaces ge-*fpc/pic/slot*],
[edit interfaces so-*fpc/pic/slot*],
[edit interfaces xe-*fpc/pic/slot*]

Release Information Statement introduced in Junos OS Release 9.3.

Description Configure a physical interface to be a shared interface. Logical interfaces configured under the shared physical interface can be assigned to different Protected System Domains (PSDs).

Options This statement has no options.

Required Privilege Level view-level—To view this statement in the configuration.
control-level—To add this statement to the configuration.

Related Documentation

- [interface-shared-with on page 717](#)

scheduler-maps (For ATM2 IQ Interfaces)

Syntax	<pre>scheduler-maps <i>map-name</i> { forwarding-class (<i>class-name</i> assured-forwarding best-effort expedited-forwarding network-control); vc-cos-mode (alternate strict); }</pre>
Hierarchy Level	[edit at- <i>fpc/pic/port interface-name</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS parameters assigned to forwarding classes.
Options	<p><i>map-name</i>—Name of the scheduler map.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>ATM2 IQ VC Tunnel CoS Components Overview</i>• <i>Applying Scheduler Maps to ATM Interfaces</i>• atm-scheduler-map on page 457

schedulers

Syntax	<code>schedulers <i>number</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 8.2.
Description	Specify the number of schedulers for Ethernet IQ2 and IQ2-E PIC port interfaces.
Default	If you omit this statement, the 1024 schedulers are distributed equally over all ports in multiples of 4.
Options	<i>number</i> —Number of schedulers to configure on the port. Range: 1 through 1024
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Class of Service Feature Guide for Routers and EX9200 Switches</i>

secondary

Syntax	<code>secondary <i>interface-name</i>;</code>
Hierarchy Level	<code>[edit interfaces (rsp0 rsp1) redundancy-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the secondary (backup) AS PIC interface or MultiServices PIC interface.
Options	<i>interface-name</i> —The identifier for the AS PIC interface or MultiServices PIC interface, which must be of the form sp-<i>fpc/pic/port</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

send-critical-event

Syntax	send-critical-event;
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile action]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Send OAM PDUs with the critical event bit set.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Specifying the Actions to Be Taken for Link-Fault Management Events</i>

serial-options

```
Syntax serial-options {
  clock-rate rate;
  clocking-mode (dce | loop);
  control-polarity (negative | positive);
  cts-polarity (negative | positive);
  dcd-polarity (negative | positive);
  dce-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
  }
  dsr-polarity (negative | positive);
  dte-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
  }
  dtr-circuit (balanced | unbalanced);
  dtr-polarity (negative | positive);
  encoding (nrz | nrzi);
  indication-polarity (negative | positive);
  line-protocol protocol;
  loopback (dce-local | dce-remote | local | remote);
  rts-polarity (negative | positive);
  tm-polarity (negative | positive);
  transmit-clock invert;
}
```

Hierarchy Level [edit interfaces *se-pim*/0/*port*]

Release Information Statement introduced prior to Junos OS Release 7.4.

Description Configure serial-specific interface properties.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Serial Interfaces Overview on page 343](#)
- *no-concatenate*

server

Syntax server;

Hierarchy Level [edit interfaces pp0 unit *logical-unit-number* [pppoe-options](#)],
[edit logical-systems *logical-system-name* interfaces pp0 [unit](#) *logical-unit-number* [pppoe-options](#)]

Release Information Statement introduced in Junos OS Release 8.5.

Description Configure the router to operate in the PPPoE server mode. Supported on M120 and M320 Multiservice Edge Routers and MX Series 5G Universal Routing Platforms operating as access concentrators.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring the PPPoE Server Mode*

server-timeout

Syntax	<code>server-timeout <i>seconds</i>;</code>
Hierarchy Level	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Sets the number of seconds the port waits for a reply when relaying a response from the client to the authentication server before timing out and invoking the server-fail action.
Options	<p><i>seconds</i>—The number of seconds the port waits for a response when relaying a request from the authentication server to the client before resending the request.</p> <p>Range: 1 through 60 seconds</p> <p>Default: 30 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>IEEE 802.1x Port-Based Network Access Control Overview</i> • authenticator on page 460 • dot1x on page 561 • interface (IEEE 802.1x) on page 706

service (Logical Interfaces)

Syntax	<pre>service { input { service-set service-set-name <service-filter filter-name>; post-service-filter filter-name; } output { service-set service-set-name <service-filter filter-name>; } }</pre>
Hierarchy Level	[edit interfaces interface-name unit logical-unit-number family inet], [edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define one or more service sets and filters, and one postservice filter to be applied to an interface.
Options	The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

service (PPPoE)

Syntax

```

service service-name {
  drop;
  delay seconds;
  terminate;
  dynamic-profile profile-name;
  routing-instance routing-instance-name;
  max-sessions number;
  agent-specifier {
    aci circuit-id-string ari remote-id-string {
      drop;
      delay seconds;
      terminate;
      dynamic-profile profile-name;
      routing-instance routing-instance-name;
      static-interface interface-name;
    }
  }
}

```

Hierarchy Level [edit protocols pppoe *service-name-tables table-name*]

Release Information Statement introduced in Junos OS Release 10.0.
any, **dynamic-profile**, **routing-instance**, **max-sessions**, and **static-interface** options introduced in Junos OS Release 10.2.

Description Specify the action taken by the interface on receipt of a PPPoE Active Discovery Initiation (PADI) control packet for the specified named service, **empty** service, or **any** service in a PPPoE service name table. You can also specify the dynamic profile and routing instance that the router uses to instantiate a dynamic PPPoE interface, and the maximum number of active PPPoE sessions that the router can establish with the specified service.

Default The default action is terminate.

Options *service-name*—Service entry in the PPPoE service name table:

- **service-name**—Named service entry of up to 32 characters; for example, **premiumService**. You can configure a maximum of 512 named service entries across all PPPoE service name tables on the router.
- **empty**—Service entry of zero length that represents an unspecified service. Each PPPoE service name table includes one **empty** service entry by default.
- **any**—Default service for non-empty service entries that do not match the named or **empty** service entries configured in the PPPoE service name table. Each PPPoE service name table includes one **any** service entry by default.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring PPPoE Service Name Tables</i>• <i>Assigning a Service to a Service Name Table and Configuring the Action Taken When the Client Request Includes a Non-zero Service Name Tag</i>• <i>Configuring the Action Taken When the Client Request Includes an Empty Service Name Tag</i>• <i>Configuring the Action Taken for the Any Service</i>


service-domain

Syntax	service-domain (inside outside);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For adaptive services interfaces, specify a service interface domain. If you specify this interface using the next-hop-service statement at the [edit services service-set service-set-name] hierarchy level, the interface domain must match that used with the inside-service-interface and outside-service-interface statements.
Options	inside —Interface used within the network. outside —Interface used outside the network.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

service-filter (Interfaces)

Syntax	<code>service-filter <i>filter-name</i>;</code>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i> service (input output) service-set <i>service-set-name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i> service (input output) service-set <i>service-set-name</i>]</pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Define the filter to be applied to traffic before it is accepted for service processing. Configuration of a service filter is optional; if you include the service-set statement without a service-filter definition, Junos OS assumes the match condition is true and selects the service set for processing automatically.</p>
Options	<i>filter-name</i> —Identifies the filter to be applied in service processing. You can include special characters, such as a forward slash (/), colon (:), or a period (.).
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Applying Filters and Services to Interfaces</i> <i>Junos OS Services Interfaces Library for Routing Devices</i>

service-name-table

Syntax	<code>service-name-table <i>table-name</i>;</code>
Hierarchy Level	<pre>[edit dynamic-profiles <i>profile-name</i> interfaces demux0 unit <i>logical-unit-number</i> family pppoe], [edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-underlying-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> pppoe-underlying-options]</pre>
Release Information	<p>Statement introduced in Junos OS Release 10.0.</p> <p>Support at the [edit ... family pppoe] hierarchies introduced in Junos OS Release 11.2.</p>
Description	<p>Specify the PPPoE service name table assigned to a PPPoE underlying interface. This underlying interface is configured with either the encapsulation ppp-over-ether statement or the family pppoe statement; the two statements are mutually exclusive.</p>
<div>  <p>NOTE: The [edit ... family pppoe] hierarchies are supported only on MX Series routers with MPCs.</p> </div>	
Options	<i>table-name</i> —Name of the PPPoE service name table, a string of up to 32 alphanumeric characters.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring PPPoE Service Name Tables</i> • <i>Assigning a Service Name Table to a PPPoE Underlying Interface</i> • <i>Configuring the PPPoE Family for an Underlying Interface</i>

service-name-tables

Syntax	<pre> service-name-tables <i>table-name</i> { service <i>service-name</i> { drop; delay <i>seconds</i>; terminate; dynamic-profile <i>profile-name</i>; routing-instance <i>routing-instance-name</i>; max-sessions <i>number</i>; agent-specifier { aci <i>circuit-id-string</i> ari <i>remote-id-string</i> { drop; delay <i>seconds</i>; terminate; dynamic-profile <i>profile-name</i>; routing-instance <i>routing-instance-name</i>; static-interface <i>interface-name</i>; } } } } </pre>
Hierarchy Level	[edit protocols pppoe]
Release Information	<p>Statement introduced in Junos OS Release 10.0.</p> <p>dynamic-profile, routing-instance, max-sessions, and static-interface options introduced in Junos OS Release 10.2.</p>
Description	<p>Create and configure a PPPoE service name table. Specify the action taken for each service and remote access concentrator on receipt of a PPPoE Active Discovery Initiation (PADI) packet. You can also specify the dynamic profile and routing instance that the router uses to instantiate a dynamic PPPoE interface, and the maximum number of active PPPoE sessions that the router can establish with the specified service. A maximum of 32 PPPoE service name tables is supported per router.</p>
Options	<p>table-name—Name of the PPPoE service name table, a string of up to 32 alphanumeric characters.</p> <p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring PPPoE Service Name Tables</i> • <i>Creating a Service Name Table</i>

service-set

Syntax	<code>service-set service-set-name;</code>
Hierarchy Level	<code>[edit interfaces interface-name unit logical-unit-number family inet service (input output) service-set service-set-name],</code> <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet service (input output) service-set service-set-name]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define one or more service sets to be applied to an interface. If you define multiple service sets, the Junos OS evaluates the filters in the order in which they appear in the configuration.
Options	<i>service-set-name</i> —Identifies the service set.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

services (Priority Level)

Syntax	<code>services <i>priority-level</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> services-options sysloghost <i>hostname</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify system logging priority level.
Options	<p><i>priority-level</i>—Assigns a priority level to the facility. Valid entries are as follows:</p> <ul style="list-style-type: none"> • alert—Conditions that should be corrected immediately. • any—Matches any level. • emergency—Panic conditions. • critical—Critical conditions. • error—Error conditions. • info—Informational messages. • notice—Conditions that require special handling. • warning—Warning messages.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Services Interfaces Library for Routing Devices</i>

services-options

Syntax

```
services-options {  
  inactivity-timeout seconds;  
  open-timeout seconds;  
  session-limit {  
    maximum number;  
    rate new-sessions-per-second;  
  }  
  syslog {  
    host hostname {  
      facility-override facility-name;  
      log-prefix prefix-number;  
      services priority-level;  
    }  
  }  
}
```

Hierarchy Level [edit [interfaces interface-name](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description Define the service options to be applied on an interface.

Options The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Junos OS Services Interfaces Library for Routing Devices*

shaping

Syntax	<pre>shaping { (cbr rate rtvbr peak rate sustained rate burst length vbr peak rate sustained rate burst length); queue-length number; }</pre>
Hierarchy Level	<pre>[edit interfaces interface-name atm-options vpi vpi-identifier], [edit interfaces interface-name unit logical-unit-number], [edit interfaces interface-name unit logical-unit-number address address family family multipoint-destination address], [edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number], [edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number address address family family multipoint-destination address]</pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM encapsulation only, define the traffic-shaping profile.</p> <p>For Circuit Emulation PICs, specify traffic shaping in the ingress and egress directions.</p> <p>For ATM2 IQ interfaces, changing or deleting VP tunnel traffic shaping causes all logical interfaces on a VP to be deleted and then re-added.</p> <p>VP tunnels are not supported on multipoint interfaces.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Defining Virtual Path Tunnels</i> • <i>Defining the ATM Traffic-Shaping Profile Overview</i> • <i>Configuring ATM QoS or Shaping</i> • <i>Applying Scheduler Maps to Logical ATM Interfaces</i>

shdsl-options

Syntax

```
shdsl-options {  
  annex (annex-a | annex-b);  
  line-rate line-rate;  
  loopback (local | remote | payload);  
  snr-margin {  
    snext margin;  
  }  
}
```

Hierarchy Level

```
[edit interfaces interface-name],  
[edit logical-systems logical-system-name interfaces interface-name]
```

Release Information Statement introduced in Junos OS Release 7.4.

Description For J Series Services Routers only, configure symmetric DSL (SHDSL) options.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

short-name-format

Syntax	<code>short-name-format (character-string vlan 2octet rfc-2685-vpn-id);</code>
Hierarchy Level	<code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain domain-name maintenance-association ma-name]</code>
Release Information	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.

Description Specify the name format of the maintenance association name.

Options

- character-string**—The name is an ASCII character string.
- vlan**—The primary VLAN identifier.
- 2octet**—A number in the range 0 through 65,535.
- rfc-2685-vpn-id**—A VPN identifier that complies with RFC 2685.

Default: `character-string`



NOTE: The PTX Series Packet Transport Routers support the `vlan` and `2octet` options only.

Required Privilege Level

- `interface`—To view this statement in the configuration.
- `interface-control`—To add this statement to the configuration.

Related Documentation

- *Creating a Maintenance Association*

short-sequence

Syntax	<code>short-sequence;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For multilink interfaces only, set the length of the packet sequence identification number to 12 bits.
Default	If you omit this statement from the configuration, the length is set to 24 bits.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

sla-iterator-profile

Syntax	<pre>sla-iterator-profile <i>profile-name</i> { data-tlv-size <i>size</i>; iteration-count <i>count-value</i>; priority <i>priority-value</i>; }</pre>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain md-name maintenance-association ma-name mep mep-id remote-mep remote-mep-id]
Release Information	Statement introduced in Junos OS Release 11.1.
Description	Configure a remote MEP with an iterator profile and specify the options.
Options	<p>profile-name—Name of the iterator profile configured for a remote MEP. For more information about configuring a remote MEP with an iterator profile, see <i>Configuring a Remote MEP with an Iterator Profile</i>.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>Configure—To enter configuration mode.</p> <p>Control—To modify any configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring an Iterator Profile</i> • <i>Configuring a Remote MEP with an Iterator Profile</i> • <i>Verifying the Configuration of an Iterator Profile</i> • <i>Managing Iterator Statistics</i> • sla-iterator-profiles on page 1018

sla-iterator-profiles

Syntax

```
sla-iterator-profiles {
  profile-name {
    avg-fd-twoway-threshold;
    avg-ifdv-twoway-threshold;
    avg-flr-forward-threshold;
    avg-flr-backward-threshold;
    calculation-weight {
      delay delay-weight;
      delay-variation delay-variation-weight;
    }
    cycle-time milliseconds;
    flap-trap-monitor seconds
    iteration-period iteration-period-value;
    measurement-type (loss | statistical-frame-loss | two-way-delay);
  }
}
```

Hierarchy Level [edit protocols [oam](#) [ethernet](#) [connectivity-fault-management](#) [performance-monitoring](#)]

Release Information Statement introduced in Junos OS Release 11.1.

Description Configure an iterator application and specify the iterator profile options.

Options *profile-name*—Name of the iterator profile. For more information about configuring the iterator profile, see *Configuring an Iterator Profile*.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level Configure—To enter configuration mode.
Control—To modify any configuration.

Related Documentation

- *Configuring an Iterator Profile*
- *Configuring a Remote MEP with an Iterator Profile*
- *Verifying the Configuration of an Iterator Profile*
- *Managing Iterator Statistics*

snr-margin

Syntax	<pre>snr-margin { snext margin; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> shdsl-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> shdsl-options]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	<p>For J Series Services Routers only, configure the SHDSL signal-to-noise ratio (SNR) margin. The SNR margin is the difference between the desired SNR and the actual SNR. Configuring the SNR creates a more stable SHDSL connection by making the line train at a SNR margin higher than the threshold. If any external noise below the threshold is applied to the line, the line remains stable.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

snext

Syntax	<code>snext margin;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> shdsl-options snr-margin], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> shdsl-options snr-margin]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For J Series Services Routers only, configure self-near-end crosstalk (SNEXT) signal-to-noise ratio (SNR) margin for a SHDSL line. When configured, the line trains at higher than SNEXT threshold. The SNR margin is the difference between the desired SNR and the actual SNR.
Options	margin —Desired SNEXT margin. Possible values are disabled or a margin between –10dB and 10 dB. Default: disabled
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

sonet-options

Syntax

```
sonet-options {
  aps {
    advertise-interval milliseconds;
    annex-b
    authentication-key key;
    (break-before-make | no-break-before-make);
    fast-aps-switch;
    force;
    hold-time milliseconds;
    lockout;
    neighbor address;
    paired-group group-name;
    protect-circuit group-name;
    request;
    revert-time seconds;
    switching-mode (bidirectional | unidirectional);
    working-circuit group-name;
  }
  bytes {
    c2 value;
    e1-quiet value;
    f1 value;
    f2 value;
    s1 value;
    z3 value;
    z4 value;
  }
  fcs (16 | 32);
  loopback (local | remote);
  mpls {
    pop-all-labels {
      required-depth number;
    }
  }
  path-trace trace-string;
  (payload-scrambler | no-payload-scrambler);
  rfc-2615;
  trigger {
    defect ignore;
    defect hold-time up milliseconds down milliseconds;
  }
}
vtmapping (itu-t | klm);
(z0-increment | no-z0-increment);
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure SONET/SDH-specific interface properties.

On SONET/SDH OC48 interfaces that you configure for channelized (multiplexed) mode (by including the **no-concatenate** statement at the **[edit chassis fpc slot-number pic pic-number]** hierarchy level), the **bytes e1-quiet** and **bytes f1** options have no effect. The **bytes f2**, **bytes z3**, **bytes z4**, and **path-trace** options work correctly on channel 0 and work in the transmit direction only on channels 1, 2, and 3.

On a channelized OC12 interface, the **bytes e1-quiet**, **bytes f1**, **bytes f2**, **bytes z3**, and **bytes z4** options are not supported. The **fcs** and **payload-scrambler** statements are also not supported; you must configure these for each DS3 channel using the **t3-options fcs** and **t3-options payload-scrambler** statements. The **aps** and **loopback** statements are supported only on channel 0 and are ignored if included in the configurations for channels 1 through 11. You can configure loopbacks for each DS3 channel with the **t3-options loopback** statement. The **path-trace** statement can be included in the configuration for each DS3 channel, thereby configuring a unique path trace for each channel.

To configure loopback on channelized IQ and IQE PICs, SONET/SDH level, use the **loopback** statement **local** and **remote** options at the controller interface (**coc48**, **cstm16**, **coc12**, **cstm4**, **coc3**, and **cstm1**). It is ignored for path-level interfaces **so-fpc/pic/port** or **so-fpc/pic/port:channel**.

If you are running Intermediate System-to-Intermediate System (IS-IS) over SONET/SDH interfaces, use PPP if you are running Cisco IOS Release 12.0 or later. If you need to run HDLC, configure an ISO family MTU of 4469 on the router.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring SONET/SDH Parameters on ATM Interfaces*
- *Channelized OC12/STM4 IQ and IQE Interfaces Overview*
- *Channelized STM1 Interfaces Overview*
- *SONET/SDH Interfaces Overview*
- *no-concatenate*

source

Syntax	<code>source <i>source-address</i>;</code>
Hierarchy Level (EX, NFX, OCX1100 and QFX Series)	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel]</code>
Hierarchy Level (M-series and T-series)	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel <i>address</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel <i>address</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 13.2 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify the source address of the tunnel.
Default	If you do not specify a source address, the tunnel uses the unit's primary address as the source address of the tunnel.
Options	<i>source-address</i> —Address of the local side of the tunnel. This is the address that is placed in the outer IP header's source field.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Tunnel Services Overview</i> • multicast-only on page 822 • primary (Address on Interface) on page 942 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

source-address-filter

Syntax	<pre>source-address-filter { mac-address; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.
Description	For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, Gigabit Ethernet IQ interfaces, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), specify the MAC addresses from which the interface can receive packets. For this statement to have any effect, you must include the source-filtering statement in the configuration to enable source address filtering.
Options	<p>mac-address—MAC address filter. You can specify the MAC address as <i>nn:nn:nn:nn:nn:nn</i> or <i>nnnn.nnnn.nnnn</i>, where <i>n</i> is a decimal digit. To specify more than one address, include multiple mac-address options in the source-address-filter statement.</p> <p>If you enable the VRRP on a Fast Ethernet or Gigabit Ethernet interface, as described in <i>VRRP and VRRP for IPv6 Overview</i>, and if you enable MAC source address filtering on the interface, you must include the virtual MAC address in the list of source MAC addresses that you specify in the source-address-filter statement. MAC addresses ranging from 00:00:5e:00:01:00 through 00:00:5e:00:01:ff are reserved for VRRP, as defined in RFC 3768, <i>Virtual Router Redundancy Protocol</i>. When you configure the VRRP group, the group number must be the decimal equivalent of the last hexadecimal byte of the virtual MAC address.</p> <p>On untagged Gigabit Ethernet interfaces, you should not configure the source-address-filter statement and the accept-source-mac statement simultaneously. On tagged Gigabit Ethernet interfaces, you should not configure the source-address-filter statement and the accept-source-mac statement with an identical MAC address specified in both filters.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring MAC Address Filtering for Ethernet Interfaces • Configuring MAC Address Filtering on PTX Series Packet Transport Routers • source-filtering on page 860

source-class-usage

Syntax	<pre>source-class-usage { direction; }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <i>family</i> inet <i>accounting</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <i>unit</i> <i>logical-unit-number</i> <i>family</i> inet <i>accounting</i>], [edit routing-instances <i>routing-instance-name</i> vrf-table-label]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Support for the vrf-table-label statement added in Junos OS Release 9.3.</p>
Description	<p>Enable packet counters on an interface that count packets that arrive from specific prefixes on the provider core router and are destined for specific prefixes on the customer edge router.</p>
Options	<p>direction can be one of the following:</p> <p>input—Configure at least one expected ingress point.</p> <p>output—Configure at least one expected egress point.</p> <p>input output—On a single interface, configure at least one expected ingress point and one expect egress point.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Enabling Source Class and Destination Class Usage on page 265 • accounting on page 423 • destination-class-usage on page 548 • <i>Junos OS Services Interfaces Library for Routing Devices</i> • <i>vrf-table-label</i>

source-filtering

Syntax	(source-filtering no-source-filtering);
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.
Description	<p>For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and Gigabit Ethernet IQ interfaces only, enable the filtering of MAC source addresses, which blocks all incoming packets to that interface. To allow the interface to receive packets from specific MAC addresses, include the source-address-filter statement.</p> <p>If the remote Ethernet card is changed, the interface is no longer able to receive packets from the new card because it has a different MAC address.</p>
Default	Source address filtering is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring MAC Address Filtering for Ethernet Interfaces</i>• <i>Configuring MAC Address Filtering on PTX Series Packet Transport Routers</i>• accept-source-mac on page 419• source-address-filter on page 1024

speed (Ethernet)

List of Syntax	Syntax (EX Series) on page 1027 Syntax (EX2300 and EX4300) on page 1027 Syntax (EX Series, ACX Series, MX Series) on page 1027 Syntax (QFX Series, OCX1100, EX4600) on page 1027
Syntax (EX Series)	<code>speed (auto-negotiation <i>speed</i>) ;</code>
Syntax (EX2300 and EX4300)	<code>speed <i>speed</i>;</code>
Syntax (EX Series, ACX Series, MX Series)	<code>speed (10m 10g 100m 1g 2.5g 5g auto auto-10m-100m);</code>
Syntax (QFX Series, OCX1100, EX4600)	<code>speed (10g 1g 100m)</code>
Hierarchy Level (EX Series)	<code>[edit interfaces <i>interface-name</i> ether-options]</code>
Hierarchy Level (EX2300 and EX4300)	<code>[edit interfaces <i>interface-name</i>]</code>
Hierarchy Level (ACX Series, EX Series, MX Series)	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces ge-<i>pim</i>/0/0 switch-options switch-port <i>port-number</i>]</code>
Hierarchy Level (QFX Series, EX4600, OCX Series)	<code>[edit interfaces <i>interface-name</i>]</code>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Speed option 2.5Gbps introduced in Junos OS Release 18.1R2 for EX2300 switch.</p> <p>Speed option 10Gbps and 5Gbps introduced in Junos OS Release 18.2R1 for EX4300 switch.</p>
Description	<p>Configure the interface speed. This statement applies to the management Ethernet interface (fxp0 or em0), Fast Ethernet 12-port and 48-port PICs, the built-in Fast Ethernet port on the FIC (M7i router), Combo Line Rate DPCs and Tri-Rate Ethernet Copper interfaces on MX Series routers, and Gigabit Ethernet interfaces on EX Series switches.</p>

When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled. When you configure 100BASE-FX SFP, you must set the port speed at 100 Mbps.



NOTE: On MX Series routers with Tri-rate Enhanced DPC (DPCE-R-40GE-TX), when you configure the interface speed using the auto-10m-100m option, the speed is negotiated to the highest value possible (100 Mbps), if the same value is configured on both sides of the link. However, when you view the interface speed of the DPC, using the `show interfaces` command, the value of the speed is not accurately displayed. For instance, if you configure the speed of the Tri-rate enhanced DPC, as 100Mbps on both sides of the link, the interface speed of the DPC is negotiated to 100 Mbps. However, the interface speed of the DPC displays 1 bps. This is an issue with the `show interfaces` command only. The actual interface speed is 100 Mbps.

On 10-Gigabit Ethernet SFP interfaces, autonegotiation is enabled by default and auto-detects the speed to be either 1 Gbps or 10 Gbps. On QFX5100-48S, QFX5100-96S, and QFX5100-24Q devices using 10-Gigabit Ethernet SFP interfaces, the speed is set to 10 Gbps by default and cannot be configured to operate in a different speed. On QFX5100-48S and QFX5100-96S devices using 1-Gigabit Ethernet SFP interfaces, the speed is set to 1 Gbps by default and cannot be configured to operate in a different speed.



NOTE: In Junos OS Release 14.1X53-D35 on QFX5100-48T-6Q devices using 10-Gigabit Ethernet Copper interfaces, autonegotiation is disabled by default on the copper ports, and the interfaces operate at a speed of 100M. You can, however, enable auto-negotiation by issuing the `set interface name ether-options auto-negotiation` command on the interface for which you want to change the interface speed. With autonegotiation enabled, the interface auto-detects the speed in which to operate.



NOTE: Only 10 Gbps and 40 Gbps interfaces are supported on OCX Series switches.



NOTE: When displaying interface information with `show interfaces` commands, you might see speed values for 1 Gbps interfaces displayed as 1000mbps.

(For EX2300 only) Starting in Junos OS Release 18.1R2, the multi-rate speed is supported on EX2300-48MP and EX2300-24MP switches. The speed configuration statement is supported on both multi-rate gigabit ethernet interface (mge) and gigabit ethernet (ge) interface. The mge interface is a rate-selectable (multirate) Gigabit Ethernet interface that can support speeds of 10-Gbps, 5-Gbps, and 2.5-Gbps over CAT5e/CAT6/CAT6a cables. In the EX2300, the mge interface supports 100-Mbps, 1-Gbps, and 2.5-Gbps speeds, which can be configured by using the speed configuration statement. Note that 10Mbps speed is supported only on **ge** interfaces of EX2300 switch.

On EX2300-24MP and EX2300-48MP switches, if both Energy Efficient Ethernet (EEE) and 100-Mbps speed are configured on a rate-selectable (or multirate) Gigabit Ethernet (mge) port, the port operates only at 100-Mbps speed but EEE is not enabled on that port. EEE is supported only on mge interfaces that operate at 1-Gbps and 2.5-Gbps speeds.

Default (EX Series) If the [auto-negotiation](#) statement at the `[edit interfaces interface-name ether-options]` hierarchy level is enabled, the auto-negotiation option is enabled by default.

Options You can specify the speed as either **10m** (10 Mbps), **100m** (100 Mbps), and on MX Series routers, **1g** (1 Gbps). You can also specify the **auto** option on MX Series routers.

For Gigabit Ethernet interfaces on EX Series switches, you can specify one of the following options:

Table 53: Options for speed

Platforms	Speed Supported	Auto-negotiation
EX Series Switches	100m —100 Mbps 10m —10 Mbps 1g —1 Gbps	auto-negotiation—Automatically negotiate the speed based on the speed of the other end of the link. This option is available only when the auto-negotiation statement at the [edit interfaces interface-name ether-options] hierarchy level is enabled.
ACX, MX Series	100m —100 Mbps 10m —10 Mbps 1g —1 Gbps	auto —Automatically negotiate the speed (10 Mbps, 100 Mbps, or 1 Gbps) based on the speed of the other end of the link. auto-10m-100m —Automatically negotiate the speed (10 Mbps or 100 Mbps) based on the speed of the other end of the link.
EX4600, QFX Series, QFabric, OCX100, QFX Series	10g —10 Gbps 1g —1 Gbps 100m —100 Mbps	auto-negotiation—Automatically negotiate the speed based on the speed of the other end of the link. This option is available only when the auto-negotiation statement at the [edit interfaces interface-name ether-options] hierarchy level is enabled.
EX2300	10m —10 Mbps (supported on EX series switches and only on ge interfaces of EX2300 switch) 100m —100 Mbps 1g —1 Gbps 2.5g —2.5 Gbps (supported only on mge interfaces of EX2300 switch) 10g —10 Gbps (supported only on mge interfaces for EX4300 switches) 5g —5 Gbps (supported only on mge interfaces for EX4300 switches)	speed —Specify the interface speed. If the auto-negotiation statement at the [edit interfaces interface-name ether-options] hierarchy level is disabled, you must specify a specific value. This value sets the speed that is used on the link. If the auto-negotiation statement is enabled, you might want to configure a specific speed value to advertise the desired speed to the remote end. The Multi-rate gigabit ethernet interface (MGE) on EX2300-24MP and EX2300-48MP switches flaps (becomes unavailable, and then available again) while performing timeout detection and recovery (TDR) test.

Required Privilege interface—To view this statement in the configuration.

Level interface-control—To add this statement to the configuration.


Release History Table

Release	Description
18.2R1	Starting in Junos OS Release 18.1R2, the multi-rate speed is supported on EX2300-48MP and EX2300-24MP switches.

Related
Documentation

- [Configuring the Interface Speed on page 116](#)
- [Configuring the Interface Speed on Ethernet Interfaces on page 116](#)
- *Configuring Gigabit Ethernet Autonegotiation*
- *Configuring Gigabit Ethernet Interfaces for EX Series Switches with ELS support*
- *auto-negotiation*
- *Configuring Gigabit and 10-Gigabit Ethernet Interfaces for EX4600 and QFX Series Switches*
- *Junos OS Network Interfaces Library for Routing Devices*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (J-Web Procedure)*
- [Junos OS Ethernet Interfaces Configuration Guide](#)

speed (MX Series DPC)

Syntax	<code>speed (auto 1Gbps 100Mbps 10Mbps);</code>
Hierarchy Level	<code>[edit interfaces ge-<i>fpc/pic/port</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.5.
Description	<p>On MX Series routers with Combo Line Rate DPCs and Tri-Rate Copper SFPs you can set auto negotiation of speed. To specify the auto negotiation speed, use the speed (auto 1Gbps 100Mbps 10Mbps) statement under the [edit interface ge-<i>fpc/pic/port</i>] hierarchy level. The auto option will attempt to automatically match the rate of the connected interface. To set port speed negotiation to a specific rate, set the port speed to 1Gbps, 100Mbps, or 10Mbps.</p> <div> NOTE: If the negotiated speed and the interface speed do not match, the link will not be brought up. Half duplex mode is not supported.</div>
Options	You can specify the speed as either auto (autonegotiate), 10Mbps (10 Mbps), 100Mbps (100 Mbps), or 1Gbps (1 Gbps).
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><i>Configuring Gigabit Ethernet Autonegotiation</i>no-auto-mdix on page 842

speed (SONET/SDH)

Syntax	<code>speed (oc3 oc12 oc48);</code>
Hierarchy Level	<code>[edit interfaces so-<i>fpc/pic/port</i>],</code> <code>[edit interfaces so-<i>fpc/pic/port:channel</i>]</code>
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Configure the interface speed. This statement applies to SONET/SDH interfaces on next-generation SONET/SDH Type 1 and Type 2 PICs with SFP. Available speeds depend on whether the PIC is in concatenated mode or nonconcatenated mode. Include the channel in the interface name when configuring nonconcatenated interfaces.
Options	<p>oc3 oc12 oc48—Speed when the PIC is in concatenated mode. For example, you can configure each port of a 4-port OC12 PIC to have a speed of oc3.</p> <p>You can configure port 0 of a 4-port OC12 PIC to have a speed of oc12.</p> <p>oc3 oc12—Speed when the PIC is in nonconcatenated mode.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring SONET/SDH Interface Speed on page 121

spid1

Syntax	<code>spid1 <i>spid1-string</i>;</code>
Hierarchy Level	[edit interfaces br- <i>pim</i> /0/ <i>port</i> isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the Service Profile Identifier (SPID).
Options	<i>spid1-string</i> —Numeric SPID.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

spid2

Syntax	<code>spid2 <i>spid2-string</i>;</code>
Hierarchy Level	[edit interfaces br- <i>pim</i> /0/ <i>port</i> isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure an additional SPID.
Options	<i>spid2-string</i> —Numeric SPID.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	

stacked-vlan-ranges

Syntax

```
stacked-vlan-ranges {
  access-profile profile-name;
  authentication {
    packet-types [packet-types];
    password password-string;
    username-include {
      circuit-type;
      delimiter delimiter-character;
      domain-name domain-name-string;
      interface-name;
      mac-address;
      option-18
      option-37
      option-82;
      radius-realm radius-realm-string;
      user-prefix user-prefix-string;
      vlan-tags;
    }
  }
  dynamic-profile profile-name {
    accept (any | dhcp-v4 | inet);
    access-profile vlan-dynamic-profile-name;
    ranges (any | low-tag-high-tag),(any | low-tag-high-tag);
  }
  override;
}
```

Hierarchy Level [edit interfaces *interface-name* [auto-configure](#)]

Release Information Statement introduced in Junos OS Release 9.5.

Description Configure multiple VLANs. Each VLAN is assigned a VLAN ID number from the range.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.


Related Documentation

- *Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs*
- *Configuring Interfaces to Support Both Single and Stacked VLANs*

stacked-vlan-tagging

Syntax	stacked-vlan-tagging;
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	<p>For Gigabit Ethernet IQ interfaces, Gigabit Ethernet, 10-Gigabit Ethernet LAN/WAN PIC, and 100-Gigabit Ethernet Type 5 PIC with CFP, enable stacked VLAN tagging for all logical interfaces on the physical interface.</p> <p>For pseudowire subscriber interfaces, enable stacked VLAN tagging for logical interfaces on the pseudowire service.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i>

start-end-flag

Syntax	<code>start-end-flag (filler shared);</code>
Hierarchy Level	<pre>[edit interfaces e1-fpc/pic/port], [edit interfaces t1-fpc/pic/port], [edit interfaces interface-name ds0-options], [edit interfaces interface-name e1-options], [edit interfaces interface-name e3-options], [edit interfaces interface-name t1-options], [edit interfaces interface-name t3-options]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
Description	<p>For DS0, E1, E3, T1, and T3 interfaces, configure the interface to share the transmission of start and end flags.</p> <p>.....</p> <div>  <p>NOTE: When configuring E1 or T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the <code>start-end-flag</code> statement must be included at the <code>[edit interfaces e1-fpc/pic/port]</code> or <code>[edit interfaces t1-fpc/pic/port]</code> hierarchy level as appropriate.</p> <p>.....</p> </div>
Options	<p>filler—Wait two idle cycles between the start and end flags.</p> <p>shared—Share the transmission of the start and end flags. This is the default.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring E1 Start and End Flags</i> • <i>Configuring the E3 Start and End Flags</i> • <i>Configuring T1 Start and End Flags</i> • <i>Configuring T3 Start and End Flags</i>

static-interface

Syntax	<code>static-interface <i>interface-name</i>;</code>
Hierarchy Level	<code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> agent-specifier aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code>
Release Information	Statement introduced in Junos OS Release 10.2.
Description	<p>Reserve the specified static PPPoE interface for use only by the PPPoE client with matching agent circuit identifier (ACI) and agent remote identifier (ARI) information. You can specify only one static interface per ACI/ARI pair configured for a named service entry, empty service entry, or any service entry in the PPPoE service name table.</p> <p>The static interface associated with an ACI/ARI pair takes precedence over the general pool of static interfaces associated with the PPPoE underlying interface.</p> <p>If you include the static-interface statement in the configuration, you cannot also include either the dynamic-profile statement or the routing-instance statement. The dynamic-profile, routing-instance, and static-interface statements are mutually exclusive for ACI/ARI pair configurations.</p>
Options	interface-name —Name of the static PPPoE interface reserved for use by the PPPoE client with matching ACI/ARI information. Specify the interface in the format pp0.logical , where logical is a logical unit number from 0 through 16385 for static interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">Configuring PPPoE Service Name TablesReserving a Static PPPoE Interface for Exclusive Use by a PPPoE Client

static-tei-val

Syntax	<code>static-tei-val value;</code>
Hierarchy Level	[edit interfaces br-pim/0/port isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For J Series Services Routers only. Statically configure the Terminal Endpoint Identifier (TEI) value. The TEI value represents any ISDN-capable device attached to an ISDN network that is the terminal endpoint. TEIs are used to distinguish between several different devices using the same ISDN links.
Options	value —Value between 0 through 63.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

supplicant

Syntax	<code>supplicant <i>single</i>;</code>
Hierarchy Level	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.3.
Description	<p>Specify the supplicant mode. Only single mode is supported.</p> <p>This option will authenticate only the first client that connects to a port. All other clients that connect later (802.1x compliant or non-compliant) will be allowed free access on that port without any further authentication. If the first authenticated client logs out, all other users are locked out until a client authenticates again.</p>
Options	<code>single</code> —Sets single mode.
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>IEEE 802.1x Port-Based Network Access Control Overview</i>• authenticator on page 460• dot1x on page 561• interface (IEEE 802.1x) on page 706

supplicant-timeout

Syntax	<code>supplicant-timeout <i>seconds</i>;</code>
Hierarchy Level	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Specify the number of seconds the port waits for a response when relaying a request from the authentication server to the client before resending the request.
Options	<p><i>seconds</i>—Specify the number of seconds the port waits for the supplicant timeout.</p> <p>Range: 1 through 60 seconds</p> <p>Default: 30 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>IEEE 802.1x Port-Based Network Access Control Overview</i> • authenticator on page 460 • dot1x on page 561 • interface (IEEE 802.1x) on page 706

swap

Syntax	<code>swap;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> input-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> output-vlan-map]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches. Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.
Description	<p>Specify the VLAN rewrite operation to replace a VLAN tag. The outer VLAN tag of the frame is overwritten with the user-specified VLAN tag information.</p> <p>On MX Series routers, you can enter this statement on Gigabit Ethernet IQ and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, aggregated Ethernet using Gigabit Ethernet IQ interfaces, and 100-Gigabit Ethernet Type 5 PIC with CFP. On EX Series switches, you can enter this statement on Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Rewriting the VLAN Tag on Tagged Frames</i>• <i>Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support</i>

swap-push

Syntax	<code>swap-push;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> input-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> output-vlan-map]</code>
Release Information	<p>Statement introduced in Junos OS Release 8.1.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>
Description	<p>Specify the VLAN rewrite operation to replace the outer VLAN tag of the frame with a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</p> <p>You can use this statement on Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Rewriting a VLAN Tag and Adding a New Tag

swap-swap

Syntax	<code>swap-swap;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>input-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>output-vlan-map]</code>
Release Information	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	<p>Specify the VLAN rewrite operation to replace both the inner and the outer VLAN tags of the frame with a user-specified VLAN tag value.</p> <p>You can use this statement on Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and for 100-Gigabit Ethernet Type 5 PIC with CFP.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Rewriting the Inner and Outer VLAN Tags</i>

switch-options

Syntax	<pre>switch-options { switch-port <i>port-number</i> { (<i>auto-negotiation</i> no-auto-negotiation); <i>speed</i> (10m 100m 1g); <i>link-mode</i> (full-duplex half-duplex); } }</pre>
Hierarchy Level	[edit interfaces <i>ge-pim</i> /0/0]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	Configuration of the physical port characteristics is done under the single physical interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

switch-port

Syntax	<pre>switch-port <i>port-number</i> { (auto-negotiation no-auto-negotiation); speed (10m 100m 1g); link-mode (full-duplex half-duplex); }</pre>
Hierarchy Level	[edit interfaces <i>ge-pim/0/0</i> switch-options]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	Configuration of the physical port characteristics, done under the single physical interface.
Default	Autonegotiation is enabled by default. If the link speed and duplex are also configured, the interfaces use the values configured as the desired values in the negotiation.
Options	<p><i>port-number</i>—Ports are numbered 0 through 5 on the 6-port Gigabit Ethernet uPIM, 0 through 7 on the 8-port Gigabit Ethernet uPIM, and 0 through 15 on the 16-port Gigabit Ethernet uPIM.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

switch-type

Syntax	<code>switch-type (att5e etsi ni1 ntdms-100)</code>
Hierarchy Level	<code>[edit interfaces br-pim/0/port isdn-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For J Series Services Routers only. Configure the ISDN variant supported.
Options	<p>att5e—AT&T switch variant.</p> <p>etsi—European Telecommunications Standards Institute switch variant.</p> <p>ni1—National ISDN 1 switch variant.</p> <p>ntdms-100—Northern Telecom DMS-100.</p> <p>ntt—NTT Group switch for Japan.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Junos OS Interfaces and Routing Configuration Guide</i>

switching-mode

Syntax	<code>switching-mode (bidirectional unidirectional);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For unchannelized OC3, OC12, and OC48 SONET/SDH interfaces on T Series routers only, configure the interface to interoperate with SONET/SDH line-terminating equipment (LTE) that is provisioned for unidirectional linear APS in 1+1 architecture.
Default	If the switching-mode statement is not configured, the mode is bidirectional, and the interface does not interoperate with a unidirectional SONET/SDH LTE.
Options	bidirectional —Support bidirectional mode only. unidirectional —Interoperate with a SONET/SDH LTE provisioned for unidirectional mode.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Switching Mode</i>

symbol-period

Syntax	<code>symbol-period count;</code>
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile event , link-event-rate], [edit protocols oam link-fault-management interface <i>interface-name</i> event-thresholds]
Release Information	Statement introduced in Junos OS Release 8.4.
Description	<p>Configure the threshold for sending symbol period events or taking the action specified in the action profile.</p> <p>A symbol error is any symbol code error on the underlying physical layer. The symbol period threshold is reached when the number of symbol errors reaches the configured value within the period window. The default period window is the number of symbols that can be transmitted on the underlying physical layer in 1 second. The window is not configurable.</p>
Options	<p>count—Threshold count for symbol period events.</p> <p>Range: 0 through 100</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Threshold Values for Local Fault Events on an Interface</i> • <i>Configuring Threshold Values for Fault Events in an Action Profile</i>

syslog (Interfaces)

Syntax

```
syslog {  
  host hostname {  
    facility-override facility-name;  
    log-prefix prefix-number;  
    services priority-level;  
  }  
}
```

Hierarchy Level [edit [interfaces interface-name](#) [services-options](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description For adaptive services interfaces, configure generation of system log messages for the service set. System log information is passed to the kernel for logging in the **/var/log** directory. Any values configured in the service set definition override these values.

Options The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Junos OS Services Interfaces Library for Routing Devices*

syslog (Monitoring)

Syntax	(syslog no-syslog);
Hierarchy Level	[edit interfaces mo- <i>fpc/pic/port</i> multiservice-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>System logging is enabled by default. The system log information of the Monitoring Services PIC is passed to the kernel for logging in the <code>/var/log</code> directory.</p> <ul style="list-style-type: none">• syslog—Enable PIC system logging.• no-syslog—Disable PIC system logging.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Multiservice Physical Interface Properties on page 171• <i>Junos OS Services Interfaces Library for Routing Devices</i>

syslog (OAM Action)

Syntax	syslog;
Hierarchy Level	[edit protocols oam ethernet link-fault-management action-profile action]
Release Information	<p>Statement introduced in Junos OS Release 8.5 for T, M, MX and ACX Series routers, SRX Series firewalls and EX Series switches.</p> <p>Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.</p>
Description	<p>Generate a syslog message for the Ethernet Operation, Administration, and Management (OAM) event.</p> <p>Generate a system log message for the Ethernet Operation, Administration, and Maintenance (OAM) link fault management (LFM) event.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p> <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Specifying the Actions to Be Taken for Link-Fault Management Events</i>• <i>Configuring Ethernet OAM Link Fault Management</i>

system-priority

Syntax	<code>system-priority <i>priority</i>;</code>
Hierarchy Level	<code>[edit interfaces aeX aggregated-ether-options lacp]</code>
Release Information	<p>Statement introduced in Junos OS Release 9.3.</p> <p>Statement introduced in Junos OS Release 11.4 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.</p>
Description	<p>Define LACP system priority at the aggregated Ethernet interface level. This system priority value takes precedence over a system priority value configured at the global [edit chassis] hierarchy level.</p> <p>The device with the lower system priority value determines which links between LACP partner devices are active and which are in standby for each LACP group. The device on the controlling end of the link uses port priorities to determine which ports are bundled into the aggregated bundle and which ports are put in standby mode. Port priorities on the other device (the noncontrolling end of the link) are ignored. In priority comparisons, numerically lower values have higher priority. Therefore, the system with the numerically lower value (higher priority value) for LACP system priority becomes the controlling system. If both devices have the same LACP system priority (for example, they are both configured with the default setting of 127), the device MAC address determines which switch is in control.</p>
Options	<p><i>priority</i>—Priority for the aggregated Ethernet system. A smaller value indicates a higher priority.</p> <p>Range: 0 through 65535</p> <p>Default: 127</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

t1-options

Syntax

```
t1-options {
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
  buildout value;
  byte-encoding (nx56 | nx64);
  crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
  crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
  fcs (16 | 32);
  framing (esf | sf);
  idle-cycle-flag (flags | ones);
  invert-data;
  line-encoding (ami | b8zs);
  loopback (local | payload | remote);
  remote-loopback-respond;
  start-end-flag (filler | shared);
  timeslots time-slot-range;
}
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

Description Configure T1-specific physical interface properties.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *T1 Interfaces Overview*

t310

Syntax	t310-value <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>br-pim/0/port</i> isdn-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ISDN interfaces, configure the Q.931-specific timer for T310, in seconds. The Q.931 protocol is involved in the setup and termination of connections.
Options	seconds —Timer value, in seconds. Range: 1 through 65,536 seconds Default: 10 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

t391

Syntax	t391 <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, set Frame Relay link integrity polling interval.
Options	seconds —Link integrity polling interval. Range: 5 through 30 seconds Default: 10 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• n391 on page 828• n392 on page 829• n393 on page 830• t392 on page 1057• <i>Junos OS Services Interfaces Library for Routing Devices</i>

t392

Syntax	t392 <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, set Frame Relay polling verification interval.
Options	<p>seconds—Polling verification interval.</p> <p>Range: 5 through 30 seconds</p> <p>Default: 15 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • n391 on page 828 • n392 on page 829 • n393 on page 830 • t391 on page 1056 • timeslots on page 1067 • <i>Junos OS Services Interfaces Library for Routing Devices</i>

t3-options

Syntax

```
t3-options {
  atm-encapsulation (direct | plcp);
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
  (cbit-parity | no-cbit-parity);
  compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
  fcs (16 | 32);
  (feac-loop-respond | no-feac-loop-respond);
  idle-cycle-flag value;
  (long-buildout | no-long-buildout);
  (loop-timing | no-loop-timing);
  loopback (local | payload | remote);
  start-end-flag value;
}
```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure T3-specific physical interface properties, including the properties of DS3 channels on a channelized OC12 interface. The **long-buildout** statement is not supported for DS3 channels on a channelized OC12 interface.

On T3 interfaces, the default encapsulation is PPP.

For ATM1 interfaces, you can configure a subset of E3 options statements.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *T3 Interfaces Overview*

tag-protocol-id (TPIDs Expected to Be Sent or Received)

Syntax	<code>tag-protocol-id [<i>tpids</i>];</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile], [edit interfaces <i>interface-name</i> aggregated-ether-options ethernet-switch-profile], [edit interfaces <i>interface-name</i> aggregated-ether-options ethernet-switch-profile], [edit interfaces <i>interface-name</i> ether-options ethernet-switch-profile]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Statement introduced in Junos OS Release 13.2X50-D15 for EX Series switches. Statement introduced in Junos OS Release 14.1X53-D15 for the QFX Series.
Description	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces, aggregated Ethernet with Gigabit Ethernet IQ interfaces, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC, and the built-in Gigabit Ethernet port on the M7i router), define the TPIDs expected to be sent or received on a particular VLAN. For each Gigabit Ethernet port, you can configure up to eight TPIDs using the tag-protocol-id statement; but only the first four TPIDs are supported on IQ2 and IQ2-E interfaces.</p> <p>For 10-Gigabit Ethernet LAN/WAN PIC interfaces on T Series routers only the default TPID value (0x8100) is supported.</p> <p>For Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces on EX Series switches, define the TPIDs expected to be sent or received on a particular VLAN. The default TPID value is 0x8100. Other supported values are 0x88a8, 0x9100, and 0x9200.</p>
Options	<i>tpids</i> —TPIDs to be accepted on the VLAN. Specify TPIDs in hexadecimal.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Frames with Particular TPIDs to Be Processed as Tagged Frames</i> <i>Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support</i>

tag-protocol-id (TPID to Rewrite)

Syntax	<code>tag-protocol-id <i>tpid</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-vlan-map],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> input-vlan-map],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code> output-vlan-map]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces only, configure the outer TPID value. All TPIDs you include in input and output VLAN maps must be among those you specify at the <code>[edit interfaces <i>interface-name</i> gigether-options ethernet-switch-profile tag-protocol-id [<i>tpids</i>]]</code> hierarchy level.</p> <p>For 10-Gigabit Ethernet LAN/WAN PIC interfaces on T Series routers the default TPID value (0x8100) is supported.</p>
Default	If the <code>tag-protocol-id</code> statement is not configured, the TPID value is 0x8100.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><i>Configuring Inner and Outer TPIDs and VLAN IDs</i>

targeted-broadcast

Syntax (EX Series, MX Series, ACX Series)	<pre>targeted-broadcast { forward-and-send-to-re; forward-only; }</pre>
Syntax (QFX Series, OCX1100, EX4600, NFX Series)	<pre>targeted-broadcast;</pre>
Hierarchy Level (EX Series, MX Series, ACX Series)	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>]</pre>
Hierarchy Level (QFX Series, OCX1100, EX4600, NFX Series)	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>], [edit interfaces <i>interface-range</i> <i>interface-range-name</i> unit <i>logical-unit-number</i> family <i>inet</i>]</pre>
Release Information	<p>Statement introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 10.2.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Specify the IP packets destined for a Layer 3 broadcast address to be forwarded to both an egress interface and the Routing Engine, or to an egress interface only. The packets are broadcast only if the egress interface is a LAN interface.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Default	<p>When this statement is not included, broadcast packets are sent to the Routing Engine only.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Targeted Broadcast on page 275 • Understanding Targeted Broadcast on page 274

targeted-distribution (Static Interfaces over Aggregated Ethernet)

Syntax	targeted-distribution;
Hierarchy Level	[edit interfaces demux0 unit <i>logical-unit-number</i>], [edit interfaces pp0 unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 11.2. Statement introduced in Junos OS Release 13.2R2 for EX Series switches.
Description	Configure egress data for a logical interface to be sent across a single member link in an aggregated Ethernet bundle. A backup link is provisioned and CoS scheduling resources are switched to the backup link in the event that the primary assigned link goes down. The aggregated Ethernet interface must be configured without link protection.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>CoS for PPPoE Subscriber Interfaces Overview</i>• <i>Configuring the Distribution Type for PPPoE Subscribers on Aggregated Ethernet Interfaces</i>• <i>Verifying the Distribution of PPPoE Subscribers in an Aggregated Ethernet Interface</i>• <i>Targeted Traffic Distribution on Aggregated Ethernet Interfaces in a Virtual Chassis</i>• <i>Configuring Module Redundancy for a Virtual Chassis</i>• <i>Configuring Chassis Redundancy for a Virtual Chassis</i>

tei-option

Syntax	<code>tei-option (first-call power-up);</code>
Hierarchy Level	<code>[edit interfaces br-pim/O/portisdn-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ISDN interfaces, configure when the Terminal Endpoint Identifier (TEI) negotiates with the ISDN provider.
Options	<p>first-call—Activation does not occur until the call setup is sent.</p> <p>power-up—Activation occurs when the Services Router is powered on.</p> <p>Default: power-up</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

terminate (PPPoE Service Name Tables)

Syntax	terminate;
Hierarchy Level	[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i>], [edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> agent-specifier aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]
Release Information	Statement introduced in Junos OS Release 10.0. Support at [edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> agent-specifier aci <i>circuit-id-string</i> ari <i>remote-id-string</i>] hierarchy level introduced in Junos OS Release 10.2.
Description	Direct the router to immediately respond to a PPPoE Active Discovery Initiation (PADI) control packet received from a PPPoE client by sending the client a PPPoE Active Discovery Offer (PADO) packet. The PADO packet contains the name of the access concentrator (router) that can service the client request. The terminate action is the default action for a named service entry, empty service entry, any service entry, or agent circuit identifier/agent remote identifier (ACI/ARI) pair in a PPPoE service name table.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">Configuring PPPoE Service Name Tables

then

Syntax	<pre>then { discard; }</pre>
Hierarchy Level	[edit firewall hierarchical-policer aggregate], [edit firewall hierarchical-policer premium]
Release Information	Statement introduced in Junos OS Release 9.5.
Description	On M40e, M120, and M320 (with FFPC and SFPC) edge routers and T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs, discard packets when a specified bandwidth or burst limits for an aggregate level of a hierarchical policer is reached.
Options	discard —Discard packets if condition is met.
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Applying Policers on page 228• <i>Class of Service Feature Guide for Routers and EX9200 Switches</i>

threshold

Syntax	<code>threshold <i>bytes</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Specify the bucket threshold, which controls the burstiness of the leaky bucket mechanism. The larger the value, the more bursty the traffic, which means that over a very short amount of time, the interface can receive or transmit close to line rate, but the average over a longer time is at the configured bucket rate.</p>
Options	<p>bytes—Maximum size, in bytes, for traffic bursts. For ease of entry, you can enter <i>number</i> either as a complete decimal number or as a decimal number followed by the abbreviation k (1000). For example, the entry threshold 2k corresponds to a threshold of 2000 bytes.</p> <p>Range: 0 through 65,535 bytes</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 157

timeslots

Syntax `timeslots time-slot-range;`

Hierarchy Level [edit interfaces *e1-fpc/pic/port*],
[edit interfaces *t1-fpc/pic/port*],
[edit interfaces *interface-name* **e1-options**],
[edit interfaces *interface-name* **partition** *partition-number*],
[edit interfaces *interface-name* **t1-options**]

Release Information Statement introduced before Junos OS Release 7.4.

Description For E1 and T1 interfaces, allocate the specific time slots by number.



NOTE: When configuring E1 or T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the `timeslots` statement must be included at the [edit interfaces *e1-fpc/pic/port*] or [edit interfaces *t1-fpc/pic/port*] hierarchy level as appropriate.

Options *time-slot-range*—Actual time slot numbers allocated:

Range: Ranges vary by interface type and configuration option as follows:

- 1 through 24 for T1 interfaces (0 is reserved)
- 1 through 31 for 4-port E1 PICs (0 is reserved)
- 1 through 31 for NxDS0 interfaces (0 is reserved)
- 2 through 32 for 10-port Channelized E1 and 10-port Channelized E1 IQ PICs (1 is reserved)
- 2 through 32 for the setting under **e1-options** with IQE PICs (1 is reserved) (when creating fractional E1)
- 1 through 31 for the setting under **partition** with IQE PICs (0 is reserved) (when creating NxDS0)



NOTE: When creating fractional E1 interfaces only, if you connect a 4-port E1 PIC interface to a device that uses time slot numbering from 2 through 32, you must subtract 1 from the configured number of time slots.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Documentation**
- [Configuring Fractional E1 IQ and IQE Interfaces](#)
 - [Configuring Fractional T1 IQ and IQE Interfaces](#)
 - [Configuring Fractional E1 Time Slots](#)
 - [Configuring Fractional T1 Time Slots](#)
 - [Configuring a Channelized T1/E1 Interface to Drop and Insert Time Slots](#)

tm

Syntax	tm (ignore normal require);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For EIA-530 interfaces only, configure the from-DCE signal, test-mode (TM).
Options	<p>ignore—The from-DCE signal is ignored.</p> <p>normal—Normal TM signal handling as defined by the TIA/EIA Standard 530.</p> <p>require—The from-DCE signal must be asserted.</p> <p>Default: normal</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Signal Handling on page 352

tm-polarity

Syntax	tm-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure TM signal polarity.
Options	negative —Negative signal polarity. positive —Positive signal polarity. Default: positive
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Serial Signal Polarities on page 355

traceoptions (Individual Interfaces)

List of Syntax	Syntax (Individual interfaces with PTX Series, EX Series, ACX Series) on page 1070 Syntax (Individual interfaces with QFX Series, OCX1100, EX4600, NFX Series) on page 1070 Syntax (OAMLFM with EX Series, QFX Series, NFX Series) on page 1070 Syntax (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series) on page 1070
Syntax (Individual interfaces with PTX Series, EX Series, ACX Series)	<pre>traceoptions { file <i>filename</i> <files <i>name</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i>; match; }</pre>
Syntax (Individual interfaces with QFX Series, OCX1100, EX4600, NFX Series)	<pre>traceoptions { flag <i>flag</i>; }</pre>
Syntax (OAMLFM with EX Series, QFX Series, NFX Series)	<pre>traceoptions { file <i>filename</i> <files <i>number</i>> <match <i>regex</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i> ; no-remote-trace; }</pre>
Syntax (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series)	<pre>traceoptions { file <<i>filename</i>> <files <i>number</i>> <match <i>regular-expression</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i> <disable>; no-remote-trace; }</pre>
Hierarchy Level (Individual interfaces with PTX Series, EX Series, ACX Series, QFX Series, OCX1100, EX4600, NFX Series)	[edit interfaces <i>interface-name</i>]
Hierarchy Level (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series)	[edit interfaces]

Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in JUNOS Release 10.2 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Define tracing operations for individual interfaces.</p> <p>To specify more than one tracing operation, include multiple flag statements.</p> <p>The interfaces traceoptions statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system syslog file in the directory <i>/var/log/dcd</i>.</p> <p>On EX Series, QFX Series, and NFX Series platforms, configure tracing options the link fault management.</p> <p>On ACX Series, SRX Series, MX Series, M Series, and T Series platforms define tracing operations for the interface process (dcd).</p>
Default	If you do not include this statement, no interface-specific tracing operations are performed.

Options [Table 54 on page 1073](#) lists options for traceoption command for the following platforms:

Table 54: Options for traceoptions

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
file filename	—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> . By default, interface process tracing output is placed in the file.		—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> .	—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> . By default, interface process tracing output is placed in the file <code>dcd</code> .
files number	—(Optional) Maximum number of trace files. When a trace file named <code>trace-file</code> reaches its maximum size, it is renamed trace-file.0 , then trace-file.1 , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.		—(Optional) Maximum number of trace files. When a trace file named <code>trace-file</code> reaches its maximum size, it is renamed <code>trace-file.0</code> , then <code>trace-file.1</code> , and so on, until the maximum <code>xk</code> to specify KB, <code>xm</code> to specify MB, or <code>xg</code> to specify GB number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the <code>size</code> option.	—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0 , then trace-file.1 , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the <code>size</code> option. <i>Range: 2 through 1000</i> <i>Default: 3 files</i>
flag	—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. The following are the interface-specific tracing options. <ul style="list-style-type: none"> all—All interface tracing operations event—Interface events ipc—Interface interprocess 	—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. The following are the interface-specific tracing options. <ul style="list-style-type: none"> all—All interface tracing operations event—Interface events ipc—Interface interprocess 	—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. You can include the following flags: <ul style="list-style-type: none"> action-profile—Trace action profile invocation events. all—Trace all events. configuration—Trace configuration events. protocol—Trace 	—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. You can include the following flags: <ul style="list-style-type: none"> all change-events—Log changes that produce configuration events config-states—Log the configuration

Table 54: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
	communication (IPC) messages <ul style="list-style-type: none"> • media—Interface media changes • q921—Trace ISDN Q.921 frames • q931—Trace ISDN Q.931 frames 	communication (IPC) messages <ul style="list-style-type: none"> • media—Interface media changes • q921—Trace ISDN Q.921 frames • q931—Trace ISDN Q.931 frames 	protocol processing events. <ul style="list-style-type: none"> • routing socket—Trace routing socket events. 	state machine changes <ul style="list-style-type: none"> • kernel—Log configuration IPC messages to kernel • kernel-detail—Log details of configuration messages to kernel
match	—(Optional) Regular expression for lines to be traced.		—(Optional) Refine the output to log only those lines that match the given regular expression.	
size size	—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches this size, it is renamed trace-file.0 . When the trace-file again reaches its maximum size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0 . This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.		—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0 , then trace-file.1 , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the files option. <p><i>Syntax:</i> xk to specify KB, xm to specify MB, or xg to specify GB</p> <p><i>Range:</i> 10 KB through 1 GB</p> <p><i>Default:</i> 128 KB</p> <p><i>Default:</i> If you do not include this option, tracing output is appended to an existing trace file.</p>	

Table 54: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
				<p>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches this size, it is renamed trace-file.0. When the trace-file again reaches its maximum size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten. If you specify a maximum file size, you also must specify a maximum number of trace files with the files option.</p> <p><i>Syntax:</i> xk to specify kilobytes, xm to specify megabytes, or xg to specify gigabytes</p> <p><i>Range:</i> 10 KB through the maximum file size supported on your router</p> <p><i>Default:</i> 1 MB</p>
no-world-readable	—(Optional) Prevent any user from reading the log file.		—(Optional) Restrict file access to the user who created the file.	—(Optional) Disallow any user to read the log file.
world-readable	—(Optional) Allow any user to read the log file.		—(Optional) Enable unrestricted file access.	—(Optional) Allow any user to read the log file.
disable				

Table 54: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
				—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as all .
no-remote-trace			—(Optional) Disable the remote trace.	-
match <i>regex</i>				—(Optional) Refine the output to include only those lines that match the given regular expression.

Required Privilege Level

interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.
 routing—To view this statement in the configuration.
 routing-control—To add this statement to the configuration.

- Related Documentation**
- [Tracing Operations of an Individual Router Interface on page 363](#)
 - *Tracing Operations of an Individual Router or Switch Interface*
 - *Example: Configuring Ethernet OAM Link Fault Management*
 - *Configuring Ethernet OAM Link Fault Management*
 - [Tracing Operations of the Interface Process on page 364](#)

traceoptions (Individual Interfaces)

List of Syntax	Syntax (Individual interfaces with PTX Series, EX Series, ACX Series) on page 1077 Syntax (Individual interfaces with QFX Series, OCX1100, EX4600, NFX Series) on page 1077 Syntax (OAMLFM with EX Series, QFX Series, NFX Series) on page 1077 Syntax (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series) on page 1077
Syntax (Individual interfaces with PTX Series, EX Series, ACX Series)	<pre>traceoptions { file <i>filename</i> <files <i>name</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i>; match; }</pre>
Syntax (Individual interfaces with QFX Series, OCX1100, EX4600, NFX Series)	<pre>traceoptions { flag <i>flag</i>; }</pre>
Syntax (OAMLFM with EX Series, QFX Series, NFX Series)	<pre>traceoptions { file <i>filename</i> <files <i>number</i>> <match <i>regex</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i> ; no-remote-trace; }</pre>
Syntax (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series)	<pre>traceoptions { file <<i>filename</i>> <files <i>number</i>> <match <i>regular-expression</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i> <disable>; no-remote-trace; }</pre>
Hierarchy Level (Individual interfaces with PTX Series, EX Series, ACX Series, QFX Series, OCX1100, EX4600, NFX Series)	[edit interfaces <i>interface-name</i>]
Hierarchy Level (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series)	[edit interfaces]

Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in JUNOS Release 10.2 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Define tracing operations for individual interfaces.</p> <p>To specify more than one tracing operation, include multiple flag statements.</p> <p>The interfaces traceoptions statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system syslog file in the directory <i>/var/log/dcd</i>.</p> <p>On EX Series, QFX Series, and NFX Series platforms, configure tracing options the link fault management.</p> <p>On ACX Series, SRX Series, MX Series, M Series, and T Series platforms define tracing operations for the interface process (dcd).</p>
Default	<p>If you do not include this statement, no interface-specific tracing operations are performed.</p>

Options [Table 54 on page 1073](#) lists options for traceoption command for the following platforms:

Table 55: Options for traceoptions

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
file filename	—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> . By default, interface process tracing output is placed in the file.		—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> .	—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> . By default, interface process tracing output is placed in the file <code>dcd</code> .
files number	—(Optional) Maximum number of trace files. When a trace file named <code>trace-file</code> reaches its maximum size, it is renamed trace-file.0 , then trace-file.1 , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.		—(Optional) Maximum number of trace files. When a trace file named <code>trace-file</code> reaches its maximum size, it is renamed <code>trace-file.0</code> , then <code>trace-file.1</code> , and so on, until the maximum <code>xk</code> to specify KB, <code>xm</code> to specify MB, or <code>xg</code> to specify GB number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the <code>size</code> option.	—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0 , then trace-file.1 , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the <code>size</code> option. <i>Range: 2 through 1000</i> <i>Default: 3 files</i>
flag	—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. The following are the interface-specific tracing options. <ul style="list-style-type: none"> all—All interface tracing operations event—Interface events ipc—Interface interprocess 	—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. The following are the interface-specific tracing options. <ul style="list-style-type: none"> all—All interface tracing operations event—Interface events ipc—Interface interprocess 	—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. You can include the following flags: <ul style="list-style-type: none"> action-profile—Trace action profile invocation events. all—Trace all events. configuration—Trace configuration events. protocol—Trace 	—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. You can include the following flags: <ul style="list-style-type: none"> all change-events—Log changes that produce configuration events config-states—Log the configuration

Table 55: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
	communication (IPC) messages <ul style="list-style-type: none"> • media—Interface media changes • q921—Trace ISDN Q.921 frames • q931—Trace ISDN Q.931 frames 	communication (IPC) messages <ul style="list-style-type: none"> • media—Interface media changes • q921—Trace ISDN Q.921 frames • q931—Trace ISDN Q.931 frames 	protocol processing events. <ul style="list-style-type: none"> • routing socket—Trace routing socket events. 	state machine changes <ul style="list-style-type: none"> • kernel—Log configuration IPC messages to kernel • kernel-detail—Log details of configuration messages to kernel
match	—(Optional) Regular expression for lines to be traced.		—(Optional) Refine the output to log only those lines that match the given regular expression.	
size size	—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches this size, it is renamed trace-file.0 . When the trace-file again reaches its maximum size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0 . This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.		—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0 , then trace-file.1 , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the files option. <p><i>Syntax:</i> xk to specify KB, xm to specify MB, or xg to specify GB</p> <p><i>Range:</i> 10 KB through 1 GB</p> <p><i>Default:</i> 128 KB</p> <p><i>Default:</i> If you do not include this option, tracing output is appended to an existing trace file.</p>	

Table 55: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
				<p>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches this size, it is renamed trace-file.0. When the trace-file again reaches its maximum size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten. If you specify a maximum file size, you also must specify a maximum number of trace files with the files option.</p> <p><i>Syntax:</i> xk to specify kilobytes, xm to specify megabytes, or xg to specify gigabytes</p> <p><i>Range:</i> 10 KB through the maximum file size supported on your router</p> <p><i>Default:</i> 1 MB</p>
no-world-readable	—(Optional) Prevent any user from reading the log file.		—(Optional) Restrict file access to the user who created the file.	—(Optional) Disallow any user to read the log file.
world-readable	—(Optional) Allow any user to read the log file.		—(Optional) Enable unrestricted file access.	—(Optional) Allow any user to read the log file.
disable				

Table 55: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
				—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as all .
no-remote-trace			—(Optional) Disable the remote trace.	-
match <i>regex</i>				—(Optional) Refine the output to include only those lines that match the given regular expression.

Required Privilege Level

interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.
 routing—To view this statement in the configuration.
 routing-control—To add this statement to the configuration.

- Related Documentation**
- [Tracing Operations of an Individual Router Interface on page 363](#)
 - [Tracing Operations of an Individual Router or Switch Interface](#)
 - [Example: Configuring Ethernet OAM Link Fault Management](#)
 - [Configuring Ethernet OAM Link Fault Management](#)
 - [Tracing Operations of the Interface Process on page 364](#)

traceoptions (LACP)

Syntax	<pre>traceoptions { file <filename> <files number> <size size> <world-readable no-world-readable>; flag flag; no-remote-trace; }</pre>
Hierarchy Level	[edit protocols lacp]
Release Information	Statement introduced in Junos OS Release 7.6. Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.
Description	Define tracing operations for the LACP protocol.
Default	If you do not include this statement, no LACP protocol tracing operations are performed.
Options	<p>filename—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory /var/log. By default, interface process tracing output is placed in the file lacpd.</p> <p>files number—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you also must specify a maximum file size with the size option.</p> <p>Range: 2 through 1000</p> <p>Default: 3 files</p> <p>flag—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. You can include the following flags:</p> <ul style="list-style-type: none">• all—All LACP tracing operations• configuration—Configuration code• packet—Packets sent and received• process—LACP process events• protocol—LACP protocol state machine• routing-socket—Routing socket events• startup—Process startup events <p>no-world-readable—(Optional) Prevent any user from reading the log file.</p>

size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option:

Syntax: **xk** to specify kilobytes, **xm** to specify megabytes, or **xg** to specify gigabytes

Range: 10 KB through the maximum file size supported on your router

Default: 1 MB

world-readable—(Optional) Allow any user to read the log file.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Tracing LACP Operations</i>

traceoptions (PPP Process)

Syntax	<pre>traceoptions { file <i>filename</i> <files <i>number</i>> <match <i>regular-expression</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i>; level <i>severity-level</i>; no-remote-trace; }</pre>
Hierarchy Level	[edit protocols ppp]
Release Information	Statement introduced in Junos OS Release 7.5.
Description	<p>Define tracing operations for the PPP process.</p> <p>To specify more than one tracing operation, include multiple flag statements.</p> <p>You cannot specify a separate trace tile. Tracing information is placed in the system syslog file in the directory /var/log/pppd.</p>
Default	If you do not include this statement, no PPPD-specific tracing operations are performed.
Options	<p>filename—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory /var/log. By default, commit script process tracing output is placed in the file ppd. If you include the file statement, you must specify a filename. To retain the default, you can specify eventd as the filename.</p> <p>files number—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you also must specify a maximum file size with the size option and a filename.</p> <p>Range: 2 through 1000</p> <p>Default: 3 files</p> <p>disable—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as all.</p> <p>flag—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. The following are the PPPD-specific tracing options.</p> <ul style="list-style-type: none">• access—Access code

- **address-pool**—Address pool code
- **all**—All areas of code
- **auth**—Authentication code
- **chap**—Challenge Handshake Authentication Protocol (CHAP) code
- **config**—Configuration code
- **ifdb**—Interface database code
- **lcp**—LCP state machine code
- **memory**—Memory management code
- **message**—Message processing code
- **mlppp**—Trace MLPPP code
- **ncp**—NCP state machine code
- **pap**—Password Authentication Protocol (PAP) code
- **ppp**—PPP protocol processing code
- **radius**—RADIUS processing code
- **rtsock**—Routing socket code
- **session**—Session management code
- **signal**—Signal handling code
- **timer**—Timer code
- **ui**—User interface code

match *regex*—(Optional) Refine the output to include only those lines that match the given regular expression.

size *size*—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named ***trace-file*** reaches this size, it is renamed ***trace-file.0***. When the ***trace-file*** again reaches its maximum size, ***trace-file.0*** is renamed ***trace-file.1*** and ***trace-file*** is renamed ***trace-file.0***. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option and filename.

Syntax: ***xk*** to specify KB, ***xm*** to specify MB, or ***xg*** to specify GB

Range: 10 KB through 1 GB

Default: 128 KB

world-readable—(Optional) Enable unrestricted file access.

non-world-readable—(Optional) By default, log files can be accessed only by the user who configures the tracing operation. Specify **non-world-readable** to reset the default.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation • [Tracing Operations of the pppd Process on page 154](#)

traceoptions (PPPoE)

Syntax	<pre> traceoptions { file <filename> <files number> <match regular-expression> <size maximum-file-size> <world-readable no-world-readable>; filter { aci regular-expression; ari regular-expression; service-name regular-expression; underlying-interface interface-name; } flag flag; level (all error info notice verbose warning); no-remote-trace; } </pre>
Hierarchy Level	[edit protocols pppoe]
Release Information	Statement introduced in Junos OS Release 9.6. Option filter introduced in Junos OS Release 12.3
Description	Define tracing operations for PPPoE processes.
Options	<p>file filename—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log</code>.</p> <p>files number—(Optional) Maximum number of trace files to create before overwriting the oldest one. If you specify a maximum number of files, you also must specify a maximum file size with the size option.</p> <p>Range: 2 through 1000</p> <p>Default: 3 files</p> <p>disable—Disable this trace flag.</p> <p>filter—Additional filter to refine the output to display particular subscribers. Filtering based on the following subscriber identifiers simplifies troubleshooting in a scaled environment.</p> <p>BEST PRACTICE: Due to the complexity of agent circuit identifiers and agent remote identifiers, we recommend that you do not try an exact match when filtering on these options. For service names, searching on the exact name is appropriate, but you can also use a regular expression with that option.</p> <ul style="list-style-type: none"> aci regular-expression—Regular expression to match the agent circuit identifier provided by PPPoE client.

- **ari *regular-expression***—Regular expression to match the agent remote identifier provided by PPPoE client.
- **service *regular-expression***—Regular expression to match the name of PPPoE service.
- **underlying-interface *interface-name***—Name of a PPPoE underlying interface. You cannot use a regular expression for this filter option.

flag *flag*—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements. You can include the following flags:

- **all**—Trace all operations.
- **config**—Trace configuration events.
- **events**—Trace events.
- **gres**—Trace GRES events.
- **init**—Trace initialization events.
- **interface-db**—Trace interface database operations.
- **memory**—Trace memory processing events.
- **protocol**—Trace protocol events.
- **rtsock**—Trace routing socket events.
- **session-db**—Trace connection events and flow.
- **signal**—Trace signal operations.
- **state**—Trace state handling events.
- **timer**—Trace timer processing.
- **ui**—Trace user interface processing.

level—Level of tracing to perform. You can specify any of the following levels:

- **all**—Match all levels.
- **error**—Match error conditions.
- **info**—Match informational messages.
- **notice**—Match notice messages about conditions requiring special handling.
- **verbose**—Match verbose messages.
- **warning**—Match warning messages.

Default: error

match *regular-expression*—(Optional) Refine the output to include lines that contain the regular expression.

no-remote-trace—Disable remote tracing.

no-world-readable—(Optional) Disable unrestricted file access.

size *maximum-file-size*—(Optional) Maximum size of each trace file. By default, the number entered is treated as bytes. Alternatively, you can include a suffix to the number to indicate kilobytes (KB), megabytes (MB), or gigabytes (GB). If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option.

Syntax: **size***k* to specify KB, **size***m* to specify MB, or **size***g* to specify GB

Range: 10240 through 1073741824

Default: 128 KB

world-readable—(Optional) Enable unrestricted file access.

Required Privilege Level trace—To view this statement in the configuration.
trace-control—To add this statement to the configuration.

Related Documentation

- *Configuring PPPoE Service Name Tables*
- *Tracing PPPoE Operations*

translate-discard-eligible

Syntax (translate-discard-eligible | no-translate-discard-eligible);

Hierarchy Level [edit interfaces *interface-name* **unit** *logical-unit-number* **family** *ccc*],
[edit logical-systems *logical-system-name* interfaces *interface-name* **unit** *logical-unit-number* **family** *ccc*]

Release Information Statement introduced before Junos OS Release 7.4.

Description For interfaces with encapsulation type Frame Relay CCC, enable or disable translation of Frame Relay discard eligible (DE) control bits.

Default DE bit translation is disabled.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Frame Relay Control Bit Translation*

translate-fecn-and-becn

Syntax	(translate-fecn-and-becn no-translate-fecn-and-becn);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with encapsulation type Frame Relay CCC, enable or disable translation of Frame Relay forward explicit congestion notification (FECN) control bits and Frame Relay backward explicit congestion notification (BECN) control bits.
Default	FECN and BECN bit translation is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Frame Relay Control Bit Translation</i>

translate-plp-control-word-de

Syntax	translate-plp-control-word-de
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>ccc</i>]
Release Information	Statement introduced before Junos OS Release 11.1.
Description	For the interfaces with encapsulation type Frame Relay CCC, classify and rewrite the control word discard eligibility (DE) bit based on the packet loss priority (PLP).
Default	PLP bit translation is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Frame Relay Control Bit Translation</i>• <i>frame-relay-de</i>

transmit-bucket

Syntax	<pre>transmit-bucket { overflow discard; rate <i>percentage</i>; threshold <i>bytes</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Set parameters for the transmit leaky bucket, which specifies what percentage of the interface's total capacity can be used to transmit packets.</p> <p>For each DS3 channel in a channelized OC12 interface, you can configure a unique transmit bucket.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 157 • receive-bucket on page 967

transmit-clock

Syntax	transmit-clock invert;
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the transmit clock signal.
Options	invert —Shift the clock phase 180 degrees.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Serial Clocking Mode on page 350

transmit-period

Syntax	<code>transmit-period <i>seconds</i>;</code>
Hierarchy Level	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Set the number of seconds the port waits before retransmitting the initial EAPOL PDUs to the client.
Options	<p><i>seconds</i>—The number of seconds the port waits before retransmitting the initial EAPOL PDUs to the client.</p> <p>Range: 1 through 65,535 seconds</p> <p>Default: 30 seconds</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>IEEE 802.1x Port-Based Network Access Control Overview</i> • authenticator on page 460 • dot1x on page 561 • interface (IEEE 802.1x) on page 706


transmit-weight (ATM2 IQ CoS Forwarding Class)

Syntax	<code>transmit-weight (cells <i>number</i> percent <i>number</i>);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, assign a transmission weight to a forwarding class.
Default	95 percent for queue 0, 5 percent for queue 3.
Options	percent <i>percent</i> —Transmission weight of the forwarding class as a percentage of the total bandwidth. Range: 5 through 100 cells <i>number</i> —Transmission weight of the forwarding class as a number of cells. Range: 0 through 32,000
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>ATM2 IQ VC Tunnel CoS Components Overview</i>

transmit-weight (ATM2 IQ Virtual Circuit)

Syntax	<code>transmit-weight <i>number</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM2 IQ PICs only, configure the transmission weight.</p> <p>Each VC is serviced in weighted round robin (WRR) mode. When VCs have data to send, they send the number of cells equal to their weight before passing control to the next active VC. This allows proportional bandwidth sharing between multiple VCs within a rate-shaped VP tunnel. VP tunnels are not supported on multipoint interfaces.</p>
Options	<p><i>number</i>—Number of cells a VC sends before passing control to the next active VC within a VP tunnel.</p> <p>Range: 1 through 32,767</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring the ATM2 IQ Transmission Weight</i>

traps

Syntax	(traps no-traps);
Hierarchy Level (ACX Series, MX Series, T Series, M Series, SRX Series, EX Series)	[edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces interface-range <i>name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Hierarchy Level (QFX Series, EX4600)	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces interface-range <i>interface-range-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Support at the [edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i>] hierarchy level introduced in Junos OS Release 15.1R3 on MX Series routers for enhanced subscriber management.
Description	<p>Enable or disable the sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.</p> <p>(Enhanced subscriber management for MX Series routers) To enable SNMP notifications, you must first configure the interface-mib statement at the [edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i>] hierarchy level. If interface-mib is not configured, the traps statement has no effect.</p>
	<div>  <p>BEST PRACTICE: To achieve maximum performance when enhanced subscriber management is enabled, we recommend that you <i>not</i> enable SNMP notifications on all dynamic subscriber interfaces.</p> </div>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Enabling or Disabling SNMP Notifications on Physical Interfaces on page 172 • Enabling or Disabling SNMP Notifications on Logical Interfaces on page 203

trigger

Syntax	<pre>trigger { defect ignore; defect hold-time up <i>milliseconds</i> down <i>milliseconds</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM over SONET/SDH, SONET/SDH interfaces, and 10-Gigabit Ethernet interfaces in WAN PHY mode, configure SONET/SDH defect triggers to be ignored.
Default	If you do not include this statement, all SONET/SDH defect triggers are honored.
Options	<p>defect—Defect to ignore or hold. It can be one of the following:</p> <ul style="list-style-type: none"> • ais-l—Line alarm indication signal • ais-p—Path alarm indication signal • ber-sd—Bit error rate signal degrade • ber-sf—Bit error rate signal fault • locd (ATM only)—Loss of cell delineation • lof—Loss of frame • lol—PHY loss of light • lop-p—Path loss of pointer • los—Loss of signal • pll—PHY phase-locked loop out of lock • plm-p—Path payload (signal) label mismatch • rfl-l—Line remote failure indication • rfl-p—Path remote failure indication • uneq-p—Path unequipped <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

Related Documentation • *Configuring SONET/SDH Defect Triggers*

trigger-link-failure

Syntax `[trigger-link-failure interface-name];`

Hierarchy Level `[edit interfaces lsq-fpc/pic/port lsq-failure-options]`

Release Information Statement introduced in Junos OS Release 7.4.

Description List of SONET interfaces connected to the LSQ interface that can implement Automatic Protection Switching (APS) if the LSQ PIC fails.

Options *interface-name*—Name of SONET interface.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation • *Junos OS Services Interfaces Library for Routing Devices*

trunk-bandwidth

Syntax	<code>trunk-bandwidth <i>rate</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM2 IQ interfaces configured to use Layer 2 circuit trunk mode, configure a scheduler so that unused bandwidth from any inactive trunk is proportionally shared among the active trunks.</p> <p>During congestion, each trunk receives a proportional share of the leftover bandwidth, thus minimizing the latency on each trunk.</p>
Options	<p>rate—Peak rate, in bits per second (bps) or cells per second (cps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation c; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.</p> <p>Range: 1,000,000 through 542,526,792 bps</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Layer 2 Circuit Trunk Mode Scheduling Overview</i>

trunk-id

Syntax	<code>trunk-id <i>number</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM2 IQ interfaces with ATM CCC cell-relay encapsulation, configure the trunk identification number.</p> <p>When you associate a trunk ID number with a logical interface, you are in effect specifying the interfaces that are allowed to send ATM traffic over an LSP.</p>
Options	<p><i>number</i>—A valid trunk identifier.</p> <p>Range: For UNI mode, 0 through 7. For NNI mode, 0 through 31.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Layer 2 Circuit Transport Mode</i>


ttl

Syntax	<code>ttl <i>value</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>number</i> tunnel]
Release Information	Statement introduced before Junos OS Release 7.4
Description	Set the time-to-live value bit in the header of the outer IP packet.
Options	value —Time-to-live value. Range: 0 through 255 Default: 64
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>

tunnel

Syntax	<pre>tunnel { backup-destination address; destination address; key number; routing-instance { destination routing-instance-name; } source source-address; ttl number; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Configure a tunnel. You can use the tunnel for unicast and multicast traffic or just for multicast traffic. You can also use tunnels for encrypted traffic or VPNs.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• <i>Junos OS VPNs Library for Routing Devices</i>

underlying-interface

Syntax	<code>underlying-interface <i>interface-name</i>;</code>
Hierarchy Level	<pre>[edit interfaces pp0 unit <i>logical-unit-number</i> pppoe-options], [edit interfaces demux0 unit <i>logical-unit-number</i> demux-options], [edit logical-systems <i>logical-system-name</i> interfaces demux0 unit <i>logical-unit-number</i> demux-options], [edit logical-systems <i>logical-system-name</i> interfaces pp0 unit <i>logical-unit-number</i> pppoe-options], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces demux0 unit <i>logical-unit-number</i> demux-options], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces pp0 unit <i>logical-unit-number</i> pppoe-options]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Support for aggregated Ethernet added in Junos OS Release 9.4.</p>
Description	<p>Configure the interface on which PPP over Ethernet is running.</p> <p>For demux interfaces, configure the underlying interface on which the demultiplexing (demux) interface is running.</p>
Options	<p><i>interface-name</i>—Name of the interface on which PPP over Ethernet or demux is running. For example, at-0/0/1.0 (ATM VC), fe-1/0/1.0 (Fast Ethernet interface), ge-2/0/0.0 (Gigabit Ethernet interface), ae1.0 (for IP demux on an aggregated Ethernet interface), or ae1 (for VLAN demux on an aggregated Ethernet interface).</p>
<div>  <p>NOTE: Demux interfaces are currently supported on Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet interfaces, or aggregated Ethernet devices.</p> </div>	
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring an IP Demultiplexing Interface on page 322 • Configuring a VLAN Demultiplexing Interface on page 327 • Configuring the PPPoE Underlying Interface • Junos OS Interfaces and Routing Configuration Guide

unframed

Syntax	(unframed no-unframed);
Hierarchy Level	[edit interfaces <i>interface-name</i> e3-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For E3 IQ interfaces only, enable or disable unframed mode. In unframed mode, the E3 IQ interface do not detect yellow (ylw) or loss-of-frame (lof) alarms.
Default	Unframed mode is disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring E3 IQ and IQE Unframed Mode</i>

unidirectional

Syntax	unidirectional;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Create two new, unidirectional (transmit-only and receive-only) physical interfaces subordinate to the original parent interface. Unidirectional links are currently supported only on 10-Gigabit Ethernet interfaces on the following hardware: <ul style="list-style-type: none"> • 4-port 10-Gigabit Ethernet DPC on the MX960 router • 10-Gigabit Ethernet IQ2 PIC and 10-Gigabit Ethernet IQ2E PIC on the T Series router
Default	Disabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Understanding Unidirectional Traffic Flow on Physical Interfaces on page 158 • Enabling Unidirectional Traffic Flow on Physical Interfaces on page 159

unit (Dynamic Profiles Standard Interface)

```
Syntax  unit logical-unit-number {
    actual-transit-statistics;
    auto-configure {
        agent-circuit-identifier {
            dynamic-profile profile-name;
        }
        line-identity {
            include {
                accept-no-ids;
                circuit-id;
                remote-id;
            }
            dynamic-profile profile-name;
        }
    }
    dial-options {
        ipsec-interface-id name;
        l2tp-interface-id name;
        (shared | dedicated);
    }
    encapsulation (atm-ccc-cell-relay | atm-ccc-vc-mux | atm-cisco-nlpid | atm-tcc-vc-mux
        | atm-mlppp-llc | atm-nlpid | atm-ppp-llc | atm-ppp-vc-mux | atm-snap | atm-tcc-snap
        | atm-vc-mux | ether-over-atm-llc | ether-vpls-over-atm-llc | ether-vpls-over-fr |
        ether-vpls-over-ppp | ethernet | frame-relay-ccc | frame-relay-ppp | frame-relay-tcc |
        frame-relay-ether-type | frame-relay-ether-type-tcc | multilink-frame-relay-end-to-end
        | multilink-ppp | ppp-over-ether | ppp-over-ether-over-atm-llc | vlan-bridge | vlan-ccc |
        vlan-vci-ccc | vlan-tcc | vlan-vpls);
    family family {
        address address;
        demux-destination,
        filter {
            adf {
                counter;
                input-precedence precedence;
                not-mandatory;
                output-precedence precedence;
                rule rule-value;
            }
            input filter-name {
                precedence precedence;
                shared-name filter-shared-name;
            }
            output filter-name {
                precedence precedence;
                shared-name filter-shared-name;
            }
        }
        max-sessions number;
        max-sessions-vs-a-ignore;
        rpf-check {
            fail-filter filter-name;
        }
    }
}
```



```

    mode loose;
}
service {
  input {
    service-set service-set-name {
      service-filter filter-name;
    }
    post-service-filter filter-name;
  }
  input-vlan-map {
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    (push | swap);
    tag-protocol-id tpid;
    vlan-id number;
  }
  output {
    service-set service-set-name {
      service-filter filter-name;
    }
  }
  output-vlan-map {
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    (pop | swap);
    tag-protocol-id tpid;
    vlan-id number;
  }
}
service-name-table table-name
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
maximum-seconds>;
unnumbered-address interface-name <preferred-source-address address>;
}
filter {
  input filter-name {
    shared-name filter-shared-name;
  }
  output filter-name {
    shared-name filter-shared-name;
  }
}
host-prefix-only;
keepalives {
  interval seconds;
}
ppp-options {
  aaa-options aaa-options-name;
  authentication [ authentication-protocols ];
  chap {
    challenge-length minimum minimum-length maximum maximum-length;
    local-name name;
  }
  ignore-magic-number-mismatch;
  initiate-ncp (dual-stack-passive | ipv6 | ip)

```

```
ipcp-suggest-dns-option;
mru size;
mtu (size | use-lower-layer);
on-demand-ip-address;
pap;
peer-ip-address-optional;
local-authentication {
    password password;
    username-include {
        circuit-id;
        delimiter character;
        domain-name name;
        mac-address;
        remote-id;
    }
}
}
service {
    pcef pcef-profile-name {
        activate rule-name | activate-all;
    }
}
targeted-options {
    backup backup;
    group group;
    primary primary;
    weight ($junos-interface-target-weight | weight-value);
}
vlan-id number;
vlan-tags outer [tpid].vlan-id [inner [tpid].vlan-id];
}
```

Hierarchy Level [edit [dynamic-profiles](#) *profile-name* [interfaces](#) *interface-name*]

Release Information Statement introduced in Junos OS Release 9.2.

Description Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

Options *logical-unit-number*—The specific unit number of the interface you want to assign to the dynamic profile, or one of the following predefined variables:

- **\$junos-underlying-interface-unit**—For static VLANs, the unit number variable. The static unit number variable is dynamically replaced with the client unit number when the client session begins. The client unit number is specified by the DHCP when it accesses the subscriber network.
- **\$junos-interface-unit**—The unit number variable on a dynamic underlying VLAN interface for which you want to enable the creation of dynamic VLAN subscriber interfaces based on the ACI.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Dynamic Underlying VLAN Interfaces to Use Agent Circuit Identifier Information*
- *Configuring Static Underlying VLAN Interfaces to Use Agent Circuit Identifier Information*
- *Agent Circuit Identifier-Based Dynamic VLANs Overview*

unit

```

Syntax  unit logical-unit-number {
    accept-source-mac {
        mac-address mac-address {
            policer {
                input cos-policer-name;
                output cos-policer-name;
            }
        }
    }
    accounting-profile name;
    advisory-options {
        downstream-rate rate;
        upstream-rate rate;
    }
    allow-any-vci;
    atm-scheduler-map (map-name | default);
    auto-configure {
        agent-circuit-identifier {
            dynamic-profile profile-name;
        }
        line-identity {
            include {
                accept-no-ids;
                circuit-id;
                remote-id;
            }
            dynamic-profile profile-name;
        }
    }
    backup-options {
        interface interface-name;
    }
    bandwidth rate;
    cell-bundle-size cells;
    clear-dont-fragment-bit;
    compression {
        rtp {
            maximum-contexts number <force>;
            f-max-period number;
            queues [queue-numbers];
            port {
                minimum port-number;
                maximum port-number;
            }
        }
    }
    compression-device interface-name;
    copy-tos-to-outer-ip-header;
    demux-destination family;
    demux-source family;
    demux-options {

```

```

    underlying-interface interface-name;
}
description text;
etree-ac-role (leaf | root);
interface {
    l2tp-interface-id name;
    (dedicated | shared);
}
dialer-options {
    activation-delay seconds;
    callback;
    callback-wait-period time;
    deactivation-delay seconds;
    dial-string [dial-string-numbers];
    idle-timeout seconds;
    incoming-map {
        caller caller-id | accept-all;
        initial-route-check seconds;
        load-interval seconds;
        load-threshold percent;
        pool pool-name;
        redial-delay time;
        watch-list {
            [routes];
        }
    }
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
family family-name {
    ... the family subhierarchy appears after the main [edit interfaces interface-name unit
    logical-unit-number] hierarchy ...
}
fragment-threshold bytes;
host-prefix-only;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap |
    swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {

```

```

input-policer policer-name;
input-three-color policer-name;
output-policer policer-name;
output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    up-count cells;
    down-count cells;
}
oam-period (disable | seconds);
output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap |
    swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    mru size;
    mtu (size | use-lower-layer);
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    ipcp-suggest-dns-option;
    lcp-restart-timer milliseconds;
    loopback-clear-timer seconds;
    ncp-restart-timer milliseconds;
    pap {
        access-profile name;
        default-pap-password password;
        local-name name;
        local-password password;
        passive;
    }
}
pppoe-options {

```

```

access-concentrator name;
auto-reconnect seconds;
(client | server);
service-name name;
underlying-interface interface-name;
}
pppoe-underlying-options {
access-concentrator name;
direct-connect;
dynamic-profile profile-name;
max-sessions number;
}
proxy-arp;
service-domain (inside | outside);
shaping {
(cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
length);
queue-length number;
}
short-sequence;
targeted-distribution;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
backup-destination address;
destination address;
key number;
routing-instance {
destination routing-instance-name;
}
source source-address;
ttl number;
}
vci vpi-identifier.vci-identifier;
vci-range start start-vci end end-vci;
vpi vpi-identifier;
vlan-id number;
vlan-id-range number-number;
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
family family {
accounting {
destination-class-usage;
source-class-usage {
(input | output | input output);
}
}
}
access-concentrator name;
address address {
... the address subhierarchy appears after the main [edit interfaces interface-name unit
logical-unit-number family family-name] hierarchy ...
}
bundle interface-name;
core-facing;

```

```
demux-destination {
    destination-prefix;
}
demux-source {
    source-prefix;
}
direct-connect;
duplicate-protection;
dynamic-profile profile-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list [filter-names];
    output filter-name;
    output-list [filter-names];
}
interface-mode (access | trunk);
ipsec-sa sa-name;
keep-address-and-control;
mac-validate (loose | strict);
max-sessions number;
mtu bytes;
multicast-only;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
protocols [inet iso mpls];
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
    fail-filter filter-name
    mode loose;
}
sampling {
    input;
    output;
}
service {
    input {
        post-service-filter filter-name;
        service-set service-set-name <service-filter filter-name>;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
service-name-table table-name
targeted-options {
    backup backup;
```



```

group group;
primary primary;
weight ($junos-interface-target-weight | weight-value);
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name destination address
  destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
  arp ip-address (mac | multicast-mac) mac-address <publish>;
  broadcast address;
  destination address;
  destination-profile name;
  eui-64;
  master-only;
  multipoint-destination address {
    dlci dlci-identifier;
    epd-threshold cells <plp1 cells>;
    inverse-arp;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
    oam-period (disable | seconds);
    shaping {
      (cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
        sustained rate);
      queue-length number;
    }
  }
  vci vpi-identifier.vci-identifier;
}
preferred;
primary;
(vrrp-group | vrrp-inet6-group) group-number {
  (accept-data | no-accept-data);
  advertise-interval seconds;
  authentication-type authentication;
  authentication-key key;
  fast-interval milliseconds;
  (preempt | no-preempt) {
    hold-time seconds;
  }
  priority number;
  track {
    interface interface-name {
      bandwidth-threshold bits-per-second priority-cost number;
    }
    priority-hold-time seconds;
    route ip-address/prefix-length routing-instance instance-name priority-cost cost;
  }
  virtual-address [addresses];
  virtual-link-local-address ipv6-address;
}

```

```

    vrrp-inherit-from {
        active-interface interface-name;
        active-group group-number;
    }
}
}
}
}
}

```

Hierarchy Level [edit interfaces *interface-name*],
 [edit logical-systems *logical-system-name* interfaces *interface-name*],
 [edit interfaces [interface-set](#) *interface-set-name* interface *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.
 Range increased for static pseudowire interfaces to 1,073,741,823 in Junos OS Release 18.3R1.

Description Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

Options *logical-unit-number*—Number of the logical unit.
Range: 0 through 1,073,741,823 for demux, PPPoE, and pseudowire static interfaces. 0 through 16,385 for all other static interface types.
etree-ac-role (**leaf | root**)—To configure an interface as either leaf or root.
 The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring Logical Interface Properties*
- *Junos OS Services Interfaces Library for Routing Devices*

unnumbered-address (Demux)

Syntax	<code>unnumbered-address interface-name <preferred-source-address address>;</code>
Hierarchy Level	<code>[edit interfaces interface-name unit logical-unit-number family inet],</code> <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet]</code>
Release Information	Statement introduced in Junos OS Release 8.2. preferred-source-address option introduced in Junos OS Release 9.0. IP demultiplexing interfaces supported in Junos OS Release 9.2.
Description	For IP demultiplexing interfaces, enable the local address to be derived from the specified interface. Configuring an unnumbered interface enables IP processing on the interface without assigning an explicit IP address to the interface.
Options	interface-name —Name of the interface from which the local address is derived. The specified interface must have a logical unit number and a configured IP address, and must not be an unnumbered interface. The preferred-source-address statement is explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring an Unnumbered Interface on page 220 • address on page 435 • <i>Junos System Basics Configuration Guide</i>

unnumbered-address (Dynamic Profiles)

Syntax	<code>unnumbered-address interface-name <preferred-source-address address>;</code>
Hierarchy Level	<p>[edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>],</p> <p>[edit dynamic-profiles <i>profile-name</i> interfaces demux0 unit <i>logical-unit-number</i> family <i>family</i>]</p>
Release Information	<p>Statement introduced in Junos OS Release 9.2.</p> <p>Support for the \$junos-preferred-source-address and \$junos-preferred-source-ipv6-address predefined variables introduced in Junos OS Release 9.6.</p> <p>Support for the \$junos-loopback-interface predefined variable introduced in Junos OS Release 9.6.</p>
Description	<p>For Ethernet interfaces, enable the local address to be derived from the specified interface. Configuring unnumbered Ethernet interfaces enables IP processing on the interface without assigning an explicit IP address to the interface. To configure unnumbered address dynamically, include the \$junos-loopback-interface-address predefined variable.</p> <p>You can configure unnumbered address support on Ethernet interfaces for IPv4 and IPv6 address families.</p>
Options	<p>interface-name—Name of the interface from which the local address is derived. The specified interface must have a logical unit number, a configured IP address, and must not be an unnumbered interface. This value can be a specific interface name or the \$junos-loopback-interface predefined variable.</p> <p>When defining the unnumbered-address statement using a static interface, keep the following in mind:</p> <ul style="list-style-type: none"> If you choose to include the routing-instance statement at the [edit dynamic-profiles] hierarchy level, that statement must be configured with a dynamic value by using the \$junos-routing-instance predefined variable. In addition, whatever static unnumbered interface you specify must belong to that routing instance; otherwise, the profile instantiation fails. If you choose to not include the routing-instance statement at the [edit dynamic-profiles] hierarchy level, the unnumbered-address statement uses the default routing instance. The use of the default routing instance requires that the unnumbered interface be configured statically and that it reside in the default routing instance.



NOTE: When you specify a static logical interface for the unnumbered interface in a dynamic profile that includes the **\$junos-routing-instance** predefined variable, you must not configure a preferred source address, whether with the **\$junos-preferred-source-address** predefined variable, the

\$junos-preferred-source-ipv6-address predefined variable, or the **preferred-source-address** statement. Configuring the preferred source address in this circumstance causes a commit failure.

When defining the **unnumbered-address** statement using the **\$junos-loopback-interface** predefined variable, keep the following in mind:

- To use the **\$junos-loopback-interface** predefined variable, the dynamic profile must also contain the **routing-instance** statement configured with the **\$junos-routing-instance** predefined variable at the [edit dynamic-profiles] hierarchy level.
- The applied loopback interface is based on the dynamically obtained routing instance of the subscriber.

address—(Optional) Secondary IP address of the donor interface. Configuring the preferred source address enables you to use an IP address other than the primary IP address on some of the unnumbered Ethernet interfaces in your network. This value can be a static IP address, the **\$junos-preferred-source-address** predefined variable for the inet family, or the **\$junos-preferred-source-ipv6-address** predefined variable for the inet6 family.

When defining the **preferred-source-address** value using a static IP address, keep the following in mind:

- The unnumbered interface must be statically configured.
- The IP address specified as the **preferred-source-address** must be configured in the specified unnumbered interface.

When defining the **preferred-source-address** value using the **\$junos-preferred-source-address** or the **\$junos-preferred-source-ipv6-address** predefined variables, keep the following in mind:

- You must configure the **unnumbered-address** statement using the **\$junos-loopback-interface** predefined variable.
- You must configure the **routing-instance** statement using the **\$junos-routing-instance** predefined variable at the [edit dynamic-profiles] hierarchy level.
- The preferred source address chosen is based on the dynamically applied loopback address which is in turn derived from the dynamically obtained routing instance of the subscriber. The configured loopback address with the closest network match to the user IP address is selected as the preferred source address.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation • *Dynamic Profiles Overview*

unnumbered-address (Ethernet)

Syntax	<code>unnumbered-address interface-name <preferred-source-address address>;</code>
Hierarchy Level	<code>[edit interfaces interface-name unit logical-unit-number family family],</code> <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family family]</code>
Release Information	Statement introduced in Junos OS Release 8.2. preferred-source-address option introduced in Junos OS Release 9.0.
Description	For Ethernet interfaces, enable the local address to be derived from the specified interface. Configuring an unnumbered Ethernet interface enables IP processing on the interface without assigning an explicit IP address to the interface.
Options	interface-name —Name of the interface from which the local address is derived. The specified interface must have a logical unit number and a configured IP address, and must not be an unnumbered interface. The preferred-source-address statement is explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring an Unnumbered Interface on page 220• address on page 435• <i>Junos System Basics Configuration Guide</i>

unnumbered-address (PPP)

Syntax	<code>unnumbered-address <i>interface-name</i> destination <i>address</i> destination-profile <i>profile-name</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For interfaces with PPP encapsulation, enable the local address to be derived from the specified interface.
Options	<p><i>interface-name</i>—Interface from which the local address is derived. The interface name must include a logical unit number and must have a configured address.</p> <p>The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring IPCP Options for Interfaces with PPP Encapsulation on page 218

up-count

Syntax	<code>up-count <i>cells</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> oam-liveness]</code> , <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> oam-liveness]</code> , <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i> oam-liveness]</code> , <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> oam-liveness]</code> , <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i> oam-liveness]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM encapsulation only, configure Operation, Administration, and Maintenance (OAM) F5 loopback cell count thresholds. Not supported on ATM-over-SHDSL interfaces.</p> <p>For ATM2 IQ PICs only, configure OAM F4 loopback cell count thresholds at the <code>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>]</code> hierarchy level.</p>
Options	<p>cells—Minimum number of consecutive OAM F4 or F5 loopback cells received before a VC is declared up.</p> <p>Range: 1 through 255</p> <p>Default: 5 cells</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring the ATM OAM F5 Loopback Cell Threshold</i>

user-prefix

Syntax	<code>user-prefix <i>user-prefix-string</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> auto-configure vlan-ranges authentication username-include], [edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges authentication username-include]
Release Information	Statement introduced in Junos OS Release 10.0.
Description	Specify the user prefix that is concatenated with the username during the subscriber authentication process.
Options	<i>user-prefix-string</i> —The user prefix string.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring VLAN Interface Username Information for AAA Authentication</i>

username-include (Interfaces)

Syntax

```
username-include {
  circuit-id;
  circuit-type;
  delimiter delimiter-character;
  domain-name domain-name-string;
  interface-name;
  mac-address;
  option-18;
  option-37;
  option-82 <circuit-id> <remote-id>;
  radius-realm radius-realm-string;
  remote-id;
  user-prefix user-prefix-string;
  vlan-tags;
}
```

Hierarchy Level [edit interfaces *interface-name* auto-configure [vlan-ranges authentication](#)],
[edit interfaces *interface-name* auto-configure [stacked-vlan-ranges authentication](#)]

Release Information Statement introduced in Junos OS Release 10.0.
vlan-tags option added in Junos OS Release 18.3R1 on MX Series routers.

Description Configure the username that the router passes to the external AAA server. You must include at least one of the optional statements for the username to be valid. If you do not configure a username, the router accesses the local authentication service only and does not use external authentication services, such as RADIUS.

The username takes the format ***user-prefix mac-address circuit-type circuit-id remote-id option-82 interface-name domain-name radius-realm***. By default, each component is separated by a period (.), but you can specify a different delimiter with the **delimiter** statement.

Options **vlan-tags**—Include the subscriber session VLAN tags in the username for interactions with an external authority. Both single-tagged and double-tagged VLANs are supported: The tags are added in the format ***outer-vlan-tag-inner-vlan-tag***. The outer tag is always included; the inner tag is included for double-tagged VLANs.

You can use this option instead of the **interface-name** option when the outer VLAN tag is unique across the system and you do not need the underlying physical interface name to be part of the format.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring VLAN Interface Username Information for AAA Authentication*
- *Using DHCP Option 82 Suboptions in Authentication Usernames for Autosense VLANs*
- *Using DHCP Option 18 and Option 37 in Authentication Usernames for DHCPv6 Autosense VLANs*
- *Configuring a Username for Authentication of Out-of-Band Triggered Dynamic VLANs*

vbr

Syntax	<code>vbr peak <i>rate</i> sustained <i>rate</i> burst <i>length</i>;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM encapsulation only, define the variable bandwidth utilization in the traffic-shaping profile.</p> <p>When you configure the variable bandwidth utilization, you must specify all three options (burst, peak, and sustained). You can specify the rate in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify the rate in cells per second by entering a decimal number followed by the abbreviation c; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.</p>
Default	If the vbr statement is not specified, bandwidth utilization is unlimited.
Options	<p>burst <i>length</i>—Burst length, in cells. If you set the length to 1, the peak traffic rate is used. Range: 1 through 4000 cells</p> <p>peak <i>rate</i>—Peak rate, in bits per second or cells per second. Range: For ATM1 interfaces, 33 Kbps through 135.6 Mbps (ATM OC3); 33 Kbps through 276 Mbps (ATM OC12). For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p> <p>sustained <i>rate</i>—Sustained rate, in bits per second or cells per second. Range: For ATM1 interfaces, 33 Kbps through 135.6 Mbps (ATM OC3); 33 Kbps through 276 Mbps (ATM OC12). For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p>

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring ATM CBR*
- *Applying Scheduler Maps to Logical ATM Interfaces*
- [cbr on page 491](#)
- [rtvbr on page 992](#)
- [shaping on page 1013](#)

vc-cos-mode

Syntax `vc-cos-mode (alternate | strict);`

Hierarchy Level [edit interfaces *interface-name* [atm-options](#) [scheduler-maps](#) *map-name*]

Release Information Statement introduced before Junos OS Release 7.4.

Description For ATM2 IQ interfaces only, specify packet-scheduling priority value for ATM2 IQ VC tunnels.

Options **alternate**—VC CoS queue has high priority. The scheduling of the queues alternates between the high-priority queue and the remaining queues, so every other scheduled packet is from the high-priority queue.

strict—VC CoS queue has strictly high priority. A queue with strict high priority is always scheduled before the remaining queues. The remaining queues are scheduled in round-robin fashion.

Default: `alternate`

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation

- *ATM2 IQ VC Tunnel CoS Components Overview*
- *Applying Scheduler Maps to ATM Interfaces*

vci

Syntax	<code>vci <i>vpi-identifier.vci-identifier</i>;</code>
Hierarchy Level	<p>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>], [edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro routers.</p>
Description	<p>For ATM point-to-point logical interfaces only, configure the virtual circuit identifier (VCI) and virtual path identifier (VPI).</p> <p>To configure a VPI for a point-to-multipoint interface, specify the VPI in the multipoint-destination statement.</p> <p>VCIs 0 through 31 are reserved for specific ATM values designated by the ATM Forum.</p>
Options	<p><i>vci-identifier</i>—ATM virtual circuit identifier. Unless you configure the interface to use promiscuous mode, this value cannot exceed the highest-numbered VC configured for the interface with the maximum-vcs option of the vpi statement.</p> <p>Range: 0 through 4089 or 0 through 65,535 with promiscuous mode, with VCIs 0 through 31 reserved.</p> <p><i>vpi-identifier</i>—ATM virtual path identifier.</p> <p>Range: 0 through 255</p> <p>Default: 0</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring a Point-to-Point ATM1 or ATM2 IQ Connection Applying Scheduler Maps to Logical ATM Interfaces

vci-range

Syntax	<code>vci-range start <i>start-vci</i> end <i>end-vci</i>;</code>
Hierarchy Level	<code>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.0.
Description	Range of VCI values used in ATM-to-Ethernet interworking cross-connects. VCI 0 through 31 are reserved. VCI 0 through 31 should not be used.
Options	<i>start-vci</i> —Lowest number VCI in the range. <i>end-vci</i> —Highest number VCI in the range. Range: 0 through 255
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring ATM-to-Ethernet Interworking on page 286

virtual-switch

Syntax	<code>virtual-switch <i>name</i> bridge-domain <i>name</i> vlan-id [<i>vlan-ids</i>];</code>
Hierarchy Level	<code>[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> default-<i>x</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Specify the routing-instance type as a virtual switch, under which bridge-domain MIPs must be enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring MIP for Bridge Domains of a Virtual Switch

vlan-id (Logical Port in Bridge Domain)

Syntax	<code>vlan-id <i>number</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge]
Release Information	Statement introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 15.1.
Description	The VLAN ID configured on the logical port. Received packets with no VLAN tags are forwarded within the bridge domain with the matching VLAN ID.
Options	number —The VLAN ID. Range: 1 through 4095
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Access Mode on a Logical Interface</i>• <i>Tunnel Services Overview</i>• <i>Tunnel Interface Configuration on MX Series Routers Overview</i>

vlan-id (Outer VLAN ID)

Syntax	<code>vlan-id <i>outer-vlan-id</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.0.
Description	The outer VLAN ID to be used in ATM-to-Ethernet interworking cross-connects. Outer VLAN IDs are converted to the ATM VPI. The outer VLAN ID must match the VPI value configured. The allowable VPI range is 0 to 255. Do not configure the outer VLAN ID to be greater than 255.
Options	outer-vlan-id —Outer VLAN ID number. Range: 0 through 4094
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring ATM-to-Ethernet Interworking on page 286

vlan-id (VLAN ID to Be Bound to a Logical Interface)

Syntax	<code>vlan-id <i>number</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Fast Ethernet, Gigabit Ethernet, and Aggregated Ethernet interfaces only, bind a 802.1Q VLAN tag ID to a logical interface.
Options	<p><i>number</i>—A valid VLAN identifier.</p> <p>Range: For aggregated Ethernet, 4-port, 8-port, and 12-port Fast Ethernet PICs, and for management and internal Ethernet interfaces, 1 through 1023.</p> <p>For 48-port Fast Ethernet and Gigabit Ethernet PICs, 1 through 4094.</p> <p>VLAN ID 0 is reserved for tagging the priority of frames.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Enabling VLAN Tagging</i>

native-vlan-id

Syntax	<code>native-vlan-id <i>vlan-id</i>;</code>
Hierarchy Level (QFX Series and EX4600)	<p>For platforms without ELS:</p> <pre>[edit interfaces (QFX Series) <i>interface-name</i> unit 0 family ethernet-switching]</pre> <p>For platforms with ELS:</p> <pre>[edit interfaces (QFX Series) <i>interface-name</i>]</pre>
Hierarchy Level (ACX Series, EX Series, SRX Series, M Series, MX Series, and T Series)	<pre>[edit interfaces <i>ge-fpc/pic/port</i>],</pre> <pre>[edit interfaces <i>interface-name</i>]</pre>
Hierarchy Level (SRX Series)	<pre>[edit interfaces <i>interface-name</i>]</pre>
Release Information	<p>Statement introduced in Junos OS Release 8.3.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 9.5 for SRX Series.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.</p>
Description	<p>Configure the VLAN identifier to associate with untagged packets received on the physical interface of a trunk mode interface for the following:</p> <ul style="list-style-type: none"> • QFX Series and EX4600 • M Series routers with Gigabit Ethernet IQ PICs with SFP and Gigabit Ethernet IQ2 PICs with SFP configured for 802.1Q flexible VLAN tagging • MX Series routers with Gigabit Ethernet DPCs and MICs, Tri-Rate Ethernet DPCs and MICs, and 10-Gigabit Ethernet DPCs and MICs and MPCs configured for 802.1Q flexible VLAN tagging • T4000 routers with 100-Gigabit Ethernet Type 5 PIC with CFP • EX Series switches with Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces <p>The logical interface on which untagged packets are received must be configured with the same VLAN ID as the native VLAN ID configured on the physical interface, otherwise the untagged packets are dropped. To configure the logical interface, include the vlan-id</p>

statement (matching the **native-vlan-id** statement on the physical interface) at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.

When the **native-vlan-id** statement is included with the **flexible-vlan-tagging** statement, untagged packets are accepted on the same mixed VLAN-tagged port and on the interfaces that are configured for Q-in-Q tunneling.

When the **native-vlan-id** statement is combined with the *interface-mode* statement, untagged packets are accepted and forwarded within the bridge domain or VLAN that is configured with the matching VLAN ID.

To configure the logical interface, include the **vlan-id** statement (matching the **native-vlan-id** statement on the physical interface) at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.



NOTE: Starting in Junos OS Release 17.1R1, you can send untagged traffic without a native VLAN ID to the remote end of the network. To do this, remove the native VLAN ID from the untagged traffic configuration by setting the **no-native-vlan-insert** statement. If you do not configure this statement, the native VLAN ID is added to the untagged traffic.

Default By default, the untagged packets are dropped. That is, if you do not configure the **native-vlan-id** option, the untagged packets are dropped.

Options **vlan-id**—Numeric identifier of the VLAN.

Range: 1 through 4094

number—VLAN ID number.

Range: (ACX Series routers, SRX Series devices and EX Series switches) 0 through 4094.

Required Privilege routing—To view this statement in the configuration.

Level routing-control—To add this statement to the configuration.

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

**Related
Documentation**

- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (J-Web Procedure)*
- *Understanding Bridging and VLANs on Switches*
- *Enabling VLAN Tagging*
- *Configuring Access Mode on a Logical Interface*
- *Configuring the Native VLAN Identifier on Switches With ELS Support*
- *Understanding Interfaces*
- *Understanding Q-in-Q Tunneling and VLAN Translation*
- *no-native-vlan-insert*
- *Sending Untagged Traffic Without VLAN ID to Remote End*
- *show ethernet-switching interfaces*
- *show vlans*
- [flexible-vlan-tagging on page 638](#)
- [Junos OS Network Interfaces Configuration Guide](#)

vlan-id-list (Ethernet VLAN Circuit)

Syntax	<code>vlan-id-list [<i>vlan-id</i> <i>vlan-id</i>–<i>vlan-id</i>];</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.5.
Description	Binds a single-tag logical interface to a list of VLAN IDs. Configures a logical interface to receive and forward any tag frame whose VLAN ID tag matches the list of VLAN IDs you specify.



NOTE:

When you create a circuit cross-connect (CCC) using VLAN-bundled single-tag logical interfaces on Layer 2 VPN routing instances, the circuit automatically uses ethernet encapsulation. For Layer 2 VPN, you need to include the `encapsulation-type` statement and specify the value `ethernet` at either of the following hierarchy levels:

- `[edit routing-instances routing-instance-name protocols l2vpn]`
- `[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn]`

For more information about the `encapsulation-type` configuration statement and the Layer 2 encapsulation types `ethernet` and `ethernet-vlan`, see the *Junos OS VPNs Library for Routing Devices*.

Options `[vlan-id vlan-id–vlan-id]`—A list of valid VLAN ID numbers. Specify the VLAN IDs individually by using a space to separate each ID, as an inclusive list by separating the starting VLAN ID and ending VLAN ID with a hyphen, or as a combination of both.

Range: 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames.



NOTE: Configuring `vlan-id-list` with the entire `vlan-id` range is an unnecessary waste of system resources and is not best practice. It should be used only when a subset of VLAN IDs (not the entire range) needs to be associated with a logical interface. If you specify the entire range (1-4094), it has the same result as not specifying a range; however, it consumes PFE resources such as VLAN lookup tables entries, and so on.

The following examples illustrate this further:

```
[edit interfaces interface-name]
vlan-tagging;
unit number {
    vlan-id-range 1-4094;
}
```

```
[edit interfaces interface-name]
unit 0;
```

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Binding VLAN IDs to Logical Interfaces*
- [encapsulation \(Logical Interface\) on page 592](#)
- [encapsulation on page 596](#)
- encapsulation-type (Layer 2 VPN routing instance), see the *Junos OS VPNs Library for Routing Devices*
- [flexible-vlan-tagging on page 638](#)
- [vlan-tagging on page 1146](#)
- [vlan-tags \(Dual-Tagged Logical Interface\) on page 1148](#)

vlan-id-list (Interface in Bridge Domain)

Syntax	<code>vlan-id-list [<i>number number-number</i>];</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge]
Release Information	Statement introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 15.1.
Description	Configure a logical interface to forward packets and learn MAC addresses within each bridge domain configured with a VLAN ID that matches a VLAN ID specified in the list. VLAN IDs can be entered individually using a space to separate each ID, entered as an inclusive list separating the starting VLAN ID and ending VLAN ID with a hyphen, or a combination of both.
Options	<i>number number</i> —Individual VLAN IDs separated by a space. <i>number-number</i> —Starting VLAN ID and ending VLAN ID in an inclusive range. Range: 1 through 4095
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring a Logical Interface for Trunk Mode</i>• <i>Configuring the VLAN ID List for a Trunk Interface</i>• <i>Tunnel Services Overview</i>• <i>Tunnel Interface Configuration on MX Series Routers Overview</i>

vlan-id-range

Syntax	<code>vlan-id-range <i>vlan-id-vlan-id</i></code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	Bind a range of VLAN IDs to a logical interface.
Options	number —The first number is the lowest VLAN ID in the range the second number is the highest VLAN ID in the range. Range: 1 through 4094



NOTE: Configuring `vlan-id-range` with the entire `vlan-id` range is an unnecessary waste of system resources and is not best practice. It should be used only when a subset of VLAN IDs (not the entire range) needs to be associated with a logical interface. If you specify the entire range (1-4094), it has the same result as not specifying a range; however, it consumes PFE resources such as VLAN lookup tables entries, and so on.

The following examples illustrate this further:

```
[edit interfaces interface-name]
vlan-tagging;
unit number {
    vlan-id-range 1-4094;
}
```

```
[edit interfaces interface-name]
unit 0;
```

VLAN ID 0 is reserved for tagging the priority of frames.

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <i>Binding a Range of VLAN IDs to a Logical Interface</i>

vlan-ranges

```
Syntax  vlan-ranges {
    access-profile profile-name;
    authentication {
        packet-types [packet-types];
        password password-string;
        username-include {
            circuit-type;
            circuit-id;
            delimiter delimiter-character;
            domain-name domain-name-string;
            interface-name;
            mac-address;
            option-18;
            option-37;
            option-82 <circuit-id> <remote-id>;
            radius-realm radius-realm-string;
            remote-id;
            user-prefix user-prefix-string;
            vlan-tags;
        }
    }
    dynamic-profile profile-name {
        accept (any | dhcp-v4 | inet);
        accept-out-of-band protocol;
        access-profile vlan-dynamic-profile-name;
        ranges (any | low-tag)–(any | high-tag);
    }
    override;
}
```

Hierarchy Level [edit interfaces *interface-name* [auto-configure](#)]

Release Information Statement introduced in Junos OS Release 9.5.

Description Configure multiple VLANs. Each VLAN is assigned a VLAN ID number from the range.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Documentation

- *Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs*
- *Configuring Interfaces to Support Both Single and Stacked VLANs*

vlan-rewrite

Syntax	<code>vlan-rewrite translate (200 500 201 501)</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>number</i> family bridge interface-mode trunk]</code> <code>[edit interfaces <i>interface-name</i> unit <i>number</i> family ethernet-switching interface-mode trunk]</code>
Release Information	<p>Statement introduced in Junos OS Release 9.4.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>
Description	<p>Translates an incoming VLAN to a bridge-domain VLAN, corresponding counter translation at egress. Supports translation of VLAN 200 to VLAN 500 and VLAN 201 to VLAN 501. Other valid VLANs pass through without translation.</p>
Options	<p>translate 200 500—Translates incoming packets with VLAN 200 to 500.</p> <p>translate 201 501—Translates incoming packets with VLAN 201 to 501.</p> <p>translate 202 502—Translates incoming packets with VLAN 202 to 502.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Rewriting a VLAN Tag and Adding a New Tag</i>

vlan-rule (100-Gigabit Ethernet Type 4 PIC with CFP)

Syntax	<code>vlan-rule (high-low odd-even);</code>
Hierarchy Level	<code>[edit chassis fpc slot pic slot forwarding-mode vlan-steering]</code>
Release Information	Statement introduced in Junos OS Release 10.4.
Description	<p>Configure the interoperation mode of the 100-Gigabit Ethernet Type 4 PIC with CFP (PD-ICE-CFP-FPC4) when interoperating with 100 gigabit Ethernet interfaces from other vendors.</p> <p>If no VLAN rule is configured, all tagged packets are distributed to PFE0.</p>
Options	<p>high-low—VLAN IDs 1 through 2047 are distributed to PFE0 and VLAN IDs 2048 through 4096 are distributed to PFE1.</p> <p>odd-even—Odd number VLAN IDs are distributed to PFE1 and even number VLAN IDs are distributed to PFE0.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring VLAN Steering Mode for 100-Gigabit Ethernet Type 4 PIC with CFP</i>• <i>forwarding-mode (100-Gigabit Ethernet)</i>• vlan-steering (100-Gigabit Ethernet Type 4 PIC with CFP) on page 1145

vlan-steering (100-Gigabit Ethernet Type 4 PIC with CFP)

Syntax	<pre>vlan-steering { vlan-rule (high-low odd-even); }</pre>
Hierarchy Level	[edit chassis fpc slot pic slot forwarding-mode]
Release Information	Statement introduced in Junos OS Release 9.4.
Description	<p>Configure the 100-Gigabit Ethernet Type 4 PIC with CFP (PD-1CE-CFP-FPC4) to interoperate with 100 gigabit Ethernet interfaces from other vendors.</p> <p>The other statement is explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring VLAN Steering Mode for 100-Gigabit Ethernet Type 4 PIC with CFP</i> • <i>forwarding-mode (100-Gigabit Ethernet)</i> • sa-multicast (100-Gigabit Ethernet) on page 994 • vlan-rule (100-Gigabit Ethernet Type 4 PIC with CFP) on page 1144

vlan-tagging

Syntax	vlan-tagging;
Syntax (QFX Series, NFX Series, and EX4600)	vlan-tagging;
Syntax (SRX Series Interfaces)	vlan-tagging native-vlan-id <i>vlan-id</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i>]
QFX Series, NFX Series, and EX4600 Interfaces	[edit interfaces (QFX Series) <i>interface-name</i>] [edit interfaces (QFX Series) interface-range <i>interface-range-name</i>]
SRX Series Interfaces	[edit interfaces <i>interface</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 9.5. Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Statement introduced in Junos OS Release 13.2 for PTX Series Routers. Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series.
Description	For Fast Ethernet and Gigabit Ethernet interfaces, aggregated Ethernet interfaces configured for VPLS, and pseudowire subscriber interfaces, enable the reception and transmission of 802.1Q VLAN-tagged frames on the interface.



NOTE: For QFX Series configure VLAN identifier for untagged packets received on the physical interface of a trunk mode interface. Enable VLAN tagging. The platform receives and forwards single-tag frames with 802.1Q VLAN tags.

On EX Series switches except for EX4300 and EX9200 switches, the `vlan-tagging` and `family ethernet-switching` statements cannot be configured on the same interface. Interfaces on EX2200, EX3200, EX3300, EX4200, and EX4500 switches are set to `family ethernet-switching` by the default factory configuration. EX6200 and EX8200 switch interfaces do not have a default family setting.

Default VLAN tagging is disabled by default.

Options **native-vlan-id**— (SRX Series) Configures a VLAN identifier for untagged packets. Enter a number from 0 through 4094.



NOTE: The **native-vlan-id** can be configured only when either **flexible-vlan-tagging mode** or **interface-mode trunk** is configured.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *802.1Q VLANs Overview*
- *Configuring a Layer 3 Subinterface (CLI Procedure)*
- *Configuring Tagged Aggregated Ethernet Interfaces*
- *Example: Configuring Layer 3 Subinterfaces for a Distribution Switch and an Access Switch*
- *vlan-id*
- *Configuring a Layer 3 Logical Interface*
- *Configuring VLAN Tagging*

vlan-tags (Dual-Tagged Logical Interface)

Syntax	<code>vlan-tags inner-list [vlan-id vlan-id–vlan-id] outer <tpid.>vlan-id;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 9.5.
Description	(MX Series routers only) Binds a dual-tag logical interface to a list of VLAN IDs. Configures the logical interface to receive and forward any dual-tag frame whose inner VLAN ID tag matches the list of VLAN IDs you specify.



NOTE:

To create a circuit cross-connect (CCC) using VLAN-bundled dual-tag logical interfaces on Layer 2 VPN routing instances, you must include the `encapsulation-type` statement and specify the value `ethernet-vlan` at the one of the following hierarchy levels:

- [edit routing-instances *routing-instance-name* protocols l2vpn]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols l2vpn]

For more information about the `encapsulation-type` configuration statement and the Layer 2 encapsulation types `ethernet` and `ethernet-vlan`, see the *Junos OS VPNs Library for Routing Devices*.

Options `inner-list [vlan-id vlan-id vlan-id–vlan-id]`—A list of valid VLAN ID numbers. Specify the VLAN IDs individually by using a space to separate each ID, as an inclusive list by separating the starting VLAN ID and ending VLAN ID with a hyphen, or as a combination of both.

Range: 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames.

`outer <tpid.>vlan-id`—An optional Tag Protocol ID (TPID) and a valid VLAN ID.

Range: For TPID, specify a hexadecimal value in the format `0xnnnn`.

Range: For VLAN ID, 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames.



NOTE: Configuring `inner-list` with the entire `vlan-id` range is an unnecessary waste of system resources and is not best practice. It should be used only when a subset of VLAN IDs of inner tag (not the entire range) needs to be associated with a logical interface. If you specify the entire range (1 through

4094), it has the same result as not specifying a range; however, it consumes PFE resources such as VLAN lookup tables entries, and so on.

The following examples illustrate this further:

```
[edit interfaces interface-name]
vlan-tagging;
unit number {
    vlan-tags outer vid inner-list 1-4094;
}
```

```
[edit interfaces interface-name]
vlan-tagging;
unit number {
    vlan-id vid;
}
```

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.

- | | |
|------------------------------|--|
| Related Documentation | <ul style="list-style-type: none"> • <i>Binding VLAN IDs to Logical Interfaces</i> • encapsulation (Logical Interface) on page 592 • encapsulation on page 596 • encapsulation-type (Layer 2 VPN routing instance), see the <i>Junos OS VPNs Library for Routing Devices</i>. • flexible-vlan-tagging on page 638 • vlan-id-list (Ethernet VLAN Circuit) on page 1138 • vlan-tagging on page 1146 |
|------------------------------|--|

vlan-tags (Stacked VLAN Tags)

Syntax	<code>vlan-tags inner <i>tpid.vlan-id</i> inner-list <i>value</i> inner-range <i>vid1—vid2</i> outer <i>tpid.vlan-id</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
Description	Bind TPIDs and 802.1Q VLAN tag IDs to a logical interface. TPID fields are used to identify the frame as an IEEE 802.1Q-tagged frame.
Options	inner <i>tpid.vlan-id</i> —A TPID and a valid VLAN identifier. TPID is a 16-bit field set to a value of 0x8100 in order to identify the frame as an IEEE 802.1Q-tagged frame. Range: (most routers) For VLAN ID, 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames. For PTX Series, VLAN ID 0 is not supported. inner-list <i>value</i> —List or a set of VLAN identifiers.



NOTE: This is supported on MX Series routers with Trio-based FPCs.

inner-range *tpid. vid1—vid2*—Specify a TPID and a range of VLAN IDs where vid1 is the start of the range and vid2 is the end of the range.



NOTE: On the network-to-network (NNI) or egress interfaces of provider edge (PE) routers, you cannot configure the inner-range *tpid. vid1—vid2* option with the `vlan-tags` statement for ISP-facing interfaces.

Range: For VLAN ID, 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames.

outer *tpid.vlan-id*—A TPID and a valid VLAN identifier.

Range: (most routers) For VLAN ID, 1 through 511 for normal interfaces, and 512 through 4094 for VLAN CCC interfaces. VLAN ID 0 is reserved for tagging the priority of frames. For PTX Series, VLAN ID 0 is not supported.



NOTE: Configuring inner-range with the entire `vlan-id` range consumes system resources and is not a best practice. The inner-range must be used only when a subset of VLAN IDs of inner tag (not the entire range) needs to be associated

with a logical interface. If you specify the entire range (1 through 4094), it has the same result as not specifying a range; however, it consumes Packet Forwarding Engine resources such as VLAN lookup table entries, and so on.

The following examples illustrate this further:

```
[edit interfaces interface-name]
stacked-vlan-tagging;
unit number {
    vlan-tags outer vid inner-range 1-4094;
}
```

```
[edit interfaces interface-name]
vlan-tagging;
unit number {
    vlan-id vid;
}
```

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Dual VLAN Tags</i> • <i>Configuring Flexible VLAN Tagging on PTX Series Packet Transport Routers</i> • stacked-vlan-tagging on page 1036

vlan-tags-outer

Syntax	<code>vlan-tags-outer <i>vlan-tag</i>;</code>
Hierarchy Level	<code>[edit interfaces interface-set <i>interface-set-name</i> interface <i>interface-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 8.5.
Description	The S-VLAN outer tag that belongs to a set of interfaces used to configure hierarchical CoS schedulers.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Class of Service Feature Guide for Routers and EX9200 Switches</i>

vlan-vci-tagging

Syntax	<code>vlan-vci-tagging;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 9.0.
Description	Enable the ATM-to-Ethernet interworking cross-connect function on a Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring ATM-to-Ethernet Interworking on page 286

vpi (ATM CCC Cell-Relay Promiscuous Mode)

Syntax	<code>vpi <i>vpi-identifier</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>at-fpc/pic/port</i> atm-options promiscuous-mode]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Junos OS Release 12.2 for the ACX Series Universal Metro routers.
Description	For ATM interfaces, allow all VCI in this VPI to open in ATM CCC cell-relay mode. When you include <code>vpi</code> statements at the <code>[edit interfaces <i>interface-name</i> atm-options promiscuous-mode]</code> hierarchy level, the specified VPIs open in promiscuous mode.
Options	<i>vpi-identifier</i> —ATM virtual path identifier. This is one of the VPIs that you define in the <code>vci</code> statement. (For a list of hierarchy levels at which you can include the <code>vci</code> statement, see <code>vci</code> .) Range: 0 through 255
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring ATM Cell-Relay Promiscuous Mode

vpi (Define Virtual Path)

Syntax

```
vpi vpi-identifier {
  maximum-vcs maximum-vcs;
  oam-liveness {
    up-count cells;
    down-count cells;
  }
  oam-period (disable | seconds);
  shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst length);
    queue-length number;
  }
}
```

Hierarchy Level [edit interfaces at-*fpc/pic/port* [atm-options](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description For ATM interfaces, configure the virtual path (VP).



NOTE: Certain options apply only to specific platforms.

Options *vpi-identifier*—ATM virtual path identifier. This is one of the VPIs that you define in the [vci](#) statement. (For a list of hierarchy levels at which you can include the [vci](#) statement, see [vci](#).)

Range: 0 through 255

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.


Related Documentation

- [Configuring the Maximum Number of ATM1 VCs on a VP](#)

vpi (Logical Interface and Interworking)

Syntax	<code>vpi <i>virtual-path-identifier</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 9.0. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro routers.
Description	VPI used in an ATM-to-Ethernet interworking cross-connect.
Options	virtual-path-identifier —VPI to be used. Range: 0 through 255
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring ATM-to-Ethernet Interworking on page 286• Configuring ATM Cell-Relay Promiscuous Mode

vtmapping

Syntax	<code>vtmapping (itu-t klm);</code>
Hierarchy Level	<code>[edit chassis fpc <i>number</i> pic <i>number</i>],</code> <code>[edit interfaces <i>interface-name</i> sonet-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For the Channelized STM1 IQ PIC or Channelized STM1 PIC, configure virtual tributary mapping.</p> <p>For the Channelized STM1 PIC, you configure virtual tributary mapping at the <code>[edit chassis fpc <i>number</i> pic <i>number</i>]</code> hierarchy level.</p>
	<div>  <p>NOTE: The <code>vtmapping</code> statement is not supported for <code>cau4</code> interfaces on the Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H).</p> </div>
Options	<p><code>itu-t</code>—International Telephony Union standard.</p> <p><code>klm</code>—KLM standard.</p> <p>Default: <code>klm</code></p>
Required Privilege Level	<p><code>interface</code>—To view this statement in the configuration.</p> <p><code>interface-control</code>—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Virtual Tributary Mapping of Channelized STM1 Interfaces</i> <i>Configuring the Junos OS to Support Channelized STM1 Interface Virtual Tributary Mapping</i>

warning

Syntax	<pre>warning low-light-warning { (link-down syslog); }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> optics-options]
Release Information	<p>Statement introduced in Junos OS Release 10.0.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2 for PTX Series routers.</p> <p>Statement introduced in Junos OS Release 18.3R1 for PTX10K-LC1104 on the PTX10008 and PTX10016 routers.</p>
Description	Specifies the action to take if the receiving optics signal is below the optics low-light warning threshold.
Options	<p>link-down—Drop the 10-Gigabit Ethernet link and marks link as down.</p> <p>syslog—Write the optics information to the system log.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• <i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i>• optics-options on page 874• <i>100-Gigabit Ethernet OTN Options Configuration Overview</i>

watch-list

Syntax	<pre>watch-list { [<i>routes</i>]; }</pre>
Hierarchy Level	[edit interfaces <i>dl</i> unit <i>logical-unit-number</i> dialer-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	On J Series Services Routers with ISDN interfaces, configure an ISDN list of routes to watch. Used only for dialer watch.
Options	routes —IP prefix of a route. Specify one or more. The primary interface is considered up if there is at least one valid route for any of the addresses in the watch list to an interface other than the backup interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Interfaces and Routing Configuration Guide</i>

wavelength

Syntax	<code>wavelength <i>nm</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> optics-options]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 13.2 for PTX Series routers.
Description	For 10-Gigabit or 100-Gigabit Ethernet DWDM interfaces only, configure full C-band ITU-Grid tunable optics.
Options	<i>nm</i> —Wavelength value. It can be one of the following:



NOTE: All values are displayed. However, if you configure a value that is not supported by the device, an error message is displayed and the device is not tuned to the specified wavelength.

- **1528.38**—1528.38 nanometers (nm), corresponds to a 50-GHz grid
- **1528.77**—1528.77 nm, corresponds to 50-GHz and 100-GHz grids
- **1529.16**—1529.16 nm, corresponds to a 50-GHz grid
- **1529.55**—1529.55 nm, corresponds to 50-GHz and 100-GHz grids
- **1529.94**—1529.94 nm, corresponds to a 50-GHz grid
- **1530.33**—1530.33 nm, corresponds to 50-GHz and 100-GHz grids
- **1530.72**—1530.72 nm, corresponds to a 50-GHz grid
- **1531.12**—1531.12 nm, corresponds to 50-GHz and 100-GHz grids
- **1531.51**—1531.51 nm, corresponds to a 50-GHz grid
- **1531.90**—1531.90 nm, corresponds to 50-GHz and 100-GHz grids
- **1532.29**—1532.29 nm, corresponds to a 50-GHz grid
- **1532.68**—1532.68 nm, corresponds to 50-GHz and 100-GHz grids
- **1533.07**—1533.07 nm, corresponds to a 50-GHz grid
- **1533.47**—1533.47 nm, corresponds to 50-GHz and 100-GHz grids
- **1533.86**—1533.86 nm, corresponds to a 50-GHz grid
- **1534.25**—1534.25 nm, corresponds to 50-GHz and 100-GHz grids

- **1534.64**—1534.64 nm, corresponds to a 50-GHz grid
- **1535.04**—1535.04 nm, corresponds to 50-GHz and 100-GHz grids
- **1535.43**—1535.43 nm, corresponds to a 50-GHz grid
- **1535.82**—1535.82 nm, corresponds to 50-GHz and 100-GHz grids
- **1536.22**—1536.22 nm, corresponds to a 50-GHz grid
- **1536.61**—1536.61 nm, corresponds to 50-GHz and 100-GHz grids
- **1537.00**—1537.00 nm, corresponds to a 50-GHz grid
- **1537.40**—1537.40 nm, corresponds to 50-GHz and 100-GHz grids
- **1537.79**—1537.79 nm, corresponds to a 50-GHz grid
- **1538.19**—1538.19 nm, corresponds to 50-GHz and 100-GHz grids
- **1538.58**—1538.58 nm, corresponds to a 50-GHz grid
- **1538.98**—1538.98 nm, corresponds to 50-GHz and 100-GHz grids
- **1539.37**—1539.37 nm, corresponds to a 50-GHz grid
- **1539.77**—1539.77 nm, corresponds to 50-GHz and 100-GHz grids
- **1540.16**—1540.16 nm, corresponds to a 50-GHz grid
- **1540.56**—1540.56 nm, corresponds to 50-GHz and 100-GHz grids
- **1540.95**—1540.95 nm, corresponds to a 50-GHz grid
- **1541.35**—1541.35 nm, corresponds to 50-GHz and 100-GHz grids
- **1541.75**—1541.75 nm, corresponds to a 50-GHz grid
- **1542.14**—1542.14 nm, corresponds to 50-GHz and 100-GHz grids
- **1542.54**—1542.54 nm, corresponds to a 50-GHz grid
- **1542.94**—1542.94 nm, corresponds to 50-GHz and 100-GHz grids
- **1543.33**—1543.33 nm, corresponds to a 50-GHz grid
- **1543.73**—1543.73 nm, corresponds to 50-GHz and 100-GHz grids
- **1544.13**—1544.13 nm, corresponds to a 50-GHz grid
- **1544.53**—1544.53 nm, corresponds to 50-GHz and 100-GHz grids
- **1544.92**—1544.92 nm, corresponds to a 50-GHz grid
- **1545.32**—1545.32 nm, corresponds to 50-GHz and 100-GHz grids
- **1545.72**—1545.72 nm, corresponds to a 50-GHz grid
- **1546.12**—1546.12 nm, corresponds to 50-GHz and 100-GHz grids
- **1546.52**—1546.52 nm, corresponds to a 50-GHz grid
- **1546.92**—1546.92 nm, corresponds to 50-GHz and 100-GHz grids
- **1547.32**—1547.32 nm, corresponds to a 50-GHz grid

- **1547.72**—1547.72 nm, corresponds to 50-GHz and 100-GHz grids
- **1548.11**—1548.11 nm, corresponds to a 50-GHz grid
- **1548.51**—1548.51 nm, corresponds to 50-GHz and 100-GHz grids
- **1548.91**—1548.91 nm, corresponds to a 50-GHz grid
- **1549.32**—1549.32 nm, corresponds to 50-GHz and 100-GHz grids
- **1549.72**—1549.72 nm, corresponds to a 50-GHz grid
- **1550.12**—1550.12 nm, corresponds to 50-GHz and 100-GHz grids
- **1550.52**—1550.52 nm, corresponds to a 50-GHz grid
- **1550.92**—1550.92 nm, corresponds to 50-GHz and 100-GHz grids
- **1551.32**—1551.32 nm, corresponds to a 50-GHz grid
- **1551.72**—1551.72 nm, corresponds to 50-GHz and 100-GHz grids
- **1552.12**—1552.12 nm, corresponds to a 50-GHz grid
- **1552.52**—1552.52 nm, corresponds to 50-GHz and 100-GHz grids
- **1552.93**—1552.93 nm, corresponds to a 50-GHz grid
- **1553.33**—1554.33 nm, corresponds to 50-GHz and 100-GHz grids
- **1553.73**—1554.73 nm, corresponds to a 50-GHz grid
- **1554.13**—1554.13 nm, corresponds to 50-GHz and 100-GHz grids
- **1554.54**—1554.54 nm, corresponds to a 50-GHz grid
- **1554.94**—1554.94 nm, corresponds to 50-GHz and 100-GHz grids
- **1555.34**—1555.34 nm, corresponds to a 50-GHz grid
- **1555.75**—1555.75 nm, corresponds to 50-GHz and 100-GHz grids
- **1556.15**—1556.15 nm, corresponds to a 50-GHz grid
- **1556.55**—1556.55 nm, corresponds to 50-GHz and 100-GHz grids
- **1556.96**—1556.96 nm, corresponds to a 50-GHz grid
- **1557.36**—1557.36 nm, corresponds to 50-GHz and 100-GHz grids
- **1557.77**—1557.77 nm, corresponds to a 50-GHz grid
- **1558.17**—1558.17 nm, corresponds to 50-GHz and 100-GHz grids
- **1558.58**—1558.58 nm, corresponds to a 50-GHz grid
- **1558.98**—1558.98 nm, corresponds to 50-GHz and 100-GHz grids
- **1559.39**—1559.39 nm, corresponds to a 50-GHz grid
- **1559.79**—1559.79 nm, corresponds to 50-GHz and 100-GHz grids
- **1560.20**—1560.20 nm, corresponds to a 50-GHz grid
- **1560.61**—1560.61 nm, corresponds to 50-GHz and 100-GHz grids


- **1561.01**—1561.01 nm, corresponds to a 50-GHz grid
 - **1561.42**—1561.42 nm, corresponds to 50-GHz and 100-GHz grids
 - **1561.83**—1561.83 nm, corresponds to a 50-GHz grid
 - **1562.23**—1562.23 nm, corresponds to 50-GHz and 100-GHz grids
 - **1562.64**—1562.64 nm, corresponds to a 50-GHz grid
 - **1563.05**—1563.05 nm, corresponds to 50-GHz and 100-GHz grids
 - **1563.45**—1563.45 nm, corresponds to a 50-GHz grid
 - **1563.86**—1563.86 nm, corresponds to 50-GHz and 100-GHz grids
 - **1564.27**—1564.27 nm, corresponds to a 50-GHz grid
 - **1564.68**—1564.68 nm, corresponds to 50-GHz and 100-GHz grids
 - **1565.09**—1565.09 nm, corresponds to a 50-GHz grid
 - **1565.50**—1565.50 nm, corresponds to 50-GHz and 100-GHz grids
 - **1565.90**—1565.90 nm, corresponds to a 50-GHz grid
 - **1566.31**—1566.31 nm, corresponds to 50-GHz and 100-GHz grids
 - **1566.72**—1566.72 nm, corresponds to a 50-GHz grid
 - **1567.13**—1567.13 nm, corresponds to 50-GHz and 100-GHz grids
 - **1567.54**—1567.54 nm, corresponds to a 50-GHz grid
 - **1567.95**—1567.95 nm, corresponds to 50-GHz and 100-GHz grids
 - **1568.36**—1568.36 nm, corresponds to a 50-GHz grid
 - **1568.77**—1568.77 nm, corresponds to 50-GHz and 100-GHz grids
- Default:** **1550.12**—1550.12 nm, corresponds to 50-GHz and 100-GHz grids

Required Privilege interface—To view this statement in the configuration.
Level interface-control—To add this statement to the configuration.

Related Documentation

- *Ethernet DWDM Interface Wavelength Overview*
- *Configuring the 10-Gigabit or 100-Gigabit Ethernet DWDM Interface Wavelength*
- *show interfaces diagnostics optics (Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, 100-Gigabit Ethernet, and Virtual Chassis Port)*

west-interface

Syntax	<pre> west-interface { node-id mac-address; control-channel channel-name { vlan number; interface name interface-name } interface-none ring-protection-link-end; virtual-control-channel { west-interface name; east-interface name; } } </pre>
Hierarchy Level	[edit protocols protection-group ethernet-ring ring-name]
Release Information	<p>Statement introduced in Junos OS Release 9.5.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.</p>
Description	<p>Define one of the two interface ports for Ethernet ring protection, the other being defined by the east-interface statement at the same hierarchy level. The interface must use the control channel's logical interface name. The control channel is a dedicated VLAN channel for the ring port.</p>
	<p> NOTE: Always configure this port second, after configuring the east-interface statement.</p>
	<p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Ethernet Ring Protection Switching Overview</i> • <i>Ethernet Ring Protection Using Ring Instances for Load Balancing</i> • east-interface on page 589 • ethernet-ring on page 615 • <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i> • <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i>

- *Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)*

working-circuit

Syntax	<code>working-circuit <i>group-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure the working router in an APS circuit pair.
Options	<i>group-name</i> —Circuit's group name.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Basic Automatic Protect Switching</i>• protect-circuit on page 948

yellow-differential-delay

Syntax	<code>yellow-differential-delay <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services and voices interfaces only, configure the yellow differential delay among bundle links to give warning when a link has a differential delay that exceeds the configured threshold.
Options	milliseconds —Yellow differential delay threshold. Range: 1 through 2000 milliseconds Default: 6 milliseconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Junos OS Services Interfaces Library for Routing Devices</i>• action-red-differential-delay on page 432• remote on page 972

z0-increment

Syntax	(z0-increment no-z0-increment);
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure an incremental STM ID rather than a static one.
Default	no-Z0-increment
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring an Incrementing STM ID to Interoperate with Older Equipment in SDH Mode</i>• sonet-options on page 1021

Interface Operational Commands

- [Common Output Fields Description on page 1168](#)
- [Improvements to Interface Transmit Statistics Reporting on page 1176](#)
- [show interfaces](#)
- [show interfaces \(ATM\)](#)
- [show interfaces \(Channelized DS3-to-DS0\)](#)
- [show interfaces \(Channelized DS3-to-DS1\)](#)
- [show interfaces \(Channelized E1 IQ\)](#)
- [show interfaces \(Channelized E1\)](#)
- [show interfaces \(Channelized OC12 IQ and IQE\)](#)
- [show interfaces \(Channelized OC12\)](#)
- [show interfaces \(Channelized OC3 IQ and IQE\)](#)
- [show interfaces \(Channelized STM1 IQ\)](#)
- [show interfaces \(Channelized STM1\)](#)
- [show interfaces \(Channelized T1 IQ\)](#)
- [show interfaces \(Channelized T3 IQ\)](#)
- [show interfaces \(Discard\)](#)
- [show interfaces \(Fast Ethernet\)](#)
- [show interfaces](#)
- [show interfaces \(M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet\)](#)
- [show interfaces \(PPPoE\)](#)
- [show interfaces \(PTX Series Packet Transport Routers\)](#)
- [show interfaces \(SONET/SDH\)](#)
- [show interfaces \(Serial\)](#)
- [show interfaces \(T1, E1, or DS\)](#)
- [show interfaces \(T3 or E3\)](#)
- [show interfaces demux0 \(Demux Interfaces\)](#)
- [show interfaces extensive](#)

- `show interfaces lsi` (Label-Switched Interface)
- `show interfaces media`
- `show interfaces terse`

Common Output Fields Description

This chapter explains the content of the output fields, which appear in the output of most `show interfaces` commands.

Damping Field

For the physical interface, the Damping field shows the setting of the following damping parameters:

- **half-life**—Decay half-life. The number of seconds after which the accumulated interface penalty counter is reduced by half if the interface remains stable.
- **max-suppress**—Maximum hold-down time. The maximum number of seconds that an interface can be suppressed irrespective of how unstable the interface has been.
- **reuse**—Reuse threshold. When the accumulated interface penalty counter falls below this number, the interface is no longer suppressed.
- **suppress**—Cutoff (suppression) threshold. When the accumulated interface penalty counter exceeds this number, the interface is suppressed.
- **state**—Interface damping state. If damping is enabled on an interface, it is suppressed during interface flaps that match the configured damping parameters.

Destination Class Field

For the logical interface, the **Destination class** field provides the names of destination class usage (DCU) counters per family and per class for a particular interface. The counters display packets and bytes arriving from designated user-selected prefixes. For example:

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	1928095	161959980
	(889)	(597762)
bronze	0	0
	(0)	(0)
silver	0	0
	(0)	(0)

Enabled Field

For the physical interface, the **Enabled** field provides information about the state of the interface, displaying one or more of the following values:

- **Administratively down, Physical link is Down**—The interface is turned off, and the physical link is inoperable and cannot pass packets even when it is enabled. To change the interface state to **Enabled**, use the following command:

```
user@host# set interfaces interface enable
```

Manually verify the connections to bring the physical link up.

- **Administratively down, Physical link is Up**—The interface is turned off, but the physical link is operational and can pass packets when it is enabled. To change the interface state to **Enabled**, use the following command:

```
user@host# set interfaces interface enable
```

- **Enabled, Physical link is Down**—The interface is turned on, but the physical link is inoperable and cannot pass packets. Manually verify the connections to bring the physical link up.
- **Enabled, Physical link is Up**—The interface is turned on, and the physical link is operational and can pass packets.

Filters Field

For the logical interface, the **Filters** field provides the name of the firewall filters to be evaluated when packets are received or transmitted on the interface. The format is **Filters: Input: *filter-name* and Filters: Output: *filter-name***. For example:

```
Filters: Input: sample-all
Filters: Output: cp-ftp
```

Flags Fields

The following sections provide information about flags that are specific to interfaces:

- [Addresses, Flags Field on page 1170](#)
- [Device Flags Field on page 1170](#)
- [Family Flags Field on page 1171](#)
- [Interface Flags Field on page 1172](#)
- [Link Flags Field on page 1172](#)
- [Logical Interface Flags Field on page 1173](#)

Addresses, Flags Field

The **Addresses, Flags** field provides information about the addresses configured for the protocol family on the logical interface and displays one or more of the following values:

- **Dest-route-down**—The routing process detected that the link was not operational and changed the interface routes to nonforwarding status
- **Is-Default**—The default address of the router used as the source address by SNMP, ping, traceroute, and other network utilities.
- **Is-Preferred**—The default local address for packets originating from the local router and sent to destinations on the subnet.
- **Is-Primary**—The default local address for broadcast and multicast packets originated locally and sent out the interface.
- **Preferred**—This address is a candidate to become the preferred address.
- **Primary**—This address is a candidate to become the primary address.
- **Trunk**—Interface is a trunk.
- **Trunk, Inter-Switch-Link**—Interface is a trunk, and InterSwitch Link protocol (ISL) is configured on the trunk port of the primary VLAN in order to connect the routers composing the PVLAN to each other.

Device Flags Field

The **Device flags** field provides information about the physical device and displays one or more of the following values:

- **ASIC Error**—Device is down because of ASIC wedging and due to which PFE is disabled.
- **Down**—Device has been administratively disabled.
- **Hear-Own-Xmit**—Device receives its own transmissions.
- **Link-Layer-Down**—The link-layer protocol has failed to connect with the remote endpoint.
- **Loopback**—Device is in physical loopback.
- **Loop-Detected**—The link layer has received frames that it sent, thereby detecting a physical loopback.
- **No-Carrier**—On media that support carrier recognition, no carrier is currently detected.
- **No-Multicast**—Device does not support multicast traffic.
- **Present**—Device is physically present and recognized.
- **Promiscuous**—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media.
- **Quench**—Transmission on the device is quenched because the output buffer is overflowing

- **Recv-All-Multicasts**—Device is in multicast promiscuous mode and therefore provides no multicast filtering.
- **Running**—Device is active and enabled.

Family Flags Field

The **Family flags** field provides information about the protocol family on the logical interface and displays one or more of the following values:

- **DCU**—Destination class usage is enabled.
- **Dest-route-down**—The software detected that the link is down and has stopped forwarding the link's interface routes.
- **Down**—Protocol is inactive.
- **Is-Primary**—Interface is the primary one for the protocol.
- **Mac-Validate-Loose**—Interface is enabled with loose MAC address validation.
- **Mac-Validate-Strict**—Interface is enabled with strict MAC address validation.
- **Maximum labels**—Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.
- **MTU-Protocol-Adjusted**—The effective MTU is not the configured value in the software.
- **No-Redirects**—Protocol redirects are disabled.
- **Primary**—Interface can be considered for selection as the primary family address.
- **Protocol-Down**—Protocol failed to negotiate correctly.
- **SCU-in**—Interface is configured for source class usage input.
- **SCU-out**—Interface is configured for source class usage output.
- **send-bcast-packet-to-re**—Interface is configured to forward IPv4 broadcast packets to the Routing Engine.
- **targeted-broadcast**—Interface is configured to forward IPv4 broadcast packets to the LAN interface and the Routing Engine.
- **Unnumbered**—Protocol family is configured for unnumbered Ethernet. An unnumbered Ethernet interface borrows an IPv4 address from another interface, which is referred to as the donor interface.
- **Up**—Protocol is configured and operational.
- **uRPF**—Unicast Reverse Path Forwarding is enabled.

Interface Flags Field

The **Interface flags** field provides information about the physical interface and displays one or more of the following values:

- **Admin-Test**—Interface is in test mode and some sanity checking, such as loop detection, is disabled.
- **Disabled**—Interface is administratively disabled.
- **Down**—A hardware failure has occurred.
- **Hardware-Down**—Interface is nonfunctional or incorrectly connected.
- **Link-Layer-Down**—Interface keepalives have indicated that the link is incomplete.
- **No-Multicast**—Interface does not support multicast traffic.
- **No-receive No-transmit**—Passive monitor mode is configured on the interface.
- **OAM-On-SVLAN**—(MX Series routers with MPC/MIC interfaces only) Interface is configured to propagate the Ethernet OAM state of a static, single-tagged service VLAN (S-VLAN) on a Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet interface to a dynamic or static double-tagged customer VLAN (C-VLAN) that has the same S-VLAN (outer) tag as the S-VLAN.
- **Point-To-Point**—Interface is point-to-point.
- **Pop all MPLS labels from packets of depth**—MPLS labels are removed as packets arrive on an interface that has the **pop-all-labels** statement configured. The depth value can be one of the following:
 - **1**—Takes effect for incoming packets with one label only.
 - **2**—Takes effect for incoming packets with two labels only.
 - **[1 2]**—Takes effect for incoming packets with either one or two labels.
- **Promiscuous**—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses.
- **Recv-All-Multicasts**—Interface is in multicast promiscuous mode and provides no multicast filtering.
- **SNMP-Traps**—SNMP trap notifications are enabled.
- **Up**—Interface is enabled and operational.

Link Flags Field

The **Link flags** field provides information about the physical link and displays one or more of the following values:

- **ACFC**—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option.
- **Give-Up**—Link protocol does not continue connection attempts after repeated failures.

- **Loose-LCP**—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational.
- **Loose-LMI**—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational.
- **Loose-NCP**—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational.
- **No-Keepalives**—Link protocol keepalives are disabled.
- **PFC**—Protocol field compression is configured. The PPP session negotiates the PFC option.

Logical Interface Flags Field

The **Logical interface flags** field provides information about the logical interface and displays one or more of the following values:

- **ACFC Encapsulation**—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer).
- **Device-down**—Device has been administratively disabled.
- **Disabled**—Interface is administratively disabled.
- **Down**—A hardware failure has occurred.
- **Clear-DF-Bit**—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit.
- **Hardware-Down**—Interface protocol initialization failed to complete successfully.
- **PFC**—Protocol field compression is enabled for the PPP session.
- **Point-To-Point**—Interface is point-to-point.
- **SNMP-Traps**—SNMP trap notifications are enabled.
- **Up**—Interface is enabled and operational.

Label-Switched Interface Traffic Statistics Field

When you use the **vrf-table-label** statement to configure a VRF routing table, a label-switched interface (LSI) logical interface label is created and mapped to the VRF routing table.

Any routes present in a VRF routing table and configured with the **vrf-table-label** statement are advertised with the LSI logical interface label allocated for the VRF routing table. When packets for this VPN arrive on a core-facing interface, they are treated as if the enclosed IP packet arrived on the LSI interface and are then forwarded and filtered based on the correct table. For more information on the **vrf-table-label** statement, including a list of supported interfaces, see the *Junos VPNs Configuration Guide*.

If you configure the **family mpls** statement at the **[edit interfaces interface-name unit logical-unit-number]** hierarchy level and you also configure the **vrf-table-label** statement at the **[edit routing-instances routing-instance-name]** hierarchy level, the output for the

show interface *interface-name* extensive command includes the following output fields about the LSI traffic statistics:

- **Input bytes**—Number of bytes entering the LSI and the current throughput rate in bits per second (bps).
- **Input packets**—Number of packets entering the LSI and the current throughput rate in packets per second (pps).



NOTE: If LSI interfaces are used with VPLS when **no-tunnel-services** is configured or L3VPN when **vrf-table-label** configuration is applied inside the routing-instance, the **Input packets** field associated with the core-facing interfaces may not display the correct value. Only the Input counter is affected because the LSI is used to receive traffic from the remote PEs. Traffic that arrives on an LSI interface might not be counted at both the Traffic Statistics and the Label-switched interface (LSI) traffic statistics levels.

This note applies to the following platforms:

- M Series routers with -E3 FPC model numbers or configured with an Enhanced CFEB (CFEB-E), and M120 routers
- MX Series routers with DPC or ADPC only

The following example shows the LSI traffic statistics that you might see as part of the output of the **show interface *interface-name* extensive** command:

```
Label-switched interface (LSI) traffic statistics:
Input bytes:          0          0 bps
Input packets:       0          0 pps
```

Policer Field

For the logical interface, the **Policer** field provides the policers that are to be evaluated when packets are received or transmitted on the interface. The format is **Policer: Input: *type-fpc/picport*-in-policer, Output: *type-fpc/pic/port*-out-policer**. For example:

```
Policer: Input: at-1/2/0-in-policer, Output: at-2/4/0-out-policer
```

Protocol Field

For the logical interface, the **Protocol** field indicates the protocol family or families that are configured on the interface, displaying one or more of the following values:

- **enet**—Aggregated Ethernet. Displayed on Fast Ethernet interfaces that are part of an aggregated Ethernet bundle.
- **ccc**—Circuit cross-connect (CCC). Configured on the logical interface of CCC physical interfaces.

- **inet**—IP version 4 (IPv4). Configured on the logical interface for IPv4 protocol traffic, including Open Shortest Path First (OSPF), Border Gateway Protocol (BGP), Internet Control Message Protocol (ICMP), and Internet Protocol Control Protocol (IPCP).
- **inet6**—IP version 6 (IPv6). Configured on the logical interface for IPv6 protocol traffic, including Routing Information Protocol for IPv6 (RIPng), Intermediate System-to-Intermediate System (IS-IS), and BGP.
- **iso**—International Organization for Standardization (ISO). Configured on the logical interface for IS-IS traffic.
- **mlfr-uni-nni**—Multilink Frame Relay (MLFR) FRF.16 user-to-network network-to-network (UNI NNI). Configured on the logical interface for link services bundling.
- **mlfr-end-to-end**—Multilink Frame Relay end-to-end. Configured on the logical interface for multilink bundling.
- **mlppp**—Multilink Point-to-Point Protocol (MLPPP). Configured on the logical interface for multilink bundling.
- **mpls**—Multiprotocol Label Switching (MPLS). Configured on the logical interface for participation in an MPLS path.
- **pppoe**—Point-to-Point Protocol over Ethernet (PPPoE). Configured on Ethernet interfaces enabled to support multiple protocol families.
- **tcc**—Translational cross-connect (TCC). Configured on the logical interface of TCC physical interfaces.
- **tnp**—Trivial Network Protocol (TNP). Used to communicate between the Routing Engine and the router's packet forwarding components. The Junos OS automatically configures this protocol family on the router's internal interfaces only.
- **vpls**—Virtual private LAN service (VPLS). Configured on the logical interface on which you configure VPLS.

RPF Failures Field

For the logical interface, the **RPF Failures** field provides information about the amount of incoming traffic (in packets and bytes) that failed a unicast reverse path forwarding (RPF) check on a particular interface. The format is **RPF Failures: Packets: xx,Bytes: yy**. For example:

```
RPF Failures: Packets: 0, Bytes:0
```

Source Class Field

For the logical interface, the **Source class** field provides the names of source class usage (SCU) counters per family and per class for a particular interface. The counters display packets and bytes arriving from designated user-selected prefixes. For example:

Source class	Packets (packet-per-second)	Bytes (bits-per-second)

gold	1928095	161959980
(889)	(597762)
bronze	0	0
(0)	(0)
silver	0	0
(0)	(0)

Improvements to Interface Transmit Statistics Reporting

The offered load on an interface can be defined as the amount of data the interface is capable of transmitting during a given time period. The actual traffic that goes out of the interface is the transmitted load. However, when outgoing interfaces are oversubscribed, there could be traffic drops in the schedulers attached to the outgoing interfaces. Hence, the offered load is not always the same as the actual transmitted load because the offered load calculation does not take into account possible packet drop or traffic loss.

On MX Series routers, the logical interface-level statistics show the offered load, which is often different from the actual transmitted load. To address this limitation, Junos OS introduces a new configuration option in Release 11.4 R3 and later. The new configuration option, **interface-transmit-statistics**, at the **[edit interface *interface-name*]** hierarchy level, enables you to configure Junos OS to accurately capture and report the transmitted load on interfaces.

When the **interface-transmit-statistics** statement is included at the **[edit interface *interface-name*]** hierarchy level, the following operational mode commands report the actual transmitted load:

- **show interface *interface-name* <detail | extensive>**
- **monitor interface *interface-name***
- **show snmp mib get *objectID.ifIndex***

The **show interface *interface-name*** command also shows whether the **interface-transmit-statistics** configuration is enabled or disabled on the interface.

- Related Documentation
- [interface-transmit-statistics on page 714](#)
 - [show interfaces on page 1177](#)

show interfaces

List of Syntax [Syntax \(Gigabit Ethernet\) on page 1177](#)
 [Syntax \(10 Gigabit Ethernet\) on page 1177](#)
 [Syntax \(SRX Series Devices\) on page 1177](#)

Syntax (Gigabit Ethernet) `show interfaces ge-fpc/pic/port`
 `<brief | detail | extensive | terse>`
 `<descriptions>`
 `<media>`
 `<snmp-index snmp-index>`
 `<statistics>`

Syntax (10 Gigabit Ethernet) `show interfaces xe-fpc/pic/port`
 `<brief | detail | extensive | terse>`
 `<descriptions>`
 `<media>`
 `<snmp-index snmp-index>`
 `<statistics>`

Syntax (SRX Series Devices) `show interfaces (`
 `<interface-name>`
 `<brief | detail | extensive | terse>`
 `<controller interface-name>|`
 `<descriptions interface-name>|`
 `<destination-class (all | destination-class-name logical-interface-name)>|`
 `<diagnostics optics interface-name>|`
 `<far-end-interval interface-fpc/pic/port>|`
 `<filters interface-name>|`
 `<flow-statistics interface-name>|`
 `<interval interface-name>|`
 `<load-balancing (detail | interface-name)>|`
 `<mac-database mac-address mac-address>|`
 `<mc-ae id identifier unit number revertive-info>|`
 `<media interface-name>|`
 `<policers interface-name>|`
 `<queue both-ingress-egress egress forwarding-class forwarding-class ingress l2-statistics>|`
 `<redundancy (detail | interface-name)>|`
 `<routing brief detail summary interface-name>|`
 `<routing-instance (all | instance-name)>|`
 `<snmp-index snmp-index>|`
 `<source-class (all | destination-class-name logical-interface-name)>|`
 `<statistics interface-name>|`
 `<switch-port switch-port number>|`
 `<transport pm (all | optics | otn) (all | current | currentday | interval | previousday) (all |`
 `interface-name)>|`
 `<zone interface-name>`
 `)`

Release Information Command introduced before Junos OS Release 7.4 for Gigabit interfaces.
Command introduced in Junos OS Release 8.0 for 10 Gigabit interfaces.
Command modified in Junos OS Release 9.5 for SRX Series devices.
Command introduced in Junos OS Release 18.1 for Gigabit interfaces.

Description Display status information about the specified Gigabit Ethernet interface.

(M320, M120, MX Series, and T Series routers only) Display status information about the specified 10-Gigabit Ethernet interface.

Display the IPv6 interface traffic statistics about the specified Gigabit Ethernet interface for MX series routers. The input and output bytes (bps) and packets (pps) rates are not displayed for IFD and local traffic.

Display status information and statistics about interfaces on SRX Series appliance running Junos OS.



NOTE: On SRX Series appliances, on configuring identical IPs on a single interface, you will not see a warning message; instead, you will see a syslog message.

Starting in Junos OS Release 18.4R1, Output fields **Next-hop** and **vpls-status** is displayed in the **show interfaces *interface name* detail** command, only for Layer 2 protocols on MX480 routers.

Options For Gigabit interfaces:

ge-fpc/pic/port—Display standard information about the specified Gigabit Ethernet interface.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

For 10 Gigabit interfaces:

xe-fpc/pic/port—Display standard information about the specified 10-Gigabit Ethernet interface.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

For SRX interfaces:

- **interface-name**—(Optional) Display standard information about the specified interface. Following is a list of typical interface names. Replace *pim* with the PIM slot and port with the port number.
 - **at-*pim*/0/*port***—ATM-over-ADSL or ATM-over-SHDSL interface.
 - **ce1-*pim*/0/*port***—Channelized E1 interface.
 - **cl-0/0/8**—3G wireless modem interface for SRX320 devices.
 - **ct1-*pim*/0/*port***—Channelized T1 interface.
 - **dl0**—Dialer Interface for initiating ISDN and USB modem connections.
 - **e1-*pim*/0/*port***—E1 interface.
 - **e3-*pim*/0/*port***—E3 interface.
 - **fe-*pim*/0/*port***—Fast Ethernet interface.
 - **ge-*pim*/0/*port***—Gigabit Ethernet interface.
 - **se-*pim*/0/*port***—Serial interface.
 - **t1-*pim*/0/*port***—T1 (also called DS1) interface.
 - **t3-*pim*/0/*port***—T3 (also called DS3) interface.
 - **wx-slot/0/0**—WAN acceleration interface, for the WXC Integrated Services Module (ISM 200).
- **interface-name**—(Optional) Display standard information about the specified interface. Following is a list of typical interface names. Replace *pim* with the PIM slot and port with the port number.
 - **at-*pim*/0/*port***—ATM-over-ADSL or ATM-over-SHDSL interface.
 - **ce1-*pim*/0/*port***—Channelized E1 interface.
 - **cl-0/0/8**—3G wireless modem interface for SRX320 devices.
 - **ct1-*pim*/0/*port***—Channelized T1 interface.
 - **dl0**—Dialer Interface for initiating ISDN and USB modem connections.
 - **e1-*pim*/0/*port***—E1 interface.
 - **e3-*pim*/0/*port***—E3 interface.
 - **fe-*pim*/0/*port***—Fast Ethernet interface.
 - **ge-*pim*/0/*port***—Gigabit Ethernet interface.

- **se-pim/0/port**—Serial interface.
- **t1-pim/0/port**—T1 (also called DS1) interface.
- **t3-pim/0/port**—T3 (also called DS3) interface.
- **wx-slot/0/0**—WAN acceleration interface, for the WXC Integrated Services Module (ISM 200).

Additional Information In a logical system, this command displays information only about the logical interfaces and not about the physical interfaces.

Required Privilege Level view

Release History Table

Release	Description
18.4R1	Starting in Junos OS Release 18.4R1, Output fields Next-hop and vpls-status is displayed in the show interfaces interface name detail command, only for Layer 2 protocols on MX480 routers.

Related Documentation

- [Understanding Layer 2 Interfaces on Security Devices](#)
- [Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration](#)
- [Verifying and Managing Configurations for Dynamic VLANs Based on Access-Line Identifiers](#)

List of Sample Output

- [show interfaces \(Gigabit Ethernet\) on page 1218](#)
- [show interfaces \(Gigabit Ethernet on MX Series Routers\) on page 1218](#)
- [show interfaces \(link degrade status\) on page 1219](#)
- [show interfaces extensive \(Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration\) on page 1219](#)
- [show interfaces brief \(Gigabit Ethernet\) on page 1220](#)
- [show interfaces detail \(Gigabit Ethernet\) on page 1220](#)
- [show interfaces extensive \(Gigabit Ethernet IQ2\) on page 1222](#)
- [show interfaces \(Gigabit Ethernet Unnumbered Interface\) on page 1225](#)
- [show interfaces \(ACI Interface Set Configured\) on page 1225](#)
- [show interfaces \(ALI Interface Set\) on page 1226](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, IQ2\) on page 1226](#)
- [show interfaces extensive \(10-Gigabit Ethernet, WAN PHY Mode\) on page 1228](#)
- [show interfaces extensive \(10-Gigabit Ethernet, DWDM OTN PIC\) on page 1230](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode\) on page 1233](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only\) on page 1233](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only\) on page 1234](#)

[Sample Output SRX Gigabit Ethernet on page 1235](#)
[Sample Output SRX Gigabit Ethernet on page 1236](#)
[show interfaces detail \(Gigabit Ethernet\) on page 1236](#)
[show interfaces statistics st0.0 detail on page 1238](#)
[show interfaces extensive \(Gigabit Ethernet\) on page 1239](#)
[show interfaces terse on page 1242](#)
[show interfaces controller \(Channelized E1 IQ with Logical E1\) on page 1242](#)
[show interfaces controller \(Channelized E1 IQ with Logical DS0\) on page 1243](#)
[show interfaces descriptions on page 1243](#)
[show interfaces destination-class all on page 1243](#)
[show interfaces diagnostics optics on page 1243](#)
[show interfaces far-end-interval coc12-5/2/0 on page 1244](#)
[show interfaces far-end-interval coc1-5/2/1:1 on page 1245](#)
[show interfaces filters on page 1245](#)
[show interfaces flow-statistics \(Gigabit Ethernet\) on page 1245](#)
[show interfaces interval \(Channelized OC12\) on page 1246](#)
[show interfaces interval \(E3\) on page 1247](#)
[show interfaces interval \(SONET/SDH\) \(SRX devices\) on page 1247](#)
[show interfaces load-balancing \(SRX devices\) on page 1247](#)
[show interfaces load-balancing detail \(SRX devices\) on page 1248](#)
[show interfaces mac-database \(All MAC Addresses on a Port SRX devices\) on page 1248](#)
[show interfaces mac-database \(All MAC Addresses on a Service SRX devices\) on page 1248](#)
[show interfaces mac-database mac-address on page 1249](#)
[show interfaces mc-ae \(SRX devices\) on page 1249](#)
[show interfaces media \(SONET/SDH\) on page 1250](#)
[show interfaces policers \(SRX devices\) on page 1250](#)
[show interfaces policers interface-name \(SRX devices\) on page 1250](#)
[show interfaces queue \(SRX devices\) on page 1251](#)
[show interfaces redundancy \(SRX devices\) on page 1252](#)
[show interfaces redundancy \(Aggregated Ethernet SRX devices\) on page 1252](#)
[show interfaces redundancy detail \(SRX devices\) on page 1252](#)
[show interfaces routing brief \(SRX devices\) on page 1252](#)
[show interfaces routing detail \(SRX devices\) on page 1253](#)
[show interfaces routing-instance all \(SRX devices\) on page 1253](#)
[show interfaces snmp-index \(SRX devices\) on page 1254](#)
[show interfaces source-class all \(SRX devices\) on page 1254](#)
[show interfaces statistics \(Fast Ethernet SRX devices\) on page 1254](#)
[show interfaces switch-port \(SRX devices\) on page 1255](#)
[show interfaces transport pm \(SRX devices\) on page 1255](#)
[show security zones \(SRX devices\) on page 1257](#)

Output Fields [Table 56 on page 1182](#) describes the output fields for the **show interfaces** (Gigabit Ethernet) command. Output fields are listed in the approximate order in which they appear. For Gigabit Ethernet IQ and IQE PICs, the traffic and MAC statistics vary by interface type. For more information, see [Table 57 on page 1210](#).

Table 56: show interfaces (Gigabit Ethernet) Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
LAN-PHY mode	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
WAN-PHY mode	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
Unidirectional	Unidirectional link mode status for 10-Gigabit Ethernet interface: Enabled or Disabled for parent interface; Rx-only or Tx-only for child interfaces.	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels
Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> • Online—Autonegotiation is manually configured as online. • Offline—Autonegotiation is manually configured as offline. 	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Link flags	Information about the link. Possible values are described in the “Links Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Wavelength	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
Frequency	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Schedulers	(Gigabit Ethernet intelligent queuing 2 [IQ2] interfaces only) Number of CoS schedulers configured.	extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds (ms).	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
Output Rate	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Egress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	detail extensive
Ingress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	detail extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Output bytes—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the show interfaces command.</p>	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the Drops field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number must always be 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field must never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	<p>Total number of egress queues supported on the specified interface.</p> <p>NOTE: In DPCs that are not of the enhanced type, such as DPC 40x 1GER, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the show interfaces command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	detail extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Queue counters (Egress)	CoS queue number and its associated user-configured forwarding class name. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the Dropped packets field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>	detail extensive
Ingress queues	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	extensive
Queue counters (Ingress)	CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive
Active alarms and Active defects	Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link . <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
Interface transmit statistics	(On MX Series devices) Status of the interface-transmit-statistics configuration: Enabled or Disabled. <ul style="list-style-type: none"> • Enabled—When the interface-transmit-statistics statement is included in the configuration. If this is configured, the interface statistics show the actual transmitted load on the interface. • Disabled—When the interface-transmit-statistics statement is not included in the configuration. If this is not configured, the interface statistics show the offered load on the interface. 	detail extensive
OTN FEC statistics	The forward error correction (FEC) counters provide the following statistics: <ul style="list-style-type: none"> • Corrected Errors—Count of corrected errors in the last second. • Corrected Error Ratio—Corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits. 	detail extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
PCS statistics	<p>(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device.</p> <ul style="list-style-type: none"> • Bit errors—Number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode. • Errored blocks—Number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode. 	detail extensive
Link Degrad	<p>Shows the link degrade status of the physical link and the estimated bit error rates (BERs). This field is available only for the PICs supporting the physical link monitoring feature.</p> <ul style="list-style-type: none"> • Link Monitoring—Indicates if physical link degrade monitoring is enabled on the interface. <ul style="list-style-type: none"> • Enable—Indicates that link degrade monitoring has been enabled (using the link-degrade-monitor statement) on the interface. • Disable—Indicates that link degrade monitoring has not been enabled on the interface. If link degrade monitoring has not been enabled, the output does not show any related information, such as BER values and thresholds. • Link Degrad Set Threshold—The BER threshold value at which the link is considered degraded and a corrective action is triggered. • Link Degrad Clear Threshold—The BER threshold value at which the degraded link is considered recovered and the corrective action applied to the interface is reverted. • Estimated BER—The estimated bit error rate. • Link-degrade event—Shows link degrade event information. <ul style="list-style-type: none"> • Seconds—Time (in seconds) elapsed after a link degrade event occurred. • Count—The number of link degrade events recorded. • State—Shows the link degrade status (example: Defect Active). 	detail extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the <code>show interfaces</code> command. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> • Packet length exceeds interface MTU, or • Packet length exceeds MRU • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. <p>NOTE: The 20-port Gigabit Ethernet MIC (MIC-3D-20GE-SFP) does not have hardware counters for VLAN frames. Therefore, the VLAN tagged frames field displays 0 when the <code>show interfaces</code> command is executed on a 20-port Gigabit Ethernet MIC. In other words, the number of VLAN tagged frames cannot be determined for the 20-port Gigabit Ethernet MIC.</p> • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet may enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field must increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field must not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields must be 0. 	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PHY Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
WIS section	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
WIS line	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
WIS path	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner—Information from the remote Ethernet device: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the link partner, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the link partner. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), Symmetric/Asymmetric (link partner supports PAUSE on receive and transmit or only PAUSE on transmit), and None (link partner does not support flow control). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the local Ethernet device: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the local device. For Gigabit Ethernet interfaces, advertised capabilities are Symmetric/Asymmetric (local device supports PAUSE on receive and transmit or only PAUSE on receive) and None (local device does not support flow control). Depending on the result of the negotiation with the link partner, local resolution flow control type will display Symmetric (local device supports PAUSE on receive and transmit), Asymmetric (local device supports PAUSE on receive), and None (local device does not support flow control). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive). 	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 56: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “ Common Output Fields Description ” on page 1168.	All levels

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags.</p> <ul style="list-style-type: none"> push—An outer VLAN tag is pushed in front of the existing VLAN tag. pop—The outer VLAN tag of the incoming frame is removed. swap—The outer VLAN tag of the incoming frame is overwritten with the user-specified VLAN tag information. push—An outer VLAN tag is pushed in front of the existing VLAN tag. push-push—Two VLAN tags are pushed in from the incoming frame. swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user-specified VLAN tag value. pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none
Demux	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> Source Family Inet Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
ACI VLAN	<p>Information displayed for agent circuit identifier (ACI) interface set configured with the agent-circuit-id autoconfiguration stanza.</p> <p>Dynamic Profile—Name of the dynamic profile that defines the ACI interface set.</p> <p>If configured, the ACI interface set enables the underlying Ethernet interface to create dynamic VLAN subscriber interfaces based on ACI information.</p> <p>NOTE: The ACI VLAN field is replaced with the Line Identity field when an ALI interface set is configured with the line-identity autoconfiguration stanza.</p>	brief detail extensive none
Line Identity	<p>Information displayed for access-line-identifier (ALI) interface sets configured with the line-identity autoconfiguration stanza.</p> <ul style="list-style-type: none"> Dynamic Profile—Name of the dynamic profile that defines the ALI interface set. Trusted option used to create the ALI interface set: Circuit-id, Remote-id, or Accept-no-ids. More than one option can be configured. <p>If configured, the ALI interface set enables the underlying Ethernet interface to create dynamic VLAN subscriber interfaces based on ALI information.</p> <p>NOTE: The Line Identity field is replaced with the ACI VLAN field when an ACI interface set is configured with the agent-circuit-id autoconfiguration stanza.</p>	detail

Table 56: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under “Common Output Fields Description” on page 1168 .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Neighbor Discovery Protocol (NDP) Queue Statistics	NDP statistics for protocol inet6 under logical interface statistics. <ul style="list-style-type: none"> • Max nh cache—Maximum interface neighbor discovery nexthop cache size. • New hold nh limit—Maximum number of new unresolved nexthops. • Curr nh cnt—Current number of resolved nexthops in the NDP queue. • Curr new hold cnt—Current number of unresolved nexthops in the NDP queue. • NH drop cnt—Number of NDP requests not serviced. 	All levels
Dynamic Profile	Name of the dynamic profile that was used to create this interface configured with a Point-to-Point Protocol over Ethernet (PPPoE) family.	detail extensive none
Service Name Table	Name of the service name table for the interface configured with a PPPoE family.	detail extensive none
Max Sessions	Maximum number of PPPoE logical interfaces that can be activated on the underlying interface.	detail extensive none
Duplicate Protection	State of PPPoE duplicate protection: On or Off . When duplicate protection is configured for the underlying interface, a dynamic PPPoE logical interface cannot be activated when an existing active logical interface is present for the same PPPoE client.	detail extensive none
Direct Connect	State of the configuration to ignore DSL Forum VSAs: On or Off . When configured, the router ignores any of these VSAs received from a directly connected CPE device on the interface.	detail extensive none
AC Name	Name of the access concentrator.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the router.	extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Transit statistics	Number and rate of bytes and packets transiting the switch. NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the "Family Flags" section under "Common Output Fields Description" on page 1168 .	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the "Addresses Flags" section under "Common Output Fields Description" on page 1168 .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about the address flag. Possible values are described in the "Addresses Flags" section under "Common Output Fields Description" on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none

Table 56: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

The following table describes the output fields for the **show interfaces** (10-Gigabit Ethernet) command.

Field Name	Field Description	Level of Output
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168.	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
LAN-PHY mode	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
WAN-PHY mode	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
Unidirectional	Unidirectional link mode status for 10-Gigabit Ethernet interface: Enabled or Disabled for parent interface; Rx-only or Tx-only for child interfaces.	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels

Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none">• Online—Autonegotiation is manually configured as online.• Offline—Autonegotiation is manually configured as offline.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Link flags	Information about the link. Possible values are described in the “Links Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Wavelength	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
Frequency	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Schedulers	(Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified
Output Rate	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Egress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	detail extensive
Ingress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	detail extensive

Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Output bytes—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	<p>Total number of egress queues supported on the specified interface.</p> <p>NOTE: In DPCs that are not of the enhanced type, such as DPC 40x 1GE R, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the show interfaces command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	detail extensive
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Ingress queues	<p>Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.</p>	extensive

Queue counters (Ingress)	CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive
Active alarms and Active defects	Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the routing device configuration, an alarm can ring the red or yellow alarm bell on the routing device, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link . <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
OTN alarms	Active OTN alarms identified on the interface.	detail extensive
OTN defects	OTN defects received on the interface.	detail extensive
OTN FEC Mode	The FECmode configured on the interface. <ul style="list-style-type: none"> • efec—Enhanced forward error correction (EFEC) is configured to detect and correct bit errors. • gfec—G.709 Forward error correction (GFEC) mode is configured to detect and correct bit errors. • none—FEC mode is not configured. 	detail extensive
OTN Rate	OTN mode. <ul style="list-style-type: none"> • fixed-stuff-bytes—Fixed stuff bytes 11.0957 Gbps. • no-fixed-stuff-bytes—No fixed stuff bytes 11.0491 Gbps. • pass-through—Enable OTN passthrough mode. • no-pass-through—Do not enable OTN passthrough mode. 	detail extensive
OTN Line Loopback	Status of the line loopback, if configured for the DWDM OTN PIC. Its value can be: enabled or disabled .	detail extensive
OTN FEC statistics	The forward error correction (FEC) counters for the DWDM OTN PIC. <ul style="list-style-type: none"> • Corrected Errors—The count of corrected errors in the last second. • Corrected Error Ratio—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits. 	detail extensive
OTN FEC alarms	OTN FEC excessive or degraded error alarms triggered on the interface. <ul style="list-style-type: none"> • FEC Degrade—OTU FEC Degrade defect. • FEC Excessive—OTU FEC Excessive Error defect. 	detail extensive

OTN OC	OTN OC defects triggered on the interface. <ul style="list-style-type: none">• LOS—OC Loss of Signal defect.• LOF—OC Loss of Frame defect.• LOM—OC Loss of Multiframe defect.• Wavelength Lock—OC Wavelength Lock defect.	detail extensive
OTN OTU	OTN OTU defects detected on the interface <ul style="list-style-type: none">• AIS—OTN AIS alarm.• BDI—OTN OTU BDI alarm.• IAE—OTN OTU IAE alarm.• TTIM—OTN OTU TTIM alarm.• SF—OTN ODU bit error rate fault alarm.• SD—OTN ODU bit error rate defect alarm.• TCA-ES—OTN ODU ES threshold alarm.• TCA-SES—OTN ODU SES threshold alarm.• TCA-UAS—OTN ODU UAS threshold alarm.• TCA-BBE—OTN ODU BBE threshold alarm.• BIP—OTN ODU BIP threshold alarm.• BBE—OTN OTU BBE threshold alarm.• ES—OTN OTU ES threshold alarm.• SES—OTN OTU SES threshold alarm.• UAS—OTN OTU UAS threshold alarm.	detail extensive
Received DAPI	Destination Access Port Interface (DAPI) from which the packets were received.	detail extensive
Received SAPI	Source Access Port Interface (SAPI) from which the packets were received.	detail extensive
Transmitted DAPI	Destination Access Port Interface (DAPI) to which the packets were transmitted.	detail extensive
Transmitted SAPI	Source Access Port Interface (SAPI) to which the packets were transmitted.	detail extensive
PCS statistics	(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device. <ul style="list-style-type: none">• Bit errors—The number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode.• Errored blocks—The number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode.	detail extensive

MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—Number of frames that exceed 1518 octets. • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none">• Input packet count—Number of packets received from the MAC hardware that the filter processed.• Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.• Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the routing device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local routing device (which the routing device is rejecting).• Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.• Output packet count—Number of packets that the filter has given to the MAC hardware.• Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.• Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.• CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0.	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none">• Seconds—Number of seconds the defect has been active.• Count—Number of times that the defect has gone from inactive to active.• State—State of the error. Any state other than OK indicates a problem.	extensive

WIS section	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
WIS line	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

WIS path	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information. extensive</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path)
Autonegotiation information	<p>Information about link autonegotiation. extensive</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the attached Ethernet device, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is None. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the link partner: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive).

Received path trace, Transmitted path trace	(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the routing device at the other end of the fiber. The transmitted path trace value is the message that this routing device transmits.	extensive
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels

VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags.</p> <ul style="list-style-type: none"> • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • pop—The outer VLAN tag of the incoming frame is removed. • swap—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information. • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • push-push—Two VLAN tags are pushed in from the incoming frame. • swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. • swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value. • pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. • pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none
Demux:	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> • Source Family Inet • Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under “Common Output Fields Description” on page 1168 .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the routing device.	extensive

Transit statistics	Number and rate of bytes and packets transiting the switch. NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about address flag (possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interlace.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

For Gigabit Ethernet IQ PICs, traffic and MAC statistics output varies. The following table describes the traffic and MAC statistics for two sample interfaces, each of which is sending traffic in packets of 500 bytes (including 478 bytes for the Layer 3 packet, 18 bytes for the Layer 2 VLAN traffic header, and 4 bytes for cyclic redundancy check [CRC] information). The **ge-0/3/0** interface is the inbound physical interface, and the **ge-0/0/0** interface is the outbound physical interface. On both interfaces, traffic is carried on logical unit **.50** (VLAN 50).

Table 57: Gigabit and 10 Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type

Interface Type	Sample Command	Byte and Octet Counts Include	Comments
Inbound physical interface	show interfaces ge-0/3/0 extensive	Traffic statistics: Input bytes: 496 bytes per packet, representing the Layer 2 packet MAC statistics: Received octets: 500 bytes per packet, representing the Layer 2 packet + 4 bytes	The additional 4 bytes are for the CRC.
Inbound logical interface	show interfaces ge-0/3/0.50 extensive	Traffic statistics: Input bytes: 478 bytes per packet, representing the Layer 3 packet	
Outbound physical interface	show interfaces ge-0/0/0 extensive	Traffic statistics: Input bytes: 490 bytes per packet, representing the Layer 3 packet + 12 bytes MAC statistics: Received octets: 478 bytes per packet, representing the Layer 3 packet	For input bytes, the additional 12 bytes include 6 bytes for the destination MAC address plus 4 bytes for VLAN plus 2 bytes for the Ethernet type.
Outbound logical interface	show interfaces ge-0/0/0.50 extensive	Traffic statistics: Input bytes: 478 bytes per packet, representing the Layer 3 packet	

[Table 58 on page 1211](#) lists the output fields for the **show interfaces** command. Output fields are listed in the approximate order in which they appear.

Table 58: show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface.	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Link-level type	Encapsulation being used on the physical interface.	All levels
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
MTU	Maximum transmission unit size on the physical interface.	All levels
Link mode	Link mode: Full-duplex or Half-duplex.	
Speed	Speed at which the interface is running.	All levels
BPDU error	Bridge protocol data unit (BPDU) error: Detected or None	
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels
Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> • Online—Autonegotiation is manually configured as online. • Offline—Autonegotiation is manually configured as offline. 	All levels
Device flags	Information about the physical device.	All levels
Interface flags	Information about the interface.	All levels
Link flags	Information about the physical link.	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Current address	Configured MAC address.	detail extensive none

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None
Output Rate	Output rate in bps and pps.	None
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. These fields can contain the value None or Link.</p> <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface.</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <code>ignore-l3-incompletes</code>. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<p>Output errors on the interface.</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation; therefore, for Gigabit Ethernet PICs, this number must always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field must never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Ingress queues	Total number of ingress queues supported on the specified interface.	extensive
Queue counters and queue number	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> • Packet length exceeds 1518 octets, or • Packet length exceeds MRU • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local device (which the router is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields must be 0. 	extensive
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. 	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Interface transmit statistics	Status of the interface-transmit-statistics configuration: Enabled or Disabled.	detail extensive
Queue counters (Egress)	CoS queue number and its associated user-configured forwarding class name. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface.	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Traffic statistics	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Local statistics	Number and rate of bytes and packets destined to the device.	extensive
Transit statistics	<p>Number and rate of bytes and packets transiting the switch.</p> <p>NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.</p>	extensive
Security	Security zones that interface belongs to.	extensive
Flow Input statistics	Statistics on packets received by flow module.	extensive
Flow Output statistics	Statistics on packets sent by flow module.	extensive
Flow error statistics (Packets dropped due to)	Statistics on errors in the flow module.	extensive
Protocol	Protocol family.	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. .	detail extensive
Addresses, Flags	Information about the address flags..	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output Gigabit Ethernet

show interfaces (Gigabit Ethernet)

```
user@host> show interfaces ge-3/0/2
```

```
Physical interface: ge-3/0/2, Enabled, Physical link is Up
  Interface index: 167, SNMP ifIndex: 35
  Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues    : 4 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:7c, Hardware address: 00:00:5e:00:53:7c
  Last flapped  : 2006-08-10 17:25:10 PDT (00:01:08 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Ingress rate at Packet Forwarding Engine : 0 bps (0 pps)
  Ingress drop rate at Packet Forwarding Engine : 0 bps (0 pps)
  Active alarms : None
  Active defects : None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69)
  Flags: SNMP-Traps 0x4000
  VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
  0x8100.512 0x8100.513)
  Encapsulation: VLAN-CCC
  Egress account overhead: 100
  Ingress account overhead: 90
  Input packets : 0
  Output packets: 0
  Protocol ccc, MTU: 1522
  Flags: Is-Primary
```

show interfaces (Gigabit Ethernet on MX Series Routers)

```
user@host> show interfaces ge-2/2/2
```

```
Physical interface: ge-2/2/2, Enabled, Physical link is Up
  Interface index: 156, SNMP ifIndex: 188
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, MAC-REWRITE Error: None,
  Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 4 maximum usable queues
  Schedulers     : 0
  Current address: 00:00:5e:00:53:c0, Hardware address: 00:00:5e:00:53:76
  Last flapped  : 2008-09-05 16:44:30 PDT (3d 01:04 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Active alarms : None
  Active defects : None
  Logical interface ge-2/2/2.0 (Index 82) (SNMP ifIndex 219)
    Flags: Up SNMP-Traps 0x4004000 Encapsulation: ENET2
    Input packets : 10232
    Output packets: 10294
```

```

Protocol inet, MTU: 1500
  Flags: Sendbroadcast-pkt-to-re
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255
Protocol inet6, MTU: 1500
  Max nh cache: 4, New hold nh limit: 100000, Curr nh cnt: 4, Curr new hold
  cnt: 4, NH drop cnt: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 2001:db8:/32, Local: 2001:db8::5
  Addresses, Flags: Is-Preferred
    Destination: 2001:db8:1::/32, Local: 2001:db8:223:9cff:fe9f:3e78
Protocol multiservice, MTU: Unlimited
  Flags: Is-Primary

```

show interfaces (link degrade status)

```
user@host> show interfaces et-3/0/0
```

```

Physical interface: et-3/0/0, Enabled, Physical link is Down
  Interface index: 157, SNMP ifIndex: 537
  Link-level type: Ethernet, MTU: 1514, MRU: 0, Speed: 100Gbps, BPDU Error: None,
  Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running Down
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 8 maximum usable queues
  Current address: 54:e0:32:23:9d:38, Hardware address: 54:e0:32:23:9d:38
  Last flapped  : 2014-06-18 02:36:38 PDT (02:50:50 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Active alarms : LINK
  Active defects: LINK
  PCS statistics
    Bit errors          : 0
    Errored blocks      : 0
  Link Degrade* :
  Link Monitoring    : Enable
  Link Degrade Set Threshold: 1E-7
  Link Degrade Clear Threshold: 1E-12
  Estimated BER      : 1E-7
  Link-degrade event : Seconds      Count      State
                      782             1      Defect Active

```

show interfaces extensive (Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration)

```
user@host> show interfaces ge-2/1/2 extensive | match "output|interface"
```

```

Physical interface: ge-2/1/2, Enabled, Physical link is Up
  Interface index: 151, SNMP ifIndex: 530, Generation: 154
  Interface flags: SNMP-Traps Internal: 0x4000
    Output bytes : 240614363944 772721536 bps
    Output packets: 3538446506 1420444 pps
    Direction : Output
  Interface transmit statistics: Enabled

  Logical interface ge-2/1/2.0 (Index 331) (SNMP ifIndex 955) (Generation 146)

```

Output bytes :	195560312716	522726272 bps
Output packets:	4251311146	1420451 pps

```
user@host> show interfaces ge-5/2/0.0 statistics detail
```

```
Logical interface ge-5/2/0.0 (Index 71) (SNMP ifIndex 573) (Generation 135)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes :          271524
  Output bytes :        37769598
  Input packets:          3664
  Output packets:       885790
IPv6 transit statistics:
  Input bytes :           0
  Output bytes :       16681118
  Input packets:          0
  Output packets:       362633
Local statistics:
  Input bytes :          271524
  Output bytes :       308560
  Input packets:          3664
  Output packets:       3659
Transit statistics:
  Input bytes :           0
  Output bytes :       37461038
  Input packets:          0
  Output packets:       882131
IPv6 transit statistics:
  Input bytes :           0
  Output bytes :       16681118
  Input packets:          0
  Output packets:       362633
                                0 bps
                                0 bps
                                0 pps
                                0 pps
                                0 bps
                                0 bps
                                0 pps
                                0 pps
```

show interfaces brief (Gigabit Ethernet)

```
user@host> show interfaces ge-3/0/2 brief
```

```
Physical interface: ge-3/0/2, Enabled, Physical link is Up
Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None

Logical interface ge-3/0/2.0
Flags: SNMP-Traps 0x4000
VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
0x8100.512 0x8100.513)
Encapsulation: VLAN-CCC
ccc

Logical interface ge-3/0/2.32767
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2
```

show interfaces detail (Gigabit Ethernet)

```
user@host> show interfaces ge-3/0/2 detail
```



```

Physical interface: ge-3/0/2, Enabled, Physical link is Up
Interface index: 167, SNMP ifIndex: 35, Generation: 177
Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 4 supported, 4 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:7c, Hardware address: 00:00:5e:00:53:7c
Last flapped  : 2006-08-09 17:17:00 PDT (01:31:33 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:                0                0 pps
Output packets:              0                0 pps
Ingress traffic statistics at Packet Forwarding Engine:
Input bytes :                0                0 bps
Input packets:              0                0 pps
Drop bytes :                0                0 bps
Drop packets:              0                0 pps
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort                0                0                0
  1 expedited-fo                0                0                0
  2 assured-forw                0                0                0
  3 network-cont                0                0                0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort                0                0                0
  1 expedited-fo                0                0                0
  2 assured-forw                0                0                0
  3 network-cont                0                0                0

Active alarms : None
Active defects : None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69) (Generation 140)
Flags: SNMP-Traps 0x4000
VLAN-Tag [0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530)
Out(swap-push 0x8100.512 0x8100.513)
Encapsulation: VLAN-CCC
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
Input bytes :                0
Output bytes :                0
Input packets:              0
Output packets:              0

```

```

Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol ccc, MTU: 1522, Generation: 149, Route table: 0
Flags: Is-Primary

Logical interface ge-3/0/2.32767 (Index 71) (SNMP ifIndex 70)
(Generation 139)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps

```

show interfaces extensive (Gigabit Ethernet IQ2)

user@host> show interfaces ge-7/1/3 extensive

```

Physical interface: ge-7/1/3, Enabled, Physical link is Up
Interface index: 170, SNMP ifIndex: 70, Generation: 171
Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4004000
Link flags : None
CoS queues : 8 supported, 4 maximum usable queues
Schedulers : 256
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:74, Hardware address: 00:00:5e:00:53:74
Last flapped : 2007-11-07 21:31:41 PST (02:03:33 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 38910844056 7952 bps
  Output bytes : 7174605 8464 bps
  Input packets: 418398473 11 pps
  Output packets: 78903 12 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0

```

```

Ingress traffic statistics at Packet Forwarding Engine:
Input bytes :          38910799145          7952 bps
Input packets:         418397956           11 pps
Drop bytes :           0                0 bps
Drop packets:          0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          418390823          418390823              0

  1 expedited-fo              0              0              0

  2 assured-forw              0              0              0

  3 network-cont           7133           7133              0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          1031          1031              0

  1 expedited-fo              0              0              0

  2 assured-forw              0              0              0

  3 network-cont          77872          77872              0

Active alarms : None
Active defects : None
MAC statistics:
  Total octets          38910844056          7174605
  Total packets         418398473          78903
  Unicast packets       408021893366          1026
  Broadcast packets          10              12
  Multicast packets      418398217          77865
  CRC/Align errors              0              0
  FIFO errors                0              0
  MAC control frames          0              0
  MAC pause frames           0              0
  Oversized frames           0
  Jabber frames              0
  Fragment frames            0
  VLAN tagged frames         0
  Code violations            0 OTN Received Overhead Bytes:
  APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58
  Payload Type: 0x08
OTN Transmitted Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x08
Filter statistics:
  Input packet count          418398473
  Input packet rejects        479

```

```

Input DA rejects          479
Input SA rejects          0
Output packet count              78903
Output packet pad count          0
Output packet error count        0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: Symmetric/Asymmetric,
Remote fault: OK
Local resolution:
Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
Destination slot: 7
CoS information:
Direction : Output
CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                        %      bps      %      usec
0 best-effort           95      950000000  95          0
low none
3 network-control       5      500000000   5          0
low none
Direction : Input
CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                        %      bps      %      usec
0 best-effort           95      950000000  95          0
low none
3 network-control       5      500000000   5          0
low none

Logical interface ge-7/1/3.0 (Index 70) (SNMP ifIndex 85) (Generation 150)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes :      812400
Output bytes :    1349206
Input packets:      9429
Output packets:    9449
IPv6 transit statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:      0
Local statistics:
Input bytes :      812400
Output bytes :    1349206
Input packets:      9429
Output packets:    9449
Transit statistics:
Input bytes :      0      7440 bps
Output bytes :      0      7888 bps
Input packets:      0      10 pps
Output packets:      0      11 pps
IPv6 transit statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:      0
Protocol inet, MTU: 1500, Generation: 169, Route table: 0
Flags: Is-Primary, Mac-Validate-Strict

```

```

Mac-Validate Failures: Packets: 0, Bytes: 0
Addresses, Flags: Is-Preferred Is-Primary
Input Filters: F1-ge-3/0/1.0-in, F3-ge-3/0/1.0-in
Output Filters: F2-ge-3/0/1.0-out (53)
Destination: 203.0.113/24, Local: 203.0.113.2, Broadcast: 203.0.113.255,
Generation: 196
Protocol multiservice, MTU: Unlimited, Generation: 170, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```

NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics displayed in the **show interfaces** command output might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the interface counters. For detailed information, see the description of the logical interface **Transit statistics** fields in [Table 56 on page 1182](#).

show interfaces (Gigabit Ethernet Unnumbered Interface)

```
user@host> show interfaces ge-3/2/0
```

```

Physical interface: ge-3/2/0, Enabled, Physical link is Up
Interface index: 148, SNMP ifIndex: 50
Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues     : 8 supported, 4 maximum usable queues
Current address: 00:00:5e:00:53:f8, Hardware address: 00:00:5e:00:53:f8
Last flapped   : 2006-10-27 04:42:23 PDT (08:01:52 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 624 bps (1 pps)
Active alarms  : None
Active defects : None

Logical interface ge-3/2/0.0 (Index 67) (SNMP ifIndex 85)
Flags: SNMP-Traps Encapsulation: ENET2
Input packets : 0
Output packets: 6
Protocol inet, MTU: 1500
Flags: Unnumbered
Donor interface: lo0.0 (Index 64)
Preferred source address: 203.0.113.22

```

show interfaces (ACI Interface Set Configured)

```
user@host> show interfaces ge-1/0/0.4001
```

```

Logical interface ge-1/0/0.4001 (Index 340) (SNMP ifIndex 548)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.4001 ] Encapsulation: PPP-over-

Ethernet
ACI VLAN:
  Dynamic Profile: aci-vlan-set-profile
PPPoE:

```

```

Dynamic Profile: aci-vlan-pppoe-profile,
Service Name Table: None,
Max Sessions: 32000, Max Sessions VSA Ignore: Off,
Duplicate Protection: On, Short Cycle Protection: Off,
Direct Connect: Off,
AC Name: nbc
Input packets : 9
Output packets: 8
Protocol multiservice, MTU: Unlimited

```

show interfaces (ALI Interface Set)

```
user@host> show interfaces ge-1/0/0.10
```

```

Logical interface ge-1/0/0.10 (Index 346) (SNMP ifIndex 554) (Generation 155)
Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.10 ] Encapsulation: ENET2
Line Identity:
  Dynamic Profile: ali-set-profile
  Circuit-id Remote-id Accept-no-ids
PPPoE:
  Dynamic Profile: ali-vlan-pppoe-profile,
  Service Name Table: None,
  Max Sessions: 32000, Max Sessions VSA Ignore: Off,
  Duplicate Protection: On, Short Cycle Protection: Off,
  Direct Connect: Off,
  AC Name: nbc
  Input packets : 9
  Output packets: 8
  Protocol multiservice, MTU: Unlimited

```

Sample Output Gigabit Ethernet

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, IQ2)

```
user@host> show interfaces xe-5/0/0 extensive
```

```

Physical interface: xe-5/0/0, Enabled, Physical link is Up
Interface index: 177, SNMP ifIndex: 99, Generation: 178
Link-level type: Ethernet, MTU: 1518, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Enabled,
Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 4 maximum usable queues
Schedulers : 1024
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:f6, Hardware address: 00:00:5e:00:53:f6
Last flapped : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes : 6970332384 0 bps
Output bytes : 0 0 bps
Input packets: 81050506 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0

```

```

Output packets:                0
Ingress traffic statistics at Packet Forwarding Engine:
Input bytes :                  6970299398      0 bps
Input packets:                 81049992       0 pps
Drop bytes :                    0             0 bps
Drop packets:                  0             0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0,
  MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      81049992      81049992      0
  1 expedited-fo          0          0      0
  2 assured-forw          0          0      0
  3 network-cont          0          0      0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          0          0      0
  1 expedited-fo          0          0      0
  2 assured-forw          0          0      0
  3 network-cont          0          0      0

Active alarms : None
Active defects : None
PCS statistics
  Bit errors          0
  Errored blocks      0
MAC statistics:
  Receive              Transmit
Total octets          6970332384      0
Total packets          81050506      0
Unicast packets        81050000      0
Broadcast packets      506          0
Multicast packets      0          0
CRC/Align errors       0          0
FIFO errors            0          0
MAC control frames     0          0
MAC pause frames       0          0
Oversized frames       0
Jabber frames          0
Fragment frames        0
VLAN tagged frames     0
Code violations        0
Filter statistics:
Input packet count     81050506
Input packet rejects   506
Input DA rejects       0

```

```

Input SA rejects                                0
Output packet count                             0
Output packet pad count                         0
Output packet error count                       0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 5
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      usec
0 best-effort            95      950000000  95      0      low      none
3 network-control        5       50000000   5      0      low      none

  Direction : Input
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      usec
0 best-effort            95      950000000  95      0      low      none
3 network-control        5       50000000   5      0      low      none

Logical interface xe-5/0/0.0 (Index 71) (SNMP ifIndex 95) (Generation 195)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ] Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes : 0
  Output bytes : 46
  Input packets: 0
  Output packets: 1
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 46
  Input packets: 0
  Output packets: 1
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Protocol inet, MTU: 1500, Generation: 253, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.0.2/24, Local: 192.0.2.1, Broadcast: 192.0.2.255,
Generation: 265
  Protocol multiservice, MTU: Unlimited, Generation: 254, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

show interfaces extensive (10-Gigabit Ethernet, WAN PHY Mode)

```
user@host> show interfaces xe-1/0/0 extensive
```



```

Physical interface: xe-1/0/0, Enabled, Physical link is Up
Interface index: 141, SNMP ifIndex: 34, Generation: 47
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Loopback: Disabled
WAN-PHY mode
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps 16384
Link flags : None
CoS queues : 4 supported
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:9d, Hardware address: 00:00:5e:00:53:9d
Last flapped : 2005-07-07 11:22:34 PDT (3d 12:28 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
HS Link CRC errors: 0, HS Link FIFO overflows: 0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0,
Aged packets: 0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
Resource errors: 0
Queue counters:
Queued packets Transmitted packets Dropped packets
0 best-effort 0 0 0
1 expedited-fo 0 0 0
2 assured-forw 0 0 0
3 network-cont 0 0 0
Active alarms : LOL, LOS, LBL
Active defects: LOL, LOS, LBL, SEF, AIS-L, AIS-P
PCS statistics
Seconds Count
Bit errors 0 0
Errored blocks 0 0
MAC statistics:
Receive Transmit
Total octets 0 0
Total packets 0 0
Unicast packets 0 0
Broadcast packets 0 0
Multicast packets 0 0
CRC/Align errors 0 0
FIFO errors 0 0
MAC control frames 0 0
MAC pause frames 0 0
Oversized frames 0
Jabber frames 0
Fragment frames 0
VLAN tagged frames 0
Code violations 0
Filter statistics:
Input packet count 0
Input packet rejects 0
Input DA rejects 0
Input SA rejects 0
Output packet count 0
Output packet pad count 0
Output packet error count 0

```

```

CAM destination filters: 0, CAM source filters: 0
PMA PHY:
  PLL lock          Seconds      Count  State
  PHY light        63159         1      Light Missing
WIS section:
  BIP-B1            0            0
  SEF               434430       434438 Defect Active
  LOS               434430         1 Defect Active
  LOF               434430         1 Defect Active
  ES-S              434430
  SES-S             434430
  SEFS-S            434430
WIS line:
  BIP-B2            0            0
  REI-L             0            0
  RDI-L             0            0 OK
  AIS-L             434430         1 Defect Active
  BERR-SF           0            0 OK
  BERR-SD           0            0 OK
  ES-L              434430
  SES-L             434430
  UAS-L             434420
  ES-LFE            0
  SES-LFE           0
  UAS-LFE           0
WIS path:
  BIP-B3            0            0
  REI-P             0            0
  LOP-P             0            0 OK
  AIS-P             434430         1 Defect Active
  RDI-P             0            0 OK
  UNEQ-P            0            0 OK
  PLM-P             0            0 OK
  ES-P              434430
  SES-P             434430
  UAS-P             434420
  ES-PFE            0
  SES-PFE           0
  UAS-PFE           0
Received path trace:
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace: orissa so-1/0/0
  6f 72 69 73 73 61 20 73 6f 2d 31 2f 30 2f 30 00   orissa so-1/0/0.
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority  Limit
                           %      bps      %      bytes
  0 best-effort           95      950000000  95        0      low  none
  3 network-control       5       50000000  5         0      low  none

```

show interfaces extensive (10-Gigabit Ethernet, DWDM OTN PIC)

```
user@host> show interfaces ge-7/0/0 extensive
```

```

Physical interface: ge-7/0/0, Enabled, Physical link is Down
Interface index: 143, SNMP ifIndex: 508, Generation: 208
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled

```

```

Device flags      : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags       : None
Wavelength       : 1550.12 nm, Frequency: 193.40 THz
CoS queues       : 8 supported, 8 maximum usable queues
Hold-times       : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:72, Hardware address: 00:00:5e:00:53:72
Last flapped    : 2011-04-20 15:48:54 PDT (18:39:49 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes      : 0                      0 bps
Output bytes     : 0                      0 bps
Input packets    : 0                      0 pps
Output packets   : 0                      0 pps
IPv6 transit statistics:
Input bytes      : 0
Output bytes     : 0
Input packets    : 0
Output packets   : 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 2, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort        0                      0                      0

1 expedited-fo       0                      0                      0

2 assured-forw       0                      0                      0

3 network-cont
Queue number:        Mapped forwarding classes
0                    best-effort
1                    expedited-forwarding
2                    assured-forwarding
3                    network-control
Active alarms : LINK
Active defects : LINK
MAC statistics:
Total octets         Receive      Transmit
Total packets        0           0
Unicast packets      0           0
Broadcast packets    0           0
Multicast packets    0           0
CRC/Align errors     0           0
FIFO errors          0           0
MAC control frames   0           0
MAC pause frames     0           0
Oversized frames     0
Jabber frames        0
Fragment frames      0
VLAN tagged frames   0
Code violations       0
Total octets         0           0
Total packets        0           0

```

```

Unicast packets          0          0
Broadcast packets        0          0
Multicast packets        0          0
CRC/Align errors         0          0
FIFO errors              0          0
MAC control frames       0          0
MAC pause frames         0          0
Oversized frames         0
Jabber frames            0
Fragment frames          0
VLAN tagged frames       0
Code violations           0
OTN alarms               : None
OTN defects              : None
OTN FEC Mode              : GFEC
OTN Rate                  : Fixed Stuff Bytes 11.0957Gbps
OTN Line Loopback        : Enabled
OTN FEC statistics :
    Corrected Errors      0
    Corrected Error Ratio ( 0 sec average) 0e-0
OTN FEC alarms:
    Seconds      Count  State
    FEC Degrade   0      0  OK
    FEC Excessive 0      0  OK
OTN OC:
    Seconds      Count  State
    LOS          2      1  OK
    LOF          67164  2  Defect Active
    LOM          67164  71 Defect Active
    Wavelength Lock 0      0  OK
OTN OTU:
    AIS          0      0  OK
    BDI          65919  4814 Defect Active
    IAE          67158  1  Defect Active
    TTIM         7      1  OK
    SF           67164  2  Defect Active
    SD           67164  3  Defect Active
    TCA-ES       0      0  OK
    TCA-SES       0      0  OK
    TCA-UAS       80     40  OK
    TCA-BBE       0      0  OK
    BIP           0      0  OK
    BBE           0      0  OK
    ES            0      0  OK
    SES           0      0  OK
    UAS           587    0  OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
    APS/PCC0: 0x02, APS/PCC1: 0x42, APS/PCC2: 0xa2, APS/PCC3: 0x48
    Payload Type: 0x03
OTN Transmitted Overhead Bytes:
    APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
    Payload Type: 0x03
Filter statistics:
    Input packet count          0

```

```

Input packet rejects          0
Input DA rejects              0
Input SA rejects              0
Output packet count           0
Output packet pad count       0
Output packet error count     0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 7
CoS information:
  Direction : Output
  CoS transmit queue          Bandwidth          Buffer Priority
Limit
    0 best-effort             95          9500000000    95          0          low
none
    3 network-control         5           500000000     5           0          low
none
    ...

```

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode)

```

user@host> show interfaces xe-7/0/0 extensive

Physical interface: xe-7/0/0, Enabled, Physical link is Up
  Interface index: 173, SNMP ifIndex: 212, Generation: 174
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Enabled,
  Loopback: None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
...

```

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only)

```

user@host> show interfaces xe-7/0/0-tx extensive

Physical interface: xe-7/0/0-tx, Enabled, Physical link is Up
  Interface index: 176, SNMP ifIndex: 137, Generation: 177
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Tx-Only
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:83, Hardware address: 00:00:5e:00:53:83
  Last flapped   : 2007-06-01 09:08:19 PDT (3d 02:31 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          0          0 bps
  Output bytes  : 322891152287160  9627472888 bps
  Input packets:          0          0 pps
  Output packets: 328809727380  1225492 pps
...

Filter statistics:
  Output packet count      328810554250
  Output packet pad count      0

```

```

Output packet error count          0
...

Logical interface xe-7/0/0-tx.0 (Index 73) (SNMP ifIndex 138) (Generation 139)

Flags: SNMP-Traps Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes :          0
  Output bytes :    322891152287160
  Input packets:          0
  Output packets:    328809727380
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Transit statistics:
  Input bytes :          0                      0 bps
  Output bytes :    322891152287160          9627472888 bps
  Input packets:          0                      0 pps
  Output packets:    328809727380          1225492 pps
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Protocol inet, MTU: 1500, Generation: 147, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.11.12/24, Local: 10.11.12.13, Broadcast: 10.11.12.255,
    Generation: 141
  Protocol multiservice, MTU: Unlimited, Generation: 148, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only)

```

user@host> show interfaces xe-7/0/0-rx extensive

Physical interface: xe-7/0/0-rx, Enabled, Physical link is Up
  Interface index: 174, SNMP ifIndex: 118, Generation: 175
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
  Unidirectional: Rx-Only
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:83, Hardware address: 00:00:5e:00:53:83
  Last flapped   : 2007-06-01 09:08:22 PDT (3d 02:31 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes :    322857456303482          9627496104 bps
  Output bytes :          0                      0 bps

```

```

Input packets:      328775413751      1225495 pps
Output packets:      0                  0 pps
...

Filter statistics:
Input packet count      328775015056
Input packet rejects      1
Input DA rejects        0
...

Logical interface xe-7/0/0-rx.0 (Index 72) (SNMP ifIndex 120) (Generation 138)

Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes :      322857456303482
Output bytes :      0
Input packets:      328775413751
Output packets:      0
IPv6 transit statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:      0
Local statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:      0
Transit statistics:
Input bytes :      322857456303482      9627496104 bps
Output bytes :      0                  0 bps
Input packets:      328775413751      1225495 pps
Output packets:      0                  0 pps
IPv6 transit statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:      0
Protocol inet, MTU: 1500, Generation: 145, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.0.2/24, Local: 192.0.2.1, Broadcast: 192.0.2.255,
Generation: 139
Protocol multiservice, MTU: Unlimited, Generation: 146, Route table: 0
Flags: None
Policer: Input: __default_arp_policer__

```

Sample Output

Sample Output SRX Gigabit Ethernet

```
user@host> show interfaces ge-0/0/1
```

```

Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,

```

```

Remote fault: Online
Device flags   : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped   : 2015-05-12 08:36:59 UTC (1w1d 22:42 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : LINK
Active defects : LINK
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514)
  Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
  Input packets : 0
  Output packets: 0
  Security: Zone: public
  Protocol inet, MTU: 1500
  Flags: Sendbcst-pkt-to-re
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

Sample Output SRX Gigabit Ethernet

```
user@host> show interfaces ge-0/0/1
```

```

Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped   : 2015-05-12 08:36:59 UTC (1w1d 22:42 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : LINK
Active defects : LINK
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514)
  Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
  Input packets : 0
  Output packets: 0
  Security: Zone: public
  Protocol inet, MTU: 1500
  Flags: Sendbcst-pkt-to-re
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

show interfaces detail (Gigabit Ethernet)

```
user@host> show interfaces ge-0/0/1 detail
```



```

Physical interface: ge-0/0/1, Enabled, Physical link is Down
  Interface index: 135, SNMP ifIndex: 510, Generation: 138
  Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,
  BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering:
  Disabled,
  Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running Down
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
  Last flapped   : 2015-05-12 08:36:59 UTC (1w2d 00:00 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  Egress queues: 8 supported, 4 in use
  Queue counters:


| Queue counters: | Queued packets | Transmitted packets | Dropped packets |
|-----------------|----------------|---------------------|-----------------|
| 0 best-effort   | 0              | 0                   | 0               |
| 1 expedited-fo  | 0              | 0                   | 0               |
| 2 assured-forw  | 0              | 0                   | 0               |
| 3 network-cont  | 0              | 0                   | 0               |


  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  Active alarms  : LINK
  Active defects : LINK
  Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514) (Generation 136)
  Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
  Traffic statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Local statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Transit statistics:


| Input bytes | Output bytes | Input packets | Output packets |
|-------------|--------------|---------------|----------------|
| 0           | 0            | 0             | 0              |
| 0           | 0            | 0             | 0              |
| 0           | 0            | 0             | 0              |
| 0           | 0            | 0             | 0              |


  Security: Zone: public
  Flow Statistics :
  Flow Input statistics :
    Self packets :                0

```

```

    ICMP packets :                0
    VPN packets :                0
    Multicast packets :          0
    Bytes permitted by policy :   0
    Connections established :     0
    Flow Output statistics:
      Multicast packets :        0
      Bytes permitted by policy : 0
    Flow error statistics (Packets dropped due to):
      Address spoofing:          0
      Authentication failed:     0
      Incoming NAT errors:       0
      Invalid zone received packet: 0
      Multiple user authentications: 0
      Multiple incoming NAT:      0
      No parent for a gate:       0
      No one interested in self packets: 0
      No minor session:           0
      No more sessions:           0
      No NAT gate:                0
      No route present:           0
      No SA for incoming SPI:     0
      No tunnel found:            0
      No session for a gate:       0
      No zone or NULL zone binding 0
      Policy denied:              0
      Security association not active: 0
      TCP sequence number out of window: 0
      Syn-attack protection:      0
      User authentication errors: 0
    Protocol inet, MTU: 1500, Generation: 150, Route table: 0
    Flags: Sendbcst-pkt-to-re
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255, Generation:
150

```

show interfaces statistics st0.0 detail

user@host> show interfaces statistics st0.0 detail

```

Logical interface st0.0 (Index 71) (SNMP ifIndex 609) (Generation 136)
Flags: Up Point-To-Point SNMP-Traps Encapsulation: Secure-Tunnel
Traffic statistics:
  Input bytes :          528152756774
  Output bytes :         575950643520
  Input packets:         11481581669
  Output packets:        12520666095
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:         0
  Output packets:        0
Transit statistics:
  Input bytes :          0          121859888 bps
  Output bytes :         0          128104112 bps
  Input packets:         0          331141 pps
  Output packets:        0          348108 pps
Security: Zone: untrust
Allowed host-inbound traffic : any-service bfd bgp dvmrp igmp ldp msdp nhrp
ospf ospf3 pgm pim rip ripng router-discovery rsvp

```

```

sap vrrp
Flow Statistics :
Flow Input statistics :
  Self packets :                0
  ICMP packets :                0
  VPN packets :                 0
  Multicast packets :           0
  Bytes permitted by policy :    525984295844
  Connections established :      7
Flow Output statistics:
  Multicast packets :           0
  Bytes permitted by policy :    576003290222
Flow error statistics (Packets dropped due to):
  Address spoofing:             0
  Authentication failed:        0
  Incoming NAT errors:          0
  Invalid zone received packet: 0
  Multiple user authentications: 0
  Multiple incoming NAT:        0
  No parent for a gate:         0
  No one interested in self packets: 0
  No minor session:             0
  No more sessions:             0
  No NAT gate:                  0
  No route present:             2000280
  No SA for incoming SPI:       0
  No tunnel found:              0
  No session for a gate:        0
  No zone or NULL zone binding  0
  Policy denied:                0
  Security association not active: 0
  TCP sequence number out of window: 0
  Syn-attack protection:        0
  User authentication errors:    0
Protocol inet, MTU: 9192
Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
Generation: 155, Route table: 0
Flags: Sendbroadcast-pkt-to-re

```

show interfaces extensive (Gigabit Ethernet)

```
user@host> show interfaces ge-0/0/1.0 extensive
```

```

Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510, Generation: 138
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped   : 2015-05-12 08:36:59 UTC (1w1d 22:57 ago)
Statistics last cleared: Never

```

```

Traffic statistics:
Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:               0                0 pps
Output packets:              0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort                0                0                0
  1 expedited-fo                0                0                0
  2 assured-forw                0                0                0
  3 network-cont                0                0                0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control

Active alarms : LINK
Active defects : LINK
MAC statistics:
Total octets      Receive      Transmit
Total packets      0                0
Unicast packets    0                0
Broadcast packets  0                0
Multicast packets  0                0
CRC/Align errors   0                0
FIFO errors        0                0
MAC control frames 0                0
MAC pause frames   0                0
Oversized frames   0
Jabber frames      0
Fragment frames    0
VLAN tagged frames 0
Code violations     0
Filter statistics:
Input packet count      0
Input packet rejects    0
Input DA rejects        0
Input SA rejects        0
Output packet count      0
Output packet pad count  0
Output packet error count 0
CAM destination filters: 2, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Incomplete
Packet Forwarding Engine configuration:
  Destination slot: 0
CoS information:

```

```

    Direction : Output
    CoS transmit queue          Bandwidth          Buffer Priority
Limit                          %          bps          %          usec
    0 best-effort              95          950000000    95          0          low
none
    3 network-control          5           50000000    5           0          low
none
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514) (Generation 136)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0          0 bps
Output bytes : 0          0 bps
Input packets: 0          0 pps
Output packets: 0          0 pps
Security: Zone: public
Flow Statistics :
Flow Input statistics :
Self packets : 0
ICMP packets : 0
VPN packets : 0
Multicast packets : 0
Bytes permitted by policy : 0
Connections established : 0
Flow Output statistics:
Multicast packets : 0
Bytes permitted by policy : 0
Flow error statistics (Packets dropped due to):
Address spoofing: 0
Authentication failed: 0
Incoming NAT errors: 0
Invalid zone received packet: 0
Multiple user authentications: 0
Multiple incoming NAT: 0
No parent for a gate: 0
No one interested in self packets: 0
No minor session: 0
No more sessions: 0
No NAT gate: 0
No route present: 0
No SA for incoming SPI: 0
No tunnel found: 0
No session for a gate: 0
No zone or NULL zone binding: 0
Policy denied: 0
Security association not active: 0
TCP sequence number out of window: 0
Syn-attack protection: 0

```

```

User authentication errors:          0
Protocol inet, MTU: 1500, Generation: 150, Route table: 0
Flags: Sendbroadcast-pkt-to-re
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 150

```

show interfaces terse

```
user@host> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
ge-0/0/0	up	up			
ge-0/0/0.0	up	up	inet	10.209.4.61/18	
gr-0/0/0	up	up			
ip-0/0/0	up	up			
st0	up	up			
st0.1	up	ready	inet		
ls-0/0/0	up	up			
lt-0/0/0	up	up			
mt-0/0/0	up	up			
pd-0/0/0	up	up			
pe-0/0/0	up	up			
e3-1/0/0	up	up			
t3-2/0/0	up	up			
e1-3/0/0	up	up			
se-4/0/0	up	down			
t1-5/0/0	up	up			
br-6/0/0	up	up			
dc-6/0/0	up	up			
dc-6/0/0.32767	up	up			
bc-6/0/0:1	down	up			
bc-6/0/0:1.0	up	down			
d10	up	up			
d10.0	up	up	inet		
dsc	up	up			
gre	up	up			
ipip	up	up			
lo0	up	up			
lo0.16385	up	up	inet	10.0.0.1 10.0.0.16	--> 0/0 --> 0/0
lsi	up	up			
mtun	up	up			
pimd	up	up			
pime	up	up			
pp0	up	up			

show interfaces controller (Channelized E1 IQ with Logical E1)

```
user@host> show interfaces controller ce1-1/2/6
```

Controller	Admin	Link
ce1-1/2/6	up	up
e1-1/2/6	up	up

show interfaces controller (Channelized E1 IQ with Logical DS0)

```
user@host> show interfaces controller ce1-1/2/3
```

Controller	Admin	Link
ce1-1/2/3	up	up
ds-1/2/3:1	up	up
ds-1/2/3:2	up	up

show interfaces descriptions

```
user@host> show interfaces descriptions
```

Interface	Admin	Link	Description
so-1/0/0	up	up	M20-3#1
so-2/0/0	up	up	GSR-12#1
ge-3/0/0	up	up	SMB-OSPF_Area300
so-3/3/0	up	up	GSR-13#1
so-3/3/1	up	up	GSR-13#2
ge-4/0/0	up	up	T320-7#1
ge-5/0/0	up	up	T320-7#2
so-7/1/0	up	up	M160-6#1
ge-8/0/0	up	up	T320-7#3
ge-9/0/0	up	up	T320-7#4
so-10/0/0	up	up	M160-6#2
so-13/0/0	up	up	M20-3#2
so-14/0/0	up	up	GSR-12#2
ge-15/0/0	up	up	SMB-OSPF_Area100
ge-15/0/1	up	up	GSR-13#3

show interfaces destination-class all

```
user@host> show interfaces destination-class all
```

```
Logical interface so-4/0/0.0
```

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	0	0
(0)	0)
silver	0	0
(0)	0)

```
Logical interface so-0/1/3.0
```

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	0	0
(0)	0)
silver	0	0
(0)	0)

show interfaces diagnostics optics

```
user@host> show interfaces diagnostics optics ge-2/0/0
```

```
Physical interface: ge-2/0/0
```

Laser bias current	: 7.408 mA
Laser output power	: 0.3500 mW / -4.56 dBm
Module temperature	: 23 degrees C / 73 degrees F

```

Module voltage : 3.3450 V
Receiver signal average optical power : 0.0002 mW / -36.99 dBm
Laser bias current high alarm : Off
Laser bias current low alarm : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm : Off
Laser output power low alarm : Off
Laser output power high warning : Off
Laser output power low warning : Off
Module temperature high alarm : Off
Module temperature low alarm : Off
Module temperature high warning : Off
Module temperature low warning : Off
Module voltage high alarm : Off
Module voltage low alarm : Off
Module voltage high warning : Off
Module voltage low warning : Off
Laser rx power high alarm : Off
Laser rx power low alarm : On
Laser rx power high warning : Off
Laser rx power low warning : On
Laser bias current high alarm threshold : 17.000 mA
Laser bias current low alarm threshold : 1.000 mA
Laser bias current high warning threshold : 14.000 mA
Laser bias current low warning threshold : 2.000 mA
Laser output power high alarm threshold : 0.6310 mW / -2.00 dBm
Laser output power low alarm threshold : 0.0670 mW / -11.74 dBm
Laser output power high warning threshold : 0.6310 mW / -2.00 dBm
Laser output power low warning threshold : 0.0790 mW / -11.02 dBm
Module temperature high alarm threshold : 95 degrees C / 203 degrees F
Module temperature low alarm threshold : -25 degrees C / -13 degrees F
Module temperature high warning threshold : 90 degrees C / 194 degrees F
Module temperature low warning threshold : -20 degrees C / -4 degrees F
Module voltage high alarm threshold : 3.900 V
Module voltage low alarm threshold : 2.700 V
Module voltage high warning threshold : 3.700 V
Module voltage low warning threshold : 2.900 V
Laser rx power high alarm threshold : 1.2590 mW / 1.00 dBm
Laser rx power low alarm threshold : 0.0100 mW / -20.00 dBm
Laser rx power high warning threshold : 0.7940 mW / -1.00 dBm
Laser rx power low warning threshold : 0.0158 mW / -18.01 dBm

```

show interfaces far-end-interval coc12-5/2/0

```
user@host> show interfaces far-end-interval coc12-5/2/0
```

```
Physical interface: coc12-5/2/0, SNMP ifIndex: 121
```

```

05:30-current:
  ES-L: 1, SES-L: 1, UAS-L: 0
05:15-05:30:
  ES-L: 0, SES-L: 0, UAS-L: 0
05:00-05:15:
  ES-L: 0, SES-L: 0, UAS-L: 0
04:45-05:00:
  ES-L: 0, SES-L: 0, UAS-L: 0
04:30-04:45:
  ES-L: 0, SES-L: 0, UAS-L: 0
04:15-04:30:

```



```

    ES-L: 0, SES-L: 0, UAS-L: 0
    04:00-04:15:
    ...

```

show interfaces far-end-interval coc1-5/2/1:1

```

user@host> run show interfaces far-end-interval coc1-5/2/1:1
Physical interface: coc1-5/2/1:1, SNMP ifIndex: 342
05:30-current:
    ES-L: 1, SES-L: 1, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
05:15-05:30:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
05:00-05:15:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:45-05:00:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:30-04:45:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:15-04:30:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:00-04:15:

```

show interfaces filters

```

user@host> show interfaces filters

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/0/0	up	up			
ge-0/0/0.0	up	up	inet		
			iso		
ge-5/0/0	up	up			
ge-5/0/0.0	up	up	any		f-any
			inet		f-inet
			multiservice		
gr-0/3/0	up	up			
ip-0/3/0	up	up			
mt-0/3/0	up	up			
pd-0/3/0	up	up			
pe-0/3/0	up	up			
vt-0/3/0	up	up			
at-1/0/0	up	up			
at-1/0/0.0	up	up	inet		
			iso		
at-1/1/0	up	down			
at-1/1/0.0	up	down	inet		
			iso		
....					

show interfaces flow-statistics (Gigabit Ethernet)

```

user@host> show interfaces flow-statistics ge-0/0/1.0
Logical interface ge-0/0/1.0 (Index 70) (SNMP ifIndex 49)
Flags: SNMP-Traps Encapsulation: ENET2
Input packets : 5161
Output packets: 83
Security: Zone: zone2
Allowed host-inbound traffic : bootp bfd bgp dns dvmrp ldp msdp nhrp ospf

```

```

pgm
pim rip router-discovery rsvp sap vrrp dhcp finger ftp tftp ident-reset http
https ike
netconf ping rlogin rpm rsh snmp snmp-trap ssh telnet traceroute xnm-clear-text
xnm-ssl
  lsping
  Flow Statistics :
  Flow Input statistics :
    Self packets :          0
    ICMP packets :          0
    VPN packets :          2564
    Bytes permitted by policy : 3478
    Connections established : 1
  Flow Output statistics:
    Multicast packets :      0
    Bytes permitted by policy : 16994
  Flow error statistics (Packets dropped due to):
    Address spoofing:        0
    Authentication failed:   0
    Incoming NAT errors:     0
    Invalid zone received packet: 0
    Multiple user authentications: 0
    Multiple incoming NAT:   0
    No parent for a gate:    0
    No one interested in self packets: 0
    No minor session:        0
    No more sessions:        0
    No NAT gate:             0
    No route present:        0
    No SA for incoming SPI:  0
    No tunnel found:         0
    No session for a gate:   0
    No zone or NULL zone binding 0
    Policy denied:           0
    Security association not active: 0
    TCP sequence number out of window: 0
    Syn-attack protection:   0
    User authentication errors: 0
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 203.0.113.1/24, Local: 203.0.113.2, Broadcast: 2.2.2.255

```

show interfaces interval (Channelized OC12)

```

user@host> show interfaces interval t3-0/3/0:0
Physical interface: t3-0/3/0:0, SNMP ifIndex: 23
17:43-current:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
17:28-17:43:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
17:13-17:28:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
16:58-17:13:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,

```

```

SEFS: 0, UAS: 0
16:43-16:58:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
...
Interval Total:
LCV: 230, PCV: 1145859, CCV: 455470, LES: 0, PES: 230, PSES: 230,
CES: 230, CSES: 230, SEFS: 230, UAS: 238

```

show interfaces interval (E3)

```

user@host> show interfaces interval e3-0/3/0

Physical interface: e3-0/3/0, SNMP ifIndex: 23
17:43-current:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
17:28-17:43:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
17:13-17:28:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:58-17:13:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:43-16:58:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
....
Interval Total:
LCV: 230, PCV: 1145859, CCV: 455470, LES: 0, PES: 230, PSES: 230,
CES: 230, CSES: 230, SEFS: 230, UAS: 238

```

show interfaces interval (SONET/SDH) (SRX devices)

```

user@host> show interfaces interval so-0/1/0

Physical interface: so-0/1/0, SNMP ifIndex: 19
20:02-current:
ES-S: 0, SES-S: 0, SEFS-S: 0, ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0,
SES-P: 0, UAS-P: 0
19:47-20:02:
ES-S: 267, SES-S: 267, SEFS-S: 267, ES-L: 267, SES-L: 267, UAS-L: 267,
ES-P: 267, SES-P: 267, UAS-P: 267
19:32-19:47:
ES-S: 56, SES-S: 56, SEFS-S: 56, ES-L: 56, SES-L: 56, UAS-L: 46, ES-P: 56,
SES-P: 56, UAS-P: 46
19:17-19:32:
ES-S: 0, SES-S: 0, SEFS-S: 0, ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0,
SES-P: 0, UAS-P: 0
19:02-19:17:
.....

```

show interfaces load-balancing (SRX devices)

```

user@host> show interfaces load-balancing

Interface  State           Last change  Member count
ams0       Up              1d 00:50    2
ams1       Up              00:00:59    2

```

show interfaces load-balancing detail (SRX devices)

```
user@host>show interfaces load-balancing detail
```

```
Load-balancing interfaces detail
Interface      : ams0
State          : Up
Last change    : 1d 00:51
Member count   : 2
Members        :
  Interface    Weight  State
  mams-2/0/0   10      Active
  mams-2/1/0   10      Active
```

show interfaces mac-database (All MAC Addresses on a Port SRX devices)

```
user@host> show interfaces mac-database xe-0/3/3
```

```
Physical interface: xe-0/3/3, Enabled, Physical link is Up
Interface index: 372, SNMP ifIndex: 788
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Disabled, Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
```

```
Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
```

```
Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
```

MAC address	Input frames	Input bytes	Output frames	Output bytes
00:00:00:00:00:00	1	56	0	0
00:00:c0:01:01:02	7023810	323095260	0	0
00:00:c0:01:01:03	7023810	323095260	0	0
00:00:c0:01:01:04	7023810	323095260	0	0
00:00:c0:01:01:05	7023810	323095260	0	0
00:00:c0:01:01:06	7023810	323095260	0	0
00:00:c0:01:01:07	7023810	323095260	0	0
00:00:c0:01:01:08	7023809	323095214	0	0
00:00:c0:01:01:09	7023809	323095214	0	0
00:00:c0:01:01:0a	7023809	323095214	0	0
00:00:c0:01:01:0b	7023809	323095214	0	0
00:00:c8:01:01:02	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:03	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:04	30424716	1399536936	37448523	1722632058
00:00:c8:01:01:05	30424789	1399540294	37448598	1722635508
00:00:c8:01:01:06	30424788	1399540248	37448597	1722635462
00:00:c8:01:01:07	30424783	1399540018	37448597	1722635462
00:00:c8:01:01:08	30424783	1399540018	37448596	1722635416
00:00:c8:01:01:09	8836796	406492616	8836795	406492570
00:00:c8:01:01:0a	30424712	1399536752	37448521	1722631966
00:00:c8:01:01:0b	30424715	1399536890	37448523	1722632058

Number of MAC addresses : 21

show interfaces mac-database (All MAC Addresses on a Service SRX devices)

```
user@host> show interfaces mac-database xe-0/3/3
```

```

Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
  Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
  MAC address      Input frames  Input bytes  Output frames  Output bytes
00:00:00:00:00:00      1           56           0             0
00:00:c0:01:01:02     7023810     323095260    0             0
00:00:c0:01:01:03     7023810     323095260    0             0
00:00:c0:01:01:04     7023810     323095260    0             0
00:00:c0:01:01:05     7023810     323095260    0             0
00:00:c0:01:01:06     7023810     323095260    0             0
00:00:c0:01:01:07     7023810     323095260    0             0
00:00:c0:01:01:08     7023809     323095214    0             0
00:00:c0:01:01:09     7023809     323095214    0             0
00:00:c0:01:01:0a     7023809     323095214    0             0
00:00:c0:01:01:0b     7023809     323095214    0             0
00:00:c8:01:01:02     31016568    1426762128   38040381      1749857526
00:00:c8:01:01:03     31016568    1426762128   38040382      1749857572
00:00:c8:01:01:04     31016499    1426758954   38040306      1749854076
00:00:c8:01:01:05     31016573    1426762358   38040381      1749857526
00:00:c8:01:01:06     31016573    1426762358   38040381      1749857526
00:00:c8:01:01:07     31016567    1426762082   38040380      1749857480
00:00:c8:01:01:08     31016567    1426762082   38040379      1749857434
00:00:c8:01:01:09     9428580     433714680    9428580       433714680
00:00:c8:01:01:0a     31016496    1426758816   38040304      1749853984
00:00:c8:01:01:0b     31016498    1426758908   38040307      1749854122

```

show interfaces mac-database mac-address

```

user@host> show interfaces mac-database xe-0/3/3 mac-address (SRX devices)
00:00:c8:01:01:09

Physical interface: xe-0/3/3, Enabled, Physical link is Up
  Interface index: 372, SNMP ifIndex: 788
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

  Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
    Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
  MAC address: 00:00:c8:01:01:09, Type: Configured,
    Input bytes   : 202324652
    Output bytes  : 202324560
    Input frames  : 4398362
    Output frames : 4398360
  Policer statistics:
    Policer type   Discarded frames  Discarded bytes
  Output aggregate      3992386          183649756

```

show interfaces mc-ae (SRX devices)

```

user@host> show interfaces mc-ae ae0 unit 512

Member Links   : ae0
Local Status   : active
Peer Status    : active
Logical Interface : ae0.512

```

```
Core Facing Interface : Label Ethernet Interface
ICL-PL               : Label Ethernet Interface
```

show interfaces media (SONET/SDH)

The following example displays the output fields unique to the **show interfaces media** command for a SONET interface (with no level of output specified):

```
user@host> show interfaces media so-4/1/2
```

```
Physical interface: so-4/1/2, Enabled, Physical link is Up
Interface index: 168, SNMP ifIndex: 495
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC48,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps 16384
Link flags     : Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 1783 (00:00:00 ago), Output: 1786 (00:00:08 ago)
LCP state: Opened
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Not-configured
CoS queues    : 8 supported
Last flapped  : 2005-06-15 12:14:59 PDT (04:31:29 ago)
Input rate    : 0 bps (0 pps)
Output rate   : 0 bps (0 pps)
SONET alarms  : None
SONET defects : None
SONET errors:
    BIP-B1: 121, BIP-B2: 916, REI-L: 0, BIP-B3: 137, REI-P: 16747, BIP-BIP2: 0
Received path trace: routerb so-1/1/2
Transmitted path trace: routera so-4/1/2
```

show interfaces policers (SRX devices)

```
user@host> show interfaces policers
```

Interface	Admin	Link	Proto	Input	Policer	Output	Policer
ge-0/0/0	up	up					
ge-0/0/0.0	up	up	inet				
			iso				
gr-0/3/0	up	up					
ip-0/3/0	up	up					
mt-0/3/0	up	up					
pd-0/3/0	up	up					
pe-0/3/0	up	up					
...							
so-2/0/0	up	up					
so-2/0/0.0	up	up	inet	so-2/0/0.0-in-policer		so-2/0/0.0-out-policer	
			iso				
so-2/1/0	up	down					
...							

show interfaces policers interface-name (SRX devices)

```
user@host> show interfaces policers so-2/1/0
```

Interface	Admin	Link	Proto	Input	Policer	Output	Policer
so-2/1/0	up	down					
so-2/1/0.0	up	down	inet	so-2/1/0.0-in-policer		so-2/1/0.0-out-policer	
			iso				
			inet6				

show interfaces queue (SRX devices)

The following truncated example shows the CoS queue sizes for queues 0, 1, and 3. Queue 1 has a queue buffer size (guaranteed allocated memory) of 9192 bytes.

```
user@host> show interfaces queue
```

```
Physical interface: ge-0/0/0, Enabled, Physical link is Up
  Interface index: 134, SNMP ifIndex: 509
  Forwarding classes: 8 supported, 8 in use
  Egress queues: 8 supported, 8 in use
  Queue: 0, Forwarding classes: class0
    Queued:
      Packets          :                0          0 pps
      Bytes            :                0          0 bps
    Transmitted:
      Packets          :                0          0 pps
      Bytes            :                0          0 bps
      Tail-dropped packets :                0          0 pps
      RL-dropped packets :                0          0 pps
      RL-dropped bytes   :                0          0 bps
      RED-dropped packets :                0          0 pps
      Low               :                0          0 pps
      Medium-low        :                0          0 pps
      Medium-high       :                0          0 pps
      High              :                0          0 pps
      RED-dropped bytes :                0          0 bps
      Low               :                0          0 bps
      Medium-low        :                0          0 bps
      Medium-high       :                0          0 bps
      High              :                0          0 bps
    Queue Buffer Usage:
      Reserved buffer   :          118750000 bytes
      Queue-depth bytes :
      Current           :                0
  ..
  ..
  Queue: 1, Forwarding classes: class1
  ..
  ..
    Queue Buffer Usage:
      Reserved buffer   :           9192 bytes
      Queue-depth bytes :
      Current           :                0
  ..
  ..
  Queue: 3, Forwarding classes: class3
    Queued:
  ..
  ..
    Queue Buffer Usage:
      Reserved buffer   :          6250000 bytes
```

```

Queue-depth bytes      :
Current                : 0
..
..

```

show interfaces redundancy (SRX devices)

```
user@host> show interfaces redundancy
```

Interface	State	Last change	Primary	Secondary	Current status
rsp0	Not present		sp-1/0/0	sp-0/2/0	both down
rsp1	On secondary	1d 23:56	sp-1/2/0	sp-0/3/0	primary down
rsp2	On primary	10:10:27	sp-1/3/0	sp-0/2/0	secondary down
rlsq0	On primary	00:06:24	lsq-0/3/0	lsq-1/0/0	both up

show interfaces redundancy (Aggregated Ethernet SRX devices)

```
user@host> show interfaces redundancy
```

Interface	State	Last change	Primary	Secondary	Current status
rlsq0	On secondary	00:56:12	lsq-4/0/0	lsq-3/0/0	both up
ae0					
ae1					
ae2					
ae3					
ae4					

show interfaces redundancy detail (SRX devices)

```
user@host> show interfaces redundancy detail
```

```

Interface      : rlsq0
State          : On primary
Last change    : 00:45:47
Primary        : lsq-0/2/0
Secondary      : lsq-1/2/0
Current status : both up
Mode           : hot-standby

Interface      : rlsq0:0
State          : On primary
Last change    : 00:45:46
Primary        : lsq-0/2/0:0
Secondary      : lsq-1/2/0:0
Current status : both up
Mode           : warm-standby

```

show interfaces routing brief (SRX devices)

```
user@host> show interfaces routing brief
```

Interface	State	Addresses
so-5/0/3.0	Down	ISO enabled
so-5/0/2.0	Up	MPLS enabled
		ISO enabled
		INET 192.168.2.120
		INET enabled
so-5/0/1.0	Up	MPLS enabled

		ISO	enabled
		INET	192.168.2.130
		INET	enabled
at-1/0/0.3	Up	CCC	enabled
at-1/0/0.2	Up	CCC	enabled
at-1/0/0.0	Up	ISO	enabled
		INET	192.168.90.10
		INET	enabled
lo0.0	Up	ISO	47.0005.80ff.f800.0000.0108.0001.1921.6800.5061.00
		ISO	enabled
		INET	127.0.0.1
fxp1.0	Up		
fxp0.0	Up	INET	192.168.6.90

show interfaces routing detail (SRX devices)

```

user@host> show interfaces routing detail

so-5/0/3.0
  Index: 15, Refcount: 2, State: Up <Broadcast PointToPoint Multicast> Change:<>

  Metric: 0, Up/down transitions: 0, Full-duplex
  Link layer: HDLC serial line Encapsulation: PPP Bandwidth: 155Mbps
  ISO address (null)
    State: <Broadcast PointToPoint Multicast> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
so-5/0/2.0
  Index: 14, Refcount: 7, State: <Up Broadcast PointToPoint Multicast> Change:<>

  Metric: 0, Up/down transitions: 0, Full-duplex
  Link layer: HDLC serial line Encapsulation: PPP Bandwidth: 155Mbps
  MPLS address (null)
    State: <Up Broadcast PointToPoint Multicast> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4458 bytes
  ISO address (null)
    State: <Up Broadcast PointToPoint Multicast> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
  INET address 192.168.2.120
    State: <Up Broadcast PointToPoint Multicast Localup> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
    Local address: 192.168.2.120
    Destination: 192.168.2.110/32
  INET address (null)
    State: <Up Broadcast PointToPoint Multicast> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
...

```

show interfaces routing-instance all (SRX devices)

```

user@host> show interfaces terse routing-instance all

```

Interface	Admin	Link	Proto	Local	Remote Instance
at-0/0/1	up	up	inet	10.0.0.1/24	
ge-0/0/0.0	up	up	inet	192.168.4.28/24	sample-a
at-0/1/0.0	up	up	inet6	fe80::a:0:0:4/64	sample-b
so-0/0/0.0	up	up	inet	10.0.0.1/32	

show interfaces snmp-index (SRX devices)

```
user@host> show interfaces snmp-index 33
```

```
Physical interface: so-2/1/1, Enabled, Physical link is Down
Interface index: 149, SNMP ifIndex: 33
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC48,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags : Keepalives
CoS queues : 8 supported
Last flapped : 2005-06-15 11:45:57 PDT (05:38:43 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
SONET alarms : LOL, PLL, LOS
SONET defects : LOL, PLL, LOF, LOS, SEF, AIS-L, AIS-P
```

show interfaces source-class all (SRX devices)

```
user@host> show interfaces source-class all
```

```
Logical interface so-0/1/0.0
```

Source class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	1928095	161959980
(889)	(597762)
bronze	0	0
(0)	(0)
silver	0	0
(0)	(0)

```
Logical interface so-0/1/3.0
```

Source class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	0	0
(0)	(0)
bronze	0	0
(0)	(0)
silver	116113	9753492
(939)	(631616)

show interfaces statistics (Fast Ethernet SRX devices)

```
user@host> show interfaces fe-1/3/1 statistics
```

```
Physical interface: fe-1/3/1, Enabled, Physical link is Up
Interface index: 144, SNMP ifIndex: 1042
Description: ford fe-1/3/1
Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
CoS queues : 4 supported, 4 maximum usable queues
Current address: 00:90:69:93:04:dc, Hardware address: 00:90:69:93:04:dc
Last flapped : 2006-04-18 03:08:59 PDT (00:01:24 ago)
Statistics last cleared: Never
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
Input errors: 0, Output errors: 0
Active alarms : None
```

```

Active defects : None
Logical interface fe-1/3/1.0 (Index 69) (SNMP ifIndex 50)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500
  Flags: Is-Primary, DCU, SCU-in

      Packets
Destination class      (packet-per-second)      Bytes
                        (bits-per-second)
      silver1          0          0
                        (          0) (
      silver2          0          0
                        (          0) (
      silver3          0          0
                        (          0) (
Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 10.27.245/24, Local: 10.27.245.2,
  Broadcast: 10.27.245.255
Protocol iso, MTU: 1497
  Flags: Is-Primary

```

show interfaces switch-port (SRX devices)

```
user@host# show interfaces ge-slot/0/0 switch-port port-number
```

```

Port 0, Physical link is Up
  Speed: 100mbps, Auto-negotiation: Enabled
  Statistics:
    Receive      Transmit
    Total bytes  28437086  21792250
    Total packets 409145    88008
    Unicast packets 9987      83817
    Multicast packets 145002    0
    Broadcast packets 254156    4191
    Multiple collisions 23        10
    FIFO/CRC/Align errors 0          0
    MAC pause frames 0          0
    Oversized frames 0
    Runt frames 0
    Jabber frames 0
    Fragment frames 0
    Discarded frames 0
  Autonegotiation information:
    Negotiation status: Complete
    Link partner:
      Link mode: Full-duplex, Flow control: None, Remote fault: OK, Link
partner Speed: 100 Mbps
    Local resolution:
      Flow control: None, Remote fault: Link OK

```

show interfaces transport pm (SRX devices)

```
user@host> show interfaces transport pm all current et-0/1/0
```

```

Physical interface: et-0/1/0, SNMP ifIndex 515
14:45-current      Elapse time:900 Seconds
Near End      Suspect Flag:False      Reason:None
PM      COUNT      THRESHOLD      TCA-ENABLED      TCA-RAISED
OTU-BBE      0      800      No      No
OTU-ES      0      135      No      No
OTU-SES      0      90      No      No

```

OTU-UAS Far End PM	427		90		No		No	
	Suspect Flag:True		Reason:Unknown					
	COUNT		THRESHOLD		TCA-ENABLED		TCA-RAISED	
OTU-BBE	0		800		No		No	
OTU-ES	0		135		No		No	
OTU-SES	0		90		No		No	
OTU-UAS	0		90		No		No	
Near End PM	Suspect Flag:False		Reason:None					
	COUNT		THRESHOLD		TCA-ENABLED		TCA-RAISED	
ODU-BBE	0		800		No		No	
ODU-ES	0		135		No		No	
ODU-SES	0		90		No		No	
ODU-UAS	427		90		No		No	
Far End PM	Suspect Flag:True		Reason:Unknown					
	COUNT		THRESHOLD		TCA-ENABLED		TCA-RAISED	
ODU-BBE	0		800		No		No	
ODU-ES	0		135		No		No	
ODU-SES	0		90		No		No	
ODU-UAS	0		90		No		No	
FEC PM	Suspect Flag:False		Reason:None					
	COUNT		THRESHOLD		TCA-ENABLED		TCA-RAISED	
FEC-CorrectedErr	2008544300		0		NA		NA	
FEC-UncorrectedWords	0		0		NA		NA	
BER PM	Suspect Flag:False		Reason:None					
	MIN	MAX	AVG	THRESHOLD		TCA-ENABLED		
TCA-RAISED								
BER	3.6e-5	5.8e-5	3.6e-5	10.0e-3		No		
Yes								
Physical interface: et-0/1/0, SNMP ifIndex 515								
14:45-current								
Suspect Flag:True		Reason:Object Disabled						
PM		CURRENT	MIN	MAX	AVG	THRESHOLD		
TCA-ENABLED		TCA-RAISED						
							(MIN)	
(MAX)	(MIN)	(MAX)	(MIN)	(MAX)				
Lane chromatic dispersion			0	0	0	0	0	
0	NA	NA	NA	NA				
Lane differential group delay			0	0	0	0	0	
0	NA	NA	NA	NA				
q Value			120	120	120	120	0	
0	NA	NA	NA	NA				
SNR			28	28	29	28	0	
0	NA	NA	NA	NA				
Tx output power(0.01dBm)			-5000	-5000	-5000	-5000	-300	
-100	No	No	No	No				
Rx input power(0.01dBm)			-3642	-3665	-3626	-3637	-1800	
-500	No	No	No	No				
Module temperature(Celsius)			46	46	46	46	-5	
75	No	No	No	No				
Tx laser bias current(0.1mA)			0	0	0	0	0	
0	NA	NA	NA	NA				
Rx laser bias current(0.1mA)			1270	1270	1270	1270	0	
0	NA	NA	NA	NA				
Carrier frequency offset(MHz)			-186	-186	-186	-186	-5000	
5000	No	No	No	No				

show security zones (SRX devices)

```
user@host> show security zones

Functional zone: management
  Description: This is the management zone.
  Policy configurable: No
  Interfaces bound: 1
  Interfaces:
    ge-0/0/0.0
Security zone: Host
  Description: This is the host zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    fxp0.0
Security zone: abc
  Description: This is the abc zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    ge-0/0/1.0
Security zone: def
  Description: This is the def zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    ge-0/0/2.0
```

show interfaces (ATM)

Syntax	<pre>show interfaces at-<i>fpc/pic/port</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified ATM interface.
Options	<p>at-<i>fpc/pic/port</i>—Display standard information about the specified ATM interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display the SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (ATM, IMA Group) on page 1273</p> <p>show interfaces extensive (ATM IMA Group) on page 1274</p> <p>show interfaces (ATM1, SONET Mode) on page 1275</p> <p>show interfaces brief (ATM1, SONET Mode) on page 1276</p> <p>show interfaces detail (ATM1, SONET Mode) on page 1276</p> <p>show interfaces extensive (ATM1, SONET Mode) on page 1277</p> <p>show interfaces (ATM2, SDH Mode) on page 1280</p> <p>show interfaces brief (ATM2, SDH Mode) on page 1280</p> <p>show interfaces detail (ATM2, SDH Mode) on page 1281</p> <p>show interfaces extensive (ATM2, SDH Mode) on page 1283</p> <p>show interfaces (ATM2, SONET Mode) on page 1285</p> <p>show interfaces brief (ATM2, SONET Mode) on page 1287</p> <p>show interfaces detail (ATM2, SONET Mode) on page 1287</p> <p>show interfaces extensive (ATM2, SONET Mode) on page 1290</p>
Output Fields	Table 59 on page 1259 lists the output fields for the show interfaces (ATM) command. Output fields are listed in the approximate order in which they appear.

Table 59: ATM show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “ Common Output Fields Description ” on page 1168.	All levels
Description	Configured interface description.	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface: <ul style="list-style-type: none"> • ATM-CCC-CELL-RELAY—ATM cell relay for CCC. • ATM-CCC-VC-MUX—ATM virtual circuit (VC) for CCC. • ATM-CISCO-NLPID—Cisco-compatible ATM NLPID encapsulation. • ATM-MIPP-LLC—ATM MLPPP over ATM Adaptation Layer 5 (AAL5)/logical link control (LLC). • ATM-NLPID—ATM NLPID encapsulation. • ATM-PPP-LLC—ATM PPP over AAL5/LLC. • ATM-PPP-VC-MUX—ATM PPP over raw AAL5. • ATM-PVC—ATM permanent virtual circuits. • ATM-SNAP—ATM LLC/SNAP encapsulation. • ATM-TCC-SNAP—ATM LLC/SNAP for translational cross-connection. • ATM-TCC-VC-MUX—ATM VC for translational cross-connection. • ATM-VC-MUX—ATM VC multiplexing. • ETHER-OVER-ATM-LLC—Ethernet over ATM (LLC/SNAP) encapsulation. • ETHER-VPLS-OVER-ATM-LLC—Ethernet VPLS over ATM (bridging) encapsulation. 	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source: Internal or External .	All levels
framing Mode	Framing mode: SONET or SDH .	All levels
Speed	Speed at which the interface is running as represented by the interface type (for example, OC3 , ADSL2+ , and SHDSL(2-wire)).	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
Payload scrambler	Whether payload scrambling is enabled.	All levels

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under “Common Output Fields Description” on page 1168 .	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Ethernet MAC address for this interface for Ethernet over ATM encapsulation.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	Statistics for traffic on the interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface whose definitions are as follows:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and frame check sequence (FCS) errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's random early detection (RED) mechanism. • Invalid VCs—Number of cells that arrived for a nonexistent VC. • Framing errors—Sum of AAL5 packets that have FCS errors, reassembly timeout errors, and length errors. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If it increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained so long in shared packet SDRAM that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets larger than the MTU threshold. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. <p>NOTE: Physical interface queue counters of ATM2 PICs displayed by the show interfaces at-fpc/pic/port detail command show the packet forwarding stream statistics associated with the ATM2 ports. Since multiple ports of the ATM2 PICs (except for the ATM2 dual-port OC12) share one packet forwarding stream, the physical interface queue counters reflect the aggregate of ATM2 port statistics.</p>	detail extensive
SONET alarms	SONET media-specific defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SONET PHY , SONET section , SONET line , and SONET path .	detail extensive none
SONET defects		
SONET PHY	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SONET section	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SONET line	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault signal failure • BERR-SD—Bit error rate defect signal degradation • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive
SONET path	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • ES-PFE—Errored seconds (far-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Received SONET overhead	Values of the received and transmitted SONET overhead:	extensive
Transmitted SONET overhead	<ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—Allocated for future use. 	
SDH alarms	SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY , SDH regenerator section , SDH multiplex section , and SDH path .	All levels
SDH defects		
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • RS-BIP8—24-bit BIP for multiplex section overhead (B2 bytes) • OOF—Out of frame • LOS—Loss of signal • LOF—Loss of frame • RS-ES—Errored seconds (near-end regenerator section) • RS-SES—Severely errored seconds (near-end regenerator section) • RS-SEFS—Severely errored framing seconds (regenerator section) 	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • MS-BIP24—8-bit BIP for high-order path overhead (B3 byte) • MS-FEBE—Far-end block error (multiplex section) • MS-FERF—Far-end remote fail (multiplex section) • MS-AIS—Alarm indication signal (multiplex section) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • MS-ES—Errored seconds (near-end multiplex section) • MS-SES—Severely errored seconds (near-end multiplex section) • MS-UAS—Unavailable seconds (near-end multiplex section) • MS-ES-FE—Errored seconds (far-end multiplex section) • MS-SES-FE—Severely errored seconds (far-end multiplex section) • MS-UAS-FE—Unavailable seconds (far-end multiplex section) 	extensive
SDH path	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • HP-BIP8—8-bit BIP for regenerator section overhead (B1 byte) • HP-FEBE—Far-end block error (high-order path) • HP-LOP—Loss of pointer (high-order path) • HP-AIS—High-order-path alarm indication signal • HP-FERF—Far-end remote fail (high-order path) • HP-UNEQ—Unequipped (high-order path) • HP-PLM—Payload label mismatch (high-order path) • HP-ES—Errored seconds (near-end high-order path) • HP-SES—Severely errored seconds (near-end high-order path) • HP-UAS—Unavailable seconds (near-end high-order path) • HP-ES-FE—Errored seconds (far-end high-order path) • HP-SES-FE—Severely errored seconds (far-end high-order path) • HP-UAS-FE—Unavailable seconds (far-end high-order path) 	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Received SDH overhead Transmitted SDH overhead	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> • C2—Signal label. This byte is allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. This byte is used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—These bytes are allocated for future use. 	extensive
Received path trace Transmitted path trace	<p>SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive
ATM Status	<p>ATM state information:</p> <ul style="list-style-type: none"> • HCS State—Status of the header check sequence. ATM uses the HCS field in the cell header in the cell delineation process to frame ATM cell boundaries. The HCS is an FCS-8 calculation over the first four octets of the ATM cell header. • LOC—Current loss of cell (LOC) delineation state. OK means that no LOC is currently asserted. 	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
ATM Statistics	<p>ATM statistics for the interface:</p> <ul style="list-style-type: none"> • Uncorrectable HCS errors—Number of cells dropped because the cell delineation failed. These errors most likely indicate that a SONET/SDH layer problem has occurred. • Correctable HCS errors—Number of correctable HCS errors that occurred. The cell delineation process can recover from these errors and locate the ATM cell boundary, although the framing process is not quite stable. The ATM cell is not dropped. This counter increases when the cell delineation process changes its state from present to sync (for example, when a cable is plugged into the interface). <p>The following error statistics are from the framer:</p> <ul style="list-style-type: none"> • Tx cell FIFO overruns—Number of overruns in the transmit FIFO. • Rx cell FIFO overruns—Number of overruns in the receive FIFO. • Rx cell FIFO underruns—Number of underruns in the receive FIFO. • Input cell count—Number of ATM cells received by the interface (not including idle cells). • Output cell count—Number of ATM cells transmitted by the interface (including idle cells). • Output idle cell count—Number of idle cells sent by the port. When ATM has nothing to send, it sends idle cells to fill the time slot. • Output VC queue drops—Number of packets dropped by a port on the PIC. Packets are dropped because of queue limits on the VCs. <p>The following error statistics are from the SAR:</p> <ul style="list-style-type: none"> • Input no buffers—Number of AAL5 packets dropped because no channel blocks or buffers were available to handle them. • Input length errors—Number of AAL5 packets dropped because their length was incorrect. Usually, these errors occur because a cell has been corrupted or lost, or because the length field was corrupted. They can also mean the AAL5 length field was zero. • Input timeouts—Number of AAL5 packets dropped because of a reassembly timeout. • Input invalid VCs—Number of AAL5 packets dropped because the header was unrecognized (because the VC was not correct or not configured). • Input bad CRCs—Number of AAL5 packets dropped because of frame check sequence errors. • Input OAM cell no buffers—Number of received OAM cells or raw cells dropped because no buffers were available to handle them. • L2 circuit out-of-sequence packets—(Layer 2 AAL5 mode) Number of AAL5 packets that are out of sequential order. • Denied packets count—The number of packets dropped due to VLAN priority deny packets or due to an error forwarding configuration that might cause a negative frame length, that is, the stripping size is larger than the packet size. 	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none">• CoS transmit queue—Queue number and its associated user-configured forwarding class name.• Bandwidth %—Percentage of bandwidth allocated to the queue.• Bandwidth bps—Bandwidth allocated to the queue (in bps).• Buffer %—Percentage of buffer space allocated to the queue.• Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.• Priority—Queue priority: low or high.• Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
VPI	<p>(ATM2) Virtual path identifier information:</p> <ul style="list-style-type: none"> • Flags—VPI flags can be one or more of the following: <ul style="list-style-type: none"> • Active (virtual path is up) • OAM (operation and maintenance is enabled) • Shaping (shaping is configured) • CBR, Peak • OAM, Period—Interval at which OAM F4 loopback cells are sent. • Up count—Number of F4 OAM cells required to consider the virtual path up; the range is 1 through 255. • Down count—Number of F4 OAM cells required to consider the virtual path down; the range is 1 through 255. • Total down time—Total number of seconds the VPI has been down since it was opened, using the format Total down time: hh:mm:ss or Never. • Last down—Time of last Down transition, using the format Last down: hh:mm:ss ago or Never. • OAM F4 cell statistics—(Nonpromiscuous mode) OAM F4 statistics: <ul style="list-style-type: none"> • Total received—Number of OAM F4 cells received. • Total sent—Number of OAM F4 cells sent. • Loopback received—Number of OAM F4 loopback cells received. • Loopback sent—Number of OAM F4 loopback cells sent. • Last received—Time at which the last OAM F4 cell was received. • Last sent—Time at which the last OAM F4 cell was sent. • RDI received—Number of OAM F4 cells received with the remote defect indication bit set. • RDI sent—Number of OAM F4 cells sent with the RDI bit set. • AIS received—Number of OAM F4 cells received with the alarm indication signal bit set. • AIS sent—Number of OAM F4 cells sent with the AIS bit set. <p>Traffic statistics:</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the VPI. • Output bytes—Number of bytes transmitted on the VPI. • Input packets—Number of packets received on the VPI. • Output packets—Number of packets transmitted on the VPI. 	detail extensive none
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Encapsulation	Encapsulation on the logical interface.	All levels
Traffic statistics	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	detail extensive
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
protocol-family	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Protocol	Protocol family configured on the logical interface.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
VCI	Virtual circuit identifier number and information: <ul style="list-style-type: none"> • Flags—VCI flags: <ul style="list-style-type: none"> • Active—VCI is up and in working condition. • CCC down—VCI CCC is not in working condition. • Closed—VCI is closed because the user disabled the logical or physical interface from the CLI. • Configured—VCI is configured. • Down—VCI is not in working condition. The VCI might have alarms, defects, F5 AIS/RDI, or no response to OAM loopback cells. • ILMI—VCI is up and in working condition. • OAM—OAM loopback is enabled. • Multicast—VCI is a multicast VCI or DLCI. • Multipoint destination—VCI is configured as a multipoint destination. • None—No VCI flags. • Passive-OAM—Passive OAM is enabled. • Shaping—Shaping is enabled. • Sustained—Shaping rate is set to Sustained. • Unconfigured—VCI is not configured. • Total down time—Total number of seconds the VCI has been down, using the format Total down time: hh:mm:ss or Never. • Last down—Time of last Down transition, using the format Last down: hh:mm:ss. • EPD threshold—(ATM2 only) Threshold at which a packet is dropped when the queue size (in number of cells) exceeds the early packet-discard (EPD) value. 	All levels

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
VCI (continued)	<ul style="list-style-type: none"> • Transmit weight cells—(ATM2 only) Amount of bandwidth assigned to this queue. • ATM per-VC transmit statistics: <ul style="list-style-type: none"> • Tail queue packet drops—Number of packets dropped because of bandwidth constraints. This value indicates that packets are queued to send out at a rate faster than allowed. • OAM F4 cell statistics—(Nonpromiscuous mode) OAM F4 statistics: <ul style="list-style-type: none"> • Total received—Number of OAM F4 cells received. • Total sent—Number of OAM F4 cells sent. • Loopback received—Number of OAM F4 loopback cells received. • Loopback sent—Number of OAM F4 loopback cells sent. • Last received—Time at which the last OAM F4 cell was received. • Last sent—Time at which the last OAM F4 cell was sent. • RDI received—Number of OAM F4 cells received with the remote defect indication bit set. • RDI sent—Number of OAM F4 cells sent with the RDI bit set. • AIS received—Number of OAM F4 cells received with the alarm indication signal bit set. • AIS sent—Number of OAM F4 cells sent with the AIS bit set. • Traffic statistics—Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface • Output packets—Number of packets transmitted on the interface. 	All levels
IMA group properties	<ul style="list-style-type: none"> • Version—The specified IMA specification version, either IMA 1.0 or IMA 1.1. • Frame length—The specified frame size, which can be 32, 64, 128, or 256. • Differential delay—Maximum differential delay among links in milliseconds. • Symmetry—Either Common Transmit Clock or Independent Transmit Clock timing mode. • Transmit clock—The specified IMA clock mode, either common or independent. • Minimum links—The number of minimum active links specified in both transmit and receive directions. <ul style="list-style-type: none"> • Transmit—The per-PIC limit on the number of minimum active links in the transmit direction. • Receive—The per-PIC limit on the number of minimum active links in the receive direction. • Frame synchronization—The specified IMA frame synchronization state transition variables (Alpha, Beta, and Gamma) and their specified values. <ul style="list-style-type: none"> • Alpha—The number of consecutive invalid ICP cells for IFSM. • Beta—The number of consecutive errored ICP cells for IFSM. • Gamma—The number of consecutive valid ICP cells for IFSM. • Links—The number of IMA links assigned to the IMA group. 	detail extensive none

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
IMA group alarms	<ul style="list-style-type: none"> • Start-up-FE—Far-end group alarm status • Config-Aborted—Near-end configuration aborted group alarm status • Config-Aborted-FE—Far-end configuration aborted group alarm status • Insufficient-Links—Near-end insufficient links group alarm status • Insufficient-Links-FE—Far-end insufficient links group alarm status • Blocked-FE—Far-end blocked group alarm status • GR-Timing-Mismatch—Group timing mismatch alarm status 	detail extensive none
IMA group defects	<ul style="list-style-type: none"> • Start-up-FE—Far-end group defect status • Config-Aborted—Near-end configuration aborted group defect status • Config-Aborted-FE—Far-end configuration aborted group defect status • Insufficient-Links—Near-end insufficient links group defect status • Insufficient-Links-FE—Far-end insufficient links group defect status • Blocked-FE—Far-end blocked group defect status • GR-Timing-Mismatch—Group timing mismatch defect status 	detail extensive none
IMA Group state	Near-end and far-end group status	detail extensive none
IMA group media	<p>IMA group media status, including seconds, count and state for the following media parameters:</p> <ul style="list-style-type: none"> • FC • FC-FE • Addr-Mismatch • Running • UAS 	detail extensive none

Sample Output

show interfaces (ATM, IMA Group)

```

user@host> show interfaces at-1/0/0

Physical interface: at-1/0/0, Enabled, Physical link is Up
IMA group properties:
  Version           : 1.1
  Frame length      : 128
  Differential delay : 25 milliseconds
  Symmetry          : Symmetrical Configuration and Operation
  Transmit clock     : Common
  Minimum links     : Transmit: 1, Receive: 1
  Frame synchronization: Alpha: 2, Beta: 2, Gamma: 1
  Links             : None
IMA group alarms   : Start-up-FE Config-Aborted Config-Aborted-FE
Insufficient-Links Insufficient-Links-FE Blocked-FE GR-Timing-Mismatch
IMA group defects  : Start-up-FE Config-Aborted Config-Aborted-FE
Insufficient-Links Insufficient-Links-FE Blocked-FE GR-Timing-Mismatch
IMA Group state:
  Near end : Start up

```

```

Far end : Start up
IMA group media:      Seconds      Count  State
FC                    0          0
FC-FE                 0          0
Addr-Mismatch         0          0
Running               0
UAS                   0

```

show interfaces extensive (ATM IMA Group)

user@host> show interfaces at-0/0/10 extensive

```

Physical interface: at-0/0/10, Enabled, Physical link is Up
  Interface index: 178, SNMP ifIndex: 540, Generation: 531
  Link-level type: ATM-PVC, MTU: 2048, Speed: Unspecified, Loopback: None, Payload
  scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 8 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:0a
  Last flapped   : 2012-03-16 16:49:15 PDT (2d 07:12 ago)
  Statistics last cleared: 2012-03-16 16:56:58 PDT (2d 07:05 ago)
  Traffic statistics:
    Input bytes   : 0          0 bps
    Output bytes  : 0          0 bps
    Input packets : 0          0 pps
    Output packets: 0          0 pps
  IPv6 transit statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Input errors:
    Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards:
0, L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors:
0, Resource errors: 0
  IMA group properties:
    Version          : 1.1
    Frame length      : 128
    Differential delay : 25 milliseconds
    Symmetry          : Symmetrical Configuration and Operation
    Transmit clock     : Common
    Minimum links      : Transmit: 1, Receive: 1
    Frame synchronization: Alpha: 2, Beta: 2, Gamma: 1
    Link #1           : t1-0/0/4          up
  IMA Group alarms   : None
  IMA Group defects   : None

  IMA Group state:
    Near end : Operational
    Far end  : Operational
  IMA group media:      Seconds      Count  State
  FC                    0          0
  FC-FE                 0          0
  Addr-Mismatch         0          0
  Running               198306

```

```

UAS                                0
ATM status:
  HCS state:      Sync
  LOC      :      OK
ATM Statistics:
  Uncorrectable HCS errors: 0, Correctable HCS errors: 0, Tx cell FIFO overruns:
0, Rx cell FIFO overruns: 0,
  Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0, Output
idle cell count: 0,
  Output VC queue drops: 0, Input no buffers: 0, Input length errors: 0, Input
timeouts: 0, Input invalid VCs: 0,
  Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
  Destination slot: 0
  VPI 2
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes      :              0
    Output bytes     :              0
    Input packets    :              0
    Output packets   :              0

  Logical interface at-0/0/10.602 (Index 71) (SNMP ifIndex 1057) (Generation
17226)
  Flags: Point-To-Point SNMP-Traps CCC-Down 0x0 Encapsulation:
ATM-CCC-Cell-Relay
  L2 circuit cell bundle size: 1, bundle timeout: 125 usec, timeout count: 0
  L2 circuit out-of-sequence count: 0, denied packets count: 0

```

show interfaces (ATM1, SONET Mode)

```

user@host> show interfaces at-1/0/0

Physical interface: at-1/0/0, Enabled, Physical link is Up
  Interface index: 300, SNMP ifIndex: 194
  Description: to allspice at-1/0/0
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:fe
  Last flapped   : 2006-02-24 14:28:12 PST (6d 01:51 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  SONET alarms   : None
  SONET defects  : None

  Logical interface at-1/0/0.0 (Index 64) (SNMP ifIndex 204)
  Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.220.24/30, Local: 192.168.220.26,
    Broadcast: 192.168.220.27
  Protocol iso, MTU: 4470
  Flags: None

```

```
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Input packets : 0
  Output packets: 0
```

show interfaces brief (ATM1, SONET Mode)

```
user@host> show interfaces at-1/0/0 brief
```

```
Physical interface: at-1/0/0, Enabled, Physical link is Up
  Description: to allspice at-1/0/0
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None

Logical interface at-1/0/0.0
  Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
  inet 192.168.220.26/30
  iso
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
```

show interfaces detail (ATM1, SONET Mode)

```
user@host> show interfaces at-1/0/0 detail
```

```
Physical interface: at-1/0/0, Enabled, Physical link is Up
  Interface index: 300, SNMP ifIndex: 194, Generation: 183
  Description: to allspice at-1/0/0
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:fe
  Last flapped   : 2006-02-24 14:28:12 PST (6d 01:55 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
  Egress queues: 4 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort    0 0 0
    1 expedited-fo   0 0 0
    2 assured-forw   0 0 0
    3 network-cont   0 0 0

  SONET alarms : None
  SONET defects : None
```



```

Logical interface at-1/0/0.0 (Index 64) (SNMP ifIndex 204) (Generation 5)
Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 13, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.220.24/30, Local: 192.168.220.26,
    Broadcast: 192.168.220.27, Generation: 14
Protocol iso, MTU: 4470, Generation: 14, Route table: 0
  Flags: None
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0

```

show interfaces extensive (ATM1, SONET Mode)

```
user@host> show interfaces at-1/0/0 extensive
```

```

Physical interface: at-1/0/0, Enabled, Physical link is Up
Interface index: 300, SNMP ifIndex: 194, Generation: 183
Description: to allspice at-1/0/0
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags : Present Running
Link flags : None
CoS queues : 4 supported, 4 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:fe
Last flapped : 2006-02-24 14:28:12 PST (6d 01:56 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Input errors:
  Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,

```

```

L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

Resource errors: 0
Egress queues: 4 supported, 4 in use
Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	0	0	0

```

SONET alarms : None
SONET defects : None
SONET PHY:

```

	Seconds	Count	State
PLL Lock	0	0	OK
PHY Light	0	0	OK

```

SONET section:

```

BIP-B1	0	0	
SEF	0	0	OK
LOS	0	0	OK
LOF	0	0	OK
ES-S	0		
SES-S	0		
SEFS-S	0		

```

SONET line:

```

BIP-B2	0	0	
REI-L	0	0	
RDI-L	0	0	OK
AIS-L	0	0	OK
BERR-SF	0	0	OK
BERR-SD	0	0	OK
ES-L	0		
SES-L	0		
UAS-L	0		
ES-LFE	0		
SES-LFE	0		
UAS-LFE	0		

```

SONET path:

```

BIP-B3	0	0	
REI-P	0	0	
LOP-P	0	0	OK
AIS-P	0	0	OK
RDI-P	0	0	OK
UNEQ-P	1	1	OK
PLM-P	0	0	OK
ES-P	1		
SES-P	1		
UAS-P	0		
ES-PFE	0		
SES-PFE	0		
UAS-PFE	0		

```

Received SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, C2(cmp) : 0x13, F2      : 0x00

```

```

Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
ATM status:
HCS state: Sync
LOC      : OK
ATM Statistics:
Uncorrectable HCS errors: 0, Correctable HCS errors: 0,
Tx cell FIFO overruns: 0, Rx cell FIFO overruns: 0,
Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0,
Output idle cell count: 0, Output VC queue drops: 0, Input no buffers: 0,
Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
Destination slot: 1
CoS information:
CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                        %      bps      %      usec
0 best-effort           95      147744000      95      0      low      none
3 network-control       5       7776000       5      0      low      none

Logical interface at-1/0/0.0 (Index 64) (SNMP ifIndex 204) (Generation 5)
Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 13, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.220.24/30, Local: 192.168.220.26,
Broadcast: 192.168.220.27, Generation: 14
Protocol iso, MTU: 4470, Generation: 14, Route table: 0
Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

show interfaces (ATM2, SDH Mode)

```
user@host> show interfaces at-0/2/1
```

```
Physical interface: at-0/2/1, Enabled, Physical link is Up
Interface index: 154, SNMP ifIndex: 42
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode, Speed: OC3,

Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
CoS queues     : 4 supported, 4 maximum usable queues
Current address: 00:00:5e:00:53:3f
Last flapped   : 2006-03-24 13:29:58 PST (00:04:48 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
SDH alarms     : None
SDH defects    : None
  VPI 0
    Flags: Active
    Total down time: 0 sec, Last down: Never
Traffic statistics:
  Input  packets:          0
  Output packets:          0

Logical interface at-0/2/1.0 (Index 75) (SNMP ifIndex 51)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
Input packets : 0
Output packets: 0
Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.12.6, Local: 10.0.12.5
Protocol iso, MTU: 4470
  Flags: None
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 0
  Input packets : 0
  Output packets: 0

Logical interface at-0/2/1.32767 (Index 76) (SNMP ifIndex 50)
Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Input packets : 0
Output packets: 0
VCI 0.4
  Flags: Active
  Total down time: 0 sec, Last down: Never
  EPD threshold: 0, Transmit weight cells: 0
  Input packets : 0
  Output packets: 0
```

show interfaces brief (ATM2, SDH Mode)

```
user@host> show interfaces at-0/2/1 brief
```

```
Physical interface: at-0/2/1, Enabled, Physical link is Up
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode,
```

```

Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
Logical interface at-0/2/1.0
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
  inet 10.0.12.5      --> 10.0.12.6
  iso
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 0

Logical interface at-0/2/1.32767
  Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  VCI 0.4
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 0, Transmit weight cells: 0

```

show interfaces detail (ATM2, SDH Mode)

```
user@host> show interfaces at-0/2/1 detail
```

```

Physical interface: at-0/2/1, Enabled, Physical link is Up
Interface index: 154, SNMP ifIndex: 42, Generation: 40
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode, Speed: OC3,

Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
CoS queues     : 4 supported, 4 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:3f
Last flapped   : 2006-03-24 13:29:58 PST (00:05:10 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :                0                0 bps
  Output bytes  :                0                0 bps
  Input packets :                0                0 pps
  Output packets:                0                0 pps
Egress queues: 4 supported, 4 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

  0 best-effort    0                0                0
  1 expedited-fo   0                0                0
  2 assured-forw   0                0                0
  3 network-cont   0                0                0

SDH  alarms   : None
SDH  defects  : None
VPI 0
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes   :                0
    Output bytes  :                0

```

```

        Input  packets:          0
        Output packets:          0

Logical interface at-0/2/1.0 (Index 75) (SNMP ifIndex 51) (Generation 25)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
Traffic statistics:
  Input  bytes  :          0
  Output bytes  :          0
  Input  packets:          0
  Output packets:          0
Local statistics:
  Input  bytes  :          0
  Output bytes  :          0
  Input  packets:          0
  Output packets:          0
Transit statistics:
  Input  bytes  :          0          0 bps
  Output bytes  :          0          0 bps
  Input  packets:          0          0 pps
  Output packets:          0          0 pps
Protocol inet, MTU: 4470, Generation: 62, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.0.12.6, Local: 10.0.12.5, Broadcast: Unspecified,
  Generation: 58
Protocol iso, MTU: 4470, Generation: 63, Route table: 0
Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 0
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
  Input  bytes  :          0
  Output bytes  :          0
  Input  packets:          0
  Output packets:          0
Logical interface at-0/2/1.32767 (Index 76) (SNMP ifIndex 50) (Generation 26)
Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Traffic statistics:
  Input  bytes  :          0
  Output bytes  :          0
  Input  packets:          0
  Output packets:          0
Local statistics:
  Input  bytes  :          0
  Output bytes  :          0
  Input  packets:          0
  Output packets:          0
VCI 0.4
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 0, Transmit weight cells: 0
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
  Input  bytes  :          0
  Output bytes  :          0

```

```

Input packets:          0
Output packets:         0

```

show interfaces extensive (ATM2, SDH Mode)

```
user@host> show interfaces at-0/2/1 extensive
```

```

Physical interface: at-0/2/1, Enabled, Physical link is Up
Interface index: 154, SNMP ifIndex: 42, Generation: 40
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode, Speed: OC3,

Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
CoS queues     : 4 supported, 4 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:3f
Last flapped   : 2006-03-24 13:29:58 PST (00:06:49 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          0          0 bps
Output bytes  :          0          0 bps
Input packets :          0          0 pps
Output packets:          0          0 pps
Input errors:
Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,

L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
Resource errors: 0
Output errors:
Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

Resource errors: 0
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets    Transmitted packets    Dropped packets

0 best-effort          0              0              0

1 expedited-fo         0              0              0

2 assured-forw         0              0              0

3 network-cont         0              0              0

SDH  alarms   : None
SDH  defects  : None
SDH PHY:
Seconds      Count  State
PLL Lock     0       0  OK
PHY Light    1       1  OK
SDH regenerator section:
RS-BIP8      2       8828
OOF          2         2  OK
LOS          2         1  OK
LOF          2         1  OK
RS-ES        4
RS-SES       3
RS-SEFS      2
SDH multiplex section:
MS-BIP24     2       771
MS-FEBE      1      17476

```

```

MS-FERF                2                1 OK
MS-AIS                  2                1 OK
BERR-SF                 0                0 OK
BERR-SD                 0                0 OK
MS-ES                   4
MS-SES                  2
MS-UAS                  0
MS-ES-FE                3
MS-SES-FE               2
MS-UAS-FE               0
SDH path:
HP-BIP8                 1                6
HP-FEBE                 1            251
HP-LOP                  0                0 OK
HP-AIS                  2                1 OK
HP-FERF                 3                2 OK
HP-UNEQ                 1                1 OK
HP-PLM                  2                1 OK
HP-ES                   4
HP-SES                  3
HP-UAS                  0
HP-ES-FE                3
HP-SES-FE               3
HP-UAS-FE               0
Received SDH overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, C2(cmp) : 0x13, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SDH overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
ATM status:
HCS state:      Sync
LOC      :      OK
ATM Statistics:
Uncorrectable HCS errors: 0, Correctable HCS errors: 0,
Tx cell FIFO overruns: 0, Rx cell FIFO overruns: 0,
Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0,
Output idle cell count: 0, Output VC queue drops: 0, Input no buffers: 0,
Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
Destination slot: 0
VPI 0
Flags: Active
Total down time: 0 sec, Last down: Never
Traffic statistics:
Input bytes      : 0
Output bytes     : 0
Input packets    : 0
Output packets   : 0

Logical interface at-0/2/1.0 (Index 75) (SNMP ifIndex 51) (Generation 25)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
Traffic statistics:
Input bytes      : 0
Output bytes     : 0
Input packets    : 0
Output packets   : 0

```



```

Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 62, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.12.6, Local: 10.0.12.5, Broadcast: Unspecified,
    Generation: 58
Protocol iso, MTU: 4470, Generation: 63, Route table: 0
  Flags: None
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 0
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
Logical interface at-0/2/1.32767 (Index 76) (SNMP ifIndex 50) (Generation 26)
  Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
VCI 0.4
  Flags: Active
  Total down time: 0 sec, Last down: Never
  EPD threshold: 0, Transmit weight cells: 0
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0

```

show interfaces (ATM2, SONET Mode)

```
user@host> show interfaces at-0/3/1
```

```

Physical interface: at-0/3/1, Enabled, Physical link is Up
Interface index: 139, SNMP ifIndex: 67
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,

```

```
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags : Present Running
Link flags   : None
CoS queues   : 4 supported, 4 maximum usable queues
Current address: 00:00:5e:00:53:5e
Last flapped : 2006-03-13 17:46:36 PST (16:01:12 ago)
Input rate   : 0 bps (0 pps)
Output rate   : 0 bps (0 pps)
SONET alarms : None
SONET defects : None
  VPI 0
    Flags: Active, OAM, Shaping
    CBR, Peak: 50kbps
    OAM, Period 30 sec, Up count: 10, Down count: 10
    Total down time: 0 sec, Last down: Never
    OAM F4 cell statistics:
      Total received: 4, Total sent: 4
      Loopback received: 4, Loopback sent: 4
      RDI received: 0, RDI sent: 0
      AIS received: 0
    Traffic statistics:
      Input packets: 4
      Output packets: 30
  VPI 10
    Flags: Active
    Total down time: 0 sec, Last down: Never
    Traffic statistics:
      Input packets: 0
      Output packets: 0
Logical interface at-0/3/1.0 (Index 78) (SNMP ifIndex 77)
  Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
  Encapsulation: ATM-SNAP
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.59.5, Local: 10.0.59.6
  Protocol iso, MTU: 4470
  Flags: None
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 10
    Input packets : 0
    Output packets: 0
Logical interface at-0/3/1.32767 (Index 79) (SNMP ifIndex 76)
  Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  Input packets : 4
  Output packets: 30
  VCI 0.16
    Flags: Active, ILMI
    Total down time: 0 sec, Last down: Never
    EPD threshold: 0, Transmit weight cells: 0
    Input packets : 0
    Output packets: 26
  VCI 0.4
    Flags: Active, OAM
```

```

OAM, Period 30 sec, Up count: 10, Down count: 10
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 0
  Input packets : 4
  Output packets: 4
OAM F4 cell statistics:
Total received: 4, Total sent: 4
Loopback received: 4, Loopback sent: 4
RDI received: 0, RDI sent: 0
AIS received: 0, AIS sent: 0

```

show interfaces brief (ATM2, SONET Mode)

```
user@host> show interfaces at-0/3/1 brief
```

```

Physical interface: at-0/3/1, Enabled, Physical link is Up
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None

Logical interface at-0/3/1.0
Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
Encapsulation: ATM-SNAP
inet 10.0.59.6      --> 10.0.59.5
iso
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 10

Logical interface at-0/3/1.32767
Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
VCI 0.16
  Flags: Active, ILMI
  Total down time: 0 sec, Last down: Never
  EPD threshold: 0, Transmit weight cells: 0
VCI 0.4
  Flags: Active, OAM
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 0

```

show interfaces detail (ATM2, SONET Mode)

```
user@host> show interfaces at-0/3/1 detail
```

```

Physical interface: at-0/3/1, Enabled, Physical link is Up
Interface index: 139, SNMP ifIndex: 67, Generation: 22
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
CoS queues     : 4 supported, 4 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:5e
Last flapped   : 2006-03-13 17:46:36 PST (16:02:39 ago)
Statistics last cleared: Never
Traffic statistics:

```

```

Input bytes :          312          0 bps
Output bytes :         2952          0 bps
Input packets:          6          0 pps
Output packets:         50          0 pps
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          44          44          0
  1 expedited-fo          0          0          0
  2 assured-forw          0          0          0
  3 network-cont          6          6          0

SONET alarms : None
SONET defects : None
VPI 0
  Flags: Active, OAM, Shaping
  CBR, Peak: 50kbps
  OAM, Period 30 sec, Up count: 10, Down count: 10
  Total down time: 0 sec, Last down: Never
  OAM F4 cell statistics:
  Total received: 6, Total sent: 6
  Loopback received: 6, Loopback sent: 6
  Last received: 00:00:29, Last sent: 00:00:29
  RDI received: 0, RDI sent: 0
  AIS received: 0
  Traffic statistics:
    Input bytes :          312
    Output bytes :         2952
    Input packets:          6
    Output packets:         50
VPI 10
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
Logical interface at-0/3/1.0 (Index 78) (SNMP ifIndex 77) (Generation 20)
  Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
  Encapsulation: ATM-SNAP
  Traffic statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Local statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Transit statistics:
    Input bytes :          0          0 bps
    Output bytes :          0          0 bps
    Input packets:          0          0 pps
    Output packets:          0          0 pps

```

```

Protocol inet, MTU: 4470, Generation: 38, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.59.5, Local: 10.0.59.6, Broadcast: Unspecified,
    Generation: 44
Protocol iso, MTU: 4470, Generation: 39, Route table: 0
  Flags: None
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 10
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
Logical interface at-0/3/1.32767 (Index 79) (SNMP ifIndex 76) (Generation 21)
  Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  Traffic statistics:
    Input bytes : 360
    Output bytes : 3302
    Input packets: 6
    Output packets: 50
  Local statistics:
    Input bytes : 360
    Output bytes : 3302
    Input packets: 6
    Output packets: 50
VCI 0.16
  Flags: Active, ILMI
  Total down time: 0 sec, Last down: Never
  EPD threshold: 0, Transmit weight cells: 0
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes : 0
    Output bytes : 2640
    Input packets: 0
    Output packets: 44
VCI 0.4
  Flags: Active, OAM
  OAM, Period 30 sec, Up count: 10, Down count: 10
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 0
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes : 312
    Output bytes : 312
    Input packets: 6
    Output packets: 6
  OAM F4 cell statistics:
    Total received: 6, Total sent: 6
    Loopback received: 6, Loopback sent: 6
    Last received: 00:00:29, Last sent: 00:00:29
    RDI received: 0, RDI sent: 0
    AIS received: 0, AIS sent: 0

```

show interfaces extensive (ATM2, SONET Mode)

```
user@host> show interfaces at-0/3/1 extensive
```

```
Physical interface: at-0/3/1, Enabled, Physical link is Up
Interface index: 139, SNMP ifIndex: 67, Generation: 22
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
CoS queues     : 4 supported, 4 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:5e
Last flapped   : 2006-03-13 17:46:36 PST (16:04:12 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          520          0 bps
Output bytes  :         4240          0 bps
Input packets :           10          0 pps
Output packets:           72          0 pps
Input errors:
Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,

L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

Resource errors: 0
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort                62                62                0

  1 expedited-fo                0                0                0

  2 assured-forw                0                0                0

  3 network-cont               10               10                0

SONET alarms   : None
SONET defects  : None
SONET PHY:
Seconds      Count  State
  PLL Lock    0      0 OK
  PHY Light   0      0 OK
SONET section:
BIP-B1        0      0
SEF           0      0 OK
LOS           0      0 OK
LOF           0      0 OK
ES-S          0
SES-S         0
SEFS-S        0
SONET line:
BIP-B2        0      0
REI-L         0      0
RDI-L         0      0 OK
AIS-L         0      0 OK
BERR-SF       0      0 OK
BERR-SD       0      0 OK
```

```

ES-L          0
SES-L         0
UAS-L         0
ES-LFE       0
SES-LFE       0
UAS-LFE       0
SONET path:
BIP-B3        0          0
REI-P         0          0
LOP-P         0          0 OK
AIS-P         0          0 OK
RDI-P         0          0 OK
UNEQ-P        1          1 OK
PLM-P         0          0 OK
ES-P          1
SES-P          1
UAS-P          0
ES-PFE        0
SES-PFE        0
UAS-PFE        0
Received SONET overhead:
F1   : 0x00, J0   : 0x00, K1   : 0x00, K2   : 0x00
S1   : 0x00, C2   : 0x13, C2(cmp) : 0x13, F2   : 0x00
Z3   : 0x00, Z4   : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1   : 0x00, J0   : 0x01, K1   : 0x00, K2   : 0x00
S1   : 0x00, C2   : 0x13, F2   : 0x00, Z3   : 0x00
Z4   : 0x00
ATM status:
HCS state:      Sync
LOC           :      OK
ATM Statistics:
Uncorrectable HCS errors: 0, Correctable HCS errors: 0,
Tx cell FIFO overruns: 0, Rx cell FIFO overruns: 0,
Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0,
Output idle cell count: 0, Output VC queue drops: 0, Input no buffers: 0,
Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
Destination slot: 0
VPI 0
  Flags: Active, OAM, Shaping
  CBR, Peak: 50kbps
  OAM, Period 30 sec, Up count: 10, Down count: 10
  Total down time: 0 sec, Last down: Never
  OAM F4 cell statistics:
  Total received: 10, Total sent: 10
  Loopback received: 10, Loopback sent: 10
  Last received: 00:00:02, Last sent: 00:00:02
  RDI received: 0, RDI sent: 0
  AIS received: 0
  Traffic statistics:
    Input bytes   :          520
    Output bytes  :         4240
    Input packets :          10
    Output packets:          72
VPI 10
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Traffic statistics:

```

```

        Input bytes :           0
        Output bytes :          0
        Input packets:          0
        Output packets:         0

Logical interface at-0/3/1.0 (Index 78) (SNMP ifIndex 77) (Generation 20)
Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
Encapsulation: ATM-SNAP
Traffic statistics:
  Input bytes :           0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Local statistics:
  Input bytes :           0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Transit statistics:
  Input bytes :           0           0 bps
  Output bytes :          0           0 bps
  Input packets:          0           0 pps
  Output packets:         0           0 pps
Protocol inet, MTU: 4470, Generation: 38, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.59.5, Local: 10.0.59.6, Broadcast: Unspecified,
    Generation: 44
Protocol iso, MTU: 4470, Generation: 39, Route table: 0
  Flags: None
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 10
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes :           0
    Output bytes :          0
    Input packets:          0
    Output packets:         0

Logical interface at-0/3/1.32767 (Index 79) (SNMP ifIndex 76) (Generation 21)
Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Traffic statistics:
  Input bytes :           660
  Output bytes :         5473
  Input packets:           11
  Output packets:          83
Local statistics:
  Input bytes :           660
  Output bytes :         5473
  Input packets:           11
  Output packets:          83
VCI 0.16
  Flags: Active, ILMI
  Total down time: 0 sec, Last down: Never
  EPD threshold: 0, Transmit weight cells: 0
  ATM per-VC transmit statistics:

```



```
Tail queue packet drops: 0
Traffic statistics:
  Input bytes :          0
  Output bytes :        4320
  Input packets:         0
  Output packets:       72
VCI 0.4
Flags: Active, OAM
OAM, Period 30 sec, Up count: 10, Down count: 10
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 0
ATM per-VC transmit statistics:
  Tail queue packet drops: 0
  Traffic statistics:
    Input bytes :          572
    Output bytes :        572
    Input packets:         11
    Output packets:        11
OAM F4 cell statistics:
  Total received: 11, Total sent: 11
  Loopback received: 11, Loopback sent: 11
  Last received: 00:00:18, Last sent: 00:00:18
  RDI received: 0, RDI sent: 0
  AIS received: 0, AIS sent: 0
```

show interfaces (Channelized DS3-to-DS0)

Syntax `show interfaces ds-fpc/pic/port:t1channel:ds0channel`
`<brief | detail | extensive>`
`<descriptions>`
`<media>`
`<snmp-index snmp-index>`
`<statistics>`

Release Information Command introduced before Junos OS Release 7.4.

Description (M Series and T Series routers only) Display status information about the specified channelized DS3-to-DS0 interface.

Options `ds-fpc/pic/port:t1channel:ds0channel`—Display standard information about the specified channelized DS3-to-DS0 interface.

`brief | detail | extensive`—(Optional) Display the specified level of output interface.

`descriptions`—(Optional) Display interface description strings.

`media`—(Optional) Display media-specific information about network interfaces.

`snmp-index snmp-index`—(Optional) Display information for the specified SNMP index of the interface.

`statistics`—(Optional) Display static interface statistics.

Required Privilege Level view

List of Sample Output [show interfaces extensive \(Channelized DS3-to-DS0\) on page 1302](#)

Output Fields [Table 60 on page 1294](#) lists the output fields for the **show interfaces** (all Channelized DS3 interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 60: Channelized DS3 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “ Common Output Fields Description ” on page 1168.	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Mode	Whether C-bit parity mode or M13 mode is enabled.	All levels
Framing	Physical layer framing format used on the link. It can be ESF or SF . The default is ESF .	All levels
Parent	(Channelized IQ interfaces only) Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under " Common Output Fields Description " on page 1168.	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under " Common Output Fields Description " on page 1168.	All levels
Link flags	Information about the link. Possible values are described in the "Link Flags" section under " Common Output Fields Description " on page 1168.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> interval seconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. down-count number—The number of keepalive packets that a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI) can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is (ANSI or ITU) LMI settings: value, value, value...xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> n391dte—DTE full status polling interval (1–255) n392dce—DCE error threshold (1–10) n392dte—DTE error threshold (1–10) n393dce—DCE monitored event count (1–10) n393dte—DTE monitored event count (1–10) t391dte—DTE polling timer (5–30 seconds) t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) LMI packet statistics:</p> <ul style="list-style-type: none"> Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago). Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last seen hh:mm:ss ago). 	detail extensive none
LCP state	<p>(PPP) Link Control Protocol state.</p> <ul style="list-style-type: none"> Conf-ack-received—Acknowledgement was received. Conf-ack-sent—Acknowledgement was sent. Conf-req-sent—Request was sent. Down—LCP negotiation is incomplete (not yet completed or has failed). Not-configured—LCP is not configured on the interface. Opened—LCP negotiation is successful. 	detail extensive none
NCP state	<p>(PPP) Network Control Protocol state.</p> <ul style="list-style-type: none"> Conf-ack-received—Acknowledgement was received. Conf-ack-sent—Acknowledgement was sent. Conf-req-sent—Request was sent. Down—NCP negotiation is incomplete (not yet completed or has failed). Not-configured—NCP is not configured on the interface. Opened—NCP negotiation is successful. 	detail extensive none

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CHAP state	<p>(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.</p> <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication). • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: <i>year-month-day hour:minute:second timezone hh:mm:ss ago</i> . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Giants—Number of frames received that are larger than the giant threshold. • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Counter increments when the software could not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Count of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value in this field increments, the PIC is malfunctioning. • HS link CRC errors—Count of errors on the high-speed links between the ASICs responsible for handling the router interfaces. 	extensive
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly, (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. 	extensive

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
DS1 alarms	Media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm.	detail extensive none
DS1 defects	Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. <ul style="list-style-type: none"> • LOS—Loss of signal. • LOF—Loss of frame. • AIS—Alarm indication signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	
T1 media	Counts of T1 media-specific errors. <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>The T1 media-specific error types can be:</p> <ul style="list-style-type: none"> • SEF—Severely errored framing • BEE—Bit error event • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CS—Carrier state • LES—Line error seconds • ES—Errored seconds • SEFS—Severely errored framing seconds (section) • SES—Severely errored seconds • BES—Bit error seconds • UAS—Unavailable seconds 	extensive

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
DS3 media	<p>Counts of T3 media-specific errors. For detailed definitions of the T3 (DS-3) error events (BPV, EXZ, LCV, PCV, and CCV) and performance parameters (LES, PES, PSES, CES, CSES, SEFS, and UAS), see RFC 2496.</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop out of lock • Reframing—Frame alignment recovery time • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • IDLE—Idle code detected • YELLOW—Remote defect indication • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CCV—C-bit coding violation • LES—Line error seconds • PES—P-bit errored seconds • PSES—P-bit errored seconds (section) • CES—C-bit errored seconds • CSES—C-bit severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Byte encoding—Byte encoding used: Nx64K or Nx56K. • Data inversion—HDLC data inversion setting: Enabled or Disabled 	extensive
Interface transmit queues	<p>Name of the transmit queues and their associated statistics for each DS1 channel on the Channelized DS3-to-DS1 PIC.</p> <ul style="list-style-type: none"> • B/W—Queue bandwidth as a percentage of the total interface bandwidth. • WRR—Weighted round-robin (in percent). • Packets—Number of packets transmitted. • Bytes—Number of bytes transmitted. • Drops—Number of packets dropped. • Errors—Number of packet errors. 	extensive

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
DS1 or DS3 BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface; values are described in the “Logical Interface Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Bandwidth	Bandwidth configured on the interface.	All levels
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mpls .	detail extensive none

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive none
Redundant Link	(LSQ redundancy) Backup link for Link Services IQ redundancy.	detail extensive none

Sample Output

show interfaces extensive (Channelized DS3-to-DS0)

```
user@host> show interfaces ds-0/0/0:0:0 extensive
```

```
Physical interface: ds-0/0/0:0:0, Enabled, Physical link is Up
  Interface index: 174, SNMP ifIndex: 4298, Generation: 177
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps, FCS: 16,
  Mode: C/Bit parity, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input  : 280 (last seen 00:00:09 ago)
    Output: 286 (last sent 00:00:00 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Not-configured
  Last flapped   : 2002-05-23 17:53:29 PDT (00:46:46 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                6814                16 bps
```

```

Output bytes :                28840                72 bps
Input packets:                568                0 pps
Output packets:               893                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 39, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 2, L2 mismatch timeouts: 0,
  HS link CRC errors: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0
DS1  alarms : None
DS3  alarms : None
DS1  defects : None
DS3  defects : None
T1 media:
  Seconds      Count  State
  SEF          0        0 OK
  BEE          5        1 OK
  AIS          0        0 OK
  LOF          0        0 OK
  LOS          0        0 OK
  YELLOW       17        1 OK
  BPV          0        0
  EXZ          0        0
  LCV          5       27765
  PCV          0        0
  CS           0        0
  LES          0
  ES           0
  SES          5
  SEFS         10
  BES          0
  UAS          0
DS3 media:
  Seconds      Count  State
  PLL Lock     0        0 OK
  Reframing    0        0 OK
  AIS          0        0 OK
  LOF          0        0 OK
  LOS          0        0 OK
  IDLE         0        0 OK
  YELLOW       0        0 OK
  BPV          1       65535
  EXZ          1       65535
  LCV          2      131070
  PCV          1       1825
  CCV          0        0
  LES          1
  PES          1
  PSES         1
  CES          0
  CSES         0
  SEFS         0
  UAS          0
Interface transmit queues:
      B/W  WRR      Packets      Bytes      Drops      Errors
Queue0   95  95         0         0         0         0
Queue1    5   5       893      28840         0         0
HDLC configuration:
  Giant threshold: 1514, Runt threshold: 3
  Timeslots      : 1-10
  Byte encoding: Nx64K, Data inversion: Disabled
DS3 BERT configuration:

```

```

BERT time period: 10 seconds, Elapsed: 0 seconds
Algorithm: 2^15 - 1, Induced error rate: 10e-0
DS1 BERT configuration:
BERT time period: 10 seconds, Elapsed: 0 seconds
Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
Destination slot: 0, PLP byte: 2 (0x01)
CoS information:      CoS transmit queue      Bandwidth      Buffer
Priority  Limit
           %      bps  %      usec
0 best-effort      95      608000  95      0      low  none
3 network-control  5      32000   5      0      low  none
Logical interface ds-0/0/0:0:0.0 (Index 5) (SNMP ifIndex 4299)
(Generation 943)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 949, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 1849

```

show interfaces (Channelized DS3-to-DS1)

Syntax	<pre>show interfaces t1-fpc/pic/port:t1channel <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized DS3-to-DS1 interface.
Options	<p>t1-fpc/pic/port:t1channel—Display standard information about the specified channelized DS3-to-DS1 interface.</p> <p>brief detail extensive terse—(Optional) Display brief, detail, extensive, or terse information about the interface.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces extensive (channelized DS3-to-DS1) on page 1305
Output Fields	See the output field table for the show interfaces (Channelized DS3-to-DS0) command.

Sample Output

show interfaces extensive (channelized DS3-to-DS1)

```
user@host> show interfaces t1-0/0/0:0 extensive
Physical interface: t1-0/0/0:0, Enabled, Physical link is Up
  Interface index: 210, SNMP ifIndex: 14, Generation: 2977
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: None, FCS: 16, Mode: C/Bit parity, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
```

```

Keepalive statistics:
  Input : 30 (last seen 00:00:05 ago)
  Output: 29 (last sent 00:00:00 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Not-configured
Last flapped   : 2002-05-23 17:30:12 PDT (17:29:43 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          944          16 bps
  Output bytes :         1162          16 bps
  Input packets:           66           0 pps
  Output packets:          82           0 pps
Input errors:
  Errors: 1, Drops: 0, Framing errors: 1, Policed discards: 8,
  L3 incompletes: 0, L2 channel errors: 1, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0
DS1  alarms : None
DS3  alarms : None
DS1  defects : None
DS3  defects : None
T1 media:
      Seconds      Count  State
SEF              0         0  OK
BEE             11         5  OK
AIS             28         1  OK
LOF             27         1  OK
LOS              0         0  OK
YELLOW          23         1  OK
BPV              0         0
EXZ              0         0
LCV             11       20574
PCV              0         0
CS               0         0
LES             28
ES              28
SES             39
SEFS            50
BES             0
UAS             0
DS3 media:
      Seconds      Count  State
PLL Lock        0         0  OK
Reframing       0         0  OK
AIS             0         0  OK
LOF             1         1  OK
LOS             1         1  OK
IDLE            0         0  OK
YELLOW          0         0  OK
BPV             2       131070
EXZ             3        49910
LCV             5       180980
PCV             2         327
CCV            12       264558
LES             3
PES             3
PSES           2
CES            13
CSES           13

```

```

SEFS                                1
UAS                                35
Interface transmit queues:
      B/W  WRR      Packets      Bytes      Drops      Errors
Queue0   95  95          0         0         0         0
Queue1    5   5         82       1162         0         0
HDLC configuration:
  Giant threshold: 1514, Runt threshold: 3
  Timeslots      : 1-10
  Line encoding: B8ZS, Byte encoding: Nx64K, Data inversion: Disabled
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, Induced error rate: 10e-0
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 2 (0x00) CoS information:
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      usec
0 best-effort             95      608000  95      0      low  none
3 network-control         5       32000   5       0      low  none
Logical interface t1-0/0/0:0.0 (Index 11) (SNMP ifIndex 23) (Generation 497)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Bandwidth: 0
Protocol inet, MTU: 1500, Generation: 576, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
  Generation: 977

```

show interfaces (Channelized E1 IQ)

Syntax	<pre>show interfaces (ce1-fpc/pic/port type-fpc/pic/port<:channel>) <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized E1 IQ interface.
Options	<p>type-fpc/pic/port:<channel>—Interface type with optional corresponding channel levels. For the physical channelized E1 IQ interface, type is ce. For the clear channel, type is e1. At the first level of channelization, type is ds.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (Channelized E1 IQ) (Physical) on page 1308</p> <p>show interfaces extensive (Channelized E1 IQ Multilink PPP Encapsulation) on page 1309</p> <p>show interfaces extensive (Channelized E1 IQ MLFR Encapsulation) on page 1310</p> <p>show interfaces detail (Clear Channel E1) on page 1311</p>
Output Fields	For information about output fields, see the output field table for the show interfaces (Channelized E1) command. Output fields are listed in the approximate order in which they appear.

Sample Output

show interfaces (Channelized E1 IQ) (Physical)

```
user@host> show interfaces ce1-1/2/3
Physical interface: ce1-1/2/3, Enabled, Physical link is Up
Interface index: 18, SNMP ifIndex: 1128
```



```

Link-level type: Frame-relay, Controller, MTU: 1504, Clocking: Internal, Speed:
E1, Loopback: None, FCS: 16, Framing: G704, Parent: None
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
    Enquiries sent : 43186
    Full enquiries sent : 8515
    Enquiry responses received : 43185
    Full enquiry responses received : 8515
DCE statistics:
    Enquiries received : 0
    Full enquiries received : 0
    Enquiry responses sent : 0
    Full enquiry responses sent : 0
Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timeout : 0
Nonmatching DCE-end DLCIs:
    2
Last flapped : 2002-10-04 17:52:51 PDT (00:32:57 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
DS1 alarms : None
DS1 defects : None

```

show interfaces extensive (Channelized E1 IQ Multilink PPP Encapsulation)

```
user@host> show interfaces ds-0/3/4:1 extensive
```

```

Physical interface: ds-0/3/4:1, Enabled, Physical link is Up
Interface index: 151, SNMP ifIndex: 63, Generation: 34
Link-level type: Multilink-PPP, MTU: 1518, Clocking: Internal, Speed: 64kbps,
Loopback: None, FCS: 16,
Parent: ce1-0/3/4 Interface index 150
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags : None
Hold-times : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
LCP state: Down
CHAP state: Closed
CoS queues : 4 supported, 4 maximum usable queues
Last flapped : Never
Statistics last cleared: 2005-12-21 10:32:15 PST (1w0d 03:10 ago)
Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 6070570 224 bps
    Input packets: 0 0 pps
    Output packets: 209330 0 pps
Input errors:
    Errors: 3, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,

```

```

    L2 mismatch timeouts: 0, HS link CRC errors: 0, Resource errors: 0
Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
    Resource errors: 0
HDLC configuration:
    Giant threshold: 1528, Runt threshold: 2
    Timeslots      : 1
    Data inversion: Disabled, Idle cycle flag: flags, Start end flag: shared
DSO BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
    Destination slot: 0, PLP byte: 4 (0x00)

Logical interface ds-0/3/4:1.0 (Index 74) (SNMP ifIndex 64) (Generation 13)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol mlppp, Multilink bundle: ls-0/1/0.0, MTU: 1514, Generation: 24,
Route table: 0

```

show interfaces extensive (Channelized E1 IQ MLFR Encapsulation)

```
user@host> show interfaces ds-0/3/4:5 extensive
```

```

Physical interface: ds-0/3/4:5, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 72, Generation: 38
Link-level type: Multilink-FR, MTU: 1518, Clocking: Internal, Speed: 64kbps,
Loopback: None, FCS: 16,
Parent: ce1-0/3/4 Interface index 150
Device flags      : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags       : No-Keepalives DCE
Hold-times       : Up 0 ms, Down 0 ms
ANSI LMI settings: n392dce 3, n393dce 4, t392dce 15 seconds
LMI statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
DTE statistics:
    Enquiries sent           : 0
    Full enquiries sent      : 0
    Enquiry responses received : 0
    Full enquiry responses received : 0
DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 0
CoS queues      : 4 supported, 4 maximum usable queues
Last flapped    : 2005-12-21 09:59:01 PST (1w0d 03:44 ago)
Statistics last cleared: 2005-12-21 10:32:15 PST (1w0d 03:10 ago)
Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
Input errors:

```

```

Errors: 3, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, HS link CRC errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
  Resource errors: 0
HDLC configuration:
  Giant threshold: 1528, Runt threshold: 2
  Timeslots      : 5
  Data inversion: Disabled, Idle cycle flag: flags, Start end flag: shared
DSO BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x01)

Logical interface ds-0/3/4:5.0 (Index 78) (SNMP ifIndex 73) (Generation 17)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes   : 0          0 bps
  Output bytes  : 0          0 bps
  Input packets: 0          0 pps
  Output packets: 0         0 pps
Protocol mfr, Multilink bundle: ls-0/1/0.1, MTU: 1514, Generation: 28, Route
table: 0
  DLCI 10
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets: 0
    Output packets: 0
  DLCI statistics:
    Active DLCI  :1 Inactive DLCI :0

```

show interfaces detail (Clear Channel E1)

```
user@host> show interfaces e1-1/2/6 detail
```

```

Physical interface: e1-1/2/6, Enabled, Physical link is Up
Interface index: 89, SNMP ifIndex: 1278, Generation: 341
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: E1, Loopback:None,
...
Logical interface e1-1/2/6.0 (Index 52) (SNMP ifIndex 1279) (Generation 169)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Bandwidth: 0
...

```

show interfaces (Channelized E1)

Syntax `show interfaces ds-fpc/pic/port:ds0channel`
`<brief | detail | extensive | terse>`
`<descriptions>`
`<media>`
`<snmp-index snmp-index>`
`<statistics>`

Release Information Command introduced before Junos OS Release 7.4.

Description (M Series and T Series routers only) Display status information the specified channelized E1 interface.

Options `ds-fpc/pic/port:ds0channel`—Display standard information about the specified channelized E1 interface.

`brief | detail | extensive | terse`—(Optional) Display the specified level of output.

`descriptions`—(Optional) Display interface description strings.

`media`—(Optional) Display media-specific information about network interfaces.

`snmp-index snmp-index`—(Optional) Display information for the specified SNMP index of the interface.

`statistics`—(Optional) Display static interface statistics.

Required Privilege Level view

List of Sample Output [show interfaces extensive \(Channelized E1\) on page 1321](#)

Output Fields [Table 61 on page 1312](#) lists the output fields for the **show interfaces** (Channelized E1 and Channelized E1 IQ) command. Output fields are listed in the approximate order in which they appear.

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source: Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Framing	Physical layer framing format used on the link. It can be G704 , G704-NO-CRC4 , or Unframed . The default is G704 .	All levels
Parent	(Channelized E1 IQ interfaces only) Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under " Common Output Fields Description " on page 1168.	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under " Common Output Fields Description " on page 1168.	All levels
Link flags	Information about the link. Possible values are described in the "Link Flags" section under " Common Output Fields Description " on page 1168.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> Interval seconds—Time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. Down-count number—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. Up-count number—Number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
LMI settings	<p>(Frame Relay) Settings for link management can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is (ANSI or ITU) LMI settings: value, value...xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> n391dte—DTE full status polling interval (1–255) n392dce—DCE error threshold (1–10) n392dte—DTE error threshold (1–10) n393dce—DCE monitored event count (1–10) n393dte—DTE monitored event count (1–10) t391dte—DTE polling timer (5–30 seconds) t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) Statistics about the link management.</p> <ul style="list-style-type: none"> Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago) Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last sent hh:mm:ss ago). 	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> Enquiries received—Number of enquiries received by the DCE from the DTE. Full enquiries received—Number of full enquiries received by the DCE from the DTE. Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Common statistics	<p>(Frame Relay) Statistics about messages sent between the DTE and the DCE:</p> <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for <code>n392dte</code> or <code>n393dce</code> intervals. (See LMI settings). 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay, displayed only from the DTE) Number of DLCIs configured from the DCE.	detail extensive none
LCP state	<p>(PPP) Link Control Protocol state.</p> <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none
CHAP state	<p>(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.</p> <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went down to up. The format is Last flapped: <i>year-month-day hour:minute:second timezone (hour:minute:second ago)</i> . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
CoS Queues	Number of CoS queues configured.	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Giants—Number of frames received that are larger than the giant threshold. • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • Resource errors—Sum of transmit drops. 	extensive

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), then either the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets larger than the MTU threshold. • Resource errors—Sum of transmit drops. 	extensive
DS1 alarms	E1 media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm.	detail extensive none
DS1 defects	<p>Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. The following lists all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> • LOS—Loss of signal. • LOF—Loss of frame. • AIS—Alarm indication signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
E1 media	<p>Active alarms and defects, plus counts of specific E1 errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>The E1 media-specific error types can be:</p> <ul style="list-style-type: none"> • SEF—Severely errored framing • BEE—Bit error • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CS—Carrier state • FEBS—Far-end block error • LES—Line error seconds • ES—Errored seconds • BES—Bursty errored seconds • SES—Severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Line encodingHDB3—Line encoding used. 	extensive
Interface transmit queues	<p>Names of the transmit queues and their associated statistics for each DSO channel on the Channelized E1 to DSO PIC.</p> <ul style="list-style-type: none"> • B/W—Queue bandwidth as a percentage of the total interface bandwidth. • WRR—Weighted round robin (in percent). • Packets—Number of packets transmitted. • Bytes—Number of bytes transmitted. • Drops—Number of packets dropped. • Errors—Number of packet errors. 	extensive

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
DSx BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Input packets	Number of packets received on the logical interface.	None specified

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the logical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than one second) for this counter to stabilize.	detail extensive
Transit statistics	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mpls .	detail extensive none
Multilink bundle	(Multilink) Interface name for the multilink bundle, if configured.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
DLCI	<p>(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags, Total down time, Last down, and Traffic statistics. Flags is one or more of the following:</p> <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	<p>(Frame Relay) Data-link connection identifier (DLCI) statistics.</p> <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces extensive (Channelized E1)

```

user@host> show interfaces ds-0/1/1:1 extensive
Physical interface: ds-0/1/1:1, Enabled, Physical link is Down
Interface index: 163, SNMP ifIndex: 37, Generation: 46
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: E1,
Loopback: None, FCS: 16, Framing: G704
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Hold-times    : Up 0 ms, Down 0 ms
CoS queues    : 4 supported, 4 maximum usable queues
Last flapped  : 2005-12-28 14:44:06 PST (00:00:30 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :                0                0 bps
  Output bytes  :                0                0 bps
  Input packets :                0                0 pps
  Output packets:                0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
  Resource errors: 0
DS1 alarms   : LOF, LOS
DS1 defects  : LOF, LOS
E1 media:
  Seconds      Count  State
  SEF          982318    1 Defect Active
  BEE           0         0 OK
  AIS           0         0 OK
  LOF          982318    1 Defect Active
  LOS          982318    1 Defect Active
  YELLOW        0         0 OK
  BPV           1         1
  EXZ           1         1
  LCV           1         1
  PCV           1         2
  CS            0         0
  FEBE          1         9
  LES           1
  ES          982318
  SES          982318
  SEFS          982318
  BES           1
  UAS           0
Interface transmit queues:
      B/W  WRR  Packets      Bytes      Drops      Errors
Queue0   95  95         0         0         0         0
Queue1    5   5         0         0         0         0
HDLC configuration:
  Giant threshold: 1514, Runt threshold: 3
  Timeslots      : 31
  Line encoding: HDB3, Data inversion: Disabled, Idle cycle flag: flags,
  Start end flag: shared
DS1 BERT configuration:

```

```
BERT time period: 0 seconds, Elapsed: 0 seconds
Induced Error rate: 10e-0, Algorithm: 2^11 - 1, 0.152 and 0.153 (2047 type),
Pseudorandom (8)
Packet Forwarding Engine configuration:
Destination slot: 0, PLP byte: 2 (0x1b)
CoS information:
  CoS transmit queue  Bandwidth  Buffer  Priority  Limit
                        %         bps    %      usec
0 best-effort         95      1945600  95      0        low  none
3 network-control     5       102400   5       0        low  none
```

show interfaces (Channelized OC12 IQ and IQE)

Syntax `show interfaces (type-fpc/pic/port<:channel><:channel><:channel>)
<brief | detail | extensive | terse>
<descriptions>
<media>
<snmp-index snmp-index>
<statistics>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display status information about the specified channelized OC12 IQ and IQE interface.

Options *type-fpc/pic/port:channel:channel:channel*—Interface type with optional corresponding channel levels.

For SONET mode, the interface type can be one of the following:

- *type-fpc/pic/port*—For the physical channelized OC12 IQ or IQE interface, *type* is *coc12*. For the clear channel, *type* is *so* (for OC12).
- *type-fpc/pic/port:channel*—At the first level of channelization, *type* can be *coc1* (channelized OC1), *ct3* (from *coc1*), *so* (for OC3), or *t3*.
- *type-fpc/pic/port:channel:channel*—At the second level of channelization, *type* can be *ct1* (from *ct3* or *coc1*) or *t1* (from *ct3* or *coc1*).
- *type-fpc/pic/port:channel:channel:channel*—At the third level of channelization, *type* is *ds* (from *ct1*).

For SDH mode, the interface type can be one of the following:

- *type-fpc/pic/port*—For the physical channelized OC12 IQ or IQE interface, *type* is *cstm4*. For the clear channel, *type* is *so* (for SONET/SDH (vc-4-4c)).
- *type-fpc/pic/port:channel*—At the first level of channelization, *type* can be *so* (from *cstm4*) or *cau4* (from *cstm4*).
- *type-fpc/pic/port:channel:channel*—At the second level of channelization, *type* can be *ct3* or *t3* (from or *cau4*).
- *type-fpc/pic/port:channel:channel:channel*—At the third level of channelization, *type* is *ct1* or *t1* (from *ct3*).
- *type-fpc/pic/port:channel:channel:channel*—At the fourth level of channelization, *type* is *ds* (from *ct1*).

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

Required Privilege Level view

List of Sample Output

- [show interfaces extensive \(CAU4 on Channelized OC-12 IQ\) on page 1324](#)
- [show interfaces extensive \(Channelized OC1 on Channelized OC12 IQ\) on page 1324](#)
- [show interfaces extensive \(Channelized OC12 IQ\) \(Physical\) on page 1324](#)
- [show interfaces extensive \(Channelized T1 from Channelized OC12 IQ\) on page 1325](#)
- [show interfaces extensive \(Channelized T3 on Channelized OC12 IQ\) on page 1325](#)
- [show interfaces extensive \(CSTM4 on Channelized OC-12 IQ\) on page 1325](#)
- [show interfaces extensive \(DS0 on Channelized OC12 IQ\) on page 1325](#)
- [show interfaces extensive \(SONET Interface on Channelized OC12 IQ\) on page 1326](#)
- [show interfaces extensive \(T1 on Channelized OC12 IQ\) on page 1326](#)

Output Fields See the output field table for the [show interfaces \(Channelized OC3 IQ and IQE\)](#) command.

Sample Output

[show interfaces extensive \(CAU4 on Channelized OC-12 IQ\)](#)

```
user@host> show interfaces cau4-0/2/0:1 extensive
Physical interface: cau4-0/2/0:1, Enabled, Physical link is Up
  Interface index: 219, SNMP ifIndex: 139, Generation: 221
  Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, Parent: cstm4-0/2/0 Interface index 216
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : None
...
```

[show interfaces extensive \(Channelized OC1 on Channelized OC12 IQ\)](#)

```
user@host> show interfaces extensive coc1-4/2/0:7
Physical interface: coc1-4/2/0:7, Enabled, Physical link is Up
  Interface index: 381, SNMP ifIndex: 2524, Generation: 728
  Link-level type: Controller, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: 51840kbps, Loopback: None,
  FCS: 16, Payload scrambler: Disabled, Parent: coc12-4/2/0 (Index 266)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

[show interfaces extensive \(Channelized OC12 IQ\) \(Physical\)](#)

```
user@host> show interfaces extensive coc12-4/2/0
```



```
Physical interface: coc12-4/2/0, Enabled, Physical link is Up
Interface index: 266, SNMP ifIndex: 1269, Generation: 601
Link-level type: Controller, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC12, Loopback: None,
FCS: 16, Payload scrambler: Disabled, Parent: None Device flags : Present
Running
Interface flags: Point-To-Point SNMP-Traps
Link flags : Keepalives DTE
...
```

show interfaces extensive (Channelized T1 from Channelized OC12 IQ)

```
user@host> show interfaces extensive ct1-4/2/0:7:1

Physical interface: ct1-4/2/0:4:1, Enabled, Physical link is Up
Interface index: 305, SNMP ifIndex: 2410, Generation: 640
Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: T1,
Loopback: None, FCS: 16,
Framing: ESF, Parent: coc1-4/2/0:7 (Index 304)
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags : None
...
```

show interfaces extensive (Channelized T3 on Channelized OC12 IQ)

```
user@host> show interfaces ct3-0/2/0:1 extensive

Physical interface: ct3-0/2/0:1:1, Enabled, Physical link is Up
Interface index: 220, SNMP ifIndex: 140, Generation: 222
Link-level type: Controller, Clocking: Internal, Speed: T3, Loopback: None,
Mode: C/Bit parity, Parent: cau4-0/2/0:1 Interface index 219
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags : None
...
```

show interfaces extensive (CSTM4 on Channelized OC-12 IQ)

```
user@host> show interfaces cstm4-0/2/0 extensive

Physical interface: cstm4-0/2/0, Enabled, Physical link is Up
Interface index: 216, SNMP ifIndex: 33, Generation: 218
Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC12,
Loopback: None, Parent: None Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags : None
...
```

show interfaces extensive (DSO on Channelized OC12 IQ)

```
user@host> show interfaces extensive ds-4/2/0:7:1:1

Physical interface: ds-4/2/0:4:1:1, Enabled, Physical link is Up
Interface index: 306, SNMP ifIndex: 2411, Generation: 641
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 64kbps,
Loopback: None, FCS: 16, Parent: ct1-4/2/0:7:1 (Index 305)
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
```

```
Link flags      : Keepalives
...
```

show interfaces extensive (SONET Interface on Channelized OC12 IQ)

```
user@host> show interfaces so-0/2/0:1 extensive
Physical interface: so-0/2/0:1, Enabled, Physical link is Up
Interface index: 750, SNMP ifIndex: 23, Generation: 11709
Link-level type: Multilink-FR, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16,
Payload scrambler: Enabled, Parent: coc12-0/2/0 Interface index 749
Device flags    : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags      : Keepalives DTE
...
```

show interfaces extensive (T1 on Channelized OC12 IQ)

```
user@host> show interfaces t1-0/2/0:1:1:1 extensive
Physical interface: t1-0/2/0:1:1:1, Enabled, Physical link is Up
Interface index: 222, SNMP ifIndex: 143, Generation: 226
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
Loopback: None, FCS: 16, Framing: ESF, Parent: ct3-0/2/0:1:1
Interface index 221
Device flags    : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags      : Keepalives
...
```

show interfaces (Channelized OC12)

Syntax	<pre>show interfaces t3-fpc/pic/port:t3channel <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified channelized OC12 interface.
Options	<p>t3-fpc/pic/port:t3channel—Display standard information about the specified channelized OC12 interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces extensive (Channelized OC12) on page 1327
Output Fields	See the output field table for the show interfaces (Channelized OC3 IQ and IQE) command.

Sample Output

show interfaces extensive (Channelized OC12)

```
user@host> show interfaces t3-0/3/0:0 extensive
```

```
Physical interface: t3-0/3/0:0, Enabled, Physical link is Up
  Interface index: 32, SNMP ifIndex: 21, Generation: 2719
  Link-level type: Frame-Relay, PPP, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: T3, Loopback: None, SONET Loopback: None, FCS: 16, Mode: C/Bit parity
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
  DTE statistics:
```

```

Enquiries sent           : 43186
Full enquiries sent      : 8515
Enquiry responses received : 43185
Full enquiry responses received : 8515
DCE statistics:
  Enquiries received      : 0
  Full enquiries received : 0
  Enquiry responses sent  : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 0
Nonmatching DCE-end DLCIs:
  2
Hold-times      : Up 0 ms, Down 0 ms
Last flapped    : 2002-05-23 16:59:03 PDT (18:23:58 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 1700      0 bps
  Output bytes : 1714     0 bps
  Input packets: 123      0 pps
  Output packets: 124     0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 1100817, Bucket drops: 0,
  Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0
DS3  alarms : None
SONET alarms : None
DS3  defects : None
SONET defects : None
DS3 media:
  Seconds      Count  State
  AIS          0      0 OK
  LOF          18      1 OK
  LOS          0      0 OK
  IDLE         0      0 OK
  YELLOW       0      0 OK
  BPV          0      0
  EXZ          0      0
  LCV          0      0
  PCV          36     122399
  CCV          72     91948
  LES          0
  PES          18
  PSES         18
  CES          18
  CSES         18
  SEFS         18
  UAS          0
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
DSU configuration:
  Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
  FEAC loopback: Inactive, Response: Disabled, Count: 0
DS3 BERT configuration:

```

```

BERT time period: 10 seconds, Elapsed: 0 seconds
Algorithm: Unknown (0), Induced error rate: 10e-0
Interface transmit queues:
      B/W  WRR      Packets      Bytes      Drops      Errors
Queue0   95  95          0          0          0          0
Queue1    5   5        529        6348          0          0
SONET PHY:
      Seconds      Count      State
PLL Lock          0          0 OK
PHY Light        20          1 OK
SONET section:
BIP-B1          0          0
SEF             20          1 OK
LOS             20          1 OK
LOF             20          1 OK
ES-S            20
SES-S            20
SEFS-S          20
SONET line:
BIP-B2          0          0
REI-L           0          0
RDI-L           0          0 OK
AIS-L           0          0 OK
BERR-SF         18          1 OK
BERR-SD          2          1 OK
ES-L            20
SES-L            20
UAS-L            10
ES-LFE          0
SES-LFE          0
UAS-LFE          0
SONET path:
BIP-B3          0          0
REI-P           0          0
LOP-P           20          1 OK
AIS-P           0          0 OK
RDI-P           0          0 OK
UNEQ-P          0          0 OK
PLM-P           20          1 OK
ES-P            20
SES-P            20
UAS-P            10
ES-PFE          0
SES-PFE          0
UAS-PFE          0
Received SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x04, C2(cmp) : 0x04, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00, V5      : 0x00
V5(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x04, F2      : 0x00, Z3      : 0x00
Z4      : 0x00, V5      : 0x00
Received path trace: t3-0/3/0:0
74 33 2d 30 2f 33 2f 30 3a 30 00 00 00 00 0d 0a   t3-0/3/0:0:.....
Transmitted path trace: t3-0/3/0:0
74 33 2d 30 2f 33 2f 30 3a 30 00 00 00 00 00 00   t3-0/3/0:0:.....
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:

```

CoS transmit queue		Bandwidth		Buffer	Priority	Limit
	%	bps	%	usec		
0 best-effort	95	42499200	95	0	low	none
3 network-control	5	2236800	5	0	low	none

Logical interface t3-0/3/0:0.0 (Index 11) (SNMP ifIndex 268) (Generation 499)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 578, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 98
DLCI 100
Flags: Active, Dce-configured
Total down time: 0 sec, Last down: Never
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
DLCI statistics:
Active DLCI :2 Inactive DLCI : 0

show interfaces (Channelized OC3 IQ and IQE)

Syntax	<pre>show interfaces (<i>type-fpc/pic/port</i> <:<i>channel</i>><:<i>channel</i>><:<i>channel</i>>) <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized OC3 IQ or IQE interface.
Options	<p><i>type-fpc/pic/port:channel:channel:channel</i>—Interface type with optional corresponding channel levels. The interface type can be one of the following:</p> <ul style="list-style-type: none"> • <i>type-fpc/pic/port</i>—For the physical interface, <i>type</i> is <i>coc3</i>. For the clear channel, <i>type</i> is <i>so</i> (for OC3). • <i>type-fpc/pic/port:channel</i>—At the first level of channelization, <i>type</i> can be <i>coc1</i> (channelized OC1), <i>ct3</i> (from <i>coc1</i>), or <i>t3</i> (from <i>coc1</i>). • <i>type-fpc/pic/port:channel:channel</i>—At the second level of channelization, <i>type</i> can be <i>ct1</i> (from <i>coc1</i> or <i>ct3</i>) or <i>t1</i> (from <i>coc1</i> or <i>ct3</i>). • <i>type-fpc/pic/port:channel:channel:channel</i>—At the third level of channelization, <i>type</i> can be <i>ds</i> (from <i>ct1</i>). <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces extensive (Channelized OC3 IQ) (Physical) on page 1345</p> <p>show interfaces extensive (Channelized OC1 on Channelized OC3 IQ) on page 1346</p> <p>show interfaces extensive (Channelized T1 on Channelized OC3 IQ) on page 1347</p> <p>show interfaces extensive (DSO on Channelized OC3 IQ) on page 1348</p>

Output Fields Table 62 on page 1332 lists the output fields for the **show interfaces** (all Channelized OC interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 62: Channelized OC show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “ Common Output Fields Description ” on page 1168.	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Description	Interface description.	All levels
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	SONET/SDH reference clock source. It can be Internal or External . Clocking is configured and displayed only for channel 0.	All levels
Framing mode	Framing mode: SONET or SDH .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
SONET loopback	Whether loopback is enabled on a SONET/SDH interface, and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16-bit .	All levels
Payload scrambler	Whether payload scrambling is enabled.	All levels
Parent	Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “ Common Output Fields Description ” on page 1168.	All levels

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Link flags	Information about the link. Possible values are described in the “Link Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
ANSI or ITU LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI). The format is (ANSI or ITU) LMI settings: <i>value, value... nn</i> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> • n391dte—DTE full status polling interval (1–255) • n392dce—DCE error threshold (1–10) • n392dte—DTE error threshold (1–10) • n393dce—DCE monitored event count (1–10) • n393dte—DTE monitored event count (1–10) • t391dte—DTE polling timer (5–30 seconds) • t392dce—DCE polling verification timer (5–30 seconds) 	All levels
LMI statistics	<p>(Frame Relay) Statistics about the link management.</p> <ul style="list-style-type: none"> • Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: <i>nn</i> (last sent <i>hh:mm:ss</i> ago). • Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: <i>nn</i> (last sent <i>hh:mm:ss</i> ago). 	detail extensive
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> • Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. • Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. • Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. • Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> • Enquiries received—Number of enquiries received by the DCE from the DTE. • Full enquiries received—Number of full enquiries received by the DCE from the DTE. • Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. • Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay) Number of DLCIs configured from the DCE, displayed only from the DTE.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hh:mm:ss timezone year-month-day (hh:mm:ss ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
CoS Queues	Number of CoS queues configured.	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
DS1 alarms DS1 defects	E1 or T1 media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. See the following list for all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i> . <ul style="list-style-type: none"> • LOS—Loss of signal. • LOF—Loss of frame. • AIS—Alarm indication signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	detail extensive none

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
T1 media	<p>Counts of T1 or E1 media-specific errors.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>The T1 or E1 media-specific error types are:</p> <ul style="list-style-type: none"> • SEF—Severely errored framing • BEE—Bit error • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CS—Carrier state • FEBE—Far-end block error (E1 only) • LES—Line error seconds • ES—Errored seconds • BES—Bit error seconds • SES—Severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Bucket Drops—Drops caused by traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is off. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value of this field increments, the PIC is malfunctioning. • HS link FIFO overflows—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces. • Resource errors—Sum of transmit drops. 	extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • HS link FIFO underflows—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeds the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Active alarms	Defects that can prevent the interface from passing packets:	detail extensive
Active defects	<ul style="list-style-type: none"> • None—There are no active defects or alarms. • LOF—Loss of frame. 	
SONET alarms	Media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm.	All levels
SONET defects	Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SONET PHY , SONET section , SONET line , and SONET path .	

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SONET vt	<p>SONET virtual-tributary (VT) alarms and defects:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-V—Remote error indication (near-end VT) • LOP-V—Loss of pointer (near-end VT) • AIS-V—Alarm indication signal (near-end VT) • RDI-V—Remote defect indication (near-end VT) • UNEQ-V—Unequipped (near-end VT) • PLM-V—Payload label mismatch (near-end VT) • ES-V—Errored seconds (near-end VT) • SES-V—Severely errored seconds (near-end VT) • UAS-V—Unavailable seconds (near-end VT) • ES-VFE—Errored seconds (far-end VT) • SES-VFE—Severely errored seconds (far-end VT) • UAS-VFE—Unavailable seconds (far-end VT) 	extensive
SONET PHY	<p>Counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SONET section	<p>Counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOS—Loss of signal • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SONET line	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive
SONET path	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • ES-PFE—Errored seconds (far-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Received SONET overhead	Values of the received and transmitted SONET/SDH overhead:	extensive
Transmitted SONET overhead	<p>F1—Section user channel byte. This byte is set aside for the purposes of users.</p> <p>S1—Synchronization Status (S1). The S1 byte is located in the first STS-1 of an STS-N. Bits 5 through 8 convey the synchronization status of the network element.</p> <p>Z3 and Z4—Path overhead.</p> <p>V5—Virtual Tributary (VT) path overhead byte.</p>	
SDH alarms SDH defects	<p>SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY, SDH regenerator section, SDH multiplex section, and SDH path.</p> <p>NOTE: For controller based SONET PICs, the SDH alarms and SDH defects output in the show interface coc3 extensive command output only shows the section and line level defects. The path level defects can be found under the SONET (so) interface output.</p>	All levels
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • RS-BIP8—24-bit BIP for multiplex section overhead (B2 bytes) • OOF—Out of frame • LOS—Loss of signal • LOF—Loss of frame • RS-ES—Errored seconds (near-end regenerator section) • RS-SES—Severely errored seconds (near-end regenerator section) • RS-SEFS—Severely errored framing seconds (regenerator section) 	extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • MS-BIP24—8-bit BIP for high-order path overhead (B3 byte) • MS-FEBE—Far-end block error (multiplex section) • MS-FERF—Far-end remote fail (multiplex section) • MS-AIS—alarm indication signal (multiplex section) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • MS-ES—Errored seconds (near-end multiplex section) • MS-SES—Severely errored seconds (near-end multiplex section) • MS-UAS—Unavailable seconds (near-end multiplex section) • MS-ES-FE—Errored seconds (far-end multiplex section) • MS-SES-FE—Severely errored seconds (far-end multiplex section) • MS-UAS-FE—Unavailable seconds (far-end multiplex section) 	extensive
SDH path	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • HP-BIP8—8-bit BIP for regenerator section overhead (B1 byte) • HP-FEBE—Far-end block error (high-order path) • HP-LOP—Loss of pointer (high-order path) • HP-AIS—High-order-path alarm indication signal • HP-FERF—Far-end remote fail (high-order path) • HP-UNEQ—Unequipped (high-order path) • HP-PLM—Payload label mismatch (high-order path) • HP-ES—Errored seconds (near-end high-order path) • HP-SES—Severely errored seconds (near-end high-order path) • HP-UAS—Unavailable seconds (near-end high-order path) • HP-ES-FE—Errored seconds (far-end high-order path) • HP-SES-FE—Severely errored seconds (far-end high-order path) • HP-UAS-FE—Unavailable seconds (far-end high-order path) 	extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Received SDH overhead	Values of the received and transmitted SONET overhead:	extensive
Transmitted SDH overhead	<ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—Allocated for future use. 	
Received path trace	Channelized OC12 interfaces allow path trace bytes to be sent inband across the SONET/SDH link. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits. This information is specific to each of the 12 channelized OC12 interfaces.	extensive
Transmitted path trace		
DS3 media	<p>Counts of T3 media-specific errors. For detailed definitions of the T3 (DS-3) error events (BPV, EXZ, LCV, PCV, and CCV) and performance parameters (LES, PES, PSES, CES, CSES, SEFS, and UAS), see RFC 2496.</p> <p>The DS3 or E3 media-specific error types can be:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop out of lock • Reframing—Frame alignment recovery time • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • IDLE—Idle code detected • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—(DS3 only) Pulse code violation • CCV—(DS3 only) C-bit coding violation • FEBE—(DS3 only) Far-end block error • LES—Line error seconds • PES—(DS3 only) P-bit errored seconds • PSES—(DS3 only) P-bit errored seconds (section) • CES—(DS3 only) C-bit errored seconds • CSES—(DS3 only) C-bit severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Line encoding—Line encoding used. It is always HDB3. • Byte encoding—(T1 only) Byte encoding used: Nx64K or Nx56K. • Line encoding—Line encoding used. For T1, the value can be B8ZS or AMI. For E1, the value is HDB3. • Data inversion—HDLC data inversion setting: Enabled or Disabled. • Idle cycle flag—Idle cycle flags. • Start end flag—Start and end flag. 	extensive
Interface transmit queues	<p>Name of the transmit queues and their associated statistics for each DS3 channel on the Channelized OC12 PIC.</p> <ul style="list-style-type: none"> • B/W—Queue bandwidth as a percentage of the total interface bandwidth. • WRR—Weighted round-robin (in percent). • Packets—Number of packets transmitted. • Bytes—Number of bytes transmitted. • Drops—Number of packets dropped. • Errors—Number of packet errors. 	extensive
DSU configuration	<p>Information about the DSU configuration. The last three lines (Bit count, Error bit count, and LOS information) are displayed only if a BERT has ever been run on the interface.</p> <ul style="list-style-type: none"> • Compatibility mode—CSU/DSU compatibility mode: None, Larscom, Kentrox, or Digital-Link. • Scrambling—Payload scrambling. It can be Enabled or Disabled. • Subrate—Configured subrate setting. Applies only when Digital-Link compatibility mode is used. It can be Disabled or display units in kbps. • FEAC loopback—(T3) Whether a far-end alarm and control (FEAC) loopback is Active or Inactive. This feature is used to send alarm or status information from the far-end terminal back to the near-end terminal and to initiate T3 loopbacks at the far-end terminal from the near-end terminal. • Response—Whether the FEAC signal is Enabled or Disabled. • Count—Number of FEAC loopbacks. 	extensive
BERT configuration	<p>(DS interfaces) BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Traffic statistics	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize. <ul style="list-style-type: none"> • Input rate—Rate of bits and packets received on the interface. • Output rate—Rate of bits and packets transmitted on the interface. 	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
Multilink bundle	(If the logical interface is configured as part of a multilink bundle.) Interface name for the multilink bundle.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics . Flags is one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces extensive (Channelized OC3 IQ) (Physical)

```
user@host> show interfaces extensive coc3-0/0/0
```

```

Physical interface: coc3-0/0/0, Enabled, Physical link is Down
Interface index: 128, SNMP ifIndex: 22, Generation: 11
Description: pink coc3-0/0/0
Link-level type: Controller, Clocking: Internal, SONET mode, Speed: OC3,
Loopback: None, Parent: None
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags     : None
Hold-times    : Up 0 ms, Down 0 ms
CoS queues    : 4 supported
Last flapped  : 2005-01-27 16:39:21 PST (1w0d 22:09 ago)
Statistics last cleared: Never
SONET alarms  : PLL, LOS
SONET defects : PLL, LOF, LOS, SEF, AIS-L
SONET PHY:
  PLL Lock          681767      1 PLL Lock Error
  PHY Light         0          0 OK
SONET section:
  BIP-B1            0          0
  SEF               681767      1 Defect Active
  LOS               681767      1 Defect Active
  LOF               681767      1 Defect Active
  ES-S              681767
  SES-S             681767
  SEFS-S            681767
SONET line:
  BIP-B2            0          0
  REI-L             0          0
  RDI-L             0          0 OK
  AIS-L             681767      1 Defect Active
  BERR-SF           0          0 OK
  BERR-SD           0          0 OK
  ES-L              681767
  SES-L             681767
  UAS-L             681757
  ES-LFE            0
  SES-LFE           0
  UAS-LFE           0
Received SONET overhead:
  F1 : 0x00, J0 : 0x00, K1 : 0xff, K2 : 0xff
  S1 : 0xff
Transmitted SONET overhead:
  F1 : 0x00, J0 : 0x01, K1 : 0x00, K2 : 0x00
  S1 : 0x00

```

show interfaces extensive (Channelized OC1 on Channelized OC3 IQ)

```
user@host> show interfaces extensive coc1-0/0/0:1
```

```

Physical interface: coc1-0/0/0:1, Enabled, Physical link is Down
Interface index: 133, SNMP ifIndex: 27, Generation: 16
Link-level type: Controller, Clocking: Internal, SONET mode, Speed: 51840kbps,

  Loopback: None, Parent: coc3-0/0/0
Interface index 128
Device flags   : Present Running Down 16384
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags     : None
Hold-times    : Up 0 ms, Down 0 ms
CoS queues    : 4 supported

```

```

Last flapped   : 2005-02-04 14:51:07 PST (00:00:35 ago)
Statistics last cleared: Never
SONET alarms   : None
SONET defects  : AIS-P
SONET path:
  BIP-B3              0          0
  REI-P              0          0
  LOP-P              0          0 OK
  AIS-P             36          1 Defect Active
  RDI-P              0          0 OK
  UNEQ-P             0          0 OK
  PLM-P              0          0 OK
  ES-P              36
  SES-P              36
  UAS-P              26
  ES-PFE             0
  SES-PFE            0
  UAS-PFE            0
Received SONET overhead:
  C2      : 0xff, C2(cmp) : 0x01, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
  C2      : 0x01, F2      : 0x00, Z3      : 0x00, Z4      : 0x00
Received path trace:
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace: router-1 coc1-0/0/0:1
  6b 61 76 65 72 69 20 63 6f 63 31 2d 30 2f 30 2f   router-1 coc1-0/0/0:1
  30 3a 31 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```

show interfaces extensive (Channelized T1 on Channelized OC3 IQ)

```

user@host> show interfaces extensive ct1-0/0/0:1:1

Physical interface: ct1-0/0/0:1:1, Enabled, Physical link is Down
Interface index: 134, SNMP ifIndex: 62, Generation: 17
Link-level type: Controller, Clocking: Internal, Speed: T1, Loopback: None,
Framing: ESF, Parent: coc1-0/0/0:1 Interface index 133
Device flags   : Present Running Down 16384
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags     : None
Hold-times     : Up 0 ms, Down 0 ms
CoS queues     : 4 supported
Last flapped   : 2005-02-04 14:54:35 PST (00:00:18 ago)
Statistics last cleared: Never
DS1 alarms     : None
DS1 defects    : AIS, LOF
T1 media:
  Seconds      Count  State
  SEF          1       1 OK
  BEE          1       1 OK
  AIS          18       1 Defect Active
  LOF          18       1 Defect Active
  LOS          0        0 OK
  YELLOW       0        0 OK

```

```

BPV                0          0
EXZ                0          0
LCV                0          0
PCV                0          0
CS                 0          0
LES                18
ES                 18
SES                18
SEFS               18
BES                0
UAS                14
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SONET alarms       : None
SONET defects      : None
SONET vt:
  BIP-BIP2          0          0
  REI-V             0          0
  LOP-V             0          0 OK
  AIS-V             19          1 Defect Active
  RDI-V             19          1 Defect Active
  UNEQ-V            0          0 OK
  PLM-V             19          1 Defect Active
  ES-V              19
  SES-V             19
  UAS-V              9
  ES-VFE            0
  SES-VFE            0
  UAS-VFE            0
Received SONET overhead:
  V5                : 0x07, V5(cmp) : 0x02
Transmitted SONET overhead:
  V5                : 0x02
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```

show interfaces extensive (DS0 on Channelized OC3 IQ)

```

user@host> show interfaces extensive ds-0/0/0:1:1:1

Physical interface: ds-0/0/0:1:1:1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 63, Generation: 18
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 320kbps,
Loopback: None, FCS: 16, Parent: ct1-0/0/0:1:1 Interface index 134
Device flags      : Present Running
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags        : Keepalives
Hold-times        : Up 0 ms, Down 0 ms
CoS queues        : 4 supported
Last flapped      : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes       :                0          0 bps
Output bytes      :                0          0 bps
Input packets     :                0          0 pps
Output packets    :                0          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,

```



```

L2 mismatch timeouts: 0, HS link CRC errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
  Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets
0 best-effort        0                0                0
1 expedited-fo       0                0                0
2 assured-forw       0                0                0
3 network-cont       0                0                0

HDLC configuration:
  Giant threshold: 1514, Runt threshold: 2
  Timeslots       : 1-5
  Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag: flags,
  Start end flag: shared
DSO BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x00)

```

show interfaces (Channelized STM1 IQ)

Syntax	<pre>show interfaces (<i>type-fpc/pic/port</i> <:<i>channel</i>><:<i>channel</i>>) <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized STM1 IQ interface.
Options	<p><i>type-fpc/pic/port:channel:channel</i>—Interface type with optional corresponding channel levels. The interface type can be one of the following types:</p> <ul style="list-style-type: none"> • <i>type-fpc/pic/port:channel</i>—For the physical channelized STM1 IQ interface, <i>type</i> is <i>cstm1</i>. For the clear channel, <i>type</i> is <i>so</i>. For channelization, the STM1 IQ interface must be converted to interface type <i>cau4</i>. • <i>type-fpc/pic/port:channel</i>—At the first level of channelization, <i>type</i> can be <i>ce1</i> or <i>e1</i> (clear channel or fractional channel from <i>cau4</i>). • <i>type-fpc/pic/port:channel:channel</i>—At the second level of channelization, <i>type</i> is <i>ds</i> (from <i>ce1</i>). <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces (Channelized STM1 IQ) (Physical) on page 1351 show interfaces (Channelized AU-4) (Physical) on page 1351 show interfaces (Channelized E1) (Physical) on page 1351 show interfaces (DS) on page 1352
Output Fields	See the output field table for the show interfaces (Channelized STM1) command.

Sample Output

show interfaces (Channelized STM1 IQ) (Physical)

```

user@host> show interfaces cstm1-0/0/0

Physical interface: cstm1-0/0/0, Enabled, Physical link is Up
  Interface index: 146, SNMP ifIndex: 35
  Link-level type: Frame-relay, Controller, Clocking: Internal, SDH mode,
  Speed: OC3, Loopback: None, Parent: None  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
  DTE statistics:
    Enquiries sent                : 43186
    Full enquiries sent           : 8515
    Enquiry responses received    : 43185
    Full enquiry responses received : 8515
  DCE statistics:
    Enquiries received            : 0
    Full enquiries received       : 0
    Enquiry responses sent        : 0
    Full enquiry responses sent   : 0
  Common statistics:
    Unknown messages received    : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout  : 0
  Nonmatching DCE-end DLCIs:
    2
  Last flapped   : 2003-02-06 15:01:56 PST (07:15:06 ago)
...

```

show interfaces (Channelized AU-4) (Physical)

```

user@host> show interfaces cau4-0/0/0

Physical interface: cau4-0/0/0, Enabled, Physical link is Up
  Interface index: 147, SNMP ifIndex: 36
  Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, Parent: cstm1-0/0/0 Interface index 146
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
  Last flapped   : 2003-02-06 19:36:31 PST (02:40:42 ago)
  SDH alarms     : None
  SDH defects    : None
...

```

show interfaces (Channelized E1) (Physical)

```

user@host> show interfaces ce1-0/0/0:11

Physical interface: ce1-0/0/0:11, Enabled, Physical link is Up
  Interface index: 169, SNMP ifIndex: 288
  Link-level type: Frame-relay, Controller, Clocking: Internal, Speed: E1,
  Loopback: None, Framing: G704, Parent: cau4-0/0/0 Interface index 147
  Device flags   : Present Running

```

```

Interface flags: Point-To-Point SNMP-Traps
Link flags      : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 0
Nonmatching DCE-end DLCIs:
  2
Last flapped : 2003-02-06 22:05:23 PST (00:13:45 ago)
DS1  alarms : None
DS1  defects : None
SDH  alarms : None
SDH  defects : None
...

```

show interfaces (DS)

```

user@host> show interfaces ds-0/0/0:11:1

Physical interface: ds-0/0/0:11:1, Enabled, Physical link is Up
  Interface index: 170, SNMP ifIndex: 289
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: Illegal, FCS: 16, Parent: ce1-0/0/0:11 Interface index 169
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags      : Keepalives
  CoS Queues: 8 maximum usable queues, 4 in use
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Conf-req-sent
  Egress queues: 8 supported, 4 in use
...
  Logical interface ds-0/0/0:11:1.0 (Index 77) (SNMP ifIndex 290)
    Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
    Bandwidth: 0
    Protocol inet, MTU: 1500
    Flags: Protocol-Down
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 10.134.1.0/30, Local: 10.134.1.1
  DLCI 100
    Flags: Active, Dce-configured
    Total down time: 0 sec, Last down: Never
    Traffic statistics:
      Input bytes : 0
      Output bytes : 0
      Input packets: 0

```

Output packets:	0
-----------------	---

...

show interfaces (Channelized STM1)

Syntax `show interfaces e1-fpc/pic/port:elchannel`
`<brief | detail | extensive | terse>`
`<descriptions>`
`<media>`
`<snmp-index snmp-index>`
`<statistics>`

Release Information Command introduced before Junos OS Release 7.4.

Description (M Series and T Series routers only) Display status information about the specified channelized STM1 interface.

Options `e1-fpc/pic/port:elchannel`—Display standard status information about the specified channelized STM1 interface.

`brief | detail | extensive | terse`—(Optional) Display the specified level of output.

`descriptions`—(Optional) Display interface description strings.

`media`—(Optional) Display media-specific information about network interfaces.

`snmp-index snmp-index`—(Optional) Display information for the specified SNMP index of the interface.

`statistics`—(Optional) Display static interface statistics.

Required Privilege Level view

List of Sample Output [show interfaces extensive \(Channelized STM1, SDH\) on page 1365](#)

Output Fields [Table 63 on page 1354](#) lists the output fields for the **show interfaces** (all Channelized STM1 interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 63: Channelized STM1 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Framing	Physical layer framing format used on the link. It can be G704 , G704-NO-CRC4 , or Unframed . The default is G704 .	All levels
Parent	(Channelized STM1 IQ interfaces only) Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under " Common Output Fields Description " on page 1168.	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under " Common Output Fields Description " on page 1168.	All levels
Link flags	Information about the link. Possible values are described in the "Link Flags" section under " Common Output Fields Description " on page 1168.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> intervalseconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. down-count number—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
ANSI LMI settings or ITU LMI settings	<p>(Frame Relay) Local Management Interface settings. The format is (ANSI or ITU) LMI settings: <i>value, value...xx</i> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> n391dte—DTE full status polling interval (1- 255) n392dce—DCE error threshold (1-10) n392dte—DTE error threshold (1-10) n393dce—DCE monitored event count (1-10) n393dte—DTE monitored event count (1-10) t391dte—DTE polling timer (5-30 seconds) t392dce—DCE polling verification timer (5-30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) Statistics about the link management.</p> <ul style="list-style-type: none"> Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: <i>nn</i> (last seen <i>hh:mm:ss</i> ago). Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: <i>nn</i> (last seen <i>hh:mm:ss</i> ago). 	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> Enquiries received—Number of enquiries received by the DCE from the DTE. Full enquiries received—Number of full enquiries received by the DCE from the DTE. Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> Unknown messages received—Number of received packets that do not fall into any category. Asynchronous updates received—Number of link status peer changes received. Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay, displayed only from the DTE) Number of DLCIs configured from the DCE.	detail extensive none
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> Conf-ack-received—Acknowledgment was received. Conf-ack-sent—Acknowledgment was sent. Conf-req-sent—Request was sent. Down—LCP negotiation is incomplete (not yet completed or has failed). Not-configured—LCP is not configured on the interface. Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> Conf-ack-received—Acknowledgment was received. Conf-ack-sent—Acknowledgment was sent. Conf-req-sent—Request was sent. Down—NCP negotiation is incomplete (not yet completed or has failed). Not-configured—NCP is not configured on the interface. Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> Chap-Chal-received—Challenge was received but response not yet sent. Chap-Chal-sent—Challenge was sent. Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) Chap-Resp-sent—Response was sent for the challenge received. Closed—CHAP authentication is incomplete. Failure—CHAP authentication failed. Not-configured—CHAP is not configured on the interface. Success—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value of this field increments, the PIC is malfunctioning. 	extensive

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. 	extensive
DS1 alarms DS1 defects	<p>E1 media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. The following lists all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> • LOS—Loss of signal. • LOF—Loss of frame. • AIS—Alarm indication signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	detail extensive none
SDH alarms SDH defects	<p>SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY, SDH regenerator section, SDH multiplex section, and SDH path.</p> <p>NOTE: For controller-based SONET PICs, the SDH alarms and SDH defects output in the show interface cstm1 extensive command output only shows the section and line level defects. The path level defects can be found under the SONET (so) interface output.</p>	All levels

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
E1 media	<p>Active alarms and defects, plus counts of specific E1 errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Error types can be:</p> <ul style="list-style-type: none"> • AIS—Alarm indication signal • BEE—Bit error • BES—Bit error seconds • BPV—Bipolar violation • CS—Carrier state • ES—Errored seconds • EXZ—Excessive zeros • FEBE—Far-end block error • LCV—Line code violation • LES—Line error seconds • LOF—Loss of frame • LOS—Loss of signal • PCV—Pulse code violation • SEF—Severely errored framing • SEFS-S—Severely errored framing seconds (section) • SES—Severely errored seconds • UAS—Unavailable seconds • YELLOW—Errors at the remote site receiver 	extensive
Interface transmit queues	<p>Names of the transmit queues and their associated statistics for each E1 channel on the Channelized STM1-to-E1 PIC.</p> <ul style="list-style-type: none"> • B/W—Queue bandwidth as a percentage of the total interface bandwidth. • WRR—Weighted round-robin (in percent). • Packets—Number of packets transmitted. • Bytes—Number of bytes transmitted. • Drops—Number of packets dropped. • Errors—Number of packet errors. 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Line encoding—Line encoding used. It is always HDB3. 	extensive

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
DS1 BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • RS-BIP8—24-bit BIP for multiplex section overhead (B2 bytes) • OOF—Out of frame • LOS—Loss of signal • LOF—Loss of frame • RS-ES—Errored seconds (near-end regenerator section) • RS-SES—Severely errored seconds (near-end regenerator section) • RS-SEFS—Severely errored framing seconds (regenerator section) 	extensive

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • MS-BIP24—8-bit BIP for high-order path overhead (B3 byte) • MS-FEBE—Far-end block error (multiplex section) • MS-FERF—Far-end remote fail (multiplex section) • MS-AIS—alarm indication signal (multiplex section) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • MS-ES—Errored seconds (near-end multiplex section) • MS-SES—Severely errored seconds (near-end multiplex section) • MS-UAS—Unavailable seconds (near-end multiplex section) • MS-ES-FE—Errored seconds (far-end multiplex section) • MS-SES-FE—Severely errored seconds (far-end multiplex section) • MS-UAS-FE—Unavailable seconds (far-end multiplex section) 	extensive
SDH path	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • HP-BIP8—8-bit BIP for regenerator section overhead (B1 byte) • HP-FEBE—Far-end block error (high-order path) • HP-LOP—Loss of pointer (high-order path) • HP-AIS—High-order-path alarm indication signal • HP-FERF—Far-end remote fail (high-order path) • HP-UNEQ—Unequipped (high-order path) • HP-PLM—Payload label mismatch (high-order path) • HP-ES—Errored seconds (near-end high-order path) • HP-SES—Severely errored seconds (near-end high-order path) • HP-UAS—Unavailable seconds (near-end high-order path) • HP-ES-FE—Errored seconds (far-end high-order path) • HP-SES-FE—Severely errored seconds (far-end high-order path) • HP-UAS-FE—Unavailable seconds (far-end high-order path) 	extensive

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SDH tu	<p>Active alarms and defects, plus counts of specific SDH tributary unit (TU) errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • TU-BIP-2—Bit interleaved parity for SONET line overhead • TU-FEBE—(near-end TU) • TU-LOP—Loss of pointer (near-end TU) • TU-AIS—Alarm indication signal (near-end TU) • TU-FERF—(near-end TU) • TU-UNEQ—Unequipped (near-end TU) • TU-PLM—Payload label mismatch (near-end TU) • TU-ES—Errored seconds (near-end TU) • TU-SES—Severely errored seconds (near-end TU) • TU-UAS—Unavailable seconds (near-end TU) • TU-ES-FE—Errored seconds (far-end TU) • TU-SES-FE—Severely errored seconds (far-end TU) • TU-UAS-FE—Unavailable seconds (far-end TU) 	extensive
Received SDH overhead	Values of the received and transmitted SONET overhead:	extensive
Transmitted SDH overhead	<ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i> signal. • Z3 and Z4—Allocated for future use. 	
Received path trace	Channelized OC12 interfaces allow path trace bytes to be sent inband across the SONET/SDH link. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits. This information is specific to each of the 12 channelized OC12 interfaces.	extensive
Transmitted path trace		
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics . Flags is one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces extensive (Channelized STM1, SDH)

```

user@host> show interfaces e1-1/0/0:1 extensive

Physical interface: e1-1/0/0:1, Enabled, Physical link is Up
Interface index: 148, SNMP ifIndex: 285, Generation: 2915
Link-level type: Frame-relay, MTU: 1504, SDH mode, Speed: E1, Loopback: None,
FCS: 16, Framing: G704
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags    : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0

```

```

Keepalive responses timeout      : 0
Nonmatching DCE-end DLCIs:
    2
Hold-times      : Up 0 ms, Down 0 ms
Last flapped   : 2002-05-23 17:02:59 PDT (17:23:45 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :          592          48 bps
Output bytes :          644          48 bps
Input packets:           46           0 pps
Output packets:          46           0 pps
Input errors:
Errors: 0, Drops: 9, Framing errors: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 11, L2 mismatch timeouts: 0,
HS link CRC errors: 0, SRAM errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0
DS1 alarms : None
DS1 defects : None
SDH alarms : None
SDH defects : None
E1 media:
Seconds      Count  State
SEF          0       0 OK
BEE          0       0 OK
AIS         124       1 OK
LOF         124       1 OK
LOS          0       0 OK
YELLOW       0       0 OK
BPV          0       0
EXZ          0       0
LCV          0       0
PCV          0       0
CS           0       0
FEBE         0       0
LES         124
ES          125
SES         124
SEFS        124
BES          0
UAS          37
Interface transmit queues:
      B/W  WRR    Packets    Bytes    Drops    Errors
Queue0  95  95         0         0         0         0
Queue1   5   5        529       6348         0         0
HDLC configuration:
Giant threshold: 0, Runt threshold: 0
Timeslots      : All active
Line encoding: HDB3
DS1 BERT configuration:
BERT time period: 10 seconds, Elapsed: 0 seconds
Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SDH PHY:
Seconds      Count  State
PLL Lock      0       0 OK
PHY Light     0       0 OK
SDH regenerator section:
RS-BIP8        0       0
OOF           125       1 OK
LOS           125       1 OK
LOF           125       1 OK
RS-ES          125

```

```

RS-SES          125
RS-SEFS          125
SDH multiplex section:
MS-BIP24         0          0
MS-FEBE         0          0
MS-FERF         0          0 OK
MS-AIS          125        1 OK
BERR-SF         0          0 OK
BERR-SD         0          0 OK
MS-ES           125
MS-SES          125
MS-UAS          115
MS-ES-FE        0
MS-SES-FE        0
MS-UAS-FE        0
SDH path:
HP-BIP8         0          0
HP-FEBE         0          0
HP-LOP          0          0 OK
HP-AIS          125        1 OK
HP-FERF         0          0 OK
HP-UNEQ         0          0 OK
HP-PLM          125        1 OK
HP-ES           125
HP-SES          125
HP-UAS          115
HP-ES-FE        0
HP-SES-FE        0
HP-UAS-FE        0
SDH tu:
TU-BIP2         0          0
TU-FEBE         124        1
TU-LOP          0          0 OK
TU-AIS          124        1 OK
TU-FERF         124        1 OK
TU-UNEQ         0          0 OK
TU-PLM          124        1 OK
TU-ES           125
TU-SES          125
TU-UAS          115
TU-ES-FE        0
TU-SES-FE        0
TU-UAS-FE        0
Received SDH overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x02, C2(cmp)   : 0x02, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp)   : 0x00, V5      : 0x02
V5(cmp) : 0x02
Transmitted SDH overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x02, F2      : 0x00, Z3      : 0x00
Z4      : 0x00, V5      : 0x02
Received path trace:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Packet Forwarding Engine configuration:
Destination slot: 1, PLP byte: 2 (0x07)
CoS information:
CoS transmit queue      Bandwidth      Buffer Priority      Limit

```

```

          %          bps  %          usec
0 best-effort          95      1945600  95          0      low  none
3 network-control      5       102400   5          0      low  none
Logical interface e1-1/0/0:1.0 (Index 10) (SNMP ifIndex 369) (Generation 496)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 575, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 975
DLCI 100
Flags: Active, Dce-configured
Total down time: 0 sec, Last down: Never
Traffic statistics:
Input bytes :          0
Output bytes :          0
Input packets:          0
Output packets:          0
DLCI statistics:
Active DLCI :2 Inactive DLCI : 0
```

show interfaces (Channelized T1 IQ)

Syntax	<pre>show interfaces (ct1-fpc/pic/port type-fpc/pic/port<:channel><:channel>) <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced in Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized T1 IQ interface.
Options	<p>type-fpc/pic/port:channel—Interface type. With optional corresponding channel levels, the interface type can be one of the following:</p> <ul style="list-style-type: none"> • type-fpc/pic/port—For the physical channelized T1 IQ interface, type is ct1. • type-fpc/pic/port:channel—For the clear channel, type is t1. At the first level of channelization, type can be ct1 or t1. • type-fpc/pic/port:channel:channel—At the second level of channelization, type can be ds. <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces extensive (CT1) on page 1377</p> <p>show interfaces extensive (T1) on page 1378</p> <p>show interfaces extensive (DS0) on page 1379</p>
Output Fields	Table 64 on page 1370 lists the output fields for the show interfaces (Channelized T1 IQ and T3 IQ interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Framing	Physical layer framing format used on the link. It can be ESF or SF . The default is ESF .	All levels
Parent	Name and interface index of the interface to which a particular child interface belongs. None indicates that this interface is the top level.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive settings	Configured settings for keepalives. <ul style="list-style-type: none"> interval <i>seconds</i>—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. down-count <i>number</i>—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. up-count <i>number</i>—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none
Keepalive statistics	Information about keepalive packets. <ul style="list-style-type: none"> Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
LMI settings	(Frame Relay) Settings for Local Management Interface (LMI) can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is (ANSI or ITU) LMI settings: <i>value, value... xx seconds</i> , where <i>value</i> can be: <ul style="list-style-type: none"> n391dte—DTE full status polling interval (1–255) n392dce—DCE error threshold (1–10) n392dte—DTE error threshold (1–10) n393dce—DCE monitored event count (1–10) n393dte—DTE monitored event count (1–10) t391dte—DTE polling timer (5–30 seconds) t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	(Frame Relay) LMI packet statistics: <ul style="list-style-type: none"> Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: <i>nn</i> (last seen <i>hh:mm:ss</i> ago). Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: <i>nn</i> (last sent <i>hh:mm:ss</i> ago). 	detail extensive none
DTE statistics	(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communication equipment (DCE): <ul style="list-style-type: none"> Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
DCE statistics	(Frame Relay) Statistics about messages transmitted from the DCE to the DTE: <ul style="list-style-type: none"> • Enquiries received—Number of enquiries received by the DCE from the DTE. • Full enquiries received—Number of full enquiries received by the DCE from the DTE. • Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. • Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay) Number of DLCIs configured from the DCE, displayed only from the DTE.	detail extensive none
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not-configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CHAP state	<p>(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.</p> <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
CoS queues	Number of CoS queues configured.	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Giants—Number of frames received that are larger than the giant threshold. • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Counter increments when the software could not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Count of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Count of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value in this field increments, the PIC is malfunctioning. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets whose size exceeds the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Queue counters	CoS queue number and its associated user-configured forwarding class name. <ul style="list-style-type: none"> Queued packets—Number of queued packets. Transmitted packets—Number of transmitted packets. Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
DS1 alarms DS1 defects	Media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. <ul style="list-style-type: none"> LOS—Loss of signal. LOF—Loss of frame. AIS—Alarm indication signal. YLW—Yellow alarm. Indicates errors at the remote site receiver. 	detail extensive none
T1 media	Counts of T1 media-specific errors. <ul style="list-style-type: none"> Seconds—Number of seconds the defect has been active. Count—Number of times that the defect has gone from inactive to active. State—State of the error. State other than OK indicates a problem. <p>The T1 media-specific error types can be:</p> <ul style="list-style-type: none"> AIS—Alarm indication signal BEE—Bit error event BES—Bit error seconds BPV—Bipolar violation CS—Carrier state ES—Errored seconds EXZ—Excessive zeros FEBE—Far-end block error LCV—Line code violation LES—Line error seconds LOF—Loss of frame LOS—Loss of signal PCV—Pulse code violation SEF—Severely errored framing SEFS—Severely errored framing seconds (section) SES—Severely errored seconds UAS—Unavailable seconds YELLOW—Errors at the remote site receiver 	extensive
Line encoding	Line encoding used: B8ZS or AMI .	All levels
Buildout	Buildout setting.	All levels

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
HDLC configuration	Information about the HDLC configuration. <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Configured time slots for the interface. • Line encoding—Line encoding used: B8ZS or AMI. • Byte encoding—Byte encoding used: Nx64K or Nx56K. • Data inversion—HDLC data inversion setting: Enabled or Disabled. • Idle cycle Flag—Idle cycle flags. • Start end Flag—Start and end flag. 	extensive
DSO or DS1 BERT configuration	BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface. <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface; values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “ Common Output Fields Description ” on page 1168.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “ Common Output Fields Description ” on page 1168.	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics . Flags is one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces extensive (CTI)

```

user@host> show interfaces extensive ct1-0/1/1

Physical interface: ct1-0/1/1, Enabled, Physical link is Up
  Interface index: 145, SNMP ifIndex: 32, Generation: 28
  Link-level type: Controller, Clocking: Internal, Speed: T1,
  Loopback: None, Framing: ESF, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : None
  Hold-times     : Up 0 ms, Down 0 ms
  CoS queues     : 4 supported

```

```

Last flapped   : 2005-08-17 11:47:09 PDT (1d 03:38 ago)
Statistics last cleared: 2005-08-18 15:25:37 PDT (00:00:27 ago)
DS1 alarms    : None
DS1 defects   : None
T1 media:
  Seconds      Count  State
  SEF          0      0  OK
  BEE          0      0  OK
  AIS          0      0  OK
  LOF          0      0  OK
  LOS          0      0  OK
  YELLOW       0      0  OK
  BPV          0      0
  EXZ          0      0
  LCV          0      0
  PCV          0      0
  CS           0      0
  LES          0
  ES           0
  SES          0
  SEFS         0
  BES          0
  UAS          0
Line encoding: B8ZS
Buildout      : 0 to 132 feet
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```

show interfaces extensive (T1)

```

user@host> show interfaces extensive t1-0/2/0

Physical interface: t1-0/2/0, Enabled, Physical link is Up
  Interface index: 161, SNMP ifIndex: 33, Generation: 61
  Link-level type: PPP, MTU: 1504, Speed: T1, Loopback: None, FCS: 16,
  Parent: ct1-0/2/0 Interface index 148
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timeout : 0
Nonmatching DCE-end DLCIs:
  2

```

```

Hold-times      : Up 0 ms, Down 0 ms
CoS queues      : 4 supported
Last flapped    : 2005-09-07 15:43:47 PDT (00:00:06 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          0          0 bps
  Output bytes  :         14          0 bps
  Input packets :          0          0 pps
  Output packets:          1          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, L3 incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0,
  MTU errors: 0, Resource errors: 0
Queue counters:      Queued packets  Transmitted packets  Dropped packets
0 best-effort        0                0                0
1 expedited-fo       0                0                0
2 assured-forw       0                0                0
3 network-cont       1                1                0
DS1  alarms   : None
DS1  defects  : None
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 1514, Runt threshold: 2
  Timeslots      : All active
  Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag:
  flags, Start end flag: shared
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x00)

```

show interfaces extensive (DS0)

```

user@host> show interfaces extensive ds-0/1/0:0

Physical interface: ds-0/1/0:1, Enabled, Physical link is Up
  Interface index: 157, SNMP ifIndex: 52, Generation: 46
  Link-level type: Frame-Relay, PPP, MTU: 1504, Clocking: Internal,
  Speed: 640kbps, Loopback: None, FCS:16,
  Parent: ct1-0/1/0 Interface index 143
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0

```

```

Asynchronous updates received      : 0
Out-of-sequence packets received   : 0
Keepalive responses timedout        : 0
Nonmatching DCE-end DLCIs:
    2
Hold-times      : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
    Input : 8 (last seen 00:00:12 ago)
    Output: 8 (last sent 00:00:07 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Not-configured
CoS queues      : 4 supported
Last flapped    : 2005-08-18 15:23:46 PDT (00:03:17 ago)
Statistics last cleared: 2005-08-18 15:25:37 PDT (00:01:26 ago)
Traffic statistics:
    Input bytes :                840                0 bps
    Output bytes :                912                0 bps
    Input packets:                 25                0 pps
    Output packets:                26                0 pps
Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, L3 incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
    Resource errors: 0
Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0,
    MTU errors: 0, Resource errors: 0
Queue counters:      Queued packets  Transmitted packets  Dropped packets
0 best-effort        0                0                0
1 expedited-fo       0                0                0
2 assured-forw       0                0                0
3 network-cont       26               26                0
HDLC configuration:
    Giant threshold: 1514, Runt threshold: 2
    Timeslots      : 1-10
    Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag: flags,
    Start end flag: shared
DSO BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
    Destination slot: 0, PLP byte: 4 (0x00)
Logical interface ds-0/1/0:1.0 (Index 67) (SNMP ifIndex 53) (Generation 11)
    Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
    Protocol inet, MTU: 1500, Generation: 26, Route table: 0
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
        Destination: 11.11.11.0/30, Local: 11.11.11.2, Broadcast: 11.11.11.3,
        Generation: 39
DLCI 100
    Flags: Active, Dce-configured
    Total down time: 0 sec, Last down: Never
Traffic statistics:
    Input bytes :                0
    Output bytes :                0
    Input packets:                0
    Output packets:                0

```



```
DLCI statistics:  
  Active DLCI   :2 Inactive DLCI   : 0  
...
```

show interfaces (Channelized T3 IQ)

Syntax	<pre>show interfaces (ct3-<i>fpc/pic/port</i> <i>type-fpc/pic/port</i><:<i>channel</i>><:<i>channel</i>>) <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified channelized T3 IQ interface.
Options	<p><i>type-fpc/pic/port:channel</i>—Interface type. With optional corresponding channel levels, the interface type can be one of the following:</p> <ul style="list-style-type: none"> • <i>type-fpc/pic/port</i>—For the physical channelized T3 IQ interface, <i>type</i> is ct3. • <i>type-fpc/pic/port:channel</i>—For the clear channel, <i>type</i> is t3. At the first level of channelization, <i>type</i> can be ct1 or t1. • <i>type-fpc/pic/port:channel:channel</i>—At the second level of channelization, <i>type</i> is ds. <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces extensive (Channelized T3 IQ) (Physical) on page 1383</p> <p>show interfaces extensive (Channelized T1 on Channelized T3 IQ) on page 1383</p> <p>show interfaces extensive (DSO on Channelized T3 IQ) on page 1383</p>
Output Fields	See the output field table for the show interfaces (Channelized T1 IQ) command.

Sample Output

show interfaces extensive (Channelized T3 IQ) (Physical)

```
user@host> show interfaces extensive ct3-0/0/1

Physical interface: ct3-0/0/1, Enabled, Physical link is Up
  Interface index: 30, SNMP ifIndex: 317, Generation: 29
  Link-level type: Controller, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

show interfaces extensive (Channelized T1 on Channelized T3 IQ)

```
user@host> show interfaces extensive ct1-0/0/1:2

Physical interface: ct1-0/0/1:2, Enabled, Physical link is Up
  Interface index: 175, SNMP ifIndex: 1505, Generation: 174
  Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF, Parent: ct3-0/0/1 (Index 32)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

show interfaces extensive (DSO on Channelized T3 IQ)

```
user@host> show interfaces extensive ds-0/0/1:2:1

Physical interface: ds-0/0/1:2:1, Enabled, Physical link is Up
  Interface index: 176, SNMP ifIndex: 1563, Generation: 175
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: None, FCS: 16, Parent: ct1-0/0/1:2(Index 175)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
...
```

show interfaces (Discard)

Syntax	<pre>show interfaces dsc <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified discard interface.
Options	<p>dsc—Display standard information about the specified discard interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—This option is not relevant for the discard interface and always shows a value of 0.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) This option is not relevant for the discard interface and always shows a value of 0.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show interfaces (ATM) on page 1258 • show interfaces routing
List of Sample Output	<p>show interfaces dsc on page 1387</p> <p>show interfaces dsc brief on page 1387</p> <p>show interfaces dsc detail on page 1388</p> <p>show interfaces dsc extensive on page 1388</p>
Output Fields	<p>Table 65 on page 1384 lists the output fields for the show interfaces (discard) command. Output fields are listed in the approximate order in which they appear.</p>

Table 65: Discard show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		

Table 65: Discard show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Physical interface	Name of the physical interface, whether the interface is enabled, and the state of the physical interface: Up or Down .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Type	Type of interface. Software-Pseudo indicates a standard software interface with no associated hardware device.	All levels
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	brief detail extensive
Speed	Speed at which the interface is running.	brief detail extensive
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under " Common Output Fields Description " on page 1168.	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under " Common Output Fields Description " on page 1168.	All levels
Link type	Encapsulation being used on the physical interface.	detail extensive
Link flags	Information about the link. Possible values are described in the "Link Flags" section under " Common Output Fields Description " on page 1168.	detail extensive
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive
Current address, Hardware address	Configured MAC address and hardware MAC address.	detail extensive
Alternate link address	Backup address of the link.	detail extensive
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 65: Discard show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface:</p> <ul style="list-style-type: none"> • Errors—Sum of incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of transmit drops. 	detail extensive
Output errors	<p>(Extensive only) Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	detail extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 65: Discard show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	All levels
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive

Sample Output

show interfaces dsc

```

user@host> show interfaces dsc

Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5
  Type: Software-Pseudo, MTU: Unlimited
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
  Last flapped   : Never
    Input packets : 0
    Output packets: 0

  Logical interface dsc.0 (Index 66) (SNMP ifIndex 235)
    Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
    Protocol inet, MTU: Unlimited
    Flags: None

```

show interfaces dsc brief

```

user@host> show interfaces dsc brief

Physical interface: dsc, Enabled, Physical link is Up
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: Unlimited, Clocking:
  Unspecified, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps

  Logical interface dsc.0
    Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
    inet

```

show interfaces dsc detail

```
user@host> show interfaces dsc detail
```

```
Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5, Generation: 9
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: Unlimited, Clocking:
Unspecified, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Unspecified
  Link flags     : None
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes  :                0
    Output bytes :                0
    Input packets:                0
    Output packets:               0

Logical interface dsc.0 (Index 66) (SNMP ifIndex 235) (Generation 6)
  Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
  Protocol inet, MTU: Unlimited, Generation: 14, Route table: 0
  Flags: None
```

show interfaces dsc extensive

```
user@host> show interfaces dsc extensive
```

```
Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5, Generation: 9
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: Unlimited, Clocking:
Unspecified, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Unspecified
  Link flags     : None
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes  :                0
    Output bytes :                0
    Input packets:                0
    Output packets:               0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
    Resource errors: 0
  Logical interface dsc.0 (Index 66) (SNMP ifIndex 235) (Generation 6)
  Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
```



```
Protocol inet, MTU: Unlimited, Generation: 14, Route table: 0
```

show interfaces (Fast Ethernet)

Syntax	<pre>show interfaces <i>interface-type</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified Fast Ethernet interface.
Options	<p><i>interface-type</i>—On M Series and T Series routers, the interface type is <i>fe-fpc/pic/port</i>.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces (Fast Ethernet) on page 1404 show interfaces brief (Fast Ethernet) on page 1404 show interfaces detail (Fast Ethernet) on page 1404 show interfaces extensive (Fast Ethernet) on page 1405
Output Fields	Table 66 on page 1390 lists the output fields for the show interfaces (Fast Ethernet) command. Output fields are listed in the approximate order in which they appear.

Table 66: show interfaces Fast Ethernet Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “ Common Output Fields Description ” on page 1168.	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Link-mode	Type of link connection configured for the physical interface: Full-duplex or Half-duplex	extensive
Speed	Speed at which the interface is running.	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
LAN-PHY mode	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
WAN-PHY mode	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
Unidirectional	Unidirectional link mode status for 10-Gigabit Ethernet interface: Enabled or Disabled for parent interface; Rx-only or Tx-only for child interfaces.	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels
Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> • Online—Autonegotiation is manually configured as online. • Offline—Autonegotiation is manually configured as offline. 	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Link flags	Information about the link. Possible values are described in the "Links Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Wavelength	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Frequency	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Schedulers	(GigabitEthernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the show interfaces command.</p>	detail extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	<p>Total number of egress queues supported on the specified interface.</p> <p>NOTE: In DPCs that are not of the enhanced type, such as DPC 40x 1GE R, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the show interfaces command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	detail extensive
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Ingress queues	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	extensive
Queue counters (Ingress)	CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive
Active alarms and Active defects	Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the routing device configuration, an alarm can ring the red or yellow alarm bell on the routing device, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link . <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
OTN FEC statistics	The forward error correction (FEC) counters provide the following statistics: <ul style="list-style-type: none"> • Corrected Errors—The count of corrected errors in the last second. • Corrected Error Ratio—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits. 	
PCS statistics	(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device. <ul style="list-style-type: none"> • Bit errors—The number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode. • Errored blocks—The number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode. 	detail extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the show interfaces command. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—Number of frames that exceed 1518 octets. • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the routing device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local routing device (which the routing device is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0. 	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PHY Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
WIS section	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
WIS line	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

Table 66: *show interfaces Fast Ethernet Output Fields (continued)*

Field Name	Field Description	Level of Output
WIS path	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the attached Ethernet device, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is None. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the link partner: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive). 	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other routing device manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the routing device at the other end of the fiber. The transmitted path trace value is the message that this routing device transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 66: *show interfaces Fast Ethernet Output Fields (continued)*

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “ Common Output Fields Description ” on page 1168.	All levels

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags.</p> <ul style="list-style-type: none"> • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • pop—The outer VLAN tag of the incoming frame is removed. • swap—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information. • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • push-push—Two VLAN tags are pushed in from the incoming frame. • swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. • swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value. • pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. • pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none
Demux:	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> • Source Family Inet • Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under “ Common Output Fields Description ” on page 1168.	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set • Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the routing device.	extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Transit statistics	Number and rate of bytes and packets transiting the switch. NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under “ Common Output Fields Description ” on page 1168.	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “ Common Output Fields Description ” on page 1168.	detail extensive none
protocol-family	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about address flag (possible values are described in the “Addresses Flags” section under “ Common Output Fields Description ” on page 1168.	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interlace.	detail extensive none

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces (Fast Ethernet)

```

user@host> show interfaces fe-0/0/0
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 22
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues    : 4 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:38, Hardware address: 00:00:5e:00:53:38
  Last flapped  : 2006-01-20 14:50:58 PST (2w4d 00:44 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Active alarms : None
  Active defects: None
  Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198)
    Flags: SNMP-Traps Encapsulation: ENET2
    Protocol inet, MTU: 1500
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255

```

show interfaces brief (Fast Ethernet)

```

user@host> show interfaces fe-0/0/0 brief
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Logical interface fe-0/0/0.0
    Flags: SNMP-Traps Encapsulation: ENET2
    inet 203.0.113.1/24

```

show interfaces detail (Fast Ethernet)

```

user@host> show interfaces fe-0/0/0 detail
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 22, Generation: 5391
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues    : 4 supported, 4 maximum usable queues
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:38, Hardware address: 00:00:5e:00:53:3f:38

```



```

Last flapped   : 2006-01-20 14:50:58 PST (2w4d 00:45 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :                0                0 bps
  Output bytes  :                42                0 bps
  Input packets :                0                0 pps
  Output packets:                1                0 pps
Active alarms   : None
Active defects  : None
Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198) (Generation 67)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500, Generation: 105, Route table: 0
  Flags: Is-Primary, Mac-Validate-Strict
  Mac-Validate Failures: Packets: 0, Bytes: 0
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255,
  Generation: 136

```

show interfaces extensive (Fast Ethernet)

```
user@host> show interfaces fe-0/0/0 extensive
```

```

Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 22, Generation: 5391
  Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed:
  100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:38, Hardware address: 00:00:5e:00:53:38
  Last flapped   : 2006-01-20 14:50:58 PST (2w4d 00:46 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                42                0 bps
    Input packets :                0                0 pps
    Output packets:                1                0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
    FIFO errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

    FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Active alarms   : None
  Active defects  : None
  MAC statistics:

```

	Receive	Transmit
Total octets	0	64
Total packets	0	1
Unicast packets	0	0
Broadcast packets	0	1
Multicast packets	0	0
CRC/Align errors	0	0
FIFO errors	0	0
MAC control frames	0	0
MAC pause frames	0	0
Oversized frames	0	

```

Jabber frames                                0
Fragment frames                             0
VLAN tagged frames                           0
Code violations                              0
Filter statistics:
  Input packet count                         0
  Input packet rejects                       0
  Input DA rejects                           0
  Input SA rejects                           0
  Output packet count                        1
  Output packet pad count                    0
  Output packet error count                  0
  CAM destination filters: 1, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Complete
  Link partner:
    Link partner: Full-duplex, Flow control: None, Remote fault: Ok
  Local resolution:
Packet Forwarding Engine configuration:
  Destination slot: 0
CoS information:
  Bandwidth      Buffer Priority  Limit
               %      bps      %      usec
0 best-effort    95    950000000  95      0    low  none
3 network-control 5     500000000   5      0    low  none
Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198) (Generation 67)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 105, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255,

  Generation: 136

```

show interfaces

List of Syntax [Syntax \(Gigabit Ethernet\) on page 1407](#)
 [Syntax \(10 Gigabit Ethernet\) on page 1407](#)
 [Syntax \(SRX Series Devices\) on page 1407](#)

Syntax (Gigabit Ethernet) `show interfaces ge-fpc/pic/port`
 `<brief | detail | extensive | terse>`
 `<descriptions>`
 `<media>`
 `<snmp-index snmp-index>`
 `<statistics>`

Syntax (10 Gigabit Ethernet) `show interfaces xe-fpc/pic/port`
 `<brief | detail | extensive | terse>`
 `<descriptions>`
 `<media>`
 `<snmp-index snmp-index>`
 `<statistics>`

Syntax (SRX Series Devices) `show interfaces (`
 `<interface-name>`
 `<brief | detail | extensive | terse>`
 `<controller interface-name>|`
 `<descriptions interface-name>|`
 `<destination-class (all | destination-class-name logical-interface-name)>|`
 `<diagnostics optics interface-name>|`
 `<far-end-interval interface-fpc/pic/port>|`
 `<filters interface-name>|`
 `<flow-statistics interface-name>|`
 `<interval interface-name>|`
 `<load-balancing (detail | interface-name)>|`
 `<mac-database mac-address mac-address>|`
 `<mc-ae id identifier unit number revertive-info>|`
 `<media interface-name>|`
 `<policers interface-name>|`
 `<queue both-ingress-egress egress forwarding-class forwarding-class ingress l2-statistics>|`
 `<redundancy (detail | interface-name)>|`
 `<routing brief detail summary interface-name>|`
 `<routing-instance (all | instance-name)>|`
 `<snmp-index snmp-index>|`
 `<source-class (all | destination-class-name logical-interface-name)>|`
 `<statistics interface-name>|`
 `<switch-port switch-port number>|`
 `<transport pm (all | optics | otn) (all | current | currentday | interval | previousday) (all |`
 `interface-name)>|`
 `<zone interface-name>`
 `)`

Release Information Command introduced before Junos OS Release 7.4 for Gigabit interfaces.
Command introduced in Junos OS Release 8.0 for 10 Gigabit interfaces.
Command modified in Junos OS Release 9.5 for SRX Series devices.
Command introduced in Junos OS Release 18.1 for Gigabit interfaces.

Description Display status information about the specified Gigabit Ethernet interface.

(M320, M120, MX Series, and T Series routers only) Display status information about the specified 10-Gigabit Ethernet interface.

Display the IPv6 interface traffic statistics about the specified Gigabit Ethernet interface for MX series routers. The input and output bytes (bps) and packets (pps) rates are not displayed for IFD and local traffic.

Display status information and statistics about interfaces on SRX Series appliance running Junos OS.



NOTE: On SRX Series appliances, on configuring identical IPs on a single interface, you will not see a warning message; instead, you will see a syslog message.

Starting in Junos OS Release 18.4R1, Output fields **Next-hop** and **vpls-status** is displayed in the **show interfaces *interface name* detail** command, only for Layer 2 protocols on MX480 routers.

Options For Gigabit interfaces:

ge-fpc/pic/port—Display standard information about the specified Gigabit Ethernet interface.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

For 10 Gigabit interfaces:

xe-fpc/pic/port—Display standard information about the specified 10-Gigabit Ethernet interface.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

For SRX interfaces:

- **interface-name**—(Optional) Display standard information about the specified interface. Following is a list of typical interface names. Replace *pim* with the PIM slot and port with the port number.
 - **at-*pim*/0/*port***—ATM-over-ADSL or ATM-over-SHDSL interface.
 - **ce1-*pim*/0/*port***—Channelized E1 interface.
 - **cl-0/0/8**—3G wireless modem interface for SRX320 devices.
 - **ct1-*pim*/0/*port***—Channelized T1 interface.
 - **dl0**—Dialer Interface for initiating ISDN and USB modem connections.
 - **e1-*pim*/0/*port***—E1 interface.
 - **e3-*pim*/0/*port***—E3 interface.
 - **fe-*pim*/0/*port***—Fast Ethernet interface.
 - **ge-*pim*/0/*port***—Gigabit Ethernet interface.
 - **se-*pim*/0/*port***—Serial interface.
 - **t1-*pim*/0/*port***—T1 (also called DS1) interface.
 - **t3-*pim*/0/*port***—T3 (also called DS3) interface.
 - **wx-slot/0/0**—WAN acceleration interface, for the WXC Integrated Services Module (ISM 200).
- **interface-name**—(Optional) Display standard information about the specified interface. Following is a list of typical interface names. Replace *pim* with the PIM slot and port with the port number.
 - **at-*pim*/0/*port***—ATM-over-ADSL or ATM-over-SHDSL interface.
 - **ce1-*pim*/0/*port***—Channelized E1 interface.
 - **cl-0/0/8**—3G wireless modem interface for SRX320 devices.
 - **ct1-*pim*/0/*port***—Channelized T1 interface.
 - **dl0**—Dialer Interface for initiating ISDN and USB modem connections.
 - **e1-*pim*/0/*port***—E1 interface.
 - **e3-*pim*/0/*port***—E3 interface.
 - **fe-*pim*/0/*port***—Fast Ethernet interface.
 - **ge-*pim*/0/*port***—Gigabit Ethernet interface.

- **se-pim/0/port**—Serial interface.
- **t1-pim/0/port**—T1 (also called DS1) interface.
- **t3-pim/0/port**—T3 (also called DS3) interface.
- **wx-slot/0/0**—WAN acceleration interface, for the WXC Integrated Services Module (ISM 200).

Additional Information In a logical system, this command displays information only about the logical interfaces and not about the physical interfaces.

Required Privilege Level view

Release History Table

Release	Description
18.4R1	Starting in Junos OS Release 18.4R1, Output fields Next-hop and vpls-status is displayed in the show interfaces interface name detail command, only for Layer 2 protocols on MX480 routers.

Related Documentation

- [Understanding Layer 2 Interfaces on Security Devices](#)
- [Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration](#)
- [Verifying and Managing Configurations for Dynamic VLANs Based on Access-Line Identifiers](#)

List of Sample Output

- [show interfaces \(Gigabit Ethernet\) on page 1448](#)
- [show interfaces \(Gigabit Ethernet on MX Series Routers\) on page 1448](#)
- [show interfaces \(link degrade status\) on page 1449](#)
- [show interfaces extensive \(Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration\) on page 1449](#)
- [show interfaces brief \(Gigabit Ethernet\) on page 1450](#)
- [show interfaces detail \(Gigabit Ethernet\) on page 1450](#)
- [show interfaces extensive \(Gigabit Ethernet IQ2\) on page 1452](#)
- [show interfaces \(Gigabit Ethernet Unnumbered Interface\) on page 1455](#)
- [show interfaces \(ACI Interface Set Configured\) on page 1455](#)
- [show interfaces \(ALI Interface Set\) on page 1456](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, IQ2\) on page 1456](#)
- [show interfaces extensive \(10-Gigabit Ethernet, WAN PHY Mode\) on page 1458](#)
- [show interfaces extensive \(10-Gigabit Ethernet, DWDM OTN PIC\) on page 1460](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode\) on page 1463](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only\) on page 1463](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only\) on page 1464](#)

[Sample Output SRX Gigabit Ethernet on page 1465](#)
[Sample Output SRX Gigabit Ethernet on page 1466](#)
[show interfaces detail \(Gigabit Ethernet\) on page 1466](#)
[show interfaces statistics st0.0 detail on page 1468](#)
[show interfaces extensive \(Gigabit Ethernet\) on page 1469](#)
[show interfaces terse on page 1472](#)
[show interfaces controller \(Channelized E1 IQ with Logical E1\) on page 1472](#)
[show interfaces controller \(Channelized E1 IQ with Logical DS0\) on page 1473](#)
[show interfaces descriptions on page 1473](#)
[show interfaces destination-class all on page 1473](#)
[show interfaces diagnostics optics on page 1473](#)
[show interfaces far-end-interval coc12-5/2/0 on page 1474](#)
[show interfaces far-end-interval coc1-5/2/1:1 on page 1475](#)
[show interfaces filters on page 1475](#)
[show interfaces flow-statistics \(Gigabit Ethernet\) on page 1475](#)
[show interfaces interval \(Channelized OC12\) on page 1476](#)
[show interfaces interval \(E3\) on page 1477](#)
[show interfaces interval \(SONET/SDH\) \(SRX devices\) on page 1477](#)
[show interfaces load-balancing \(SRX devices\) on page 1477](#)
[show interfaces load-balancing detail \(SRX devices\) on page 1478](#)
[show interfaces mac-database \(All MAC Addresses on a Port SRX devices\) on page 1478](#)
[show interfaces mac-database \(All MAC Addresses on a Service SRX devices\) on page 1478](#)
[show interfaces mac-database mac-address on page 1479](#)
[show interfaces mc-ae \(SRX devices\) on page 1479](#)
[show interfaces media \(SONET/SDH\) on page 1480](#)
[show interfaces policers \(SRX devices\) on page 1480](#)
[show interfaces policers interface-name \(SRX devices\) on page 1480](#)
[show interfaces queue \(SRX devices\) on page 1481](#)
[show interfaces redundancy \(SRX devices\) on page 1482](#)
[show interfaces redundancy \(Aggregated Ethernet SRX devices\) on page 1482](#)
[show interfaces redundancy detail \(SRX devices\) on page 1482](#)
[show interfaces routing brief \(SRX devices\) on page 1482](#)
[show interfaces routing detail \(SRX devices\) on page 1483](#)
[show interfaces routing-instance all \(SRX devices\) on page 1483](#)
[show interfaces snmp-index \(SRX devices\) on page 1484](#)
[show interfaces source-class all \(SRX devices\) on page 1484](#)
[show interfaces statistics \(Fast Ethernet SRX devices\) on page 1484](#)
[show interfaces switch-port \(SRX devices\) on page 1485](#)
[show interfaces transport pm \(SRX devices\) on page 1485](#)
[show security zones \(SRX devices\) on page 1487](#)

Output Fields [Table 56 on page 1182](#) describes the output fields for the **show interfaces** (Gigabit Ethernet) command. Output fields are listed in the approximate order in which they appear. For Gigabit Ethernet IQ and IQE PICs, the traffic and MAC statistics vary by interface type. For more information, see [Table 57 on page 1210](#).

Table 67: show interfaces (Gigabit Ethernet) Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
LAN-PHY mode	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
WAN-PHY mode	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
Unidirectional	Unidirectional link mode status for 10-Gigabit Ethernet interface: Enabled or Disabled for parent interface; Rx-only or Tx-only for child interfaces.	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels
Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> • Online—Autonegotiation is manually configured as online. • Offline—Autonegotiation is manually configured as offline. 	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Link flags	Information about the link. Possible values are described in the “Links Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Wavelength	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
Frequency	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Schedulers	(Gigabit Ethernet intelligent queuing 2 [IQ2] interfaces only) Number of CoS schedulers configured.	extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds (ms).	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
Output Rate	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Egress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	detail extensive
Ingress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	detail extensive

Table 67: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Output bytes—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the show interfaces command.</p>	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the Drops field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number must always be 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field must never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	<p>Total number of egress queues supported on the specified interface.</p> <p>NOTE: In DPCs that are not of the enhanced type, such as DPC 40x 1GER, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the show interfaces command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	detail extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the Dropped packets field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>	detail extensive
Ingress queues	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	extensive
Queue counters (Ingress)	<p>CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link.</p> <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
Interface transmit statistics	<p>(On MX Series devices) Status of the interface-transmit-statistics configuration: Enabled or Disabled.</p> <ul style="list-style-type: none"> • Enabled—When the interface-transmit-statistics statement is included in the configuration. If this is configured, the interface statistics show the actual transmitted load on the interface. • Disabled—When the interface-transmit-statistics statement is not included in the configuration. If this is not configured, the interface statistics show the offered load on the interface. 	detail extensive
OTN FEC statistics	<p>The forward error correction (FEC) counters provide the following statistics:</p> <ul style="list-style-type: none"> • Corrected Errors—Count of corrected errors in the last second. • Corrected Error Ratio—Corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits. 	detail extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
PCS statistics	<p>(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device.</p> <ul style="list-style-type: none"> • Bit errors—Number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode. • Errored blocks—Number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode. 	detail extensive
Link Degrad	<p>Shows the link degrade status of the physical link and the estimated bit error rates (BERs). This field is available only for the PICs supporting the physical link monitoring feature.</p> <ul style="list-style-type: none"> • Link Monitoring—Indicates if physical link degrade monitoring is enabled on the interface. <ul style="list-style-type: none"> • Enable—Indicates that link degrade monitoring has been enabled (using the link-degrade-monitor statement) on the interface. • Disable—Indicates that link degrade monitoring has not been enabled on the interface. If link degrade monitoring has not been enabled, the output does not show any related information, such as BER values and thresholds. • Link Degrad Set Threshold—The BER threshold value at which the link is considered degraded and a corrective action is triggered. • Link Degrad Clear Threshold—The BER threshold value at which the degraded link is considered recovered and the corrective action applied to the interface is reverted. • Estimated BER—The estimated bit error rate. • Link-degrade event—Shows link degrade event information. <ul style="list-style-type: none"> • Seconds—Time (in seconds) elapsed after a link degrade event occurred. • Count—The number of link degrade events recorded. • State—Shows the link degrade status (example: Defect Active). 	detail extensive

Table 67: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the show interfaces command. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> • Packet length exceeds interface MTU, or • Packet length exceeds MRU • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. <p>NOTE: The 20-port Gigabit Ethernet MIC (MIC-3D-20GE-SFP) does not have hardware counters for VLAN frames. Therefore, the VLAN tagged frames field displays 0 when the show interfaces command is executed on a 20-port Gigabit Ethernet MIC. In other words, the number of VLAN tagged frames cannot be determined for the 20-port Gigabit Ethernet MIC.</p> • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet may enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field must increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field must not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields must be 0. 	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PHY Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
WIS section	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
WIS line	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

Table 67: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
WIS path	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner—Information from the remote Ethernet device: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the link partner, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the link partner. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), Symmetric/Asymmetric (link partner supports PAUSE on receive and transmit or only PAUSE on transmit), and None (link partner does not support flow control). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the local Ethernet device: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the local device. For Gigabit Ethernet interfaces, advertised capabilities are Symmetric/Asymmetric (local device supports PAUSE on receive and transmit or only PAUSE on receive) and None (local device does not support flow control). Depending on the result of the negotiation with the link partner, local resolution flow control type will display Symmetric (local device supports PAUSE on receive and transmit), Asymmetric (local device supports PAUSE on receive), and None (local device does not support flow control). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive). 	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 67: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “ Common Output Fields Description ” on page 1168.	All levels

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags.</p> <ul style="list-style-type: none"> push—An outer VLAN tag is pushed in front of the existing VLAN tag. pop—The outer VLAN tag of the incoming frame is removed. swap—The outer VLAN tag of the incoming frame is overwritten with the user-specified VLAN tag information. push—An outer VLAN tag is pushed in front of the existing VLAN tag. push-push—Two VLAN tags are pushed in from the incoming frame. swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user-specified VLAN tag value. pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none
Demux	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> Source Family Inet Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
ACI VLAN	<p>Information displayed for agent circuit identifier (ACI) interface set configured with the agent-circuit-id autoconfiguration stanza.</p> <p>Dynamic Profile—Name of the dynamic profile that defines the ACI interface set.</p> <p>If configured, the ACI interface set enables the underlying Ethernet interface to create dynamic VLAN subscriber interfaces based on ACI information.</p> <p>NOTE: The ACI VLAN field is replaced with the Line Identity field when an ALI interface set is configured with the line-identity autoconfiguration stanza.</p>	brief detail extensive none
Line Identity	<p>Information displayed for access-line-identifier (ALI) interface sets configured with the line-identity autoconfiguration stanza.</p> <ul style="list-style-type: none"> Dynamic Profile—Name of the dynamic profile that defines the ALI interface set. Trusted option used to create the ALI interface set: Circuit-id, Remote-id, or Accept-no-ids. More than one option can be configured. <p>If configured, the ALI interface set enables the underlying Ethernet interface to create dynamic VLAN subscriber interfaces based on ALI information.</p> <p>NOTE: The Line Identity field is replaced with the ACI VLAN field when an ACI interface set is configured with the agent-circuit-id autoconfiguration stanza.</p>	detail

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under “Common Output Fields Description” on page 1168 .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Neighbor Discovery Protocol (NDP) Queue Statistics	NDP statistics for protocol inet6 under logical interface statistics. <ul style="list-style-type: none"> • Max nh cache—Maximum interface neighbor discovery nexthop cache size. • New hold nh limit—Maximum number of new unresolved nexthops. • Curr nh cnt—Current number of resolved nexthops in the NDP queue. • Curr new hold cnt—Current number of unresolved nexthops in the NDP queue. • NH drop cnt—Number of NDP requests not serviced. 	All levels
Dynamic Profile	Name of the dynamic profile that was used to create this interface configured with a Point-to-Point Protocol over Ethernet (PPPoE) family.	detail extensive none
Service Name Table	Name of the service name table for the interface configured with a PPPoE family.	detail extensive none
Max Sessions	Maximum number of PPPoE logical interfaces that can be activated on the underlying interface.	detail extensive none
Duplicate Protection	State of PPPoE duplicate protection: On or Off . When duplicate protection is configured for the underlying interface, a dynamic PPPoE logical interface cannot be activated when an existing active logical interface is present for the same PPPoE client.	detail extensive none
Direct Connect	State of the configuration to ignore DSL Forum VSAs: On or Off . When configured, the router ignores any of these VSAs received from a directly connected CPE device on the interface.	detail extensive none
AC Name	Name of the access concentrator.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the router.	extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Transit statistics	Number and rate of bytes and packets transiting the switch. NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the "Family Flags" section under "Common Output Fields Description" on page 1168 .	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the "Addresses Flags" section under "Common Output Fields Description" on page 1168 .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about the address flag. Possible values are described in the "Addresses Flags" section under "Common Output Fields Description" on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none

Table 67: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

The following table describes the output fields for the **show interfaces** (10-Gigabit Ethernet) command.

Field Name	Field Description	Level of Output
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168.	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
LAN-PHY mode	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
WAN-PHY mode	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
Unidirectional	Unidirectional link mode status for 10-Gigabit Ethernet interface: Enabled or Disabled for parent interface; Rx-only or Tx-only for child interfaces.	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels

Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none">• Online—Autonegotiation is manually configured as online.• Offline—Autonegotiation is manually configured as offline.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Link flags	Information about the link. Possible values are described in the “Links Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Wavelength	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
Frequency	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Schedulers	(Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified
Output Rate	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Egress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	detail extensive
Ingress account overhead	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	detail extensive

Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Output bytes—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	<p>Total number of egress queues supported on the specified interface.</p> <p>NOTE: In DPCs that are not of the enhanced type, such as DPC 40x 1GE R, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the show interfaces command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	detail extensive
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Ingress queues	<p>Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.</p>	extensive

Queue counters (Ingress)	CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive
Active alarms and Active defects	Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the routing device configuration, an alarm can ring the red or yellow alarm bell on the routing device, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link . <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
OTN alarms	Active OTN alarms identified on the interface.	detail extensive
OTN defects	OTN defects received on the interface.	detail extensive
OTN FEC Mode	The FECmode configured on the interface. <ul style="list-style-type: none"> • efec—Enhanced forward error correction (EFEC) is configured to detect and correct bit errors. • gfec—G.709 Forward error correction (GFEC) mode is configured to detect and correct bit errors. • none—FEC mode is not configured. 	detail extensive
OTN Rate	OTN mode. <ul style="list-style-type: none"> • fixed-stuff-bytes—Fixed stuff bytes 11.0957 Gbps. • no-fixed-stuff-bytes—No fixed stuff bytes 11.0491 Gbps. • pass-through—Enable OTN passthrough mode. • no-pass-through—Do not enable OTN passthrough mode. 	detail extensive
OTN Line Loopback	Status of the line loopback, if configured for the DWDM OTN PIC. Its value can be: enabled or disabled .	detail extensive
OTN FEC statistics	The forward error correction (FEC) counters for the DWDM OTN PIC. <ul style="list-style-type: none"> • Corrected Errors—The count of corrected errors in the last second. • Corrected Error Ratio—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits. 	detail extensive
OTN FEC alarms	OTN FEC excessive or degraded error alarms triggered on the interface. <ul style="list-style-type: none"> • FEC Degrade—OTU FEC Degrade defect. • FEC Excessive—OTU FEC Excessive Error defect. 	detail extensive

OTN OC	OTN OC defects triggered on the interface. <ul style="list-style-type: none">• LOS—OC Loss of Signal defect.• LOF—OC Loss of Frame defect.• LOM—OC Loss of Multiframe defect.• Wavelength Lock—OC Wavelength Lock defect.	detail extensive
OTN OTU	OTN OTU defects detected on the interface <ul style="list-style-type: none">• AIS—OTN AIS alarm.• BDI—OTN OTU BDI alarm.• IAE—OTN OTU IAE alarm.• TTIM—OTN OTU TTIM alarm.• SF—OTN ODU bit error rate fault alarm.• SD—OTN ODU bit error rate defect alarm.• TCA-ES—OTN ODU ES threshold alarm.• TCA-SES—OTN ODU SES threshold alarm.• TCA-UAS—OTN ODU UAS threshold alarm.• TCA-BBE—OTN ODU BBE threshold alarm.• BIP—OTN ODU BIP threshold alarm.• BBE—OTN OTU BBE threshold alarm.• ES—OTN OTU ES threshold alarm.• SES—OTN OTU SES threshold alarm.• UAS—OTN OTU UAS threshold alarm.	detail extensive
Received DAPI	Destination Access Port Interface (DAPI) from which the packets were received.	detail extensive
Received SAPI	Source Access Port Interface (SAPI) from which the packets were received.	detail extensive
Transmitted DAPI	Destination Access Port Interface (DAPI) to which the packets were transmitted.	detail extensive
Transmitted SAPI	Source Access Port Interface (SAPI) to which the packets were transmitted.	detail extensive
PCS statistics	(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device. <ul style="list-style-type: none">• Bit errors—The number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode.• Errored blocks—The number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode.	detail extensive

MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—Number of frames that exceed 1518 octets. • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the routing device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local routing device (which the routing device is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0. 	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. 	extensive

WIS section	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
WIS line	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

WIS path	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. Any state other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the attached Ethernet device, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is None. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the link partner: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive). 	extensive

Received path trace, Transmitted path trace	(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the routing device at the other end of the fiber. The transmitted path trace value is the message that this routing device transmits.	extensive
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels

VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags.</p> <ul style="list-style-type: none"> • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • pop—The outer VLAN tag of the incoming frame is removed. • swap—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information. • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • push-push—Two VLAN tags are pushed in from the incoming frame. • swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. • swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value. • pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. • pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none
Demux:	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> • Source Family Inet • Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under “Common Output Fields Description” on page 1168 .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the routing device.	extensive

Transit statistics	Number and rate of bytes and packets transiting the switch. NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under “ Common Output Fields Description ” on page 1168.	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “ Common Output Fields Description ” on page 1168.	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about address flag (possible values are described in the “Addresses Flags” section under “ Common Output Fields Description ” on page 1168.	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interlace.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

For Gigabit Ethernet IQ PICs, traffic and MAC statistics output varies. The following table describes the traffic and MAC statistics for two sample interfaces, each of which is sending traffic in packets of 500 bytes (including 478 bytes for the Layer 3 packet, 18 bytes for the Layer 2 VLAN traffic header, and 4 bytes for cyclic redundancy check [CRC] information). The **ge-0/3/0** interface is the inbound physical interface, and the **ge-0/0/0** interface is the outbound physical interface. On both interfaces, traffic is carried on logical unit **.50** (VLAN 50).

Table 68: Gigabit and 10 Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type

Interface Type	Sample Command	Byte and Octet Counts Include	Comments
Inbound physical interface	show interfaces ge-0/3/0 extensive	Traffic statistics: Input bytes: 496 bytes per packet, representing the Layer 2 packet MAC statistics: Received octets: 500 bytes per packet, representing the Layer 2 packet + 4 bytes	The additional 4 bytes are for the CRC.
Inbound logical interface	show interfaces ge-0/3/0.50 extensive	Traffic statistics: Input bytes: 478 bytes per packet, representing the Layer 3 packet	
Outbound physical interface	show interfaces ge-0/0/0 extensive	Traffic statistics: Input bytes: 490 bytes per packet, representing the Layer 3 packet + 12 bytes MAC statistics: Received octets: 478 bytes per packet, representing the Layer 3 packet	For input bytes, the additional 12 bytes include 6 bytes for the destination MAC address plus 4 bytes for VLAN plus 2 bytes for the Ethernet type.
Outbound logical interface	show interfaces ge-0/0/0.50 extensive	Traffic statistics: Input bytes: 478 bytes per packet, representing the Layer 3 packet	

[Table 58 on page 1211](#) lists the output fields for the **show interfaces** command. Output fields are listed in the approximate order in which they appear.

Table 69: show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface.	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Link-level type	Encapsulation being used on the physical interface.	All levels
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
MTU	Maximum transmission unit size on the physical interface.	All levels
Link mode	Link mode: Full-duplex or Half-duplex.	
Speed	Speed at which the interface is running.	All levels
BPDU error	Bridge protocol data unit (BPDU) error: Detected or None	
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Auto-negotiation	(Gigabit Ethernet interfaces) Autonegotiation status: Enabled or Disabled .	All levels
Remote-fault	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> • Online—Autonegotiation is manually configured as online. • Offline—Autonegotiation is manually configured as offline. 	All levels
Device flags	Information about the physical device.	All levels
Interface flags	Information about the interface.	All levels
Link flags	Information about the physical link.	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Current address	Configured MAC address.	detail extensive none

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None
Output Rate	Output rate in bps and pps.	None
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. These fields can contain the value None or Link.</p> <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Input errors	<p>Input errors on the interface.</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <code>ignore-l3-incompletes</code>. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<p>Output errors on the interface.</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation; therefore, for Gigabit Ethernet PICs, this number must always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field must never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Ingress queues	Total number of ingress queues supported on the specified interface.	extensive
Queue counters and queue number	CoS queue number and its associated user-configured forwarding class name. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> • Packet length exceeds 1518 octets, or • Packet length exceeds MRU • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local device (which the router is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields must be 0. 	extensive
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. 	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Interface transmit statistics	Status of the interface-transmit-statistics configuration: Enabled or Disabled.	detail extensive
Queue counters (Egress)	CoS queue number and its associated user-configured forwarding class name. <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface.	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Traffic statistics	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level. • Input packets, Output packets—Number of packets received and transmitted on the interface set. 	detail extensive

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Local statistics	Number and rate of bytes and packets destined to the device.	extensive
Transit statistics	<p>Number and rate of bytes and packets transiting the switch.</p> <p>NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.</p>	extensive
Security	Security zones that interface belongs to.	extensive
Flow Input statistics	Statistics on packets received by flow module.	extensive
Flow Output statistics	Statistics on packets sent by flow module.	extensive
Flow error statistics (Packets dropped due to)	Statistics on errors in the flow module.	extensive
Protocol	Protocol family.	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. .	detail extensive
Addresses, Flags	Information about the address flags..	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output Gigabit Ethernet

show interfaces (Gigabit Ethernet)

```
user@host> show interfaces ge-3/0/2
```

```
Physical interface: ge-3/0/2, Enabled, Physical link is Up
  Interface index: 167, SNMP ifIndex: 35
  Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:7c, Hardware address: 00:00:5e:00:53:7c
  Last flapped   : 2006-08-10 17:25:10 PDT (00:01:08 ago)
  Input rate      : 0 bps (0 pps)
  Output rate     : 0 bps (0 pps)
  Ingress rate at Packet Forwarding Engine : 0 bps (0 pps)
  Ingress drop rate at Packet Forwarding Engine : 0 bps (0 pps)
  Active alarms   : None
  Active defects  : None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69)
  Flags: SNMP-Traps 0x4000
  VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
  0x8100.512 0x8100.513)
  Encapsulation: VLAN-CCC
  Egress account overhead: 100
  Ingress account overhead: 90
  Input packets : 0
  Output packets: 0
  Protocol ccc, MTU: 1522
  Flags: Is-Primary
```

show interfaces (Gigabit Ethernet on MX Series Routers)

```
user@host> show interfaces ge-2/2/2
```

```
Physical interface: ge-2/2/2, Enabled, Physical link is Up
  Interface index: 156, SNMP ifIndex: 188
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, MAC-REWRITE Error: None,
  Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 4 maximum usable queues
  Schedulers     : 0
  Current address: 00:00:5e:00:53:c0, Hardware address: 00:00:5e:00:53:76
  Last flapped   : 2008-09-05 16:44:30 PDT (3d 01:04 ago)
  Input rate      : 0 bps (0 pps)
  Output rate     : 0 bps (0 pps)
  Active alarms   : None
  Active defects  : None

Logical interface ge-2/2/2.0 (Index 82) (SNMP ifIndex 219)
  Flags: Up SNMP-Traps 0x4004000 Encapsulation: ENET2
  Input packets : 10232
  Output packets: 10294
```

```

Protocol inet, MTU: 1500
  Flags: Sendbroadcast-pkt-to-re
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255
Protocol inet6, MTU: 1500
  Max nh cache: 4, New hold nh limit: 100000, Curr nh cnt: 4, Curr new hold
  cnt: 4, NH drop cnt: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 2001:db8:/32, Local: 2001:db8::5
  Addresses, Flags: Is-Preferred
    Destination: 2001:db8:1::/32, Local: 2001:db8:223:9cff:fe9f:3e78
Protocol multiservice, MTU: Unlimited
  Flags: Is-Primary

```

show interfaces (link degrade status)

```
user@host> show interfaces et-3/0/0
```

```

Physical interface: et-3/0/0, Enabled, Physical link is Down
  Interface index: 157, SNMP ifIndex: 537
  Link-level type: Ethernet, MTU: 1514, MRU: 0, Speed: 100Gbps, BPDU Error: None,
  Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running Down
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 8 maximum usable queues
  Current address: 54:e0:32:23:9d:38, Hardware address: 54:e0:32:23:9d:38
  Last flapped  : 2014-06-18 02:36:38 PDT (02:50:50 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Active alarms : LINK
  Active defects: LINK
  PCS statistics
    Bit errors          : 0
    Errored blocks      : 0
  Link Degrade* :
  Link Monitoring      : Enable
  Link Degrade Set Threshold: 1E-7
  Link Degrade Clear Threshold: 1E-12
  Estimated BER        : 1E-7
  Link-degrade event   : Seconds      Count      State
                        782             1         Defect Active

```

show interfaces extensive (Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration)

```
user@host> show interfaces ge-2/1/2 extensive | match "output|interface"
```

```

Physical interface: ge-2/1/2, Enabled, Physical link is Up
  Interface index: 151, SNMP ifIndex: 530, Generation: 154
  Interface flags: SNMP-Traps Internal: 0x4000
    Output bytes : 240614363944 772721536 bps
    Output packets: 3538446506 1420444 pps
    Direction : Output
  Interface transmit statistics: Enabled

  Logical interface ge-2/1/2.0 (Index 331) (SNMP ifIndex 955) (Generation 146)

```

Output bytes :	195560312716	522726272 bps
Output packets:	4251311146	1420451 pps

```
user@host> show interfaces ge-5/2/0.0 statistics detail
```

```
Logical interface ge-5/2/0.0 (Index 71) (SNMP ifIndex 573) (Generation 135)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes :          271524
  Output bytes :        37769598
  Input packets:         3664
  Output packets:       885790
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :       16681118
  Input packets:         0
  Output packets:       362633
Local statistics:
  Input bytes :          271524
  Output bytes :       308560
  Input packets:         3664
  Output packets:       3659
Transit statistics:
  Input bytes :          0
  Output bytes :       37461038
  Input packets:         0
  Output packets:       882131
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :       16681118
  Input packets:         0
  Output packets:       362633
                                0 bps
                                0 bps
                                0 pps
                                0 pps
                                0 bps
                                0 bps
                                0 pps
                                0 pps
```

show interfaces brief (Gigabit Ethernet)

```
user@host> show interfaces ge-3/0/2 brief
```

```
Physical interface: ge-3/0/2, Enabled, Physical link is Up
Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None

Logical interface ge-3/0/2.0
Flags: SNMP-Traps 0x4000
VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
0x8100.512 0x8100.513)
Encapsulation: VLAN-CCC
ccc

Logical interface ge-3/0/2.32767
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2
```

show interfaces detail (Gigabit Ethernet)

```
user@host> show interfaces ge-3/0/2 detail
```

```

Physical interface: ge-3/0/2, Enabled, Physical link is Up
Interface index: 167, SNMP ifIndex: 35, Generation: 177
Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 4 supported, 4 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:7c, Hardware address: 00:00:5e:00:53:7c
Last flapped  : 2006-08-09 17:17:00 PDT (01:31:33 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   : 0          0 bps
Output bytes  : 0          0 bps
Input packets: 0          0 pps
Output packets: 0         0 pps
Ingress traffic statistics at Packet Forwarding Engine:
Input bytes   : 0          0 bps
Input packets: 0          0 pps
Drop bytes    : 0          0 bps
Drop packets  : 0          0 pps
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          0              0              0
  1 expedited-fo         0              0              0
  2 assured-forw         0              0              0
  3 network-cont         0              0              0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          0              0              0
  1 expedited-fo         0              0              0
  2 assured-forw         0              0              0
  3 network-cont         0              0              0

Active alarms  : None
Active defects : None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69) (Generation 140)
Flags: SNMP-Traps 0x4000
VLAN-Tag [0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530)
Out(swap-push 0x8100.512 0x8100.513)
Encapsulation: VLAN-CCC
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
Input bytes   : 0
Output bytes  : 0
Input packets: 0
Output packets: 0

```

```

Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol ccc, MTU: 1522, Generation: 149, Route table: 0
Flags: Is-Primary

Logical interface ge-3/0/2.32767 (Index 71) (SNMP ifIndex 70)
(Generation 139)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps

```

show interfaces extensive (Gigabit Ethernet IQ2)

user@host> show interfaces ge-7/1/3 extensive

```

Physical interface: ge-7/1/3, Enabled, Physical link is Up
Interface index: 170, SNMP ifIndex: 70, Generation: 171
Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4004000
Link flags : None
CoS queues : 8 supported, 4 maximum usable queues
Schedulers : 256
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:74, Hardware address: 00:00:5e:00:53:74
Last flapped : 2007-11-07 21:31:41 PST (02:03:33 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 38910844056 7952 bps
  Output bytes : 7174605 8464 bps
  Input packets: 418398473 11 pps
  Output packets: 78903 12 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0

```



```

Ingress traffic statistics at Packet Forwarding Engine:
Input bytes :          38910799145          7952 bps
Input packets:         418397956           11 pps
Drop bytes :           0                0 bps
Drop packets:          0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          418390823          418390823              0

  1 expedited-fo              0              0              0

  2 assured-forw              0              0              0

  3 network-cont           7133           7133              0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          1031          1031              0

  1 expedited-fo              0              0              0

  2 assured-forw              0              0              0

  3 network-cont          77872          77872              0

Active alarms : None
Active defects : None
MAC statistics:
  Total octets          38910844056          7174605
  Total packets         418398473          78903
  Unicast packets       408021893366          1026
  Broadcast packets           10              12
  Multicast packets      418398217          77865
  CRC/Align errors              0              0
  FIFO errors                  0              0
  MAC control frames           0              0
  MAC pause frames            0              0
  Oversized frames            0
  Jabber frames                0
  Fragment frames              0
  VLAN tagged frames           0
  Code violations              0 OTN Received Overhead Bytes:
  APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58
  Payload Type: 0x08
OTN Transmitted Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x08
Filter statistics:
  Input packet count          418398473
  Input packet rejects        479

```

```

Input DA rejects          479
Input SA rejects          0
Output packet count              78903
Output packet pad count          0
Output packet error count        0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
  Link mode: Full-duplex, Flow control: Symmetric/Asymmetric,
  Remote fault: OK
Local resolution:
  Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
  Destination slot: 7
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %      bps      %      usec
low  0 best-effort        95      950000000  95      0
     none
low  3 network-control    5      500000000   5      0
     none
  Direction : Input
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %      bps      %      usec
low  0 best-effort        95      950000000  95      0
     none
low  3 network-control    5      500000000   5      0
     none

Logical interface ge-7/1/3.0 (Index 70) (SNMP ifIndex 85) (Generation 150)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :      812400
  Output bytes :    1349206
  Input packets:      9429
  Output packets:    9449
IPv6 transit statistics:
  Input bytes :      0
  Output bytes :      0
  Input packets:      0
  Output packets:      0
Local statistics:
  Input bytes :      812400
  Output bytes :    1349206
  Input packets:      9429
  Output packets:    9449
Transit statistics:
  Input bytes :      0      7440 bps
  Output bytes :      0      7888 bps
  Input packets:      0      10 pps
  Output packets:      0      11 pps
IPv6 transit statistics:
  Input bytes :      0
  Output bytes :      0
  Input packets:      0
  Output packets:      0
Protocol inet, MTU: 1500, Generation: 169, Route table: 0
Flags: Is-Primary, Mac-Validate-Strict

```

```

Mac-Validate Failures: Packets: 0, Bytes: 0
Addresses, Flags: Is-Preferred Is-Primary
Input Filters: F1-ge-3/0/1.0-in, F3-ge-3/0/1.0-in
Output Filters: F2-ge-3/0/1.0-out (53)
Destination: 203.0.113/24, Local: 203.0.113.2, Broadcast: 203.0.113.255,
Generation: 196
Protocol multiservice, MTU: Unlimited, Generation: 170, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```

NOTE: For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics displayed in the **show interfaces** command output might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the interface counters. For detailed information, see the description of the logical interface **Transit statistics** fields in [Table 56 on page 1182](#).

show interfaces (Gigabit Ethernet Unnumbered Interface)

```
user@host> show interfaces ge-3/2/0
```

```

Physical interface: ge-3/2/0, Enabled, Physical link is Up
Interface index: 148, SNMP ifIndex: 50
Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 8 supported, 4 maximum usable queues
Current address: 00:00:5e:00:53:f8, Hardware address: 00:00:5e:00:53:f8
Last flapped   : 2006-10-27 04:42:23 PDT (08:01:52 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 624 bps (1 pps)
Active alarms  : None
Active defects : None

Logical interface ge-3/2/0.0 (Index 67) (SNMP ifIndex 85)
Flags: SNMP-Traps Encapsulation: ENET2
Input packets : 0
Output packets: 6
Protocol inet, MTU: 1500
Flags: Unnumbered
Donor interface: lo0.0 (Index 64)
Preferred source address: 203.0.113.22

```

show interfaces (ACI Interface Set Configured)

```
user@host> show interfaces ge-1/0/0.4001
```

```

Logical interface ge-1/0/0.4001 (Index 340) (SNMP ifIndex 548)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.4001 ] Encapsulation: PPP-over-

Ethernet
ACI VLAN:
  Dynamic Profile: aci-vlan-set-profile
PPPoE:

```

```

Dynamic Profile: aci-vlan-pppoe-profile,
Service Name Table: None,
Max Sessions: 32000, Max Sessions VSA Ignore: Off,
Duplicate Protection: On, Short Cycle Protection: Off,
Direct Connect: Off,
AC Name: nbc
Input packets : 9
Output packets: 8
Protocol multiservice, MTU: Unlimited

```

show interfaces (ALI Interface Set)

```
user@host> show interfaces ge-1/0/0.10
```

```

Logical interface ge-1/0/0.10 (Index 346) (SNMP ifIndex 554) (Generation 155)
Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.10 ] Encapsulation: ENET2
Line Identity:
  Dynamic Profile: ali-set-profile
  Circuit-id Remote-id Accept-no-ids
PPPoE:
  Dynamic Profile: ali-vlan-pppoe-profile,
  Service Name Table: None,
  Max Sessions: 32000, Max Sessions VSA Ignore: Off,
  Duplicate Protection: On, Short Cycle Protection: Off,
  Direct Connect: Off,
  AC Name: nbc
  Input packets : 9
  Output packets: 8
  Protocol multiservice, MTU: Unlimited

```

Sample Output Gigabit Ethernet

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, IQ2)

```
user@host> show interfaces xe-5/0/0 extensive
```

```

Physical interface: xe-5/0/0, Enabled, Physical link is Up
Interface index: 177, SNMP ifIndex: 99, Generation: 178
Link-level type: Ethernet, MTU: 1518, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Enabled,
Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 4 maximum usable queues
Schedulers : 1024
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:f6, Hardware address: 00:00:5e:00:53:f6
Last flapped : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes : 6970332384 0 bps
Output bytes : 0 0 bps
Input packets: 81050506 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0

```

```

Output packets:                0
Ingress traffic statistics at Packet Forwarding Engine:
Input bytes :                  6970299398      0 bps
Input packets:                 81049992        0 pps
Drop bytes :                    0              0 bps
Drop packets:                  0              0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0,
  MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      81049992      81049992      0
  1 expedited-fo          0          0      0
  2 assured-forw          0          0      0
  3 network-cont          0          0      0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          0          0      0
  1 expedited-fo          0          0      0
  2 assured-forw          0          0      0
  3 network-cont          0          0      0

Active alarms : None
Active defects : None
PCS statistics
  Bit errors          0
  Errored blocks      0
MAC statistics:
  Receive              Transmit
Total octets          6970332384      0
Total packets          81050506      0
Unicast packets        81050000      0
Broadcast packets      506          0
Multicast packets      0          0
CRC/Align errors       0          0
FIFO errors            0          0
MAC control frames     0          0
MAC pause frames       0          0
Oversized frames       0
Jabber frames          0
Fragment frames        0
VLAN tagged frames     0
Code violations        0
Filter statistics:
Input packet count     81050506
Input packet rejects    506
Input DA rejects       0

```

```

Input SA rejects                                0
Output packet count                             0
Output packet pad count                         0
Output packet error count                       0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 5
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      usec
0 best-effort             95      950000000  95      0      low      none
3 network-control         5       50000000   5      0      low      none

  Direction : Input
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      usec
0 best-effort             95      950000000  95      0      low      none
3 network-control         5       50000000   5      0      low      none

Logical interface xe-5/0/0.0 (Index 71) (SNMP ifIndex 95) (Generation 195)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ] Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes : 0
  Output bytes : 46
  Input packets: 0
  Output packets: 1
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 46
  Input packets: 0
  Output packets: 1
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Protocol inet, MTU: 1500, Generation: 253, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.0.2/24, Local: 192.0.2.1, Broadcast: 192.0.2.255,
Generation: 265
  Protocol multiservice, MTU: Unlimited, Generation: 254, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

show interfaces extensive (10-Gigabit Ethernet, WAN PHY Mode)

```
user@host> show interfaces xe-1/0/0 extensive
```

```

Physical interface: xe-1/0/0, Enabled, Physical link is Up
Interface index: 141, SNMP ifIndex: 34, Generation: 47
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Loopback: Disabled
WAN-PHY mode
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps 16384
Link flags : None
CoS queues : 4 supported
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:9d, Hardware address: 00:00:5e:00:53:9d
Last flapped : 2005-07-07 11:22:34 PDT (3d 12:28 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
HS Link CRC errors: 0, HS Link FIFO overflows: 0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0,
Aged packets: 0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
Resource errors: 0
Queue counters:
Queued packets Transmitted packets Dropped packets
0 best-effort 0 0 0
1 expedited-fo 0 0 0
2 assured-forw 0 0 0
3 network-cont 0 0 0
Active alarms : LOL, LOS, LBL
Active defects: LOL, LOS, LBL, SEF, AIS-L, AIS-P
PCS statistics
Seconds Count
Bit errors 0 0
Errored blocks 0 0
MAC statistics:
Receive Transmit
Total octets 0 0
Total packets 0 0
Unicast packets 0 0
Broadcast packets 0 0
Multicast packets 0 0
CRC/Align errors 0 0
FIFO errors 0 0
MAC control frames 0 0
MAC pause frames 0 0
Oversized frames 0
Jabber frames 0
Fragment frames 0
VLAN tagged frames 0
Code violations 0
Filter statistics:
Input packet count 0
Input packet rejects 0
Input DA rejects 0
Input SA rejects 0
Output packet count 0
Output packet pad count 0
Output packet error count 0

```

```

CAM destination filters: 0, CAM source filters: 0
PMA PHY:
  PLL lock          Seconds      Count  State
  PHY light         63159        1      Light Missing
WIS section:
  BIP-B1            0            0
  SEF               434430       434438  Defect Active
  LOS               434430        1      Defect Active
  LOF               434430        1      Defect Active
  ES-S              434430
  SES-S             434430
  SEFS-S            434430
WIS line:
  BIP-B2            0            0
  REI-L             0            0
  RDI-L             0            0 OK
  AIS-L             434430        1      Defect Active
  BERR-SF           0            0 OK
  BERR-SD           0            0 OK
  ES-L              434430
  SES-L             434430
  UAS-L             434420
  ES-LFE            0
  SES-LFE           0
  UAS-LFE           0
WIS path:
  BIP-B3            0            0
  REI-P             0            0
  LOP-P             0            0 OK
  AIS-P             434430        1      Defect Active
  RDI-P             0            0 OK
  UNEQ-P            0            0 OK
  PLM-P             0            0 OK
  ES-P              434430
  SES-P             434430
  UAS-P             434420
  ES-PFE            0
  SES-PFE           0
  UAS-PFE           0
Received path trace:
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace: orissa so-1/0/0
  6f 72 69 73 73 61 20 73 6f 2d 31 2f 30 2f 30 00   orissa so-1/0/0.
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority  Limit
                           %      bps      %      bytes
  0 best-effort            95      950000000  95      0      low     none
  3 network-control        5       50000000  5       0      low     none

```

show interfaces extensive (10-Gigabit Ethernet, DWDM OTN PIC)

```
user@host> show interfaces ge-7/0/0 extensive
```

```

Physical interface: ge-7/0/0, Enabled, Physical link is Down
Interface index: 143, SNMP ifIndex: 508, Generation: 208
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled

```



```

Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags : None
Wavelength : 1550.12 nm, Frequency: 193.40 THz
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:72, Hardware address: 00:00:5e:00:53:72
Last flapped : 2011-04-20 15:48:54 PDT (18:39:49 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 2, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 0 0 0

1 expedited-fo 0 0 0

2 assured-forw 0 0 0

3 network-cont
Queue number: Mapped forwarding classes
0 best-effort
1 expedited-forwarding
2 assured-forwarding
3 network-control
Active alarms : LINK
Active defects : LINK
MAC statistics:

```

	Receive	Transmit
Total octets	0	0
Total packets	0	0
Unicast packets	0	0
Broadcast packets	0	0
Multicast packets	0	0
CRC/Align errors	0	0
FIFO errors	0	0
MAC control frames	0	0
MAC pause frames	0	0
Oversized frames	0	0
Jabber frames	0	0
Fragment frames	0	0
VLAN tagged frames	0	0
Code violations	0	0
Total octets	0	0
Total packets	0	0

```

Unicast packets          0          0
Broadcast packets        0          0
Multicast packets        0          0
CRC/Align errors         0          0
FIFO errors              0          0
MAC control frames       0          0
MAC pause frames         0          0
Oversized frames         0
Jabber frames            0
Fragment frames          0
VLAN tagged frames       0
Code violations           0
OTN alarms               : None
OTN defects              : None
OTN FEC Mode             : GFEC
OTN Rate                 : Fixed Stuff Bytes 11.0957Gbps
OTN Line Loopback       : Enabled
OTN FEC statistics :
  Corrected Errors              0
  Corrected Error Ratio (      0 sec average) 0e-0
OTN FEC alarms:
  Seconds      Count  State
  FEC Degrade   0      0  OK
  FEC Excessive 0      0  OK
OTN OC:
  Seconds      Count  State
  LOS           2      1  OK
  LOF          67164   2  Defect Active
  LOM          67164   71 Defect Active
  Wavelength Lock 0      0  OK
OTN OTU:
  AIS           0      0  OK
  BDI          65919   4814 Defect Active
  IAE          67158   1  Defect Active
  TTIM          7      1  OK
  SF           67164   2  Defect Active
  SD           67164   3  Defect Active
  TCA-ES        0      0  OK
  TCA-SES        0      0  OK
  TCA-UAS       80     40  OK
  TCA-BBE        0      0  OK
  BIP           0      0  OK
  BBE           0      0  OK
  ES            0      0  OK
  SES           0      0  OK
  UAS           587     0  OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
  APS/PCC0: 0x02, APS/PCC1: 0x42, APS/PCC2: 0xa2, APS/PCC3: 0x48
  Payload Type: 0x03
OTN Transmitted Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x03
Filter statistics:
  Input packet count          0

```

```

Input packet rejects          0
Input DA rejects              0
Input SA rejects              0
Output packet count           0
Output packet pad count       0
Output packet error count     0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 7
CoS information:
  Direction : Output
  CoS transmit queue          Bandwidth          Buffer Priority
Limit
    0 best-effort             95          9500000000    95          0          low
none
    3 network-control         5           500000000     5           0          low
none
    ...

```

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode)

```

user@host> show interfaces xe-7/0/0 extensive

Physical interface: xe-7/0/0, Enabled, Physical link is Up
  Interface index: 173, SNMP ifIndex: 212, Generation: 174
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Enabled,
  Loopback: None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
...

```

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only)

```

user@host> show interfaces xe-7/0/0-tx extensive

Physical interface: xe-7/0/0-tx, Enabled, Physical link is Up
  Interface index: 176, SNMP ifIndex: 137, Generation: 177
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Tx-Only
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:83, Hardware address: 00:00:5e:00:53:83
  Last flapped   : 2007-06-01 09:08:19 PDT (3d 02:31 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          0          0 bps
  Output bytes  : 322891152287160  9627472888 bps
  Input packets:          0          0 pps
  Output packets: 328809727380  1225492 pps
...

Filter statistics:
  Output packet count      328810554250
  Output packet pad count      0

```

```

Output packet error count          0
...

Logical interface xe-7/0/0-tx.0 (Index 73) (SNMP ifIndex 138) (Generation 139)

Flags: SNMP-Traps Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes :                0
  Output bytes :          322891152287160
  Input packets:                0
  Output packets:          328809727380
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:              0
Local statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:              0
Transit statistics:
  Input bytes :                0                      0 bps
  Output bytes :          322891152287160          9627472888 bps
  Input packets:                0                      0 pps
  Output packets:          328809727380          1225492 pps
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:              0
Protocol inet, MTU: 1500, Generation: 147, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.11.12/24, Local: 10.11.12.13, Broadcast: 10.11.12.255,
    Generation: 141
  Protocol multiservice, MTU: Unlimited, Generation: 148, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only)

```

user@host> show interfaces xe-7/0/0-rx extensive

Physical interface: xe-7/0/0-rx, Enabled, Physical link is Up
  Interface index: 174, SNMP ifIndex: 118, Generation: 175
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
  Unidirectional: Rx-Only
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:83, Hardware address: 00:00:5e:00:53:83
  Last flapped   : 2007-06-01 09:08:22 PDT (3d 02:31 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes :          322857456303482          9627496104 bps
  Output bytes :                0                0 bps

```

```

Input packets:      328775413751      1225495 pps
Output packets:      0                  0 pps
...

Filter statistics:
Input packet count      328775015056
Input packet rejects      1
Input DA rejects        0
...

Logical interface xe-7/0/0-rx.0 (Index 72) (SNMP ifIndex 120) (Generation 138)

Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes :      322857456303482
Output bytes :      0
Input packets:      328775413751
Output packets:      0
IPv6 transit statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:      0
Local statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:      0
Transit statistics:
Input bytes :      322857456303482      9627496104 bps
Output bytes :      0                  0 bps
Input packets:      328775413751      1225495 pps
Output packets:      0                  0 pps
IPv6 transit statistics:
Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:      0
Protocol inet, MTU: 1500, Generation: 145, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.0.2/24, Local: 192.0.2.1, Broadcast: 192.0.2.255,
Generation: 139
Protocol multiservice, MTU: Unlimited, Generation: 146, Route table: 0
Flags: None
Policer: Input: __default_arp_policer__

```

Sample Output

Sample Output SRX Gigabit Ethernet

```
user@host> show interfaces ge-0/0/1
```

```

Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,

```

```

Remote fault: Online
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped : 2015-05-12 08:36:59 UTC (1w1d 22:42 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
Active alarms : LINK
Active defects : LINK
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Input packets : 0
Output packets: 0
Security: Zone: public
Protocol inet, MTU: 1500
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

Sample Output SRX Gigabit Ethernet

```
user@host> show interfaces ge-0/0/1
```

```

Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped : 2015-05-12 08:36:59 UTC (1w1d 22:42 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
Active alarms : LINK
Active defects : LINK
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Input packets : 0
Output packets: 0
Security: Zone: public
Protocol inet, MTU: 1500
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

show interfaces detail (Gigabit Ethernet)

```
user@host> show interfaces ge-0/0/1 detail
```

```

Physical interface: ge-0/0/1, Enabled, Physical link is Down
  Interface index: 135, SNMP ifIndex: 510, Generation: 138
  Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,
  BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering:
  Disabled,
  Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running Down
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
  Last flapped   : 2015-05-12 08:36:59 UTC (1w2d 00:00 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  Egress queues: 8 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort      0                0                0
    1 expedited-fo     0                0                0
    2 assured-forw     0                0                0
    3 network-cont     0                0                0

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  Active alarms  : LINK
  Active defects : LINK
  Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514) (Generation 136)
  Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
  Traffic statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Local statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Transit statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  Security: Zone: public
  Flow Statistics :
  Flow Input statistics :
    Self packets :                0

```

```

    ICMP packets :                0
    VPN packets :                0
    Multicast packets :          0
    Bytes permitted by policy :   0
    Connections established :     0
    Flow Output statistics:
      Multicast packets :        0
      Bytes permitted by policy : 0
    Flow error statistics (Packets dropped due to):
      Address spoofing:          0
      Authentication failed:     0
      Incoming NAT errors:       0
      Invalid zone received packet: 0
      Multiple user authentications: 0
      Multiple incoming NAT:      0
      No parent for a gate:       0
      No one interested in self packets: 0
      No minor session:           0
      No more sessions:           0
      No NAT gate:                0
      No route present:           0
      No SA for incoming SPI:     0
      No tunnel found:            0
      No session for a gate:       0
      No zone or NULL zone binding 0
      Policy denied:              0
      Security association not active: 0
      TCP sequence number out of window: 0
      Syn-attack protection:      0
      User authentication errors: 0
    Protocol inet, MTU: 1500, Generation: 150, Route table: 0
    Flags: Sendbcst-pkt-to-re
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255, Generation:
150

```

show interfaces statistics st0.0 detail

user@host> show interfaces statistics st0.0 detail

```

Logical interface st0.0 (Index 71) (SNMP ifIndex 609) (Generation 136)
Flags: Up Point-To-Point SNMP-Traps Encapsulation: Secure-Tunnel
Traffic statistics:
  Input bytes :          528152756774
  Output bytes :         575950643520
  Input packets:         11481581669
  Output packets:        12520666095
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Transit statistics:
  Input bytes :          0          121859888 bps
  Output bytes :          0          128104112 bps
  Input packets:          0          331141 pps
  Output packets:         0          348108 pps
Security: Zone: untrust
Allowed host-inbound traffic : any-service bfd bgp dvmrp igmp ldp msdp nhrp
ospf ospf3 pgm pim rip ripng router-discovery rsvp

```



```

sap vrrp
Flow Statistics :
Flow Input statistics :
  Self packets :                0
  ICMP packets :                0
  VPN packets :                 0
  Multicast packets :           0
  Bytes permitted by policy :    525984295844
  Connections established :      7
Flow Output statistics:
  Multicast packets :            0
  Bytes permitted by policy :    576003290222
Flow error statistics (Packets dropped due to):
  Address spoofing:              0
  Authentication failed:         0
  Incoming NAT errors:           0
  Invalid zone received packet:  0
  Multiple user authentications:  0
  Multiple incoming NAT:         0
  No parent for a gate:          0
  No one interested in self packets: 0
  No minor session:              0
  No more sessions:              0
  No NAT gate:                   0
  No route present:              2000280
  No SA for incoming SPI:        0
  No tunnel found:               0
  No session for a gate:         0
  No zone or NULL zone binding  0
  Policy denied:                 0
  Security association not active: 0
  TCP sequence number out of window: 0
  Syn-attack protection:         0
  User authentication errors:     0
Protocol inet, MTU: 9192
Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
Generation: 155, Route table: 0
Flags: Sendbroadcast-pkt-to-re

```

show interfaces extensive (Gigabit Ethernet)

```
user@host> show interfaces ge-0/0/1.0 extensive
```

```

Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510, Generation: 138
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped   : 2015-05-12 08:36:59 UTC (1w1d 22:57 ago)
Statistics last cleared: Never

```

```

Traffic statistics:
Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:               0                0 pps
Output packets:              0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort                0                0                0
  1 expedited-fo                0                0                0
  2 assured-forw                0                0                0
  3 network-cont                0                0                0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control

Active alarms : LINK
Active defects : LINK
MAC statistics:
Total octets                Receive      Transmit
Total packets                0                0
Unicast packets              0                0
Broadcast packets            0                0
Multicast packets            0                0
CRC/Align errors             0                0
FIFO errors                   0                0
MAC control frames           0                0
MAC pause frames              0                0
Oversized frames              0
Jabber frames                 0
Fragment frames               0
VLAN tagged frames            0
Code violations                0
Filter statistics:
Input packet count            0
Input packet rejects          0
Input DA rejects              0
Input SA rejects              0
Output packet count            0
Output packet pad count        0
Output packet error count      0
CAM destination filters: 2, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Incomplete
Packet Forwarding Engine configuration:
  Destination slot: 0
CoS information:

```

```

    Direction : Output
    CoS transmit queue          Bandwidth          Buffer Priority
Limit                          %          bps          %          usec
    0 best-effort              95          950000000    95          0          low
none
    3 network-control          5           50000000    5           0          low
none
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514) (Generation 136)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0          0 bps
Output bytes : 0          0 bps
Input packets: 0          0 pps
Output packets: 0          0 pps
Security: Zone: public
Flow Statistics :
Flow Input statistics :
Self packets : 0
ICMP packets : 0
VPN packets : 0
Multicast packets : 0
Bytes permitted by policy : 0
Connections established : 0
Flow Output statistics:
Multicast packets : 0
Bytes permitted by policy : 0
Flow error statistics (Packets dropped due to):
Address spoofing: 0
Authentication failed: 0
Incoming NAT errors: 0
Invalid zone received packet: 0
Multiple user authentications: 0
Multiple incoming NAT: 0
No parent for a gate: 0
No one interested in self packets: 0
No minor session: 0
No more sessions: 0
No NAT gate: 0
No route present: 0
No SA for incoming SPI: 0
No tunnel found: 0
No session for a gate: 0
No zone or NULL zone binding: 0
Policy denied: 0
Security association not active: 0
TCP sequence number out of window: 0
Syn-attack protection: 0

```

```

User authentication errors:          0
Protocol inet, MTU: 1500, Generation: 150, Route table: 0
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 150

```

show interfaces terse

```
user@host> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
ge-0/0/0	up	up			
ge-0/0/0.0	up	up	inet	10.209.4.61/18	
gr-0/0/0	up	up			
ip-0/0/0	up	up			
st0	up	up			
st0.1	up	ready	inet		
ls-0/0/0	up	up			
lt-0/0/0	up	up			
mt-0/0/0	up	up			
pd-0/0/0	up	up			
pe-0/0/0	up	up			
e3-1/0/0	up	up			
t3-2/0/0	up	up			
e1-3/0/0	up	up			
se-4/0/0	up	down			
t1-5/0/0	up	up			
br-6/0/0	up	up			
dc-6/0/0	up	up			
dc-6/0/0.32767	up	up			
bc-6/0/0:1	down	up			
bc-6/0/0:1.0	up	down			
d10	up	up			
d10.0	up	up	inet		
dsc	up	up			
gre	up	up			
ipip	up	up			
lo0	up	up			
lo0.16385	up	up	inet	10.0.0.1 10.0.0.16	--> 0/0 --> 0/0
lsi	up	up			
mtun	up	up			
pimd	up	up			
pime	up	up			
pp0	up	up			

show interfaces controller (Channelized E1 IQ with Logical E1)

```
user@host> show interfaces controller ce1-1/2/6
```

Controller	Admin	Link
ce1-1/2/6	up	up
e1-1/2/6	up	up

show interfaces controller (Channelized E1 IQ with Logical DS0)

```
user@host> show interfaces controller ce1-1/2/3
```

Controller	Admin	Link
ce1-1/2/3	up	up
ds-1/2/3:1	up	up
ds-1/2/3:2	up	up

show interfaces descriptions

```
user@host> show interfaces descriptions
```

Interface	Admin	Link	Description
so-1/0/0	up	up	M20-3#1
so-2/0/0	up	up	GSR-12#1
ge-3/0/0	up	up	SMB-OSPF_Area300
so-3/3/0	up	up	GSR-13#1
so-3/3/1	up	up	GSR-13#2
ge-4/0/0	up	up	T320-7#1
ge-5/0/0	up	up	T320-7#2
so-7/1/0	up	up	M160-6#1
ge-8/0/0	up	up	T320-7#3
ge-9/0/0	up	up	T320-7#4
so-10/0/0	up	up	M160-6#2
so-13/0/0	up	up	M20-3#2
so-14/0/0	up	up	GSR-12#2
ge-15/0/0	up	up	SMB-OSPF_Area100
ge-15/0/1	up	up	GSR-13#3

show interfaces destination-class all

```
user@host> show interfaces destination-class all
```

```
Logical interface so-4/0/0.0
```

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	0	0
(0)	0)
silver	0	0
(0)	0)

```
Logical interface so-0/1/3.0
```

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	0	0
(0)	0)
silver	0	0
(0)	0)

show interfaces diagnostics optics

```
user@host> show interfaces diagnostics optics ge-2/0/0
```

```
Physical interface: ge-2/0/0
```

Laser bias current	: 7.408 mA
Laser output power	: 0.3500 mW / -4.56 dBm
Module temperature	: 23 degrees C / 73 degrees F

```

Module voltage : 3.3450 V
Receiver signal average optical power : 0.0002 mW / -36.99 dBm
Laser bias current high alarm : Off
Laser bias current low alarm : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm : Off
Laser output power low alarm : Off
Laser output power high warning : Off
Laser output power low warning : Off
Module temperature high alarm : Off
Module temperature low alarm : Off
Module temperature high warning : Off
Module temperature low warning : Off
Module voltage high alarm : Off
Module voltage low alarm : Off
Module voltage high warning : Off
Module voltage low warning : Off
Laser rx power high alarm : Off
Laser rx power low alarm : On
Laser rx power high warning : Off
Laser rx power low warning : On
Laser bias current high alarm threshold : 17.000 mA
Laser bias current low alarm threshold : 1.000 mA
Laser bias current high warning threshold : 14.000 mA
Laser bias current low warning threshold : 2.000 mA
Laser output power high alarm threshold : 0.6310 mW / -2.00 dBm
Laser output power low alarm threshold : 0.0670 mW / -11.74 dBm
Laser output power high warning threshold : 0.6310 mW / -2.00 dBm
Laser output power low warning threshold : 0.0790 mW / -11.02 dBm
Module temperature high alarm threshold : 95 degrees C / 203 degrees F
Module temperature low alarm threshold : -25 degrees C / -13 degrees F
Module temperature high warning threshold : 90 degrees C / 194 degrees F
Module temperature low warning threshold : -20 degrees C / -4 degrees F
Module voltage high alarm threshold : 3.900 V
Module voltage low alarm threshold : 2.700 V
Module voltage high warning threshold : 3.700 V
Module voltage low warning threshold : 2.900 V
Laser rx power high alarm threshold : 1.2590 mW / 1.00 dBm
Laser rx power low alarm threshold : 0.0100 mW / -20.00 dBm
Laser rx power high warning threshold : 0.7940 mW / -1.00 dBm
Laser rx power low warning threshold : 0.0158 mW / -18.01 dBm

```

show interfaces far-end-interval coc12-5/2/0

```
user@host> show interfaces far-end-interval coc12-5/2/0
```

```
Physical interface: coc12-5/2/0, SNMP ifIndex: 121
```

```

05:30-current:
  ES-L: 1, SES-L: 1, UAS-L: 0
05:15-05:30:
  ES-L: 0, SES-L: 0, UAS-L: 0
05:00-05:15:
  ES-L: 0, SES-L: 0, UAS-L: 0
04:45-05:00:
  ES-L: 0, SES-L: 0, UAS-L: 0
04:30-04:45:
  ES-L: 0, SES-L: 0, UAS-L: 0
04:15-04:30:

```

```

    ES-L: 0, SES-L: 0, UAS-L: 0
    04:00-04:15:
    ...

```

show interfaces far-end-interval coc1-5/2/1:1

```

user@host> run show interfaces far-end-interval coc1-5/2/1:1
Physical interface: coc1-5/2/1:1, SNMP ifIndex: 342
05:30-current:
    ES-L: 1, SES-L: 1, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
05:15-05:30:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
05:00-05:15:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:45-05:00:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:30-04:45:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:15-04:30:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:00-04:15:

```

show interfaces filters

```

user@host> show interfaces filters

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/0/0	up	up			
ge-0/0/0.0	up	up	inet iso		
ge-5/0/0	up	up			
ge-5/0/0.0	up	up	any inet multiservice		f-any f-inet
gr-0/3/0	up	up			
ip-0/3/0	up	up			
mt-0/3/0	up	up			
pd-0/3/0	up	up			
pe-0/3/0	up	up			
vt-0/3/0	up	up			
at-1/0/0	up	up			
at-1/0/0.0	up	up	inet iso		
at-1/1/0	up	down			
at-1/1/0.0	up	down	inet iso		
....					

show interfaces flow-statistics (Gigabit Ethernet)

```

user@host> show interfaces flow-statistics ge-0/0/1.0
Logical interface ge-0/0/1.0 (Index 70) (SNMP ifIndex 49)
Flags: SNMP-Traps Encapsulation: ENET2
Input packets : 5161
Output packets: 83
Security: Zone: zone2
Allowed host-inbound traffic : bootp bfd bgp dns dvmrp ldp msdp nhrp ospf

```

```

pgm
pim rip router-discovery rsvp sap vrrp dhcp finger ftp tftp ident-reset http
https ike
netconf ping rlogin rpm rsh snmp snmp-trap ssh telnet traceroute xnm-clear-text
xnm-ssl
  lsping
  Flow Statistics :
  Flow Input statistics :
    Self packets :                0
    ICMP packets :                0
    VPN packets :                2564
    Bytes permitted by policy :    3478
    Connections established :      1
  Flow Output statistics:
    Multicast packets :           0
    Bytes permitted by policy :    16994
  Flow error statistics (Packets dropped due to):
    Address spoofing:             0
    Authentication failed:        0
    Incoming NAT errors:          0
    Invalid zone received packet:  0
    Multiple user authentications: 0
    Multiple incoming NAT:         0
    No parent for a gate:          0
    No one interested in self packets: 0
    No minor session:             0
    No more sessions:             0
    No NAT gate:                  0
    No route present:             0
    No SA for incoming SPI:        0
    No tunnel found:              0
    No session for a gate:         0
    No zone or NULL zone binding   0
    Policy denied:                0
    Security association not active: 0
    TCP sequence number out of window: 0
    Syn-attack protection:         0
    User authentication errors:     0
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 203.0.113.1/24, Local: 203.0.113.2, Broadcast: 2.2.2.255

```

show interfaces interval (Channelized OC12)

```

user@host> show interfaces interval t3-0/3/0:0
Physical interface: t3-0/3/0:0, SNMP ifIndex: 23
17:43-current:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
17:28-17:43:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
17:13-17:28:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
16:58-17:13:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,

```



```

SEFS: 0, UAS: 0
16:43-16:58:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
...
Interval Total:
LCV: 230, PCV: 1145859, CCV: 455470, LES: 0, PES: 230, PSES: 230,
CES: 230, CSES: 230, SEFS: 230, UAS: 238

```

show interfaces interval (E3)

```

user@host> show interfaces interval e3-0/3/0

Physical interface: e3-0/3/0, SNMP ifIndex: 23
17:43-current:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
17:28-17:43:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
17:13-17:28:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:58-17:13:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:43-16:58:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
....
Interval Total:
LCV: 230, PCV: 1145859, CCV: 455470, LES: 0, PES: 230, PSES: 230,
CES: 230, CSES: 230, SEFS: 230, UAS: 238

```

show interfaces interval (SONET/SDH) (SRX devices)

```

user@host> show interfaces interval so-0/1/0

Physical interface: so-0/1/0, SNMP ifIndex: 19
20:02-current:
ES-S: 0, SES-S: 0, SEFS-S: 0, ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0,
SES-P: 0, UAS-P: 0
19:47-20:02:
ES-S: 267, SES-S: 267, SEFS-S: 267, ES-L: 267, SES-L: 267, UAS-L: 267,
ES-P: 267, SES-P: 267, UAS-P: 267
19:32-19:47:
ES-S: 56, SES-S: 56, SEFS-S: 56, ES-L: 56, SES-L: 56, UAS-L: 46, ES-P: 56,
SES-P: 56, UAS-P: 46
19:17-19:32:
ES-S: 0, SES-S: 0, SEFS-S: 0, ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0,
SES-P: 0, UAS-P: 0
19:02-19:17:
.....

```

show interfaces load-balancing (SRX devices)

```

user@host> show interfaces load-balancing

Interface  State          Last change  Member count
ams0       Up             1d 00:50    2
ams1       Up             00:00:59    2

```

show interfaces load-balancing detail (SRX devices)

```
user@host>show interfaces load-balancing detail
```

```
Load-balancing interfaces detail
Interface      : ams0
State          : Up
Last change    : 1d 00:51
Member count   : 2
Members        :
  Interface    Weight  State
  mams-2/0/0   10      Active
  mams-2/1/0   10      Active
```

show interfaces mac-database (All MAC Addresses on a Port SRX devices)

```
user@host> show interfaces mac-database xe-0/3/3
```

```
Physical interface: xe-0/3/3, Enabled, Physical link is Up
Interface index: 372, SNMP ifIndex: 788
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Disabled, Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
```

```
Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
```

```
Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
```

MAC address	Input frames	Input bytes	Output frames	Output bytes
00:00:00:00:00:00	1	56	0	0
00:00:c0:01:01:02	7023810	323095260	0	0
00:00:c0:01:01:03	7023810	323095260	0	0
00:00:c0:01:01:04	7023810	323095260	0	0
00:00:c0:01:01:05	7023810	323095260	0	0
00:00:c0:01:01:06	7023810	323095260	0	0
00:00:c0:01:01:07	7023810	323095260	0	0
00:00:c0:01:01:08	7023809	323095214	0	0
00:00:c0:01:01:09	7023809	323095214	0	0
00:00:c0:01:01:0a	7023809	323095214	0	0
00:00:c0:01:01:0b	7023809	323095214	0	0
00:00:c8:01:01:02	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:03	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:04	30424716	1399536936	37448523	1722632058
00:00:c8:01:01:05	30424789	1399540294	37448598	1722635508
00:00:c8:01:01:06	30424788	1399540248	37448597	1722635462
00:00:c8:01:01:07	30424783	1399540018	37448597	1722635462
00:00:c8:01:01:08	30424783	1399540018	37448596	1722635416
00:00:c8:01:01:09	8836796	406492616	8836795	406492570
00:00:c8:01:01:0a	30424712	1399536752	37448521	1722631966
00:00:c8:01:01:0b	30424715	1399536890	37448523	1722632058

```
Number of MAC addresses : 21
```

show interfaces mac-database (All MAC Addresses on a Service SRX devices)

```
user@host> show interfaces mac-database xe-0/3/3
```

```

Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
  Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
  MAC address      Input frames  Input bytes  Output frames  Output bytes
00:00:00:00:00:00      1           56           0             0
00:00:c0:01:01:02     7023810     323095260    0             0
00:00:c0:01:01:03     7023810     323095260    0             0
00:00:c0:01:01:04     7023810     323095260    0             0
00:00:c0:01:01:05     7023810     323095260    0             0
00:00:c0:01:01:06     7023810     323095260    0             0
00:00:c0:01:01:07     7023810     323095260    0             0
00:00:c0:01:01:08     7023809     323095214    0             0
00:00:c0:01:01:09     7023809     323095214    0             0
00:00:c0:01:01:0a     7023809     323095214    0             0
00:00:c0:01:01:0b     7023809     323095214    0             0
00:00:c8:01:01:02     31016568    1426762128   38040381      1749857526
00:00:c8:01:01:03     31016568    1426762128   38040382      1749857572
00:00:c8:01:01:04     31016499    1426758954   38040306      1749854076
00:00:c8:01:01:05     31016573    1426762358   38040381      1749857526
00:00:c8:01:01:06     31016573    1426762358   38040381      1749857526
00:00:c8:01:01:07     31016567    1426762082   38040380      1749857480
00:00:c8:01:01:08     31016567    1426762082   38040379      1749857434
00:00:c8:01:01:09     9428580     433714680    9428580       433714680
00:00:c8:01:01:0a     31016496    1426758816   38040304      1749853984
00:00:c8:01:01:0b     31016498    1426758908   38040307      1749854122

```

show interfaces mac-database mac-address

```

user@host> show interfaces mac-database xe-0/3/3 mac-address (SRX devices)
00:00:c8:01:01:09

Physical interface: xe-0/3/3, Enabled, Physical link is Up
  Interface index: 372, SNMP ifIndex: 788
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

  Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
    Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
  MAC address: 00:00:c8:01:01:09, Type: Configured,
    Input bytes   : 202324652
    Output bytes  : 202324560
    Input frames  : 4398362
    Output frames : 4398360
  Policer statistics:
    Policer type   Discarded frames  Discarded bytes
  Output aggregate      3992386          183649756

```

show interfaces mc-ae (SRX devices)

```

user@host> show interfaces mc-ae ae0 unit 512

Member Links   : ae0
Local Status   : active
Peer Status    : active
Logical Interface : ae0.512

```

```
Core Facing Interface : Label Ethernet Interface
ICL-PL               : Label Ethernet Interface
```

show interfaces media (SONET/SDH)

The following example displays the output fields unique to the **show interfaces media** command for a SONET interface (with no level of output specified):

```
user@host> show interfaces media so-4/1/2
```

```
Physical interface: so-4/1/2, Enabled, Physical link is Up
Interface index: 168, SNMP ifIndex: 495
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC48,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps 16384
Link flags     : Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 1783 (00:00:00 ago), Output: 1786 (00:00:08 ago)
LCP state: Opened
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Not-configured
CoS queues    : 8 supported
Last flapped  : 2005-06-15 12:14:59 PDT (04:31:29 ago)
Input rate    : 0 bps (0 pps)
Output rate   : 0 bps (0 pps)
SONET alarms  : None
SONET defects : None
SONET errors:
    BIP-B1: 121, BIP-B2: 916, REI-L: 0, BIP-B3: 137, REI-P: 16747, BIP-BIP2: 0
Received path trace: routerb so-1/1/2
Transmitted path trace: routera so-4/1/2
```

show interfaces policers (SRX devices)

```
user@host> show interfaces policers
```

Interface	Admin	Link	Proto	Input	Policer	Output	Policer
ge-0/0/0	up	up					
ge-0/0/0.0	up	up	inet				
			iso				
gr-0/3/0	up	up					
ip-0/3/0	up	up					
mt-0/3/0	up	up					
pd-0/3/0	up	up					
pe-0/3/0	up	up					
...							
so-2/0/0	up	up					
so-2/0/0.0	up	up	inet	so-2/0/0.0-in-policer		so-2/0/0.0-out-policer	
			iso				
so-2/1/0	up	down					
...							

show interfaces policers interface-name (SRX devices)

```
user@host> show interfaces policers so-2/1/0
```

Interface	Admin	Link	Proto	Input	Policer	Output	Policer
so-2/1/0	up	down					
so-2/1/0.0	up	down	inet	so-2/1/0.0-in-policer		so-2/1/0.0-out-policer	
			iso				
			inet6				

show interfaces queue (SRX devices)

The following truncated example shows the CoS queue sizes for queues 0, 1, and 3. Queue 1 has a queue buffer size (guaranteed allocated memory) of 9192 bytes.

```
user@host> show interfaces queue
```

```
Physical interface: ge-0/0/0, Enabled, Physical link is Up
  Interface index: 134, SNMP ifIndex: 509
  Forwarding classes: 8 supported, 8 in use
  Egress queues: 8 supported, 8 in use
  Queue: 0, Forwarding classes: class0
    Queued:
      Packets          :                0          0 pps
      Bytes            :                0          0 bps
    Transmitted:
      Packets          :                0          0 pps
      Bytes            :                0          0 bps
      Tail-dropped packets :                0          0 pps
      RL-dropped packets :                0          0 pps
      RL-dropped bytes   :                0          0 bps
      RED-dropped packets :                0          0 pps
      Low                :                0          0 pps
      Medium-low         :                0          0 pps
      Medium-high        :                0          0 pps
      High               :                0          0 pps
      RED-dropped bytes   :                0          0 bps
      Low                :                0          0 bps
      Medium-low         :                0          0 bps
      Medium-high        :                0          0 bps
      High               :                0          0 bps
    Queue Buffer Usage:
      Reserved buffer    :          118750000 bytes
      Queue-depth bytes  :
      Current            :                0
  ..
  ..
  Queue: 1, Forwarding classes: class1
  ..
  ..
    Queue Buffer Usage:
      Reserved buffer    :           9192 bytes
      Queue-depth bytes  :
      Current            :                0
  ..
  ..
  Queue: 3, Forwarding classes: class3
    Queued:
  ..
  ..
    Queue Buffer Usage:
      Reserved buffer    :          6250000 bytes
```

```

Queue-depth bytes      :
Current                 : 0
..
..

```

show interfaces redundancy (SRX devices)

```
user@host> show interfaces redundancy
```

Interface	State	Last change	Primary	Secondary	Current status
rsp0	Not present		sp-1/0/0	sp-0/2/0	both down
rsp1	On secondary	1d 23:56	sp-1/2/0	sp-0/3/0	primary down
rsp2	On primary	10:10:27	sp-1/3/0	sp-0/2/0	secondary down
rlsq0	On primary	00:06:24	lsq-0/3/0	lsq-1/0/0	both up

show interfaces redundancy (Aggregated Ethernet SRX devices)

```
user@host> show interfaces redundancy
```

Interface	State	Last change	Primary	Secondary	Current status
rlsq0	On secondary	00:56:12	lsq-4/0/0	lsq-3/0/0	both up
ae0					
ae1					
ae2					
ae3					
ae4					

show interfaces redundancy detail (SRX devices)

```
user@host> show interfaces redundancy detail
```

```

Interface      : rlsq0
State          : On primary
Last change    : 00:45:47
Primary        : lsq-0/2/0
Secondary      : lsq-1/2/0
Current status : both up
Mode           : hot-standby

Interface      : rlsq0:0
State          : On primary
Last change    : 00:45:46
Primary        : lsq-0/2/0:0
Secondary      : lsq-1/2/0:0
Current status : both up
Mode           : warm-standby

```

show interfaces routing brief (SRX devices)

```
user@host> show interfaces routing brief
```

Interface	State	Addresses
so-5/0/3.0	Down	ISO enabled
so-5/0/2.0	Up	MPLS enabled
		ISO enabled
		INET 192.168.2.120
		INET enabled
so-5/0/1.0	Up	MPLS enabled

		ISO	enabled
		INET	192.168.2.130
		INET	enabled
at-1/0/0.3	Up	CCC	enabled
at-1/0/0.2	Up	CCC	enabled
at-1/0/0.0	Up	ISO	enabled
		INET	192.168.90.10
		INET	enabled
lo0.0	Up	ISO	47.0005.80ff.f800.0000.0108.0001.1921.6800.5061.00
		ISO	enabled
		INET	127.0.0.1
fxp1.0	Up		
fxp0.0	Up	INET	192.168.6.90

show interfaces routing detail (SRX devices)

```

user@host> show interfaces routing detail

so-5/0/3.0
  Index: 15, Refcount: 2, State: Up <Broadcast PointToPoint Multicast> Change:<>

  Metric: 0, Up/down transitions: 0, Full-duplex
  Link layer: HDLC serial line Encapsulation: PPP Bandwidth: 155Mbps
  ISO address (null)
    State: <Broadcast PointToPoint Multicast> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
so-5/0/2.0
  Index: 14, Refcount: 7, State: <Up Broadcast PointToPoint Multicast> Change:<>

  Metric: 0, Up/down transitions: 0, Full-duplex
  Link layer: HDLC serial line Encapsulation: PPP Bandwidth: 155Mbps
  MPLS address (null)
    State: <Up Broadcast PointToPoint Multicast> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4458 bytes
  ISO address (null)
    State: <Up Broadcast PointToPoint Multicast> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
  INET address 192.168.2.120
    State: <Up Broadcast PointToPoint Multicast Localup> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
    Local address: 192.168.2.120
    Destination: 192.168.2.110/32
  INET address (null)
    State: <Up Broadcast PointToPoint Multicast> Change: <>
    Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
...

```

show interfaces routing-instance all (SRX devices)

```

user@host> show interfaces terse routing-instance all

```

Interface	Admin	Link	Proto	Local	Remote Instance
at-0/0/1	up	up	inet	10.0.0.1/24	
ge-0/0/0.0	up	up	inet	192.168.4.28/24	sample-a
at-0/1/0.0	up	up	inet6	fe80::a:0:0:4/64	sample-b
so-0/0/0.0	up	up	inet	10.0.0.1/32	

show interfaces snmp-index (SRX devices)

```
user@host> show interfaces snmp-index 33
```

```
Physical interface: so-2/1/1, Enabled, Physical link is Down
Interface index: 149, SNMP ifIndex: 33
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC48,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags : Keepalives
CoS queues : 8 supported
Last flapped : 2005-06-15 11:45:57 PDT (05:38:43 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
SONET alarms : LOL, PLL, LOS
SONET defects : LOL, PLL, LOF, LOS, SEF, AIS-L, AIS-P
```

show interfaces source-class all (SRX devices)

```
user@host> show interfaces source-class all
```

```
Logical interface so-0/1/0.0
```

Source class	Packets (packet-per-second)	Bytes (bits-per-second)	
gold	1928095	161959980	
(889)	(597762)
bronze	0	0	
(0)	(0)
silver	0	0	
(0)	(0)

```
Logical interface so-0/1/3.0
```

Source class	Packets (packet-per-second)	Bytes (bits-per-second)	
gold	0	0	
(0)	(0)
bronze	0	0	
(0)	(0)
silver	116113	9753492	
(939)	(631616)

show interfaces statistics (Fast Ethernet SRX devices)

```
user@host> show interfaces fe-1/3/1 statistics
```

```
Physical interface: fe-1/3/1, Enabled, Physical link is Up
Interface index: 144, SNMP ifIndex: 1042
Description: ford fe-1/3/1
Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
CoS queues : 4 supported, 4 maximum usable queues
Current address: 00:90:69:93:04:dc, Hardware address: 00:90:69:93:04:dc
Last flapped : 2006-04-18 03:08:59 PDT (00:01:24 ago)
Statistics last cleared: Never
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
Input errors: 0, Output errors: 0
Active alarms : None
```



```

Active defects : None
Logical interface fe-1/3/1.0 (Index 69) (SNMP ifIndex 50)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500
  Flags: Is-Primary, DCU, SCU-in

      Packets
Destination class      (packet-per-second)      Bytes
                        (bits-per-second)
      silver1          0          0
                        (          0) (
      silver2          0          0
                        (          0) (
      silver3          0          0
                        (          0) (

Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: 10.27.245/24, Local: 10.27.245.2,
Broadcast: 10.27.245.255
Protocol iso, MTU: 1497
  Flags: Is-Primary

```

show interfaces switch-port (SRX devices)

```
user@host# show interfaces ge-slot/0/0 switch-port port-number
```

```

Port 0, Physical link is Up
Speed: 100mbps, Auto-negotiation: Enabled
Statistics:
  Receive      Transmit
  Total bytes  28437086  21792250
  Total packets 409145   88008
  Unicast packets 9987    83817
  Multicast packets 145002   0
  Broadcast packets 254156   4191
  Multiple collisions 23      10
  FIFO/CRC/Align errors 0       0
  MAC pause frames 0       0
  Oversized frames 0
  Runt frames 0
  Jabber frames 0
  Fragment frames 0
  Discarded frames 0
Autonegotiation information:
  Negotiation status: Complete
  Link partner:
    Link mode: Full-duplex, Flow control: None, Remote fault: OK, Link
partner Speed: 100 Mbps
  Local resolution:
    Flow control: None, Remote fault: Link OK

```

show interfaces transport pm (SRX devices)

```
user@host> show interfaces transport pm all current et-0/1/0
```

```

Physical interface: et-0/1/0, SNMP ifIndex 515
14:45-current      Elapse time:900 Seconds
Near End      Suspect Flag:False      Reason:None
PM            COUNT      THRESHOLD      TCA-ENABLED      TCA-RAISED

OTU-BBE      0      800      No      No
OTU-ES      0      135      No      No
OTU-SES      0      90      No      No

```

OTU-UAS Far End PM	427 Suspect Flag:True COUNT	90 THRESHOLD	No Reason:Unknown TCA-ENABLED	No TCA-RAISED
OTU-BBE	0	800	No	No
OTU-ES	0	135	No	No
OTU-SES	0	90	No	No
OTU-UAS	0	90	No	No
Near End PM	Suspect Flag:False COUNT	THRESHOLD	Reason:None TCA-ENABLED	TCA-RAISED
ODU-BBE	0	800	No	No
ODU-ES	0	135	No	No
ODU-SES	0	90	No	No
ODU-UAS	427	90	No	No
Far End PM	Suspect Flag:True COUNT	THRESHOLD	Reason:Unknown TCA-ENABLED	TCA-RAISED
ODU-BBE	0	800	No	No
ODU-ES	0	135	No	No
ODU-SES	0	90	No	No
ODU-UAS	0	90	No	No
FEC PM	Suspect Flag:False COUNT	THRESHOLD	Reason:None TCA-ENABLED	TCA-RAISED
FEC-CorrectedErr	2008544300	0	NA	NA
FEC-UncorrectedWords	0	0	NA	NA
BER PM	Suspect Flag:False MIN MAX	AVG	Reason:None THRESHOLD	TCA-ENABLED
TCA-RAISED				
BER	3.6e-5 5.8e-5	3.6e-5	10.0e-3	No
Yes				
Physical interface: et-0/1/0, SNMP ifIndex 515				
14:45-current				
Suspect Flag:True PM		Reason:Object Disabled CURRENT	MIN MAX AVG	THRESHOLD
TCA-ENABLED	TCA-RAISED			
				(MIN)
(MAX)	(MIN)	(MAX)	(MIN)	(MAX)
Lane chromatic dispersion		0	0	0
0	NA NA	NA NA		
Lane differential group delay		0	0	0
0	NA NA	NA NA		
q Value		120	120	120
0	NA NA	NA NA		
SNR		28	28	28
0	NA NA	NA NA		
Tx output power(0.01dBm)		-5000	-5000	-5000
-100	No No	No No		
Rx input power(0.01dBm)		-3642	-3665	-3626
-500	No No	No No		
Module temperature(Celsius)		46	46	46
75	No No	No No		
Tx laser bias current(0.1mA)		0	0	0
0	NA NA	NA NA		
Rx laser bias current(0.1mA)		1270	1270	1270
0	NA NA	NA NA		
Carrier frequency offset(MHz)		-186	-186	-186
5000	No No	No No		

show security zones (SRX devices)

```
user@host> show security zones

Functional zone: management
  Description: This is the management zone.
  Policy configurable: No
  Interfaces bound: 1
  Interfaces:
    ge-0/0/0.0
Security zone: Host
  Description: This is the host zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    fxp0.0
Security zone: abc
  Description: This is the abc zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    ge-0/0/1.0
Security zone: def
  Description: This is the def zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    ge-0/0/2.0
```

show interfaces (M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet)

List of Syntax	<p>Syntax (M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface) on page 1488</p> <p>Syntax (M Series, MX Series, T Series, and PTX Series Routers Internal Ethernet Interface) on page 1488</p>
Syntax (M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface)	<pre>show interfaces em0 fxp0 <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Syntax (M Series, MX Series, T Series, and PTX Series Routers Internal Ethernet Interface)	<pre>show interfaces bcm0 em0 em1 fxp1 fxp2 ixgbe0 ixgbe1 <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced on PTX Series Packet Transport Routers for Junos OS Release 12.1.</p>
Description	(M Series, T Series, TX Matrix Plus, and PTX Series devices only) Display status information about the management Ethernet and internal Ethernet interfaces.
Options	<p>em0 fxp0—(M Series, MX Series, T Series, and PTX Series) Display standard information about the management Ethernet interface. For supported Ethernet interface by chassis and Routing Engine, see “Supported Routing Engines by Router” on page 17.</p> <p>bcm0 em0 em1 fxp1 fxp2 ixgbe0 ixgbe1—(M Series, MX Series, T Series, and PTX Series) Display standard information about the internal Ethernet interfaces. See “Supported Routing Engines by Router” on page 17 for the internal Ethernet interface names for each Routing Engine by hardware platform.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>

Required Privilege Level view

List of Sample Output

- [show interfaces brief \(Management Ethernet\) on page 1492](#)
- [show interfaces \(Management Ethernet\) on page 1492](#)
- [show interfaces \(Management Ethernet \[TX Matrix Plus Router\]\) on page 1493](#)
- [show interfaces \(Management Ethernet \[PTX Series Packet Transport Routers\]\) on page 1493](#)
- [show interfaces detail \(Management Ethernet\) on page 1493](#)
- [show interfaces detail \(Management Ethernet \[TX Matrix Plus Router\]\) on page 1494](#)
- [show interfaces detail \(Management Ethernet \[PTX Packet Transport Routers\]\) on page 1495](#)
- [show interfaces extensive \(Management Ethernet\) on page 1496](#)
- [show interfaces extensive \(Management Ethernet \[TX Matrix Plus Router\]\) on page 1496](#)
- [show interfaces extensive \(Management Ethernet \[PTX Series Packet Transport Routers\]\) on page 1497](#)
- [show interfaces brief \(Management Ethernet\) on page 1498](#)
- [show interfaces brief \(Management Ethernet \[TX Matrix Plus Router\]\) on page 1498](#)
- [show interfaces brief \(Management Ethernet \[PTX Series Packet Transport Routers\]\) on page 1498](#)
- [show interfaces \(Internal Ethernet\) on page 1499](#)
- [show interfaces \(Internal Ethernet \[TX Matrix Plus Router\]\) on page 1499](#)
- [show interfaces detail \(Internal Ethernet\) on page 1500](#)
- [show interfaces detail \(Internal Ethernet \[TX Matrix Plus Router\]\) on page 1501](#)
- [show interfaces extensive \(internal Ethernet\) on page 1502](#)
- [show interfaces extensive \(internal Ethernet \[TX Matrix Plus Router\]\) on page 1503](#)

Output Fields [Table 70 on page 1489](#) lists the output fields for the **show interfaces** (management) command on the M Series routers, T Series routers, TX Matrix Plus routers, and PTX Series. Output fields are listed in the approximate order in which they appear.

Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Interface index	Physical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels

Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface (continued)

Field Name	Field Description	Level of Output
Link-level type	Encapsulation type used on the physical interface.	All levels
MTU	Maximum transmission unit (MTU)—Size of the largest packet to be transmitted.	All levels
Clocking	Reference clock source of the interface.	All levels
Speed	Network speed on the interface.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Link type	Data transmission type.	detail extensive none
Link flags	Information about the link. Possible values are described in the “Link Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Media access control (MAC) address of the interface.	detail extensive none
Alternate link address	Backup link address.	detail extensive
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input packets	Number of packets received on the physical interface.	None specified
Output packets	Number of packets transmitted on the physical interface.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	Number and rate of bytes and packets received and transmitted on the logical and physical interface. <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive

Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface (continued)

Field Name	Field Description	Level of Output
Input errors	<ul style="list-style-type: none"> • Errors—Input errors on the interface. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Frames received smaller than the runt threshold. • Giants—Frames received larger than the giant threshold. • Policed Discards—Frames that the incoming packet match code discarded because they were not recognized or were not of interest. Usually, this field reports protocols that Junos does not support. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, possibly once every 10 seconds, the cable, the remote system, or the interface is malfunctioning. • Errors—Sum of outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet dropped by the ASIC RED mechanism. • Resource errors—Sum of transmit drops. 	extensive
Logical Interface		
Logical interface	Name of the logical interface	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface; values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	detail extensive none
inet	IP address of the logical interface.	brief
Protocol	Protocol family configured on the logical interface (such as iso or inet6).	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface (continued)

Field Name	Field Description	Level of Output
Route table	Route table in which this address exists. For example, Route table:0 refers to inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Addresses, Flags	Information about address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces brief (Management Ethernet)

```
user@host> show interfaces fxp0 brief
```

```
Physical interface: fxp0, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

Logical interface fxp0.0
  Flags: SNMP-Traps Encapsulation: ENET2
  inet  192.168.70.143/21
```

show interfaces (Management Ethernet)

```
user@host> show interfaces fxp0
```

```
Physical interface: fxp0, Enabled, Physical link is Up
  Interface index: 1, SNMP ifIndex: 1
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Half-Duplex
  Current address: 00:00:5E:00:53:89, Hardware address: 00:00:5E:00:53:89
  Last flapped   : Never
    Input packets : 80804
    Output packets: 1105

Logical interface fxp0.0 (Index 2) (SNMP ifIndex 13)
  Flags: SNMP-Traps Encapsulation: ENET2
```



```

Protocol inet, MTU: 1500
Flags: Is-Primary
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.64/21, Local: 192.168.70.143,
Broadcast: 192.168.71.255

```

show interfaces (Management Ethernet [TX Matrix Plus Router])

```

user@host> show interfaces em0

Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 17
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:c0, Hardware address: 00:00:5E:00:53:c0
  Last flapped   : Never
    Input packets : 1424
    Output packets: 5282

Logical interface em0.0 (Index 3) (SNMP ifIndex 18)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 1424
  Output packets: 5282
  Protocol inet, MTU: 1500
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.178.0/25, Local: 192.168.178.11, Broadcast:
    192.168.178.127

```

show interfaces (Management Ethernet [PTX Series Packet Transport Routers])

```

user@host> show interfaces em0

Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:1b, Hardware address: 00:00:5E:00:53:1b
  Last flapped   : Never
    Input packets : 212581
    Output packets: 71

Logical interface em0.0 (Index 3) (SNMP ifIndex 0)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 212551
  Output packets: 71
  Protocol inet, MTU: 1500
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 192.168.3/24, Local: 192.168.3.30,
    Broadcast: 192.168.3.255

```

show interfaces detail (Management Ethernet)

```

user@host> show interfaces fxp0 detail

```

```

Physical interface: fxp0, Enabled, Physical link is Up
  Interface index: 1, SNMP ifIndex: 1, Generation: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Half-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:89, Hardware address: 00:00:5E:00:53:89
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          6484031
    Output bytes :          167503
    Input packets:          81008
    Output packets:         1110

Logical interface fxp0.0 (Index 2) (SNMP ifIndex 13) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500, Generation: 6, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.64/21, Local: 192.168.70.143,
    Broadcast: 192.168.71.255, Generation: 1

```

show interfaces detail (Management Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces em0 detail
```

```

Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 17, Generation: 2
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:c0, Hardware address: 00:00:5E:00:53:c0
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          124351
    Output bytes :         1353212
    Input packets:          1804
    Output packets:         5344
  IPv6 transit statistics:
    Input bytes :           0
    Output bytes :           0
    Input packets:           0
    Output packets:           0

Logical interface em0.0 (Index 3) (SNMP ifIndex 18) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes :          117135
    Output bytes :         1331647

```

```

Input packets:          1804
Output packets:         5344
Local statistics:
Input bytes :           117135
Output bytes :          1331647
Input packets:          1804
Output packets:         5344
Protocol inet, MTU: 1500, Generation: 1, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.178.0/25, Local: 192.168.178.11, Broadcast:
192.168.178.127, Generation: 1

```

show interfaces detail (Management Ethernet [PTX Packet Transport Routers])

```
user@host> show interfaces detail em0
```

```

Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

  Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:1b, Hardware address: 00:00:5E:00:53:1b
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          15255909
    Output bytes :           4608
    Input packets:         214753
    Output packets:           72
  IPv6 transit statistics:
Input bytes :           0
Output bytes :           0
Input packets:           0
Output packets:          0

  Logical interface em0.0 (Index 3) (SNMP ifIndex 0) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes :         14394630
    Output bytes :           3024
    Input packets:         214723
    Output packets:           72
  Local statistics:
    Input bytes :         14394630
    Output bytes :           3024
    Input packets:         214723
    Output packets:           72
  Protocol inet, MTU: 1500, Generation: 1, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 192.168.3/24, Local: 192.168.3.30,
  Broadcast: 192.168.3.255, Generation: 1

```

show interfaces extensive (Management Ethernet)

```
user@host> show interfaces fxp0 extensive
```

```
Physical interface: fxp0, Enabled, Physical link is Up
  Interface index: 1, SNMP ifIndex: 1, Generation: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Half-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:89, Hardware address: 00:00:5E:00:53:89
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          6678904
    Output bytes:          169657
    Input packets:          83946
    Output packets:         1127
  Input errors:
    Errors: 12, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
    Resource errors: 0

  Logical interface fxp0.0 (Index 2) (SNMP ifIndex 13) (Generation 1)
    Flags: SNMP-Traps Encapsulation: ENET2
    Protocol inet, MTU: 1500, Generation: 6, Route table: 0
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 192.168.64/21, Local: 192.168.70.143,
      Broadcast: 192.168.71.255, Generation: 1
```

show interfaces extensive (Management Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces em0 extensive
```

```
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 17, Generation: 2
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:c0, Hardware address: 00:00:5E:00:53:c0
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          127120
    Output bytes:         1357414
    Input packets:          1843
    Output packets:         5372
```

```

IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface em0.0 (Index 3) (SNMP ifIndex 18) (Generation 1)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :          119748
  Output bytes :         1335719
  Input packets:          1843
  Output packets:         5372
Local statistics:
  Input bytes :          119748
  Output bytes :         1335719
  Input packets:          1843
  Output packets:         5372
Protocol inet, MTU: 1500, Generation: 1, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.178.0/25, Local: 192.168.178.11, Broadcast:
192.168.178.127, Generation: 1

```

show interfaces extensive (Management Ethernet [PTX Series Packet Transport Routers])

```

user@host> show interfaces extensive em0

Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

  Speed: 1000mbps
  Device flags : Present Running
  Interface flags: SNMP-Traps
  Link type : Full-Duplex
  Physical info : Unspecified
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:1b, Hardware address: 00:00:5E:00:53:1b
  Alternate link address: Unspecified
  Last flapped : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          15236459
    Output bytes :           4608
    Input packets:         214482
    Output packets:           72
  IPv6 transit statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:         0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,

```

```
Policed discards: 0, Resource errors: 0
  Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
Resource errors: 0

  Logical interface em0.0 (Index 3) (SNMP ifIndex 0) (Generation 1)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes :          14376264
Output bytes :           3024
Input packets:         214452
Output packets:          72
Local statistics:
Input bytes :          14376264
Output bytes :           3024
Input packets:         214452
Output packets:          72
Protocol inet, MTU: 1500, Generation: 1, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 192.168.3/24, Local: 192.168.3.30,
    Broadcast: 192.168.3.255, Generation: 1
```

show interfaces brief (Management Ethernet)

```
user@host> show interfaces fxp1 brief
```

```
Physical interface: fxp1, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

  Logical interface fxp1.0
    Flags: SNMP-Traps Encapsulation: ENET2
    inet  10.0.0.4/8
    inet6 fe80::200:ff:fe00:4/64
          fec0::10:0:0:4/64
    tnp   4
```

show interfaces brief (Management Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces em0 brief
```

```
Physical interface: em0, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

  Logical interface em0.0
    Flags: SNMP-Traps Encapsulation: ENET2
    inet  192.168.178.11/25
```

show interfaces brief (Management Ethernet [PTX Series Packet Transport Routers])

```
user@host> show interfaces em0 brief
```

```
Physical interface: em0, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

  Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

  Logical interface em0.0
  Flags: SNMP-Traps Encapsulation: ENET2
  inet 192.168.3.30/24

root@aboslutely> show interfaces em0 terse
Interface      Admin Link Proto  Local          Remote
em0            up    up
em0.0          up    up  inet   192.168.3.30/24
```

show interfaces (Internal Ethernet)

```
user@host> show interfaces fxp1

Physical interface: fxp1, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 2
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
  Last flapped   : Never
  Input packets  : 30655
  Output packets : 33323

Logical interface fxp1.0 (Index 3) (SNMP ifIndex 14)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: 10/8, Local: 10.0.0.4, Broadcast: 10.255.255.255
  Protocol inet6, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::200:ff:fe00:4
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: fec0::/64, Local: fec0::10:0:0:4
  Protocol tnp, MTU: 1500
    Flags: Primary, Is-Primary
    Addresses
      Local: 4
```

show interfaces (Internal Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces ixgbe0

Physical interface: ixgbe0, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 116
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
```

```

Last flapped   : Never
Input packets  : 2301738
Output packets: 3951155

Logical interface ixgbe0.0 (Index 4) (SNMP ifIndex 117)
Flags: SNMP-Traps Encapsulation: ENET2
Input packets  : 2301595
Output packets: 3951155
Protocol inet, MTU: 1500
Flags: Is-Primary
Addresses, Flags: Is-Preferred
  Destination: 10/8, Local: 10.34.0.4, Broadcast: 10.255.255.255
Addresses, Flags: Primary Is-Default Is-Preferred Is-Primary
  Destination: 192.168/16, Local: 192.168.0.4, Broadcast: 192.168.0.4
Protocol inet6, MTU: 1500
Flags: Is-Primary
Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::200:ff:fe22:4
Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: fec0::/64, Local: fec0::a:22:0:4
Protocol tnp, MTU: 1500
Flags: Primary, Is-Primary
Addresses
  Local: 0x22000004

```

show interfaces detail (Internal Ethernet)

```
user@host> show interfaces fxp1 detail
```

```

Physical interface: fxp1, Enabled, Physical link is Up
Interface index: 2, SNMP ifIndex: 2, Generation: 1
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
Speed: 100mbps
Device flags   : Present Running
Interface flags: SNMP-Traps
Link type      : Full-Duplex
Physical info   : Unspecified
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
Alternate link address: Unspecified
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          2339969
Output bytes  :          15880707
Input packets :           30758
Output packets:           33443

Logical interface fxp1.0 (Index 3) (SNMP ifIndex 14) (Generation 2)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 7, Route table: 1
Flags: Is-Primary
Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 10/8, Local: 10.0.0.4, Broadcast: 10.255.255.255,
  Generation: 3
Protocol inet6, MTU: 1500, Generation: 8, Route table: 1
Flags: Is-Primary
Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::200:ff:fe00:4,
  Broadcast: Unspecified, Generation: 5

```



```

Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: fec0::/64, Local: fec0::10:0:0:4, Broadcast: Unspecified,
Generation: 7
Protocol tnp, MTU: 1500, Generation: 9, Route table: 1
Flags: Primary, Is-Primary
Addresses, Flags: None
Destination: Unspecified, Local: 4, Broadcast: Unspecified,
Generation: 8

```

show interfaces detail (Internal Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces ixgbe0 detail
```

```

Physical interface: ixgbe0, Enabled, Physical link is Up
Interface index: 2, SNMP ifIndex: 116, Generation: 3
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
Speed: 1000mbps
Device flags   : Present Running
Interface flags: SNMP-Traps
Link type      : Full-Duplex
Physical info   : Unspecified
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
Alternate link address: Unspecified
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          238172825
Output bytes  :          1338948955
Input packets :          2360984
Output packets:          4061512
IPv6 transit statistics:
Input bytes   :              0
Output bytes  :              0
Input packets :              0
Output packets:              0

Logical interface ixgbe0.0 (Index 4) (SNMP ifIndex 117) (Generation 2)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes   :          228720309
Output bytes  :          1261387447
Input packets :          2360841
Output packets:          4061512
IPv6 transit statistics:
Input bytes   :              0
Output bytes  :              0
Input packets :              0
Output packets:              0
Local statistics:
Input bytes   :          228720309
Output bytes  :          1261387447
Input packets :          2360841
Output packets:          4061512
Protocol inet, MTU: 1500, Generation: 2, Route table: 1
Flags: Is-Primary
Addresses, Flags: Is-Preferred
Destination: 10/8, Local: 10.34.0.4, Broadcast: 10.255.255.255, Generation:
2
Addresses, Flags: Primary Is-Default Is-Preferred Is-Primary

```

```

    Destination: 192.168/16, Local: 192.168.0.4, Broadcast: 191.255.255.255,
Generation: 3
  Protocol inet6, MTU: 1500, Generation: 3, Route table: 1
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::200:ff:fe22:4
Generation: 4
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: fec0::/64, Local: fec0::a:22:0:4
  Protocol tnp, MTU: 1500, Generation: 5
Generation: 4, Route table: 1
  Flags: Primary, Is-Primary
  Addresses, Flags: None
    Destination: Unspecified, Local: 0x22000004, Broadcast: Unspecified,
Generation: 6

```

show interfaces extensive (internal Ethernet)

```
user@host> show interfaces fxp1 extensive
```

```

Physical interface: fxp1, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 2, Generation: 1
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info   : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          2349897
    Output bytes :        15888605
    Input packets:          30896
    Output packets:        33607
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
    Resource errors: 0

Logical interface fxp1.0 (Index 3) (SNMP ifIndex 14) (Generation 2)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500, Generation: 7, Route table: 1
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 10/8, Local: 10.0.0.4, Broadcast: 10.255.255.255,
    Generation: 3
  Protocol inet6, MTU: 1500, Generation: 8, Route table: 1
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::200:ff:fe00:4,
    Broadcast: Unspecified, Generation: 5
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: fec0::/64, Local: fec0::10:0:0:4, Broadcast: Unspecified,
    Generation: 7

```

```

Protocol tnp, MTU: 1500, Generation: 9, Route table: 1
Flags: Primary, Is-Primary
Addresses, Flags: None
Destination: Unspecified, Local: 4, Broadcast: Unspecified,
Generation: 8

```

show interfaces extensive (internal Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces ixgbe0 extensive
```

```

Physical interface: ixgbe0, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 116, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          242730780
    Output bytes :         1348312269
    Input packets:          2398737
    Output packets:         4133510
  IPv6 transit statistics:
    Input bytes :              0
    Output bytes :              0
    Input packets:              0
    Output packets:              0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Giants: 0, Policed discards:
0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface ixgbe0.0 (Index 4) (SNMP ifIndex 117) (Generation 2)
  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes :          233127252
    Output bytes :         1269350897
    Input packets:          2398594
    Output packets:         4133510
  IPv6 transit statistics:
    Input bytes :              0
    Output bytes :              0
    Input packets:              0
    Output packets:              0
  Local statistics:
    Input bytes :          233127252
    Output bytes :         1269350897
    Input packets:          2398594
    Output packets:         4133510
  Protocol inet, MTU: 1500, Generation: 2, Route table: 1
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred

```

```

    Destination: 10/8, Local: 10.34.0.4, Broadcast: 10.255.255.255, Generation:
2
    Addresses, Flags: Primary Is-Default Is-Preferred Is-Primary
    Destination: 192.168/16, Local: 192.168.0.4, Broadcast: 191.255.255.255,
Generation: 3
    Protocol inet6, MTU: 1500, Generation: 3, Route table: 1
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::200:ff:fe22:4
Generation: 4
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: fec0::/64, Local: fec0::a:22:0:4
    Protocol tnp, MTU: 1500, Generation: 5
    Generation: 4, Route table: 1
    Flags: Primary, Is-Primary
    Addresses, Flags: None
    Destination: Unspecified, Local: 0x22000004, Broadcast: Unspecified,
Generation: 6

```

show interfaces (PPPoE)

Syntax `show interfaces pp0.logical`
`<brief | detail | extensive | terse>`
`<descriptions>`
`<media>`
`<snmp-index snmp-index>`
`<statistics>`

Release Information Command introduced before Junos OS Release 7.4.

Description (M120 routers, M320 routers, and MX Series routers only). Display status information about the PPPoE interface.

Options `pp0.logical`—Display standard status information about the PPPoE interface.

`brief | detail | extensive | terse`—(Optional) Display the specified level of output.

`descriptions`—(Optional) Display interface description strings.

`media`—(Optional) Display media-specific information about PPPoE interfaces.

`snmp-index snmp-index`—(Optional) Display information for the specified SNMP index of the interface.

`statistics`—(Optional) Display PPPoE interface statistics.

Required Privilege Level view

List of Sample Output [show interfaces \(PPPoE\) on page 1511](#)
[show interfaces \(PPPoE over Aggregated Ethernet\) on page 1511](#)
[show interfaces brief \(PPPoE\) on page 1512](#)
[show interfaces detail \(PPPoE\) on page 1512](#)
[show interfaces extensive \(PPPoE on M120 and M320 Routers\) on page 1513](#)

Output Fields [Table 71 on page 1505](#) lists the output fields for the **show interfaces (PPPoE)** command. Output fields are listed in the approximate order in which they appear.

Table 71: show interfaces (PPPoE) Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
Interface index	Physical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Physical interface type (PPPoE).	All levels
Link-level type	Encapsulation on the physical interface (PPPoE).	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Link type	Physical interface link type: full duplex or half duplex .	All levels
Link flags	Information about the interface. Possible values are described in the "Link Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Physical Info	Physical interface information.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive
Hardware address	MAC address of the hardware.	detail extensive
Alternate link address	Backup address of the link.	detail extensive
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
IPv6 transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <p>NOTE: These fields include dropped traffic and exception traffic, as those fields are not separately defined.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface:</p> <ul style="list-style-type: none"> • Errors—Sum of incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of B chip Tx drops and IXP Tx net transmit drops. 	extensive
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions —Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), then the cable, the far-end system, or the PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of B chip Tx drops and IXP Tx net transmit drops. 	extensive

Logical Interface

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number (which reflects its initialization sequence).	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Type of encapsulation configured on the logical interface.	All levels
PPP parameters	PPP status: <ul style="list-style-type: none"> • LCP restart timer—Length of time (in milliseconds) between successive Link Control Protocol (LCP) configuration requests. • NCP restart timer—Length of time (in milliseconds) between successive Network Control Protocol (NCP) configuration requests. 	detail
PPPoE	PPPoE status: <ul style="list-style-type: none"> • State—State of the logical interface (up or down). • Session ID—PPPoE session ID. • Service name—Type of service required. Can be used to indicate an Internet service provider (ISP) name or a class or quality of service. • Configured AC name—Configured access concentrator name. • Auto-reconnect timeout—Time after which to try to reconnect after a PPPoE session is terminated, in seconds. • Idle Timeout—Length of time (in seconds) that a connection can be idle before disconnecting. • Underlying interface—Interface on which PPPoE is running. 	All levels
Link	Name of the physical interfaces for member links in an aggregated Ethernet bundle for a PPPoE over aggregated Ethernet configuration. PPPoE traffic goes out on these interfaces.	All levels
Traffic statistics	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter usually takes less than 1 second to stabilize.	detail extensive

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
IPv6 transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	<p>Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter usually takes less than 1 second to stabilize.</p>	detail extensive
Transit statistics	<p>Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter usually takes less than 1 second to stabilize.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p>	detail extensive
Keepalive settings	<p>(PPP and HDLC) Configured settings for keepalives.</p> <ul style="list-style-type: none"> • interval seconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. • down-count number—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. • up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> • Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time the last keepalive packet was received, in the format <i>hh:mm:ss</i>. • Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. <p>(MX Series routers with MPCs/MICs) When an MX Series router with MPCs/MICs is using PPP fast keepalive for a PPP link, the display does not include the number of keepalive packets received or sent, or the amount of time since the router received or sent the last keepalive packet.</p>	detail extensive
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	none detail extensive
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not-configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	none detail extensive
Protocol	Protocol family configured on the logical interface.	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive none
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
Addresses, Flags	Information about the addresses configured for the protocol family. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168.	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none

Sample Output

show interfaces (PPPoE)

```

user@host> show interfaces pp0
Physical interface: pp0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 24
  Type: PPPoE, Link-level type: PPPoE, MTU: 1532
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : None
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)

Logical interface pp0.0 (Index 72) (SNMP ifIndex 72)
  Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionDown, Session ID: None,
    Service name: None, Configured AC name: sapphire,
    Auto-reconnect timeout: 100 seconds, Idle timeout: Never,
    Underlying interface: at-5/0/0.0 (Index 70)
  Input packets : 0
  Output packets: 0
  LCP state: Not-configured
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
    Protocol inet, MTU: 100
    Flags: User-MTU, Negotiate-Address

```

show interfaces (PPPoE over Aggregated Ethernet)

```

user@host> show interfaces pp0.1073773821
Logical interface pp0.1073773821 (Index 80) (SNMP ifIndex 32584)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionUp, Session ID: 1,
    Session AC name: alcor, Remote MAC address: 00:00:5e:00:53:01,
    Underlying interface: demux0.100 (Index 88)
  Link:

```

```

ge-1/0/0.32767
ge-1/0/1.32767
  Input packets : 6
  Output packets: 6
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mp1s:
Not-configured
  CHAP state: Closed
  PAP state: Success
  Protocol inet, MTU: 1500
  Flags: Sendbroadcast-pkt-to-re
  Addresses, Flags: Is-Primary
  Local: 203.0.113.1

```

show interfaces brief (PPPoE)

```
user@host> show interfaces pp0 brief
```

```

Physical interface: pp0, Enabled, Physical link is Up
  Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps

Logical interface pp0.0
  Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionDown, Session ID: None,
    Service name: None, Configured AC name: sapphire,
    Auto-reconnect timeout: 100 seconds, Idle timeout: Never,
    Underlying interface: at-5/0/0.0 (Index 70)
  inet

```

show interfaces detail (PPPoE)

```
user@host> show interfaces pp0 detail
```

```

Physical interface: pp0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 24, Generation: 9
  Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
  Logical interface pp0.0 (Index 72) (SNMP ifIndex 72) (Generation 14)
  Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionDown, Session ID: None,
    Service name: None, Configured AC name: sapphire,
    Auto-reconnect timeout: 100 seconds, Idle timeout: Never,

```

```

    Underlying interface: at-5/0/0.0 (Index 70)
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
LCP state: Not-configured
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
  Protocol inet, MTU: 100, Generation: 14, Route table: 0
  Flags: User-MTU, Negotiate-Address

```

show interfaces extensive (PPPoE on M120 and M320 Routers)

```
user@host> show interfaces pp0 extensive
```

```

Physical interface: pp0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 93, Generation: 129
Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link type : Full-Duplex
Link flags : None
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 972192 0 bps
  Output bytes : 975010 0 bps
  Input packets: 1338 0 pps
  Output packets: 1473 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
  Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface pp0.0 (Index 69) (SNMP ifIndex 96) (Generation 194)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
PPPoE:

```

```

State: SessionUp, Session ID: 26,
Session AC name: None, AC MAC address: 00:00:5e:00:53:12,
Service name: None, Configured AC name: None,
Auto-reconnect timeout: Never, Idle timeout: Never,
Underlying interface: ge-3/0/1.0 (Index 67)
Traffic statistics:
  Input bytes :                252
  Output bytes :                296
  Input packets:                7
  Output packets:              8
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:              0
Local statistics:
  Input bytes :                252
  Output bytes :                296
  Input packets:                7
  Output packets:              8
Transit statistics:
  Input bytes :                0          0 bps
  Output bytes :                0          0 bps
  Input packets:                0          0 pps
  Output packets:              0          0 pps
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:              0
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 1 (last seen 00:00:00 ago)
  Output: 1 (last sent 00:00:03 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
PAP state: Closed
Protocol inet, MTU: 1492, Generation: 171, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 203.0.113.2, Local: 203.0.113.1, Broadcast: Unspecified,
Generation: 206

```

show interfaces (PTX Series Packet Transport Routers)

Syntax	<pre>show interfaces et-<i>fpc/pic/port</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	<p>Command introduced in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 12.1 for PTX Series Packet Transport Routers.</p>
Description	(PTX Series Packet Transport Routers only) Display status information about the specified Ethernet interface.
Options	<p>et-<i>fpc/pic/port</i>—Display standard information about the specified Ethernet interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media —(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces brief (PTX5000 Packet Transport Router) on page 1525</p> <p>show interfaces extensive (PTX5000 Packet Transport Router) on page 1525</p> <p>show interfaces terse (PTX5000 Packet Transport Router) on page 1526</p>
Output Fields	See Table 72 on page 1516 for the output fields for the show interfaces (PTX Series Packet Transport Routers) command.

Table 72: show interfaces PTX Series Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
BPDU Error	Bridge protocol data unit (BPDU) errors (if any).	All levels
MAC-Rewrite	MAC Rewrite errors (if any).	All levels
Loopback	Loopback status: Enabled or Disabled . If loopback is enabled, type of loopback: Local or Remote .	All levels
Source filtering	Source filtering status: Enabled or Disabled .	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Link flags	Information about the link. Possible values are described in the “Links Flags” section under “Common Output Fields Description” on page 1168 .	All levels
CoS queues	Number of CoS queues configured.	detail extensive none
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>NOTE: Input bytes and output bytes are counted as Layer 3 packet length.</p>	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. <p>NOTE: The L3 incompletes field is <i>not</i> supported on PTX Series Packet Transport Routers.</p> <ul style="list-style-type: none"> • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • FIFO errors—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Collisions—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • FIFO errors—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Ingress queues	Total number of ingress queues supported on the specified interface.	extensive
Queue counters (Ingress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link.</p> <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. • LOCAL-FAULT—Link fault signaling operates between the remote PHY RS (Reconciliation sub-layer) and the local RS. A Local Fault is used to signal a detected fault between the remote RS and the local RS to the local Ethernet interface. • REMOTE-FAULT—When the Local Fault status reaches an RS, the RS stops sending MAC data and continuously generates the Remote Fault status on the transmit data path . 	detail extensive none
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—Number of frames that exceed 1518 octets. • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> • Input packet count—Number of packets received from the MAC hardware that the filter processed. • Input packet rejects—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address. • Input DA rejects—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting). • Input SA rejects—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect. • Output packet count—Number of packets that the filter has given to the MAC hardware. • Output packet pad count—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured. • Output packet error count—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment. • CAM destination filters, CAM source filters—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0. 	extensive

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> • Negotiation status: <ul style="list-style-type: none"> • Incomplete—Ethernet interface has the speed or link mode configured. • No autonegotiation—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation. • Complete—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner status—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful. • Link partner: <ul style="list-style-type: none"> • Link mode—Depending on the capability of the attached Ethernet device, either Full-duplex or Half-duplex. • Flow control—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is None. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information from the link partner—Failure indicates a receive link error. OK indicates that the link partner is receiving. Negotiation error indicates a negotiation error. Offline indicates that the link partner is going offline. • Local resolution—Information from the link partner: <ul style="list-style-type: none"> • Flow control—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are Symmetric (link partner supports PAUSE on receive and transmit), Asymmetric (link partner supports PAUSE on transmit), and Symmetric/Asymmetric (link partner supports both PAUSE on receive and transmit or only PAUSE receive). • Remote fault—Remote fault information. Link OK (no error detected on receive), Offline (local interface is offline), and Link Failure (link error detected on receive). 	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. 	extensive

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (Out) VLAN tag or for both the outer and inner (In) VLAN tags.</p> <ul style="list-style-type: none"> • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • pop—The outer VLAN tag of the incoming frame is removed. • swap—The outer VLAN tag of the incoming frame is overwritten with the user-specified VLAN tag information. • push—An outer VLAN tag is pushed in front of the existing VLAN tag. • push-push—Two VLAN tags are pushed in from the incoming frame. • swap-push—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame. • swap-swap—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user-specified VLAN tag value. • pop-swap—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame. • pop-pop—Both the outer and inner VLAN tags of the incoming frame are removed. 	brief detail extensive none
Demux	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> • Source Family Inet • Destination Family Inet 	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under “ Common Output Fields Description ” on page 1168.	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set • Input packets, Output packets—Number of packets received and transmitted on the interface set. <p>NOTE: Input bytes and output bytes are counted as Layer 3 packet length.</p>	detail extensive
IPv6 transit statistics	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	extensive
Local statistics	Number and rate of bytes and packets destined to the router.	extensive

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
Transit statistics	Number and rate of bytes and packets transiting the switch.	extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive none
Flags	Information about protocol family flags. Possible values are described in the "Family Flags" section under "Common Output Fields Description" on page 1168 .	detail extensive
Donor interface	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	detail extensive none
Preferred source address	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	detail extensive none
Input Filters	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Output Filters	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	detail extensive
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the "Addresses Flags" section under "Common Output Fields Description" on page 1168 .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Flags	Information about flags (possible values are described in the "Addresses Flags" section under "Common Output Fields Description" on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interlace.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces brief (PTX5000 Packet Transport Router)

```
user@host> show interfaces brief et-7/0/0

Physical interface: et-7/0/0, Enabled, Physical link is Up
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Loopback: Disabled, Source
filtering: Disabled, Flow control: Enabled
Device flags      : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags       : None
```

show interfaces extensive (PTX5000 Packet Transport Router)

```
user@host> show interfaces et-7/0/0 extensive

Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 168, SNMP ifIndex: 501, Generation: 171
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
control: Enabled
Device flags      : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags       : None
CoS queues       : 8 supported, 8 maximum usable queues
Hold-times       : Up 0 ms, Down 0 ms
Current address: 88:e0:f3:3b:de:43, Hardware address: 88:e0:f3:3b:de:43
Last flapped    : 2012-01-18 11:48:24 PST (01:51:00 ago)
Statistics last cleared: 2012-01-18 13:38:54 PST (00:00:30 ago)
Traffic statistics:
Input bytes      : 0                      0 bps
Output bytes     : 0                      0 bps
Input packets    : 0                      0 pps
Output packets   : 0                      0 pps
IPv6 transit statistics:
Input bytes      : 0
Output bytes     : 0
Input packets    : 0
Output packets   : 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

0 best-effort      0                      0                      0
1 expedited-fo     0                      0                      0
2 assured-forw     0                      0                      0
3 network-cont     0                      0                      0

Queue number:      Mapped forwarding classes
0                  best-effort
```

```

1          expedited-forwarding
2          assured-forwarding
3          network-control
Active alarms : None
Active defects : None
MAC statistics:
Total octets          Receive          Transmit
Total packets        0          0
Unicast packets      0          0
Broadcast packets    0          0
Multicast packets    0          0
CRC/Align errors     0          0
FIFO errors          0          0
MAC control frames   0          0
MAC pause frames     0          0
Oversized frames     0
Jabber frames        0
Fragment frames      0
VLAN tagged frames   0
Code violations       0
Filter statistics:
Input packet count    0
Input packet rejects  0
Input DA rejects      0
Input SA rejects      0
Output packet count   0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Incomplete
Packet Forwarding Engine configuration:
Destination slot: 7
CoS information:
Direction : Output
CoS transmit queue    Bandwidth          Buffer Priority
Limit
0 best-effort         95      9500000000    95      usec      0      low
none
3 network-control      5      5000000000     5      0      low
none
Interface transmit statistics: Disabled

```

show interfaces terse (PTX5000 Packet Transport Router)

```

user@host> show interfaces terse

```

Interface	Admin	Link	Proto	Local	Remote
et-2/0/0	up	up			
et-2/0/1	up	up			
et-2/0/2	up	up			
et-2/0/3	up	up			
et-2/0/4	up	up			
et-2/0/5	up	down			
et-2/0/6	up	up			
et-2/0/7	up	up			
et-2/0/8	up	up			
et-2/0/9	up	down			
et-2/0/10	up	up			

et-2/0/11	up	up	
et-2/0/12	up	up	
et-2/0/13	up	down	
et-2/0/14	up	up	
et-2/0/15	up	up	
et-2/0/16	up	up	
et-2/0/17	up	down	
et-2/0/18	up	down	
et-2/0/19	up	up	
et-2/0/20	up	down	
et-2/0/21	up	up	
et-2/0/22	up	down	
et-2/0/23	up	up	
et-2/1/0	up	up	
et-2/1/1	up	up	
et-2/1/2	up	up	
et-2/1/3	up	up	
et-2/1/4	up	up	
et-2/1/5	up	up	
et-2/1/6	up	up	
et-2/1/7	up	up	
et-2/1/8	up	up	
et-2/1/9	up	up	
et-2/1/10	up	up	
et-2/1/11	up	up	
et-2/1/12	up	up	
et-2/1/13	up	up	
et-2/1/14	up	up	
et-2/1/15	up	up	
et-2/1/16	up	up	
et-2/1/17	up	up	
et-2/1/18	up	up	
et-2/1/19	up	up	
et-2/1/20	up	up	
et-2/1/21	up	up	
et-2/1/22	up	up	
et-2/1/23	up	up	
et-5/0/0	up	up	
et-5/0/0.0	up	up	ccc
et-5/0/0.32767	up	up	multiservice
et-5/0/1	up	up	
et-5/0/2	up	up	
et-5/0/3	up	down	
et-5/0/4	up	down	
et-5/0/5	up	up	
et-5/0/5.0	up	up	ccc
et-5/0/5.32767	up	up	multiservice
et-5/0/6	up	up	
et-5/0/7	up	up	
et-5/0/8	up	down	
et-5/0/9	up	up	
et-5/0/10	up	up	
et-5/0/11	up	up	
et-5/0/12	up	up	
et-5/0/13	up	down	
et-5/0/14	up	down	
et-5/0/15	up	up	
et-5/0/16	up	up	
et-5/0/17	up	up	
et-5/0/18	up	up	

```

et-5/0/19      up    up
et-5/0/20      up    down
et-5/0/21      up    down
et-5/0/22      up    up
et-5/0/23      up    up
et-5/1/0       up    up
et-5/1/1       up    up
et-7/0/0       up    up
et-7/0/1       up    up
et-7/0/2       up    up
et-7/0/3       up    up
et-7/0/4       up    up
et-7/0/5       up    up
et-7/0/6       up    up
et-7/0/7       up    up
et-7/0/8       up    up
et-7/0/9       up    up
et-7/0/10      up    down
et-7/0/11      up    down
et-7/0/12      up    down
et-7/0/13      up    down
et-7/0/14      up    down
et-7/0/15      up    down
et-7/0/16      up    down
et-7/0/17      up    down
et-7/0/18      up    down
et-7/0/19      up    down
et-7/0/20      up    down
et-7/0/21      up    down
et-7/0/22      up    down
et-7/0/23      up    down
dsc            up    up
em0            up    up
em0.0          up    up    inet    192.168.177.61/25
gre            up    up
ipip           up    up
ixgbe0         up    up
ixgbe0.0       up    up    inet    10.0.0.4/8
                                     128.0.0.1/2
                                     128.0.0.4/2
                                     inet6  fe80::200:ff:fe00:4/64
                                     fec0::a:0:0:4/64
                                     tnp     0x4
ixgbe1         up    up
ixgbe1.0       up    up    inet    10.0.0.4/8
                                     128.0.0.1/2
                                     128.0.0.4/2
                                     inet6  fe80::200:1ff:fe00:4/64
                                     fec0::a:0:0:4/64
                                     tnp     0x4
lo0            up    up
lo0.0          up    up    inet    10.255.177.61    --> 0/0
                                     127.0.0.1        --> 0/0
                                     iso
47.0005.80ff.f800.0000.0108.0001.0102.5517.7061
                                     inet6  abcd::10:255:177:61
                                     fe80::ee9e:cd0f:fc02:b01e
lo0.16384      up    up    inet    127.0.0.1        --> 0/0
lo0.16385      up    up    inet
lsi            up    up

```

mtun	up	up
pimd	up	up
pime	up	up
tap	up	up

show interfaces (SONET/SDH)

Syntax	<pre>show interfaces so-<i>fpc/pic/port</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(M Series and T Series routers only) Display status information about the specified SONET/SDH interface.
Options	<p>so-<i>fpc/pic/port</i>—Display standard information about the specified SONET/SDH interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • SONET/SDH Interfaces Overview
List of Sample Output	<p>show interfaces (SDH Mode, PPP) on page 1543</p> <p>show interfaces brief (SDH Mode, PPP) on page 1544</p> <p>show interfaces detail (SDH Mode, PPP) on page 1544</p> <p>show interfaces extensive (SDH Mode, PPP) on page 1545</p> <p>show interfaces brief (SONET Mode, Frame Relay) on page 1547</p> <p>show interfaces (SONET Mode, Frame Relay) on page 1548</p> <p>show interfaces detail (SONET Mode, Frame Relay) on page 1548</p> <p>show interfaces extensive (SONET Mode, Frame Relay) on page 1550</p> <p>show interfaces extensive (OC768-over-4xOC192 Mode) on page 1553</p> <p>show interfaces detail (IPv6 Tracking) on page 1556</p> <p>show interfaces (Shared Interface) on page 1557</p>
Output Fields	Table 73 on page 1531 lists the output fields for the show interfaces (SONET/SDH) command. Output fields are listed in the approximate order in which they appear.

Table 73: SONET/SDH show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “ Common Output Fields Description ” on page 1168.	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	SONET/SDH reference clock source: Internal or External . Clocking is configured and displayed only for channel 0.	All levels
Framing mode	Framing mode: SONET or SDH .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Payload scrambler	Whether payload scrambling is enabled.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “ Common Output Fields Description ” on page 1168.	All levels
Shared-interface	Indicates whether the routing domain is the owner or non-owner of the shared interface. If the routing domain is the Root System Domain (RSD), the value is Owner . If the routing domain is a Protected System Domain (PSD) under the RSD, the value is Non-owner .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under “ Common Output Fields Description ” on page 1168.	All levels

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
ANSI or ITU LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI). The format is (ANSI or ITU) LMI settings: value, value... xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> • n391dte—DTE full status polling interval (1-255) • n392dce—DCE error threshold (1-10) • n392dte—DTE error threshold (1-10) • n393dce—DCE monitored event count (1-10) • n393dte—DTE monitored event count (1-10) • t391dte—DTE polling timer (5-30 seconds) • t392dce—DCE polling verification timer (5-30 seconds) 	All levels
LMI	Input: value (hh:mm:ss ago), Output: value (hh:mm:ss ago)	brief none
LMI statistics	<p>(Frame Relay) LMI packet statistics:</p> <ul style="list-style-type: none"> • Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago). • Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last sent hh:mm:ss ago). 	detail extensive
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> • Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. • Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. • Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. • Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> • Enquiries received—Number of enquiries received by the DCE from the DTE. • Full enquiries received—Number of full enquiries received by the DCE from the DTE. • Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. • Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay. Displayed only from the DTE) Number of DLCIs configured from the DCE.	detail extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> • interval seconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. • down-count number—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. • up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	All levels
Keepalive or Keepalive statistics	(PPP and HDLC) Information about keepalive packets. <ul style="list-style-type: none"> • Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format hh:mm:ss. • Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format hh:mm:ss. 	All levels
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not-configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
CoS queues	Number of CoS queues configured.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	Number of bytes and packets received and transmitted on the physical interface, and the traffic rate in bits per seconds (bps). <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Label-switched interface (LSI) traffic statistics	(Frame Relay) LSI traffic statistics: <ul style="list-style-type: none"> • Input bytes—Number of bytes and speed, in bits per second (bps), received on the interface. • Output packets—Number of packets and speed, in bps, transmitted on the interface. 	extensive
Input errors	Input errors on the interface whose definitions are as follows: <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Bucket Drops—Drops resulting from the traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is off. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • HS link FIFO overflows—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces. 	extensive

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • HS link FIFO underflows—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces. • MTU errors—Number of packets whose size exceeds the MTU of the interface. 	extensive
IPv6 transit statistics	<p>Number of transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	extensive
SONET alarms SONET defects	(SONET) SONET media-specific alarms and defects that prevents the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SONET PHY , SONET section , SONET line , and SONET path .	All levels
Link	(For 4-port OC192c PIC operating in OC768-over-4xOC192 mode) The link number. Errors and alarms are displayed for each link.	extensive

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SONET PHY	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SONET section	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOL—Loss of light • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section) 	extensive
SONET line	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line) 	extensive

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SONET path	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • ES-PFE—Errored seconds (far-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path) 	extensive
Received SONET overhead Transmitted SONET overhead	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—Allocated for future use. 	extensive
SDH alarms SDH defects	<p>SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY, SDH regenerator section, SDH multiplex section, and SDH path.</p>	All levels

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal 	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • RS-BIP8—24-bit BIP for multiplex section overhead (B2 bytes) • OOF—Out of frame • LOS—Loss of signal • LOF—Loss of frame • RS-ES—Errored seconds (near-end regenerator section) • RS-SES—Severely errored seconds (near-end regenerator section) • RS-SEFS—Severely errored framing seconds (regenerator section) 	extensive
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • MS-BIP24—8-bit BIP for high-order path overhead (B3 byte) • MS-FEBE—Far-end block error (multiplex section) • MS-FERF—Far-end remote fail (multiplex section) • MS-AIS—Alarm indication signal (multiplex section) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • MS-ES—Errored seconds (near-end multiplex section) • MS-SES—Severely errored seconds (near-end multiplex section) • MS-UAS—Unavailable seconds (near-end multiplex section) • MS-ES-FE—Errored seconds (far-end multiplex section) • MS-SES-FE—Severely errored seconds (far-end multiplex section) • MS-UAS-FE—Unavailable seconds (far-end multiplex section) 	extensive

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SDH path	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>Subfields are:</p> <ul style="list-style-type: none"> • HP-BIP8—8-bit BIP for regenerator section overhead (B1 byte) • HP-FEBE—Far-end block error (high-order path) • HP-LOP—Loss of pointer (high-order path) • HP-AIS—High-order-path alarm indication signal • HP-FERF—Far-end remote fail (high-order path) • HP-UNEQ—Unequipped (high-order path) • HP-PLM—Payload label mismatch (high-order path) • HP-ES—Errored seconds (near-end high-order path) • HP-SES—Severely errored seconds (near-end high-order path) • HP-UAS—Unavailable seconds (near-end high-order path) • HP-ES-FE—Errored seconds (far-end high-order path) • HP-SES-FE—Severely errored seconds (far-end high-order path) • HP-UAS-FE—Unavailable seconds (far-end high-order path) 	extensive
Received SDH overhead Transmitted SDH overhead	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>. • Z3 and Z4—Allocated for future use. 	extensive
Received path trace Transmitted path trace	<p>SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
HDLC configuration	Information about the HDLC configuration. <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. 	extensive
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
PPP parameters	The PPP loopback clear timer value.	extensive

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Shared interface	Provides the following information: <ul style="list-style-type: none"> shared with—(RSD only) Indicates which PSD owns the logical shared interface. For example, psd3. peer interface—(PSD only) Lists the logical tunnel interface that peers with the logical shared interface. For example, ut-2/1/0.2. tunnel token—Specifies the receive (RX) and transmit (TX) tunnel tokens. For example, Rx: 5.519, Tx: 13.514. 	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
protocol-family	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
Multilink bundle	(If the logical interface is configured as part of a multilink bundle.) Interface name for the multilink bundle.	detail extensive none
AS bundle	(If the logical interface is configured as part of an aggregated SONET bundle.) AS bundle number.	detail extensive
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “ Common Output Fields Description ” on page 1168 .	detail extensive none

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the interface.	detail extensive none
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics . Flags is one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • Dce-configured—Displayed when the command is issued from the DTE. 	detail extensive
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces (SDH Mode, PPP)

```
user@host> show interfaces so-0/0/0
```

```
Physical interface: so-0/0/0, Enabled, Physical link is Up
Interface index: 149, SNMP ifIndex: 66
Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 30 (00:00:07 ago), Output: 29 (00:00:05 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
CoS queues    : 4 supported, 4 maximum usable queues
Last flapped  : 2006-03-24 13:20:56 PST (00:05:09 ago)
Input rate    : 0 bps (0 pps)
Output rate   : 0 bps (0 pps)
SDH alarms    : None
SDH defects   : None
```

```

Logical interface so-0/0/0.0 (Index 66) (SNMP ifIndex 43)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.0.12.0/30, Local: 10.0.12.1, Broadcast: 10.0.12.3
  Protocol iso, MTU: 4470
    Flags: Protocol-Down
  Protocol mpls, MTU: 4458, Maximum labels: 3
    Flags: Protocol-Down, Is-Primary

```

show interfaces brief (SDH Mode, PPP)

```
user@host> show interfaces so-0/0/0 brief
```

```

Physical interface: so-0/0/0, Enabled, Physical link is Up
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 25 (00:00:01 ago), Output: 24 (00:00:04 ago)
  SDH alarms    : None
  SDH defects   : None

Logical interface so-0/0/0.0
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  inet 10.0.12.1/30
  iso
  mpls

```

show interfaces detail (SDH Mode, PPP)

```
user@host> show interfaces so-0/0/0 detail
```

```

Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 66, Generation: 35
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 33 (last seen 00:00:05 ago)
    Output: 32 (last sent 00:00:06 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  CoS queues   : 4 supported, 4 maximum usable queues
  Last flapped : 2006-03-24 13:20:56 PST (00:05:38 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :                862                0 bps
    Output bytes:            3592            64 bps

```

```

Input packets:          70          0 pps
Output packets:        330          0 pps
Egress queues: 4 supported, 4 in use
Queue counters:         Queued packets  Transmitted packets    Dropped packets

  0 best-effort          0              0              0
  1 expedited-fo         0              0              0
  2 assured-forw         0              0              0
  3 network-cont        329            329             0

SDH  alarms   : None
SDH  defects  : None

Logical interface so-0/0/0.0 (Index 66) (SNMP ifIndex 43) (Generation 19)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 48, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.12.0/30, Local: 10.0.12.1, Broadcast: 10.0.12.3,
    Generation: 48
  Protocol iso, MTU: 4470, Generation: 49, Route table: 0
  Flags: Protocol-Down
  Protocol mpls, MTU: 4458, Maximum labels: 3, Generation: 50, Route table: 0
  Flags: Protocol-Down, Is-Primary

```

show interfaces extensive (SDH Mode, PPP)

```
user@host> show interfaces so-0/0/0 extensive
```

```

Physical interface: so-0/0/0, Enabled, Physical link is Up
Interface index: 149, SNMP ifIndex: 66, Generation: 35
Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 36 (last seen 00:00:01 ago)
  Output: 35 (last sent 00:00:10 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
CoS queues   : 4 supported, 4 maximum usable queues
Last flapped : 2006-03-24 13:20:56 PST (00:06:08 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :          922          0 bps
Output bytes :        3850         64 bps
Input packets:          75          0 pps
Output packets:        356          0 pps
Label-switched interface (LSI) traffic statistics:
Input bytes :           0          0 bps
Input packets:          0          0 pps
Input errors:

```

```

Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Bucket drops: 0, Policed discards: 218, L3 incompletes: 0,
L2 channel errors: 0, L2 mismatch timeouts: 2, HS link CRC errors: 0,
HS link FIFO overflows: 0
Output errors:
Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0,
HS link FIFO underflows: 0, MTU errors: 0
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort          0                0                0

1 expedited-fo         0                0                0

2 assured-forw         0                0                0

3 network-cont         354              354              0

SDH  alarms   : None
SDH  defects  : None
SDH  PHY:
Seconds      Count  State
PLL Lock     0       0  OK
PHY Light    2       1  OK
SDH regenerator section:
RS-BIP8      0       0
OOF          3       8  OK
LOS          3       2  OK
LOF          3       2  OK
RS-ES        3
RS-SES       3
RS-SEFS      3
SDH multiplex section:
MS-BIP24     0       0
MS-FEBE      0       0
MS-FERF      3       2  OK
MS-AIS       2       1  OK
BERR-SF      0       0  OK
BERR-SD      0       0  OK
MS-ES        3
MS-SES       3
MS-UAS       0
MS-SES-FE    3
MS-UAS-FE    0
SDH path:
HP-BIP8      0       0
HP-FEBE      0       0
HP-LOP       1       1  OK
HP-AIS       2       1  OK
HP-FERF      3       2  OK
HP-UNEQ      0       0  OK
HP-PLM       1       1  OK
HP-ES        3
HP-SES       3
HP-UAS       0
HP-ES-FE     3
HP-SES-FE    3
HP-UAS-FE    0
Received SDH overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00

```

```

Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SDH overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace: R2 so-0/0/0
52 32 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00 R2 so-0/0/0.....
Transmitted path trace: R1 so-0/0/0
52 31 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00 R1 so-0/0/0.....
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue  Bandwidth      Buffer Priority  Limit
                        %             bps    %   usec
0 best-effort         95  147744000  95    0      low  none
3 network-control     5   7776000   5     0      low  none

Logical interface so-0/0/0.0 (Index 66) (SNMP ifIndex 43) (Generation 19)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
PPP parameters:
  PPP loopback clear timer: 3 sec
Protocol inet, MTU: 4470, Generation: 48, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.12.0/30, Local: 10.0.12.1, Broadcast: 10.0.12.3,
    Generation: 48
Protocol iso, MTU: 4470, Generation: 49, Route table: 0
  Flags: Protocol-Down
Protocol mpls, MTU: 4458, Maximum labels: 3, Generation: 50, Route table: 0
  Flags: Protocol-Down, Is-Primary
MS-ES-FE                      3

```

show interfaces brief (SONET Mode, Frame Relay)

```
user@host> show interfaces so-0/0/0 brief
```

```

Physical interface: so-0/0/0, Enabled, Physical link is Up
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 29 (00:00:02 ago), Output: 28 (00:00:01 ago)
SONET alarms   : None
SONET defects  : None

Logical interface so-0/0/0.0
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
inet 10.0.12.1      --> 10.0.12.2
iso
mpls
DLCI 16
  Flags: Down, DCE-Unconfigured
  Total down time: 00:04:12 sec, Last down: 00:04:12 ago

```

show interfaces (SONET Mode, Frame Relay)

```
user@host> show interfaces so-0/0/0
```

```
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 66
  Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags      : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags       : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 23 (00:00:05 ago), Output: 22 (00:00:03 ago)
  DTE statistics:
    Enquiries sent                : 19
    Full enquiries sent           : 3
    Enquiry responses received    : 20
    Full enquiry responses received : 3
  DCE statistics:
    Enquiries received            : 0
    Full enquiries received       : 0
    Enquiry responses sent        : 0
    Full enquiry responses sent   : 0
  Common statistics:
    Unknown messages received     : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout  : 1
  CoS queues      : 4 supported, 4 maximum usable queues
  Last flapped    : 2006-03-06 11:53:20 PST (3d 03:09 ago)
  Input rate      : 0 bps (0 pps)
  Output rate     : 56 bps (0 pps)
  SONET alarms    : None
  SONET defects   : None
```

```
Logical interface so-0/0/0.0 (Index 79) (SNMP ifIndex 43)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 10.0.12.2, Local: 10.0.12.1
  Protocol iso, MTU: 4470
    Flags: None
  Protocol mpls, MTU: 4450, Maximum labels: 3
  DLCI 16
    Flags: Down, DCE-Unconfigured
    Total down time: 00:03:11 sec, Last down: 00:03:11 ago
    Input packets : 0
    Output packets: 0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1
```

show interfaces detail (SONET Mode, Frame Relay)

```
user@host> show interfaces so-0/0/0 detail
```

```
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 66, Generation: 11
```



```

Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives DTE
Hold-times     : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
  Input : 33 (last seen 00:00:09 ago)
  Output: 32 (last sent 00:00:01 ago)
DTE statistics:
  Enquiries sent           : 27
  Full enquiries sent      : 5
  Enquiry responses received : 28
  Full enquiry responses received : 5
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 1
CoS queues : 4 supported, 4 maximum usable queues
Last flapped : 2006-03-06 11:53:20 PST (3d 03:10 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 495368 0 bps
  Output bytes : 2765014 56 bps
  Input packets: 41165 0 pps
  Output packets: 133530 0 pps
Egress queues: 4 supported, 4 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

  0 best-effort      18              18              0
  1 expedited-fo      0              0              0
  2 assured-forw      0              0              0
  3 network-cont     133506         133506         0

SONET alarms : None
SONET defects : None
Logical interface so-0/0/0.0 (Index 79) (SNMP ifIndex 43) (Generation 28)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Local statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Transit statistics:
    Input bytes : 0 0 bps

```

```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 49, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 10.0.12.2, Local: 10.0.12.1, Broadcast: Unspecified,
Generation: 61
Protocol iso, MTU: 4470, Generation: 50, Route table: 0
Flags: None
Protocol mpls, MTU: 4450, Maximum labels: 3, Generation: 51, Route table: 0
DLCI 16
Flags: Down, DCE-Unconfigured
Total down time: 00:04:54 sec, Last down: 00:04:54 ago
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
DLCI statistics:
Active DLCI :0 Inactive DLCI :1

```

show interfaces extensive (SONET Mode, Frame Relay)

user@host> show interfaces so-0/0/0 extensive

```

Physical interface: so-0/0/0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 66, Generation: 11
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags : Keepalives DTE
Hold-times : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
Input : 39 (last seen 00:00:02 ago)
Output: 36 (last sent 00:00:07 ago)
DTE statistics:
Enquiries sent : 30
Full enquiries sent : 6
Enquiry responses received : 33
Full enquiry responses received : 6
DCE statistics:
Enquiries received : 0
Full enquiries received : 0
Enquiry responses sent : 0
Full enquiry responses sent : 0
Common statistics:
Unknown messages received : 0
Asynchronous updates received : 0
Out-of-sequence packets received : 0
Keepalive responses timeout : 1
CoS queues : 4 supported, 4 maximum usable queues
Last flapped : 2006-03-06 11:53:20 PST (3d 03:11 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 495452 56 bps
Output bytes : 2765074 0 bps
Input packets: 41171 0 pps

```

```

Output packets:          133534          0 pps
Label-switched interface (LSI) traffic statistics:
Input  bytes  :          0          0 bps
Input  packets:          0          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Bucket drops: 0, Policed discards: 0, L3 incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
  HS link FIFO overflows: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0,
  HS link FIFO underflows: 0, MTU errors: 0
Egress queues: 4 supported, 4 in use
Queue counters:          Queued packets  Transmitted packets  Dropped packets

  0 best-effort          18          18          0

  1 expedited-fo          0          0          0

  2 assured-forw          0          0          0

  3 network-cont      133510      133510          0

SONET alarms   : None
SONET defects  : None
SONET PHY:
  Seconds      Count  State
  PLL Lock      0      0 OK
  PHY Light     60      1 OK
SONET section:
  BIP-B1         0         0
  SEF           108       158 OK
  LOS           108         2 OK
  LOF           108         2 OK
  ES-S          108
  SES-S          108
  SEFS-S        108
SONET line:
  BIP-B2         0         0
  REI-L          0         0
  RDI-L          1         1 OK
  AIS-L         107         1 OK
  BERR-SF        0         0 OK
  BERR-SD        44         2 OK
  ES-L          108
  SES-L          108
  UAS-L          97
  ES-LFE        1
  SES-LFE       1
  UAS-LFE       0
SONET path:
  BIP-B3         0         0
  REI-P          0         0
  LOP-P          1         1 OK
  AIS-P         107         1 OK
  RDI-P          1         1 OK
  UNEQ-P         0         0 OK
  PLM-P          1         1 OK
  ES-P          108
  SES-P          108
  UAS-P          97

```

```

ES-PFE                                1
SES-PFE                              1
UAS-PFE                              0
Received SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace: R2 so-0/0/0
52 32 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00  R2 so-0/0/0.....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: R1 so-0/0/0
52 31 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00  R1 so-0/0/0.....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer  Priority  Limit
                           %      bps      %      usec
0 best-effort             95      147744000  95      0      low     none
3 network-control         5       7776000   5      0      low     none

Logical interface so-0/0/0.0 (Index 79) (SNMP ifIndex 43) (Generation 28)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0      0 bps
  Output bytes : 0      0 bps
  Input packets: 0      0 pps
  Output packets: 0      0 pps
Protocol inet, MTU: 4470, Generation: 49, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.0.12.2, Local: 10.0.12.1, Broadcast: Unspecified,
    Generation: 61
Protocol iso, MTU: 4470, Generation: 50, Route table: 0
  Flags: None
Protocol mpls, MTU: 4450, Maximum labels: 3, Generation: 51, Route table: 0
  DLCI 16
  Flags: Down, DCE-Unconfigured

```

```

Total down time: 00:05:42 sec, Last down: 00:05:42 ago
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
DLCI statistics:
  Active DLCI :0 Inactive DLCI :1

```

show interfaces extensive (OC768-over-4xOC192 Mode)

```
user@host> show interfaces so-7/0/0 extensive
```

```

Physical interface: so-7/0/0, Enabled, Physical link is Up
  Interface index: 163, SNMP ifIndex: 23, Generation: 186
  Link-level type: Cisco-HDLC, MTU: 4474, Clocking: Internal, SONET mode, Speed:
  OC768,
  Loopback: Local, FCS: 16, Payload scrambler: Enabled
  Device flags : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags : No-Keepalives
  Hold-times : Up 0 ms, Down 0 ms
  CoS queues : 8 supported, 8 maximum usable queues
  Last flapped : 2006-01-13 10:43:39 PST (01:05:33 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 76992 200 bps
    Output bytes : 83707 216 bps
    Input packets: 1343 0 pps
    Output packets: 1343 0 pps
  Input errors:
    Errors: 0, Drops: 3885, Framing errors: 68154624, Runts: 0, Giants: 0, Bucket
    drops: 0,
    Policed discards: 0, L3 incompletes: 95040248, L2 channel errors: 0, L2
    mismatch timeouts: 0,
    HS link CRC errors: 0, HS link FIFO overflows: 30742070
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO
    underflows: 0,
    MTU errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	2	2	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	1341	1341	0

```

  SONET alarms : None
  SONET defects : None
  Link : 0
  SONET alarms : None
  SONET defects : None
  SONET PHY:
    Seconds Count State
    PLL Lock 0 0 OK
    PHY Light 0 0 OK
  SONET section:

```

```

BIP-B1          0          0
SEF             2          1 OK
LOS             0          0 OK
LOF             3          2 OK
ES-S            2
SES-S           2
SEFS-S          2
SONET line:
BIP-B2          0          0
REI-L           0          0
RDI-L           1          1 OK
AIS-L           2          1 OK
BERR-SF         0          0 OK
BERR-SD         0          0 OK
ES-L            3
SES-L           3
UAS-L           0
ES-LFE          1
SES-LFE          1
UAS-LFE         0
SONET path:
BIP-B3          0          0
REI-P           0          0
LOP-P           0          0 OK
AIS-P           2          1 OK
RDI-P           0          0 OK
UNEQ-P          0          0 OK
PLM-P           0          0 OK
ES-P            3
SES-P           3
UAS-P           0
ES-PFE          0
SES-PFE         0
UAS-PFE         0
Payload pointer:
Current pointer      : 522
Pointer increment count : 0
Pointer decrement count : 0
New pointer NDF count : 0
Received SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace: fold so-7/0/0
66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00  fold so-7/0/0...
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: fold so-7/0/0
66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00  fold so-7/0/0...
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Link : 1
SONET alarms      : None
SONET defects     : None

```

```

SONET PHY:                Seconds      Count  State
  PLL Lock                  0           0  OK
  PHY Light                  0           0  OK
SONET section:
  BIP-B1                     0           0
  SEF                        2           1  OK
  LOS                        0           0  OK
  LOF                        3           2  OK
  ES-S                       2
  SES-S                      2
  SEFS-S                     2
SONET line:
  BIP-B2                     0           0
  REI-L                     0           0
  RDI-L                     0           0  OK
  AIS-L                      2           1  OK
  BERR-SF                   0           0  OK
  BERR-SD                   0           0  OK
  ES-L                      3
  SES-L                     3
  UAS-L                     0
  ES-LFE                    0
  SES-LFE                   0
  UAS-LFE                   0
SONET path:
  BIP-B3                     0           0
  REI-P                     0           0
  LOP-P                     0           0  OK
  AIS-P                      2           1  OK
  RDI-P                     0           0  OK
  UNEQ-P                   0           0  OK
  PLM-P                     0           0  OK
  ES-P                      3
  SES-P                     3
  UAS-P                     0
  ES-PFE                    0
  SES-PFE                   0
  UAS-PFE                   0
Payload pointer:
  Current pointer             : 522
  Pointer increment count    : 0
  Pointer decrement count    : 0
  New pointer NDF count      : 0
Received SONEt overhead:
  F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
  S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
  Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONEt overhead:
  F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
  S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00
Received path trace: fold so-7/0/0
  66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00  fold so-7/0/0...
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: fold so-7/0/0
  66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00  fold so-7/0/0...
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....

```

```

00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
...

```

show interfaces detail (IPv6 Tracking)

user@host> show interfaces so-0/2/0 detail

```

Physical interface: so-0/2/0, Enabled, Physical link is Up
  Interface index: 130, SNMP ifIndex: 26, Generation: 131
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 7 (last seen 00:00:01 ago)
    Output: 6 (last sent 00:00:08 ago)
  LCP state: Opened
  NCP state: inet: Not-configured, inet6: Opened, iso: Not- configured, mp1s:
Not-configured
  CHAP state: Closed
  PAP state: Closed
  CoS queues   : 4 supported, 4 maximum usable queues
  Last flapped : 2007-11-29 08:45:47 PST (1d 03:44 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          7407782          40 bps
    Output bytes  :          7307322          48 bps
    Input packets :          107570           0 pps
    Output packets:          108893           0 pps
  IPv6 transit statistics:
    Input bytes   :          57328
    Output bytes  :          57400
    Input packets :          1024
    Output packets:          1025
  Egress queues: 4 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets
    0 best-effort   1191                1191              0
    1 expedited-fo  0                    0                  0
    2 assured-forw  0                    0                  0
    3 network-cont  107700              107700             0
  SONET alarms   : None
  SONET defects  : None

Logical interface so-0/2/0.0 (Index 70) (SNMP ifIndex 47) (Generation 231)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  Protocol inet6, MTU: 4470, Generation: 433, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 2001:db8::2:1/32, Local: 2001:db8::2:2,
    Broadcast: Unspecified, Generation: 683
  Addresses, Flags: Is-Preferred
    Destination: 2001:db8::1:2, Local: 2001:db8::1:3,
    Broadcast: Unspecified, Generation: 684

```


show interfaces (Shared Interface)

```
user@rsd1> show interfaces so-7/2/0
```

```
Physical interface: so-7/2/0, Enabled, Physical link is Down
Interface index: 128, SNMP ifIndex: 109
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC192, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x4000
Shared-interface : Owner
Link flags     : No-Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 0 (never), Output: 0 (never)
DTE statistics:
  Enquiries sent                : 0
  Full enquiries sent           : 0
  Enquiry responses received    : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received            : 0
  Full enquiries received       : 0
  Enquiry responses sent        : 0
  Full enquiry responses sent   : 0
Common statistics:
  Unknown messages received     : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timeout   : 0
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped   : 2008-08-11 10:51:51 PDT (1w1d 04:47 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
SONET alarms   : LOL, PLL
SONET defects  : LOL, PLL, LOF, SEF, AIS-L, AIS-P

Logical interface so-7/2/0.0 (Index 67) (SNMP ifIndex 117)
Flags: Device-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: FR-NLPID
Shared interface:
  Shared with: psd5
  Tunnel token: Rx: 2.517, Tx: 1.517
  Input packets : 0
  Output packets: 0
  DLCI 700
  Flags: Active
  Total down time: 00:01:09 sec, Last down: 284:58:21 ago
  Input packets : 0
  Output packets: 0
DLCI statistics:
  Active DLCI  :1 Inactive DLCI :0
```

show interfaces (Serial)

Syntax	<pre>show interfaces <i>interface-type</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about serial interfaces, including RS-232, RS-422/449, EIA-530, X.21, and V.35.
Options	<p><i>interface-type</i>—On M Series and T Series routers, the interface type is <i>se-fpc/pic/port</i>.</p> <p><i>brief detail extensive terse</i>—(Optional) Display the specified level of output.</p> <p><i>descriptions</i>—(Optional) Display interface description strings.</p> <p><i>media</i>—(Optional) Display media-specific information about network interfaces.</p> <p><i>snmp-index snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><i>statistics</i>—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (Serial, EIA-530) on page 1564</p> <p>show interfaces brief (Serial, EIA-530) on page 1564</p> <p>show interfaces detail (Serial, EIA-530) on page 1565</p> <p>show interfaces extensive (Serial, EIA-530) on page 1565</p> <p>show interfaces (Serial, V.35) on page 1567</p> <p>show interfaces brief (Serial, V.35) on page 1567</p> <p>show interfaces detail (Serial, V.35) on page 1567</p> <p>show interfaces extensive (Serial, V.35) on page 1568</p> <p>show interfaces statistics detail (RS 449) on page 1569</p>
Output Fields	Table 74 on page 1558 lists the output fields for the show interfaces (Serial) command. Output fields are listed in the approximate order in which they appear.

Table 74: show interfaces (Serial) Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels

Table 74: *show interfaces (Serial) Output Fields (continued)*

Field Name	Field Description	Level of Output
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	Maximum transmission unit (MTU) size on the physical interface.	All levels
Maximum speed	Maximum speed. The nonconfigurable value is 16,384 kbps.	detail extensive none
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalive packets. <ul style="list-style-type: none"> Interval <i>seconds</i>—Time between successive keepalive requests. The range of values, in seconds, is 10 to 32,767. The default value is 10. Up-count <i>number</i>—Number of keepalive packets a destination must receive to change a link's status from down to up. The range of values is 1 to 255. The default value is 1. Down-count <i>number</i>—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 to 255. The default value is 3. 	All levels
Keepalive	(PPP and HDLC) Information about keepalive packets. <ul style="list-style-type: none"> Input: <i>number (hh:mm:ss ago)</i>—Number of keepalive packets received by PPP and the time since the last keepalive packet was received. Output: <i>number (hh:mm:ss ago)</i>—Number of keepalive packets sent by PPP and the time since the last keepalive packet was sent. 	brief none

Table 74: show interfaces (Serial) Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics	(PPP and HDLC) Information about keepalive packets. <ul style="list-style-type: none"> • Input: <i>number</i> (last seen <i>hh:mm:ss</i> ago)—Number of keepalive packets received by PPP and the time since the last keepalive packet was received. • Output: <i>number</i> (last seen <i>hh:mm:ss</i> ago)—Number of keepalive packets sent by PPP and the time since the last keepalive packet was sent. 	detail extensive
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not-configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	detail extensive none
CoS queues	Number of CoS queues configured.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: <i>year-month-day hour:minute:second timezone</i> (<i>hour:minute:second</i> ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified

Table 74: show interfaces (Serial) Output Fields (continued)

Field Name	Field Description	Level of Output
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of transmit drops. 	extensive
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeds the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues supported	Total number of egress queues supported on the specified interface. Displayed with the statistics option.	detail extensive
Egress queues in use	Total number of egress queues in use on the specified interface. Displayed with the statistics option.	detail extensive

Table 74: *show interfaces (Serial) Output Fields (continued)*

Field Name	Field Description	Level of Output
Queue counters	CoS queue number and its associated user-configured forwarding class name. Displayed with the statistics option. <ul style="list-style-type: none"> Queued packets—Number of queued packets. Transmitted packets—Number of transmitted packets. Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Serial media information	Information about the physical media: <ul style="list-style-type: none"> Line protocol—eia530, eia530a, rs232, rs449, v.35, or x.21. Resync history—Information about resynchronization events: <ul style="list-style-type: none"> Sync loss count—Number of times the synchronization was lost. Data signal—(X.21 and V.35) Information about the data signal: <ul style="list-style-type: none"> Rx Clock—Receive clock status: OK (DTE is receiving the receive clock signal) or Not detected (receive clock signal is not being received). Control signals—Information about modem control signals: <ul style="list-style-type: none"> Local mode: DCE (data communication equipment) or DTE (data terminal equipment) To DCE—Control signals that the Serial PIC sent to the DCE: DTR (Data Terminal Ready: up or down) or RTS (Request To Send: up or down.) From DC—Control signals that the Serial PIC received from the DCE: CTS (Clear To Send: up or down), DCD (Data Carrier Detect: up or down), DSR (Data Set Ready: up or down), or TM (Test Mode: up or down). Clocking mode—Clocking used for the transmit clock: <ul style="list-style-type: none"> dte—Transmit clock is generated by DTE. dce—Transmit clock is generated by the DCE and is looped back as the transmit clock. loop-timed—Receive clock from the DCE is looped back as the transmit clock. Clock rate—Rate, in megahertz (MHz), at which the clock is configured. Loopback—Configured loopback mode for the interface: dce-remote, dce-local, liu, local, or none. Tx clock—Clocking phase of the transmit clock: invert (transmit clock polarity is inverted) or non-invert (transmit clock polarity is not inverted). Line encoding—Type of line encoding used: nrz (nonreturn to zero) or nrzi (return to zero inverted). 	detail extensive
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> Destination slot—FPC slot number. PLP byte—Packet Level Protocol byte. 	extensive

Table 74: *show interfaces (Serial) Output Fields (continued)*

Field Name	Field Description	Level of Output
CoS information	Information about the CoS queue for the physical interface: <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the source and destination address are also displayed.	brief
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mpls .	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive

Table 74: show interfaces (Serial) Output Fields (continued)

Field Name	Field Description	Level of Output
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces (Serial, EIA-530)

```

user@host> show interfaces se-5/0/1

Physical interface: se-5/0/1, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 41
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags   : Present Running
  Interface flags: Point-To-Point Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 32 (00:00:10 ago), Output: 31 (00:00:07 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  CoS queues   : 8 supported, 8 maximum usable queues
  Last flapped : 2006-04-26 15:10:18 PDT (00:05:22 ago)
  Input rate   : 0 bps (0 pps)
  Output rate  : 0 bps (0 pps)

Logical interface se-5/0/1.0 (Index 71) (SNMP ifIndex 45)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 12.0.0.0/30, Local: 12.0.0.1, Broadcast: 12.0.0.3

```

show interfaces brief (Serial, EIA-530)

```

user@host> show interfaces se-5/0/1 brief

Physical interface: se-5/0/1, Enabled, Physical link is Up
  Type: Serial, Link-level type: PPP, MTU: 1504
  Device flags   : Present Running
  Interface flags: Point-To-Point Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 235 (00:00:10 ago), Output: 234 (00:00:00 ago)

```



```

Logical interface se-5/0/1.0
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
inet 12.0.0.1/30

```

show interfaces detail (Serial, EIA-530)

```
user@host> show interfaces se-5/0/1 detail
```

```

Physical interface: se-5/0/1, Enabled, Physical link is Up
Interface index: 144, SNMP ifIndex: 41, Generation: 25
Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
Device flags   : Present Running
Interface flags: Point-To-Point Internal: 0x4000
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 37 (last seen 00:00:06 ago)
  Output: 35 (last sent 00:00:01 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
CoS queues   : 8 supported, 8 maximum usable queues
Last flapped : 2006-04-26 15:10:18 PDT (00:06:02 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          928          40 bps
  Output bytes  :         1023          48 bps
  Input packets :          76           0 pps
  Output packets:          77           0 pps
Serial media information:
  Line protocol: eia530
  Resync history:
    Sync loss count: 0
  Data signal:
    Rx Clock: OK
  Control signals:
    Local mode: DTE
    To DCE: DTR: up, RTS: up
    From DCE: CTS: up, DCD: up, DSR: up
  Clocking mode: loop-timed
  Clock rate: 8.0 MHz
  Loopback: none
  Tx clock: non-invert
  Line encoding: nrz

Logical interface se-5/0/1.0 (Index 71) (SNMP ifIndex 45) (Generation 9)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 15, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 12.0.0.0/30, Local: 12.0.0.1, Broadcast: 12.0.0.3,
  Generation: 23

```

show interfaces extensive (Serial, EIA-530)

```
user@host> show interfaces se-5/0/1 extensive
```

```

Physical interface: se-5/0/1, Enabled, Physical link is Up
Interface index: 144, SNMP ifIndex: 41, Generation: 25
Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
Device flags   : Present Running
Interface flags: Point-To-Point Internal: 0x4000
Link flags     : Keepalives
Hold-times    : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 40 (last seen 00:00:00 ago)
  Output: 37 (last sent 00:00:09 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
CoS queues   : 8 supported, 8 maximum usable queues
Last flapped : 2006-04-26 15:10:18 PDT (00:06:28 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          988          40 bps
  Output bytes :        1088          48 bps
  Input packets:          81          0 pps
  Output packets:         82          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 2, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0
Serial media information:
  Line protocol: eia530
  Resync history:
    Sync loss count: 0
  Data signal:
    Rx Clock: OK
  Control signals:
    Local mode: DTE
    To DCE: DTR: up, RTS: up
    From DCE: CTS: up, DCD: up, DSR: up
  Clocking mode: loop-timed
  Clock rate: 8.0 MHz
  Loopback: none
  Tx clock: non-invert
  Line encoding: nrz
Packet Forwarding Engine configuration:
  Destination slot: 5, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer  Priority  Limit
                           %      bps      %      usec
0 best-effort             95      15564800  95        0      low     none
3 network-control         5       819200   5         0      low     none

Logical interface se-5/0/1.0 (Index 71) (SNMP ifIndex 45) (Generation 9)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 15, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 12.0.0.0/30, Local: 12.0.0.1, Broadcast: 12.0.0.3,
  Generation: 23

```

show interfaces (Serial, V.35)

```
user@host> show interfaces se-5/0/0
```

```
Physical interface: se-5/0/0, Enabled, Physical link is Down
  Interface index: 150, SNMP ifIndex: 39
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
  Link flags     : Loose-NCP
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues      : 8 supported, 8 maximum usable queues
  Last flapped    : 2006-04-26 14:51:27 PDT (01:02:23 ago)
  Input rate      : 0 bps (0 pps)
  Output rate     : 0 bps (0 pps)

Logical interface se-5/0/0.0 (Index 73) (SNMP ifIndex 27)
  Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
  Encapsulation: PPP
  Protocol inet, MTU: 1500
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 13.0.0.0/30, Local: 13.0.0.2, Broadcast: 13.0.0.3
```

show interfaces brief (Serial, V.35)

```
user@host> show interfaces se-5/0/0 brief
```

```
Physical interface: se-5/0/0, Enabled, Physical link is Down
  Type: Serial, Link-level type: PPP, MTU: 1504
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
  Link flags     : Loose-NCP
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)

Logical interface se-5/0/0.0
  Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
  Encapsulation: PPP
  inet 13.0.0.2/30
```

show interfaces detail (Serial, V.35)

```
user@host> show interfaces se-5/0/0 detail
```

```
Physical interface: se-5/0/0, Enabled, Physical link is Down
  Interface index: 150, SNMP ifIndex: 39, Generation: 31
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
  Link flags     : Loose-NCP
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
```

```

Output: 0 (last sent: never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2006-04-26 14:51:27 PDT (01:03:15 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes      : 0                      0 bps
Output bytes     : 0                      0 bps
Input packets    : 0                      0 pps
Output packets   : 0                      0 pps
Serial media information:
Line protocol: v.35
Resync history:
  Sync loss count: 0
Data signal:
  Rx Clock: Not Detected
Control signals:
  Local mode: DCE
  To DTE: CTS: down, DCD: down, DSR: up
  From DTE: DTR: down, RTS: down
DCE loopback override: Off
Clocking mode: internal
Clock rate: 38.4 KHz
Loopback: none
Tx clock: non-invert
Line encoding: nrz

Logical interface se-5/0/0.0 (Index 73) (SNMP ifIndex 27) (Generation 12)
Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 17, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 13.0.0.0/30, Local: 13.0.0.2, Broadcast: 13.0.0.3,
  Generation: 23

```

show interfaces extensive (Serial, V.35)

```
user@host> show interfaces se-5/0/0 extensive
```

```

Physical interface: se-5/0/0, Enabled, Physical link is Down
Interface index: 150, SNMP ifIndex: 39, Generation: 31
Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
Device flags      : Present Running Down
Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
Link flags        : Loose-NCP
Hold-times        : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 0 (last seen: never)
  Output: 0 (last sent: never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2006-04-26 14:51:27 PDT (01:04:17 ago)

```

```

Statistics last cleared: Never
Traffic statistics:
  Input bytes :                0                0 bps
  Output bytes :                0                0 bps
  Input packets:                0                0 pps
  Output packets:                0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0
Serial media information:
  Line protocol: v.35
  Resync history:
    Sync loss count: 0
  Data signal:
    Rx Clock: Not Detected
  Control signals:
    Local mode: DCE
    To DTE: CTS: down, DCD: down, DSR: up
    From DTE: DTR: down, RTS: down
  DCE loopback override: Off
  Clocking mode: internal
  Clock rate: 38.4 KHz
  Loopback: none
  Tx clock: non-invert
  Line encoding: nrz
Packet Forwarding Engine configuration:
  Destination slot: 5, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority  Limit
                           bps          %      usec
  0 best-effort           95          15564800  95        0        low    none
  3 network-control       5           819200   5         0        low    none

Logical interface se-5/0/0.0 (Index 73) (SNMP ifIndex 27) (Generation 12)
Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 17, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 13.0.0.0/30, Local: 13.0.0.2, Broadcast: 13.0.0.3,
  Generation: 23

```

show interfaces statistics detail (RS 449)

```
user@host> show interfaces se-6/0/0 statistics detail
```

```

Interface index: 149, SNMP ifIndex: 59, Generation: 150
Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 8mbps
Device flags : Present Running
Interface flags: Point-To-Point Internal: 0x4000
Link flags : No-Keepalives Loose-NCP
Hold-times : Up 0 ms, Down 0 ms
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
PAP state: Closed

```

```

CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2007-11-28 19:38:36 PST (00:14:06 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes  :          744          0 bps
Output bytes :          5978        0 bps
Input packets:           33        0 pps
Output packets:         129        0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
Resource errors: 0
Output errors:
Carrier transitions: 13, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort          24              24              0
1 expedited-fo         0              0              0
2 bulk                 0              0              0
3 assured-forw        105             105             0
4 voip                 0              0              0

Serial media information:
Line protocol: rs449
Resync history:
Sync loss count: 0
Data signal:
Rx Clock: OK
Control signals:
Local mode: DTE
To DCE: DTR: up, RTS: up
From DCE: CTS: up, DCD: up, DSR: up
Clocking mode: internal
Loopback: none
Tx clock: non-invert
Line encoding: nrz

Logical interface se-6/0/0.0 (Index 75) (SNMP ifIndex 69) (Generation 141)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 256, Generation: 145, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 11.11.11/24, Local: 11.11.11.2, Broadcast: 11.11.11.255,
Generation: 157

```

show interfaces (T1, E1, or DS)

Syntax	<pre>show interfaces <i>interface-type</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified T1, E1, or DS interface.
Options	<p><i>interface-type</i>—On ACX Series, M Series, MX Series, and T Series routers, the T1 interface type is t1-<i>fpc/pic/port</i>, whereas the E1 interface type is e1-<i>fpc/pic/port</i>, and DS interface type is ds-<i>fpc/pic/port:channel</i>.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Understanding Interfaces on ACX Series Universal Metro Routers on page 11
List of Sample Output	<p>show interfaces (T1, IMA Link) on page 1583</p> <p>show interfaces (T1, PPP) on page 1584</p> <p>show interfaces detail (T1, PPP) on page 1584</p> <p>show interfaces extensive (T1 CRC Errors) on page 1585</p> <p>show interfaces extensive (T1, PPP) on page 1585</p> <p>show interfaces (E1, Frame Relay) on page 1587</p> <p>show interfaces detail (E1, Frame Relay) on page 1588</p> <p>show interfaces extensive (E1, Frame Relay) on page 1589</p> <p>show interfaces (E1, IMA Link) on page 1591</p> <p>show interfaces extensive (T1, TDM-CCC-SATOP) on page 1592</p> <p>show interfaces extensive (DS, TDM-CCC-CESoPSN) on page 1594</p>
Output Fields	<p>Table 75 on page 1572 lists the output fields for the show interfaces (T1 or E1) command. Output fields are listed in the approximate order in which they appear.</p>

Table 75: T1 or E1 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source: Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Framing	Physical layer framing format used for the E1 interface on the link: G704 , G704-NO-CRC4 , or Unframed . The default is G704 . Physical layer framing format used for the T1 interface on the link: SF and ESF . The default is ESF .	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
IMA Link alarms	Current active IMA link alarms, including the following: <ul style="list-style-type: none"> • LIF • LODS • RFI-IMA • Tx-Mis-Connected • Tx-Unusable-FE • Rx-Unusable-FE • Link Fault 	detail extensive none
IMA Link defects	Current active IMA link defects, including the following: <ul style="list-style-type: none"> • LIF • LODS • RFI-IMA • Tx-Mis-Connected • Tx-Unusable-FE • Rx-Unusable-FE • Link Fault 	detail extensive none
IMA Link state	Current active IMA link status, including the following: <ul style="list-style-type: none"> • Line: synchronized or not synchronized • Near end:—Status of near-end receive and transmit links <ul style="list-style-type: none"> • Rx: Usable or Unusable • Tx: Usable or Unusable • Far end:—Status of far-end receive and transmit links <ul style="list-style-type: none"> • Rx: Usable or Unusable • Tx: Usable or Unusable 	detail extensive none

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
IMA link media	<p>IMA Link Media Status, which provides the seconds and count state for the following link media parameters:</p> <ul style="list-style-type: none"> • LIF • LODS • Err-ICP • IV • Rx-FC • Tx-FC • FE-Defects • FE-Rx-FC • FE-Tx-FC • Rx-ICP • Rx-Stuff • Tx-ICP • Tx-Stuff • Rx-SES • Rx-UAS • Rx-UUS • Tx-UUS • FE-Rx-SES • FE-Rx-UAS • FE-Rx-UUS • FE-Tx-UUS 	detail extensive none
Keepalive settings	<p>(PPP and HDLC) Configured settings for keepalives.</p> <ul style="list-style-type: none"> • interval seconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. • down-count number—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. • up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets. (When no level of output is specified, the word statistics is not part of the field name and the last seen text is not displayed.)</p> <ul style="list-style-type: none"> • Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. • Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI) which can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is (ANSI or ITU) LMI settings: value, value... xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> • n391dte—DTE full status polling interval (1–255) • n392dce—DCE error threshold (1–10) • n392dte—DTE error threshold (1–10) • n393dce—DCE monitored event count (1–10) • n393dte—DTE monitored event count (1–10) • t391dte—DTE polling timer (5–30 seconds) • t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) Local Management Interface (LMI) packet statistics:</p> <ul style="list-style-type: none"> • Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago). • Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last sent hh:mm:ss ago). 	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communications equipment (DCE):</p> <ul style="list-style-type: none"> • Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. • Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. • Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. • Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> • Enquiries received—Number of enquiries received by the DCE from the DTE. • Full enquiries received—Number of full enquiries received by the DCE from the DTE. • Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. • Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no Local Management Interface (LMI) packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay. Displayed only from the DTE.) Number of DLCIs configured from the DCE.	detail extensive none
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) State of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response is not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Down—CHAP authentication is incomplete (not yet completed or has failed). • Not-configured—CHAP is not configured on the interface. • Opened—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CoS Queues	Number of CoS queues configured.	detail extensive none
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC or PIM. If the value of this field increments, the PIC or PIM is malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
DS1 alarms DS1 defects	<p>E1 media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. The following lists all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Belcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> • AIS—Alarm indication signal. • LOF—Loss of frame. • LOS—Loss of signal. • YLW—Yellow alarm. Indicates errors at the remote site receiver. 	detail extensive none

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
T1 media or E1 media	<p>Counts of T1 or E1 media-specific errors.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. The T1 or E1 media-specific error types are: • SEF—Severely errored framing • BEE—Bit error • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • YELLOW—Errors at the remote site receiver • CRC Major—Cyclic redundancy check major alarm threshold exceeded • CRC Minor—Cyclic redundancy check minor alarm threshold exceeded • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—Pulse code violation • CS—Carrier state • CRC—Cyclic redundancy check • FEBE—Far-end block error (E1 only) • LES—Line error seconds • ES—Errored seconds • BES—Bursty errored seconds • SES—Severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
SAToP Configuration	<p>Information about the SAToP configuration.</p> <ul style="list-style-type: none"> • payload-size—Configure the payload size, in bytes (from 32 through 1024 bytes). • idle-pattern—An 8-bit hexadecimal pattern to replace TDM data in a lost packet (from 0 through 255). • jitter-buffer-packets—Number of packets in the jitter buffer (from 1 through 64 packets). • jitter-buffer-latency—Time delay in the jitter buffer (from 1 through 1000 milliseconds). • excessive-packet-loss-rate—Set packet loss options. The options are groups, sample-period, and threshold. • sample-period—Time required to calculate excessive packet loss rate (from 1000 through 65,535 milliseconds). • threshold—Percentile designating the threshold of excessive packet loss rate (1–100 percent). 	extensive

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CESoPSN Configuration	<p>Information about the CESoPSN configuration.</p> <ul style="list-style-type: none"> • packetization-latency—Time required to create packets (from 1000 through 8000 microseconds). • idle-pattern—An 8-bit hexadecimal pattern to replace TDM data in a lost packet (from 0 through 255). • jitter-buffer-packets—Number of packets in the jitter buffer (from 1 through 64 packets). • jitter-buffer-latency—Time delay in the jitter buffer (from 1 through 1000 milliseconds). • excessive-packet-loss-rate—Set packet loss options. The options are sample-period and threshold. • sample-period—Time required to calculate excessive packet loss rate (from 1000 through 65,535 milliseconds). • threshold—Percentile designating the threshold of excessive packet loss rate (1–100 percent). 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Timeslots—Time slots configured on the interface. • Buildout—(T1 only) Buildout setting: 0-132, 133-265, 266-398, 399-531, or 532-655 feet. • Timeslots—Configured time slots for the interface. • Byte encoding—(T1 only) Byte encoding used: Nx64K or Nx56K. • Line encoding—Line encoding used. For T1, the value can be B8ZS or AMI. For E1, the value is HDB3. • Data inversion—HDLC data inversion setting: Enabled or Disabled. • Idle cycle flag—Idle cycle flags. • Start end flag—Start and end flag. 	extensive
DS1 BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	(Frame Relay) Number and rate of bytes and packets received and transmitted on the logical interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	detail extensive

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Transit statistics	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter normally stabilizes in less than 1 second.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mlfr , or mpls .	detail extensive none
Multilink bundle	Interface name for the multilink bundle, if configured.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive none
DLCI	<p>(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags, Total down time, Last down, and Traffic statistics or (Input packets, Output packets). Flags can be one or more of the following:</p> <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • DCE-Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • DCE-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	<p>(Frame Relay) Data-link connection identifier (DLCI) statistics.</p> <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CE Info	<p>Information related to the circuit emulation statistics.</p> <ul style="list-style-type: none"> • CE Tx—Number of transmitted packets and bytes (TDM to PSN flow). • CE Rx—Number of received packets and bytes and forward bytes (PSN to TDM flow). • CE Rx Forwarded—Number of forwarded bytes. • CE Strayed—Number of stray packets. • CE Lost—Number of lost packets. • CE Malformed—Number of malformed packets • CE Misinserted—Number of misinserted packets. • CE AIS dropped—Number of dropped bytes due to buffer overrun (PSN to TDM). • CE Dropped—Number of dropped packets during resynchronization • CE Overrun Events—Number of overrun events. • CE Underrun Events—Number of underrun events. 	extensive

Sample Output

show interfaces (T1, IMA Link)

```

user@host> show interfaces t1-1/0/0

IMA Link alarms   : None
IMA Link defects  : LIF, LODS
IMA Link state:
  Line           : Not synchronized
  Near end       : Rx: Unusable, Tx: Usable
  Far end        : Rx: Unusable, Tx: Usable
IMA link media:   Seconds      Count   State
LIF               0           0      OK
LODS              0           0      OK
Err-ICP           0           0      OK
IV                0           0      OK
Rx-FC             0           0      OK
Tx-FC             0           0      OK
FE-Defects        0           0
FE-Rx-FC          0           0
FE-Tx-FC          0           0
Rx-ICP            0           0
Rx-Stuff          0           0
Tx-ICP            11          0
Tx-Stuff          0           0
Rx-SES            0           0
Rx-UAS            0           0
Rx-UUS            1           0
Tx-UUS            0           0
FE-Rx-SES         0           0
FE-Rx-UAS         0           0
FE-Rx-UUS         0           0
FE-Tx-UUS         0           0

```

show interfaces (T1, PPP)

```

user@host> show interfaces t1-1/1/0

Physical interface: t1-1/1/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 45
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Opened
  NCP state: Opened
  CHAP state: Opened
  CoS queues      : 4 supported, 4 in use
  Last flapped    : 2005-12-05 08:43:06 PST (02:13:35 ago)
  Input rate      : 0 bps (0 pps)
  Output rate     : 72 bps (0 pps)
  DS1 alarms     : None
  DS1 defects    : None

Logical interface t1-1/1/0.0 (Index 66) (SNMP ifIndex 51)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 1500
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
    198.51.100.255

```

show interfaces detail (T1, PPP)

```

user@host> show interfaces t1-1/1/0 detail

Physical interface: t1-1/1/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 45, Generation: 32
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Opened
  NCP state: Opened
  CHAP state: Opened
  CoS queues      : 4 supported, 4 in use
  Last flapped    : 2005-12-05 08:43:06 PST (02:13:52 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 798 0 bps
    Input packets: 0 0 pps
    Output packets: 42 0 pps
  Queue counters:  Queued packets  Transmitted packets  Dropped packets

```

```

0 best-effort          0          0          0
1 expedited-fo         0          0          0
2 assured-forw         0          0          0
3 network-cont         40         40          0

DS1  alarms   : None
DS1  defects  : None
DS1 BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 10e-0, Algorithm: 2^15 - 1
Logical interface t1-1/1/0.0 (Index 66) (SNMP ifIndex 51) (Generation 5)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 14, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
    Generation: 18

```

show interfaces extensive (T1 CRC Errors)

```

user@host> show interfaces t1-3/2/0:1:1 extensive

Physical interface: t1-3/2/0:1:1, Enabled, Physical link is Down
Interface index: 179, SNMP ifIndex: 79, Generation: 180
:
:
DS1  alarms   : AIS, LOF, CRC Major, CRC Minor
DS1  defects  : AIS, LOF, CRC Major, CRC Minor
T1 media:      Seconds      Count  State
SEF              1           1  OK
BEE              1           1  OK
AIS             1128          1 Defect Active
LOF             1128          1 Defect Active
LOS              0           0  OK
YELLOW           0           0  OK
CRC Major        154          1 Defect Active
CRC Minor        154          1 Defect Active
BPV              0           0
EXZ              0           0
LCV              0           0
PCV              0           0
CS               0           0
CRC             154          15400
...

```

show interfaces extensive (T1, PPP)

```

user@host> show interfaces t1-1/1/0 extensive

Physical interface: t1-1/1/0, Enabled, Physical link is Up
Interface index: 149, SNMP ifIndex: 45, Generation: 32
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
Loopback: None, FCS: 16, Framing: ESF
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000

```

```

Link flags      : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 0 (last seen: never)
  Output: 0 (last sent: never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
CoS queues     : 4 supported, 4 in use
Last flapped   : 2005-12-05 08:43:06 PST (02:13:54 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :           0          0 bps
  Output bytes :          817         72 bps
  Input packets:           0          0 pps
  Output packets:         43         0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

  Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort           0              0              0
  1 expedited-fo          0              0              0
  2 assured-forw          0              0              0
  3 network-cont         42             42             0

DS1  alarms   : None
DS1  defects  : None
T1  media:      Seconds      Count  State
  SEF              1          1  OK
  BEE              0          0  OK
  AIS              0          0  OK
  LOF              1          1  OK
  LOS              0          0  OK
  YELLOW           1          1  OK
  BPV              1          1
  EXZ              1          1
  LCV              1        65535
  PCV              1        1023
  CS               0          0
  LES              1
  ES               1
  SES              1
  SEFS             1
  BES              0
  UAS              0

HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 1514, Runt threshold: 3

```

```

Timeslots      : All active
Line encoding: B8ZS
Buildout       : 0 to 132 feet
Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag: flags,
Start end flag: shared
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1
Packet Forwarding Engine configuration:
  Destination slot: 1, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %      bps      %      usec
  0 best-effort           95      1459200    95         0         low      none
  3 network-control       5       76800     5          0         low      none

Logical interface t1-1/1/0.0 (Index 66) (SNMP ifIndex 51) (Generation 5)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 14, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 18

```

show interfaces (E1, Frame Relay)

```
user@host> show interfaces e1-3/0/0
```

```

Physical interface: e1-3/0/0, Enabled, Physical link is Up
Interface index: 146, SNMP ifIndex: 37
Link-level type: Frame-Relay, MTU: 1504, Clocking: Internal, Speed: E1,
Loopback: None, FCS: 16, Framing: G704
Device flags      : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
Link flags        : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 0 (never), Output: 11 (00:00:05 ago)
DTE statistics:
  Enquiries sent           : 10
  Full enquiries sent       : 1
  Enquiry responses received : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received       : 0
  Full enquiries received   : 0
  Enquiry responses sent    : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timeout : 1
CoS queues      : 8 supported
Last flapped    : 2005-11-30 14:50:34 PST (4d 20:33 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
DS1 alarms      : None
DS1 defects     : None
Logical interface e1-3/0/0.0 (Index 72) (SNMP ifIndex 32)

```

```

Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Input packets : 0
Output packets: 0
  Protocol inet, MTU: 1500
    Flags: None
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 10.1.3/24, Local: 10.1.3.1, Broadcast: 10.1.3.255
  DLCI 100
    Flags: Down, DCE-Unconfigured
    Total down time: 00:01:13 sec, Last down: 00:01:13 ago
    Input packets : 0
    Output packets: 0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1

```

show interfaces detail (E1, Frame Relay)

user@host> show interfaces e1-3/0/0 detail

```

Physical interface: e1-3/0/0, Enabled, Physical link is Up
Interface index: 146, SNMP ifIndex: 37, Generation: 69
Link-level type: Frame-Relay, MTU: 1504, Clocking: Internal, Speed: E1,
Loopback: None, FCS: 16, Framing: G704
Device flags : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
Link flags : Keepalives DTE
Hold-times : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
  Input : 0 (last seen: never)
  Output: 12 (last sent 00:00:02 ago)
DTE statistics:
  Enquiries sent : 10
  Full enquiries sent : 2
  Enquiry responses received : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received : 0
  Full enquiries received : 0
  Enquiry responses sent : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timeout : 1
CoS queues : 8 supported
Last flapped : 2005-11-30 14:50:34 PST (4d 20:33 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 225 56 bps
  Input packets: 0 0 pps
  Output packets: 15 0 pps
Queue counters: Queued packets Transmitted packets Dropped packets

  0 limited 0 0 0
  1 expedited-fo 0 0 0

```



```

2 real-plus          0          0          0
3 network-cont       15         15         0

DS1  alarms   : None
DS1  defects  : None
DS1  BERT configuration:
      BERT time period: 10 seconds, Elapsed: 0 seconds
      Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Logical interface e1-3/0/0.0 (Index 72) (SNMP ifIndex 32) (Generation 26)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes   :          0
  Output bytes  :          0
  Input packets :          0
  Output packets:          0
Local statistics:
  Input bytes   :          0
  Output bytes  :          0
  Input packets :          0
  Output packets:          0
Transit statistics:
  Input bytes   :          0          0 bps
  Output bytes  :          0          0 bps
  Input packets :          0          0 pps
  Output packets:          0          0 pps
Protocol inet, MTU: 1500, Generation: 32, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 10.1.3/24, Local: 10.1.3.1, Broadcast: 10.1.3.255,
  Generation: 42
DLCI 100
Flags: Down, DCE-Unconfigured
Total down time: 00:01:18 sec, Last down: 00:01:18 ago
Traffic statistics:
  Input bytes   :          0
  Output bytes  :          0
  Input packets :          0
  Output packets:          0
DLCI statistics:
  Active DLCI   :0  Inactive DLCI   :1

```

show interfaces extensive (E1, Frame Relay)

```
user@host> show interfaces e1-3/0/0 extensive
```

```

Physical interface: e1-3/0/0, Enabled, Physical link is Up
Interface index: 146, SNMP ifIndex: 37, Generation: 69
Link-level type: Frame-Relay, MTU: 1504, Clocking: Internal, Speed: E1,
Loopback: None, FCS: 16, Framing: G704
Device flags   : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
Link flags     : Keepalives DTE
Hold-times     : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
  Input : 0 (last seen: never)
  Output: 12 (last sent 00:00:05 ago)
DTE statistics:
  Enquiries sent          : 10

```

```

Full enquiries sent           : 2
Enquiry responses received    : 0
Full enquiry responses received : 0
DCE statistics:
  Enquiries received          : 0
  Full enquiries received     : 0
  Enquiry responses sent      : 0
  Full enquiry responses sent  : 0
Common statistics:
  Unknown messages received   : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 1
CoS queues : 8 supported
Last flapped : 2005-11-30 14:50:34 PST (4d 20:33 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 225 0 bps
  Input packets: 0 0 pps
  Output packets: 15 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 17, Errors: 0, Drops: 0, Aged packets: 0,
  MTU errors: 0, Resource errors: 0
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

0 limited          0          0          0
1 expedited-fo     0          0          0
2 real-plus        0          0          0
3 network-cont     15         15          0

DS1  alarms : None
DS1  defects : None
E1  media:
Seconds      Count  State
SEF          0      0 OK
BEE          5      5 OK
AIS          0      0 OK
LOF         245     15 OK
LOS         245      4 OK
YELLOW       0     11 OK
BPV          0      0
EXZ          9      9
LCV          0      0
PCV          0      0
CS           0      0
FEBE         0      0
LES          0
ES           0
SES          0
SEFS         0
BES          0
UAS         271
HDLC configuration:

```

```

Policing bucket: Disabled
Shaping bucket : Disabled
Giant threshold: 1506, Runt threshold: 0
Timeslots      : All active
Line encoding: HDB3, Data inversion: Disabled, Idle cycle flag: flags,
Start end flag: shared
DS1 BERT configuration:
BERT time period: 10 seconds, Elapsed: 0 seconds
Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
Destination slot: 3, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue    Bandwidth      Buffer   Priority   Limit
                        %          bps      %        usec
0 limited              95      1945600   95         0      low    none
3 network-control      5       102400    5         0      low    none
Logical interface e1-3/0/0.0 (Index 72) (SNMP ifIndex 32) (Generation 26)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Transit statistics:
  Input bytes :          0          0 bps
  Output bytes :          0          0 bps
  Input packets:          0          0 pps
  Output packets:          0          0 pps
Protocol inet, MTU: 1500, Generation: 32, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 10.1.3/24, Local: 10.1.3.1, Broadcast: 10.1.3.255,
  Generation: 42
DLCI 100
Flags: Down, DCE-Unconfigured
Total down time: 00:01:21 sec, Last down: 00:01:21 ago
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
DLCI statistics:
Active DLCI :0 Inactive DLCI :1

```

show interfaces (E1, IMA Link)

```
user@host> show interfaces e1-1/0/0
```

```

IMA Link alarms : None
IMA Link defects : LIF, LODS
IMA Link state:
  Line : Not synchronized
  Near end : Rx: Unusable, Tx: Usable
  Far end : Rx: Unusable, Tx: Usable
IMA link media:          Seconds      Count   State

```

```

LIF                                0
LODS                               0
Err-ICP                            0
IV                                 0
Rx-FC                              0
Tx-FC                              0
FE-Defects                         0
FE-Rx-FC                           0
FE-Tx-FC                           0
Rx-ICP                             0
Rx-Stuff                           0
Tx-ICP                             11
Tx-Stuff                           0
Rx-SES                             0
Rx-UAS                             0
Rx-UUS                             1
Tx-UUS                             0
FE-Rx-SES                          0
FE-Rx-UAS                          0
FE-Rx-UUS                          0
FE-Tx-UUS                          0

```

show interfaces extensive (T1, TDM-CCC-SATOP)

```
user@host> show interfaces t1-1/0/0:1:1 extensive
```

```

Physical interface: t1-1/0/0:1:1, Enabled, Physical link is Down
  Interface index: 153, SNMP ifIndex: 579, Generation: 817
  Link-level type: TDM-CCC-SATOP, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF,
  Parent: coc1-1/0/0:1 Interface index 152
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x0
  Link flags     : None
  Hold-times     : Up 0 ms, Down 0 ms
  CoS queues     : 8 supported, 8 maximum usable queues
  Last flapped   : 2012-10-28 02:12:40 PDT (22:32:13 ago)
  Statistics last cleared: 2012-10-29 00:44:52 PDT (00:00:01 ago)
  Egress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	0	0	0

```

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  DS1  alarms       : None
  DS1  defects       : None
  T1  media:
    Seconds      Count  State
    SEF          0      0 OK
    BEE          0      0 OK
    AIS          0      0 OK

```

```

LOF                0          0 OK
LOS                0          0 OK
YELLOW             0          0 OK
CRC Major          0          0 OK
CRC Minor          0          0 OK
BPV                0          0
EXZ                0          0
LCV                0          0
PCV                0          0
CS                 0          0
CRC                0          0
LES                0
ES                 0
SES                0
SEFS               0
BES                0
UAS                0
SAtOP configuration:
  Payload size: 192
  Idle pattern: 0xFF
  Octet aligned: Disabled
  Jitter buffer: packets: 8, latency: 7 ms, auto adjust: Disabled
  Excessive packet loss rate: sample period: 10000 ms, threshold: 30%
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SONET alarms      : None
SONET defects     : AIS-V, RDI-V
SONET vt:
  BIP-BIP2         0          0
  REI-V            0          0
  LOP-V            0          0 OK
  AIS-V            2          0 Defect Active
  RDI-V            2          0 Defect Active
  UNEQ-V           0          0 OK
  PLM-V            0          0 OK
  ES-V             0
  SES-V            0
  UAS-V            2
  ES-VFE           0
  SES-VFE           0
  UAS-VFE           0
Received SONET overhead:
V5      : 0x07
V5(cmp) : 0x02
Transmitted SONET overhead:
V5      : 0x02
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
    0 best-effort         95      1459200    95      0      low
none
    3 network-control      5       76800     5       0      low
none

Logical interface t1-1/0/0:1:1.0 (Index 69) (SNMP ifIndex 580) (Generation 525)

```

```

Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: TDM-CCC-SATOP
CE info          Packets      Bytes  Count
CE Tx            1005         192960
CE Rx            1004         192768
CE Rx Forwarded              0
CE Strayed          0
CE Lost             0
CE Malformed        0
CE Misinserted      0
CE AIS dropped       0
CE Dropped          1005         192960
CE Overrun Events              0
CE Underrun Events           0
Protocol ccc, MTU: 1504, Generation: 814, Route table: 0
Flags: Is-Primary

```

show interfaces extensive (DS, TDM-CCC-CESoPSN)

```

user@host> show interfaces ds-1/0/0:1:1:1 extensive

Physical interface: ds-1/0/0:1:1:1, Enabled, Physical link is Down
  Interface index: 154, SNMP ifIndex: 597, Generation: 819
  Link-level type: TDM-CCC-CESoPSN, MTU: 1504, Speed: 1536kbps, Loopback: None,
  FCS: 16, Parent: ct1-1/0/0:1:1 Interface index 153
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x0
  Link flags     : None
  Hold-times    : Up 0 ms, Down 0 ms
  CoS queues    : 8 supported, 8 maximum usable queues
  Last flapped  : 2012-10-29 00:49:03 PDT (00:00:35 ago)
  Statistics last cleared: Never
  Egress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	0	0	0

```

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  CESoPSN configuration:
    Packetization latency: 1000 us
    Idle pattern: 0xFF
    Jitter buffer: packets: 8, latency: 8 ms, auto adjust: Disabled
    Excessive packet loss rate: sample period: 10000 ms, threshold: 30%
  DS0 BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
  Packet Forwarding Engine configuration:
    Destination slot: 1
  CoS information:
    Direction : Output

```

CoS transmit queue Limit	Bandwidth		Buffer		Priority
	%	bps	%	usec	
0 best-effort	95	1459200	95	0	low
none					
3 network-control	5	76800	5	0	low
none					
Logical interface ds-1/0/0:1:1:1.0 (Index 69) (SNMP ifIndex 598) (Generation 549)					
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: TDM-CCC-CESoPSN					
CE info	Packets	Bytes	Count		
CE Tx	0	0			
CE Rx	35712	6856704			
CE Rx Forwarded		0			
CE Strayed	0				
CE Lost	0				
CE Malformed	0				
CE Misinserted	0				
CE AIS dropped	0				
CE Dropped	0	0			
CE Overrun Events			0		
CE Underrun Events			1		
Protocol ccc, MTU: 1504, Generation: 857, Route table: 0					
Flags: Is-Primary					

show interfaces (T3 or E3)

Syntax	<pre>show interfaces <i>interface-type</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display status information about the specified T3 or E3 interface.
Options	<p><i>interface-type</i>—On M Series and T Series routers, the T3 interface type is t3-<i>fpc/pic/port</i>, whereas the E3 interface type is e3-<i>fpc/pic/port</i>.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
List of Sample Output	show interfaces (T3, PPP) on page 1605 show interfaces detail (T3, PPP) on page 1606 show interfaces extensive (T3, PPP) on page 1607 show interfaces (E3, Frame Relay) on page 1608 show interfaces detail (E3, Frame Relay) on page 1609 show interfaces extensive (E3, Frame Relay) on page 1611
Output Fields	<p>Table 76 on page 1596 lists the output fields for the show interfaces (T3 or E3) command. Output fields are listed in the approximate order in which they appear.</p>

Table 76: T3 or E3 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	All levels

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Loopback	Whether loopback is enabled and the type of loopback (local or remote).	All levels
FCS	Frame check sequence on the interface (either 16 or 32). The default is 16 bits.	All levels
Mode	(T3 only) Whether C-bit parity mode or M13 mode is enabled.	All levels
Long buildout	(T3 only) Buildout setting: less than 255 feet (68 meters) or greater than 255 feet and shorter than 450 feet (137 meters).	All levels
Framing	(E3 only) Physical layer framing format used on the link. It can be G751 or Unframed . The default is G751 .	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Link flags	Information about the link. Possible values are described in the "Link Flags" section under "Common Output Fields Description" on page 1168 .	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Keepalive settings	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> interval seconds—Time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. down-count number—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. up-count number—Number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive none

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics or Keepalive	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> • Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>. • Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. 	detail extensive none
LMI settings	<p>(Frame Relay) Local Management Interface (LMI) settings (ANSI or ITU). ANSI LMI settings is the default. The format is LMI settings: value, value... xx seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> • n391dte—DTE full status polling interval (1–255) • n392dce—DCE error threshold (1–10) • n392dte—DTE error threshold (1–10) • n393dce—DCE monitored event count (1–10) • n393dte—DTE monitored event count (1–10) • t391dte—DTE polling timer (5–30 seconds) • t392dce—DCE polling verification timer (5–30 seconds) 	detail extensive none
LMI	<p>(Frame Relay) LMI statistics:</p> <ul style="list-style-type: none"> • Input—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is Input: nn (last seen hh:mm:ss ago). • Output—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is Output: nn (last sent hh:mm:ss ago). 	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communications equipment (DCE):</p> <ul style="list-style-type: none"> • Enquiries sent—Number of link status enquiries sent from the DTE to the DCE. • Full enquiries sent—Number of full enquiries sent from the DTE to the DCE. • Enquiry responses received—Number of enquiry responses received by the DTE from the DCE. • Full enquiry responses received—Number of full enquiry responses sent from the DTE to the DCE. 	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> • Enquiries received—Number of enquiries received by the DCE from the DTE. • Full enquiries received—Number of full enquiries received by the DCE from the DTE. • Enquiry responses sent—Number of enquiry responses sent from the DCE to the DTE. • Full enquiry responses sent—Number of full enquiry responses sent from the DCE to the DTE. 	detail extensive none

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Common statistics	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> • Unknown messages received—Number of received packets that do not fall into any category. • Asynchronous updates received—Number of link status peer changes received. • Out-of-sequence packets received—Number of packets for which the sequence of the packets received is different from the expected sequence. • Keepalive responses timedout—Number of keepalive responses that timed out when no LMI packet was reported for n392dte or n393dce intervals. (See LMI settings.) 	detail extensive none
Nonmatching DCE-end DLCIs	(Frame Relay. Displayed only from the DTE.) Number of DLCIs configured from the DCE.	detail extensive none
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Opened—LCP negotiation is successful. 	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Resp-received—Response received for the challenge sent, but CHAP not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response sent for the challenge received. • Chap-Chal-sent—Challenge sent. • Chap-Chal-received—Challenge received but response not yet sent. • Down—CHAP authentication is incomplete (not yet completed or has failed). • Not-configured—CHAP is not configured on the interface. • Opened—CHAP authentication was successful. 	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (year-month-day hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
CoS queues	Number of CoS queues configured.	detail extensive none

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface • Output packets—Number of packets received on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—(T3 only) Number of frames received that are smaller than the runt threshold. • Giants—(T3 only) Number of frames received that are larger than the giant threshold. • Bucket Drops—Drops resulting from the traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is off. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • SRAM errors—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC or PIM. If the value of this field increments, the PIC or PIM is malfunctioning. • Resource errors—Sum of transmit drops. 	extensive

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Active alarms Active defects	<p>E3 media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface.</p> <ul style="list-style-type: none"> • AIS—Alarm indication signal • EXZ—Excessive zeros • FERF—Far-end receive failures • IDLE—Idle code detected • LCD—Loss of cell delineation • LCV—Line code violation • LOF—Loss of frame • LOS—Loss of signal • PLL—Phase-locked loop • YLW—Remote defect indication 	detail extensive none

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
DS3 media or E3 media	<p>Counts of DS3 (T3) or E3 media-specific errors.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. State other than OK indicates a problem. <p>The DS3 or E3 media-specific error types can be:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop out of lock • Reframing—Frame alignment recovery time • AIS—Alarm indication signal • LOF—Loss of frame • LOS—Loss of signal • IDLE—Idle code detected • YELLOW—Errors at the remote site receiver • BPV—Bipolar violation • EXZ—Excessive zeros • LCV—Line code violation • PCV—(DS3 only) Pulse code violation • CCV—(DS3 only) C-bit coding violation • FEBE—(DS3 only) Far-end block error • LES—Line error seconds • PES—(DS3 only) P-bit errored seconds • PSSES—(DS3 only) P-bit errored seconds (section) • CES—(DS3 only) C-bit errored seconds • CSES—(DS3 only) C-bit severely errored seconds • SEFS—Severely errored framing seconds • UAS—Unavailable seconds 	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware. • Idle cycle flag—Idle cycle flags. • Start end flag—Start and end flag. 	extensive

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
DSU configuration	<p>Information about the DSU configuration. The last three lines (Bit count, Error bit count, and LOS information) are displayed only if a BERT has ever been run on the interface.</p> <ul style="list-style-type: none"> • Compatibility mod—CSU/DSU compatibility mode: None, Larscom, Kentrox, or Digital-Link. • Scrambling—Payload scrambling: Enabled or Disabled. • Subrate—Configured subrate setting. Applies only when Digital-Link compatibility mode is used. The subrate can be Disabled or display units in Kbps. • FEAC loopbac—(T3) Whether a far-end alarm and control (FEAC) loopback is Active or Inactive. This feature is used to send alarm or status information from the far-end terminal back to the near-end terminal and to initiate T3 loopbacks at the far-end terminal from the near-end terminal. • Response—Whether the FEAC signal is Enabled or Disabled. • Count—Number of FEAC loopbacks. 	extensive
DS3 (or E3) BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> • BERT time period—Configured total time period that the BERT is to run. • Elapsed—Actual time elapsed since the start of the BERT (in seconds). • Induced error rate—Configured rate at which the bit errors are induced in the BERT pattern. • Algorithm—Type of algorithm selected for the BERT. 	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte. 	extensive
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive

Logical Interface

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Logical interface	Name of the logical interface.	detail extensive none
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	extensive
Flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Encapsulation	Encapsulation on the logical interface.	detail extensive none
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	(Frame Relay) Number and rate of bytes and packets received and transmitted on the logical interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter normally stabilizes in less than 1 second.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mlfr , or mpls .	detail extensive none
Multilink bundle	(Multilink) Interface name for the multilink bundle.	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive none
DLCI	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: Flags , Total down time , Last down , and Traffic statistics (or Input packets , Output packets). Flags is one or more of the following: <ul style="list-style-type: none"> • Active—Set when the link is active and the DTE and DCE are exchanging information. • Down—Set when the link is active, but no information is received from the DCE. • DCE Unconfigured—Set when the corresponding DLCI in the DCE is not configured. • Configured—Set when the corresponding DLCI in the DCE is configured. • DCE-configured—Displayed when the command is issued from the DTE. 	detail extensive none
DLCI statistics	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> • Active DLCI—Number of active DLCIs. • Inactive DLCI—Number of inactive DLCIs. 	detail extensive none

Sample Output

show interfaces (T3, PPP)

```
user@host> show interfaces t3-0/2/0
```

```
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues     : 4 supported, 4 in use
```

```

Last flapped   : 2005-12-05 08:43:06 PST (02:18:40 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 72 bps (0 pps)
Active alarms  : None
Active defects : None
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 4470
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
    198.51.100.255

```

show interfaces detail (T3, PPP)

```
user@host> show interfaces t3-0/2/0 detail
```

```

Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35, Generation: 22
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues   : 4 supported, 4 in use
  Last flapped : 2005-12-05 08:43:06 PST (02:18:45 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          0          0 bps
    Output bytes :        152          0 bps
    Input packets:          0          0 pps
    Output packets:         8          0 pps
  Queue counters:      Queued packets  Transmitted packets  Dropped packets

    0 best-effort          0          0          0
    1 expedited-fo          0          0          0
    2 assured-forw          0          0          0
    3 network-cont         6          6          0

  Active alarms : None
  Active defects : None
  DS3 BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds

```

```

    Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0
Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54) (Generation 8)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 4470, Generation: 17, Route table: 0
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
    Generation: 24

```

show interfaces extensive (T3, PPP)

```

user@host> show interfaces t3-0/2/0 extensive
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35, Generation: 22
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues   : 4 supported, 4 in use
  Last flapped : 2005-12-05 08:43:06 PST (02:18:47 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          0          0 bps
    Output bytes :         171         72 bps
    Input packets:          0          0 pps
    Output packets:         9          0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Bucket drops: 0, Policed discards: 0, L3 incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
    SRAM errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
    Resource errors: 0
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets
    0 best-effort   0          0          0
    1 expedited-fo  0          0          0
    2 assured-forw  0          0          0
    3 network-cont  7          7          0
  Active alarms : None

```

```

Active defects : None
DS3 media:
Seconds      Count  State
PLL Lock      0        0 OK
Reframing     0        0 OK
AIS           0        0 OK
LOF           0        0 OK
LOS           0        0 OK
IDLE          0        0 OK
YELLOW        0        0 OK
BPV           0        0
EXZ           0        0
LCV           1        4
PCV           0        0
CCV           0        0
FEBE          1       11
LES           1
PES           0
PSES          0
CES           0
CSES          0
SEFS          0
UAS           0
HDLC configuration:
Policing bucket: Disabled
Shaping bucket : Disabled
Giant threshold: 4484, Runt threshold: 3
Idle cycle flag: flags, Start end flag: shared
DSU configuration:
Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
FEAC loopback: Inactive, Response: Disabled, Count: 0
DS3 BERT configuration:
BERT time period: 10 seconds, Elapsed: 0 seconds
Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0
Packet Forwarding Engine configuration:
Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
CoS transmit queue  Bandwidth      Buffer  Priority  Limit
                    %      bps      %      usec
0 best-effort      95    42499200  95      0      low  none
3 network-control  5     2236800   5       0      low  none

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54) (Generation 8)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 17, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 24

```

show interfaces (E3, Frame Relay)

```
user@host> show interfaces e3-1/2/0
```

```

Physical interface: e3-1/2/0, Enabled, Physical link is Up
Interface index: 153, SNMP ifIndex: 49
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
Loopback: None, FCS: 16, Framing: G751
Device flags : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000

```

```

Link flags      : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 0 (never), Output: 4 (00:00:06 ago)
DTE statistics:
  Enquiries sent           : 4
  Full enquiries sent      : 0
  Enquiry responses received : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 1
CoS queues      : 4 supported, 4 in use
Last flapped   : 2005-12-05 08:46:14 PST (02:27:17 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : None
Active defects : None

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Input packets : 0
Output packets: 0
  Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255
  DLCI 100
    Flags: Down, DCE-Unconfigured
    Total down time: 00:00:06 sec, Last down: 00:00:06 ago
    Input packets : 0
    Output packets: 0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1

```

show interfaces detail (E3, Frame Relay)

```
user@host> show interfaces e3-1/2/0 detail
```

```

Physical interface: e3-1/2/0, Enabled, Physical link is Up
Interface index: 153, SNMP ifIndex: 49, Generation: 36
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
Loopback: None, FCS: 16, Framing: G751
Device flags      : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags      : Keepalives DTE
Hold-times      : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
  Input : 0 (last seen: never)
  Output: 5 (last sent 00:00:07 ago)
DTE statistics:
  Enquiries sent           : 5

```

```

Full enquiries sent           : 0
Enquiry responses received    : 0
Full enquiry responses received : 0
DCE statistics:
Enquiries received           : 0
Full enquiries received      : 0
Enquiry responses sent       : 0
Full enquiry responses sent   : 0
Common statistics:
Unknown messages received    : 0
Asynchronous updates received : 0
Out-of-sequence packets received : 0
Keepalive responses timedout  : 1
CoS queues      : 4 supported, 4 in use
Last flapped   : 2005-12-05 08:46:14 PST (02:27:27 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :           0          0 bps
Output bytes :          806          0 bps
Input packets:           0          0 pps
Output packets:          44          0 pps
Queue counters:      Queued packets  Transmitted packets  Dropped packets

0 best-effort           0              0              0
1 expedited-fo          0              0              0
2 assured-forw          0              0              0
3 network-cont          43             43              0

Active alarms : None
Active defects : None

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57) (Generation 15)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
Input bytes :           0
Output bytes :           0
Input packets:           0
Output packets:           0
Local statistics:
Input bytes :           0
Output bytes :           0
Input packets:           0
Output packets:           0
Transit statistics:
Input bytes :           0          0 bps
Output bytes :           0          0 bps
Input packets:           0          0 pps
Output packets:           0          0 pps
Protocol inet, MTU: 4470, Generation: 24, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 38
DLCI 100
Flags: Down, DCE-Unconfigured
Total down time: 00:00:16 sec, Last down: 00:00:16 ago

```

```

Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
DLCI statistics:
  Active DLCI :0 Inactive DLCI :1

```

show interfaces extensive (E3, Frame Relay)

user@host> show interfaces e3-1/2/0 extensive

```

Physical interface: e3-1/2/0, Enabled, Physical link is Up
  Interface index: 153, SNMP ifIndex: 49, Generation: 36
  Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
  Loopback: None, FCS: 16, Framing: G751
  Device flags : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags : Keepalives DTE
  Hold-times : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 0 (last seen: never)
    Output: 6 (last sent 00:00:02 ago)
  DTE statistics:
    Enquiries sent : 5
    Full enquiries sent : 1
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received : 0
    Full enquiries received : 0
    Enquiry responses sent : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 1
  CoS queues : 4 supported, 4 in use
  Last flapped : 2005-12-05 08:46:14 PST (02:27:30 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 821 56 bps
    Input packets: 0 0 pps
    Output packets: 45 0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 21118, Bucket drops: 0,
    Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0,
    Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

  Resource errors: 0
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort      0              0              0

```

```

 1 expedited-fo          0          0          0
 2 assured-forw          0          0          0
 3 network-cont         44         44          0

Active alarms : None
Active defects : None
E3 media:
Seconds      Count  State
PLL Lock      0        0 OK
Reframing    187        1 OK
AIS           0        0 OK
LOF          187        1 OK
LOS          187        1 OK
IDLE          0        0 OK
YELLOW        0        0 OK
BPV           0         0
EXZ           0         0
LCV          188    12303167
LES          188
SEFS         187
UAS          195
DSU configuration:
  Compatibility mode: None, Scrambling: Disabled
E3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced Error rate: 10e-0
Packet Forwarding Engine configuration:
  Destination slot: 1, PLP byte: 1 (0x00)
CoS information:
CoS transmit queue    Bandwidth      Buffer  Priority  Limit
                     %      bps      %      usec
0 best-effort         95    32649600  95      0      low    none
3 network-control     5     1718400   5      0      low    none

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57) (Generation 15)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 24, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 38
DLCI 100
Flags: Down, DCE-Unconfigured

```



```
Total down time: 00:00:19 sec, Last down: 00:00:19 ago
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:         0
  Output packets:        0
DLCI statistics:
  Active DLCI  :0  Inactive DLCI  :1
```

show interfaces demux0 (Demux Interfaces)

Syntax	<pre>show interfaces demux0 <i>logical-interface-number</i> <brief detail extensive terse> <descriptions> <media> <snmp-index <i>snmp-index</i>> <statistics></pre>
Release Information	Command introduced in Junos OS Release 9.0.
Description	(MX Series and M Series routers only) Display status information about the specified demux interface.
Options	<p>none—Display standard information about the specified demux interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index <i>snmp-index</i>—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration
List of Sample Output	<p>show interfaces demux0 (Demux) on page 1620</p> <p>show interfaces demux0 (PPPoE over Aggregated Ethernet) on page 1621</p> <p>show interfaces demux0 extensive (Targeted Distribution for Aggregated Ethernet Links) on page 1622</p> <p>show interfaces demux0 (ACI Interface Set Configured) on page 1622</p>
Output Fields	Table 77 on page 1614 lists the output fields for the show interfaces demux0 (Demux Interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields

Field Name	Field Description	Level of Output
Physical Interface		

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
Physical interface	Name of the physical interface.	brief detail extensive none
Interface index	Index number of the physical interface, which reflects its initialization sequence.	brief detail extensive none
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1168 .	brief detail extensive none
Physical link	Status of the physical link (Up or Down).	detail extensive none
Admin	Administrative state of the interface (Up or Down).	terse
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
Link	Status of the physical link (Up or Down).	terse
Targeting summary	Status of aggregated Ethernet links that are configured with targeted distribution (primary or backup)	extensive
Bandwidth	Bandwidth allocated to the aggregated Ethernet links that are configured with targeted distribution.	extensive
Proto	Protocol family configured on the interface.	terse
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface. Software-Pseudo indicates a standard software interface with no associated hardware device.	brief detail extensive none
Link-level type	Encapsulation being used on the physical interface.	brief detail extensive
MTU	Maximum transmission unit size on the physical interface.	brief detail extensive
Clocking	Reference clock source: Internal (1) or External (2).	brief detail extensive
Speed	Speed at which the interface is running.	brief detail extensive
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under “Common Output Fields Description” on page 1168 .	brief detail extensive none
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under “Common Output Fields Description” on page 1168 .	brief detail extensive none
Link type	Data transmission type.	detail extensive none

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
Link flags	Information about the link. Possible values are described in the “Link Flags” section under “ Common Output Fields Description ” on page 1168.	detail extensive none
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive
Hardware address	Hardware MAC address.	detail extensive
Alternate link address	Backup address of the link.	detail extensive
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. • IPv6 transit statistics—Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled. <p>NOTE: These fields include dropped traffic and exception traffic, as those fields are not separately defined.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
Input errors	Input errors on the interface whose definitions are as follows: <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant packet threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of transmit drops. 	extensive
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	none
Output errors	Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious: <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Output Rate	Output rate in bps and pps.	none
Logical Interface		
Logical interface	Name of the logical interface.	brief detail extensive none
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under "Common Output Fields Description" on page 1168 .	brief detail extensive none

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
Encapsulation	Encapsulation on the logical interface.	brief extensive none
ACI VLAN: Dynamic Profile	Name of the dynamic profile that defines the agent circuit identifier (ACI) interface set. If configured, the ACI interface set enables the underlying demux interface to create dynamic VLAN subscriber interfaces based on ACI information.	brief detail extensive none
Demux	Specific IP demultiplexing (demux) values: <ul style="list-style-type: none"> • Underlying interface—The underlying interface that the demux interface uses. • Index—Index number of the logical interface. • Family—Protocol family configured on the logical interface. • Source prefixes, total—Total number of source prefixes for the underlying interface. • Destination prefixes, total—Total number of destination prefixes for the underlying interface. • Prefix—inet family prefix. 	detail extensive none
protocol-family	Protocol family configured on the logical interface.	brief
Traffic statistics	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. • Input packets, Output packets—Number of packets received and transmitted on the interface set. • IPv6 transit statistics—Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled. <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	Number of transit bytes and packets received and transmitted on the local interface. <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Table 77: *show interfaces demux0 (Demux Interfaces) Output Fields (continued)*

Field Name	Field Description	Level of Output
Transit statistics	<p>Number and rate of bytes and packets transiting the switch.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
IPv6 Transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input packets	Number of packets received on the interface.	none
Output packets	Number of packets transmitted on the interface.	none
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under “Common Output Fields Description” on page 1168 .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive statistics none

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
Local	IP address of the logical interface.	detail extensive terse none
Remote	IP address of the remote interface.	terse
Broadcast	Broadcast address of the logical interlace.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link	Name of the physical interfaces for member links in an aggregated Ethernet bundle for a PPPoE over aggregated Ethernet configuration. PPPoE traffic goes out on these interfaces.	detail extensive none
Dynamic-profile	Name of the PPPoE dynamic profile assigned to the underlying interface.	detail extensive none
Service Name Table	Name of the PPPoE service name table assigned to the PPPoE underlying interface.	detail extensive none
Max Sessions	Maximum number of dynamic PPPoE logical interfaces that the router can activate on the underlying interface.	detail extensive none
Duplicate Protection	State of duplicate protection: On or Off . Duplicate protection prevents the activation of another dynamic PPPoE logical interface on the same underlying interface when a dynamic PPPoE logical interface for a client with the same MAC address is already active on that interface.	detail extensive none
Direct Connect	State of the configuration to ignore DSL Forum VSAs: On or Off . When configured, the router ignores any of these VSAs received from a directly connected CPE device on the interface.	detail extensive none
AC Name	Name of the access concentrator.	detail extensive none

Sample Output

show interfaces demux0 (Demux)

```
user@host> show interfaces demux0
```

```
Physical interface: demux0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 79, Generation: 129
Type: Software-Pseudo, Link-level type: Unspecified, MTU: 9192, Clocking: 1,
Speed: Unspecified
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link type      : Full-Duplex
Link flags     : None
Physical info  : Unspecified
Hold-times    : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Last flapped  : Never
```



```

Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

Logical interface demux0.0 (Index 87) (SNMP ifIndex 84) (Generation 312)
  Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
  Demux:
    Underlying interface: ge-2/0/1.0 (Index 74)
  Family Inet Source prefixes, total 1
  Prefix: 203.0.113/24
  Traffic statistics:
    Input bytes : 0
    Output bytes : 1554
    Input packets: 0
    Output packets: 37
  IPv6 transit statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Local statistics:
    Input bytes : 0
    Output bytes : 1554
    Input packets: 0
    Output packets: 37
  Transit statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
  IPv6 transit statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Protocol inet, MTU: 1500, Generation: 395, Route table: 0
  Flags: Is-Primary, Mac-Validate-Strict
  Mac-Validate Failures: Packets: 0, Bytes: 0
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: 203.0.113/24, Local: 203.0.113.13, Broadcast: 203.0.113.255,

  Generation: 434

```

show interfaces demux0 (PPPoE over Aggregated Ethernet)

```
user@host> show interfaces demux0.100
```

```

Logical interface demux0.100 (Index 76) (SNMP ifIndex 61160)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ]
  Encapsulation: ENET2
  Demux:
    Underlying interface: ae0 (Index 199)
  Link:
    ge-1/0/0
    ge-1/1/0
  Input packets : 0
  Output packets: 0
  Protocol pppoe
    Dynamic Profile: pppoe-profile,
    Service Name Table: service-table1,
    Max Sessions: 100, Duplicate Protection: On,
    Direct Connect: Off,
    AC Name: pppoe-server-1

```

show interfaces demux0 extensive (Targeted Distribution for Aggregated Ethernet Links)

```
user@host> show interfaces demux0.1073741824 extensive
```

```

Logical interface demux0.1073741824 (Index 75) (SNMP ifIndex 558) (Generation 346)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  Demux:
    Underlying interface: ae0 (Index 201)
  Link:
    ge-1/0/0
    ge-1/1/0
    ge-2/0/7
    ge-2/0/8
  Targeting summary:
    ge-1/1/0, primary, Physical link is Up
    ge-2/0/8, backup, Physical link is Up
  Bandwidth: 1000mbps

```

show interfaces demux0 (ACI Interface Set Configured)

```
user@host> show interfaces demux0.1073741827
```

```

Logical interface demux0.1073741827 (Index 346) (SNMP ifIndex 527)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1802 0x8100.302 ] Encapsulation: ENET2
  Demux: Source Family Inet
  ACI VLAN:
    Dynamic Profile: aci-vlan-set-profile
  Demux:
    Underlying interface: ge-1/0/0 (Index 138)
  Input packets : 18
  Output packets: 16
  Protocol inet, MTU: 1500
    Flags: Sendbcst-pkt-to-re, Unnumbered
    Donor interface: lo0.0 (Index 322)
    Preferred source address: 203.0.113.202
    Addresses, Flags: Primary Is-Default Is-Primary
      Local: 203.0.113.119
  Protocol pppoe
    Dynamic Profile: aci-vlan-pppoe-profile,

```

```
Service Name Table: None,  
Max Sessions: 32000, Max Sessions VSA Ignore: Off,  
Duplicate Protection: On, Short Cycle Protection: Off,  
Direct Connect: Off,  
AC Name: nbc
```

show interfaces extensive

Syntax	show interfaces extensive
---------------	---------------------------

Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers. Command introduced in Junos OS Release 17.2 for PT1000 and PTX10008 Packet Transport Routers.
----------------------------	---

Description	Display extensive information about all interfaces configured on the router.
--------------------	--



NOTE:

- At some times, the cumulative byte counters displayed with the `show interfaces extensive` command on the 10-Gigabit Ethernet MPC with SFP+ is not always increasing and cumulative and does not give the correct results. There is a time lag in collecting these statistics, during which the display might decrease or go from a nonzero number to zero. Eventually, the counter will display the correct result.
- When the `show interfaces extensive` command is executed on a router with an MPC or a T4000 Type 5 FPC, the Input packet rejects counter of the Filter statistics field also displays statistics related to the following packet errors:
 - Invalid VLAN range
 - Tagged packet received on an untagged interface
- When the `show interfaces extensive` command is executed on an interface that is configured on a T4000 Type 5 FPC, the IPv6 transit statistics field displays:
 - Total statistics (sum of transit and local statistics) at the physical interface level
 - Transit statistics at the logical interface level
- When the `show interfaces extensive` command is executed on an aggregate interface in a T1600 Core Router, the IPv6 Input bytes is displayed for an aggregate interface. However, the IPv6 Input bytes is always zero on a member link of an aggregated bundle even when there is IPv6 transit traffic on the member link. This is because the logical interface index of the aggregate logical interface is updated but not the logical interface of the member links in the channel lookup table.
- The Output packets field under the Traffic statistics section in the output of the `show interfaces extensive` command includes both IPv4 and IPv6 packets. For example, in a scenario in which both IPv4 and IPv6 packets are being mirrored on the same interface and when you deactivate an IPv4 port-mirroring instance on the chassis, the output of the `show interfaces extensive` command shows a value in the Output packets field of the Traffic statistics section, which is the value of IPv6 packets that are mirrored and not of the IPv4 packets. This behavior is expected.
- For IQ2 PIC interfaces, the output of the `show interfaces extensive` command displays byte statistics that includes Layer 2 headers.
- If there are active OTN defects when an ISSU is performed, and the defect persists after the upgrade completes, the OTN alarm count is incremented by 1. For example, if an OTN alarm is active with a count of 1 and the defect remains after ISSU, the alarm count is incremented to 2. This behavior is expected.

Options This command has no options.

Required Privilege Level view

List of Sample Output

- [show interfaces extensive \(Circuit Emulation\) on page 1626](#)
- [show interfaces extensive \(Fast Ethernet\) on page 1627](#)
- [show interfaces extensive \(Gigabit Ethernet\) on page 1629](#)
- [show interfaces extensive \(10-Gigabit Ethernet\) on page 1629](#)
- [show interfaces extensive \(IQ2 and IQ2E\) on page 1632](#)
- [show interfaces extensive \(100-Gigabit Ethernet Type 4 PIC with CFP\) on page 1635](#)
- [show interfaces extensive \(PTX5000 Packet Transport Router\) on page 1637](#)
- [show interfaces extensive \(PTX Routers\) on page 1639](#)
- [show interfaces extensive \(PTX10008 Routers\) on page 1640](#)
- [show interfaces extensive \(PTX1000 Routers\) on page 1644](#)
- [show interfaces extensive \(MX Series Routers\) on page 1646](#)
- [show interfaces extensive \(MX480 Router with MPC5E and 10-Gigabit Ethernet OTN Interface\) on page 1648](#)
- [show interfaces extensive \(MX480 Router with MPC5E and 100-Gigabit Ethernet OTN Interface\) on page 1650](#)
- [show interfaces extensive \(\(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC\) on page 1653](#)
- [show interfaces extensive \(PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC\) on page 1656](#)
- [show interfaces extensive \(MX2020 Router with MPC6E and OTN MIC\) on page 1658](#)
- [show interfaces extensive \(MX2010 Router with MPC6E and 100-Gigabit Ethernet OTN Interface\) on page 1661](#)
- [show interfaces extensive \(MX2010 Router with MPC6E and 10-Gigabit Ethernet Interface\) on page 1663](#)
- [show interfaces extensive \(T4000 Routers with Type 5 FPCs\) on page 1664](#)
- [show interfaces extensive \(Aggregated Ethernet\) on page 1666](#)

Output Fields For more information, see the output fields table for the particular interface type in which you are interested. For information about destination class and source class statistics, see the “Destination Class Field” section and the “Source Class Field” section under [“Common Output Fields Description” on page 1168](#). For sample output for specific interfaces, see the other topics in this collection.

Sample Output

[show interfaces extensive \(Circuit Emulation\)](#)

If a Circuit Emulation (CE) PIC is configured for SAToP pseudowire, then pseudowire statistics are displayed in the CE information section of the **show interface extensive** output. If SAToP pseudowire is not configured on the CE PIC, then all CE information counters display 0 (zero).

```
user@host> show interface t1-0/0/0 extensive
```

```
Physical interface :t1-0/0/0, Enabled, Physical Link : Up
  Interface index:61441
  Speed : 1.54 Mbps, Loopback: Disabled
  Operational state : Enabled, Encapsulation : Trans
  Encoding : b8zs, Framing : unframe, Build-out : 0-30
  Inversion : enable, Clock source : master
  Description :
  Traffic statistics:
    T1 media:      Seconds
    ES             1643
    SES            1643

    CE Info      Packets      Bytes
    CE Rx       : 2395529     306627712
    CE Tx       : 2396259     306721152
    CE Rx Drop:   0           0
    CE Tx Drop:   0           0

    CE Overrun  Events: 0
    CE Underrun Events: 0
```

Sample Output

show interfaces extensive (Fast Ethernet)

```
user@host> show interfaces fe-0/2/1 extensive
```

```
Physical interface: fe-0/2/0, Enabled, Physical link is Up
  Interface index: 129, SNMP ifIndex: 23, Generation: 130
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues : 4 supported, 4 maximum usable queues
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped : 2006-04-16 23:00:41 PDT (02:08:05 ago)
  Statistics last cleared: 2006-04-16 21:42:00 PDT (03:26:46 ago)
  Traffic statistics:
    Input bytes : 17539 152 bps
    Output bytes : 92968 224 bps
    Input packets: 348 0 pps
    Output packets: 1349 0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
    FIFO errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

    FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 4 supported, 4 in use
  Queue counters: Queued packets Transmitted packets Dropped packets

    0 best-effort 66 66 0
    1 expedited-fo 0 0 0
    2 assured-forw 0 0 0
```

```

3 network-cont          1283          1283          0

Active alarms : None
Active defects : None
MAC statistics:
    Receive          Transmit
Total octets          24721          105982
Total packets          348          1349
Unicast packets          347          430
Broadcast packets          1          37
Multicast packets          0          882
CRC/Align errors          0          0
FIFO errors          0          0
MAC control frames          0          0
MAC pause frames          0          0
Oversized frames          0
Jabber frames          0
Fragment frames          0
VLAN tagged frames          0
Code violations          0
Filter statistics:
Input packet count          348
Input packet rejects          0
Input DA rejects          0
Input SA rejects          0
Output packet count          1349
Output packet pad count          0
Output packet error count          0
CAM destination filters: 3, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: None, Remote fault: OK
Packet Forwarding Engine configuration:
Destination slot: 0
CoS information:
CoS transmit queue          Bandwidth          Buffer          Priority          Limit

          %          bps          %          usec
0 best-effort          95          95000000          95          0          low          none
3 network-control          5          5000000          5          0          low          none
Logical interface fe-0/2/0.0 (Index 66) (SNMP ifIndex 46) (Generation 133)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 142, Route table: 0
Flags: DCU, SCU-out

          Packets          Bytes
Destination class          (packet-per-second)          (bits-per-second)
silv1_new          0          0
(          0) (          0)
silv2_new          0          0
(          0) (          0)
silv_misc          0          0
(          0) (          0)
silver0          0          0
(          0) (          0)
silver2          0          0
(          0) (          0)
silver3          0          0
(          0) (          0)
silver4          0          0
(          0) (          0)

```



```

silver5          0          0
(              0) (          0)
silver6          0          0
(              0) (          0)
silver7          0          0
(              0) (          0)
silver9          0          0
(              0) (          0)
Source class      Packets      Bytes
                  (packet-per-second) (bits-per-second)
gold1             0          0
(              0) (          0)
gold2            16600      1062400
(              0) (          0)
gold3             0          0
(              0) (          0)
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.220.24/30, Local: 192.168.220.26, Broadcast:
192.168.220.27, Generation: 150

```

show interfaces extensive (Gigabit Ethernet)

```
user@host> show interfaces ge-5/0/0.0 extensive
```

```

Logical interface ge-5/0/0.0 (Index 71) (SNMP ifIndex 1930) (Generation 139)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Traffic statistics:
Input bytes :          0
Output bytes :         42
Input packets:          0
Output packets:         1
Local statistics:
Input bytes :          0
Output bytes :         42
Input packets:          0
Output packets:         1
Transit statistics:
Input bytes :          0          0 bps
Output bytes :          0          0 bps
Input packets:          0          0 pps
Output packets:         0          0 pps
Output Filters: f-any
Protocol inet, MTU: 1500, Generation: 155, Route table: 0
Output Filters: f-inet,
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.220.24/30, Local: 192.168.220.26, Broadcast:
192.168.220.27,
Generation: 170
Protocol multiservice, MTU: Unlimited, Generation: 156, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```

show interfaces extensive (10-Gigabit Ethernet)

```
user@host> show interfaces xe-2/1/0 extensive
```

```
Physical interface: xe-2/1/0, Enabled, Physical link is Up
```

```

Interface index: 258, SNMP ifIndex: 762, Generation: 2046
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None, Source filtering: Disabled,
Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 8 supported, 8 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped  : 2011-12-17 00:19:02 PST (07:36:37 ago)
Statistics last cleared: 2011-12-17 07:55:24 PST (00:00:15 ago)
Traffic statistics:
Input bytes   :          110000          0 bps
Output bytes  :           0          0 bps
Input packets :          1000          0 pps
Output packets:           0          0 pps
IPv6 transit statistics:
Input bytes   :          110000
Output bytes  :           0
Input packets :          1000
Output packets:           0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0,
MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          0              0              0
  1 expedited-fo        0              0              0
  2 assured-forw        0              0              0
  3 network-cont        0              0              0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
Active alarms   : None
Active defects  : None
PCS statistics      Seconds
  Bit errors          0
  Errored blocks      0
MAC statistics:      Receive      Transmit
Total octets         128000          0
Total packets         1000          0
Unicast packets       1000          0
Broadcast packets      0          0
Multicast packets      0          0
CRC/Align errors      0          0
FIFO errors           0          0
MAC control frames    0          0

```

```

MAC pause frames          0          0
Oversized frames          0
Jabber frames             0
Fragment frames           0
VLAN tagged frames        0
Code violations            0
Filter statistics:
  Input packet count       1000
  Input packet rejects     0
  Input DA rejects         0
  Input SA rejects         0
  Output packet count      0
  Output packet pad count  0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 2
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
  %      bps      %      usec
0 best-effort 95 9500000000 95 0 low
none
3 network-control 5 500000000 5 0 low
none
Interface transmit statistics: Disabled

Logical interface xe-2/1/0.0 (Index 83) (SNMP ifIndex 1677) (Generation 10082)

Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
Traffic statistics:
  Input bytes : 110000
  Output bytes : 0
  Input packets: 1000
  Output packets: 0
IPv6 transit statistics:
  Input bytes : 55000
  Output bytes : 0
  Input packets: 500
  Output packets: 0
Local statistics:
  Input bytes : 55000
  Output bytes : 0
  Input packets: 500
  Output packets: 0
Transit statistics:
  Input bytes : 55000 0 bps
  Output bytes : 0 0 bps
  Input packets: 500 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes : 55000
  Output bytes : 0
  Input packets: 500
  Output packets: 0
Protocol inet6, MTU: 1500, Generation: 23739, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 2001:0db8:0a0b:12f0:0000:0000:0000/112, Local:
2001:0db8:0a0b:12f0:0000:0000:0000:0001

```

```

Generation: 506
Addresses, Flags: Is-Preferred
  Destination: Odb8::/64, Local: Odb8::21d:b5ff:fef8:6deb
Protocol multiservice, MTU: Unlimited, Generation: 508
Generation: 23740, Route table: 0
  Policer: Input: __default_arp_policer__

```

show interfaces extensive (IQ2 and IQ2E)

```
user@host> show interfaces ge-3/2/2 extensive
```

```

Physical interface: ge-3/2/2, Enabled, Physical link is Up
Interface index: 156, SNMP ifIndex: 548, Generation: 159
Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
CoS queues     : 8 supported, 8 maximum usable queues
Schedulers    : 128
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped   : 2010-03-17 04:03:11 PDT (00:45:30 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          1716096          0 bps
Output bytes  :          1716448          0 bps
Input packets :           13407          0 pps
Output packets:           13411          0 pps
IPv6 total statistics:
Input bytes   :          1716096
Output bytes  :          1716096
Input packets :           13407
Output packets:           13407
Ingress traffic statistics at Packet Forwarding Engine:
Input bytes   :          1716096          0 bps
Input packets :           13407          0 pps
Drop bytes    :              0          0 bps
Drop packets  :              0          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 1, L2 mismatch timeouts: 0, FIFO errors:
0,
  Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets:
0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped
packets
  0 best-effort          13407          13407
0
  1 expedited-fo           0              0
0
  2 assured-forw          0              0
0
  3 network-cont          0              0
0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped

```

```

packets
  0 best-effort          13407          13407
0
  1 expedited-fo         0              0
0
  2 assured-forw         0              0
0
  3 network-cont         4              4
0
Active alarms : None
Active defects : None
MAC statistics:
  Total octets           1716096        1716448
  Total packets          13407          13411
  Unicast packets        13407          13407
  Broadcast packets      0              0
  Multicast packets      0              4
  CRC/Align errors       0              0
  FIFO errors            0              0
  MAC control frames     0              0
  MAC pause frames       0              0
  Oversized frames       0
  Jabber frames          0
  Fragment frames        0
  VLAN tagged frames     0
  Code violations         0
Filter statistics:
  Input packet count     13407
  Input packet rejects   0
  Input DA rejects       0
  Input SA rejects       0
  Output packet count    13411
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Complete
  Link partner:
    Link mode: Full-duplex, Flow control: None, Remote fault: OK
  Local resolution:
    Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
  Destination slot: 3
CoS information:
  Direction : Output
  CoS transmit queue
Limit
  0 best-effort          95      950000000    95      0      low
none
  3 network-control      5       50000000     5       0      low
none
  Direction : Input
  CoS transmit queue
Limit
  0 best-effort          95      950000000    95      0      low
none
  3 network-control      5       50000000     5       0      low
none

```

```

Logical interface ge-3/2/2.0 (Index 83) (SNMP ifIndex 6080) (Generation
148)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ] Encapsulation: ENET2
  Traffic statistics:
    Input bytes :          0
    Output bytes :         336
    Input packets:          0
    Output packets:         4
  IPv6 total statistics:
    Input bytes :       1716096
    Output bytes :       1716096
    Input packets:       13407
    Output packets:      13407
  Local statistics:
    Input bytes :          0
    Output bytes :         336
    Input packets:          0
    Output packets:         4
  Transit statistics:
    Input bytes :          0          0 bps
    Output bytes :          0          0 bps
    Input packets:          0          0 pps
    Output packets:          0          0 pps
  IPv6 total statistics:
    Input bytes :       1716096
    Output bytes :       1716096
    Input packets:       13407
    Output packets:      13407
  Protocol inet6, MTU: 1500, Generation: 159, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Primary
    Destination: Unspecified, Local: 2000::2
  Generation: 146
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::214:f600:6412:86fa
  Protocol multiservice, MTU: Unlimited, Generation: 148
  Generation: 160, Route table: 0
  Policer: Input: __default_arp_policer__

Logical interface ge-3/2/2.32767 (Index 84) (SNMP ifIndex 6081) (Generation
149)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2
  Traffic statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Local statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Transit statistics:
    Input bytes :          0          0 bps
    Output bytes :          0          0 bps
    Input packets:          0          0 pps
    Output packets:          0          0 pps
  Protocol multiservice, MTU: Unlimited, Generation: 161, Route table: 0

```

```
Flags: None
Policer: Input: __default_arp_policer__
```

show interfaces extensive (100-Gigabit Ethernet Type 4 PIC with CFP)

```
user@host> show interfaces et-0/0/0:0 extensive
```

```
Physical interface: et-0/0/0:0, Enabled, Physical link is Down
  Interface index: 156, SNMP ifIndex: 516, Generation: 163
  Link-level type: Ethernet, MTU: 9192, Speed: 50000mbps, BPDU Error: None,
  MAC-REWRITE Error: None,
  Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running Down
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 8 maximum usable queues
  Hold-times    : Up 0 ms, Down 0 ms
  Damping       : half-life: 5 sec, max-suppress: 20 sec, reuse 1000, suppress:
2000, state: enabled
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped   : 2010-01-07 16:36:49 PST (18:02:35 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0          0 bps
    Output bytes  : 0          0 bps
    Input packets : 0          0 pps
    Output packets: 0          0 pps
  IPv6 transit statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors:
0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0,
    HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 8 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets
    0 DEFAULT, NC-  0          0          0
    1 REALTIME      0          0          0
    2 PRIVATE, NC-  0          0          0
    3 CONTROL       1253         1253         0
    4 BC-H, CLASS_  0          0          0
    5 BC-M, CLASS_  0          0          0
    6 IA, CLASS_V_  0          0          0
    7 CLASS_S_OUTP  0          0          0
```

```

Queue      Mapped Forwarding Class
0          DEFAULT, NC-Q0
1          REALTIME
2          PRIVATE, NC-Q1
3          CONTROL
4          BC-H, CLASS-Q4
5          BC-M, CLASS-Q5
6          IA, CLASS_V_OUTPUT
7          CLASS_S_OUTPUT
Active alarms : None
Active defects : None
MAC statistics:
Total octets          Receive          Transmit
Total packets         0              0
Unicast packets       0              0
Broadcast packets     0              0
Multicast packets     0              0
CRC/Align errors      0              0
FIFO errors           0              0
MAC control frames    0              0
MAC pause frames      0              0
Oversized frames      0
Jabber frames         0
Fragment frames       0
VLAN tagged frames    0
Code violations        0
Packet Forwarding Engine configuration:
Destination slot: 0
CoS information:
Direction : Output
CoS transmit queue    Bandwidth          Buffer Priority Limit

                                %      bps      %      usec
0 best-effort          95    47500000000    95      0      low none
3 network-control      5     2500000000     5       0      low none

Logical interface et-0/0/0:0.0 (Index 68) (SNMP ifIndex 546) (Generation 161)
Flags: Deviet-Down SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes :          0
Output bytes :          0
Input packets:         0
Output packets:        0
Local statistics:
Input bytes :          0
Output bytes :          0
Input packets:         0
Output packets:        0
Transit statistics:
Input bytes :          0          0 bps
Output bytes :          0          0 bps
Input packets:         0          0 pps
Output packets:        0          0 pps
Protocol inet, MTU: 9178, Generation: 220, Route table: 0
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 192.168.220.24/30, Local: 192.168.220.26, Broadcast:
192.168.220.27, Generation: 192
Protocol mpls, MTU: 9166, Maximum labels: 3, Generation: 221, Route table: 0

```



```
Protocol multiservice, MTU: Unlimited, Generation: 222, Route table: 0
  Policer: Input: __default_arp_policer
```

show interfaces extensive (PTX5000 Packet Transport Router)

```
user@host> show interfaces et-0/0/6 extensive
```

```
Physical interface: et-0/0/6, Enabled, Physical link is Up
  Interface index: 347, SNMP ifIndex: 531, Generation: 350
  Link-level type: Ethernet, MTU: 1514, Speed: 40Gbps, BPDU Error: None, Loop
Detect PDU Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Damping        : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
  Current address: 30:b6:4f:02:29:06, Hardware address: 30:b6:4f:02:29:06
  Last flapped   : 2017-02-15 21:40:06 PST (22:55:13 ago)
  Statistics last cleared: 2017-02-16 20:33:02 PST (00:02:17 ago)
  Traffic statistics:
    Input bytes   :          1760000          0 bps
    Output bytes  :          1540000          0 bps
    Input packets :           16000          0 pps
    Output packets:           14000          0 pps
  IPv6 transit statistics:
    Input bytes   :          880000
    Output bytes  :          770000
    Input packets :           8000
    Output packets:           7000
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0                   7000             7000                0
    1                    0              0                  0
    2                    0              0                  0
    3                   7000             7000                0

  Queue number:      Mapped forwarding classes
    0                 best-effort
    1                 expedited-forwarding
    2                 assured-forwarding
    3                 network-control
  Active alarms      : None
  Active defects      : None
  PCS statistics
    Bit errors                Seconds
                                0
```

```

    Errored blocks                                0
MAC statistics:
    Receive                                     Transmit
    Total octets                               2048000    1792000
    Total packets                              16000         14000
    Unicast packets                            16000         14000
    Broadcast packets                           0             0
    Multicast packets                           0             0
    CRC/Align errors                           0             0
    FIFO errors                                0             0
    MAC control frames                          0             0
    MAC pause frames                           0             0
    Oversized frames                           0
    Jabber frames                              0
    Fragment frames                            0
    VLAN tagged frames                          0
    Code violations                            0
Filter statistics:
    Input packet count                          0
    Input packet rejects                        0
    Input DA rejects                           0
    Input SA rejects                           0
    Output packet count                          0
    Output packet pad count                      0
    Output packet error count                    0
    CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
    Destination slot: 0 (0x00)
CoS information:
    Direction : Output
    CoS transmit queue          Bandwidth          Buffer Priority
Limit
    %          bps          %          usec
    0 best-effort          95    380000000000    95          0    low
none
    3 network-control      5    20000000000    5          0    low
none
Preclassifier statistics:
    Traffic Class      Received Packets    Transmitted Packets    Dropped
best-effort
0
best-effort
0
best-effort
0
best-effort
0
best-effort
0
best-effort
0
best-effort
0
best-effort
0
best-effort
0
best-effort
0
Link Degradate :
    Link Monitoring          : Disable
Interface transmit statistics: Disabled

Logical interface et-0/0/6.0 (Index 93) (SNMP ifIndex 841) (Generation 158)

```

```

Flags: Up SNMP-Traps 0x4004000 Encapsulation: ENET2
Traffic statistics:
  Input bytes :          1760000
  Output bytes :          1540000
  Input packets:           16000
  Output packets:          14000
IPv6 transit statistics:
  Input bytes :          880000
  Output bytes :          770000
  Input packets:           8000
  Output packets:          7000
Local statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Transit statistics:
  Input bytes :          1760000          0 bps
  Output bytes :          1540000          0 bps
  Input packets:           16000          0 pps
  Output packets:          14000          0 pps
IPv6 transit statistics:
  Input bytes :          880000
  Output bytes :          770000
  Input packets:           8000
  Output packets:          7000
Protocol inet, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 206, Route table: 0
  Flags: Sendbroadcast-pkt-to-re
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: 11.0.0/24, Local: 11.0.0.2, Broadcast: 11.0.0.255, Generation:
228
  Protocol inet6, MTU: 1500
  Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
  Generation: 207, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: 1100::/120, Local: 1100::2
  Generation: 230
  Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::32b6:4fff:fe02:2906
Protocol multiservice, MTU: Unlimited, Generation: 232
Generation: 208, Route table: 0
  Policer: Input: __default_arp_policer__

```

ssh show interfaces extensive (PTX Routers)

```
user@host> show interfaces ae31 extensive
```

```

Physical interface: ae31, Enabled, Physical link is Up
  Interface index: 137, SNMP ifIndex: 511, Generation: 140
  Link-level type: Ethernet, MTU: 1518, Speed: 3Gbps, BPDU Error: None, MAC-REWRITE
Error: None, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Disabled
  Pad to minimum frame size: Disabled
  Minimum links needed: 1, Minimum bandwidth needed: 1bps

```

```
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000, LAG_Enhanced
```

show interfaces extensive (PTX10008 Routers)

```
user@host> show interfaces ae0 extensive
```

```
Physical interface: ae0, Enabled, Physical link is Up
  Interface index: 917, SNMP ifIndex: 817, Generation: 4436
  Link-level type: Ethernet, MTU: 1518, Speed: 20Gbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
  control: Disabled, Minimum links needed: 1,
  Minimum bandwidth needed: 1bps
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Current address: 30:b6:4f:e9:7c:05, Hardware address: 30:b6:4f:e9:7c:05
  Last flapped   : 2017-04-10 05:20:29 PDT (00:03:52 ago)
  Statistics last cleared: 2017-04-10 05:21:52 PDT (00:02:29 ago)
  Traffic statistics:
    Input bytes :          36463816334          0 bps
    Output bytes :          36463816334          0 bps
    Input packets:           24671053          0 pps
    Output packets:          24671053          0 pps
  IPv6 transit statistics:
    Input bytes :          18231905950
    Output bytes :          18231905950
    Input packets:           12335525
    Output packets:          12335525
  MAC statistics:
    Broadcast packets          0          0
    Multicast packets          0          0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
  0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
  0
  Egress queues: 8 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets
    0                24671053             24671053          0
    1                  0                  0                0
    2                  0                  0                0
    3                  0                  0                0
  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  Logical interface ae0.0 (Index 99) (SNMP ifIndex 832) (Generation 43813)
  Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
  Statistics
  Bundle:
    Packets      pps      Bytes      bps
    Input :      4934211      0      7292763858      0
    Output:      4934211      0      7292763858      0
```

```

Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:     0
Link:
  et-0/0/28:0.0
    Input :      4934211      0      7292763858      0
    Output:     4934211      0      7292763858      0
  et-0/0/28:3.0
    Input :      0      0      0      0
    Output:      0      0      0      0

Aggregate member links: 2

Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  et-0/0/28:0.0      0      0      0      0
  et-0/0/28:3.0      0      0      0      0
Protocol inet, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89219, Route table: 0
Flags: Sendbroadcast-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 21.0.0.0/30, Local: 21.0.0.1, Broadcast: 21.0.0.3, Generation:
62420
Protocol inet6, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 2, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89220, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 3001::1500:0/126, Local: 3001::1500:1
Generation: 62422
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::32b6:4f00:2e9:7c05
Protocol multiservice, MTU: Unlimited, Generation: 62424
Generation: 89221, Route table: 0
Policer: Input: __default_arp_policer__

Logical interface ae0.1 (Index 100) (SNMP ifIndex 833) (Generation 43814)
Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.3 ] Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :      4934211      0      7292763858      0
  Output:     4934211      0      7292763858      0
Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:     0
Link:
  et-0/0/28:0.1
    Input :      0      0      0      0
    Output:     4934211      0      7292763858      0
  et-0/0/28:3.1
    Input :      4934211      0      7292763858      0
    Output:      0      0      0      0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  et-0/0/28:0.1      0      0      0      0
  et-0/0/28:3.1      0      0      0      0
Protocol inet, MTU: 1500

```

```

Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89222, Route table: 0
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 21.0.0.4/30, Local: 21.0.0.5, Broadcast: 21.0.0.7, Generation:
62426
Protocol inet6, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 2, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89223, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 3001::1500:4/126, Local: 3001::1500:5
Generation: 62428
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::32b6:4f00:3e9:7c05
Protocol multiservice, MTU: Unlimited, Generation: 62430
Generation: 89224, Route table: 0
Policer: Input: __default_arp_policer__

Logical interface ae0.2 (Index 101) (SNMP ifIndex 834) (Generation 43815)
Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.4 ] Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :      4934211          0  7292763858          0
  Output:      4934211          0  7292763858          0
Adaptive Statistics:
  Adaptive Adjusts:          0
  Adaptive Scans :          0
  Adaptive Updates:          0
Link:
  et-0/0/28:0.2
    Input :      2467106          0  3646382668          0
    Output:      4934211          0  7292763858          0
  et-0/0/28:3.2
    Input :      2467105          0  3646381190          0
    Output:          0          0          0          0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  et-0/0/28:0.2          0          0          0          0
  et-0/0/28:3.2          0          0          0          0
Protocol inet, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89225, Route table: 0
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 21.0.0.8/30, Local: 21.0.0.9, Broadcast: 21.0.0.11,
Generation: 62432
Protocol inet6, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89226, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 3001::1500:8/126, Local: 3001::1500:9
Generation: 62434
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::32b6:4f00:4e9:7c05
Protocol multiservice, MTU: Unlimited, Generation: 62436
Generation: 89227, Route table: 0
Policer: Input: __default_arp_policer__

```

```

Logical interface ae0.3 (Index 102) (SNMP ifIndex 835) (Generation 43816)
Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.5 ] Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :      4934210      0      7292762380      0
  Output:      4934210      0      7292762380      0
Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:      0
Link:
  et-0/0/28:0.3
    Input :      4934210      0      7292762380      0
    Output:      0      0      0      0
  et-0/0/28:3.3
    Input :      0      0      0      0
    Output:      4934210      0      7292762380      0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  et-0/0/28:0.3      0      0      0      0
  et-0/0/28:3.3      0      0      0      0
Protocol inet, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89228, Route table: 0
Flags: Sendbcast-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 21.0.0.12/30, Local: 21.0.0.13, Broadcast: 21.0.0.15,
Generation: 62438
Protocol inet6, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 2, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89229, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 3001::1500:c/126, Local: 3001::1500:d
Generation: 62440
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::32b6:4f00:5e9:7c05
Protocol multiservice, MTU: Unlimited, Generation: 62442
Generation: 89230, Route table: 0
Policer: Input: __default_arp_policer__

```

```

Logical interface ae0.4 (Index 103) (SNMP ifIndex 836) (Generation 43817)
Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.6 ] Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :      4934210      0      7292762380      0
  Output:      4934210      0      7292762380      0
Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:      0
Link:
  et-0/0/28:0.4
    Input :      2467105      0      3646381190      0
    Output:      2467105      0      3646381190      0
  et-0/0/28:3.4
    Input :      2467105      0      3646381190      0
    Output:      2467105      0      3646381190      0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx

```

```

et-0/0/28:0.4          0          0          0          0
et-0/0/28:3.4          0          0          0          0
Protocol inet, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89231, Route table: 0
Flags: Sendbcast-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 21.0.0.16/30, Local: 21.0.0.17, Broadcast: 21.0.0.19,
Generation: 62444
Protocol inet6, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 2, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89232, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 3001::1500:10/126, Local: 3001::1500:11
Generation: 62446
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::32b6:4f00:6e9:7c05
Protocol multiservice, MTU: Unlimited, Generation: 62448
Generation: 89233, Route table: 0
Policer: Input: __default_arp_policer__

Logical interface ae0.32767 (Index 104) (SNMP ifIndex 5645) (Generation 43818)

Flags: Up SNMP-Traps 0x4004000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2
Statistics          Packets          pps          Bytes          bps
Bundle:
  Input :              0              0              0              0
  Output:              0              0              0              0
Adaptive Statistics:
  Adaptive Adjusts:          0
  Adaptive Scans :          0
  Adaptive Updates:         0
Link:
  et-0/0/28:0.32767
    Input :              0              0              0              0
    Output:              0              0              0              0
  et-0/0/28:3.32767
    Input :              0              0              0              0
    Output:              0              0              0              0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
et-0/0/28:0.32767          0              0              0              0
et-0/0/28:3.32767          0              0              0              0
Protocol multiservice, MTU: Unlimited, Generation: 89234, Route table: 0
Flags: None
Policer: Input: __default_arp_policer__

```

show interfaces extensive (PTX1000 Routers)

```
user@host> show interfaces et-0/0/48:1 extensive
```

```

Physical interface: et-0/0/48:1, Enabled, Physical link is Up
Interface index: 306, SNMP ifIndex: 697, Generation: 311
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loop Detect PDU Error: None, MAC-REWRITE Error: None, Loopback: None,
Source filtering: Disabled,
Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000

```



```

Link flags      : None
CoS queues     : 8 supported, 8 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Damping       : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
Current address: ec:13:db:62:4a:f6, Hardware address: ec:13:db:62:4a:f6
Last flapped   : 2017-05-08 11:07:59 PDT (12:08:13 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   : 0 0 bps
  Output bytes  : 0 0 bps
  Input packets : 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0                    0                0                0
  1                    0                0                0
  2                    0                0                0
  3                    0                0                0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
Active alarms : None
Active defects : None
PCS statistics      Seconds
  Bit errors        3
  Errored blocks    3
MAC statistics:      Receive      Transmit
  Total octets      0            0
  Total packets     0            0
  Unicast packets   0            0
  Broadcast packets 0            0
  Multicast packets 0            0
  CRC/Align errors  0            0
  FIFO errors       0            0
  MAC control frames 0            0
  MAC pause frames  0            0
  Oversized frames  0
  Jabber frames     0
  Fragment frames   0
  VLAN tagged frames 0

```

```

    Code violations                                0
  Filter statistics:
    Input packet count                            0
    Input packet rejects                          0
    Input DA rejects                              0
    Input SA rejects                              0
    Output packet count                           0
    Output packet pad count                       0
    Output packet error count                     0
    CAM destination filters: 0, CAM source filters: 0
  Packet Forwarding Engine configuration:
    Destination slot: 0 (0x00)
  CoS information:
    Direction : Output
    CoS transmit queue          Bandwidth          Buffer Priority
Limit          %          bps          %          usec          low
    0 best-effort          95          9500000000          95          0          low
  none
    3 network-control          5          500000000          5          0          low
  none
  Link Degrade :
    Link Monitoring          : Disable
  Interface transmit statistics: Disabled

```

show interfaces extensive (MX Series Routers)

```
user@host> show interfaces xe-0/0/0 extensive
```

```

Physical interface: xe-0/0/0, Enabled, Physical link is Up
  Interface index: 145, SNMP ifIndex: 592, Generation: 148
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
  None,
  Loopback: None, Source filtering: Disabled, Flow control: Enabled
  Pad to minimum frame size: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x0
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped   : 2013-10-26 03:20:40 test (2w3d 03:15 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          0          0 bps
    Output bytes :          0          0 bps
    Input packets:          0          0 pps
    Output packets:          0          0 pps
  IPv6 transit statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Dropped traffic statistics due to STP State:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,

```

```

L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors:
0,
Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets    Transmitted packets      Dropped packets

    0                      0              0              0
    1                      0              0              0
    2                      0              0              0
    3                      0              0              0

Queue number:      Mapped forwarding classes
    0              best-effort
    1              expedited-forwarding
    2              assured-forwarding
    3              network-control
Active alarms : LINK
Active defects : LINK
PCS statistics      Seconds
    Bit errors      109
    Errored blocks  109
MAC statistics:      Receive      Transmit
    1              0              0              0
    2              0              0              0
    3              0              0              0

Queue number:      Mapped forwarding classes
    0              best-effort
    1              expedited-forwarding
    2              assured-forwarding
    3              network-control
Active alarms : LINK
Active defects : LINK
PCS statistics      Seconds
    Bit errors      109
    Errored blocks  109
MAC statistics:      Receive      Transmit
    Total octets    0              0
    Total packets   0              0
    Unicast packets 0              0
    Broadcast packets 0              0
    Multicast packets 0              0
    CRC/Align errors 0              0
    FIFO errors      0              0
    MAC control frames 0              0
    MAC pause frames 0              0
    Oversized frames 0
    Jabber frames    0
    Fragment frames  0
    VLAN tagged frames 0
    Code violations  0

```

```

    Total errors                                0                0
    Filter statistics:
      Input packet count                        0
      Input packet rejects                     0
      Input DA rejects                         0
      Input SA rejects                         0
      Output packet count                      0
      Output packet pad count                  0
      Output packet error count                0
      CAM destination filters: 0, CAM source filters: 0
    Packet Forwarding Engine configuration:
      Destination slot: 0
    CoS information:
      Direction : Output
      CoS transmit queue                      Bandwidth          Buffer Priority
Limit                                     %          bps          %          usec          low
      0 best-effort                          95      9500000000      95          0          low
none
      3 network-control                       5       500000000       5          0          low
none
    Interface transmit statistics: Disabled

```

When an ASIC is wedged, the interfaces are brought down along with the IFD. The reason for the link down is displayed as **ASIC-Error** in the **Device flags**.

```
user@host> show interfaces xe-1/0/0 extensive
```

```

Physical interface: xe-1/0/0, Administratively down, Physical link is Down
  Interface index: 147, SNMP ifIndex: 563, Generation: 150
  Link-level type: Ethernet, MTU: 1514, MRU: 0, LAN-PHY mode, Speed: 10Gbps, BPDU
  Error: None, Loop Detect PDU Error: None,
  MAC-REWRITE Error: None, Loopback: None, Source filtering: Disabled, Flow
  control: Disabled
  Pad to minimum frame size: Disabled
  Device flags   : Present Running Down ASIC-Error
  Interface flags: Hardware-Down Down Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Schedulers     : 0
  Hold-times     : Up 0 ms, Down 0 ms
  Damping        : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
  state: unsuppressed
  Current address: cc:e1:7f:a8:05:4a, Hardware address: cc:e1:7f:a8:05:4a
  Last flapped   : 2017-06-05 17:20:54 PDT (00:03:51 ago)
  Statistics last cleared: Never

```

show interfaces extensive (MX480 Router with MPC5E and 10-Gigabit Ethernet OTN Interface)

```
user@host> show interfaces xe-0/0/3 extensive
```

```

Physical interface: xe-0/0/3, Enabled, Physical link is Up
  Interface index: 200, SNMP ifIndex: 577, Generation: 203
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, LAN-PHY mode, Speed: 10Gbps,
  BPDU Error: None, MAC-REWRITE Error: None, Loopback: None, Source filtering:
  Disabled, Flow control: Enabled
  Pad to minimum frame size: Disabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

```

```

CoS queues      : 8 supported, 8 maximum usable queues
Schedulers     : 0
Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped    : 2014-06-26 18:16:50 PDT (04:58:35 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :                      0                0 bps
  Output bytes  :                      0                0 bps
  Input packets :                      0                0 pps
  Output packets:                      0                0 pps
IPv6 transit statistics:
  Input bytes   :                      0
  Output bytes  :                      0
  Input packets :                      0
  Output packets:                      0
Dropped traffic statistics due to STP State:
  Input bytes   :                      0
  Output bytes  :                      0
  Input packets :                      0
  Output packets:                      0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0                      0                0                0
    1                      0                0                0
    2                      0                0                0
    3                      0                0                0

Queue number:        Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
Active alarms : None
Active defects : None
PCS statistics                      Seconds
  Bit errors                      0
  Errored blocks                  4
MAC statistics:                      Receive      Transmit
  Total octets                    0                0
  Total packets                   0                0
  Unicast packets                 0                0
  Broadcast packets               0                0
  Multicast packets               0                0
  CRC/Align errors                0                0
  FIFO errors                     0                0
  MAC control frames              0                0
  MAC pause frames                0                0
  Oversized frames                0

```

```

Jabber frames          0
Fragment frames        0
VLAN tagged frames     0
Code violations         0
Total errors           0          0
Filter statistics:
  Input packet count    0
  Input packet rejects  0
  Input DA rejects      0
  Input SA rejects      0
  Output packet count   0
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
CoS information:
  Direction : Output
  CoS transmit queue    Bandwidth          Buffer Priority
Limit
  0 best-effort         95      95000000000    95          usec      low
none
  3 network-control     5       500000000     5           0         low
none
Interface transmit statistics: Disabled

```

show interfaces extensive (MX480 Router with MPC5E and 100-Gigabit Ethernet OTN Interface)

```

user@host> show interfaces et-2/1/0 extensive

Physical interface: et-2/1/0, Enabled, Physical link is Up
  Interface index: 215, SNMP ifIndex: 872, Generation: 218
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, Speed: 100Gbps, BPDU Error:
None, Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
  Pad to minimum frame size: Disabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Schedulers     : 0
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped   : 2014-06-26 18:42:04 PDT (04:36:58 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0          0 bps
  Output bytes : 0          0 bps
  Input packets: 0          0 pps
  Output packets: 0          0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Dropped traffic statistics due to STP State:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0

```

```

Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 263, Errors: 0, Drops: 0, Collisions: 0, Aged packets:
0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0                      0              0              0
    1                      0              0              0
    2                      0              0              0
    3                      0              0              0

Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control

Active alarms : None
Active defects : None
PCS statistics                      Seconds
  Bit errors                      0
  Errored blocks                  754
MAC statistics:                      Receive      Transmit
  Total octets                   14960          0
  Total packets                  104           0
  Unicast packets                0           0
  Broadcast packets              0           0
  Multicast packets              0           0
  CRC/Align errors               0           0
  FIFO errors                    0           0
MAC control frames                0           0
  MAC pause frames               0           0
  Oversized frames               0
  Jabber frames                  2
  Fragment frames                6
  VLAN tagged frames             0
  Code violations                0
  Total errors                   98           0
Filter statistics:
  Input packet count             104
  Input packet rejects           0
  Input DA rejects               0
  Input SA rejects               0
  Output packet count            0
  Output packet pad count        0
  Output packet error count      0
  CAM destination filters: 0, CAM source filters: 0
OTN alarms      : None
OTN defects     : None
OTN FEC Mode    : GFEC
OTN Rate        :      OTU4 100Gbps
OTN Line Loopback : None
OTN Local Loopback: None
OTN Payload PRBS  : None

```

```

OTN FEC statistics:
  Corrected Errors                      169828399453
  Uncorrected Words                    28939961456
  Corrected Error Ratio (      17963 sec average) 8.46e-05
OTN FEC alarms:      Seconds      Count  State
  FEC Degrade         1180          3   OK
  FEC Excessive       1160          5   OK
OTN OC:              Seconds      Count  State
  LOS                 129          1   OK
  LOF                  2          1   OK
  LOM                  0          0   OK
  Wavelength Lock     0          0   OK
OTN OTU:
  AIS                  0          0   OK
  BDI                   7          1   OK
  IAE                   0          0   OK
  TTIM                 168         45   OK
  BIAE                  0          0   OK
  TSF                   0          0   OK
  SSF                   0          0   OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN ODU:
  AIS                  130          1   OK
  OCI                   0          0   OK
  LCK                   0          0   OK
BDI                     7          1   OK
  TTIM                 133          1   OK
  IAE                   0          0   OK
  LTC                   0          0   OK
  CSF                    8          4   OK
  TSF                   0          0   OK
  SSF                   0          0   OK
  PTIM                 130          1   OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x00
ODU Delay Management :
  Result : 0x00
PRBS:
  Result: Test not enabled
OTN Transmitted Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x00
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```



```

CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit                    %      bps      %      usec      low
  0 best-effort          95    95000000000    95      0      low
none
  3 network-control      5     5000000000     5      0      low
none
  Interface transmit statistics: Disabled

```

show interfaces extensive ((MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC))

```

user@host> show interfaces et-3/0/0 extensive

Physical interface: et-3/0/0, Enabled, Physical link is Up
  Interface index: 163, SNMP ifIndex: 564, Generation: 166
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, Speed: 100Gbps, BPDU Error:
None, Loopback: Disabled, Source filtering:
Disabled,
  Flow control: Enabled
  Pad to minimum frame size: Disabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  Wavelength     : 1550.12 nm, Frequency: 193.40 THz
  CoS queues     : 8 supported, 8 maximum usable queues
  Schedulers     : 0
  Hold-times     : Up 0 ms, Down 0 ms
  Damping        : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped   : 2016-02-17 14:26:31 PST (09:04:28 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0          0 bps
    Output bytes  : 0          0 bps
    Input packets : 0          0 pps
    Output packets: 0          0 pps
  IPv6 transit statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Dropped traffic statistics due to STP State:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU
errors: 0,
    Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

```

0	0	0	0
1	0	0	0
2	0	0	0
3	0	0	0
Queue number: Mapped forwarding classes			
0	best-effort		
1	expedited-forwarding		
2	assured-forwarding		
3	network-control		
Active alarms : None			
Active defects : None			
PCS statistics		Seconds	
Bit errors		8	
Errored blocks		10	
MAC statistics:		Receive	Transmit
Total octets		0	0
Total packets		0	0
Unicast packets		0	0
Broadcast packets		0	0
Multicast packets		0	0
CRC/Align errors		0	0
FIFO errors		0	0
MAC control frames		0	0
MAC pause frames		0	0
Oversized frames		0	
Jabber frames		0	
Fragment frames		0	
VLAN tagged frames		0	
Code violations		0	
Total errors		0	0
Filter statistics:			
Input packet count		0	
Input packet rejects		0	
Input DA rejects		0	
Input SA rejects		0	
Output packet count			0
Output packet pad count			0
Output packet error count			0
CAM destination filters: 0, CAM source filters: 0			
OTN alarms : None			
OTN defects : None			
OTN FEC Mode : SDFEC			
OTN Rate : OTU4 (120.5Gbps)			
OTN Line Loopback : None			
OTN Local Loopback: None			
OTN Payload PRBS : None			
OTN Laser Enable : On			
OTN FEC statistics:			
Corrected Errors		7065332638	
Uncorrected Words		3412572	
Corrected Error Ratio (32785 sec average) 1.79e-06 (INVALID)			
OTN FEC alarms:		Seconds	Count State
FEC Degrade		0	0 OK
FEC Excessive		3	1 OK
OTN OC:		Seconds	Count State

```

LOS                3                1 OK
LOF                50               3 OK
LOM                3                3 OK
Wavelength Lock    0                0 OK
OTN OTU:
AIS                0                0 OK
BDI                4                4 OK
IAE                4                4 OK
TTIM               1                1 OK
BIAE               3                3 OK
TSF                50               3 OK
SSF                50               3 OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN ODU:
AIS                20               2 OK
OCI                4                4 OK
LCK                4                4 OK
BDI                2                2 OK
TTIM               20               2 OK
IAE                0                0 OK
LTC                0                0 OK
CSF                18               2 OK
TSF                66               2 OK
SSF                66               2 OK
PTIM               43               2 OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x07
ODU Delay Management :
Result : 0ms
PRBS:
Result: Test not enabled
OTN Transmitted Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x07
Packet Forwarding Engine configuration:
Destination slot: 0 (0x00)
CoS information:
Direction : Output
CoS transmit queue      Bandwidth      Buffer Priority
Limit
                                %      bps      %      usec
0 best-effort           95    95000000000    95      0      low
none
3 network-control       5     50000000000    5      0      low

```

```

none
Interface transmit statistics: Disabled

```

show interfaces extensive (PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC)

```

user@host > show interfaces extensive et-4/0/0
Physical interface: et-4/0/0, Enabled, Physical link is Up
  Interface index: 148, SNMP ifIndex: 544, Generation: 161
  Link-level type: Ethernet, MTU: 1514, Speed: 100Gbps, BPDU Error: None, Loopback:
  Disabled, Source filtering: Disabled,
  Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  Wavelength    : 1550.12 nm, Frequency: 193.40 THz
  CoS queues    : 8 supported, 8 maximum usable queues
  Hold-times    : Up 0 ms, Down 0 ms
  Damping       : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped   : 2016-06-04 21:42:42 PDT (1d 05:09 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0                      0 bps
    Output bytes  : 0                      0 bps
    Input packets : 0                      0 pps
    Output packets: 0                      0 pps
  IPv6 transit statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
  Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0                0                0                0
    1                0                0                0
    2                0                0                0
    3                0                0                0

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  Active alarms   : None
  Active defects  : None
  PCS statistics           Seconds

```

```

    Bit errors                                7
    Errored blocks                            10
    MAC statistics:
        Receive                               Transmit
        Total octets                          0          0
        Total packets                         0          0
        Unicast packets                       0          0
        Broadcast packets                     0          0
        Multicast packets                     0          0
        CRC/Align errors                      0          0
        FIFO errors                           0          0
        MAC control frames                    0          0
        MAC pause frames                      0          0
        Oversized frames                      0
        Jabber frames                         0
        Fragment frames                       0
        VLAN tagged frames                    0
        Code violations                        0
    Filter statistics:
        Input packet count                    0
        Input packet rejects                   0
        Input DA rejects                      0
        Input SA rejects                      0
        Output packet count                    0
        Output packet pad count                0
        Output packet error count              0
    CAM destination filters: 0, CAM source filters: 0
    OTN alarms : None
    OTN defects : None
    OTN FEC Mode : SDFEC
    OTN Rate : OTU4 (120.5Gbps)
    OTN Line Loopback : None
    OTN Local Loopback: None
    OTN Payload PRBS : None
    OTN Laser Enable : On
    OTN FEC statistics:
        Corrected Errors                      19637746
        Uncorrected Words                      0
        Corrected Error Ratio ( 104923 sec average) 1.55e-09
    OTN FEC alarms:
        Seconds      Count      State
        FEC Degrade   0          0 OK
        FEC Excessive 0          0 OK
    OTN OC:
        Seconds      Count      State
        LOS           0          0 OK
        LOF           2          1 OK
        LOM           2          1 OK
        Wavelength Lock 0          0 OK
    OTN OTU:
        AIS           0          0 OK
        BDI           2          1 OK
        IAE           0          0 OK
        TTIM          0          0 OK
        BIAE          0          0 OK
        TSF           2          1 OK
        SSF           0          0 OK
    Received DAPI:
    00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
    Received SAPI:
    00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
    Transmitted DAPI:
    00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....

```

```

Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN ODU:
AIS                0                0 OK
OCI                0                0 OK
LCK                0                0 OK
BDI                2                1 OK
TTIM               0                0 OK
IAE                0                0 OK
LTC                0                0 OK
CSF                0                0 OK
TSF                2                1 OK
SSF                0                0 OK
PTIM               2                1 OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x07
ODU Delay Management :
Result : 0ms
PRBS:
Result: Test not enabled
OTN Transmitted Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x07
Packet Forwarding Engine configuration:
Destination slot: 0 (0x00)
CoS information:
Direction : Output
CoS transmit queue      Bandwidth      Buffer Priority
Limit
%      bps      %      usec
0 best-effort      95      950000000000      95      0      low
none
3 network-control  5      50000000000      5      0      low
none
Interface transmit statistics: Disabled

```

show interfaces extensive (MX2020 Router with MPC6E and OTN MIC)

```

user@host> show interfaces xe-3/0/0 extensive

Physical interface: xe-3/0/0, Enabled, Physical link is Up
  Interface index: 166, SNMP ifIndex: 516, Generation: 169
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, LAN-PHY mode, Speed: 10Gbps,
  BPDU Error:
  None, MAC-REWRITE Error: None, Loopback: None, Source filtering: Disabled, Flow
  control:
  Enabled
    Pad to minimum frame size: Disabled
    Device flags : Present Running
    Interface flags: SNMP-Traps Internal: 0x4000
    Link flags : None

```

```

CoS queues      : 8 supported, 8 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped   : 2014-05-28 17:53:12 PDT (05:56:24 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :                0                0 bps
  Output bytes  :                0                0 bps
  Input packets :                0                0 pps
  Output packets:                0                0 pps
IPv6 transit statistics:
  Input bytes   :                0
  Output bytes  :                0
  Input packets :                0
  Output packets:                0
Dropped traffic statistics due to STP State:
  Input bytes   :                0
  Output bytes  :                0
  Input packets :                0
  Output packets:                0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Policed discards: 0, L3
incompletes:
0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors:
0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO
errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort                0                0                0

  1 expedited-forwarding                0                0
    0
  2 assured-forwarding                0                0
    0
  3 network-control                0                0
    0
Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
Active alarms   : None
Active defects  : None
PCS statistics      Seconds
  Bit errors                2
  Errored blocks            2
MAC statistics:      Receive      Transmit
  Total octets                0                0
  Total packets                0                0
  Unicast packets              0                0
  Broadcast packets            0                0
  Multicast packets            0                0
  CRC/Align errors            0                0
FIFO errors        0                0
  MAC control frames          0                0
  MAC pause frames            0                0

```

```

Oversized frames          0
Jabber frames             0
Fragment frames          0
VLAN tagged frames       0
Code violations           0
Total errors              0          0
Filter statistics:
  Input packet count      0
  Input packet rejects    0
  Input DA rejects       0
  Input SA rejects       0
  Output packet count     0
  Output packet pad count 0
  Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
OTN alarms      : None
OTN defects     : None
OTN FEC Mode    : GFEC
OTN Rate       : Fixed Stuff Bytes 11.0957Gbps
OTN Line Loopback : None
OTN Local Loopback: None
OTN Payload PRBS  : None
OTN FEC statistics:
  Corrected Errors          0
  Uncorrected Words        0
  Corrected Error Ratio (    21387 sec average) 0.00e+00
OTN FEC alarms:
  Seconds      Count  State
  FEC Degrade   0      0  OK
  FEC Excessive 0      0  OK
OTN OC:
  Seconds      Count  State
  LOS          0      0  OK
  LOF          0      0  OK
  LOM          0      0  OK
  Wavelength Lock 0      0  OK
OTN OTU:
  AIS          0      0  OK
  BDI          0      0  OK
  IAE          0      0  OK
  TTIM         0      0  OK
  BIAE         0      0  OK
  TSF          0      0  OK
  SSF          0      0  OK
Received DAPI:
00 53 4d 2d 54 52 43 20 44 41 50 49 2d 53 45 43 .SM-TRC DAPI-SEC
Received SAPI:
00 53 4d 2d 54 52 43 20 53 41 50 49 2d 53 45 43 .SM-TRC SAPI-SEC
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN ODU:
  AIS          0      0  OK
  OCI          0      0  OK
LCK           0      0  OK
  BDI          0      0  OK
  TTIM         0      0  OK
  IAE          0      0  OK
  LTC          0      0  OK
  CSF          0      0  OK
  TSF          0      0  OK

```



```

SSF                                0                0 OK
PTIM                              0                0 OK
Received DAPI:
00 50 4d 2d 54 52 43 20 44 41 50 49 2d 53 45 43 .PM-TRC DAPI-SEC
Received SAPI:
00 50 4d 2d 54 52 43 20 53 41 50 49 2d 53 45 43 .PM-TRC SAPI-SEC
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x00
ODU Delay Management :
Result : 0x00
PRBS:
Result: Test not enabled
OTN Transmitted Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x00
Packet Forwarding Engine configuration:
Destination slot: 0 (0x00)
CoS information:
Direction : Output
CoS transmit queue
Limit
          %      bps      %      usec      low
0 best-effort      95      9500000000      95      0
none
3 network-control      5      500000000      5      0
none
Interface transmit statistics: Disabled

```

show interfaces extensive (MX2010 Router with MPC6E and 100-Gigabit Ethernet OTN Interface)

```

user@host> show interfaces et-9/0/0 extensive

Physical interface: et-9/0/0, Enabled, Physical link is Up
Interface index: 196, SNMP ifIndex: 623, Generation: 199
Link-level type: Ethernet, MTU: 1514, MRU: 1522, Speed: 100Gbps, BPDU Error:
None, Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
Pad to minimum frame size: Disabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped : 2014-06-26 18:18:34 PDT (04:17:07 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0

```

```

Output packets: 0
Dropped traffic statistics due to STP State:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0                    0                0                0
1                    0                0                0
2                    0                0                0
3                    0                0                0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control
Active alarms : None
Active defects : None
PCS statistics      Seconds
Bit errors          0
Errored blocks      0
MAC statistics:      Receive      Transmit
Total octets        0            0
Total packets       0            0
Unicast packets     0            0
Broadcast packets   0            0
Multicast packets   0            0
CRC/Align errors    0            0
FIFO errors          0            0
MAC control frames   0            0
MAC pause frames     0            0
Oversized frames     0
Jabber frames        0
Fragment frames      0
VLAN tagged frames   0
Code violations       0
Total errors         0            0
Filter statistics:
Input packet count   0
Input packet rejects 0
Input DA rejects     0
Input SA rejects     0
Output packet count   0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:

```

```

Destination slot: 0 (0x00)
CoS information:
Direction : Output
CoS transmit queue          Bandwidth          Buffer Priority
Limit                        %          bps          %          usec
0 best-effort                95    95000000000    95          0    low
none
3 network-control            5     5000000000     5          0    low
none
Interface transmit statistics: Disabled

```

show interfaces extensive (MX2010 Router with MPC6E and 10-Gigabit Ethernet Interface)

```

user@host> show interfaces xe-6/1/0 extensive

Physical interface: xe-6/1/0, Enabled, Physical link is Up
  Interface index: 159, SNMP ifIndex: 603, Generation: 162
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, LAN-PHY mode, Speed: 10Gbps,
  BPDU Error: None, MAC-REWRITE Error: None, Loopback: None, Source filtering:
  Disabled, Flow control: Enabled
  Pad to minimum frame size: Disabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Schedulers     : 0
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped   : 2014-06-26 18:16:50 PDT (04:21:04 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0          0 bps
    Output bytes  : 0          0 bps
    Input packets : 0          0 pps
    Output packets: 0          0 pps
  IPv6 transit statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Dropped traffic statistics due to STP State:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0                    0                0                0
    1                    0                0                0

```

```

2                                0                                0                                0
3                                0                                0                                0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control
Active alarms : None
Active defects : None
PCS statistics      Seconds
  Bit errors        0
  Errored blocks    1
MAC statistics:      Receive      Transmit
Total octets        0            0
Total packets       0            0
Unicast packets     0            0
Broadcast packets   0            0
Multicast packets   0            0
CRC/Align errors    0            0
FIFO errors         0            0
MAC control frames  0            0
MAC pause frames    0            0
Oversized frames    0
Jabber frames       0
Fragment frames     0
VLAN tagged frames  0
Code violations      0
Total errors        0            0
Filter statistics:
Input packet count   0
Input packet rejects 0
Input DA rejects     0
Input SA rejects     0
Output packet count  0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
Destination slot: 0 (0x00)
CoS information:
Direction : Output
CoS transmit queue      Bandwidth      Buffer Priority
Limit                   %      bps      %      usec
0 best-effort           95      9500000000  95      0      low
none
3 network-control       5       500000000  5       0      low
none
Interface transmit statistics: Disabled

```

show interfaces extensive (T4000 Routers with Type 5 FPCs)

The output fields for the **show interfaces *interface* extensive** command remains the same for 12-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-12XGE-SFPP), 24-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-24XGE-SFPP), and 100-Gigabit Ethernet Type 5 PIC with CFP (PF-1CGE-CFP).

```
user@host> show interfaces xe-4/0/0 extensive
```

```
Physical interface: xe-4/0/0, Enabled, Physical link is Up
Interface index: 200, SNMP ifIndex: 592, Generation: 203
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None, Source filtering: Disabled, Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 8 supported, 8 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Damping       : half-life: 5 sec, max-suppress: 20 sec, reuse 1000, suppress:
2000, state: enabled
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped   : 2013-06-03 16:01:56 PDT (06:04:07 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   : 0          0 bps
Output bytes  : 0          0 bps
Input packets : 0          0 pps
Output packets: 0          0 pps
IPv6 transit statistics:
Input bytes   : 0
Output bytes  : 0
Input packets : 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      0          0          0

  1 expedited-fo     0          0          0

  2 assured-forw     0          0          0

  3 network-cont     0          0          0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
Active alarms   : None
Active defects  : None
PCS statistics
  Bit errors    0
  Errored blocks 0
MAC statistics:
  Receive      Transmit
Total octets   0          0
Total packets  0          0
Unicast packets 0          0
Broadcast packets 0        0
Multicast packets 0        0
CRC/Align errors 0        0
```

```

FIFO errors                                0                0
MAC control frames                        0                0
MAC pause frames                         0                0
Oversized frames                        0
Jabber frames                          0
Fragment frames                        0
VLAN tagged frames                     0
Code violations                         0
Filter statistics:
  Input packet count                    0
  Input packet rejects                  0
  Input DA rejects                      0
  Input SA rejects                      0
  Output packet count                   0
  Output packet pad count               0
  Output packet error count             0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
CoS information:
  Direction : Output
  CoS transmit queue                    Bandwidth          Buffer Priority Limit
                                     %      bps      %      usec
  0 best-effort                       95  9500000000  95      0      low  none
  3 network-control                    5   500000000   5      0      low  none
Preclassifier statistics:
Traffic Class      Received Packets  Transmitted Packets  Dropped Packets

real-time          0                0                0
network-control    0                0                0
best-effort        0                0                0
Interface transmit statistics: Disabled

```

show interfaces extensive (Aggregated Ethernet)

user@host> show interfaces ae0 extensive

```

Physical interface: ae0, Enabled, Physical link is Up
Interface index: 199, SNMP ifIndex: 570, Generation: 202
Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled, Minimum links needed: 1, Minimum bandwidth needed: 0
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped   : 2012-06-06 23:33:03 PDT (00:00:58 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :          18532          1984 bps
Output bytes :           0           0 bps
Input packets:          158           2 pps
Output packets:           0           0 pps
IPv6 transit statistics:
Input bytes :           0
Output bytes :           0
Input packets:           0
Output packets:           0
Dropped traffic statistics due to STP State:
Input bytes :           0
Output bytes :           0

```

```

Input packets:          0
Output packets:         0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Giants: 0, Policed discards:
0,
  Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Ingress queues: 8 supported, 4 in use
Queue counters:          Queued packets  Transmitted packets      Dropped packets

  0 best-effort           0              0              0
  1 expedited-fo         0              0              0
  2 assured-forw         0              0              0
  3 network-cont         0              0              0

Egress queues: 8 supported, 4 in use
Queue counters:          Queued packets  Transmitted packets      Dropped packets

  0 best-effort          57              57              0
  1 expedited-fo         0              0              0
  2 assured-forw         0              0              0
  3 network-cont        63605             63605             0

Queue number:           Mapped forwarding classes
  0                      best-effort
  1                      expedited-forwarding
  2                      assured-forwarding
  3                      network-control

Logical interface ae0.0 (Index 331) (SNMP ifIndex 583) (Generation 142)
Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
Statistics
Bundle:
  Input :               149          2          17416          1984
  Output:                0          0           0           0
Link:
  ge-3/2/5.0
    Input :              90          1          10100          992
    Output:               0          0           0           0
  ge-3/3/9.0
    Input :              59          1           7316          992
    Output:               0          0           0           0
LACP info:
Port  Port          Role          System          System          Port
          priority          identifier  priority          number
key
ge-3/2/5.0  Actor          100  00:00:00:00:00:01          127          1
1
ge-3/2/5.0  Partner          127  00:24:dc:98:67:c0          127          1  1
ge-3/3/9.0  Actor          100  00:00:00:00:00:01          127          2
1

```

```

ge-3/3/9.0  Partner          127  00:24:dc:98:67:c0          127      2      1

LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
ge-3/2/5.0            38          137           0           0
ge-3/3/9.0            36          139           0           0
Marker Statistics:   Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
ge-3/2/5.0            0            0           0           0
ge-3/3/9.0            0            0           0           0
Protocol inet, MTU: 1500, Generation: 169, Route table: 0
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.2, Broadcast: 1.1.1.255, Generation:
153
Protocol multiservice, MTU: Unlimited, Generation: 170, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```


show interfaces lsi (Label-Switched Interface)

Syntax `show interfaces interface-type`
`<brief | detail | extensive | terse>`
`<descriptions>`
`<media>`
`<routing-instance instance-name>`
`<snmp-index snmp-index>`
`<statistics>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display status information about the specified label-switched interface (LSI).

Options *interface-type*—On most routers, the interface type is *lt-fpc/pic/port*.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

routing-instance *instance-name*—(Optional) Display information for the specified routing instance.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

Required Privilege Level view

Related Documentation

List of Sample Output [show interfaces lsi extensive on page 1671](#)

Output Fields [Table 78 on page 1669](#) lists the output fields for the **show interfaces** (logical tunnel) command. Output fields are listed in the approximate order in which they appear.

Table 78: Logical Tunnel show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels

Table 78: Logical Tunnel show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “Common Output Fields Description” on page 1168 .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Traffic statistics	<p>Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p> <ul style="list-style-type: none"> • Input bytes—Rate of bytes received on the interface. • Output bytes—Rate of bytes transmitted on the interface. • Input packets—Rate of packets received on the interface. • Output packets—Rate of packets transmitted on the interface. 	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mpls .	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1168 .	detail extensive none

Sample Output

show interfaces lsi extensive

```
user@host> show interfaces lsi extensive
```

```
Physical interface: lsi
```

```
Logical interface lsi.84934656 (Index 363) (SNMP ifIndex 586) (Generation 194)
```

```
Flags: Up Point-To-Point SNMP-Traps 0x4000000 Encapsulation: LSI-NULL
```

```
Traffic statistics:
```

```
Input bytes : 0
```

```
Output bytes : 0
```

```
Input packets: 0
```

```
Output packets: 0
```

```
Local statistics:
```

```
Input bytes : 0
```

```
Output bytes : 0
```

```
Input packets: 0
```

```
Output packets: 0
```

```
Transit statistics:
```

```
Input bytes : 0 0 bps
```

```
Output bytes : 0 0 bps
```

```
Input packets: 0 0 pps
```

```
Output packets: 0 0 pps
```

```
Protocol vpls, MTU: Unlimited, Generation: 279, Route table: 10
```

```
Logical interface lsi.84934657 (Index 366) (SNMP ifIndex 589) (Generation 197)
```

```
Flags: Up Point-To-Point SNMP-Traps 0x4000000 Encapsulation: LSI-NULL
```

```
Traffic statistics:
```

```
Input bytes : 0
```

```
Output bytes : 0
```

```
Input packets: 0
```

```
Output packets: 0
```

```
Local statistics:
```

```
Input bytes : 0
```

```
Output bytes : 0
```

```
Input packets: 0
```

```
Output packets: 0
```

```
Transit statistics:
```

```
Input bytes : 0 0 bps
```


```
Output bytes : 0 0 bps
```

```
Input packets: 0 0 pps
```

```
Output packets: 0 0 pps
```

```
Protocol vpls, MTU: Unlimited, Generation: 282, Route table: 10
```

show interfaces media

Syntax	show interfaces media
Release Information	Command introduced before Junos OS Release 7.4. Command introduced on PTX Series Packet Transport Routers for Junos OS Release 12.1.
Description	Display media-specific information about all configured network interfaces.
	<div> NOTE: <code>show interfaces media</code> lists details for all interfaces, whereas <code>show interfaces media interface-name</code> lists details only for the specified interface.</div>
Options	This command has no options.
Additional Information	Output from both the <code>show interfaces interface-name detail</code> and the <code>show interfaces interface-name extensive</code> commands includes all the information displayed in the output from the <code>show interfaces media</code> command.
Required Privilege Level	view
List of Sample Output	show interfaces media (SONET/SDH) on page 1673 show interfaces media (MX Series Routers) on page 1673 show interfaces media (PTX Series Packet Transport Routers) on page 1674
Output Fields	<p>The output from the <code>show interfaces media</code> command includes fields that display interface media-specific information. These fields are also included in the <code>show interfaces interface-name</code> command for each particular interface type, and the information provided in the fields is unique to each interface type.</p> <p>One field unique to the <code>show interfaces media</code> command is interface-type errors (for example, SONET errors). This field appears for channelized E3, channelized T3, channelized OC, E1, E3, SONET, T1, and T3 interfaces. The information provided in this output field is also provided in the output from the <code>show interfaces interface-name</code> command. (For example, for SONET interfaces, these fields are SONET section, SONET line, and SONET path). For a description of errors, see the chapter with the particular interface type in which you are interested.</p>

Sample Output

show interfaces media (SONET/SDH)

The following example displays the output fields unique to the **show interfaces media** command for a SONET interface (with no level of output specified):

```
user@host> show interfaces media so-4/1/2
```

```
Physical interface: so-4/1/2, Enabled, Physical link is Up
Interface index: 168, SNMP ifIndex: 495
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC48,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps 16384
Link flags     : Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 1783 (00:00:00 ago), Output: 1786 (00:00:08 ago)
LCP state: Opened
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Not-configured
CoS queues    : 8 supported
Last flapped  : 2005-06-15 12:14:59 PDT (04:31:29 ago)
Input rate    : 0 bps (0 pps)
Output rate   : 0 bps (0 pps)
SONET alarms  : None
SONET defects : None
SONET errors:
    BIP-B1: 121, BIP-B2: 916, REI-L: 0, BIP-B3: 137, REI-P: 16747, BIP-BIP2: 0
Received path trace: routerb so-1/1/2
Transmitted path trace: routera so-4/1/2
```

show interfaces media (MX Series Routers)

```
user@host>show interfaces media xe-0/0/0
```

```
Physical interface: xe-0/0/0, Enabled, Physical link is Up
Interface index: 145, SNMP ifIndex: 592
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None,
Loopback: None, Source filtering: Disabled, Flow control: Enabled
Pad to minimum frame size: Enabled
Device flags   : Present Running
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues    : 8 supported, 8 maximum usable queues
Current address: 08:81:f4:82:a3:f0, Hardware address: 08:81:f4:82:a3:f0
Last flapped   : 2013-10-26 03:20:40 test (1w6d 00:19 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : LINK
Active defects : LINK
PCS statistics                                     Seconds
  Bit errors                                         78
  Errored blocks                                    78
MAC statistics:
  Input bytes: 0, Input packets: 0, Output bytes: 0, Output packets: 0
Filter statistics:
```

```
Filtered packets: 0, Padded packets: 0, Output packet errors: 0  
Interface transmit statistics: Disabled
```

show interfaces media (PTX Series Packet Transport Routers)

```
user@host> show interfaces media em0
```

```
Physical interface: em0, Enabled, Physical link is Up  
  Interface index: 8, SNMP ifIndex: 0  
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps  
  Device flags   : Present Running  
  Interface flags: SNMP-Traps  
  Link type      : Full-Duplex  
  Current address: 00:80:f9:25:00:1b, Hardware address: 00:80:f9:25:00:1b  
  Last flapped   : Never  
  Input packets  : 215151  
  Output packets: 72
```

show interfaces terse

Syntax	show interfaces terse
Release Information	Command introduced before Junos OS Release 7.4. Command introduced on PTX Series Packet Transport Routers for Junos OS Release 12.1.
Description	Display summary information about interfaces.
Options	This command has no options.
Additional Information	Interfaces are always displayed in numerical order, from the lowest to the highest FPC slot number. Within that slot, the lowest PIC slot is shown first. On an individual PIC, the lowest port number is always first.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>Examples: Using Logical Systems</i>
List of Sample Output	show interfaces terse on page 1676 show interfaces terse (TX Matrix Plus Router) on page 1676 show interfaces terse (PTX Series Packet Transport Routers) on page 1677
Output Fields	Table 79 on page 1675 lists the output fields for the show interfaces terse command. Output fields are listed in the approximate order in which they appear.

Table 79: show interfaces terse Output Fields

Field Name	Field Description
Interface	Interface name.
Admin	Whether the interface is turned on (up) or off (down).
Link	Link state: up or down .
Proto	Protocol family configured on the logical interface. A logical interface on a router that supports Ethernet OAM always shows the multiservice protocol.
Local	Local IP address of the logical interface.
Remote	Remote IP address of the logical interface.

Sample Output

show interfaces terse

```
user@host> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
tl-0/1/0:0	up	up			
tl-0/1/0:0.0	up	up	inet	192.168.220.18/30	
tl-0/1/0:1	up	up			
tl-0/1/0:2	up	up			
tl-0/1/0:3	up	up			
at-1/0/0	up	up			
at-1/0/1	up	up			
dsc	up	up			
fxp0	up	up			
fxp0.0	up	up	inet	192.168.71.249/21	
fxp1	up	up			
fxp1.0	up	up	inet tnp	10.0.0.4/8 4	
gre	up	up			
ipip	up	up			
lo0	up	up			
lo0.0	up	up	inet	10.0.1.4 127.0.0.1	--> 0/0 --> 0/0
lo0.16385	up	up	inet		
lsi	up	up			
mtun	up	up			

show interfaces terse (TX Matrix Plus Router)

```
user@host> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
xe-0/0/0	up	up			
xe-0/0/1	up	up			
xe-0/0/2	up	up			
xe-0/0/3	up	up			
xe-6/0/0	up	up			
xe-6/0/1	up	up			
xe-6/0/2	up	up			
xe-6/0/3	up	up			
xe-6/1/0	up	up			
xe-6/1/1	up	up			
xe-6/1/2	up	up			
xe-6/1/3	up	up			
so-0/0/0	up	up			
so-0/0/0.0	up	up	inet	1.1.1.1/30	
ge-1/3/0.0	up	up	inet	--> 0/0	
ge-7/0/0	up	up			
ge-7/0/0.0	up	up	inet	2.15.1.1/30	
ge-7/0/0.1	up	up	inet	2.15.1.5/30	
ge-7/0/0.2	up	up	inet	2.15.1.9/30	
ge-7/0/0.3	up	up	inet	2.15.1.13/30	
ge-7/0/0.4	up	up	inet	2.15.1.17/30	
ge-7/0/0.5	up	up	inet	2.15.1.21/30	
...					


```

em0          up    up
em0.0        up    up    inet    192.168.178.11/25
gre          up    up
ipip         up    up
ixgbe0       up    up
ixgbe0.0     up    up    inet    10.34.0.4/8
                                     162.0.0.4/2
                                     inet6   fe80::200:ff:fe22:4/64
                                     fec0::a:22:0:4/64
                                     tnp      0x22000004
ixgbe1       up    up
ixgbe1.0     up    up    inet    10.34.0.4/8
                                     162.0.0.4/2
                                     inet6   fe80::200:1ff:fe22:4/64
                                     fec0::a:22:0:4/64
                                     tnp      0x22000004

```

show interfaces terse (PTX Series Packet Transport Routers)

```
user@host> show interfaces em0 terse
```

Interface	Admin	Link	Proto	Local	Remote
em0	up	up			
em0.0	up	up	inet	192.168.3.30/24	

CHAPTER 15

ANCP Operational Commands

- clear ancp neighbor
- clear ancp statistics
- clear ancp subscriber
- request ancp oam interface
- request ancp oam neighbor
- show ancp cos
- show ancp neighbor
- show ancp statistics
- show ancp subscriber
- show ancp summary
- show ancp summary neighbor
- show ancp summary subscriber

clear ancp neighbor

Syntax	<pre>clear ancp neighbor <ip-address <i>ip-address</i>> <system-name <i>mac-address</i>></pre>
Release Information	Command introduced in Junos OS Release 9.4.
Description	<p>Clear the ANCP agent connection with all ANCP neighbors or with the specified ANCP neighbor. This command deletes information for subscribers associated with the neighbor, causing the adjusted traffic rates to revert to the configured rate for the subscriber interfaces. The neighbor remains configured (its administrative state is <i>enabled</i>) and can reestablish adjacencies.</p> <p>This command initiates logout of ANCP-triggered dynamic VLAN sessions on the physical interface associated with the specified neighbor; conventionally autosensed dynamic VLAN sessions and their associated logical interfaces are not affected.</p>
Options	<p>none—Clear all ANCP neighbors.</p> <p>ip-address <i>ip-address</i>—(Optional) Clear the ANCP neighbor specified by the IP address.</p> <p>system-name <i>mac-address</i>—(Optional) Clear the ANCP neighbor specified by the MAC address.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show ancp neighbor on page 1696
List of Sample Output	clear ancp neighbor on page 1680 show ancp neighbor on page 1681
Output Fields	When you enter this command, you are provided no feedback on the status of your request. You can enter the show ancp neighbor command before and after clearing the ANCP neighbors to verify the clear operation.

Sample Output

clear ancp neighbor

```
user@host> clear ancp neighbor
```

show ancp neighbor

The following sample output displays the connections with ANCP neighbors before and after the **clear ancp neighbor** command was issued.

```
user@host> show ancp neighbor
```

IP Address	MAC Address	State	Subscriber Count	Capabilities
203.0.113.102	00:00:5e:00:53:10	Established	5	Topo
203.0.113.122	00:00:5e:00:53:12	Established	5	Topo
203.0.113.132	00:00:5e:00:53:13	Established	5	Topo
203.0.113.142	00:00:5e:00:53:14	Established	5	Topo

```
user@host> clear ancp neighbor ip-address 203.0.113.102
```

```
user@host> show ancp neighbor
```

IP Address	MAC Address	State	Subscriber Count	Capabilities
203.0.113.122	00:00:5e:00:53:12	Established	5	Topo
203.0.113.132	00:00:5e:00:53:13	Established	5	Topo
203.0.113.142	00:00:5e:00:53:14	Established	5	Topo

clear ancp statistics

Syntax	<pre>clear ancp statistics <ip-address <i>ip-address</i>> <system-name <i>mac-address</i>></pre>
Release Information	Command introduced in Junos OS Release 13.3.
Description	Clear current statistics accumulated by the ANCP agent for all ANCP neighbors or the specified neighbor.
Options	<p>none—Clear all ANCP statistics.</p> <p>ip-address <i>ip-address</i>—(Optional) Clear statistics for the ANCP neighbor specified by the IP address.</p> <p>system-name <i>mac-address</i>—(Optional) Clear statistics for the ANCP neighbor specified by the MAC address.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show ancp neighbor on page 1696
List of Sample Output	clear ancp statistics on page 1682 show ancp neighbor on page 1682
Output Fields	When you enter this command, you are provided no feedback on the status of your request. You can enter the show ancp neighbor command before and after clearing the ANCP neighbor statistics to verify the clear operation.

Sample Output

clear ancp statistics

```
user@host> clear ancp statistics
```

show ancp neighbor

The following sample output displays statistics for an ANCP neighbor before and after the **clear ancp statistics** command was issued.

```
user@host> show ancp neighbor ip-address 192.168.10.1 detail
```

```
Neighbor Information
  IP Address           : 192.168.10.1
```

```

System Name           : 00:00:5E:00:53:02
  Up Time              : 38
  TCP Port             : 64959
  State                : Established
  Subscriber Count     : 7
  Capabilities         : Topology Discovery
  System Instance      : 11
  Peer Instance        : 1
  Adjacency Timer (in 100ms) : 50
  Peer Adjacency Timer (in 100ms) : 100
  Partition Type       : 0
  Partition Flag       : 1
  Partition Identifier  : 0
  Dead Timer           : 22
  Received Syn Count   : 47
  Received Synack Count : 48
  Received Rstack Count : 2
  Received Ack Count   : 12
  Received Port Up Count : 8
  Received Port Down Count : 2
  Received Other Count : 0
  Sent Syn Count       : 48
  Sent Synack Count    : 47
  Sent Rstack Count    : 1
  Sent Ack Count       : 12
  Max Discovery Limit Exceed Count : 0

```

```
user@host> clear ancp statistics ip-address 192.168.10.1
```

```
user@host> show ancp neighbor ip-address 192.168.10.1 detail
```

```

Neighbor Information
  IP Address           : 192.168.10.1
  System Name          : 00:00:5E:00:53:02
    Up Time            : 38
    TCP Port           : 64959
    State              : Established
    Subscriber Count   : 7
    Capabilities       : Topology Discovery
    System Instance    : 11
    Peer Instance      : 1
    Adjacency Timer (in 100ms) : 50
    Peer Adjacency Timer (in 100ms) : 100
    Partition Type     : 0
    Partition Flag     : 1
    Partition Identifier : 0
    Dead Timer         : 22
    Received Syn Count : 0
    Received Synack Count : 0
    Received Rstack Count : 0
    Received Ack Count  : 0
    Received Port Up Count : 0
    Received Port Down Count : 0
    Received Other Count : 0
    Sent Syn Count     : 0
    Sent Synack Count  : 0
    Sent Rstack Count  : 0
    Sent Ack Count     : 0

```

Max Discovery Limit Exceed Count : 0

clear ancp subscriber

Syntax

```
clear ancp subscriber
<identifier identifier>
<ip-address ip-address>
<system-name mac-address>
```

Release Information Command introduced in Junos OS Release 11.4.

Description Clear the ANCP agent connection with all ANCP subscribers or with the specified ANCP subscriber. This command deletes information for the subscribers, causing the adjusted traffic rate to revert to the configured rate for the subscriber interface, but otherwise has no affect on ANCP neighbors.

Options **none**—Clear all ANCP subscribers.

identifier *identifier-string*—(Optional) Clear the ANCP subscriber identified by the access loop ID.

ip-address *ip-address*—(Optional) Clear all ANCP subscribers on the neighbor specified by the IP address.

system-name *mac-address*—(Optional) Clear all ANCP subscribers on the neighbor specified by the MAC address.

Required Privilege Level clear

Related Documentation

- [show ancp subscriber on page 1709](#)

List of Sample Output

- [show ancp subscriber brief on page 1685](#)
- [clear ancp subscriber on page 1686](#)

Output Fields When you enter this command, you are provided no feedback on the status of your request. You can enter the **show ancp subscriber** command before and after clearing the ANCP neighbors to verify the clear operation.

Sample Output

show ancp subscriber brief

```
user@host> show ancp subscriber brief
```

Loop Identifier	Type	Interface	Rate Kbps	Neighbor
port-1-10	VDSL2	set-ge-10410	64	203.0.113.102
port-1-11	VDSL2	set-ge-10411	64	203.0.113.112

port-2-10	VDSL2	ge-1/0/4.12	64	203.0.113.122
port-2-10	VDSL2	ge-1/0/4.12	64	203.0.113.123
port-2-11	VDSL2	ge-1/0/4.13	64	203.0.113.132

```
user@host> clear ancp subscriber identifier port-2-10
```

```
user@host> show ancp subscriber brief
```

Loop Identifier	Type	Interface	Rate Kbps	Neighbor
port-1-10	VDSL2	set-ge-10410	64	203.0.113.102
port-1-11	VDSL2	set-ge-10411	64	203.0.113.112
port-2-11	VDSL2	ge-1/0/4.13	64	203.0.113.132

clear ancp subscriber

```
user@host> clear ancp subscriber
```

request ancp oam interface

Syntax	request ancp oam interface <i>(interface-name interface-set set-name)</i> <count <i>count</i> > <timeout <i>duration</i> >
Release Information	Command introduced in Junos OS Release 11.4.
Description	Trigger the access node to run a loopback test on the local loop between the access node and the customer premises equipment. You must specify either an ANCP interface or an ANCP interface set. The access node responds to the NAS with the results of the test.
Options	<p>interface-name—Name of the ANCP interface on whose local loop the loopback test is run.</p> <p>interface-set set-name—Name of the ANCP interface set on whose local loop the loopback test is run.</p> <p>count count—(Optional) Number of times a loopback message is sent on the local loop. Range: 1 through 32. Default: 1.</p> <p>timeout duration—(Optional) Period of time in seconds that the NAS waits for a response to the OAM request. Range: 0 through 255. Default: 5.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>Triggering ANCP OAM to Test the Local Loop</i>
List of Sample Output	request ancp oam interface on page 1687
Output Fields	When you enter this command, you are provided feedback on the status of your request, including the result of the test, the response code, and the response string returned with the OAM response in the event of failure, an error code is displayed.

Sample Output

request ancp oam interface

```
user@host> request ancp oam interface ge-1/0/4.12 count 5 timeout 40
request succeeded
0x503 : DSL line status showtime
DEFAULT RESPONSE
```


request ancp oam neighbor

Syntax	<pre>request ancp oam neighbor (ip-address <i>ip-address</i> system-name <i>neighbor-name</i>) subscriber <i>identifier-string</i> <count <i>count</i>> <timeout <i>duration</i>></pre>
Release Information	Command introduced in Junos OS Release 11.4.
Description	Trigger the access node to run a loopback test on the local loop between the access node and the customer premises equipment. You must specify both the access node and the subscriber. The access node responds to the NAS with the results of the test.
Options	<p>ip-address <i>ip-address</i>—IP address that specifies the access node on whose local loop the loopback test is run.</p> <p>system-name <i>neighbor-name</i>—System name that specifies the access node on whose local loop the loopback test is run.</p> <p>subscriber <i>identifier-string</i>—Access identifier that specifies the subscriber on whose local loop the loopback test is run.</p> <p>count <i>count</i>—(Optional) Number of times a loopback message is sent on the local loop. Range: 1 through 32. Default: 1.</p> <p>timeout <i>duration</i>—(Optional) Period of time in seconds that the NAS waits for a response to the OAM request. Range: 0 through 255. Default: 5.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>Triggering ANCP OAM to Test the Local Loop</i>
List of Sample Output	request ancp oam subscriber on page 1689
Output Fields	When you enter this command, you are provided feedback on the status of your request, including the result of the test, the response code, and the response string returned with the OAM response in the event of failure, an error code is displayed.

Sample Output

request ancp oam subscriber

```
user@host> request ancp oam neighbor 203.0.113.21 subscriber "dslam port-1-11"
```

```
request succeeded
0x503 : DSL line status showtime
DEFAULT RESPONSE
```

show ancp cos

Syntax `show ancp cos`
`<identifier identifier>`
`<last-update>`
`<pending-update>`

Release Information Command introduced in Junos OS Release 9.4.

Description Display information about the CoS state for subscriber traffic.

Options `identifier identifier`—(Optional) Display information about the local loops for the specified access identifier.

`last-update`—(Optional) Display the most recently updated CoS information.

`pending-update`—(Optional) Display the pending update of CoS information.

Required Privilege Level view

Related Documentation

- [show ancp neighbor on page 1696](#)
- [show ancp statistics on page 1704](#)
- [show ancp subscriber on page 1709](#)

List of Sample Output [show ancp cos on page 1693](#)
[show ancp cos last-update on page 1694](#)
[show ancp cos pending-update on page 1695](#)

Output Fields [Table 80 on page 1691](#) lists the output fields for the **show ancp cos** command. Output fields are listed in the approximate order in which they appear.

Table 80: show ancp cos Output Fields

Field Name	Field Description
Per-DSL CoS adjustment	Adjustment values applied by the ANCP agent to the actual downstream rates and frame overhead for frame-mode DSL types. The agent then reports the adjusted rates to CoS to establish a shaping rate for the CoS node that corresponds to the subscriber access line.
QoS Adjust Flag	State of QoS adjust: <ul style="list-style-type: none"> • TRUE—The ANCP agent is enabled to adjust the actual downstream data rates and frame overhead and report the adjusted values to CoS. • FALSE—The ANCP agent is not enabled to adjust and report values to CoS.

Table 80: show ancp cos Output Fields (continued)

Field Name	Field Description
ADSL bytes	Number of bytes by which the actual ADSL downstream cell overhead is adjusted before reporting it to CoS.
ADSL2 bytes	Number of bytes by which the actual ADSL2 downstream cell overhead is adjusted before reporting it to CoS.
ADSL2-PLUS bytes	Number of bytes by which the actual ADSL2+ downstream cell overhead is adjusted before reporting it to CoS.
SDSL overhead adjusted	Percentage by which the actual SDSL downstream rate is adjusted before reporting it to CoS.
SDSL bytes	Number of bytes by which the actual SDSL downstream frame overhead is adjusted before reporting it to CoS.
OTHER overhead adjusted	Percentage by which the actual OTHER downstream rate is adjusted before reporting it to CoS.
OTHER bytes	Number of bytes by which the actual OTHER downstream frame overhead is adjusted before reporting it to CoS.
VDSL overhead adjusted	Percentage by which the actual VDSL downstream rate is adjusted before reporting it to CoS.
VDSL bytes	Number of bytes by which the actual VDSL downstream frame overhead is adjusted before reporting it to CoS.
VDSL2 overhead adjusted	Percentage by which the actual VDSL2 downstream rate is adjusted before reporting it to CoS.
VDSL2 bytes	Number of bytes by which the actual VDSL2 downstream frame overhead is adjusted before reporting it to CoS.
Per-DSL adjustment for reporting	Adjustment values applied by the ANCP agent to the actual downstream rates for individual DSL types to account for traffic overhead. The agent then reports the adjusted rates to AAA.
ADSL adjustment factor	Percentage by which the actual ADSL downstream rate is adjusted before reporting it to AAA.
ADSL2 adjustment factor	Percentage by which the actual ADSL2 downstream rate is adjusted before reporting it to AAA.
ADSL2+ adjustment factor	Percentage by which the actual ADSL2+ downstream rate is adjusted before reporting it to AAA.
VDSL adjustment factor	Percentage by which the actual VDSL downstream rate is adjusted before reporting it to AAA.

Table 80: show ancp cos Output Fields (continued)

Field Name	Field Description
VDSL2 adjustment factor	Percentage by which the actual VDSL2 downstream rate is adjusted before reporting it to AAA.
SDSL adjustment factor	Percentage by which the actual SDSL downstream rate is adjusted before reporting it to AAA.
OTHER adjustment factor	Percentage by which the actual OTHER downstream rate is adjusted before reporting it to AAA.
Keepalive Timer	Interval between the keepalive messages that the ANCP agent sends to CoS.
Cos State	State of the interaction between the ANCP agent and CoS: <ul style="list-style-type: none"> • ANCPD_COS_CONNECT_NEEDED • ANCPD_COS_CONNECT_PENDING • ANCPD_COS_CONNECT_DONE • ANCPD_COS_SESSION_SENT • ANCPD_COS_WRITE_READY
Connect Time	Time at which the ANCP agent connected to CoS; useful for debugging.
Session Time	Time at which the ANCP agent sent a session connect message to CoS; useful for debugging.
Routing Instance Time	Time at which the ANCP agent sent the routing instance to CoS; useful for debugging.
Keepalive Time	Time at which the last keepalive message was sent.
Update Time	Time at which the shaping rate was last updated.
Type	Subscriber access type: ifl indicates that a single VLAN carries subscriber traffic and iflset indicates that a set of VLANs carries subscriber traffic.
Name	System-wide name of the particular subscriber access.
Index	Access identifier.
Pending Update	Actual downstream data rate to be applied next to this local loop, in Kbps.
Last Update	Adjusted downstream data rate last reported to CoS by the ANCP agent for this local loop, in Kbps.

Sample Output

show ancp cos

```
user@host> show ancp cos
```

```

Per-DSL CoS adjustment:
  Qos Adjust Flag:      TRUE
  ADSL bytes:           20
  ADSL2 bytes:          20
  ADSL2-PLUS bytes:     20
  VDSL overhead adjusted: 90
  VDSL bytes:           20
  VDSL2 overhead adjusted: 95
  VDSL2 bytes:          -20
  SDSL overhead adjusted: 85
  SDSL bytes:           30
  OTHER overhead adjusted: 85
  OTHER bytes:          30

Per-DSL adjustment for reporting:
  ADSL adjustment factor: 100
  ADSL2 adjustment factor: 100
  ADSL2+ adjustment factor: 100
  VDSL adjustment factor: 100
  VDSL2 adjustment factor: 100
  SDSL adjustment factor: 100
  OTHER adjustment factor: 100

Keepalive Timer:      45 secs
State:                WRITE_READY
Connect Time:         Fri May 2 12:08:49 2016
Session Time:         Fri May 2 12:18:52 2016
Routing Instance Time: Fri May 2 12:18:53 2016
Keepalive Time:       Fri May 2 13:44:14 2016
Update Time:         Fri May 2 13:02:55 2016

Type      Name                               Index      Pending Update      Last Update
iflset    aci-1004-ge-2/0/0.1073741834 4 None           36000 Kbps

```

show ancpc cos last-update

```

Per-DSL CoS adjustment:
  Qos Adjust Flag:      TRUE
  ADSL bytes:           20
  ADSL2 bytes:          20
  ADSL2-PLUS bytes:     20
  VDSL overhead adjusted: 90
  VDSL bytes:           20
  VDSL2 overhead adjusted: 95
  VDSL2 bytes:          -20
  SDSL overhead adjusted: 85
  SDSL bytes:           30
  OTHER overhead adjusted: 85
  OTHER bytes:          30

Per-DSL adjustment for reporting:
  ADSL adjustment factor: 100
  ADSL2 adjustment factor: 100
  ADSL2+ adjustment factor: 100
  VDSL adjustment factor: 100
  VDSL2 adjustment factor: 100

```

```

SDSL adjustment factor: 100
OTHER adjustment factor: 100

Keepalive Timer:      45 secs
State:                WRITE_READY
Connect Time:         Fri May 2 12:08:49 2016
Session Time:         Fri May 2 12:18:52 2016
Routing Instance Time: Fri May 2 12:18:53 2016
Keepalive Time:       Fri May 2 13:44:34 2016
Update Time:         Fri May 2 13:02:55 2016

```

Type	Name	Index	Pending Update	Last Update
iflset	aci-1004-ge-2/0/0.1073741834	4	None	36000 Kbps

show ancp cos pending-update

```

user@host> show ancp cos pending-update

Per-DSL CoS adjustment:
  Qos Adjust Flag:      TRUE
  VDSL overhead adjusted: 90
  VDSL bytes:           20
  VDSL2 overhead adjusted: 95
  VDSL2 bytes:          -20
  SDSL overhead adjusted: 85
  SDSL bytes:           30
  OTHER overhead adjusted: 85
  OTHER bytes:          30

Per-DSL adjustment for reporting:
  ADSL adjustment factor: 100
  ADSL2 adjustment factor: 100
  ADSL2+ adjustment factor: 100
  VDSL adjustment factor: 100
  VDSL2 adjustment factor: 100
  SDSL adjustment factor: 100
  OTHER adjustment factor: 100

Keepalive Timer:      45 secs
State:                WRITE_READY
Connect Time:         Fri May 2 12:08:49 2016
Session Time:         Fri May 2 12:18:52 2016
Routing Instance Time: Fri May 2 12:18:53 2016
Keepalive Time:       Fri May 2 13:44:34 2016
Update Time:         Fri May 2 13:02:55 2016

```

show ancp neighbor

Syntax	<pre>show ancp neighbor <brief detail> <ip-address <i>ip-address</i> <system-name <i>mac-address</i>></pre>
Release Information	Command introduced in Junos OS Release 9.4.
Description	Display information about all ANCP neighbors or the specified ANCP neighbor, regardless of operational state.
Options	<p>brief detail—(Optional) Display the specified level of detail.</p> <p>ip-address <i>ip-address</i> —(Optional) Display information about the neighbor (access node) specified by the IP address.</p> <p>system-name <i>mac-address</i>—(Optional) Display information about the neighbor (access node) specified by the MAC address.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show ancp cos on page 1691 • show ancp subscriber on page 1709
List of Sample Output	show ancp neighbor on page 1699 show ancp neighbor detail on page 1700 show ancp neighbor ip-address on page 1701 show ancp neighbor system-name on page 1702
Output Fields	Table 81 on page 1696 lists the output fields for the show ancp neighbor command. Output fields are listed in the approximate order in which they appear.

Table 81: show ancp neighbor Output Fields

Field Name	Field Description	Level of Output
Version	<p>Version of the ANCP implementation:</p> <ul style="list-style-type: none"> • 0x31—General Switch Management Protocol (GSMP) version 3, sub-version 1; ANCP version before <i>RFC 6320, Protocol for Access Node Control Mechanism in Broadband Networks</i>. • 0x32—ANCP version 1, defined in <i>RFC 6320, Protocol for Access Node Control Mechanism in Broadband Networks</i>. 	brief detail none

Table 81: show ancp neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
IP Address	IP address of the ANCP neighbor.	brief detail none
PartId	Number that associates the ANCP message with a specific partition.	brief none
State	Operational state of the ANCP adjacency: <ul style="list-style-type: none"> Configured—The neighbor has been configured, but has never been in the Established state. An asterisk (*) is prefixed to the neighbor entry for this state. Establishing—Adjacency negotiations are in progress for the neighbor. An asterisk (*) is prefixed to the neighbor entry for this state. This state is rarely seen because the adjacency is established so quickly. Established—Adjacency negotiations have succeeded for the neighbor and an ANCP session has been established. Not Estblshed—Not Established; adjacency negotiations are ready to begin. Indicates that this neighbor previously had been in the Established state; that is, it has lost a previously established adjacency. An asterisk (*) is prefixed to the neighbor entry for this state. 	All levels
Time	How long the adjacency has been up in one of the following formats: <ul style="list-style-type: none"> <i>nwndnh</i>—number of weeks, days, and hours <i>nd hh:mm:ss</i>—number of days, hours, minutes, and seconds 	brief detail none
Subscriber Count	Number of subscribers associated with the ANCP neighbor (access local loop).	brief none
Capabilities	Negotiated ANCP capability: <ul style="list-style-type: none"> Topo—Topology discovery. OAM—Performance of local Operations Administration Maintenance (OAM) procedures on an access loop controlled by the router. 	All levels
System Name	MAC address of the ANCP neighbor.	detail
TCP Port	TCP port on which ANCP messages are exchanged.	detail
System Instance	Number identifying the ANCP link instance from the edge device's perspective.	detail
Peer Instance	Number identifying the ANCP instance from the access node's perspective. This number is unique and changes when the node or link comes back up after going down.	detail
Timer	Adjacency timer value advertised by the ANCP peer in 100 ms increments; the interval between ANCP ACK messages. This value remains constant for the duration of an ANCP session.	detail

Table 81: show ancp neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
Partition Type	Number that identifies whether partitions are used and how the ID is negotiated: <ul style="list-style-type: none"> 0—No partition. 1—Fixed partition requested. 2—Fixed partition assigned. 	detail
Partition Flag	Number that specifies the type of partition requested: 1 (new adjacency) or 2 (recovered adjacency).	detail
Partition Identifier	Number that identifies a logical partition of an access node with which the ANCP agent has formed an adjacency. A value of zero indicates that the agent supports each neighbor on an IP address over a single TCP session with a partition ID of zero. This is the default support case. A nonzero value indicates that the agent supports each neighbor on an IP address over a single TCP session with a nonzero partition ID.	detail
Partition Adjacencies	Number of adjacencies that share the partition.	detail
Dead Timer	Remaining period that the edge device waits for adjacency packets from a neighbor before declaring the neighbor to be down. The maximum dead time value is three times the configured adjacency timer value. This field displays the current value based on the time that the last adjacency packet was received.	detail
Received Syn Count	Number of synchronization messages received from neighbors to maintain adjacencies.	detail
Received Synack Count	Number of synchronization acknowledgment messages received from neighbors in response to the node's synchronization messages.	detail
Received Rstack Count	Number of messages received from neighbors indicating that the link to the neighbor needs to be reset.	detail
Received Ack Count	Number of acknowledgment messages periodically received from neighbors after an adjacency has been established.	detail
Received Port Up Count	Number of status messages received from neighbors indicating that a port has transitioned to the up state.	detail
Received Port Down Count	Number of status messages received from neighbors indicating that a port has transitioned to the down state.	detail
Received Generic Resp Count	Number of generic response messages received from neighbors.	detail
Received Adjacency Update Count	Number of adjacency update messages received from neighbors.	detail
Received OAM Count	Number of OAM responses received from neighbors in reply to request commands.	detail

Table 81: show ancp neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
Received Other Count	Number of all other ANCP message packets received from neighbors that do not fit into one of the other categories.	detail
Sent Syn Count	Number of synchronization messages sent to neighbors to maintain adjacencies.	detail
Sent Synack Count	Number of synchronization acknowledgment messages sent to neighbors in response to the their synchronization messages.	detail
Sent Rstack Count	Number of messages sent to neighbors indicating that the link to the neighbor needs to be reset.	detail
Sent Ack Count	Number of acknowledgment messages periodically sent to neighbors after an adjacency has been established.	detail
Sent Generic Resp Count	Number of generic response messages sent to neighbors.	detail
Sent OAM Count	Number of OAM request commands sent to neighbors.	detail
Max Discovery Limit Exceed Count	Number of times that the maximum number of discovery table entries accepted from the neighbor has been exceeded.	detail
Result Codes	<p>Number of generic response messages sent to neighbors that include each of the following result codes:</p> <ul style="list-style-type: none"> • Invalid Request Message Count—A properly formed request message violated the protocol because of timing (such as a race condition) or direction of transmission. • Specified Port(s) Down Count—One or more of the specified ports are down because of a state mismatch between the router and an ANCP control application. • Out of Resources Count—ANCP is out of resources, probably not related to the access lines. This result code is sent only by an access node. • Request Msg Not Implemented Count— • Malformed Msg Count—Message is malformed because it was corrupted in transit or there was an implementation error at either end of the connection. • TLV Missing Count—One or more mandatory TLVs was missing from a request. • Invalid TLV Contents Count—The contents of one or more TLVs in the request do not match its required specification. • Non-Existent Port(s) Count—One or more of the ports specified in a request do not exist, possibly because of a configuration mismatch between the access node and the router or AAA. 	detail

Sample Output

show ancp neighbor

```
user@host> show ancp neighbor
```

Version	IP Address	PartID	State	Time	Subscriber
Capabilities					Count

0x31	203.0.113.13	0	Established	11:24	2
Topo					
0x31	203.0.113.15	0	Not Estblshd	2:45	2
Topo					
* 0x0	198.51.100.102	0	Establishing	0	0
* 0x0	192.0.2.0	0	Configured	0	0
* 0x0	192.0.2.1	0	Configured	0	0

show ancp neighbor detail

user@host> show ancp neighbor detail

```

Neighbor Information
  Version           : 0x31
  IP Address        : 192.0.2.85
  System Name       : 00:00:5e:00:53:01
    Up Time         : 26
    TCP Port        : 32666
    State           : Established
    Subscriber Count : 4
    Capabilities     : Topo
    System Instance  : 2
    Peer Instance    : 20
    Adjacency Timer (in 100ms) : 100
    Peer Adjacency Timer (in 100ms) : 100
    Partition Type   : 0
    Partition Flag    : 1
    Partition Identifier : 0
    Partition Adjacencies : 0
    Dead Timer       : 23
    Received Syn Count : 1
    Received Synack Count : 1
    Received Rstack Count : 0
    Received Ack Count : 4
    Received Port Up Count : 10
    Received Port Down Count : 0
    Received Generic Resp Count : 0
    Received Adjacency Update Count : 0
    Received OAM Count : 0
    Received Other Count : 0
    Sent Syn Count : 1
    Sent Synack Count : 2
    Sent Rstack Count : 0
    Sent Ack Count : 3
    Sent Generic Resp Count : 0
    Sent OAM Count : 0
    Max Discovery Limit Exceed Count : 0
  Result Codes:
    Invalid Request Message Count : 0
    Specified Port(s) Down Count : 0
    Out of Resources Count : 0
    Request Msg Not Implemented Count: 0
    Malformed Msg Count : 0
    TLV Missing Count : 0
    Invalid TLV Contents Count : 0
    Non-Existent Port(s) Count : 0

  Version           : 0x32
  IP Address        : 192.168.9.1

```



```

System Name           : 00:00:5e:00:53:02
  Up Time              : 36
  TCP Port             : 61408
  State                : Not Established
  Subscriber Count     : 1
  Capabilities         : Topology Discovery
  System Instance      : 12
  Peer Instance        : 1
  Adjacency Timer (in 100ms) : 50
  Peer Adjacency Timer (in 100ms) : 100
  Partition Type       : 0
  Partition Flag       : 1
  Partition Identifier  : 0
  Partition Adjacencies : 0
  Dead Timer           : 23
  Received Syn Count   : 24
  Received Synack Count : 20
  Received Rstack Count : 2
  Received Ack Count   : 9
  Received Port Up Count : 5
  Received Port Down Count : 0
  Received Generic Resp Count : 0
  Received Adjacency Update Count : 0
  Received OAM Responses Count : 2
  Received Other Count : 0
  Sent Syn Count       : 20
  Sent Synack Count    : 24
  Sent Rstack Count    : 1
  Sent Generic Resp Count : 0
  Sent Ack Count       : 9
  Sent OAM Requests Count : 4
  Max Discovery Limit Exceed Count : 0
Result Codes:
  Received Sent
  Invalid Request Message Count : 0 0
  Specified Port(s) Down Count : 0 0
  Out of Resources Count : 0 0
  Request Msg Not Implemented Count: 0 0
  Malformed Msg Count : 0 0
  TLV Missing Count : 0 0
  Invalid TLV Contents Count : 0 0
  Non-Existent Port(s) Count : 0 0

```

show ancp neighbor ip-address

```
user@host> show ancp neighbor ip-address 192.0.2.85
```

```

Neighbor Information
  Version           : 0x32
  IP Address        : 192.0.2.85
  System Name       : 00:00:5e:00:53:ba
    Up Time         : 26
    TCP Port        : 32666
    State           : Established
    Subscriber Count : 4
    Capabilities     : Topo
    System Instance  : 2
    Peer Instance    : 20
    Adjacency Timer (in 100ms) : 100
    Peer Adjacency Timer (in 100ms) : 100

```

```

Partition Type           : 0
Partition Flag           : 1
Partition Identifier      : 0
Partition Adjacencies    : 0
Dead Timer                : 23
Received Syn Count       : 1
Received Synack Count     : 1
Received Rstack Count    : 0
Received Ack Count       : 4
Received Port Up Count   : 10
Received Port Down Count : 0
Received Generic Resp Count : 0
Received Adjacency Update Count : 0
Received OAM Count       : 0
Received Other Count      : 0
Sent Syn Count           : 1
Sent Synack Count        : 2
Sent Rstack Count        : 0
Sent Ack Count           : 3
Sent Generic Resp Count  : 0
Sent OAM Count           : 0
Max Discovery Limit Exceed Count : 0
Result Codes:
Invalid Request Message Count : 0
Specified Port(s) Down Count : 0
Out of Resources Count        : 0
Request Msg Not Implemented Count: 0
Malformed Msg Count          : 0
TLV Missing Count            : 0
Invalid TLV Contents Count   : 0
Non-Existent Port(s) Count   : 0

```

show ancp neighbor system-name

```
user@host> show ancp neighbor 00:00:5e:00:53:ba detail
```

```

Neighbor Information
Version           : 0x31
IP Address        : 203.0.113.101
System Name       : 00:00:5e:00:53:ba
Up Time          : 19
TCP Port         : 1028
State            : Established
Subscriber Count : 2
Capabilities      : Topology Discovery, OAM
System Instance  : 1
Peer Instance     : 10
Adjacency Timer (in 100ms) : 100
Peer Adjacency Timer (in 100ms) : 250
Partition Type    : 0
Partition Flag    : 1
Partition Identifier : 0
Partition Adjacencies : 0
Dead Timer        : 55
Received Syn Count : 1

Received Synack Count : 1
Received Rstack Count : 0
Received Ack Count    : 1

```

Received Port Up Count	: 34	
Received Port Down Count	: 0	
Received Generic Resp Count	: 0	
Received Adjacency Update Count	: 0	
Received OAM Responses Count	: 2	
Received Other Count	: 0	
Sent Syn Count	: 1	
Sent Synack Count	: 1	
Sent Rstack Count	: 0	
Sent Ack Count	: 3	
Sent Generic Resp Count	: 0	
Sent OAM Requests Count	: 4	
Max Discovery Limit Exceed Count	: 3	
Result Codes:	Received	Sent
Invalid Request Message Count	: 0	0
Specified Port(s) Down Count	: 0	0
Out of Resources Count	: 0	0
Request Msg Not Implemented Count	: 0	0
Malformed Msg Count	: 0	0
TLV Missing Count	: 0	0
Invalid TLV Contents Count	: 0	0
Non-Existent Port(s) Count	: 0	0

show ancp statistics

Syntax `show ancp statistics`
`<ip-address ip-address>`
`<system-name mac-address>`

Release Information Command introduced in Junos OS Release 13.3.

Description Display statistics for all ANCP neighbors (access nodes) or the specified ANCP neighbor.

Options **none**—Display statistics for all ANCP neighbors, including global statistics not show for individual neighbors.

ip-address *ip-address*—(Optional) Display statistics for only the neighbor with the specified IP address.

system-name *mac-address*—(Optional) Display statistics for only the neighbor with the specified MAC address.

Required Privilege Level view

Related Documentation

- [show ancp cos on page 1691](#)
- [show ancp neighbor on page 1696](#)
- [show ancp subscriber on page 1709](#)

List of Sample Output [show ancp statistics on page 1706](#)
[show ancp statistics ip-address on page 1707](#)
[show ancp statistics system-name on page 1707](#)

Output Fields [Table 82 on page 1704](#) lists the output fields for the **show ancp statistics** command. Output fields are listed in the approximate order in which they appear.

Table 82: show ancp statistics Output Fields

Field Name	Field Description
Number of neighbors	Total count of ANCP neighbors.
Number of subscribers	Total count of ANCP subscribers.
Accept Count	Number of neighbor TCP/IP sessions accepted on listener socket.

Table 82: show ancp statistics Output Fields (continued)

Field Name	Field Description
Accept Fail Count	Number of neighbor TCP/IP sessions that failed due to one of the following causes: session already exists, maximum number of ANCP connections exceeded, creation of session or neighbor failed, or protocol start failed.
No Config Accept Deny Count	Number of neighbor TCP/IP sessions that failed because the neighbor was not configured.
Received Syn Count	Number of synchronization messages received from neighbors to maintain adjacencies.
Received Synack Count	Number of synchronization acknowledgment messages received from neighbors in response to the node's synchronization messages.
Received Rstack Count	Number of messages received from neighbors indicating that the link to the neighbor needs to be reset.
Received Ack Count	Number of acknowledgment messages periodically received from neighbors after an adjacency has been established.
Received Port Up Count	Number of status messages received from neighbors indicating that a port has transitioned to the up state.
Received Port Down Count	Number of status messages received from neighbors indicating that a port has transitioned to the down state.
Received Generic Resp Count	Number of generic response messages received from neighbors.
Received Adjacency Update Count	Number of adjacency update messages received from neighbors.
Received OAM Count	Number of OAM responses received from neighbors in reply to request commands.
Received Other Count	Number of all other ANCP message packets received from neighbors that do not fit into one of the other categories.
Sent Syn Count	Number of synchronization messages sent to neighbors to maintain adjacencies.
Sent Synack Count	Number of synchronization acknowledgment messages sent to neighbors in response to the their synchronization messages.
Sent Rstack Count	Number of messages sent to neighbors indicating that the link to the neighbor needs to be reset.
Sent Ack Count	Number of acknowledgment messages periodically sent to neighbors after an adjacency has been established.
Sent Generic Resp Count	Number of generic response messages sent to neighbors.

Table 82: show ancpl statistics Output Fields (continued)

Field Name	Field Description
Sent OAM Count	Number of OAM request commands sent to neighbors.
Result Codes	<p>Number of generic response messages sent to neighbors that include each of the following result codes:</p> <ul style="list-style-type: none"> • Invalid Request Message Count—A properly formed request messages violated the protocol because of timing (such as a race condition) or direction of transmission. • Specified Port(s) Down Count—One or more of the specified ports are down because of a state mismatch between the router and an ANCP control application. • Out of Resources Count—the ANCP agent is out of resources, probably not related to the access lines. This result code is sent only by an access node. • Request Msg Not Implemented Count— • Malformed Msg Count—Message is malformed because it was corrupted in transit or there was an implementation error at either end of the connection. • TLV Missing Count—One or more mandatory TLVs was missing from a request. • Invalid TLV Contents Count—The contents of one or more TLVs in the request do not match its required specification. • Non-Existent Port(s) Count—One or more of the ports specified in a request do not exist, possibly because of a configuration mismatch between the access node and the router or AAA.

Sample Output

show ancpl statistics

```
user@host> show ancpl statistics
```

Statistics		
Number of neighbors	:	4
Number of subscribers	:	6
Accept Count	:	0
Accept Fail Count	:	0
No Config Accept Deny Count	:	0
Received Syn Count	:	2
Received Synack Count	:	1
Received Rstack Count	:	0
Received Ack Count	:	8
Received Port Up Count	:	7
Received Port Down Count	:	0
Received Generic Resp Count	:	0
Received Adjacency Update Count	:	0
Received OAM Count	:	0
Received Other Count	:	0
Sent Syn Count	:	1
Sent Synack Count	:	1
Sent Rstack Count	:	0
Sent Ack Count	:	17
Sent Generic Resp Count	:	0
Sent OAM Count	:	4
Result Codes:	Received	Sent
Invalid Request Message Count	: 0	0

Specified Port(s) Down Count	: 0	0
Out of Resources Count	: 0	0
Request Msg Not Implemented Count	: 0	0
Malformed Msg Count	: 0	0
TLV Missing Count	: 0	0
Invalid TLV Contents Count	: 0	0
Non-Existent Port(s) Count	: 0	0

show ancp statistics ip-address

```
user@host> show ancp statistics ip-address 203.0.113.1
```

Statistics	
Received Syn Count	: 2
Received Synack Count	: 1
Received Rstack Count	: 0
Received Ack Count	: 8
Received Port Up Count	: 7
Received Port Down Count	: 0
Received Generic Resp Count	: 0
Received Adjacency Update Count	: 0
Received OAM Count	: 0
Received Other Count	: 0
Sent Syn Count	: 1
Sent Synack Count	: 1
Sent Rstack Count	: 0
Sent Ack Count	: 17
Sent Generic Resp Count	: 0
Sent OAM Count	: 4
Result Codes:	
	Received Sent
Invalid Request Message Count	: 0 0
Specified Port(s) Down Count	: 0 0
Out of Resources Count	: 0 0
Request Msg Not Implemented Count	: 0 0
Malformed Msg Count	: 0 0
TLV Missing Count	: 0 0
Invalid TLV Contents Count	: 0 0
Non-Existent Port(s) Count	: 0 0

show ancp statistics system-name

```
user@host> show ancp statistics system-name 00:00:5E:00:53:02
```

Statistics	
Received Syn Count	: 2
Received Synack Count	: 1
Received Rstack Count	: 0
Received Ack Count	: 8
Received Port Up Count	: 7
Received Port Down Count	: 0
Received Generic Resp Count	: 0
Received Adjacency Update Count	: 0
Received OAM Count	: 0
Received Other Count	: 0
Sent Syn Count	: 1
Sent Synack Count	: 1
Sent Rstack Count	: 0

Sent Ack Count	: 17	
Sent Generic Resp Count	: 0	
Sent OAM Count	: 4	
Result Codes:	Received	Sent
Invalid Request Message Count	: 0	0
Specified Port(s) Down Count	: 0	0
Out of Resources Count	: 0	0
Request Msg Not Implemented Count:	0	0
Malformed Msg Count	: 0	0
TLV Missing Count	: 0	0
Invalid TLV Contents Count	: 0	0
Non-Existent Port(s) Count	: 0	0

show ancp subscriber

Syntax `show ancp subscriber`
`<brief | detail>`
`<access-aggregation-circuit-id circuit-identifier>`
`<identifier identifier>`
`<ip-address ip-address>`
`<system-name mac-address>`

Release Information Command introduced in Junos OS Release 9.4.
neighbor option replaced with **ip-address** in Junos OS Release 16.1.
system-name option introduced in Junos OS Release 16.1.
access-aggregation-circuit-id option introduced in Junos OS Release 18.4R1.

Description Display information about active subscribers regardless of the subscriber's operational state, for all subscribers (local access loops), the subscriber associated with the access line specified by an ACI, or the subscriber associated with the specified ANCP neighbor (access node).

After an ancpd restart, this command displays orphaned entries (marked with an **o**) for subscriber sessions that were established before the restart but which have not yet been reestablished. As sessions are reestablished, the number of orphaned entries displayed by the command decreases. The number reaches zero when all sessions are reestablished or when the orphaned-interface timer expires.

Options **none**—Display information about all subscribers.

brief | detail—(Optional) Display the specified level of detail.

access-aggregation-circuit-id *circuit-identifier*—(Optional) Display information about ANCP subscribers whose Access-Aggregation-Circuit-ID-ASCII attribute (TLV 0x0003) matches the specified value.

A *circuit-identifier* that begins with the **#** character indicates a backhaul line identifier. You can specify a wildcard (*) anywhere in the string.

identifier *identifier*—(Optional) Display information about the subscriber associated with the access line (ACI) specified by the access identifier.

ip-address *ip-address*—(Optional) Display information about the subscribers connected to the access node specified by the IP address.

system-name *mac-address*—(Optional) Display information about the subscribers connected to the access node specified by the MAC address.

Required Privilege Level view

- Related Documentation**
- [clear ancp subscriber on page 1685](#)
 - [show ancp cos on page 1691](#)
 - [show ancp neighbor on page 1696](#)
 - [show ancp statistics on page 1704](#)

- List of Sample Output**
- [show ancp subscriber on page 1713](#)
 - [show ancp subscriber \(After ancpd Restart\) on page 1713](#)
 - [show ancp subscriber brief on page 1713](#)
 - [show ancp subscriber detail on page 1713](#)
 - [show ancp subscriber access-aggregation-circuit-id detail on page 1714](#)
 - [show ancp subscriber identifier identifier-string detail on page 1715](#)

Output Fields Table 83 on page 1710 lists the output fields for the **show ancp subscriber** command. Output fields are listed in the approximate order in which they appear.

Table 83: show ancp subscriber Output Fields

Field Name	Field Description	Level of Output
Loop Identifier	<p>Access loop identifier as sent by the access node and configured to map the subscriber to an interface.</p> <p>An asterisk (*) indicates that the information might be stale due to receiving a Port Down message with a DSL Line State of Idle.</p> <p>Two asterisks (**) indicate that the neighbor associated with the subscriber has lost its adjacency. In this case, the DSL Line State might be Established.</p> <p>An o indicates that the entry is for an orphaned interface and represents a previously established subscriber session that has not been reestablished after an ancpd restart.</p> <p>The number of orphaned entries decreases as the ANCP neighbors reestablish adjacencies and the protocol subscriber sessions are reestablished. The command output indicates this by removing the o marker.</p> <p>Eventually the number of orphaned entries reaches zero, because either all the adjacencies and subscriber sessions have been reestablished or any remaining orphaned entries are removed when the orphaned-interface timer expires.</p>	brief none
DSL Line State	State of the DSL line: Idle , Showtime , or Silent .	brief detail
Access Type	Type of access line employed by the access node: ADSL1 , ADSL2 , ADSL2+ , VDSL1 , VDSL2 , SDSL , G.fast , VDSL2 Annex Q , SDSL bonded , VDSL2 bonded , G.fast bonded VDSL2 Annex Q bonded or OTHER .	brief detail none
Interface	Name of the interface set or logical interface.	brief detail none

Table 83: show ancp subscriber Output Fields (continued)

Field Name	Field Description	Level of Output
Rate Kbps	Actual downstream data rate for this local loop.	brief none
Neighbor	IP address of ANCP neighbor (access node).	brief none
Access Loop Circuit Identifier	<p>Access loop circuit identifier as sent by the access node and configured to map the subscriber to an interface.</p> <p>An asterisk (*) indicates that the information might be stale due to receiving a Port Down message with a DSL Line State of Idle.</p> <p>Two asterisks (**) indicate that the neighbor associated with the subscriber has lost its adjacency. In this case, the DSL Line State might be Established.</p>	detail
Neighbor IP Address	IP address of the ANCP neighbor (access node).	detail
Aggregate Circuit Identifier	ASCII identifier for the subscriber access loop; value of the Access-Aggregation-Circuit-ID-ASCII attribute (TLV 0x0003).	detail
Aggregate Circuit Identifier Binary	Binary identifier for the VLAN circuit ID.	detail
Tech Type	Type of technology employed by the subscriber. Currently Junos OS supports DSL technology type only.	detail
DSL Line Data Link	Data link protocol employed on the access loop: AAL5 or Ethernet .	detail
DSL Line Encapsulation	<p>Encapsulation type on the access loop, for Ethernet only:</p> <ul style="list-style-type: none"> • 0—NA, type not conveyed • 1—Untagged Ethernet • 2—Single-tagged Ethernet 	detail
DSL Line Encapsulation Payload	<p>Payload carried across the access loop:</p> <ul style="list-style-type: none"> • 0—NA, type not conveyed • 1—PPPoA LLC • 2—PPPoA null • 3—IPoA LLC • 4—IPoA null • 5—Ethernet over AAL5 LLC with FCS • 6—Ethernet over AAL5 LLC without FCS • 7—Ethernet over AAL5 null with FCS • 8—Ethernet over AAL5 null without FCS 	detail

Table 83: show ancp subscriber Output Fields (continued)

Field Name	Field Description	Level of Output
Interface Type	Type of interface employed for subscriber traffic: ifl for a single VLAN or interface-set for a configured group of VLANs.	detail
Actual Net Data Upstream	Actual upstream data rate for this local loop, in Kbps.	detail
Actual Net Data Downstream	Actual downstream data rate for this local loop, in Kbps.	detail
Minimum Net Data Upstream	Minimum upstream data rate desired by the operator for this local loop, in Kbps.	detail
Minimum Net Data Downstream	Minimum downstream data rate desired by the operator for this local loop, in Kbps.	detail
Maximum Net Data Upstream	Maximum upstream data rate desired by the operator for this local loop, in Kbps.	detail
Maximum Net Data Downstream	Maximum downstream data rate desired by the operator for this local loop, in Kbps.	detail
Attainable Net Data Upstream	Maximum attainable upstream data rate for this local loop, in Kbps.	detail
Attainable Net Data Downstream	Maximum attainable downstream data rate for this local loop, in Kbps.	detail
Minimum Low Power Data Downstream	Minimum downstream data rate desired by the operator for this local loop in low power state, in Kbps.	detail
Minimum Low Power Data Upstream	Minimum upstream data rate desired by the operator for this local loop in low power state, in Kbps.	detail
Maximum Interleave Delay Downstream	Maximum interleaving delay for downstream data, in milliseconds.	detail
Maximum Interleave Delay Upstream	Maximum interleaving delay for upstream data, in milliseconds.	detail
Actual Interleave Delay Downstream	Actual interleaving delay for downstream data, in milliseconds.	detail
Actual Interleave Delay Upstream	Actual interleaving delay for upstream data, in milliseconds.	detail

Sample Output

show ancp subscriber

```
user@host> show ancp subscriber
```

Loop Identifier Rate Neighbor	DSL Line State	Tech Type	Access Type	Interface Kbps
**circuit 101 203.0.113.13	Idle	DSL	ADSL1 ----	32
**circuit 102 203.0.113.13	Idle	DSL	ADSL1 ----	32
circuit 301 203.0.113.15	Showtime	DSL	ADSL1 ----	32
circuit 302 203.0.113.15	Showtime	DSL	ADSL1 ----	32

show ancp subscriber (After ancpd Restart)

```
user@host> show ancp subscriber
```

Loop Identifier Rate Neighbor	DSL Line State	Tech Type	Access Type	Interface Kbps
o circuit 201	Showtime	DSL	ADSL1 ----	222222
o circuit 202	Showtime	DSL	ADSL1 ----	222222

show ancp subscriber brief

```
user@host> show ancp subscriber brief
```

Loop Identifier	Type	Interface	Rate Kbps	Neighbor
port-1-10	VDSL2	set-ge-10410	64	203.0.113.102
port-1-11	VDSL2	set-ge-10411	64	203.0.113.111
port-2-10	VDSL2	ge-1/0/4.12	64	203.0.113.112
port-2-11	VDSL2	ge-1/0/4.13	64	203.0.113.113

show ancp subscriber detail

```
user@host> show ancp subscriber detail
```

```
Subscriber Information
* Access Loop Circuit Identifier : circuit 101
  Neighbor IP Address           : 203.0.113.13
  Aggregate Circuit Identifier Binary : 0/0
  Tech Type                     : DSL
  Access Type                   : ADSL1
  DSL Line State                : Idle
  DSL Line Data Link            : Data link 2
  DSL Line Encapsulation        : N/A
  DSL Line Encapsulation Payload : N/A
```

```

Interface Type           : N/A
Interface                 : ----
Actual Net Data Upstream : 32
Actual Net Data Downstream : 32
Minimum Net Data Upstream : 0
Minimum Net Data Downstream : 0
Maximum Net Data Upstream : 0
Maximum Net Data Downstream : 0
Attainable Net Data Upstream : 1024
Attainable Net Data Downstream : 8192
Minimum Low Power Data Downstream : 32
Minimum Low Power Data Upstream : 32
Maximum Interleave Delay Downstream : 20
Maximum Interleave Delay Upstream : 20
Actual Interleave Delay Downstream : 20
Actual Interleave Delay Upstream : 20
* Access Loop Circuit Identifier: circuit 102
  Neighbor IP Address      : 213.0.113.13
  Aggregate Circuit Identifier Binary : 0/0
  Tech Type                : DSL
  Access Type              : ADSL1
  DSL Line State           : Idle
  DSL Line Data Link       : Data link 2
  DSL Line Encapsulation   : N/A
  DSL Line Encapsulation Payload : N/A
  Interface Type          : N/A
  Interface                : ----
  Actual Net Data Upstream : 32
  Actual Net Data Downstream : 32
  Minimum Net Data Upstream : 0
  Minimum Net Data Downstream : 0
  Maximum Net Data Upstream : 0
  Maximum Net Data Downstream : 0
  Attainable Net Data Upstream : 1024
  Attainable Net Data Downstream : 8192
  Minimum Low Power Data Downstream : 32
  Minimum Low Power Data Upstream : 32
  Maximum Interleave Delay Downstream : 20
  Maximum Interleave Delay Upstream : 20
  Actual Interleave Delay Downstream : 20
  Actual Interleave Delay Upstream : 20
...

```

show ancpc subscriber access-aggregation-circuit-id detail

```
user@host> show ancpc subscriber access-aggregation-circuit-id "#TEST-DPU-C-100" detail
```

```

Subscriber Information
* Access Loop Circuit Identifier : circuit 201
  Neighbor IP Address      : 192.0.2.1
  Access Loop Remote Identifier : remote 123
  Aggregate Circuit Identifier : #TEST-DPU-C-100
  Aggregate Circuit Identifier Binary : 50
  Tech Type               : DSL
  Interface Type          : interface
  Interface               : ge-1/0/0.3221225475
  Actual Net Data Upstream : 1024
  Actual Net Data Downstream : 2048
  Maximum Net Data Upstream : 0
  Maximum Net Data Downstream : 0

```

```
* Access Loop Circuit Identifier : circuit 202
  Neighbor IP Address           : 192.0.2.1
  Access Loop Remote Identifier : remote 185
  Aggregate Circuit Identifier   : #TEST-DPU-C-100
  Aggregate Circuit Identifier Binary : 50
  Tech Type:                   : DSL
  Interface Type               : interface
  Interface                    : ge-1/0/0.3221225476
  Actual Net Data Upstream     : 1024
  Actual Net Data Downstream   : 2048
  Maximum Net Data Upstream    : 0
  Maximum Net Data Downstream  : 0
```

show ancp subscriber identifier identifier-string detail

```
user@host> show ancp subscriber identifier port-1-11 detail
```

```
Access Loop Identifier : port-1-11
  Neighbor IP Address           : 203.0.113.112
  Aggregate Circuit Identifier Binary : 0/0
  DSL Type                     : DSL 0
  Interface Type               : interface-set
  Interface                    : set-ge-10411
  DSL Line State               : Show Time
  Actual Net Data Upstream     : 64
  Actual Net Data Downstream   : 64
  DSL Line Data Link           : AAL5
  DSL Line Encapsulation       : N/A
  DSL Line Encapsulation Payload : N/A
  Minimum Net Data Upstream    : 64
  Minimum Net Data Downstream  : 64
  Maximum Net Data Upstream    : 64
  Maximum Net Data Downstream  : 64
  Attainable Net Data Upstream : 64
  Attainable Net Data Downstream : 64
  Minimum Low Power Data Downstream : 64
  Minimum Low Power Data Upstream : 64
  Maximum Interleave Delay Downstream : 50
  Maximum Interleave Delay Upstream : 50
  Actual Interleave Delay Downstream : 50
  Actual Interleave Delay Upstream : 50
```

show ancp summary

Syntax	show ancp summary
Release Information	Command introduced in Junos OS Release 13.1.
Description	Display a summary of the counts and states for all ANCP neighbors and subscribers.
Options	This command has no options.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show ancp neighbor on page 1696 • show ancp summary neighbor on page 1718 • show ancp subscriber on page 1709 • show ancp summary subscriber on page 1720
List of Sample Output	show ancp summary on page 1717
Output Fields	Table 84 on page 1716 lists the output fields for the show ancp summary command. Output fields are listed in the approximate order in which they appear.

Table 84: show ancp summary Output Fields

Field Name	Field Description
Configured	Number of ANCP neighbors in the Configured state; that is, that have been configured but never established.
Establishing	Number of ANCP neighbors in the Establishing state; that is, where negotiations are in progress.
Established	Number of ANCP neighbors in the Established state; that is, where negotiations have succeeded and the ANCP session has been established.
Not Estblshd	Number of ANCP neighbors in the Not Estblshd state; that is, that have lost a previously established adjacency and are ready to begin negotiations.
Total	Total number of ANCP neighbors; sum of neighbors in the Configured , Establishing , Established , and Not Estblshd states.
Showtime	Number of DSL lines in Showtime state.
Idle	Number of DSL lines in Idle state.

Table 84: show ancp summary Output Fields (continued)

Field Name	Field Description
Silent	Number of DSL lines in Silent state.
Unknown	Number of DSL lines where the state is not Showtime , Idle , or Silent .
Total	Total number of DSL lines (ANCP subscribers); sum of DSL lines in the Showtime , Idle , Silent , and Unknown states.

Sample Output

show ancp summary

```
user@host> show ancp summary
```

Neighbors Summary:

Configured	Establishing	Established	Not Established	Total
22	0	2	0	24

Subscribers Summary:

Showtime	Idle	Silent	Unknown	Total
4	0	0	0	4

show ancp summary neighbor

Syntax	<code>show ancp summary neighbor</code> <code><ip-address <i>ip-address</i> system-name <i>mac-address</i>></code>
Release Information	Command introduced in Junos OS Release 13.1.
Description	Display a summary of the counts and states for all ANCP neighbors and of the neighbor's subscribers when you specify a particular neighbor.
Options	ip-address <i>ip-address</i> —(Optional) IP address of the ANCP neighbor (access node). system-name <i>mac-address</i> —(Optional) MAC address of the ANCP neighbor (access node).
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show ancp summary on page 1716 • show ancp subscriber on page 1709 • show ancp summary subscriber on page 1720
List of Sample Output	show ancp summary neighbor on page 1719 show ancp summary neighbor (IP Address) on page 1719 show ancp summary neighbor (MAC Address) on page 1719
Output Fields	Table 85 on page 1718 lists the output fields for the show ancp summary command. Output fields are listed in the approximate order in which they appear.

Table 85: show ancp summary neighbor Output Fields

Field Name	Field Description
Configured	Number of ANCP neighbors in the Configured state; that is, that have been configured but never established.
Establishing	Number of ANCP neighbors in the Establishing state; that is, where negotiations are in progress.
Established	Number of ANCP neighbors in the Established state; that is, where negotiations have succeeded and the ANCP session has been established.
Not Estblshd	Number of ANCP neighbors in the Not Estblshd state; that is, that have lost a previously established adjacency and are ready to begin negotiations.
Total	Total number of ANCP neighbors; sum of neighbors in the Configured , Establishing , Established , and Not Estblshd states.

Table 85: show ancp summary neighbor Output Fields (continued)

Field Name	Field Description
Showtime	Number of DSL lines for the neighbor in Showtime state.
Idle	Number of DSL lines for the neighbor in Idle state.
Silent	Number of DSL lines for the neighbor in Silent state.
Unknown	Number of DSL lines for the neighbor where the state is not Showtime , Idle , or Silent .
Total	Total number of DSL lines (ANCP subscribers); sum of DSL lines in the Showtime , Idle , Silent , and Unknown states.

Sample Output

show ancp summary neighbor

```
user@host> show ancp summary neighbor
```

```
Neighbors Summary:
```

Configured	Establishing	Established	Not Established	Total
22	0	2	0	24

show ancp summary neighbor (IP Address)

```
user@host> show ancp summary neighbor ip-address 192.168.10.1
```

```
Neighbor Summary:192.168.10.1 status Established
```

```
Subscribers Summary:
```

Show Time	Idle	Silent	Unknown	Total
6	0	0	0	6

show ancp summary neighbor (MAC Address)

```
user@host> show ancp summary neighbor system-name 00:00:5E:00:53:02
```

```
Neighbor Summary:00:00:5E:00:53:02 status Established
```

```
Subscribers Summary:
```

Show Time	Idle	Silent	Unknown	Total
5	1	2	0	8

show ancp summary subscriber

Syntax	show ancp summary subscriber
Release Information	Command introduced in Junos OS Release 13.1.
Description	Display a summary of the counts and states for all ANCP subscribers.
Options	This command has no options.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show ancp summary on page 1716 • show ancp neighbor on page 1696 • show ancp summary neighbor on page 1718
List of Sample Output	show ancp summary subscriber on page 1720
Output Fields	Table 86 on page 1720 lists the output fields for the show ancp summary subscriber command. Output fields are listed in the approximate order in which they appear.

Table 86: show ancp summary subscriber Output Fields

Field Name	Field Description
Showtime	Number of DSL lines in Showtime state.
Idle	Number of DSL lines in Idle state.
Silent	Number of DSL lines in Silent state.
Unknown	Number of DSL lines where the state is not Showtime , Idle , or Silent .
Total	Total number of DSL lines (ANCP subscribers); sum of DSL lines in the Showtime , Idle , Silent , and Unknown states.

Sample Output

show ancp summary subscriber

```
user@host> show ancp summary subscriber
```

```
Subscribers Summary:
Show Time   Idle      Silent    Unknown   Total
```

8	1	0	1	10

CHAPTER 16

BFD Operational Commands

- `clear bfd adaptation`
- `clear bfd session`
- `show bfd session`

clear bfd adaptation

Syntax	<pre>clear bfd adaptation <all> <address session-address> <discriminator discr-number></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	<p>Clear adaptation for Bidirectional Forwarding Detection (BFD) sessions. BFD is a simple hello mechanism that detects failures in a network. Configured BFD interval timers can change, adapting to network situations. Use this command to return BFD interval timers to their configured values.</p> <p>The clear bfd adaptation command is hitless, meaning that the command does not affect traffic flow on the routing device.</p>
Options	<p>all—Clear adaptation for all BFD sessions.</p> <p>address session-address—(Optional) Clear adaptation for all BFD sessions matching the specified address.</p> <p>discriminator discr-number—(Optional) Clear adaptation for the local BFD session matching the specified discriminator.</p>
Additional Information	For more information, see the description of the bfd-liveness-detection configuration statement in the <i>Junos Routing Protocols Configuration Guide</i> .
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show bfd session on page 1727
List of Sample Output	clear bfd adaptation on page 1724
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear bfd adaptation

```
user@host> clear bfd adaptation
```


clear bfd session

List of Syntax	Syntax on page 1725 Syntax (EX Series Switch and QFX Series) on page 1725
Syntax	<pre>clear bfd session <all> <address session-address> <discriminator discr-number> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switch and QFX Series)	<pre>clear bfd session <all> <address session-address> <discriminator discr-number></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p>
Description	Drop one or more Bidirectional Forwarding Detection (BFD) sessions.
Options	<p>all—Drop all BFD sessions.</p> <p>address session-address—(Optional) Drop all BFD sessions matching the specified address.</p> <p>discriminator discr-number—(Optional) Drop the local BFD session matching the specified discriminator.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show bfd session on page 1727
List of Sample Output	clear bfd session all on page 1725
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear bfd session all

```
user@host> clear bfd session all
```


show bfd session

List of Syntax [Syntax on page 1727](#)
 [Syntax \(EX Series Switch and QFX Series\) on page 1727](#)

Syntax show bfd session
 <brief | detail | extensive | summary>
 <address *address*>
 <client rsvp-oam (brief | detail | extensive | summary) | vpls-oam (brief | detail | extensive |
 instance *instance-name* | summary)>
 <discriminator *discriminator*>
 <logical-system (all | *logical-system-name*)>
 <prefix *address*>
 <subscriber (address *destination-address* | discriminator *discriminator* | extensive)>

Syntax (EX Series Switch and QFX Series) show bfd session
 <brief | detail | extensive | summary>
 <address *address*>
 <client rsvp-oam (brief | detail | extensive | summary) | vpls-oam (brief | detail | extensive |
 instance *instance-name* | summary)>
 <discriminator *discriminator*>
 <prefix *address*>

Release Information Command introduced before Junos OS Release 7.4.
 Options **discriminator** and **address** introduced in Junos OS Release 8.2.
 Option **prefix** introduced in Junos OS Release 9.0.
 Command introduced in Junos OS Release 12.1 for the QFX Series.
 Option **client** introduced in Junos OS Release 12.3R3.
 Option **subscriber** introduced in Junos OS Release 15.1 for the MX Series.

Description Display information about active Bidirectional Forwarding Detection (BFD) sessions.

Options **none**—(Same as **brief**) Display information about active BFD sessions.

brief | detail | extensive | summary—(Optional) Display the specified level of output.

address *address*—(Optional) Display information about the BFD session for the specified neighbor address.

client rsvp-oam
 (brief | detail | extensive | summary)
 | vpls-oam
 (brief | detail | extensive | instance *instance-name* | summary)—(Optional) Display information about RSVP-OAM or VPLS-OAM BFD sessions in the specified level of output. For VPLS-OAM, display the specified level of output or display information about all of the BFD sessions for the specified VPLS routing instance.

discriminator *discriminator*—(Optional) Display information about the BFD session using the specified local discriminator.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

<subscriber (address *destination-address* | discriminator *discriminator* | extensive)>—(Optional) Display information about all BFD sessions for subscribers, or for a single BFD subscriber session with a particular destination address, or with a particular denominator.

Required Privilege Level

view

Related Documentation

- [clear bfd session on page 1725](#)
- *Understanding BFD for Static Routes for Faster Network Failure Detection*
- *Example: Configuring BFD for Static Routes for Faster Network Failure Detection*
- *Understanding BFD for OSPF*
- *Example: Configuring BFD for OSPF*
- *Understanding BFD for BGP*
- *Example: Configuring BFD on Internal BGP Peer Sessions*
- *Understanding Bidirectional Forwarding Detection Authentication for PIM*
- *Configuring BFD for PIM*
- *Understanding BFD for IS-IS*

List of Sample Output

[show bfd session on page 1732](#)
[show bfd session brief on page 1733](#)
[show bfd session detail on page 1733](#)
[show bfd session detail \(with Authentication\) on page 1733](#)
[show bfd session address extensive on page 1733](#)
[show bfd session client rsvp-oam on page 1734](#)
[show bfd session client vpls-oam summary on page 1734](#)
[show bfd session client vpls-oam instance instance-name on page 1734](#)
[show bfd session extensive on page 1734](#)
[show bfd session extensive \(with Authentication\) on page 1735](#)
[show bfd session summary on page 1736](#)
[show bfd session subscriber on page 1736](#)
[show bfd session subscriber address on page 1736](#)
[show bfd session subscriber extensive on page 1736](#)
[show bfd session subscriber discriminator extensive on page 1737](#)

Output Fields

[Table 87 on page 1729](#) describes the output fields for the **show bfd session** command. Output fields are listed in the approximate order in which they appear.

Table 87: show bfd session Output Fields

Field Name	Field Description	Level of Output
Address	Address on which the BFD session is active.	brief detail extensive none
State	State of the BFD session: Up , Down , Init (initializing), or Failing .	brief detail extensive none
Interface	Interface on which the BFD session is active.	brief detail extensive none
Detect Time	Negotiated time interval, in seconds, used to detect BFD control packets.	brief detail extensive none
Transmit Interval	Time interval, in seconds, used by the transmitting system to send BFD control packets.	brief detail extensive none
Multiplier	Negotiated multiplier by which the time interval is multiplied to determine the detection time for the transmitting system.	detail extensive
Session up time	How long a BFD session has been established.	detail extensive
Client	Protocol or process for which the BFD session is active: ISIS , OSPF , DHCP , Static , or VGD .	detail extensive
TX interval	Time interval, in seconds, used by the host system to transmit BFD control packets.	brief detail extensive none
RX interval	Time interval, in seconds, used by the host system to receive BFD control packets.	brief detail extensive none
Authenticate	Indicates that BFD authentication is configured.	detail extensive
keychain	Name of the security authentication keychain being used by a specific client. BFD authentication information for a client is provided in a single line and includes the keychain , algo , and mode parameters. Multiple clients can be configured on a BFD session.	extensive
algo	BFD authentication algorithm being used for a specific client: keyed-md5 , keyed-sha-1 , meticulous-keyed-md5 , meticulous-keyed-sha-1 , or simple-password . BFD authentication information for a client is provided in a single line and includes the keychain , algo , and mode parameters. Multiple clients can be configured on a BFD session.	extensive

Table 87: show bfd session Output Fields (continued)

Field Name	Field Description	Level of Output
mode	<p>Level of BFD authentication enforcement being used by a specific client: strict or loose. Strict enforcement indicates that authentication is configured at both ends of the session (the default). Loose enforcement indicates that one end of the session might not be authenticated.</p> <p>BFD authentication information for a client is provided in a single line and includes the keychain, algo, and mode parameters. Multiple clients can be configured on a BFD session.</p>	extensive
Local diagnostic	<p>Local diagnostic information about failing BFD sessions.</p> <p>Following are the expected values for Local Diagnostic output field:</p> <ul style="list-style-type: none"> • None—No diagnostic • CtlExpire—Control detection time expired • EchoExpire—Echo detection time expired • NbrSignal—Neighbor signalled session down • FwdPlaneReset—Forwarding plane reset • PathDown—Path down • ConcatPathDown—Concatenated path down • AdminDown—Administratively down 	detail extensive
Remote diagnostic	<p>Remote diagnostic information about failing BFD sessions.</p> <p>Following are the expected values for Remote Diagnostic output field:</p> <ul style="list-style-type: none"> • None—No diagnostic • CtlExpire—Control detection time expired • EchoExpire—Echo detection time expired • NbrSignal—Neighbor signalled session down • FwdPlaneReset—Forwarding plane reset • PathDown—Path down • ConcatPathDown—Concatenated path down • AdminDown—Administratively down 	detail extensive
Remote state	Reports whether the remote system's BFD packets have been received and whether the remote system is receiving transmitted control packets.	detail extensive
Version	BFD version: 0 or 1 .	extensive
Replicated	The replicated flag appears when nonstop routing or graceful Routing Engine switchover is configured and the BFD session has been replicated to the backup Routing Engine.	detail extensive
Min async interval	Minimum amount of time, in seconds, between asynchronous control packet transmissions across the BFD session.	extensive
Min slow interval	Minimum amount of time, in seconds, between synchronous control packet transmissions across the BFD session.	extensive

Table 87: show bfd session Output Fields (continued)

Field Name	Field Description	Level of Output
Adaptive async TX interval	Transmission interval being used because of adaptation.	extensive
RX interval	Minimum required receive interval.	extensive
Local min TX interval	Minimum amount of time, in seconds, between control packet transmissions on the local system.	extensive
Local min RX interval	Minimum amount of time, in seconds, between control packet detections on the local system.	extensive
Remote min TX interval	Minimum amount of time, in seconds, between control packet transmissions on the remote system.	extensive
Remote min RX interval	Minimum amount of time, in seconds, between control packet detections on the remote system.	extensive
Threshold transmission interval	Threshold for notification if the transmission interval increases.	extensive
Threshold for detection time	Threshold for notification if the detection time increases.	extensive
Local discriminator	Authentication code used by the local system to identify that BFD session.	extensive
Remote discriminator	Authentication code used by the remote system to identify that BFD session.	extensive
Echo mode	Information about the state of echo transmissions on the BFD session.	extensive
Prefix	LDP FEC address associated with the BFD session.	All levels
Egress, Destination	Displays the LDP FEC destination address. This field is displayed only on a router at the egress of an LDP FEC, where the BFD session has an LDP Operation, Administration, and Maintenance (OAM) client.	All levels
Remote is control-plane independent	<p>The BFD session on the remote peer is running on its Packet Forwarding Engine. In this case, when the remote node undergoes a graceful restart, the local peer can help the remote peer with the graceful restart.</p> <p>The following BFD sessions are not distributed to the Packet Forwarding Engine: tunnel-encapsulated sessions, and sessions over integrated routing and bridging (IRB) interfaces.</p>	extensive

Table 87: show bfd session Output Fields (continued)

Field Name	Field Description	Level of Output
Authentication	<p>Summary status of BFD authentication:</p> <ul style="list-style-type: none"> status—enabled/active indicates authentication is configured and active. enabled/inactive indicates authentication is configured but not active. This only occurs when the remote end of the session does not support authentication and loose checking is configured. keychain—Name of the security authentication keychain associated with the specified BFD session. algo—BFD authentication algorithm being used: keyed-md5, keyed-sha-1, meticulous-keyed-md5, meticulous-keyed-sha-1, or simple-password. mode—Level of BFD authentication enforcement: strict or loose. Strict enforcement indicates authentication is configured at both ends of the session (the default). Loose enforcement indicates that one end of the session might not be authenticated. <p>This information is only shown if BFD authentication is configured.</p>	extensive
Session ID	The BFD session ID number that represents the protection using MPLS fast reroute (FRR) and loop-free alternate (LFA).	detail extensive
sessions	Total number of active BFD sessions.	All levels
clients	Total number of clients that are hosting active BFD sessions.	All levels
Cumulative transmit rate	Total number of BFD control packets transmitted per second on all active sessions.	All levels
Cumulative receive rate	Total number of BFD control packets received per second on all active sessions.	All levels
Multi-hop, min-recv-TTL	Minimum time to live (TTL) accepted if the session is configured for multihop.	extensive
route table	Route table used if the session is configured for multihop.	extensive
local address	<p>Local address of the source used if the session is configured for multihop.</p> <p>The source IP address for outgoing BFD packets from the egress side of an MPLS BFD session is based on the outgoing interface IP address.</p>	extensive

Sample Output

show bfd session

```
user@host> show bfd session
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.9.1.33	Up	so-7/1/0.0	0.600	0.200	3
10.9.1.29	Up	ge-4/0/0.0	0.600	0.200	3


```
2 sessions, 2 clients
Cumulative transmit rate 10.0 pps, cumulative receive rate 10.0 pps
```

show bfd session brief

The output for the **show bfd session brief** command is identical to that for the **show bfd session** command.

show bfd session detail

```
user@host> show bfd session detail
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.9.1.33	Up	so-7/1/0.0	0.600	0.200	3
Client OSPF, TX interval 0.200, RX interval 0.200, multiplier 3					
Session up time 3d 00:34:02					
Local diagnostic None, remote diagnostic None					
Remote state Up, version 1					
Replicated					
10.9.1.29	Up	ge-4/0/0.0	0.600	0.200	3
Client ISIS L2, TX interval 0.200, RX interval 0.200, multiplier 3					
Session up time 3d 00:29:04, previous down time 00:00:01					
Local diagnostic NbrSignal, remote diagnostic AdminDown					
Remote state Up, version 1					

```
2 sessions, 2 clients
Cumulative transmit rate 10.0 pps, cumulative receive rate 10.0 pps
```

show bfd session detail (with Authentication)

```
user@host> show bfd session detail
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.9.1.33	Up	so-7/1/0.0	0.600	0.200	3
Client OSPF, TX interval 0.200, RX interval 0.200, multiplier 3, Authenticate					
Session up time 3d 00:34:18					
Local diagnostic None, remote diagnostic None					
Remote state Up, version 1					
Replicated					
10.9.1.29	Up	ge-4/0/0.0	0.600	0.200	3
Client ISIS L2, TX interval 0.200, RX interval 0.200, multiplier 3					
Session up time 3d 00:29:12, previous down time 00:00:01					
Local diagnostic NbrSignal, remote diagnostic AdminDown					
Remote state Up, version 1					

```
2 sessions, 2 clients
Cumulative transmit rate 10.0 pps, cumulative receive rate 10.0 pps
```

show bfd session address extensive

```
user@host> show bfd session 10.255.245.212 extensive
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.255.245.212	Up		1.200	0.400	3
Client Static, TX interval 0.400, RX interval 0.400, multiplier 3					

```

Session up time 00:17:03, previous down time 00:00:14
Local diagnostic CtlExpire, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 0.400, min slow interval 1.000
Adaptive async tx interval 0.400, rx interval 0.400
Local min tx interval 0.400, min rx interval 0.400, multiplier 3
Remote min tx interval 0.400, min rx interval 0.400, multiplier 3
Threshold transmission interval 0.000, Threshold for detection time 0.000
Local discriminator 6, remote discriminator 16
Echo mode disabled/inactive
Multi-hop, min-recv-TTL 255, route-table 0, local-address 10.255.245.205

```

```

1 sessions, 1 clients
Cumulative transmit rate 2.5 pps, cumulative receive rate 2.5 pps

```

show bfd session client rsvp-oam

```
user@host> show bfd session client rsvp-oam
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
192.168.0.223	Up		540.000	180.000	3

```

1 Up sessions, 0 Down sessions
1 sessions, 1 clients
Cumulative transmit rate 0.0 pps, cumulative receive rate 0.0 pps

```

show bfd session client vpls-oam summary

```
user@host> show bfd session client vpls-oam summary
```

```

1 Up sessions, 1 Down sessions
2 sessions, 2 clients
Cumulative transmit rate 2.0 pps, cumulative receive rate 1.0 pps

```

show bfd session client vpls-oam instance instance-name

```
user@host> show bfd session client vpls-oam instance vpls
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
127.0.0.1	Up	ae9.0	3.000	1.000	3

```

1 Up Sessions, 0 Down Sessions
1 sessions, 1 clients
Cumulative transmit rate 1.0 pps, cumulative receive rate 1.0 pps

```

show bfd session extensive

```
user@host> show bfd session extensive
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.31.1.2	Up	ge-2/1/8.0	0.030	0.010	3

Client OSPF realm ospf-v2 Area 0.0.0.0, TX interval 0.010, RX interval 0.010

```

Session up time 00:10:13
Local diagnostic None, remote diagnostic None
Remote state Up, version 1
Replicated
Min async interval 0.010, min slow interval 1.000
Adaptive async TX interval 0.010, RX interval 0.010
Local min TX interval 0.010, minimum RX interval 0.010, multiplier 3
Remote min TX interval 0.010, min RX interval 0.010, multiplier 3
Local discriminator 12, remote discriminator 4
Echo mode disabled/inactive
Remote is control-plane independent
  Session ID: 0x201
  Micro-BFD Session

```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.31.2.2	Up	ge-2/1/4.0	0.030	0.010	3

```

Client OSPF realm ospf-v2 Area 0.0.0.0, TX interval 0.010, RX interval 0.010
Session up time 00:10:14
Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 0.010, min slow interval 1.000
Adaptive async TX interval 0.010, RX interval 0.010
Local min TX interval 0.010, minimum RX interval 0.010, multiplier 3
Remote min TX interval 0.010, min RX interval 0.010, multiplier 3
Local discriminator 13, remote discriminator 5
Echo mode disabled/inactive
Remote is control-plane independent
  Session ID: 0x202

```

2 sessions, 2 clients
Cumulative transmit rate 200.0 pps, cumulative receive rate 200.0 pps

show bfd session extensive (with Authentication)

```
user@host> show bfd session extensive
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
192.168.208.26	Up	so-1/0/0.0	2.400	0.800	10

```

Client Static, TX interval 0.600, RX interval 0.600, Authenticate
  keychain bfd, algo keyed-md5, mode loose
Session up time 00:18:07
Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 0.600, min slow interval 1.000
Adaptive async TX interval 0.600, RX interval 0.600
Local min TX interval 0.600, minimum RX interval 0.600, multiplier 10
Remote min TX interval 0.800, min RX interval 0.800, multiplier 3
Local discriminator 2, remote discriminator 3
Echo mode disabled/inactive
Authentication enabled/active, keychain bfd, algo keyed-md5, mode loose

```

1 sessions, 1 clients
Cumulative transmit rate 1.2 pps, cumulative receive rate 1.2 pps

show bfd session summary

```
user@host> show bfd session summary
2 sessions, 2 clients
Cumulative transmit rate 10.0 pps, cumulative receive rate 10.0 pps
```

show bfd session subscriber

```
user@host> show bfd session subscriber

      Detect Transmit
Address State Interface Time Interval Multiplier
1.0.0.2 Up ae0.0 90.000 30.000 3
1.0.0.6 Up ae0.1 90.000 30.000 3
1.0.0.10 Up ae0.2 90.000 30.000 3
1.0.0.14 Up ae0.3 90.000 30.000 3
1.0.0.18 Up ae0.4 90.000 30.000 3

20 sessions, 20 clients
```

show bfd session subscriber address

```
user@host> show bfd session subscriber address 1.0.0.2

      Detect Transmit
Address State Interface Time Interval Multiplier
1.0.0.2 Up ae0.0 90.000 30.000 3

1 sessions, 1 clients
Cumulative transmit rate 5.0 pps, cumulative receive rate 5.0 pps
```

show bfd session subscriber extensive

```
user@host> show bfd session subscriber extensive

      Detect Transmit
Address State Interface Time Interval Multiplier
1.0.0.2 Up ae0.0 90.000 30.000 3

Client DHCP, TX interval 30.000, RX interval 30.000
Session up time 09:11:50
Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 30.000, min slow interval 30.000
Adaptive async TX interval 30.000, RX interval 30.000
Local min TX interval 30.000, minimum RX interval 30.000, multiplier 3
Remote min TX interval 30.000, min RX interval 30.000, multiplier 3
Local discriminator 20, remote discriminator 16
Echo mode disabled/inactive
Remote is control-plane independent
Session ID: 0x1

      Detect Transmit
Address State Interface Time Interval Multiplier
1.0.0.6 Up ae0.1 90.000 30.000 3

Client DHCP, TX interval 30.000, RX interval 30.000
Session up time 09:11:50
```

```

Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 30.000, min slow interval 30.000
Adaptive async TX interval 30.000, RX interval 30.000
Local min TX interval 30.000, minimum RX interval 30.000, multiplier 3
Remote min TX interval 30.000, min RX interval 30.000, multiplier 3
Local discriminator 21, remote discriminator 17
Echo mode disabled/inactive
Remote is control-plane independent
Session ID: 0x2

```

show bfd session subscriber discriminator extensive

```
user@host> show bfd session subscriber discriminator 20 extensive
```

```

      Detect   Transmit
Address State Interface Time   Interval Multiplier
1.0.0.2 Up    ae0.0  90.000  30.000   3

Client DHCP, TX interval 30.000, RX interval 30.000
Session up time 09:11:50
Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 30.000, min slow interval 30.000
Adaptive async TX interval 30.000, RX interval 30.000
Local min TX interval 30.000, minimum RX interval 30.000, multiplier 3
Remote min TX interval 30.000, min RX interval 30.000, multiplier 3
Local discriminator 20, remote discriminator 16
Echo mode disabled/inactive
Remote is control-plane independent
Session ID: 0x1

1 sessions, 1 clients
Cumulative transmit rate 5.0 pps, cumulative receive rate 5.0 pps

```


CHAPTER 17

BGP Operational Commands

- `clear bgp damping`
- `clear bgp neighbor`
- `clear bgp table`
- `show bgp bmp`
- `show bgp group`
- `show bgp group traffic-statistics`
- `show bgp neighbor`
- `show bgp replication`
- `show bgp summary`
- `show policy damping`

clear bgp damping

List of Syntax	Syntax on page 1740 Syntax (EX Series Switch and QFX Series) on page 1740
Syntax	<pre>clear bgp damping <logical-system (all <i>logical-system-name</i>)> <prefix></pre>
Syntax (EX Series Switch and QFX Series)	<pre>clear bgp damping <prefix></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear BGP route flap damping information.
Options	none —Clear all BGP route flap damping information. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system. prefix —(Optional) Clear route flap damping information for only the specified destination prefix.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show policy damping on page 1788• show route damping on page 2305
List of Sample Output	clear bgp damping on page 1740
Output Fields	This command produces no output.

Sample Output

clear bgp damping

```
user@host> clear bgp damping
```


clear bgp neighbor

List of Syntax [Syntax on page 1741](#)
 [Syntax \(EX Series Switch and QFX Series\) on page 1741](#)

Syntax

```
clear bgp neighbor
<all>
<as as-number>
<gracefully>
<instance instance-name>
<logical-system (all | logical-system-name)>
<malformed-route>
<neighbor>
<soft | soft-inbound>
<soft-minimum-igp>
<stale-routes>
```

Syntax (EX Series Switch and QFX Series)

```
clear bgp neighbor
<all>
<as as-number>
<instance instance-name>
<malformed-route>
<neighbor>
<soft | soft-inbound>
<soft-minimum-igp>
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
 malformed-route option introduced in Junos OS Release 13.2.
 all option introduced in Junos OS Release 14.2.
 gracefully and **stale-routes** options introduced in Junos OS Release 15.1.

Description Perform one of the following tasks:

- Change the state of one or more BGP neighbors to **IDLE**. For neighbors in the **ESTABLISHED** state, this command drops the TCP connection to the neighbors and then reestablishes the connection.
- (**soft** keyword only) Reapply export policies and send refresh updates to one or more BGP neighbors without changing their state.
- (**soft-inbound** keyword only) Send a route-refresh message to one or more BGP neighbors without changing their state, and reapply import policies on the received updates.

Options **all**—Change the state of all BGP neighbors to **IDLE**.

as *as-number*—(Optional) Apply this command only to neighbors in the specified autonomous system (AS).

gracefully—(Optional) Enable the BGP peer to start graceful-restart receiving-speaker mode. The receiving speaker also sends its own routes to the restarted speaker, and sends an End-of-RIB marker when it completes the update. The **clear bgp neighbor *neighbor-address* gracefully** command is the same as **clear bgp neighbor hard** (the default for **clear bgp neighbor**), but it does not use the new Hard Reset subcode on the Notify and Cease messages that are sent. This allows the neighbor to enter GR or LLGR helper mode, if negotiated. The session is still cleared on this router, and this router does not enter GR or LLGR helper mode.

instance *instance-name*—(Optional) Apply this command only to neighbors for the specified routing instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

malformed-route—(Optional) Remove malformed routes. If a specific neighbor is provided, Junos OS removes malformed routes for that particular neighbor. Otherwise, Junos OS removes malformed routes for all BGP neighbors. To find routes that have malformed attributes, run the **show route hidden** command, and look for routes marked with **MalformedAttr** in the AS path field.

neighbor—(Optional) IP address of a BGP peer. Apply this command only to the specified neighbor.

soft—(Optional) Reapply any export policies and send refresh updates to neighbors without clearing the state.

soft-inbound—(Optional) Send a route-refresh message to BGP neighbors and reapply import policies on the route updates received from the BGP neighbors without clearing the BGP state.

soft-minimum-igp—(Optional) Provide soft refresh of the outbound state when the interior gateway protocol (IGP) metric is reset.

stale-routes—(Optional) Any stale route currently being held for the specified neighbor because of BGP graceful restart (GR) or long-lived graceful restart (LLGR) receiver mode operations.

Required Privilege
Level

clear

Related
Documentation

- [show bgp neighbor on page 1759](#)

List of Sample Output

[clear bgp neighbor on page 1743](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

`clear bgp neighbor`

```
user@host> clear bgp neighbor
```

clear bgp table

Syntax	<code>clear bgp table <i>table-name</i></code> <code><logical-system (all <i>logical-system-name</i>)></code>
Syntax (EX Series Switch and QFX Series)	<code>clear bgp table <i>table-name</i></code>
Release Information	Command introduced in Junos OS Release 9.0. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Request that BGP refresh routes in a specified routing table.
Options	logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system. <i>table-name</i> —Request that BGP refresh routes in the specified table.
Additional Information	In some cases, a prefix limit is associated with a routing table for a VPN instance. When this limit is exceeded (for example, because of a network misconfiguration), some routes might not be inserted in the table. Such routes need to be added to the table after the network issue is resolved. Use the clear bgp table command to request that BGP refresh routes in a VPN instance table.
Required Privilege Level	clear
List of Sample Output	clear bgp table private.inet.0 on page 1744 clear bgp table inet.6 logical-system all on page 1744 clear bgp table private.inet.6 logical-system ls1 on page 1745 clear bgp table logical-system all inet.0 on page 1745 clear bgp table logical-system ls2 private.inet.0 on page 1745
Output Fields	This command produces no output.

Sample Output

`clear bgp table private.inet.0`

```
user@host> clear bgp table private.inet.0
```

`clear bgp table inet.6 logical-system all`

```
user@host> clear bgp table inet.6 logical-system all
```

clear bgp table private.inet.6 logical-system ls1

```
user@host> clear bgp table private.inet.6 logical-system ls1
```

clear bgp table logical-system all inet.0

```
user@host> clear bgp table logical-system all inet.0
```

clear bgp table logical-system ls2 private.inet.0

```
user@host> clear bgp table logical-system ls2 private.inet.0
```

show bgp bmp

Syntax	show bgp bmp
Release Information	<p>Command introduced in Junos OS Release 9.5.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display information about the BGP Monitoring Protocol (BMP).
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show bgp bmp on page 1746
Output Fields	Table 88 on page 1746 lists the output fields for the show bgp bmp command. Output fields are listed in the approximate order in which they appear.

Table 88: show bgp bmp Output Fields

Field Name	Field Description
BMP station address/port	IP address and port number of the monitoring station to which BGP Monitoring Protocol (BMP) statistics are sent.
BMP session state	Status of the BMP session: UP or DOWN .
Memory consumed by BMP	Memory used by the active BMP session.
Statistics timeout	Amount of time, in seconds, between transmissions of BMP data to the monitoring station.
Memory limit	Threshold, in bytes, at which the routing device stops collecting BMP data.
Memory-connect retry timeout	Amount of time, in seconds, after which the routing device attempts to resume a BMP session that was ended after the configured memory threshold was exceeded.

Sample Output

show bgp bmp

```
user@host> show bgp bmp
```

```
BMP station address/port: 172.24.24.157+5454
BMP session state: DOWN
Memory consumed by BMP: 0
Statistics timeout: 15
Memory limit: 10485760
Memory connect retry timeout: 600
```

show bgp group

List of Syntax [Syntax on page 1748](#)
[Syntax \(EX Series Switch and QFX Series\) on page 1748](#)

Syntax

```
show bgp group
<brief | detail | summary>
<group-name>
<exact-instance instance-name>
<instance instance-name>
<logical-system (all | logical-system-name)>
<rtf>
```

Syntax (EX Series Switch and QFX Series)

```
show bgp group
<brief | detail | summary>
<group-name>
<exact-instance instance-name>
<instance instance-name>
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
exact-instance option introduced in Junos OS Release 11.4.
 From Junos OS release 18.4 onwards, **show bgp group group-name** does an exact match and displays groups with names matching exactly with that of the specified group-name. For all Junos OS releases preceding 18.4, the implementation was performed using the prefix matches (example: if there are two groups grp1, grp2 and the CLI command **show bgp group grp** was issued, then both grp1, grp2 were displayed).

Description Display information about the configured BGP groups.

Options **none**—Display group information about all BGP groups.

brief | detail | summary—(Optional) Display the specified level of output.

group-name—(Optional) Display group information for the specified group.

exact-instance instance-name—(Optional) Display information for the specified instance only.

instance instance-name—(Optional) Display information about BGP groups for all routing instances whose name begins with this string (for example, **cust1**, **cust11**, and **cust111** are all displayed when you run the **show bgp group instance cust1** command). The instance name can be master for the main instance, or any valid configured instance name or its prefix.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

rtf—(Optional) Display BGP group route targeting information.

Required Privilege Level view

List of Sample Output [show bgp group on page 1752](#)
[show bgp group on page 1752](#)
[show bgp group brief on page 1753](#)
[show bgp group detail on page 1753](#)
[show bgp group rtf detail on page 1754](#)
[show bgp group summary on page 1755](#)

Output Fields [Table 89 on page 1749](#) describes the output fields for the **show bgp group** command. Output fields are listed in the approximate order in which they appear.

Table 89: show bgp group Output Fields

Field Name	Field Description	Level of Output
Group Type or Group	Type of BGP group: Internal or External .	All levels
group-index	Index number for the BGP peer group. The index number differentiates between groups when a single BGP group is split because of different configuration options at the group and peer levels.	rtf detail
AS	AS number of the peer. For internal BGP (IBGP), this number is the same as Local AS .	brief detail none
Local AS	AS number of the local routing device.	brief detail none
Name	Name of a specific BGP group.	brief detail none
Options	The Network Layer Reachability Information (NLRI) format used for BGP VPN multicast.	none none
Index	Unique index number of a BGP group.	brief detail none
Flags	Flags associated with the BGP group. This field is used by Juniper Networks customer support.	brief detail none
BGP-Static Advertisement Policy	Policies configured for the BGP group with the advertise-bgp-static policy statement.	brief none

Table 89: show bgp group Output Fields (continued)

Field Name	Field Description	Level of Output
Remove-private options	Options associated with the remove-private statement.	brief detail none
Holdtime	Maximum number of seconds allowed to elapse between successive keepalive or update messages that BGP receives from a peer in the BGP group, after which the connection to the peer is closed and routing devices through that peer become unavailable.	brief detail none
Export	Export policies configured for the BGP group with the export statement.	brief detail none
Optimal Route Reflection	Client nodes (primary and backup) configured in the BGP group.	brief detail none
MED tracks IGP metric update delay	Time, in seconds, that updates to multiple exit discriminator (MED) are delayed. Also displays the time remaining before the interval is set to expire	All levels
Traffic Statistics Interval	Time between sample periods for labeled-unicast traffic statistics, in seconds.	brief detail none
Total peers	Total number of peers in the group.	brief detail none
Established	Number of peers in the group that are in the established state.	All levels
Active/Received/Accepted/Damped	<p>Multipurpose field that displays information about BGP peer sessions. The field's contents depend upon whether a session is established and whether it was established in the main routing device or in a routing instance.</p> <ul style="list-style-type: none"> • If a peer is not established, the field shows the state of the peer session: Active, Connect, or Idle. • If a BGP session is established in the main routing device, the field shows the number of active, received, accepted, and damped routes that are received from a neighbor and appear in the inet.0 (main) and inet.2 (multicast) routing tables. For example, 8/10/10/2 and 2/4/4/0 indicate the following: <ul style="list-style-type: none"> • 8 active routes, 10 received routes, 10 accepted routes, and 2 damped routes from a BGP peer appear in the inet.0 routing table. • 2 active routes, 4 received routes, 4 accepted routes, and no damped routes from a BGP peer appear in the inet.2 routing table. 	summary
ip-addresses	List of peers who are members of the group. The address is followed by the peer's port number.	All levels

Table 89: show bgp group Output Fields (continued)

Field Name	Field Description	Level of Output
Route Queue Timer	Number of seconds until queued routes are sent. If this time has already elapsed, this field displays the number of seconds by which the updates are delayed.	detail
Route Queue	Number of prefixes that are queued up for sending to the peers in the group.	detail
<i>inet.number</i>	Number of active, received, accepted, and damped routes in the routing table. For example, inet.0: 7/10/9/0 indicates the following: <ul style="list-style-type: none"> 7 active routes, 10 received routes, 9 accepted routes, and no damped routes from a BGP peer appear in the inet.0 routing table. 	none
Table <i>inet.number</i>	Information about the routing table. <ul style="list-style-type: none"> Received prefixes—Total number of prefixes from the peer, both active and inactive, that are in the routing table. Active prefixes—Number of prefixes received from the peer that are active in the routing table. Suppressed due to damping—Number of routes currently inactive because of damping or other reasons. These routes do not appear in the forwarding table and are not exported by routing protocols. Advertised prefixes—Number of prefixes advertised to a peer. Received external prefixes—Total number of prefixes from the external BGP (EBGP) peers, both active and inactive, that are in the routing table. Active external prefixes—Number of prefixes received from the EBGP peers that are active in the routing table. Externals suppressed—Number of routes received from EBGP peers currently inactive because of damping or other reasons. Received internal prefixes—Total number of prefixes from the IBGP peers, both active and inactive, that are in the routing table. Active internal prefixes—Number of prefixes received from the IBGP peers that are active in the routing table. Internals suppressed—Number of routes received from IBGP peers currently inactive because of damping or other reasons. RIB State—Status of the graceful restart process for this routing table: BGP restart is complete, BGP restart in progress, VPN restart in progress, or VPN restart is complete. 	detail
Groups	Total number of groups.	All levels
Peers	Total number of peers.	All levels
External	Total number of external peers.	All levels
Internal	Total number of internal peers.	All levels
Down peers	Total number of unavailable peers.	All levels

Table 89: show bgp group Output Fields (continued)

Field Name	Field Description	Level of Output
Flaps	Total number of flaps that occurred.	All levels
Table	Name of a routing table.	brief, none
Tot Paths	Total number of routes.	brief, none
Act Paths	Number of active routes.	brief, none
Suppressed	Number of routes currently inactive because of damping or other reasons. These routes do not appear in the forwarding table and are not exported by routing protocols.	brief, none
History	Number of withdrawn routes stored locally to keep track of damping history.	brief, none
Damp State	Number of active routes with a figure of merit greater than zero, but lower than the threshold at which suppression occurs.	brief, none
Pending	Routes being processed by the BGP import policy.	brief, none
Group	Group the peer belongs to in the BGP configuration.	detail
Receive mask	Mask of the received target included in the advertised route.	detail
Entries	Number of route entries received.	detail
Target	Route target that is to be passed by route-target filtering. If a route advertised from the provider edge (PE) routing device matches an entry in the route-target filter, the route is passed to the peer.	detail
Mask	Mask which specifies that the peer receive routes with the given route target.	detail

Sample Output

show bgp group

```
user@host> show bgp group
```

show bgp group

```
user@host> show bgp group
```

```
Group Type: Internal    AS: 1001                Local AS: 1001
Name: ibgp              Index: 2                 Flags: Export Eval
Holdtime: 0
Optimal Route Reflection: igp-primary 1.1.1.1, igp-backup 1.1.2.1
Total peers: 1          Established: 1
1.1.1.2+179
```

```

Trace options: all
Trace file: /var/log/bgp-log size 10485760 files 10
bgp.l3vpn.2: 0/0/0/0
vpn-1.inet.2: 0/0/0/0

Group Type: Internal    AS: 1001                Local AS: 1001
Name: ibgp              Index: 3                Flags: Export Eval
Options: RFC6514CompliantSafi129
Holdtime: 0
Optimal Route Reflection: igp-primary 1.1.1.1, igp-backup 1.1.2.1
Total peers: 1          Established: 1
1.1.1.5+61698
Trace options: all
Trace file: /var/log/bgp-log size 10485760 files 10
bgp.l3vpn.2: 2/2/2/0
vpn-1.inet.2: 2/2/2/0

```

Groups: 2	Peers: 2	External: 0	Internal: 2	Down peers: 0	Flaps: 0
Table	Tot Paths	Act Paths	Suppressed	History Damp State	Pending
bgp.l3vpn.2					
vpn-1.inet.0	2	2	0	0	0
vpn-1.inet.2	0	0	0	0	0
vpn-1.inet6.0	2	2	0	0	0
vpn-1.mdt.0	0	0	0	0	0
	0	0	0	0	0

show bgp group brief

```
user@host> show bgp group brief
```

Groups: 2	Peers: 2	External: 0	Internal: 2	Down peers: 1	Flaps: 0
Table	Tot Paths	Act Paths	Suppressed	History Damp State	Pending
inet.0					
	0	0	0	0	0
bgp.l3vpn.0					
	0	0	0	0	0
bgp.rtarget.0					
	2	0	0	0	0

show bgp group detail

```
user@host> show bgp group detail
```

```

Group Type: Internal    AS: 1                Local AS: 1
Name: ibgp              Index: 0             Flags: <Export Eval>
Holdtime: 0
Optimal Route Reflection: igp-primary 1.1.1.1, igp-backup 1.1.2.1
Total peers: 3          Established: 0
22.0.0.2
22.0.0.8
22.0.0.5

```

```

Groups: 1 Peers: 3 External: 0 Internal: 3 Down peers: 3 Flaps: 3
Table bgp.l3vpn.0
  Received prefixes: 0
  Accepted prefixes: 0
  Active prefixes: 0
  Suppressed due to damping: 0
  Received external prefixes: 0
  Active external prefixes: 0
  Externals suppressed: 0
  Received internal prefixes: 0
  Active internal prefixes: 0
  Internals suppressed: 0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
Table bgp.mdt.0
  Received prefixes: 0
  Accepted prefixes: 0
  Active prefixes: 0
  Suppressed due to damping: 0
  Received external prefixes: 0
  Active external prefixes: 0
  Externals suppressed: 0
  Received internal prefixes: 0
  Active internal prefixes: 0
  Internals suppressed: 0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
Table VPN-A.inet.0
  Received prefixes: 0
  Accepted prefixes: 0
  Active prefixes: 0
  Suppressed due to damping: 0
  Received external prefixes: 0
  Active external prefixes: 0
  Externals suppressed: 0
  Received internal prefixes: 0
  Active internal prefixes: 0
  Internals suppressed: 0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
Table VPN-A.mdt.0
  Received prefixes: 0
  Accepted prefixes: 0
  Active prefixes: 0
  Suppressed due to damping: 0
  Received external prefixes: 0
  Active external prefixes: 0
  Externals suppressed: 0
  Received internal prefixes: 0
  Active internal prefixes: 0
  Internals suppressed: 0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete

```

show bgp group rtf detail

```

user@host> show bgp group rtf detail

Group: internal (group-index: 0)
  Receive mask: 00000002

```

Table: bgp.rtarget.0		Entries: 2
Target	Mask	
100:100/64	00000002	
200:201/64	(Group)	
Group: internal (group-index: 1)		
Table: bgp.rtarget.0		Entries: 1
Target	Mask	
200:201/64	(Group)	

show bgp group summary

user@host> show bgp group summary					
Group	Type	Peers	Established	Active/Received/Accepted/Damped	
ibgp	Internal	3	0		
Groups: 1 Peers: 3 External: 0 Internal: 3 Down peers: 3 Flaps: 3					
bgp.l3vpn.0	:	0/0/0/0	External: 0/0/0/0	Internal: 0/0/0/0	
bgp.mdt.0	:	0/0/0/0	External: 0/0/0/0	Internal: 0/0/0/0	
VPN-A.inet.0	:	0/0/0/0	External: 0/0/0/0	Internal: 0/0/0/0	
VPN-A.mdt.0	:	0/0/0/0	External: 0/0/0/0	Internal: 0/0/0/0	

show bgp group traffic-statistics

Syntax show bgp group traffic-statistics
 <brief | detail>
 <group-name>
 <labeled-path label label>
 <logical-system (all | logical-system-name)>

Release Information Command introduced before Junos OS Release 7.4.
 labeled-path option introduced in Junos OS Release 18.1R1 for the MX Series.

Description Display the traffic statistics for configured Border Gateway Protocol (BGP) groups.

Options none—Display traffic statistics for all BGP groups.

brief | detail—(Optional) Display the specified level of output.

group-name—(Optional) Display BGP traffic statistics for only the specified group.

label-path—(Optional) Display labeled unicast traffic statistics at the ingress.

logical-system (all | logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show bgp group traffic-statistics \(Per-Group-Label Not Configured\) on page 1757](#)
[show bgp group traffic-statistics \(Per-Group-Label Configured\) on page 1757](#)
[show bgp group traffic-statistics labeled-path \(Labeled Unicast\) on page 1758](#)

Output Fields [Table 90 on page 1756](#) describes the output fields for the **show bgp group traffic-statistics** command. Output fields are listed in the approximate order in which they appear.

Table 90: show bgp group traffic-statistics Output Fields

Field Name	Field Description
Group name	Name of a specific BGP group.
Group Index	Index number for the BGP group.
NLRI	Network layer reachability information (NLRI) indicating the source of the traffic statistics for the BGP group.
FEC	Forwarding equivalence classes (FECs) associated with the BGP group.
Packets	Number of packets sent through each FEC.

Table 90: show bgp group traffic-statistics Output Fields (continued)

Field Name	Field Description
Bytes	Number of bytes transmitted through each FEC.
EgressAS	Autonomous system (AS) number of the egress router.
AdvLabel	Label associated with each FEC.

Sample Output

show bgp group traffic-statistics (Per-Group-Label Not Configured)

```
user@host> show bgp group traffic-statistics
```

```

Group Name: ext1      Group Index: 0      NLRI: inet-labeled-unicast
FEC                   Packets          Bytes      EgressAS  AdvLabel
10.255.245.55         0                0          I         100224
10.255.245.57         0                0          I         100240
100.101.0.0           550             48400      25        100256
100.102.0.0           550             48400      25        100256
100.103.0.0           550             48400      25        100272
100.104.0.0           550             48400      25        100272
192.168.25.0          0                0          I         100288

```

```

Group Name: ext2      Group Index: 1      NLRI: inet-labeled-unicast
FEC                   Packets          Bytes      EgressAS  AdvLabel
10.255.245.55         0                0          I         100224
10.255.245.57         0                0          I         100240
100.101.0.0           550             48400      25        100256
100.102.0.0           550             48400      25        100256
100.103.0.0           550             48400      25        100272
100.104.0.0           550             48400      25        100272
192.168.25.0          0                0          I         100288

```

show bgp group traffic-statistics (Per-Group-Label Configured)

```
user@host> show bgp group traffic-statistics
```

```

Group Name: ext1      Group Index: 0      NLRI: inet-labeled-unicast
FEC                   Packets          Bytes      EgressAS  AdvLabel
10.255.245.55         0                0          I         100384
10.255.245.57         0                0          I         100400
100.101.0.0           101             8888       25        100416
100.102.0.0           101             8888       25        100416
100.103.0.0           0                0          25        100432
100.104.0.0           0                0          25        100432
192.168.25.0          0                0          I         100448

```

```

Group Name: ext2      Group Index: 1      NLRI: inet-labeled-unicast
FEC                   Packets          Bytes      EgressAS  AdvLabel
10.255.245.55         0                0          I         100304
10.255.245.57         0                0          I         100320
100.101.0.0           0                0          25        100336
100.102.0.0           0                0          25        100336
100.103.0.0           101             8888       25        100352

```

100.104.0.0	101	8888	25	100352
192.168.25.0	0	0	I	100368

show bgp group traffic-statistics labeled-path (Labeled Unicast)

```
user@host> show bgp group traffic-statistics labeled-path
```

Labels	NextHop	Packets	Bytes
3(top)	10.1.1.1	0	0
299840(top)	40.1.1.1	0	0
110001(top)	40.1.1.1	2	168
110002			
110003			
110001(top)	40.1.1.1	0	0
110072			
110073			
110071(top)	40.1.1.1	0	0
110072			
110073			
120001(top)	40.1.1.1	0	0
120002			
120003			
1000002(top)	40.1.1.1	2	168
1000003			
1000004			

show bgp neighbor

List of Syntax [Syntax on page 1759](#)
 [Syntax \(EX Series Switch, QFX Series, and OCX Series\) on page 1759](#)

Syntax `show bgp neighbor`
 `<exact-instance instance-name>`
 `<instance instance-name>`
 `<logical-system (all | logical-system-name)>`
 `<neighbor-address>`
 `<output-queue>`
 `<orf (detail | neighbor-address)>`

Syntax (EX Series Switch, QFX Series, and OCX Series) `show bgp neighbor`
 `<instance instance-name>`
 `<exact-instance instance-name>`
 `<neighbor-address>`
 `<orf (neighbor-address | detail)`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1x53-D20 for the OCX Series.
 orf option introduced in Junos OS Release 9.2.
 exact-instance option introduced in Junos OS Release 11.4.
 output-queue option introduced in Junos OS Release 16.1
 DontGRHelpFateSharingBfdDown is added to the **options** field of the command output in Junos OS Release 18.3R1.

Description Display information about BGP peers.

Options **none**—Display information about all BGP peers.

exact-instance *instance-name*—(Optional) Display information for the specified instance only.

instance *instance-name*—(Optional) Display information about BGP peers for all routing instances whose name begins with this string (for example, **cust1**, **cust11**, and **cust111** are all displayed when you run the **show bgp neighbor instance cust1** command).

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

neighbor-address—(Optional) Display information for only the BGP peer at the specified IP address.

orf (detail | neighbor-address)—(Optional) Display outbound route-filtering information for all BGP peers or only for the BGP peer at the specified IP address. The default is to display brief output. Use the **detail** option to display detailed output.

output-queue—(Optional) Display information regarding the number of routes currently queued in the 17 prioritized BGP output queues.

Additional Information For information about the **local-address**, **nlri**, **hold-time**, and **preference** statements, see the *Junos OS Routing Protocols Library*.

Required Privilege Level

view

Related Documentation

- [clear bgp neighbor on page 1741](#)

List of Sample Output

[show bgp neighbor on page 1768](#)
[show bgp neighbor \(dont-help-shared-fate-bfd-down is configured\) on page 1769](#)
[show bgp neighbor \(CLNS\) on page 1770](#)
[show bgp neighbor \(Layer 2 VPN\) on page 1771](#)
[show bgp neighbor \(Layer 3 VPN\) \(Not supported on the OCX Series.\) on page 1773](#)
[show bgp neighbor neighbor-address on page 1774](#)
[show bgp neighbor neighbor-address on page 1774](#)
[show bgp neighbor neighbor-address \(BGP Graceful Restart Enabled\) on page 1775](#)
[show bgp neighbor neighbor-address \(BGP Long-Lived Graceful Restart\) on page 1776](#)
[show bgp neighbor orf neighbor-address detail on page 1776](#)
[show bgp neighbor logical-system on page 1777](#)
[show bgp neighbor output-queue on page 1777](#)
[show bgp neighbor \(Segment Routing Traffic Engineering\) on page 1778](#)

Output Fields [Table 91 on page 1760](#) describes the output fields for the **show bgp neighbor** command. Output fields are listed in the approximate order in which they appear.

Table 91: show bgp neighbor Output Fields

Field Name	Field Description
Peer	Address of the BGP neighbor. The address is followed by the neighbor port number.
AS	AS number of the peer.
Local	Address of the local routing device. The address is followed by the peer port number.
Type	Type of peer: Internal or External .

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
State	<p>Current state of the BGP session:</p> <ul style="list-style-type: none"> • Active—BGP is initiating a transport protocol connection in an attempt to connect to a peer. If the connection is successful, BGP sends an Open message. • Connect—BGP is waiting for the transport protocol connection to be completed. • Established—The BGP session has been established, and the peers are exchanging update messages. • Idle—This is the first stage of a connection. BGP is waiting for a Start event. • OpenConfirm—BGP has acknowledged receipt of an open message from the peer and is waiting to receive a keepalive or notification message. • OpenSent—BGP has sent an open message and is waiting to receive an open message from the peer. • route reflector client—The BGP session is established with a route reflector client.
Flags	<p>Internal BGP flags:</p> <ul style="list-style-type: none"> • Aggregate Label—BGP has aggregated a set of incoming labels (labels received from the peer) into a single forwarding label. • CleanUp—The peer session is being shut down. • Delete—This peer has been deleted. • Idled—This peer has been permanently idled. • ImportEval—At the last commit operation, this peer was identified as needing to reevaluate all received routes. • Initializing—The peer session is initializing. • SendRtn—Messages are being sent to the peer. • Sync—This peer is synchronized with the rest of the peer group. • RSync—This peer in the backup Routing Engine is synchronized with the BGP peer in the master Routing Engine for nonstop active routing. • TryConnect—Another attempt is being made to connect to the peer. • Unconfigured—This peer is not configured. • WriteFailed—An attempt to write to this peer failed.
Last state	<p>Previous state of the BGP session:</p> <ul style="list-style-type: none"> • Active—BGP is initiating a transport protocol connection in an attempt to connect to a peer. If the connection is successful, BGP sends an Open message. • Connect—BGP is waiting for the transport protocol connection to be completed. • Established—The BGP session has been established, and the peers are exchanging update messages. • Idle—This is the first stage of a connection. BGP is waiting for a Start event. • OpenConfirm—BGP has acknowledged receipt of an open message from the peer and is waiting to receive a keepalive or notification message. • OpenSent—BGP has sent an open message and is waiting to receive an open message from the peer.

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
Last event	<p>Last activity that occurred in the BGP session:</p> <ul style="list-style-type: none"> • Closed—The BGP session closed. • ConnectRetry—The transport protocol connection failed, and BGP is trying again to connect. • HoldTime—The session ended because the hold timer expired. • KeepAlive—The local routing device sent a BGP keepalive message to the peer. • Open—The local routing device sent a BGP open message to the peer. • OpenFail—The local routing device did not receive an acknowledgment of a BGP open message from the peer. • RecvKeepAlive—The local routing device received a BGP keepalive message from the peer. • RecvNotify—The local routing device received a BGP notification message from the peer. • RecvOpen—The local routing device received a BGP open message from the peer. • RecvUpdate—The local routing device received a BGP update message from the peer. • Start—The peering session started. • Stop—The peering session stopped. • TransportError—A TCP error occurred.
Last error	<p>Last error that occurred in the BGP session:</p> <ul style="list-style-type: none"> • Cease—An error occurred, such as a version mismatch, that caused the session to close. • Finite State Machine Error—In setting up the session, BGP received a message that it did not understand. • Hold Time Expired—The session's hold time expired. • Message Header Error—The header of a BGP message was malformed. • Open Message Error—A BGP open message contained an error. • None—No errors occurred in the BGP session. • Update Message Error—A BGP update message contained an error.
Export	Name of the export policy that is configured on the peer.
Import	Name of the import policy that is configured on the peer.

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
Options	<p>Configured BGP options:</p> <ul style="list-style-type: none"> • AddressFamily—Configured address family: inet or inet-vpn. • AdvertiseBGPStatic—Configured BGP static routes are advertised. • AuthKeyChain—Authentication key change is enabled. • BfdEnabled—Status of BFD. • DontGRHelpFateSharingBfdDown—Status of the dont-help-shared-fate-bfd-down option. If this option is configured the device does not go into graceful restart helper mode. • DropPathAttributes—Certain path attributes are configured to be dropped from neighbor updates during inbound processing. • GracefulRestart—Graceful restart is configured. • HoldTime—Hold time configured with the hold-time statement. The hold time is three times the interval at which keepalive messages are sent. • IgnorePathAttributes—Certain path attributes are configured to be ignored in neighbor updates during inbound processing. • Local Address—Address configured with the local-address statement. • LLGR—BGP long-lived graceful restart capability is configured. • LLGRHelperDisabled—BGP long-lived graceful restart is completely disabled for a neighbor. • Multihop—Allow BGP connections to external peers that are not on a directly connected network. • NLRI—Configured MBGP state for the BGP group: multicast, unicast, or both if you have configured nlri any. • Peer AS—Configured peer autonomous system (AS). • Preference—Preference value configured with the preference statement. • Refresh—Configured to refresh automatically when the policy changes. • Rib-group—Configured routing table group. • RFC6514CompliantSafi129—Configured SAFI 129 according to RFC 6514 (BGP VPN multicast used to use SAFI 128).
Path-attributes dropped	Path attribute codes that are dropped from neighbor updates.
Path-attributes ignored	Path attribute codes that are ignored during neighbor updates.
Peer does not support LLGR Restarter or Receiver functionality	BGP neighbor does not support long-lived graceful restart (LLGR) restarter mode completely.
Peer does not support LLGR Restarter functionality	BGP neighbor does not support long-lived graceful restart (LLGR) restarter mode for any family.
Authentication key change	(Appears only if the authentication-keychain statement has been configured) Name of the authentication keychain enabled.
Authentication algorithm	(Appears only if the authentication-algorithm statement has been configured) Type of authentication algorithm enabled: hmac or md5 .

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
Address families configured	Names of configured address families for the VPN.
BGP-Static Advertisement Policy	Name of the BGP static policy that is configured on the peer.
Local Address	Address of the local routing device.
Remove-private options	Options associated with the remove-private statement.
Holdtime	Hold time configured with the hold-time statement. The hold time is three times the interval at which keepalive messages are sent.
Flags for NLRI inet-label-unicast	Flags related to labeled-unicast: <ul style="list-style-type: none"> • TrafficStatistics—Collection of statistics for labeled-unicast traffic is enabled.
Traffic statistics	Information about labeled-unicast traffic statistics: <ul style="list-style-type: none"> • Options—Options configured for collecting statistics about labeled-unicast traffic. • File—Name and location of statistics log files. • size—Size of all the log files, in bytes. • files—Number of log files.
Traffic Statistics Interval	Time between sample periods for labeled-unicast traffic statistics, in seconds.
Preference	Preference value configured with the preference statement.
Outbound Timer	Time for which the route is available in Junos OS routing table before it is exported to BGP. This field is displayed in the output only if the out-delay parameter is configured to a non-zero value.
Number of flaps	Number of times the BGP session has gone down and then come back up.
Peer ID	Router identifier of the peer.
Group index	Index number for the BGP peer group. The index number differentiates between groups when a single BGP group is split because of different configuration options at the group and peer levels.
Peer index	Index that is unique within the BGP group to which the peer belongs.
Local ID	Router identifier of the local routing device.
Local Interface	Name of the interface on the local routing device.
Active holdtime	Hold time that the local routing device negotiated with the peer.
Keepalive Interval	Keepalive interval, in seconds.

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
BFD	Status of BFD failure detection.
Local Address	Name of directly connected interface over which direct EBGP peering is established.
NLRI and times for LLGR configured on peer	<p>Names of address families and stale time for BGP long-lived graceful restart configured on the BGP peer or neighbor.</p> <p>Times are displayed using the routing protocol daemon (rpd) %#OT format:</p> <p><weeks>w<days>d <hours>:<minutes>:<seconds></p> <p>Zero leading elements are omitted, for example, a value less than one week do not include the weeks.</p>
NLRI and times that peer supports LLGR Restarter for	<p>Names of address families and stale time that the BGP peer supports for restarter mode for BGP long-lived graceful restart.</p> <p>Times are displayed using the routing protocol daemon (rpd) %#OT format:</p> <p><weeks>w<days>d <hours>:<minutes>:<seconds></p> <p>Zero leading elements are omitted, for example, a value less than one week do not include the weeks.</p>
NLRI that peer saved LLGR forwarding for	Name of the address family for which the BGP peer saved BGP long-lived graceful restart forwarding.
Graceful Restart Details	Amount of time that is remaining until LLGR expires and the time remaining on the GR stale timer, along with RIB details, are displayed while LLGR receiver mode is active (a peer that negotiated LLGR has disconnected and not yet reconnected).
NLRI we are holding stale routes for	Names of address families (NLRIs) for which that stale routes are held or preserved when BGP graceful restart receiver mode is active for a neighbor.
Time until end-of-rib is assumed for stale routes	<p>Amount of time remaining on the stale timer until which end-of-RIB (EoR) markers are assumed when BGP graceful restart receiver mode is active for a neighbor.</p> <p>Time is displayed in Coordinated Universal Time (UTC) format (YYYY-MM-DD-HH:MM:SS). Note that the stale timer display ('Time until end-of-rib is assumed') is also present when a session is active, but the neighbor as not yet sent all of the end-of-rib indications.</p>
Time until stale routes are deleted or become long-lived stale	Amount of time up to which stale routes are deleted or become long-lived stale routes when BGP graceful restart receiver mode is active for a neighbor.
NLRI for restart configured on peer	Names of address families configured for restart.
NLRI advertised by peer	Address families supported by the peer: unicast or multicast .
NLRI for this session	Address families being used for this session.
Peer supports Refresh capability	Remote peer's ability to send and request full routing table readvertisement (route refresh capability). For more information, see RFC 2918, <i>Route Refresh Capability for BGP-4</i> .

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
Restart time configured on peer	Configured time allowed for restart on the neighbor.
Stale routes from peer are kept for	When graceful restart is negotiated, the maximum time allowed to hold routes from neighbors after the BGP session has gone down.
Peer does not support Restarter functionality	Graceful restart restarter-mode is disabled on the peer.
Peer does not support Receiver functionality	Graceful restart helper-mode is disabled on the peer.
Restart time requested by this peer	Restart time requested by this neighbor during capability negotiation.
Restart flag received from the peer	When this field appears, the BGP speaker has restarted (Restarting), and this peer should not wait for the end-of-rib marker from the speaker before advertising routing information to the speaker.
NLRI that peer supports restart for	Neighbor supports graceful restart for this address family.
NLRI peer can save forwarding state	Neighbor supporting this address family saves all forwarding states.
NLRI that peer saved forwarding for	Neighbor saves all forwarding states for this address family.
NLRI that restart is negotiated for	Router supports graceful restart for this address family.
NLRI of received end-of-rib markers	Address families for which end-of-routing-table markers are received from the neighbor.
NLRI of all end-of-rib markers sent	Address families for which end-of-routing-table markers are sent to the neighbor.
Peer supports 4 byte AS extension (peer-as 1)	Peer understands 4-byte AS numbers in BGP messages. The peer is running Junos OS Release 9.1 or later.
NLRIs for which peer can receive multiple paths	Appears in the command output of the local router if the downstream peer is configured to receive multiple BGP routes to a single destination, instead of only receiving the active route. Possible value is inet-unicast.
NLRIs for which peer can send multiple paths: inet-unicast	Appears in the command output of the local router if the upstream peer is configured to send multiple BGP routes to a single destination, instead of only sending the active route. Possible value is inet-unicast.

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
Table inet.number	<p>Information about the routing table:</p> <ul style="list-style-type: none"> • RIB State—BGP is in the graceful restart process for this routing table: restart is complete or restart in progress. • Bit—Number that represents the entry in the routing table for this peer. • Send state—State of the BGP group: in sync, not in sync, or not advertising. • Active prefixes—Number of prefixes received from the peer that are active in the routing table. • Received prefixes—Total number of prefixes from the peer, both active and inactive, that are in the routing table. • Accepted prefixes—Total number of prefixes from the peer that have been accepted by a routing policy. • Suppressed due to damping—Number of routes currently inactive because of damping or other reasons. These routes do not appear in the forwarding table and are not exported by routing protocols.
Last traffic (seconds)	Last time any traffic was received from the peer or sent to the peer, and the last time the local routing device checked.
Input messages	Messages that BGP has received from the receive socket buffer, showing the total number of messages, number of update messages, number of times a policy is changed and refreshed, and the buffer size in octets. The buffer size is 16 KB.
Output messages	Messages that BGP has written to the transmit socket buffer, showing the total number of messages, number of update messages, number of times a policy is changed and refreshed, and the buffer size in octets. The buffer size is 16 KB.
Input dropped path attributes	<p>Information about dropped path attributes:</p> <ul style="list-style-type: none"> • Code—Path attribute code. • Count—Path attribute count.
Input ignored path attributes	<p>Information about ignored path attributes:</p> <ul style="list-style-type: none"> • Code—Path attribute code. • Count—Path attribute count.
Output queue	<p>Number of BGP packets that are queued to be transmitted to a particular neighbor for a particular routing table. Output queue 0 is for unicast NLRIs, and queue 1 is for multicast NLRIs.</p> <p>It also specifies the routing table name and the NLRI that the table was advertised through, in the format (<i>routing table name, NLRI</i>).</p> <p>NOTE: The output queue of routing tables that are not advertised, will only show up at extensive output level.</p>
Trace options	Configured tracing of BGP protocol packets and operations.
Trace file	Name of the file to receive the output of the tracing operation.

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
Filter Updates rcv	(orf option only) Number of outbound-route filters received for each configured address family. NOTE: The counter is cumulative. For example, the counter is increased after the remote peer either resends or clears the outbound route filtering prefix list.
Immediate	(orf option only) Number of route updates received with the immediate flag set. The immediate flag indicates that the BGP peer should readvertise the updated routes. NOTE: The counter is cumulative. For example, the counter is increased after the remote peer either resends or clears the outbound route filtering prefix list.
Filter	(orf option only) Type of prefix filter received: prefix-based or extended-community .
Received filter entries	(orf option only) List of received filters displayed.
seq	(orf option only) Numerical order assigned to this prefix entry among all the received outbound route filter prefix entries.
prefix	(orf option only) Address for the prefix entry that matches the filter.
minlength	(orf option only) Minimum prefix length, in bits, required to match this prefix.
maxlength	(orf option only) Maximum prefix length, in bits, required to match this prefix.
match	(orf option only) For this prefix match, whether to permit or deny route updates.

Sample Output

show bgp neighbor

```
user@host > show bgp neighbor
```

For M Series, MX Series, and T Series routers running Junos OS Release 16.1 or later, the **show bgp neighbor** output includes the BGP group the peer belongs to, the routing instance (if any) that the peer is configured in, and the routing instance that the peer is using for the forwarding context (if applicable). An example follows.

```
Peer: 10.255.7.250+179 AS 10    Local: 10.255.7.248+63740 AS 10
  Group: toAsbr2                Routing-Instance: master
  Forwarding routing-instance: toAs2
    Type: Internal    State: Established    Flags: <Sync>
  Last State: OpenConfirm    Last Event: RecvKeepAlive
  Last Error: None
  Export: [ redist_static ]
  Options: <Preference LocalAddress PeerAS Refresh>
  Options: <AdvertiseBGPStatic>
  Local Address: 10.255.7.248 Holdtime: 90 Preference: 170 Outbound Timer: 50
  Number of flaps: 0
  Peer ID: 10.255.7.250    Local ID: 10.255.7.248    Active Holdtime: 90
  Keepalive Interval: 30    Group index: 0    Peer index: 0
  BFD: disabled, down
```

```

NLRI for restart configured on peer: inet-unicast
NLRI advertised by peer: inet-unicast
NLRI for this session: inet-unicast
Peer supports Refresh capability (2)
Stale routes from peer are kept for: 300
Peer does not support Restarter functionality
NLRI that restart is negotiated for: inet-unicast
NLRI of received end-of-rib markers: inet-unicast
NLRI of all end-of-rib markers sent: inet-unicast
Peer supports 4 byte AS extension (peer-as 10)
Peer does not support Addpath
NLRI that we support extended nexthop encoding for: inet-unicast
NLRI that peer supports extended nexthop encoding for: inet-unicast

```

```

Table inet.0 Bit: 10000
  RIB State: BGP restart is complete
  Send state: in sync
  Active prefixes:          1
  Received prefixes:        1
  Accepted prefixes:        1
  Suppressed due to damping: 0
  Advertised prefixes:      1
Last traffic (seconds): Received 9   Sent 5   Checked 5
Input messages: Total 36   Updates 2   Refreshes 0   Octets 718
Output messages: Total 37   Updates 1   Refreshes 0   Octets 796
Output Queue[0]: 0 (inet.0, inet-unicast)

```

```

Peer: 10.255.162.214+52193 AS 100 Local: 10.255.167.205+179 AS 100
  Type: Internal   State: Established (route reflector client)Flags: <Sync>
  Last State: OpenConfirm   Last Event: RecvKeepAlive
  Last Error: None
  Options: <Preference LocalAddress Cluster AddressFamily Rib-group Refresh>
  Address families configured: inet-unicast inet-vpn-unicast route-target
  Local Address: 10.255.167.205 Holdtime: 90 Preference: 170
  Number of flaps: 0
  Peer ID: 10.255.162.214   Local ID: 10.255.167.205   Active Holdtime: 90
  Keepalive Interval: 30    Group index: 0    Peer index: 1

```

show bgp neighbor (dont-help-shared-fate-bfd-down is configured)

```
user@host> show bgp neighbor
```

```

Peer: 10.1.1.1 AS 200           Local: unspecified AS 17
  Group: one                     Routing-Instance: master
  Forwarding routing-instance: master
  Type: External   State: Idle   Flags: <PeerInterfaceError>
  Last State: NoState   Last Event: NoEvent
  Last Error: None
  Options: <Preference PeerAS Refresh>
  Options: <BfdEnabled>
  Options: <DontGRHelpFateSharingBfdDown>
  Holdtime: 90 Preference: 170
  Number of flaps: 0
  Trace options: bridge
  Trace file: /var/log/bgp-log size 131072 files 10

Peer: 20.1.1.1 AS 200           Local: unspecified AS 17
  Group: one                     Routing-Instance: master

```

```

Forwarding routing-instance: master
Type: External      State: Idle      Flags: <PeerInterfaceError>
Last State: NoState      Last Event: NoEvent
Last Error: None
Options: <Preference PeerAS Refresh>
Options: <BfdEnabled>
Options: <DontGRHelpFateSharingBfdDown>
Holdtime: 90 Preference: 170
Number of flaps: 0
Trace options: bridge
Trace file: /var/log/bgp-log size 131072 files 10

Peer: 30.1.1.1 AS 200      Local: unspecified AS 17
Group: two      Routing-Instance: master
Forwarding routing-instance: master
Type: External      State: Idle      Flags: <PeerInterfaceError>
Last State: NoState      Last Event: NoEvent
Last Error: None
Options: <Preference PeerAS Refresh>
Options: <BfdEnabled>
Options: <DontGRHelpFateSharingBfdDown>
Holdtime: 90 Preference: 170
Number of flaps: 0
Trace options: bridge
Trace file: /var/log/bgp-log size 131072 files 10

```

show bgp neighbor (CLNS)

```

user@host> show bgp neighbor

Peer: 10.245.245.1+179 AS 200 Local: 10.245.245.3+3770 AS 100
Type: External      State: Established      Flags: <ImportEval Sync>
Last State: OpenConfirm      Last Event: RecvKeepAlive
Last Error: None
Options: <Multihop Preference LocalAddress HoldTime AddressFamily PeerAS
Rib-group Refresh>
Address families configured: iso-vpn-unicast
Local Address: 10.245.245.3 Holdtime: 90 Preference: 170
Number of flaps: 0
Peer ID: 10.245.245.1      Local ID: 10.245.245.3      Active Holdtime: 90
Keepalive Interval: 30      Peer index: 0
NLRI advertised by peer: iso-vpn-unicast
NLRI for this session: iso-vpn-unicast
Peer supports Refresh capability (2)
Table bgp.isovpn.0 Bit: 10000
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: in sync
  Active prefixes:          3
  Received prefixes:        3
  Suppressed due to damping: 0
  Advertised prefixes:      3
Table aaaa.iso.0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: not advertising
  Active prefixes:          3
  Received prefixes:        3
  Suppressed due to damping: 0
Last traffic (seconds): Received 6      Sent 5      Checked 5

```

```

Input messages: Total 1736    Updates 4      Refreshes 0      Octets 33385
Output messages: Total 1738    Updates 3      Refreshes 0      Octets 33305
Output Queue[0]: 0 (bgp.isovpn.0, iso-vpn-unicast)
Output Queue[1]: 0 (aaaa.iso.0, iso-vpn-unicast)

```

show bgp neighbor (Layer 2 VPN)

```
user@host> show bgp neighbor
```

```

Peer: 10.69.103.2      AS 65536 Local: 10.69.103.1      AS 65539
Type: External        State: Active          Flags: <ImportEval>
Last State: Idle      Last Event: Start
Last Error: None
Export: [ BGP-INET-import ]
Options: <Preference LocalAddress HoldTime GracefulRestart AddressFamily PeerAS
Refresh>
Address families configured: inet-unicast
Local Address: 10.69.103.1 Holdtime: 90 Preference: 170
Number of flaps: 0
Peer: 10.69.104.2      AS 65539 Local: 10.69.104.1      AS 65539
Type: External        State: Active          Flags: <ImportEval>
Last State: Idle      Last Event: Start
Last Error: None
Export: [ BGP-L-import ]
Options: <Preference LocalAddress HoldTime GracefulRestart AddressFamily PeerAS
Refresh>
Address families configured: inet-labeled-unicast
Local Address: 10.69.104.1 Holdtime: 90 Preference: 170
Number of flaps: 0
Peer: 10.255.14.182+179 AS 69    Local: 10.255.14.176+2131 AS 69
Type: Internal        State: Established     Flags: <ImportEval>
Last State: OpenConfirm Last Event: RecvKeepAlive
Last Error: None
Options: <Preference LocalAddress HoldTime GracefulRestart AddressFamily
Rib-group Refresh>
Address families configured: inet-vpn-unicast l2vpn
Local Address: 10.255.14.176 Holdtime: 90 Preference: 170
Number of flaps: 0
Peer ID: 10.255.14.182    Local ID: 10.255.14.176    Active Holdtime: 90
Keepalive Interval: 30
NLRI for restart configured on peer: inet-vpn-unicast l2vpn
NLRI advertised by peer: inet-vpn-unicast l2vpn
NLRI for this session: inet-vpn-unicast l2vpn
Peer supports Refresh capability (2)
Restart time configured on the peer: 120
Stale routes from peer are kept for: 300
Restart time requested by this peer: 120
NLRI that peer supports restart for: inet-vpn-unicast l2vpn
NLRI peer can save forwarding state: inet-vpn-unicast l2vpn
NLRI that peer saved forwarding for: inet-vpn-unicast l2vpn
NLRI that restart is negotiated for: inet-vpn-unicast l2vpn
NLRI of received end-of-rib markers: inet-vpn-unicast l2vpn
Table bgp.l3vpn.0 Bit: 10000
  RIB State: BGP restart in progress
  RIB State: VPN restart in progress
  Send state: in sync
  Active prefixes:          10
  Received prefixes:        10
  Suppressed due to damping: 0
Table bgp.l2vpn.0 Bit: 20000

```

```

RIB State: BGP restart in progress
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:          1
Received prefixes:        1
Suppressed due to damping: 0
Table BGP-INET.inet.0 Bit: 30000
RIB State: BGP restart in progress
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:          2
Received prefixes:        2
Suppressed due to damping: 0
Table BGP-L.inet.0 Bit: 40000
RIB State: BGP restart in progress
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:          2
Received prefixes:        2
Suppressed due to damping: 0
Table LDP.inet.0 Bit: 50000
RIB State: BGP restart is complete
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:          1
Received prefixes:        1
Suppressed due to damping: 0
Table OSPF.inet.0 Bit: 60000
RIB State: BGP restart is complete
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:          2
Received prefixes:        2
Suppressed due to damping: 0
Table RIP.inet.0 Bit: 70000
RIB State: BGP restart is complete
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:          2
Received prefixes:        2
Suppressed due to damping: 0
Table STATIC.inet.0 Bit: 80000
RIB State: BGP restart is complete
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:          1
Received prefixes:        1
Suppressed due to damping: 0
Table L2VPN.l2vpn.0 Bit: 90000
RIB State: BGP restart is complete
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:          1
Received prefixes:        1
Suppressed due to damping: 0
Last traffic (seconds): Received 0    Sent 0    Checked 0
Input messages: Total 14    Updates 13    Refreshes 0    Octets 1053
Output messages: Total 3    Updates 0    Refreshes 0    Octets 105
Output Queue[0]: 0 (bgp.l3vpn.0, inet-vpn-unicast)
Output Queue[1]: 0 (bgp.l2vpn.0, inet-vpn-unicast)

```



```

Output Queue[2]: 0 (BGP-INET.inet.0, inet-vpn-unicast)
Output Queue[3]: 0 (BGP-L.inet.0, inet-vpn-unicast)
Output Queue[4]: 0 (LDP.inet.0, inet-vpn-unicast)
Output Queue[5]: 0 (OSPF.inet.0, inet-vpn-unicast)
Output Queue[6]: 0 (RIP.inet.0, inet-vpn-unicast)
Output Queue[7]: 0 (STATIC.inet.0, inet-vpn-unicast)
Output Queue[8]: 0 (L2VPN.l2vpn.0, inet-vpn-unicast)

```

show bgp neighbor (Layer 3 VPN) (Not supported on the OCX Series.)

```

user@host> show bgp neighbor
Peer: 192.0.2.0.179      AS 10045 Local: 192.0.2.1+1214      AS 10045
  Type: Internal      State: Established      Flags: <ImportEval>
  Last State: OpenConfirm      Last Event: RecvKeepAlive
  Last Error: None
  Export: [ match-all ] Import: [ match-all ]
  Options: <Preference LocalAddress HoldTime GracefulRestart AddressFamily
    Rib-group Refresh>
  Address families configured: inet-vpn-unicast
  Local Address: 192.0.2.1 Holdtime: 90 Preference: 170
  Flags for NLRI inet-labeled-unicast: TrafficStatistics
  Traffic Statistics: Options: all File: /var/log/bstat.log
                                size 131072 files 10
  Traffic Statistics Interval: 60
  Number of flaps: 0
  Peer ID: 192.168.1.110      Local ID: 192.168.1.111      Active Holdtime: 90
  Keepalive Interval: 30
  NLRI for restart configured on peer: inet-vpn-unicast
  NLRI advertised by peer: inet-vpn-unicast
  NLRI for this session: inet-vpn-unicast
  Peer supports Refresh capability (2)
  Restart time configured on the peer: 120
  Stale routes from peer are kept for: 300
  Restart time requested by this peer: 120
  NLRI that peer supports restart for: inet-vpn-unicast
  NLRI peer can save forwarding state: inet-vpn-unicast
  NLRI that peer saved forwarding for: inet-vpn-unicast
  NLRI that restart is negotiated for: inet-vpn-unicast
  NLRI of received end-of-rib markers: inet-vpn-unicast
  NLRI of all end-of-rib markers sent: inet-vpn-unicast
  Table bgp.l3vpn.0 Bit: 10000
    RIB State: BGP restart is complete
    RIB State: VPN restart is complete
    Send state: in sync
    Active prefixes:          2
    Received prefixes:        2
    Suppressed due to damping: 0
  Table vpn-green.inet.0 Bit: 20001
    RIB State: BGP restart is complete
    RIB State: VPN restart is complete
    Send state: in sync
    Active prefixes:          2
    Received prefixes:        2
    Suppressed due to damping: 0
  Last traffic (seconds): Received 15      Sent 20      Checked 20
  Input messages: Total 40      Updates 2      Refreshes 0      Octets 856
  Output messages: Total 44      Updates 2      Refreshes 0      Octets 1066
  Output Queue[0]: 0 (bgp.l3vpn.0, inet-vpn-unicast)
  Output Queue[1]: 0 (vpn-green.inet.0, inet-vpn-unicast)

```

```
Trace options: detail packets
Trace file: /var/log/bgpr.log size 131072 files 10
```

show bgp neighbor neighbor-address

```
user@host> show bgp neighbor 192.168.1.111
```

```
Peer: 10.255.245.12+179 AS 35 Local: 10.255.245.13+2884 AS 35
  Type: Internal State: Established (route reflector client)Flags: <Sync>
  Last State: OpenConfirm Last Event: RecvKeepAlive
  Last Error: None
  Options: <Preference LocalAddress HoldTime Cluster AddressFamily Rib-group
  Refresh>
  Options: RFC6514CompliantSafi129
  Address families configured: inet-vpn-unicast inet-labeled-unicast
  Local Address: 10.255.245.13 Holdtime: 90 Preference: 170
  Flags for NLRI inet-vpn-unicast: AggregateLabel
  Flags for NLRI inet-labeled-unicast: AggregateLabel
  Number of flaps: 0
  Peer ID: 10.255.245.12 Local ID: 10.255.245.13 Active Holdtime: 90
  Keepalive Interval: 30
  BFD: disabled
  NLRI advertised by peer: inet-vpn-unicast inet-labeled-unicast
  NLRI for this session: inet-vpn-unicast inet-labeled-unicast
  Peer supports Refresh capability (2)
  Restart time configured on the peer: 300
  Stale routes from peer are kept for: 60
  Restart time requested by this peer: 300
  NLRI that peer supports restart for: inet-unicast inet6-unicast
  NLRI that restart is negotiated for: inet-unicast inet6-unicast
  NLRI of received end-of-rib markers: inet-unicast inet6-unicast
  NLRI of all end-of-rib markers sent: inet-unicast inet6-unicast
  Table inet.0 Bit: 10000
    RIB State: restart is complete
    Send state: in sync
    Active prefixes: 4
    Received prefixes: 6
    Suppressed due to damping: 0
  Table inet6.0 Bit: 20000
    RIB State: restart is complete
    Send state: in sync
    Active prefixes: 0
    Received prefixes: 2
    Suppressed due to damping: 0
  Last traffic (seconds): Received 3 Sent 3 Checked 3
  Input messages: Total 9 Updates 6 Refreshes 0 Octets 403
  Output messages: Total 7 Updates 3 Refreshes 0 Octets 365
  Output Queue[0]: 0 (inet.0, inet-unicast)
  Output Queue[1]: 0 (inet6.0, inet6-unicast)
  Trace options: detail packets
  Trace file: /var/log/bgpr size 131072 files 10
```

show bgp neighbor neighbor-address

```
user@host> show bgp neighbor 192.168.4.222
```

```
Peer: 192.168.4.222+4902 AS 65501 Local: 192.168.4.221+179 AS 65500
  Type: External State: Established Flags: <Sync>
  Last State: OpenConfirm Last Event: RecvKeepAlive
```

```

Last Error: Cease
Export: [ export-policy ] Import: [ import-policy ]
Options: <Preference HoldTime AddressFamily PeerAS PrefixLimit Refresh>
Address families configured: inet-unicast inet-multicast
Holdtime: 60000 Preference: 170
Number of flaps: 4
Last flap event: RecvUpdate
Error: 'Cease' Sent: 5 Recv: 0
Peer ID: 10.255.245.6      Local ID: 10.255.245.5      Active Holdtime: 60000
Keepalive Interval: 20000      Peer index: 0
BFD: disabled, down
Local Interface: fxp0.0
NLRI advertised by peer: inet-unicast inet-multicast
NLRI for this session: inet-unicast inet-multicast
Peer supports Refresh capability (2)
Table inet.0 Bit: 10000
  RIB State: BGP restart is complete
  Send state: in sync
  Active prefixes:          8
  Received prefixes:        10
  Accepted prefixes:        10
  Suppressed due to damping: 0
  Advertised prefixes:      3
Table inet.2 Bit: 20000
  RIB State: BGP restart is complete
  Send state: in sync
  Active prefixes:          0
  Received prefixes:        0
  Accepted prefixes:        0
  Suppressed due to damping: 0
  Advertised prefixes:      0
Last traffic (seconds): Received 357 Sent 357 Checked 357
Input messages: Total 4 Updates 2 Refreshes 0 Octets 211
Output messages: Total 4 Updates 1 Refreshes 0 Octets 147
Output Queue[0]: 0 (inet.0, inet-unicast)
Output Queue[1]: 0 (inet.2, inet-multicast)
Trace options: all
Trace file: /var/log/bgp size 10485760 files 10

```

show bgp neighbor neighbor-address (BGP Graceful Restart Enabled)

```
user@router> show bgp neighbor 10.255.255.16
```

```

Peer: 10.255.255.16 AS 100      Local: 10.255.255.12 AS 100
Type: Internal      State: Active      Flags: <>
Last State: Idle      Last Event: Start
Last Error: None
Options: <Preference LocalAddress AddressFamily Rib-group Refresh>
Options: <LLGR>
Address families configured: 12vpn
Local Address: 10.255.255.12 Holdtime: 90 Preference: 170
NLRI 12vpn:
Number of flaps: 6
Last flap event: Restart
NLRI we are holding stale routes for: inet-vpn-unicast
Time until stale routes are deleted or become long-lived stale: 00:01:57
Time until end-of-rib is assumed for stale routes: 00:04:43
Table bgp.13vpn.0
  RIB State: BGP restart is complete

```

```

RIB State: VPN restart is complete
Send state: not advertising
Active prefixes:          0
Received prefixes:       7
Accepted prefixes:       7
Suppressed due to damping: 0
Table foo.inet.0 Bit: 30000
RIB State: BGP restart is complete
RIB State: VPN restart is complete
Send state: not in sync
Active prefixes:          0
Received prefixes:       7
Accepted prefixes:       7
Suppressed due to damping: 0

```

show bgp neighbor neighbor-address (BGP Long-Lived Graceful Restart)

```
user@router> show bgp neighbor 10.4.12.11
```

```

Peer: 10.4.12.11 AS 100      Local: 10.6.128.225 AS 100
Type: Internal      State: Active      Flags: <>
Last State: Idle      Last Event: Start
Last Error: None
Export: [ foo ]
Options: <Preference LocalAddress Refresh GracefulRestart>
Options: <LLGR>
Local Address: 10.6.128.225 Holdtime: 90 Preference: 170
Number of flaps: 3
Last flap event: Restart
Error: 'Cease' Sent: 0 Recv: 1
Time until long-lived stale routes deleted: inet-vpn-unicast 10:00:22
route-target 10:00:22
Table bgp.l3vpn.0
RIB State: BGP restart is complete
RIB State: VPN restart is complete
Send state: not advertising
Active prefixes:          0
Received prefixes:       7
Accepted prefixes:       7
Suppressed due to damping: 0
Table foo.inet.0 Bit: 30000
RIB State: BGP restart is complete
RIB State: VPN restart is complete
Send state: not in sync
Active prefixes:          0
Received prefixes:       7
Accepted prefixes:       7
Suppressed due to damping: 0

```

show bgp neighbor orf neighbor-address detail

```
user@host > show bgp neighbor orf 192.168.165.56 detail
```

```

Peer: 192.168.165.56+179 Type: External
Group: ext1

inet-unicast
Filter updates rcv:          1 Immediate:          1

```

```

Filter: prefix-based receive
Received filter entries:
  seq 1: prefix 2.2.2.2/32: minlen 32: maxlen 32: match deny:

inet6-unicast
Filter updates rcv:          0 Immediate:          1
Filter: prefix-based receive
Received filter entries:
  *.*

```

show bgp neighbor logical-system

```

user@host > show bgp neighbor logical-system ITR1
Peer: 10.79.8.2+179 AS 65536 Local: 10.79.8.1+50891 AS 65500
Description: MX1
Type: External State: Established Flags: <ImportEval Sync>
Last State: OpenConfirm Last Event: RecvKeepAlive
Last Error: None
...
Table inet.0 Bit: 10000
RIB State: BGP restart is complete
Send state: in sync
Active prefixes:          1
Received prefixes:        1
Accepted prefixes:        1
Suppressed due to damping: 0
Advertised prefixes:      10
Stale prefixes:           4: <=new, line only appears if count is non-0
It is the Number of prefixes marked as stale;
LLGR-stale prefixes:      5: <=new, line only appears if count is non-0
It is the Number of prefixes marked as LLGR-stale

```

show bgp neighbor output-queue

```

user@host > show bgp neighbor output-queue
Peer: 192.0.2.2+179 AS 103 Local: 192.0.2.1+50799 AS 102
Output Queue[0]: 0 (inet.0, inet-unicast)
Priority 1 : 0
Priority 2 : 0
Priority 3 : 0
Priority 4 : 0
Priority 5 : 0
Priority 6 : 0
Priority 7 : 0
Priority 8 : 0
Priority 9 : 0
Priority 10: 0
Priority 11: 0
Priority 12: 0
Priority 13: 0
Priority 14: 0
Priority 15: 0
Priority 16: 0
Expedited : 0



```

show bgp neighbor (Segment Routing Traffic Engineering)

```
user@host > show bgp neighbor
```

```
run show bgp neighbor 1.1.1.254
  Peer: 1.1.1.254+60180 AS 100    Local: 1.1.1.1+179 AS 100
  Group: toB                      Routing-Instance: master
  Forwarding routing-instance: master
  Type: Internal    State: Established    Flags: <Sync>
  Last State: OpenConfirm    Last Event: RecvKeepAlive
  Last Error: None
  Options: <Preference LocalAddress>
  Address families configured: inet-segment-routing-te
  Local Address: 1.1.1.1 Holdtime: 90 Preference: 170 Local AS: 100 Local System
AS: 0
  Number of flaps: 0
  Peer ID: 128.9.150.15    Local ID: 128.9.150.110    Active Holdtime: 90
  Keepalive Interval: 30    Group index: 0    Peer index: 0
  I/O Session Thread: bgpio-0 State: Enabled
  BFD: disabled, down
  NLRI for restart configured on peer: inet-segment-routing-te
  NLRI advertised by peer: inet-segment-routing-te
  NLRI for this session: inet-segment-routing-te
  Peer supports Refresh capability (2)
  Stale routes from peer are kept for: 300
  Peer does not support Restarter functionality
  Restart flag received from the peer: Notification
  NLRI that restart is negotiated for: inet-segment-routing-te
  Peer does not support LLGR Restarter functionality
  Peer supports 4 byte AS extension (peer-as 100)
  Peer does not support Addpath
  Last traffic (seconds): Received 17628 Sent 25    Checked 17628
  Input messages:    Total 2    Updates 0    Refreshes 0    Octets 82
  Output messages:  Total 1    Updates 0    Refreshes 0    Octets 19
  Trace options:    all
  Trace file: /var/log/bgp.log size 10485760 files 10
```

show bgp replication

Syntax	<code>show bgp replication</code>
Release Information	<p>Command introduced in Junos OS Release 8.5.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 17.4R2 for SRX5400, SRX5600, and SRX5800 devices.</p> <p>Support for logical-system option introduced in Junos OS Release 13.3.</p>
Description	<p>Displays the status of BGP state replication between the master and backup Routing Engines on devices that have nonstop active routing configured on them.</p>
	<div>  <p>CAUTION: Before attempting nonstop active routing switchover, check the output of <code>show bgp replication</code> to confirm that BGP routing table synchronization has completed on the backup Routing Engine. The complete status in the output of <code>show task replication</code> only indicates that the socket replication has completed and the BGP synchronization is in progress.</p> <p>To determine whether BGP synchronization is complete, you must check the Protocol state and Synchronization state fields in the output of <code>show bgp replication</code> on the master Routing Engine. The Protocol state must be idle and the Synchronization state must be complete. If you perform NSR switchover before the BGP synchronization has completed, the BGP session might flap.</p> </div>
	<div>  <p>NOTE: The <code>commit synchronize</code> statement at the <code>[edit system]</code> hierarchy level is not supported on SRX Series devices. Hence, the status of nonstop active routing synchronization is not displayed on the master Routing Engine when you issue the command <code>show bgp replication</code>.</p> </div>
Options	This command has no options.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> show bgp replication logical-system
List of Sample Output	<p>show bgp replication (for Master) on page 1781</p> <p>show bgp replication (for Backup) on page 1781</p>

Output Fields Table 92 on page 1780 lists the output fields for the **show bgp replication** command. Output fields are listed in the approximate order in which they appear.

Table 92: show bgp replication Output Fields

Field Name	Field Description
Precision timer registration	<p>State of BGP precision timer feature in the kernel.</p> <ul style="list-style-type: none"> • Registered—BGP registers with the precision-timer feature in the kernel for auto keepalive generation after switchover. • NotRegistered—Keepalive format of BGP is not registered.
session state	State of the current internal BGP state replication session, Up or Down, and the duration for which the session has been in the indicated state.
flaps	Total number of flaps that occurred.
protocol state	Current state of the protocol operation, Active, Connect, Idle, and the duration for which the protocol has been in the indicated state.
synchronization state	<p>Synchronization state at the time of executing the command. The states can be:</p> <ul style="list-style-type: none"> • Idle • Neighbor—Indicates that the neighbor state synchronization is in progress. • AckWait—Indicates that the request processing is over. • ORF—Indicates that the outbound routing filter synchronization is in progress. • RIB—Indicates that the routing table synchronization is in progress. • Complete
number of peers waiting	<p>Total number of peers waiting for various messages:</p> <ul style="list-style-type: none"> • AckWait—Number of peers waiting for a connection establishment or completed acknowledgment messages. • SoWait—Number of peers waiting for TCP socket-related operations. • Scheduled—Number of peers being synchronized.
messages sent	<p>Number of various types of messages that have been sent since internal replication session became active:</p> <ul style="list-style-type: none"> • Open—Number of Open messages sent. • Establish—Number of connection establishment acknowledgment messages sent. • Update—Number of update messages sent. • Error—Number of error messages sent. • Complete—Number of connection complete acknowledgment messages sent.

Table 92: show bgp replication Output Fields (continued)

Field Name	Field Description
messages received	<p>Total number of messages received:</p> <ul style="list-style-type: none"> • Open—Number of Open messages received. • Request—Number of request messages received: <ul style="list-style-type: none"> • Wildcard—Number of requests received that used wildcards in the target address. • Targeted—Number of requests received that used a specific address. • EstablishAck—Number of connection establishment acknowledgement messages received. • CompleteAck—Number of connection completed acknowledgement messages received.

Sample Output

show bgp replication (for Master)

```

user@host> show bgp replication

Synchronization master:
  Precision timer registration: Registered
  Session state: Up, Since: 10:14
  Flaps: 1, Last flap reason: Backup closed connection
  Protocol state: Idle, Since: 10:14
  Synchronization state: Complete
  Number of peers waiting: AckWait: 0, SoWait: 0, Scheduled: 0
  Messages sent: Open 1, Establish 11, GrHelper 0, Update 0, GrStaleLabel 0 Error
  0, Complete 1
  Messages received: Open 1, Request 1 wildcard 0 targeted, EstablishAck 11,
  GrHelperAck 0, CompleteAck 1

```

show bgp replication (for Backup)

```

user@host> show bgp replication

Synchronization backup:
  State: Established 13 ago
  , Unsync timer: 2

  Unsync entry queue:
    Instance: 0 Neighbor: 30.30.30.1 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.3 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.4 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.5 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.6 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.1 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.2 elapsed: 7

```

show bgp summary

List of Syntax	Syntax on page 1782 Syntax (EX Series Switch and QFX Series) on page 1782
Syntax	<pre>show bgp summary <exact-instance <i>instance-name</i>> <group <i>group-name</i>> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and QFX Series)	<pre>show bgp summary <exact-instance <i>instance-name</i>> <instance <i>instance-name</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>exact-instance option introduced in Junos OS Release 11.4.</p> <p>group option introduced in Junos OS Release 13.3.</p>
Description	Display BGP summary information.
Options	<p>none—Display BGP summary information for all routing instances.</p> <p>exact-instance <i>instance-name</i>—(Optional) Display information for the specified instance only.</p> <p>group—Display overview of bgp information for a particular group</p> <p>instance <i>instance-name</i>—(Optional) Display information for all routing instances whose name begins with this string (for example, cust1, cust11, and cust111 are all displayed when you run the show bgp summary instance cust1 command). The instance name can be master for the main instance, or any valid configured instance name or its prefix.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show bgp summary (When a Peer Is Not Established) on page 1785 show bgp summary (When a Peer Is Established) on page 1785 show bgp summary (CLNS) on page 1785 show bgp summary (Layer 2 VPN) on page 1786

[show bgp summary \(Layer 3 VPN\) on page 1786](#)

[show bgp summary group on page 1786](#)

[show bgp summary \(BGP Graceful Restart or Long-Lived Graceful Restart\) on page 1787](#)

Output Fields Table 93 on page 1783 describes the output fields for the **show bgp summary** command. Output fields are listed in the approximate order in which they appear.

Table 93: show bgp summary Output Fields

Field Name	Field Description
Groups	Number of BGP groups.
Peers	Number of BGP peers.
Down peers	Number of down BGP peers.
Table	Name of routing table.
Tot Paths	Total number of paths.
Act Paths	Number of active routes.
Suppressed	Number of routes currently inactive because of damping or other reasons. These routes do not appear in the forwarding table and are not exported by routing protocols.
History	Number of withdrawn routes stored locally to keep track of damping history.
Damp State	Number of routes with a figure of merit greater than zero, but still active because the value has not reached the threshold at which suppression occurs.
Pending	Routes in process by BGP import policy.
Peer	Address of each BGP peer. Each peer has one line of output.
AS	Peer's AS number.
InPkt	Number of packets received from the peer.
OutPkt	Number of packets sent to the peer.
OutQ	Number of BGP packets that are queued to be transmitted to a particular neighbor. It normally is 0 because the queue usually is emptied quickly.
Flaps	Number of times the BGP session has gone down and then come back up.
Last Up/Down	Last time since the neighbor transitioned to or from the established state.

Table 93: show bgp summary Output Fields (continued)

Field Name	Field Description
State #Active /Received/Accepted /Damped	<p>Multipurpose field that displays information about BGP peer sessions. The field's contents depend upon whether a session is established and whether it was established on the main routing device or in a routing instance.</p> <ul style="list-style-type: none"> If a peer is not established, the field shows the state of the peer session: Active, Connect, or Idle. In general, the Idle state is the first stage of a connection. BGP is waiting for a Start event. A session can be idle for other reasons as well. The reason that a session is idle is sometimes displayed. For example: Idle (Removal in progress) or Idle (LicenseFailure). If a BGP session is established on the main routing device, the field shows the number of active, received, accepted, and damped routes that are received from a neighbor and appear in the inet.0 (main) and inet.2 (multicast) routing tables. For example, 8/10/10/2 and 2/4/4/0 indicate the following: <ul style="list-style-type: none"> 8 active routes, 10 received routes, 10 accepted routes, and 2 damped routes from a BGP peer appear in the inet.0 routing table. 2 active routes, 4 received routes, 4 accepted routes, and no damped routes from a BGP peer appear in the inet.2 routing table. If a BGP session is established in a routing instance, the field indicates the established (Establ) state, identifies the specific routing table that receives BGP updates, and shows the number of active, received, and damped routes that are received from a neighbor. For example, Establ VPN-AB.inet.0: 2/4/0 indicates the following: <ul style="list-style-type: none"> The BGP session is established. Routes are received in the VPN-AB.inet.0 routing table. The local routing device has two active routes, four received routes, and no damped routes from a BGP peer. <p>When a BGP session is established, the peers are exchanging update messages.</p> <p>NOTE: When graceful restart or LLGR helper mode is active, the RIB information is now displayed by the show bgp summary command. If a BGP session is established on the main routing device, the field shows the number of active, received, accepted, and damped routes that are received from a neighbor and appear in the inet.0 (main) and inet.2 (multicast) routing tables. For example, 8/10/10/2 and 2/4/4/0 indicate the following:</p> <ul style="list-style-type: none"> 8 active routes, 10 received routes, 10 accepted routes, and 2 damped routes from a BGP peer appear in the inet.0 routing table. 2 active routes, 4 received routes, 4 accepted routes, and no damped routes from a BGP peer appear in the inet.2 routing table.

Sample Output

show bgp summary (When a Peer Is Not Established)

```
user@host> show bgp summary

Groups: 2 Peers: 4 Down peers: 1
Table      Tot Paths  Act Paths Suppressed  History  Damp State   Pending
inet.0          6      4      0          0      0      0      0
Peer          AS      InPkt   OutPkt   OutQ   Flaps  Last Up/Dwn
State|#Active/Received/Damped...
10.0.0.3      65002      86      90      0      2      42:54 0/0/0
0/0/0
10.0.0.4      65002      90      91      0      1      42:54 0/2/0
0/0/0
10.0.0.6      65002      87      90      0      3      3 Active
10.1.12.1     65001      89      89      0      1      42:54 4/4/0
0/0/0
```

show bgp summary (When a Peer Is Established)

```
user@host> show bgp summary

Groups: 1 Peers: 3 Down peers: 0
Table      Tot Paths  Act Paths Suppressed  History  Damp State   Pending
inet.0          6      4      0          0      0      0      0
Peer          AS      InPkt   OutPkt   OutQ   Flaps  Last Up/Dwn
State|#Active/Received/Damped...
10.0.0.2      65002     88675     88652      0      2      42:38 2/4/0
0/0/0
10.0.0.3      65002     54528     54532      0      1      2w4d22h 0/0/0
0/0/0
10.0.0.4      65002     51597     51584      0      0      2w3d22h 2/2/0
0/0/0
```

```
user@host> show bgp summary logical-system R3

Groups: 2 Peers: 2 Down peers: 0
Table      Tot Paths  Act Paths Suppressed  History  Damp State   Pending
bgp.l3vpn.0          2      2      0          0      0      0      0
Peer          AS      InPkt   OutPkt   OutQ   Flaps  Last Up/Dwn
State|#Active/Received/Accepted/Damped...
1.1.1.2          2      204     206      0      0      1:30:59
Establ
  bgp.l3vpn.0: 2/2/2/0
  red.inet.0: 2/2/2/0
10.1.1.10        3      206     207      0      0      1:31:36
Establ
  red.inet.0: 2/2/2/0
```

show bgp summary (CLNS)

```
user@host> show bgp summary
```

```

Groups: 1 Peers: 1 Down peers: 0
Peer          AS      InPkt    OutPkt    OutQ    Flaps  Last Up/Dwn
State|#Active/Received/Damped...
10.245.245.1   200    1735     1737      0       0    14:26:12 Establ
  bgp.isovpn.0: 3/3/0
  aaaa.iso.0: 3/3/0

```

show bgp summary (Layer 2 VPN)

```
user@host> show bgp summary
```

```

Groups: 1 Peers: 5 Down peers: 0
Table      Tot Paths  Act Paths Suppressed  History  Damp State  Pending
bgp.l2vpn.0      1        1         0         0        0        0        0
inet.0           0        0         0         0        0        0        0
Peer          AS      InPkt    OutPkt    OutQ    Flaps  Last
Up/Dwn State|#Active/Received/Damped...
10.255.245.35  65299      72       74        0        1    19:00 Establ
  bgp.l2vpn.0: 1/1/0
  frame-vpn.l2vpn.0: 1/1/0
10.255.245.36  65299    2164    2423        0        4    19:50 Establ
  bgp.l2vpn.0: 0/0/0
  frame-vpn.l2vpn.0: 0/0/0
10.255.245.37  65299      36       37        0        4    17:07 Establ
  inet.0: 0/0/0
10.255.245.39  65299     138     168        0        6    53:48 Establ
  bgp.l2vpn.0: 0/0/0
  frame-vpn.l2vpn.0: 0/0/0
10.255.245.69  65299     134     140        0        6    53:42 Establ
  inet.0: 0/0/0

```

show bgp summary (Layer 3 VPN)

```
user@host> show bgp summary
```

```

Groups: 2 Peers: 2 Down peers: 0
Table      Tot Paths  Act Paths Suppressed  History  Damp State  Pending
bgp.l3vpn.0      2        2         0         0        0        0        0
Peer          AS      InPkt    OutPkt    OutQ    Flaps  Last Up/Dwn
State|#Active/Received/Damped...
10.39.1.5       2        21       22        0        0    6:26 Establ
  VPN-AB.inet.0: 1/1/0
10.255.71.15    1        19       21        0        0    6:17 Establ
  bgp.l3vpn.0: 2/2/0
  VPN-A.inet.0: 1/1/0
  VPN-AB.inet.0: 2/2/0
  VPN-B.inet.0: 1/1/0

```

show bgp summary group

```
user@host> show bgp summary group Group2
```

```

Groups: 3 Peers: 3 Down peers: 3
Table      Tot Paths  Act Paths Suppressed  History  Damp State  Pending
inet.0           0        0         0         0        0        0        0
Peer          AS      InPkt    OutPkt    OutQ    Flaps  Last Up/Dwn
State|#Active/Received/Accepted/Damped...

```

```

10.0.0.1          56          0          0          0          0          51
Idle

user@host> show bgp summary logical-system R3 group toR4

Groups: 2 Peers: 2 Down peers: 0
Table          Tot Paths  Act Paths Suppressed    History  Damp State    Pending
bgp.13vpn.0
                2          2          0          0          0          0
Peer          AS      InPkt    OutPkt    OutQ    Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
10.1.1.10      3        207      207        0        0      1:31:40
Establ
  red.inet.0: 2/2/2/0

```

show bgp summary (BGP Graceful Restart or Long-Lived Graceful Restart)

```

user@router> show route receive-protocol bgp 10.4.12.11 detail

Groups: 2 Peers: 9 Down peers: 1
...
Peer          AS      InPkt    OutPkt    OutQ    Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
10.255.255.16 100        7        6        0        4
Idle
  bgp.13vpn.0: 0/7/7/0
  foo.inet.0: 0/7/7/0

```

show policy damping

List of Syntax	Syntax on page 1788 Syntax (EX Series Switch and QFX Series) on page 1788
Syntax	<pre>show policy damping <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and QFX Series)	<pre>show policy damping</pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about BGP route flap damping parameters.
Options	none —Display information about BGP route flap damping parameters. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Additional Information	In the output from this command, figure-of-merit values correlate with the probability of future instability of a routing device. Routes with higher figure-of-merit values are suppressed for longer periods of time. The figure-of-merit value decays exponentially over time. A figure-of-merit value of zero is assigned to each new route. The value is increased each time the route is withdrawn or readvertised, or when one of its path attributes changes.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• “Configuring BGP Flap Damping Parameters” in the <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide</i>• clear bgp damping on page 1740• show route damping on page 2305
List of Sample Output	show policy damping on page 1789
Output Fields	Table 94 on page 1789 describes the output fields for the show policy damping command. Output fields are listed in the approximate order in which they appear.

Table 94: show policy damping Output Fields

Field Name	Field Description
Halflife	Decay half-life, in minutes. The value represents the period during which the accumulated figure-of-merit value is reduced by half if the route remains stable. If a route has flapped, but then becomes stable, the figure-of-merit value for the route decays exponentially. For example, for a route with a figure-of-merit value of 1500, if no incidents occur, its figure-of-merit value is reduced to 750 after 15 minutes and to 375 after another 15 minutes.
Reuse merit	Figure-of-merit value below which a suppressed route can be used again. A suppressed route becomes reusable when its figure-of-merit value decays to a value below a reuse threshold, and the route once again is considered usable and can be installed in the forwarding table and exported from the routing table.
Suppress/cutoff merit	Figure-of-merit value above which a route is suppressed for use or inclusion in advertisements. When a route's figure-of-merit value reaches a particular level, called the cutoff or suppression threshold, the route is suppressed. When a route is suppressed, the routing table no longer installs the route into the forwarding table and no longer exports this route to any of the routing protocols.
Maximum suppress time	Maximum hold-down time, in minutes. The value represents the maximum time that a route can be suppressed no matter how unstable it has been before this period of stability.
Computed values	<ul style="list-style-type: none"> • Merit ceiling—Maximum merit that a flapping route can collect. • Maximum decay—Maximum decay half-life, in minutes.

Sample Output

show policy damping

```

user@host> show policy damping

Default damping information:
  Halflife: 15 minutes
  Reuse merit: 750 Suppress/cutoff merit: 3000
  Maximum suppress time: 60 minutes
  Computed values:
    Merit ceiling: 12110
    Maximum decay: 6193
Damping information for "standard-damping":
  Halflife: 10 minutes
  Reuse merit: 4000 Suppress/cutoff merit: 8000
  Maximum suppress time: 30 minutes
  Computed values:
    Merit ceiling: 32120
    Maximum decay: 12453

```


CHAPTER 18

ES-IS Operational Commands

- `clear esis adjacency`
- `clear esis statistics`
- `show esis adjacency`
- `show esis interface`
- `show esis statistics`

clear esis adjacency

Syntax `clear esis adjacency`
 `<instance instance-name>`
 `<interface interface-name>`
 `<neighbor>`

Release Information Command introduced before Junos OS Release 7.4.

Description Clear End System-to-Intermediate System (ES-IS) adjacencies.

Options **none**—Clear all ES-IS adjacencies.

instance *instance-name*—(Optional) Clear adjacencies for the specified routing instance only.

interface *interface-name*—(Optional) Clear adjacencies for the specified interface only.

neighbor—(Optional) Clear adjacencies for the specified neighbor only.

Required Privilege Level clear

Related Documentation

- [show esis adjacency on page 1794](#)

List of Sample Output [clear esis adjacency on page 1792](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

`clear esis adjacency`

```
user@host> clear esis adjacency
```

clear esis statistics

Syntax	<code>clear esis statistics</code> <code><instance <i>instance-name</i>></code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Clear End System-to-Intermediate System (ES-IS) packet statistics.
Options	none —Clear ES-IS packet statistics for all routing instances. instance <i>instance-name</i> —(Optional) Clear ES-IS packet statistics for the specified routing instance only.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show esis statistics on page 1799
List of Sample Output	clear esis statistics on page 1793
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear esis statistics

```
user@host> clear esis statistics
```

show esis adjacency

Syntax `show esis adjacency`
`<brief | detail | extensive>`
`<esis-neighbor-id>`
`<instance instance-name>`
`<interface interface-name>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display End System-to-Intermediate System (ES-IS) adjacencies.

Options **none**—(Same as **brief**) Display all ES-IS adjacencies.

brief | detail | extensive—(Optional) Display the specified level of output.

esis-neighbor-id—(Optional) Display adjacencies for the specified neighbor's network service access point (NSAP) only.

instance instance-name—(Optional) Display adjacencies for the specified routing instance only.

interface interface-name—(Optional) Display adjacencies for the specified interface only.

Required Privilege Level view

Related Documentation

- [clear esis adjacency on page 1792](#)

List of Sample Output

- [show esis adjacency on page 1795](#)
- [show esis adjacency brief on page 1795](#)
- [show esis adjacency detail on page 1795](#)
- [show esis adjacency extensive on page 1795](#)

Output Fields [Table 95 on page 1794](#) describes the output fields for the **show esis adjacency** command. Output fields are listed in the approximate order in which they appear.

Table 95: show esis adjacency Output Fields

Field Name	Field Description	Level of Output
Nbr Type	Type of network service access point (NSAP) of this neighbor.	brief none
NSAP/NET	NSAP of this neighbor.	All levels
Type	Type of NSAP of this neighbor.	detail extensive

Table 95: show esis adjacency Output Fields (continued)

Field Name	Field Description	Level of Output
Hold (secs)	Holdtime interval advertised by this neighbor.	brief none
Interface	Interface through which the neighbor is reachable.	All levels
Advertised holdtime	Holdtime interval advertised by this neighbor.	detail extensive
Expires in	How long until the adjacency expires, in seconds.	detail extensive
SNPA	Subnetwork point of attachment (MAC address of the neighbor).	detail extensive
Transition log	List of recent transitions. <ul style="list-style-type: none"> • When—Time of advertisement from this neighbor. • State—State of the adjacency: Up, Down, New, One-way, Initializing, or Rejected. • Event—Event causing the state. • Down reason—Reason the adjacency is down. 	extensive

Sample Output

show esis adjacency

```
user@host> show esis adjacency
```

```
Nbr   NSAP/NET                               Hold Interface
Type                                     (secs)
IS    47.0005.80ff.f800.0000.0108.0001.0102.5501.6008    135 fe-0/0/0.0
```

show esis adjacency brief

The output for the **show esis adjacency brief** command is identical to that for the **show esis adjacency** command. For sample output, see [show esis adjacency on page 1795](#).

show esis adjacency detail

```
user@host> show esis adjacency detail
```

```
NSAP/NET: 47.0005.80ff.f800.0000.0108.0001.0102.5501.6008, Type: IS
Interface: fe-0/0/0.0, Advertised hold time: 180 secs, Expires in: 173 secs
SNPA: 0:5:85:c1:73:71
```

show esis adjacency extensive

```
user@host> show esis adjacency extensive
```

```
NSAP/NET: 47.0005.80ff.f800.0000.0108.0001.0102.5501.6008, Type: IS
Interface: fe-0/0/0.0, Advertised hold time: 180 secs, Expires in: 167 secs
SNPA: 0:5:85:c1:73:71
Transition log:
```

When	State	Event	Down reason
Sun Nov 26 22:07:35	Up	Received ISH	

show esis interface

Syntax `show esis interface`
`<brief | detail | extensive>`
`<instance instance-name>`
`<interface interface-name>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display End System-to-Intermediate System (ES-IS) interface information.

Options **none**—(Same as **brief**) Display information for all configured ES-IS interfaces.

brief | detail | extensive—(Optional) Display the specified level of output.

instance *instance-name*—(Optional) Display configured interfaces for the specified routing instance only.

interface *interface-name*—(Optional) Display information about the specified interface only.

Required Privilege Level view

List of Sample Output [show esis interface on page 1798](#)
[show esis interface brief on page 1798](#)
[show esis interface detail on page 1798](#)
[show esis interface extensive on page 1798](#)

Output Fields [Table 96 on page 1797](#) describes the output fields for the **show esis interface** command. Output fields are listed in the approximate order in which they appear.

Table 96: show esis interface Output Fields

Field Name	Field Description	Level of Output
Interface	Interface through which the adjacency is made.	All levels
Receives	Types of hello messages that are received.	All levels
Sends	Types of hello messages that are sent.	All levels
Hello interval	Interface's hello interval, in seconds.	All levels
Adjacencies or Num Adj	Number of adjacencies established on this interface.	All levels
Holdtime	Interface's hold time, in seconds.	detail extensive

Table 96: show esis interface Output Fields (continued)

Field Name	Field Description	Level of Output
State	Internal implementation information.	detail extensive
End system configuration timer	Time, in seconds, for the end system to configure itself for ES-IS.	detail extensive
Interface index	Index value.	detail extensive
NET used in hello	Network entity title used in hello messages.	detail extensive

Sample Output

show esis interface

```
user@host> show esis interface
```

Interface	Receives	Sends	Hello Interval	Num Adj
fe-0/0/0.0	ISH	ISH	60.00	1
lo0.0	ISH	-	60.00	0

show esis interface brief

The output for the **show esis interface brief** command is identical to that for the **show esis interface** command. For sample output, see [show esis interface on page 1798](#).

show esis interface detail

```
user@host> show esis interface detail
```

```
Interface: fe-0/0/0.0
  Receives: ISH, Sends: ISH, Hello interval: 60.00
  Adjacencies: 1, Holdtime: 180, End system configuration timer: 180
  Interface index: 68, State: 0x2
  NET used in hello: 47.0005.80ff.f800.0000.0108.0001.0102.5501.6007

Interface: lo0.0
  Receives: ISH, Sends: - , Hello interval: 60.00
  Adjacencies: 0, Holdtime: 180, End system configuration timer: 180
  Interface index: 64, State: 0x2
  NET used in hello: 47.0005.80ff.f800.0000.0108.0001.0102.5501.6007
```

show esis interface extensive

The output for the **show esis interface extensive** command is identical to that for the **show esis interface detail** command. For sample output, see [show esis interface detail on page 1798](#).

show esis statistics

Syntax `show esis statistics`
`<instance instance-name>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display End System-to-Intermediate System (ES-IS) packet statistics.

Options **none**—Display ES-IS packet statistics for all routing instances.

instance *instance-name*—(Optional) Display ES-IS statistics for the specified routing instance only.

Required Privilege Level view

Related Documentation

- [clear esis statistics on page 1793](#)

List of Sample Output [show esis statistics on page 1800](#)

Output Fields [Table 97 on page 1799](#) describes the output fields for the **show esis statistics** command. Output fields are listed in the approximate order in which they appear.

Table 97: show esis statistics Output Fields

Field Name	Field Description
PDU type	Protocol data unit type.
Received	Number of PDUs received since IS-IS started or since the statistics were set to zero.
Processed	Number of PDUs received less the number dropped.
Drops	Number of PDUs dropped.
Sent	Number of PDUs transmitted since IS-IS started or since the statistics were set to zero.
Total packets received/sent	Total number of PDUs received and transmitted since IS-IS started or since the statistics were set to zero.

Sample Output

`show esis statistics`

```
user@host> show esis statistics
```

PDU type	Received	Processed	Drops	Sent
ESH	3	3	0	8
ISH	11	10	1	4
RD	0	0	0	0
Unknown	0	0	0	0
Totals	14	13	1	12

Total packets received: 14 sent: 0

CHAPTER 19

IP Multicast Operational Commands

- clear amt statistics
- clear amt tunnel
- clear igmp membership
- clear igmp snooping membership
- clear igmp snooping statistics
- clear igmp statistics
- clear mld membership
- clear mld statistics
- clear msdp cache
- clear msdp statistics
- clear multicast bandwidth-admission
- clear multicast forwarding-cache
- clear multicast scope
- clear multicast sessions
- clear multicast snooping statistics
- clear multicast statistics
- clear pim join
- clear pim join-distribution
- clear pim register
- clear pim snooping join
- clear pim snooping statistics
- clear pim statistics
- request pim multicast-tunnel rebalance
- show amt statistics
- show amt summary
- show amt tunnel
- show dvmrp interfaces
- show dvmrp neighbors

- `show dvmrp prefix`
- `show dvmrp prunes`
- `show igmp group`
- `show igmp interface`
- `show igmp snooping interface`
- `show igmp snooping membership`
- `show igmp snooping statistics`
- `show igmp statistics`
- `show mld group`
- `show mld interface`
- `show mld statistics`
- `show msdp`
- `show msdp source`
- `show msdp source-active`
- `show msdp statistics`
- `show multicast backup-pe-groups`
- `show multicast flow-map`
- `show multicast forwarding-cache statistics`
- `show multicast interface`
- `show multicast mrinfo`
- `show multicast next-hops`
- `show multicast pim-to-igmp-proxy`
- `show multicast pim-to-mld-proxy`
- `show multicast route`
- `show multicast rpf`
- `show multicast scope`
- `show multicast snooping next-hops`
- `show multicast sessions`
- `show multicast snooping route`
- `show multicast statistics`
- `show multicast usage`
- `show pim bootstrap`
- `show pim interfaces`
- `show pim join`
- `show pim mdt`
- `show pim mdt data-mdt-joins`
- `show pim mdt data-mdt-limit`

- `show pim neighbors`
- `show pim rps`
- `show pim snooping interfaces`
- `show pim snooping join`
- `show pim snooping neighbors`
- `show pim snooping statistics`
- `show pim source`
- `show pim statistics`
- `show sap listen`
- `test msdp`

clear amt statistics

Syntax	<pre>clear amt statistics <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Release Information	Command introduced in JUNOS Release 10.2.
Description	Clear Automatic Multicast Tunneling (AMT) statistics.
Options	<p>none—Clear the multicast statistics for all AMT tunnel interfaces.</p> <p>instance <i>instance-name</i>—(Optional) Clear AMT multicast statistics for the specified instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show amt statistics on page 1842
List of Sample Output	clear amt statistics on page 1804
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear amt statistics

```
user@host> clear amt statistics
```


clear amt tunnel

Syntax	<pre>clear amt tunnel <gateway <i>gateway-ip-addr</i>> <port <i>port-number</i>> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <statistics> <tunnel-interface <i>interface-name</i>></pre>
Release Information	Command introduced in JUNOS Release 10.2.
Description	Clear the Automatic Multicast Tunneling (AMT) multicast state. Optionally, clear AMT protocol statistics.
Options	<p>none—Clear multicast state for all AMT tunnel interfaces.</p> <p>gateway <i>gateway-ip-addr</i> port <i>port-number</i>—(Optional) Clear the AMT multicast state for the specified gateway address. If no port is specified, clear the AMT multicast state for all AMT gateways with the given IP address.</p> <p>instance <i>instance-name</i>—(Optional) Clear the AMT multicast state for the specified instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>statistics—(Optional) Clear multicast statistics for all AMT tunnels or for specified tunnels.</p> <p>tunnel-interface <i>interface-name</i>—(Optional) Clear the AMT multicast state for the specified AMT tunnel interface.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show amt tunnel on page 1847
List of Sample Output	clear amt tunnel on page 1805 clear amt tunnel statistics gateway-address on page 1806
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear amt tunnel

```
user@host> clear amt tunnel
```

`clear amt tunnel statistics gateway-address`

`user@host> clear amt tunnel statistics gateway-address 100.31.1.21 port 4000`

clear igmp membership

List of Syntax	Syntax on page 1807 Syntax (EX Series Switch and the QFX Series) on page 1807
Syntax	<pre>clear igmp membership <all> <group <i>address-range</i>> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>clear igmp membership <group <i>address-range</i>> <interface <i>interface-name</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Clear Internet Group Management Protocol (IGMP) group members.
Options	<p>all—Clear IGMP members for groups and interfaces in the master instance.</p> <p>group <i>address-range</i>—(Optional) Clear all IGMP members that are in a particular address range. An example of a range is 233.252/16. If you omit the destination prefix length, the default is /32.</p> <p>interface <i>interface-name</i>—(Optional) Clear all IGMP group members on an interface.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show igmp group on page 1861 • show igmp interface on page 1865
List of Sample Output	clear igmp membership all on page 1808 clear igmp membership interface on page 1808 clear igmp membership group on page 1809
Output Fields	See show igmp group for an explanation of output fields.

Sample Output

clear igmp membership all

The following sample output displays IGMP group information before and after the **clear igmp membership** command is entered:

```
user@host> show igmp group
```

Interface	Group	Last Reported	Timeout
so-0/0/0	198.51.100.253	203.0.113.1	186
so-0/0/0	198.51.100.254	203.0.113.1	186
so-0/0/0	198.51.100.255	203.0.113.1	187
so-0/0/0	198.51.100.240	203.0.113.1	188
local	198.51.100.6	(null)	0
local	198.51.100.5	(null)	0
local	198.51.100.25	(null)	0
local	198.51.100.22	(null)	0
local	198.51.100.2	(null)	0
local	198.51.100.13	(null)	0

```
user@host> clear igmp membership all
```

```
Clearing Group Membership Info for so-0/0/0
Clearing Group Membership Info for so-1/0/0
Clearing Group Membership Info for so-2/0/0
```

```
user@host> show igmp group
```

Interface	Group	Last Reported	Timeout
local	198.51.100.6	(null)	0
local	198.51.100.5	(null)	0
local	198.51.100.254	(null)	0
local	198.51.100.255	(null)	0
local	198.51.100.2	(null)	0
local	198.51.100.13	(null)	0

clear igmp membership interface

The following sample output displays IGMP group information before and after the **clear igmp membership interface** command is issued:

```
user@host> show igmp group
```

Interface	Group	Last Reported	Timeout
so-0/0/0	198.51.100.253	203.0.113.1	210
so-0/0/0	198.51.100.200	203.0.113.1	210
so-0/0/0	198.51.100.255	203.0.113.1	215
so-0/0/0	198.51.100.254	203.0.113.1	216
local	198.51.100.6	(null)	0
local	198.51.100.5	(null)	0
local	198.51.100.254	(null)	0
local	198.51.100.255	(null)	0
local	198.51.100.2	(null)	0
local	198.51.100.13	(null)	0

```
user@host> clear igmp membership interface so-0/0/0
```

Clearing Group Membership Info for so-0/0/0

```
user@host> show igmp group
```

Interface	Group	Last Reported	Timeout
local	198.51.100.6	(null)	0
local	198.51.100.5	(null)	0
local	198.51.100.254	(null)	0
local	198.51.100.255	(null)	0
local	198.51.100.2	(null)	0
local	198.51.100.13	(null)	0

clear igmp membership group

The following sample output displays IGMP group information before and after the **clear igmp membership group** command is entered:

```
user@host> show igmp group
```

Interface	Group	Last Reported	Timeout
so-0/0/0	198.51.100.253	203.0.113.1	210
so-0/0/0	198.51.100.25	203.0.113.1	210
so-0/0/0	198.51.100.255	203.0.113.1	215
so-0/0/0	198.51.100.254	203.0.113.1	216
local	198.51.100.6	(null)	0
local	198.51.100.5	(null)	0
local	198.51.100.254	(null)	0
local	198.51.100.25	(null)	0
local	198.51.100.2	(null)	0
local	198.51.100.13	(null)	0

```
user@host> clear igmp membership group 233.252/16
```

Clearing Group Membership Range 198.51.100.0/16 on so-0/0/0
 Clearing Group Membership Range 198.51.100.0/16 on so-1/0/0
 Clearing Group Membership Range 198.51.100.0/16 on so-2/0/0

```
user@host> show igmp group
```

Interface	Group	Last Reported	Timeout
so-0/0/0	198.51.100.255	203.0.113.1	231
so-0/0/0	198.51.100.254	203.0.113.1	233
so-0/0/0	198.51.100.253	203.0.113.1	236
local	198.51.100.6	(null)	0
local	198.51.100.5	(null)	0
local	198.51.100.254	(null)	0
local	198.51.100.255	(null)	0
local	198.51.100.2	(null)	0
local	198.51.100.13	(null)	0

clear igmp snooping membership

Syntax	<pre>clear igmp snooping membership <vlan <i>vlan-name</i>> <group source <i>address</i>> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <learning-domain <i>learning-domain-name</i>> <logical-system <i>logical-system-name</i>> <vlan-id <i>vlan-identifier</i>></pre>
Release Information	Command introduced in Junos OS Release 8.5. Command introduced in Junos OS Release 18.1R1 for the SRX1500 devices.
Description	Clear IGMP snooping dynamic membership information from the multicast forwarding table.
Options	<p>none—Clear IGMP snooping membership for all supported address families on all interfaces.</p> <p>vlan <i>vlan-name</i> —(Optional) Clear dynamic membership information for the specified VLAN.</p> <p>group source <i>address</i>—(Optional) Clear IGMP snooping membership for the specified multicast group or source address.</p> <p>instance <i>instance-name</i>—(Optional) Clear IGMP snooping membership for the specified instance.</p> <p>interface <i>interface-name</i>—(Optional) Clear IGMP snooping membership on a specific interface.</p> <p>learning-domain <i>learning-domain-name</i>—(Optional) Perform this operation on all learning domains or on a particular learning domain.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Display information about a particular logical system, or for all logical systems.</p> <p>vlan-id <i>vlan-identifier</i>—(Optional) Perform this operation on a particular VLAN.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show igmp snooping membership on page 1875
List of Sample Output	clear igmp snooping membership on page 1811
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

`clear igmp snooping membership`

```
user@host> clear igmp snooping membership
```

clear igmp snooping statistics

Syntax	<pre>clear igmp snooping statistics <instance <i>instance-name</i>> <interface <i>interface-name</i>> <learning-domain (all <i>learning-domain-name</i>)> <logical-system <i>logical-system-name</i>></pre>
Release Information	Command introduced in Junos OS Release 8.5. Command introduced in Junos OS Release 18.1R1 for the SRX1500 devices.
Description	Clear IP IGMP snooping statistics.
Options	<p>none—Clear IGMP snooping statistics for all supported address families on all interfaces.</p> <p>instance <i>instance-name</i>—(Optional) Clear IGMP snooping statistics for the specified instance.</p> <p>interface <i>interface-name</i>—(Optional) Clear IGMP snooping statistics on a specific interface.</p> <p>learning-domain (all <i>learning-domain-name</i>)—(Optional) Perform this operation on all learning domains or on a particular learning domain.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Delete the IGMP snooping statistics for a given logical system or for all logical systems.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show igmp snooping statistics on page 1881
List of Sample Output	clear igmp snooping statistics on page 1812
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear igmp snooping statistics

```
user@host> clear igmp snooping statistics
```


clear igmp statistics

List of Syntax	Syntax on page 1813 Syntax (EX Series Switches) on page 1813
Syntax	<pre>clear igmp statistics <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>clear igmp statistics <interface <i>interface-name</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Clear Internet Group Management Protocol (IGMP) statistics.
Options	<p>none—Clear IGMP statistics on all interfaces.</p> <p>interface <i>interface-name</i>—(Optional) Clear IGMP statistics for the specified interface only.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show igmp statistics on page 1886
List of Sample Output	clear igmp statistics on page 1813
Output Fields	See show igmp statistics for an explanation of output fields.

Sample Output

clear igmp statistics

The following sample output displays IGMP statistics information before and after the **clear igmp statistics** command is entered:

```
user@host> show igmp statistics
```

```

IGMP packet statistics for all interfaces
IGMP Message type      Received      Sent  Rx errors
Membership Query       8883         459    0
V1 Membership Report   0            0      0
DVMRP                  19784        35476  0
PIM V1                 18310        0      0
Cisco Trace            0            0      0
V2 Membership Report   0            0      0
Group Leave            0            0      0
Mtrace Response        0            0      0
Mtrace Request         0            0      0
Domain Wide Report     0            0      0
V3 Membership Report   0            0      0
Other Unknown types    0            0      0
IGMP v3 unsupported type 0            0      0
IGMP v3 source required for SSM 0            0      0
IGMP v3 mode not applicable for SSM 0            0      0

IGMP Global Statistics
Bad Length             0
Bad Checksum           0
Bad Receive If         0
Rx non-local           1227

```

```

user@host> clear igmp statistics
user@host> show igmp statistics

```

```

IGMP packet statistics for all interfaces
IGMP Message type      Received      Sent  Rx errors
Membership Query       0            0      0
V1 Membership Report   0            0      0
DVMRP                  0            0      0
PIM V1                 0            0      0
Cisco Trace            0            0      0
V2 Membership Report   0            0      0
Group Leave            0            0      0
Mtrace Response        0            0      0
Mtrace Request         0            0      0
Domain Wide Report     0            0      0
V3 Membership Report   0            0      0
Other Unknown types    0            0      0
IGMP v3 unsupported type 0            0      0
IGMP v3 source required for SSM 0            0      0
IGMP v3 mode not applicable for SSM 0            0      0

IGMP Global Statistics
Bad Length             0
Bad Checksum           0
Bad Receive If         0
Rx non-local           0

```

clear mld membership

Syntax	<pre>clear mld membership <all> <group <i>group-name</i>> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Clear Multicast Listener Discovery (MLD) group membership.
Options	<p>all—Clear MLD memberships for groups and interfaces in the master instance.</p> <p>group <i>group-name</i>—(Optional) Clear MLD membership for the specified group.</p> <p>interface <i>interface-name</i>—(Optional) Clear MLD group membership for the specified interface.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show mld group on page 1889
List of Sample Output	clear mld membership all on page 1815
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear mld membership all

```
user@host> clear mld membership all
```

clear mld statistics

Syntax `clear mld statistics`
 `<interface interface-name>`
 `<logical-system (all | logical-system-name)>`

Release Information Command introduced before Junos OS Release 7.4.

Description Clear Multicast Listener Discovery (MLD) statistics.

Options **none**—(Same as **logical-system all**) Clear MLD statistics for all interfaces.

 interface *interface-name*—(Optional) Clear MLD statistics for the specified interface.

 logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level clear

Related Documentation • [show mld statistics on page 1897](#)

List of Sample Output [clear mld statistics on page 1816](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear mld statistics

```
user@host> clear mld statistics
```

clear msdp cache

Syntax	<pre>clear msdp cache <all> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <peer <i>peer-address</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Clear the entries in the Multicast Source Discovery Protocol (MSDP) source-active cache.
Options	<p>all— Clear all MSDP source-active cache entries in the master instance.</p> <p>instance <i>instance-name</i>—(Optional) Clear entries for a specific MSDP instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>peer <i>peer-address</i>—(Optional) Clear the MSDP source-active cache entries learned from a specific peer.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show msdp source-active on page 1905
List of Sample Output	clear msdp cache all on page 1817
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear msdp cache all

```
user@host> clear msdp cache all
```

clear msdp statistics

Syntax	<pre>clear msdp statistics <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <peer <i>peer-address</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear Multicast Source Discovery Protocol (MSDP) peer statistics.
Options	<p>none—Clear MSDP statistics for all peers.</p> <p>instance <i>instance-name</i>—(Optional) Clear statistics for the specified instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>peer <i>peer-address</i>—(Optional) Clear the statistics for the specified peer.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show msdp statistics on page 1908
List of Sample Output	clear msdp statistics on page 1818
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear msdp statistics

```
user@host> clear msdp statistics
```

clear multicast bandwidth-admission

Syntax clear multicast bandwidth-admission
 <group *group-address*>
 <inet | inet6>
 <instance *instance-name*>
 <interface *interface-name*>
 <source *source-address*>

Release Information Command introduced in Junos OS Release 8.3.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
inet6 and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Reapply IP multicast bandwidth admissions.

Options **none**—Reapply multicast bandwidth admissions for all IPv4 forwarding entries in the master routing instance.

group *group-address*—(Optional) Reapply multicast bandwidth admissions for the specified group.

inet—(Optional) Reapply multicast bandwidth admission settings for IPv4 flows.

inet6—(Optional) Reapply multicast bandwidth admission settings for IPv6 flows.

instance *instance-name*—(Optional) Reapply multicast bandwidth admission settings for the specified instance. If you do not specify an instance, the command applies to the master routing instance.

interface *interface-name*—(Optional) Examines the corresponding outbound interface in the relevant entries and acts as follows:

- If the interface is congested, and it was admitted previously, it is removed.
- If the interface was rejected previously, the **clear multicast bandwidth-admission** command enables the interface to be admitted as long as enough bandwidth exists on the interface.
- If you do not specify an interface, issuing the **clear multicast bandwidth-admission** command readmits any previously rejected interface for the relevant entries as long as enough bandwidth exists on the interface.

To manually reject previously admitted outbound interfaces, you must specify the interface.

source *source-address*—(Optional) Use with the **group** option to reapply multicast bandwidth admission settings for the specified (source, group) entry.

Required Privilege Level clear

Related Documentation • [show multicast interface on page 1918](#)

List of Sample Output [clear multicast bandwidth-admission on page 1820](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

`clear multicast bandwidth-admission`

```
user@host> clear multicast bandwidth-admission
```


clear multicast forwarding-cache

Syntax	<pre>clear multicast forwarding-cache <all> <inet inet6> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Release Information	Command introduced in Junos OS Release 12.2.
Description	<p>Clear IP multicast forwarding cache entries.</p> <p>This command is not supported for next-generation multiprotocol BGP multicast VPNs (MVPNs).</p>
Options	<p>all—Clear all multicast forwarding cache entries in the master instance.</p> <p>inet—(Optional) Clear multicast forwarding cache entries for IPv4 family addresses.</p> <p>inet6—(Optional) Clear multicast forwarding cache entries for IPv6 family addresses.</p> <p>instance <i>instance-name</i>—(Optional) Clear multicast forwarding cache entries on a specific routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show multicast forwarding-cache statistics on page 1916
List of Sample Output	clear multicast forwarding-cache all on page 1821
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear multicast forwarding-cache all

```
user@host> clear multicast forwarding-cache all
```

clear multicast scope

List of Syntax	Syntax on page 1822 Syntax (EX Series Switch and the QFX Series) on page 1822
Syntax	<pre>clear multicast scope <inet inet6> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>clear multicast scope <inet inet6> <interface <i>interface-name</i>></pre>
Release Information	Command introduced in Junos OS Release 7.6. Command introduced in Junos OS Release 9.0 for EX Series switches. inet6 option introduced in Junos OS Release 10.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear IP multicast scope statistics.
Options	none —(Same as logical-system all) Clear multicast scope statistics. inet —(Optional) Clear multicast scope statistics for IPv4 family addresses. inet6 —(Optional) Clear multicast scope statistics for IPv6 family addresses. interface <i>interface-name</i> —(Optional) Clear multicast scope statistics on a specific interface. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show multicast scope on page 1947
List of Sample Output	clear multicast scope on page 1823
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

`clear multicast scope`

```
user@host> clear multicast scope
```

clear multicast sessions

List of Syntax	Syntax on page 1824 Syntax (EX Series Switch and the QFX Series) on page 1824
Syntax	<pre>clear multicast sessions <logical-system (all <i>logical-system-name</i>)> <<i>regular-expression</i>></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>clear multicast sessions <<i>regular-expression</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear IP multicast sessions.
Options	none —(Same as logical-system all) Clear multicast sessions. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system. <i>regular-expression</i> —(Optional) Clear only multicast sessions that contain the specified regular expression.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show multicast sessions on page 1953
List of Sample Output	clear multicast sessions on page 1824
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear multicast sessions

```
user@host> clear multicast sessions
```

clear multicast snooping statistics

Syntax	clear multicast snooping statistics <instance <i>instance-name</i> > <interface <i>interface-name</i> > <logical-system (all <i>logical-system-name</i>)>
Release Information	Command introduced in Junos OS Release 8.5.
Description	Clear IP multicast snooping statistics.
Options	<p>none—Clear multicast snooping statistics for all supported address families on all interfaces.</p> <p>instance <i>instance-name</i>—(Optional) Clear multicast snooping statistics for the specified instance.</p> <p>interface <i>interface-name</i>—(Optional) Clear multicast snooping statistics on a specific interface.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
List of Sample Output	clear multicast snooping statistics on page 1825
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear multicast snooping statistics

```
user@host> clear multicast snooping statistics
```

clear multicast statistics

List of Syntax	Syntax on page 1826 Syntax (EX Series Switch and the QFX Series) on page 1826
Syntax	<pre>clear multicast statistics <inet inet6> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>clear multicast statistics <inet inet6> <instance <i>instance-name</i>> <interface <i>interface-name</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>inet6 and instance options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Clear IP multicast statistics.
Options	<p>none—Clear multicast statistics for all supported address families on all interfaces.</p> <p>inet—(Optional) Clear multicast statistics for IPv4 family addresses.</p> <p>inet6—(Optional) Clear multicast statistics for IPv6 family addresses.</p> <p>instance <i>instance-name</i>—(Optional) Clear multicast statistics for the specified instance.</p> <p>interface <i>interface-name</i>—(Optional) Clear multicast statistics on a specific interface.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show multicast statistics on page 1961
List of Sample Output	clear multicast statistics on page 1827
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear multicast statistics

```
user@host> clear multicast statistics
```

clear pim join

List of Syntax [Syntax on page 1828](#)
[Syntax \(EX Series Switch and the QFX Series\) on page 1828](#)

Syntax

```
clear pim join
<all>
<group-address>
<bidirectional | dense | sparse>
<exact>
<inet | inet6>
<instance instance-name>
<logical-system (all | logical-system-name)>
<rp ip-address/prefix | source ip-address/prefix>
<sg | star-g>
```

Syntax (EX Series Switch and the QFX Series)

```
clear pim join
<all>
<group-address>
<dense | sparse>
<exact>
<inet | inet6>
<instance instance-name>
<rp ip-address/prefix | source ip-address/prefix>
<sg | star-g>
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
inet6 and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Multiple new filter options introduced in Junos OS Release 13.2.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Clear the Protocol Independent Multicast (PIM) join and prune states.

Options

- all**—To clear PIM join and prune states for all groups and family addresses in the master instance, you must specify “all”.
- group-address**—(Optional) Clear the PIM join and prune states for a group address.
- bidirectional | dense | sparse**—(Optional) Clear PIM bidirectional mode, dense mode, or sparse and source-specific multicast (SSM) mode entries.
- exact**—(Optional) Clear only the group that exactly matches the specified group address.
- inet | inet6**—(Optional) Clear the PIM entries for IPv4 or IPv6 family addresses, respectively.

instance *instance-name*—(Optional) Clear the entries for a specific PIM-enabled routing instance.

logical-system (**all** | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

rp *ip-address/prefix* | **source** *ip-address/prefix*—(Optional) Clear the PIM entries with a specified rendezvous point (RP) address and prefix or with a specified source address and prefix. You can omit the prefix.

sg | **star-g**—(Optional) Clear PIM (S,G) or (*,G) entries.

Additional Information The **clear pim join** command cannot be used to clear the PIM join and prune state on a backup Routing Engine when nonstop active routing is enabled.

Required Privilege Level clear

Related Documentation

- [show pim join on page 1974](#)

List of Sample Output

- [clear pim join all on page 1829](#)
- [clear pim join inet6 all on page 1829](#)
- [clear pim join inet6 star-g all on page 1829](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear pim join all

```
user@host> clear pim join all
Cleared 8 Join/Prune states
```

clear pim join inet6 all

```
user@host> clear pim join inet6 all
Cleared 4 Join/Prune states
```

clear pim join inet6 star-g all

```
user@host> clear pim join inet6 star-g all
Cleared 1 Join/Prune states
```

clear pim join-distribution

Syntax	<pre>clear pim join-distribution <all> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Release Information	Command introduced in Junos OS Release 10.0.
Description	<p>Clear the PIM join-redistribute states.</p> <p>Use the show pim source command to find out if there are multiple paths available for a source (for example, an RP).</p> <p>When you include the join-load-balance statement in the configuration, the PIM join states are distributed evenly on available equal-cost multipath links. When an upstream neighbor link fails, Junos OS redistributes the PIM join states to the remaining links. However, when new links are added or the failed link is restored, the existing PIM joins are not redistributed to the new link. New flows will be distributed to the new links. However, in a network without new joins and prunes, the new link is not used for multicast traffic. The clear pim join-distribution command redistributes the existing flows to the new upstream neighbors. Redistributing the existing flows causes traffic to be disrupted, so we recommend that you run the clear pim join-distribution command during a maintenance window.</p>
Options	<p>all— (Optional) Clear the PIM join-redistribute states for all groups and family addresses in the master instance.</p> <p>none— Automatically clear all PIM join/prune states.</p> <p>instance <i>instance-name</i>—(Optional) Redistribute the join states for a specific PIM-enabled routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Additional Information	The clear pim join-distribution command cannot be used to redistribute the PIM join states on a backup Routing Engine when nonstop active routing is enabled.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show pim neighbors on page 1998• show pim join on page 1974• join-load-balance

List of Sample Output [clear pim join-distribution all on page 1831](#)

Output Fields When you enter this command, you are provided no feedback on the status of your request. You can enter the **show pim join** command before and after distributing the join state to verify the operation.

Sample Output

[clear pim join-distribution all](#)

```
user@host> clear pim join-distribution all
```

clear pim register

- List of Syntax** [Syntax on page 1832](#)
 [Syntax \(EX Series Switch and the QFX Series\) on page 1832](#)
 [Syntax \(PTX Series\) on page 1832](#)

Syntax clear pim register
 <all>
 <inet | inet6>
 <instance *instance-name*>
 <interface *interface-name*>
 <logical-system (all | *logical-system-name*)>

Syntax (EX Series Switch and the QFX Series) clear pim register
 <inet | inet6>
 <instance *instance-name*>
 <interface *interface-name*>

Syntax (PTX Series) clear pim register
 <inet | inet6>
 <instance *instance-name*>
 <logical-system (all | *logical-system-name*)>

Release Information Command introduced in Junos OS Release 7.6.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 inet6 and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Clear Protocol Independent Multicast (PIM) register message counters.

Options **all**—Required to clear the PIM register message counters for all groups and family addresses in the master instance.

inet | inet6—(Optional) Clear PIM register message counters for IPv4 or IPv6 family addresses, respectively.

instance *instance-name*—(Optional) Clear register message counters for a specific PIM-enabled routing instance.

interface *interface-name*—(Optional) Clear PIM register message counters for a specific interface.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Additional Information The `clear pim register` command cannot be used to clear the PIM register state on a backup Routing Engine when nonstop active routing is enabled.

Required Privilege Level clear

Related Documentation • [show pim statistics on page 2031](#)

List of Sample Output [clear pim register all on page 1833](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

[clear pim register all](#)

```
user@host> clear pim register all
```

clear pim snooping join

Syntax	<pre>clear pim snooping join <instance <i>instance-name</i>> <logical-system <i>logical-system-name</i>> <vlan-id <i>vlan-id</i>></pre>
Release Information	Command introduced in Junos OS Release 12.3 for MX Series 5G Universal Routing Platforms. Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.
Description	Clear information about Protocol Independent Multicast (PIM) snooping joins.
Options	<p>none—Display detailed information.</p> <p>instance <i>instance-name</i>—(Optional) Clear PIM snooping join information for the specified routing instance.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Delete the IGMP snooping statistics for a given logical system or for all logical systems.</p> <p>vlan-id <i>vlan-identifier</i>—(Optional) Clear PIM snooping join information for the specified VLAN.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• <i>PIM Snooping for VPLS</i>
List of Sample Output	clear pim snooping join on page 1834
Output Fields	See show pim snooping join for an explanation of the output fields.

Sample Output

clear pim snooping join

The following sample output displays information about PIM snooping joins before and after the **clear pim snooping join** command is entered:

```
user@host> show pim snooping join extensive

Instance: vpls1
Learning-Domain: vlan-id 10
Learning-Domain: vlan-id 20

Group: 198.51.100.2
Source: *
```

```
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.5, port: ge-1/3/7.20
Downstream port: ge-1/3/1.20
Downstream neighbors:
192.0.2.2 State: Join Flags: SRW Timeout: 185
```

```
Group: 198.51.100.3
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.20
Downstream port: ge-1/3/3.20
Downstream neighbors:
192.0.2.3 State: Join Flags: SRW Timeout: 175
```

```
user@host> clear pim snooping join
```

```
Clearing the Join/Prune state for 203.0.113.0/24
Clearing the Join/Prune state for 203.0.113.0/24
```

```
user@host> show pim snooping join extensive
```

```
Instance: vpls1
Learning-Domain: vlan-id 10
Learning-Domain: vlan-id 20
```

clear pim snooping statistics

Syntax	<pre>clear pim snooping statistics <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system <i>logical-system-name</i>> <vlan-id <i>vlan-id</i>></pre>
Release Information	Command introduced in Junos OS Release 12.3 for MX Series 5G Universal Routing Platforms. Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.
Description	Clear Protocol Independent Multicast (PIM) snooping statistics.
Options	<p>none—Clear PIM snooping statistics for all family addresses, instances, and interfaces.</p> <p>instance <i>instance-name</i>—(Optional) Clear statistics for a specific PIM-snooping-enabled routing instance.</p> <p>interface <i>interface-name</i>—(Optional) Clear PIM snooping statistics for a specific interface.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Delete the IGMP snooping statistics for a given logical system or for all logical systems.</p> <p>vlan-id <i>vlan-identifier</i>—(Optional) Clear PIM snooping statistics information for the specified VLAN.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• <i>PIM Snooping for VPLS</i>
List of Sample Output	clear pim snooping statistics on page 1836
Output Fields	See show pim snooping statistics for an explanation of the output fields.

Sample Output

clear pim snooping statistics

The following sample output displays PIM snooping statistics before and after the **clear pim snooping statistics** command is entered:

```
user@host> show pim snooping statistics

Instance: vpls1
Learning-Domain: vlan-id 10
```



```
Tx J/P messages 0
RX J/P messages 660
Rx J/P messages -- seen 0
Rx J/P messages -- received 660
Rx Hello messages 1396
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
```

```
Learning-Domain: vlan-id 20
```

```
user@host> clear pim snooping statistics
user@host> show pim snooping statistics
```

```
Instance: vpls1
Learning-Domain: vlan-id 10
```

```
Tx J/P messages 0
RX J/P messages 0
Rx J/P messages -- seen 0
Rx J/P messages -- received 0
Rx Hello messages 0
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
```

```
Learning-Domain: vlan-id 20
```

clear pim statistics

List of Syntax	Syntax on page 1838 Syntax (EX Series Switch and the QFX Series) on page 1838
Syntax	<pre>clear pim statistics <inet inet6> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>clear pim statistics <inet inet6> <instance <i>instance-name</i>> <interface <i>interface-name</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. inet6 and instance options introduced in Junos OS Release 10.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear Protocol Independent Multicast (PIM) statistics.
Options	none —Clear PIM statistics for all family addresses, instances, and interfaces. inet inet6 —(Optional) Clear PIM statistics for IPv4 or IPv6 family addresses, respectively. instance <i>instance-name</i> —(Optional) Clear statistics for a specific PIM-enabled routing instance. interface <i>interface-name</i> —(Optional) Clear PIM statistics for a specific interface. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Additional Information	The clear pim statistics command cannot be used to clear the PIM statistics on a backup Routing Engine when nonstop active routing is enabled.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show pim statistics on page 2031
List of Sample Output	clear pim statistics on page 1839

Output Fields See [show pim statistics](#) for an explanation of output fields.

Sample Output

clear pim statistics

The following sample output displays PIM statistics before and after the **clear pim statistics** command is entered:

```
user@host> show pim statistics
```

PIM statistics on all interfaces:

PIM Message type	Received	Sent	Rx errors
Hello	0	0	0
Register	0	0	0
Register Stop	0	0	0
Join Prune	0	0	0
Bootstrap	0	0	0
Assert	0	0	0
Graft	0	0	0
Graft Ack	0	0	0
Candidate RP	0	0	0
V1 Query	2111	4222	0
V1 Register	0	0	0
V1 Register Stop	0	0	0
V1 Join Prune	14200	13115	0
V1 RP Reachability	0	0	0
V1 Assert	0	0	0
V1 Graft	0	0	0
V1 Graft Ack	0	0	0

PIM statistics summary for all interfaces:

Unknown type	0
V1 Unknown type	0
Unknown Version	0
Neighbor unknown	0
Bad Length	0
Bad Checksum	0
Bad Receive If	0
Rx Intf disabled	2007
Rx V1 Require V2	0
Rx Register not RP	0
RP Filtered Source	0
Unknown Reg Stop	0
Rx Join/Prune no state	1040
Rx Graft/Graft Ack no state	0

...

```
user@host> clear pim statistics
```

```
user@host> show pim statistics
```

PIM statistics on all interfaces:

PIM Message type	Received	Sent	Rx errors
Hello	0	0	0
Register	0	0	0
Register Stop	0	0	0
Join Prune	0	0	0
Bootstrap	0	0	0
Assert	0	0	0
Graft	0	0	0

Graft Ack	0	0	0
Candidate RP	0	0	0
V1 Query	1	0	0
V1 Register	0	0	0
...			

request pim multicast-tunnel rebalance

List of Syntax [Syntax on page 1841](#)
 [Syntax \(EX Series Switches\) on page 1841](#)

Syntax request pim multicast-tunnel rebalance
 <instance *instance-name*>
 <logical-system (all | *logical-system-name*)>

Syntax (EX Series Switches) request pim multicast-tunnel rebalance
 <instance *instance-name*>

Release Information Command introduced in Junos OS Release 10.2.
 Command introduced in Junos OS Release 10.2 for EX Series switches.

Description Rebalance the assignment of multicast tunnel encapsulation interfaces across available tunnel-capable PICs or across a configured list of tunnel-capable PICs. You can determine whether a rebalance is necessary by running the **show pim interfaces instance *instance-name*** command.

Options **none**—Re-create and rebalance all tunnel interfaces for all routing instances.
 instance *instance-name*—Re-create and rebalance all tunnel interfaces for a specific instance.
 logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level maintenance

Related Documentation • [show pim interfaces on page 1971](#)
 • *Load Balancing Multicast Tunnel Interfaces Among Available PICs*

Output Fields This command produces no output. To verify the operation of the command, run the **show pim interface instance *instance-name*** before and after running the **request pim multicast-tunnel rebalance** command.

show amt statistics

Syntax `show amt statistics`
`<instance instance-name>`
`<logical-system (all | logical-system-name)>`

Release Information Command introduced in JUNOS Release 10.2.

Description Display information about the Automatic Multicast Tunneling (AMT) protocol tunnel statistics.

Options **none**—Display summary information about all AMT Protocol tunnels.

instance *instance-name*—(Optional) Display information for the specified instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation

- [clear amt statistics on page 1804](#)
- [show amt summary on page 1845](#)
- [show amt tunnel on page 1847](#)

List of Sample Output [show amt statistics on page 1843](#)

Output Fields [Table 98 on page 1842](#) describes the output fields for the **show amt statistics** command. Output fields are listed in the approximate order in which they appear.

Table 98: show amt statistics Output Fields

Field Name	Field Description
AMT receive message count	<p>Summary of AMT statistics for messages received on all interfaces.</p> <ul style="list-style-type: none"> • AMT relay discovery—Number of AMT relay discovery messages received. • AMT membership request—Number of AMT membership request messages received. • AMT membership update—Number of AMT membership update messages received.
AMT send message count	<p>Summary of AMT statistics for messages sent on all interfaces.</p> <ul style="list-style-type: none"> • AMT relay advertisement—Number of AMT relay advertisement messages sent. • AMT membership query—Number of AMT membership query messages sent.

Table 98: show amt statistics Output Fields (continued)

Field Name	Field Description
AMT error message count	<p>Summary of AMT statistics for error messages received on all interfaces.</p> <ul style="list-style-type: none"> • AMT incomplete packet—Number of messages received with length errors so severe that further classification could not occur. • AMT invalid mac—Number of messages received with an invalid message authentication code (MAC). • AMT unexpected type—Number of messages received with an unknown message type specified. • AMT invalid relay discovery address—Number of AMT relay discovery messages received with an address other than the configured anycast address. • AMT invalid membership request address—Number of AMT membership request messages received with an address other than the configured AMT local address. • AMT invalid membership update address—Number of AMT membership update messages received with an address other than the configured AMT local address. • AMT incomplete relay discovery messages—Number of AMT relay discovery messages received that are not fully formed. • AMT incomplete membership request messages—Number of AMT membership request messages received that are not fully formed. • AMT incomplete membership update messages—Number of AMT membership update messages received that are not fully formed. • AMT no active gateway—Number of AMT membership update messages received for a tunnel that does not exist for the gateway that sent the message. • AMT invalid inner header checksum—Number of AMT membership update messages received with an invalid IP checksum. • AMT gateways timed out—Number of gateways that timed out because of inactivity.

Sample Output

show amt statistics

```
user@host> show amt statistics
```

```

AMT receive message count
AMT relay advertisement           :           2
AMT membership request           :           5
AMT membership update            :           5

AMT send message count
AMT relay advertisement           :           2
AMT membership query             :           5

AMT error message count
AMT incomplete packet             :           0
AMT invalid mac                   :           0
AMT unexpected type               :           0
AMT invalid relay discovery address :           0
AMT invalid membership request address :           0
AMT invalid membership update address :           0
AMT incomplete relay discovery messages :           0
AMT incomplete membership request messages :           0
AMT incomplete membership update messages :           0
AMT no active gateway             :           0

```

AMT invalid inner header checksum	:	0
AMT gateways timed out	:	0

show amt summary

Syntax `show amt summary`
 `<instance instance-name>`
 `<logical-system (all | logical-system-name)>`

Release Information Command introduced in Junos OS Release 10.2.

Description Display summary information about the Automatic Multicast Tunneling (AMT) protocol.

Options **none**—Display summary information about all AMT protocol instances.

instance *instance-name*—(Optional) Display information for the specified instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation

- [clear amt tunnel on page 1805](#)
- [show amt statistics on page 1842](#)
- [show amt tunnel on page 1847](#)

List of Sample Output [show amt summary on page 1846](#)

Output Fields [Table 99 on page 1845](#) describes the output fields for the **show amt summary** command. Output fields are listed in the approximate order in which they appear.

Table 99: show amt summary Output Fields

Field Name	Field Description	Level of Output
AMT anycast prefix	Prefix advertised by unicast routing protocols to route AMT discovery messages to the router from nearby AMT gateways.	All levels
AMT anycast address	Anycast address configured from which the anycast prefix is derived.	All levels
AMT local address	Local unique AMT relay IP address configured. Used to send AMT relay advertisement messages, it is the IP source address of AMT control messages and the source address of the data tunnel encapsulation.	All levels
AMT tunnel limit	Maximum number of AMT tunnels that can be created.	All levels
active tunnels	Number of active AMT tunnel interfaces.	All levels

Sample Output

show amt summary

```
user@host> show amt summary
AMT anycast prefix : 20.0.0.4/32
AMT anycast address : 20.0.0.4
AMT local address : 20.0.0.4
AMT tunnel limit : 1000, active tunnels : 2
```

show amt tunnel

Syntax	<pre>show amt tunnel <brief detail> <gateway-address gateway-ip-address> <port port-number> <instance instance-name> <logical-system (all logical-system-name)> <tunnel-interface interface-name></pre>
Release Information	Command introduced in Junos OS Release 10.2.
Description	Display information about the Automatic Multicast Tunneling (AMT) dynamic tunnels.
Options	<p>none—Display summary information about all AMT protocol instances.</p> <p>brief detail—(Optional) Display the specified level of detail.</p> <p>gateway-address gateway-ip-address port port-number—(Optional) Display information for the specified AMT gateway only. If no port is specified, display information for all AMT gateways with the given IP address.</p> <p>instance instance-name—(Optional) Display information for the specified instance only.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>tunnel-interface interface-name—(Optional) Display information for the specified AMT tunnel interface only.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • clear amt tunnel on page 1805 • show amt statistics on page 1842 • show amt summary on page 1845
List of Sample Output	<p>show amt tunnel on page 1848</p> <p>show amt tunnel detail on page 1849</p> <p>show amt tunnel tunnel-interface on page 1849</p> <p>show amt tunnel gateway-address on page 1849</p> <p>show amt tunnel gateway-address detail on page 1849</p>
Output Fields	Table 100 on page 1848 describes the output fields for the show amt tunnel command. Output fields are listed in the approximate order in which they appear.

Table 100: show amt tunnel Output Fields

Field Name	Field Description	Level of Output
AMT gateway address	Address of the AMT gateway that is being connected by the AMT tunnel.	All levels
port	Client port used by the AMT tunnel.	All levels
AMT tunnel interface	Dynamically created AMT logical interfaces used by the AMT tunnel in the format ud-FPC/PIC/Port.unit .	All levels
AMT tunnel state	State of the AMT tunnel. The state is normally Active . <ul style="list-style-type: none"> • Active—The tunnel is active. • Pending—The tunnel creation is pending. This is a transient state. • Down—The tunnel is in the down state. • Graceful restart pending—Graceful restart is in progress. • Reviving—The routing protocol daemon or Routing Engine was restarted (not gracefully). The tunnel remains in the reviving state until the AMT gateway sends a control message. When the message is received the tunnel is moved to the Active state. If no message is received before the AMT tunnel inactivity timer expires, the tunnel is deleted. 	All levels
AMT tunnel inactivity timeout	Number of seconds since the most recent control message was received from an AMT gateway. If no message is received before the AMT tunnel inactivity timer expires, the tunnel is deleted.	All levels
Number of groups	Number of multicast groups using the tunnel.	All levels
Group	Multicast group address or addresses using the tunnel.	detail
Include Source	Multicast source address for each IGMPv3 group using the tunnel.	detail
AMT message count	Statistics for AMT messages: <ul style="list-style-type: none"> • AMT Request—Number of AMT relay tunnel request messages received. • AMT membership update—Number of AMT membership update messages received. 	All levels

Sample Output

show amt tunnel

```

user@host> show amt tunnel

AMT gateway address : 11.11.11.2, port : 2268
AMT tunnel interface : ud-5/1/10.1120256
AMT tunnel state : Active
AMT tunnel inactivity timeout : 15
Number of groups : 1

AMT message count:
AMT Request      AMT membership update
2                2

```

show amt tunnel detail

```

user@host> show amt tunnel detail

AMT gateway address : 11.11.11.2, port : 2268
AMT tunnel interface : ud-5/3/10.1120512
AMT tunnel state : Active
AMT tunnel inactivity timeout : 62
Number of groups : 1
Group: 226.2.3.2

AMT message count:
AMT Request      AMT membership update
2                2

AMT gateway address : 11.11.11.3, port : 2268
AMT tunnel interface : ud-5/2/10.1120513
AMT tunnel state : Active
AMT tunnel inactivity timeout : 214
Number of groups : 1
Group: 226.2.3.3

AMT message count:
AMT Request      AMT membership update
2                2

```

show amt tunnel tunnel-interface

```

user@host> show amt tunnel tunnel-interface ud-5/3/10.1120512

AMT gateway address : 11.11.11.2, port : 2268
AMT tunnel interface : ud-5/3/10.1120512
AMT tunnel state : Active
AMT tunnel inactivity timeout : 145
Number of groups : 1

AMT message count:
AMT Request      AMT membership update
2                2

```

show amt tunnel gateway-address

```

user@host> show amt tunnel gateway-address 11.11.11.3 port 2268

AMT gateway address : 11.11.11.3, port : 2268
AMT tunnel interface : ud-5/2/10.1120513
AMT tunnel state : Active
AMT tunnel inactivity timeout : 214
Number of groups : 1
Group: 226.2.3.3

AMT message count:
AMT Request      AMT membership update
2                2

```

show amt tunnel gateway-address detail

```

user@host> show amt tunnel gateway-address 11.11.11.2 detail

```

```
AMT gateway address : 11.11.11.2, port : 2268
AMT tunnel interface : ud-5/3/10.1120512
AMT tunnel state : Active
AMT tunnel inactivity timeout : 234
Number of groups : 1
  Group: 226.2.3.2
```

```
AMT message count:
AMT Request      AMT membership update
2                2
```

show dvmrp interfaces

Syntax `show dvmrp interfaces`
`<logical-system (all | logical-system-name)>`

Release Information



NOTE: Distance Vector Multicast Routing Protocol (DVMRP) was deprecated in Junos OS Release 16.1. Although DVMRP commands continue to be available and configurable in the CLI, they are no longer visible and are scheduled for removal in a subsequent release.

Command introduced before Junos OS Release 7.4.

Description Display information about Distance Vector Multicast Routing Protocol (DVMRP)–enabled interfaces.

Options **none**—(Same as **logical-system all**) Display information about DVMRP-enabled interfaces.
logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show dvmrp interfaces on page 1853](#)

Output Fields [Table 101 on page 1851](#) describes the output fields for the **show dvmrp interfaces** command. Output fields are listed in the approximate order in which they appear.

Table 101: show dvmrp interfaces Output Fields

Field Name	Field Description
Interface	Name of the interface.
State	State of the interface: up or down .
Leaf	Whether the interface is a leaf (that is, whether it has no neighbors) or whether it has neighbors.
Metric	Interface metric: a value from 1 through 31.
Announce	Number of routes the interface is announcing.

Table 101: show dvmrp interfaces Output Fields (continued)

Field Name	Field Description
Mode	DVMRP mode: <ul style="list-style-type: none">• Forwarding—DVMRP does both the routing and the multicast data forwarding.• Unicast-routing—DVMRP does only the routing. Forwarding of the multicast data packets can be done by enabling PIM on the interface.

Sample Output

show dvmrp interfaces

```
user@host> show dvmrp interfaces
```

Interface	State	Leaf	Metric	Announce	Mode
fxp0.0	Up	N	1	4	Forwarding
fxp1.0	Up	N	1	4	Forwarding
fxp2.0	Up	N	1	3	Forwarding
lo0.0	Up	Y	1	0	Unicast-routing

show dvmrp neighbors

Syntax `show dvmrp neighbors`
`<logical-system (all | logical-system-name)>`

Release Information



NOTE: Distance Vector Multicast Routing Protocol (DVMRP) was deprecated in Junos OS Release 16.1. Although DVMRP commands continue to be available and configurable in the CLI, they are no longer visible and are scheduled for removal in a subsequent release.

Command introduced before Junos OS Release 7.4.

Description Display information about Distance Vector Multicast Routing Protocol (DVMRP) neighbors.

Options **none**—(Same as **logical-system all**) Display information about DVMRP neighbors.
logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show dvmrp neighbors on page 1855](#)

Output Fields [Table 102 on page 1854](#) describes the output fields for the **show dvmrp neighbors** command. Output fields are listed in the approximate order in which they appear.

Table 102: show dvmrp neighbors Output Fields

Field Name	Field Description
Neighbor	Address of the neighboring DVMRP router.
Interface	Interface through which the neighbor is reachable.
Version	Version of DVMRP that the neighbor is running, in the format <i>major</i> minor .

Table 102: *show dvmrp neighbors* Output Fields (continued)

Field Name	Field Description
Flags	Information about the neighbor: <ul style="list-style-type: none"> • 1—One way. The local router has seen the neighbor, but the neighbor has not seen the local router. • G—Neighbor supports generation ID. • L—Neighbor is a leaf router. • M—Neighbor supports mtrace. • N—Neighbor supports netmask in prune messages and graft messages. • P—Neighbor supports pruning. • S—Neighbor supports SNMP.
Routes	Number of routes learned from the neighbor.
Timeout	How long until the DVMRP neighbor information times out, in seconds.
Transitions	Number of generation ID changes that have occurred since the local router learned about the neighbor.

Sample Output

show dvmrp neighbors

```
user@host> show dvmrp neighbors
```

Neighbor	Interface	Version	Flags	Routes	Timeout	Transitions
192.168.1.1	ipip.0	3.255	PGM	3	28	1

show dvmrp prefix

Syntax `show dvmrp prefix`
`<brief | detail>`
`<logical-system (all | logical-system-name)>`
`<prefix>`

Release Information



NOTE: Distance Vector Multicast Routing Protocol (DVMRP) was deprecated in Junos OS Release 16.1. Although DVMRP commands continue to be available and configurable in the CLI, they are no longer visible and are scheduled for removal in a subsequent release.

Command introduced before Junos OS Release 7.4.

Description Display information about Distance Vector Multicast Routing Protocol (DVMRP) prefixes.

Options **none**—Display standard information about all DVMRP prefixes.

brief | detail—(Optional) Display the specified level of output.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

prefix—(Optional) Display information about specific prefixes.

Required Privilege Level view

List of Sample Output [show dvmrp prefix on page 1858](#)
[show dvmrp prefix brief on page 1858](#)
[show dvmrp prefix detail on page 1858](#)

Output Fields [Table 103 on page 1856](#) describes the output fields for the **show dvmrp prefix** command. Output fields are listed in the approximate order in which they appear.

Table 103: show dvmrp prefix Output Fields

Field Name	Field Description	Level of Output
Prefix	DVMRP route.	All levels
Next hop	Next hop from which the route was learned.	All levels
Age	Last time that the route was refreshed.	All levels
<i>multicast-group</i>	Multicast group address.	detail

Table 103: show dvmrp prefix Output Fields (continued)

Field Name	Field Description	Level of Output
Prunes sent	Number of prune messages sent to the multicast group.	detail
Grafts sent	Number of grafts sent to the multicast group.	detail
Cache lifetime	Lifetime of the group in the multicast cache, in seconds.	detail
Prune lifetime	Lifetime remaining and total lifetime of prune messages, in seconds.	detail

Sample Output

show dvmrp prefix

```
user@host> show dvmrp prefix
```

Prefix	Next hop	Age
10.38.0.0	/30 10.38.0.1	00:06:17
10.38.0.4	/30 10.38.0.5	00:06:13
10.38.0.8	/30 10.38.0.2	00:00:04
10.38.0.12	/30 10.38.0.6	00:00:04
10.255.14.114	/32 10.255.14.114	00:06:17
10.255.14.142	/32 10.38.0.2	00:00:04
10.255.14.144	/32 10.38.0.2	00:00:04
10.255.70.15	/32 10.38.0.6	00:00:04
192.168.14.0	/24 192.168.14.114	00:06:17
192.168.195.40	/30 192.168.195.41	00:06:17
192.168.195.92	/30 10.38.0.2	00:00:04

show dvmrp prefix brief

The output for the **show dvmrp prefix brief** command is identical to that for the **show dvmrp prefix** command.

show dvmrp prefix detail

```
user@host> show dvmrp prefix detail
```

Prefix	Next hop	Age
10.38.0.0	/30 10.38.0.1	00:06:28
10.38.0.4	/30 10.38.0.5	00:06:24
10.38.0.8	/30 10.38.0.2	00:00:15
10.38.0.12	/30 10.38.0.6	00:00:15
10.255.14.114	/32 10.255.14.114	00:06:28
10.255.14.142	/32 10.38.0.2	00:00:15
10.255.14.144	/32 10.38.0.2	00:00:15
10.255.70.15	/32 10.38.0.6	00:00:15
192.168.14.0	/24 192.168.14.114	00:06:28
192.168.195.40	/30 192.168.195.41	00:06:28
192.168.195.92	/30 10.38.0.2	00:00:15

show dvmrp prunes

Syntax `show dvmrp prunes`
`<all | rx | tx>`
`<logical-system (all | logical-system-name)>`

Release Information



NOTE: Distance Vector Multicast Routing Protocol (DVMRP) was deprecated in Junos OS Release 16.1. Although DVMRP commands continue to be available and configurable in the CLI, they are no longer visible and are scheduled for removal in a subsequent release.

Command introduced before Junos OS Release 7.4.

Description Display information about active Distance Vector Multicast Routing Protocol (DVMRP) prune messages.

Options **none**—Display received and transmitted DVMRP prune information.

all—(Optional) Display information about all received and transmitted prune messages.

rx—(Optional) Display information about received prune messages.

tx—(Optional) Display information about transmitted prune messages.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show dvmrp prunes on page 1860](#)

Output Fields [Table 104 on page 1859](#) describes the output fields for the **show dvmrp prunes** command. Output fields are listed in the approximate order in which they appear.

Table 104: show dvmrp prunes Output Fields

Field Name	Field Description
Group	Group address.
Source prefix	Prefix for the prune.
Timeout	How long until the prune message expires, in seconds.

Table 104: show dvmrp prunes Output Fields (continued)

Field Name	Field Description
Neighbor	Neighbor to which the prune was sent or from which the prune was received.

Sample Output

show dvmrp prunes

```
user@host> show dvmrp prunes
```

Group	Source prefix	Timeout	Neighbor
224.0.1.1	128.112.0.0 /12	7077	192.168.1.1
224.0.1.32	160.0.0.0 /3	7087	192.168.1.1
224.2.123.4	136.0.0.0 /5	6955	192.168.1.1
224.2.127.1	129.0.0.0 /8	7046	192.168.1.1
224.2.135.86	128.102.128.0 /17	7071	192.168.1.1
224.2.135.86	129.0.0.0 /8	7074	192.168.1.1
224.2.135.86	130.0.0.0 /7	7071	192.168.1.1
...			

show igmp group

List of Syntax	Syntax on page 1861 Syntax (EX Series Switch and the QFX Series) on page 1861
Syntax	<pre>show igmp group <brief detail> <group-name> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>show igmp group <brief detail> <group-name></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display Internet Group Management Protocol (IGMP) group membership information.
Options	<p>none—Display standard information about membership for all IGMP groups.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>group-name—(Optional) Display group membership for the specified IP address only.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • clear igmp membership on page 1807
List of Sample Output	show igmp group (Include Mode) on page 1862 show igmp group (Exclude Mode) on page 1863 show igmp group brief on page 1863 show igmp group detail on page 1863
Output Fields	<p>Table 105 on page 1862 describes the output fields for the show igmp group command. Output fields are listed in the approximate order in which they appear.</p>

Table 105: show igmp group Output Fields

Field Name	Field Description	Level of Output
Interface	Name of the interface that received the IGMP membership report. A name of local indicates that the local routing device joined the group itself.	All levels
Group	Group address.	All levels
Group Mode	Mode the SSM group is operating in: Include or Exclude .	All levels
Source	Source address.	All levels
Source timeout	Time remaining until the group traffic is no longer forwarded. The timer is refreshed when a listener in include mode sends a report. A group in exclude mode or configured as a static group displays a zero timer.	detail
Last reported by	Address of the host that last reported membership in this group.	All levels
Timeout	Time remaining until the group membership is removed.	brief none
Group timeout	Time remaining until a group in exclude mode moves to include mode. The timer is refreshed when a listener in exclude mode sends a report. A group in include mode or configured as a static group displays a zero timer.	detail
Type	Type of group membership: <ul style="list-style-type: none"> • Dynamic—Host reported the membership. • Static—Membership is configured. 	All levels

Sample Output

show igmp group (Include Mode)

```

user@host> show igmp group
Interface: t1-0/1/0.0
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.2
    Last reported by: 203.0.113.52
    Timeout: 24 Type: Dynamic
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.3
    Last reported by: 203.0.113.52
    Timeout: 24 Type: Dynamic
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.4
    Last reported by: 203.0.113.52
    Timeout: 24 Type: Dynamic
  Group: 198.51.100.2
    Group mode: Include
    Source: 203.0.113.4

```

```

        Last reported by: 203.0.113.52
        Timeout:      24 Type: Dynamic
Interface: t1-0/1/1.0
Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
Interface: local
  Group: 198.51.100.12
    Source: 0.0.0.0
    Last reported by: Local
    Timeout:      0 Type: Dynamic
  Group: 198.51.100.22
    Source: 0.0.0.0
    Last reported by: Local
    Timeout:      0 Type: Dynamic

```

show igmp group (Exclude Mode)

```

user@host> show igmp group
Interface: t1-0/1/0.0
Interface: t1-0/1/1.0
Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
Interface: local
  Group: 198.51.100.2
    Source: 0.0.0.0
    Last reported by: Local
    Timeout:      0 Type: Dynamic
  Group: 198.51.100.22
    Source: 0.0.0.0
    Last reported by: Local
    Timeout:      0 Type: Dynamic

```

show igmp group brief

The output for the **show igmp group brief** command is identical to that for the **show igmp group** command.

show igmp group detail

```

user@host> show igmp group detail
Interface: t1-0/1/0.0
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.2
    Source timeout: 12
    Last reported by: 203.0.113.52
    Group timeout:      0 Type: Dynamic
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.3
    Source timeout: 12
    Last reported by: 203.0.113.52
    Group timeout:      0 Type: Dynamic
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.4

```

```
    Source timeout: 12
    Last reported by: 203.0.113.52
    Group timeout:      0 Type: Dynamic
Group: 198.51.100.2
    Group mode: Include
    Source: 203.0.113.4
    Source timeout: 12
    Last reported by: 203.0.113.52
    Group timeout:      0 Type: Dynamic
Interface: t1-0/1/1.0
Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
Interface: local
    Group: 198.51.100.12
        Group mode: Exclude
        Source: 0.0.0.0
        Source timeout: 0
        Last reported by: Local
        Group timeout:      0 Type: Dynamic
    Group: 198.51.100.22
        Group mode: Exclude
        Source: 0.0.0.0
        Source timeout: 0
        Last reported by: Local
        Group timeout:      0 Type: Dynamic
```

show igmp interface

List of Syntax	Syntax on page 1865 Syntax (EX Series Switches and the QFX Series) on page 1865
Syntax	<pre>show igmp interface <brief detail> <interface-name> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switches and the QFX Series)	<pre>show igmp interface <brief detail> <interface-name></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display information about Internet Group Management Protocol (IGMP)-enabled interfaces.
Options	<p>none—Display standard information about all IGMP-enabled interfaces.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>interface-name—(Optional) Display information about the specified IGMP-enabled interface only.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • clear igmp membership on page 1807
List of Sample Output	show igmp interface on page 1867 show igmp interface brief on page 1868 show igmp interface detail on page 1868 show igmp interface <interface-name> on page 1868
Output Fields	<p>Table 106 on page 1866 describes the output fields for the show igmp interface command. Output fields are listed in the approximate order in which they appear.</p>

Table 106: show igmp interface Output Fields

Field Name	Field Description	Level of Output
Interface	Name of the interface.	All levels
Querier	Address of the routing device that has been elected to send membership queries.	All levels
State	State of the interface: Up or Down .	All levels
SSM Map Policy	Name of the source-specific multicast (SSM) map policy that has been applied to the IGMP interface.	All levels
Timeout	How long until the IGMP querier is declared to be unreachable, in seconds.	All levels
Version	IGMP version being used on the interface: 1, 2, or 3.	All levels
Groups	Number of groups on the interface.	All levels
Group limit	Maximum number of groups allowed on the interface. Any joins requested after the limit is reached are rejected.	All levels
Group threshold	Configured threshold at which a warning message is generated. This threshold is based on a percentage of groups received on the interface. If the number of groups received reaches the configured threshold, the device generates a warning message.	All levels
Group log-interval	Time (in seconds) between consecutive log messages.	All levels
Immediate Leave	State of the immediate leave option: <ul style="list-style-type: none"> • On—Indicates that the router removes a host from the multicast group as soon as the router receives a leave group message from a host associated with the interface. • Off—Indicates that after receiving a leave group message, instead of removing a host from the multicast group immediately, the router sends a group query to determine if another receiver responds. 	All levels
Promiscuous Mode	State of the promiscuous mode option: <ul style="list-style-type: none"> • On—Indicates that the router can accept IGMP reports from subnetworks that are not associated with its interfaces. • Off—Indicates that the router can accept IGMP reports only from subnetworks that are associated with its interfaces. 	All levels
Distributed	State of IGMP, which, by default, takes place on the Routing Engine for MX Series routers but can be distributed to the Packet Forwarding Engine to provide faster processing of join and leave events. <ul style="list-style-type: none"> • On—distributed IGMP is enabled. 	All levels

Table 106: show igmp interface Output Fields (continued)

Field Name	Field Description	Level of Output
Passive	<p>State of the passive mode option:</p> <ul style="list-style-type: none"> • On—Indicates that the router can run IGMP on the interface but not send or receive control traffic such as IGMP reports, queries, and leaves. • Off—Indicates that the router can run IGMP on the interface and send or receive control traffic such as IGMP reports, queries, and leaves. <p>The passive statement enables you to selectively activate up to two out of a possible three available query or control traffic options. When enabled, the following options appear after the on state declaration:</p> <ul style="list-style-type: none"> • send-general-query—The interface sends general queries. • send-group-query—The interface sends group-specific and group-source-specific queries. • allow-receive—The interface receives control traffic. 	All levels
OIF map	Name of the OIF map (if configured) associated with the interface.	All levels
SSM map	Name of the source-specific multicast (SSM) map (if configured) used on the interface.	All levels
Configured Parameters	<p>Information configured by the user:</p> <ul style="list-style-type: none"> • IGMP Query Interval—Interval (in seconds) at which this router sends membership queries when it is the querier. • IGMP Query Response Interval—Time (in seconds) that the router waits for a report in response to a general query. • IGMP Last Member Query Interval—Time (in seconds) that the router waits for a report in response to a group-specific query. • IGMP Robustness Count—Number of times the router retries a query. 	All levels
Derived Parameters	<p>Derived information:</p> <ul style="list-style-type: none"> • IGMP Membership Timeout—Timeout period (in seconds) for group membership. If no report is received for these groups before the timeout expires, the group membership is removed. • IGMP Other Querier Present Timeout—Time (in seconds) that the router waits for the IGMP querier to send a query. 	All levels

Sample Output

show igmp interface

```

user@host> show igmp interface
Interface: at-0/3/1.0
  Querier: 203.0.3.113.31
  State:      Up Timeout:  None Version:  2 Groups:    4
  SSM Map Policy: ssm-policy-A
Interface: so-1/0/0.0
  Querier: 203.0.113.11
  State:      Up Timeout:  None Version:  2 Groups:    2
  SSM Map Policy: ssm-policy-B

```

```
Interface: so-1/0/1.0
  Querier: 203.0.113.21
  State:      Up Timeout:    None Version:  2 Groups:    4
  SSM Map Policy: ssm-policy-C
Immediate Leave: On
Promiscuous Mode: Off
Passive: Off
Distributed: OnConfigured Parameters:

IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Derived Parameters:
IGMP Membership Timeout: 260.0
IGMP Other Querier Present Timeout: 255.0
```

`show igmp interface brief`

The output for the **show igmp interface brief** command is identical to that for the **show igmp interface** command. For sample output, see [show igmp interface on page 1867](#).

`show igmp interface detail`

The output for the **show igmp interface detail** command is identical to that for the **show igmp interface** command. For sample output, see [show igmp interface on page 1867](#).

`show igmp interface <interface-name>`

```
user@host# show igmp interface ge-3/2/0.0
```

```
Interface: ge-3/2/0.0
  Querier: 203.0.113.111
  State: Up Timeout:    None
  Version: 3
  Groups:    1
  Group limit: 8
  Group threshold: 60
  Group log-interval: 10
  Immediate leave: Off
  Promiscuous mode: Off
  Distributed: On
```


show igmp snooping interface

Syntax	<pre>show igmp snooping interface <i>interface-name</i> <brief detail> <bridge-domain <i>bridge-domain-name</i>> <logical-system <i>logical-system-name</i>> <virtual-switch <i>virtual-switch-name</i>> <vlan-id <i>vlan-identifier</i>></pre>
Release Information	Command introduced in Junos OS Release 8.5.
Description	Display IGMP snooping interface information.
Options	<p>none —Display detailed information.</p> <p>brief detail—(Optional) When applicable, this option lets you choose the how much detail to display.</p> <p>bridge-domain <i>bridge-domain-name</i>—(Optional) Display information about a particular bridge domain.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p>virtual-switch <i>virtual-switch-name</i>—(Optional) Display information about a particular virtual switch.</p> <p>vlan-id <i>vlan-identifier</i>—(Optional) Display information about a particular VLAN.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show igmp snooping membership on page 1875 • show igmp snooping statistics on page 1881
List of Sample Output	<p>show igmp snooping interface on page 1871</p> <p>show igmp snooping interface (logical systems) on page 1871</p> <p>show igmp snooping interface (Group Limit Configured) on page 1873</p> <p>show igmp snooping interface (ELS EX Series switches with MVR configured) on page 1874</p>
Output Fields	<p>Table 107 on page 1870 lists the output fields for the show igmp snooping interface command. Output fields are listed in the approximate order in which they appear.</p>

Table 107: show igmp snooping interface Output Fields

Field Name	Field Description	Level of Output
Routing-instance or Instance	Routing instance for IGMP snooping.	All levels
Bridge Domain or Vlan	Bridge domain or VLAN for which IGMP snooping is enabled.	All levels
Learning Domain	Learning domain for snooping.	All levels
interface	Interfaces that are being snooped in this learning domain.	All levels
Groups	Number of groups on the interface.	All levels
State	State of the interface: Up or Down .	All levels
Up Groups	Number of active multicast groups attached to the logical interface.	All levels
immediate-leave	State of immediate leave: On or Off .	All levels
router-interface	Router interfaces that are part of this learning domain.	All levels
Group limit	Maximum number of (source,group) pairs allowed per interface. When a group limit is not configured, this field is not shown.	All levels
Data-forwarding receiver: yes	VLAN associated with the interface is configured as a data-forwarding multicast receiver VLAN using multicast VLAN registration (MVR) on EX Series switches with Enhanced Layer 2 Software (ELS).	All levels
IGMP Query Interval	Frequency (in seconds) with which this router sends membership queries when it is the querier.	All levels
IGMP Query Response Interval	Time (in seconds) that the router waits for a response to a general query.	All levels
IGMP Last Member Query Interval	Time (in seconds) that the router waits for a report in response to a group-specific query.	All levels
IGMP Robustness Count	Number of times the router retries a query.	All levels
IGMP Membership Timeout	Timeout for group membership. If no report is received for these groups before the timeout expires, the group membership is removed.	All levels
IGMP Other Querier Present Timeout	Time that the router waits for the IGMP querier to send a query.	All levels

Sample Output

show igmp snooping interface

```

user@host> show igmp snooping interface ge-0/1/4
Instance: default-switch

Bridge-Domain: sample

Learning-Domain: default
Interface: ge-0/1/4.0
State: Up Groups: 0
Immediate leave: Off
Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Derived Parameters:
IGMP Membership Timeout: 260.0
IGMP Other Querier Present Timeout: 255.0

```

show igmp snooping interface (logical systems)

```

user@host> show igmp snooping interface logical-system all

logical-system: default
Instance: VPLS-6
Learning-Domain: default
Interface: ge-0/2/2.601
  State:          Up Groups:      10
  Immediate leave: Off
  Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Instance: VS-4
Bridge-Domain: VS-4-BD-1
Learning-Domain: vlan-id 1041
Interface: ae2.3
  State:          Up Groups:      0
  Immediate leave: Off
  Router interface: no
Interface: ge-0/2/2.1041
  State:          Up Groups:      20
  Immediate leave: Off
  Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0

```

```
IGMP Robustness Count: 2

Instance: default-switch
Bridge-Domain: bd-200
Learning-Domain: default
Interface: ge-0/2/2.100
  State:          Up Groups:      20
  Immediate leave: Off
  Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Bridge-Domain: bd0
Learning-Domain: default
Interface: ae0.0
  State:          Up Groups:      0
  Immediate leave: Off
  Router interface: yes
Interface: ae1.0
  State:          Up Groups:      0
  Immediate leave: Off
  Router interface: no
Interface: ge-0/2/2.0
  State:          Up Groups:      32
  Immediate leave: Off
  Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Instance: VPLS-1
Learning-Domain: default
Interface: ge-0/2/2.502
  State:          Up Groups:      11
  Immediate leave: Off
  Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Instance: VS-1
Bridge-Domain: VS-BD-1
Learning-Domain: default
Interface: ae2.0
  State:          Up Groups:      0
  Immediate leave: Off
  Router interface: no
Interface: ge-0/2/2.1010
  State:          Up Groups:      20
  Immediate leave: Off
```

```

Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Bridge-Domain: VS-BD-2
Learning-Domain: default
Interface: ae2.0
  State:          Up Groups:      0
  Immediate leave: Off
  Router interface: no
Interface: ge-0/2/2.1011
  State:          Up Groups:      20
  Immediate leave: Off
  Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Instance: VPLS-p2mp
Learning-Domain: default
Interface: ge-0/2/2.3001
  State:          Up Groups:      0
  Immediate leave: Off
  Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

```

show igmp snooping interface (Group Limit Configured)

```

user@host> show igmp snooping interface instance vpls1

Instance: vpls1

Learning-Domain: default
Interface: ge-1/3/9.0
  State:          Up Groups:      0
  Immediate leave: Off
  Router interface: yes
Interface: ge-1/3/8.0
  State:          Up Groups:      0
  Immediate leave: Off
  Router interface: yes
  Group limit:    1000

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

```

show igmp snooping interface (ELS EX Series switches with MVR configured)

```
user@host> show igmp snooping interface instance inst1
```

```
Instance: inst1
```

```
Vlan: v2
```

```
Learning-Domain: default
```

```
Interface: ge-0/0/0.0
```

```
State:          Up Groups:      0
```

```
Immediate leave: Off
```

```
Router interface: no
```

```
Group limit:     3
```

```
Data-forwarding receiver: yes
```

show igmp snooping membership

Syntax show igmp snooping membership
 <brief | detail>
 <instance *routing-instance-name*>
 <interface *interface-name*>
 <vlan (*vlan-id* | *vlan-name*)>
 <bridge-domain *bridge-domain-name*>
 <group *group-name*>
 <logical-system *logical-system-name*>
 <virtual-switch *virtual-switch-name*>
 <vlan-id *vlan-identifier*>

Release Information Command introduced in Junos OS Release 8.5.
 Command introduced in Junos OS Release 18.1R1 for the SRX1500 devices.

Description Display the multicast group membership information maintained by IGMP snooping.

Options **none**—Display the multicast group membership information about all VLANs on which IGMP snooping is enabled.

brief | detail—(Optional) Display the specified level of output. The default is **brief**.



NOTE: On QFX Series switches, the output is the same for either **brief** or **detail** levels.

instance *routing-instance-name*—(Optional) Display the multicast group membership information about the specified routing instance.

interface *interface-name*—(Optional) Display the multicast group membership information about the specified interface.

vlan (*vlan-id* | *vlan-name*)—(Optional) Display the multicast group membership for the specified VLAN.

bridge-domain *bridge-domain-name*—(Optional) Display information about a particular bridge domain.

group *group-name* —(Optional) Display information about this group address.

logical-system *logical-system-name*—(Optional) Display information about a particular logical system, or type 'all'.

virtual-switch *virtual-switch-name*—(Optional) Display information about a particular virtual switch.

vlan-id *vlan-identifier*—(Optional) Display information about a particular VLAN.

Required Privilege Level view

Related Documentation

- [show igmp snooping interface on page 1869](#)
- [show igmp snooping statistics on page 1881](#)
- [clear igmp snooping membership on page 1810](#)

List of Sample Output

- [show igmp snooping membership on page 1877](#)
- [show igmp snooping membership \(SRX1500\) on page 1878](#)
- [show igmp snooping membership detail \(SRX1500\) on page 1878](#)
- [show igmp snooping membership \(Exclude Mode\) on page 1878](#)
- [show igmp snooping membership interface ge-0/1/2.200 on page 1879](#)
- [show igmp snooping membership vlan-id 1 on page 1879](#)
- [show igmp snooping membership \(ELS EX Series switches with MVR\) on page 1879](#)
- [show igmp snooping membership <detail> \(QFX5100 switches—same output with or without detail option\) on page 1880](#)

Output Fields Table 108 on page 1876 lists the output fields for the **show igmp snooping membership** command. Output fields are listed in the approximate order in which they appear.

Table 108: show igmp snooping membership Output Fields

Field Name	Field Description	Level of Output
VLAN	Name of the VLAN.	All
Instance	Routing instance for IGMP snooping.	All levels
Learning Domain	Learning domain for snooping.	All levels
Interface	Interface on which this router is a proxy.	detail
Data-forwarding receiver: yes	(EX Series switches with Enhanced Layer 2 Software (ELS) only) VLAN associated with the interface is configured as a data-forwarding multicast receiver VLAN using multicast VLAN registration (MVR). NOTE: Interfaces configured on MVR receiver VLANs are listed under the associated MVR <i>source</i> VLAN (MVLAN) for which the interface forwards multicast streams.	All levels
Up Groups or Groups	Number of active multicast groups attached to the logical interface.	All levels

Table 108: show igmp snooping membership Output Fields (continued)

Field Name	Field Description	Level of Output
Group	<p>(Not displayed on QFX Series switches) IP multicast address of the multicast group.</p> <p>The following information is provided for the multicast group:</p> <ul style="list-style-type: none"> • Last reporter—Last host to report membership for the multicast group. • Receiver count—Number of hosts on the interface that are members of the multicast group (field appears only if immediate-leave is configured on the VLAN), or number of interfaces that have membership in a multicast group. • Uptime—Length of time (in hours, minutes, and seconds) a multicast group has been active on the interface. • timeout—Time (in seconds) left until the entry for the multicast group is removed from the multicast group if no membership reports are received on the interface. This counter is reset to its maximum value when a membership report is received. • Flags—The lowest IGMP version in use by a host that is a member of the group on the interface. • Include source—Source addresses from which multicast streams are allowed based on IGMPv3 reports. 	detail
Group Mode	Mode the SSM group is operating in: Include or Exclude .	All levels
Source	Source address used on queries.	All levels
Last reported by	Address of source last replying to the query.	All levels
Group Timeout	Time remaining until a group in exclude mode moves to include mode. The timer is refreshed when a listener in exclude mode sends a report. A group in include mode or configured as a static group displays a zero timer.	All levels
Timeout	Length of time (in seconds) left until the entry is purged.	detail
Type	<p>Way that the group membership information was learned:</p> <ul style="list-style-type: none"> • Dynamic—Group membership was learned by the IGMP protocol. • Static—Group membership was learned by configuration. 	All levels
Include receiver	Source address of receiver included in membership with timeout (in seconds).	detail

Sample Output

show igmp snooping membership

```

user@host> show igmp snooping membership
Instance: vpls2

Learning-Domain: vlan-id 2
Interface: ge-3/0/0.2
Up Groups:      0
Interface: ge-3/1/0.2

```

```
Up Groups:      0
Interface: ge-3/1/5.2
Up Groups:      0

Instance: vpls1

Learning-Domain: vlan-id 1
Interface: ge-3/0/0.1
Up Groups:      0
Interface: ge-3/1/0.1
Up Groups:      0
Interface: ge-3/1/5.1
Up Groups:      1
  Group: 233.252.0.99
    Group mode: Exclude
    Source: 0.0.0.0
    Last reported by: 233.252.0.87
    Group timeout: 173 Type: Dynamic
```

show igmp snooping membership (SRX1500)

```
user@host> show igmp snooping membership
```

```
Instance: default-switch

Vlan: v1

Learning-Domain: default
Interface: ge-0/0/3.0, Groups: 1
Group: 233.252.0.100
Group mode: Exclude
Source: 0.0.0.0
Last reported by: Local
Group timeout: 0 Type: Static
```

show igmp snooping membership detail (SRX1500)

```
user@host> show igmp snooping membership detail
```

```
VLAN: vlan2 Tag: 2 (Index: 3)
Router interfaces:
  ge-1/0/0.0 dynamic Uptime: 00:14:24 timeout: 253
Group: 233.252.0.99
  ge-1/0/17.0 259 Last reporter: 10.0.0.90 Receiver count: 1
  Uptime: 00:00:19 timeout: 259 Flags: <V3-hosts>
  Include source: 10.2.11.5, 10.2.11.12
```

show igmp snooping membership (Exclude Mode)

```
user@host> show igmp snooping membership
```

```
Instance: vpls2

Learning-Domain: vlan-id 2
Interface: ge-3/0/0.2
Up Groups:      0
Interface: ge-3/1/0.2
```

```

Up Groups:      0
Interface: ge-3/1/5.2
Up Groups:      0

Instance: vpls1

Learning-Domain: vlan-id 1
Interface: ge-3/0/0.1
Up Groups:      0
Interface: ge-3/1/0.1
Up Groups:      0
Interface: ge-3/1/5.1
Up Groups:      1
  Group: 233.252.0.99
    Group mode: Exclude
    Source: 0.0.0.0
    Last reported by: 233.252.0.87
    Group timeout: 173 Type: Dynamic

```

show igmp snooping membership interface ge-0/1/2.200

```
user@host> show igmp snooping membership interface ge-0/1/2.200
```

```

Instance: bridge-domain bar

Learning-Domain: default
Interface: ge-0/1/2.200
  Group: 233.252.0.1
    Source: 0.0.0.0
    Timeout: 391 Type: Static
  Group: 232.1.1.1
    Source: 192.128.1.1
    Timeout: 0 Type: Static

```

show igmp snooping membership vlan-id 1

```
user@host> show igmp snooping membership vlan-id 1
```

```

Instance: vpls2

Instance: vpls1

Learning-Domain: vlan-id 1
Interface: ge-3/0/0.1
Up Groups:      0
Interface: ge-3/1/0.1
Up Groups:      0
Interface: ge-3/1/5.1
Up Groups:      1
  Group: 233.252.0.1
    Group mode: Exclude
    Source: 0.0.0.0
    Last reported by: 233.252.0.82
    Group timeout: 209 Type: Dynamic

```

show igmp snooping membership (ELS EX Series switches with MVR)

```
user@host> show igmp snooping membership
```

```

Instance: default-switch

Vlan: v2

Learning-Domain: default
Interface: ge-0/0/0.0, Groups: 0
Data-forwarding receiver: yes

Learning-Domain: default
Interface: ge-0/0/12.0, Groups: 1
  Group: 233.252.0.1
    Group mode: Exclude
    Source: 0.0.0.0
    Last reported by: Local
    Group timeout:      0 Type: Static
    
```

show igmp snooping membership <detail> (QFX5100 switches—same output with or without detail option)

```

user@host> show igmp snooping membership detail

Instance: default-switch

Vlan: v100

Learning-Domain: default
Interface: xe-0/0/51:0.0, Groups: 1
  Group: 233.252.0.1
    Group mode: Exclude
    Source: 0.0.0.0
    Last reported by: 233.252.0.82
    Group timeout:    251 Type: Dynamic
    
```

show igmp snooping statistics

Syntax	<pre>show igmp snooping statistics <brief detail> <bridge-domain <i>bridge-domain-name</i>> <logical-system <i>logical-system-name</i>> <virtual-switch <i>virtual-switch-name</i>> <vlan-id <i>vlan-identifier</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 8.5.</p> <p>Command introduced in Junos OS Release 18.1R1 for the SR1500 devices.</p>
Description	Display IGMP snooping statistics.
Options	<p>none—(Optional) Display detailed information.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>bridge-domain <i>bridge-domain-name</i>—(Optional) Display information about a particular bridge domain.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p>virtual-switch <i>virtual-switch-name</i>—(Optional) Display information about a particular virtual switch.</p> <p>vlan-id <i>vlan-identifier</i>—(Optional) Display information about a particular VLAN.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show igmp snooping interface on page 1869 • show igmp snooping membership on page 1875 • clear igmp snooping statistics on page 1812
List of Sample Output	<p>show igmp snooping statistics on page 1883</p> <p>show igmp snooping statistics (SRX1500) on page 1883</p> <p>show igmp snooping statistics logical-systems all on page 1884</p> <p>show igmp snooping statistics interface (Bridge Domains Configured) on page 1885</p>
Output Fields	<p>Table 109 on page 1882 lists the output fields for the show igmp snooping statistics command. Output fields are listed in the approximate order in which they appear.</p>

Table 109: show igmp snooping statistics Output Fields

Field Name	Field Description	Level of Output
Routing-instance	Routing instance for IGMP snooping.	All levels
IGMP packet statistics	Heading for IGMP snooping statistics for all interfaces or for the specified interface.	All levels
learning-domain	Appears at end of “IGMP packets statistics” line.	All levels
IGMP Message type	Summary of IGMP statistics: <ul style="list-style-type: none"> • Membership Query—Number of membership queries sent and received. • V1 Membership Report—Number of version 1 membership reports sent and received. • DVMRP—Number of DVMRP messages sent or received. • PIM V1—Number of PIM version 1 messages sent or received. • Cisco Trace—Number of Cisco trace messages sent or received. • V2 Membership Report—Number of version 2 membership reports sent or received. • Group Leave—Number of group leave messages sent or received. • Domain Wide Report—Number of domain-wide reports sent or received. • V3 Membership Report—Number of version 3 membership reports sent or received. • Other Unknown types—Number of unknown message types received. • IGMP v3 unsupported type—Number of messages received with unknown and unsupported IGMP version 3 message types. • IGMP v3 source required for SSM—Number of IGMP version 3 messages received that contained no source. • IGMP v3 mode not applicable for SSM—Number of IGMP version 3 messages received that did not contain a mode applicable for source-specific multicast (SSM). 	All levels
Received	Number of messages received.	All levels
Sent	Number of messages sent.	All levels
Rx errors	Number of received packets that contained errors.	All levels
IGMP Global Statistics	Summary of IGMP snooping statistics for all interfaces. <ul style="list-style-type: none"> • Bad Length—Number of messages received with length errors so severe that further classification could not occur. • Bad Checksum—Number of messages received with a bad IP checksum. No further classification was performed. • Rx non-local—Number of messages received from senders that are not local. 	All levels

Sample Output

show igmp snooping statistics

```
user@host> show igmp snooping statistics
```

```
Routing-instance foo
```

```
IGMP packet statistics for all interfaces in learning-domain vlan-100
```

IGMP Message type	Received	Sent	Rx errors
Membership Query	89	51	0
V1 Membership Report	0	0	0
DVMRP	0	0	0
PIM V1	0	0	0
Cisco Trace	0	0	0
V2 Membership Report	139	0	0
Group Leave	0	0	0
Domain Wide Report	0	0	0
V3 Membership Report	136	0	0
Other Unknown types			0
IGMP v3 unsupported type			0
IGMP v3 source required for SSM			23
IGMP v3 mode not applicable for SSM			0

```
IGMP Global Statistics
```

Bad Length	0
Bad Checksum	0
Rx non-local	0

```
Routing-instance bar
```

```
IGMP packet statistics for all interfaces in learning-domain vlan-100
```

IGMP Message type	Received	Sent	Rx errors
Membership Query	89	51	0
V1 Membership Report	0	0	0
DVMRP	0	0	0
PIM V1	0	0	0
Cisco Trace	0	0	0
V2 Membership Report	139	0	0
Group Leave	0	0	0
Domain Wide Report	0	0	0
V3 Membership Report	136	0	0
Other Unknown types			0
IGMP v3 unsupported type			0
IGMP v3 source required for SSM			23
IGMP v3 mode not applicable for SSM			0

```
IGMP Global Statistics
```

Bad Length	0
Bad Checksum	0
Rx non-local	0

show igmp snooping statistics (SRX1500)

```
user@host> show igmp snooping statistics
```

```
Vlan: v1
```

IGMP Message type	Received	Sent	Rx errors
-------------------	----------	------	-----------

Membership Query	0	0	0
V1 Membership Report	0	0	0
DVMRP	0	0	0
PIM V1	0	0	0
Cisco Trace	0	0	0
V2 Membership Report	0	0	0
Group Leave	0	0	0
Mtrace Response	0	0	0
Mtrace Request	0	0	0
Domain Wide Report	0	0	0
V3 Membership Report	0	0	0
Other Unknown types			0

show igmp snooping statistics logical-systems all

```
user@host> show igmp snooping statistics logical-systems all
```

```
logical-system: default
Bridge: VPLS-6
IGMP Message type      Received      Sent  Rx errors
Membership Query        0             4      0
V1 Membership Report    0             0      0
DVMRP                   0             0      0
PIM V1                  0             0      0
Cisco Trace             0             0      0
V2 Membership Report    0             0      0
Group Leave             0             0      0
Mtrace Response         0             0      0
Mtrace Request          0             0      0
Domain Wide Report      0             0      0
V3 Membership Report    0             0      0
Other Unknown types     0             0      0

Learning-Domain: vlan-id 1041 bridge-domain VS-4-BD-1
IGMP Message type      Received      Sent  Rx errors
Membership Query        0             4      0
V1 Membership Report    0             0      0
DVMRP                   0             0      0
PIM V1                  0             0      0
Cisco Trace             0             0      0
V2 Membership Report    0             0      0
Group Leave             0             0      0
Mtrace Response         0             0      0
Mtrace Request          0             0      0
Domain Wide Report      0             0      0
V3 Membership Report    0             0      0
Other Unknown types     0             0      0

Bridge: VPLS-p2mp
IGMP Message type      Received      Sent  Rx errors
Membership Query        0             2      0
V1 Membership Report    0             0      0
DVMRP                   0             0      0
PIM V1                  0             0      0
Cisco Trace             0             0      0
V2 Membership Report    0             0      0
Group Leave             0             0      0
Mtrace Response         0             0      0
Mtrace Request          0             0      0
```



```

Domain Wide Report          0          0          0
V3 Membership Report        0          0          0
Other Unknown types                0

Bridge: VS-BD-1
IGMP Message type      Received      Sent  Rx errors
Membership Query        0          6          0
V1 Membership Report    0          0          0
DVMRP                   0          0          0
PIM V1                  0          0          0
Cisco Trace             0          0          0
V2 Membership Report    0          0          0
Group Leave             0          0          0
Mtrace Response         0          0          0
Mtrace Request          0          0          0
Domain Wide Report      0          0          0
V3 Membership Report    0          0          0
Other Unknown types                0

```

show igmp snooping statistics interface (Bridge Domains Configured)

```
user@host> show igmp snooping statistics interface
```

```

Bridge: bridge-domain1
IGMP interface packet statistics for ge-2/0/8.0
IGMP Message type      Received      Sent  Rx errors
Membership Query        0          2          0
V1 Membership Report    0          0          0
DVMRP                   0          0          0
PIM V1                  0          0          0
Cisco Trace             0          0          0
V2 Membership Report    0          0          0
Group Leave             0          0          0
Mtrace Response         0          0          0
Mtrace Request          0          0          0
Domain Wide Report      0          0          0
V3 Membership Report    0          0          0
Other Unknown types                0

```

```

Bridge: bridge-domain2
IGMP interface packet statistics for ge-2/0/8.0
IGMP Message type      Received      Sent  Rx errors
Membership Query        0          2          0
V1 Membership Report    0          0          0
DVMRP                   0          0          0
PIM V1                  0          0          0
Cisco Trace             0          0          0
V2 Membership Report    0          0          0
Group Leave             0          0          0
Mtrace Response         0          0          0
Mtrace Request          0          0          0
Domain Wide Report      0          0          0
V3 Membership Report    0          0          0
Other Unknown types                0

```

show igmp statistics

List of Syntax [Syntax on page 1886](#)
 [Syntax \(EX Series Switch and the QFX Series\) on page 1886](#)

Syntax show igmp statistics
 <brief | detail>
 <interface *interface-name*>
 <logical-system (all | *logical-system-name*)>

Syntax (EX Series Switch and the QFX Series)	show igmp statistics <brief detail> <interface <i>interface-name</i> >
--	--

Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
----------------------------	---

Description Display Internet Group Management Protocol (IGMP) statistics.

Options **none**—Display IGMP statistics for all interfaces.

brief | detail—(Optional) Display the specified level of output.

interface *interface-name*—(Optional) Display IGMP statistics about the specified interface only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level

Related • [clear igmp statistics on page 1813](#)

Documentation

List of Sample Output [show igmp statistics on page 1888](#)
[show igmp statistics interface on page 1888](#)

Output Fields [Table 110 on page 1887](#) describes the output fields for the **show igmp statistics** command. Output fields are listed in the approximate order in which they appear.

Table 110: show igmp statistics Output Fields

Field Name	Field Description
IGMP packet statistics	Heading for IGMP packet statistics for all interfaces or for the specified interface name.
IGMP Message type	<p>Summary of IGMP statistics:</p> <ul style="list-style-type: none"> • Membership Query—Number of membership queries sent and received. • V1 Membership Report—Number of version 1 membership reports sent and received. • DVMRP—Number of DVMRP messages sent or received. • PIM V1—Number of PIM version 1 messages sent or received. • Cisco Trace—Number of Cisco trace messages sent or received. • V2 Membership Report—Number of version 2 membership reports sent or received. • Group Leave—Number of group leave messages sent or received. • Mtrace Response—Number of Mtrace response messages sent or received. • Mtrace Request—Number of Mtrace request messages sent or received. • Domain Wide Report—Number of domain-wide reports sent or received. • V3 Membership Report—Number of version 3 membership reports sent or received. • Other Unknown types—Number of unknown message types received. • IGMP v3 unsupported type—Number of messages received with unknown and unsupported IGMP version 3 message types. • IGMP v3 source required for SSM—Number of IGMP version 3 messages received that contained no source. • IGMP v3 mode not applicable for SSM—Number of IGMP version 3 messages received that did not contain a mode applicable for source-specific multicast (SSM). Beginning with certain releases, this type includes records received for groups in the SSM range of addresses and in which the mode is <code>MODE_IS_EXCLUDE</code> or <code>CHANGE_TO_EXCLUDE_MODE</code>. This includes records with a non-empty source list.
Received	Number of messages received.
Sent	Number of messages sent.
Rx errors	Number of received packets that contained errors.
Max Rx rate (pps)	Maximum number of IGMP packets received during 1 second interval.
IGMP Global Statistics	<p>Summary of IGMP statistics for all interfaces.</p> <ul style="list-style-type: none"> • Bad Length—Number of messages received with length errors so severe that further classification could not occur. • Bad Checksum—Number of messages received with a bad IP checksum. No further classification was performed. • Bad Receive If—Number of messages received on an interface not enabled for IGMP. • Rx non-local—Number of messages received from senders that are not local. • Timed out—Number of groups that timed out as a result of not receiving an explicit leave message. • Rejected Report—Number of reports dropped because of the IGMP group policy. • Total Interfaces—Number of interfaces configured to support IGMP.

Sample Output

show igmp statistics

```
user@host> show igmp statistics

IGMP packet statistics for all interfaces
IGMP Message type      Received      Sent  Rx errors
Membership Query       8883         459    0
V1 Membership Report   0            0      0
DVMRP                  0            0      0
PIM V1                 0            0      0
Cisco Trace            0            0      0
V2 Membership Report   0            0      0
Group Leave            0            0      0
Mtrace Response        0            0      0
Mtrace Request         0            0      0
Domain Wide Report     0            0      0
V3 Membership Report   0            0      0
Other Unknown types    0            0      0
IGMP v3 unsupported type      0      0      0
IGMP v3 source required for SSM      0      0      0
IGMP v3 mode not applicable for SSM    0      0      0

IGMP Global Statistics
Bad Length             0
Bad Checksum           0
Bad Receive If         0
Rx non-local           1227
Timed out              0
Rejected Report        0
Total Interfaces       2
Max Rx rate (pps)      1536
```

show igmp statistics interface

```
user@host> show igmp statistics interface fe-1/0/1.0

IGMP interface packet statistics for fe-1/0/1.0
IGMP Message type      Received      Sent  Rx errors
Membership Query        0            230    0
V1 Membership Report    0            0      0
```

show mld group

Syntax `show mld group`
`<brief | detail>`
`<group-name>`
`<logical-system (all | logical-system-name)>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display information about Multicast Listener Discovery (MLD) group membership.

Options **none**—Display standard information about all MLD groups.

brief | detail—(Optional) Display the specified level of output.

group-name—(Optional) Display MLD information about the specified group.

logical-system (all | logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation

- [clear mld membership on page 1815](#)

List of Sample Output [show mld group \(Include Mode\) on page 1890](#)
[show mld group \(Exclude Mode\) on page 1891](#)
[show mld group brief on page 1891](#)
[show mld group detail \(Include Mode\) on page 1891](#)
[show mld group detail \(Exclude Mode\) on page 1892](#)

Output Fields [Table 111 on page 1889](#) describes the output fields for the **show mld group** command. Output fields are listed in the approximate order in which they appear.

Table 111: show mld group Output Fields

Field Name	Field Description	Level of Output
Interface	Name of the interface that received the MLD membership report; local means that the local router joined the group itself.	All levels
Group	Group address.	All levels
Source	Source address.	All levels
Group Mode	Mode the SSM group is operating in: Include or Exclude .	All levels

Table 111: show mld group Output Fields (continued)

Field Name	Field Description	Level of Output
Last reported by	Address of the host that last reported membership in this group.	All levels
Source timeout	Time remaining until the group traffic is no longer forwarded. The timer is refreshed when a listener in include mode sends a report. A group in exclude mode or configured as a static group displays a zero timer.	detail
Timeout	Time remaining until the group membership is removed.	brief none
Group timeout	Time remaining until a group in exclude mode moves to include mode. The timer is refreshed when a listener in exclude mode sends a report. A group in include mode or configured as a static group displays a zero timer.	detail
Type	Type of group membership: <ul style="list-style-type: none"> • Dynamic—Host reported the membership. • Static—Membership is configured. 	All levels

Sample Output

show mld group (Include Mode)

```

user@host> show mld group
Interface: fe-0/1/2.0
  Group: ff02::1:ff05:1a67
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      245 Type: Dynamic
  Group: ff02::1:ffa8:c35e
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      241 Type: Dynamic
  Group: ff02::2:43e:d7f6
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      244 Type: Dynamic
  Group: ff05::2
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      244 Type: Dynamic
Interface: local
  Group: ff02::2
    Source: ::
    Last reported by: Local
    Timeout:      0 Type: Dynamic
  Group: ff02::16
    Source: ::

```

```
Last reported by: Local
Timeout:          0 Type: Dynamic
```

show mld group (Exclude Mode)

```
user@host> show mld group
Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
  Group: ff02::6
    Source: ::
    Last reported by: fe80::21f:12ff:feb6:4b3a
    Timeout:      245 Type: Dynamic
  Group: ff02::16
    Source: ::
    Last reported by: fe80::21f:12ff:feb6:4b3a
    Timeout:      28 Type: Dynamic
Interface: local
  Group: ff02::2
    Source: ::
    Last reported by: Local
    Timeout:      0 Type: Dynamic
  Group: ff02::16
    Source: ::
    Last reported by: Local
    Timeout:      0 Type: Dynamic
```

show mld group brief

The output for the **show mld group brief** command is identical to that for the **show mld group** command. For sample output, see [show mld group \(Include Mode\) on page 1890](#) [show mld group \(Exclude Mode\) on page 1891](#).

show mld group detail (Include Mode)

```
user@host> show mld group detail
Interface: fe-0/1/2.0
  Group: ff02::1:ff05:1a67
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      224 Type: Dynamic
  Group: ff02::1:ffa8:c35e
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      220 Type: Dynamic
  Group: ff02::2:43e:d7f6
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      223 Type: Dynamic
  Group: ff05::2
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      223 Type: Dynamic
```

```
Interface: so-1/0/1.0
  Group: ff02::2
    Group mode: Include
    Source: ::
    Last reported by: fe80::280:42ff:fe15:f445
    Timeout: 258 Type: Dynamic
Interface: local
  Group: ff02::2
    Group mode: Include
    Source: ::
    Last reported by: Local
    Timeout: 0 Type: Dynamic
  Group: ff02::16
    Source: ::
    Last reported by: Local
    Timeout: 0 Type: Dynamic
```

show mld group detail (Exclude Mode)

```
user@host> show mld group detail

Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
  Group: ff02::6
    Group mode: Exclude
    Source: ::
    Source timeout: 0
    Last reported by: fe80::21f:12ff:feb6:4b3a
    Group timeout: 226 Type: Dynamic
  Group: ff02::16
    Group mode: Exclude
    Source: ::
    Source timeout: 0
    Last reported by: fe80::21f:12ff:feb6:4b3a
    Group timeout: 246 Type: Dynamic
Interface: local
  Group: ff02::2
    Group mode: Exclude
    Source: ::
    Source timeout: 0
    Last reported by: Local
    Group timeout: 0 Type: Dynamic
  Group: ff02::16
    Group mode: Exclude
    Source: ::
    Source timeout: 0
    Last reported by: Local
    Group timeout: 0 Type: Dynamic
```


show mld interface

Syntax `show mld interface`
`<brief | detail>`
`<interface-name>`
`<logical-system (all | logical-system-name)>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display information about multipoint Listener Discovery (MLD)-enabled interfaces.

Options **none**—Display standard information about all MLD-enabled interfaces.

brief | detail—(Optional) Display the specified level of output.

interface-name—(Optional) Display information about the specified interface.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation

- [clear mld membership on page 1815](#)

List of Sample Output

- [show mld interface on page 1895](#)
- [show mld interface brief on page 1896](#)
- [show mld interface detail on page 1896](#)
- [show mld interface <interface-name> on page 1896](#)

Output Fields [Table 112 on page 1893](#) describes the output fields for the **show mld interface** command. Output fields are listed in the approximate order in which they appear.

Table 112: show mld interface Output Fields

Field Name	Field Description	Level of Output
Interface	Name of the interface.	All levels
Querier	Address of the router that has been elected to send membership queries.	All levels
State	State of the interface: Up or Down .	All levels
SSM Map Policy	Name of the source-specific multicast (SSM) map policy that has been applied to the interface.	All levels
SSM Map Policy	Name of the source-specific multicast (SSM) map policy at the MLD interface.	All levels

Table 112: show mld interface Output Fields (continued)

Field Name	Field Description	Level of Output
Timeout	How long until the MLD querier is declared to be unreachable, in seconds.	All levels
Version	MLD version being used on the interface: 1 or 2.	All levels
Groups	Number of groups on the interface.	All levels
Passive	<p>State of the passive mode option:</p> <ul style="list-style-type: none"> • On—Indicates that the router can run IGMP or MLD on the interface but not send or receive control traffic such as IGMP or MLD reports, queries, and leaves. • Off—Indicates that the router can run IGMP or MLD on the interface and send or receive control traffic such as IGMP or MLD reports, queries, and leaves. <p>The passive statement enables you to selectively activate up to two out of a possible three available query or control traffic options. When enabled, the following options appear after the on state declaration:</p> <ul style="list-style-type: none"> • send-general-query—The interface sends general queries. • send-group-query—The interface sends group-specific and group-source-specific queries. • allow-receive—The interface receives control traffic 	All levels
OIF map	Name of the OIF map associated to the interface.	All levels
SSM map	Name of the source-specific multicast (SSM) map used on the interface, if configured.	All levels
Group limit	Maximum number of groups allowed on the interface. Any memberships requested after the limit is reached are rejected.	All levels
Group threshold	<p>Configured threshold at which a warning message is generated.</p> <p>This threshold is based on a percentage of groups received on the interface. If the number of groups received reaches the configured threshold, the device generates a warning message.</p>	All levels
Group log-interval	Time (in seconds) between consecutive log messages.	All levels
Immediate Leave	<p>State of the immediate leave option:</p> <ul style="list-style-type: none"> • On—Indicates that the router removes a host from the multicast group as soon as the router receives a multicast listener done message from a host associated with the interface. • Off—Indicates that after receiving a multicast listener done message, instead of removing a host from the multicast group immediately, the router sends a group query to determine if another receiver responds. 	All levels

Table 112: show mld interface Output Fields (continued)

Field Name	Field Description	Level of Output
Distributed	State of MLD, which, by default, takes place on the Routing Engine for MX Series routers but can be distributed to the Packet Forwarding Engine to provide faster processing of join and leave events. <ul style="list-style-type: none"> • On—distributed MLD is enabled. 	All levels
Configured Parameters	Information configured by the user. <ul style="list-style-type: none"> • MLD Query Interval (.1 secs)—Interval at which this router sends membership queries when it is the querier. • MLD Query Response Interval (.1 secs)—Time that the router waits for a report in response to a general query. • MLD Last Member Query Interval (.1 secs)—Time that the router waits for a report in response to a group-specific query. • MLD Robustness Count—Number of times the router retries a query. 	All levels
Derived Parameters	Derived information. <ul style="list-style-type: none"> • MLD Membership Timeout (.1 secs)—Timeout period for group membership. If no report is received for these groups before the timeout expires, the group membership will be removed. • MLD Other Querier Present Timeout (.1 secs)—Time that the router waits for the IGMP querier to send a query. 	All levels

Sample Output

show mld interface

```

user@host> show mld interface

Interface: fe-0/0/0
  Querier: None
  State: Up      Timeout:    0   Version:  1   Groups:    0
  SSM Map Policy: ssm-policy-A
Interface: at-0/3/1.0
  Querier: 8038::c0a8:c345
  State: Up      Timeout:   None   Version:  1   Groups:    0
  SSM Map Policy: ssm-policy-B
Interface: fe-1/0/1.0
  Querier: ::192.168.195.73
  State: Up      Timeout:   None   Version:  1   Groups:    3
  SSM Map Policy: ssm-policy-C
  SSM map: ipv6map1
Immediate Leave: On

Promiscuous Mode: Off
Passive: Off
Distributed: OnConfigured Parameters:

Configured Parameters:
MLD Query Interval (.1 secs): 1250
MLD Query Response Interval (.1 secs): 100
MLD Last Member Query Interval (.1 secs): 10
MLD Robustness Count: 2

```

```
Derived Parameters:
MLD Membership Timeout (.1secs): 2600
MLD Other Querier Present Timeout (.1 secs): 2550
```

`show mld interface brief`

The output for the **show mld interface brief** command is identical to that for the **show mld interface** command. For sample output, see [show mld interface on page 1895](#).

`show mld interface detail`

The output for the **show mld interface detail** command is identical to that for the **show mld interface** command. For sample output, see [show mld interface on page 1895](#).

`show mld interface <interface-name>`

```
user@host# show mld interface ge-3/2/0.0
Interface: ge-3/2/0.0
Querier: 203.0.113.111
State: Up Timeout:    None Version: 3 Groups:    1
Group limit: 8
Group threshold: 60
Group log-interval: 10
Immediate leave: Off
Promiscuous mode: Off  Distributed: On
```

show mld statistics

Syntax `show mld statistics`
`<interface interface-name>`
`<logical-system (all | logical-system-name)>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display information about Multicast Listener Discovery (MLD) statistics.

Options **none**—Display MLD statistics for all interfaces.

interface *interface-name*—(Optional) Display statistics about the specified interface.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation

- [clear mld statistics on page 1816](#)

List of Sample Output [show mld statistics on page 1898](#)
[show mld statistics interface on page 1899](#)

Output Fields [Table 113 on page 1897](#) describes the output fields for the **show mld statistics** command. Output fields are listed in the approximate order in which they appear.

Table 113: show mld statistics Output Fields

Field Name	Field Description
Received	Number of received packets.
Sent	Number of transmitted packets.
Rx errors	Number of received packets that contained errors.

Table 113: show mld statistics Output Fields (continued)

Field Name	Field Description
MLD Message type	Summary of MLD statistics. <ul style="list-style-type: none"> • Listener Query (v1/v2)—Number of membership queries sent and received. • Listener Report (v1)—Number of version 1 membership reports sent and received. • Listener Done (v1/v2)—Number of Listener Done messages sent and received. • Listener Report (v2)—Number of version 2 membership reports sent and received. • Other Unknown types—Number of unknown message types received. • MLD v2 source required for SSM—Number of MLD version 2 messages received that contained no source. • MLD v2 mode not applicable for SSM—Number of MLD version 2 messages received that did not contain a mode applicable for source-specific multicast (SSM).
MLD Global Statistics	Summary of MLD statistics for all interfaces. <ul style="list-style-type: none"> • Bad Length—Number of messages received with length errors so severe that further classification could not occur. • Bad Checksum—Number of messages received with an invalid IP checksum. No further classification was performed. • Bad Receive If—Number of messages received on an interface not enabled for MLD. • Rx non-local—Number of messages received from nonlocal senders. • Timed out—Number of groups that timed out as a result of not receiving an explicit leave message. • Rejected Report—Number of reports dropped because of the MLD group policy. • Total Interfaces—Number of interfaces configured to support IGMP.

Sample Output

show mld statistics

```
user@host> show mld statistics
```

```
MLD packet statistics for all interfaces
```

MLD Message type	Received	Sent	Rx errors
Listener Query (v1/v2)	0	2	0
Listener Report (v1)	0	0	0
Listener Done (v1/v2)	0	0	0
Listener Report (v2)	0	0	0
Other Unknown types			0
MLD v2 source required for SSM	2		
MLD v2 mode not applicable for SSM	0		

```
MLD Global Statistics
```

Bad Length	0
Bad Checksum	0
Bad Receive If	0

Rx non-local	0
Timed out	0
Rejected Report	0
Total Interfaces	2

show mld statistics interface

```
user@host> show mld statistics interface fe-1/0/1.0
```

MLD interface packet statistics for fe-1/0/1.0

MLD Message type	Received	Sent	Rx errors
Listener Query (v1/v2)	0	2	0
Listener Report (v1)	0	0	0
Listener Done (v1/v2)	0	0	0
Listener Report (v2)	0	0	0
Other Unknown types			0
MLD v2 source required for SSM	2		
MLD v2 mode not applicable for SSM	0		

MLD Global Statistics

Bad Length	0
Bad Checksum	0
Bad Receive If	0
Rx non-local	0
Timed out	0
Rejected Report	0
Total Interfaces	2

show msdp

Syntax	<pre>show msdp <brief detail> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <peer <i>peer-address</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display Multicast Source Discovery Protocol (MSDP) information.
Options	<p>none—Display standard MSDP information for all routing instances.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>instance <i>instance-name</i>—(Optional) Display information for the specified instance only.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>peer <i>peer-address</i>—(Optional) Display information about the specified peer only.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show msdp source on page 1903 • show msdp source-active on page 1905 • show msdp statistics on page 1908
List of Sample Output	<p>show msdp on page 1901</p> <p>show msdp brief on page 1901</p> <p>show msdp detail on page 1901</p>
Output Fields	<p>Table 114 on page 1900 describes the output fields for the show msdp command. Output fields are listed in the approximate order in which they appear.</p>

Table 114: show msdp Output Fields

Field Name	Field Description	Level of Output
Peer address	IP address of the peer.	All levels
Local address	Local address of the peer.	All levels

Table 114: *show msdp* Output Fields (continued)

Field Name	Field Description	Level of Output
State	Status of the MSDP connection: Listen , Established , or Inactive .	All levels
Last up/down	Time at which the most recent peer-state change occurred.	All levels
Peer-Group	Peer group name.	All levels
SA Count	Number of source-active cache entries advertised by each peer that were accepted, compared to the number that were received, in the format <i>number-accepted/number-received</i> .	All levels
Peer Connect Retries	Number of peer connection retries.	detail
State timer expires	Number of seconds before another message is sent to a peer.	detail
Peer Times out	Number of seconds to wait for a response from the peer before the peer is declared unavailable.	detail
SA accepted	Number of entries in the source-active cache accepted from the peer.	detail
SA received	Number of entries in the source-active cache received by the peer.	detail

Sample Output

show msdp

```
user@host> show msdp
```

Peer address	Local address	State	Last up/down	Peer-Group	SA Count
198.32.8.193	198.32.8.195	Established	5d 19:25:44	North23	120/150
198.32.8.194	198.32.8.195	Established	3d 19:27:27	North23	300/345
198.32.8.196	198.32.8.195	Established	5d 19:39:36	North23	10/13
198.32.8.197	198.32.8.195	Established	5d 19:32:27	North23	5/6
198.32.8.198	198.32.8.195	Established	3d 19:33:04	North23	2305/3000

show msdp brief

The output for the **show msdp brief** command is identical to that for the **show msdp** command. For sample output, see [show msdp on page 1901](#).

show msdp detail

```
user@host> show msdp detail
```

```
Peer: 10.255.70.15
Local address: 10.255.70.19
State: Established
Peer Connect Retries: 0
State timer expires: 22
Peer Times out: 49
```

```
SA accepted: 0  
SA received: 0
```

show msdp source

Syntax	<pre>show msdp source <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <source-address></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display multicast sources learned from Multicast Source Discovery Protocol (MSDP).
Options	<p>none—Display standard MSDP source information for all routing instances.</p> <p>instance <i>instance-name</i>—(Optional) Display information for the specified instance only.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>source-address—(Optional) IP address and optional prefix length. Display information for the specified source address only.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show msdp on page 1900 • show msdp source-active on page 1905 • show msdp statistics on page 1908
List of Sample Output	show msdp source on page 1904

Output Fields Table 115 on page 1904 describes the output fields for the **show msdp source** command. Output fields are listed in the approximate order in which they appear.

Table 115: show msdp source Output Fields

Field Name	Field Description
Source address	IP address of the source.
/Len	Length of the prefix for this IP address.
Type	Discovery method for this multicast source: <ul style="list-style-type: none"> • Configured—Source-active limit explicitly configured for this source. • Dynamic—Source-active limit established when this source was discovered.
Maximum	Source-active limit applied to this source.
Threshold	Source-active threshold applied to this source.
Exceeded	Number of source-active messages received from this source exceeding the established maximum.

Sample Output

show msdp source

```
user@host> show msdp source
```

Source address	/Len	Type	Maximum	Threshold	Exceeded
0.0.0.0	/0	Configured	5	none	0
10.1.0.0	/16	Configured	500	none	0
10.1.1.1	/32	Configured	10000	none	0
10.1.1.2	/32	Dynamic	6936	none	0
10.1.5.5	/32	Dynamic	500	none	123
10.2.1.1	/32	Dynamic	2	none	0

show msdp source-active

Syntax	<pre>show msdp source-active <brief detail> <group <i>group</i>> <instance <i>instance-name</i>> <local> <logical-system (all <i>logical-system-name</i>)> <originator <i>originator</i>> <peer <i>peer-address</i>> <source <i>source-address</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display the Multicast Source Discovery Protocol (MSDP) source-active cache.
Options	<p>none—Display standard MSDP source-active cache information for all routing instances.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>group <i>group</i>—(Optional) Display source-active cache information for the specified group.</p> <p>instance <i>instance-name</i>—(Optional) Display information for the specified instance.</p> <p>local—(Optional) Display all source-active caches originated by this router.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>originator <i>originator</i>—(Optional) Display information about the peer that originated the source-active cache entries.</p> <p>peer <i>peer-address</i>—(Optional) Display the source-active cache of the specified peer.</p> <p>source <i>source-address</i>—(Optional) Display the source-active cache of the specified source.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show msdp on page 1900 • show msdp source on page 1903 • show msdp statistics on page 1908
List of Sample Output	show msdp source-active on page 1906

[show msdp source-active brief on page 1907](#)

[show msdp source-active detail on page 1907](#)

[show msdp source-active source on page 1907](#)

Output Fields Table 116 on page 1906 describes the output fields for the **show msdp source-active** command. Output fields are listed in the approximate order in which they appear.

Table 116: show msdp source-active Output Fields

Field Name	Field Description
Global active source limit exceeded	Number of times all peers have exceeded configured active source limits.
Global active source limit maximum	Configured number of active source messages accepted by the device.
Global active source limit threshold	Configured threshold for applying random early discard (RED) to drop some but not all MSDP active source messages.
Global active source limit log-warning	Threshold at which a warning message is logged (percentage of the number of active source messages accepted by the device).
Global active source limit log interval	Time (in seconds) between consecutive log messages.
Group address	Multicast address of the group.
Source address	IP address of the source.
Peer address	IP address of the peer.
Originator	Router ID configured on the source of the rendezvous point (RP) that originated the message, or the loopback address when the router ID is not configured.
Flags	Flags: Accept , Reject , or Filtered .

Sample Output

show msdp source-active

```
user@host> show msdp source-active
```

Group address	Source address	Peer address	Originator	Flags
230.0.0.0	192.168.195.46	local	10.255.14.30	Accept
230.0.0.1	192.168.195.46	local	10.255.14.30	Accept
230.0.0.2	192.168.195.46	local	10.255.14.30	Accept
230.0.0.3	192.168.195.46	local	10.255.14.30	Accept
230.0.0.4	192.168.195.46	local	10.255.14.30	Accept

show msdp source-active brief

The output for the **show msdp source-active brief** command is identical to that for the **show msdp source-active** command. For sample output, see [show msdp source-active on page 1906](#).

show msdp source-active detail

The output for the **show msdp source-active detail** command is identical to that for the **show msdp source-active** command. For sample output, see [show msdp source-active on page 1906](#).

show msdp source-active source

```
user@host> show msdp source-active source 192.168.215.246
```

```
Global active source limit exceeded: 0
Global active source limit maximum: 25000
Global active source limit threshold: 24000
Global active source limit log-warning: 100
Global active source limit log interval: 0
```

Group address	Source address	Peer address	Originator	Flags
226.2.2.1	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.3	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.4	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.5	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.7	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.10	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.11	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.13	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.14	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.15	192.168.215.246	10.255.182.140	10.255.182.140	Accept

show msdp statistics

Syntax `show msdp statistics`
`<instance instance-name>`
`<logical-system (all | logical-system-name)>`
`<peer peer-address>`

Release Information Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 12.1 for the QFX Series.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display statistics about Multicast Source Discovery Protocol (MSDP) peers.

Options **none**—Display statistics about all MSDP peers for all routing instances.

instance *instance-name*—(Optional) Display statistics about a specific MSDP instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

peer *peer-address*—(Optional) Display statistics about a particular MSDP peer.

Required Privilege Level view

Related Documentation • [clear msdp statistics on page 1818](#)

List of Sample Output [show msdp statistics on page 1910](#)
[show msdp statistics peer on page 1910](#)

Output Fields [Table 117 on page 1908](#) describes the output fields for the **show msdp statistics** command. Output fields are listed in the approximate order in which they appear.

Table 117: show msdp statistics Output Fields

Field Name	Field Description
Global active source limit exceeded	Number of times all peers have exceeded configured active source limits.
Global active source limit maximum	Configured number of active source messages accepted by the device.
Global active source limit threshold	Configured threshold for applying random early discard (RED) to drop some but not all MSDP active source messages.
Global active source limit log-warning	Threshold at which a warning message is logged (percentage of the number of active source messages accepted by the device).

Table 117: show msdp statistics Output Fields (continued)

Field Name	Field Description
Global active source limit log interval	Time (in seconds) between consecutive log messages.
Peer	Address of peer.
Last State Change	How long ago the peer state changed.
Last message received from the peer	How long ago the last message was received from the peer.
RPF Failures	Number of reverse path forwarding (RPF) failures.
Remote Closes	Number of times the remote peer closed.
Peer Timeouts	Number of peer timeouts.
SA messages sent	Number of source-active messages sent.
SA messages received	Number of source-active messages received.
SA request messages sent	Number of source-active request messages sent.
SA request messages received	Number of source-active request messages received.
SA response messages sent	Number of source-active response messages sent.
SA response messages received	Number of source-active response messages received.
SA messages with zero Entry Count received	Entry Count is a field within SA message that defines how many source/group tuples are present in the SA message. The counter is incremented each time an SA with an Entry Count of zero is received.
Active source exceeded	Number of times this peer has exceeded configured source-active limits.
Active source Maximum	Configured number of active source messages accepted by this peer.
Active source threshold	Configured threshold on this peer for applying random early discard (RED) to drop some but not all MSDP active source messages.
Active source log-warning	Configured threshold on this peer at which a warning message is logged (percentage of the number of active source messages accepted by the device).
Active source log-interval	Time (in seconds) between consecutive log messages on this peer.

Table 117: show msdp statistics Output Fields (continued)

Field Name	Field Description
Keepalive messages sent	Number of keepalive messages sent.
Keepalive messages received	Number of keepalive messages received.
Unknown messages received	Number of unknown messages received.
Error messages received	Number of error messages received.

Sample Output

show msdp statistics

```

user@host> show msdp statistics

Global active source limit exceeded: 0
Global active source limit maximum: 10
Global active source limit threshold: 8
Global active source limit log-warning: 60
Global active source limit log interval: 60

Peer: 10.255.245.39
Last State Change: 11:54:49 (00:24:59)
Last message received from peer: 11:53:32 (00:26:16)
RPF Failures: 0
Remote Closes: 0
Peer Timeouts: 0
SA messages sent: 376
SA messages received: 459
SA messages with zero Entry Count received: 0
SA request messages sent: 0
SA request messages received: 0
SA response messages sent: 0
SA response messages received: 0
Active source exceeded: 0
Active source Maximum: 10
Active source threshold: 8
Active source log-warning: 60
Active source log-interval 120
Keepalive messages sent: 17
Keepalive messages received: 19
Unknown messages received: 0
Error messages received: 0

```

show msdp statistics peer

```

user@host> show msdp statistics peer 10.255.182.140

Peer: 10.255.182.140
  Last State Change: 8:19:23 (00:01:08)
  Last message received from peer: 8:20:05 (00:00:26)
  RPF Failures: 0

```

```
Remote Closes: 0
Peer Timeouts: 0
SA messages sent: 17
SA messages received: 16
SA request messages sent: 0
SA request messages received: 0
SA response messages sent: 0
SA response messages received: 0
Active source exceeded: 20
Active source Maximum: 10
Active source threshold: 8
Active source log-warning: 60
Active source log-interval: 120
Keepalive messages sent: 0
Keepalive messages received: 0
Unknown messages received: 0
Error messages received: 0
```

show multicast backup-pe-groups

Syntax `show multicast backup-pe-groups`
`<address pe-address>`
`<group group-name>`
`<instance instance-name>`
`<logical-system (all | logical-system-name)>`

Release Information Command introduced in Junos OS Release 9.0.

Description Display backup PE router group information when ingress PE redundancy is configured. Ingress PE redundancy provides a backup resource when point-to-multipoint LSPs are configured for multicast distribution.

Options **none**—Display standard information about all backup PE groups.

address *pe-address*—(Optional) Display the groups that a PE address is associated with.

group *group*—(Optional) Display the backup PE group information for a particular group.

instance *instance-name*—(Optional) Display backup PE group information for a specific multicast instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show multicast backup-pe-groups on page 1913](#)

Output Fields [Table 118 on page 1912](#) describes the output fields for the **show multicast backup-pe-groups** command. Output fields are listed in the approximate order in which they appear.

Table 118: show multicast backup-pe-groups Output Fields

Field Name	Field Description
Backup PE Group	Group name.
Designated PE	Primary PE router. Address of the PE router that is currently forwarding traffic on the static route.
Transitions	Number of times that the designated PE router has transitioned from the most eligible PE router to a backup PE router and back again to the most eligible PE router.
Last Transition	Time of the most recent transition.
Local Address	Address of the local PE router.

Table 118: show multicast backup-pe-groups Output Fields (continued)

Field Name	Field Description
Backup PE List	List of PE routers that are configured to be backups for the group.

Sample Output

show multicast backup-pe-groups

```
user@host> show multicast backup-pe-groups
```

```
Instance: master
```

```
Backup PE group: b1
```

```
  Designated PE: 10.255.165.7
```

```
  Transitions: 1
```

```
  Last Transition: 03:15:01
```

```
  Local Address: 10.255.165.7
```

```
  Backup PE List: 10.255.165.8
```

```
Backup PE group: b2
```

```
  Designated PE: 10.255.165.7
```

```
  Transitions: 2
```

```
  Last Transition: 02:58:20
```

```
  Local Address: 10.255.165.7
```

```
  Backup PE List: 10.255.165.9  
                  10.255.165.8
```

show multicast flow-map

List of Syntax [Syntax on page 1914](#)
[Syntax \(EX Series Switch and the QFX Series\) on page 1914](#)

Syntax `show multicast flow-map`
`<brief | detail>`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switch and the QFX Series) `show multicast flow-map`
`<brief | detail>`

Release Information Command introduced in Junos OS Release 8.2.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display configuration information about IP multicast flow maps.

Options **none**—Display configuration information about IP multicast flow maps on all systems.
brief | detail—(Optional) Display the specified level of output.
logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show multicast flow-map on page 1915](#)
[show multicast flow-map detail on page 1915](#)

Output Fields [Table 119 on page 1914](#) describes the output fields for the **show multicast flow-map** command. Output fields are listed in the approximate order in which they appear.

Table 119: show multicast flow-map Output Fields

Field Name	Field Description	Levels of Output
Name	Name of the flow map.	All levels
Policy	Name of the policy associated with the flow map.	All levels
Cache-timeout	Cache timeout value assigned to the flow map.	All levels
Bandwidth	Bandwidth setting associated with the flow map.	All levels

Table 119: show multicast flow-map Output Fields (continued)

Field Name	Field Description	Levels of Output
Adaptive	Whether or not adaptive mode is enabled for the flow map.	none
Flow-map	Name of the flow map.	detail
Adaptive Bandwidth	Whether or not adaptive mode is enabled for the flow map.	detail
Redundant Sources	Redundant sources defined for the same destination group.	detail

Sample Output

show multicast flow-map

```
user@host> show multicast flow-map
```

```
Instance: master
Name      Policy      Cache timeout      Bandwidth Adaptive
map2      policy2      never              2000000 no
map1      policy1      60 seconds        2000000 no
```

Sample Output

show multicast flow-map detail

```
user@host> show multicast flow-map detail
```

```
Instance: master
Flow-map: map1
  Policy:      policy1
  Cache Timeout: 600 seconds
  Bandwidth:   2000000
  Adaptive Bandwidth: yes
  Redundant Sources: 10.11.11.11
  Redundant Sources: 10.11.11.12
  Redundant Sources: 10.11.11.13
```

show multicast forwarding-cache statistics

Syntax	<pre>show multicast forwarding-cache statistics <inet inet6> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Release Information	<p>Command introduced in Junos OS Release 12.2.</p> <p>Starting in Junos OS Release 16.1, output includes general and rendezvous-point tree (RPT) suppression states.</p>
Description	Display IP multicast forwarding cache statistics.
Options	<p>none—Display multicast forwarding cache statistics for all supported address families for all routing instances.</p> <p>inet inet6—(Optional) Display multicast forwarding cache statistics for IPv4 or IPv6 family addresses, respectively.</p> <p>instance <i>instance-name</i>—(Optional) Display multicast forwarding cache statistics for a specific routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • clear multicast forwarding-cache on page 1821 • <i>threshold</i>
List of Sample Output	<p>show multicast forwarding cache statistics instance on page 1917</p> <p>show multicast forwarding cache statistics instance (Forwarding-cache suppression is disabled) on page 1917</p>
Output Fields	<p>Table 120 on page 1916 describes the output fields for the show multicast forwarding-cache statistics command. Output fields are listed in the approximate order in which they appear.</p>

Table 120: show multicast forwarding-cache statistics Output Fields

Field Name	Field Description
Instance	Name of the routing instance for which multicast forwarding cache statistics are displayed.
Family	Protocol family for which multicast forwarding cache statistics are displayed: ALL , INET , or INET6 .

Table 120: show multicast forwarding-cache statistics Output Fields (continued)

Field Name	Field Description
General (or MVPN RPT) Suppression Active	Indicates whether suppression is configured.
General (or MVPN RPT) Entries Used	Number of currently used multicast forwarding cache entries.
General (or MVPN RPT) Suppress Threshold	Maximum number of multicast forwarding cache entries that can be added to the cache. When the number of entries reaches the configured threshold, the device suspends adding new multicast forwarding cache entries.
General (or MVPN RPT) Reuse Value	Number of multicast forwarding cache entries that must be reached before the device creates new multicast forwarding cache entries. When the total number of multicast forwarding cache entries is below the reuse value, the device resumes adding new multicast forwarding cache entries.

Sample Output

show multicast forwarding cache statistics instance

```

user@host> show multicast forwarding-cache statistic instance mvpn1 inet6

Instance: mvpn1 Family: INET6
General Suppression Active           Yes
General Entries Used                 0
General Suppress Threshold           200
General Reuse Value                  200
MVPN RPT Suppression Active          Yes
MVPN RPT Entries Used                0
MVPN RPT Suppress Threshold          200
MVPN RPT Reuse Value                 200

```

show multicast forwarding cache statistics instance (Forwarding-cache suppression is disabled)

```

user@host> show multicast forwarding-cache statistic instance mvpn1

Instance: mvpn1 Family: ALL
Forwarding-cache suppression disabled Not enabled by configuration

```

show multicast interface

List of Syntax [Syntax on page 1918](#)
[Syntax \(EX Series Switch and the QFX Series\) on page 1918](#)

Syntax `show multicast interface`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switch and the QFX Series) `show multicast interface`

Release Information Command introduced in Junos OS Release 8.3.
Command introduced in Junos OS Release 9.0 for EX Series switches.
Command introduced in Junos OS Release 11.3 for the QFX Series.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display bandwidth information about IP multicast interfaces.

Options **none**—Display all interfaces that have multicast configured.
logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show multicast interface on page 1919](#)

Output Fields [Table 121 on page 1918](#) describes the output fields for the **show multicast interface** command. Output fields are listed in the approximate order in which they appear.

Table 121: show multicast interface Output Fields

Field Name	Field Description
Interface	Name of the multicast interface.
Maximum bandwidth (bps)	Maximum bandwidth setting, in bits per second, for this interface.
Remaining bandwidth (bps)	Amount of bandwidth, in bits per second, remaining on the interface.

Table 121: show multicast interface Output Fields (continued)

Field Name	Field Description
Mapped bandwidth deduction (bps)	<p>Amount of bandwidth, in bits per second, used by any flows that are mapped to the interface.</p> <p>NOTE: Adding the mapped bandwidth deduction value to the local bandwidth deduction value results in the total deduction value for the interface.</p> <p>This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
Local bandwidth deduction (bps)	<p>Amount of bandwidth, in bits per second, used by any mapped flows that are traversing the interface.</p> <p>NOTE: Adding the mapped bandwidth deduction value to the local bandwidth deduction value results in the total deduction value for the interface.</p> <p>This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
Reverse OIF mapping	<p>State of the reverse OIF mapping feature (on or off).</p> <p>NOTE: This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
Reverse OIF mapping no QoS adjustment	<p>State of the no QoS adjustment feature (on or off) for interfaces that are using reverse OIF mapping.</p> <p>NOTE: This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
Leave timer	<p>Amount of time a mapped interface remains active after the last mapping ends.</p> <p>NOTE: This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
No QoS adjustment	<p>State (on) of the no QoS adjustment feature when this feature is enabled.</p> <p>NOTE: This field does not appear in the output when the no QoS adjustment feature is disabled.</p>

Sample Output

show multicast interface

```
user@host> show multicast interface
```

Interface	Maximum bandwidth (bps)	Remaining bandwidth (bps)
fe-0/0/3	10000000	0
fe-0/0/3.210	10000000	-2000000
fe-0/0/3.220	10000000	10000000

fe-0/0/3.230	20000000	18000000
fe-0/0/2.200	100000000	100000000

show multicast mrinfo

Syntax	<code>show multicast mrinfo</code> <code><host></code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display configuration information about IP multicast networks, including neighboring multicast router addresses.
Options	<p>none—Display configuration information about all multicast networks.</p> <p>host—(Optional) Display configuration information about a particular host. Replace <i>host</i> with a hostname or IP address.</p>
Required Privilege Level	view
List of Sample Output	show multicast mrinfo on page 1922
Output Fields	<p>Table 122 on page 1921 describes the output fields for the show multicast mrinfo command. Output fields are listed in the approximate order in which they appear.</p>

Table 122: show multicast mrinfo Output Fields

Field Name	Field Description
<i>source-address</i>	Query address, hostname (DNS name or IP address of the source address), and multicast protocol version or the software version of another vendor.
<i>ip-address-1</i> —> <i>ip-address-2</i>	Queried router interface address and directly attached neighbor interface address, respectively.
(<i>name</i> or <i>ip-address</i>)	Name or IP address of neighbor.
[<i>metric/threshold/type/flags</i>]	<p>Neighbor's multicast profile:</p> <ul style="list-style-type: none"> metric—Always has a value of 1, because mrinfo queries the directly connected interfaces of a device. threshold—Multicast threshold time-to-live (TTL). The range of values is 0 through 255. type—Multicast connection type: pim or tunnel. flags—Flags for this route: <ul style="list-style-type: none"> querier—Queried router is the designated router for the neighboring session. leaf—Link is a leaf in the multicast network. down—Link status indicator.

Sample Output

show multicast mrinfo

```
user@host> show multicast mrinfo 10.35.4.1
10.35.4.1 (10.35.4.1) [version 12.0]:
  192.168.195.166 -> 0.0.0.0 (local) [1/0/pim/querier/leaf]
  10.38.20.1 -> 0.0.0.0 (local) [1/0/pim/querier/leaf]
  10.47.1.1 -> 10.47.1.2 (10.47.1.2) [1/5/pim]
  0.0.0.0 -> 0.0.0.0 (local) [1/0/pim/down]
```

show multicast next-hops

List of Syntax [Syntax on page 1923](#)
 [Syntax \(EX Series Switch and the QFX Series\) on page 1923](#)

Syntax `show multicast next-hops`
 `<brief | detail | terse>`
 `<identifier-number>`
 `<inet | inet6>`
 `<logical-system (all | logical-system-name)>`

Syntax (EX Series Switch and the QFX Series) `show multicast next-hops`
 `<brief | detail>`
 `<identifier-number>`
 `<inet | inet6>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 inet6 option introduced in Junos OS Release 10.0 for EX Series switches.
 detail option display of next-hop ID number introduced in Junos OS Release 11.1 for M Series and T Series routers and EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Support for bidirectional PIM added in Junos OS Release 12.1.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
 terse option introduced in Junos OS Release 16.1 for the MX Series.

Description Display the entries in the IP multicast next-hop table.

Options **none**—Display standard information about all entries in the multicast next-hop table for all supported address families.

brief | detail | terse—(Optional) Display the specified level of output. Use **terse** to display the total number of outgoing interfaces (as opposed to listing them) When you include the **detail** option on M Series and T Series routers and EX Series switches, the downstream interface name includes the next-hop ID number in parentheses, in the form **fe-0/1/2.0-(1048574)**, where **1048574** is the next-hop ID number.

Starting in Junos OS release 16.1, the **show multicast next-hops** statement shows the hierarchical next hops contained in the top-level next hop.

identifier-number—(Optional) Show a particular next hop by ID number. The range of values is 1 through 65,535.

inet | inet6—(Optional) Display entries for IPv4 or IPv6 family addresses, respectively.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show multicast next-hops on page 1924](#)
[show multicast next-hops \(Ingress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1924](#)
[show multicast next-hops \(Egress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1925](#)
[show multicast next-hops \(Bidirectional PIM\) on page 1925](#)
[show multicast next-hops brief on page 1925](#)
[show multicast next-hops detail on page 1925](#)

Output Fields [Table 123 on page 1924](#) describes the output fields for the **show multicast next-hops** command. Output fields are listed in the approximate order in which they appear.

Table 123: show multicast next-hops Output Fields

Field Name	Field Description
Family	Protocol family (such as INET).
ID	Next-hop identifier of the prefix. The identifier is returned by the routing device's Packet Forwarding Engine.
Refcoun	Number of cache entries that are using this next hop.
KRefcoun	Kernel reference count for the next hop.
Downstream interface	Interface names associated with each multicast next-hop ID.
Incoming interface list	List of interfaces that accept incoming traffic. Only shown for routes that do not use strict RPF-based forwarding, for example for bidirectional PIM.

Sample Output

show multicast next-hops

```
user@host> show multicast next-hops
```

```
Family: INET
ID      Refcount  KRefcoun Downstream interface
262142      4          2  so-1/0/0.0
262143      2          1  mt-1/1/0.49152
262148      2          1  mt-1/1/0.32769
```

show multicast next-hops (Ingress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show multicast next-hops
```

```
Family: INET
ID      Refcount  KRefcoun Downstream interface Addr
1048580      2          1  1048576
```


(0x600dc04)	1	0	1048584
(0x600ea04)	1	0	(0x600e924)
1048583	2	1	1048579
(0x600e144)	1	0	1048587
(0x600e844)	1	0	(0x600e764)
1048582	2	1	1048578
(0x600df84)	1	0	1048586
(0x600e684)	1	0	(0x600e5a4)
1048581	2	1	1048577
(0x600ddc4)	1	0	1048585
(0x600ebc4)	1	0	(0x600eae4)

show multicast next-hops (Egress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show multicast next-hops
```

```
Family: INET
ID          Refcount KRefCount Downstream interface Addr
(0x600e844)      8         0 1048575
1048575         16         0 distributed-gmp
```

show multicast next-hops (Bidirectional PIM)

```
user@host> show multicast next-hops
```

```
Family: INET
ID          Refcount KRefCount Downstream interface
2097151      8         4 ge-0/0/1.0

Family: INET6
ID          Refcount KRefCount Downstream interface
2097157      2         1 ge-0/0/1.0

Family: Incoming interface list
ID          Refcount KRefCount Downstream interface
513         5         2 lo0.0
              ge-0/0/1.0
514         5         2 lo0.0
              ge-0/0/1.0
              xe-4/1/0.0
515         3         1 lo0.0
              ge-0/0/1.0
              xe-4/1/0.0
544         1         0 lo0.0
              xe-4/1/0.0
```

show multicast next-hops brief

The output for the **show multicast next-hops brief** command is identical to that for the **show multicast next-hops** command. For sample output, see [show multicast next-hops on page 1924](#).

show multicast next-hops detail

```
user@host> show multicast next-hops detail
```

```
Family: INET
ID          Refcount KRefCount Downstream interface Addr
```

```

1048584          2          1 1048581
                        1048580
                        Flags 0x208 type 0x18 members 0/0/2/0/0
                        Address 0xb1841c4
1048591          3          2 787
                        747
                        Flags 0x206 type 0x18 members 0/0/2/0/0
                        Address 0xb1847f4
1048580          4          1 ge-1/1/9.0-(1048579)
                        Flags 0x200 type 0x18 members 0/0/0/1/0
                        Address 0xb184134
1048581          2          0 736
                        765
                        Flags 0x3 type 0x18 members 0/0/2/0/0
                        Address 0xb183dd4
1048585          18          0 787
                        747
                        Flags 0x203 type 0x18 members 0/0/2/0/0
                        Address 0xb184404

Family: INET6
ID          Refcount KRefCount Downstream interface Addr
1048586          4          2 1048585
                        1048583
                        Flags 0x20c type 0x19 members 0/0/2/0/0
                        Address 0xb1842e4
1048583          14          4 ge-1/1/9.0-(1048582)
                        Flags 0x200 type 0x19 members 0/0/0/1/0
                        Address 0xb183ef4
1048592          4          2 1048583
                        1048591
                        Flags 0x20c type 0x19 members 0/0/2/0/0
                        Address 0xb184644

```

show multicast pim-to-igmp-proxy

List of Syntax	Syntax on page 1927 Syntax (EX Series Switch and the QFX Series) on page 1927
Syntax	<pre>show multicast pim-to-igmp-proxy <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>show multicast pim-to-igmp-proxy <instance <i>instance-name</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 9.6 for EX Series switches.</p> <p>instance option introduced in Junos OS Release 10.3.</p> <p>instance option introduced in Junos OS Release 10.3 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display configuration information about PIM-to-IGMP message translation, also known as PIM-to-IGMP proxy.
Options	<p>none—Display configuration information about PIM-to-IGMP message translation for all routing instances.</p> <p>instance <i>instance-name</i>—(Optional) Display configuration information about PIM-to-IGMP message translation for a specific multicast instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> Configuring PIM-to-IGMP and PIM-to-MLD Message Translation
List of Sample Output	show multicast pim-to-igmp-proxy on page 1928 show multicast pim-to-igmp-proxy instance on page 1928
Output Fields	<p>Table 124 on page 1928 describes the output fields for the show multicast pim-to-igmp-proxy command. Output fields are listed in the order in which they appear.</p>

Table 124: show multicast pim-to-igmp-proxy Output Fields

Field Name	Field Description
Instance	Routing instance. Default instance is master (inet.0 routing table).
Proxy state	State of PIM-to-IGMP message translation, also known as PIM-to-IGMP proxy, on the configured upstream interfaces: enabled or disabled .
<i>interface-name</i>	Name of upstream interface (no more than two allowed) on which PIM-to-IGMP message translation is configured.

Sample Output

show multicast pim-to-igmp-proxy

```
user@host> show multicast pim-to-igmp-proxy
```

```
Instance: master Proxy state: enabled
ge-0/1/0.1
ge-0/1/0.2
```

show multicast pim-to-igmp-proxy instance

```
user@host> show multicast pim-to-igmp-proxy instance VPN-A
```

```
Instance: VPN-A Proxy state: enabled
ge-0/1/0.1
```

show multicast pim-to-mld-proxy

List of Syntax [Syntax on page 1929](#)
[Syntax \(EX Series Switch and the QFX Series\) on page 1929](#)

Syntax `show multicast pim-to-mld-proxy`
`<instance instance-name>`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switch and the QFX Series) `show multicast pim-to-mld-proxy`
`<instance instance-name>`

Release Information Command introduced in Junos OS Release 9.6.
 Command introduced in Junos OS Release 9.6 for EX Series switches.
instance option introduced in Junos OS Release 10.3.
instance option introduced in Junos OS Release 10.3 for EX Series switches.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
 Command introduced in Junos OS Release 11.3 for the QFX Series.

Description Display configuration information about PIM-to-MLD message translation, also known as PIM-to-MLD proxy.

Options **none**—Display configuration information about PIM-to-MLD message translation for all routing instances.

instance *instance-name*—(Optional) Display configuration information about PIM-to-MLD message translation for a specific multicast instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show multicast pim-to-mld-proxy on page 1930](#)
[show multicast pim-to-mld-proxy instance on page 1930](#)

Output Fields [Table 125 on page 1929](#) describes the output fields for the **show multicast pim-to-mld-proxy** command. Output fields are listed in the order in which they appear.

Table 125: show multicast pim-to-mld-proxy Output Fields

Field Name	Field Description
Proxy state	State of PIM-to-MLD message translation, also known as PIM-to-MLD proxy, on the configured upstream interfaces: enabled or disabled .

Table 125: show multicast pim-to-mld-proxy Output Fields (continued)

Field Name	Field Description
<i>interface-name</i>	Name of upstream interface (no more than two allowed) on which PIM-to-MLD message translation is configured.

Sample Output

show multicast pim-to-mld-proxy

```
user@host> show multicast pim-to-mld-proxy
Instance: master Proxy state: enabled
ge-0/5/0.1
ge-0/5/0.2
```

show multicast pim-to-mld-proxy instance

```
user@host> show multicast pim-to-mld-proxy instance VPN-A
Instance: VPN-A Proxy state: enabled
ge-0/5/0.1
```

show multicast route

List of Syntax [Syntax on page 1931](#)
 [Syntax \(EX Series Switch and the QFX Series\) on page 1931](#)

Syntax

```
show multicast route
<brief | detail | extensive | summary>
<active | all | inactive>
<group group>
<inet | inet6>
<instance instance name>
<logical-system (all | logical-system-name)>
<oif-count>
<regular-expression>
<source-prefix source-prefix>
```

Syntax (EX Series Switch and the QFX Series)

```
show multicast route
<brief | detail | extensive | summary>
<active | all | inactive>
<group group>
<inet | inet6>
<instance instance name>
<regular-expression>
<source-prefix source-prefix>
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 inet6 and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Support for bidirectional PIM added in Junos OS Release 12.1.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
 oif-count option introduced in Junos OS Release 16.1 for the MX Series.
 xxxSupport for PIM NSR support for VXLAN added in Junos OS Release 16.2.

Description Display the entries in the IP multicast forwarding table. You can display similar information with the **show route table inet.1** command.



NOTE: On all SRX Series devices, when a multicast route is not available, pending sessions are not torn down, and subsequent packets are queued. If no multicast route resolve comes back, then the traffic flow has to wait for the pending session to timed out. Then packets can trigger new pending session create and route resolve.

Options **none**—Display standard information about all entries in the multicast forwarding table for all routing instances.

brief | detail | extensive | summary—(Optional) Display the specified level of output.

active | all | inactive—(Optional) Display all active entries, all entries, or all inactive entries, respectively, in the multicast forwarding table.

group group—(Optional) Display the cache entries for a particular group.

inet | inet6—(Optional) Display multicast forwarding table entries for IPv4 or IPv6 family addresses, respectively.

instance instance-name—(Optional) Display entries in the multicast forwarding table for a specific multicast instance.

logical-system (all | logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.

oif-count —(Optional) Display a count of outgoing interfaces rather than listing them.

regular-expression—(Optional) Display information about the multicast forwarding table entries that match a UNIX OS-style regular expression.

source-prefix source-prefix—(Optional) Display the cache entries for a particular source prefix.

Required Privilege Level

view

Related Documentation

- *Example: Configuring Multicast-Only Fast Reroute in a PIM Domain*

List of Sample Output

[show multicast route on page 1934](#)
[show multicast route \(Bidirectional PIM\) on page 1935](#)
[show multicast route brief on page 1935](#)
[show multicast route summary on page 1935](#)
[show multicast route detail on page 1936](#)
[show multicast route extensive \(Bidirectional PIM\) on page 1936](#)
[show multicast route extensive \(Ingress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1937](#)
[show multicast route instance <instance-name> extensive on page 1938](#)
[show multicast route extensive instance <instance-name> on page 1939](#)
[show multicast route extensive \(PIM NSR support for VXLAN on master Routing Engine\) on page 1940](#)
[show multicast route extensive \(PIM NSR support for VXLAN on backup Routing Engine\) on page 1940](#)
[show multicast route extensive \(PIM NSR support for VXLAN on backup Routing Engine\) on page 1941](#)

Output Fields

[Table 126 on page 1933](#) describes the output fields for the **show multicast route** command. Output fields are listed in the approximate order in which they appear.

Table 126: show multicast route Output Fields

Field Name	Field Description	Level of Output
family	IPv4 address family (INET) or IPv6 address family (INET6).	All levels
Group	Group address. For any-source multicast routes, for example for bidirectional PIM, the group address includes the prefix length.	All levels
Source	Prefix and length of the source as it is in the multicast forwarding table.	All levels
Incoming interface list	List of interfaces that accept incoming traffic. Only shown for routes that do not use strict RPF-based forwarding, for example for bidirectional PIM.	All levels
Upstream interface	Name of the interface on which the packet with this source prefix is expected to arrive.	All levels
Upstream rpf interface list	When multicast-only fast reroute (MoFRR) is enabled, a PIM router propagates join messages on two upstream RPF interfaces to receive multicast traffic on both links for the same join request.	All levels
Downstream interface list	List of interface names to which the packet with this source prefix is forwarded. distributed-gmp — Added in Junos OS Release 17.4R1 to indicate that line cards with <i>distributed</i> IGMP interfaces are receiving multicast traffic for a given (s,g).	All levels
Number of outgoing interfaces	Total number of outgoing interfaces for each (S,G) entry.	extensive
Session description	Name of the multicast session.	detail extensive
Statistics	Rate at which packets are being forwarded for this source and group entry (in Kbps and pps), and number of packets that have been forwarded to this prefix. If one or more of the kilobits per second packet forwarding statistic queries fails or times out, the statistics field displays Forwarding statistics are not available . NOTE: On QFX Series switches and OCX Series switches, this field does not report valid statistics.	detail extensive
Next-hop ID	Next-hop identifier of the prefix. The identifier is returned by the routing device's Packet Forwarding Engine and is also displayed in the output of the show multicast nexthops command.	detail extensive
Incoming interface list ID	For bidirectional PIM, incoming interface list identifier. Identifiers for interfaces that accept incoming traffic. Only shown for routes that do not use strict RPF-based forwarding, for example for bidirectional PIM.	detail extensive

Table 126: show multicast route Output Fields (continued)

Field Name	Field Description	Level of Output
Upstream protocol	The protocol that maintains the active multicast forwarding route for this group or source. When the show multicast route extensive command is used with the display-origin-protocol option, the field name is only Protocol and not Upstream Protocol . However, this field also displays the protocol that installed the active route.	detail extensive
Route type	Type of multicast route. Values can be (S,G) or (*,G).	summary
Route state	Whether the group is Active or Inactive .	summary extensive
Route count	Number of multicast routes.	summary
Forwarding state	Whether the prefix is pruned or forwarding.	extensive
Cache lifetime/timeout	Number of seconds until the prefix is removed from the multicast forwarding table. A value of never indicates a permanent forwarding entry. A value of forever indicates routes that do not have keepalive times.	extensive
Wrong incoming interface notifications	Number of times that the upstream interface was not available.	extensive
Uptime	Time since the creation of a multicast route.	extensive

Sample Output

Starting in Junos OS Release 16.1, **show multicast route** displays the top-level hierarchical next hop.

show multicast route

```

user@host> show multicast route
Family: INET

Group: 233.252.0.0
  Source: 10.255.14.144/32
  Upstream interface: local
  Downstream interface list:
    so-1/0/0.0

Group: 233.252.0.1
  Source: 10.255.14.144/32
  Upstream interface: local
  Downstream interface list:
    so-1/0/0.0

Group: 233.252.0.1
  Source: 10.255.70.15/32
  Upstream interface: so-1/0/0.0

```

```

Downstream interface list:
  mt-1/1/0.1081344
Family: INET6

```

show multicast route (Bidirectional PIM)

```

user@host> show multicast route
Family: INET

Group: 233.252.0.1/24
  Source: *
  Incoming interface list:
    lo0.0 ge-0/0/1.0
  Downstream interface list:
    ge-0/0/1.0

Group: 233.252.0.3/24
  Source: *
  Incoming interface list:
    lo0.0 ge-0/0/1.0 xe-4/1/0.0
  Downstream interface list:
    ge-0/0/1.0

Group: 233.252.0.11/24
  Source: *
  Incoming interface list:
    lo0.0 ge-0/0/1.0
  Downstream interface list:
    ge-0/0/1.0

Group: 233.252.0.13/24
  Source: *
  Incoming interface list:
    lo0.0 ge-0/0/1.0 xe-4/1/0.0
  Downstream interface list:
    ge-0/0/1.0
Family: INET6

```

show multicast route brief

The output for the **show multicast route brief** command is identical to that for the **show multicast route** command. For sample output, see [show multicast route on page 1934](#) or [show multicast route \(Bidirectional PIM\) on page 1935](#).

show multicast route summary

```

user@host> show multicast route summary
Instance: master Family: INET

Route type  Route state  Route count
(S,G)       Active       2
(S,G)       Inactive     3

Instance: master Family: INET6

```

show multicast route detail

```
user@host> show multicast route detail
Family: INET

Group: 233.252.0.0
  Source: 10.255.14.144/32
  Upstream interface: local
  Downstream interface list:
    so-1/0/0.0
  Session description: Unknown
  Statistics: 8 kbps, 100 pps, 45272 packets
  Next-hop ID: 262142
  Upstream protocol: PIM

Group: 233.252.0.1
  Source: 10.255.14.144/32
  Upstream interface: local
  Downstream interface list:
    so-1/0/0.0
  Session description: Administratively Scoped
  Statistics: 0 kbps, 0 pps, 13404 packets
  Next-hop ID: 262142
  Upstream protocol: PIM

Group: 233.252.0.1
  Source: 10.255.70.15/32
  Upstream interface: so-1/0/0.0
  Downstream interface list:
    mt-1/1/0.1081344
  Session description: Administratively Scoped
  Statistics: 46 kbps, 1000 pps, 921077 packets

  Next-hop ID: 262143
  Upstream protocol: PIM

Family: INET6
```

show multicast route extensive (Bidirectional PIM)

```
user@host> show multicast route extensive
Family: INET

Group: 233.252.0.1/24
  Source: *
  Incoming interface list:
    lo0.0 ge-0/0/1.0
  Downstream interface list:
    ge-0/0/1.0
  Number of outgoing interfaces: 1
  Session description: NOB Cross media facilities
  Statistics: 0 kbps, 0 pps, 0 packets
  Next-hop ID: 2097153
  Incoming interface list ID: 585
  Upstream protocol: PIM
  Route state: Active
  Forwarding state: Forwarding
  Cache lifetime/timeout: forever
```

```

Wrong incoming interface notifications: 0

Group: 233.252.0.3/24
Source: *
Incoming interface list:
  lo0.0 ge-0/0/1.0 xe-4/1/0.0
Downstream interface list:
  ge-0/0/1.0
Number of outgoing interfaces: 1
Session description: NOB Cross media facilities
Statistics: 0 kbps, 0 pps, 0 packets
Next-hop ID: 2097153
Incoming interface list ID: 589
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0

Family: INET6

```

show multicast route extensive (Ingress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show multicast route extensive

Family: INET

Group: 226.0.0.1
Source: 200.1.0.2/32
Upstream interface: xe-3/0/0.0
Downstream interface list:
  ge-0/1/9.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 78 kbps, 1000 pps, 34789 packets
Next-hop ID: 1048582
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:00:35

Group: 226.0.0.2
Source: 200.1.0.2/32
Upstream interface: xe-3/0/0.0
Downstream interface list:
  ge-0/1/9.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 78 kbps, 1000 pps, 34788 packets
Next-hop ID: 1048583
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:00:35

Group: 226.0.0.3

```

```

Source: 200.1.0.2/32
Upstream interface: xe-3/0/0.0
Downstream interface list:
    ge-0/1/9.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 78 kbps, 1000 pps, 34786 packets
Next-hop ID: 1048580
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:00:35

Group: 226.0.0.4
Source: 200.1.0.2/32
Upstream interface: xe-3/0/0.0
Downstream interface list:
    ge-0/1/9.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 78 kbps, 1000 pps, 34787 packets
Next-hop ID: 1048581
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:00:35

Instance: master Family: INET6

```

show multicast route instance <instance-name> extensive

```

user@host> show multicast route instance mvpn extensive

Family: INET
roup: 233.252.0.10
Source: 10.0.0.2/32
Upstream interface: xe-0/0/0.102
Downstream interface list:
    xe-10/3/0.0 xe-0/3/0.0 xe-0/0/0.106 xe-0/0/0.105
    xe-0/0/0.103 xe-0/0/0.104 xe-0/0/0.107 xe-0/0/0.108
Session description: Administratively Scoped
Statistics: 256 kbps, 3998 pps, 670150 packets
Next-hop ID: 1048579
Upstream protocol: MVPN
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 58
Uptime: 00:00:04

Instance: master Family: INET

Group: 225.0.0.1
Source: 101.0.0.2/32
Upstream interface: ge-2/2/0.101

```

```

Downstream interface list:
  distributed-gmp
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 105 kbps, 2500 pps, 4153361 packets
Next-hop ID: 1048575
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:31:46

Group: 225.0.0.1
Source: 101.0.0.3/32
Upstream interface: ge-2/2/0.101
Downstream interface list:
  distributed-gmp
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 105 kbps, 2500 pps, 4153289 packets
Next-hop ID: 1048575
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:31:46

```

show multicast route extensive instance <instance-name>

```
user@host> show multicast route extensive instance VPN-A
```

The double asterisks (**) indicate new output, specific to **min-rate** and **revert-delay** settings made under the **[edit routing-instances routing-instance-name protocols mvpn hot-root-standby]** hierarchy.

```

Instance: VPNA Family: INET

Group: 227.1.1.1
Source: 18.1.1.2/32
Upstream rpf interface list:
  vt-2/0/10.1000 (P)
    Session Id: 0x156 Session Status: Up
    Min-rate: 10000 kbps Weight: 1
    Sender Id: Label 299808
  vt-2/0/10.1000 (B)
    Session Id: 0x155 Session Status: Up
    Min-rate: 10000 kbps Weight: 65533
    Sender Id: Label 299824
Downstream interface list:
  lt-2/0/10.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 8258 kbps, 100707 pps, 513032034 packets
RPF Next-hop ID: 803
Next-hop ID: 1048580
Upstream protocol: MVPN
Route state: Active

```

```
Forwarding state: Forwarding
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 01:24:55
```

show multicast route extensive (PIM NSR support for VXLAN on master Routing Engine)

```
user@host> show multicast route extensive
```

```
Instance: master Family: INET
```

```
Group: 233.252.0.1
```

```
Source: 10.3.3.3/32
```

```
Upstream interface: ge-3/1/2.0
```

```
Downstream interface list:
```

```
-(593)
```

```
Number of outgoing interfaces: 1
```

```
Session description: Organizational Local Scope
```

```
Statistics: 0 kbps, 0 pps, 27 packets
```

```
Next-hop ID: 1048576
```

```
Upstream protocol: PIM
```

```
Route state: Active
```

```
Forwarding state: Forwarding (Forwarding state is set as 'Forwarding' in
master RE.)
```

```
Cache lifetime/timeout: forever
```

```
Wrong incoming interface notifications: 0
```

```
Uptime: 00:06:38
```

```
Group: 233.252.0.1
```

```
Source: 10.2.1.4/32
```

```
Upstream interface: local
```

```
Downstream interface list:
```

```
ge-3/1/2.0
```

```
Number of outgoing interfaces: 1
```

```
Session description: Organizational Local Scope
```

```
Statistics: 0 kbps, 0 pps, 86 packets
```

```
Next-hop ID: 1048575
```

```
Upstream protocol: PIM
```

```
Route state: Active
```

```
Forwarding state: Forwarding (Forwarding state is set as 'Forwarding' in
master RE.)
```

```
Cache lifetime/timeout: forever
```

```
Wrong incoming interface notifications: 0
```

```
Uptime: 00:07:45
```

```
Instance: master Family: INET6
```

show multicast route extensive (PIM NSR support for VXLAN on backup Routing Engine)

```
user@host> show multicast route extensive
```

```
Instance: master Family: INET
```

```
Group: 233.252.0.1
```

```
Source: 10.3.3.3/32
```

```
Upstream interface: ge-3/1/2.0
```

```
Number of outgoing interfaces: 0
```

```
Session description: Organizational Local Scope
```



```

Forwarding statistics are not available
Next-hop ID: 0
Upstream protocol: PIM
Route state: Active
Forwarding state: Pruned (Forwarding state is set as 'Pruned' in backup RE.)

Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 00:06:46

Group: 233.252.0.1
Source: 10.2.1.4/32
Upstream interface: local
Number of outgoing interfaces: 0
Session description: Organizational Local Scope
Forwarding statistics are not available
Next-hop ID: 0
Upstream protocol: PIM
Route state: Active
Forwarding state: Pruned (Forwarding state is set as 'Pruned' in backup RE.)

Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 00:07:54

Instance: master Family: INET6

```

show multicast route extensive (PIM NSR support for VXLAN on backup Routing Engine)

```

user@host> show multicast route extensive

Instance: master Family: INET

Group: 233.252.0.1
Source: 10.3.3.3/32
Upstream interface: ge-3/1/2.0
Downstream interface list:
-(593)
Number of outgoing interfaces: 1
Session description: Organisational Local Scope
Statistics: 0 kbps, 0 pps, 0 packets
Next-hop ID: 1048576
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding (Forwarding state is set as 'Forwarding' in
backup RE.)
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 00:06:38

Group: 233.252.0.1
Source: 10.2.1.4/32
Upstream interface: local
Downstream interface list:
ge-3/1/2.0
Number of outgoing interfaces: 1
Session description: Organisational Local Scope
Statistics: 0 kbps, 0 pps, 0 packets
Next-hop ID: 1048575
Upstream protocol: PIM

```

```
Route state: Active
Forwarding state: Forwarding (Forwarding state is set as 'Forwarding' in
backup RE.)
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 00:07:45

Instance: master Family: INET6
```

show multicast rpf

List of Syntax	Syntax on page 1943 Syntax (EX Series Switch and the QFX Series) on page 1943
Syntax	<pre>show multicast rpf <inet inet6> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <prefix> <summary></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>show multicast rpf <inet inet6> <instance <i>instance-name</i>> <prefix> <summary></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>inet6 and instance options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display information about multicast reverse-path-forwarding (RPF) calculations.
Options	<p>none—Display RPF calculation information for all supported address families.</p> <p>inet inet6—(Optional) Display the RPF calculation information for IPv4 or IPv6 family addresses, respectively.</p> <p>instance <i>instance-name</i>—(Optional) Display information about multicast RPF calculations for a specific multicast instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>prefix—(Optional) Display the RPF calculation information for the specified prefix.</p> <p>summary—(Optional) Display a summary of all multicast RPF information.</p>
Required Privilege Level	view
List of Sample Output	show multicast rpf on page 1944 show multicast rpf inet6 on page 1945 show multicast rpf prefix on page 1946 show multicast rpf summary on page 1946

Output Fields Table 127 on page 1944 describes the output fields for the **show multicast rpf** command. Output fields are listed in the approximate order in which they appear.

Table 127: show multicast rpf Output Fields

Field Name	Field Description
Instance	Name of the routing instance. (Displayed when multicast is configured within a routing instance.)
Source prefix	Prefix and length of the source as it exists in the multicast forwarding table.
Protocol	How the route was learned.
Interface	Upstream RPF interface. NOTE: The displayed interface information does not apply to bidirectional PIM RP addresses. This is because the show multicast rpf command does not take into account equal-cost paths or the designated forwarder. For accurate upstream RPF interface information, always use the show pim join extensive command when bidirectional PIM is configured.
Neighbor	Upstream RPF neighbor. NOTE: The displayed neighbor information does not apply to bidirectional PIM. This is because the show multicast rpf command does not take into account equal-cost paths or the designated forwarder. For accurate upstream RPF neighbor information, always use the show pim join extensive command when bidirectional PIM is configured.

Sample Output

show multicast rpf

```
user@host> show multicast rpf

Multicast RPF table: inet.0, 12 entries

0.0.0.0/0
  Protocol: Static

10.255.14.132/32
  Protocol: Direct
  Interface: lo0.0

10.255.245.91/32
  Protocol: IS-IS
  Interface: so-1/1/1.0
  Neighbor: 192.168.195.21

172.16.0.1/32
Inactive172.16.0.0/12
Protocol: Static
```

```

Interface: fxp0.0
Neighbor: 192.168.14.254

192.168.0.0/16
Protocol: Static
Interface: fxp0.0
Neighbor: 192.168.14.254

192.168.14.0/24
Protocol: Direct
Interface: fxp0.0

192.168.14.132/32
Protocol: Local

192.168.195.20/30
Protocol: Direct
Interface: so-1/1/1.0

192.168.195.22/32
Protocol: Local

192.168.195.36/30
Protocol: IS-IS
Interface: so-1/1/1.0
Neighbor: 192.168.195.21

```

show multicast rpf inet6

```

user@host> show multicast rpf inet6

Multicast RPF table: inet6.0, 12 entries

::10.255.14.132/128
  Protocol: Direct
  Interface: lo0.0

::10.255.245.91/128
Protocol: IS-IS
Interface: so-1/1/1.0
Neighbor: 2001:db8::2a0:a5ff:fe28:2e8c

::192.168.195.20/126
Protocol: Direct
Interface: so-1/1/1.0

::192.168.195.22/128
Protocol: Local

::192.168.195.36/126
Protocol: IS-IS
Interface: so-1/1/1.0
Neighbor: 2001:db8::2a0:a5ff:fe28:2e8c

::192.168.195.76/126
Protocol: Direct
Interface: fe-2/2/0.0

```

```
::192.168.195.77/128
Protocol: Local

2001:db8::/64
Protocol: Direct
Interface: so-1/1/1.0

2001:db8::290:69ff:fe0c:993a/128
Protocol: Local

2001:db8::2a0:a5ff:fe12:84f/128
Protocol: Direct
Interface: lo0.0

2001:db8::2/128
Protocol: PIM

2001:db8::d/128
Protocol: PIM
```

show multicast rpf prefix

```
user@host> show multicast rpf 2001:db8::/16

Multicast RPF table: inet6.0, 13 entries

2001:db8::2/128
    Protocol: PIM

2001:db8::d/128
    Protocol: PIM

...
```

show multicast rpf summary

```
user@host> show multicast rpf summary

Multicast RPF table: inet.0, 16 entries
Multicast RPF table: inet6.0, 12 entries
```

show multicast scope

List of Syntax	Syntax on page 1947 Syntax (EX Series Switch and the QFX Series) on page 1947
Syntax	<pre>show multicast scope <inet inet6> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>show multicast scope <inet inet6> <instance <i>instance-name</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>inet6 and instance options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display administratively scoped IP multicast information.
Options	<p>none—Display standard information about administratively scoped multicast information for all supported address families in all routing instances.</p> <p>inet inet6—(Optional) Display scoped multicast information for IPv4 or IPv6 family addresses, respectively.</p> <p>instance <i>instance-name</i>—(Optional) Display administratively scoped information for a specific multicast instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show multicast scope on page 1948 show multicast scope inet on page 1948 show multicast scope inet6 on page 1948
Output Fields	<p>Table 128 on page 1948 describes the output fields for the show multicast scope command. Output fields are listed in the approximate order in which they appear.</p>

Table 128: show multicast scope Output Fields

Field Name	Field Description
Scope name	Name of the multicast scope.
Group Prefix	Range of multicast groups that are scoped.
Interface	Interface that is the boundary of the administrative scope.
Resolve Rejects	Number of kernel resolve rejects.

Sample Output

show multicast scope

```
user@host> show multicast scope
```

Scope name	Group Prefix	Interface	Resolve Rejects
233-net	233.252.0.0/16	fe-0/0/0.1	0
local	233.252.0.1/16	fe-0/0/0.1	0
local	2001:db8::/16	fe-0/0/0.1	0
larry	2001:db8::1234/128	fe-0/0/0.1	0

show multicast scope inet

```
user@host> show multicast scope inet
```

Scope name	Group Prefix	Interface	Resolve Rejects
233-net	233.252.0.0/16	fe-0/0/0.1	0
local	233.252.0.0/16	fe-0/0/0.1	0

show multicast scope inet6

```
user@host> show multicast scope inet6
```

Scope name	Group Prefix	Interface	Resolve Rejects
local	2001:db8::/16	fe-0/0/0.1	0
larry	2001:db8::1234/128	fe-0/0/0.1	0

show multicast snooping next-hops

Syntax show multicast snooping next-hops
 <brief | detail>
 <identifier *next-hop-ID*>
 <inet>
 <inet6>
 <logical-system *logical-system-name*>

Release Information Command introduced in Junos OS Release 11.2.

Description Display information about the IP multicast snooping next-hops.

Options **brief | detail**—(Optional) Display the specified level of output.

inet—(Optional) Display information for IPv4 multicast next hops only. If a family is not specified, both IPv4 and IPv6 results will be shown.

inet6—(Optional) Display information for IPv6 multicast next hops only. If a family is not specified, both IPv4 and IPv6 results will be shown.

logical-system *logical-system-name*—(Optional) Display information about a particular logical system, or type 'all'.

Required Privilege Level view

List of Sample Output [show multicast snooping next-hops on page 1951](#)
[show multicast snooping next-hops \(IGMP snooping enabled on a VPLS\) on page 1951](#)

Output Fields [Table 129 on page 1949](#) describes the output fields for the **show multicast snooping next-hops** command. Output fields are listed in the approximate order in which they appear.

Table 129: show multicast snooping next-hops Output Fields

Field Name	Field Description
Family	Protocol family for which multicast snooping next hops are displayed: INET or INET6 .
RefCount	Number of cache entries that are using this next hop.
KRefCount	Kernel reference count for the next hop.
Downstream interface	Interface names associated with each multicast next-hop ID.

Table 129: show multicast snooping next-hops Output Fields (continued)

Field Name	Field Description
Nexthop Id	Identifier for the next-hop. NOTE: To see the next-hop ID for a given PE mesh group, igmp-snooping must be enabled for the relevant VPLS routing instance. (Junos OS creates a default CE and VE mesh groups for each VPLS routing instance. The next hop of the VE mesh group is the set of VE mesh-group interfaces of the remaining PEs in the same VPLS routing instance.)

Sample Output

show multicast snooping next-hops

```
user@host> show multicast snooping next-hops

Family: INET
ID          Refcount KRefCount Downstream interface Nexthop Id
1048574      4          1 ge-0/1/0.1000
               ge-0/1/2.1000
               ge-0/1/3.1000
1048574      4          1 ge-0/1/0.1000-(2000)
               1048575
               1048576
1048575      2          0 ge-0/1/2.1000-(2001)
               ge-0/1/3.1000-(2002)
1048576      2          0 lsi.1048578-(2003)
               lsi.1048579-(2004)
```

show multicast snooping next-hops (IGMP snooping enabled on a VPLS)

In this example, ID 1048585 is the VE next-hop ID created for the VE next hop that is holding VE interfaces for the routing instance. It only appears if igmp snooping is enabled on the VPLS.

```
user@host> show multicast snooping next-hops

Family: INET
ID          Refcount KRefCount Downstream interface Addr
1048588      2          1 1048585
1048589      2          1 1048585
               ge-0/0/5.100
0            2          0 ge-0/0/0.100
               ge-0/0/1.100
1048583      2          1 local
1048587      2          1 local
               1048585
1048586      4          2 local
               1048585
               ge-0/0/5.100
1048584      2          1 local
               ge-0/0/5.100
1048582      6          2 ge-0/0/5.100
0            2          0 ge-0/0/0.200
               ge-0/0/2.200
0            2          0 ge-0/0/0.300
               ge-0/0/2.300
0            1          0 vt-0/0/10.17825792
               vt-0/0/10.17825793
0            1          0 vt-0/0/10.1048576
               vt-0/0/10.1048578
1048585      5          0 vt-0/0/10.1048577
               vt-0/0/10.1048579
0            1          0 vt-0/0/10.34603008
               vt-0/0/10.34603009
```


show multicast sessions

List of Syntax [Syntax on page 1953](#)
 [Syntax \(EX Series Switch and the QFX Series\) on page 1953](#)

Syntax show multicast sessions
 <brief | detail | extensive>
 <logical-system (all | *logical-system-name*)>
 <*regular-expression*>

Syntax (EX Series Switch and the QFX Series) show multicast sessions
 <brief | detail | extensive>
 <*regular-expression*>

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display information about announced IP multicast sessions.



NOTE: On all SRX Series devices, only 100 packets can be queued during pending (S, G) route. However, when multiple multicast sessions enter the route resolve process at the same time, buffer resources are not sufficient to queue 100 packets for each session.

Options **none**— Display standard information about all multicast sessions for all routing instances.
 brief | detail | extensive—(Optional) Display the specified level of output.
 logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.
 regular-expression—(Optional) Display information about announced sessions that match a UNIX-style regular expression.

Required Privilege Level view

List of Sample Output [show multicast sessions on page 1955](#)
 [show multicast sessions regular-expression detail on page 1955](#)

Output Fields [Table 130 on page 1954](#) describes the output fields for the **show multicast sessions** command. Output fields are listed in the approximate order in which they appear.

Table 130: show multicast sessions Output Fields

Field Name	Field Description
<i>session-name</i>	Name of the known announced multicast sessions.

Sample Output

show multicast sessions

```
user@host> show multicast sessions
1-Department of Biological Sciences, LSU
...
Monterey Bay - DockCam
Monterey Bay - JettyCam
Monterey Bay - StandCam
Monterey DockCam
Monterey DockCam / ROV cam
...
NASA TV (MPEG-1)
...
UO Broadcast - NASA Videos - 25 Years of Progress
UO Broadcast - NASA Videos - Journey through the Solar System
UO Broadcast - NASA Videos - Life in the Universe
UO Broadcast - NASA Videos - Nasa and the Airplane
UO Broadcasts OPB's Oregon Story
UO DOD News Clips
UO Medical Management of Biological Casualties (1)
UO Medical Management of Biological Casualties (2)
UO Medical Management of Biological Casualties (3)
...
376 active sessions.
```

show multicast sessions regular-expression detail

```
user@host> show multicast sessions "NASA TV" detail
SDP Version: 0  Originated by: -@10.223.83.33
Session: NASA TV (MPEG-1)
Description: NASA television in MPEG-1 format, provided by Private University.
Please contact the UO if you have problems with this feed.
Email: Your Name Here <multicast@lists.private.edu>
Phone: Your Name Here <888/555-1212>
Bandwidth: AS:1000
Start time: permanent
Stop time: none
Attribute: type:broadcast
Attribute: tool:IP/TV Content Manager 3.4.14
Attribute: live:capture:1
Attribute: x-iptv-capture:mp1s
Media: video 54302 RTP/AVP 32 31 96 97
Connection Data: 233.252.0.45 ttl 127
Attribute: quality:8
Attribute: framerate:30
Attribute: rtpmap:96 WBIH/90000
Attribute: rtpmap:97 MP4V-ES/90000
Attribute: x-iptv-svr:video 10.223.91.191 live
Attribute: fmp:32 type=mpeg1
Media: audio 28848 RTP/AVP 14 0 96 3 5 97 98 99 100 101 102 10 11 103 104 105 106
Connection Data: 224.2.145.37 ttl 127
Attribute: rtpmap:96 X-WAVE/8000
Attribute: rtpmap:97 L8/8000/2
Attribute: rtpmap:98 L8/8000
Attribute: rtpmap:99 L8/22050/2
Attribute: rtpmap:100 L8/22050
```

```
Attribute: rtpmap:101 L8/11025/2
Attribute: rtpmap:102 L8/11025
Attribute: rtpmap:103 L16/22050/2
Attribute: rtpmap:104 L16/22050
```

```
1 matching sessions.
```


show multicast snooping route

Syntax `show multicast snooping route`
`<regex>`
`<active>`
`<all>`
`<bridge-domain bridge-domain-name>`
`<brief >`
`<control>`
`<data>`
`<detail >`
`<extensive>`
`<group group>`
`<inactive>`
`<inet>`
`<inet6>`
`<instance instance-name>`
`<logical-system logical-system-name>`
`<mesh-group mesh-group-name>`
`<qualified-vlan vlan-id>`
`<source-prefix source-prefix>`
`<vlan vlan-id>`

Release Information Command introduced in Junos OS Release 8.5.
 Support for **control**, **data**, **qualified-vlan** and **vlan** options introduced in Junos OS Release 13.3 for EX Series switches.

Description Display the entries in the IP multicast snooping forwarding table. You can display some of this information with the **show route table inet.1** command.

Options **none**—Display standard information about all entries in the multicast snooping table for all virtual switches and all bridge domains.

active | all | inactive —(Optional) Display all active entries, all entries, or all inactive entries, respectively, in the multicast snooping table.

bridge-domain *bridge-domain*—(Optional) Display the entries for a particular bridge domain.

brief | detail | extensive—(Optional) Display the specified level of output.

control—(Optional) Display control route entries.

data—(Optional) Display data route entries.

group *group*—(Optional) Display the entries for a particular group.

inet—(Optional) Display IPv4 information.

inet6—(Optional) Display IPv6 information.

instance *instance-name*—(Optional) Display the entries for a multicast instance.

logical-system *logical-system-name*—(Optional) Display information about a particular logical system, or type 'all'.

mesh-group *mesh-group-name*—(Optional) Display the entries for a particular mesh group.

qualified-vlan *vlan-id*—(Optional) Display the entries for a particular qualified VLAN.

regex *regex*—(Optional) Display information about the multicast forwarding table entries that match a UNIX-style regular expression.

source-prefix *source-prefix*—(Optional) Display the entries for a particular source prefix.

vlan *vlan-id*—(Optional) Display the entries for a particular VLAN.

Required Privilege Level view

List of Sample Output [show multicast snooping route bridge-domain on page 1959](#)
[show multicast snooping route instance vs on page 1959](#)
[show multicast snooping route extensive on page 1959](#)
[show multicast snooping route extensive group on page 1960](#)

Output Fields [Table 131 on page 1958](#) describes the output fields for the **show multicast snooping route** command. Output fields are listed in the approximate order in which they appear.

Table 131: show multicast snooping route Output Fields

Field Name	Field Description	Level of Output
Nexthop Bulking	Displays whether next-hop bulk updating is ON or OFF (only for routing-instance type of virtual switch or vpls).	All levels
Family	IPv4 address family (INET) or IPv6 address family (INET6).	All levels
Group	Group address.	All levels
Source	Prefix and length of the source as it is in the multicast forwarding table. For (*G) entries, this field is set to "*".	All levels
Routing-instance	Name of the routing instance to which this routing information applies. (Displayed when multicast is configured within a routing instance.)	All levels
Learning Domain	Name of the learning domain to which this routing information applies.	detail extensive
Statistics	Rate at which packets are being forwarded for this source and group entry (in Kbps and pps), and number of packets that have been forwarded to this prefix.	detail extensive
Next-hop ID	Next-hop identifier of the prefix. The identifier is returned by the router's Packet Forwarding Engine and is also displayed in the output of the show multicast nexthops command.	detail extensive

Table 131: show multicast snooping route Output Fields (continued)

Field Name	Field Description	Level of Output
Route state	Whether the group is Active or Inactive .	extensive
Forwarding state	Whether the prefix is Pruned or Forwarding .	extensive
Cache lifetime/timeout	Number of seconds until the prefix is removed from the multicast forwarding table. A value of never indicates a permanent forwarding entry.	extensive

Sample Output

show multicast snooping route bridge-domain

```

user@host> show multicast snooping route bridge-domain br-dom-1 extensive
Family: INET

Group: 232.1.1.1
Source: 192.168.3.100/32
Downstream interface list:
  ge-0/1/0.200
Statistics: 0 kbps, 0 pps, 1 packets
Next-hop ID: 1048577
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 240 seconds

```

show multicast snooping route instance vs

```

user@host> show multicast snooping route instance vs
Nexthop Bulking: ON

Family: INET

Group: 224.0.0.0
  Bridge-domain: vsid500

Group: 225.1.0.1
  Bridge-domain: vsid500
  Downstream interface list: vsid500
    ge-0/3/8.500 ge-1/1/9.500 ge1/2/5.500

```

show multicast snooping route extensive

```

user@host> show multicast snooping route extensive inet6 group ff03::1
Nexthop Bulking: OFF

Family: INET6
Group: ff03::1/128
Source: ::
Bridge-domain: BD-1
Mesh-group: __all_ces__
Downstream interface list:

```

```
    ae0.1 -(562) 1048576
    Statistics: 2697 kbps, 3875 pps, 758819039 packets
    Next-hop ID: 1048605
    Route state: Active
    Forwarding state: Forwarding

Group: ff03::1/128
    Source: 6666::2/128
    Bridge-domain: BD-1
    Mesh-group: __all_ces__
    Downstream interface list:
        ae0.1 -(562) 1048576
        Statistics: 0 kbps, 0 pps, 0 packets
        Next-hop ID: 1048605
        Route state: Active
        Forwarding state: Forwarding
```

show multicast snooping route extensive group

```
user@host> show multicast snooping route extensive iinstance evpn-vxlan group 233.252.0.1/

Group: 233.252.0.1/32
    Source: *
    Vlan: VLAN-100
    Mesh-group: __all_ces__
    Downstream interface list:
        ge-0/0/3.0 -(662)
        evpn-core-nh -(131076)
    Statistics: 0 kbps, 0 pps, 0 packets
    Next-hop ID: 131070
    Route state: Active
    Forwarding state: Forwarding
```

show multicast statistics

Syntax	<pre>show multicast statistics <inet inet6> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>interface option introduced in Junos OS Release 16.1 for the MX Series.</p>
Description	Display IP multicast statistics.
Options	<p>none—Display multicast statistics for all supported address families for all routing instances.</p> <p>inet inet6—(Optional) Display multicast statistics for IPv4 or IPv6 family addresses, respectively.</p> <p>instance <i>instance-name</i>—(Optional) Display statistics for a specific routing instance.</p> <p>interface <i>interface-name</i>—(Optional) Display statistics for a specific interface.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Additional Information	The input and output interface multicast statistics are consistent, but not timely. They are constructed from the forwarding statistics, which are gathered at 30-second intervals. Therefore, the output from this command always lags the true count by up to 30 seconds.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> clear multicast statistics on page 1826
List of Sample Output	show multicast statistics on page 1964 show multicast statistics interface on page 1964
Output Fields	Table 132 on page 1961 describes the output fields for the show multicast statistics command. Output fields are listed in the approximate order in which they appear.

Table 132: show multicast statistics Output Fields

Field Name	Field Description
Family	Protocol family for which multicast statistics are displayed: INET or INET6 .

Table 132: show multicast statistics Output Fields (continued)

Field Name	Field Description
Interface	Name of the interface for which statistics are being reported.
Routing Protocol	Primary multicast protocol on the interface: PIM , DVMRP for INET , or PIM for INET6 .
Mismatch	Number of multicast packets that did not arrive on the correct upstream interface.
Kernel Resolve	Number of resolve requests processed by the primary multicast protocol on the interface.
Resolve No Route	Number of resolve requests that were ignored because there was no route to the source.
In Kbytes	Total accumulated incoming packets (in KB) since the last time the clear multicast statistics command was issued.
Out Kbytes	Total accumulated outgoing packets (in KB) since the last time the clear multicast statistics command was issued.
Mismatch error	Number of mismatches that were ignored because of internal errors.
Mismatch No Route	Number of mismatches that were ignored because there was no route to the source.
Routing Notify	Number of times that the multicast routing system has been notified of a new multicast source by a multicast routing protocol .
Resolve Error	Number of resolve requests that were ignored because of internal errors.
In Packets	Total number of incoming packets since the last time the clear multicast statistics command was issued.
Out Packets	Total number of outgoing packets since the last time the clear multicast statistics command was issued.
Resolve requests on interfaces not enabled for multicast <i>n</i>	Number of resolve requests on interfaces that are not enabled for multicast that have accumulated since the clear multicast statistics command was last issued.
Resolve requests with no route to source <i>n</i>	Number of resolve requests with no route to the source that have accumulated since the clear multicast statistics command was last issued.
Routing notifications on interfaces not enabled for multicast <i>n</i>	Number of routing notifications on interfaces not enabled for multicast that have accumulated since the clear multicast statistics command was last issued.
Routing notifications with no route to source <i>n</i>	Number of routing notifications with no route to the source that have accumulated since the clear multicast statistics command was last issued.
Interface Mismatches on interfaces not enabled for multicast <i>n</i>	Number of interface mismatches on interfaces not enabled for multicast that have accumulated since the clear multicast statistics command was last issued.

Table 132: show multicast statistics Output Fields (continued)

Field Name	Field Description
Group Membership on interfaces not enabled for multicast <i>n</i>	Number of group memberships on interfaces not enabled for multicast that have accumulated since the clear multicast statistics command was last issued.

Sample Output

show multicast statistics

```
user@host> show multicast statistics
```

```
Address family: INET
Interface: fe-0/0/0
  Routing Protocol:      PIM  Mismatch error:      0
  Mismatch:              0    Mismatch No Route:    0
  Kernel Resolve:        10    Routing Notify:       0
  Resolve No Route:      0    Resolve Error:        0
  In Kbytes:              4641  In Packets:           50454
  Out Kbytes:             0    Out Packets:          0
Interface: so-0/1/1.0
  Routing Protocol:      PIM  Mismatch error:      0
  Mismatch:              0    Mismatch No Route:    0
  Kernel Resolve:        0    Routing Notify:       0
  Resolve No Route:      0    Resolve Error:        0
  In Kbytes:              0    In Packets:           0
  Out Kbytes:             4641  Out Packets:          50454
```

```
Resolve requests on interfaces not enabled for multicast 0
Resolve requests with no route to source 0
Routing notifications on interfaces not enabled for multicast 0
Routing notifications with no route to source 0
Interface Mismatches on interfaces not enabled for multicast 0
Group Membership on interfaces not enabled for multicast 25
```

```
Address family: INET6
Interface: fe-0/0/0.0
  Routing Protocol:      PIM  Mismatch error:      0
  Mismatch:              0    Mismatch No Route:    0
  Kernel Resolve:        0    Routing Notify:       0
  Resolve No Route:      0    Resolve Error:        0
  In Kbytes:              0    In Packets:           0
  Out Kbytes:             0    Out Packets:          0
Interface: so-0/1/1.0
  Routing Protocol:      PIM  Mismatch error:      0
  Mismatch:              0    Mismatch No Route:    0
  Kernel Resolve:        0    Routing Notify:       0
  Resolve No Route:      0    Resolve Error:        0
  In Kbytes:              0    In Packets:           0
  Out Kbytes:             0    Out Packets:          0
```

```
Resolve requests on interfaces not enabled for multicast 0
Resolve requests with no route to source 0
Routing notifications on interfaces not enabled for multicast 0
Routing notifications with no route to source 0
Interface Mismatches on interfaces not enabled for multicast 0
Group Membership on interfaces not enabled for multicast 0
```

show multicast statistics interface

```
user@host> show multicast statistics interface vt-3/0/10.2097152
```

```
Instance: master Family: INET
Interface: vt-3/0/10.2097152
  Routing protocol:      PIM  Mismatch error:      0
  Mismatch:              0    Mismatch no route:    0
```


Kernel resolve:	0	Routing notify:	0
Resolve no route:	0	Resolve error:	0
Resolve filtered:	0	Notify filtered:	0
In kbytes:	0	In packets:	0
Out kbytes:	0	Out packets:	0

show multicast usage

List of Syntax	Syntax on page 1966 Syntax (EX Series Switch and the QFX Series) on page 1966
Syntax	<pre>show multicast usage <brief detail> <inet inet6> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>show multicast usage <brief detail> <inet inet6> <instance <i>instance-name</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. inet6 and instance options introduced in Junos OS Release 10.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display usage information about the 10 most active Distance Vector Multicast Routing Protocol (DVMRP) or Protocol Independent Multicast (PIM) groups.
Options	<p>none—Display multicast usage information for all supported address families for all routing instances.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>inet inet6—(Optional) Display usage information for IPv4 or IPv6 family addresses, respectively.</p> <p>instance <i>instance-name</i>—(Optional) Display information about the most active DVMRP or PIM groups for a specific multicast instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show multicast usage on page 1967 show multicast usage brief on page 1967 show multicast usage instance on page 1967 show multicast usage detail on page 1968

Output Fields [Table 133 on page 1967](#) describes the output fields for the **show multicast usage** command. Output fields are listed in the approximate order in which they appear.

Table 133: show multicast usage Output Fields

Field Name	Field Description
Instance	Name of the routing instance. (Displayed when multicast is configured within a routing instance.)
Group	Group address.
Sources	Number of sources.
Packets	Number of packets that have been forwarded to this prefix. If one or more of the packets forwarded statistic queries fails or times out, the packets field displays unavailable .
Bytes	Number of bytes that have been forwarded to this prefix. If one or more of the packets forwarded statistic queries fails or times out, the bytes field displays unavailable .
Prefix	IP address.
/len	Prefix length.
Groups	Number of multicast groups.

Sample Output

show multicast usage

```
user@host> show multicast usage
```

Group	Sources	Packets	Bytes
233.252.0.0	1	52847	4439148
233.252.0.1	2	13450	1125530

Prefix	/len	Groups	Packets	Bytes
10.255.14.144	/32	2	66254	5561304
10.255.70.15	/32	1	43	3374...

show multicast usage brief

The output for the **show multicast usage brief** command is identical to that for the **show multicast usage** command. For sample output, see [show multicast usage on page 1967](#).

show multicast usage instance

```
user@host> show multicast usage instance VPN-A
```

Group	Sources	Packets	Bytes
233.252.0.254	1	5538	509496

```
233.252.0.39    1      13          624
233.252.0.40    1      13          624

Prefix          /len Groups Packets          Bytes
192.168.195.34 /32  1      5538          509496
10.255.14.30    /32  1      13            624
10.255.245.91   /32  1      13            624
...
```

show multicast usage detail

```
user@host> show multicast usage detail
```

```
Group          Sources Packets          Bytes
233.252.0.0     1      53159          4465356
  Source: 10.255.14.144 /32 Packets: 53159 Bytes: 4465356
233.252.0.1     2      13450          1125530
  Source: 10.255.14.144 /32 Packets: 13407 Bytes: 1122156
  Source: 10.255.70.15  /32 Packets: 43 Bytes: 3374

Prefix          /len Groups Packets          Bytes
10.255.14.144   /32  2      66566          5587512
  Group: 233.252.0.0    Packets: 53159 Bytes: 4465356
  Group: 233.252.0.1    Packets: 13407 Bytes: 1122156
10.255.70.15    /32  1      43             3374
  Group: 233.252.0.1    Packets: 43 Bytes: 3374
```

show pim bootstrap

List of Syntax [Syntax on page 1969](#)
[Syntax \(EX Series Switch and the QFX Series\) on page 1969](#)

Syntax `show pim bootstrap`
`<instance instance-name>`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switch and the QFX Series) `show pim bootstrap`
`<instance instance-name>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
instance option introduced in Junos OS Release 10.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description For sparse mode only, display information about Protocol Independent Multicast (PIM) bootstrap routers.

Options **none**—Display PIM bootstrap router information for all routing instances.

instance *instance-name*—(Optional) Display information about bootstrap routers for a specific PIM-enabled routing instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show pim bootstrap on page 1970](#)
[show pim bootstrap instance on page 1970](#)

Output Fields [Table 134 on page 1969](#) describes the output fields for the **show pim bootstrap** command. Output fields are listed in the approximate order in which they appear.

Table 134: show pim bootstrap Output Fields

Field Name	Field Description
Instance	Name of the routing instance.
BSR	Bootstrap router.
Pri	Priority of the routing device as elected to be the bootstrap router.

Table 134: show pim bootstrap Output Fields (continued)

Field Name	Field Description
Local address	Local routing device address.
Pri	Local routing device address priority to be elected as the bootstrap router.
State	Local routing device election state: Candidate , Elected , or Ineligible .
Timeout	How long until the local routing device declares the bootstrap router to be unreachable, in seconds.

Sample Output

show pim bootstrap

```
user@host> show pim bootstrap
```

```
Instance: PIM.master
```

BSR	Pri	Local address	Pri	State	Timeout
None	0	10.255.71.46	0	InEligible	0
2001:db8:1:1:1:0:aff:785c	34	2001:db8:1:1:1:0:aff:7c12	0	InEligible	0

show pim bootstrap instance

```
user@host> show pim bootstrap instance VPN-A
```

```
Instance: PIM.VPN-A
```

BSR	Pri	Local address	Pri	State	Timeout
None	0	192.168.196.105	0	InEligible	0

show pim interfaces

List of Syntax	Syntax on page 1971 Syntax (EX Series Switch and the QFX Series) on page 1971
Syntax	<pre>show pim interfaces <inet inet6> <instance (<i>instance-name</i> all)> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>show pim interfaces <inet inet6> <instance (<i>instance-name</i> all)></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>inet6 and instance options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Support for bidirectional PIM added in Junos OS Release 12.1.</p> <p>Support for the instance all option added in Junos OS Release 12.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display information about the interfaces on which Protocol Independent Multicast (PIM) is configured.
Options	<p>none—Display interface information for all family addresses for the main instance.</p> <p>inet inet6—(Optional) Display interface information for IPv4 or IPv6 family addresses, respectively.</p> <p>instance (<i>instance-name</i> all)—(Optional) Display information about interfaces for a specific PIM-enabled routing instance or for all routing instances.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show pim interfaces on page 1973
Output Fields	<p>Table 135 on page 1972 describes the output fields for the show pim interfaces command. Output fields are listed in the approximate order in which they appear.</p>

Table 135: show pim interfaces Output Fields

Field Name	Field Description
Instance	Name of the routing instance.
Name	Interface name.
State	State of the interface. The state also is displayed in the show interfaces command.
Mode	<p>PIM mode running on the interface:</p> <ul style="list-style-type: none"> • B—In bidirectional mode, multicast groups are carried across the network over bidirectional shared trees. This type of tree minimizes PIM routing state, which is especially important in networks with numerous and dispersed senders and receivers. • S—In sparse mode, routing devices must join and leave multicast groups explicitly. Upstream routing devices do not forward multicast traffic to this routing device unless this device has sent an explicit request (using a join message) to receive multicast traffic. • Dense—Unlike sparse mode, where data is forwarded only to routing devices sending an explicit request, dense mode implements a flood-and-prune mechanism, similar to DVMRP (the first multicast protocol used to support the multicast backbone). (Not supported on QFX Series.) • Sparse-Dense—Sparse-dense mode allows the interface to operate on a per-group basis in either sparse or dense mode. A group specified as dense is not mapped to a rendezvous point (RP). Instead, data packets destined for that group are forwarded using PIM-Dense Mode (PIM-DM) rules. A group specified as sparse is mapped to an RP, and data packets are forwarded using PIM-Sparse Mode (PIM-SM) rules. <p>When sparse-dense mode is configured, the output includes both S and D. When bidirectional-sparse mode is configured, the output includes S and B. When bidirectional-sparse-dense mode is configured, the output includes B, S, and D.</p>
IP	Version number of the address family on the interface: 4 (IPv4) or 6 (IPv6).
V	PIM version running on the interface: 1 or 2.
State	<p>State of PIM on the interface:</p> <ul style="list-style-type: none"> • Active—Bidirectional mode is enabled on the interface and on all PIM neighbors. • DR—Designated router. • NotCap—Bidirectional mode is not enabled on the interface. This can happen when bidirectional PIM is not configured locally, when one of the neighbors is not configured for bidirectional PIM, or when one of the neighbors has not implemented the bidirectional PIM protocol. • NotDR—Not the designated router. • P2P—Point to point.
NbrCnt	Number of neighbors that have been seen on the interface.
JoinCnt(sg)	Number of (s,g) join messages that have been seen on the interface.
JointCnt(*g)	Number of (*g) join messages that have been seen on the interface.
DR address	Address of the designated router.

Sample Output

show pim interfaces

```
user@host> show pim interfaces
```

Stat = Status, V = Version, NbrCnt = Neighbor Count,

S = Sparse, D = Dense, B = Bidirectional,

DR = Designated Router, P2P = Point-to-point link,

Active = Bidirectional is active, NotCap = Not Bidirectional Capable

Name	Stat	Mode	IP	V	State	NbrCnt	JoinCnt(sg/*g)	DR address
ge-0/3/0.0	Up	S	4	2	NotDR,NotCap	1	0/0	40.0.0.3
ge-0/3/3.50	Up	S	4	2	DR,NotCap	1	9901/100	50.0.0.2
ge-0/3/3.51	Up	S	4	2	DR,NotCap	1	0/0	51.0.0.2
pe-1/2/0.32769	Up	S	4	2	P2P,NotCap	0	0/0	

show pim join

List of Syntax [Syntax on page 1974](#)
[Syntax \(EX Series Switch and the QFX Series\) on page 1974](#)

Syntax

```
show pim join
<brief | detail | extensive | summary>
<bidirectional | dense | sparse>
<downstream-count>
<exact>
<inet | inet6>
<instance instance-name>
<logical-system (all | logical-system-name)>
<range>
<rp ip-address/prefix | source ip-address/prefix>
<sg | star-g>
```

Syntax (EX Series Switch and the QFX Series)

```
show pim join
<brief | detail | extensive | summary>
<dense | sparse>
<exact>
<inet | inet6>
<instance instance-name>
<range>
<rp ip-address/prefix | source ip-address/prefix>
<sg | star-g>
```

Release Information

Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
summary option introduced in Junos OS Release 9.6.
inet6 and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.
 Support for bidirectional PIM added in Junos OS Release 12.1.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Multiple new filter options introduced in Junos OS Release 13.2.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
downstream-count option introduced in Junos OS Release 16.1.
 Support for PIM NSR support for VXLAN added in Junos OS Release 16.2
 Support for RFC 5496 (via **rpf-vector**) added in Junos OS Release 17.3R1.

Description Display information about Protocol Independent Multicast (PIM) groups for all PIM modes.

For bidirectional PIM, display information about PIM group ranges (*G-range) for each active bidirectional RP group range, in addition to each of the joined (*G) routes.

Options **none**—Display the standard information about PIM groups for all supported family addresses for all routing instances.

brief | detail | extensive | summary—(Optional) Display the specified level of output.

bidirectional | dense | sparse—(Optional) Display information about PIM bidirectional mode, dense mode, or sparse and source-specific multicast (SSM) mode entries.

downstream-count—(Optional) Display the downstream count instead of a list.

exact—(Optional) Display information about only the group that exactly matches the specified group address.

inet | inet6—(Optional) Display PIM group information for IPv4 or IPv6 family addresses, respectively.

instance *instance-name*—(Optional) Display information about groups for the specified PIM-enabled routing instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

range—(Optional) Address range of the group, specified as *prefix/prefix-length*.

rp *ip-address/prefix* | source *ip-address/prefix*—(Optional) Display information about the PIM entries with a specified rendezvous point (RP) address and prefix or with a specified source address and prefix. You can omit the prefix.

sg | star-g—(Optional) Display information about PIM (S,G) or (*,G) entries.

Required Privilege Level

view

Related Documentation

- [clear pim join on page 1828](#)
- *Example: Configuring Multicast-Only Fast Reroute in a PIM Domain*
- *Example: Configuring Bidirectional PIM*
- *Example: Configuring PIM State Limits*

List of Sample Output

[show pim join summary on page 1979](#)
[show pim join \(PIM Sparse Mode\) on page 1979](#)
[show pim join \(Bidirectional PIM\) on page 1979](#)
[show pim join inet6 on page 1980](#)
[show pim join inet6 star-g on page 1981](#)
[show pim join instance <instance-name> on page 1981](#)
[show pim join instance <instance-name> downstream-count on page 1981](#)
[show pim join instance <instance-name> downstream-count extensive on page 1982](#)
[show pim join detail on page 1982](#)
[show pim join extensive \(PIM Resolve TLV for Multicast in Seamless MPLS\) on page 1982](#)
[show pim join extensive \(PIM Sparse Mode\) on page 1983](#)
[show pim join extensive \(Bidirectional PIM\) on page 1984](#)

[show pim join extensive \(Bidirectional PIM with a Directly Connected Phantom RP\) on page 1985](#)

[show pim join instance <instance-name> extensive on page 1985](#)

[show pim join extensive \(Ingress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1986](#)

[show pim join extensive \(Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1987](#)

Output Fields [Table 136 on page 1976](#) describes the output fields for the **show pim join** command. Output fields are listed in the approximate order in which they appear.

Table 136: show pim join Output Fields

Field Name	Field Description	Level of Output
Instance	Name of the routing instance.	brief detail extensive summary none
Family	Name of the address family: inet (IPv4) or inet6 (IPv6).	brief detail extensive summary none
Route type	Type of multicast route: (S,G) or (*,G).	summary
Route count	Number of (S,G) routes and number of (*,G) routes.	summary
R	Rendezvous Point Tree.	brief detail extensive none
S	Sparse.	brief detail extensive none
W	Wildcard.	brief detail extensive none
Group	Group address.	brief detail extensive none
Bidirectional group prefix length	For bidirectional PIM, length of the IP prefix for RP group ranges.	All levels
Source	Multicast source: <ul style="list-style-type: none"> • * (wildcard value) • <i>ipv4-address</i> • <i>ipv6-address</i> 	brief detail extensive none
RP	Rendezvous point for the PIM group.	brief detail extensive none
Flags	PIM flags: <ul style="list-style-type: none"> • bidirectional—Bidirectional mode entry. • dense—Dense mode entry. • rptree—Entry is on the rendezvous point tree. • sparse—Sparse mode entry. • spt—Entry is on the shortest-path tree for the source. • wildcard—Entry is on the shared tree. 	brief detail extensive none

Table 136: show pim join Output Fields (continued)

Field Name	Field Description	Level of Output
Upstream interface	<p>RPF interface toward the source address for the source-specific state (S,G) or toward the rendezvous point (RP) address for the non-source-specific state (*,G).</p> <p>For bidirectional PIM, RP Link means that the interface is directly connected to a subnet that contains a phantom RP address.</p> <p>A pseudo multipoint LDP (M-LDP) interface appears on egress nodes in M-LDP point-to-multipoint LSPs with inband signaling.</p>	brief detail extensive none
Upstream neighbor	<p>Information about the upstream neighbor: Direct, Local, Unknown, or a specific IP address.</p> <p>For bidirectional PIM, Direct means that the interface is directly connected to a subnet that contains a phantom RP address.</p> <p>The multipoint LDP (M-LDP) root appears on egress nodes in M-LDP point-to-multipoint LSPs with inband signaling.</p>	extensive
Upstream rpf-vector	Information about the upstream Reverse Path Forwarding (RPF) vector; appears in conjunction with the rpf-vector command.	extensive
Active upstream interface	When multicast-only fast reroute (MoFRR) is configured in a PIM domain, the upstream interface for the active path. A PIM router propagates join messages on two upstream RPF interfaces to receive multicast traffic on both links for the same join request. Preference is given to two paths that do not converge to the same immediate upstream router. PIM installs appropriate multicast routes with upstream neighbors as RPF next hops with two (primary and backup) interfaces.	extensive
Active upstream neighbor	On the MoFRR primary path, the IP address of the neighbor that is directly connected to the active upstream interface.	extensive
MoFRR Backup upstream interface	<p>The MoFRR upstream interface that is used when the primary path fails.</p> <p>When the primary path fails, the backup path is upgraded to primary, and traffic is forwarded accordingly. If there are alternate paths available, a new backup path is calculated and the appropriate multicast route is updated or installed.</p>	extensive
MoFRR Backup upstream neighbor	IP address of the MoFRR upstream neighbor.	extensive

Table 136: show pim join Output Fields (continued)

Field Name	Field Description	Level of Output
Upstream state	<p>Information about the upstream interface:</p> <ul style="list-style-type: none"> • Join to RP—Sending a join to the rendezvous point. • Join to Source—Sending a join to the source. • Local RP—Sending neither join messages nor prune messages toward the RP, because this routing device is the rendezvous point. • Local Source—Sending neither join messages nor prune messages toward the source, because the source is locally attached to this routing device. • No Prune to RP—Automatically sent to RP when SPT and RPT are on the same path. • Prune to RP—Sending a prune to the rendezvous point. • Prune to Source—Sending a prune to the source. <p>NOTE: RP group range entries have None in the Upstream state field because RP group ranges do not trigger actual PIM join messages between routing devices.</p>	extensive
Downstream neighbors	<p>Information about downstream interfaces:</p> <ul style="list-style-type: none"> • Interface—Interface name for the downstream neighbor. A pseudo PIM-SM interface appears for all IGMP-only interfaces. A pseudo multipoint LDP (Pseudo-MLDP) interface appears on ingress root nodes in M-LDP point-to-multipoint LSPs with inband signaling. • Interface address—Address of the downstream neighbor. • State—Information about the downstream neighbor: join or prune. • Flags—PIM join flags: R (RPtree), S (Sparse), W (Wildcard), or zero. • Uptime—Time since the downstream interface joined the group. • Time since last Join—Time since the last join message was received from the downstream interface. • Time since last Prune—Time since the last prune message was received from the downstream interface. • rpf-vector—IP address of the RPF vector TLV . 	extensive
Number of downstream interfaces	Total number of outgoing interfaces for each (S,G) entry.	extensive
Assert Timeout	Length of time between assert cycles on the downstream interface. Not displayed if the assert timer is null.	extensive
Keepalive timeout	Time remaining until the downstream join state is updated (in seconds). If the downstream join state is not updated before this keepalive timer reaches zero, the entry is deleted. If there is a directly connected host, Keepalive timeout is Infinity .	extensive
Uptime	Time since the creation of (S,G) or (*G) state. The uptime is not refreshed every time a PIM join message is received for an existing (S,G) or (*G) state.	extensive

Table 136: show pim join Output Fields (continued)

Field Name	Field Description	Level of Output
Bidirectional accepting interfaces	<p>Interfaces on the routing device that forward bidirectional PIM traffic.</p> <p>The reasons for forwarding bidirectional PIM traffic are that the interface is the winner of the designated forwarder election (DF Winner), or the interface is the reverse path forwarding (RPF) interface toward the RP (RPF).</p>	extensive

Sample Output

show pim join summary

```

user@host> show pim join summary
Instance: PIM.master Family: INET

Route type      Route count
(s,g)           2
(*,g)           1

Instance: PIM.master Family: INET6

```

show pim join (PIM Sparse Mode)

```

user@host> show pim join
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.1
Source: *
RP: 10.255.14.144
Flags: sparse,rptree,wildcard
Upstream interface: Local

Group: 233.252.0.1
Source: 10.255.14.144
Flags: sparse,spt
Upstream interface: Local

Group: 233.252.0.1
Source: 10.255.70.15
Flags: sparse,spt
Upstream interface: so-1/0/0.0

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

show pim join (Bidirectional PIM)

```

user@host> show pim join
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

```
Group: 233.252.0.1
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.13.2
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0

Group: 233.252.0.2
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.1.3
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0 (RP Link)

Group: 233.252.0.3
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.13.2
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0

Group: 233.252.0.4
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.1.3
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0 (RP Link)

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard
```

show pim join inet6

```
user@host> show pim join inet6

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 2001:db8::e000:101
  Source: *
  RP: ::46.0.0.13
  Flags: sparse,rptree,wildcard
  Upstream interface: Local

Group: 2001:db8::e000:101
  Source: ::1.1.1.1
  Flags: sparse
  Upstream interface: unknown (no neighbor)

Group: 2001:db8::e800:101
  Source: ::1.1.1.1
  Flags: sparse
  Upstream interface: unknown (no neighbor)

Group: 2001:db8::e800:101
  Source: ::1.1.1.2
  Flags: sparse
  Upstream interface: unknown (no neighbor)
```


show pim join inet6 star-g

```

user@host> show pim join inet6 star-g

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 2001:db8::e000:101
Source: *
RP: ::46.0.0.13
Flags: sparse,rptree,wildcard
Upstream interface: Local

```

show pim join instance <instance-name>

```

user@host> show pim join instance VPN-A

Instance: PIM.VPN-A Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.2
Source: *
RP: 10.10.47.100
Flags: sparse,rptree,wildcard
Upstream interface: Local

Group: 233.252.0.2
Source: 192.168.195.74
Flags: sparse,spt
Upstream interface: at-0/3/1.0

Group: 233.252.0.2
Source: 192.168.195.169
Flags: sparse
Upstream interface: so-1/0/1.0

Instance: PIM.VPN-A Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

show pim join instance <instance-name> downstream-count

```

user@host> show pim join instance VPN-A downstream-count

Instance: PIM.SML_VRF_4 Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.1
Source: *
RP: 10.11.11.6
Flags: sparse,rptree,wildcard
Upstream interface: mt-1/2/10.32813
Number of downstream interfaces: 4

Group: 233.252.0.1
Source: 10.1.1.1
Flags: sparse,spt
Upstream interface: ge-0/0/3.5
Number of downstream interfaces: 5

```

show pim join instance <instance-name> downstream-count extensive

```
user@host> show pim join instance VPN-A downstream-count extensive
```

```
Instance: PIM.SML_VRF_4 Family: INET  
R = Rendezvous Point Tree, S = Sparse, W = Wildcard
```

```
Group: 233.252.0.1  
  Source: *  
  RP: 10.11.11.6  
  Flags: sparse,rptree,wildcard  
  Upstream interface: mt-1/2/10.32813  
  Upstream neighbor: 10.2.2.7 (assert winner)  
  Upstream state: Join to RP  
  Uptime: 02:51:41  
  Number of downstream interfaces: 4  
  Number of downstream neighbors: 4
```

```
Group: 233.252.0.1  
  Source: 10.1.1.1  
  Flags: sparse,spt  
  Upstream interface: ge-0/0/3.5  
  Upstream neighbor: 10.1.1.17  
  Upstream state: Join to Source, Prune to RP  
  Keepalive timeout: 0  
  Uptime: 02:51:42  
  Number of downstream interfaces: 5  
  Number of downstream neighbors: 7
```

show pim join detail

```
user@host> show pim join detail
```

```
Instance: PIM.master Family: INET  
R = Rendezvous Point Tree, S = Sparse, W = Wildcard
```

```
Group: 233.252.0.1  
  Source: *  
  RP: 10.255.14.144  
  Flags: sparse,rptree,wildcard  
  Upstream interface: Local
```

```
Group: 233.252.0.1  
  Source: 10.255.14.144  
  Flags: sparse,spt  
  Upstream interface: Local
```

```
Group: 233.252.0.1  
  Source: 10.255.70.15  
  Flags: sparse,spt  
  Upstream interface: so-1/0/0.0
```

```
Instance: PIM.master Family: INET6  
R = Rendezvous Point Tree, S = Sparse, W = Wildcard
```

show pim join extensive (PIM Resolve TLV for Multicast in Seamless MPLS)

```
user@host> show pim join extensive
```

```

Group: 228.26.1.5
  Source: 60.0.0.101
  Flags: sparse,spt
  Upstream interface: ge-5/0/0.1
  Upstream neighbor: 10.100.1.13
  Upstream state: Join to Source
Upstream rpf-vector: 10.100.20.1
  Keepalive timeout: 178
  Uptime: 17:44:38
  Downstream neighbors:
    Interface: xe-2/0/3.1
      203.21.2.190 State: Join Flags: S Timeout: 156
      Uptime: 17:44:38 Time since last Join: 00:00:54
    rpf-vector: 10.100.20.1
    Interface: xe-2/0/2.1
      203.21.1.190 State: Join Flags: S Timeout: 156
      Uptime: 17:44:38 Time since last Join: 00:00:54
    rpf-vector: 10.100.20.2
  Number of downstream interfaces: 2
  Number of downstream neighbors: 2

```

show pim join extensive (PIM Sparse Mode)

```

user@host> show pim join extensive

Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.1
  Source: *
  RP: 10.255.14.144
  Flags: sparse,rptree,wildcard
  Upstream interface: Local
  Upstream neighbor: Local
  Upstream state: Local RP
  Uptime: 00:03:49
  Downstream neighbors:
    Interface: so-1/0/0.0
      10.111.10.2 State: Join Flags: SRW Timeout: 174
      Uptime: 00:03:49 Time since last Join: 00:01:49
    Interface: mt-1/1/0.32768
      10.10.47.100 State: Join Flags: SRW Timeout: Infinity
      Uptime: 00:03:49 Time since last Join: 00:01:49
  Number of downstream interfaces: 2

Group: 233.252.0.1
  Source: 10.255.14.144
  Flags: sparse,spt
  Upstream interface: Local
  Upstream neighbor: Local
  Upstream state: Local Source, Local RP
  Keepalive timeout: 344
  Uptime: 00:03:49
  Downstream neighbors:
    Interface: so-1/0/0.0
      10.111.10.2 State: Join Flags: S Timeout: 174
      Uptime: 00:03:49 Time since last Prune: 00:01:49
    Interface: mt-1/1/0.32768
      10.10.47.100 State: Join Flags: S Timeout: Infinity
      Uptime: 00:03:49 Time since last Prune: 00:01:49

```

```

    Number of downstream interfaces: 2
Group: 233.252.0.1
  Source: 10.255.70.15
  Flags: sparse,spt
  Upstream interface: so-1/0/0.0
  Upstream neighbor: 10.111.10.2
  Upstream state: Local RP, Join to Source
  Keepalive timeout: 344
  Uptime: 00:03:49
  Downstream neighbors:
    Interface: Pseudo-GMP
      fe-0/0/0.0 fe-0/0/1.0 fe-0/0/3.0
    Interface: so-1/0/0.0 (pruned)
      10.111.10.2 State: Prune Flags: SR Timeout: 174
      Uptime: 00:03:49 Time since last Prune: 00:01:49
    Interface: mt-1/1/0.32768
      10.10.47.100 State: Join Flags: S   Timeout: Infinity
      Uptime: 00:03:49 Time since last Prune: 00:01:49
  Number of downstream interfaces: 3

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

show pim join extensive (Bidirectional PIM)

```

user@host> show pim join extensive

Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.0
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.13.2
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0
  Upstream neighbor: 10.10.1.2
  Upstream state: None
  Uptime: 00:03:49
  Bidirectional accepting interfaces:
    Interface: ge-0/0/1.0      (RPF)
    Interface: lo0.0           (DF Winner)
  Number of downstream interfaces: 0

Group: 233.252.0.1
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.13.2
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0
  Upstream neighbor: 10.10.1.2
  Upstream state: None
  Uptime: 00:03:49
  Bidirectional accepting interfaces:
    Interface: ge-0/0/1.0      (RPF)
    Interface: lo0.0           (DF Winner)
  Downstream neighbors:
    Interface: lt-1/0/10.24
      10.0.24.4 State: Join   RW   Timeout: 185

```

```

        Interface: lt-1/0/10.23
            10.0.23.3 State: Join   RW   Timeout: 184
        Number of downstream interfaces: 2

Group: 233.252.0.2
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.1.3
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0 (RP Link)
  Upstream neighbor: Direct
  Upstream state: Local RP
  Uptime: 00:03:49
  Bidirectional accepting interfaces:
    Interface: ge-0/0/1.0      (RPF)
    Interface: lo0.0           (DF Winner)
    Interface: xe-4/1/0.0      (DF Winner)
  Number of downstream interfaces: 0

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

show pim join extensive (Bidirectional PIM with a Directly Connected Phantom RP)

```

user@host> show pim join extensive

Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.0
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.1.3
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0 (RP Link)
  Upstream neighbor: Direct
  Upstream state: Local RP
  Uptime: 00:03:49
  Bidirectional accepting interfaces:
    Interface: ge-0/0/1.0      (RPF)
    Interface: lo0.0           (DF Winner)
    Interface: xe-4/1/0.0      (DF Winner)
  Number of downstream interfaces: 0

```

show pim join instance <instance-name> extensive

```

user@host> show pim join instance VPN-A extensive

Instance: PIM.VPN-A Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.2
  Source: *
  RP: 10.10.47.100
  Flags: sparse,rptree,wildcard
  Upstream interface: Local
  Upstream neighbor: Local
  Upstream state: Local RP
  Uptime: 00:03:49

```

```
Downstream neighbors:
  Interface: mt-1/1/0.32768
    10.10.47.101 State: Join Flags: SRW Timeout: 156
    Uptime: 00:03:49 Time since last Join: 00:01:49
  Number of downstream interfaces: 1

Group: 233.252.0.2
  Source: 192.168.195.74
  Flags: sparse,spt
  Upstream interface: at-0/3/1.0
  Upstream neighbor: 10.111.30.2
  Upstream state: Local RP, Join to Source
  Keepalive timeout: 156
  Uptime: 00:14:52

Group: 233.252.0.2
  Source: 192.168.195.169
  Flags: sparse
  Upstream interface: so-1/0/1.0
  Upstream neighbor: 10.111.20.2
  Upstream state: Local RP, Join to Source
  Keepalive timeout: 156
  Uptime: 00:14:52
```

show pim join extensive (Ingress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show pim join extensive

Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.1
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 11:27:55
  Downstream neighbors:
    Interface: Pseudo-MLDP
    Interface: lt-1/2/0.25
      10.2.5.2 State: Join Flags: S Timeout: Infinity
      Uptime: 11:27:55 Time since last Join: 11:27:55

Group: 233.252.0.2
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 11:27:41
  Downstream neighbors:
    Interface: Pseudo-MLDP

Group: 233.252.0.3
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
```

```

Upstream neighbor: Direct
Upstream state: Local Source
Keepalive timeout:
Uptime: 11:27:41
Downstream neighbors:
    Interface: Pseudo-MLDP

Group: 233.252.0.22
Source: 10.2.7.7
Flags: sparse,spt
Upstream interface: lt-1/2/0.27
Upstream neighbor: Direct
Upstream state: Local Source
Keepalive timeout:
Uptime: 11:27:25
Downstream neighbors:
    Interface: Pseudo-MLDP

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 2001:db8::1:2
Source: 2001:db8::1:2:7:7
Flags: sparse,spt
Upstream interface: lt-1/2/0.27
Upstream neighbor: Direct
Upstream state: Local Source
Keepalive timeout:
Uptime: 11:27:26
Downstream neighbors:
    Interface: Pseudo-MLDP

```

show pim join extensive (Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show pim join extensive

Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.0
Source: *
RP: 10.1.1.1
Flags: sparse,rptree,wildcard
Upstream interface: Local
Upstream neighbor: Local
Upstream state: Local RP
Uptime: 11:31:33
Downstream neighbors:
    Interface: fe-1/3/0.0
        192.168.209.9 State: Join Flags: SRW Timeout: Infinity
        Uptime: 11:31:33 Time since last Join: 11:31:32

Group: 233.252.0.1
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <10.1.1.2>
Upstream state: Join to Source
Keepalive timeout:

```

```

Uptime: 11:31:32
Downstream neighbors:
  Interface: so-0/1/3.0
    192.168.92.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 11:31:30 Time since last Join: 11:31:30
Downstream neighbors:
  Interface: fe-1/3/0.0
    192.168.209.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 11:31:32 Time since last Join: 11:31:32

Group: 233.252.0.2
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <10.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 11:31:32
Downstream neighbors:
  Interface: so-0/1/3.0
    192.168.92.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 11:31:30 Time since last Join: 11:31:30
Downstream neighbors:
  Interface: lt-1/2/0.14
    10.1.4.4 State: Join Flags: S Timeout: 177
    Uptime: 11:30:33 Time since last Join: 00:00:33
Downstream neighbors:
  Interface: fe-1/3/0.0
    192.168.209.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 11:31:32 Time since last Join: 11:31:32

Group: 233.252.0.3
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <10.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 11:31:32
Downstream neighbors:
  Interface: fe-1/3/0.0
    192.168.209.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 11:31:32 Time since last Join: 11:31:32

Group: 233.252.0.22
Source: 10.2.7.7
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <10.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 11:31:30
Downstream neighbors:
  Interface: so-0/1/3.0
    192.168.92.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 11:31:30 Time since last Join: 11:31:30

```



```
Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 2001:db8::1:2
  Source: 2001:db8::1:2:7:7
  Flags: sparse,spt
  Upstream protocol: MLDP
  Upstream interface: Pseudo MLDP
  Upstream neighbor: MLDP LSP root <10.1.1.2>
  Upstream state: Join to Source
  Keepalive timeout:
  Uptime: 11:31:32
  Downstream neighbors:
    Interface: fe-1/3/0.0
      2001:db8::21f:12ff:fea5:c4db State: Join Flags: S   Timeout: Infinity

      Uptime: 11:31:32 Time since last Join: 11:31:32
```

show pim mdt

Syntax `show pim mdt instance instance-name`
 `<brief | detail | extensive>`
 `data-mdt-joins`
 `data-mdt-limit`
 `inet`
 `inet6`
 `<incoming | outgoing>`
 `<logical-system (all | logical-system-name)>`
 `<range>`

Release Information Command introduced before Junos OS Release 7.4.
 Support for IPv6 added in Junos OS Release 17.3R1.

Description Display information about Protocol Independent Multicast (PIM) default multicast distribution tree (MDT) and the data MDTs in a Layer 3 VPN environment for a routing instance.

Options **instance *instance-name***—Display information about data-MDTs for a specific PIM-enabled routing instance.

brief | detail | extensive—(Optional) Display the specified level of output.

data-mdt-joins— Show received PIM data-mdt-joins.

data-mdt-limits— Show received PIM data-mdt-limits.

incoming | outgoing—(Optional) Display incoming or outgoing multicast data tunnels, respectively.

inet | inet6—Display IPv4 or IPv6 multicast data tunnels.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

range—(Optional) Display information about an IP address with optional prefix length representing a particular multicast group.

Required Privilege Level view

List of Sample Output [show pim mdt <variables> instance on page 1991](#)
 [show pim mdt instance detail on page 1992](#)
 [show pim mdt instance extensive on page 1992](#)
 [show pim mdt instance incoming on page 1993](#)
 [show pim mdt instance outgoing on page 1993](#)
 [show pim mdt instance \(SSM Mode\) on page 1993](#)

Output Fields Table 137 on page 1991 describes the output fields for the **show pim mdt** command. Output fields are listed in the approximate order in which they appear.

Table 137: show pim mdt Output Fields

Field Name	Field Description	Level of Output
Instance	Name of the routing instance.	All levels
Tunnel direction	Direction the tunnel faces, from the router's perspective: Outgoing or Incoming .	All levels
Tunnel mode	Mode the tunnel is operating in: PIM-SSM or PIM-ASM .	All levels
Default group address	Default multicast group address using this tunnel.	All levels
Default source address	Default multicast source address using this tunnel.	All levels
Default tunnel interface	Default multicast tunnel interface.	All levels
Default tunnel source	Address used as the source address for outgoing PIM control messages.	All levels
C-Group	Customer-facing multicast group address using this tunnel. If you enable dynamic reuse of data MDT group addresses, more than one group address can use the same data MDT.	detail
C-Source	IP address of the multicast source in the customer's address space. If you enable dynamic reuse of data MDT group addresses, more than one source address can use the same data MDT.	detail
P-Group	Service provider-facing multicast group address using this tunnel.	detail
Data tunnel interface	Multicast data tunnel interface that set up the data-MDT tunnel.	detail
Last known forwarding rate	Last known rate, in kilobits per second, at which the tunnel was forwarding traffic.	detail
Configured threshold rate	Rate, in kilobits per second, above which a data-MDT tunnel is created and below which it is deleted.	detail
Tunnel uptime	Time that this data-MDT tunnel has existed. The format is <i>hours:minutes:seconds</i> .	detail

Sample Output

show pim mdt <variables> instance

Use this command to display MDT information for default MDT and data-MDT for IPv4 and/or IPv6 traffic.)

```
user@host> show pim mdt inet | inet6 instance VPN-A
```

```
Instance: PIM.VPN-A Family: INET
Tunnel direction: Outgoing
Tunnel mode: PIM-SM
Default group address: 224.1.1.1
Default source address: 0.0.0.0
Default tunnel interface: mt-0/0/0.32768
Default tunnel source: 0.0.0.0
```

C-group address	C-source address	P-group address	Data tunnel interface
227.1.1.1	18.1.1.2	228.1.1.1	mt-0/0/0.32769

```
Instance: PIM.VPN-A
Tunnel direction: Incoming
Tunnel mode: PIM-SM
Default group address: 224.1.1.1
Default source address: 0.0.0.0
Default tunnel interface: mt-0/0/0.1081344
Default tunnel source: 0.0.0.0
```

```
Instance: PIM.VPN-A Family: INET6
```

show pim mdt instance detail

```
user@host> show pim mdt instance VPN-A detail
```

```
Instance: PIM.VPN-A
Tunnel direction: Outgoing
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.32768
Default tunnel source: 192.168.7.1
```

```
C-Group: 235.1.1.2
  C-Source: 192.168.195.74
  P-Group : 228.0.0.0
  Data tunnel interface      : mt-1/1/0.32769
  Last known forwarding rate : 48 kbps (6 kbps)
  Configured threshold rate  : 10 kbps
  Tunnel uptime              : 00:00:34
```

```
Instance: PIM.VPN-A
Tunnel direction: Incoming
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.1081344
```

show pim mdt instance extensive

```
user@host> show pim mdt instance VPN-A extensive
```

```
Instance: PIM.VPN-A
Tunnel direction: Outgoing
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.32768
Default tunnel source: 192.168.7.1
```

```
C-Group: 235.1.1.2
  C-Source: 192.168.195.74
  P-Group : 228.0.0.0
  Data tunnel interface      : mt-1/1/0.32769
```

```

Last known forwarding rate : 48 kbps (6 kbps)
Configured threshold rate  : 10 kbps
Tunnel uptime              : 00:00:41

```

```

Instance: PIM.VPN-A
Tunnel direction: Incoming
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.1081344

```

show pim mdt instance incoming

```
user@host> show pim mdt instance VPN-A incoming
```

```

Instance: PIM.VPN-A
Tunnel direction: Incoming
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.1081344

```

show pim mdt instance outgoing

```
user@host> show pim mdt instance VPN-A outgoing
```

```

Instance: PIM.VPN-A
Tunnel direction: Outgoing
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.32768
Default tunnel source: 192.168.7.1

```

C-group address	C-source address	P-group address	Data tunnel interface
235.1.1.2	192.168.195.74	228.0.0.0	mt-1/1/0.32769

show pim mdt instance (SSM Mode)

```
user@host> show pim mdt instance vpn-a
```

```

Instance: PIM.vpn-a
Tunnel direction: Outgoing
Tunnel mode: PIM-SSM
Default group address: 232.1.1.1
Default source address: 10.255.14.216
Default tunnel interface: mt-1/3/0.32769
Default tunnel source: 192.168.7.1

```

```

Instance: PIM.vpn-a
Tunnel direction: Incoming
Tunnel mode: PIM-SSM
Default group address: 232.1.1.1
Default source address: 10.255.14.217
Default tunnel interface: mt-1/3/0.1081345

```

```

Instance: PIM.vpn-a
Tunnel direction: Incoming
Tunnel mode: PIM-SSM
Default group address: 232.1.1.1
Default source address: 10.255.14.218
Default tunnel interface: mt-1/3/0.1081345

```

show pim mdt data-mdt-joins

Syntax **show pim mdt data-mdt-joins**
 <logical-system (all | *logical-system-name*)> instance *instance-name*

Release Information Command introduced in Junos OS Release 11.2.

Description In a draft-rosen Layer 3 multicast virtual private network (MVPN) configured with service provider tunnels, display the advertisements of new multicast distribution tree (MDT) group addresses cached by the provider edge (PE) routers in the specified VPN routing and forwarding (VRF) instance that is configured to use the Protocol Independent Multicast (PIM) protocol.

Options **instance *instance-name***—Display data MDT join packets cached by PE routers in a specific PIM instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.



NOTE: Draft-rosen multicast VPNs are not supported in a logical system environment even though the configuration statements can be configured under the logical-systems hierarchy.

Required Privilege Level view

Related Documentation

- *Understanding Data MDTs*
- *Example: Configuring Data MDTs and Provider Tunnels Operating in Source-Specific Multicast Mode*
- *Example: Configuring Data MDTs and Provider Tunnels Operating in Any-Source Multicast Mode*

List of Sample Output [show pim mdt data-mdt-joins on page 1995](#)

Output Fields [Table 138 on page 1995](#) describes the output fields for the **show pim mdt data-mdt-joins** command. Output fields are listed in the approximate order in which they appear.

Table 138: show pim mdt data-mdt-joins Output Fields

Field Name	Field Description
C-Group	IPv4 group address in the address space of the customer's VPN-specific PIM-enabled routing instance of the multicast traffic destination. This 32-bit value is carried in the C-group field of the MDT join TLV packet.
C-Source	IPv4 address in the address space of the customer's VPN-specific PIM-enabled routing instance of the multicast traffic source. This 32-bit value is carried in the C-source field of the MDT join TLV packet.
P-Group	IPv4 group address in the service provider's address space of the new data MDT that the PE router will use to encapsulate the VPN multicast traffic flow (C-Source, C-Group). This 32-bit value is carried in the P-group field of the MDT join TLV packet.
P-Source	IPv4 address of the PE router.
Timeout	Timeout, in seconds, remaining for this cache entry. When the cache entry is created, this field is set to 180 seconds. After an entry times out, the PE router deletes the entry from its cache and prunes itself off the data MDT.

Sample Output

show pim mdt data-mdt-joins

```
user@host show pim mdt data-mdt-joins instance VPN-A
```

C-Source	C-Group	P-Source	P-Group	Timeout
20.2.15.9	225.1.1.2	20.0.0.5	239.10.10.0	172
20.2.15.9	225.1.1.3	20.0.0.5	239.10.10.1	172

show pim mdt data-mdt-limit

Syntax `show pim mdt data-mdt-limit instance instance-name`
`<logical-system (all | logical-system-name)>`

Release Information Command introduced in Junos OS Release 12.2.

Description Display the maximum number configured and the currently active data multicast distribution trees (MDTs) for a specific VPN routing and forwarding (VRF) instance.

Options **instance *instance-name***—Display data MDT information for the specified VRF instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.



NOTE: Draft-rosen multicast VPNs are not supported in a logical system environment even though the configuration statements can be configured under the logical-systems hierarchy.

Required Privilege Level view

Related Documentation

- *Understanding Data MDTs*
- *Example: Configuring Data MDTs and Provider Tunnels Operating in Source-Specific Multicast Mode*
- *Example: Configuring Data MDTs and Provider Tunnels Operating in Any-Source Multicast Mode*

List of Sample Output [show pim mdt data-mdt-limit on page 1997](#)

Output Fields [Table 139 on page 1996](#) describes the output fields for the **show pim mdt data-mdt-limit** command. Output fields are listed in the approximate order in which they appear.

Table 139: show pim mdt data-mdt-limit Output Fields

Field Name	Field Description
Maximum Data Tunnels	Maximum number of data MDTs created in this VRF instance. If the number is 0, no data MDTs are created for this VRF instance.
Active Data Tunnels	Active number of data MDTs in this VRF instance.

Sample Output

show pim mdt data-mdt-limit

```
user@host show pim mdt data-mdt-limit instance VPN-A
```

Maximum Data Tunnels	10
Active Data Tunnels	2

show pim neighbors

List of Syntax	Syntax on page 1998 Syntax (EX Series Switch and the QFX Series) on page 1998
Syntax	<pre>show pim neighbors <brief detail> <inet inet6> <instance (instance-name all)> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>show pim neighbors <brief detail> <inet inet6> <instance (instance-name all)></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>inet6 and instance options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Support for bidirectional PIM added in Junos OS Release 12.1.</p> <p>Support for the instance all option added in Junos OS Release 12.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Support for RFC 5496 (via rpf-vector) added in Junos OS Release 17.3R1.</p>
Description	Display information about Protocol Independent Multicast (PIM) neighbors.
Options	<p>none—(Same as brief) Display standard information about PIM neighbors for all supported family addresses for the main instance.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>inet inet6—(Optional) Display information about PIM neighbors for IPv4 or IPv6 family addresses, respectively.</p> <p>instance (instance-name all)—(Optional) Display information about neighbors for the specified PIM-enabled routing instance or for all routing instances.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show pim neighbors on page 2000 show pim neighbors instance on page 2000 show pim neighbors detail on page 2001

[show pim neighbors detail \(With BFD\) on page 2001](#)

Output Fields [Table 140 on page 1999](#) describes the output fields for the **show pim neighbors** command. Output fields are listed in the approximate order in which they appear.

Table 140: show pim neighbors Output Fields

Field Name	Field Description	Level of Output
Instance	Name of the routing instance.	All levels
Interface	Interface through which the neighbor is reachable.	All levels
Neighbor addr	Address of the neighboring PIM routing device.	All levels
IP	IP version: 4 or 6.	All levels
V	PIM version running on the neighbor: 1 or 2.	All levels
Mode	PIM mode of the neighbor: Sparse , Dense , SparseDense , or Unknown . When the neighbor is running PIM version 2, this mode is always Unknown .	All levels
Option	Can be one or more of the following: <ul style="list-style-type: none"> • B—Bidirectional Capable. • G—Generation Identifier. • H—Hello Option Holdtime. • L—Hello Option LAN Prune Delay. • P—Hello Option DR Priority. • T—Tracking bit. • A—Join attribute; used in conjunction with pim rpf-vector. 	brief none
Uptime	Time the neighbor has been operational since the PIM process was last initialized. Starting in Junos OS release 17.3R1, uptime is not reset during ISSU. The time format is as follows: dd:hh:mm:ss ago for less than a week and nwnd:hh:mm:ss ago for more than a week.	All levels
Address	Address of the neighboring PIM routing device.	detail
BFD	Status and operational state of the Bidirectional Forwarding Detection (BFD) protocol on the interface: Enabled , Operational state is up , or Disabled .	detail
Hello Option Holdtime	Time for which the neighbor is available, in seconds. The range of values is 0 through 65,535.	detail
Hello Default Holdtime	Default holdtime and the time remaining if the holdtime option is not in the received hello message.	detail
Hello Option DR Priority	Designated router election priority. The range of values is 0 through 255.	detail

Table 140: show pim neighbors Output Fields (continued)

Field Name	Field Description	Level of Output
Hello Option Join Attribute	Appears in conjunction with the rpf-vector command. The Join attribute is included in the PIM join messages of PIM routers that can receive type 1 Encoded-Source Address.	detail
Hello Option Generation ID	9-digit or 10-digit number used to tag hello messages.	detail
Hello Option Bi-Directional PIM supported	Neighbor can process bidirectional PIM messages.	detail
Hello Option LAN Prune Delay	Time to wait before the neighbor receives prune messages, in the format delay nnn ms override nnnn ms .	detail
Join Suppression supported	Neighbor is capable of join suppression.	detail
Rx Join	Information about joins received from the neighbor. <ul style="list-style-type: none"> Group—Group addresses in the join message. Source—Address of the source in the join message. Timeout—Time for which the join is valid. 	detail

Sample Output

show pim neighbors

```
user@host> show pim neighbors
```

```
Instance: PIM.master
B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking bit
A = Hello Option Join Attribute

Instance: PIM.master
Interface  IP V Mode      Option      Uptime Neighbor addr
ae0.0      4 2             HPLGTA     19:01:24 20.0.0.13
ae1.0      4 2             HPLGTA     19:01:24 20.0.0.149
```

show pim neighbors instance

```
user@host> show pim neighbors instance VPN-A
```

```
Instance: PIM.VPN-A
B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking bit

Interface      IP V Mode      Option      Uptime Neighbor addr
at-0/3/1.0     4 2            HPLG        00:07:54 10.111.30.2
```

mt-1/1/0.32768	4 2	HPLG	00:07:22 10.10.47.101
so-1/0/1.0	4 2	HPLG	00:07:50 10.111.20.2

show pim neighbors detail

```
user@host> show pim neighbors detail
```

```
Instance: PIM.master
```

```
Interface: ae1.0
```

```
Address: 20.0.0.149, IPv4, PIM v2, sg Join Count: 0, tsf Join Count: 332
```

```
BFD: Disabled
```

```
Hello Option Holdtime: 105 seconds 86 remaining
```

```
Hello Option DR Priority: 1
```

```
Hello Option Generation ID: 853386212
```

```
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
```

```
Join Suppression supported
```

```
Hello Option Join Attribute supported
```

```
Address: 20.0.0.150, IPv4, PIM v2, Mode: SparseDense, sg Join Count: 0, tsf Join Count: 0
```

```
Hello Option Holdtime: 65535 seconds
```

```
Hello Option DR Priority: 1
```

```
Hello Option Generation ID: 358917871
```

```
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
```

```
Join Suppression supported
```

```
Hello Option Join Attribute supported
```

```
Interface: lo0.0
```

```
Address: 10.255.179.246, IPv4, PIM v2, Mode: SparseDense, sg Join Count: 0, tsf Join Count: 0
```

```
Hello Option Holdtime: 65535 seconds
```

```
Hello Option DR Priority: 1
```

```
Hello Option Generation ID: 1997462267
```

```
Hello Option Bi-Directional PIM supported
```

```
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
```

```
Join Suppression supported
```

show pim neighbors detail (With BFD)

```
user@host> show pim neighbors detail
```

```
Instance: PIM.master
```

```
Interface: fe-1/0/0.0
```

```
Address: 192.168.11.1, IPv4, PIM v2, Mode: Sparse
```

```
Hello Option Holdtime: 65535 seconds
```

```
Hello Option DR Priority: 1
```

```
Hello Option Generation ID: 836607909
```

```
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
```

```
Address: 192.168.11.2, IPv4, PIM v2
```

```
BFD: Enabled, Operational state is up
```

```
Hello Default Holdtime: 105 seconds 104 remaining
```

```
Hello Option DR Priority: 1
```

```
Hello Option Generation ID: 1907549685
```

```
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
```

```
Interface: fe-1/0/1.0
  Address: 192.168.12.1,      IPv4, PIM v2
    BFD: Disabled
    Hello Default Holdtime: 105 seconds 80 remaining
    Hello Option DR Priority: 1
    Hello Option Generation ID: 1971554705
    Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
```

show pim rps

List of Syntax [Syntax on page 2003](#)
 [Syntax \(EX Series Switch and the QFX Series\) on page 2003](#)

Syntax

```
show pim rps
<brief | detail | extensive>
<group-address>
<inet | inet6>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switch and the QFX Series)

```
show pim rps
<brief | detail | extensive>
<group-address>
<inet | inet6>
<instance instance-name>
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 inet6 and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Support for bidirectional PIM added in Junos OS Release 12.1.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display information about Protocol Independent Multicast (PIM) rendezvous points (RPs).

Options **none**—Display standard information about PIM RPs for all groups and family addresses for all routing instances.

brief | detail | extensive—(Optional) Display the specified level of output.

group-address—(Optional) Display the RPs for a particular group. If you specify a group address, the output lists the routing device that is the RP for that group.

inet | inet6—(Optional) Display information for IPv4 or IPv6 family addresses, respectively.

instance instance-name—(Optional) Display information about RPs for a specific PIM-enabled routing instance.

logical-system (all | logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation • [Example: Configuring Bidirectional PIM](#)

List of Sample Output [show pim rps on page 2006](#)
[show pim rps brief on page 2007](#)
[show pim rps <group-address> on page 2007](#)
[show pim rps <group-address> on page 2007](#)
[show pim rps <group-address> \(Bidirectional PIM\) on page 2007](#)
[show pim rps <group-address> \(PIM Dense Mode\) on page 2007](#)
[show pim rps <group-address> \(SSM Range Without asm-override-ssm Configured\) on page 2007](#)
[show pim rps <group-address> \(SSM Range With asm-override-ssm Configured and a Sparse-Mode RP\) on page 2008](#)
[show pim rps <group-address> \(SSM Range With asm-override-ssm Configured and a Bidirectional RP\) on page 2008](#)
[show pim rps instance on page 2008](#)
[show pim rps extensive \(PIM Sparse Mode\) on page 2008](#)
[show pim rps extensive \(Bidirectional PIM\) on page 2009](#)
[show pim rps extensive \(PIM Anycast RP in Use\) on page 2009](#)

Output Fields [Table 141 on page 2004](#) describes the output fields for the **show pim rps** command. Output fields are listed in the approximate order in which they appear.

Table 141: show pim rps Output Fields

Field Name	Field Description	Level of Output
Instance	Name of the routing instance.	All levels
Family or Address family	Name of the address family: inet (IPv4) or inet6 (IPv6).	All levels
RP address	Address of the rendezvous point.	All levels
Type	Type of RP: <ul style="list-style-type: none"> • auto-rp—Address of the RP known through the Auto-RP protocol. • bootstrap—Address of the RP known through the bootstrap router protocol (BSR). • embedded—Address of the RP known through an embedded RP (IPv6). • static—Address of RP known through static configuration. 	brief none
Holdtime	How long to keep the RP active, with time remaining, in seconds.	All levels
Timeout	How long until the local routing device determines the RP to be unreachable, in seconds.	All levels
Groups	Number of groups currently using this RP.	All levels
Group prefixes	Addresses of groups that this RP can span.	brief none

Table 141: show pim rps Output Fields (continued)

Field Name	Field Description	Level of Output
Learned via	Address and method by which the RP was learned.	detail extensive
Mode	The PIM mode of the RP: bidirectional or sparse. If a sparse and bidirectional RPs are configured with the same RP address, they appear as separate entries in both formats.	All levels
Time Active	How long the RP has been active, in the format <i>hh:mm:ss</i> .	detail extensive
Device Index	Index value of the order in which Junos OS finds and initializes the interface. For bidirectional RPs, the Device Index output field is omitted because bidirectional RPs do not require encapsulation and de-encapsulation interfaces.	detail extensive
Subunit	Logical unit number of the interface. For bidirectional RPs, the Subunit output field is omitted because bidirectional RPs do not require encapsulation and de-encapsulation interfaces.	detail extensive
Interface	Either the encapsulation or the de-encapsulation logical interface, depending on whether this routing device is a designated router (DR) facing an RP router, or is the local RP, respectively. For bidirectional RPs, the Interface output field is omitted because bidirectional RPs do not require encapsulation and de-encapsulation interfaces.	detail extensive
Group Ranges	Addresses of groups that this RP spans.	detail extensive <i>group-address</i>
Active groups using RP	Number of groups currently using this RP.	detail extensive
total	Total number of active groups for this RP.	detail extensive

Table 141: show pim rps Output Fields (continued)

Field Name	Field Description	Level of Output
Register State for RP	<p>Current register state for each group:</p> <ul style="list-style-type: none"> • Group—Multicast group address. • Source—Multicast source address for which the PIM register is sent or received, depending on whether this router is a designated router facing an RP router, or is the local RP, respectively: • First Hop—PIM-designated routing device that sent the Register message (the source address in the IP header). • RP Address—RP to which the Register message was sent (the destination address in the IP header). • State: <ul style="list-style-type: none"> On the designated router: <ul style="list-style-type: none"> • Send—Sending Register messages. • Probe—Sent a null register. If a Register-Stop message does not arrive in 5 seconds, the designated router resumes sending Register messages. • Suppress—Received a Register-Stop message. The designated router is waiting for the timer to resume before changing to Probe state. On the RP: <ul style="list-style-type: none"> • Receive—Receiving Register messages. 	extensive
Anycast-PIM rpset	If anycast RP is configured, the addresses of the RPs in the set.	extensive
Anycast-PIM local address used	If anycast RP is configured, the local address used by the RP.	extensive
Anycast-PIM Register State	<p>If anycast RP is configured, the current register state for each group:</p> <ul style="list-style-type: none"> • Group—Multicast group address. • Source—Multicast source address for which the PIM register is sent or received, depending on whether this routing device is a designated router facing an RP router, or is the local RP, respectively. • Origin—How the information was obtained: <ul style="list-style-type: none"> • DIRECT—From a local attachment • MSDP—From the Multicast Source Discovery Protocol (MSDP) • DR—From the designated router 	extensive
RP selected	For sparse mode and bidirectional mode, the identity of the RP for the specified group address.	<i>group-address</i>

Sample Output

show pim rps

```

user@host> show pim rps

Instance: PIM.master

Address-family INET

```

RP address	Type	Mode	Holdtime	Timeout	Groups	Group prefixes
10.100.100.100	auto-rp	sparse	150	146	0	233.252.0.0/8 233.252.0.1/24
10.200.200.200	auto-rp	sparse	150	146	0	233.252.0.2/4

address-family INET6

show pim rps brief

The output for the **show pim rps brief** command is identical to that for the **show pim rps** command. For sample output, see [show pim rps on page 2006](#).

show pim rps <group-address>

```
user@host> show pim rps 233.252.0.0
Instance: PIM.master
Instance: PIM.master

RP selected: 10.100.100.100
```

show pim rps <group-address>

```
user@host> show pim rps 233.252.0.0
Instance: PIM.master
Instance: PIM.master

RP selected: 10.100.100.100
```

show pim rps <group-address> (Bidirectional PIM)

```
user@host> show pim rps 233.252.0.1
Instance: PIM.master

233.252.0.0/16
  10.4.12.75 (Bidirectional)

RP selected: 10.4.12.75
```

show pim rps <group-address> (PIM Dense Mode)

```
user@host> show pim rps 233.252.0.1
Instance: PIM.master

Dense Mode active for group 233.252.0.1
```

show pim rps <group-address> (SSM Range Without asm-override-ssm Configured)

```
user@host> show pim rps 233.252.0.1
Instance: PIM.master

Source-specific Mode (SSM) active for group 233.252.0.1
```

show pim rps <group-address> (SSM Range With asm-override-ssm Configured and a Sparse-Mode RP)

```
user@host> show pim rps 233.252.0.1
Instance: PIM.master

Source-specific Mode (SSM) active with Sparse Mode ASM override for group
233.252.0.1

233.252.0.0/16
    10.4.12.75

RP selected: 10.4.12.75
```

show pim rps <group-address> (SSM Range With asm-override-ssm Configured and a Bidirectional RP)

```
user@host> show pim rps 233.252.0.1
Instance: PIM.master

Source-specific Mode (SSM) active with Sparse Mode ASM override for group
233.252.0.1

233.252.0.0/16
    10.4.12.75 (Bidirectional)

RP selected: (null)
```

show pim rps instance

```
user@host> show pim rps instance VPN-A
Instance: PIM.VPN-A
Address family INET
RP address          Type          Holdtime Timeout Groups Group prefixes
10.10.47.100        static        0          None      1 233.252.0.0/4
Address family INET6
```

show pim rps extensive (PIM Sparse Mode)

```
user@host> show pim rps extensive
Instance: PIM.master

Family: INET
RP: 10.255.245.91
Learned via: static configuration
Time Active: 00:05:48
Holdtime: 45 with 36 remaining
Device Index: 122
Subunit: 32768
Interface: pd-6/0/0.32768
Group Ranges:
    233.252.0.0/4, 36s remaining
Active groups using RP:
    233.252.0.1

    total 1 groups active
```

```

Register State for RP:
Group          Source          FirstHop          RP Address          State          Timeout
233.252.0.1    192.168.195.78  10.255.14.132    10.255.245.91      Receive
0

```

show pim rps extensive (Bidirectional PIM)

```

user@host> show pim rps extensive

Instance: PIM.master
Address family INET

RP: 10.10.1.3
Learned via: static configuration
Mode: Bidirectional
Time Active: 01:58:07
Holdtime: 150
Group Ranges:
    233.252.0.0/24
    233.252.0.01/24

RP: 10.10.13.2
Learned via: static configuration
Mode: Bidirectional
Time Active: 01:58:07
Holdtime: 150
Group Ranges:
    233.252.0.3/24
    233.252.0.4/24

```

show pim rps extensive (PIM Anycast RP in Use)

```

user@host> show pim rps extensive

Instance: PIM.master

Family: INET
RP: 10.10.10.2
Learned via: static configuration
Time Active: 00:54:52
Holdtime: 0
Device Index: 130
Subunit: 32769
Interface: pimd.32769
Group Ranges:
    233.252.0.0/4
Active groups using RP:
    233.252.0.10

    total 1 groups active

Anycast-PIM rpset:
    10.100.111.34
    10.100.111.17
    10.100.111.55

Anycast-PIM local address used: 10.100.111.1
Anycast-PIM Register State:

```

Group	Source	Origin
233.252.0.1	10.10.95.2	DIRECT
233.252.0.2	10.10.95.2	DIRECT
233.252.0.3	10.10.70.1	MSDP
233.252.0.4	10.10.70.1	MSDP
233.252.0.5	10.10.71.1	DR

Address family INET6

Anycast-PIM rpset:

ab::1

ab::2

Anycast-PIM local address used: cd::1

Anycast-PIM Register State:

Group	Source	Origin
::224.1.1.1	::10.10.95.2	DIRECT
::224.1.1.2	::10.10.95.2	DIRECT
::224.20.20.1	::10.10.71.1	DR

show pim snooping interfaces

Syntax	<pre>show pim snooping interfaces <brief detail> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system <i>logical-system-name</i>> <vlan-id <i>vlan-identifier</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 12.3 for MX Series 5G Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.</p>
Description	Display information about PIM snooping interfaces.
Options	<p>none—Display detailed information.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>instance <instance-name>—(Optional) Display PIM snooping interface information for the specified routing instance.</p> <p>interface <interface-name>—(Optional) Display PIM snooping information for the specified interface only.</p> <p>logical-system logical-system-name—(Optional) Display information about a particular logical system, or type 'all'.</p> <p>vlan-id <vlan-identifier>—(Optional) Display PIM snooping interface information for the specified VLAN.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>PIM Snooping for VPLS</i>
List of Sample Output	<p>show pim snooping interfaces on page 2012</p> <p>show pim snooping interfaces instance vpls1 on page 2012</p> <p>show pim snooping interfaces interface <interface-name> on page 2013</p> <p>show pim snooping interfaces vlan-id <vlan-id> on page 2013</p>
Output Fields	<p>Table 142 on page 2012 lists the output fields for the show pim snooping interface command. Output fields are listed in the approximate order in which they appear.</p>

Table 142: show pim snooping interface Output Fields

Field Name	Field Description	Level of Output
Instance	Routing instance for PIM snooping.	All levels
Learning-Domain	Learning domain for snooping.	All levels
Name	Router interfaces that are part of this learning domain.	All levels
State	State of the interface: Up , or Down .	All levels
IP-Version	Version of IP used: 4 for IPv4, or 6 for IPv6.	All levels
NbrCnt	Number of neighboring routers connected through the specified interface.	All levels
DR address	IP address of the designated router.	All levels

Sample Output

show pim snooping interfaces

```
user@host> show pim snooping interfaces
```

```
Instance: vpls1
Learning-Domain: vlan-id 10
Name State IP-Version NbrCnt
ge-1/3/1.10 Up 4 1
ge-1/3/3.10 Up 4 1
ge-1/3/5.10 Up 4 1
ge-1/3/7.10 Up 4 1
DR address: 192.0.2.5
DR flooding is ON
```

```
Learning-Domain: vlan-id 20
Name State IP-Version NbrCnt
ge-1/3/1.20 Up 4 1
ge-1/3/3.20 Up 4 1
ge-1/3/5.20 Up 4 1
ge-1/3/7.20 Up 4 1
DR address: 192.0.2.6
DR flooding is ON
```

show pim snooping interfaces instance vpls1

```
user@host> show pim snooping interfaces instance vpls1
```

```
Instance: vpls1

Learning-Domain: vlan-id 10
Name State IP-Version NbrCnt
ge-1/3/1.10 Up 4 1
ge-1/3/3.10 Up 4 1
ge-1/3/5.10 Up 4 1
ge-1/3/7.10 Up 4 1
DR address: 192.0.2.5
```



```

DR flooding is ON

Learning-Domain: vlan-id 20
Name State IP-Version NbrCnt
ge-1/3/1.20 Up 4 1
ge-1/3/3.20 Up 4 1
ge-1/3/5.20 Up 4 1
ge-1/3/7.20 Up 4 1
DR address: 192.0.2.6
DR flooding is ON

```

show pim snooping interfaces interface <interface-name>

```

user@host> show pim snooping interfaces interface ge-1/3/1.10

Instance: vpls1
Learning-Domain: vlan-id 10

Name State IP-Version NbrCnt
ge-1/3/1.10 Up 4 1
DR address: 192.0.2.5
DR flooding is ON

Learning-Domain: vlan-id 20
DR address: 192.0.2.6
DR flooding is ON

```

show pim snooping interfaces vlan-id <vlan-id>

```

user@host> show pim snooping interfaces vlan-id 10

Instance: vpls1
Learning-Domain: vlan-id 10

Name State IP-Version NbrCnt
ge-1/3/1.10 Up 4 1
ge-1/3/3.10 Up 4 1
ge-1/3/5.10 Up 4 1
ge-1/3/7.10 Up 4 1
DR address: 192.0.2.5
DR flooding is ON

```

show pim snooping join

Syntax	<pre>show pim snooping join <brief detail extensive> <instance <i>instance-name</i>> <logical-system <i>logical-system-name</i>> <vlan-id <i>vlan-id</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 12.3 for MX Series 5G Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.</p>
Description	Display information about Protocol Independent Multicast (PIM) snooping joins.
Options	<p>none—Display detailed information.</p> <p>brief detail extensive—(Optional) Display the specified level of output.</p> <p>instance <i>instance-name</i>—(Optional) Display PIM snooping join information for the specified routing instance.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p>vlan-id <i>vlan-identifier</i>—(Optional) Display PIM snooping join information for the specified VLAN.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> <i>PIM Snooping for VPLS</i>
List of Sample Output	<p>show pim snooping join on page 2016</p> <p>show pim snooping join extensive on page 2016</p> <p>show pim snooping join instance on page 2016</p> <p>show pim snooping join vlan-id on page 2017</p>
Output Fields	<p>Table 143 on page 2014 lists the output fields for the show pim snooping join command. Output fields are listed in the approximate order in which they appear.</p>

Table 143: show pim snooping join Output Fields

Field Name	Field Description	Level of Output
Instance	Routing instance for PIM snooping.	All levels
Learning-Domain	Learning domain for PIM snooping.	All levels

Table 143: show pim snooping join Output Fields (continued)

Field Name	Field Description	Level of Output
Group	Multicast group address.	All levels
Source	Multicast source address: <ul style="list-style-type: none"> • * (wildcard value) • <ipv4-address> • <ipv6-address> 	All levels
Flags	PIM flags: <ul style="list-style-type: none"> • bidirectional—Bidirectional mode entry. • dense—Dense mode entry. • rptree—Entry is on the rendezvous point tree. • sparse—Sparse mode entry. • spt—Entry is on the shortest-path tree for the source. • wildcard—Entry is on the shared tree. 	All levels
Upstream state	Information about the upstream interface: <ul style="list-style-type: none"> • Join to RP—Sending a join to the rendezvous point. • Join to Source—Sending a join to the source. • Local RP—Sending neither join messages nor prune messages toward the RP, because this router is the rendezvous point. • Local Source—Sending neither join messages nor prune messages toward the source, because the source is locally attached to this routing device. • Prune to RP—Sending a prune to the rendezvous point. • Prune to Source—Sending a prune to the source. <p>NOTE: RP group range entries have None in the Upstream state field because RP group ranges do not trigger actual PIM join messages between routers.</p>	All levels
Upstream neighbor	Information about the upstream neighbor: Direct , Local , Unknown , or a specific IP address. For bidirectional PIM, Direct means that the interface is directly connected to a subnet that contains a phantom RP address.	All levels
Upstream port	RPF interface toward the source address for the source-specific state (S,G) or toward the rendezvous point (RP) address for the non-source-specific state (*G). For bidirectional PIM, RP Link means that the interface is directly connected to a subnet that contains a phantom RP address.	All levels
Downstream port	Information about downstream interfaces.	extensive
Downstream neighbors	Address of the downstream neighbor.	extensive
Timeout	Time remaining until the downstream join state is updated (in seconds).	extensive

Sample Output

show pim snooping join

```
user@host> show pim snooping join
Instance: vpls1

Learning-Domain: vlan-id 10
Group: 198.51.100.2
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.10

Learning-Domain: vlan-id 20
Group: 198.51.100.3
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 203.0.113.4, port: ge-1/3/5.20
```

show pim snooping join extensive

```
user@host> show pim snooping join extensive
Instance: vpls1
Learning-Domain: vlan-id 10

Group: 198.51.100.2
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.10
Downstream port: ge-1/3/1.10
Downstream neighbors:
192.0.2.2 State: Join Flags: SRW Timeout: 166

Learning-Domain: vlan-id 20
Group: 198.51.100.3
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 203.0.113.4, port: ge-1/3/5.20
Downstream port: ge-1/3/3.20
Downstream neighbors:
203.0.113.3 State: Join Flags: SRW Timeout: 168
```

show pim snooping join instance

```
user@host> show pim snooping join instance vpls1
Instance: vpls1

Learning-Domain: vlan-id 10
Group: 198.51.100.2
Source: *
Flags: sparse,rptree,wildcard
```

```
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.10

Learning-Domain: vlan-id 20
Group: 198.51.100.3
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 203.0.113.4, port: ge-1/3/5.20
```

show pim snooping join vlan-id

```
user@host> show pim snooping join vlan-id 10

Instance: vpls1
Learning-Domain: vlan-id 10
Group: 198.51.100.2
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.10
```

show pim snooping neighbors

Syntax	<pre>show pim snooping neighbors <brief detail> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system <i>logical-system-name</i>> <vlan-id <i>vlan-identifier</i>></pre>
Release Information	Command introduced in Junos OS Release 12.3 for MX Series 5G Universal Routing Platforms. Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.
Description	Display information about Protocol Independent Multicast (PIM) snooping neighbors.
Options	<p>none—Display detailed information.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>instance <i>instance-name</i>—(Optional) Display PIM snooping neighbor information for the specified routing instance.</p> <p>interface <i>interface-name</i>—(Optional) Display information for the specified PIM snooping neighbor interface.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p>vlan-id <i>vlan-identifier</i>—(Optional) Display PIM snooping neighbor information for the specified VLAN.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Interface Priority for PIM Designated Router Selection</i>• <i>Modifying the PIM Hello Interval</i>• <i>PIM Snooping for VPLS</i>• show pim neighbors on page 1998
List of Sample Output	<ul style="list-style-type: none">• show pim snooping neighbors on page 2019• show pim snooping neighbors detail on page 2020• show pim snooping neighbors instance on page 2021• show pim snooping neighbors interface on page 2022• show pim snooping neighbors vlan-id on page 2022

Output Fields Table 144 on page 2019 lists the output fields for the `show pim snooping neighbors` command. Output fields are listed in the approximate order in which they appear.

Table 144: `show pim snooping neighbors` Output Fields

Field Name	Field Description	Level of Output
Instance	Routing instance for PIM snooping.	All levels
Learning-Domain	Learning domain for PIM snooping.	All levels
Interface	Router interface for which PIM snooping neighbor details are displayed.	All levels
Option	PIM snooping options available on the specified interface: <ul style="list-style-type: none"> • H = Hello Option Holdtime • P = Hello Option DR Priority • L = Hello Option LAN Prune Delay • G = Generation Identifier • T = Tracking Bit 	All levels
Uptime	Time the neighbor has been operational since the PIM process was last initialized, in the format dd:hh:mm:ss ago for less than a week and nwnd:hh:mm:ss ago for more than a week.	All levels
Neighbor addr	IP address of the PIM snooping neighbor connected through the specified interface.	All levels
Address	IP address of the specified router interface.	All levels
Hello Option Holdtime	Time for which the neighbor is available, in seconds. The range of values is 0 through 65,535.	detail
Hello Option DR Priority	Designated router election priority. The range of values is 0 through 4294967295. NOTE: By default, every PIM interface has an equal probability (priority 1) of being selected as the DR.	detail
Hello Option Generation ID	9-digit or 10-digit number used to tag hello messages.	detail
Hello Option LAN Prune Delay	Time to wait before the neighbor receives prune messages, in the format delay nnn ms override nnnn ms .	detail

Sample Output

`show pim snooping neighbors`

```
user@host> show pim snooping neighbors
```

```
B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking Bit
```

```
Instance: vpls1
Learning-Domain: vlan-id 10

Interface Option Uptime Neighbor addr
ge-1/3/1.10 HPLGT 00:43:33 192.0.2.2
ge-1/3/3.10 HPLGT 00:43:33 192.0.2.3
ge-1/3/5.10 HPLGT 00:43:33 192.0.2.4
ge-1/3/7.10 HPLGT 00:43:33 192.0.2.5

Learning-Domain: vlan-id 20

Interface Option Uptime Neighbor addr
ge-1/3/1.20 HPLGT 00:43:33 192.0.2.12
ge-1/3/3.20 HPLGT 00:43:33 192.0.2.13
ge-1/3/5.20 HPLGT 00:43:33 192.0.2.14
ge-1/3/7.20 HPLGT 00:43:33 192.0.2.15
```

show pim snooping neighbors detail

```
user@host> show pim snooping neighbors detail

Instance: vpls1
Learning-Domain: vlan-id 10

Interface: ge-1/3/1.10
Address: 192.0.2.2
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 83 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 830908833
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

Interface: ge-1/3/3.10
Address: 192.0.2.3
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 97 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 2056520742
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

Interface: ge-1/3/5.10
Address: 192.0.2.4
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 81 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 1152066227
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

Interface: ge-1/3/7.10
Address: 192.0.2.5
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 96 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 1113200338
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported
Learning-Domain: vlan-id 20
```



```

Interface: ge-1/3/1.20
Address: 192.0.2.12
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 81 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 963205167
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

Interface: ge-1/3/3.20
Address: 192.0.2.13
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 104 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 166921538
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

Interface: ge-1/3/5.20
Address: 192.0.2.14
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 88 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 789422835
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

Interface: ge-1/3/7.20
Address: 192.0.2.15
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 88 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 1563649680
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

```

show pim snooping neighbors instance

```

user@host> show pim snooping neighbors instance vpls1

B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking Bit

Instance: vpls1
Learning-Domain: vlan-id 10

Interface Option Uptime Neighbor addr
ge-1/3/1.10 HPLGT 00:46:03 192.0.2.2
ge-1/3/3.10 HPLGT 00:46:03 192.0.2.3
ge-1/3/5.10 HPLGT 00:46:03 192.0.2.4
ge-1/3/7.10 HPLGT 00:46:03 192.0.2.5

Learning-Domain: vlan-id 20

Interface Option Uptime Neighbor addr
ge-1/3/1.20 HPLGT 00:46:03 192.0.2.12
ge-1/3/3.20 HPLGT 00:46:03 192.0.2.13

```

```
ge-1/3/5.20 HPLGT 00:46:03 192.0.2.14
ge-1/3/7.20 HPLGT 00:46:03 192.0.2.15
```

show pim snooping neighbors interface

```
user@host> show pim snooping neighbors interface ge-1/3/1.20

B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking Bit

Instance: vpls1
Learning-Domain: vlan-id 10
Learning-Domain: vlan-id 20

Interface Option Uptime Neighbor addr
ge-1/3/1.20 HPLGT 00:48:04 192.0.2.12
```

show pim snooping neighbors vlan-id

```
user@host> show pim snooping neighbors vlan-id 10

B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking Bit

Instance: vpls1
Learning-Domain: vlan-id 10

Interface Option Uptime Neighbor addr
ge-1/3/1.10 HPLGT 00:49:12 192.0.2.2
ge-1/3/3.10 HPLGT 00:49:12 192.0.2.3
ge-1/3/5.10 HPLGT 00:49:12 192.0.2.4
ge-1/3/7.10 HPLGT 00:49:12 192.0.2.5
```

show pim snooping statistics

Syntax	show pim snooping statistics <instance <i>instance-name</i> > <interface <i>interface-name</i> > <logical-system <i>logical-system-name</i> > <vlan-id <i>vlan-id</i> >
Release Information	Command introduced in Junos OS Release 12.3 for MX Series 5G Universal Routing Platforms. Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.
Description	Display Protocol Independent Multicast (PIM) snooping statistics.
Options	<p>none—Display PIM statistics.</p> <p>instance <i>instance-name</i>—(Optional) Display statistics for a specific routing instance enabled by Protocol Independent Multicast (PIM) snooping.</p> <p>interface <i>interface-name</i>—(Optional) Display statistics about the specified interface for PIM snooping.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p>vlan-id <i>vlan-identifier</i>—(Optional) Display PIM snooping statistics information for the specified VLAN.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> <i>PIM Snooping for VPLS</i> clear pim snooping statistics on page 1836
List of Sample Output	show pim snooping statistics on page 2024 show pim snooping statistics instance on page 2025 show pim snooping statistics interface on page 2026 show pim snooping statistics vlan-id on page 2026
Output Fields	Table 145 on page 2023 lists the output fields for the show pim snooping statistics command. Output fields are listed in the approximate order in which they appear.

Table 145: show pim snooping statistics Output Fields

Field Name	Field Description	Level of Output
Instance	Routing instance for PIM snooping.	All levels

Table 145: show pim snooping statistics Output Fields (continued)

Field Name	Field Description	Level of Output
Learning-Domain	Learning domain for PIM snooping.	All levels
Tx J/P messages	Total number of transmitted join/prune packets.	All levels
Rx J/P messages	Total number of received join/prune packets.	All levels
Rx J/P messages -- seen	Number of join/prune packets seen but not received on the upstream interface.	All levels
Rx J/P messages -- received	Number of join/prune packets received on the downstream interface.	All levels
Rx Hello messages	Total number of received hello packets.	All levels
Rx Version Unknown	Number of packets received with an unknown version number.	All levels
Rx Neighbor Unknown	Number of packets received from an unknown neighbor.	All levels
Rx Upstream Neighbor Unknown	Number of packets received with unknown upstream neighbor information.	All levels
Rx Bad Length	Number of packets received containing incorrect length information.	All levels
Rx J/P Busy Drop	Number of join/prune packets dropped while the router is busy.	All levels
Rx J/P Group Aggregate 0	Number of join/prune packets received containing the aggregate group information.	All levels
Rx Malformed Packet	Number of malformed packets received.	All levels
Rx No PIM Interface	Number of packets received without the interface information.	All levels
Rx No Upstream Neighbor	Number of packets received without upstream neighbor information.	All levels
Rx Unknown Hello Option	Number of hello packets received with unknown options.	All levels

Sample Output

show pim snooping statistics

```
user@host> show pim snooping statistics
```

```

Instance: vpls1
Learning-Domain: vlan-id 10

Tx J/P messages 0
RX J/P messages 8
Rx J/P messages -- seen 0
Rx J/P messages -- received 8
Rx Hello messages 37
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
Rx No PIM Interface 0
Rx No Upstream Neighbor 0
Rx Bad Length 0
Rx Neighbor Unknown 0
Rx Unknown Hello Option 0
Rx Malformed Packet 0

```

```

Learning-Domain: vlan-id 20

Tx J/P messages 0
RX J/P messages 2
Rx J/P messages -- seen 0
Rx J/P messages -- received 2
Rx Hello messages 39
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
Rx No PIM Interface 0
Rx No Upstream Neighbor 0
Rx Bad Length 0
Rx Neighbor Unknown 0
Rx Unknown Hello Option 0
Rx Malformed Packet 0

```

show pim snooping statistics instance

```
user@host> show pim snooping statistics instance vpls1
```

```

Instance: vpls1
Learning-Domain: vlan-id 10

Tx J/P messages 0
RX J/P messages 9
Rx J/P messages -- seen 0
Rx J/P messages -- received 9
Rx Hello messages 45
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0

```

```
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
Rx No PIM Interface 0
Rx No Upstream Neighbor 0
Rx Bad Length 0
Rx Neighbor Unknown 0
Rx Unknown Hello Option 0
Rx Malformed Packet 0

Learning-Domain: vlan-id 20

Tx J/P messages 0
RX J/P messages 3
Rx J/P messages -- seen 0
Rx J/P messages -- received 3
Rx Hello messages 47
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
Rx No PIM Interface 0
Rx No Upstream Neighbor 0
Rx Bad Length 0
Rx Neighbor Unknown 0
Rx Unknown Hello Option 0
Rx Malformed Packet 0
```

show pim snooping statistics interface

```
user@host> show pim snooping statistics interface ge-1/3/1.20
```

```
Instance: vpls1
Learning-Domain: vlan-id 10
Learning-Domain: vlan-id 20

PIM Interface statistics for ge-1/3/1.20
Tx J/P messages 0
RX J/P messages 0
Rx J/P messages -- seen 0
Rx J/P messages -- received 0
Rx Hello messages 13
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
```

show pim snooping statistics vlan-id

```
user@host> show pim snooping statistics vlan-id 10
```

```
Instance: vpls1
Learning-Domain: vlan-id 10

Tx J/P messages 0
RX J/P messages 11
Rx J/P messages -- seen 0
Rx J/P messages -- received 11
Rx Hello messages 64
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
Rx No PIM Interface 0
Rx No Upstream Neighbor 0
Rx Bad Length 0
Rx Neighbor Unknown 0
```

show pim source

List of Syntax [Syntax on page 2028](#)
[Syntax \(EX Series Switch and the QFX Series\) on page 2028](#)

Syntax

```
show pim source
<brief | detail>
<inet | inet6>
<instance instance-name>
<logical-system (all | logical-system-name)>
<source-prefix>
```

Syntax (EX Series Switch and the QFX Series)

```
show pim source
<brief | detail>
<inet | inet6>
<instance instance-name>
<source-prefix>
```

Release Information Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 9.0 for EX Series switches.
inet6 and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.
Command introduced in Junos OS Release 11.3 for the QFX Series.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display information about the Protocol Independent Multicast (PIM) source reverse path forwarding (RPF) state.

Options **none**—Display standard information about the PIM RPF state for all supported family addresses for all routing instances.

brief | detail—(Optional) Display the specified level of output.

inet | inet6—(Optional) Display information for IPv4 or IPv6 family addresses, respectively.

instance *instance-name*—(Optional) Display information about the RPF state for a specific PIM-enabled routing instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

source-prefix—(Optional) Display the state for source RPF states in the given range.

Required Privilege Level view

List of Sample Output [show pim source on page 2029](#)
[show pim source brief on page 2029](#)
[show pim source detail on page 2030](#)

[show pim source \(Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 2030](#)

Output Fields [Table 146 on page 2029](#) describes the output fields for the **show pim source** command. Output fields are listed in the approximate order in which they appear.

Table 146: show pim source Output Fields

Field Name	Field Description
Instance	Name of the routing instance.
Source	Address of the source or reverse path.
Prefix/length	Prefix and prefix length for the route used to reach the RPF address.
Upstream Protocol	Protocol toward the source address.
Upstream interface	RPF interface toward the source address. A pseudo multipoint LDP (M-LDP) interface appears on egress nodes in M-LDP point-to-multipoint LSPs with inband signaling.
Upstream Neighbor	Address of the RPF neighbor used to reach the source address. The multipoint LDP (M-LDP) root appears on egress nodes in M-LDP point-to-multipoint LSPs with inband signaling.

Sample Output

[show pim source](#)

```
user@host> show pim source
Instance: PIM.master Family: INET

Source 10.255.14.144
  Prefix 10.255.14.144/32
  Upstream interface Local
  Upstream neighbor Local

Source 10.255.70.15
  Prefix 10.255.70.15/32
  Upstream interface so-1/0/0.0
  Upstream neighbor 10.111.10.2

Instance: PIM.master Family: INET6
```

[show pim source brief](#)

The output for the **show pim source brief** command is identical to that for the **show pim source** command. For sample output, see [show pim source on page 2029](#).

show pim source detail

```
user@host> show pim source detail

Instance: PIM.master Family: INET

Source 10.255.14.144
  Prefix 10.255.14.144/32
  Upstream interface Local
  Upstream neighbor Local
  Active groups:233.252.0.0
    233.252.0.1
    233.252.0.1

Source 10.255.70.15
  Prefix 10.255.70.15/32
  Upstream interface so-1/0/0.0
  Upstream neighbor 10.111.10.2
  Active groups:233.252.0.1

Instance: PIM.master Family: INET6
```

show pim source (Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show pim source

Instance: PIM.master Family: INET

Source 10.1.1.1
  Prefix 10.1.1.1/32
  Upstream interface Local
  Upstream neighbor Local

Source 10.2.7.7
  Prefix 10.2.7.0/24
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor MLDP LSP root <10.1.1.2>

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor via MLDP-inband
  Upstream interface fe-1/3/0.0
  Upstream neighbor 192.168.140.1
  Upstream neighbor MLDP LSP root <10.1.1.2>

Instance: PIM.master Family: INET6
Source 2001:db8::1:2:7:7
  Prefix 2001:db8::1:2:7:0/120
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor via MLDP-inband
  Upstream interface fe-1/3/0.0
  Upstream neighbor 192.168.140.1
  Upstream neighbor MLDP LSP root <10.1.1.2>
```

show pim statistics

List of Syntax	Syntax on page 2031 Syntax (EX Series Switch and the QFX Series) on page 2031
Syntax	<pre>show pim statistics <inet inet6> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and the QFX Series)	<pre>show pim statistics <inet inet6> <instance <i>instance-name</i>> <interface <i>interface-name</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>inet6 and instance options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Support for bidirectional PIM added in Junos OS Release 12.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display Protocol Independent Multicast (PIM) statistics.
Options	<p>none—Display PIM statistics.</p> <p>inet inet6—(Optional) Display IPv4 or IPv6 PIM statistics, respectively.</p> <p>instance <i>instance-name</i>—(Optional) Display statistics for a specific routing instance enabled by Protocol Independent Multicast (PIM).</p> <p>interface <i>interface-name</i>—(Optional) Display statistics about the specified interface.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • clear pim statistics on page 1838
List of Sample Output	show pim statistics on page 2038 show pim statistics inet interface <interface-name> on page 2040 show pim statistics inet6 interface <interface-name> on page 2040 show pim statistics instance <instance-name> on page 2041

[show pim statistics interface <interface-name> on page 2043](#)

Output Fields [Table 147 on page 2032](#) describes the output fields for the **show pim statistics** command. Output fields are listed in the approximate order in which they appear.

Table 147: show pim statistics Output Fields

Field Name	Field Description
Instance	<p>Name of the routing instance.</p> <p>This field only appears if you specify an interface, for example:</p> <ul style="list-style-type: none"> • inet interface <i>interface-name</i> • inet6 interface <i>interface-name</i> • interface <i>interface-name</i>
Family	<p>Output is for IPv4 or IPv6 PIM statistics. INET indicates IPv4 statistics, and INET6 indicates IPv6 statistics.</p> <p>This field only appears if you specify an interface, for example:</p> <ul style="list-style-type: none"> • inet interface <i>interface-name</i> • inet6 interface <i>interface-name</i> • interface <i>interface-name</i>
PIM statistics	PIM statistics for all interfaces or for the specified interface.
PIM message type	Message type for which statistics are displayed.
Received	Number of received statistics.
Sent	Number of messages sent of a certain type.
Rx errors	Number of received packets that contained errors.
V2 Hello	PIM version 2 hello packets.
V2 Register	PIM version 2 register packets.
V2 Register Stop	PIM version 2 register stop packets.
V2 Join Prune	PIM version 2 join and prune packets.
V2 Bootstrap	PIM version 2 bootstrap packets.
V2 Assert	PIM version 2 assert packets.
V2 Graft	PIM version 2 graft packets.
V2 Graft Ack	PIM version 2 graft acknowledgment packets.
V2 Candidate RP	PIM version 2 candidate RP packets.

Table 147: show pim statistics Output Fields (continued)

Field Name	Field Description
V2 State Refresh	PIM version 2 control messages related to PIM dense mode (PIM-DM) state refresh. State refresh is an extension to PIM-DM. It not supported in Junos OS.
V2 DF Election	PIM version 2 send and receive messages associated with bidirectional PIM designated forwarder election.
V1 Query	PIM version 1 query packets.
V1 Register	PIM version 1 register packets.
V1 Register Stop	PIM version 1 register stop packets.
V1 Join Prune	PIM version 1 join and prune packets.
V1 RP Reachability	PIM version 1 RP reachability packets.
V1 Assert	PIM version 1 assert packets.
V1 Graft	PIM version 1 graft packets.
V1 Graft Ack	PIM version 1 graft acknowledgment packets.
AutoRP Announce	Auto-RP announce packets.
AutoRP Mapping	Auto-RP mapping packets.
AutoRP Unknown type	Auto-RP packets with an unknown type.
Anycast Register	Auto-RP announce packets.
Anycast Register Stop	Auto-RP announce packets.
Global Statistics	Summary of PIM statistics for all interfaces.
Hello dropped on neighbor policy	Number of hello packets dropped because of a configured neighbor policy.
Unknown type	Number of PIM control packets received with an unknown type.
V1 Unknown type	Number of PIM version 1 control packets received with an unknown type.
Unknown Version	Number of PIM control packets received with an unknown version. The version is not version 1 or version 2.

Table 147: show pim statistics Output Fields (continued)

Field Name	Field Description
Neighbor unknown	Number of PIM control packets received (excluding PIM hello) without first receiving the hello packet.
Bad Length	Number of PIM control packets received for which the packet size does not match the PIM length field in the packet.
Bad Checksum	Number of PIM control packets received for which the calculated checksum does not match the checksum field in the packet.
Bad Receive If	Number of PIM control packets received on an interface that does not have PIM configured.
Rx Bad Data	Number of PIM control packets received that contain data for TCP Bad register packets.
Rx Intf disabled	Number of PIM control packets received on an interface that has PIM disabled.
Rx V1 Require V2	Number of PIM version 1 control packets received on an interface configured for PIM version 2.
Rx V2 Require V1	Number of PIM version 2 control packets received on an interface configured for PIM version 1.
Rx Register not RP	Number of PIM register packets received when the routing device is not the RP for the group.
Rx Register no route	Number of PIM register packets received when the RP does not have a unicast route back to the source.
Rx Register no decap if	Number of PIM register packets received when the RP does not have a de-encapsulation interface.
Null Register Timeout	Number of NULL register timeout packets.
RP Filtered Source	Number of PIM packets received when the routing device has a source address filter configured for the RP.
Rx Unknown Reg Stop	Number of register stop messages received with an unknown type.
Rx Join/Prune no state	Number of join and prune messages received for which the routing device has no state.
Rx Join/Prune on upstream if	Number of join and prune messages received on the interface used to reach the upstream routing device, toward the RP.
Rx Join/Prune for invalid group	Number of join or prune messages received for invalid multicast group addresses.

Table 147: show pim statistics Output Fields (continued)

Field Name	Field Description
Rx Join/Prune messages dropped	Number of join and prune messages received and dropped.
Rx sparse join for dense group	Number of PIM sparse mode join messages received for a group that is configured for dense mode.
Rx Graft/Graft Ack no state	Number of graft and graft acknowledgment messages received for which the router or switch has no state.
Rx Graft on upstream if	Number of graft messages received on the interface used to reach the upstream routing device, toward the RP.
Rx CRP not BSR	Number of BSR messages received in which the PIM message type is Candidate-RP-Advertisement, not Bootstrap.
Rx BSR when BSR	Number of BSR messages received in which the PIM message type is Bootstrap.
Rx BSR not RPF if	Number of BSR messages received on an interface that is not the RPF interface.
Rx unknown hello opt	Number of PIM hello packets received with options that Junos OS does not support.
Rx data no state	Number of PIM control packets received for which the routing device has no state for the data type.
Rx RP no state	Number of PIM control packets received for which the routing device has no state for the RP.
Rx aggregate	Number of PIM aggregate MDT packets received.
Rx malformed packet	Number of PIM control packets received with a malformed IP unicast or multicast address family.
No RP	Number of PIM control packets received with no RP address.
No register encaps if	Number of PIM register packets received when the first-hop routing device does not have an encapsulation interface.
No route upstream	Number of PIM control packets received when the routing device does not have a unicast route to the the interface used to reach the upstream routing device, toward the RP.
Nexthop Unusable	Number of PIM control packets with an unusable nexthop. A path can be unusable if the route is hidden or the link is down.
RP mismatch	Number of PIM control packets received for which the routing device has an RP mismatch.

Table 147: show pim statistics Output Fields (continued)

Field Name	Field Description
RP mode mismatch	RP mode (sparse or bidirectional) mismatches encountered when processing join and prune messages.
RPF neighbor unknown	Number of PIM control packets received for which the routing device has an unknown RPF neighbor for the source.
Rx Joins/Prunes filtered	The number of join and prune messages filtered because of configured route filters and source address filters.
Tx Joins/Prunes filtered	The number of join and prune messages filtered because of configured route filters and source address filters.
Embedded-RP invalid addr	Number of packets received with an invalid embedded RP address in PIM join messages and other types of messages sent between routing domains.
Embedded-RP limit exceed	Number of times the limit configured with the maximum-rps statement is exceeded. The maximum-rps statement limits the number of embedded RPs created in a specific routing instance. The range is from 1 through 500. The default is 100.
Embedded-RP added	<p>Number of packets in which the embedded RP for IPv6 is added.</p> <p>The following receive events trigger extraction of an IPv6 embedded RP address on the routing device:</p> <ul style="list-style-type: none"> • Multicast Listener Discovery (MLD) report for an embedded RP multicast group address • PIM join message with an embedded RP multicast group address • Static embedded RP multicast group address associated with an interface • Packets sent to an embedded RP multicast group address received on the DR <p>An embedded RP node discovered through these receive events is added if it does not already exist on the routing platform.</p>
Embedded-RP removed	Number of packets in which the embedded RP for IPv6 is removed. The embedded RP is removed whenever all PIM join states using this RP are removed or the configuration changes to remove the embedded RP feature.
Rx Register msgs filtering drop	Number of received register messages dropped because of a filter configured for PIM register messages.
Tx Register msgs filtering drop	Number of register messages dropped because of a filter configured for PIM register messages.
Rx Bidir Join/Prune on non-Bidir if	Error counter for join and prune messages received on non-bidirectional PIM interfaces.

Table 147: show pim statistics Output Fields (continued)

Field Name	Field Description
Rx Bidir Join/Prune on non-DF if	Error counter for join and prune messages received on non-designated forwarder interfaces.
V4 (S,G) Maximum	Maximum number of (S,G) IPv4 multicast routes accepted for the VPN routing and forwarding (VRF) routing instance. If this number is met, additional (S,G) entries are not accepted.
V4 (S,G) Accepted	Number of accepted (S,G) IPv4 multicast routes.
V4 (S,G) Threshold	Threshold at which a warning message is logged (percentage of the maximum number of (S,G) IPv4 multicast routes accepted by the device).
V4 (S,G) Log Interval	Time (in seconds) between consecutive log messages.
V6 (S,G) Maximum	Maximum number of (S,G) IPv6 multicast routes accepted for the VPN routing and forwarding (VRF) routing instance. If this number is met, additional (S,G) entries are not accepted.
V6 (S,G) Accepted	Number of accepted (S,G) IPv6 multicast routes.
V6 (S,G) Threshold	Threshold at which a warning message is logged (percentage of the maximum number of (S,G) IPv6 multicast routes accepted by the device).
V6 (S,G) Log Interval	Time (in seconds) between consecutive log messages.
V4 (grp-prefix, RP) Maximum	Maximum number of group-to-rendezvous point (RP) IPv4 multicast mappings accepted for the VRF routing instance. If this number is met, additional mappings are not accepted.
V4 (grp-prefix, RP) Accepted	Number of accepted group-to-RP IPv4 multicast mappings.
V4 (grp-prefix, RP) Threshold	Threshold at which a warning message is logged (percentage of the maximum number of group-to-RP IPv4 multicast mappings accepted by the device).
V4 (grp-prefix, RP) Log Interval	Time (in seconds) between consecutive log messages.
V6 (grp-prefix, RP) Maximum	Maximum number of group-to RP IPv6 multicast mappings accepted for the VRF routing instance. If this number is met, additional mappings are not accepted.
V6 (grp-prefix, RP) Accepted	Number of accepted group-to-RP IPv6 multicast mappings.

Table 147: show pim statistics Output Fields (continued)

Field Name	Field Description
V6 (grp-prefix, RP) Threshold	Threshold at which a warning message is logged (percentage of the maximum number of group-to-RP IPv6 multicast mappings accepted by the device).
V6 (grp-prefix, RP) Log Interval	Time (in seconds) between consecutive log messages.
V4 Register Maximum	Maximum number of IPv4 PIM registers accepted for the VRF routing instance. If this number is met, additional PIM registers are not accepted. You configure the register limits on the RP.
V4 Register Accepted	Number of accepted IPv4 PIM registers.
V4 Register Threshold	Threshold at which a warning message is logged (percentage of the maximum number of IPv4 PIM registers accepted by the device).
V4 Register Log Interval	Time (in seconds) between consecutive log messages.
V6 Register Maximum	Maximum number of IPv6 PIM registers accepted for the VRF routing instance. If this number is met, additional PIM registers are not accepted. You configure the register limits on the RP.
V6 Register Accepted	Number of accepted IPv6 PIM registers.
V6 Register Threshold	Threshold at which a warning message is logged (percentage of the maximum number of IPv6 PIM registers accepted by the device).
V6 Register Log Interval	Time (in seconds) between consecutive log messages.
(*G) Join drop due to SSM range check	PIM join messages that are dropped because the multicast addresses are outside of the SSM address range of 232.0.0.0 through 232.255.255.255. You can extend the accepted SSM address range by configuring the ssm-groups statement.

Sample Output

show pim statistics

```
user@host> show pim statistics
```

PIM Message type	Received	Sent	Rx errors
V2 Hello	15	32	0
V2 Register	0	362	0
V2 Register Stop	483	0	0
V2 Join Prune	18	518	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0

V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
V2 State Refresh	0	0	0
V2 DF Election	0	0	0
V1 Query	0	0	0
V1 Register	0	0	0
V1 Register Stop	0	0	0
V1 Join Prune	0	0	0
V1 RP Reachability	0	0	0
V1 Assert	0	0	0
V1 Graft	0	0	0
V1 Graft Ack	0	0	0
AutoRP Announce	0	0	0
AutoRP Mapping	0	0	0
AutoRP Unknown type	0		
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

Global Statistics

Hello dropped on neighbor policy	0
Unknown type	0
V1 Unknown type	0
Unknown Version	0
ipv4 BSR pkt drop due to excessive rate	0
ipv6 BSR pkt drop due to excessive rate	0
Neighbor unknown	0
Bad Length	0
Bad Checksum	0
Bad Receive If	0
Rx Bad Data	0
Rx Intf disabled	0
Rx V1 Require V2	0
Rx V2 Require V1	0
Rx Register not RP	0
Rx Register no route	0
Rx Register no decap if	0
Null Register Timeout	0
RP Filtered Source	0
Rx Unknown Reg Stop	0
Rx Join/Prune no state	0
Rx Join/Prune on upstream if	0
Rx Join/Prune for invalid group	5
Rx Join/Prune messages dropped	0
Rx sparse join for dense group	0
Rx Graft/Graft Ack no state	0
Rx Graft on upstream if	0
Rx CRP not BSR	0
Rx BSR when BSR	0
Rx BSR not RPF if	0
Rx unknown hello opt	0
Rx data no state	0
Rx RP no state	0
Rx aggregate	0
Rx malformed packet	0
Rx illegal TTL	0
Rx illegal destination address	0
No RP	0
No register encap if	0

No route upstream	0
Nexthop Unusable	0
RP mismatch	0
RP mode mismatch	0
RPF neighbor unknown	0
Rx Joins/Prunes filtered	0
Tx Joins/Prunes filtered	0
Embedded-RP invalid addr	0
Embedded-RP limit exceed	0
Embedded-RP added	0
Embedded-RP removed	0
Rx Register msgs filtering drop	0
Tx Register msgs filtering drop	0
Rx Bidir Join/Prune on non-Bidir if	0
Rx Bidir Join/Prune on non-DF if	0
(* ,G) Join drop due to SSM range check	0

Sample Output

show pim statistics inet interface <interface-name>

```
user@host> show pim statistics inet interface ge-0/3/0.0
```

```
Instance: PIM.master Family: INET
```

```
PIM Interface statistics for ge-0/3/0.0
```

PIM Message type	Received	Sent	Rx errors
V2 Hello	0	4	0
V2 Register	0	0	0
V2 Register Stop	0	0	0
V2 Join Prune	0	0	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
V1 Query	0	0	0
V1 Register	0	0	0
V1 Register Stop	0	0	0
V1 Join Prune	0	0	0
V1 RP Reachability	0	0	0
V1 Assert	0	0	0
V1 Graft	0	0	0
V1 Graft Ack	0	0	0
AutoRP Announce	0	0	0
AutoRP Mapping	0	0	0
AutoRP Unknown type	0	0	0
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

Sample Output

show pim statistics inet6 interface <interface-name>

```
user@host> show pim statistics inet6 interface ge-0/3/0.0
```

```
Instance: PIM.master Family: INET6
```

PIM Interface statistics for ge-0/3/0.0

PIM Message type	Received	Sent	Rx errors
V2 Hello	0	4	0
V2 Register	0	0	0
V2 Register Stop	0	0	0
V2 Join Prune	0	0	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

show pim statistics instance <instance-name>

```
user@host> show pim statistics instance VPN-A
```

PIM Message type	Received	Sent	Rx errors
V2 Hello	31	37	0
V2 Register	0	0	0
V2 Register Stop	0	0	0
V2 Join Prune	0	16	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
V2 State Refresh	0	0	0
V2 DF Election	0	0	0
V1 Query	0	0	0
V1 Register	0	0	0
V1 Register Stop	0	0	0
V1 Join Prune	0	0	0
V1 RP Reachability	0	0	0
V1 Assert	0	0	0
V1 Graft	0	0	0
V1 Graft Ack	0	0	0
AutoRP Announce	0	0	0
AutoRP Mapping	0	0	0
AutoRP Unknown type	0		
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

Global Statistics

Hello dropped on neighbor policy	0
Unknown type	0
V1 Unknown type	0
Unknown Version	0
Neighbor unknown	0
Bad Length	0
Bad Checksum	0
Bad Receive If	0
Rx Bad Data	0
Rx Intf disabled	0
Rx V1 Require V2	0
Rx V2 Require V1	0
Rx Register not RP	0

Rx Register no route	0
Rx Register no decap if	0
Null Register Timeout	0
RP Filtered Source	0
Rx Unknown Reg Stop	0
Rx Join/Prune no state	0
Rx Join/Prune on upstream if	0
Rx Join/Prune for invalid group	0
Rx Join/Prune messages dropped	0
Rx sparse join for dense group	0
Rx Graft/Graft Ack no state	0
Rx Graft on upstream if	0
Rx CRP not BSR	0
Rx BSR when BSR	0
Rx BSR not RPF if	0
Rx unknown hello opt	0
Rx data no state	0
Rx RP no state	0
Rx aggregate	0
Rx malformed packet	0
Rx illegal TTL	0
Rx illegal destination address	0
No RP	0
No register encap if	0
No route upstream	28
Nexthop Unusable	0
RP mismatch	0
RP mode mismatch	0
RPF neighbor unknown	0
Rx Joins/Prunes filtered	0
Tx Joins/Prunes filtered	0
Embedded-RP invalid addr	0
Embedded-RP limit exceed	0
Embedded-RP added	0
Embedded-RP removed	0
Rx Register msgs filtering drop	0
Tx Register msgs filtering drop	0
Rx Bidir Join/Prune on non-Bidir if	0
Rx Bidir Join/Prune on non-DF if	0
V4 (S,G) Maximum	10
V4 (S,G) Accepted	9
V4 (S,G) Threshold	80
V4 (S,G) Log Interval	80
V6 (S,G) Maximum	8
V6 (S,G) Accepted	8
V6 (S,G) Threshold	50
V6 (S,G) Log Interval	100
V4 (grp-prefix, RP) Maximum	100
V4 (grp-prefix, RP) Accepted	5
V4 (grp-prefix, RP) Threshold	80
V4 (grp-prefix, RP) Log Interval	10
V6 (grp-prefix, RP) Maximum	20
V6 (grp-prefix, RP) Accepted	0
V6 (grp-prefix, RP) Threshold	90
V6 (grp-prefix, RP) Log Interval	20
V4 Register Maximum	100
V4 Register Accepted	10
V4 Register Threshold	80
V4 Register Log Interval	10
V6 Register Maximum	20

```

V6 Register Accepted          0
V6 Register Threshold        90
V6 Register Log Interval     20
(*,G) Join drop due to SSM range check 0

```

Sample Output

show pim statistics interface <interface-name>

```
user@host> show pim statistics interface ge-0/3/0.0
```

```
Instance: PIM.master Family: INET
```

```
PIM Interface statistics for ge-0/3/0.0
```

PIM Message type	Received	Sent	Rx errors
V2 Hello	0	3	0
V2 Register	0	0	0
V2 Register Stop	0	0	0
V2 Join Prune	0	0	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
V1 Query	0	0	0
V1 Register	0	0	0
V1 Register Stop	0	0	0
V1 Join Prune	0	0	0
V1 RP Reachability	0	0	0
V1 Assert	0	0	0
V1 Graft	0	0	0
V1 Graft Ack	0	0	0
AutoRP Announce	0	0	0
AutoRP Mapping	0	0	0
AutoRP Unknown type	0	0	0
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

```
Instance: PIM.master Family: INET6
```

```
PIM Interface statistics for ge-0/3/0.0
```

PIM Message type	Received	Sent	Rx errors
V2 Hello	0	3	0
V2 Register	0	0	0
V2 Register Stop	0	0	0
V2 Join Prune	0	0	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

show sap listen

Syntax `show sap listen`
 `<brief | detail>`
 `<logical-system (all | logical-system-name)>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display the addresses that the router is listening to in order to receive multicast Session Announcement Protocol (SAP) session announcements.

Options **none**—Display standard information about the addresses that the router is listening to in order to receive multicast SAP session announcements.

brief | detail—(Optional) Display the specified level of output.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show sap listen on page 2044](#)
 [show sap listen brief on page 2045](#)
 [show sap listen detail on page 2045](#)

Output Fields [Table 148 on page 2044](#) describes the output fields for the **show sap listen** command. Output fields are listed in the approximate order in which they appear.

Table 148: show sap listen Output Fields

Field Name	Field Description
Group address	Address of the group that the local router is listening to for SAP messages.
Port	UDP port number used for SAP.

Sample Output

show sap listen

```
user@host> show sap listen
Group address  Port
224.2.127.254  9875
239.255.255.255 9875
```


`show sap listen brief`

The output for the **show sap listen brief** command is identical to that for the **show sap listen** command. For sample output, see [show sap listen on page 2044](#).

`show sap listen detail`

The output for the **show sap listen detail** command is identical to that for the **show sap listen** command. For sample output, see [show sap listen on page 2044](#).

test msdp

Syntax	<code>test msdp (dependent-peers <i>prefix</i> rpf-peer <i>originator</i>) <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Find Multicast Source Discovery Protocol (MSDP) peers.
Options	dependent-peers <i>prefix</i> —Find downstream dependent MSDP peers. rpf-peer <i>originator</i> —Find the MSDP reverse-path-forwarding (RPF) peer for the originator. instance <i>instance-name</i> —(Optional) Find MDSP peers for the specified routing instance. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
List of Sample Output	test msdp dependent-peers on page 2046
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

test msdp dependent-peers

```
user@host> test msdp dependent-peers 10.0.0.1/24
```

CHAPTER 20

IPv6 Operational Commands

- `clear ipv6 neighbors`
- `clear ipv6 router-advertisement`
- `show ipv6 neighbors`
- `show ipv6 router-advertisement`

clear ipv6 neighbors

Syntax	<pre>clear ipv6 neighbors <all> <host <i>host-name</i>> <interface <i>interface-name</i>> <logical-system <i>logical-system-name</i>> <tenant <i>name</i>> <vpn <i>vpn-name</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.3 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.2 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>interface, logical-system, tenant, and vpn options added in Junos OS Release 18.3.</p>
Description	Clear IPv6 neighbor cache information.
Options	<p>none—Clear all IPv6 neighbor cache information.</p> <p>all—(Optional) Clear all IPv6 neighbor cache information.</p> <p>host <i>hostname</i>—(Optional) Clear the information for the specified IPv6 neighbors.</p> <p>interface <i>interface-name</i>—(Optional) Clear information about IPv6 for the specified logical interface</p> <p>logical-system <i>logical-system-name</i>—(Optional) Clear the IPv6 entries for the specified logical system; only available on the main router context.</p> <p>tenant <i>name</i>—(Optional) Clear the name of the tenant.</p> <p>vpn <i>vpn-name</i>—(Optional) Clear entries in the IPv6 table for the specified virtual private network's (VPN) routing table.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• show ipv6 neighbors on page 2051
List of Sample Output	clear ipv6 neighbors on page 2049
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear ipv6 neighbors

```
user@host> clear ipv6 neighbors
```

clear ipv6 router-advertisement

Syntax	<pre>clear ipv6 router-advertisement <interface <i>interface</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Clear IPv6 router advertisement counters.
Options	<p>none—Clear IPv6 router advertisement counters for all interfaces.</p> <p>interface <i>interface</i>—(Optional) Clear IPv6 router advertisement counters for the specified interface.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• show ipv6 router-advertisement on page 2054
List of Sample Output	clear ipv6 router-advertisement on page 2050
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear ipv6 router-advertisement

```
user@host> clear ipv6 router-advertisement
```

show ipv6 neighbors

Syntax `show ipv6 neighbors`
 `<flags>`
 `<hostname host-name>`
 `<interface interface-name>`
 `<logical-system logical-system-name>`
 `<reference-count count>`
 `<tenant name>`
 `<vpn vpn-name>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.3 for EX Series switches.
 Command introduced in Junos OS Release 12.2 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
 flags, **hostname**, **interface**, **logical-system**, **reference-count**, **tenant**, and **vpn** options added in Junos OS Release 18.3.

Description Display information about the IPv6 neighbor cache.



NOTE: Starting with Junos OS Release 16.1, `show ipv6 neighbors` command does not display the underlying ifl information if `enhanced-convergence` statement at `[edit irb unit unit-number]` hierarchy level and `enhanced-ip` statement at `[edit chassis network-services]` hierarchy level is configured for the destination interface IRB.

Options **none**—Display the entries in the IPv6 table.

flags—(Optional) Display the flags set, if any.

hostname *host-name*—(Optional) Display the hostname.

interface *interface-name*—(Optional) Display information about IPv6 for the specified logical interface

logical-system *logical-system-name*—(Optional) Display the IPv6 entries for the specified logical system; only available on the main router context.

reference-count *count*—(Optional) Display the IPv6 next-hop reference count.

tenant *name*—(Optional) Display the name of the tenant.

vpn *vpn-name*—(Optional) Display entries in the IPv6 table for the specified virtual private network's (VPN) routing table.

Required Privilege Level view

Related Documentation [• clear ipv6 neighbors on page 2048](#)

List of Sample Output [show ipv6 neighbors on page 2052](#)
[show ipv6 neighbors on page 2052](#)

Output Fields [Table 149 on page 2052](#) describes the output fields for the **show ipv6 neighbors** command. Output fields are listed in the approximate order in which they appear.

Table 149: show ipv6 neighbors Output Fields

Field Name	Field Description
IPv6 Address	Name of the IPv6 interface.
Linklayer Address	Link-layer address.
State	State of the link: up , down , incomplete , reachable , stale , or unreachable .
Exp	Number of seconds until the entry expires.
Rtr	Whether the neighbor is a routing device: yes or no .
Secure	Whether this entry was created using the Secure Neighbor Discovery (SEND) protocol: yes or no .
Interface	Name of the interface.

Sample Output

show ipv6 neighbors

```
user@host> show ipv6 neighbors
```

IPv6 Address	Linklayer Address	State	Exp	Rtr	Secure
Interface					
2001:db8:0:1:2a0:a514:0:24c	00:05:85:8f:c8:bd	stale	546	yes	no
fe-1/2/0.1					
fe80::2a0:a514:0:24c	00:05:85:8f:c8:bd	stale	258	yes	no
fe-1/2/0.1					
fe80::2a0:a514:0:64c	00:05:85:8f:c8:bd	stale	111	yes	no
fe-1/2/1.5					
fe80::2a0:a514:0:a4c	00:05:85:8f:c8:bd	stale	327	yes	no
fe-1/2/2.9					

show ipv6 neighbors

The command displaying the underlying L2 ifl information when **enhanced-convergence** statement and **enhanced-ip** statement is not configured.

IPv6 Address Interface	Linklayer Address	State	Exp	Rtr	Secure	
23::23:0:0:2 [xe-2/2/0.0]	00:00:23:00:00:02	reachab1e	0	no	no	irb.0

The command not displaying the underlying l2 ifl information when **enhanced-convergence** statement and **enhanced-ip** statement is configured.

IPv6 Address Interface	Linklayer Address	State	Exp	Rtr	Secure	
23::23:0:0:2	00:00:23:00:00:02	reachab1e	0	no	no	irb.0

show ipv6 router-advertisement

Syntax	<pre>show ipv6 router-advertisement <conflicts> <interface <i>interface</i>> <logical-system (all <i>logical-system-name</i>)> <prefix <i>prefix/prefix length</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.2 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about IPv6 router advertisements, including statistics about messages sent and received on interfaces, and information received from advertisements from other routers.
Options	<p>none—Display all IPv6 router advertisement information for all interfaces.</p> <p>conflicts—(Optional) Display only the IPv6 router advertisement information that is conflicting.</p> <p>interface <i>interface</i>—(Optional) Display IPv6 router advertisement information for the specified interface.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>prefix <i>prefix/prefix length</i>—(Optional) Display IPv6 router advertisement information for the specified prefix.</p>
Additional Information	The display identifies conflicting information by enclosing the value the router is advertising in brackets.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• clear ipv6 router-advertisement on page 2050
List of Sample Output	show ipv6 router-advertisement on page 2055 show ipv6 router-advertisement conflicts on page 2056 show ipv6 router-advertisement prefix on page 2056
Output Fields	Table 150 on page 2055 describes the output fields for the show ipv6 router-advertisement command. Output fields are listed in the approximate order in which they appear.

Table 150: show ipv6 router-advertisement Output Fields

Field Name	Field Description
Interface	Name of the interface.
Advertisements sent	Number of router advertisements sent and the elapsed time since they were sent.
Solicits received	Number of solicitation messages received.
Advertisements received	Number of router advertisements received.
Advertisements from	Names of interfaces from which router advertisements have been received and the elapsed time since the last one was received.
Managed	Managed address configuration flag: 0 (stateless) or 1 (stateful).
Other configuration	Other stateful configuration flag: 0 (stateless) or 1 (stateful).
Reachable time	Time that a node identifies a neighbor as reachable after receiving a reachability confirmation, in milliseconds.
Default lifetime	Default lifetime, in seconds: from 0 seconds to 18.2 hours. A setting of 0 indicates that the router is not a default router.
Retransmit timer	Time between retransmitted Neighbor Solicitation messages, in milliseconds.
Current hop limit	Configured current hop limit.
Prefix	Name and length of the prefix.
Valid lifetime	How long the prefix remains valid for onlink determination.
Preferred lifetime	How long the prefix generated by stateless autoconfiguration remains preferred.
On link	Onlink flag: 0 (not onlink) or 1 (onlink).
Autonomous	Autonomous address configuration flag: 0 (not autonomous) or 1 (autonomous).

Sample Output

show ipv6 router-advertisement

```

user@host> show ipv6 router-advertisement
Interface: fe-0/1/1.0
  Advertisements sent: 0
  Solicits received: 0
  Advertisements received: 0
Interface: fxp0.0
  Advertisements sent: 0
  Solicits received: 0

```

```
Advertisements received: 1
Advertisement from fe80::2d0:b7ff:fe1e:7b0e, heard 00:00:13 ago
Managed: 0
Other configuration: 0 [1]
  Reachable time: 0 ms
  Default lifetime: 1800 sec
  Retransmit timer: 0 ms
  Current hop limit: 64
```

show ipv6 router-advertisement conflicts

```
user@host> show ipv6 router-advertisement conflicts
Interface: fxp0.0
  Advertisement from fe80::2d0:b7ff:fe1e:7b0e, heard 00:01:08 ago
  Other configuration: 0 [1]
```

show ipv6 router-advertisement prefix

```
user@host> show ipv6 router-advertisement prefix 2001:db8:8040::/16
Interface: fe-0/1/3.0
  Advertisements sent: 3, last sent 00:04:11 ago
  Solicits received: 0
  Advertisements received: 3
  Advertisement from fe80::290:69ff:fe9a:5403, heard 00:00:05 ago
  Managed: 0
  Other configuration: 0
  Reachable time: 0 ms
  Default lifetime: 180 sec [1800 sec]
  Retransmit timer: 0 ms
  Current hop limit: 64
  Prefix: 2001:db8:8040:1::/64
    Valid lifetime: 2592000 sec
    Preferred lifetime: 604800 sec
  On link: 1
  Autonomous: 1
```

CHAPTER 21

IS-IS Operational Commands

- clear isis adjacency
- clear isis database
- clear isis overload
- clear isis statistics
- show isis adjacency
- show isis authentication
- show isis backup coverage
- show isis backup label-switched-path
- show isis backup spf results
- show isis context-identifier
- show isis database
- show isis hostname
- show isis interface
- show isis overview
- show isis route
- show isis spf
- show isis statistics

clear isis adjacency

List of Syntax	Syntax on page 2058 Syntax (EX Series Switches and QFX Series) on page 2058
Syntax	<pre>clear isis adjacency <all> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)> <neighbor></pre>
Syntax (EX Series Switches and QFX Series)	<pre>clear isis adjacency <all> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <neighbor></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. all option introduced in Junos OS Release 14.2.
Description	Remove entries from the IS-IS adjacency database.
Options	all —Remove all entries from the adjacency database. instance <i>instance-name</i> —(Optional) Clear all adjacencies for the specified routing instance only. interface <i>interface-name</i> —(Optional) Clear all adjacencies for the specified interface only. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system. neighbor —(Optional) Clear adjacencies for the specified neighbor only.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">show isis adjacency on page 2066
List of Sample Output	clear isis adjacency on page 2059 clear isis adjacency all on page 2059

Output Fields See [show isis adjacency](#) for an explanation of output fields.

Sample Output

clear isis adjacency

The following sample output displays IS-IS adjacency database information before and after the **clear isis adjacency** command is entered:

```
user@host> show isis adjacency
```

IS-IS adjacency database:

Interface	System	L	State	Hold (secs)	SNPA
so-1/0/0.0	karakul	3	Up	26	
so-1/1/3.0	1921.6800.5080	3	Up	23	
so-5/0/0.0	1921.6800.5080	3	Up	19	

```
user@host> clear isis adjacency karakul
```

```
user@host> show isis adjacency
```

IS-IS adjacency database:

Interface	System	L	State	Hold (secs)	SNPA
so-1/0/0.0	karakul	3	Initializing	26	
so-1/1/3.0	1921.6800.5080	3	Up	24	
so-5/0/0.0	1921.6800.5080	3	Up	21	

clear isis adjacency all

```
user@host> clear isis adjacency all
```

IS-IS adjacency database:

Interface	System	L	State	Hold (secs)	SNPA
so-1/0/0.0	karakul	3	Initializing	26	
so-1/1/3.0	1921.6800.5080	3	Initializing	24	
so-5/0/0.0	1921.6800.5080	3	Initializing	21	

clear isis database

List of Syntax [Syntax on page 2060](#)
 [Syntax \(EX Series Switches and QFX Series\) on page 2060](#)

Syntax

```
clear isis database
<all>
<entries>
<instance instance-name>
<logical-system (all | logical-system-name)>
```

Syntax (EX Series Switches and QFX Series)

```
clear isis database
<all>
<entries>
<instance instance-name>
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 12.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
 Command introduced in 15.1X53-D30 for QFX10002 switch.

Description Remove the entries from the IS-IS link-state database, which contains prefixes and topology information.

Options **all**—Remove all entries from the IS-IS link-state database for all routing instances.

entries—(Optional) Name of the database entry.

instance *instance-name*—(Optional) Clear all entries for the specified routing instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level clear

Related Documentation • [show isis database on page 2083](#)

List of Sample Output [clear isis database on page 2061](#)

Output Fields See [show isis database](#) for an explanation of output fields.

Sample Output

clear isis database

The following sample output displays IS-IS link-state database information before and after the **clear isis database all** command is entered:

```
user@host> show isis database
```

```
IS-IS level 1 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime (secs)
crater.00-00	0x12	0x84dd	1139

1 LSPs

```
IS-IS level 2 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime (secs)
crater.00-00	0x19	0xe92c	1134
badlands.00-00	0x16	0x1454	985
carlsbad.00-00	0x33	0x220b	1015
ranier.00-00	0x2e	0xfc31	1007
1921.6800.5066.00-00	0x11	0x7313	566
1921.6800.5067.00-00	0x14	0xd9d4	939

6 LSPs

```
user@host> clear isis database all
```

```
user@host> show isis database
```

```
IS-IS level 1 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime (secs)
--------	----------	----------	-----------------

```
IS-IS level 2 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime (secs)
--------	----------	----------	-----------------

clear isis overload

List of Syntax	Syntax on page 2062 Syntax (EX Series Switches and QFX Series) on page 2062
Syntax	<pre>clear isis overload <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches and QFX Series)	<pre>clear isis overload <instance <i>instance-name</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Reset the IS-IS dynamic overload bit. This command can appear to not work, continuing to display overload after execution. The bit is reset only if the root cause is corrected by configuration remotely or locally.</p> <p>When other routers detect that the overload bit is set, they do not use this routing device for transit traffic, but they do use it for packets destined to the overloaded routing device's directly connected networks and IP prefixes.</p>
Options	<p>none—Reset the IS-IS dynamic overload bit.</p> <p>instance <i>instance-name</i>—(Optional) Reset the IS-IS dynamic overload bit for the specified routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show isis database on page 2083
List of Sample Output	clear isis overload on page 2063
Output Fields	See show isis database for an explanation of output fields.

Sample Output

clear isis overload

The following sample output displays IS-IS database information before and after the **clear isis overload** command is entered:

```
user@host> show isis database
```

```
IS-IS level 1 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime	Attributes
pro3-c.00-00	0x4	0x10db	1185	L1 L2 Overload

```
1 LSPs
```

```
IS-IS level 2 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime	Attributes
pro3-c.00-00	0x5	0x429f	1185	L1 L2 Overload

pro2-a.00-00	0x91e	0x2589	874	L1 L2
--------------	-------	--------	-----	-------

pro2-a.02-00	0x1	0xcbc	874	L1 L2
--------------	-----	-------	-----	-------

```
3 LSPs
```

```
user@host> clear isis overload
```

```
user@host> show isis database
```

```
IS-IS level 1 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime	Attributes
pro3-c.00-00	0xa	0x429e	1183	L1 L2

```
1 LSPs
```

```
IS-IS level 2 link-state database:
```

LSP ID	Sequence	Checksum	Lifetime	Attributes
pro3-c.00-00	0xc	0x9c39	1183	L1 L2

pro2-a.00-00	0x91e	0x2589	783	L1 L2
--------------	-------	--------	-----	-------

pro2-a.02-00	0x1	0xcbc	783	L1 L2
--------------	-----	-------	-----	-------

```
3 LSPs
```

clear isis statistics

List of Syntax	Syntax on page 2064 Syntax (EX Series Switches and QFX Series) on page 2064
Syntax	<pre>clear isis statistics <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches and QFX Series)	<pre>clear isis statistics <instance <i>instance-name</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set statistics about IS-IS traffic to zero.
Options	none —Set IS-IS traffic statistics to zero for all routing instances. instance <i>instance-name</i> —(Optional) Set IS-IS traffic statistics to zero for the specified routing instance only. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• show isis statistics on page 2120
List of Sample Output	clear isis statistics on page 2064
Output Fields	See show isis statistics for an explanation of output fields.

Sample Output

clear isis statistics

The following sample output displays IS-IS statistics before and after the **clear isis statistics** command is entered:

```
user@host> show isis statistics
```

IS-IS statistics for merino:

PDU type	Received	Processed	Drops	Sent	Rexmit
LSP	12793	12793	0	8666	719
IIH	116751	116751	0	118834	0
CSNP	203956	203956	0	204080	0
PSNP	7356	7350	6	8635	0
Unknown	0	0	0	0	0
Totals	340856	340850	6	340215	719

Total packets received: 340856 Sent: 340934

SNP queue length: 0 Drops: 0
LSP queue length: 0 Drops: 0

SPF runs: 1064
Fragments rebuilt: 1087
LSP regenerations: 436
Purges initiated: 0

user@host> clear isis statistics

user@host> show isis statistics

IS-IS statistics for merino:

PDU type	Received	Processed	Drops	Sent	Rexmit
LSP	0	0	0	0	0
IIH	3	3	0	3	0
CSNP	2	2	0	4	0
PSNP	0	0	0	0	0
Unknown	0	0	0	0	0
Totals	5	5	0	7	0

Total packets received: 5 Sent: 7

SNP queue length: 0 Drops: 0
LSP queue length: 0 Drops: 0

SPF runs: 0
Fragments rebuilt: 0
LSP regenerations: 0
Purges initiated: 0

show isis adjacency

List of Syntax [Syntax on page 2066](#)
 [Syntax \(EX Series Switches and QFX Series\) on page 2066](#)

Syntax show isis adjacency
 <system-id>
 <brief | detail | extensive>
 <instance *instance-name*>
 <logical-system (all | *logical-system-name*)>

Syntax (EX Series Switches and QFX Series) show isis adjacency
 <system-id>
 <brief | detail | extensive>
 <instance *instance-name*>

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 12.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display information about IS-IS neighbors.

Options **none**—Display standard information about IS-IS neighbors for all routing instances.

system id—(Optional) Display information about IS-IS neighbors for the specified intermediate system.

brief | detail | extensive—(Optional) Display standard information about IS-IS neighbors with the specified level of output.

instance *instance-name*—(Optional) Display information about IS-IS neighbors for the specified routing instance.

logical-system (all | *logical-system-name*)—(Optional) Display information about IS-IS neighbors for all logical systems or for a particular logical system.

Required Privilege Level view

Related Documentation • [clear isis adjacency on page 2058](#)

List of Sample Output [show isis adjacency on page 2069](#)
 [show isis adjacency brief on page 2069](#)
 [show isis adjacency detail on page 2070](#)
 [show isis adjacency extensive on page 2070](#)

Output Fields Table 151 on page 2067 describes the output fields for the **show isis adjacency** command. Output fields are listed in the approximate order in which they appear.

Table 151: show isis adjacency Output Fields

Field Name	Field Description	Level of Output
Interface	Interface through which the neighbor is reachable.	All levels
System	System identifier (sysid), displayed as a name, if possible.	brief
L or Level	Level: <ul style="list-style-type: none"> • 1—Level 1 only • 2—Level 2 only • 3—Level 1 and Level 2 An exclamation point (!) preceding the level number indicates that the adjacency is missing an IP address.	All levels
State	State of the adjacency: Up , Down , New , One-way , Initializing , or Rejected .	All levels
Hold (secs)	Remaining hold time of the adjacency.	brief
SNPA	Subnetwork point of attachment (MAC address of the next hop).	brief
Expires in	How long until the adjacency expires, in seconds.	detail
Priority	Priority to become the designated intermediate system.	detail extensive
Up/Down transitions	Count of adjacency status changes from Up to Down or from Down to Up .	detail
Last transition	Time of the last Up/Down transition.	detail
Circuit type	Bit mask of levels on this interface: 1=Level 1 router; 2=Level 2 router; 3=both Level 1 and Level 2 router.	detail
Speaks	Protocols supported by this neighbor.	detail extensive
MAC address	MAC address of the interface.	detail extensive
Topologies	Supported topologies.	detail extensive
Restart capable	Whether a neighbor is capable of graceful restart: Yes or No .	detail extensive
Adjacency advertisement: Advertise	This routing device has signaled to advertise this interface to its neighbors in their link-state PDUs.	detail extensive
Adjacency advertisement: Suppress	This neighbor has signaled not to advertise the interface in the routing device's outbound link-state PDUs.	detail extensive

Table 151: show isis adjacency Output Fields (continued)

Field Name	Field Description	Level of Output
IP addresses	IP address of this neighbor.	detail extensive
IPv6 Address	IPv6 address of the neighbor.	detail extensive
Level 1 IPv4 Adj-SID	Level 1 IPv4 node-SID of the adjacent neighbor.	detail extensive
Level 1 IPv6 Adj-SID	Level 1 IPv6 node-SID of the adjacent neighbor.	
Level 2 IPv4 Adj-SID	Level 2 IPv4 node-SID of the adjacent neighbor.	detail extensive
Level 2 IPv6 Adj-SID	Level 2 IPv6 node-SID of the adjacent neighbor.	detail extensive

Table 151: show isis adjacency Output Fields (continued)

Field Name	Field Description	Level of Output
Transition log	<p>List of recent transitions, including:</p> <ul style="list-style-type: none"> • When—Time at which an IS-IS adjacency transition occurred. • State—Current state of the IS-IS adjacency (up, down, or rejected). <ul style="list-style-type: none"> • Up—Adjacency is up and operational. • Down—Adjacency is down and not available. • Rejected—Adjacency has been rejected. • Event—Type of transition that occurred. <ul style="list-style-type: none"> • Seenself—Possible routing loop has been detected. • Interface down—IS-IS interface has gone down and is no longer available. • Error—Adjacency error. • Down reason—Reason that an IS-IS adjacency is down: <ul style="list-style-type: none"> • 3-Way Handshake Failed—Connection establishment failed. • Address Mismatch—Address mismatch caused link failure. • Aged Out—Link expired. • ISO Area Mismatch—IS-IS area mismatch caused link failure. • Bad Hello—Unacceptable hello message caused link failure. • BFD Session Down—Bidirectional failure detection caused link failure. • Interface Disabled—IS-IS interface is disabled. • Interface Down—IS-IS interface is unavailable. • Interface Level Disabled—IS-IS level is disabled. • Level Changed—IS-IS level has changed on the adjacency. • Level Mismatch—Levels on adjacency are not compatible. • MPLS LSP Down—Label-switched path (LSP) is unavailable. • MT Topology Changed—IS-IS topology has changed. • MT Topology Mismatch—IS-IS topology is mismatched. • Remote System ID Changed—Adjacency peer system ID changed. • Protocol Shutdown—IS-IS protocol is disabled. • CLI Command—Adjacency brought down by user. • Unknown—Unknown. 	extensive

Sample Output

show isis adjacency

```
user@host> show isis adjacency
```

Interface	System	L State	Hold (secs)	SNPA
at-2/3/0.0	ranier	3 Up	23	

show isis adjacency brief

The output for the **show isis adjacency brief** command is identical to that for the **show isis adjacency** command. For sample output, see [show isis adjacency on page 2069](#).

show isis adjacency detail

```
user@host> show isis adjacency detail
```

```
ranier
```

```
Interface: at-2/3/0.0, Level: 3, State: Up, Expires in 21 secs
Priority: 0, Up/Down transitions: 1, Last transition: 00:01:09 ago
Circuit type: 3, Speaks: IP, IPv6
Topologies: Unicast, IPV6-Unicast Restart capable: Yes, Adjacency advertisement:
Advertise
LAN id: pro-bng3-c-F.02, IP addresses: 11.1.1.2
IPv6 addresses: fe80::2a0:a514:0:4745
Level 1 IPv4 Adj-SID: 299808, IPv6 Adj-SID: 299824
```

show isis adjacency extensive

```
user@host> show isis adjacency extensive
```

```
ranier
```

```
Interface: at-2/3/0.0, Level: 3, State: Up, Expires in 22 secs
Priority: 0, Up/Down transitions: 1, Last transition: 00:01:16 ago
Circuit type: 3, Speaks: IP, IPv6
```

```
Topologies: Unicast, IPV6-Unicast
Restart capable: Yes, Adjacency advertisement: Advertise
IP addresses: 11.1.1.2
```

```
IPv6 addresses: fe80::2a0:a514:0:3e45
```

```
Level 1 IPv4 Adj-SID: 300112, IPv6 Adj-SID: 300304
```

```
Level 2 IPv4 Adj-SID: 300320, IPv6 Adj-SID: 300336
```

```
Transition log:
```

When	State	Event	Down reason
Thu Mar 26 06:13:18	Up	SeenseIf	

show isis authentication

List of Syntax	Syntax on page 2071 Syntax (EX Series Switches and QFX Series) on page 2071
Syntax	<pre>show isis authentication <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches and QFX Series)	<pre>show isis authentication <instance <i>instance-name</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 7.5.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for hitless authentication key rollover introduced in Junos OS Release 11.2.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display information about Intermediate System-to-Intermediate System (IS-IS) authentication.
Options	<p>none—Display information about IS-IS authentication.</p> <p>instance <i>instance-name</i>—(Optional) Display IS-IS authentication for the specified routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> show security keychain
List of Sample Output	show isis authentication on page 2072 show isis authentication (With Hitless Authentication Key Rollover Configured) on page 2072
Output Fields	<p>Table 152 on page 2072 describes the output fields for the show isis authentication command. Output fields are listed in the approximate order in which they appear.</p>

Table 152: show isis authentication Output Fields

Field Name	Field Description
Interface	Interface name.
Level	IS-IS level.
IIH Auth	IS-IS Hello (IIH) packet authentication type. Displays the name of the active keychain if hitless authentication key rollover is configured.
CSN Auth	Complete sequence number authentication type.
PSN Auth	Partial sequence number authentication type.
L1 LSP Authentication	Layer 1 link-state PDU authentication type.
L2 LSP Authentication	Layer 2 link-state PDU authentication type.

Sample Output

show isis authentication

```
user@host> show isis authentication
```

Interface	Level	IIH Auth	CSN Auth	PSN Auth
at-2/3/0.0	1	Simple	Simple	Simple
	2	MD5	MD5	MD5

```
L1 LSP Authentication: Simple
L2 LSP Authentication: MD5
```

show isis authentication (With Hitless Authentication Key Rollover Configured)

```
user@host> show isis authentication
```

Interface	Level	IIH Auth	CSN Auth	PSN Auth
so-0/1/3.0	2	hakrhello	MD5	MD5

```
L2 LSP Authentication: MD5
```

show isis backup coverage

Syntax	<pre>show isis backup coverage <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches and QFX Series)	<pre>show isis backup coverage <instance <i>instance-name</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 9.5.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display information about the level of backup coverage available.
Options	<p>none—Display information about the level of backup coverage available for all the nodes and prefixes in the network.</p> <p>instance <i>instance-name</i>—(Optional) Display information about the level of backup coverage for a specific IS-IS routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>Understanding Loop-Free Alternate Routes for IS-IS</i> • <i>Example: Configuring Node-Link Protection for IS-IS Routes in a Layer 3 VPN</i> • show isis backup label-switched-path on page 2075
List of Sample Output	show isis backup coverage on page 2074
Output Fields	<p>Table 153 on page 2073 lists the output fields for the show isis backup coverage command. Output fields are listed in the approximate order in which they appear.</p>

Table 153: show isis backup coverage Output Fields

Field Name	Field Description
Topology	Type of topology or address family: IPV4 Unicast or IPV6 Unicast .

Table 153: show isis backup coverage Output Fields (continued)

Field Name	Field Description
Level	IS-IS level: <ul style="list-style-type: none"> • 1—Level 1 • 2—Level 2
Node	By topology, the percentage of all routes configured on the node that are protected through backup coverage.
IPv4	Percentage of IPv4 unicast routes that are protected through backup coverage.
IPv6	Percentage of IPv6 unicast routes that are protected through backup coverage.
CLNS	Percentage of Connectionless Network Service (CLNS) routes that are protected through backup coverage.

Sample Output

show isis backup coverage

```
user@host> show isis backup coverage
```

```
Backup Coverage:
  Topology    Level  Node   IPv4   IPv6   CLNS
  IPV4 Unicast  2    28.57% 22.22% 0.00% 0.00%
  IPV6 Unicast  2     0.00% 0.00% 0.00% 0.00%
```

show isis backup label-switched-path

Syntax	<code>show isis backup label-switched-path</code> <code><logical-system (all <i>logical-system-name</i>)></code>
Syntax (EX Series Switches and QFX Series)	<code>show isis backup label-switched-path</code>
Release Information	Command introduced in Junos OS Release 9.5. Command introduced in Junos OS Release 9.5 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about MPLS label-switched-paths (LSPs) designated as backup routes for IS-IS routes.
Options	none —Display information about MPLS LSPs designated as backup routes for IS-IS routes. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>Understanding Loop-Free Alternate Routes for IS-IS</i> • <i>Example: Configuring Node-Link Protection for IS-IS Routes in a Layer 3 VPN</i> • show isis backup coverage on page 2073
List of Sample Output	show isis backup label-switched-path on page 2076
Output Fields	Table 154 on page 2075 lists the output fields for the <code>show isis backup label-switched-path</code> command. Output fields are listed in the approximate order in which they appear.

Table 154: show isis backup label-switched-path Output Fields

Field Name	Field Description
Backup MPLS LSPs	List of MPLS LSPs designated as backup paths for IS-IS routes.
Egress	IP address of the egress routing device for the LSP.

Table 154: *show isis backup label-switched-path* Output Fields (continued)

Field Name	Field Description
Status	State of the LSP: <ul style="list-style-type: none">• Up—The routing device can detect RSVP hello messages from the neighbor.• Down—The routing device has received one of the following indications:<ul style="list-style-type: none">• Communication failure from the neighbor.• Communication from IGP that the neighbor is unavailable.• Change in the sequence numbers in the RSVP hello messages sent by the neighbor.• Deleted—LSP is no longer available as a backup path.
Last change	Time elapsed since the neighbor state changed either from up to down or from down to up. The format is <i>hh:mm:ss</i> .
TE-metric	Configured traffic engineering metric.
Metric	Configured metric.

Sample Output

`show isis backup label-switched-path`

```
user@host> show isis backup label-switched-path
Backup MPLS LSPs:
f-to-g, Egress: 192.168.1.4, Status: up, Last change: 06:12:03
TE-metric: 9, Metric: 0
```


show isis backup spf results

Syntax	<pre>show isis backup spf results <instance <i>instance-name</i>> <level (1 2)> <logical-system (all <i>logical-system-name</i>)> <no-coverage> <topology (ipv4-unicast ipv6-multicast ipv6-unicast unicast)></pre>
Syntax (EX Series Switches)	<pre>show isis backup spf results <instance <i>instance-name</i>> <level (1 2)> <no-coverage> <topology (ipv4-unicast unicast)></pre>
Release Information	Command introduced in Junos OS Release 9.5.
Description	Display information about IS-IS shortest-path-first (SPF) calculations for backup paths.
Options	<p>none—Display information about IS-IS SPF calculations for all backup paths for all destination nodes.</p> <p>instance <i>instance-name</i>—(Optional) Display SPF calculations for backup paths for the specified routing instance.</p> <p>level (1 2)—(Optional) Display SPF calculations for the backup paths for the specified IS-IS level.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Display SPF calculations for the backup paths for all logical systems or on a particular logical system.</p> <p>no-coverage—(Optional) Display SPF calculations only for destinations that do not have backup coverage.</p> <p>topology (ipv4-multicast ipv6-multicast ipv6-unicast unicast)—(Optional) Display SPF calculations for backup paths for the specified topology only.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>Example: Configuring Link and Node Protection for IS-IS Routes</i> • show isis backup coverage on page 2073 • <i>Understanding Loop-Free Alternate Routes for IS-IS</i> • <i>Example: Configuring Node-Link Protection for IS-IS Routes in a Layer 3 VPN</i>

List of Sample Output [show isis backup spf results on page 2078](#)
[show isis backup spf results no-coverage on page 2079](#)

Output Fields [Table 155 on page 2078](#) lists the output fields for the **show isis backup spf results** command. Output fields are listed in the approximate order in which they appear.

Table 155: show isis backup spf results Output Fields

Field Name	Field Description
node-name	Name of the destination node.
Address	Address of the destination node.
Primary next-hop	Interface and name of the node of the primary next hop to reach the destination.
Root	Name of the next-hop neighbor.
Metric	Metric to the node.
Eligible	Indicates that the next-hop neighbor has been designated as a backup path to the destination node.
Backup next-hop	Name of the interface of the backup next hop.
SNPA	Subnetwork point of attachment (MAC address of the next hop).
LSP	Name of the MPLS label-switched path (LSP) designated as a backup path.
Not eligible	Indicates that the next-hop neighbor cannot function as a backup path to the destination.
Reason	Describes why the next-hop neighbor is designated as Not eligible as a backup path.

Sample Output

show isis backup spf results

```
user@host> show isis backup spf results
```

```
IS-IS level 1 SPF results:
 0 nodes

IS-IS level 2 SPF results:
banff.00
Primary next-hop: so-6/0/0.0, IPV4, olympic
Primary next-hop: ae0.0, IPV4, camaro, SNPA: 0:90:69:f:67:f0
Primary next-hop: so-6/0/0.0, IPV6, olympic
Primary next-hop: ae0.0, IPV6, camaro, SNPA: 0:90:69:f:67:f0
Root: camaro, Root Metric: 10, Metric: 10
```

```

    Not eligible, Reason: Primary next-hop multipath
    Root: olympic, Root Metric: 10, Metric: 10
    Not eligible, Reason: Primary next-hop multipath
    Root: glacier, Root Metric: 10, Metric: 25
    Not eligible, Reason: Primary next-hop multipath
crater.00
    Primary next-hop: so-6/0/0.0, IPV4, olympic
    Primary next-hop: so-6/0/0.0, IPV6, olympic
    Root: olympic, Root Metric: 10, Metric: 10
    Not eligible, Reason: Primary next-hop link fate sharing
    Root: glacier, Root Metric: 10, Metric: 15
    Eligible, Backup next-hop: as0.0, IPV4, glacier
    Eligible, Backup next-hop: as0.0, IPV6, glacier
    Root: camaro, Root Metric: 10, Metric: 20
    Not eligible, Reason: Interface is already covered
olympic.00
    Primary next-hop: so-6/0/0.0, IPV4, olympic
    Primary next-hop: so-6/0/0.0, IPV6, olympic
    Root: olympic, Root Metric: 10, Metric: 0
    Not eligible, Reason: Primary next-hop link fate sharing
    Root: camaro, Root Metric: 10, Metric: 20
    track-item: olympic.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
    Root: glacier, Root Metric: 10, Metric: 20
    track-item: olympic.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
camaro.00
    Primary next-hop: ae0.0, IPV4, camaro, SNPA: 0:90:69:f:67:f0
    Primary next-hop: ae0.0, IPV6, camaro, SNPA: 0:90:69:f:67:f0
    Root: camaro, Root Metric: 10, Metric: 0
    Not eligible, Reason: Primary next-hop link fate sharing
    Root: glacier, Root Metric: 10, Metric: 20
    track-item: camaro.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
    Root: olympic, Root Metric: 10, Metric: 20
    track-item: camaro.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
glacier.00
    Primary next-hop: as0.0, IPV4, glacier
    Primary next-hop: as0.0, IPV6, glacier
    Root: glacier, Root Metric: 10, Metric: 0
    Not eligible, Reason: Primary next-hop link fate sharing
    Root: camaro, Root Metric: 10, Metric: 20
    track-item: glacier.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
    Root: olympic, Root Metric: 10, Metric: 20
    track-item: glacier.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
5 nodes

```

show isis backup spf results no-coverage

```
user@host> show isis backup spf results no-coverage
```

```

IS-IS level 1 SPF results:
pro-bng3-k.00
  Primary next-hop: fe-1/3/3.0, IPV4, pro-bng3-k, SNPA: b0:c6:9a:2c:f0:de
  Primary next-hop: fe-1/3/3.0, IPV6, pro-bng3-k, SNPA: b0:c6:9a:2c:f0:de
  Root: pro-bng3-k, Root Metric: 10, Metric: 0, Root Preference: 0x0
  Root: pro-bng3-i, Root Metric: 10, Metric: 20, Root Preference: 0x0
  track-item: pro-bng3-k.00-00
  track-item: pro-bng3-j.00-00
pro-bng3-i.00
  Primary next-hop: fe-0/1/2.0, IPV4, pro-bng3-i, SNPA: b0:c6:9a:2a:f4:21
  Primary next-hop: fe-0/1/2.0, IPV6, pro-bng3-i, SNPA: b0:c6:9a:2a:f4:21
  Root: pro-bng3-i, Root Metric: 10, Metric: 0, Root Preference: 0x0
  Root: pro-bng3-k, Root Metric: 10, Metric: 20, Root Preference: 0x0
  track-item: pro-bng3-j.00-00
  track-item: pro-bng3-i.00-00
2 nodes

IS-IS level 2 SPF results:
olympic.00
  Primary next-hop: so-6/0/0.0, IPV4, olympic
  Primary next-hop: so-6/0/0.0, IPV6, olympic
  Root: olympic, Root Metric: 10, Metric: 0
  Not eligible, Reason: Primary next-hop link fate sharing
  Root: camaro, Root Metric: 10, Metric: 20
  track-item: olympic.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
  Root: glacier, Root Metric: 10, Metric: 20
  track-item: olympic.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
camaro.00
  Primary next-hop: ae0.0, IPV4, camaro, SNPA: 0:90:69:f:67:f0
  Primary next-hop: ae0.0, IPV6, camaro, SNPA: 0:90:69:f:67:f0
  Root: camaro, Root Metric: 10, Metric: 0
  Not eligible, Reason: Primary next-hop link fate sharing
  Root: glacier, Root Metric: 10, Metric: 20
  track-item: camaro.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
  Root: olympic, Root Metric: 10, Metric: 20
  track-item: camaro.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
glacier.00
  Primary next-hop: as0.0, IPV4, glacier
  Primary next-hop: as0.0, IPV6, glacier
  Root: glacier, Root Metric: 10, Metric: 0
  Not eligible, Reason: Primary next-hop link fate sharing
  Root: camaro, Root Metric: 10, Metric: 20
  track-item: glacier.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
  Root: olympic, Root Metric: 10, Metric: 20
  track-item: glacier.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
3 nodes

```

show isis context-identifier

Syntax show isis context-identifier
 <brief | detail | extensive>
 <identifier name>
 <instance instance-name>
 <logical-system (all | logical-system-name)>

Release Information Command introduced in Junos OS Release 10.4.

Description Display IS-IS context identifier information.

Options **brief | detail | extensive**—(Optional) Display the specified level of output.

identifier name—(Optional) Display information about the specified context identifier.

instance instance-name—(Optional) Display entries for the specified routing instance.

logical-system (all | logical-system-name)—(Optional) Display the context identifier information for all logical systems or for a particular logical system.

Required Privilege Level View

Output Fields [Table 156 on page 2081](#) lists the output fields for the **show isis context-identifier** command. Output fields are listed in the approximate order in which they appear.

Table 156: show isis context-identifier Output Fields

Field Name	Field Description	Level of Output
Context	IPv4 address that defines a protection pair. The context is manually configured on both primary and protector PEs.	detail
Owner	Protocol that requires the context.	detail
Role	Role of the PE, which is either primary or protector.	detail
Primary	Name of the primary PE.	detail
Metric	Advertised interior gateway protocol (IGP) metric.	detail

Sample Output

```
user@host> show isis context-identifier detail
```

```
IS-IS context database:
Context          Owner      Role      Primary    Metric
```

```

2.2.4.3          MPLS      Primary    pro3-e          1
Advertiser pro3-e, Router ID 10.255.245.198, Metric 1, Level 1
Advertiser pro3-e, Router ID 10.255.245.198, Metric 1, Level 2
Advertiser pro3-c, Router ID 10.255.245.196, Metric 11, Level 2
  
```

show isis database

List of Syntax [Syntax on page 2083](#)
 [Syntax \(EX Series Switches and QFX Series\) on page 2083](#)

Syntax show isis database
 <system-id>
 <brief | detail | extensive>
 <instance *instance-name*>
 <level (1 | 2)>
 <logical-system (all | *logical-system-name*)>

Syntax (EX Series Switches and QFX Series) show isis database
 <system-id>
 <brief | detail | extensive>
 <level (1 | 2)>
 <instance *instance-name*>

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 12.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
 Command introduced in Junos OS Release 15.1X53-D30 for the QFX10002 switch.

Description Display the entries in the Intermediate System-to-Intermediate System (IS-IS) link-state database, which contains data about PDU packets.

Options **none**—Display standard information about IS-IS link-state database entries for all routing instances.

system id—(Optional) Display IS-IS link-state database entries for the specified intermediate system.

brief | detail | extensive—(Optional) Display the specified level of output.

instance *instance-name*—(Optional) Display IS-IS link-state database entries for the specified routing instance.

level (1 | 2)—(Optional) Display IS-IS link-state database entries for the specified IS-IS level.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation • [clear isis database on page 2060](#)

List of Sample Output [show isis database on page 2085](#)
[show isis database brief on page 2086](#)
[show isis database detail on page 2086](#)
[show isis database extensive on page 2087](#)
[show isis database extensive \(SPRING\) on page 2096](#)

Output Fields [Table 157 on page 2084](#) describes the output fields for the **show isis database** command. Output fields are listed in the approximate order in which they appear. Fields that contain internal IS-IS information useful only in troubleshooting obscure problems are not described in the table. For more details about these fields, contact your customer support representative.

Table 157: show isis database Output Fields

Field Name	Field Description	Level of Output
Interface name	Name of the interface on which the link-state PDU has been received; always IS-IS for this command.	All levels
level	Level of intermediate system: <ul style="list-style-type: none"> • 1—Intermediate system routes within an area; when the destination is outside an area, it routes toward a Level 2 system. • 2—Intermediate system routes between areas and toward other ASs. 	All levels
LSP ID	Link-state PDU identifier.	All levels
Sequence	Sequence number of the link-state PDU.	All levels
Checksum	Checksum value of the link-state PDU.	All levels
Lifetime (secs)	Remaining lifetime of the link-state PDU, in seconds.	All levels
Attributes	Attributes of the specified database: L1 , L2 , Overload , or Attached (L1 only).	none brief
# LSPs	Total number of link-state PDUs in the specified link-state database.	none brief
IP prefix	Prefix advertised by this link-state PDU.	detail extensive
IS neighbor	IS-IS neighbor of the advertising system.	detail extensive
IP prefix	IPv4 prefix advertised by this link-state PDU.	detail extensive
V6 prefix	IPv6 prefix advertised by this link-state PDU.	detail extensive
Metric	Metric of the prefix or neighbor.	detail extensive

Table 157: show isis database Output Fields (continued)

Field Name	Field Description	Level of Output
Header	<ul style="list-style-type: none"> • LSP ID—Link state PDU identifier of the header. • Length—Header length. • Allocated Length—Amount of length available for the header. • Router ID—Address of the local routing device. • Remaining Lifetime—Remaining lifetime of the link-state PDU, in seconds. 	extensive
Packet	<ul style="list-style-type: none"> • LSP ID—The identifier for the link-state PDU. • Length—Packet length. • Lifetime—Remaining lifetime, in seconds. • Checksum—The checksum of the link-state PDU. • Sequence—The sequence number of the link-state PDU. Every time the link-state PDU is updated, this number increments. • Attributes—Packet attributes. • NLPID—Network layer protocol identifier. • Fixed length—Specifies the set length for the packet. 	extensive
TLVs	<ul style="list-style-type: none"> • Area Address—Area addresses that the routing device can reach. • Speaks—Supported routing protocols. • IP router id—ID of the routing device (usually the IP address). • IP address—IPv4 address. • Hostname—Assigned name of the routing device. • IP prefix—IP prefix of the routing device. • Metric—IS-IS metric that measures the cost of the adjacency between the originating routing device and the advertised routing device. • IP extended prefix—Extended IP prefix of the routing device. • IS neighbor—Directly attached neighbor's name and metric. • IS extended neighbor—Directly attached neighbor's name, metric, IP address, local interface index, and remote interface index. The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205. • Router Capability—ID of the routing device and flag. NOTE: Router capability also specifies SPRING capability and SPRING algorithm when segment routing is enabled on the routing device. 	extensive
Extended IS Reachability TLV	Type and length of the TLV is useful to identify the IS extended neighbors packed in this TLV.	extensive
SubTLV len	The length of the SubTLV of IS extended neighbor.	extensive

Sample Output

show isis database

```
user@host> show isis database
```

IS-IS level 1 link-state database:

LSP ID	Sequence	Checksum	Lifetime	Attributes
kobuk.00-00	0x3	0x3167	1057	L1 L2
camaro.00-00	0x5	0x770e	1091	L1 L2
ranier.00-00	0x4	0xaa95	1091	L1 L2
glacier.00-00	0x4	0x206f	1089	L1 L2
glacier.02-00	0x1	0xd141	1089	L1 L2
badlands.00-00	0x3	0x87a2	1093	L1 L2

6 LSPs

IS-IS level 2 link-state database:

LSP ID	Sequence	Checksum	Lifetime	Attributes
kobuk.00-00	0x6	0x8d6b	1096	L1 L2
camaro.00-00	0x9	0x877b	1101	L1 L2
ranier.00-00	0x8	0x855d	1103	L1 L2
glacier.00-00	0x7	0xf892	1098	L1 L2
glacier.02-00	0x1	0xd141	1089	L1 L2
badlands.00-00	0x6	0x562	1105	L1 L2

6 LSPs

show isis database brief

The output for the **show isis database brief** command is identical to that for the **show isis database** command. For sample output, see [show isis database on page 2085](#).

show isis database detail

```
user@host> show isis database logical-system CE3 sisira.00-00 detail
```

IS-IS level 1 link-state database:

sisira.00-00 Sequence: 0x11, Checksum: 0x10fc, Lifetime: 975 secs

IS neighbor: hemantha-CE3.02	Metric:	10
ES neighbor: 0015.0015.0015	Metric:	10 Down
ES neighbor: 0025.0025.0025	Metric:	10 Down
ES neighbor: 0030.0030.0030	Metric:	10 Down
ES neighbor: 0040.0040.0040	Metric:	10 Down
ES neighbor: sisira	Metric:	0
IP prefix: 1.0.0.0/24	Metric:	10 External Down
IP prefix: 3.0.0.0/24	Metric:	10 External Down
IP prefix: 4.0.0.0/24	Metric:	10 External Down
IP prefix: 5.0.0.0/24	Metric:	10 Internal Up
IP prefix: 15.15.15.15/32	Metric:	10 External Down
IP prefix: 25.25.25.25/32	Metric:	10 External Down
IP prefix: 30.30.30.30/32	Metric:	10 External Down
IP prefix: 40.40.40.40/32	Metric:	10 External Down
IP prefix: 60.60.60.60/32	Metric:	0 Internal Up

IS-IS level 2 link-state database:

sisira.00-00 Sequence: 0x13, Checksum: 0x69ac, Lifetime: 993 secs

IS neighbor: hemantha-CE3.02	Metric:	10
IP prefix: 1.0.0.0/24	Metric:	10 External Down
IP prefix: 3.0.0.0/24	Metric:	10 External Down
IP prefix: 4.0.0.0/24	Metric:	10 External Down
IP prefix: 5.0.0.0/24	Metric:	10 Internal Up
IP prefix: 15.15.15.15/32	Metric:	10 External Down
IP prefix: 25.25.25.25/32	Metric:	10 External Down

```

IP prefix: 30.30.30.30/32          Metric:      10 External Down
IP prefix: 40.40.40.40/32          Metric:      10 External Down
IP prefix: 50.50.50.50/32          Metric:      10 Internal Up
IP prefix: 60.60.60.60/32          Metric:       0 Internal Up
ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0015.0015.0015/152
                                          Metric:      10 External Down
ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0025.0025.0025/152
                                          Metric:      10 External Down
ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0030.0030.0030/152
                                          Metric:      10 External Down
ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0040.0040.0040/152
                                          Metric:      10 External Down
ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0060.0060.0060/152
                                          Metric:       0 Internal Up

```

show isis database extensive

```
user@host> show isis database extensive
```

```
IS-IS level 1 link-state database:
```

```
sisira.00-00 Sequence: 0x11, Checksum: 0x10fc, Lifetime: 970 secs
```

```
IS neighbor: hemantha-CE3.02          Metric:      10
```

```
Two-way fragment: hemantha-CE3.02-00, Two-way first fragment:
```

```
hemantha-CE3.02-00
```

```
ES neighbor: 0015.0015.0015          Metric:      10 Down
```

```
ES neighbor: 0025.0025.0025          Metric:      10 Down
```

```
ES neighbor: 0030.0030.0030          Metric:      10 Down
```

```
ES neighbor: 0040.0040.0040          Metric:      10 Down
```

```
ES neighbor: sisira                  Metric:       0
```

```
IP prefix: 1.0.0.0/24                Metric:      10 External Down
```

```
IP prefix: 3.0.0.0/24                Metric:      10 External Down
```

```
IP prefix: 4.0.0.0/24                Metric:      10 External Down
```

```
IP prefix: 5.0.0.0/24                Metric:      10 Internal Up
```

```
IP prefix: 15.15.15.15/32            Metric:      10 External Down
```

```
IP prefix: 25.25.25.25/32            Metric:      10 External Down
```

```
IP prefix: 30.30.30.30/32            Metric:      10 External Down
```

```
IP prefix: 40.40.40.40/32            Metric:      10 External Down
```

```
IP prefix: 60.60.60.60/32            Metric:       0 Internal Up
```

```
Header: LSP ID: sisira.00-00, Length: 336 bytes
```

```
Allocated length: 336 bytes, Router ID: 0.0.0.0
```

```
Remaining lifetime: 970 secs, Level: 1, Interface: 333
```

```
Estimated free bytes: 144, Actual free bytes: 0
```

```
Aging timer expires in: 970 secs
```

```
Protocols: IP, IPv6, CLNS
```

```
Packet: LSP ID: sisira.00-00, Length: 336 bytes, Lifetime : 1198 secs
```

```
Checksum: 0x10fc, Sequence: 0x11, Attributes: 0xb L1 L2 Attached
```

```
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
```

```
Packet type: 18, Packet version: 1, Max area: 0
```

```
TLVs:
```

```
Area address: 60.0006.80ff.f800.0000.0108.0001 (13)
```

```
Speaks: IP
```

```
Speaks: IPV6
```

```
Speaks: CLNP
```

```
Hostname: sisira
```

```
ES neighbor TLV: Internal, Metric: default 0, Up
```

```

ES: sisira
IS neighbor: hemantha-CE3.02, Internal, Metric: default 10
IS extended neighbor: hemantha-CE3.02, Metric: default 10
ES neighbor TLV: External, Metric: default 10, Down
  ES: 0040.0040.0040
ES neighbor TLV: External, Metric: default 10, Down
  ES: 0025.0025.0025
ES neighbor TLV: External, Metric: default 10, Down
  ES: 0015.0015.0015
ES neighbor TLV: External, Metric: default 10, Down
  ES: 0030.0030.0030
IP external prefix: 3.0.0.0/24, Internal, Metric: default 10, Down
IP external prefix: 40.40.40.40/32, Internal, Metric: default 10, Down
IP external prefix: 4.0.0.0/24, Internal, Metric: default 10, Down
IP external prefix: 25.25.25.25/32, Internal, Metric: default 10, Down
IP external prefix: 15.15.15.15/32, Internal, Metric: default 10, Down
IP external prefix: 1.0.0.0/24, Internal, Metric: default 10, Down
IP external prefix: 30.30.30.30/32, Internal, Metric: default 10, Down
IP extended prefix: 3.0.0.0/24 metric 10 down
IP extended prefix: 40.40.40.40/32 metric 10 down
IP extended prefix: 4.0.0.0/24 metric 10 down
IP extended prefix: 25.25.25.25/32 metric 10 down
IP extended prefix: 15.15.15.15/32 metric 10 down
IP extended prefix: 1.0.0.0/24 metric 10 down
IP extended prefix: 30.30.30.30/32 metric 10 down
IP prefix: 60.60.60.60/32, Internal, Metric: default 0, Up
IP prefix: 5.0.0.0/24, Internal, Metric: default 10, Up
IP extended prefix: 60.60.60.60/32 metric 0 up
IP extended prefix: 5.0.0.0/24 metric 10 up
No queued transmissions

```

IS-IS level 2 link-state database:

```

Router-A.00-00 Sequence: 0x5, Checksum: 0x3196, Lifetime: 1158 secs
  IS neighbor: Router-B.02 Metric: 10
    Two-way fragment: Router-B.02-00, Two-way first fragment: Router-B.02-00
  IS neighbor: Router-E.02 Metric: 10
    Two-way fragment: Router-E.02-00, Two-way first fragment: Router-E.02-00
IP prefix: 10.0.0.0/30 Metric: 10 Internal Up
IP prefix: 10.0.0.4/30 Metric: 10 Internal Up
IP prefix: 192.168.0.1/32 Metric: 0 Internal Up

```

```

Header: LSP ID: Router-A.00-00, Length: 208 bytes
  Allocated length: 1492 bytes, Router ID: 192.168.0.1
  Remaining lifetime: 1158 secs, Level: 2, Interface: 0
  Estimated free bytes: 1233, Actual free bytes: 1284
  Aging timer expires in: 1158 secs
  Protocols: IP, IPv6

```

```

Packet: LSP ID: Router-A.00-00, Length: 208 bytes, Lifetime : 1198 secs
  Checksum: 0x3196, Sequence: 0x5, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

```

```

TLVs:
  Area address: 49.0002 (3)
  LSP Buffer Size: 1492
  Speaks: IP
  Speaks: IPV6
  IP router id: 192.168.0.1

```

```

IP address: 192.168.0.1
Hostname: Router-A
IP prefix: 192.168.0.1/32, Internal, Metric: default 0, Up
IP prefix: 10.0.0.4/30, Internal, Metric: default 10, Up
IP prefix: 10.0.0.0/30, Internal, Metric: default 10, Up
IP extended prefix: 192.168.0.1/32 metric 0 up
IP extended prefix: 10.0.0.4/30 metric 10 up
IP extended prefix: 10.0.0.0/30 metric 10 up
IS neighbor: Router-E.02, Internal, Metric: default 10
IS neighbor: Router-B.02, Internal, Metric: default 10
IS extended neighbor: Router-E.02, Metric: default 10
  IP address: 10.0.0.1
  Local interface index: 101, Remote interface index: 0
IS extended neighbor: Router-B.02, Metric: default 10
  IP address: 10.0.0.5
  Local interface index: 102, Remote interface index: 0
No queued transmissions

Router-B.00-00 Sequence: 0x5, Checksum: 0xf8f, Lifetime: 1183 secs
IS neighbor: Router-B.02 Metric: 10
  Two-way fragment: Router-B.02-00, Two-way first fragment: Router-B.02-00
IS neighbor: Router-C.02 Metric: 10
  Two-way fragment: Router-C.02-00, Two-way first fragment: Router-C.02-00
IP prefix: 10.0.0.4/30 Metric: 10 Internal Up
IP prefix: 10.0.0.8/30 Metric: 10 Internal Up
IP prefix: 192.168.0.2/32 Metric: 0 Internal Up

Header: LSP ID: Router-B.00-00, Length: 208 bytes
  Allocated length: 284 bytes, Router ID: 192.168.0.2
  Remaining lifetime: 1183 secs, Level: 2, Interface: 102
  Estimated free bytes: 114, Actual free bytes: 76
  Aging timer expires in: 1183 secs
  Protocols: IP, IPv6

Packet: LSP ID: Router-B.00-00, Length: 208 bytes, Lifetime : 1196 secs
  Checksum: 0xf8f, Sequence: 0x5, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

TLVs:
  Area address: 49.0002 (3)
  LSP Buffer Size: 1492
  Speaks: IP
  Speaks: IPV6
  IP router id: 192.168.0.2
  IP address: 192.168.0.2
  Hostname: Router-B
  IP prefix: 192.168.0.2/32, Internal, Metric: default 0, Up
  IP prefix: 10.0.0.4/30, Internal, Metric: default 10, Up
  IP prefix: 10.0.0.8/30, Internal, Metric: default 10, Up
  IP extended prefix: 192.168.0.2/32 metric 0 up
  IP extended prefix: 10.0.0.4/30 metric 10 up
  IP extended prefix: 10.0.0.8/30 metric 10 up
  IS neighbor: Router-B.02, Internal, Metric: default 10
  IS neighbor: Router-C.02, Internal, Metric: default 10
  IS extended neighbor: Router-B.02, Metric: default 10
    IP address: 10.0.0.6
    Local interface index: 108, Remote interface index: 0
  IS extended neighbor: Router-C.02, Metric: default 10
    IP address: 10.0.0.9

```

```

    Local interface index: 109, Remote interface index: 0
    No queued transmissions

Router-B.02-00 Sequence: 0x1, Checksum: 0x3c7c, Lifetime: 1156 secs
  IS neighbor: Router-A.00                      Metric: 0
    Two-way fragment: Router-A.00-00, Two-way first fragment: Router-A.00-00
  IS neighbor: Router-B.00                      Metric: 0
    Two-way fragment: Router-B.00-00, Two-way first fragment: Router-B.00-00

Header: LSP ID: Router-B.02-00, Length: 76 bytes
  Allocated length: 284 bytes, Router ID: 0.0.0.0
  Remaining lifetime: 1156 secs, Level: 2, Interface: 102
  Estimated free bytes: 208, Actual free bytes: 208
  Aging timer expires in: 1156 secs

Packet: LSP ID: Router-B.02-00, Length: 76 bytes, Lifetime : 1196 secs
  Checksum: 0x3c7c, Sequence: 0x1, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

TLVs:
  IS neighbor: Router-B.00, Internal, Metric: default 0
  IS neighbor: Router-A.00, Internal, Metric: default 0
  IS extended neighbor: Router-B.00, Metric: default 0
  IS extended neighbor: Router-A.00, Metric: default 0
  No queued transmissions

Router-C.00-00 Sequence: 0x5, Checksum: 0x255b, Lifetime: 1182 secs
  IS neighbor: Router-C.02                      Metric: 10
    Two-way fragment: Router-C.02-00, Two-way first fragment: Router-C.02-00
  IS neighbor: Router-D.03                      Metric: 10
    Two-way fragment: Router-D.03-00, Two-way first fragment: Router-D.03-00
  IP prefix: 10.0.0.8/30                      Metric: 10 Internal Up
  IP prefix: 10.0.0.12/30                     Metric: 10 Internal Up
  IP prefix: 192.168.0.3/32                   Metric: 0 Internal Up

Header: LSP ID: Router-C.00-00, Length: 208 bytes
  Allocated length: 284 bytes, Router ID: 192.168.0.3
  Remaining lifetime: 1182 secs, Level: 2, Interface: 102
  Estimated free bytes: 114, Actual free bytes: 76
  Aging timer expires in: 1182 secs
  Protocols: IP, IPv6

Packet: LSP ID: Router-C.00-00, Length: 208 bytes, Lifetime : 1196 secs
  Checksum: 0x255b, Sequence: 0x5, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

TLVs:
  Area address: 49.0002 (3)
  LSP Buffer Size: 1492
  Speaks: IP
  Speaks: IPV6
  IP router id: 192.168.0.3
  IP address: 192.168.0.3
  Hostname: Router-C
  IP prefix: 192.168.0.3/32, Internal, Metric: default 0, Up
  IP prefix: 10.0.0.8/30, Internal, Metric: default 10, Up
  IP prefix: 10.0.0.12/30, Internal, Metric: default 10, Up
  IP extended prefix: 192.168.0.3/32 metric 0 up

```

```

IP extended prefix: 10.0.0.8/30 metric 10 up
IP extended prefix: 10.0.0.12/30 metric 10 up
IS neighbor: Router-C.02, Internal, Metric: default 10
IS neighbor: Router-D.03, Internal, Metric: default 10
IS extended neighbor: Router-C.02, Metric: default 10
  IP address: 10.0.0.10
  Local interface index: 105, Remote interface index: 0
IS extended neighbor: Router-D.03, Metric: default 10
  IP address: 10.0.0.13
  Local interface index: 106, Remote interface index: 0
No queued transmissions

Router-C.02-00 Sequence: 0x1, Checksum: 0xaa09, Lifetime: 1181 secs
  IS neighbor: Router-B.00 Metric: 0
    Two-way fragment: Router-B.00-00, Two-way first fragment: Router-B.00-00
  IS neighbor: Router-C.00 Metric: 0
    Two-way fragment: Router-C.00-00, Two-way first fragment: Router-C.00-00

Header: LSP ID: Router-C.02-00, Length: 76 bytes
  Allocated length: 284 bytes, Router ID: 0.0.0.0
  Remaining lifetime: 1181 secs, Level: 2, Interface: 102
  Estimated free bytes: 208, Actual free bytes: 208
  Aging timer expires in: 1181 secs

Packet: LSP ID: Router-C.02-00, Length: 76 bytes, Lifetime : 1194 secs
  Checksum: 0xaa09, Sequence: 0x1, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

TLVs:
  IS neighbor: Router-C.00, Internal, Metric: default 0
  IS neighbor: Router-B.00, Internal, Metric: default 0
  IS extended neighbor: Router-C.00, Metric: default 0
  IS extended neighbor: Router-B.00, Metric: default 0
No queued transmissions

Router-D.00-00 Sequence: 0x4, Checksum: 0x8ab7, Lifetime: 1180 secs
  IS neighbor: Router-D.02 Metric: 10
    Two-way fragment: Router-D.02-00, Two-way first fragment: Router-D.02-00
  IS neighbor: Router-D.03 Metric: 10
    Two-way fragment: Router-D.03-00, Two-way first fragment: Router-D.03-00
  IP prefix: 10.0.0.12/30 Metric: 10 Internal Up
  IP prefix: 10.0.0.20/30 Metric: 10 Internal Up
  IP prefix: 192.168.0.4/32 Metric: 0 Internal Up

Header: LSP ID: Router-D.00-00, Length: 208 bytes
  Allocated length: 284 bytes, Router ID: 192.168.0.4
  Remaining lifetime: 1180 secs, Level: 2, Interface: 102
  Estimated free bytes: 114, Actual free bytes: 76
  Aging timer expires in: 1180 secs
  Protocols: IP, IPv6

Packet: LSP ID: Router-D.00-00, Length: 208 bytes, Lifetime : 1192 secs
  Checksum: 0x8ab7, Sequence: 0x4, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

TLVs:
  Area address: 49.0002 (3)
  LSP Buffer Size: 1492

```

```

Speaks: IP
Speaks: IPV6
IP router id: 192.168.0.4
IP address: 192.168.0.4
Hostname: Router-D
IP prefix: 192.168.0.4/32, Internal, Metric: default 0, Up
IP prefix: 10.0.0.12/30, Internal, Metric: default 10, Up
IP prefix: 10.0.0.20/30, Internal, Metric: default 10, Up
IP extended prefix: 192.168.0.4/32 metric 0 up
IP extended prefix: 10.0.0.12/30 metric 10 up
IP extended prefix: 10.0.0.20/30 metric 10 up
IS neighbor: Router-D.02, Internal, Metric: default 10
IS neighbor: Router-D.03, Internal, Metric: default 10
IS extended neighbor: Router-D.02, Metric: default 10
    IP address: 10.0.0.22
    Local interface index: 115, Remote interface index: 0
IS extended neighbor: Router-D.03, Metric: default 10
    IP address: 10.0.0.14
    Local interface index: 114, Remote interface index: 0
No queued transmissions

Router-D.02-00 Sequence: 0x1, Checksum: 0xebbc, Lifetime: 1128 secs
IS neighbor: Router-D.00                      Metric: 0
    Two-way fragment: Router-D.00-00, Two-way first fragment: Router-D.00-00
IS neighbor: Router-F.00                      Metric: 0
    Two-way fragment: Router-F.00-00, Two-way first fragment: Router-F.00-00

Header: LSP ID: Router-D.02-00, Length: 76 bytes
Allocated length: 284 bytes, Router ID: 0.0.0.0
Remaining lifetime: 1128 secs, Level: 2, Interface: 101
Estimated free bytes: 208, Actual free bytes: 208
Aging timer expires in: 1128 secs

Packet: LSP ID: Router-D.02-00, Length: 76 bytes, Lifetime : 1160 secs
Checksum: 0xebbc, Sequence: 0x1, Attributes: 0x3 <L1 L2>
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
Packet type: 20, Packet version: 1, Max area: 0

TLVs:
IS neighbor: Router-D.00, Internal, Metric: default 0
IS neighbor: Router-F.00, Internal, Metric: default 0
IS extended neighbor: Router-D.00, Metric: default 0
IS extended neighbor: Router-F.00, Metric: default 0
No queued transmissions

Router-D.03-00 Sequence: 0x1, Checksum: 0x129b, Lifetime: 1180 secs
IS neighbor: Router-C.00                      Metric: 0
    Two-way fragment: Router-C.00-00, Two-way first fragment: Router-C.00-00
IS neighbor: Router-D.00                      Metric: 0
    Two-way fragment: Router-D.00-00, Two-way first fragment: Router-D.00-00

Header: LSP ID: Router-D.03-00, Length: 76 bytes
Allocated length: 284 bytes, Router ID: 0.0.0.0
Remaining lifetime: 1180 secs, Level: 2, Interface: 101
Estimated free bytes: 208, Actual free bytes: 208
Aging timer expires in: 1180 secs

Packet: LSP ID: Router-D.03-00, Length: 76 bytes, Lifetime : 1192 secs
Checksum: 0x129b, Sequence: 0x1, Attributes: 0x3 <L1 L2>
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes

```


Packet type: 20, Packet version: 1, Max area: 0

TLVs:

IS neighbor: Router-D.00, Internal, Metric: default 0
 IS neighbor: Router-C.00, Internal, Metric: default 0
 IS extended neighbor: Router-D.00, Metric: default 0
 IS extended neighbor: Router-C.00, Metric: default 0

No queued transmissions

Router-E.00-00 Sequence: 0x4, Checksum: 0x9da9, Lifetime: 1155 secs

IS neighbor: Router-E.02 Metric: 10
 Two-way fragment: Router-E.02-00, Two-way first fragment: Router-E.02-00
 IS neighbor: Router-F.02 Metric: 20
 Two-way fragment: Router-F.02-00, Two-way first fragment: Router-F.02-00
 IP prefix: 10.0.0.0/30 Metric: 10 Internal Up
 IP prefix: 10.0.0.16/30 Metric: 20 Internal Up
 IP prefix: 192.168.0.5/32 Metric: 0 Internal Up

Header: LSP ID: Router-E.00-00, Length: 208 bytes

Allocated length: 284 bytes, Router ID: 192.168.0.5
 Remaining lifetime: 1155 secs, Level: 2, Interface: 101
 Estimated free bytes: 114, Actual free bytes: 76
 Aging timer expires in: 1155 secs
 Protocols: IP, IPv6

Packet: LSP ID: Router-E.00-00, Length: 208 bytes, Lifetime : 1185 secs

Checksum: 0x9da9, Sequence: 0x4, Attributes: 0x3 <L1 L2>
 NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
 Packet type: 20, Packet version: 1, Max area: 0

TLVs:

Area address: 49.0002 (3)
 LSP Buffer Size: 1492
 Speaks: IP
 Speaks: IPV6
 IP router id: 192.168.0.5
 IP address: 192.168.0.5
 Hostname: Router-E
 IP prefix: 192.168.0.5/32, Internal, Metric: default 0, Up
 IP prefix: 10.0.0.16/30, Internal, Metric: default 20, Up
 IP prefix: 10.0.0.0/30, Internal, Metric: default 10, Up
 IP extended prefix: 192.168.0.5/32 metric 0 up
 IP extended prefix: 10.0.0.16/30 metric 20 up
 IP extended prefix: 10.0.0.0/30 metric 10 up
 IS neighbor: Router-E.02, Internal, Metric: default 10
 IS neighbor: Router-F.02, Internal, Metric: default 20
 IS extended neighbor: Router-E.02, Metric: default 10
 IP address: 10.0.0.2
 Local interface index: 112, Remote interface index: 0
 IS extended neighbor: Router-F.02, Metric: default 20
 IP address: 10.0.0.17
 Local interface index: 111, Remote interface index: 0

No queued transmissions

Router-E.02-00 Sequence: 0x1, Checksum: 0xb4fa, Lifetime: 1130 secs

IS neighbor: Router-A.00 Metric: 0
 Two-way fragment: Router-A.00-00, Two-way first fragment: Router-A.00-00
 IS neighbor: Router-E.00 Metric: 0
 Two-way fragment: Router-E.00-00, Two-way first fragment: Router-E.00-00

```
Header: LSP ID: Router-E.02-00, Length: 76 bytes
        Allocated length: 284 bytes, Router ID: 0.0.0.0
        Remaining lifetime: 1130 secs, Level: 2, Interface: 101
        Estimated free bytes: 208, Actual free bytes: 208
        Aging timer expires in: 1130 secs

Packet: LSP ID: Router-E.02-00, Length: 76 bytes, Lifetime : 1161 secs
        Checksum: 0xb4fa, Sequence: 0x1, Attributes: 0x3 <L1 L2>
        NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
        Packet type: 20, Packet version: 1, Max area: 0
```

```
TLVs:
  IS neighbor: Router-E.00, Internal, Metric: default 0
  IS neighbor: Router-A.00, Internal, Metric: default 0
  IS extended neighbor: Router-E.00, Metric: default 0
  IS extended neighbor: Router-A.00, Metric: default 0
No queued transmissions
```

```
Router-F.00-00 Sequence: 0x5, Checksum: 0x94bd, Lifetime: 1153 secs
  IS neighbor: Router-D.02                      Metric: 10
    Two-way fragment: Router-D.02-00, Two-way first fragment: Router-D.02-00
  IS neighbor: Router-F.02                      Metric: 10
    Two-way fragment: Router-F.02-00, Two-way first fragment: Router-F.02-00
IP prefix: 10.0.0.16/30                        Metric: 10 Internal Up
IP prefix: 10.0.0.20/30                        Metric: 10 Internal Up
IP prefix: 192.168.0.6/32                     Metric: 0 Internal Up
```

```
Header: LSP ID: Router-F.00-00, Length: 208 bytes
        Allocated length: 284 bytes, Router ID: 192.168.0.6
        Remaining lifetime: 1153 secs, Level: 2, Interface: 101
        Estimated free bytes: 76, Actual free bytes: 76
        Aging timer expires in: 1153 secs
        Protocols: IP, IPv6
```

```
Packet: LSP ID: Router-F.00-00, Length: 208 bytes, Lifetime : 1183 secs
        Checksum: 0x94bd, Sequence: 0x5, Attributes: 0x3 <L1 L2>
        NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
        Packet type: 20, Packet version: 1, Max area: 0
```

```
TLVs:
  Area address: 49.0002 (3)
  LSP Buffer Size: 1492
  Speaks: IP
  Speaks: IPV6
  IP router id: 192.168.0.6
  IP address: 192.168.0.6
  Hostname: Router-F
  IP prefix: 192.168.0.6/32, Internal, Metric: default 0, Up
  IP prefix: 10.0.0.16/30, Internal, Metric: default 10, Up
  IP prefix: 10.0.0.20/30, Internal, Metric: default 10, Up
  IP extended prefix: 192.168.0.6/32 metric 0 up
  IP extended prefix: 10.0.0.16/30 metric 10 up
  IP extended prefix: 10.0.0.20/30 metric 10 up
  IS neighbor: Router-D.02, Internal, Metric: default 10
  IS neighbor: Router-F.02, Internal, Metric: default 10
  IS extended neighbor: Router-D.02, Metric: default 10
    IP address: 10.0.0.21
    Local interface index: 94, Remote interface index: 0
  IS extended neighbor: Router-F.02, Metric: default 10
    IP address: 10.0.0.18
```

```

    Local interface index: 93, Remote interface index: 0
    No queued transmissions

Router-E.02-00 Sequence: 0x1, Checksum: 0xb4fa, Lifetime: 1130 secs
  IS neighbor: Router-A.00                      Metric: 0
    Two-way fragment: Router-A.00-00, Two-way first fragment: Router-A.00-00
  IS neighbor: Router-E.00                      Metric: 0
    Two-way fragment: Router-E.00-00, Two-way first fragment: Router-E.00-00

Header: LSP ID: Router-E.02-00, Length: 76 bytes
  Allocated length: 284 bytes, Router ID: 0.0.0.0
  Remaining lifetime: 1130 secs, Level: 2, Interface: 101
  Estimated free bytes: 208, Actual free bytes: 208
  Aging timer expires in: 1130 secs

Packet: LSP ID: Router-E.02-00, Length: 76 bytes, Lifetime : 1161 secs
  Checksum: 0xb4fa, Sequence: 0x1, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

TLVs:
  IS neighbor: Router-E.00, Internal, Metric: default 0
  IS neighbor: Router-A.00, Internal, Metric: default 0
  IS extended neighbor: Router-E.00, Metric: default 0
  IS extended neighbor: Router-A.00, Metric: default 0
  No queued transmissions

Router-F.00-00 Sequence: 0x5, Checksum: 0x94bd, Lifetime: 1153 secs
  IS neighbor: Router-D.02                      Metric: 10
    Two-way fragment: Router-D.02-00, Two-way first fragment: Router-D.02-00
  IS neighbor: Router-F.02                      Metric: 10
    Two-way fragment: Router-F.02-00, Two-way first fragment: Router-F.02-00
  IP prefix: 10.0.0.16/30                      Metric: 10 Internal Up
  IP prefix: 10.0.0.20/30                      Metric: 10 Internal Up
  IP prefix: 192.168.0.6/32                   Metric: 0 Internal Up

Header: LSP ID: Router-F.00-00, Length: 208 bytes
  Allocated length: 284 bytes, Router ID: 192.168.0.6
  Remaining lifetime: 1153 secs, Level: 2, Interface: 101
  Estimated free bytes: 76, Actual free bytes: 76
  Aging timer expires in: 1153 secs
  Protocols: IP, IPv6

Packet: LSP ID: Router-F.00-00, Length: 208 bytes, Lifetime : 1183 secs
  Checksum: 0x94bd, Sequence: 0x5, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

TLVs:
  Area address: 49.0002 (3)
  LSP Buffer Size: 1492
  Speaks: IP
  Speaks: IPV6
  IP router id: 192.168.0.6
  IP address: 192.168.0.6
  Hostname: Router-F
  IP prefix: 192.168.0.6/32, Internal, Metric: default 0, Up
  IP prefix: 10.0.0.16/30, Internal, Metric: default 10, Up
  IP prefix: 10.0.0.20/30, Internal, Metric: default 10, Up
  IP extended prefix: 192.168.0.6/32 metric 0 up

```

```

IP extended prefix: 10.0.0.16/30 metric 10 up
IP extended prefix: 10.0.0.20/30 metric 10 up
IS neighbor: Router-D.02, Internal, Metric: default 10
IS neighbor: Router-F.02, Internal, Metric: default 10
IS extended neighbor: Router-D.02, Metric: default 10
  IP address: 10.0.0.21
  Local interface index: 94, Remote interface index: 0
IS extended neighbor: Router-F.02, Metric: default 10
  IP address: 10.0.0.18
  Local interface index: 93, Remote interface index: 0
No queued transmissions

Router-F.02-00 Sequence: 0x1, Checksum: 0xf5ae, Lifetime: 1153 secs
IS neighbor: Router-E.00 Metric: 0
  Two-way fragment: Router-E.00-00, Two-way first fragment: Router-E.00-00
IS neighbor: Router-F.00 Metric: 0
  Two-way fragment: Router-F.00-00, Two-way first fragment: Router-F.00-00

Header: LSP ID: Router-F.02-00, Length: 76 bytes
Allocated length: 284 bytes, Router ID: 0.0.0.0
Remaining lifetime: 1153 secs, Level: 2, Interface: 101
Estimated free bytes: 208, Actual free bytes: 208
Aging timer expires in: 1153 secs

Packet: LSP ID: Router-F.02-00, Length: 76 bytes, Lifetime : 1183 secs
Checksum: 0xf5ae, Sequence: 0x1, Attributes: 0x3 <L1 L2>
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
Packet type: 20, Packet version: 1, Max area: 0

TLVs:
IS neighbor: Router-F.00, Internal, Metric: default 0
IS neighbor: Router-E.00, Internal, Metric: default 0
IS extended neighbor: Router-F.00, Metric: default 0
IS extended neighbor: Router-E.00, Metric: default 0
No queued transmissions

```

show isis database extensive (SPRING)

```

user@host> show isis database extensive

Extended IS Reachability TLV, Type: 22, Length: 99
IS extended neighbor: r0.00, Metric: default 10 SubTLV len: 88
  IP address: 11.1.1.2
  Neighbor's IP address: 11.1.1.1
  Local interface index: 333, Remote interface index: 342
  Current reservable bandwidth:
    Priority 0 : 1000Mbps
    Priority 1 : 1000Mbps
    Priority 2 : 1000Mbps
    Priority 3 : 1000Mbps
    Priority 4 : 1000Mbps
    Priority 5 : 1000Mbps
    Priority 6 : 1000Mbps
    Priority 7 : 1000Mbps
Maximum reservable bandwidth: 1000Mbps
Maximum bandwidth: 1000Mbps
Administrative groups: 0 <none>
P2P IPV6 Adj-SID - Flags:0xf0(F:1,B:1,V:1,L:1,S:0,P:0), Weight:0, Label: 401
P2P IPV6 Adj-SID: 401, Weight: 0, Flags: FBVL--
P2P IPV4 Adj-SID - Flags:0x70(F:0,B:1,V:1,L:1,S:0,P:0), Weight:0, Label:

```

400

```

P2P IPv4 Adj-SID:      400, Weight:   0, Flags: -BVL--
Extended IS Reachability TLV, Type: 22, Length: 144
IS extended neighbor: r1.06, Metric: default 10 SubTLV len: 133
IP address: 12.1.1.1
Local interface index: 336, Remote interface index: 0
Current reservable bandwidth:
  Priority 0 : 1000Mbps
  Priority 1 : 1000Mbps
  Priority 2 : 1000Mbps
  Priority 3 : 1000Mbps
  Priority 4 : 1000Mbps
  Priority 5 : 1000Mbps
  Priority 6 : 1000Mbps
  Priority 7 : 1000Mbps
Maximum reservable bandwidth: 1000Mbps
Maximum bandwidth: 1000Mbps
Administrative groups: 0 <none>
LAN IPV6 Adj-SID -, Flags:0xfc(F:1,B:1,V:1,L:1,S:1,P:1), Weight:1
  Neighbor:r2, Label:803125
LAN IPV6 Adj-SID: 803125, Weight:   1, Neighbor: r2, Flags: FBVLSP
LAN IPV4 Adj-SID -, Flags:0x3c(F:0,B:0,V:1,L:1,S:1,P:1), Weight:1
  Neighbor:r2, Label:803122
LAN IPV4 Adj-SID: 803122, Weight:   1, Neighbor: r2, Flags: --VLSP
LAN IPV4 Adj-SID -, Flags:0x7c(F:0,B:1,V:1,L:1,S:1,P:1), Weight:1
  Neighbor:r2, Label:803123
LAN IPV4 Adj-SID: 803123, Weight:   1, Neighbor: r2, Flags: -BVLSP
LAN IPV6 Adj-SID -, Flags:0xf0(F:1,B:1,V:1,L:1,S:0,P:0), Weight:0
  Neighbor:r2, Label:37
LAN IPV6 Adj-SID: 37, Weight:   0, Neighbor: r2, Flags: FBVL--
LAN IPV4 Adj-SID -, Flags:0x70(F:0,B:1,V:1,L:1,S:0,P:0), Weight:0
  Neighbor:r2, Label:36
LAN IPV4 Adj-SID: 36, Weight:   0, Neighbor: r2, Flags: -BVL--

```

show isis hostname

List of Syntax [Syntax on page 2098](#)
[Syntax \(EX Series Switches and QFX Series\) on page 2098](#)

Syntax `show isis hostname`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switches and QFX Series) `show isis hostname`

Release Information Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 9.0 for EX Series switches.
Command introduced in Junos OS Release 12.1 for the QFX Series.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display IS-IS hostname database information.

This command displays the system ID-to-name cache. The output shows if the mapping has been learned by receipt of a Hostname TLV #137 (type dynamic) configured in Junos OS with the **set system host-name** command, or a static mapping defined in Junos OS with the **set system static-host-mapping *hostname* sysid** command (type static). The local router always has its type set to static even if **static-host-mapping** is not configured.

Options **none**—Display IS-IS hostname database information.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show isis hostname on page 2099](#)

Output Fields [Table 158 on page 2098](#) describes the output fields for the **show isis hostname** command. Output fields are listed in the approximate order in which they appear.

Table 158: show isis hostname Output Fields

Field Name	Field Description
System Id	System identifier mapped to the hostname.
Hostname	Hostname mapped to the system identifier.

Table 158: show isis hostname Output Fields (continued)

Field Name	Field Description
Type	Type of mapping between system identifier and hostname. <ul style="list-style-type: none">• Dynamic—Hostname mapping determined as described in RFC 2763, <i>Dynamic Hostname Exchange Mechanism for IS-IS</i>.• Static—Hostname mapping configured by user.

Sample Output

show isis hostname

```
user@host> show isis hostname
IS-IS hostname database:
System Id      Hostname      Type
1921.6800.4201 isis1         Dynamic
1921.6800.4202 isis2         Static
1921.6800.4203 isis3         Dynamic
```

show isis interface

List of Syntax [Syntax on page 2100](#)
 [Syntax \(EX Series Switches and QFX Series\) on page 2100](#)

Syntax show isis interface
 <brief | detail | extensive>
 <interface-name>
 <logical-system (all | *logical-system-name*)>

Syntax (EX Series Switches and QFX Series) show isis interface
 <brief | detail | extensive>
 <interface-name>

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 12.1 for the QFX Series.

Description Display status information about Intermediate System-to-Intermediate System (IS-IS)-enabled interfaces.



NOTE: If the configured metric for an IS-IS level is above 63, and the **wide-metrics-only** statement is not configured, the **show isis interface detail** command and the **show isis interface extensive** command display 63 as the metric value for that level. Configure the **wide-metrics-only** statement to generate metric values greater than 63 on a per IS-IS level basis.

The **show isis interface** command displays the configured metric value for an IS-IS level irrespective of whether is configured or not.

Options **none**—Display standard information about all IS-IS-enabled interfaces.

 brief | detail | extensive—(Optional) Display the specified level of output.

 interface-name—(Optional) Display information about the specified interface only.

 logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation

- *Understanding Wide IS-IS Metrics for Traffic Engineering*
- *Example: Enabling Wide IS-IS Metrics for Traffic Engineering*

List of Sample Output [show isis interface on page 2103](#)
[show isis interface brief on page 2103](#)
[show isis interface detail on page 2103](#)
[show isis interface extensive on page 2103](#)

Output Fields [Table 159 on page 2101](#) describes the output fields for the **show isis interface** command. Output fields are listed in the approximate order in which they appear.

Table 159: show isis interface Output Fields

Field Name	Field Description	Level of Output
interface-name	Name of the interface.	detail
Designated router	Routing device selected by other routers that is responsible for sending link-state advertisements that describe the network. Used only on broadcast networks.	detail
Index	Interface index assigned by the Junos OS kernel.	detail
State	Internal implementation information.	detail
Circuit id	Circuit identifier. NOTE: Each IS-IS interface is assigned a circuit ID value to identify the interface within the linkstate database. All interfaces (loopback, broadcast, and so on) and all point-to-point links share the locally significant value of 0x01, and this value is not incremented.	detail
Circuit type	Circuit type: <ul style="list-style-type: none"> • 1—Level 1 only • 2—Level 2 only • 3—Level 1 and Level 2 	detail
LSP interval	Interval between link-state PDUs sent from the interface.	detail
CSNP interval	Interval between complete sequence number PDUs sent from the interface.	detail extensive
Sysid	System identifier.	detail
Interface	Interface through which the adjacency is made.	none brief
L or Level	Level: <ul style="list-style-type: none"> • 1—Level 1 only • 2—Level 2 only • 3—Level 1 and Level 2 NOTE: The default IS-IS level on loopback interfaces are always same as the IS-IS level configured on other IS-IS interfaces in a router. You can also configure IS-IS level on loopback interfaces per your requirement.	All levels
CirID	Circuit identifier.	none brief

Table 159: show isis interface Output Fields (continued)

Field Name	Field Description	Level of Output
Level 1 DR	Level 1 designated intermediate system.	none brief
Level 2 DR	Level 2 designated intermediate system.	none brief
L1/L2 Metric	Interface's metric for Level 1 and Level 2. If there is no information, the metric is 0.	none brief
Flood-group Area-ID	Flood-group is configured on a specific IS-IS interface NOTE: Seen only when Flood-group is configured.	detail extensive
Adjacency advertisement: Advertise	This routing device has signaled to advertise this interface to its neighbors in their label-switched paths (LSPs).	detail extensive
Adjacency advertisement: Suppress	This neighbor has signaled not to advertise this interface in the routing device's outbound LSPs.	detail extensive
Adjacencies	Number of adjacencies established on this interface.	detail
Priority	Priority value for this interface.	detail
Metric	Metric value for this interface.	detail
Hello(s) / Hello Interval	Interface's hello interval.	detail extensive
Hold(s) / Hold Time	Interface's hold time.	detail extensive
Designated Router	Router responsible for sending network link-state advertisements, which describe all the routing devices attached to the network.	detail
Hello padding	Type of hello padding: <ul style="list-style-type: none"> • Adaptive—On point-to-point connections, the hello packets are padded from the initial detection of a new neighbor until the neighbor verifies the adjacency as Up in the adjacency state TLV. If the neighbor does not support the adjacency state TLV, then padding continues. On LAN connections, padding starts from the initial detection of a new neighbor until there is at least one active adjacency on the interface. • Loose—(Default) The hello packet is padded from the initial detection of a new neighbor until the adjacency transitions to the Up state. • Strict—Padding is performed on all interface types and for all adjacency states, and is continuous. 	extensive
LDP sync state	Current LDP synchronization state: in sync , in holddown , or not supported .	extensive
reason	Reason for being in the LDP sync state.	extensive

Table 159: show isis interface Output Fields (continued)

Field Name	Field Description	Level of Output
config holdtime	Configured value of the hold timer.	extensive
remaining	If the state is not in sync and the hold time is not infinity, then this field displays the remaining hold time in seconds.	extensive
IIH max size	Configured value of IS-IS hello packets	extensive

Sample Output

show isis interface

```
user@host> show isis interface
```

```
IS-IS interface database:
```

Interface	L	CirID	Level 1 DR	Level 2 DR	L1/L2 Metric
at-2/3/0.0	3	0x1	Point to Point	Point to Point	10/10
lo0.0	3	0x1	Passive	Passive	0/0

show isis interface brief

The output for the **show isis interface brief** command is identical to that for the **show isis interface** command. For sample output, see [show isis interface on page 2103](#).

show isis interface detail

```
user@host> show isis interface detail
```

```
IS-IS interface database:
```

```
at-2/3/0.0
```

```
Index: 66, State: 0x6, Circuit id: 0x1, Circuit type: 3
```

```
LSP interval: 100 ms, CSNP interval: 5 s
```

```
Level Adjacencies Priority Metric Hello (s) Hold (s) Designated Router
```

```
1 1 64 10 9.000 27
```

```
2 1 64 10 9.000 27
```

```
lo0.0
```

```
Index: 64, State: 0x6, Circuit id: 0x1, Circuit type: 0
```

```
LSP interval: 100 ms, CSNP interval: disabled
```

```
Adjacency advertisement: Advertise
```

```
Protection Type: Node Link, No eligible Backup
```

```
Level Adjacencies Priority Metric Hello (s) Hold (s) Designated Router
```

```
1 0 64 0 Passive
```

```
2 0 64 0 Passive
```

show isis interface extensive

```
user@host> show isis interface extensive
```

```
IS-IS interface database:
```

```
xe-6/1/0.0
```

```
Index: 75, State: 0x6, Circuit id: 0x1, Circuit type: 2
```

```
LSP interval: 100 ms, CSNP interval: 10 s, Loose Hello padding, IIH max size: 1505
```

Adjacency advertisement: Advertise

Flood-group Area-ID: 49.0001

Level 1

Adjacencies: 0, Priority: 64, Metric: 10

Disabled

Level 2

Adjacencies: 1, Priority: 64, Metric: 10

Hello Interval: 20.000 s, Hold Time: 60 s

Designated Router: nemean.03

show isis overview

Syntax	<pre>show isis overview <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches and QFX Series)	<pre>show isis overview <instance <i>instance-name</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 8.5.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display IS-IS overview information.
Options	<p>none—Display standard overview information about IS-IS for all routing instances.</p> <p>instance <i>instance-name</i>—(Optional) Display overview information for the specified routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show isis overview on page 2107
Output Fields	Table 160 on page 2105 lists the output fields for the show isis overview command. Output fields are listed in the approximate order in which they appear.

Table 160: show isis overview Output Fields

Field Name	Field Description
Hostname	Name of the router.
Sysid	Part of the ISO address of the routing device.
Areaid	The area number of the routing device.
Instance	IS-IS routing instance.
Router ID	Router ID of the routing device.
Adjacency holddown	Adjacency holddown capability: enabled or disabled .

Table 160: show isis overview Output Fields (continued)

Field Name	Field Description
Maximum Areas	Maximum number of IS-IS areas advertised by the routing device.
LSP life time	Lifetime of the link-state PDU, in seconds.
Filter low life time LSPs up to	LSPs with a lifetime lower than this value are filtered out.
Attached bit evaluation	Attached bit capability: enabled or disabled .
SPF delay	Delay before performing consecutive shortest-path-first (SPF) calculations.
SPF holddown	Delay before performing additional SPF calculations after the maximum number of consecutive SPF calculations is reached.
SPF rapid runs	Maximum number of SPF calculations that can be performed in succession before the holddown timer begins.
Overload bit at startup is set	Overload bit capability is enabled.
Overload high metrics	Overload high metrics capability: enabled or disabled .
Allow internal prefix overloading	Allow internal prefixes to be advertised with high metric: enabled or disabled
Allow external prefix overloading	Allow external prefixes to be advertised with high metric: enabled or disabled
Overload timeout	Time period after which overload is reset and the time that remains before the timer is set to expire.
Traffic engineering	Traffic engineering capability: enabled or disabled .
Restart	Graceful restart capability: enabled or disabled .
Restart duration	Time period for complete reacquisition of IS-IS neighbors.
Helper mode	Graceful restart helper capability: enabled or disabled .
Level	IS-IS level: <ul style="list-style-type: none"> • 1—Level 1 information • 2—Level 2 information
IPv4 is enabled	IP Protocol version 4 capability is enabled.
IPv6 is enabled	IP Protocol version 6 capability is enabled.

Table 160: show isis overview Output Fields (continued)

Field Name	Field Description
Micro-loop avoidance	Micro-loop avoidance is enabled. Generally adjacent nodes converge faster than neighboring nodes causing traffic to loop. A route convergence delay is configured to avoid such micro loops.
Internal route preference	Preference value of internal routes.
External route preference	Preference value of external routes.
Prefix export limit	Number of prefixes allowed to be exported, as configured by the prefix-export-limit statement.
Prefix export count	Number of prefixes exported.
Wide area metrics are enabled	Wide area metrics capability is enabled.
Narrow metrics are enabled	Narrow metrics capability is enabled.
Adjacency holddown is active	IS-IS adjacencies come up one after another when adjacency holddown is enabled.

Sample Output

show isis overview

```

user@host> show isis overview
Instance: master
  Router ID: 10.255.107.183
  Hostname: pro-bng3-a
  Sysid: 0192.0168.0001
  Areaid: 49.0002
  Adjacency holddown: enabled
  Maximum Areas: 3
  LSP life time: 1200
  Filter low life time LSPs up to: 300
  Attached bit evaluation: enabled
  SPF delay: 200 msec, SPF holddown: 5000 msec, SPF rapid runs: 3
  Overload bit at startup is set
    Overload high metrics: disabled
    Allow route leaking: disabled
    Allow internal prefix overloading: enabled
    Allow external prefix overloading: enabled
    Overload timeout: 60 sec
  IPv4 is enabled, IPv6 is enabled
Micro-loop avoidance: Enabled
  Method: Route Convergence Delay, Route convergence delay: 5000 msec
Traffic engineering: enabled
Restart: Disabled
  Helper mode: Enabled
Level 1

```

```
Internal route preference: 15
External route preference: 160
Wide metrics are enabled, Narrow metrics are enabled
Adjacency holddown is active
Level 2
Internal route preference: 18
External route preference: 165
Prefix export limit: 5, Prefix export count: 5
Wide metrics are enabled
Adjacency holddown is active
```

user@host> show isis overview logical-system R2

```
Instance: master
Router ID: 192.168.0.2
Hostname: pro-bng3-a-R2
Sysid: 0192.0168.0002
Areaid: 49.0002
Adjacency holddown: enabled
Maximum Areas: 3
LSP life time: 1200
Attached bit evaluation: enabled
SPF delay: 200 msec, SPF holddown: 5000 msec, SPF rapid runs: 3
IPv4 is enabled, IPv6 is enabled
Traffic engineering: enabled
Restart: Disabled
  Helper mode: Enabled
Level 1
  Internal route preference: 15
  External route preference: 160
  Prefix export count: 0
  Wide metrics are enabled, Narrow metrics are enabled
Level 2
  Internal route preference: 18
  External route preference: 165
  Prefix export count: 0
  Wide metrics are enabled, Narrow metrics are enabled
```

user@host> show isis overview logical-system R3

```
Instance: master
Router ID: 192.168.0.3
Hostname: pro-bng3-a-R3
Sysid: 0192.0168.0003
Areaid: 49.0002
Adjacency holddown: enabled
Maximum Areas: 3
LSP life time: 1200
Attached bit evaluation: enabled
SPF delay: 200 msec, SPF holddown: 5000 msec, SPF rapid runs: 3
IPv4 is enabled, IPv6 is enabled
Traffic engineering: enabled
Restart: Disabled
  Helper mode: Enabled
Level 1
  Internal route preference: 15
  External route preference: 160
  Prefix export count: 0
  Wide metrics are enabled, Narrow metrics are enabled
Level 2
```



```
Internal route preference: 18
External route preference: 165
Prefix export count: 0
Wide metrics are enabled, Narrow metrics are enabled
```

show isis route

List of Syntax [Syntax on page 2110](#)
[Syntax \(EX Series Switches and QFX Series\) on page 2110](#)

Syntax

```
show isis route
<destination>
[inet | inet6]
[instance instance-name]
[logical-system (all | logical-system-name)]
[topology (ipv4-multicast | ipv6-multicast | ipv6-unicast | unicast)]
```

Syntax (EX Series Switches and QFX Series)

```
show isis route
<destination>
[inet | inet6]
[instance instance-name]
[topology (ipv4-multicast | ipv6-multicast | ipv6-unicast | unicast)]
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 12.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display the routes in the IS-IS routing table.

Options **none**—Display all routes in the IS-IS routing table for all supported address families for all routing instances.

destination—(Optional) Destination address for the route.

inet | inet6—(Optional) Display inet (IPv4) or inet6 (IPv6) routes, respectively.

instance *instance-name*—(Optional) Display routes for the specified routing instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

topology (ipv4-multicast | ipv6-multicast | ipv6-unicast | unicast)—(Optional) Display routes for the specified topology only, or use unicast to display information, if available, for both IPv4 and IPv6 unicast topologies.

Required Privilege Level view

List of Sample Output [show isis route logical-system on page 2111](#)
[show isis route floodgroup on page 2112](#)
[show isis route \(CLNS\) on page 2112](#)

[show isis route on page 2112](#)

Output Fields [Table 161 on page 2111](#) describes the output fields for the **show isis route** command. Output fields are listed in the approximate order in which they appear.

Table 161: show isis route Output Fields

Field Name	Field Description
Current version	Number of the current version of the IS-IS routing table.
L1	Version of Level 1 SPF that was run.
L2	Version of Level 2 SPF that was run.
Prefix or Label	Destination of the route.
L	IS-IS level: <ul style="list-style-type: none"> • 1—Level 1 only • 2—Level 2 only • 3—Level 1 and Level 2
Version	Version of SPF that generated the route.
Metric	Metric value associated with the route.
Type	Metric type: int (internal) or ext (external).
Interface	Interface to the next hop.
Via	System identifier of the next hop, displayed as a name if possible.
ISO Routes	ISO routing table entries.
snpa	MAC address.

Sample Output

show isis route logical-system

```
user@host> show isis route logical-system ls1
```

```
IS-IS routing table           Current version: L1: 8 L2: 11
Prefix      L Version Metric Type Interface  Via
10.9.7.0/30  2    11    20 int  gr-0/2/0.0  h
10.9.201.1/32 2    11    60 int  gr-0/2/0.0  h
IPv6 Unicast IS-IS routing table   Current version: L1: 9 L2: 11
Prefix      L Version Metric Type Interface  Via
8009:3::a09:3200/126 2    11    20 int  gr-0/2/0.0  h
```

show isis route floodgroup

```
user@R2> show isis route floodgroup 49.0001
```

```
IS-IS routing table          Current version: L1: 14 L2: 27
IPv4/IPv6 Routes
-----
Prefix          L Version  Metric Type Interface    NH   Via
  Backup Score
0.0.0.0/0        1      14      10 int  ge-0/0/8.0      IPV4 R1
81.3.3.3/32      1      14      10 int  ge-0/0/8.0      IPV4 R1
128.220.17.202/32 1      14      10 int  ge-0/0/8.0      IPV4 R1
```

show isis route (CLNS)

```
user@host> show isis route
```

```
IS-IS routing table          Current version: L1: 10 L2: 8
IPv4/IPv6 Routes
Prefix          L Version  Metric Type Interface    Via
0.0.0.0/0        1      10      10 int  fe-0/0/1.0      ISIS.0
ISO Routes
Prefix L   Version  Metric Type Interface    Via    snpa
0/0
      1      10      10 int  fe-0/0/1.0      isis.0 0:12:0:34:0:56
47.0005.80ff.f800.0000.0108.0001/104
      1      10      0 int
47.0005.80ff.f800.0000.0108.0001.1921.6800.4001/152
      1      10      10 int  fe-0/0/1.0 isis.0 0:12:0:34:0:56
47.0005.80ff.f800.0000.0108.0001.1921.6800.4002/152
      1      10      20 int  fe-0/0/1.0 isis.0 0:12:0:34:0:56
47.0005.80ff.f800.0000.0108.0002/104
      1      10      0 int
47.0005.80ff.f800.0000.0108.0002.1921.6800.4001/152
      1      10      10 int  fe-0/0/1.0 isis.0 0:12:0:34:0:56
```

show isis route

```
user@host> show isis route
```

```
IS-IS routing table          Current version: L1: 4 L2: 13
IPv4/IPv6 Routes
-----
Prefix          L   Version  Metric Type Interface    NH   Via
10.255.71.52/32  2    13      10   int  ae0.0              IPV4 camaro
10.255.71.238/32  2    13      20   int  so-6/0/0.0        IPV4 olympic
                  as0.0              IPV4 glacier
10.255.71.239/32  2    13      20   int  so-6/0/0.0        IPV4 olympic
                  ae0.0              IPV4 camaro
10.255.71.242/32  2    13      10   int  as0.0              IPV4 glacier
10.255.71.243/32  2    13      10   int  so-6/0/0.0        IPV4 olympic
12.13.0.0/30      2    13      20   int  so-6/0/0.0        IPV4 olympic
```

12.15.0.0/30	2	13	20	int	so-6/0/0.0	IPV4 olympic
13.15.0.0/30	2	13	30	int	ae0.0	IPV4 camaro
					so-6/0/0.0	IPV4 olympic
					as0.0	IPV4 glacier
13.16.0.0/30	2	13	25	int	as0.0	IPV4 glacier
14.15.0.0/30	2	13	20	int	ae0.0	IPV4 camaro
192.2.1.0/30	2	13	30	int	so-6/0/0.0	IPV4 olympic
					as0.0	IPV4 glacier
1eee::/64	2	13	30	int	so-6/0/0.0	IPV6 olympic
					as0.0	IPV6 glacier
abcd::10:255:71:52/128	2	13	10	int	ae0.0	IPV6 camaro
abcd::10:255:71:238/128	2	13	20	int	so-6/0/0.0	IPV6 olympic
					as0.0	IPV6 glacier
abcd::10:255:71:239/128	2	13	20	int	so-6/0/0.0	IPV6 olympic
					ae0.0	IPV6 camaro
abcd::10:255:71:242/128	2	13	10	int	as0.0	IPV6 glacier
abcd::10:255:71:243/128	2	13	10	int	so-6/0/0.0	IPV6 olympic

MPLS Routes

Label	L	Version	Metric	Type	Interface	NH	Via
300032 /52	2	38	0	int	lt-1/2/0.13	MPLS	Direct forward
to 10.0.7.60(pro-bng3-c-E)							
300048 /52	1	27	0	int	lt-1/2/0.12	MPLS	Direct forward
to 10.0.6.60(pro-bng3-c-E)							
300064 /52	1	27	0	int	lt-1/2/0.12	MPLS	Direct forward
to 10.0.6.60(pro-bng3-c-E)							
300080 /52	2	38	0	int	lt-1/2/0.12	MPLS	Direct forward
to 10.0.6.60(pro-bng3-c-E)							
300096 /52	2	38	0	int	lt-1/2/0.12	MPLS	Direct forward
to 10.0.6.60(pro-bng3-c-E)							
299920 /52	1	27	0	int	lt-1/2/0.14	MPLS	Direct forward
to 10.0.10.70(pro-bng3-c-F)							
299936 /52	1	27	0	int	lt-1/2/0.14	MPLS	Direct forward
to 10.0.10.70(pro-bng3-c-F)							
299952 /52	2	38	0	int	lt-1/2/0.14	MPLS	Direct forward
to 10.0.10.70(pro-bng3-c-F)							
299968 /52	2	38	0	int	lt-1/2/0.14	MPLS	Direct forward
to 10.0.10.70(pro-bng3-c-F)							
299984 /52	1	27	0	int	lt-1/2/0.13	MPLS	Direct forward
to 10.0.7.60(pro-bng3-c-E)							

```

300000 /52      1      27      0 int 1t-1/2/0.13  MPLS  Direct forward
to 10.0.7.60(pro-bng3-c-E)
300016 /52      2      38      0 int 1t-1/2/0.13  MPLS  Direct forward
to 10.0.7.60(pro-bng3-c-E)

```

show isis spf

List of Syntax	Syntax on page 2115 Syntax (EX Series Switches) on page 2115
Syntax	<pre>show isis spf (brief log results) <instance <i>instance-name</i>> <level (1 2)> <logical-system (all <i>logical-system-name</i>)> <topology (ipv4-multicast ipv6-multicast ipv6-unicast unicast)></pre>
Syntax (EX Series Switches)	<pre>show isis spf (brief log results) <instance <i>instance-name</i>> <level (1 2)> <topology (ipv4-multicast ipv6-multicast ipv6-unicast unicast)></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Display information about IS-IS shortest-path-first (SPF) calculations.
Options	<p>brief—Display an overview of SPF calculations.</p> <p>log—Display the log of SPF calculations.</p> <p>results—Display the results of SPF calculations.</p> <p>instance <i>instance-name</i>—(Optional) Display SPF calculations for the specified routing instance.</p> <p>level (1 2)—(Optional) Display SPF calculations for the specified IS-IS level.</p> <p>log—Display the log of SPF calculations.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>results—Display the results of SPF calculations.</p> <p>topology (ipv4-multicast ipv6-multicast ipv6-unicast unicast)—(Optional) Display SPF calculations for the specified topology only.</p>
Required Privilege Level	view
List of Sample Output	show isis spf log on page 2116 show isis spf results logical-system on page 2117 show isis spf results (CLNS) on page 2118

Output Fields Table 162 on page 2116 describes the output fields for the **show isis spf** command. Output fields are listed in the approximate order in which they appear.

Table 162: show isis spf Output Fields

Field Name	Field Description
Node	System ID of a node.
Metric	Metric to the node.
Interface	Interface of the next hop.
Via	System ID of the next hop.
SNPA	Subnetwork point of attachment (MAC address of the next hop).
Start time	(log option only) Time that the SPF computation started.
Elapsed (secs)	(log option only) Length of time, in seconds, required to complete the SPF computation.
Count	(log option only) Number of times the SPF was triggered.
Reason	(log option only) Reason that the SPF computation was completed.

Sample Output

show isis spf log

```
user@host> show isis spf log logical-system lsl
```

```
IS-IS level 1 SPF log:
Start time      Elapsed (secs) Count Reason
Fri Oct 31 12:41:18 0.000069 1 Reconfig
Fri Oct 31 12:41:18 0.000107 3 Updated LSP fix.00-00
Fri Oct 31 12:41:18 0.000050 3 Address change on so-1/2/2.0
Fri Oct 31 12:41:23 0.000033 1 Updated LSP fix.00-00
Fri Oct 31 12:41:28 0.000178 5 New adjacency scat on ge-1/1/0.0
Fri Oct 31 12:41:59 0.000060 1 Updated LSP fix.00-00
Fri Oct 31 12:42:30 0.000161 2 Multi area attachment change
Fri Oct 31 12:56:58 0.000198 1 Periodic SPF
Fri Oct 31 13:10:29 0.000209 1 Periodic SPF
IS-IS level 2 SPF log:
```

```
Start time      Elapsed (secs) Count Reason
Fri Oct 31 12:41:18 0.000035 1 Reconfig
Fri Oct 31 12:41:18 0.000047 2 Updated LSP fix.00-00
Fri Oct 31 12:41:18 0.000043 5 Address change on gr-0/2/0.0
Fri Oct 31 12:41:23 0.000022 1 Updated LSP fix.00-00
Fri Oct 31 12:41:59 0.000144 3 New adjacency h on gr-0/2/0.0
Fri Oct 31 12:42:30 0.000257 3 New LSP skag.00-00
Fri Oct 31 12:54:37 0.000195 1 Periodic SPF
Fri Oct 31 12:55:50 0.000178 1 Updated LSP fix.00-00
Fri Oct 31 12:55:55 0.000174 1 Updated LSP h.00-00
```



```

Fri Oct 31 12:55:58      0.000176    1 Updated LSP skag.00-00
Fri Oct 31 13:08:14      0.000198    1 Periodic SPF
IPv6 Unicast IS-IS level 1 SPF log:

Start time              Elapsed (secs) Count Reason
Fri Oct 31 12:41:18      0.000028    1 Reconfig
Fri Oct 31 12:41:18      0.000043    3 Updated LSP fix.00-00
Fri Oct 31 12:41:18      0.000112    4 Updated LSP fix.00-00
Fri Oct 31 12:41:23      0.000059    1 Updated LSP fix.00-00
Fri Oct 31 12:41:25      0.000041    1 Updated LSP fix.00-00
Fri Oct 31 12:41:28      0.000103    5 New adjacency scat on ge-1/1/0.0
Fri Oct 31 12:41:59      0.000040    1 Updated LSP fix.00-00
Fri Oct 31 12:42:30      0.000118    2 Multi area attachment change
Fri Oct 31 12:56:08      0.000289    1 Periodic SPF
Fri Oct 31 13:11:07      0.000214    1 Periodic SPF
IPv6 Unicast IS-IS level 2 SPF log:

Start time              Elapsed (secs) Count Reason
Fri Oct 31 12:41:18      0.000027    1 Reconfig
Fri Oct 31 12:41:18      0.000039    2 Updated LSP fix.00-00
Fri Oct 31 12:41:18      0.000049    6 Updated LSP fix.00-00
Fri Oct 31 12:41:23      0.000025    1 Updated LSP fix.00-00
Fri Oct 31 12:41:25      0.000023    1 Updated LSP fix.00-00
Fri Oct 31 12:41:59      0.000087    3 New adjacency h on gr-0/2/0.0
Fri Oct 31 12:42:30      0.000123    3 New LSP skag.00-00
Fri Oct 31 12:55:50      0.000121    1 Updated LSP fix.00-00
Fri Oct 31 12:55:55      0.000121    1 Updated LSP h.00-00
Fri Oct 31 12:55:58      0.000121    1 Updated LSP skag.00-00
Fri Oct 31 13:09:46      0.000201    1 Periodic SPF
...

```

show isis spf results logical-system

```
user@host> show isis spf results logical-system ls1
```

IS-IS level 1 SPF results:

Node	Metric	Interface	Via	SNPA
scat.00	10	ge-1/1/0.0	scat	0:90:69:a6:48:9d
	20	10.9.1.0/30		
fix.02	10			
fix.00	0			
	10	10.9.1.0/30		
	10	10.9.5.0/30		
	10	10.9.6.0/30		
	20	10.9.7.0/30		
	60	10.9.201.1/32		
3 nodes				

IS-IS level 2 SPF results:

Node	Metric	Interface	Via	SNPA
skag.00	20	gr-0/2/0.0	h	
	30	10.9.7.0/30		
skag.02	20	gr-0/2/0.0	h	
h.00	10	gr-0/2/0.0	h	
	20	10.9.6.0/30		
	20	10.9.7.0/30		
	60	10.9.201.1/32		
fix.00	0			
	10	10.9.1.0/30		
	10	10.9.5.0/30		

```

    10      10.9.6.0/30
4 nodes
IPv6 Unicast IS-IS level 1 SPF results:
Node      Metric      Interface      Via      SNPA
scat.00    10      ge-1/1/0.0    scat    0:90:69:a6:48:9d
           20      ge-1/1/0.0    scat    0:90:69:a6:48:9d
           20      8009:1::a09:1400/126
fix.02     10
fix.00      0
           10      8009:1::a09:1400/126
           10      8009:2::a09:1e00/126
           20      8009:3::a09:3200/126
           10      8009:4::a09:2800/126
3 nodes
IPv6 Unicast IS-IS level 2 SPF results:
Node      Metric      Interface      Via      SNPA
skag.00    20      gr-0/2/0.0    h
           30      gr-0/2/0.0    h
           30      8009:3::a09:3200/126
skag.02    20      gr-0/2/0.0    h
           20      gr-0/2/0.0    h
h.00       10      gr-0/2/0.0    h
           20      gr-0/2/0.0    h
           20      8009:3::a09:3200/126
           20      8009:4::a09:2800/126
fix.00      0
           10      8009:1::a09:1400/126
           10      8009:2::a09:1e00/126
           10      8009:4::a09:2800/126
4 nodes
Multicast IS-IS level 1 SPF results:
Node      Metric      Interface      Via      SNPA
scat.00    10      ge-1/1/0.0    scat    0:90:69:a6:48:9d
fix.02     10
fix.00      0
3 nodes
Multicast IS-IS level 2 SPF results:
Node      Metric      Interface      Via      SNPA
skag.00    20      gr-0/2/0.0    h
skag.02    20      gr-0/2/0.0    h
h.00       10      gr-0/2/0.0    h
fix.00      0
4 nodes
...

```

show isis spf results (CLNS)

```
user@host> show isis spf results
```

```

IS-IS level 1 SPF results:
Node      Metric      Interface      Via      SNPA
skag.00 10      fe-0/0/1.0    toothache 0:12:0:34:0:56
           20      fe-0/0/1.0    toothache 0:12:0:34:0:56
           20      192.168.37.64/29
           10      1921.6800.4001
           20      1921.6800.4002

```

```

pro1-a.02      10
pro1-a.00      0
               0      10.255.245.1/32
               10     192.168.37.64/29
               0      1921.6800.4211

  3 nodes

IS-IS level 2 SPF results:
Node      Metric  Interface      Via      SNPA
skag.00 10      fe-0/0/1.0     toothache 0:12:0:34:0:56
          20      fe-0/0/1.0     toothache 0:12:0:34:0:56
          20      10.255.245.1/32
          20      192.168.37.64/29
          20      47.0005.80ff.f800.0000.0109.0010/104
pro1-a.02      10
pro1-a.00      0
               0      10.255.245.1/32
               10     192.168.37.64/29

  3 nodes

```

show isis statistics

List of Syntax	Syntax on page 2120 Syntax (EX Series Switches and QFX Series) on page 2120
Syntax	<pre>show isis statistics <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches and QFX Series)	<pre>show isis statistics <instance <i>instance-name</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display statistics about IS-IS traffic.
Options	none —Display IS-IS traffic statistics for all routing instances. instance <i>instance-name</i> —(Optional) Display statistics for the specified routing instance. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• clear isis statistics on page 2064
List of Sample Output	show isis statistics on page 2122
Output Fields	Table 163 on page 2121 describes the output fields for the show isis statistics command. Output fields are listed in the approximate order in which they appear.

Table 163: show isis statistics Output Fields

Field Name	Field Description
PDU type	<p>PDU type:</p> <ul style="list-style-type: none"> • CSNP—Complete sequence number PDUs contain a complete list of all link-state PDUs in the IS-IS database. CSNPs are sent periodically on all links, and the receiving systems use the information in the CSNP to update and synchronize their link-state PDU databases. The designated router multicasts CSNPs on broadcast links in place of sending explicit acknowledgments for each link-state PDU. • IIH—IS-IS hello packets are broadcast to discover the identity of neighboring IS-IS systems and to determine whether the neighbors are Level 1 or Level 2 intermediate systems. • LSP—Link-state PDUs contain information about the state of adjacencies to neighboring IS-IS systems. Link-state PDUs are flooded periodically throughout an area. • PSNP—Partial sequence number PDUs are sent multicast by a receiver when it detects that it is missing a link-state PDU (when its link-state PDU database is out of date). The receiver sends a PSNP to the system that transmitted the CSNP, effectively requesting that the missing link-state PDU be transmitted. That routing device, in turn, forwards the missing link-state PDU to the requesting routing device. • Unknown—The PDU type is unknown.
Received	Number of PDUs received since IS-IS started or since the statistics were set to zero.
Processed	Number of PDUs received less the number dropped.
Drops	Number of PDUs dropped.
Sent	Number of PDUs transmitted since IS-IS started or since the statistics were set to zero.
Rexmit	Number of PDUs retransmitted since IS-IS started or since the statistics were set to zero.
Total packets received/sent	Total number of PDUs received and transmitted since IS-IS started or since the statistics were set to zero.
SNP queue length	Number of CSPN and PSNP packets currently waiting in the queue for processing. This value is almost always 0.
LSP queue length	Number of link-state PDUs waiting in the queue for processing. This value is almost always 0.
SPF runs	Number of shortest-path-first (SPF) calculations that have been performed. If this number is incrementing rapidly, it indicates that the network is unstable.
Fragments rebuilt	Number of link-state PDU fragments that the local system has computed.
LSP regenerations	Number of link-state PDUs that have been regenerated. A link-state PDU is regenerated when it is nearing the end of its lifetime and it has not changed.
Purges initiated	Number of purges that the system initiated. A purge is initiated if the software decides that a link-state PDU must be removed from the network.

Sample Output

show isis statistics

```
user@host> show isis statistics
```

```
IS-IS statistics for merino:
```

PDU type	Received	Processed	Drops	Sent	Rexmit
LSP	12227	12227	0	8184	683
IIH	113808	113808	0	115817	0
CSNP	198868	198868	0	198934	0
PSNP	6985	6979	6	8274	0
Unknown	0	0	0	0	0
Totals	331888	331882	6	331209	683

```
Total packets received: 331888 Sent: 331892
```

```
SNP queue length:      0 Drops:      0  
LSP queue length:      0 Drops:      0
```

```
SPF runs:              1014  
Fragments rebuilt:     1038  
LSP regenerations:     425  
Purges initiated:      0
```

CHAPTER 22

LLDP Operational Commands

- `clear lldp neighbors`
- `clear lldp statistics`
- `show lldp`
- `show lldp local-information`
- `show lldp neighbors`
- `show lldp remote-global-statistics`
- `show lldp statistics`

clear lldp neighbors

Syntax	<code>clear lldp neighbor</code> <code><interface <i>interface-name</i>></code>
Release Information	Command introduced in Junos OS Release 9.6.
Description	<p>Clear information regarding all Link Layer Discovery Protocol (LLDP) neighbors or LLDP neighbors of the specified interface.</p> <p>For information about interface names, see “Interface Naming Overview” on page 33. For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i>. For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i>.</p> <p>For information about interface names in the Junos Fusion technology, see <i>Understanding Junos Fusion Ports</i>.</p>
Options	<code>interface <i>interface-name</i></code> —(Optional) Clear the LLDP neighbors on the specified interface.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• clear lldp statistics on page 2125
List of Sample Output	clear lldp neighbors on page 2124 clear lldp neighbors interface ge-0/1/1.0 on page 2124
Output Fields	When you enter this command, you are provided no feedback on the status of your request. You can enter the show lldp neighbors command before and after clearing the LLDP neighbors to verify the clear operation.

Sample Output

clear lldp neighbors

```
user@switch> clear lldp neighbors
```

clear lldp neighbors interface ge-0/1/1.0

```
user@switch> clear lldp neighbors interface ge-0/1/1.0
```


clear lldp statistics

Syntax	<code>clear lldpp neighbor <interface <i>interface-name</i>></code>
Release Information	Command introduced in Junos OS Release 9.6.
Description	<p>Clear all Link Layer Discovery Protocols (LLDP) statistics or LLDP statistics associated with the specified interface.</p> <p>For information about interface names, see “Interface Naming Overview” on page 33. For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i>. For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i>.</p> <p>For information about interface names in the Junos Fusion technology, see <i>Understanding Junos Fusion Ports</i>.</p>
Options	<code>interface <i>interface-name</i></code> —(Optional) Clear LLDP statistics on the specified interface.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> clear lldp neighbors on page 2124
List of Sample Output	clear lldp statistics on page 2125 clear lldp statistics interface ge-0/1/1.0 on page 2125
Output Fields	When you enter this command, you are provided no feedback on the status of your request. You can enter the show lldp statistics command before and after clearing the LLDP statistics to verify the clear operation.

Sample Output

clear lldp statistics

```
user@switch> clear lldp statistics
```

clear lldp statistics interface ge-0/1/1.0

```
user@switch> clear lldp statistics interface ge-0/1/1.0
```

show lldp

Syntax	<code>show lldp</code> <code><detail></code>
Release Information	Command introduced in Junos OS Release 9.6.
Description	Display information about the Link Layer Discovery Protocol (LLDP).
Options	detail —(Optional) Display the detailed output level.
Required Privilege Level	view
List of Sample Output	show lldp on page 2128 show lldp detail on page 2128
Output Fields	Table 164 on page 2126 describes the output fields for the show lldp command. Output fields are listed in the approximate order in which they appear.

Table 164: show lldp Output Fields

Field Name	Field Description
LLDP	Status of LLDP: Enabled or Disabled .
Advertisement interval	Value of the advertisement interval parameter.
Transmit delay	Value of the transmit delay parameter.
Hold timer	Value of the hold timer parameter.
Notification interval	Value of the notification interval parameter.
Config Trap Interval	Value of the configuration trap parameter.
Connection Hold timer	Value of the connection hold timer parameter.
Port ID TLV subtype	<ul style="list-style-type: none"> <i>interface-name</i>—Indicates the interface name as the port information for the local device. <i>locally-assigned</i>—Indicates that the sub-type for port ID TLV generation is locally assigned value of SNMP index of the interface. <p>For more information about port ID TLV subtype, see <i>port-id-subtype</i>..</p>

Table 164: show lldp Output Fields (continued)

Field Name	Field Description
Port Description TLV type	<p>Following value used for port description TLV:</p> <ul style="list-style-type: none"> interface-alias (ifAlias)—Indicates that the <i>ifAlias</i> MIB object value is used to generate the port description TLV. interface-description (ifDescr)—Indicates that the <i>ifDescr</i> MIB object value is used to generate the port description TLV. <p>For more information about port description TLV type, see <i>port-description-type</i>.</p>
Interface	<p>Name of the interface for which LLDP configuration information is being reported</p> <p>For information about interface names, see "Interface Naming Overview" on page 33. For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i>. For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i>.</p>
Parent Interface	Name of the aggregated Ethernet interface, if any, to which the interface belongs.
LLDP	LLDP operating state. The state can be Enabled or Disabled.
LLDP-MED	LLDP-MED operating state. The state can be Enabled or Disabled.
Power Negotiation	LLDP power negotiation operating state. The state can be Enabled or Disabled.
LLDP basic TLVs supported	List of basic LLDP TLVs supported by this device (detail only).
LLDP 802 TLVs supported	List of IEEE 802.1 LLDP TLVs supported by this device (detail only).

Sample Output

show lldp

```
user@host> show lldp
```

```
LLDP : Enabled
Advertisement interval : 30 seconds
Transmit delay : 2 seconds
Hold timer : 120 seconds
Notification interval : 0 Second(s)
Config Trap Interval : 0 seconds
Connection Hold timer : 300 seconds
Port ID TLV subtype : locally-assigned
Port Description TLV type : interface-description (ifDescr)
```

Interface	Parent Interface	LLDP	LLDP-MED	Power Negotiation
all	-	Enabled		

Sample Output

show lldp detail

```
user@host> show lldp detail
```

```
LLDP : Enabled
Advertisement interval : 30 seconds
Transmit delay : 2 seconds
Hold timer : 120 seconds
Notification interval : 0 Second(s)
Config Trap Interval : 0 seconds
Connection Hold timer : 300 seconds
Port ID TLV subtype : locally-assigned
Port Description TLV type : interface-description (ifDescr)
```

Interface	Parent Interface	LLDP	LLDP-MED	Power Negotiation
Neighbor count				
all	-	Enabled		
2				

Interface	Parent Interface	Vlan-id	Vlan-name
xe-0/0/0	-	4080	vlan-4080
xe-0/0/1	-	4080	vlan-4080

Basic Management TLVs supported:

End Of LLDPDU, Chassis ID, Port ID, Time To Live, Port Description, System Name, System Description, System Capabilities, Management Address

Organizationally Specific TLVs supported:

Port VLAN tag, VLAN Name, MAC/PHY Configuration/Status, Link Aggregation, Maximum Frame Size

show lldp local-information

Syntax	show lldp local-information
Release Information	Command introduced in Junos OS Release 9.6.
Description	Display local Link Layer Discovery Protocol (LLDP) information.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show lldp local-information(Management Information Address Subtype is IPv4) on page 2131 show lldp local-information(Management Information Address Subtype is IPv6) on page 2131
Output Fields	Table 165 on page 2129 describes the output fields for the show lldp local-information command. Output fields are listed in the approximate order in which they appear.

Table 165: show lldp local-information Output Fields

Field Name	Field Description
LLDP Local Information details	Information that follows pertains to the local system.
Chassis ID	List of chassis identifiers for local information.
System name	Local system name reported by LLDP.
System descr	Local system description reported by LLDP.
System Capabilities	Capabilities (such as Bridge or Router) that are Supported or Enabled by system on the interface.
Management Information	Listed by Interface Name , Address Subtype (such as ipv4 , ipv6), Address (such as 192.168.168.229 , 1fd::1a10), Interface Number , and Interface Numbering Subtype .
Interface Name	List of local interfaces. For information about interface names, see "Interface Naming Overview" on page 33 . For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i> . For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i> .
Parent Interface	Name of the ae interface to which the interface belongs

Table 165: show lldp local-information Output Fields (continued)

Field Name	Field Description
Interface ID	List of local interface identifiers.
Interface Description	List of local interface descriptions.
Status	List of interface conditions: UP or DOWN .

Sample Output

show lldp local-information(Management Information Address Subtype is IPv4)

```

user@host> show lldp local-information

LLDP Local Information details

Chassis ID   : 64:87:88:65:37:c0
System name  : apg-hp1
System descr : Juniper Networks, Inc. mx240 , version 14.1I20131231_0701_builder
[builder] Build date: 2013-12-31 07:13:42 UTC

System Capabilities
  Supported      : Bridge Router
  Enabled        : Bridge Router

Management Information
  Interface Name : Unknown
  Address Subtype : IPv4(1)
  Address        : 10.216.97.103
  Interface Number      : 1
  Interface Numbering Subtype : ifIndex(2)

Interface name  Parent Interface  Interface ID  Interface description  Status
fxp0            -                1             fxp0                   Up
me0             -                33            me0                     Up
ge-2/0/0        ae0             1475          ge-2/0/0                Up
ge-2/0/1        ae0             1476          ge-2/0/1                Up

```

show lldp local-information(Management Information Address Subtype is IPv6)

```

user@host> show lldp local-information

LLDP Local Information details

Chassis ID   : ac:4b:c8:92:67:c0
System name  : apg-hp
System descr : Juniper Networks, Inc. mx240 , version 13.2-20131210.0 [builder]
Build date: 2013-12-10 06:23:15 UTC

System Capabilities
  Supported      : Bridge Router
  Enabled        : Bridge Router

Management Information
  Interface Name : fxp0
  Address Subtype : IPv6(2)
  Address        : 1fd::1a20
  Interface Number      : 1
  Interface Numbering Subtype : ifIndex(2)

Interface name  Parent Interface  Interface ID  Interface description  Status
ge-1/2/4        -                530           -                      Down
ge-1/2/5        -                531           -                      Down
ge-1/2/2        -                528           ge-1/2/2               Up
ge-1/2/3        -                529           ge-1/2/3               Up

```

show lldp neighbors

Syntax `show lldp neighbors`
`<interface interface-name>`

Release Information Command introduced in Junos OS Release 9.6.

Description Display information about LLDP neighbors.

For information about interface names, see [“Interface Naming Overview” on page 33](#). For information about interface names for TX Matrix routers, see *TX Matrix Router Chassis and Interface Names*. For information about FPC numbering on TX Matrix routers, see *Routing Matrix with a TX Matrix Router FPC Numbering*.

For information about extended port names in the Junos Fusion technology, see *Understanding Junos Fusion Ports*.

Options `interface interface-name`—(Optional) Display the neighbor information about a particular physical interface.



NOTE: Starting with Junos OS Release 14.2, you can also display LLDP neighbor details for management interfaces, such as fxp or me, on MX Series routers.

Required Privilege Level view

Related Documentation

- [clear lldp neighbors on page 2124](#)

List of Sample Output [show lldp neighbors on page 2135](#)
[show lldp neighbors interface ge-0/0/4 \(Management Address is IPv4\) on page 2135](#)
[show lldp neighbors interface ge-0/0/4 \(Management Address is IPv6\) on page 2136](#)
[show lldp neighbors \(Management Ethernet Interfaces\) on page 2137](#)

Output Fields [Table 166 on page 2132](#) describes the output fields for the **show lldp neighbors** command. Output fields are listed in the approximate order in which they appear.

Table 166: show lldp neighbors Output Fields

Field Name	Field Description
LLDP Remote Devices Information	Information about remote devices.

Table 166: show lldp neighbors Output Fields (continued)

Field Name	Field Description
LocalInterface	List of local interfaces for which neighbor information is available.
ChassisId	List of chassis identifiers for neighbors.
PortInfo	List of port information gathered from neighbors. This could be the port identifier or port description.
SysName	List of system names gathered from neighbors.
LLDP Neighbor Information	Information about both local and neighbor systems on the interface (appears when the interface option is used).
Local Information	Information about local systems on the interface (appears when the interface option is used).
Neighbor Information	Information about both local and neighbor system on the interface (appears when the interface option is used).
Index	Local interface index (appears when the interface option is used).
Time Mark	Date and timestamp of information (appears when the interface option is used).
Time To Live	Number of seconds for which this information is valid (appears when the interface option is used).
Local Interface	Name of the local physical interface (appears when the interface option is used).
Parent Interface	Name of the ae interface to which the interface belongs
Local Port ID	Local port identifier (appears when the interface option is used).
Neighbor Information	Information about neighbor systems on the interface (appears when the interface option is used).
Chassis type	Type of chassis identifier supplied, such as MAC address (appears when the interface option is used).
Chassis ID	Chassis identifier of type listed (appears when the interface option is used).
Port type	Type of port identifier supplied, such as local (appears when the interface option is used).
Port ID	Port identifier of type listed (appears when the interface option is used).
Port description	Port description (appears when the interface option is used).

Table 166: show lldp neighbors Output Fields (continued)

Field Name	Field Description
System name	Name supplied by the system on the interface (appears when the interface option is used).
System Description	Description supplied by the system on the interface (appears when the interface option is used).
System Capabilities	Capabilities (such as bridge or router) that are Supported or Enabled by the system on the interface (appears when the interface option is used).
Management address	Details of the management address: Address Type (such as ipv4 and ipv6), Address (such as 10.204.34.35 , 1fd::1a10), Interface Number , Interface Subtype , and Organization Identifier (OID) (appears when the interface option is used).
Organization Info	One or more entries listing remote information by Organizationally Unique Identifier (OUI), Subtype , Index , and Info (appears when the interface option is used).

Sample Output

show lldp neighbors

```
user@host> show lldp neighbors
```

Local Interface	Parent Interface	Chassis Id	Port info	System Name
ge-2/0/0	ae0	ac:4b:c8:92:67:c0	528	apg-hp
ge-2/0/1	ae0	ac:4b:c8:92:67:c0	529	apg-hp

Sample Output

show lldp neighbors interface ge-0/0/4 (Management Address is IPv4)

```
user@host> show lldp neighbors interface ge-0/0/4
```

LLDP Neighbor Information:

Local Information:

```
Index: 2 Time to live: 120 Time mark: Tue Dec 31 11:47:46 2013 Age: 15 secs
Local Interface   : ge-2/0/1
Parent Interface  : ae0
Local Port ID     : 1476
Ageout Count      : 0
```

Neighbour Information:

```
Chassis type      : Mac address
Chassis ID        : ac:4b:c8:92:67:c0
Port type         : Locally assigned
Port ID           : 529
Port description  : ge-1/2/3
System name       : apg-hp
```

```
System Description : Juniper Networks, Inc. mx240 , version 14.1-20131222.0
[builder] Build date: 2013-12-22 09:13:26 UTC
```

System capabilities

```
Supported: Bridge Router
Enabled   : Bridge Router
```

Management address

```
Address Type      : IPv4(1)
Address           : 10.216.98.57
Interface Number  : 1
Interface Subtype : ifIndex(2)
OID               : 1.3.6.1.2.1.31.1.1.1.1.1.
```

Organization Info

```
OUI       : IEEE 802.3 Private (0x00120f)
Subtype    : MAC/PHY Configuration/Status (1)
Info       : Autonegotiation [supported, enabled (0x3)], PMD Autonegotiation
Capability (0x1d), MAU Type (0x0)
Index      : 1
```

Organization Info

```
OUI       : IEEE 802.3 Private (0x00120f)
Subtype    : Link Aggregation (3)
Info       : Aggregation Status (0x3), Aggregation Port ID (1694498816)
Index      : 2
```

```

Organization Info
  OUI      : IEEE 802.3 Private (0x00120f)
  Subtype  : Maximum Frame Size (4)
  Info     : MTU Size (1518)
  Index    : 3

```

show lldp neighbors interface ge-0/0/4 (Management Address is IPv6)

```
user@host> show lldp neighbors interface ge-0/0/4
```

LLDP Neighbor Information:

Local Information:

```

Index: 1 Time to live: 120 Time mark: Thu Dec 12 07:19:45 2013 Age: 28 secs
Local Interface      : ge-1/2/2
Parent Interface     : -
Local Port ID        : 528
Ageout Count         : 0

```

Neighbour Information:

```

Chassis type      : Mac address
Chassis ID        : 64:87:88:65:37:c0
Port type         : Locally assigned
Port ID           : 1475
Port description   : ge-2/0/0
System name       : apg-hp1

```

```

System Description : Juniper Networks, Inc. mx240 , version 11.4R10 Build date:
2013-10-24 10:10:02 UTC

```

System capabilities

```

Supported: Bridge Router
Enabled   : Bridge Router

```

Management address

```

Address Type      : IPv6(2)
Address           : 1fd::1a10
Interface Number   : 1
Interface Subtype  : ifIndex(2)
OID               : 1.3.6.1.2.1.31.1.1.1.1.1.

```

Organization Info

```

OUI      : IEEE 802.3 Private (0x00120f)
Subtype  : MAC/PHY Configuration/Status (1)
Info     : Autonegotiation [supported, enabled (0x3)], PMD Autonegotiation
Capability (0x5), MAU Type (0x0)
Index    : 1

```

Organization Info

```

OUI      : IEEE 802.3 Private (0x00120f)
Subtype  : Link Aggregation (3)
Info     : Aggregation Status (0x1), Aggregation Port ID (0)
Index    : 2

```

Organization Info

```

OUI      : IEEE 802.3 Private (0x00120f)
Subtype  : Maximum Frame Size (4)
Info     : MTU Size (1518)

```

```
Index      : 3
Organization Info
  OUI       : Ethernet Bridged (0x0080c2)
  Subtype   : VLAN Name (3)
  Info      : VLAN ID (100), VLAN Name (vlan-100)
  Index     : 4
```

show lldp neighbors (Management Ethernet Interfaces)

```
user@host> show lldp neighbors
```

Local Interface	Parent Interface	Chassis Id	Port info
System Name			
fxp0	-	78:fe:3d:ee:4e:00	151
x2-sw35			
xe-0/0/0	-	a8:d0:e5:50:26:c0	512
sitara			
xe-0/0/1	-	a8:d0:e5:50:26:c0	513
sitara			

show lldp remote-global-statistics

Syntax	show lldp remote-global-statistics
Release Information	Command introduced in Junos OS Release 9.6.
Description	Display remote Link Layer Discovery Protocol (LLDP) global statistics.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show lldp remote-global-statistics on page 2139
Output Fields	Table 167 on page 2138 describes the output fields for the show lldp remote-global-statistics command. Output fields are listed in the approximate order in which they appear.

Table 167: show lldp remote-global-statistics Output Fields

Field Name	Field Description
LLDP Remote Database Table Counters	Information about remote database table counters.
LastchangeTime	Time elapsed between LLDP agent startup and the last change to the remote database table information.
Inserts	Number of insertions made in the remote database table.
Deletes	Number of deletions made in the remote database table.
Drops	Number of LLDP frames dropped from the remote database table because of errors.
Ageouts	Number of remote database table entries that have aged out of the table.

Sample Output

show lldp remote-global-statistics

```
user@host> show lldp remote-global-statistics
```

```
user@host> show lldp remote-global-statistics
```

```
LLDP Remote Database Table Counters
```

LastchangeTime	Inserts	Deletes	Drops	Ageouts
00:00:76 (76 sec)	192	0	0	0

show lldp statistics

Syntax `show lldp statistics`
`<interface interface-name>`

Release Information Command introduced in Junos OS Release 9.6.

Description Display information about Link Layer Discovery Protocol (LLDP) statistics.

Options `interface interface-name`—(Optional) Display the statistics about a particular physical interface.



NOTE: Starting with Junos OS Release 14.2, you can also display LLDP statistical details for management interfaces, such as `fxp` or `me`, on MX Series routers.

Required Privilege Level view

Related Documentation • [clear lldp statistics on page 2125](#)

List of Sample Output [show lldp statistics on page 2142](#)
[show lldp statistics interface ge-0/1/1 on page 2142](#)

Output Fields [Table 168 on page 2140](#) describes the output fields for the `show lldp statistics` command. Output fields are listed in the approximate order in which they appear.

Table 168: show lldp statistics Output Fields

Field Name	Field Description
Interface	Interface name. For information about interface names, see “Interface Naming Overview” on page 33 . For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i> . For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i> . For information about extended port names in the Junos Fusion technology, see <i>Understanding Junos Fusion Ports</i> .
Received	Number of LLDP frames received on this interface.
Transmitted	Number of LLDP frames sent on this interface.

Table 168: show lldp statistics Output Fields (continued)

Field Name	Field Description
Unknown-TLVs	Number of LLDP frames with unsupported content received on this interface.
With-Errors	Number of LLDP frames with errors received on this interface.
Discarded	Number of LLDP frames received on this interface that were discarded because of problems.
Transmitted	Total number of LLDP frames that were transmitted on an interface.
Untransmitted	Total number of LLDP frames that were untransmitted on an interface.

Sample Output

show lldp statistics

```
user@host> show lldp statistics
```

Interface	Parent Interface	Received	Unknown TLVs	With Errors
xe-3/0/0.0	ae31.0	1564	0	0
xe-3/0/1.0	ae31.0	1564	0	0
xe-3/0/2.0	ae31.0	1565	0	0
xe-3/0/3.0	ae31.0	1566	0	0
xe-3/0/4.0	ae31.0	1598	0	0
xe-3/0/5.0	ae31.0	1598	0	0
xe-3/0/6.0	ae31.0	1596	0	0
xe-3/0/7.0	ae31.0	1597	0	0
xe-5/0/6.0	-	0	0	0
xe-5/0/7.0	-	0	0	0

Discarded TLVs	Transmitted	Untransmitted
0	3044	1
0	3044	1
0	3044	1
0	3044	1
0	3075	1
0	3075	1
0	3075	1
0	3075	1
0	17312	0
0	17312	0

Sample Output

show lldp statistics interface ge-0/1/1

```
user@host> show lldp statistics interface ge-0/1/1
```

Interface	Received	Transmitted	Unknown-TLVs	With-Errors	Discarded
ge-0/1/1	544	540	0	0	0

CHAPTER 23

MVRP Operational Commands

- `show mvrp`
- `show mvrp applicant-state`
- `show mvrp dynamic-vlan-memberships`
- `show mvrp interface`
- `show mvrp registration-state`
- `show mvrp statistics`

show mvrp

Syntax	show mvrp
Release Information	<p>Command introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 10.1 for MX Series routers.</p> <p>Command introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.</p>
Description	Display Multiple VLAN Registration Protocol (MVRP) configuration information.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>Example: Configuring Automatic VLAN Administration Using MVRP on EX Series Switches</i> • <i>Verifying That MVRP Is Working Correctly on Switches</i> • show mvrp statistics on page 2156 • show mvrp applicant-state on page 2147 • show mvrp dynamic-vlan-memberships on page 2150 • show mvrp interface on page 2152 • show mvrp registration-state on page 2154 • show mvrp statistics on page 2156 • show mvrp applicant-state on page 2147 • show mvrp dynamic-vlan-memberships on page 2150 • show mvrp interface on page 2152 • show mvrp registration-state on page 2154
List of Sample Output	<p>show mvrp (EX Series switches and MX Series routers) on page 2145</p> <p>show mvrp (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320) on page 2145</p> <p>show mvrp (EX Series switches) on page 2146</p>
Output Fields	Table 169 on page 2144 lists the output fields for the show mvrp command. Output fields are listed in the approximate order in which they appear.

Table 169: show mvrp Output Fields

Field Name	Field Description
MVRPdynamic VLAN creation	Displays whether global MVRP dynamic VLAN creation is Enabled or Disabled .

Table 169: show mvrp Output Fields (continued)

Field Name	Field Description
Global MVRP configuration	Displays global MVRP information: <ul style="list-style-type: none"> • MVRP status—Displays whether MVRP is Enabled or Disabled. • MVRP dynamic vlan creation—Displays whether global MVRP dynamic VLAN creation is Enabled or Disabled.
MVRP BPDU MAC address	Displays the multicast media access control (MAC) address for MVRP. If configured, the provider MVRP multicast MAC address is used; otherwise, the customer MVRP multicast MAC address is used.
MVRP timers (ms)	Displays MVRP timer information: <ul style="list-style-type: none"> • Interface—The interface on which MVRP is configured. • Join—The maximum number of milliseconds the interfaces must wait before sending VLAN advertisements. • Leave—The number of milliseconds an interface must wait after receiving a Leave message to remove the interface from the VLAN specified in the message. • LeaveAll—The interval at which LeaveAll messages are sent on interfaces. LeaveAll messages maintain current MVRP VLAN membership information in the network.
Interface based configuration	Displays interface-specific MVRP information: <ul style="list-style-type: none"> • Interface—The interface on which MVRP is configured. • Status—Displays whether MVRP is Enabled or Disabled. • Registration—Displays whether registration for the interface is Forbidden or Normal. • Dynamic VLAN Creation—Displays whether interface dynamic VLAN creation is Enabled or Disabled.

Sample Output

show mvrp (EX Series switches and MX Series routers)

```

user@host> show mvrp

MVRP configuration for routing instance 'default-switch'
MVRP dynamic VLAN creation : Enabled
MVRP BPDU MAC address      : Customer bridge group (01-80-C2-00-00-21)
MVRP timers (ms)
  Interface  Join   Leave  LeaveAll
  ge-11/2/8   200    800    10000
  ge-11/0/9   200    800    10000
  ge-11/3/0   200    800    10000

```

Sample Output

show mvrp (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320)

```

user@host> show mvrp

MVRP configuration for routing instance 'default-switch'
MVRP dynamic VLAN creation : Enabled
MVRP BPDU MAC address      : Customer bridge group (00-00-5E-00-53-00)
MVRP timers (ms)

```

Interface	Join	Leave	LeaveAll
ge-0/0/1	200	800	60

Sample Output

show mvrp (EX Series switches)

```
user@switch> show mvrp
```

Global MVRP configuration

MVRP status : Enabled

MVRP dynamic vlan creation: Enabled

MVRP Timers (ms):

Interface	Join	Leave	LeaveAll
all	200	600	10000
xe-0/1/1.0	200	600	10000

Interface based configuration:

Interface	Status	Registration	Dynamic VLAN Creation
all	Disabled	Normal	Enabled
xe-0/1/1.0	Enabled	Normal	Enabled

show mvrp applicant-state

Syntax	show mvrp applicant-state
Release Information	Command introduced in Junos OS Release 10.1. Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.
Description	For MX Series routers, EX Series switches, SRX1500, SRX300, SRX550M, SRX345, SRX340, and SRX320, display Multiple VLAN Registration Protocol (MVRP) applicant state information.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• show mvrp on page 2144• show mvrp interface on page 2152• show mvrp registration-state on page 2154• show mvrp statistics on page 2156• show mvrp interface on page 2152• show mvrp registration-state on page 2154
List of Sample Output	show mvrp applicant-state (EX Series and MX Series) on page 2148 show mvrp applicant-state on page 2148
Output Fields	Table 170 on page 2147 lists the output fields for the show mvrp applicant-state command. Output fields are listed in the approximate order in which they appear.

Table 170: show mvrp applicant-state Output Fields

Field Name	Field Description
VLAN Id	Displays the VLAN ID number.
Interface	Displays the interface number associated with the VLAN ID.

Table 170: show mvrp applicant-state Output Fields (continued)

Field Name	Field Description
State	<p>Displays one of the following MVRP registrar states:</p> <ul style="list-style-type: none"> • VO— Very anxious observer. • VP —Very anxious passive. • VA —Very anxious new. • AN —Anxious new. • AA —Anxious active. • QA —Quiet active. • LA —Leaving active. • AO —Anxious observer. • QO —Quiet observer. • LO —Leaving observer. • AP —Anxious passive. • QA —Quiet passive.

Sample Output (EX Series and MX Series)

show mvrp applicant-state (EX Series and MX Series)

```

user@host> show mvrp applicant-state

MVRP applicant state for routing instance 'default-switch'
(VO) Very anxious observer, (VP) Very anxious passive, (VA) Very anxious new,
(AN) Anxious new, (AA) Anxious active, (QA) Quiet active, (LA) Leaving active,
(AO) Anxious observer, (QO) Quiet observer, (LO) Leaving observer,
(AP) Anxious passive, (QP) Quiet passive

VLAN Id      Interface      State
-----
100          ge-11/3/0      Declaring (QA)
200          ge-11/3/0      Declaring (QA)
300          ge-11/3/0      Declaring (QA)

```

Sample Output (SRX1500, SRX300, SRX550M, SRX345, SRX340, and SRX320)

show mvrp applicant-state

```

user@host> show mvrp applicant-state

MVRP applicant state for routing instance 'default-switch'
(VO) Very anxious observer, (VP) Very anxious passive, (VA) Very anxious new,
(AN) Anxious new, (AA) Anxious active, (QA) Quiet active, (LA) Leaving active,
(AO) Anxious observer, (QO) Quiet observer, (LO) Leaving observer,
(AP) Anxious passive, (QP) Quiet passive

VLAN Id      Interface      State
-----
1            ge-0/0/1       Idle (VO)
30           ge-0/0/1       Idle (VO)
40           ge-0/0/1       Idle (VO)
50           ge-0/0/1       Idle (VO)
100          ge-0/0/1       Idle (VO)

```


show mvrp dynamic-vlan-memberships

Syntax	<code>show mvrp dynamic-vlan-memberships</code>
Release Information	<p>Command introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 10.1 for MX Series routers.</p> <p>Command introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.</p>
Description	Display all VLANs that have been created dynamically using Multiple VLAN Registration Protocol (MVRP) on the router, switch, or SRX Series device.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • <i>Example: Configuring Automatic VLAN Administration Using MVRP on EX Series Switches</i> • <i>Verifying That MVRP Is Working Correctly on Switches</i> • show mvrp on page 2144 • show mvrp applicant-state on page 2147 • show mvrp interface on page 2152 • show mvrp registration-state on page 2154 • show mvrp registration-state on page 2154 • show mvrp statistics on page 2156
List of Sample Output	<p>show mvrp dynamic-vlan-memberships (MX Series and EX Series) on page 2151</p> <p>show mvrp dynamic-vlan-memberships (EX Series) on page 2151</p> <p>show mvrp dynamic-vlan-memberships on page 2151</p>
Output Fields	Table 171 on page 2150 lists the output fields for the <code>show mvrp dynamic-vlan-memberships</code> command on MX Series routers and EX Series switches. Output fields are listed in the approximate order in which they appear.

Table 171: show mvrp dynamic-vlan-memberships Output Fields

Field Name	Field Description
VLAN Id	The VLAN ID of the dynamically created VLAN.
Interfaces	The interface or interfaces that are bound to the dynamically created VLAN.

Sample Output (MX Series Routers and EX Series Switches)

show mvrp dynamic-vlan-memberships (MX Series and EX Series)

```
user@host> show mvrp dynamic-vlan-memberships

MVRP dynamic vlans for routing instance 'default-switch'
(s) static vlan, (f) fixed registration

VLAN Id      Interfaces
  100 (s)    ge-11/3/0
  200 (s)    ge-11/3/0
  300 (s)
```

Sample Output (EX Series Switches)

show mvrp dynamic-vlan-memberships (EX Series)

```
user@switch> show mvrp dynamic-vlan-memberships

VLAN Name      Interfaces
-----
__mvrp_100__    xe-0/1/1.0
                 xe-0/1/0.0
__mvrp_200__    xe-0/1/1.0
                 xe-0/1/0.0
__mvrp_300__    xe-0/1/1.0
```

Sample Output (SRX1500, SRX300, SRX550M, SRX345, SRX340, SRX320)

show mvrp dynamic-vlan-memberships

```
user@host> show mvrp dynamic-vlan-memberships

MVRP dynamic vlans for routing instance 'default-switch'
(s) static vlan, (f) fixed registration

VLAN Id      Interfaces
  1  (s)
 30  (s)
 40  (s)    ge-0/0/1
 50  (s)    ge-0/0/1
100  (s)    ge-0/0/1 (f)
```

show mvrp interface

Syntax	show mvrp interface
Release Information	Command introduced in Junos OS Release 10.1. Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.
Description	Display Multiple VLAN Registration Protocol (MVRP) interface-specific information.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show mvrp on page 2144 • show mvrp applicant-state on page 2147 • show mvrp dynamic-vlan-memberships on page 2150 • show mvrp registration-state on page 2154 • show mvrp registration-state on page 2154 • show mvrp statistics on page 2156
List of Sample Output	show mvrp interface on page 2152 show mvrp interface on page 2153
Output Fields	Table 172 on page 2152 lists the output fields for the show mvrp interface command. Output fields are listed in the approximate order in which they appear.

Table 172: show mvrp interface Output Fields

Field Name	Field Description
Interface	Interface on which MVRP is configured.
Status	Status of the MVRP: Enabled or Disabled .
Registration Mode	Registration for the interface: Fixed , Forbidden , or Normal .
Applicant Mode	Applicant mode.

Sample Output (MX Series Routers and SX Series Switches)

show mvrp interface

```
user@host> show mvrp interface
MVRP interface information for routing instance 'default-switch'
```

Interface	Status	Registration Mode	Applicant Mode
ge-11/2/8	Enabled	Normal	Normal
ge-11/0/9	Enabled	Normal	Normal
ge-11/3/0	Enabled	Normal	Normal

Sample Output (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320)

show mvrp interface

```
user@host> show mvrp interface
```

MVRP interface information for routing instance 'default-switch'

Interface	Status Mode	Registration Mode	Applicant Mode
ge-0/0/1	Enabled	Normal	Normal

show mvrp registration-state

Syntax	show mvrp registration-state
Release Information	Command introduced in Junos OS Release 10.1. Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.
Description	For MX Series routers, EX Series switches and SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320, display Multiple VLAN Registration Protocol (MVRP) registration state information.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show mvrp on page 2144 • show mvrp dynamic-vlan-memberships on page 2150 • show mvrp interface on page 2152 • show mvrp statistics on page 2156
List of Sample Output	show mvrp registration-state (EX Series and MX Series) on page 2155 show mvrp registration-state (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320) on page 2155
Output Fields	Table 173 on page 2154 lists the output fields for the show mvrp registration-state command. Output fields are listed in the approximate order in which they appear.

Table 173: show mvrp registration-state Output Fields

Field Name	Field Description
VLAN Id	Displays the VLAN ID number.
Interface	Displays the interface number associated with the VLAN ID.
Registrar State	Displays whether the registrar state is Registered or Empty.
Forced State	Displays whether the forced state is Registered or Empty.
Managed State	Displays one of the following states: <ul style="list-style-type: none"> • fixed—VLANs always stay in a registered state and are declared as such on all other forwarding ports. • normal —VLANs participate in the MVRP protocol and honor incoming join requests normally. • forbidden —VLANs ignore the incoming join requests and always stay in an unregistered state.
STP State	Displays whether the Spanning Tree Protocol (STP) is Blocking or Forwarding.

Sample Output

show mvrp registration-state (EX Series and MX Series)

```
user@host> show mvrp registration-state
```

MVRP registration state for routing instance 'default-switch'

VLAN Id	Interface	Registrar State	Forced State	Managed State	STP State
100	ge-11/2/8	Empty	Registered	Fixed	Forwarding
	ge-11/0/9	Empty	Empty	Normal	Forwarding
	ge-11/3/0	Registered	Registered	Normal	Forwarding
101	ge-11/2/8	Empty	Registered	Fixed	Forwarding
	ge-11/0/9	Empty	Empty	Normal	Forwarding
	ge-11/3/0	Registered	Registered	Normal	Forwarding

Sample Output

show mvrp registration-state (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320)

```
user@host> show mvrp registration-state
```

MVRP registration state for routing instance 'default-switch'

VLAN Id	Interface	Registrar State	Forced State	Managed State	STP State
1	ge-0/0/1	Empty	Empty	Normal	Forwarding
30	ge-0/0/1	Empty	Empty	Normal	Forwarding
40	ge-0/0/1	Registered	Registered	Normal	Forwarding
50	ge-0/0/1	Registered	Registered	Normal	Forwarding
100	ge-0/0/1	Empty	Registered	Fixed	Forwarding

show mvrp statistics

List of Syntax	Syntax (EX Series Switches) on page 2156 Syntax (Switches with ELS Support) on page 2156 Syntax (SRX Devices) on page 2156
Syntax (EX Series Switches)	<pre>show mvrp statistics <interface <i>interface-name</i>></pre>
Syntax (Switches with ELS Support)	<pre>show mvrp statistics <interface <i>interface-name</i>> <routing-instance <i>routing-instance-name</i>></pre>
Syntax (SRX Devices)	<pre>show mvrp statistics</pre>
Release Information	Command introduced in Junos OS Release 10.0 for EX Series switches. Command introduced in Junos OS Release 13.2X50-D10 (ELS). Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.
Description	Display Multiple VLAN Registration Protocol (MVRP) statistics in the form of Multiple Registration Protocol data unit (MRPDU) messages.
Options	none —Show MVRP statistics for all interfaces on the switch. interface <i>interface-name</i> —(Optional) Show MVRP statistics for the specified interface.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• show mvrp on page 2144• <i>clear mvrp statistics</i>• <i>Example: Configuring Automatic VLAN Administration Using MVRP on EX Series Switches</i>• <i>Verifying That MVRP Is Working Correctly on Switches</i>• <i>Verifying That MVRP Is Working Correctly on EX Series Switches with ELS Support</i>
List of Sample Output	show mvrp statistics interface xe-0/1/1.0 on page 2159 show mvrp statistics on page 2159 show mvrp statistics (SRX Devices) on page 2159
Output Fields	Table 171 on page 2150 lists the output fields for the show mvrp statistics command on EX Series switches. Output fields are listed in the approximate order in which they appear.

Table 174: show mvrp statistics Output Fields

Field Name	Field Description
MRPDU received	Number of MRPDU messages received on the switch.
Invalid PDU received	Number of invalid MRPDU messages received on the switch.
New received	Number of new messages received on the switch.
Join Empty received	Number of MRP JoinEmpty messages received on the switch. Either this value or the value for <i>JoinIn received</i> should increase when the value for <i>MRPDU received</i> increases. If this value is not incrementing when it should, you might have a Junos OS release version compatibility issue. To fix a version compatibility issue, see <i>Configuring Multiple VLAN Registration Protocol (MVRP) on Switches</i> .
Join In received	Number of MRP JoinIn messages received on the switch. Either this value or the value for <i>JoinEmpty received</i> should increase when the value for <i>MRPDU received</i> increases. If this value is not incrementing when it should, you might have a Junos OS release version compatibility issue. To fix a version compatibility issue, see <i>Configuring Multiple VLAN Registration Protocol (MVRP) on Switches</i> .
Empty received	Number of MRP Empty messages received on the switch.
In received	Number of MRP In messages received on the switch.
Leave received	Number of MRP Leave messages received on the switch.
LeaveAll received	Number of LeaveAll messages received on the switch.
MRPDU transmitted	Number of MRPDU messages transmitted from the switch.
MRPDU transmit failures	Number of MRPDU transmit failures from the switch.
New transmitted	Number of new messages transmitted from the switch.
Join Empty transmitted	Number of JoinEmpty messages sent from the switch.
Join In transmitted	Number of MRP JoinIn messages sent from the switch.
Empty transmitted	Number of MRP Empty messages sent from the switch.
In transmitted	Number of MRP In messages sent from the switch.
Leave transmitted	Number of MRP Leave Empty messages sent from the switch.
LeaveAll transmitted	Number of MRP LeaveAll messages sent from the switch.

Table 175 on page 2158 lists the output fields for the **show mvrp statistics** command on SRX devices. Output fields are listed in the approximate order in which they appear.

Table 175: show mvrp statistics Output Fields

Field Name	Field Description
Interface name	Interface for which MVRP statistics are displayed.
VLAN IDs registered	Number of Virtual LAN (VLAN) IDs registered.
Sent MVRP PDUs	Number of MRPDU messages transmitted from the switch.
Received MVRP PDUs without error	Number of MRPDU messages received on the switch.
Received MVRP PDUs with error	Number of invalid MRPDU messages received on the switch.
Transmitted Join Empty	Number of JoinEmpty messages sent from the switch.
Transmitted Leave All	Number of MRP LeaveAll messages sent from the switch.
Received Join In	Number of MRP JoinIn messages received on the switch. Either this value or the value for Received Join Empty should increase when the value for Received MVRP PDUs without error increases. If this value is not incrementing when it should, you might have a Junos OS release compatibility issue. To resolve the issue, see <i>Configuring Multiple VLAN Registration Protocol (MVRP) on Switches</i> .
Transmitted Join In	Number of MRP JoinIn messages sent from the switch.
Transmitted Empty	Number of MRP Empty messages sent from the switch.
Transmitted Leave	Number of MRP LeaveEmpty messages sent from the switch.
Transmitted In	Number of MRP In messages sent from the switch.
Transmitted New	Number of New messages transmitted from the switch.
Received Leave All	Number of LeaveAll messages received on the switch.
Received Leave	Number of MRP Leave messages received on the switch.
Received In	Number of MRP In messages received on the switch.
Received Empty	Number of MRP Empty messages received on the switch.
Received Join Empty	Number of MRP JoinEmpty messages received on the switch. Either this value or the value for Received Join In should increase when the value for Received MVRP PDUs without error increases. If this value is not incrementing when it should, you might have a Junos OS release compatibility issue. To resolve the issue, see <i>Configuring Multiple VLAN Registration Protocol (MVRP) on Switches</i> .
Received New	Number of New messages received on the switch.

Sample Output

show mvrp statistics interface xe-0/1/1.0

```
user@switch> show mvrp statistics interface xe-0/1/1.0
```

```
MVRP statistics
MRPDU received           : 3342
Invalid PDU received     : 0
New received             : 2
Join Empty received      : 1116
Join In received         : 2219
Empty received           : 2
In received              : 2
Leave received            : 1
LeaveAll received         : 1117
MRPDU transmitted        : 3280
MRPDU transmit failures  : 0
New transmitted           : 0
Join Empty transmitted    : 1114
Join In transmitted      : 2163
Empty transmitted        : 1
In transmitted            : 1
Leave transmitted         : 1
LeaveAll transmitted      : 1111
```

show mvrp statistics

```
user@host> show mvrp statistics
```

```
MVRP statistics for routing instance 'default-switch'
```

```
Interface name           : xe-0/1/1
VLAN IDs registered      : 117
Sent MVRP PDUs           : 118824
Received MVRP PDUs without error: 118848
Received MVRP PDUs with error : 0
Transmitted Join Empty   : 5229
Transmitted Leave All    : 2
Recieved Join In         : 11884924
Transmitted Join In      : 1835
Transmitted Empty        : 93606408
Transmitted Leave        : 888
Transmitted In           : 13780024
Transmitted New          : 2692
Received Leave All       : 118761
Received Leave           : 97
Received In              : 3869
Received Empty           : 828
Received Join Empty      : 2020152
Received New             : 224
...
```

show mvrp statistics (SRX Devices)

```
user@host> show mvrp statistics
```

MVRP statistics for routing instance 'default-switch'

Interface name	: ge-0/0/1
VLAN IDs registered	: 2
Sent MVRP PDUs	: 41
Received MVRP PDUs without error	: 28
Received MVRP PDUs with error	: 0
Transmitted Join Empty	: 0
Transmitted Leave All	: 20
Received Join In	: 0
Transmitted Join In	: 0
Transmitted Empty	: 114
Transmitted Leave	: 0
Transmitted In	: 10
Transmitted New	: 0
Received Leave All	: 1
Received Leave	: 0
Received In	: 0
Received Empty	: 67
Received Join Empty	: 24
Received New	: 0

CHAPTER 24

OSPF Operational Commands

- `clear (ospf | ospf3) database`
- `clear (ospf | ospf3) io-statistics`
- `clear (ospf | ospf3) neighbor`
- `clear (ospf | ospf3) overload`
- `clear (ospf | ospf3) statistics`
- `show (ospf | ospf3) backup coverage`
- `show (ospf | ospf3) backup lsp`
- `show (ospf | ospf3) backup neighbor`
- `show (ospf | ospf3) backup spf`
- `show ospf context-identifier`
- `show ospf database`
- `show ospf3 database`
- `show (ospf | ospf3) interface`
- `show (ospf | ospf3) io-statistics`
- `show (ospf | ospf3) log`
- `show (ospf | ospf3) neighbor`
- `show (ospf | ospf3) overview`
- `show (ospf | ospf3) route`
- `show (ospf | ospf3) statistics`

clear (ospf | ospf3) database

List of Syntax [Syntax on page 2162](#)
[Syntax \(EX Series Switch and QFX Series\) on page 2162](#)

Syntax `clear (ospf | ospf3) database`
`<all>`
`<advertising-router (router-id | self)>`
`<area area-id>`
`<asbrsummary>`
`<external>`
`<instance instance-name>`
`<inter-area-prefix>`
`<inter-area-router>`
`<intra-area-prefix>`
`<link-local>`
`<logical-system (all | logical-system-name)>`
`<lsa-id lsa-id>`
`<netsummary>`
`<network>`
`<nssa>`
`<opaque-area>`
`<purge>`
`<realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>`
`<router>`

Syntax (EX Series Switch and QFX Series) `clear (ospf | ospf3) database`
`<all>`
`<advertising-router (router-id | self)>`
`<area area-id>`
`<asbrsummary>`
`<external>`
`<instance instance-name>`
`<inter-area-prefix>`
`<inter-area-router>`
`<intra-area-prefix>`
`<link-local>`
`<lsa-id lsa-id>`
`<netsummary>`
`<network>`
`<nssa>`
`<opaque-area>`
`<purge>`
`<router>`

Release Information Command introduced before Junos OS Release 7.4.
advertising-router *router-id*, **netsummary**, **network**, **nssa**, **opaque-area**, and **router** options added in Junos OS Release 8.3. You must use the **purge** command with these options.
area *area-id* option added in Junos OS Release 8.3.
Command introduced in Junos OS Release 9.0 for EX Series switches.

realm option added in Junos OS Release 9.2.

advertising-router (*router-id* | **self**) option added in Junos OS Release 9.5.

advertising-router (*router-id* | **self**) option introduced in Junos OS Release 9.5 for EX Series switches.

Command introduced in Junos OS Release 11.3 for the QFX Series.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

purge option (and all options that are dependent on the **purge** option) hidden in Junos OS Release 13.3.

Description With the master Routing Engine, delete entries in the Open Shortest Path First (OSPF) link-state advertisement (LSA) database. With the backup Routing Engine, delete the OSPF LSA database and sync the new database with the master Routing Engine.



CAUTION: You can also use the **purge** command with any of the options to discard rather than delete the specified LSA entries. This command is useful only for testing. Use it with care, because it causes significant network disruption.

Options **all**—Delete all LSAs other than the system's own LSAs, which are regenerated. To resynchronize the database, the system destroys all adjacent neighbors that are in the state **EXSTART** or higher. The neighbors are then reacquired and the databases are synchronized.

advertising-router (*router-id* | **self**)—(Optional) Discard entries for the LSA entries advertised by the specified routing device or by this routing device.

area *area-id*—(Optional) Discard entries for the LSAs in the specified area.

asbrsummary—(Optional) Discard summary AS boundary router LSA entries.

external—(Optional) Discard external LSAs.

instance *instance-name*—(Optional) Delete or discard entries for the specified routing instance only.

inter-area-prefix—(OSPFv3 only) (Optional) Discard interarea prefix LSAs.

inter-area-router—(OSPFv3 only) (Optional) Discard interarea router LSAs.

intra-area-prefix—(OSPFv3 only) (Optional) Discard intra-area prefix LSAs.

logical-system (**all** | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

link-local—(Optional) Delete link-local LSAs.

lsa-id *lsa-id*—(Optional) Discard the LSA entries with the specified LSA identifier.

netsummary—(Optional) Discard summary network LSAs.

network—(Optional) Discard network LSAs.

nssa—(Optional) Discard not-so-stubby area (NSSA) LSAs.

opaque-area—(Optional) Discard opaque area-scope LSAs.

realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)—(OSPFv3 only) (Optional)
Delete the entries for the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

router—(Optional) Discard router LSAs.

purge—(Optional) Discard all entries in the link-state advertisement database. All link-state advertisements are set to **MAXAGE** and are flooded. The database is repopulated when the originators of the link-state advertisements receive the **MAXAGE** link-state advertisements and reissue them.

Required Privilege Level

clear

Related Documentation

- [show ospf database on page 2188](#)
- [show ospf3 database on page 2199](#)

List of Sample Output

[clear ospf database all on page 2164](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

[clear ospf database all](#)

```
user@host> clear ospf database all
```


clear (ospf | ospf3) io-statistics

List of Syntax	Syntax on page 2165 Syntax (EX Series Switch and QFX Series) on page 2165
Syntax	<pre>clear (ospf ospf3) io-statistics <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and QFX Series)	<pre>clear (ospf ospf3) io-statistics</pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Clear Open Shortest Path First (OSPF) input and output statistics.
Options	<p>none—Clear OSPF input and output statistics.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
List of Sample Output	clear ospf io-statistics on page 2165
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear ospf io-statistics

```
user@host> clear ospf io-statistics
```

clear (ospf | ospf3) neighbor

List of Syntax [Syntax on page 2166](#)
[Syntax \(EX Series Switch and QFX Series\) on page 2166](#)

Syntax

```
clear (ospf | ospf3) neighbor
<all>
<area area-id>
<instance instance-name>
<interface interface-name>
<logical-system (all | logical-system-name)>
<neighbor>
<realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>
```

Syntax (EX Series Switch and QFX Series)

```
clear (ospf | ospf3) neighbor
<all>
<area area-id>
<instance instance-name>
<interface interface-name>
<neighbor>
```

Release Information

Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
realm option introduced in Junos OS Release 9.2.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Tear down Open Shortest Path First (OSPF) neighbor connections.

Options

all—Tear down OSPF connections with all neighbors for all routing instances.

area *area-id*—(Optional) Tear down neighbor connections for the specified area only.

instance *instance-name*—(Optional) Tear down neighbor connections for the specified routing instance only.

interface *interface-name*—(Optional) Tear down neighbor connections for the specified interface only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

neighbor—(Optional) Clear the state of the specified neighbor only.

realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)—(Optional) (OSPFv3 only) Clear the state of the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

Required Privilege Level clear

Related Documentation • [show \(ospf | ospf3\) neighbor on page 2221](#)

List of Sample Output [clear ospf neighbor all on page 2167](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

`clear ospf neighbor all`

```
user@host> clear ospf neighbor all
```

clear (ospf | ospf3) overload

List of Syntax	Syntax on page 2168 Syntax (EX Series Switches) on page 2168
Syntax	<pre>clear (ospf ospf3) overload <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>clear (ospf ospf3) overload <instance <i>instance-name</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear the Open Shortest Path First (OSPF) overload bit and rebuild link-state advertisements (LSAs).
Options	none —Clear the overload bit and rebuild LSAs for all routing instances. instance <i>instance-name</i> —(Optional) Clear the overload bit and rebuild LSAs for the specified routing instance only. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	clear
List of Sample Output	clear ospf overload on page 2168
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear ospf overload

```
user@host> clear ospf overload
```

clear (ospf | ospf3) statistics

List of Syntax	Syntax on page 2169 Syntax (EX Series Switch and QFX Series) on page 2169
Syntax	<pre>clear (ospf ospf3) statistics <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <realm (ipv4-multicast ipv4-unicast ipv6-multicast)></pre>
Syntax (EX Series Switch and QFX Series)	<pre>clear (ospf ospf3) statistics <instance <i>instance-name</i>></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>realm option introduced in Junos OS Release 9.2.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Clear Open Shortest Path First (OSPF) statistics.
Options	<p>none—Clear OSPF statistics.</p> <p>instance <i>instance-name</i>—(Optional) Clear statistics for the specified routing instance only.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>realm (ipv4-multicast ipv4-unicast ipv6-multicast)—(Optional) (OSPFv3 only) Clear statistics for the specified OSPFv3 realm, or address family. Use the realm option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show (ospf ospf3) statistics on page 2240
List of Sample Output	clear ospf statistics on page 2170
Output Fields	See show (ospf ospf3) statistics for an explanation of output fields.

Sample Output

clear ospf statistics

The following sample output displays OSPF statistics before and after the **clear ospf statistics** command is entered:

```
user@host> show ospf statistics
```

Packet type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Hello	3254	2268	3	1
DbD	41	46	0	0
LSReq	8	7	0	0
LSUpdate	212	154	0	0
LSAck	65	98	0	0

DBDs retransmitted	:	3, last 5 seconds	:	0
LSAs flooded	:	12, last 5 seconds	:	0
LSAs flooded high-prio	:	0, last 5 seconds	:	0
LSAs retransmitted	:	0, last 5 seconds	:	0
LSAs transmitted to nbr	:	3, last 5 seconds	:	0
LSAs requested	:	5, last 5 seconds	:	0
LSAs acknowledged	:	19, last 5 seconds	:	0

Flood queue depth	:	0
Total rexmit entries	:	0
db summaries	:	0
lsreq entries	:	0

Receive errors:
626 subnet mismatches

```
user@host> clear ospf statistics
```

```
user@host> show ospf statistics
```

Packet type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Hello	3	1	3	1
DbD	0	0	0	0
LSReq	0	0	0	0
LSUpdate	0	0	0	0
LSAck	0	0	0	0

DBDs retransmitted	:	0, last 5 seconds	:	0
LSAs flooded	:	0, last 5 seconds	:	0
LSAs flooded high-prio	:	0, last 5 seconds	:	0
LSAs retransmitted	:	0, last 5 seconds	:	0
LSAs transmitted to nbr	:	0, last 5 seconds	:	0
LSAs requested	:	0, last 5 seconds	:	0
LSAs acknowledged	:	0, last 5 seconds	:	0

Flood queue depth	:	0
Total rexmit entries	:	0
db summaries	:	0
lsreq entries	:	0

```
Receive errors:  
None
```

show (ospf | ospf3) backup coverage

Syntax	<pre>show (ospf ospf3) backup coverage <instance <i>instance-name</i>> < logical-system (all <i>logical-system-name</i>)> <realm (ipv4-unicast ipv6-unicast)> <topology <i>topology-name</i>></pre>
Syntax (QFX Series)	<pre>show (ospf ospf3) backup coverage <instance <i>instance-name</i>> <topology <i>topology-name</i>></pre>
Release Information	Command introduced in Junos OS Release 10.0. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about the level of backup coverage available for all the nodes and prefixes in the network.
Options	<p>none—Display information about the level backup coverage for all OSPF routing instances in all logical systems.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Display information about the level of backup coverage for all logical systems or for a specific logical system.</p> <p>instance <i>instance-name</i>—(Optional) Display information about the level of backup coverage for a specific OSPF routing instance.</p> <p>realm (ipv4-unicast ipv6-unicast)—(Optional) (OSPFv3 only) Display information about the level of backup coverage for the specific OSPFv3 realm, or address family.</p> <p>topology (default <i>topology-name</i>)—(Optional) (OSPFv2 only) Display information about the level of backup coverage for the specific OSPF topology.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• show (ospf ospf3) backup lsp on page 2175
List of Sample Output	show ospf backup coverage on page 2173 show ospf3 backup coverage on page 2173
Output Fields	Table 176 on page 2173 lists the output fields for the show (ospf ospf3) backup coverage command. Output fields are listed in the approximate order in which they appear.

Table 176: show (ospf | ospf3) backup coverage Output Fields

Field Name	Field Description
Node Coverage	Information about backup coverage for each OSPF node.
Area	Area number. Area 0.0.0.0 is the backbone.
Covered Nodes	Number of nodes for which backup coverage is available.
Total Nodes	Total number of OSPF nodes.
Route Coverage	Information about backup coverage for each type of OSPF route.
Path Type	Type of OSPF path: Intra , Inter , Ext1 , Ext2 , and All .
Covered Routes	For each path type, the number of routes for which backup coverage is available.
Total Routes	For each path type, the total number of configured routes.
Percent Covered	For all nodes and for each path type, the percentage for which backup coverage is available.

Sample Output

show ospf backup coverage

```

user@host> show ospf backup coverage
Topology default coverage:

Node Coverage:

Area              Covered  Total  Percent
                  Nodes   Nodes  Covered
0.0.0.0           4       5    80.00%

Route Coverage:

Path Type  Covered  Total  Percent
          Routes Routes  Covered
Intra      8       14    57.14%
Inter      0       0    100.00%
Ext1       0       0    100.00%
Ext2       1       1    100.00%
All        9      15    60.00%

```

show ospf3 backup coverage

```

user @host > show ospf3 backup coverage
show ospf3 backup coverage
Node Coverage:

```

Area	Covered Nodes	Total Nodes	Percent Covered
0.0.0.0	4	5	80.00%

Route Coverage:

Path Type	Covered Routes	Total Routes	Percent Covered
Intra	4	6	66.67%
Inter	0	0	100.00%
Ext1	0	0	100.00%
Ext2	1	1	100.00%
All	5	7	71.43%

show (ospf | ospf3) backup lsp

Syntax `show (ospf | ospf3) backup lsp`
 `<logical-system (all | logical-system-name)>`
 `<realm (ipv4-unicast | ipv6-unicast)>`

Release Information Command introduced in Junos OS Release 10.0.

Description Display information about MPLS label-switched-paths (LSPs) designated as backup routes for OSPF routes.



NOTE: MPLS LSPs can be used as backup routes only for routes in the default OSPFv2 topology and not for any configured topology. Additionally, MPLS LSPs cannot be used as backup routes for nondefault instances either for OSPFv2 or OSPFv3.

- Options** **none**—Display information all MPLS LSPs designated as backup routes.
- logical-system (all | *logical-system-name*)**—(Optional) Display information about MPLS LSPs designated as backup routes for all logical systems or a specific logical system.
- realm (ipv4-unicast | ipv6-unicast)**—(Optional) (OSPFv3 only) Display information about MPLS LSPs designated as backup routes for a specific realm, or address family.

Required Privilege Level view

Related Documentation • [show \(ospf | ospf3\) backup coverage on page 2172](#)

List of Sample Output [show ospf backup lsp on page 2176](#)
 [show ospf3 backup lsp on page 2176](#)

Output Fields [Table 177 on page 2175](#) lists the output fields for the **show (ospf | ospf3) backup lsp** command. Output fields are listed in the approximate order in which they appear.

Table 177: show (ospf | ospf3) backup lsp Output Fields

Field Name	Field Description
<i>MPLS LSP name</i>	Name of each MPLS LSP designated as a backup path.
Egress	IP address of the egress router for the LSP.

Table 177: show (ospf | ospf3) backup lsp Output Fields (continued)

Field Name	Field Description
Status	<p>State of the LSP:</p> <ul style="list-style-type: none"> • Up—The router can detect RSVP hello messages from the neighbor. • Down—The router has received one of the following indications: <ul style="list-style-type: none"> • Communication failure from the neighbor. • Communication from IGP that the neighbor is unavailable. • Change in the sequence numbers in the RSVP hello messages sent by the neighbor. • Deleted—The LSP is no longer available as a backup path.
Last change	Time elapsed since the neighbor state changed either from up or down or from down to up . The format is <i>hh:mm:ss</i> .
TE-metric	Configured traffic engineering metric.
Metric	Configured metric.

Sample Output

show ospf backup lsp

```
user@host> show ospf backup lsp
tobanff
  Egress: 10.255.71.239, Status: up, Last change: 00:00:23
  TE-metric: 0, Metric: 0
```

Sample Output

show ospf3 backup lsp

```
user@host> show ospf3 backup lsp
tobanff
  Egress: 10.255.71.239, Status: up, Last change: 00:00:45
  TE-metric: 0, Metric: 0
```

show (ospf | ospf3) backup neighbor

Syntax	<pre>show (ospf ospf3) backup neighbor <area <i>area-id</i>> <instance (default <i>instance-name</i>)> <logical-system (default ipv4-multicast <i>logical-system-name</i>)> <topology (default ipv4-multicast <i>topology-name</i>)></pre>
Syntax (QFX Series)	<pre>show (ospf ospf3) backup neighbor <area <i>area-id</i>> <instance <i>instance-name</i>> <topology (default ipv4-multicast <i>topology-name</i>)></pre>
Release Information	<p>Command introduced in Junos OS Release 10.0.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display the neighbors through which direct next hops for the backup paths are available.
Options	<p>none—Display all neighbors that have direct next hops for backup paths.</p> <p>area <i>area-id</i>—(Optional) Display the area information.</p> <p>instance (default <i>instance-name</i>)—(Optional) Display information about the default routing instance or a particular routing instance.</p> <p>logical-system (default ipv4-multicast <i>logical-system-name</i>)—(Optional) Display information about the default logical system, IPv4 multicast logical system, or a particular logical system.</p> <p>topology (default ipv4-multicast <i>topology-name</i>)—(OSPFv2 only) (Optional) Display information about the default topology, IPv4 multicast topology, or a particular topology.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> show (ospf ospf3) backup spf on page 2179
List of Sample Output	show ospf backup neighbor on page 2178
Output Fields	<p>Table 178 on page 2178 lists the output fields for the show (ospf ospf3) backup neighbor command. Output fields are listed in the approximate order in which they appear.</p>

Table 178: show (ospf |ospf3) backup neighbor Output Fields

Field Name	Field Description	Level of Output
Neighbor to Self Metric	Metric from the backup neighbor to the OSPF node.	All levels
Self to Neighbor Metric	Metric from the OSPF node to the backup neighbor.	All levels
Direct next-hop	Interface and address of the direct next hop.	All levels

Sample Output

show ospf backup neighbor

```
user@host> show ospf backup neighbor
Topology default backup neighbors:
Area 0.0.0.5 backup neighbors:
10.0.0.5
  Neighbor to Self Metric: 5
  Self to Neighbor Metric: 5
  Direct next-hop: ge-4/0/0.111 via 10.0.175.5
10.0.0.6
  Neighbor to Self Metric: 5
  Self to Neighbor Metric: 5
  Direct next-hop: ge-4/1/0.110 via 10.0.176.6
```

show (ospf | ospf3) backup spf

Syntax	<pre>show (ospf ospf3) backup spf <brief detail> <area <i>area-id</i>> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <no-coverage> <node-id> <realm (ipv4-unicast ipv6-unicast)> <topology (default ipv4-multicast <i>topology-name</i>)></pre>
Syntax (QFX Series)	<pre>show (ospf ospf3) backup spf <brief detail> <area <i>area-id</i>> <instance <i>instance-name</i>> <no-coverage> <node-id> <topology (default ipv4-multicast <i>topology-name</i>)></pre>
Release Information	<p>Command introduced in Junos OS Release 10.0.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p>
Description	Display information about OSPF shortest-path-first calculations for backup paths.
Options	<p>none—Display information about OSPF shortest-path-first (SPF) calculations for all backup paths for all destination nodes.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>area <i>area-id</i>—(Optional) Display the area information.</p> <p>instance <i>instance-name</i>—(Optional) Display information about the routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Display information about all logical systems or a specific logical system.</p> <p>no-coverage—(Optional) Display information if there is no backup coverage.</p> <p>node-id—(Optional) Display information about the node specified.</p> <p>realm (ipv4-unicast ipv6-unicast)—(Optional) Display information about the ipv4 or ipv6 realm.</p> <p>topology (default ipv4-multicast <i>topology-name</i>)—(Optional) (OSPFv2 only) Display information about the default topology, IPv4 multicast topology, or a specific topology.</p>
Required Privilege Level	view

List of Sample Output [show ospf backup spf on page 2180](#)
[show ospf backup spf detail on page 2181](#)
[show ospf3 backup spf on page 2183](#)

Output Fields Table 179 on page 2180 lists the output fields for the **show (ospf |ospf3) backup spf** command. Output fields are listed in the approximate order in which they appear.

Table 179: show (ospf |ospf3) backup spf Output Fields

Field Name	Field Description	Level of Output
Area <i>area-id</i> results	Area for which the results are displayed. Area 0.0.0.0 is the backbone area.	All levels
<i>address</i>	Address of the node for which the results are displayed.	All levels
Self to Destination Metric	Metric from the node to the destination.	All levels
Parent Node	Address of the parent node.	All levels
Primary next-hop	Address of the next hop.	All levels
Backup Neighbor	Address of the backup neighbor or LSP endpoint and the following information: <ul style="list-style-type: none"> Neighbor to Destination Metric Neighbor to Self Metric Self to Neighbor Metric Status (Eligible, Not Eligible, Not Evaluated) and the reason for the status. <p>NOTE: If the backup neighbor is an LSP endpoint, it is indicated as such after the neighbor address.</p>	All levels

Sample Output

show ospf backup spf

```
user@host> show ospf backup spf
Topology default results:

Area 0.0.0.0 results:

pro16-d-1o0.xxx.yyyy.net
  Self to Destination Metric: 1
  Parent Node: pro16-b-1o0.xxx.yyyy.net
  Primary next-hop: at-1/0/1.0
  Backup Neighbor: pro16-c-1o0.xxx.yyyy.net (LSP endpoint)
    Neighbor to Destination Metric: 4, Neighbor to Self Metric: 3
    Self to Neighbor Metric: 3
    Not eligible, Reason: Path loops
  Backup Neighbor: pro16-d-1o0.xxx.yyyy.net
    Neighbor to Destination Metric: 0, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
```


...

show ospf backup spf detail**user@host> show ospf backup spf detail**

Topology default results:

Area 0.0.0.0 results:

11.14.10.2

Self to Destination Metric: 1

Parent Node: 10.255.70.103

Primary next-hop: ae0.0

Backup Neighbor: 10.255.71.243

Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1

Self to Neighbor Metric: 1

Not eligible, Reason: Path loops

Backup Neighbor: 10.255.71.52

Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15

Self to Neighbor Metric: 1

Not eligible, Reason: Primary next-hop link fate sharing

Backup Neighbor: 10.255.71.242

Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15

Self to Neighbor Metric: 1

Not eligible, Reason: Path loops

10.255.71.52

Self to Destination Metric: 1

Parent Node: 11.14.10.2

Primary next-hop: ae0.0 via 11.14.10.2

Backup Neighbor: 10.255.71.52

Neighbor to Destination Metric: 0, Neighbor to Self Metric: 15

Self to Neighbor Metric: 1

Not eligible, Reason: Primary next-hop link fate sharing

Backup Neighbor: 10.255.71.243

Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1

Self to Neighbor Metric: 1

Not eligible, Reason: Path loops

Backup Neighbor: 10.255.71.242

Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15

Self to Neighbor Metric: 1

Not eligible, Reason: Path loops

10.255.71.242

Self to Destination Metric: 1

Parent Node: 10.255.70.103

Primary next-hop: as0.0

Backup Neighbor: 10.255.71.242

Neighbor to Destination Metric: 0, Neighbor to Self Metric: 15

Self to Neighbor Metric: 1

Not eligible, Reason: Primary next-hop link fate sharing

Backup Neighbor: 10.255.71.243

Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1

Self to Neighbor Metric: 1

Not eligible, Reason: Path loops

Backup Neighbor: 10.255.71.52

Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15

Self to Neighbor Metric: 1

```

    Not eligible, Reason: Path loops

10.255.71.243
  Self to Destination Metric: 1
  Parent Node: 10.255.70.103
  Primary next-hop: so-6/0/0.0
  Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 0, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
  Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops
  Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops

12.15.0.1
  Self to Destination Metric: 2
  Parent Node: 10.255.71.243
  Primary next-hop: so-6/0/0.0
  Backup next-hop: ae0.0 via 11.14.10.2
  Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
  Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Eligible, Reason: Contributes backup next-hop
  Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 17, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not evaluated, Reason: Interface is already covered

10.255.71.238
  Self to Destination Metric: 2
  Parent Node: 10.255.71.243
  Primary next-hop: so-6/0/0.0
  Backup next-hop: as0.0
  Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
  Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Eligible, Reason: Contributes backup next-hop
  Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not evaluated, Reason: Interface is already covered

10.255.71.239
  Self to Destination Metric: 2
  Parent Node: 12.15.0.1
  Primary next-hop: so-6/0/0.0
  Backup next-hop: ae0.0 via 11.14.10.2

```

```

Backup Neighbor: 10.255.71.243
  Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1
  Self to Neighbor Metric: 1
  Not eligible, Reason: Primary next-hop link fate sharing
Backup Neighbor: 10.255.71.52
  Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
  Self to Neighbor Metric: 1
  Eligible, Reason: Contributes backup next-hop
Backup Neighbor: 10.255.71.242
  Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
  Self to Neighbor Metric: 1
  Not evaluated, Reason: Interface is already covered

14.15.0.2
  Self to Destination Metric: 3
  Parent Node: 10.255.71.239
  Primary next-hop: so-6/0/0.0
  Backup next-hop: ae0.0 via 11.14.10.2
  Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
  Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Eligible, Reason: Contributes backup next-hop
  Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 17, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not evaluated, Reason: Interface is already covered

```

show ospf3 backup spf

```
user@host> show ospf3 backup spf
```

```
Area 0.0.0.0 results:
```

```

10.255.71.52;0.0.0.5
  Self to Destination Metric: 1
  Parent Node: 10.255.70.103
  Primary next-hop: ae0.0
  Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops
  Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
  Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops

10.255.71.52
  Self to Destination Metric: 1
  Parent Node: 10.255.71.52;0.0.0.5
  Primary next-hop: ae0.0 via fe80::290:69ff:fe0f:67f0
  Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 0, Neighbor to Self Metric: 15

```

```

    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops
Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops

10.255.71.242
    Self to Destination Metric: 1
    Parent Node: 10.255.70.103
    Primary next-hop: as0.0
Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 0, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops
Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops

10.255.71.243
    Self to Destination Metric: 1
    Parent Node: 10.255.70.103
    Primary next-hop: so-6/0/0.0
Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 0, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops
Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not eligible, Reason: Path loops

10.255.71.243;0.0.0.2
    Self to Destination Metric: 2
    Parent Node: 10.255.71.243
    Primary next-hop: so-6/0/0.0
Backup next-hop: ae0.0 via fe80::290:69ff:fe0f:67f0
Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Eligible, Reason: Contributes backup next-hop
Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 17, Neighbor to Self Metric: 15

```

```

    Self to Neighbor Metric: 1
    Not evaluated, Reason: Interface is already covered

10.255.71.238
    Self to Destination Metric: 2
    Parent Node: 10.255.71.243
    Primary next-hop: so-6/0/0.0
    Backup next-hop: as0.0
    Backup Neighbor: 10.255.71.243
        Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1
        Self to Neighbor Metric: 1
        Not eligible, Reason: Primary next-hop link fate sharing
    Backup Neighbor: 10.255.71.242
        Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
        Self to Neighbor Metric: 1
        Eligible, Reason: Contributes backup next-hop
    Backup Neighbor: 10.255.71.52
        Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
        Self to Neighbor Metric: 1
        Not evaluated, Reason: Interface is already covered

10.255.71.239
    Self to Destination Metric: 2
    Parent Node: 10.255.71.243;0.0.0.2
    Primary next-hop: so-6/0/0.0
    Backup next-hop: ae0.0 via fe80::290:69ff:fe0f:67f0
    Backup Neighbor: 10.255.71.243
        Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1
        Self to Neighbor Metric: 1
        Not eligible, Reason: Primary next-hop link fate sharing
    Backup Neighbor: 10.255.71.52
        Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
        Self to Neighbor Metric: 1
        Eligible, Reason: Contributes backup next-hop
    Backup Neighbor: 10.255.71.242
        Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
        Self to Neighbor Metric: 1
        Not evaluated, Reason: Interface is already covered

10.255.71.239;0.0.0.4
    Self to Destination Metric: 3
    Parent Node: 10.255.71.239
    Primary next-hop: so-6/0/0.0
    Backup next-hop: ae0.0 via fe80::290:69ff:fe0f:67f0
    Backup Neighbor: 10.255.71.243
        Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
        Self to Neighbor Metric: 1
        Not eligible, Reason: Primary next-hop link fate sharing
    Backup Neighbor: 10.255.71.52
        Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
        Self to Neighbor Metric: 1
        Eligible, Reason: Contributes backup next-hop
    Backup Neighbor: 10.255.71.242
        Neighbor to Destination Metric: 17, Neighbor to Self Metric: 15
        Self to Neighbor Metric: 1
        Not evaluated, Reason: Interface is already covered

```

```
show ospf context-identifier
```

List of Syntax	Syntax on page 2186 Syntax (EX Series Switches and QFX Series) on page 2186
Syntax	<pre>show ospf context-identifier <brief detail> <area <i>area-id</i>> <context-id> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches and QFX Series)	<pre>show ospf context-identifier <brief detail> <area <i>area-id</i>> <context-id> <instance <i>instance-name</i>></pre>
Release Information	Command introduced in Junos OS Release 10.4. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the context identifier information processed and advertised by Open Shortest Path First (OSPF) for egress protection.
Options	<p>none—Display information about all context identifiers.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>area <i>area-id</i>—(Optional) Display information about the context identifier for the specified area.</p> <p><i>context-id</i>—(Optional) Display information about the specified context identifier.</p> <p>instance <i>instance-name</i>—(Optional) Display information about the context identifier for the specified routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><i>egress-protection (Layer 2 circuit)</i> in the <i>Junos OS VPNs Library for Routing Devices</i><i>egress-protection (MPLS)</i> in the <i>Junos OS VPNs Library for Routing Devices</i>

List of Sample Output [show ospf context-identifier on page 2187](#)
[show ospf context-identifier detail on page 2187](#)

Output Fields [Table 180 on page 2187](#) lists the output fields for the **show ospf context-identifier** command. Output fields are listed in the approximate order in which they appear.

Table 180: show ospf context-identifier Output Fields

Field Name	Field Description	Level of Output
Context	IPv4 address that defines a protection pair. The context is manually configured on both primary and protector provider edge (PE) devices.	All levels
Status	State of the path: active or inactive .	All levels
Metric	Advertised OSPF metric.	All levels
Area	OSPF area number.	All levels
Other Advertisements	Other advertisements received by the OSPF node: <ul style="list-style-type: none"> • Advertising router— Address of the device that sent the advertisement. • Type—Type of OSPF path: inter-area and stub. • Metric—Advertised OSPF metric. • None—No additional advertisements were received by the OSPF node. 	detail

Sample Output

show ospf context-identifier

```
user@host> show ospf context-identifier
```

```
Context-id: 2.2.4.3
```

```
Status: active, Metric: 65534, PE role: protector, Area: 0.0.0.0
```

show ospf context-identifier detail

```
user@host> show ospf context-identifier detail
```

```
Context-id: 88.24.13.1
```

```
Status: inactive, Metric: 0, PE role: protector, Area: 0.0.0.13
```

```
Other Advertisements:
```

```
Advertising router: 8.8.8.103
```

```
Type: stub link
```

```
Metric: 65534
```

show ospf database

List of Syntax [Syntax on page 2188](#)
 [Syntax \(EX Series Switches and QFX Series\) on page 2188](#)

Syntax show ospf database
 <brief | detail | extensive | summary>
 <advertising-router (*address* | self)>
 <area *area-id*>
 <asbrsummary>
 <external>
 <instance *instance-name*>
 <link-local>
 <logical-system (all | *logical-system-name*)>
 <lsa-id *lsa-id*>
 <netsummary>
 <network>
 <nssa>
 <opaque-area>
 <router>

Syntax (EX Series Switches and QFX Series) show ospf database
 <brief | detail | extensive | summary>
 <advertising-router (*address* | self)>
 <area *area-id*>
 <asbrsummary>
 <external>
 <instance *instance-name*>
 <link-local>
 <lsa-id *lsa-id*>
 <netsummary>
 <network>
 <nssa>
 <opaque-area>
 <router>

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 advertising-router self (*address* | self) option introduced in Junos OS Release 9.5.
 advertising-router self (*address* | self) option introduced in Junos OS Release 9.5 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display the entries in the OSPF version 2 (OSPFv2) link-state database, which contains data about link-state advertisement (LSA) packets.

Options **none**—Display standard information about entries in the OSPFv2 link-state database for all routing instances.

brief | detail | extensive | summary—(Optional) Display the specified level of output.

advertising-router (*address* | *self*)—(Optional) Display the LSAs advertised either by a particular routing device or by this routing device.

area *area-id*—(Optional) Display the LSAs in a particular area.

asbrsummary—(Optional) Display summary AS boundary router LSA entries.

external—(Optional) Display external LSAs.

instance *instance-name*—(Optional) Display all OSPF database information under the named routing instance.

link-local—(Optional) Display information about link-local LSAs.

logical-system (*all* | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

lsa-id *lsa-id*—(Optional) Display the LSA with the specified LSA identifier.

netsummary—(Optional) Display summary network LSAs.

network—(Optional) Display information about network LSAs.

nssa—(Optional) Display information about not-so-stubby area (NSSA) LSAs.

opaque-area—(Optional) Display opaque area-scope LSAs.

router—(Optional) Display information about router LSAs.

Required Privilege Level

view

Related Documentation

- [clear \(ospf | ospf3\) database on page 2162](#)

List of Sample Output

[show ospf database on page 2191](#)
[show ospf database on page 2192](#)
[show ospf database brief on page 2192](#)
[show ospf database detail on page 2192](#)
[show ospf database extensive on page 2193](#)
[show ospf database summary on page 2196](#)
[show ospf database opaque-area detail on page 2196](#)

Output Fields

[Table 181 on page 2189](#) describes the output fields for the **show ospf database** command. Output fields are listed in the approximate order in which they appear.

Table 181: show ospf database Output Fields

Field Name	Field Description	Level of Output
area	Area number. Area 0.0.0.0 is the backbone area.	All levels

Table 181: show ospf database Output Fields (continued)

Field Name	Field Description	Level of Output
Type	Type of link advertisement: ASBR Sum, Extern , Network , NSSA , OpaqArea , Router , or Summary .	All levels
ID	LSA identifier included in the advertisement. An asterisk preceding the identifier marks database entries that originated from the local routing device.	All levels
Adv Rtr	Address of the routing device that sent the advertisement.	All levels
Seq	Link sequence number of the advertisement.	All levels
Age	Time elapsed since the LSA was originated, in seconds.	All levels
Opt	Optional OSPF capabilities associated with the LSA.	All levels
Cksum	Checksum value of the LSA.	All levels
Len	Length of the advertisement, in bytes.	All levels
Router	Router link-state advertisement information: <ul style="list-style-type: none"> bits—Flags describing the routing device that generated the LSP. link count—Number of links in the advertisement. id—ID of a routing device or subnet on the link. data—For stub networks, the subnet mask. Otherwise, the IP address of the routing device that generated the LSP. type—Type of link. It can be PointToPoint, Transit, Stub, or Virtual. TOS count—Number of type-of-service (ToS) entries in the advertisement. TOS 0 metric—Metric for ToS 0. TOS—Type-of-service (ToS) value. metric—Metric for the ToS. 	detail extensive
Network	Network link-state advertisement information: <ul style="list-style-type: none"> mask—Network mask. attached router—ID of the attached neighbor. 	detail extensive
Summary	Summary link-state advertisement information: <ul style="list-style-type: none"> mask—Network mask. TOS—Type-of-service (ToS) value. metric—Metric for the ToS. 	detail extensive
Gen timer	How long until the LSA is regenerated.	extensive
Aging timer	How long until the LSA expires.	extensive
Installed hh:mm:ss ago	How long ago the route was installed.	extensive

Table 181: show ospf database Output Fields (continued)

Field Name	Field Description	Level of Output
expires in <i>hh:mm:ss</i>	How long until the route expires.	extensive
sent <i>hh:mm:ss</i> ago	How long ago the LSA was sent.	extensive
Last changed <i>hh:mm:ss</i> ago	How long ago the route was changed.	extensive
Change count	Number of times the route has changed.	extensive
Ours	Indicates that this is a local advertisement.	extensive
Router LSAs	Number of router link-state advertisements in the link-state database.	summary
Network LSAs	Number of network link-state advertisements in the link-state database.	summary
Summary LSAs	Number of summary link-state advertisements in the link-state database.	summary
NSSA LSAs	Number of not-so-stubby area link-state advertisements in the link-state database.	summary

Sample Output

show ospf database

```
user@host> show ospf database
```

```
OSPF link state database, Area 0.0.0.1
Type      ID                Adv Rtr          Seq      Age  Opt  Cksum  Len
Router    10.255.70.103     10.255.70.103   0x80000002  215  0x20 0x4112  48
Router    *10.255.71.242    10.255.71.242   0x80000002  214  0x20 0x11b1  48
Summary   *23.1.1.0         10.255.71.242   0x80000002  172  0x20 0x6d72  28
Summary   *24.1.1.0         10.255.71.242   0x80000002  177  0x20 0x607e  28
NSSA      *33.1.1.1         10.255.71.242   0x80000002  217  0x28 0x73bd  36
```

```
OSPF link state database, Area 0.0.0.2
Type      ID                Adv Rtr          Seq      Age  Opt  Cksum  Len
Router    10.255.71.52     10.255.71.52    0x80000004  174  0x20 0xd021  36
Router    *10.255.71.242    10.255.71.242   0x80000003  173  0x20 0xe191  36
Network   *23.1.1.1         10.255.71.242   0x80000002  173  0x20 0x9c76  32
Summary   *12.1.1.0         10.255.71.242   0x80000001  217  0x20 0xfeec  28
Summary   *24.1.1.0         10.255.71.242   0x80000002  177  0x20 0x607e  28
NSSA      *33.1.1.1         10.255.71.242   0x80000001  222  0x28 0xe047  36
```

```
OSPF link state database, Area 0.0.0.3
Type      ID                Adv Rtr          Seq      Age  Opt  Cksum  Len
Router    10.255.71.238     10.255.71.238   0x80000003  179  0x20 0x3942  36
Router    *10.255.71.242    10.255.71.242   0x80000003  177  0x20 0xf37d  36
Network   *24.1.1.1         10.255.71.242   0x80000002  177  0x20 0xc591  32
Summary   *12.1.1.0         10.255.71.242   0x80000001  217  0x20 0xfeec  28
Summary   *23.1.1.0         10.255.71.242   0x80000002  172  0x20 0x6d72  28
NSSA      *33.1.1.1         10.255.71.242   0x80000001  222  0x28 0xeb3b  36
```

show ospf database

The output for **show ospf database nssa** with **nssa-only** configuration statement enabled at **[edit policy-options policy-statement *policy-name* term *term name* then external]**, which clears P-bit on type 7 LSA.

```
user@host> show ospf database
```

```
OSPF link state database, Area 0.0.0.1
Type      ID                Adv Rtr          Seq            Age  Opt  Cksum  Len
Router    10.255.70.103       10.255.70.103   0x80000002     215  0x20 0x4112  48
Router    *10.255.71.242      10.255.71.242   0x80000002     214  0x20 0x11b1  48
Summary   *23.1.1.0           10.255.71.242   0x80000002     172  0x20 0x6d72  28
Summary   *24.1.1.0           10.255.71.242   0x80000002     177  0x20 0x607e  28
NSSA      *33.1.1.1           10.255.71.242   0x80000002     217  0x20 0x73bd  36

OSPF link state database, Area 0.0.0.2
Type      ID                Adv Rtr          Seq            Age  Opt  Cksum  Len
Router    10.255.71.52        10.255.71.52    0x80000004     174  0x20 0xd021  36
Router    *10.255.71.242      10.255.71.242   0x80000003     173  0x20 0xe191  36
Network   *23.1.1.1           10.255.71.242   0x80000002     173  0x20 0x9c76  32
Summary   *12.1.1.0           10.255.71.242   0x80000001     217  0x20 0xfeec  28
Summary   *24.1.1.0           10.255.71.242   0x80000002     177  0x20 0x607e  28
NSSA      *33.1.1.1           10.255.71.242   0x80000001     222  0x28 0xe047  36

OSPF link state database, Area 0.0.0.3
Type      ID                Adv Rtr          Seq            Age  Opt  Cksum  Len
Router    10.255.71.238       10.255.71.238   0x80000003     179  0x20 0x3942  36
Router    *10.255.71.242      10.255.71.242   0x80000003     177  0x20 0xf37d  36
Network   *24.1.1.1           10.255.71.242   0x80000002     177  0x20 0xc591  32
Summary   *12.1.1.0           10.255.71.242   0x80000001     217  0x20 0xfeec  28
Summary   *23.1.1.0           10.255.71.242   0x80000002     172  0x20 0x6d72  28
NSSA      *33.1.1.1           10.255.71.242   0x80000001     222  0x20 0xeb3b  36
```

show ospf database brief

The output for the **show ospf database brief** command is identical to that for the **show ospf database** command. For sample output, see [show ospf database on page 2191](#).

show ospf database detail

```
user@host> show ospf database detail
```

```
OSPF link state database, Area 0.0.0.1
Type      ID                Adv Rtr          Seq            Age  Opt  Cksum  Len
Router    10.255.70.103       10.255.70.103   0x80000002     261  0x20 0x4112  48
  bits 0x0, link count 2
  id 10.255.71.242, data 12.1.1.1, Type PointToPoint (1)
  TOS count 0, TOS 0 metric 1
  id 12.1.1.0, data 255.255.255.0, Type Stub (3)
  TOS count 0, TOS 0 metric 1
Router    *10.255.71.242      10.255.71.242   0x80000002     260  0x20 0x11b1  48
  bits 0x3, link count 2
  id 10.255.70.103, data 12.1.1.2, Type PointToPoint (1)
  TOS count 0, TOS 0 metric 1
  id 12.1.1.0, data 255.255.255.0, Type Stub (3)
  TOS count 0, TOS 0 metric 1
Summary   *23.1.1.0           10.255.71.242   0x80000002     218  0x20 0x6d72  28
```

```

mask 255.255.255.0
TOS 0x0, metric 1
Summary *24.1.1.0          10.255.71.242    0x80000002    223    0x20 0x607e    28
mask 255.255.255.0
TOS 0x0, metric 1
NSSA *33.1.1.1            10.255.71.242    0x80000002    263    0x28 0x73bd    36
mask 255.255.255.255
Type 2, TOS 0x0, metric 0, fwd addr 12.1.1.2, tag 0.0.0.0

    OSPF link state database, Area 0.0.0.2
Type      ID              Adv Rtr              Seq      Age    Opt  Cksum  Len
Router    10.255.71.52     10.255.71.52        0x80000004  220    0x20 0xd021  36
bits 0x0, link count 1
id 23.1.1.1, data 23.1.1.2, Type Transit (2)
TOS count 0, TOS 0 metric 1
Router *10.255.71.242     10.255.71.242    0x80000003    219    0x20 0xe191  36
bits 0x3, link count 1
id 23.1.1.1, data 23.1.1.1, Type Transit (2)
TOS count 0, TOS 0 metric 1
Network *23.1.1.1         10.255.71.242    0x80000002    219    0x20 0x9c76  32
mask 255.255.255.0
attached router 10.255.71.242
attached router 10.255.71.52
Summary *12.1.1.0          10.255.71.242    0x80000001    263    0x20 0xfeec    28
mask 255.255.255.0
TOS 0x0, metric 1
Summary *24.1.1.0          10.255.71.242    0x80000002    223    0x20 0x607e    28
mask 255.255.255.0
TOS 0x0, metric 1
NSSA *33.1.1.1            10.255.71.242    0x80000001    268    0x28 0xe047    36
mask 255.255.255.255
Type 2, TOS 0x0, metric 0, fwd addr 23.1.1.1, tag 0.0.0.0

    OSPF link state database, Area 0.0.0.3
Type      ID              Adv Rtr              Seq      Age    Opt  Cksum  Len
Router    10.255.71.238     10.255.71.238    0x80000003    225    0x20 0x3942  36
bits 0x0, link count 1
id 24.1.1.1, data 24.1.1.2, Type Transit (2)
TOS count 0, TOS 0 metric 1
Router *10.255.71.242     10.255.71.242    0x80000003    223    0x20 0xf37d  36
bits 0x3, link count 1
id 24.1.1.1, data 24.1.1.1, Type Transit (2)
TOS count 0, TOS 0 metric 1
Network *24.1.1.1         10.255.71.242    0x80000002    223    0x20 0xc591  32
mask 255.255.255.0
attached router 10.255.71.242
attached router 10.255.71.238
Summary *12.1.1.0          10.255.71.242    0x80000001    263    0x20 0xfeec    28
mask 255.255.255.0
TOS 0x0, metric 1
Summary *23.1.1.0          10.255.71.242    0x80000002    218    0x20 0x6d72    28
mask 255.255.255.0
TOS 0x0, metric 1
NSSA *33.1.1.1            10.255.71.242    0x80000001    268    0x28 0xeb3b    36
mask 255.255.255.255
Type 2, TOS 0x0, metric 0, fwd addr 24.1.1.1, tag 0.0.0.0

```

show ospf database extensive

```
user@host> show ospf database extensive
```

```

    OSPF link state database, Area 0.0.0.1
  Type      ID          Adv Rtr      Seq      Age  Opt  Cksum  Len
Router  10.255.70.103    10.255.70.103  0x80000002  286  0x20 0x4112  48
  bits 0x0, link count 2
  id 10.255.71.242, data 12.1.1.1, Type PointToPoint (1)
  TOS count 0, TOS 0 metric 1
  id 12.1.1.0, data 255.255.255.0, Type Stub (3)
  TOS count 0, TOS 0 metric 1
  Aging timer 00:55:14
  Installed 00:04:43 ago, expires in 00:55:14
  Last changed 00:04:43 ago, Change count: 2
Router  *10.255.71.242    10.255.71.242  0x80000002  285  0x20 0x11b1  48
  bits 0x3, link count 2
  id 10.255.70.103, data 12.1.1.2, Type PointToPoint (1)
  TOS count 0, TOS 0 metric 1
  id 12.1.1.0, data 255.255.255.0, Type Stub (3)
  TOS count 0, TOS 0 metric 1
  Gen timer 00:45:15
  Aging timer 00:55:15
  Installed 00:04:45 ago, expires in 00:55:15, sent 00:04:43 ago
  Last changed 00:04:45 ago, Change count: 2, Ours
Summary *23.1.1.0        10.255.71.242  0x80000002  243  0x20 0x6d72  28
  mask 255.255.255.0
  TOS 0x0, metric 1
  Gen timer 00:45:57
  Aging timer 00:55:57
  Installed 00:04:03 ago, expires in 00:55:57, sent 00:04:01 ago
  Last changed 00:04:48 ago, Change count: 1, Ours
Summary *24.1.1.0        10.255.71.242  0x80000002  248  0x20 0x607e  28
  mask 255.255.255.0
  TOS 0x0, metric 1
  Gen timer 00:45:52
  Aging timer 00:55:52
  Installed 00:04:08 ago, expires in 00:55:52, sent 00:04:06 ago
  Last changed 00:04:48 ago, Change count: 1, Ours
NSSA   *33.1.1.1        10.255.71.242  0x80000002  288  0x28 0x73bd  36
  mask 255.255.255.255
  Type 2, TOS 0x0, metric 0, fwd addr 12.1.1.2, tag 0.0.0.0
  Gen timer 00:45:12
  Aging timer 00:55:12
  Installed 00:04:48 ago, expires in 00:55:12, sent 00:04:48 ago
  Last changed 00:04:48 ago, Change count: 2, Ours

    OSPF link state database, Area 0.0.0.2
  Type      ID          Adv Rtr      Seq      Age  Opt  Cksum  Len
Router  10.255.71.52     10.255.71.52   0x80000004  245  0x20 0xd021  36
  bits 0x0, link count 1
  id 23.1.1.1, data 23.1.1.2, Type Transit (2)
  TOS count 0, TOS 0 metric 1
  Aging timer 00:55:55
  Installed 00:04:02 ago, expires in 00:55:55
  Last changed 00:04:02 ago, Change count: 2
Router  *10.255.71.242    10.255.71.242  0x80000003  244  0x20 0xe191  36
  bits 0x3, link count 1
  id 23.1.1.1, data 23.1.1.1, Type Transit (2)
  TOS count 0, TOS 0 metric 1
  Gen timer 00:45:56
  Aging timer 00:55:56
  Installed 00:04:04 ago, expires in 00:55:56, sent 00:04:02 ago
  Last changed 00:04:04 ago, Change count: 2, Ours

```

```

Network *23.1.1.1      10.255.71.242    0x80000002    244    0x20 0x9c76    32
  mask 255.255.255.0
  attached router 10.255.71.242
  attached router 10.255.71.52
  Gen timer 00:45:56
  Aging timer 00:55:56
  Installed 00:04:04 ago, expires in 00:55:56, sent 00:04:02 ago
  Last changed 00:04:04 ago, Change count: 1, Ours
Summary *12.1.1.0      10.255.71.242    0x80000001    288    0x20 0xfeec    28
  mask 255.255.255.0
  TOS 0x0, metric 1
  Gen timer 00:45:12
  Aging timer 00:55:12
  Installed 00:04:48 ago, expires in 00:55:12, sent 00:04:04 ago
  Last changed 00:04:48 ago, Change count: 1, Ours
Summary *24.1.1.0      10.255.71.242    0x80000002    248    0x20 0x607e    28
  mask 255.255.255.0
  TOS 0x0, metric 1
  Gen timer 00:45:52
  Aging timer 00:55:52
  Installed 00:04:08 ago, expires in 00:55:52, sent 00:04:04 ago
  Last changed 00:04:48 ago, Change count: 1, Ours
NSSA  *33.1.1.1      10.255.71.242    0x80000001    293    0x28 0xe047    36
  mask 255.255.255.255
  Type 2, TOS 0x0, metric 0, fwd addr 23.1.1.1, tag 0.0.0.0
  Gen timer 00:45:07
  Aging timer 00:55:07
  Installed 00:04:53 ago, expires in 00:55:07, sent 00:04:04 ago
  Last changed 00:04:53 ago, Change count: 1, Ours

  OSPF link state database, Area 0.0.0.3
    Type      ID      Adv Rtr      Seq      Age  Opt  Cksum  Len
Router  10.255.71.238  10.255.71.238  0x80000003  250  0x20 0x3942  36
  bits 0x0, link count 1
  id 24.1.1.1, data 24.1.1.2, Type Transit (2)
  TOS count 0, TOS 0 metric 1
  Aging timer 00:55:50
  Installed 00:04:07 ago, expires in 00:55:50
  Last changed 00:04:07 ago, Change count: 2
Router  *10.255.71.242  10.255.71.242  0x80000003  248  0x20 0xf37d  36
  bits 0x3, link count 1
  id 24.1.1.1, data 24.1.1.1, Type Transit (2)
  TOS count 0, TOS 0 metric 1
  Gen timer 00:45:52
  Aging timer 00:55:52
  Installed 00:04:08 ago, expires in 00:55:52, sent 00:04:06 ago
  Last changed 00:04:08 ago, Change count: 2, Ours
Network *24.1.1.1      10.255.71.242    0x80000002    248    0x20 0xc591    32
  mask 255.255.255.0
  attached router 10.255.71.242
  attached router 10.255.71.238
  Gen timer 00:45:52
  Aging timer 00:55:52
  Installed 00:04:08 ago, expires in 00:55:52, sent 00:04:06 ago
  Last changed 00:04:08 ago, Change count: 1, Ours
Summary *12.1.1.0      10.255.71.242    0x80000001    288    0x20 0xfeec    28
  mask 255.255.255.0
  TOS 0x0, metric 1
  Gen timer 00:45:12
  Aging timer 00:55:12

```

```

    Installed 00:04:48 ago, expires in 00:55:12, sent 00:04:13 ago
    Last changed 00:04:48 ago, Change count: 1, Ours
Summary *23.1.1.0      10.255.71.242    0x80000002    243    0x20 0x6d72    28
mask 255.255.255.0
TOS 0x0, metric 1
Gen timer 00:45:57
Aging timer 00:55:57
    Installed 00:04:03 ago, expires in 00:55:57, sent 00:04:01 ago
    Last changed 00:04:48 ago, Change count: 1, Ours
NSSA *33.1.1.1      10.255.71.242    0x80000001    293    0x28 0xeb3b    36
mask 255.255.255.255
Type 2, TOS 0x0, metric 0, fwd addr 24.1.1.1, tag 0.0.0.0
Gen timer 00:45:07
Aging timer 00:55:07
    Installed 00:04:53 ago, expires in 00:55:07, sent 00:04:13 ago
    Last changed 00:04:53 ago, Change count: 1, Ours

```

show ospf database summary

```
user@host> show ospf database summary
```

```

Area 0.0.0.1:
  2 Router LSAs
  2 Summary LSAs
  1 NSSA LSAs
Area 0.0.0.2:
  2 Router LSAs
  1 Network LSAs
  2 Summary LSAs
  1 NSSA LSAs
Area 0.0.0.3:
  2 Router LSAs
  1 Network LSAs
  2 Summary LSAs
  1 NSSA LSAs
Externals:
Interface fe-2/2/1.0:
Interface ge-0/3/2.0:
Interface so-0/1/2.0:
Interface so-0/1/2.0:

```

show ospf database opaque-area detail

```
user@host> show ospf database opaque-area detail
```

```

    OSPF database, Area 0.0.0.0
    Type      ID          Adv Rtr      Seq      Age  Opt  Cksum  Len
    OpaqArea*4.0.0.0      1.1.1.10    0x800000ef  1510    0x22 0x2810 156
Area-opaque LSA
  SR-Algorithm (8), length 1:
    Algo (1), length 1:
      0
  SID/Label Range (9), length 12:
    Range Size (1), length 3:
      256
    SID/Label (1), length 3:
      Label (1), length 3:
        802048
  SID/Label Range (9), length 12:

```



```

Range Size (1), length 3:
SID/Label (1), length 3:
  Label (1), length 3:
    802304
SID/Label Range (9), length 12:
  Range Size (1), length 3:
    256
  SID/Label (1), length 3:
    Label (1), length 3:
      802560
SID/Label Range (9), length 12:
  Range Size (1), length 3:
    256
  SID/Label (1), length 3:
    Label (1), length 3:
      802816
SID/Label Range (9), length 12:
  Range Size (1), length 3:
    256
  SID/Label (1), length 3:
    Label (1), length 3:
      803072
SID/Label Range (9), length 12:
  Range Size (1), length 3:
    256
  SID/Label (1), length 3:
    Label (1), length 3:
      803328
SID/Label Range (9), length 12:
  Range Size (1), length 3:
    256
  SID/Label (1), length 3:
    Label (1), length 3:
      803584
SID/Label Range (9), length 12:
  Range Size (1), length 3:
    256
  SID/Label (1), length 3:
    Label (1), length 3:
      803840

```

The Extended Prefix LSA (eg):

Type	ID	Adv Rtr	Seq	Age	Opt	Cksum	Len
OpaqueArea*	7.0.0.1	10.10.10.10	0x80000002	561	0x22	0x60eb	44

Area-opaque LSA

```

Extended Prefix (1), length 20:
  Route Type (1), length 1:
    1
  Prefix Length (2), length 1:
    32
  AF (3), length 1:
    0
  Flags (4), length 1:
    0x40
  Prefix (5), length 32:
    10.10.10.10
  Prefix Sid (2), length 8:
  Flags (1), length 1:

```

```
0x00
MT ID (2), length 1:
0
Algorithm (3), length 1:
0
SID (4), length 4:
0
```

Extended Links LSA (eg):

Type	ID	Adv Rtr	Seq	Age	Opt	Cksum	Len
OpaqArea	8.0.0.1	1.1.1.1	0x80000001	688	0x22	0xcd8a	48

Area-opaque LSA

Extended Link (1), length 24:

Link Type (1), length 1:

2

Link Id (2), length 4:

11.1.1.1

Link Data (3), length 4:

11.1.1.2

Adjacency Sid (2), length 7:

Flags (1), length 1:

0x60

MT ID (2), length 1:

0

Weight (3), length 1:

0

Label (4), length 3:

300416

show ospf3 database

List of Syntax [Syntax on page 2199](#)
 [Syntax \(EX Series Switches and QFX Series\) on page 2199](#)

Syntax

```
show ospf3 database
<brief | detail | extensive | summary>
<advertising-router (address | self)>
<area area-id>
<external>
<instance instance-name>
<inter-area-prefix>
<inter-area-router>
<intra-area-prefix>
<link>
<link-local>
<logical-system (all | logical-system-name)>
<lsa-id lsa-id>
<network>
<nssa>
<realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>
<router>
```

Syntax (EX Series Switches and QFX Series)

```
show ospf3 database
<brief | detail | extensive | summary>
<advertising-router (address | self)>
<area area-id>
<external>
<instance instance-name>
<inter-area-prefix>
<inter-area-router>
<intra-area-prefix>
<link>
<link-local>
<lsa-id lsa-id>
<network>
<nssa>
<router>
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 realm option introduced in Junos OS Release 9.2.
 advertising-router (address | self) option introduced in Junos Release 9.5.
 advertising-router (address | self) option introduced in Junos OS Release 9.5 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.

Description Display the entries in the OSPF version 3 (OSPFv3) link-state database, which contains data about link-state advertisement (LSA) packets.

Options **none**—Display standard information about all entries in the OSPFv3 link-state database.

brief | detail | extensive | summary—(Optional) Display the specified level of output.

advertising-router (address | self)—(Optional) Display the LSAs advertised either by a particular routing device or by this routing device.

area area-id—(Optional) Display the LSAs in a particular area.

external—(Optional) Display external LSAs.

instance instance-name—(Optional) Display all OSPF database information under the named routing instance.

inter-area-prefix—(Optional) Display information about interarea-prefix LSAs.

inter-area-router—(Optional) Display information about interarea-router LSAs.

intra-area-prefix—(Optional) Display information about intra-area-prefix LSAs.

link—(Optional) Display information about link LSAs.

link-local—(Optional) Display information about link-local LSAs.

logical-system (all | logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.

lsa-id lsa-id—(Optional) Display the LSA with the specified LSA identifier.

network—(Optional) Display information about network LSAs.

nssa—(Optional) Display information about not-so-stubby area (NSSA) LSAs.

realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)—(Optional) Display information about the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family other than IPv6 unicast, which is the default.

router—(Optional) Display information about router LSAs.

Required Privilege Level view

Related Documentation • [clear \(ospf | ospf3\) database on page 2162](#)

List of Sample Output [show ospf3 database brief on page 2205](#)
 [show ospf3 database extensive on page 2206](#)
 [show ospf3 database summary on page 2208](#)

Output Fields [Table 182 on page 2201](#) lists the output fields for the **show ospf3 database** command. Output fields are listed in the approximate order in which they appear.

Table 182: show ospf3 database Output Fields

Field Name	Field Description	Level of Output
OSPF link state database, area <i>area-number</i>	Entries in the link-state database for this area.	brief detail extensive
OSPF AS SCOPE link state database	Entries in the AS scope link-state database.	brief detail extensive
OSPF Link-Local link state database, interface <i>interface-name</i>	Entries in the link-local link-state database for this interface.	brief detail extensive
area	Area number. Area 0.0.0.0 is the backbone area.	All levels
Type	Type of link advertisement: Extern , InterArPfx , InterArRtr , IntraArPrx , Link , Network , NSSA , or Router .	brief detail extensive
ID	Link identifier included in the advertisement. An asterisk (*) preceding the identifier marks database entries that originated from the local routing device.	brief detail extensive
Adv Rtr	Address of the routing device that sent the advertisement.	brief detail extensive
Seq	Link sequence number of the advertisement.	brief detail extensive
Age	Time elapsed since the LSA was originated, in seconds.	brief detail extensive
Cksum	Checksum value of the LSA.	brief detail extensive
Len	Length of the advertisement, in bytes.	brief detail extensive
Router (Router Link-State Advertisements)		
bits	Flags describing the routing device that generated the LSP.	detail extensive
Options	Option bits carried in the router LSA.	detail extensive
For Each Router Link		
Type	Type of interface. The value of all other output fields describing a routing device interface depends on the interface's type: <ul style="list-style-type: none"> • PointToPoint (1)—Point-to-point connection to another routing device. • Transit (2)—Connection to a transit network. • Virtual (4)—Virtual link. 	detail extensive
Loc-if-id	Local interface ID assigned to the interface that uniquely identifies the interface with the routing device.	detail extensive
Nbr-if-id	Interface ID of the neighbor's interface for this routing device link.	detail extensive

Table 182: show ospf3 database Output Fields (continued)

Field Name	Field Description	Level of Output
Nbr-rtr-id	Router ID of the neighbor routing device (for type 2 interfaces, the attached link's designated router).	detail extensive
Metric	Cost of the router link.	detail extensive
Gen timer	How long until the LSA is regenerated, in the format <i>hours:minutes:seconds</i> .	extensive
Aging timer	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	extensive
Installed <i>nn:nn:nn</i> ago	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	extensive
expires in <i>nn:nn:nn</i>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	extensive
sent <i>nn:nn:nn</i> ago	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	extensive
Ours	Indicates that this is a local advertisement.	extensive
Network (Network Link-State Advertisements)		
Options	Option bits carried in the network LSA.	detail extensive
Attached Router	Router IDs of each of the routing devices attached to the link. Only routing devices that are fully adjacent to the designated router are listed. The designated router includes itself in this list.	detail extensive
InterArPfx (Interarea-Prefix Link-State Advertisements)		
Prefix	IPv6 address prefix.	detail extensive
Prefix-options	Option bit associated with the prefix.	detail extensive
Metric	Cost of this route. Expressed in the same units as the interface costs in the router LSAs. When the interarea-prefix LSA is describing a route to a range of addresses, the cost is set to the maximum cost to any reachable component of the address range.	detail extensive
Gen timer	How long until the LSA is regenerated, in the format <i>hours:minutes:seconds</i> .	extensive
Aging timer	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	extensive
Installed <i>nn:nn:nn</i> ago	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	extensive
expires in <i>nn:nn:nn</i>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	extensive
sent <i>nn:nn:nn</i> ago	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	extensive

Table 182: show ospf3 database Output Fields (continued)

Field Name	Field Description	Level of Output
Ours	Indicates that this is a local advertisement.	extensive
InterArRtr (Interarea-Router Link-State Advertisements)		
Dest-router-id	Router ID of the routing device described by the LSA.	detail extensive
options	Optional capabilities supported by the routing device.	detail extensive
Metric	Cost of this route. Expressed in the same units as the interface costs in the router LSAs. When the interarea-prefix LSA is describing a route to a range of addresses, the cost is set to the maximum cost to any reachable component of the address range.	detail extensive
Prefix	IPv6 address prefix.	extensive
Prefix-options	Option bit associated with the prefix.	extensive
Extern (External Link-State Advertisements)		
Prefix	IPv6 address prefix.	detail extensive
Prefix-options	Option bit associated with the prefix.	detail extensive
Metric	Cost of the route, which depends on the value of Type .	detail extensive
Type <i>n</i>	Type of external metric: Type 1 or Type 2 .	detail extensive
Aging timer	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	extensive
Installed <i>nn:nn:nn</i> ago	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	extensive
expires in <i>nn:nn:nn</i>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	extensive
sent <i>nn:nn:nn</i> ago	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	extensive
Link (Link-State Advertisements)		
IPv6-Address	IPv6 link-local address on the link for which this link LSA originated.	detail extensive
Options	Option bits carried in the link LSA.	detail extensive
priority	Router priority of the interface attaching the originating routing device to the link.	detail extensive
Prefix-count	Number of IPv6 address prefixes contained in the LSA. The rest of the link LSA contains a list of IPv6 prefixes to be associated with the link.	detail extensive
Prefix	IPv6 address prefix.	detail extensive

Table 182: show ospf3 database Output Fields (continued)

Field Name	Field Description	Level of Output
Prefix-options	Option bit associated with the prefix.	detail extensive
Gen timer	How long until the LSA is regenerated, in the format <i>hours:minutes:seconds</i> .	extensive
Aging timer	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	extensive
Installed <i>nn:nn:nn</i> ago	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	extensive
expires in <i>nn:nn:nn</i>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	extensive
sent <i>nn:nn:nn</i> ago	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	extensive
Ours	Indicates that this is a local advertisement.	extensive
IntraArPfx (Intra-Area-Prefix Link-State Advertisements)		
Ref-lsa-type	LSA type of the referenced LSA. <ul style="list-style-type: none"> • Router—Address prefixes are associated with a router LSA. • Network—Address prefixes are associated with a network LSA. 	detail extensive
Ref-lsa-id	Link-state ID of the referenced LSA.	detail extensive
Ref-router-id	Advertising router ID of the referenced LSA.	detail extensive
Prefix-count	Number of IPv6 address prefixes contained in the LSA. The rest of the link LSA contains a list of IPv6 prefixes to be associated with the link.	detail extensive
Prefix	IPv6 address prefix.	detail extensive
Prefix-options	Option bit associated with the prefix.	detail extensive
Metric	Cost of this prefix. Expressed in the same units as the interface costs in the router LSAs.	detail extensive
Gen timer	How long until the LSA is regenerated, in the format <i>hours:minutes:seconds</i> .	extensive
Aging timer	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	extensive
Installed <i>hh:mm:ss</i> ago	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	extensive
expires in <i>hh:mm:ss</i>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	extensive
sent <i>hh:mm:ss</i> ago	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	extensive

Table 182: show ospf3 database Output Fields (continued)

Field Name	Field Description	Level of Output
<i>n</i> Router LSAs	Number of router LSAs in the link-state database.	summary
<i>n</i> Network LSAs	Number of network LSAs in the link-state database.	summary
<i>n</i> InterArPfx LSAs	Number of interarea-prefix LSAs in the link-state database.	summary
<i>n</i> InterArRtr LSAs	Number of interarea-router LSAs in the link-state database.	summary
<i>n</i> IntraArPfx LSAs	Number of intra-area-prefix LSAs in the link-state database.	summary
Externals	Display of the external LSA database.	summary
<i>n</i> Extern LSAs	Number of external LSAs in the link-state database.	summary
Interface <i>interface-name</i>	Name of the interface for which link-local LSA information is displayed.	summary
<i>n</i> Link LSAs	Number of link LSAs in the link-state database.	summary

Sample Output

show ospf3 database brief

```
user@host> show ospf3 database brief
```

```

  OSPF3 link state database, area 0.0.0.0
  Type      ID          Adv Rtr      Seq          Age    Cksum  Len
  Router    0.0.0.1          10.255.4.85  0x80000003   885    0xa697  40
  Router    *0.0.0.1          10.255.4.93  0x80000002   953    0xc677  40
  InterArPfx *0.0.0.2          10.255.4.93  0x80000001   910    0xb96f  44
  InterArRtr *0.0.0.1          10.255.4.93  0x80000001   910    0xe159  32
  IntraArPfx *0.0.0.1          10.255.4.93  0x80000002   432    0x788f  72

```

```

  OSPF3 link state database, area 0.0.0.1
  Type      ID          Adv Rtr      Seq          Age    Cksum  Len
  Router    *0.0.0.1          10.255.4.93  0x80000003   916    0xea40  40
  Router    0.0.0.1          10.255.4.97  0x80000006   851    0xc95b  40
  Network    0.0.0.2          10.255.4.97  0x80000002   916    0x4598  32
  InterArPfx *0.0.0.1          10.255.4.93  0x80000002   117    0xa980  44
  InterArPfx *0.0.0.2          10.255.4.93  0x80000002    62    0xd47e  44
  NSSA      0.0.0.1          10.255.4.97  0x80000002   362    0x45ee  44
  IntraArPfx 0.0.0.1          10.255.4.97  0x80000006   851    0x2f77  52

```

```

  OSPF3 AS SCOPE link state database
  Type      ID          Adv Rtr      Seq          Age    Cksum  Len
  Extern    0.0.0.1          10.255.4.85  0x80000002    63    0x9b86  44
  Extern    *0.0.0.1          10.255.4.93  0x80000001   910    0x59c9  44

```

```

  OSPF3 Link-Local link state database, interface ge-1/3/0.0
  Type      ID          Adv Rtr      Seq          Age    Cksum  Len
  Link      *0.0.0.2          10.255.4.93  0x80000003   916    0x4dab  64

```

show ospf3 database extensive

user@host> show ospf3 database extensive

```

    OSPF3 link state database, area 0.0.0.0
  Type      ID          Adv Rtr      Seq          Age  Cksum  Len
Router      0.0.0.1        10.255.4.85  0x80000003   1028 0xa697 40
  bits 0x2, Options 0x13
  Type PointToPoint (1), Metric 10
  Loc-If-Id 2, Nbr-If-Id 3, Nbr-Rtr-Id 10.255.4.93
  Aging timer 00:42:51
  Installed 00:17:05 ago, expires in 00:42:52, sent 02:37:54 ago
Router      *0.0.0.1        10.255.4.93  0x80000002   1096 0xc677 40
  bits 0x3, Options 0x13
  Type PointToPoint (1), Metric 10
  Loc-If-Id 3, Nbr-If-Id 2, Nbr-Rtr-Id 10.255.4.85
  Gen timer 00:00:40
  Aging timer 00:41:44
  Installed 00:18:16 ago, expires in 00:41:44, sent 00:18:14 ago
  Ours
InterArPfx  *0.0.0.2          10.255.4.93  0x80000001   1053 0xb96f 44
  Prefix feee::10:10:2:0/126
  Prefix-options 0x0, Metric 10
  Gen timer 00:17:02
  Aging timer 00:42:26
  Installed 00:17:33 ago, expires in 00:42:27, sent 00:17:31 ago
  Ours
InterArPfx  *0.0.0.3          10.255.4.93  0x80000001   1053 0x71d3 44
  Prefix feee::10:255:4:97/128
  Prefix-options 0x0, Metric 10
  Gen timer 00:21:07
  Aging timer 00:42:26
  Installed 00:17:33 ago, expires in 00:42:27, sent 00:17:31 ago
  Ours
InterArRtr  *0.0.0.1          10.255.4.93  0x80000001   1053 0xe159 32
  Dest-router-id 10.255.4.97, Options 0x19, Metric 10
  Gen timer 00:29:18
  Aging timer 00:42:26
  Installed 00:17:33 ago, expires in 00:42:27, sent 00:17:31 ago
  Ours
IntraArPfx  0.0.0.1          10.255.4.85  0x80000002   1028 0x2403 72
  Ref-lsa-type Router, Ref-lsa-id 0.0.0.0, Ref-router-id 10.255.4.85
  Prefix-count 2
  Prefix feee::10:255:4:85/128
  Prefix-options 0x2, Metric 0
  Prefix feee::10:10:1:0/126
  Prefix-options 0x0, Metric 10
  Aging timer 00:42:51
  Installed 00:17:05 ago, expires in 00:42:52, sent 02:37:54 ago
IntraArPfx  *0.0.0.1          10.255.4.93  0x80000002    575 0x788f 72
  Ref-lsa-type Router, Ref-lsa-id 0.0.0.0, Ref-router-id 10.255.4.93
  Prefix-count 2
  Prefix feee::10:255:4:93/128
  Prefix-options 0x2, Metric 0
  Prefix feee::10:10:1:0/126
  Prefix-options 0x0, Metric 10
  Gen timer 00:33:23
  Aging timer 00:50:24
  Installed 00:09:35 ago, expires in 00:50:25, sent 00:09:33 ago
    OSPF3 link state database, area 0.0.0.1

```

```

Type      ID          Adv Rtr      Seq          Age  Cksum  Len
Router    *0.0.0.1        10.255.4.93  0x80000003   1059 0xea40 40
  bits 0x3, Options 0x19
  Type Transit (2), Metric 10
    Loc-If-Id 2, Nbr-If-Id 2, Nbr-Rtr-Id 10.255.4.97
  Gen timer 00:08:51
  Aging timer 00:42:20
  Installed 00:17:39 ago, expires in 00:42:21, sent 00:17:37 ago
Router    0.0.0.1      10.255.4.97  0x80000006   994  0xc95b 40
  bits 0x2, Options 0x19
  Type Transit (2), Metric 10
    Loc-If-Id 2, Nbr-If-Id 2, Nbr-Rtr-Id 10.255.4.97
  Aging timer 00:43:25
  Installed 00:16:31 ago, expires in 00:43:26, sent 02:37:54 ago
Network   0.0.0.2        10.255.4.97  0x80000002   1059 0x4598 32
  Options 0x11
  Attached router 10.255.4.97
  Attached router 10.255.4.93
  Aging timer 00:42:20
  Installed 00:17:36 ago, expires in 00:42:21, sent 02:37:54 ago
InterArPfx *0.0.0.1      10.255.4.93  0x80000002   260  0xa980 44
  Prefix feee::10:10:1:0/126
  Prefix-options 0x0, Metric 10
  Gen timer 00:45:39
  Aging timer 00:55:39
  Installed 00:04:20 ago, expires in 00:55:40, sent 00:04:18 ago
  Ours
InterArPfx *0.0.0.2      10.255.4.93  0x80000002   205  0xd47e 44
  Prefix feee::10:255:4:93/128
  Prefix-options 0x0, Metric 0
  Gen timer 00:46:35
  Aging timer 00:56:35
  Installed 00:03:25 ago, expires in 00:56:35, sent 00:03:23 ago
  Ours
InterArPfx *0.0.0.3      10.255.4.93  0x80000001  1089  0x9bbb 44
  Prefix feee::10:255:4:85/128
  Prefix-options 0x0, Metric 10
  Gen timer 00:04:46
  Aging timer 00:41:51
  Installed 00:18:09 ago, expires in 00:41:51, sent 00:17:43 ago
  Ours
NSSA      0.0.0.1      10.255.4.97  0x80000002   505  0x45ee 44
  Prefix feee::200:200:1:0/124
  Prefix-options 0x8, Metric 10, Type 2,
  Aging timer 00:51:35
  Installed 00:08:22 ago, expires in 00:51:35, sent 02:37:54 ago
IntraArPfx 0.0.0.1      10.255.4.97  0x80000006   994  0x2f77 52
  Ref-lsa-type Router, Ref-lsa-id 0.0.0.0, Ref-router-id 10.255.4.97
  Prefix-count 1
  Prefix feee::10:255:4:97/128
    Prefix-options 0x2, Metric 0
  Aging timer 00:43:25
  Installed 00:16:31 ago, expires in 00:43:26, sent 02:37:54 ago
IntraArPfx 0.0.0.3      10.255.4.97  0x80000002  1059  0x4446 52
  Ref-lsa-type Network, Ref-lsa-id 0.0.0.2, Ref-router-id 10.255.4.97
  Prefix-count 1
  Prefix feee::10:10:2:0/126
    Prefix-options 0x0, Metric 0
  Aging timer 00:42:20
  Installed 00:17:36 ago, expires in 00:42:21, sent 02:37:54 ago

```

```

OSPF3 AS SCOPE link state database
Type      ID          Adv Rtr      Seq          Age  Cksum  Len
Extern    0.0.0.1      10.255.4.85  0x80000002   206  0x9b86 44
Prefix feee::100:100:1:0/124
Prefix-options 0x0, Metric 20, Type 2,
Aging timer 00:56:34
Installed 00:03:23 ago, expires in 00:56:34, sent 02:37:54 ago
Extern    *0.0.0.1      10.255.4.93  0x80000001   1053 0x59c9 44
Prefix feee::200:200:1:0/124
Prefix-options 0x0, Metric 10, Type 2,
Gen timer 00:25:12
Aging timer 00:42:26
Installed 00:17:33 ago, expires in 00:42:27, sent 00:17:31 ago

OSPF3 Link-Local link state database, interface ge-1/3/0.0
Type      ID          Adv Rtr      Seq          Age  Cksum  Len
Link      *0.0.0.2      10.255.4.93  0x80000003   1059 0x4dab 64
fe80::290:69ff:fe39:1cdb
Options 0x11, priority 128
Prefix-count 1
Prefix feee::10:10:2:0/126 Prefix-options 0x0
Gen timer 00:12:56
Aging timer 00:42:20
Installed 00:17:39 ago, expires in 00:42:21, sent 00:17:37 ago
Link      0.0.0.2      10.255.4.97  0x80000003   205  0xa87d 64
fe80::290:69ff:fe38:883e
Options 0x11, priority 128
Prefix-count 1
Prefix feee::10:10:2:0/126 Prefix-options 0x0
Aging timer 00:56:35
Installed 00:03:22 ago, expires in 00:56:35, sent 02:37:54 ago

OSPF3 Link-Local link state database, interface so-2/2/0.0
Type      ID          Adv Rtr      Seq          Age  Cksum  Len
Link      0.0.0.2      10.255.4.85  0x80000002   506  0x42bb 64
fe80::280:42ff:fe10:f169
Options 0x13, priority 128
Prefix-count 1
Prefix feee::10:10:1:0/126 Prefix-options 0x0
Aging timer 00:51:34
Installed 00:08:23 ago, expires in 00:51:34, sent 02:37:54 ago
Link      *0.0.0.3      10.255.4.93  0x80000002   505  0x6b7a 64
fe80::280:42ff:fe10:f177
Options 0x13, priority 128
Prefix-count 1
Prefix feee::10:10:1:0/126 Prefix-options 0x0
Gen timer 00:37:28
Aging timer 00:51:35
Installed 00:08:25 ago, expires in 00:51:35, sent 00:08:23 ago
Ours

```

show ospf3 database summary

```
user@host> show ospf3 database summary
```

```

Area 0.0.0.0:
 2 Router LSAs
 1 InterArPfx LSAs
 1 InterArRtr LSAs
 1 IntraArPfx LSAs

```

```
Area 0.0.0.1:
  2 Router LSAs
  1 Network LSAs
  2 InterArPfx LSAs
  1 NSSA LSAs
  1 IntraArPfx LSAs
Externals:
  2 Extern LSAs
Interface ge-1/3/0.0:
  1 Link LSAs
Interface lo0.0:
Interface so-2/2/0.0:
  1 Link LSAs
```

show (ospf | ospf3) interface

List of Syntax [Syntax on page 2210](#)
 [Syntax \(EX Series Switches and QFX Series\) on page 2210](#)

Syntax `show (ospf | ospf3) interface`
 `<brief | detail | extensive>`
 `<area area-id>`
 `<interface-name>`
 `<instance instance-name>`
 `<logical-system (all | logical-system-name)>`
 `<realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>`

Syntax (EX Series Switches and QFX Series) `show (ospf | ospf3) interface`
 `<brief | detail | extensive>`
 `<area area-id>`
 `<interface-name>`
 `<instance instance-name>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 area option introduced in Junos OS Release 9.2.
 area option introduced in Junos OS Release 9.2 for EX Series switches.
 realm option introduced in Junos OS Release 9.2.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display the status of OSPF interfaces.

Options **none**—Display standard information about the status of all OSPF interfaces for all routing instances

brief | detail | extensive—(Optional) Display the specified level of output.

area *area-id*—(Optional) Display information about the interfaces that belong to the specified area.

interface-name—(Optional) Display information for the specified interface.

instance *instance-name*—(Optional) Display all OSPF interfaces under the named routing instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)—(OSPFv3 only) (Optional) Display information about the interfaces for the specified OSPFv3 realm, or address

family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

Required Privilege Level view

List of Sample Output [show ospf interface brief on page 2213](#)
[show ospf interface detail on page 2213](#)
[show ospf3 interface detail on page 2213](#)
[show ospf interface detail \(When Multiarea Adjacency Is Configured\) on page 2214](#)
[show ospf interface area-id on page 2215](#)
[show ospf interface extensive \(When Flooding Reduction Is Enabled\) on page 2215](#)
[show ospf interface extensive \(When LDP Synchronization Is Configured\) on page 2215](#)

Output Fields [Table 183 on page 2211](#) lists the output fields for the **show (ospf | ospf3) interface** command. Output fields are listed in the approximate order in which they appear.

Table 183: show (ospf | ospf3) interface Output Fields

Field Name	Field Description	Level of Output
Interface	Name of the interface running OSPF version 2 or OSPF version 3.	All levels
State	State of the interface: BDR , Down , DR , DRother , Loop , PtToPt , or Waiting .	All levels
Area	Number of the area that the interface is in.	All levels
DR ID	Address of the area's designated router.	All levels
BDR ID	Backup designated router for a particular subnet.	All levels
Nbrs	Number of neighbors on this interface.	All levels
Type	Type of interface: LAN , NBMA , P2MP , P2P , or Virtual .	detail extensive
Address	IP address of the neighbor.	detail extensive
Mask	Netmask of the neighbor.	detail extensive
Prefix-length	(OSPFv3) IPv6 prefix length, in bits.	detail extensive
OSPF3-Intf-Index	(OSPFv3) OSPF version 3 interface index.	detail extensive
MTU	Interface maximum transmission unit (MTU).	detail extensive
Cost	Interface cost (metric).	detail extensive
DR addr	Address of the designated router.	detail extensive
BDR addr	Address of the backup designated router.	detail extensive

Table 183: show (ospf | ospf3) interface Output Fields (continued)

Field Name	Field Description	Level of Output
Adj count	Number of adjacent neighbors.	detail extensive
Secondary	Indicates that this interface is configured as a secondary interface for this area. This interface can belong to more than one area, but can be designated as a primary interface for only one area.	detail extensive
Flood Reduction	Indicates that this interface is configured with flooding reduction. All self-originated LSAs from this interface are initially sent with the DoNotAge bit set. As a result, LSAs are refreshed only when a change occurs.	extensive
Priority	Router priority used in designated router (DR) election on this interface.	detail extensive
Flood list	List of link-state advertisements (LSAs) that might be about to flood this interface.	extensive
Ack list	Acknowledgment list. List of pending acknowledgments on this interface.	extensive
Descriptor list	List of packet descriptors.	extensive
Hello	Configured value for the hello timer.	detail extensive
Dead	Configured value for the dead timer.	detail extensive
Auth type	(OSPFv2) Authentication mechanism for sending and receiving OSPF protocol packets: <ul style="list-style-type: none"> • MD5—The MD5 mechanism is configured in accordance with RFC 2328. • None—No authentication method is configured. • Password—A simple password (RFC 2328) is configured. 	detail extensive
Topology	(Multiarea adjacency) Name of topology: default or name .	
LDP sync state	(OSPFv2 and LDP synchronization) Current state of LDP synchronization: in sync , in holddown , and not supported .	extensive
reason	(OSPFv2 and LDP synchronization) Reason for the current state of LDP synchronization. The LDP session might be up or down, or adjacency might be up or down.	extensive
config holdtime	(OSPFv2 and LDP synchronization) Configured value of the hold timer. If the state is not synchronized, and the hold time is not infinity, the remaining field displays the number of seconds that remain until the configured hold timer expires.	extensive
IPSec SA name	(OSPFv2) Name of the IPSec security association name.	detail extensive
Active key ID	(OSPFv2 and MD5) Number from 0 to 255 that uniquely identifies an MD5 key.	detail extensive

Table 183: show (ospf | ospf3) interface Output Fields (continued)

Field Name	Field Description	Level of Output
Start time	(OSPFv2 and MD5) Time at which the routing device starts using an MD5 key to authenticate OSPF packets transmitted on the interface on which this key is configured. To authenticate received OSPF protocol packets, the key becomes effective immediately after the configuration is committed. If the start time option is not configured, the key is effective immediately for send and receive and is displayed as Start time 1970 Jan 01 00:00:00 PST .	detail extensive
ReXmit	Configured value for the Retransmit timer.	detail extensive
Stub, Not Stub, or Stub NSSA	Type of area.	detail extensive

Sample Output

show ospf interface brief

```
user@host> show ospf interface brief
```

Intf	State	Area	DR ID	BDR ID	Nbrs
at-5/1/0.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	1
ge-2/3/0.0	DR	0.0.0.0	192.168.4.16	192.168.4.15	1
lo0.0	DR	0.0.0.0	192.168.4.16	0.0.0.0	0
so-0/0/0.0	Down	0.0.0.0	0.0.0.0	0.0.0.0	0
so-6/0/1.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	1
so-6/0/2.0	Down	0.0.0.0	0.0.0.0	0.0.0.0	0
so-6/0/3.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	1

show ospf interface detail

```
user@host> show ospf interface detail
```

Interface	State	Area	DR ID	BDR ID	Nbrs
fe-0/0/1.0	BDR	0.0.0.0	192.168.37.12	10.255.245.215	1
Type LAN, address 192.168.37.11, Mask 255.255.255.248, MTU 4460, Cost 40					
DR addr 192.168.37.12, BDR addr 192.168.37.11, Adj count 1, Priority 128					
Hello 10, Dead 40, ReXmit 5, Not Stub					
t1-0/2/1.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	0
Type P2P, Address 0.0.0.0, Mask 0.0.0.0, MTU 1500, Cost 2604					
Adj count 0					
Hello 10, Dead 40, ReXmit 5, Not Stub					
Auth type: MD5, Active key ID 3, Start time 2002 Nov 19 10:00:00 PST					
IPsec SA Name: sa					

show ospf3 interface detail

```
user@host> show ospf3 interface so-0/0/3.0 detail
```

Interface	State	Area	DR-ID	BDR-ID	Nbrs
so-0/0/3.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	1
Address fe80::2a0:a5ff:fe28:1dfc, Prefix-length 64					
OSPF3-Intf-index 1, Type P2P, MTU 4470, Cost 12, Adj-count 1					
Hello 10, Dead 40, ReXmit 5, Not Stub					

show ospf interface detail (When Multiarea Adjacency Is Configured)

```
user@host> show ospf interface detail
```

```
user@host> show ospf interface detail
```

Interface	State	Area	DR ID	BDR ID	Nbrs
lo0.0	DR	0.0.0.0	10.255.245.2	0.0.0.0	0
Type: LAN, Address: 127.0.0.1, Mask: 255.255.255.255, MTU: 65535, Cost: 0 DR addr: 127.0.0.1, Adj count: 0, Priority: 128 Hello: 10, Dead: 40, ReXmit: 5, Not Stub Auth type: None Topology default (ID 0) -> Cost: 0					
lo0.0	DR	0.0.0.0	10.255.245.2	0.0.0.0	0
Type: LAN, Address: 10.255.245.2, Mask: 255.255.255.255, MTU: 65535, Cost: 0 DR addr: 10.255.245.2, Adj count: 0, Priority: 128 Hello: 10, Dead: 40, ReXmit: 5, Not Stub Auth type: None Topology default (ID 0) -> Cost: 0					
so-0/0/0.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	1
Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1 Adj count: 1 Hello: 10, Dead: 40, ReXmit: 5, Not Stub Auth type: None Topology default (ID 0) -> Cost: 1					
so-0/0/0.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	0
Type: P2P, Address: 192.168.37.46, Mask: 255.255.255.254, MTU: 4470, Cost: 1 Adj count: 0, , Passive Hello: 10, Dead: 40, ReXmit: 5, Not Stub Auth type: None Topology default (ID 0) -> Passive, Cost: 1					
so-1/0/0.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	1
Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1 Adj count: 1 Hello: 10, Dead: 40, ReXmit: 5, Not Stub Auth type: None Topology default (ID 0) -> Cost: 1					
so-1/0/0.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	0
Type: P2P, Address: 192.168.37.54, Mask: 255.255.255.254, MTU: 4470, Cost: 1 Adj count: 0, , Passive Hello: 10, Dead: 40, ReXmit: 5, Not Stub Auth type: None Topology default (ID 0) -> Passive, Cost: 1					
so-0/0/0.0	PtToPt	1.1.1.1	0.0.0.0	0.0.0.0	1
Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1 Adj count: 1, Secondary Hello: 10, Dead: 40, ReXmit: 5, Not Stub Auth type: None Topology default (ID 0) -> Cost: 1					
so-1/0/0.0	PtToPt	1.1.1.1	0.0.0.0	0.0.0.0	1
Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1 Adj count: 1, Secondary					

```

Hello: 10, Dead: 40, ReXmit: 5, Not Stub
Auth type: None
Topology default (ID 0) -> Cost: 1
so-0/0/0.0      PtToPt  2.2.2.2      0.0.0.0      0.0.0.0      1

Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1
Adj count: 1, Secondary
Hello: 10, Dead: 40, ReXmit: 5, Not Stub
Auth type: None
Topology default (ID 0) -> Cost: 1
so-1/0/0.0      PtToPt  2.2.2.2      0.0.0.0      0.0.0.0      1

Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1
Adj count: 1, Secondary
Hello: 10, Dead: 40, ReXmit: 5, Not Stub
Auth type: None
Topology default (ID 0) -> Cost: 1

```

show ospf interface area area-id

```
user@host> show ospf interface area 1.1.1.1
```

Interface	State	Area	DR ID	BDR ID	Nbrs
so-0/0/0.0	PtToPt	1.1.1.1	0.0.0.0	0.0.0.0	1
so-1/0/0.0	PtToPt	1.1.1.1	0.0.0.0	0.0.0.0	1

show ospf interface extensive (When Flooding Reduction Is Enabled)

```
user@host> show ospf interface extensive
```

Interface	State	Area	DR ID	BDR ID	Nbrs
fe-0/0/0.0	PtToPt	0.0.0.0	0.0.0.0	0.0.0.0	0

```

Type: P2P, Address: 10.10.10.1, Mask: 255.255.255.0, MTU: 1500, Cost: 1
Adj count: 0
Secondary, Flood Reduction
Hello: 10, Dead: 40, ReXmit: 5, Not Stub
Auth type: None
Topology default (ID 0) -> Cost: 1

```

show ospf interface extensive (When LDP Synchronization Is Configured)

```
user@host> show ospf interface extensive
```

Interface	State	Area	DR ID	BDR ID
so-1/0/3.0	Down	0.0.0.0	0.0.0.0	0.0.0.0

```

Nbrs
0
Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 65535
Adj count: 0
Hello: 10, Dead: 40, ReXmit: 5, Not Stub
Auth type: None
LDP sync state: in holddown, for: 00:00:08, reason: LDP down during config
config holdtime: 10 seconds, remaining: 1

```

show (ospf | ospf3) io-statistics

List of Syntax [Syntax on page 2216](#)
[Syntax \(EX Series Switch and QFX Series\) on page 2216](#)

Syntax `show (ospf | ospf3) io-statistics`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switch and QFX Series) `show (ospf | ospf3) io-statistics`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display Open Shortest Path First (OSPF) input and output statistics.

Options **none**—Display OSPF input and output statistics.
logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation • [clear \(ospf | ospf3\) statistics on page 2169](#)

List of Sample Output [show ospf io-statistics on page 2217](#)

Output Fields [Table 184 on page 2216](#) lists the output fields for the **show ospf io-statistics** command. Output fields are listed in the approximate order in which they appear.

Table 184: show (ospf | ospf3) io-statistics Output Fields

Field Name	Field Description
Packets read	Number of OSPF packets read since the last time the routing protocol was started.
average per run	Total number of packets divided by the total number of times the OSPF read operation is scheduled to run.
max run	Maximum number of packets for a given run among all scheduled runs.

Table 184: show (ospf | ospf3) io-statistics Output Fields (continued)

Field Name	Field Description
Receive errors	Number of faulty packets received with errors.

Sample Output

show ospf io-statistics

```
user@host> show ospf io-statistics
```

```
Packets read: 7361, average per run: 1.00, max run: 1
Receive errors:
  None
```

show (ospf | ospf3) log

List of Syntax [Syntax on page 2218](#)
 [Syntax \(EX Series Switch and QFX Series\) on page 2218](#)

Syntax `show (ospf | ospf3) log`
 `<instance instance-name>`
 `<logical-system (all | logical-system-name)>`
 `<realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>`
 `<topology topology-name>`

Syntax (EX Series Switch and QFX Series) `show (ospf | ospf3) log`
 `<instance instance-name>`
 `<topology topology-name>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 topology option introduced in Junos OS Release 9.0.
 topology option introduced in Junos OS Release 9.0 for EX Series switches.
 realm option introduced in Junos OS Release 9.2.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display the entries in the Open Shortest Path First (OSPF) log of SPF calculations.

Options **none**—Display entries in the OSPF log of SPF calculations for all routing instances.

instance *instance-name*—(Optional) Display entries for the specified routing instance.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

topology *topology-name*—(Optional) (OSPFv2 only) Display entries for the specified topology.

realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)—(OSPFv3 only) (Optional) Display entries for the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

Required Privilege Level view

List of Sample Output [show ospf log on page 2219](#)
 [show ospf log topology voice on page 2219](#)

Output Fields Table 185 on page 2219 lists the output fields for the **show (ospf | ospf3) log** command. Output fields are listed in the approximate order in which they appear.

Table 185: show (ospf | ospf3) log Output Fields

Field Name	Field Description
When	Time, in weeks (w) and days (d), since the SPF calculation was made.
Type	Type of calculation: Cleanup , External , Interarea , NSSA , Redist , SPF , Stub , Total , or Virtuallink .
Elapsed	Amount of time, in seconds, that elapsed during the operation, or the time required to complete the SPF calculation. The start time is the time displayed in the When field.

Sample Output

show ospf log

```
user@host> show ospf log
```

When	Type	Elapsed
1w4d 17:25:58	Stub	0.000017
1w4d 17:25:58	SPF	0.000070
1w4d 17:25:58	Stub	0.000019
1w4d 17:25:58	Interarea	0.000054
1w4d 17:25:58	External	0.000005
1w4d 17:25:58	Cleanup	0.000203
1w4d 17:25:58	Total	0.000537
1w4d 17:24:48	SPF	0.000125
1w4d 17:24:48	Stub	0.000017
1w4d 17:24:48	SPF	0.000100
1w4d 17:24:48	Stub	0.000016
1w4d 17:24:48	Interarea	0.000056
1w4d 17:24:48	External	0.000005
1w4d 17:24:48	Cleanup	0.000238
1w4d 17:24:48	Total	0.000600
...		

show ospf log topology voice

```
user@host> show ospf log topology voice
```

Topology voice SPF log:

Last instance of each event type

When	Type	Elapsed
00:06:11	SPF	0.000116
00:06:11	Stub	0.000114
00:06:11	Interarea	0.000126
00:06:11	External	0.000067
00:06:11	NSSA	0.000037
00:06:11	Cleanup	0.000186

```
Maximum length of each event type
When      Type      Elapsed
00:13:43   SPF        0.000140
00:13:33   Stub        0.000116
00:13:43   Interarea   0.000128
00:13:33   External    0.000075
00:13:38   NSSA        0.000039
00:13:53   Cleanup     0.000657
```

```
Last 100 events
When      Type      Elapsed
00:13:53   SPF        0.000090
00:13:53   Stub        0.000041
00:13:53   Interarea   0.000123
00:13:53   External    0.000040
00:13:53   NSSA        0.000038
00:13:53   Cleanup     0.000657
00:13:53   Total      0.001252
.
.
00:06:11   SPF        0.000116
00:06:11   Stub        0.000114
00:06:11   Interarea   0.000126
00:06:11   External    0.000067
00:06:11   NSSA        0.000037
00:06:11   Cleanup     0.000186
00:06:11   Total      0.000818
```


show (ospf | ospf3) neighbor

List of Syntax [Syntax on page 2221](#)
 [Syntax \(EX Series Switches and QFX Series\) on page 2221](#)

Syntax `show (ospf | ospf3) neighbor`
 `<brief | detail | extensive>`
 `<area area-id>`
 `<instance (all | instance-name)>`
 `<interface interface-name>`
 `<logical-system (all | logical-system-name)>`
 `<neighbor>`
 `<realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>`

Syntax (EX Series Switches and QFX Series) `show (ospf | ospf3) neighbor`
 `<brief | detail | extensive>`
 `<area area-id>`
 `<instance (all | instance-name)>`
 `<interface interface-name>`
 `<neighbor>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 instance all option introduced in Junos OS Release 9.1.
 instance all option introduced in Junos OS Release 9.1 for EX Series switches.
 area, **interface**, and **realm** options introduced in Junos OS Release 9.2.
 area and **interface** options introduced in Junos OS Release 9.2 for EX Series switches.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display information about OSPF neighbors.

CPU utilization might increase while the device learns its OSPF neighbors. We recommend that you use the **show (ospf | ospf3) neighbor** command after the device learns and establishes OSPF neighbor adjacencies. Depending on the size of your network, this might take several minutes. If you receive a “timeout communicating with routing daemon” error when using the **show (ospf | ospf3) neighbor** command, wait several minutes before attempting to use the command again. This is not a critical system error, but you might experience a delay in using the CLI.

Options **none**—Display standard information about all OSPF neighbors for all routing instances.

brief | detail | extensive—(Optional) Display the specified level of output.

area *area-id*—(Optional) Display information about the OSPF neighbors for the specified area.

instance (**all** | *instance-name*)—(Optional) Display all OSPF interfaces for all routing instances or under the named routing instance.

interface *interface-name*—(Optional) Display information about OSPF neighbors for the specified logical interface.

logical-system (**all** | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

neighbor—(Optional) Display information about the specified OSPF neighbor.

realm (**ipv4-multicast** | **ipv4-unicast** | **ipv6-multicast**)—(OSPFv3 only) (Optional) Display information about the OSPF neighbors for the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

Required Privilege Level

view

Related Documentation

- [clear \(ospf | ospf3\) neighbor on page 2166](#)

List of Sample Output

[show ospf neighbor brief on page 2224](#)
[show ospf neighbor detail on page 2224](#)
[show ospf neighbor extensive on page 2225](#)
[show ospf3 neighbor detail on page 2226](#)
[show ospf neighbor area area-id on page 2226](#)
[show ospf neighbor interface interface-name on page 2226](#)
[show ospf3 neighbor instance all \(OSPFv3 Multiple Family Address Support Enabled\) on page 2226](#)

Output Fields

[Table 186 on page 2222](#) lists the output fields for the **show (ospf | ospf3) neighbor** command. Output fields are listed in the approximate order in which they appear.

Table 186: show (ospf | ospf3) neighbor Output Fields

Field Name	Field Description	Level of Output
Address	Address of the neighbor.	All levels
Interface	Interface through which the neighbor is reachable.	All levels

Table 186: `show (ospf | ospf3) neighbor` Output Fields (continued)

Field Name	Field Description	Level of Output
State	<p>State of the neighbor:</p> <ul style="list-style-type: none"> • Attempt—Valid only for neighbors attached to nonbroadcast networks. It indicates that no recent information has been received from the neighbor, but that a more concerted effort must be made to contact the neighbor. • Down—Initial state of a neighbor conversation. It indicates that no recent information has been received from the neighbor. Hello packets might continue to be sent to neighbors in the Down state, although at a reduced frequency. • Exchange—Routing device is describing its entire link-state database by sending database description packets to the neighbor. Each packet has a sequence number and is explicitly acknowledged. • ExStart—First step in creating an adjacency between the two neighboring routing devices. The goal of this step is to determine which routing device is the master, and to determine the initial sequence number. • Full—Neighboring routing devices are fully adjacent. These adjacencies appear in router link and network link advertisements. • Init—A hello packet has recently been sent by the neighbor. However, bidirectional communication has not yet been established with the neighbor. This state may occur, for example, because the routing device itself did not appear in the neighbor's hello packet. • Loading—Link-state request packets are sent to the neighbor to acquire more recent advertisements that have been discovered (but not yet received) in the Exchange state. • 2Way—Communication between the two routing devices is bidirectional. This state has been ensured by the operation of the Hello Protocol. This is the most advanced state short of beginning adjacency establishment. The (backup) designated router is selected from the set of neighbors in state 2Way or greater. 	All levels
ID	Router ID of the neighbor.	All levels
Pri	Priority of the neighbor to become the designated router.	All levels
Dead	Number of seconds until the neighbor becomes unreachable.	All levels
Link state acknowledgment list	Number of link-state acknowledgments received.	extensive
Link state retransmission list	<p>Total number of link-state advertisements retransmitted. For extensive output only, the following information is also displayed:</p> <ul style="list-style-type: none"> • Type—Type of link advertisement: ASBR, Sum, Extern, Network, NSSA, OpaqueArea, Router, or Summary. • LSA ID—LSA identifier included in the advertisement. An asterisk preceding the identifier marks database entries that originated from the local routing device. • Adv rtr—Address of the routing device that sent the advertisement. • Seq—Link sequence number of the advertisement. 	detail extensive

Table 186: `show (ospf | ospf3) neighbor` Output Fields (continued)

Field Name	Field Description	Level of Output
Neighbor-address	(OSPFv3 only) If the neighbor uses virtual links, the Neighbor-address is the site-local, local, or global address. If the neighbor uses a physical interface, the Neighbor-address is an IPv6 link-local address.	detail extensive
area	Area that the neighbor is in.	detail extensive
OSPF3-Intf-Index	(OSPFv3 only) Displays the OSPFv3 interface index.	detail extensive
opt	Option bits received in the hello packets from the neighbor.	detail extensive
DR or DR-ID	Address of the designated router.	detail extensive
BDR or BDR-ID	Address of the backup designated router.	detail extensive
Up	Length of time since the neighbor came up.	detail extensive
adjacent	Length of time since the adjacency with the neighbor was established.	detail extensive
SPRING Adjacency Labels	Segment routing in networking adjacency labels. <i>NOTE:</i> Displayed only when segment routing is enabled	detail extensive
Label	Segment routing label.	detail extensive
Flags	Segment routing flags. Flags VL indicate <i>value</i> and <i>local</i> .	detail extensive

Sample Output

show ospf neighbor brief

```
user@host> show ospf neighbor brief
```

Address	Intf	State	ID	Pri	Dead
192.168.254.225	fxp3.0	2Way	10.250.240.32	128	36
192.168.254.230	fxp3.0	Full	10.250.240.8	128	38
192.168.254.229	fxp3.0	Full	10.250.240.35	128	33
10.1.1.129	fxp2.0	Full	10.250.240.12	128	37
10.1.1.131	fxp2.0	Full	10.250.240.11	128	38
10.1.2.1	fxp1.0	Full	10.250.240.9	128	32
10.1.2.81	fxp0.0	Full	10.250.240.10	128	33

show ospf neighbor detail

```
user@host> show ospf neighbor detail
```

Address	Interface	State	ID	Pri	Dead
10.0.6.60	1t-1/2/0.12	Full	1.1.1.60	128	38

Area 0.0.0.0, opt 0x52, DR 0.0.0.0, BDR 0.0.0.0
Up 23:53:47, adjacent 23:53:34
SPRING Adjacency Labels:

```

Label      Flags
299968     VL
10.0.10.70  1t-1/2/0.14      Full      1.1.1.70      128      37
Area 0.0.0.0, opt 0x52, DR 0.0.0.0, BDR 0.0.0.0
Up 23:53:47, adjacent 23:53:47
SPRING Adjacency Labels:

Label      Flags
299952     VL

```

show ospf neighbor extensive

```
user@host> show ospf neighbor extensive
```

```

Address      Interface      State      ID      Pri  Dead
10.5.1.2     ge-1/2/0.1     Full      10.5.1.2  128  33
area 0.0.0.1, opt 0x42, DR 10.5.1.2, BDR 10.5.1.1
Up 06:09:42, adjacent 05:17:50
Link state retransmission list:

Type      LSA ID      Adv rtr      Seq
Summary   10.8.56.0   172.25.27.82 0x8000004d
Router    10.5.1.94   10.5.1.94    0x8000005c
Network   10.5.24.2   10.5.1.94    0x80000036
Summary   10.8.57.0   172.25.27.82 0x80000024
Extern    1.10.90.0   10.8.1.2     0x80000041
Extern    1.4.109.0   10.6.1.2     0x80000041
Router    10.5.1.190  10.5.1.190   0x8000005f
Network   10.5.48.2   10.5.1.190   0x8000003d
Summary   10.8.58.0   172.25.27.82 0x8000004d
Extern    1.10.91.0   10.8.1.2     0x80000041
Extern    1.4.110.0   10.6.1.2     0x80000041
Router    10.5.1.18   10.5.1.18    0x8000005f
Network   10.5.5.2    10.5.1.18    0x80000033
Summary   10.8.59.0   172.25.27.82 0x8000003a
Summary   10.8.62.0   172.25.27.82 0x80000025
10.5.10.2    ge-1/2/0.10    ExStart    10.5.1.38  128  38
area 0.0.0.1, opt 0x42, DR 10.5.10.2, BDR 10.5.10.1
Up 06:09:42
master, seq 0xac1530f8, rexmit DBD in 2 sec

```

```

    rexmit LSREQ in 0 sec
10.5.11.2      ge-1/2/0.11      Full    10.5.1.42      128    33
area 0.0.0.1, opt 0x42, DR 10.5.11.2, BDR 10.5.11.1
Up 06:09:42, adjacent 05:27:00
Link state retransmission list:

    Type      LSA ID      Adv rtr      Seq
Summary 10.8.58.0    172.25.27.82 0x8000004d
Extern  1.10.91.0    10.8.1.2     0x80000041
Extern  1.1.247.0    10.5.1.2     0x8000003f
Extern  1.4.110.0    10.6.1.2     0x80000041
Router  10.5.1.18    10.5.1.18    0x8000005f
Network 10.5.5.2      10.5.1.18    0x80000033
Summary 10.8.59.0    172.25.27.82 0x8000003a

```

show ospf3 neighbor detail

```
user@host> show ospf3 neighbor detail
```

```

ID          Interface      State    Pri    Dead
10.255.71.13 fe-0/0/2.0      Full    128    30
Neighbor-address fe80::290:69ff:fe9b:e002
area 0.0.0.0, opt 0x13, OSPF3-Intf-Index 2
DR-ID 10.255.71.13, BDR-ID 10.255.71.12
Up 02:51:43, adjacent 02:51:43

```

show ospf neighbor area area-id

```
user@host >show ospf neighbor area 1.1.1.1
```

```

Address      Interface      State    ID          Pri    Dead
192.168.37.47 so-0/0/0.0      Full    10.255.245.4 128    33
Area 1.1.1.1
192.168.37.55 so-1/0/0.0      Full    10.255.245.5 128    37
Area 1.1.1.1

```

show ospf neighbor interface interface-name

```
user@host >show ospf neighbor interface so-0/0/0.0
```

```

Address      Interface      State    ID          Pri    Dead
192.168.37.47 so-0/0/0.0      Full    10.255.245.4 128    37
Area 0.0.0.0
192.168.37.47 so-0/0/0.0      Full    10.255.245.4 128    33
Area 1.1.1.1
192.168.37.47 so-0/0/0.0      Full    10.255.245.4 128    32
Area 2.2.2.2

```

show ospf3 neighbor instance all (OSPFv3 Multiple Family Address Support Enabled)

```
user @host > show ospf3 neighbor instance all
```

```
Instance: ina
  Realm: ipv6-unicast
    ID      Interface      State    Pri    Dead
  100.1.1.1 fe-0/0/2.0    Full    128    37
    Neighbor-address fe80::217:cb00:c87c:8c03
Instance: inb
  Realm: ipv4-unicast
    ID      Interface      State    Pri    Dead
  100.1.2.1 fe-0/0/2.1     Full    128    33
    Neighbor-address fe80::217:cb00:c97c:8c03
```

show (ospf | ospf3) overview

List of Syntax	Syntax on page 2228 Syntax (EX Series Switch and QFX Series) on page 2228
Syntax	<pre>show (ospf ospf3) overview <brief extensive> <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <realm (ipv4-multicast ipv4-unicast ipv6-multicast)></pre>
Syntax (EX Series Switch and QFX Series)	<pre>show (ospf ospf3) overview <brief extensive> <instance <i>instance-name</i>></pre>
Release Information	Command introduced in Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. realm option introduced in Junos OS Release 9.2. Database protection introduced in Junos 10.2. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display Open Shortest Path First (OSPF) overview information.
Options	none —Display standard information about all OSPF neighbors for all routing instances. brief extensive —(Optional) Display the specified level of output. instance <i>instance-name</i> —(Optional) Display all OSPF interfaces under the named routing instance. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system. realm (ipv4-multicast ipv4-unicast ipv6-multicast) —(Optional) (OSPFv3 only) Display information about the specified OSPFv3 realm, or address family. Use the realm option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.
Required Privilege Level	view
List of Sample Output	show ospf overview on page 2230 show ospf overview (With Database Protection) on page 2231 show ospf3 overview (With Database Protection) on page 2232 show ospf overview extensive on page 2232

Output Fields Table 187 on page 2229 lists the output fields for the **show ospf overview** command. Output fields are listed in the approximate order in which they appear.

Table 187: show ospf overview Output Fields

Field name	Field Description	Level of Output
Instance	OSPF routing instance.	All levels
Router ID	Router ID of the routing device.	All levels
Route table index	Route table index.	All levels
Configured overload	Overload capability is enabled. If the overload timer is also configured, display the time that remains before it is set to expire. This field is not displayed after the timer expires.	All levels
Topology	Topology identifier.	All levels
Prefix export count	Number of prefixes exported into OSPF.	All levels
Full SPF runs	Number of complete Shortest Path First calculations.	All levels
SPF delay	Delay before performing consecutive Shortest Path First calculations.	All levels
SPF holddown	Delay before performing additional Shortest Path First (SPF) calculations after the maximum number of consecutive SPF calculations is reached.	All levels
SPF rapid runs	Maximum number of Shortest Path First calculations that can be performed in succession before the hold-down timer begins.	All levels
LSA refresh time	Refresh period for link-state advertisement (in minutes).	All levels
SPRING	Source protocol routing in networking: enable or disable .	All levels
Node Segments	Nodes of source protocol routing in networking: enable or disable .	All levels
Ipv4 Index	Ipv4 Index.	All levels
Index Range	Ipv4 Index range.	All levels
Node Segment Blocks Allocated	Details about node segment blocks.	All levels
Database protection state	Current state of database protection.	All levels
Warning threshold	Threshold at which a warning message is logged (percentage of maximum LSA count).	All levels
Non self-generated LSAs	Number of LSAs whose router ID is not equal to the local router ID: Current , Warning (threshold), and Allowed .	All levels

Table 187: show ospf overview Output Fields (continued)

Field name	Field Description	Level of Output
Ignore time	How long the database has been in the ignore state.	All levels
Reset time	How long the database must stay out of the ignore or isolated state before it returns to normal operations.	All levels
Ignore count	Number of times the database has been in the ignore state: Current and Allowed .	All levels
Restart	Graceful restart capability: enabled or disabled .	All levels
Restart duration	Time period for complete reacquisition of OSPF neighbors.	All levels
Restart grace period	Time period for which the neighbors should consider the restarting routing device as part of the topology.	All levels
Graceful restart helper mode	(OSPFv2) Standard graceful restart helper capability (based on RFC 3623): enabled or disabled .	All levels
Restart-signaling helper mode	(OSPFv2) Restart signaling-based graceful restart helper capability (based on RFC 4811, RFC 4812, and RFC 4813): enabled or disabled .	All levels
Helper mode	(OSPFv3) Graceful restart helper capability: enabled or disabled .	All levels
Trace options	OSPF-specific trace options.	extensive
Trace file	Name of the file to receive the output of the tracing operation.	extensive
Area	Area number. Area 0.0.0.0 is the backbone area.	All levels
Stub type	Stub type of area: Normal Stub , Not Stub , or Not so Stubby Stub .	All levels
Authentication Type	Type of authentication: None , Password , or MD5 . NOTE: The Authentication Type field refers to the authentication configured at the <code>[edit protocols ospf area area-id]</code> level. Any authentication configured for an interface in this area will not affect the value of this field.	All levels
Area border routers	Number of area border routers.	All levels
Neighbors	Number of autonomous system boundary routers.	All levels

Sample Output

show ospf overview

```
user@host> show ospf overview
```

```
Instance: master
Router ID: 10.255.245.6
Route table index: 0
```

```

Configured overload, expires in 118 seconds
LSA refresh time: 50 minutes
SPRING: Enabled
Node Segments: Enabled
Ipv4 Index : 10, Index Range: 2048
Node Segment Blocks Allocated:
Start Index : 0, Size : 256, Label-Range: [ 802048, 802303 ]
Start Index : 256, Size : 256, Label-Range: [ 802304, 802559 ]
Start Index : 512, Size : 256, Label-Range: [ 802560, 802815 ]
Start Index : 768, Size : 256, Label-Range: [ 802816, 803071 ]
Start Index : 1024, Size : 256, Label-Range: [ 803072, 803327 ]
Start Index : 1280, Size : 256, Label-Range: [ 803328, 803583 ]
Start Index : 1536, Size : 256, Label-Range: [ 803584, 803839 ]
Start Index : 1792, Size : 256, Label-Range: [ 803840, 804095 ]
Restart: Enabled
Restart duration: 20 sec
Restart grace period: 40 sec
Helper mode: enabled
Area: 0.0.0.0
Stub type: Not Stub
Authentication Type: None
Area border routers: 0, AS boundary routers: 0
Neighbors
Up (in full state): 0
Topology: default (ID 0)
Prefix export count: 0
Full SPF runs: 1
SPF delay: 0.200000 sec, SPF holddown: 5 sec, SPF rapid runs: 3

```

show ospf overview (With Database Protection)

```

user@host> show ospf overview

Instance: master
Router ID: 10.255.112.218
Route table index: 0
LSA refresh time: 50 minutes
Traffic engineering
Restart: Enabled
Restart duration: 180 sec
Restart grace period: 210 sec
Graceful restart helper mode: Enabled
Restart-signaling helper mode: Enabled
Database protection state: Normal
Warning threshold: 70 percent
Non self-generated LSAs: Current 582, Warning 700, Allowed 1000
Ignore time: 30, Reset time: 60
Ignore count: Current 0, Allowed 1
Area: 0.0.0.0
Stub type: Not Stub
Authentication Type: None
Area border routers: 0, AS boundary routers: 0
Neighbors
Up (in full state): 160
Topology: default (ID 0)
Prefix export count: 0
Full SPF runs: 70
SPF delay: 0.200000 sec, SPF holddown: 5 sec, SPF rapid runs: 3
Backup SPF: Not Needed

```

show ospf3 overview (With Database Protection)

```
user@host> show ospf3 overview

Instance: master
  Router ID: 10.255.112.128
  Route table index: 0
  LSA refresh time: 50 minutes
  Database protection state: Normal
    Warning threshold: 80 percent
    Non self-generated LSAs: Current 3, Warning 8, Allowed 10
    Ignore time: 30, Reset time: 60
    Ignore count: Current 0, Allowed 2
  Area: 0.0.0.0
    Stub type: Not Stub
    Area border routers: 0, AS boundary routers: 0
    Neighbors
      Up (in full state): 1
  Topology: default (ID 0)
  Prefix export count: 0
  Full SPF runs: 7
  SPF delay: 0.200000 sec, SPF holddown: 5 sec, SPF rapid runs: 3
  Backup SPF: Not Needed
```

show ospf overview extensive

```
user@host> show ospf overview extensive

Instance: master
  Router ID: 1.1.1.103
  Route table index: 0
  Full SPF runs: 13, SPF delay: 0.200000 sec
  LSA refresh time: 50 minutes
  Restart: Disabled
  Trace options: lsa
  Trace file: /var/log/ospf size 131072 files 10
  Area: 0.0.0.0
    Stub type: Not Stub
    Authentication Type: None
    Area border routers: 0, AS boundary routers: 0
    Neighbors
      Up (in full state): 1
```

show (ospf | ospf3) route

List of Syntax [Syntax on page 2233](#)
 [Syntax \(EX Series Switch and QFX Series\) on page 2233](#)

Syntax

```
show (ospf | ospf3) route
<brief | detail | extensive>
<abr | asbr | extern | inter | intra>
<destination>
<instance (default | ipv4-multicast | instance-name)>
<logical-system (default | ipv4-multicast | logical-system-name)>
<network>
<no-backup-coverage>
<realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>
<router>
<topology (default | ipv4-multicast | topology-name)>
<transit>
```

Syntax (EX Series Switch and QFX Series)

```
show (ospf | ospf3) route
<brief | detail | extensive>
<abr | asbr | extern | inter | intra>
<destination>
<instance instance-name
<network>
<no-backup-coverage>
<router>
<topology (default | ipv4-multicast | topology-name)>
<transit>
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 topology option introduced in Junos OS Release 9.0.
 realm option introduced in Junos OS Release 9.2.
 Command introduced in Junos OS Release 11.3 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display the entries in the Open Shortest Path First (OSPF) routing table.

Options **none**—Display standard information about all entries in the OSPF routing table for all routing instances and all topologies.

destination—Display routes to the specified IP address (with optional destination prefix length).

brief | detail | extensive—(Optional) Display the specified level of output.

abr—(Optional) Display routes to area border routers.

asbr—(Optional) Display routes to autonomous system border routers.

extern—(Optional) Display external routes.

inter—(Optional) Display interarea routes.

intra—(Optional) Display intra-area routes.

instance (default | ipv4-multicast | *instance-name*)—(Optional) Display entries for the default routing instance, the IPv4 multicast routing instance, or for the specified routing instance.

logical-system (default | ipv4-multicast | *logical-system-name*)—(Optional) Perform this operation on the default logical system, the IPv4 multicast logical system, or on a particular logical system.

network—(Optional) Display routes to networks.

no-backup-coverage—(Optional) Display routes with no backup coverage.

realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)—(OSPFv3 only) (Optional) Display entries in the routing table for the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

router—(Optional) Display routes to all routers.

topology (default | ipv4-multicast | *topology-name*)—(OSPFv2 only) (Optional) Display routes for the default OSPF topology, IPv4 multicast topology, or for a particular topology.

transit—(Optional) (OSPFv3 only) Display OSPFv3 routes to pseudonodes.

Required Privilege Level

view

List of Sample Output

[show ospf route on page 2236](#)
[show ospf route detail on page 2237](#)
[show ospf route extensive on page 2237](#)
[show ospf3 route on page 2237](#)
[show ospf3 route detail on page 2238](#)
[show ospf route topology voice on page 2238](#)

Output Fields

[Table 188 on page 2234](#) list the output fields for the **show (ospf | ospf3) route** command. Output fields are listed in the approximate order in which they appear.

Table 188: show (ospf | ospf3) route Output Fields

Field Name	Field Description	Output Level
Topology	Name of the topology.	All levels

Table 188: *show (ospf | ospf3) route* Output Fields (continued)

Field Name	Field Description	Output Level
Prefix	Destination of the route.	All levels
Path type	How the route was learned: <ul style="list-style-type: none"> • Inter—Interarea route • Ext1—External type 1 route • Ext2—External type 2 route • Intra—Intra-area route 	All levels
Route type	The type of routing device from which the route was learned: <ul style="list-style-type: none"> • AS BR—Route to AS border router. • Area BR—Route to area border router. • Area/AS BR—Route to router that is both an Area BR and AS BR. • Network—Network router. • Router—Route to a router that is neither an Area BR nor an AS BR. • Transit—(OSPFv3 only) Route to a pseudonode representing a transit network, LAN, or nonbroadcast multiaccess (NBMA) link. • Discard—Route to a summary discard. 	All levels
NH Type	Next-hop type: LSP or IP .	All levels
Metric	Route's metric value.	All levels
NH-interface	(OSPFv3 only) Interface through which the route's next hop is reachable.	All levels
NH-addr	(OSPFv3 only) IPv6 address of the next hop.	All levels
NextHop Interface	(OSPFv2 only) Interface through which the route's next hop is reachable.	All levels
Nexthop addr/label	(OSPFv2 only) If the NH Type is IP , then it is the address of the next hop. If the NH Type is LSP , then it is the name of the label-switched path.	All levels
Area	Area ID of the route.	detail
Origin	Router from which the route was learned.	detail
Type 7	Route was learned through a not-so-stubby area (NSSA) link-state advertisement (LSA).	detail
P-bit	Route was learned through NSSA LSA and the propagate bit was set.	detail
Fwd NZ	Forwarding address is nonzero. Fwd NZ is only displayed if the route is learned through an NSSA LSA.	detail

Table 188: show (ospf | ospf3) route Output Fields (continued)

Field Name	Field Description	Output Level
optional-capability	Optional capabilities propagated in the router LSA. This field is in the output for intra-area router routes only (when Route Type is Area BR , AS BR , Area/AS BR , or Router), not for interarea router routes or network routes. Three bits in this field are defined as follows: <ul style="list-style-type: none"> • 0x4 (V)—Routing device is at the end of a virtual active link. • 0x2 (E)—Routing device is an autonomous system boundary router. • 0x1 (B)—Routing device is an area border router. 	detail
priority	The priority assigned to the prefix: <ul style="list-style-type: none"> • high • medium • low <p>NOTE: The priority field applies only to routes of type Network.</p>	detail
BGP-ORR Generation-ID	Display the BGP-ORR generation identifier of the main OSPF route. This field is shown only for non-zero values.	extensive

Sample Output

show ospf route

```
user@host> show ospf route
```

```
Topology default Route Table:
```

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop Address/LSP
1.1.1.60/32	Intra	Network	Spring	6	1t-1/2/0.14	10.0.10.70
			Bkup SPRING		1t-1/2/0.12	10.0.6.60
1.1.1.70/32	Intra	Network	IP	1	1t-1/2/0.14	10.0.10.70
			Bkup LSP			(null)
1.1.1.70/32	Intra	Network	Spring	1	1t-1/2/0.14	10.0.10.70
			Bkup SPRING		1t-1/2/0.12	10.0.6.60
1.1.1.80/32	Intra	Network	IP	6	1t-1/2/0.14	10.0.10.70
			Bkup IP		1t-1/2/0.12	10.0.6.60
1.1.1.80/32	Intra	Network	Spring	6	1t-1/2/0.14	10.0.10.70
802068 (S=0)	Intra	Network	Mpls	0	1t-1/2/0.14	10.0.10.70
			Bkup MPLS		1t-1/2/0.12	10.0.6.60
802078 (S=0)	Intra	Network	Mpls	0	1t-1/2/0.14	10.0.10.70
			Bkup MPLS		1t-1/2/0.12	10.0.6.60
802088 (S=0)	Intra	Network	Mpls	0	1t-1/2/0.14	10.0.10.70
			Bkup MPLS		1t-1/2/0.12	10.0.6.60
802098 (S=0)	Intra	Network	Mpls	0	1t-1/2/0.14	10.0.10.70
			Bkup MPLS		1t-1/2/0.12	10.0.6.60
802108 (S=0)	Intra	Network	Mpls	0	1t-1/2/0.14	10.0.10.70
			Bkup MPLS		1t-1/2/0.12	10.0.6.60
802118 (S=0)	Intra	Network	Mpls	0	1t-1/2/0.14	10.0.10.70
			Bkup MPLS		1t-1/2/0.12	10.0.6.60

802118	Intra Network	Mpls Bkup MPLS	0 t1-1/2/0.14 t1-1/2/0.12	10.0.10.70 10.0.6.60
--------	---------------	-------------------	------------------------------	-------------------------

show ospf route detail

```
user@host> show ospf route detail
```

Topology default Route Table:

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop addr/label
10.255.14.174	Inter	AS BR	IP	210	t1-3/0/1.0	
area 0.0.0.2, origin 10.255.14.185						
10.255.14.178	Intra	Router	IP	200	t3-3/1/3.0	
area 0.0.0.2, origin 10.255.14.178, optional-capability 0x0						
10.210.1.0/30	Intra	Network	IP	10	t3-3/1/2.0	
area 0.0.0.2, origin 10.255.14.172, priority medium						
198.51.100/24	Inter	Network	IP	210	t1-3/0/1.0	
area 0.0.0.2, origin 10.255.14.185, priority low						
192.0.2.0/24	Ext2	Network	IP	0	t1-3/0/1.0	
area 0.0.0.0, origin 10.255.14.174, priority high						
203.3.113.0/24	Inter	Network	IP	220	t1-3/0/1.0	
area 0.0.0.2, origin 10.255.14.185, priority high						

show ospf route extensive

```
user@host> show ospf route extensive
```

Topology default Route Table:

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop Address/LSP
1.1.1.1	Intra	Router	IP	100	ge-0/0/2.0	10.1.1.1
area 0.0.0.0, origin 1.1.1.1, optional-capability 0x0						
1.1.1.1/32	Intra	Network	IP	100	ge-0/0/2.0	10.1.1.1
area 0.0.0.0, origin 1.1.1.1, priority medium						
BGP-ORR generation-id: 1						

show ospf3 route

```
user@host> show ospf3 route
```

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop addr/label
10.255.71.13	Intra	Router	IP	1		
NH-interface fe-0/0/2.0, NH-addr fe80::290:69ff:fe9b:e002						
10.255.71.13;0.0.0.2						
10.255.245.1	Intra	Router	IP	40	fxp1.1	192.168.36.17
area 0.0.0.0, origin 10.255.245.1 optional-capability 0x0,						
10.255.245.3	Intra	AS BR	IP	1	fxp2.3	192.168.36.34
area 0.0.0.0, origin 10.255.245.3 optional-capability 0x0,						
10.255.245.1/32	Intra	Network	IP	40	fxp1.1	192.168.36.17
area 0.0.0.0, origin 10.255.245.1, priority high						
10.255.245.2/32	Intra	Network	IP	0	lo0.0	
area 0.0.0.0, origin 10.255.245.2, priority medium						

```

10.255.245.3/32      Intra  Network  IP      1  fxp2.3      192.168.36.34
    area 0.0.0.0, origin 10245.3, priority low
                        Intra  Transit  IP      1
    NH-interface fe-0/0/2.0
192::168:222:84/126 Intra  Network  IP      1
    NH-interface fe-0/0/2.0
abcd::71:12/128     Intra  Network  IP      0
    NH-interface lo0.0
abcd::71:13/128     Intra  Network  LSP     1
    NH-interface fe-0/0/2.0, NH-addr lsp-cd

```

show ospf3 route detail

```
user@host> show ospf3 route detail
```

Prefix	Path type	Route type	NH type	Metric
10.255.14.174	Intra	Area/AS BR	IP	110
NH-interface so-1/2/2.0				
Area 0.0.0.0, Origin 10.255.14.174, Optional-capability 0x3				
10.255.14.178	Intra	Router	IP	200
NH-interface t3-3/1/3.0				
Area 0.0.0.0, Origin 10.255.14.178, Optional-capability 0x0				
10.255.14.185;0.0.0.2	Intra	Transit	IP	200
NH-interface t1-3/0/1.0				
NH-interface so-1/2/2.0				
Area 0.0.0.0, Origin 10.255.14.185				
1000:1:1::1/128	Inter	Network	IP	110
NH-interface so-1/2/2.0				
Area 0.0.0.0, Origin 10.255.14.174, Priority low				
1001:2:1::/48	Ext1	Network	IP	110
NH-interface so-1/2/2.0				
Area 0.0.0.0, Origin 10.255.14.174, Fwd NZ, Priority medium				
1002:1:7::/48	Ext2	Network	IP	0
NH-interface so-1/2/2.0				
Area 0.0.0.0, Origin 10.255.14.174, Fwd NZ, Priority low				
1002:3:4::/48	Ext2	Network	IP	0
NH-interface so-1/2/2.0				
Area 0.0.0.0, Origin 10.255.14.174, Fwd NZ, Priority high				
abcd::10:255:14:172/128	Intra	Network	IP	0
NH-interface lo0.0				
Area 0.0.0.0, Origin 10.255.14.172, Priority low				

show ospf route topology voice

```
user@host show ospf route topology voice
```

Topology voice Route Table:						
Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop addr/label
10.255.8.2	Intra	Router	IP	1	so-0/2/0.0	
10.255.8.3	Intra	Router	IP	2	so-0/2/0.0	
10.255.8.1/32	Intra	Network	IP	0	lo0.0	
10.255.8.2/32	Intra	Network	IP	1	so-0/2/0.0	
10.255.8.3/32	Intra	Network	IP	2	so-0/2/0.0	
192.168.8.0/29	Intra	Network	IP	2	so-0/2/0.0	
192.168.8.44/30	Intra	Network	IP	2	so-0/2/0.0	
192.168.8.46/32	Intra	Network	IP	1	so-0/2/0.0	

192.168.8.48/30	Intra	Network	IP	1	so-0/2/1.0
192.168.8.52/30	Intra	Network	IP	2	so-0/2/0.0
192.168.9.44/30	Intra	Network	IP	1	so-0/2/0.0
192.168.9.45/32	Intra	Network	IP	2	so-0/2/0.0

show (ospf | ospf3) statistics

List of Syntax	Syntax on page 2240 Syntax (EX Series Switch and QFX Series) on page 2240
Syntax	<pre>show (ospf ospf3) statistics <instance <i>instance-name</i>> <logical-system (all <i>logical-system-name</i>)> <realm (ipv4-multicast ipv4-unicast ipv6-multicast)></pre>
Syntax (EX Series Switch and QFX Series)	<pre>show (ospf ospf3) statistics <instance <i>instance-name</i>></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. realm option introduced in Junos OS Release 9.2. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display OSPF statistics.
Options	none —Display OSPF statistics for all routing instances. instance <i>instance-name</i> —(Optional) Display all statistics for the specified routing instance. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system. realm (ipv4-multicast ipv4-unicast ipv6-multicast) —(Optional) (OSPFv3 only) Display all statistics for the specified OSPFv3 realm, or address family. Use the realm option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• clear (ospf ospf3) statistics on page 2169
List of Sample Output	show ospf statistics on page 2242 show ospf statistics logical-system all on page 2242 show ospf3 statistics on page 2243
Output Fields	Table 189 on page 2241 lists the output fields for the show (ospf ospf3) statistics command. Output fields are listed in the approximate order in which they appear.

Table 189: *show (ospf | ospf3) statistics* Output Fields

Field Name	Field Description
Packet type	Type of OSPF packet.
Total Sent/Total Received	Total number of packets sent and received.
Last 5 seconds Sent/Last 5 seconds Received	Total number of packets sent and received in the last 5 seconds.
DBDs retransmitted	Total number of database description packets retransmitted, and number retransmitted in the last 5 seconds.
LSAs flooded	Total number of link-state advertisements flooded, and number flooded in the last 5 seconds.
LSAs flooded high-prio	<p>Total number of high priority link-state advertisements flooded, and number flooded in the last 5 seconds.</p> <p>A link-state advertisement is deemed a high priority if it has changed since it was last sent.</p>
LSAs retransmitted	Total number of link-state advertisements retransmitted, and number retransmitted in the last 5 seconds.
LSAs transmitted to nbr	Total number of link-state advertisements transmitted to a neighbor, and number transmitted in the last 5 seconds.
LSAs requested	Total number of link-state advertisements requested by neighboring devices, and number requested in the last 5 seconds.
LSAs acknowledged	Total number of link-state advertisements acknowledged, and number acknowledged in the last 5 seconds.
Flood queue depth	Total number of entries in the extended queue.
Total rexmit entries	Total number of retransmission entries waiting to be sent from the OSPF routing instance.
db summaries	Total number of database description summaries waiting to be sent from the OSPF routing instance.
lsreq entries	Total number of link-state request entries waiting to be sent from the OSPF routing instance.

Table 189: show (ospf | ospf3) statistics Output Fields (continued)

Field Name	Field Description
Receive errors	<p>Number and type of receive errors. Some sample receive errors include:</p> <ul style="list-style-type: none"> • mtu mismatches • no interface found • no virtual link found • nssa mismatches • stub area mismatches • subnet mismatches <p>If there are no receive errors, the output displays none.</p>

Sample Output

show ospf statistics

```
user@host> show ospf statistics
```

Packet type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Hello	31	14	2	2
DbD	9	10	0	0
LSReq	2	2	0	0
LSUpdate	8	16	0	0
LSAck	9	9	0	0
DBDs retransmitted :			3, last 5 seconds :	0
LSAs flooded :			12, last 5 seconds :	0
LSAs flooded high-prio :			0, last 5 seconds :	0
LSAs retransmitted :			0, last 5 seconds :	0
LSAs transmitted to nbr:			3, last 5 seconds :	0
LSAs requested :			5, last 5 seconds :	0
LSAs acknowledged :			19, last 5 seconds :	0
Flood queue depth :		0		
Total rexmit entries :		0		
db summaries :		0		
lsreq entries :		0		
Receive errors:				
862 no interface found				
115923 no virtual link found				

show ospf statistics logical-system all

```
user@host> show ospf statistics logical-system all
```

```
logical-system: C
OSPF instance is not running
-----
logical-system: B
```

```

Packet type          Total
                      Sent      Received
  Hello             313740      313653
    DbD               3          2
    LSReq             1          1
LSUpdate             2752      1825
LSAck                1821      2747
                      0          0

DBDs retransmitted   :          0, last 5 seconds :          0
LSAs flooded         :        2741, last 5 seconds :          0
LSAs flooded high-prio :         10, last 5 seconds :          0
LSAs retransmitted   :          0, last 5 seconds :          0
LSAs transmitted to nbr:         2, last 5 seconds :          0
LSAs requested       :          1, last 5 seconds :          0
LSAs acknowledged    :        1831, last 5 seconds :          0

Flood queue depth    :          0
Total rexmit entries :          0
db summaries         :          0
lsreq entries        :          0

Receive errors:
  None
-----

logical-system: A

Packet type          Total
                      Sent      Received
  Hello             313698      313695
    DbD               2          3
    LSReq             1          1
LSUpdate             1825      2752
LSAck                2747      1821
                      0          0

DBDs retransmitted   :          0, last 5 seconds :          0
LSAs flooded         :        1825, last 5 seconds :          0
LSAs flooded high-prio :         10, last 5 seconds :          0
LSAs retransmitted   :          0, last 5 seconds :          0
LSAs transmitted to nbr:         1, last 5 seconds :          0
LSAs requested       :          2, last 5 seconds :          0
LSAs acknowledged    :        2748, last 5 seconds :          0

Flood queue depth    :          0
Total rexmit entries :          0
db summaries         :          0
lsreq entries        :          0

Receive errors:
  None
-----

```

show ospf3 statistics

```
user@host> show ospf3 statistics
```

```

Packet type          Total
                      Sent      Received
  Hello              0          0
    DbD              0          0

```

LSReq	0	0	0	0
LSUpdate	0	0	0	0
LSAck	0	0	0	0
DBDs retransmitted	:		0, last 5 seconds :	0
LSAs flooded	:		0, last 5 seconds :	0
LSAs flooded high-prio	:		0, last 5 seconds :	0
LSAs retransmitted	:		0, last 5 seconds :	0
LSAs transmitted to nbr:			0, last 5 seconds :	0
LSAs requested	:		0, last 5 seconds :	0
LSAs acknowledged	:		0, last 5 seconds :	0
Flood queue depth	:	0		
Total rexmit entries	:	0		
db summaries	:	0		
lsreq entries	:	0		
Receive errors:				
None				

CHAPTER 25

Protocol-Independent Routing Operational Commands

- `show as-path`
- `show as-path domain`
- `show as-path summary`
- `show route`
- `show route active-path`
- `show route advertising-protocol`
- `show route all`
- `show route aspath-regex`
- `show route best`
- `show route brief`
- `show route ccc`
- `show route community`
- `show route community-name`
- `show route damping`
- `show route detail`
- `show route exact`
- `show route export`
- `show route export vrf-target`
- `show route extensive`
- `show route flow validation`
- `show route forwarding-table`
- `show route forwarding-table interface-name`
- `show route hidden`
- `show route inactive-path`
- `show route inactive-prefix`
- `show route instance`

- `show route label`
- `show route label-switched-path`
- `show route localization`
- `show route martians`
- `show route match-prefix`
- `show route next-hop`
- `show route no-community`
- `show route output`
- `show route protocol`
- `show route range`
- `show route receive-protocol`
- `show route resolution`
- `show route snooping`
- `show route source-gateway`
- `show route summary`
- `show route table`
- `show route terse`

show as-path

List of Syntax	Syntax on page 2247 Syntax (EX Series Switches) on page 2247
Syntax	<pre>show as-path <brief detail> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show as-path <brief detail></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	<p>Display the distribution of autonomous system (AS) paths that the local routing device is using (usually through the routing table). Use this command to debug problems for AS paths and to understand how AS paths have been manipulated through a policy (through the as-path-prepend action) or through aggregation.</p> <p>AS paths are stored in a hash table. A hash table is one method for fast lookup. Each entry in the table is called a bucket. Junos OS computes a hash value that indicates in which bucket the AS path is stored. The AS paths are dispersed among the hash buckets so that a manageable number of AS paths is stored in each bucket. Only unique AS paths are stored. Duplicate AS paths increase a reference count, but do not increase the number of AS paths stored in the hash table.</p>
Options	<p>none—Display basic information about AS paths that the local routing device is using (same as brief).</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show as-path summary on page 2255
List of Sample Output	show as-path on page 2248 show as-path detail on page 2249

Output Fields Table 190 on page 2248 lists the output fields for the **show as-path** command. Output fields are listed in the approximate order in which they appear.

Table 190: show as-path Output Fields

Field Name	Field Description	Level of Output
Total AS paths	Total number of AS paths.	brief none
Bucket	Bucket number.	All levels
Count	Number of AS path entries in this bucket.	All levels
AS path	AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated: <ul style="list-style-type: none"> • I—IGP. • E—EGP. • ?—Incomplete; typically, the AS path was aggregated. • Atomic—Route is an aggregate of several route prefixes. • Aggregator—Routing device has summarized a range of prefixes. 	All levels
domain	Number of independent AS domains. The AS paths of an independent AS domain are not shared with the AS paths and AS path attributes of other domains, including the master routing instance domain.	detail
neighbor as	AS peer address.	detail
length	Length of the AS path.	detail
segments	Length of the AS segment descriptor.	detail
unique-count	Number of unique autonomous systems (ASs) present in the AS path	detail
references	Path reference count.	detail

Sample Output

show as-path

```
user@host> show as-path
```

```
Total AS paths: 30382
Bucket 0      Count: 36
  I
  14203 2914 174 31752 I
  14203 2914 701 21512 I
  14203 2914 1239 26632 I
  14203 2914 1239 29704 I
  14203 2914 4323 10248 I
  14203 2914 4766 23560 I
  14203 2914 6395 32776 I
  14203 2914 7911 11272 I
```

```

14203 2914 12180 18440 I
14203 2914 17408 17416 I
14203 2914 701 702 24586 I
14203 2914 1239 4657 9226 I
14203 2914 1239 7132 16394 I
14203 2914 1299 8308 34826 I
14203 2914 3320 5603 28682 I
14203 2914 3491 1680 33802 I
14203 2914 3549 7908 27658 I
14203 2914 3549 20804 30730 I
14203 2914 7018 2687 9226 I
14203 2914 174 9318 9318 23564 I
14203 2914 701 3786 3786 23564 I
14203 2914 701 4761 4795 9228 I
14203 2914 1239 7132 5673 18444 I
14203 2914 3491 20485 24588 24588 I
14203 2914 5511 2200 1945 2060 I
14203 2914 7911 14325 14325 14348 I
14203 2914 701 4637 9230 9230 9230 I
14203 2914 6395 14 14 14 14 I
14203 2914 9299 6163 6163 6163 6163 9232 I
14203 2914 3356 3356 3356 3356 3356 11955 21522 I
14203 2914 9837 9837 9219 I Aggregator: 9219 202.27.91.253
14203 2914 174 30209 30222 30222 30222 ?
14203 2914 1299 5377 I (Atomic) Aggregator: 5377 193.219.192.22
14203 2914 4323 36097 I (Atomic) Aggregator: 36097 216.69.252.254
14203 2914 209 2516 17676 23813 I (Atomic) Aggregator: 23813 219.127.233.66
Bucket 1    Count: 28
14203 2914 35847 I
14203 2914 174 19465 I
14203 2914 174 35849 I
14203 2914 2828 32777 I
14203 2914 4323 14345 I
14203 2914 4323 29705 I
14203 2914 6395 32777 I
...

```

show as-path detail

```
user@host> show as-path detail
```

```

Total AS paths: 30410
Bucket 0    Count: 36
  AS path: I
    domain 0, length 0, segments 0, unique-count 0, references 54
  AS path: 14203 2914 174 31752 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 701 21512 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 1239 26632 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 5,
references 2
  AS path: 14203 2914 1239 29704 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 4323 10248 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 6,

```

```
references 2
  AS path: 14203 2914 4766 23560 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 6395 32776 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 5,
references 3
  AS path: 14203 2914 7911 11272 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 6,
references 2
  AS path: 14203 2914 12180 18440 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 3,
references 3
  AS path: 14203 2914 17408 17416 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 8,
references 3
  AS path: 14203 2914 701 702 24586 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 4,
references 3
  AS path: 14203 2914 1239 4657 9226 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 5,
references 7
  AS path: 14203 2914 1239 7132 16394 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 7,
references 2
  AS path: 14203 2914 1299 8308 34826 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 8,
references 2
  AS path: 14203 2914 3320 5603 28682 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 3491 1680 33802 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 14,
references 2
  AS path: 14203 2914 3549 7908 27658 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 6,
references 2
  AS path: 14203 2914 3549 20804 30730 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 24,
references 2
  AS path: 14203 2914 7018 2687 9226 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 4,
references 3
  AS path: 14203 2914 174 9318 9318 23564 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 701 3786 3786 23564 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 701 4761 4795 9228 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 14
  AS path: 14203 2914 1239 7132 5673 18444 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 3491 20485 24588 24588 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 4
  AS path: 14203 2914 5511 2200 1945 2060 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
```

```
references 2
  AS path: 14203 2914 7911 14325 14325 14348 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 701 4637 9230 9230 9230 I
    domain 1, neighbor as: 14203, length 7, segments 1, unique-count 4,
references 3
  AS path: 14203 2914 6395 14 14 14 14 I
    domain 1, neighbor as: 14203, length 7, segments 1, unique-count 4,
references 10
...
```

show as-path domain

List of Syntax [Syntax on page 2252](#)
[Syntax \(EX Series Switches\) on page 2252](#)

Syntax `show as-path domain`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switches) `show as-path domain`

Release Information Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 9.0 for EX Series switches.

Description Display autonomous system (AS) path domain information.

Options **none**—(Optional) Display AS path domain information for all routing instances.
logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show as-path domain on page 2254](#)

Output Fields [Table 191 on page 2252](#) lists the output fields for the **show as-path domain** command. Output fields are listed in the approximate order in which they appear

Table 191: show as-path domain Output Fields

Field Name	Field Description
Domain	Number of independent AS domains. The AS paths of an independent AS domain are not shared with the AS paths and AS path attributes of other domains, including the master routing instance domain.
Primary	Primary AS number.
References	Path reference count.
Number Paths	Number of known AS paths.

Table 191: show as-path domain Output Fields (continued)

Field Name	Field Description
Flags	Information about the AS path: <ul style="list-style-type: none">• ASLoop—Path contains an AS loop.• Atomic—Path includes the ATOMIC_AGGREGATE path attribute.• Local—Path was created by local aggregation.• Master—Path was created by the master routing instance.
Local AS	AS number of the local routing device.
Loops	How many times this AS number can appear in an AS path.

Sample Output

show as-path domain

```
user@host> show as-path domain
```

```
Domain: 1          Primary: 10458
References:          3 Paths:    30383
Flags: Master
Local AS: 10458  Loops: 1
```

show as-path summary

List of Syntax [Syntax on page 2255](#)
[Syntax \(EX Series Switches\) on page 2255](#)

Syntax `show as-path summary`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switches) `show as-path summary`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.

Description Display autonomous system (AS) path summary information.

AS paths are stored in a hash table. A hash table is one method for fast lookup. Each entry in the table is called a bucket. Junos OS computes a hash value that indicates in which bucket the AS path is stored. The AS paths are dispersed among the hash buckets so that a manageable number of AS paths is stored in each bucket. Only unique AS paths are stored. Duplicate AS paths increase a reference count, but do not increase the number of AS paths stored in the hash table.

Options **none**—(Optional) Display AS path summary information for all routing instances.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation

- [show as-path on page 2247](#)

List of Sample Output [show as-path summary on page 2256](#)

Output Fields [Table 192 on page 2255](#) lists the output fields for the **show as-path summary** command. Output fields are listed in the approximate order in which they appear.

Table 192: show as-path summary Output Fields

Field Name	Field Description
AS Paths	Number of AS paths.
Buckets	Number of hash buckets in use.

Table 192: show as-path summary Output Fields (continued)

Field Name	Field Description
Max	Maximum number of AS path entries per bucket.
Min	Minimum number of AS path entries per bucket.
Avg	Average number of AS path entries per bucket.
Std deviation	Standard deviation of AS path entries per bucket.

Sample Output

show as-path summary

```
user@host> show as-path summary
```

AS Paths	Buckets	Max	Min	Avg	Std deviation
30425	1024	95	12	29	6.481419

show route

List of Syntax [Syntax on page 2257](#)
 [Syntax \(EX Series Switches\) on page 2257](#)

Syntax

```
show route
<all>
<destination-prefix>
<logical-system (all | logical-system-name)>
<private>
<te-ipv4-prefix-ip te-ipv4-prefix-ip>
<te-ipv4-prefix-node-ip te-ipv4-prefix-node-ip>
<te-ipv4-prefix-node-iso te-ipv4-prefix-node-iso>
```

Syntax (EX Series Switches)

```
show route
<all>
<destination-prefix>
<private>
```

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Option **private** introduced in Junos OS Release 9.5.
 Option **private** introduced in Junos OS Release 9.5 for EX Series switches.
 Command introduced in Junos OS Release 15.1R3 on MX Series routers for enhanced subscriber management.
 Option **display-client-data** introduced in Junos OS Release 16.2R1 on MX80, MX104, MX240, MX480, MX960, MX2010, MX2020, vMX Series routers.
 Options **te-ipv4-prefix-ip**, **te-ipv4-prefix-node-ip**, and **te-ipv4-prefix-node-iso** introduced in Junos OS Release 17.2R1 on MX Series and PTX Series.

Description Display the active entries in the routing tables.

Options **none**—Display brief information about all active entries in the routing tables.

all—(Optional) Display information about all routing tables, including private, or internal, routing tables.

destination-prefix—(Optional) Display active entries for the specified address or range of addresses.

logical-system (all | logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.

private—(Optional) Display information only about all private, or internal, routing tables.

display-client-data —(Optional) Display client id and cookie information for routes installed by the routing protocol process client applications.

te-ipv4-prefix-ip *te-ipv4-prefix-ip*—(Optional) Display IPv4 address of the traffic-engineering prefix, without the mask length if present in the routing table.

te-ipv4-prefix-node-ip *te-ipv4-prefix-node-ip*—(Optional) Display all prefixes that have originated from the traffic-engineering node. You can filter IPv4 node addresses from the traffic-engineered routes in the **lsdist.0** table.

te-ipv4-prefix-node-iso *te-ipv4-prefix-node-iso*—(Optional) Display all prefixes that have originated from the traffic-engineering node. You can filter IPv4 routes with the specified ISO circuit ID from the **lsdist.0** table.

Required Privilege Level

view

Related Documentation

- *Understanding IS-IS Configuration*
- *Example: Configuring IS-IS*
- *Examples: Configuring Internal BGP Peering*
- *Examples: Configuring External BGP Peering*
- *Examples: Configuring OSPF Routing Policy*
- *Verifying and Managing Junos OS Enhanced Subscriber Management*

List of Sample Output

[show route on page 2261](#)
[show route \(VPN\) on page 2262](#)
[show route \(with Destination Prefix\) on page 2262](#)
[show route destination-prefix detail on page 2262](#)
[show route extensive on page 2262](#)
[show route extensive \(ECMP\) on page 2263](#)
[show route extensive \(Multipath Resolution\) on page 2263](#)
[show route \(Enhanced Subscriber Management\) on page 2268](#)
[show route \(IPv6 Flow Specification\) on page 2268](#)
[show route display-client-data detail on page 2268](#)
[show route te-ipv4-prefix-ip on page 2269](#)
[show route te-ipv4-prefix-ip extensive on page 2270](#)
[show route te-ipv4-prefix-node-iso on page 2272](#)
[show route te-ipv4-prefix-node-iso extensive on page 2273](#)
[show route te-ipv4-prefix-node-iso detail on page 2275](#)

Output Fields

[Table 193 on page 2258](#) describes the output fields for the **show route** command. Output fields are listed in the approximate order in which they appear.

Table 193: show route Output Fields

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).

Table 193: show route Output Fields (continued)

Field Name	Field Description
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.
<i>number routes</i>	<p>Number of routes in the routing table and total number of routes in the following states:</p> <ul style="list-style-type: none"> • active (routes that are active). • holddown (routes that are in the pending state before being declared inactive). A holddown route was once the active route and is no longer the active route. The route is in the holddown state because a protocol still has interest in the route, meaning that the interest bit is set. A protocol might have its interest bit set on the previously active route because the protocol is still advertising the route. The route will be deleted after all protocols withdraw their advertisement of the route and remove their interest bit. A persistent holddown state often means that the interested protocol is not releasing its interest bit properly. <p>However, if you have configured advertisement of multiple routes (with the add-path or advertise-inactive statement), the holddown bit is most likely set because BGP is advertising the route as an active route. In this case, you can ignore the holddown state because nothing is wrong.</p> <ul style="list-style-type: none"> • hidden (routes that are not used because of a routing policy).
<i>destination-prefix</i>	<p>Route destination (for example:10.0.0.1/24). Sometimes the route information is presented in another format, such as:</p> <ul style="list-style-type: none"> • MPLS-label (for example, 80001). • interface-name (for example, ge-1/0/2). • neighbor-address:control-word-status:encapsulation type:vc-id:source (Layer 2 circuit only. For example, 10.1.1.195:NoCtrlWord:1:1:Local/96): <ul style="list-style-type: none"> • neighbor-address—Address of the neighbor. • control-word-status—Whether the use of the control word has been negotiated for this virtual circuit: NoCtrlWord or CtrlWord. • encapsulation type—Type of encapsulation, represented by a number: (1) Frame Relay DLCI, (2) ATM AAL5 VCC transport, (3) ATM transparent cell transport, (4) Ethernet, (5) VLAN Ethernet, (6) HDLC, (7) PPP, (8) ATM VCC cell transport, (10) ATM VPC cell transport. • vc-id—Virtual circuit identifier. • source—Source of the advertisement: Local or Remote.
<i>[protocol, preference]</i>	<p>Protocol from which the route was learned and the preference value for the route.</p> <ul style="list-style-type: none"> • +—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table. • -—A hyphen indicates the last active route. • *—An asterisk indicates that the route is both the active and the last active route. An asterisk before a to line indicates the best subpath to the route. <p>In every routing metric except for the BGP LocalPref attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the LocalPref value in the Preference2 field. For example, if the LocalPref value for Route 1 is 100, the Preference2 value is -101. If the LocalPref value for Route 2 is 155, the Preference2 value is -156. Route 2 is preferred because it has a higher LocalPref value and a lower Preference2 value.</p>
<i>weeks:days hours:minutes:seconds</i>	How long the route been known (for example, 2w4d 13:11:14 , or 2 weeks, 4 days, 13 hours, 11 minutes, and 14 seconds).

Table 193: show route Output Fields (continued)

Field Name	Field Description
metric	Cost value of the indicated route. For routes within an AS, the cost is determined by the IGP and the individual protocol metrics. For external routes, destinations, or routing domains, the cost is determined by a preference value.
localpref	Local preference value included in the route.
from	Interface from which the route was received.
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> • I—IGP. • E—EGP. • ?—Incomplete; typically, the AS path was aggregated. <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> • []—Brackets enclose the local AS number associated with the AS path if more than one AS number is configured on the routing device, or if AS path prepending is configured. • { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order. • ()—Parentheses enclose a confederation. • ([])—Parentheses and brackets enclose a confederation set. <p>NOTE: In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>
encapsulated	Extended next-hop encoding capability enabled for the specified BGP community for routing IPv4 traffic over IPv6 tunnels. When BGP receives routes without the tunnel community, IPv4-Over IPv6 tunnels are not created and BGP routes are resolved without encapsulation.
Route Labels	Stack of labels carried in the BGP route update.
validation-state	<p>(BGP-learned routes) Validation status of the route:</p> <ul style="list-style-type: none"> • Invalid—Indicates that the prefix is found, but either the corresponding AS received from the EBGP peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database. • Unknown—Indicates that the prefix is not among the prefixes or prefix ranges in the database. • Unverified—Indicates that the origin of the prefix is not verified against the database. This is because the database got populated and the validation is not called for in the BGP import policy, although origin validation is enabled, or the origin validation is not enabled for the BGP peers. • Valid—Indicates that the prefix and autonomous system pair are found in the database.
to	<p>Next hop to the destination. An angle bracket (>) indicates that the route is the selected route.</p> <p>If the destination is Discard, traffic is dropped.</p>

Table 193: show route Output Fields (continued)

Field Name	Field Description
via	<p>Interface used to reach the next hop. If there is more than one interface available to the next hop, the interface that is actually used is followed by the word Selected. This field can also contain the following information:</p> <ul style="list-style-type: none"> • Weight—Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible. • Balance—Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a routing device is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing. • lsp-path-name—Name of the LSP used to reach the next hop. • label-action—MPLS label and operation occurring at the next hop. The operation can be pop (where a label is removed from the top of the stack), push (where another label is added to the label stack), or swap (where a label is replaced by another label). For VPNs, expect to see multiple push operations, corresponding to the inner and outer labels required for VPN routes (in the case of a direct PE-to-PE connection, the VPN route would have the inner label push only).
Private unicast	(Enhanced subscriber management for MX Series routers) Indicates that an access-internal route is managed by enhanced subscriber management. By contrast, access-internal routes <i>not</i> managed by enhanced subscriber management are displayed with associated next-hop and media access control (MAC) address information.
balance	Distribution of the load based on the underlying operational interface bandwidth for equal-cost multipaths (ECMP) across the nexthop gateways in percentages.

Sample Output

show route

```

user@host> show route

inet.0: 11 destinations, 12 routes (11 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1:65500:1:10.0.0.20/240
    *[MVPN/70] 19:53:41, metric2 1
    Indirect
1:65500:1:10.0.0.40/240
    *[BGP/170] 19:53:29, localpref 100, from 10.0.0.30
    AS path: I
    > to 10.0.24.4 via lt-0/3/0.24, label-switched-path toD
    [BGP/170] 19:53:26, localpref 100, from 10.0.0.33
    AS path: I
    > to 10.0.24.4 via lt-0/3/0.24, label-switched-path toD
1:65500:1:10.0.0.60/240
    *[BGP/170] 19:53:29, localpref 100, from 10.0.0.30
    AS path: I
    > to 10.0.28.8 via lt-0/3/0.28, label-switched-path toF
    [BGP/170] 19:53:25, localpref 100, from 10.0.0.33
    AS path: I
    > to 10.0.28.8 via lt-0/3/0.28, label-switched-path toF

```

show route (VPN)

The following sample output shows a VPN route with composite next hops enabled. The first **Push** operation corresponds to the outer label. The second **Push** operation corresponds to the inner label.

```
user@host> show route 192.0.2.0
```

```
13979:665001.inet.0: 871 destinations, 3556 routes (871 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.0/24      [BGP/170] 00:28:32, localpref 100, from 10.9.9.160
                  AS path: 13980 ?, validation-state: unverified
                  > to 10.100.0.42 via ae2.0, Push 16, Push 300368(top)
                  [BGP/170] 00:28:28, localpref 100, from 10.9.9.169
                  AS path: 13980 ?, validation-state: unverified
                  > to 10.100.0.42 via ae2.0, Push 126016, Push 300368(top)
                  #[Multipath/255] 00:28:28, metric2 102
                  > to 10.100.0.42 via ae2.0, Push 16, Push 300368(top)
                  to 10.100.0.42 via ae2.0, Push 16, Push 300368(top)
```

show route (with Destination Prefix)

```
user@host> show route 192.168.0.0/12
```

```
inet.0: 10 destinations, 10 routes (9 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.0.0/12    *[Static/5] 2w4d 12:54:27
                  > to 192.168.167.254 via fxp0.0
```

show route destination-prefix detail

```
user@host> show route 198.51.100.0 detail
```

```
inet.0: 15 destinations, 20 routes (15 active, 0 holddown, 0 hidden)
198.51.100.0/24 (2 entries, 2 announced)
  *BGP      Preference: 170/-101
    ...
    BGP-Static Preference: 4294967292
      Next hop type: Discard
      Address: 0x9041ae4
      Next-hop reference count: 2
      State: <NoReadvrt Int Ext AlwaysFlash>
    Inactive reason: Route Preference
    Local AS: 200
    Age: 4d 1:40:40
    Validation State: unverified
    Task: RT
    Announcement bits (1): 2-BGP_RT_Background
    AS path: 4 5 6 I
```

show route extensive

```
user@host> show route extensive
```

```

v1.mvpn.0: 5 destinations, 8 routes (5 active, 1 holddown, 0 hidden)
1:65500:1:10.0.0.40/240 (1 entry, 1 announced)
  *BGP Preference: 170/-101
    PMSI: Flags 0x0: Label[0:0:0]: PIM-SM: Sender 10.0.0.40 Group
203.0.113.1
  Next hop type: Indirect
  Address: 0x92455b8
  Next-hop reference count: 2
  Source: 10.0.0.30
  Protocol next hop: 10.0.0.40
  Indirect next hop: 2 no-forward
  State: <Active Int Ext>
    Local AS: 64510 Peer AS: 64511
  Age: 3 Metric2: 1
  Validation State: unverified
  Task: BGP_64510.10.0.0.30+179
  Announcement bits (2): 0-PIM.v1 1-mvpn global task
  AS path: I (Originator) Cluster list: 10.0.0.30
  AS path: Originator ID: 10.0.0.40
  Communities: target:64502:100 encapsulation:0L:14 Import
Accepted
  Localpref: 100
  Router ID: 10.0.0.30
  Primary Routing Table bgp.mvpn.0
  Indirect next hops: 1
    Protocol next hop: 10.0.0.40 Metric: 1
    Indirect next hop: 2 no-forward
    Indirect path forwarding next hops: 1
      Next hop type: Router
      Next hop: 10.0.24.4 via lt-0/3/0.24 weight 0x1
    10.0.0.40/32 Originating RIB: inet.3
      Metric: 1 Node path count: 1
      Forwarding nexthops: 1
        Nexthop: 10.0.24.4 via lt-0/3/0.24

```

show route extensive (ECMP)

```

user@host> show route extensive
*IS-IS Preference: 15
  Level: 1
  Next hop type: Router, Next hop index: 1048577
  Address: 0xFFFFFFFF
  Next-hop reference count: YY
  Next hop: 198.51.100.2 via ae1.0 balance 43%, selected
  Session Id: 0x141
  Next hop: 192.0.2.2 via ae0.0 balance 57%

```

show route extensive (Multipath Resolution)

```

user@host> show route extensive
inet.0: 37 destinations, 37 routes (36 active, 0 holddown, 1 hidden)
10.1.1.2/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.1.1.2/32 -> {indirect(1048574)}
  *Static Preference: 5
  Next hop type: Indirect, Next hop index: 0
  Address: 0xb39d1b0

```

```

Next-hop reference count: 2
Next hop type: Router, Next hop index: 581
Next hop: 10.1.1.2 via ge-2/0/1.0, selected
Session Id: 0x144
Next hop: 10.2.1.2 via ge-2/0/2.0, selected
Session Id: 0x145
Protocol next hop: 10.1.1.1
Indirect next hop: 0xb2b20f0 1048574 INH Session ID: 0x143
State: <Active Int Ext>
Age: 2:53 Metric2: 0
Validation State: unverified
Task: RT
Announcement bits (2): 0-KRT 2-Resolve tree 1
AS path: I
Indirect next hops: 1
  Protocol next hop: 10.1.1.1
  Indirect next hop: 0xb2b20f0 1048574 INH Session ID: 0x143

  Indirect path forwarding next hops: 2
    Next hop type: Router
    Next hop: 10.1.1.2 via ge-2/0/1.0
    Session Id: 0x144
    Next hop: 10.2.1.2 via ge-2/0/2.0
    Session Id: 0x145
10.1.1.1/32 Originating RIB: inet.0
  Node path count: 1
  Node flags: 1
  Forwarding nexthops: 2 (Merged)
  Nexthop: 10.1.1.2 via ge-2/0/1.0
  Nexthop: 10.2.1.2 via ge-2/0/2.0

```

```
user@host> show route active-path extensive
```

```
user@host> show route 198.51.100.1 active-path extensive
```

```

inet.0: 1000061 destinations, 1000082 routes (1000061 active, 0 holddown, 0 hidden)
198.51.100.1/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 198.51.100.1/32 -> {indirect(1051215)}
unicast reverse-path: 0
[ae0.0 ae1.0]
Page 0 idx 0, (group Internet-IPv4 type External) Type 1 val 0xbb2e53d8 (adv_entry)
Advertised metrics:
Nexthop: Self
AS path: [500] 410 I
Communities:
Path 198.51.100.1 from 10.0.0.11 Vector len 4. Val: 0
*BGP Preference: 170/-101
Next hop type: Indirect, Next hop index: 0
Address: 0x2e9aacdc
Next-hop reference count: 500000
Source: 10.0.0.11
Next hop type: Router, Next hop index: 0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Label operation: Push 3851, Push 25, Push 20(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 25: None; Label 20: None;
Label element ptr: 0xb5dc1780
Label parent element ptr: 0x18d48080
Label element references: 2
Label element child references: 0

```

```

Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Label operation: Push 3851, Push 25, Push 22(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 25: None; Label 22: None;
Label element ptr: 0xb5dc1700
Label parent element ptr: 0x18d41000
Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Label operation: Push 3851, Push 24, Push 48(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 24: None; Label 48: None;
Label element ptr: 0x18d40800
Label parent element ptr: 0x18d49780
Label element references: 3
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Label operation: Push 3851, Push 24, Push 49(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 24: None; Label 49: None;
Label element ptr: 0xb5dc1680
Label parent element ptr: 0x18d48f00
Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Label operation: Push 3851, Push 25, Push 21(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 25: None; Label 21: None;
Label element ptr: 0xb5dc1600
Label parent element ptr: 0x18d44d80
Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Label operation: Push 3851, Push 25, Push 25(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 25: None; Label 25: None;
Label element ptr: 0xb5dc1580
Label parent element ptr: 0x18d3da80
Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1, selected
Label operation: Push 3851, Push 24, Push 68(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 24: None; Label 68: None;
Label element ptr: 0x18d41500
Label parent element ptr: 0x18d49000
Label element references: 3
Label element child references: 0

```

```
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Label operation: Push 3851, Push 24, Push 69(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 24: None; Label 69: None;
Label element ptr: 0xb5dc1500
Label parent element ptr: 0x18d48300
Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Protocol next hop: 10.0.0.11
Label operation: Push 3851
Label TTL action: prop-ttl
Load balance label: Label 3851: None;
Indirect next hop: 0x1883e200 1051215 INH Session ID: 0xb0d
State:
Local AS: 500 Peer AS: 500
Age: 1:40:03 Metric2: 2
Validation State: unverified
Task: BGP_500.10.0.0.11
Announcement bits (5): 0-KRT 8-KRT 9-BGP_RT_Background 10-Resolve tree 5 11-Resolve
tree 8
AS path: 410 I
Accepted
Route Label: 3851
Localpref: 100
Router ID: 10.0.0.11
Indirect next hops: 1
Protocol next hop: 10.0.0.11 Metric: 2
Label operation: Push 3851
Label TTL action: prop-ttl
Load balance label: Label 3851: None;
Indirect next hop: 0x1883e200 1051215 INH Session ID: 0xb0d
Indirect path forwarding next hops (Merged): 8
Next hop type: Router
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Session Id: 0x0
10.0.0.11/32 Originating RIB: inet.3
Metric: 1 Node path count: 4
Node flags: 1
Indirect nexthops: 4
Protocol Nexthop: 10.0.0.4 Metric: 1 Push 24
Indirect nexthop: 0x1880f200 1048597 INH Session ID: 0xb0c
Path forwarding nexthops link: 0x36120400
```

```

Path inh link: 0x0
Indirect path forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
10.0.0.4/32 Originating RIB: inet.3
Metric: 1 Node path count: 1
Forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
Protocol Nexthop: 10.0.0.5 Metric: 1 Push 24
Indirect nexthop: 0x18810000 1048596 INH Session ID: 0xb0b
Path forwarding nexthops link: 0x1545be00
Path inh link: 0x0
Indirect path forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
10.0.0.5/32 Originating RIB: inet.3
Metric: 1 Node path count: 1
Forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
Protocol Nexthop: 10.0.0.6 Metric: 1 Push 25
Indirect nexthop: 0x1880e600 1048588 INH Session ID: 0xb0a
Path forwarding nexthops link: 0x3611f440
Path inh link: 0x0
Indirect path forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
10.0.0.6/32 Originating RIB: inet.3
Metric: 1 Node path count: 1
Forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
Protocol Nexthop: 10.0.0.7 Metric: 1 Push 25
Indirect nexthop: 0x1880dc00 1048586 INH Session ID: 0xb09
Path forwarding nexthops link: 0x15466d80
Path inh link: 0x0
Indirect path forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
10.0.0.7/32 Originating RIB: inet.3
Metric: 1 Node path count: 1
Forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0

```

```

Nexthop: 10.0.13.3 via ae1.0
Session Id: 0

```

show route (Enhanced Subscriber Management)

```

user@host> show route

inet.0: 41 destinations, 41 routes (40 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

198.51.100.11/24    *[Access-internal/12] 00:00:08
                   > to #0 10.0.0.1.93.65 via demux0.1073741824
198.51.100.12/24    *[Access-internal/12] 00:00:08
                   Private unicast

```

show route (IPv6 Flow Specification)

```

user@host> show route

inet6.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2001:db8::10:255:185:19/128
                   *[Direct/0] 05:11:27
                   > via lo0.0
2001:db8::11:11:11:0/120
                   *[BGP/170] 00:28:58, localpref 100
                   AS path: 2000 I, validation-state: unverified
                   > to 2001:db8::13:14:2:2 via ge-1/1/4.0
2001:db8::13:14:2:0/120*[Direct/0] 00:45:07
                   > via ge-1/1/4.0
2001:db8::13:14:2:1/128*[Local/0] 00:45:18
                   Local via ge-1/1/4.0
fe80::2a0:a50f:fc71:71d5/128
                   *[Direct/0] 05:11:27
                   > via lo0.0
fe80::5e5e:abff:feb0:933e/128
                   *[Local/0] 00:45:18
                   Local via ge-1/1/4.0

inet6flow.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2001:db8::11:11:11:10/128,* ,proto=6,dstport=80,srcport=65535/term:1
                   *[BGP/170] 00:28:58, localpref 100, from 2001:db8::13:14:2:2
                   AS path: 2000 I, validation-state: unverified
                   Fictitious
2001:db8::11:11:11:30/128,* ,icmp6-type=128,len=100,dscp=10/term:2
                   *[BGP/170] 00:20:54, localpref 100, from 2001:db8::13:14:2:2
                   AS path: 2000 I, validation-state: unverified
                   Fictitious

```

show route display-client-data detail

```

user@host> show route 198.51.100.0/24 display-client-data detail

inet.0: 59 destinations, 70 routes (59 active, 0 holddown, 0 hidden)
198.51.100.0/24 (1 entry, 1 announced)

```



```

State: <FlashAll>
*BGP-Static Preference: 5/-101
  Next hop type: Indirect, Next hop index: 0
  Address: 0xa5c2af8
  Next-hop reference count: 2
  Next hop type: Router, Next hop index: 1641
  Next hop: 192.0.2.1 via ge-2/1/1.0, selected
  Session Id: 0x160
  Protocol next hop: 192.0.2.1
  Indirect next hop: 0xa732cb0 1048621 INH Session ID: 0x17e
  State: <Active Int Ext AlwaysFlash NSR-incapable Programmed>
  Age: 3:13      Metric2: 0
  Validation State: unverified
  Announcement bits (3): 0-KRT 5-LDP 6-Resolve tree 3
  AS path: I
  Client id: 1, Cookie: 1

```

show route te-ipv4-prefix-ip

```

user@host> show route te-ipv4-prefix-ip 10.10.10.10

lsdist.0: 283 destinations, 283 routes (283 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L1:0
}/1152
      *[IS-IS/15] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0101.0101.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0202.0202.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0303.0303.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0404.0404.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0505.0505.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0606.0606.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0707.0707.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152

```

```
*[IS-IS/18] 00:01:01
Fictitious
```

show route te-ipv4-prefix-ip extensive

```
user@host>show route te-ipv4-prefix-ip 10.10.10.10 extensive
Isdist.0: 298 destinations, 298 routes (298 active, 0 holddown, 0 hidden)
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 298
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 7:58
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1000, Flags: 0x40, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0101.0101.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 298
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 7:58
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1000, Flags: 0xe0, Algo: 0>

PREFIX { Node { AS:64496 ISO:0100.0202.0202.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 298
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 7:58
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0303.0303.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
```

```

Next-hop reference count: 298
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 7:58
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0404.0404.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 298
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 7:58
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0505.0505.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 298
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 7:58
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0606.0606.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 298
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 7:58
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0707.0707.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)

```

```

*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 298
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 7:58
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 298
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 7:58
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1000, Flags: 0x40, Algo: 0

```

show route te-ipv4-prefix-node-iso

```

user@host> show route te-ipv4-prefix-node-iso 0100.0a0a.0a0a.00

Isdist.0: 283 destinations, 283 routes (283 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L1:0
}/1152
          *[IS-IS/15] 00:05:20
          Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.1.1.1/32 } ISIS-L2:0
}/1152
          *[IS-IS/18] 00:05:20
          Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.2.2.2/32 } ISIS-L2:0
}/1152
          *[IS-IS/18] 00:05:20
          Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.3.3.3/32 } ISIS-L2:0
}/1152
          *[IS-IS/18] 00:05:20
          Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.4.4.4/32 } ISIS-L2:0
}/1152
          *[IS-IS/18] 00:05:20
          Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.5.5.5/32 } ISIS-L2:0
}/1152
          *[IS-IS/18] 00:05:20
          Fictitious

```

```

Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.6.6.6/32 } ISIS-L2:0
}/1152
    *[IS-IS/18] 00:05:20
    Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.7.7.7/32 } ISIS-L2:0
}/1152
    *[IS-IS/18] 00:05:20
    Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
    *[IS-IS/18] 00:05:20
    Fictitious

```

show route te-ipv4-prefix-node-iso extensive

```

user@host> show route te-ipv4-prefix-node-iso 0100.0a0a.0a0a.00 extensive

1sdist.0: 283 destinations, 283 routes (283 active, 0 holddown, 0 hidden)
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L1:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1000, Flags: 0x40, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.1.1.1/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1001, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.2.2.2/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:

```

```

        State: <Active NotInstall>
        Local AS: 64496
        Age: 6:47
        Validation State: unverified
        Task: IS-IS
        AS path: I
        Prefix SID: 1002, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.3.3.3/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
        Level: 2
        Next hop type: Fictitious, Next hop index: 0
        Address: 0xa1a2ac4
        Next-hop reference count: 283
        Next hop:
        State: <Active NotInstall>
        Local AS: 64496
        Age: 6:47
        Validation State: unverified
        Task: IS-IS
        AS path: I
        Prefix SID: 1003, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.4.4.4/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
        Level: 2
        Next hop type: Fictitious, Next hop index: 0
        Address: 0xa1a2ac4
        Next-hop reference count: 283
        Next hop:
        State: <Active NotInstall>
        Local AS: 64496
        Age: 6:47
        Validation State: unverified
        Task: IS-IS
        AS path: I
        Prefix SID: 1004, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.5.5.5/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
        Level: 2
        Next hop type: Fictitious, Next hop index: 0
        Address: 0xa1a2ac4
        Next-hop reference count: 283
        Next hop:
        State: <Active NotInstall>
        Local AS: 64496
        Age: 6:47
        Validation State: unverified
        Task: IS-IS
        AS path: I
        Prefix SID: 1005, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.6.6.6/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
        Level: 2

```

```

Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 283
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 6:47
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1006, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.7.7.7/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1007, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1000, Flags: 0x40, Algo: 0

```

show route te-ipv4-prefix-node-iso detail

```

user@host> show route te-ipv4-prefix-node-iso 0100.0a0a.0a0a.00 detail

Isdist.0: 283 destinations, 283 routes (283 active, 0 holddown, 0 hidden)
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L1:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496

```

```

Age: 6:54
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1000, Flags: 0x40, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.1.1.1/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:54
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1001, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.2.2.2/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:54
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1002, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.3.3.3/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:54
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1003, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.4.4.4/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4

```



```

Next-hop reference count: 283
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 6:54
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1004, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.5.5.5/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 283
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 6:54
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1005, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.6.6.6/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 283
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 6:54
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1006, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.7.7.7/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 283
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 6:54
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1007, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)

```

```
*IS-IS Preference: 18
      Level: 2
      Next hop type: Fictitious, Next hop index: 0
      Address: 0xa1a2ac4
      Next-hop reference count: 283
      Next hop:
      State: <Active NotInstall>
      Local AS: 64496
      Age: 6:54
      Validation State: unverified
      Task: IS-IS
      AS path: I
      Prefix SID: 1000, Flags: 0x40, Algo: 0
```

show route active-path

List of Syntax	Syntax on page 2279 Syntax (EX Series Switches) on page 2279
Syntax	<pre>show route active-path <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route active-path <brief detail extensive terse></pre>
Release Information	<p>Command introduced in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Display all active routes for destinations. An active route is a route that is selected as the best path. Inactive routes are not displayed.
Options	<p>none—Display all active routes.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route active-path on page 2279 show route active-path brief on page 2280 show route active-path detail on page 2280 show route active-path extensive on page 2281 show route active-path terse on page 2283
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route active-path

```
user@host> show route active-path
```

```
inet.0: 7 destinations, 7 routes (6 active, 0 holddown, 1 hidden)
```

```

+ = Active Route, - = Last Active, * = Both

10.255.70.19/32    *[Direct/0] 21:33:52
                  > via lo0.0
10.255.71.50/32    *[IS-IS/15] 00:18:13, metric 10
                  > to 172.16.100.1 via so-2/1/3.0
172.16.100.1/24    *[Direct/0] 00:18:36
                  > via so-2/1/3.0
172.16.100.1/32    *[Local/0] 00:18:41
                  Local via so-2/1/3.0
192.168.64.0/21    *[Direct/0] 21:33:52
                  > via fxp0.0
192.168.70.19/32   *[Local/0] 21:33:52
                  Local via fxp0.0

```

show route active-path brief

The output for the **show route active-path brief** command is identical to that for the **show route active-path** command. For sample output, see [show route active-path on page 2279](#).

show route active-path detail

```
user@host> show route active-path detail
```

```

inet.0: 7 destinations, 7 routes (6 active, 0 holddown, 1 hidden)

10.255.70.19/32 (1 entry, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via lo0.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:37:10
    Task: IF
    Announcement bits (3): 2-IS-IS 5-Resolve tree 2 6-Resolve tree 3

    AS path: I

10.255.71.50/32 (1 entry, 1 announced)
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Router, Next hop index: 397
    Next-hop reference count: 4
    Next hop: 172.16.100.1 via so-2/1/3.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:31 Metric: 10
    Task: IS-IS
    Announcement bits (4): 0-KRT 2-IS-IS 5-Resolve tree 2 6-Resolve
tree 3

    AS path: I

172.16.100.0/24 (1 entry, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via so-2/1/3.0, selected

```

```

        State: <Active Int>
        Local AS: 200
        Age: 21:54
        Task: IF
        Announcement bits (3): 2-IS-IS 5-Resolve tree 2 6-Resolve tree 3

        AS path: I

172.16.100.1/32 (1 entry, 1 announced)
  *Local Preference: 0
    Next hop type: Local
    Next-hop reference count: 11
    Interface: so-2/1/3.0
    State: <Active NoReadvrt Int>
    Local AS: 200
    Age: 21:59
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

192.168.64.0/21 (1 entry, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via fxp0.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:37:10
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

192.168.70.19/32 (1 entry, 1 announced)
  *Local Preference: 0
    Next hop type: Local
    Next-hop reference count: 11
    Interface: fxp0.0
    State: <Active NoReadvrt Int>
    Local AS: 200
    Age: 21:37:10
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

```

show route active-path extensive

```
user@host> show route active-path extensive
```

```

inet.0: 7 destinations, 7 routes (6 active, 0 holddown, 1 hidden)
10.255.70.19/32 (1 entry, 1 announced)
TSI:
IS-IS level 1, LSP fragment 0
IS-IS level 2, LSP fragment 0
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via lo0.0, selected
    State: <Active Int>
    Local AS: 200

```

```

Age: 21:39:47
Task: IF
Announcement bits (3): 2-IS-IS 5-Resolve tree 2 6-Resolve tree 3

AS path: I

10.255.71.50/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.255.71.50/32 -> {172.16.100.1}
IS-IS level 2, LSP fragment 0
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Router, Next hop index: 397
    Next-hop reference count: 4
    Next hop: 172.16.100.1 via so-2/1/3.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 24:08 Metric: 10
    Task: IS-IS
    Announcement bits (4): 0-KRT 2-IS-IS 5-Resolve tree 2 6-Resolve
tree 3
    AS path: I

172.16.100.1/24 (1 entry, 1 announced)
TSI:
IS-IS level 1, LSP fragment 0
IS-IS level 2, LSP fragment 0
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via so-2/1/3.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 24:31
    Task: IF
    Announcement bits (3): 2-IS-IS 5-Resolve tree 2 6-Resolve tree 3

AS path: I

172.16.100.1/32 (1 entry, 1 announced)
  *Local Preference: 0
    Next hop type: Local
    Next-hop reference count: 11
    Interface: so-2/1/3.0
    State: <Active NoReadvrt Int>
    Local AS: 200
    Age: 24:36
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

192.168.64.0/21 (1 entry, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via fxp0.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:39:47
    Task: IF

```

```

Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
AS path: I
192.168.70.19/32 (1 entry, 1 announced)
  *Local Preference: 0
    Next hop type: Local
    Next-hop reference count: 11
    Interface: fxp0.0
    State: <Active NoReadvrt Int>
    Local AS: 200
    Age: 21:39:47
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

```

show route active-path terse

```
user@host> show route active-path terse
```

```
inet.0: 7 destinations, 7 routes (6 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
*	10.255.70.19/32	D	0			>100.0	
*	10.255.71.50/32	I	15	10		>172.16.100.1.	
*	172.16.100.0/24	D	0			>so-2/1/3.0	
*	172.16.100.2/32	L	0			Local	
*	192.168.64.0/21	D	0			>fxp0.0	
*	192.168.70.19/32	L	0			Local	

show route advertising-protocol

Syntax	<code>show route advertising-protocol <i>protocol neighbor-address</i></code> <code><brief detail extensive terse></code> <code><logical-system (all <i>logical-system-name</i>)></code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display the routing information as it has been prepared for advertisement to a particular neighbor of a particular dynamic routing protocol.
Options	<p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><i>neighbor-address</i>—Address of the neighboring router to which the route entry is being transmitted.</p> <p><i>protocol</i>—Protocol transmitting the route:</p> <ul style="list-style-type: none">• bgp—Border Gateway Protocol• dvmrp—Distance Vector Multicast Routing Protocol• msdp—Multicast Source Discovery Protocol• pim—Protocol Independent Multicast• rip—Routing Information Protocol• ripng—Routing Information Protocol next generation
Additional Information	Routes displayed are routes that the routing table has exported into the routing protocol and that have been filtered by the associated protocol's export routing policy statements. Starting with Junos OS Release 13.3, you can display the routing instance table foo for any address family, on a VPN route reflector, or a VPN AS boundary router that is advertising local VPN routes. However, If you do not specify the table in the command, the output displays each VRF prefix twice.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• <i>Example: Configuring the MED Attribute That Determines the Exit Point in an AS</i>
List of Sample Output	show route advertising-protocol bgp (Layer 3 VPN) on page 2287 show route advertising-protocol bgp detail on page 2287

[show route advertising-protocol bgp detail \(Aggregate Extended Community Bandwidth\) on page 2287](#)
[show route advertising-protocol bgp detail \(Labeled Unicast\) on page 2288](#)
[show route advertising-protocol bgp detail \(Layer 2 VPN\) on page 2288](#)
[show route advertising-protocol bgp detail \(Layer 3 VPN\) on page 2288](#)
[show route advertising-protocol bgp extensive all \(Next Hop Self with RIB-out IP Address\) on page 2289](#)

Output Fields Table 194 on page 2285 lists the output fields for the **show route advertising-protocol** command. Output fields are listed in the approximate order in which they appear.

Table 194: show route advertising-protocol Output Fields

Field Name	Field Description	Level of Output
<i>routing-table-name</i>	Name of the routing table—for example, inet.0.	All levels
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.	All levels
<i>number routes</i>	Number of routes in the routing table and total number of routes in the following states: <ul style="list-style-type: none"> • active (routes that are active) • holddown (routes that are in the pending state before being declared inactive) • hidden (routes that are not used because of a routing policy) 	All levels
Prefix	Destination prefix.	brief none
<i>destination-prefix (entry, announced)</i>	Destination prefix. The entry value is the number of routes for this destination, and the announced value is the number of routes being announced for this destination.	detail extensive
BGP group and type	BGP group name and type (Internal or External).	detail extensive
Route Distinguisher	Unique 64-bit prefix augmenting each IP subnet.	detail extensive
Advertised Label	Incoming label advertised by the Label Distribution Protocol (LDP). When an IP packet enters a label-switched path (LSP), the ingress router examines the packet and assigns it a label based on its destination, placing the label in the packet's header. The label transforms the packet from one that is forwarded based on its IP routing information to one that is forwarded based on information associated with the label.	detail extensive
Label-Base, range	First label in a block of labels and label block size. A remote PE router uses this first label when sending traffic toward the advertising PE router.	detail extensive
VPN Label	Virtual private network (VPN) label. Packets are sent between CE and PE routers by advertising VPN labels. VPN labels transit over either a Resource Reservation Protocol (RSVP) or a Label Distribution Protocol (LDP) label-switched path (LSP) tunnel.	detail extensive

Table 194: *show route advertising-protocol* Output Fields (continued)

Field Name	Field Description	Level of Output
Nexthop	<p>Next hop to the destination. An angle bracket (>) indicates that the route is the selected route.</p> <p>If the next-hop advertisement to the peer is Self, and the RIB-out next hop is a specific IP address, the RIB-out IP address is included in the extensive output. See show route advertising-protocol bgp extensive all (Next Hop Self with RIB-out IP Address) on page 2289.</p>	All levels
MED	Multiple exit discriminator value included in the route.	brief
Lclpref or Localpref	Local preference value included in the route.	All levels
Queued	When BGP route prioritization is enabled and a route is present in a priority queue, this shows which priority queue the route is in.	All levels except brief
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> • I—IGP. • E—EGP. • ?—Incomplete; typically, the AS path was aggregated. <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> • []—Brackets enclose the local AS number associated with the AS path if configured on the router, or if AS path prepending is configured. • { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order. • ()—Parentheses enclose a confederation. • ([])—Parentheses and brackets enclose a confederation set. <p>NOTE: In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>	All levels
Route Labels	Stack of labels carried in the BGP route update.	detail extensive
Cluster list	(For route reflected output only) Cluster ID sent by the route reflector.	detail extensive
Originator ID	(For route reflected output only) Address of routing device that originally sent the route to the route reflector.	detail extensive
Communities	Community path attribute for the route. See the output field table for the show route detail command for all possible values for this field.	detail extensive
AIGP	Accumulated interior gateway protocol (AIGP) BGP attribute.	detail extensive

Table 194: show route advertising-protocol Output Fields (continued)

Field Name	Field Description	Level of Output
Attrset AS	Number, local preference, and path of the autonomous system (AS) that originated the route. These values are stored in the Attrset attribute at the originating router.	detail extensive
Layer2-info:encaps	Layer 2 encapsulation (for example, VPLS).	detail extensive
control flags	Control flags: none or Site Down .	detail extensive
mtu	Maximum transmission unit (MTU) of the Layer 2 circuit.	detail extensive

Sample Output

show route advertising-protocol bgp (Layer 3 VPN)

```
user@host> show route advertising-protocol bgp 10.255.14.171

VPN-A.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.14.172/32 Self              1      100 I
VPN-B.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.14.181/32 Self              2      100 I
```

show route advertising-protocol bgp detail

```
user@host> show route advertising-protocol bgp 111.222.1.3 detail

bgp20.inet.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
111.222.1.11/32 (1 entry, 1 announced)
  BGP group pe-pe type Internal
  Route Distinguisher: 111.255.14.11:69
  Advertised Label: 100000
  next hop: Self
  Localpref: 100
  AS path: 2 I
  Communities: target:69:20
  AIGP 210
111.8.0.0/16 (1 entry, 1 announced)
  BGP group pe-pe type Internal
  Route Distinguisher: 111.255.14.11:69
  Advertised Label: 100000
  Next hop: Self
  Localpref: 100
  AS path: 2 I
  Communities: target:69:20
  AIGP 210
```

show route advertising-protocol bgp detail (Aggregate Extended Community Bandwidth)

```
user@host> show route advertising-protocol bgp 10.0.4.2 10.0.2.0/30 detail

inet.0: 20 destinations, 26 routes (20 active, 0 holddown, 0 hidden)
* 10.0.2.0/30 (2 entries, 1 announced)
```

```
BGP group external2 type External
  Nexthop: Self
  AS path: [65000] 65001 I
  Communities: bandwidth:65000:80000000
```

show route advertising-protocol bgp detail (Labeled Unicast)

```
user@host>show route advertising bgp 1.1.1.3 detail

inet.0: 69 destinations, 70 routes (69 active, 0 holddown, 0 hidden)
* 1.1.1.8/32 (2 entries, 2 announced)
BGP group ibgp type Internal
Route Labels: 1000123(top) 1000124 1000125 1000126
Nexthop: 1.1.1.4
MED: 7
Localpref: 100
AS path: [5] I
Cluster ID: 3.3.3.3
Originator ID: 1.1.1.1
Entropy label capable
inet6.0: 26 destinations, 28 routes (26 active, 0 holddown, 0 hidden)
* 100::1/128 (2 entries, 1 announced)
BGP group ibgp type Internal
Labels: 1000123(top) 1000124 1000125 1000126
Nexthop: ::ffff:1.1.1.4
Localpref: 100
AS path: [5] I
Cluster ID: 3.3.3.3
Originator ID: 1.1.1.1
```

show route advertising-protocol bgp detail (Layer 2 VPN)

```
user@host> show route advertising-protocol bgp 192.168.24.1 detail

vpn-a.12vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
192.168.16.1:1:1:1/96 (1 entry, 1 announced)
  BGP group int type Internal
    Route Distinguisher: 192.168.16.1:1
    Label-base : 32768, range : 3
    Nexthop: Self
    Localpref: 100
    AS path: I
    Communities: target:65412:100
    AIGP 210
    Layer2-info: encaps:VLAN, control flags:, mtu:
```

show route advertising-protocol bgp detail (Layer 3 VPN)

```
user@host> show route advertising-protocol bgp 10.255.14.176 detail

vpna.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
* 10.49.0.0/30 (1 entry, 1 announced)
  BGP group ibgp type Internal
    Route Distinguisher: 10.255.14.174:2
    VPN Label: 101264
    Nexthop: Self
    Localpref: 100
    AS path: I
    Communities: target:200:100
```

```
AIGP 210
AttrSet AS: 100
    Localpref: 100
    AS path: I
...
```

show route advertising-protocol bgp extensive all (Next Hop Self with RIB-out IP Address)

```
user@host> show route advertising-protocol bgp 200.0.0.2 170.0.1.0/24 extensive all
inet.0: 13 destinations, 19 routes (13 active, 0 holddown, 6 hidden)
  170.0.1.0/24 (2 entries, 1 announced)
    BGP group eBGP-INTEROP type External
      Nexthop: Self (rib-out 10.100.3.2)
      AS path: [4713] 200 I
...
```

show route all

List of Syntax	Syntax on page 2290 Syntax (EX Series Switches) on page 2290
Syntax	<pre>show route all <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route all</pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display information about all routes in all routing tables, including private, or internal, tables.
Options	none —Display information about all routes in all routing tables, including private, or internal, tables. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• show route brief on page 2297• show route detail on page 2310
List of Sample Output	show route all on page 2290
Output Fields	In Junos OS Release 9.5 and later, only the output fields for the show route all command display all routing tables, including private, or hidden, routing tables. The output field table of the show route command does not display entries for private, or hidden, routing tables in Junos OS Release 9.5 and later.

Sample Output

show route all

The following example displays a snippet of output from the **show route** command and then displays the same snippet of output from the **show route all** command:

```
user@host> show route
```

```

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
0          *[MPLS/0] 2d 02:24:39, metric 1
            Receive
1          *[MPLS/0] 2d 02:24:39, metric 1
            Receive
2          *[MPLS/0] 2d 02:24:39, metric 1
            Receive
800017     *[VPLS/7] 1d 14:00:16
            > via vt-3/2/0.32769, Pop
800018     *[VPLS/7] 1d 14:00:26
            > via vt-3/2/0.32772, Pop

```

```
user@host> show route all
```

```

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
0          *[MPLS/0] 2d 02:19:12, metric 1
            Receive
1          *[MPLS/0] 2d 02:19:12, metric 1
            Receive
2          *[MPLS/0] 2d 02:19:12, metric 1
            Receive
800017     *[VPLS/7] 1d 13:54:49
            > via vt-3/2/0.32769, Pop
800018     *[VPLS/7] 1d 13:54:59
            > via vt-3/2/0.32772, Pop
vt-3/2/0.32769 [VPLS/7] 1d 13:54:49
                Unusable
vt-3/2/0.32772 [VPLS/7] 1d 13:54:59
                Unusable

```

show route aspath-regex

List of Syntax	Syntax on page 2292 Syntax (EX Series Switches) on page 2292
Syntax	<pre>show route aspath-regex <i>regular-expression</i> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route aspath-regex <i>regular-expression</i></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display the entries in the routing table that match the specified autonomous system (AS) path regular expression.
Options	<p><i>regular-expression</i>—Regular expression that matches an entire AS path.</p> <p><i>logical-system (all logical-system-name)</i>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Additional Information	<p>You can specify a regular expression as:</p> <ul style="list-style-type: none">• An individual AS number• A period wildcard used in place of an AS number• An AS path regular expression that is enclosed in parentheses <p>You also can include the operators described in the table of AS path regular expression operators in the <i>Junos Policy Framework Configuration Guide</i>. The following list summarizes these operators:</p> <ul style="list-style-type: none">• <i>{m,n}</i>—At least <i>m</i> and at most <i>n</i> repetitions of the AS path term.• <i>{m}</i>—Exactly <i>m</i> repetitions of the AS path term.• <i>{m,}</i>—<i>m</i> or more repetitions of the AS path term.• <i>*</i>—Zero or more repetitions of an AS path term.• <i>+</i>—One or more repetitions of an AS path term.• <i>?</i>—Zero or one repetition of an AS path term.• <i>aspath_term aspath_term</i>—Match one of the two AS path terms. <p>When you specify more than one AS number or path term, or when you include an operator in the regular expression, enclose the entire regular expression in quotation marks. For example, to match any path that contains AS number 234, specify the following command:</p>


```
show route aspath-regex ".* 234 .*"
```

Required Privilege Level view

Related Documentation • *Example: Using AS Path Regular Expressions*

List of Sample Output [show route aspath-regex \(Matching a Specific AS Number\) on page 2293](#)
[show route aspath-regex \(Matching Any Path with Two AS Numbers\) on page 2293](#)

Output Fields For information about output fields, see the output field table for the [show route](#) command.

Sample Output

show route aspath-regex (Matching a Specific AS Number)

```
user@host> show route aspath-regex 65477

inet.0: 46411 destinations, 46411 routes (46409 active, 0 holddown, 2 hidden)
+ = Active Route, - = Last Active, * = Both

111.222.1.0/25      *[BGP/170] 00:08:48, localpref 100, from 111.222.2.24
                   AS Path: [65477] ({65548 65536}) IGP
                   to 111.222.18.225 via fpa0.0(111.222.18.233)
111.222.1.128/25   *[IS-IS/15] 09:15:37, metric 37, tag 1
                   to 111.222.18.225 via fpa0.0(111.222.18.233)
                   [BGP/170] 00:08:48, localpref 100, from 111.222.2.24
                   AS Path: [65477] ({65548 65536}) IGP
                   to 111.222.18.225 via fpa0.0(111.222.18.233)
...
```

show route aspath-regex (Matching Any Path with Two AS Numbers)

```
user@host> show route aspath-regex ".* 234 3561 .*"

inet.0: 46351 destinations, 46351 routes (46349 active, 0 holddown, 2 hidden)
+ = Active Route, - = Last Active, * = Both

9.20.0.0/17        *[BGP/170] 01:35:00, localpref 100, from 131.103.20.49
                   AS Path: [666] 234 3561 2685 2686 Incomplete
                   to 192.156.169.1 via 192.156.169.14(so-0/0/0)
12.10.231.0/24     *[BGP/170] 01:35:00, localpref 100, from 131.103.20.49
                   AS Path: [666] 234 3561 5696 7369 IGP
                   to 192.156.169.1 via 192.156.169.14(so-0/0/0)
24.64.32.0/19      *[BGP/170] 01:34:59, localpref 100, from 131.103.20.49
                   AS Path: [666] 234 3561 6327 IGP
                   to 192.156.169.1 via 192.156.169.14(so-0/0/0)
...
```

show route best

List of Syntax	Syntax on page 2294 Syntax (EX Series Switches) on page 2294
Syntax	<pre>show route best <i>destination-prefix</i> <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route best <i>destination-prefix</i> <brief detail extensive terse></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display the route in the routing table that is the best route to the specified address or range of addresses. The best route is the longest matching route.
Options	brief detail extensive terse —(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief . <i>destination-prefix</i> —Address or range of addresses. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• show route brief on page 2297• show route detail on page 2310
List of Sample Output	show route best on page 2295 show route best detail on page 2295 show route best extensive on page 2296 show route best terse on page 2296
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route best

```

user@host> show route best 10.255.70.103

inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
10.255.70.103/32  * [OSPF/10] 1d 13:19:20, metric 2
                  > to 10.31.1.6 via ge-3/1/0.0
                  via so-0/3/0.0

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
10.255.70.103/32  * [RSVP/7] 1d 13:20:13, metric 2
                  > via so-0/3/0.0, label-switched-path green-r1-r3

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.0.0.0/8        * [Direct/0] 2d 01:43:34
                  > via fxp2.0
                  [Direct/0] 2d 01:43:34
                  > via fxp1.0

```

show route best detail

```

user@host> show route best 10.255.70.103 detail

inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
10.255.70.103/32 (1 entry, 1 announced)
    *OSPF   Preference: 10
            Next-hop reference count: 9
            Next hop: 10.31.1.6 via ge-3/1/0.0, selected
            Next hop: via so-0/3/0.0
            State: <Active Int>
            Local AS: 69
            Age: 1d 13:20:06      Metric: 2
            Area: 0.0.0.0
            Task: OSPF
            Announcement bits (2): 0-KRT 3-Resolve tree 2
            AS path: I

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
10.255.70.103/32 (1 entry, 1 announced)
    State: <FlashAll>
    *RSVP   Preference: 7
            Next-hop reference count: 5
            Next hop: via so-0/3/0.0 weight 0x1, selected
            Label-switched-path green-r1-r3
            Label operation: Push 100016
            State: <Active Int>
            Local AS: 69
            Age: 1d 13:20:59      Metric: 2
            Task: RSVP
            Announcement bits (1): 1-Resolve tree 2
            AS path: I

```

```

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
10.0.0.0/8 (2 entries, 0 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via fxp2.0, selected
    State: <Active Int>
    Age: 2d 1:44:20
    Task: IF
    AS path: I
  Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via fxp1.0, selected
    State: <NotBest Int>
    Inactive reason: No difference
    Age: 2d 1:44:20
    Task: IF
    AS path: I

```

show route best extensive

The output for the **show route best extensive** command is identical to that for the **show route best detail** command. For sample output, see [show route best detail on page 2295](#).

show route best terse

```

user@host> show route best 10.255.70.103 terse

inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 10.255.70.103/32  0  10      2           >10.31.1.6
                               so-0/3/0.0

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 10.255.70.103/32  R   7      2           >so-0/3/0.0

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 10.0.0.0/8        D   0           >fxp2.0
                    D   0           >fxp1.0

```

show route brief

List of Syntax	Syntax on page 2297 Syntax (EX Series Switches) on page 2297
Syntax	<pre>show route brief <destination-prefix> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switches)	<pre>show route brief <destination-prefix></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Display brief information about the active entries in the routing tables.
Options	<p>none—Display all active entries in the routing table.</p> <p>destination-prefix—(Optional) Display active entries for the specified address or range of addresses.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show route all on page 2290 • show route best on page 2294
List of Sample Output	show route brief on page 2297
Output Fields	For information about output fields, see the Output Field table of the show route command.

Sample Output

show route brief

```
user@host> show route brief

inet.0: 10 destinations, 10 routes (9 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

0.0.0.0/0          *[Static/5] 1w5d 20:30:29
```

```
Discard
10.255.245.51/32 *[Direct/0] 2w4d 13:11:14
> via lo0.0
172.16.0.0/12 *[Static/5] 2w4d 13:11:14
> to 192.168.167.254 via fxp0.0
192.168.0.0/18 *[Static/5] 1w5d 20:30:29
> to 192.168.167.254 via fxp0.0
192.168.40.0/22 *[Static/5] 2w4d 13:11:14
> to 192.168.167.254 via fxp0.0
192.168.64.0/18 *[Static/5] 2w4d 13:11:14
> to 192.168.167.254 via fxp0.0
192.168.164.0/22 *[Direct/0] 2w4d 13:11:14
> via fxp0.0
192.168.164.51/32 *[Local/0] 2w4d 13:11:14
Local via fxp0.0
207.17.136.192/32 *[Static/5] 2w4d 13:11:14
> to 192.168.167.254 via fxp0.0
green.inet.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
100.101.0.0/16 *[Direct/0] 1w5d 20:30:28
> via fe-0/0/3.0
100.101.2.3/32 *[Local/0] 1w5d 20:30:28
Local via fe-0/0/3.0
172.16.233.5/32 *[OSPF/10] 1w5d 20:30:29, metric 1
MultiRecv
```

show route ccc

Syntax	<code>show route ccc ccc</code> <code><brief detail extensive terse></code> <code><logical-system (all <i>logical-system-name</i>)></code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display circuit cross-connect (CCC) entries in the Multiprotocol Link Switching (MPLS) routing table.
Options	<p>ccc—Name of an entry with a circuit cross-connect interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> show connections
List of Sample Output	show route ccc extensive on page 2299
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route ccc extensive

```

user@host> show route ccc fe-0/1/0.600 extensive

mpls.0: 19 destinations, 19 routes (19 active, 0 holddown, 0 hidden)
fe-0/1/2.600 (1 entry, 1 announced)
TSI:
KRT in-kernel fe-0/1/2.600.0      /16 -> {0.0.0.0}
    *CCC      Preference: 7
                Next-hop reference count: 2
                Next hop: via so-0/0/3.0 weight 0x1, selected
                Label operation: Push 101424
                State: <Active Int>
                Local AS: 100
                Age: 28:13   Metric: 3
                Task: MPLS
                Announcement bits (1): 0-KRT
                AS path: I

```


show route community

List of Syntax [Syntax on page 2301](#)
 [Syntax \(EX Series Switches\) on page 2301](#)

Syntax `show route community as-number:community-value`
 `<brief | detail | extensive | terse>`
 `<logical-system (all | logical-system-name)>`

Syntax (EX Series Switches) `show route community as-number:community-value`
 `<brief | detail | extensive | terse>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.

Description Display the route entries in each routing table that are members of a Border Gateway Protocol (BGP) community.

Options *as-number:community-value*—One or more community identifiers. *as-number* is the AS number, and *community-value* is the community identifier. When you specify more than one community identifier, enclose the identifiers in double quotation marks. Community identifiers can include wildcards.

For example:

```
user@host> show route table inet.0 protocol bgp community "12083:6015"
community "12083:65551"
```

or

```
user@host> show route table inet.0 protocol bgp community [12083:6014
12083:65551]
```

brief | detail | extensive | terse—(Optional) Display the specified level of output.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Additional Information Specifying the community option displays all routes matching the community found within the routing table. The community option does not limit the output to only the routes being advertised to the neighbor after any egress routing policy.

Required Privilege Level view

Related Documentation • [show route detail on page 2310](#)

List of Sample Output [show route community on page 2302](#)

Output Fields For information about output fields, see the output field tables for the [show route](#) command, the [show route detail](#) command, the [show route extensive](#) command, or the [show route terse](#) command.

Sample Output

[show route community](#)

```
user@host> show route community 234:80

inet.0: 46511 destinations, 46511 routes (46509 active, 0 holddown, 2 hidden)
+ = Active Route, - = Last Active, * = Both

172.16.4.0/8          *[BGP/170] 03:33:07, localpref 100, from 131.103.20.49
                     AS Path: {666} 234 2548 1 IGP
                     to 192.156.169.1 via 192.156.169.14(so-0/0/0)
172.16.6.0/8          *[BGP/170] 03:33:07, localpref 100, from 131.103.20.49
                     AS Path: {666} 234 2548 568 721 Incomplete
                     to 192.156.169.1 via 192.156.169.14(so-0/0/0)
172.16.92.0/16        *[BGP/170] 03:33:06, localpref 100, from 131.103.20.49
                     AS Path: {666} 234 2548 1673 1675 1747 IGP
                     to 192.156.169.1 via 192.156.169.14(so-0/0/0)
```

show route community-name

List of Syntax	Syntax on page 2303 Syntax (EX Series Switches) on page 2303
Syntax	<pre>show route community-name <i>community-name</i> <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route community-name <i>community-name</i> <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Display the route entries in each routing table that are members of a Border Gateway Protocol (BGP) community, specified by a community name.
Options	<p><i>community-name</i>—Name of the community.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route community-name on page 2303
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route community-name

```
user@host> show route community-name red-com
inet.0: 17 destinations, 17 routes (16 active, 0 holddown, 1 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

instance1.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
10.255.245.212/32 *[BGP/170] 00:04:40, localpref 100, from 10.255.245.204
                  AS path: 300 I
                  > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix
172.16.20.20/32   *[BGP/170] 00:04:40, localpref 100, from 10.255.245.204
                  AS path: I
                  > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix
172.16.100.0/24   *[BGP/170] 00:04:40, localpref 100, from 10.255.245.204
                  AS path: I
                  > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

bgp.l3vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.245.204:10:10.255.245.212/32
                  *[BGP/170] 00:06:40, localpref 100, from 10.255.245.204
                  AS path: 300 I
                  > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix
10.255.245.204:10:172.16.20.20/32
                  *[BGP/170] 00:36:02, localpref 100, from 10.255.245.204
                  AS path: I
                  > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix
10.255.245.204:10:100.1.4.0/24
                  *[BGP/170] 00:36:02, localpref 100, from 10.255.245.204
                  AS path: I
                  > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

instance1.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route damping

List of Syntax	Syntax on page 2305 Syntax (EX Series Switch and QFX Series) on page 2305
Syntax	<pre>show route damping (decayed history suppressed) <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switch and QFX Series)	<pre>show route damping (decayed history suppressed) <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display the BGP routes for which updates might have been reduced because of route flap damping.
Options	<p>brief detail extensive terse—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>decayed—Display route damping entries that might no longer be valid, but are not suppressed.</p> <p>history—Display entries that have already been withdrawn, but have been logged.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>suppressed—Display entries that have been suppressed and are no longer being installed into the forwarding table or exported by routing protocols.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • clear bgp damping on page 1740 • show policy damping on page 1788
List of Sample Output	show route damping decayed detail on page 2308 show route damping history on page 2309 show route damping history detail on page 2309

Output Fields Table 195 on page 2306 lists the output fields for the **show route damping** command. Output fields are listed in the approximate order in which they appear.

Table 195: show route damping Output Fields

Field Name	Field Description	Level of Output
<i>routing-table-name</i>	Name of the routing table—for example, inet.0 .	All levels
destinations	Number of destinations for which there are routes in the routing table.	All levels
<i>number routes</i>	Number of routes in the routing table and total number of routes in the following states: <ul style="list-style-type: none"> • active • holddown (routes that are in a pending state before being declared inactive) • hidden (the routes are not used because of a routing policy) 	All levels
<i>destination-prefix (entry, announced)</i>	Destination prefix. The entry value is the number of routes for this destination, and the announced value is the number of routes being announced for this destination.	detail extensive
<i>[protocol, preference]</i>	Protocol from which the route was learned and the preference value for the route. <ul style="list-style-type: none"> • +—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table. • -—A hyphen indicates the last active route. • *—An asterisk indicates that the route is both the active and the last active route. An asterisk before a to line indicates the best subpath to the route. <p>In every routing metric except for the BGP LocalPref attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the LocalPref value in the Preference2 field. For example, if the LocalPref value for Route 1 is 100, the Preference2 value is -101. If the LocalPref value for Route 2 is 155, the Preference2 value is -156. Route 2 is preferred because it has a higher LocalPref value and a lower Preference2 value.</p>	All levels
Next-hop reference count	Number of references made to the next hop.	detail extensive
Source	IP address of the route source.	detail extensive
Next hop	Network layer address of the directly reachable neighboring system.	detail extensive
via	Interface used to reach the next hop. If there is more than one interface available to the next hop, the interface that is actually used is followed by the word Selected .	detail extensive
Protocol next hop	Network layer address of the remote routing device that advertised the prefix. This address is used to derive a forwarding next hop.	detail extensive
Indirect next hop	Index designation used to specify the mapping between protocol next hops, tags, kernel export policy, and the forwarding next hops.	detail extensive

Table 195: show route damping Output Fields (continued)

Field Name	Field Description	Level of Output
State	Flags for this route. For a description of possible values for this field, see the output field table for the show route detail command.	detail extensive
Local AS	AS number of the local routing device.	detail extensive
Peer AS	AS number of the peer routing device.	detail extensive
Age	How long the route has been known.	detail extensive
Metric	Metric for the route.	detail extensive
Task	Name of the protocol that has added the route.	detail extensive
Announcement bits	List of protocols that announce this route. n-Resolve inet indicates that the route is used for route resolution for next hops found in the routing table. n is an index used by Juniper Networks customer support only.	detail extensive
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> • I—IGP. • E—EGP. • ?—Incomplete; typically, the AS path was aggregated. <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> • []—Brackets enclose the local AS number associated with the AS path if more than one AS number is configured on the routing device or if AS path prepending is configured. • { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order. • ()—Parentheses enclose a confederation. • ([])—Parentheses and brackets enclose a confederation set. <p>NOTE: In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>	All levels
to	Next hop to the destination. An angle bracket (>) indicates that the route is the selected route.	brief none
via	Interface used to reach the next hop. If there is more than one interface available to the next hop, the interface that is actually used is followed by the word Selected .	brief none
Communities	Community path attribute for the route. See the output field table for the show route detail command.	detail extensive

Table 195: show route damping Output Fields (continued)

Field Name	Field Description	Level of Output
Localpref	Local preference value included in the route.	All levels
Router ID	BGP router ID as advertised by the neighbor in the open message.	detail extensive
Merit (last update/now)	Last updated and current figure-of-merit value.	detail extensive
damping-parameters	Name that identifies the damping parameters used, which is defined in the damping statement at the [edit policy-options] hierarchy level.	detail extensive
Last update	Time of most recent change in path attributes.	detail extensive
First update	Time of first change in path attributes, which started the route damping process.	detail extensive
Flaps	Number of times the route has gone up or down or its path attributes have changed.	detail extensive
Suppressed	(suppressed keyword only) This route is currently suppressed. A suppressed route does not appear in the forwarding table and routing protocols do not export it.	All levels
Reusable in	(suppressed keyword only) Time when a suppressed route will again be available.	All levels
Preference will be	(suppressed keyword only) Preference value that will be applied to the route when it is again active.	All levels

Sample Output

show route damping decayed detail

```

user@host> show route damping decayed detail

inet.0: 173319 destinations, 1533668 routes (172625 active, 4 holddown, 108083
hidden)
10.0.111.0/24 (7 entries, 1 announced)
  *BGP      Preference: 170/-101
            Next-hop reference count: 151973
            Source: 172.23.2.129
            Next hop: via so-1/2/0.0
            Next hop: via so-5/1/0.0, selected
            Next hop: via so-6/0/0.0
            Protocol next hop: 172.23.2.129
            Indirect next hop: 89a1a00 264185
            State: <Active Ext>
            Local AS: 64500 Peer AS: 64490
            Age: 3:28      Metric2: 0
            Task: BGP_64490.172.23.2.129+179
            Announcement bits (6): 0-KRT 1-RT 4-KRT 5-BGP.0.0.0.0+179

        6-Resolve tree 2 7-Resolve tree 3
          AS path: 64499 64510 645511 645511 645511 645511 I ()

```



```

Communities: 65551:390 65551:2000 65551:3000 65550:701
Localpref: 100
Router ID: 172.23.2.129
Merit (last update/now): 1934/1790
damping-parameters: damping-high
Last update:      00:03:28 First update:      00:06:40
Flaps: 2

```

show route damping history

```

user@host> show route damping history

inet.0: 173320 destinations, 1533529 routes (172624 active, 6 holddown, 108122
hidden)
+ = Active Route, - = Last Active, * = Both

10.108.0.0/15      [BGP ] 2d 22:47:58, localpref 100
                   AS path: 64220 65541 65542 I
                   > to 192.168.60.85 via so-3/1/0.0

```

show route damping history detail

```

user@host> show route damping history detail

inet.0: 173319 destinations, 1533435 routes (172627 active, 2 holddown, 108105
hidden)
10.108.0.0/15 (3 entries, 1 announced)
    BGP                /-101
        Next-hop reference count: 69058
        Source: 192.168.60.85
        Next hop: 192.168.60.85 via so-3/1/0.0, selected
        State: <Hidden Ext>
        Inactive reason: Unusable path
        Local AS: 64500 Peer AS: 64220
        Age: 2d 22:48:10
        Task: BGP_64220.192.168.60.85+179
        AS path: 64220 65541 65542 I ()
        Communities: 65541:390 65541:2000 65541:3000 65504:3561
        Localpref: 100
        Router ID: 192.168.80.25
        Merit (last update/now): 1000/932
        damping-parameters: set-normal
        Last update:      00:01:05 First update:      00:01:05
        Flaps: 1

```

show route detail

List of Syntax	Syntax on page 2310 Syntax (EX Series Switches) on page 2310
Syntax	<pre>show route detail <destination-prefix> [logical-system (all logical-system-name)]</pre>
Syntax (EX Series Switches)	<pre>show route detail <destination-prefix></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display detailed information about the active entries in the routing tables.
Options	<p>none—Display all active entries in the routing table on all systems.</p> <p>destination-prefix—(Optional) Display active entries for the specified address or range of addresses.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route detail on page 2321 show route detail (with BGP Multipath) on page 2327 show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 2328 show route label detail (Multipoint LDP with Multicast-Only Fast Reroute) on page 2328
Output Fields	<p>Table 196 on page 2310 describes the output fields for the show route detail command. Output fields are listed in the approximate order in which they appear.</p>

Table 196: show route detail Output Fields

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
<i>number routes</i>	<p>Number of routes in the routing table and total number of routes in the following states:</p> <ul style="list-style-type: none"> • active (routes that are active) • holddown (routes that are in the pending state before being declared inactive) • hidden (routes that are not used because of a routing policy)
<i>route-destination</i> (entry, announced)	<p>Route destination (for example:10.0.0.1/24). The entry value is the number of routes for this destination, and the announced value is the number of routes being announced for this destination. Sometimes the route destination is presented in another format, such as:</p> <ul style="list-style-type: none"> • MPLS-label (for example, 80001). • interface-name (for example, ge-1/0/2). • neighbor-address:control-word-status:encapsulation type:vc-id:source (Layer 2 circuit only; for example, 10.1.1.195:NoCtrlWord:1:1:Local/96). <ul style="list-style-type: none"> • neighbor-address—Address of the neighbor. • control-word-status—Whether the use of the control word has been negotiated for this virtual circuit: NoCtrlWord or CtrlWord. • encapsulation type—Type of encapsulation, represented by a number: (1) Frame Relay DLCI, (2) ATM AAL5 VCC transport, (3) ATM transparent cell transport, (4) Ethernet, (5) VLAN Ethernet, (6) HDLC, (7) PPP, (8) ATM VCC cell transport, (10) ATM VPC cell transport. • vc-id—Virtual circuit identifier. • source—Source of the advertisement: Local or Remote. • source—Source of the advertisement: Local or Remote.
<i>label stacking</i>	<p>(Next-to-the-last-hop routing device for MPLS only) Depth of the MPLS label stack, where the label-popping operation is needed to remove one or more labels from the top of the stack. A pair of routes is displayed, because the pop operation is performed only when the stack depth is two or more labels.</p> <ul style="list-style-type: none"> • S=0 route indicates that a packet with an incoming label stack depth of 2 or more exits this routing device with one fewer label (the label-popping operation is performed). • If there is no S= information, the route is a normal MPLS route, which has a stack depth of 1 (the label-popping operation is not performed).

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
[protocol, preference]	<p>Protocol from which the route was learned and the preference value for the route.</p> <ul style="list-style-type: none"> • +—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table. • - —A hyphen indicates the last active route. • *—An asterisk indicates that the route is both the active and the last active route. An asterisk before a to line indicates the best subpath to the route. <p>In every routing metric except for the BGP LocalPref attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the LocalPref value in the Preference2 field. For example, if the LocalPref value for Route 1 is 100, the Preference2 value is -101. If the LocalPref value for Route 2 is 155, the Preference2 value is -156. Route 2 is preferred because it has a higher LocalPref value.</p> <p>Preference2 values are signed integers, that is, Preference2 values can be either positive or negative values. However, Junos OS evaluates Preference2 values as unsigned integers that are represented by positive values. Based on the Preference2 values, Junos OS evaluates a preferred route differently in the following scenarios:</p> <ul style="list-style-type: none"> • Both Signed Preference2 values <ul style="list-style-type: none"> • Route A = -101 • Route B = -156 <p>Where both the Preference2 values are signed, Junos OS evaluates only the unsigned value of Preference2 and Route A, which has a lower Preference2 value is preferred.</p> • Unsigned Preference2 values <p>Now consider both unsigned Preference2 values:</p> <ul style="list-style-type: none"> • Route A = 4294967096 • Route B = 200 <p>Here, Junos OS considers the lesser Preference2 value and Route B with a Preference2 value of 200 is preferred because it is less than 4294967096.</p> • Combination of signed and unsigned Preference2 values <p>When Preference2 values of two routes are compared, and for one route the Preference2 is a signed value, and for the other route it is an unsigned value, Junos OS prefers the route with the positive Preference2 value over the negative Preference2 value. For example, consider the following signed and unsigned Preference2 values:</p> <ul style="list-style-type: none"> • Route A = -200 • Route B = 200 <p>In this case, Route B with a Preference2 value of 200 is preferred although this value is greater than -200, because Junos OS evaluates only the unsigned value of the Preference2 value.</p>
Level	(IS-IS only). In IS-IS, a single AS can be divided into smaller groups called areas. Routing between areas is organized hierarchically, allowing a domain to be administratively divided into smaller areas. This organization is accomplished by configuring Level 1 and Level 2 intermediate systems. Level 1 systems route within an area. When the destination is outside an area, they route toward a Level 2 system. Level 2 intermediate systems route between areas and toward other ASs.
Route Distinguisher	IP subnet augmented with a 64-bit prefix.
PMSI	Provider multicast service interface (MVPN routing table).

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
Next-hop type	Type of next hop. For a description of possible values for this field, see Table 197 on page 2316 .
Next-hop reference count	Number of references made to the next hop.
Flood nexthop branches exceed maximum message	Indicates that the number of flood next-hop branches exceeded the system limit of 32 branches, and only a subset of the flood next-hop branches were installed in the kernel.
Source	IP address of the route source.
Next hop	Network layer address of the directly reachable neighboring system.
via	<p>Interface used to reach the next hop. If there is more than one interface available to the next hop, the name of the interface that is actually used is followed by the word Selected. This field can also contain the following information:</p> <ul style="list-style-type: none"> • Weight—Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible. • Balance—Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a routing device is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.
Label-switched-path lsp-path-name	Name of the LSP used to reach the next hop.
Label operation	MPLS label and operation occurring at this routing device. The operation can be pop (where a label is removed from the top of the stack), push (where another label is added to the label stack), or swap (where a label is replaced by another label).
Interface	(Local only) Local interface name.
Protocol next hop	Network layer address of the remote routing device that advertised the prefix. This address is used to derive a forwarding next hop.
Indirect next hop	Index designation used to specify the mapping between protocol next hops, tags, kernel export policy, and the forwarding next hops.
State	State of the route (a route can be in more than one state). See Table 198 on page 2318 .
Local AS	AS number of the local routing device.
Age	How long the route has been known.
AIGP	Accumulated interior gateway protocol (AIGP) BGP attribute.

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
Metric	Cost value of the indicated route. For routes within an AS, the cost is determined by IGP and the individual protocol metrics. For external routes, destinations, or routing domains, the cost is determined by a preference value.
MED-plus-IGP	Metric value for BGP path selection to which the IGP cost to the next-hop destination has been added.
TTL-Action	For MPLS LSPs, state of the TTL propagation attribute. Can be enabled or disabled for all RSVP-signaled and LDP-signaled LSPs or for specific VRF routing instances. For sample output, see show route table .
Task	Name of the protocol that has added the route.
Announcement bits	The number of BGP peers or protocols to which Junos OS has announced this route, followed by the list of the recipients of the announcement. Junos OS can also announce the route to the KRT for installing the route into the Packet Forwarding Engine, to a resolve tree, a L2 VC, or even a VPN. For example, n-Resolve inet indicates that the specified route is used for route resolution for next hops found in the routing table. <ul style="list-style-type: none"> n—An index used by Juniper Networks customer support only.
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> I—IGP. E—EGP. Recorded—The AS path is recorded by the sample process (sampled). ?—Incomplete; typically, the AS path was aggregated. <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> []—Brackets enclose the number that precedes the AS path. This number represents the number of ASs present in the AS path, when calculated as defined in RFC 4271. This value is used in the AS-path merge process, as defined in RFC 4893. []—If more than one AS number is configured on the routing device, or if AS path prepending is configured, brackets enclose the local AS number associated with the AS path. { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order. ()—Parentheses enclose a confederation. ([])—Parentheses and brackets enclose a confederation set. <p>NOTE: In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
validation-state	<p>(BGP-learned routes) Validation status of the route:</p> <ul style="list-style-type: none"> • Invalid—Indicates that the prefix is found, but either the corresponding AS received from the EBGP peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database. • Unknown—Indicates that the prefix is not among the prefixes or prefix ranges in the database. • Unverified—Indicates that the origin of the prefix is not verified against the database. This is because the database got populated and the validation is not called for in the BGP import policy, although origin validation is enabled, or the origin validation is not enabled for the BGP peers. • Valid—Indicates that the prefix and autonomous system pair are found in the database.
ORR Generation-ID	Displays the optimal route reflection (ORR) generation identifier. ISIS and OSPF interior gateway protocol (IGP) updates filed whenever any of the corresponding ORR route has its metric valued changed, or if the ORR route is added or deleted.
FECs bound to route	Point-to-multipoint root address, multicast source address, and multicast group address when multipoint LDP (M-LDP) inband signaling is configured.
Primary Upstream	When multipoint LDP with multicast-only fast reroute (MoFRR) is configured, the primary upstream path. MoFRR transmits a multicast join message from a receiver toward a source on a primary path, while also transmitting a secondary multicast join message from the receiver toward the source on a backup path.
RPF Nexthops	When multipoint LDP with MoFRR is configured, the reverse-path forwarding (RPF) next-hop information. Data packets are received from both the primary path and the secondary paths. The redundant packets are discarded at topology merge points due to the RPF checks.
Label	Multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.
weight	Value used to distinguish MoFRR primary and backup routes. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.
VC Label	MPLS label assigned to the Layer 2 circuit virtual connection.
MTU	Maximum transmission unit (MTU) of the Layer 2 circuit.
VLAN ID	VLAN identifier of the Layer 2 circuit.
Prefixes bound to route	Forwarding equivalent class (FEC) bound to this route. Applicable only to routes installed by LDP.
Communities	Community path attribute for the route. See Table 199 on page 2320 for all possible values for this field.
Layer2-info: encaps	Layer 2 encapsulation (for example, VPLS).
control flags	Control flags: none or Site Down .
mtu	Maximum transmission unit (MTU) information.

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
Label-Base, range	First label in a block of labels and label block size. A remote PE routing device uses this first label when sending traffic toward the advertising PE routing device.
status vector	Layer 2 VPN and VPLS network layer reachability information (NLRI).
Accepted Multipath	Current active path when BGP multipath is configured.
Accepted LongLivedStale	The LongLivedStale flag indicates that the route was marked LLGR-stale by this router, as part of the operation of LLGR receiver mode. Either this flag or the LongLivedStaleImport flag may be displayed for a route. Neither of these flags are displayed at the same time as the Stale (ordinary GR stale) flag.
Accepted LongLivedStaleImport	<p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy. Either this flag or the LongLivedStale flag may be displayed for a route. Neither of these flags are displayed at the same time as the Stale (ordinary GR stale) flag.</p> <p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and import into the inet.0 routing table</p>
ImportAccepted LongLivedStaleImport	<p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and imported into the inet.0 routing table</p> <p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy.</p>
Accepted MultipathContrib	Path currently contributing to BGP multipath.
Localpref	Local preference value included in the route.
Router ID	BGP router ID as advertised by the neighbor in the open message.
Primary Routing Table	In a routing table group, the name of the primary routing table in which the route resides.
Secondary Tables	In a routing table group, the name of one or more secondary tables in which the route resides.

[Table 197 on page 2316](#) describes all possible values for the Next-hop Types output field.

Table 197: Next-hop Types Output Field Values

Next-Hop Type	Description
Broadcast (bcast)	Broadcast next hop.
Deny	Deny next hop.
Discard	Discard next hop.
Dynamic List	Dynamic list next hop

Table 197: Next-hop Types Output Field Values (continued)

Next-Hop Type	Description
Flood	Flood next hop. Consists of components called branches, up to a maximum of 32 branches. Each flood next-hop branch sends a copy of the traffic to the forwarding interface. Used by point-to-multipoint RSVP, point-to-multipoint LDP, point-to-multipoint CCC, and multicast.
Hold	Next hop is waiting to be resolved into a unicast or multicast type.
Indexed (idxd)	Indexed next hop.
Indirect (indr)	Used with applications that have a protocol next hop address that is remote. You are likely to see this next-hop type for internal BGP (IBGP) routes when the BGP next hop is a BGP neighbor that is not directly connected.
Interface	Used for a network address assigned to an interface. Unlike the router next hop, the interface next hop does not reference any specific node on the network.
Local (locl)	Local address on an interface. This next-hop type causes packets with this destination address to be received locally.
Multicast (mcst)	Wire multicast next hop (limited to the LAN).
Multicast discard (mdsc)	Multicast discard.
Multicast group (mgrp)	Multicast group member.
Receive (recv)	Receive.
Reject (rjct)	Discard. An ICMP unreachable message was sent.
Resolve (rslv)	Resolving next hop.
Routed multicast (mcrt)	Regular multicast next hop.
Router	<p>A specific node or set of nodes to which the routing device forwards packets that match the route prefix.</p> <p>To qualify as next-hop type router, the route must meet the following criteria:</p> <ul style="list-style-type: none"> • Must not be a direct or local subnet for the routing device. • Must have a next hop that is directly connected to the routing device.
Table	Routing table next hop.

Table 197: Next-hop Types Output Field Values (continued)

Next-Hop Type	Description
Unicast (ucst)	Unicast.
Unilist (ulst)	List of unicast next hops. A packet sent to this next hop goes to any next hop in the list.

Table 198 on page 2318 describes all possible values for the State output field. A route can be in more than one state (for example, **<Active NoReadvrt Int Ext>**).

Table 198: State Output Field Values

Value	Description
Accounting	Route needs accounting.
Active	Route is active.
Always Compare MED	Path with a lower multiple exit discriminator (MED) is available.
AS path	Shorter AS path is available.
Cisco Non-deterministic MED selection	Cisco nondeterministic MED is enabled, and a path with a lower MED is available.
Clone	Route is a clone.
Cluster list length	Length of cluster list sent by the route reflector.
Delete	Route has been deleted.
Ex	Exterior route.
Ext	BGP route received from an external BGP neighbor.
FlashAll	Forces all protocols to be notified of a change to any route, active or inactive, for a prefix. When not set, protocols are informed of a prefix only when the active route changes.
Hidden	Route not used because of routing policy.
IfCheck	Route needs forwarding RPF check.
IGP metric	Path through next hop with lower IGP metric is available.
Inactive reason	Flags for this route, which was not selected as best for a particular destination.
Initial	Route being added.

Table 198: State Output Field Values (continued)

Value	Description
Int	Interior route.
Int Ext	BGP route received from an internal BGP peer or a BGP confederation peer.
Interior > Exterior > Exterior via Interior	Direct, static, IGP, or EBGp path is available.
Local Preference	Path with a higher local preference value is available.
Martian	Route is a martian (ignored because it is obviously invalid).
MartianOK	Route exempt from martian filtering.
Next hop address	Path with lower metric next hop is available.
No difference	Path from neighbor with lower IP address is available.
NoReadvrt	Route not to be advertised.
NotBest	Route not chosen because it does not have the lowest MED.
Not Best in its group	Incoming BGP AS is not the best of a group (only one AS can be the best).
NotInstall	Route not to be installed in the forwarding table.
NSR-incapable	Route added by non-NSR supported protocols.
Number of gateways	Path with a greater number of next hops is available.
Origin	Path with a lower origin code is available.
Pending	Route pending because of a hold-down configured on another route.
Programmed	Route installed programatically by on-box or off-box applications using API.
Release	Route scheduled for release.
RIB preference	Route from a higher-numbered routing table is available.
Route Distinguisher	64-bit prefix added to IP subnets to make them unique.
Route Metric or MED comparison	Route with a lower metric or MED is available.
Route Preference	Route with lower preference value is available

Table 198: State Output Field Values (continued)

Value	Description
Router ID	Path through a neighbor with lower ID is available.
Secondary	Route not a primary route.
Unusable path	Path is not usable because of one of the following conditions: <ul style="list-style-type: none"> • The route is damped. • The route is rejected by an import policy. • The route is unresolved.
Update source	Last tiebreaker is the lowest IP address value.
ProtectionCand	Indicates paths requesting protection.
ProtectionPath	Indicates the route entry that can be used as a protection path.

[Table 199 on page 2320](#) describes the possible values for the Communities output field.

Table 199: Communities Output Field Values

Value	Description
<i>area-number</i>	4 bytes, encoding a 32-bit area number. For AS-external routes, the value is 0 . A nonzero value identifies the route as internal to the OSPF domain, and as within the identified area. Area numbers are relative to a particular OSPF domain.
bandwidth: local AS number:link-bandwidth-number	Link-bandwidth community value used for unequal-cost load balancing. When BGP has several candidate paths available for multipath purposes, it does not perform unequal-cost load balancing according to the link-bandwidth community unless all candidate paths have this attribute.
domain-id	Unique configurable number that identifies the OSPF domain.
domain-id-vendor	Unique configurable number that further identifies the OSPF domain.
<i>link-bandwidth-number</i>	Link-bandwidth number: from 0 through 4,294,967,295 (bytes per second).
<i>local AS number</i>	Local AS number: from 1 through 65,535 .
<i>options</i>	1 byte. Currently this is only used if the route type is 5 or 7 . Setting the least significant bit in the field indicates that the route carries a type 2 metric.
origin	(Used with VPNs) Identifies where the route came from.
<i>ospf-route-type</i>	1 byte, encoded as 1 or 2 for intra-area routes (depending on whether the route came from a type 1 or a type 2 LSA); 3 for summary routes; 5 for external routes (area number must be 0); 7 for NSSA routes; or 129 for sham link endpoint addresses.

Table 199: Communities Output Field Values (continued)

Value	Description
route-type-vendor	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute 0x8000 . The format is area-number:ospf-route-type:options .
rte-type	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute 0x0306 . The format is area-number:ospf-route-type:options .
target	Defines which VPN the route participates in; target has the format 32-bit IP address:16-bit number . For example, 10.19.0.0:100.
unknown IANA	Incoming IANA codes with a value between 0x1 and 0x7fff . This code of the BGP extended community attribute is accepted, but it is not recognized.
unknown OSPF vendor community	Incoming IANA codes with a value above 0x8000 . This code of the BGP extended community attribute is accepted, but it is not recognized.

Sample Output

show route detail

```
user@host> show route detail
```

```
inet.0: 22 destinations, 23 routes (21 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 29
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 1:31:43
    Task: RT
    Announcement bits (2): 0-KRT 3-Resolve tree 2
    AS path: I
10.31.1.0/30 (2 entries, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 2
    Next hop: via so-0/3/0.0, selected
    State: <Active Int>
    Local AS: 69
    Age: 1:30:17
    Task: IF
    Announcement bits (1): 3-Resolve tree 2
    AS path: I
  OSPF Preference: 10
    Next-hop reference count: 1
    Next hop: via so-0/3/0.0, selected
    State: <Int>
    Inactive reason: Route Preference
    Local AS: 69
```

```

        Age: 1:30:17    Metric: 1
        ORR Generation-ID: 1
    Area: 0.0.0.0
        Task: OSPF
        AS path: I

10.31.1.1/32 (1 entry, 1 announced)
    *Local Preference: 0
        Next hop type: Local
        Next-hop reference count: 7
        Interface: so-0/3/0.0
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:30:20
        Task: IF
        Announcement bits (1): 3-Resolve tree 2
        AS path: I

...

10.31.2.0/30 (1 entry, 1 announced)
    *OSPF Preference: 10
        Next-hop reference count: 9
        Next hop: via so-0/3/0.0
        Next hop: 10.31.1.6 via ge-3/1/0.0, selected
        State: <Active Int>
        Local AS: 69
        Age: 1:29:56    Metric: 2
        Area: 0.0.0.0
        ORR Generation-ID: 1
    Task: OSPF
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

...

172.16.233.2/32 (1 entry, 1 announced)
    *PIM Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:31:45
        Task: PIM Recv
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

...

172.16.233.22/32 (1 entry, 1 announced)
    *IGMP Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:31:43
        Task: IGMP
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

```

```

10.255.70.103/32 (1 entry, 1 announced)
  State: <FlashAll>
  *RSVP   Preference: 7
          Next-hop reference count: 6
          Next hop: 10.31.1.6 via ge-3/1/0.0 weight 0x1, selected
          Label-switched-path green-r1-r3
          Label operation: Push 100096
          State: <Active Int>
          Local AS: 69
          Age: 1:25:49   Metric: 2
          Task: RSVP
          Announcement bits (2): 1-Resolve tree 1 2-Resolve tree 2
          AS path: I

10.255.71.238/32 (1 entry, 1 announced)
  State: <FlashAll>
  *RSVP   Preference: 7
          Next-hop reference count: 6
          Next hop: via so-0/3/0.0 weight 0x1, selected
          Label-switched-path green-r1-r2
          State: <Active Int>
          Local AS: 69
          Age: 1:25:49   Metric: 1
          Task: RSVP
          Announcement bits (2): 1-Resolve tree 1 2-Resolve tree 2
          AS path: I

private__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

47.0005.80ff.f800.0000.0108.0001.0102.5507.1052/152 (1 entry, 0 announced)
  *Direct Preference: 0
          Next hop type: Interface
          Next-hop reference count: 1
          Next hop: via lo0.0, selected
          State: <Active Int>
          Local AS: 69
          Age: 1:31:44
          Task: IF
          AS path: I

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
0 (1 entry, 1 announced)
  *MPLS   Preference: 0
          Next hop type: Receive
          Next-hop reference count: 6
          State: <Active Int>
          Local AS: 69
          Age: 1:31:45   Metric: 1
          Task: MPLS
          Announcement bits (1): 0-KRT
          AS path: I

...

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

299840 (1 entry, 1 announced)
TSI:

```

```

KRT in-kernel 299840 /52 -> {indirect(1048575)}
  *RSVP Preference: 7/2
    Next hop type: Flood
    Address: 0x9174a30
    Next-hop reference count: 4
    Next hop type: Router, Next hop index: 798
    Address: 0x9174c28
    Next-hop reference count: 2
    Next hop: 172.16.0.2 via lt-1/2/0.9 weight 0x1
    Label-switched-path R2-to-R4-2p2mp
    Label operation: Pop
    Next hop type: Router, Next hop index: 1048574
    Address: 0x92544f0
    Next-hop reference count: 2
    Next hop: 172.16.0.2 via lt-1/2/0.7 weight 0x1
    Label-switched-path R2-to-R200-p2mp
    Label operation: Pop
    Next hop: 172.16.0.2 via lt-1/2/0.5 weight 0x8001
    Label operation: Pop
    State: <Active Int>
    Age: 1:29 Metric: 1
    Task: RSVP
    Announcement bits (1): 0-KRT
    AS path: I...

800010 (1 entry, 1 announced)
  *VPLS Preference: 7
    Next-hop reference count: 2
    Next hop: via vt-3/2/0.32769, selected
    Label operation: Pop
    State: <Active Int>
    Age: 1:29:30
    Task: Common L2 VC
    Announcement bits (1): 0-KRT
    AS path: I

vt-3/2/0.32769 (1 entry, 1 announced)
  *VPLS Preference: 7
    Next-hop reference count: 2
    Next hop: 10.31.1.6 via ge-3/1/0.0 weight 0x1, selected
    Label-switched-path green-r1-r3
    Label operation: Push 800012, Push 100096(top)
    Protocol next hop: 10.255.70.103
    Push 800012
    Indirect next hop: 87272e4 1048574
    State: <Active Int>
    Age: 1:29:30 Metric2: 2
    Task: Common L2 VC
    Announcement bits (2): 0-KRT 1-Common L2 VC
    AS path: I
    Communities: target:11111:1 Layer2-info: encaps:VPLS,
    control flags:, mtu: 0

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

abcd::10:255:71:52/128 (1 entry, 0 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.0, selected

```



```

        State: <Active Int>
        Local AS: 69
        Age: 1:31:44
        Task: IF
        AS path: I

fe80::280:42ff:fe10:f179/128 (1 entry, 0 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via lo0.0, selected
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:31:44
        Task: IF
        AS path: I

ff02::2/128 (1 entry, 1 announced)
    *PIM Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:31:45
        Task: PIM Recv6
        Announcement bits (1): 0-KRT
        AS path: I

ff02::d/128 (1 entry, 1 announced)
    *PIM Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:31:45
        Task: PIM Recv6
        Announcement bits (1): 0-KRT
        AS path: I

ff02::16/128 (1 entry, 1 announced)
    *MLD Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:31:43
        Task: MLD
        Announcement bits (1): 0-KRT
        AS path: I

private.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

fe80::280:42ff:fe10:f179/128 (1 entry, 0 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via lo0.16385, selected
        State: <Active NoReadvrt Int>
        Age: 1:31:44
        Task: IF
        AS path: I

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

```

```

10.255.70.103:1:3:1/96 (1 entry, 1 announced)
  *BGP Preference: 170/-101
    Route Distinguisher: 10.255.70.103:1
    Next-hop reference count: 7
    Source: 10.255.70.103
    Protocol next hop: 10.255.70.103
    Indirect next hop: 2 no-forward
    State: <Secondary Active Int Ext>
    Local AS: 69 Peer AS: 69
    Age: 1:25:49 Metric2: 1
    AIGP 210
    Task: BGP_69.10.255.70.103+179
    Announcement bits (1): 0-green-l2vpn
    AS path: I
    Communities: target:11111:1 Layer2-info: encaps:VPLS,
    control flags:, mtu: 0
    Label-base: 800008, range: 8
    Localpref: 100
    Router ID: 10.255.70.103
    Primary Routing Table bgp.l2vpn.0

10.255.71.52:1:1:1/96 (1 entry, 1 announced)
  *L2VPN Preference: 170/-1
    Next-hop reference count: 5
    Protocol next hop: 10.255.71.52
    Indirect next hop: 0 -
    State: <Active Int Ext>
    Age: 1:31:40 Metric2: 1
    Task: green-l2vpn
    Announcement bits (1): 1-BGP.0.0.0+179
    AS path: I
    Communities: Layer2-info: encaps:VPLS, control flags:Site-Down,
    mtu: 0
    Label-base: 800016, range: 8, status-vector: 0x9F

10.255.71.52:1:5:1/96 (1 entry, 1 announced)
  *L2VPN Preference: 170/-101
    Next-hop reference count: 5
    Protocol next hop: 10.255.71.52
    Indirect next hop: 0 -
    State: <Active Int Ext>
    Age: 1:31:40 Metric2: 1
    Task: green-l2vpn
    Announcement bits (1): 1-BGP.0.0.0+179
    AS path: I
    Communities: Layer2-info: encaps:VPLS, control flags:, mtu: 0
    Label-base: 800008, range: 8, status-vector: 0x9F

...

l2circuit.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.245.255.63:CtrlWord:4:3:Local/96 (1 entry, 1 announced)
  *L2CKT Preference: 7
    Next hop: via so-1/1/2.0 weight 1, selected
    Label-switched-path my-lsp
    Label operation: Push 100000[0]
    Protocol next hop: 10.245.255.63 Indirect next hop: 86af000 296
    State: <Active Int>
    Local AS: 99

```

```

Age: 10:21
Task: 12 circuit
Announcement bits (1): 0-LDP
AS path: I
VC Label 100000, MTU 1500, VLAN ID 512

inet.0: 45 destinations, 47 routes (44 active, 0 holddown, 1 hidden)
1.1.1.3/32 (1 entry, 1 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Router, Next hop index: 580
    Address: 0x9db6ed0
    Next-hop reference count: 8
    Next hop: 10.1.1.6 via lt-1/0/10.5, selected
    Session Id: 0x18a
    State: <Active Int>
    Local AS: 2
    Age: 1:32 Metric: 10
    Validation State: unverified
    ORR Generation-ID: 1
    Task: IS-IS
    Announcement bits (3): 0-KRT 5-Resolve tree 4 6-Resolve_IGP_FRR
task
    AS path: I

inet.0: 61 destinations, 77 routes (61 active, 1 holddown, 0 hidden)
1.1.1.1/32 (2 entries, 1 announced)
  *OSPF Preference: 10
    Next hop type: Router, Next hop index: 673
    Address: 0xc008830
    Next-hop reference count: 3
    Next hop: 10.1.1.1 via ge-0/0/2.0, selected
    Session Id: 0x1b7
    State: <Active Int>
    Local AS: 1
    Age: 3:06:59 Metric: 100
    Validation State: unverified
    ORR Generation-ID: 1
    Area: 0.0.0.0
    Task: OSPF
    Announcement bits (2): 1-KRT 9-Resolve tree 2
    AS path: I

```

show route detail (with BGP Multipath)

```
user@host> show route detail
```

```

10.1.1.8/30 (2 entries, 1 announced)
  *BGP Preference: 170/-101
    Next hop type: Router, Next hop index: 262142
    Address: 0x901a010
    Next-hop reference count: 2
    Source: 10.1.1.2
    Next hop: 10.1.1.2 via ge-0/3/0.1, selected
    Next hop: 10.1.1.6 via ge-0/3/0.5
    State: <Active Ext>
    Local AS: 1 Peer AS: 2
    Age: 5:04:43
    Validation State: unverified

```

```

Task: BGP_2.10.1.1.2+59955
Announcement bits (1): 0-KRT
AS path: 2 I
Accepted Multipath
Localpref: 100
Router ID: 172.16.1.2
BGP Preference: 170/-101
Next hop type: Router, Next hop index: 678
Address: 0x8f97520
Next-hop reference count: 9
Source: 10.1.1.6
Next hop: 10.1.1.6 via ge-0/3/0.5, selected
State: <NotBest Ext>
Inactive reason: Not Best in its group - Active preferred
Local AS: 1 Peer AS: 2
Age: 5:04:43
Validation State: unverified
Task: BGP_2.10.1.1.6+58198
AS path: 2 I
Accepted MultipathContrib
Localpref: 100
Router ID: 172.16.1.3

```

show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show route label 299872 detail

mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
299872 (1 entry, 1 announced)
  *LDP Preference: 9
    Next hop type: Flood
    Next-hop reference count: 3
    Address: 0x9097d90
    Next hop: via vt-0/1/0.1
    Next-hop index: 661
    Label operation: Pop
    Address: 0x9172130
    Next hop: via so-0/0/3.0
    Next-hop index: 654
    Label operation: Swap 299872
    State: **Active Int>
    Local AS: 1001
    Age: 8:20 Metric: 1
    Task: LDP
    Announcement bits (1): 0-KRT
    AS path: I
    FECs bound to route: P2MP root-addr 10.255.72.166, grp 232.1.1.1,
src 192.168.142.2

```

show route label detail (Multipoint LDP with Multicast-Only Fast Reroute)

```

user@host> show route label 301568 detail

mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
301568 (1 entry, 1 announced)
  *LDP Preference: 9
    Next hop type: Flood
    Address: 0x2735208

```

```

Next-hop reference count: 3
Next hop type: Router, Next hop index: 1397
Address: 0x2735d2c
Next-hop reference count: 3
Next hop: 1.3.8.2 via ge-1/2/22.0
Label operation: Pop
Load balance label: None;
Next hop type: Router, Next hop index: 1395
Address: 0x2736290
Next-hop reference count: 3
Next hop: 1.3.4.2 via ge-1/2/18.0
Label operation: Pop
Load balance label: None;
State: <Active Int AckRequest MulticastRPF>
Local AS: 10
Age: 54:05 Metric: 1
Validation State: unverified
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 172.16.1.1, grp: 232.1.1.1,
src: 192.168.219.11
Primary Upstream : 172.16.1.3:0--172.16.1.2:0
RPF Nexthops :
    ge-1/2/15.0, 1.2.94.1, Label: 301568, weight: 0x1
    ge-1/2/14.0, 1.2.3.1, Label: 301568, weight: 0x1
Backup Upstream : 172.16.1.3:0--172.16.1.6:0
RPF Nexthops :
    ge-1/2/20.0, 1.2.96.1, Label: 301584, weight: 0xffff
    ge-1/2/19.0, 1.3.6.1, Label: 301584, weight: 0xffff

```

show route exact

List of Syntax	Syntax on page 2330 Syntax (EX Series Switches) on page 2330
Syntax	<pre>show route exact <i>destination-prefix</i> <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route exact <i>destination-prefix</i> <brief detail extensive terse></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display only the routes that exactly match the specified address or range of addresses.
Options	brief detail extensive terse —(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief . <i>destination-prefix</i> —Address or range of addresses. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
List of Sample Output	show route exact on page 2330 show route exact detail on page 2331 show route exact extensive on page 2331 show route exact terse on page 2331
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route exact

```
user@host> show route exact 207.17.136.0/24
```

```
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
```

```
207.17.136.0/24    *[Static/5] 2d 03:30:22
                  > to 192.168.71.254 via fxp0.0
```

show route exact detail

```
user@host> show route exact 207.17.136.0/24 detail
```

```
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
207.17.136.0/24 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 29
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 2d 3:30:26
    Task: RT
    Announcement bits (2): 0-KRT 3-Resolve tree 2
    AS path: I
```

show route exact extensive

```
user@host> show route exact 207.17.136.0/24 extensive
```

```
inet.0: 22 destinations, 23 routes (21 active, 0 holddown, 1 hidden)
207.17.136.0/24 (1 entry, 1 announced)
TSI:
KRT in-kernel 207.17.136.0/24 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 29
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 1:25:18
    Task: RT
    Announcement bits (2): 0-KRT 3-Resolve tree 2
    AS path: I
```

show route exact terse

```
user@host> show route exact 207.17.136.0/24 terse
```

```
inet.0: 22 destinations, 23 routes (21 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 207.17.136.0/24  S   5                      >192.168.71.254
```

show route export

List of Syntax	Syntax on page 2332 Syntax (EX Series Switches) on page 2332
Syntax	<pre>show route export <brief detail> <instance <instance-name> routing-table-name> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switches)	<pre>show route export <brief detail> <instance <instance-name> routing-table-name></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display policy-based route export information. Policy-based export simplifies the process of exchanging route information between routing instances.
Options	<p>none—(Same as brief.) Display standard information about policy-based export for all instances and routing tables on all systems.</p> <p>brief detail—(Optional) Display the specified level of output.</p> <p>instance <instance-name>—(Optional) Display a particular routing instance for which policy-based export is currently enabled.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>routing-table-name—(Optional) Display information about policy-based export for all routing tables whose name begins with this string (for example, inet.0 and inet6.0 are both displayed when you run the show route export inet command).</p>
Required Privilege Level	view
List of Sample Output	show route export on page 2333 show route export detail on page 2333 show route export instance detail on page 2334
Output Fields	Table 200 on page 2333 lists the output fields for the show route export command. Output fields are listed in the approximate order in which they appear.

Table 200: show route export Output Fields

Field Name	Field Description	Level of Output
Table or <i>table-name</i>	Name of the routing tables that either import or export routes.	All levels
Routes	Number of routes exported from this table into other tables. If a particular route is exported to different tables, the counter will only increment by one.	brief none
Export	Whether the table is currently exporting routes to other tables: Y or N (Yes or No).	brief none
Import	Tables currently importing routes from the originator table. (Not displayed for tables that are not exporting any routes.)	detail
Flags	(instance keyword only) Flags for this feature on this instance: <ul style="list-style-type: none"> config auto-policy—The policy was deduced from the configured IGP export policies. cleanup—Configuration information for this instance is no longer valid. config—The instance was explicitly configured. 	detail
Options	(instance keyword only) Configured option displays the type of routing tables the feature handles: <ul style="list-style-type: none"> unicast—Indicates <i>instance.inet.0</i>. multicast—Indicates <i>instance.inet.2</i>. unicast multicast—Indicates <i>instance.inet.0</i> and <i>instance.inet.2</i>. 	detail
Import policy	(instance keyword only) Policy that route export uses to construct the import-export matrix. Not displayed if the instance type is vrf .	detail
Instance	(instance keyword only) Name of the routing instance.	detail
Type	(instance keyword only) Type of routing instance: forwarding , non-forwarding , or vrf .	detail

Sample Output

show route export

```
user@host> show route export
```

Table	Export	Routes
inet.0	N	0
black.inet.0	Y	3
red.inet.0	Y	4

show route export detail

```
user@host> show route export detail
```

inet.0	Routes:	0
black.inet.0	Routes:	3
Import: [inet.0]		

red.inet.0	Routes:	4
Import: [inet.0]		

show route export instance detail

```
user@host> show route export instance detail
```

Instance: master	Type: forwarding
Flags: <config auto-policy>	Options: <unicast multicast>
Import policy: [(ospf-master-from-red isis-master-from-black)]	
Instance: black	Type: non-forwarding
Instance: red	Type: non-forwarding

show route export vrf-target

Syntax `show route export vrf-target`
`<brief | detail>`
`<community community--regular-expression>`
`<logical-system (all | logical-system-name)>`

Release Information Command introduced before Junos OS Release 7.4.

Description Display the VPN routing and forwarding (VRF) target communities for which policy-based route export is currently distributing routes. This command is relevant when there are overlapping virtual private networks (VPNs).

Options **none**—Display standard information about all target communities.

brief | detail—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.

community *community--regular-expression*—(Optional) Display information about the specified community.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show route export vrf-target on page 2336](#)
[show route export vrf-target community on page 2336](#)
[show route export vrf-target detail on page 2336](#)

Output Fields [Table 201 on page 2335](#) lists the output fields for the **show route export vrf-target** command. Output fields are listed in the approximate order in which they appear.

Table 201: show route export vrf-target Output Fields

Field Name	Field Description	Level of Output
Route target	Target communities for which auto-export is currently distributing routes.	brief none
Family	Routing table entries for the specified family.	brief none
<i>type-of-routing-table(s)</i>	Type of routing tables the feature handles: <ul style="list-style-type: none"> unicast—Indicates <i>instance.inet.0</i>. multicast—Indicates <i>instance.inet.2</i>. unicast multicast—Indicates <i>instance.inet.0</i> and <i>instance.inet.2</i>. 	brief none

Table 201: show route export vrf-target Output Fields (continued)

Field Name	Field Description	Level of Output
Import	Number of routing tables that are currently importing routes with this target community. Omitted for tables that are not importing routes.	brief none
Export	Number of routing tables that are currently exporting routes with this target community. Omitted for tables that are not exporting routes.	brief none
Target	Target communities, family, and options for which auto-export is currently distributing routes.	detail
Import table(s)	Name of the routing tables that are importing a particular route target.	detail
Export table(s)	Name of the routing tables that are exporting a particular route target.	detail

Sample Output

show route export vrf-target

```
user@host> show route export vrf-target
```

Route	Target	Family		Import	Export
69:1		inet	unicast	2	2
69:2		inet	unicast	2	2

show route export vrf-target community

```
user@host> show route export vrf-target community target:69:1
```

Route	Target	Family		Import	Export
69:1		inet	unicast	2	2

show route export vrf-target detail

```
user@host> show route export vrf-target detail
```

```
Target: 1:12                                inet    unicast
  Import table(s): vrf-11.inet.0 vrf-12.inet.0
  Export table(s): vrf-12.inet.0
Target: 1:13                                inet    unicast
  Import table(s): vrf-12.inet.0 vrf-13.inet.0
  Export table(s): vrf-13.inet.0
```

show route extensive

List of Syntax	Syntax on page 2337 Syntax (EX Series Switches) on page 2337
Syntax	<pre>show route extensive <destination-prefix> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switches)	<pre>show route extensive <destination-prefix></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Display extensive information about the active entries in the routing tables.
Options	<p>none—Display all active entries in the routing table.</p> <p>destination-prefix—(Optional) Display active entries for the specified address or range of addresses.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route extensive on page 2344 show route extensive (Access Route) on page 2351 show route extensive (BGP PIC Edge) on page 2352 show route extensive (FRR and LFA) on page 2352 show route extensive (IS-IS) on page 2353 show route extensive (Route Reflector) on page 2353 show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 2354 show route label detail (Multipoint LDP with Multicast-Only Fast Reroute) on page 2354
Output Fields	<p>Table 202 on page 2337 describes the output fields for the show route extensive command. Output fields are listed in the approximate order in which they appear.</p>

Table 202: show route extensive Output Fields

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.
<i>number routes</i>	<p>Number of routes in the routing table and total number of routes in the following states:</p> <ul style="list-style-type: none"> • active (routes that are active). • holddown (routes that are in the pending state before being declared inactive). • hidden (routes that are not used because of a routing policy).
<i>route-destination</i> (entry, announced)	<p>Route destination (for example: 10.0.0.1/24). The entry value is the number of route for this destination, and the announced value is the number of routes being announced for this destination. Sometimes the route destination is presented in another format, such as:</p> <ul style="list-style-type: none"> • MPLS-label (for example, 80001). • interface-name (for example, ge-1/0/2). • neighbor-address:control-word-status:encapsulation type:vc-id:source (Layer 2 circuit only; for example, 10.1.1.195:NoCtrlWord:1:1:Local/96). <ul style="list-style-type: none"> • neighbor-address—Address of the neighbor. • control-word-status—Whether the use of the control word has been negotiated for this virtual circuit: NoCtrlWord or CtrlWord. • encapsulation type—Type of encapsulation, represented by a number: (1) Frame Relay DLCI, (2) ATM AAL5 VCC transport, (3) ATM transparent cell transport, (4) Ethernet, (5) VLAN Ethernet, (6) HDLC, (7) PPP, (8) ATM VCC cell transport, (10) ATM VPC cell transport. • vc-id—Virtual circuit identifier. • source—Source of the advertisement: Local or Remote.
TSI	Protocol header information.
label stacking	<p>(Next-to-the-last-hop routing device for MPLS only) Depth of the MPLS label stack, where the label-popping operation is needed to remove one or more labels from the top of the stack. A pair of routes is displayed, because the pop operation is performed only when the stack depth is two or more labels.</p> <ul style="list-style-type: none"> • S=0 route indicates that a packet with an incoming label stack depth of two or more exits this router with one fewer label (the label-popping operation is performed). • If there is no S= information, the route is a normal MPLS route, which has a stack depth of 1 (the label-popping operation is not performed).
[protocol, preference]	<p>Protocol from which the route was learned and the preference value for the route.</p> <ul style="list-style-type: none"> • +—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table. • —A hyphen indicates the last active route. • *—An asterisk indicates that the route is both the active and the last active route. An asterisk before a to line indicates the best subpath to the route. <p>In every routing metric except for the BGP LocalPref attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the LocalPref value in the Preference2 field. For example, if the LocalPref value for Route 1 is 100, the Preference2 value is -101. If the LocalPref value for Route 2 is 155, the Preference2 value is -156. Route 2 is preferred because it has a higher LocalPref value and a lower Preference2 value.</p>

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
Level	(IS-IS only). In IS-IS, a single autonomous system (AS) can be divided into smaller groups called areas. Routing between areas is organized hierarchically, allowing a domain to be administratively divided into smaller areas. This organization is accomplished by configuring Level 1 and Level 2 intermediate systems. Level 1 systems route within an area. When the destination is outside an area, they route toward a Level 2 system. Level 2 intermediate systems route between areas and toward other ASs.
Route Distinguisher	IP subnet augmented with a 64-bit prefix.
PMSI	Provider multicast service interface (MVPN routing table).
Next-hop type	Type of next hop. For a description of possible values for this field, see the Output Field table in the show route detail command.
Next-hop reference count	Number of references made to the next hop.
Flood nexthop branches exceed maximum message	Indicates that the number of flood next-hop branches exceeded the system limit of 32 branches, and only a subset of the flood next-hop branches were installed in the kernel.
Source	IP address of the route source.
Next hop	Network layer address of the directly reachable neighboring system.
via	Interface used to reach the next hop. If there is more than one interface available to the next hop, the name of the interface that is actually used is followed by the word Selected . This field can also contain the following information: <ul style="list-style-type: none"> • Weight—Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible. • Balance—Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a routing device is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.
Label-switched-path lsp-path-name	Name of the LSP used to reach the next hop.
Label operation	MPLS label and operation occurring at this routing device. The operation can be pop (where a label is removed from the top of the stack), push (where another label is added to the label stack), or swap (where a label is replaced by another label).
Offset	Whether the metric has been increased or decreased by an offset value.
Interface	(Local only) Local interface name.
Protocol next hop	Network layer address of the remote routing device that advertised the prefix. This address is used to recursively derive a forwarding next hop.

Table 202: *show route extensive Output Fields (continued)*

Field Name	Field Description
<i>label-operation</i>	MPLS label and operation occurring at this routing device. The operation can be pop (where a label is removed from the top of the stack), push (where another label is added to the label stack), or swap (where a label is replaced by another label).
Indirect next hops	<p>When present, a list of nodes that are used to resolve the path to the next-hop destination, in the order that they are resolved.</p> <p>When BGP PIC Edge is enabled, the output lines that contain Indirect next hop: weight follow next hops that the software can use to repair paths where a link failure occurs. The next-hop weight has one of the following values:</p> <ul style="list-style-type: none">• 0x1 indicates active next hops.• 0x4000 indicates passive next hops.
State	State of the route (a route can be in more than one state). See the Output Field table in the show route detail command.
Session ID	The BFD session ID number that represents the protection using MPLS fast reroute (FRR) and loop-free alternate (LFA).
Weight	<p>Weight for the backup path. If the weight of an indirect next hop is larger than zero, the weight value is shown.</p> <p>For sample output, see show route table.</p>

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
Inactive reason	<p>If the route is inactive, the reason for its current state is indicated. Typical reasons include:</p> <ul style="list-style-type: none"> • Active preferred—Currently active route was selected over this route. • Always compare MED—Path with a lower multiple exit discriminator (MED) is available. • AS path—Shorter AS path is available. • Cisco Non-deterministic MED selection—Cisco nondeterministic MED is enabled and a path with a lower MED is available. • Cluster list length—Path with a shorter cluster list length is available. • Forwarding use only—Path is only available for forwarding purposes. • IGP metric—Path through the next hop with a lower IGP metric is available. • IGP metric type—Path with a lower OSPF link-state advertisement type is available. • Interior > Exterior > Exterior via Interior—Direct, static, IGP, or EBGP path is available. • Local preference—Path with a higher local preference value is available. • Next hop address—Path with a lower metric next hop is available. • No difference—Path from a neighbor with a lower IP address is available. • Not Best in its group—Occurs when multiple peers of the same external AS advertise the same prefix and are grouped together in the selection process. When this reason is displayed, an additional reason is provided (typically one of the other reasons listed). • Number of gateways—Path with a higher number of next hops is available. • Origin—Path with a lower origin code is available. • OSPF version—Path does not support the indicated OSPF version. • RIB preference—Route from a higher-numbered routing table is available. • Route distinguisher—64-bit prefix added to IP subnets to make them unique. • Route metric or MED comparison—Route with a lower metric or MED is available. • Route preference—Route with a lower preference value is available. • Router ID—Path through a neighbor with a lower ID is available. • Unusable path—Path is not usable because of one of the following conditions: the route is damped, the route is rejected by an import policy, or the route is unresolved. • Update source—Last tiebreaker is the lowest IP address value.
Local AS	Autonomous system (AS) number of the local routing device.
Age	How long the route has been known.
AIGP	Accumulated interior gateway protocol (AIGP) BGP attribute.
Metric	Cost value of the indicated route. For routes within an AS, the cost is determined by IGP and the individual protocol metrics. For external routes, destinations, or routing domains, the cost is determined by a preference value.
MED-plus-IGP	Metric value for BGP path selection to which the IGP cost to the next-hop destination has been added.
TTL-Action	<p>For MPLS LSPs, state of the TTL propagation attribute. Can be enabled or disabled for all RSVP-signaled and LDP-signaled LSPs or for specific VRF routing instances.</p> <p>For sample output, see show route table.</p>

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
Task	Name of the protocol that has added the route.
Announcement bits	<p>List of protocols that are consumers of the route. Using the following output as an example, Announcement bits (3): 0-KRT 5-Resolve tree 2 8-BGP RT Background there are (3) announcement bits to reflect the three clients (protocols) that have state for this route: Kernel (0-KRT), 5 (resolution tree process 2), and 8 (BGP).</p> <p>The notation <i>n</i>-Resolve inet indicates that the route is used for route resolution for next hops found in the routing table. <i>n</i> is an index used by Juniper Networks customer support only.</p>
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> • I—IGP. • E—EGP. • Recorded—The AS path is recorded by the sample process (sampled). • ?—Incomplete; typically, the AS path was aggregated. <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> • []—Brackets enclose the local AS number associated with the AS path if more than one AS number is configured on the routing device, or if AS path prepending is configured. • { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order. • ()—Parentheses enclose a confederation. • ([])—Parentheses and brackets enclose a confederation set. <p>NOTE: In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>
validation-state	<p>(BGP-learned routes) Validation status of the route:</p> <ul style="list-style-type: none"> • Invalid—Indicates that the prefix is found, but either the corresponding AS received from the EBGp peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database. • Unknown—Indicates that the prefix is not among the prefixes or prefix ranges in the database. • Unverified—Indicates that origin validation is not enabled for the BGP peers. • Valid—Indicates that the prefix and autonomous system pair are found in the database.
FECs bound to route	Point-to-multipoint root address, multicast source address, and multicast group address when multipoint LDP (M-LDP) inband signaling is configured.
AS path: I <Originator>	(For route reflected output only) Originator ID attribute set by the route reflector.

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
route status	<p>Indicates the status of a BGP route:</p> <ul style="list-style-type: none"> • Accepted—The specified BGP route is imported by the default BGP policy. • Import—The route is imported into a Layer 3 VPN routing instance. • Import-Protect—A remote instance egress that is protected. • Multipath—A BGP multipath active route. • MultipathContrib—The route is not active but contributes to the BGP multipath. • Protect—An egress route that is protected. • Stale—A route that is marked stale due to graceful restart.
Primary Upstream	When multipoint LDP with multicast-only fast reroute (MoFRR) is configured, the primary upstream path. MoFRR transmits a multicast join message from a receiver toward a source on a primary path, while also transmitting a secondary multicast join message from the receiver toward the source on a backup path.
RPF Nexthops	When multipoint LDP with MoFRR is configured, the reverse-path forwarding (RPF) next-hop information. Data packets are received from both the primary path and the secondary paths. The redundant packets are discarded at topology merge points due to the RPF checks.
Label	Multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.
weight	Value used to distinguish MoFRR primary and backup routes. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.
VC Label	MPLS label assigned to the Layer 2 circuit virtual connection.
MTU	Maximum transmission unit (MTU) of the Layer 2 circuit.
VLAN ID	VLAN identifier of the Layer 2 circuit.
Cluster list	(For route reflected output only) Cluster ID sent by the route reflector.
Originator ID	(For route reflected output only) Address of router that originally sent the route to the route reflector.
Prefixes bound to route	Forwarding Equivalent Class (FEC) bound to this route. Applicable only to routes installed by LDP.
Communities	Community path attribute for the route. See the Output Field table in the show route detail command for all possible values for this field.
Layer2-info: encaps	Layer 2 encapsulation (for example, VPLS).
control flags	Control flags: none or Site Down.
mtu	Maximum transmission unit (MTU) information.
Label-Base, range	First label in a block of labels and label block size. A remote PE routing device uses this first label when sending traffic toward the advertising PE routing device.

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
status vector	Layer 2 VPN and VPLS network layer reachability information (NLRI).
Localpref	Local preference value included in the route.
Router ID	BGP router ID as advertised by the neighbor in the open message.
Primary Routing Table	In a routing table group, the name of the primary routing table in which the route resides.
Secondary Tables	In a routing table group, the name of one or more secondary tables in which the route resides.
Originating RIB	Name of the routing table whose active route was used to determine the forwarding next-hop entry in the resolution database. For example, in the case of inet.0 resolving through inet.0 and inet.3, this field indicates which routing table, inet.0 or inet.3, provided the best path for a particular prefix.
Node path count	Number of nodes in the path.
Forwarding nexthops	Number of forwarding next hops. The forwarding next hop is the network layer address of the directly reachable neighboring system (if applicable) and the interface used to reach it.

Sample Output

show route extensive

```

user@host> show route extensive

inet.0: 22 destinations, 23 routes (21 active, 0 holddown, 1 hidden)
203.0.113.10/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 203.0.113.10/16 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 29
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 64496
    Age: 1:34:06
    Task: RT
    Announcement bits (2): 0-KRT 3-Resolve tree 2
    AS path: I

203.0.113.30/30 (2 entries, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 2
    Next hop: via so-0/3/0.0, selected
    State: <Active Int>
    Local AS: 64496
    Age: 1:32:40
    Task: IF
    Announcement bits (1): 3-Resolve tree 2
    AS path: I
  OSPF Preference: 10
    Next-hop reference count: 1

```

```

        Next hop: via so-0/3/0.0, selected
        State: <Int>
        Inactive reason: Route Preference
        Local AS: 64496
        Age: 1:32:40    Metric: 1
        Area: 0.0.0.0
        Task: OSPF
        AS path: I

203.0.113.103/32 (1 entry, 1 announced)
    *Local Preference: 0
        Next hop type: Local
        Next-hop reference count: 7
        Interface: so-0/3/0.0
        State: <Active NoReadvrt Int>
        Local AS: 644969
        Age: 1:32:43
        Task: IF
        Announcement bits (1): 3-Resolve tree 2
        AS path: I

...

203.0.113.203/30 (1 entry, 1 announced)
TSI:
KRT in-kerne 203.0.113.203/30 -> {203.0.113.216}
    *OSPF Preference: 10
        Next-hop reference count: 9
        Next hop: via so-0/3/0.0
        Next hop: 203.0.113.216 via ge-3/1/0.0, selected
        State: <Active Int>
        Local AS: 64496
        Age: 1:32:19    Metric: 2
        Area: 0.0.0.0
        Task: OSPF
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

...

198.51.100.2/32 (1 entry, 1 announced)
TSI:
KRT in-kerne 198.51.100.2/32 -> {}
    *PIM Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 64496
        Age: 1:34:08
        Task: PIM Recv
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

...

198.51.100.22/32 (1 entry, 1 announced)
TSI:
KRT in-kerne 198.51.100.22/32 -> {}
    *IGMP Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>

```

```

        Local AS:    64496
        Age: 1:34:06
        Task: IGMP
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

203.0.113.103/32 (1 entry, 1 announced)
  State: <FlashAll>
  *RSVP   Preference: 7
          Next-hop reference count: 6
          Next hop: 203.0.113.216 via ge-3/1/0.0 weight 0x1, selected
          Label-switched-path green-r1-r3
          Label operation: Push 100096
          State: <Active Int>
          Local AS:    64496
          Age: 1:28:12   Metric: 2
          Task: RSVP
          Announcement bits (2): 1-Resolve tree 1 2-Resolve tree 2
          AS path: I

203.0.113.238/32 (1 entry, 1 announced)
  State: <FlashAll>
  *RSVP   Preference: 7
          Next-hop reference count: 6
          Next hop: via so-0/3/0.0 weight 0x1, selected
          Label-switched-path green-r1-r2
          State: <Active Int>
          Local AS:    64496
          Age: 1:28:12   Metric: 1
          Task: RSVP
          Announcement bits (2): 1-Resolve tree 1 2-Resolve tree 2
          AS path: I

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

...

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

47.0005.80ff.f800.0000.0108.0001.0102.5507.1052/152 (1 entry, 0 announced)
  *Direct Preference: 0
          Next hop type: Interface
          Next-hop reference count: 1
          Next hop: via lo0.0, selected
          State: <Active Int>
          Local AS:    64496
          Age: 1:34:07
          Task: IF
          AS path: I

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

0 (1 entry, 1 announced)
TSI:
KRT in-kernel 0      /36 -> {}
  *MPLS   Preference: 0
          Next hop type: Receive
          Next-hop reference count: 6

```

```

        State: <Active Int>
        Local AS: 64496
        Age: 1:34:08 Metric: 1
        Task: MPLS
        Announcement bits (1): 0-KRT
        AS path: I
...
mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
299840 (1 entry, 1 announced)
TSI:
KRT in-kernel 299840 /52 -> {indirect(1048575)}
    *RSVP Preference: 7/2
        Next hop type: Flood
        Address: 0x9174a30
        Next-hop reference count: 4
        Next hop type: Router, Next hop index: 798
        Address: 0x9174c28
        Next-hop reference count: 2
        Next hop: 198.51.100.2 via lt-1/2/0.9 weight 0x1
        Label-switched-path R2-to-R4-2p2mp
        Label operation: Pop
        Next hop type: Router, Next hop index: 1048574
        Address: 0x92544f0
        Next-hop reference count: 2
        Next hop: 198.51.100.2 via lt-1/2/0.7 weight 0x1
        Label-switched-path R2-to-R200-p2mp
        Label operation: Pop
        Next hop: 198.51.100.2 via lt-1/2/0.5 weight 0x8001
        Label operation: Pop
        State: <Active Int>
        Age: 1:29 Metric: 1
        Task: RSVP
        Announcement bits (1): 0-KRT
        AS path: I...
800010 (1 entry, 1 announced)
TSI:
KRT in-kernel 800010 /36 -> {vt-3/2/0.32769}
    *VPLS Preference: 7
        Next-hop reference count: 2
        Next hop: via vt-3/2/0.32769, selected
        Label operation: Pop
        State: <Active Int>
        Age: 1:31:53
        Task: Common L2 VC
        Announcement bits (1): 0-KRT
        AS path: I
vt-3/2/0.32769 (1 entry, 1 announced)
TSI:
KRT in-kernel vt-3/2/0.32769.0 /16 -> {indirect(1048574)}
    *VPLS Preference: 7
        Next-hop reference count: 2
        Next hop: 203.0.113.216 via ge-3/1/0.0 weight 0x1, selected
        Label-switched-path green-r1-r3
        Label operation: Push 800012, Push 100096(top)
        Protocol next hop: 203.0.113.103

```

```

Push 800012
Indirect next hop: 87272e4 1048574
State: <Active Int>
Age: 1:31:53    Metric2: 2
Task: Common L2 VC
Announcement bits (2): 0-KRT 1-Common L2 VC
AS path: I
Communities: target:11111:1 Layer2-info: encaps:VPLS,
control flags:, mtu: 0
Indirect next hops: 1
    Protocol next hop: 203.0.113.103 Metric: 2
    Push 800012
    Indirect next hop: 87272e4 1048574
    Indirect path forwarding next hops: 1
        Next hop: 203.0.113.216 via ge-3/1/0.0 weight 0x1

    203.0.113.103/32 Originating RIB: inet.3
        Metric: 2                                Node path count: 1
        Forwarding nexthops: 1
            Nexthop: 203.0.113.216 via ge-3/1/0.0

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

2001::db8::10:255:71:52/128 (1 entry, 0 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via lo0.0, selected
        State: <Active Int>
        Local AS: 64496
        Age: 1:34:07
        Task: IF
        AS path: I

fe80::280:42ff:fe10:f179/128 (1 entry, 0 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via lo0.0, selected
        State: <Active NoReadvrt Int>
        Local AS: 64496
        Age: 1:34:07
        Task: IF
        AS path: I

ff02::2/128 (1 entry, 1 announced)
TSI:
KRT in-kernel ff02::2/128 -> {}
    *PIM Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 64496
        Age: 1:34:08
        Task: PIM Recv6
        Announcement bits (1): 0-KRT
        AS path: I

ff02::d/128 (1 entry, 1 announced)
TSI:
KRT in-kernel ff02::d/128 -> {}

```



```

    *PIM      Preference: 0
              Next-hop reference count: 18
              State: <Active NoReadvrt Int>
              Local AS:      64496
              Age: 1:34:08
              Task: PIM Recv6
              Announcement bits (1): 0-KRT
              AS path: I

ff02::16/128 (1 entry, 1 announced)
TSI:
KRT in-kernel ff02::16/128 -> {}
    *MLD      Preference: 0
              Next-hop reference count: 18
              State: <Active NoReadvrt Int>
              Local AS:      64496
              Age: 1:34:06
              Task: MLD
              Announcement bits (1): 0-KRT
              AS path: I

private.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

fe80::280:42ff:fe10:f179/128 (1 entry, 0 announced)
    *Direct Preference: 0
              Next hop type: Interface
              Next-hop reference count: 1
              Next hop: via lo0.16385, selected
              State: <Active NoReadvrt Int>
              Age: 1:34:07
              Task: IF
              AS path: I

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

203.0.113.103:1:3:1/96 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
              Route Distinguisher: 203.0.113.103:1
              Next-hop reference count: 7
              Source: 203.0.113.103
              Protocol next hop: 203.0.113.103
              Indirect next hop: 2 no-forward
              State: <Secondary Active Int Ext>
              Local AS:      64496 Peer AS:      64496
              Age: 1:28:12   Metric2: 1
              Task: BGP_69.203.0.113.103+179
              Announcement bits (1): 0-green-l2vpn
              AS path: I
              Communities: target:11111:1 Layer2-info: encaps:VPLS,
              control flags:, mtu: 0
              Label-base: 800008, range: 8
              Localpref: 100
              Router ID: 203.0.113.103
              Primary Routing Table bgp.l2vpn.0

203.0.113.152:1:1:1/96 (1 entry, 1 announced)
TSI:
Page 0 idx 0 Type 1 val 8699540
    *L2VPN    Preference: 170/-1
              Next-hop reference count: 5

```

```

        Protocol next hop: 203.0.113.152
        Indirect next hop: 0 -
        State: <Active Int Ext>
        Age: 1:34:03    Metric2: 1
        Task: green-l2vpn
        Announcement bits (1): 1-BGP.0.0.0.0+179
        AS path: I
        Communities: Layer2-info: encaps:VPLS, control flags:Site-Down,
        mtu: 0
        Label-base: 800016, range: 8, status-vector: 0x9F

203.0.113.152:1:5:1/96 (1 entry, 1 announced)
TSI:
Page 0 idx 0 Type 1 val 8699528
    *L2VPN Preference: 170/-101
        Next-hop reference count: 5
        Protocol next hop: 203.0.113.152
        Indirect next hop: 0 -
        State: <Active Int Ext>
        Age: 1:34:03    Metric2: 1
        Task: green-l2vpn
        Announcement bits (1): 1-BGP.0.0.0.0+179
        AS path: I
        Communities: Layer2-info: encaps:VPLS, control flags:, mtu: 0
        Label-base: 800008, range: 8, status-vector: 0x9F

...

l2circuit.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
TSI:

203.0.113.163:CtrlWord:4:3:Local/96 (1 entry, 1 announced)
    *L2CKT Preference: 7
        Next hop: via so-1/1/2.0 weight 1, selected
        Label-switched-path my-lsp
        Label operation: Push 100000[0]
        Protocol next hop: 203.0.113.163 Indirect next hop: 86af000 296
        State: <Active Int>
        Local AS: 64499
        Age: 10:21
        Task: l2 circuit
        Announcement bits (1): 0-LDP
        AS path: I
        VC Label 100000, MTU 1500, VLAN ID 512

203.0.113.55/24 (1 entry, 1 announced)
TSI:
KRT queued (pending) add
    198.51.100.0/24 -> {Push 300112}
    *BGP Preference: 170/-101
        Next hop type: Router
        Address: 0x925c208
        Next-hop reference count: 2
        Source: 203.0.113.9
        Next hop: 203.0.113.9 via ge-1/2/0.15, selected
        Label operation: Push 300112
        Label TTL action: prop-ttl
        State: <Active Ext>

```

```

Local AS: 64509 Peer AS: 65539
Age: 1w0d 23:06:56
AIGP: 25
Task: BGP_65539.203.0.113.9+56732
Announcement bits (1): 0-KRT
AS path: 65539 64508 I
Accepted
Route Label: 300112
Localpref: 100
Router ID: 213.0.113.99

```

show route extensive (Access Route)

```
user@host> show route 203.0.113.102 extensive
```

```

inet.0: 39256 destinations, 39258 routes (39255 active, 0 holddown, 1 hidden)
203.0.113.102/32 (1 entry, 1 announced)
TSI:
KRT in-kerne1 203.0.113.102/32 -> {192.0.2.2}
OSPF area : 0.0.0.0, LSA ID : 203.0.113.102, LSA type : Extern
  *Access Preference: 13
    Next-hop reference count: 78472
    Next hop: 192.0.2.2 via fe-0/0/0.0, selected
    State: <Active Int>
  Age: 12
    Task: RPD Unix Domain Server./var/run/rpd_serv.local
    Announcement bits (2): 0-KRT 1-OSPFv2
    AS path: I

```

```
user@host> show route 2001:db8:4641:1::/48 extensive
```

```

inet6.0: 75 destinations, 81 routes (75 active, 0 holddown, 0 hidden)
2001:db8:4641:1::/48 (1 entry, 1 announced)
TSI:
KRT in-kerne1 2001:db8:4641:1::/48 -> {#0 0.13.1.0.0.1}
  *Access Preference: 13
    Next hop type: Router, Next hop index: 74548
    Address: 0x1638c1d8
    Next-hop reference count: 6
    Next hop: #0 0.13.1.0.0.1 via demux0.1073753267, selected
    Session Id: 0x0
    State: <Active Int>
    Age: 4:17
    Validation State: unverified
    Task: RPD Unix Domain Server./var/run/rpd_serv.local
    Announcement bits (2): 0-KRT 4-Resolve tree 2
    AS path: I
2001:db8:4641:1::/128 (1 entry, 1 announced)
TSI:
KRT in-kerne1 2001:db8:4641:1::/128 -> {#0 0.13.1.0.0.1}
  *Access-internal Preference: 12
    Next hop type: Router, Next hop index: 74548
    Address: 0x1638c1d8
    Next-hop reference count: 6
    Next hop: #0 0.13.1.0.0.1 via demux0.1073753267, selected
    Session Id: 0x0
    State: <Active Int>
    Age: 4:17

```

```

Validation State: unverified
Task: RPD Unix Domain Server./var/run/rpd_serv.local
Announcement bits (2): 0-KRT 4-Resolve tree 2
AS path: I

```

show route extensive (BGP PIC Edge)

```

user@host> show route 198.51.100.6 extensive

ed.inet.0: 6 destinations, 9 routes (6 active, 0 holddown, 0 hidden)
 198.51.100.6/32 (3 entries, 2 announced)
    State: <CalcForwarding>
    TSI:
    KRT in-kernel 198.51.100.6/32 -> {indirect(1048574), indirect(1048577)}
    Page 0 idx 0 Type 1 val 9219e30
    Nexthop: Self
    AS path: [2] 3 I
    Communities: target:2:1
    Path 198.51.100.6 from 198.51.100.4 Vector len 4. Val: 0
..
    #Multipath Preference: 255
    Next hop type: Indirect
    Address: 0x93f4010
    Next-hop reference count: 2
..
    Protocol next hop: 198.51.1001.4
    Push 299824
    Indirect next hop: 944c000 1048574 INH Session ID: 0x3
    Indirect next hop: weight 0x1
    Protocol next hop: 198.51.100.5
    Push 299824
    Indirect next hop: 944c1d8 1048577 INH Session ID: 0x4
    Indirect next hop: weight 0x4000
    State: <ForwardingOnly Int Ext>
    Inactive reason: Forwarding use only
    Age: 25 Metric2: 15
    Validation State: unverified
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: 3 I
    Communities: target:2:1

```

show route extensive (FRR and LFA)

```

user@host> show route 203.0.113.20 extensive

inet.0: 46 destinations, 49 routes (45 active, 0 holddown, 1 hidden)
 203.0.113.20/24 (2 entries, 1 announced)
    State: FlashAll
    TSI:
    KRT in-kernel 203.0.113.20/24 -> {Push 299776, Push 299792}
    *RSVP Preference: 7/1
    Next hop type: Router, Next hop index: 1048574
    Address: 0xbbbc010
    Next-hop reference count: 5
    Next hop: 203.0.113.112 via ge-2/1/8.0 weight 0x1, selected
    Label-switched-path europa-d-to-europa-e
    Label operation: Push 299776
    Label TTL action: prop-ttl

```

```

Session Id: 0x201
Next hop: 203.0.113.122 via ge-2/1/4.0 weight 0x4001
Label-switched-path europa-d-to-europa-e
Label operation: Push 299792
Label TTL action: prop-ttl
Session Id: 0x202
State: Active Int
Local AS: 64500
Age: 5:31 Metric: 2
Task: RSVP
Announcement bits (1): 0-KRT
AS path: I
OSPF Preference: 10
Next hop type: Router, Next hop index: 615
Address: 0xb9d78c4
Next-hop reference count: 7
Next hop: 203.0.113.112 via ge-2/1/8.0, selected
Session Id: 0x201
State: Int
Inactive reason: Route Preference
Local AS: 64500
Age: 5:35 Metric: 3
Area: 0.0.0.0
Task: OSPF
AS path: I

```

show route extensive (IS-IS)

```
user@host> show route extensive
```

```

IS-IS Preference: 15
Level: 1
Next hop type: Router, Next hop index: 1048577
Address: 0XXXXXXXXXX
Next-hop reference count: YY
Next hop: 203.0.113.22 via ae1.0 balance 43%, selected
Session Id: 0x141
Next hop: 203.0.113.22 via ae0.0 balance 57%

```

show route extensive (Route Reflector)

```
user@host> show route extensive
```

```

203.0.113.0/8 (1 entry, 1 announced)

TSI:
KRT in-kernel 203.0.113.0/8 -> {indirect(40)}
  *BGP Preference: 170/-101
    Source: 192.168.4.214
    Protocol next hop: 198.51.100.192 Indirect next hop: 84ac908 40
    State: <Active Int Ext>
    Local AS: 65548 Peer AS: 65548
    Age: 3:09 Metric: 0 Metric2: 0
    Task: BGP_65548.192.168.4.214+1033
    Announcement bits (2): 0-KRT 4-Resolve inet.0
    AS path: 65544 64507 I <Originator>
    Cluster list: 198.51.100.1
    Originator ID: 203.0.113.88
    Communities: 7777:7777

```

```

Localpref: 100
Router ID: 203.0.113.4
Indirect next hops: 1
    Protocol next hop: 203.0.113.192 Metric: 0
    Indirect next hop: 84ac908 40
    Indirect path forwarding next hops: 0
    Next hop type: Discard

```

show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show route label 299872 detail

mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
299872 (1 entry, 1 announced)
    *LDP      Preference: 9
              Next hop type: Flood
              Next-hop reference count: 3
              Address: 0x9097d90
              Next hop: via vt-0/1/0.1
              Next-hop index: 661
              Label operation: Pop
              Address: 0x9172130
              Next hop: via so-0/0/3.0
              Next-hop index: 654
              Label operation: Swap 299872
              State: **Active Int>
              Local AS: 64511
              Age: 8:20      Metric: 1
              Task: LDP
              Announcement bits (1): 0-KRT
              AS path: I
              FECs bound to route: P2MP root-addr 203.0.113.166, grp 203.0.113.1,
src 192.168.142.2

```

show route label detail (Multipoint LDP with Multicast-Only Fast Reroute)

```

user@host> show route label 301568 detail

mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
301568 (1 entry, 1 announced)
    *LDP      Preference: 9
              Next hop type: Flood
              Address: 0x2735208
              Next-hop reference count: 3
              Next hop type: Router, Next hop index: 1397
              Address: 0x2735d2c
              Next-hop reference count: 3
              Next hop: 203.0.113.82 via ge-1/2/22.0
              Label operation: Pop
              Load balance label: None;
              Next hop type: Router, Next hop index: 1395
              Address: 0x2736290
              Next-hop reference count: 3
              Next hop: 203.0.113.2 via ge-1/2/18.0
              Label operation: Pop
              Load balance label: None;
              State: <Active Int AckRequest MulticastRPF>
              Local AS: 64500

```

```
Age: 54:05      Metric: 1
Validation State: unverified
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 198.51.100.1, grp: 203.0.113.1,
src: 192.168.219.11
Primary Upstream : 198.51.100.3:0--198.51.100.2:0
RPF Nexthops :
    ge-1/2/15.0, 10.2.94.1, Label: 301568, weight: 0x1
    ge-1/2/14.0, 10.2.3.1, Label: 301568, weight: 0x1
Backup Upstream : 198.51.100.3:0--198.51.100.6:0
RPF Nexthops :
    ge-1/2/20.0, 198.51.100.96, Label: 301584, weight: 0xffff
    ge-1/2/19.0, 198.51.100.36, Label: 301584, weight: 0xffff
```

show route flow validation

List of Syntax	Syntax on page 2356 Syntax (EX Series Switches) on page 2356
Syntax	<pre>show route flow validation <brief detail> <ip-prefix> <table table-name> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switches)	<pre>show route flow validation <brief detail> <ip-prefix> <table table-name></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display flow route information.
Options	<p>none—Display flow route information.</p> <p>brief detail—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>ip-prefix—(Optional) IP address for the flow route.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>table table-name—(Optional) Display flow route information for all routing tables whose name begins with this string (for example, inet.0 and inet6.0 are both displayed when you run the show route flow validation inet command).</p>
Required Privilege Level	view
List of Sample Output	show route flow validation on page 2357 show route flow validation (IPv6) on page 2357
Output Fields	Table 203 on page 2357 lists the output fields for the show route flow validation command. Output fields are listed in the approximate order in which they appear.

Table 203: show route flow validation Output Fields

Field Name	Field Description	Level of Output
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).	All levels
<i>prefix</i>	Route address.	All levels
Active unicast route	Active route in the routing table.	All levels
Dependent flow destinations	Number of flows for which there are routes in the routing table.	All levels
Origin	Source of the route flow.	All levels
Neighbor AS	Autonomous system identifier of the neighbor.	All levels
Flow destination	Number of entries and number of destinations that match the route flow.	All levels
Unicast best match	Destination that is the best match for the route flow.	All levels
Flags	Information about the route flow.	All levels

Sample Output

show route flow validation

```

user@host> show route flow validation

inet.0:
10.0.5.0/24Active unicast route
Dependent flow destinations: 1
Origin: 192.168.224.218, Neighbor AS: 64501
Flow destination (3 entries, 1 match origin)
Unicast best match: 10.0.5.0/24
Flags: SubtreeApex Consistent

```

show route flow validation (IPv6)

```

user@host> show route flow validation

inet6.0:
2001:db8::11:11:11:0/120
    Active unicast route
    Dependent flow destinations: 2
    Origin: 2001:db8::13:14:2:2, Neighbor AS: 2000
2001:db8::11:11:11:10/128
    Flow destination (1 entries, 1 match origin, next-as)
    Unicast best match: 2001:db8::11:11:11:0/120
    Flags: Consistent
2001:db8::11:11:11:30/128
    Flow destination (1 entries, 1 match origin, next-as)

```

Unicast best match: 2001:db8::11:11:11:0/120
Flags: Consistent

show route forwarding-table

- List of Syntax** [Syntax on page 2359](#)
 [Syntax \(MX Series Routers\) on page 2359](#)
 [Syntax \(TX Matrix and TX Matrix Plus Routers\) on page 2359](#)

Syntax show route forwarding-table
 <detail | extensive | summary>
 <all>
 <ccc *interface-name*>
 <destination *destination-prefix*>
 <family *family* | matching *matching*>
 <interface-name *interface-name*>
 <label *name*>
 <matching *matching*>
 <multicast>
 <table (default | *logical-system-name/routing-instance-name* | *routing-instance-name*)>
 <vlan (all | *vlan-name*)>
 <vpn *vpn*>

Syntax (MX Series Routers) show route forwarding-table
 <detail | extensive | summary>
 <all>
 <bridge-domain (all | *domain-name*)>
 <ccc *interface-name*>
 <destination *destination-prefix*>
 <family *family* | matching *matching*>
 <interface-name *interface-name*>
 <label *name*>
 <learning-vlan-id *learning-vlan-id*>
 <matching *matching*>
 <multicast>
 <table (default | *logical-system-name/routing-instance-name* | *routing-instance-name*)>
 <vlan (all | *vlan-name*)>
 <vpn *vpn*>

Syntax (TX Matrix and TX Matrix Plus Routers) show route forwarding-table
 <detail | extensive | summary>
 <all>
 <ccc *interface-name*>
 <destination *destination-prefix*>
 <family *family* | matching *matching*>
 <interface-name *interface-name*>
 <matching *matching*>
 <label *name*>
 <lcc *number*>
 <multicast>
 <table *routing-instance-name*>
 <vpn *vpn*>

Release Information Command introduced before Junos OS Release 7.4.
Option **bridge-domain** introduced in Junos OS Release 7.5
Option **learning-vlan-id** introduced in Junos OS Release 8.4
Options **all** and **vlan** introduced in Junos OS Release 9.6.
Command introduced in Junos OS Release 11.3 for the QFX Series.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display the Routing Engine's forwarding table, including the network-layer prefixes and their next hops. This command is used to help verify that the routing protocol process has relayed the correction information to the forwarding table. The Routing Engine constructs and maintains one or more routing tables. From the routing tables, the Routing Engine derives a table of active routes, called the forwarding table.



NOTE: The Routing Engine copies the forwarding table to the Packet Forwarding Engine, the part of the router that is responsible for forwarding packets. To display the entries in the Packet Forwarding Engine's forwarding table, use the **show pfe route** command.

Options **none**—Display the routes in the forwarding tables. By default, the **show route forwarding-table** command does not display information about private, or internal, forwarding tables.

detail | extensive | summary—(Optional) Display the specified level of output.

all—(Optional) Display routing table entries for all forwarding tables, including private, or internal, tables.

bridge-domain (all | bridge-domain-name)—(MX Series routers only) (Optional) Display route entries for all bridge domains or the specified bridge domain.

ccc interface-name—(Optional) Display route entries for the specified circuit cross-connect interface.

destination destination-prefix—(Optional) Destination prefix.

family family—(Optional) Display routing table entries for the specified family: **bridge (ccc | destination | detail | extensive | interface-name | label | learning-vlan-id | matching | multicast | summary | table | vlan | vpn)**, **ethernet-switching**, **evpn**, **fibre-channel**, **fmembers**, **inet**, **inet6**, **iso**, **mcsnoop-inet**, **mcsnoop-inet6**, **mpls**, **satellite-inet**, **satellite-inet6**, **satellite-vpls**, **tnp**, **unix**, **vpls**, or **vlan-classification**.

interface-name interface-name—(Optional) Display routing table entries for the specified interface.

label name—(Optional) Display route entries for the specified label.

lcc number—(TX Matrix and TX matrix Plus routers only) (Optional) On a routing matrix composed of a TX Matrix router and T640 routers, display information for the

specified T640 router (or line-card chassis) connected to the TX Matrix router. On a routing matrix composed of the TX Matrix Plus router and T1600 or T4000 routers, display information for the specified router (line-card chassis) connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

learning-vlan-id *learning-vlan-id*—(MX Series routers only) (Optional) Display learned information for all VLANs or for the specified VLAN.

matching *matching*—(Optional) Display routing table entries matching the specified prefix or prefix length.

multicast—(Optional) Display routing table entries for multicast routes.

table —(Optional) Display route entries for all the routing tables in the main routing instance or for the specified routing instance. If your device supports logical systems, you can also display route entries for the specified logical system and routing instance. To view the routing instances on your device, use the [show route instance](#) command.

vlan (all | *vlan-name*)—(Optional) Display information for all VLANs or for the specified VLAN.

vpn *vpn*—(Optional) Display routing table entries for a specified VPN.

Required Privilege Level

view

List of Sample Output

[show route forwarding-table on page 2366](#)
[show route forwarding-table detail on page 2367](#)
[show route forwarding-table destination extensive \(Weights and Balances\) on page 2367](#)
[show route forwarding-table extensive on page 2368](#)
[show route forwarding-table extensive \(RPF\) on page 2369](#)
[show route forwarding-table \(dynamic list next hop\) on page 2370](#)
[show route forwarding-table family mpls on page 2371](#)
[show route forwarding-table family mpls ccc ge-0/0/1.1004 on page 2371](#)
[show route forwarding-table family vpls on page 2371](#)
[show route forwarding-table vpls \(Broadcast, unknown unicast, and multicast \(BUM\) hashing is enabled\) on page 2372](#)

[show route forwarding-table vpls \(Broadcast, unknown unicast, and multicast \(BUM\) hashing is enabled with MAC Statistics\) on page 2372](#)
[show route forwarding-table family vpls extensive on page 2372](#)
[show route forwarding-table table default on page 2374](#)
[show route forwarding-table table](#)
[logical-system-name/routing-instance-name on page 2375](#)
[show route forwarding-table vpn on page 2375](#)

Output Fields [Table 204 on page 2362](#) lists the output fields for the **show route forwarding-table** command. Output fields are listed in the approximate order in which they appear. Field names might be abbreviated (as shown in parentheses) when no level of output is specified, or when the **detail** keyword is used instead of the **extensive** keyword.

Table 204: show route forwarding-table Output Fields

Field Name	Field Description	Level of Output
Logical system	Name of the logical system. This field is displayed if you specify the table logical-system-name/routing-instance-name option on a device that is configured for and supports logical systems.	All levels
Routing table	Name of the routing table (for example, inet, inet6, mpls).	All levels

Table 204: show route forwarding-table Output Fields (continued)

Field Name	Field Description	Level of Output
Enabled protocols	<p>The features and protocols that have been enabled for a given routing table. This field can contain the following values:</p> <ul style="list-style-type: none"> • BUM hashing—BUM hashing is enabled. • MAC Stats—Mac Statistics is enabled. • Bridging—Routing instance is a normal layer 2 bridge. • No VLAN—No VLANs are associated with the bridge domain. • All VLANs—The vlan-id all statement has been enabled for this bridge domain. • Single VLAN—Single VLAN ID is associated with the bridge domain. • MAC action drop—New MACs will be dropped when the MAC address limit is reached. • Dual VLAN—Dual VLAN tags are associated with the bridge domain • No local switching—No local switching is enabled for this routing instance.. • Learning disabled—Layer 2 learning is disabled for this routing instance. • MAC limit reached—The maximum number of MAC addresses that was configured for this routing instance has been reached. • VPLS—The VPLS protocol is enabled. • No IRB I2-copy—The no-irb-layer-2-copy feature is enabled for this routing instance. • ACKed by all peers—All peers have acknowledged this routing instance. • BUM Pruning—BUM pruning is enabled on the VPLS instance. • Def BD VXLAN—VXLAN is enabled for the default bridge domain. • EVPN—EVPN protocol is enabled for this routing instance. • Def BD OVSDb—Open vSwitch Database (OVSDb) is enabled on the default bridge domain. • Def BD Ingress replication—VXLAN ingress node replication is enabled on the default bridge domain. • L2 backhaul—Layer 2 backhaul is enabled. • FRR optimize—Fast reroute optimization • MAC pinning—MAC pinning is enabled for this bridge domain. • MAC Aging Timer—The MAC table aging time is set per routing instance. • EVPN VXLAN—This routing instance supports EVPN with VXLAN encapsulation. • PBBN—This routing instance is configured as a provider backbone bridged network. • PBN—This routing instance is configured as a provider bridge network. • ETREE—The ETREE protocol is enabled on this EVPN routing instance. • ARP/NDP suppression—EVPN ARP NDP suppression is enabled in this routing instance. • Def BD EVPN VXLAN—EVPN VXLAN is enabled for the default bridge domain. • MPLS control word—Control word is enabled for this MPLS routing instance. 	All levels
Address family	Address family (for example, IP, IPv6, ISO, MPLS, and VPLS).	All levels
Destination	Destination of the route.	detail extensive

Table 204: *show route forwarding-table* Output Fields (continued)

Field Name	Field Description	Level of Output
Route Type (Type)	<p>How the route was placed into the forwarding table. When the detail keyword is used, the route type might be abbreviated (as shown in parentheses):</p> <ul style="list-style-type: none"> • cloned (clon)—(TCP or multicast only) Cloned route. • destination (dest)—Remote addresses directly reachable through an interface. • destination down (iddn)—Destination route for which the interface is unreachable. • interface cloned (ifcl)—Cloned route for which the interface is unreachable. • route down (ifdn)—Interface route for which the interface is unreachable. • ignore (ignr)—Ignore this route. • interface (intf)—Installed as a result of configuring an interface. • permanent (perm)—Routes installed by the kernel when the routing table is initialized. • user—Routes installed by the routing protocol process or as a result of the configuration. 	All levels
Route Reference (RtRef)	Number of routes to reference.	detail extensive
Flags	<p>Route type flags:</p> <ul style="list-style-type: none"> • none—No flags are enabled. • accounting—Route has accounting enabled. • cached—Cache route. • incoming-iface interface-number—Check against incoming interface. • prefix load balance—Load balancing is enabled for this prefix. • rt nh decoupled—Route has been decoupled from the next hop to the destination. • sent to PFE—Route has been sent to the Packet Forwarding Engine. • static—Static route. 	extensive
Next hop	IP address of the next hop to the destination.	detail extensive

Table 204: show route forwarding-table Output Fields (continued)

Field Name	Field Description	Level of Output
Next hop Type (Type)	<p>Next-hop type. When the detail keyword is used, the next-hop type might be abbreviated (as indicated in parentheses):</p> <ul style="list-style-type: none"> • broadcast (bcst)—Broadcast. • deny—Deny. • discard (dscd)—Discard. • hold—Next hop is waiting to be resolved into a unicast or multicast type. • indexed (idxd)—Indexed next hop. • indirect (indr)—Indirect next hop. • local (locl)—Local address on an interface. • routed multicast (mcrst)—Regular multicast next hop. • multicast (mcst)—Wire multicast next hop (limited to the LAN). • multicast discard (mdsc)—Multicast discard. • multicast group (mgrp)—Multicast group member. • receive (rcv)—Receive. • reject (rjct)—Discard. An ICMP unreachable message was sent. • resolve (rslv)—Resolving the next hop. • unicast (ucst)—Unicast. • unilist (ulst)—List of unicast next hops. A packet sent to this next hop goes to any next hop in the list. 	detail extensive
Index	Software index of the next hop that is used to route the traffic for a given prefix.	detail extensive none
Route interface-index	Logical interface index from which the route is learned. For example, for interface routes, this is the logical interface index of the route itself. For static routes, this field is zero. For routes learned through routing protocols, this is the logical interface index from which the route is learned.	extensive
Reference (NhRef)	Number of routes that refer to this next hop.	detail extensive none
Next-hop interface (Netif)	Interface used to reach the next hop.	detail extensive none
Weight	Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible (see the Balance field description).	extensive
Balance	Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a router is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.	extensive
RPF interface	List of interfaces from which the prefix can be accepted. Reverse path forwarding (RPF) information is displayed only when rpf-check is configured on the interface.	extensive

Sample Output

show route forwarding-table

```
user@host> show route forwarding-table
```

```
Routing table: default.inet
```

```
Internet:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	46	4	
0.0.0.0/32	perm	0		dscd	44	1	
172.16.1.0/24	ifdn	0		rslv	608	1	ge-2/0/1.0
172.16.1.0/32	iddn	0	172.16.1.0	recv	606	1	ge-2/0/1.0
172.16.1.1/32	user	0		rjct	46	4	
172.16.1.1/32	intf	0	172.16.1.1	loc1	607	2	
172.16.1.1/32	iddn	0	172.16.1.1	loc1	607	2	
172.16.1.255/32	iddn	0	ff:ff:ff:ff:ff:ff	bcst	605	1	ge-2/0/1.0
10.0.0.0/24	intf	0		rslv	616	1	ge-2/0/0.0
10.0.0.0/32	dest	0	10.0.0.0	recv	614	1	ge-2/0/0.0
10.0.0.1/32	intf	0	10.0.0.1	loc1	615	2	
10.0.0.1/32	dest	0	10.0.0.1	loc1	615	2	
10.0.0.255/32	dest	0	10.0.0.255	bcst	613	1	ge-2/0/0.0
10.1.1.0/24	ifdn	0		rslv	612	1	ge-2/0/1.0
10.1.1.0/32	iddn	0	10.1.1.0	recv	610	1	ge-2/0/1.0
10.1.1.1/32	user	0		rjct	46	4	
10.1.1.1/32	intf	0	10.1.1.1	loc1	611	2	
10.1.1.1/32	iddn	0	10.1.1.1	loc1	611	2	
10.1.1.255/32	iddn	0	ff:ff:ff:ff:ff:ff	bcst	609	1	ge-2/0/1.0
10.206.0.0/16	user	0	10.209.63.254	ucst	419	20	fxp0.0
10.209.0.0/16	user	1	0:12:1e:ca:98:0	ucst	419	20	fxp0.0
10.209.0.0/18	intf	0		rslv	418	1	fxp0.0
10.209.0.0/32	dest	0	10.209.0.0	recv	416	1	fxp0.0
10.209.2.131/32	intf	0	10.209.2.131	loc1	417	2	
10.209.2.131/32	dest	0	10.209.2.131	loc1	417	2	
10.209.17.55/32	dest	0	0:30:48:5b:78:d2	ucst	435	1	fxp0.0
10.209.63.42/32	dest	0	0:23:7d:58:92:ca	ucst	434	1	fxp0.0
10.209.63.254/32	dest	0	0:12:1e:ca:98:0	ucst	419	20	fxp0.0
10.209.63.255/32	dest	0	10.209.63.255	bcst	415	1	fxp0.0
10.227.0.0/16	user	0	10.209.63.254	ucst	419	20	fxp0.0

```
...
```

```
Routing table: iso
```

```
ISO:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	27	1	
47.0005.80ff.f800.0000.0108.0003.0102.5524.5220.00							
intf 0			loc1 28 1				

```
Routing table: inet6
```

```
Internet6:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	6	1	
ff00::/8	perm	0		mdsc	4	1	
ff02::1/128	perm	0	ff02::1	mcst	3	1	

```
Routing table: ccc
```

```
MPLS:
```

Interface.Label	Type	RtRef	Next hop	Type	Index	NhRef	Netif
-----------------	------	-------	----------	------	-------	-------	-------

```
default          perm      0          rjct 16      1
100004(top)fe-0/0/1.0
```

show route forwarding-table detail

```
user@host> show route forwarding-table detail
```

```
Routing table: inet
```

```
Internet:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	user	2	0:90:69:8e:b1:1b	ucst	132	4	fxp0.0
default	perm	0		rjct	14	1	
10.1.1.0/24	intf	0	ff.3.0.21	ucst	322	1	so-5/3/0.0
10.1.1.0/32	dest	0	10.1.1.0	recv	324	1	so-5/3/0.0
10.1.1.1/32	intf	0	10.1.1.1	loc1	321	1	
10.1.1.255/32	dest	0	10.1.1.255	bcst	323	1	so-5/3/0.0
10.21.21.0/24	intf	0	ff.3.0.21	ucst	326	1	so-5/3/0.0
10.21.21.0/32	dest	0	10.21.21.0	recv	328	1	so-5/3/0.0
10.21.21.1/32	intf	0	10.21.21.1	loc1	325	1	
10.21.21.255/32	dest	0	10.21.21.255	bcst	327	1	so-5/3/0.0
127.0.0.1/32	intf	0	127.0.0.1	loc1	320	1	
172.17.28.19/32	clon	1	192.168.4.254	ucst	132	4	fxp0.0
172.17.28.44/32	clon	1	192.168.4.254	ucst	132	4	fxp0.0

```
...
```

```
Routing table: private1__inet
```

```
Internet:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	46	1	
10.0.0.0/8	intf	0		rs1v	136	1	fxp1.0
10.0.0.0/32	dest	0	10.0.0.0	recv	134	1	fxp1.0
10.0.0.4/32	intf	0	10.0.0.4	loc1	135	2	
10.0.0.4/32	dest	0	10.0.0.4	loc1	135	2	

```
...
```

```
Routing table: iso
```

```
ISO:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	38	1	

```
Routing table: inet6
```

```
Internet6:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	22	1	
ff00::/8	perm	0		mdsc	21	1	
ff02::1/128	perm	0	ff02::1	mcst	17	1	

```
...
```

```
Routing table: mpls
```

```
MPLS:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	28	1	

show route forwarding-table destination extensive (Weights and Balances)

```
user@host> show route forwarding-table destination 3.4.2.1 extensive
```

```

Routing table: inet [Index 0]
Internet:

Destination: 3.4.2.1/32
  Route type: user
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: unicast
  Nexthop: 172.16.4.4
  Next-hop type: unicast
  Next-hop interface: so-1/1/0.0
  Nexthop: 145.12.1.2
  Next-hop type: unicast
  Next-hop interface: so-0/1/2.0
  Route interface-index: 0
  Index: 262143  Reference: 1
  Index: 335     Reference: 2
  Weight: 22    Balance: 3
  Index: 337     Reference: 2
  Weight: 33    Balance: 33

```

show route forwarding-table extensive

```

user@host> show route forwarding-table extensive

Routing table: inet [Index 0]
Internet:

Destination: default
  Route type: user
  Route reference: 2
  Flags: sent to PFE
  Nexthop: 00:00:5E:00:53:1b
  Next-hop type: unicast
  Next-hop interface: fxp0.0
  Route interface-index: 0
  Index: 132     Reference: 4

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: none
  Next-hop type: reject
  Route interface-index: 0
  Index: 14      Reference: 1

Destination: 127.0.0.1/32
  Route type: interface
  Route reference: 0
  Flags: sent to PFE
  Nexthop: 127.0.0.1
  Next-hop type: local
  Route interface-index: 0
  Index: 320     Reference: 1
...

Routing table: private1__inet [Index 1]
Internet:

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
  Route interface-index: 0
  Index: 46      Reference: 1

Destination: 10.0.0.0/8
  Route type: interface
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: resolve
  Next-hop interface: fxp1.0
  Route interface-index: 3
  Index: 136     Reference: 1

```

```

...

Routing table: iso [Index 0]
ISO:

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
                                Route interface-index: 0
                                Index: 38      Reference: 1

Routing table: inet6 [Index 0]
Internet6:

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
                                Route interface-index: 0
                                Index: 22      Reference: 1

Destination: ff00::/8
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: multicast discard
                                Route interface-index: 0
                                Index: 21      Reference: 1

...

Routing table: private1__inet6 [Index 1]
Internet6:

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
                                Route interface-index: 0
                                Index: 54      Reference: 1

Destination: fe80::2a0:a5ff:fe3d:375/128
  Route type: interface
  Route reference: 0
  Flags: sent to PFE
  Nexthop: fe80::2a0:a5ff:fe3d:375
  Next-hop type: local
                                Route interface-index: 0
                                Index: 75      Reference: 1

...

```

show route forwarding-table extensive (RPF)

The next example is based on the following configuration, which enables an RPF check on all routes that are learned from this interface, including the interface route:

```

so-1/1/0 {
  unit 0 {
    family inet {
      rpf-check;
      address 192.0.2.2/30;
    }
  }
}

```

```
}
}
```

```
user@host> show route forwarding-table extensive
```

```
Routing table: inet [Index 0]
Internet:
...
...
Destination: 192.0.2.3/32
Route type: destination
Route reference: 0                      Route interface-index: 67
Flags: sent to PFE
Nexthop: 192.0.2.3
Next-hop type: broadcast                Index: 328      Reference: 1
Next-hop interface: so-1/1/0.0
RPF interface: so-1/1/0.0
```

show route forwarding-table (dynamic list next hop)

The **show route forwarding table** output shows the two next hop elements for a multihomed EVPN destination.

```
user@host> show route forwarding-table label 299952 extensive
```

```
MPLS:

Destination: 299952
Route type: user
Route reference: 0                      Route interface-index: 0
Multicast RPF nh index: 0
P2mpidx: 0
Flags: sent to PFE, rt nh decoupled
Next-hop type: indirect                 Index: 1048575 Reference: 2
Nexthop:
Next-hop type: composite                Index: 601      Reference: 2
Next-hop type: indirect                 Index: 1048574 Reference: 3
Nexthop: 1.0.0.4
Next-hop type: Push 301632, Push 299776(top) Index: 600 Reference: 2
Load Balance Label: None
Next-hop interface: ge-0/0/1.0
Next-hop type: indirect                 Index: 1048577 Reference: 3
Nexthop: 1.0.0.4
Next-hop type: Push 301344, Push 299792(top) Index: 619 Reference: 2
Load Balance Label: None
Next-hop interface: ge-0/0/1.0
```

After one of the PE router has been disabled in the EVPN multihomed network, the same **show route forwarding table** output command shows one next hop element and one empty next hop element.

```
user@host> show route forwarding-table label 299952 extensive
```

```
Routing table: default.mpls [Index 0]
MPLS:

Destination: 299952
Route type: user
```

```

Route reference: 0                      Route interface-index: 0
Multicast RPF nh index: 0
P2mpidx: 0
Flags: sent to PFE, rt nh decoupled
Next-hop type: indirect                 Index: 1048575 Reference: 2
Nexthop:
Next-hop type: composite                 Index: 601      Reference: 2
Next-hop type: indirect                 Index: 1048577 Reference: 3
Nexthop: 1.0.0.4
Next-hop type: Push 301344, Push 299792(top) Index: 619 Reference: 2
Load Balance Label: None
Next-hop interface: ge-0/0/1.0

```

show route forwarding-table family mpls

```
user@host> show route forwarding-table family mpls
```

```

Routing table: mpls
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0
0                user  0
1                user  0
2                user  0
100000           user  0 10.31.1.6      swap 100001 fe-1/1/0.0
800002           user  0                Pop          vt-0/3/0.32770

vt-0/3/0.32770 (VPLS)
                user  0                indr 351      4
                Push 800000, Push 100002(top)
so-0/0/0.0

```

show route forwarding-table family mpls ccc ge-0/0/1.1004

```
user@host> show route forwarding-table mpls ccc ge-0/0/1.1004
```

```

Routing table: default.mpls
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
ge-0/0/1.1004    (CCC) user  0                ulst 1048577 2
                comp 754      3
                comp 755      3
                comp 756      3

Routing table: __mpls-oam__.mpls
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0                dscd 556      1

```

show route forwarding-table family vpls

```
user@host> show route forwarding-table family vpls
```

```

Routing table: green.vpls
VPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          dymn  0                flood 353      1
default          perm  0                rjct 298      1

```

```

fe-0/1/0.0      dnm  0      flood  355    1
00:00:5E:00:53:1f/48      <<<<<Remote CE

                                dnm  0      indr  351    4
                                Push 800000, Push 100002(top)

so-0/0/0.0
00:00:5E:00:53:1f/48      <<<<<<Local CE

                                dnm  0      ucst  354    2 fe-0/1/0.0

```

show route forwarding-table vpls (Broadcast, unknown unicast, and multicast (BUM) hashing is enabled)

```

user@host> show route forwarding-table vpls

Routing table: green.vpls
VPLS:
Enabled protocols: BUM hashing
Destination      Type RtRef Next hop      Type Index  NhRef Netif
default          perm  0          172.16.3.2    dscd   519      1
lsi.1048832      intf  0          172.16.3.2    indr  1048574   4
                                Push 262145    621    2

ge-3/0/0.0
00:00:5E:00:53:01/48 user  0          ucst   590      5 ge-2/3/9.0
0x30003/51      user  0          comp   627      2
ge-2/3/9.0      intf  0          ucst   590      5 ge-2/3/9.0
ge-3/1/3.0      intf  0          ucst   619      4 ge-3/1/3.0
0x30002/51      user  0          comp   600      2
0x30001/51      user  0          comp   597      2

```

show route forwarding-table vpls (Broadcast, unknown unicast, and multicast (BUM) hashing is enabled with MAC Statistics)

```

user@host> show route forwarding-table vpls

Routing table: green.vpls
VPLS:
Enabled protocols: BUM hashing, MAC Stats
Destination      Type RtRef Next hop      Type Index  NhRef Netif
default          perm  0          172.16.3.2    dscd   519      1
lsi.1048834      intf  0          172.16.3.2    indr  1048574   4
                                Push 262145    592    2

ge-3/0/0.0
00:19:e2:25:d0:01/48 user  0          ucst   590      5 ge-2/3/9.0
0x30003/51      user  0          comp   630      2
ge-2/3/9.0      intf  0          ucst   590      5 ge-2/3/9.0
ge-3/1/3.0      intf  0          ucst   591      4 ge-3/1/3.0
0x30002/51      user  0          comp   627      2
0x30001/51      user  0          comp   624      2

```

show route forwarding-table family vpls extensive

```

user@host> show route forwarding-table family vpls extensive

Routing table: green.vpls [Index 2]
VPLS:

Destination: default
Route type: dynamic
Route reference: 0          Route interface-index: 72

```



```

Flags: sent to PFE
Next-hop type: flood           Index: 289      Reference: 1
Next-hop type: unicast        Index: 291      Reference: 3
Next-hop interface: fe-0/1/3.0
Next-hop type: unicast        Index: 290      Reference: 3
Next-hop interface: fe-0/1/2.0

Destination: default
Route type: permanent
Route reference: 0             Route interface-index: 0
Flags: none
Next-hop type: discard        Index: 341      Reference: 1

Destination: fe-0/1/2.0
Route type: dynamic
Route reference: 0             Route interface-index: 69
Flags: sent to PFE
Next-hop type: flood           Index: 293      Reference: 1
Next-hop type: indirect        Index: 363      Reference: 4
Next-hop type: Push 800016
Next-hop interface: at-1/0/1.0
Next-hop type: indirect        Index: 301      Reference: 5
Next hop: 10.31.3.2
Next-hop type: Push 800000
Next-hop interface: fe-0/1/1.0
Next-hop type: unicast        Index: 291      Reference: 3
Next-hop interface: fe-0/1/3.0

Destination: fe-0/1/3.0
Route type: dynamic
Route reference: 0             Route interface-index: 70
Flags: sent to PFE
Next-hop type: flood           Index: 292      Reference: 1
Next-hop type: indirect        Index: 363      Reference: 4
Next-hop type: Push 800016
Next-hop interface: at-1/0/1.0
Next-hop type: indirect        Index: 301      Reference: 5
Next hop: 10.31.3.2
Next-hop type: Push 800000
Next-hop interface: fe-0/1/1.0
Next-hop type: unicast        Index: 290      Reference: 3
Next-hop interface: fe-0/1/2.0

Destination: 00:00:5E:00:53:01/48
Route type: dynamic
Route reference: 0             Route interface-index: 70
Flags: sent to PFE, prefix load balance
Next-hop type: unicast        Index: 291      Reference: 3
Next-hop interface: fe-0/1/3.0
Route used as destination:
  Packet count:      6640    Byte count:      675786
Route used as source
  Packet count:      6894    Byte count:      696424

Destination: 00:00:5E:00:53:04/48
Route type: dynamic
Route reference: 0             Route interface-index: 69
Flags: sent to PFE, prefix load balance
Next-hop type: unicast        Index: 290      Reference: 3
Next-hop interface: fe-0/1/2.0

```

```

Route used as destination:
  Packet count:      96      Byte count:      8079
Route used as source:
  Packet count:     296      Byte count:     24955

Destination: 00:00:5E:00:53:05/48
Route type: dynamic
Route reference: 0
Route interface-index: 74
Flags: sent to PFE, prefix load balance
Next-hop type: indirect
Index: 301      Reference: 5
Next hop: 10.31.3.2
Next-hop type: Push 800000
Next-hop interface: fe-0/1/1.0

```

show route forwarding-table table default

```
user@host> show route forwarding-table table default
```

```
Routing table: default.inet
```

```
Internet:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	36	2	
0.0.0.0/32	perm	0		dscd	34	1	
10.0.60.0/30	user	0	10.0.60.13	ucst	713	5	fe-0/1/3.0
10.0.60.12/30	intf	0		rslv	688	1	fe-0/1/3.0
10.0.60.12/32	dest	0	10.0.60.12	recv	686	1	fe-0/1/3.0
10.0.60.13/32	dest	0	0:5:85:8b:bc:22	ucst	713	5	fe-0/1/3.0
10.0.60.14/32	intf	0	10.0.60.14	loc1	687	2	
10.0.60.14/32	dest	0	10.0.60.14	loc1	687	2	
10.0.60.15/32	dest	0	10.0.60.15	bcst	685	1	fe-0/1/3.0
10.0.67.12/30	user	0	10.0.60.13	ucst	713	5	fe-0/1/3.0
10.0.80.0/30	ifdn	0	ff.3.0.21	ucst	676	1	so-0/0/1.0
10.0.80.0/32	dest	0	10.0.80.0	recv	678	1	so-0/0/1.0
10.0.80.2/32	user	0		rjct	36	2	
10.0.80.2/32	intf	0	10.0.80.2	loc1	675	1	
10.0.80.3/32	dest	0	10.0.80.3	bcst	677	1	so-0/0/1.0
10.0.90.12/30	intf	0		rslv	684	1	fe-0/1/0.0
10.0.90.12/32	dest	0	10.0.90.12	recv	682	1	fe-0/1/0.0
10.0.90.14/32	intf	0	10.0.90.14	loc1	683	2	
10.0.90.14/32	dest	0	10.0.90.14	loc1	683	2	
10.0.90.15/32	dest	0	10.0.90.15	bcst	681	1	fe-0/1/0.0
10.5.0.0/16	user	0	192.168.187.126	ucst	324	15	fxp0.0
10.10.0.0/16	user	0	192.168.187.126	ucst	324	15	fxp0.0
10.13.10.0/23	user	0	192.168.187.126	ucst	324	15	fxp0.0
10.84.0.0/16	user	0	192.168.187.126	ucst	324	15	fxp0.0
10.150.0.0/16	user	0	192.168.187.126	ucst	324	15	fxp0.0
10.157.64.0/19	user	0	192.168.187.126	ucst	324	15	fxp0.0
10.209.0.0/16	user	0	192.168.187.126	ucst	324	15	fxp0.0

```
...
```

```
Routing table: default.iso
```

```
ISO:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	60	1	

```
Routing table: default.inet6
```

```
Internet6:
```

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	44	1	

```

::/128          perm    0          dscd    42    1
ff00::/8        perm    0          mdsc    43    1
ff02::1/128     perm    0 ff02::1  mcst    39    1

Routing table: default.mpls
MPLS:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm    0          dscd    50    1

```

show route forwarding-table table logical-system-name/routing-instance-name

```

user@host> show route forwarding-table table R4/vpn-red

Logical system: R4
Routing table: vpn-red.inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm    0          rjct    563    1
0.0.0.0/32       perm    0          dscd    561    2
172.16.0.1/32    user     0          dscd    561    2
172.16.2.0/24    intf     0          rslv    771    1 ge-1/2/0.3
172.16.2.0/32    dest     0 172.16.2.0      recv    769    1 ge-1/2/0.3
172.16.2.1/32    intf     0 172.16.2.1      locl    770    2
172.16.2.1/32    dest     0 172.16.2.1      locl    770    2
172.16.2.2/32    dest     0 0.4.80.3.0.1b.c0.d5.e4.bd.0.1b.c0.d5.e4.bc.8.0 ucst    789    1 ge-1/2/0.3
172.16.2.255/32 dest     0 172.16.2.255    bcst    768    1 ge-1/2/0.3
172.16.233.0/4   perm     1          mdsc    562    1
172.16.233.1/32 perm     0 172.16.233.1    mcst    558    1
255.255.255.255/32 perm    0          bcst    559    1

Logical system: R4
Routing table: vpn-red.iso
ISO:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm    0          rjct    608    1

Logical system: R4
Routing table: vpn-red.inet6
Internet6:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm    0          rjct    708    1
::/128          perm    0          dscd    706    1
ff00::/8        perm    0          mdsc    707    1
ff02::1/128     perm    0 ff02::1          mcst    704    1

Logical system: R4
Routing table: vpn-red.mpls
MPLS:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm    0          dscd    638

```

show route forwarding-table vpn

```

user@host> show route forwarding-table vpn VPN-A

Routing table:: VPN-A.inet
Internet:
Destination      Type RtRef Nexthop          Type Index NhRef Netif

```

default	perm	0		rjct	4	4
10.39.10.20/30	intf	0	ff.3.0.21	ucst	40	1
so-0/0/0.0						
10.39.10.21/32	intf	0	10.39.10.21	loc1	36	1
10.255.14.172/32	user	0		ucst	69	2
so-0/0/0.0						
10.255.14.175/32	user	0		indr	81	3
				Push 100004,	Push	
100004(top) so-1/0/0.0						
172.16.233.0/4	perm	2		mdsc	5	3
172.16.233.1/32	perm	0	172.16.233.1	mcst	1	8
172.16.233.5/32	user	1	172.16.233.5	mcst	1	8
255.255.255.255/32	perm	0		bcst	2	3

On QFX5200, the results for this command look like this:

```
show route forwarding-table family mpls
```

```
Routing table: default.mpls
```

```
MPLS:
```

```
Destination Type RtRef Next hop Type Index NhRef Netif
```

```
default perm 0 dscd 65 1
```

```
0 user 0 recv 64 4
```

```
1 user 0 recv 64 4
```

```
2 user 0 recv 64 4
```

```
13 user 0 recv 64 4
```

```
300384 user 0 9.1.1.1 Pop 1711 2 xe-0/0/34.0
```

```
300384(S=0) user 0 9.1.1.1 Pop 1712 2 xe-0/0/34.0
```

```
300400 user 0 ulst 131071 2
```

```
10.1.1.2 Pop 1713 1 xe-0/0/38.0
```

```
172.16.11.2 Pop 1714 1 xe-0/0/40.0
```

```
300400(S=0) user 0 ulst 131072 2
```

```
10.1.1.2 Pop 1715 1 xe-0/0/38.0
```

```
172.16.11.2 Pop 1716 1 xe-0/0/40.0
```

```
Routing table: __mpls-oam__.mpls
```

```
MPLS:
```

```
Destination Type RtRef Next hop Type Index NhRef Netif
```

```
default perm 0 dscd 1681 1
```

show route forwarding-table interface-name

Syntax `show route forwarding-table interface-name interface-name`
`<detail | extensive>`
`<all>`

Release Information Command introduced in Junos OS Release 9.6.

Description Display the interfaces in the Routing Engine's forwarding table.

Options **none**—Display information for the specified interface.

detail | extensive—(Optional) Display the specified level of output.

all—(Optional) Display all interfaces in the routing table.

Required Privilege Level view

List of Sample Output [show route forwarding-table interface-name fe-0/1/1 on page 2378](#)
[show route forwarding-table interface-name all on page 2378](#)
[show route forwarding-table interface-name all detail on page 2379](#)

Output Fields [Table 205 on page 2377](#) lists the output fields for the **show route forwarding-table interface-name** command. Output fields are listed in the approximate order in which they appear.

Table 205: show route forwarding-table interface-name Output Fields

Field Name	Field Description	Level of Output
Name	Name of the interface (for example fe-0/1/1 , lo0 , ae0 , and so on).	All levels
MTU	Interface's maximum transmission unit (MTU).	All levels
Afam	Configured address family (for example inet , tnp , inet6 , and so on).	detail extensive
Network	Network information: <ul style="list-style-type: none"> • <Link>—Physical interface, not a logical interface. • <PtoP>—Point-to-point network. • ipaddress—Network address. 	All levels
Address	Address of the interface. The address can be a MAC address, IPv4 address, IPv6 address, and so on.	All levels
IPkts	Number of packets received on the interface.	All levels
Ierr	Number of packets received on the interface with errors.	All levels

Table 205: show route forwarding-table interface-name Output Fields (continued)

Field Name	Field Description	Level of Output
Opkts	Number of packets transmitted or sent from the interface.	All levels
Oerr	Number of packets transmitted or sent from the interface with errors.	All levels
Coll	Number of packets that experienced collisions on the interface.	All levels

Sample Output

show route forwarding-table interface-name fe-0/1/1

```
user@host> show route forwarding-table interface-name fe-0/1/1
```

Name	Mtu	Network	Address	Ipkts	Ierr	Opkts	Oerr	Coll
fe-0/1/1	1514	<Link>	00.05.85.88.cc.20	0	0	0	0	0

show route forwarding-table interface-name all

```
user@host> show route forwarding-table interface-name all
```

Name	Mtu	Network	Address	Ipkts	Ierr	Opkts	Oerr	Coll
fxp0	1514	<Link>	00.a0.a5.56.03.83	180965	0	39907	0	0
unit 0	1500	192.168.187.0/	192.168.187.10					
fxp1	1514	<Link>	02.00.00.00.00.04	33010497	0	30110800	0	0
unit 0	1500	10.0.0.0/8	10.0.0.1					
		10.0.0.0/8	10.0.0.4					
		128.0.0.0/2	128.0.0.1					
		128.0.0.0/2	128.0.0.4					
	1500	fe80::/64	fe80::200:ff:fe0					
		fec0::/64	fec0::a:0:0:4					
	1500		4					
lsi	1496	<Link>						
dsc	max	<Link>		0	0	0	0	0
lo0	max	<Link>		8980	0	8980	0	0
unit 0	max	127.0.0.1/8	127.0.0.1					
		192.168.0.1/8	192.168.0.1					
unit 16384	max	127.0.0.1/8	127.0.0.1					
unit 16385	max							
gre	max	<Link>						
ipip	max	<Link>						
tap	max	<Link>						
pime	max	<Link>						
pimd	max	<Link>						
mtun	max	<Link>						
so-0/0/0	4474	<Link>		1679900	0	1068611	0	0
unit 0	4470	<PtoP>	10.0.60.2	0	0	0	0	
0								
so-0/0/1	4474	<Link>		0	0	0	0	0
unit 0	4470	<PtoP>	10.0.80.2	0	0	0	0	
0								

```

so-0/0/2    4474 <Link>                0    0    0    0    0
so-0/0/3    4474 <Link>                0    0    0    0    0
fe-0/1/0    1514 <Link>    00.05.85.88.cc.1f    523120    0    623044    0    0

  unit 0    1500 10.0.90.12/30 10.0.90.14        0    0    0    0
  0
fe-0/1/1    1514 <Link>    00.05.85.88.cc.20    0    0    0    0    0
fe-0/1/2    1514 <Link>    00.05.85.88.cc.21    0    0    0    0    0
...

```

show route forwarding-table interface-name all detail

```
user@host> show route forwarding-table interface-name all detail
```

Name	Oerr	Coll	Mtu	AFam	Network	Address	Ipkts	Ierr	Opkts
fxp0	0	0	1514		<Link>	00.a0.a5.56.03.83	181005	0	39948
unit 0			1500	inet	192.168.187.0/	192.168.187.10			
fxp1	0	0	1514		<Link>	02.00.00.00.00.04	33012676	0	30112468
unit 0			1500	inet	10.0.0.0/8	10.0.0.1			
					10.0.0.0/8	10.0.0.4			
					128.0.0.0/2	128.0.0.1			
					128.0.0.0/2	128.0.0.4			
			1500	inet6	fe80::/64	fe80::200:ff:fe0			
					fec0::/64	fec0::a:0:0:4			
			1500	tnp		4			
lsi			1496		<Link>				
dsc	0	0	max		<Link>		0	0	0
lo0	0	0	max		<Link>		8980	0	8980
unit 0			max	inet	127.0.0.1/8	127.0.0.1			
					192.168.0.1/8	192.168.0.1			
unit 16384			max	inet	127.0.0.1/8	127.0.0.1			
unit 16385			max	inet					
gre			max		<Link>				
ipip			max		<Link>				
tap			max		<Link>				
pime			max		<Link>				
pimd			max		<Link>				
mtun			max		<Link>				
so-0/0/0	0	0	4474		<Link>		1679980	0	1068661
unit 0			4470	inet	<PtoP>	10.0.60.2	0	0	0
0		0							
...									

show route hidden

Syntax	<code>show route hidden</code> <code><brief detail extensive terse></code> <code><logical-system (all <i>logical-system-name</i>)></code>
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display only hidden route information. A hidden route is unusable, even if it is the best path.
Options	brief detail extensive terse —(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief . logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• Understanding Hidden Routes
List of Sample Output	show route hidden on page 2380 show route hidden detail on page 2381 show route hidden extensive on page 2381 show route hidden terse on page 2382
Output Fields	For information about output fields, see the output field table for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route hidden

```
user@host> show route hidden

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
127.0.0.1/32      [Direct/0] 04:26:38
                  > via lo0.0

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
```



```

10.5.5.5/32      [BGP/170] 03:44:10, localpref 100, from 10.4.4.4
                  AS path: 100 I
                  Unusable
10.12.1.0/24     [BGP/170] 03:44:10, localpref 100, from 10.4.4.4
                  AS path: 100 I
                  Unusable
10.12.80.4/30    [BGP/170] 03:44:10, localpref 100, from 10.4.4.4
                  AS path: I
                  Unusable
...

```

show route hidden detail

```

user@host> show route hidden detail

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete
127.0.0.1/32 (1 entry, 0 announced)
  Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.0, selected
    State: <Hidden Martian Int>
    Local AS:      1
    Age: 4:27:37
    Task: IF
    AS path: I

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete

10.5.5.5/32 (1 entry, 0 announced)
  BGP Preference: 170/-101
    Route Distinguisher: 10.4.4.4:4
    Next hop type: Unusable
    Next-hop reference count: 6
    State: <Secondary Hidden Int Ext>
    Local AS:      1 Peer AS:      1
    Age: 3:45:09
    Task: BGP_1.10.4.4.4+2493
    AS path: 100 I
    Communities: target:1:999
    VPN Label: 100064
    Localpref: 100
    Router ID: 10.4.4.4
    Primary Routing Table bgp.13vpn.0

...

```

show route hidden extensive

The output for the **show route hidden extensive** command is identical to that of the **show route hidden detail** command. For sample output, see [show route hidden detail on page 2381](#).

show route hidden terse

```
user@host> show route hidden terse
```

```
inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
```

```
Restart Complete
```

```
+ = Active Route, - = Last Active, * = Both
```

A Destination	P Prf	Metric 1	Metric 2	Next hop	AS path
127.0.0.1/32	D 0			>1o0.0	

```
private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
```

```
red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
```

```
Restart Complete
```

```
+ = Active Route, - = Last Active, * = Both
```

A Destination	P Prf	Metric 1	Metric 2	Next hop	AS path
10.5.5.5/32	B 170	100		Unusable	100 I
10.12.1.0/24	B 170	100		Unusable	100 I
10.12.80.4/30	B 170	100		Unusable	I

```
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

```
Restart Complete
```

```
mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
```

```
Restart Complete
```

```
bgp.l3vpn.0: 3 destinations, 3 routes (0 active, 0 holddown, 3 hidden)
```

```
Restart Complete
```

```
+ = Active Route, - = Last Active, * = Both
```

A Destination	P Prf	Metric 1	Metric 2	Next hop	AS path
10.4.4.4:4:10.5.5.5/32	B 170	100		Unusable	100 I
10.4.4.4:4:10.12.1.0/24	B 170	100		Unusable	100 I
10.4.4.4:4:10.12.80.4/30	B 170	100		Unusable	I

```
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
```

```
Restart Complete
```

```
private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route inactive-path

List of Syntax	Syntax on page 2383 Syntax (EX Series Switches) on page 2383
Syntax	<pre>show route inactive-path <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route inactive-path <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Display routes for destinations that have no active route. An inactive route is a route that was not selected as the best path.
Options	<p>none—Display all inactive routes.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show route active-path on page 2279
List of Sample Output	show route inactive-path on page 2383 show route inactive-path detail on page 2384 show route inactive-path extensive on page 2385 show route inactive-path terse on page 2385
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route inactive-path

```
user@host> show route inactive-path
```

```

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.12.100.12/30      [OSPF/10] 03:57:28, metric 1
                    > via so-0/3/0.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.0/8          [Direct/0] 04:39:56
                    > via fxpl.0

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.12.80.0/30       [BGP/170] 04:38:17, localpref 100
                    AS path: 100 I
                    > to 10.12.80.1 via ge-6/3/2.0

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

bgp.l3vpn.0: 3 destinations, 3 routes (0 active, 0 holddown, 3 hidden)
Restart Complete

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

```

show route inactive-path detail

```

user@host> show route inactive-path detail

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete

10.12.100.12/30 (2 entries, 1 announced)
  OSPF Preference: 10
    Next-hop reference count: 1
    Next hop: via so-0/3/0.0, selected
    State: <Int>
    Inactive reason: Route Preference
    Local AS: 1
    Age: 3:58:24 Metric: 1
    Area: 0.0.0.0
    Task: OSPF
    AS path: I

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

10.0.0.0/8 (2 entries, 0 announced)
  Direct Preference: 0

```

```

Next hop type: Interface
Next-hop reference count: 1
Next hop: via fxp1.0, selected
State: <NotBest Int>
Inactive reason: No difference
Age: 4:40:52
Task: IF
AS path: I

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete

10.12.80.0/30 (2 entries, 1 announced)
  BGP Preference: 170/-101
    Next-hop reference count: 6
    Source: 10.12.80.1
    Next hop: 10.12.80.1 via ge-6/3/2.0, selected
    State: <Ext>
    Inactive reason: Route Preference
    Peer AS: 100
    Age: 4:39:13
    Task: BGP_100.10.12.80.1+179
    AS path: 100 I
    Localpref: 100
    Router ID: 10.0.0.0

```

show route inactive-path extensive

The output for the **show route inactive-path extensive** command is identical to that of the **show route inactive-path detail** command. For sample output, see [show route inactive-path detail on page 2384](#).

show route inactive-path terse

```

user@host> show route inactive-path terse

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
  10.12.100.12/30   0  10           1           >so-0/3/0.0

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
  10.0.0.0/8        D   0           0           >fxp1.0

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
  10.12.80.0/30     B 170          100           >10.12.80.1    100 I

```

```
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

bgp.l3vpn.0: 3 destinations, 3 routes (0 active, 0 holddown, 3 hidden)
Restart Complete

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route inactive-prefix

List of Syntax	Syntax on page 2387 Syntax (EX Series Switches) on page 2387
Syntax	<pre>show route inactive-prefix <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route inactive-prefix <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Display inactive route destinations in each routing table.
Options	<p>none—Display all inactive route destination.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route inactive-prefix on page 2387 show route inactive-prefix detail on page 2388 show route inactive-prefix extensive on page 2388 show route inactive-prefix terse on page 2388
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route inactive-prefix

```
user@host> show route inactive-prefix
```

```
inet.0: 14 destinations, 14 routes (13 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
127.0.0.1/32      [Direct/0] 00:04:54
> via lo0.0
```

show route inactive-prefix detail

```
user@host> show route inactive-prefix detail
```

```
inet.0: 14 destinations, 14 routes (13 active, 0 holddown, 1 hidden)
127.0.0.1/32 (1 entry, 0 announced)
  Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.0, selected
    State: <Hidden Martian Int>
    Age: 4:51
    Task: IF
    AS path: I00:04:54
      > via lo0.0
```

show route inactive-prefix extensive

The output for the **show route inactive-prefix extensive** command is identical to that of the **show route inactive-path detail** command. For sample output, see [show route inactive-prefix detail on page 2388](#).

show route inactive-prefix terse

```
user@host> show route inactive-prefix terse
```

```
inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
127.0.0.1/32      D   0                >lo0.0
```


show route instance

List of Syntax	Syntax on page 2389 Syntax (EX Series Switches and QFX Series) on page 2389
Syntax	<pre>show route instance <brief detail summary> <instance-name> <logical-system (all logical-system-name)> <operational></pre>
Syntax (EX Series Switches and QFX Series)	<pre>show route instance <brief detail summary> <instance-name> <operational></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display routing instance information.
Options	<p>none—(Same as brief) Display standard information about all routing instances.</p> <p>brief detail summary—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief. (These options are not available with the operational keyword.)</p> <p>instance-name—(Optional) Display information for all routing instances whose name begins with this string (for example, cust1, cust11, and cust111 are all displayed when you run the show route instance cust1 command).</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>operational—(Optional) Display operational routing instances.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>Example: Transporting IPv6 Traffic Across IPv4 Using Filter-Based Tunneling</i> • <i>Example: Configuring the Helper Capability Mode for OSPFv3 Graceful Restart</i>
List of Sample Output	show route instance on page 2391 show route instance detail (Graceful Restart Complete) on page 2391

[show route instance detail \(Graceful Restart Incomplete\) on page 2393](#)

[show route instance detail \(VPLS Routing Instance\) on page 2395](#)

[show route instance operational on page 2395](#)

[show route instance summary on page 2395](#)

Output Fields [Table 206 on page 2390](#) lists the output fields for the **show route instance** command. Output fields are listed in the approximate order in which they appear.

Table 206: show route instance Output Fields

Field Name	Field Description	Level of Output
Instance or <i>instance-name</i>	Name of the routing instance.	All levels
Operational Routing Instances	(operational keyword only) Names of all operational routing instances.	—
Type	Type of routing instance: forwarding , l2vpn , no-forwarding , vpls , virtual-router , or vrf .	All levels
State	State of the routing instance: active or inactive .	brief detail none
Interfaces	Name of interfaces belonging to this routing instance.	brief detail none
Restart State	Status of graceful restart for this instance: Pending or Complete .	detail
Path selection timeout	Maximum amount of time, in seconds, remaining until graceful restart is declared complete. The default is 300 .	detail
Tables	Tables (and number of routes) associated with this routing instance.	brief detail none
Route-distinguisher	Unique route distinguisher associated with this routing instance.	detail
Vrf-import	VPN routing and forwarding instance import policy name.	detail
Vrf-export	VPN routing and forwarding instance export policy name.	detail
Vrf-import-target	VPN routing and forwarding instance import target community name.	detail
Vrf-export-target	VPN routing and forwarding instance export target community name.	detail
Vrf-edge-protection-id	Context identifier configured for edge-protection.	detail
Fast-reroute-priority	Fast reroute priority setting for a VPLS routing instance: high , medium , or low . The default is low .	detail
Restart State	Restart state: <ul style="list-style-type: none"> Pending:protocol-name—List of protocols that have not yet completed graceful restart for this routing table. Complete—All protocols have restarted for this routing table. 	detail

Table 206: show route instance Output Fields (continued)

Field Name	Field Description	Level of Output
Primary rib	Primary table for this routing instance.	brief none summary
Active/holddown/hidden	Number of active, hold-down, and hidden routes.	All levels

Sample Output

show route instance

```

user@host> show route instance

Instance          Type
Primary RIB
master            forwarding
  inet.0          16/0/1
  iso.0           1/0/0
  mpls.0          0/0/0
  inet6.0         2/0/0
  l2circuit.0    0/0/0
__juniper_private1__ forwarding
  __juniper_private1__.inet.0 12/0/0
  __juniper_private1__.inet6.0 1/0/0

```

show route instance detail (Graceful Restart Complete)

```

user@host> show route instance detail

master:
  Router ID: 10.255.14.176
  Type: forwarding      State: Active
  Restart State: Complete Path selection timeout: 300
  Tables:
    inet.0              : 17 routes (15 active, 0 holddown, 1 hidden)
    Restart Complete
    inet.3              : 2 routes (2 active, 0 holddown, 0 hidden)
    Restart Complete
    iso.0               : 1 routes (1 active, 0 holddown, 0 hidden)
    Restart Complete
    mpls.0              : 19 routes (19 active, 0 holddown, 0 hidden)
    Restart Complete
    bgp.l3vpn.0         : 10 routes (10 active, 0 holddown, 0 hidden)
    Restart Complete
    inet6.0             : 2 routes (2 active, 0 holddown, 0 hidden)
    Restart Complete
    bgp.l2vpn.0         : 1 routes (1 active, 0 holddown, 0 hidden)
    Restart Complete
  BGP-INET:
    Router ID: 10.69.103.1
    Type: vrf           State: Active
    Restart State: Complete Path selection timeout: 300
    Interfaces:
      t3-0/0/0.103
    Route-distinguisher: 10.255.14.176:103
    Vrf-import: [ BGP-INET-import ]
    Vrf-export: [ BGP-INET-export ]

```

```

Tables:
  BGP-INET.inet.0      : 4 routes (4 active, 0 holddown, 0 hidden)
  Restart Complete
BGP-L:
  Router ID: 10.69.104.1
  Type: vrf             State: Active
  Restart State: Complete Path selection timeout: 300
  Interfaces:
    t3-0/0/0.104
  Route-distinguisher: 10.255.14.176:104
  Vrf-import: [ BGP-L-import ]
  Vrf-export: [ BGP-L-export ]
  Tables:
    BGP-L.inet.0       : 4 routes (4 active, 0 holddown, 0 hidden)
    Restart Complete
    BGP-L.mpls.0       : 3 routes (3 active, 0 holddown, 0 hidden)
    Restart Complete
L2VPN:
  Router ID: 0.0.0.0
  Type: l2vpn           State: Active
  Restart State: Complete Path selection timeout: 300
  Interfaces:
    t3-0/0/0.512
  Route-distinguisher: 10.255.14.176:512
  Vrf-import: [ L2VPN-import ]
  Vrf-export: [ L2VPN-export ]
  Tables:
    L2VPN.l2vpn.0      : 2 routes (2 active, 0 holddown, 0 hidden)
    Restart Complete
LDP:
  Router ID: 10.69.105.1
  Type: vrf             State: Active
  Restart State: Complete Path selection timeout: 300
  Interfaces:
    t3-0/0/0.105
  Route-distinguisher: 10.255.14.176:105
  Vrf-import: [ LDP-import ]
  Vrf-export: [ LDP-export ]
  Tables:
    LDP.inet.0         : 5 routes (4 active, 0 holddown, 0 hidden)
    Restart Complete
OSPF:
  Router ID: 10.69.101.1
  Type: vrf             State: Active
  Restart State: Complete Path selection timeout: 300
  Interfaces:
    t3-0/0/0.101
  Route-distinguisher: 10.255.14.176:101
  Vrf-import: [ OSPF-import ]
  Vrf-export: [ OSPF-export ]
  Vrf-import-target: [ target:11111
  Tables:
    OSPF.inet.0        : 8 routes (7 active, 0 holddown, 0 hidden)
    Restart Complete
RIP:
  Router ID: 10.69.102.1
  Type: vrf             State: Active
  Restart State: Complete Path selection timeout: 300
  Interfaces:
    t3-0/0/0.102

```

```

Route-distinguisher: 10.255.14.176:102
Vrf-import: [ RIP-import ]
Vrf-export: [ RIP-export ]
Tables:
  RIP.inet.0          : 6 routes (6 active, 0 holddown, 0 hidden)
  Restart Complete
STATIC:
  Router ID: 10.69.100.1
  Type: vrf           State: Active
  Restart State: Complete Path selection timeout: 300
  Interfaces:
    t3-0/0/0.100
  Route-distinguisher: 10.255.14.176:100
  Vrf-import: [ STATIC-import ]
  Vrf-export: [ STATIC-export ]
  Tables:
    STATIC.inet.0      : 4 routes (4 active, 0 holddown, 0 hidden)
    Restart Complete

```

show route instance detail (Graceful Restart Incomplete)

```
user@host> show route instance detail
```

```

master:
  Router ID: 10.255.14.176
  Type: forwarding      State: Active
  Restart State: Pending Path selection timeout: 300
  Tables:
    inet.0              : 17 routes (15 active, 1 holddown, 1 hidden)
    Restart Pending: OSPF LDP
    inet.3              : 2 routes (2 active, 0 holddown, 0 hidden)
    Restart Pending: OSPF LDP
    iso.0               : 1 routes (1 active, 0 holddown, 0 hidden)
    Restart Complete
    mpls.0              : 23 routes (23 active, 0 holddown, 0 hidden)
    Restart Pending: LDP VPN
    bgp.l3vpn.0         : 10 routes (10 active, 0 holddown, 0 hidden)
    Restart Pending: BGP VPN
    inet6.0             : 2 routes (2 active, 0 holddown, 0 hidden)
    Restart Complete
    bgp.l2vpn.0         : 1 routes (1 active, 0 holddown, 0 hidden)
    Restart Pending: BGP VPN
BGP-INET:
  Router ID: 10.69.103.1
  Type: vrf             State: Active
  Restart State: Pending Path selection timeout: 300
  Interfaces:
    t3-0/0/0.103
  Route-distinguisher: 10.255.14.176:103
  Vrf-import: [ BGP-INET-import ]
  Vrf-export: [ BGP-INET-export ]
  Tables:
    BGP-INET.inet.0     : 6 routes (5 active, 0 holddown, 0 hidden)
    Restart Pending: VPN
BGP-L:
  Router ID: 10.69.104.1
  Type: vrf             State: Active
  Restart State: Pending Path selection timeout: 300
  Interfaces:
    t3-0/0/0.104

```

```
Route-distinguisher: 10.255.14.176:104
Vrf-import: [ BGP-L-import ]
Vrf-export: [ BGP-L-export ]
Tables:
  BGP-L.inet.0          : 6 routes (5 active, 0 holddown, 0 hidden)
  Restart Pending: VPN
  BGP-L.mpls.0         : 2 routes (2 active, 0 holddown, 0 hidden)
  Restart Pending: VPN
L2VPN:
  Router ID: 0.0.0.0
  Type: l2vpn           State: Active
  Restart State: Pending Path selection timeout: 300
  Interfaces:
    t3-0/0/0.512
  Route-distinguisher: 10.255.14.176:512
  Vrf-import: [ L2VPN-import ]
  Vrf-export: [ L2VPN-export ]
  Tables:
    L2VPN.l2vpn.0       : 2 routes (2 active, 0 holddown, 0 hidden)
    Restart Pending: VPN L2VPN
LDP:
  Router ID: 10.69.105.1
  Type: vrf             State: Active
  Restart State: Pending Path selection timeout: 300
  Interfaces:
    t3-0/0/0.105
  Route-distinguisher: 10.255.14.176:105
  Vrf-import: [ LDP-import ]
  Vrf-export: [ LDP-export ]
  Tables:
    LDP.inet.0          : 5 routes (4 active, 1 holddown, 0 hidden)
    Restart Pending: OSPF LDP VPN
OSPF:
  Router ID: 10.69.101.1
  Type: vrf             State: Active
  Restart State: Pending Path selection timeout: 300
  Interfaces:
    t3-0/0/0.101
  Route-distinguisher: 10.255.14.176:101
  Vrf-import: [ OSPF-import ]
  Vrf-export: [ OSPF-export ]
  Tables:
    OSPF.inet.0         : 8 routes (7 active, 1 holddown, 0 hidden)
    Restart Pending: OSPF VPN
RIP:
  Router ID: 10.69.102.1
  Type: vrf             State: Active
  Restart State: Pending Path selection timeout: 300
  Interfaces:
    t3-0/0/0.102
  Route-distinguisher: 10.255.14.176:102
  Vrf-import: [ RIP-import ]
  Vrf-export: [ RIP-export ]
  Tables:
    RIP.inet.0          : 8 routes (6 active, 2 holddown, 0 hidden)
    Restart Pending: RIP VPN
STATIC:
  Router ID: 10.69.100.1
  Type: vrf             State: Active
  Restart State: Pending Path selection timeout: 300
```

```

Interfaces:
  t3-0/0/0.100
Route-distinguisher: 10.255.14.176:100
Vrf-import: [ STATIC-import ]
Vrf-export: [ STATIC-export ]
Tables:
  STATIC.inet.0      : 4 routes (4 active, 0 holddown, 0 hidden)
Restart Pending: VPN

```

show route instance detail (VPLS Routing Instance)

```

user@host> show route instance detail test-vpls

test-vpls:
  Router ID: 0.0.0.0
  Type: vpls          State: Active
  Interfaces:
    lsi.1048833
    lsi.1048832
    fe-0/1/0.513
  Route-distinguisher: 10.255.37.65:1
  Vrf-import: [ __vrf-import-test-vpls-internal__ ]
  Vrf-export: [ __vrf-export-test-vpls-internal__ ]
  Vrf-import-target: [ target:300:1 ]
  Vrf-export-target: [ target:300:1 ]
  Vrf-edge-protection-id: 166.1.3.1 Fast-reroute-priority: high
  Tables:
    test-vpls.l2vpn.0      : 3 routes (3 active, 0 holddown, 0 hidden)

```

show route instance operational

```

user@host> show route instance operational

Operational Routing Instances:

master
default

```

show route instance summary

```

user@host> show route instance summary

```

Instance	Type	Primary rib	Active/holddown/hidden
master	forwarding	inet.0	15/0/1
		iso.0	1/0/0
		mpls.0	35/0/0
		l3vpn.0	0/0/0
		inet6.0	2/0/0
		l2vpn.0	0/0/0
		l2circuit.0	0/0/0
BGP-INET	vrf	BGP-INET.inet.0	5/0/0
		BGP-INET.iso.0	0/0/0
		BGP-INET.inet6.0	0/0/0
BGP-L	vrf	BGP-L.inet.0	5/0/0
		BGP-L.iso.0	0/0/0
		BGP-L.mpls.0	4/0/0

L2VPN	l2vpn	BGP-L.inet6.0	0/0/0
		L2VPN.inet.0	0/0/0
		L2VPN.iso.0	0/0/0
		L2VPN.inet6.0	0/0/0
		L2VPN.l2vpn.0	2/0/0
LDP	vrf	LDP.inet.0	4/0/0
		LDP.iso.0	0/0/0
		LDP.mpls.0	0/0/0
		LDP.inet6.0	0/0/0
		LDP.l2circuit.0	0/0/0
OSPF	vrf	OSPF.inet.0	7/0/0
		OSPF.iso.0	0/0/0
		OSPF.inet6.0	0/0/0
RIP	vrf	RIP.inet.0	6/0/0
		RIP.iso.0	0/0/0
		RIP.inet6.0	0/0/0
STATIC	vrf	STATIC.inet.0	4/0/0
		STATIC.iso.0	0/0/0
		STATIC.inet6.0	0/0/0

show route label

List of Syntax	Syntax on page 2397 Syntax (EX Series Switches) on page 2397
Syntax	<pre>show route label <i>label</i> <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route label <i>label</i> <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p>
Description	Display the routes based on a specified Multiprotocol Label Switching (MPLS) label value.
Options	<p><i>label</i>—Value of the MPLS label.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> <i>Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs</i>
List of Sample Output	show route label terse on page 2398 show route label on page 2398 show route label detail on page 2398 show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 2398 show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 2399 show route label detail (Multipoint LDP with Multicast-Only Fast Reroute) on page 2399 show route label detail (Dynamic List Next Hop) on page 2400 show route label extensive on page 2401
Output Fields	For information about output fields, see the output field table for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route label terse

```
user@host> show route label 100016 terse

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 100016          V 170                >10.12.80.1
```

show route label

```
user@host> show route label 100016

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
100016                *[VPN/170] 03:25:41
                    > to 10.12.80.1 via ge-6/3/2.0, Pop
```

show route label detail

```
user@host> show route label 100016 detail

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
100016 (1 entry, 1 announced)
    *VPN      Preference: 170
              Next-hop reference count: 2
              Source: 10.12.80.1
              Next hop: 10.12.80.1 via ge-6/3/2.0, selected
              Label operation: Pop
              State: <Active Int Ext>
              Local AS:      1
              Age: 3:23:31
              Task: BGP.0.0.0.0+179
              Announcement bits (1): 0-KRT
              AS path: 100 I
              Ref Cnt: 2
```

show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show route label 299872 detail

mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
299872 (1 entry, 1 announced)
    *LDP      Preference: 9
              Next hop type: Flood
              Next-hop reference count: 3
              Address: 0x9097d90
              Next hop: via vt-0/1/0.1
              Next-hop index: 661
              Label operation: Pop
```

```

Address: 0x9172130
Next hop: via so-0/0/3.0
Next-hop index: 654
Label operation: Swap 299872
State: **Active Int>
Local AS: 1001
Age: 8:20      Metric: 1
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 10.255.72.166, grp 232.1.1.1,
src 192.168.142.2

```

show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show route label 299872 detail
```

```

mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
299872 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Flood
          Next-hop reference count: 3
          Address: 0x9097d90
          Next hop: via vt-0/1/0.1
          Next-hop index: 661
          Label operation: Pop
          Address: 0x9172130
          Next hop: via so-0/0/3.0
          Next-hop index: 654
          Label operation: Swap 299872
          State: **Active Int>
          Local AS: 1001
          Age: 8:20      Metric: 1
          Task: LDP
          Announcement bits (1): 0-KRT
          AS path: I
          FECs bound to route: P2MP root-addr 10.255.72.166, grp 232.1.1.1,
src 192.168.142.2

```

show route label detail (Multipoint LDP with Multicast-Only Fast Reroute)

```
user@host> show route label 301568 detail
```

```

mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
301568 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Flood
          Address: 0x2735208
          Next-hop reference count: 3
          Next hop type: Router, Next hop index: 1397
          Address: 0x2735d2c
          Next-hop reference count: 3
          Next hop: 1.3.8.2 via ge-1/2/22.0
          Label operation: Pop
          Load balance label: None;
          Next hop type: Router, Next hop index: 1395
          Address: 0x2736290
          Next-hop reference count: 3

```

```

Next hop: 1.3.4.2 via ge-1/2/18.0
Label operation: Pop
Load balance label: None;
State: <Active Int AckRequest MulticastRPF>
Local AS: 10
Age: 54:05 Metric: 1
Validation State: unverified
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src:
192.168.219.11
Primary Upstream : 1.1.1.3:0--1.1.1.2:0
RPF Nexthops :
    ge-1/2/15.0, 1.2.94.1, Label: 301568, weight: 0x1
    ge-1/2/14.0, 1.2.3.1, Label: 301568, weight: 0x1
Backup Upstream : 1.1.1.3:0--1.1.1.6:0
RPF Nexthops :
    ge-1/2/20.0, 1.2.96.1, Label: 301584, weight: 0xffffe
    ge-1/2/19.0, 1.3.6.1, Label: 301584, weight: 0xffffe

```

show route label detail (Dynamic List Next Hop)

The output for **show route label detail** shows the two indirect next hop for an ESI.

```
user@host> show route label 299952 detail
```

```

mpls.0: 14 destinations, 14 routes (14 active, 0 holddown, 0 hidden)
299952 (1 entry, 1 announced)
TSI:
KRT in-kernel 299952 /52 -> {Dyn list:indirect(1048577), indirect(1048574)}
    *EVPN Preference: 7
    Next hop type: Dynamic List, Next hop index: 1048575
    Address: 0x13f497fc
    Next-hop reference count: 5
    Next hop: ELNH Address 0xb7a3d90 uflags EVPN data
        Next hop type: Indirect, Next hop index: 0
        Address: 0xb7a3d90
        Next-hop reference count: 3
        Protocol next hop: 10.255.255.2
        Label operation: Push 301344
        Indirect next hop: 0x135b5c00 1048577 INH Session ID: 0x181
            Next hop type: Router, Next hop index: 619
            Address: 0xb7a3d30
            Next-hop reference count: 4
            Next hop: 1.0.0.4 via ge-0/0/1.0
            Label operation: Push 301344, Push 299792(top)
            Label TTL action: no-prop-ttl, no-prop-ttl(top)
            Load balance label: Label 301344: None; Label 299792:
None;
                Label element ptr: 0xb7a3cc0
                Label parent element ptr: 0xb7a34e0
                Label element references: 1
                Label element child references: 0
                Label element lsp id: 0
            Next hop: ELNH Address 0xb7a37f0 uflags EVPN data
                Next hop type: Indirect, Next hop index: 0
                Address: 0xb7a37f0
                Next-hop reference count: 3
                Protocol next hop: 10.255.255.3

```

```

Label operation: Push 301632
Indirect next hop: 0x135b5480 1048574 INH Session ID: 0x180
  Next hop type: Router, Next hop index: 600
  Address: 0xb7a3790
  Next-hop reference count: 4
  Next hop: 1.0.0.4 via ge-0/0/1.0
  Label operation: Push 301632, Push 299776(top)
  Label TTL action: no-prop-ttl, no-prop-ttl(top)
  Load balance label: Label 301632: None; Label 299776:
None;

  Label element ptr: 0xb7a3720
  Label parent element ptr: 0xb7a3420
  Label element references: 1
  Label element child references: 0
  Label element lsp id: 0
State: <Active Int>
Age: 1:18
Validation State: unverified
Task: evpn global task
Announcement bits (2): 1-KRT 2-evpn global task
AS path: I
Routing Instance blue, Route Type Egress-MAC, ESI
00:11:22:33:44:55:66:77:88:99

```

show route label extensive

The output for the `show route label extensive` command is identical to that of the `show route label detail` command. For sample output, see [show route label detail on page 2398](#).

show route label-switched-path

List of Syntax	Syntax on page 2402 Syntax (EX Series Switches) on page 2402
Syntax	<pre>show route label-switched-path <i>path-name</i> <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route label-switched-path <i>path-name</i> <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p>
Description	Display the routes used in an MPLS label-switched path (LSP).
Options	<p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p><i>path-name</i>—LSP tunnel name.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route label-switched-path on page 2402
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route label-switched-path

```
user@host> show route label-switched-path sf-to-ny
inet.0: 29 destinations, 29 routes (29 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          [MPLS/7] 00:00:06, metric 0
> to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny
3.3.3.3/32          *[MPLS/7] 00:00:06, metric 0
> to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
2.2.2.2/32      *[MPLS/7] 00:00:06, metric 0
                 > to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny
4.4.4.4/32      *[MPLS/7] 00:00:06, metric 0
                 to 111.222.1.9 via s0-0/0/0, label-switched-path abc
                 > to 111.222.1.9 via s0-0/0/0, label-switched-path xyz
                 to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny
111.222.1.9/32  [MPLS/7] 00:00:06, metric 0
                 > to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

mpls.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

show route localization

Syntax	<code>show route localization</code>
Release Information	Command introduced in Junos OS Release 11.4 for T-Series routers. Command introduced in Junos OS Release 12.3 for MX Series routers.
Description	(T320, T640, and T1600 routers only) Display route localization details.
Options	detail —Display detailed output.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> <i>Example: Configuring Packet Forwarding Engine FIB Localization</i>
Output Fields	Table 207 on page 2404 lists the output fields for the show route localization command. Output fields are listed in the approximate order in which they appear.

Table 207: show route localization Output Fields

Field Name	Field Description
FIB-local	FPCs configured as FIB-local.
FIB-remote	FPCs configured as FIB-remote.
Normal	FPCs neither configured as FIB-local or FIB-remote .
Protocols	IPv4 (inet) or IPv6 (inet6) traffic configured for route localization.

Sample Output

```
user@R0> show route localization
```

```
FIB localization ready FPCs (and FIB-local Forwarding Engine addresses)
FIB-local:  FPC2(4,5)
FIB-remote: FPC0, FPC1
Normal:     FPC3, FPC4, FPC5, FPC6, FPC7
```

```
user@R0> show route localization detail
```

```
FIB localization ready FPCs (and FIB-local Forwarding Engine addresses)
FIB-local:  FPC2(4,5)
FIB-remote: FPC0, FPC1
Normal:     FPC3, FPC4, FPC5, FPC6, FPC7
FIB localization configuration
```



```
Protocols:  inet, inet6
FIB-local:  FPC2
FIB-remote: FPC0, FPC1
Forwarding Engine addresses
FPC0: 1
FPC1: 2
FPC2: 4, 5
FPC3: 6
FPC4: 8
FPC5: 11
FPC6: 13
FPC7: 15
```

show route martians

List of Syntax [Syntax on page 2406](#)
[Syntax \(EX Series Switches\) on page 2406](#)

Syntax `show route martians`
`<logical-system (all | logical-system-name)>`
`<table routing-table-name>`

Syntax (EX Series Switches) `show route martians`
`<table routing-table-name>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.

Description Display the martian (invalid and ignored) entries associated with each routing table.

Options **none**—Display standard information about route martians for all routing tables.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

table *routing-table-name*—(Optional) Display information about route martians for all routing tables whose name begins with this string (for example, **inet.0** and **inet6.0** are both displayed when you run the **show route martians table inet** command).

Required Privilege Level view

Related Documentation

- *Example: Removing the Class E Prefix on Martian Addresses*
- *Understanding Martian Addresses*

List of Sample Output [show route martians on page 2407](#)

Output Fields [Table 208 on page 2406](#) lists the output fields for the **show route martians** command. Output fields are listed in the approximate order in which they appear

Table 208: show route martians Output Fields

Field Name	Field Description
<i>table-name</i>	Name of the route table in which the route martians reside.
<i>destination-prefix</i>	Route destination.

Table 208: show route martians Output Fields (continued)

Field Name	Field Description
<i>match value</i>	Route match parameter.
<i>status</i>	Status of the route: allowed or disallowed .

Sample Output

show route martians

```

user@host> show route martians

inet.0:
    0.0.0.0/0 exact -- allowed
    0.0.0.0/8 orlonger -- disallowed
    127.0.0.0/8 orlonger -- disallowed
    192.0.0.0/24 orlonger -- disallowed
    240.0.0.0/4 orlonger -- disallowed
    224.0.0.0/4 exact -- disallowed
    224.0.0.0/24 exact -- disallowed

inet.1:
    0.0.0.0/0 exact -- allowed
    0.0.0.0/8 orlonger -- disallowed
    127.0.0.0/8 orlonger -- disallowed
    192.0.0.0/24 orlonger -- disallowed
    240.0.0.0/4 orlonger -- disallowed

inet.2:
    0.0.0.0/0 exact -- allowed
    0.0.0.0/8 orlonger -- disallowed
    127.0.0.0/8 orlonger -- disallowed
    192.0.0.0/24 orlonger -- disallowed
    240.0.0.0/4 orlonger -- disallowed
    224.0.0.0/4 exact -- disallowed
    224.0.0.0/24 exact -- disallowed

inet.3:
    0.0.0.0/0 exact -- allowed
    0.0.0.0/8 orlonger -- disallowed
    127.0.0.0/8 orlonger -- disallowed
    192.0.0.0/24 orlonger -- disallowed
    240.0.0.0/4 orlonger -- disallowed
    224.0.0.0/4 exact -- disallowed
    224.0.0.0/24 exact -- disallowed

...

inet6.0:
    ::1/128 exact -- disallowed
    ff00::/8 exact -- disallowed
    ff02::/16 exact -- disallowed

inet6.1:
    ::1/128 exact -- disallowed

```

```
inet6.2:      ::1/128 exact -- disallowed
               ff00::/8 exact -- disallowed
               ff02::/16 exact -- disallowed

inet6.3:      ::1/128 exact -- disallowed
               ff00::/8 exact -- disallowed
               ff02::/16 exact -- disallowed
...

```

show route match-prefix

Syntax	<code>show route match-prefix <i>match-prefix</i>;</code>
Release Information	Command introduced in Junos OS Release 11.4.
Description	Allows you to search for routes using regular expressions based on the extended (modern) regular expressions as defined in POSIX 1003.2.
Options	<i>match-prefix</i> —Regular expression to match formatted prefix.
Additional Information	
Required Privilege Level	view
Related Documentation	<i>Regular Expressions for Allowing and Denying Junos OS Operational Mode Commands, Configuration Statements, and Hierarchies</i>
List of Sample Output	show route match-prefix *:10.255.2.200:6:* (Show all routes matching route distributor 10.255.2.200:6) on page 2409 show route match-prefix 7* (Show all mvpn type-7 routes) on page 2409 show route match-prefix *:224.* (Show all routes matching group 224/4) on page 2409
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

[show route match-prefix *:10.255.2.200:6:* \(Show all routes matching route distributor 10.255.2.200:6\)](#)

```
user@host> show route match-prefix *:10.255.2.200:6:*
```

[show route match-prefix 7* \(Show all mvpn type-7 routes\)](#)

```
user@host> show route table blue.mvpn.0 match-prefix 7*
```

```
Paste
router command output here
```

[show route match-prefix *:224.* \(Show all routes matching group 224/4\)](#)

```
user@host> show route match-prefix *:224.*
```

show route next-hop

List of Syntax	Syntax on page 2410 Syntax (EX Series Switches) on page 2410
Syntax	<pre>show route next-hop <i>next-hop</i> <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route next-hop <i>next-hop</i> <brief detail extensive terse></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display the entries in the routing table that are being sent to the specified next-hop address.
Options	brief detail extensive terse —(Optional) Display the specified level of output. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system. <i>next-hop</i> —Next-hop address.
Required Privilege Level	view
List of Sample Output	show route next-hop on page 2410 show route next-hop detail on page 2411 show route next-hop extensive on page 2413 show route next-hop terse on page 2415
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route next-hop

```
user@host> show route next-hop 192.168.71.254
```

```
inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
```

```

10.10.0.0/16      *[Static/5] 06:26:25
                  > to 192.168.71.254 via fxp0.0
10.209.0.0/16    *[Static/5] 06:26:25
                  > to 192.168.71.254 via fxp0.0
172.16.0.0/12    *[Static/5] 06:26:25
                  > to 192.168.71.254 via fxp0.0
192.168.0.0/16   *[Static/5] 06:26:25
                  > to 192.168.71.254 via fxp0.0
192.168.102.0/23 *[Static/5] 06:26:25
                  > to 192.168.71.254 via fxp0.0
207.17.136.0/24  *[Static/5] 06:26:25
                  > to 192.168.71.254 via fxp0.0
207.17.136.192/32 *[Static/5] 06:26:25
                  > to 192.168.71.254 via fxp0.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

```

show route next-hop detail

```

user@host> show route next-hop 192.168.71.254 detail

inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
Restart Complete
10.10.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

10.209.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

```

```
172.16.0.0/12 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

192.168.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

192.168.102.0/23 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

207.17.136.0/24 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

207.17.136.192/32 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
```



```
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1__inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route next-hop extensive

```
user@host> show route next-hop 192.168.71.254 extensive
```

```
inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.10.0.0/16 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 2:02:28
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

10.209.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.209.0.0/16 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 2:02:28
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

172.16.0.0/12 (1 entry, 1 announced)
TSI:
KRT in-kernel 172.16.0.0/12 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 2:02:28
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

192.168.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 192.168.0.0/16 -> {192.168.71.254}
  *Static Preference: 5
```

```

        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Local AS: 69
        Age: 2:02:28
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

192.168.102.0/23 (1 entry, 1 announced)
TSI:
KRT in-kernel 192.168.102.0/23 -> {192.168.71.254}
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Local AS: 69
        Age: 2:02:28
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

207.17.136.0/24 (1 entry, 1 announced)
TSI:
KRT in-kernel 207.17.136.0/24 -> {192.168.71.254}
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Local AS: 69
        Age: 2:02:28
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

207.17.136.192/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 207.17.136.192/32 -> {192.168.71.254}
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Local AS: 69
        Age: 2:02:28
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

green.12vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

```

```
red.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route next-hop terse

```
user@host> show route next-hop 192.168.71.254 terse
```

```
inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
```

```
Restart Complete
```

```
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
*	10.10.0.0/16	S	5			>192.168.71.254	
*	10.209.0.0/16	S	5			>192.168.71.254	
*	172.16.0.0/12	S	5			>192.168.71.254	
*	192.168.0.0/16	S	5			>192.168.71.254	
*	192.168.102.0/23	S	5			>192.168.71.254	
*	207.17.136.0/24	S	5			>192.168.71.254	
*	207.17.136.192/32	S	5			>192.168.71.254	

```
private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
```

```
red.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
```

```
Restart Complete
```

```
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

```
Restart Complete
```

```
mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
```

```
Restart Complete
```

```
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
```

```
Restart Complete
```

```
private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route no-community

List of Syntax	Syntax on page 2416 Syntax (EX Series Switches) on page 2416
Syntax	<pre>show route no-community <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route no-community <brief detail extensive terse></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display the route entries in each routing table that are not associated with any community.
Options	<p>none—(Same as brief) Display the route entries in each routing table that are not associated with any community.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route no-community on page 2416 show route no-community detail on page 2417 show route no-community extensive on page 2417 show route no-community terse on page 2418
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route no-community

```
user@host> show route no-community  
  
inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)  
+ = Active Route, - = Last Active, * = Both  
  
10.10.0.0/16          *[Static/5] 00:36:27  
                    > to 192.168.71.254 via fxp0.0
```

```

10.209.0.0/16      *[Static/5] 00:36:27
                  > to 192.168.71.254 via fxp0.0
10.255.71.52/32   *[Direct/0] 00:36:27
                  > via lo0.0
10.255.71.63/32   *[OSPF/10] 00:04:39, metric 1
                  > to 35.1.1.2 via ge-3/1/0.0
10.255.71.64/32   *[OSPF/10] 00:00:08, metric 2
                  > to 35.1.1.2 via ge-3/1/0.0
10.255.71.240/32  *[OSPF/10] 00:05:04, metric 2
                  via so-0/1/2.0
                  > via so-0/3/2.0
10.255.71.241/32  *[OSPF/10] 00:05:14, metric 1
                  > via so-0/1/2.0
10.255.71.242/32  *[OSPF/10] 00:05:19, metric 1
                  > via so-0/3/2.0
172.16.12.0/24    *[OSPF/10] 00:05:14, metric 2
                  > via so-0/3/2.0
172.16.14.0/24    *[OSPF/10] 00:00:08, metric 3
                  > to 35.1.1.2 via ge-3/1/0.0
                  via so-0/1/2.0
                  via so-0/3/2.0
172.16.16.0/24    *[OSPF/10] 00:05:14, metric 2
                  > via so-0/1/2.0
.....

```

show route no-community detail

```
user@host> show route no-community detail
```

```

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 38:08
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I
10.209.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 38:08
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I
.....

```

show route no-community extensive

```
user@host> show route no-community extensive
```

```

inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)

```

```

TSI:
KRT in-kernel 10.10.0.0/16 -> {192.168.71.254}
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Local AS: 69
        Age: 2:03:33
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

10.209.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.209.0.0/16 -> {192.168.71.254}
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Local AS: 69
        Age: 2:03:33
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

```

show route no-community terse

```
user@host> show route no-community terse
```

```

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
* 10.10.0.0/16      S 5                >192.168.71.254
* 10.209.0.0/16     S 5                >192.168.71.254
* 10.255.71.52/32   D 0                >100.0
* 10.255.71.63/32   O 10             1    >35.1.1.2
* 10.255.71.64/32   O 10             2    >35.1.1.2
* 10.255.71.240/32  O 10             2    so-0/1/2.0
                    >so-0/3/2.0
* 10.255.71.241/32  O 10             1    >so-0/1/2.0
* 10.255.71.242/32  O 10             1    >so-0/3/2.0
* 172.16.12.0/24    O 10             2    >so-0/3/2.0
* 172.16.14.0/24    O 10             3    >35.1.1.2
                    so-0/1/2.0
                    so-0/3/2.0
* 172.16.16.0/24    O 10             2    >so-0/1/2.0
...

```

show route output

List of Syntax	Syntax on page 2419 Syntax (EX Series Switches) on page 2419
Syntax	<pre>show route output (address <i>ip-address</i> interface <i>interface-name</i>) <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route output (address <i>ip-address</i> interface <i>interface-name</i>) <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	<p>Display the entries in the routing table learned through static routes and interior gateway protocols that are to be sent out the interface with either the specified IP address or specified name.</p> <p>To view routes advertised to a neighbor or received from a neighbor for the BGP protocol, use the show route advertising-protocol bgp and show route receive-protocol bgp commands instead.</p>
Options	<p>address <i>ip-address</i>—Display entries in the routing table that are to be sent out the interface with the specified IP address.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>interface <i>interface-name</i>—Display entries in the routing table that are to be sent out the interface with the specified name.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route output address on page 2420 show route output address detail on page 2420 show route output address extensive on page 2421 show route output address terse on page 2421 show route output interface on page 2421 show route output interface detail on page 2422 show route output interface extensive on page 2422 show route output interface terse on page 2422

Output Fields For information about output fields, see the output field tables for the [show route](#) command, the [show route detail](#) command, the [show route extensive](#) command, or the [show route terse](#) command.

Sample Output

show route output address

```
user@host> show route output address 172.16.36.1/24

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

172.16.36.0/24          *[Direct/0] 00:19:56
                        > via so-0/1/2.0
                        [OSPF/10] 00:19:55, metric 1
                        > via so-0/1/2.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route output address detail

```
user@host> show route output address 172.16.36.1 detail

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
172.16.36.0/24 (2 entries, 0 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via so-0/1/2.0, selected
    State: <Active Int>
    Age: 23:00
    Task: IF
    AS path: I
  OSPF Preference: 10
    Next-hop reference count: 1
    Next hop: via so-0/1/2.0, selected
    State: <Int>
    Inactive reason: Route Preference
    Age: 22:59      Metric: 1
    Area: 0.0.0.0
    Task: OSPF
    AS path: I

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
```



```
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route output address extensive

The output for the **show route output address extensive** command is identical to that of the **show route output address detail** command. For sample output, see [show route output address detail on page 2420](#).

show route output address terse

```
user@host> show route output address 172.16.36.1 terse

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 172.16.36.0/24    D  0                >so-0/1/2.0
                      0 10                >so-0/1/2.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route output interface

```
user@host> show route output interface so-0/1/2.0

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.71.240/32    *[OSPF/10] 00:13:00, metric 2
                    via so-0/1/2.0
                    > via so-0/3/2.0
10.255.71.241/32    *[OSPF/10] 00:13:10, metric 1
                    > via so-0/1/2.0
172.16.14.0/24      *[OSPF/10] 00:05:11, metric 3
                    to 35.1.1.2 via ge-3/1/0.0
                    > via so-0/1/2.0
                    via so-0/3/2.0
172.16.16.0/24      *[OSPF/10] 00:13:10, metric 2
                    > via so-0/1/2.0
172.16.36.0/24      *[Direct/0] 00:13:21
                    > via so-0/1/2.0
                    [OSPF/10] 00:13:20, metric 1
                    > via so-0/1/2.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
```

```
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
private1__inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

show route output interface detail

```
user@host> show route output interface so-0/1/2.0 detail
```

```
inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
10.255.71.240/32 (1 entry, 1 announced)
    *OSPF   Preference: 10
            Next-hop reference count: 2
            Next hop: via so-0/1/2.0
            Next hop: via so-0/3/2.0, selected
            State: <Active Int>
            Age: 14:52      Metric: 2
            Area: 0.0.0.0
            Task: OSPF
            Announcement bits (1): 0-KRT
            AS path: I
10.255.71.241/32 (1 entry, 1 announced)
    *OSPF   Preference: 10
            Next-hop reference count: 4
            Next hop: via so-0/1/2.0, selected
            State: <Active Int>
            Age: 15:02      Metric: 1
            Area: 0.0.0.0
            Task: OSPF
            Announcement bits (1): 0-KRT
            AS path: I
...
```

show route output interface extensive

The output for the **show route output interface extensive** command is identical to that of the **show route output interface detail** command. For sample output, see [show route output interface detail on page 2422](#).

show route output interface terse

```
user@host> show route output interface so-0/1/2.0 terse
```

```
inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
*	10.255.71.240/32	0	10	2		so-0/1/2.0	
						>so-0/3/2.0	
*	10.255.71.241/32	0	10	1		>so-0/1/2.0	
*	172.16.14.0/24	0	10	3		35.1.1.2	

```

>so-0/1/2.0
so-0/3/2.0
* 172.16.16.0/24      0 10      2      >so-0/1/2.0
* 172.16.36.0/24      D  0      >so-0/1/2.0
                     0 10      1      >so-0/1/2.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

```

show route protocol

List of Syntax [Syntax on page 2424](#)
 [Syntax \(EX Series Switches\) on page 2424](#)

Syntax `show route protocol protocol`
 `<brief | detail | extensive | terse>`
 `<logical-system (all | logical-system-name)>`

Syntax (EX Series Switches) `show route protocol protocol`
 `<brief | detail | extensive | terse>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 ospf2 and **ospf3** options introduced in Junos OS Release 9.2.
 ospf2 and **ospf3** options introduced in Junos OS Release 9.2 for EX Series switches.
 flow option introduced in Junos OS Release 10.0.
 flow option introduced in Junos OS Release 10.0 for EX Series switches.

Description Display the route entries in the routing table that were learned from a particular protocol.

Options **brief | detail | extensive | terse**—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to **brief**.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

protocol—Protocol from which the route was learned:

- **access**—Access route for use by DHCP application
- **access-internal**—Access-internal route for use by DHCP application
- **aggregate**—Locally generated aggregate route
- **arp**—Route learned through the Address Resolution Protocol
- **atmvpn**—Asynchronous Transfer Mode virtual private network
- **bgp**—Border Gateway Protocol
- **ccc**—Circuit cross-connect
- **direct**—Directly connected route
- **dvmrp**—Distance Vector Multicast Routing Protocol
- **esis**—End System-to-Intermediate System
- **flow**—Locally defined flow-specification route
- **frr**—Precomputed protection route or backup route used when a link goes down

- **isis**—Intermediate System-to-Intermediate System
- **ldp**—Label Distribution Protocol
- **l2circuit**—Layer 2 circuit
- **l2vpn**—Layer 2 virtual private network
- **local**—Local address
- **mpls**—Multiprotocol Label Switching
- **msdp**—Multicast Source Discovery Protocol
- **ospf**—Open Shortest Path First versions 2 and 3
- **ospf2**—Open Shortest Path First versions 2 only
- **ospf3**—Open Shortest Path First version 3 only
- **pim**—Protocol Independent Multicast
- **rip**—Routing Information Protocol
- **ripng**—Routing Information Protocol next generation
- **rsvp**—Resource Reservation Protocol
- **rtarget**—Local route target virtual private network
- **static**—Statically defined route
- **tunnel**—Dynamic tunnel
- **vpn**—Virtual private network



NOTE: EX Series switches run a subset of these protocols. See the switch CLI for details.

Required Privilege Level view

List of Sample Output

- [show route protocol access on page 2426](#)
- [show route protocol access-internal extensive on page 2426](#)
- [show route protocol arp on page 2426](#)
- [show route protocol bgp on page 2427](#)
- [show route protocol bgp detail on page 2427](#)
- [show route protocol bgp detail \(Labeled Unicast\) on page 2428](#)
- [show route protocol bgp detail \(Aggregate Extended Community Bandwidth\) on page 2428](#)
- [show route protocol bgp extensive on page 2429](#)
- [show route protocol bgp terse on page 2430](#)
- [show route protocol direct on page 2430](#)

[show route protocol frr on page 2431](#)
[show route protocol l2circuit detail on page 2431](#)
[show route protocol l2vpn extensive on page 2432](#)
[show route protocol ldp on page 2433](#)
[show route protocol ldp extensive on page 2433](#)
[show route protocol ospf \(Layer 3 VPN\) on page 2434](#)
[show route protocol ospf detail on page 2435](#)
[show route protocol rip on page 2435](#)
[show route protocol rip detail on page 2435](#)
[show route protocol ripng table inet6 on page 2436](#)
[show route protocol static detail on page 2436](#)

Output Fields For information about output fields, see the output field tables for the [show route](#) command, the [show route detail](#) command, the [show route extensive](#) command, or the [show route terse](#) command.

Sample Output

[show route protocol access](#)

```
user@host> show route protocol access

inet.0: 30380 destinations, 30382 routes (30379 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

13.160.0.3/32      *[Access/13] 00:00:09
                  > to 13.160.0.2 via fe-0/0/0.0
13.160.0.4/32      *[Access/13] 00:00:09
                  > to 13.160.0.2 via fe-0/0/0.0
13.160.0.5/32      *[Access/13] 00:00:09
                  > to 13.160.0.2 via fe-0/0/0.0
```

[show route protocol access-internal extensive](#)

```
user@host> show route protocol access-internal 13.160.0.19 extensive

inet.0: 100020 destinations, 100022 routes (100019 active, 0 holddown, 1 hidden)
13.160.0.19/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 13.160.0.19/32 -> {13.160.0.2}
    *Access-internal Preference: 12
        Next-hop reference count: 200000
        Next hop: 13.160.0.2 via fe-0/0/0.0, selected
        State: <Active Int>
    Age: 36
        Task: RPD Unix Domain Server./var/run/rpd_serv.local
        Announcement bits (1): 0-KRT
        AS path: I
```

[show route protocol arp](#)

```
user@host> show route protocol arp

inet.0: 43 destinations, 43 routes (42 active, 0 holddown, 1 hidden)

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
```

```

cust1.inet.0: 1033 destinations, 2043 routes (1033 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

20.20.1.3/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
                  Unusable
20.20.1.4/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
                  Unusable
20.20.1.5/32      [ARP/4294967293] 00:04:32, from 20.20.1.1
                  Unusable
20.20.1.6/32      [ARP/4294967293] 00:04:34, from 20.20.1.1
                  Unusable
20.20.1.7/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
                  Unusable
20.20.1.8/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
                  Unusable
20.20.1.9/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
                  Unusable
20.20.1.10/32     [ARP/4294967293] 00:04:35, from 20.20.1.1
                  Unusable
20.20.1.11/32     [ARP/4294967293] 00:04:33, from 20.20.1.1
                  Unusable
20.20.1.12/32     [ARP/4294967293] 00:04:33, from 20.20.1.1
                  Unusable
20.20.1.13/32     [ARP/4294967293] 00:04:33, from 20.20.1.1
                  Unusable
...

```

show route protocol bgp

```

user@host> show route protocol bgp 192.168.64.0/21

inet.0: 335832 destinations, 335833 routes (335383 active, 0 holddown, 450 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.64.0/21   *[BGP/170] 6d 10:41:16, localpref 100, from 192.168.69.71
                  AS path: 10458 14203 2914 4788 4788 I
                  > to 192.168.167.254 via fxp0.0

```

show route protocol bgp detail

```

user@host> show route protocol bgp 66.117.63.0/24 detail

inet.0: 335805 destinations, 335806 routes (335356 active, 0 holddown, 450 hidden)
66.117.63.0/24   (1 entry, 1 announced)
  *BGP           Preference: 170/-101
                  Next hop type: Indirect
                  Next-hop reference count: 1006436
                  Source: 192.168.69.71
                  Next hop type: Router, Next hop index: 324
                  Next hop: 192.168.167.254 via fxp0.0, selected
                  Protocol next hop: 192.168.69.71
                  Indirect next hop: 8e166c0 342
                  State: <Active Ext>
                  Local AS: 69 Peer AS: 10458
                  Age: 6d 10:42:42 Metric2: 0
                  Task: BGP_10458.192.168.69.71+179
                  Announcement bits (3): 0-KRT 2-BGP RT Background 3-Resolve tree
1

```

```

AS path: 10458 14203 2914 4788 4788 I
Communities: 2914:410 2914:2403 2914:3400
Accepted
Localpref: 100
Router ID: 207.17.136.192

```

show route protocol bgp detail (Labeled Unicast)

```

user@host> show route protocol bgp 1.1.1.8/32 detail

inet.0: 45 destinations, 46 routes (45 active, 0 holddown, 0 hidden)
1.1.1.8/32 (2 entries, 2 announced)
State:
*BGP Preference: 1/-101
Next hop type: Indirect, Next hop index: 0
Address: 0xc007f30
Next-hop reference count: 2
Source: 1.1.1.1
Next hop type: Router, Next hop index: 614
Next hop: 20.1.1.2 via ge-0/0/1.0, selected
Label-switched-path lsp1
Label operation: Push 1000126, Push 1000125, Push 1000124, Push 1000123, Push
299872(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 1000126: None; Label 1000125: None; Label 1000124: None;
Label 1000123: None; Label 299872: None;
Label element ptr: 0xc007860
Label parent element ptr: 0xc0089a0
Label element references: 1
Label element child references: 0
Label element lsp id: 0
Session Id: 0x140
Protocol next hop: 1.1.1.4
Label operation: Push 1000126, Push 1000125, Push 1000124, Push 1000123(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl, prop-ttl
Load balance label: Label 1000126: None; Label 1000125: None; Label 1000124: None;
Label 1000123: None;
Indirect next hop: 0xae8d300 1048576 INH Session ID: 0x142
State:
Local AS: 5 Peer AS: 5
Age: 22:43 Metric2: 2
Validation State: unverified
Task: BGP_5.1.1.1.1
Announcement bits (2): 0-KRT 7-Resolve tree 2
AS path: I
Accepted
Route Labels: 1000123(top) 1000124 1000125 1000126
Localpref: 100
Router ID: 1.1.1.1

```

show route protocol bgp detail (Aggregate Extended Community Bandwidth)

```

user@host> show route 10.0.2.0 protocol bgp detail

inet.0: 20 destinations, 26 routes (20 active, 0 holddown, 0 hidden)
10.0.2.0/30 (2 entries, 1 announced)
*BGP Preference: 170/-101
Next hop type: Router, Next hop index: 0
Address: 0xb618990

```



```

Next-hop reference count: 3
Source: 10.0.1.1
Next hop: 10.0.0.2 via ge-0/0/0.0 balance 40%
Session Id: 0x0
Next hop: 10.0.1.1 via ge-0/0/1.0 balance 60%, selected
Session Id: 0x0
State: <Active Ext>
Local AS: 65000 Peer AS: 65001
Age: 20:33
Validation State: unverified
Task: BGP_65001.10.0.1.1
Announcement bits (3): 0-KRT 2-BGP_Listen.0.0.0.0+179
3-BGP_RT_Background
AS path: 65001 I
Communities: bandwidth:65000:60000000
Accepted Multipath
Localpref: 100
Router ID: 128.49.121.137
BGP Preference: 170/-101
Next hop type: Router, Next hop index: 595
Address: 0xb7a1330
Next-hop reference count: 9
Source: 10.0.0.2
Next hop: 10.0.0.2 via ge-0/0/0.0, selected
Session Id: 0x141
State: <NotBest Ext>
Inactive reason: Not Best in its group - Active preferred
Local AS: 65000 Peer AS: 65001
Age: 20:33
Validation State: unverified
Task: BGP_65001.10.0.0.2
AS path: 65001 I
Communities: bandwidth:65000:40000000
Accepted MultipathContrib
Localpref: 100
Router ID: 128.49.121.132

```

show route protocol bgp extensive

```
user@host> show route protocol bgp 192.168.64.0/21 extensive
```

```

inet.0: 335827 destinations, 335828 routes (335378 active, 0 holddown, 450 hidden)
192.168.64.0/21 (1 entry, 1 announced)
TSI:
KRT in-kernel 1.9.0.0/16 -> {indirect(342)}
Page 0 idx 1 Type 1 val db31a80
  Nexthop: Self
  AS path: [69] 10458 14203 2914 4788 4788 I
  Communities: 2914:410 2914:2403 2914:3400
Path 1.9.0.0 from 192.168.69.71 Vector len 4. Val: 1
  *BGP Preference: 170/-101
    Next hop type: Indirect
    Next-hop reference count: 1006502
    Source: 192.168.69.71
    Next hop type: Router, Next hop index: 324
    Next hop: 192.168.167.254 via fxp0.0, selected
    Protocol next hop: 192.168.69.71
    Indirect next hop: 8e166c0 342
    State: <Active Ext>

```

```

Local AS: 69 Peer AS: 10458
Age: 6d 10:44:45 Metric2: 0
Task: BGP_10458.192.168.69.71+179
Announcement bits (3): 0-KRT 2-BGP RT Background 3-Resolve tree
1
AS path: 10458 14203 2914 4788 4788 I
Communities: 2914:410 2914:2403 2914:3400
Accepted
Localpref: 100
Router ID: 207.17.136.192
Indirect next hops: 1
  Protocol next hop: 192.168.69.71
  Indirect next hop: 8e166c0 342
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 192.168.167.254 via fxp0.0
  192.168.0.0/16 Originating RIB: inet.0
  Node path count: 1
  Forwarding nexthops: 1
    Nexthop: 192.168.167.254 via fxp0.0

```

show route protocol bgp terse

```
user@host> show route protocol bgp 192.168.64.0/21 terse
```

```

inet.0: 24 destinations, 32 routes (23 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
192.168.64.0/21    B 170      100           >172.16.100.1 10023 21 I

```

show route protocol direct

```
user@host> show route protocol direct
```

```

inet.0: 335843 destinations, 335844 routes (335394 active, 0 holddown, 450 hidden)
+ = Active Route, - = Last Active, * = Both

172.16.8.0/24      *[Direct/0] 17w0d 10:31:49
> via fe-1/3/1.0
10.255.165.1/32    *[Direct/0] 25w4d 04:13:18
> via lo0.0
172.16.30.0/24     *[Direct/0] 17w0d 23:06:26
> via fe-1/3/2.0
192.168.164.0/22   *[Direct/0] 25w4d 04:13:20
> via fxp0.0

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

47.0005.80ff.f800.0000.0108.0001.0102.5516.5001/152
*[Direct/0] 25w4d 04:13:21
> via lo0.0

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

```

```

2001:db8::10:255:165:1/128
    *[Direct/0] 25w4d 04:13:21
    > via lo0.0
fe80::2a0:a5ff:fe12:ad7/128
    *[Direct/0] 25w4d 04:13:21
    > via lo0.0

```

show route protocol frr

```

user@host> show route protocol frr

inet.0: 43 destinations, 43 routes (42 active, 0 holddown, 1 hidden)

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

cust1.inet.0: 1033 destinations, 2043 routes (1033 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

20.20.1.3/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.3 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.4/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.4 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.5/32      *[FRR/200] 00:05:35, from 20.20.1.1
                  > to 20.20.1.5 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.6/32      *[FRR/200] 00:05:37, from 20.20.1.1
                  > to 20.20.1.6 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.7/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.7 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.8/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.8 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.9/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.9 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.10/32     *[FRR/200] 00:05:38, from 20.20.1.1
...

```

show route protocol l2circuit detail

```

user@host> show route protocol l2circuit detail

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
100000 (1 entry, 1 announced)
    *L2CKT Preference: 7
      Next hop: via ge-2/0/0.0, selected
      Label operation: Pop      Offset: 4
      State: <Active Int>
      Local AS: 99
      Age: 9:52
      Task: Common L2 VC
      Announcement bits (1): 0-KRT
      AS path: I

```

```

ge-2/0/0.0 (1 entry, 1 announced)
  *L2CKT Preference: 7
    Next hop: via so-1/1/2.0 weight 1, selected
    Label-switched-path my-lsp
    Label operation: Push 100000, Push 100000(top)[0] Offset: -4
    Protocol next hop: 10.245.255.63
    Push 100000 Offset: -4
    Indirect next hop: 86af0c0 298
    State: <Active Int>
    Local AS: 99
    Age: 9:52
    Task: Common L2 VC
    Announcement bits (2): 0-KRT 1-Common L2 VC
    AS path: I

l2circuit.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

10.245.255.63:CtrlWord:4:3:Local/96 (1 entry, 1 announced)
  *L2CKT Preference: 7
    Next hop: via so-1/1/2.0 weight 1, selected
    Label-switched-path my-lsp
    Label operation: Push 100000[0]
    Protocol next hop: 10.245.255.63 Indirect next hop: 86af000 296
    State: <Active Int>
    Local AS: 99
    Age: 10:21
    Task: l2 circuit
    Announcement bits (1): 0-LDP
    AS path: I
    VC Label 100000, MTU 1500, VLAN ID 512

```

show route protocol l2vpn extensive

```

user@host> show route protocol l2vpn extensive

inet.0: 14 destinations, 15 routes (13 active, 0 holddown, 1 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 7 destinations, 7 routes (7 active, 0 holddown, 0 hidden)
800001 (1 entry, 1 announced)
TSI:
KRT in-kernel 800001 /36 -> {so-0/0/0.0}
  *L2VPN Preference: 7
    Next hop: via so-0/0/0.0 weight 49087 balance 97%, selected
    Label operation: Pop Offset: 4
    State: <Active Int>
    Local AS: 69
    Age: 7:48
    Task: Common L2 VC
    Announcement bits (1): 0-KRT
    AS path: I

so-0/0/0.0 (1 entry, 1 announced)
TSI:
KRT in-kernel so-0/0/0.0 /16 -> {indirect(288)}
  *L2VPN Preference: 7

```

```

Next hop: via so-0/0/1.0, selected
Label operation: Push 800000 Offset: -4
Protocol next hop: 10.255.14.220
Push 800000 Offset: -4
  Indirect next hop: 85142a0 288
State: <Active Int>
Local AS: 69
Age: 7:48
Task: Common L2 VC
Announcement bits (2): 0-KRT 1-Common L2 VC
AS path: I
Communities: target:69:1 Layer2-info: encaps:PPP,
control flags:2, mtu: 0

```

show route protocol ldp

```

user@host> show route protocol ldp

inet.0: 12 destinations, 13 routes (12 active, 0 holddown, 0 hidden)

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.16.1/32    *[LDP/9] 1d 23:03:35, metric 1
                  > via t1-4/0/0.0, Push 100000
192.168.17.1/32    *[LDP/9] 1d 23:03:35, metric 1
                  > via t1-4/0/0.0

private1__inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

mpls.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

100064            *[LDP/9] 1d 23:03:35, metric 1
                  > via t1-4/0/0.0, Pop
100064(S=0)        *[LDP/9] 1d 23:03:35, metric 1
                  > via t1-4/0/0.0, Pop
100080            *[LDP/9] 1d 23:03:35, metric 1
                  > via t1-4/0/0.0, Swap 100000

```

show route protocol ldp extensive

```

user@host> show route protocol ldp extensive

192.168.16.1/32 (1 entry, 1 announced)
  State: <FlashAll>
    *LDP    Preference: 9
            Next-hop reference count: 3
            Next hop: via t1-4/0/0.0, selected
            Label operation: Push 100000
            State: <Active Int>
            Local AS: 64500
            Age: 1d 23:03:58      Metric: 1
            Task: LDP
            Announcement bits (2): 0-Resolve tree 1 2-Resolve tree 2
            AS path: I

192.168.17.1/32 (1 entry, 1 announced)
  State: <FlashAll>

```

```

    *LDP      Preference: 9
              Next-hop reference count: 3
              Next hop: via t1-4/0/0.0, selected
              State: <Active Int>
              Local AS: 64500
              Age: 1d 23:03:58      Metric: 1
              Task: LDP
              Announcement bits (2): 0-Resolve tree 1 2-Resolve tree 2
              AS path: I

private1___.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

mpls.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)

100064 (1 entry, 1 announced)
TSI:
KRT in-kernel 100064 /36 -> {t1-4/0/0.0}
    *LDP      Preference: 9
              Next-hop reference count: 2
              Next hop: via t1-4/0/0.0, selected
              State: <Active Int>
              Local AS: 64500
              Age: 1d 23:03:58      Metric: 1
              Task: LDP
              Announcement bits (1): 0-KRT
              AS path: I
              Prefixes bound to route: 192.168.17.1/32

100064(S=0) (1 entry, 1 announced)
TSI:
KRT in-kernel 100064 /40 -> {t1-4/0/0.0}
    *LDP      Preference: 9
              Next-hop reference count: 2
              Next hop: via t1-4/0/0.0, selected
              Label operation: Pop
              State: <Active Int>
              Local AS: 64500
              Age: 1d 23:03:58      Metric: 1
              Task: LDP
              Announcement bits (1): 0-KRT
              AS path: I

100080 (1 entry, 1 announced)
TSI:
KRT in-kernel 100080 /36 -> {t1-4/0/0.0}
    *LDP      Preference: 9
              Next-hop reference count: 2
              Next hop: via t1-4/0/0.0, selected
              Label operation: Swap 100000
              State: <Active Int>
              Local AS: 64500
              Age: 1d 23:03:58      Metric: 1
              Task: LDP
              Announcement bits (1): 0-KRT
              AS path: I
              Prefixes bound to route: 192.168.16.1/32

```

show route protocol ospf (Layer 3 VPN)

```
user@host> show route protocol ospf
```

```

inet.0: 40 destinations, 40 routes (39 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

10.39.1.4/30      *[OSPF/10] 00:05:18, metric 4
                  > via t3-3/2/0.0
10.39.1.8/30      [OSPF/10] 00:05:18, metric 2
                  > via t3-3/2/0.0
10.255.14.171/32  *[OSPF/10] 00:05:18, metric 4
                  > via t3-3/2/0.0
10.255.14.179/32  *[OSPF/10] 00:05:18, metric 2
                  > via t3-3/2/0.0
172.16.233.5/32   *[OSPF/10] 20:25:55, metric 1

VPN-AB.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.39.1.16/30     [OSPF/10] 00:05:43, metric 1
                  > via so-0/2/2.0
10.255.14.173/32  *[OSPF/10] 00:05:43, metric 1
                  > via so-0/2/2.0
172.16.233.5/32   *[OSPF/10] 20:26:20, metric 1

```

show route protocol ospf detail

```

user@host> show route protocol ospf detail

VPN-AB.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.39.1.16/30 (2 entries, 0 announced)
    OSPF   Preference: 10
           Nexthop: via so-0/2/2.0, selected
           State: <Int>
           Inactive reason: Route Preference
           Age: 6:25      Metric: 1
           Area: 0.0.0.0
           Task: VPN-AB-OSPF
           AS path: I
           Communities: Route-Type:0.0.0.0:1:0

...

```

show route protocol rip

```

user@host> show route protocol rip

inet.0: 26 destinations, 27 routes (25 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

VPN-AB.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.255.14.177/32  *[RIP/100] 20:24:34, metric 2
                  > to 10.39.1.22 via t3-0/2/2.0
172.16.233.9/32   *[RIP/100] 00:03:59, metric 1

```

show route protocol rip detail

```

user@host> show route protocol rip detail

```

```
inet.0: 26 destinations, 27 routes (25 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

VPN-AB.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.255.14.177/32 (1 entry, 1 announced)
  *RIP    Preference: 100
          Nexthop: 10.39.1.22 via t3-0/2/2.0, selected
          State: <Active Int>
          Age: 20:25:02    Metric: 2
          Task: VPN-AB-RIPv2
          Announcement bits (2): 0-KRT 2-BGP.0.0.0.0+179
          AS path: I
          Route learned from 10.39.1.22 expires in 96 seconds
```

show route protocol ripng table inet6

```
user@host> show route protocol ripng table inet6

inet6.0: 4215 destinations, 4215 routes (4214 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

1111::1/128      * [RIPng/100] 02:13:33, metric 2
                  > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
1111::2/128      * [RIPng/100] 02:13:33, metric 2
                  > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
1111::3/128      * [RIPng/100] 02:13:33, metric 2
                  > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
1111::4/128      * [RIPng/100] 02:13:33, metric 2
                  > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
1111::5/128      * [RIPng/100] 02:13:33, metric 2
                  > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
1111::6/128      * [RIPng/100] 02:13:33, metric 2
                  > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
```

show route protocol static detail

```
user@host> show route protocol static detail

inet.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
10.5.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
          Next hop type: Router, Next hop index: 324
          Address: 0x9274010
          Next-hop reference count: 27
          Next hop: 192.168.187.126 via fxp0.0, selected
          Session Id: 0x0
          State: <Active NoReadvrt Int Ext>
          Age: 7w3d 21:24:25
          Validation State: unverified
          Task: RT
          Announcement bits (1): 0-KRT
          AS path: I

10.10.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
          Next hop type: Router, Next hop index: 324
          Address: 0x9274010
          Next-hop reference count: 27
```



```
Next hop: 192.168.187.126 via fxp0.0, selected
Session Id: 0x0
State: <Active NoReadvrt Int Ext>
Age: 7w3d 21:24:25
Validation State: unverified
Task: RT
Announcement bits (1): 0-KRT
AS path: I

10.13.10.0/23 (1 entry, 1 announced)
  *Static Preference: 5
    Next hop type: Router, Next hop index: 324
    Address: 0x9274010
    Next-hop reference count: 27
    Next hop: 192.168.187.126 via fxp0.0, selected
    Session Id: 0x0
    State: <Active NoReadvrt Int Ext>
    Age: 7w3d 21:24:25
    Validation State: unverified
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I
```

show route range

List of Syntax	Syntax on page 2438 Syntax (EX Series Switches) on page 2438
Syntax	<pre>show route range <brief detail extensive terse> <destination-prefix> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switches)	<pre>show route range <brief detail extensive terse> <destination-prefix></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display routing table entries using a prefix range.
Options	<p>none—Display standard information about all routing table entries using a prefix range.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>destination-prefix—Destination and prefix mask for the range.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route range on page 2438 show route range destination-prefix on page 2439 show route range detail on page 2439 show route range extensive on page 2440 show route range terse on page 2441
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route range

```
user@host> show route range
```

```

inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

10.10.0.0/16      *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
10.209.0.0/16    *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
10.255.71.14/32  *[Direct/0] 00:30:01
                  > via lo0.0
172.16.0.0/12    *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
192.168.0.0/16   *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
192.168.64.0/21  *[Direct/0] 00:30:01
                  > via fxp0.0
192.168.71.14/32 *[Local/0] 00:30:01
                  Local via fxp0.0
192.168.102.0/23 *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
...

```

show route range destination-prefix

```
user@host> show route range 192.168.0.0/16
```

```

inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.0.0/16   *[Static/5] 00:31:14
                  > to 192.168.71.254 via fxp0.0
192.168.64.0/21  *[Direct/0] 00:31:14
                  > via fxp0.0
192.168.71.14/32 *[Local/0] 00:31:14
                  Local via fxp0.0
192.168.102.0/23 *[Static/5] 00:31:14
                  > to 192.168.71.254 via fxp0.0

```

show route range detail

```
user@host> show route range detail
```

```

inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Age: 30:05
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

10.209.0.0/16 (1 entry, 1 announced)
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected

```

```

        State: <Active NoReadvrt Int Ext>
        Age: 30:05
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

10.255.71.14/32 (1 entry, 0 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via lo0.0, selected
        State: <Active Int>
        Age: 30:05
        Task: IF
        AS path: I

172.16.0.0/12 (1 entry, 1 announced)
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Age: 30:05
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

...

```

show route range extensive

```
user@host> show route range extensive
```

```

inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.10.0.0/16 -> {192.168.71.254}
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Age: 30:17
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

10.209.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.209.0.0/16 -> {192.168.71.254}
    *Static Preference: 5
        Next-hop reference count: 22
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Age: 30:17
        Task: RT
        Announcement bits (1): 0-KRT
        AS path: I

10.255.71.14/32 (1 entry, 0 announced)
    *Direct Preference: 0

```

```

Next hop type: Interface
Next-hop reference count: 1
Next hop: via lo0.0, selected
State: <Active Int>
Age: 30:17
Task: IF
AS path: I

172.16.0.0/12 (1 entry, 1 announced)
TSI:
KRT in-kernel 172.16.0.0/12 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 30:17
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

...

```

show route range terse

```
user@host> show route range terse
```

```

inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
* 10.10.0.0/16      S  5                >192.168.71.254
* 10.209.0.0/16     S  5                >192.168.71.254
* 10.255.71.14/32   D  0                >lo0.0
* 172.16.0.0/12     S  5                >192.168.71.254
* 192.168.0.0/16    S  5                >192.168.71.254
* 192.168.64.0/21   D  0                >fxp0.0
* 192.168.71.14/32  L  0                Local
* 192.168.102.0/23  S  5                >192.168.71.254
* 207.17.136.0/24   S  5                >192.168.71.254
* 207.17.136.192/32 S  5                >192.168.71.254

__juniper_private1__.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0
hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
* 10.0.0.0/8        D  0                >fxp2.0
                   D  0                >fxp1.0
* 10.0.0.4/32       L  0                Local

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
47.0005.80ff.f800.0000.0108.0001.0102.5507.1014/152
*                   D  0                >lo0.0

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

```

```
A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
abcd::10:255:71:14/128
*                  D    0                      >1o0.0
fe80::280:42ff:fe11:226f/128
*                  D    0                      >1o0.0

__juniper_private1__.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0
hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
fe80::280:42ff:fe11:226f/128
*                  D    0                      >1o0.16385
```

show route receive-protocol

List of Syntax	Syntax on page 2443 Syntax (EX Series Switches) on page 2443
Syntax	<pre>show route receive-protocol <i>protocol neighbor-address</i> <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)</pre>
Syntax (EX Series Switches)	<pre>show route receive-protocol <i>protocol neighbor-address</i> <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Display the routing information as it was received through a particular neighbor using a particular dynamic routing protocol.
Options	<p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><i>protocol neighbor-address</i>—Protocol transmitting the route (bgp, dvmrp, msdp, pim, rip, or ripng) and address of the neighboring router from which the route entry was received.</p>
Additional Information	The output displays the selected routes and the attributes with which they were received, but does not show the effects of import policy on the routing attributes.
Required Privilege Level	view
List of Sample Output	show route receive-protocol bgp on page 2446 show route receive-protocol bgp extensive on page 2446 show route receive-protocol bgp table extensive on page 2447 show route receive-protocol bgp logical-system extensive on page 2447 show route receive-protocol bgp detail (Layer 2 VPN) on page 2448 show route receive-protocol bgp extensive (Layer 2 VPN) on page 2448 show route receive-protocol bgp (Layer 3 VPN) on page 2449 show route receive-protocol bgp detail (Layer 3 VPN) on page 2449 show route receive-protocol bgp detail (Long-Lived Graceful Restart) on page 2450 show route receive-protocol bgp detail (Labeled Unicast) on page 2451 show route receive-protocol bgp extensive (Layer 3 VPN) on page 2451 Show route receive protocol (Segment Routing Traffic Engineering) on page 2452

Output Fields Table 209 on page 2444 describes the output fields for the **show route receive-protocol** command. Output fields are listed in the approximate order in which they appear.

Table 209: show route receive-protocol Output Fields

Field Name	Field Description	Level of Output
<i>routing-table-name</i>	Name of the routing table—for example, inet.0.	All levels
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.	All levels
<i>number routes</i>	Number of routes in the routing table and total number of routes in the following states: <ul style="list-style-type: none"> • active • holddown (routes that are in pending state before being declared inactive) • hidden (routes that are not used because of a routing policy) 	All levels
Prefix	Destination prefix.	none brief
MED	Multiple exit discriminator value included in the route.	none brief
<i>destination-prefix</i> (entry, announced)	Destination prefix. The entry value is the number of routes for this destination, and the announced value is the number of routes being announced for this destination.	detail extensive
Accepted LongLivedStale	The LongLivedStale flag indicates that the route was marked LLGR-stale by this router, as part of the operation of LLGR receiver mode. Either this flag or the LongLivedStaleImport flag may be displayed for a route. Neither of these flags are displayed at the same time as the Stale (ordinary GR stale) flag.	detail extensive
Accepted LongLivedStaleImport	The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy. Either this flag or the LongLivedStale flag may be displayed for a route. Neither of these flags are displayed at the same time as the Stale (ordinary GR stale) flag. Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and import into the inet.0 routing table	detail extensive
ImportAccepted LongLivedStaleImport	Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and imported into the inet.0 routing table The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy.	detail extensive
Route Distinguisher	64-bit prefix added to IP subnets to make them unique.	detail extensive
Label-Base, range	First label in a block of labels and label block size. A remote PE routing device uses this first label when sending traffic toward the advertising PE routing device.	detail extensive

Table 209: show route receive-protocol Output Fields (continued)

Field Name	Field Description	Level of Output
VPN Label	Virtual private network (VPN) label. Packets are sent between CE and PE routing devices by advertising VPN labels. VPN labels transit over either an RSVP or an LDP label-switched path (LSP) tunnel.	detail extensive
Next hop	Next hop to the destination. An angle bracket (>) indicates that the route is the selected route.	All levels
Localpref or Lclpref	Local preference value included in the route.	All levels
AS path	<p>Autonomous system (AS) path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> • I—IGP. • E—EGP. • ?—Incomplete; typically, the AS path was aggregated. <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> • []—Brackets enclose the number that precedes the AS path. This number represents the number of ASs present in the AS path, when calculated as defined in RFC 4271. This value is used the AS-path merge process, as defined in RFC 4893. • []—If more than one AS number is configured on the router, or if AS path prepending is configured, brackets enclose the local AS number associated with the AS path. • { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order. • ()—Parentheses enclose a confederation. • ([])—Parentheses and brackets enclose a confederation set. <p>NOTE: In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>	All levels
Route Labels	Stack of labels carried in the BGP route update.	detail extensive
Cluster list	(For route reflected output only) Cluster ID sent by the route reflector.	detail extensive
Originator ID	(For route reflected output only) Address of routing device that originally sent the route to the route reflector.	detail extensive
Communities	Community path attribute for the route. See the Output Field table in the show route detail command for all possible values for this field.	detail extensive
AIGP	Accumulated interior gateway protocol (AIGP) BGP attribute.	detail extensive
Attrset AS	Number, local preference, and path of the AS that originated the route. These values are stored in the Attrset attribute at the originating routing device.	detail extensive

Table 209: show route receive-protocol Output Fields (continued)

Field Name	Field Description	Level of Output
Layer2-info: encaps	Layer 2 encapsulation (for example, VPLS).	detail extensive
control flags	Control flags: none or Site Down.	detail extensive
mtu	Maximum transmission unit (MTU) of the Layer 2 circuit.	detail extensive

Sample Output

show route receive-protocol bgp

```
user@host> show route receive-protocol bgp 10.255.245.215

inet.0: 28 destinations, 33 routes (27 active, 0 holddown, 1 hidden)
Prefix          Next hop          MED      Lclpref  AS path
10.22.1.0/24     10.255.245.215    0         100      I
10.22.2.0/24     10.255.245.215    0         100      I
```

show route receive-protocol bgp extensive

```
user@host> show route receive-protocol bgp 10.255.245.63 extensive

inet.0: 244 destinations, 244 routes (243 active, 0 holddown, 1 hidden)
Prefix          Next hop          MED      Lclpref  AS path
172.16.1.0/24 (1 entry, 1 announced)
  Next hop: 10.0.50.3
  Localpref: 100
  AS path: I <Originator>
  Cluster list: 10.2.3.1
  Originator ID: 10.255.245.45
172.16.163.0/16 (1 entry, 1 announced)
  Next hop: 111.222.5.254
  Localpref: 100
  AS path: I <Originator>
  Cluster list: 10.2.3.1
  Originator ID: 10.255.245.68
172.16.164.0/16 (1 entry, 1 announced)
  Next hop: 111.222.5.254
  Localpref: 100
  AS path: I <Originator>
  Cluster list: 10.2.3.1
  Originator ID: 10.255.245.45
172.16.195.0/24 (1 entry, 1 announced)
  Next hop: 111.222.5.254
  Localpref: 100
  AS path: I <Originator>
  Cluster list: 10.2.3.1
  Originator ID: 10.255.245.68
inet.2: 63 destinations, 63 routes (63 active, 0 holddown, 0 hidden)
Prefix          Next hop          MED      Lclpref  AS path
inet.3: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
Prefix          Next hop          MED      Lclpref  AS path
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

Prefix	Next hop	MED	Lc1pref	AS path
mpls.0: 48 destinations, 48 routes (48 active, 0 holddown, 0 hidden)				

show route receive-protocol bgp table extensive

```
user@host> show route receive-protocol bgp 207.17.136.192 table inet.0 66.117.68.0/24 extensive
inet.0: 227315 destinations, 227316 routes (227302 active, 0 holddown, 13 hidden)
* 66.117.63.0/24 (1 entry, 1 announced)
  Nexthop: 207.17.136.29
  Localpref: 100
  AS path: AS2 PA[6]: 14203 2914 3356 29748 33437 AS_TRANS
  AS path: AS4 PA[2]: 33437 393219
  AS path: Merged[6]: 14203 2914 3356 29748 33437 393219 I
  Communities: 2914:420
```

show route receive-protocol bgp logical-system extensive

```
user@host> show route receive-protocol bgp 10.0.0.9 logical-system PE4 extensive
inet.0: 12 destinations, 13 routes (12 active, 0 holddown, 0 hidden)
* 10.0.0.0/30 (1 entry, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

* 10.0.0.4/30 (1 entry, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

10.0.0.8/30 (2 entries, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

* 10.9.9.1/32 (1 entry, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

* 10.100.1.1/32 (1 entry, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

* 172.16.44.0/24 (1 entry, 1 announced)
  Accepted
  Route Label: 300096
  Nexthop: 10.0.0.9
  AS path: 13979 I
  AIGP: 203

* 172.16.55.0/24 (1 entry, 1 announced)
```

```

Accepted
Route Label: 300112
Nexthop: 10.0.0.9
AS path: 13979 7018 I
AIGP: 25

* 172.16.66.0/24 (1 entry, 1 announced)
Accepted
Route Label: 300144
Nexthop: 10.0.0.9
AS path: 13979 7018 I

* 172.16.99.0/24 (1 entry, 1 announced)
Accepted
Route Label: 300160
Nexthop: 10.0.0.9
AS path: 13979 7018 I

```

show route receive-protocol bgp detail (Layer 2 VPN)

```

user@host> show route receive-protocol bgp 10.255.14.171 detail

inet.0: 68 destinations, 68 routes (67 active, 0 holddown, 1 hidden)
Prefix          Nexthop          MED    Lclpref AS path
inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
mpls.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
frame-vpn.l2vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0
hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.245.35:1:5:1/96 (1 entry, 1 announced)
  Route Distinguisher: 10.255.245.35:1
  Label-base : 800000, range : 4, status-vector : 0x0
  Nexthop: 10.255.245.35
  Localpref: 100
  AS path: I
  Communities: target:65299:100 Layer2-info: encaps:FRAME RELAY,
control flags: 0, mtu: 0
bgp.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.245.35:1:5:1/96 (1 entry, 0 announced)
  Route Distinguisher: 10.255.245.35:1
  Label-base : 800000, range : 4, status-vector : 0x0
  Nexthop: 10.255.245.35
  Localpref: 100
  AS path: I
  Communities: target:65299:100 Layer2-info: encaps:FRAME RELAY,
control flags:0, mtu: 0

```

show route receive-protocol bgp extensive (Layer 2 VPN)

```

user@host> show route receive-protocol bgp 10.255.14.171 extensive

inet.0: 68 destinations, 68 routes (67 active, 0 holddown, 1 hidden)
Prefix          Nexthop          MED    Lclpref AS path
inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

```

```

Prefix          Nexthop          MED    Lc1pref AS path
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
mpls.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
frame-vpn.l2vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
10.255.245.35:1:5:1/96 (1 entry, 1 announced)
  Route Distinguisher: 10.255.245.35:1
  Label-base : 800000, range : 4, status-vector : 0x0
  Nexthop: 10.255.245.35
  Localpref: 100
  AS path: I
  Communities: target:65299:100 Layer2-info: encaps:FRAME RELAY,
  control flags:0, mtu: 0
bgp.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
10.255.245.35:1:5:1/96 (1 entry, 0 announced)
  Route Distinguisher: 10.255.245.35:1
  Label-base : 800000, range : 4, status-vector : 0x0
  Nexthop: 10.255.245.35
  Localpref: 100
  AS path: I
  Communities: target:65299:100 Layer2-info: encaps:FRAME RELAY,
  control flags:0, mtu: 0

```

show route receive-protocol bgp (Layer 3 VPN)

```
user@host> show route receive-protocol bgp 10.255.14.171
```

```

inet.0: 33 destinations, 33 routes (32 active, 0 holddown, 1 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
VPN-A.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
10.255.14.175/32  10.255.14.171          100 2 I
10.255.14.179/32  10.255.14.171          2    100 I
VPN-B.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
10.255.14.175/32  10.255.14.171          100 2 I
10.255.14.177/32  10.255.14.171          100 I
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
mpls.0: 9 destinations, 9 routes (9 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
bgp.l3vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lc1pref AS path
10.255.14.171:300:10.255.14.177/32
                  10.255.14.171          100 I
10.255.14.171:100:10.255.14.179/32
                  10.255.14.171          2    100 I
10.255.14.171:200:10.255.14.175/32
                  10.255.14.171          100 2 I

```

show route receive-protocol bgp detail (Layer 3 VPN)

```
user@host> show route receive-protocol bgp 10.255.14.174 detail
```

```

inet.0: 16 destinations, 17 routes (15 active, 0 holddown, 1 hidden)
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
vpna.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
* 10.49.0.0/30 (1 entry, 1 announced)
  Route Distinguisher: 10.255.14.176:2
  VPN Label: 101264
  Nexthop: 10.255.14.174
  Localpref: 100
  AS path: I
  Communities: target:200:100
  AttrSet AS: 100
    Localpref: 100
    AS path: I
* 10.255.14.172/32 (1 entry, 1 announced)
  Route Distinguisher: 10.255.14.176:2
  VPN Label: 101280
  Nexthop: 10.255.14.174
  Localpref: 100
  AS path: I
  Communities: target:200:100
  AttrSet AS: 100
    Localpref: 100
    AS path: I
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
* 10.255.14.174:2:10.49.0.0/30 (1 entry, 0 announced)
  Route Distinguisher: 10.255.14.174:2
  VPN Label: 101264
  Nexthop: 10.255.14.174
  Localpref: 100
  AS path: I
  Communities: target:200:100
  AttrSet AS: 100
    Localpref: 100
    AS path: I
* 10.255.14.174:2:10.255.14.172/32 (1 entry, 0 announced)
  Route Distinguisher: 10.255.14.174:2
  VPN Label: 101280
  Nexthop: 10.255.14.174
  Localpref: 100
  AS path: I
  Communities: target:200:100
  AttrSet AS: 100
    Localpref: 100
    AS path: I
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

```

show route receive-protocol bgp detail (Long-Lived Graceful Restart)

```
user@host> show route receive-protocol bgp 10.4.12.11 detail
```

```

bgp.l2vpn.0: 38 destinations, 39 routes (37 active, 0 holddown, 1 hidden)
* 172.16.1.4:100:172.16.1.4/96 AD (1 entry, 1 announced)
  Accepted LongLivedStale LongLivedStaleImport
  Nexthop: 10.4.12.11
  Localpref: 100
  AS path: I

```

show route receive-protocol bgp detail (Labeled Unicast)

```

user@host> show route receive-protocol bgp 1.1.1.1 detail

inet.0: 45 destinations, 46 routes (45 active, 0 holddown, 0 hidden)
* 1.1.1.8/32 (2 entries, 2 announced)
Accepted
Route Labels: 1000123(top) 1000124 1000125 1000126
Nexthop: 1.1.1.4
Localpref: 100
AS path: I
Entropy label capable, next hop field matches route next hop

inet.3: 15 destinations, 21 routes (6 active, 0 holddown, 14 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)

inet6.0: 26 destinations, 28 routes (26 active, 0 holddown, 0 hidden)
* 100::1/128 (2 entries, 2 announced)
Accepted
Route Labels: 1000123(top) 1000124 1000125 1000126
Nexthop: ::ffff:1.1.1.4
Localpref: 100
AS path: I

inet6.3: 22 destinations, 23 routes (22 active, 0 holddown, 0 hidden)

```

show route receive-protocol bgp extensive (Layer 3 VPN)

```

user@host> show route receive-protocol bgp 10.255.245.63 extensive

inet.0: 244 destinations, 244 routes (243 active, 0 holddown, 1 hidden)
  Prefix                Nexthop                MED    Lclpref AS path
  172.16.1.0/24 (1 entry, 1 announced)
    Nexthop: 10.0.50.3
    Localpref: 100
    AS path: I <Originator>
    Cluster list: 10.2.3.1
    Originator ID: 10.255.245.45
  172.16.163.0/16 (1 entry, 1 announced)
    Nexthop: 111.222.5.254
    Localpref: 100
    AS path: I <Originator>
    Cluster list: 10.2.3.1
    Originator ID: 10.255.245.68
  172.16.164.0/16 (1 entry, 1 announced)
    Nexthop: 111.222.5.254
    Localpref: 100
    AS path: I <Originator>
    Cluster list: 10.2.3.1
    Originator ID: 10.255.245.45
  172.16.195.0/24 (1 entry, 1 announced)
    Nexthop: 111.222.5.254
    Localpref: 100
    AS path: I <Originator>
    Cluster list: 10.2.3.1
    Originator ID: 10.255.245.68

```

```

inet.2: 63 destinations, 63 routes (63 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
inet.3: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
mpls.0: 48 destinations, 48 routes (48 active, 0 holddown, 0 hidden)

```

Show route receive protocol (Segment Routing Traffic Engineering)

```

show route receive protocol bgp 10.1.1.4

bgp.inetcolor.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

* 50-4.4.4.4-1234<sr6>/96 (1 entry, 0 announced)
  Import Accepted
  Distinguisher: 50
  Color: 1234
  Nexthop: 10.1.1.4
  Localpref: 100
  AS path: 3 I
  Communities: target:1.1.1.1:1

inetcolor.0: 6 destinations, 7 routes (6 active, 0 holddown, 0 hidden)
* 4.4.4.4-1234<c6>/64 (1 entry, 1 announced)
  Import Accepted
  Color: 1234
  Nexthop: 10.1.1.4
  Localpref: 100
  AS path: 3 I
  Communities: target:1.1.1.1:1

user@host# run show route receive-protocol bgp 5001:1::4

bgp.inet6color.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

* 50-2001:1::4-1234<sr6>/192 (1 entry, 0 announced)
  Import Accepted
  Distinguisher: 50
  Color: 1234
  Nexthop: ::ffff:1.1.1.4
  Localpref: 100
  AS path: 3 I
  Communities: target:1.1.1.1:1

inet6color.0: 6 destinations, 7 routes (6 active, 0 holddown, 0 hidden)
* 2001::5-1234<c6>/160 (1 entry, 1 announced)
  Import Accepted
  Color: 1234
  Nexthop: ::ffff:1.1.1.5
  Localpref: 100
  AS path: 3 I
  Communities: target:2:1

```


show route resolution

List of Syntax [Syntax on page 2453](#)
 [Syntax \(EX Series Switches\) on page 2453](#)

Syntax show route resolution
 <brief | detail | extensive | summary>
 <index *index*>
 <logical-system (all | *logical-system-name*)>
 <prefix>
 <table *routing-table-name*>
 <unresolved>

Syntax (EX Series Switches) show route resolution
 <brief | detail | extensive | summary>
 <index *index*>
 <prefix>
 <table *routing-table-name*>
 <unresolved>

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.

Description Display the entries in the next-hop resolution database. This database provides for recursive resolution of next hops through other prefixes in the routing table.

Options **none**—Display standard information about all entries in the next-hop resolution database.

brief | detail | extensive | summary—(Optional) Display the specified level of output.

index *index*—(Optional) Show the index of the resolution tree.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

prefix *network/destination-prefix*—(Optional) Display database entries for the specified address.

table *routing-table-name*—(Optional) Display information about a particular routing table (for example, **inet.0**) where policy-based export is currently enabled.

unresolved—(Optional) Display routes that could not be resolved.

Required Privilege Level view

Related Documentation • [Example: Configuring Route Resolution on PE Routers](#)

List of Sample Output [show route resolution detail on page 2455](#)
 [show route resolution \(Multipath Resolution\) on page 2456](#)
 [show route resolution summary on page 2457](#)
 [show route resolution unresolved on page 2457](#)

Output Fields Table 210 on page 2455 describes the output fields for the **show route resolution** command. Output fields are listed in the approximate order in which they appear.

Table 210: show route resolution Output Fields

Field Name	Field Description
routing-table-name	Name of the routing table whose prefixes are resolved using the entries in the route resolution database. For routing table groups, this is the name of the primary routing table whose prefixes are resolved using the entries in the route resolution database.
Tree index	Tree index identifier.
Nodes	Number of nodes in the tree.
Reference count	Number of references made to the next hop.
Contributing routing tables	Routing tables used for next-hop resolution.
Originating RIB	Name of the routing table whose active route was used to determine the forwarding next-hop entry in the resolution database. For example, in the case of inet.0 resolving through inet.0 and inet.3 , this field indicates which routing table, inet.0 or inet.3 , provided the best path for a particular prefix.
Metric	Metric associated with the forwarding next hop.
Node path count	Number of nodes in the path.
Forwarding next hops	Number of forwarding next hops. The forwarding next hop is the network layer address of the directly reachable neighboring system (if applicable) and the interface used to reach it.
	Merged—Merged next hops when recursive resolution of multipath is configured.

Sample Output

show route resolution detail

```

user@host> show route resolution detail

Tree Index: 1, Nodes 0, Reference Count 1
Contributing routing tables: inet.3
Tree Index: 2, Nodes 23, Reference Count 1
Contributing routing tables: inet.0 inet.3
10.10.0.0/16 Originating RIB: inet.0
  Node path count: 1
  Forwarding nexthops: 1
10.31.1.0/30 Originating RIB: inet.0
  Node path count: 1
  Forwarding nexthops: 1
10.31.1.1/32 Originating RIB: inet.0
  Node path count: 1
  Forwarding nexthops: 0
10.31.1.4/30 Originating RIB: inet.0

```

```

Node path count: 1
Forwarding nexthops: 1
10.31.1.5/32 Originating RIB: inet.0
Node path count: 1
Forwarding nexthops: 0
10.31.2.0/30 Originating RIB: inet.0
Metric: 2 Node path count: 1
Forwarding nexthops: 2
10.31.11.0/24 Originating RIB: inet.0
Node path count: 1
Forwarding nexthops: 1

```

show route resolution (Multipath Resolution)

```
user@host> show route resolution detail
```

```

user@host> show route resolution detail 10.1.1.2
Tree Index: 1, Nodes 36, Reference Count 3
Contributing routing tables: inet.0 inet.3
Policy: [ abc ]
10.1.1.2/32 Originating RIB: inet.0
Node path count: 1
Next hop subtype: INDIRECT
Indirect next hops: 2
  Protocol next hop: 10.1.1.1
  Inode flags: 0x206 path flags: 0x08
  Path fnh link: 0xc9321c0 path inh link: 0x0
  Indirect next hop: 0xb2b20f0 1048574 INH Session ID: 0x143
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 12.1.1.2 via ge-2/0/1.0
    Session Id: 0x144
    Next hop: 13.1.1.2 via ge-2/0/2.0
    Session Id: 0x145

10.1.1.1/32 Originating RIB: inet.0
Node path count: 1
Node flags: 1
Forwarding nexthops: 1 (Merged)
Nexthop: 12.1.1.2 via ge-2/0/1.0

Nexthop: 13.1.1.2 via ge-2/0/2.0

```

```
user@host> show route resolution summary
```

```

Tree Index: 1, Nodes 7, Reference Count 2
Contributing routing tables: inet.3
Tree Index: 2, Nodes 7, Reference Count 8213
Contributing routing tables: inet.3
Policy: [ RRwM ]
Tree Index: 3, Nodes 7, Reference Count 2
Contributing routing tables: inet6.3
Tree Index: 4, Nodes 1, Reference Count 1
Contributing routing tables: iso.0
Tree Index: 5, Nodes 1000061, Reference Count 13
Contributing routing tables: inet.0 inet.3
Policy: [ Community-RRwM ]
Tree Index: 6, Nodes 2013, Reference Count 6
Contributing routing tables: inet6.0 inet6.3

```

```

Policy: [ RRWM ]
Tree Index: 7, Nodes 7, Reference Count 1501
Contributing routing tables: inet6.3
Policy: [ RRWM ]
Tree Index: 8, Nodes 1000061, Reference Count 2
Contributing routing tables: inet.0 inet.3
Policy: [ RRWM ]

```

show route resolution summary

```

user@host> show route resolution summary

Tree Index: 1, Nodes 24, Reference Count 1
Contributing routing tables: :voice.inet.0 :voice.inet.3
Tree Index: 2, Nodes 2, Reference Count 1
Contributing routing tables: inet.3
Tree Index: 3, Nodes 43, Reference Count 1
Contributing routing tables: inet.0 inet.3

```

show route resolution unresolved

```

user@host> show route resolution unresolved

Tree Index 1
vt-3/2/0.32769.0      /16
    Protocol Nexthop: 10.255.71.238 Push 800000
    Indirect nexthop: 0 -
vt-3/2/0.32772.0      /16
    Protocol Nexthop: 10.255.70.103 Push 800008
    Indirect nexthop: 0 -
Tree Index 2

```

show route snooping

Syntax	<pre>show route snooping <brief detail extensive terse> <all> <best address/prefix> <exact address> <logical-system logical-system-name> <range prefix-range> <summary> <table table-name></pre>
Release Information	Command introduced in Junos OS Release 8.5. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display the entries in the routing table that were learned from snooping.
Options	<p>none—Display the entries in the routing table that were learned from snooping.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>all—(Optional) Display all entries, including hidden entries.</p> <p>best address/prefix—(Optional) Display the longest match for the provided address and optional prefix.</p> <p>exact address/prefix—(Optional) Display exact matches for the provided address and optional prefix.</p> <p>logical-system logical-system-name—(Optional) Display information about a particular logical system, or type 'all'.</p> <p>range prefix-range—(Optional) Display information for the provided address range.</p> <p>summary—(Optional) Display route snooping summary statistics.</p> <p>table table-name—(Optional) Display information for the named table.</p>
Required Privilege Level	view
List of Sample Output	show route snooping detail on page 2459 show route snooping logical-system all on page 2459
Output Fields	For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.

Sample Output

show route snooping detail

```

user@host> show route snooping detail

__+domainAll___.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

224.0.0.2/32 (1 entry, 1 announced)
  *IGMP    Preference: 0
           Next hop type: MultiRecv
           Next-hop reference count: 4
           State: <Active NoReadvrt Int>
           Age: 2:24
           Task: IGMP
           Announcement bits (1): 0-KRT
           AS path: I

224.0.0.22/32 (1 entry, 1 announced)
  *IGMP    Preference: 0
           Next hop type: MultiRecv
           Next-hop reference count: 4
           State: <Active NoReadvrt Int>
           Age: 2:24
           Task: IGMP
           Announcement bits (1): 0-KRT
           AS path: I

__+domainAll___.inet.1: 36 destinations, 36 routes (36 active, 0 holddown, 0 hidden)

224.0.0.0.0.0.0/24 (1 entry, 1 announced)
  *Multicast Preference: 180
           Next hop type: Multicast (IPv4), Next hop index: 1048584
           Next-hop reference count: 4
           State: <Active Int>
           Age: 2:24
           Task: MC
           Announcement bits (1): 0-KRT
           AS path: I

<snip>

```

show route snooping logical-system all

```

user@host> show route snooping logical-system all

logical-system: default

inet.1: 20 destinations, 20 routes (20 active, 0 holddown, 0 hidden)
Restart Unsupported
+ = Active Route, - = Last Active, * = Both

0.0,0.1,0.0,232.1.1.65,100.1.1.2/112*[Multicast/180] 00:07:36
      Multicast (IPv4) Composite
0.0,0.1,0.0,232.1.1.66,100.1.1.2/112*[Multicast/180] 00:07:36
      Multicast (IPv4) Composite
0.0,0.1,0.0,232.1.1.67,100.1.1.2/112*[Multicast/180] 00:07:36

<snip>

```

```
default-switch.inet.1: 237 dest, 237 rts (237 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

0.15,0.1,0.0,0.0.0.0,0.0.0.0,2/120*[Multicast/180] 00:08:21
    Multicast (IPv4) Composite
0.15,0.1,0.0,0.0.0.0,0.0.0.0,2,17/128*[Multicast/180] 00:08:21
    Multicast (IPv4) Composite

<snip>
```


show route source-gateway

List of Syntax	Syntax on page 2461 Syntax (EX Series Switches) on page 2461
Syntax	<pre>show route source-gateway <i>address</i> <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>show route source-gateway <i>address</i> <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	<p>Display the entries in the routing table that were learned from a particular address. The Source field in the show route detail command output lists the source for each route, if known.</p>
Options	<p>brief detail extensive terse—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p>address—IP address of the system.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	view
List of Sample Output	show route source-gateway on page 2461 show route source-gateway detail on page 2462 show route source-gateway extensive on page 2464
Output Fields	<p>For information about output fields, see the output field tables for the show route command, the show route detail command, the show route extensive command, or the show route terse command.</p>

Sample Output

show route source-gateway

```
user@host> show route source-gateway 10.255.70.103
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
```

```

Restart Complete

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.255.70.103:1:3:1/96
    *[BGP/170] 12:12:24, localpref 100, from 10.255.70.103
        AS path: I
        > via so-0/3/0.0, label-switched-path green-r1-r3

red.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.255.70.103:2:3:1/96
    *[BGP/170] 12:12:24, localpref 0, from 10.255.70.103
        AS path: I
        > via so-0/3/0.0, label-switched-path green-r1-r3

bgp.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.255.70.103:1:3:1/96
    *[BGP/170] 12:12:24, localpref 100, from 10.255.70.103
        AS path: I
        > via so-0/3/0.0, label-switched-path green-r1-r3

10.255.70.103:2:3:1/96
    *[BGP/170] 12:12:24, localpref 0, from 10.255.70.103
        AS path: I
        > via so-0/3/0.0, label-switched-path green-r1-r3

```

show route source-gateway detail

```

user@host> show route source-gateway 10.255.70.103 detail

inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

```

Restart Complete

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
Restart Complete
green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

Restart Complete

10.255.70.103:1:3:1/96 (1 entry, 1 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.70.103:1
Next-hop reference count: 7
Source: 10.255.70.103
Protocol next hop: 10.255.70.103
Indirect next hop: 2 no-forward
State: <Secondary Active Int Ext>
Local AS: 69 Peer AS: 69
Age: 12:14:00 Metric2: 1
Task: BGP_69.10.255.70.103+179
Announcement bits (1): 0-green-l2vpn
AS path: I
Communities: target:11111:1 Layer2-info: encaps:VPLS,
control flags:, mtu: 0
Label-base: 800008, range: 8
Localpref: 100
Router ID: 10.255.70.103
Primary Routing Table bgp.l2vpn.0

red.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Restart Complete

10.255.70.103:2:3:1/96 (1 entry, 1 announced)
*BGP Preference: 170/-1
Route Distinguisher: 10.255.70.103:2
Next-hop reference count: 7
Source: 10.255.70.103
Protocol next hop: 10.255.70.103
Indirect next hop: 2 no-forward
State: <Secondary Active Int Ext>
Local AS: 69 Peer AS: 69
Age: 12:14:00 Metric2: 1
Task: BGP_69.10.255.70.103+179
Announcement bits (1): 0-red-l2vpn
AS path: I
Communities: target:11111:2 Layer2-info: encaps:VPLS,
control flags:Site-Down, mtu: 0
Label-base: 800016, range: 8
Localpref: 0
Router ID: 10.255.70.103
Primary Routing Table bgp.l2vpn.0

bgp.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

10.255.70.103:1:3:1/96 (1 entry, 0 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.70.103:1
Next-hop reference count: 7

```

Source: 10.255.70.103
Protocol next hop: 10.255.70.103
Indirect next hop: 2 no-forward
State: <Active Int Ext>
Local AS: 69 Peer AS: 69
Age: 12:14:00 Metric2: 1
Task: BGP_69.10.255.70.103+179
AS path: I
Communities: target:11111:1 Layer2-info: encaps:VPLS, control
flags:, mtu: 0
Label-base: 800008, range: 8
Localpref: 100
Router ID: 10.255.70.103
Secondary Tables: green.l2vpn.0
10.255.70.103:2:3:1/96 (1 entry, 0 announced)
*BGP Preference: 170/-1
Route Distinguisher: 10.255.70.103:2
Next-hop reference count: 7
Source: 10.255.70.103
Protocol next hop: 10.255.70.103
Indirect next hop: 2 no-forward
State: <Active Int Ext>
Local AS: 69 Peer AS: 69
Age: 12:14:00 Metric2: 1
Task: BGP_69.10.255.70.103+179
AS path: I
Communities: target:11111:2 Layer2-info: encaps:VPLS,
control flags:Site-Down,
mtu: 0
Label-base: 800016, range: 8
Localpref: 0
Router ID: 10.255.70.103
Secondary Tables: red.l2vpn.0

```

show route source-gateway extensive

```

user@host> show route source-gateway 10.255.70.103 extensive

inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
Restart Complete

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
10.255.70.103:1:3:1/96 (1 entry, 1 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.70.103:1

```

```

Next-hop reference count: 7
Source: 10.255.70.103
Protocol next hop: 10.255.70.103
Indirect next hop: 2 no-forward
State: <Secondary Active Int Ext>
Local AS: 69 Peer AS: 69
Age: 12:15:24 Metric2: 1
Task: BGP_69.10.255.70.103+179
Announcement bits (1): 0-green-l2vpn
AS path: I
Communities: target:11111:1 Layer2-info: encaps:VPLS,
control flags:, mtu: 0
Label-base: 800008, range: 8
Localpref: 100
Router ID: 10.255.70.103
Primary Routing Table bgp.l2vpn.0

red.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Restart Complete

10.255.70.103:2:3:1/96 (1 entry, 1 announced)
*BGP Preference: 170/-1
Route Distinguisher: 10.255.70.103:2
Next-hop reference count: 7
Source: 10.255.70.103
Protocol next hop: 10.255.70.103
Indirect next hop: 2 no-forward
State: <Secondary Active Int Ext>
Local AS: 69 Peer AS: 69
Age: 12:15:24 Metric2: 1
Task: BGP_69.10.255.70.103+179
Announcement bits (1): 0-red-l2vpn
AS path: I
Communities: target:11111:2 Layer2-info: encaps:VPLS,
control flags:Site-Down, mtu: 0
Label-base: 800016, range: 8
Localpref: 0
Router ID: 10.255.70.103
Primary Routing Table bgp.l2vpn.0

bgp.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

10.255.70.103:1:3:1/96 (1 entry, 0 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.70.103:1
Next-hop reference count: 7
Source: 10.255.70.103
Protocol next hop: 10.255.70.103
Indirect next hop: 2 no-forward
State: <Active Int Ext>
Local AS: 69 Peer AS: 69
Age: 12:15:24 Metric2: 1
Task: BGP_69.10.255.70.103+179
AS path: I
Communities: target:11111:1 Layer2-info: encaps:VPLS,
control flags:, mtu: 0
Label-base: 800008, range: 8
Localpref: 100
Router ID: 10.255.70.103

```

```

Secondary Tables: green.l2vpn.0
Indirect next hops: 1
    Protocol next hop: 10.255.70.103 Metric: 2
    Indirect next hop: 2 no-forward
    Indirect path forwarding next hops: 1
Next hop:      via so-0/3/0.0 weight 0x1
    10.255.70.103/32 Originating RIB: inet.3
    Metric: 2                                     Node path count: 1
    Forwarding nexthops: 1
    Nexthop: via so-0/3/0.0

10.255.70.103:2:3:1/96 (1 entry, 0 announced)
*BGP Preference: 170/-1
Route Distinguisher: 10.255.70.103:2
Next-hop reference count: 7
Source: 10.255.70.103
Protocol next hop: 10.255.70.103
Indirect next hop: 2 no-forward
State: <Active Int Ext>
Local AS: 69 Peer AS: 69
Age: 12:15:24 Metric2: 1
Task: BGP_69.10.255.70.103+179
AS path: I
Communities: target:11111:2 Layer2-info: encaps:VPLS,
control flags:Site-Down,
mtu: 0
Label-base: 800016, range: 8
Localpref: 0
Router ID: 10.255.70.103
Secondary Tables: red.l2vpn.0
Indirect next hops: 1
    Protocol next hop: 10.255.70.103 Metric: 2
    Indirect next hop: 2 no-forward
    Indirect path forwarding next hops: 1
Next hop:      via so-0/3/0.0 weight 0x1
    10.255.70.103/32 Originating RIB: inet.3
    Metric: 2                                     Node path count: 1
    Forwarding nexthops: 1
    Nexthop: via so-0/3/0.0

```

show route summary

List of Syntax	Syntax on page 2467 Syntax (EX Series Switches) on page 2467
Syntax	<pre>show route summary <logical-system (all <i>logical-system-name</i>)> <table <i>routing-table-name</i>></pre>
Syntax (EX Series Switches)	<pre>show route summary</pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	<p>Display summary statistics about the entries in the routing table.</p> <p>CPU utilization might increase while the device learns routes. We recommend that you use the show route summary command after the device learns and enters the routes into the routing table. Depending on the size of your network, this might take several minutes. If you receive a “timeout communicating with routing daemon” error when using the show route summary command, wait several minutes before attempting to use the command again. This is not a critical system error, but you might experience a delay in using the command-line interface (CLI).</p>
Options	<p>none—Display summary statistics about the entries in the routing table.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>table <i>routing-table-name</i>—(Optional) Display summary statistics for all routing tables whose name begins with this string (for example, inet.0 and inet6.0 are both displayed when you run the show route summary table inet command). If you only want to display statistics for a specific routing table, make sure to enter the exact name of that routing table.</p>
Required Privilege Level	view
List of Sample Output	show route summary on page 2469 show route summary table on page 2470 show route summary table (with Route Limits Configured for the Routing Table) on page 2470
Output Fields	<p>Table 211 on page 2468 lists the output fields for the show route summary command. Output fields are listed in the approximate order in which they appear.</p>

Table 211: show route summary Output Fields

Field Name	Field Description
Router ID	Address of the local routing device.
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).
destinations	Number of destinations for which there are routes in the routing table.
routes	<p>Number of routes in the routing table:</p> <ul style="list-style-type: none"> active—Number of routes that are active. holddown—Number of routes that are in the hold-down state before being declared inactive. hidden—Number of routes that are not used because of routing policy.
Restart complete	<p>All protocols have restarted for this routing table.</p> <p>Restart state:</p> <ul style="list-style-type: none"> Pending:protocol-name—List of protocols that have not yet completed graceful restart for this routing table. Complete—All protocols have restarted for this routing table. <p>For example, if the output shows-</p> <div> <ul style="list-style-type: none"> LDP.inet.0: 5 routes (4 active, 1 holddown, 0 hidden) Restart Pending: OSPF LDP VPN <p>This indicates that OSPF, LDP, and VPN protocols did not restart for LDP.inet.0 routing table.</p> <ul style="list-style-type: none"> vp1s_1.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden) Restart Complete <p>This indicates that all protocols have restarted for vp1s_1.l2vpn.0 routing table.</p> </div>
Limit/Threshold	<p>Displays the configured route limits for the routing table set with the maximum-prefixes and the maximum-paths statements. If you do not configure route limits for the routing table, the show output does not display this information.</p> <ul style="list-style-type: none"> destinations—The first number represents the maximum number of route prefixes installed in the routing table. The second number represents the number of route prefixes that trigger a warning message. routes—The first number represents the maximum number of routes. The second number represents the number of routes that trigger a warning message.
Direct	Routes on the directly connected network.
Local	Local routes.

Table 211: show route summary Output Fields (continued)

Field Name	Field Description
<i>protocol-name</i>	Name of the protocol from which the route was learned. For example, OSPF, RSVP, and Static.

Sample Output

show route summary

```
user@host> show route summary
```

```
Autonomous system number: 69
Router ID: 10.255.71.52
Maximum-ECMP: 32
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
    Direct:    6 routes,    5 active
    Local:    4 routes,    4 active
    OSPF:     5 routes,    4 active
    Static:    7 routes,    7 active
    IGMP:     1 routes,    1 active
    PIM:      2 routes,    2 active

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
    RSVP:     2 routes,    2 active

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete
    Direct:    1 routes,    1 active

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete
    MPLS:     3 routes,    3 active
    VPLS:     4 routes,    2 active

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
Restart Complete
    Direct:    2 routes,    2 active
    PIM:      2 routes,    2 active
    MLD:      1 routes,    1 active

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
    BGP:      2 routes,    2 active
    L2VPN:    2 routes,    2 active

red.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Restart Complete
    BGP:      2 routes,    2 active
    L2VPN:    1 routes,    1 active

bgp.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
    BGP:      4 routes,    4 active
```

show route summary table

```
user@host> show route summary table inet
```

```
Router ID: 192.168.0.1
```

```
inet.0: 32 destinations, 34 routes (31 active, 0 holddown, 1 hidden)
```

Direct:	6 routes,	5 active
Local:	9 routes,	9 active
OSPF:	3 routes,	1 active
Static:	13 routes,	13 active
IGMP:	1 routes,	1 active
PIM:	2 routes,	2 active

```
inet.1: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

Multicast:	1 routes,	1 active
------------	-----------	----------

```
inet6.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
```

Local:	1 routes,	1 active
PIM:	2 routes,	2 active

```
inet6.1: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

Multicast:	1 routes,	1 active
------------	-----------	----------

show route summary table (with Route Limits Configured for the Routing Table)

```
user@host> show route summary table VPN-A.inet.0
```

```
Autonomous system number: 100
```

```
Router ID: 10.255.182.142
```

```
VPN-A.inet.0: 13 destinations, 14 routes (13 active, 0 holddown, 0 hidden)
```

```
Limit/Threshold: 2000/200 destinations 20/12 routes
```

Direct:	2 routes,	2 active
Local:	1 routes,	1 active
OSPF:	4 routes,	3 active
BGP:	4 routes,	4 active
IGMP:	1 routes,	1 active
PIM:	2 routes,	2 active

show route table

List of Syntax	Syntax on page 2471 Syntax (EX Series Switches, QFX Series Switches) on page 2471
Syntax	<pre>show route table <i>routing-table-name</i> <brief detail extensive terse> <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches, QFX Series Switches)	<pre>show route table <i>routing-table-name</i> <brief detail extensive terse></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 14.1X53-D15 for QFX Series switches.</p> <p>Show route table evpn statement introduced in Junos OS Release 15.1X53-D30 for QFX Series switches.</p>
Description	Display the route entries in a particular routing table.
Options	<p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><i>routing-table-name</i>—Display route entries for all routing tables whose names begin with this string (for example, inet.0 and inet6.0 are both displayed when you run the show route table inet command).</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show route summary on page 2467
List of Sample Output	show route table bgp.l2.vpn on page 2483 show route table bgp.l3vpn.0 on page 2483 show route table bgp.l3vpn.0 detail on page 2483 show route table bgp.rtarget.0 (When Proxy BGP Route Target Filtering Is Configured) on page 2485 show route table bgp.evpn.0 on page 2485 show route table evpna.evpn.0 on page 2486 show route table inet.0 on page 2486 show route table inet.3 on page 2486 show route table inet.3 protocol ospf on page 2486

[show route table inet6.0 on page 2487](#)
[show route table inet6.3 on page 2487](#)
[show route table inetflow detail on page 2487](#)
[show route table inetflow.0 extensive \(BGP Flowspec Redirect to IP\) on page 2488](#)
[show route table lsdist.0 extensive on page 2489](#)
[show route table l2circuit.0 on page 2491](#)
[show route table lsdist.0 on page 2491](#)
[show route table mpls on page 2492](#)
[show route table mpls extensive on page 2492](#)
[show route table mpls.0 on page 2492](#)
[show route table mpls.0 detail \(PTX Series\) on page 2493](#)
[show route table mpls.0 ccc ge-0/0/1.1004 detail on page 2494](#)
[show route table mpls.0 protocol evpn on page 2495](#)
[show route table mpls.0 protocol ospf on page 2501](#)
[show route table mpls.0 extensive \(PTX Series\) on page 2501](#)
[show route table mpls.0 \(RSVP Route—Transit LSP\) on page 2502](#)
[show route table vpls_1 detail on page 2502](#)
[show route table vpn-a on page 2503](#)
[show route table vpn-a.mdt.0 on page 2503](#)
[show route table VPN-A detail on page 2503](#)
[show route table VPN-AB.inet.0 on page 2504](#)
[show route table VPN_blue.mvpn-inet6.0 on page 2504](#)
[show route table vrf1.mvpn.0 extensive on page 2505](#)
[show route table inetflow detail on page 2505](#)
[show route table bgp.evpn.0 extensive |no-more \(EVPN\) on page 2508](#)
[show route table default-switch.evpn.0 extensive on page 2512](#)
[show route table evpn1.evpn-mcsn on page 2512](#)
[show route table evpn1 \(Multihomed Proxy MAC and IP Address\) on page 2512](#)

Output Fields [Table 193 on page 2258](#) describes the output fields for the **show route table** command. Output fields are listed in the approximate order in which they appear.

Table 212: show route table Output Fields

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).

Table 212: *show route table* Output Fields (continued)

Field Name	Field Description
Restart complete	<p>All protocols have restarted for this routing table.</p> <p>Restart state:</p> <ul style="list-style-type: none"> • Pending;protocol-name—List of protocols that have not yet completed graceful restart for this routing table. • Complete—All protocols have restarted for this routing table. <p>For example, if the output shows-</p> <pre> • LDP.inet.0 : 5 routes (4 active, 1 holddown, 0 hidden) Restart Pending: OSPF LDP VPN </pre> <p>This indicates that OSPF, LDP, and VPN protocols did not restart for the LDP.inet.0 routing table.</p> <pre> • vpls_1.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden) Restart Complete </pre> <p>This indicates that all protocols have restarted for the vpls_1.l2vpn.0 routing table.</p>
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.
<i>number routes</i>	<p>Number of routes in the routing table and total number of routes in the following states:</p> <ul style="list-style-type: none"> • active (routes that are active) • holddown (routes that are in the pending state before being declared inactive) • hidden (routes that are not used because of a routing policy)

Table 212: show route table Output Fields (continued)

Field Name	Field Description
<i>route-destination</i> (entry, announced)	<p>Route destination (for example:10.0.0.1/24). The entry value is the number of routes for this destination, and the announced value is the number of routes being announced for this destination. Sometimes the route destination is presented in another format, such as:</p> <ul style="list-style-type: none"> • MPLS-label (for example, 80001). • interface-name (for example, ge-1/0/2). • neighbor-address:control-word-status:encapsulation type:vc-id:source (Layer 2 circuit only; for example, 10.1.1.195:NoCtrlWord:1:1:Local/96). <ul style="list-style-type: none"> • neighbor-address—Address of the neighbor. • control-word-status—Whether the use of the control word has been negotiated for this virtual circuit: NoCtrlWord or CtrlWord. • encapsulation type—Type of encapsulation, represented by a number: (1) Frame Relay DLCI, (2) ATM AAL5 VCC transport, (3) ATM transparent cell transport, (4) Ethernet, (5) VLAN Ethernet, (6) HDLC, (7) PPP, (8) ATM VCC cell transport, (10) ATM VPC cell transport. • vc-id—Virtual circuit identifier. • source—Source of the advertisement: Local or Remote. • inclusive multicast Ethernet tag route—Type of route destination represented by (for example, 3:100.100.100.10:100::0::10::100.100.100.10/384): <ul style="list-style-type: none"> • route distinguisher—(8 octets) Route distinguisher (RD) must be the RD of the EVPN instance (EVI) that is advertising the NLRI. • Ethernet tag ID—(4 octets) Identifier of the Ethernet tag. Can set to 0 or to a valid Ethernet tag value. • IP address length—(1 octet) Length of IP address in bits. • originating router's IP address—(4 or 16 octets) Must set to the provider edge (PE) device's IP address. This address should be common for all EVIs on the PE device, and may be the PE device's loopback address.
label stacking	<p>(Next-to-the-last-hop routing device for MPLS only) Depth of the MPLS label stack, where the label-popping operation is needed to remove one or more labels from the top of the stack. A pair of routes is displayed, because the pop operation is performed only when the stack depth is two or more labels.</p> <ul style="list-style-type: none"> • S=0 route indicates that a packet with an incoming label stack depth of 2 or more exits this routing device with one fewer label (the label-popping operation is performed). • If there is no S= information, the route is a normal MPLS route, which has a stack depth of 1 (the label-popping operation is not performed).
[<i>protocol, preference</i>]	<p>Protocol from which the route was learned and the preference value for the route.</p> <ul style="list-style-type: none"> • +—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table. • -—A hyphen indicates the last active route. • *—An asterisk indicates that the route is both the active and the last active route. An asterisk before a to line indicates the best subpath to the route. <p>In every routing metric except for the BGP LocalPref attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the LocalPref value in the Preference2 field. For example, if the LocalPref value for Route 1 is 100, the Preference2 value is -101. If the LocalPref value for Route 2 is 155, the Preference2 value is -156. Route 2 is preferred because it has a higher LocalPref value and a lower Preference2 value.</p>

Table 212: show route table Output Fields (continued)

Field Name	Field Description
Level	(IS-IS only). In IS-IS, a single AS can be divided into smaller groups called areas. Routing between areas is organized hierarchically, allowing a domain to be administratively divided into smaller areas. This organization is accomplished by configuring Level 1 and Level 2 intermediate systems. Level 1 systems route within an area. When the destination is outside an area, they route toward a Level 2 system. Level 2 intermediate systems route between areas and toward other ASs.
Route Distinguisher	IP subnet augmented with a 64-bit prefix.
PMSI	Provider multicast service interface (MVPN routing table).
Next-hop type	Type of next hop. For a description of possible values for this field, see Table 197 on page 2316 .
Next-hop reference count	Number of references made to the next hop.
Flood nexthop branches exceed maximum message	Indicates that the number of flood next-hop branches exceeded the system limit of 32 branches, and only a subset of the flood next-hop branches were installed in the kernel.
Source	IP address of the route source.
Next hop	Network layer address of the directly reachable neighboring system.
via	Interface used to reach the next hop. If there is more than one interface available to the next hop, the name of the interface that is actually used is followed by the word Selected . This field can also contain the following information: <ul style="list-style-type: none"> • Weight—Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible. • Balance—Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a routing device is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.
Label-switched-path <i>lsp-path-name</i>	Name of the LSP used to reach the next hop.
Label operation	MPLS label and operation occurring at this routing device. The operation can be pop (where a label is removed from the top of the stack), push (where another label is added to the label stack), or swap (where a label is replaced by another label).
Interface	(Local only) Local interface name.
Protocol next hop	Network layer address of the remote routing device that advertised the prefix. This address is used to derive a forwarding next hop.
Indirect next hop	Index designation used to specify the mapping between protocol next hops, tags, kernel export policy, and the forwarding next hops.
State	State of the route (a route can be in more than one state). See Table 198 on page 2318 .

Table 212: show route table Output Fields (continued)

Field Name	Field Description
Local AS	AS number of the local routing devices.
Age	How long the route has been known.
AI GP	Accumulated interior gateway protocol (AI GP) BGP attribute.
Metric <i>n</i>	Cost value of the indicated route. For routes within an AS, the cost is determined by IGP and the individual protocol metrics. For external routes, destinations, or routing domains, the cost is determined by a preference value.
MED-plus-IGP	Metric value for BGP path selection to which the IGP cost to the next-hop destination has been added.
TTL-Action	For MPLS LSPs, state of the TTL propagation attribute. Can be enabled or disabled for all RSVP-signaled and LDP-signaled LSPs or for specific VRF routing instances.
Task	Name of the protocol that has added the route.
Announcement bits	<p>The number of BGP peers or protocols to which Junos OS has announced this route, followed by the list of the recipients of the announcement. Junos OS can also announce the route to the kernel routing table (KRT) for installing the route into the Packet Forwarding Engine, to a resolve tree, a Layer 2 VC, or even a VPN. For example, <i>n-Resolve inet</i> indicates that the specified route is used for route resolution for next hops found in the routing table.</p> <ul style="list-style-type: none"> <i>n</i>—An index used by Juniper Networks customer support only.
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> I—IGP. E—EGP. Recorded—The AS path is recorded by the sample process (sampled). ?—Incomplete; typically, the AS path was aggregated. <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> []—Brackets enclose the number that precedes the AS path. This number represents the number of ASs present in the AS path, when calculated as defined in RFC 4271. This value is used in the AS-path merge process, as defined in RFC 4893. []—If more than one AS number is configured on the routing device, or if AS path prepending is configured, brackets enclose the local AS number associated with the AS path. { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order. ()—Parentheses enclose a confederation. ([])—Parentheses and brackets enclose a confederation set. <p>NOTE: In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>

Table 212: show route table Output Fields (continued)

Field Name	Field Description
validation-state	<p>(BGP-learned routes) Validation status of the route:</p> <ul style="list-style-type: none"> • Invalid—Indicates that the prefix is found, but either the corresponding AS received from the EBGp peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database. • Unknown—Indicates that the prefix is not among the prefixes or prefix ranges in the database. • Unverified—Indicates that the origin of the prefix is not verified against the database. This is because the database got populated and the validation is not called for in the BGP import policy, although origin validation is enabled, or the origin validation is not enabled for the BGP peers. • Valid—Indicates that the prefix and autonomous system pair are found in the database.
FECs bound to route	Indicates point-to-multipoint root address, multicast source address, and multicast group address when multipoint LDP (M-LDP) inband signaling is configured.
Primary Upstream	When multipoint LDP with multicast-only fast reroute (MoFRR) is configured, indicates the primary upstream path. MoFRR transmits a multicast join message from a receiver toward a source on a primary path, while also transmitting a secondary multicast join message from the receiver toward the source on a backup path.
RPF Nexthops	When multipoint LDP with MoFRR is configured, indicates the reverse-path forwarding (RPF) next-hop information. Data packets are received from both the primary path and the secondary paths. The redundant packets are discarded at topology merge points due to the RPF checks.
Label	Multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.
weight	Value used to distinguish MoFRR primary and backup routes. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.
VC Label	MPLS label assigned to the Layer 2 circuit virtual connection.
MTU	Maximum transmission unit (MTU) of the Layer 2 circuit.
VLAN ID	VLAN identifier of the Layer 2 circuit.
Prefixes bound to route	Forwarding equivalent class (FEC) bound to this route. Applicable only to routes installed by LDP.
Communities	Community path attribute for the route. See Table 199 on page 2320 for all possible values for this field.
Layer2-info: encaps	Layer 2 encapsulation (for example, VPLS).
control flags	Control flags: none or Site Down .
mtu	Maximum transmission unit (MTU) information.
Label-Base, range	First label in a block of labels and label block size. A remote PE routing device uses this first label when sending traffic toward the advertising PE routing device.
status vector	Layer 2 VPN and VPLS network layer reachability information (NLRI).

Table 212: show route table Output Fields (continued)

Field Name	Field Description
Accepted Multipath	Current active path when BGP multipath is configured.
Accepted LongLivedStale	The LongLivedStale flag indicates that the route was marked LLGR-stale by this router, as part of the operation of LLGR receiver mode. Either this flag or the LongLivedStaleImport flag might be displayed for a route. Neither of these flags is displayed at the same time as the Stale (ordinary GR stale) flag.
Accepted LongLivedStaleImport	<p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy. Either this flag or the LongLivedStale flag might be displayed for a route. Neither of these flags is displayed at the same time as the Stale (ordinary GR stale) flag.</p> <p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and import into the inet.0 routing table</p>
ImportAccepted LongLivedStaleImport	<p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and imported into the inet.0 routing table</p> <p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy.</p>
Accepted MultipathContrib	Path currently contributing to BGP multipath.
Localpref	Local preference value included in the route.
Router ID	BGP router ID as advertised by the neighbor in the open message.
Primary Routing Table	In a routing table group, the name of the primary routing table in which the route resides.
Secondary Tables	In a routing table group, the name of one or more secondary tables in which the route resides.

[Table 197 on page 2316](#) describes all possible values for the Next-hop Types output field.

Table 213: Next-hop Types Output Field Values

Next-Hop Type	Description
Broadcast (bcast)	Broadcast next hop.
Deny	Deny next hop.
Discard	Discard next hop.
Flood	Flood next hop. Consists of components called branches, up to a maximum of 32 branches. Each flood next-hop branch sends a copy of the traffic to the forwarding interface. Used by point-to-multipoint RSVP, point-to-multipoint LDP, point-to-multipoint CCC, and multicast.

Table 213: Next-hop Types Output Field Values (continued)

Next-Hop Type	Description
Hold	Next hop is waiting to be resolved into a unicast or multicast type.
Indexed (idxd)	Indexed next hop.
Indirect (indr)	Used with applications that have a protocol next hop address that is remote. You are likely to see this next-hop type for internal BGP (IBGP) routes when the BGP next hop is a BGP neighbor that is not directly connected.
Interface	Used for a network address assigned to an interface. Unlike the router next hop, the interface next hop does not reference any specific node on the network.
Local (locl)	Local address on an interface. This next-hop type causes packets with this destination address to be received locally.
Multicast (mcst)	Wire multicast next hop (limited to the LAN).
Multicast discard (mdsc)	Multicast discard.
Multicast group (mgrp)	Multicast group member.
Receive (recv)	Receive.
Reject (rjct)	Discard. An ICMP unreachable message was sent.
Resolve (rslv)	Resolving next hop.
Routed multicast (mcrtr)	Regular multicast next hop.
Router	<p>A specific node or set of nodes to which the routing device forwards packets that match the route prefix.</p> <p>To qualify as a next-hop type router, the route must meet the following criteria:</p> <ul style="list-style-type: none"> • Must not be a direct or local subnet for the routing device. • Must have a next hop that is directly connected to the routing device.
Table	Routing table next hop.
Unicast (ucst)	Unicast.
Unilist (ulst)	List of unicast next hops. A packet sent to this next hop goes to any next hop in the list.

Table 198 on page 2318 describes all possible values for the State output field. A route can be in more than one state (for example, <Active NoReadvrt Int Ext>).

Table 214: State Output Field Values

Value	Description
Accounting	Route needs accounting.
Active	Route is active.
Always Compare MED	Path with a lower multiple exit discriminator (MED) is available.
AS path	Shorter AS path is available.
Cisco Non-deterministic MED selection	Cisco nondeterministic MED is enabled, and a path with a lower MED is available.
Clone	Route is a clone.
Cluster list length	Length of cluster list sent by the route reflector.
Delete	Route has been deleted.
Ex	Exterior route.
Ext	BGP route received from an external BGP neighbor.
FlashAll	Forces all protocols to be notified of a change to any route, active or inactive, for a prefix. When not set, protocols are informed of a prefix only when the active route changes.
Hidden	Route not used because of routing policy.
IfCheck	Route needs forwarding RPF check.
IGP metric	Path through next hop with lower IGP metric is available.
Inactive reason	Flags for this route, which was not selected as best for a particular destination.
Initial	Route being added.
Int	Interior route.
Int Ext	BGP route received from an internal BGP peer or a BGP confederation peer.
Interior > Exterior > Exterior via Interior	Direct, static, IGP, or EBGp path is available.

Table 214: State Output Field Values (continued)

Value	Description
Local Preference	Path with a higher local preference value is available.
Martian	Route is a martian (ignored because it is obviously invalid).
MartianOK	Route exempt from martian filtering.
Next hop address	Path with lower metric next hop is available.
No difference	Path from neighbor with lower IP address is available.
NoReadvrt	Route not to be advertised.
NotBest	Route not chosen because it does not have the lowest MED.
Not Best in its group	Incoming BGP AS is not the best of a group (only one AS can be the best).
NotInstall	Route not to be installed in the forwarding table.
Number of gateways	Path with a greater number of next hops is available.
Origin	Path with a lower origin code is available.
Pending	Route pending because of a hold-down configured on another route.
Release	Route scheduled for release.
RIB preference	Route from a higher-numbered routing table is available.
Route Distinguisher	64-bit prefix added to IP subnets to make them unique.
Route Metric or MED comparison	Route with a lower metric or MED is available.
Route Preference	Route with lower preference value is available.
Router ID	Path through a neighbor with lower ID is available.
Secondary	Route not a primary route.
Unusable path	Path is not usable because of one of the following conditions: <ul style="list-style-type: none"> • The route is damped. • The route is rejected by an import policy. • The route is unresolved.
Update source	Last tiebreaker is the lowest IP address value.

Table 199 on page 2320 describes the possible values for the Communities output field.

Table 215: Communities Output Field Values

Value	Description
<i>area-number</i>	4 bytes, encoding a 32-bit area number. For AS-external routes, the value is 0. A nonzero value identifies the route as internal to the OSPF domain, and as within the identified area. Area numbers are relative to a particular OSPF domain.
bandwidth: local AS number:link-bandwidth-number	Link-bandwidth community value used for unequal-cost load balancing. When BGP has several candidate paths available for multipath purposes, it does not perform unequal-cost load balancing according to the link-bandwidth community unless all candidate paths have this attribute.
domain-id	Unique configurable number that identifies the OSPF domain.
domain-id-vendor	Unique configurable number that further identifies the OSPF domain.
<i>link-bandwidth-number</i>	Link-bandwidth number: from 0 through 4,294,967,295 (bytes per second).
<i>local AS number</i>	Local AS number: from 1 through 65,535.
<i>options</i>	1 byte. Currently this is only used if the route type is 5 or 7. Setting the least significant bit in the field indicates that the route carries a type 2 metric.
origin	(Used with VPNs) Identifies where the route came from.
<i>ospf-route-type</i>	1 byte, encoded as 1 or 2 for intra-area routes (depending on whether the route came from a type 1 or a type 2 LSA); 3 for summary routes; 5 for external routes (area number must be 0); 7 for NSSA routes; or 129 for sham link endpoint addresses.
route-type-vendor	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute 0x8000. The format is area-number:ospf-route-type:options .
rte-type	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute 0x0306. The format is area-number:ospf-route-type:options .
target	Defines which VPN the route participates in; target has the format 32-bit IP address:16-bit number . For example, 10.19.0.0:100.
unknown IANA	Incoming IANA codes with a value between 0x1 and 0x7fff. This code of the BGP extended community attribute is accepted, but it is not recognized.
unknown OSPF vendor community	Incoming IANA codes with a value above 0x8000. This code of the BGP extended community attribute is accepted, but it is not recognized.
evpn-mcast-flags	Identifies the value in the multicast flags extended community and whether snooping is enabled. A value of 0x1 indicates that the route supports IGMP proxy.

Table 215: Communities Output Field Values (continued)

Value	Description
evpn-l2-info	Identifies whether Multihomed Proxy MAC and IP Address Route Advertisement is enabled. A value of 0x20 indicates that the proxy bit is set. . Use the show bridge mac-ip-table extensive statement to determine whether the MAC and IP address route was learned locally or from a PE device.

Sample Output

show route table bgp.l2.vpn

```
user@host> show route table bgp.l2.vpn

bgp.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.24.1:1:4:1/96
    *[BGP/170] 01:08:58, localpref 100, from 192.168.24.1
    AS path: I
    > to 10.0.16.2 via fe-0/0/1.0, label-switched-path am
```

show route table bgp.l3vpn.0

```
user@host> show route table bgp.l3vpn.0

bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.71.15:100:10.255.71.17/32
    *[BGP/170] 00:03:59, MED 1, localpref 100, from
10.255.71.15
    AS path: I
    > via so-2/1/0.0, Push 100020, Push 100011(top)
10.255.71.15:200:10.255.71.18/32
    *[BGP/170] 00:03:59, MED 1, localpref 100, from
10.255.71.15
    AS path: I
    > via so-2/1/0.0, Push 100021, Push 100011(top)
```

show route table bgp.l3vpn.0 detail

```
user@host> show route table bgp.l3vpn.0 detail

bgp.l3vpn.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)

10.255.245.12:1:172.16.4.0/8 (1 entry, 1 announced)
  *BGP Preference: 170/-101
  Route Distinguisher: 10.255.245.12:1
  Source: 10.255.245.12
  Next hop: 192.168.208.66 via fe-0/0/0.0, selected
  Label operation: Push 182449
  Protocol next hop: 10.255.245.12
  Push 182449
  Indirect next hop: 863a630 297
  State: <Active Int Ext>
```

```

Local AS: 35 Peer AS: 35
Age: 12:19 Metric2: 1
Task: BGP_35.10.255.245.12+179
Announcement bits (1): 0-BGP.0.0.0.0+179
AS path: 30 10458 14203 2914 3356 I (Atomic) Aggregator: 3356 4.68.0.11

Communities: 2914:420 target:11111:1 origin:56:78
VPN Label: 182449
Localpref: 100
Router ID: 10.255.245.12

10.255.245.12:1:4.17.225.0/24 (1 entry, 1 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.245.12:1
Source: 10.255.245.12
Next hop: 192.168.208.66 via fe-0/0/0.0, selected
Label operation: Push 182465
Protocol next hop: 10.255.245.12
Push 182465
Indirect next hop: 863a8f0 305
State: <Active Int Ext>
Local AS: 35 Peer AS: 35
Age: 12:19 Metric2: 1
Task: BGP_35.10.255.245.12+179
Announcement bits (1): 0-BGP.0.0.0.0+179
AS path: 30 10458 14203 2914 11853 11853 11853 6496 6496 6496 6496 6496 I
Communities: 2914:410 target:12:34 target:11111:1 origin:12:34
VPN Label: 182465
Localpref: 100
Router ID: 10.255.245.12

10.255.245.12:1:4.17.226.0/23 (1 entry, 1 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.245.12:1
Source: 10.255.245.12
Next hop: 192.168.208.66 via fe-0/0/0.0, selected
Label operation: Push 182465
Protocol next hop: 10.255.245.12
Push 182465
Indirect next hop: 86bd210 330
State: <Active Int Ext>
Local AS: 35 Peer AS: 35
Age: 12:19 Metric2: 1
Task: BGP_35.10.255.245.12+179
Announcement bits (1): 0-BGP.0.0.0.0+179
AS path: 30 10458 14203 2914 11853 11853 11853 6496 6496 6496 6496 6496
6496 I
Communities: 2914:410 target:12:34 target:11111:1 origin:12:34
VPN Label: 182465
Localpref: 100
Router ID: 10.255.245.12

10.255.245.12:1:4.17.251.0/24 (1 entry, 1 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.245.12:1
Source: 10.255.245.12
Next hop: 192.168.208.66 via fe-0/0/0.0, selected
Label operation: Push 182465
Protocol next hop: 10.255.245.12

```



```

Push 182465
Indirect next hop: 86bd210 330
State: <Active Int Ext>
Local AS: 35 Peer AS: 35
Age: 12:19 Metric2: 1
Task: BGP_35.10.255.245.12+179
Announcement bits (1): 0-BGP.0.0.0.0+179
AS path: 30 10458 14203 2914 11853 11853 11853 6496 6496 6496 6496 6496

6496 I
Communities: 2914:410 target:12:34 target:11111:1 origin:12:34
VPN Label: 182465
Localpref: 100

```

show route table bgp.rtarget.0 (When Proxy BGP Route Target Filtering Is Configured)

```

user@host> show route table bgp.rtarget.0

bgp.rtarget.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

100:100:100/96
    * [RTarget/5] 00:03:14
      Type Proxy
      for 10.255.165.103
      for 10.255.166.124
      Local

```

show route table bgp.evpn.0

```

user@host> show route table bgp.evpn.0

bgp.evpn.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2:100.100.100.2:100::0::00:26:88:5f:67:b0/304
    * [BGP/170] 11:00:05, localpref 100, from 100.100.100.2
      AS path: I, validation-state: unverified
      > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1
2:100.100.100.2:100::0::00:51:51:51:51:51/304
    * [BGP/170] 11:00:05, localpref 100, from 100.100.100.2
      AS path: I, validation-state: unverified
      > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1
2:100.100.100.3:100::0::00:52:52:52:52:52/304
    * [BGP/170] 10:59:58, localpref 100, from 100.100.100.3
      AS path: I, validation-state: unverified
      > to 100.64.13.3 via ge-2/0/8.0, label-switched-path R0toR2
2:100.100.100.3:100::0::a8:d0:e5:5b:01:c8/304
    * [BGP/170] 10:59:58, localpref 100, from 100.100.100.3
      AS path: I, validation-state: unverified
      > to 100.64.13.3 via ge-2/0/8.0, label-switched-path R0toR2
3:100.100.100.2:100::1000::100.100.100.2/304
    * [BGP/170] 11:00:16, localpref 100, from 100.100.100.2
      AS path: I, validation-state: unverified
      > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1
3:100.100.100.2:100::2000::100.100.100.2/304
    * [BGP/170] 11:00:16, localpref 100, from 100.100.100.2
      AS path: I, validation-state: unverified
      > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1

```

show route table evpna.evpn.0

```

user@host> show route table evpna.evpn.0

evpna.evpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

3:100.100.100.10:100::0::10::100.100.100.10/384
    *[EVPN/170] 01:37:09
    Indirect
3:100.100.100.2:100::2000::100.100.100.2/304
    *[EVPN/170] 01:37:12
    Indirect

```

show route table inet.0

```

user@host> show route table inet.0

inet.0: 12 destinations, 12 routes (11 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

0.0.0.0/0          *[Static/5] 00:51:57
                   > to 172.16.5.254 via fxp0.0
10.0.0.1/32        *[Direct/0] 00:51:58
                   > via at-5/3/0.0
10.0.0.2/32        *[Local/0] 00:51:58
                   Local
10.12.12.21/32     *[Local/0] 00:51:57
                   Reject
10.13.13.13/32     *[Direct/0] 00:51:58
                   > via t3-5/2/1.0
10.13.13.14/32     *[Local/0] 00:51:58
                   Local
10.13.13.21/32     *[Local/0] 00:51:58
                   Local
10.13.13.22/32     *[Direct/0] 00:33:59
                   > via t3-5/2/0.0
127.0.0.1/32       [Direct/0] 00:51:58
                   > via lo0.0
10.222.5.0/24      *[Direct/0] 00:51:58
                   > via fxp0.0
10.222.5.81/32     *[Local/0] 00:51:58
                   Local

```

show route table inet.3

```

user@host> show route table inet.3

inet.3: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.5/32        *[LDP/9] 00:25:43, metric 10, tag 200
                   to 10.2.94.2 via lt-1/2/0.49
                   > to 10.2.3.2 via lt-1/2/0.23

```

show route table inet.3 protocol ospf

```

user@host> show route table inet.3 protocol ospf

```

```
inet.3: 9 destinations, 18 routes (9 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.20/32      [L-OSPF/10] 1d 00:00:56, metric 2
> to 10.0.10.70 via lt-1/2/0.14, Push 800020
  to 10.0.6.60 via lt-1/2/0.12, Push 800020, Push 800030(top)
1.1.1.30/32      [L-OSPF/10] 1d 00:01:01, metric 3
> to 10.0.10.70 via lt-1/2/0.14, Push 800030
  to 10.0.6.60 via lt-1/2/0.12, Push 800030
1.1.1.40/32      [L-OSPF/10] 1d 00:01:01, metric 4
> to 10.0.10.70 via lt-1/2/0.14, Push 800040
  to 10.0.6.60 via lt-1/2/0.12, Push 800040
1.1.1.50/32      [L-OSPF/10] 1d 00:01:01, metric 5
> to 10.0.10.70 via lt-1/2/0.14, Push 800050
  to 10.0.6.60 via lt-1/2/0.12, Push 800050
1.1.1.60/32      [L-OSPF/10] 1d 00:01:01, metric 6
> to 10.0.10.70 via lt-1/2/0.14, Push 800060
  to 10.0.6.60 via lt-1/2/0.12, Pop
```

show route table inet6.0

```
user@host> show route table inet6.0

inet6.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Route, * = Both

fec0:0:0:3::/64 *[Direct/0] 00:01:34
>via fe-0/1/0.0

fec0:0:0:3::/128 *[Local/0] 00:01:34
>Local

fec0:0:0:4::/64 *[Static/5] 00:01:34
>to fec0:0:0:3::ffff via fe-0/1/0.0
```

show route table inet6.3

```
user@router> show route table inet6.3

inet6.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

::10.255.245.195/128
*[LDP/9] 00:00:22, metric 1
> via so-1/0/0.0
::10.255.245.196/128
*[LDP/9] 00:00:08, metric 1
> via so-1/0/0.0, Push 100008
```

show route table inetflow detail

```
user@host> show route table inetflow detail

inetflow.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.12.44.1,*/48 (1 entry, 1 announced)
  *BGP Preference: 170/-101
    Next-hop reference count: 2
    State: <Active Ext>
    Local AS: 64502 Peer AS: 64500
```

```

Age: 4
Task: BGP_64500.10.12.99.5+3792
Announcement bits (1): 0-Flow
AS path: 64500 I
Communities: traffic-rate:0:0
Validation state: Accept, Originator: 10.12.99.5
Via: 10.12.44.0/24, Active
Localpref: 100
Router ID: 10.255.71.161

10.12.56.1,*/48 (1 entry, 1 announced)
*Flow Preference: 5
Next-hop reference count: 2
State: <Active>
Local AS: 64502
Age: 6:30
Task: RT Flow
Announcement bits (2): 0-Flow 1-BGP.0.0.0.0+179
AS path: I
Communities: 1:1

```

show route table inetflow.0 extensive (BGP Flowspec Redirect to IP)

```

user@host> show route table inetflow.0 extensive

inetflow.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
2.2.2.2,*/term:1 (1 entry, 1 announced)
TSI:
KRT in dfwd;
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xb209500 (adv_entry)
Advertised metrics:
Nexthop: 21.1.4.5
Localpref: 100
AS path: [100] I
Communities: redirect-to-ip:21.1.4.5:0
Action(s): accept,count
*Flow Preference: 5
Next hop type: Indirect, Next hop index: 0
Address: 0xa2b931c
Next-hop reference count: 1Next hop:
State: <Active> L
ocal AS: 69
Age: 2
Validation State: unverified
Task: RT Flow
Announcement bits (1): 0-Flow
AS path: I
Communities: redirect-to-ip:21.1.4.5:0

```

```

user@host> show route table inetflow.) extensive

inetflow.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
2.2.2.2,*/term:1 (1 entry, 1 announced)
TSI:
KRT in dfwd;
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xb209500 (adv_entry)
Advertised metrics:
Nexthop: 21.1.4.5
Localpref: 100
AS path: [100] I

```

```

Communities: redirect-to-nexthop
Action(s): accept,count
*Flow Preference: 5
Next hop type: Indirect, Next hop index: 0
Address: 0xa2b931c
Next-hop reference count: 1
Next hop:
State: <Active>
Local AS: 69
Age: 2
Validation State: unverified
Task: RT Flow
Announcement bits (1): 0-Flow
AS path: I
Communities: redirect-to-nexthop
regress@10.102.178.210> show route table inetflow.0 extensive
inetflow.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
4.4.4.4,*/term:1 (1 entry, 1 announced)
TSI:
KRT in dfwd;
Action(s): accept,count
*BGP Preference: 170/-101
Next hop type: Fictitious, Next hop index: 0
Address: 0xc5e3c30
Next-hop reference count: 3
Next hop: 21.1.4.5
State: <Active Int Ext>
Local AS: 100 Peer AS: 100
Age: 10
Validation State: unverified
Task: BGP_100.1.1.1+179
Announcement bits (1): 0-Flow
AS path: I
Communities: redirect-to-nexthop
Accepted
Localpref: 100
Router ID: 1.1.1.1

```

show route table lsdist.0 extensive

```

user@host> show route table lsdist.0 extensive

lsdist.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
NODE { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 ISIS-L1:0 }/1152
(1 entry, 1 announced)
TSI:
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xa62f378 (adv_entry)
  Advertised metrics:
    Nexthop: Self
    Localpref: 100
    AS path: [4170512532] I
    Communities:
Path NODE { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 ISIS-L1:0 }
Vector len 4. Val: 0
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0x95dfc64
    Next-hop reference count: 9
    State: <Active NotInstall>

```

```

Local AS: 4170512532
Age: 6:05
Validation State: unverified
Task: IS-IS
Announcement bits (1): 0-BGP_RT_Background
AS path: I
IPv4 Router-ids:
    128.220.11.197
Area membership:
    47 00 05 80 ff f8 00 00 00 01 08 00 01
SPRING-Capabilities: - SRGB block [Start: 800000,
Range: 256, Flags: 0xc0]
SPRING-Algorithms:
    - Algo: 0
LINK { Local { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 }.{
IPv4:8.65.1.105 } Remote { AS:4170512532 BGP-LS ID:4170512532 ISO:4284.3300.5067)
TSI:
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xa62f3cc (adv_entry)
    Advertised metrics:
        Nexthop: Self
        Localpref: 100
        AS path: [4170512532] I
        Communities:
Path LINK { Local { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 }.{
IPv4:8.65.1.105 } Remote { AS:4170512532 BGP-LS ID:4170512532 ISO:4284.3300
    *IS-IS Preference: 15
        Level: 1
        Next hop type: Fictitious, Next hop index: 0
        Address: 0x95dfc64
        Next-hop reference count: 9
        State: <Active NotInstall>
        Local AS: 4170512532
        Age: 6:05
        Validation State: unverified
        Task: IS-IS
        Announcement bits (1): 0-BGP_RT_Background
        AS path: I
        Color: 32768
        Maximum bandwidth: 1000Mbps
        Reservable bandwidth: 1000Mbps
        Unreserved bandwidth by priority:
            0 1000Mbps
            1 1000Mbps
            2 1000Mbps
            3 1000Mbps
            4 1000Mbps
            5 1000Mbps
            6 1000Mbps
            7 1000Mbps
        Metric: 10
        TE Metric: 10
        LAN IPV4 Adj-SID - Label: 299776, Flags: 0x30,
Weight: 0, Nbr: 10.220.1.83

PREFIX { Node { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 } {
IPv4:128.220.11.197/32 } ISIS-L1:0 }/1152 (1 entry, 1 announced) TSI: Page 0 idx
0, (group ibgp type Internal) Type 1 val 0xa62f43c (adv_entry)
    Advertised metrics:
        Nexthop: Self
        Localpref: 100

```

```

AS path: [4170512532] I
Communities:
Path PREFIX { Node { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 }
{ IPv4:128.220.11.197/32 } ISIS-L1:0 } Vector len 4. Val: 0
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0x95dfc64
    Next-hop reference count: 9
    State:<Active NotInstall>
    Local AS: 4170512532
    Age: 6:05
    Validation State: unverified
    Task: IS-IS
    Announcement bits (1): 0-BGP_RT_Background
    AS path: I
    Prefix SID: 67, Flags: 0x40, Algo: 0

```

show route table l2circuit.0

```

user@host> show route table l2circuit.0

l2circuit.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.1.1.195:NoCtrlWord:1:1:Local/96
    * [L2CKT/7] 00:50:47
    > via so-0/1/2.0, Push 100049
    via so-0/1/3.0, Push 100049
10.1.1.195:NoCtrlWord:1:1:Remote/96
    * [LDP/9] 00:50:14
    Discard
10.1.1.195:CtrlWord:1:2:Local/96
    * [L2CKT/7] 00:50:47
    > via so-0/1/2.0, Push 100049
    via so-0/1/3.0, Push 100049
10.1.1.195:CtrlWord:1:2:Remote/96
    * [LDP/9] 00:50:14
    Discard

```

show route table lsdist.0

```

user@host> show route table lsdist.0

lsdist.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

LINK { Local { AS:4 BGP-LS ID:100 IPv4:4.4.4.4 }. { IPv4:4.4.4.4 } Remote { AS:4
BGP-LS ID:100 IPv4:7.7.7.7 }. { IPv4:7.7.7.7 } Undefined:0 }/1152
    * [BGP-LS-EPE/170] 00:20:56
    Fictitious
LINK { Local { AS:4 BGP-LS ID:100 IPv4:4.4.4.4 }. { IPv4:4.4.4.4 IfIndex:339 }
Remote { AS:4 BGP-LS ID:100 IPv4:7.7.7.7 }. { IPv4:7.7.7.7 } Undefined:0 }/1152
    * [BGP-LS-EPE/170] 00:20:56
    Fictitious
LINK { Local { AS:4 BGP-LS ID:100 IPv4:4.4.4.4 }. { IPv4:50.1.1.1 } Remote { AS:4
BGP-LS ID:100 IPv4:5.5.5.5 }. { IPv4:50.1.1.2 } Undefined:0 }/1152

```

```
*[BGP-LS-EPE/170] 00:20:56
Fictitious
```

show route table mpls

```
user@host> show route table mpls

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                *[MPLS/0] 00:13:55, metric 1
                  Receive
1                *[MPLS/0] 00:13:55, metric 1
                  Receive
2                *[MPLS/0] 00:13:55, metric 1
                  Receive
1024             *[VPN/0] 00:04:18
                  to table red.inet.0, Pop
```

show route table mpls extensive

```
user@host> show route table mpls extensive

100000 (1 entry, 1 announced)
TSI:
KRT in-kernel 100000 /36 -> {so-1/0/0.0}
    *LDP    Preference: 9
            Next hop: via so-1/0/0.0, selected
            Pop
            State: <Active Int>
            Age: 29:50      Metric: 1
            Task: LDP
            Announcement bits (1): 0-KRT
            AS path: I
            Prefixes bound to route: 10.0.0.194/32
```

show route table mpls.0

```
user@host> show route table mpls.0

mpls.0: 18 destinations, 19 routes (18 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                *[MPLS/0] 11:39:56, metric 1
                  to table inet.0
0(S=0)           *[MPLS/0] 11:39:56, metric 1
                  to table mpls.0
1                *[MPLS/0] 11:39:56, metric 1
                  Receive
2                *[MPLS/0] 11:39:56, metric 1
                  to table inet6.0
2(S=0)           *[MPLS/0] 11:39:56, metric 1
                  to table mpls.0
13              *[MPLS/0] 11:39:56, metric 1
                  Receive
303168           *[EVPN/7] 11:00:49, routing-instance pbbn10, route-type
Ingress-MAC, ISID 0
                  to table pbbn10.evpn-mac.0
303184           *[EVPN/7] 11:00:53, routing-instance pbbn10, route-type
```



```

Ingress-IM, ISID 1000
    to table pbbn10.evpn-mac.0
    [EVPN/7] 11:00:53, routing-instance pbbn10, route-type
Ingress-IM, ISID 2000
    to table pbbn10.evpn-mac.0
303264      *[EVPN/7] 11:00:53, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-IM, ISID 1000
    > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303280      *[EVPN/7] 11:00:53, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-IM, ISID 2000
    > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303328      *[EVPN/7] 11:00:49, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
    > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303344      *[EVPN/7] 11:00:49, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
    > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303360      *[EVPN/7] 11:00:47, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC 00:26:88:5f:67:b0
    > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303376      *[EVPN/7] 11:00:47, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC 00:51:51:51:51:51
    > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303392      *[EVPN/7] 11:00:35, remote-pe 100.100.100.3, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
    > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2
303408      *[EVPN/7] 11:00:35, remote-pe 100.100.100.3, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
    > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2
303424      *[EVPN/7] 11:00:33, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC a8:d0:e5:5b:01:c8
    > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2
303440      *[EVPN/7] 11:00:33, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC 00:52:52:52:52:52
    > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2

```

show route table mpls.0 detail (PTX Series)

```

user@host> show route table mpls.0 detail

ge-0/0/2.600 (1 entry, 1 announced)
  *L2VPN Preference: 7
    Next hop type: Indirect
    Address: 0x9438f34
    Next-hop reference count: 2
    Next hop type: Router, Next hop index: 567
    Next hop: 10.0.0.1 via ge-0/0/1.0, selected
    Label operation: Push 299808
    Label TTL action: prop-ttl
    Load balance label: Label 299808:None;
    Session Id: 0x1
    Protocol next hop: 10.255.255.1
    Label operation: Push 299872 Offset: 252
    Label TTL action: no-prop-ttl
    Load balance label: Label 299872:Flow label PUSH;
    Composite next hop: 0x9438ed8 570 INH Session ID: 0x2
    Indirect next hop: 0x9448208 262142 INH Session ID: 0x2
    State: <Active Int>
    Age: 21 Metric2: 1
    Validation State: unverified

```

```
Task: Common L2 VC
Announcement bits (2): 0-KRT 2-Common L2 VC
AS path: I
```

show route table mpls.0 ccc ge-0/0/1.1004 detail

```
user@host>show route table mpls.0 ccc ge-0/0/1.1004 detail

mpls.0: 121 destinations, 121 routes (121 active, 0 holddown, 0 hidden)
ge-0/0/1.1004 (1 entry, 1 announced)
  *EVPN    Preference: 7
    Next hop type: List, Next hop index: 1048577
    Address: 0xdc14770
    Next-hop reference count: 3
    Next hop: ELNH Address 0xd011e30
      Next hop type: Indirect, Next hop index: 0
      Address: 0xd011e30
      Next-hop reference count: 3
      Protocol next hop: 100.100.100.1
      Label operation: Push 301952
      Composite next hop: 0xd011dc0 754 INH Session ID: 0x146
      Indirect next hop: 0xb69a890 1048615 INH Session ID: 0x146
        Next hop type: Router, Next hop index: 735
        Address: 0xd00e530
        Next-hop reference count: 23
        Next hop: 100.46.1.2 via ge-0/0/5.0
        Label-switched-path pe4_to_pe1
        Label operation: Push 300320
        Label TTL action: prop-ttl
        Load balance label: Label 300320: None;
        Label element ptr: 0xd00e580
        Label parent element ptr: 0x0
        Label element references: 18
        Label element child references: 16
        Label element lsp id: 5
    Next hop: ELNH Address 0xd012070
      Next hop type: Indirect, Next hop index: 0
      Address: 0xd012070
      Next-hop reference count: 3
      Protocol next hop: 100.100.100.2
      Label operation: Push 301888
      Composite next hop: 0xd012000 755 INH Session ID: 0x143
      Indirect next hop: 0xb69a9a0 1048641 INH Session ID: 0x143
        Next hop type: Router, Next hop index: 716
        Address: 0xd00e710
        Next-hop reference count: 23
        Next hop: 100.46.1.2 via ge-0/0/5.0
        Label-switched-path pe4_to_pe2
        Label operation: Push 300304
        Label TTL action: prop-ttl
        Load balance label: Label 300304: None;
        Label element ptr: 0xd00e760
        Label parent element ptr: 0x0
        Label element references: 15
        Label element child references: 13
        Label element lsp id: 6
    Next hop: ELNH Address 0xd0121f0, selected
      Next hop type: Indirect, Next hop index: 0
      Address: 0xd0121f0
      Next-hop reference count: 3
```

```

Protocol next hop: 100.100.100.3
Label operation: Push 301984
Composite next hop: 0xd012180 756 INH Session ID: 0x145
Indirect next hop: 0xb69aab0 1048642 INH Session ID: 0x145
  Next hop type: Router, Next hop index: 801
  Address: 0xd010ed0
  Next-hop reference count: 32
  Next hop: 100.46.1.2 via ge-0/0/5.0
  Label-switched-path pe4_to_pe3
  Label operation: Push 300336
  Label TTL action: prop-ttl
  Load balance label: Label 300336: None;
  Label element ptr: 0xd0108c0
  Label parent element ptr: 0x0
  Label element references: 22
  Label element child references: 20
  Label element lsp id: 7
State: < Active Int >
Age: 2:06:50
Validation State: unverified
Task: evpn global task
Announcement bits (1): 1-KRT
AS path: I

```

show route table mpls.0 protocol evpn

```
user@host>show route table mpls.0 protocol evpn
```

```
mpls.0: 121 destinations, 121 routes (121 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```

299872          *[EVPN/7] 02:30:58, routing-instance mhevpn, route-type
Ingress-IM, vlan-id 10
                  to table mhevpn.evpn-mac.0
300016          *[EVPN/7] 02:30:38, routing-instance VS-1, route-type
Ingress-IM, vlan-id 110
                  to table VS-1.evpn-mac.0
300032          *[EVPN/7] 02:30:38, routing-instance VS-1, route-type
Ingress-IM, vlan-id 120
                  to table VS-1.evpn-mac.0
300048          *[EVPN/7] 02:30:38, routing-instance VS-1, route-type
Ingress-IM, vlan-id 130
                  to table VS-1.evpn-mac.0
300064          *[EVPN/7] 02:30:38, routing-instance VS-2, route-type
Ingress-IM, vlan-id 210
                  to table VS-2.evpn-mac.0
300080          *[EVPN/7] 02:30:38, routing-instance VS-2, route-type
Ingress-IM, vlan-id 220
                  to table VS-2.evpn-mac.0
300096          *[EVPN/7] 02:30:38, routing-instance VS-2, route-type
Ingress-IM, vlan-id 230
                  to table VS-2.evpn-mac.0
300112          *[EVPN/7] 02:27:06, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:44:44:44:44:44:44:44:44
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300128          *[EVPN/7] 02:29:22, routing-instance mhevpn, route-type
Ingress-Aliasing
                  to table mhevpn.evpn-mac.0
300144          *[EVPN/7] 02:27:06, routing-instance VS-1, route-type
Egress-MAC, ESI 00:44:44:44:44:44:44:44:44

```

```

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300160      *[EVPN/7] 02:29:22, routing-instance VS-1, route-type
Ingress-Aliasing
            to table VS-1.evpn-mac.0
300176      *[EVPN/7] 02:27:07, routing-instance VS-2, route-type
Egress-MAC, ESI 00:44:44:44:44:44:44:44
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300192      *[EVPN/7] 02:29:22, routing-instance VS-2, route-type
Ingress-Aliasing
            to table VS-2.evpn-mac.0
300208      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-IM, vlan-id 120
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300224      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
mhevpn, route-type Egress-IM, vlan-id 10
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300240      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-IM, vlan-id 110
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300256      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-IM, vlan-id 130
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300272      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-IM, vlan-id 210
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300288      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-IM, vlan-id 220
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300304      *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-IM, vlan-id 230
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300320      *[EVPN/7] 02:27:06, routing-instance VS-1, route-type
Egress-MAC, ESI 00:11:11:11:11:11:11:11
            to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
            to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300336      *[EVPN/7] 02:27:06, routing-instance VS-1, route-type
Egress-MAC, ESI 00:33:33:33:33:33:33:33
            to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300368      *[EVPN/7] 02:27:07, routing-instance VS-2, route-type
Egress-MAC, ESI 00:33:33:33:33:33:33:33
            to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300384      *[EVPN/7] 02:27:07, routing-instance VS-2, route-type
Egress-MAC, ESI 00:11:11:11:11:11:11:11
            to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
            to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300416      *[EVPN/7] 02:27:06, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:33:33:33:33:33:33:33
            > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
            to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

```

```

300432          *[EVPN/7] 02:27:06, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:11:11:11:11:11:11:11:11
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
    to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
    to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300480          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300496          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300560          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300592          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300608          *[EVPN/7] 02:29:23
> via ge-0/0/1.1001, Pop
300624          *[EVPN/7] 02:29:23
> via ge-0/0/1.2001, Pop
301232          *[EVPN/7] 02:29:17
> via ge-0/0/1.1002, Pop
301296          *[EVPN/7] 02:29:10
> via ge-0/0/1.1003, Pop
301312          *[EVPN/7] 02:27:06
> via ae10.2003, Pop
    to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301360          *[EVPN/7] 02:29:01
> via ge-0/0/1.1004, Pop
301408          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
vpws1004, route-type Egress, vlan-id 2004
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301456          *[EVPN/7] 02:27:06
> via ae10.1010, Pop
    to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301552          *[EVPN/7] 02:27:07, routing-instance VS-1, route-type
Egress-MAC, ESI 00:22:22:22:22:22:22:22:22
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301568          *[EVPN/7] 02:27:07, routing-instance VS-2, route-type
Egress-MAC, ESI 00:22:22:22:22:22:22:22:22
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301648          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
vpws1010, route-type Egress, vlan-id 2010
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301664          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301680          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301696          *[EVPN/7] 02:27:07, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:22:22:22:22:22:22:22:22
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301712          *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301728          *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance

```

```

VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301744      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-IM, vlan-id 230
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301760      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
vpws1010, route-type Egress, vlan-id 2010
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301776      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301792      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-IM, vlan-id 130
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301808      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
vpws1004, route-type Egress, vlan-id 2004
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301824      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-IM, vlan-id 10
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301840      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1002, route-type Egress, vlan-id 2002
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301856      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1003, route-type Egress, vlan-id 2003
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301872      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1003, route-type Egress Protection, vlan-id 2003
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301888      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1010, route-type Egress Protection, vlan-id 1010
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301904      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-IM, vlan-id 220
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301920      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-IM, vlan-id 210
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301936      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-IM, vlan-id 230
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301952      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-SH, vlan-id 230
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301968      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-IM, vlan-id 220
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301984      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-SH, vlan-id 220
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302000      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-IM, vlan-id 210
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302016      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-SH, vlan-id 210
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302032      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302048      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance

```

```

VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302064 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302080 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302096 * [EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302112 * [EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302128 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302144 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302160 * [EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-IM, vlan-id 120
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302176 * [EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-IM, vlan-id 110
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302192 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-IM, vlan-id 130
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302208 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-SH, vlan-id 130
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302224 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-IM, vlan-id 120
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302240 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-SH, vlan-id 120
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302256 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-IM, vlan-id 110
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302272 * [EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-SH, vlan-id 110
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302288 * [EVPN/7] 02:27:06, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302304 * [EVPN/7] 02:27:06, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302320 * [EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302336 * [EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302352 * [EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
vpws1004, route-type Egress, vlan-id 2004
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302368 * [EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance

```

```

mhevpn, route-type Egress-IM, vlan-id 10
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302384      *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-SH, vlan-id 10
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302400      *[EVPN/7] 02:26:21
> via ge-0/0/1.3001, Pop
302432      *[EVPN/7] 02:26:21, remote-pe 100.100.100.3, routing-instance
vpws3001, route-type Egress, vlan-id 40000
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302448      *[EVPN/7] 02:26:21, remote-pe 100.100.100.1, routing-instance
vpws3001, route-type Egress, vlan-id 40000
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302464      *[EVPN/7] 02:26:20, remote-pe 100.100.100.2, routing-instance
vpws3001, route-type Egress, vlan-id 40000
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302480      *[EVPN/7] 02:26:14
> via ge-0/0/1.3016, Pop
302512      *[EVPN/7] 02:26:14, remote-pe 100.100.100.1, routing-instance
vpws3016, route-type Egress, vlan-id 40016
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302528      *[EVPN/7] 02:26:14, remote-pe 100.100.100.2, routing-instance
vpws3016, route-type Egress, vlan-id 40016
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302560      *[EVPN/7] 02:26:06
> via ae10.3011, Pop
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302592      *[EVPN/7] 02:26:07, remote-pe 100.100.100.1, routing-instance
vpws3011, route-type Egress, vlan-id 401100
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302608      *[EVPN/7] 02:26:07, remote-pe 100.100.100.2, routing-instance
vpws3011, route-type Egress, vlan-id 401100
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302624      *[EVPN/7] 02:26:07, remote-pe 100.100.100.3, routing-instance
vpws3011, route-type Egress Protection, vlan-id 301100
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302656      *[EVPN/7] 02:25:59
> via ae10.3006, Pop
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302688      *[EVPN/7] 02:26:00, remote-pe 100.100.100.2, routing-instance
vpws3006, route-type Egress, vlan-id 400600
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302704      *[EVPN/7] 02:26:00, remote-pe 100.100.100.1, routing-instance
vpws3006, route-type Egress, vlan-id 400600
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302720      *[EVPN/7] 02:25:59, remote-pe 100.100.100.3, routing-instance
vpws3006, route-type Egress, vlan-id 400600
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302736      *[EVPN/7] 02:25:59, remote-pe 100.100.100.3, routing-instance
vpws3006, route-type Egress Protection, vlan-id 300600
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ge-0/0/1.1001      *[EVPN/7] 02:29:23
> via ge-0/0/1.2001
ge-0/0/1.2001      *[EVPN/7] 02:29:23
> via ge-0/0/1.1001
ge-0/0/1.1002      *[EVPN/7] 02:27:06
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ae10.2003          *[EVPN/7] 02:29:10
> via ge-0/0/1.1003
ge-0/0/1.1003      *[EVPN/7] 02:27:06

```



```

                                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ge-0/0/1.1004                > via ae10.2003
                             *[EVPN/7] 02:27:06
                                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
                                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
ae10.1010                    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
                             *[EVPN/7] 02:27:06
ge-0/0/1.3001                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
                             *[EVPN/7] 02:26:20
                                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
                                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
ge-0/0/1.3016                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
                             *[EVPN/7] 02:26:13
ae10.3011                    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
                             *[EVPN/7] 02:26:06
ae10.3006                    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
                             *[EVPN/7] 02:25:59
                                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
                                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
                                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3

```

show route table mpls.0 protocol ospf

```

user@host> show route table mpls.0 protocol ospf

mpls.0: 29 destinations, 29 routes (29 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

299952                *[L-OSPF/10] 23:59:42, metric 0
                      > to 10.0.10.70 via lt-1/2/0.14, Pop
                        to 10.0.6.60 via lt-1/2/0.12, Swap 800070, Push 800030(top)
299952(S=0)           *[L-OSPF/10] 23:59:42, metric 0
                      > to 10.0.10.70 via lt-1/2/0.14, Pop
                        to 10.0.6.60 via lt-1/2/0.12, Swap 800070, Push 800030(top)
299968                *[L-OSPF/10] 23:59:48, metric 0
                      > to 10.0.6.60 via lt-1/2/0.12, Pop

```

show route table mpls.0 extensive (PTX Series)

```

user@host> show route table mpls.0 extensive

ge-0/0/2.600 (1 entry, 1 announced)
TSI:
KRT in-kernel ge-0/0/2.600.0      /32 -> {composite(570)}
    *L2VPN Preference: 7
      Next hop type: Indirect
      Address: 0x9438f34
      Next-hop reference count: 2
      Next hop type: Router, Next hop index: 567
      Next hop: 10.0.0.1 via ge-0/0/1.0, selected
      Label operation: Push 299808
      Label TTL action: prop-ttl

```

```

Load balance label: Label 299808:None;
Session Id: 0x1
Protocol next hop: 10.255.255.1
Label operation: Push 299872 Offset: 252
Label TTL action: no-prop-ttl
Load balance label: Label 299872:Flow label PUSH;
Composite next hop: 0x9438ed8 570 INH Session ID: 0x2
Indirect next hop: 0x9448208 262142 INH Session ID: 0x2
State: <Active Int>
Age: 47          Metric2: 1
Validation State: unverified
Task: Common L2 VC
Announcement bits (2): 0-KRT 2-Common L2 VC
AS path: I
Composite next hops: 1
  Protocol next hop: 10.255.255.1 Metric: 1
  Label operation: Push 299872 Offset: 252
  Label TTL action: no-prop-ttl
  Load balance label: Label 299872:Flow label PUSH;
  Composite next hop: 0x9438ed8 570 INH Session ID: 0x2
  Indirect next hop: 0x9448208 262142 INH Session ID: 0x2
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.0.0.1 via ge-0/0/1.0
    Session Id: 0x1
  10.255.255.1/32 Originating RIB: inet.3
    Metric: 1          Node path count: 1
    Forwarding nexthops: 1
      Nexthop: 10.0.0.1 via ge-0/0/1.0

```

show route table mpls.0 (RSVP Route—Transit LSP)

```
user@host> show route table mpls.0
```

```

mpls.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 00:37:31, metric 1
           Receive
1          *[MPLS/0] 00:37:31, metric 1
           Receive
2          *[MPLS/0] 00:37:31, metric 1
           Receive
13         *[MPLS/0] 00:37:31, metric 1
           Receive
300352     *[RSVP/7/1] 00:08:00, metric 1
           > to 10.64.0.106 via ge-1/0/1.0, label-switched-path lsp1_p2p
300352(S=0) *[RSVP/7/1] 00:08:00, metric 1
           > to 10.64.0.106 via ge-1/0/1.0, label-switched-path lsp1_p2p
300384     *[RSVP/7/2] 00:05:20, metric 1
           > to 10.64.1.106 via ge-1/0/0.0, Pop
300384(S=0) *[RSVP/7/2] 00:05:20, metric 1
           > to 10.64.1.106 via ge-1/0/0.0, Pop

```

show route table vpls_1 detail

```
user@host> show route table vpls_1 detail
```

```

vpls_1.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

172.16.1.11:1000:1:1/96 (1 entry, 1 announced)
*L2VPN Preference: 170/-1
Receive table: vpls_1.l2vpn.0
Next-hop reference count: 2
State: <Active Int Ext>
Age: 4:29:47 Metric2: 1
Task: vpls_1-l2vpn
Announcement bits (1): 1-BGP.0.0.0.0+179
AS path: I
Communities: Layer2-info: encaps:VPLS, control flags:Site-Down
Label-base: 800000, range: 8, status-vector: 0xFF

```

show route table vpn-a

```

user@host> show route table vpn-a

vpn-a.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

+ = Active Route, - = Last Active, * = Both
192.168.16.1:1:1:1/96
    *[VPN/7] 05:48:27
    Discard
192.168.24.1:1:2:1/96
    *[BGP/170] 00:02:53, localpref 100, from 192.168.24.1
    AS path: I
    > to 10.0.16.2 via fe-0/0/1.0, label-switched-path am
192.168.24.1:1:3:1/96
    *[BGP/170] 00:02:53, localpref 100, from 192.168.24.1
    AS path: I
    > to 10.0.16.2 via fe-0/0/1.0, label-switched-path am

```

show route table vpn-a.mdt.0

```

user@host> show route table vpn-a.mdt.0

vpn-a.mdt.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1:1:0:10.255.14.216:232.1.1.1/144
    *[MVPN/70] 01:23:05, metric2 1
    Indirect
1:1:1:10.255.14.218:232.1.1.1/144
    *[BGP/170] 00:57:49, localpref 100, from 10.255.14.218
    AS path: I
    > via so-0/0/0.0, label-switched-path r0e-to-r1
1:1:2:10.255.14.217:232.1.1.1/144
    *[BGP/170] 00:57:49, localpref 100, from 10.255.14.217
    AS path: I
    > via so-0/0/1.0, label-switched-path r0-to-r2

```

show route table VPN-A detail

```

user@host> show route table VPN-A detail

VPN-AB.inet.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
10.255.179.9/32 (1 entry, 1 announced)

```

```

*BGP      Preference: 170/-101
          Route Distinguisher: 10.255.179.13:200
          Next hop type: Indirect
          Next-hop reference count: 5
          Source: 10.255.179.13
          Next hop type: Router, Next hop index: 732
          Next hop: 10.39.1.14 via fe-0/3/0.0, selected
          Label operation: Push 299824, Push 299824(top)
          Protocol next hop: 10.255.179.13
          Push 299824
          Indirect next hop: 8f275a0 1048574
          State: (Secondary Active Int Ext)
          Local AS: 1 Peer AS: 1
          Age: 3:41:06 Metric: 1 Metric2: 1
          Task: BGP_1.10.255.179.13+64309
          Announcement bits (2): 0-KRT 1-BGP RT Background
          AS path: I
          Communities: target:1:200 rte-type:0.0.0.0:1:0
          Import Accepted
          VPN Label: 299824 TTL Action: vrf-ttl-propagate
          Localpref: 100
          Router ID: 10.255.179.13
          Primary Routing Table bgp.13vpn.0

```

show route table VPN-AB.inet.0

```
user@host> show route table VPN-AB.inet.0
```

```

VPN-AB.inet.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.39.1.0/30      *[OSPF/10] 00:07:24, metric 1
                  > via so-7/3/1.0
10.39.1.4/30      *[Direct/0] 00:08:42
                  > via so-5/1/0.0
10.39.1.6/32      *[Local/0] 00:08:46
                  Local
10.255.71.16/32   *[Static/5] 00:07:24
                  > via so-2/0/0.0
10.255.71.17/32   *[BGP/170] 00:07:24, MED 1, localpref 100, from
10.255.71.15
                  AS path: I
                  > via so-2/1/0.0, Push 100020, Push 100011(top)
10.255.71.18/32   *[BGP/170] 00:07:24, MED 1, localpref 100, from
10.255.71.15
                  AS path: I
                  > via so-2/1/0.0, Push 100021, Push 100011(top)
10.255.245.245/32 *[BGP/170] 00:08:35, localpref 100
                  AS path: 2 I
                  > to 10.39.1.5 via so-5/1/0.0
10.255.245.246/32 *[OSPF/10] 00:07:24, metric 1
                  > via so-7/3/1.0

```

show route table VPN_blue.mvpn-inet6.0

```
user@host> show route table VPN_blue.mvpn-inet6.0
```

```

vpn_blue.mvpn-inet6.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

```

```

1:10.255.2.202:65536:10.255.2.202/432
    *[BGP/170] 00:02:37, localpref 100, from 10.255.2.202
    AS path: I
    > via so-0/1/3.0
1:10.255.2.203:65536:10.255.2.203/432
    *[BGP/170] 00:02:37, localpref 100, from 10.255.2.203
    AS path: I
    > via so-0/1/0.0
1:10.255.2.204:65536:10.255.2.204/432
    *[MVPN/70] 00:57:23, metric2 1
    Indirect
5:10.255.2.202:65536:128::192.168.90.2:128:ffff::1/432
    *[BGP/170] 00:02:37, localpref 100, from 10.255.2.202
    AS path: I
    > via so-0/1/3.0
6:10.255.2.203:65536:64500:128::10.12.53.12:128:ffff::1/432
    *[PIM/105] 00:02:37
    Multicast (IPv6)
7:10.255.2.202:65536:64500:128::192.168.90.2:128:ffff::1/432
    *[MVPN/70] 00:02:37, metric2 1
    Indirect

```

show route table vrf1.mvpn.0 extensive

```

user@host> show route table vrf1.mvpn.0 extensive

1:10.255.50.77:1:10.255.50.77/240 (1 entry, 1 announced)
    *MVPN    Preference: 70
    PMSI: Flags 0x0: Label 0: RSVP-TE:
Session_13[10.255.50.77:0:25624:10.255.50.77]
    Next hop type: Indirect
    Address: 0xbb2c944
    Next-hop reference count: 360
    Protocol next hop: 10.255.50.77
    Indirect next hop: 0x0 - INH Session ID: 0x0
    State: <Active Int Ext>
    Age: 53:03      Metric2: 1
    Validation State: unverified
    Task: mvpn global task
    Announcement bits (3): 0-PIM.vrf1 1-mvpn global task 2-rt-export

    AS path: I

```

show route table inetflow detail

```

user@host> show route table inetflow detail

inetflow.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.12.44.1,*/48 (1 entry, 1 announced)
    *BGP    Preference: 170/-101
    Next-hop reference count: 2
    State: <Active Ext>
    Local AS: 64502 Peer AS: 64500
    Age: 4
    Task: BGP_64500.10.12.99.5+3792
    Announcement bits (1): 0-Flow
    AS path: 64500 I
    Communities: traffic-rate:0:0

```

```

Validation state: Accept, Originator: 10.12.99.5
Via: 10.12.44.0/24, Active
Localpref: 100
Router ID: 10.255.71.161

10.12.56.1,*/48 (1 entry, 1 announced)
  *Flow Preference: 5
    Next-hop reference count: 2
    State: <Active>
    Local AS: 64502
    Age: 6:30
    Task: RT Flow
    Announcement bits (2): 0-Flow 1-BGP.0.0.0.0+179
    AS path: I
    Communities: 1:1

```

```
user@host> show route table green.l2vpn.0 (VPLS Multihoming with FEC 129)
```

```
green.l2vpn.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```

10.1.1.2:100:10.1.1.2/96 AD
    *[VPLS/170] 1d 03:11:03, metric2 1
    Indirect
10.1.1.4:100:10.1.1.4/96 AD
    *[BGP/170] 1d 03:11:02, localpref 100, from 10.1.1.4
    AS path: I, validation-state: unverified
    > via ge-1/2/1.5
10.1.1.2:100:1:0/96 MH
    *[VPLS/170] 1d 03:11:03, metric2 1
    Indirect
10.1.1.4:100:1:0/96 MH
    *[BGP/170] 1d 03:11:02, localpref 100, from 10.1.1.4
    AS path: I, validation-state: unverified
    > via ge-1/2/1.5
10.1.1.4:NoCtrlWord:5:100:100:10.1.1.2:10.1.1.4/176
    *[VPLS/7] 1d 03:11:02, metric2 1
    > via ge-1/2/1.5
10.1.1.4:NoCtrlWord:5:100:100:10.1.1.4:10.1.1.2/176
    *[LDP/9] 1d 03:11:02
    Discard

```

```
user@host> show route table red extensive
```

```
red.inet.0: 364481 destinations, 714087 routes (364480 active, 48448 holddown, 1 hidden)
```

```
10.0.0.0/32 (3 entries, 1 announced)
  State: <OnList CalcForwarding>
```

```
TSI:
```

```
KRT in-kernel 10.0.0.0/32 -> {composite(1048575)} Page 0 idx 1 Type 1 val 0x934342c
```

```

  Nexthop: Self
  AS path: [2] I
  Communities: target:2:1
Path 10.0.0.0 from 10.3.0.0 Vector len 4. Val: 1
  @BGP Preference: 170/-1
    Route Distinguisher: 2:1
    Next hop type: Indirect
    Address: 0x258059e4

```

```

Next-hop reference count: 2
Source: 2.2.0.0
Next hop type: Router
Next hop: 10.1.1.1 via ge-1/1/9.0, selected
Label operation: Push 707633
Label TTL action: prop-ttl
Session Id: 0x17d8
Protocol next hop: 10.2.0.0
Push 16
Composite next hop: 0x25805988 - INH Session ID: 0x193c
Indirect next hop: 0x23eea900 - INH Session ID: 0x193c
State: <Secondary Active Int Ext ProtectionPath ProtectionCand>
Local AS: 2 Peer AS: 2
Age: 23 Metric2: 35
Validation State: unverified
Task: BGP_172.16.2.0.0+34549
AS path: I
Communities: target:2:1
Import Accepted
VPN Label: 16
Localpref: 0
Router ID: 10.2.0.0
Primary Routing Table bgp.l3vpn.0
Composite next hops: 1
  Protocol next hop: 10.2.0.0 Metric: 35
  Push 16
  Composite next hop: 0x25805988 - INH Session ID: 0x193c
  Indirect next hop: 0x23eea900 - INH Session ID: 0x193c
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.1.1.1 via ge-1/1/9.0
    Session Id: 0x17d8
  2.2.0.0/32 Originating RIB: inet.3
    Metric: 35 Node path count: 1
    Forwarding nexthops: 1
      Nexthop: 10.1.1.1 via ge-1/1/9.0
BCP Preference: 170/-1
Route Distinguisher: 2:1
Next hop type: Indirect
Address: 0x9347028
Next-hop reference count: 3
Source: 10.3.0.0
Next hop type: Router, Next hop index: 702
Next hop: 10.1.4.2 via ge-1/0/0.0, selected
Label operation: Push 634278
Label TTL action: prop-ttl
Session Id: 0x17d9
Protocol next hop: 10.3.0.0
Push 16
Composite next hop: 0x93463a0 1048575 INH Session ID: 0x17da
Indirect next hop: 0x91e8800 1048574 INH Session ID: 0x17da
State: <Secondary NotBest Int Ext ProtectionPath ProtectionCand>

Inactive reason: Not Best in its group - IGP metric
Local AS: 2 Peer AS: 2
Age: 3:34 Metric2: 70
Validation State: unverified
Task: BGP_172.16.3.0.0+32805
Announcement bits (2): 0-KRT 1-BGP_RT_Background
AS path: I

```

```

Communities: target:2:1
Import Accepted
VPN Label: 16
Localpref: 0
Router ID: 10.3.0.0
Primary Routing Table bgp.l3vpn.0
Composite next hops: 1
    Protocol next hop: 10.3.0.0 Metric: 70
    Push 16
    Composite next hop: 0x93463a0 1048575 INH Session ID:
0x17da
    Indirect next hop: 0x91e8800 1048574 INH Session ID:
0x17da
    Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.1.4.2 via ge-1/0/0.0
        Session Id: 0x17d9
    10.3.0.0/32 Originating RIB: inet.3
    Metric: 70 Node path count: 1
    Forwarding nexthops: 1
        Nexthop: 10.1.4.2 via ge-1/0/0.0
#Multipath Preference: 255
    Next hop type: Indirect
    Address: 0x24afca30
    Next-hop reference count: 1
    Next hop type: Router
    Next hop: 10.1.1.1 via ge-1/1/9.0, selected
    Label operation: Push 707633
    Label TTL action: prop-ttl
    Session Id: 0x17d8
    Next hop type: Router, Next hop index: 702
    Next hop: 10.1.4.2 via ge-1/0/0.0
    Label operation: Push 634278
    Label TTL action: prop-ttl
    Session Id: 0x17d9
    Protocol next hop: 10.2.0.0
    Push 16
    Composite next hop: 0x25805988 - INH Session ID: 0x193c
    Indirect next hop: 0x23eea900 - INH Session ID: 0x193c Weight 0x1

    Protocol next hop: 10.3.0.0
    Push 16
    Composite next hop: 0x93463a0 1048575 INH Session ID: 0x17da
    Indirect next hop: 0x91e8800 1048574 INH Session ID: 0x17da Weight
0x4000
    State: <ForwardingOnly Int Ext>
    Inactive reason: Forwarding use only
    Age: 23 Metric2: 35
    Validation State: unverified
    Task: RT
    AS path: I
    Communities: target:2:1

```

show route table bgp.evpn.0 extensive [no-more (EVPN)]

```

show route table bgp.evpn.0 extensive | no-more

bgp.evpn.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
2:1000:10::100::00:aa:aa:aa:aa/304 (1 entry, 0 announced)
    *BGP Preference: 170/-101

```



```

Route Distinguisher: 1000:10
Next hop type: Indirect
Address: 0x9420fd0
Next-hop reference count: 12
Source: 10.2.3.4
Protocol next hop: 10.2.3.4
Indirect next hop: 0x2 no-forward INH Session ID: 0x0
State: Local AS: 17 Peer AS:17 Age:21:12 Metric2:1 Validation State:
unverified
Task: BGP_17.1.2.3.4+50756
AS path: I
Communities: target:1111:8388708 encapsulation0:0:0:0:3
Import Accepted
Route Label: 100
ESI: 00:00:00:00:00:00:00:00:00:00:00:00
Localpref: 100
Router ID: 10.2.3.4
Secondary Tables: default-switch.evpn.0
Indirect next hops: 1
  Protocol next hop: 10.2.3.4 Metric: 1
  Indirect next hop: 0x2 no-forward INH Session ID: 0x0
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.1 via xe-0/0/1.0
    Session Id: 0x2
  1.2.3.4/32 Originating RIB: inet.0
    Metric: 1 Node path count: 1
    Forwarding nexthops: 2
    Nexthop: 10.92.78.102 via em0.0

2:1000:10::200::00:bb:bb:bb:bb:bb/304 (1 entry, 0 announced)
*BGP Preference: 170/-101
Route Distinguisher: 1000:10
Next hop type: Indirect
Address: 0x9420fd0
Next-hop reference count: 12
Source: 10.2.3.4
Protocol next hop: 10.2.3.4
Indirect next hop: 0x2 no-forward INH Session ID: 0x0
State: Local AS:17 Peer AS:17 Age:19:43 Metric2:1 Validation
State:unverified
Task: BGP_17.1.2.3.4+50756
AS path: I
Communities: target:2222:22 encapsulation0:0:0:0:3
Import Accepted
Route Label: 200
ESI: 00:00:00:00:00:00:00:00:00:00:00:00
Localpref: 100
Router ID: 10.2.3.4
Secondary Tables: default-switch.evpn.0
Indirect next hops: 1
  Protocol next hop: 10.2.3.4 Metric: 1
  Indirect next hop: 0x2 no-forward INH Session ID: 0x0
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.1 via xe-0/0/1.0
    Session Id: 0x2
  10.2.3.4/32 Originating RIB: inet.0
    Metric: 1 Node path count: 1
    Forwarding nexthops: 2

```

```

                                Nexthop: 10.92.78.102 via em0.0
2:1000:10::300::00:cc:cc:cc:cc/304 (1 entry, 0 announced)
  *BGP    Preference: 170/-101
          Route Distinguisher: 1000:10
          Next hop type: Indirect
          Address: 0x9420fd0
          Next-hop reference count: 12
          Source: 10.2.3.4
          Protocol next hop: 10.2.3.4
          Indirect next hop: 0x2 no-forward INH Session ID: 0x0
          State: Local AS:17 Peer AS:17 Age:17:21 Metric2:1 Validation State:
unverified Task: BGP 17,1,2,3,4+50756
          AS path: I
          Communities: target:3333:33 encapsulation0:0:0:0:3
          Import Accepted
          Route Label: 300
          ESI: 00:00:00:00:00:00:00:00:00:00
          Localpref: 100
          Router ID: 10.2.3.4
          Secondary Tables: default-switch.evpn.0
          Indirect next hops: 1
            Protocol next hop: 10.2.3.4 Metric: 1
            Indirect next hop: 0x2 no-forward INH Session ID: 0x0
            Indirect path forwarding next hops: 1
              Next hop type: Router
              Next hop: 10.10.10.1 via xe-0/0/1.0
              Session Id: 0x2
            10.2.3.4/32 Originating RIB: inet.0
              Metric: 1                      Node path count: 1
              Forwarding nexthops: 2
                Nexthop: 10.92.78.102 via em0.0
3:1000:10::100::1.2.3.4/304 (1 entry, 0 announced)
  *BGP    Preference: 170/-101
          Route Distinguisher: 1000:10
          PMSI: Flags 0x0: Label 100: Type INGRESS-REPLICATION 1.2.3.4
          Next hop type: Indirect
          Address: 0x9420fd0
          Next-hop reference count: 12
          Source: 10.2.3.4
          Protocol next hop: 10.2.3.4
          Indirect next hop: 0x2 no-forward INH Session ID: 0x0
          State: Local AS:17 Peer AS:17 Age:37:01 Metric2:1 Validation State:
unverified Task: BGP 17.1.2.3.4+50756
          AS path: I
          Communities: target:1111:8388708 encapsulation0:0:0:0:3
          Import Accepted
          Localpref: 100
          Router ID: 10.2.3.4
          Secondary Tables: default-switch.evpn.0
          Indirect next hops: 1
            Protocol next hop: 10.2.3.4 Metric: 1
            Indirect next hop: 0x2 no-forward INH Session ID: 0x0
            Indirect path forwarding next hops: 1
              Next hop type: Router
              Next hop: 10.10.10.1 via xe-0/0/1.0
              Session Id: 0x2
            10.2.3.4/32 Originating RIB: inet.0
              Metric: 1                      Node path count: 1

```

```

Forwarding nexthops: 2
  Nexthop: 10.92.78.102 via em0.0

3:1000:10::200::1.2.3.4/304 (1 entry, 0 announced)
  *BGP   Preference: 170/-101
        Route Distinguisher: 1000:10
        PMSI: Flags 0x0: Label 200: Type INGRESS-REPLICATION 1.2.3.4
        Next hop type: Indirect
        Address: 0x9420fd0
        Next-hop reference count: 12
        Source: 10.2.3.4
        Protocol next hop: 10.2.3.4
        Indirect next hop: 0x2 no-forward INH Session ID: 0x0
        State: Local AS: 17 Peer AS: 17 Age:35:22 Metric2:1 Validation
State:unverified Task: BGP 17.1.2.3.4+50756
        AS path:I Communities: target:2222:22 encapsulation):0:0:0:3

Import Accepted
  Localpref: 100
  Router ID: 10.2.3.4
  Secondary Tables: default-switch.evpn.0
  Indirect next hops: 1
    Protocol next hop: 10.2.3.4 Metric: 1
    Indirect next hop: 0x2 no-forward INH Session ID: 0x0
    Indirect path forwarding next hops: 1
      Next hop type: Router
      Next hop: 10.10.10.1 via xe-0/0/1.0
      Session Id: 0x2
    10.2.3.4/32 Originating RIB: inet.0
      Metric: 1 Node path count: 1
      Forwarding nexthops: 2
        Nexthop: 10.92.78.102 via em0.0

3:1000:10::300::1.2.3.4/304 (1 entry, 0 announced)
  *BGP   Preference: 170/-101
        Route Distinguisher: 1000:10
        PMSI: Flags 0x0: Label 300: Type INGRESS-REPLICATION 1.2.3.4
        Next hop type: Indirect
        Address: 0x9420fd0
        Next-hop reference count: 12
        Source: 10.2.3.4
        Protocol next hop: 10.2.3.4
        Indirect next hop: 0x2 no-forward INH Session ID: 0x0
        State: Local AS: 17 Peer AS: 17 Age 35:22 Metric2:1 Validation State:
unverified Task: BGP 17.1.2.3.4+5075
        6 AS path: I Communities: target:3333:33 encapsulation0:0:0:3
Import Accepted Localpref:100
  Router ID: 10.2.3.4
  Secondary Tables: default-switch.evpn.0
  Indirect next hops: 1
    Protocol next hop: 10.2.3.4 Metric: 1
    Indirect next hop: 0x2 no-forward INH Session ID: 0x0
    Indirect path forwarding next hops: 1
      Next hop type: Router
      Next hop: 10.10.10.1 via xe-0/0/1.0
      Session Id: 0x2
    10.2.3.4/32 Originating RIB: inet.0
      Metric: 1 Node path count: 1
      Forwarding nexthops: 2
        Nexthop: 10.92.78.102 via em0.0

```

show route table default-switch.evpn.0 extensive

The following shows the partial output listing for the EVPN VNI table.

```
user@host> show route table default-switch.evpn.0 extensive
3:1000:10::100::00:aa:aa:aa:aa/304 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
            Route Distinguisher: 10.255.0.1:00
            PMSI: Flags 0x0: Label 100: Type INGRESS-REPLICATION 1.2.3.4
            Next hop type: Indirect, Next hop index: 0
            Address: 0xcebfad0
            Next-hop reference count: 26
            Source: 10.255.0.1
            Protocol next hop: 10.255.0.1
            Indirect next hop: 0x2 no-forward INH Session ID: 0x0
            State: <Secondary Active Int Ext>
            Local AS: 100 Peer AS: 100
            Age: 1:35:30 Metric2: 2
            Validation State: unverified
            Task: BGP_100.10.255.0.1
            Announcement bits (1): 0-default-switch-evpn
            AS path: I
            Communities: target:100:100 encapsulation:vlan (0x8)
evpn-mcast-flags:0x1:snooping-enabled
. . .
```

show route table evpn1.evpn-mcsn

The following shows the output listing for the multicast information used by the rpd and mcsnoopd.

```
user@host> show route table default-switch.evpn-mcsn.1
evpn1.evpn-mcsn.1: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0.2,0.0,0.0/48      *[Multicast/180] 01:38:13
                    to 10.255.0.4 via vtep.32768
                    to 10.255.0.2 via vtep.32770
                    to 10.255.0.5 via vtep.32771
                    to 10.255.0.1 via vtep.32772
0.2,0.0,0.0,235.1.1.1/80*[Multicast/180] 01:38:12
                    to 10.255.0.1 via vtep.32772
```

show route table evpn1 (Multihomed Proxy MAC and IP Address)

The following shows a partial output listing for an EVPN instance. This indicates when Multihomed Proxy MAC and IP Address Route Advertisement is enabled.

```
user@host> show route table evpn-1
2:666:11010003::1002::00:00:00:00:02::102.1.1.2/304 MAC/IP (1 entry, 1
announced)
TSI:
Page 0 idx 0, (group vteps type Internal) Type 1 val 0xb20eb10 (adv_entry)
  Advertised metrics:
    Nexthop: 103.1.1.1
    Localpref: 100
```

```
AS path: [666] I
Communities: target:666:1002 evpn-12-info:0x20:proxy (mtu 0)
Path 2:666:11010003::1002::00:00:00:00:02::102.1.1.2 Vector len 4. Val: 0
  *EVPN    Preference: 170
            Next hop type: Indirect, Next hop index: 0
            Address: 0xc3a9cf0
            Next-hop reference count: 36
            Protocol next hop: 103.1.1.1
            Indirect next hop: 0x0 - INH Session ID: 0x0
            State: <Active Int Ext>
```

show route terse

List of Syntax [Syntax on page 2514](#)
[Syntax \(EX Series Switches\) on page 2514](#)

Syntax `show route terse`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switches) `show route terse`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.

Description Display a high-level summary of the routes in the routing table.



NOTE: For BGP routes, the `show route terse` command displays the local preference attribute and MED instead of the metric1 and metric2 values. This is mostly due to historical reasons.

To display the metric1 and metric2 value of a BGP route, use the [show route extensive](#) command.

Options **none**—Display a high-level summary of the routes in the routing table.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show route terse on page 2516](#)

Output Fields [Table 216 on page 2514](#) describes the output fields for the `show route terse` command. Output fields are listed in the approximate order in which they appear.

Table 216: show route terse Output Fields

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.

Table 216: show route terse Output Fields (continued)

Field Name	Field Description
<i>number routes</i>	Number of routes in the routing table and total number of routes in the following states: <ul style="list-style-type: none"> • active (routes that are active) • holddown (routes that are in the pending state before being declared inactive) • hidden (routes that are not used because of a routing policy)
<i>route key</i>	Key for the state of the route: <ul style="list-style-type: none"> • +—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table. • -—A hyphen indicates the last active route. • *—An asterisk indicates that the route is both the active and the last active route. An asterisk before a to line indicates the best subpath to the route.
A	Active route. An asterisk (*) indicates this is the active route.
V	Validation status of the route: <ul style="list-style-type: none"> • ?—Not evaluated. Indicates that the route was not learned through BGP. • I—Invalid. Indicates that the prefix is found, but either the corresponding AS received from the EBGp peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database. • N—Unknown. Indicates that the prefix is not among the prefixes or prefix ranges in the database. • V—Valid. Indicates that the prefix and autonomous system pair are found in the database.
<i>Destination</i>	Destination of the route.
P	Protocol through which the route was learned: <ul style="list-style-type: none"> • A—Aggregate • B—BGP • C—CCC • D—Direct • G—GMPLS • I—IS-IS • L—L2CKT, L2VPN, LDP, Local • K—Kernel • M—MPLS, MSDP • O—OSPF • P—PIM • R—RIP, RIPng • S—Static • T—Tunnel
Prf	Preference value of the route. In every routing metric except for the BGP LocalPref attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the LocalPref value in the Preference2 field. For example, if the LocalPref value for Route 1 is 100, the Preference2 value is -101. If the LocalPref value for Route 2 is 155, the Preference2 value is -156. Route 2 is preferred because it has a higher LocalPref value and a lower Preference2 value.

Table 216: show route terse Output Fields (continued)

Field Name	Field Description
Metric 1	First metric value in the route. For routes learned from BGP, this is the MED metric.
Metric 2	Second metric value in the route. For routes learned from BGP, this is the IGP metric.
Next hop	Next hop to the destination. An angle bracket (>) indicates that the route is the selected route.
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> I—IGP. E—EGP. ?—Incomplete; typically, the AS path was aggregated.

Sample Output

show route terse

```

user@host> show route terse

inet.0: 10 destinations, 12 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

A V Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
* ? 172.16.1.1/32      0 10      1          >10.0.0.2
?                               B 170      100          >10.0.0.2      I
  unverified
* ? 172.16.1.1/32      D 0          >10.0.0.2
* V 2.2.0.2/32         B 170      110          >10.0.0.2      200 I
  valid
* ? 10.0.0.0/30        D 0          >10.0.0.2
?                               B 170      100          >10.0.0.2      I
  unverified
* ? 10.0.0.1/32        L 0          Local
* ? 10.0.0.4/30        B 170      100          >10.0.0.2      I
  unverified
* ? 10.0.0.8/30        B 170      100          >10.0.0.2      I
  unverified
* I 172.16.1.1/32       B 170      90          >10.0.0.2      200 I
  invalid
* N 192.168.2.3/32     B 170      100          >10.0.0.2      200 I
  unknown
* ? 172.16.233.5/32    0 10      1          >10.0.0.2      MultiRecv

```


CHAPTER 26

RIP Operational Commands

- `clear rip general-statistics`
- `clear rip statistics`
- `show rip general-statistics`
- `show rip neighbor`
- `show rip statistics`

clear rip general-statistics

List of Syntax	Syntax on page 2518 Syntax (EX Series Switches and QFX Series) on page 2518
Syntax	<pre>clear rip general-statistics <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches and QFX Series)	<pre>clear rip general-statistics</pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear RIP general statistics.
Options	none —Clear RIP general statistics. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show rip general-statistics on page 2521
List of Sample Output	clear rip general-statistics on page 2518
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear rip general-statistics

```
user@host> clear rip general-statistics
```

clear rip statistics

List of Syntax	Syntax on page 2519 Syntax (EX Series Switches and QFX Series) on page 2519
Syntax	<pre>clear rip statistics <instance (all <i>instance-name</i>)> <logical-system (all <i>logical-system-name</i>)> <neighbor> <peer (all <i>address</i>)></pre>
Syntax (EX Series Switches and QFX Series)	<pre>clear rip statistics <instance (all <i>instance-name</i>)> <neighbor></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Clear RIP statistics.
Options	<p>none—Reset RIP counters for all neighbors for all routing instances.</p> <p>instance (all <i>instance-name</i>)—(Optional) Clear RIP statistics for all instances or for the specified routing instance only.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>neighbor—(Optional) Clear RIP statistics for the specified neighbor only.</p> <p>peer (all <i>address</i>)—(Optional) Clear RIP statistics for a single peer or all peers.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show rip statistics on page 2526
List of Sample Output	clear rip statistics on page 2520
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear rip statistics

```
user@host> clear rip statistics
```

show rip general-statistics

List of Syntax [Syntax on page 2521](#)
[Syntax \(EX Series Switches and QFX Series\) on page 2521](#)

Syntax `show rip general-statistics`
`<logical-system (all | logical-system-name)>`

Syntax (EX Series Switches and QFX Series) `show rip general-statistics`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Command introduced in Junos OS Release 12.1 for the QFX Series.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description Display brief RIP statistics.

Options **none**—Display brief RIP statistics.
logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation • [clear rip general-statistics on page 2518](#)

List of Sample Output [show rip general-statistics on page 2522](#)

Output Fields [Table 217 on page 2521](#) lists the output fields for the **show rip general-statistics** command. Output fields are listed in the approximate order in which they appear.

Table 217: show rip general-statistics Output Fields

Field Name	Field Description
bad msgs	Number of invalid messages received.
no rcv intf	Number of packets received with no matching interface.
curr memory	Amount of memory currently used by RIP.
max memory	Most memory used by RIP.

Sample Output

show rip general-statistics

```
user@host> show rip general-statistics
```

```
RIPv2 I/O info:
```

bad msgs	:	0
no recv intf	:	0
curr memory	:	0
max memory	:	0

show rip neighbor

List of Syntax	Syntax on page 2523 Syntax (EX Series Switches and QFX Series) on page 2523
Syntax	<pre>show rip neighbor <instance (all <i>instance-name</i>)> <logical-system (all <i>logical-system-name</i>)> <name></pre>
Syntax (EX Series Switches and QFX Series)	<pre>show rip neighbor <instance (all <i>instance-name</i>)> <name></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Display information about RIP neighbors.
Options	<p>none—Display information about all RIP neighbors for all instances.</p> <p>instance (all <i>instance-name</i>)—(Optional) Display RIP neighbor information for all instances or for only the specified routing instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>name—(Optional) Display detailed information about only the specified RIP neighbor.</p>
Required Privilege Level	view
List of Sample Output	show rip neighbor on page 2524 show rip neighbor (With Demand Circuits Configured) on page 2524
Output Fields	<p>Table 218 on page 2524 lists the output fields for the show rip neighbor command. Output fields are listed in the approximate order in which they appear.</p>

Table 218: show rip neighbor Output Fields

Field Name	Field Description
Neighbor	Name of the RIP neighbor. NOTE: Beginning with Junos OS Release 11.1, when you configure demand circuits, the output displays a demand circuit (DC) flag next to neighbor interfaces configured for demand circuits. If you configure demand circuits at the [edit protocols rip group group-name neighbor neighbor-name] hierarchy level, the output shows only the neighboring interface that you specifically configured as a demand circuit. If you configure demand circuits at the [edit protocols rip group group-name] hierarchy level, all of the interfaces in the group are configured as demand circuits. Therefore, the output shows all of the interfaces in that group as demand circuits.
State	State of the connection: Up or Dn (Down).
Source Address	Address of the port on the local router.
Destination Address	Address of the port on the remote router.
Send Mode	Send options: broadcast , multicast , none , or version 1 .
Receive Mode	Type of packets to accept: both , none , version 1 , or version 2 .
In Met	Metric added to incoming routes when advertising into RIP routes that were learned from other protocols.

Sample Output

show rip neighbor

```
user@host> show rip neighbor
```

Neighbor	Local State	Source Address	Destination Address	Send Mode	Receive Mode	In Met
ge-2/3/0.0	Up	192.168.9.105	192.168.9.107	bcast	both	1
at-5/1/1.42	Dn	(null)	(null)	mcast	v2 only	3
at-5/1/0.42	Dn	(null)	(null)	mcast	both	3
at-5/1/0.0	Up	198.51.100.0	224.0.0.9	mcast	both	3
so-0/0/0.0	Up	192.168.9.97	224.0.0.9	mcast	both	3

show rip neighbor (With Demand Circuits Configured)

```
user@host> show rip neighbor
```

Neighbor	Local State	Source Address	Destination Address	Send Mode	Receive Mode	In Met
so-0/1/0.0(DC)	Up	10.10.10.2	224.0.0.9	mcast	both	1
so-0/2/0.0(DC)	Up	192.0.2.2	224.0.0.9	mcast	both	1

Table 219: show rip statistics Output Fields

Field Name	Field Description
RIP info	<p>Information about RIP on the specified interface:</p> <ul style="list-style-type: none"> • port—UDP port number used for RIP. • update interval—Interval between routing table updates, in seconds. • holddown—Hold-down interval, in seconds. • timeout—Timeout interval, in seconds. • restart in progress—Graceful restart status. Displayed when RIP is or has been in the process of graceful restart. • restart time—Estimated time for the graceful restart to finish, in seconds. • restart will complete in—Remaining time for the graceful restart to finish, in seconds. • rts learned—Number of routes learned through RIP. • rts held down—Number of routes held down by RIP. • rqsts dropped—Number of received request packets that were dropped. • resps dropped—Number of received response packets that were dropped.
logical-interface	<p>Name of the logical interface and its statistics:</p> <ul style="list-style-type: none"> • routes learned—Number of routes learned on the logical interface. • routes advertised—Number of routes advertised by the logical interface.
Counter	<p>List of counter types:</p> <ul style="list-style-type: none"> • Updates Sent—Number of update messages sent. • Triggered Updates Sent—Number of triggered update messages sent. • Responses Sent—Number of response messages sent. • Bad Messages—Number of invalid messages received. • RIPv1 Updates Received—Number of RIPv1 update messages received. • RIPv1 Bad Route Entries—Number of RIPv1 invalid route entry messages received. • RIPv1 Updates Ignored—Number of RIPv1 update messages ignored. • RIPv2 Updates Received—Number of RIPv2 update messages received. • RIPv2 Bad Route Entries—Number of RIPv2 invalid route entry messages received. • RIPv2 Updates Ignored—Number of RIPv2 update messages that were ignored. • Authentication Failures—Number of received update messages that failed authentication. • RIP Requests Received—Number of RIP request messages received. • RIP Requests Ignored—Number of RIP request messages ignored.
Total	Total number of packets for the selected counter.
Last 5 min	Number of packets for the selected counter in the most recent 5-minute period.
Last minute	Number of packets for the selected counter in the most recent 1-minute period.

Sample Output

show rip statistics

```
user@host> show rip statistics so-0/0/0.0
```

```
RIP info: port 520; update interval: 30s; holddown 180s; timeout 120s
restart in progress: restart time 60s; restart will complete in 55s
```

```
   rts learned   rts held down   rqsts dropped   resps dropped
           0             0             0             0
```

```
so-0/0/0.0: 0 routes learned; 501 routes advertised
```

Counter	Total	Last 5 min	Last minute
-----	-----	-----	-----
Updates Sent	0	0	0
Triggered Updates Sent	0	0	0
Responses Sent	0	0	0
Bad Messages	0	0	0
RIPv1 Updates Received	0	0	0
RIPv1 Bad Route Entries	0	0	0
RIPv1 Updates Ignored	0	0	0
RIPv2 Updates Received	0	0	0
RIPv2 Bad Route Entries	0	0	0
RIPv2 Updates Ignored	0	0	0
Authentication Failures	0	0	0
RIP Requests Received	0	0	0
RIP Requests Ignored	0	0	0

CHAPTER 27

RIPng Operational Commands

- `clear ripng general-statistics`
- `clear ripng statistics`
- `show ripng general-statistics`
- `show ripng neighbor`
- `show ripng statistics`

clear ripng general-statistics

List of Syntax	Syntax on page 2530 Syntax (EX Series Switches) on page 2530
Syntax	<pre>clear ripng general-statistics <logical-system (all <i>logical-system-name</i>)></pre>
Syntax (EX Series Switches)	<pre>clear ripng general-statistics</pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Clear RIP next generation (RIPng) general statistics.
Options	none —Clear RIPng general statistics. logical-system (all <i>logical-system-name</i>) —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• show ripng general-statistics on page 2532
List of Sample Output	clear ripng general-statistics on page 2530
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear ripng general-statistics

```
user@host> clear ripng general-statistics
```

clear ripng statistics

List of Syntax	Syntax on page 2531 Syntax (EX Series Switch) on page 2531
Syntax	<pre>clear ripng statistics <instance name> <logical-system (all logical-system-name)></pre>
Syntax (EX Series Switch)	<pre>clear ripng statistics <instance name></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Clear RIP next-generation (RIPng) statistics.
Options	<p>none—Reset RIPng counters for all neighbors for all routing instances.</p> <p>instance—(Optional) Reset RIPng counters for the specified instance.</p> <p>logical-system (all logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>name—(Optional) Reset RIPng counters for the specified neighbor.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • show ripng statistics on page 2536
List of Sample Output	clear ripng statistics on page 2531
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear ripng statistics

```
user@host> clear ripng statistics
```

show ripng general-statistics

List of Syntax [Syntax on page 2532](#)
 [Syntax \(EX Series Switch\) on page 2532](#)

Syntax `show ripng general-statistics`
 `<logical-system (all | logical-system-name)>`

Syntax (EX Series Switch) `show ripng general-statistics`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.

Description Display general RIP next-generation (RIPng) statistics.

Options **none**—Display general RIPng statistics.

 logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

Related Documentation • [clear ripng general-statistics on page 2530](#)

List of Sample Output [show ripng general-statistics on page 2533](#)

Output Fields [Table 220 on page 2532](#) lists the output fields for the **show ripng general-statistics** command. Output fields are listed in the approximate order in which they appear.

Table 220: show ripng general-statistics Output Fields

Field Name	Field Description
bad msgs	Number of invalid messages received.
no rcv intf	Number of packets received with no matching interface.
curr memory	Amount of memory currently used by RIPng.
max memory	Most memory used by RIPng.

Sample Output

show ripng general-statistics

```
user@host> show ripng general-statistics
```

```
RIPng I/O info:
  bad msgs      :      0
  no recv intf  :      0
  curr memory   :      0
  max memory    :      0
```

show ripng neighbor

List of Syntax [Syntax on page 2534](#)
[Syntax \(EX Series Switch\) on page 2534](#)

Syntax `show ripng neighbor`
`<logical-system (all | logical-system-name)>`
`<name>`

Syntax (EX Series Switch) `show ripng neighbor`
`<name>`

Release Information Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 9.0 for EX Series switches.

Description Display information about RIP next-generation (RIPng) neighbors.

Options **none**—Display information about all RIPng neighbors.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

name—(Optional) Display detailed information about a specific RIPng neighbor.

Required Privilege Level view

List of Sample Output [show ripng neighbor on page 2535](#)

Output Fields [Table 221 on page 2534](#) lists the output fields for the **show ripng neighbor** command. Output fields are listed in the approximate order in which they appear.

Table 221: show ripng neighbor Output Fields

Field Name	Field Description
Neighbor	Name of RIPng neighbor.
State	State of the connection: Up or Dn (Down).
Source Address	Source address.
Destination Address	Destination address.
Send	Send options: broadcast , multicast , none , version 1 , or yes .
Recv	Type of packets to accept: both , none , version 1 , or yes .

Table 221: show ripng neighbor Output Fields (continued)

Field Name	Field Description
In Met	Metric added to incoming routes when advertising into RIPng routes that were learned from other protocols.

Sample Output

show ripng neighbor

```
user@host> show ripng neighbor
```

Neighbor	State	Source Address	Dest Address	Send	Recv	In Met
fe-0/0/2.0	Up	fe80::290:69ff:fe68:b002	ff02::9	yes	yes	1

show ripng statistics

List of Syntax	Syntax on page 2536 Syntax (EX Series Switch) on page 2536
Syntax	<pre>show ripng statistics <logical-system (all <i>logical-system-name</i>)> <name></pre>
Syntax (EX Series Switch)	<pre>show ripng statistics <name></pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display RIP next generation (RIPng) statistics about messages sent and received on an interface, as well as information received from advertisements from other routing devices.
Options	<p>none—Display RIPng statistics for all neighbors.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>name—(Optional) Display detailed information about a specific RIPng neighbor.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• clear ripng statistics on page 2531
List of Sample Output	show ripng statistics on page 2537
Output Fields	Table 222 on page 2537 lists the output fields for the show ripng statistics command. Output fields are listed in the approximate order in which they appear.

Table 222: show ripng statistics Output Fields

Field Name	Field Description
RIPng info	Information about RIPng on the specified interface: <ul style="list-style-type: none"> port—UDP port number used for RIPng. holddown—Hold-down interval, in seconds. rts learned—Number of routes learned through RIPng. rts held down—Number of routes held down by RIPng. rqsts dropped—Number of received request packets that were dropped. resps dropped—Number of received response packets that were dropped. restart—Graceful restart status. Displayed when RIPng is or has been in the process of graceful restart.
logical-interface	Name of the logical interface and its statistics: <ul style="list-style-type: none"> routes learned—Number of routes learned on the logical interface. routes advertised—Number of routes advertised by the logical interface. timeout—Timeout interval, in seconds. update interval—Interval between routing table updates, in seconds.
Counter	List of counter types: <ul style="list-style-type: none"> Updates Sent—Number of update messages sent. Triggered Updates Sent—Number of triggered update messages sent. Responses Sent—Number of response messages sent. Bad Messages—Number of invalid messages received. Updates Received—Number of RIPng update messages received. Bad Route Entries—Number of RIPng invalid route entry messages received. Updates Ignored—Number of RIPng update messages ignored. RIPng Requests Received—Number of RIPng request messages received. RIPng Requests Ignored—Number of RIPng request messages ignored.
Total	Total number of packets for the selected counter.
Last 5 min	Number of packets for the selected counter in the most recent 5-minute period.
Last minute	Number of packets for the selected counter in the most recent 1-minute period.

Sample Output

show ripng statistics

```

user@host> show ripng statistics
RIPng info: port 521; holddown 120s;
             rts learned  rts held down  rqsts dropped  resps dropped
                   0             0             0             0

so-0/1/3.0:  0 routes learned; 1 routes advertised; timeout 180s; update interval
20s
Counter                               Total   Last 5 min  Last minute

```

-----	-----	-----	-----
Updates Sent	934	16	4
Triggered Updates Sent	1	0	0
Responses Sent	0	0	0
Bad Messages	0	0	0
Updates Received	0	0	0
Bad Route Entries	0	0	0
Updates Ignored	0	0	0
RIPng Requests Received	0	0	0
RIPng Requests Ignored	0	0	0

CHAPTER 28

Firewall Filter Operational Commands

- `clear firewall`
- `show firewall`
- `show firewall filter version`
- `show firewall log`
- `show firewall prefix-action-stats`
- `show firewall templates-in-use`
- `show policer`

clear firewall

List of Syntax [Syntax on page 2540](#)
[Syntax \(EX Series Switches\) on page 2540](#)

Syntax `clear firewall (all | counter counter-name | filter filter-name | log (all | logical-system-name) | logical-system logical-system-name)`

Syntax (EX Series Switches) `clear firewall (all | counter counter-name | filter filter-name | log (all | logical-system-name) | policer counter (all | counter-id counter-index))`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
logical-system option introduced in Junos OS Release 9.3.
log option introduced before Junos OS Release 11.4.

Description Clear statistics about configured firewall filters.

When you clear the counters of a filter, this impacts not only the counters shown by the CLI, but also the ones tracked by SNMP2.

Subscriber management uses firewall filters to capture and report the volume-based service accounting counters that are used for subscriber billing. The **clear firewall** command also clears the service accounting counters that are reported to the RADIUS accounting server. For this reason, you must be cautious in specifying which firewall statistics you want to clear.



NOTE: The **clear firewall** command cannot be used to clear the Routing Engine filter counters on a backup Routing Engine that is enabled for graceful Routing Engine switchover (GRES).

If you clear statistics for firewall filters that are applied to Trio-based DPCs and that also use the **prefix-action** action on matched packets, wait at least 5 seconds before you enter the **show firewall prefix-action-stats** command. A 5-second pause between issuing the **clear firewall** and **show firewall prefix-action-stats** commands avoids a possible timeout of the **show firewall prefix-action-stats** command.

Options **all**—Clear the packet and byte counts for all filters. On EX Series switches, this option also clears the packet counts for all policer counters.

counter *counter-name*—Clear the packet and byte counts for a filter counter that has been configured with the counter firewall filter action.

filter *filter-name*—Clear the packet and byte counts for the specified firewall filter.

log (all | *logical-system-name*)—Clear log entries for IPv4 firewall filters that have **then log** as an action. Use **log all** to clear all log entries or **log *logical-system-name*** to clear log entries for the specified logical system.

logical-system *logical-system-name*—Clear the packet and byte counts for the specified logical system.

policer counter (all | counter-id *counter-index*)—(EX8200 switches only) Clear all policer counters using the **policer counter all** command, or clear a specific policer counter using the **policer counter counter-id *counter-index*** command. The value of *counter-index* can be 0, 1, or 2.

Required Privilege Level

clear

Related Documentation

- [show firewall on page 2542](#)

List of Sample Output

[clear firewall all on page 2541](#)
[clear firewall \(counter counter-name\) on page 2541](#)
[clear firewall \(filter filter-name\) on page 2541](#)
[clear firewall \(policer counter all\) \(EX8200 Switch\) on page 2541](#)
[clear firewall \(policer counter counter-id counter-index\) \(EX8200 Switch\) on page 2541](#)

Sample Output

clear firewall all

```
user@host> clear firewall all
```

clear firewall (counter counter-name)

```
user@host> clear firewall counter port-filter-counter
```

clear firewall (filter filter-name)

```
user@host> clear firewall filter ingress-port-filter
```

clear firewall (policer counter all) (EX8200 Switch)

```
user@switch> clear firewall policer counter all
```

clear firewall (policer counter counter-id counter-index) (EX8200 Switch)

```
user@switch> clear firewall policer counter counter-id 0
```

show firewall

List of Syntax [Syntax on page 2542](#)
[Syntax \(EX Series Switches\) on page 2542](#)

Syntax `show firewall`
 `<application (CFM | eswd | RMPS)>>`
 `<counter counter-name>`
 `<detail>`
 `<filter filter-name>`
 `<filter regex regular-expression>`
 `<logical-system (all | logical-system-name)>`
 `<terse>`

Syntax (EX Series Switches) `show firewall`
 `<application (CFM | eswd | RMPS)>>`
 `<counter counter-name>`
 `<detail>`
 `<filter filter-name>`
 `<filter regex regular-expression>`
 `<log <(detail | interface interface-name)>>`
 `<policer counters <(detail | counter-id counter-index <detail>)>>`
 `<terse>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 Option **logical-system** introduced in Junos OS Release 9.3.
 Option **terse** introduced in Junos OS Release 9.4.
 Option **policer counters** introduced in Junos OS Release 12.2 for EX Series switches.
 Option **detail** introduced in Junos OS Release 12.3 for EX Series switches.
 Option **detail** introduced in Junos OS Release 14.1 for MX Series routers.
 Option **regex *regular-expression*** introduced in Junos OS Release 14.2.

Description Display enhanced statistics and counters for all configured firewall filters.

Options **none**—(Optional) Display statistics and counters for all configured firewall filters and counters. For EX Series switches, this command also displays statistics about all configured policers.

application (CFM | eswd | RMPS)—(Optional) Show firewall elements owned by the selected software component:

- Connectivity Fault Management (CFM)
- Ethernet switching daemon (eswd)—Shows only on devices that support it.
- Resource Management and Packet Steering (RMPS)

counter *counter-name*—(Optional) Name of a filter counter.

detail—(EX Series switches and MX Series routers only) (Optional) Display firewall filter statistics and enhanced policer statistics and counters.

filter *filter-name*—(Optional) Name of a configured filter.

filter regex *regular-expression*—(Optional) Regular expression that matches the names of a subset of filters.

logical-system (**all** | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

log—(Optional) Display log entries for firewall filters.

log <(**detail** | **interface** *interface-name*)>—(EX Series switches only) (Optional) Display detailed log entries of firewall activity or log information about a specific interface.

policer counters <(**detail** | **counter-id** *counter-index* <**detail**>)>—(EX8200 switches only) (Optional) Display enhanced policer counter statistics in brief or in detail.

terse—(Optional) Display firewall filter names only.

Required Privilege Level

view

Related Documentation

- [clear firewall on page 2540](#)
- [show firewall log on page 2551](#)
- *Verifying That Firewall Filters Are Operational*
- *Verifying That Policers Are Operational*
- [show policer on page 2558](#)
- *Enhanced Policer Statistics Overview*
- *enhanced-policer*

List of Sample Output

[show firewall filter \(MX Series Router and EX Series Switch\) on page 2546](#)
[show firewall filter \(non MX Series Router and EX Series Switch\) on page 2546](#)
[show firewall filter \(Dynamic Input Filter\) on page 2546](#)
[show firewall \(Logical Systems\) on page 2546](#)
[show firewall \(counter counter-name\) on page 2547](#)
[show firewall log on page 2547](#)
[show firewall policer counters \(EX8200 Switch\) on page 2547](#)
[show firewall policer counters \(detail\) \(EX8200 Switch\) on page 2548](#)
[show firewall policer counters \(counter-id counter-index\) \(EX8200 Switch\) on page 2548](#)
[show firewall policer counters \(counter-id counter-index detail\) \(EX8200 Switch\) on page 2548](#)
[show firewall detail on page 2549](#)

Output Fields Table 223 on page 2544 lists the output fields for the **show firewall** command. Output fields are listed in the approximate order in which they appear.

Table 223: *show firewall* Output Fields

Field Name	Field Description
Filter	<p>Name of a filter that has been configured with the filter statement at the [edit firewall] hierarchy level.</p> <p>Except on EX Series switches:</p> <ul style="list-style-type: none"> When an interface-specific filter is displayed, the name of the filter is followed by the full interface name and by either -i for an input filter or -o for an output filter. When dynamic filters are displayed, the name of the filter is followed by the full interface name and by either -in for an input filter or -out for an output filter. When a logical system-specific filter is displayed, the name of the filter is prefixed with two underscore (__) characters and the name of the logical system (for example, __ls1/filter1). When a service filter is displayed that uses a service set, the separator between the service-set name and the service-filter name is a semicolon (:). <p>NOTE: For bridge family filter, the ip-protocol match criteria is supported only for IPv4 and not for IPv6. This is applicable for line cards that support the Junos Trio chipset, such as the MX 3D MPC line cards.</p>
Counters	<p>Display filter counter information:</p> <ul style="list-style-type: none"> Name—Name of a filter counter that has been configured with the counter firewall filter action. Bytes—Number of bytes that match the filter term under which the counter action is specified. Packets—Number of packets that matched the filter term under which the counter action is specified. <p>NOTE: On M and T Series routers, firewall filters cannot count ip-options packets on a per option type and per interface basis. A limited work around is to use the show pfe statistics ip options command to see ip-options statistics on a per Packet Forwarding Engine (PFE) basis. See <i>show pfe statistics ip</i> for sample output.</p>
Policers	<p>Display policer information:</p> <ul style="list-style-type: none"> Name—Name of policer. Bytes—(For two-color policers on MX Series routers and EX Series switches, and for hierarchical policers on interfaces hosted on MICs and MPCs in MX Series routers) Number of bytes that match the filter term under which the policer action is specified. This is only the number out-of-specification (out-of-spec) byte counts, not all the bytes in all packets policed by the policer. For other combinations of policer type, device, and line card type, this field is blank. Packets—Number of packets that matched the filter term under which the policer action is specified. This is only the number of out-of-specification (out-of-spec) packet counts, not all packets policed by the policer.
Policer Counter Index	(EX8200 switch only) Global management counter ID. The counter ID value (<i>counter-index</i>) can be 0, 1, or 2.
Green	(EX8200 switch only) Number of packets within the limits. The number of packets is smaller than the committed information rate (CIR).

Table 223: *show firewall Output Fields (continued)*

Field Name	Field Description
Yellow	(EX8200 switch only) Number of packets partially within the limits. The number of packets is greater than the CIR, but the burst size is within the excess burst size (EBS) limit.
Discard	(EX8200 switch only) Number of discarded packets.
Bytes	(EX8200 switch only) Number of green, yellow, red, or discarded packets in bytes.
Packets	(EX8200 switch only) Number of green, yellow, red, or discarded packets.
Filter name	(EX8200 switch only) Name of the filter with a term associated to a policer.
Term name	(EX8200 switch only) Name of the term associated with a policer.
Policer name	(EX8200 switch only) Name of the policer that is associated with a global management counter.
PI-t1	<ul style="list-style-type: none"> • OOS packet statistics for packets that are marked out-of-specification (out-of-spec) by the policer. Changes to all packets that have out-of-spec actions, such as discard, color marking, or forwarding-class, are included in this counter. • Offered packet statistics for traffic subjected to policing. • Transmitted packet statistics for traffic that is not discarded by the policer. When the policer action is discard, the statistics are the same as the in-spec statistics; when the policer action is non-discard (loss-priority or forwarding-class), the statistics are included in this counter.

Sample Output

show firewall filter (MX Series Router and EX Series Switch)

```
user@host> show firewall filter test
```

```
Filter: test
```

```
Counters:
```

Name	Bytes	Packets
Counter-1	0	0
Counter-2	0	0

```
Policers:
```

Name	Bytes	Packets
Policer-1	2770	70

show firewall filter (non MX Series Router and EX Series Switch)

```
user@host> show firewall filter test
```

```
Filter: test
```

```
Counters:
```

Name	Bytes	Packets
Counter-1	0	0
Counter-2	0	0

```
Policers:
```

Name	Bytes	Packets
Policer-1		70

show firewall filter (Dynamic Input Filter)

```
user@host> show firewall filter dfwd-ge-5/0/0.1-in
```

```
Filter: dfwd-ge-5/0/0.1-in
```

```
Counters:
```

Name	Bytes	Packets
c1-ge-5/0/0.1-in	0	0

show firewall (Logical Systems)

```
user@host> show firewall
```

```
Filter: __lr1/test
```

```
Counters:
```

Name	Bytes	Packets
icmp	420	5

```
Filter: __default_bpdu_filter__
```

```
Filter: __lr1/inet_filter1
```

```
Counters:
```

Name	Bytes	Packets
inet_tcp_count	0	0
inet_udp_count	0	0

```
Filter: __lr1/inet_filter2
```

```
Counters:
```

Name	Bytes	Packets
inet_icmp_count	0	0
inet_pim_count	0	0

```
Filter: __lr2/inet_filter1
```

```

Counters:
Name                               Bytes      Packets
inet_tcp_count                     0          0
inet_udp_count                     0          0

```

show firewall (counter counter-name)

```
user@host> show firewall counter icmp-counter
```

```

Filter: ingress-port-voip-class-filter
Counters:
Name                               Bytes      Packets
icmp-counter                       0          0

```

show firewall log

```
user@host> show firewall log
```

Log :

Time	Filter	Action	Interface	Protocol	Src Addr
08:00:53	pfe	R	ge-1/0/1.0	ICMP	192.168.3.5
	192.168.3.4				
08:00:52	pfe	R	ge-1/0/1.0	ICMP	192.168.3.5
	192.168.3.4				
08:00:51	pfe	R	ge-1/0/1.0	ICMP	192.168.3.5
	192.168.3.4				
08:00:50	pfe	R	ge-1/0/1.0	ICMP	192.168.3.5
	192.168.3.4				
08:00:49	pfe	R	ge-1/0/1.0	ICMP	192.168.3.5
	192.168.3.4				
08:00:48	pfe	R	ge-1/0/1.0	ICMP	192.168.3.5
	192.168.3.4				
08:00:47	pfe	R	ge-1/0/1.0	ICMP	192.168.3.5
	192.168.3.4				

show firewall policer counters (EX8200 Switch)

```
user@switch> show firewall policer counters
```

```

Policer Counter Index 0:
          Bytes      Packets
Green:           73      15914
Yellow:           9       1962
Discard:        119     25942

Policer Counter Index 1:
          Bytes      Packets
Green:           0         0
Yellow:           0         0
Discard:           0         0

Policer Counter Index 2:
          Bytes      Packets
Green:           0         0

```

Yellow:	0	0
Discard:	0	0

show firewall policer counters (detail) (EX8200 Switch)

```
user@switch> show firewall policer counters detail
```

Policer Counter Index 0:

	Bytes	Packets
Green:	73	15914
Yellow:	9	1962
Discard:	119	25942

Filter name	Term name	Policer name
myfilter	polcr-term-1	myfilter-polcr-1
inet-filter-ae	ae-snmp	policer-1
inet-filter-ae	ae-ssh	policer-2

Policer Counter Index 1:

	Bytes	Packets
Green:	0	0
Yellow:	0	0
Discard:	0	0

Filter name	Term name	Policer name
-------------	-----------	--------------

Policer Counter Index 2:

	Bytes	Packets
Green:	0	0
Yellow:	0	0
Discard:	0	0

Filter name	Term name	Policer name
-------------	-----------	--------------

show firewall policer counters (counter-id counter-index) (EX8200 Switch)

```
user@switch> show firewall policer counters counter-id 0
```

Policer Counter Index 0:

	Bytes	Packets
Green:	73	15914
Yellow:	9	1962
Discard:	119	25942

show firewall policer counters (counter-id counter-index detail) (EX8200 Switch)

```
user@switch> show firewall policer counters counter-id 0 detail
```

Policer Counter Index 0:

	Bytes	Packets
Green:	73	15914
Yellow:	9	1962
Discard:	119	25942

Filter name	Term name	Policer name
myfilter	polcr-term-1	myfilter-polcr-1
inet-filter-ae	ae-snmp	policer-1
inet-filter-ae	ae-ssh	policer-2

show firewall detail

```
user@host> show firewall detail
Filter: __default_bpdu_filter__

Filter: foo
Counters:
Name                               Bytes          Packets
c1                                17652140        160474
Policers:
Name                               Bytes          Packets
P1-t1
    OOS                             0              18286
    Offered                         0 18446744073709376546
    Transmitted                     0 18446744073709358260
```

show firewall filter version

Syntax	<code>show firewall filter version <filter-name></code>
Release Information	Command introduced in Junos OS Release 10.2R2.
Description	Display the version number of the installed firewall filter in the Routing Engine.
Options	<p><code>none</code>—(Optional) Display the version number of all installed firewall filters.</p> <p><code>filter-name</code>—(Optional) Name of a configured filter. If you specify the name of a filter, only the version number of that filter is displayed.</p>
Additional Information	The initial version number is 1. This number increments by one when you modify the firewall filter settings or an associated prefix action. The maximum version number is 4,294,967,295. When the version number reaches 4,294,967,295, this number is reset to 1.
Required Privilege Level	view
List of Sample Output	show firewall filter version on page 2550
Output Fields	Table 224 on page 2550 lists the output fields for the show firewall filter version command. Output fields are listed in the approximate order in which they appear.

Table 224: show firewall filter version Output Fields

Field Name	Field Description
Filter	Name of a filter that has been configured with the filter statement at the [edit firewall] hierarchy level.
Version	Display the version number of the firewall filter.

Sample Output

show firewall filter version

```
user@host> show firewall filter version
```

```
Filter version information :
Filter                               Version
test                               10
```

show firewall log

List of Syntax [Syntax on page 2551](#)
[Syntax \(EX Series Switches\) on page 2551](#)

Syntax `show firewall log`
`<detail>`
`<extensive>`
`<interface interface-name>`
`<logical-system (logical-system-name | all)>`

Syntax (EX Series Switches) `show firewall log`
`<detail>`
`<interface interface-name>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
extensive option introduced in Junos OS Release 16.1.
logical-system option introduced in Junos OS Release 9.3.

Description Display log information about firewall filters.

Options **none**—Display log information about firewall filters.

detail—(Optional) Display detailed information.

extensive—(Optional) Display hex dump of packet captured by log action.

interface *interface-name*—(Optional) Display log information about a specific interface.

logical-system (*logical-system-name* | all)—(Optional) Perform this operation on all logical systems or on a particular system.

Required Privilege Level view

List of Sample Output [show firewall log on page 2552](#)
[show firewall log detail on page 2552](#)
[show firewall log extensive on page 2553](#)

Output Fields [Table 225 on page 2551](#) lists the output fields for the **show firewall log** command. Output fields are listed in the approximate order in which they appear.

Table 225: show firewall log Output Fields

Field Name	Field Description
Time of Log	Time that the event occurred.

Table 225: show firewall log Output Fields (continued)

Field Name	Field Description
Filter	<ul style="list-style-type: none"> Displays the name of a configured firewall filter or service filter only if the packet hit the filter's log action in a kernel filter (in the control plane). For any traffic that reaches the Routing Engine, the packets hit the log action in the kernel. For all other logged packets (packet hit the filter's log action in the Packet Forwarding Engine), this field displays pfe instead of a configured filter name.
Filter Action	Filter action: <ul style="list-style-type: none"> A—Accept D—Discard R—Reject
Name of Interface	<ul style="list-style-type: none"> Displays a physical interface name if the packet arrived at a port on a line card. Displays local if the packet was generated by the device's internal Ethernet interface, em1 or fxp1, which connects the Routing Engine with the router's packet-forwarding components.
Name of protocol	Packet's protocol name: egp , gre , icmp , ipip , ospf , pim , rsvp , tcp , or udp .
Packet length	Length of the packet.
Source address	Packet's source address.
Destination address	Packet's destination address and port.

Sample Output

show firewall log

```
user@host>show firewall log
```

Time	Filter	Action	Interface	Protocol	Src Addr	Dest Addr
13:10:12	pfe	D	r1sq0.902	ICMP	192.0.2.2	192.0.2.1
13:10:11	pfe	D	r1sq0.902	ICMP	192.0.2.2	192.0.2.1

show firewall log detail

```
user@host> show firewall log detail
```

```
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0Name of protocol: TCP, Packet Length: 50824, Source address:
203.0.113.108:829,
Destination address: 192.168.70.66:513
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
```

```

Name of protocol: TCP, Packet Length: 1020, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
Name of protocol: TCP, Packet Length: 49245, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
Name of protocol: TCP, Packet Length: 49245, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
Name of protocol: TCP, Packet Length: 49245, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
Name of protocol: TCP, Packet Length: 49245, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513
.....

```

show firewall log extensive

```
user@host> show firewall log extensive
```

```

Time of Log: 2016-01-17 22:16:21 PST, Filter: pfe, Filter action: accept, Name
of interface: xe-0/0/1.0
Name of protocol: UDP, Packet Length: 98, Source address: 203.0.113.1, Destination
address: 203.0.113.1
: 00-0F: 00 01 03 ee ee ff 00 01 - 09 22 55 ee 81 00 02 58
: 10-1F: 08 00 45 00 00 62 00 00 - 00 00 40 11 77 8a 01 00
: 20-2F: 00 01 02 00 00 01 1c 00 - 1c 00 00 4e 19 83 00 01
: 30-3F: 02 03 04 05 06 07 08 09 - 0a 0b 0c 0d 0e 0f 10 11
: 40-4F: 12 13 14 15 16 17 18 19 - 1a 1b 1c 1d 1e 1f 20 21
: 50-5F: 22 23 24 25 26 27 28 29 - 2a 2b 00 00 00 00 00 00
: 60-6F: 00 00 00 00 00 00 00 00 - 00 00 00 00 00 00 00 00
: 70-7F: 00 00 00 00 00 00 00 00 - 00 00 00 00 00 00 00 00

```

show firewall prefix-action-stats

List of Syntax	Syntax (filter-specific mode) on page 2554 Syntax (term-specific mode) on page 2554
Syntax (filter-specific mode)	<pre>show firewall prefix-action-stats filter <i>filter-name</i> prefix-action <i>prefix-action-name</i> <from <i>number</i> to <i>number</i>> <logical-system (<i>logical-system-name</i> all)></pre>
Syntax (term-specific mode)	<pre>show firewall prefix-action-stats filter <i>filter-name</i> prefix-action <i>prefix-action-name-term-name</i> <from <i>number</i> to <i>number</i>> <logical-system (<i>logical-system-name</i> all)></pre>
Release Information	Command introduced before Junos OS Release 7.4. logical-system option introduced in Junos OS Release 9.3.
Description	<p>Display prefix action statistics about configured firewall filters.</p> <p>If you clear statistics for firewall filters that are applied to MPCs and that also use the prefix-action action on matched packets, wait at least 5 seconds before you enter the show firewall prefix-action-stats command. A 5-second pause between issuing the clear firewall and show firewall prefix-action-stats commands avoids a possible timeout of the show firewall prefix-action-stats command.</p> <p>By default, policers operate in <i>term-specific</i> mode.</p> <p>See <i>Filter-Specific Policer Overview</i> for information about how to configure policers in <i>filter-specific</i> mode.</p>
Options	<p>filter <i>filter-name</i>—Name of a filter.</p> <p>prefix-action <i>prefix-action-name</i>—Name of a prefix action.</p> <p>from <i>number</i> to <i>number</i>—(Optional) Starting and ending counter or policer.</p> <p>logical-system (<i>logical-system-name</i> all)—(Optional) Perform this operation on all logical systems or on a particular system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• clear firewall on page 2540
List of Sample Output	show firewall prefix-action-stats on page 2555

Output Fields Table 226 on page 2555 lists the output fields for the **show firewall prefix-action-stats** command. Output fields are listed in the approximate order in which they appear.

Table 226: show firewall prefix-action-stats Output Fields

Field Name	Field Description
Filter	Filter name. Filters configured for logical systems include the name of the filter prefixed with the two underscore characters (__) and the name of the logical system (for example, __ls1/filter1).

Sample Output

The following sample output assumes that the policer *act1* is in term mode and that there is a term named *term1* configured in the firewall filter *test*.

show firewall prefix-action-stats

```
user@host> show firewall prefix-action-stats filter test prefix-action act1-term1 from 0 to 9
```

```
Filter: test
```

```
Counters:
```

Name	Bytes	Packets
act1-0	0	0
act1-1	0	0
act1-2	0	0
act1-3	0	0
act1-4	0	0
act1-5	0	0
act1-6	0	0
act1-7	0	0
act1-8	0	0
act1-9	0	0

```
Policers:
```

Name	Bytes	Packets
act1-0	0	0
act1-1	0	0
act1-2	0	0
act1-3	0	0
act1-4	0	0
act1-5	0	0
act1-6	0	0
act1-7	0	0
act1-8	0	0
act1-9	0	0

show firewall templates-in-use

Syntax	show firewall templates-in-use
Release Information	Command introduced in Junos OS Release 12.3.
Description	Display the names of configured filter templates that are currently in use by dynamic subscribers and the number of times each template is referenced.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• clear firewall on page 2540• show firewall log on page 2551
List of Sample Output	show firewall templates-in-use on page 2557
Output Fields	Table 227 on page 2556 lists the output fields for the show firewall templates-in-use command. Output fields are listed in the approximate order in which they appear.

Table 227: show firewall templates-in-use Output Fields

Field Name	Field Description
Filter Template	Name of a filter that has been configured using the filter statement at either the [edit firewall] or [edit dynamic-profiles <i>profile-name</i> firewall] hierarchy and is being used as a template for dynamic subscriber filtering.
Reference Count	Number of times the filter has been referenced by subscribers accessing the network.

Sample Output

show firewall templates-in-use

```
user@host> show firewall templates-in-use
```

Filter Template	Dynamic Subscribers Reference Counts
-----	Reference Count

egressFilter	10
ingressFilter	10
dfilter	5
dfilter-pol	5

show policer

Syntax `show policer`
`<detail>`
`<policer-name>`

Release Information Command introduced before Junos OS Release 7.4.
Option **detail** introduced in Junos OS Release 12.3.

Description Display the number of policed packets for a given policer or an aggregate policer. An aggregate policer is an aggregate of different policers on the same logical interface.

Options **none**—Display the number of policed packets for all configured policers.
detail—(Optional) Display enhanced statistics and counters for policers.
policer-name—(Optional) Display the number of policed packets for the specified policer.

Required Privilege Level view

List of Sample Output [show policer \(MX Series\) on page 2559](#)
[show policer \(non MX Series Router\) on page 2559](#)
[show policer \(Aggregate Policer, non MX Series Router\) on page 2559](#)
[show policer detail on page 2560](#)

Output Fields [Table 228 on page 2558](#) lists the output fields for the **show policer** command. Output fields are listed in the approximate order in which they appear.

Table 228: show policer Output Fields

Field Name	Field Description
Name	Name of the policer.
Bytes	<ul style="list-style-type: none"> (For two-color policers on MX Series routers, and for hierarchical policers on MS-DPC, MIC, and MPC interfaces on MX Series routers)—Total number of bytes policed by the specified policer. For other combinations of policer type, device, and line card type, this field is blank. (T Series and M10i)—Not applicable. The Bytes information is not displayed.
Packets	Total number of packets policed by the specified policer.

Table 228: show policer Output Fields (continued)

Field Name	Field Description
Policer detail	<ul style="list-style-type: none"> OOS packet statistics for packets that are marked out-of-specification by the policer. Changes to all packets that have out-of-specification actions, such as discard, color marking, or forwarding-class, are included in this counter. Offered packet statistics for traffic subjected to policing. Transmitted packet statistics for traffic that is not discarded by the policer. When the policer action is discard, the statistics are the same as the within-specification statistics; when the policer action is non-discard (loss-priority or forwarding-class), the statistics are included in this counter.

Sample Output

show policer (MX Series)

```
user@host> show policer
```

Policers:

Name	Bytes	Packets
__default_arp_policer__	314520	5242
pol-2M-ge-1/2/0.1-inet-i	10372300	103723
pol-2M-ge-1/2/0.1-inet6-i	7727800	77278
pol-2M-ge-1/2/0.1-mp1s-i	7070336	67984
pol-2M-ge-1/2/0.1001-vp1s-i	65153700	651537
pol-2M-ge-1/2/0.2001-vp1s-i	65180900	651809
pol-2M-ge-1/2/0.3001-ccc-i	62202144	647939

show policer (non MX Series Router)

```
user@host> show policer
```

Policers:

Name	Bytes	Packets
__default_arp_policer__	NA	5242
pol-2M-ge-1/2/0.1-inet-i	NA	103723
pol-2M-ge-1/2/0.1-inet6-i	NA	77278
pol-2M-ge-1/2/0.1-mp1s-i	NA	67984
pol-2M-ge-1/2/0.1001-vp1s-i	NA	651537
pol-2M-ge-1/2/0.2001-vp1s-i	NA	651809
pol-2M-ge-1/2/0.3001-ccc-i	NA	647939

show policer (Aggregate Policar, non MX Series Router)

```
user@host> show policer
```

Policers:

Name	Bytes	Packets
__default_arp_policer__	NA	0
P1-ae0.0-log_int-o	NA	0
P2-ge-7/0/2.0-inet-o	NA	0
P2-ge-7/0/2.0-inet6-o	NA	0
__policer_tmpl__-term	NA	0
__policer_tmpl__-fc0	NA	0

__policer_tmpl__-fc0	NA	0
__policer_tmpl__-fc1	NA	0
__policer_tmpl__-fc0	NA	0
__policer_tmpl__-fc1	NA	0
__policer_tmpl__-fc2	NA	0
__policer_tmpl__-fc0	NA	0
__policer_tmpl__-fc1	NA	0
__policer_tmpl__-fc2	NA	0
__policer_tmpl__-fc3	NA	0

show policer detail

```
user@host> show policer detail
```

Policers:		
Name	Bytes	Packets
__default_arp_policer__		
OOS	0	0
Offered	0	496
Transmitted	0	496
P1-xe-1/0/0.0-inet-i		
OOS	0	11329
Offered	0	111188
Transmitted	0	99859

CHAPTER 29

Layer 2 Bridging and Switching Operational Commands

- clear bridge mac-table
- clear error bpdu interface
- clear error mac-rewrite
- show bridge domain
- show bridge flood
- show bridge mac-table
- show bridge statistics
- show l2-learning global-information
- show l2-learning global-mac-count
- show l2-learning instance
- show l2-learning interface
- show mac-rewrite interface

clear bridge mac-table

Syntax	<pre>clear bridge mac-table <bridge-domain (all <i>bridge-domain-name</i>)> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <learning-vlan id (all-vlan <i>learning-vlan-id</i>)> <mac-address></pre>
Release Information	Command introduced in Junos OS Release 8.4.
Description	(MX Series routers only) Clear learned Layer 2 address information from the media access control (MAC) address table.
Options	<p>none—Clear all learned Layer 2 address information from the MAC address table.</p> <p>bridge-domain (all <i>bridge-domain-name</i>)—(Optional) Clear learned Layer 2 MAC addresses for all bridging domains or for the specified bridging domain.</p> <p>instance <i>instance-name</i>—(Optional) Clear learned Layer 2 MAC addresses for the specified routing instance.</p> <p>interface <i>interface-name</i>—(Optional) Clear learned Layer 2 MAC addresses for the specified interface.</p> <p>learning-vlan-id (all-vlan <i>learning-vlan-id</i>)—(Optional) Clears learned Layer 2 MAC addresses for all VLANs or for the specified VLAN.</p> <p>mac-address—(Optional) Clear the specified learned Layer 2 address from the MAC address table.</p>
Required Privilege Level	clear
List of Sample Output	clear bridge mac-table on page 2562
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear bridge mac-table

```
user@host> clear bridge mac-table
```

clear error bpdu interface

List of Syntax	MX Series on page 2563 QFX Series, EX Series, NFX Series on page 2563
MX Series	<code>clear error bpdu interface <i>interface-name</i></code>
QFX Series, EX Series, NFX Series	<code>clear error bpdu interface (all <i>interface-name</i>)</code>
Release Information	<p>Command introduced in Junos OS Release 9.4.</p> <p>Command introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Command supports all option in Junos OS Release 15.1 for EX Series switches.</p>
Description	Clear a bridge protocol data unit (BPDU) error condition caused by the detection of a possible bridging loop from Spanning Tree Protocol (STP) operation.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring BPDU Protection on ACX Router, EX Switch and MX Router Edge Ports</i> • <i>Unblocking a Switch Interface That Receives BPDUs in Error (CLI Procedure)</i>
List of Sample Output	clear error bpdu interface ge-1/1/1 on page 2563
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

`clear error bpdu interface ge-1/1/1`

```
user@host> clear error bpdu interface ge-1/1/1
```

clear error mac-rewrite

Syntax	<code>clear error mac-rewrite <interface <i>interface-name</i>></code>
Release Information	Command introduced in Junos OS Release 9.1.
Description	<p>Clear a MAC rewrite error condition caused by the reception of tunneled protocol packets on an interface with Layer 2 protocol tunneling enabled.</p> <p>On interfaces with L2PT configured, customer-facing ports should not receive packets with the L2PT MAC address as the destination address unless there is a network topology or configuration error. Any such interface receiving an L2PT packet becomes “Disabled”, and must subsequently be re-enabled by clearing the error with this command.</p>
Options	interface <i>interface-name</i> —(Optional) Clear the MAC rewrite error condition for the specified interface.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none">• <i>Layer2 Protocol Tunneling Through a Network</i>• <i>Configuring Layer 2 Protocol Tunneling on EX Series Switches with ELS Support</i>• <i>Clearing a MAC Rewrite Error on an Interface with Layer 2 Protocol Tunneling</i>• show mac-rewrite interface on page 2590
List of Sample Output	clear error mac-rewrite interface on page 2564
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear error mac-rewrite interface

```
user@host> clear error mac-rewrite interface ge-1/0/1
```


show bridge domain

Syntax `show bridge domain`
`<brief | detail | extensive>`
`<bridge-domain (all | domain-name)>`
`<instance instance-name>`
`<operational>`

Release Information Command introduced in Junos OS Release 8.4.

Description (MX Series routers only) Display bridge domain information.

Options **none**—Display information for all bridge domains.

brief | detail | extensive—(Optional) Display the specified level of output.

bridge-domain (all | *domain-name*)— (Optional) Display information about all bridge domains or the specified bridge domain.

instance *instance-name*—(Optional) Display information for the specified routing instance.

operational—(Optional) Display information for the operational routing instances.

Required Privilege Level view

List of Sample Output [show bridge domain on page 2565](#)
[show bridge domain brief on page 2565](#)
[show bridge domain detail on page 2566](#)

Sample Output

show bridge domain

user@host> **show bridge domain**

Instance	Primary Table	Bridging Domain	Type	Active
vs1	bridge.0	vlan100	bridge	2
vs1	bridge.0	vlan200	bridge	0

show bridge domain brief

user@host> **show bridge domain brief**

Instance	Primary Table	Bridging Domain	Type	Active
vs1	bridge.0	vlan100	bridge	2

vs1	bridge.0	vlan200	bridge	0
-----	----------	---------	--------	---

show bridge domain detail

```
user@host> show bridge domain detail
Routing Instance:vs1
  Bridging Domain:vlan100
  Router ID: 0.0.0.0
  Type: bridge                      State: Active
  Interfaces:
    ge-11/0/3.0
    ge-11/1/4.100
    ge-11/1/1.100
    ge-11/1/0.100
    xe-10/2/0.100
    xe-10/0/0.100
  Tables:
    bridge.0                        : 2 macs (2 active)
Routing Instance:vs1
  Bridging Domain:vlan200
  Router ID: 0.0.0.0
  Type: bridge                      State: Active
  Interfaces:
    ge-11/1/0.200
    ge-11/1/1.200
    ge-11/1/4.200
    xe-10/0/0.200
    xe-10/2/0.200
  Tables:
    bridge.0                        : 0 macs (0 active)
```

show bridge flood

Syntax	<pre>show bridge flood <brief detail extensive> <bridge-domain <i>domain-name</i>> <event-queue> <instance <i>instance-name</i>> <route (all-ce-flood all ve-flood alt-root-flood bd-flood mlp-flood re-flood)></pre>
Release Information	Command introduced in Junos OS Release 8.4.
Description	(MX Series routers only) Display bridging flooding information.
Options	<p>none—Display all bridging flooding information for all bridging domains.</p> <p>brief detail extensive—(Optional) Display the specified level of output.</p> <p>bridge-domain <i>domain-name</i>—(Optional) Display bridging flooding information for the specified bridge domain.</p> <p>event-queue—(Optional) Display the queue of pending bridge flood events.</p> <p>instance <i>instance-name</i>—(Optional) Display bridging flooding information for the specified routing instance.</p> <p>route (all-ce-flood all ve-flood alt-root-flood bd-flood mlp-flood re-flood)—(Optional) Display the following:</p> <ul style="list-style-type: none"> all-ce-flood—Display the route for flooding traffic to all customer edge routers if no-local-switching is enabled. all-ve-flood—Display the route for flooding traffic to all VPLS edge routers if no-local-switching is enabled. alt-root-flood—Display the Spanning Tree Protocol (STP) alt-root flooding route used for the interface. bd-flood—Display the route for flooding traffic of a bridge domain if no-local-switching is not enabled. mlp-flood—Display the route for flooding traffic to MAC learning chips. re-flood—Display the route for Routing Engine flooding to all interfaces.
Required Privilege Level	view
List of Sample Output	<p>show bridge flood on page 2568</p> <p>show bridge flood brief on page 2568</p> <p>show bridge flood detail on page 2568</p>

[show bridge flood extensive on page 2569](#)

Output Fields to be provided

Sample Output

[show bridge flood](#)

```
user@host> show bridge flood
```

Name: __juniper_private1__
 CEs: 0
 VEs: 0
 Flood Routes:

Prefix	Type	Owner	NhType	NhIndex
0x36/16	MLP_FLOOD	__vs1+vlan100__	flood	426
0x3a/16	MLP_FLOOD	__vs1+vlan200__	flood	428

Name: vs1::vlan100
 CEs: 6
 VEs: 0
 Flood Routes:

Prefix	Type	Owner	NhType	NhIndex
0x35/16	ALL_FLOOD	__vs1+vlan100__	flood	425
0x35/16	RE_FLOOD	__vs1+vlan100__	flood	425
0x3780/17	ALT_ROOT_RT	ge-11/0/3.0	flood	425
0x3b80/17	ALT_ROOT_RT	ge-11/1/4.100	flood	425
0x3c80/17	ALT_ROOT_RT	ge-11/1/1.100	flood	425
0x3d80/17	ALT_ROOT_RT	ge-11/1/0.100	flood	425
0x3e80/17	ALT_ROOT_RT	xe-10/2/0.100	flood	425
0x3f80/17	ALT_ROOT_RT	xe-10/0/0.100	flood	425

Name: vs1::vlan200
 CEs: 5
 VEs: 0
 Flood Routes:

Prefix	Type	Owner	NhType	NhIndex
0x39/16	ALL_FLOOD	__vs1+vlan200__	flood	427
0x39/16	RE_FLOOD	__vs1+vlan200__	flood	427
0x4180/17	ALT_ROOT_RT	ge-11/1/0.200	flood	427
0x4080/17	ALT_ROOT_RT	ge-11/1/1.200	flood	427
0x4280/17	ALT_ROOT_RT	ge-11/1/4.200	flood	427
0x4480/17	ALT_ROOT_RT	xe-10/0/0.200	flood	427
0x4380/17	ALT_ROOT_RT	xe-10/2/0.200	flood	427

[show bridge flood brief](#)

```
user@host> show bridge flood brief
```

Name	Active CEs	Active VEs
__juniper_private1__	0	0
vs1::vlan100	6	0
vs1::vlan200	5	0

[show bridge flood detail](#)

```
user@host> show bridge flood detail
```

Name: __juniper_private1__
 CEs: 0
 VEs: 0

```
Flood Routes:
  Prefix  Type      Owner                NhType  NhIndex
  0x36/16  MLP_FLOOD  __vs1+vlan100__    flood   426
  0x3a/16  MLP_FLOOD  __vs1+vlan200__    flood   428
Name: vs1::vlan100
CEs: 6
VEs: 0
Flood Routes:
  Prefix  Type      Owner                NhType  NhIndex
  0x35/16  ALL_FLOOD  __vs1+vlan100__    flood   425
  0x35/16  RE_FLOOD   __vs1+vlan100__    flood   425
  0x3780/17 ALT_ROOT_RT ge-11/0/3.0        flood   425
  0x3b80/17 ALT_ROOT_RT ge-11/1/4.100      flood   425
  0x3c80/17 ALT_ROOT_RT ge-11/1/1.100      flood   425
  0x3d80/17 ALT_ROOT_RT ge-11/1/0.100      flood   425
  0x3e80/17 ALT_ROOT_RT xe-10/2/0.100      flood   425
  0x3f80/17 ALT_ROOT_RT xe-10/0/0.100      flood   425
Name: vs1::vlan200
CEs: 5
VEs: 0
Flood Routes:
  Prefix  Type      Owner                NhType  NhIndex
  0x39/16  ALL_FLOOD  __vs1+vlan200__    flood   427
  0x39/16  RE_FLOOD   __vs1+vlan200__    flood   427
  0x4180/17 ALT_ROOT_RT ge-11/1/0.200      flood   427
  0x4080/17 ALT_ROOT_RT ge-11/1/1.200      flood   427
  0x4280/17 ALT_ROOT_RT ge-11/1/4.200      flood   427
  0x4480/17 ALT_ROOT_RT xe-10/0/0.200      flood   427
  0x4380/17 ALT_ROOT_RT xe-10/2/0.200      flood   427
```

show bridge flood extensive

```
user@host> show bridge flood extensive

Name: __juniper_private1__
CEs: 0
VEs: 0
  Flood route prefix: 0x36/16
  Flood route type: MLP_FLOOD
  Flood route owner: __vs1+vlan100__
  Nexthop type: flood
  Nexthop index: 426
    Interfaces Flooding to:
      Name                Type      NhType  Index
      1c-11/0/0.32769    LC
      1c-10/2/0.32769    LC
      1c-10/0/0.32769    LC
      1c-11/1/0.32769    LC

  Flood route prefix: 0x3a/16
  Flood route type: MLP_FLOOD
  Flood route owner: __vs1+vlan200__
  Nexthop type: flood
  Nexthop index: 428
    Interfaces Flooding to:
      Name                Type      NhType  Index
      1c-10/0/0.32769    LC
      1c-10/2/0.32769    LC
      1c-11/1/0.32769    LC
Name: vs1::vlan100
```

CEs: 6

VEs: 0

Flood route prefix: 0x35/16
 Flood route type: ALL_FLOOD
 Flood route owner: __vs1+vlan100__
 Nexthop type: flood
 Nexthop index: 425

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/0/3.0	CE		
ge-11/1/4.100	CE		
ge-11/1/1.100	CE		
ge-11/1/0.100	CE		
xe-10/2/0.100	CE		
xe-10/0/0.100	CE		

Flood route prefix: 0x35/16
 Flood route type: RE_FLOOD
 Flood route owner: __vs1+vlan100__
 Nexthop type: flood
 Nexthop index: 425

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/0/3.0	CE		
ge-11/1/4.100	CE		
ge-11/1/1.100	CE		
ge-11/1/0.100	CE		
xe-10/2/0.100	CE		
xe-10/0/0.100	CE		

Flood route prefix: 0x3780/17
 Flood route type: ALT_ROOT_RT
 Flood route owner: ge-11/0/3.0
 Nexthop type: flood
 Nexthop index: 425

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/0/3.0	CE		
ge-11/1/4.100	CE		
ge-11/1/1.100	CE		
ge-11/1/0.100	CE		
xe-10/2/0.100	CE		
xe-10/0/0.100	CE		

Flood route prefix: 0x3b80/17
 Flood route type: ALT_ROOT_RT
 Flood route owner: ge-11/1/4.100
 Nexthop type: flood
 Nexthop index: 425

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/0/3.0	CE		
ge-11/1/4.100	CE		
ge-11/1/1.100	CE		
ge-11/1/0.100	CE		
xe-10/2/0.100	CE		
xe-10/0/0.100	CE		

Flood route prefix: 0x3c80/17

```
Flood route type: ALT_ROOT_RT
Flood route owner: ge-11/1/1.100
Nexthop type: flood
Nexthop index: 425
  Interfaces Flooding to:
  Name           Type           NhType           Index
  ge-11/0/3.0    CE
  ge-11/1/4.100  CE
  ge-11/1/1.100  CE
  ge-11/1/0.100  CE
  xe-10/2/0.100  CE
  xe-10/0/0.100  CE
```

```
Flood route prefix: 0x3d80/17
Flood route type: ALT_ROOT_RT
Flood route owner: ge-11/1/0.100
Nexthop type: flood
Nexthop index: 425
  Interfaces Flooding to:
  Name           Type           NhType           Index
  ge-11/0/3.0    CE
  ge-11/1/4.100  CE
  ge-11/1/1.100  CE
  ge-11/1/0.100  CE
  xe-10/2/0.100  CE
  xe-10/0/0.100  CE
```

```
Flood route prefix: 0x3e80/17
Flood route type: ALT_ROOT_RT
Flood route owner: xe-10/2/0.100
Nexthop type: flood
Nexthop index: 425
  Interfaces Flooding to:
  Name           Type           NhType           Index
  ge-11/0/3.0    CE
  ge-11/1/4.100  CE
  ge-11/1/1.100  CE
  ge-11/1/0.100  CE
  xe-10/2/0.100  CE
  xe-10/0/0.100  CE
```

```
Flood route prefix: 0x3f80/17
Flood route type: ALT_ROOT_RT
Flood route owner: xe-10/0/0.100
Nexthop type: flood
Nexthop index: 425
  Interfaces Flooding to:
  Name           Type           NhType           Index
  ge-11/0/3.0    CE
  ge-11/1/4.100  CE
  ge-11/1/1.100  CE
  ge-11/1/0.100  CE
  xe-10/2/0.100  CE
  xe-10/0/0.100  CE
```

```
Name: vs1::vlan200
CEs: 5
VEs: 0
```

```
Flood route prefix: 0x39/16
Flood route type: ALL_FLOOD
```

Flood route owner: __vs1+vlan200__

Nexthop type: flood

Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

Flood route prefix: 0x39/16

Flood route type: RE_FLOOD

Flood route owner: __vs1+vlan200__

Nexthop type: flood

Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

Flood route prefix: 0x4180/17

Flood route type: ALT_ROOT_RT

Flood route owner: ge-11/1/0.200

Nexthop type: flood

Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

Flood route prefix: 0x4080/17

Flood route type: ALT_ROOT_RT

Flood route owner: ge-11/1/1.200

Nexthop type: flood

Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

Flood route prefix: 0x4280/17

Flood route type: ALT_ROOT_RT

Flood route owner: ge-11/1/4.200

Nexthop type: flood

Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		


```
xe-10/0/0.200    CE
xe-10/2/0.200    CE
```

```
Flood route prefix: 0x4480/17
Flood route type: ALT_ROOT_RT
Flood route owner: xe-10/0/0.200
Nexthop type: flood
Nexthop index: 427
```

```
  Interfaces Flooding to:
```

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

```
Flood route prefix: 0x4380/17
Flood route type: ALT_ROOT_RT
Flood route owner: xe-10/2/0.200
Nexthop type: flood
Nexthop index: 427
```

```
  Interfaces Flooding to:
```

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

show bridge mac-table

Syntax **show bridge mac-table**
 <age>
 <brief | count | detail | extensive>
 <bridge-domain (all | *bridge-domain-name*)>
 <global-count>
 <instance *instance-name*>
 <interface *interface-name*>
 <mac-address>
 <instance *instance-name*>
 <vlan-id (all-vlan | *vlan-id*)>

Release Information Command introduced in Junos OS Release 8.4.
 Command introduced in Junos OS Release 15.1
 Support for PBB-EVPN instance added in Junos OS Release 16.1
 MAC Flag P to indicate a MAC Pinned interface introduced in Junos OS 16.2

Description (MX Series routers only) Display Layer 2 MAC address information.

Options **none**—Display all learned Layer 2 MAC address information.

age— (Optional) Display age of a single mac-address.

brief | count | detail | extensive—(Optional) Display the specified level of output.

bridge-domain (all | *bridge-domain-name*)—(Optional) Display learned Layer 2 MAC addresses for all bridging domains or for the specified bridging domain.

global-count—(Optional) Display the total number of learned Layer 2 MAC addresses on the system.

instance *instance-name*—(Optional) Display learned Layer 2 MAC addresses for the specified routing instance.

interface *interface-name*—(Optional) Display learned Layer 2 MAC addresses for the specified interface.

mac-address—(Optional) Display the specified learned Layer 2 MAC address information.

vlan-id (all-vlan | *vlan-id*)—(Optional) Display learned Layer 2 MAC addresses for all VLANs or for the specified VLAN.

Additional Information When Layer 2 protocol tunneling is enabled, the tunneling MAC address 01:00:0c:cd:cd:d0 is installed in the MAC table. When the Cisco Discovery Protocol (CDP), Spanning Tree Protocol (STP), or VLAN Trunk Protocol (VTP) is configured for Layer 2 protocol tunneling on an interface, the corresponding protocol MAC address is installed in the MAC table.

Required Privilege Level view

List of Sample Output [show bridge mac-table on page 2576](#)
[show bridge mac-table \(with Layer 2 Services over GRE Interfaces\) on page 2576](#)
[show bridge mac-table \(with VXLAN enabled\) on page 2577](#)
[show bridge mac-table age \(for GE interface\) on page 2577](#)
[show bridge mac-table age \(for AE interface\) on page 2577](#)
[show bridge mac-table count on page 2577](#)
[show bridge mac-table detail on page 2578](#)
[show bridge mac-table instance pbb-evpn on page 2578](#)
[show bridge mac-table on page 2578](#)

Output Fields [Table 229 on page 2575](#) describes the output fields for the **show bridge mac-table** command. Output fields are listed in the approximate order in which they appear.

Table 229: show bridge mac-table Output Fields

Field Name	Field Description
Age	Age of a single mac-address.
Routing instance	Name of the routing instance.
Bridging domain	Name of the bridging domain.
MAC address	MAC address or addresses learned on a logical interface.
MAC flags	Status of MAC address learning properties for each interface: <ul style="list-style-type: none"> • S—Static MAC address is configured. • D—Dynamic MAC address is configured. • L—Locally learned MAC address is configured. • C—Control MAC address is configured. • SE—MAC accounting is enabled. • NM—Non-configured MAC. • R—Remote PE MAC address is configured. • P—MAC Pinned interface is configured
Logical interface	Name of the logical interface.
MAC count	Number of MAC addresses learned on the specific routing instance or interface.
Learning interface	Name of the logical interface on which the MAC address was learned.
Learning VLAN	VLAN ID of the routing instance or bridge domain in which the MAC address was learned.
VXLAN ID/VXLAN	VXLAN Network Identifier (VNI).

Table 229: show bridge mac-table Output Fields (continued)

Field Name	Field Description
Layer 2 flags	Debugging flags signifying that the MAC address is present in various lists.
Epoch	Spanning Tree Protocol epoch number identifying when the MAC address was learned. Used for debugging.
Sequence number	Sequence number assigned to this MAC address. Used for debugging.
Learning mask	Mask of the Packet Forwarding Engines where this MAC address was learned. Used for debugging.
IPC generation	Creation time of the logical interface when this MAC address was learned. Used for debugging.

Sample Output

show bridge mac-table

```

user@host> show bridge mac-table

MAC flags (S -static MAC, D -dynamic MAC, L -locally learned, C -Control MAC
          SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : default-switch
Bridging domain : test1, VLAN : 1
  MAC          MAC          Logical   NH      RTR
  address      flags      interface Index  ID
01:00:0c:cc:cc:cc S,NM      NULL
01:00:0c:cc:cc:cd S,NM      NULL
01:00:0c:cd:cd:d0 S,NM      NULL
64:87:88:6a:17:d0 D          ae0.1
64:87:88:6a:17:f0 D          ae0.1

```

show bridge mac-table (with Layer 2 Services over GRE Interfaces)

```

user@host> show bridge mac-table

MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
          SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : default-switch
Bridging domain : vlan-1, VLAN : 1
  MAC          MAC          Logical   NH      RTR
  address      flags      interface Index  ID
00:01:01:00:01:f7 D,SE      gr-1/2/10.0
00:03:00:32:01:f7 D,SE      gr-1/2/10.0
00:00:21:11:11:10 DL         ge-1/0/0.0
00:00:21:11:11:11 DL         ge-1/1/0.0

Routing instance : default-switch
Bridging domain : vlan-2, VLAN : 2
  MAC          MAC          Logical

```

address	flags	interface
00:02:01:33:01:f7	D,SE	gr-1/2/10.1
00:00:21:11:21:10	DL	ge-1/0/0.1
00:00:21:11:21:11	DL	ge-1/1/0.1

show bridge mac-table (with VXLAN enabled)

```
user@host> show bridge mac-table
```

MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : default-switch
Bridging domain : vlan-1, VLAN : 1
VXLAN: Id : 100, Multicast group: 233.252.0.1

MAC address	MAC flags	Logical interface
00:01:01:00:01:f7	D,SE	vtep.1052010
00:03:00:32:01:f7	D,SE	vtep.1052011
00:00:21:11:11:10	DL	ge-1/0/0.0
00:00:21:11:11:11	DL	ge-1/1/0.0

Routing instance : default-switch
Bridging domain : vlan-2, VLAN : 2, VXLAN : 200
VXLAN: Id : 200, Multicast group: 233.252.0.2

MAC address	MAC flags	Logical interface
00:02:01:33:01:f7	D,SE	vtep.1052010
00:04:00:14:01:f7	D,SE	vtep.1052011
00:00:21:11:21:10	DL	ge-1/0/0.1
00:00:21:11:21:11	DL	ge-1/1/0.1

show bridge mac-table age (for GE interface)

```
user@host> show vpls mac-table age 00:02:03:aa:bb:1a instance vpls_instance_1
```

MAC Entry Age information
Current Age: 4 seconds

show bridge mac-table age (for AE interface)

```
user@host> show vpls mac-table age 00:02:03:aa:bb:1a instance vpls_instance_1
```

MAC Entry Age information
Current Age on FPC1: 102 seconds
Current Age on FPC2: 94 seconds

show bridge mac-table count

```
user@host> show bridge mac-table count
```

2 MAC address learned in routing instance vs1 bridge domain vlan100

MAC address count per interface within routing instance:

Logical interface	MAC count
ge-11/0/3.0	1
ge-11/1/4.100	0

```

ge-11/1/1.100          0
ge-11/1/0.100          0
xe-10/2/0.100          1
xe-10/0/0.100          0

MAC address count per learn VLAN within routing instance:
  Learn VLAN ID      MAC count
           0          2

0 MAC address learned in routing instance vs1 bridge domain vlan200

MAC address count per interface within routing instance:
  Logical interface    MAC count
ge-11/1/0.200         0
ge-11/1/1.200         0
ge-11/1/4.200         0
xe-10/0/0.200         0
xe-10/2/0.200         0

MAC address count per learn VLAN within routing instance:
  Learn VLAN ID      MAC count
           0          0

```

show bridge mac-table detail

```

user@host> show bridge mac-table detail

MAC address: 00:00:00:19:1c:db
  Routing instance: vs1
  Bridging domain: vlan100
  Learning interface: ge-11/0/3.0   Learning VLAN: 0
  Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
  Epoch: 4                          Sequence number: 0
  Learning mask: 0x800              IPC generation: 0

MAC address: 00:00:00:59:3a:2f
  Routing instance: vs1
  Bridging domain: vlan100
  Learning interface: xe-10/2/0.100 Learning VLAN: 0
  Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
  Epoch: 7                          Sequence number: 0
  Learning mask: 0x400              IPC generation: 0

```

show bridge mac-table instance pbb-evpn

```

user@host> show bridge mac-table instance pbb-evpn

Routing instance : pbb-evpn
Bridging domain : isid-bd10000, ISID : 10000
  MAC          MAC      Logical      NH      RTR
  address      flags     interface   Index   ID
  00:19:e2:b0:76:eb  D      cbp.1000   1048576 1048576
  aa:bb:cc:dd:ee:f2  DC                      1048575 1048575
  aa:bb:cc:dd:ee:f3  DC                      1048575 1048575

```

show bridge mac-table

```

user@host>run show bridge mac-table

```

MAC flags (S -static MAC, D -dynamic MAC, L -locally learned, C -Control MAC
O -OVSDB MAC, SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC,
P -Pinned MAC)

Routing instance : VS-541
Bridging domain : 541, VLAN : 541
MAC MAC Logical NH RTR
address flags interface Index ID
00:00:01:00:00:01 DPRC xe-0/0/3.0
00:00:02:00:00:01 DP xe-0/0/3.0

show bridge statistics

Syntax	show bridge statistics <bridge-domain <i>domain-name</i>> <instance <i>instance-name</i>>
Release Information	Command introduced in Junos OS Release 8.4.
Description	(MX Series routers only) Display bridge statistics.
Options	<p>none—Display bridge statistics for all bridge domains in all routing instances.</p> <p>bridge-domain <i>domain-name</i>—(Optional) Display statistics for the specified bridge domain.</p> <p>instance <i>instance-name</i>—(Optional) Display statistics for the specified routing instance.</p>
Required Privilege Level	view
List of Sample Output	show bridge statistics on page 2580

Sample Output

show bridge statistics

```

user@host> show bridge statistics
Information for routing instance:

Routing instance : __juniper_private1__
  Index: 1                      Sequence number: 0
  MAC limit: 5000                MACs learned: 0
  Static MACs learned: 0         Non config Static MACs learned: 0
  Handle: 0x829e800

Information for routing instance:

Routing instance : vs1
  Bridging domain : vlan100
  Index: 3                      Sequence number: 0
  MAC limit: 5120                MACs learned: 2
  Static MACs learned: 0         Non config Static MACs learned: 0
  Handle: 0x829e400
  Flags: Bridge instance, Config defined, VLAN : 100
  Local interface: ge-11/0/3.0, Index: 79
    Broadcast packets:          1
    Broadcast bytes :           65
    Multicast packets:          0
    Multicast bytes :           0
    Flooded packets :           0
    Flooded bytes :             0
    Unicast packets :           358624489

```



```

    Unicast bytes      :          23310592305
    Current MAC count:          1 (Limit 1024)
Local interface: ge-11/1/4.100, Index: 84
    Broadcast packets:          0
    Broadcast bytes   :          0
    Multicast packets:          0
    Multicast bytes   :          0
    Flooded packets   :          0
    Flooded bytes     :          0
    Unicast packets   :          0
    Unicast bytes     :          0
    Current MAC count:          0 (Limit 1024)
Local interface: ge-11/1/1.100, Index: 86
    Broadcast packets:          0
    Broadcast bytes   :          0
    Multicast packets:          0
    Multicast bytes   :          0
    Flooded packets   :          0
    Flooded bytes     :          0
    Unicast packets   :          0
    Unicast bytes     :          0
    Current MAC count:          0 (Limit 1024)
Local interface: ge-11/1/0.100, Index: 87
    Broadcast packets:          0
    Broadcast bytes   :          0
    Multicast packets:          0
    Multicast bytes   :          0
    Flooded packets   :          0
    Flooded bytes     :          0
    Unicast packets   :          0
    Unicast bytes     :          0
    Current MAC count:          0 (Limit 1024)
Local interface: xe-10/2/0.100, Index: 88
    Broadcast packets:          0
    Broadcast bytes   :          0
    Multicast packets:          0
    Multicast bytes   :          0
    Flooded packets   :          0
    Flooded bytes     :          0
    Unicast packets   :          358627393
    Unicast bytes     :          23310781065
    Current MAC count:          1 (Limit 1024)
Local interface: xe-10/0/0.100, Index: 89
    Broadcast packets:          0
    Broadcast bytes   :          0
    Multicast packets:          0
    Multicast bytes   :          0
    Flooded packets   :          0
    Flooded bytes     :          0
    Unicast packets   :          0
    Unicast bytes     :          0
    Current MAC count:          0 (Limit 1024)

```

Information for routing instance:

```

Routing instance : vs1
Bridging domain : vlan200
Index: 4                      Sequence number: 0
MAC limit: 5120                MACs learned: 0
Static MACs learned: 0         Non config Static MACs learned: 0

```

```
Handle: 0x829e600
Flags: Bridge instance, Config defined, VLAN : 200
Local interface: ge-11/1/0.200, Index: 90
  Broadcast packets: 0
  Broadcast bytes : 0
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 0
  Unicast bytes : 0
  Current MAC count: 0 (Limit 1024)
Local interface: ge-11/1/1.200, Index: 91
  Broadcast packets: 0
  Broadcast bytes : 0
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 0
  Unicast bytes : 0
  Current MAC count: 0 (Limit 1024)
Local interface: ge-11/1/4.200, Index: 92
  Broadcast packets: 0
  Broadcast bytes : 0
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 0
  Unicast bytes : 0
  Current MAC count: 0 (Limit 1024)
Local interface: xe-10/0/0.200, Index: 93
  Broadcast packets: 0
  Broadcast bytes : 0
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 0
  Unicast bytes : 0
  Current MAC count: 0 (Limit 1024)
Local interface: xe-10/2/0.200, Index: 94
  Broadcast packets: 4
  Broadcast bytes : 260
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 0
  Unicast bytes : 0
  Current MAC count: 0 (Limit 1024)
```

show l2-learning global-information

Syntax	<code>show l2-learning global-information</code>
Release Information	Command introduced in Junos OS Release 8.4.
Description	(MX Series routers only) Display Layer 2 learning process-related information for the entire router.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show l2-learning global-information on page 2583
Output Fields	Table 230 on page 2583 describes the output fields for the show l2-learning global-information command. Output fields are listed in the approximate order in which they appear.

Table 230: show l2-learning global-information Output Fields

Field Name	Field Description
MAC aging interval	Configured timeout interval, in seconds, for all MAC table entries.
MAC learning	Status of MAC learning: Enabled or Disabled .
MAC statistics	Status of MAC accounting: Enabled or Disabled .
MAC limit Count	Configured maximum limit on the number of MAC addresses that can be learned.
MAC limit hit flag	Status of the learned MAC limit hit flag: Enabled (the learned MAC exceeds the global MAC limit) or Disabled (the learned MAC does not exceed the global MAC limit).
MAC packet action drop	Status of action to drop packets after the configured MAC address limit is reached: Enabled (packets are dropped) or Disabled (packets are forwarded).

Sample Output

show l2-learning global-information

```
user@host> show l2-learning global-information
Global Configuration:
```

```
MAC aging interval      : 300
MAC learning            : Enabled
MAC statistics          : Disabled
MAC limit Count         : 393215
MAC limit hit flag      : Disabled
MAC packet action drop: Disabled
```

show l2-learning global-mac-count

Syntax	<code>show l2-learning global-mac-count</code>
Release Information	Command introduced in Junos OS Release 9.3.
Description	(MX Series routers only) Display the total number of dynamic and static MAC addresses learned for the entire router.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show l2-learning global-mac-count on page 2585
Output Fields	Displays the total number of dynamic and static MAC addresses learned for the entire router.

Sample Output

show l2-learning global-mac-count

```
user@host> show l2-learning global-mac-count
100 dynamic and static MAC addresses learned globally
```

show l2-learning instance

Syntax	show l2-learning instance
Release Information	(MX Series routers only) Command introduced in Junos OS Release 8.4.
Description	Display Layer 2 learning properties for all the configured routing instances.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show l2-learning instance on page 2587
Output Fields	Table 231 on page 2586 describes the output fields for the show l2-learning instance command. Output fields are listed in the approximate order in which they appear.

Table 231: show l2-learning instance Output Fields

Field Name	Field Description
Routing Instance	Name of routing instance.
Bridging Domain	Name of bridging domain. On MX Series routers you can use the show l2-learning instance <extensive> command option to display the Bridge Service-id information which includes the Config Service ID and the Active Service ID.
Index	Number associated with the routing instance or bridging domain.
Logical System	Name of logical system or Default if no logical system is configured.
Routing instance flags	Status of Layer 2 learning properties for each routing instance: <ul style="list-style-type: none"> • DL—MAC learning is disabled. • SE—MAC accounting is enabled. • AD—Packets are dropped after MAC address limit is reached. • LH—The maximum number of MAC addresses has been learned on the routing instance. The routing instance is not able to learn any additional MAC addresses.
MAC limit	Maximum number of MAC addresses that can be learned from each interface in the routing instance or bridging domain.

Sample Output

show l2-learning instance

```
user@host> show l2-learning instance
```

```
Information for routing instance:
```

```
Routing Instance flags (DL -disable learning, SE -stats enabled,  
AD -packet action drop, LH -mac limit hit)
```

Routing Instance	Bridging Domain	Index	Logical System	Routing flags	MAC limit
__juniper_private1__		1	Default		5000
vs1	vlan100	3	Default		5120
vs1	vlan200	4	Default		5120

show l2-learning interface

Syntax	show l2-learning interface
Release Information	Command introduced in Junos OS Release 8.4. Added sample output to indicate an EVPN MAC Pinned interface, introduced in Junos OS 16.2R1.
Description	(MX Series routers only) Display Layer 2 learning information for all the interfaces.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show l2-learning interface on page 2588 show l2 learning-interface on page 2589
Output Fields	Table 232 on page 2588 describes the output fields for the show l2-learning interface command. Output fields are listed in the approximate order in which they appear.

Table 232: show l2-learning interface Output Fields

Field Name	Field Description
Logical interface	Name of the logical interface.
Index	Index of the interface.
Routing Instance	Number of the routing instance to which the interface belongs.
Interface device	Value of the order in which the Junos OS finds and initializes the interface.
Logical interface flags	Status of Layer 2 learning properties for each interface: <ul style="list-style-type: none"> • DL—MAC learning is disabled. • SE—MAC accounting is enabled. • AD—Packets are dropped after the MAC interface limit is reached. • MAC limit—Maximum number of MAC addresses that can be learned from the interface. • MP—MAC Pinning enabled.

Sample Output

show l2-learning interface

```
user@host> show l2-learning interface
```


Information for interface family:

Logical Interface flags (DL -disable learning, SE -stats enabled,
AD -packet action drop, LH -mac limit hit)

Logical interface	Index	Routing instance	Interface device	Logical Interface flags	MAC limit
ge-11/0/3.0	79	3	136		1024
ge-11/1/4.100	84	3	150		1024
ge-11/1/1.100	86	3	147		1024
ge-11/1/0.100	87	3	146		1024
xe-10/2/0.100	88	3	144		1024
xe-10/0/0.100	89	3	129		1024
ge-11/1/0.200	90	4	146		1024
ge-11/1/1.200	91	4	147		1024
ge-11/1/4.200	92	4	150		1024
xe-10/0/0.200	93	4	129		1024
xe-10/2/0.200	94	4	144		1024

show l2 learning-interface

user@host> run show l2-learning interface

Routing Instance Name : default-switch

Logical Interface flags (DL -disable learning, AD -packet action drop,
LH - MAC limit hit, DN - Interface Down, MP - MAC Pinning
enabled)

Logical Interface	BD Name	MAC Limit	STP State	Logical Interface flags
ae0.0		8192		MP

show mac-rewrite interface

Syntax	show mac-rewrite interface <brief detail> <interface-name>
Release Information	Command introduced in Junos OS Release 9.1. Command introduced in Junos OS Release 14.1X53-D10 for EX4300 switches. Command introduced in Junos OS Release 15.1X53-D55 for EX2300 and EX3400 switches. Command introduced in Junos OS Release 17.4R1 for EX4600 switches.
Description	Display Layer 2 protocol tunneling (L2PT) information.
Options	brief detail —(Optional) Display the specified level of output. interface interface-name —(Optional) Display L2PT information for the specified interface.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • <i>layer2-control</i> • <i>mac-rewrite</i> • <i>protocol</i> • <i>Layer2 Protocol Tunneling Through a Network</i> • <i>Layer 2 Protocol Tunnel Configuration Guidelines</i> • <i>Configuring Layer 2 Protocol Tunneling</i> • <i>Understanding Layer 2 Protocol Tunneling on EX Series Switches</i> • <i>Configuring Layer 2 Protocol Tunneling on EX Series Switches with ELS Support</i>
List of Sample Output	show mac-rewrite interface on page 2591 show mac-rewrite interface (EX Series Switches) on page 2591
Output Fields	Table 233 on page 2590 lists the output fields for the show mac-rewrite interface command. Output fields are listed in the approximate order in which they appear.

Table 233: show mac-rewrite interface Output Fields

Field Name	Field Description	Level of Output
Interface	Name of the interface on which L2PT is configured.	brief detail

Table 233: *show mac-rewrite interface* Output Fields (continued)

Field Name	Field Description	Level of Output
Protocols	<p>Layer 2 protocols being tunneled on this interface.</p> <p>All devices that support L2PT can tunnel the following protocols: Cisco Discovery Protocol (CDP), Spanning Tree Protocol (STP), or VLAN Trunk Protocol (VTP).</p> <p>The following Layer 2 protocols can also be tunneled on some devices that support L2PT: E-LMI, GVRP, IEEE 802.1X, IEEE 802.3AH, LACP, LLDP, MMRP, MVRP, PVSTP+, UDLD, or VSTP. See <i>protocol</i> for more information on the supported protocols for tunneling on different devices.</p>	brief detail

Sample Output

show mac-rewrite interface

```
user@host> show mac-rewrite interface
```

Interface	Protocols
ge-1/0/5	STP VTP CDP PVSTP+

show mac-rewrite interface (EX Series Switches)

```
user@switch> show mac-rewrite interface
```

Interface	Protocols
ge-0/0/1	802.3AH LLDP STP

CHAPTER 30

VPN Operational Commands

- `clear vpls mac-address`
- `clear vpls mac-table`
- `request l2circuit-switchover`
- `show dynamic-tunnels database`
- `show hfrr profiles`
- `show ingress-replication mvpn`
- `show l2circuit connections`
- `show l2vpn connections`
- `show mvpn c-multicast`
- `show mvpn instance`
- `show mvpn neighbor`
- `show vpls connections`
- `show vpls flood event-queue`
- `show vpls flood instance`
- `show vpls flood route`
- `show vpls mac-table`
- `show vpls statistics`

clear vpls mac-address

Syntax `clear vpls mac-address`
 `<instance instance-name>`
 `<logical-system (all | logical-system-name)>`
 `<mac-address>`

Release Information Command introduced before Junos OS Release 7.4.

Description (T Series and M Series routers, except for the M160 router) Clear media access control (MAC) address entries from the virtual private LAN service (VPLS) table.

Options **none**—Clear all MAC address entries from the VPLS table for all routing instances.

instance *instance-name*—(Optional) Clear all MAC address entries for a VPLS instance from the VPLS table.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

mac-address—(Optional) Clear a specific MAC address in a VPLS instance from the VPLS table.

Required Privilege Level maintenance

List of Sample Output [clear vpls mac-address on page 2594](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

`clear vpls mac-address`

```
user@host> clear vpls mac-address
```

clear vpls mac-table

Syntax	<pre>clear vpls mac-table <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)> <mac-address> <vlan-id></pre>
Release Information	Command introduced before Junos OS Release 9.5.
Description	(MX Series routers) Clear media access control (MAC) addresses from the virtual private LAN service (VPLS) MAC table.
Options	<p>none—Clear all MAC addresses from the VPLS table for all routing instances.</p> <p>instance <i>instance-name</i>—(Optional) Clear all MAC addresses for a VPLS instance from the VPLS table.</p> <p>interface <i>interface-name</i>—(Optional) Clear all MAC addresses for a VPLS interface from the VPLS table.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>mac-address—(Optional) Clear a specific MAC address in a VPLS instance from the VPLS table.</p> <p>vlan-id—(Optional) Clear MAC addresses on a specified VLAN (0 through 4095).</p>
Required Privilege Level	maintenance
List of Sample Output	clear vpls mac-table on page 2595
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear vpls mac-table

```
user@host> clear vpls mac-table
```

request l2circuit-switchover

Syntax	<pre>request l2circuit-switchover <logical-system (all logical-system-name)> <neighbor address> <virtual-circuit-id identifier></pre>
Release Information	Command introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.
Description	Manually trigger a switch from the active pseudowire to the redundant pseudowire. This command can be useful when performing network maintenance.
Options	<p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>neighbor <i>address</i>—(Optional) Trigger a switch of all of the active pseudowire connections with the specified neighbor to their respective redundant pseudowires.</p> <p>virtual-circuit-id <i>identifier</i>—(Optional) Trigger a switch from the active pseudowire connection of the specified Layer 2 circuit to its redundant pseudowire.</p>
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• <i>MPLS Feature Support on QFX Series and EX4600 Switches</i>
List of Sample Output	request l2circuit-switchover virtual-circuit-id on page 2596
Output Fields	When you enter this command, you are provided feedback on the status of your request.

Sample Output

request l2circuit-switchover virtual-circuit-id

```
user@host>request l2circuit-switchover virtual-circuit-id 12
```


show dynamic-tunnels database

Syntax show dynamic-tunnels database
 <destination>
 <logical-system (all | *logical-system-name*) >
 <table *routing-table-name*>

Release Information Command introduced before Junos OS Release 7.4.

Description Display dynamic tunnel database information.

Options **none**—Display dynamic tunnel database information for all destinations and routing tables.

destination—(Optional) Display database entries for the specified IP address (with optional destination prefix length) only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

table *routing-table-name*—(Optional) Display database entries for the specified table only.

Required Privilege Level view

List of Sample Output [show dynamic-tunnels database \(Tunnel Is Up\) on page 2598](#)
[show dynamic-tunnels database \(No Tunnel PIC\) on page 2598](#)
[show dynamic-tunnels database \(Tunnel Is Expiring\) on page 2599](#)
[show dynamic-tunnels database \(Destination Specified\) on page 2599](#)
[show dynamic-tunnels database \(Localization\) on page 2599](#)
[show dynamic-tunnels database \(MPLS-over-UDP Dynamic Tunnels on PTX Series Routers and QFX Series Switches\) on page 2599](#)

Output Fields [Table 234 on page 2597](#) lists the output fields for the **show dynamic-tunnels database** command. Output fields are listed in the approximate order in which they appear.

Table 234: show dynamic-tunnels database Output Fields

Field Name	Field Description
Table	Name of the routing table (for example, <i>inet.0</i>).
Destination-network	Destination IP address and subnet.
Tunnel to	Destination IP address and prefix of the tunnel.
State	State of the tunnel: Up , Up (expires in <i>nn:nn:nn</i>seconds) , or Dn (down).

Table 234: show dynamic-tunnels database Output Fields (continued)

Field Name	Field Description
Reference count	Number of routes across the dynamic tunnel that are currently being resolved.
Next-hop type	Type of tunnel: GRE or UDP (BGP-Signal).
Source address	Source IP address of the tunnel.
Next-hop	IP address of the destination interface.
VPN Label	The label provided by the peer device to identify the VPN through which the packet needs to go. This label is used to identify the VRF for route lookup.
Ingress Route	The IGP route along with the corresponding metric that has been selected for forwarding the tunnel-encapsulated packet.
Localized PFE	Packet Forwarding Engine interface which is the anchor Packet Forwarding Engine for the localized next-hop-based dynamic tunnels. When the anchor Packet Forwarding Engine of the tunnel goes down, it is represented by a # near the Packet Forwarding Engine name.
State	State of the destination interface: Up, Dn, or Dn (no tunnel pic).

Sample Output

show dynamic-tunnels database (Tunnel Is Up)

```

user@host> show dynamic-tunnels database
Table: inet.3
Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32
Reference count: 4
Next-hop type: UDP
Source address: 10.255.120.92
Next hop: tunnel-composite, 0x31132f64, nhid 3406
VPN Label: Push 120 Reference count: 3
Ingress Route: 10.255.120.94/32, via metric 2
Traffic Statistics: Packets 241367951, Bytes 356741831578
State: Up

```

show dynamic-tunnels database (No Tunnel PIC)

```

user@host> show dynamic-tunnels database
Table: inet.3
Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32 State: Dn
Reference count: 2

```

```

Next-hop type: gre
Source address: 10.255.120.92
State: Dn (no tunnel pic)

```

show dynamic-tunnels database (Tunnel Is Expiring)

```

user@host> show dynamic-tunnels database

Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32 State: Up (expires in 00:14:56 seconds)
Reference count: 0
Next-hop type: gre
Source address: 10.255.120.92
Next hop: gr-4/3/0.32769
State: Up

```

show dynamic-tunnels database (Destination Specified)

```

user@host> show dynamic-tunnels database 10.255.120.94

Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32 State: Up
Reference count: 2
Next-hop type: gre
Source address: 10.255.120.92
Next hop: gr-4/3/0.32769
State: Up

```

show dynamic-tunnels database (Localization)

```

user@host> show dynamic-tunnels database

Destination-network: 1.0.0.0/8
Tunnel to: 1.1.1.6/32
Reference count: 5
Next-hop type: UDP
Source address: 1.1.1.2
Next hop: tunnel-composite, 0xc807930, nhid 1016
Localized PFE: pfe-1/0/0
VPN Label: Push 299808 Reference count: 4
Ingress Route: 1.1.1.6/32, via metric 2
Traffic Statistics: Packets 0, Bytes 0
State: Up

```

show dynamic-tunnels database (MPLS-over-UDP Dynamic Tunnels on PTX Series Routers and QFX Series Switches)

```

user@host> show dynamic-tunnels database

*- Signal Tunnels #- PFE-down
Table: inet.3

Destination-network: 22.33.0.0/16

Destination-network: 22.33.44.0/24

```


show hfrr profiles

Syntax `show hfrr profiles
<brief |extensive>`

Release Information Command introduced in Junos OS Release 12.2.

Description Display host fast reroute (HFRR) profile information.

HFRR adds a precomputed protection path into the Packet Forwarding Engine, such that if a link between a provider edge device and a server farm becomes unusable for forwarding, the Packet Forwarding Engine can use another path without having to wait for the router or the protocols to provide updated forwarding information.

Options **none**—Display information about HFRR profiles.

brief | extensive—(Optional) Display the specified level of output.

Required Privilege Level view

Related Documentation

- *Example: Configuring Link Protection with Host Fast Reroute*

List of Sample Output [show hfrr profiles on page 2602](#)

Output Fields [Table 235 on page 2601](#) describes the output fields for the **show hfrr profiles** command. Output fields are listed in the approximate order in which they appear.

Table 235: show hfrr profiles Output Fields

Field Name	Field Description
HFRR	
HFRR current state	Status of the HFRR profile: HFRR_ACTIVE, HFRR_INACTIVE, HFRR_IFLH-NOT-CONF, and so on.
HFRR Prefix limit blackout timer expiry (in secs)	Time interval between an HFRR profile becoming inactive on exceeding the ARP prefix limit, and the profile starting the SYNC process.
HFRR prefix limit hit count	Number of times that an HFRR profile becomes inactive on exceeding the ARP prefix limit.
HFRR protected IFL name	Interface configured for the HFRR feature.
HFRR protected IFL handle	

Table 235: show hfr profiles Output Fields (continued)

Field Name	Field Description
HFRR routing instance name	The routing instance in which the HFRR interface is configured.
HFRR routing instance handle	
HFRR sync BG scheduled	
HFRR RTS filter on	
HFRR delete BG scheduled	
HFRR ARP prefix limit	Configured ARP prefix limit.
HFRR ARP supplementary blackout timeout (in mins)	Supplementary time-out value configured for profile to be inactive when it hits ARP prefix limit.
HFRR number of ARP routes learned	Number of ARP routes learned on the configured interface.
HFRR number of FRR routes created	Number of ARP routes created on the configured interface.

Sample Output

show hfr profiles

```

user@host> show hfr profiles
HFRR pointer: 0x9254000
HFRR current state: HFRR_ACTIVE
HFRR Prefix limit blackout timer expiry (in secs): 0
HFRR prefix limit hit count: 0
HFRR protected IFL name: ge-4/1/0.0
HFRR protected IFL handle: 0x9248738
HFRR routing instance name: test
HFRR routing instance handle: 0x9145740
HFRR sync BG scheduled: NO
HFRR RTS filter on: YES
HFRR delete BG scheduled: NO
HFRR ARP prefix limit: 0
HFRR ARP supplementary blackout timeout (in mins): 1
HFRR number of ARP routes learned: 4
HFRR number of FRR routes created: 2

```

show ingress-replication mvpn

Syntax show ingress-replication mvpn

Release Information Command introduced in Junos OS Release 10.4.

Description Display the state and configuration of the ingress replication tunnels created for the MVPN application when using the **mpls-internet-multicast** routing instance type.

Required Privilege Level View

List of Sample Output [show ingress-replication mvpn on page 2603](#)

Output Fields [Table 236 on page 2603](#) lists the output fields for the **show ingress-replication mvpn** command. Output fields are listed in the approximate order in which they appear.

Table 236: show ingress-replication mvpn Output Fields

Field Name	Field Description
Ingress tunnel	Identifies the MVPN ingress replication tunnel.
Application	Identifies the application (MVPN).
Unicast tunnels	List of unicast tunnels in use.
Leaf address	Address of the tunnel.
Tunnel type	Identifies the unicast tunnel type.
Mode	Indicates whether the tunnel was created as a new tunnel for the ingress replication, or if an existing tunnel was used.
State	Indicates whether the tunnel is Up or Down.

Sample Output

show ingress-replication mvpn

```

user@host> show ingress-replication mvpn

Ingress Tunnel: mvpn:1
  Application: MVPN
  Unicast tunnels
    Leaf Address      Tunnel-type      Mode      State
    10.255.245.2      P2P LSP         New       Up
    10.255.245.4      P2P LSP         New       Up
Ingress Tunnel: mvpn:2
  Application: MVPN

```

Unicast tunnels			
Leaf Address	Tunnel-type	Mode	State
10.255.245.2	P2P LSP	Existing	Up

show l2circuit connections

Syntax	<pre>show l2circuit connections <brief extensive summary> <down up up-down> <history> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)> <neighbor <i>neighbor</i>> <status></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Display enhancements in Junos OS Release 9.6.</p> <p>Display enhancements in Junos OS Release 10.2.</p> <p>Display enhancements in Junos OS Release 12.1.</p> <p>Display enhancements in Junos OS Release 13.2.</p> <p>Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.</p>
Description	Display status information about Layer 2 virtual circuits from the local provider edge (PE) router to its neighbors.
Options	<p>none—Display standard information about Layer 2 virtual circuits on all interfaces for all neighbors.</p> <p>brief extensive summary—(Optional) Display the specified level of output. Use history to display information about connection history. Use status to display information about the connection and interface status.</p> <p>down up up-down—(Optional) Display nonoperational, operational, or both kinds of connections.</p> <p>history—(Optional) Display information about connection history.</p> <p>interface <i>interface-name</i>—(Optional) Show all Layer 2 virtual circuits on an interface.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>neighbor <i>neighbor</i>—(Optional) IP address of a specific neighbor.</p> <p>status—(Optional) Display information about the connection and interface status.</p>
Required Privilege Level	view
List of Sample Output	<p>show l2circuit connections on page 2609</p> <p>show l2circuit connections interface on page 2610</p> <p>show l2circuit connections extensive on page 2610</p>

[show l2circuit connections extensive \(Pseudowire Redundancy with Hot Standby\)](#) on page 2611

Output Fields [Table 237 on page 2606](#) lists the output fields for the **show l2circuit connections** command. Output fields are listed in the approximate order in which they appear.

Table 237: show l2circuit connections Output Fields

Field Name	Field Description
Layer-2 Circuit Connections	Displays the legends for connection and interface status.
Neighbor	Remote PE neighbor.
Interface	Logical PE-to-CE interface on which the virtual circuit is configured.
Type	VC type: rmt (remote) or loc (local).

Table 237: *show l2circuit connections Output Fields (continued)*

Field Name	Field Description
Legend for connection status (St)	<p>Status of the virtual circuit connection:</p> <ul style="list-style-type: none"> • EI—The local virtual circuit interface is configured with an encapsulation that is not supported. • MM—The two routers do not agree on an MTU value, which causes an MTU mismatch. • EM—The encapsulation type received on this virtual circuit from the neighbor does not match the local virtual circuit interface encapsulation type. • CM—The two routers do not agree on a control word, which causes a control word mismatch. • VM—The remote and local VLAN IDs do not match across the Layer 2 circuit. • OL—No advertisement has been received for this virtual circuit from the neighbor. There is no outgoing label available for use by this virtual circuit. • NC—The interface is not configured as a CCC or TCC interface. • BK—The virtual circuit has switched to a backup connection. • CB—The remote PE router is advertising a different cell bundle from that configured on the local PE router. • LD—The connection to the local site is signaled down, because the CE-facing interface to the local site is down. • RD—The remote neighbor is down. It has signaled a problem using the pseudowire status code. • NP—The router detects that interface hardware is not present. The hardware may be offline, a PIC may not be of the desired type, or the interface may be configured in a different routing instance. • Dn—The virtual circuit is down. • VC-Dn—The virtual circuit is down because there is no tunnel LSP from the local PE router to the neighbor. • UP—The virtual circuit is operational. • CF—The router cannot find enough bandwidth to the remote router to satisfy the Layer 2 circuit bandwidth requirement. • IB—The bit rate is incompatible for Time Division Multiplexing (TDM). • TDM—TDM is not configured correctly. • ST—The virtual circuit has been switched to a standby connection. • SP—The virtual circuit connection is using a static pseudowire. • RS—The remote site is in a standby state. • XX—The virtual circuit is down for an unknown reason. This is a programming error.
Time last up	Date and time the virtual circuit was last operational.
# Up trans	Number of times the virtual circuit came up.
local-interface-name	Name of the local PE-to-CE interface.
Status	Status of the local interface.
Up	Interface is operational.

Table 237: *show l2circuit connections Output Fields (continued)*

Field Name	Field Description
Dn	Interface is not operational.
NP	Not present. Interface does not exist.
DS	Disabled. Interface has been administratively disabled.
WE	Wrong encapsulation. The interface is not configured as CCC.
UN	Interface status is initialized.
Encapsulation	Encapsulation of the local interface.
Flow Label Transmit	Flow label transmit status.
Flow Label Receive	Flow label receive status.
Remote PE	Prefix of the remote PE router.
Negotiated control-word	Whether the use of the control word has been negotiated for this virtual circuit: Yes (Null) or No .
Incoming label	Label used by the remote side of the virtual circuit to send packets destined to the local side. This label is routed to the local virtual circuit interface.
Outgoing label	Label used by the local side of the virtual circuit to send packets to the remote side of the virtual circuit. Packets originated on the local virtual circuit interface are encapsulated with this label before being placed on the tunnel LSP to the neighbor for this virtual circuit. This label is allocated by the neighbor and is used in demultiplexing incoming packets destined for this virtual circuit.
Negotiated PW status TLV	Displays the pseudowire status type, length, and value (TLV). TLVs are a method of encoding variable-length or optional information. If the pseudowire status TLV is used, the corresponding local or neighbor PE router status code is also displayed.
local PW status code	If the pseudowire status TLV is used, displays the local PE router status code.
Neighbor PW status code	If the pseudowire status TLV is used, displays the neighbor PE router status code.
Local interface	Name of the local interface used for the Layer 2 circuit connection.
Status	Status of the local interface (Up or Down).
Encapsulation	Encapsulation configured for the local interface.
APS-active	Indicates that the interface belongs to the working circuit.

Table 237: *show l2circuit connections Output Fields (continued)*

Field Name	Field Description
APS-inactive	Indicates that the interface belongs to the protect circuit.
Connection protection	Whether or not connection protection is configured for the Layer 2 circuit to the neighbor: Yes or No .
VC bandwidth	Bandwidth requirement of the Layer 2 circuit.
Time	Time at which the event occurred.
Connection History	<p>Event types logged in history.</p> <ul style="list-style-type: none"> • loc intf up—Local virtual circuit interface went up. • loc intf down—Local virtual circuit interface went down. • In lbl Update—Incoming label has been updated. • Out lbl Update—Outgoing label has been updated. • PE route changed—Route to PE router has been updated. • PE route down—Route to PE router is down. • rmt side marked—Remote side is marked. • VC Dn—Remote side indicated that its end of the virtual circuit is down (if the tunnel LSP from the remote side to the local side is down). • status update timer—Status update timer processing. It computes the state of the virtual circuit, and determines whether it should be advertised to or withdrawn from the remote side.

Sample Output

show l2circuit connections

```
user@host> show l2circuit connections
```

```
Layer-2 Circuit Connections:
```

```
Legend for connection status (St)
```

```

EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch    VC-Dn -- Virtual circuit Down
CM -- control-word mismatch     Up -- operational
VM -- vlan id mismatch          CF -- Call admission control failure
OL -- no outgoing label         IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC   TM -- TDM misconfiguration
BK -- Backup Connection         ST -- Standby Connection
CB -- rcvd cell-bundle size bad SP -- Static Pseudowire
LD -- local site signaled down  RS -- remote site standby
RD -- remote site signaled down HS -- hot standby
XX -- unknown

```

```
Legend for interface status
```

```

Up -- operational
Dn -- down

```

```
Neighbor: 10.255.245.51
```

```

Interface                Type  St      Time last up      # Up trans

```

```

ge-2/0/2.600(vc 5)      rmt  Up    Dec 7 18:11:18 2009      1
Remote PE: 10.255.245.51, Negotiated control-word: No
Incoming label: 299856, Outgoing label: 299808
Negotiated PW status TLV: No
Local interface: ge-2/0/2.600, Status: Up, Encapsulation: VLAN
Flow Label Transmit: No, Flow Label Receive: No
Auto-sensed or Programmed by XYZ

```

Sample Output

show l2circuit connections interface

```

user@host> show l2circuit connections interface t1-2/0/0:1:1.0
Layer-2 Circuit Connections:

Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch     VC-Dn -- Virtual circuit Down
CM -- control-word mismatch      Up -- operational
VM -- vlan id mismatch          CF -- Call admission control failure
OL -- no outgoing label         IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC   TM -- TDM misconfiguration
BK -- Backup Connection         ST -- Standby Connection
CB -- rcvd cell-bundle size bad SP -- Static Pseudowire
LD -- local site signaled down  RS -- remote site standby
RD -- remote site signaled down HS -- hot standby
XX -- unknown

Legend for interface status
Up -- operational
Dn -- down
Neighbor: 10.1.1.1

```

Interface	Type	St	Time last up	# Up trans
t1-2/0/0:1:1.0(vc 1)(SP)	rmt	Up	Apr 27 04:21:02 2011	1

```

Remote PE: 10.1.1.1, Negotiated control-word: Yes (Non-null)
Incoming label: 1010001, Outgoing label: 1000001
Negotiated PW status TLV: No
Local interface: t1-1/0/0:1:1.0, Status: Up, Encapsulation: SATOP-T1,
APS-active
Local interface: t1-2/0/0:1:1.0, Status: Up, Encapsulation: SATOP-T1,
APS-inactive

```

Sample Output

show l2circuit connections extensive

```

user@host>show l2circuit connections extensive
Layer-2 Circuit Connections:

Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch     VC-Dn -- Virtual circuit Down
CM -- control-word mismatch      Up -- operational
VM -- vlan id mismatch          CF -- Call admission control failure
OL -- no outgoing label         IB -- TDM incompatible bitrate

```

```

NC -- intf encaps not CCC/TCC    TM -- TDM misconfiguration
BK -- Backup Connection          ST -- Standby Connection
CB -- rcvd cell-bundle size bad  SP -- Static Pseudowire
LD -- local site signaled down   RS -- remote site standby
RD -- remote site signaled down  HS -- hot standby
XX -- unknown

Legend for interface status
Up -- operational
Dn -- down
Neighbor: 10.255.49.149
  Interface                Type St   Time last up      # Up trans
  ae0.0(vc 100)            rmt  Up    Aug 31 09:36:12 2009      1
    Remote PE: 10.255.49.149, Negotiated control-word: Yes (Null)
    Incoming label: 299824, Outgoing label: 299776
    Negotiated PW status TLV: Yes
    local PW status code: 0x00000000, Neighbor PW status code: 0x00000000
    Local interface: ae0.0, Status: Up, Encapsulation: ETHERNET
    Connection protection: Yes
  Connection History:
    Aug 31 09:36:12 2009 status update timer
    Aug 31 09:36:12 2009 PE route changed
    Aug 31 09:36:12 2009 Out lbl Update                      299776
    Aug 31 09:36:12 2009 In lbl Update                        299824
    Aug 31 09:36:12 2009 loc intf up                          ae0.0

```

Sample Output

show l2circuit connections extensive (Pseudowire Redundancy with Hot Standby)

```

user@host>show l2circuit connections extensive

Layer-2 Circuit Connections:

Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch     VC-Dn -- Virtual circuit Down
CM -- control-word mismatch      Up -- operational
VM -- vlan id mismatch          CF -- Call admission control failure
OL -- no outgoing label         IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC    TM -- TDM misconfiguration
BK -- Backup Connection          ST -- Standby Connection
CB -- rcvd cell-bundle size bad  SP -- Static Pseudowire
LD -- local site signaled down   RS -- remote site standby
RD -- remote site signaled down  HS -- Hot-standby Connection
XX -- unknown

Legend for interface status
Up -- operational
Dn -- down
Neighbor: 192.0.2.101
  Interface                Type St   Time last up      # Up trans
  ge-1/3/2.600(vc 1)       rmt  Up    Jan 24 11:00:26 2013      1
    Remote PE: 192.0.2.101, Negotiated control-word: Yes (Null)
    Incoming label: 299776, Outgoing label: 299776
    Negotiated PW status TLV: Yes
    local PW status code: 0x00000000, Neighbor PW status code: 0x00000000
    Local interface: ge-1/3/2.600, Status: Up, Encapsulation: VLAN
    Connection History:

```

```
Jan 24 11:00:26 2013 status update timer
Jan 24 11:00:26 2013 PE route changed
Jan 24 11:00:26 2013 Out lbl Update                299776
Jan 24 11:00:26 2013 In lbl Update                299776
Jan 24 11:00:26 2013 loc intf up                  ge-1/3/2.600
Neighbor: 192.0.2.102
Interface                               Type St   Time last up      # Up trans
ge-1/3/2.600(vc 2)                     rmt  HS    -----          ----
Remote PE: 192.0.2.102, Negotiated control-word: Yes (Null)
Incoming label: 299792, Outgoing label: 299776
Negotiated PW status TLV: Yes
local PW status code: 0x00000020, Neighbor PW status code: 0x00000000
Local interface: ge-1/3/2.600, Status: Up, Encapsulation: VLAN
```


show l2vpn connections

Syntax	<pre>show l2vpn connections <brief extensive> <down up up-down> <history> <instance <i>instance</i>> <instance-history> <local-site <i>local-site</i>> <logical-system (all <i>logical-system-name</i>)> <remote-site <i>remote-site</i>> <status> <summary></pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>instance-history option introduced in Junos OS Release 12.3R2.</p>
Description	Display Layer 2 virtual private network (VPN) connections.
Options	<p>none—Display all Layer 2 VPN connections for all routing instances.</p> <p>brief extensive—(Optional) Display the specified level of output.</p> <p>down up up-down—(Optional) Display nonoperational, operational, or both kinds of connections.</p> <p>history—(Optional) Display information about connection history.</p> <p>instance <i>instance</i>—(Optional) Display connections for the specified routing instance only.</p> <p>instance-history—(Optional) Display information about connection history for a particular instance.</p> <p>local-site <i>local-site</i>—(Optional) Display connections for the specified Layer 2 VPN local site name or ID only.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p>remote-site <i>remote-site</i>—(Optional) Display connection for the specified Layer 2 VPN remote site ID only.</p> <p>status—(Optional) Display information about the connection and interface status.</p> <p>summary—(Optional) Display summary of all Layer 2 VPN connections information.</p>
Required Privilege Level	view

List of Sample Output [show l2vpn connections on page 2616](#)
[show l2vpn connections on page 2617](#)
[show l2vpn connections extensive on page 2618](#)
[show l2vpn connections extensive \(VPWS\) on page 2618](#)

Output Fields [Table 238 on page 2614](#) lists the output fields for the **show l2vpn connections** command. Output fields are listed in the approximate order in which they appear.

Table 238: show l2vpn connections Output Fields

Field Name	Field Description
Instance	Name of Layer 2 VPN instance.
L2vpn-id	For BGP autodiscovery, a globally unique Layer 2 VPN community identifier for the instance.
Local-ID	BGP local-address assigned to the local routing device.
Local site	Name of local site.
Local source-attachment-id	For FEC 129, the VPWS source attachment identifier. The point-to-point nature of VPWS requires that you specify the source access individual identifier (SAII) and the target access individual identifier (TAII). This SAII-TAII pair defines a unique pseudowire between two PE devices.
Target-attachment-id	For FEC 129, the VPWS target attachment identifier. If the configured target identifier matches a source identifier advertised by a remote PE device by way of a BGP auto-discovery message, the pseudowire between that source-target pair is signaled. If there is no match between an advertised source identifier and the configured target identifier, the pseudowire is not established.
Interface name	Name of interface.
Remote Site ID	Remote site ID.
Label Offset	Numbers within the label block that are skipped to find the next label base.
Label-base	Advertises the first label in a block of labels. A remote PE router uses this first label when sending traffic toward the advertising PE router.
Range	Advertises the label block size.
status-vector	Bit vector advertising the state of local PE-CE circuits to remote PE routers. A bit value of 0 indicates that the local circuit and LSP tunnel to the remote PE router are up, whereas a value of 1 indicates either one or both are down.
connection-site	Name of the connection site.
Type	Type of connection: loc (local) or rmt (remote).
St	Status of the connection. (For a list of possible values, see the Legend for connection status (St) field.)

Table 238: *show l2vpn connections Output Fields (continued)*

Field Name	Field Description
Time last up	Time that the connection was last in the Up condition.
# Up trans	Number of transitions from Down to Up condition.
Local circuit	Address and status of local circuit.
Remote circuit	Address and status of remote circuit.
St	<p>Status of the Layer 2 VPN connection (corresponds with Legend for Connection Status):</p> <ul style="list-style-type: none"> • EI—The local Layer 2 VPN interface is configured with an encapsulation that is not supported. • EM—The encapsulation type received on this Layer 2 VPN connection from the neighbor does not match the local Layer 2 VPN connection interface encapsulation type. • VC-Dn—The virtual circuit is currently down. • CM—The two routers do not agree on a control word, which causes a control word mismatch. • CN—The virtual circuit is not provisioned properly. • OR—The label associated with the virtual circuit is out of range. • OL—No advertisement has been received for this virtual circuit from the neighbor. There is no outgoing label available for use by this virtual circuit. • LD—All of the CE-facing interfaces to the local site are down. Therefore, the connection to the local site is signaled as down to the other PE routers. No pseudowires can be established. • RD—All the interfaces to the remote neighbor are down. Therefore, the remote site has been signaled as down to the other PE routers. No pseudowires can be established. • LN—The local site has lost path selection to the remote site and therefore no pseudowires can be established from this local site. • RN—The remote site has lost path selection to a local site or other remote site and therefore no pseudowires are established to this remote site. • XX—The Layer 2 VPN connection is down for an unknown reason. This is a programming error. • NC—The interface encapsulation is not configured as an appropriate CCC, TCC, or Layer 2 VPN encapsulation. • WE—The encapsulation configured for the interface does not match the encapsulation configured for the associated connection within the Layer 2 VPN routing instance. • NP—The router detects that interface hardware is not present. The hardware might be offline, a PIC might not be of the desired type, or the interface might be configured in a different routing instance. • ->—Only the outbound connection is up. • <-—Only the inbound connection is up. • Up—The Layer 2 VPN connection is operational. • Dn—The Layer 2 VPN connection is down. • CF—The router cannot find enough bandwidth to the remote router to satisfy the Layer 2 VPN connection bandwidth requirement.

Table 238: show l2vpn connections Output Fields (continued)

Field Name	Field Description
	<ul style="list-style-type: none"> • SC—The local site identifier matches the remote site identifier. No pseudowire can be established between these two sites. You should configure different values for the local and remote site identifiers. • LM—The local site identifier is not the minimum designated, meaning it is not the lowest. There is another local site with a lower site identifier. Pseudowires are not being established to this local site, and the associated local site identifier is not being used to distribute Layer 2 VPN label blocks. However, this is not an error state. Traffic continues to be forwarded to the PE router interfaces connected to the local sites when the local sites are in this state. • RM—The remote site identifier is not the minimum designated, meaning it is not the lowest. There is another remote site connected to the same PE router which has lower site identifier. The PE router cannot establish a pseudowire to this remote site and the associated remote site identifier cannot be used to distribute VPLS label blocks. However, this is not an error state. Traffic can continue to be forwarded to the PE router interface connected to this remote site when the remote site is in this state. • IL—The incoming packets for the Layer 2 VPN connection have no MPLS label.
Remote PE	Address of the remote provider edge router.
Incoming label	Name of the incoming label.
Outgoing label	Name of the outgoing label.
Egress Protection	Whether the given PVC is protected by connection protection logic using egress protection for BGP signaled layer 2 services.
Flow Label Receive	Capability to pop the flow label in the receive direction to the remote provider edge (PE) router
Flow Label Transmit	Capability to push the flow label in the transmit direction to the provider edge (PE) router
Time	Date and time of Layer 2 VPN connection event.
Event	Type of event.
Interface/Lbl/PE	Interface, label, or PE router.

Sample Output

show l2vpn connections

```
user@host> show l2vpn connections
```

```
L2VPN Connections :
Instance : vpna
Edge protection: Not-Primary
Local site: 2 (ce-2)
```

```

offset: 1, range: 3, label-base: 32768
  connection-site      Type St  Time last up      # Up trans
  3 (3)                loc  Up   Jul 18 20:45:46 2001      1
    Local circuit: fe-0/0/0.1, Status: Up
    Remote circuit: fe-0/0/3.0, Status: Up
  1                    rmt  Up   Jul 18 21:47:25 2001      1
    Local circuit: fe-0/0/0.0, Status: Up
    Remote PE: 192.0.2.1
    Incoming label: 32768, Outgoing label: 32769
Local site: 3 (ce-3)
offset: 1, range: 2, label-base: 33792
  connection-site      Type St  Time last up      # Up trans
  2 (ce-b)             loc  Up   Jul 18 20:45:46 2001      1
    Local circuit: fe-0/0/0.1, Status: Up
    Remote circuit: fe-0/0/3.0, Status: Up
  1                    rmt  Up   Jul 18 21:47:25 2001      1
    Local circuit: fe-0/0/3.1, Status: Up
    Remote PE: 192.0.2.1
    Incoming label: 33792, Outgoing label: 32770

```

show l2vpn connections

```
user@host> show l2vpn connections
```

Layer-2 VPN connections:

Legend for connection status (St)

EI -- encapsulation invalid	NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch	WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down	NP -- interface hardware not present
CM -- control-word mismatch	-> -- only outbound connection is up
CN -- circuit not provisioned	<- -- only inbound connection is up
OR -- out of range	Up -- operational
OL -- no outgoing label	Dn -- down
LD -- local site signaled down	CF -- call admission control failure
RD -- remote site signaled down	SC -- local and remote site ID collision
LN -- local site not designated	LM -- local site ID not minimum designated
RN -- remote site not designated	RM -- remote site ID not minimum designated
XX -- unknown connection status	IL -- no incoming label
MM -- MTU mismatch	MI -- Mesh-Group ID not available
BK -- Backup connection	ST -- Standby connection
PF -- Profile parse failure	PB -- Profile busy
RS -- remote site standby	SN -- Static Neighbor
LB -- Local site not best-site	RB -- Remote site not best-site
VM -- VLAN ID mismatch	

Legend for interface status

Up -- operational
Dn -- down

Instance: l2vpn-inst

Edge protection: Not-Primary

Local site: pe2 (2)

```

  connection-site      Type St  Time last up      # Up trans
  1                    rmt  Up   Jun 22 14:46:50 2015      1
    Remote PE: 10.255.255.1, Negotiated control-word: Yes (Null)
    Incoming label: 800002, Outgoing label: 800003
    Local interface: ge-0/0/1.300, Status: Up, Encapsulation: VLAN
    Flow Label Transmit: Yes, Flow Label Receive: Yes

```

show l2vpn connections extensive

```

user@host> show l2vpn connections extensive

L2VPN Connections:
Instance: vpn-a
Edge protection: Not-Primary
Local site: ce-a (1)
  Interface name      Remote Site ID
  fe-0/0/0.0          2
  Label Offset        Offset      Range
  32768               1          2
  connection-site      Type St   Time last up      # Up trans
  2                    rmt  Up   Aug 3 00:08:14 2001      1
    Local circuit: fe-0/0/0.0, Status: Up
    Remote PE: 192.168.24.1
    Incoming label: 32769, Outgoing label: 32768
    Egress Protection: Yes
      Time          Event              Interface/Lbl/PE
    Aug 3 00:08:14 2001 PE route up
    Aug 3 00:08:14 2001 Out lbl Update      32768
    Aug 3 00:08:14 2001 In lbl Update       32769
    Aug 3 00:08:14 2001 ckt0 up             fe-0/0/0.0

```

show l2vpn connections extensive (VPWS)

```

user@host> show l2vpn connections

Layer-2 VPN connections:

Legend for connection status (St)
EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch     WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down   NP -- interface hardware not present
CM -- control-word mismatch     -> -- only outbound connection is up
CN -- circuit not provisioned    <- -- only inbound connection is up
OR -- out of range              Up -- operational
OL -- no outgoing label         Dn -- down
LD -- local site signaled down   CF -- call admission control failure
RD -- remote site signaled down  SC -- local and remote site ID collision
LN -- local site not designated  LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated
XX -- unknown connection status IL -- no incoming label
MM -- MTU mismatch              MI -- Mesh-Group ID not available
BK -- Backup connection         ST -- Standby connection
PF -- Profile parse failure     PB -- Profile busy
RS -- remote site standby       SN -- Static Neighbor
LB -- Local site not best-site  RB -- Remote site not best-site
VM -- VLAN ID mismatch

Legend for interface status
Up -- operational
Dn -- down

Instance: FEC129-VPWS
L2vpn-id: 100:100
  Number of local interfaces: 1
  Number of local interfaces up: 1
  ge-2/0/5.0
  Local source-attachment-id: 1 (ONE)

```

```
Target-attachment-id      Type  St      Time last up      # Up trans
2                          rmt   Up      Nov 28 16:16:14 2012      1
  Remote PE: 198.51.100.2, Negotiated control-word: No
  Incoming label: 299792, Outgoing label: 299792
  Local interface: ge-2/0/5.0, Status: Up, Encapsulation: ETHERNET
Connection History:
  Nov 28 16:16:14 2012  status update timer
  Nov 28 16:16:14 2012  PE route changed
  Nov 28 16:16:14 2012  Out lbl Update      299792
  Nov 28 16:16:14 2012  In lbl Update       299792
  Nov 28 16:16:14 2012  loc intf up        ge-2/0/5.0
```

show mvpn c-multicast

Syntax `show mvpn c-multicast`
`<extensive | summary>`
`<instance-name instance-name>`
`<source-pe>`

Release Information Command introduced in Junos OS Release 8.4.
Option to show **source-pe** introduced in Junos OS Release 15.1.

Description Display the multicast VPN customer multicast route information.

Options **extensive | summary**—(Optional) Display the specified level of output.

instance-name *instance-name*—(Optional) Display output for the specified routing instance.

source-pe—(Optional) Display source-pe output for the specified c-multicast entries.

Required Privilege Level view

List of Sample Output [show mvpn c-multicast on page 2621](#)
[show mvpn c-multicast summary on page 2621](#)
[show mvpn c-multicast extensive on page 2621](#)
[show mvpn c-multicast source-pe on page 2622](#)

Output Fields [Table 239 on page 2620](#) lists the output fields for the **show mvpn c-multicast** command. Output fields are listed in the approximate order in which they appear.

Table 239: show mvpn c-multicast Output Fields

Field Name	Field Description	Level of Output
Instance	Name of the VPN routing instance.	summary extensive none
C-mcast IPv4 (S:G)	Customer router IPv4 multicast address.	extensive none
Ptnl	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none
St	State: <ul style="list-style-type: none"> DS—Represents (S,G) and is created due to (*,G) RM—Remote VPN route learned from the remote PE router St display blank—SSM group join 	extensive none
MVPN instance	Name of the multicast VPN routing instance	extensive none

Table 239: *show mvpn c-multicast Output Fields (continued)*

Field Name	Field Description	Level of Output
C-multicast IPv4 route count	Number of customer multicast IPv4 routes associated with the multicast VPN routing instance.	summary
C-multicast IPv6 route count	Number of customer multicast IPv6 routes associated with the multicast VPN routing instance.	summary

Sample Output

show mvpn c-multicast

```

user@host> show mvpn c-multicast

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
  C-mcast IPv4 (S:G)          Ptnl          St
  192.168.195.78/32:203.0.113.1/24 PIM-SM:10.255.14.144, 198.51.100.1      RM
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
  C-mcast IPv4 (S:G)          Ptnl          St
  192.168.195.94/32:203.0.113.0/24 PIM-SM:10.255.14.144, 198.51.100.2      RM

```

show mvpn c-multicast summary

```

user@host> show mvpn c-multicast summary

MVPN Summary:
Family: INET
Family: INET6

Instance: mvpn1
  C-multicast IPv6 route count: 1

```

show mvpn c-multicast extensive

```

user@host> show mvpn c-multicast extensive

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

```

```

DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
  C-mcast IPv4 (S:G)          Ptnl          St
  192.168.195.78/32:203.0.113.1/24 PIM-SM:10.255.14.144, 198.51.100.1  RM
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
  C-mcast IPv4 (S:G)          Ptnl          St
  192.168.195.94/32:203.0.113.0/24 PIM-SM:10.255.14.144, 198.51.100.2  RM

```

show mvpn c-multicast source-pe

```

user@host> show mvpn c-multicast source-pe

Family : INET
Family : INET6

Instance : mvpn1
MVPN Mode : RPT-SPT
  C-Multicast route address: ::/0:ff05::1/128
    MVPN Source-PE1:
      extended-community: no-advertise target:10.1.0.0:9
      Route Distinguisher: 10.1.0.0:1
      Autonomous system number: 1
      Interface: ge-0/0/9.1 Index: 343
    PIM Source-PE1:
      extended-community: target:10.1.0.0:9
      Route Distinguisher: 10.1.0.0:1
      Autonomous system number: 1
      Interface: ge-0/0/9.1 Index: 343

```

show mvpn instance

Syntax `show mvpn instance`
`<instance-name>`
`<display-tunnel-name>`
`<extensive | summary>`
`<inet | inet6>`
`<logical-system>`

Release Information Command introduced in Junos OS Release 8.4.
 Additional details in output for extensive option introduced in Junos OS Release 15.1.

Description Display the multicast VPN routing instance information according the options specified.

Options **instance-name**—(Optional) Display statistics for the specified routing instance, or press Enter without specifying an instance name to show output for all instances.

display-tunnel-name—(Optional) Display the ingress provider tunnel name rather than the attribute.

extensive | summary—(Optional) Display the specified level of output.

inet | inet6—(Optional) Display output for the specified IP type.

inet | inet6—(Optional) Display output for the specified IP type.

logical-system—(Optional) Display details for the specified logical system, or type “all”.

Required Privilege Level view

List of Sample Output [show mvpn instance on page 2624](#)
[show mvpn instance summary on page 2625](#)
[show mvpn instance extensive on page 2625](#)
[show mvpn instance summary \(IPv6\) on page 2626](#)

Output Fields [Table 240 on page 2623](#) lists the output fields for the **show mvpn instance** command. Output fields are listed in the approximate order in which they appear.

Table 240: show mvpn instance Output Fields

Field Name	Field Description	Level of Output
MVPN instance	Name of the multicast VPN routing instance	extensive none
Instance	Name of the VPN routing instance.	summary extensive none
Provider tunnel	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none

Table 240: *show mvpn instance Output Fields (continued)*

Field Name	Field Description	Level of Output
Neighbor	Address, type of provider tunnel (I-P-tnl, inclusive provider tunnel and S-P-tnl, selective provider tunnel) and provider tunnel for each neighbor.	extensive none
C-mcast IPv4 (S:G)	Customer IPv4 router multicast address.	extensive none
C-mcast IPv6 (S:G)	Customer IPv6 router multicast address.	extensive none
Ptnl	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none
St	State: <ul style="list-style-type: none"> DS—Represents (S,G) and is created due to (*G) RM—Remote VPN route learned from the remote PE router St display blank—SSM group join 	extensive none
Neighbor count	Number of neighbors associated with the multicast VPN routing instance.	summary
C-multicast IPv4 route count	Number of customer multicast IPv4 routes associated with the multicast VPN routing instance.	summary
C-multicast IPv6 route count	Number of customer multicast IPv6 routes associated with the multicast VPN routing instance.	summary

Sample Output

show mvpn instance

```

user@host> show mvpn instance

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
  Provider tunnel: I-P-tnl:PIM-SM:10.255.14.144, 198.51.100.1
  Neighbor                I-P-tnl
  10.255.14.160            PIM-SM:10.255.14.160, 198.51.100.1
  10.255.70.17            PIM-SM:10.255.70.17, 198.51.100.1
  C-mcast IPv4 (S:G)      Ptnl                St
  192.168.195.78/32:203.0.113.0/24 PIM-SM:10.255.14.144, 198.51.100.1 RM
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route

```

```

Instance: VPN-B
Provider tunnel: I-P-tnl:PIM-SM:10.255.14.144, 198.51.100.2
Neighbor                               I-P-tnl
10.255.14.160                           PIM-SM:10.255.14.160, 198.51.100.2
10.255.70.17                           PIM-SM:10.255.70.17, 198.51.100.2
C-mcast IPv4 (S:G)                     Ptnl                               St
192.168.195.94/32:203.0.113.1/24 PIM-SM:10.255.14.144, 198.51.100.2      RM

```

Sample Output

show mvpn instance summary

```
user@host> show mvpn instance summary
```

```

MVPN Summary:
Family: INET
Family: INET6

```

```

Instance: mvpn1
Sender-Based RPF: Disabled. Reason: Not enabled by configuration.
Hot Root Standby: Disabled. Reason: Not enabled by configuration.
Neighbor count: 3
C-multicast IPv6 route count: 1

```

Sample Output

show mvpn instance extensive

```
user@host> show mvpn instance extensive
```

```

MVPN instance:
Family : INET

```

```

Instance : vpn_blue
  Customer Source: 10.1.1.1
    RT-Import Target: 192.168.1.1:100
    Route-Distinguisher: 192.168.1.1:100
    Source-AS: 65000
    Via unicast route: 10.1.0.0/16 in vpn-blue.inet.0
    Candidate Source PE Set:
      RT-Import 192.168.1.1:100, RD 1111:22222, Source-AS 65000
      RT-Import 192.168.2.2:100, RD 1111:22222, Source-AS 65000
      RT-Import 192.168.3.3:100, RD 1111:22222, Source-AS 65000

```

'Extensive' output will show everything in 'detail' output and add the list of bound c-multicast routes.

```
> show mvpn source 10.1.1.1 instance vpn_blue extensive
```

```
Family : INET
```

```

Instance : vpn_blue
  Customer Source: 10.1.1.1
    RT-Import Target: 192.168.1.1:100
    Route-Distinguisher: 192.168.1.1:100
    Source-AS: 65000
    Via unicast route: 10.1.0.0/16 in vpn-blue.inet.0
    Candidate Source PE Set:
      RT-Import 192.168.1.1:100, RD 1111:22222, Source-AS 65000

```

```
RT-Import 192.168.2.2:100, RD 1111:22222, Source-AS 65000
RT-Import 192.168.3.3:100, RD 1111:22222, Source-AS 65000
Customer-Multicast Routes:
10.1.1.1/32:198.51.100.3/24
10.1.1.1/32:198.51.100.3/24
```

show mvpn instance summary (IPv6)

```
user@host> show mvpn instance summary
```

```
MVPN Summary:
Instance: VPN-A
  C-multicast IPv6 route count: 2
Instance: VPN-B
  C-multicast IPv6 route count: 2
```

show mvpn neighbor

Syntax `show mvpn neighbor`
`<extensive | summary>`
`<inet | inet6>`
`<instance instance-name | neighbor-address address>`
`<logical-system logical-system-name>`

Release Information Command introduced in Junos OS Release 8.4.

Description Display multicast VPN neighbor information.

Options **extensive | summary**—(Optional) Display the specified level of output for all multicast VPN neighbors.

inet | inet6—(Optional) Display IPv4 or IPv6 information for all multicast VPN neighbors.

instance *instance-name* | neighbor-address *address*—(Optional) Display multicast VPN neighbor information for the specified instance or the specified neighbor.

logical-system *logical-system-name*—(Optional) Display multicast VPN neighbor information for the specified logical system.

Required Privilege Level view

List of Sample Output [show mvpn neighbor on page 2628](#)
[show mvpn neighbor extensive on page 2628](#)
[show mvpn neighbor extensive on page 2629](#)
[show mvpn neighbor instance-name on page 2629](#)
[show mvpn neighbor neighbor-address on page 2629](#)
[show mvpn neighbor neighbor-address summary on page 2630](#)
[show mvpn neighbor neighbor-address extensive on page 2630](#)
[show mvpn neighbor neighbor-address instance-name on page 2630](#)
[show mvpn neighbor summary on page 2631](#)

Output Fields [Table 241 on page 2627](#) lists the output fields for the **show mvpn neighbor** command. Output fields are listed in the approximate order in which they appear.

Table 241: show mvpn neighbor Output Fields

Field Name	Field Description	Level of Output
MVPN instance	Name of the multicast VPN routing instance	extensive none
Instance	Name of the VPN routing instance.	summary extensive none

Table 241: *show mvpn neighbor* Output Fields (continued)

Field Name	Field Description	Level of Output
Neighbor	Address, type of provider tunnel (I-P-tnl, inclusive provider tunnel and S-P-tnl, selective provider tunnel) and provider tunnel for each neighbor.	extensive none
Provider tunnel	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none

Sample Output

show mvpn neighbor

```

user@host> show mvpn neighbor

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
Neighbor                               I-P-tnl
10.255.14.160                          PIM-SM:10.255.14.160, 192.0.2.1
10.255.70.17                          PIM-SM:10.255.70.17, 192.0.2.1
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
Neighbor                               I-P-tnl
10.255.14.160                          PIM-SM:10.255.14.160, 192.0.2.2
10.255.70.17                          PIM-SM:10.255.70.17, 192.0.2.2

```

Sample Output

show mvpn neighbor extensive

```

user@host> show mvpn neighbor extensive

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
Neighbor                               I-P-tnl
10.255.14.160                          PIM-SM:10.255.14.160, 192.0.2.1
10.255.70.17                          PIM-SM:10.255.70.17, 192.0.2.1
MVPN instance:

Legend for provider tunnel

```



```
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel
```

Legend for c-multicast routes properties (Pr)

DS -- derived from (*, c-g) RM -- remote VPN route

Instance: VPN-B

Neighbor	I-P-tnl
10.255.14.160	PIM-SM:10.255.14.160, 192.0.2.2
10.255.70.17	PIM-SM:10.255.70.17, 192.0.2.2

show mvpn neighbor extensive

```
user@host> show mvpn neighbor extensive
```

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (*, c-g) RM -- remote VPN route

Instance: mvpn-a

Neighbor	I-P-tnl
10.255.72.45	
10.255.72.50	LDP P2MP:10.255.72.50, lsp-id 1

Sample Output

show mvpn neighbor instance-name

```
user@host> show mvpn neighbor instance-name VPN-A
```

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (*, c-g) RM -- remote VPN route

Instance: VPN-A

Neighbor	I-P-tnl
10.255.14.160	PIM-SM:10.255.14.160, 192.0.2.1
10.255.70.17	PIM-SM:10.255.70.17, 192.0.2.1

Sample Output

show mvpn neighbor neighbor-address

```
user@host> show mvpn neighbor neighbor-address 10.255.14.160
```

MVPN instance:

Legend for provider tunnel

I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)

DS -- derived from (*, c-g) RM -- remote VPN route

Instance: VPN-A

```

Neighbor                                I-P-tnl
10.255.14.160                          PIM-SM:10.255.14.160, 192.0.2.1
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)           RM -- remote VPN route
Instance: VPN-B
Neighbor                                I-P-tnl
10.255.14.160                          PIM-SM:10.255.14.160, 192.0.2.2

```

Sample Output

show mvpn neighbor neighbor-address summary

```

user@host> show mvpn neighbor neighbor-address 10.255.70.17 summary

MVPN Summary:
Instance: VPN-A
Instance: VPN-B

```

Sample Output

show mvpn neighbor neighbor-address extensive

```

user@host> show mvpn neighbor neighbor-address 10.255.70.17 extensive

MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)           RM -- remote VPN route
Instance: VPN-A
Neighbor                                I-P-tnl
10.255.70.17                          PIM-SM:10.255.70.17, 192.0.2.1
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)           RM -- remote VPN route
Instance: VPN-B
Neighbor                                I-P-tnl
10.255.70.17                          PIM-SM:10.255.70.17, 192.0.2.2

```

Sample Output

show mvpn neighbor neighbor-address instance-name

```

user@host> show mvpn neighbor neighbor-address 10.255.70.17 instance-name VPN-A

MVPN instance:

```

```

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)      RM -- remote VPN route
Instance: VPN-A
  Neighbor                        I-P-tnl
  10.255.70.17                   PIM-SM:10.255.70.17, 192.0.2.1

```

Sample Output

show mvpn neighbor summary

```
user@host> show mvpn neighbor summary
```

```

MVPN Summary:
Family: INET
Family: INET6

Instance: mvpn1
  Neighbor count: 3

```

show vpls connections

Syntax `show vpls connections`
 `<brief | extensive>`
 `<down | up | up-down>`
 `<history>`
 `<instance instance-name local-site local-site-name remote-site remote-site-name>`
 `<instance-history>`
 `<logical-system (all | logical-system-name)>`
 `<status>`
 `<summary>`

Release Information Command introduced before Junos OS Release 7.4.
 instance-history option introduced in Junos OS Release 12.3R2.

Description (T Series and M Series routers, except for the M160 router) Display virtual private LAN service (VPLS) connection information.

Options **none**—Display information about all VPLS connections for all routing instances.

brief | extensive—(Optional) Display the specified level of output.

down | up | up-down—(Optional) Display nonoperational, operational, or both types of connections.

history—(Optional) Display information about connection history.

instance *instance-name*—(Optional) Display the VPLS connections for the specified routing instance only.

instance-history—(Optional) Display information about connection history for a particular instance.

local-site *local-site-name*—(Optional) Display the VPLS connections for the specified local site name or ID only.

remote-site *remote-site-name*—(Optional) Display the VPLS connections for the specified remote site name or ID only. Label block size information is always shown as 0 when using this option.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

status—(Optional) Display information about the connection and interface status.

summary—(Optional) Display summary of all VPLS connections information.

Required Privilege Level view

List of Sample Output [show vpls connections on page 2637](#)
[show vpls connections \(with FEC128 and FEC129 in the same routing-instance\) on page 2639](#)
[show vpls connections \(with multiple pseudowires\) on page 2640](#)
[show vpls connections extensive \(Static VPLS Neighbors\) on page 2641](#)

Output Fields [Table 242 on page 2633](#) lists the output fields for the **show vpls connections** command. Output fields are listed in the approximate order in which they appear.

Table 242: show vpls connections Output Fields

Field Name	Field Description
Instance	Name of the VPLS instance.
Local site	Name of the local site.
VPLS-id	Identifier for the VPLS site.
Number of local interfaces	Number of interfaces configured for the local site.
Number of local interfaces up	Number of interfaces configured for the local site that are currently up.
IRB interface present	Indicates whether or not an integrated routing and bridging (IRB) interface is present (yes or no).
Intf	<p>List of all of the interfaces configured for the local site. The types of interfaces can include VPLS virtual loopback tunnel interfaces and label-switched interfaces. Any interface that supports VPLS could be listed here.</p> <p>Virtual loopback tunnel interfaces are displayed using the vt-fpc/pic/port.nnnnn format. Label-switched interfaces are displayed using the lsi.nnnnn format. In both cases, nnnnn is a dynamically generated virtual port used to transport and receive packets from other provider edge (PE) routers in the VPLS domain.</p> <p>Each interface might include the following information:</p> <ul style="list-style-type: none"> • Identification as a VPLS interface • Name of the associated VPLS routing instance • Local site number • Remote site number • VPLS neighbor address • VPLS identifier
Interface flags	<p>Flag associated with the interface. Can include the following:</p> <ul style="list-style-type: none"> • VC-Down—The virtual circuit associated with this interface is down.
Label-base	First label in a block of labels. A remote PE router uses this first label when sending traffic toward the advertising PE router.

Table 242: *show vpls connections* Output Fields (continued)

Field Name	Field Description
Offset	Displays the VPLS Edge (VE) block offset in the Layer 2 VPN NLRI. The VE block offset is used to identify a label block from which a particular label value is selected to setup a pseudowire for a remote site. The block offset value itself indicates the starting VE ID that maps to the label base contained in the VPLS NLRI advertisement.
Size	Label block size. A configurable value that represents the number of label blocks required to cover all the pseudowires for the remote peer. Acceptable configuration values are: 2 , 4 , 8 and 16 . The default value is 2 . A value of 0 will be displayed when using the remote-site option.
Range	Label block range. A value that keeps track of the numbers of remote sites discovered within each label block.
Preference	Preference value advertised for a VPLS site. When multiple PE routers are assigned the same VE ID for multihoming, you might need to specify that a particular PE router acts as the designated forwarder by configuring the site preference value. The site preference indicates the degree of preference for a particular customer site. The site preference is one of the tie-breaking criteria used in a designated forwarder election.
status-vector	Bit vector advertising the state of local PE-CE circuits to remote PE routers. A bit value of 0 indicates that the local circuit and LSP tunnel to the remote PE router are up, whereas a value of 1 indicates either one or both are down.
connection-site	Name of the connection site.
Neighbor	IP address and VPLS identifier for the VPLS neighbor. If multiple pseudowires have been configured, the IP address will also show the PW-specific <i>vpls-id-list</i> , for example, 203.0.113.144 (vpls-id 200).
Type	Type of connection: loc (local) or rmt (remote).

Table 242: *show vpls connections* Output Fields (continued)

Field Name	Field Description
St	<p>Status of the VPLS connection (corresponds with Legend for Connection Status):</p> <ul style="list-style-type: none"> • EI—The local VPLS interface is configured with an encapsulation that is not supported. • EM—The encapsulation type received on this VPLS connection from the neighbor does not match the local VPLS connection interface encapsulation type. • VC-Dn—The virtual circuit is currently down. • CM—The two routers do not agree on a control word, which causes a control word mismatch. • CN—The virtual circuit is not provisioned properly. • OR—The label associated with the virtual circuit is out of range. • OL—No advertisement has been received for this virtual circuit from the neighbor. There is no outgoing label available for use by this virtual circuit. • LD—All of the CE-facing interfaces to the local site are down. Therefore, the connection to the local site is signaled as down to the other PE routers. No pseudowires can be established. • RD—All the interfaces to the remote neighbor are down. Therefore, the remote site has been signaled as down to the other PE routers. No pseudowires can be established. • LN—The local site has lost path selection to the remote site and therefore no pseudowires can be established from this local site. • RN—The remote site has lost path selection to a local site or other remote site and therefore no pseudowires are established to this remote site. In a multihoming configuration, one multihomed PE site displays the state LN, and the other multihomed PE site displays the state RN in the following circumstances: <ul style="list-style-type: none"> • The multihomed links are both configured to be the backup site. • The two multihomed PE routers have the same site ID, but have a peering relationship with a route reflector (RR) that has a different site ID. • XX—The VPLS connection is down for an unknown reason. This is a programming error. • MM—The MTU for the local site and the remote site do not match. • BK—The router is using a backup connection. • PF—Profile parse failure. • RS—The remote site is in a standby state. • NC—The interface encapsulation is not configured as an appropriate CCC, TCC, or VPLS encapsulation. • WE—The encapsulation configured for the interface does not match the encapsulation configured for the associated connection within the VPLS routing instance.

Table 242: *show vpls connections* Output Fields (continued)

Field Name	Field Description
	<ul style="list-style-type: none"> • NP—The router detects that interface hardware is not present. The hardware might be offline, a PIC might not be of the desired type, or the interface might be configured in a different routing instance. • -->—Only the outbound connection is up. • <--—Only the inbound connection is up. • Up—The VPLS connection is operational. • Dn—The VPLS connection is down. • CF—The router cannot find enough bandwidth to the remote router to satisfy the VPLS connection bandwidth requirement. • SC—The local site identifier matches the remote site identifier. No pseudowire can be established between these two sites. You should configure different values for the local and remote site identifiers. • LM—The local site identifier is not the minimum designated, meaning it is not the lowest. There is another local site with a lower site identifier. Pseudowires are not being established to this local site, and the associated local site identifier is not being used to distribute VPLS label blocks. However, this is not an error state. Traffic continues to be forwarded to the PE router interfaces connected to the local sites when the local sites are in this state. • RM—The remote site identifier is not the minimum designated, meaning it is not the lowest. There is another remote site connected to the same PE router which has lower site identifier. The PE router cannot establish a pseudowire to this remote site and the associated remote site identifier cannot be used to distribute VPLS label blocks. However, this is not an error state. Traffic can continue to be forwarded to the PE router interface connected to this remote site when the remote site is in this state. • IL—The incoming packets for the VPLS connection have no MPLS label. • MI—The configured mesh group identifier is in use by another system in the network. • ST—The router has switched to a standby connection. • PB—Profile busy. • SN—The VPLS neighbor is static.
Time last up	Time connection was last in the Up condition.
# Up trans	Number of transitions from Down to Up condition.
Status	Status of the (local or remote circuit) local interface: <ul style="list-style-type: none"> • Up—Operational • Dn—Down • NP—Not present • DS—Disabled • WE—Wrong encapsulation • UN—Uninitialized
Encapsulation	Type of encapsulation: VPLS .
Remote PE	Address of the remote provider edge router.

Table 242: *show vpls connections* Output Fields (continued)

Field Name	Field Description
Negotiated control-word	Whether a control word has been negotiated: Yes or No .
Incoming label	Name of the incoming label.
Outgoing label	Name of the outgoing label.
Negotiated PW status TLV	Indicates whether or not the pseudowire status TLV has been negotiated for the VPLS connection.
Local interface	Provides the following information about the local interface configured for the VPLS neighbor: <ul style="list-style-type: none"> • Name of the local interface • Status—Interface status (Up or Down) • Encapsulation—Interface encapsulation (for example, ETHERNET) • Description—Includes the VPLS instance name, the VPLS neighbor address, and the VPLS identifier
Time	Date and time of VPLS connection event.
Event	Type of event.
Interface/Lbl/PE	Interface, label, or PE router.
Connection History	Each entry can include the date, time, year, and the connection event. Connection events include any of a variety of events related to VPLS connections, such as route changes, label updates, and interfaces going down or coming up.

Sample Output

show vpls connections

```
user@host> show vpls connections
```

```
Layer-2 VPN connections:
```

```
Legend for connection status (St)
```

```

EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch     WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down   NP -- interface hardware not present
CM -- control-word mismatch     -< -- only outbound connection is up
CN -- circuit not provisioned    >- -- only inbound connection is up
OR -- out of range              Up -- operational
OL -- no outgoing label         Dn -- down
LD -- local site signaled down   CF -- call admission control failure
RD -- remote site signaled down  SC -- local and remote site ID collision
LN -- local site not designated  LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated
XX -- unn connection status     IL -- no incoming label
MM -- MTU mismatch              MI -- Mesh-Group ID not available

```

```

BK -- Backup connection          ST -- Standby connection
PF -- Profile parse failure      PB -- Profile busy

Legend for interface status
Up -- operational
Dn -- down

Instance: vpls-1
  Local site: 1 (11)
    Number of local interfaces: 1
    Number of local interfaces up: 1
    IRB interface present: no
    lt-1/3/0.10496
    vt-1/3/0.1048588    1      Intf - vpls vpls-1 local site 11 remote site 1
    vt-1/2/0.1048591    2      Intf - vpls vpls-1 local site 11 remote site 2
    vt-1/2/0.1048585    3      Intf - vpls vpls-1 local site 11 remote site 3
    vt-1/2/0.1048587    4      Intf - vpls vpls-1 local site 11 remote site 4
    vt-1/2/0.1048589    5      Intf - vpls vpls-1 local site 11 remote site 5
    vt-1/3/0.1048586    6      Intf - vpls vpls-1 local site 11 remote site 6
    vt-1/3/0.1048590    7      Intf - vpls vpls-1 local site 11 remote site 7
    vt-1/3/0.1048584    8      Intf - vpls vpls-1 local site 11 remote site 8

Label-base      Offset      Size      Range      Preference
800256          1          16        16          100
Timer Values:
  Startup wait time: 120 seconds
  New site wait-time: 20 seconds
  Collision detect time: 30 seconds
  Reclaim wait time: 748 milliseconds
connection-site      Type      St      Time last up      # Up trans
1                    rmt      Up      Apr 28 13:28:24 2009      2
  Remote PE: 192.0.2.1, Negotiated control-word: No
  Incoming label: 800256, Outgoing label: 800026
  Local interface: vt-1/3/0.1048588, Status: Up, Encapsulation: VPLS
  Description: Intf - vpls vpls-1 local site 11 remote site 1
Connection History:
  Apr 28 13:28:24 2009 status update timer
  Apr 28 13:28:24 2009 PE route down
  Apr 28 13:24:27 2009 status update timer
  Apr 28 13:24:27 2009 loc intf up      vt-1/3/0.1048588
  Apr 28 13:24:27 2009 PE route changed
  Apr 28 13:24:27 2009 Out lbl Update      800026
  Apr 28 13:24:27 2009 In lbl Update      800256
  Apr 28 13:24:27 2009 loc intf down
2                    rmt      Up      Apr 28 13:28:24 2009      2
  Remote PE: 192.0.2.71, Negotiated control-word: No
  Incoming label: 800257, Outgoing label: 800034
  Local interface: vt-1/2/0.1048591, Status: Up, Encapsulation: VPLS
  Description: Intf - vpls vpls-1 local site 11 remote site 2
Connection History:
  Apr 28 13:28:24 2009 status update timer
  Apr 28 13:28:24 2009 PE route down
  Apr 28 13:24:28 2009 status update timer

```

```

Apr 28 13:24:28 2009  loc intf up          vt-1/2/0.1048591
Apr 28 13:24:28 2009  PE route changed
Apr 28 13:24:28 2009  Out lbl Update      800034
Apr 28 13:24:28 2009  In lbl Update      800257
Apr 28 13:24:28 2009  loc intf down

```

show vpls connections (with FEC128 and FEC129 in the same routing-instance)

```
user@host> show vpls connections
```

```
Instance: fec129
```

```
L2vpn-id: 1:1
```

```
Local-id: 203.0.113.0
```

```
FEC129-VPLS State:
```

```
Mesh-group connections: __ves__
```

Remote-id	Type	St	Time last up	# Up trans
203.0.3.3	rmt	Up	Sep 19 09:59:56 2017	1

```
Remote PE: 203.0.3.3, Negotiated control-word: No
```

```
Incoming label: 262155, Outgoing label: 262164
```

```
Negotiated PW status TLV: No
```

```
Local interface: lsi.1048844, Status: Up, Encapsulation: ETHERNET
```

```
Description: Intf - vpls fec129 local-id 10.4.4.4 remote-id 203.0.3.3
```

```
neighbor 203.0.3.3
```

```
Flow Label Transmit: No, Flow Label Receive: No
```

Remote-id	Type	St	Time last up	# Up trans
203.0.2.2	rmt	Up	Sep 19 09:59:52 2017	1

```
Remote PE: 203.0.2.2, Negotiated control-word: No
```

```
Incoming label: 262154, Outgoing label: 262157
```

```
Negotiated PW status TLV: No
```

```
Local interface: lsi.1048846, Status: Up, Encapsulation: ETHERNET
```

```
Description: Intf - vpls fec129 local-id 10.4.4.4 remote-id 203.0.2.2
```

```
neighbor 203.0.2.2
```

```
Flow Label Transmit: No, Flow Label Receive: No
```

Remote-id	Type	St	Time last up	# Up trans
203.0.1.1	rmt	Up	Sep 19 09:59:48 2017	1

```
Remote PE: 203.0.1.1, Negotiated control-word: No
```

```
Incoming label: 262156, Outgoing label: 262157
```

```
Negotiated PW status TLV: No
```

```
Local interface: lsi.1048845, Status: Up, Encapsulation: ETHERNET
```

```
Description: Intf - vpls fec129 local-id 10.4.4.4 remote-id 203.0.1.1
```

```
neighbor 203.0.1.1
```

```
Flow Label Transmit: No, Flow Label Receive: No
```

```
LDP-VPLS State
```

```
Mesh-group connections: MG1
```

Neighbor	Type	St	Time last up	# Up trans
203.0.6.6(vpls-id 1)	rmt	Up	Sep 17 19:17:11 2017	1

```
Remote PE: 203.0.6.6, Negotiated control-word: No
```

```
Incoming label: 262423, Outgoing label: 262145
```

```
Negotiated PW status TLV: No
```

```
Local interface: lsi.1049859, Status: Up, Encapsulation: ETHERNET
```

```
Description: Intf - vpls bgp-vpls neighbor 203.0.6.6 vpls-id 1
```

```
Flow Label Transmit: No, Flow Label Receive: No
```

Neighbor	Type	St	Time last up	# Up trans
203.0.7.7(vpls-id 1)	rmt	Up	Sep 17 19:17:04 2017	1

```
Remote PE: 203.0.7.7, Negotiated control-word: No
```

```
Incoming label: 262424, Outgoing label: 262145
```

```
Negotiated PW status TLV: No
```

```
Local interface: lsi.1049857, Status: Up, Encapsulation: ETHERNET
```

```
Description: Intf - vpls bgp-vpls neighbor 203.0.7.7 vpls-id 1
```

```
Flow Label Transmit: No, Flow Label Receive: No
```

```
Mesh-group connections: MG2
```

Neighbor	Type	St	Time last up	# Up trans
----------	------	----	--------------	------------

```

203.0.5.5(vpls-id 1)      rmt  Up    Sep 17 19:17:00 2017      1
Remote PE: 203.0.5.5, Negotiated control-word: No
Incoming label: 262425, Outgoing label: 299872
Negotiated PW status TLV: No
Local interface: lsi.1049856, Status: Up, Encapsulation: ETHERNET
Description: Intf - vpls bgp-vpls neighbor 203.0.5.5 vpls-id 1
Flow Label Transmit: No, Flow Label Receive: No

```

show vpls connections (with multiple pseudowires)

```
user@host> show vpls connections
```

```
Layer-2 VPN connections:
```

```
Legend for connection status (St)
```

```

EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch     WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down   NP -- interface hardware not present
CM -- control-word mismatch     -> -- only outbound connection is up
CN -- circuit not provisioned   <- -- only inbound connection is up
OR -- out of range              Up -- operational
OL -- no outgoing label         Dn -- down
LD -- local site signaled down  CF -- call admission control failure
RD -- remote site signaled down SC -- local and remote site ID collision
LN -- local site not designated LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated
XX -- unknown connection status IL -- no incoming label
MM -- MTU mismatch              MI -- Mesh-Group ID not available
BK -- Backup connection         ST -- Standby connection
PF -- Profile parse failure     PB -- Profile busy
RS -- remote site standby       SN -- Static Neighbor
LB -- Local site not best-site  RB -- Remote site not best-site
VM -- VLAN ID mismatch

```

```
Legend for interface status
```

```

Up -- operational
Dn -- down

```

```
Instance: vpls
```

```
VPLS-id: 100
```

```
Mesh-group connections: __ves__
```

```

Neighbor      Type  St    Time last up      # Up trans
10.255.114.3 (vpls-id 100) rmt  Up    Apr 11 23:38:38 2013      1
Remote PE: 10.255.114.3, Negotiated control-word: No
Incoming label: 262145, Outgoing label: 262145
Negotiated PW status TLV: No
Local interface: lsi.1049090, Status: Up, Encapsulation: ETHERNET
Description: Intf - vpls h-vpls neighbor 10.255.114.3 vpls-id 100

```

```
Mesh-group connections: spokes
```

```

Neighbor      Type  St    Time last up      # Up trans
10.255.114.4 (vpls-id 200) rmt  Up    Apr 11 23:39:25 2013      1
Remote PE: 10.255.114.4, Negotiated control-word: No
Incoming label: 262148, Outgoing label: 304224
Negotiated PW status TLV: Yes
local PW status code: 0x00000000, Neighbor PW status code: 0x00000000
Local interface: lsi.1049091, Status: Up, Encapsulation: ETHERNET
Description: Intf - vpls h-vpls neighbor 10.255.114.4 vpls-id 200
10.255.114.4 (vpls-id 201) rmt  Up    Apr 11 23:39:25 2013      1
Remote PE: 10.255.114.4, Negotiated control-word: No

```

```

Incoming label: 262149, Outgoing label: 304225
Negotiated PW status TLV: Yes
Local PW status code: 0x00000000, Neighbor PW status code: 0x00000000
Local interface: lsi.1049096, Status: Up, Encapsulation: ETHERNET
Description: Intf - vpls h-vpls neighbor 10.255.114.4 vpls-id 201

```

show vpls connections extensive (Static VPLS Neighbors)

```
user@host> show vpls connections extensive instance red
```

Layer-2 VPN connections:

Legend for connection status (St)

EI -- encapsulation invalid	NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch	WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down	NP -- interface hardware not present
CM -- control-word mismatch	-> -- only outbound connection is up
CN -- circuit not provisioned	<- -- only inbound connection is up
OR -- out of range	Up -- operational
OL -- no outgoing label	Dn -- down
LD -- local site signaled down	CF -- call admission control failure
RD -- remote site signaled down	SC -- local and remote site ID collision
LN -- local site not designated	LM -- local site ID not minimum designated
RN -- remote site not designated	RM -- remote site ID not minimum designated
XX -- unn connection status	IL -- no incoming label
MM -- MTU mismatch	MI -- Mesh-Group ID not available
BK -- Backup connection	ST -- Standby connection
PF -- Profile parse failure	PB -- Profile busy
RS -- remote site standby	SN -- Static Neighbor

Legend for interface status

Up -- operational
Dn -- down

Instance: static

VPLS-id: 1

Number of local interfaces: 1

Number of local interfaces up: 1

ge-0/0/5.0

lsi.1049344 Intf - vpls static neighbor 10.255.114.3 vpls-id

1

Neighbor	Type	St	Time last up	# Up trans
10.255.114.3(vpls-id 1)(SN)	rmt	Up	Mar 4 08:48:41 2010	1

Remote PE: 10.255.114.3, Negotiated control-word: No

Incoming label: 29696, Outgoing label: 29697

Negotiated PW status TLV: No

Local interface: lsi.1049344, Status: Up, Encapsulation: ETHERNET

Description: Intf - vpls static neighbor 10.255.114.3 vpls-id 1

Connection History:

Mar 4 08:48:41 2010 status update timer

Mar 4 08:48:41 2010 PE route changed

Mar 4 08:48:41 2010 Out lbl Update 29697

Mar 4 08:48:41 2010 In lbl Update 29696

Mar 4 08:48:41 2010 loc intf up lsi.1049344

```
user@PE1> show vpls connections extensive (Multihoming with FEC 129)
```

Layer-2 VPN connections:

Legend for connection status (St)

EI -- encapsulation invalid	NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch	WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down	NP -- interface hardware not present
CM -- control-word mismatch	-> -- only outbound connection is up
CN -- circuit not provisioned	<- -- only inbound connection is up
OR -- out of range	Up -- operational
OL -- no outgoing label	Dn -- down
LD -- local site signaled down	CF -- call admission control failure
RD -- remote site signaled down	SC -- local and remote site ID collision
LN -- local site not designated	LM -- local site ID not minimum designated
RN -- remote site not designated	RM -- remote site ID not minimum designated
XX -- unknown connection status	IL -- no incoming label
MM -- MTU mismatch	MI -- Mesh-Group ID not available
BK -- Backup connection	ST -- Standby connection
PF -- Profile parse failure	PB -- Profile busy
RS -- remote site standby	SN -- Static Neighbor
LB -- Local site not best-site	RB -- Remote site not best-site
VM -- VLAN ID mismatch	

Legend for interface status

Up -- operational
Dn -- down

Instance: green

L2vpn-id: 100:100

Local-id: 192.0.2.2

Number of local interfaces: 2

Number of local interfaces up: 2

ge-0/3/1.0

ge-0/3/3.0

lsi.101711873

Intf - vpls green local-id 192.0.2.2 remote-id

192.0.2.4 neighbor 192.0.2.4

Remote-id	Type	St	Time last up	# Up trans
192.0.2.4	rmt	Up	Jan 31 13:49:52 2012	1

Remote PE: 192.0.2.4, Negotiated control-word: No

Incoming label: 262146, Outgoing label: 262146

Local interface: lsi.101711873, Status: Up, Encapsulation: ETHERNET

Description: Intf - vpls green local-id 192.0.2.2 remote-id 192.0.2.4

neighbor 192.0.2.4

Connection History:

Jan 31 13:49:52 2012	status update timer	
Jan 31 13:49:52 2012	PE route changed	
Jan 31 13:49:52 2012	Out lbl Update	262146
Jan 31 13:49:52 2012	In lbl Update	262146
Jan 31 13:49:52 2012	loc intf up	lsi.101711873

Multi-home:

Local-site	Id	Pref	State
test	1	100	Up

Number of interfaces: 1

Number of interfaces up: 1

ge-0/3/1.0

Received multi-homing advertisements:

Remote-PE	Pref	flag	Description
192.0.2.4	100	0x0	

show vpls flood event-queue

Syntax	show vpls flood event-queue
Release Information	Command introduced in Junos OS Release 8.0.
Description	Display the pending events in the VPLS flood queue.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	show vpls flood event-queue on page 2644
Output Fields	Table 243 on page 2643 lists the output fields for the show vpls flood event-queue command. Output fields are listed in the approximate order in which they appear.

Table 243: show vpls flood event-queue Output Fields

Field Name	Field Description
Current Pending Event	Provides information on the current event in the VPLS flood event queue.
Name	Name of the event.
Owner Name	Name of the interface associated with the flood event.
Pending Op	Pending operation for the event.
Last Error	Name of the last error encountered.
Number of Retries	Number of attempts made to update the event queue.
Pending Event List	List of the events awaiting processing.
Event Name	Name of the event.
Pending Op	Pending operation for the event.
Event Identifier	Name of the interface associated with the flood event.

Sample Output

show vpls flood event-queue

```
user@host> show vpls flood event-queue
```

Current Pending Event

Name: Flood Nexthop

Owner Name:ge-4/3/0.0

Pending Op: ADD

Last Error:ENOMEM

Number of Retries:3

Pending Event List:

Event Name	Pending Op	Event Identifier
Flood Nexthop	ADD	ge-4/3/0.0
Flood Route	ADD	ge-4/3/0.0

show vpls flood instance

Syntax show vpls flood instance
 <brief | detail | extensive>
 <instance-name>
 <logical-system *logical-system-name*>

Release Information Command introduced in Junos OS Release 8.0.

Description Display VPLS information related to the flood process.

Options **none**—Display VPLS information related to the flood process for all routing instances.

brief | detail | extensive—(Optional) Display the specified level of output.

instance-name—(Optional) Display VPLS information related to the flood process for the specified routing instance.

logical-system *logical-system-name*—(Optional) Display VPLS information related to the flood process for the specified logical system.

Required Privilege Level view

List of Sample Output [show vpls flood instance on page 2646](#)
[show vpls flood instance logical-system-name on page 2646](#)
[show vpls flood instance detail on page 2646](#)

Output Fields [Table 244 on page 2645](#) lists the output fields for the **show vpls flood instance** command. Output fields are listed in the approximate order in which they appear.

Table 244: show vpls flood instance Output Fields

Field Name	Field Description
Logical system	Name of the logical system.
Name	Name of the VPLS routing instance.
CEs	Number of CE routers connected to the VPLS instance.
VEs	Number of VE routers connected to the VPLS instance.
Flood routes	List of all flood routes associated with the VPLS instance.
Prefix	Prefix for the route.
Type	Type of route.

Table 244: show vpls flood instance Output Fields (continued)

Field Name	Field Description
Owner	VPLS routing instance or interface associated with the route.
NhType	Next-hop type. For example, flood for a flood route.
Nhindex	Next-hop index number for the route.

Sample Output

show vpls flood instance

```

user@host> show vpls flood instance

Logical system: __example_ls1__
Name: green
CEs: 1
VEs: 1
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  default ALL_CE_FLOOD green       flood        383
  0x47/16 CE_FLOOD  fe-1/2/1.0 flood        388

```

show vpls flood instance logical-system-name

```

user@host: __example_ls1__> show vpls flood instance example_ls1

Logical system: __example_ls1__
Name: green
CEs: 1
VEs: 1
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  default ALL_CE_FLOOD green       flood        383
  0x47/16 CE_FLOOD  fe-1/2/1.0 flood        388

```

show vpls flood instance detail

```

user@host: __example_ls1__> show vpls flood instance detail

Logical system: __example_ls1__
Name: green
CEs: 1
VEs: 1
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  default ALL_CE_FLOOD green       flood        383
  0x47/16 CE_FLOOD  fe-1/2/1.0 flood        388

```

show vpls flood route

Syntax `show vpls flood route`
 (all-ce-flood instance-name *instance-name* <logical-system-name *logical-system-name*>
 |
 ce-flood interface *interface-name*)

Release Information Command introduced in Junos OS Release 8.0.

Description Display VPLS route information related to the flood process for either the specified routing instance or the specified interface.

Options **all-ce-flood**—Display the flood next-hop route for all customer edge routers for traffic coming from the core of the network.

ce-flood interface *interface-name*—Display the flood next-hop route for traffic coming from the specified customer edge interface.

instance-name *instance-name*—Display the flood routes for the specified instance.

logical-system-name *logical-system-name*—(Optional) Specify the logical system whose flood routes you want to display. You can only specify the default logical system name for VPLS. The default logical system name is `_example_ls1_` (the name must be entered in the command with the underscore characters).

Required Privilege Level view

List of Sample Output [show vpls flood route all-ce-flood on page 2648](#)
[show vpls flood route ce-flood on page 2648](#)

Output Fields [Table 245 on page 2647](#) lists the output for the **show vpls flood route** command. Output fields are listed in the approximate order in which they appear.

Table 245: show vpls flood route Output Fields

Field Name	Field Description
Flood route prefix	Prefix for the flood route.
Flood route type	Type of flood route (either CE_FLOOD or ALL_CE_FLOOD).
Flood route owner	VPLS routing instance or interface associated with the flood route.
Nexthop type	Next-hop type. For example, flood for a flood route.
Nexthop index	Next-hop index number for the route.

Table 245: show vpls flood route Output Fields (continued)

Field Name	Field Description
Interfaces flooding to	Interfaces to which VPLS routes are being flooded.
Name	Name of the interface.
Type	Type of VPLS router (CE or VE).
Nh type	Next-hop type.
Index	Index number for the flood route.

Sample Output

show vpls flood route all-ce-flood

```
user@host: __example_lsi__> show vpls flood route all-ce-flood logical-system-name
__example_lsi__instance-name green
```

```
Flood route prefix: default
Flood route type: ALL_CE_FLOOD
Flood route owner: green
Nexthop type: flood
Nexthop index: 383
  Interfaces Flooding to:
    Name      Type      NhType      Index
    fe-1/2/1.0  CE              262142
```

show vpls flood route ce-flood

```
user@host: __example_lsi__> show vpls flood route ce-flood interface fe-1/2/1.0
```

```
Flood route prefix: 0x47/16
Flood route type: CE_FLOOD
Flood route owner: fe-1/2/1.0
Nexthop type: flood
Nexthop index: 388
  Interfaces Flooding to:
    Name      Type      NhType      Index
    lsi.49152  VE              262142
```

show vpls mac-table

Syntax	<pre>show vpls mac-table <age> <brief detail extensive summary> <bridge-domain <i>bridge-domain-name</i>> <instance <i>instance-name</i>> <interface <i>interface-name</i>> <logical-system (all <i>logical-system-name</i>)> <mac-address> <vlan-id <i>vlan-id-number</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 8.5.</p> <p>Command introduced in Junos OS Release 15.1.</p>
Description	Display learned virtual private LAN service (VPLS) media access control (MAC) address information.
Options	<p>none—Display all learned VPLS MAC address information.</p> <p>age— (Optional) Display age of a single mac-address.</p> <p>brief detail extensive summary—(Optional) Display the specified level of output.</p> <p>bridge-domain <i>bridge-domain-name</i>—(Optional) Display learned VPLS MAC addresses for the specified bridge domain.</p> <p>instance <i>instance-name</i>—(Optional) Display learned VPLS MAC addresses for the specified instance.</p> <p>interface <i>interface-name</i>—(Optional) Display learned VPLS MAC addresses for the specified instance.</p> <p>logical-system (all <i>logical-system-name</i>)—(Optional) Display learned VPLS MAC addresses for all logical systems or for the specified logical system.</p> <p>mac-address—(Optional) Display the specified learned VPLS MAC address information..</p> <p>vlan-id <i>vlan-id-number</i>—(Optional) Display learned VPLS MAC addresses for the specified VLAN.</p>
Required Privilege Level	view
List of Sample Output	<p>show vpls mac-table on page 2651</p> <p>show vpls mac-table (with Layer 2 Services over GRE Interfaces) on page 2651</p> <p>show vpls mac-table (with VXLAN enabled) on page 2651</p> <p>show vpls mac-table age (for GE interface) on page 2652</p> <p>show vpls mac-table age (for AE interface) on page 2652</p>

[show vpls mac-table count on page 2652](#)
[show vpls mac-table detail on page 2653](#)
[show vpls mac-table extensive on page 2653](#)

Output Fields Table 246 on page 2650 describes the output fields for the **show vpls mac-table** command. Output fields are listed in the approximate order in which they appear.

Table 246: show vpls mac-table Output fields

Field Name	Field Description
Age	Age of a single mac-address.
Routing instance	Name of the routing instance.
Bridging domain	Name of the bridging domain.
MAC address	MAC address or addresses learned on a logical interface.
MAC flags	Status of MAC address learning properties for each interface: <ul style="list-style-type: none"> • S—Static MAC address configured. • D—Dynamic MAC address learned. • SE—MAC accounting is enabled. • NM—Nonconfigured MAC.
Logical interface	Name of the logical interface.
MAC count	Number of MAC addresses learned on a specific routing instance or interface.
Learning interface	Logical interface or logical Label Switched Interface (LSI) the address is learned on.
Base learning interface	Base learning interface of the MAC address. This field is introduced in Junos OS Release 14.2.
Learn VLAN ID/VLAN	VLAN ID of the routing instance or bridge domain in which the MAC address was learned.
VXLAN ID/VXLAN	VXLAN Network Identifier (VNI)
Layer 2 flags	Debugging flags signifying that the MAC address is present in various lists.
Epoch	Spanning Tree Protocol epoch number identifying when the MAC address was learned. Used for debugging.
Sequence number	Sequence number assigned to this MAC address. Used for debugging.
Learning mask	Mask of Packet Forwarding Engines where this MAC address was learned. Used for debugging.
IPC generation	Creation time of the logical interface when this MAC address was learned. Used for debugging.

Sample Output

show vpls mac-table

```
user@host> show vpls mac-table

MAC flags (S -static MAC, D -dynamic MAC,
           SE -Statistics enabled, NM -Non configured MAC)

Routing instance : vpls_ldp1
VLAN : 223
  MAC          MAC      Logical
  address      flags    interface
  00:00:5e:00:53:5d  D      ge-0/2/5.400

MAC flags (S -static MAC, D -dynamic MAC,
           SE -Statistics enabled, NM -Non configured MAC)

Routing instance : vpls_red
VLAN : 401
  MAC          MAC      Logical
  address      flags    interface
  00:00:5e:00:53:12  D      lsi.1051138
  00:00:5e:00:53:f0  D      lsi.1051138
```

show vpls mac-table (with Layer 2 Services over GRE Interfaces)

```
user@host> show vpls mac-table

MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
           SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : vpls_4site:1000
Bridging domain : __vpls_4site:1000__, MAC          MAC      Logical
  address      flags    interface
  00:00:5e:00:53:f4  D,SE    ge-4/2/0.1000
  00:00:5e:00:53:33  D,SE    lsi.1052004
  00:00:5e:00:53:32  D,SE    lsi.1048840
  00:00:5e:00:53:14  D,SE    lsi.1052005
  00:00:5e:00:53:f7  D,SE    gr-1/2/10.10
```

show vpls mac-table (with VXLAN enabled)

```
user@host> show vpls mac-table

MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
           SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : vpls_4site:1000
Bridging domain : __vpls_4site:1000__, VLAN : 4094,4093
VXLAN: Id : 300, Multicast group: 233.252.0.1
  MAC          MAC      Logical
  address      flags    interface
  00:00:5e:00:53:f4  D,SE    ge-4/2/0.1000
  00:00:5e:00:53:33  D,SE    lsi.1052004
  00:00:5e:00:53:32  D,SE    lsi.1048840
  00:00:5e:00:53:14  D,SE    lsi.1052005
  00:00:5e:00:53:f7  D,SE    vtep.1052010
  00:00:5e:00:53:3f  D,SE    vtep.1052011
```

show vpls mac-table age (for GE interface)

```
user@host> show vpls mac-table age 00:00:5e:00:53:1a instance vpls_instance_1
```

```
MAC Entry Age information
Current Age: 4 seconds
```

show vpls mac-table age (for AE interface)

```
user@host> show vpls mac-table age 000:00:5e:00:53:1a instance vpls_instance_1
```

```
MAC Entry Age information
Current Age on FPC1: 102 seconds
Current Age on FPC2: 94 seconds
```

show vpls mac-table count

```
user@host> show vpls mac-table count
```

```
0 MAC address learned in routing instance __example_private1__
```

```
MAC address count per interface within routing instance:
```

Logical interface	MAC count
lc-0/0/0.32769	0
lc-0/1/0.32769	0
lc-0/2/0.32769	0
lc-2/0/0.32769	0
lc-0/3/0.32769	0
lc-2/1/0.32769	0
lc-9/0/0.32769	0
lc-11/0/0.32769	0
lc-2/2/0.32769	0
lc-9/1/0.32769	0
lc-11/1/0.32769	0
lc-2/3/0.32769	0
lc-9/2/0.32769	0
lc-11/2/0.32769	0
lc-11/3/0.32769	0
lc-9/3/0.32769	0

```
MAC address count per learn VLAN within routing instance:
```

Learn VLAN ID	MAC count
0	0

```
1 MAC address learned in routing instance vpls_ldp1
```

```
MAC address count per interface within routing instance:
```

Logical interface	MAC count
lsi.1051137	0
ge-0/2/5.400	1

```
MAC address count per learn VLAN within routing instance:
```

Learn VLAN ID	MAC count
0	1

```
1 MAC address learned in routing instance vpls_red
```

```
MAC address count per interface within routing instance:
```

Logical interface	MAC count
ge-0/2/5.300	1


```
MAC address count per learn VLAN within routing instance:
  Learn VLAN ID      MAC count
         0              1
```

show vpls mac-table detail

```
user@host> show vpls mac-table detail

MAC address: 00:00:5e:00:53:5d
  Routing instance: vpls_ldp1
  Learning interface: ge-0/2/5.400
  Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
  Epoch: 0                      Sequence number: 1
  Learning mask: 0x1             IPC generation: 0

MAC address: 00:00:5e:00:53:5d
  Routing instance: vpls_red
  Learning interface: ge-0/2/5.300
  Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
  Epoch: 0                      Sequence number: 1
  Learning mask: 0x1             IPC generation: 0
```

show vpls mac-table extensive

```
user@host> show vpls mac-table extensive

MAC address: 00:00:5e:00:53:00
  Routing instance: vpls_1
  Bridging domain: __vpls_1__, VLAN : NA
  Learning interface: lsi.1049165
  Base learning interface: lsi.1049165
  Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
  Epoch: 0                      Sequence number: 1
  Learning mask: 0x00000001

MAC address: 00:00:5e:00:53:01
  Routing instance: vpls_1
  Bridging domain: __vpls_1__, VLAN : NA
  Learning interface: lsi.1049165
  Base learning interface: lsi.1049165
  Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
  Epoch: 0                      Sequence number: 1
  Learning mask: 0x00000001

MAC address: 00:00:5e:00:53:02
  Routing instance: vpls_1
  Bridging domain: __vpls_1__, VLAN : NA
  Learning interface: lsi.1049165
  Base learning interface: lsi.1049165
  Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
  Epoch: 0                      Sequence number: 1
  Learning mask: 0x00000001

MAC address: 00:00:5e:00:53:03
  Routing instance: vpls_1
  Bridging domain: __vpls_1__, VLAN : NA
  Learning interface: lsi.1049165
```

```
Base learning interface: lsi.1049165
Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
Epoch: 0                               Sequence number: 1
Learning mask: 0x00000001
```

show vpls statistics

Syntax `show vpls statistics`
`<instance instance-name>`
`<logical-system (all | logical-system-name)>`

Release Information Command introduced before Junos OS Release 7.4.

Description (T Series and M Series routers, except for the M160 router) Display virtual private LAN service (VPLS) statistics.

Options **none**—Display VPLS statistics for all routing instances.

instance *instance-name*—(Optional) Display VPLS statistics for a specific VPLS routing instance only.

logical-system (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

Required Privilege Level view

List of Sample Output [show vpls statistics on page 2656](#)
[show vpls statistics instance on page 2657](#)

Output Fields [Table 247 on page 2655](#) lists the output fields for the **show vpls statistics** command. Output fields are listed in the approximate order in which they appear.

Table 247: show vpls statistics Output Fields

Field Name	Field Description
Instance	Name of the VPLS instance.
Local interface	Name of the local VPLS virtual loopback tunnel interface, vt-fpc/pic/port.nnnnn , where nnnnn is a dynamically generated virtual port used to transport and receive packets from other provider edge (PE) routers in the VPLS domain.
Index	Number associated with the next hop.
Remote provider edge router	Address of the remote provider edge router.
Multicast packets	Number of multicast packets received.
Multicast bytes	Number of multicast bytes received.
Flood packets	Number of VPLS flood packets received.

Table 247: show vpls statistics Output Fields (continued)

Field Name	Field Description
Flood bytes	Number of VPLS flood bytes received.
Current MAC count	Number of MAC addresses learned by the interface and the configured maximum limit on the number of MAC addresses that can be learned.

Sample Output

show vpls statistics

```
user@host> show vpls statistics
```

```
VPLS statistics:
```

```
Instance: green
```

```
Local interface: fe-2/2/1.0, Index: 69
Multicast packets:      1
Multicast bytes   :      60
Flooded packets   :      18
Flooded bytes    :     2556
Current MAC count:      1
```

```
Local interface: lt-0/3/0.2, Index: 72
Multicast packets:      3
Multicast bytes   :     153
Flooded packets   :      1
Flooded bytes    :      51
Current MAC count:      1
```

```
Local interface: lsi.32769, Index: 75
Current MAC count:      0
```

```
Local interface: lsi.32771, Index: 77
Remote PE: 10.255.14.222
Current MAC count:      2
```

```
Instance: red
```

```
Local interface: vt-0/3/0.32768, Index: 74
Multicast packets:      0
Multicast bytes   :      0
Flooded packets   :      0
Flooded bytes    :      0
Current MAC count:      0
```

```
Local interface: vt-0/3/0.32770, Index: 76
Multicast packets:      0
Multicast bytes   :      0
Flooded packets   :      0
Flooded bytes    :      0
Current MAC count:      0
```

show vpls statistics instance

```
user@host> show vpls statistics instance red
```

```
Layer-2 VPN Statistics:
```

```
Instance: red
```

```
Local interface: vt-3/2/0.32768, Index: 73
```

```
Remote provider edge router: 10.255.17.35
```

```
Multicast packets: 0
```

```
Multicast bytes : 0
```

```
Flood packets : 0
```

```
Flood bytes : 0
```

```
Current MAC count: 1 (Limit 20)
```

