



---

# Junos Fusion Data Center Feature Guide



---

Modified: 2019-03-27

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Junos Fusion Data Center Feature Guide*

Copyright © 2019 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	xvii
	Documentation and Release Notes . . . . .	xvii
	Using the Examples in This Manual . . . . .	xvii
	Merging a Full Example . . . . .	xviii
	Merging a Snippet . . . . .	xviii
	Documentation Conventions . . . . .	xix
	Documentation Feedback . . . . .	xxi
	Requesting Technical Support . . . . .	xxi
	Self-Help Online Tools and Resources . . . . .	xxii
	Creating a Service Request with JTAC . . . . .	xxii
<b>Part 1</b>	<b>Junos Fusion Data Center</b>	
<b>Chapter 1</b>	<b>Junos Fusion Data Center Overview . . . . .</b>	<b>3</b>
	Junos Fusion Data Center Overview . . . . .	3
	Understanding Junos Fusion Data Center Components . . . . .	6
	Aggregation Devices . . . . .	6
	Dual Aggregation Device Topologies . . . . .	7
	Four Aggregation Device Topologies . . . . .	7
	Satellite Devices . . . . .	7
	Cascade Ports . . . . .	8
	Uplink Ports . . . . .	9
	Extended Ports . . . . .	9
	Understanding FPC Identifiers and Assignment in a Junos Fusion . . . . .	10
	Understanding Software in a Junos Fusion Data Center . . . . .	11
	Understanding Interface Naming in a Junos Fusion . . . . .	11
	Understanding Feature Configuration in a Junos Fusion Data Center . . . . .	11
	Understanding Junos Fusion Ports . . . . .	12
	Understanding Cascade Ports . . . . .	14
	Understanding Uplink Ports . . . . .	15
	Understanding Extended Ports . . . . .	16
	Understanding Software in a Junos Fusion Data Center . . . . .	17
	Understanding Junos OS for the Aggregation Device in a Junos Fusion . . . . .	17
	Understanding Satellite Software for the Satellite Devices in a Junos Fusion . . . . .	17
	Understanding Satellite Software Upgrade Groups . . . . .	18
	Understanding Satellite Software Requirements in a Multiple Aggregation Device Topology . . . . .	19
	Understanding the PPC Satellite Software Image . . . . .	19

Understanding Configuration Synchronization in a Junos Fusion . . . . .	20
Configuration Synchronization and Aggregation Devices with Two Routing Engines in a Junos Fusion Data Center with EVPN . . . . .	20
Understanding Junos Fusion Data Center Software and Hardware . . . . .	
Requirements . . . . .	21
Aggregation Device to Satellite Device Software Compatibility . . . . .	21
Aggregation Devices . . . . .	22
Aggregation Device Hardware Models . . . . .	22
Maximum Number of Aggregation Devices . . . . .	22
Cascade Ports . . . . .	22
Satellite Devices . . . . .	23
Satellite Device Hardware Models . . . . .	23
Satellite Software to Junos OS Conversion Requirements . . . . .	24
Maximum Number of Satellite Devices or Extended Ports . . . . .	24
Understanding ICCP in a Junos Fusion using Dual Aggregation Devices . . . . .	24
ICCP in a Junos Fusion Overview . . . . .	25
Automatic ICCP Provisioning . . . . .	25
Understanding EVPN in a Junos Fusion Data Center . . . . .	26
Benefits of Junos Fusion Data Center with EVPN . . . . .	26
EVPN Ethernet Segments . . . . .	26
EVPN Instance . . . . .	28
EVPN Control Plane . . . . .	28
EVPN and IEEE 802.1BR Forwarding . . . . .	31
Data Encapsulation . . . . .	31
Layer 3 Default Gateway . . . . .	32
ARP Processing . . . . .	33
Inter-VLAN Packet Handling . . . . .	33
Understanding Designated Event Forwarding of SNMP Traps in an EVPN Junos Fusion Data Center . . . . .	34
Designated Event Forwarding in an EVPN Junos Fusion Overview . . . . .	34
Limitations for Designated Event Forwarding of SNMP traps in an EVPN Junos Fusion . . . . .	35
Understanding Layer 2 Unicast Forwarding in a Junos Fusion Data Center . . . . .	35
Cascade Interface Resolution . . . . .	35
BGP Next-hop Resolution . . . . .	35
Layer 2 Unicast Traffic over a VXLAN Tunnel . . . . .	36
Understanding Satellite Policies in a Junos Fusion . . . . .	36
Satellite Policies Overview . . . . .	36
Understanding Environment Monitoring Satellite Policies . . . . .	36
Understanding Uplink Failure Detection Satellite Policies . . . . .	37
Understanding Satellite Policies for Remapping Uplink Traffic Flows on a Junos Fusion Data Center . . . . .	37
Understanding the Flow of Data Packets in a Junos Fusion Topology . . . . .	38

<b>Chapter 2</b>	<b>Junos Fusion Data Center Configuration . . . . .</b>	<b>43</b>
	Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion . . . . .	43
	Configuring or Expanding a Junos Fusion Data Center . . . . .	48
	Preparing the Aggregation Devices . . . . .	48
	Preparing a Switch Running Junos OS to Become a Satellite Device . . . . .	49
	Configuring the FPC Slot IDs and Cascade Ports on Aggregation Devices . . . . .	50
	Managing Software Upgrade Groups on the Aggregation Device . . . . .	52
	Configuring the Dual Aggregation Device Topology (Dual Aggregation Device Topologies With MC-LAG Only) . . . . .	56
	Configuring a Junos Fusion Data Center With EVPN . . . . .	59
	Installing Satellite Software and Adding Satellite Devices to the Junos Fusion . . . . .	71
	Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion . . . . .	73
<b>Chapter 3</b>	<b>Junos Fusion Data Center Configuration Statements . . . . .</b>	<b>77</b>
	aging-timer (Junos Fusion) . . . . .	78
	alarm (Satellite Policies) . . . . .	79
	alias (Junos Fusion) . . . . .	80
	auto-satellite-conversion (Junos Fusion) . . . . .	81
	cascade-port . . . . .	82
	cascade-ports . . . . .	83
	description (Junos Fusion) . . . . .	84
	designated-event-forwarding (Junos Fusion) . . . . .	85
	dual-dr . . . . .	86
	environment-monitoring-policy (satellite-management) . . . . .	88
	environment-monitoring-policy (satellite-policies) . . . . .	89
	fpc (Junos Fusion) . . . . .	90
	linkdown (satellite-policies alarm) . . . . .	91
	peers-synchronize . . . . .	92
	redundancy-groups (Junos Fusion) . . . . .	93
	satellite (Junos Fusion Automatic Satellite Conversion) . . . . .	95
	satellite (Junos Fusion Satellite Device Homing) . . . . .	96
	satellite (Junos Fusion Satellite Software Upgrade Groups) . . . . .	97
	satellite-management (Junos Fusion) . . . . .	98
	serial-number (Junos Fusion) . . . . .	100
	single-home (Junos Fusion) . . . . .	101
	system-id (Junos Fusion) . . . . .	102
	upgrade-groups (Junos Fusion) . . . . .	104
<b>Chapter 4</b>	<b>Junos Fusion Data Center Administration . . . . .</b>	<b>107</b>
	Managing Satellite Software Upgrade Groups in a Junos Fusion . . . . .	107
	Creating a Satellite Software Upgrade Group . . . . .	108
	Adding Satellite Devices to a Satellite Software Upgrade Group . . . . .	108
	Removing a Satellite Device from a Satellite Software Upgrade Group . . . . .	109
	Modifying the Satellite Software Used by a Satellite Software Upgrade Group . . . . .	109

	Deleting Associated Satellite Software from a Satellite Software Upgrade Group . . . . .	110
	Deleting Satellite Software on the Aggregation Device . . . . .	111
	Verifying Connectivity, Device States, Satellite Software Versions, and Operations in a Junos Fusion . . . . .	111
	Verifying a Junos Fusion Configuration . . . . .	112
	Verifying Basic Junos Fusion Connectivity . . . . .	112
	Verifying the Satellite Device Hardware Model . . . . .	114
	Verifying Cascade Port and Uplink Port State . . . . .	114
	Verifying That a Cascade Port Recognizes a Satellite Device . . . . .	117
	Verifying Extended Port Operation . . . . .	119
	Verifying the Satellite Software Version . . . . .	120
	Verifying the Devices and Software Used in a Satellite Software Upgrade Group . . . . .	121
	Verifying EVPN Operations in a Junos Fusion Data Center . . . . .	122
	Verifying EVPN Connectivity . . . . .	123
	Verifying that EVPN Routes Are Being Learned . . . . .	124
	Verifying that Hosts and Servers Are Reachable . . . . .	127
	Converting a Satellite Device in a Junos Fusion to a Standalone Device . . . . .	128
	Download Junos OS Software . . . . .	129
	Disable the Automatic Conversion Configuration . . . . .	130
	Install Junos OS Software on the Satellite Device . . . . .	131
	Installing Junos OS Software on a Standalone Device Running Satellite Software . . . . .	132
<b>Chapter 5</b>	<b>Junos Fusion Data Center Operational Commands . . . . .</b>	<b>135</b>
	request chassis device-mode satellite . . . . .	137
	request chassis satellite disable . . . . .	138
	request chassis satellite enable . . . . .	140
	request chassis satellite file-copy . . . . .	141
	request chassis satellite install . . . . .	143
	request chassis satellite interface . . . . .	145
	request chassis satellite login . . . . .	146
	request chassis satellite reboot . . . . .	147
	request chassis satellite restart . . . . .	148
	request chassis satellite shell-command . . . . .	149
	request system software add . . . . .	150
	request system software delete . . . . .	164
	request system software rollback . . . . .	169
	request system storage cleanup . . . . .	174
	request system storage user-disk . . . . .	189
	show chassis alarms . . . . .	191
	show chassis environment . . . . .	211
	show chassis environment fpc . . . . .	296
	show chassis environment pem . . . . .	356
	show chassis environment routing-engine . . . . .	371
	show chassis fan . . . . .	380
	show chassis firmware . . . . .	398
	show chassis hardware . . . . .	415

	show chassis led satellite . . . . .	683
	show chassis routing-engine . . . . .	687
	show chassis satellite . . . . .	717
	show chassis satellite extended-port . . . . .	728
	show chassis satellite interface . . . . .	732
	show chassis satellite neighbor . . . . .	737
	show chassis satellite redundancy-group . . . . .	742
	show chassis satellite redundancy-group devices . . . . .	745
	show chassis satellite software . . . . .	748
	show chassis satellite statistics . . . . .	751
	show chassis satellite unprovision . . . . .	756
	show chassis satellite upgrade-group . . . . .	761
	show chassis temperature-thresholds . . . . .	765
	show ethernet-switching table . . . . .	809
	show interfaces extensive satellite-device . . . . .	832
	show interfaces satellite-device . . . . .	851
	show interfaces statistics . . . . .	856
	show interfaces terse satellite-device . . . . .	870
	show system core-dumps . . . . .	873
<b>Chapter 6</b>	<b>Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link in a Junos Fusion . . . . .</b>	<b>887</b>
	Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link . . . . .	887
	Automatic Interchassis Control Protocol (ICCP) Provisioning of an Interchassis Link . . . . .	887
	Automatic VLAN Provisioning of an Interchassis Link . . . . .	888
	no-auto-iccp-provisioning (Junos Fusion Redundancy Group) . . . . .	889
	no-auto-vlan-provisioning (Junos Fusion Redundancy Group) . . . . .	890
<b>Chapter 7</b>	<b>Configuration Synchronization in a Junos Fusion . . . . .</b>	<b>891</b>
	Understanding Configuration Synchronization . . . . .	891
	Benefits of Configuration Synchronization . . . . .	891
	How Configuration Synchronization Works . . . . .	891
	How to Enable Configuration Synchronization . . . . .	892
	How Configuration Synchronization is Supported . . . . .	892
	Configuration Groups for Local, Remote and Global Configurations . . . . .	892
	Creating Conditional Groups for Certain Devices . . . . .	893
	Applying Configuration Groups . . . . .	893
	Device Configuration Details for Configuration Synchronization . . . . .	893
	How Configurations and Commits Are Synchronized Between Devices . . . . .	894
	Synchronizing and Committing Configurations . . . . .	896
	Configure Devices for Configuration Synchronization . . . . .	896
	Create a Global Configuration Group . . . . .	898
	Create a Local Configuration Group . . . . .	901
	Create a Remote Configuration Group . . . . .	903
	Create Apply Groups for the Local, Remote, and Global Configurations . . . . .	905

	Synchronizing and Committing Configurations . . . . .	905
	Troubleshooting Remote Device Connections . . . . .	906
	groups . . . . .	909
	peers (Commit) . . . . .	911
	peers-synchronize . . . . .	912
<b>Chapter 8</b>	<b>Licenses in a Junos Fusion . . . . .</b>	<b>913</b>
	Understanding Junos Fusion Licenses . . . . .	913
<b>Chapter 9</b>	<b>Link Aggregation and LACP on Junos Fusion Data Center . . . . .</b>	<b>915</b>
	Understanding Link Aggregation and Link Aggregation Control Protocol in a	
	Junos Fusion . . . . .	915
	Link Aggregation in Junos Fusion . . . . .	915
	Link Aggregation Control Protocol in Junos Fusion . . . . .	915
	Configuring Link Aggregation and LACP in Junos Fusion . . . . .	916
	Software and Hardware Guidelines when Configuring Link Aggregation and	
	LACP in Junos Fusion . . . . .	917
	Configuring an Aggregated Ethernet Interface . . . . .	917
	Configuring Junos OS for Supporting Aggregated Devices . . . . .	919
	Configuring Virtual Links for Aggregated Devices . . . . .	919
	Configuring LACP Link Protection at the Chassis Level . . . . .	920
	Enabling LACP Link Protection . . . . .	920
	Configuring System Priority . . . . .	921
	Configuring the Maximum Links Limit . . . . .	921
	Configuring PPM on Junos Fusion . . . . .	922
<b>Chapter 10</b>	<b>MAC Address Synchronization in a Junos Fusion . . . . .</b>	<b>923</b>
	Understanding MAC Address Synchronization in a Junos Fusion . . . . .	923
	Understanding MAC Address Synchronization . . . . .	923
	Troubleshooting MAC Address Synchronization . . . . .	924
<b>Chapter 11</b>	<b>VLAN Autosensing in a Junos Fusion . . . . .</b>	<b>927</b>
	Understanding VLAN Autosensing . . . . .	927
	Understanding VLAN Autosensing . . . . .	927
	Configuring VLAN Autosensing . . . . .	927
	Clearing VLAN Members Learned by VLAN Autosensing . . . . .	928
	vlan-auto-sense (Interfaces) . . . . .	929
	vlan-auto-sense (Satellite) . . . . .	929
	clear ethernet-switching satellite vlan-auto-sense . . . . .	930
	show ethernet-switching interfaces satellite . . . . .	931
	show vlans satellite . . . . .	933
<b>Chapter 12</b>	<b>SNMP MIB Support on Junos Fusion Data Center . . . . .</b>	<b>935</b>
	Chassis MIB Support (Junos Fusion) . . . . .	935
<b>Chapter 13</b>	<b>DHCP Relay on Junos Fusion Data Center . . . . .</b>	<b>939</b>
	Understanding DHCP Relay in Junos Fusion Data Center . . . . .	939
	DHCP Relay Packet Flow . . . . .	939
	DHCP Option 82 . . . . .	939
	DHCP Relay Configuration . . . . .	940



<b>Chapter 14</b>	<b>LLDP and LLDP-MED on Junos Fusion Data Center . . . . .</b>	<b>941</b>
	Understanding LLDP and LLDP-MED on a Junos Fusion . . . . .	941
	LLDP and LLDP-MED in a Junos Fusion Overview . . . . .	941
	Understanding LLDP and LLDP-MED Configuration and Traffic Handling in a Junos Fusion . . . . .	942
<b>Chapter 15</b>	<b>DCBX on Junos Fusion Data Center . . . . .</b>	<b>943</b>
	Understanding DCBX on Junos Fusion Data Center . . . . .	943
	DCBX Overview on Junos Fusion Data Center . . . . .	943
	Understanding DCBX Traffic Handling on Junos Fusion Data Center . . . . .	943
	Understanding Satellite Device DCBX TLV Inspection to Enable and Disable PFC . . . . .	945
	show dcbx neighbors . . . . .	947
<b>Chapter 16</b>	<b>Local Switching on Junos Fusion Data Center . . . . .</b>	<b>975</b>
	Configuring Local Switching on Junos Fusion Data Center . . . . .	975
	local-switching . . . . .	978
<b>Chapter 17</b>	<b>Loop Detection and Prevention on Junos Fusion Data Center . . . . .</b>	<b>979</b>
	Understanding Loop Detection and Prevention on a Junos Fusion . . . . .	979
	Spanning Tree Protocols in a Junos Fusion . . . . .	979
	BPDU Protection in a Junos Fusion Data Center . . . . .	980
	Loop Detection in a Junos Fusion . . . . .	980
	Configuring Loop Detection in a Junos Fusion . . . . .	981
	loop-detect . . . . .	983
	interface (Loop Detection) . . . . .	984
	clear error loop-detect interface . . . . .	985
	show loop-detect interface . . . . .	986
	show loop-detect statistics interface . . . . .	988
<b>Chapter 18</b>	<b>Multicast Forwarding on Junos Fusion Data Center . . . . .</b>	<b>991</b>
	Multicast Forwarding at Layer 3 in a Junos Fusion Data Center with EVPN . . . . .	992
	Understanding Layer 3 Multicast Convergence Enhancements for Dual Aggregation Devices in Junos Fusion Data Center with MC-LAG . . . . .	997
	PIM Dual Designated Router Mode . . . . .	997
	Enhanced PIM Dual Designated Router Mode for Junos Fusion . . . . .	998
	Configuring Dual Designated Router Mode . . . . .	998
	Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN . . . . .	999
	Multicast Infrastructure in a Junos Fusion Data Center with EVPN . . . . .	1000
	Multicast Route Signaling and Source Traffic Forwarding in the EVPN Core . . . . .	1000
	Designated Forwarder Election . . . . .	1000
	IGMP Proxy and IGMP Report Synchronization in Aggregation Devices . . . . .	1001

ECIDs for Forwarding Multicast Traffic Between Aggregation Devices and Satellite Devices . . . . .	1002
Multicast Replication and Forwarding in a Junos Fusion Data Center with EVPN . . . . .	1003
Ingress Replication in the EVPN Core and Local Bias Forwarding to Multicast Destination Extended Ports . . . . .	1003
Local Bias Forwarding to Extended Ports with Ingress Replication to the Satellite Devices (No Local Replication) . . . . .	1005
Local Bias Forwarding to Extended Ports with Local Replication at the Satellite Devices . . . . .	1007
Designated Forwarder Traffic Forwarding with Local Replication at the Satellite Devices . . . . .	1009
Handling Split-horizon on a LAG of Ingress Extended Ports Across Satellite Devices . . . . .	1011
Understanding Multicast Replication in a Junos Fusion . . . . .	1014
Junos Fusion Multicast Replication Overview . . . . .	1014
ECIDs for Multicast Traffic . . . . .	1018
Multicast Replication Limitations in a Junos Fusion . . . . .	1019
Ingress Replication at the Aggregation Device to Satellite Devices . . . . .	1020
Egress (Local) Replication on the Satellite Devices . . . . .	1023
Local Replication for Layer 2 Multicast Traffic with IGMP Snooping . . . . .	1023
Local Replication for VLAN Flooding . . . . .	1026
Local Replication for Layer 3 Multicast Traffic Over IRB Interfaces . . . . .	1027
Configuring Egress (Local) Replication on a Junos Fusion . . . . .	1029
Monitoring Layer 2 Multicast Forwarding in a Junos Fusion Data Center with EVPN . . . . .	1030
Viewing EVPN Type 3 (Inclusive Multicast Ethernet Tag [IMET]) Routes for Configured VLANs . . . . .	1030
Checking Designated Forwarder Status of an Aggregation Device . . . . .	1031
Viewing Advertised EVPN Type 7 (IGMP Join Sync) and Type 8 (IGMP Leave Sync) Routes . . . . .	1032
Viewing Layer 2 Multicast Routes for Destination Extended Ports on Satellite Devices . . . . .	1033
Viewing Satellite Device Multicast Next-Hop Information . . . . .	1034
Viewing VLAN Flood Routes . . . . .	1035
local-replication . . . . .	1038
show ethernet-switching flood . . . . .	1039
show ethernet-switching flood next-hops satellite . . . . .	1045
show ethernet-switching flood satellite . . . . .	1050
show ethernet-switching satellite device . . . . .	1055
show multicast ecid-mapping satellite . . . . .	1059
show multicast next-hops satellite . . . . .	1062
show multicast snooping next-hops satellite . . . . .	1065
show multicast snooping route satellite . . . . .	1070
show multicast statistics satellite . . . . .	1076
show multicast summary satellite . . . . .	1077

<b>Chapter 19</b>	<b>Port Mirroring Analyzers on Junos Fusion Data Center . . . . .</b>	<b>1079</b>
	Understanding Port Mirroring on a Junos Fusion Data Center . . . . .	1079
	Port Mirroring Analyzers on a Junos Fusion Data Center Overview . . . . .	1079
	Understanding the Configuration of Analyzers in a Junos Fusion Data Center . . . . .	1080
	Limitations for Port Mirroring Analyzers on a Junos Fusion Data Center . . . . .	1080
	analyzer-vlan (Remote Analyzer) . . . . .	1081
	satellite (Remote Analyzer) . . . . .	1082
<b>Chapter 20</b>	<b>Remapping Uplink Traffic Flows on Junos Fusion Data Center . . . . .</b>	<b>1083</b>
	Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center . . . . .	1083
	Why 5-Tuple Hashing Might Not Be Enough . . . . .	1084
	How Uplink Port Pinning Improves Load Balancing . . . . .	1084
	How Flow-Based Uplink Selection Improves Load Balancing . . . . .	1085
	How Local Port Mirroring Is Used for Traffic Analysis and Monitoring . . . . .	1086
	Configuring Uplink Port Pinning for Satellite Devices on a Junos Fusion Data Center . . . . .	1086
	Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center . . . . .	1089
	Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center . . . . .	1094
	chassis-group-alias . . . . .	1096
	filter . . . . .	1098
	forwarding-policy . . . . .	1099
	fpc (Junos Fusion) . . . . .	1100
	holddown (satellite-policies) . . . . .	1101
	minimum-links (satellite-policies) . . . . .	1102
	mirror-egress . . . . .	1103
	mirror-ingress . . . . .	1104
	port-group-alias (satellite-policies) . . . . .	1105
	port-group-extended . . . . .	1106
	port-group-mirror . . . . .	1107
	port-group-uplink (satellite-policies) . . . . .	1108
	product-model (Junos Fusion) . . . . .	1109
	satellite-policies . . . . .	1110
	satellite-management (Junos Fusion) . . . . .	1112
<b>Chapter 21</b>	<b>Class of Service on Junos Fusion Data Center . . . . .</b>	<b>1115</b>
	Understanding CoS in Junos Fusion Data Center . . . . .	1115
	Overview of CoS on Different Types of Ports in Junos Fusion . . . . .	1116
	CoS on Extended Ports and Uplink Ports in Junos Fusion . . . . .	1117
	CoS on Cascade Ports in Junos Fusion . . . . .	1118
	Configuring CoS in Junos Fusion Data Center . . . . .	1118
	Configuring Behavior Aggregate Classifiers on Satellite Device Extended Ports . . . . .	1119
	Configuring Rewrite Rules on Satellite Device Extended Ports . . . . .	1120
	Changing the Default Scheduling Policy on an Aggregated Device Cascade Port . . . . .	1121
	Configuring PFC in Junos Fusion Data Center . . . . .	1125

<b>Chapter 22</b>	<b>Uplink Failure Detection on Junos Fusion Data Center . . . . .</b>	<b>1127</b>
	Overview of Uplink Failure Detection on a Junos Fusion . . . . .	1127
	Configuring Uplink Failure Detection on a Junos Fusion . . . . .	1129
	Enabling Uplink Failure Detection on a Junos Fusion . . . . .	1129
	Configuring a Candidate Uplink Port Policy . . . . .	1130
	Configuring Candidate Uplink Port Policy Default Configuration . . . . .	1131
	Configuring Candidate Uplink Port Policy Terms . . . . .	1131
	Configuring an Uplink Port Group . . . . .	1132
	candidate-uplink-port-policy (satellite-policies) . . . . .	1134
	holddown (candidate-uplink-port-profile) . . . . .	1135
	minimum-links (candidate-uplink-port-profile) . . . . .	1136
	pic (satellite-policies port-group-alias) . . . . .	1137
	port (satellite-policies port-group-alias) . . . . .	1138
	port-group-alias (satellite-policies) . . . . .	1139
	product-model (Junos Fusion) . . . . .	1140
	satellite-policies . . . . .	1141
	term (candidate-uplink-policy) . . . . .	1143
	uplink-failure-detection (Junos Fusion) . . . . .	1144
	uplink-port-group (Junos Fusion) . . . . .	1145
	show chassis satellite . . . . .	1146

# List of Figures

<b>Part 1</b>	<b>Junos Fusion Data Center</b>	
<b>Chapter 1</b>	<b>Junos Fusion Data Center Overview</b>	<b>3</b>
	Figure 1: Basic Junos Fusion Data Center Topology	4
	Figure 2: Junos Fusion Data Center Topology with Dual Aggregation Devices Using MC-LAG	4
	Figure 3: Junos Fusion Data Center Topology with Four Aggregation Devices Using EVPN	5
	Figure 4: Cascade Ports	8
	Figure 5: Junos Fusion Data Center Ports	9
	Figure 6: Cascade, Uplink, and Extended Ports in a Junos Fusion Topology With Two Aggregation Devices and MC-LAG	13
	Figure 7: Cascade, Uplink, and Extended Ports in a Junos Fusion Data Center Topology With Four Aggregation Devices and EVPN	14
	Figure 8: Junos Fusion Data Center Topology With EVPN: Ethernet Segments	27
	Figure 9: Junos Fusion Data Center Topology With EVPN: VXLAN Tunnels	32
	Figure 10: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Scenario 1	39
	Figure 11: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Scenario 2	40
<b>Chapter 2</b>	<b>Junos Fusion Data Center Configuration</b>	<b>43</b>
	Figure 12: Junos Fusion Data Center with EVPN Architecture	60
<b>Chapter 16</b>	<b>Local Switching on Junos Fusion Data Center</b>	<b>975</b>
	Figure 13: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Extended Mode	976
	Figure 14: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Local Switching enabled	976
<b>Chapter 18</b>	<b>Multicast Forwarding on Junos Fusion Data Center</b>	<b>991</b>
	Figure 15: Junos Fusion Data Center with EVPN Network Topology	993
	Figure 16: Junos Fusion Data Center with EVPN—Ingress Replication in EVPN Core and Local Bias Forwarding	1004
	Figure 17: Junos Fusion Data Center with EVPN—Local Bias with Local Replication Not Enabled	1006
	Figure 18: Junos Fusion Data Center with EVPN—Local Bias Forwarding with Local Replication Enabled	1008
	Figure 19: Junos Fusion Data Center with EVPN—Designated Forwarder Using Local Replication	1010
	Figure 20: Junos Fusion Data Center with EVPN—Multicast Source LAG of Extended Ports Spanning Satellite Devices	1013

	Figure 21: Multicast Replication in a Junos Fusion Data Center with MC-LAG . .	1015
	Figure 22: Multicast Replication in a Junos Fusion Data Center with EVPN . . .	1016
	Figure 23: Ingress Replication at the Aggregation Device . . . . .	1021
	Figure 24: Ingress Replication to the Satellite Devices in a Junos Fusion with EVPN . . . . .	1022
	Figure 25: Local Replication with Layer 2 Multicast and IGMP Snooping in Junos Fusion . . . . .	1024
	Figure 26: Local Replication with Layer 2 Multicast and IGMP Snooping in Junos Fusion Data Center with EVPN . . . . .	1025
	Figure 27: Local Replication with VLAN Flooding . . . . .	1026
	Figure 28: Local Replication with Layer 3 Multicast . . . . .	1028
<b>Chapter 21</b>	<b>Class of Service on Junos Fusion Data Center . . . . .</b>	<b>1115</b>
	Figure 29: Basic Junos Fusion Topology . . . . .	1115
	Figure 30: Junos Fusion CoS Feature Application . . . . .	1116

# List of Tables

	<b>About the Documentation</b> . . . . .	<b>xvii</b>
	Table 1: Notice Icons . . . . .	xix
	Table 2: Text and Syntax Conventions . . . . .	xx
<b>Part 1</b>	<b>Junos Fusion Data Center</b>	
<b>Chapter 1</b>	<b>Junos Fusion Data Center Overview</b> . . . . .	<b>3</b>
	Table 3: Supported Aggregation Device Hardware and Initial Junos OS Release . . . . .	22
	Table 4: QFX10002 Switch Cascade Port Support . . . . .	23
	Table 5: Line Cards on QFX10008 or QFX10016 Switch Cascade Port Support . . . . .	23
	Table 6: Supported Satellite Device Hardware and Initial Junos OS Release . . . . .	24
	Table 7: Per-Ethernet Segment and per-EVI Ethernet Autodiscovery Route Format . . . . .	30
<b>Chapter 5</b>	<b>Junos Fusion Data Center Operational Commands</b> . . . . .	<b>135</b>
	Table 8: request system storage cleanup Output Fields . . . . .	177
	Table 9: show chassis alarms Output Fields . . . . .	199
	Table 10: show chassis environment Output Fields . . . . .	220
	Table 11: show chassis environment fpc Output Fields . . . . .	300
	Table 12: show chassis environment pem Output Fields . . . . .	359
	Table 13: show chassis environment routing-engine Output Fields . . . . .	374
	Table 14: show chassis fan Output Fields . . . . .	383
	Table 15: show chassis firmware Output Fields . . . . .	402
	Table 16: Routing Engines Displaying DIMM Information . . . . .	419
	Table 17: show chassis hardware Output Fields . . . . .	425
	Table 18: show chassis led Output Fields . . . . .	684
	Table 19: show chassis routing-engine Output Fields . . . . .	691
	Table 20: show chassis satellite Output Fields . . . . .	718
	Table 21: show chassis satellite extended-port Output Fields . . . . .	729
	Table 22: show chassis satellite interface Output Fields . . . . .	733
	Table 23: show chassis satellite neighbor Output Fields . . . . .	737
	Table 24: show chassis satellite redundancy-groups Output Fields . . . . .	743
	Table 25: show chassis satellite redundancy-groups Output Fields . . . . .	745
	Table 26: show chassis satellite software Output Fields . . . . .	748
	Table 27: show chassis satellite statistics Output Fields . . . . .	751
	Table 28: show chassis satellite unprovision Output Fields . . . . .	757
	Table 29: show chassis satellite upgrade-group Output Fields . . . . .	762
	Table 30: show chassis temperature-thresholds Output Fields . . . . .	768
	Table 31: show ethernet-switching table Output Fields . . . . .	812

	Table 32: show ethernet-switching table Output Fields . . . . .	813
	Table 33: show ethernet-switching table Output fields . . . . .	813
	Table 34: show ethernet-switching table Output Fields . . . . .	814
	Table 35: show interfaces extensive satellite-device Output Fields . . . . .	832
	Table 36: show interfaces satellite-device Output Fields . . . . .	851
	Table 37: show interfaces terse satellite-device Output Fields . . . . .	870
	Table 38: show system core-dumps Output Fields . . . . .	876
<b>Chapter 8</b>	<b>Licenses in a Junos Fusion . . . . .</b>	<b>913</b>
	Table 39: Junos Fusion License Model Numbers for Satellite Devices . . . . .	914
<b>Chapter 11</b>	<b>VLAN Autosensing in a Junos Fusion . . . . .</b>	<b>927</b>
	Table 40: show ethernet-switching interfaces satellite Output Fields . . . . .	931
	Table 41: show vlans satellite Output Fields . . . . .	933
<b>Chapter 12</b>	<b>SNMP MIB Support on Junos Fusion Data Center . . . . .</b>	<b>935</b>
	Table 42: CIDX's for Satellite Devices . . . . .	935
	Table 43: SNMP Traps Generated for Satellite Devices . . . . .	937
<b>Chapter 15</b>	<b>DCBX on Junos Fusion Data Center . . . . .</b>	<b>943</b>
	Table 44: show dcbx neighbors Output Fields . . . . .	948
<b>Chapter 17</b>	<b>Loop Detection and Prevention on Junos Fusion Data Center . . . . .</b>	<b>979</b>
	Table 45: show loop-detect interface Output Fields . . . . .	986
	Table 46: show loop-detect statistics interface Output Fields . . . . .	988
<b>Chapter 18</b>	<b>Multicast Forwarding on Junos Fusion Data Center . . . . .</b>	<b>991</b>
	Table 47: show ethernet-switching flood next-hops satellite Command Output Fields . . . . .	1046
	Table 48: show ethernet-switching flood satellite Command Output Fields . . .	1051
	Table 49: show ethernet-switching satellite device Command Output Fields . .	1055
	Table 50: show multicast ecid-mapping satellite Command Output Fields . . .	1059
	Table 51: show multicast next-hops satellite Command Output Fields . . . . .	1062
	Table 52: show multicast snooping next-hops satellite Command Output Fields . . . . .	1066
	Table 53: show multicast snooping route satellite Command Output Fields . . .	1071
<b>Chapter 20</b>	<b>Remapping Uplink Traffic Flows on Junos Fusion Data Center . . . . .</b>	<b>1083</b>
	Table 54: Packet Fields and Match Conditions Supported for Flow-based Uplink Selection . . . . .	1093
<b>Chapter 22</b>	<b>Uplink Failure Detection on Junos Fusion Data Center . . . . .</b>	<b>1127</b>
	Table 55: UFD Default Uplink Interfaces for Satellite Devices . . . . .	1128
	Table 56: Junos Fusion Uplink Failure Detection Default Configuration . . . . .	1130
	Table 57: show chassis satellite Output Fields . . . . .	1147



# About the Documentation

- Documentation and Release Notes on page xvii
- Using the Examples in This Manual on page xvii
- Documentation Conventions on page xix
- Documentation Feedback on page xxi
- Requesting Technical Support on page xxi

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

## Documentation Conventions

Table 1 on page xix defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xx defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b>  No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols <b>ospf area area-id</b>] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub</b> <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast</b>   <b>multicast</b>  ( <i>string1</i>   <i>string2</i>   <i>string3</i> )
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members</b> [ <b>community-ids</b> ]
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

## GUI Conventions

Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
<b>&gt;</b> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:



- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

## Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.

## PART 1

# Junos Fusion Data Center

- [Junos Fusion Data Center Overview on page 3](#)
- [Junos Fusion Data Center Configuration on page 43](#)
- [Junos Fusion Data Center Configuration Statements on page 77](#)
- [Junos Fusion Data Center Administration on page 107](#)
- [Junos Fusion Data Center Operational Commands on page 135](#)
- [Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link in a Junos Fusion on page 887](#)
- [Configuration Synchronization in a Junos Fusion on page 891](#)
- [Licenses in a Junos Fusion on page 913](#)
- [Link Aggregation and LACP on Junos Fusion Data Center on page 915](#)
- [MAC Address Synchronization in a Junos Fusion on page 923](#)
- [VLAN Autosensing in a Junos Fusion on page 927](#)
- [SNMP MIB Support on Junos Fusion Data Center on page 935](#)
- [DHCP Relay on Junos Fusion Data Center on page 939](#)
- [LLDP and LLDP-MED on Junos Fusion Data Center on page 941](#)
- [DCBX on Junos Fusion Data Center on page 943](#)
- [Local Switching on Junos Fusion Data Center on page 975](#)
- [Loop Detection and Prevention on Junos Fusion Data Center on page 979](#)
- [Multicast Forwarding on Junos Fusion Data Center on page 991](#)
- [Port Mirroring Analyzers on Junos Fusion Data Center on page 1079](#)
- [Remapping Uplink Traffic Flows on Junos Fusion Data Center on page 1083](#)
- [Class of Service on Junos Fusion Data Center on page 1115](#)
- [Uplink Failure Detection on Junos Fusion Data Center on page 1127](#)





## CHAPTER 1

# Junos Fusion Data Center Overview

- [Junos Fusion Data Center Overview on page 3](#)
- [Understanding Junos Fusion Data Center Components on page 6](#)
- [Understanding Junos Fusion Ports on page 12](#)
- [Understanding Software in a Junos Fusion Data Center on page 17](#)
- [Understanding Configuration Synchronization in a Junos Fusion on page 20](#)
- [Understanding Junos Fusion Data Center Software and Hardware Requirements on page 21](#)
- [Understanding ICCP in a Junos Fusion using Dual Aggregation Devices on page 24](#)
- [Understanding EVPN in a Junos Fusion Data Center on page 26](#)
- [Understanding Designated Event Forwarding of SNMP Traps in an EVPN Junos Fusion Data Center on page 34](#)
- [Understanding Layer 2 Unicast Forwarding in a Junos Fusion Data Center on page 35](#)
- [Understanding Satellite Policies in a Junos Fusion on page 36](#)
- [Understanding the Flow of Data Packets in a Junos Fusion Topology on page 38](#)

## Junos Fusion Data Center Overview

---


Junos Fusion provides a method of significantly expanding the number of available network interfaces on a device—called an *aggregation device*—by allowing the aggregation device to add interfaces through interconnections with *satellite devices*. The entire system—the interconnected aggregation device and satellite devices—is called a *Junos Fusion*. A Junos Fusion simplifies network topologies and administration because it appears to the larger network as a single, port-dense device that can be managed from one management IP address.

Junos Fusion Data Center brings the Junos Fusion technology to data center networks. In a Junos Fusion Data Center, QFX10002, QFX10008, and QFX10016 switches act as aggregation devices while EX4300, QFX5100, QFX5110, and QFX5200 switches act as satellite devices.

In a Junos Fusion Data Center, each satellite device has at least one connection to the aggregation device. The aggregation device acts as the single point of management for all devices in the Junos Fusion Data Center. The satellite devices provide network-facing interfaces that send and receive network traffic.

A basic Junos Fusion topology is composed of an aggregation device and multiple satellite devices. Each satellite device has at least one connection to the aggregation device. The satellite devices provide interfaces that send and receive network traffic. Network traffic can be forwarded over the aggregation device within the Junos Fusion. [Figure 1 on page 4](#) provides an illustration of a basic Junos Fusion Data Center topology.

*Figure 1: Basic Junos Fusion Data Center Topology*

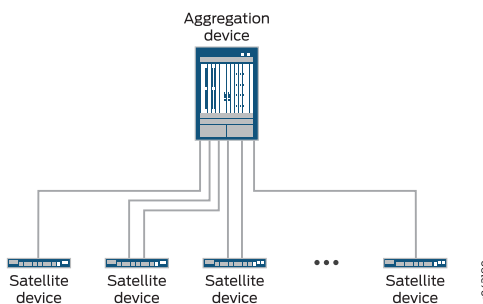

Junos Fusion Data Center supports up to four aggregation devices that can be multihomed to each satellite device. A multihomed topology with multiple aggregation devices provides load balancing and redundancy to the Junos Fusion Data Center topology. A Junos Fusion Data Center can support two aggregation devices using the ICCP protocol from MC-LAG to connect and maintain the Junos Fusion topology. Starting with Junos OS Release 18.1R2-S2, a Junos Fusion Data Center can support four aggregation devices using Ethernet VPN (EVPN) to connect and maintain the Junos Fusion topology. [Figure 2 on page 4](#) shows a Junos Fusion Data Center with two aggregation devices using MC-LAG, while [Figure 3 on page 5](#) shows a Junos Fusion Data Center with four aggregation devices using EVPN.

*Figure 2: Junos Fusion Data Center Topology with Dual Aggregation Devices Using MC-LAG*


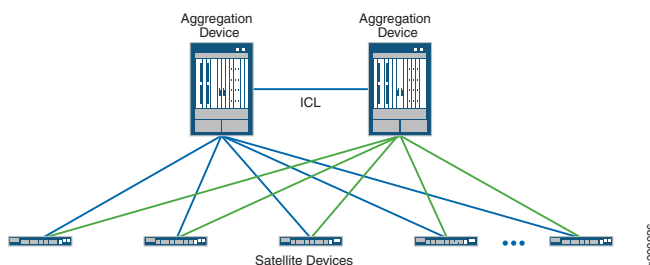


Figure 3: Junos Fusion Data Center Topology with Four Aggregation Devices Using EVPN

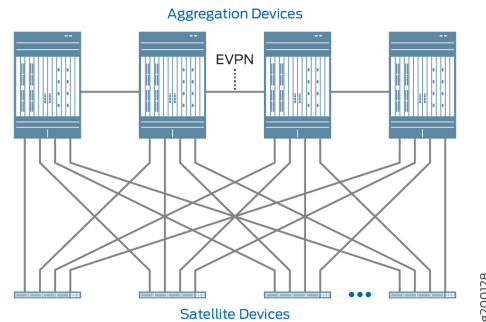

A QFX10002, QFX10008 or QFX10016 switch acting as an aggregation device in a Junos Fusion Data Center is responsible for almost all management tasks, including interface configuration for every satellite device interface in the topology. The aggregation device runs Junos OS software for the entire Junos Fusion Data Center, and the network-facing interfaces on the satellite devices—called *extended ports*—are configured from the aggregation device and support features that are supported by the version of Junos OS running on the aggregation device.

The satellite devices and the aggregation device maintain the control plane for the Junos Fusion Data Center using multiple internal satellite management protocols. Network traffic can be forwarded between satellite devices through the aggregation device. Junos Fusion Data Center supports the IEEE 802.1BR standard.

Junos Fusion Data Center provides the following benefits:

- **Simplified network topology**—You can combine multiple devices into a topology that appears to the larger network as a single device, and then manage the device from a single IP address.
- **Port density**—You can configure a large number of network-facing interfaces into a topology that operates as a single network device.
- **Manageability**—You can manage a Junos Fusion that supports a large number of network-facing interfaces from a single point. The single point of management, the aggregation device, runs Junos OS software for the entire Junos Fusion.
- **Flexibility**—You can easily expand the size of your Junos Fusion by adding satellite devices to the Junos Fusion as your networking needs grow.
- **Investment protection**—In environments that need to expand because the capabilities of the existing hardware are maximized, a Junos Fusion can be a logical upgrade option because it enables the network to evolve with minimal disruption to the existing network and without having to remove the existing, previously purchased devices from the network.

**Release History Table**

Release	Description
18.1R2-S2	Starting with Junos OS Release 18.1R2-S2, a Junos Fusion Data Center can support four aggregation devices using Ethernet VPN (EVPN) to connect and maintain the Junos Fusion topology.

**Related Documentation**

- [Understanding Junos Fusion Data Center Components on page 6](#)
- [Understanding Junos Fusion Ports on page 12](#)
- [Understanding the Flow of Data Packets in a Junos Fusion Topology on page 38](#)
- [Configuring or Expanding a Junos Fusion Data Center on page 48](#)

---

## Understanding Junos Fusion Data Center Components

This topic describes the components of a Junos Fusion Data Center. It covers:

- [Aggregation Devices on page 6](#)
- [Dual Aggregation Device Topologies on page 7](#)
- [Four Aggregation Device Topologies on page 7](#)
- [Satellite Devices on page 7](#)
- [Cascade Ports on page 8](#)
- [Uplink Ports on page 9](#)
- [Extended Ports on page 9](#)
- [Understanding FPC Identifiers and Assignment in a Junos Fusion on page 10](#)
- [Understanding Software in a Junos Fusion Data Center on page 11](#)
- [Understanding Interface Naming in a Junos Fusion on page 11](#)
- [Understanding Feature Configuration in a Junos Fusion Data Center on page 11](#)

### Aggregation Devices

The aggregation device acts as the single point of management for all devices in the Junos Fusion. All Junos Fusion management responsibilities, including interface configuration for every satellite device interface in the Junos Fusion, are handled by the aggregation device. The aggregation device runs Junos OS software for the entire Junos Fusion, and the interfaces on the satellite devices are configured from the aggregation device and mostly support features that are supported by the version of Junos OS running on the aggregation device.

An aggregation device:

- Is a QFX10002, QFX10008 or QFX10016 switch in a Junos Fusion Data Center.
- Has at least one connection to each satellite device.

- Runs Junos OS software for the entire Junos Fusion.
- Manages the entire Junos Fusion. All Junos Fusion configuration management is handled on the aggregation device, including interface configuration of the satellite device interfaces.

The hardware specifications for aggregation devices in a Junos Fusion Data Center are discussed in greater detail in [“Understanding Junos Fusion Data Center Software and Hardware Requirements” on page 21](#).

## Dual Aggregation Device Topologies

Junos Fusion Data Center supports dual aggregation device topologies. The advantages of a dual aggregation device topology include:

- Load balancing. Traffic traversing the Junos Fusion Data Center can be load balanced across both aggregation devices.
- Redundancy. The Junos Fusion Data Center can pass traffic even in the unexpected event of an aggregation device failure.

A Junos Fusion Data Center supports multiple aggregation devices using Multichassis Link Aggregation (MC-LAG) groups and the Inter-Chassis Control Protocol (ICCP).

A Junos Fusion Data Center with dual aggregation devices is configured as an MC-LAG with one redundancy group. The redundancy group includes two peering chassis IDs—the aggregation devices—and all satellite devices in the Junos Fusion Data Center. The aggregation devices are connected using an interchassis link (ICL) in the MC-LAG topology.

ICCP runs inside the Junos Fusion on all dual aggregation topologies. ICCP parameters are automatically configured in a Junos Fusion Data Center by the automatic ICCP provisioning feature, which simplifies the ICCP configuration procedure. ICCP configuration can be customized, however. See [“Understanding ICCP in a Junos Fusion using Dual Aggregation Devices” on page 24](#) for information on ICCP. See *Configuring Multichassis Link Aggregation on EX Series Switches* for information on configuring ICCP parameters.

## Four Aggregation Device Topologies

Starting with Junos OS Release 18.1R2-S2, Junos Fusion Data Center enables all satellite devices to be multihomed to four aggregation devices. In this topology, the four aggregation devices comprise a core fabric in which EVPN is used to learn about the aggregation devices and advertise host and server MAC addresses, network reachability information, and other states among the aggregation devices.

A Junos Fusion Data Center with four aggregation devices is configured as one redundancy group. The redundancy group includes four peering chassis IDs—the aggregation devices—and all satellite devices in the Junos Fusion Data Center.

For more information about Junos Fusion Data Center with EVPN, including the benefits of using it, see [“Understanding EVPN in a Junos Fusion Data Center” on page 26](#).

## Satellite Devices

A satellite device:

- Is an EX4300, QFX5100, QFX5110, or QFX5200 switch in a Junos Fusion Data Center.
- Runs a version of satellite software after being converted into a satellite device.
- Has a direct connection to at least one aggregation device.
- Provides network interfaces to send and receive traffic for the Junos Fusion.
- Is managed and configured by the aggregation device.

The hardware specifications for satellite devices in a Junos Fusion Data Center are discussed in greater detail in [Understanding Junos Fusion Data Center Software and Hardware Requirements](#).

## Cascade Ports

A *cascade port* is a port on an aggregation device that sends and receives control and network traffic from an attached satellite device. All traffic passed between a satellite device and the aggregation device in a Junos Fusion traverses the cascade port.


The link that connects an aggregation device to a satellite device has an interface on each end of the link. The interface on the aggregation device end of the link is a cascade port. The interface on the satellite device end of the link is an uplink port.

Satellite devices are added to a Junos Fusion by configuring the interface on the aggregation device end of a link into a satellite device.

A cascade port is typically a 10-Gbps interface with an SFP+ transceiver or a 40-Gbps interface with a QSFP+ transceiver, but any interface on the aggregation device that connects to the satellite device can be converted into a cascade port.

The location of the cascade ports in a Junos Fusion are illustrated in [Figure 4 on page 8](#).

**Figure 4: Cascade Ports**

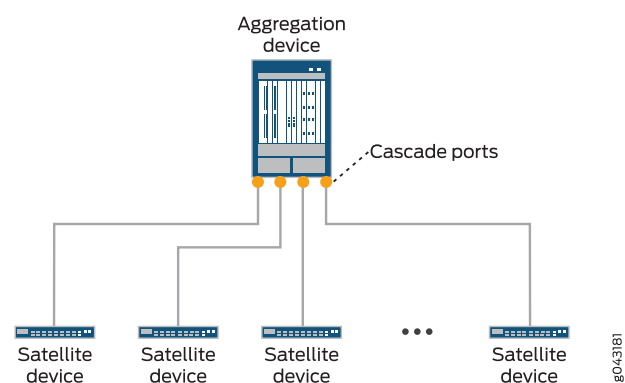

The hardware specifications for cascade ports for a Junos Fusion Data Center are discussed in greater detail in ["Understanding Junos Fusion Data Center Software and Hardware Requirements" on page 21](#).

## Uplink Ports

An *uplink port* is a physical interface on a satellite device that provides a connection to an aggregation device. All network and control traffic on a satellite device that is transported to an aggregation device is sent or received on the satellite device's uplink port.

The link that connects an aggregation device to a satellite device has an interface on each end of the link. The interface on the aggregation device end of the link is a cascade port. The interface on the satellite device end of the link is an uplink port.

Uplink ports are automatically created when a cascade port is configured on the aggregation device end of the link.


A single satellite device can have multiple uplink port connections to an aggregation device. The multiple uplink ports connections to a single aggregation device provide redundancy and additional bandwidth for satellite device to aggregation device connections.

Satellite devices in a Junos Fusion with multiple aggregation devices must have at least one uplink port connection to each aggregation device.

An uplink port is typically a 10-Gbps SFP+ interface or a 40-Gbps QSFP+ interface, but any 1-Gbps interface that connects a satellite device to an aggregation device can become an uplink port.

Figure 5 on page 9 labels the uplink port location in a Junos Fusion Data Center.

**Figure 5: Junos Fusion Data Center Ports**

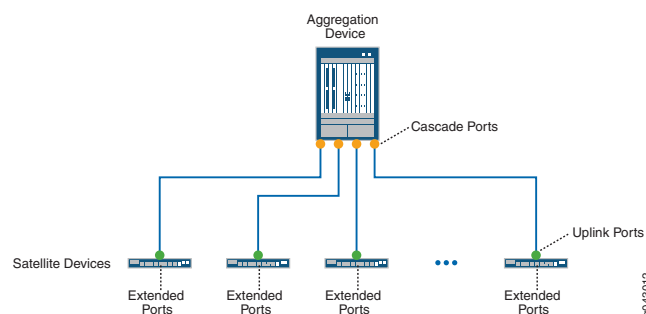

## Extended Ports

An *extended port* is a network-facing port on a satellite device that transmits and receives network traffic for the Junos Fusion.

Network traffic received on an extended port is passed, when appropriate, to the aggregation device over the uplink port to cascade port link.

Each network-facing port on a satellite device in a Junos Fusion is also an extended port. A single cascade port is associated with multiple extended ports.

Figure 5 on page 9 labels the extended ports location in a Junos Fusion Data Center.

## Understanding FPC Identifiers and Assignment in a Junos Fusion

In a Junos Fusion, each satellite device must have an Flexible PIC Concentrator identifier (FPC ID).

The FPC ID is in the range of 65-254, and is used for Junos Fusion configuration, monitoring, and maintenance. Interface names—which are identified using the *type-fpc / pic / port* format—use the FPC ID as the *fpc* variable when the satellite device is participating in a Junos Fusion. For instance, built-in port 2 on PIC 0 of a satellite device—a Gigabit Ethernet interface on a satellite device that is using 101 as its FPC ID—uses **ge-101/0/2** as its interface name.

A Junos Fusion provides two methods of assigning an FPC identifier:

- Unique ID-based FPC identification
- Connectivity-based FPC identification

In unique ID-based FPC identification, the FPC ID is mapped to the serial number or MAC address of the satellite device. For instance, if a satellite device whose serial number was **ABCDEFGHIJKL** was assigned to FPC ID 110 using unique ID-based FPC identification, the satellite device with the serial number **ABCDEFGHIJKL** will always be associated with FPC ID 110 in the Junos Fusion. If the satellite device with the serial number **ABCDEFGHIJKL** connects to the aggregation device using a different cascade port, the FPC ID for the satellite device remains 110.

In connectivity-based FPC identification, the FPC ID is mapped to the cascade port. For instance, connectivity-based FPC identification can be used to assign FPC ID 120 to the satellite device that connects to the aggregation device using cascade port **xe-0/0/2**. If the existing satellite device that connects to cascade port **xe-0/0/2** is replaced by a new satellite device, the new satellite device connected to the cascade port assumes FPC ID 120.

Unique ID-based FPC identification is configured using the **serial-number** or **system-id** statement in the **[edit chassis satellite-management fpc slot-id]** hierarchy.

Connectivity-based FPC identification is configured using the **cascade-ports** statement in the **[edit chassis satellite-management fpc slot-id]** hierarchy.

FPC ID configurations must be identical between aggregation devices in a Junos Fusion Data Center with multiple aggregation devices. A satellite device that has two FPC IDs because of mismatched aggregation device configurations goes offline until the configuration issue is fixed.

If a prospective satellite device is connected to a Junos Fusion without having a configured FPC slot ID, the prospective satellite device does not participate in the Junos Fusion until an FPC ID is associated with it. The **show chassis satellite unprovision** output includes a list of satellite devices that are not participating in a Junos Fusion because of an FPC ID association issue.



## Understanding Software in a Junos Fusion Data Center

In a Junos Fusion, the aggregation device is responsible for all configuration and management within the Junos Fusion and runs Junos OS software.

The satellite devices, meanwhile, run satellite software that has the built-in intelligence to extend features on the Junos OS software onto the satellite device.

The role of Junos OS and satellite software is discussed in greater detail in [“Understanding Software in a Junos Fusion Data Center” on page 17](#).

You can see software version compatibility information for any Junos Fusion Data Center using the [Junos Fusion Hardware and Software Compatibility Matrices](#).

The software specifications for a Junos Fusion Data Center are discussed in greater detail in [Understanding Junos Fusion Data Center Software and Hardware Requirements](#).

## Understanding Interface Naming in a Junos Fusion

Network interfaces in Junos OS are specified as follows:

- *type-fpc / pic / port*

In a Junos Fusion, the interface names on the satellite devices follow this naming convention, where:

- The *type* does not change for the interface when it becomes part of a Junos Fusion. The *type* for an **xe** interface, for instance, remains **xe** regardless of whether the interface is or is not in a Junos Fusion.

You will see internally created **sd** interfaces in a Junos Fusion. The **sd** interfaces map to uplink ports and are used internally by the Junos Fusion to process some types of traffic.

- The *fpc* identifier in a Junos Fusion, which is user-configurable, is the FPC slot identifier. See [“Understanding FPC Identifiers and Assignment in a Junos Fusion” on page 10](#).

For instance, built-in port 2 on PIC 0—a Gigabit Ethernet interface that is acting as an extended port—on the satellite device numbered as FPC slot 101 would be identified as:

**ge-101/0/2**

## Understanding Feature Configuration in a Junos Fusion Data Center

In a Junos Fusion, the aggregation device is responsible for all configuration and management within the Junos Fusion and runs Junos OS software.

In a Junos Fusion with one aggregation device, all configuration—whether it’s a configuration statement that enables a feature globally or enables a feature on a specific extended port—is done on the lone aggregation device.

A Junos Fusion using multiple aggregation devices often requires that the configuration of a feature—for example, an extended port, and entities such as routing instances and

VLANs that include the extended port—must match on all aggregation devices. If a configuration statement for the feature—in this case, the extended port—is specified differently on one aggregation device, the statement on that particular aggregation device might be implemented in an unpredictable manner or might not be implemented at all.

Junos Fusion Data Center supports configuration synchronization, a feature that allows users to specify configuration statements within a group on one device and then share that group with other devices. In a Junos Fusion Data Center with multiple aggregation devices, configuration synchronization can be used to ensure identical configuration between aggregation devices by sharing configuration between aggregation devices. See [Enterprise Data Center: Junos Fusion Data Center Architecture](#) for a sample Junos Fusion Data Center configuration primarily configured using configuration synchronization.

In a Junos Fusion Data Center with EVPN, QFX10008 and QFX10016 switches, which support two Routing Engines, can function as aggregation devices. From the perspective of configuration synchronization, each Routing Engine in these switches is considered to be a configuration peer. When applying a configuration group to QFX10008 or QFX10016 switches, remember to apply the group to each Routing Engine.

See [“Understanding Configuration Synchronization in a Junos Fusion” on page 20](#) for additional information on feature configuration in a Junos Fusion Data Center.

**Related  
Documentation**

- [Configuring or Expanding a Junos Fusion Data Center on page 48](#)

---

## Understanding Junos Fusion Ports

---


In a Junos Fusion topology, cascade, uplink, and extended ports are components that play key roles. [Figure 6 on page 13](#) and [Figure 7 on page 14](#) show sample Junos Fusion topologies, which serve as points of reference for this discussion of cascade, uplink, and extended ports.

In the Junos Fusion topology shown in [Figure 6 on page 13](#), two aggregation devices and two satellite devices are deployed. The aggregation devices are connected to each other through a multichassis link aggregation group (MC-LAG). Each satellite device is connected to its respective aggregation device through one or two links.


In the Junos Fusion Data Center topology shown in [Figure 7 on page 14](#), four aggregation devices and four satellite devices are deployed. The four aggregation devices form an EVPN core fabric wherein each satellite device is multihomed to each aggregation device. Also, in this topology, some hosts are single-homed to a satellite device, and other hosts are multihomed to two satellite devices.

On the aggregation devices in each illustration, each link is connected to a cascade port (for example, CP1 on Aggregation device 1), while on the satellite devices, each link is connected to an uplink port (for example, UP1 on Satellite device 1). Hosts 1 through 4 are connected to Satellite device 1 through extended ports EP1 through EP4, and so on.

Figure 6: Cascade, Uplink, and Extended Ports in a Junos Fusion Topology With Two Aggregation Devices and MC-LAG

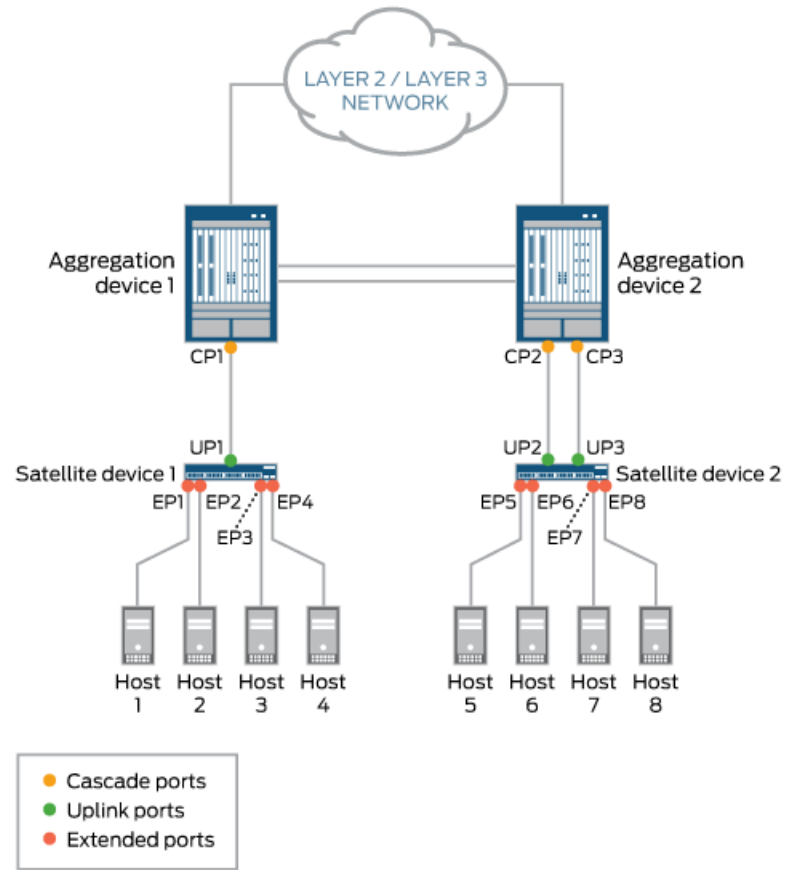

**Figure 7: Cascade, Uplink, and Extended Ports in a Junos Fusion Data Center Topology With Four Aggregation Devices and EVPN**

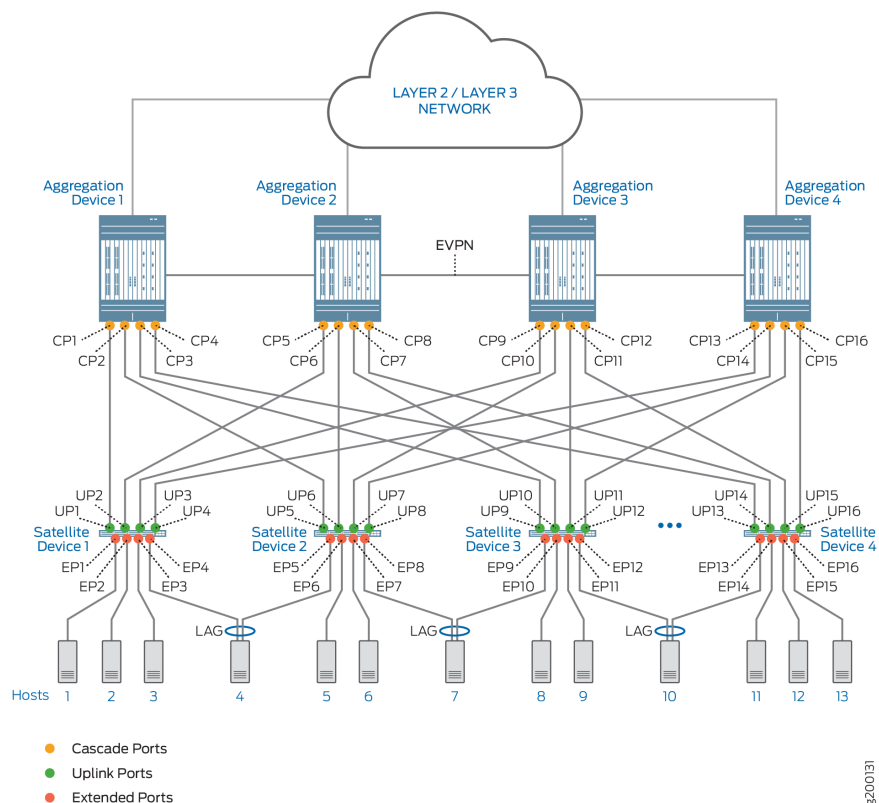

This topic provides the following information:

- [Understanding Cascade Ports on page 14](#)
- [Understanding Uplink Ports on page 15](#)
- [Understanding Extended Ports on page 16](#)

## Understanding Cascade Ports

A *cascade port* is a physical interface on an aggregation device that provides a connection to a satellite device. A cascade port on an aggregation device connects to an uplink port on a satellite device.

On an aggregation device, you can set up one or more cascade port connections with a satellite device. For example, in the Junos Fusion topology shown in [Figure 6 on page 13](#), Aggregation device 1 has one cascade port connection (CP1) to Satellite device 1, and Aggregation device 2 has two cascade port connections (CP2 and CP3) to Satellite device 2. In the Junos Fusion Data Center in [Figure 7 on page 14](#), where EVPN multihoming is implemented, each aggregation device is connected to each satellite device through one cascade port. For example, on Aggregation device 1, cascade port CP1 is connected to the leftmost satellite device, cascade port CP2 is connected to the next satellite device, and so on.

When there are multiple cascade port connections to a satellite device, as shown in [Figure 6 on page 13](#), the traffic handled by the ports is automatically load-balanced. For a packet destined for a satellite device, the cascade port over which to forward the packet is chosen based on a per-packet hash that is computed using key fields in the packet. To select the key fields to be used, you can specify the **hash-key** statement in the **[edit forwarding-options]** hierarchy or the **enhanced-hash-key** statement in the **[edit forwarding-options]**, **[edit logical-systems *logical-system-name* routing-instances *instance-name* forwarding-options]**, and **[edit routing-instances *instance-name* forwarding-options]** hierarchies.



**NOTE:** The 802.1BR tag is not included in the load-balancing hash computation for cascade ports.

In addition, a cascade port can handle the traffic for all extended ports on a particular satellite device. However, you cannot specify that a particular cascade port handle the traffic for a particular extended port.

After you configure an interface as a cascade port (for example, by issuing **set interfaces xe-0/0/1 cascade-port**), you cannot configure the interface as a Layer 2 interface (for example, by issuing **set interfaces xe-0/0/1 unit 0 family bridge**) or a Layer 3 interface (for example, **set interfaces xe-0/0/1 unit 0 family inet**). If you try to configure a cascade port as a Layer 2 or Layer 3 interface, you receive an error message.

On a cascade port, you can configure class-of-service (CoS) policies.

## Understanding Uplink Ports

An *uplink port* is a physical interface on a satellite device that provides a connection to an aggregation device. An uplink port on a satellite device connects to a cascade port on an aggregation device.

After a cascade port is configured on the aggregation device end of a link, a corresponding uplink port is automatically created on the satellite device. From the aggregation device, you can monitor port and queue statistics for uplink ports. However, we do not recommend that you configure Layer 2 or Layer 3 forwarding features on uplink ports.

On a satellite device, you can set up one or more uplink port connections to an aggregation device. For example, in the Junos Fusion topology shown in [Figure 6 on page 13](#), Satellite device 1 has one uplink port (UP1) to Aggregation device 1, and Satellite device 2 has two uplink ports (UP2 and UP3) to Aggregation device 2. In the Junos Fusion Data Center in [Figure 7 on page 14](#), where EVPN multihoming is implemented, each satellite device is connected to each aggregation device through an uplink port. For example, on the leftmost satellite device, uplink port UP1 is connected to Aggregation device 1, uplink port UP2 is connected to Aggregation device 2, and so on.

When a satellite device has multiple uplink ports to an aggregation device, the traffic from the extended ports is automatically load-balanced among the uplink ports. For example, in the Junos Fusion topology shown in [Figure 6 on page 13](#), the traffic from extended ports EP5 through EP8 is load balanced between uplink ports UP2 and UP3 to

reach Aggregation device 2. In this situation, each packet is examined, and if an IPv4 or IPv6 header is found, a load-balancing algorithm chooses the uplink port based on the header (source and destination IP addresses, and source and destination TCP/UDP ports). If an IPv4 or IPv6 header is not found, the load-balancing algorithm chooses the uplink port based on the Layer 2 header (destination and source MAC addresses, EtherType, and outer VLAN ID) of the packet.

## Understanding Extended Ports

An *extended port* is a physical interface on a satellite device that provides a connection to servers or endpoints. To an aggregation device, a satellite device appears as an additional Flexible PIC Concentrator (FPC) and the extended ports on the satellite device appear as additional interfaces to be managed by the aggregation device.

On aggregation devices, you can configure extended ports by using the same Junos OS CLI and naming convention used for Junos OS interfaces on standalone routers and switches. The only difference is that when you specify an extended port name, the FPC slot number must be in the range of 100 through 254 in Junos OS Release 14.2 and in the range of 65 through 254 in Junos OS Release 16.1 and later.

For example, for the four extended ports shown on Satellite device 1 in [Figure 6 on page 13](#) and the leftmost satellite device in [Figure 7 on page 14](#), the FPC slot number could be 100, the PIC slot number could be 0, the first extended port could be 1, the second extended port could be 2, the third extended port could be 3, and the fourth extended port could be 4. The complete 10-Gigabit Ethernet extended port names could be as follows:

xe-100/0/1

xe-100/0/2

xe-100/0/3

xe-100/0/4

You can configure the following features on extended ports:

- Layer 2 bridging protocols
- Integrated routing and bridging (IRB)
- Firewall filters



**NOTE:** In a Junos Fusion Data Center with EVPN wherein VXLAN encapsulation is used, firewall filters with next-interface or next-ip actions are not supported.

- CoS policies

### Related Documentation

- [Understanding the Flow of Data Packets in a Junos Fusion Topology on page 38](#)
- *hash-key*

- *enhanced-hash-key*

## Understanding Software in a Junos Fusion Data Center

This topic discusses the role of software in a Junos Fusion Data Center. It covers:

- [Understanding Junos OS for the Aggregation Device in a Junos Fusion on page 17](#)
- [Understanding Satellite Software for the Satellite Devices in a Junos Fusion on page 17](#)
- [Understanding Satellite Software Upgrade Groups on page 18](#)
- [Understanding Satellite Software Requirements in a Multiple Aggregation Device Topology on page 19](#)
- [Understanding the PPC Satellite Software Image on page 19](#)

### Understanding Junos OS for the Aggregation Device in a Junos Fusion

An aggregation device in a Junos Fusion always runs Junos OS software and is responsible for almost all management tasks, including configuring all network-facing ports—the *extended ports*—on all satellite devices in the Junos Fusion. The extended ports in a Junos Fusion, therefore, typically support features that are supported by the version of Junos OS running on the aggregation device.

An aggregation device in a Junos Fusion runs the same Junos OS software regardless of whether it is or is not part of a Junos Fusion. Hence, Junos OS software is acquired, installed, and managed on an aggregation device in a Junos Fusion in the same manner that it is acquired, installed, and managed on a standalone device that is not part of a Junos Fusion.



**NOTE:** Before installing satellite software packages on a QFX10000 switch acting as an aggregation device, you must expand the /user disk partition to provide sufficient space for installing the software. To that end, you must issue the `request system storage user-disk` command once on each Routing Engine in your QFX10000 switch. (The QFX10002 switch supports one Routing Engine, and the QFX10008 and QFX10016 switches support two Routing Engines.)

### Understanding Satellite Software for the Satellite Devices in a Junos Fusion

The satellite devices in a Junos Fusion run satellite software that has the built-in intelligence to extend features on the Junos OS software onto the satellite device. The satellite software is a Linux-based operating system that allows the satellite devices to communicate with the aggregation device for control plane data while also passing network traffic.

All satellite devices in a Junos Fusion must run the satellite software.

Different satellite devices can run different versions of satellite software within the same Junos Fusion.

You can download satellite software from the software center for any satellite device. See the [Junos Fusion Hardware and Software Compatibility Matrices](#), which provides software requirements as well as links to satellite device and Junos OS software. Additionally, you have the option to order some switches with the satellite software preinstalled from the factory.

The satellite software packages are stored on the aggregation device after a satellite software package installation—which is typically managed from the aggregation device—has been executed. The satellite software packages remain in the file system even if the Junos OS on the aggregation device is upgraded. The satellite software packages on an individual satellite device can be updated manually using CLI commands on the aggregation device but are typically installed using software upgrade groups, which are discussed in more detail in this document.

A device cannot simultaneously run Junos OS and the satellite software. If you remove a satellite device from a Junos Fusion, you have to install the Junos OS onto the device before you can use it in your network as a standalone switch.

Satellite software is sometimes referred to as satellite network operating system (SNOS) software in the command-line interface and in the technical documentation.

The satellite software requirements for a Junos Fusion Data Center are discussed in [Understanding Junos Fusion Data Center Software and Hardware Requirements](#).

## Understanding Satellite Software Upgrade Groups

A *satellite software upgrade group* is a group of satellite devices that are designated to upgrade to the same satellite software version using the same satellite software package. One Junos Fusion can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusions to avoid network downtimes during satellite software installations.

When a satellite device is added to a Junos Fusion, the aggregation device checks if the satellite device is using an FPC ID that is included in a satellite software upgrade group. If the device is connected to a satellite device that is using an FPC ID that is part of a satellite software upgrade group, the device—unless it is already running the same version of satellite software—upgrades its satellite software using the satellite software associated with the satellite software upgrade group.

When the satellite software package associated with an existing satellite software group is changed, the satellite software for all member satellite devices is upgraded using a throttled upgrade. The throttled upgrade ensures that only a few satellite devices are updated at a time to minimize the effects of a traffic disruption due to too many satellite devices upgrading software simultaneously.

The two most common methods of installing satellite software—autoconverting a device into a satellite device when it is cabled into an aggregation device and manually converting a device that is cabled into an aggregation device into a satellite device—require the presence of a configured satellite software upgrade group.

Software upgrade groups are configured and managed on the aggregation device.



## Understanding Satellite Software Requirements in a Multiple Aggregation Device Topology

The configuration of a satellite software upgrade group entails the following:

- Creating the software upgrade group.
- Identifying satellite devices that are members of the software upgrade group.

The configuration of a software upgrade group must be the same on each aggregation device. To ensure that a configuration is the same, we recommend using the configuration synchronization feature. For more information about this feature, see [“Understanding Configuration Synchronization in a Junos Fusion” on page 20](#).

After the software upgrade group is configured and synchronized on each aggregation device, you must associate a satellite software image with the group.

For the software to be successfully upgraded on the satellite devices in the software upgrade group, the following conditions must be met:

- The same software upgrade group members must be configured on all aggregation devices.
- When you associate a software version with the software upgrade group on one aggregation device, one of the following conditions must exist:
  - The same software version is associated with the software upgrade group on the other aggregation devices.
  - A software version is not yet associated with the software upgrade group on the other aggregation devices.

## Understanding the PPC Satellite Software Image

The PPC satellite software package is required to install satellite software onto an EX4300 switch that is not connected to an aggregation device.

Use the PPC satellite software package when you want to manually install satellite software onto an EX4300 switch using the **request chassis device-mode satellite URL-to-satellite-software** command before you interconnect that switch into a Junos Fusion.

You can identify the PPC version of the satellite software by looking for the *satellite-ppc* prefix in the satellite software image name; for example, **satellite-ppc-3.4R2.0-signed.tgz**.

### Related Documentation

- [Junos Fusion Hardware and Software Compatibility Matrices](#)
- [Understanding Junos Fusion Data Center Software and Hardware Requirements](#)
- [Configuring or Expanding a Junos Fusion Data Center on page 48](#)

## Understanding Configuration Synchronization in a Junos Fusion

---

All configuration and management for a Junos Fusion are done from the aggregation devices, which run Junos OS software.

In a Junos Fusion with one aggregation device, all configuration—whether it's a configuration statement that enables a feature globally or enables a feature on a specific extended port—is done from the lone aggregation device.

A Junos Fusion with multiple aggregation devices often requires that the configuration of a feature—for example, an extended port, and entities such as routing instances and VLANs that include the extended port—must match on all aggregation devices. If a configuration statement for the feature—in this case, the extended port—is specified differently on one aggregation device, the statement on that particular aggregation device might be implemented in an unpredictable manner or might not be implemented at all.

Junos Fusion supports configuration synchronization, a feature that allows users to specify configuration statements within a group on one aggregation device and then share that group with other aggregation devices.

We strongly recommend using configuration synchronization to configure software features in multiple aggregation device topologies. Configuration synchronization ensures configuration consistency by sharing the exact same configuration between aggregation devices. Configuration synchronization also simplifies administration of a Junos Fusion by allowing users to enter configuration statements once in a configuration group and apply the configuration group to all aggregation devices rather than repeating a configuration procedure manually on each aggregation device.

For more information about configuration synchronization, see [“Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion”](#) on page 43, [Understanding MC-LAG Configuration Synchronization](#), and [Synchronizing and Committing MC-LAG Configurations](#).

See [Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#) for a sample Junos Fusion Enterprise topology configured largely using configuration synchronization. See [Enterprise Data Center: Junos Fusion Data Center Architecture](#) for a sample Junos Fusion Data Center topology largely configured using configuration synchronization.

### Configuration Synchronization and Aggregation Devices with Two Routing Engines in a Junos Fusion Data Center with EVPN

QFX10008 and QFX10016 switches, which support two Routing Engines, can function as aggregation devices in a Junos Fusion Data Center with EVPN. When a configuration group is applied to a QFX10008 or QFX10016 switch, the configuration must be shared with both Routing Engines on the switch.

You can identify each Routing Engine by configuring an IP address for the Routing Engine in slot 0 (re0) and another IP address for the Routing Engine in slot 1 (re1). We recommend

using management interface em0.0 for both re0 and re1, which you can configure using configuration groups for re0 and re1. For example:

```
[edit]
user@aggregation-device-1# set groups re0 interfaces em0 unit 0 family inet address
172.16.75.10/24
user@aggregation-device-1# set groups re1 interfaces em0 unit 0 family inet address
172.16.75.20/24
```

When applying a configuration group to a Routing Engine, you must specify the IP address assigned to the Routing Engine. For example, if a Junos Fusion Data Center with an EVPN architecture has four QFX10008 switches that serve as aggregation devices, you can apply a configuration group named overlay to Routing Engines re0 and re1 on each aggregation device as follows. This configuration is performed on aggregation device-1 (ad-1):

```
[edit]
user@aggregation-device-1# set groups overlay when peers 172.16.75.10 (ad-1, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.20 (ad-1, re1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.30 (ad-2, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.40 (ad-2, re1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.50 (ad-3, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.60 (ad-3, re1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.70 (ad-4, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.80 (ad-4, re1)
```

**Related Documentation**

- [Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion on page 43](#)

## Understanding Junos Fusion Data Center Software and Hardware Requirements

This topic describes the software and hardware requirements for a Junos Fusion Data Center. See [Understanding Junos Fusion Provider Edge Software and Hardware Requirements](#) or [Understanding Junos Fusion Enterprise Software and Hardware Requirements](#) for the software and hardware requirements for a Junos Fusion Provider Edge or a Junos Fusion Enterprise.

It covers:

- [Aggregation Device to Satellite Device Software Compatibility on page 21](#)
- [Aggregation Devices on page 22](#)
- [Satellite Devices on page 23](#)

### Aggregation Device to Satellite Device Software Compatibility

A Junos Fusion Data Center includes an aggregation device or devices running Junos OS and satellite devices running satellite software. The version of Junos OS running on the aggregation device must be compatible with the satellite software versions running on the satellite device in order for the Junos Fusion Data Center to function.

See [Junos Fusion Hardware and Software Compatibility Matrices](#) for software compatibility information for any Junos Fusion Data Center.



**NOTE:** When you upgrade the satellite software version to a release later than the recommend versions listed in the [Junos Fusion Hardware and Software Compatibility Matrices](#), your Junos Fusion system will only benefit from the satellite software fixes. To acquire the full benefits of a satellite software release, including satellite software fixes and new features, we recommend you upgrade both the aggregation device software and its compatible satellite device software for a complete upgrade.

## Aggregation Devices

This section details the hardware and software requirements for an aggregation device in a Junos Fusion Data Center. It covers:

- [Aggregation Device Hardware Models on page 22](#)
- [Maximum Number of Aggregation Devices on page 22](#)
- [Cascade Ports on page 22](#)

### Aggregation Device Hardware Models

[Table 3 on page 22](#) lists the hardware platforms that are supported as aggregation devices for a Junos Fusion Data Center. It also lists the Junos OS release where support for the aggregation device in a Junos Fusion Data Center was introduced.

**Table 3: Supported Aggregation Device Hardware and Initial Junos OS Release**

Hardware	Initial Junos OS Release
QFX10002-36Q Switch	17.2R1
QFX10002-72Q Switch	17.2R1
QFX10008 Switch	18.1R2-S2
QFX10016 Switch	18.1R2-S2

### Maximum Number of Aggregation Devices

A Junos Fusion Data Center can support up to four aggregation devices. A Junos Fusion Data Center with more than two aggregation devices requires an EVPN-based architecture. See [“Understanding Junos Fusion Data Center Components” on page 6](#).

### Cascade Ports

A *cascade port* is a port on an aggregation device that sends and receives control and network traffic from an attached satellite device.

[Table 4 on page 23](#) provides a list of interface types on a QFX10002 switch that can be converted into cascade ports, and the initial Junos OS release that introduced cascade port support for each interface type.

**Table 4: QFX10002 Switch Cascade Port Support**

Aggregation Device Switch Model	Interface Type	Initial Junos OS Release
QFX10002-36Q Switch	10-Gbps and 40-Gbps	17.2R1
	100-Gbps	18.1R2-S2
QFX10002-72Q Switch	10-Gbps and 40-Gbps	17.2R1
	100-Gbps	18.1R2-S2

Table 5 on page 23 provides a list of line cards on a QFX10008 or QFX10016 switch that have interfaces that can be converted into cascade ports, and the initial Junos OS release that introduced cascade port support for interfaces on the line card.

**Table 5: Line Cards on QFX10008 or QFX10016 Switch Cascade Port Support**

Line Card	Switch Model	Initial Junos OS Release
<ul style="list-style-type: none"> <li>QFX10000-36Q</li> <li>QFX10000-30C</li> </ul>	QFX10008	18.1R2-S2
	QFX10016	18.1R2-S2

## Satellite Devices

This section details the hardware and software requirements for a satellite device in a Junos Fusion Data Center. It covers:

- [Satellite Device Hardware Models on page 23](#)
- [Satellite Software to Junos OS Conversion Requirements on page 24](#)
- [Maximum Number of Satellite Devices or Extended Ports on page 24](#)

### Satellite Device Hardware Models

Table 6 on page 24 lists the hardware platforms that are supported as satellite devices for a Junos Fusion Data Center, as well as the minimum Junos OS release that must be running on the satellite device before it can be converted from a standalone switch into a satellite device.



**NOTE:** To find the required satellite software version, see [Junos Fusion Hardware and Software Compatibility Matrices](#).

**Table 6: Supported Satellite Device Hardware and Initial Junos OS Release**

Hardware	Initial Junos OS Release
EX4300-24T	14.1X53-D43
EX4300-32F	14.1X53-D43
EX4300-48T	14.1X53-D43
QFX5100-24Q	14.1X53-D43
QFX5100-48S	14.1X53-D43
QFX5100-48SH	NA (satellite software only)
QFX5100-48TH	NA (satellite software only)
QFX5100-48T	14.1X53-D43
QFX5100-96S	14.1X53-D43
QFX5110-48S	17.4R2
QFX5200-32C	17.4R2

### Satellite Software to Junos OS Conversion Requirements

A satellite device can be removed from a Junos Fusion Enterprise and reinserted into a network as a switch running Junos OS. See [“Converting a Satellite Device in a Junos Fusion to a Standalone Device” on page 128](#).

A device running satellite software must be converted to a version of Junos OS that supports satellite device conversion. For the minimum Junos OS versions that support satellite device conversion, see [Junos Fusion Hardware and Software Compatibility Matrices](#).

### Maximum Number of Satellite Devices or Extended Ports

A Junos Fusion Data Center supports up to 64 satellite devices.

#### Related Documentation

- [Junos Fusion Hardware and Software Compatibility Matrices](#)
- [Configuring or Expanding a Junos Fusion Data Center on page 48](#)

## Understanding ICCP in a Junos Fusion using Dual Aggregation Devices

This topic describes the Inter-Chassis Control Protocol (ICCP) in a Junos Fusion. It covers:

- [ICCP in a Junos Fusion Overview on page 25](#)
- [Automatic ICCP Provisioning on page 25](#)

## ICCP in a Junos Fusion Overview

Inter-Chassis Control Protocol (ICCP) is used in MC-LAG topologies to exchange control information between the devices in the topology. See [Multichassis Link Aggregation Features, Terms, and Best Practices](#) for additional information on ICCP.

A Junos Fusion with two aggregation devices is an MC-LAG topology, and is therefore always running ICCP as the control protocol. A Junos Fusion using a single aggregation device is not an MC-LAG topology and does not run ICCP.

A dedicated ICCP link is highly recommended in a Junos Fusion deployment, but is not required. ICCP traffic is transmitted across the ICL when an ICCP link is not configured. An ICCP link can be one link or an aggregated ethernet interface. In most Junos Fusion deployments, we recommend using a 40-Gbps link or an aggregated ethernet interface as the ICCP link.

## Automatic ICCP Provisioning

Junos Fusion supports automatic ICCP provisioning, which automatically configures ICCP in a dual aggregation device setup without any user action. Automatic ICCP provisioning is enabled by default and is often the preferred method of enabling ICCP for a Junos Fusion in greenfield deployments that are not being integrated into an existing network. If you are installing your Junos Fusion in an environment that doesn't have to integrate into an existing campus network, you can usually ignore manual ICCP configuration processes and allow automatic ICCP provisioning to enable ICCP. Automatic ICCP provisioning is described in more detail in [Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link](#).

Many Junos Fusion installations occur in brownfield deployments and the Junos Fusion has to be integrated into an existing network. Brownfield deployments often have a need to maintain existing ICCP settings, in particular in scenarios where a Junos Fusion is replacing an MC-LAG topology or is supporting a network that includes other MC-LAG topologies. ICCP must be configured manually in these scenarios.

See [Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#) for an example of a Junos Fusion Enterprise deployment that manually configures ICCP. See [Configuring Multichassis Link Aggregation on EX Series Switches](#) for comprehensive information on configuring ICCP manually.

### Related Documentation

- [Multichassis Link Aggregation Features, Terms, and Best Practices](#)
- [Configuring or Expanding a Junos Fusion Enterprise](#)

## Understanding EVPN in a Junos Fusion Data Center

---

Starting with Junos OS Release 18.1R2-S2, Junos Fusion Data Center introduces an Ethernet VPN (EVPN) architecture wherein each satellite device is multihomed for redundant connectivity in active-active mode to four aggregation devices. In this topology, the four aggregation devices comprise a core fabric in which EVPN is used to learn about the aggregation devices and advertise host and server MAC addresses, network reachability information, and other states among the aggregation devices.

Junos Fusion Data Center with EVPN implements IEEE 802.1BR processing between the aggregation devices and satellite devices.

The following sections cover relevant EVPN implementation details and areas in which the EVPN implementation is specific to Junos Fusion Data Center:

- [Benefits of Junos Fusion Data Center with EVPN on page 26](#)
- [EVPN Ethernet Segments on page 26](#)
- [EVPN Instance on page 28](#)
- [EVPN Control Plane on page 28](#)
- [EVPN and IEEE 802.1BR Forwarding on page 31](#)
- [Data Encapsulation on page 31](#)
- [Layer 3 Default Gateway on page 32](#)
- [ARP Processing on page 33](#)
- [Inter-VLAN Packet Handling on page 33](#)

### Benefits of Junos Fusion Data Center with EVPN

- Supports an architecture that enables you to multihome satellite devices to multiple aggregation devices for maximum up time and resiliency.
- Traffic traversing the Junos Fusion Data Center can be load balanced across all aggregation devices.
- Maintains a high level of redundancy. In the unexpected event of an aggregation device failure, the Junos Fusion Data Center retains 75 percent of its capacity to continue routing traffic.
- Automatic generation of Ethernet segment identifiers (ESIs).
- Despite the large number of extended ports supported, in a Junos Fusion Data Center, there are a maximum of four aggregation devices that you must access to manage the ports.
- Implements the open standards-based EVPN protocol, which opens the possibility of aggregation devices interoperating with networking devices from other vendors.

### EVPN Ethernet Segments


When implementing an EVPN core fabric in Junos Fusion Data Center, it is important to understand the concept of *Ethernet segments*, which can be one of the following:



- A standalone extended port.
- A link aggregation group (LAG) of extended ports. For more information about LAGs of extended ports, see [“Understanding Link Aggregation and Link Aggregation Control Protocol in a Junos Fusion”](#) on page 915.

In the Junos Fusion Data Center topology shown in [Figure 8 on page 27](#), four satellite devices are multihomed to four aggregation devices. [Figure 8 on page 27](#) also shows hosts connected to satellite devices through a mix of standalone extended ports and LAGs of extended ports. For example, host 1 is single-homed to satellite device 1 by standalone extended port EP1, and host 4 is multihomed to satellite devices 1 and 2 by a LAG of extended ports, which includes extended port EP4 on satellite device 1 and extended port EP5 on satellite device 2.

*Figure 8: Junos Fusion Data Center Topology With EVPN: Ethernet Segments*

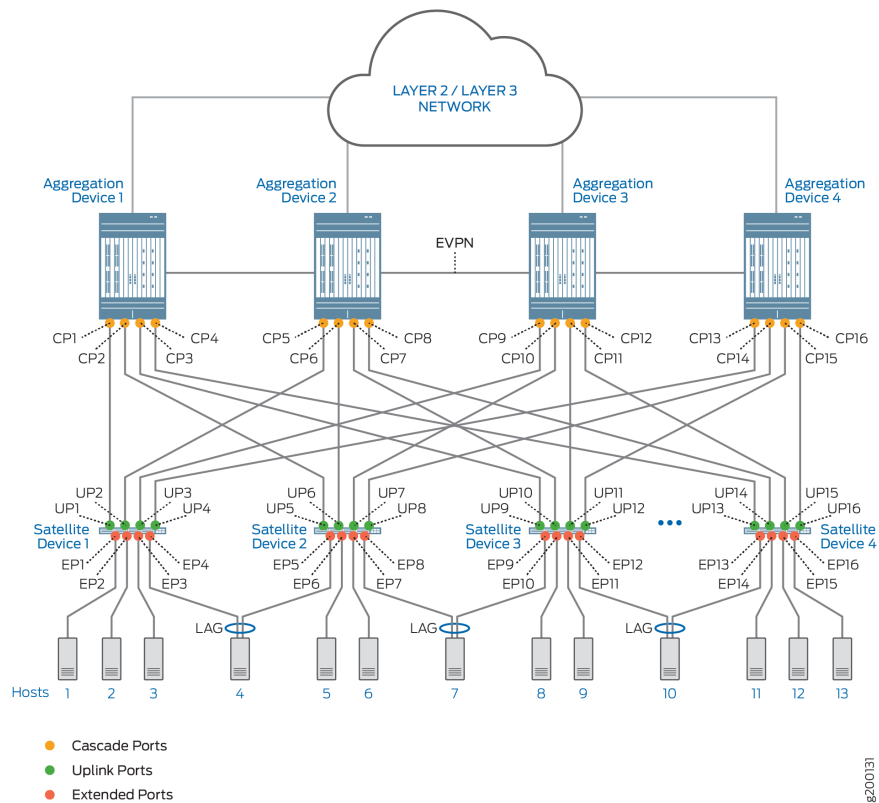

For each Ethernet segment, Junos Fusion Data Center automatically generates a unique 10-octet ESI. For standalone extended ports, the automatic generation of each ESI is based on extended port attributes such as the MAC address and slot ID of the satellite device, and the extended port ID. Although the satellite device attributes are common to all standalone extended ports associated with the same satellite device, the extended port ID makes the ESI and, therefore, the Ethernet segment itself unique.

For a LAG of extended ports, the ESI is based on attributes such as the redundancy group of which the LAG is a part and a global LAG interface identifier.

A sample ESI is 00:01:01:00:00:00:00:00:04.

The automatic generation of ESIs in a Junos Fusion Data Center frees you from manually configuring a large number of ESIs and prevents the possibility of inadvertently configuring the same ESI for multiple Ethernet segments.

The purpose of implementing Ethernet segments and their unique ESIs in the Junos Fusion Data Center is to identify the standalone and LAGs of extended ports.

After you finish performing a basic EVPN configuration for Junos Fusion Data Center, ESIs appear in the output of such EVPN-related command summaries as **show evpn instance extensive** commands, and BGP starts to advertise ESIs along with EVPN routes. For more information about a basic EVPN configuration for Junos Fusion Data Center, see [“Configuring or Expanding a Junos Fusion Data Center” on page 48](#).

## EVPN Instance

QFX Series switches that function as aggregation devices in the Junos Fusion Data Center are preconfigured with a single default-switch routing instance. The EVPN core fabric configuration—for example, the configuration of route targets, VLANs, and so on—on an aggregation device must be part of this routing instance. Therefore, when configuring EVPN, make sure not to define EVPN-related route targets, VLANs, and so on under an explicitly configured virtual-router routing instance (**set routing-instances *name* instance-type virtual-router**).

In the context of Junos Fusion Data Center, the default-switch routing instance is known as the *EVPN instance*. Junos Fusion Data Center supports a single EVPN instance. To support Ethernet VLAN services with a single EVPN instance, Junos Fusion Data Center supports the use of VLAN-aware bundle service. This service enables you to map the EVPN instance to many VLANs, each of which has its own bridging table.

Note the following about the VLANs that are mapped to the EVPN instance:

- Junos Fusion Data Center does not support VLAN translation. Therefore, each VLAN is represented by a single VLAN ID.
- All EVPN routes that include an Ethernet Tag ID field have the value of that field set to a VLAN ID.
- An extended port can be mapped to one or more VLANs.

## EVPN Control Plane

The four aggregation devices in the Junos Fusion Data Center implement an EVPN control plane. As part of this control plane, after the system automatically generates ESIs for extended ports, BGP discovers and signals the extended ports in the topology. Most of the signaling of the extended ports and the implementation of EVPN network layer reachability information (NLRI) routes follow standard EVPN processes. The following subsections discuss the EVPN control plane infrastructure and how Junos Fusion Data Center implements EVPN NLRI routes.

### Aggregation Devices as IBGP Peers

In a Junos Fusion Data Center, the IP underlay network is made up of the following entities:

- Aggregation devices, which are identified by IP addresses that you assign to their loopback interfaces.
- OSPF, which you configure to route between the aggregation devices.

All aggregation devices in Junos Fusion Data Center form Multiprotocol IBGP (MP-IBGP) peerings in a single BGP autonomous system (AS). As IBGP peers, the aggregation devices share network reachability information with adjacent aggregation devices using BGP Multiprotocol Extensions (RFC4760) with an address family identifier (AFI) of 25 (L2VPN) and a subsequent address family identifier (SAFI) of 70 (EVPN).



**BEST PRACTICE:** With a relatively small number of IBGP peers, we recommend a full-mesh interconnection of IBGP peers instead of using a BGP route reflector to act as a focal point for the IBGP peers.

Satellite devices run in IEEE 802.1BR mode and do not establish IBGP peerings.

### Learning About Extended Ports Through Ethernet Autodiscovery Routes

For each extended port to which an aggregation device is directly connected, the aggregation device originates per-Ethernet segment and per-EVPN instance (EVI) autodiscovery routes. The per-Ethernet segment autodiscovery routes advertise NLRI information about a particular Ethernet segment in an EVI, while the per-EVI autodiscovery routes advertise NLRI information about all Ethernet segments in an EVPN instance.

For general information about BGP NLRIs, including the Ethernet autodiscovery routes discussed in this section, see *EVPN Multihoming Overview*. This section provides Junos Fusion Data Center-specific information about the Ethernet autodiscovery routes.

Junos Fusion Data Center uses per-EVI autodiscovery routes for the following reasons:

- In case a cascade port fails and an aggregation device cannot resolve the next hop for an extended port to a local cascade port. When this situation occurs, Junos Fusion Data Center resolves the next hop to each aggregation device that advertised that it can reach the extended port. After Junos Fusion Data Center is aware that each aggregation device can reach the extended port, data traffic destined for the extended port is load balanced between the aggregation devices.



**NOTE:** In the cascade port failure scenario, Junos Fusion Data Center uses a combination of per-Ethernet segment and per-EVI autodiscovery routes.

- For the EVPN aliasing mechanism, which provides load-balancing information for remote EVPN peers, even if all aggregation devices do not advertise a particular MAC address.

[Table 7 on page 30](#) provides attributes of the Ethernet autodiscovery routes and how the attribute fields are populated for each route type.

**Table 7: Per-Ethernet Segment and per-EVI Ethernet Autodiscovery Route Format**

Type of Ethernet Autodiscovery Route	Route Distinguisher	ESI	Ethernet Tag ID	MPLS Label
Per-Ethernet segment*	Loopback IP address of aggregation device	ESI of the Ethernet segment	MAX-ET (0xFFFFFFFF)	0
Per-EVI	<ul style="list-style-type: none"> <li>IP address of aggregation device</li> <li>Discriminator value based on the EVI</li> </ul>	ESI of each Ethernet segment in an EVI.	0	0

\*Because Junos Fusion Data Center supports only a single EVPN instance, the per-Ethernet segment autodiscovery route includes only one EVI route target attribute.

### Learning About Extended Ports Through EVPN Type 4 Routes

In a Junos Fusion Data Center, EVPN Type 4 Ethernet segment routes enable an aggregation device associated with an Ethernet segment to discover the other aggregation devices associated with the same Ethernet segment.

Ethernet segment routes include the ES-import route target extended community. The type field of this extended community is set to 0x06, which indicates that the value is a route target specified as a MAC address. In the type field, Junos Fusion Data Center automatically sets the route target value to the MAC address of the satellite device that is associated with the Ethernet segment.

All aggregation devices connected to the same extended port advertise the same route target membership information. Based on this premise, Junos Fusion Data Center implements a route target constraint process that limits the advertisement of Ethernet segments only to the aggregation devices that are associated with the same route target. This constraint prevents the needless distribution of routes to aggregation devices that are not connected to particular extended ports.

In an EVPN network that is not implemented in a Junos Fusion Data Center, the Ethernet segment route is a factor in electing designated forwarders (DFs), which forward broadcast, unknown unicast, and multicast (BUM) traffic. When the local replication feature is configured, Junos Fusion Data Center uses a proprietary mechanism that better accommodates the potentially large number of extended ports. To that end, Junos Fusion Data Center implements the DF election mechanism for extended ports at the satellite-device level. For more information about the DF election mechanism for extended ports, see [“Designated Forwarder Election” on page 1000](#).

### Learning Host MAC Addresses Through EVPN Type 2 Routes

In a Junos Fusion Data Center, an aggregation device learns the MAC addresses of hosts that are connected to extended ports. When an aggregation device learns a host MAC address locally, the aggregation device originates an EVPN type 2 MAC/IP advertisement route and distributes the route to the other aggregation devices.

Junos Fusion Data Center implements the route distinguisher field in the EVPN type 2 MAC/IP advertisement route as a type-1 value. This value is comprised of the IP address of the aggregation device that learned the MAC address followed by a 12-bit VLAN ID. Because Junos Fusion Data Center does not support VLAN translation, all aggregation devices use the same VLAN ID for this route.

Junos Fusion Data Center supports a single EVPN instance and the VLAN-aware bundle service, which in turn supports multiple VLANs, and therefore, multiple bridging tables. As a result, Junos Fusion Data Center implements the Ethernet Tag ID field as a non-zero value, namely, a 24-bit VXLAN network identifier (VNI) that maps to the VLAN associated with the route.

The EVPN type 2 MAC/IP advertisement route also includes route target attributes, for which Junos Fusion Data Center supplies a route target value. If you specified **vrf-target auto** at the `[edit switch-options]` hierarchy level, this value is automatically generated.

## EVPN and IEEE 802.1BR Forwarding


In the EVPN core fabric, Junos Fusion Data Center implements EVPN forwarding, while in the fabric between the aggregation and satellite devices, it implements IEEE 802.1BR forwarding. EVPN multihoming in active-active mode and IEEE 802.1BR forwarding handle multicast traffic differently. To optimize the handling of north- and south-bound multicast traffic in the EVPN core fabric and fabric between the aggregation and satellite devices, Junos Fusion Data Center introduces some enhancements that incorporate elements of both forwarding methods. For details, see [“Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN” on page 999](#).

## Data Encapsulation

The EVPN core fabric of a Junos Fusion Data Center uses Virtual Extensible LAN (VXLAN) encapsulation. As a result, when an aggregation device forwards a Layer 2 data packet to another aggregation device, the packet is encapsulated in a VXLAN UDP header and transported over the Layer 3 network.

[Figure 9 on page 32](#) graphically depicts the VXLAN tunnels through which data packets are forwarded between the aggregation devices. The aggregation devices at each end of a tunnel function as VXLAN tunnel endpoints (VTEPs). Depending on the flow of packets, one aggregation device functions as a source VTEP that encapsulates the packet in the VXLAN UDP header, and the destination VTEP de-encapsulates the packet.

Figure 9: Junos Fusion Data Center Topology With EVPN: VXLAN Tunnels

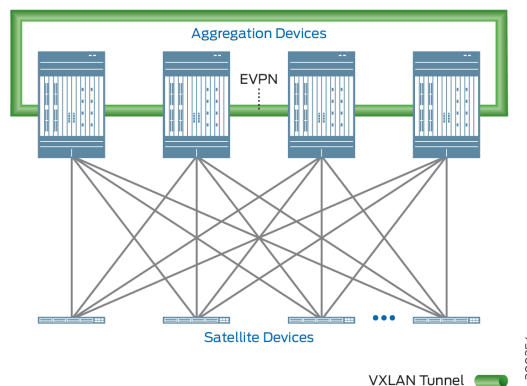

When configuring a VLAN, you must also configure a VNI that maps to that VLAN. In a Junos Fusion Data Center with EVPN-VXLAN, the VNI is used as follows:

- When a data packet is encapsulated in a VXLAN header, the VNI is included in the header.
- In a EVPN type 2 MAC/IP advertisement route, the VNI is included in the Ethernet tag ID field.

### Layer 3 Default Gateway

Non-virtualized (bare-metal) servers connected to extended ports use a default Layer 3 gateway to route their traffic from one VLAN to another non-virtualized server or virtual machine (VM) in another VLAN. On an aggregation device, you enable the default gateway functionality by configuring an integrated routing and bridging (IRB) interface with a virtual gateway address (VGA). Specifying a VGA configures the IRB interface as a default Layer 3 gateway.



**BEST PRACTICE:** In a Junos Fusion Data Center, we recommend enabling the default gateway functionality on each aggregation device. We also recommend specifying the same VGA, which is an IP address, on each aggregation device.

When you specify an IPv4 address for the VGA, the aggregation device automatically generates 00:00:5e:00:01:01 as the media access control (MAC) address for the default gateway. When you specify an IPv6 address, the aggregation device automatically generates 00:00:5e:00:02:01 as the MAC address for the default gateway. If needed, you can explicitly configure an IPv4 or IPv6 MAC address for a default gateway by using the `virtual-gateway-v4-mac` or `virtual-gateway-v6-mac` configuration statement at the `[edit interfaces name irb unit logical-unit-number]` hierarchy level. After you perform this configuration, the automatically generated MAC address is overridden by the configured MAC address. Regardless of how a default

gateway acquires its MAC address, we recommend that each default gateway has the same MAC address.



**NOTE:** Junos Fusion Data Center does not support the configuration of the same IP address for all IRB interfaces.

EVPN type 2 MAC/IP advertisement routes that include the default gateway extended community advertise default gateway information.

## ARP Processing

In a Junos Fusion Data Center, Address Resolution Protocol (ARP) works as follows:

- **Proxy ARP**—Junos Fusion Data Center uses EVPN type 2 MAC/IP advertisement routes to learn and propagate host MAC and IP bindings. That is, aggregation devices originate EVPN type 2 MAC/IP advertisement routes, which include host MAC and IP addresses, and distribute the routes to other aggregation devices in the Junos Fusion Data Center. After all aggregation devices learn the MAC and IP address binding for a particular host, any aggregation device in the Junos Fusion Data Center can act as a proxy and respond to ARP requests to determine the MAC address bound to a particular IP address. By using this mechanism, Junos Fusion Data Center reduces the flooding of ARP packets to hosts and aggregation devices.
- **ARP request for address of Layer 3 default gateway**—When a host sends an ARP request for the address of a default Layer 3 gateway, the aggregation device that receives the request sends a reply with the target MAC address set to the MAC address of the default gateway.
- **IP packet handling**—When an aggregation device receives an IP packet on an IRB interface, the device performs a destination IP lookup. The lookup results indicate whether the aggregation device forwards the packet from one of its local ports or encapsulates the packet with a VXLAN header and forwards the packet toward the destination aggregation device.

At the same time, if the destination host's MAC address is not known, the aggregation device originates and sends an ARP request. If the aggregation device that receives the ARP reply is different than the one that originated it, the receiving aggregation device sends an EVPN type 2 MAC/IP advertisement to the other aggregation devices, thereby propagating the destination host's MAC address.

## Inter-VLAN Packet Handling

In a Junos Fusion Data Center, the forwarding of a packet from one VLAN to another by way of an IRB interface works as follows:

- The aggregation device that receives the packet from an extended port, also known as the *source aggregation device*, performs a destination IP lookup and rewrites the incoming VLAN to the destination VLAN.

- If the lookup results indicate that the next hop extended port cannot be resolved to a local cascade port, the source aggregation device encapsulates the packet with a VXLAN header and forwards the packet toward a destination aggregation device. The destination aggregation device is determined by way of equal-cost multipath (ECMP) and load balancing. Upon receipt of the packet, the destination aggregation device processes the Layer 2 packet.

Release History Table

Release	Description
18.1R2-S2	Starting with Junos OS Release 18.1R2-S2, Junos Fusion Data Center introduces an Ethernet VPN (EVPN) architecture wherein each satellite device is multihomed for redundant connectivity in active-active mode to four aggregation devices. In this topology, the four aggregation devices comprise a core fabric in which EVPN is used to learn about the aggregation devices and advertise host and server MAC addresses, network reachability information, and other states among the aggregation devices.

## Understanding Designated Event Forwarding of SNMP Traps in an EVPN Junos Fusion Data Center

- [Designated Event Forwarding in an EVPN Junos Fusion Overview on page 34](#)
- [Limitations for Designated Event Forwarding of SNMP traps in an EVPN Junos Fusion on page 35](#)

### Designated Event Forwarding in an EVPN Junos Fusion Overview

Starting with Junos OS Release 18.1R2-S2, you can enable SNMP on the aggregation device and designate SNMP trap forwarding in an EVPN topology in a Junos Fusion. In an EVPN topology, the satellite device generates an SNMP trap event when a change occurs on any of the associated satellite devices. This trap event information is sent to all connected aggregation devices who then send the trap request to the SNMP server. Because each aggregation device sends its own copy of the trap, the SNMP server receives multiple copies of the trap for the same event on the satellite device causing overhead to the SNMP server.

To prevent the SNMP trap from being generated from each aggregation device, you can enable **designated-event-forwarding** so that the trap request is only sent by the aggregation device selected as the designated router. When enabled, the aggregation device generates a trap request to the local snmp daemon. Otherwise, the trap event is ignored. You enable designated event forwarding under the [edit chassis [satellite-management](#) ] hierarchy level. Designated event forwarding is disabled by default.

See *Understanding SNMP Implementation in Junos OS* for information on configuring SNMP.

See “[Understanding EVPN in a Junos Fusion Data Center](#)” on page 26 for a detailed overview of Junos Fusion Data Center with EVPN.



## Limitations for Designated Event Forwarding of SNMP traps in an EVPN Junos Fusion

Consider the following limitations when you configure designated trap forwarding on SNMP traps:

- When the satellite device boots up, the FPC *online* trap is seen on the aggregation devices until the EVPN topology is converged and the designated forwarder information is updated.
- When the satellite device is powered off or rebooted, the FPC *offline* trap is seen on all aggregation devices because the designated forwarder information for the satellite device is unavailable.

### Release History Table

Release	Description
18.1R2-S2	Starting with Junos OS Release 18.1R2-S2, you can enable SNMP on the aggregation device and designate SNMP trap forwarding in an EVPN topology in a Junos Fusion

### Related Documentation

- [designated-event-forwarding on page 85](#)
- [satellite-management on page 98](#)
- [Understanding EVPN in a Junos Fusion Data Center on page 26](#)

## Understanding Layer 2 Unicast Forwarding in a Junos Fusion Data Center

This topic discusses how Layer 2 unicast forwarding works on extended ports in a Junos Fusion Data Center with EVPN-VXLAN. It covers the following items:

- [Cascade Interface Resolution on page 35](#)
- [BGP Next-hop Resolution on page 35](#)
- [Layer 2 Unicast Traffic over a VXLAN Tunnel on page 36](#)

### Cascade Interface Resolution

When a remote MAC address is learned from a Type-2 MAC route advertisement, the aggregation device determines the corresponding extended port next hop from the Ethernet Segment Identifier (ESI) carried in the MAC route advertisement. This extended port next hop is resolved in the set of local cascade interfaces that are used to reach that extended port.

### BGP Next-hop Resolution

Traffic sent to destination extended port only traverses the EVPN tunnel if the destination extended port cannot be resolved to a local cascade interface. For non-extended port destinations located on a remote aggregation device (or external Provider Edge (PE) device in the same EVPN), traffic is carried in the EVPN tunnel. When EVPN MAC aliasing is enabled, aggregation devices signal their reachability towards the destination extended

port using the per-EVI Ethernet A-D route, so that a list of aggregation devices can be built for load-balancing even if those aggregation devices have not advertised that specific MAC route.

## Layer 2 Unicast Traffic over a VXLAN Tunnel

When an aggregation device sends traffic to a destination on a remote aggregation device, it encapsulates the original Ethernet frame with a VXLAN header, a UDP header, and the IP and Ethernet headers corresponding to the destination VTEP located on the destination aggregation device.

## Understanding Satellite Policies in a Junos Fusion

---

- [Satellite Policies Overview on page 36](#)
- [Understanding Environment Monitoring Satellite Policies on page 36](#)
- [Understanding Uplink Failure Detection Satellite Policies on page 37](#)
- [Understanding Satellite Policies for Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 37](#)

### Satellite Policies Overview

Satellite policies are used in a Junos Fusion to define how certain features are configured for standalone satellite devices within a Junos Fusion. Satellite policies can be used to configure standalone satellite devices or all satellite devices in a satellite device cluster.

Environment monitoring of the satellite devices, uplink failure detection for satellite device uplink ports, and remapping uplinks—with port pinning, uplink selection, and local port mirroring—are configured using satellite policies. See [“Understanding Environment Monitoring Satellite Policies” on page 36](#), [“Understanding Uplink Failure Detection Satellite Policies” on page 37](#), and [“Understanding Satellite Policies for Remapping Uplink Traffic Flows on a Junos Fusion Data Center” on page 37](#).

Satellite policies are configured as independent policies on the aggregation device, and then associated with the Junos Fusion configuration.

### Understanding Environment Monitoring Satellite Policies

You can configure an environment monitoring satellite policy in a Junos Fusion to configure how a Junos Fusion responds to link-down alarms on satellite devices.

In the environment monitoring satellite policy, you define how you want a link-down alarm from a satellite device to be handled by the Junos Fusion. The Junos Fusion can treat the link-down alarm as a yellow or red alarm, or it can be configured to ignore the alarm.

The environment monitoring policy provides the flexibility to define different alarm handling based on user preference. You can, for instance, assign environment monitoring policies to individual satellite devices based on FPC ID. You can also configure environment monitoring policies based on the product model of the satellite devices, if desired. You can, for instance, specify that all link-down alarms from EX4300 switches acting as

satellite devices are treated as yellow alarms, while all link-down alarms from QFX5100 switches acting as satellite devices are treated as red alarms.

Environment monitoring satellite policies are configured using the **environment-monitoring-policy** statement in the **[edit policy-options satellite-policies]** hierarchy level.

An environment monitoring policy is applied for a single satellite device in a Junos Fusion using the **environment-monitoring-policy** statement in the **[edit chassis satellite-management]** or the **[edit chassis satellite-management fpc slot-id]** hierarchy levels.

You can configure a different environment monitoring policy for a single satellite device in the **fpc slot-id** when an environment monitoring policy for all satellite devices is configured. The environment monitoring policy for the FPC is enabled in cases when both an individual and global environment monitoring policy is configured.

## Understanding Uplink Failure Detection Satellite Policies

Satellite policies are used to configure uplink failure detection on satellite device uplink ports within a Junos Fusion.



**NOTE:** Uplink failure detection is supported only on Junos Fusion Data Center.

For information on uplink failure detection within a Junos Fusion, see “[Overview of Uplink Failure Detection on a Junos Fusion](#)” on page 1127.

## Understanding Satellite Policies for Remapping Uplink Traffic Flows on a Junos Fusion Data Center

Satellite policies are used to configure the remapping of uplink traffic flows within a Junos Fusion Data Center. You can configure uplink port pinning and flow-based uplink selection to improve load-balancing of traffic flows across uplink ports. You can use local port mirroring to troubleshoot and monitor applications.

See “[Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center](#)” on page 1083.

### Related Documentation

- *Configuring Junos Fusion Provider Edge*
- *Configuring or Expanding a Junos Fusion Enterprise*

## Understanding the Flow of Data Packets in a Junos Fusion Topology


---

All Ethernet data packets that are exchanged between aggregation devices and satellite devices in a Junos Fusion topology include an E-channel tag (ETAG) header that carries an E-channel identifier (ECID) value. The ECID value, which is assigned by the aggregation device, identifies the source or destination extended port on one of the connected satellite devices.

In a sample Junos Fusion topology, where an aggregation device is connected to two satellite devices, the following Layer 2 unicast data packet flow scenarios can occur:


- Scenario 1—A host on one satellite device sends a packet to another host on the same satellite device. For example, Host 2 sends a unicast packet to Host 4. Both hosts are connected to Satellite device 1. (See [Figure 10 on page 39](#).)
- Scenario 2—A host on one satellite device sends a packet to another host on the other satellite device. For example, Host 2, which is connected to Satellite device 1, sends a unicast packet to Host 7, which is connected to Satellite device 2. (See [Figure 11 on page 40](#).)

Figure 10: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Scenario 1

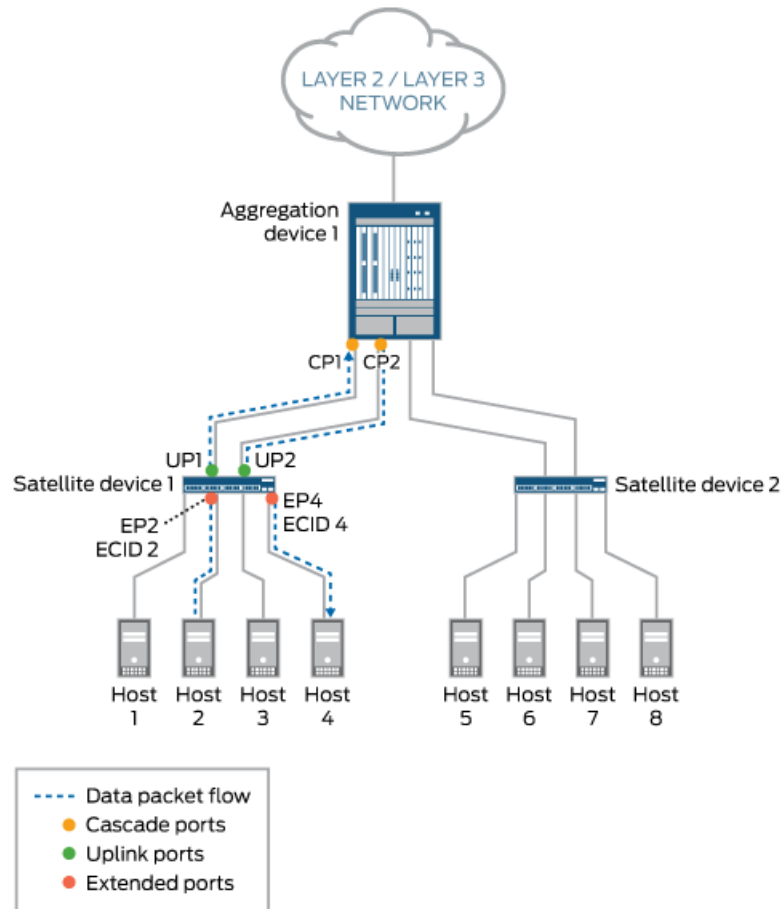

8043179

Figure 11: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Scenario 2

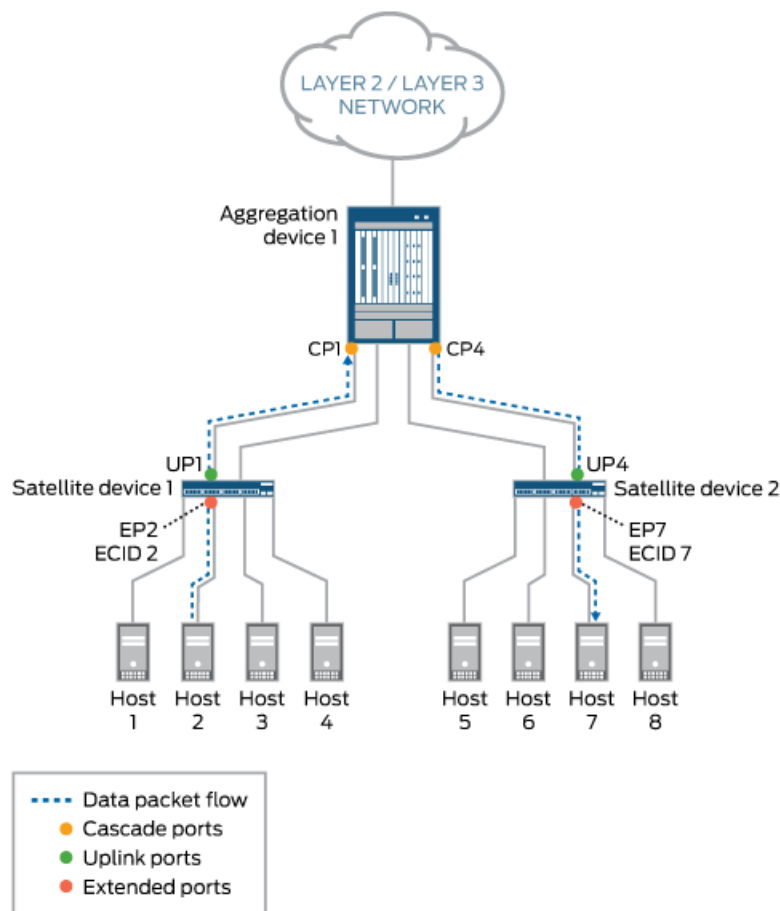

8043183

In scenario 1, where Host 2 sends a unicast data packet to Host 4, the following events occur:



**NOTE:** Only the events that are performed by Junos Fusion components are listed. Events handled by components that are not specific to the Junos Fusion topology are excluded.

1. Extended port EP2 on Satellite device 1 receives the packet from Host 2.
2. Satellite device 1 inserts an ETAG header in the packet. The ETAG header carries the ECID value (ECID 2), which is assigned by Aggregation device 1 to extended port EP2.
3. On Satellite device 1, two uplink ports (UP1 and UP2) are connected to Aggregation device 1. As a result, traffic between the devices can be load-balanced. In this case,

uplink port UP1 is chosen to forward the packet to cascade port CP1 on Aggregation device 1.

4. On receiving the packet, Aggregation device 1 extracts the ECID value (ECID 2) from the ETAG header of the packet and learns that the packet is from extended port EP2 on Satellite device 1. Aggregation device 1 then removes the ETAG header from the packet.
5. Aggregation device 1 performs a lookup for Host 4. The result of the lookup is extended port EP4 on Satellite device 1.
6. On Aggregation device 1, two cascade ports (CP1 and CP2) are connected to Satellite device 1. As a result, traffic between the devices can be load-balanced. In this case, cascade port CP2 is chosen to forward the packet to uplink port UP2 on Satellite device 1.
7. The packet is forwarded to cascade port CP2, where a new ETAG header and ECID value (ECID 4), which is assigned by Aggregation device 1 to extended port EP4, is added.
8. The packet is received by uplink port UP2 on Satellite device 1.
9. Satellite device 1 extracts the ECID value (ECID 4) from the ETAG header of the packet, then maps ECID 4 to extended port EP4.
10. Host 4 receives the packet from extended port EP4.

In scenario 2, where Host 2 sends a unicast data packet to Host 7, the events that occur are the same as for scenario 1 except for the following:

- Event 5—Aggregation device 1 performs a lookup for Host 7. The result of the lookup is extended port EP7 on Satellite device 2.
- Event 6—On Aggregation device 1, two cascade ports (CP3 and CP4) are connected to Satellite device 2. As a result, traffic between the devices can be load-balanced. In this case, cascade port CP4 is chosen to forward the packet to uplink port UP4 on Satellite device 2.
- Event 7—The packet is forwarded to cascade port CP4, where a new ETAG header and ECID value (ECID 7), which is assigned by Aggregation device 1 to extended port EP7, is added.
- Event 8—The packet is received by uplink port UP4 on Satellite device 2.
- Event 9—Satellite device 2 extracts the ECID value (ECID 7) from the ETAG header of the packet, and then maps ECID 7 to extended port EP7.
- Event 10—Host 7 receives the packet from extended port EP7.

**Related  
Documentation**

- *Understanding Junos Fusion Provider Edge Components*
- *Understanding Junos Fusion Enterprise Components*



## CHAPTER 2

# Junos Fusion Data Center Configuration

- [Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion on page 43](#)
- [Configuring or Expanding a Junos Fusion Data Center on page 48](#)
- [Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 73](#)

## Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion

A Junos Fusion using multiple aggregation devices often requires that the configuration of a feature—for example, an extended port, and entities such as routing instances and VLANs that include the extended port—must match on all aggregation devices. If a configuration statement for the feature—in this case, the extended port—is specified differently on one aggregation device, the statement on that aggregation device might be implemented in an unpredictable manner or might not be implemented at all.

Configuration synchronization can be used to ensure that configuration done in a configuration group is applied on all aggregation devices when committed. Configuration synchronization simplifies administration of a Junos Fusion by allowing users to enter configuration statements in a configuration group and apply the configuration group to all aggregation devices rather than repeating a configuration procedure manually on each aggregation device. Configuration synchronization also ensures configuration consistency in that the same configuration is applied to all aggregation devices.

We strongly recommend using configuration synchronization for software features that must be configured exactly the same on all aggregation devices.

In a Junos Fusion Data Center with EVPN, QFX10008 and QFX10016 switches, which support two Routing Engines, can function as aggregation devices. When applying a configuration group to aggregation devices that support two Routing Engines, you must apply the configuration group to each Routing Engine. For information about configuring an IP address for each Routing Engine, see [“Understanding Configuration Synchronization in a Junos Fusion” on page 20](#).

The available group configuration options are beyond the scope of this document; see [Understanding MC-LAG Configuration Synchronization](#) and [Synchronizing and Committing MC-LAG Configurations](#) for additional information on using group configurations in an MC-LAG topology.

To enable configuration synchronization between aggregation devices in a Junos Fusion.



**NOTE:** For the sake of brevity, the examples in this procedure show the configuration on only two aggregation devices. Unless specifically called out, the examples for two aggregation devices also apply to topologies with four aggregation devices.

1. Ensure the aggregation devices are reachable from one another:

*Aggregation device 1:*

```
user@ad1> ping ad2 rapid
PING ad2.host.example.net (192.168.255.41): 56 data bytes
!!!!
mostly o--- ad2.example.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.317/0.331/0.378/0.024 ms
```

*Aggregation device 2:*

```
user@ad2> ping ad1 rapid
PING ad1.host.example.net (192.168.255.40): 56 data bytes
!!!!
--- ad1.example.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.317/0.331/0.378/0.024 ms
```

If the devices cannot ping one another, try statically mapping the hostnames of each device's management IP address and retry the ping.

*Aggregation device 1:*

```
user@ad1# set system static-host-mapping inet 192.168.255.41
user@ad1# commit
user@ad1# run ping ad2 rapid
```

*Aggregation device 2:*

```
user@ad2# set system static-host-mapping ad1 inet 192.168.255.40
user@ad2# commit
user@ad2# run ping ad1 rapid
```

If the devices cannot ping one another after the hostnames are statically mapped, see [Connecting and Configuring an EX9200 Switch \(CLI Procedure\)](#) or the [Installation and Upgrade Guide for EX9200 Switches](#).

2. Enable configuration synchronization:

*Aggregation device 1:*

```
user@ad1# set system commit peers-synchronize
```

*Aggregation device 2:*

```
user@ad2# set system commit peers-synchronize
```

3. Configure each aggregation device so that the other aggregation devices are identified as configuration peers. Enter the authentication credentials of each peer aggregation device to ensure group configurations on one aggregation device are committed to the other aggregation devices.



**WARNING:** The password *password* is used in this configuration step for illustrative purposes only. Use a more secure password in your device configuration.



**NOTE:** This step assumes a user with an authentication password has already been created on each Juniper Networks switch acting as an aggregation device. For instructions on configuring username and password combinations, see [Connecting and Configuring an EX9200 Switch \(CLI Procedure\)](#).

*Aggregation device 1:*

```
user@ad1# set system commit peers ad2 user root authentication password
```

*Aggregation device 2:*

```
user@ad2# set system commit peers ad1 user root authentication password
```

4. Enable the Network Configuration (NETCONF) protocol over SSH:

*Aggregation device 1:*

```
user@ad1# set system services netconf ssh
```

*Aggregation device 2:*

```
user@ad2# set system services netconf ssh
```

5. Commit the configuration:

*Aggregation device 1:*

```
user@ad1# commit
```

*Aggregation device 2:*

```
user@ad2# commit
```

6. (Optional) Create a configuration group for testing to ensure configuration synchronization is working.

**Example for Junos Fusion Enterprise and Junos Fusion Data Center with aggregation devices that have one Routing Engine:**

*Aggregation Device 1:*

```
user@ad1# set groups TEST when peers [ad1 ad2]
user@ad1# set apply-groups TEST
```

*Aggregation Device 2:*

```
user@ad2# set apply-groups TEST
```

**Example for Junos Fusion Data Center with EVPN architecture and QFX10008 or QFX10016 switches with two Routing Engines as aggregation devices:**

*Aggregation Device 1:*

```
user@ad1# set groups TEST when peers 172.16.75.10 (ad1, re0)
user@ad1# set groups TEST when peers 172.16.75.20 (ad1, re1)
user@ad1# set groups TEST when peers 172.16.75.30 (ad2, re0)
user@ad1# set groups TEST when peers 172.16.75.40 (ad2, re1)
user@ad1# set groups TEST when peers 172.16.75.50 (ad3, re0)
user@ad1# set groups TEST when peers 172.16.75.60 (ad3, re1)
user@ad1# set groups TEST when peers 172.16.75.70 (ad4, re0)
user@ad1# set groups TEST when peers 172.16.75.80 (ad4, re1)
user@ad1# set apply-groups TEST
```

*Aggregation Device 2:*

```
user@ad2# set apply-groups TEST
```

*Aggregation Device 3:*

```
user@ad2# set apply-groups TEST
```

*Aggregation Device 4:*

```
user@ad2# set apply-groups TEST
```

7. (Optional) Configure and commit a group on aggregation device 1, and confirm it is implemented on aggregation device 2:



**NOTE:** This step shows how to change one interface configuration using groups. Interface ranges cannot be specified within groups and synchronized between configuration peers in a Junos Fusion to configure multiple interfaces simultaneously.

*Aggregation device 1:*

```
user@ad1# set groups TEST interfaces ge-0/0/1 description testing123
user@ad1# commit
```

*Aggregation device 2:*

```
user@ad2# show groups TEST
when {
  peers [ ad1 ad2 ];
}
interfaces {
  ge-0/0/1 {
    description testing123;
  }
}
user@ad2# run show interfaces ge-0/0/1
Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 235, SNMP ifIndex: 743
Description: testing123
(additional output removed for brevity)
```

Perform the same procedure to verify configuration synchronization from aggregation device 2 to aggregation device 1, if desired.

Delete the test configuration group on each aggregation device.

*Aggregation device 1:*

```
user@ad1# delete groups test
```

*Aggregation device 2:*

```
user@ad2# delete groups test
```

See [Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#) for a sample Junos Fusion Enterprise topology configured largely using configuration synchronization. See [Enterprise Data Center: Junos Fusion Data Center Architecture](#) for a sample Junos Fusion Data Center topology largely configured using configuration synchronization.

#### Related Documentation

- [Network Configuration Example: Configuring MC-LAG on EX9200 Switches in the Core for Campus Networks](#)
- [Synchronizing and Committing MC-LAG Configurations](#)

- [Understanding MC-LAG Configuration Synchronization](#)
- [Understanding Configuration Synchronization in a Junos Fusion on page 20](#)
- [Configuring or Expanding a Junos Fusion Enterprise](#)

## Configuring or Expanding a Junos Fusion Data Center

This topic provides the instructions needed to configure a Junos Fusion Data Center—a Junos Fusion using QFX10000 switches as aggregation devices—and to add satellite devices or aggregation devices to an existing Junos Fusion Data Center. The following table outlines the Junos Fusion Data Center configuration tasks and for which topologies the task must be performed.

Task	Junos Fusion Data Center with Multiple Aggregation Devices and EVPN?	Junos Fusion Data Center with Two Aggregation Devices and MC-LAG?	Junos Fusion Data Center with One Aggregation Device?
<a href="#">“Preparing the Aggregation Devices” on page 48</a>	Yes	Yes	Yes
<a href="#">“Preparing a Switch Running Junos OS to Become a Satellite Device” on page 49</a>	Yes	Yes	Yes
<a href="#">“Configuring the FPC Slot IDs and Cascade Ports on Aggregation Devices” on page 50</a>	Yes	Yes	Yes
<a href="#">“Managing Software Upgrade Groups on the Aggregation Device” on page 52</a>	Yes	Yes	Yes
<a href="#">“Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion” on page 43</a>	Yes	Yes	No
<a href="#">“Configuring the Dual Aggregation Device Topology (Dual Aggregation Device Topologies With MC-LAG Only)” on page 56</a>	No	Yes	No
<a href="#">“Configuring a Junos Fusion Data Center With EVPN” on page 59</a>	Yes	No	No
<a href="#">“Installing Satellite Software and Adding Satellite Devices to the Junos Fusion” on page 71</a>	Yes	Yes	Yes

## Preparing the Aggregation Devices

Ensure that each Routing Engine in each aggregation device is running a version of Junos OS software that is compatible with Junos Fusion Data Center. (The QFX10002 switch supports one Routing Engine, and the QFX10008 and QFX10016 switches support two Routing Engines.) See [Junos Fusion Hardware and Software Compatibility Matrices](#) and [Understanding Junos Fusion Data Center Software and Hardware Requirements](#).

If each Routing Engine in each aggregation device does not have the correct version of Junos OS installed, upgrade the Junos OS. See [Understanding Junos Fusion Data Center Software and Hardware Requirements](#) for pointers to supported Junos OS images.



**NOTE:** This procedure shows one method of upgrading Junos OS software. The instructions assume that you understand the basics of Junos OS image file management and have already acquired the target Junos OS image. This upgrade procedure causes avoidable system downtime.

The number of Junos OS software upgrade options available for QFX10000 switches is beyond the scope of this document. For information about Junos OS software installation options for QFX10000 switches, see the *Software Installation and Upgrade Guide*.

```
user@aggregation-device> request system software add aggregation-device-package-name
```

```
user@aggregation-device> request system software add aggregation-device-package-name  
rel
```

After performing the upgrade, reboot the Routing Engine to complete the software upgrade.

```
user@aggregation-device> request system reboot
```

## Preparing a Switch Running Junos OS to Become a Satellite Device

Use this procedure to prepare all switches running Junos OS software to become satellite devices.

This section can be skipped if your satellite device is already running satellite software.

To prepare a switch running Junos OS software to become a satellite device:

1. Log into the device that will become a satellite device through the console port.
2. Ensure the device is running a version of Junos OS that allows it to be converted into a satellite device. See [Understanding Junos Fusion Data Center Software and Hardware Requirements](#) for information on Junos OS requirements.

If you need to upgrade Junos OS on your satellite device before proceeding, see the *Software Installation and Upgrade Guide*.

3. Zeroize the device:

```
user@satellite-device> request system zeroize
```



**NOTE:** The device reboots to complete the procedure for zeroizing the device.

If you are not logged into the device using the console port connection, your connection to the device is lost after entering the **request system zeroize** command.

If you lose your connection to the device, log in using the console port.

4. (EX4300 switch uplink ports only) After the reboot is complete, convert the built-in 40-Gbps interfaces with QSFP+ transceivers from Virtual Chassis ports (VCPs) into network ports:

```
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port port-number
```

For example, to convert all four built-in 40-Gbps interfaces with QSFP+ transceivers on an EX4300-24P switch into network ports:

```
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port 0
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port 1
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port 2
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port 3
```

The number of built-in 40-Gbps interfaces with QSFP+ transceivers varies by EX4300 switch model. See *EX4300 Switches Hardware Overview*.

This step is required for the 40-Gbps interfaces with QSFP+ transceivers that will be used as uplink interfaces to directly connect to the aggregation device in a Junos Fusion Data Center, because zeroizing the devices restores the default settings and 40-Gbps interfaces with QSFP+ transceivers on EX4300 switches are configured into VCPs by default. VCPs cannot be configured into uplink ports to connect to aggregation devices in a Junos Fusion.

## Configuring the FPC Slot IDs and Cascade Ports on Aggregation Devices

For more information on FPC slot IDs and cascade ports, see [“Understanding Junos Fusion Data Center Components” on page 6](#).

To configure FPC slot IDs and cascade ports:

1. Configure the cascade ports, and commit the configuration.

A cascade port is a port on an aggregation device that connects to a satellite device. Data and control traffic is passed between the aggregation device and the satellite devices over the cascade port link.

To configure a cascade port:

```
[edit]
user@aggregation-device# set interfaces interface-name cascade-port
```

where *interface-name* in the cascade port interface on the aggregation device.

For example, to configure interface xe-0/0/1 on the aggregation device into a cascade port:

```
[edit]
user@aggregation-device# set interfaces xe-0/0/1 cascade-port
```



Commit the configuration:

```
[edit]
user@aggregation-device# commit
```

If your aggregation device is a QFX10008 or QFX10016 switch with two Routing Engines, commit the configuration on both Routing Engines:

```
[edit]
user@aggregation-device# commit synchronize
```

## 2. Configure the FPC slot ID number of each satellite device.

In a Junos Fusion Data Center, each satellite device must be mapped to an FPC identifier (FPC ID). The FPC ID is in the range of 65 through 255, and it is used for Junos Fusion Data Center configuration, monitoring, and maintenance. Interface names—which are identified using the *type-fpc / pic / port* format—use the FPC ID as the *fpc* variable when the satellite device is participating in a Junos Fusion Data Center.

- To map the FPC slot ID to a satellite device's MAC address:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc slot-id system-id
mac-address
```

where *slot-id* becomes the FPC slot ID of the satellite device and *mac-address* is the satellite device's MAC address. The FPC slot ID functions as the FPC slot identifier.

For example, to map FPC slot ID 110 to the satellite device using MAC address 00:00:5E:00:53:00:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 110 system-id
00:00:5E:00:53:00
```

- To map the FPC slot ID to a satellite device's serial number:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc slot-id serial-number
serial-number
```

where *slot-id* becomes the FPC slot ID of the satellite device and *serial-number* is the satellite device's serial number. The FPC slot ID must be 65 or larger, and it functions as the FPC slot identifier.

For instance, to map FPC slot ID 101 to the satellite device using the serial number ABCDEFGHIJKL:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 101 serial-number
ABCDEFGHIJKL
```

- To map the FPC slot ID for a satellite device to a cascade port, enter:

```
[edit]
```

```
user@aggregation-device# set chassis satellite-management fpc slot-id cascade-ports  
interface-name
```

where *slot-id* becomes the FPC slot ID of the satellite device, and *interface-name* is the name of an interface that you configured as a cascade port.

For example, to configure the FPC slot ID of the satellite device that is connected to xe-0/0/1 to 101:

```
[edit]  
user@aggregation-device# set chassis satellite-management fpc 101 cascade-ports  
xe-0/0/1
```

If a prospective satellite device is connected to a Junos Fusion Data Center without having a configured FPC slot ID, the prospective satellite device does not participate in the Junos Fusion Data Center until an FPC ID is associated with it. The **show chassis satellite unprovision** output includes a list of satellite devices that are not participating in a Junos Fusion Data Center because of an FPC ID association issue.

The FPC slot ID configuration must match on each aggregation device in a topology with multiple aggregation devices and in which satellite devices are connected to multiple aggregation devices.

## Managing Software Upgrade Groups on the Aggregation Device

A satellite software upgrade group is a group of satellite devices that is designated to run the same satellite software version using the same satellite software package. One Junos Fusion Data Center can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusion Data Centers to avoid network downtimes during satellite software installations.

When a satellite device is added to a Junos Fusion Data Center, the aggregation device checks if the satellite device is using an FPC ID that is included in a satellite software upgrade group. If the device is a satellite device that is using an FPC ID that is part of a satellite software upgrade group, the device—unless it is already running the same version of satellite software—upgrades its satellite software using the satellite software associated with the satellite software upgrade group.

When the satellite software package associated with an existing satellite software group is changed, the satellite software for all member satellite devices is upgraded using a throttled upgrade. The throttled upgrade ensures that only a few satellite devices are updated at a time to minimize the effects of a traffic disruption resulting from too many satellite devices upgrading software simultaneously.

The two most common methods for installing satellite software onto a satellite device—autoconverting a device into a satellite device when it is cabled into an aggregation device and manually converting a device that is cabled into an aggregation device into a satellite device—require that a satellite software upgrade group is configured.

Software upgrade groups are managed from the aggregation device.

In a Junos Fusion Data Center with multiple aggregation devices, the configuration for software upgrade groups must be the same on each aggregation device. To ensure that

the configuration is the same on all aggregation devices, we recommend using the configuration synchronization feature. The procedure in this topic explains how to enter software upgrade-related commands in a configuration group and apply the group to all aggregation devices. This procedure assumes that you have already enabled the configuration synchronization feature in your Junos Fusion Data Center. For more information about performing this task, see [“Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion” on page 43.](#)



**NOTE:** When applying a configuration synchronization group to a QFX10008 or QFX10016 switch, which supports two Routing Engines, you must apply the group to both Routing Engines. The following procedure provides a sample configuration for this use case.

To manage a software upgrade group:

1. Log into an aggregation device.
2. Download the satellite software onto each aggregation device (recommended) or onto a remote server.

The satellite software can be downloaded from the main Junos Fusion software download page:

[Junos Fusion - Download Software](#)

3. (Multiple aggregation device topologies only.) Create a configuration group that includes the software upgrade group-related commands that you want synchronized to all aggregation devices. Apply the configuration group to all aggregation devices in the Junos Fusion Data Center.

**Example for a Junos Fusion Data Center with four QFX10002 switches as Aggregation Devices 1, 2, 3, and 4:**

```
[edit]
user@aggregation-device-1# set groups configuration-group-name when peers
aggregation-device-management-ip-address
...
user@aggregation-device-1# set apply-groups configuration-group-name
```

```
[edit]
user@aggregation-device-1# set groups upgrade when peers 172.16.75.10 (AD1)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.20 (AD2)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.30 (AD3)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.40 (AD4)
user@aggregation-device-1# set apply-groups upgrade
```

**Example for a Junos Fusion Data Center with four QFX10008 switches as Aggregation Devices 1, 2, 3, and 4:**

Before issuing the following commands, make sure that you have configured an IP address for each Routing Engine in the QFX10008 switch. For information about this

subject, see [“Understanding Configuration Synchronization in a Junos Fusion” on page 20](#).

```
[edit]
user@aggregation-device-1# set groups configuration-group-name when peers
em0.0-ip-address
...
user@aggregation-device-1# set apply-groups configuration-group-name

[edit]
user@aggregation-device-1# set groups upgrade when peers 172.16.75.10 (AD1, re0)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.20 (AD1, re1)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.30 (AD2, re0)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.40 (AD2, re1)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.50 (AD3, re0)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.60 (AD3, re1)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.70 (AD4, re0)
user@aggregation-device-1# set groups upgrade when peers 172.16.75.80 (AD4, re1)
```

4. Create a software upgrade group, and associate satellite devices with the group:

```
[edit]
user@aggregation-device# set groups configuration-synchronization-group-name chassis
satellite-management upgrade-groups upgrade-group-name satellite slot-id-number-or-range
```



**NOTE:** If you performed the configuration in step 3, include the groups *configuration-synchronization-group-name* configuration statement. Otherwise, you do not need to include this configuration statement.

The *upgrade-group-name* is the name of the upgrade group, and the *slot-id-number-or-range* is the FPC slot ID number or range of numbers of the satellite devices that are being added to the upgrade group.



**NOTE:** If you enter the name of an existing satellite software upgrade group as the *upgrade-group-name*, the specified satellite devices are added to the existing software upgrade group.

For example, to create a software upgrade group named **group1** that includes all satellite devices numbered 101 through 120 and include this command in the configuration synchronization group created in step 3:

```
[edit]
user@aggregation-device# set groups upgrade chassis satellite-management
upgrade-groups group1 satellite 101-120
```

5. Commit the configuration:

If you are configuring an aggregation device with two Routing Engines:

```
[edit]
user@aggregation-device# commit synchronize
```

If you are configuring an aggregation device with a single Routing Engine or want to commit the configuration to a single Routing Engine only:

```
[edit]
user@aggregation-device# commit
```

The configuration must be committed before associating a satellite software image with the satellite software upgrade group, which is done in Step 7.

6. On each Routing Engine on each aggregation device, expand the size of the /user disk partition to provide sufficient space for installing satellite packages. The system will reboot to complete the operation:

```
user@aggregation-device> request system storage user-disk expand
```



**NOTE:** A QFX10002 switch supports one Routing Engine, and QFX10008 and QFX10016 switches support two Routing Engines.

7. Associate the satellite software upgrade group with a satellite software image.



**NOTE:** In a Junos Fusion Data Center with multiple aggregation devices, you can perform this step on only one aggregation device provided that a satellite software version has not yet been associated with the group on the other aggregation devices.

If any of the other aggregation devices already has a satellite software version associated with the group, be aware that the version must be the same on all aggregation devices. The satellite software upgrade does not proceed unless all aggregation devices have the same or no satellite software version specified for the group.

```
user@aggregation-device> request system software add package-name upgrade-group
upgrade-group-name
```

where *package-name* is the URL or pathname to the satellite software package, and *upgrade-group-name* is the name that you assigned the software upgrade group in step 4.

For example, to associate a satellite software image named **satellite-3.4R2.0-signed.tgz** that is currently stored in the **/var/tmp** directory on the aggregation device to the software upgrade group named **group1**:

```
user@aggregation-device> request system software add
/var/tmp/satellite-3.4R2.0-signed.tgz upgrade-group group1
```

Associating a new satellite software image with a software upgrade group can trigger a software upgrade on satellite devices in the group that are not yet running the

specified software version. A throttled satellite software upgrade might begin after entering the **request system software add** command. A satellite software upgrade might also be triggered when a configuration that uses the software upgrade group is committed.

## Configuring the Dual Aggregation Device Topology (Dual Aggregation Device Topologies With MC-LAG Only)

Use this procedure to connect and configure a second aggregation device into a Junos Fusion Data Center topology.

Before you begin:

- Ensure that a Junos Fusion topology has already been configured, and that the topology includes a satellite software upgrade group.
- Ensure that the aggregation devices are already cabled together and that all cabling to all satellite devices has been completed for both aggregation devices. For information on cabling requirements, see [Understanding Junos Fusion Data Center Software and Hardware Requirements](#).

To configure a dual aggregation device topology:

1. (Required only if aggregation device was previously configured into single home mode)  
Delete single home configuration mode:

On aggregation device 1 and 2:

```
[edit]
user@aggregation-device# delete chassis satellite-management single-home
```

2. Create and configure a redundancy group on the first aggregation device.

A dual aggregation device topology in a Junos Fusion is a multichassis link aggregation group (MC-LAG) that uses the Inter-Chassis Communications Protocol (ICCP) to communicate between the aggregation devices. ICCP is typically used in an MC-LAG to exchange information between MC-LAG peers. The MC-LAG peers in a Junos Fusion dual aggregation topology are the aggregation devices.

A redundancy group is required to enable ICCP in a Junos Fusion. A Junos Fusion topology supports one redundancy group that includes two member devices—the

aggregation devices—while also including a configuration parameter that allows users to specify that the satellite devices also belong to the redundancy group.

To create and configure the redundancy group on the first aggregation device:

- a. Specify the redundancy group ID number on both aggregation devices. The redundancy group name is created and named as part of this process.

The redundancy group ID number and name must match on both aggregation devices.

On aggregation device 1 and 2:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set redundancy-group-name redundancy-group-id
redundancy-group-id-number
```

For instance, to create a redundancy group named `junos-fusion-data-center-network` that uses redundancy group ID 1 on aggregation device 1:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set junos-fusion-data-center-network redundancy-group-id
1
```

Repeat this procedure on aggregation device 2:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set junos-fusion-data-center-network redundancy-group-id
1
```

- b. Define the chassis ID number of the each aggregation device:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set chassis-id chassis-id-number
```

For instance, to assign the aggregation device 1 the chassis ID of 1 for the `junos-fusion-data-center-network` redundancy group:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set chassis-id 1
```

To assign aggregation device 2 the chassis ID of 2 for the `junos-fusion-data-center-network` redundancy group:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set chassis-id 2
```

The chassis ID numbers cannot match and are used to create the ICL that interconnects the aggregation device in the Junos Fusion topology.

- c. Define the peer chassis ID number—the chassis ID number of the other aggregation device—and interface to use for the ICL:

```
[edit chassis satellite-management redundancy-groups]
```

```
user@aggregation-device# set redundancy-group-name peer-chassis-id  
peer-chassis-id-number inter-chassis-link interface-name
```

For instance, to use the xe-0/0/1 interface on aggregation device 1 to create an ICL that connects to aggregation device 2:

```
[edit chassis satellite-management redundancy-groups]  
user@aggregation-device# set junos-fusion-data-center-network peer-chassis-id 2  
inter-chassis-link xe-0/0/1
```

To complete the configuration by defining the peer chassis ID and interface on aggregation device 2:

```
[edit chassis satellite-management redundancy-groups]  
user@aggregation-device# set junos-fusion-data-center-network peer-chassis-id 1  
inter-chassis-link xe-0/0/1
```

The ICL is used to pass traffic between the aggregation devices.

- d. Define the satellite devices that are part of the redundancy group.

The satellite device devices added to the redundancy group in this step must match on both redundancy groups.

All satellite devices in the Junos Fusion should be added to the redundancy group in this step.

To add satellite devices to the redundancy group:

```
[edit chassis satellite-management redundancy-groups]  
user@aggregation-device# set redundancy-group-name satellite satellite-device-fpc-IDs
```

For instance, to include satellite devices using FPC IDs 100-140 in the redundancy group:

```
[edit chassis satellite-management redundancy-groups]  
user@aggregation-device# set junos-fusion-data-center-network satellite 100-140
```

3. (Recommended) Ensure at least one link besides the ICL is connecting the aggregation devices. This link automatically becomes the ICCP link.

An ICCP link can be one link or an aggregated ethernet interface. In most Junos Fusion deployments, we recommend using a 40-Gbps link or an aggregated ethernet interface as the ICCP link.

An ICCP link is recommended but is optional because ICCP traffic is transmitted across the ICL when a dedicated ICCP link is not configured.

ICCP configuration is not required. ICCP is automatically provisioned in a Junos Fusion using dual aggregation devices, by default. User configuration of ICCP is not required and is only recommended for expert users.

If you configure an ICCP parameter in a Junos Fusion, the user-configured parameter overrides the automatically provisioned parameter for the configured parameter only.



You can disable automatic ICCP provisioning using the `no-auto-iccp-provisioning` statement.

If you decide to configure ICCP, you must configure matching configurations on both aggregation devices.

#### 4. Configure ICCP.

ICCP can be configured in one of the following ways:

- Automatic ICCP provisioning

Automatic ICCP provisioning automatically configures ICCP in a dual aggregation device setup without any user action. Automatic ICCP provisioning is enabled by default and is often the preferred method of enabling ICCP for a Junos Fusion in greenfield deployments that are not being integrated into an existing network.

No user action is required to configure ICCP if automatic ICCP provisioning is used.

- Manual ICCP configuration.

Manual ICCP configuration is typically used to integrate a Junos Fusion into an existing network or by expert users that want to finely tune ICCP settings.

Many Junos Fusion Enterprise installations occur in brownfield deployments and the Junos Fusion has to be integrated into an existing network. Brownfield deployments often have a need to maintain existing ICCP settings, in particular in scenarios where a Junos Fusion is replacing an MC-LAG topology or is supporting a network that includes other MC-LAG topologies. ICCP must be configured manually in these scenarios.

See *Configuring Multichassis Link Aggregation on EX Series Switches* for the steps and options available to configure ICCP.

If you configure an ICCP parameter in a Junos Fusion, the user-configured parameter overrides the automatically provisioned parameter for the configured parameter only. You can disable all automatic ICCP provisioning using the `no-auto-iccp-provisioning` statement.

If you decide to manually configure ICCP, you must configure matching configurations on both aggregation devices.


## Configuring a Junos Fusion Data Center With EVPN

This section provides a basic configuration for Junos Fusion Data Center with Ethernet VPN (EVPN). For a more comprehensive non-Junos Fusion Data Center EVPN configuration, see *Example: Configuring IRB Interfaces in an EVPN-VXLAN Environment to Provide Layer 3 Connectivity for Hosts in a Data Center*.

Figure 12 on page 60 shows a Junos Fusion Data Center in which four aggregation devices comprise an EVPN core fabric. For ease of configuration, monitoring, and troubleshooting, we recommend deploying the same QFX10000 model for all aggregation devices in the EVPN core fabric. In the Junos Fusion Data Center in Figure 12 on page 60, four QFX10002 switches act as aggregation devices, which are directly connected to each other.

In [Figure 12 on page 60](#), EX4300, QFX5100, QFX5110, and QFX5200 switches act as satellite devices, each of which is multihomed to each aggregation device.

**Figure 12: Junos Fusion Data Center with EVPN Architecture**

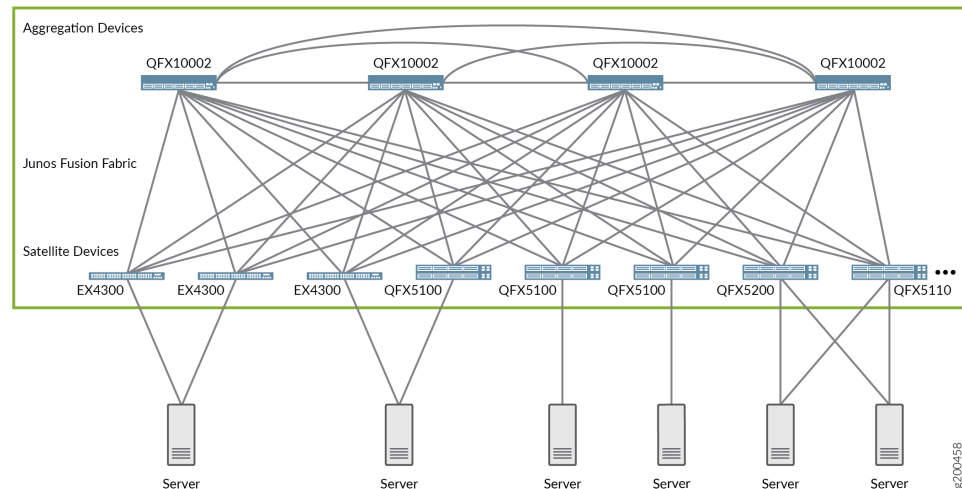

In this topology, you configure EVPN and Virtual Extensible LAN (VXLAN) on the aggregation devices only. The aggregation devices are part of an EVPN control plane that distributes server MAC address reachability and other states among themselves. Note that the EVPN processing among the aggregation devices co-exists with the IEEE 802.1BR processing that takes place between the aggregation and satellite devices. VXLAN enables an aggregation device to tunnel Layer 2 data traffic from servers in the topology to another aggregation device.

In a Junos Fusion Data Center with multiple aggregation devices, some of the basic configuration—for example, physical and integrated routing and bridging (IRB) interface configurations—is specific to a particular aggregation device. Other parts of the basic configuration—for example, extended port, VLAN, and routing instance configurations—should be exactly the same on all aggregation devices. To ensure that a configuration is the same on all aggregation devices, we recommend using the configuration synchronization feature. Where appropriate, the procedure in this section explains how to enter commands in a configuration group and apply the group to all aggregation devices. This procedure assumes that you have already enabled the configuration synchronization feature in your Junos Fusion Data Center. For more information about performing this task, see [“Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion” on page 43](#).



**NOTE:** When applying a configuration synchronization group to a QFX10008 or QFX10016 switch, which supports two Routing Engines, you must apply the group to both Routing Engines. Where appropriate, the following procedure provides a sample configuration for this use case.

For more about Junos Fusion Data Center with EVPN implementation details, see [“Understanding EVPN in a Junos Fusion Data Center” on page 26](#).

Before you begin:

- Ensure that the aggregation devices are already cabled together and that cabling to all satellite devices has been completed for all aggregation devices. For information on cabling requirements, see [Understanding Junos Fusion Data Center Software and Hardware Requirements](#).
- Ensure that a Junos Fusion Data Center topology has already been configured using following information:
  - [Preparing the Aggregation Devices on page 48](#)
  - [Preparing a Switch Running Junos OS to Become a Satellite Device on page 49](#)
  - [Configuring the FPC Slot IDs and Cascade Ports on Aggregation Devices on page 50](#)
  - [Managing Software Upgrade Groups on the Aggregation Device on page 52](#)
  - [Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion on page 43](#)



**NOTE:** The following procedure provides the configuration for one aggregation device only (aggregation device 1). The configuration for this aggregation device essentially serves as a template for the configuration of the other aggregation devices. For the configuration of the other aggregation devices, where appropriate, you can replace aggregation device 1-specific information with the information specific to the device you are configuring, add additional commands, and so on.

To configure Junos Fusion Data Center with EVPN:

1. Delete the single-home configuration.

This step is required only if an aggregation device was previously set to single home mode.

[edit]

```
user@aggregation-device# delete chassis satellite-management single-home
```

2. Configure the interfaces.

- a. If you have not already, configure the cascade ports on the aggregation device as described in [“Configuring the FPC Slot IDs and Cascade Ports on Aggregation Devices” on page 50](#).

- b. Configure interfaces for connection to each of the other aggregation devices.

[edit interfaces]

```
user@aggregation-device-1# set interface-name mtu bytes user@aggregation-device-1#
set interface-name unit 0 family inet address ip-address/ip-prefix
```

For example:

```
[edit interfaces]
user@aggregation-device-1# set et-0/0/2 mtu 9200
user@aggregation-device-1# set et-0/0/2 unit 0 description "To aggregation-device-2"
user@aggregation-device-1# set et-0/0/2 unit 0 family inet address 10.0.13.1/24
user@aggregation-device-1# set et-0/0/1 mtu 9200
user@aggregation-device-1# set et-0/0/1 unit 0 description "To aggregation-device-3"
user@aggregation-device-1# set et-0/0/1 unit 0 family inet address 10.0.14.1/24
user@aggregation-device-1# set et-0/0/34 mtu 9200
user@aggregation-device-1# set et-0/0/34 unit 0 description "To aggregation-device-4"
user@aggregation-device-1# set et-0/0/34 unit 0 family inet address 10.0.12.1/24
```



**NOTE:** On these aggregation device-to-aggregation device interfaces, the MTU is set to 9200 bytes to accommodate the transmission of VXLAN-encapsulated packets.

- c. Configure a loopback address for aggregation device 1:

The loopback address is used to identify a particular aggregation device for features such as redundancy groups.

```
[edit interfaces]
user@aggregation-device-1# set lo0 unit 0 family inet address ip-address/ip-prefix
primary
```

For example:

```
[edit interfaces]
user@aggregation-device-1# set lo0 unit 0 family inet address 127.1.1/32 primary
```

- d. Configure the management interface em0.0 with an IP address.

```
[edit interfaces]
user@aggregation-device-1# set em0 unit 0 family inet address
ip-address/ip-prefix
```

For example, to configure IP address 172.16.75.10/24 for em0.0 on a QFX10002 switch, which supports one Routing Engine:

```
[edit interfaces]
user@aggregation-device-1# set em0 unit 0 family inet address 172.16.75.10/24
```

On a QFX10008 or QFX10016 switch, which has two Routing Engines, you can identify each Routing Engine by configuring an IP address for the Routing Engine in slot 0 (re0) and another IP address for the Routing Engine in slot 1 (re1). We recommend using management interface em0.0 for both re0 and re1, which you can configure using configuration groups for re0 and re1. For example:

```
[edit]
user@aggregation-device-1# set groups re0 interfaces em0 unit 0 family inet address
172.16.75.10/24
user@aggregation-device-1# set groups re1 interfaces em0 unit 0 family inet address
172.16.75.20/24
```

3. Configure the routing options for aggregation device 1.

- a. Configure a router ID, which is the same IP address specified for the loopback interface.

```
[edit routing-options]
user@aggregation-device-1# set router-id loopback-ip-address
```

For example:

```
[edit routing-options]
user@aggregation-device-1# set router-id 127.1.1.1
```

- b. Configure an autonomous system to be used by BGP.

```
[edit routing-options]
user@aggregation-device-1# set autonomous-system number
```

For example:

```
[edit routing-options]
user@aggregation-device-1# set autonomous-system 64500
```

4. Create a redundancy group, which is an entity that includes all aggregation and satellite devices and enables EVPN on all aggregation devices in the Junos Fusion Data Center.

- a. Define a unique chassis ID number that identifies aggregation device 1:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device-1# set chassis-id chassis-id-number
```

For example, to assign aggregation device 1 the chassis ID of 1:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device-1# set chassis-id 1
```

- b. Specify the name and ID number of the redundancy group on aggregation device 1.

The redundancy group name and ID number must be the same on all aggregation devices.

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device-1# set redundancy-group-name redundancy-group-id
redundancy-group-id-number
```

For example, to create a redundancy group named evpn-red-grp that uses redundancy group ID 10 on aggregation device 1:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device-1# set evpn-red-grp redundancy-group-id 10
```

- c. For each EVPN peer of aggregation device 1, specify the loopback IP address of the peer and enable EVPN:

```
[edit chassis satellite-management redundancy-groups redundancy-group-name]
```

```
user@aggregation-device-1# set protocol evpn peer-ip IP address
...
```

For example, if the loopback addresses of aggregation devices 2, 3, and 4 are 127.2.2.2, 127.3.3.3, 127.4.4.4, respectively:

```
[edit chassis satellite-management redundancy-groups evpn-red-grp]
user@aggregation-device-1# set protocol evpn peer-ip 127.2.2.2
user@aggregation-device-1# set protocol evpn peer-ip 127.3.3.3
user@aggregation-device-1# set protocol evpn peer-ip 127.4.4.4
```

- d. On aggregation device 1, define the satellite devices that are part of the redundancy group.

All satellite devices in the Junos Fusion Data Center should be included in the redundancy group.

The satellite device devices included in the redundancy group must be the same on all aggregation devices.

To add satellite devices to the redundancy group:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device-1# set redundancy-group-name satellite
satellite-device-fpc-IDs
```

For example, to include satellite devices using FPC IDs 100-220 to the redundancy group named evpn-red-grp:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device-1# set evpn-red-grp satellite 100-220
```

5. Configure OSPF as the internal routing protocol for the aggregation devices in the EVPN core fabric.

You configure OSPF by creating an OSPF area in which you include the loopback interface of aggregation device 1 and the interfaces that connect to aggregation devices 2, 3, and 4. Also, you must configure BFD liveness detection, which can quickly detect if an interface to a peer aggregation device is down. This feature is strongly recommended in the highly scaled Junos Fusion Data Center.

```
[edit protocols ospf]
user@aggregation-device-1# set area area-id interface loopback-interface passive
user@aggregation-device-1# set area area-id interface interface-to-aggregation-device-2
bfd-liveness-detection minimum-interval milliseconds
user@aggregation-device-1# set area area-id interface interface-to-aggregation-device-2
bfd-liveness-detection multiplier number
user@aggregation-device-1# set area area-id interface interface-to-aggregation-device-3
bfd-liveness-detection minimum-interval milliseconds
user@aggregation-device-1# set area area-id interface interface-to-aggregation-device-3
bfd-liveness-detection multiplier number
user@aggregation-device-1# set area area-id interface interface-to-aggregation-device-4
bfd-liveness-detection minimum-interval milliseconds
user@aggregation-device-1# set area area-id interface interface-to-aggregation-device-4
bfd-liveness-detection multiplier number
```

For example, to configure OSPF area 0.0.0.0, include the loopback interface of aggregation device 1 and the interfaces to aggregation devices 2, 3, and 4 in area 0, and configure BFD liveness detection:

```
[edit protocols ospf]
user@aggregation-device-1# set area 0.0.0.0 interface lo0.0 passive
user@aggregation-device-1# set area 0.0.0.0 interface et-0/0/2.0 bfd-liveness-detection
minimum-interval 1000
user@aggregation-device-1# set area 0.0.0.0 interface et-0/0/2.0 bfd-liveness-detection
multiplier 3
user@aggregation-device-1# set area 0.0.0.0 interface et-0/0/1.0 bfd-liveness-detection
minimum-interval 1000
user@aggregation-device-1# set area 0.0.0.0 interface et-0/0/1.0 bfd-liveness-detection
multiplier 3
user@aggregation-device-1# set area 0.0.0.0 interface et-0/0/34.0 bfd-liveness-detection
minimum-interval 1000
user@aggregation-device-1# set area 0.0.0.0 interface et-0/0/34.0 bfd-liveness-detection
multiplier 3
```

With the BFD liveness detection settings of 1000 milliseconds and a multiplier of 3, BFD declares that an interface with a peer aggregation device is down 3000 milliseconds after receiving the last reply from the interface.

6. Configure an IBGP overlay between the aggregation devices, and include the EVPN signaling network layer reachability information (NLRI) in the IBGP group.

```
[edit protocols bgp]
user@aggregation-device-1# set group group-name type internal
user@aggregation-device-1# set group group-name local-address
aggregation-device-1-loopback-ip-address
user@aggregation-device-1# set group group-name family evpn signaling
user@aggregation-device-1# set group bgp-peers bfd-liveness-detection minimum-interval
milliseconds
user@aggregation-device-1# set group bgp-peers bfd-liveness-detection multiplier number
user@aggregation-device-1# set group group-name neighbor
aggregation-device-2-loopback-ip-address
user@aggregation-device-1# set group group-name neighbor
aggregation-device-3-loopback-ip-address
user@aggregation-device-1# set group group-name neighbor
aggregation-device-4-loopback-ip-address
```

For example, if the loopback addresses of aggregation devices 2, 3, and 4 are 127.2.2.2, 127.3.3.3, 127.4.4.4, respectively:

```
[edit protocols bgp]
user@aggregation-device-1# set group bgp-peers type internal
user@aggregation-device-1# set group bgp-peers local-address 127.1.1.1
user@aggregation-device-1# set group bgp-peers family evpn signaling
user@aggregation-device-1# set group bgp-peers bfd-liveness-detection minimum-interval
1000
user@aggregation-device-1# set group bgp-peers bfd-liveness-detection multiplier 3
user@aggregation-device-1# set group bgp-peers neighbor 127.2.2.2
user@aggregation-device-1# set group bgp-peers neighbor 127.3.3.3
user@aggregation-device-1# set group bgp-peers neighbor 127.4.4.4
```

With the BFD liveness detection settings of 1000 milliseconds and a multiplier of 3, BFD declares that a peer aggregation device is down 3000 milliseconds after receiving the last reply from the device.

7. For each VLAN you plan to set up, configure an integrated routing and bridging (IRB) interface.

When configuring each IRB interface, also specify a virtual gateway address (VGA), which configures the IRB interface as a default Layer 3 gateway. This gateway enables non-virtualized (bare-metal) servers connected to extended ports to route their traffic from one VLAN to another non-virtualized server or virtual machine (VM) in another VLAN.

```
[edit interfaces]
user@aggregation-device-1# set irb unit logical-unit-identifier family inet address
irb-ip-address/ip-prefix virtual-gateway-address default-gateway-ip-address
...
```

For example:

```
[edit interfaces]
user@aggregation-device-1# set irb unit 1001 family inet address 10.1.1/24
virtual-gateway-address 10.1.1.10
user@aggregation-device-1# set irb unit 2001 family inet address 10.1.2/24
virtual-gateway-address 10.1.2.10
user@aggregation-device-1# set irb unit 3001 family inet address 10.1.3/24
virtual-gateway-address 10.1.3.10
user@aggregation-device-1# set irb unit 1002 family inet address 10.2.1/24
virtual-gateway-address 10.2.1.10
user@aggregation-device-1# set irb unit 2002 family inet address 10.2.2/24
virtual-gateway-address 10.2.2.10
user@aggregation-device-1# set irb unit 3002 family inet address 10.2.3/24
virtual-gateway-address 10.2.3.10
user@aggregation-device-1# set irb unit 1003 family inet address 10.3.1/24
virtual-gateway-address 10.3.1.10
user@aggregation-device-1# set irb unit 2003 family inet address 10.3.2/24
virtual-gateway-address 10.3.2.10
user@aggregation-device-1# set irb unit 3003 family inet address 10.3.3/24
virtual-gateway-address 10.3.3.10
user@aggregation-device-1# set irb unit 1004 family inet address 10.4.1/24
virtual-gateway-address 10.4.1.10
user@aggregation-device-1# set irb unit 2004 family inet address 10.4.2/24
virtual-gateway-address 10.4.2.10
user@aggregation-device-1# set irb unit 3004 family inet address 10.4.3/24
virtual-gateway-address 10.4.3.10
user@aggregation-device-1# set irb unit 1005 family inet address 10.5.1/24
virtual-gateway-address 10.5.1.10
user@aggregation-device-1# set irb unit 2005 family inet address 10.5.2/24
virtual-gateway-address 10.5.2.10
user@aggregation-device-1# set irb unit 3005 family inet address 10.5.3/24
virtual-gateway-address 10.5.3.10
...
```

This sample configuration does not explicitly specify a MAC address for the default gateway. This configuration uses the MAC address that is automatically generated by the aggregation device.





**NOTE:** When you specify an IPv4 address for the VGA, the aggregation device automatically generates 00:00:5e:00:01:01 as the media access control (MAC) address for the default gateway. When you specify an IPv6 address, the aggregation device automatically generates 00:00:5e:00:02:01 as the MAC address for the default gateway.

If needed, you can explicitly configure an IPv4 or IPv6 MAC address for a default gateway by using the `virtual-gateway-v4-mac` or `virtual-gateway-v6-mac` configuration statement at the `[edit interfaces name irb unit logical-unit-number]` hierarchy level. After you perform this configuration, the automatically generated MAC address is overridden by the configured MAC address.

8. Configure VLANs, extended ports, and routing instances on aggregation device 1. The configuration of these entities should be exactly the same on all aggregation devices, so we recommend using the configuration synchronization feature. To implement this feature, create a configuration group that includes commands that you want synchronized to the other aggregation devices, and apply the configuration group to the aggregation devices.

**Example for a Junos Fusion Data Center with four QFX10002 switches, which support one Routing Engine, as Aggregation Devices 1, 2, 3, and 4:**

```
[edit]
user@aggregation-device-1# set groups configuration-group-name when peers
aggregation-device-management-ip-address
...
user@aggregation-device-1# set apply-groups configuration-group-name

[edit]
user@aggregation-device-1# set groups overlay when peers 172.16.75.10 (AD1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.20 (AD2)
user@aggregation-device-1# set groups overlay when peers 172.16.75.30 (AD3)
user@aggregation-device-1# set groups overlay when peers 172.16.75.40 (AD4)
user@aggregation-device-1# set apply-groups overlay
```

**Example for a Junos Fusion Data Center with four QFX10008 switches, which support two Routing Engines, as Aggregation Devices 1, 2, 3, and 4**

The following sample configuration assumes that you configured an IP address for each Routing Engine on each aggregation device as described in step 2d.

```
[edit]
user@aggregation-device-1# set groups configuration-group-name when peers
em0.0-ip-address
...
user@aggregation-device-1# set apply-groups configuration-group-name

[edit]
user@aggregation-device-1# set groups overlay when peers 172.16.75.10 (AD1, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.20 (AD1, re1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.30 (AD2, re0)
```

```

user@aggregation-device-1# set groups overlay when peers 172.16.75.40 (AD2, re1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.50 (AD3, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.60 (AD3, re1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.70 (AD4, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.80 (AD4, re1)
user@aggregation-device-1# set apply-groups overlay

```

- a. Configure VLANs, and map them to IRB interfaces and VXLAN network identifiers (VNIs).

```

[edit]
user@aggregation-device-1# set groups configuration-group-name vlans vlan-name
vlan-id vlan-id
user@aggregation-device-1# set groups configuration-group-name vlans vlan-name
l3-interface irb.logical-unit-identifier
user@aggregation-device-1# set groups configuration-group-name vlans vlan-name
vxlan vni vni
...

```

For example:

```

[edit]
user@aggregation-device-1# set groups overlay vlans VLAN-1001 vlan-id 1001
user@aggregation-device-1# set groups overlay vlans VLAN-1001 l3-interface irb.1001
user@aggregation-device-1# set groups overlay vlans VLAN-1001 vxlan vni 1001
user@aggregation-device-1# set groups overlay vlans VLAN-2001 vlan-id 2001
user@aggregation-device-1# set groups overlay vlans VLAN-2001 l3-interface irb.2001
user@aggregation-device-1# set groups overlay vlans VLAN-2001 vxlan vni 2001
user@aggregation-device-1# set groups overlay vlans VLAN-3001 vlan-id 3001
user@aggregation-device-1# set groups overlay vlans VLAN-3001 l3-interface irb.3001
user@aggregation-device-1# set groups overlay vlans VLAN-3001 vxlan vni 3001
user@aggregation-device-1# set groups overlay vlans VLAN-1002 vlan-id 1002
user@aggregation-device-1# set groups overlay vlans VLAN-1002 l3-interface irb.1002
user@aggregation-device-1# set groups overlay vlans VLAN-1002 vxlan vni 1002
user@aggregation-device-1# set groups overlay vlans VLAN-2002 vlan-id 2002
user@aggregation-device-1# set groups overlay vlans VLAN-2002 l3-interface irb.2002
user@aggregation-device-1# set groups overlay vlans VLAN-2002 vxlan vni 2002
user@aggregation-device-1# set groups overlay vlans VLAN-3002 vlan-id 3002
user@aggregation-device-1# set groups overlay vlans VLAN-3002 l3-interface irb.3002
user@aggregation-device-1# set groups overlay vlans VLAN-3002 vxlan vni 3002

```

- b. Configure the extended ports.

In this sample configuration, extended ports 201/0/1 and 201/0/2 are both mapped to aggregated Ethernet interface ae2, on which a trunk port is established and VLANs 1001-1320, 2001-2320, and 3001-3320 are enabled.

```

[edit]
user@aggregation-device-1# set groups overlay chassis aggregated-devices ethernet
device-count 350
user@aggregation-device-1# set groups overlay interfaces xe-204/0/1 ether-options
802.3ad ae2
user@aggregation-device-1# set groups overlay interfaces xe-204/0/2 ether-options
802.3ad ae2
user@aggregation-device-1# set groups overlay interfaces ae2 mtu 9000
user@aggregation-device-1# set groups overlay interfaces ae2 aggregated-ether-options
lACP active

```

```

user@aggregation-device-1# set groups overlay interfaces ae2 aggregated-ether-options
lacp periodic fast
user@aggregation-device-1# set groups overlay interfaces ae2 unit 0 family
ethernet-switching interface-mode trunk
user@aggregation-device-1# set groups overlay interfaces ae2 unit 0 family
ethernet-switching vlan members 1001-1320
user@aggregation-device-1# set groups overlay interfaces ae2 unit 0 family
ethernet-switching vlan members 2001-2320
user@aggregation-device-1# set groups overlay interfaces ae2 unit 0 family
ethernet-switching vlan members 3001-3320

```



**NOTE:** On aggregated Ethernet interface ae0, the MTU is set to 9000 bytes to accommodate the transmission of E-channel tag (ETAG) headers, which are included in data packets exchanged between aggregation devices and satellite devices.

c. Configure the routing instances.

This sample configuration creates a virtual routing instance and includes IRB and loopback interfaces and OSPF area 0.0.0.0. An EBGp group is also created and included in the routing instance.

```

[edit]
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
instance-type virtual-router
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
interface irb.logical-unit-identifier
...
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
interface lo0.logical-unit-identifier
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
protocols bgp group external-peers type external
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
protocols bgp group external-peers export send-direct
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
protocols bgp group external-peers local-as autonomous-system-number
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
protocols bgp group external-peers multipath
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
protocols bgp group external-peers bfd-liveness-detection minimum-interval milliseconds
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
protocols bgp group external-peers bfd-liveness-detection multiplier number
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
protocols bgp group external-peers neighbor ip-address peer-as
autonomous-system-number
...
user@aggregation-device-1# set groups overlay routing-instances routing-instance-name
protocols ospf area area-number interface lo0.logical-unit-identifier

```

For example:

```

[edit]
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 instance-type
virtual-router

```

```

user@aggregation-device-1# set groups overlay routing-instances VRF-T1 interface
irb.1001
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 interface
irb.2001
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 interface
irb.3001
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 interface
irb.1002
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 interface
irb.2002
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 interface
irb.3002
...
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 interface
lo0.32
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 protocols
bgp group external-peers type external
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 protocols
bgp group external-peers export send-direct
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 protocols
bgp group external-peers local-as 64500
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 protocols
bgp group external-peers multipath
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 protocols
bgp group external-peers bfd-liveness-detection minimum-interval 1000
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 protocols
bgp group external-peers bfd-liveness-detection multiplier 3
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 protocols
bgp group external-peers neighbor 172.0.0.254 peer-as 64501
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 protocols
bgp group external-peers neighbor 172.0.0.253 peer-as 64502
user@aggregation-device-1# set groups overlay routing-instances VRF-T1 protocols
ospf area 0.0.0.0 interface lo0.32

```

9. Configure switch options to set a route distinguisher and VRF target, and to associate the loopback interface (lo0) with the aggregation device.

```

[edit switch-options]
user@aggregation-device-1# set vtep-source-interface lo0.logical-unit-identifier
user@aggregation-device-1# set route-distinguisher (as-number:id | ip-address:id)
user@aggregation-device-1# set vrf-target community-name

```

For example:

```

[edit switch-options]
user@aggregation-device-1# set vtep-source-interface lo0.0
user@aggregation-device-1# set route-distinguisher 127.1.1.1
user@aggregation-device-1# set vrf-target target:100:1

```

10. Configure EVPN, and specify VXLAN as the data plane encapsulation method.

```

[edit protocols evpn]
user@aggregation-device-1# set encapsulation vxlan
user@aggregation-device-1# set multicast-mode ingress-replication
user@aggregation-device-1# set default-gateway no-gateway-community
user@aggregation-device-1# set extended-vni-list all

```

## Installing Satellite Software and Adding Satellite Devices to the Junos Fusion

Use this procedure to install satellite software onto a satellite device. A satellite device is not active in a Junos Fusion until satellite software is installed.

Before you begin:

- Ensure you have prepared your satellite device, as described in the “Preparing a Switch Running Junos OS to Become a Satellite Device” section.
- Complete the other steps in this document—created cascade ports, associated FPC slot IDs with satellite devices, and created the satellite software upgrade groups—to ensure the satellite software can be successfully installed.
- Expand the size of the /user disk partition on each Routing Engine in each aggregation device by issuing the `request system storage user-disk expand` command. The system will reboot to complete the operation.



**NOTE:** A QFX10002 switch supports one Routing Engine, and the QFX10008 and QFX10016 switches support two Routing Engines.

To install satellite software onto a satellite device and add it to the Junos Fusion Data Center.

1. Decide how satellite software will be installed onto the satellite devices:
  - Autoconversion (Recommended)—Satellite software is installed onto satellite device automatically when it is cabled to the aggregation device.
  - Manual conversion—Satellite software is installed when user enters a CLI command from aggregation device to install satellite software.
  - Pre-installation—Satellite software is installed on satellite device before the satellite device is cabled into the Junos Fusion Data Center.
2. Install the satellite software, or configure how it will be installed:
  - To enable autoconversion for a satellite device, enter the following commands from an aggregation device:

```
[edit]
user@aggregation-device# set chassis satellite-management auto-satellite-conversion
satellite slot-id
user@aggregation-device# commit
```

For example, to automatically convert FPC 101 into a satellite device:

```
[edit]
user@aggregation-device# set chassis satellite-management auto-satellite-conversion
satellite 101
user@aggregation-device# commit
```

In this example, autoconversion installs the satellite software associated with FPC slot 101, which was defined in the satellite software upgrade group configuration.

The process to install the satellite software onto the satellite device with the specified FPC slot ID does not begin until the configuration is committed. In addition, the satellite device must meet the following conditions:

- Must run a Junos OS release that supports Junos Fusion Data Center.
- Must have factory-default settings or have autoconversion enabled.
- For an EX4300 switch that serves as a satellite device, the uplink port must not be a Virtual Chassis port (VCP).
- To manually install satellite software onto a satellite device, enter the following command from an aggregation device:

```
user@aggregation-device> request chassis satellite interface interface-name device-mode satellite
```

where *interface-name* is the cascade port interface on the aggregation device:

For example, to manually configure the switch that is connecting the satellite device to interface xe-0/0/1 on the aggregation device into a satellite device:

```
user@aggregation-device> request chassis satellite interface xe-0/0/1 device-mode satellite
```

- To pre-install software onto a satellite device before connecting it into the Junos Fusion Data Center:
  - a. Copy a version of satellite software onto the satellite device running Junos OS.  
For EX4300 switches, you must install a PPC satellite software image in order to pre-install satellite software.

Satellite software images can be downloaded from the [Junos Fusion software download page](#).

- b. Enter the following command from the satellite device:

```
user@satellite-device> request chassis device-mode satellite URL-to-satellite-software
```

For instance, to install the satellite software package **satellite-ppc-3.4R2.0-signed.tgz** stored in the **/var/tmp/** folder on an EX4300 switch:

```
user@satellite-device> request chassis device-mode satellite /var/tmp/satellite-ppc-3.4R2.0-signed.tgz
```

- c. Cable the satellite device directly to the aggregation device.



**NOTE:** The satellite device version is compared against the satellite device version associated with the software upgrade group upon insertion into the Junos Fusion. If the satellite device is running a version of satellite software that is different than it's associated satellite software upgrade group, the satellite software upgrade group installs the satellite software associated with the satellite software upgrade group onto the satellite device.

#### Related Documentation

- [Junos Fusion Hardware and Software Compatibility Matrices](#)
- [Understanding Junos Fusion Data Center Software and Hardware Requirements](#)
- [Verifying Connectivity, Device States, Satellite Software Versions, and Operations in a Junos Fusion on page 111](#)
- [Verifying EVPN Operations in a Junos Fusion Data Center on page 122](#)
- [Understanding Junos Fusion Data Center Components on page 6](#)
- [Understanding Software in a Junos Fusion Data Center on page 17](#)

## Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion

This topic shows how to configure the alarm levels for link-down events on a satellite device in a Junos Fusion.

To configure system alarm handling in a Junos Fusion using an environment monitoring satellite policy:

1. Log in to the aggregation device.
2. Create and name the environment monitoring satellite policy:

```
[edit]
user@aggregation-device# set policy-options satellite-policies
environment-monitoring-policy policy-name
```

For example, to create an environment monitoring satellite policy named **linkdown-alarm-monitoring-1**:

```
[edit]
user@aggregation-device# set policy-options satellite-policies
environment-monitoring-policy linkdown-alarm-monitoring-1
```

3. Configure the link-down alarm behavior for the Junos Fusion using one or both of the following methods:

- Set the default link-down alarm to one setting whenever it is experienced in a Junos Fusion:

```
[edit policy-options satellite-policies environment-monitoring-policy  
policy-name]  
user@aggregation-device# set alarm linkdown [ignore | red | yellow]
```

For example, to set the default link-down alarm to ignore for **linkdown-alarm-monitoring-1**:

```
[edit policy-options satellite-policies environment-monitoring-policy  
linkdown-alarm-monitoring-1]  
user@aggregation-device# set alarm linkdown ignore
```

- Set the link-down alarm behavior for a specific satellite device hardware model using terms:

```
[edit policy-options satellite-policies environment-monitoring-policy  
policy-name]  
user@aggregation-device# set term term-name from product-model model-name alarm  
linkdown [ignore | red | yellow]
```

where *term-name* is the user-defined name of the term, and *model-name* defines the product model of the satellite device that uses the satellite policy.

You can apply environment monitoring satellite policies individually or globally. You can, therefore, create multiple policies using the instructions in this step and apply them to different satellite devices in your Junos Fusion, when needed.

You can use multiple terms in the same environment monitoring satellite policy.

For example, if you wanted to configure EX4300 switches acting as satellite devices to send yellow alarms when link-down errors occur while QFX5100 switches acting as satellite devices send red alarms for the same condition:

```
[edit policy-options satellite-policies environment-monitoring-policy  
linkdown-alarm-monitoring-1]  
user@aggregation-device# set term ex4300-yellow from product-model EX4300* alarm  
linkdown yellow  
user@aggregation-device# set term qfx5100-red from product-model QFX5100* alarm  
linkdown red
```

4. Associate the environment monitoring satellite policy with a Junos Fusion configuration.
  - To associate an environment monitoring satellite policy for all satellite devices in a Junos Fusion:

```
[edit chassis satellite-management]  
user@aggregation-device# set environment-monitoring-policy policy-name
```

For example, to associate an environment monitoring satellite policy named **linkdown-alarm-monitoring-1** for all satellite devices in a Junos Fusion:

```
[edit chassis satellite-management]  
user@aggregation-device# set environment-monitoring-policy  
linkdown-alarm-monitoring-1
```



- To associate an environment monitoring satellite policy for select FPC IDs in a Junos Fusion:

```
[edit chassis satellite-management fpc slot-id]  
user@aggregation-device# set environment-monitoring-policy policy-name
```

For example, to associate an environment monitoring satellite policy named **linkdown-alarm-monitoring-1** for the satellite device associated with FPC ID 101 in a Junos Fusion:

```
[edit chassis satellite-management fpc 101]  
user@aggregation-device# set environment-monitoring-policy  
linkdown-alarm-monitoring-1
```

You can configure a different environment monitoring policy for a single satellite device using the **fpc slot-id** when an environment monitoring policy for all satellite devices is configured. The environment monitoring policy for the FPC is enabled in cases when both an individual and global environment monitoring policy are configured.

5. Commit the configuration to both Routing Engines:

```
[edit]  
user@aggregation-device# commit synchronize
```

If you want to commit the configuration to the active Routing Engine only:

```
[edit]  
user@aggregation-device# commit
```

#### Related Documentation

- *Configuring Junos Fusion Provider Edge*
- *Configuring or Expanding a Junos Fusion Enterprise*



## CHAPTER 3

# Junos Fusion Data Center Configuration Statements

- [aging-timer \(Junos Fusion\) on page 78](#)
- [alarm \(Satellite Policies\) on page 79](#)
- [alias \(Junos Fusion\) on page 80](#)
- [auto-satellite-conversion \(Junos Fusion\) on page 81](#)
- [cascade-port on page 82](#)
- [cascade-ports on page 83](#)
- [description \(Junos Fusion\) on page 84](#)
- [designated-event-forwarding \(Junos Fusion\) on page 85](#)
- [dual-dr on page 86](#)
- [environment-monitoring-policy \(satellite-management\) on page 88](#)
- [environment-monitoring-policy \(satellite-policies\) on page 89](#)
- [fpc \(Junos Fusion\) on page 90](#)
- [linkdown \(satellite-policies alarm\) on page 91](#)
- [peers-synchronize on page 92](#)
- [redundancy-groups \(Junos Fusion\) on page 93](#)
- [satellite \(Junos Fusion Automatic Satellite Conversion\) on page 95](#)
- [satellite \(Junos Fusion Satellite Device Homing\) on page 96](#)
- [satellite \(Junos Fusion Satellite Software Upgrade Groups\) on page 97](#)
- [satellite-management \(Junos Fusion\) on page 98](#)
- [serial-number \(Junos Fusion\) on page 100](#)
- [single-home \(Junos Fusion\) on page 101](#)
- [system-id \(Junos Fusion\) on page 102](#)
- [upgrade-groups \(Junos Fusion\) on page 104](#)

## aging-timer (Junos Fusion)

---

<b>Syntax</b>	<code>aging-timer <i>aging-timer</i>;</code>
<b>Hierarchy Level</b>	<code>[edit chassis <a href="#">satellite-management</a>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Configure the aging timer on the aggregation device in a Junos Fusion.</p> <p>The aging timer is used on the aggregation device to specify the amount of time, in minutes, to maintain the device state of an unreachable satellite device before deleting the satellite device from the Junos Fusion.</p> <p>If the unreachable satellite device is discovered before the aging timer expires, the satellite device is reactivated in the Junos Fusion without having to restore its device state.</p>
<b>Default</b>	The default aging time is 10 minutes.
<b>Options</b>	The remaining statements are explained separately. <b>Range:</b> 2 through 60,000 minutes
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li><li>• <i>Configuring Junos Fusion Provider Edge</i></li></ul>

## alarm (Satellite Policies)

<b>Syntax</b>	<pre>alarm {   linkdown [ignore   red   yellow] }</pre>
<b>Hierarchy Level</b>	[edit policy-options <a href="#">satellite-policies</a> <a href="#">environment-monitoring-policy</a> <i>policy-name</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	Configure the link down alarm that is sent within the Junos Fusion whenever a satellite device experiences a link-down error.
<b>Default</b>	Link-down alarms are not sent on satellite devices in a Junos Fusion until an environment monitoring policy is configured.
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 73</a></li> <li>• <a href="#">Understanding Satellite Policies in a Junos Fusion on page 36</a></li> </ul>

## alias (Junos Fusion)

---

Syntax	<code>alias <i>alias</i>;</code>
Hierarchy Level	[edit chassis <b>satellite-management</b> fpc <i>slot-id</i> ]
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Configure an alias to label a satellite device.</p> <p>Satellite device alias configuration is optional, but recommended. In a Junos Fusion, satellite device aliases assist with administration tasks, such as monitoring satellite devices using <b>show</b> command outputs, as well as with some configuration tasks that provide an option to identify a satellite device by its alias.</p>
Default	Satellite devices are not assigned an alias, by default.
Options	<b>alias</b> —The user-defined text name of the alias.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li><li>• <i>Configuring Junos Fusion Provider Edge</i></li></ul>

## auto-satellite-conversion (Junos Fusion)

<b>Syntax</b>	<pre>auto-satellite-conversion {   satellite [slot-id   range   all]; }</pre>
<b>Hierarchy Level</b>	[edit chassis <b>satellite-management</b> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Enable automatic satellite conversion in a Junos Fusion.</p> <p>Automatic satellite conversion automatically configures a switch into a satellite device when it is cabled into the aggregation device.</p> <p>Additional configuration steps are required to add satellite devices to a Junos Fusion using automatic satellite conversion. See <i>Configuring Junos Fusion Provider Edge</i> or <i>Configuring or Expanding a Junos Fusion Enterprise</i>.</p>
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> </ul>

## **cascade-port**

---

<b>Syntax</b>	<code>cascade-port;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Configure the specified interface on the aggregation device in a Junos Fusion into a cascade port.</p> <p>Additional configuration is required to configure cascade ports on a Junos Fusion. See <i>Configuring Junos Fusion Provider Edge</i> or <i>Configuring or Expanding a Junos Fusion Enterprise</i>.</p>
<b>Default</b>	No interfaces are cascade ports, by default.
<b>Options</b>	<i>interface-name</i> —Specifies the name of the interface.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li><li>• <i>Configuring Junos Fusion Provider Edge</i></li></ul>



## cascade-ports

<b>Syntax</b>	<code>cascade-ports <i>interface-name</i>;</code>
<b>Hierarchy Level</b>	[edit chassis <b>satellite-management</b> <b>fpc</b> <i>slot-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Associate a cascade port with an FPC slot ID number in a Junos Fusion.</p> <p>The FPC slot ID of the satellite device is determined by the value entered as the FPC <i>slot-id</i>. For instance, if the <b>set chassis satellite-management fpc 105 cascade-ports xe-0/0/1</b> statement is used to configure interface xe-0/0/1 into a cascade port, the satellite device that connects to interface xe-0/0/1 has an FPC slot ID of 105 in the Junos Fusion.</p> <p>A Junos Fusion provides two methods of assigning an FPC identifier: Unique ID-based FPC identification and connectivity-based FPC identification. Unique ID-based FPC identification maps an FPC slot ID to a satellite device's MAC address or serial number, while connectivity-based FPC identification maps an FPC slot ID to a cascade port. This statement is used to assign an FPC ID using connectivity-based FPC identification by mapping an FPC slot ID to a cascade port.</p> <p>In a Junos Fusion, each satellite device must be mapped to an FPC identifier (FPC ID). The FPC ID is used for Junos Fusion configuration, monitoring, and maintenance. Interface names—which are identified using the <i>type-fpc / pic / port</i> format—use the FPC ID as the <i>fpc</i> variable when the satellite device is participating in a Junos Fusion. For instance, built-in port 2—a Gigabit Ethernet interface on a satellite device that is using 101 as its FPC ID—uses ge-101/0/2 as its interface name.</p> <p>For additional information on the role of FPC slot IDs in a Junos Fusion, see <i>Understanding Junos Fusion Provider Edge Components</i> or <i>Understanding Junos Fusion Enterprise Components</i>.</p>
<b>Default</b>	No FPC slot IDs are associated with satellite devices, by default.
<b>Options</b>	<b><i>interface-name</i></b> —Specifies the name of the interface.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li><i>Configuring Junos Fusion Provider Edge</i></li> </ul>

## description (Junos Fusion)

---

<b>Syntax</b>	<code>description <i>description</i>;</code>
<b>Hierarchy Level</b>	[edit chassis <a href="#">satellite-management fpc slot-id</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Configure a description for the satellite device.  The description is optional and used for information purposes only.
<b>Default</b>	Satellite devices do not have descriptions, by default.
<b>Options</b>	<b><i>description</i></b> —A text description of the satellite device.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Junos Fusion Provider Edge</i></li><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li></ul>

## designated-event-forwarding (Junos Fusion)

<b>Syntax</b>	<code>designated-event-forwarding;</code>
<b>Hierarchy Level</b>	<code>[edit chassis <a href="#">satellite-management</a>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 18.1R2-S2 for Junos Fusion Data Center.
<b>Description</b>	Use this command to prevent an SNMP trap from being generated from each aggregation device in an EVPN Junos Fusion. When you enable <b>designated-event-forwarding</b> , an SNMP trap request is only sent by the aggregation device selected as the designated router.
<b>Default</b>	Designated event forwarding is disabled.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Understanding Designated Event Forwarding of SNMP Traps in an EVPN Junos Fusion Data Center on page 34</a></li><li>• <a href="#">Understanding EVPN in a Junos Fusion Data Center on page 26</a></li></ul>

## dual-dr

<b>Syntax</b>	<pre>dual-dr {   enhanced; }</pre>
<b>Hierarchy Level</b>	<pre>[edit dynamic-profiles <i>name</i> protocols pim interface <i>interface-name</i>], [edit logical-systems <i>name</i> protocols pim interface <i>interface-name</i>], [edit logical-systems <i>name</i> routing-instances <i>name</i> protocols pim interface <i>interface-name</i>], [edit protocols pim interface <i>interface-name</i>] [edit routing-instances <i>name</i> protocols pim interface <i>interface-name</i>]</pre>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 13.2X51 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 16.1 for the MX Series.</p> <p>Statement with <b>enhanced</b> option introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Enable PIM dual designated router mode for a pair of Multichassis Link Aggregation Group (MC-LAG) peers managing VLAN multicast traffic and Layer 3 multicast traffic over IRB interfaces.</p> <p>PIM dual designated router mode sets up one device in a pair of MC-LAG peers as a primary designated router (DR) and the other device as a standby or backup DR for redundancy in managing multicast packet forwarding. Both devices join the multicast forwarding tree and receive multicast traffic. If the primary device fails, the standby quickly takes over forwarding multicast packets with minimal traffic disruption.</p> <p>In the default or backwards-compatible dual designated router mode (no <b>enhanced</b> option specified), both DRs forward packets for a short time while negotiating which device will forward the multicast traffic. After PIM forwarder negotiation, only one device continues to forward traffic. If the primary DR fails, the standby can take over forwarding multicast packets upon detecting the failure. When the primary DR comes back online and is receiving multicast traffic again, it resumes forwarding and invokes PIM forwarder negotiation again to reduce duplicate packet load.</p> <p>In enhanced dual designated router mode (<b>enhanced</b> option specified), both the primary and standby DRs receive multicast traffic, but only the primary DR forwards the packets, skipping PIM forwarder negotiation. Upon primary DR failure, the standby takes over forwarding immediately, and also switches to primary role. When the prior primary DR comes back online, it assumes the standby role, receiving but not forwarding multicast traffic. The new primary DR continues forwarding multicast packets without any traffic interruption, and again no duplicate packet traffic is generated.</p> <p>If you want to enable dual designated router mode, we recommend using the <b>enhanced</b> option, if available, to achieve optimal convergence time in resuming multicast traffic flow both when a DR fails and when it comes back online again.</p>

<b>Options</b>	<b>None</b> —Enable default dual designated router mode (available for backwards compatibility).
	<b>enhanced</b> —Enable enhanced PIM dual designated router mode (recommended if available).
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Understanding Layer 3 Multicast Convergence Enhancements for Dual Aggregation Devices in Junos Fusion Data Center with MC-LAG on page 997</a></li><li>• <i>Understanding Multichassis Link Aggregation Groups</i></li></ul>

## environment-monitoring-policy (satellite-management)

Syntax	<code>environment-monitoring-policy <i>policy-name</i>;</code>
Hierarchy Level	<code>[edit chassis <a href="#">satellite-management</a>]</code> <code>[edit chassis <a href="#">satellite-management</a> <a href="#">fpc slot-id</a>]</code>
Release Information	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Enable an environment monitoring policy in a Junos Fusion.</p> <p>You configure environment monitoring policies for a Junos Fusion in the <code>[edit policy-options environment-monitoring-policy <i>policy-name</i>]</code> hierarchy.</p> <p>You can configure an environment monitoring policy in a Junos Fusion for a single satellite device using the <b><i>fpc slot-id</i></b> option, or for all satellite devices in the Junos Fusion by not specifying the <b><i>fpc slot-id</i></b> option.</p> <p>You can configure a different environment monitoring policy for a single satellite device using the <b><i>fpc slot-id</i></b> when an environment monitoring policy for all satellite devices is configured. The environment monitoring policy for the FPC is enabled in cases when both an individual and global environment monitoring policy are configured.</p>
Default	<p>No environment monitoring policies for the Junos Fusion are present.</p> <p>If you enable an environment monitoring policy in a Junos Fusion without specifying the <b><i>fpc slot-id</i></b> option, the environment monitoring policy is applied for all satellite devices in the Junos Fusion.</p>
Options	<p><b><i>policy-name</i></b>—Specifies the name of the environment monitoring policy.</p> <p>The <i>policy-name</i> name is defined as part of the environment monitoring policy configuration procedure, which is handled in the <code>[edit policy-options environment-monitoring-policy <i>policy-name</i>]</code> hierarchy.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li><a href="#">Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 73</a></li> <li><a href="#">Understanding Satellite Policies in a Junos Fusion on page 36</a></li> </ul>

## environment-monitoring-policy (satellite-policies)

<b>Syntax</b>	<pre>environment-monitoring-policy <i>policy-name</i>{   alarm {     linkdown [ignore   red   yellow]   }   term <i>term-name</i>{     from {       product-model <i>model-name</i>;     }   } }</pre>
<b>Hierarchy Level</b>	[edit policy-options satellite-policies]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Configure an environment monitoring satellite policy for a device or devices in a Junos Fusion.</p> <p>An environment monitoring satellite policy is used to configure alarm behavior on satellite devices in a Junos Fusion.</p> <p>The environment monitoring policy is applied to a Junos Fusion using the <a href="#">environment-monitoring-policy</a> statement in the [edit <i>chassis</i> <a href="#">satellite-management</a>] or [edit <i>chassis</i> <a href="#">satellite-management fpc slot-id</a>] hierarchy levels.</p>
<b>Options</b>	<p><b><i>policy-name</i></b>—Specifies the user-defined name of the environment monitoring policy.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 73</a></li> <li>• <a href="#">Understanding Satellite Policies in a Junos Fusion on page 36</a></li> </ul>

## fpc (Junos Fusion)

Syntax	<pre>fpc slot-id{   alias alias;   cascade-ports interface-name;   description description;   environment-monitoring-policy policy;   serial-number serial-number;   system-id mac-address;   uplink-failure-detection {     candidate-uplink-policy policy;   }   local switching;   selective-vlan-switching{     routing-instance routing-instance;   } }</pre>
Hierarchy Level	[edit chassis <a href="#">satellite-management</a> ]
Release Information	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p> <p><b>local-switching</b> and <b>selective-vlan-switching</b> introduced in Junos OS Release 17.2R1 for Junos Fusion Provider Edge.</p>
Description	Configure an FPC identifier for a satellite device within a Junos Fusion, or modify the configuration of an existing satellite device in a Junos Fusion.
Options	<p><b>slot-id</b>—Specifies the FPC identifier of the device and functions as the FPC identifier in the interface name when configuring satellite device interfaces.</p> <p>In a Junos Fusion Data Center, the <i>slot-id</i> must have a value in the range of 65 to 254.</p> <p>In a Junos Fusion Enterprise or Junos Fusion Provider Edge, the <i>slot-id</i> must have a value of 34 or greater.</p> <p><b>local switching</b>—Enables local-switching for all the ports on the satellite device.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li><i>Configuring Junos Fusion Provider Edge</i></li> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>



## linkdown (satellite-policies alarm)

<b>Syntax</b>	linkdown [ignore   red   yellow]
<b>Hierarchy Level</b>	[edit policy-options <a href="#">satellite-policies</a> <a href="#">environment-monitoring-policy</a> <i>policy-name</i> <a href="#">alarm</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Configure the alarm behavior when an Ethernet link goes down on a satellite device in a Junos Fusion.  The configured alarm behavior can be applied to any satellite device in the Junos Fusion. The alarm behavior is applied to satellite devices using environment monitoring policies.
<b>Options</b>	<b>ignore</b> —Do not signal an alarm when an Ethernet link-down event occurs.  <b>red</b> —Raise a major alarm when an Ethernet link-down event occurs.  <b>yellow</b> —Raise a minor alarm when an Ethernet link-down event occurs.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 73</a></li> <li>• <a href="#">Understanding Satellite Policies in a Junos Fusion on page 36</a></li> </ul>

## peers-synchronize

---

Syntax	peers-synchronize;
Hierarchy Level	[edit system commit]
Release Information	Statement introduced in Junos OS Release 14.2R6 for the MX Series and Junos Fusion. Statement introduced in Junos OS Release 15.1X53-D60 for the QFX Series. Statement introduced in Junos OS Release 16.1R1 for the EX Series.
Description	Configure the <b>commit</b> command to automatically perform a <b>peers-synchronize</b> action between peers. The local peer (or requesting peer) on which you enable the <b>peers-synchronize</b> statement copies and loads its configuration to the remote (or responding) peer. Each peer then performs a syntax check on the configuration file being committed. If no errors are found, the configuration is activated and becomes the current operational configuration on both peers.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>delta-export</i></li><li>• <i>fast-synchronize</i></li><li>• <i>persist-groups-inheritance</i></li><li>• <i>server</i></li><li>• <i>synchronize</i></li></ul>

## redundancy-groups (Junos Fusion)

**Syntax**

```

redundancy-groups {
  chassis-id number;
  redundancy-group-name {
    redundancy-group-id redundancy-group-id-number;
    protocol {
      evpn {
        peer-ip [ IP address ]
      }
    }
  }
  peer-chassis-id peer-chassis-id-number {
    inter-chassis-link interface-name;
    authentication-key string;
    liveness-detection {
      detection-time {
        threshold milliseconds;
      }
    }
    minimum-interval milliseconds;
    minimum-receive-interval milliseconds;
    multiplier number;
    no-adaptation;
    transmit-interval {
      minimum-interval milliseconds;
      threshold milliseconds;
    }
    version (1 | automatic);
  }
  session-establishment-hold-time seconds;
  traceoptions;
}
no-auto-iccp-provisioning;
no-auto-vlan-provisioning;
satellite satellite-device-fpc-IDs;
}

```

**Hierarchy Level** [edit chassis [satellite-management](#)]

**Release Information** Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

**Description** Configure a redundancy group for Junos Fusion. A Junos Fusion topology supports one redundancy group that includes up to four devices—the aggregation devices—while also including a configuration parameter that allows users to specify that the satellite devices also belong to the redundancy group.

In a Junos Fusion with MC-LAG, a redundancy group is required to enable ICCP. ICCP is automatically provisioned on the interchassis link, but you can manually configure the

ICCP parameters. Any ICCP parameter you configure overrides the default settings. You can also disable automatic ICCP provisioning.

In Junos Fusion Data Center with EVPN, a redundancy group configuration enables the EVPN protocol. ICCP configuration is not required when configuring Junos Fusion with EVPN.

**Options**     The remaining statements are explained separately.

**Required Privilege Level**     admin—To view this statement in the configuration.  
   admin-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring or Expanding a Junos Fusion Enterprise*
- *Configuring Junos Fusion Provider Edge*
- [Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link on page 887](#)

## satellite (Junos Fusion Automatic Satellite Conversion)

<b>Syntax</b>	<code>satellite [slot-id   range   all];</code>
<b>Hierarchy Level</b>	[edit chassis <a href="#">satellite-management auto-satellite-conversion</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Specify the interface to enable automatic software conversion in a Junos Fusion.</p> <p>The device that is cabled to the slot specified in this command is automatically converted into a satellite device.</p> <p>Additional configuration steps are required to add satellite devices to a Junos Fusion using automatic satellite conversion. See <i>Configuring or Expanding a Junos Fusion Enterprise</i> or <i>Configuring Junos Fusion Provider Edge</i>.</p>
<b>Options</b>	<p><b>slot-id</b>—Specifies the FPC slot identifier of the device that will be automatically converted into a satellite device.</p> <p>The FPC identifier must be mapped to a cascade port interface before this command is operational. See <i>Configuring or Expanding a Junos Fusion Enterprise</i> or <i>Configuring Junos Fusion Provider Edge</i>.</p> <p><b>range</b>—Specifies a range of FPC slot identifiers that will automatically be converted into satellite devices. For instance, to specify that FPC IDs 103, 104, and 105 should be automatically converted into satellite devices, enter a <i>range</i> of <b>103-105</b>.</p> <p><b>all</b>—Specifies that all FPC slot identifiers in the Junos Fusion will automatically be converted into satellite devices.</p>
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Junos Fusion Provider Edge</i></li> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## satellite (Junos Fusion Satellite Device Homing)

---

Syntax	<code>satellite [<i>slot-id</i>   <i>slot-id-range</i>   all];</code>
Hierarchy Level	[edit chassis <a href="#">satellite-management single-home</a> ]
Release Information	<p>Statement introduced in Junos OS Release 14.2R3.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Specify which satellite device links are single-homed to the aggregation device.</p> <p>You must enter this statement to configure a Junos Fusion when the aggregation device is running Junos OS Release 14.2R3 or 14.2R4. You are not required to enter this command when the aggregation device is running Junos OS Release 14.2R5 or later.</p>
Options	<p><b>slot-id</b>—Specifies that a link from a specified satellite device is single-homed to the aggregation device. The <i>slot-id</i> is the satellite device member number.</p> <p><b>slot-id-range</b>—Specifies that the links from a range of specified satellite devices are single-homed to the aggregation device. The <i>slot-id-range</i> includes the satellite device member numbers.</p> <p><b>all</b>—Specifies that all links from satellite devices are single-homed to the aggregation device.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"><li>• <i>Configuring Junos Fusion Provider Edge</i></li><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li></ul>

## satellite (Junos Fusion Satellite Software Upgrade Groups)

<b>Syntax</b>	<code>satellite [<i>slot-id</i>   <i>range</i>   <i>all</i>];</code>
<b>Hierarchy Level</b>	<code>[edit chassis <b>satellite-management upgrade-groups</b> <i>upgrade-group-name</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Specify the satellite device to add to the satellite software upgrade group.  This statement is entered on an aggregation device in a Junos Fusion. Software upgrade groups are configured and managed using the aggregation device.
<b>Options</b>	<p><b><i>slot-id</i></b>—Specifies the FPC slot identification number of the satellite device that is being added to the satellite software upgrade group.</p> <p><b><i>range</i></b>—Specifies a range of FPC slot identifiers to add to the satellite software upgrade group. For instance, to specify that FPC IDs 103, 104, and 105 should be automatically converted into satellite devices, enter a <i>range</i> of <b>103-105</b>.</p> <p><b><i>all</i></b>—Specifies that all FPC slot identifiers in the Junos Fusion are added to the satellite software upgrade group.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## satellite-management (Junos Fusion)

```
Syntax  satellite-management {
    aging-timer aging-timer;
    auto-satellite-conversion {
        satellite [slot-id | range | all];
    }
    cluster cluster-name{
        cascade-ports interface-name;
        cluster-id cluster-id-number;
        fpc slot-id{
            alias alias;
            description description;
            member-id member-id-number;
            system-id mac-address;
        }
    }
    designated-event-forwarding
    environment-monitoring-policy policy;
    firewall
        family family-name {
            filter filter-name {
                term term-name {
                    from {
                        match-conditions;
                    }
                    then {
                        action;
                        action-modifiers;
                    }
                }
            }
        }
    fpc slot-id{
        alias alias;
        cascade-ports interface-name;
        description description;
        environment-monitoring-policy policy;
        serial-number serial-number;
        system-id mac-address;
        uplink-failure-detection {
            candidate-uplink-policy policy;
        }
    }
    psu {
        redundancy {
            n-plus-n;
        }
    }
    redundancy-groups {
        chassis-id number;
        redundancy-group-name {
            redundancy-group-id redundancy-group-id-number;
        }
    }
}
```



```

peer-chassis-id peer-chassis-id-number {
  inter-chassis-link interface-name;
  no-auto-iccp-provisioning;
  no-auto-vlan-provisioning;
  satellite satellite-device-fpc-IDs;
}
}
single-home {
  satellite [slot-id | slot-id-range | all];
}
upgrade-groups upgrade-group-name {
  satellite [slot-id | range | all];
}
uplink-failure-detection {
  candidate-uplink-policy policy;
}
}

```

Hierarchy Level [edit chassis]

**Release Information** Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.  
Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.  
Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

**Description** Configure and manage a Junos Fusion.

If you enter the **delete chassis satellite-management** command to delete a Junos Fusion configuration, we recommend also rebooting the Routing Engines on your device to maximize device performance.



**NOTE:** In a Junos Fusion Data Center with EVPN wherein VXLAN encapsulation is used, firewall filters with next-interface or next-ip actions are not supported.

**Options** The remaining statements are explained separately.

**Required Privilege Level** admin—To view this statement in the configuration.  
admin-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring or Expanding a Junos Fusion Enterprise*
- *Configuring Junos Fusion Provider Edge*

## serial-number (Junos Fusion)

<b>Syntax</b>	<code>serial-number serial-number;</code>
<b>Hierarchy Level</b>	[edit chassis <a href="#">satellite-management</a> <a href="#">fpc slot-id</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Bind the specified FPC slot ID to a satellite device based on the serial number.</p> <p>A Junos Fusion provides two methods of assigning an FPC identifier: Unique ID-based FPC identification and connectivity-based FPC identification. Unique ID-based FPC identification maps an FPC slot ID to a satellite device's MAC address or serial number, while unique ID-based FPC identification maps an FPC slot ID to a cascade port. This statement is used to assign an FPC ID using unique ID-based FPC identification by mapping the FPC slot ID to the satellite device's serial number.</p> <p>In a Junos Fusion, each satellite device must be mapped to an FPC identifier (FPC ID). The FPC ID is used for Junos Fusion configuration, monitoring, and maintenance. Interface names—which are identified using the <i>type-fpc / pic / port</i> format—use the FPC ID as the <i>fpc</i> variable when the satellite device is participating in a Junos Fusion. For instance, built-in port 2—a Gigabit Ethernet interface on a satellite device that is using 101 as its FPC ID—uses ge-101/0/2 as its interface name.</p> <p>For additional information on the role of FPC slot IDs in a Junos Fusion, see <i>Understanding Junos Fusion Enterprise Components</i> or <i>Understanding Junos Fusion Provider Edge Components</i>.</p> <p>If the serial number that is configured using this statement does not match the serial number of the satellite device, the device is not converted into a satellite device.</p>
<b>Default</b>	No FPC slot IDs are associated with satellite devices, by default.
<b>Options</b>	<b><i>serial-number</i></b> —Specifies the serial number of the satellite device.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Junos Fusion Provider Edge</i></li> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## single-home (Junos Fusion)

<b>Syntax</b>	<pre>single-home {   satellite [slot-id  slot-id-range   all]; }</pre>
<b>Hierarchy Level</b>	[edit chassis <b>satellite-management</b> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	Specify that the links connecting the satellite device to the aggregation device are connected to the aggregation device only.
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## system-id (Junos Fusion)

Syntax	<code>system-id mac-address;</code>
Hierarchy Level	[edit chassis <b>satellite-management</b> <b>fpc slot-id</b> ]
Release Information	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Assign the specified FPC identifier to the satellite device based on the satellite device's MAC address.</p> <p>For instance, if you wanted the satellite device using MAC address <b>01:02:03:AA:BB:CC</b> to be assigned FPC identifier 101, enter the <b>set chassis satellite-management fpc 101 system-id 01:02:03:AA:BB:CC</b> statement.</p> <p>A Junos Fusion provides two methods of assigning an FPC identifier: Unique ID-based FPC identification and connectivity-based FPC identification. Unique ID-based FPC identification maps an FPC slot ID to a satellite device's MAC address or serial number, while connectivity-based FPC identification maps an FPC slot ID to a cascade port. This statement is used to assign an FPC ID using unique ID-based FPC identification by mapping the FPC slot ID to the satellite device's MAC address.</p> <p>In a Junos Fusion, each satellite device must be mapped to an FPC identifier (FPC ID). The FPC ID is used for Junos Fusion configuration, monitoring, and maintenance. Interface names—which are identified using the <i>type-fpc / pic / port</i> format—use the FPC ID as the <i>fpc</i> variable when the satellite device is participating in a Junos Fusion. For instance, built-in port 2—a gigabit Ethernet interface on a satellite device that is using 101 as its FPC ID—uses ge-101/0/2 as its interface name.</p> <p>For additional information on the role of FPC slot IDs in a Junos Fusion, see <i>Understanding Junos Fusion Provider Edge Components</i> or <i>Understanding Junos Fusion Enterprise Components</i>.</p> <p>If the serial number that is configured using this statement does not match the serial number of the satellite device, the device is not converted into a satellite device.</p> <p>If the MAC address that is configured using this statement does not match the MAC address of the satellite device, the device is not converted into a satellite device.</p>
Default	No FPC slot IDs are associated with satellite devices, by default.
Options	<b>mac-address</b> —Specifies the MAC address of the satellite device.

**Required Privilege** admin—To view this statement in the configuration.  
**Level** admin-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Junos Fusion Provider Edge*
- *Configuring or Expanding a Junos Fusion Enterprise*

## upgrade-groups (Junos Fusion)

<b>Syntax</b>	<pre>upgrade-groups <i>upgrade-group-name</i> {   <i>satellite</i> [<i>slot-id</i>   <i>range</i>   all]; }</pre>
<b>Hierarchy Level</b>	[edit chassis <i>satellite-management</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Create and name a satellite software upgrade group for a Junos Fusion, or specify an existing satellite software upgrade group to configure.</p> <p>A satellite software upgrade group is a group of satellite devices that are designated to upgrade to the same satellite software version using the same satellite software package. One Junos Fusion can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusions to avoid network downtimes during satellite software installations.</p> <p>The two most common methods of installing satellite software in a Junos Fusion—autoconverting a device into a satellite device when it is cabled into an aggregation device and manually converting a device that is cabled into an aggregation device into a satellite device—require a configured satellite software upgrade group.</p> <p>Software upgrade groups are configured and managed from the aggregation device.</p> <p>To associate a satellite software package with a satellite software upgrade group, use the <b>request system software add <i>package-name</i> upgrade-group <i>upgrade-group-name</i></b> command.</p> <p>This statement is entered on an aggregation device in a Junos Fusion. Software upgrade groups are configured and managed from the aggregation device.</p> <p>The software upgrade group configurations must match exactly—including the same <i>package-name</i> and <i>upgrade-group-name</i>—in every Junos Fusion with dual aggregation devices to avoid satellite device downtime.</p> <p>All satellite devices in a satellite device cluster are associated with a single satellite software upgrade group, which is automatically created when a satellite device cluster becomes part of a Junos Fusion. The satellite software upgrade group is named after the satellite device cluster name, and ensures that all satellite devices in the cluster run the same version of satellite software. See <i>Understanding Software in a Junos Fusion Enterprise</i> for additional information on software management for a satellite device cluster.</p>
<b>Default</b>	No satellite software upgrade groups are present, by default.

A satellite software upgrade group with the name of the satellite device cluster is created automatically when a satellite device cluster is created.

**Options**    *upgrade-group-name*—Specifies the user-defined name for the satellite software upgrade group.

The remaining statements are explained separately.

**Required Privilege Level**    admin—To view this statement in the configuration.  
   admin-control—To add this statement to the configuration.

**Related Documentation**    • *Configuring or Expanding a Junos Fusion Enterprise*  
   • *Configuring Junos Fusion Provider Edge*





## CHAPTER 4

# Junos Fusion Data Center Administration

- [Managing Satellite Software Upgrade Groups in a Junos Fusion on page 107](#)
- [Verifying Connectivity, Device States, Satellite Software Versions, and Operations in a Junos Fusion on page 111](#)
- [Verifying EVPN Operations in a Junos Fusion Data Center on page 122](#)
- [Converting a Satellite Device in a Junos Fusion to a Standalone Device on page 128](#)
- [Installing Junos OS Software on a Standalone Device Running Satellite Software on page 132](#)

### Managing Satellite Software Upgrade Groups in a Junos Fusion

---

This topic discusses maintaining satellite software upgrade groups in a Junos Fusion. For more information on the process for creating a satellite software upgrade group, see *Configuring Junos Fusion Provider Edge* or *Configuring or Expanding a Junos Fusion Enterprise*.

A satellite software upgrade group is a group of satellite devices that are designated to upgrade to the same satellite software version using the same satellite software package. One Junos Fusion can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusions to avoid network downtimes during satellite software installations.

When a satellite device is added to a Junos Fusion, the aggregation device checks if the satellite device is using an FPC ID that is included in a satellite software upgrade group. If the satellite device is using an FPC ID that is part of a satellite software upgrade group, the device upgrades its satellite software to the version of software associated with the satellite software upgrade group - unless it is already running the defined version.

When the satellite software package associated with an existing satellite software group is changed, the satellite software for all member satellite devices is upgraded using a throttled upgrade. The throttled upgrade ensures that the aggregation device is not overwhelmed with providing satellite software simultaneously to many satellite devices.

The two most common methods of installing satellite software—autoconverting a device into a satellite device when it is cabled into an aggregation device and manually converting a device that is cabled into an aggregation device into a satellite device—require a configured satellite software upgrade group.

Software upgrade groups are configured and managed from the aggregation device. All satellite devices in a satellite device cluster are part of the same software upgrade group, and a software upgrade group with the name of the satellite device cluster is automatically created when the satellite device cluster is created.

- [Creating a Satellite Software Upgrade Group on page 108](#)
- [Adding Satellite Devices to a Satellite Software Upgrade Group on page 108](#)
- [Removing a Satellite Device from a Satellite Software Upgrade Group on page 109](#)
- [Modifying the Satellite Software Used by a Satellite Software Upgrade Group on page 109](#)
- [Deleting Associated Satellite Software from a Satellite Software Upgrade Group on page 110](#)
- [Deleting Satellite Software on the Aggregation Device on page 111](#)

## Creating a Satellite Software Upgrade Group

If your satellite device is a member of a satellite device cluster, a satellite software upgrade group with the name of the satellite device cluster is automatically created when the satellite device cluster is created. This satellite software upgrade group must be used to manage the satellite software for all member satellite devices in the satellite device cluster.

For information on creating a satellite software upgrade group for a satellite device that is not part of a satellite device cluster, see *Configuring Junos Fusion Provider Edge* or *Configuring or Expanding a Junos Fusion Enterprise*.

## Adding Satellite Devices to a Satellite Software Upgrade Group

To add a satellite device to an existing satellite software upgrade group, enter the **set chassis satellite-management upgrade-groups *upgrade-group-name* satellite *slot-id-or-range*** command:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups
upgrade-group-name satellite slot-id-or-range
```

where *upgrade-group-name* is the name of the existing satellite software upgrade group, and the *slot-id-or-range* is the FPC slot ID or range of FPC slot IDs of the satellite devices that are being added to the upgrade group.

For example, to add FPC slot IDs 121, 122, and 123 to a satellite software upgrade group named **group1**:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups group1 satellite
121-123
```

Additionally, you can use the **all** statement as your *slot-id-or-range* to include all satellite devices in the Junos Fusion in the satellite software upgrade group.

For example, to add all satellite devices in the Junos Fusion to a satellite software upgrade group named **group1**:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups group1 satellite
all
```

## Removing a Satellite Device from a Satellite Software Upgrade Group

To remove a satellite device from an existing satellite software upgrade group, enter the **delete chassis satellite-management upgrade-groups *upgrade-group-name* satellite *slot-id-or-range*** statement to delete the statements that initially added the member satellite devices to the satellite software upgrade group.

```
[edit]
user@aggregation-device# delete chassis satellite-management upgrade-groups
upgrade-group-name satellite slot-id-or-range
```

where *upgrade-group-name* is the name of the existing satellite software upgrade group, and the *slot-id-or-range* is the FPC slot ID or range of FPC slot IDs of the satellite devices that are being added to the upgrade group.

In cases where you want to remove some FPC slot IDs that were configured within a range of FPC slot IDs, you might consider re-creating the satellite software group by first deleting it, then re-creating it. To delete the satellite software upgrade group:

```
[edit]
user@aggregation-device# delete chassis satellite-management upgrade-groups
upgrade-group-name
```

You can then re-create the satellite software upgrade group and add satellite devices using the **set chassis satellite-management upgrade-groups *upgrade-group-name* satellite *slot-id-or-range*** statement:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups
upgrade-group-name satellite slot-id-or-range
```

For more information on the satellite software upgrade group creation process, see *Configuring Junos Fusion Provider Edge* or *Configuring or Expanding a Junos Fusion Enterprise*.

## Modifying the Satellite Software Used by a Satellite Software Upgrade Group

To associate a new satellite software image with the software upgrade group:

Before you begin:

- Ensure that a satellite software package is downloaded to the location where you will use it to install the satellite software.

```
user@aggregation-device> request system software add package-name upgrade-group
upgrade-group-name
```



**NOTE:** A satellite software *upgrade-group-name* can be a user-configured upgrade group or the name of a satellite device cluster.

To associate a satellite software image named **satellite-2.0R1.2-signed.tgz** that is currently stored in the **/var/tmp/** directory from the aggregation device to the upgrade group named **group1**:

```
user@aggregation-device> request system software add /var/tmp/satellite-2.0R1.2-signed.tgz
upgrade-group group1
```

To associate a satellite software package that was previously installed on the aggregation device with a software upgrade group:

```
user@aggregation-device> request system software add version version upgrade-group group1
```

For instance:

```
user@aggregation-device> request system software add version 2.0R1.2 upgrade-group group1
```

The satellite software upgrade group is associated with the software package after either of these commands are entered.



**NOTE:** A satellite software upgrade group can be a user-configured upgrade group or the name of a satellite device cluster.

If the group was already associated with a satellite software upgrade group, the previous satellite software package associated with the software group remains the second option for updating satellite software for the satellite software upgrade group. You can disassociate any satellite software package from a satellite software upgrade group using the instructions in the next section.

## Deleting Associated Satellite Software from a Satellite Software Upgrade Group

This section describes how to delete a satellite software package association from a satellite software upgrade group.

This procedure is always optional. You can always update the satellite software associated with a satellite software upgrade group using the procedure in the previous section, without deleting the satellite software from the satellite software upgrade group.

When a new satellite software package is associated with a satellite software upgrade, the previous satellite software package remains associated with the upgrade group as a backup option. The satellite software upgrade group can be associated with up to two satellite software packages, so no other satellite software packages can be associated with the satellite software upgrade group.

This process disassociates the specified satellite software package from the list of potential packages used by a satellite software upgrade group. It is useful for maintenance

purposes only, like if you wanted to ensure a satellite software upgrade group was never associated with a specific satellite software package.

To disassociate a satellite software image from a satellite software upgrade group:

```
user@aggregation-device> request system software delete upgrade-group upgrade-group-name
```

where the *upgrade-group-name* is the name of the upgrade group that was assigned by the user.

For example, to delete the current satellite software image association to the upgrade group named **group1**:

```
user@aggregation-device> request system software delete upgrade-group group1
```

## Deleting Satellite Software on the Aggregation Device

This section describes how to remove a satellite software package from a Junos Fusion system. This will remove the software from the aggregation device as well as any association with any satellite software upgrade groups. This should be done when another satellite software version is available and will free up the space occupied by the software being removed.



**NOTE:** We recommend deleting satellite software that is not in use to free up space on a QFX10000 acting as an aggregation device.

```
user@aggregation-device> request system software delete version version
```

For example:

```
user@aggregation-device> request system software delete version 2.0R1.2
```

### Related Documentation

- [Configuring Junos Fusion Provider Edge](#)
- [Configuring or Expanding a Junos Fusion Enterprise](#)

## Verifying Connectivity, Device States, Satellite Software Versions, and Operations in a Junos Fusion

This topic provides information on common procedures to verify connectivity, device states, satellite software versions, and other operations in a Junos Fusion. It covers:

- [Verifying a Junos Fusion Configuration on page 112](#)
- [Verifying Basic Junos Fusion Connectivity on page 112](#)
- [Verifying the Satellite Device Hardware Model on page 114](#)
- [Verifying Cascade Port and Uplink Port State on page 114](#)
- [Verifying That a Cascade Port Recognizes a Satellite Device on page 117](#)
- [Verifying Extended Port Operation on page 119](#)

- [Verifying the Satellite Software Version on page 120](#)
- [Verifying the Devices and Software Used in a Satellite Software Upgrade Group on page 121](#)

## Verifying a Junos Fusion Configuration

**Purpose** Verify that a device is recognized as a satellite device by the aggregation device.

**Action** Enter the **show chassis satellite** command and review the output.



**NOTE:** On a Junos Fusion Data Center with a QFX10000 switch in the aggregation device role, the number of the FPC in the interface name of the cascade ports is always 0.

```
user@aggregation-device> show chassis satellite
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
qfx5100-24q-01	100	Online	xe-0/0/1 xe-1/3/0	online online	9/2
qfx5100-24q-02	101	Online	xe-0/0/2 xe-1/3/1	online online	20/10
qfx5100-24q-03	102	Online	xe-0/0/3 xe-1/3/2	online online	16/4
qfx5100-24q-04	103	Online	xe-0/0/4 xe-1/3/3	absent online	13/3
ex4300-01	109	Online	xe-1/0/1	online	49/2
ex4300-02	110	Online	xe-1/0/2	online	49/2

**Meaning** Use the output of **show chassis satellite** to confirm the following connections in a Junos Fusion:

- Whether a satellite device is recognized at all by the aggregation device. If the satellite device does not appear in the **show chassis satellite** output, then it is not recognized by the aggregation device as a satellite device.
- The state of a particular satellite device, via the **Device State** output.
- The state of the cascade port connection, via the **Cascade State** output.

## Verifying Basic Junos Fusion Connectivity

**Purpose** Verify that all satellite devices are recognized by the aggregation device, and that all cascade and extended ports are recognized.

**Action** Enter the **show chassis satellite** command on the aggregation device.



**NOTE:** On a Junos Fusion Data Center with a QFX10000 switch in the aggregation device role, the number of the FPC in the interface name of the cascade ports is always 0.

```
user@aggregation-device> show chassis satellite
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
qfx5100-24q-01	100	Online	xe-0/0/1 xe-1/3/0	online online	9/2
qfx5100-24q-02	101	Online	xe-0/0/2 xe-1/3/1	online online	20/12
qfx5100-24q-03	102	Online	xe-0/0/3 xe-1/3/2	online online	16/6
qfx5100-24q-04	103	Online	xe-0/0/4 xe-1/3/3	online online	16/4
qfx5100-24q-05	104	Online	xe-0/0/5 xe-1/3/4	online online	13/3
qfx5100-24q-06	105	Online	xe-0/0/6 xe-1/3/5	online online	24/15
qfx5100-24q-07	106	Online	xe-0/0/7 xe-1/3/6	online online	24/15
qfx5100-24q-08	107	Online	xe-0/0/8 xe-1/3/7	online online	21/12
ex4300-01	109	Online	xe-1/0/1	online	49/2
ex4300-02	110	Online	xe-1/0/2	online	49/2
ex4300-03	111	Online	xe-1/0/3	online	49/2
ex4300-04	112	Online	xe-1/0/4	online	49/11
ex4300-05	113	Online	xe-1/0/5	online	49/11
ex4300-06	114	Online	xe-1/0/6	online	49/11
ex4300-07	115	Online	xe-1/0/7	online	49/11
ex4300-08	116	Online	xe-1/1/0	online	49/11
ex4300-09	117	Online	xe-1/1/1	online	49/11
ex4300-10	118	Online	xe-1/1/2	online	49/11
ex4300-11	119	Online	xe-1/1/3	online	49/11
ex4300-12	120	Online	xe-1/1/4	online	49/11
ex4300-13	121	Online	xe-1/1/5	online	49/11
ex4300-14	122	Online	xe-1/1/6	online	49/11
ex4300-15	123	Online	xe-1/1/7	online	49/11
ex4300-16	124	Online	xe-1/2/1	online	49/11
ex4300-17	125	Online	xe-1/2/2	online	49/11
ex4300-18	126	Online	xe-1/2/3	online	49/2
ex4300-19	127	Online	xe-1/2/4	online	49/1
ex4300-20	128	Online	xe-1/2/5	online	49/1
ex4300-21	129	Online	xe-1/2/6	online	49/1
ex4300-22	130	Online	xe-1/2/7	online	49/1

**Meaning** The output confirms:

- Each listed satellite device—the satellite devices are listed by alias-name in the **Alias** column or by FPC slot ID in the **Slot** column—is recognized by the aggregation device, because the **Device State** output is **Online** for every listed satellite device.

- Each cascade port is operational, because **Port State** is **online** for every cascade port. The cascade port is the port on the aggregation device that connects to the satellite device.
- The number of available and active extended ports for each satellite device, using the **Extended Ports total** and **Extended Ports up** outputs. The number of extended ports varies by satellite devices, and in this output the total number of extended ports includes both network-facing extended ports as well as uplink ports.

## Verifying the Satellite Device Hardware Model

**Purpose** Verify the hardware model of each satellite device in the Junos Fusion.

**Action** Enter the **show chassis satellite terse** command on the aggregation device.

```
user@aggregation-device> show chassis satellite terse
```

Slot	Device		Extended Ports	
	State	Model	Total/Up	Version
101	Online	QFX5100-48S-6Q	7/6	3.0R1.0
102	Online	QFX5100-48S-6Q	7/6	3.0R1.0
103	Online	QFX5100-48S-6Q	6/4	3.0R1.0
104	Online	QFX5100-48S-6Q	14/14	3.0R1.0
105	Online	QFX5100-48S-6Q	18/18	3.0R1.0
106	Online	QFX5100-48S-6Q	17/16	3.0R1.0
107	Online	EX4300-48T	52/6	3.0R1.0
108	Online	EX4300-48T	52/13	3.0R1.0
109	Online	EX4300-48T	51/13	3.0R1.0
110	Online	EX4300-48T	51/14	3.0R1.0
111	Online	EX4300-48T	51/13	3.0R1.0
112	Online	EX4300-48T	51/12	3.0R1.0
113	Online	EX4300-48T	51/13	3.0R1.0
114	Online	QFX5100-24Q-2P	17/13	3.0R1.0

**Meaning** The output shows the device model of each satellite device in the **Device Model** output, which are listed by FPC slot identification number using the **Slot** output.

This command is also useful for verifying the version satellite software running on each satellite device, as the version is listed in the **Version** output.

## Verifying Cascade Port and Uplink Port State

**Purpose** Verify that the cascade port and uplink port interfaces are up.

**Action** Enter the **show chassis satellite interface** command:

```
user@aggregation-device> show chassis satellite interface
```

Interface	State	Type
-----------	-------	------



lo0	Up	Loopback
sd-101/0/0	Up	Satellite
sd-102/0/0	Up	Satellite
sd-103/0/0	Up	Satellite
sd-104/0/0	Up	Satellite
sd-105/0/0	Up	Satellite
sd-106/0/0	Up	Satellite
sd-107/0/0	Up	Satellite
sd-108/0/0	Up	Satellite
sd-109/0/0	Up	Satellite
sd-110/0/0	Up	Satellite
sd-111/0/0	Up	Satellite
sd-112/0/0	Up	Satellite
sd-113/0/0	Up	Satellite
sd-114/0/0	Up	Satellite
xe-0/0/1	Up	Cascade
xe-0/0/2	Up	Cascade
xe-0/0/3	Up	Cascade
xe-0/0/4	Up	Cascade
xe-0/0/5	Up	Cascade
xe-0/0/6	Up	Cascade
xe-0/0/7	Up	Cascade
xe-0/0/8	Up	Cascade
xe-0/0/9	Up	Cascade
xe-0/2/0	Up	Cascade
xe-0/2/1	Up	Cascade
xe-0/2/2	Up	Cascade
xe-0/2/3	Up	Cascade
xe-0/2/4	Up	Cascade
xe-0/2/5	Up	Cascade

xe-0/2/6	Up	Cascade
xe-0/2/7	Up	Cascade
xe-1/0/1	Up	Cascade
xe-1/0/2	Up	Cascade
xe-1/0/3	Up	Cascade
xe-1/2/1	Up	Cascade
xe-1/2/2	Up	Cascade
xe-1/2/3	Up	Cascade
xe-2/0/0	Up	Cascade
xe-2/0/1	Up	Cascade
xe-2/0/2	Up	Cascade
xe-2/0/3	Up	Cascade
xe-2/0/4	Up	Cascade
xe-2/0/5	Up	Cascade
xe-2/0/6	Up	Cascade
xe-2/0/7	Up	Cascade
xe-2/1/0	Up	Cascade
xe-2/1/1	Up	Cascade
xe-2/1/2	Up	Cascade
xe-2/1/3	Up	Cascade
xe-2/1/4	Up	Cascade
xe-2/1/5	Up	Cascade
xe-2/1/6	Up	Cascade
xe-2/1/7	Up	Cascade
xe-2/2/0	Up	Cascade
xe-2/2/1	Up	Cascade
xe-2/2/2	Up	Cascade
xe-2/2/3	Up	Cascade
xe-2/2/4	Up	Cascade
xe-2/2/5	Up	Cascade

xe-2/2/6	Up	Cascade
xe-2/2/7	Up	Cascade
xe-2/3/0	Up	Cascade
xe-2/3/3	Dn	Cascade
xe-2/3/4	Up	Cascade
xe-2/3/5	Up	Cascade
xe-2/3/6	Up	Cascade
xe-2/3/7	Up	Cascade

**Meaning** The output shows:

- Whether the recognized port is up or down, using the **State** column output. The **State** column output is **Up** when the interface is up and **Dn** when the interface is down.

## Verifying That a Cascade Port Recognizes a Satellite Device

**Purpose** Verify that a cascade port on an aggregation device recognizes a satellite device in the Junos Fusion. This procedure also provides a method of verifying the hardware and software information for each satellite device in the Junos Fusion.

**Action** Enter the **show chassis satellite neighbor** command:

```
user@aggregation-device> show chassis satellite neighbor
```

Interface	State	Port Info	System Name	Model	SW Version
xe-2/3/7	Init				
xe-2/3/6	Init				
xe-2/3/5	Init				
xe-2/3/4	Init				
xe-2/3/3	Dn				
xe-2/3/0	Two-Way	xe-0/2/2	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/7	Two-Way	xe-0/2/2	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/6	Two-Way	xe-0/2/2	ex4300-27	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/5	Two-Way	xe-0/2/2	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/4	Init				
xe-2/2/3	Init				
xe-2/2/2	Two-Way	xe-0/0/48:3	qfx5100-48s-06	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/2/1	Two-Way	xe-0/0/48:3	qfx5100-48s-05	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/2/0	Init				
xe-2/1/7	Init				
xe-2/1/6	Init				

xe-2/1/5	Two-Way	xe-0/0/4:2	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18
27_dc-builder					
xe-2/1/4	Two-Way	xe-0/2/1	ex4300-31	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/3	Two-Way	xe-0/2/1	ex4300-30	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/2	Two-Way	xe-0/2/1	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/1	Two-Way	xe-0/2/1	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/0	Init				
xe-2/0/7	Two-Way	xe-0/2/1	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/0/6	Init				
xe-2/0/5	Init				
xe-2/0/4	Init				
xe-2/0/3	Init				
xe-2/0/2	Two-Way	xe-0/0/48:2	qfx5100-48s-04	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/0/1	Two-Way	xe-0/0/48:2	qfx5100-48s-03	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/0/0	Init				
xe-1/2/3	Two-Way	xe-0/0/0:0	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18
27_dc-builder					
xe-1/2/2	Two-Way	xe-0/2/0	ex4300-31	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/2/1	Two-Way	xe-0/2/0	ex4300-30	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/0/3	Two-Way	xe-0/2/0	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/0/2	Two-Way	xe-0/2/0	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/0/1	Two-Way	xe-0/2/0	ex4300-27	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-0/2/7	Two-Way	xe-0/0/0:1	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18
27_dc-builder					
xe-0/2/6	Init				
xe-0/2/5	Init				
xe-0/2/4	Two-Way	xe-0/0/48:1	qfx5100-48s-05	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/2/3	Two-Way	xe-0/0/48:1	qfx5100-48s-04	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/2/2	Two-Way	xe-0/0/48:1	qfx5100-48s-03	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/2/1	Init				
xe-0/2/0	Init				
xe-0/0/9	Two-Way	xe-0/2/0	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-0/0/8	Two-Way	xe-0/2/0	ex4300-25	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-0/0/7	Two-Way	xe-0/0/48:0	qfx5100-48s-07	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/6	Two-Way	xe-0/0/48:0	qfx5100-48s-06	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/5	Two-Way	xe-0/0/48:0	qfx5100-48s-05	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/4	Two-Way	xe-0/0/48:0	qfx5100-48s-04	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/3	Two-Way	xe-0/0/48:0	qfx5100-48s-03	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					

```
xe-0/0/2    Two-Way    xe-0/0/48:0 qfx5100-48s-02 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/0/1    Init
```

**Meaning** The output confirms:

- The cascade ports on the aggregation device that are recognized by the Junos Fusion. All recognized cascade port interfaces are listed in the **Interface** output.
- The uplink ports on the satellite devices that are connected to the cascade ports. The cascade port on each satellite device is identified in the **Port Info** column, and the satellite device itself is identified in the **System Name** output.
- Whether the cascade port to uplink port connection has initialized, using the **State** output. The **State** output is **Two-Way** when the satellite device is properly initialized, and traffic can be passed between the aggregation device and the satellite device over the link.
- The hardware model of each satellite device in the **Model** column, and the satellite software running on each satellite device in the **SW Version** output.

## Verifying Extended Port Operation

**Purpose** Verify that a specific extended port is recognized by the aggregation device, and is operational.

**Action** Enter the **show chassis satellite extended-port** command on the aggregation device:

```
user@aggregation-device> show chassis satellite extended-port
```

Legend for interface types:  
\* -- Uplink interface

Name	State	Rx Request	Rx State	Tx Request	Tx State	Admin/Op	IFD Idx	PCID
et-100/0/2	AddComplete	None		Ready		Up/Dn	838	110
et-104/0/2	AddComplete	None		Ready		Up/Dn	813	110
et-107/0/23	AddComplete	None		Ready		Up/Up	544	194
ge-109/0/0	AddComplete	None		Ready		Up/Up	402	115
ge-109/0/1	AddComplete	None		Ready		Up/Dn	403	114
ge-109/0/10	AddComplete	None		Ready		Up/Dn	412	113
ge-109/0/11	AddComplete	None		Ready		Up/Dn	413	112
ge-109/0/12	AddComplete	None		Ready		Up/Dn	414	123
ge-109/0/13	AddComplete	None		Ready		Up/Dn	415	122
ge-109/0/14	AddComplete	None		Ready		Up/Dn	416	125
ge-109/0/15	AddComplete	None		Ready		Up/Dn	417	124
ge-109/0/16	AddComplete	None		Ready		Up/Dn	418	131
ge-109/0/17	AddComplete	None		Ready		Up/Dn	419	130
ge-109/0/18	AddComplete	None		Ready		Up/Dn	420	133
ge-109/0/19	AddComplete	None		Ready		Up/Dn	421	132
ge-109/0/2	AddComplete	None		Ready		Up/Dn	404	117
ge-109/0/20	AddComplete	None		Ready		Up/Dn	422	127
ge-109/0/21	AddComplete	None		Ready		Up/Dn	423	126
ge-109/0/22	AddComplete	None		Ready		Up/Dn	424	129

ge-109/0/23	AddComplete	None	Ready	Up/Dn	425	128
ge-109/0/24	AddComplete	None	Ready	Up/Dn	426	103
ge-109/0/25	AddComplete	None	Ready	Up/Dn	427	102
ge-109/0/26	AddComplete	None	Ready	Up/Dn	428	105
ge-109/0/27	AddComplete	None	Ready	Up/Dn	429	104
ge-109/0/28	AddComplete	None	Ready	Up/Dn	430	107
ge-109/0/29	AddComplete	None	Ready	Up/Dn	431	106
ge-109/0/3	AddComplete	None	Ready	Up/Dn	405	116
ge-109/0/30	AddComplete	None	Ready	Up/Dn	432	109
ge-109/0/31	AddComplete	None	Ready	Up/Dn	433	108
ge-109/0/32	AddComplete	None	Ready	Up/Dn	434	135
ge-109/0/33	AddComplete	None	Ready	Up/Dn	435	134
ge-109/0/34	AddComplete	None	Ready	Up/Dn	436	137
ge-109/0/35	AddComplete	None	Ready	Up/Dn	437	136
ge-109/0/36	AddComplete	None	Ready	Up/Dn	438	144
ge-109/0/37	AddComplete	None	Ready	Up/Dn	439	143
ge-109/0/38	AddComplete	None	Ready	Up/Dn	440	146
ge-109/0/39	AddComplete	None	Ready	Up/Dn	441	145
ge-109/0/4	AddComplete	None	Ready	Up/Dn	406	119
ge-109/0/40	AddComplete	None	Ready	Up/Dn	442	140
ge-109/0/41	AddComplete	None	Ready	Up/Dn	443	139
ge-109/0/42	AddComplete	None	Ready	Up/Dn	444	142
ge-109/0/43	AddComplete	None	Ready	Up/Dn	445	141
ge-109/0/44	AddComplete	None	Ready	Up/Dn	446	148
ge-109/0/45	AddComplete	None	Ready	Up/Dn	447	147
ge-109/0/46	AddComplete	None	Ready	Up/Dn	448	150
ge-109/0/47	AddComplete	None	Ready	Up/Dn	449	149
ge-109/0/5	AddComplete	None	Ready	Up/Dn	407	118
ge-109/0/6	AddComplete	None	Ready	Up/Dn	408	121
ge-109/0/7	AddComplete	None	Ready	Up/Dn	409	120
ge-109/0/8	AddComplete	None	Ready	Up/Dn	410	111
ge-109/0/9	AddComplete	None	Ready	Up/Dn	411	110
ge-110/0/0	AddComplete	None	Ready	Up/Up	728	115
ge-110/0/1	AddComplete	None	Ready	Up/Dn	729	114

**Meaning** The output confirms:

- That an extended port is recognized by the aggregation device. All extended ports are listed in the **Name** column of the output.
- That the listed extended ports have been added to the Junos Fusion, as shown by the **AddComplete** output in the **State** column.
- The administrative and operational state of each extended port. An extended port is operating correctly when the **Admin State** and **Op State** outputs are both in the **Up** state.

## Verifying the Satellite Software Version

**Purpose** Verify the satellite software versions available on the aggregation device in a Junos Fusion.

**Action** Enter the **show chassis satellite software** command on the aggregation device.

```
user@aggregation-device> show chassis satellite software
```

Version	Platforms	Group
3.0R1.1	i386 ppc	group1 group2 group3 group4 group5
3.0R1.0	i386 ppc	

For more detailed output, you can also enter the **show chassis satellite software detail** on the aggregation device.

```

Software package version: 3.0R1.6
Platforms supported by package: i386 ppc arm arm563xx
  Platform      Host Version  Models Supported
  i386          3.0.3      QFX5100-24Q-2P
                        QFX5100-48C-6Q
                        QFX5100-48S-6Q
                        QFX5100-48T-6Q
                        QFX5100-96S-8Q
                        QFX5100-48SH-6Q
                        QFX5100-48TH-6Q
  ppc          1.1.2      EX4300-24P
                        EX4300-24T
                        EX4300-48P
                        EX4300-48T
                        EX4300-48T-BF
                        EX4300-48T-DC
                        EX4300-48T-DC-BF
  arm          1.0.0      EX2300-24P
                        EX2300-24T-DC
                        EX2300-C-12T
                        EX4300-C-12P
  arm563xx     1.0.0      EX3400-24P
                        EX3400-24T
                        EX3400-48T
                        EX3400-48P
Current Groups: group1
                group2
                group3
                group4
                group5

```

**Meaning** The version of satellite software installed is displayed in the **Version** or **Software package version** column, and the satellite software upgrade group associated with each version of satellite software is listed in the **Group** or **Current Groups** output.

## Verifying the Devices and Software Used in a Satellite Software Upgrade Group

**Purpose** Verify the satellite software upgrade groups in the Junos Fusion, and which satellite devices are part of which satellite software upgrade groups.

A satellite software upgrade group can be a user configured group or the name of a satellite device cluster.

**Action** Enter the **show chassis satellite upgrade-group** command on the aggregation device.

### show chassis satellite upgrade-group

```
user@aggregation-device> show chassis satellite upgrade-group
```

Group	Sw-Version	Group State	Slot	Device State
__ungrouped__ group1	3.0R1.1	in-sync	107	version-in-sync
			108	version-in-sync
			109	version-in-sync
			110	version-in-sync
			111	version-in-sync
			112	version-in-sync
group2	3.0R1.1	in-sync	113	version-in-sync
			102	version-in-sync
			103	version-in-sync
			104	version-in-sync
			105	version-in-sync
			106	version-in-sync
			114	version-in-sync

**Meaning** The output shows that two satellite software upgrade groups—**ex4300** and **qfx**—have been created, and that both are using satellite software version 1.0R1.1. The **Group Slot** output shows which satellite devices—listed by FPC slot ID number—are in which software group, and the **Device State** output showing **version-in-sync** confirms that the satellite devices are running the satellite software that is associated with the satellite software upgrade group.

**Related Documentation**

- *Configuring Junos Fusion Provider Edge*
- *Configuring or Expanding a Junos Fusion Enterprise*

## Verifying EVPN Operations in a Junos Fusion Data Center

This topic enables you to verify the following basic operations in a Junos Fusion Data Center with EVPN:

- [Verifying EVPN Connectivity on page 123](#)
- [Verifying that EVPN Routes Are Being Learned on page 124](#)
- [Verifying that Hosts and Servers Are Reachable on page 127](#)



## Verifying EVPN Connectivity

**Purpose** Verify that EVPN is properly configured and provides connectivity with the other aggregation devices in a Junos Fusion Data Center.

**Action** Enter the `show evpn instance extensive` command on each of the aggregation devices.

```
user@ad1> show evpn instance extensive
```

```
...
Instance: default-switch
Route Distinguisher: 192.168.1.11:1
Encapsulation type: VXLAN
Duplicate MAC detection threshold: 5
Duplicate MAC detection window: 180
MAC database status
MAC advertisements:          Local Remote
MAC+IP advertisements:      20      39
Default gateway MAC advertisements: 18      27
Number of local interfaces: 3 (3 up)
Interface name  ESI                               Mode          Status      A
.local..4      00:00:00:00:00:00:00:00:00:00 single-homed   Up          R
ae0.0          05:00:64:00:00:00:00:00:00 all-active     Up
Root
ae11.0         05:00:64:00:0b:00:00:00:0b all-active     Up
Root
Number of IRB interfaces: 9 (9 up)
Interface name  VLAN  VNI  Status  L3 context
irb.100         100   100  Up      TENANT1
irb.101         101   101  Up      TENANT1
irb.102         102   102  Up      TENANT2
irb.103         103   103  Up      TENANT2
irb.3001        3001   3001 Up      TENANT1
irb.3002        3002   3002 Up      TENANT1
irb.3003        3003   3003 Up      TENANT2
irb.3004        3004   3004 Up      TENANT2
irb.3005        3005   3005 Up      TENANT1
Number of protect interfaces: 0
Number of bridge domains: 9
VLAN  Domain ID  Intfs / up  IRB intf  Mode  MAC sync  IM route label
IPv4 SG sync  IPv4 IM core nexthop  IPv6 SG sync  IPv6 IM core nexthop
100  100        1 1  irb.100  Extended  Enabled  100
      Enabled  2097154  Disabled
101  101        1 1  irb.101  Extended  Enabled  101
      Enabled  2097153  Disabled
102  102        1 1  irb.102  Extended  Enabled  102
      Enabled  2097152  Disabled
...
Number of neighbors: 3
Address          MAC    MAC+IP    AD    IM    ES Leaf-label
192.168.2.22     20     20        0     9     0
192.168.3.33     21     18        0     9     0
192.168.4.44     20     20        0     9     0
Number of ethernet segments: 11
ESI: 05:00:00:00:64:00:00:64:00
```

```

Local interface: irb.100, Status: Up/Forwarding
Number of remote PEs connected: 3
  Remote PE      MAC label  Aliasing label  Mode
  192.168.2.22   100          0               single-homed
  192.168.3.33   100          0               single-homed
  192.168.4.44   100          0               single-homed
ESI: 05:00:00:00:64:00:00:65:00
Local interface: irb.101, Status: Up/Forwarding
Number of remote PEs connected: 3
  Remote PE      MAC label  Aliasing label  Mode
  192.168.2.22   101          0               single-homed
  192.168.3.33   101          0               single-homed
  192.168.4.44   101          0               single-homed
ESI: 05:00:00:00:64:00:00:66:00
Local interface: irb.102, Status: Up/Forwarding
Number of remote PEs connected: 3
  Remote PE      MAC label  Aliasing label  Mode
  192.168.2.22   102          0               single-homed
  192.168.3.33   102          0               single-homed
  192.168.4.44   102          0               single-homed
...

```

**Meaning** The output shows:

- Configured EVPN entities—for example, interfaces, VLANs, and so on—are part of the default-switch routing instance. The output also confirms that the EVPN encapsulation type is VXLAN.
- The EVPN control plane is advertising MAC addresses.
- The three other aggregation devices in the EVPN core fabric are recognized as BGP neighbors.
- The EVPN Ethernet segments and interfaces are up and forwarding traffic.

## Verifying that EVPN Routes Are Being Learned

**Purpose** Verify that EVPN is advertising and learning routes in the Junos Fusion Data Center topology.

**Action** Enter the `show route table bgp.evpn.0` command on each of the aggregation devices.

```

user@ad1> show route table bgp.evpn.0

bgp.evpn.0: 152 destinations, 152 routes (152 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
...

```

### EVPN type 2 (MAC with IP advertisement) routes

```

2:192.168.2.22:1::100::00:00:5e:00:01:01/304 MAC/IP
*[BGP/170] 1d 22:43:43, localpref 100, from 192.168.2.22

```

```

        AS path: I, validation-state: unverified
        > to 10.0.14.2 via et-0/0/50.0
2:192.168.2.22:1::100::00:31:46:e8:f9:d6/304 MAC/IP
    * [BGP/170] 1d 22:43:43, localpref 100, from 192.168.2.22
        AS path: I, validation-state: unverified
        > to 10.0.14.2 via et-0/0/50.0
2:192.168.2.22:1::101::00:00:5e:00:01:01/304 MAC/IP
    * [BGP/170] 1d 22:43:43, localpref 100, from 192.168.2.22
        AS path: I, validation-state: unverified
        > to 10.0.14.2 via et-0/0/50.0
2:192.168.2.22:1::101::00:31:46:e8:f9:d6/304 MAC/IP
    * [BGP/170] 1d 22:43:43, localpref 100, from 192.168.2.22
        AS path: I, validation-state: unverified
        > to 10.0.14.2 via et-0/0/50.0
2:192.168.2.22:1::102::00:00:5e:00:01:01/304 MAC/IP
    * [BGP/170] 1d 22:43:43, localpref 100, from 192.168.2.22
        AS path: I, validation-state: unverified
        > to 10.0.14.2 via et-0/0/50.0
2:192.168.2.22:1::102::00:31:46:e8:f9:d6/304 MAC/IP
    * [BGP/170] 1d 22:43:43, localpref 100, from 192.168.2.22
        AS path: I, validation-state: unverified
        > to 10.0.14.2 via et-0/0/50.0
...
2:192.168.3.33:1::100::00:00:5e:00:01:01/304 MAC/IP
    * [BGP/170] 1d 22:35:12, localpref 100, from 192.168.3.33
        AS path: I, validation-state: unverified
        > to 10.0.13.2 via et-0/0/16.0
2:192.168.3.33:1::100::7c:e2:ca:e4:05:9a/304 MAC/IP
    * [BGP/170] 1d 22:35:12, localpref 100, from 192.168.3.33
        AS path: I, validation-state: unverified
        > to 10.0.13.2 via et-0/0/16.0
2:192.168.3.33:1::101::00:00:5e:00:01:01/304 MAC/IP
    * [BGP/170] 1d 22:35:12, localpref 100, from 192.168.3.33
        AS path: I, validation-state: unverified
        > to 10.0.13.2 via et-0/0/16.0
2:192.168.3.33:1::101::7c:e2:ca:e4:05:9a/304 MAC/IP
    * [BGP/170] 1d 22:35:12, localpref 100, from 192.168.3.33
        AS path: I, validation-state: unverified
        > to 10.0.13.2 via et-0/0/16.0
2:192.168.3.33:1::102::00:00:5e:00:01:01/304 MAC/IP
    * [BGP/170] 1d 22:35:12, localpref 100, from 192.168.3.33
        AS path: I, validation-state: unverified
        > to 10.0.13.2 via et-0/0/16.0
2:192.168.3.33:1::102::7c:e2:ca:e4:05:9a/304 MAC/IP
    * [BGP/170] 1d 22:35:12, localpref 100, from 192.168.3.33
        AS path: I, validation-state: unverified
        > to 10.0.13.2 via et-0/0/16.0
...
2:192.168.4.44:1::100::00:00:5e:00:01:01/304 MAC/IP
    * [BGP/170] 1d 22:33:16, localpref 100, from 192.168.4.44
        AS path: I, validation-state: unverified
        > to 10.0.12.2 via et-0/0/17.0
2:192.168.4.44:1::100::7c:e2:ca:e2:75:7c/304 MAC/IP
    * [BGP/170] 1d 22:33:16, localpref 100, from 192.168.4.44
        AS path: I, validation-state: unverified
        > to 10.0.12.2 via et-0/0/17.0
2:192.168.4.44:1::101::00:00:5e:00:01:01/304 MAC/IP
    * [BGP/170] 1d 22:33:16, localpref 100, from 192.168.4.44
        AS path: I, validation-state: unverified
        > to 10.0.12.2 via et-0/0/17.0

```

```

2:192.168.4.44:1::101::7c:e2:ca:e2:75:7c/304 MAC/IP
    *[BGP/170] 1d 22:33:16, localpref 100, from 192.168.4.44
    AS path: I, validation-state: unverified
    > to 10.0.12.2 via et-0/0/17.0
2:192.168.4.44:1::102::00:00:5e:00:01:01/304 MAC/IP
    *[BGP/170] 1d 22:33:16, localpref 100, from 192.168.4.44
    AS path: I, validation-state: unverified
    > to 10.0.12.2 via et-0/0/17.0
2:192.168.4.44:1::102::7c:e2:ca:e2:75:7c/304 MAC/IP
    *[BGP/170] 1d 22:33:16, localpref 100, from 192.168.4.44
    AS path: I, validation-state: unverified
    > to 10.0.12.2 via et-0/0/17.0
2:192.168.4.44:1::103::00:00:5e:00:01:01/304 MAC/IP
    *[BGP/170] 1d 22:33:16, localpref 100, from 192.168.4.44
    AS path: I, validation-state: unverified
    > to 10.0.12.2 via et-0/0/17.0
2:192.168.4.44:1::103::7c:e2:ca:e2:75:7c/304 MAC/IP
    *[BGP/170] 1d 22:33:16, localpref 100, from 192.168.4.44
    AS path: I, validation-state: unverified
    > to 10.0.12.2 via et-0/0/17.0
...

```

### EVPN type 3 (inclusive multicast) routes

```

...
3:192.168.2.22:1::100::192.168.2.22/248 IM
    *[BGP/170] 3d 05:10:39, localpref 100, from 192.168.2.22
    AS path: I, validation-state: unverified
    > to 10.0.14.2 via et-0/0/50.0
3:192.168.2.22:1::101::192.168.2.22/248 IM
    *[BGP/170] 3d 05:10:39, localpref 100, from 192.168.2.22
    AS path: I, validation-state: unverified
    > to 10.0.14.2 via et-0/0/50.0
3:192.168.2.22:1::102::192.168.2.22/248 IM
    *[BGP/170] 3d 05:10:39, localpref 100, from 192.168.2.22
    AS path: I, validation-state: unverified
    > to 10.0.14.2 via et-0/0/50.0
...
3:192.168.3.33:1::100::192.168.3.33/248 IM
    *[BGP/170] 3d 05:02:09, localpref 100, from 192.168.3.33
    AS path: I, validation-state: unverified
    > to 10.0.13.2 via et-0/0/16.0
3:192.168.3.33:1::101::192.168.3.33/248 IM
    *[BGP/170] 3d 05:02:09, localpref 100, from 192.168.3.33
    AS path: I, validation-state: unverified
    > to 10.0.13.2 via et-0/0/16.0
3:192.168.3.33:1::102::192.168.3.33/248 IM
    *[BGP/170] 3d 05:02:09, localpref 100, from 192.168.3.33
    AS path: I, validation-state: unverified
    > to 10.0.13.2 via et-0/0/16.0
...
3:192.168.4.44:1::100::192.168.4.44/248 IM
    *[BGP/170] 3d 05:00:11, localpref 100, from 192.168.4.44
    AS path: I, validation-state: unverified
    > to 10.0.12.2 via et-0/0/17.0
3:192.168.4.44:1::101::192.168.4.44/248 IM
    *[BGP/170] 3d 05:00:11, localpref 100, from 192.168.4.44

```

```

AS path: I, validation-state: unverified
> to 10.0.12.2 via et-0/0/17.0
3:192.168.4.44:1::102::192.168.4.44/248 IM
*[BGP/170] 3d 05:00:11, localpref 100, from 192.168.4.44
AS path: I, validation-state: unverified
> to 10.0.12.2 via et-0/0/17.0

```

### EVPN type 4 (Ethernet segment) routes

```

4:192.168.2.22:0::05006400000000000000:192.168.2.22/296 ES
*[BGP/170] 3d 04:41:27, localpref 100, from 192.168.2.22
AS path: I, validation-state: unverified
> to 10.0.14.2 via et-0/0/50.0
4:192.168.2.22:0::050064000b000000000b:192.168.2.22/296 ES
*[BGP/170] 3d 05:00:10, localpref 100, from 192.168.2.22
AS path: I, validation-state: unverified
> to 10.0.14.2 via et-0/0/50.0
4:192.168.3.33:0::05006400000000000000:192.168.3.33/296 ES
*[BGP/170] 3d 04:41:27, localpref 100, from 192.168.3.33
AS path: I, validation-state: unverified
> to 10.0.13.2 via et-0/0/16.0
4:192.168.3.33:0::050064000b000000000b:192.168.3.33/296 ES
*[BGP/170] 3d 05:00:10, localpref 100, from 192.168.3.33
AS path: I, validation-state: unverified
> to 10.0.13.2 via et-0/0/16.0
4:192.168.4.44:0::05006400000000000000:192.168.4.44/296 ES
*[BGP/170] 3d 04:41:27, localpref 100, from 192.168.4.44
AS path: I, validation-state: unverified
> to 10.0.12.2 via et-0/0/17.0
4:192.168.4.44:0::050064000b000000000b:192.168.4.44/296 ES
*[BGP/170] 3d 05:00:10, localpref 100, from 192.168.4.44
AS path: I, validation-state: unverified
> to 10.0.12.2 via et-0/0/17.0

```

**Meaning** The output confirms that the aggregation device has learned EVPN routes from the other aggregation devices in the EVPN core fabric.



**NOTE:** For the sake of brevity, the sample output shows EVPN type 2, 3, and 4 routes only. It does not show all possible EVPN routes types.

## Verifying that Hosts and Servers Are Reachable

**Purpose** Verify that EVPN has learned about hosts and servers in the Junos Fusion Data Center.

**Action** Enter the `show ethernet-switching table` command on each of the aggregation devices.

```
user@ad1> show ethernet-switching table
```

```

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned, P - Persistent
static
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC,
0 - ovsdb MAC)

Ethernet switching table : 30 entries, 30 learned
Routing instance : default-switch
  Vlan          MAC          MAC          Logical          Active
  name          address        flags        interface        source
  v100          00:31:46:e8:f9:d6   D           vtep.32768
192.168.2.22
  v100          7c:e2:ca:e2:75:7c   D           vtep.32771
192.168.4.44
  v100          7c:e2:ca:e4:05:9a   D           vtep.32770
192.168.3.33
  v101          00:31:46:e8:f9:d6   D           vtep.32768
192.168.2.22
  v101          7c:e2:ca:e2:75:7c   D           vtep.32771
192.168.4.44
  v101          7c:e2:ca:e4:05:9a   D           vtep.32770
192.168.3.33
  v102          00:31:46:e8:f9:d6   D           vtep.32768
192.168.2.22
  v102          7c:e2:ca:e2:75:7c   D           vtep.32771
192.168.4.44
  v102          7c:e2:ca:e4:05:9a   D           vtep.32770
192.168.3.33
  ...

```

**Meaning** The MAC table for the default-switch routing instance—also known as the EVPN instance—includes the MAC addresses of the hosts and servers in the topology. The table also maps each MAC address to the remote aggregation device on which the address was learned, and therefore, can be reached.

**Related Documentation**

- [Understanding EVPN in a Junos Fusion Data Center on page 26](#)
- [Configuring or Expanding a Junos Fusion Data Center on page 48](#)

## Converting a Satellite Device in a Junos Fusion to a Standalone Device

In the event that you need to convert a satellite device to a standalone device, you will need to download and install a new Junos OS software package on the satellite device. The satellite device stops participating in the Junos Fusion topology once the software installation starts.

The following steps explain how to convert a satellite device that is participating in a Junos Fusion to a standalone device running Junos OS. If you have a standalone switch that is not part of a Junos Fusion but is running satellite software, and you want the switch to run Junos OS software, see [“Installing Junos OS Software on a Standalone Device Running Satellite Software” on page 132](#).



**NOTE:** The QFX5100-48SH and QFX5100-48TH switch models are shipped from the factory with satellite device software. You cannot convert these switches to become standalone devices.

Conversion of EX2300 and EX3400 switches from satellite devices to standalone devices cannot be initiated from the aggregation device. To install Junos OS software on an EX2300 or EX3400 switch acting as a satellite device, see “[Installing Junos OS Software on a Standalone Device Running Satellite Software](#)” on page 132.

- [Download Junos OS Software on page 129](#)
- [Disable the Automatic Conversion Configuration on page 130](#)
- [Install Junos OS Software on the Satellite Device on page 131](#)

## Download Junos OS Software

Before you install a new Junos OS software package on a satellite device, make sure you download the correct software package for that device:

- If the satellite device is a QFX5110, QFX5200 or EX4300 switch, you install a standard, signed **jinstall** version of Junos OS.
- If the satellite device is a QFX5100 switch that can be converted to a standalone device, you must install a Preboot eXecution Environment (PXE) version of Junos OS. The PXE version of Junos OS software supports the same feature set as the other Junos OS software packages for a release, but is specially engineered to install Junos OS onto a device running satellite software. The PXE Junos OS package name uses the format **install-media-pxe-qfx-5-version-domestic.tgz**.
- For Junos Fusion systems running Junos OS Release 17.2R1 and later, if the satellite device is a QFX5100 switch that can be converted to a standalone device, you must install a signed PXE version of Junos OS to convert the satellite device running satellite software to a standalone device running Junos OS software. The signed PXE Junos OS package name uses the format **install-media-pxe-qfx-5-version-domestic-signed.tgz**.

To download the version of Junos OS that you want to run on the satellite device after removing it from the Junos Fusion:

1. Using a Web browser, navigate to the Junos OS software download URL on the Juniper Networks webpage:  
<https://www.juniper.net/support/downloads>
2. Log in to the Juniper Networks authentication system using the username (generally your e-mail address) and password supplied by Juniper Networks representatives.
3. Select **By Technology > Junos Platform > Junos Fusion** from the drop-down list and select the switch platform series and model for your satellite device.

4. Select the version of Junos OS that you want to run on the satellite device after removing it from the Junos Fusion.
5. Review and accept the End User License Agreement.
6. Download the software to a local host.
7. Copy the software to the routing platform or to your internal software distribution site.

## Disable the Automatic Conversion Configuration

Before removing a satellite device from an operational Junos Fusion, you must disable the configuration for automatic satellite conversion. If automatic satellite conversion is enabled for the FPC slot ID, the Junos OS installation cannot proceed.

For example, the following installation on an EX4300 satellite device is blocked:

```
[edit]
user@aggregation-device> request chassis satellite install fpc-slot 103
/var/tmp/jinstall-ex-4300-14.1X53-D43.7-domestic-signed.tgz
Convert satellite device to Junos standalone device? [yes,no] (no) yes

Verified jinstall-ex-4300-14.1X53-D43.7-domestic.tgz signed by
PackageProductionEc_2017 method ECDSA256+SHA256
Satellite 103 is configured in the auto-satellite-conversion list
Please remove it from the list before converting to standalone
```

You can check the automatic satellite conversion configuration by entering the **show** statement at the **[edit chassis satellite-management auto-satellite-conversion]** hierarchy level.

1. If automatic satellite conversion is enabled for the satellite device's FPC slot ID, remove the FPC slot ID from the automatic satellite conversion configuration.

```
[edit]
user@aggregation-device# delete chassis satellite-management auto-satellite-conversion
satellite slot-id
```

For example, to remove FPC slot ID 103 from the Junos Fusion.

```
[edit]
user@aggregation-device# delete chassis satellite-management auto-satellite-conversion
satellite 103
```

2. Commit the configuration.
  - To commit the configuration to a single Routing Engine only:

```
[edit]
user@aggregation-device# commit
```



- To commit the configuration to all Routing Engines in multiple-aggregation device topology:

```
[edit]
user@aggregation-device# commit synchronize
```

## Install Junos OS Software on the Satellite Device

1. To install the Junos OS software on the satellite device to convert the device to a standalone device, use the following CLI command:

```
[edit]
user@aggregation-device> request chassis satellite install fpc-slot slot-id
URL-to-software-package
```

For example, to install a software package stored in the **var/tmp** folder on the aggregation device onto an EX4300 switch acting as the satellite device using FPC slot 103:

```
[edit]
user@aggregation-device> request chassis satellite install fpc-slot 103
/var/tmp/jinstall-ex-4300-14.1X53-D43.7-domestic-signed.tgz
Convert satellite device to Junos standalone device? [yes,no] (no) yes
```

```
Verified jinstall-ex-4300-14.1X53-D43.7-domestic.tgz signed by
PackageProductionEc_2017 method ECDSA256+SHA256
Initiating Junos standalone conversion on device 103...
Response from device: Conversion started
```



**NOTE:** If you are converting a QFX5100 switch and the Junos Fusion is running a Junos OS release earlier than 17.2R1, you must install the unsigned PXE software package on the QFX5100 switch:

```
[edit]
user@aggregation-device> request chassis satellite install fpc-slot 103
/var/tmp/install-media-pxe-qfx-5-14.1X53-D43.7-domestic.tgz
```

The satellite device stops participating in the Junos Fusion topology once the software installation starts. The software upgrade starts after this command is entered.

2. To check the progress of the conversion, issue the **show chassis satellite fpc-slot** command:

```
[edit]
user@aggregation-device> show chassis satellite fpc-slot 103 extensive
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports
ex4300-24t-16 xe-2/0/3	103 online	Online	xe-1/0/3	online	52/29
When	Event		Action		

```
Nov 30 15:48:22.914 Rx SW-Update JSON-RPC response Conversion started
Nov 30 15:47:54.375 Start-SW-Update Junos conversion
```

3. Wait for the reboot that accompanies the software installation to complete.
4. When you are prompted to log back into your device, uncable the device from the Junos Fusion topology. See *Removing a Transceiver*. Your device has been removed from Junos Fusion.



**NOTE:** The device uses a factory-default configuration after the Junos OS installation is complete.

#### Release History Table

Release	Description
17.2R1	For Junos Fusion systems running Junos OS Release 17.2R1 and later, if the satellite device is a QFX5100 switch that can be converted to a standalone device, you must install a signed PXE version of Junos OS to convert the satellite device running satellite software to a standalone device running Junos OS software.

#### Related Documentation

- *Understanding Software in a Junos Fusion Provider Edge*
- *Understanding Software in a Junos Fusion Enterprise*
- [Understanding Software in a Junos Fusion Data Center on page 17](#)

## Installing Junos OS Software on a Standalone Device Running Satellite Software

This process should be used when you have a standalone switch running satellite software and you want the switch to run Junos OS software. A standalone device is running satellite software for one of the following reasons:

- It was removed from a Junos Fusion without following the instructions in [“Converting a Satellite Device in a Junos Fusion to a Standalone Device” on page 128](#), which include a Junos OS installation.
- Satellite software was installed on the device but the device was never provisioned into a Junos Fusion.



**NOTE:** If you are removing a satellite device from a Junos Fusion, you must first make sure that automatic satellite conversion is disabled for the satellite device's FPC slot ID. See [“Converting a Satellite Device in a Junos Fusion to a Standalone Device” on page 128](#).

To install Junos OS onto a QFX5100, QFX5100 or QFX5200 switch running satellite software:

- Select a Junos OS image that meets the satellite software to Junos OS conversion requirements. See [Junos Fusion Hardware and Software Compatibility Matrices](#) for satellite software to Junos OS conversion requirements.
- Copy the Junos OS image onto a USB flash drive and use the USB flash drive to install the Junos OS. See [Performing a Recovery Installation Using an Emergency Boot Device](#).

To install Junos OS onto an EX4300 switch running satellite software:

1. Log in to the console port of your switch.
2. Power off the switch, and power it back on.
3. While the switch is powering back on, enter the UBoot prompt (`=>`) by pressing Ctrl+C on your keyboard.
4. From the Uboot prompt, set the operating system environment mode on the switch to Junos. Save the configuration and reset the kernel:

```
=> setenv osmode junos
=> setenv snos_previous_boot 0
=> save
=> reset
```

After the reset operation completes, the loader prompt (**loader>**) appears.

5. Install Junos OS using a USB flash drive from the loader prompt. See *Booting an EX Series Switch Using a Software Package Stored on a USB Flash Drive*.

To install Junos OS onto an EX2300 or EX3400 switch running satellite software:

- Log in to the satellite software (SNOS) on the switch to be converted back to Junos OS and use the following sequence of commands to install the Junos package:

```
#####  
dd bs=512 count=1 if=/dev/zero of=/dev/sda  
echo -e "o\nn\np\n1\n\n\nw" | fdisk /dev/sda  
mkfs.vfat /dev/sda1  
fw_setenv target_os  
reboot  
#####  
>>Get to the loader prompt  
#####  
loader> install --format tftp://<tftp server>/<Junos package name>
```

**Related  
Documentation**

- *Understanding Junos Fusion Enterprise Software and Hardware Requirements*
- [Junos Fusion Hardware and Software Compatibility Matrices](#)
- [Converting a Satellite Device in a Junos Fusion to a Standalone Device on page 128](#)

## CHAPTER 5

# Junos Fusion Data Center Operational Commands

- request chassis device-mode satellite
- request chassis satellite disable
- request chassis satellite enable
- request chassis satellite file-copy
- request chassis satellite install
- request chassis satellite interface
- request chassis satellite login
- request chassis satellite reboot
- request chassis satellite restart
- request chassis satellite shell-command
- request system software add
- request system software delete
- request system software rollback
- request system storage cleanup
- request system storage user-disk
- show chassis alarms
- show chassis environment
- show chassis environment fpc
- show chassis environment pem
- show chassis environment routing-engine
- show chassis fan
- show chassis firmware
- show chassis hardware
- show chassis led satellite
- show chassis routing-engine
- show chassis satellite

- `show chassis satellite extended-port`
- `show chassis satellite interface`
- `show chassis satellite neighbor`
- `show chassis satellite redundancy-group`
- `show chassis satellite redundancy-group devices`
- `show chassis satellite software`
- `show chassis satellite statistics`
- `show chassis satellite unprovision`
- `show chassis satellite upgrade-group`
- `show chassis temperature-thresholds`
- `show ethernet-switching table`
- `show interfaces extensive satellite-device`
- `show interfaces satellite-device`
- `show interfaces statistics`
- `show interfaces terse satellite-device`
- `show system core-dumps`

## request chassis device-mode satellite

<b>Syntax</b>	<code>request chassis device-mode satellite <i>package-name</i></code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.1X53-D16.
<b>Description</b>	<p>Manually install satellite software onto a switch before interconnecting the switch as a satellite device into a Junos Fusion.</p> <p>There are other methods of installing satellite software onto a satellite device, and each Junos Fusion has individual requirements for manually installing satellite software. See <i>Configuring Junos Fusion Provider Edge</i> or <i>Configuring or Expanding a Junos Fusion Enterprise</i> before manually installing satellite software.</p> <p>This command is entered from a standalone device before it is configured into a satellite device in a Junos Fusion.</p>
<b>Options</b>	<i>package-name</i> —The URL to the satellite software package.
<b>Required Privilege Level</b>	system-control
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">request chassis device-mode satellite /var/tmp/satellite-3.0R1.1-signed.tgz on page 137</a>

### Sample Output

`request chassis device-mode satellite /var/tmp/satellite-3.0R1.1-signed.tgz`

```
user@satellite-device> request chassis device-mode satellite
/var/tmp/satellite-3.0R1.1-signed.tgz
```

## request chassis satellite disable

---

<b>Syntax</b>	<code>request chassis satellite disable</code> <code>&lt;device-alias <i>alias-name</i>&gt;</code> <code>&lt;fpc-slot <i>fpc-slot</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Disable the specified satellite device from the Junos Fusion.</p> <p>When a satellite device is disabled from a Junos Fusion, all extended ports are immediately placed in the down state. The satellite device cannot send or receive traffic for the Junos Fusion until it is reenabled.</p> <p>This command is useful whenever you need to disable a satellite device from a Junos Fusion, such as for troubleshooting scenarios. If you are removing a satellite device from a Junos Fusion to use the device elsewhere on the network, use the <a href="#">request chassis satellite install</a> command to install Junos OS onto your satellite device before removing it from the Junos Fusion. See <i>Removing a Satellite Device from a Junos Fusion</i>.</p> <p>You can reenable a satellite device that was disabled using this command using the <a href="#">request chassis satellite enable</a> command.</p>
<b>Options</b>	<p><b>device-alias <i>alias-name</i></b>—Disable the satellite device with the specified alias name from the Junos Fusion.</p> <p><b>fpc <i>fpc-slot</i></b>—Disable the satellite device with the specified FPC slot identifier from the Junos Fusion.</p>
<b>Required Privilege Level</b>	system-control
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Junos Fusion Provider Edge</i></li><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li></ul>
<b>List of Sample Output</b>	<a href="#">request chassis satellite disable device-alias satellite-01 on page 138</a> <a href="#">request chassis satellite disable fpc-slot 101 on page 139</a>

## Sample Output

[request chassis satellite disable device-alias satellite-01](#)

```
user@aggregation-device> request chassis satellite disable device-alias satellite-01
```



## Sample Output

request chassis satellite disable fpc-slot 101

```
user@aggregation-device> request chassis satellite disable fpc-slot 101
```

## request chassis satellite enable

---

<b>Syntax</b>	<code>request chassis satellite enable</code> <code>&lt;device-alias <i>alias-name</i>&gt;</code> <code>&lt;fpc-slot <i>fpc-slot</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Enable the specified device as a satellite device in a Junos Fusion.</p> <p>This command is typically not used in any standard Junos Fusion initial configuration procedure. This command is typically needed in cases where the satellite device or cascade port has been disabled and needs to be re-enabled.</p>
<b>Options</b>	<p><b>device-alias <i>alias-name</i></b>—Enable the satellite device with the specified alias name in the Junos Fusion.</p> <p><b>fpc <i>fpc-slot</i></b>—Enable the device with the specified FPC slot ID as a satellite device in the Junos Fusion.</p>
<b>Required Privilege Level</b>	system-control
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li><li>• <i>Configuring Junos Fusion Provider Edge</i></li></ul>
<b>List of Sample Output</b>	<a href="#">request chassis satellite enable device-alias satellite-01 on page 140</a> <a href="#">request chassis satellite enable fpc-slot 101 on page 140</a>

### Sample Output

#### request chassis satellite enable device-alias satellite-01

```
user@aggregation-device> request chassis satellite enable device-alias satellite-01
```

### Sample Output

#### request chassis satellite enable fpc-slot 101

```
user@aggregation-device> request chassis satellite enable fpc-slot 101
```

## request chassis satellite file-copy

<b>Syntax</b>	<code>request chassis satellite file-copy [remote   local] &lt;source-URL&gt; &lt;destination-URL&gt;</code>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	Copy a file between a satellite device and an aggregation device in a Junos Fusion.
<b>Options</b>	<p><b>local</b>—Indicate that the file-copy from satellite-device has been initiated by a local user.</p> <p><b>remote</b>—Indicate that the file-copy from satellite-device has been initiated by a remote user.</p> <p><b>source-URL</b>—Specify the URL of the file that is copied.</p> <p>If no device is specified as the <i>source-URL</i>, the file is copied from the aggregation device.</p> <p>To specify a satellite device in the <i>source-URL</i>, enter <b>sdslot-id-number</b> at the beginning of the <i>source-URL</i>. For example, enter <b>sd101:/var/tmp/filename.txt</b> to specify that filename.txt in the /var/tmp directory on the satellite device using FPC slot ID number 101 is the <i>source-URL</i>.</p> <p><b>destination-URL</b>—Specify the destination URL where the file is copied into.</p> <p>If no device is specified as the <i>destination-URL</i>, the file is copied into the aggregation device.</p> <p>To specify a satellite device in the <i>destination-URL</i>, enter <b>sdslot-id-number</b> at the beginning of the <i>destination-URL</i>. For example, enter <b>sd101:/var/tmp/</b> to specify the /var/tmp directory on the satellite device using FPC slot ID number 101 as the <i>source-URL</i>.</p>
<b>Required Privilege Level</b>	system-control
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">request chassis satellite file-copy on page 142</a>

## Sample Output

### request chassis satellite file-copy

```
user@aggregation-device> request chassis satellite file-copy /var/tmp/file_name  
sd101:/var/tmp/
```

## request chassis satellite install

**Syntax** `request chassis satellite install package-name  
[fpc-slot fpc-slot | device-alias device-alias]  
<no-confirm>`

**Release Information** Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.  
Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.  
Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

**Description** Install a version of Junos OS software onto a satellite device in a Junos Fusion.

Any device operating as a satellite device in a Junos Fusion is running satellite software. A device running satellite software cannot operate as a standalone network device until it is running a version of Junos OS software.

You would typically enter this command to install Junos OS onto a satellite device before removing the satellite device from a Junos Fusion. Installing the Junos OS software onto the satellite device before removing it from the Junos Fusion allows you to more easily install the device elsewhere in your network.

If you are using the automatic satellite conversion feature to convert devices into satellite devices in your Junos Fusion, remove the FPC slot ID to the satellite device from the automatic satellite conversion configuration before using this command to install the Junos OS software. You can update the automatic satellite conversion feature using the **set chassis satellite-management auto-satellite-conversion satellite slot-id** configuration statement.

You must install a PXE version of compatible Junos OS to convert the satellite device running satellite software to a standalone device running Junos OS software on QFX5100 switches acting as satellite devices. The PXE version of Junos OS is the software that includes **pxe** in the Junos OS package name when it is downloaded from the Software Center—for example, the PXE image for Junos OS Release 14.1X53-D16 is named **install-media-pxe-qfx-5-14.1X53-D16.2.tgz**.

For Junos Fusion systems running Junos OS Release 17.2R1 and later, you must install a signed PXE version of Junos OS to convert the satellite device running satellite software to a standalone device running Junos OS software. The signed PXE Junos OS package name uses the format **install-media-pxe-qfx-5-version-domestic-signed.tgz**.

The device uses a factory-default configuration after the Junos OS installation is complete. No Junos OS configuration is modified and the previous Junos OS configuration is not restored after the Junos OS software installation.

**Options** ***package-name***—Specify the URL to the Junos OS image to install onto the satellite device.

***fpc fpc-slot***—Install the Junos OS software onto the satellite device with the specified FPC slot ID in the Junos Fusion.

**device-alias** *device-alias*—Install the Junos OS software onto the satellite device with the alias name in the Junos Fusion.

**no-confirm**—(Optional) Install the Junos OS software onto the satellite device immediately without further confirmation prompting.

**Required Privilege Level** system-control

**Related Documentation**

- *Configuring or Expanding a Junos Fusion Enterprise*
- *Configuring Junos Fusion Provider Edge*

**List of Sample Output**

[request chassis satellite install /var/tmp/jinstall-ex-4300-14.1X53-D16.1-domestic-signed.tgz fpc-slot 101 \(EX4300 switch as satellite device\) on page 144](#)

[request chassis satellite install /var/tmp/install-media-pxe-qfx-5-14.1X53-D16.2.tgz fpc-slot 102 \(QFX5100 switch as satellite device\) on page 144](#)

## Sample Output

[request chassis satellite install /var/tmp/jinstall-ex-4300-14.1X53-D16.1-domestic-signed.tgz fpc-slot 101 \(EX4300 switch as satellite device\)](#)

```
user@aggregation-device> request chassis satellite install
/var/tmp/jinstall-ex-4300-14.1X53-D16.1-domestic-signed.tgz fpc-slot 101

Response from device:
  Conversion Started
```

[request chassis satellite install /var/tmp/install-media-pxe-qfx-5-14.1X53-D16.2.tgz fpc-slot 102 \(QFX5100 switch as satellite device\)](#)

```
user@aggregation-device> request chassis satellite install
/var/tmp/install-media-pxe-qfx-5-14.1X53-D16.2.tgz fpc-slot 102

Response from device:
  Conversion Started
```

## request chassis satellite interface

<b>Syntax</b>	<code>request chassis satellite interface <i>interface-name</i> device-mode satellite</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Change the device mode for a device.</p> <p>This command is used to change a device into a satellite device for a Junos Fusion. After interconnecting a device to an aggregation device in a Junos Fusion, enter this command from the aggregation device to begin the manual satellite device conversion procedure.</p> <p>Other configuration steps, such as configuring the cascade port and creating a satellite software upgrade group, must be completed before this command can be used to convert a device into a satellite device. See <i>Configuring Junos Fusion Provider Edge</i> or <i>Configuring or Expanding a Junos Fusion Enterprise</i>.</p>
<b>Options</b>	<i>interface-name</i> —Specify the name of the cascade port interface on the aggregation device that connects to the device that will be converted into a satellite device.
<b>Required Privilege Level</b>	system-control
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">request chassis satellite interface xe-0/0/1 device-mode satellite on page 145</a>

### Sample Output

`request chassis satellite interface xe-0/0/1 device-mode satellite`

```
user@aggregation-device> request chassis satellite interface xe-0/0/1 device-mode satellite
```

## request chassis satellite login

---

<b>Syntax</b>	<code>request chassis satellite login</code> <code>&lt;fpc-slot <i>fpc-slot</i>&gt;</code> <code>&lt;interface-name <i>interface-name</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Log in to the satellite device from the aggregation device.</p> <p>This command is typically used to log in to the satellite device by expert users for debugging purposes. You can perform all configuration and administration tasks in a Junos Fusion from the aggregation device.</p>
<b>Options</b>	<p><b>fpc <i>fpc-slot</i></b>—Log in to the satellite device with the specified FPC slot ID.</p> <p><b>interface-name <i>interface-name</i></b>—Log in to the satellite device connected to the specified interface. The <i>interface-name</i> is the cascade port on the aggregation device.</p>
<b>Required Privilege Level</b>	system-control
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li><li>• <i>Configuring Junos Fusion Provider Edge</i></li></ul>
<b>List of Sample Output</b>	<a href="#">request chassis satellite login fpc-slot 101 on page 146</a>

### Sample Output

#### request chassis satellite login fpc-slot 101

```
user@aggregation-device> request chassis satellite login fpc-slot 101
```



## request chassis satellite reboot

<b>Syntax</b>	request chassis satellite reboot <fpc-slot <i>fpc-slot</i> > <range <i>range</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Reboot the satellite device or devices from the aggregation device in a Junos Fusion.
<b>Options</b>	<b>fpc <i>fpc-slot</i></b> —Reboot the satellite device with the specified FPC slot identifier. <b>range <i>range</i></b> —Reboot all satellite devices in a range of FPC slot identifiers.  For instance, you can reboot the satellite devices using FPC slot identifiers 101, 102, and 103 by entering a <i>range</i> of <b>101-103</b> .
<b>Required Privilege Level</b>	system-control
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">request chassis satellite reboot fpc 101 on page 147</a> <a href="#">request chassis satellite reboot range 101-103 on page 147</a>

### Sample Output

#### request chassis satellite reboot fpc 101

```
user@aggregation-device> request chassis satellite reboot fpc 101
```

### Sample Output

#### request chassis satellite reboot range 101-103

```
user@aggregation-device> request chassis satellite reboot range 101-103
```

## request chassis satellite restart

---

<b>Syntax</b>	<code>request chassis satellite restart [fpc-slot <i>fpc-slot</i>   range <i>range</i>] &lt;<i>process-name</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Restart a process on a satellite device or devices from the aggregation device in a Junos Fusion.</p> <p>You would typically restart a process in a Junos Fusion for troubleshooting or debugging purposes.</p> <p>This command is intended for use by expert users for debugging purposes.</p>
<b>Options</b>	<p><b>fpc <i>fpc-slot</i></b>—Restart the specified process on the satellite device in the specified FPC slot ID only.</p> <p><b>range</b>—Restart the process on the satellite devices in the specified range of FPC slot IDs only.</p> <p>For instance, if you want to reboot the satellite devices using FPC slot IDs 101, 102, and 103, you can enter a <i>range</i> of <b>101-103</b>.</p> <p><b>process-name</b>—Restart the specified process on the specified FPC slot ID or range of FPC slot IDs.</p>
<b>Required Privilege Level</b>	system-control
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li><li>• <i>Configuring Junos Fusion Provider Edge</i></li></ul>

## request chassis satellite shell-command

<b>Syntax</b>	<pre>request chassis satellite shell-command [fpc-slot <i>fpc-slot</i> [<i>range</i> ] &lt;<i>remote-command</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	Run a UNIX shell command for a satellite device from the aggregation device in a Junos Fusion.
<b>Options</b>	<p><b>fpc <i>fpc-slot</i></b>—Run the shell command on the satellite device using the specified FPC slot identifier only.</p> <p><b><i>range</i></b>—Run the shell command on the satellite devices in the specified range of FPC slot identifiers only.</p> <p>For instance, you can run the shell command on the satellite devices in FPC slot identifiers 101, 102, and 103 by entering a <i>range</i> of <b>101-103</b>.</p> <p><b><i>remote-command</i></b>—Specify the UNIX shell command to run on the satellite device or devices.</p>
<b>Required Privilege Level</b>	system-control
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> </ul>

## request system software add

- List of Syntax**
- [Syntax on page 150](#)
  - [Syntax \(EX Series Switches\) on page 150](#)
  - [Syntax \(TX Matrix Router\) on page 150](#)
  - [Syntax \(TX Matrix Plus Router\) on page 151](#)
  - [Syntax \(MX Series Router\) on page 151](#)
  - [Syntax \(QFX Series\) on page 151](#)
  - [Syntax \(OCX Series\) on page 152](#)
  - [Syntax \(Junos OS Evolved\) on page 152](#)

**Syntax**

```
request system software add package-name
<best-effort-load>
<delay-restart>
<device-alias alias-name>
<force>
<no-copy>
<no-validate>
<re0 | re1>
<reboot>
<satellite slot-id>
<set [package-name1 package-name2]>
<unlink>
<upgrade-group [all | upgrade-group-name]>
<upgrade-with-config>
<satellite slot-id>
<validate>
<version version-string>
```

**Syntax (EX Series Switches)**

```
request system software add package-name
<best-effort-load>
<delay-restart>
<force>
<no-copy>
<no-validate>
<re0 | re1>
<reboot>
<set [package-name1 package-name2]>
<upgrade-with-config>
<validate>
<validate-on-host hostname>
<validate-on-routing-engine routing-engine>
```

**Syntax (TX Matrix Router)**

```
request system software add package-name
<best-effort-load>
<delay-restart>
<force>
<lcc number | scc>
<no-copy>
```

```

<no-validate>
<re0 | re1>
<reboot>
<set [package-name1 package-name2]>
<unlink>
<upgrade-with-config>
<validate>
<validate-on-host hostname>
<validate-on-routing-engine routing-engine>

```

#### Syntax (TX Matrix Plus Router)

```

request system software add package-name
<best-effort-load>
<delay-restart>
<force>
<lcc number | sfc number>
<no-copy>
<no-validate>
<re0 | re1>
<reboot>
<set [package-name1 package-name2]>
<unlink>
<upgrade-with-config>
<validate>
<validate-on-host hostname>
<validate-on-routing-engine routing-engine>

```

#### Syntax (MX Series Router)

```

request system software add package-name
<best-effort-load>
<delay-restart>
<device-alias alias-name>
<force>
<member member-id>
<no-copy>
<no-validate>
<re0 | re1>
<reboot>
<satellite slot-id>
<set [package-name1 package-name2]>
<upgrade-group [all [upgrade-group-name]]>
<unlink>
<upgrade-with-config>
<validate>
<version version-string>
<validate-on-host hostname>
<validate-on-routing-engine routing-engine>

```

#### Syntax (QFX Series)

```

request system software add package-name
<best-effort-load>
<component all>
<delay-restart>

```

```

<force>
<force-host>
<no-copy>
<partition>
<reboot>
<unlink>
<upgrade-with-config>

```

**Syntax (OCX Series)**

```

request system software add package-name
<best-effort-load>
<delay-restart>
<force>
<force-host>
<no-copy>
<no-validate>
<reboot>
<unlink>
<upgrade-with-config>
<validate>

```

**Syntax (Junos OS Evolved)**

```

request system software add package-name
<force>
<no-validate>
<reboot>
<restart>

```

**Release Information**

Command introduced before Junos OS Release 7.4.

**best-effort-load** and **unlink** options added in Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

**sfc** option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.

Command introduced in Junos OS Release 11.1 for the QFX Series.

**set [*package-name1 package-name2*]** option added in Junos OS Release 11.1 for EX Series switches. Added in Junos OS Release 12.2 for M Series, MX Series, and T Series routers.



**NOTE:** On EX Series switches, the **set [*package-name1 package-name2*]** option allows you to install only two software packages on a mixed EX4200 and EX4500 Virtual Chassis, whereas, on M Series, MX Series, and T Series routers, the **set [*package-name1 package-name2 package-name3*]** option allows you to install multiple software packages and software add-on packages at the same time.

**upgrade-with-config** and **upgrade-with-config-format *format*** options added in Junos OS Release 12.3 for M Series routers, MX Series routers, and T Series routers, EX Series Ethernet switches, and QFX Series devices.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**device-alias**, **satellite**, **upgrade-group**, and **version** options introduced in Junos OS Release 14.2R3 for Junos Fusion.

**validate-on-host** and **validate-on-routing-engine** options added in Junos OS Release 15.1F3 for PTX5000 routers and MX240, MX480, and MX960 routers.

**upgrade-with-config-format** *format* option deleted in Junos OS Release 16.1 for M Series routers, MX Series routers, and T Series routers, EX Series Ethernet switches, and QFX Series devices.

The following options are deprecated in Junos OS Evolved Release 18.3R1: **best-effort-load**, **delay-restart**, **no-copy**, **on-primary**, (**re0** | **re1**), **set**, **unlink**, **validate**, **validate-on-host**, and **validate-on-routing-engine**.

**Description** For Junos OS Evolved, the **request system software add** command has a built-in feature not to start upgrade if a reboot is pending after an upgrade or rollback.



**NOTE:** We recommend that you always download the software image to `/var/tmp` only. On EX Series and QFX Series switches, you must use the `/var/tmp` directory. Other directories are not supported.

Install a software package or bundle on the router or switch.

For information on valid filename and URL formats, see *Format for Specifying Filenames and URLs in Junos OS CLI Commands*.



**CAUTION:** Any configuration changes performed after inputting the **request system software add** command will be lost when the system reboots with an upgraded version of Junos OS.



**NOTE:** Starting from Junos OS Release 17.2R1, PTX10008 routers do not support the **request system software add** command. Starting from Junos OS Release 17.4R1, PTX10016 routers do not support the **request system software add** command. Use the **request vmhost software add** command instead of the **request system software add** command on the PTX10008 and PTX10016 routers to install or upgrade the Junos OS software package or bundle on the router. See *request vmhost software add*.



**NOTE:** When graceful Routing Engine switchover (GRES) is enabled on a device, you must perform a unified ISSU operation to update the software running on the device. With GRES enabled, if you attempt to perform a software upgrade by entering the `request system software add package-name` command, an error message is displayed stating that only in-service-software-upgrades are supported when GRES is configured. In such a case, you must either remove the GRES configuration before you attempt the upgrade or perform a unified ISSU.



**NOTE:** Starting with Junos OS Release 15.1F3, the statement `request system software add` installs a software package for the guest OS only for the PTX5000 router with RE-DUO-C2600-16G, and for MX240, MX480, and MX960 routers with RE-S-1800X4-32G-S.

Starting with Junos OS Release 15.1F5, the statement `request system software add` installs a software package for the guest OS only for the MX2010 and MX2020 routers with REMX2K-1800-32G-S.

On these routers, in order to install both Junos software and host software packages, use the `request vmhost software add` command.

**Options** *package-name*—Location from which the software package or bundle is to be installed. For example:

- `/var/tmp/package-name`—For a software package or bundle that is being installed from a local directory on the router or switch.
- `protocol://hostname/pathname/package-name`—For a software package or bundle that is to be downloaded and installed from a remote location. Replace *protocol* with one of the following:
  - **ftp**—File Transfer Protocol.  
Use `ftp://hostname/pathname/package-name`. To specify authentication credentials, use `ftp://<username>:<password>@hostname/pathname/package-name`. To have the system prompt you for the password, specify **prompt** in place of the password. If a password is required, and you do not specify the password or **prompt**, an error message is displayed.
  - **http**—Hypertext Transfer Protocol.  
Use `http://hostname/pathname/package-name`. To specify authentication credentials, use `http://<username>:<password>@hostname/pathname/package-name`. If a password is required and you omit it, you are prompted for it.
  - **scp**—Secure copy (not available for limited editions).



Use `scp://hostname/pathname/package-name`. To specify authentication credentials, use `scp://<username>:<password>@hostname/pathname/package-name`.



NOTE:

- The *pathname* in the protocol is the relative path to the user's home directory on the remote system and not the root directory.
- Do not use the `scp` protocol in the `request system software add` command to download and install a software package or bundle from a remote location. The previous statement does not apply to the QFabric switch. The software upgrade is handled by the management process (`mgd`), which does not support `scp`.  
Use the file copy command to copy the software package or bundle from the remote location to the `/var/tmp` directory on the hard disk:  
`file copy scp://source/package-name /var/tmp`  
Then install the software package or bundle using the `request system software add` command:  
`request system software add /var/tmp/package-name`

**best-effort-load**—(Optional) Activate a partial load and treat parsing errors as warnings instead of errors.

**component all**—(QFabric systems only) (Optional) Install software package on all of the QFabric components.

**delay-restart**—(Optional) Install a software package or bundle, but do not restart software processes.

**device-alias *alias-name***—(Junos Fusion only) (Optional) Install the satellite software package onto the specified satellite device using the satellite device's alias name.

**force**—(Optional) Force the addition of the software package or bundle (ignore warnings).

**force-host**—(Optional) Force the addition of host software package or bundle (ignore warnings) on the QFX5100 device.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) In a routing matrix based on the TX Matrix router, install a software package or bundle on a T640 router that is connected to the TX Matrix router. In a routing matrix based on the TX Matrix Plus router, install a software package or bundle on a router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**member *member-id***—(MX Series routers only) (Optional) Install a software package on the specified Virtual Chassis member. Replace *member-id* with a value of 0 or 1.

**partition**—(QFX3500 switches only) (Optional) Format and repartition the media before installation.

**satellite *slot-id***—(Junos Fusion only) (Optional) Install the satellite software package onto the specified satellite device using the satellite devices FPC slot identifier.

**scc**—(TX Matrix routers only) (Optional) Install a software package or bundle on a Routing Engine on a TX Matrix router (or switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Install a software package or bundle on a Routing Engine on a TX Matrix Plus router. Replace *number* with 0.

**no-copy**—(Optional) Install a software package or bundle, but do not save copies of the package or bundle files.

**no-validate**—(Optional) When loading a software package or bundle with a different release, suppress the default behavior of the **validate** option.



**NOTE:** Software packages from unidentified providers cannot be loaded. To authorize providers, include the **provider-id** statement at the [edit system extensions provider] hierarchy level.

---

**re0 | re1**—(Optional) On routers or switches that support dual or redundant Routing Engines, load a software package or bundle on the Routing Engine in slot 0 (re0) or the Routing Engine in slot 1 (re1).

**reboot**—(Optional) After adding the software package or bundle, reboot the system. On a QFabric switch, the software installation is not complete until you reboot the component for which you have installed the software.

**set** [*package-name1 package-name2*]—(Mixed EX4200 and EX4500 Virtual Chassis, M Series, MX Series, and T Series routers only) (Optional) Install multiple packages at same time:

- In the case of mixed EX4200 and EX4500 Virtual Chassis, install two software packages—a package for an EX4200 switch and the same release of the package for an EX4500 switch—to upgrade all member switches in a mixed EX4200 and EX4500 Virtual Chassis.
- In the case of M Series, MX Series, and T Series routers, install multiple (two or more) software packages and software add-on packages at the same time. The variable **package-name** can either be a list of installation packages, each separated by a blank space, or the full URL to the directory or tar file containing the list of installation packages.

In each case, **installation-package** can either be a list of installation packages, each separated by a blank space, or the full URL to the directory or tar file containing the list of installation packages.

Use the **request system software add set** command to retain any SDK configuration by installing the SDK add-on packages along with the core Junos OS installation package.

**unlink**—(Optional) On M Series, T Series, and MX Series routers, use the unlink option to remove the software package from this directory after a successful upgrade is completed.

**upgrade-group** [ **all** *upgrade-group-name* ]—(Junos Fusion only) (Required to configure a Junos Fusion using autoconversion or manual conversion) Associate a satellite software image with a satellite software upgrade group. The satellite software package is associated with the specified satellite software upgrade group using the *upgrade-group-name*, or for all satellite software upgrade groups in a Junos Fusion when the all keyword is specified.

A satellite software upgrade group is a group of satellite devices in a Junos Fusion that are designated to upgrade to the same satellite software version using the same satellite software package. See *Understanding Software in a Junos Fusion Provider Edge*, *Understanding Software in a Junos Fusion Enterprise*, and [“Managing Satellite Software Upgrade Groups in a Junos Fusion” on page 107](#).

**upgrade-with-config**—(Optional) Install one or more configuration files.



**NOTE:** Configuration files specified with this option must have the extension **.text** or **.xml** and have the extension specified. Using the extension **.txt** will not work.

**validate**—(Optional) Validate the software package or bundle against the current configuration as a prerequisite to adding the software package or bundle. This is the

default behavior when the software package or bundle being added is a different release.



**NOTE:** The `validate` option only works on systems that do not have graceful-switchover (GRES) enabled. To use the `validate` option on a system with GRES, either disable GRES for the duration of the installation, or install using the command `request system software in-service-upgrade`, which requires nonstop active routing (NSR) to be enabled when using GRES.

**validate-on-host *hostname***—(Optional) Validate the software package by comparing it to the running configuration on a remote Junos OS host. Specify a host, replacing ***hostname*** with the remote hostname. You can optionally provide the username that will be used to log in to the remote host by specifying the hostname in the format ***user@hostname***.

**validate-on-routing-engine *routing-engine***—(Optional) Validate the software bundle or package by comparing it to the running configuration on a Junos OS Routing Engine on the same chassis. Specify a Routing Engine, replacing ***routing-engine*** with the routing engine name.

#### Additional Information

Before upgrading the software on the router or switch, when you have a known stable system, issue the **request system snapshot** command to back up the software, including the configuration, to the **/altroot** and **/altconfig** file systems. After you have upgraded the software on the router or switch and are satisfied that the new package or bundle is successfully installed and running, issue the **request system snapshot** command again to back up the new software to the **/altroot** and **/altconfig** file systems.



**NOTE:** The `request system snapshot` command is currently not supported on the QFabric system. Also, you cannot add or install multiple packages on a QFabric system.

After you run the **request system snapshot** command, you cannot return to the previous version of the software because the running and backup copies of the software are identical.

If you are upgrading more than one package at the same time, delete the operating system package, `jkernel`, last. Add the operating system package, `jkernel`, first and the routing software package, `jroute`, last. If you are upgrading all packages at once, delete and add them in the following order:

```
user@host> request system software add /var/tmp/jbase
user@host> request system software add /var/tmp/jkernel
user@host> request system software add /var/tmp/jpfe
```

```

user@host> request system software add /var/tmp/jdocs
user@host> request system software add /var/tmp/jroute
user@host> request system software add /var/tmp/jcrypto

```

By default, when you issue the **request system software add *package-name*** command on a TX Matrix master Routing Engine, all the T640 master Routing Engines that are connected to it are upgraded to the same version of software. If you issue the same command on the TX Matrix backup Routing Engine, all the T640 backup Routing Engines that are connected to it are upgraded to the same version of software.

Likewise, when you issue the **request system software add *package-name*** command on a TX Matrix Plus master Routing Engine, all the T1600 or T4000 master Routing Engines that are connected to it are upgraded to the same version of software. If you issue the same command on the TX Matrix Plus backup Routing Engine, all the T1600 or T4000 backup Routing Engines that are connected to it are upgraded to the same version of software.

**Required Privilege Level**

maintenance

**Related Documentation**

- *Format for Specifying Filenames and URLs in Junos OS CLI Commands*
- [request system software delete on page 164](#)
- [request system software rollback on page 169](#)
- [request system storage cleanup on page 174](#)
- *Installing Software Packages on QFX Series Devices*
- *Upgrading Software on a QFabric System*
- [Managing Satellite Software Upgrade Groups in a Junos Fusion on page 107](#)
- *request system software add (Maintenance)*
- *Routing Matrix with a TX Matrix Plus Router Solutions Page*

**List of Sample Output**

[request system software add validate on page 160](#)  
[request system software add /var/tmp/ no-validate on page 160](#)  
[request system software add no-copy no-validate reboot on page 161](#)  
[request system software add validate-on-host on page 161](#)  
[request system software add \(Mixed EX4200 and EX4500 Virtual Chassis\) on page 163](#)  
[request system software add component all \(QFabric Systems\) on page 163](#)  
[request system software add upgrade-group \(Junos Fusion\) on page 163](#)

**Output Fields**

When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### request system software add validate

```

user@host> request system software add validate /var/tmp/jinstall-7.2R1.7-domestic-signed.tgz

Checking compatibility with configuration
Initializing...
Using jbase-7.1R2.2
Using /var/tmp/jinstall-7.2R1.7-domestic-signed.tgz
Verified jinstall-7.2R1.7-domestic.tgz signed by PackageProduction_7_2_0
Using /var/validate/tmp/jinstall-signed/jinstall-7.2R1.7-domestic.tgz
Using /var/validate/tmp/jinstall/jbundle-7.2R1.7-domestic.tgz
Checking jbundle requirements on /
Using /var/validate/tmp/jbundle/jbase-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jkernel-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jcrypto-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jpfe-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jdocs-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jroute-7.2R1.7.tgz
Validating against /config/juniper.conf.gz
mgd: commit complete
Validation succeeded
Validating against /config/rescue.conf.gz
mgd: commit complete
Validation succeeded
Installing package '/var/tmp/jinstall-7.2R1.7-domestic-signed.tgz' ...
Verified jinstall-7.2R1.7-domestic.tgz signed by PackageProduction_7_2_0
Adding jinstall...

WARNING: This package will load JUNOS 7.2R1.7 software.
WARNING: It will save JUNOS configuration files, and SSH keys
WARNING: (if configured), but erase all other files and information
WARNING: stored on this machine. It will attempt to preserve dumps
WARNING: and log files, but this can not be guaranteed. This is the
WARNING: pre-installation stage and all the software is loaded when
WARNING: you reboot the system.

Saving the config files ...
Installing the bootstrap installer ...

WARNING: A REBOOT IS REQUIRED TO LOAD THIS SOFTWARE CORRECTLY. Use the
WARNING: 'request system reboot' command when software installation is
WARNING: complete. To abort the installation, do not reboot your system,
WARNING: instead use the 'request system software delete jinstall'
WARNING: command as soon as this operation completes.

Saving package file in /var/sw/pkg/jinstall-7.2R1.7-domestic-signed.tgz ...
Saving state for rollback ...

```

### request system software add /var/tmp/ no-validate

```

user@host> request system software add no-validate
/var/tmp/junos-install-mx-x86-32-15.1R1.9.tgz

Installing package '/var/tmp/junos-install-mx-x86-32-15.1R1.9.tgz' ...
Verified manifest signed by PackageProductionEc_2015
Verified manifest signed by PackageProductionRSA_2015
Verified contents.iso
Verified issu-indb.tgz

```

```

Verified junos-x86-32.tgz
Verified kernel
Verified metatags
Verified package.xml
Verified pkgtools.tgz
camcontrol: not found
camcontrol: not found
Verified manifest signed by PackageProductionEc_2015
Saving the config files ...
NOTICE: uncommitted changes have been saved in
/var/db/config/juniper.conf.pre-install
Saving package file in
/var/sw/pkg/junos-install-x86-32-domestic-20150618.043753_builder_junos_151_r1.tgz
...
Saving state for rollback ...

```

### request system software add no-copy no-validate reboot

```

user@host> request system software add no-copy no-validate junos-install-srx-x86-64-17.3R1.tgz
reboot

Verified junos-install-srx-x86-64-17.3R1 signed by PackageProductionEc_2017 method
ECDSA256+SHA256
Verified manifest signed by PackageProductionEc_2017 method ECDSA256+SHA256
Checking PIC combinations
Verified fips-mode signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding fips-mode-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jail-runtime signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jail-runtime-x86-32-20170725.352915_builder_stable_10 ...
Verified jdocs signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jdocs-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jfirmware signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jfirmware-x86-32-17.3R1 ...
Verified jpfe-X signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jpfe-X-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jpfe-X960 signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jpfe-X960-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jpfe-common signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jpfe-common-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jpfe-fips signed by PackageProductionEc_2017 method ECDSA256+SHA256
Verified jpfe-wrlinux signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jpfe-wrlinux-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jsd-jet-1 signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jsd-x86-32-17.3R1-jet-1 ...

```

### request system software add validate-on-host

```

user@host> request system software add validate-on-host user@xyz
:/var/tmp/jinstall-15.1-20150516_ib_15_2_psd.0-domestic-signed.tgz

user@host> request system software add validate-on-host user@xyz
:/var/tmp/jinstall-15.1-20150516_ib_15_2_psd.0-domestic-signed.tgz
Extracting JUNOS version from package...
Connecting to remote host xyz...
Password:
Sending configuration to xyz...
Validating configuration on xyz...
PACKAGE TYPE: not found
Checking compatibility with configuration

```

```
Initializing...
Using jbase-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jruntime-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jkernel-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jroute-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jcrypto-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jweb-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using /var/packages/jtools-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using /var/tmp/config.tgz
Hardware Database regeneration succeeded
Validating against /config/juniper.conf.gz
mgd: warning: schema: init: 'logical-systems-vlans' contains-node 'juniper-config
  vlans': not found
mgd: commit complete
Validation succeeded
Installing package
'/var/tmp/jinstall-15.1-20150516_ib_15_2_psd.0-domestic-signed.tgz' ...
Verified jinstall-15.1-20150516_ib_15_2_psd.0-domestic.tgz signed by
PackageDevelopmentEc_2015
Adding jinstall...

WARNING:    The software that is being installed has limited support.
WARNING:    Run 'file show /etc/notices/unsupported.txt' for details.

WARNING:    This package will load JUNOS 15.1-20150516_ib_15_2_psd.0 software.
WARNING:    It will save JUNOS configuration files, and SSH keys
WARNING:    (if configured), but erase all other files and information
WARNING:    stored on this machine. It will attempt to preserve dumps
WARNING:    and log files, but this can not be guaranteed. This is the
WARNING:    pre-installation stage and all the software is loaded when
WARNING:    you reboot the system.

Saving the config files ...
NOTICE: uncommitted changes have been saved in
/var/db/config/juniper.conf.pre-install
Installing the bootstrap installer ...

WARNING:    A REBOOT IS REQUIRED TO LOAD THIS SOFTWARE CORRECTLY. Use the
WARNING:    'request system reboot' command when software installation is
WARNING:    complete. To abort the installation, do not reboot your system,
WARNING:    instead use the 'request system software delete jinstall'
WARNING:    command as soon as this operation completes.

Saving package file in
/var/sw/pkg/jinstall-15.1-20150516_ib_15_2_psd.0-domestic-signed.tgz ...
Saving state for rollback ...
```



## Sample Output

### request system software add (Mixed EX4200 and EX4500 Virtual Chassis)

```
user@switch> request system software add set  
[/var/tmp/jinstall-ex-4200-11.1R1.1-domestic-signed.tgz  
/var/tmp/jinstall-ex-4500-11.1R1.1-domestic-signed.tgz]
```

```
...
```

### request system software add component all (QFabric Systems)

```
user@switch> request system software add /pbdata/packages/jinstall-qfabric-12.2X50-D1.3.rpm  
component all
```

```
...
```

### request system software add upgrade-group (Junos Fusion)

```
user@aggregation-device> request system software add /var/tmp/satellite-3.0R1.1-signed.tgz  
upgrade-group group1
```

## request system software delete

**List of Syntax**    [Syntax on page 164](#)  
                           [Syntax \(TX Matrix Router\) on page 164](#)  
                           [Syntax \(Junos OS Evolved \) on page 164](#)

**Syntax**    `request system software delete software-package`  
                   `<force>`  
                   `<reboot>`  
                   `<set [package-name package-name]>`  
                   `<upgrade-group [all | upgrade-group-name]>`  
                   `<version version-string>`

**Syntax (TX Matrix Router)**    `request system software delete software-package`  
   `<force>`  
   `<lcc number | scc>`  
   `<reboot>`  
   `<set [package-name package-name]>`

**Syntax (Junos OS Evolved )**    `request system software delete`  
   `<force>`  
   `<reboot>`

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                   Command introduced in Junos OS Release 9.0 for EX Series switches.  
                                   **sfc** option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.  
                                   Command introduced in Junos OS Release 11.1 for the QFX Series.  
                                   **set [*package-name package-name*]** option added in Junos OS Release 12.2 for M Series, MX Series, and T Series routers.  
                                   **reboot** option introduced in Junos OS Release 12.3.  
                                   Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
                                   **upgrade-group**, and **version** options introduced in Junos OS Release 14.2R3 for Junos Fusion.

**Description**    Remove a software package or bundle from the router or switch.



**CAUTION:** Before removing a software package or bundle, make sure that you have already placed the new software package or bundle that you intend to load onto the router or switch.

**Options**    ***package-name***—(Only for Junos OS Evolved) Name of the Junos OS Evolved package running on the device. You can see this package name by using the **request system software list** command.

**software-package**—(Not available on Junos OS Evolved) Software package or bundle name.

You can delete any or all of the following software bundles or packages:

- **jbase**—(Optional) Junos base software suite
- **jcrypto**—(Optional, in domestic version only) Junos security software
- **jdocs**—(Optional) Junos online documentation file
- **jkernel**—(Optional) Junos kernel software suite
- **jpfe**—(Optional) Junos Packet Forwarding Engine support
- **jroute**—(Optional) Junos routing software suite
- **junos**—(Optional) Junos base software



**NOTE:** On EX Series switches, some of the package names are different than those listed. To see the list of packages that you can delete on an EX Series switch, enter the command **show system software**.

**force**—(Optional) Ignore warnings and force removal of the software.

**lcc number**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) In a routing matrix, delete a software package or bundle on a T640 router indicated by **lcc number** that is connected to the TX Matrix router. In a routing matrix, delete a software package or bundle on a router indicated by **lcc number** that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**re0 | re1**—(Optional) On routers or switches that support dual or redundant Routing Engines, delete a software package or bundle on the Routing Engine in slot 0 (re0) or the Routing Engine in slot 1 (re1).

**reboot**—As of Junos OS 12.3 and greater, automatically reboot upon completing the **request system software delete** command.

**scc**—(TX Matrix routers only) (Optional) Remove an extension or upgrade package from the TX Matrix router (or switch-card chassis).

**set [package-name package-name]**—(M Series, MX Series, and T Series routers only) (Optional) Install multiple software packages or software add-on packages at the same time.

**sfc number**—(TX Matrix Plus routers only) (Optional) Remove an extension or upgrade package from the TX Matrix Plus router. Replace *number* with 0.

**upgrade-group [ all |upgrade-group-name]**—(Junos Fusion only) Delete the satellite software image association with the specified satellite software upgrade group.

A satellite software upgrade group is a group of satellite devices in the same Junos Fusion that are designated to upgrade to the same satellite software version using the same satellite software package.

**version version-string**—(Junos Fusion only) (Optional) Delete a satellite software package association with a satellite software upgrade group by selecting the satellite software package's version.

**Additional Information** Before upgrading the software on the router or switch, when you have a known stable system, issue the **request system snapshot** command to back up the software, including the configuration, to the /altroot and /altconfig file systems (on routers) or the /, /altroot, /config, /var, and /var/tmp file systems (on switches). After you have upgraded the software on the router or switch and are satisfied that the new packages are successfully installed and running, issue the **request system snapshot** command again to back up the new software to the /altroot and /altconfig file systems (on routers) or the /, /altroot, /config, /var, and /var/tmp file systems (on switches). After you run the **request system snapshot** command, you cannot return to the previous version of the software, because the running and backup copies of the software are identical.

**Required Privilege Level** maintenance

**Related Documentation**

- [request system software add on page 150](#)
- [request system software rollback on page 169](#)
- [request system software validate](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output** [request system software delete jdocs on page 167](#)  
[request system software delete \(Junos OS Evolved\) on page 167](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### request system software delete jdocs

The following example displays the system software packages before and after the **jdocs** package is deleted through the **request system software delete** command:

```
user@host> show system software
Information for jbase:

Comment:
JUNOS Base OS Software Suite [7.2R1.7]

Information for jcrypto:

Comment:
JUNOS Crypto Software Suite [7.2R1.7]

Information for jdocs:

Comment:
JUNOS Online Documentation [7.2R1.7]

Information for jkernel:

Comment:
JUNOS Kernel Software Suite [7.2R1.7]

...
```

```
user@host> show system software
Information for jbase:

Comment:
JUNOS Base OS Software Suite [7.2R1.7]

Information for jcrypto:

Comment:
JUNOS Crypto Software Suite [7.2R1.7]

Information for jkernel:

Comment:
JUNOS Kernel Software Suite [7.2R1.7]

...
```

### request system software delete (Junos OS Evolved)

```
user@host> request system software delete
junos-evo-install-qfx-fixed-x86-64-18.3I20180911102422
```

```
Removing version 'junos-evo-install-qfx-fixed-x86-64-18.3I20180911102422'.  
Software ... done.  
Data ... done.  
Version 'junos-evo-evo-qfx-fixed-x86-64-18.3I20180911102422' removed successfully.
```

## request system software rollback

<b>List of Syntax</b>	<a href="#">Syntax on page 169</a> <a href="#">Syntax (EX Series Switches) on page 169</a> <a href="#">Syntax (TX Matrix Router) on page 169</a> <a href="#">Syntax (TX Matrix Plus Router) on page 169</a> <a href="#">Syntax (MX Series Router) on page 169</a> <a href="#">Syntax (Junos OS Evolved) on page 169</a>
<b>Syntax</b>	request system software rollback
<b>Syntax (EX Series Switches)</b>	request system software rollback <all-members> <local> <member <i>member-id</i> > <reboot>
<b>Syntax (TX Matrix Router)</b>	request system software rollback <lcc <i>number</i>   scc> <reboot>
<b>Syntax (TX Matrix Plus Router)</b>	request system software rollback <lcc <i>number</i>   sfc <i>number</i> > <reboot>
<b>Syntax (MX Series Router)</b>	request system software rollback <all-members> <device-alias <i>alias-name</i> > <local> <member <i>member-id</i> > <reboot> <satellite <i>slot-id</i> > <upgrade-group [all   <i>upgrade-group-name</i> ]>
<b>Syntax (Junos OS Evolved)</b>	request system software rollback <no-validate> <package-name <i>version</i> > <reboot> <validate> <with-old-snapshot-config>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. <b>sfc</b> option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.

Command introduced in Junos OS Release 11.1 for the QFX Series.

Command behavior changed in Junos OS Release 12.1.

**reboot** option introduced in Junos OS Release 12.3.

**device-alias**, **satellite**, and **upgrade-group** options introduced in Junos OS Release 14.2R3 for Junos Fusion.

**force** option deprecated in Junos OS Release 15.1 for Junos OS with Upgraded FreeBSD.



**NOTE:** To determine which platforms run Junos OS with Upgraded FreeBSD, see the table listing the platforms currently running Junos OS with upgraded FreeBSD in *Release Information for Junos OS with Upgraded FreeBSD*.

---

**validate** and **no-validate** options introduced for Junos OS Evolved Release 18.3R1.

**package-name version** option introduced for Junos OS Evolved Release 18.3R1.

**with-old-snapshot-config** option introduced for Junos OS Evolved Release 18.3R1.

**Description** This command reverts to the last successfully installed package before the **request system software (add | delete)** command. It uses the copy stored in the `/var/sw/pkg` directory.

#### *Additional Information*

- On Junos Fusion, the **request system software rollback** command can be used to roll back the version of satellite software associated with a satellite software upgrade group. Rolling back the version of satellite software associated with a satellite software upgrade group triggers a satellite software upgrade.
- On M Series and T Series routers, if **request system software add <jinstall> reboot** was used for the previous installation, then **request system software rollback** has no effect. In this case, use **jinstall** to reinstall the required package.
- On M Series and T Series routers, if **request system software add <sdk1>** was used for the previous installation, then **request system software rollback** removes the last installed SDK package (**sdk1** in this example).
- On SRX Series devices with dual root systems, when **request system software rollback** is run, the system switches to the alternate root. Each root can have a different version of Junos OS. Roll back takes each root back to the previously installed image.
- On QFX3500 and QFX3600 devices in a mixed Virtual Chassis, when the **request system software rollback** command is issued, the system does not rollback to the image stored in the alternate partition.
- On QFX5100 switches, the **reboot** option has been removed. To reboot the switch after a software rollback, issue the **request system reboot** command as a separate, secondary command.
- On Junos OS Evolved, the **reboot** command is required in order to complete the rollback.



**Options** **all-members**—(EX4200 switches and MX Series routers only) (Optional) Attempt to roll back to the previous set of packages on all members of the Virtual Chassis configuration.

**device-alias** *alias-name*—(Junos Fusion only) (Optional) Rollback the satellite software package onto the specified satellite device using the satellite devices FPC slot identifier.

**lcc** *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, attempt to roll back to the previous set of packages on a T640 router connected to the TX Matrix router. On a TX Matrix Plus router, attempt to roll back to the previous set of packages on a connected router connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches and MX Series routers only) (Optional) Attempt to roll back to the previous set of packages on the local Virtual Chassis member.

**member** *member-id*—(EX4200 switches and MX Series routers only) (Optional) Attempt to roll back to the previous set of packages on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**no-validate | validate**—(Only for Junos OS Evolved) Check compatibility with current configuration, yes or no.

**none**—For all versions of Junos OS up to and including Junos OS 11.4, revert to the set of software as of the last successful **request system software add**. As of Junos OS 12.1 and later, revert to the last known good state before the most recent **request system software (add | delete)** command.

**package-name** *version*—(Junos OS Evolved only) Select any installed version for the rollback. The **request system software rollback** command uses the version instead of the package-name. you can see the available versions by using the **show system software list** command. If a version is not specified, the system rolls back to the default rollback version (the one with the '<' before it on the **show system software list** command output). You can specify any previous Junos OS Evolved release as long as it is not the one that is currently running or the rollback version.

**reboot**—(Optional) For Junos OS 12.3 and later, the system reboots automatically to complete the rollback. However, for Junos OS Evolved, you must explicitly specify the **reboot** option to complete the rollback.

**satellite slot-id**—(Junos Fusion only) (Optional) Roll back the satellite software package onto the specified satellite device using the satellite devices FPC slot identifier.

**scc**—(TX Matrix routers only) (Optional) Attempt to roll back to the previous set of packages on the TX Matrix router (or switch-card chassis).

**sfc number**—(TX Matrix Plus routers only) (Optional) Attempt to roll back to the previous set of packages on the TX Matrix Plus router. Replace *number* with 0.

**upgrade-group [ all | *upgrade-group-name* ]**—(Junos Fusion only) Roll back the satellite software image associated with the specified satellite software upgrade group, or for all satellite software upgrade groups in the Junos Fusion when **all** is entered.

**validate | no-validate**—(Junos OS Evolved only).

**with-old-snapshot-config**—(Optional) (Junos OS Evolved only) Rolls back system to the specified version with the old snapshot of the configuration used in that version. Otherwise, the rollback, by default, takes the current configuration.

**Required Privilege Level**

maintenance

**Related Documentation**

- *request system software abort*
- [request system software add on page 150](#)
- [request system software delete on page 164](#)
- *request system software validate*
- *request system configuration rescue delete*
- *request system configuration rescue save*
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output** [request system software rollback on page 173](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### request system software rollback

```
user@host> request system software rollback
Verified SHA1 checksum of ./jbase-7.2R1.7.tgz
Verified SHA1 checksum of ./jdocs-7.2R1.7.tgz
Verified SHA1 checksum of ./jroute-7.2R1.7.tgz
Installing package './jbase-7.2R1.7.tgz' ...
Available space: 35495 require: 7335
Installing package './jdocs-7.2R1.7.tgz' ...
Available space: 35339 require: 3497
Installing package './jroute-7.2R1.7.tgz' ...
Available space: 35238 require: 6976
NOTICE: uncommitted changes have been saved in
/var/db/config/juniper.conf.pre-install
Reloading /config/juniper.conf.gz ...
Activating /config/juniper.conf.gz ...
mgd: commit complete
Restarting mgd ...
Restarting aprobed ...
Restarting apsd ...
Restarting cosd ...
Restarting fsad ...
Restarting fud ...
Restarting gcdrd ...
Restarting ilmid ...
Restarting irsd ...
Restarting l2tpd ...
Restarting mib2d ...
Restarting nasd ...
Restarting pppoed ...
Restarting rdd ...
Restarting rmopd ...
Restarting rtspd ...
Restarting sampled ...
Restarting serviced ...
Restarting snmpd ...
Restarting spd ...
Restarting vrrpd ...

WARNING: cli has been replaced by an updated version:
CLI release 7.2R1.7 built by builder on 2005-04-22 02:03:44 UTC
Restart cli using the new version ? [yes,no] (yes) yes

Restarting cli ...
user@host
```

## request system storage cleanup

<b>List of Syntax</b>	<a href="#">Syntax on page 174</a> <a href="#">Syntax (EX Series Switches) on page 174</a> <a href="#">Syntax (MX Series Router) on page 174</a> <a href="#">Syntax (QFX Series) on page 174</a> <a href="#">Syntax (SRX Series) on page 174</a> <a href="#">Syntax (Junos OS Evolved) on page 175</a>
<b>Syntax</b>	<pre>request system storage cleanup &lt;dry-run&gt; &lt;no-confirm&gt; &lt;re0   re1   routing-engine (backup   both   local   master   other)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>request system storage cleanup &lt;all-members&gt; &lt;dry-run&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt; &lt;no-confirm&gt; &lt;re0   re1   routing-engine (backup   both   local   master   other)&gt; &lt;satellite [slot-id <i>slot-id</i>   device-alias <i>alias-name</i>]&gt;</pre>
<b>Syntax (MX Series Router)</b>	<pre>request system storage cleanup &lt;all-members&gt; &lt;dry-run&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt; &lt;no-confirm&gt; &lt;re0   re1   routing-engine (backup   both   local   master   other)&gt; &lt;satellite [slot-id <i>slot-id</i>   device-alias <i>alias-name</i>]&gt;</pre>
<b>Syntax (QFX Series)</b>	<pre>request system storage cleanup &lt;component (<i>serial number</i>   <i>UUID</i>   all)&gt; &lt;director-group <i>name</i>&gt; &lt;dry-run&gt; &lt;infrastructure <i>name</i>&gt; &lt;interconnect-device <i>name</i>&gt; &lt;name-tag <i>name-tag</i>&gt; &lt;no-confirm&gt; &lt;node-group <i>name</i>&gt; &lt;prune&gt; &lt;qfabric (<i>component name</i>)   dry-run   name-tag   repository&gt; &lt;repository (core   log)&gt; &lt;re0   re1   routing-engine (backup   both   local   master   other)&gt;</pre>
<b>Syntax (SRX Series)</b>	<pre>request system storage cleanup</pre>

	<pre>&lt;dry-run&gt; &lt;no-confirm&gt; &lt;re0   re1   routing-engine (backup   both   local   master   other)&gt;</pre>
<b>Syntax (Junos OS Evolved)</b>	<code>request system storage cleanup (dry-run   force-deep   no-confirm)</code>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 7.4.</p> <p><b>dry-run</b> option introduced in Junos OS Release 7.6.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 9.2 for SRX Series.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p><b>no-confirm</b> and <b>(re0   re1   routing-engine (backup   both   local   master   other))</b> options introduced in Junos OS 17.3R1.</p> <p><b>force-deep</b> options introduced in Junos OS Evolved Release 18.3R1.</p>
<b>Description</b>	<p>Free storage space on the router or switch by rotating log files and proposing a list of files for deletion. User input is required for file deletion. On a QFabric system, you can delete debug files located on individual devices or on the entire QFabric system.</p> <p>The Junos OS Evolved implementation of the <b>request system storage cleanup</b> command is slightly different from the implementation on Junos OS:</p> <ul style="list-style-type: none"> <li>The user is prompted to specify the <b>dry-run</b> option:</li> </ul> <pre>Please check the list of files to be deleted using the dry-run option. Continue anyway without checking? [yes,no] (yes)</pre> <p>The command cleans up any ISO files on the system, rotates syslogs, clears trace file. It does not remove user-created files</p> <ul style="list-style-type: none"> <li>To delete any user-generated files as well, use the <b>force-deep</b> option.</li> <li>In Junos OS Evolved, the system computes the available space and emits o/p on console for reference.</li> </ul>
<b>Options</b>	<b>all-members</b> —(EX4200 switches and MX Series routers only) (Optional) Delete files on the Virtual Chassis master Routing Engine only.



**NOTE:** To delete files on the other members of the Virtual Chassis configuration, log in to each backup Routing Engine and delete the files using the `request system storage cleanup local` command.

**component** (*UUID | serial number | all*)—(QFabric systems only) (Optional) Delete files located on individual QFabric system devices or on the entire QFabric system.

**director-group name**—(QFabric systems only) (Optional) Delete files on the Director group.

**dry-run**—(Optional) List files proposed for deletion (without deleting them).

**force-deep**—(Junos OS Evolved only) (Optional) Clear temporary user-generated files in */home/user* and */var/tmp* as well as any ISO files on the system, rotates syslogs, clears trace file. User is prompted to use the **dry-run** option.

**infrastructure name**—(QFabric systems only) (Optional) Delete files on the fabric control Routing Engine and fabric manager Routing Engine.

**interconnect-device name**—(QFabric systems only) (Optional) Delete files on the Interconnect device.

**local**—(EX4200 switches and MX Series routers only) (Optional) Delete files on the local Virtual Chassis member.

**member member-id**—(EX4200 switches and MX Series routers only) (Optional) Delete files on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace **member-id** with a value from 0 through 9. For an MX Series Virtual Chassis, replace **member-id** with a value of 0 or 1.

**name-tag name-tag**—(QFabric systems only) (Optional) Delete debug files that match a specific regular expression.

**node-group name**—(QFabric systems only) (Optional) Delete files on the Node group.

**no-confirm**—(Optional) Do not ask for confirmation before doing the cleanup.

**prune**—(QFabric systems only) (Optional) Delete debug files located in either the core or log debug repositories of a QFabric system device.

**qfabric component name**—(QFabric systems only) (Optional) Delete debug files located in the debug repositories of a QFabric system device.

**(re0 | re1 | routing-engine (backup | both | local | master | other))**—(Optional) Request operation on system storage on RE0, RE1, or on specified Routing Engine by these classifications: backup, both, local, master, or other.

When Routing Engine is specified, the below message is shown before listing the files and deleting them.

```
Please check the list of files to be deleted using the dry-run option. i.e.  
request system storage cleanup dry-run  
Do you want to proceed ? [yes,no] (no)
```

**repository (core | log)**—(QFabric systems only) (Optional) Specify the repository on the QFabric system device for which you want to delete debug files.

**satellite** [**slot-id** *slot-id* | **device-alias** *alias-name*]  
 Specify the satellite device in the Junos Fusion by FPC ID or device alias name for which you want to delete debug files.

**Additional Information** If logging is configured and being used, the **dry-run** option rotates the log files. In that case, the output displays the message “Currently rotating log files, please wait.” If no logging is currently under way, the output displays only a list of files to delete.

**Required Privilege Level** maintenance

**List of Sample Output** [request system storage cleanup dry-run on page 178](#)  
[request system storage cleanup on page 178](#)  
[request system storage cleanup \(Junos OS Evolved\) on page 179](#)  
[request system storage cleanup dry-run \(Junos OS Evolved\) on page 179](#)  
[request system storage cleanup force-deep \(Junos OS Evolved\) on page 180](#)  
[request system storage cleanup director-group \(QFabric Systems\) on page 182](#)  
[request system storage cleanup infrastructure device-name \(QFabric Systems\) on page 184](#)  
[request system storage cleanup interconnect-device device-name \(QFabric Systems\) on page 185](#)  
[request system storage cleanup node-group group-name \(QFabric Systems\) on page 186](#)  
[request system storage cleanup qfabric component device-name \(QFabric Systems\) on page 187](#)  
[request system storage cleanup qfabric component device-name repository core \(QFabric Systems\) on page 187](#)  
[request system storage cleanup qfabric component all \(QFabric Systems\) on page 187](#)

**Output Fields** [Table 8 on page 177](#) describes the output fields for the **request system storage cleanup** command. Output fields are listed in the approximate order in which they appear.

*Table 8: request system storage cleanup Output Fields*

Field Name	Field Description
<b>List of files to delete:</b>	Shows list of files available for deletion.
<b>Size</b>	Size of the core-dump file.
<b>Date</b>	Last core-dump file modification date and time.
<b>Name</b>	Name of the core-dump file.
<b>Directory to delete:</b>	Shows list of directories available for deletion.
<b>Repository scope:</b>	Repository where core-dump files and log files are stored. The core-dump files are located in the <b>core</b> repository, and the log files are located in the <b>log</b> repository. The default <b>Repository scope</b> is shared since both the <b>core</b> and <b>log</b> repositories are shared by all of the QFabric system devices.

Table 8: request system storage cleanup Output Fields (continued)

Field Name	Field Description
Repository head:	Name of the top-level repository location.
Repository name:	Name of the repository: <b>core</b> or <b>log</b> .
Creating list of debug artifacts to be removed under:	Shows location of files available for deletion.
List of debug artifacts to be removed under:	Shows list of files available for deletion.

## Sample Output

### request system storage cleanup dry-run

```
user@host> request system storage cleanup dry-run
```

Currently rotating log files, please wait.  
This operation can take up to a minute.

List of files to delete:

Size	Date	Name
11.4K	Mar 8 15:00	/var/log/messages.1.gz
7245B	Feb 5 15:00	/var/log/messages.3.gz
11.8K	Feb 22 13:00	/var/log/messages.2.gz
3926B	Mar 16 13:57	/var/log/messages.0.gz
3962B	Feb 22 12:47	/var/log/sampled.1.gz
4146B	Mar 8 12:20	/var/log/sampled.0.gz
4708B	Dec 21 11:39	/var/log/sampled.2.gz
7068B	Jan 16 18:00	/var/log/messages.4.gz
13.7K	Dec 27 22:00	/var/log/messages.5.gz
890B	Feb 22 17:22	/var/tmp/sampled.pkts
65.8M	Oct 26 09:10	/var/sw/pkg/jinstall-7.4R1.7-export-signed.tgz
63.1M	Oct 26 09:13	/var/sw/pkg/jbundle-7.4R1.7.tgz

### request system storage cleanup

```
user@host> request system storage cleanup
```

Currently rotating log files, please wait.  
This operation can take up to a minute.

List of files to delete:

Size	Date	Name
11.4K	Mar 8 15:00	/var/log/messages.1.gz
7245B	Feb 5 15:00	/var/log/messages.3.gz
11.8K	Feb 22 13:00	/var/log/messages.2.gz
3926B	Mar 16 13:57	/var/log/messages.0.gz
11.6K	Mar 8 15:00	/var/log/messages.5.gz
7254B	Feb 5 15:00	/var/log/messages.6.gz
12.9K	Feb 22 13:00	/var/log/messages.8.gz



```

3726B Mar 16 13:57 /var/log/messages.7.gz
3962B Feb 22 12:47 /var/log/sampled.1.gz
4146B Mar 8 12:20 /var/log/sampled.0.gz
4708B Dec 21 11:39 /var/log/sampled.2.gz
7068B Jan 16 18:00 /var/log/messages.4.gz
13.7K Dec 27 22:00 /var/log/messages.5.gz
890B Feb 22 17:22 /var/tmp/sampled.pkts
65.8M Oct 26 09:10 /var/sw/pkg/jinstall-7.4R1.7-export-signed.tgz
63.1M Oct 26 09:13 /var/sw/pkg/jbundle-7.4R1.7.tgz

```

Delete these files ? [yes,no] (yes)

### request system storage cleanup (Junos OS Evolved)

```
user@host> request system storage cleanup
```

Please check the list of files to be deleted using the dry-run option.  
Continue anyway without checking? [yes,no] (no)

### request system storage cleanup dry-run (Junos OS Evolved)

```
user@host> request system storage cleanup dry-run
```

```
-----
node: re0
-----
```

```
=== Other candidate logs, traces, core files which would be removed ===
```

```
total 0
```

```

-rw-r--r-- 1 root root 0 Jun 14 11:38 /var/log/access.log
-rw-r--r-- 1 root root 1243 Jun 14 11:55 /var/log/agentd-trace.log
-rw-r--r-- 1 root root 638 Jun 14 11:54 /var/log/alarm-mgmt-trace.log
-rw-r--r-- 1 root root 3319611 Jun 14 13:40 /var/log/alarm-mgmt.log
-rw-r--r-- 1 root root 620 Jun 14 11:55 /var/log/alarmd-trace.log
-rw-r--r-- 1 root root 3436048 Jun 14 13:40 /var/log/alarmd.log
-rw-r--r-- 1 root root 621 Jun 14 11:55 /var/log/arpd-trace.log
-rw-r--r-- 1 root root 6595285 Jun 14 15:14 /var/log/arpd.log
-rw-r--r-- 1 root root 645 Jun 14 11:55 /var/log/bios-manager-trace.log
-rw-r--r-- 1 root root 3165769 Jun 14 13:40 /var/log/bios-manager.log
-rw-r--r-- 1 root root 2152 Jun 14 11:55 /var/log/ccdbq.log
-rw-r--r-- 1 root root 687637 Jun 14 13:40 /var/log/ccdinfr.log
-rw-r--r-- 1 root root 1861 Jun 14 11:55 /var/log/ccdre-trace.log
-rw-r--r-- 1 root root 611 Jun 14 11:55 /var/log/cfmd-trace.log
-rw-r--r-- 1 root root 3256076 Jun 14 13:40 /var/log/cfmd.log
-rw-r--r-- 1 root root 627 Jun 14 11:54 /var/log/charonctl-trace.log
-rw-r--r-- 1 root root 3138411 Jun 14 13:40 /var/log/charonctl.log
-rw-r--r-- 1 root root 180 Jun 14 11:54 /var/log/charonctl_trace.log
-rw-r--r-- 1 root root 85557 Jun 14 11:47
/var/log/cli-mgd-interaction.log.1497465690
-rw-r--r-- 1 root root 23603 Jun 14 11:47
/var/log/cli-mgd-interaction.log.1497466033
. . .
-rw-r--r-- 1 root root 11520 Jun 15 14:19 /var/log/wtmp
-rw-r--r-- 1 root root 12938555 Jun 15 14:24 /var/log/zookeeper--server-re0.log
-rw-r--r-- 1 root root 926 Jun 14 11:53 /var/log/zookeeper--server-re0.out

```

```
/var/log/journal:
```

```
total 4
```

```
drwxr-xr-x 2 root root 4096 Jun 14 11:37 ecd9ed14512f11e7953f0050569fd61f
```

```

/var/log/junosvm:
total 0

/var/log/ltnng-traces:
total 8
drwxr-x--- 3 root root 4096 Jun 14 11:54 re0
drwxr-x--- 3 root root 4096 Jun 14 11:54 re1

/var/log/ltnng-traces-re1:
total 8
drwxr-x--- 3 root root 4096 Jun 14 11:39 re0
drwxr-x--- 3 root root 4096 Jun 14 11:39 re1

/var/log/traces:
total 26472
drwxr-xr-x 2 root root 4096 Jun 14 11:43 fpc0.ccdpfe-t1.0
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.1
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.10
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.11
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.12
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.13
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.14
. . .
drwxr-xr-x 2 root root 4096 Jun 14 18:42 re1.trace_client.2
drwxr-xr-x 2 root root 4096 Jun 15 01:31 re1.trace_client.3
drwxr-xr-x 2 root root 4096 Jun 15 08:21 re1.trace_client.4
drwxr-xr-x 2 root root 4096 Jun 14 11:39 re1.trace_conf.0
drwxr-xr-x 2 root root 4096 Jun 14 11:54 re1.trace_conf.1
drwxr-xr-x 2 root root 4096 Jun 14 11:39 re1.trace_server.0
drwxr-xr-x 2 root root 4096 Jun 14 11:54 re1.trace_server.1
drwxr-xr-x 2 root root 4096 Jun 14 20:59 re1.trace_server.2
drwxr-xr-x 2 root root 4096 Jun 15 06:06 re1.trace_server.3

/var/log/watchdog:
total 0
=== Removes any ISO files in /data partition ===
find: '/var/lib/ftp/in/*': No such file or directory
=== Current list of software versions installed ===
=== Software versions except current and rollback would be removed ===
List of installed version(s) :

[1] -> junos-evo-install-qfx-x86-64-16.2I20170614010254_evo-builder - [2017-06-14
11:36:21]

    '-' running version
    '>' next boot version
    '<' rollback boot version

```

### request system storage cleanup force-deep (Junos OS Evolved)

```

user@host> request system storage cleanup force-deep

Please check the list of files to be deleted using the dry-run option.
Continue anyway without checking? [yes,no] (no) yes

-----
node: re0
-----
.....

```

```

===== Start cleanup now =====
=== Start removing other logs, traces, core files ===
Clearing core files
Clearing FPC logs
Clearing logical-systems logs
=== Clearing journal logs ===
Clearing log: /var/log/RE_journal.log
Clearing log: /var/log/RE_journal_boot.log
Clearing log: /var/log/alarm-mgmd
Clearing log: /var/log/appDemo_stdout
Clearing log: /var/log/charonctl_trace.log
Clearing log: /var/log/configd-streamer.log
Clearing log: /var/log/core_mgr.log
Clearing log: /var/log/cscript.log
Clearing log: /var/log/eth_linkmon.log
Clearing log: /var/log/evo-cda-zx.log
Clearing log: /var/log/evoinit.log
Clearing log: /var/log/fibd-proxy.log
Clearing log: /var/log/i2ctrace.log
Clearing log: /var/log/i2ctrace_spmbo.log
Clearing log: /var/log/i2ctrace_spmbl.log
Clearing log: /var/log/icmpd.log
Clearing log: /var/log/ifinfo.log
Clearing log: /var/log/imgd_svr.log
Clearing log: /var/log/install
Clearing log: /var/log/interactive-commands
Clearing log: /var/log/jsd
Clearing log: /var/log/lastlog
Clearing log: /var/log/mcelog.log
Clearing log: /var/log/messages
Clearing log: /var/log/mgd-api
Clearing log: /var/log/mgmt-ethd-helper.log
Clearing log: /var/log/mib2d
Clearing log: /var/log/na-grpcd
Clearing log: /var/log/objmon_sync.json
Clearing log: /var/log/packetio-cout.log
Clearing log: /var/log/picd.log
Clearing log: /var/log/platform_mon.log
Clearing log: /var/log/policer.log
Clearing log: /var/log/postinstall.log
Clearing log: /var/log/ptp_fpga.log
Clearing log: /var/log/reboot_node.log
Clearing log: /var/log/rollback.log
Clearing log: /var/log/security
Clearing log: /var/log/semctl.log
Clearing log: /var/log/set_mgmt_mac.log
Clearing log: /var/log/shutdown_complete.log
Clearing log: /var/log/sinet.log
Clearing log:
/var/log/smartd-attr-SFSA200GM3AA4T0_C_HC_636_JUN-000060139624B1000020.log
Clearing log:
/var/log/smartd-attr-SFSA200GM3AA4T0_C_HC_636_JUN-000060139624B1000022.log
Clearing log: /var/log/snmpd
Clearing log: /var/log/ss.log
Clearing log: /var/log/ssh-key-utils.log
Clearing log: /var/log/sshd_lua.log
Clearing log: /var/log/sysconfig.log
Clearing log: /var/log/sysman.conf
Clearing log: /var/log/system-events
Clearing log: /var/log/upgrade_master.log

```

```

Clearing log: /var/log/uswitch.log
Clearing log: /var/log/uswitch.log.prev
Clearing log: /var/log/validator_debug.log
Clearing log: /var/log/wtmp
Clearing log: /var/log/zookeeper--server-re.log
Clearing log: /var/log/zookeeper--server-re.out
Clearing log: /var/log/ztp.log
=== Clearing all traces ===
=== Clearing SI traces ===
=== Removing other logs, traces, core files completed ===
=== Started removing any ISO files in /data
=== Removing any ISO files in /data completed
=== Start Software versions cleanup ===
Removing older software versions except current and rollback
=== Software versions cleanup completed ===
===== Cleanup done =====
Current space available in /soft: 12372572 K
Current space available in /data: 2638752 K
Cannot delete junos-evo-install-qfx-fixed-x86-64-18.3I20180906130134_mkamil - It
is the rollback version
Cannot delete junos-evo-install-qfx-fixed-x86-64-18.3-20180906.3 - It is the
current version
Removing version junos-evo-install-qfx-x86-64-16.2I20180516093649...
Done.

```

### request system storage cleanup director-group (QFabric Systems)

```
user@switch> request system storage cleanup director-group
```

List of files to delete:

	Size	Date	Name
4.0K	2011-11-07 05:16:29	/tmp/2064.sfcauth	
4.0K	2011-11-07 05:07:34	/tmp/30804.sfcauth	
4.0K	2011-11-07 04:13:41	/tmp/26792.sfcauth	
4.0K	2011-11-07 04:13:39	/tmp/26432.sfcauth	
0	2011-11-07 07:45:40	/tmp/cluster_cleanup.log	
1.3M	2011-11-07 07:39:11	/tmp/cn_monitor.20111107-052401.log	
4.0K	2011-11-07 07:36:29	/tmp/clustat.28019.log	
4.0K	2011-11-07 07:36:29	/tmp/clustat_x.28019.log	
9.6M	2011-11-07 05:30:24	/tmp/sfc.2.log	
4.0K	2011-11-07 05:28:11	/tmp/mgd-init.1320672491.log	
248K	2011-11-07 05:19:24	/tmp/cn_monitor.20111107-045111.log	
4.0K	2011-11-07 05:17:18	/tmp/clustat.3401.log	
4.0K	2011-11-07 05:17:18	/tmp/clustat_x.3401.log	
8.0K	2011-11-07 04:58:25	/tmp/mgd-init.1320670633.log	
0	2011-11-07 04:54:01	/tmp/mysql_db_install_5.1.37.log	
4.0K	2011-11-07 04:52:08	/tmp/cn_send.log	
0	2011-11-07 04:52:00	/tmp/init_eth0.log	
4.0K	2011-11-07 04:49:35	/tmp/install_interfaces.sh.log	
4.0K	2011-11-07 04:48:15	/tmp/bootstrap.sh.log	
160K	2011-11-07 04:47:43	/tmp/bootstrap_cleanup.log	
38M	2011-11-07 04:42:42	/tmp/cn_monitor.20111104-110308.log	
4.0K	2011-11-07 04:38:47	/tmp/clustat.30913.log	
4.0K	2011-11-07 04:38:47	/tmp/clustat_x.30913.log	
4.0K	2011-11-07 04:38:03	/tmp/dcf_upgrade.sh.remove.log	
4.0K	2011-11-07 04:38:03	/tmp/peer_update.log	
4.0K	2011-11-07 04:38:02	/tmp/dcf_upgrade.log	
4.0K	2011-11-07 04:38:02	/tmp/perl_mark_upgrade.log	

```

8.0K 2011-11-07 04:13:42 /tmp/install_dcf_rpm.log
4.0K 2011-11-07 04:13:06 /tmp/00_cleanup.sh.1320667986.log
0 2011-11-07 04:13:06 /tmp/ccif_patch_4410_4450.sh.1320667986.log
4.0K 2011-11-07 04:13:06 /tmp/pcf-tools.sh.1320667986.log
0 2011-11-07 04:13:06 /tmp/initial.sh.1320667986.log
0 2011-11-07 04:13:06 /tmp/inventory.sh.1320667986.log
4.0K 2011-11-07 04:13:06 /tmp/qf-db.sh.1320667986.log
4.0K 2011-11-07 04:13:06 /tmp/sfc.sh.1320667986.log
8.0K 2011-11-07 04:13:05 /tmp/jinstall-qfabric.log
8.0K 2011-11-04 11:10:24 /tmp/mgd-init.1320430192.log
4.0K 2011-11-04 11:07:03 /tmp/mysql_dcf_db_install.log
8.0K 2011-11-04 10:55:07 /tmp/ccif_patch_4410_4450.sh.1320429307.log
8.0K 2011-11-04 10:55:07 /tmp/initial.sh.1320429307.log
4.0K 2011-11-04 10:55:07 /tmp/inventory.sh.1320429307.log
8.0K 2011-11-04 10:55:07 /tmp/sfc.sh.1320429307.log
4.0K 2011-11-04 10:54:09 /tmp/ks-script-Ax0tz5.log
4.0K 2011-11-07 04:13:06 /tmp//sfc.sh.1320667986.log
8.0K 2011-11-04 10:55:07 /tmp//sfc.sh.1320429307.log

```

Directory to delete:

```

45M 2011-11-08 10:57:43 /tmp/sfc-captures

```

List of files to delete:

	Size	Date	Name
4.0K	2011-11-08	05:47:47	/tmp/5713.sfcauth
4.0K	2011-11-08	05:14:32	/tmp/14494.sfcauth
4.0K	2011-11-08	05:11:47	/tmp/9978.sfcauth
4.0K	2011-11-08	05:09:37	/tmp/6128.sfcauth
4.0K	2011-11-08	05:04:28	/tmp/29703.sfcauth
4.0K	2011-11-07	11:59:10	/tmp/7811.sfcauth
4.0K	2011-11-07	11:36:08	/tmp/32415.sfcauth
4.0K	2011-11-07	11:30:30	/tmp/22406.sfcauth
4.0K	2011-11-07	11:24:37	/tmp/12131.sfcauth
4.0K	2011-11-07	10:48:42	/tmp/12687.sfcauth
4.0K	2011-11-07	09:27:20	/tmp/31082.sfcauth
4.0K	2011-11-07	07:33:58	/tmp/14633.sfcauth
4.0K	2011-11-07	05:08:25	/tmp/15447.sfcauth
4.0K	2011-11-07	04:12:29	/tmp/26874.sfcauth
4.0K	2011-11-07	04:12:27	/tmp/26713.sfcauth
4.0K	2011-11-07	03:49:17	/tmp/17691.sfcauth
4.0K	2011-11-05	01:32:23	/tmp/5716.sfcauth
4.0K	2011-11-07	08:00:17	/tmp/sfcsnmpd.log
4.0K	2011-11-07	07:57:50	/tmp/cluster_cleanup.log
824K	2011-11-07	07:38:37	/tmp/cn_monitor.20111107-053643.log
4.0K	2011-11-07	07:36:30	/tmp/clustat.18399.log
4.0K	2011-11-07	07:36:30	/tmp/clustat_x.18399.log
4.0K	2011-11-07	07:35:47	/tmp/command_lock.log
4.0K	2011-11-07	05:39:54	/tmp/mgd-init.1320673194.log
92K	2011-11-07	05:19:25	/tmp/cn_monitor.20111107-050412.log
4.0K	2011-11-07	05:17:20	/tmp/clustat.30115.log
4.0K	2011-11-07	05:17:20	/tmp/clustat_x.30115.log
8.0K	2011-11-07	05:08:07	/tmp/mgd-init.1320671241.log
4.0K	2011-11-07	05:04:57	/tmp/cn_send.log
0	2011-11-07	05:04:52	/tmp/init_eth0.log
4.0K	2011-11-07	05:02:38	/tmp/install_interfaces.sh.log
4.0K	2011-11-07	05:01:19	/tmp/bootstrap.sh.log
160K	2011-11-07	05:00:47	/tmp/bootstrap_cleanup.log
28M	2011-11-07	04:42:27	/tmp/cn_monitor.20111104-112954.log
4.0K	2011-11-07	04:38:49	/tmp/clustat.6780.log

```

4.0K  2011-11-07 04:38:49 /tmp/clustat_x.6780.log
4.0K  2011-11-07 04:38:05 /tmp/issue_event.log
4.0K  2011-11-07 04:38:05 /tmp/peer_upgrade_reboot.log
12K   2011-11-07 04:38:05 /tmp/primary_update.log
4.0K  2011-11-07 04:38:04 /tmp/dcf_upgrade.sh.remove.log
4.0K  2011-11-07 04:38:04 /tmp/peer_rexec_upgrade.log
4.0K  2011-11-07 04:13:42 /tmp/peer_install_dcf_rpm.log
4.0K  2011-11-07 04:11:57 /tmp/dcf-tools.sh.1320667917.log
0     2011-11-07 04:11:57 /tmp/initial.sh.1320667917.log
0     2011-11-07 04:11:57 /tmp/inventory.sh.1320667917.log
4.0K  2011-11-07 04:11:57 /tmp/qf-db.sh.1320667917.log
4.0K  2011-11-07 04:11:57 /tmp/sfc.sh.1320667917.log
4.0K  2011-11-07 04:11:56 /tmp/00_cleanup.sh.1320667916.log
0     2011-11-07 04:11:56 /tmp/ccif_patch_4410_4450.sh.1320667916.log
8.0K  2011-11-07 04:11:56 /tmp/jinstall-qfabric.log
4.0K  2011-11-07 04:11:33 /tmp/dcf_upgrade.log
8.0K  2011-11-04 11:53:12 /tmp/mgd-init.1320432782.log
8.0K  2011-11-04 11:06:17 /tmp/ccif_patch_4410_4450.sh.1320429977.log
8.0K  2011-11-04 11:06:17 /tmp/initial.sh.1320429977.log
4.0K  2011-11-04 11:06:17 /tmp/inventory.sh.1320429977.log
8.0K  2011-11-04 11:06:17 /tmp/sfc.sh.1320429977.log
4.0K  2011-11-04 11:05:19 /tmp/ks-script_tnWeb.log
4.0K  2011-11-07 04:11:57 /tmp//sfc.sh.1320667917.log
8.0K  2011-11-04 11:06:17 /tmp//sfc.sh.1320429977.log

```

Directory to delete:

```

49M   2011-11-08 10:45:20 /tmp/sfc-captures

```

### request system storage cleanup infrastructure device-name (QFabric Systems)

```

user@switch> request system storage cleanup infrastructure FC

```

```

re0:
-----

```

List of files to delete:

Size	Date	Name
139B	Nov 8 19:03	/var/log/default-log-messages.0.gz
5602B	Nov 8 19:03	/var/log/messages.0.gz
28.4K	Nov 8 10:15	/var/log/messages.1.gz
35.2K	Nov 7 13:45	/var/log/messages.2.gz
207B	Nov 7 16:02	/var/log/wtmp.0.gz
27B	Nov 7 12:14	/var/log/wtmp.1.gz
184.4M	Nov 7 12:16	/var/sw/pkg/jinstall-dc-re-11.3I20111104_1216_dc-builder-domestic-signed.tgz
124.0K	Nov 7 15:59	/var/tmp/gres-tp/env.dat
0B	Nov 7 12:57	/var/tmp/gres-tp/lock
155B	Nov 7 16:02	/var/tmp/krt_gencfg_filter.txt
0B	Nov 7 12:35	/var/tmp/last_ccif_update
1217B	Nov 7 12:15	/var/tmp/loader.conf.preinstall
184.4M	Nov 6 07:11	/var/tmp/mchassis-install.tgz
10.8M	Nov 7 12:16	/var/tmp/preinstall/bootstrap-install-11.3I20111104_1216_dc-builder.tar
57.4K	Nov 7 12:16	/var/tmp/preinstall/configs-11.3I20111104_1216_dc-builder.tgz
259B	Nov 7 12:16	/var/tmp/preinstall/install.conf
734.3K	Nov 4 13:46	/var/tmp/preinstall/jboot-dc-re-11.3I20111104_1216_dc-builder.tgz
177.8M	Nov 7 12:16	

```

/var/tmp/preinstall/jbundle-dc-re-11.3I20111104_1216_dc-builder-domestic.tgz
124B Nov 7 12:15 /var/tmp/preinstall/metatags
1217B Nov 7 12:16 /var/tmp/preinstall_boot_loader.conf
0B Nov 7 16:02 /var/tmp/rtssdb/if-rtssdb

```

### request system storage cleanup interconnect-device device-name (QFabric Systems)

```
user@switch> request system storage cleanup interconnect IC
```

```
re1:
```

```
-----
List of files to delete:
```

	Size	Date	Name
	11B	Nov 7 15:55	/var/jail/tmp/alarmd.ts
	128B	Nov 8 19:06	/var/log/default-log-messages.0.gz
	9965B	Nov 8 19:06	/var/log/messages.0.gz
	15.8K	Nov 8 12:30	/var/log/messages.1.gz
	15.8K	Nov 8 11:00	/var/log/messages.2.gz
	15.7K	Nov 8 07:30	/var/log/messages.3.gz
	15.8K	Nov 8 04:00	/var/log/messages.4.gz
	15.7K	Nov 8 00:30	/var/log/messages.5.gz
	18.7K	Nov 7 21:00	/var/log/messages.6.gz
	17.6K	Nov 7 19:00	/var/log/messages.7.gz
	58.3K	Nov 7 16:00	/var/log/messages.8.gz
	20.3K	Nov 7 15:15	/var/log/messages.9.gz
	90B	Nov 7 15:41	/var/log/wtmp.0.gz
	57B	Nov 7 12:41	/var/log/wtmp.1.gz
	124.0K	Nov 7 15:42	/var/tmp/gres-tp/env.dat
	0B	Nov 7 12:40	/var/tmp/gres-tp/lock
	0B	Nov 7 12:41	/var/tmp/if-rtssdb/env.lck
	12.0K	Nov 7 15:41	/var/tmp/if-rtssdb/env.mem
	132.0K	Nov 7 15:55	/var/tmp/if-rtssdb/shm_usr1.mem
	2688.0K	Nov 7 15:41	/var/tmp/if-rtssdb/shm_usr2.mem
	2048.0K	Nov 7 15:41	/var/tmp/if-rtssdb/trace.mem
	730B	Nov 7 19:57	/var/tmp/juniper.conf+.gz
	155B	Nov 7 15:53	/var/tmp/krt_gencfg_filter.txt
	0B	Nov 7 15:41	/var/tmp/rtssdb/if-rtssdb

```
re0:
```

```
-----
List of files to delete:
```

	Size	Date	Name
	11B	Nov 7 15:55	/var/jail/tmp/alarmd.ts
	121B	Nov 8 19:06	/var/log/default-log-messages.0.gz
	16.7K	Nov 8 19:06	/var/log/messages.0.gz
	22.2K	Nov 8 17:45	/var/log/messages.1.gz
	K	Nov 8 17:00	/var/log/messages.2.gz
	21.6K	Nov 8 16:00	/var/log/messages.3.gz
	17.9K	Nov 8 14:30	/var/log/messages.4.gz
	19.4K	Nov 8 13:30	/var/log/messages.5.gz
	18.2K	Nov 8 12:30	/var/log/messages.6.gz
	20.4K	Nov 8 11:30	/var/log/messages.7.gz
	21.4K	Nov 8 10:15	/var/log/messages.8.gz
	21.0K	Nov 8 09:00	/var/log/messages.9.gz
	19.9K	Nov 8 08:13	/var/log/snmp-traps.0.gz
	203B	Nov 8 15:36	/var/log/wtmp.0.gz

```

57B Nov 7 12:41 /var/log/wtmp.1.gz
124.0K Nov 7 15:42 /var/tmp/gres-tp/env.dat
0B Nov 7 12:40 /var/tmp/gres-tp/lock
0B Nov 7 12:41 /var/tmp/if-rtbdb/env.lck
12.0K Nov 7 15:41 /var/tmp/if-rtbdb/env.mem
132.0K Nov 7 15:55 /var/tmp/if-rtbdb/shm_usr1.mem
2688.0K Nov 7 15:41 /var/tmp/if-rtbdb/shm_usr2.mem
2048.0K Nov 7 15:41 /var/tmp/if-rtbdb/trace.mem
727B Nov 7 15:54 /var/tmp/juniper.conf+.gz
155B Nov 7 15:55 /var/tmp/krt_gencfg_filter.txt
0B Nov 7 15:41 /var/tmp/rtbdb/if-rtbdb

```

### request system storage cleanup node-group group-name (QFabric Systems)

```
user@switch> request system storage cleanup node-group NW-NG
```

```
BBAK0372:
```

```
-----
List of files to delete:
```

	Size	Date	Name
	126B	Nov 8 19:07	/var/log/default-log-messages.0.gz
	179B	Nov 7 13:32	/var/log/install.0.gz
	22.9K	Nov 8 19:07	/var/log/messages.0.gz
	26.5K	Nov 8 17:30	/var/log/messages.1.gz
	20.5K	Nov 8 13:15	/var/log/messages.2.gz
	33.2K	Nov 7 17:45	/var/log/messages.3.gz
	35.5K	Nov 7 15:45	/var/log/messages.4.gz
	339B	Nov 8 17:10	/var/log/wtmp.0.gz
	58B	Nov 7 12:40	/var/log/wtmp.1.gz
	124.0K	Nov 8 17:08	/var/tmp/gres-tp/env.dat
	0B	Nov 7 12:39	/var/tmp/gres-tp/lock
	0B	Nov 7 12:59	/var/tmp/if-rtbdb/env.lck
	12.0K	Nov 8 17:09	/var/tmp/if-rtbdb/env.mem
	2688.0K	Nov 8 17:09	/var/tmp/if-rtbdb/shm_usr1.mem
	132.0K	Nov 8 17:09	/var/tmp/if-rtbdb/shm_usr2.mem
	2048.0K	Nov 8 17:09	/var/tmp/if-rtbdb/trace.mem
	1082B	Nov 8 17:09	/var/tmp/juniper.conf+.gz
	155B	Nov 7 17:39	/var/tmp/krt_gencfg_filter.txt
	0B	Nov 8 17:09	/var/tmp/rtbdb/if-rtbdb

```
EE3093:
```

```
-----
List of files to delete:
```

	Size	Date	Name
	11B	Nov 8 17:33	/var/jail/tmp/alarmd.ts
	119B	Nov 8 19:08	/var/log/default-log-messages.0.gz
	180B	Nov 7 17:41	/var/log/install.0.gz
	178B	Nov 7 13:32	/var/log/install.1.gz
	2739B	Nov 8 19:08	/var/log/messages.0.gz
	29.8K	Nov 8 18:45	/var/log/messages.1.gz
	31.8K	Nov 8 17:15	/var/log/messages.2.gz
	20.6K	Nov 8 16:00	/var/log/messages.3.gz
	15.4K	Nov 8 10:15	/var/log/messages.4.gz
	15.4K	Nov 8 02:15	/var/log/messages.5.gz
	25.5K	Nov 7 20:45	/var/log/messages.6.gz
	48.0K	Nov 7 17:45	/var/log/messages.7.gz



```

32.8K Nov 7 13:45 /var/log/messages.8.gz
684B Nov 8 17:02 /var/log/wtmp.0.gz
58B Nov 7 12:40 /var/log/wtmp.1.gz
124.0K Nov 7 17:34 /var/tmp/gres-tp/env.dat
0B Nov 7 12:40 /var/tmp/gres-tp/lock
0B Nov 7 12:59 /var/tmp/if-rtbdb/env.lck
12.0K Nov 7 17:39 /var/tmp/if-rtbdb/env.mem
2688.0K Nov 7 17:39 /var/tmp/if-rtbdb/shm_usr1.mem
132.0K Nov 7 17:40 /var/tmp/if-rtbdb/shm_usr2.mem
2048.0K Nov 7 17:39 /var/tmp/if-rtbdb/trace.mem
155B Nov 7 17:40 /var/tmp/krt_gencfg_filter.txt
0B Nov 7 17:39 /var/tmp/rtbdb/if-rtbdb

```

### request system storage cleanup qfabric component device-name (QFabric Systems)

```
user@switch> request system storage cleanup qfabric component Test
```

```

Repository type: regular
Repository head: /pbstorage
Creating list of debug artifacts to be removed under: /pbstorage/rdumps/Test
Removing debug artifacts ... (press control C to abort)
Removing /pbstorage/rdumps/Test/cosd.core.0.0.05162011123308.gz ... done
Removing /pbstorage/rdumps/Test/cosd.core.1.0.05162011123614.gz ... done
Removing /pbstorage/rdumps/Test/cosd.core.2.0.05162011123920.gz ... done
Removing /pbstorage/rdumps/Test/livekcore.05132011163930.gz ... done
Removing /pbstorage/rdumps/Test/tnetd.core.0.1057.05162011124500.gz ... done
Removing /pbstorage/rdumps/Test/vmcore.05132011120528.gz ... done
Removing /pbstorage/rdumps/Test/vmcore.kz ... done
Creating list of debug artifacts to be removed under: /pbstorage/rlogs/Test
Removing debug artifacts ... (press control C to abort)
Removing /pbstorage/rlogs/Test/kdumpinfo.05132011120528 ... done
Removing /pbstorage/rlogs/Test/kernel.tarball.0.1039.051220111234415.tgz ... done
Removing /pbstorage/rlogs/Test/kernel.tarball.1.1039.05132011175544.tgz ... done
Removing /pbstorage/rlogs/Test/tnetd.tarball.0.1057.05162011175453.tgz ... done

```

### request system storage cleanup qfabric component device-name repository core (QFabric Systems)

```
user@switch> request system storage cleanup qfabric component Test repository core
```

```

Repository scope: shared
Repository head: /pbdata/export
Repository name: core
Creating list of debug artifacts to be removed under: /pbdata/export/rdumps/Test
NOTE: core repository under /pbdata/export/rdumps/Test empty

```

### request system storage cleanup qfabric component all (QFabric Systems)

```
user@switch> request system storage cleanup qfabric component all
```

```

Repository scope: shared
Repository head: /pbdata/export
Creating list of debug artifacts to be removed under: /pbdata/export/rdumps
NOTE: core repository under /pbdata/export/rdumps/all empty
Creating list of debug artifacts to be removed under: /pbdata/export/rlogs
List of debug artifacts to clean up ... (press control C to abort)
/pbdata/export/rlogs/73747cd8-0710-11e1-b6a4-00e081c5297e/install-11072011125819.log
/pbdata/export/rlogs/77116f18-0710-11e1-a2a0-00e081c5297e/install-11072011125819.log
/pbdata/export/rlogs/BBAK0372/install-11072011121538.log
/pbdata/export/rlogs/BBAK0394/install-11072011121532.log

```

```
/pbdata/export/rlogs/EE3093/install-11072011121536.log  
/pbdata/export/rlogs/WS001/YN5999/install-11072011121644.log  
/pbdata/export/rlogs/WS001/YW3803/install-11072011122429.log  
/pbdata/export/rlogs/cd78871a-0710-11e1-878e-00e081c5297e/install-11072011125932.log  
/pbdata/export/rlogs/d0afda1e-0710-11e1-a1d0-00e081c5297e/install-11072011125930.log  
/pbdata/export/rlogs/d0afda1e-0710-11e1-a1d0-00e081c5297e/install-11072011133211.log  
/pbdata/export/rlogs/d0afda1e-0710-11e1-a1d0-00e081c5297e/install-11072011155302.log  
/pbdata/export/rlogs/d31ab7a6-0710-11e1-ad1b-00e081c5297e/install-11072011125931.log  
/pbdata/export/rlogs/d4d0f254-0710-11e1-90c3-00e081c5297e/install-11072011125932.log
```

## request system storage user-disk

<b>Syntax</b>	<code>request system storage user-disk &lt;[expand   restore]&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 17.2 for Junos Fusion Data Center.
<b>Description</b>	<p>Expand or restore the size of the /user disk partition for an aggregation device on Junos Fusion Data Center. The /user partition must be expanded to provide sufficient space on the aggregation device for installing satellite packages.</p> <p>After the command is issued, you are prompted to confirm the action. The system is automatically rebooted to affect the change. The disk partition space is preserved across subsequent reboot and Junos OS upgrades.</p>
<b>Options</b>	<p><b>expand</b>—Increases the size of the /user disk partition to 4G and creates a soft link from the /var/home/ partition to the /user partition. The /var/home partition is where satellite packages are stored on the aggregation device when they are installed. The /user partition must be expanded before installing satellite software packages on the aggregation device.</p> <p><b>restore</b>—Restores the /user partition to its original size and removes the link between the /user partition and the /var/home partition. The restore option should only be used when the device is no longer being used as an aggregation device.</p>
<b>Required Privilege Level</b>	maintenance
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring or Expanding a Junos Fusion Data Center on page 48</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">request system storage user-disk expand on page 189</a> <a href="#">request system storage user-disk restore on page 190</a>

## Sample Output

### request system storage user-disk expand

```

user@aggregation-device> request system storage user-disk expand

This command will change the size of /user and reboot the system
Do you want to continue? [yes,no] (no) yes

Proceeding with expand operation
Platform disk size changed to 4096M
Making link from /var/home to /user
Initiating reboot to complete the operation
Shutdown at Thu Apr 13 00:00:48 2017.

*** System shutdown message from root@aggregation-device ***

```

System going down in 1 minute

#### request system storage user-disk restore

```
user@aggregation-device> request system storage user-disk restore
```

This command will change the size of /user and reboot the system  
Do you want to continue? [yes,no] (no) yes

Proceeding with restore operation  
Platform disk size changed to default  
Initiating reboot to complete the operation  
Shutdown at Wed Apr 12 23:53:58 2017.

\*\*\* System shutdown message from root@aggregation-device \*\*\*

System going down in 1 minute

## show chassis alarms

**List of Syntax**

- Syntax on page 191
- Syntax (TX Matrix Routers) on page 191
- Syntax (TX Matrix Plus Routers) on page 191
- Syntax (MX Series Routers) on page 191
- Syntax (MX104, MX2010, MX2020, and MX2008 Universal Routing Platforms) on page 191
- Syntax (MX10003, MX204, and MX10008) on page 191
- Syntax (QFX Series) on page 191
- Syntax (OCX Series) on page 191
- Syntax (PTX Series Packet Transport Routers) on page 192
- Syntax (ACX Series Universal Metro Routers) on page 192
- Syntax (EX9251, EX9253 Switches) on page 192

**Syntax** show chassis alarms

**Syntax (TX Matrix Routers)** show chassis alarms  
<lcc *number* | scc>

**Syntax (TX Matrix Plus Routers)** show chassis alarms  
<lcc *number* | sfc *number*>

**Syntax (MX Series Routers)** show chassis alarms  
<all-members>  
<local>  
<member *member-id*>

**Syntax (MX104, MX2010, MX2020, and MX2008 Universal Routing Platforms)** show chassis alarms  
<satellite [slot-id *slot-id*]>

**Syntax (MX10003, MX204, and MX10008)** show chassis alarms

**Syntax (QFX Series)** show chassis alarms  
<interconnect-device *name*>  
<node-device *name*>

**Syntax (OCX Series)** show chassis alarms

Syntax (PTX Series Packet Transport Routers)	show chassis alarms
Syntax (ACX Series Universal Metro Routers)	show chassis alarms
Syntax (EX9251, EX9253 Switches)	show chassis alarms
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX 2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3 for Junos Fusion.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Universal Routing Platforms.</p>
Description	Display information about the conditions that have been configured to trigger alarms.
Options	<p><b>none</b>—Display information about the conditions that have been configured to trigger alarms.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display information about alarm conditions for all the member routers of the Virtual Chassis configuration.</p> <p><b>interconnect-device <i>name</i></b>—(QFabric systems only) (Optional) Display information about alarm conditions for the Interconnect device.</p> <p><b>lcc <i>number</i></b>—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.</p>

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display information about alarm conditions for the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display information about alarm conditions for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value of 0 or 1.

**node-device *name***—(QFabric systems only) (Optional) Display information about alarm conditions for the Node device.

**satellite [*slot-id slot-id*]**—(Junos Fusion only) (Optional) Display information about alarm conditions for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix router only) (Optional) Show information about the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus router only) (Optional) Show information about the respective TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* variable with 0.

**Additional Information** Chassis alarms are preset. You cannot modify them.

You cannot clear the alarms for chassis components. Instead, you must remedy the cause of the alarm. When a chassis alarm LED is lit, it indicates that you are running the router or switch in a manner that we do not recommend.

On routers, you can manually silence external devices connected to the alarm relay contacts by pressing the alarm cutoff button, located on the craft interface. Silencing the device does not remove the alarm messages from the display (if present on the router) or extinguish the alarm LEDs. In addition, new alarms that occur after you silence an external device reactivate the external device.



**NOTE:** MX10003 routers do not support craft interface.

In Junos OS release 11.1 and later, alarms for fans also show the slot number of the fans in the CLI output.

In Junos OS Release 11.2 and later, the command output on EX8200 switches shows the detailed location (**Plane/FPC/PFE**) for link errors in the chassis.

In Junos OS Release 10.2 and later, an alarm is shown on T Series routers for a standby SONET Clock Generator (SCG) that is offline or absent.

You may often see the following error messages, in which only the error code is shown and no other information is provided:

```
Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major Errors
- Error code: 257
Apr 12 08:04:19 send: red alarm set, device FPC 1, reason FPC 1 Major Errors
- Error code: 559
```

To understand what CM\_ALARM error codes mean, you need to first identify the structure of the CM Alarm codes. A CM\_ALARM code has the following structure:

Bits:	Error type:
1-31	Major (1)
0	Minor (0)

According to the table above, the LSB (bit 0) identifies the **Error Type** (major alarm, if the bit is set and minor alarm if the bit is unset). The rest of the bits (1 - 31) identify the actual error code.

Take an example of the following error code, which was logged on a T1600:

```
Apr 12 08:04:10 send: red alarm set, device FPC 1, reason FPC 1 Major Errors
- Error code: 559
```

First, you have to convert 559 to binary; that is **1000101111**. The LSB in this case is 1, which means that this is a major alarm. After removing the LSB, you are left with **100010111**, which is equal to 279 in decimal. This is the actual error code, its meaning can be found from the following list:

Chip Type: L Chip	Code
CMALARM_LCHIP_LOUT_DESRD_PARITY_ERR	1
CMALARM_LCHIP_LOUT_DESRD_UNINIT_ERR	2
CMALARM_LCHIP_LOUT_DESRD_ILLEGALLINK_ERR	3
CMALARM_LCHIP_LOUT_DESRD_ILLEGALSZERR	4
CMALARM_LCHIP_LOUT_HDRF_TOERR_ERR	5



CMALARM_LCHIP_LOUT_HDRF_PARITY_ERR	6
CMALARM_LCHIP_LOUT_HDRF_UCERR_ERR	7
CMALARM_LCHIP_LOUT_NLIF_CRCDROP_ERR	8
CMALARM_LCHIP_LOUT_NLIF_CRCERR_ERR	9
CMALARM_LCHIP_UCODE_TIMEOUT_ERR	10
CMALARM_LCHIP_LIN_SRCTL_ACCT_DROP_ERR	11
CMALARM_LCHIP_LIN_SRCTL_ACCT_ADDR_SIZE_ERR	12
CMALARM_LCHIP_SRAM_PARITY_ERR	13
CMALARM_LCHIP_UCODE_OVFLW_ERR	14
CMALARM_LCHIP_LOUT_HDRF_MTU_ERR	15

Chip Type: M Chip	Code
CMALARM_MCHIP_ECC_UNCORRECT_ERR	128

Chip Type: N Chip	Code
CMALARM_NCHIP_RDDMA_JBUS_TIMEOUT_ERR	256
CMALARM_NCHIP_RDDMA_FIFO_OVFLW_ERR	257
CMALARM_NCHIP_RDDMA_FIFO_UNFLW_ERR	258
CMALARM_NCHIP_RDDMA_SIZE_ERR	259
CMALARM_NCHIP_RDDMA_JBUS_CRC_ERR	260
CMALARM_NCHIP_WRDMA_PKTR_ERR	261
CMALARM_NCHIP_WRDMA_PKT_CRC_ERR	262
CMALARM_NCHIP_WRDMA_JBUS_TIMEOUT_ERR	263
CMALARM_NCHIP_WRDMA_FIFO_OVFLW_ERR	264
CMALARM_NCHIP_WRDMA_FIFO_UNFLW_ERR	265
CMALARM_NCHIP_WRDMA_PKT_LEN_ERR	266
CMALARM_NCHIP_WRDMA_JBUS_CRC_ERR	267

CMALARM_NCHIP_PKTR_DMA_AGE_ERR	268
CMALARM_NCHIP_PKTR_ICELLSIG_ERR	269
CMALARM_NCHIP_PKTR_FTTL_ERR	270
CMALARM_NCHIP_RODR_OFFSET_OVFLW_ERR	271
CMALARM_NCHIP_PKTR_TMO_CELL_ERR	272
CMALARM_NCHIP_PKTR_TMO_OUTRANGE_ERR	273
CMALARM_NCHIP_PKTR_MD_REQUEST_Q_OVFLW_ERR	274
CMALARM_NCHIP_PKTR_DMA_BUFFER_OVFLW_ERR	275
CMALARM_NCHIP_PKTR_GRT_OVFLW_ERR	276
CMALARM_NCHIP_FRQ_ERR	277
CMALARM_NCHIP_RODR_IN_Q_OVFLW_ERR	278
CMALARM_NCHIP_DBUF_CRC_ERR	279

Chip Type: R Chip	Code
CMALARM_RCHIP_SRAM_PARITY_ERR	512

Chip Type: R Chip	Code
CMALARM_ICHIP_WO_DESRD_ID_ERR	601
CMALARM_ICHIP_WO_DESRD_DATA_ERR	602
CMALARM_ICHIP_WO_DESRD_OFLOW_ERR	603
CMALARM_ICHIP_WO_HDRF_UCERR_ERR	604
CMALARM_ICHIP_WO_HDRF_MTUERR_ERR	605
CMALARM_ICHIP_WO_HDRF_PARITY_ERR	606
CMALARM_ICHIP_WO_HDRF_TOERR_ERR	607
CMALARM_ICHIP_WO_IP_CRC_ERR	608
CMALARM_ICHIP_WO_IP_INTER_ERR	609
CMALARM_ICHIP_WI_WAN_TIMEOUT_ERR	625

CMALARM_ICHIP_WI_FAB_TIMEOUT_ERR	626
CMALARM_ICHIP_RLDRAM_BIST_ERR	630
CMALARM_ICHIP_SDRAM_BIST_ERR	631
CMALARM_ICHIP_RLDRAM_PARITY_ERR	632
CMALARM_ICHIP_SDRAM_UNCORRECT_ERR	633
CMALARM_ICHIP_SDRAM_CORRECT_ERR	634
CMALARM_ICHIP_FUSE_DONE_ERR	635

According to the table above, the **279** error code corresponds to **CMALARM\_NCHIP\_DBUF\_CRC\_ERR**; this means that new CRC errors were seen on the NCHIP of this particular FPC, which is FPC as per the logs.

If you do not want to convert decimal to binary and vice versa, you may use the following shortcut:

For major alarms, the **Actual Error Code = (Error Code - 1)/2**, where **Error Code** is the code that you get in the log message. For example, if you get the following log:

```
Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major Errors - Error code: 257
```

Actual Error Code = (257-1)/2 = 128. Similarly, for minor alarms, Actual Error Code = (Error Code)/2



**NOTE:** Starting in Junos OS Release 18.2R1, on MX Series routers, the **show chassis alarms** output does not display error codes for PFE-related errors. You can use the following commands to view more details of the errors that caused the alarms:

- **show chassis errors active**
- **show chassis errors active detail**

**Required Privilege Level** view

- Related Documentation**
- *Configuring an RMON Alarm Entry and Its Attributes*
  - *Chassis Conditions That Trigger Alarms*

<b>List of Sample Output</b>	<a href="#">show chassis alarms (Alarms Active) on page 199</a>
	<a href="#">show chassis alarms (No Alarms Active) on page 199</a>
	<a href="#">show chassis alarms (Fan Tray) on page 199</a>
	<a href="#">show chassis alarms (MX150) on page 199</a>
	<a href="#">show chassis alarms (MX104 Router) on page 199</a>
	<a href="#">show chassis alarms (MX2010 Router) on page 200</a>
	<a href="#">show chassis alarms (MX2020 Router) on page 200</a>
	<a href="#">show chassis alarms (MX10003 Router) on page 200</a>
	<a href="#">show chassis alarms (MX204 Router) on page 200</a>
	<a href="#">show chassis alarms (MX2008 Router) on page 200</a>
	<a href="#">show chassis alarms (MX960, MX480, and MX240 Routers showing Major CB Failure) on page 201</a>
	<a href="#">show chassis alarms (PTX10008 Router) on page 201</a>
	<a href="#">show chassis alarms (T4000 Router) on page 201</a>
	<a href="#">show chassis alarms (Unreachable Destinations Present on a T Series Router) on page 202</a>
	<a href="#">show chassis alarms (FPC Offline Due to Unreachable Destinations on a T Series Router) on page 202</a>
	<a href="#">show chassis alarms (SCG Absent on a T Series Router) on page 202</a>
	<a href="#">show chassis alarms (Alarms Active on a TX Matrix Router) on page 202</a>
	<a href="#">show chassis alarms (TX Matrix Plus router with 3D SIBs) on page 203</a>
	<a href="#">show chassis alarms (Alarms on a T4000 Router After the enhanced-mode Statement is Enabled) on page 205</a>
	<a href="#">show chassis alarms (Backup Routing Engine) on page 205</a>
	<a href="#">show chassis alarms (EX Series Switch) on page 205</a>
	<a href="#">show chassis alarms (Alarms Active on the QFX Series and OCX Series Switches) on page 205</a>
	<a href="#">show chassis alarms node-device (Alarms Active on the QFabric System) on page 205</a>
	<a href="#">show chassis alarms (Alarms Active on the QFabric System) on page 206</a>
	<a href="#">show chassis alarms (Alarms Active on an EX8200 Switch) on page 206</a>
	<a href="#">show chassis alarms (EX9251 Switch) on page 206</a>
	<a href="#">show chassis alarms (EX9253 Switch) on page 207</a>
	<a href="#">show chassis alarms (Alarms Active on a PTX5000 Packet Transport Router) on page 207</a>
	<a href="#">show chassis alarms (Mix of PDUs Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A) on page 207</a>
	<a href="#">show chassis alarms (PDU Converter Failed Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A) on page 207</a>
	<a href="#">show chassis alarms (No Power for System Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A) on page 208</a>
	<a href="#">show chassis alarms (Alarms Active on an ACX2000 Universal Metro Router) on page 208</a>
	<a href="#">show chassis alarms (Active Alarm to Indicate Status of the Bad SCB Clock on MX Series) on page 208</a>
	<a href="#">show chassis alarms (Alarms active on a PTX1000 Packet Transport Router) on page 208</a>
	<a href="#">show chassis alarms (MX10003 Router) on page 209</a>
	<a href="#">show chassis alarms (Alarms active on a MX10008 Router) on page 210</a>

**Output Fields** Table 9 on page 199 lists the output fields for the **show chassis alarms** command. Output fields are listed in the approximate order in which they appear.

*Table 9: show chassis alarms Output Fields*

Field Name	Field Description
Alarm time	Date and time the alarm was first recorded.
Class	Severity class for this alarm: <b>Minor</b> or <b>Major</b> .
Description	Information about the alarm.

## Sample Output

### show chassis alarms (Alarms Active)

```
user@host> show chassis alarms

3 alarms are currently active
Alarm time      Class  Description
2000-02-07 10:12:22 UTC Major fxp0: ethernet link down
2000-02-07 10:11:54 UTC Minor YELLOW ALARM - PEM 1 Removed
2000-02-07 10:11:03 UTC Minor YELLOW ALARM - Lower Fan Tray Removed
```

### show chassis alarms (No Alarms Active)

```
user@host> show chassis alarms

No alarms are currently active
```

### show chassis alarms (Fan Tray)

```
user@host> show chassis alarms

4 alarms currently active
Alarm time      Class  Description
2010-11-11 20:27:38 UTC Major Side Fan Tray 7 Failure
2010-11-11 20:27:13 UTC Minor Side Fan Tray 7 Overspeed
2010-11-11 20:27:13 UTC Major Side Fan Tray 5 Failure
2010-11-11 20:27:13 UTC Major Side Fan Tray 0 Failure
```

### show chassis alarms (MX150)

```
user@host > show chassis alarms

1 alarms currently active
Alarm time      Class  Description
2016-06-04 01:49:43 PDT Major Fan Tray 1 Fan 0 failed
```

### show chassis alarms (MX104 Router)

```
user@host > show chassis alarms
```

```

1 alarms currently active
Alarm time      Class  Description
2013-06-05 14:43:31 IST  Minor  Backup RE Active

```

#### show chassis alarms (MX2010 Router)

```

user@host> show chassis alarms

7 alarms currently active
Alarm time      Class  Description
2012-08-07 00:46:06 PDT  Major  Fan Tray 2 Failure
2012-08-06 18:24:36 PDT  Minor  Redundant feed missing for PSM 6
2012-08-06 07:41:04 PDT  Minor  Redundant feed missing for PSM 8
2012-08-04 02:42:06 PDT  Minor  Redundant feed missing for PSM 5
2012-08-03 21:14:24 PDT  Minor  Loss of communication with Backup RE
2012-08-03 12:26:03 PDT  Minor  Redundant feed missing for PSM 4
2012-08-03 10:40:18 PDT  Minor  Redundant feed missing for PSM 7

```

#### show chassis alarms (MX2020 Router)

```

user@host> show chassis alarms

1 alarms currently active
Alarm time Class Description
2012-10-03 12:14:59 PDT Minor Plane 0 not online

```

#### show chassis alarms (MX10003 Router)

```

user@host> show chassis alarms

9 alarms currently active
Alarm time      Class  Description
2017-07-13 21:50:31 PDT  Major  FPC 1 Temperature Hot
2017-07-13 21:50:04 PDT  Minor  FPC 1 PIC 1 Invalid port profile configuration
2017-07-13 21:49:13 PDT  Minor  FPC 1 PIC 0 Invalid port profile configuration
2017-07-13 21:48:54 PDT  Major  FPC 0 Temperature Hot
2017-07-13 21:43:57 PDT  Minor  PEM 5 Not Present
2017-07-13 21:43:57 PDT  Minor  PEM 4 Not Present
2017-07-13 21:43:54 PDT  Minor  CB 1 Voltage Sensor ADS7830_0x4B Sensor Failed
2017-07-13 21:43:54 PDT  Minor  CB 0 Voltage Sensor ADS7830_0x4B Sensor Failed
2017-07-13 21:43:31 PDT  Minor  Loss of communication with Backup RE

```

#### show chassis alarms (MX204 Router)

```

user@host> show chassis alarms

1 alarms currently active
Alarm time      Class  Description
2017-11-05 22:13:03 PST  Major  PEM 0 Not Present

```

#### show chassis alarms (MX2008 Router)

```

user@host>show chassis alarms

No alarms currently active

```

**show chassis alarms (MX960, MX480, and MX240 Routers showing Major CB Failure)**

A major CB 0 failure alarm occurs in the event of a bad CB (unknown or mismatched CBs do not trigger this alarm in Junos Release OS 12.3R9 and later). Following GRES or recovery, if the hardware issue persists, the traffic moves to the good CB and continues. If the alarm was triggered by something transient like a power zone budget on GRES, bringing the CB back online can clear the alarm. Otherwise, replace the bad CB. Note that fabric link speed is not impacted by an offline SCB. The alarm might be raised on CB0, CB1, and CB2.

```
user@host> show chassis alarms
```

```
6 alarms currently active
Alarm time      Class Description
2014-10-31 16:49:41 EDT Major PEM 3 Not OK
2014-10-31 16:49:41 EDT Major PEM 2 Not OK
2014-10-31 16:49:31 EDT Major CB 0 Failure
2014-10-31 16:49:31 EDT Minor CB 0 Fabric Chip 0 Not Online
2014-10-31 16:49:31 EDT Minor CB 0 Fabric Chip 1 Not Online
2014-10-31 16:49:31 EDT Minor Backup RE Active
```

**show chassis alarms (PTX10008 Router)**

```
user@host>show chassis alarms
```

```
12 alarms currently active
Alarm time      Class Description
2017-05-09 01:38:55 PDT Minor Loss of communication with Backup RE
2017-05-05 06:49:57 PDT Major FPC 5 LCPU Temp Sensor Access Failed
2017-05-05 06:49:57 PDT Major FPC 5 PE2 Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 PE1 Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 PEO Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 Exhaust-C Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 Exhaust-B Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 Exhaust-A Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 Intake-B Temp Sensor Access Failed
2017-05-05 06:49:57 PDT Major FPC 5 Intake-A Temp Sensor Access Failed
2017-05-05 06:49:57 PDT Major Fan Tray 0 Fan 5 running at lower speed
2017-05-05 06:49:57 PDT Major Fan Tray 0 Fan 4 running at lower speed
```

**show chassis alarms (T4000 Router)**

```
user@host> show chassis alarms
```

```
9 alarms currently active
Alarm time      Class Description
2007-06-02 01:41:10 UTC Minor RE 0 Not Supported
2007-06-02 01:41:10 UTC Minor CB 0 Not Supported
2007-06-02 01:41:10 UTC Minor Mixed Master and Backup RE types
2007-05-30 19:37:33 UTC Major SPMB 1 not online
2007-05-30 19:37:29 UTC Minor Front Bottom Fan Tray Absent
2007-05-30 19:37:13 UTC Major PEM 1 Input Failure
2007-05-30 19:37:13 UTC Major PEM 0 Not OK
2007-05-30 19:37:03 UTC Major PEM 0 Improper for Platform
2007-05-30 19:37:03 UTC Minor Backup RE Active
```

**show chassis alarms (Unreachable Destinations Present on a T Series Router)**

```

user@host> show chassis alarms

10 alarms currently active
Alarm time      Class  Description
2011-08-30 18:43:53 PDT Major FPC 7 has unreachable destinations
2011-08-30 18:43:53 PDT Major FPC 5 has unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 3 has unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 2 has unreachable destinations
2011-08-30 18:43:52 PDT Minor SIB 0 Not Online
2011-08-30 18:43:33 PDT Minor SIB 4 Not Online
2011-08-30 18:43:28 PDT Minor SIB 3 Not Online
2011-08-30 18:43:05 PDT Minor SIB 2 Not Online
2011-08-30 18:43:28 PDT Minor SIB 1 Not Online
2011-08-30 18:43:05 PDT Major PEM 1 Not Ok

```

**show chassis alarms (FPC Offline Due to Unreachable Destinations on a T Series Router)**

```

user@host> show chassis alarms

10 alarms currently active
Alarm time      Class  Description
2011-08-30 18:43:53 PDT Major FPC 7 offline due to unreachable destinations
2011-08-30 18:43:53 PDT Major FPC 5 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 3 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 2 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Minor SIB 0 Not Online
2011-08-30 18:43:33 PDT Minor SIB 4 Not Online
2011-08-30 18:43:28 PDT Minor SIB 3 Not Online
2011-08-30 18:43:05 PDT Minor SIB 2 Not Online
2011-08-30 18:43:28 PDT Minor SIB 1 Not Online
2011-08-30 18:43:05 PDT Major PEM 1 Not Ok

```

**show chassis alarms (SCG Absent on a T Series Router)**

```

user@host> show chassis alarms

4 alarms currently active
Alarm time      Class  Description
2011-01-23 21:42:46 PST Major SCG 0 NO EXT CLK MEAS-BKUP SCG ABS

```

**show chassis alarms (Alarms Active on a TX Matrix Router)**

```

user@host> show chassis alarms

scc-re0:
-----
8 alarms currently active
Alarm time      Class  Description
2004-08-05 18:43:53 PDT Minor LCC 0 Minor Errors
2004-08-05 18:43:53 PDT Minor SIB 3 Not Online
2004-08-05 18:43:52 PDT Major SIB 2 Absent
2004-08-05 18:43:52 PDT Major SIB 1 Absent
2004-08-05 18:43:52 PDT Major SIB 0 Absent
2004-08-05 18:43:33 PDT Major LCC 2 Major Errors
2004-08-05 18:43:28 PDT Major LCC 0 Major Errors
2004-08-05 18:43:05 PDT Minor LCC 2 Minor Errors
lcc0-re0:
-----

```



```

5 alarms currently active
Alarm time      Class  Description
2004-08-05 18:43:53 PDT  Minor  SIB 3 Not Online
2004-08-05 18:43:49 PDT  Major  SIB 2 Absent
2004-08-05 18:43:49 PDT  Major  SIB 1 Absent
2004-08-05 18:43:49 PDT  Major  SIB 0 Absent
2004-08-05 18:43:28 PDT  Major  PEM 0 Not OK
lcc2-re0:

```

```

-----
5 alarms currently active
Alarm time      Class  Description
2004-08-05 18:43:35 PDT  Minor  SIB 3 Not Online
2004-08-05 18:43:33 PDT  Major  SIB 2 Absent
2004-08-05 18:43:33 PDT  Major  SIB 1 Absent
2004-08-05 18:43:33 PDT  Major  SIB 0 Absent
2004-08-05 18:43:05 PDT  Minor  PEM 1 Absent

```

### show chassis alarms (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis alarms
```

```

sfc0-re0:
-----
Alarm time      Class  Description
2014-04-08 14:35:13 IST  Minor  FPM 0 SFC Config Size Changed
2014-04-08 14:32:58 IST  Major  Fan Tray Failure
2014-04-08 14:31:53 IST  Major  SIB F13 6 Fault
2014-04-08 14:31:43 IST  Major  SIB F13 11 Fault
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 3 Fbr Cbl
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 15 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 14 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 14
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 10 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 8 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 8
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 7 fault
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 4 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 3 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 3
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 12 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 6 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 4 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 2 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 0 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 14 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 14
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 12 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 12
2014-04-08 14:31:08 IST  Major  SIB F13 6 CXP 10 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 8 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 8
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 6 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 6
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 4 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 4

```

```

2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 2 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 2
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 0 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 0
2014-04-08 14:31:08 IST Minor SIB F13 12 CXP 14 XC HSL Link Error
2014-04-08 14:29:27 IST Minor LCC 0 Minor Errors
2014-04-08 14:28:37 IST Major LCC 0 Major Errors
2014-04-08 14:28:37 IST Major LCC 2 Major Errors
2014-04-08 14:28:37 IST Minor LCC 2 Minor Errors
2014-04-08 14:28:24 IST Major SIB F2S 4/6 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/4 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/2 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/0 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/6 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/4 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/2 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/0 Absent
2014-04-08 14:28:24 IST Major SIB F13 9 Absent
2014-04-08 14:28:24 IST Major SIB F13 8 Absent
2014-04-08 14:28:24 IST Major SIB F13 7 Absent
2014-04-08 14:28:24 IST Major SIB F13 4 Absent
2014-04-08 14:28:24 IST Major SIB F13 1 Absent
2014-04-08 14:28:22 IST Major PEM 0 Input Failure
2014-04-08 14:28:22 IST Major PEM 0 Not OK

```

lcc0-re0:

-----

12 alarms currently active

Alarm time	Class	Description
2014-04-08 14:36:08 IST	Minor	CB 1 M/S Switch Changed
2014-04-08 14:36:08 IST	Minor	CB 1 CHASSIS ID Changed
2014-04-08 14:35:43 IST	Minor	CB 0 M/S Switch Changed
2014-04-08 14:35:43 IST	Minor	CB 0 CHASSIS ID Changed
2014-04-08 14:29:30 IST	Minor	SIB 4 Not Online
2014-04-08 14:29:30 IST	Minor	SIB 3 Not Online
2014-04-08 14:29:30 IST	Minor	SIB 2 Not Online
2014-04-08 14:29:24 IST	Major	Rear Fan Tray Failure
2014-04-08 14:29:24 IST	Major	Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:24 IST	Major	Front Top Fan Tray Improper for Platform
2014-04-08 14:28:37 IST	Major	SIB 4 Absent
2014-04-08 14:28:37 IST	Major	SIB 3 Absent

lcc2-re0:

-----

12 alarms currently active

Alarm time	Class	Description
2014-04-08 14:36:02 IST	Minor	CB 1 M/S Switch Changed
2014-04-08 14:36:02 IST	Minor	CB 1 CHASSIS ID Changed
2014-04-08 14:35:42 IST	Minor	CB 0 M/S Switch Changed
2014-04-08 14:34:42 IST	Minor	CB 0 CHASSIS ID Changed
2014-04-08 14:29:29 IST	Minor	SIB 0 CXP 7 Unsupported Optics
2014-04-08 14:29:27 IST	Major	Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:27 IST	Major	Front Top Fan Tray Improper for Platform
2014-04-08 14:29:25 IST	Minor	SIB 4 Not Online
2014-04-08 14:29:25 IST	Minor	SIB 3 Not Online
2014-04-08 14:28:47 IST	Major	PEM 0 Not OK
2014-04-08 14:28:36 IST	Major	SIB 2 Absent
2014-04-08 14:28:36 IST	Minor	Host 0 Boot from alternate media

lcc6-re0:

```
-----
2 alarms currently active
Alarm time           Class Description
2013-11-06 04:03:56 PST Minor SIB 1 CXP 0 XC HSL Link Error
2013-11-06 03:49:32 PST Major PEM 1 Not OK
```

### show chassis alarms (Alarms on a T4000 Router After the enhanced-mode Statement is Enabled)

To enable improved virtual private LAN service (VPLS) MAC address learning on T4000 routers, you must include the **enhanced-mode** statement at the **[edit chassis network-services]** hierarchy level and reboot the router. When router reboots, only the T4000 Type 5 FPCs are required to be present on the router. If there are any other FPCs (apart from T4000 Type 5 FPCs) on the T4000 router, such FPCs become offline, and FPC misconfiguration alarms are generated. The **show chassis alarm** command output displays FPC misconfiguration (**FPC *fpc-slot* misconfig**) as the reason for the generation of the alarms.

```
user@host> show chassis alarms

2 alarms currently active
Alarm time           Class Description
2011-10-22 10:10:47 PDT Major FPC 1 misconfig
2011-10-22 10:10:46 PDT Major FPC 0 misconfig
```

### show chassis alarms (Backup Routing Engine)

```
user@host> show chassis alarms

2 alarms are currently active
Alarm time           Class Description
2005-04-07 10:12:22 PDT Minor Host 1 Boot from alternate media
2005-04-07 10:11:54 PDT Major Host 1 compact-flash missing in Boot List
```

### show chassis alarms (EX Series Switch)

```
user@switch> show chassis alarms

4 alarms currently active
Alarm time           Class Description
2014-03-12 15:36:09 UTC Minor Require a Fan Tray upgrade
2014-03-12 15:00:02 UTC Major PEM 0 Input Failure
2014-03-12 15:00:02 UTC Major PEM 0 Not OK
2014-03-12 14:59:51 UTC Minor Host 1 Boot from alternate media
```

### show chassis alarms (Alarms Active on the QFX Series and OCX Series Switches)

```
user@switch> show chassis alarms

1 alarms currently active
Alarm time           Class Description
2012-03-05 2:10:24 UTC Major FPC 0 PEM 0 Airflow not matching Chassis Airflow
```

### show chassis alarms node-device (Alarms Active on the QFabric System)

```
user@switch> show chassis alarms node-device Test
```

```
node-device ED3694
3 alarms currently active
Alarm time          Class Description
2011-08-24 16:04:15 UTC Major Test:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC Major Test:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC Major Test PEM 0 is not supported/powered
```

### show chassis alarms (Alarms Active on the QFabric System)

```
user@switch> show chassis alarms
```

```
IC-1:
```

```
-----
1 alarms currently active
Alarm time          Class Description
2011-08-24 16:04:15 UTC Minor Backup RE Active
```

```
Test:
```

```
-----
3 alarms currently active
Alarm time          Class Description
2011-08-24 16:04:15 UTC Major Test:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC Major Test:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC Major Test PEM 0 is not supported/powered
```

```
SNG-0:
```

```
NW-NG-0:
```

```
-----
1 alarms currently active
Alarm time          Class Description
2011-08-24 15:49:27 UTC Major Test PEM 0 is not supported/powered
```

### show chassis alarms (Alarms Active on an EX8200 Switch)

```
user@switch> show chassis alarms
```

```
6 alarms currently active
Alarm time          Class Description
2010-12-02 19:15:22 UTC Major Fan Tray Failure
2010-12-02 19:15:22 UTC Major Fan Tray Failure
2010-12-02 19:15:14 UTC Minor Check CB 0 Fabric Chip 1 on Plane/FPC/PFE: 1/5/0,
1/5/1, 1/5/2, 1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:15:14 UTC Minor Check CB 0 Fabric Chip 0 on Plane/FPC/PFE: 1/5/0,
1/5/1, 1/5/2, 1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:14:18 UTC Major PSU 1 Output Failure
2010-12-02 19:14:18 UTC Minor Loss of communication with Backup RE
```

### show chassis alarms (EX9251 Switch)

```
user@switch> show chassis alarms
```

```
2 alarms currently active
Alarm time          Class Description
2018-03-08 05:13:10 PST Major PEM 0 Not Powered
2018-03-08 05:13:10 PST Major Fan Tray 2 is not present
```

### show chassis alarms (EX9253 Switch)

```
user@switch> show chassis alarms
```

```
6 alarms currently active
```

Alarm time	Class	Description
2018-03-07 01:09:01 PST	Major	Power Budget:Insufficient Power
2018-03-06 23:56:34 PST	Minor	Loss of communication with Backup RE
2018-02-15 00:48:10 PST	Minor	PEM 3 Not Present
2018-02-15 00:48:10 PST	Minor	PEM 2 Not Present
2018-02-15 00:48:07 PST	Major	PEM 4 Not Powered
2018-02-15 00:48:07 PST	Major	PEM 1 Not Powered

### show chassis alarms (Alarms Active on a PTX5000 Packet Transport Router)

```
user@host> show chassis alarms
```

```
23 alarms currently active
```

Alarm time	Class	Description
2011-07-12 16:22:05 PDT	Minor	No Redundant Power for Rear Chassis
2011-07-12 16:22:05 PDT	Major	PDU 0 PSM 1 Not OK
2011-07-12 16:21:57 PDT	Minor	No Redundant Power for Fan 0-2
2011-07-12 16:21:57 PDT	Major	PDU 0 PSM 0 Not OK
2011-07-12 15:56:06 PDT	Major	PDU 1 PSM 2 Not OK
2011-07-12 15:56:06 PDT	Minor	No Redundant Power for FPC 0-7
2011-07-12 15:56:06 PDT	Major	PDU 0 PSM 3 Not OK
2011-07-12 15:28:20 PDT	Major	PDU 0 PSM 2 Not OK
2011-07-12 15:19:14 PDT	Minor	Backup RE Active

### show chassis alarms (Mix of PDUs Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA)

All PDUs installed on a PTX5000 router must be of the same type. The **Mix of PDUs** or **Power Manager Non Operational** alarm is raised when different types of PDUs are installed on a PTX5000 router.

```
user@host> show chassis alarms
```

```
15 alarms currently active
```

Alarm time	Class	Description
2013-03-19 23:03:53 PDT	Minor	No Redundant Power
<b>2013-03-19 23:03:48 PDT</b>	<b>Minor</b>	<b>Mix of PDUs</b>
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 3 Absent
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 2 Absent
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 1 Absent
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 0 Absent
2013-03-19 23:03:46 PDT	Major	No CG Online

### show chassis alarms (PDU Converter Failed Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA)

The **PDU Converter Failed** alarm is raised when one or more 36 V booster converter of a DC PDU fails. If two or more 36 V booster converter fails, fan trays fail and the router might get over heated. Therefore, when this alarm is raised, check the PDU and replace it, if required.

```
user@host> show chassis alarms
```

```

11 alarms currently active
Alarm time      Class  Description
2013-12-11 22:14:13 PST  Minor  No Redundant Power for System
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 7 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 6 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 5 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 4 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 3 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 2 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 1 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 0 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 Not OK
2013-12-11 22:14:01 PST  Major  PDU 0 Converter Failed

```

#### show chassis alarms (No Power for System Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA)

```

user@host> show chassis alarms

8 alarms currently active
Alarm time      Class  Description
2013-11-19 01:58:41 PST  Major  No Power for System
2013-11-19 01:58:37 PST  Major  PDU 0 PSM 1 Not OK
2013-11-19 01:56:46 PST  Major  PDU 0 PSM 2 Not OK
2013-11-19 01:54:26 PST  Major  PDU 0 PSM 3 Not OK
2013-11-19 01:53:30 PST  Major  PDU 1 PSM 3 Not OK
2013-11-19 01:53:29 PST  Major  PDU 1 PSM 2 Not OK
2013-11-19 01:53:29 PST  Major  PDU 1 PSM 1 Not OK
2013-11-19 01:53:29 PST  Major  PDU 1 PSM 0 Not OK

```

#### show chassis alarms (Alarms Active on an ACX2000 Universal Metro Router)

```

user@host> show chassis alarms

7 alarms currently active
Alarm time      Class  Description
2012-05-22 11:19:09 UTC  Major  xe-0/3/1: Link down
2012-05-22 11:19:09 UTC  Major  xe-0/3/0: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/7: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/6: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/3: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/2: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/1: Link down

```

#### show chassis alarms (Active Alarm to Indicate Status of the Bad SCB Clock on MX Series)

```

user@host> show chassis alarms

1 alarm currently active
Alarm time      Class  Description
2013-08-06 07:48:35 PDT  Major  CB 0 19.44 MHz clock failure

```

#### show chassis alarms (Alarms active on a PTX1000 Packet Transport Router)

```

user@host> show chassis alarms

2 alarms currently active
Alarm time      Class  Description
2004-08-10 00:55:49 UTC  Major  PEM 1 Not Present
2004-08-10 00:55:49 UTC  Major  PEM 0 Not Present

```

**show chassis alarms (MX10003 Router)**

If LCMD is down on the backup RE, then the following alarm is seen on the Master.

```
user@host> show chassis alarms
```

```
1 alarm currently active
Alarm time      Class  Description
2017-05-09 13:26:27 PDT Major  VMHost RE 1 host application failed
```

If LCMD is down on the master, then following alarms are displayed.

```
user@host> show chassis alarms
```

```
3 alarms currently active
Alarm time      Class  Description
2017-05-10 14:12:21 PDT Major  VMHost RE 0 host application failed
2017-05-10 14:12:16 PDT Minor  LCM Peer Absent
2017-05-09 13:26:27 PDT Major  VMHost RE 1 host application failed
```

If the LCMD process is crashing on the master, the system will switchover after one minute provided the backup RE LCMD connection is stable. The system will not switchover under the following conditions: if the backup RE LCMD connection is unstable or if the current master just gained mastership. When the master has just gained mastership, the switchover happens only after four minutes.

The LCM peer connection un-stable alarm is raised when the LCMD-CHASD IPC communication flaps three times within a small interval of two to three minutes. Once LCM peer connection un-stable alarm is raised, the connection status is monitored for two minutes.

```
user@host> show chassis alarms
```

```
7 alarms currently active
Alarm time      Class  Description
2017-05-29 10:12:17 PDT Minor  LCM Peer Connection un-stable
2017-05-29 09:04:17 PDT Minor  PEM 8 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 9 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 7 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 3 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 0 Not Powered
2017-05-29 09:04:08 PDT Minor  Loss of communication with Backup RE
```

If there are no more connection flaps within this two minutes time interval, the LCM peer connection un-stable alarm is cleared.

```
6 alarms currently active
Alarm time      Class  Description
2017-05-29 09:04:17 PDT Minor  PEM 8 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 9 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 7 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 3 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 0 Not Powered
2017-05-29 09:04:08 PDT Minor  Loss of communication with Backup RE
```

A major alarm is raised even if there is on one PLL lock error, and this alarm can be cleared only through an FPC restart.

```
user@host> show chassis alarms
```

```
4 alarms currently active
```

Alarm time	Class	Description
2017-02-16 09:06:06 PDT	Major	FPC 0 Major Errors
2017-02-16 09:08:40 PDT	Major	FPC 1 Major Errors
2017-02-16 09:11:47 PST	Minor	Fan Tray 3 Pair 1 Outer Fan running at over speed
2017-02-16 09:11:47 PST	Minor	Fan Tray 3 Pair 1 Inner Fan running at over speed

#### show chassis alarms (Alarms active on a MX10008 Router)

```
user@host> show chassis alarms
```

```
13 alarms currently active
```

Alarm time	Class	Description
2018-07-17 05:48:08 PDT	Major	FPC 2 I2C Failure
2018-07-17 05:47:02 PDT	Minor	Mixed Master and Backup RE types
2018-07-17 05:47:01 PDT	Major	Fan Tray 0 Fan 5 Failed
2018-07-17 05:47:01 PDT	Major	Fan Tray 0 Fan 4 Failed
2018-07-17 05:47:01 PDT	Minor	PEM 5 Not Powered
2018-07-17 05:47:01 PDT	Minor	PEM 5 Feed 2 has no input source
2018-07-17 05:47:01 PDT	Minor	PEM 5 Feed 1 has no input source
2018-07-17 05:47:01 PDT	Minor	PEM 4 Not Powered
2018-07-17 05:47:01 PDT	Minor	PEM 4 Feed 2 has no input source
2018-07-17 05:47:01 PDT	Minor	PEM 4 Feed 1 has no input source
2018-07-17 05:47:01 PDT	Minor	PEM 3 Not Powered
2018-07-17 05:47:01 PDT	Minor	PEM 3 Feed 2 has no input source
2018-07-17 05:47:01 PDT	Minor	PEM 3 Feed 1 has no input source



## show chassis environment

<b>List of Syntax</b>	<a href="#">Syntax on page 211</a>
	<a href="#">Syntax (T320, T640, T1600, and T4000 Routers) on page 211</a>
	<a href="#">Syntax (TX Matrix Routers) on page 211</a>
	<a href="#">Syntax (TX Matrix Plus Routers) on page 211</a>
	<a href="#">Syntax (MX Series Routers) on page 212</a>
	<a href="#">Syntax (MX104 Universal Routing Platforms) on page 212</a>
	<a href="#">Syntax (MX150 Router Appliance) on page 212</a>
	<a href="#">Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms) on page 212</a>
	<a href="#">Syntax (MX10003 and MX204 Universal Routing Platforms) on page 212</a>
	<a href="#">Syntax (EX8200 Switches) on page 212</a>
	<a href="#">Syntax (EX Series Switches except EX8200) on page 213</a>
	<a href="#">Syntax (QFX Series) on page 213</a>
	<a href="#">Syntax (OCX Series) on page 213</a>
	<a href="#">Syntax (PTX Series Packet Transport Routers) on page 213</a>
	<a href="#">Syntax (ACX Series Universal Metro Routers) on page 213</a>
	<a href="#">Syntax (ACX5048 and ACX5096 Routers) on page 213</a>
	<a href="#">Syntax (ACX500 Routers) on page 213</a>

<b>Syntax</b>	<b>show chassis environment</b>
---------------	---------------------------------

<b>Syntax (T320, T640, T1600, and T4000 Routers)</b>	<pre>show chassis environment &lt;cb cb-slot-number&gt; &lt;fpc fpc-slot-number&gt; &lt;fpm&gt; &lt;pem pem-slot-number&gt; &lt;routing-engine re-slot-number&gt; &lt;scg scg-slot-number&gt; &lt;sib sib-slot-number&gt;</pre>
--	---

<b>Syntax (TX Matrix Routers)</b>	<pre>show chassis environment &lt;lcc number   scc&gt;</pre>
-----------------------------------	--

<b>Syntax (TX Matrix Plus Routers)</b>	<pre>show chassis environment &lt;cb cb-slot-number&gt; &lt;cip cip-slot-number&gt; &lt;fpc fpc-slot-number&gt; &lt;fpm&gt; &lt;lcc number&gt; &lt;pem pem-slot-number&gt; &lt;routing-engine re-slot-number&gt; &lt;scg scg-slot-number&gt; &lt;sfc number&gt; &lt;sib sib-slot-number&gt;</pre>
--	---

Syntax (MX Series Routers)	<pre>show chassis environment &lt;all-members&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt;</pre>
Syntax (MX104 Universal Routing Platforms)	<pre>show chassis environment &lt;cb&gt; &lt;pem <i>pem-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt;</pre>
Syntax (MX150 Router Appliance)	<pre>show chassis environment &lt;pem <i>pem-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt;</pre>
Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms)	<pre>show chassis environment &lt;adc <i>adc-slot-number</i>&gt; &lt;all-members&gt; &lt;cb <i>cb-slot-number</i>&gt; &lt;fan <i>fantray-slot-number</i>&gt; &lt;fpc <i>fpc-slot-number</i>&gt; &lt;fpm&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt; &lt;monitored&gt; &lt;psm <i>psm-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt; &lt;sfb <i>sfb-slot-number</i>&gt; &lt;satellite [<i>fpc-slot slot-id</i> [<i>device-alias alias-name</i>]]&gt;</pre>
Syntax (MX10003 and MX204 Universal Routing Platforms)	<pre>show chassis environment &lt;cb <i>cb-slot-number</i>&gt; &lt;fpc <i>fpc-slot-number</i>&gt; &lt;pem <i>pem-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt;</pre>
Syntax (EX8200 Switches)	<pre>show chassis environment &lt;all-members&gt; &lt;cb <i>cb-slot-number</i>&gt; &lt;fpc <i>fpc-slot-number</i>&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt; &lt;psu <i>psu-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt;</pre>

Syntax (EX Series Switches except EX8200)	<pre>show chassis environment &lt;all-members&gt; &lt;fpc fpc-slot-number&gt; &lt;local&gt; &lt;member member-id&gt; &lt;power-supply-unit&gt; &lt;routing-engine&gt; &lt;satellite [fpc-slot slot-id  device-alias alias-name]&gt;</pre>
Syntax (QFX Series)	<pre>show chassis environment &lt;cb slot-number &lt;interconnect-device name&gt;&gt; &lt;fpc slot-number &lt;interconnect-device name&gt;&gt; &lt;interconnect-device name &lt;slot-number&gt; &lt;node-device name&gt; &lt;pem slot-number (interconnect-device name slot-number)   (node-device name)&gt; &lt;routing-engine name &lt;interconnect-device name slot-number&gt;&gt;</pre>
Syntax (OCX Series)	<pre>show chassis environment</pre>
Syntax (PTX Series Packet Transport Routers)	<pre>show chassis environment &lt;cb cb-slot-number&gt; &lt;ccg ccg-slot-number &gt; &lt;fpc fpc-slot-number&gt; &lt;fpm&gt; &lt;monitored&gt; &lt;pdu pdu-slot-number&gt; &lt;routing-engine re-slot-number&gt; &lt;sib sib-slot-number&gt;</pre>
Syntax (ACX Series Universal Metro Routers)	<pre>show chassis environment &lt;cb cb-slot-number&gt; &lt;pem pem-slot-number&gt; &lt;routing-engine re-slot-number&gt;</pre>
Syntax (ACX5048 and ACX5096 Routers)	<pre>show chassis environment &lt;fpc slot-number&gt; &lt;pem&gt; &lt;routing-engine&gt;</pre>
Syntax (ACX500 Routers)	<pre>show chassis environment &lt;cb cb-slot-number&gt; &lt;routing-engine re-slot-number&gt;</pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>

**sfc** option introduced for the TX Matrix Plus router in Junos OS Release 9.6.  
Command introduced in Junos OS Release 11.1 for QFX Series.  
Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.  
**monitored** option added in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.  
Command introduced in Junos OS Release 12.1 for T4000 Core Routers.  
Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.  
Command introduced in Junos OS Release 12.3 for MX 2020 and MX2010 Universal Routing Platforms.  
**pem** option introduced in Junos OS Release 12.3 for ACX4000 Universal Metro Routers.  
**satellite** option introduced in Junos OS Release 14.2R3.  
**all-members**, **local**, and **member** *member-id* options introduced in Junos OS Release 15.1 for MX2010 and MX2020 routers.  
Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.  
Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.  
Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.  
Command introduced in Junos OS Release 17.2 for PTX10008 Routers.  
Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.  
Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.  
Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.  
Command introduced in Junos OS Release 18.2 for EX9253 Switches.  
Command introduced in Junos OS Release 18.2R1 for MX10008 Routers.

**Description** Display environmental information about the router or switch chassis, including the temperature and information about the fans, power supplies, and Routing Engine.

In addition, on ACX4000 routers, display temperature information about the different channels of a Modular Interface Card (MIC). The number of channels displayed depends on the type of MIC installed.

Starting with Junos OS Release 14.1, the **show chassis environment cb cb-slot-number | ccg ccg-slot-number | fpc fpc-slot-number | fpm | monitored | pdu pdu-slot-number | routing-engine re-slot-number | sib sib-slot-number** operational mode command output displays environmental information for the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-PIA) and other components in a PTX5000 Packet Transport Router.

**Options** **none**—Display environmental information about the router or switch chassis. On a TX Matrix router, display environmental information about the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about the TX Matrix Plus router and its attached routers.

**all-members**—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for all the members of the Virtual Chassis configuration.

**adc adc-slot-number**—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the adapter cards. For MX2020 routers, replace

**adc-slot-number** with a value from 0 through 19. For MX2010 and MX2008 routers, replace **adc-slot-number** with a value from 0 through 9.

**cb cb-slot-number**—(ACX Series Universal Metro Routers, EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2020 routers, MX2010 routers, MX2008 routers, PTX Series Packet Transport Routers, QFX Series, and T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Control Board. On devices other than EX Series switches, replace **cb-slot** with 0 or 1.

**cip cip-slot-number**—(TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Connection Interface Panel (CIP). Replace the **cip-slot-number** variable with a value of 0 or 1.

**cb interconnect-device name**—(QFabric systems only) (Optional) Display chassis environmental information for the Control Board on an Interconnect device.

**ccg ccg-slot-number**—(PTX Series only) (Optional) Display chassis environmental information for the Centralized Clock Generator. Replace **cb-slot** with a value of 0 or 1.

**fan fantray-slot-number**—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the fan trays. Replace **fantray-slot-number** with a value from 0 through 3.

**fpc fpc-slot**—(EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2010 routers, MX2020 routers, MX2008 routers, PTX Series Packet Transport Routers, QFX Series, QFX3500 switches, QFabric systems, T Series routers, and TX Matrix Plus routers) (Optional) Display chassis environmental information for a specified Flexible PIC Concentrator. For MX2010 and MX2008 routers, replace **fpc-slot** with a value from 0 through 9. For MX2020 routers, replace **fpc-slot** with a value from 0 through 19. For information about FPC numbering, see [show chassis environment fpc](#). On a QFabric system, display chassis environmental information for a specified Flexible PIC Concentrator on an Interconnect device. On an EX Series switch, display chassis environmental information for a specified Flexible PIC Concentrator; see the hardware documentation for your switch for information on FPC numbering. On a TX Matrix Plus router with 3D SIBs replace **fpc-slot** with a value from 0 through 63.

**fpm**—(M120, M320, and M40e routers, MX2010 routers, MX2020 routers, MX2008 routers, PTX Series, Packet Transport Routers, T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the craft interface (FPM).

**interconnect-device name**—(QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.

**lcc number**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for the local Virtual Chassis member.

**member *member-id***—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for the specified member of the Virtual Chassis configuration. On MX Series routers, replace *member-id* with a value of **0** or **1**. For EX Series switches, see *member* for member ID values.

**monitored**—(MX2020 routers and PTX Series Packet Transport Routers only) (Optional) Display chassis environmental information for monitored temperatures only. Temperatures that are not included in temperature alarm computations are not displayed.

**node-device *name***—(QFabric systems only) (Optional) Display chassis environmental information for the Node device.

**pdu *pdu-slot-number***—(PTX Series only) (Optional) Display chassis environmental information for the specified power distribution unit.

**pem**—(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Interconnect device or Node device.

**pem *pem-slot-number***—(ACX Series Universal Metro Routers, M120, M320, and M40e routers, MX Series routers, MX104 routers, QFX Series, and T Series routers only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Power Entry Module. For information about the options, see [show chassis environment pem](#).

**psm *psm-slot-number***—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the power supply module. For MX2020 routers, replace *psm-slot-number* with a value from **0** through **17**. For MX2010 and MX2008 routers, replace *psm-slot-number* with a value from **0** through **8**.

**psu *psu-slot-number***—(EX Series switches only) (Optional) Display chassis environmental information for a specified power supply.

**routing-engine**—(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Routing Engine on the specified Interconnect device.

**routing-engine re-slot-number**—(Optional) Display chassis environmental information for the specified Routing Engine. For information about the options, see [show chassis environment routing-engine](#).

**satellite [fpc-slot slot-id | device-alias alias-name]**—(Junos Fusion only)(Optional) Display chassis environmental information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scg**—(T Series routers only) (Optional) Display chassis environmental information about the SONET Clock Generator.

**scc**—(TX Matrix routers only) (Optional) Display chassis environmental information about the TX Matrix router (switch-card chassis).

**sfb sfb-slot-number**—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the switch fabric board. Replace **sfb-slot-number** with a value from 0 through 7.

**sfc number**—(TX Matrix Plus routers only) (Optional) Display chassis environmental information about the respective TX Matrix Plus router ( switch-fabric chassis). Replace **number** variable with 0.

**sib sib-slot-number**—(M320 routers, PTX Series Packet Transport Routers, and T Series routers only) (Optional) Display chassis environmental information about the specified switch interface board. For information about the options, see [show chassis environment sib](#).

**Required Privilege Level** view

**Related Documentation**

- [show chassis environment adc](#)
- [show chassis environment cb](#)
- [show chassis environment ccg](#)
- [show chassis environment cip](#)
- [show chassis environment fpc on page 296](#)
- [show chassis environment fpm](#)
- [show chassis environment lcc](#)
- [show chassis environment mcs](#)
- [show chassis environment monitored](#)
- [show chassis environment pcg](#)

- *show chassis environment pdu*
- [show chassis environment pem on page 356](#)
- *show chassis environment psm*
- *show chassis environment psu*
- [show chassis environment routing-engine on page 371](#)
- *show chassis environment scg*
- *show chassis environment sfb*
- *show chassis environment sib*
- *show chassis environment sfc*

#### List of Sample Output

- [show chassis environment \(M5 Router\) on page 221](#)
- [show chassis environment \(M7i Router\) on page 221](#)
- [show chassis environment \(M10 Router\) on page 222](#)
- [show chassis environment \(M10i Router\) on page 222](#)
- [show chassis environment \(M20 Router\) on page 223](#)
- [show chassis environment \(M40 Router\) on page 223](#)
- [show chassis environment \(M40e Router\) on page 223](#)
- [show chassis environment \(M120 Router\) on page 224](#)
- [show chassis environment \(M160 Router\) on page 225](#)
- [show chassis environment \(M320 Router\) on page 226](#)
- [show chassis environment \(MX150\) on page 226](#)
- [show chassis environment \(MX104 Router\) on page 227](#)
- [show chassis environment \(MX240 Router\) on page 227](#)
- [show chassis environment \(MX240 Router with SCBE\) on page 228](#)
- [show chassis environment \(MX480 Router\) on page 229](#)
- [show chassis environment \(MX480 Router with SCBE\) on page 230](#)
- [show chassis environment \(MX960 Router\) on page 231](#)
- [show chassis environment \(MX960 Router with SCBE\) on page 232](#)
- [show chassis environment \(MX960 Router with MPC5EQ\) on page 234](#)
- [show chassis environment \(MX2020 Router\) on page 238](#)
- [show chassis environment \(MX2020 Router with MPC5EQ and MPC6E\) on page 248](#)
- [show chassis environment \(MX2010 Router\) on page 252](#)
- [show chassis environment \(MX2008 Router\) on page 257](#)
- [show chassis environment \(T320 Router\) on page 261](#)
- [show chassis environment \(MX10003 Router\) on page 262](#)
- [show chassis environment \(MX10008 Router\) on page 263](#)
- [show chassis environment \(MX204 Router\) on page 267](#)
- [show chassis environment \(T640 Router\) on page 268](#)
- [show chassis environment \(T4000 Router\) on page 269](#)
- [show chassis environment \(TX Matrix Router\) on page 270](#)
- [show chassis environment \(T1600 Router\) on page 272](#)
- [show chassis environment \(TX Matrix Plus Router\) on page 273](#)
- [show chassis environment \(TX Matrix Plus router with 3D SIBs\) on page 275](#)
- [show chassis environment \(EX4200 Standalone Switch\) on page 278](#)



[show chassis environment \(EX8216 Switch\) on page 279](#)  
[show chassis environment \(EX9200 Switch\) on page 279](#)  
[show chassis environment \(EX9251 Switch\) on page 280](#)  
[show chassis environment \(EX9253 Switch\) on page 280](#)  
[show chassis environment \(QFX Series and OCX Series\) on page 281](#)  
[show chassis environment interconnect-device \(QFabric System\) on page 282](#)  
[show chassis environment node-device \(QFabric System\) on page 284](#)  
[show chassis environment pem node-device \(QFabric System\) on page 284](#)  
[show chassis environment \(PTX5000 Packet Transport Router\) on page 284](#)  
[show chassis environment \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 287](#)  
[show chassis environment \(PTX1000 Packet Transport Router\) on page 287](#)  
[show chassis environment \(PTX10008 Router\) on page 288](#)  
[show chassis environment \(PTX10016 Router\) on page 290](#)  
[show chassis environment \(ACX2000 Universal Metro Router\) on page 293](#)  
[show chassis environment \(ACX4000 Universal Metro Router\) on page 293](#)  
[show chassis environment \(ACX5048 Router\) on page 294](#)  
[show chassis environment \(ACX5096 Router\) on page 294](#)  
[show chassis environment \(ACX500 Router\) on page 295](#)

**Output Fields** [Table 10 on page 220](#) lists the output fields for the **show chassis environment** command. Output fields are listed in the approximate order in which they appear.

Table 10: show chassis environment Output Fields

Field Name	Field Description
<b>Class</b>	<p>Information about the category or class of chassis component:</p> <ul style="list-style-type: none"> <li>• <b>Power:</b> Power information: <ul style="list-style-type: none"> <li>• (M5, M10, M20, and M40 routers and EX Series switches only) Power supply status: <b>OK</b>, <b>Testing</b>, (during initial power-on), <b>Failed</b>, or <b>Absent</b>.</li> <li>• (M7i, M10i, M40e, M120, M160, M320, and T Series routers and EX Series switches only) Power Entry Modules status: <b>OK</b>, <b>Testing</b>, (during initial power-on), <b>Check</b>, <b>Failed</b>, or <b>Absent</b>.</li> <li>• (PTX Series only) Power information is reported in PDU or PSM combinations. The status is: <b>OK</b>, <b>Testing</b>, (during initial power-on), <b>Check</b>, <b>Failed</b>, or <b>Absent</b>.</li> </ul> </li> <li>• <b>Temp:</b> Temperature of air flowing through the chassis in degrees Celsius (C) and Fahrenheit (F). <ul style="list-style-type: none"> <li>• On PTX Series Packet Transport Routers and MX2010, MX2020, and MX2008 Routers, multiple cooling zones are supported. FRU temperatures in each zone are coordinated with the fan speed of fan trays in those zones.</li> <li>• EX2200 switches have a side-to-rear cooling system. The <b>Local Intake</b> temperature is measured by the sensor on the right side of the chassis, and the <b>Remote Intake</b> temperature is measured by the sensor on the left side of the chassis.</li> </ul> </li> <li>• <b>Pic:</b> On ACX4000 routers, multiple temperature channels on a MIC. The status is: <b>OK</b> and the <b>Measurement</b> is in degrees Celsius (C) and Fahrenheit (F).</li> <li>• <b>Fan:</b> Fan status: <b>OK</b>, <b>Testing</b> (during initial power-on), <b>Failed</b>, or <b>Absent</b>. On PTX Series Packet Transport Routers and MX2010, MX2020, and MX2008 Routers, multiple fan trays are supported. Fan status is reported in Fan Tray or Fan combinations. <b>Measurement</b> indicates actual fan RPM (PTX and MX2010, MX2020, and MX2008 Routers only).</li> <li>• <b>Misc:</b> Information about other components of the chassis. <ul style="list-style-type: none"> <li>• On some routers, this field indicates the status of one or more additional components.</li> <li>• On the M40e, M160, and M320 router, <b>Misc</b> includes <b>CIP</b> (Connector Interface Panel). <b>OK</b> indicates that the CIP is present. <b>Absent</b> indicates that the CIP is not present.</li> <li>• On T Series routers, <b>Misc</b> includes <b>CIP</b> and <b>SPMB</b> (Switch Processor Mezzanine Board). <b>OK</b> indicates that the <b>CIP</b> or <b>SPMB</b> is present. <b>Absent</b> indicates that the <b>CIP</b> or <b>SPMB</b> is not present.</li> <li>• On PTX Series Packet Transport Routers, <b>Misc</b> includes the <b>SPMB</b> (Switch Processor Mezzanine Board). The SPMB is located on the control boards. <b>OK</b> indicates that the control board is present. <b>Absent</b> indicates that the control board is not present.</li> </ul> </li> </ul>
<b>Item</b>	<p>(MX2010, MX2020, and MX2008 Routers) Information about the chassis component: Routing Engines, Controls Boards (CBs), Switch Fabric Boards (SFBs), PICs, Flexible PIC Concentrators (FPCs), and Adapter Cards (ADCs).</p> <p>(MX104 Routers) Information about the chassis components: Routing Engines, Control Board (CB), Power Entry Module (PEM), and Compact Forwarding Engine Board (AFEB).</p> <p>(QFabric Systems) Information about the chassis component: Control Boards, Routing Engines, Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs), Node Devices, and Interconnect Devices.</p> <p>(QFX Series) Information about the chassis component: Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs).</p>

Table 10: show chassis environment Output Fields (continued)

Field Name	Field Description
<b>Status</b>	<p>(MX104, MX2010, MX2020, and MX2008 Routers) Status of the specified chassis component. For example, if the Class is Fan, the fan status can be:</p> <ul style="list-style-type: none"> <li>• <b>OK:</b> The fans are operational.</li> <li>• <b>Testing:</b> The fans are being tested during initial power-on.</li> <li>• <b>Failed:</b> The fans have failed or the fans are not spinning.</li> <li>• <b>Absent:</b> The fan tray is not installed.</li> </ul> <p>If the Class is Power, the power supply status can be:</p> <ul style="list-style-type: none"> <li>• <b>OK:</b> The power component is operational.</li> <li>• <b>Testing:</b> The power component is being tested during initial power-on.</li> <li>• <b>Check:</b> There is insufficient power---that is, fewer than the minimum required feeds are connected.</li> <li>• <b>Failed:</b> The inputs leads have failed.</li> <li>• <b>Absent:</b> The power component is not installed.</li> </ul>
<b>Measurement</b>	<p>(MX104, MX2010, MX2020, and MX2008 Routers) Dependant on the Class. For example, if the Class is Temp, indicates the temperature in degree Celsius and degrees Fahrenheit. If the Class is Fan, indicates actual fan RPM.</p>

## Sample Output

### show chassis environment (M5 Router)

```

user@host> show chassis environment

Class Item                Status      Measurement
Power Power Supply A       OK
       Power Supply B     Absent
Temp  FPC 0                OK          30 degrees C / 86 degrees F
       FEB                OK          33 degrees C / 91 degrees F
       PS Intake          OK          27 degrees C / 80 degrees F
       PS Exhaust         OK          27 degrees C / 80 degrees F
       Routing Engine     OK          34 degrees C / 93 degrees F
Fans  Left Fan 1          OK          Spinning at normal speed
       Left Fan 2         OK          Spinning at normal speed
       Left Fan 3         OK          Spinning at normal speed
       Left Fan 4         OK          Spinning at normal speed
Misc  Craft Interface     OK

```

### show chassis environment (M7i Router)

```

user@host> show chassis environment

Class Item                Status      Measurement
Power Power Supply 0       OK
       Power Supply 1     Absent
Temp  Intake              OK          22 degrees C / 71 degrees F
       FPC 0              OK          23 degrees C / 73 degrees F
       Power Supplies     OK          23 degrees C / 73 degrees F
       CFEB Intake        OK          24 degrees C / 75 degrees F
       CFEB Exhaust       OK          29 degrees C / 84 degrees F

```

	Routing Engine	OK	26 degrees C / 78 degrees F
Fans	Fan 1	OK	Spinning at normal speed
	Fan 2	OK	Spinning at normal speed
	Fan 3	OK	Spinning at normal speed
	Fan 4	OK	Spinning at normal speed

### show chassis environment (M10 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply A	OK	
	Power Supply B	Failed	
Temp	FPC 0	OK	36 degrees C / 96 degrees F
	FPC 1	OK	35 degrees C / 95 degrees F
	FEB	OK	34 degrees C / 93 degrees F
	PS Intake	OK	31 degrees C / 87 degrees F
	PS Exhaust	OK	34 degrees C / 93 degrees F
	Routing Engine	OK	35 degrees C / 95 degrees F
Fans	Left Fan 1	OK	Spinning at normal speed
	Left Fan 2	OK	Spinning at normal speed
	Left Fan 3	OK	Spinning at normal speed
	Left Fan 4	OK	Spinning at normal speed
Misc	Craft Interface	OK	

### show chassis environment (M10i Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply 0	OK	
	Power Supply 1	OK	
	Power Supply 2	Absent	
	Power Supply 3	Absent	
Temp	Intake	OK	26 degrees C / 78 degrees F
	FPC 0	OK	27 degrees C / 80 degrees F
	FPC 1	OK	28 degrees C / 82 degrees F
	Lower Power Supplies	OK	29 degrees C / 84 degrees F
	Upper Power Supplies	OK	28 degrees C / 82 degrees F
	CFEB Intake	OK	27 degrees C / 80 degrees F
	CFEB Exhaust	OK	36 degrees C / 96 degrees F
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	27 degrees C / 80 degrees F
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
Fans	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed
	Fan Tray 0 Fan 8	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	Absent	
	Fan Tray 1 Fan 2	Absent	
	Fan Tray 1 Fan 3	Absent	
	Fan Tray 1 Fan 4	Absent	
	Fan Tray 1 Fan 5	Absent	
	Fan Tray 1 Fan 6	Absent	

Fan Tray 1 Fan 7	Absent
Fan Tray 1 Fan 8	Absent

### show chassis environment (M20 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply A	OK	
	Power Supply B	Absent	
Temp	FPC 0	OK	28 degrees C / 82 degrees F
	FPC 1	OK	27 degrees C / 80 degrees F
	Power Supply A	OK	22 degrees C / 71 degrees F
	Power Supply B	Absent	
	SSB 0	OK	30 degrees C / 86 degrees F
	Backplane	OK	22 degrees C / 71 degrees F
	Routing Engine 0	OK	26 degrees C / 78 degrees F
Fans	Routing Engine 1	Testing	
	Rear Fan	OK	Spinning at normal speed
	Front Upper Fan	OK	Spinning at normal speed
	Front Middle Fan	OK	Spinning at normal speed
	Front Bottom Fan	OK	Spinning at normal speed
Misc	Craft Interface	OK	

### show chassis environment (M40 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply A	OK	
	Power Supply B	Absent	
Temp	FPC 3	OK	24 degrees C / 75 degrees F
	FPC 6	OK	26 degrees C / 78 degrees F
	SCB	OK	26 degrees C / 78 degrees F
	Backplane @ A1	OK	28 degrees C / 82 degrees F
	Backplane @ A2	OK	23 degrees C / 73 degrees F
	Routing Engine	OK	26 degrees C / 78 degrees F
Fans	Top Impeller	OK	Spinning at normal speed
	Bottom impeller	OK	Spinning at normal speed
	Rear Left Fan	OK	Spinning at normal speed
	Rear Center Fan	OK	Spinning at normal speed
	Rear Right Fan	OK	Spinning at normal speed
Misc	Craft Interface	OK	

### show chassis environment (M40e Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	
	PEM 1	Absent	
Temp	PCG 0	OK	44 degrees C / 111 degrees F
	PCG 1	OK	47 degrees C / 116 degrees F
	Routing Engine 0	OK	40 degrees C / 104 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	MCS 0	OK	45 degrees C / 113 degrees F

	MCS 1	OK	42 degrees C / 107 degrees F
	SFM 0 SPP	OK	40 degrees C / 104 degrees F
	SFM 0 SPR	OK	44 degrees C / 111 degrees F
	SFM 1 SPP	OK	43 degrees C / 109 degrees F
	SFM 1 SPR	OK	45 degrees C / 113 degrees F
	FPC 0	OK	38 degrees C / 100 degrees F
	FPC 1	OK	40 degrees C / 104 degrees F
	FPC 2	OK	38 degrees C / 100 degrees F
	FPC 4	OK	34 degrees C / 93 degrees F
	FPC 5	OK	43 degrees C / 109 degrees F
	FPC 6	OK	41 degrees C / 105 degrees F
	FPC 7	OK	43 degrees C / 109 degrees F
	FPM CMB	OK	28 degrees C / 82 degrees F
	FPM Display	OK	28 degrees C / 82 degrees F
Fans	Rear Bottom Blower	OK	Spinning at normal speed
	Rear Top Blower	OK	Spinning at normal speed
	Front Top Blower	OK	Spinning at normal speed
	Fan Tray Rear Left	OK	Spinning at normal speed
	Fan Tray Rear Right	OK	Spinning at normal speed
	Fan Tray Front Left	OK	Spinning at normal speed
	Fan Tray Front Right	OK	Spinning at normal speed
Misc	CIP	OK	

### show chassis environment (M120 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	
	PEM 1	OK	
	Routing Engine 0	OK	43 degrees C / 109 degrees F
	Routing Engine 1	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	33 degrees C / 91 degrees F
	CB 0 Exhaust A	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust B	OK	35 degrees C / 95 degrees F
	CB 1 Intake	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 1 Exhaust B	OK	35 degrees C / 95 degrees F
	FEB 3 Intake	OK	35 degrees C / 95 degrees F
	FEB 3 Exhaust A	OK	37 degrees C / 98 degrees F
	FEB 3 Exhaust B	OK	39 degrees C / 102 degrees F
	FEB 4 Intake	OK	33 degrees C / 91 degrees F
	FEB 4 Exhaust A	OK	39 degrees C / 102 degrees F
	FEB 4 Exhaust B	OK	36 degrees C / 96 degrees F
	FPC 2 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 2 Exhaust B	OK	31 degrees C / 87 degrees F
	FPC 3 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 3 Exhaust B	OK	33 degrees C / 91 degrees F
	FPC 4 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 4 Exhaust B	OK	30 degrees C / 86 degrees F
Fans	Front Top Tray Fan 1	OK	Spinning at normal speed
	Front Top Tray Fan 2	OK	Spinning at normal speed
	Front Top Tray Fan 3	OK	Spinning at normal speed
	Front Top Tray Fan 4	OK	Spinning at normal speed
	Front Top Tray Fan 5	OK	Spinning at normal speed
	Front Top Tray Fan 6	OK	Spinning at normal speed
	Front Top Tray Fan 7	OK	Spinning at normal speed
	Front Top Tray Fan 8	OK	Spinning at normal speed
	Front Bottom Tray Fan 1	OK	Spinning at normal speed

Front Bottom Tray Fan 2	OK	Spinning at normal speed
Front Bottom Tray Fan 3	OK	Spinning at normal speed
Front Bottom Tray Fan 4	OK	Spinning at normal speed
Front Bottom Tray Fan 5	OK	Spinning at normal speed
Front Bottom Tray Fan 6	OK	Spinning at normal speed
Front Bottom Tray Fan 7	OK	Spinning at normal speed
Front Bottom Tray Fan 8	OK	Spinning at normal speed
Rear Top Tray Fan 1	OK	Spinning at normal speed
Rear Top Tray Fan 2	OK	Spinning at normal speed
Rear Top Tray Fan 3	OK	Spinning at normal speed
Rear Top Tray Fan 4	OK	Spinning at normal speed
Rear Top Tray Fan 5	OK	Spinning at normal speed
Rear Top Tray Fan 6	OK	Spinning at normal speed
Rear Top Tray Fan 7	OK	Spinning at normal speed
Rear Top Tray Fan 8	OK	Spinning at normal speed
Rear Bottom Tray Fan 1	OK	Spinning at normal speed
Rear Bottom Tray Fan 2	OK	Spinning at normal speed
Rear Bottom Tray Fan 3	OK	Spinning at normal speed
Rear Bottom Tray Fan 4	OK	Spinning at normal speed
Rear Bottom Tray Fan 5	OK	Spinning at normal speed
Rear Bottom Tray Fan 6	OK	Spinning at normal speed
Rear Bottom Tray Fan 7	OK	Spinning at normal speed
Rear Bottom Tray Fan 8	OK	Spinning at normal speed

### show chassis environment (M160 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	PEM 1
Temp	PCG 0	OK	45 degrees C / 113 degrees F
	PCG 1	Absent	
	Routing Engine 0	OK	35 degrees C / 95 degrees F
	Routing Engine 1	Absent	
	MCS 0	OK	50 degrees C / 122 degrees F
	SFM 0 SPP	OK	47 degrees C / 116 degrees F
	SFM 0 SPR	OK	49 degrees C / 120 degrees F
	SFM 1 SPP	OK	50 degrees C / 122 degrees F
	SFM 1 SPR	OK	50 degrees C / 122 degrees F
	SFM 2 SPP	OK	51 degrees C / 123 degrees F
	SFM 2 SPR	OK	52 degrees C / 125 degrees F
	SFM 3 SPP	OK	52 degrees C / 125 degrees F
	SFM 3 SPR	OK	48 degrees C / 118 degrees F
	FPC 0	OK	45 degrees C / 113 degrees F
	FPC 6	OK	43 degrees C / 109 degrees F
	FPM CMB	OK	31 degrees C / 87 degrees F
	FPM Display	OK	33 degrees C / 91 degrees F
Fans	Rear Bottom Blower	OK	Spinning at normal speed
	Rear Top Blower	OK	Spinning at normal speed
	Front Top Blower	OK	Spinning at normal speed
	Fan Tray Rear Left	OK	Spinning at normal speed
	Fan Tray Rear Right	OK	Spinning at normal speed
	Fan Tray Front Left	OK	Spinning at normal speed
	Fan Tray Front Right	OK	Spinning at normal speed
Misc	CIP	OK	

## show chassis environment (M320 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	Absent	
	PEM 2	OK	
	PEM 3	OK	
	Routing Engine 0	OK	33 degrees C / 91 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	CB 0	OK	36 degrees C / 96 degrees F
	CB 1	OK	36 degrees C / 96 degrees F
	SIB 0	OK	38 degrees C / 100 degrees F
	SIB 1	OK	29 degrees C / 84 degrees F
	SIB 2	OK	38 degrees C / 100 degrees F
	SIB 3	OK	41 degrees C / 105 degrees F
	FPC 0 Intake	OK	28 degrees C / 82 degrees F
	FPC 0 Exhaust	OK	40 degrees C / 104 degrees F
	FPC 1 Intake	OK	29 degrees C / 84 degrees F
	FPC 1 Exhaust	OK	39 degrees C / 102 degrees F
	FPC 2 Intake	OK	28 degrees C / 82 degrees F
	FPC 2 Exhaust	OK	38 degrees C / 100 degrees F
	FPC 3 Intake	OK	28 degrees C / 82 degrees F
	FPC 3 Exhaust	OK	39 degrees C / 102 degrees F
	FPC 6 Intake	OK	27 degrees C / 80 degrees F
	FPC 6 Exhaust	OK	39 degrees C / 102 degrees F
	FPC 7 Intake	OK	27 degrees C / 80 degrees F
	FPC 7 Exhaust	OK	42 degrees C / 107 degrees F
	FPM GBUS	OK	30 degrees C / 86 degrees F
Fan	Top Left Front fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Rear Fan 1 (TOP)	OK	Spinning at normal speed
	Rear Fan 2	OK	Spinning at normal speed
	Rear Fan 3	OK	Spinning at normal speed
	Rear Fan 4	OK	Spinning at normal speed
	Rear Fan 5	OK	Spinning at normal speed
	Rear Fan 6	OK	Spinning at normal speed
	Rear Fan 7 (Bottom)	OK	Spinning at normal speed
Misc	CIP	OK	

## show chassis environment (MX150)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
Temp	FPC 0 Sensor 1	OK	42 degrees C / 107 degrees F
	FPC 0 Sensor 2	OK	39 degrees C / 102 degrees F
	FPC 0 Coretemp	OK	75 degrees C / 167 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed



## show chassis environment (MX104 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	34 degrees C / 93 degrees F
	PEM 1	Absent	
	ABB 0 Intake	OK	33 degrees C / 91 degrees F
	ABB 0 Exhaust A	OK	42 degrees C / 107 degrees F
	ABB 0 Exhaust B	OK	43 degrees C / 109 degrees F
	ABB 1 Intake	Absent	
	ABB 1 Exhaust A	Absent	
	ABB 1 Exhaust B	Absent	
	Routing Engine 0	OK	34 degrees C / 93 degrees F
	Routing Engine 0 CPU	OK	46 degrees C / 114 degrees F
	Routing Engine 1	Absent	
	Routing Engine 1 CPU	Absent	
	AFEB 0 AFEB Processor	OK	33 degrees C / 91 degrees F
	Fan 1	OK	Spinning at normal speed
Fans	Fan 2	OK	Spinning at normal speed
	Fan 3	OK	Spinning at normal speed
	Fan 4	OK	Spinning at normal speed
	Fan 5	OK	Spinning at normal speed

## show chassis environment (MX240 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 0 Exhaust B	OK	38 degrees C / 100 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 SF A	OK	49 degrees C / 120 degrees F
	CB 0 SF B	OK	41 degrees C / 105 degrees F
	CB 1 Intake	OK	37 degrees C / 98 degrees F
	CB 1 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 SF A	OK	47 degrees C / 116 degrees F
	CB 1 SF B	OK	41 degrees C / 105 degrees F
	FPC 1 Intake	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust B	OK	53 degrees C / 127 degrees F
	FPC 1 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 1 I3 0 Chip	OK	53 degrees C / 127 degrees F
	FPC 1 I3 1 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	47 degrees C / 116 degrees F
	FPC 1 I3 2 Chip	OK	49 degrees C / 120 degrees F
	FPC 1 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 1 IA 0 Chip	OK	44 degrees C / 111 degrees F

	FPC 1 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 Intake	OK	32 degrees C / 89 degrees F
	FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
	FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 2 I3 1 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 1 Chip	OK	55 degrees C / 131 degrees F
	FPC 2 I3 2 TSensor	OK	49 degrees C / 120 degrees F
	FPC 2 I3 2 Chip	OK	52 degrees C / 125 degrees F
	FPC 2 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 2 I3 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 2 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 2 IA 1 Chip	OK	53 degrees C / 127 degrees F
Fans	Front Fan	OK	Spinning at normal speed
	Middle Fan	OK	Spinning at normal speed
	Rear Fan	OK	Spinning at normal speed

#### show chassis environment (MX240 Router with SCBE)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 0 Exhaust B	OK	38 degrees C / 100 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 XF A	OK	49 degrees C / 120 degrees F
	CB 0 XF B	OK	41 degrees C / 105 degrees F
	CB 1 Intake	OK	37 degrees C / 98 degrees F
	CB 1 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 XF A	OK	47 degrees C / 116 degrees F
	CB 1 XF B	OK	41 degrees C / 105 degrees F
	FPC 1 Intake	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust B	OK	53 degrees C / 127 degrees F
	FPC 1 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 1 I3 0 Chip	OK	53 degrees C / 127 degrees F
	FPC 1 I3 1 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	47 degrees C / 116 degrees F
	FPC 1 I3 2 Chip	OK	49 degrees C / 120 degrees F
	FPC 1 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 1 IA 0 Chip	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 Intake	OK	32 degrees C / 89 degrees F

	FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
	FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 2 I3 1 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 1 Chip	OK	55 degrees C / 131 degrees F
	FPC 2 I3 2 TSensor	OK	49 degrees C / 120 degrees F
	FPC 2 I3 2 Chip	OK	52 degrees C / 125 degrees F
	FPC 2 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 2 I3 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 2 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 2 IA 1 Chip	OK	53 degrees C / 127 degrees F
Fans	Front Fan	OK	Spinning at normal speed
	Middle Fan	OK	Spinning at normal speed
	Rear Fan	OK	Spinning at normal speed

### show chassis environment (MX480 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	35 degrees C / 95 degrees F
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	44 degrees C / 111 degrees F
	Routing Engine 1	OK	45 degrees C / 113 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 SF A	OK	51 degrees C / 123 degrees F
	CB 0 SF B	OK	44 degrees C / 111 degrees F
	CB 1 Intake	OK	36 degrees C / 96 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	40 degrees C / 104 degrees F
	CB 1 ACBC	OK	37 degrees C / 98 degrees F
	CB 1 SF A	OK	50 degrees C / 122 degrees F
	CB 1 SF B	OK	43 degrees C / 109 degrees F
	FPC 0 Intake	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	51 degrees C / 123 degrees F
	FPC 0 I3 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 0 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 0 I3 3 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust A	OK	41 degrees C / 105 degrees F
	FPC 1 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 1 I3 0 TSensor	OK	51 degrees C / 123 degrees F

Fans	FPC 1 I3 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 1 I3 1 TSensor	OK	48 degrees C / 118 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 I3 2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 IA 1 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 IA 1 Chip	OK	50 degrees C / 122 degrees F
	Top Rear Fan	OK	Spinning at normal speed
	Bottom Rear Fan	OK	Spinning at normal speed
	Top Middle Fan	OK	Spinning at normal speed
	Bottom Middle Fan	OK	Spinning at normal speed
	Top Front Fan	OK	Spinning at normal speed
	Bottom Front Fan	OK	Spinning at normal speed

### show chassis environment (MX480 Router with SCBE)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	35 degrees C / 95 degrees F
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	44 degrees C / 111 degrees F
	Routing Engine 1	OK	45 degrees C / 113 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 XF A	OK	51 degrees C / 123 degrees F
	CB 0 XF B	OK	44 degrees C / 111 degrees F
	CB 1 Intake	OK	36 degrees C / 96 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	40 degrees C / 104 degrees F
	CB 1 ACBC	OK	37 degrees C / 98 degrees F
	CB 1 XF A	OK	50 degrees C / 122 degrees F
	CB 1 XF B	OK	43 degrees C / 109 degrees F
	FPC 0 Intake	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	51 degrees C / 123 degrees F
	FPC 0 I3 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 0 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 0 I3 3 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust A	OK	41 degrees C / 105 degrees F
	FPC 1 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 1 I3 0 TSensor	OK	51 degrees C / 123 degrees F

	FPC 1 I3 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 1 I3 1 TSensor	OK	48 degrees C / 118 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 I3 2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 IA 1 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 IA 1 Chip	OK	50 degrees C / 122 degrees F
Fans	Top Rear Fan	OK	Spinning at normal speed
	Bottom Rear Fan	OK	Spinning at normal speed
	Top Middle Fan	OK	Spinning at normal speed
	Bottom Middle Fan	OK	Spinning at normal speed
	Top Front Fan	OK	Spinning at normal speed
	Bottom Front Fan	OK	Spinning at normal speed

### show chassis environment (MX960 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	Absent	
	PEM 2	Check	
	PEM 3	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	37 degrees C / 98 degrees F
	Routing Engine 1	Absent	
	CB 0 Intake	OK	24 degrees C / 75 degrees F
	CB 0 Exhaust A	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust B	OK	27 degrees C / 80 degrees F
	CB 1 Intake	Absent	
	CB 1 Exhaust A	Absent	
	CB 1 Exhaust B	Absent	
	CB 1 ACBC	Absent	
	CB 1 SF A	Absent	
	CB 1 SF B	Absent	
	CB 2 Intake	Absent	
	CB 2 Exhaust A	Absent	
	CB 2 Exhaust B	Absent	
	CB 2 ACBC	Absent	
	CB 2 SF A	Absent	
	CB 2 SF B	Absent	
	FPC 4 Intake	OK	24 degrees C / 75 degrees F
	FPC 4 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 4 Exhaust B	OK	38 degrees C / 100 degrees F
	FPC 7 Intake	OK	24 degrees C / 75 degrees F
	FPC 7 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 7 Exhaust B	OK	42 degrees C / 107 degrees F
Fans	Top Fan Tray Temp	Failed	
	Top Tray Fan 1	OK	Spinning at normal speed
	Top Tray Fan 2	OK	Spinning at normal speed
	Top Tray Fan 3	OK	Spinning at normal speed
	Top Tray Fan 4	OK	Spinning at normal speed
	Top Tray Fan 5	OK	Spinning at normal speed
	Top Tray Fan 6	OK	Spinning at normal speed
	Bottom Fan Tray Temp	Failed	
	Bottom Tray Fan 1	OK	Spinning at normal speed
	Bottom Tray Fan 2	OK	Spinning at normal speed

Bottom Tray Fan 3	OK	Spinning at normal speed
Bottom Tray Fan 4	OK	Spinning at normal speed
Bottom Tray Fan 5	OK	Spinning at normal speed
Bottom Tray Fan 6	OK	Spinning at normal speed

### show chassis environment (MX960 Router with SCBE)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	50 degrees C / 122 degrees F
	PEM 2	OK	50 degrees C / 122 degrees F
	PEM 3	OK	50 degrees C / 122 degrees F
	Routing Engine 0	OK	42 degrees C / 107 degrees F
	Routing Engine 0 CPU	OK	51 degrees C / 123 degrees F
	Routing Engine 1	OK	39 degrees C / 102 degrees F
	Routing Engine 1 CPU	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	35 degrees C / 95 degrees F
	CB 0 Exhaust A	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust B	OK	43 degrees C / 109 degrees F
	CB 0 ACBC	OK	38 degrees C / 100 degrees F
	CB 0 XF A	OK	53 degrees C / 127 degrees F
	CB 0 XF B	OK	47 degrees C / 116 degrees F
	CB 1 Intake	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust A	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust B	OK	41 degrees C / 105 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 XF A	OK	52 degrees C / 125 degrees F
	CB 1 XF B	OK	47 degrees C / 116 degrees F
	CB 2 Intake	OK	32 degrees C / 89 degrees F
	CB 2 Exhaust A	OK	30 degrees C / 86 degrees F
	CB 2 Exhaust B	OK	35 degrees C / 95 degrees F
	CB 2 ACBC	OK	33 degrees C / 91 degrees F
	CB 2 XF A	OK	51 degrees C / 123 degrees F
	CB 2 XF B	OK	50 degrees C / 122 degrees F
	FPC 0 Intake	OK	35 degrees C / 95 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	50 degrees C / 122 degrees F
	FPC 0 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	50 degrees C / 122 degrees F
	FPC 0 I3 2 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	41 degrees C / 105 degrees F
	FPC 0 I3 3 Chip	OK	44 degrees C / 111 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	36 degrees C / 96 degrees F
	FPC 1 Exhaust A	OK	47 degrees C / 116 degrees F
	FPC 1 Exhaust B	OK	43 degrees C / 109 degrees F
	FPC 1 LU 0 TCAM TSensor	OK	53 degrees C / 127 degrees F
	FPC 1 LU 0 TCAM Chip	OK	57 degrees C / 134 degrees F
	FPC 1 LU 0 TSensor	OK	53 degrees C / 127 degrees F
	FPC 1 LU 0 Chip	OK	60 degrees C / 140 degrees F
	FPC 1 MQ 0 TSensor	OK	53 degrees C / 127 degrees F
	FPC 1 MQ 0 Chip	OK	56 degrees C / 132 degrees F

FPC 1 LU 1 TCAM TSensor	OK	51 degrees C / 123 degrees F
FPC 1 LU 1 TCAM Chip	OK	52 degrees C / 125 degrees F
FPC 1 LU 1 TSensor	OK	51 degrees C / 123 degrees F
FPC 1 LU 1 Chip	OK	53 degrees C / 127 degrees F
FPC 1 MQ 1 TSensor	OK	51 degrees C / 123 degrees F
FPC 1 MQ 1 Chip	OK	58 degrees C / 136 degrees F
FPC 2 Intake	OK	35 degrees C / 95 degrees F
FPC 2 Exhaust A	OK	39 degrees C / 102 degrees F
FPC 2 Exhaust B	OK	54 degrees C / 129 degrees F
FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
FPC 2 I3 0 Chip	OK	59 degrees C / 138 degrees F
FPC 2 I3 1 TSensor	OK	48 degrees C / 118 degrees F
FPC 2 I3 1 Chip	OK	52 degrees C / 125 degrees F
FPC 2 I3 2 TSensor	OK	47 degrees C / 116 degrees F
FPC 2 I3 2 Chip	OK	49 degrees C / 120 degrees F
FPC 2 I3 3 TSensor	OK	41 degrees C / 105 degrees F
FPC 2 I3 3 Chip	OK	44 degrees C / 111 degrees F
FPC 2 IA 0 TSensor	OK	47 degrees C / 116 degrees F
FPC 2 IA 0 Chip	OK	46 degrees C / 114 degrees F
FPC 2 IA 1 TSensor	OK	45 degrees C / 113 degrees F
FPC 2 IA 1 Chip	OK	49 degrees C / 120 degrees F
FPC 3 Intake	OK	34 degrees C / 93 degrees F
FPC 3 Exhaust A	OK	34 degrees C / 93 degrees F
FPC 3 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 3 I3 0 TSensor	OK	48 degrees C / 118 degrees F
FPC 3 I3 0 Chip	OK	52 degrees C / 125 degrees F
FPC 3 I3 1 TSensor	OK	46 degrees C / 114 degrees F
FPC 3 I3 1 Chip	OK	48 degrees C / 118 degrees F
FPC 3 IA 0 TSensor	OK	41 degrees C / 105 degrees F
FPC 3 IA 0 Chip	OK	40 degrees C / 104 degrees F
FPC 5 Intake	OK	42 degrees C / 107 degrees F
FPC 5 Exhaust A	OK	42 degrees C / 107 degrees F
FPC 5 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 5 LU 0 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 0 Chip	OK	54 degrees C / 129 degrees F
FPC 5 LU 1 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 1 Chip	OK	61 degrees C / 141 degrees F
FPC 5 LU 2 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 5 LU 3 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 5 MQ 0 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 1 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 2 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 5 MQ 3 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 3 Chip	OK	45 degrees C / 113 degrees F
FPC 7 Intake	OK	36 degrees C / 96 degrees F
FPC 7 Exhaust A	OK	35 degrees C / 95 degrees F
FPC 7 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 7 QX 0 TSensor	OK	42 degrees C / 107 degrees F
FPC 7 QX 0 Chip	OK	47 degrees C / 116 degrees F
FPC 7 LU 0 TCAM TSensor	OK	42 degrees C / 107 degrees F
FPC 7 LU 0 TCAM Chip	OK	44 degrees C / 111 degrees F
FPC 7 LU 0 TSensor	OK	42 degrees C / 107 degrees F
FPC 7 LU 0 Chip	OK	46 degrees C / 114 degrees F
FPC 7 MQ 0 TSensor	OK	42 degrees C / 107 degrees F
FPC 7 MQ 0 Chip	OK	45 degrees C / 113 degrees F

	FPC 8 Intake	OK	33 degrees C / 91 degrees F
	FPC 8 Exhaust A	OK	33 degrees C / 91 degrees F
	FPC 8 Exhaust B	OK	36 degrees C / 96 degrees F
	FPC 8 I3 0 TSensor	OK	38 degrees C / 100 degrees F
	FPC 8 I3 0 Chip	OK	43 degrees C / 109 degrees F
	FPC 8 BDS 0 TSensor	OK	37 degrees C / 98 degrees F
	FPC 8 BDS 0 Chip	OK	36 degrees C / 96 degrees F
	FPC 8 IA 0 TSensor	OK	37 degrees C / 98 degrees F
	FPC 8 IA 0 Chip	OK	37 degrees C / 98 degrees F
	FPC 10 Intake	OK	38 degrees C / 100 degrees F
	FPC 10 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 10 Exhaust B	OK	41 degrees C / 105 degrees F
	FPC 10 I3 0 TSensor	OK	40 degrees C / 104 degrees F
	FPC 10 I3 0 Chip	OK	42 degrees C / 107 degrees F
	FPC 10 I3 1 TSensor	OK	40 degrees C / 104 degrees F
	FPC 10 I3 1 Chip	OK	44 degrees C / 111 degrees F
	FPC 10 I3 2 TSensor	OK	42 degrees C / 107 degrees F
	FPC 10 I3 2 Chip	OK	43 degrees C / 109 degrees F
	FPC 10 I3 3 TSensor	OK	39 degrees C / 102 degrees F
	FPC 10 I3 3 Chip	OK	44 degrees C / 111 degrees F
	FPC 10 IA 0 TSensor	OK	36 degrees C / 96 degrees F
	FPC 10 IA 0 Chip	OK	36 degrees C / 96 degrees F
	FPC 10 IA 1 TSensor	OK	43 degrees C / 109 degrees F
	FPC 10 IA 1 Chip	OK	42 degrees C / 107 degrees F
Fans	Top Fan Tray Temp	OK	37 degrees C / 98 degrees F
	Top Tray Fan 1	OK	Spinning at normal speed
	Top Tray Fan 2	OK	Spinning at normal speed
	Top Tray Fan 3	OK	Spinning at normal speed
	Top Tray Fan 4	OK	Spinning at normal speed
	Top Tray Fan 5	OK	Spinning at normal speed
	Top Tray Fan 6	OK	Spinning at normal speed
	Bottom Fan Tray Temp	OK	28 degrees C / 82 degrees F
	Bottom Tray Fan 1	OK	Spinning at normal speed
	Bottom Tray Fan 2	OK	Spinning at normal speed
	Bottom Tray Fan 3	OK	Spinning at normal speed
	Bottom Tray Fan 4	OK	Spinning at normal speed
	Bottom Tray Fan 5	OK	Spinning at normal speed
	Bottom Tray Fan 6	OK	Spinning at normal speed

### show chassis environment (MX960 Router with MPC5EQ)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	50 degrees C / 122 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	OK	45 degrees C / 113 degrees F
	PEM 3	Absent	
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 0 CPU	OK	30 degrees C / 86 degrees F
	Routing Engine 1	Present	
	Routing Engine 1 CPU	Present	
	CB 0 Intake	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust A	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust B	OK	34 degrees C / 93 degrees F
	CB 0 ACBC	OK	32 degrees C / 89 degrees F
	CB 0 XF A	OK	49 degrees C / 120 degrees F
	CB 0 XF B	OK	45 degrees C / 113 degrees F
	CB 1 Intake	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust A	OK	26 degrees C / 78 degrees F



CB 1 Exhaust B	OK	27 degrees C / 80 degrees F
CB 1 ACBC	OK	26 degrees C / 78 degrees F
CB 1 XF A	OK	32 degrees C / 89 degrees F
CB 1 XF B	OK	32 degrees C / 89 degrees F
CB 2 Intake	OK	28 degrees C / 82 degrees F
CB 2 Exhaust A	OK	27 degrees C / 80 degrees F
CB 2 Exhaust B	OK	33 degrees C / 91 degrees F
CB 2 ACBC	OK	30 degrees C / 86 degrees F
CB 2 XF A	OK	48 degrees C / 118 degrees F
CB 2 XF B	OK	46 degrees C / 114 degrees F
FPC 0 Intake	OK	38 degrees C / 100 degrees F
FPC 0 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 0 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 0 XL TSen	OK	48 degrees C / 118 degrees F
FPC 0 XL Chip	OK	50 degrees C / 122 degrees F
FPC 0 XL_XR0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR0 Chip	OK	53 degrees C / 127 degrees F
FPC 0 XL_XR1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR1 Chip	OK	54 degrees C / 129 degrees F
FPC 0 XQ TSen	OK	48 degrees C / 118 degrees F
FPC 0 XQ Chip	OK	52 degrees C / 125 degrees F
FPC 0 XQ_XR0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XQ_XR0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XQ_XR1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XQ_XR1 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XM 0 TSen	OK	53 degrees C / 127 degrees F
FPC 0 XM 0 Chip	OK	63 degrees C / 145 degrees F
FPC 0 XM 1 TSen	OK	53 degrees C / 127 degrees F
FPC 0 XM 1 Chip	OK	46 degrees C / 114 degrees F
FPC 0 PLX PCIe Switch TSe	OK	53 degrees C / 127 degrees F
FPC 0 PLX PCIe Switch Chi	OK	66 degrees C / 150 degrees F
FPC 1 Intake	OK	31 degrees C / 87 degrees F
FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
FPC 1 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 1 LU 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 0 Chip	OK	47 degrees C / 116 degrees F
FPC 1 LU 1 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 1 Chip	OK	42 degrees C / 107 degrees F
FPC 1 LU 2 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 2 Chip	OK	46 degrees C / 114 degrees F
FPC 1 LU 3 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 1 XM 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 XM 0 Chip	OK	49 degrees C / 120 degrees F
FPC 1 XF 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 XF 0 Chip	OK	63 degrees C / 145 degrees F
FPC 1 PLX Switch TSen	OK	41 degrees C / 105 degrees F
FPC 1 PLX Switch Chip	OK	43 degrees C / 109 degrees F
FPC 3 Intake	OK	31 degrees C / 87 degrees F
FPC 3 Exhaust A	OK	37 degrees C / 98 degrees F
FPC 3 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 3 LU 0 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 0 Chip	OK	43 degrees C / 109 degrees F
FPC 3 LU 1 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 1 Chip	OK	46 degrees C / 114 degrees F
FPC 3 LU 2 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 2 Chip	OK	40 degrees C / 104 degrees F
FPC 3 LU 3 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 3 Chip	OK	41 degrees C / 105 degrees F
FPC 3 MQ 0 TSen	OK	37 degrees C / 98 degrees F

FPC 3 MQ 0 Chip	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 Chip	OK	40 degrees C / 104 degrees F
FPC 3 MQ 2 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 2 Chip	OK	36 degrees C / 96 degrees F
FPC 3 MQ 3 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 3 Chip	OK	38 degrees C / 100 degrees F
FPC 4 Intake	OK	34 degrees C / 93 degrees F
FPC 4 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 4 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 4 XL TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL Chip	OK	47 degrees C / 116 degrees F
FPC 4 XL_XR0 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL_XR0 Chip	OK	48 degrees C / 118 degrees F
FPC 4 XL_XR1 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL_XR1 Chip	OK	47 degrees C / 116 degrees F
FPC 4 XQ TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ Chip	OK	47 degrees C / 116 degrees F
FPC 4 XQ_XR0 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 4 XQ_XR1 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ_XR1 Chip	OK	58 degrees C / 136 degrees F
FPC 4 XM 0 TSen	OK	51 degrees C / 123 degrees F
FPC 4 XM 0 Chip	OK	61 degrees C / 141 degrees F
FPC 4 XM 1 TSen	OK	51 degrees C / 123 degrees F
FPC 4 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 4 PLX PCIe Switch TSe	OK	51 degrees C / 123 degrees F
FPC 4 PLX PCIe Switch Chi	OK	60 degrees C / 140 degrees F
FPC 5 Intake	OK	34 degrees C / 93 degrees F
FPC 5 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 5 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 5 XL TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL Chip	OK	47 degrees C / 116 degrees F
FPC 5 XL_XR0 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL_XR0 Chip	OK	49 degrees C / 120 degrees F
FPC 5 XL_XR1 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL_XR1 Chip	OK	49 degrees C / 120 degrees F
FPC 5 XQ TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ Chip	OK	48 degrees C / 118 degrees F
FPC 5 XQ_XR0 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ_XR0 Chip	OK	60 degrees C / 140 degrees F
FPC 5 XQ_XR1 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ_XR1 Chip	OK	58 degrees C / 136 degrees F
FPC 5 XM 0 TSen	OK	50 degrees C / 122 degrees F
FPC 5 XM 0 Chip	OK	48 degrees C / 118 degrees F
FPC 5 XM 1 TSen	OK	50 degrees C / 122 degrees F
FPC 5 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 5 PLX PCIe Switch TSe	OK	50 degrees C / 122 degrees F
FPC 5 PLX PCIe Switch Chi	OK	59 degrees C / 138 degrees F
FPC 7 Intake	OK	32 degrees C / 89 degrees F
FPC 7 Exhaust A	OK	32 degrees C / 89 degrees F
FPC 7 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 7 LU 0 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 0 Chip	OK	44 degrees C / 111 degrees F
FPC 7 LU 1 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 1 Chip	OK	47 degrees C / 116 degrees F
FPC 7 LU 2 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 2 Chip	OK	39 degrees C / 102 degrees F
FPC 7 LU 3 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 3 Chip	OK	43 degrees C / 109 degrees F

FPC 7 XM 0 TSen	OK	49 degrees C / 120 degrees F
FPC 7 XM 0 Chip	OK	57 degrees C / 134 degrees F
FPC 7 XM 1 TSen	OK	49 degrees C / 120 degrees F
FPC 7 XM 1 Chip	OK	48 degrees C / 118 degrees F
FPC 7 PLX Switch TSen	OK	49 degrees C / 120 degrees F
FPC 7 PLX Switch Chip	OK	45 degrees C / 113 degrees F
FPC 8 Intake	OK	36 degrees C / 96 degrees F
FPC 8 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 8 Exhaust B	OK	46 degrees C / 114 degrees F
FPC 8 XL TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL Chip	OK	47 degrees C / 116 degrees F
FPC 8 XL_XR0 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL_XR0 Chip	OK	53 degrees C / 127 degrees F
FPC 8 XL_XR1 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL_XR1 Chip	OK	52 degrees C / 125 degrees F
FPC 8 XQ TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ Chip	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR0 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR0 Chip	OK	59 degrees C / 138 degrees F
FPC 8 XQ_XR1 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR1 Chip	OK	57 degrees C / 134 degrees F
FPC 8 XM 0 TSen	OK	52 degrees C / 125 degrees F
FPC 8 XM 0 Chip	OK	61 degrees C / 141 degrees F
FPC 8 XM 1 TSen	OK	52 degrees C / 125 degrees F
FPC 8 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 8 PLX PCIe Switch TSe	OK	52 degrees C / 125 degrees F
FPC 8 PLX PCIe Switch Chi	OK	63 degrees C / 145 degrees F
FPC 9 Intake	OK	31 degrees C / 87 degrees F
FPC 9 Exhaust A	OK	34 degrees C / 93 degrees F
FPC 9 Exhaust B	OK	35 degrees C / 95 degrees F
FPC 9 QX 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 QX 0 Chip	OK	45 degrees C / 113 degrees F
FPC 9 LU 0 TCAM TSen	OK	42 degrees C / 107 degrees F
FPC 9 LU 0 TCAM Chip	OK	41 degrees C / 105 degrees F
FPC 9 LU 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 LU 0 Chip	OK	43 degrees C / 109 degrees F
FPC 9 MQ 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 MQ 0 Chip	OK	43 degrees C / 109 degrees F
FPC 9 QX 1 TSen	OK	38 degrees C / 100 degrees F
FPC 9 QX 1 Chip	OK	40 degrees C / 104 degrees F
FPC 9 LU 1 TCAM TSen	OK	38 degrees C / 100 degrees F
FPC 9 LU 1 TCAM Chip	OK	38 degrees C / 100 degrees F
FPC 9 LU 1 TSen	OK	38 degrees C / 100 degrees F
FPC 9 LU 1 Chip	OK	41 degrees C / 105 degrees F
FPC 9 MQ 1 TSen	OK	38 degrees C / 100 degrees F
FPC 9 MQ 1 Chip	OK	41 degrees C / 105 degrees F
FPC 10 Intake	OK	35 degrees C / 95 degrees F
FPC 10 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 10 Exhaust B	OK	46 degrees C / 114 degrees F
FPC 10 XL TSen	OK	42 degrees C / 107 degrees F
FPC 10 XL Chip	OK	44 degrees C / 111 degrees F
FPC 10 XL_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 10 XL_XR0 Chip	OK	47 degrees C / 116 degrees F
FPC 10 XL_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 10 XL_XR1 Chip	OK	48 degrees C / 118 degrees F
FPC 10 XQ TSen	OK	42 degrees C / 107 degrees F
FPC 10 XQ Chip	OK	46 degrees C / 114 degrees F
FPC 10 XQ_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 10 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 10 XQ_XR1 TSen	OK	42 degrees C / 107 degrees F

	FPC 10 XQ_XR1 Chip	OK	53 degrees C / 127 degrees F
	FPC 10 XM 0 TSen	OK	51 degrees C / 123 degrees F
	FPC 10 XM 0 Chip	OK	61 degrees C / 141 degrees F
	FPC 10 XM 1 TSen	OK	51 degrees C / 123 degrees F
	FPC 10 XM 1 Chip	OK	49 degrees C / 120 degrees F
	FPC 10 PLX PCIe Switch TSe	OK	51 degrees C / 123 degrees F
	FPC 10 PLX PCIe Switch Chi	OK	61 degrees C / 141 degrees F
	FPC 11 Intake	OK	33 degrees C / 91 degrees F
	FPC 11 Exhaust A	OK	33 degrees C / 91 degrees F
	FPC 11 Exhaust B	OK	34 degrees C / 93 degrees F
	FPC 11 LU 0 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 11 LU 1 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 1 Chip	OK	50 degrees C / 122 degrees F
	FPC 11 LU 2 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 2 Chip	OK	41 degrees C / 105 degrees F
	FPC 11 LU 3 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 11 XM 0 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 XM 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 11 XM 1 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 XM 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 11 PLX Switch TSen	OK	50 degrees C / 122 degrees F
	FPC 11 PLX Switch Chip	OK	45 degrees C / 113 degrees F
Fans	Top Fan Tray Temp	OK	42 degrees C / 107 degrees F
	Top Tray Fan 1	OK	Spinning at high speed
Top Tray Fan 2		OK	Spinning at high speed
	Top Tray Fan 3	OK	Spinning at high speed
	Top Tray Fan 4	OK	Spinning at high speed
	Top Tray Fan 5	OK	Spinning at high speed
	Top Tray Fan 6	OK	Spinning at high speed
	Top Tray Fan 7	OK	Spinning at high speed
	Top Tray Fan 8	OK	Spinning at high speed
	Top Tray Fan 9	OK	Spinning at high speed
	Top Tray Fan 10	OK	Spinning at high speed
	Top Tray Fan 11	OK	Spinning at high speed
	Top Tray Fan 12	OK	Spinning at high speed
	Bottom Fan Tray Temp	OK	33 degrees C / 91 degrees F
	Bottom Tray Fan 1	OK	Spinning at high speed
	Bottom Tray Fan 2	OK	Spinning at high speed
	Bottom Tray Fan 3	OK	Spinning at high speed
	Bottom Tray Fan 4	OK	Spinning at high speed
	Bottom Tray Fan 5	OK	Spinning at high speed
	Bottom Tray Fan 6	OK	Spinning at high speed
	Bottom Tray Fan 7	OK	Spinning at high speed
	Bottom Tray Fan 8	OK	Spinning at high speed
	Bottom Tray Fan 9	OK	Spinning at high speed
	Bottom Tray Fan 10	OK	Spinning at high speed
	Bottom Tray Fan 11	OK	Spinning at high speed
	Bottom Tray Fan 12	OK	Spinning at high speed

### show chassis environment (MX2020 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PSM 0	Absent	
	PSM 1	Absent	
	PSM 2	OK	41 degrees C / 105 degrees F
	PSM 3	OK	39 degrees C / 102 degrees F

PSM 4	OK	39 degrees C / 102 degrees F
PSM 5	OK	38 degrees C / 100 degrees F
PSM 6	OK	38 degrees C / 100 degrees F
PSM 7	OK	38 degrees C / 100 degrees F
PSM 8	OK	37 degrees C / 98 degrees F
PSM 9	Absent	
PSM 10	Absent	
PSM 11	OK	47 degrees C / 116 degrees F
PSM 12	OK	45 degrees C / 113 degrees F
PSM 13	OK	44 degrees C / 111 degrees F
PSM 14	OK	44 degrees C / 111 degrees F
PSM 15	OK	43 degrees C / 109 degrees F
PSM 16	OK	42 degrees C / 107 degrees F
PSM 17	OK	41 degrees C / 105 degrees F
PDM 0	OK	
PDM 1	Absent	
PDM 2	Absent	
PDM 3	OK	
CB 0 IntakeA-Zone0	OK	45 degrees C / 113 degrees F
CB 0 IntakeB-Zone1	OK	34 degrees C / 93 degrees F
CB 0 IntakeC-Zone0	OK	48 degrees C / 118 degrees F
CB 0 ExhaustA-Zone0	OK	45 degrees C / 113 degrees F
CB 0 ExhaustB-Zone1	OK	37 degrees C / 98 degrees F
CB 0 TCBC-Zone0	OK	41 degrees C / 105 degrees F
CB 1 IntakeA-Zone0	OK	46 degrees C / 114 degrees F
CB 1 IntakeB-Zone1	OK	42 degrees C / 107 degrees F
CB 1 IntakeC-Zone0	OK	49 degrees C / 120 degrees F
CB 1 ExhaustA-Zone0	OK	46 degrees C / 114 degrees F
CB 1 ExhaustB-Zone1	OK	41 degrees C / 105 degrees F
CB 1 TCBC-Zone0	OK	46 degrees C / 114 degrees F
SPMB 0 Intake	OK	33 degrees C / 91 degrees F
SPMB 1 Intake	OK	42 degrees C / 107 degrees F
Routing Engine 0	OK	35 degrees C / 95 degrees F
Routing Engine 0 CPU	OK	34 degrees C / 93 degrees F
Routing Engine 1	OK	44 degrees C / 111 degrees F
Routing Engine 1 CPU	OK	42 degrees C / 107 degrees F
SFB 0 Intake-Zone0	OK	55 degrees C / 131 degrees F
SFB 0 Exhaust-Zone1	OK	48 degrees C / 118 degrees F
SFB 0 IntakeA-Zone0	OK	50 degrees C / 122 degrees F
SFB 0 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 0 Exhaust-Zone0	OK	52 degrees C / 125 degrees F
SFB 0 SFB-XF2-Zone1	OK	61 degrees C / 141 degrees F
SFB 0 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 0 SFB-XF0-Zone0	OK	68 degrees C / 154 degrees F
SFB 1 Intake-Zone0	OK	56 degrees C / 132 degrees F
SFB 1 Exhaust-Zone1	OK	47 degrees C / 116 degrees F
SFB 1 IntakeA-Zone0	OK	51 degrees C / 123 degrees F
SFB 1 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 1 Exhaust-Zone0	OK	51 degrees C / 123 degrees F
SFB 1 SFB-XF2-Zone1	OK	62 degrees C / 143 degrees F
SFB 1 SFB-XF1-Zone0	OK	67 degrees C / 152 degrees F
SFB 1 SFB-XF0-Zone0	OK	69 degrees C / 156 degrees F
SFB 2 Intake-Zone0	OK	56 degrees C / 132 degrees F
SFB 2 Exhaust-Zone1	OK	47 degrees C / 116 degrees F
SFB 2 IntakeA-Zone0	OK	51 degrees C / 123 degrees F
SFB 2 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 2 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 2 SFB-XF2-Zone1	OK	65 degrees C / 149 degrees F
SFB 2 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 2 SFB-XF0-Zone0	OK	70 degrees C / 158 degrees F

SFB 3 Intake-Zone0	OK	57 degrees C / 134 degrees F
SFB 3 Exhaust-Zone1	OK	48 degrees C / 118 degrees F
SFB 3 IntakeA-Zone0	OK	52 degrees C / 125 degrees F
SFB 3 IntakeB-Zone1	OK	41 degrees C / 105 degrees F
SFB 3 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 3 SFB-XF2-Zone1	OK	66 degrees C / 150 degrees F
SFB 3 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 3 SFB-XF0-Zone0	OK	71 degrees C / 159 degrees F
SFB 4 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 4 Exhaust-Zone1	OK	49 degrees C / 120 degrees F
SFB 4 IntakeA-Zone0	OK	54 degrees C / 129 degrees F
SFB 4 IntakeB-Zone1	OK	42 degrees C / 107 degrees F
SFB 4 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 4 SFB-XF2-Zone1	OK	64 degrees C / 147 degrees F
SFB 4 SFB-XF1-Zone0	OK	68 degrees C / 154 degrees F
SFB 4 SFB-XF0-Zone0	OK	71 degrees C / 159 degrees F
SFB 5 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 5 Exhaust-Zone1	OK	50 degrees C / 122 degrees F
SFB 5 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 5 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 5 Exhaust-Zone0	OK	54 degrees C / 129 degrees F
SFB 5 SFB-XF2-Zone1	OK	66 degrees C / 150 degrees F
SFB 5 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 5 SFB-XF0-Zone0	OK	74 degrees C / 165 degrees F
SFB 6 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 6 Exhaust-Zone1	OK	49 degrees C / 120 degrees F
SFB 6 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 6 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 6 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 6 SFB-XF2-Zone1	OK	65 degrees C / 149 degrees F
SFB 6 SFB-XF1-Zone0	OK	68 degrees C / 154 degrees F
SFB 6 SFB-XF0-Zone0	OK	72 degrees C / 161 degrees F
SFB 7 Intake-Zone0	OK	57 degrees C / 134 degrees F
SFB 7 Exhaust-Zone1	OK	50 degrees C / 122 degrees F
SFB 7 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 7 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 7 Exhaust-Zone0	OK	54 degrees C / 129 degrees F
SFB 7 SFB-XF2-Zone1	OK	68 degrees C / 154 degrees F
SFB 7 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 7 SFB-XF0-Zone0	OK	73 degrees C / 163 degrees F
FPC 0 Intake	OK	41 degrees C / 105 degrees F
FPC 0 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 0 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 0 LU 0 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 1 Chip	OK	64 degrees C / 147 degrees F
FPC 0 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 0 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 0 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 1 Chip	OK	51 degrees C / 123 degrees F
FPC 0 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 0 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 3 Chip	OK	45 degrees C / 113 degrees F
FPC 1 Intake	OK	40 degrees C / 104 degrees F

FPC 1 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 1 Exhaust B	OK	58 degrees C / 136 degrees F
FPC 1 LU 0 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 0 Chip	OK	56 degrees C / 132 degrees F
FPC 1 LU 1 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 1 Chip	OK	58 degrees C / 136 degrees F
FPC 1 LU 2 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 2 Chip	OK	49 degrees C / 120 degrees F
FPC 1 LU 3 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 1 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 0 Chip	OK	48 degrees C / 118 degrees F
FPC 1 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 1 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 1 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 3 Chip	OK	44 degrees C / 111 degrees F
FPC 2 Intake	OK	39 degrees C / 102 degrees F
FPC 2 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 2 Exhaust B	OK	61 degrees C / 141 degrees F
FPC 2 LU 0 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 0 Chip	OK	60 degrees C / 140 degrees F
FPC 2 LU 1 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 1 Chip	OK	65 degrees C / 149 degrees F
FPC 2 LU 2 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 2 LU 3 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 2 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 2 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 2 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 2 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 3 Intake	OK	40 degrees C / 104 degrees F
FPC 3 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 3 Exhaust B	OK	61 degrees C / 141 degrees F
FPC 3 LU 0 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 0 Chip	OK	61 degrees C / 141 degrees F
FPC 3 LU 1 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 3 LU 2 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 3 LU 3 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 3 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 3 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 3 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 3 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 3 Chip	OK	48 degrees C / 118 degrees F
FPC 4 Intake	OK	40 degrees C / 104 degrees F
FPC 4 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 4 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 4 LU 0 TSen	OK	59 degrees C / 138 degrees F

FPC 4 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 4 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 1 Chip	OK	65 degrees C / 149 degrees F
FPC 4 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 4 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 4 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 4 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 4 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 4 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 5 Intake	OK	41 degrees C / 105 degrees F
FPC 5 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 5 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 5 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 0 Chip	OK	63 degrees C / 145 degrees F
FPC 5 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 1 Chip	OK	66 degrees C / 150 degrees F
FPC 5 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 2 Chip	OK	56 degrees C / 132 degrees F
FPC 5 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 5 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 5 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 2 Chip	OK	48 degrees C / 118 degrees F
FPC 5 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 6 Intake	OK	42 degrees C / 107 degrees F
FPC 6 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 6 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 6 LU 0 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 0 Chip	OK	64 degrees C / 147 degrees F
FPC 6 LU 1 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 1 Chip	OK	66 degrees C / 150 degrees F
FPC 6 LU 2 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 2 Chip	OK	56 degrees C / 132 degrees F
FPC 6 LU 3 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 3 Chip	OK	56 degrees C / 132 degrees F
FPC 6 MQ 0 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 0 Chip	OK	56 degrees C / 132 degrees F
FPC 6 MQ 1 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 1 Chip	OK	59 degrees C / 138 degrees F
FPC 6 MQ 2 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 2 Chip	OK	49 degrees C / 120 degrees F
FPC 6 MQ 3 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 7 Intake	OK	41 degrees C / 105 degrees F
FPC 7 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 7 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 7 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 0 Chip	OK	61 degrees C / 141 degrees F
FPC 7 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 1 Chip	OK	65 degrees C / 149 degrees F



FPC 7 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 2 Chip	OK	54 degrees C / 129 degrees F
FPC 7 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 7 MQ 0 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 0 Chip	OK	53 degrees C / 127 degrees F
FPC 7 MQ 1 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 7 MQ 2 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 7 MQ 3 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 8 Intake	OK	41 degrees C / 105 degrees F
FPC 8 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 8 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 8 LU 0 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 8 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 1 Chip	OK	64 degrees C / 147 degrees F
FPC 8 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 2 Chip	OK	55 degrees C / 131 degrees F
FPC 8 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 8 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 0 Chip	OK	51 degrees C / 123 degrees F
FPC 8 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 8 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 8 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 9 Intake	OK	42 degrees C / 107 degrees F
FPC 9 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 9 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 9 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 0 Chip	OK	65 degrees C / 149 degrees F
FPC 9 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 1 Chip	OK	67 degrees C / 152 degrees F
FPC 9 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 2 Chip	OK	54 degrees C / 129 degrees F
FPC 9 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 9 MQ 0 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 0 Chip	OK	55 degrees C / 131 degrees F
FPC 9 MQ 1 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 1 Chip	OK	59 degrees C / 138 degrees F
FPC 9 MQ 2 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 2 Chip	OK	49 degrees C / 120 degrees F
FPC 9 MQ 3 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 10 Intake	OK	44 degrees C / 111 degrees F
FPC 10 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 10 Exhaust B	OK	55 degrees C / 131 degrees F
FPC 10 LU 0 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 0 Chip	OK	55 degrees C / 131 degrees F
FPC 10 LU 1 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 1 Chip	OK	59 degrees C / 138 degrees F
FPC 10 LU 2 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 2 Chip	OK	52 degrees C / 125 degrees F
FPC 10 LU 3 TSen	OK	54 degrees C / 129 degrees F

FPC 10 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 10 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 0 Chip	OK	49 degrees C / 120 degrees F
FPC 10 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 10 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 10 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 11 Intake	OK	30 degrees C / 86 degrees F
FPC 11 Exhaust A	OK	35 degrees C / 95 degrees F
FPC 11 Exhaust B	OK	30 degrees C / 86 degrees F
FPC 11 LU 0 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 0 Chip	OK	58 degrees C / 136 degrees F
FPC 11 LU 1 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 11 LU 2 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 11 LU 3 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 11 MQ 0 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 11 MQ 1 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 1 Chip	OK	57 degrees C / 134 degrees F
FPC 11 MQ 2 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 2 Chip	OK	48 degrees C / 118 degrees F
FPC 11 MQ 3 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 3 Chip	OK	52 degrees C / 125 degrees F
FPC 12 Intake	OK	40 degrees C / 104 degrees F
FPC 12 Exhaust A	OK	47 degrees C / 116 degrees F
FPC 12 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 12 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 12 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 12 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 2 Chip	OK	47 degrees C / 116 degrees F
FPC 12 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 3 Chip	OK	50 degrees C / 122 degrees F
FPC 12 MQ 0 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 0 Chip	OK	46 degrees C / 114 degrees F
FPC 12 MQ 1 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 12 MQ 2 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 12 MQ 3 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 13 Intake	OK	40 degrees C / 104 degrees F
FPC 13 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 13 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 13 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 13 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 13 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 2 Chip	OK	48 degrees C / 118 degrees F
FPC 13 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 3 Chip	OK	48 degrees C / 118 degrees F
FPC 13 MQ 0 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 0 Chip	OK	46 degrees C / 114 degrees F

FPC 13 MQ 1 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 13 MQ 2 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 13 MQ 3 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 14 Intake	OK	40 degrees C / 104 degrees F
FPC 14 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 14 Exhaust B	OK	51 degrees C / 123 degrees F
FPC 14 LU 0 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 0 Chip	OK	50 degrees C / 122 degrees F
FPC 14 LU 1 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 1 Chip	OK	54 degrees C / 129 degrees F
FPC 14 LU 2 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 2 Chip	OK	47 degrees C / 116 degrees F
FPC 14 LU 3 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 3 Chip	OK	49 degrees C / 120 degrees F
FPC 14 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 0 Chip	OK	46 degrees C / 114 degrees F
FPC 14 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 1 Chip	OK	51 degrees C / 123 degrees F
FPC 14 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 14 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 3 Chip	OK	48 degrees C / 118 degrees F
FPC 15 Intake	OK	44 degrees C / 111 degrees F
FPC 15 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 15 Exhaust B	OK	60 degrees C / 140 degrees F
FPC 15 LU 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 0 Chip	OK	56 degrees C / 132 degrees F
FPC 15 LU 1 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 1 Chip	OK	50 degrees C / 122 degrees F
FPC 15 LU 2 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 2 Chip	OK	58 degrees C / 136 degrees F
FPC 15 LU 3 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 3 Chip	OK	63 degrees C / 145 degrees F
FPC 15 XM 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 XM 0 Chip	OK	56 degrees C / 132 degrees F
FPC 15 XF 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 XF 0 Chip	OK	68 degrees C / 154 degrees F
FPC 15 PLX Switch TSen	OK	50 degrees C / 122 degrees F
FPC 15 PLX Switch Chip	OK	56 degrees C / 132 degrees F
FPC 16 Intake	OK	42 degrees C / 107 degrees F
FPC 16 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 16 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 16 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 16 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 16 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 2 Chip	OK	48 degrees C / 118 degrees F
FPC 16 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 3 Chip	OK	49 degrees C / 120 degrees F
FPC 16 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 0 Chip	OK	48 degrees C / 118 degrees F
FPC 16 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 16 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 16 MQ 3 TSen	OK	49 degrees C / 120 degrees F

FPC 16 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 17 Intake	OK	43 degrees C / 109 degrees F
FPC 17 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 17 Exhaust B	OK	55 degrees C / 131 degrees F
FPC 17 LU 0 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 0 Chip	OK	57 degrees C / 134 degrees F
FPC 17 LU 1 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 1 Chip	OK	60 degrees C / 140 degrees F
FPC 17 LU 2 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 17 LU 3 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 17 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 17 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 17 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 17 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 3 Chip	OK	51 degrees C / 123 degrees F
FPC 18 Intake	OK	44 degrees C / 111 degrees F
FPC 18 Exhaust A	OK	53 degrees C / 127 degrees F
FPC 18 Exhaust B	OK	57 degrees C / 134 degrees F
FPC 18 LU 0 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 0 Chip	OK	57 degrees C / 134 degrees F
FPC 18 LU 1 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 18 LU 2 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 18 LU 3 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 3 Chip	OK	55 degrees C / 131 degrees F
FPC 18 MQ 0 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 0 Chip	OK	54 degrees C / 129 degrees F
FPC 18 MQ 1 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 1 Chip	OK	58 degrees C / 136 degrees F
FPC 18 MQ 2 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 2 Chip	OK	50 degrees C / 122 degrees F
FPC 18 MQ 3 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 3 Chip	OK	53 degrees C / 127 degrees F
FPC 19 Intake	OK	48 degrees C / 118 degrees F
FPC 19 Exhaust A	OK	56 degrees C / 132 degrees F
FPC 19 Exhaust B	OK	64 degrees C / 147 degrees F
FPC 19 LU 0 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 0 Chip	OK	64 degrees C / 147 degrees F
FPC 19 LU 1 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 1 Chip	OK	70 degrees C / 158 degrees F
FPC 19 LU 2 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 2 Chip	OK	61 degrees C / 141 degrees F
FPC 19 LU 3 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 3 Chip	OK	62 degrees C / 143 degrees F
FPC 19 MQ 0 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 0 Chip	OK	60 degrees C / 140 degrees F
FPC 19 MQ 1 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 1 Chip	OK	62 degrees C / 143 degrees F
FPC 19 MQ 2 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 2 Chip	OK	56 degrees C / 132 degrees F
FPC 19 MQ 3 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 3 Chip	OK	57 degrees C / 134 degrees F
ADC 0 Intake	OK	40 degrees C / 104 degrees F
ADC 0 Exhaust	OK	52 degrees C / 125 degrees F

ADC 0 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 0 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 1 Intake	OK	38 degrees C / 100 degrees F
ADC 1 Exhaust	OK	50 degrees C / 122 degrees F
ADC 1 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 1 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 2 Intake	OK	37 degrees C / 98 degrees F
ADC 2 Exhaust	OK	52 degrees C / 125 degrees F
ADC 2 ADC-XF1	OK	53 degrees C / 127 degrees F
ADC 2 ADC-XF0	OK	61 degrees C / 141 degrees F
ADC 3 Intake	OK	40 degrees C / 104 degrees F
ADC 3 Exhaust	OK	51 degrees C / 123 degrees F
ADC 3 ADC-XF1	OK	61 degrees C / 141 degrees F
ADC 3 ADC-XF0	OK	64 degrees C / 147 degrees F
ADC 4 Intake	OK	39 degrees C / 102 degrees F
ADC 4 Exhaust	OK	51 degrees C / 123 degrees F
ADC 4 ADC-XF1	OK	60 degrees C / 140 degrees F
ADC 4 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 5 Intake	OK	38 degrees C / 100 degrees F
ADC 5 Exhaust	OK	54 degrees C / 129 degrees F
ADC 5 ADC-XF1	OK	56 degrees C / 132 degrees F
ADC 5 ADC-XF0	OK	67 degrees C / 152 degrees F
ADC 6 Intake	OK	39 degrees C / 102 degrees F
ADC 6 Exhaust	OK	52 degrees C / 125 degrees F
ADC 6 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 6 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 7 Intake	OK	39 degrees C / 102 degrees F
ADC 7 Exhaust	OK	54 degrees C / 129 degrees F
ADC 7 ADC-XF1	OK	62 degrees C / 143 degrees F
ADC 7 ADC-XF0	OK	70 degrees C / 158 degrees F
ADC 8 Intake	OK	39 degrees C / 102 degrees F
ADC 8 Exhaust	OK	52 degrees C / 125 degrees F
ADC 8 ADC-XF1	OK	61 degrees C / 141 degrees F
ADC 8 ADC-XF0	OK	65 degrees C / 149 degrees F
ADC 9 Intake	OK	41 degrees C / 105 degrees F
ADC 9 Exhaust	OK	51 degrees C / 123 degrees F
ADC 9 ADC-XF1	OK	63 degrees C / 145 degrees F
ADC 9 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 10 Intake	OK	48 degrees C / 118 degrees F
ADC 10 Exhaust	OK	53 degrees C / 127 degrees F
ADC 10 ADC-XF1	OK	67 degrees C / 152 degrees F
ADC 10 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 12 Intake	OK	49 degrees C / 120 degrees F
ADC 12 Exhaust	OK	54 degrees C / 129 degrees F
ADC 12 ADC-XF1	OK	67 degrees C / 152 degrees F
ADC 12 ADC-XF0	OK	67 degrees C / 152 degrees F
ADC 13 Intake	OK	49 degrees C / 120 degrees F
ADC 13 Exhaust	OK	57 degrees C / 134 degrees F
ADC 13 ADC-XF1	OK	66 degrees C / 150 degrees F
ADC 13 ADC-XF0	OK	69 degrees C / 156 degrees F
ADC 14 Intake	OK	51 degrees C / 123 degrees F
ADC 14 Exhaust	OK	59 degrees C / 138 degrees F
ADC 14 ADC-XF1	OK	69 degrees C / 156 degrees F
ADC 14 ADC-XF0	OK	74 degrees C / 165 degrees F
ADC 15 Intake	OK	50 degrees C / 122 degrees F
ADC 15 Exhaust	OK	59 degrees C / 138 degrees F
ADC 15 ADC-XF1	OK	68 degrees C / 154 degrees F
ADC 15 ADC-XF0	OK	69 degrees C / 156 degrees F
ADC 16 Intake	OK	52 degrees C / 125 degrees F
ADC 16 Exhaust	OK	58 degrees C / 136 degrees F

	ADC 16 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 16 ADC-XF0	OK	70 degrees C / 158 degrees F
	ADC 17 Intake	OK	52 degrees C / 125 degrees F
	ADC 17 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 17 ADC-XF1	OK	69 degrees C / 156 degrees F
	ADC 17 ADC-XF0	OK	71 degrees C / 159 degrees F
	ADC 18 Intake	OK	53 degrees C / 127 degrees F
	ADC 18 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 18 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 18 ADC-XF0	OK	73 degrees C / 163 degrees F
	ADC 19 Intake	OK	50 degrees C / 122 degrees F
	ADC 19 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 19 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 19 ADC-XF0	OK	72 degrees C / 161 degrees F
Fans	Fan Tray 0 Fan 1	OK	7440 RPM
	Fan Tray 0 Fan 2	OK	7200 RPM
	Fan Tray 0 Fan 3	OK	6960 RPM
	Fan Tray 0 Fan 4	OK	7200 RPM
	Fan Tray 0 Fan 5	OK	7080 RPM
	Fan Tray 0 Fan 6	OK	6840 RPM
	Fan Tray 1 Fan 1	OK	6840 RPM
	Fan Tray 1 Fan 2	OK	6960 RPM
	Fan Tray 1 Fan 3	OK	6960 RPM
	Fan Tray 1 Fan 4	OK	7080 RPM
	Fan Tray 1 Fan 5	OK	6960 RPM
	Fan Tray 1 Fan 6	OK	6960 RPM
	Fan Tray 2 Fan 1	OK	8640 RPM
	Fan Tray 2 Fan 2	OK	8640 RPM
	Fan Tray 2 Fan 3	OK	8760 RPM
	Fan Tray 2 Fan 4	OK	8760 RPM
	Fan Tray 2 Fan 5	OK	8640 RPM
	Fan Tray 2 Fan 6	OK	8640 RPM
	Fan Tray 3 Fan 1	OK	8520 RPM
	Fan Tray 3 Fan 2	OK	8520 RPM
	Fan Tray 3 Fan 3	OK	8640 RPM
	Fan Tray 3 Fan 4	OK	8640 RPM
	Fan Tray 3 Fan 5	OK	8520 RPM
	Fan Tray 3 Fan 6	OK	8520 RPM

#### show chassis environment (MX2020 Router with MPC5EQ and MPC6E)

Class	Item	Status	Measurement
Temp	PSM 0	OK	32 degrees C / 89 degrees F
	PSM 1	OK	32 degrees C / 89 degrees F
	PSM 2	OK	32 degrees C / 89 degrees F
	PSM 3	OK	32 degrees C / 89 degrees F
	PSM 4	OK	32 degrees C / 89 degrees F
	PSM 5	OK	33 degrees C / 91 degrees F
	PSM 6	OK	32 degrees C / 89 degrees F
	PSM 7	OK	32 degrees C / 89 degrees F
	PSM 8	OK	32 degrees C / 89 degrees F
	PSM 9	Absent	
	PSM 10	Absent	
	PSM 11	Absent	
	PSM 12	OK	33 degrees C / 91 degrees F
	PSM 13	OK	33 degrees C / 91 degrees F
	PSM 14	OK	34 degrees C / 93 degrees F
	PSM 15	OK	34 degrees C / 93 degrees F
	PSM 16	OK	33 degrees C / 91 degrees F

PSM 17	OK	33 degrees C / 91 degrees F
PDM 0	OK	
PDM 1	OK	
PDM 2	OK	
PDM 3	OK	
CB 0 IntakeA-Zone0	OK	34 degrees C / 93 degrees F
CB 0 IntakeB-Zone1	OK	26 degrees C / 78 degrees F
CB 0 IntakeC-Zone0	OK	38 degrees C / 100 degrees F
CB 0 ExhaustA-Zone0	OK	34 degrees C / 93 degrees F
CB 0 ExhaustB-Zone1	OK	27 degrees C / 80 degrees F
CB 0 TCBC-Zone0	OK	32 degrees C / 89 degrees F
CB 1 IntakeA-Zone0	OK	24 degrees C / 75 degrees F
CB 1 IntakeB-Zone1	OK	22 degrees C / 71 degrees F
CB 1 IntakeC-Zone0	OK	34 degrees C / 93 degrees F
CB 1 ExhaustA-Zone0	OK	31 degrees C / 87 degrees F
CB 1 ExhaustB-Zone1	OK	24 degrees C / 75 degrees F
CB 1 TCBC-Zone0	OK	27 degrees C / 80 degrees F
SPMB 0 Intake	OK	25 degrees C / 77 degrees F
SPMB 1 Intake	OK	23 degrees C / 73 degrees F
Routing Engine 0	OK	28 degrees C / 82 degrees F
Routing Engine 0 CPU	OK	25 degrees C / 77 degrees F
Routing Engine 1	OK	25 degrees C / 77 degrees F
Routing Engine 1 CPU	OK	24 degrees C / 75 degrees F
SFB 0 Intake-Zone0	OK	45 degrees C / 113 degrees F
SFB 0 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 0 IntakeA-Zone0	OK	32 degrees C / 89 degrees F
SFB 0 IntakeB-Zone1	OK	28 degrees C / 82 degrees F
SFB 0 Exhaust-Zone0	OK	36 degrees C / 96 degrees F
SFB 0 SFB-XF2-Zone1	OK	46 degrees C / 114 degrees F
SFB 0 SFB-XF1-Zone0	OK	48 degrees C / 118 degrees F
SFB 0 SFB-XF0-Zone0	OK	60 degrees C / 140 degrees F
SFB 1 Intake-Zone0	OK	44 degrees C / 111 degrees F
SFB 1 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 1 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 1 IntakeB-Zone1	OK	27 degrees C / 80 degrees F
SFB 1 Exhaust-Zone0	OK	37 degrees C / 98 degrees F
SFB 1 SFB-XF2-Zone1	OK	47 degrees C / 116 degrees F
SFB 1 SFB-XF1-Zone0	OK	49 degrees C / 120 degrees F
SFB 1 SFB-XF0-Zone0	OK	56 degrees C / 132 degrees F
SFB 2 Intake-Zone0	OK	41 degrees C / 105 degrees F
SFB 2 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 2 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 2 IntakeB-Zone1	OK	28 degrees C / 82 degrees F
SFB 2 Exhaust-Zone0	OK	37 degrees C / 98 degrees F
SFB 2 SFB-XF2-Zone1	OK	47 degrees C / 116 degrees F
SFB 2 SFB-XF1-Zone0	OK	55 degrees C / 131 degrees F
SFB 2 SFB-XF0-Zone0	OK	55 degrees C / 131 degrees F
SFB 3 Intake-Zone0	OK	43 degrees C / 109 degrees F
SFB 3 Exhaust-Zone1	OK	33 degrees C / 91 degrees F
SFB 3 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 3 IntakeB-Zone1	OK	27 degrees C / 80 degrees F
SFB 3 Exhaust-Zone0	OK	36 degrees C / 96 degrees F
SFB 3 SFB-XF2-Zone1	OK	46 degrees C / 114 degrees F
SFB 3 SFB-XF1-Zone0	OK	46 degrees C / 114 degrees F
SFB 3 SFB-XF0-Zone0	OK	57 degrees C / 134 degrees F
SFB 4 Intake-Zone0	OK	36 degrees C / 96 degrees F
SFB 4 Exhaust-Zone1	OK	32 degrees C / 89 degrees F
SFB 4 IntakeA-Zone0	OK	31 degrees C / 87 degrees F
SFB 4 IntakeB-Zone1	OK	26 degrees C / 78 degrees F
SFB 4 Exhaust-Zone0	OK	32 degrees C / 89 degrees F

SFB 4 SFB-XF2-Zone1	OK	44 degrees C / 111 degrees F
SFB 4 SFB-XF1-Zone0	OK	45 degrees C / 113 degrees F
SFB 4 SFB-XF0-Zone0	OK	52 degrees C / 125 degrees F
SFB 5 Intake-Zone0	OK	31 degrees C / 87 degrees F
SFB 5 Exhaust-Zone1	OK	30 degrees C / 86 degrees F
SFB 5 IntakeA-Zone0	OK	26 degrees C / 78 degrees F
SFB 5 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 5 Exhaust-Zone0	OK	29 degrees C / 84 degrees F
SFB 5 SFB-XF2-Zone1	OK	43 degrees C / 109 degrees F
SFB 5 SFB-XF1-Zone0	OK	47 degrees C / 116 degrees F
SFB 5 SFB-XF0-Zone0	OK	49 degrees C / 120 degrees F
SFB 6 Intake-Zone0	OK	30 degrees C / 86 degrees F
SFB 6 Exhaust-Zone1	OK	29 degrees C / 84 degrees F
SFB 6 IntakeA-Zone0	OK	25 degrees C / 77 degrees F
SFB 6 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 6 Exhaust-Zone0	OK	29 degrees C / 84 degrees F
SFB 6 SFB-XF2-Zone1	OK	43 degrees C / 109 degrees F
SFB 6 SFB-XF1-Zone0	OK	44 degrees C / 111 degrees F
SFB 6 SFB-XF0-Zone0	OK	45 degrees C / 113 degrees F
SFB 7 Intake-Zone0	OK	31 degrees C / 87 degrees F
SFB 7 Exhaust-Zone1	OK	30 degrees C / 86 degrees F
SFB 7 IntakeA-Zone0	OK	26 degrees C / 78 degrees F
SFB 7 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 7 Exhaust-Zone0	OK	28 degrees C / 82 degrees F
SFB 7 SFB-XF2-Zone1	OK	50 degrees C / 122 degrees F
SFB 7 SFB-XF1-Zone0	OK	43 degrees C / 109 degrees F
SFB 7 SFB-XF0-Zone0	OK	47 degrees C / 116 degrees F
FPC 0 Intake	OK	31 degrees C / 87 degrees F
FPC 0 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 0 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 0 XL TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL Chip	OK	46 degrees C / 114 degrees F
FPC 0 XL_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL_XR0 Chip	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL_XR1 Chip	OK	48 degrees C / 118 degrees F
FPC 0 XQ TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ Chip	OK	44 degrees C / 111 degrees F
FPC 0 XQ_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 0 XQ_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ_XR1 Chip	OK	55 degrees C / 131 degrees F
FPC 0 XM 0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XM 0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XM 1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XM 1 Chip	OK	44 degrees C / 111 degrees F
FPC 0 PLX PCIe Switch TSe	OK	48 degrees C / 118 degrees F
FPC 0 PLX PCIe Switch Chi	OK	57 degrees C / 134 degrees F
FPC 1 Intake	OK	29 degrees C / 84 degrees F
FPC 1 Exhaust A	OK	36 degrees C / 96 degrees F
FPC 1 Exhaust B	OK	44 degrees C / 111 degrees F
FPC 1 LU 0 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 0 Chip	OK	45 degrees C / 113 degrees F
FPC 1 LU 1 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 1 Chip	OK	38 degrees C / 100 degrees F
FPC 1 LU 2 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 2 Chip	OK	42 degrees C / 107 degrees F
FPC 1 LU 3 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 3 Chip	OK	47 degrees C / 116 degrees F
FPC 1 XM 0 TSen	OK	38 degrees C / 100 degrees F



FPC 1 XM 0 Chip	OK	44 degrees C / 111 degrees F
FPC 1 XF 0 TSen	OK	38 degrees C / 100 degrees F
FPC 1 XF 0 Chip	OK	54 degrees C / 129 degrees F
FPC 1 PLX Switch TSen	OK	38 degrees C / 100 degrees F
FPC 1 PLX Switch Chip	OK	41 degrees C / 105 degrees F
FPC 2 Intake	OK	28 degrees C / 82 degrees F
FPC 2 Exhaust A	OK	28 degrees C / 82 degrees F
FPC 2 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 2 LU 0 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 0 Chip	OK	40 degrees C / 104 degrees F
FPC 2 LU 1 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 1 Chip	OK	41 degrees C / 105 degrees F
FPC 2 LU 2 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 2 Chip	OK	34 degrees C / 93 degrees F
FPC 2 LU 3 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 3 Chip	OK	38 degrees C / 100 degrees F
FPC 2 XM 0 TSen	OK	40 degrees C / 104 degrees F
FPC 2 XM 0 Chip	OK	47 degrees C / 116 degrees F
FPC 2 XM 1 TSen	OK	40 degrees C / 104 degrees F
FPC 2 XM 1 Chip	OK	42 degrees C / 107 degrees F
FPC 2 PLX Switch TSen	OK	40 degrees C / 104 degrees F
FPC 2 PLX Switch Chip	OK	39 degrees C / 102 degrees F
FPC 3 Intake	OK	27 degrees C / 80 degrees F
FPC 3 Exhaust A	OK	38 degrees C / 100 degrees F
FPC 3 Exhaust B	OK	31 degrees C / 87 degrees F
FPC 3 QX 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 QX 0 Chip	OK	42 degrees C / 107 degrees F
FPC 3 LU 0 TCAM TSen	OK	38 degrees C / 100 degrees F
FPC 3 LU 0 TCAM Chip	OK	43 degrees C / 109 degrees F
FPC 3 LU 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 LU 0 Chip	OK	42 degrees C / 107 degrees F
FPC 3 MQ 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 MQ 0 Chip	OK	39 degrees C / 102 degrees F
FPC 3 QX 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 QX 1 Chip	OK	36 degrees C / 96 degrees F
FPC 3 LU 1 TCAM TSen	OK	32 degrees C / 89 degrees F
FPC 3 LU 1 TCAM Chip	OK	35 degrees C / 95 degrees F
FPC 3 LU 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 LU 1 Chip	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 MQ 1 Chip	OK	36 degrees C / 96 degrees F
FPC 4 Intake	OK	29 degrees C / 84 degrees F
FPC 4 Exhaust A	OK	36 degrees C / 96 degrees F
FPC 4 Exhaust B	OK	40 degrees C / 104 degrees F
FPC 4 XL TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL Chip	OK	42 degrees C / 107 degrees F
FPC 4 XL_XR0 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL_XR0 Chip	OK	45 degrees C / 113 degrees F
FPC 4 XL_XR1 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL_XR1 Chip	OK	46 degrees C / 114 degrees F
FPC 4 XQ TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ Chip	OK	42 degrees C / 107 degrees F
FPC 4 XQ_XR0 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ_XR0 Chip	OK	54 degrees C / 129 degrees F
FPC 4 XQ_XR1 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ_XR1 Chip	OK	53 degrees C / 127 degrees F
FPC 4 XM 0 TSen	OK	45 degrees C / 113 degrees F
FPC 4 XM 0 Chip	OK	59 degrees C / 138 degrees F
FPC 4 XM 1 TSen	OK	45 degrees C / 113 degrees F
FPC 4 XM 1 Chip	OK	41 degrees C / 105 degrees F

```

FPC 4 PLX PCIe Switch TSe      OK      45 degrees C / 113 degrees F
FPC 4 PLX PCIe Switch Chi      OK      58 degrees C / 136 degrees F
FPC 5 Intake                    OK      29 degrees C / 84 degrees F
FPC 5 Exhaust A                 OK      33 degrees C / 91 degrees F
FPC 5 Exhaust B                 OK      39 degrees C / 102 degrees F
FPC 5 LU 0 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 0 Chip                 OK      40 degrees C / 104 degrees F
FPC 5 LU 1 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 1 Chip                 OK      45 degrees C / 113 degrees F
FPC 5 LU 2 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 2 Chip                 OK      40 degrees C / 104 degrees F
FPC 5 LU 3 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 3 Chip                 OK      46 degrees C / 114 degrees F
FPC 5 MQ 0 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 0 Chip                 OK      33 degrees C / 91 degrees F
FPC 5 MQ 1 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 1 Chip                 OK      35 degrees C / 95 degrees F
FPC 5 MQ 2 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 2 Chip                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 3 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 3 Chip                 OK      32 degrees C / 89 degrees F
FPC 9 Intake                    OK      25 degrees C / 77 degrees F
FPC 9 Exhaust A                 OK      37 degrees C / 98 degrees F
FPC 9 Exhaust B                 OK      40 degrees C / 104 degrees F
FPC 9 XL 0 TSen                 OK      40 degrees C / 104 degrees F
...

```

### show chassis environment (MX2010 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PSM 0	OK	7 degrees C / 44 degrees F
	PSM 1	OK	7 degrees C / 44 degrees F
	PSM 2	OK	7 degrees C / 44 degrees F
	PSM 3	OK	6 degrees C / 42 degrees F
	PSM 4	OK	6 degrees C / 42 degrees F
	PSM 5	OK	6 degrees C / 42 degrees F
	PSM 6	OK	6 degrees C / 42 degrees F
	PSM 7	OK	7 degrees C / 44 degrees F
	PSM 8	OK	7 degrees C / 44 degrees F
	PDM 0	OK	
	PDM 1	Absent	
	CB 0 IntakeA-Zone0	OK	14 degrees C / 57 degrees F
	CB 0 IntakeB-Zone1	OK	7 degrees C / 44 degrees F
	CB 0 IntakeC-Zone0	OK	22 degrees C / 71 degrees F
	CB 0 ExhaustA-Zone0	OK	14 degrees C / 57 degrees F
	CB 0 ExhaustB-Zone1	OK	9 degrees C / 48 degrees F
	CB 0 TCBC-Zone0	OK	11 degrees C / 51 degrees F
	CB 1 IntakeA-Zone0	OK	9 degrees C / 48 degrees F
	CB 1 IntakeB-Zone1	OK	5 degrees C / 41 degrees F
	CB 1 IntakeC-Zone0	OK	20 degrees C / 68 degrees F
	CB 1 ExhaustA-Zone0	OK	12 degrees C / 53 degrees F
	CB 1 ExhaustB-Zone1	OK	7 degrees C / 44 degrees F
	CB 1 TCBC-Zone0	OK	10 degrees C / 50 degrees F
	SPMB 0 Intake	OK	5 degrees C / 41 degrees F
	SPMB 1 Intake	OK	4 degrees C / 39 degrees F
	Routing Engine 0	OK	9 degrees C / 48 degrees F
	Routing Engine 0 CPU	OK	9 degrees C / 48 degrees F
	Routing Engine 1	OK	6 degrees C / 42 degrees F

Routing Engine 1 CPU	OK	6 degrees C / 42 degrees F
SFB 0 Intake-Zone0	OK	26 degrees C / 78 degrees F
SFB 0 Exhaust-Zone1	OK	17 degrees C / 62 degrees F
SFB 0 IntakeA-Zone0	OK	16 degrees C / 60 degrees F
SFB 0 IntakeB-Zone1	OK	11 degrees C / 51 degrees F
SFB 0 Exhaust-Zone0	OK	18 degrees C / 64 degrees F
SFB 0 SFB-XF2-Zone1	OK	25 degrees C / 77 degrees F
SFB 0 SFB-XF1-Zone0	OK	23 degrees C / 73 degrees F
SFB 0 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
SFB 1 Intake-Zone0	OK	27 degrees C / 80 degrees F
SFB 1 Exhaust-Zone1	OK	15 degrees C / 59 degrees F
SFB 1 IntakeA-Zone0	OK	20 degrees C / 68 degrees F
SFB 1 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 1 Exhaust-Zone0	OK	19 degrees C / 66 degrees F
SFB 1 SFB-XF2-Zone1	OK	26 degrees C / 78 degrees F
SFB 1 SFB-XF1-Zone0	OK	27 degrees C / 80 degrees F
SFB 1 SFB-XF0-Zone0	OK	32 degrees C / 89 degrees F
SFB 2 Intake-Zone0	OK	21 degrees C / 69 degrees F
SFB 2 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 2 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 2 IntakeB-Zone1	OK	9 degrees C / 48 degrees F
SFB 2 Exhaust-Zone0	OK	16 degrees C / 60 degrees F
SFB 2 SFB-XF2-Zone1	OK	24 degrees C / 75 degrees F
SFB 2 SFB-XF1-Zone0	OK	21 degrees C / 69 degrees F
SFB 2 SFB-XF0-Zone0	OK	26 degrees C / 78 degrees F
SFB 4 Intake-Zone0	OK	28 degrees C / 82 degrees F
SFB 4 Exhaust-Zone1	OK	16 degrees C / 60 degrees F
SFB 4 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 4 IntakeB-Zone1	OK	11 degrees C / 51 degrees F
SFB 4 Exhaust-Zone0	OK	19 degrees C / 66 degrees F
SFB 4 SFB-XF2-Zone1	OK	27 degrees C / 80 degrees F
SFB 4 SFB-XF1-Zone0	OK	27 degrees C / 80 degrees F
SFB 4 SFB-XF0-Zone0	OK	32 degrees C / 89 degrees F
SFB 5 Intake-Zone0	OK	22 degrees C / 71 degrees F
SFB 5 Exhaust-Zone1	OK	14 degrees C / 57 degrees F
SFB 5 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 5 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 5 Exhaust-Zone0	OK	17 degrees C / 62 degrees F
SFB 5 SFB-XF2-Zone1	OK	22 degrees C / 71 degrees F
SFB 5 SFB-XF1-Zone0	OK	29 degrees C / 84 degrees F
SFB 5 SFB-XF0-Zone0	OK	27 degrees C / 80 degrees F
SFB 6 Intake-Zone0	OK	27 degrees C / 80 degrees F
SFB 6 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 6 IntakeA-Zone0	OK	19 degrees C / 66 degrees F
SFB 6 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 6 Exhaust-Zone0	OK	20 degrees C / 68 degrees F
SFB 6 SFB-XF2-Zone1	OK	24 degrees C / 75 degrees F
SFB 6 SFB-XF1-Zone0	OK	32 degrees C / 89 degrees F
SFB 6 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
SFB 7 Intake-Zone0	OK	25 degrees C / 77 degrees F
SFB 7 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 7 IntakeA-Zone0	OK	14 degrees C / 57 degrees F
SFB 7 IntakeB-Zone1	OK	8 degrees C / 46 degrees F
SFB 7 Exhaust-Zone0	OK	17 degrees C / 62 degrees F
SFB 7 SFB-XF2-Zone1	OK	21 degrees C / 69 degrees F
SFB 7 SFB-XF1-Zone0	OK	21 degrees C / 69 degrees F
SFB 7 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
FPC 0 Intake	OK	13 degrees C / 55 degrees F
FPC 0 Exhaust A	OK	13 degrees C / 55 degrees F
FPC 0 Exhaust B	OK	14 degrees C / 57 degrees F

FPC 0 LU 0 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 0 Chip	OK	25 degrees C / 77 degrees F
FPC 0 LU 1 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 0 LU 2 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 0 LU 3 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 3 Chip	OK	23 degrees C / 73 degrees F
FPC 0 XM 0 TSen	OK	28 degrees C / 82 degrees F
FPC 0 XM 0 Chip	OK	33 degrees C / 91 degrees F
FPC 0 XM 1 TSen	OK	28 degrees C / 82 degrees F
FPC 0 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 0 PLX Switch TSen	OK	28 degrees C / 82 degrees F
FPC 0 PLX Switch Chip	OK	26 degrees C / 78 degrees F
FPC 1 Intake	OK	10 degrees C / 50 degrees F
FPC 1 Exhaust A	OK	24 degrees C / 75 degrees F
FPC 1 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 1 LU 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 0 Chip	OK	31 degrees C / 87 degrees F
FPC 1 LU 1 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 1 Chip	OK	21 degrees C / 69 degrees F
FPC 1 LU 2 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 2 Chip	OK	25 degrees C / 77 degrees F
FPC 1 LU 3 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 1 XM 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 XM 0 Chip	OK	30 degrees C / 86 degrees F
FPC 1 XF 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 XF 0 Chip	OK	37 degrees C / 98 degrees F
FPC 1 PLX Switch TSen	OK	22 degrees C / 71 degrees F
FPC 1 PLX Switch Chip	OK	22 degrees C / 71 degrees F
FPC 2 Intake	OK	9 degrees C / 48 degrees F
FPC 2 Exhaust A	OK	10 degrees C / 50 degrees F
FPC 2 Exhaust B	OK	10 degrees C / 50 degrees F
FPC 2 LU 0 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 0 Chip	OK	25 degrees C / 77 degrees F
FPC 2 LU 1 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 1 Chip	OK	26 degrees C / 78 degrees F
FPC 2 LU 2 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 2 Chip	OK	17 degrees C / 62 degrees F
FPC 2 LU 3 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 2 XM 0 TSen	OK	26 degrees C / 78 degrees F
FPC 2 XM 0 Chip	OK	34 degrees C / 93 degrees F
FPC 2 XM 1 TSen	OK	26 degrees C / 78 degrees F
FPC 2 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 2 PLX Switch TSen	OK	26 degrees C / 78 degrees F
FPC 2 PLX Switch Chip	OK	20 degrees C / 68 degrees F
FPC 3 Intake	OK	12 degrees C / 53 degrees F
FPC 3 Exhaust A	OK	16 degrees C / 60 degrees F
FPC 3 Exhaust B	OK	26 degrees C / 78 degrees F
FPC 3 LU 0 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 0 Chip	OK	26 degrees C / 78 degrees F
FPC 3 LU 1 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 3 LU 2 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 2 Chip	OK	22 degrees C / 71 degrees F
FPC 3 LU 3 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 3 Chip	OK	21 degrees C / 69 degrees F
FPC 3 MQ 0 TSen	OK	15 degrees C / 59 degrees F

FPC 3 MQ 0 Chip	OK	18 degrees C / 64 degrees F
FPC 3 MQ 1 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 1 Chip	OK	20 degrees C / 68 degrees F
FPC 3 MQ 2 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 2 Chip	OK	17 degrees C / 62 degrees F
FPC 3 MQ 3 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 3 Chip	OK	16 degrees C / 60 degrees F
FPC 4 Intake	OK	11 degrees C / 51 degrees F
FPC 4 Exhaust A	OK	22 degrees C / 71 degrees F
FPC 4 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 4 LU 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 0 Chip	OK	33 degrees C / 91 degrees F
FPC 4 LU 1 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 1 Chip	OK	21 degrees C / 69 degrees F
FPC 4 LU 2 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 2 Chip	OK	26 degrees C / 78 degrees F
FPC 4 LU 3 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 4 XM 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 XM 0 Chip	OK	30 degrees C / 86 degrees F
FPC 4 XF 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 XF 0 Chip	OK	37 degrees C / 98 degrees F
FPC 4 PLX Switch TSen	OK	22 degrees C / 71 degrees F
FPC 4 PLX Switch Chip	OK	23 degrees C / 73 degrees F
FPC 5 Intake	OK	12 degrees C / 53 degrees F
FPC 5 Exhaust A	OK	12 degrees C / 53 degrees F
FPC 5 Exhaust B	OK	12 degrees C / 53 degrees F
FPC 5 LU 0 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 0 Chip	OK	28 degrees C / 82 degrees F
FPC 5 LU 1 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 5 LU 2 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 5 LU 3 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 5 XM 0 TSen	OK	27 degrees C / 80 degrees F
FPC 5 XM 0 Chip	OK	36 degrees C / 96 degrees F
FPC 5 XM 1 TSen	OK	27 degrees C / 80 degrees F
FPC 5 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 5 PLX Switch TSen	OK	27 degrees C / 80 degrees F
FPC 5 PLX Switch Chip	OK	24 degrees C / 75 degrees F
FPC 6 Intake	OK	12 degrees C / 53 degrees F
FPC 6 Exhaust A	OK	17 degrees C / 62 degrees F
FPC 6 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 6 LU 0 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 0 Chip	OK	29 degrees C / 84 degrees F
FPC 6 LU 1 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 1 Chip	OK	30 degrees C / 86 degrees F
FPC 6 LU 2 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 2 Chip	OK	24 degrees C / 75 degrees F
FPC 6 LU 3 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 6 MQ 0 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 0 Chip	OK	19 degrees C / 66 degrees F
FPC 6 MQ 1 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 1 Chip	OK	20 degrees C / 68 degrees F
FPC 6 MQ 2 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 2 Chip	OK	17 degrees C / 62 degrees F
FPC 6 MQ 3 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 3 Chip	OK	16 degrees C / 60 degrees F

FPC 7 Intake	OK	10 degrees C / 50 degrees F
FPC 7 Exhaust A	OK	10 degrees C / 50 degrees F
FPC 7 Exhaust B	OK	11 degrees C / 51 degrees F
FPC 7 LU 0 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 0 Chip	OK	26 degrees C / 78 degrees F
FPC 7 LU 1 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 1 Chip	OK	29 degrees C / 84 degrees F
FPC 7 LU 2 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 7 LU 3 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 3 Chip	OK	24 degrees C / 75 degrees F
FPC 7 XM 0 TSen	OK	26 degrees C / 78 degrees F
FPC 7 XM 0 Chip	OK	34 degrees C / 93 degrees F
FPC 7 XM 1 TSen	OK	26 degrees C / 78 degrees F
FPC 7 XM 1 Chip	OK	32 degrees C / 89 degrees F
FPC 7 PLX Switch TSen	OK	26 degrees C / 78 degrees F
FPC 7 PLX Switch Chip	OK	22 degrees C / 71 degrees F
FPC 8 Intake	OK	10 degrees C / 50 degrees F
FPC 8 Exhaust A	OK	22 degrees C / 71 degrees F
FPC 8 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 8 LU 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 0 Chip	OK	33 degrees C / 91 degrees F
FPC 8 LU 1 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 1 Chip	OK	23 degrees C / 73 degrees F
FPC 8 LU 2 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 2 Chip	OK	26 degrees C / 78 degrees F
FPC 8 LU 3 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 8 XM 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 XM 0 Chip	OK	29 degrees C / 84 degrees F
FPC 8 XF 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 XF 0 Chip	OK	38 degrees C / 100 degrees F
FPC 8 PLX Switch TSen	OK	20 degrees C / 68 degrees F
FPC 8 PLX Switch Chip	OK	24 degrees C / 75 degrees F
FPC 9 Intake	OK	11 degrees C / 51 degrees F
FPC 9 Exhaust A	OK	11 degrees C / 51 degrees F
FPC 9 Exhaust B	OK	11 degrees C / 51 degrees F
FPC 9 LU 0 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 0 Chip	OK	24 degrees C / 75 degrees F
FPC 9 LU 1 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 1 Chip	OK	26 degrees C / 78 degrees F
FPC 9 LU 2 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 2 Chip	OK	16 degrees C / 60 degrees F
FPC 9 LU 3 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 3 Chip	OK	21 degrees C / 69 degrees F
FPC 9 XM 0 TSen	OK	25 degrees C / 77 degrees F
FPC 9 XM 0 Chip	OK	32 degrees C / 89 degrees F
FPC 9 XM 1 TSen	OK	25 degrees C / 77 degrees F
FPC 9 XM 1 Chip	OK	25 degrees C / 77 degrees F
FPC 9 PLX Switch TSen	OK	25 degrees C / 77 degrees F
FPC 9 PLX Switch Chip	OK	21 degrees C / 69 degrees F
ADC 0 Intake	OK	12 degrees C / 53 degrees F
ADC 0 Exhaust	OK	20 degrees C / 68 degrees F
ADC 0 ADC-XF1	OK	26 degrees C / 78 degrees F
ADC 0 ADC-XF0	OK	32 degrees C / 89 degrees F
ADC 1 Intake	OK	11 degrees C / 51 degrees F
ADC 1 Exhaust	OK	21 degrees C / 69 degrees F
ADC 1 ADC-XF1	OK	24 degrees C / 75 degrees F
ADC 1 ADC-XF0	OK	31 degrees C / 87 degrees F
ADC 2 Intake	OK	14 degrees C / 57 degrees F

			ADC 2 Exhaust	OK	21 degrees C / 69 degrees F
			ADC 2 ADC-XF1	OK	28 degrees C / 82 degrees F
			ADC 2 ADC-XF0	OK	34 degrees C / 93 degrees F
			ADC 3 Intake	OK	13 degrees C / 55 degrees F
			ADC 3 Exhaust	OK	19 degrees C / 66 degrees F
			ADC 3 ADC-XF1	OK	24 degrees C / 75 degrees F
			ADC 3 ADC-XF0	OK	31 degrees C / 87 degrees F
			ADC 4 Intake	OK	9 degrees C / 48 degrees F
			ADC 4 Exhaust	OK	22 degrees C / 71 degrees F
			ADC 4 ADC-XF1	OK	28 degrees C / 82 degrees F
			ADC 4 ADC-XF0	OK	35 degrees C / 95 degrees F
			ADC 5 Intake	OK	12 degrees C / 53 degrees F
			ADC 5 Exhaust	OK	22 degrees C / 71 degrees F
			ADC 5 ADC-XF1	OK	28 degrees C / 82 degrees F
			ADC 5 ADC-XF0	OK	34 degrees C / 93 degrees F
			ADC 6 Intake	OK	11 degrees C / 51 degrees F
			ADC 6 Exhaust	OK	21 degrees C / 69 degrees F
			ADC 6 ADC-XF1	OK	26 degrees C / 78 degrees F
			ADC 6 ADC-XF0	OK	35 degrees C / 95 degrees F
			ADC 7 Intake	OK	14 degrees C / 57 degrees F
			ADC 7 Exhaust	OK	22 degrees C / 71 degrees F
			ADC 7 ADC-XF1	OK	26 degrees C / 78 degrees F
			ADC 7 ADC-XF0	OK	34 degrees C / 93 degrees F
			ADC 8 Intake	OK	14 degrees C / 57 degrees F
			ADC 8 Exhaust	OK	21 degrees C / 69 degrees F
			ADC 8 ADC-XF1	OK	24 degrees C / 75 degrees F
			ADC 8 ADC-XF0	OK	31 degrees C / 87 degrees F
			ADC 9 Intake	OK	10 degrees C / 50 degrees F
			ADC 9 Exhaust	OK	22 degrees C / 71 degrees F
			ADC 9 ADC-XF1	OK	28 degrees C / 82 degrees F
			ADC 9 ADC-XF0	OK	36 degrees C / 96 degrees F
Fans			Fan Tray 0 Fan 1	OK	3480 RPM
			Fan Tray 0 Fan 2	OK	3480 RPM
			Fan Tray 0 Fan 3	OK	3480 RPM
			Fan Tray 0 Fan 4	OK	3360 RPM
			Fan Tray 0 Fan 5	OK	3360 RPM
			Fan Tray 0 Fan 6	OK	3480 RPM
			Fan Tray 1 Fan 1	OK	3360 RPM
			Fan Tray 1 Fan 2	OK	3360 RPM
			Fan Tray 1 Fan 3	OK	3360 RPM
			Fan Tray 1 Fan 4	OK	3480 RPM
			Fan Tray 1 Fan 5	OK	3480 RPM
			Fan Tray 1 Fan 6	OK	3480 RPM
			Fan Tray 2 Fan 1	OK	3360 RPM
			Fan Tray 2 Fan 2	OK	3360 RPM
			Fan Tray 2 Fan 3	OK	3480 RPM
			Fan Tray 2 Fan 4	OK	3480 RPM
			Fan Tray 2 Fan 5	OK	3360 RPM
			Fan Tray 2 Fan 6	OK	3480 RPM
			Fan Tray 3 Fan 1	OK	3360 RPM
			Fan Tray 3 Fan 2	OK	3360 RPM
			Fan Tray 3 Fan 3	OK	3480 RPM
			Fan Tray 3 Fan 4	OK	3480 RPM
			Fan Tray 3 Fan 5	OK	3480 RPM
			Fan Tray 3 Fan 6	OK	3360 RPM

**show chassis environment (MX2008 Router)**

```
user@host>show chassis environment
```

Class	Item	Status	Measurement
Temp	PSM 0	Absent	
	PSM 1	OK	29 degrees C / 84 degrees F
	PSM 2	OK	30 degrees C / 86 degrees F
	PSM 3	OK	29 degrees C / 84 degrees F
	PSM 4	OK	29 degrees C / 84 degrees F
	PSM 5	OK	30 degrees C / 86 degrees F
	PSM 6	OK	29 degrees C / 84 degrees F
	PSM 7	OK	31 degrees C / 87 degrees F
	PSM 8	Absent	
	PDM 0	OK	
	PDM 1	OK	
	CB 0 Inlet1	OK	37 degrees C / 98 degrees F
	CB 0 Inlet2	OK	45 degrees C / 113 degrees F
	CB 0 Inlet3	OK	44 degrees C / 111 degrees F
	CB 0 Inlet4	OK	41 degrees C / 105 degrees F
	CB 0 Exhaust1	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust2	OK	40 degrees C / 104 degrees F
	CB 0 Exhaust3	OK	48 degrees C / 118 degrees F
	CB 0 Exhaust4	OK	46 degrees C / 114 degrees F
	CB 1 Inlet1	OK	30 degrees C / 86 degrees F
	CB 1 Inlet2	OK	31 degrees C / 87 degrees F
	CB 1 Inlet3	OK	29 degrees C / 84 degrees F
	CB 1 Inlet4	OK	32 degrees C / 89 degrees F
	CB 1 Exhaust1	OK	30 degrees C / 86 degrees F
	CB 1 Exhaust2	OK	33 degrees C / 91 degrees F
	CB 1 Exhaust3	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust4	OK	34 degrees C / 93 degrees F
	Routing Engine 0	OK	
	Routing Engine 0 CPU	OK	75 degrees C / 167 degrees F
	Routing Engine 1	OK	
	Routing Engine 1 CPU	OK	46 degrees C / 114 degrees F
	SFB 0 Inlet2	OK	44 degrees C / 111 degrees F
	SFB 0 Exhaust1	OK	39 degrees C / 102 degrees F
	SFB 0 Inlet1	OK	41 degrees C / 105 degrees F
	SFB 0 Exhaust2	OK	45 degrees C / 113 degrees F
	SFB 0 SFB2-PF-local	OK	45 degrees C / 113 degrees F
	SFB 0 SFB2-PF-die	OK	51 degrees C / 123 degrees F
	SFB 1 Inlet2	OK	30 degrees C / 86 degrees F
	SFB 1 Exhaust1	OK	27 degrees C / 80 degrees F
	SFB 1 Inlet1	OK	28 degrees C / 82 degrees F
	SFB 1 Exhaust2	OK	31 degrees C / 87 degrees F
	SFB 1 SFB2-PF-local	OK	30 degrees C / 86 degrees F
	SFB 1 SFB2-PF-die	OK	37 degrees C / 98 degrees F
	SFB 2 Inlet2	OK	28 degrees C / 82 degrees F
	SFB 2 Exhaust1	OK	26 degrees C / 78 degrees F
	SFB 2 Inlet1	OK	27 degrees C / 80 degrees F
	SFB 2 Exhaust2	OK	28 degrees C / 82 degrees F
	SFB 2 SFB2-PF-local	OK	27 degrees C / 80 degrees F
	SFB 2 SFB2-PF-die	OK	33 degrees C / 91 degrees F
	SFB 3 Inlet2	OK	28 degrees C / 82 degrees F
	SFB 3 Exhaust1	OK	26 degrees C / 78 degrees F
	SFB 3 Inlet1	OK	26 degrees C / 78 degrees F
	SFB 3 Exhaust2	OK	28 degrees C / 82 degrees F
	SFB 3 SFB2-PF-local	OK	27 degrees C / 80 degrees F
	SFB 3 SFB2-PF-die	OK	33 degrees C / 91 degrees F
	SFB 4 Inlet2	OK	28 degrees C / 82 degrees F
	SFB 4 Exhaust1	OK	26 degrees C / 78 degrees F
	SFB 4 Inlet1	OK	26 degrees C / 78 degrees F
	SFB 4 Exhaust2	OK	28 degrees C / 82 degrees F



SFB 4 SFB2-PF-local	OK	27 degrees C / 80 degrees F
SFB 4 SFB2-PF-die	OK	32 degrees C / 89 degrees F
SFB 5 Inlet2	OK	29 degrees C / 84 degrees F
SFB 5 Exhaust1	OK	27 degrees C / 80 degrees F
SFB 5 Inlet1	OK	28 degrees C / 82 degrees F
SFB 5 Exhaust2	OK	29 degrees C / 84 degrees F
SFB 5 SFB2-PF-local	OK	28 degrees C / 82 degrees F
SFB 5 SFB2-PF-die	OK	34 degrees C / 93 degrees F
SFB 6 Inlet2	OK	33 degrees C / 91 degrees F
SFB 6 Exhaust1	OK	32 degrees C / 89 degrees F
SFB 6 Inlet1	OK	32 degrees C / 89 degrees F
SFB 6 Exhaust2	OK	34 degrees C / 93 degrees F
SFB 6 SFB2-PF-local	OK	33 degrees C / 91 degrees F
SFB 6 SFB2-PF-die	OK	40 degrees C / 104 degrees F
SFB 7 Inlet2	OK	29 degrees C / 84 degrees F
SFB 7 Exhaust1	OK	28 degrees C / 82 degrees F
SFB 7 Inlet1	OK	29 degrees C / 84 degrees F
SFB 7 Exhaust2	OK	29 degrees C / 84 degrees F
SFB 7 SFB2-PF-local	OK	28 degrees C / 82 degrees F
SFB 7 SFB2-PF-die	OK	33 degrees C / 91 degrees F
FPC 0 Intake	OK	29 degrees C / 84 degrees F
FPC 0 Exhaust A	OK	42 degrees C / 107 degrees F
FPC 0 Exhaust B	OK	42 degrees C / 107 degrees F
FPC 0 XL 0 TSen	OK	38 degrees C / 100 degrees F
FPC 0 XL 0 Chip	OK	53 degrees C / 127 degrees F
FPC 0 XL 0 XR2 0 TSen	OK	38 degrees C / 100 degrees F
FPC 0 XL 0 XR2 0 Chip	OK	59 degrees C / 138 degrees F
FPC 0 XL 0 XR2 1 TSen	OK	38 degrees C / 100 degrees F
FPC 0 XL 0 XR2 1 Chip	OK	59 degrees C / 138 degrees F
FPC 0 XL 1 TSen	OK	30 degrees C / 86 degrees F
FPC 0 XL 1 Chip	OK	42 degrees C / 107 degrees F
FPC 0 XL 1 XR2 0 TSen	OK	30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 XL 1 XR2 1 TSen	OK	30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 1 Chip	OK	50 degrees C / 122 degrees F
FPC 0 XM 0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 XM 1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 1 Chip	OK	42 degrees C / 107 degrees F
FPC 0 XM 2 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 2 Chip	OK	42 degrees C / 107 degrees F
FPC 0 XM 3 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 3 Chip	OK	40 degrees C / 104 degrees F
FPC 0 PCIe Switch TSen	OK	42 degrees C / 107 degrees F
FPC 0 PCIe Switch Chip	OK	22 degrees C / 71 degrees F
FPC 1 Intake	OK	29 degrees C / 84 degrees F
FPC 1 Exhaust A	OK	52 degrees C / 125 degrees F
FPC 1 Exhaust B	OK	44 degrees C / 111 degrees F
FPC 1 EA0 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA0 Chip	OK	47 degrees C / 116 degrees F
FPC 1 EA0_XR0 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA0_XR0 Chip	OK	56 degrees C / 132 degrees F
FPC 1 EA0_XR1 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA0_XR1 Chip	OK	53 degrees C / 127 degrees F
FPC 1 EA1 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA1 Chip	OK	49 degrees C / 120 degrees F
FPC 1 EA1_XR0 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA1_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 1 EA1_XR1 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA1_XR1 Chip	OK	58 degrees C / 136 degrees F

FPC 1 PEX TSen	OK	54 degrees C / 129 degrees F
FPC 1 PEX Chip	OK	39 degrees C / 102 degrees F
FPC 1 EA2 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA2 Chip	OK	39 degrees C / 102 degrees F
FPC 1 EA2_XR0 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA2_XR0 Chip	OK	45 degrees C / 113 degrees F
FPC 1 EA2_XR1 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA2_XR1 Chip	OK	42 degrees C / 107 degrees F
FPC 1 EA3 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA3 Chip	OK	40 degrees C / 104 degrees F
FPC 1 EA3_XR0 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA3_XR0 Chip	OK	50 degrees C / 122 degrees F
FPC 1 EA3_XR1 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA3_XR1 Chip	OK	46 degrees C / 114 degrees F
FPC 1 EA0_HMC0 Logic die	OK	60 degrees C / 140 degrees F
FPC 1 EA0_HMC0 DRAM botm	OK	57 degrees C / 134 degrees F
FPC 1 EA0_HMC1 Logic die	OK	61 degrees C / 141 degrees F
FPC 1 EA0_HMC1 DRAM botm	OK	58 degrees C / 136 degrees F
FPC 1 EA0_HMC2 Logic die	OK	57 degrees C / 134 degrees F
FPC 1 EA0_HMC2 DRAM botm	OK	54 degrees C / 129 degrees F
FPC 1 EA1_HMC0 Logic die	OK	65 degrees C / 149 degrees F
FPC 1 EA1_HMC0 DRAM botm	OK	62 degrees C / 143 degrees F
FPC 1 EA1_HMC1 Logic die	OK	64 degrees C / 147 degrees F
FPC 1 EA1_HMC1 DRAM botm	OK	61 degrees C / 141 degrees F
FPC 1 EA1_HMC2 Logic die	OK	61 degrees C / 141 degrees F
FPC 1 EA1_HMC2 DRAM botm	OK	58 degrees C / 136 degrees F
FPC 1 EA2_HMC0 Logic die	OK	50 degrees C / 122 degrees F
FPC 1 EA2_HMC0 DRAM botm	OK	47 degrees C / 116 degrees F
FPC 1 EA2_HMC1 Logic die	OK	54 degrees C / 129 degrees F
FPC 1 EA2_HMC1 DRAM botm	OK	51 degrees C / 123 degrees F
FPC 1 EA2_HMC2 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA2_HMC2 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 1 EA3_HMC0 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA3_HMC0 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 1 EA3_HMC1 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA3_HMC1 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 1 EA3_HMC2 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA3_HMC2 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 7 Intake	OK	30 degrees C / 86 degrees F
FPC 7 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 7 Exhaust B	OK	38 degrees C / 100 degrees F
FPC 7 QX 0 TSen	OK	48 degrees C / 118 degrees F
FPC 7 QX 0 Chip	OK	51 degrees C / 123 degrees F
FPC 7 LU 0 TCAM TSen	OK	48 degrees C / 118 degrees F
FPC 7 LU 0 TCAM Chip	OK	51 degrees C / 123 degrees F
FPC 7 LU 0 TSen	OK	48 degrees C / 118 degrees F
FPC 7 LU 0 Chip	OK	50 degrees C / 122 degrees F
FPC 7 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 7 MQ 0 Chip	OK	54 degrees C / 129 degrees F
FPC 7 QX 1 TSen	OK	41 degrees C / 105 degrees F
FPC 7 QX 1 Chip	OK	42 degrees C / 107 degrees F
FPC 7 LU 1 TCAM TSen	OK	41 degrees C / 105 degrees F
FPC 7 LU 1 TCAM Chip	OK	43 degrees C / 109 degrees F
FPC 7 LU 1 TSen	OK	41 degrees C / 105 degrees F
FPC 7 LU 1 Chip	OK	46 degrees C / 114 degrees F
FPC 7 MQ 1 TSen	OK	41 degrees C / 105 degrees F
FPC 7 MQ 1 Chip	OK	47 degrees C / 116 degrees F
ADC 7 Intake	OK	32 degrees C / 89 degrees F
ADC 7 Exhaust	OK	39 degrees C / 102 degrees F
ADC 7 ADC-XF1	OK	46 degrees C / 114 degrees F

	ADC 7 ADC-XF0	OK	54 degrees C / 129 degrees F
Fans	Fan Tray 0 Fan 1	OK	6240 RPM
	Fan Tray 0 Fan 2	OK	6120 RPM
	Fan Tray 0 Fan 3	OK	6120 RPM
	Fan Tray 0 Fan 4	OK	5760 RPM
	Fan Tray 0 Fan 5	OK	5880 RPM
	Fan Tray 0 Fan 6	OK	6000 RPM
	Fan Tray 1 Fan 1	OK	5880 RPM
	Fan Tray 1 Fan 2	OK	5880 RPM
	Fan Tray 1 Fan 3	OK	6000 RPM
	Fan Tray 1 Fan 4	OK	6000 RPM
	Fan Tray 1 Fan 5	OK	6000 RPM
	Fan Tray 1 Fan 6	OK	6000 RPM

### show chassis environment (T320 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	
	PEM 1	Absent	
Temp	SCG 0	OK	28 degrees C / 82 degrees F
	SCG 1	OK	28 degrees C / 82 degrees F
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	33 degrees C / 91 degrees F
	SIB 1	OK	33 degrees C / 91 degrees F
	SIB 2	OK	34 degrees C / 93 degrees F
	FPC 0 Top	OK	38 degrees C / 100 degrees F
	FPC 0 Bottom	OK	32 degrees C / 89 degrees F
	FPC 1 Top	OK	38 degrees C / 100 degrees F
	FPC 1 Bottom	OK	33 degrees C / 91 degrees F
	FPC 2 Top	OK	36 degrees C / 96 degrees F
	FPC 2 Bottom	OK	31 degrees C / 87 degrees F
	FPM GBUS	OK	26 degrees C / 78 degrees F
	FPM Display	OK	29 degrees C / 84 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

## show chassis environment (MX10003 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	CB 0 Exhaust Temp Sensor 0x49	OK	36 degrees C / 96 degrees F
	CB 0 Inlet Temp Sensor 0x49	OK	29 degrees C / 84 degrees F
	CB 1 Exhaust Temp Sensor 0x49	OK	36 degrees C / 96 degrees F
	CB 1 Inlet Temp Sensor 0x49	OK	31 degrees C / 87 degrees F
	FPC 0 Intake Temp Sensor	OK	29 degrees C / 84 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	55 degrees C / 131 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 0 EA0 Chip	OK	58 degrees C / 136 degrees F
	FPC 0 EA0-XR0 Chip	OK	61 degrees C / 141 degrees F
	FPC 0 EA0-XR1 Chip	OK	62 degrees C / 143 degrees F
	FPC 0 EA1 Chip	OK	67 degrees C / 152 degrees F
	FPC 0 EA1-XR0 Chip	OK	71 degrees C / 159 degrees F
	FPC 0 EA1-XR1 Chip	OK	72 degrees C / 161 degrees F
	FPC 0 PEX Chip	OK	75 degrees C / 167 degrees F
	FPC 0 EA2 Chip	OK	49 degrees C / 120 degrees F
	FPC 0 EA2-XR0 Chip	OK	55 degrees C / 131 degrees F
	FPC 0 EA2-XR1 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 PF Chip	OK	68 degrees C / 154 degrees F
	FPC 0 EA0_HMC0 Logic die	OK	72 degrees C / 161 degrees F
	FPC 0 EA0_HMC0 DRAM botm	OK	69 degrees C / 156 degrees F
	FPC 0 EA0_HMC1 Logic die	OK	72 degrees C / 161 degrees F
	FPC 0 EA0_HMC1 DRAM botm	OK	69 degrees C / 156 degrees F
	FPC 0 EA0_HMC2 Logic die	OK	75 degrees C / 167 degrees F
	FPC 0 EA0_HMC2 DRAM botm	OK	72 degrees C / 161 degrees F
	FPC 0 EA1_HMC0 Logic die	OK	81 degrees C / 177 degrees F
	FPC 0 EA1_HMC0 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 0 EA1_HMC1 Logic die	OK	79 degrees C / 174 degrees F
	FPC 0 EA1_HMC1 DRAM botm	OK	76 degrees C / 168 degrees F
	FPC 0 EA1_HMC2 Logic die	OK	82 degrees C / 179 degrees F
	FPC 0 EA1_HMC2 DRAM botm	OK	79 degrees C / 174 degrees F
	FPC 0 EA2_HMC0 Logic die	OK	61 degrees C / 141 degrees F
	FPC 0 EA2_HMC0 DRAM botm	OK	58 degrees C / 136 degrees F
	FPC 0 EA2_HMC1 Logic die	OK	62 degrees C / 143 degrees F
	FPC 0 EA2_HMC1 DRAM botm	OK	59 degrees C / 138 degrees F
	FPC 0 EA2_HMC2 Logic die	OK	64 degrees C / 147 degrees F
	FPC 0 EA2_HMC2 DRAM botm	OK	61 degrees C / 141 degrees F
	FPC 1 Intake Temp Sensor	OK	28 degrees C / 82 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 1 EA0 Chip	OK	64 degrees C / 147 degrees F
	FPC 1 EA0-XR0 Chip	OK	67 degrees C / 152 degrees F
	FPC 1 EA0-XR1 Chip	OK	68 degrees C / 154 degrees F
	FPC 1 EA1 Chip	OK	70 degrees C / 158 degrees F
	FPC 1 EA1-XR0 Chip	OK	74 degrees C / 165 degrees F
	FPC 1 EA1-XR1 Chip	OK	74 degrees C / 165 degrees F
	FPC 1 PEX Chip	OK	88 degrees C / 190 degrees F
	FPC 1 EA2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 EA2-XR0 Chip	OK	54 degrees C / 129 degrees F
	FPC 1 EA2-XR1 Chip	OK	56 degrees C / 132 degrees F
	FPC 1 PF Chip	OK	71 degrees C / 159 degrees F
	FPC 1 EA0_HMC0 Logic die	OK	74 degrees C / 165 degrees F
	FPC 1 EA0_HMC0 DRAM botm	OK	71 degrees C / 159 degrees F
	FPC 1 EA0_HMC1 Logic die	OK	78 degrees C / 172 degrees F
	FPC 1 EA0_HMC1 DRAM botm	OK	75 degrees C / 167 degrees F

	FPC 1 EA0_HMC2 Logic die	OK	78 degrees C / 172 degrees F
	FPC 1 EA0_HMC2 DRAM botm	OK	75 degrees C / 167 degrees F
	FPC 1 EA1_HMC0 Logic die	OK	84 degrees C / 183 degrees F
	FPC 1 EA1_HMC0 DRAM botm	OK	81 degrees C / 177 degrees F
	FPC 1 EA1_HMC1 Logic die	OK	81 degrees C / 177 degrees F
	FPC 1 EA1_HMC1 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 1 EA1_HMC2 Logic die	OK	85 degrees C / 185 degrees F
	FPC 1 EA1_HMC2 DRAM botm	OK	82 degrees C / 179 degrees F
	FPC 1 EA2_HMC0 Logic die	OK	63 degrees C / 145 degrees F
	FPC 1 EA2_HMC0 DRAM botm	OK	60 degrees C / 140 degrees F
	FPC 1 EA2_HMC1 Logic die	OK	60 degrees C / 140 degrees F
	FPC 1 EA2_HMC1 DRAM botm	OK	57 degrees C / 134 degrees F
	FPC 1 EA2_HMC2 Logic die	OK	66 degrees C / 150 degrees F
	FPC 1 EA2_HMC2 DRAM botm	OK	63 degrees C / 145 degrees F
Power	PEM 0	OK	
	PEM 1	OK	
	PEM 2	OK	
	PEM 3	OK	
	PEM 4	Absent	
	PEM 5	Absent	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 0	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed

### show chassis environment (MX10008 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	Routing Engine 0 CPU	OK	41 degrees C / 105 degrees F
	Routing Engine 1 CPU	OK	40 degrees C / 104 degrees F
	CB 0 Intake A Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 0 Intake B Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 0 Exhaust A Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 0 Exhaust B Temp Sensor	OK	30 degrees C / 86 degrees F
	CB 0 Middle Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 1 Intake A Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 1 Intake B Temp Sensor	OK	23 degrees C / 73 degrees F
	CB 1 Exhaust A Temp Sensor	OK	27 degrees C / 80 degrees F
	CB 1 Exhaust B Temp Sensor	OK	29 degrees C / 84 degrees F
	CB 1 Middle Temp Sensor	OK	28 degrees C / 82 degrees F
	FPC 0 Intake-A Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 0 EA0 Temp Sensor	OK	66 degrees C / 150 degrees F
	FPC 0 EA0_XR0 Temp Sensor	OK	69 degrees C / 156 degrees F
	FPC 0 EA0_XR1 Temp Sensor	OK	73 degrees C / 163 degrees F

FPC 0 EA1 Temp Sensor	OK	60 degrees C / 140 degrees F
FPC 0 EA1_XR0 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 0 EA1_XR1 Temp Sensor	OK	63 degrees C / 145 degrees F
FPC 0 EA2 Temp Sensor	OK	68 degrees C / 154 degrees F
FPC 0 EA2_XR0 Temp Sensor	OK	73 degrees C / 163 degrees F
FPC 0 EA2_XR1 Temp Sensor	OK	72 degrees C / 161 degrees F
FPC 0 EA3 Temp Sensor	OK	63 degrees C / 145 degrees F
FPC 0 EA3_XR0 Temp Sensor	OK	66 degrees C / 150 degrees F
FPC 0 EA3_XR1 Temp Sensor	OK	65 degrees C / 149 degrees F
FPC 0 EA4 Temp Sensor	OK	68 degrees C / 154 degrees F
FPC 0 EA4_XR0 Temp Sensor	OK	71 degrees C / 159 degrees F
FPC 0 EA4_XR1 Temp Sensor	OK	70 degrees C / 158 degrees F
FPC 0 EA5 Temp Sensor	OK	56 degrees C / 132 degrees F
FPC 0 EA5_XR0 Temp Sensor	OK	61 degrees C / 141 degrees F
FPC 0 EA5_XR1 Temp Sensor	OK	63 degrees C / 145 degrees F
FPC 0 EA0_HMC0 Logic die	OK	75 degrees C / 167 degrees F
FPC 0 EA0_HMC0 DRAM botm	OK	72 degrees C / 161 degrees F
FPC 0 EA0_HMC1 Logic die	OK	75 degrees C / 167 degrees F
FPC 0 EA0_HMC1 DRAM botm	OK	72 degrees C / 161 degrees F
FPC 0 EA0_HMC2 Logic die	OK	77 degrees C / 170 degrees F
FPC 0 EA0_HMC2 DRAM botm	OK	74 degrees C / 165 degrees F
FPC 0 EA1_HMC0 Logic die	OK	72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 0 EA1_HMC1 Logic die	OK	73 degrees C / 163 degrees F
FPC 0 EA1_HMC1 DRAM botm	OK	70 degrees C / 158 degrees F
FPC 0 EA1_HMC2 Logic die	OK	72 degrees C / 161 degrees F
FPC 0 EA1_HMC2 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 0 EA2_HMC0 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA2_HMC0 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA2_HMC1 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA2_HMC1 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA2_HMC2 Logic die	OK	79 degrees C / 174 degrees F
FPC 0 EA2_HMC2 DRAM botm	OK	76 degrees C / 168 degrees F
FPC 0 EA3_HMC0 Logic die	OK	77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 DRAM botm	OK	74 degrees C / 165 degrees F
FPC 0 EA3_HMC1 Logic die	OK	78 degrees C / 172 degrees F
FPC 0 EA3_HMC1 DRAM botm	OK	75 degrees C / 167 degrees F
FPC 0 EA3_HMC2 Logic die	OK	77 degrees C / 170 degrees F
FPC 0 EA3_HMC2 DRAM botm	OK	74 degrees C / 165 degrees F
FPC 0 EA4_HMC0 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA4_HMC0 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA4_HMC1 Logic die	OK	81 degrees C / 177 degrees F
FPC 0 EA4_HMC1 DRAM botm	OK	78 degrees C / 172 degrees F
FPC 0 EA4_HMC2 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA4_HMC2 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA5_HMC0 Logic die	OK	68 degrees C / 154 degrees F
FPC 0 EA5_HMC0 DRAM botm	OK	65 degrees C / 149 degrees F
FPC 0 EA5_HMC1 Logic die	OK	68 degrees C / 154 degrees F
FPC 0 EA5_HMC1 DRAM botm	OK	65 degrees C / 149 degrees F
FPC 0 EA5_HMC2 Logic die	OK	67 degrees C / 152 degrees F
FPC 0 EA5_HMC2 DRAM botm	OK	64 degrees C / 147 degrees F
FPC 2 Intake-A Temp Sensor	OK	32 degrees C / 89 degrees F
FPC 2 Exhaust-A Temp Sensor	OK	52 degrees C / 125 degrees F
FPC 2 Exhaust-B Temp Sensor	OK	50 degrees C / 122 degrees F
FPC 2 EA0 Temp Sensor	OK	71 degrees C / 159 degrees F
FPC 2 EA0_XR0 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA0_XR1 Temp Sensor	OK	78 degrees C / 172 degrees F
FPC 2 EA1 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 2 EA1_XR0 Temp Sensor	OK	67 degrees C / 152 degrees F
FPC 2 EA1_XR1 Temp Sensor	OK	65 degrees C / 149 degrees F

FPC 2 EA2 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA2_XR0 Temp Sensor	OK	80 degrees C / 176 degrees F
FPC 2 EA2_XR1 Temp Sensor	OK	80 degrees C / 176 degrees F
FPC 2 EA3 Temp Sensor	OK	66 degrees C / 150 degrees F
FPC 2 EA3_XR0 Temp Sensor	OK	69 degrees C / 156 degrees F
FPC 2 EA3_XR1 Temp Sensor	OK	69 degrees C / 156 degrees F
FPC 2 EA4 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA4_XR0 Temp Sensor	OK	76 degrees C / 168 degrees F
FPC 2 EA4_XR1 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA5 Temp Sensor	OK	60 degrees C / 140 degrees F
FPC 2 EA5_XR0 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 2 EA5_XR1 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 2 EA0_HMC0 Logic die	OK	84 degrees C / 183 degrees F
FPC 2 EA0_HMC0 DRAM botm	OK	81 degrees C / 177 degrees F
FPC 2 EA0_HMC1 Logic die	OK	85 degrees C / 185 degrees F
FPC 2 EA0_HMC1 DRAM botm	OK	82 degrees C / 179 degrees F
FPC 2 EA0_HMC2 Logic die	OK	83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 DRAM botm	OK	80 degrees C / 176 degrees F
FPC 2 EA1_HMC0 Logic die	OK	76 degrees C / 168 degrees F
FPC 2 EA1_HMC0 DRAM botm	OK	73 degrees C / 163 degrees F
FPC 2 EA1_HMC1 Logic die	OK	76 degrees C / 168 degrees F
FPC 2 EA1_HMC1 DRAM botm	OK	73 degrees C / 163 degrees F
FPC 2 EA1_HMC2 Logic die	OK	76 degrees C / 168 degrees F
FPC 2 EA1_HMC2 DRAM botm	OK	73 degrees C / 163 degrees F
FPC 2 EA2_HMC0 Logic die	OK	86 degrees C / 186 degrees F
FPC 2 EA2_HMC0 DRAM botm	OK	83 degrees C / 181 degrees F
FPC 2 EA2_HMC1 Logic die	OK	87 degrees C / 188 degrees F
FPC 2 EA2_HMC1 DRAM botm	OK	84 degrees C / 183 degrees F
FPC 2 EA2_HMC2 Logic die	OK	87 degrees C / 188 degrees F
FPC 2 EA2_HMC2 DRAM botm	OK	84 degrees C / 183 degrees F
FPC 2 EA3_HMC0 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA3_HMC0 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA3_HMC1 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA3_HMC1 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA3_HMC2 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA3_HMC2 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA4_HMC0 Logic die	OK	88 degrees C / 190 degrees F
FPC 2 EA4_HMC0 DRAM botm	OK	85 degrees C / 185 degrees F
FPC 2 EA4_HMC1 Logic die	OK	89 degrees C / 192 degrees F
FPC 2 EA4_HMC1 DRAM botm	OK	86 degrees C / 186 degrees F
FPC 2 EA4_HMC2 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA4_HMC2 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA5_HMC0 Logic die	OK	72 degrees C / 161 degrees F
FPC 2 EA5_HMC0 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 Logic die	OK	69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 DRAM botm	OK	66 degrees C / 150 degrees F
FPC 2 EA5_HMC2 Logic die	OK	72 degrees C / 161 degrees F
FPC 2 EA5_HMC2 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 3 Intake-A Temp Sensor	OK	30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor	OK	48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor	OK	44 degrees C / 111 degrees F
FPC 3 EA0 Temp Sensor	OK	60 degrees C / 140 degrees F
FPC 3 EA0_XR0 Temp Sensor	OK	65 degrees C / 149 degrees F
FPC 3 EA0_XR1 Temp Sensor	OK	67 degrees C / 152 degrees F
FPC 3 EA1 Temp Sensor	OK	54 degrees C / 129 degrees F
FPC 3 EA1_XR0 Temp Sensor	OK	59 degrees C / 138 degrees F
FPC 3 EA1_XR1 Temp Sensor	OK	58 degrees C / 136 degrees F
FPC 3 EA2 Temp Sensor	OK	62 degrees C / 143 degrees F
FPC 3 EA2_XR0 Temp Sensor	OK	66 degrees C / 150 degrees F
FPC 3 EA2_XR1 Temp Sensor	OK	66 degrees C / 150 degrees F

	FPC 3 EA3 Temp Sensor	OK	54 degrees C / 129 degrees F
	FPC 3 EA3_XR0 Temp Sensor	OK	57 degrees C / 134 degrees F
	FPC 3 EA3_XR1 Temp Sensor	OK	56 degrees C / 132 degrees F
	FPC 3 EA4 Temp Sensor	OK	68 degrees C / 154 degrees F
	FPC 3 EA4_XR0 Temp Sensor	OK	71 degrees C / 159 degrees F
	FPC 3 EA4_XR1 Temp Sensor	OK	70 degrees C / 158 degrees F
	FPC 3 EA5 Temp Sensor	OK	55 degrees C / 131 degrees F
	FPC 3 EA5_XR0 Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 3 EA5_XR1 Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 3 EA0_HMC0 Logic die	OK	69 degrees C / 156 degrees F
	FPC 3 EA0_HMC0 DRAM botm	OK	66 degrees C / 150 degrees F
	FPC 3 EA0_HMC1 Logic die	OK	70 degrees C / 158 degrees F
	FPC 3 EA0_HMC1 DRAM botm	OK	67 degrees C / 152 degrees F
	FPC 3 EA0_HMC2 Logic die	OK	69 degrees C / 156 degrees F
	FPC 3 EA0_HMC2 DRAM botm	OK	66 degrees C / 150 degrees F
	FPC 3 EA1_HMC0 Logic die	OK	67 degrees C / 152 degrees F
	FPC 3 EA1_HMC0 DRAM botm	OK	64 degrees C / 147 degrees F
	FPC 3 EA1_HMC1 Logic die	OK	64 degrees C / 147 degrees F
	FPC 3 EA1_HMC1 DRAM botm	OK	61 degrees C / 141 degrees F
	FPC 3 EA1_HMC2 Logic die	OK	64 degrees C / 147 degrees F
	FPC 3 EA1_HMC2 DRAM botm	OK	61 degrees C / 141 degrees F
	FPC 3 EA2_HMC0 Logic die	OK	74 degrees C / 165 degrees F
	FPC 3 EA2_HMC0 DRAM botm	OK	71 degrees C / 159 degrees F
	FPC 3 EA2_HMC1 Logic die	OK	76 degrees C / 168 degrees F
	FPC 3 EA2_HMC1 DRAM botm	OK	73 degrees C / 163 degrees F
	FPC 3 EA2_HMC2 Logic die	OK	74 degrees C / 165 degrees F
	FPC 3 EA2_HMC2 DRAM botm	OK	71 degrees C / 159 degrees F
	FPC 3 EA3_HMC0 Logic die	OK	69 degrees C / 156 degrees F
	FPC 3 EA3_HMC0 DRAM botm	OK	66 degrees C / 150 degrees F
	FPC 3 EA3_HMC1 Logic die	OK	68 degrees C / 154 degrees F
	FPC 3 EA3_HMC1 DRAM botm	OK	65 degrees C / 149 degrees F
	FPC 3 EA3_HMC2 Logic die	OK	68 degrees C / 154 degrees F
	FPC 3 EA3_HMC2 DRAM botm	OK	65 degrees C / 149 degrees F
	FPC 3 EA4_HMC0 Logic die	OK	81 degrees C / 177 degrees F
	FPC 3 EA4_HMC0 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 3 EA4_HMC1 Logic die	OK	80 degrees C / 176 degrees F
	FPC 3 EA4_HMC1 DRAM botm	OK	77 degrees C / 170 degrees F
	FPC 3 EA4_HMC2 Logic die	OK	81 degrees C / 177 degrees F
	FPC 3 EA4_HMC2 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 3 EA5_HMC0 Logic die	OK	68 degrees C / 154 degrees F
	FPC 3 EA5_HMC0 DRAM botm	OK	65 degrees C / 149 degrees F
	FPC 3 EA5_HMC1 Logic die	OK	70 degrees C / 158 degrees F
	FPC 3 EA5_HMC1 DRAM botm	OK	67 degrees C / 152 degrees F
	FPC 3 EA5_HMC2 Logic die	OK	69 degrees C / 156 degrees F
	FPC 3 EA5_HMC2 DRAM botm	OK	66 degrees C / 150 degrees F
Power	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	OK	27 degrees C / 80 degrees F
	PEM 2	OK	30 degrees C / 86 degrees F
	PEM 3	Check	
	PEM 4	Check	
	PEM 5	Check	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	Failed	
	Fan Tray 0 Fan 5	Failed	
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed
	Fan Tray 0 Fan 8	OK	Spinning at normal speed



Fan Tray 0 Fan 9	OK	Spinning at normal speed
Fan Tray 0 Fan 10	OK	Spinning at normal speed
Fan Tray 1 Fan 0	OK	Spinning at normal speed
Fan Tray 1 Fan 1	OK	Spinning at normal speed
Fan Tray 1 Fan 2	OK	Spinning at normal speed
Fan Tray 1 Fan 3	OK	Spinning at normal speed
Fan Tray 1 Fan 4	OK	Spinning at normal speed
Fan Tray 1 Fan 5	OK	Spinning at normal speed
Fan Tray 1 Fan 6	OK	Spinning at normal speed
Fan Tray 1 Fan 7	OK	Spinning at normal speed
Fan Tray 1 Fan 8	OK	Spinning at normal speed
Fan Tray 1 Fan 9	OK	Spinning at normal speed
Fan Tray 1 Fan 10	OK	Spinning at normal speed
SFB 0 Intake-A	OK	32 degrees C / 89 degrees F
SFB 0 Intake-B	OK	21 degrees C / 69 degrees F
SFB 0 Exhaust-A	OK	27 degrees C / 80 degrees F
SFB 0 Exhaust-B	OK	32 degrees C / 89 degrees F
SFB 0 PF0	OK	39 degrees C / 102 degrees F
SFB 0 PF1	OK	29 degrees C / 84 degrees F
SFB 1 Intake-A	OK	43 degrees C / 109 degrees F
SFB 1 Intake-B	OK	20 degrees C / 68 degrees F
SFB 1 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 1 Exhaust-B	OK	44 degrees C / 111 degrees F
SFB 1 PF0	OK	50 degrees C / 122 degrees F
SFB 1 PF1	OK	29 degrees C / 84 degrees F
SFB 2 Intake-A	OK	39 degrees C / 102 degrees F
SFB 2 Intake-B	OK	20 degrees C / 68 degrees F
SFB 2 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 2 Exhaust-B	OK	38 degrees C / 100 degrees F
SFB 2 PF0	OK	45 degrees C / 113 degrees F
SFB 2 PF1	OK	30 degrees C / 86 degrees F
SFB 3 Intake-A	OK	36 degrees C / 96 degrees F
SFB 3 Intake-B	OK	20 degrees C / 68 degrees F
SFB 3 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 3 Exhaust-B	OK	35 degrees C / 95 degrees F
SFB 3 PF0	OK	42 degrees C / 107 degrees F
SFB 3 PF1	OK	29 degrees C / 84 degrees F
SFB 4 Intake-A	OK	30 degrees C / 86 degrees F
SFB 4 Intake-B	OK	20 degrees C / 68 degrees F
SFB 4 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 4 Exhaust-B	OK	31 degrees C / 87 degrees F
SFB 4 PF0	OK	41 degrees C / 105 degrees F
SFB 4 PF1	OK	29 degrees C / 84 degrees F
SFB 5 Intake-A	OK	30 degrees C / 86 degrees F
SFB 5 Intake-B	OK	21 degrees C / 69 degrees F
SFB 5 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 5 Exhaust-B	OK	30 degrees C / 86 degrees F
SFB 5 PF0	OK	35 degrees C / 95 degrees F
SFB 5 PF1	OK	34 degrees C / 93 degrees F

### show chassis environment (MX204 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Top Right Inlet Sensor	OK	35 degrees C / 95 degrees F
	CB 0 Top Left Inlet Sensor	OK	37 degrees C / 98 degrees F
	CB 0 Top Right Exhaust Sensor	OK	43 degrees C / 109 degrees F
	CB 0 Top Left Exhaust Sensor	OK	50 degrees C / 122 degrees F

	CB 0 CPU Core-0 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-1 Temp	OK	48 degrees C / 118 degrees F
	CB 0 CPU Core-2 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-3 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-4 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-5 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-6 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-7 Temp	OK	47 degrees C / 116 degrees F
	FPC 0 EAO_HMC0 Logic die	OK	77 degrees C / 170 degrees F
	FPC 0 EAO_HMC0 DRAM botm	OK	74 degrees C / 165 degrees F
	FPC 0 EAO_HMC1 Logic die	OK	81 degrees C / 177 degrees F
	FPC 0 EAO_HMC1 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 0 EAO Chip	OK	94 degrees C / 201 degrees F
	FPC 0 EAO-XR0 Chip	OK	64 degrees C / 147 degrees F
	FPC 0 EAO-XR1 Chip	OK	65 degrees C / 149 degrees F
Power	PEM 0	Absent	
	PEM 1	OK	48 degrees C / 118 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed

### show chassis environment (T640 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	22 degrees C / 71 degrees F
	SCG 0	OK	30 degrees C / 86 degrees F
	SCG 1	OK	30 degrees C / 86 degrees F
	Routing Engine 0	Present	
	Routing Engine 1	OK	27 degrees C / 80 degrees F
	CB 0	Present	
	CB 1	OK	33 degrees C / 91 degrees F
	SIB 0	Absent	
	SIB 1	Absent	
	SIB 2	Absent	
	SIB 3	Absent	
	SIB 4	Absent	
	FPC 4 Top	Testing	
	FPC 4 Bottom	Testing	
	FPC 5 Top	Testing	
	FPC 5 Bottom	Testing	
	FPC 6 Top	Testing	
	FPC 6 Bottom	Testing	
	FPM GBUS	OK	23 degrees C / 73 degrees F
	FPM Display	Absent	
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed

	Bottom Right Middle fan OK	Spinning at normal speed
	Bottom Right Rear fan OK	Spinning at normal speed
	Fourth Blower from top OK	Spinning at normal speed
	Bottom Blower OK	Spinning at normal speed
	Middle Blower OK	Spinning at normal speed
	Top Blower OK	Spinning at normal speed
	Second Blower from top OK	Spinning at normal speed
Misc	CIP OK	
	SPMB 0 OK	
	SPMB 1 OK	

### show chassis environment (T4000 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	33 degrees C / 91 degrees F
	PEM 1	Absent	
	SCG 0	OK	33 degrees C / 91 degrees F
	SCG 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	33 degrees C / 91 degrees F
	Routing Engine 0 CPU	OK	50 degrees C / 122 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU	OK	46 degrees C / 114 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	33 degrees C / 91 degrees F
	SIB 0	OK	42 degrees C / 107 degrees F
	SIB 1	OK	42 degrees C / 107 degrees F
	SIB 2	OK	42 degrees C / 107 degrees F
	SIB 3	OK	43 degrees C / 109 degrees F
	SIB 4	OK	45 degrees C / 113 degrees F
	FPC 0 Fan Intake	OK	34 degrees C / 93 degrees F
	FPC 0 Fan Exhaust	OK	48 degrees C / 118 degrees F
	FPC 0 PMB	OK	47 degrees C / 116 degrees F
	FPC 0 LMB0	OK	50 degrees C / 122 degrees F
	FPC 0 LMB1	OK	41 degrees C / 105 degrees F
	FPC 0 LMB2	OK	35 degrees C / 95 degrees F
	FPC 0 PFE1 LU2	OK	46 degrees C / 114 degrees F
	FPC 0 PFE1 LU0	OK	41 degrees C / 105 degrees F
	FPC 0 PFE0 LU0	OK	57 degrees C / 134 degrees F
	FPC 0 XF1	OK	46 degrees C / 114 degrees F
	FPC 0 XF0	OK	52 degrees C / 125 degrees F
	FPC 0 XM1	OK	41 degrees C / 105 degrees F
	FPC 0 XM0	OK	50 degrees C / 122 degrees F
	FPC 0 PFE0 LU1	OK	56 degrees C / 132 degrees F
	FPC 0 PFE0 LU2	OK	45 degrees C / 113 degrees F
	FPC 0 PFE1 LU1	OK	37 degrees C / 98 degrees F
	FPC 3 Fan Intake	OK	36 degrees C / 96 degrees F
	FPC 3 Fan Exhaust	OK	51 degrees C / 123 degrees F
	FPC 3 PMB	OK	43 degrees C / 109 degrees F
	FPC 3 LMB0	OK	57 degrees C / 134 degrees F
	FPC 3 LMB1	OK	54 degrees C / 129 degrees F
	FPC 3 LMB2	OK	38 degrees C / 100 degrees F
	FPC 3 PFE1 LU2	OK	63 degrees C / 145 degrees F
	FPC 3 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 3 PFE0 LU0	OK	69 degrees C / 156 degrees F
	FPC 3 XF1	OK	62 degrees C / 143 degrees F
	FPC 3 XF0	OK	63 degrees C / 145 degrees F
	FPC 3 XM1	OK	43 degrees C / 109 degrees F

	FPC 3 XM0	OK	67 degrees C / 152 degrees F
	FPC 3 PFE0 LU1	OK	63 degrees C / 145 degrees F
	FPC 3 PFE0 LU2	OK	66 degrees C / 150 degrees F
	FPC 3 PFE1 LU1	OK	41 degrees C / 105 degrees F
	FPC 5 Top	OK	39 degrees C / 102 degrees F
	FPC 5 Bottom	OK	38 degrees C / 100 degrees F
	FPC 6 Fan Intake	OK	33 degrees C / 91 degrees F
	FPC 6 Fan Exhaust	OK	49 degrees C / 120 degrees F
	FPC 6 PMB	OK	40 degrees C / 104 degrees F
	FPC 6 LMB0	OK	60 degrees C / 140 degrees F
	FPC 6 LMB1	OK	58 degrees C / 136 degrees F
	FPC 6 LMB2	OK	40 degrees C / 104 degrees F
	FPC 6 PFE1 LU2	OK	69 degrees C / 156 degrees F
	FPC 6 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 6 PFE0 LU0	OK	71 degrees C / 159 degrees F
	FPC 6 XF1	OK	58 degrees C / 136 degrees F
	FPC 6 XF0	OK	65 degrees C / 149 degrees F
	FPC 6 XM1	OK	39 degrees C / 102 degrees F
	FPC 6 XM0	OK	66 degrees C / 150 degrees F
	FPC 6 PFE0 LU1	OK	69 degrees C / 156 degrees F
	FPC 6 PFE0 LU2	OK	69 degrees C / 156 degrees F
	FPC 6 PFE1 LU1	OK	42 degrees C / 107 degrees F
	FPM GBUS	OK	24 degrees C / 75 degrees F
	FPM Display	OK	27 degrees C / 80 degrees F
Fans	Top Left Front fan	OK	Spinning at high speed
	Top Left Middle fan	OK	Spinning at high speed
	Top Left Rear fan	OK	Spinning at high speed
	Top Right Front fan	OK	Spinning at high speed
	Top Right Middle fan	OK	Spinning at high speed
	Top Right Rear fan	OK	Spinning at high speed
	Bottom Left Front fan	OK	Spinning at high speed
	Bottom Left Middle fan	OK	Spinning at high speed
	Bottom Left Rear fan	OK	Spinning at high speed
	Bottom Right Front fan	OK	Spinning at high speed
	Bottom Right Middle fan	OK	Spinning at high speed
	Bottom Right Rear fan	OK	Spinning at high speed
	Rear Tray Top fan	OK	Spinning at high speed
	Rear Tray Second fan	OK	Spinning at high speed
	Rear Tray Third fan	OK	Spinning at high speed
	Rear Tray Fourth fan	OK	Spinning at high speed
	Rear Tray Fifth fan	OK	Spinning at high speed
	Rear Tray Sixth fan	OK	Spinning at high speed
	Rear Tray Seventh fan	OK	Spinning at high speed
	Rear Tray Bottom fan	OK	Spinning at high speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

### show chassis environment (TX Matrix Router)

```
user@host> show chassis environment
```

-----			
Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	29 degrees C / 84 degrees F
	Routing Engine 0	OK	34 degrees C / 93 degrees F
	Routing Engine 1	OK	34 degrees C / 93 degrees F
	CB 0	OK	32 degrees C / 89 degrees F

	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	44 degrees C / 111 degrees F
	SIB 0 (B)	OK	44 degrees C / 111 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	32 degrees C / 89 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP 0	OK	
	CIP 1	OK	
	SPMB 0	OK	
	SPMB 1	OK	

1cc0-re0:

Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Absent	
	SCG 0	OK	35 degrees C / 95 degrees F
	SCG 1	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	36 degrees C / 96 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	40 degrees C / 104 degrees F
	SIB 0 (B)	OK	51 degrees C / 123 degrees F
	FPC 0 Top	OK	45 degrees C / 113 degrees F
	FPC 0 Bottom	OK	31 degrees C / 87 degrees F
	FPC 1 Top	OK	34 degrees C / 93 degrees F
	FPC 1 Bottom	OK	31 degrees C / 87 degrees F
Fans	FPM GBUS	OK	30 degrees C / 86 degrees F
	FPM Display	OK	34 degrees C / 93 degrees F
	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed

	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	
lcc2-re0:			
-----			
Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Absent	
	SCG 0	OK	32 degrees C / 89 degrees F
	SCG 1	Absent	
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	CB 0	OK	30 degrees C / 86 degrees F
	SIB 0	OK	38 degrees C / 100 degrees F
	SIB 0 (B)	OK	49 degrees C / 120 degrees F
	FPC 0 Top	OK	45 degrees C / 113 degrees F
	FPC 0 Bottom	OK	33 degrees C / 91 degrees F
	FPC 1 Top	OK	37 degrees C / 98 degrees F
	FPC 1 Bottom	OK	33 degrees C / 91 degrees F
	FPM GBUS	OK	30 degrees C / 86 degrees F
	FPM Display	OK	34 degrees C / 93 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
...			

### show chassis environment (T1600 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	27 degrees C / 80 degrees F
	PEM 1	Absent	
	SCG 0	OK	31 degrees C / 87 degrees F
	SCG 1	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	30 degrees C / 86 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	31 degrees C / 87 degrees F
	CB 1	OK	31 degrees C / 87 degrees F
	SIB 0	OK	41 degrees C / 105 degrees F
	SIB 0 (B)	OK	34 degrees C / 93 degrees F
	SIB 1	OK	0 degrees C / 32 degrees F
	SIB 1 (B)	OK	0 degrees C / 32 degrees F
	SIB 2	OK	0 degrees C / 32 degrees F
	SIB 2 (B)	OK	0 degrees C / 32 degrees F
	SIB 3	OK	0 degrees C / 32 degrees F
	SIB 3 (B)	OK	0 degrees C / 32 degrees F
	SIB 4	OK	0 degrees C / 32 degrees F
	SIB 4 (B)	OK	0 degrees C / 32 degrees F
	FPC 0 Top	OK	49 degrees C / 120 degrees F
	FPC 0 Bottom	OK	50 degrees C / 122 degrees F

Fans	FPC 1 Top	OK	48 degrees C / 118 degrees F
	FPC 1 Bottom	OK	49 degrees C / 120 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	30 degrees C / 86 degrees F
	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
Misc	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

### show chassis environment (TX Matrix Plus Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	28 degrees C / 82 degrees F
	PEM 1	Absent	
	Routing Engine 0	OK	27 degrees C / 80 degrees F
	Routing Engine 1	OK	29 degrees C / 84 degrees F
	CB 0 Intake	OK	26 degrees C / 78 degrees F
	CB 0 Exhaust A	OK	25 degrees C / 77 degrees F
	CB 0 Exhaust B	OK	25 degrees C / 77 degrees F
	CB 1 Intake	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust A	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust B	OK	26 degrees C / 78 degrees F
	SIB F13 0	OK	47 degrees C / 116 degrees F
	SIB F13 0 (B)	OK	48 degrees C / 118 degrees F
	SIB F13 1	OK	38 degrees C / 100 degrees F
	SIB F13 1 (B)	OK	37 degrees C / 98 degrees F
	SIB F2S 0/0	OK	27 degrees C / 80 degrees F
	SIB F2S 0/2	OK	28 degrees C / 82 degrees F
	SIB F2S 0/4	OK	27 degrees C / 80 degrees F
	SIB F2S 0/6	OK	28 degrees C / 82 degrees F
	SIB F2S 1/0	OK	26 degrees C / 78 degrees F
	SIB F2S 1/2	OK	26 degrees C / 78 degrees F
	SIB F2S 1/4	OK	26 degrees C / 78 degrees F
	SIB F2S 1/6	OK	26 degrees C / 78 degrees F
	SIB F2S 2/0	OK	25 degrees C / 77 degrees F
	SIB F2S 2/2	OK	25 degrees C / 77 degrees F
	SIB F2S 2/4	OK	23 degrees C / 73 degrees F

	CIP 0 Intake	OK	23 degrees C / 73 degrees F
	CIP 0 Exhaust A	OK	24 degrees C / 75 degrees F
	CIP 0 Exhaust B	OK	24 degrees C / 75 degrees F
	CIP 1 Intake	OK	24 degrees C / 75 degrees F
	CIP 1 Exhaust A	OK	25 degrees C / 77 degrees F
	CIP 1 Exhaust B	OK	25 degrees C / 77 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 4	OK	Spinning at normal speed
	Fan Tray 2 Fan 5	OK	Spinning at normal speed
	Fan Tray 2 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 7	OK	Spinning at normal speed
	Fan Tray 2 Fan 8	OK	Spinning at normal speed
	Fan Tray 2 Fan 9	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 4	OK	Spinning at normal speed
	Fan Tray 3 Fan 5	OK	Spinning at normal speed
	Fan Tray 3 Fan 6	OK	Spinning at normal speed
	Fan Tray 3 Fan 7	OK	Spinning at normal speed
	Fan Tray 3 Fan 8	OK	Spinning at normal speed
	Fan Tray 3 Fan 9	OK	Spinning at normal speed
	Fan Tray 4 Fan 1	OK	Spinning at normal speed
	Fan Tray 4 Fan 2	OK	Spinning at normal speed
	Fan Tray 4 Fan 3	OK	Spinning at normal speed
	Fan Tray 4 Fan 4	OK	Spinning at normal speed
	Fan Tray 4 Fan 5	OK	Spinning at normal speed
	Fan Tray 4 Fan 6	OK	Spinning at normal speed
	Fan Tray 4 Fan 7	OK	Spinning at normal speed
	Fan Tray 4 Fan 8	OK	Spinning at normal speed
	Fan Tray 4 Fan 9	OK	Spinning at normal speed
	Fan Tray 5 Fan 1	OK	Spinning at normal speed
	Fan Tray 5 Fan 2	OK	Spinning at normal speed
	Fan Tray 5 Fan 3	OK	Spinning at normal speed
	Fan Tray 5 Fan 4	OK	Spinning at normal speed
	Fan Tray 5 Fan 5	OK	Spinning at normal speed
	Fan Tray 5 Fan 6	OK	Spinning at normal speed
	Fan Tray 5 Fan 7	OK	Spinning at normal speed
	Fan Tray 5 Fan 8	OK	Spinning at normal speed
	Fan Tray 5 Fan 9	OK	Spinning at normal speed
Misc	SPMB 0	OK	
	SPMB 1	OK	

1cc0-re0:

Class	Item	Status	Measurement
-------	------	--------	-------------



Temp	PEM 0	OK	27 degrees C / 80 degrees F
	PEM 1	Absent	
	SCG 0	OK	31 degrees C / 87 degrees F
	SCG 1	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	30 degrees C / 86 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	31 degrees C / 87 degrees F
	CB 1	OK	31 degrees C / 87 degrees F
	SIB 0	OK	41 degrees C / 105 degrees F
	SIB 0 (B)	OK	34 degrees C / 93 degrees F
	SIB 1	OK	0 degrees C / 32 degrees F
	SIB 1 (B)	OK	0 degrees C / 32 degrees F
	SIB 2	OK	0 degrees C / 32 degrees F
	SIB 2 (B)	OK	0 degrees C / 32 degrees F
	SIB 3	OK	0 degrees C / 32 degrees F
	SIB 3 (B)	OK	0 degrees C / 32 degrees F
	SIB 4	OK	0 degrees C / 32 degrees F
	SIB 4 (B)	OK	0 degrees C / 32 degrees F
	FPC 0 Top	OK	49 degrees C / 120 degrees F
	FPC 0 Bottom	OK	50 degrees C / 122 degrees F
	FPC 1 Top	OK	48 degrees C / 118 degrees F
	FPC 1 Bottom	OK	49 degrees C / 120 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	30 degrees C / 86 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

### show chassis environment (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis environment
```

-----			
Class	Item	Status	Measurement
Temp	PEM 0	Check	30 degrees C / 86 degrees F
	PEM 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	28 degrees C / 82 degrees F
	Routing Engine 0 CPU	OK	42 degrees C / 107 degrees F
	Routing Engine 1	OK	29 degrees C / 84 degrees F

	Routing Engine 1 CPU	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust A	OK	28 degrees C / 82 degrees F
	CB 0 Exhaust B	OK	30 degrees C / 86 degrees F
	CB 1 Intake	OK	31 degrees C / 87 degrees F
	CB 1 Exhaust A	OK	27 degrees C / 80 degrees F
	CB 1 Exhaust B	OK	31 degrees C / 87 degrees F
	SIB F13 0 Board	OK	44 degrees C / 111 degrees F
	SIB F13 0 XF Junction	OK	62 degrees C / 143 degrees F
	SIB F13 3 Board	OK	45 degrees C / 113 degrees F
	SIB F13 3 XF Junction	OK	60 degrees C / 140 degrees F
	SIB F13 6 Board	OK	47 degrees C / 116 degrees F
	SIB F13 6 XF Junction	OK	62 degrees C / 143 degrees F
	SIB F2S 0/0 Board	OK	32 degrees C / 89 degrees F
	SIB F2S 0/0 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 0/2 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/2 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 0/4 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/4 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 0/6 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/6 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 1/0 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 1/0 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 1/2 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 1/2 XF Junction	OK	39 degrees C / 102 degrees F
	SIB F2S 1/4 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 1/4 XF Junction	OK	35 degrees C / 95 degrees F
	SIB F2S 1/6 Board	OK	30 degrees C / 86 degrees F
	SIB F2S 1/6 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 2/0 Board	OK	30 degrees C / 86 degrees F
	SIB F2S 2/0 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 2/2 Board	OK	28 degrees C / 82 degrees F
	SIB F2S 2/2 XF Junction	OK	39 degrees C / 102 degrees F
	SIB F2S 2/4 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 2/4 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 2/6 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 2/6 XF Junction	OK	41 degrees C / 105 degrees F
	CIP 0 Intake	OK	25 degrees C / 77 degrees F
	CIP 0 Exhaust A	OK	26 degrees C / 78 degrees F
	CIP 0 Exhaust B	OK	26 degrees C / 78 degrees F
	CIP 1 Intake	OK	26 degrees C / 78 degrees F
	CIP 1 Exhaust A	OK	27 degrees C / 80 degrees F
	CIP 1 Exhaust B	OK	27 degrees C / 80 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 4	OK	Spinning at normal speed
	Fan Tray 2 Fan 5	OK	Spinning at normal speed

Fan Tray 2 Fan 6	OK	Spinning at normal speed
Fan Tray 2 Fan 7	OK	Spinning at normal speed
Fan Tray 2 Fan 8	OK	Spinning at normal speed
Fan Tray 2 Fan 9	OK	Spinning at normal speed
Fan Tray 3 Fan 1	OK	Spinning at normal speed
Fan Tray 3 Fan 2	OK	Spinning at normal speed
Fan Tray 3 Fan 3	OK	Spinning at normal speed
Fan Tray 3 Fan 4	OK	Spinning at normal speed
Fan Tray 3 Fan 5	OK	Spinning at normal speed
Fan Tray 3 Fan 6	OK	Spinning at normal speed
Fan Tray 3 Fan 7	OK	Spinning at normal speed
Fan Tray 3 Fan 8	OK	Spinning at normal speed
Fan Tray 3 Fan 9	OK	Spinning at normal speed
Fan Tray 4 Fan 1	OK	Spinning at normal speed
Fan Tray 4 Fan 2	OK	Spinning at normal speed
Fan Tray 4 Fan 3	OK	Spinning at normal speed
Fan Tray 4 Fan 4	OK	Spinning at normal speed
Fan Tray 4 Fan 5	OK	Spinning at normal speed
Fan Tray 4 Fan 6	OK	Spinning at normal speed
Fan Tray 4 Fan 7	OK	Spinning at normal speed
Fan Tray 4 Fan 8	OK	Spinning at normal speed
Fan Tray 4 Fan 9	OK	Spinning at normal speed
Fan Tray 5 Fan 1	OK	Spinning at normal speed
Fan Tray 5 Fan 2	OK	Spinning at normal speed
Fan Tray 5 Fan 3	OK	Spinning at normal speed
Fan Tray 5 Fan 4	OK	Spinning at normal speed
Fan Tray 5 Fan 5	OK	Spinning at normal speed
Fan Tray 5 Fan 6	OK	Spinning at normal speed
Fan Tray 5 Fan 7	OK	Spinning at normal speed
Fan Tray 5 Fan 8	OK	Spinning at normal speed
Fan Tray 5 Fan 9	Check	
Misc SPMB 0	OK	
SPMB 1	OK	

1cc0-re0:

Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Check	29 degrees C / 84 degrees F
	SCG 0	OK	32 degrees C / 89 degrees F
	SCG 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	32 degrees C / 89 degrees F
	Routing Engine 0 CPU	OK	51 degrees C / 123 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU	OK	49 degrees C / 120 degrees F
	CB 0	OK	34 degrees C / 93 degrees F
	CB 1	OK	34 degrees C / 93 degrees F
	SIB 0	OK	39 degrees C / 102 degrees F
	SIB 0 (B)	Absent	
	SIB 1	OK	39 degrees C / 102 degrees F
	SIB 1 (B)	Absent	
	SIB 2	OK	39 degrees C / 102 degrees F
	SIB 2 (B)	Absent	
	FPC 4 Top	OK	43 degrees C / 109 degrees F
	FPC 4 Bottom	OK	43 degrees C / 109 degrees F
	FPC 7 Fan Intake	OK	35 degrees C / 95 degrees F
	FPC 7 Fan Exhaust	OK	50 degrees C / 122 degrees F
	FPC 7 PMB	OK	50 degrees C / 122 degrees F
	FPC 7 LMB0	OK	55 degrees C / 131 degrees F
	FPC 7 LMB1	OK	49 degrees C / 120 degrees F

	FPC 7 LMB2	OK	39 degrees C / 102 degrees F
	FPC 7 PFE1 LU2	OK	55 degrees C / 131 degrees F
	FPC 7 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 7 PFE0 LU0	OK	62 degrees C / 143 degrees F
	FPC 7 XF1	OK	52 degrees C / 125 degrees F
	FPC 7 XF0	OK	61 degrees C / 141 degrees F
	FPC 7 XM1	OK	39 degrees C / 102 degrees F
	FPC 7 XM0	OK	56 degrees C / 132 degrees F
	FPC 7 PFE0 LU1	OK	60 degrees C / 140 degrees F
	FPC 7 PFE0 LU2	OK	55 degrees C / 131 degrees F
	FPC 7 PFE1 LU1	OK	41 degrees C / 105 degrees F
	FPM GBUS	OK	24 degrees C / 75 degrees F
	FPM Display	OK	28 degrees C / 82 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray fan 1 (Top)	OK	Spinning at normal speed
	Rear Tray fan 2	OK	Spinning at normal speed
	Rear Tray fan 3	OK	Spinning at normal speed
	Rear Tray fan 4	OK	Spinning at normal speed
	Rear Tray fan 5	OK	Spinning at normal speed
	Rear Tray fan 6	OK	Spinning at normal speed
	Rear Tray fan 7	OK	Spinning at normal speed
	Rear Tray fan 8	OK	Spinning at normal speed
	Rear Tray fan 9	OK	Spinning at normal speed
	Rear Tray fan 10	OK	Spinning at normal speed
	Rear Tray fan 11	OK	Spinning at normal speed
	Rear Tray fan 12	OK	Spinning at normal speed
	Rear Tray fan 13	OK	Spinning at normal speed
	Rear Tray fan 14	OK	Spinning at normal speed
	Rear Tray fan 15	OK	Spinning at normal speed
	Rear Tray fan 16 (Bottom)	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

### show chassis environment (EX4200 Standalone Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
	FPC 0 Power Supply 1	Absent	
Temp	FPC 0 CPU	OK	41 degrees C / 105 degrees F
	FPC 0 EX-PFE1	OK	42 degrees C / 107 degrees F
	FPC 0 EX-PFE2	OK	46 degrees C / 114 degrees F
	FPC 0 GEPHY Front Left	OK	25 degrees C / 77 degrees F
	FPC 0 GEPHY Front Right	OK	27 degrees C / 80 degrees F
	FPC 0 Uplink Conn	OK	29 degrees C / 84 degrees F
Fans	FPC 0 Fan 1	OK	Spinning at normal speed

FPC 0 Fan 2	OK	Spinning at normal speed
FPC 0 Fan 3	OK	Spinning at normal speed

### show chassis environment (EX8216 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Power	PSU 0	OK	
	PSU 1	OK	
	PSU 2	OK	
	PSU 3	Check	
	PSU 4	Absent	
	PSU 5	Absent	
Temp	CB 0 Intake	OK	23 degrees C / 73 degrees F
	CB 0 Exhaust	OK	26 degrees C / 78 degrees F
	CB 1 Intake	OK	22 degrees C / 71 degrees F
	CB 1 Exhaust	OK	25 degrees C / 77 degrees F
	FPC 4 Intake	OK	49 degrees C / 120 degrees F
	FPC 4 Exhaust	OK	59 degrees C / 138 degrees F
	SIB 5 Intake	OK	25 degrees C / 77 degrees F
	SIB 5 Exhaust	OK	35 degrees C / 95 degrees F
	SIB 6 Intake	OK	25 degrees C / 77 degrees F
	SIB 6 Exhaust	OK	38 degrees C / 100 degrees F
Fans	Top Fan 1	OK	Spinning at normal speed
	Top Fan 2	OK	Spinning at normal speed
	Top Fan 3	OK	Spinning at normal speed
	Top Fan 4	OK	Spinning at normal speed
	Top Fan 5	OK	Spinning at normal speed
	Top Fan 6	OK	Spinning at normal speed
	Top Fan 7	OK	Spinning at normal speed
	Top Fan 8	OK	Spinning at normal speed
	Top Fan 9	OK	Spinning at normal speed
	Bottom Fan 1	OK	Spinning at normal speed
	Bottom Fan 2	OK	Spinning at normal speed
	Bottom Fan 3	OK	Spinning at normal speed
	Bottom Fan 4	OK	Spinning at normal speed
	Bottom Fan 5	OK	Spinning at normal speed
	Bottom Fan 6	OK	Spinning at normal speed
	Bottom Fan 7	OK	Spinning at normal speed
	Bottom Fan 8	OK	Spinning at normal speed
	Bottom Fan 9	OK	Spinning at normal speed

### show chassis environment (EX9200 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	Check	
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	OK	40 degrees C / 104 degrees F
	PEM 3	Absent	
	Routing Engine 0	OK	35 degrees C / 95 degrees F
	Routing Engine 0 CPU	OK	33 degrees C / 91 degrees F
	Routing Engine 1	OK	38 degrees C / 100 degrees F
	Routing Engine 1 CPU	OK	33 degrees C / 91 degrees F
	CB 0 Intake	OK	35 degrees C / 95 degrees F
	CB 0 Exhaust A	OK	33 degrees C / 91 degrees F
	CB 0 Exhaust B	OK	40 degrees C / 104 degrees F

CB 0 ACBC	OK	39 degrees C / 102 degrees F
CB 0 XF A	OK	49 degrees C / 120 degrees F
CB 0 XF B	OK	46 degrees C / 114 degrees F
CB 1 Intake	OK	37 degrees C / 98 degrees F
CB 1 Exhaust A	OK	32 degrees C / 89 degrees F
CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
CB 1 ACBC	OK	41 degrees C / 105 degrees F
CB 1 XF A	OK	49 degrees C / 120 degrees F
CB 1 XF B	OK	49 degrees C / 120 degrees F
FPC 2 Intake	OK	37 degrees C / 98 degrees F
FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
FPC 2 Exhaust B	OK	34 degrees C / 93 degrees F
FPC 2 LU 0 TCAM TSen	OK	44 degrees C / 111 degrees F
FPC 2 LU 0 TCAM Chip	OK	48 degrees C / 118 degrees F
FPC 2 LU 0 TSen	OK	44 degrees C / 111 degrees F
FPC 2 LU 0 Chip	OK	60 degrees C / 140 degrees F
FPC 2 MQ 0 TSen	OK	44 degrees C / 111 degrees F
FPC 2 MQ 0 Chip	OK	51 degrees C / 123 degrees F
FPC 3 Intake	OK	39 degrees C / 102 degrees F
FPC 3 Exhaust A	OK	51 degrees C / 123 degrees F
[...Output truncated...]		
Fans Top Rear Fan	OK	Spinning at intermediate-speed
Bottom Rear Fan	OK	Spinning at intermediate-speed
Top Middle Fan	OK	Spinning at intermediate-speed
Bottom Middle Fan	OK	Spinning at intermediate-speed
Top Front Fan	OK	Spinning at intermediate-speed
Bottom Front Fan	OK	Spinning at intermediate-speed

### show chassis environment (EX9251 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Top Right Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Left Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Right Exhaust Sensor	OK	40 degrees C / 104 degrees F
	CB 0 Top Left Exhaust Sensor	OK	59 degrees C / 138 degrees F
	CB 0 CPU Core-0 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-1 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-2 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-3 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-4 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-5 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-6 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-7 Temp	OK	43 degrees C / 109 degrees F
Power	PEM 0	Check	
	PEM 1	OK	36 degrees C / 96 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	Absent	
	Fan Tray 2 Fan 1	Absent	

### show chassis environment (EX9253 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Exhaust Temp Sensor	OK	37 degrees C / 98 degrees F
	CB 0 Inlet Temp Sensor	OK	31 degrees C / 87 degrees F
	CB 0 CPU DIE Temp Sensor	OK	42 degrees C / 107 degrees F
	CB 1 Exhaust Temp Sensor	OK	31 degrees C / 87 degrees F
	CB 1 Inlet Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 1 CPU DIE Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 0 Intake Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 1 Intake Temp Sensor	OK	29 degrees C / 84 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	59 degrees C / 138 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	48 degrees C / 118 degrees F
Power	PEM 0	OK	54 degrees C / 129 degrees F
	PEM 1	Check	
	PEM 2	Absent	
	PEM 3	Absent	
	PEM 4	Check	
	PEM 5	OK	61 degrees C / 141 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 0	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed

### show chassis environment (QFX Series and OCX Series)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Top Right Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Left Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Right Exhaust Sensor	OK	40 degrees C / 104 degrees F
	CB 0 Top Left Exhaust Sensor	OK	59 degrees C / 138 degrees F
	CB 0 CPU Core-0 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-1 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-2 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-3 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-4 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-5 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-6 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-7 Temp	OK	43 degrees C / 109 degrees F
Power	PEM 0	Check	
	PEM 1	OK	36 degrees C / 96 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed

Fan Tray 2 Fan 0	Absent
Fan Tray 2 Fan 1	Absent

### show chassis environment interconnect-device (QFabric System)

```
user@switch> show chassis environment interconnect-device IC-A0004
```

Class	Item	Status	Measurement
	CB 0		
	CB 0 L Intake	OK	30 degrees C / 86 degrees F
	CB 0 R Intake	OK	31 degrees C / 87 degrees F
	CB 0 L Exhaust	OK	32 degrees C / 89 degrees F
	CB 0 R Exhaust	OK	33 degrees C / 91 degrees F
	Routing Engine 0 CPU temp	OK	51 degrees C / 123 degrees F
	CB 1		
	CB 1 L Intake	OK	27 degrees C / 80 degrees F
	CB 1 R Intake	OK	29 degrees C / 84 degrees F
	CB 1 L Exhaust	OK	31 degrees C / 87 degrees F
	CB 1 R Exhaust	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU temp	OK	40 degrees C / 104 degrees F
	FC 0 FPC 0		
	FPC 0 L Intake	OK	25 degrees C / 77 degrees F
	FPC 0 R Intake	OK	28 degrees C / 82 degrees F
	FPC 0 L Exhaust	OK	28 degrees C / 82 degrees F
	FPC 0 R Exhaust	OK	29 degrees C / 84 degrees F
	FC 7 FPC 7		
	FPC 7 L Intake	OK	25 degrees C / 77 degrees F
	FPC 7 R Intake	OK	26 degrees C / 78 degrees F
	FPC 7 L Exhaust	OK	28 degrees C / 82 degrees F
	FPC 7 R Exhaust	OK	29 degrees C / 84 degrees F
	RC 0 FPC 8		
	FPC 8 L Intake	OK	25 degrees C / 77 degrees F
	FPC 8 R Intake	OK	26 degrees C / 78 degrees F
	FPC 8 L Exhaust	OK	32 degrees C / 89 degrees F
	FPC 8 R Exhaust	OK	30 degrees C / 86 degrees F
	RC 7 FPC 15		
	FPC 15 L Intake	OK	24 degrees C / 75 degrees F
	FPC 15 R Intake	OK	25 degrees C / 77 degrees F
	FPC 15 L Exhaust	OK	33 degrees C / 91 degrees F
	FPC 15 R Exhaust	OK	31 degrees C / 87 degrees F
Fans	TFT 0 Fan 0	OK	Spinning at normal speed
Fans	TFT 0 Fan 1	OK	Spinning at normal speed
Fans	TFT 0 Fan 2	OK	Spinning at normal speed
Fans	TFT 0 Fan 3	OK	Spinning at normal speed
Fans	TFT 0 Fan 4	OK	Spinning at normal speed
Fans	TFT 0 Fan 5	OK	Spinning at normal speed
Fans	BFT 1 Fan 0	OK	Spinning at normal speed
Fans	BFT 1 Fan 1	OK	Spinning at normal speed
Fans	BFT 1 Fan 2	OK	Spinning at normal speed
Fans	BFT 1 Fan 3	Check	
Fans	BFT 1 Fan 4	OK	Spinning at normal speed
Fans	BFT 1 Fan 5	OK	Spinning at normal speed
Fans	SFT 0 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 0 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 0 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 0 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 3 Rotor 1	OK	Spinning at normal speed



Fans	SFT 1 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 1 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 1 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 1 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 1 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 1 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 1 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 1 Fan 3 Rotor 1	OK	Spinning at normal speed
Fans	SFT 2 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 2 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 2 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 2 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 2 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 2 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 2 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 2 Fan 3 Rotor 1	OK	Spinning at normal speed
Fans	SFT 3 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 3 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 3 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 3 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 3 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 3 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 3 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 3 Fan 3 Rotor 1	OK	Spinning at normal speed
Fans	SFT 4 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 4 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 4 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 4 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 4 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 4 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 4 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 4 Fan 3 Rotor 1	OK	Spinning at normal speed
Fans	SFT 5 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 5 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 5 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 5 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 5 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 5 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 5 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 5 Fan 3 Rotor 1	OK	Spinning at normal speed
Fans	SFT 6 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 6 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 6 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 6 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 6 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 6 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 6 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 6 Fan 3 Rotor 1	OK	Spinning at normal speed
Fans	SFT 7 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 7 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 7 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 7 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 7 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 7 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 7 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 7 Fan 3 Rotor 1	OK	Spinning at normal speed
Power	PEM 0	OK	30 degrees C / 86 degrees F
Power	PEM 1	OK	30 degrees C / 86 degrees F
Power	PEM 2	OK	30 degrees C / 86 degrees F
Power	PEM 3	Absent	

Power	PEM 4	Absent
Power	PEM 5	Absent

### show chassis environment node-device (QFabric System)

```
user@switch> show chassis environment node-device node1
```

Class	Item	Status	Measurement
Power	node1 Power Supply 0	Absent	
	node1 Power Supply 1	Absent	
Fans	node1 Fan Tray 0	Testing	
	node1 Fan Tray 1	Testing	
	node1 Fan Tray 2	Testing	

### show chassis environment pem node-device (QFabric System)

```
user@switch> show chassis environment pem node-device node1
```

```
FPC 0 PEM 0 status:
  State           Check
  Airflow         Front to Back
  Temperature      OK
  AC Input:        OK
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                   12          10       120     18

FPC 0 PEM 1 status:
  State           Online
  Airflow         Back to Front
  Temperature      OK
  AC Input:        OK
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                   11          10       110     17
```

### show chassis environment (PTX5000 Packet Transport Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PDU 0	OK	
	PDU 0 PSM 0	OK	36 degrees C / 96 degrees F
	PDU 0 PSM 1	OK	38 degrees C / 100 degrees F
	PDU 0 PSM 2	OK	38 degrees C / 100 degrees F
	PDU 0 PSM 3	OK	37 degrees C / 98 degrees F
	PDU 1	Absent	
	CCG 0	OK	44 degrees C / 111 degrees F
	CCG 1	OK	44 degrees C / 111 degrees F
	Routing Engine 0	OK	62 degrees C / 143 degrees F
	Routing Engine 0 CPU	OK	75 degrees C / 167 degrees F
	Routing Engine 1	OK	51 degrees C / 123 degrees F
	Routing Engine 1 CPU	OK	64 degrees C / 147 degrees F
	CB 0 Intake	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust A	OK	46 degrees C / 114 degrees F
	CB 0 Exhaust B	OK	42 degrees C / 107 degrees F
	CB 1 Intake	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	36 degrees C / 96 degrees F
	SIB 0 Exhaust	OK	47 degrees C / 116 degrees F
	SIB 0 Junction	OK	45 degrees C / 113 degrees F
	SIB 1 Exhaust	OK	44 degrees C / 111 degrees F

SIB 1 Junction	OK	43 degrees C / 109 degrees F
SIB 2 Exhaust	OK	47 degrees C / 116 degrees F
SIB 2 Junction	OK	42 degrees C / 107 degrees F
SIB 3 Exhaust	OK	43 degrees C / 109 degrees F
SIB 3 Junction	OK	43 degrees C / 109 degrees F
SIB 4 Exhaust	OK	47 degrees C / 116 degrees F
SIB 4 Junction	OK	42 degrees C / 107 degrees F
SIB 5 Exhaust	OK	42 degrees C / 107 degrees F
SIB 5 Junction	OK	40 degrees C / 104 degrees F
SIB 6 Exhaust	OK	46 degrees C / 114 degrees F
SIB 6 Junction	OK	42 degrees C / 107 degrees F
SIB 7 Exhaust	OK	43 degrees C / 109 degrees F
SIB 7 Junction	OK	39 degrees C / 102 degrees F
SIB 8 Exhaust	OK	44 degrees C / 111 degrees F
SIB 8 Junction	OK	41 degrees C / 105 degrees F
FPC 0 PMB	OK	35 degrees C / 95 degrees F
FPC 0 Intake	OK	33 degrees C / 91 degrees F
FPC 0 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 0 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 0 TL0	OK	48 degrees C / 118 degrees F
FPC 0 TQ0	OK	53 degrees C / 127 degrees F
FPC 0 TL1	OK	56 degrees C / 132 degrees F
FPC 0 TQ1	OK	58 degrees C / 136 degrees F
FPC 0 TL2	OK	55 degrees C / 131 degrees F
FPC 0 TQ2	OK	56 degrees C / 132 degrees F
FPC 0 TL3	OK	59 degrees C / 138 degrees F
FPC 0 TQ3	OK	59 degrees C / 138 degrees F
FPC 2 PMB	OK	35 degrees C / 95 degrees F
FPC 2 Intake	OK	34 degrees C / 93 degrees F
FPC 2 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 2 TL0	OK	53 degrees C / 127 degrees F
FPC 2 TQ0	OK	53 degrees C / 127 degrees F
FPC 2 TL1	OK	57 degrees C / 134 degrees F
FPC 2 TQ1	OK	58 degrees C / 136 degrees F
FPC 2 TL2	OK	54 degrees C / 129 degrees F
FPC 2 TQ2	OK	59 degrees C / 138 degrees F
FPC 2 TL3	OK	60 degrees C / 140 degrees F
FPC 2 TQ3	OK	64 degrees C / 147 degrees F
PIC 2/0 Ambient	OK	49 degrees C / 120 degrees F
FPC 3 PMB	OK	34 degrees C / 93 degrees F
FPC 3 Intake	OK	35 degrees C / 95 degrees F
FPC 3 Exhaust A	OK	54 degrees C / 129 degrees F
FPC 3 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 3 TL0	OK	49 degrees C / 120 degrees F
FPC 3 TQ0	OK	55 degrees C / 131 degrees F
FPC 3 TL1	OK	56 degrees C / 132 degrees F
FPC 3 TQ1	OK	58 degrees C / 136 degrees F
FPC 3 TL2	OK	56 degrees C / 132 degrees F
FPC 3 TQ2	OK	59 degrees C / 138 degrees F
FPC 3 TL3	OK	62 degrees C / 143 degrees F
FPC 3 TQ3	OK	63 degrees C / 145 degrees F
PIC 3/1	Absent	
FPC 5 PMB	OK	35 degrees C / 95 degrees F
FPC 5 Intake	OK	34 degrees C / 93 degrees F
FPC 5 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 5 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 5 TL0	OK	54 degrees C / 129 degrees F
FPC 5 TQ0	OK	52 degrees C / 125 degrees F
FPC 5 TL1	OK	61 degrees C / 141 degrees F

	FPC 5 TQ1	OK	60 degrees C / 140 degrees F
	FPC 5 TL2	OK	55 degrees C / 131 degrees F
	FPC 5 TQ2	OK	55 degrees C / 131 degrees F
	FPC 5 TL3	OK	59 degrees C / 138 degrees F
	FPC 5 TQ3	OK	58 degrees C / 136 degrees F
	PIC 5/0 Ambient	OK	51 degrees C / 123 degrees F
	PIC 5/1 Ambient	OK	34 degrees C / 93 degrees F
	PIC 5/1 cfp-5/1/0	OK	34 degrees C / 93 degrees F
	PIC 5/1 cfp-5/1/1	OK	36 degrees C / 96 degrees F
	FPC 6 PMB	OK	36 degrees C / 96 degrees F
	FPC 6 Intake	OK	33 degrees C / 91 degrees F
	FPC 6 Exhaust A	OK	51 degrees C / 123 degrees F
	FPC 6 Exhaust B	OK	39 degrees C / 102 degrees F
	FPC 6 TL0	OK	44 degrees C / 111 degrees F
	FPC 6 TQ0	OK	54 degrees C / 129 degrees F
	FPC 6 TL1	OK	59 degrees C / 138 degrees F
	FPC 6 TQ1	OK	58 degrees C / 136 degrees F
	FPC 6 TL2	OK	60 degrees C / 140 degrees F
	FPC 6 TQ2	OK	57 degrees C / 134 degrees F
	FPC 6 TL3	OK	65 degrees C / 149 degrees F
	FPC 6 TQ3	OK	60 degrees C / 140 degrees F
	FPC 7 PMB	OK	35 degrees C / 95 degrees F
	FPC 7 Intake	OK	33 degrees C / 91 degrees F
	FPC 7 Exhaust A	OK	53 degrees C / 127 degrees F
	FPC 7 Exhaust B	OK	40 degrees C / 104 degrees F
	FPC 7 TL0	OK	46 degrees C / 114 degrees F
	FPC 7 TQ0	OK	58 degrees C / 136 degrees F
	FPC 7 TL1	OK	53 degrees C / 127 degrees F
	FPC 7 TQ1	OK	59 degrees C / 138 degrees F
	FPC 7 TL2	OK	56 degrees C / 132 degrees F
	FPC 7 TQ2	OK	61 degrees C / 141 degrees F
	FPC 7 TL3	OK	63 degrees C / 145 degrees F
	FPC 7 TQ3	OK	63 degrees C / 145 degrees F
	FPM I2CS	OK	37 degrees C / 98 degrees F
Fans	Fan Tray 0 Fan 1	OK	3042 RPM
	Fan Tray 0 Fan 2	OK	3042 RPM
	Fan Tray 0 Fan 3	OK	3000 RPM
	Fan Tray 0 Fan 4	OK	3042 RPM
	Fan Tray 0 Fan 5	OK	3000 RPM
	Fan Tray 0 Fan 6	OK	3042 RPM
	Fan Tray 0 Fan 7	OK	3085 RPM
	Fan Tray 0 Fan 8	OK	3042 RPM
	Fan Tray 0 Fan 9	OK	3042 RPM
	Fan Tray 0 Fan 10	OK	3085 RPM
	Fan Tray 0 Fan 11	OK	3085 RPM
	Fan Tray 0 Fan 12	OK	3128 RPM
	Fan Tray 0 Fan 13	OK	3128 RPM
	Fan Tray 0 Fan 14	OK	3042 RPM
	Fan Tray 1 Fan 1	OK	2299 RPM
	Fan Tray 1 Fan 2	OK	2399 RPM
	Fan Tray 1 Fan 3	OK	2299 RPM
	Fan Tray 1 Fan 4	OK	2266 RPM
	Fan Tray 1 Fan 5	OK	2266 RPM
	Fan Tray 1 Fan 6	OK	2366 RPM
	Fan Tray 2 Fan 1	OK	2199 RPM
	Fan Tray 2 Fan 2	OK	2133 RPM
	Fan Tray 2 Fan 3	OK	2366 RPM
	Fan Tray 2 Fan 4	OK	2233 RPM
	Fan Tray 2 Fan 5	OK	2399 RPM
	Fan Tray 2 Fan 6	OK	2233 RPM

Misc	SPMB 0 Intake	OK	50 degrees C / 122 degrees F
	SPMB 1 Intake	OK	40 degrees C / 104 degrees F

### show chassis environment (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PDU 0	OK	
	PDU 0 PSM 0	OK	41 degrees C / 105 degrees F
	PDU 0 PSM 1	Absent	
	PDU 0 PSM 2	OK	43 degrees C / 109 degrees F
	PDU 0 PSM 3	Absent	
	PDU 0 PSM 4	OK	44 degrees C / 111 degrees F
	PDU 0 PSM 5	Absent	
	PDU 0 PSM 6	OK	45 degrees C / 113 degrees F
	PDU 0 PSM 7	Absent	
	PDU 1	OK	
	PDU 1 PSM 0	Absent	
	PDU 1 PSM 1	OK	45 degrees C / 113 degrees F
	PDU 1 PSM 2	Absent	
	PDU 1 PSM 3	OK	43 degrees C / 109 degrees F
	PDU 1 PSM 4	Absent	
	PDU 1 PSM 5	OK	46 degrees C / 114 degrees F
	PDU 1 PSM 6	Absent	
	PDU 1 PSM 7	OK	46 degrees C / 114 degrees F
	CCG 0	OK	27 degrees C / 80 degrees F
	CCG 1	OK	29 degrees C / 84 degrees F
	...		

### show chassis environment (PTX1000 Packet Transport Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	Absent	
	FPC 0 Power Supply 1	Absent	
	FPC 0 Power Supply 2	OK	
	FPC 0 Power Supply 3	OK	
Temp	FPC 0 Intake Temp Sensor	OK	25 degrees C / 77 degrees F
	FPC 0 Exhaust Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 0 Mezz Temp Sensor 0	OK	25 degrees C / 77 degrees F
	FPC 0 Mezz Temp Sensor 1	OK	34 degrees C / 93 degrees F
	FPC 0 PE2 Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 PE1 Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 0 PF0 Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 PE0 Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 0 PE5 Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 PE4 Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 PF1 Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 0 PE3 Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 0 CPU Die Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 OCX0 Temp Sensor	OK	37 degrees C / 98 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed
	FPC 0 Fan Tray 2	OK	Spinning at normal speed

## show chassis environment (PTX10008 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	Routing Engine 0 CPU	OK	40 degrees C / 104 degrees F
	Routing Engine 1 CPU	OK	40 degrees C / 104 degrees F
	CB 0 Intake Temp Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust Temp Sensor	OK	33 degrees C / 91 degrees F
	CB 1 Intake Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 1 Exhaust Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 0 Intake-A Temp Sensor	OK	38 degrees C / 100 degrees F
	FPC 0 Intake-B Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 0 Exhaust-C Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 PE0 Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 PE1 Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 0 PE2 Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 0 LCPU Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 1 Intake-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Intake-B Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust-C Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 1 PE0 Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 1 PE1 Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 1 PE2 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 1 LCPU Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 2 Intake-A Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 2 Intake-B Temp Sensor	OK	30 degrees C / 86 degrees F
	FPC 2 Exhaust-A Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 2 Exhaust-B Temp Sensor	OK	54 degrees C / 129 degrees F
	FPC 2 Exhaust-C Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 2 PE0 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 2 PE1 Temp Sensor	OK	59 degrees C / 138 degrees F
	FPC 2 PE2 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 2 PE3 Temp Sensor	OK	60 degrees C / 140 degrees F
	FPC 2 PE4 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 2 PE5 Temp Sensor	OK	63 degrees C / 145 degrees F
	FPC 2 LCPU Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 3 Intake-A Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 3 Intake-B Temp Sensor	OK	30 degrees C / 86 degrees F
	FPC 3 Exhaust-A Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 3 Exhaust-B Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 3 Exhaust-C Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 3 PE0 Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 3 PE1 Temp Sensor	OK	53 degrees C / 127 degrees F
	FPC 3 PE2 Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 3 PE3 Temp Sensor	OK	53 degrees C / 127 degrees F
	FPC 3 PE4 Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 3 PE5 Temp Sensor	OK	57 degrees C / 134 degrees F
	FPC 3 LCPU Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 5 Intake-A Temp Sensor	Failed	
	FPC 5 Intake-B Temp Sensor	Failed	
	FPC 5 Exhaust-A Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 5 Exhaust-B Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 5 Exhaust-C Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 5 PE0 Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 5 PE1 Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 5 PE2 Temp Sensor	OK	51 degrees C / 123 degrees F

	FPC 5 LCPU Temp Sensor	Failed	
	FPC 6 Intake-A Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 6 Intake-B Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 6 Exhaust-A Temp Sensor	OK	39 degrees C / 102 degrees F
	FPC 6 Exhaust-B Temp Sensor	OK	39 degrees C / 102 degrees F
	FPC 6 Exhaust-C Temp Sensor	OK	39 degrees C / 102 degrees F
	FPC 6 PE0 Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 6 PE1 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 6 PE2 Temp Sensor	OK	50 degrees C / 122 degrees F
	FPC 6 LCPU Temp Sensor	OK	40 degrees C / 104 degrees F
	SIB 0 Intake-A Temp Sensor	OK	37 degrees C / 98 degrees F
	SIB 0 Intake-B Temp Sensor	OK	30 degrees C / 86 degrees F
	SIB 0 Exhaust-A Temp Sensor	OK	33 degrees C / 91 degrees F
	SIB 0 Exhaust-B Temp Sensor	OK	38 degrees C / 100 degrees F
	SIB 0 PF0 Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 0 PF1 Temp Sensor	OK	39 degrees C / 102 degrees F
	SIB 1 Intake-A Temp Sensor	OK	43 degrees C / 109 degrees F
	SIB 1 Intake-B Temp Sensor	OK	34 degrees C / 93 degrees F
	SIB 1 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	SIB 1 Exhaust-B Temp Sensor	OK	44 degrees C / 111 degrees F
	SIB 1 PF0 Temp Sensor	OK	54 degrees C / 129 degrees F
	SIB 1 PF1 Temp Sensor	OK	41 degrees C / 105 degrees F
	SIB 2 Intake-A Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 2 Intake-B Temp Sensor	OK	35 degrees C / 95 degrees F
	SIB 2 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	SIB 2 Exhaust-B Temp Sensor	OK	47 degrees C / 116 degrees F
	SIB 2 PF0 Temp Sensor	OK	55 degrees C / 131 degrees F
	SIB 2 PF1 Temp Sensor	OK	42 degrees C / 107 degrees F
	SIB 3 Intake-A Temp Sensor	OK	45 degrees C / 113 degrees F
	SIB 3 Intake-B Temp Sensor	OK	35 degrees C / 95 degrees F
	SIB 3 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	SIB 3 Exhaust-B Temp Sensor	OK	45 degrees C / 113 degrees F
	SIB 3 PF0 Temp Sensor	OK	54 degrees C / 129 degrees F
	SIB 3 PF1 Temp Sensor	OK	42 degrees C / 107 degrees F
	SIB 4 Intake-A Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 4 Intake-B Temp Sensor	OK	34 degrees C / 93 degrees F
	SIB 4 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	SIB 4 Exhaust-B Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 4 PF0 Temp Sensor	OK	54 degrees C / 129 degrees F
	SIB 4 PF1 Temp Sensor	OK	41 degrees C / 105 degrees F
	SIB 5 Intake-A Temp Sensor	OK	38 degrees C / 100 degrees F
	SIB 5 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	SIB 5 Exhaust-A Temp Sensor	OK	34 degrees C / 93 degrees F
	SIB 5 Exhaust-B Temp Sensor	OK	39 degrees C / 102 degrees F
	SIB 5 PF0 Temp Sensor	OK	44 degrees C / 111 degrees F
	SIB 5 PF1 Temp Sensor	OK	42 degrees C / 107 degrees F
Power	Power Supply 0	OK	
	Power Supply 1	OK	
	Power Supply 2	OK	
	Power Supply 3	OK	
	Power Supply 4	Check	
	Power Supply 5	OK	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	Failed	
	Fan Tray 0 Fan 5	Failed	
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed

Fan Tray 0 Fan 8	OK	Spinning at normal speed
Fan Tray 0 Fan 9	OK	Spinning at normal speed
Fan Tray 0 Fan 10	OK	Spinning at normal speed
Fan Tray 1 Fan 0	OK	Spinning at normal speed
Fan Tray 1 Fan 1	OK	Spinning at normal speed
Fan Tray 1 Fan 2	OK	Spinning at normal speed
Fan Tray 1 Fan 3	OK	Spinning at normal speed
Fan Tray 1 Fan 4	OK	Spinning at normal speed
Fan Tray 1 Fan 5	OK	Spinning at normal speed
Fan Tray 1 Fan 6	OK	Spinning at normal speed
Fan Tray 1 Fan 7	OK	Spinning at normal speed
Fan Tray 1 Fan 8	OK	Spinning at normal speed
Fan Tray 1 Fan 9	OK	Spinning at normal speed
Fan Tray 1 Fan 10	OK	Spinning at normal speed

**show chassis environment (PTX10016 Router)**

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
	Routing Engine 0 CPU	OK	34 degrees C / 93 degrees F
	Routing Engine 1 CPU	OK	34 degrees C / 93 degrees F
Temp	CB 0 Intake Temp Sensor	OK	20 degrees C / 68 degrees F
	CB 0 Exhaust Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 1 Intake Temp Sensor	OK	20 degrees C / 68 degrees F
	CB 1 Exhaust Temp Sensor	OK	23 degrees C / 73 degrees F
	FPC 1 Intake-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Intake-B Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 1 Exhaust-C Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 1 PE0 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 1 PE1 Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 1 PE2 Temp Sensor	OK	54 degrees C / 129 degrees F
	FPC 1 LCPU Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 3 Intake-A Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 3 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 3 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 3 Exhaust-B Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 3 Exhaust-C Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 3 PE0 Temp Sensor	OK	43 degrees C / 109 degrees F
	FPC 3 PE1 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 3 PE2 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 3 LCPU Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 Intake-A Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 6 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 6 Exhaust-A Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 Exhaust-B Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 Exhaust-C Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 PE0 Temp Sensor	OK	43 degrees C / 109 degrees F
	FPC 6 PE1 Temp Sensor	OK	43 degrees C / 109 degrees F
	FPC 6 PE2 Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 6 LCPU Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 8 Intake-A Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 8 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 8 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 8 Exhaust-B Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 8 Exhaust-C Temp Sensor	OK	38 degrees C / 100 degrees F
	FPC 8 PE0 Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 8 PE1 Temp Sensor	OK	44 degrees C / 111 degrees F



	FPC 8 PE2 Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 8 LCPU Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 9 Intake-A Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 9 Intake-B Temp Sensor	OK	28 degrees C / 82 degrees F
	FPC 9 Exhaust-A Temp Sensor	OK	51 degrees C / 123 degrees F
	FPC 9 Exhaust-B Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 9 Exhaust-C Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 9 PE0 Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 9 PE1 Temp Sensor	OK	66 degrees C / 150 degrees F
	FPC 9 PE2 Temp Sensor	OK	50 degrees C / 122 degrees F
	FPC 9 PE3 Temp Sensor	OK	65 degrees C / 149 degrees F
	FPC 9 PE4 Temp Sensor	OK	51 degrees C / 123 degrees F
	FPC 9 PE5 Temp Sensor	OK	68 degrees C / 154 degrees F
	FPC 9 LCPU Temp Sensor	OK	46 degrees C / 114 degrees F
Power	Power Supply 0	OK	22 degrees C / 71 degrees F
	Power Supply 1	OK	23 degrees C / 73 degrees F
	Power Supply 2	OK	23 degrees C / 73 degrees F
	Power Supply 3	OK	21 degrees C / 69 degrees F
	Power Supply 4	OK	22 degrees C / 71 degrees F
	Power Supply 5	OK	25 degrees C / 77 degrees F
	Power Supply 6	OK	21 degrees C / 69 degrees F
	Power Supply 7	Absent	
	Power Supply 8	Absent	
	Power Supply 9	Absent	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed
	Fan Tray 0 Fan 8	OK	Spinning at normal speed
	Fan Tray 0 Fan 9	OK	Spinning at normal speed
	Fan Tray 0 Fan 10	OK	Spinning at normal speed
	Fan Tray 0 Fan 11	OK	Spinning at normal speed
	Fan Tray 0 Fan 12	OK	Spinning at normal speed
	Fan Tray 0 Fan 13	OK	Spinning at normal speed
	Fan Tray 0 Fan 14	OK	Spinning at normal speed
	Fan Tray 0 Fan 15	OK	Spinning at normal speed
	Fan Tray 0 Fan 16	OK	Spinning at normal speed
	Fan Tray 0 Fan 17	OK	Spinning at normal speed
	Fan Tray 0 Fan 18	OK	Spinning at normal speed
	Fan Tray 0 Fan 19	OK	Spinning at normal speed
	Fan Tray 0 Fan 20	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 7	OK	Spinning at normal speed
	Fan Tray 1 Fan 8	OK	Spinning at normal speed
	Fan Tray 1 Fan 9	OK	Spinning at normal speed
	Fan Tray 1 Fan 10	OK	Spinning at normal speed
	Fan Tray 1 Fan 11	OK	Spinning at normal speed
	Fan Tray 1 Fan 12	OK	Spinning at normal speed
	Fan Tray 1 Fan 13	OK	Spinning at normal speed
	Fan Tray 1 Fan 14	OK	Spinning at normal speed

Fan Tray 1 Fan 15	OK	Spinning at normal speed
Fan Tray 1 Fan 16	OK	Spinning at normal speed
Fan Tray 1 Fan 17	OK	Spinning at normal speed
Fan Tray 1 Fan 18	OK	Spinning at normal speed
Fan Tray 1 Fan 19	OK	Spinning at normal speed
Fan Tray 1 Fan 20	OK	Spinning at normal speed
SIB 0 Intake-A Temp Sensor	OK	20 degrees C / 68 degrees F
SIB 0 Intake-B Temp Sensor	OK	20 degrees C / 68 degrees F
SIB 0 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 0 Exhaust-A Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 0 Exhaust-B Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 0 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 0 PF0 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 0 PF1 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 0 PF2 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 0 PF3 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 0 PF4 Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 0 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 1 Intake-A Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 1 Intake-B Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 1 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 1 Exhaust-A Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 1 Exhaust-B Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 1 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 1 PF0 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 1 PF1 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 1 PF2 Temp Sensor	OK	33 degrees C / 91 degrees F
SIB 1 PF3 Temp Sensor	OK	38 degrees C / 100 degrees F
SIB 1 PF4 Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 1 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 2 Intake-A Temp Sensor	OK	24 degrees C / 75 degrees F
SIB 2 Intake-B Temp Sensor	OK	21 degrees C / 69 degrees F
SIB 2 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 2 Exhaust-A Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 2 Exhaust-B Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 2 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 2 PF0 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 2 PF1 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 2 PF2 Temp Sensor	OK	33 degrees C / 91 degrees F
SIB 2 PF3 Temp Sensor	OK	41 degrees C / 105 degrees F
SIB 2 PF4 Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 2 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 3 Intake-A Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 3 Intake-B Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 3 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 3 Exhaust-A Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 3 Exhaust-B Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 3 Exhaust-C Temp Sensor	OK	24 degrees C / 75 degrees F
SIB 3 PF0 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 3 PF1 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 3 PF2 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 3 PF3 Temp Sensor	OK	39 degrees C / 102 degrees F
SIB 3 PF4 Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 3 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 4 Intake-A Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 4 Intake-B Temp Sensor	OK	25 degrees C / 77 degrees F
SIB 4 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 4 Exhaust-A Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 4 Exhaust-B Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 4 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F

SIB 4 PF0 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 4 PF1 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 4 PF2 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 4 PF3 Temp Sensor	OK	40 degrees C / 104 degrees F
SIB 4 PF4 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 4 PF5 Temp Sensor	OK	25 degrees C / 77 degrees F
SIB 5 Intake-A Temp Sensor	OK	21 degrees C / 69 degrees F
SIB 5 Intake-B Temp Sensor	OK	20 degrees C / 68 degrees F
SIB 5 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 5 Exhaust-A Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 5 Exhaust-B Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 5 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 5 PF0 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 5 PF1 Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 5 PF2 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 5 PF3 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 5 PF4 Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 5 PF5 Temp Sensor	OK	27 degrees C / 80 degrees F

### show chassis environment (ACX2000 Universal Metro Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
	PCB Left	OK	44 degrees C / 111 degrees F
	SFP+ Xcvr	OK	50 degrees C / 122 degrees F
	FEB	OK	70 degrees C / 158 degrees F
	PCB Up	OK	63 degrees C / 145 degrees F
	PCB Mid	OK	66 degrees C / 150 degrees F
	Telecom Mod	OK	65 degrees C / 149 degrees F
	Routing Engine	OK	54 degrees C / 129 degrees F
	Heater off		

### show chassis environment (ACX4000 Universal Metro Router)

On the ACX4000 router, the MIC output of the **show chassis environment** command varies depending on the number of temperature channels present in the installed MIC.

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	33 degrees C / 91 degrees F
	PEM 1	Absent	
	PCB Bottom	OK	30 degrees C / 86 degrees F
	PCB Middle	OK	34 degrees C / 93 degrees F
	BCM56445	OK	33 degrees C / 91 degrees F
	SFP+ Xcvr	OK	32 degrees C / 89 degrees F
	Fan tray inlet	OK	39 degrees C / 102 degrees F
	Exhaust	OK	30 degrees C / 86 degrees F
	Routing Engine	OK	32 degrees C / 89 degrees F
	Heater off		
Pic	PIC 0/0 Channel 0	OK	28 degrees C / 82 degrees F
	PIC 0/0 Channel 1	OK	29 degrees C / 84 degrees F
	PIC 0/0 Channel 2	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 3	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 4	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 5	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 6	OK	0 degrees C / 32 degrees F

	PIC 0/0 Channel 7	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 8	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 9	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 0	OK	33 degrees C / 91 degrees F
	PIC 1/0 Channel 1	OK	31 degrees C / 87 degrees F
	PIC 1/0 Channel 2	OK	30 degrees C / 86 degrees F
	PIC 1/0 Channel 3	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 4	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 5	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 6	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 7	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 8	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 0	OK	31 degrees C / 87 degrees F
	PIC 1/1 Channel 1	OK	29 degrees C / 84 degrees F
	PIC 1/1 Channel 2	OK	28 degrees C / 82 degrees F
	PIC 1/1 Channel 3	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 4	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 5	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 6	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 7	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 8	OK	0 degrees C / 32 degrees F
Fans	Fan 1	OK	Spinning at normal speed
	Fan 2	OK	Spinning at normal speed

### show chassis environment (ACX5048 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	Absent	
	FPC 0 Power Supply 1	OK	
Temp	FPC 0 Sensor TopMiddle E	OK	23 degrees C / 73 degrees F
	FPC 0 Sensor TopRight C	OK	18 degrees C / 64 degrees F
	FPC 0 Sensor TopLeft C	OK	21 degrees C / 69 degrees F
	FPC 0 Sensor TopRight E	OK	20 degrees C / 68 degrees F
	FPC 0 Sensor CPURight C	OK	23 degrees C / 73 degrees F
	FPC 0 Sensor CPULeft E	OK	22 degrees C / 71 degrees F
	FPC 0 Sensor CPU Die Temp	OK	39 degrees C / 102 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed
	FPC 0 Fan Tray 2	OK	Spinning at normal speed
	FPC 0 Fan Tray 3	OK	Spinning at normal speed
	FPC 0 Fan Tray 4	OK	Spinning at normal speed

### show chassis environment (ACX5096 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
	FPC 0 Power Supply 1	OK	
Temp	FPC 0 Sensor TopMiddle E	OK	32 degrees C / 89 degrees F
	FPC 0 Sensor TopRight I	OK	29 degrees C / 84 degrees F
	FPC 0 Sensor TopLeft I	OK	23 degrees C / 73 degrees F
	FPC 0 Sensor TopRight E	OK	28 degrees C / 82 degrees F
	FPC 0 Sensor CPURight I	OK	30 degrees C / 86 degrees F
	FPC 0 Sensor CPULeft I	OK	29 degrees C / 84 degrees F

	FPC 0 Sensor Die Temp	OK	46 degrees C / 114 degrees F
	FPC 0 Mezz Temp	OK	23 degrees C / 73 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed
	FPC 0 Fan Tray 2	OK	Spinning at normal speed

### show chassis environment (ACX500 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
	Power Mod	OK	47 degrees C / 116 degrees F
	BCM54610	OK	46 degrees C / 114 degrees F
	DPLL31404	OK	45 degrees C / 113 degrees F
	CPLD	OK	42 degrees C / 107 degrees F
	1588-FPGA	OK	43 degrees C / 109 degrees F
	NPU	OK	62 degrees C / 143 degrees F
	MAC sensor 1	OK	40 degrees C / 104 degrees F
	MAC sensor 2	OK	38 degrees C / 100 degrees F
	SFP PHY	OK	38 degrees C / 100 degrees F
	Combo/RJ45 PHY	OK	37 degrees C / 98 degrees F
	SFP sensor 1	OK	35 degrees C / 95 degrees F
	SFP sensor 2	OK	33 degrees C / 91 degrees F
	SFP sensor 3	OK	32 degrees C / 89 degrees F
	Routing Engine	OK	54 degrees C / 129 degrees F
	Heater off		

## show chassis environment fpc

<b>List of Syntax</b>	<a href="#">Syntax on page 296</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 296</a> <a href="#">Syntax (MX Series Routers) on page 296</a> <a href="#">Syntax (MX2010, MX10003, MX204, MX2008, and MX10008 Universal Routing Platforms) on page 296</a> <a href="#">Syntax (MX2020 Universal Routing Platforms) on page 296</a> <a href="#">Syntax (QFX Series) on page 296</a> <a href="#">Syntax (OCX Series) on page 296</a> <a href="#">Syntax (PTX3000 Series) on page 297</a> <a href="#">Syntax (PTX10008 Series) on page 297</a> <a href="#">Syntax (Junos OS Evolved) on page 297</a>
<b>Syntax</b>	show chassis environment fpc <slot>
<b>Syntax (TX Matrix and TX Matrix Plus Routers)</b>	show chassis environment fpc <lcc number> <slot>
<b>Syntax (MX Series Routers)</b>	show chassis environment fpc <slot> <all-members> <local> <member member-id>
<b>Syntax (MX2010, MX10003, MX204, MX2008, and MX10008 Universal Routing Platforms)</b>	show chassis environment fpc <slot>
<b>Syntax (MX2020 Universal Routing Platforms)</b>	show chassis environment fpc <slot> <satellite [fpc-slot slot-id  device-alias alias-name]
<b>Syntax (QFX Series)</b>	show chassis environment fpc <fpc-slot> interconnect-device name
<b>Syntax (OCX Series)</b>	show chassis environment fpc <fpc-slot>

<b>Syntax (PTX3000 Series)</b>	<code>show chassis environment fpc &lt;fpc-slot&gt;</code>
<b>Syntax (PTX10008 Series)</b>	<code>show chassis environment fpc &lt;fpc-slot&gt;</code>
<b>Syntax (Junos OS Evolved)</b>	<code>show chassis environment fpc &lt;fpc-slot&gt;</code>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.1 for T4000 Core Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX 2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Universal Routing Platforms.</p>
<b>Description</b>	(M40e, M120, M160, M320, MX Series, T Series routers, EX Series, QFX Series, and PTX Series routers only) Display environmental information about Flexible PIC Concentrators (FPCs).
<b>Options</b>	<p><b>none</b>—Display environmental information about all FPCs. On a TX Matrix router, display environmental information about all FPCs on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about all FPCs on the TX Matrix Plus router and its attached routers.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display environmental information for the FPCs in all the members of the Virtual Chassis configuration.</p> <p><b>interconnect-device <i>name</i></b>—(QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.</p> <p><b>lcc <i>number</i></b>—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.</p>

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display environmental information for the FPCs in the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display environmental information for the FPCs in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**satellite [*fpc-slot slot-id* | *device-alias alias-name*]**—(Junos Fusion only)(Optional) Display environmental information for the FPCs in the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

***slot* or *fpc-slot***—(Optional) Display environmental information about an individual FPC:

- (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, if you specify the number of the T640 router by using only the **lcc *number*** option (the recommended method), replace ***slot*** with a value from 0 through 7. Similarly, on a TX Matrix Plus router, if you specify the number of the router by using only the **lcc *number*** option (the recommended method), replace ***slot*** with a value from 0 through 7. Otherwise, replace ***slot*** with a value from 0 through 31. For example, the following commands have the same result:

```
user@host> show chassis environment fpc 1 lcc 1
user@host> show chassis environment fpc 9
```

- M120 router—Replace ***slot*** with a value from 0 through 5.
- MX240 router—Replace ***slot*** with a value from 0 through 2.
- MX480 router—Replace ***slot*** with a value from 0 through 5.
- MX960 router—Replace ***slot*** with a value from 0 through 11.
- MX2010 router—Replace ***slot*** with a value from 0 through 9.
- MX2020 router—Replace ***slot*** with a value from 0 through 19.
- MX2008 router—Replace ***slot*** with a value from 0 through 9.
- Other routers—Replace ***slot*** with a value from 0 through 7.



- EX Series switches:
  - EX3200 switches and EX4200 standalone switches—Replace **slot** with 0.
  - EX4200 switches in a Virtual Chassis configuration—Replace **slot** with a value from 0 through 9 (switch's member ID).
  - EX6210 switches—Replace **slot** with a value from 0 through 3 (line card only), 4 or 5 (line card or Switch Fabric and Rotuing Engine (SRE) module), or 6 through 9 (line card only).
  - EX8208 switches—Replace **slot** with a value from 0 through 7 (line card).
  - EX8216 switches—Replace **slot** with a value from 0 through 15 (line card).
- QFX3500 switches —Replace **fpc-slot** with 0 through 15.
- PTX5000 Packet Transport Router—Replace **fpc-slot** with 0 through 7.
- PTX3000 Packet Transport Router—Replace **fpc-slot** with 0 through 15.

**Required Privilege Level** view

**Related Documentation**

- *request chassis fpc*
- *show chassis fpc*
- *show chassis fpc-feb-connectivity*
- *Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online*
- *MX960 Flexible PIC Concentrator Description*

**List of Sample Output**

[show chassis environment fpc \(M120 Router\) on page 301](#)  
[show chassis environment fpc \(M160 Router\) on page 302](#)  
[show chassis environment fpc \(M320 Router\) on page 303](#)  
[show chassis environment fpc \(MX2020 Router\) on page 303](#)  
[show chassis environment fpc \(MX2010 Router\) on page 306](#)  
[show chassis environment fpc \(MX2008 Router\) on page 309](#)  
[show chassis environment fpc \(MX240 Router\) on page 312](#)  
[show chassis environment fpc \(MX480 Router\) on page 314](#)  
[show chassis environment fpc \(MX960 Router MPC10E-15C-MRATE\) on page 314](#)  
[show chassis environment fpc \(MX960 Router\) on page 317](#)  
[show chassis environment fpc \(MX480 Router with 100-Gigabit Ethernet CFP\) on page 318](#)  
[show chassis environment fpc \(MX240, MX480, MX960 with Application Services Modular Line Card on page 320](#)  
[show chassis environment fpc \(MX10003 Router\) on page 320](#)  
[show chassis environment fpc \(MX204 Router\) on page 324](#)  
[show chassis environment fpc \(MX10008 Router\) on page 324](#)  
[show chassis environment fpc \(T320, T640, and T1600 Routers\) on page 331](#)

[show chassis environment fpc \(T4000 Router\) on page 332](#)  
[show chassis environment fpc lcc \(TX Matrix Router\) on page 337](#)  
[show chassis environment fpc lcc \(TX Matrix Plus Router\) on page 337](#)  
[show chassis environment fpc \(QFX Series and OCX Series\) on page 338](#)  
[show chassis environment fpc interconnect-device \(QFabric Systems\) on page 338](#)  
[show chassis environment fpc 5 \(PTX3000 Packet Transport Router\) on page 339](#)  
[show chassis environment fpc 0 \(PTX5000 Packet Transport Router\) on page 339](#)  
[show chassis environment fpc 07 \(PTX5000 Packet Transport Router with FPC2-PTX-PIA\) on page 340](#)  
[show chassis environment fpc \(PTX10008 router\) on page 341](#)  
[show chassis environment fpc \(PTX10016 router\) on page 345](#)  
[show chassis environment FPC 1 \(MX Routers with Media Services Blade \[MSB\]\) on page 348](#)  
[show chassis environment FPC \(Junos OS Evolved\) on page 348](#)

**Output Fields** [Table 11 on page 300](#) lists the output fields for the **show chassis environment fpc** command. Output fields are listed in the approximate order in which they appear.

*Table 11: show chassis environment fpc Output Fields*

Field Name	Field Description
<b>State</b>	Status of the FPC: <ul style="list-style-type: none"> <li>• <b>Unknown</b>—FPC is not detected by the router.</li> <li>• <b>Empty</b>—No FPC is present.</li> <li>• <b>Present</b>—FPC is detected by the chassis daemon but is either not supported by the current version of the Junos OS, or the FPC is coming up but not yet online.</li> <li>• <b>Ready</b>—FPC is in intermediate or transition state.</li> <li>• <b>Announce online</b>—Intermediate state during which the FPC is coming up but not yet online, and the chassis manager acknowledges the chassisd FPC online initiative.</li> <li>• <b>Online</b>—FPC is online and running.</li> <li>• <b>Offline</b>—FPC is powered down.</li> <li>• <b>Diagnostics</b>—FPC is set to operate in diagnostics mode.</li> </ul>
<b>Temperature</b>	(M40e and M160 routers and QFX Series only) Temperature of the air flowing past the FPC.
<b>PMB Temperature</b>	(PTX Series only) Temperature of the air flowing past the PMB (bottom of the FPC).  The PTX5000 Packet Transport Router with FPC2-PTX-PIA include multiple temperatures for PMB ( <b>TEMPO</b> and <b>TEMP1</b> ).
<b>PMB CPU Temperature</b>	(PTX5000 Packet Transport Router with FPC2-PTX-PIA only) Temperature of the air flowing past the PMB CPU.
<b>Temperature Intake</b>	(M320 routers, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series only) Temperature of the air flowing into the chassis.
<b>Temperature Top</b>	(T Series routers only) Temperature of the air flowing past the top of the FPC.

Table 11: show chassis environment fpc Output Fields (continued)

Field Name	Field Description
<b>Temperature Exhaust</b>	(M120 and M320 routers, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series only) Temperature of the air flowing out of the chassis.  The PTX Series Packet Transport Routers, and the MX2010, MX2020, and MX2008 routers include exhaust temperatures for multiple zones ( <b>Exhaust A</b> and <b>Exhaust B</b> ).
<b>Temperature Bottom</b>	(T Series routers only) Temperature of the air flowing past the bottom of the FPC.
<b>TL n Temperature</b>	(PTX Series only) Temperature of the air flowing past the specified TL area of the packet forwarding engine (PFE) on the FPC.
<b>TQ n Temperature</b>	(PTX Series only) Temperature of the air flowing past the specified TQ area of the packet forwarding engine (PFE) on the FPC.
<b>Temperature MMBO</b>	(T640 router only) Temperature of the air flowing past the type 3 FPC.
<b>Temperature MMB1</b>	(M320 and T Series routers only) Temperature of the air flowing past the type 1, type 2, and type 3 FPC.
<b>Power</b>	Information about the voltage supplied to the FPC. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
<b>CMB Revision or BUS revision</b>	Revision level of the chassis management bus device (M Series router) or bus (T Series routers).

## Sample Output

### show chassis environment fpc (M120 Router)

```

user@host> show chassis environment fpc

FPC 2 status:
  State                Online
  Temperature Exhaust A 32 degrees C / 89 degrees F
  Temperature Exhaust B 31 degrees C / 87 degrees F
  Power A-Board
    1.2 V                1202 mV
    1.5 V                1508 mV
    1.8 V                1798 mV
    2.5 V                2507 mV
    3.3 V                3351 mV
    5.0 V                4995 mV
    3.3 V bias           3296 mV
    1.2 V Rocket IO      1205 mV
    1.5 V Rocket IO      1501 mV
  I2C Slave Revision    12
FPC 3 status:
  State                Online
  Temperature Exhaust A 31 degrees C / 87 degrees F
  Temperature Exhaust B 33 degrees C / 91 degrees F
  Power A-Board
    1.2 V                1211 mV

```

```

1.5 V          1501 mV
1.8 V          1798 mV
2.5 V          2471 mV
3.3 V          3293 mV
5.0 V          4930 mV
3.3 V bias     3296 mV
1.2 V Rocket IO 1205 mV
1.5 V Rocket IO 1501 mV
Power B-Board
1.2 V          1214 mV
1.5 V          1501 mV
2.5 V          2471 mV
3.3 V          3300 mV
5.0 V          4943 mV
3.3 V bias     3296 mV
1.2 V Rocket IO 1205 mV
1.5 V Rocket IO 1501 mV
I2C Slave Revision 12
FPC 4 status:
State          Online
Temperature Exhaust A 32 degrees C / 89 degrees F
Temperature Exhaust B 30 degrees C / 86 degrees F
Power A-Board
1.2 V          1195 mV
1.5 V          1504 mV
1.8 V          1801 mV
2.5 V          2504 mV
3.3 V          3293 mV
5.0 V          4917 mV
3.3 V bias     3296 mV
1.2 V Rocket IO 1202 mV
1.5 V Rocket IO 1492 mV
I2C Slave Revision 12

```

### show chassis environment fpc (M160 Router)

```

user@host> show chassis environment fpc

FPC 0 status:
State          Online
Temperature          42 degrees C / 107 degrees F
Power:
1.5 V          1500 mV
2.5 V          2509 mV
3.3 V          3308 mV
5.0 V          4991 mV
5.0 V bias     4952 mV
8.0 V bias     8307 mV
CMB Revision    12
FPC 1 status:
State          Online
Temperature          45 degrees C / 113 degrees F
Power:
1.5 V          1498 mV
2.5 V          2501 mV
3.3 V          3319 mV
5.0 V          5020 mV
5.0 V bias     5025 mV
8.0 V bias     8307 mV
CMB Revision    12

```

**show chassis environment fpc (M320 Router)**

```

user@host> show chassis environment fpc

FPC 0 status:
  State                Online
  Temperature Intake    27 degrees C / 80 degrees F
  Temperature Exhaust   38 degrees C / 100 degrees F
  Temperature MMB1      31 degrees C / 87 degrees F
  Power:
    1.5 V                1487 mV
    1.5 V *              1494 mV
    1.8 V                1821 mV
    2.5 V                2533 mV
    3.3 V                3323 mV
    5.0 V                5028 mV
    3.3 V bias           3296 mV
    5.0 V bias           4984 mV
  CMB Revision          16
FPC 1 status:
  State                Online
  Temperature Intake    27 degrees C / 80 degrees F
  Temperature Exhaust   37 degrees C / 98 degrees F
  Temperature MMB1      32 degrees C / 89 degrees F
  Power:
    1.5 V                1504 mV
    1.5 V *              1499 mV
    1.8 V                1820 mV
    2.5 V                2529 mV
    3.3 V                3328 mV
    5.0 V                5013 mV
    3.3 V bias           3294 mV
    5.0 V bias           4984 mV
  CMB Revision          16
FPC 2 status:
  State                Online
  Temperature Intake    28 degrees C / 82 degrees F
  Temperature Exhaust   38 degrees C / 100 degrees F
  Temperature MMB1      32 degrees C / 89 degrees F
  Power:
    1.5 V                1498 mV
    1.5 V *              1487 mV
    1.8 V                1816 mV
    2.5 V                2531 mV
    3.3 V                3324 mV
    5.0 V                5025 mV
    3.3 V bias           3277 mV
    5.0 V bias           5013 mV
  CMB Revision          17
FPC 3 status:
...

```

**show chassis environment fpc (MX2020 Router)**

```

user@host> show chassis environment fpc

FPC 0 status:
  State                Online
  Temperature Intake    41 degrees C / 105 degrees F
  Temperature Exhaust A 48 degrees C / 118 degrees F

```

```

Temperature Exhaust B      60 degrees C / 140 degrees F
Temperature LU 0 TSen      56 degrees C / 132 degrees F
Temperature LU 0 Chip      59 degrees C / 138 degrees F
Temperature LU 1 TSen      56 degrees C / 132 degrees F
Temperature LU 1 Chip      61 degrees C / 141 degrees F
Temperature LU 2 TSen      56 degrees C / 132 degrees F
Temperature LU 2 Chip      52 degrees C / 125 degrees F
Temperature LU 3 TSen      56 degrees C / 132 degrees F
Temperature LU 3 Chip      52 degrees C / 125 degrees F
Temperature MQ 0 TSen      49 degrees C / 120 degrees F
Temperature MQ 0 Chip      49 degrees C / 120 degrees F
Temperature MQ 1 TSen      49 degrees C / 120 degrees F
Temperature MQ 1 Chip      52 degrees C / 125 degrees F
Temperature MQ 2 TSen      49 degrees C / 120 degrees F
Temperature MQ 2 Chip      45 degrees C / 113 degrees F
Temperature MQ 3 TSen      49 degrees C / 120 degrees F
Temperature MQ 3 Chip      46 degrees C / 114 degrees F
Power
  AS-BIAS3V3-z12105        3299 mV
  AS-VDD1V8-z12006         1807 mV
  AS-VDD2V5-z12006         2512 mV
  AS-AVDD1V0-z12004         997 mV
  AS-PCIE_1V0-z12004         996 mV
  AS-VDD3V3-z12004         3294 mV
  AS-VDD_1V5A-z12004        1501 mV
  AS-VDD_1V5B-z12004        1498 mV
  AS-LU0_1V0-z12004         998 mV
  AS-LU1_1V0-z12004        1002 mV
  AS-MQ0_1V0-z12004         999 mV
  AS-MQ1_1V0-z12004         994 mV
  AS-LU2_1V0-z12004        1000 mV
  AS-LU3_1V0-z12004         998 mV
  AS-MQ2_1V0-z12004        1002 mV
  AS-MQ3_1V0-z12004         999 mV
  AS-PMB_1V1-z12006        1096 mV
I2C Slave Revision        68
FPC 1 status:
State                      Online
Temperature Intake          39 degrees C / 102 degrees F
Temperature Exhaust A      48 degrees C / 118 degrees F
Temperature Exhaust B      55 degrees C / 131 degrees F
Temperature LU 0 TSen      52 degrees C / 125 degrees F
Temperature LU 0 Chip      54 degrees C / 129 degrees F
Temperature LU 1 TSen      52 degrees C / 125 degrees F
Temperature LU 1 Chip      56 degrees C / 132 degrees F
Temperature LU 2 TSen      52 degrees C / 125 degrees F
Temperature LU 2 Chip      49 degrees C / 120 degrees F
Temperature LU 3 TSen      52 degrees C / 125 degrees F
Temperature LU 3 Chip      50 degrees C / 122 degrees F
Temperature MQ 0 TSen      48 degrees C / 118 degrees F
Temperature MQ 0 Chip      48 degrees C / 118 degrees F
Temperature MQ 1 TSen      48 degrees C / 118 degrees F
Temperature MQ 1 Chip      51 degrees C / 123 degrees F
Temperature MQ 2 TSen      48 degrees C / 118 degrees F
Temperature MQ 2 Chip      45 degrees C / 113 degrees F
Temperature MQ 3 TSen      48 degrees C / 118 degrees F
Temperature MQ 3 Chip      45 degrees C / 113 degrees F
Power
  AS-BIAS3V3-z12105        3291 mV
  AS-VDD1V8-z12006        1786 mV

```

```

AS-VDD2V5-z12006      2496 mV
AS-AVDD1V0-z12004     1000 mV
AS-PCIE_1V0-z12004     1000 mV
AS-VDD3V3-z12004      3294 mV
AS-VDD_1V5A-z12004    1500 mV
AS-VDD_1V5B-z12004    1498 mV
AS-LU0_1V0-z12004     1003 mV
AS-LU1_1V0-z12004     1000 mV
AS-MQ0_1V0-z12004     1000 mV
AS-MQ1_1V0-z12004      995 mV
AS-LU2_1V0-z12004     1002 mV
AS-LU3_1V0-z12004      997 mV
AS-MQ2_1V0-z12004     1000 mV
AS-MQ3_1V0-z12004      998 mV
AS-PMB_1V1-z12006     1096 mV
I2C Slave Revision    68
FPC 2 status:
State                  Online
Temperature Intake     39 degrees C / 102 degrees F
Temperature Exhaust A  48 degrees C / 118 degrees F
Temperature Exhaust B  58 degrees C / 136 degrees F
Temperature LU 0 TSen  55 degrees C / 131 degrees F
Temperature LU 0 Chip  57 degrees C / 134 degrees F
Temperature LU 1 TSen  55 degrees C / 131 degrees F
Temperature LU 1 Chip  63 degrees C / 145 degrees F
Temperature LU 2 TSen  55 degrees C / 131 degrees F
Temperature LU 2 Chip  51 degrees C / 123 degrees F
Temperature LU 3 TSen  55 degrees C / 131 degrees F
Temperature LU 3 Chip  52 degrees C / 125 degrees F
Temperature MQ 0 TSen  48 degrees C / 118 degrees F
Temperature MQ 0 Chip  50 degrees C / 122 degrees F
Temperature MQ 1 TSen  48 degrees C / 118 degrees F
Temperature MQ 1 Chip  52 degrees C / 125 degrees F
Temperature MQ 2 TSen  48 degrees C / 118 degrees F
Temperature MQ 2 Chip  47 degrees C / 116 degrees F
Temperature MQ 3 TSen  48 degrees C / 118 degrees F
Temperature MQ 3 Chip  47 degrees C / 116 degrees F
Power
AS-BIAS3V3-z12105     3299 mV
AS-VDD1V8-z12006     1805 mV
AS-VDD2V5-z12006     2510 mV
AS-AVDD1V0-z12004      999 mV
AS-PCIE_1V0-z12004      998 mV
AS-VDD3V3-z12004      3296 mV
AS-VDD_1V5A-z12004    1492 mV
AS-VDD_1V5B-z12004    1497 mV
AS-LU0_1V0-z12004      997 mV
AS-LU1_1V0-z12004     1000 mV
AS-MQ0_1V0-z12004      998 mV
AS-MQ1_1V0-z12004     1001 mV
AS-LU2_1V0-z12004      996 mV
AS-LU3_1V0-z12004      995 mV
AS-MQ2_1V0-z12004      998 mV
AS-MQ3_1V0-z12004      997 mV
AS-PMB_1V1-z12006     1100 mV
I2C Slave Revision    68
FPC 3 status:
State                  Online
Temperature Intake     41 degrees C / 105 degrees F
Temperature Exhaust A  48 degrees C / 118 degrees F

```

```

Temperature Exhaust B      58 degrees C / 136 degrees F
Temperature LU 0 TSen      56 degrees C / 132 degrees F
Temperature LU 0 Chip      59 degrees C / 138 degrees F
Temperature LU 1 TSen      56 degrees C / 132 degrees F
Temperature LU 1 Chip      61 degrees C / 141 degrees F
Temperature LU 2 TSen      56 degrees C / 132 degrees F
Temperature LU 2 Chip      51 degrees C / 123 degrees F
Temperature LU 3 TSen      56 degrees C / 132 degrees F
Temperature LU 3 Chip      53 degrees C / 127 degrees F
Temperature MQ 0 TSen      50 degrees C / 122 degrees F
Temperature MQ 0 Chip      51 degrees C / 123 degrees F
Temperature MQ 1 TSen      50 degrees C / 122 degrees F
Temperature MQ 1 Chip      55 degrees C / 131 degrees F
Temperature MQ 2 TSen      50 degrees C / 122 degrees F
Temperature MQ 2 Chip      47 degrees C / 116 degrees F
Temperature MQ 3 TSen      50 degrees C / 122 degrees F
Temperature MQ 3 Chip      50 degrees C / 122 degrees F
Power
  AS-BIAS3V3-z12105      3305 mV
  AS-VDD1V8-z12006      1810 mV
  AS-VDD2V5-z12006      2508 mV
  AS-AVDD1V0-z12004      999 mV
  AS-PCIE_1V0-z12004      1001 mV
  AS-VDD3V3-z12004      3294 mV
  AS-VDD_1V5A-z12004      1500 mV
  AS-VDD_1V5B-z12004      1498 mV
  AS-LU0_1V0-z12004      998 mV
  AS-LU1_1V0-z12004      998 mV
  AS-MQ0_1V0-z12004      999 mV
  AS-MQ1_1V0-z12004      998 mV
  AS-LU2_1V0-z12004      1000 mV
  AS-LU3_1V0-z12004      1001 mV
  AS-MQ2_1V0-z12004      996 mV
  AS-MQ3_1V0-z12004      998 mV
  AS-PMB_1V1-z12006      1098 mV
I2C Slave Revision      68
FPC 4 status:
...
```

### show chassis environment fpc (MX2010 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State      Online
Temperature Intake      36 degrees C / 96 degrees F
Temperature Exhaust A   42 degrees C / 107 degrees F
Temperature Exhaust B   51 degrees C / 123 degrees F
Temperature LU 0 TSen    49 degrees C / 120 degrees F
Temperature LU 0 Chip    50 degrees C / 122 degrees F
Temperature LU 1 TSen    49 degrees C / 120 degrees F
Temperature LU 1 Chip    54 degrees C / 129 degrees F
Temperature LU 2 TSen    49 degrees C / 120 degrees F
Temperature LU 2 Chip    45 degrees C / 113 degrees F
Temperature LU 3 TSen    49 degrees C / 120 degrees F
Temperature LU 3 Chip    46 degrees C / 114 degrees F
Temperature MQ 0 TSen    40 degrees C / 104 degrees F
Temperature MQ 0 Chip    41 degrees C / 105 degrees F
Temperature MQ 1 TSen    40 degrees C / 104 degrees F
Temperature MQ 1 Chip    44 degrees C / 111 degrees F
```



```

Temperature MQ 2 TSen      40 degrees C / 104 degrees F
Temperature MQ 2 Chip      38 degrees C / 100 degrees F
Temperature MQ 3 TSen      40 degrees C / 104 degrees F
Temperature MQ 3 Chip      41 degrees C / 105 degrees F
Power
  AS-BIAS3V3-z12105        3300 mV
  AS-VDD1V8-z12006         1805 mV
  AS-VDD2V5-z12006         2505 mV
  AS-AVDD1V0-z12004         998 mV
  AS-PCIE_1V0-z12004         999 mV
  AS-VDD3V3-z12004         3303 mV
  AS-VDD_1V5A-z12004        1497 mV
  AS-VDD_1V5B-z12004        1497 mV
  AS-LU0_1V0-z12004         998 mV
  AS-LU1_1V0-z12004        1003 mV
  AS-MQ0_1V0-z12004         998 mV
  AS-MQ1_1V0-z12004         998 mV
  AS-LU2_1V0-z12004         997 mV
  AS-LU3_1V0-z12004        1001 mV
  AS-MQ2_1V0-z12004         996 mV
  AS-MQ3_1V0-z12004         994 mV
  AS-PMB_1V1-z12006        1097 mV
I2C Slave Revision        68
FPC 1 status:
State                      Online
Temperature Intake          34 degrees C / 93 degrees F
Temperature Exhaust A       46 degrees C / 114 degrees F
Temperature Exhaust B       54 degrees C / 129 degrees F
Temperature LU 0 TSen        45 degrees C / 113 degrees F
Temperature LU 0 Chip        55 degrees C / 131 degrees F
Temperature LU 1 TSen        45 degrees C / 113 degrees F
Temperature LU 1 Chip        44 degrees C / 111 degrees F
Temperature LU 2 TSen        45 degrees C / 113 degrees F
Temperature LU 2 Chip        50 degrees C / 122 degrees F
Temperature LU 3 TSen        45 degrees C / 113 degrees F
Temperature LU 3 Chip        58 degrees C / 136 degrees F
Temperature XM 0 TSen        45 degrees C / 113 degrees F
Temperature XM 0 Chip        51 degrees C / 123 degrees F
Temperature XF 0 TSen        45 degrees C / 113 degrees F
Temperature XF 0 Chip        63 degrees C / 145 degrees F
Temperature PLX Switch TSen  45 degrees C / 113 degrees F
Temperature PLX Switch Chip  47 degrees C / 116 degrees F
Power
  MPC-BIAS3V3-z12105        3300 mV
  MPC-VDD3V3-z16100         3294 mV
  MPC-VDD2V5-z16100         2505 mV
  MPC-VDD1V8-z12004         1796 mV
  MPC-AVDD1V0-z12004         991 mV
  MPC-VDD1V2-z16100         1196 mV
  MPC-VDD1V5A-z12004        1491 mV
  MPC-VDD1V5B-z12004        1492 mV
  MPC-XF_0V9-z12004         996 mV
  MPC-PCIE_1V0-z16100        1003 mV
  MPC-LU0_1V0-z12004         996 mV
  MPC-LU1_1V0-z12004         996 mV
  MPC-LU2_1V0-z12004         998 mV
  MPC-LU3_1V0-z12004         994 mV
  MPC-12VA-BMR453           12031 mV
  MPC-12VB-BMR453           12003 mV
  MPC-PMB_1V1-z12006        1104 mV

```

```

MPC-PMB_1V2-z12106      1194 mV
MPC-XM_OV9-vt273m       911 mV
I2C Slave Revision      110
FPC 8 status:
State                    Online
Temperature Intake       32 degrees C / 89 degrees F
Temperature Exhaust A    44 degrees C / 111 degrees F
Temperature Exhaust B    37 degrees C / 98 degrees F
Temperature LU 0 TCAM TSen 41 degrees C / 105 degrees F
Temperature LU 0 TCAM Chip 49 degrees C / 120 degrees F
Temperature LU 0 TSen     41 degrees C / 105 degrees F
Temperature LU 0 Chip     52 degrees C / 125 degrees F
Temperature MQ 0 TSen     41 degrees C / 105 degrees F
Temperature MQ 0 Chip     47 degrees C / 116 degrees F
Temperature LU 1 TCAM TSen 39 degrees C / 102 degrees F
Temperature LU 1 TCAM Chip 42 degrees C / 107 degrees F
Temperature LU 1 TSen     39 degrees C / 102 degrees F
Temperature LU 1 Chip     46 degrees C / 114 degrees F
Temperature MQ 1 TSen     39 degrees C / 102 degrees F
Temperature MQ 1 Chip     45 degrees C / 113 degrees F
Power
MPC-BIAS3V3-z12105      3296 mV
MPC-VDD3V3-z12006      3298 mV
MPC-VDD2V5-z12006      2505 mV
MPC-TCAM_1V0-z12004     997 mV
MPC-AVDD1V0-z12006      1007 mV
MPC-VDD1V8-z12006      1803 mV
MPC-PCIE_1V0-z12006     1004 mV
MPC-LU0_1V0-z12004      1000 mV
MPC-MQ0_1V0-z12004      999 mV
MPC-VDD_1V5-z12004      1498 mV
MPC-PMB_1V1-z12006      1102 mV
MPC-9VA-BMR453          9009 mV
MPC-9VB-BMR453          8960 mV
MPC-PMB_1V2-z12105      1202 mV
MPC-LU1_1V0-z12004      1005 mV
MPC-MQ1_1V0-z12004      1000 mV
I2C Slave Revision      70
FPC 9 status:
State                    Online
Temperature Intake       34 degrees C / 93 degrees F
Temperature Exhaust A    41 degrees C / 105 degrees F
Temperature Exhaust B    54 degrees C / 129 degrees F
Temperature LU 0 TSen     51 degrees C / 123 degrees F
Temperature LU 0 Chip     52 degrees C / 125 degrees F
Temperature LU 1 TSen     51 degrees C / 123 degrees F
Temperature LU 1 Chip     55 degrees C / 131 degrees F
Temperature LU 2 TSen     51 degrees C / 123 degrees F
Temperature LU 2 Chip     47 degrees C / 116 degrees F
Temperature LU 3 TSen     51 degrees C / 123 degrees F
Temperature LU 3 Chip     47 degrees C / 116 degrees F
Temperature MQ 0 TSen     40 degrees C / 104 degrees F
Temperature MQ 0 Chip     42 degrees C / 107 degrees F
Temperature MQ 1 TSen     40 degrees C / 104 degrees F
Temperature MQ 1 Chip     44 degrees C / 111 degrees F
Temperature MQ 2 TSen     40 degrees C / 104 degrees F
Temperature MQ 2 Chip     38 degrees C / 100 degrees F
Temperature MQ 3 TSen     40 degrees C / 104 degrees F
Temperature MQ 3 Chip     40 degrees C / 104 degrees F
Power

```

```

AS-BIAS3V3-z12105      3302 mV
AS-VDD1V8-z12006      1808 mV
AS-VDD2V5-z12006      2513 mV
AS-AVDD1V0-z12004      997 mV
AS-PCIE_1V0-z12004      999 mV
AS-VDD3V3-z12004      3294 mV
AS-VDD_1V5A-z12004      1503 mV
AS-VDD_1V5B-z12004      1502 mV
AS-LU0_1V0-z12004      996 mV
AS-LU1_1V0-z12004      999 mV
AS-MQ0_1V0-z12004      997 mV
AS-MQ1_1V0-z12004      999 mV
AS-LU2_1V0-z12004      997 mV
AS-LU3_1V0-z12004      998 mV
AS-MQ2_1V0-z12004      1000 mV
AS-MQ3_1V0-z12004      1000 mV
AS-PMB_1V1-z12006      1102 mV
I2C Slave Revision      68

```

### show chassis environment fpc (MX2008 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State                               Online
Temperature Intake                  29 degrees C / 84 degrees F
Temperature Exhaust A                43 degrees C / 109 degrees F
Temperature Exhaust B                42 degrees C / 107 degrees F
Temperature XL 0 TSen                38 degrees C / 100 degrees F
Temperature XL 0 Chip                53 degrees C / 127 degrees F
Temperature XL 0 XR2 0 TSen          38 degrees C / 100 degrees F
Temperature XL 0 XR2 0 Chip          60 degrees C / 140 degrees F
Temperature XL 0 XR2 1 TSen          38 degrees C / 100 degrees F
Temperature XL 0 XR2 1 Chip          60 degrees C / 140 degrees F
Temperature XL 1 TSen                30 degrees C / 86 degrees F
Temperature XL 1 Chip                43 degrees C / 109 degrees F
Temperature XL 1 XR2 0 TSen          30 degrees C / 86 degrees F
Temperature XL 1 XR2 0 Chip          50 degrees C / 122 degrees F
Temperature XL 1 XR2 1 TSen          30 degrees C / 86 degrees F
Temperature XL 1 XR2 1 Chip          50 degrees C / 122 degrees F
Temperature XM 0 TSen                42 degrees C / 107 degrees F
Temperature XM 0 Chip                49 degrees C / 120 degrees F
Temperature XM 1 TSen                42 degrees C / 107 degrees F
Temperature XM 1 Chip                42 degrees C / 107 degrees F
Temperature XM 2 TSen                42 degrees C / 107 degrees F
Temperature XM 2 Chip                42 degrees C / 107 degrees F
Temperature XM 3 TSen                42 degrees C / 107 degrees F
Temperature XM 3 Chip                40 degrees C / 104 degrees F
Temperature PCIE Switch TSen         42 degrees C / 107 degrees F
Temperature PCIE Switch Chip         22 degrees C / 71 degrees F
Power
MPC-VDD_3V3-vt273m                 3304 mV
MPC-VDD_2V5-vt273m                 2503 mV
MPC-VDD_1V5-vt273m                 1499 mV
MPC-PCIE_0V9-vt273m                 900 mV
MPC-VDD_1V8-vt273m                 1799 mV
MPC-VDD_1V2-vt273m                 1203 mV
MPC-XM01_AVDD_1V0-vt273             1001 mV
MPC-XM23_AVDD_1V0-vt273             1001 mV
MPC-XM0_0V9-vt273m                 900 mV

```

```

MPC-XM1_OV9-vt273m      901 mV
MPC-XM2_OV9-vt273m      903 mV
MPC-XM3_OV9-vt273m      899 mV
MPC-XL0_XR0_OV9-vt273m  899 mV
MPC-XL0_XR1_OV9-vt273m  903 mV
MPC-XL0_OV9-vt273m      899 mV
MPC-XL0_AVDD_1V0-vt273m 1000 mV
MPC-XL0_VDD_1V5-vt273m  1498 mV
MPC-XL0_XR_1V2-vt273m   1200 mV
MPC-XL1_XR0_OV9-vt273m  899 mV
MPC-XL1_XR1_OV9-vt273m  899 mV
MPC-XL1_OV9-vt273m      900 mV
MPC-XL1_AVDD_1V0-vt273m 1000 mV
MPC-XL1_VDD_1V5-vt273m  1501 mV
MPC-XL1_XR_1V2-vt273m   1199 mV
MPC-PMB-1V05-ltc2978    1049 mV
MPC-PMB-1V5-ltc2978     1500 mV
MPC-PMB-2V5-ltc2978     2500 mV
MPC-PMB-3V3-ltc2978     3298 mV
I2C Slave Revision      20
FPC 1 status:
State                   Online
Temperature Intake       29 degrees C / 84 degrees F
Temperature Exhaust A    52 degrees C / 125 degrees F
Temperature Exhaust B    44 degrees C / 111 degrees F
Temperature EA0 TSen     55 degrees C / 131 degrees F
Temperature EA0 Chip     48 degrees C / 118 degrees F
Temperature EA0_XR0 TSen 55 degrees C / 131 degrees F
Temperature EA0_XR0 Chip 57 degrees C / 134 degrees F
Temperature EA0_XR1 TSen 55 degrees C / 131 degrees F
Temperature EA0_XR1 Chip 54 degrees C / 129 degrees F
Temperature EA1 TSen     55 degrees C / 131 degrees F
Temperature EA1 Chip     50 degrees C / 122 degrees F
Temperature EA1_XR0 TSen 55 degrees C / 131 degrees F
Temperature EA1_XR0 Chip 59 degrees C / 138 degrees F
Temperature EA1_XR1 TSen 55 degrees C / 131 degrees F
Temperature EA1_XR1 Chip 59 degrees C / 138 degrees F
Temperature PEX TSen     55 degrees C / 131 degrees F
Temperature PEX Chip     39 degrees C / 102 degrees F
Temperature EA2 TSen     43 degrees C / 109 degrees F
Temperature EA2 Chip     39 degrees C / 102 degrees F
Temperature EA2_XR0 TSen 43 degrees C / 109 degrees F
Temperature EA2_XR0 Chip 45 degrees C / 113 degrees F
Temperature EA2_XR1 TSen 43 degrees C / 109 degrees F
Temperature EA2_XR1 Chip 43 degrees C / 109 degrees F
Temperature EA3 TSen     43 degrees C / 109 degrees F
Temperature EA3 Chip     41 degrees C / 105 degrees F
Temperature EA3_XR0 TSen 43 degrees C / 109 degrees F
Temperature EA3_XR0 Chip 50 degrees C / 122 degrees F
Temperature EA3_XR1 TSen 43 degrees C / 109 degrees F
Temperature EA3_XR1 Chip 46 degrees C / 114 degrees F
Temperature EA0_HMC0 Logic die 61 degrees C / 141 degrees F
Temperature EA0_HMC0 DRAM botm 58 degrees C / 136 degrees F
Temperature EA0_HMC1 Logic die 62 degrees C / 143 degrees F
Temperature EA0_HMC1 DRAM botm 59 degrees C / 138 degrees F
Temperature EA0_HMC2 Logic die 59 degrees C / 138 degrees F
Temperature EA0_HMC2 DRAM botm 56 degrees C / 132 degrees F
Temperature EA1_HMC0 Logic die 67 degrees C / 152 degrees F
Temperature EA1_HMC0 DRAM botm 64 degrees C / 147 degrees F
Temperature EA1_HMC1 Logic die 65 degrees C / 149 degrees F

```

```

Temperature EA1_HMC1 DRAM botm 62 degrees C / 143 degrees F
Temperature EA1_HMC2 Logic die 63 degrees C / 145 degrees F
Temperature EA1_HMC2 DRAM botm 60 degrees C / 140 degrees F
Temperature EA2_HMC0 Logic die 51 degrees C / 123 degrees F
Temperature EA2_HMC0 DRAM botm 48 degrees C / 118 degrees F
Temperature EA2_HMC1 Logic die 55 degrees C / 131 degrees F
Temperature EA2_HMC1 DRAM botm 52 degrees C / 125 degrees F
Temperature EA2_HMC2 Logic die 52 degrees C / 125 degrees F
Temperature EA2_HMC2 DRAM botm 49 degrees C / 120 degrees F
Temperature EA3_HMC0 Logic die 51 degrees C / 123 degrees F
Temperature EA3_HMC0 DRAM botm 48 degrees C / 118 degrees F
Temperature EA3_HMC1 Logic die 52 degrees C / 125 degrees F
Temperature EA3_HMC1 DRAM botm 49 degrees C / 120 degrees F
Temperature EA3_HMC2 Logic die 52 degrees C / 125 degrees F
Temperature EA3_HMC2 DRAM botm 49 degrees C / 120 degrees F

```

#### Power

```

MPC-EA0_OV9-vt1527mb          950 mV
MPC-EA1_OV9-vt1527mb          950 mV
MPC-EA2_OV9-vt1527mb          925 mV
MPC-EA3_OV9-vt1527mb          924 mV
MAX20751-1V0                   1020 mV
MAX20731-OV9                    891 mV
MAX20751-EA0-AVDD1V0          1000 mV
MAX20731-EA0-1V2               1189 mV
MAX20731-EA0-HMC-1V2          1182 mV
MAX20731-EA0-OV906             899 mV
MAX20731-EA0-HMC-OV9           891 mV
MAX20751-EA1-AVDD1V0          1000 mV
MAX20731-EA1-1V2               1189 mV
MAX20731-EA1-HMC-1V2          1182 mV
MAX20731-EA1-OV906             899 mV
MAX20731-EA1-HMC-OV9           889 mV
MAX20751-EA2-AVDD1V0          1000 mV
MAX20731-EA2-1V2               1186 mV
MAX20731-EA2-HMC-1V2          1193 mV
MAX20731-EA2-OV906             899 mV
MAX20731-EA2-HMC-OV9           889 mV
MAX20751-EA3-AVDD1V0          1000 mV
MAX20731-EA3-1V2               1186 mV
MAX20731-EA3-HMC-1V2          1193 mV
MAX20731-EA3-OV906             897 mV
MAX20731-EA3-HMC-OV9           894 mV
MAX20731-3V3                   3268 mV
UCD9090_0-CH_1-EA0_PLL_        1010 mV
UCD9090_0-CH_2-EA0_1V04        1038 mV
UCD9090_0-CH_3-EA0_2V5         2499 mV
UCD9090_0-CH_4-EA0_1V5         1494 mV
UCD9090_0-CH_5-EA1_PLL_        1012 mV
UCD9090_0-CH_6-EA1_1V04        1038 mV
UCD9090_0-CH_7-EA1_2V5         2497 mV
UCD9090_0-CH_8-EA1_1V5         1498 mV
UCD9090_0-CH_9-VDD_1V8         1804 mV
UCD9090_0-CH_10-VDD_2V5        2499 mV
UCD9090_1-CH_1-EA2_PLL_        1017 mV
UCD9090_1-CH_2-EA2_1V04        1041 mV
UCD9090_1-CH_3-EA2_2V5         2499 mV
UCD9090_1-CH_4-EA2_1V5         1503 mV
UCD9090_1-CH_5-EA3_PLL_        1015 mV
UCD9090_1-CH_6-EA3_1V04        1048 mV
UCD9090_1-CH_7-EA3_2V5         2499 mV

```

```

UCD9090_1-CH_8-EA3_1V5      1500 mV
UCD9090_1-CH_9-VDD_1V5      1497 mV
UCD9090_1-CH_10-VDD_1V2     1216 mV
PMB PVCC 0.7V - 1.05V       802 mV
PMB PVNN 0V - 1.02V         976 mV
PMB 1.0V                     1002 mV
PMB 1.1V                     1076 mV
PMB 1.35V                    1347 mV
PMB VDDQ 1.5V                1504 mV
PMB 1.8V                     1804 mV
PMB VDD 3.3V                 3292 mV
PMB BIAS 5.0V                5008 mV
PMB USB 5.0V                 5000 mV
PMB 12V                      10866 mV
I2C Slave Revision          112
FPC 7 status:
State                        Online
Temperature Intake           31 degrees C / 87 degrees F
Temperature Exhaust A        46 degrees C / 114 degrees F
Temperature Exhaust B        38 degrees C / 100 degrees F
Temperature QX 0 TSen         49 degrees C / 120 degrees F
Temperature QX 0 Chip         52 degrees C / 125 degrees F
Temperature LU 0 TCAM TSen    49 degrees C / 120 degrees F
Temperature LU 0 TCAM Chip    52 degrees C / 125 degrees F
Temperature LU 0 TSen         49 degrees C / 120 degrees F
Temperature LU 0 Chip         51 degrees C / 123 degrees F
Temperature MQ 0 TSen         49 degrees C / 120 degrees F
Temperature MQ 0 Chip         55 degrees C / 131 degrees F
Temperature QX 1 TSen         41 degrees C / 105 degrees F
Temperature QX 1 Chip         42 degrees C / 107 degrees F
Temperature LU 1 TCAM TSen    41 degrees C / 105 degrees F
Temperature LU 1 TCAM Chip    43 degrees C / 109 degrees F
Temperature LU 1 TSen         41 degrees C / 105 degrees F
Temperature LU 1 Chip         46 degrees C / 114 degrees F
Temperature MQ 1 TSen         41 degrees C / 105 degrees F
Temperature MQ 1 Chip         47 degrees C / 116 degrees F
Power
MPC-BIAS3V3-z12105           3302 mV
MPC-VDD3V3-z12006            3307 mV
MPC-VDD2V5-z12006            2505 mV
MPC-TCAM_1V0-z12004           1000 mV
MPC-AVDD1V0-z12006            1006 mV
MPC-VDD1V8-z12006            1800 mV
MPC-PCIE_1V0-z12006           1000 mV
MPC-LU0_1V0-z12004            997 mV
MPC-MQ0_1V0-z12004            999 mV
MPC-VDD_1V5-z12004            1495 mV
MPC-PMB_1V1-z12006            1096 mV
MPC-9VA-BMR453                9051 mV
MPC-9VB-BMR453                8990 mV
MPC-PMB_1V2-z12106            1200 mV
MPC-LU1_1V0-z12004            997 mV
MPC-MQ1_1V0-z12004            998 mV
MPC-QXM0_1V0-z12006           1000 mV
MPC-QXM1_1V0-z12006           999 mV
I2C Slave Revision           70

```

### show chassis environment fpc (MX240 Router)

```
user@host> show chassis environment fpc
```

## FPC 1 status:

State	Online
Temperature Intake	34 degrees C / 93 degrees F
Temperature Exhaust A	39 degrees C / 102 degrees F
Temperature Exhaust B	53 degrees C / 127 degrees F
Temperature I3 0 TSensor	51 degrees C / 123 degrees F
Temperature I3 0 Chip	54 degrees C / 129 degrees F
Temperature I3 1 TSensor	50 degrees C / 122 degrees F
Temperature I3 1 Chip	53 degrees C / 127 degrees F
Temperature I3 2 TSensor	48 degrees C / 118 degrees F
Temperature I3 2 Chip	51 degrees C / 123 degrees F
Temperature I3 3 TSensor	45 degrees C / 113 degrees F
Temperature I3 3 Chip	48 degrees C / 118 degrees F
Temperature IA 0 TSensor	45 degrees C / 113 degrees F
Temperature IA 0 Chip	45 degrees C / 113 degrees F
Temperature IA 1 TSensor	45 degrees C / 113 degrees F
Temperature IA 1 Chip	49 degrees C / 120 degrees F
Power	
1.5 V	1492 mV
2.5 V	2507 mV
3.3 V	3306 mV
1.8 V PFE 0	1801 mV
1.8 V PFE 1	1804 mV
1.8 V PFE 2	1798 mV
1.8 V PFE 3	1798 mV
1.2 V PFE 0	1169 mV
1.2 V PFE 1	1189 mV
1.2 V PFE 2	1182 mV
1.2 V PFE 3	1176 mV
I2C Slave Revision	42

## FPC 2 status:

State	Online
Temperature Intake	33 degrees C / 91 degrees F
Temperature Exhaust A	41 degrees C / 105 degrees F
Temperature Exhaust B	53 degrees C / 127 degrees F
Temperature I3 0 TSensor	53 degrees C / 127 degrees F
Temperature I3 0 Chip	58 degrees C / 136 degrees F
Temperature I3 1 TSensor	52 degrees C / 125 degrees F
Temperature I3 1 Chip	56 degrees C / 132 degrees F
Temperature I3 2 TSensor	50 degrees C / 122 degrees F
Temperature I3 2 Chip	52 degrees C / 125 degrees F
Temperature I3 3 TSensor	46 degrees C / 114 degrees F
Temperature I3 3 Chip	49 degrees C / 120 degrees F
Temperature IA 0 TSensor	51 degrees C / 123 degrees F
Temperature IA 0 Chip	49 degrees C / 120 degrees F
Temperature IA 1 TSensor	48 degrees C / 118 degrees F
Temperature IA 1 Chip	53 degrees C / 127 degrees F
Power	
1.5 V	1492 mV
2.5 V	2445 mV
3.3 V	3293 mV
1.8 V PFE 0	1827 mV
1.8 V PFE 1	1775 mV
1.8 V PFE 2	1788 mV
1.8 V PFE 3	1798 mV
1.2 V PFE 0	1250 mV
1.2 V PFE 1	1234 mV
1.2 V PFE 2	1231 mV
1.2 V PFE 3	1192 mV
I2C Slave Revision	42

**show chassis environment fpc (MX480 Router)**

```
user@host> show chassis environment fpc
```

```
FPC 1 status:
State                Online
Temperature Intake    36 degrees C / 96 degrees F
Temperature Exhaust A 41 degrees C / 105 degrees F
Temperature Exhaust B 55 degrees C / 131 degrees F
Temperature I3 0 TSensor 55 degrees C / 131 degrees F
Temperature I3 0 Chip  57 degrees C / 134 degrees F
Temperature I3 1 TSensor 53 degrees C / 127 degrees F
Temperature I3 1 Chip  53 degrees C / 127 degrees F
Temperature I3 2 TSensor 52 degrees C / 125 degrees F
Temperature I3 2 Chip  49 degrees C / 120 degrees F
Temperature I3 3 TSensor 47 degrees C / 116 degrees F
Temperature I3 3 Chip  47 degrees C / 116 degrees F
Temperature IA 0 TSensor 54 degrees C / 129 degrees F
Temperature IA 0 Chip  58 degrees C / 136 degrees F
Temperature IA 1 TSensor 48 degrees C / 118 degrees F
Temperature IA 1 Chip  53 degrees C / 127 degrees F
Power
  1.5 V                1479 mV
  2.5 V                2542 mV
  3.3 V                3319 mV
  1.8 V PFE 0          1811 mV
  1.8 V PFE 1          1804 mV
  1.8 V PFE 2          1804 mV
  1.8 V PFE 3          1814 mV
  1.2 V PFE 0          1192 mV
  1.2 V PFE 1          1202 mV
  1.2 V PFE 2          1205 mV
  1.2 V PFE 3          1189 mV
I2C Slave Revision    40
```

**show chassis environment fpc (MX960 Router MPC10E-15C-MRATE)**

```
user@router> show chassis environment fpc 8
```

```
FPC 8 status:
State                Online
Temperature Intake    37 degrees C / 98 degrees F
Temperature Exhaust A 50 degrees C / 122 degrees F
Temperature Exhaust B 56 degrees C / 132 degrees F
Temperature ZT0 Chip  83 degrees C / 181 degrees F
Temperature ZT1 Chip  80 degrees C / 176 degrees F
Temperature ZT2 Chip  81 degrees C / 177 degrees F
Temperature PCIE_SW Chip 64 degrees C / 147 degrees F
Temperature ZT0 TestMacro 73 degrees C / 163 degrees F
Temperature ZT0 hbmio_grp3 74 degrees C / 165 degrees F
```



Temperature ZT0 hbmio_grp0	76 degrees C / 168 degrees F
Temperature ZT0 gumem1	78 degrees C / 172 degrees F
Temperature ZT0 llm	80 degrees C / 176 degrees F
Temperature ZT0 wanio_sd	78 degrees C / 172 degrees F
Temperature ZT0 fabio_sd	84 degrees C / 183 degrees F
Temperature ZT0 flexmem	84 degrees C / 183 degrees F
Temperature ZT1 TestMacro	70 degrees C / 158 degrees F
Temperature ZT1 hbmio_grp3	71 degrees C / 159 degrees F
Temperature ZT1 hbmio_grp0	74 degrees C / 165 degrees F
Temperature ZT1 gumem1	75 degrees C / 167 degrees F
Temperature ZT1 llm	78 degrees C / 172 degrees F
Temperature ZT1 wanio_sd	76 degrees C / 168 degrees F
Temperature ZT1 fabio_sd	78 degrees C / 172 degrees F
Temperature ZT1 flexmem	82 degrees C / 179 degrees F
Temperature ZT2 TestMacro	71 degrees C / 159 degrees F
Temperature ZT2 hbmio_grp3	72 degrees C / 161 degrees F
Temperature ZT2 hbmio_grp0	75 degrees C / 167 degrees F
Temperature ZT2 gumem1	76 degrees C / 168 degrees F
Temperature ZT2 llm	78 degrees C / 172 degrees F
Temperature ZT2 wanio_sd	78 degrees C / 172 degrees F
Temperature ZT2 fabio_sd	80 degrees C / 176 degrees F
Temperature ZT2 flexmem	76 degrees C / 168 degrees F
Temperature ZT0 HBMO	74 degrees C / 165 degrees F
Temperature ZT0 HBM1	74 degrees C / 165 degrees F
Temperature ZT1 HBMO	74 degrees C / 165 degrees F
Temperature ZT1 HBM1	75 degrees C / 167 degrees F
Temperature ZT2 HBMO	73 degrees C / 163 degrees F
Temperature ZT2 HBM1	73 degrees C / 163 degrees F
Temperature FAB RT1.0	73 degrees C / 163 degrees F
Temperature FAB RT2.0	75 degrees C / 167 degrees F

Temperature FAB RT3.0	73 degrees C / 163 degrees F
Temperature FAB RT4.0	70 degrees C / 158 degrees F
Temperature FAB RT5.0	67 degrees C / 152 degrees F
Temperature FAB RT6.0	67 degrees C / 152 degrees F
Temperature FAB RT7.0	65 degrees C / 149 degrees F
Temperature FAB RT8.0	66 degrees C / 150 degrees F
Temperature WAN RT9.0	64 degrees C / 147 degrees F
Temperature WAN RT9.1	62 degrees C / 143 degrees F
Temperature WAN RT10.0	65 degrees C / 149 degrees F
Temperature WAN RT10.1	63 degrees C / 145 degrees F
Temperature WAN RT11.0	51 degrees C / 123 degrees F
Temperature WAN RT11.1	49 degrees C / 120 degrees F
Temperature PIM4820 T1	72 degrees C / 161 degrees F
Temperature BMR456-12V-BRICK-A T1	83 degrees C / 181 degrees F
Temperature BMR456-12V-BRICK-B T1	91 degrees C / 195 degrees F
Temperature MAX20730-ZT0-AVDDH T1	72 degrees C / 161 degrees F
Temperature MAX20730-ZT0-HBM-VDDQ T1	64 degrees C / 147 degrees F
Temperature MAX20730-ZT0-HBM-VDDC T1	65 degrees C / 149 degrees F
Temperature MAX20730-ZT1-AVDDH T1	65 degrees C / 149 degrees F
Temperature MAX20730-ZT1-HBM-VDDQ T1	60 degrees C / 140 degrees F
Temperature MAX20730-ZT1-HBM-VDDC T1	57 degrees C / 134 degrees F
Temperature MAX20730-ZT2-AVDDH T1	65 degrees C / 149 degrees F
Temperature MAX20730-ZT2-HBM-VDDQ T1	58 degrees C / 136 degrees F
Temperature MAX20730-ZT2-HBM-VDDC T1	55 degrees C / 131 degrees F
Temperature CPU0_PMB	61 degrees C / 141 degrees F
Temperature CPU7_PMB	61 degrees C / 141 degrees F
Temperature DDR4 A	38 degrees C / 100 degrees F
Temperature DDR4 B	37 degrees C / 98 degrees F
Power	
PIM4820	56967 mV
BMR456-12V-BRICK-A	12016 mV
BMR456-12V-BRICK-B	12039 mV

MAX20743-RT01-DVDD	724 mV
MAX20743-RT234-DVDD	724 mV
MAX20743-RT567-DVDD	724 mV
MAX20754-ZT0-VDD	750 mV
MAX20754-ZT0-VDDM	799 mV
MAX20743-ZT0-AVDD	904 mV
MAX20730-ZT0-AVDDH	1103 mV
MAX20730-ZT0-HBM-VDDQ	1198 mV
MAX20730-ZT0-HBM-VDDC	1202 mV
MAX20730-VDD-1V25	1246 mV
MAX20754-ZT1-VDD	724 mV
MAX20754-ZT1-VDDM	800 mV
MAX20743-ZT1-AVDD	904 mV
MAX20730-ZT1-AVDDH	1103 mV
MAX20730-ZT1-HBM-VDDQ	1202 mV
MAX20730-ZT1-HBM-VDDC	1198 mV
MAX20730-PCIE-0V9	901 mV
MAX20754-ZT2-VDD	724 mV
MAX20754-ZT2-VDDM	799 mV
MAX20743-ZT2-AVDD	904 mV
MAX20730-ZT2-AVDDH	1103 mV
MAX20730-ZT2-HBM-VDDQ	1198 mV
MAX20730-ZT2-HBM-VDDC	1198 mV
MAX20730-VDD3V3	3308 mV
MAX20754-WAN-VDD3V3	3301 mV
MAX20754-WAN-DVDD0V8	799 mV
MAX20743-WAN-VDD1V0A	1003 mV
MAX20743-WAN-AVDD0V8	800 mV
MAX20743-WAN-VDD1V0C	1003 mV
TPS53631-1V2-VDDQ-PMB	1225 mV
TPS53641-VCCIN-PMB	1770 mV
TPS53641-VCCSBUS-PMB	1040 mV
MAX20730-BIAS3P30-PMB	3308 mV
MAX20730-BIAS5P0-PMB	5063 mV
MAX20730-VPP-V2P5-PMB	2503 mV
MAX20730-VDD1V2	1195 mV
MAX20730-VDD1V5	1496 mV
MAX20730-VDD1V8	1799 mV
MAX20730-VDD2V5	2511 mV
MAX20754-RT-AVDD-0V8	800 mV
MAX20743-XGE-VDD-AVS	1012 mV
PMB VCC1P05_PCH_SW	1048 mV
PMB VCC1P3	1294 mV
PMB VCC1P5	1485 mV
PMB VCC1P7	1705 mV
PMB DDR4_VPP	2519 mV
PMB VCC3P3	3336 mV
PMB VCC3P3_PCH	3332 mV
I2C Slave Revision	124

### show chassis environment fpc (MX960 Router)

```
user@host> show chassis environment fpc
```

```
FPC 5 status:
```

State	Online
Temperature Intake	27 degrees C / 80 degrees F
Temperature Exhaust A	34 degrees C / 93 degrees F
Temperature Exhaust B	40 degrees C / 104 degrees F
Temperature I3 0 TSensor	39 degrees C / 102 degrees F

```

Temperature I3 0 Chip      41 degrees C / 105 degrees F
Temperature I3 1 TSensor   38 degrees C / 100 degrees F
Temperature I3 1 Chip      37 degrees C / 98 degrees F
Temperature I3 2 TSensor   37 degrees C / 98 degrees F
Temperature I3 2 Chip      34 degrees C / 93 degrees F
Temperature I3 3 TSensor   32 degrees C / 89 degrees F
Temperature I3 3 Chip      33 degrees C / 91 degrees F
Temperature IA 0 TSensor   39 degrees C / 102 degrees F
Temperature IA 0 Chip      44 degrees C / 111 degrees F
Temperature IA 1 TSensor   36 degrees C / 96 degrees F
Temperature IA 1 Chip      44 degrees C / 111 degrees F
Power
  1.5 V                    1479 mV
  2.5 V                    2523 mV
  3.3 V                    3254 mV
  1.8 V PFE 0              1798 mV
  1.8 V PFE 1              1798 mV
  1.8 V PFE 2              1807 mV
  1.8 V PFE 3              1791 mV
  1.2 V PFE 0              1173 mV
  1.2 V PFE 1              1179 mV
  1.2 V PFE 2              1179 mV
  1.2 V PFE 3              1185 mV
I2C Slave Revision        6
FPC 6 status:
State                      Online
Temperature Intake          25 degrees C / 77 degrees F
Temperature Exhaust A       38 degrees C / 100 degrees F
Temperature Exhaust B       38 degrees C / 100 degrees F
Temperature I3 0 TSensor    40 degrees C / 104 degrees F
Temperature I3 0 Chip       40 degrees C / 104 degrees F
Temperature I3 1 TSensor    40 degrees C / 104 degrees F
Temperature I3 1 Chip       38 degrees C / 100 degrees F
Temperature I3 2 TSensor    37 degrees C / 98 degrees F
Temperature I3 2 Chip       32 degrees C / 89 degrees F
Temperature I3 3 TSensor    34 degrees C / 93 degrees F
Temperature I3 3 Chip       33 degrees C / 91 degrees F
Temperature IA 0 TSensor    45 degrees C / 113 degrees F
Temperature IA 0 Chip       47 degrees C / 116 degrees F
Temperature IA 1 TSensor    37 degrees C / 98 degrees F
Temperature IA 1 Chip       42 degrees C / 107 degrees F
Power
  1.5 V                    1485 mV
  2.5 V                    2510 mV
  3.3 V                    3332 mV
  1.8 V PFE 0              1801 mV
  1.8 V PFE 1              1814 mV
  1.8 V PFE 2              1804 mV
  1.8 V PFE 3              1820 mV
  1.2 V PFE 0              1192 mV
  1.2 V PFE 1              1189 mV
  1.2 V PFE 2              1202 mV
  1.2 V PFE 3              1156 mV
I2C Slave Revision        40

```

### show chassis environment fpc (MX480 Router with 100-Gigabit Ethernet CFP)

```
user@host> show chassis environment fpc
```

## FPC 0 status:

State	Online
Temperature Intake	32 degrees C / 89 degrees F
Temperature Exhaust A	39 degrees C / 102 degrees F
Temperature Exhaust B	37 degrees C / 98 degrees F
Temperature QX 0 TSen	44 degrees C / 111 degrees F
Temperature QX 0 Chip	48 degrees C / 118 degrees F
Temperature LU 0 TCAM TSen	44 degrees C / 111 degrees F
Temperature LU 0 TCAM Chip	47 degrees C / 116 degrees F
Temperature LU 0 TSen	44 degrees C / 111 degrees F
Temperature LU 0 Chip	48 degrees C / 118 degrees F
Temperature MQ 0 TSen	44 degrees C / 111 degrees F
Temperature MQ 0 Chip	47 degrees C / 116 degrees F
Power	
MPC-BIAS3V3-z12105	3297 mV
MPC-VDD3V3-z12105	3306 mV
MPC-VDD2V5-z12105	2498 mV
MPC-TCAM_1V0-z12004	999 mV
MPC-AVDD1V0-z12006	999 mV
MPC-VDD1V8-z12006	1796 mV
MPC-PCIE_1V0-z12006	1002 mV
MPC-LU0_1V0-z12004	997 mV
MPC-MQ0_1V0-z12004	995 mV
MPC-VDD_1V5-z12004	1496 mV
MPC-PMB_1V1-z12006	1094 mV
MPC-9VA-BMR453	9054 mV
MPC-9VB-BMR453	9037 mV
MPC-PMB_1V2-z12106	1191 mV
MPC-QXM0_1V0-z12006	1000 mV
I2C Slave Revision	66

## FPC 1 status:

State	Online
Temperature Intake	35 degrees C / 95 degrees F
Temperature Exhaust A	50 degrees C / 122 degrees F
Temperature Exhaust B	56 degrees C / 132 degrees F
Temperature LU 0 TSen	46 degrees C / 114 degrees F
Temperature LU 0 Chip	59 degrees C / 138 degrees F
Temperature LU 1 TSen	46 degrees C / 114 degrees F
Temperature LU 1 Chip	45 degrees C / 113 degrees F
Temperature LU 2 TSen	46 degrees C / 114 degrees F
Temperature LU 2 Chip	60 degrees C / 140 degrees F
Temperature LU 3 TSen	46 degrees C / 114 degrees F
Temperature LU 3 Chip	71 degrees C / 159 degrees F
Temperature XM 0 TSen	46 degrees C / 114 degrees F
Temperature XM 0 Chip	-18 degrees C / 0 degrees F
Temperature XF 0 TSen	46 degrees C / 114 degrees F
Temperature XF 0 Chip	76 degrees C / 168 degrees F
Power	
MPC-BIAS3V3-z12105	3292 mV
MPC-VDD3V3-z16100	3303 mV
MPC-VDD2V5-z16100	2501 mV
MPC-VDD1V8-z12004	1801 mV
MPC-AVDD1V0-z12006	996 mV
MPC-VDD1V2-z16100	1199 mV
MPC-VDD1V5A-z12004	1493 mV
MPC-VDD1V5B-z12004	1498 mV
MPC-XF_0V9-z12006	996 mV
MPC-PCIE_1V0-z16100	1000 mV
MPC-LU0_1V0-z12004	994 mV
MPC-LU1_1V0-z12004	994 mV

```

MPC-LU2_1V0-z12004      992 mV
MPC-LU3_1V0-z12004      993 mV
MPC-12VA-BMR453         12003 mV
MPC-12VB-BMR453         12043 mV
MPC-PMB_1V1-z12006      1091 mV
MPC-PMB_1V2-z12106      1196 mV
MPC-XM_0V9-vt273m       899 mV
I2C Slave Revision      106

```

### show chassis environment fpc (MX240, MX480, MX960 with Application Services Modular Line Card)

```
user@host>show chassis environment fpc 1
```

```

FPC 1 status:
State                               Online
Temperature Intake                  36 degrees C / 96 degrees F
Temperature Exhaust A               39 degrees C / 102 degrees F
Temperature LU TSen                  52 degrees C / 125 degrees F
Temperature LU Chip                  54 degrees C / 129 degrees F
Temperature XM TSen                  52 degrees C / 125 degrees F
Temperature XM Chip                  60 degrees C / 140 degrees F
Temperature PCIE TSen                52 degrees C / 125 degrees F
Temperature PCIE Chip                69 degrees C / 156 degrees F
Power
MPC-BIAS3V3-z12106                  3302 mV
MPC-VDD3V3-z16100                   3325 mV
MPC-AVDD1V0-z16100                   1007 mV
MPC-PCIE_1V0-z16100                   904 mV
MPC-LU0_1V0-z12004                   996 mV
MPC-VDD_1V5-z12004                   1498 mV
MPC-12VA-BMR453                      11733 mV
MPC-12VB-BMR453                      11728 mV
MPC-XM_0V9-vt273m                    900 mV
I2C Slave Revision                   81

```

### show chassis environment fpc (MX10003 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State                               Online
FPC 0 Intake Temp Sensor            29 degrees C / 84 degrees F
FPC 0 Exhaust-A Temp Sensor          56 degrees C / 132 degrees F
FPC 0 Exhaust-B Temp Sensor          44 degrees C / 111 degrees F
FPC 0 EA0 Chip                       58 degrees C / 136 degrees F
FPC 0 EA0-XR0 Chip                   61 degrees C / 141 degrees F
FPC 0 EA0-XR1 Chip                   62 degrees C / 143 degrees F
FPC 0 EA1 Chip                       67 degrees C / 152 degrees F
FPC 0 EA1-XR0 Chip                   72 degrees C / 161 degrees F
FPC 0 EA1-XR1 Chip                   72 degrees C / 161 degrees F
FPC 0 PEX Chip                       77 degrees C / 170 degrees F
FPC 0 EA2 Chip                       48 degrees C / 118 degrees F
FPC 0 EA2-XR0 Chip                   54 degrees C / 129 degrees F
FPC 0 EA2-XR1 Chip                   56 degrees C / 132 degrees F
FPC 0 PF Chip                       68 degrees C / 154 degrees F
FPC 0 EA0_HMC0 Logic die             72 degrees C / 161 degrees F
FPC 0 EA0_HMC0 DRAM botm            69 degrees C / 156 degrees F
FPC 0 EA0_HMC1 Logic die             71 degrees C / 159 degrees F

```

```

FPC 0 EA0_HMC1 DRAM botm 68 degrees C / 154 degrees F
FPC 0 EA0_HMC2 Logic die 75 degrees C / 167 degrees F
FPC 0 EA0_HMC2 DRAM botm 72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 Logic die 81 degrees C / 177 degrees F
FPC 0 EA1_HMC0 DRAM botm 78 degrees C / 172 degrees F
FPC 0 EA1_HMC1 Logic die 80 degrees C / 176 degrees F
FPC 0 EA1_HMC1 DRAM botm 77 degrees C / 170 degrees F
FPC 0 EA1_HMC2 Logic die 82 degrees C / 179 degrees F
FPC 0 EA1_HMC2 DRAM botm 79 degrees C / 174 degrees F
FPC 0 EA2_HMC0 Logic die 60 degrees C / 140 degrees F
FPC 0 EA2_HMC0 DRAM botm 57 degrees C / 134 degrees F
FPC 0 EA2_HMC1 Logic die 61 degrees C / 141 degrees F
FPC 0 EA2_HMC1 DRAM botm 58 degrees C / 136 degrees F
FPC 0 EA2_HMC2 Logic die 63 degrees C / 145 degrees F
FPC 0 EA2_HMC2 DRAM botm 60 degrees C / 140 degrees F

```

#### Power

```

LTC3887-PF-VDD0V9-RAIL      898 mV
LTC3887-PF-VDD0V9-DEV0-     898 mV
LTC3887-PF-VDD0V9-DEV0-     900 mV
LTC3887-PF-VDD0V9-DEV1-     899 mV
LTC3887-PF-VDD0V9-DEV1-     901 mV
LTC3887-PF-AVDD1V0-RAIL     998 mV
LTC3887-PF-AVDD1V0-CH0      998 mV
LTC3887-PF-AVDD1V0-CH1      999 mV
LTC3887-ETHSW-VDD1V0        1000 mV
LTC3887-VDD2V5               2499 mV
LTC3887-PCIE-VDD0V9         899 mV
LTC3887-V1P0                 999 mV
LTC3887-PHY-VDD1V0-A        999 mV
LTC3887-3V3                  3300 mV
LTC3887-VDD1V8               1799 mV
UCD9090_0-CH_1-EA0_PLL_     1005 mV
UCD9090_0-CH_2-EA0_1V4      1049 mV
UCD9090_0-CH_3-EA0_2V5      2499 mV
UCD9090_0-CH_4-EA0_1V5      1499 mV
UCD9090_0-CH_5-EA1_PLL_     999 mV
UCD9090_0-CH_6-EA1_1V4      1037 mV
UCD9090_0-CH_7-EA1_2V5      2499 mV
UCD9090_0-CH_8-EA1_1V5      1510 mV
UCD9090_0-CH_9-PVCC         797 mV
UCD9090_0-CH_10-PVNN        991 mV
UCD9090_1-CH_1-EA2_PLL_     1008 mV
UCD9090_1-CH_2-EA2_1V4      1009 mV
UCD9090_1-CH_3-EA2_2V5      2499 mV
UCD9090_1-CH_4-EA2_1V5      1513 mV
UCD9090_1-CH_5-1V0_PFP1     1009 mV
UCD9090_1-CH_6-V1P1         1075 mV
UCD9090_1-CH_7-V1P5         1531 mV
UCD9090_1-CH_8-V1P35        1359 mV
UCD9090_1-CH_9-VDD1V5       1511 mV
UCD9090_1-CH_10-VDD1V2      1210 mV
LTC3887-EA0-VDD0V9-RAIL     949 mV
LTC3887-EA0-VDD0V9-DEV0     949 mV
LTC3887-EA0-VDD0V9-DEV0     951 mV
LTC3887-EA0-VDD0V9-DEV1     949 mV
LTC3887-EA0-VDD0V9-DEV1     951 mV
LTC3887-EA0-VDD0V9R2-RA     947 mV
LTC3887-EA0-VDD0V9R2-CH     947 mV
LTC3887-EA0-VDD0V9R2-CH     949 mV
LTC3887-EA0-VDD1V0-RAIL     999 mV

```

```

LTC3887-EA0-VDD1V0-CH0      999 mV
LTC3887-EA0-VDD1V0-CH1      1001 mV
LTC3887-EA0-XR-VDD0V9        900 mV
LTC3887-EA0-XR-VDD1V2        1199 mV
LTC3887-EA0-HM1-VDD0V9        899 mV
LTC3887-EA0-HM-VDD1V2        1200 mV
LTC3887-EA0-HM-VDDM1V2       1199 mV
LTC3887-EA1-VDD0V9-RAIL      949 mV
LTC3887-EA1-VDD0V9-DEV0      952 mV
LTC3887-EA1-VDD0V9-DEV0      952 mV
LTC3887-EA1-VDD0V9-DEV1      951 mV
LTC3887-EA1-VDD0V9-DEV1      951 mV
LTC3887-EA1-VDD0V9R2-RA      948 mV
LTC3887-EA1-VDD0V9R2-CH      948 mV
LTC3887-EA1-VDD0V9R2-CH      950 mV
LTC3887-EA1-VDD1V0-RAIL      1000 mV
LTC3887-EA1-VDD1V0-CH0       1000 mV
LTC3887-EA1-VDD1V0-CH1       1001 mV
I2C Slave Revision           13
FPC 1 status:
State                         Online
FPC 1 Intake Temp Sensor      27 degrees C / 80 degrees F
FPC 1 Exhaust-A Temp Sensor   60 degrees C / 140 degrees F
FPC 1 Exhaust-B Temp Sensor   46 degrees C / 114 degrees F
FPC 1 EA0 Chip                 63 degrees C / 145 degrees F
FPC 1 EA0-XR0 Chip             67 degrees C / 152 degrees F
FPC 1 EA0-XR1 Chip             68 degrees C / 154 degrees F
FPC 1 EA1 Chip                 70 degrees C / 158 degrees F
FPC 1 EA1-XR0 Chip             75 degrees C / 167 degrees F
FPC 1 EA1-XR1 Chip             75 degrees C / 167 degrees F
FPC 1 PEX Chip                 89 degrees C / 192 degrees F
FPC 1 EA2 Chip                 49 degrees C / 120 degrees F
FPC 1 EA2-XR0 Chip             53 degrees C / 127 degrees F
FPC 1 EA2-XR1 Chip             56 degrees C / 132 degrees F
FPC 1 PF Chip                  71 degrees C / 159 degrees F
FPC 1 EA0_HMC0 Logic die       74 degrees C / 165 degrees F
FPC 1 EA0_HMC0 DRAM botm       71 degrees C / 159 degrees F
FPC 1 EA0_HMC1 Logic die       78 degrees C / 172 degrees F
FPC 1 EA0_HMC1 DRAM botm       75 degrees C / 167 degrees F
FPC 1 EA0_HMC2 Logic die       78 degrees C / 172 degrees F
FPC 1 EA0_HMC2 DRAM botm       75 degrees C / 167 degrees F
FPC 1 EA1_HMC0 Logic die       84 degrees C / 183 degrees F
FPC 1 EA1_HMC0 DRAM botm       81 degrees C / 177 degrees F
FPC 1 EA1_HMC1 Logic die       82 degrees C / 179 degrees F
FPC 1 EA1_HMC1 DRAM botm       79 degrees C / 174 degrees F
FPC 1 EA1_HMC2 Logic die       85 degrees C / 185 degrees F
FPC 1 EA1_HMC2 DRAM botm       82 degrees C / 179 degrees F
FPC 1 EA2_HMC0 Logic die       62 degrees C / 143 degrees F
FPC 1 EA2_HMC0 DRAM botm       59 degrees C / 138 degrees F
FPC 1 EA2_HMC1 Logic die       60 degrees C / 140 degrees F
FPC 1 EA2_HMC1 DRAM botm       57 degrees C / 134 degrees F
FPC 1 EA2_HMC2 Logic die       65 degrees C / 149 degrees F
FPC 1 EA2_HMC2 DRAM botm       62 degrees C / 143 degrees F
Power
LTC3887-PF-VDD0V9-RAIL        899 mV
LTC3887-PF-VDD0V9-DEV0-      899 mV
LTC3887-PF-VDD0V9-DEV0-      901 mV
LTC3887-PF-VDD0V9-DEV1-      899 mV
LTC3887-PF-VDD0V9-DEV1-      901 mV
LTC3887-PF-AVDD1V0-RAIL       998 mV

```



LTC3887-PF-AVDD1V0-CH0	998 mV
LTC3887-PF-AVDD1V0-CH1	999 mV
LTC3887-ETHSW-VDD1V0	999 mV
LTC3887-VDD2V5	2499 mV
LTC3887-PCIE-VDD0V9	900 mV
LTC3887-V1P0	1000 mV
LTC3887-PHY-VDD1V0-A	1000 mV
LTC3887-3V3	3300 mV
LTC3887-VDD1V8	1799 mV
UCD9090_0-CH_1-EA0_PLL_	1004 mV
UCD9090_0-CH_2-EA0_1V4	1004 mV
UCD9090_0-CH_3-EA0_2V5	2499 mV
UCD9090_0-CH_4-EA0_1V5	1511 mV
UCD9090_0-CH_5-EA1_PLL_	999 mV
UCD9090_0-CH_6-EA1_1V4	1008 mV
UCD9090_0-CH_7-EA1_2V5	2499 mV
UCD9090_0-CH_8-EA1_1V5	1510 mV
UCD9090_0-CH_9-PVCC	839 mV
UCD9090_0-CH_10-PVNN	1016 mV
UCD9090_1-CH_1-EA2_PLL_	1011 mV
UCD9090_1-CH_2-EA2_1V4	1046 mV
UCD9090_1-CH_3-EA2_2V5	2499 mV
UCD9090_1-CH_4-EA2_1V5	1501 mV
UCD9090_1-CH_5-1V0_PFP_L	1000 mV
UCD9090_1-CH_6-V1P1	1037 mV
UCD9090_1-CH_7-V1P5	1530 mV
UCD9090_1-CH_8-V1P35	1360 mV
UCD9090_1-CH_9-VDD1V5	1513 mV
UCD9090_1-CH_10-VDD1V2	1217 mV
LTC3887-EA0-VDD0V9-RAIL	949 mV
LTC3887-EA0-VDD0V9-DEV0	949 mV
LTC3887-EA0-VDD0V9-DEV0	951 mV
LTC3887-EA0-VDD0V9-DEV1	949 mV
LTC3887-EA0-VDD0V9-DEV1	952 mV
LTC3887-EA0-VDD0V9R2-RA	947 mV
LTC3887-EA0-VDD0V9R2-CH	947 mV
LTC3887-EA0-VDD0V9R2-CH	949 mV
LTC3887-EA0-VDD1V0-RAIL	1000 mV
LTC3887-EA0-VDD1V0-CH0	1000 mV
LTC3887-EA0-VDD1V0-CH1	1001 mV
LTC3887-EA0-XR-VDD0V9	899 mV
LTC3887-EA0-XR-VDD1V2	1200 mV
LTC3887-EA0-HM1-VDD0V9	899 mV
LTC3887-EA0-HM-VDD1V2	1199 mV
LTC3887-EA0-HM-VDDM1V2	1199 mV
LTC3887-EA1-VDD0V9-RAIL	948 mV
LTC3887-EA1-VDD0V9-DEV0	950 mV
LTC3887-EA1-VDD0V9-DEV0	950 mV
LTC3887-EA1-VDD0V9-DEV1	951 mV
LTC3887-EA1-VDD0V9-DEV1	951 mV
LTC3887-EA1-VDD0V9R2-RA	947 mV
LTC3887-EA1-VDD0V9R2-CH	947 mV
LTC3887-EA1-VDD0V9R2-CH	949 mV
LTC3887-EA1-VDD1V0-RAIL	1000 mV
LTC3887-EA1-VDD1V0-CH0	1000 mV
LTC3887-EA1-VDD1V0-CH1	1002 mV
I2C Slave Revision	99

### show chassis environment fpc (MX204 Router)

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
State                Online
FPC 0 EA0_HMC0 Logic die 77 degrees C / 170 degrees F
FPC 0 EA0_HMC0 DRAM botm 74 degrees C / 165 degrees F
FPC 0 EA0_HMC1 Logic die 80 degrees C / 176 degrees F
FPC 0 EA0_HMC1 DRAM botm 77 degrees C / 170 degrees F
FPC 0 EA0 Chip          93 degrees C / 199 degrees F
FPC 0 EA0-XR0 Chip       63 degrees C / 145 degrees F
FPC 0 EA0-XR1 Chip       64 degrees C / 147 degrees F
Power
I2C Slave Revision      0
```

### show chassis environment fpc (MX10008 Router)

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
State                Online
FPC 0 Intake-A Temp Sensor 32 degrees C / 89 degrees F
FPC 0 Exhaust-A Temp Sensor 44 degrees C / 111 degrees F
FPC 0 Exhaust-B Temp Sensor 50 degrees C / 122 degrees F
FPC 0 EA0 Temp Sensor      67 degrees C / 152 degrees F
FPC 0 EA0_XR0 Temp Sensor   69 degrees C / 156 degrees F
FPC 0 EA0_XR1 Temp Sensor   73 degrees C / 163 degrees F
FPC 0 EA1 Temp Sensor      61 degrees C / 141 degrees F
FPC 0 EA1_XR0 Temp Sensor   65 degrees C / 149 degrees F
FPC 0 EA1_XR1 Temp Sensor   63 degrees C / 145 degrees F
FPC 0 EA2 Temp Sensor      69 degrees C / 156 degrees F
FPC 0 EA2_XR0 Temp Sensor   73 degrees C / 163 degrees F
FPC 0 EA2_XR1 Temp Sensor   72 degrees C / 161 degrees F
FPC 0 EA3 Temp Sensor      64 degrees C / 147 degrees F
FPC 0 EA3_XR0 Temp Sensor   66 degrees C / 150 degrees F
FPC 0 EA3_XR1 Temp Sensor   66 degrees C / 150 degrees F
FPC 0 EA4 Temp Sensor      70 degrees C / 158 degrees F
FPC 0 EA4_XR0 Temp Sensor   72 degrees C / 161 degrees F
FPC 0 EA4_XR1 Temp Sensor   72 degrees C / 161 degrees F
FPC 0 EA5 Temp Sensor      58 degrees C / 136 degrees F
FPC 0 EA5_XR0 Temp Sensor   61 degrees C / 141 degrees F
FPC 0 EA5_XR1 Temp Sensor   64 degrees C / 147 degrees F
FPC 0 EA0_HMC0 Logic die    75 degrees C / 167 degrees F
FPC 0 EA0_HMC0 DRAM botm    72 degrees C / 161 degrees F
FPC 0 EA0_HMC1 Logic die    76 degrees C / 168 degrees F
FPC 0 EA0_HMC1 DRAM botm    73 degrees C / 163 degrees F
FPC 0 EA0_HMC2 Logic die    77 degrees C / 170 degrees F
FPC 0 EA0_HMC2 DRAM botm    74 degrees C / 165 degrees F
FPC 0 EA1_HMC0 Logic die    72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 DRAM botm    69 degrees C / 156 degrees F
FPC 0 EA1_HMC1 Logic die    73 degrees C / 163 degrees F
FPC 0 EA1_HMC1 DRAM botm    70 degrees C / 158 degrees F
FPC 0 EA1_HMC2 Logic die    72 degrees C / 161 degrees F
FPC 0 EA1_HMC2 DRAM botm    69 degrees C / 156 degrees F
FPC 0 EA2_HMC0 Logic die    80 degrees C / 176 degrees F
FPC 0 EA2_HMC0 DRAM botm    77 degrees C / 170 degrees F
FPC 0 EA2_HMC1 Logic die    81 degrees C / 177 degrees F
```

```

FPC 0 EA2_HMC1 DRAM botm      78 degrees C / 172 degrees F
FPC 0 EA2_HMC2 Logic die      80 degrees C / 176 degrees F
FPC 0 EA2_HMC2 DRAM botm      77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 Logic die      77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 DRAM botm      74 degrees C / 165 degrees F
FPC 0 EA3_HMC1 Logic die      78 degrees C / 172 degrees F
FPC 0 EA3_HMC1 DRAM botm      75 degrees C / 167 degrees F
FPC 0 EA3_HMC2 Logic die      77 degrees C / 170 degrees F
FPC 0 EA3_HMC2 DRAM botm      74 degrees C / 165 degrees F
FPC 0 EA4_HMC0 Logic die      80 degrees C / 176 degrees F
FPC 0 EA4_HMC0 DRAM botm      77 degrees C / 170 degrees F
FPC 0 EA4_HMC1 Logic die      81 degrees C / 177 degrees F
FPC 0 EA4_HMC1 DRAM botm      78 degrees C / 172 degrees F
FPC 0 EA4_HMC2 Logic die      80 degrees C / 176 degrees F
FPC 0 EA4_HMC2 DRAM botm      77 degrees C / 170 degrees F
FPC 0 EA5_HMC0 Logic die      69 degrees C / 156 degrees F
FPC 0 EA5_HMC0 DRAM botm      66 degrees C / 150 degrees F
FPC 0 EA5_HMC1 Logic die      68 degrees C / 154 degrees F
FPC 0 EA5_HMC1 DRAM botm      65 degrees C / 149 degrees F
FPC 0 EA5_HMC2 Logic die      68 degrees C / 154 degrees F
FPC 0 EA5_HMC2 DRAM botm      65 degrees C / 149 degrees F
Power
  12V SS 1      12259 mV      9841 mA      120642 mW
  12V SS 2      12259 mV      21054 mA      258104 mW
  12V SS 3      12285 mV      9841 mA      120902 mW
  12V SS 4      12232 mV      20968 mA      256496 mW
  12V SS 5      12179 mV      14993 mA      182614 mW
  VDD 1.0V_A    1000 mV      95375 mA      95375 mW
  VDD 1.0V_B      0 mV      0 mA      0 mW
  VDD 3.3V      3298 mV      12500 mA      41235 mW
  VDD 0.9V      894 mV      3569 mA      3192 mW
  ETH SW 1V      980 mV      4500 mA      4410 mW
  VDD 1.8V      1809 mV      895 mA      1619 mW
  PVCC          951 mV      0 mA      0 mW
  PVNN          1009 mV      0 mA      0 mW
  V1P0          1006 mV      0 mA      0 mW
  V1P1          1070 mV      0 mA      0 mW
  V1P3          1351 mV      0 mA      0 mW
  VDDQ          1500 mV      0 mA      0 mW
  V1P8          1816 mV      0 mA      0 mW
  VDD3V3        3296 mV      0 mA      0 mW
  V5V0_BIAS     5025 mV      0 mA      0 mW
  VDD12V0       12174 mV      0 mA      0 mW
  EA0 Core 0.9V  900 mV      40625 mA      36578 mW
  EA0 AVDD 1.0V  1000 mV      32500 mA      32500 mW
  EA0 HMC Core 0.9V  894 mV      10081 mA      9017 mW
  EA0 1.2V      1189 mV      15081 mA      17945 mW
  EA01_HMC_VDDM 1.2V  1193 mV      -151 mA      -180 mW
  EA0_XR 0.906V  905 mV      13802 mA      12496 mW
  EA1 Core 0.9V  900 mV      41000 mA      36916 mW
  EA1 AVDD 1.0V  1000 mV      28000 mA      28000 mW
  EA1 HMC Core 0.9V  897 mV      9848 mA      8835 mW
  EA1 1.2V      1197 mV      15313 mA      18332 mW
  EA0_PLL_1V0    1003 mV      0 mA      0 mW
  EA0_1V04       1032 mV      0 mA      0 mW
  EA0_2V5        2445 mV      0 mA      0 mW
  EA0_1V5        1512 mV      0 mA      0 mW
  EA1_PLL_1V0    1000 mV      0 mA      0 mW
  EA1_1V04       1051 mV      0 mA      0 mW
  EA1_2V5        2516 mV      0 mA      0 mW

```

EA1_1V5	1503 mV	0 mA	0 mW
EA1_XR 0.906V	908 mV	14151 mA	12850 mW
EA2 Core 0.9V	899 mV	40625 mA	36538 mW
EA2 AVDD 1.0V	1000 mV	27250 mA	27276 mW
EA2 HMC Core 0.9V	897 mV	9616 mA	8627 mW
EA2 1.2V	1193 mV	15779 mA	18832 mW
EA23_HMC_VDDM 1.2V	1197 mV	81 mA	97 mW
EA2_XR 0.906V	908 mV	14848 mA	13484 mW
EA3 Core 0.9V	899 mV	40625 mA	36538 mW
EA3 AVDD 1.0V	1000 mV	28000 mA	28000 mW
EA3 HMC Core 0.9V	897 mV	10546 mA	9461 mW
EA3 1.2V	1197 mV	15895 mA	19028 mW
EA2_PLL_1V0	1025 mV	0 mA	0 mW
EA2_1V04	1048 mV	0 mA	0 mW
EA2_2V5	2516 mV	0 mA	0 mW
EA2_1V5	1500 mV	0 mA	0 mW
EA3_PLL_1V0	1009 mV	0 mA	0 mW
EA3_1V04	1032 mV	0 mA	0 mW
EA3_2V5	2551 mV	0 mA	0 mW
EA3_1V5	1496 mV	0 mA	0 mW
EA3_XR 0.906V	908 mV	15895 mA	14434 mW
EA4 Core 0.9V	900 mV	41000 mA	36916 mW
EA4 AVDD 1.0V	999 mV	31250 mA	31219 mW
EA4 HMC Core 0.9V	894 mV	9965 mA	8913 mW
EA4 1.2V	1197 mV	15779 mA	18889 mW
EA45_HMC_VDDM 1.2V	1197 mV	546 mA	654 mW
EA4_XR 0.906V	908 mV	15197 mA	13801 mW
EA5 Core 0.9V	900 mV	39750 mA	35790 mW
EA5 AVDD 1.0V	1000 mV	28000 mA	28000 mW
EA5 HMC Core 0.9V	897 mV	9965 mA	8940 mW
EA5 1.2V	1197 mV	15546 mA	18610 mW
EA4_PLL_1V0	1003 mV	0 mA	0 mW
EA4_1V04	1041 mV	0 mA	0 mW
EA4_2V5	2541 mV	0 mA	0 mW
EA4_1V5	1506 mV	0 mA	0 mW
EA5_PLL_1V0	1022 mV	0 mA	0 mW
EA5_1V04	1048 mV	0 mA	0 mW
EA5_2V5	2532 mV	0 mA	0 mW
EA5_1V5	1509 mV	0 mA	0 mW
VDD2V5	2503 mV	0 mA	0 mW
VDD1V5	1509 mV	0 mA	0 mW
VDD1V2	1206 mV	0 mA	0 mW
EA5_XR 0.906V	902 mV	14500 mA	13088 mW

## FPC 2 status:

State	Online	
FPC 2 Intake-A Temp Sensor	33 degrees C / 91 degrees F	
FPC 2 Exhaust-A Temp Sensor	52 degrees C / 125 degrees F	
FPC 2 Exhaust-B Temp Sensor	50 degrees C / 122 degrees F	
FPC 2 EA0 Temp Sensor	72 degrees C / 161 degrees F	
FPC 2 EA0_XR0 Temp Sensor	76 degrees C / 168 degrees F	
FPC 2 EA0_XR1 Temp Sensor	79 degrees C / 174 degrees F	
FPC 2 EA1 Temp Sensor	64 degrees C / 147 degrees F	
FPC 2 EA1_XR0 Temp Sensor	68 degrees C / 154 degrees F	
FPC 2 EA1_XR1 Temp Sensor	66 degrees C / 150 degrees F	
FPC 2 EA2 Temp Sensor	75 degrees C / 167 degrees F	
FPC 2 EA2_XR0 Temp Sensor	81 degrees C / 177 degrees F	
FPC 2 EA2_XR1 Temp Sensor	81 degrees C / 177 degrees F	
FPC 2 EA3 Temp Sensor	67 degrees C / 152 degrees F	
FPC 2 EA3_XR0 Temp Sensor	69 degrees C / 156 degrees F	
FPC 2 EA3_XR1 Temp Sensor	69 degrees C / 156 degrees F	

FPC 2 EA4 Temp Sensor	76 degrees C / 168 degrees F
FPC 2 EA4_XR0 Temp Sensor	77 degrees C / 170 degrees F
FPC 2 EA4_XR1 Temp Sensor	76 degrees C / 168 degrees F
FPC 2 EA5 Temp Sensor	60 degrees C / 140 degrees F
FPC 2 EA5_XR0 Temp Sensor	65 degrees C / 149 degrees F
FPC 2 EA5_XR1 Temp Sensor	65 degrees C / 149 degrees F
FPC 2 EA0_HMC0 Logic die	84 degrees C / 183 degrees F
FPC 2 EA0_HMC0 DRAM botm	81 degrees C / 177 degrees F
FPC 2 EA0_HMC1 Logic die	86 degrees C / 186 degrees F
FPC 2 EA0_HMC1 DRAM botm	83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 Logic die	83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 DRAM botm	80 degrees C / 176 degrees F
FPC 2 EA1_HMC0 Logic die	76 degrees C / 168 degrees F
FPC 2 EA1_HMC0 DRAM botm	73 degrees C / 163 degrees F
FPC 2 EA1_HMC1 Logic die	77 degrees C / 170 degrees F
FPC 2 EA1_HMC1 DRAM botm	74 degrees C / 165 degrees F
FPC 2 EA1_HMC2 Logic die	76 degrees C / 168 degrees F
FPC 2 EA1_HMC2 DRAM botm	73 degrees C / 163 degrees F
FPC 2 EA2_HMC0 Logic die	87 degrees C / 188 degrees F
FPC 2 EA2_HMC0 DRAM botm	84 degrees C / 183 degrees F
FPC 2 EA2_HMC1 Logic die	89 degrees C / 192 degrees F
FPC 2 EA2_HMC1 DRAM botm	86 degrees C / 186 degrees F
FPC 2 EA2_HMC2 Logic die	88 degrees C / 190 degrees F
FPC 2 EA2_HMC2 DRAM botm	85 degrees C / 185 degrees F
FPC 2 EA3_HMC0 Logic die	80 degrees C / 176 degrees F
FPC 2 EA3_HMC0 DRAM botm	77 degrees C / 170 degrees F
FPC 2 EA3_HMC1 Logic die	81 degrees C / 177 degrees F
FPC 2 EA3_HMC1 DRAM botm	78 degrees C / 172 degrees F
FPC 2 EA3_HMC2 Logic die	81 degrees C / 177 degrees F
FPC 2 EA3_HMC2 DRAM botm	78 degrees C / 172 degrees F
FPC 2 EA4_HMC0 Logic die	88 degrees C / 190 degrees F
FPC 2 EA4_HMC0 DRAM botm	85 degrees C / 185 degrees F
FPC 2 EA4_HMC1 Logic die	90 degrees C / 194 degrees F
FPC 2 EA4_HMC1 DRAM botm	87 degrees C / 188 degrees F
FPC 2 EA4_HMC2 Logic die	81 degrees C / 177 degrees F
FPC 2 EA4_HMC2 DRAM botm	78 degrees C / 172 degrees F
FPC 2 EA5_HMC0 Logic die	73 degrees C / 163 degrees F
FPC 2 EA5_HMC0 DRAM botm	70 degrees C / 158 degrees F
FPC 2 EA5_HMC1 Logic die	69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 DRAM botm	66 degrees C / 150 degrees F
FPC 2 EA5_HMC2 Logic die	73 degrees C / 163 degrees F
FPC 2 EA5_HMC2 DRAM botm	70 degrees C / 158 degrees F

## Power

12V SS 1	12285 mV	9408 mA	115582 mW
12V SS 2	12338 mV	20881 mA	257637 mW
12V SS 3	12351 mV	10317 mA	127430 mW
12V SS 4	12285 mV	21054 mA	258660 mW
12V SS 5	12153 mV	13954 mA	169591 mW
VDD 1.0V_A	1000 mV	91000 mA	91000 mW
VDD 1.0V_B	0 mV	0 mA	0 mW
VDD 3.3V	3298 mV	9125 mA	30101 mW
VDD 0.9V	897 mV	3337 mA	2993 mW
ETH SW 1V	0 mV	0 mA	0 mW
VDD 1.8V	1809 mV	1127 mA	2040 mW
PVCC	835 mV	0 mA	0 mW
PVNN	1000 mV	0 mA	0 mW
V1P0	1003 mV	0 mA	0 mW
V1P1	1070 mV	0 mA	0 mW
V1P3	1348 mV	0 mA	0 mW
VDDQ	1493 mV	0 mA	0 mW

V1P8	1806 mV	0 mA	0 mW
VDD3V3	3303 mV	0 mA	0 mW
V5V0_BIAS	5000 mV	0 mA	0 mW
VDD12V0	12116 mV	0 mA	0 mW
EA0 Core 0.9V	900 mV	38875 mA	35002 mW
EA0 AVDD 1.0V	999 mV	31875 mA	31843 mW
EA0 HMC Core 0.9V	894 mV	9034 mA	8081 mW
EA0 1.2V	1197 mV	15430 mA	18471 mW
EA01_HMC_VDDM 1.2V	1200 mV	-267 mA	-321 mW
EA0_XR 0.906V	908 mV	15430 mA	14012 mW
EA1 Core 0.9V	900 mV	38875 mA	35002 mW
EA1 AVDD 1.0V	1000 mV	28250 mA	28250 mW
EA1 HMC Core 0.9V	899 mV	8802 mA	7920 mW
EA1 1.2V	1197 mV	15081 mA	18054 mW
EA0_PLL_1V0	1003 mV	0 mA	0 mW
EA0_1V04	1048 mV	0 mA	0 mW
EA0_2V5	2425 mV	0 mA	0 mW
EA0_1V5	1483 mV	0 mA	0 mW
EA1_PLL_1V0	1019 mV	0 mA	0 mW
EA1_1V04	1019 mV	0 mA	0 mW
EA1_2V5	2490 mV	0 mA	0 mW
EA1_1V5	1480 mV	0 mA	0 mW
EA1_XR 0.906V	908 mV	14965 mA	13590 mW
EA2 Core 0.9V	900 mV	44000 mA	39617 mW
EA2 AVDD 1.0V	1000 mV	28625 mA	28625 mW
EA2 HMC Core 0.9V	891 mV	10546 mA	9404 mW
EA2 1.2V	1200 mV	15313 mA	18387 mW
EA23_HMC_VDDM 1.2V	1193 mV	-267 mA	-319 mW
EA2_XR 0.906V	908 mV	15197 mA	13801 mW
EA3 Core 0.9V	900 mV	39750 mA	35790 mW
EA3 AVDD 1.0V	1000 mV	27750 mA	27750 mW
EA3 HMC Core 0.9V	897 mV	9267 mA	8314 mW
EA3 1.2V	1197 mV	15430 mA	18471 mW
EA2_PLL_1V0	1009 mV	0 mA	0 mW
EA2_1V04	1041 mV	0 mA	0 mW
EA2_2V5	2496 mV	0 mA	0 mW
EA2_1V5	1493 mV	0 mA	0 mW
EA3_PLL_1V0	1003 mV	0 mA	0 mW
EA3_1V04	1041 mV	0 mA	0 mW
EA3_2V5	2490 mV	0 mA	0 mW
EA3_1V5	1500 mV	0 mA	0 mW
EA3_XR 0.906V	908 mV	15081 mA	13695 mW
EA4 Core 0.9V	899 mV	45750 mA	41148 mW
EA4 AVDD 1.0V	1000 mV	32250 mA	32250 mW
EA4 HMC Core 0.9V	897 mV	10779 mA	9670 mW
EA4 1.2V	1193 mV	16011 mA	19110 mW
EA45_HMC_VDDM 1.2V	1200 mV	-267 mA	-321 mW
EA4_XR 0.906V	905 mV	15779 mA	14286 mW
EA5 Core 0.9V	900 mV	38375 mA	34552 mW
EA5 AVDD 1.0V	1000 mV	27750 mA	27777 mW
EA5 HMC Core 0.9V	899 mV	8453 mA	7606 mW
EA5 1.2V	1200 mV	14732 mA	17689 mW
EA4_PLL_1V0	1012 mV	0 mA	0 mW
EA4_1V04	1029 mV	0 mA	0 mW
EA4_2V5	2496 mV	0 mA	0 mW
EA4_1V5	1490 mV	0 mA	0 mW
EA5_PLL_1V0	1003 mV	0 mA	0 mW
EA5_1V04	1032 mV	0 mA	0 mW
EA5_2V5	2503 mV	0 mA	0 mW
EA5_1V5	1480 mV	0 mA	0 mW

```

VDD2V5          2461 mV      0 mA      0 mW
VDD1V5          1490 mV      0 mA      0 mW
VDD1V2          1212 mV      0 mA      0 mW
EA5_XR 0.906V   910 mV     13686 mA  12466 mW
FPC 3 status:
State           Online
FPC 3 Intake-A Temp Sensor      30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor     48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor     45 degrees C / 113 degrees F
FPC 3 EA0 Temp Sensor           60 degrees C / 140 degrees F
FPC 3 EA0_XR0 Temp Sensor       65 degrees C / 149 degrees F
FPC 3 EA0_XR1 Temp Sensor       67 degrees C / 152 degrees F
FPC 3 EA1 Temp Sensor           54 degrees C / 129 degrees F
FPC 3 EA1_XR0 Temp Sensor       60 degrees C / 140 degrees F
FPC 3 EA1_XR1 Temp Sensor       58 degrees C / 136 degrees F
FPC 3 EA2 Temp Sensor           62 degrees C / 143 degrees F
FPC 3 EA2_XR0 Temp Sensor       67 degrees C / 152 degrees F
FPC 3 EA2_XR1 Temp Sensor       67 degrees C / 152 degrees F
FPC 3 EA3 Temp Sensor           55 degrees C / 131 degrees F
FPC 3 EA3_XR0 Temp Sensor       57 degrees C / 134 degrees F
FPC 3 EA3_XR1 Temp Sensor       57 degrees C / 134 degrees F
FPC 3 EA4 Temp Sensor           69 degrees C / 156 degrees F
FPC 3 EA4_XR0 Temp Sensor       71 degrees C / 159 degrees F
FPC 3 EA4_XR1 Temp Sensor       70 degrees C / 158 degrees F
FPC 3 EA5 Temp Sensor           55 degrees C / 131 degrees F
FPC 3 EA5_XR0 Temp Sensor       58 degrees C / 136 degrees F
FPC 3 EA5_XR1 Temp Sensor       59 degrees C / 138 degrees F
FPC 3 EA0_HMC0 Logic die        69 degrees C / 156 degrees F
FPC 3 EA0_HMC0 DRAM botm       66 degrees C / 150 degrees F
FPC 3 EA0_HMC1 Logic die        70 degrees C / 158 degrees F
FPC 3 EA0_HMC1 DRAM botm       67 degrees C / 152 degrees F
FPC 3 EA0_HMC2 Logic die        70 degrees C / 158 degrees F
FPC 3 EA0_HMC2 DRAM botm       67 degrees C / 152 degrees F
FPC 3 EA1_HMC0 Logic die        68 degrees C / 154 degrees F
FPC 3 EA1_HMC0 DRAM botm       65 degrees C / 149 degrees F
FPC 3 EA1_HMC1 Logic die        65 degrees C / 149 degrees F
FPC 3 EA1_HMC1 DRAM botm       62 degrees C / 143 degrees F
FPC 3 EA1_HMC2 Logic die        64 degrees C / 147 degrees F
FPC 3 EA1_HMC2 DRAM botm       61 degrees C / 141 degrees F
FPC 3 EA2_HMC0 Logic die        74 degrees C / 165 degrees F
FPC 3 EA2_HMC0 DRAM botm       71 degrees C / 159 degrees F
FPC 3 EA2_HMC1 Logic die        77 degrees C / 170 degrees F
FPC 3 EA2_HMC1 DRAM botm       74 degrees C / 165 degrees F
FPC 3 EA2_HMC2 Logic die        74 degrees C / 165 degrees F
FPC 3 EA2_HMC2 DRAM botm       71 degrees C / 159 degrees F
FPC 3 EA3_HMC0 Logic die        70 degrees C / 158 degrees F
FPC 3 EA3_HMC0 DRAM botm       67 degrees C / 152 degrees F
FPC 3 EA3_HMC1 Logic die        68 degrees C / 154 degrees F
FPC 3 EA3_HMC1 DRAM botm       65 degrees C / 149 degrees F
FPC 3 EA3_HMC2 Logic die        68 degrees C / 154 degrees F
FPC 3 EA3_HMC2 DRAM botm       65 degrees C / 149 degrees F
FPC 3 EA4_HMC0 Logic die        82 degrees C / 179 degrees F
FPC 3 EA4_HMC0 DRAM botm       79 degrees C / 174 degrees F
FPC 3 EA4_HMC1 Logic die        80 degrees C / 176 degrees F
FPC 3 EA4_HMC1 DRAM botm       77 degrees C / 170 degrees F
FPC 3 EA4_HMC2 Logic die        81 degrees C / 177 degrees F
FPC 3 EA4_HMC2 DRAM botm       78 degrees C / 172 degrees F
FPC 3 EA5_HMC0 Logic die        69 degrees C / 156 degrees F
FPC 3 EA5_HMC0 DRAM botm       66 degrees C / 150 degrees F
FPC 3 EA5_HMC1 Logic die        70 degrees C / 158 degrees F

```

FPC 3 EA5_HMC1 DRAM botm	67 degrees C / 152 degrees F
FPC 3 EA5_HMC2 Logic die	69 degrees C / 156 degrees F
FPC 3 EA5_HMC2 DRAM botm	66 degrees C / 150 degrees F
Power	
12V SS 1	12259 mV 9538 mA 116927 mW
12V SS 2	12259 mV 20491 mA 251202 mW
12V SS 3	12298 mV 9711 mA 119433 mW
12V SS 4	12219 mV 20491 mA 250391 mW
12V SS 5	12206 mV 10447 mA 127520 mW
VDD 1.0V_A	1000 mV 42250 mA 42291 mW
VDD 1.0V_B	996 mV 8918 mA 8890 mW
VDD 3.3V	3301 mV 10375 mA 34255 mW
VDD 0.9V	897 mV 3569 mA 3202 mW
ETH SW 1V	983 mV 4267 mA 4195 mW
VDD 1.8V	1812 mV 1825 mA 3309 mW
PVCC	974 mV 0 mA 0 mW
PVNN	1003 mV 0 mA 0 mW
V1P0	1003 mV 0 mA 0 mW
V1P1	1070 mV 0 mA 0 mW
V1P3	1351 mV 0 mA 0 mW
VDDQ	1496 mV 0 mA 0 mW
V1P8	1809 mV 0 mA 0 mW
VDD3V3	3309 mV 0 mA 0 mW
V5V0_BIAS	4987 mV 0 mA 0 mW
VDD12V0	12212 mV 0 mA 0 mW
EA0 Core 0.9V	900 mV 38125 mA 34327 mW
EA0 AVDD 1.0V	999 mV 31125 mA 31094 mW
EA0 HMC Core 0.9V	897 mV 9500 mA 8522 mW
EA0 1.2V	1193 mV 15430 mA 18416 mW
EA01_HMC_VDDM 1.2V	1193 mV 313 mA 374 mW
EA0_XR 0.906V	913 mV 14965 mA 13671 mW
EA1 Core 0.9V	900 mV 39750 mA 35790 mW
EA1 AVDD 1.0V	1000 mV 26000 mA 26000 mW
EA1 HMC Core 0.9V	897 mV 8918 mA 8001 mW
EA1 1.2V	1200 mV 15779 mA 18946 mW
EA0_PLL_1V0	1003 mV 0 mA 0 mW
EA0_1V04	1019 mV 0 mA 0 mW
EA0_2V5	2448 mV 0 mA 0 mW
EA0_1V5	1470 mV 0 mA 0 mW
EA1_PLL_1V0	1016 mV 0 mA 0 mW
EA1_1V04	1035 mV 0 mA 0 mW
EA1_2V5	2506 mV 0 mA 0 mW
EA1_1V5	1483 mV 0 mA 0 mW
EA1_XR 0.906V	908 mV 13918 mA 12639 mW
EA2 Core 0.9V	900 mV 38625 mA 34777 mW
EA2 AVDD 1.0V	1000 mV 26375 mA 26400 mW
EA2 HMC Core 0.9V	897 mV 9383 mA 8418 mW
EA2 1.2V	1200 mV 15779 mA 18946 mW
EA23_HMC_VDDM 1.2V	1193 mV 81 mA 97 mW
EA2_XR 0.906V	908 mV 13918 mA 12639 mW
EA3 Core 0.9V	899 mV 40250 mA 36201 mW
EA3 AVDD 1.0V	1000 mV 26750 mA 26776 mW
EA3 HMC Core 0.9V	894 mV 9267 mA 8289 mW
EA3 1.2V	1197 mV 16127 mA 19306 mW
EA2_PLL_1V0	993 mV 0 mA 0 mW
EA2_1V04	1045 mV 0 mA 0 mW
EA2_2V5	2474 mV 0 mA 0 mW
EA2_1V5	1490 mV 0 mA 0 mW
EA3_PLL_1V0	980 mV 0 mA 0 mW
EA3_1V04	1032 mV 0 mA 0 mW



EA3_2V5	2506 mV	0 mA	0 mW
EA3_1V5	1474 mV	0 mA	0 mW
EA3_XR 0.906V	910 mV	14732 mA	13419 mW
EA4 Core 0.9V	900 mV	42500 mA	38266 mW
EA4 AVDD 1.0V	1000 mV	32250 mA	32281 mW
EA4 HMC Core 0.9V	899 mV	10081 mA	9071 mW
EA4 1.2V	1193 mV	16360 mA	19526 mW
EA45_HMC_VDDM 1.2V	1193 mV	662 mA	791 mW
EA4_XR 0.906V	908 mV	15430 mA	14012 mW
EA5 Core 0.9V	899 mV	37000 mA	33278 mW
EA5 AVDD 1.0V	1000 mV	26125 mA	26150 mW
EA5 HMC Core 0.9V	897 mV	9267 mA	8314 mW
EA5 1.2V	1197 mV	15662 mA	18750 mW
EA4_PLL_1V0	1000 mV	0 mA	0 mW
EA4_1V04	1029 mV	0 mA	0 mW
EA4_2V5	2487 mV	0 mA	0 mW
EA4_1V5	1496 mV	0 mA	0 mW
EA5_PLL_1V0	1009 mV	0 mA	0 mW
EA5_1V04	1032 mV	0 mA	0 mW
EA5_2V5	2503 mV	0 mA	0 mW
EA5_1V5	1496 mV	0 mA	0 mW
VDD2V5	2483 mV	0 mA	0 mW
VDD1V5	1470 mV	0 mA	0 mW
VDD1V2	1203 mV	0 mA	0 mW
EA5_XR 0.906V	908 mV	14500 mA	13167 mW

### show chassis environment fpc (T320, T640, and T1600 Routers)

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
  State                               Online
  Temperature Top                     42 degrees C / 107 degrees F
  Temperature Bottom                  36 degrees C / 96 degrees F
  Temperature MMB1                    39 degrees C / 102 degrees F
  Power:
    1.8 V                             1959 mV
    2.5 V                             2495 mV
    3.3 V                             3344 mV
    5.0 V                             5047 mV
    1.8 V bias                        1787 mV
    3.3 V bias                        3291 mV
    5.0 V bias                        4998 mV
    8.0 V bias                        7343 mV
  BUS Revision                        40
FPC 1 status:
  State                               Online
  Temperature Top                     42 degrees C / 107 degrees F
  Temperature Bottom                  39 degrees C / 102 degrees F
  Temperature MMB1                    40 degrees C / 104 degrees F
  Power:
    1.8 V                             1956 mV
    2.5 V                             2498 mV
    3.3 V                             3340 mV
    5.0 V                             5023 mV
    1.8 V bias                        1782 mV
    3.3 V bias                        3277 mV
    5.0 V bias                        4989 mV
    8.0 V bias                        7289 mV
  BUS Revision                        40
```

```
FPC 2 status:
State                               Online
Temperature Top                     43 degrees C / 109 degrees F
Temperature Bottom                   39 degrees C / 102 degrees F
Temperature MMB1                     41 degrees C / 105 degrees F
Power:
  1.8 V                             1963 mV
  2.5 V                             2503 mV
  3.3 V                             3340 mV
  5.0 V                             5042 mV
  1.8 V bias                         1797 mV
  3.3 V bias                         3311 mV
  5.0 V bias                         5013 mV
  8.0 V bias                         7221 mV
BUS Revision                         40
```

### show chassis environment fpc (T4000 Router)

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
State                               Online
Fan Intake                         34 degrees C / 93 degrees F
Fan Exhaust                         48 degrees C / 118 degrees F
PMB                                47 degrees C / 116 degrees F
LMB0                               50 degrees C / 122 degrees F
LMB1                               41 degrees C / 105 degrees F
LMB2                               35 degrees C / 95 degrees F
PFE1 LU2                           46 degrees C / 114 degrees F
PFE1 LU0                           41 degrees C / 105 degrees F
PFE0 LU0                           57 degrees C / 134 degrees F
XF1                                47 degrees C / 116 degrees F
XF0                                52 degrees C / 125 degrees F
XM1                                41 degrees C / 105 degrees F
XM0                                50 degrees C / 122 degrees F
PFE0 LU1                           56 degrees C / 132 degrees F
PFE0 LU2                           45 degrees C / 113 degrees F
PFE1 LU1                           37 degrees C / 98 degrees F
Power 1
  1.0 V                             991 mV
  1.2 V bias                        1195 mV
  1.8 V                             1788 mV
  2.5 V                             2483 mV
  3.3 V                             3289 mV
  3.3 V bias                        3299 mV
  12.0 V A                          10608 mV
  12.0 V B                          10637 mV
Power 2
  0.9 V                             881 mV
  0.9 V PFE0                        916 mV
  0.9 V PFE1                        903 mV
  1.0 V PFE0                        1012 mV
  1.0 V PFE1                        1002 mV
  1.1 V                             1095 mV
  1.5 V_0                           1494 mV
  1.5 V_1                           1479 mV
Power 3
  1.0 V PFE0                        1000 mV
  1.0 V PFE1                        1002 mV
  1.0 V PFE0 *                      995 mV
```

```

1.0 V PFE1 *          995 mV
1.8 V PFE 0          1788 mV
1.8 V PFE 1          1789 mV
2.5 V                2482 mV
12.0 V              11614 mV
Power 4
1.0 V PFE0 LU0       1003 mV
1.0 V PFE1 LU0       1003 mV
1.0 V PFE1 LU2       1004 mV
1.0 V PFE0 LU0 *     995 mV
1.0 V PFE1 LU0 *     998 mV
1.0 V PFE1 LU2 *     996 mV
12.0 V              11643 mV
12.0 V C            11711 mV
Power (Base/PMB/MMB)
LMB0 VDD2V5         2488 mV
LMB0 VDD1V8         1788 mV
LMB0 VDD1V5         1496 mV
LMB0 PFE0 LU0 AVDD1V0 1002 mV
LMB0 PFE0 LU0 VDD1V0 1000 mV
LMB0 VDD12V0       10752 mV
LMB1 VDD2V5         2472 mV
LMB1 VDD1V8         1792 mV
LMB1 VDD1V5         1480 mV
LMB1 PFE0 LU2 AVDD1V0 994 mV
LMB1 PFE0 LU2 VDD1V0 1002 mV
LMB1 VDD12V0       10800 mV
LMB2 VDD2V5         2472 mV
LMB2 VDD1V8         1792 mV
LMB2 VDD1V5         1486 mV
LMB2 PFE1 LU1 AVDD1V0 996 mV
LMB2 PFE1 LU1 VDD1V0 998 mV
LMB2 VDD12V0       10704 mV
PMB 1.05v           1049 mV
PMB 1.5v            1500 mV
PMB 2.5v            2500 mV
PMB 3.3v            3299 mV
Bus Revision        113
FPC 3 status:
State               Online
Fan Intake          37 degrees C / 98 degrees F
Fan Exhaust         51 degrees C / 123 degrees F
PMB                 43 degrees C / 109 degrees F
LMB0                57 degrees C / 134 degrees F
LMB1                54 degrees C / 129 degrees F
LMB2                38 degrees C / 100 degrees F
PFE1 LU2            63 degrees C / 145 degrees F
PFE1 LU0            45 degrees C / 113 degrees F
PFE0 LU0            69 degrees C / 156 degrees F
XF1                 62 degrees C / 143 degrees F
XF0                 63 degrees C / 145 degrees F
XM1                 43 degrees C / 109 degrees F
XM0                 67 degrees C / 152 degrees F
PFE0 LU1            63 degrees C / 145 degrees F
PFE0 LU2            66 degrees C / 150 degrees F
PFE1 LU1            41 degrees C / 105 degrees F
Power 1
1.0 V               1002 mV
1.2 V bias          1201 mV
1.8 V               1785 mV

```

2.5 V	2485 mV
3.3 V	3288 mV
3.3 V bias	3285 mV
12.0 V A	10412 mV
12.0 V B	10515 mV
Power 2	
0.9 V	882 mV
0.9 V PFE0	920 mV
0.9 V PFE1	905 mV
1.0 V PFE0	1015 mV
1.0 V PFE1	1001 mV
1.1 V	1094 mV
1.5 V_0	1495 mV
1.5 V_1	1478 mV
Power 3	
0.92 V PFE1	998 mV
1.0 V PFE0	997 mV
1.0 V PFE0 *	992 mV
1.0 V PFE1 *	991 mV
1.8 V PFE 0	1780 mV
1.8 V PFE 1	1797 mV
2.5 V	2492 mV
12.0 V	11604 mV
Power 4	
1.0 V PFE0 LU0	1003 mV
1.0 V PFE1 LU0	1004 mV
1.0 V PFE1 LU2	1003 mV
1.0 V PFE0 LU0 *	1000 mV
1.0 V PFE1 LU0 *	1001 mV
1.0 V PFE1 LU2 *	1003 mV
12.0 V	11653 mV
12.0 V C	11672 mV
Power (Base/PMB/MMB)	
LMB0 VDD2V5	2512 mV
LMB0 VDD1V8	1790 mV
LMB0 VDD1V5	1500 mV
LMB0 PFE0 LU0 AVDD1V0	1004 mV
LMB0 PFE0 LU0 VDD1V0	1002 mV
LMB0 VDD12V0	10608 mV
LMB1 VDD2V5	2472 mV
LMB1 VDD1V8	1788 mV
LMB1 VDD1V5	1480 mV
LMB1 PFE0 LU2 AVDD1V0	1000 mV
LMB1 PFE0 LU2 VDD1V0	1004 mV
LMB1 VDD12V0	10672 mV
LMB2 VDD2V5	2488 mV
LMB2 VDD1V8	1798 mV
LMB2 VDD1V5	1494 mV
LMB2 PFE1 LU1 AVDD1V0	1000 mV
LMB2 PFE1 LU1 VDD1V0	1004 mV
LMB2 VDD12V0	10528 mV
PMB 1.05v	1050 mV
PMB 1.5v	1500 mV
PMB 2.5v	2499 mV
PMB 3.3v	3299 mV
Bus Revision	113
FPC 5 status:	
State	Online
Temperature Top	39 degrees C / 102 degrees F
Temperature Bottom	38 degrees C / 100 degrees F

```

Power
  1.8 V                1804 mV
  1.8 V bias           1802 mV
  3.3 V                3294 mV
  3.3 V bias           3277 mV
  5.0 V bias           5008 mV
  5.0 V TOP            5067 mV
  8.0 V bias           6642 mV
Power (Base/PMB/MMB)
  1.2 V                1202 mV
  1.5 V                1504 mV
  5.0 V BOT            5079 mV
  12.0 V TOP Base      11848 mV
  12.0 V BOT Base      11780 mV
  1.1 V PMB            1111 mV
  1.2 V PMB            1189 mV
  1.5 V PMB            1494 mV
  1.8 V PMB            1819 mV
  2.5 V PMB            2503 mV
  3.3 V PMB            3294 mV
  5.0 V PMB            5035 mV
  12.0 V PMB           11788 mV
  0.75 MMB TOP         766 mV
  1.5 V MMB TOP         1484 mV
  1.8 V MMB TOP         1772 mV
  2.5 V MMB TOP         2485 mV
  1.2 V MMB TOP         1137 mV
  5.0 V MMB TOP         4946 mV
  12.0 V MMB TOP        11772 mV
  3.3 V MMB TOP         3289 mV
  0.75 MMB BOT          759 mV
  1.5 V MMB BOT         1482 mV
  1.8 V MMB BOT         1792 mV
  2.5 V MMB BOT         2490 mV
  1.2 V MMB BOT         1145 mV
  5.0 V MMB BOT         4922 mV
  12.0 V MMB BOT        11625 mV
  3.3 V MMB BOT         3282 mV
  APS 00                2495 mV
  APS 01                3308 mV
  APS 02                3301 mV
  5.0 V PIC 0           4967 mV
  APS 10                2512 mV
  APS 11                3316 mV
  APS 12                3304 mV
  5.0 V PIC 1           5081 mV
Bus Revision            49
FPC 6 status:
State                   Online
Fan Intake              34 degrees C / 93 degrees F
Fan Exhaust             49 degrees C / 120 degrees F
PMB                     40 degrees C / 104 degrees F
LMB0                    60 degrees C / 140 degrees F
LMB1                    58 degrees C / 136 degrees F
LMB2                    40 degrees C / 104 degrees F
PFE1 LU2               69 degrees C / 156 degrees F
PFE1 LU0               45 degrees C / 113 degrees F
PFE0 LU0               71 degrees C / 159 degrees F
XF1                     58 degrees C / 136 degrees F
XF0                     65 degrees C / 149 degrees F

```

XM1	40 degrees C / 104 degrees F
XM0	66 degrees C / 150 degrees F
PFE0 LU1	69 degrees C / 156 degrees F
PFE0 LU2	68 degrees C / 154 degrees F
PFE1 LU1	42 degrees C / 107 degrees F
Power 1	
1.0 V	998 mV
1.2 V bias	1191 mV
1.8 V	1781 mV
2.5 V	2487 mV
3.3 V	3302 mV
3.3 V bias	3300 mV
12.0 V A	10388 mV
12.0 V B	10388 mV
Power 2	
0.9 V	902 mV
0.9 V PFE0	921 mV
0.9 V PFE1	907 mV
1.0 V PFE0	996 mV
1.0 V PFE1	974 mV
1.1 V	1095 mV
1.5 V_0	1495 mV
1.5 V_1	1478 mV
Power 3	
1.0 V PFE0	997 mV
1.0 V PFE1	998 mV
1.0 V PFE0 *	993 mV
1.0 V PFE1 *	991 mV
1.8 V PFE 0	1796 mV
1.8 V PFE 1	1789 mV
2.5 V	2465 mV
12.0 V	11609 mV
Power 4	
1.0 V PFE0 LU0	1003 mV
1.0 V PFE1 LU0	1006 mV
1.0 V PFE1 LU2	1002 mV
1.0 V PFE0 LU0 *	1000 mV
1.0 V PFE1 LU0 *	998 mV
1.0 V PFE1 LU2 *	998 mV
12.0 V	11638 mV
12.0 V C	11702 mV
Power (Base/PMB/MMB)	
LMB0 VDD2V5	2484 mV
LMB0 VDD1V8	1780 mV
LMB0 VDD1V5	1496 mV
LMB0 PFE0 LU0 AVDD1V0	998 mV
LMB0 PFE0 LU0 VDD1V0	1004 mV
LMB0 VDD12V0	10528 mV
LMB1 VDD2V5	2472 mV
LMB1 VDD1V8	1776 mV
LMB1 VDD1V5	1474 mV
LMB1 PFE0 LU2 AVDD1V0	994 mV
LMB1 PFE0 LU2 VDD1V0	1004 mV
LMB1 VDD12V0	10544 mV
LMB2 VDD2V5	2476 mV
LMB2 VDD1V8	1790 mV
LMB2 VDD1V5	1492 mV
LMB2 PFE1 LU1 AVDD1V0	996 mV
LMB2 PFE1 LU1 VDD1V0	1010 mV
LMB2 VDD12V0	10528 mV

PMB 1.05v	1050 mV
PMB 1.5v	1499 mV
PMB 2.5v	2500 mV
PMB 3.3v	3300 mV
Bus Revision	80

### show chassis environment fpc lcc (TX Matrix Router)

```
user@host> show chassis environment fpc lcc 0
```

```
lcc0-re0:
```

```
-----
```

```
FPC 1 status:
```

State	Online
Temperature Top	30 degrees C / 86 degrees F
Temperature Bottom	25 degrees C / 77 degrees F
Temperature MMB0	Absent
Temperature MMB1	27 degrees C / 80 degrees F
Power:	
1.8 V	1813 mV
2.5 V	2504 mV
3.3 V	3338 mV
5.0 V	5037 mV
1.8 V bias	1797 mV
3.3 V bias	3301 mV
5.0 V bias	5013 mV
8.0 V bias	7345 mV
BUS Revision	40

```
FPC 2 status:
```

State	Online
Temperature Top	37 degrees C / 98 degrees F
Temperature Bottom	26 degrees C / 78 degrees F
Temperature MMB0	32 degrees C / 89 degrees F
Temperature MMB1	27 degrees C / 80 degrees F
Power:	
1.8 V	1791 mV
2.5 V	2517 mV
3.3 V	3308 mV
5.0 V	5052 mV
1.8 V bias	1797 mV
3.3 V bias	3289 mV
5.0 V bias	4991 mV
8.0 V bias	7477 mV
BUS Revision	40

### show chassis environment fpc lcc (TX Matrix Plus Router)

```
user@host> show chassis environment fpc lcc 0
```

```
lcc0-re0:
```

```
-----
```

```
FPC 1 status:
```

State	Online
Temperature Top	46 degrees C / 114 degrees F
Temperature Bottom	47 degrees C / 116 degrees F
Power	
1.8 V	1788 mV
1.8 V bias	1787 mV
3.3 V	3321 mV

3.3 V bias	3306 mV
5.0 V bias	5018 mV
5.0 V TOP	5037 mV
8.0 V bias	7223 mV
Power (Base/PMB/MMB)	
1.2 V	1205 mV
1.5 V	1503 mV
5.0 V BOT	5084 mV
12.0 V TOP Base	11775 mV
12.0 V BOT Base	11794 mV
1.1 V PMB	1108 mV
1.2 V PMB	1196 mV
1.5 V PMB	1499 mV
1.8 V PMB	1811 mV
2.5 V PMB	2515 mV
3.3 V PMB	3318 mV
5.0 V PMB	5030 mV
12.0 V PMB	11832 mV
0.75 MMB TOP	752 mV
1.5 V MMB TOP	1489 mV
1.8 V MMB TOP	1782 mV
2.5 V MMB TOP	2498 mV
1.2 V MMB TOP	1155 mV
5.0 V MMB TOP	4902 mV
12.0 V MMB TOP	11721 mV
3.3 V MMB TOP	3316 mV
0.75 MMB BOT	754 mV
1.5 V MMB BOT	1482 mV
1.8 V MMB BOT	1758 mV
2.5 V MMB BOT	2488 mV
1.2 V MMB BOT	1157 mV
5.0 V MMB BOT	4962 mV
12.0 V MMB BOT	11691 mV
3.3 V MMB BOT	3308 mV
APS 00	1484 mV
APS 01	2503 mV
APS 02	3313 mV
5.0 V PIC 0	5025 mV
APS 10	1501 mV
APS 11	2466 mV
APS 12	3311 mV
5.0 V PIC 1	5081 mV
Bus Revision	49

### show chassis environment fpc (QFX Series and OCX Series)

```
user@switch> show chassis environment fpc 0
```

```
FPC 0 status:
State          Online
Temperature    42 degrees C / 107 degrees F
```

### show chassis environment fpc interconnect-device (QFabric Systems)

```
user@switch> show chassis environment fpc interconnect-device interconnect1 0
```

```
FC 0 FPC 0 status:
State          Online
Left Intake Temperature 24 degrees C / 75 degrees F
```



```

Right Intake Temperature 24 degrees C / 75 degrees F
Left Exhaust Temperature 27 degrees C / 80 degrees F
Right Exhaust Temperature 27 degrees C / 80 degrees F
Power
  BIAS 3V3                3330 mV
  VDD 3V3                 3300 mV
  VDD 2V5                 2502 mV
  VDD 1V5                 1496 mV
  VDD 1V2                 1194 mV
  VDD 1V0                 1000 mV
  SW0 VDD 1V0             1020 mV
  SW0 CVDD 1V025          1032 mV
  SW1 VDD 1V0             1022 mV
  SW1 CVDD 1V025          1030 mV
  VDD 12V0 DIV3_33        3414 mV

```

### show chassis environment fpc 5(PTX3000 Packet Transport Router)

```
user@host> show chassis environment fpc 5
```

```

FPC 5 status:
State                Online
Intake Temperature   31 degrees C / 87 degrees F
Exhaust Temperature  41 degrees C / 105 degrees F
Power
  FPC 12.0v          12221 mV
  FPC VCC 0.5-1.3v   1640 mV
  FPC VNN 0.5-1.3v   1640 mV
  FPC 1.0v           1640 mV
  FPC 1.1v           1640 mV
  FPC 1.35v          1640 mV
  FPC VDDQ 1.5v      1640 mV
  FPC 1.8v           1640 mV
  FPC 3.3v           3280 mV
  FPC 5.0v bias      5143 mV
  FPC 5.0v usb       5143 mV
  FPC VCC 12.0v      12289 mV
  FPC Vref 3.3v      3280 mV
  MAIN 12.0v-i       2265 mA

```

### show chassis environment fpc 0 (PTX5000 Packet Transport Router)

```
user@host> show chassis environment fpc 0
```

```

FPC 0 status:
State                Online
PMB Temperature      35 degrees C / 95 degrees F
Intake Temperature    33 degrees C / 91 degrees F
Exhaust A Temperature 51 degrees C / 123 degrees F
Exhaust B Temperature 43 degrees C / 109 degrees F
TL0 Temperature       48 degrees C / 118 degrees F
TQ0 Temperature       53 degrees C / 127 degrees F
TL1 Temperature       56 degrees C / 132 degrees F
TQ1 Temperature       58 degrees C / 136 degrees F
TL2 Temperature       55 degrees C / 131 degrees F
TQ2 Temperature       57 degrees C / 134 degrees F
TL3 Temperature       59 degrees C / 138 degrees F
TQ3 Temperature       59 degrees C / 138 degrees F
Power

```

PMB	1.05v	1049 mV
PMB	1.5v	1500 mV
PMB	2.5v	2500 mV
PMB	3.3v	3299 mV
PFE0	1.5v	1500 mV
PFE0	1.0v	999 mV
TQ0	0.9v	900 mV
TL0	0.9v	900 mV
PFE1	1.5v	1499 mV
PFE1	1.0v	999 mV
TQ1	0.9v	899 mV
TL1	0.9v	900 mV
PFE2	1.5v	1500 mV
PFE2	1.0v	1000 mV
TQ2	0.9v	900 mV
TL2	0.9v	900 mV
PFE3	1.5v	1499 mV
PFE3	1.0v	1000 mV
TQ3	0.9v	900 mV
TL3	0.9v	900 mV
Bias	3.3v	3327 mV
FPC	3.3v	3300 mV
FPC	2.5v	2500 mV
SAM	0.9v	900 mV
A	12.0v	2014 mV
B	12.0v	2030 mV

# show chassis environment fpc 07 (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis environment fpc 07
```

FPC 7 status:	
State	Online
PMB TEMPO Temperature	32 degrees C / 89 degrees F
PMB TEMP1 Temperature	28 degrees C / 82 degrees F
PMB CPU Temperature	46 degrees C / 114 degrees F
Intake Temperature	35 degrees C / 95 degrees F
Exhaust A Temperature	55 degrees C / 131 degrees F
Exhaust B Temperature	54 degrees C / 129 degrees F
TL5 Temperature	59 degrees C / 138 degrees F
TQ5 Temperature	57 degrees C / 134 degrees F
TL6 Temperature	57 degrees C / 134 degrees F
TQ6 Temperature	51 degrees C / 123 degrees F
TL1 Temperature	76 degrees C / 168 degrees F
TQ1 Temperature	58 degrees C / 136 degrees F
TL2 Temperature	75 degrees C / 167 degrees F
TQ2 Temperature	57 degrees C / 134 degrees F
TL4 Temperature	52 degrees C / 125 degrees F
TQ4 Temperature	66 degrees C / 150 degrees F
TL7 Temperature	52 degrees C / 125 degrees F
TQ7 Temperature	60 degrees C / 140 degrees F
TL0 Temperature	72 degrees C / 161 degrees F
TQ0 Temperature	73 degrees C / 163 degrees F
TL3 Temperature	64 degrees C / 147 degrees F
TQ3 Temperature	70 degrees C / 158 degrees F
Power	
PMB 1.05v	1049 mV
PMB 3.3v	3299 mV
PMB 1.1v-a	1100 mV
PMB 1.5v	1499 mV

```

PMB 1.1v-b 1100 mV
Base 3.3v 3300 mV
FPC Base 2.5v 2499 mV
TL1 0.9v 897 mV
TQ1 0.9v 897 mV
PFE1 1.0v 999 mV
PFE1 1.5v 1499 mV
TL2 0.9v 897 mV
TQ2 0.9v 897 mV
PFE2 1.0v 999 mV
PFE2 1.5v 1499 mV
FPC Base 1.0v 1000 mV
FPC Base 1.2v 1199 mV
TL5 0.9v 898 mV
TQ5 0.9v 898 mV
PFE5 1.0v 1000 mV
PFE5 1.5v 1500 mV
TL6 0.9v 897 mV
TQ6 0.9v 897 mV
PFE6 1.0v 1000 mV
PFE6 1.5v 1499 mV
Mezz Base 2.5v 2500 mV
TL0 0.9v 896 mV
TQ0 0.9v 896 mV
PFE0 1.0v 999 mV
PFE0 1.5v 1499 mV

```

### show chassis environment fpc (PTX10008 router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State Online
FPC 0 Intake-A Temp Sensor 37 degrees C / 98 degrees F
FPC 0 Intake-B Temp Sensor 34 degrees C / 93 degrees F
FPC 0 Exhaust-A Temp Sensor 37 degrees C / 98 degrees F
FPC 0 Exhaust-B Temp Sensor 38 degrees C / 100 degrees F
FPC 0 Exhaust-C Temp Sensor 40 degrees C / 104 degrees F
FPC 0 PE0 Temp Sensor 41 degrees C / 105 degrees F
FPC 0 PE1 Temp Sensor 42 degrees C / 107 degrees F
FPC 0 PE2 Temp Sensor 44 degrees C / 111 degrees F
FPC 0 LCPU Temp Sensor 40 degrees C / 104 degrees F
Power
PE0 Core 0.9V 872 mV 28777 mA 25146 mW
PE0 HMC0 Core 0.9V 899 mV 10359 mA 9328 mW
PE1 Core 0.9V 896 mV 29476 mA 26414 mW
PE1 HMC0 Core 0.9V 899 mV 10218 mA 9187 mW
PE2 Core 0.9V 872 mV 28839 mA 25199 mW
PE2 HMC0 Core 0.9V 900 mV 10296 mA 9265 mW
PE0 Serdes 1.0V 1020 mV 29000 mA 29593 mW
PE1 Serdes 1.0V 1019 mV 29109 mA 29718 mW
PE2 Serdes 1.0V 1019 mV 28484 mA 29078 mW
LCPU Platform 1.1V 1099 mV 3515 mA 3867 mW
LCPU Core 1.0V 1000 mV 8750 mA 8703 mW
PHY VDD B 1.0V 1000 mV 17062 mA 17031 mW
PHY VDD A 1.0V 999 mV 15640 mA 15625 mW
BCM Core 1.0V 999 mV 7054 mA 7054 mW
BCM PEX 1.0V 999 mV 3562 mA 3558 mW
HMC Core 1.2V 1199 mV 1280 mA 1513 mW
HMC Serdes 1.2V 1199 mV 32937 mA 39500 mW

```

VDD 1.5V	1500 mV	2824 mA	4234 mW
VDD 2.5V	2449 mV	3812 mA	9343 mW
VDD 3.3V	3299 mV	5085 mA	16796 mW
12V	12259 mV	29609 mA	368196 mW
FPC 1 status:			
State	Online		
FPC 1 Intake-A Temp Sensor	37 degrees C / 98 degrees F		
FPC 1 Intake-B Temp Sensor	34 degrees C / 93 degrees F		
FPC 1 Exhaust-A Temp Sensor	38 degrees C / 100 degrees F		
FPC 1 Exhaust-B Temp Sensor	38 degrees C / 100 degrees F		
FPC 1 Exhaust-C Temp Sensor	40 degrees C / 104 degrees F		
FPC 1 PE0 Temp Sensor	41 degrees C / 105 degrees F		
FPC 1 PE1 Temp Sensor	42 degrees C / 107 degrees F		
FPC 1 PE2 Temp Sensor	44 degrees C / 111 degrees F		
FPC 1 LCPU Temp Sensor	39 degrees C / 102 degrees F		
Power			
PE0 Core 0.9V	898 mV	29351 mA	26421 mW
PE0 HMC0 Core 0.9V	899 mV	9734 mA	8750 mW
PE1 Core 0.9V	873 mV	28539 mA	24933 mW
PE1 HMC0 Core 0.9V	899 mV	9937 mA	8937 mW
PE2 Core 0.9V	875 mV	28906 mA	25316 mW
PE2 HMC0 Core 0.9V	899 mV	10140 mA	9125 mW
PE0 Serdes 1.0V	1019 mV	28312 mA	28890 mW
PE1 Serdes 1.0V	1020 mV	28656 mA	29234 mW
PE2 Serdes 1.0V	1020 mV	29437 mA	30015 mW
LCPU Platform 1.1V	1100 mV	4617 mA	5078 mW
LCPU Core 1.0V	1000 mV	8781 mA	8781 mW
PHY VDD B 1.0V	1000 mV	15953 mA	15984 mW
PHY VDD A 1.0V	1000 mV	15484 mA	15484 mW
BCM Core 1.0V	999 mV	7945 mA	7937 mW
BCM PEX 1.0V	999 mV	3515 mA	3515 mW
HMC Core 1.2V	1199 mV	1269 mA	1521 mW
HMC Serdes 1.2V	1199 mV	33000 mA	39593 mW
VDD 1.5V	1500 mV	2691 mA	4062 mW
VDD 2.5V	2449 mV	3582 mA	8781 mW
VDD 3.3V	3300 mV	2563 mA	8458 mW
12V	12311 mV	29002 mA	357577 mW
FPC 2 status:			
State	Online		
FPC 2 Intake-A Temp Sensor	43 degrees C / 109 degrees F		
FPC 2 Intake-B Temp Sensor	30 degrees C / 86 degrees F		
FPC 2 Exhaust-A Temp Sensor	50 degrees C / 122 degrees F		
FPC 2 Exhaust-B Temp Sensor	52 degrees C / 125 degrees F		
FPC 2 Exhaust-C Temp Sensor	51 degrees C / 123 degrees F		
FPC 2 PE0 Temp Sensor	48 degrees C / 118 degrees F		
FPC 2 PE1 Temp Sensor	56 degrees C / 132 degrees F		
FPC 2 PE2 Temp Sensor	48 degrees C / 118 degrees F		
FPC 2 PE3 Temp Sensor	57 degrees C / 134 degrees F		
FPC 2 PE4 Temp Sensor	48 degrees C / 118 degrees F		
FPC 2 PE5 Temp Sensor	60 degrees C / 140 degrees F		
FPC 2 LCPU Temp Sensor	47 degrees C / 116 degrees F		
Power			
PE0 Core 0.9V	874 mV	28117 mA	24617 mW
PE1 Core 0.9V	899 mV	29601 mA	26632 mW
PE0 Serdes 1.0V	1019 mV	41031 mA	41843 mW
PE1 Serdes 1.0V	1019 mV	35656 mA	36343 mW
PE0 HMC Core 0.9V	899 mV	8125 mA	7312 mW
PE0,1 HMC Memory 1.2V	1199 mV	565 mA	688 mW
PE1 HMC Core 0.9V	899 mV	7921 mA	7125 mW
PE0,1 HMC Serdes 1.2V	1199 mV	21281 mA	25562 mW

PE2 Core 0.9V	899 mV	29187 mA	26242 mW
PE3 Core 0.9V	899 mV	29976 mA	27074 mW
PE2 Serdes 1.0V	1019 mV	38562 mA	39343 mW
PE3 Serdes 1.0V	1019 mV	34937 mA	35656 mW
PE2 HMC Core 0.9V	899 mV	8093 mA	7281 mW
PE2,3 HMC Memory 1.2V	1199 mV	610 mA	732 mW
PE3 HMC Core 0.9V	899 mV	7710 mA	6937 mW
PE2,3 HMC Serdes 1.2V	1199 mV	21500 mA	25812 mW
VDD 3.3V	3300 mV	7937 mA	26187 mW
VDD 1.5V	1499 mV	3234 mA	4851 mW
VDD 2.5V	2449 mV	4539 mA	11109 mW
PE4 Core 0.9V	874 mV	29914 mA	26183 mW
PE5 Core 0.9V	874 mV	29820 mA	26031 mW
PE4 Serdes 1.0V	1020 mV	43968 mA	44843 mW
PE5 Serdes 1.0V	1019 mV	27453 mA	28031 mW
PE4 HMC Core 0.9V	900 mV	7937 mA	7140 mW
PE4,5 HMC Memory 1.2V	1200 mV	1185 mA	1421 mW
PE5 HMC Core 0.9V	899 mV	8718 mA	7843 mW
PE4,5 HMC Serdes 1.2V	1199 mV	21125 mA	25343 mW
LCPU platform 1.1V	1099 mV	3777 mA	4156 mW
LCPU core 1.0V	1000 mV	9062 mA	9062 mW
BCM core 1.0V	1000 mV	9328 mA	9328 mW
BCM & PEX Serdes 1.0V	999 mV	4125 mA	4125 mW
12V	12311 mV	53347 mA	660345 mW

FPC 3 status:

State	Online
FPC 3 Intake-A Temp Sensor	43 degrees C / 109 degrees F
FPC 3 Intake-B Temp Sensor	30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor	48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor	49 degrees C / 120 degrees F
FPC 3 Exhaust-C Temp Sensor	47 degrees C / 116 degrees F
FPC 3 PE0 Temp Sensor	48 degrees C / 118 degrees F
FPC 3 PE1 Temp Sensor	55 degrees C / 131 degrees F
FPC 3 PE2 Temp Sensor	47 degrees C / 116 degrees F
FPC 3 PE3 Temp Sensor	54 degrees C / 129 degrees F
FPC 3 PE4 Temp Sensor	48 degrees C / 118 degrees F
FPC 3 PE5 Temp Sensor	58 degrees C / 136 degrees F
FPC 3 LCPU Temp Sensor	46 degrees C / 114 degrees F

Power

PE0 Core 0.9V	899 mV	29695 mA	26718 mW
PE1 Core 0.9V	899 mV	29695 mA	26710 mW
PE0 Serdes 1.0V	1020 mV	40156 mA	40906 mW
PE1 Serdes 1.0V	1020 mV	35281 mA	35968 mW
PE0 HMC Core 0.9V	900 mV	7492 mA	6742 mW
PE0,1 HMC Memory 1.2V	1199 mV	569 mA	683 mW
PE1 HMC Core 0.9V	899 mV	7570 mA	6812 mW
PE0,1 HMC Serdes 1.2V	1199 mV	20562 mA	24656 mW
PE2 Core 0.9V	899 mV	29734 mA	26765 mW
PE3 Core 0.9V	900 mV	29960 mA	26968 mW
PE2 Serdes 1.0V	1019 mV	37718 mA	38500 mW
PE3 Serdes 1.0V	1020 mV	35250 mA	35937 mW
PE2 HMC Core 0.9V	899 mV	7750 mA	6976 mW
PE2,3 HMC Memory 1.2V	1200 mV	546 mA	656 mW
PE3 HMC Core 0.9V	899 mV	7718 mA	6945 mW
PE2,3 HMC Serdes 1.2V	1199 mV	20625 mA	24750 mW
VDD 3.3V	3299 mV	5917 mA	19515 mW
VDD 1.5V	1499 mV	4015 mA	6015 mW
VDD 2.5V	2449 mV	4335 mA	10625 mW
PE4 Core 0.9V	899 mV	29835 mA	26875 mW
PE5 Core 0.9V	924 mV	30554 mA	28277 mW

PE4 Serdes 1.0V	1019 mV	43281 mA	44187 mW
PE5 Serdes 1.0V	1020 mV	27140 mA	27703 mW
PE4 HMC Core 0.9V	899 mV	7476 mA	6726 mW
PE4,5 HMC Memory 1.2V	1199 mV	531 mA	637 mW
PE5 HMC Core 0.9V	899 mV	7539 mA	6781 mW
PE4,5 HMC Serdes 1.2V	1199 mV	20375 mA	24468 mW
LCPU platform 1.1V	1099 mV	3453 mA	3796 mW
LCPU core 1.0V	999 mV	8984 mA	8984 mW
BCM core 1.0V	999 mV	7929 mA	7921 mW
BCM & PEX Serdes 1.0V	1000 mV	4046 mA	4046 mW
12V	12351 mV	51918 mA	644880 mW

#### FPC 5 status:

```

State                               Online
FPC 5 Intake-A Temp Sensor Failed
FPC 5 Intake-B Temp Sensor Failed
FPC 5 Exhaust-A Temp Sensor41 degrees C / 105 degrees F
FPC 5 Exhaust-B Temp Sensor41 degrees C / 105 degrees F
FPC 5 Exhaust-C Temp Sensor42 degrees C / 107 degrees F
FPC 5 PE0 Temp Sensor      47 degrees C / 116 degrees F
FPC 5 PE1 Temp Sensor      49 degrees C / 120 degrees F
FPC 5 PE2 Temp Sensor      53 degrees C / 127 degrees F
FPC 5 LCPU Temp Sensor     Failed

```

#### Power

PE0 Core 0.9V	923 mV	30976 mA	28578 mW
PE0 HMC0 Core 0.9V	899 mV	10093 mA	9078 mW
PE1 Core 0.9V	897 mV	29398 mA	26414 mW
PE1 HMC0 Core 0.9V	899 mV	9734 mA	8750 mW
PE2 Core 0.9V	922 mV	30226 mA	27886 mW
PE2 HMC0 Core 0.9V	899 mV	9984 mA	8968 mW
PE0 Serdes 1.0V	1019 mV	29296 mA	29890 mW
PE1 Serdes 1.0V	1020 mV	28687 mA	29296 mW
PE2 Serdes 1.0V	1020 mV	28187 mA	28765 mW
LCPU Platform 1.1V	1100 mV	3664 mA	4031 mW
LCPU Core 1.0V	999 mV	9125 mA	9125 mW
PHY VDD B 1.0V	999 mV	15593 mA	15593 mW
PHY VDD A 1.0V	1000 mV	15453 mA	15453 mW
BCM Core 1.0V	999 mV	7773 mA	7765 mW
BCM PEX 1.0V	1000 mV	3460 mA	3464 mW
HMC Core 1.2V	1199 mV	1328 mA	1628 mW
HMC Serdes 1.2V	1199 mV	32203 mA	38625 mW
VDD 1.5V	1499 mV	2675 mA	4007 mW
VDD 2.5V	2450 mV	3675 mA	9000 mW
VDD 3.3V	3300 mV	1814 mA	5980 mW
12V	12272 mV	29045 mA	361369 mW

#### FPC 6 status:

```

State                               Online
FPC 6 Intake-A Temp Sensor 41 degrees C / 105 degrees F
FPC 6 Intake-B Temp Sensor 37 degrees C / 98 degrees F
FPC 6 Exhaust-A Temp Sensor40 degrees C / 104 degrees F
FPC 6 Exhaust-B Temp Sensor40 degrees C / 104 degrees F
FPC 6 Exhaust-C Temp Sensor40 degrees C / 104 degrees F
FPC 6 PE0 Temp Sensor      45 degrees C / 113 degrees F
FPC 6 PE1 Temp Sensor      47 degrees C / 116 degrees F
FPC 6 PE2 Temp Sensor      51 degrees C / 123 degrees F
FPC 6 LCPU Temp Sensor     41 degrees C / 105 degrees F

```

#### Power

PE0 Core 0.9V	897 mV	30214 mA	27179 mW
PE0 HMC0 Core 0.9V	899 mV	10000 mA	8984 mW
PE1 Core 0.9V	873 mV	29332 mA	25601 mW
PE1 HMC0 Core 0.9V	899 mV	9828 mA	8828 mW

PE2 Core 0.9V	898 mV	30781 mA	27675 mW
PE2 HMC0 Core 0.9V	899 mV	10328 mA	9296 mW
PE0 Serdes 1.0V	1019 mV	28921 mA	29531 mW
PE1 Serdes 1.0V	1020 mV	29437 mA	30046 mW
PE2 Serdes 1.0V	1019 mV	29671 mA	30281 mW
LCPU Platform 1.1V	1100 mV	3671 mA	4039 mW
LCPU Core 1.0V	1000 mV	8218 mA	8187 mW
PHY VDD B 1.0V	1000 mV	15984 mA	15984 mW
PHY VDD A 1.0V	999 mV	16093 mA	16093 mW
BCM Core 1.0V	1000 mV	8046 mA	8062 mW
BCM PEX 1.0V	1000 mV	3500 mA	3500 mW
HMC Core 1.2V	1199 mV	1327 mA	1579 mW
HMC Serdes 1.2V	1199 mV	33031 mA	39593 mW
VDD 1.5V	1499 mV	2722 mA	4078 mW
VDD 2.5V	2449 mV	3539 mA	8671 mW
VDD 3.3V	3299 mV	8082 mA	26656 mW
12V	12311 mV	31124 mA	385270 mW

### show chassis environment fpc (PTX10016 router)

```
user@host> show chassis environment fpc
```

FPC 1 status:

```
State Online
FPC 1 Intake-A Temp Sensor 36 degrees C / 96 degrees F
FPC 1 Intake-B Temp Sensor 32 degrees C / 89 degrees F
FPC 1 Exhaust-A Temp Sensor 37 degrees C / 98 degrees F
FPC 1 Exhaust-B Temp Sensor 36 degrees C / 96 degrees F
FPC 1 Exhaust-C Temp Sensor 36 degrees C / 96 degrees F
FPC 1 PE0 Temp Sensor 45 degrees C / 113 degrees F
FPC 1 PE1 Temp Sensor 46 degrees C / 114 degrees F
FPC 1 PE2 Temp Sensor 53 degrees C / 127 degrees F
FPC 1 LCPU Temp Sensor 35 degrees C / 95 degrees F
```

Power

PE0 Core 0.9V	897 mV	28992 mA	26027 mW
PE0 HMC0 Core 0.9V	899 mV	10156 mA	9156 mW
PE1 Core 0.9V	871 mV	28800 mA	25164 mW
PE1 HMC0 Core 0.9V	899 mV	10125 mA	9109 mW
PE2 Core 0.9V	898 mV	29914 mA	26906 mW
PE2 HMC0 Core 0.9V	899 mV	10343 mA	9296 mW
PE0 Serdes 1.0V	1019 mV	27515 mA	28093 mW
PE1 Serdes 1.0V	1020 mV	27968 mA	28546 mW
PE2 Serdes 1.0V	1019 mV	27796 mA	28359 mW
LCPU Platform 1.1V	1100 mV	3347 mA	3289 mW
LCPU Core 1.0V	1000 mV	7960 mA	7960 mW
PHY VDD B 1.0V	1000 mV	16437 mA	16437 mW
PHY VDD A 1.0V	999 mV	15656 mA	15656 mW
BCM Core 1.0V	1000 mV	7289 mA	7335 mW
BCM PEX 1.0V	999 mV	3453 mA	3453 mW
HMC Core 1.2V	1199 mV	1218 mA	1453 mW
HMC Serdes 1.2V	1199 mV	32093 mA	38562 mW
VDD 1.5V	1500 mV	2859 mA	4289 mW
VDD 2.5V	2449 mV	3875 mA	9500 mW
VDD 3.3V	3299 mV	2806 mA	9257 mW
12V	12351 mV	28569 mA	354877 mW

FPC 3 status:

```
State Online
FPC 3 Intake-A Temp Sensor 35 degrees C / 95 degrees F
FPC 3 Intake-B Temp Sensor 31 degrees C / 87 degrees F
FPC 3 Exhaust-A Temp Sensor 36 degrees C / 96 degrees F
```

```

FPC 3 Exhaust-B Temp Sensor34 degrees C / 93 degrees F
FPC 3 Exhaust-C Temp Sensor33 degrees C / 91 degrees F
FPC 3 PE0 Temp Sensor      43 degrees C / 109 degrees F
FPC 3 PE1 Temp Sensor      45 degrees C / 113 degrees F
FPC 3 PE2 Temp Sensor      49 degrees C / 120 degrees F
FPC 3 LCPU Temp Sensor     35 degrees C / 95 degrees F

```

## Power

PE0 Core 0.9V	897 mV	28832 mA	25871 mW
PE0 HMC0 Core 0.9V	899 mV	10359 mA	9328 mW
PE1 Core 0.9V	873 mV	28230 mA	24671 mW
PE1 HMC0 Core 0.9V	899 mV	10468 mA	9421 mW
PE2 Core 0.9V	898 mV	29539 mA	26539 mW
PE2 HMC0 Core 0.9V	899 mV	10656 mA	9593 mW
PE0 Serdes 1.0V	1020 mV	27484 mA	28031 mW
PE1 Serdes 1.0V	1019 mV	27515 mA	28078 mW
PE2 Serdes 1.0V	1020 mV	27625 mA	28187 mW
LCPU Platform 1.1V	1099 mV	3050 mA	3355 mW
LCPU Core 1.0V	999 mV	7820 mA	7804 mW
PHY VDD B 1.0V	999 mV	15406 mA	15406 mW
PHY VDD A 1.0V	1000 mV	14953 mA	14953 mW
BCM Core 1.0V	1000 mV	7648 mA	7648 mW
BCM PEX 1.0V	1000 mV	3531 mA	3531 mW
HMC Core 1.2V	1200 mV	1234 mA	1476 mW
HMC Serdes 1.2V	1199 mV	34671 mA	41593 mW
VDD 1.5V	1499 mV	3484 mA	5226 mW
VDD 2.5V	2449 mV	3218 mA	7890 mW
VDD 3.3V	3299 mV	2468 mA	8148 mW
12V	12311 mV	28785 mA	355950 mW

## FPC 6 status:

```

State                               Online

```

```

FPC 6 Intake-A Temp Sensor 34 degrees C / 93 degrees F
FPC 6 Intake-B Temp Sensor 31 degrees C / 87 degrees F
FPC 6 Exhaust-A Temp Sensor34 degrees C / 93 degrees F
FPC 6 Exhaust-B Temp Sensor35 degrees C / 95 degrees F
FPC 6 Exhaust-C Temp Sensor35 degrees C / 95 degrees F
FPC 6 PE0 Temp Sensor      42 degrees C / 107 degrees F
FPC 6 PE1 Temp Sensor      43 degrees C / 109 degrees F
FPC 6 PE2 Temp Sensor      47 degrees C / 116 degrees F
FPC 6 LCPU Temp Sensor     34 degrees C / 93 degrees F

```

## Power

PE0 Core 0.9V	922 mV	29394 mA	27160 mW
PE0 HMC0 Core 0.9V	899 mV	10078 mA	9062 mW
PE1 Core 0.9V	923 mV	29636 mA	27304 mW
PE1 HMC0 Core 0.9V	899 mV	9890 mA	8890 mW
PE2 Core 0.9V	898 mV	29734 mA	26757 mW
PE2 HMC0 Core 0.9V	899 mV	9968 mA	8968 mW
PE0 Serdes 1.0V	1020 mV	26968 mA	27515 mW
PE1 Serdes 1.0V	1019 mV	27421 mA	27984 mW
PE2 Serdes 1.0V	1019 mV	27625 mA	28171 mW
LCPU Platform 1.1V	1099 mV	3230 mA	4742 mW
LCPU Core 1.0V	999 mV	8171 mA	8171 mW
PHY VDD B 1.0V	1000 mV	15671 mA	15687 mW
PHY VDD A 1.0V	999 mV	15703 mA	15703 mW
BCM Core 1.0V	999 mV	7500 mA	7492 mW
BCM PEX 1.0V	1000 mV	3480 mA	3468 mW
HMC Core 1.2V	1199 mV	1199 mA	1440 mW
HMC Serdes 1.2V	1199 mV	31046 mA	37250 mW
VDD 1.5V	1499 mV	2804 mA	4203 mW
VDD 2.5V	2449 mV	3746 mA	9171 mW
VDD 3.3V	3300 mV	3173 mA	10476 mW



```

12V                                12311 mV   28786 mA   355654 mW
FPC 8 status:
State                               Online
FPC 8 Intake-A Temp Sensor 34 degrees C / 93 degrees F
FPC 8 Intake-B Temp Sensor 30 degrees C / 86 degrees F
FPC 8 Exhaust-A Temp Sensor37 degrees C / 98 degrees F
FPC 8 Exhaust-B Temp Sensor37 degrees C / 98 degrees F
FPC 8 Exhaust-C Temp Sensor37 degrees C / 98 degrees F
FPC 8 PE0 Temp Sensor       42 degrees C / 107 degrees F
FPC 8 PE1 Temp Sensor       44 degrees C / 111 degrees F
FPC 8 PE2 Temp Sensor       47 degrees C / 116 degrees F
FPC 8 LCPU Temp Sensor      33 degrees C / 91 degrees F
Power
PE0 Core 0.9V                897 mV    29382 mA   26437 mW
PE0 HMC0 Core 0.9V           899 mV    10265 mA    9250 mW
PE1 Core 0.9V                872 mV    28867 mA   25175 mW
PE1 HMC0 Core 0.9V           899 mV    10171 mA    9109 mW
PE2 Core 0.9V                899 mV    30210 mA   27214 mW
PE2 HMC0 Core 0.9V           900 mV    10187 mA    9171 mW
PE0 Serdes 1.0V              1020 mV    27843 mA   28421 mW
PE1 Serdes 1.0V              1020 mV    28265 mA   28828 mW
PE2 Serdes 1.0V              1019 mV    28406 mA   29000 mW
LCPU Platform 1.1V           1099 mV     3000 mA    3300 mW
LCPU Core 1.0V               1000 mV     7937 mA    7937 mW
PHY VDD B 1.0V               1000 mV    15843 mA   15843 mW
PHY VDD A 1.0V               1000 mV    15250 mA   15250 mW
BCM Core 1.0V                999 mV     6914 mA    6898 mW
BCM PEX 1.0V                 999 mV     3445 mA    3445 mW
HMC Core 1.2V                1199 mV     1162 mA    1390 mW
HMC Serdes 1.2V              1199 mV    33437 mA   40125 mW
VDD 1.5V                     1499 mV     2851 mA    4273 mW
VDD 2.5V                     2450 mV     3867 mA    9484 mW
VDD 3.3V                     3300 mV     3258 mA   10753 mW
12V                           12338 mV    28656 mA   356171 mW
FPC 9 status:
State                               Online
FPC 9 Intake-A Temp Sensor 44 degrees C / 111 degrees F
FPC 9 Intake-B Temp Sensor 28 degrees C / 82 degrees F
FPC 9 Exhaust-A Temp Sensor51 degrees C / 123 degrees F
FPC 9 Exhaust-B Temp Sensor52 degrees C / 125 degrees F
FPC 9 Exhaust-C Temp Sensor48 degrees C / 118 degrees F
FPC 9 PE0 Temp Sensor        52 degrees C / 125 degrees F
FPC 9 PE1 Temp Sensor        65 degrees C / 149 degrees F
FPC 9 PE2 Temp Sensor        50 degrees C / 122 degrees F
FPC 9 PE3 Temp Sensor        65 degrees C / 149 degrees F
FPC 9 PE4 Temp Sensor        50 degrees C / 122 degrees F
FPC 9 PE5 Temp Sensor        67 degrees C / 152 degrees F
FPC 9 LCPU Temp Sensor       45 degrees C / 113 degrees F
Power
PE0 Core 0.9V                875 mV    28316 mA   24808 mW
PE1 Core 0.9V                875 mV    28546 mA   24996 mW
PE0 Serdes 1.0V              1019 mV    38906 mA   39687 mW
PE1 Serdes 1.0V              1020 mV    33078 mA   33781 mW
PE0 HMC Core 0.9V            899 mV     7718 mA    6945 mW
PE0,1 HMC Memory 1.2V       1199 mV      579 mA     695 mW
PE1 HMC Core 0.9V            899 mV     7289 mA    6570 mW
PE0,1 HMC Serdes 1.2V       1199 mV    20187 mA   24250 mW
PE2 Core 0.9V                924 mV    29062 mA   26894 mW
PE3 Core 0.9V                900 mV    28914 mA   26039 mW
PE2 Serdes 1.0V              1020 mV    36375 mA   37093 mW

```

PE3 Serdes 1.0V	1019 mV	32640 mA	33296 mW
PE2 HMC Core 0.9V	900 mV	7695 mA	6921 mW
PE2,3 HMC Memory 1.2V	1199 mV	562 mA	674 mW
PE3 HMC Core 0.9V	899 mV	7554 mA	6796 mW
PE2,3 HMC Serdes 1.2V	1199 mV	20156 mA	24218 mW
VDD 3.3V	3300 mV	8964 mA	29609 mW
VDD 1.5V	1499 mV	3968 mA	5945 mW
VDD 2.5V	2449 mV	4414 mA	10890 mW
PE4 Core 0.9V	900 mV	28527 mA	25679 mW
PE5 Core 0.9V	899 mV	28902 mA	26035 mW
PE4 Serdes 1.0V	1019 mV	41281 mA	42125 mW
PE5 Serdes 1.0V	1019 mV	25781 mA	26328 mW
PE4 HMC Core 0.9V	900 mV	7382 mA	6648 mW
PE4,5 HMC Memory 1.2V	1199 mV	626 mA	750 mW
PE5 HMC Core 0.9V	899 mV	7562 mA	6796 mW
PE4,5 HMC Serdes 1.2V	1199 mV	20312 mA	24375 mW
LCPU platform 1.1V	1099 mV	3687 mA	4054 mW
LCPU core 1.0V	1000 mV	9000 mA	9000 mW
BCM core 1.0V	999 mV	7843 mA	7835 mW
BCM & PEX Serdes 1.0V	999 mV	4062 mA	4062 mW
12V	12417 mV	51659 mA	643215 mW

#### show chassis environment FPC 1 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis environment fpc 1
```

FPC 1 status:

State	Online
Temperature Intake	36 degrees C / 96 degrees F
Temperature Exhaust A	39 degrees C / 102 degrees F
Temperature LU TSen	52 degrees C / 125 degrees F
Temperature LU Chip	54 degrees C / 129 degrees F
Temperature XM TSen	52 degrees C / 125 degrees F
Temperature XM Chip	60 degrees C / 140 degrees F
Temperature PCIE TSen	52 degrees C / 125 degrees F
Temperature PCIE Chip	69 degrees C / 156 degrees F
Power	
MPC-BIAS3V3-z12106	3302 mV
MPC-VDD3V3-z16100	3325 mV
MPC-AVDD1V0-z16100	1007 mV
MPC-PCIE_1V0-z16100	904 mV
MPC-LU0_1V0-z12004	996 mV
MPC-VDD_1V5-z12004	1498 mV
MPC-12VA-BMR453	11733 mV
MPC-12VB-BMR453	11728 mV
MPC-XM_0V9-vt273m	900 mV
I2C Slave Revision	81

#### show chassis environment FPC (Junos OS Evolved)

```
user@switch> show chassis environment fpc
```

FPC 0 status:

State	Online
Intake Temperature	32 degrees C / 89 degrees F
Exhaust-A Temperature	43 degrees C / 109 degrees F
Exhaust-B Temperature	32 degrees C / 89 degrees F
PE0 Temperature	34 degrees C / 93 degrees F

```

PE1 Temperature      38 degrees C / 100 degrees F
PE2 Temperature      38 degrees C / 100 degrees F
PE3 Temperature      36 degrees C / 96 degrees F
PE4 Temperature      35 degrees C / 95 degrees F
PE5 Temperature      35 degrees C / 95 degrees F
Power 1
  RT_1 1.0v          1018 mV
  RT_2 1.0v          1018 mV
Power 2
  FPC 1 1.0v         999 mV
  FPC 2 1.0v         998 mV
Power 3
  FPC 2.5v           2499 mV
  FPC 3.3v           3299 mV
Power 4
  FPC 0.9v           899 mV
  FPC 1.5v           1499 mV
Power 5
  PE0 1 1.0v         1039 mV
  PE0 2 1.0v         1039 mV
Power 6
  PE0 1 0.9v         900 mV
  PE0 2 0.9v         900 mV
Power 7
  PE0 3 0.9v         902 mV
  PE0 4 0.9v         902 mV
Power 8
  PE0 H 0.9v         899 mV
  PE0 H 1.2v         1199 mV
Power 9
  PE1 1 1.0v         1040 mV
  PE1 2 1.0v         1039 mV
Power 10
  PE1 1 0.9v         901 mV
  PE1 2 0.9v         901 mV
Power 11
  PE1 3 0.9v         900 mV
  PE1 4 0.9v         900 mV
Power 12
  PE1 H 0.9v         899 mV
  PE1 H 1.2v         1199 mV
Power 13
  PE2 1 1.0v         1039 mV
  PE2 2 1.0v         1039 mV
Power 14
  PE2 1 0.9v         900 mV
  PE2 2 0.9v         900 mV
Power 15
  PE2 3 0.9v         900 mV
  PE2 4 0.9v         900 mV
Power 16
  PE2 H 0.9v         899 mV
  PE2 H 1.2v         1199 mV
Power 17
  PE3 1 1.0v         1039 mV
  PE3 2 1.0v         1039 mV
Power 18
  PE3 1 0.9v         899 mV
  PE3 2 0.9v         900 mV
Power 19

```

```

    PE3 3 0.9v          899 mV
    PE3 4 0.9v          900 mV
Power 20
    PE3 H 0.9v          899 mV
    PE3 H 1.2v          1199 mV
Power 21
    PE4 1 1.0v          1039 mV
    PE4 2 1.0v          1039 mV
Power 22
    PE4 1 0.9v          900 mV
    PE4 2 0.9v          900 mV
Power 23
    PE4 3 0.9v          901 mV
    PE4 4 0.9v          901 mV
Power 24
    PE4 H 0.9v          899 mV
    PE4 H 1.2v          1199 mV
Power 25
    PE5 1 1.0v          1040 mV
    PE5 2 1.0v          1039 mV
Power 26
    PE5 1 0.9v          901 mV
    PE5 2 0.9v          901 mV
Power 27
    PE5 3 0.9v          901 mV
    PE5 4 0.9v          901 mV
Power 28
    PE5 H 0.9v          899 mV
    PE5 H 1.2v          1199 mV
Power 29
    PIC0 12.0v          12342 mV
Power 30
    PIC1 12.0v          12342 mV
Power 31
    A    12.0v          12375 mV
    B    12.0v          1008 mV
Bus Revision          115
FPC 1 status:
State                Online
Intake Temperature   33 degrees C / 91 degrees F
Exhaust-A Temperature 44 degrees C / 111 degrees F
Exhaust-B Temperature 33 degrees C / 91 degrees F
PE0 Temperature      34 degrees C / 93 degrees F
PE1 Temperature      38 degrees C / 100 degrees F
PE2 Temperature      37 degrees C / 98 degrees F
PE3 Temperature      36 degrees C / 96 degrees F
PE4 Temperature      34 degrees C / 93 degrees F
PE5 Temperature      36 degrees C / 96 degrees F
Power 1
    RT_1 1.0v          1018 mV
    RT_2 1.0v          1018 mV
Power 2
    FPC 1 1.0v          999 mV
    FPC 2 1.0v          999 mV
Power 3
    FPC 2.5v          2499 mV
    FPC 3.3v          3300 mV
Power 4
    FPC 0.9v          899 mV
    FPC 1.5v          1500 mV

```

```

Power 5
  PE0 1 1.0v      1039 mV
  PE0 2 1.0v      1039 mV
Power 6
  PE0 1 0.9v      925 mV
  PE0 2 0.9v      925 mV
Power 7
  PE0 3 0.9v      925 mV
  PE0 4 0.9v      926 mV
Power 8
  PE0 H 0.9v      899 mV
  PE0 H 1.2v     1199 mV
Power 9
  PE1 1 1.0v      1040 mV
  PE1 2 1.0v      1039 mV
Power 10
  PE1 1 0.9v      900 mV
  PE1 2 0.9v      901 mV
Power 11
  PE1 3 0.9v      899 mV
  PE1 4 0.9v      900 mV
Power 12
  PE1 H 0.9v      899 mV
  PE1 H 1.2v     1199 mV
Power 13
  PE2 1 1.0v      1040 mV
  PE2 2 1.0v      1039 mV
Power 14
  PE2 1 0.9v      926 mV
  PE2 2 0.9v      926 mV
Power 15
  PE2 3 0.9v      927 mV
  PE2 4 0.9v      927 mV
Power 16
  PE2 H 0.9v      899 mV
  PE2 H 1.2v     1199 mV
Power 17
  PE3 1 1.0v      1039 mV
  PE3 2 1.0v      1039 mV
Power 18
  PE3 1 0.9v      926 mV
  PE3 2 0.9v      927 mV
Power 19
  PE3 3 0.9v      925 mV
  PE3 4 0.9v      926 mV
Power 20
  PE3 H 0.9v      899 mV
  PE3 H 1.2v     1199 mV
Power 21
  PE4 1 1.0v      1039 mV
  PE4 2 1.0v      1040 mV
Power 22
  PE4 1 0.9v      925 mV
  PE4 2 0.9v      925 mV
Power 23
  PE4 3 0.9v      925 mV
  PE4 4 0.9v      926 mV
Power 24
  PE4 H 0.9v      900 mV
  PE4 H 1.2v     1199 mV

```

```

Power 25
  PE5 1 1.0v          1039 mV
  PE5 2 1.0v          1039 mV
Power 26
  PE5 1 0.9v          898 mV
  PE5 2 0.9v          899 mV
Power 27
  PE5 3 0.9v          900 mV
  PE5 4 0.9v          900 mV
Power 28
  PE5 H 0.9v          899 mV
  PE5 H 1.2v          1199 mV
Power 29
  PICO 12.0v          0 mV
Power 30
  PIC1 12.0v          12402 mV
Power 31
  A    12.0v          12344 mV
  B    12.0v          1008 mV
Bus Revision          115
FPC 2 status:
State                 Online
Intake Temperature    31 degrees C / 87 degrees F
Exhaust-A Temperature 38 degrees C / 100 degrees F
Exhaust-B Temperature 28 degrees C / 82 degrees F
PE0 Temperature       28 degrees C / 82 degrees F
PE1 Temperature       33 degrees C / 91 degrees F
PE2 Temperature       34 degrees C / 93 degrees F
PE3 Temperature       31 degrees C / 87 degrees F
Power 1
  RT_1 1.0v          1018 mV
  RT_2 1.0v          1018 mV
Power 2
  FPC 1 1.0v          999 mV
  FPC 2 1.0v          999 mV
Power 3
  FPC 2.5v          2499 mV
  FPC 3.3v          3299 mV
Power 4
  FPC 0.9v          899 mV
  FPC 1.5v          1500 mV
Power 5
  PE0 1 1.0v          1039 mV
  PE0 2 1.0v          1040 mV
Power 6
  PE0 1 0.9v          900 mV
  PE0 2 0.9v          901 mV
Power 7
  PE0 3 0.9v          900 mV
  PE0 4 0.9v          900 mV
Power 8
  PE0 H 0.9v          899 mV
  PE0 H 1.2v          1199 mV
Power 9
  PE1 1 1.0v          1039 mV
  PE1 2 1.0v          1039 mV
Power 10
  PE1 1 0.9v          875 mV
  PE1 2 0.9v          876 mV
Power 11

```

```

    PE1 3 0.9v          875 mV
    PE1 4 0.9v          875 mV
Power 12
    PE1 H 0.9v          899 mV
    PE1 H 1.2v          1199 mV
Power 13
    PE2 1 1.0v          1039 mV
    PE2 2 1.0v          1039 mV
Power 14
    PE2 1 0.9v          900 mV
    PE2 2 0.9v          900 mV
Power 15
    PE2 3 0.9v          900 mV
    PE2 4 0.9v          900 mV
Power 16
    PE2 H 0.9v          899 mV
    PE2 H 1.2v          1199 mV
Power 17
    PE3 1 1.0v          1039 mV
    PE3 2 1.0v          1039 mV
Power 18
    PE3 1 0.9v          875 mV
    PE3 2 0.9v          875 mV
Power 19
    PE3 3 0.9v          875 mV
    PE3 4 0.9v          875 mV
Power 20
    PE3 H 0.9v          899 mV
    PE3 H 1.2v          1200 mV
Power 21
    PIC0 12.0v          12281 mV
Power 22
    PIC1 12.0v          0 mV
Power 23
    A    12.0v          12406 mV
    B    12.0v          1006 mV
Bus Revision          115
FPC 3 status:
State                 Online
Intake Temperature    33 degrees C / 91 degrees F
Exhaust-A Temperature 44 degrees C / 111 degrees F
Exhaust-B Temperature 30 degrees C / 86 degrees F
PE0 Temperature       33 degrees C / 91 degrees F
PE1 Temperature       37 degrees C / 98 degrees F
PE2 Temperature       38 degrees C / 100 degrees F
PE3 Temperature       34 degrees C / 93 degrees F
PE4 Temperature       33 degrees C / 91 degrees F
PE5 Temperature       36 degrees C / 96 degrees F
Power 1
    RT_1 1.0v          1018 mV
    RT_2 1.0v          1018 mV
Power 2
    FPC 1 1.0v          999 mV
    FPC 2 1.0v          999 mV
Power 3
    FPC 2.5v          2500 mV
    FPC 3.3v          3299 mV
Power 4
    FPC 0.9v          899 mV
    FPC 1.5v          1500 mV

```

Power 5	
PE0 1 1.0v	1039 mV
PE0 2 1.0v	1039 mV
Power 6	
PE0 1 0.9v	900 mV
PE0 2 0.9v	900 mV
Power 7	
PE0 3 0.9v	898 mV
PE0 4 0.9v	899 mV
Power 8	
PE0 H 0.9v	899 mV
PE0 H 1.2v	1199 mV
Power 9	
PE1 1 1.0v	1040 mV
PE1 2 1.0v	1039 mV
Power 10	
PE1 1 0.9v	926 mV
PE1 2 0.9v	926 mV
Power 11	
PE1 3 0.9v	925 mV
PE1 4 0.9v	925 mV
Power 12	
PE1 H 0.9v	900 mV
PE1 H 1.2v	1199 mV
Power 13	
PE2 1 1.0v	1039 mV
PE2 2 1.0v	1039 mV
Power 14	
PE2 1 0.9v	873 mV
PE2 2 0.9v	873 mV
Power 15	
PE2 3 0.9v	875 mV
PE2 4 0.9v	875 mV
Power 16	
PE2 H 0.9v	899 mV
PE2 H 1.2v	1199 mV
Power 17	
PE3 1 1.0v	1039 mV
PE3 2 1.0v	1039 mV
Power 18	
PE3 1 0.9v	899 mV
PE3 2 0.9v	900 mV
Power 19	
PE3 3 0.9v	899 mV
PE3 4 0.9v	899 mV
Power 20	
PE3 H 0.9v	899 mV
PE3 H 1.2v	1199 mV
Power 21	
PE4 1 1.0v	1040 mV
PE4 2 1.0v	1040 mV
Power 22	
PE4 1 0.9v	949 mV
PE4 2 0.9v	950 mV
Power 23	
PE4 3 0.9v	950 mV
PE4 4 0.9v	951 mV
Power 24	
PE4 H 0.9v	899 mV
PE4 H 1.2v	1199 mV



```
Power 25
  PE5 1 1.0v          1039 mV
  PE5 2 1.0v          1039 mV
Power 26
  PE5 1 0.9v          900 mV
  PE5 2 0.9v          900 mV
Power 27
  PE5 3 0.9v          900 mV
  PE5 4 0.9v          900 mV
Power 28
  PE5 H 0.9v          899 mV
  PE5 H 1.2v          1199 mV
Power 29
  PIC0 12.0v          0 mV
Power 30
  PIC1 12.0v          0 mV
Power 31
  A    12.0v          12406 mV
  B    12.0v          1008 mV
Bus Revision          115
FPC 6 status:
State                 Onlining
Bus Revision          115
```

## show chassis environment pem

<b>List of Syntax</b>	<a href="#">Syntax on page 356</a>
	<a href="#">Syntax (ACX4000 Router) on page 356</a>
	<a href="#">Syntax (TX Matrix Routers) on page 356</a>
	<a href="#">Syntax (TX Matrix Plus Routers) on page 356</a>
	<a href="#">Syntax (MX Series Router) on page 356</a>
	<a href="#">Syntax (PTX Series Router) on page 356</a>
	<a href="#">Syntax (MX104 Universal Routing Platforms) on page 356</a>
	<a href="#">Syntax (MX10003 , MX204, and MX10008 Universal Routing Platforms) on page 357</a>
	<a href="#">Syntax (QFX Series) on page 357</a>
	<a href="#">Syntax (OCX Series) on page 357</a>
	<a href="#">Syntax (EX9251, EX9253 Switches) on page 357</a>

<b>Syntax</b>	show chassis environment pem <slot>
---------------	--

<b>Syntax (ACX4000 Router)</b>	show chassis environment pem
--------------------------------	------------------------------


<b>Syntax (TX Matrix Routers)</b>	show chassis environment pem <lcc number   scc> <slot>
-----------------------------------	--

<b>Syntax (TX Matrix Plus Routers)</b>	show chassis environment pem <lcc number   sfc number> <slot>
--	---

<b>Syntax (MX Series Router)</b>	show chassis environment pem <slot> <all-members> <local> <member member-id>
----------------------------------	--

<b>Syntax (PTX Series Router)</b>	show chassis environment pem <slot> <all-members> <local> <member member-id>
-----------------------------------	--

<b>Syntax (MX104 Universal Routing Platforms)</b>	show chassis environment pem <slot> <satellite [fpc-slot slot-id [device-alias alias-name]]
---	---

Syntax (MX10003 , MX204, and MX10008 Universal Routing Platforms)	show chassis environment pem <slot>
Syntax (QFX Series)	show chassis environment pem <slot (interconnect-device <i>name slot</i> )   (node-device <i>name</i> )>
Syntax (OCX Series)	show chassis environment pem <slot>
Syntax (EX9251, EX9253 Switches)	show chassis environment pem <slot>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.3R2 for EX Series.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Routers</p>
Description	<p>Display Power Entry Module (PEM) environmental status information.</p> <div>  <p><b>NOTE:</b> The new high-capacity (4100W) enhanced DC PEM on MX960 routers includes a new design that can condition the input voltage. This results in the output voltage differing from the input voltage. The earlier generation of DC PEMs coupled the input power directly to the output, thereby making it safe to assume that the output voltage was equal to the input voltage.</p> </div>
Options	<p><b>none</b>—Display environmental information about both PEMs. For the TX Matrix router, display environmental information about the PEMs, the TX Matrix router, and its attached T640 routers. For the TX Matrix Plus router, display environmental information about the PEMs, the TX Matrix Plus router, and its attached routers.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display environmental information about the PEMs in all the member routers of the Virtual Chassis configuration.</p>

**interconnect-device *name***—(QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Interconnect device.

**lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display environmental information about the PEM in the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display environmental information about the PEM in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-device *name***—(QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Node device.

**satellite [*fpc-slot slot-id* | device-alias *alias-name*]**—(Junos Fusion only)(Optional) Display environmental information about the PEM in the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display environmental information about the PEM in the TX Matrix router (or switch-card chassis).

**sfc**—(TX Matrix Plus routers only) (Optional) Display environmental information about the PEM in the TX Matrix Plus router (or switch-fabric chassis).

**slot** —(Optional) Display environmental information about an individual PEM. Replace *slot* with 0 or 1.

**Required Privilege Level** view

**Related Documentation** • [show chassis hardware on page 415](#)

**List of Sample Output** [show chassis environment pem \(M40e Router\) on page 360](#)  
[show chassis environment pem \(M120 Router\) on page 360](#)

[show chassis environment pem \(M160 Router\) on page 361](#)  
[show chassis environment pem \(M320 Router\) on page 361](#)  
[show chassis environment pem \(MX150\) on page 361](#)  
[show chassis environment pem \(MX104 Router\) on page 361](#)  
[show chassis environment pem \(MX240 Router\) on page 362](#)  
[show chassis environment pem \(MX480 Router\) on page 362](#)  
[show chassis environment pem \(MX960 Router\) on page 362](#)  
[show chassis environment pem \(MX10003 Router\) on page 362](#)  
[show chassis environment pem \(MX204 Router\) on page 363](#)  
[show chassis environment pem \(MX10008 Router\) on page 363](#)  
[show chassis environment pem \(PTX10016 Router\) on page 364](#)  
[show chassis environment pem \(T320 Router\) on page 365](#)  
[show chassis environment pem \(T640 Router\) on page 365](#)  
[show chassis environment pem \(T4000 Router\) on page 365](#)  
[show chassis environment pem \(T640/T1600/T4000 Routers With Six-Input DC Power Supply\) on page 366](#)  
[show chassis environment pem lcc \(TX Matrix Routing Matrix\) on page 366](#)  
[show chassis environment pem scc \(TX Matrix Routing Matrix\) on page 367](#)  
[show chassis environment pem sfc \(TX Matrix Plus Routing Matrix\) on page 367](#)  
[show chassis environment pem lcc \(TX Matrix Plus Routing Matrix\) on page 367](#)  
[show chassis environment pem node-device \(QFabric System\) on page 368](#)  
[show chassis environment pem \(QFX Series and OCX Series\) on page 368](#)  
[show chassis environment pem interconnect-device \(QFabric System\) on page 368](#)  
[show chassis environment pem \(EX9251 Switches\) on page 369](#)  
[show chassis environment pem \(EX9253 Switches\) on page 369](#)  
[show chassis environment pem \(PTX1000 Packet Transport Routers\) on page 369](#)

**Output Fields** [Table 12 on page 359](#) lists the output fields for the **show chassis environment pem** command. Output fields are listed in the approximate order in which they appear.

*Table 12: show chassis environment pem Output Fields*

Field Name	Field Description
PEMslotstatus	Number of the PEM slot.
State	Status of the PEM.
Temperature	Temperature of the air flowing past the PEM.
AC Input	Status of the AC input for the specified component
AC Output	Status of the AC output for the specified component.
DC input	Status of the DC input for the specified component.
DC output	Status of the DC output for the specified component.
Load	(Not available on M40e or M160 routers) Information about the load on supply, in percentage of rated current being used.

Table 12: show chassis environment pem Output Fields (continued)

Field Name	Field Description
Voltage	(M120, M160, M320, T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about voltage supplied to the PEM.  (MX104 routers only) Information about voltage supplied by the PEM to the system.
Current	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM current.
Power	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM power.
SCG/CB/SIB	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) SONET Clock Generator/Control Board/Switch Interface Board.
FAN	(T640, T1600, and T4000 routers with six-input DC power supply only) Information about the DC output to the fan.

## Sample Output

### show chassis environment pem (M40e Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State           Online
  Temperature      OK
  AC input         OK
  DC output        OK

```

### show chassis environment pem (M120 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State           Online
  Temperature      OK
  DC Input:       OK
  DC Output:      OK
  Load           Less than 20 percent
  Voltage:
    48.0 V input   52864 mV
    48.0 V fan supply 41655 mV
    3.3 V          3399 mV
PEM 1 status:
  State           Online
  Temperature      OK
  DC Input:       OK
  DC Output:      OK
  Load           Less than 20 percent
  Voltage:
    48.0 V input   54537 mV
    48.0 V fan supply 42910 mV
    3.3 V          3506 mV

```

**show chassis environment pem (M160 Router)**

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State           Online
  Temperature      OK
  DC input         OK
  DC output        OK
  Load            Less than 20 percent
  Voltage:
    48.0 V input   54833 mV
    48.0 V fan supply 50549 mV
    8.0 V bias     8239 mV
    5.0 V bias     5006 mV

```

**show chassis environment pem (M320 Router)**

```
user@host> show chassis environment pem
```

```

PEM 2 status:
  State           Online
  Temperature      OK
  DC input         OK
  Load            Less than 40 percent
    48.0 V input   51853 mV
    48.0 V fan supply 48877 mV
    8.0 V bias     8449 mV
    5.0 V bias     4998 mV
PEM 3 status:
  State           Online
  Temperature      OK
  DC input         OK
  Load            Less than 40 percent
    48.0 V input   51717 mV
    48.0 V fan supply 49076 mV
    8.0 V bias     8442 mV
    5.0 V bias     4998 mV

```

**show chassis environment pem (MX150)**

```
user@host> show chassis environment pem
```

```

FPC 0 PEM 0 status:
  State           Online
  Airflow          Front to Back
  Temperature      OK

```

**show chassis environment pem (MX104 Router)**

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State           Online
  Temperature      OK
  DC Output:       OK
  Voltage:
    12.0 V output   12281 mV
    3.3 V output    3353 mV

```

```

PEM 1 status:
  State      Empty

```

### show chassis environment pem (MX240 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State      Online
  Temperature OK
  DC Output:  OK
PEM 1 status:
  State      Online
  Temperature OK
  DC Output:  OK

```

### show chassis environment pem (MX480 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State      Online
  Temperature OK
  DC Input:   OK
  DC Output:  OK
  Voltage:
PEM 1 status:
  State      Online
  Temperature OK
  DC Input:   OK
  DC Output:  OK
  Voltage:

```

### show chassis environment pem (MX960 Router)

```
user@host> show chassis environment pem
```

```

PEM 2 status:
  State      Present
PEM 3 status:
  State      Online
  Temperature OK
  DC Output:  OK

```

### show chassis environment pem (MX10003 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State      Online
  Airflow     Front to Back
  Temperature OK   34 degrees C / 93 degrees F
  Temperature OK   26 degrees C / 78 degrees F
  Temperature OK   24 degrees C / 75 degrees F
  Firmware version 0x22
  Cooling Fan    8752 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      26          312      10

```



```

PEM 1 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   35 degrees C / 95 degrees F
  Temperature    OK   26 degrees C / 78 degrees F
  Temperature    OK   25 degrees C / 77 degrees F
  Firmware version 0x22
  Cooling Fan    8480 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      27          324      11
PEM 2 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   37 degrees C / 98 degrees F
  Temperature    OK   29 degrees C / 84 degrees F
  Temperature    OK   25 degrees C / 77 degrees F
  Firmware version 0x22
  Cooling Fan    8656 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      25          300      10
PEM 3 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   35 degrees C / 95 degrees F
  Temperature    OK   26 degrees C / 78 degrees F
  Temperature    OK   25 degrees C / 77 degrees F
  Firmware version 0x22
  Cooling Fan    8448 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      26          312      10
PEM 4 status:
  State          Empty
PEM 5 status:
  State          Empty

```

### show chassis environment pem (MX204 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State          Empty
PEM 1 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   48 degrees C / 118 degrees F
  Temperature    OK   51 degrees C / 123 degrees F
  Fan Sensor     5400 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  11.94      16          191      29

```

### show chassis environment pem (MX10008 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   29 degrees C / 84 degrees F

```

```

Firmware version      0x36
Fan 0                  5880 RPM
DC Output              Voltage(V) Current(A) Power(W) Load(%)
                       12.00      104      1248      46
PEM 1 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    27 degrees C / 80 degrees F
  Firmware version     0x36
  Fan 0                5940 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      104      1248      46
PEM 2 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    30 degrees C / 86 degrees F
  Firmware version     0x36
  Fan 0                5940 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      105      1260      46
PEM 3 status:
  State                Present
PEM 4 status:
  State                Present
PEM 5 status:
  State                Present

```

#### show chassis environment pem (PTX10016 Router)

```

user@host> show chassis environment pem
PEM 0 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    21 degrees C / 69 degrees F
  Firmware version     0x36
  Fan 0                5760 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      51      612      22
PEM 1 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    23 degrees C / 73 degrees F
  Firmware version     0x36
  Fan 0                5760 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      52      624      23
PEM 2 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    23 degrees C / 73 degrees F
  Firmware version     0x36
  Fan 0                5760 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      51      612      22
PEM 3 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    21 degrees C / 69 degrees F
  Firmware version     0x36

```

```

Fan 0                    5760 RPM
DC Output                Voltage(V) Current(A) Power(W) Load(%)
                        12.00      51      612      22
PEM 4 status:
State                    Online
Airflow                  Front to Back
Temperature              OK 22 degrees C / 71 degrees F
Firmware version        0x36
Fan 0                    5760 RPM
DC Output                Voltage(V) Current(A) Power(W) Load(%)
                        12.00      52      624      23
PEM 5 status:
State                    Online
Airflow                  Front to Back
Temperature              OK 24 degrees C / 75 degrees F
Firmware version        0x36
Fan 0                    5700 RPM
DC Output                Voltage(V) Current(A) Power(W) Load(%)
                        12.00      51      612      22
PEM 6 status:
State                    Online
Airflow                  Front to Back
Temperature              OK 21 degrees C / 69 degrees F
Firmware version        0x36
Fan 0                    5700 RPM
DC Output                Voltage(V) Current(A) Power(W) Load(%)
                        12.00      50      600      22

```

#### show chassis environment pem (T320 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
State                    Online
Temperature              OK
DC input:               OK

```

#### show chassis environment pem (T640 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
State                    Online
Temperature              22 degrees C / 71 degrees F
AC input: OK
DC output:               Voltage    Current      Power      Load
FPC 0                   56875      606         34         4
FPC 1                   57016      525         29         3
FPC 2                    0          0           0          0
FPC 3                    0          0           0          0
FPC 4                    0          0           0          0
FPC 5                    0          0           0          0
FPC 6                   57158     1581        90         12
FPC 7                    0          0           0          0
SCG/CB/SIB              56750     1125        63         5

```

#### show chassis environment pem (T4000 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
State                Online
Temperature          33 degrees C / 91 degrees F
DC Input:           OK
                    Voltage(V) Current(A) Power(W) Load(%)
INPUT 0             54.625    9.812    535    22
INPUT 1             54.625   10.250    559    23
INPUT 2             55.125    0.125     6     0
INPUT 3             54.500   10.062    548    22
INPUT 4             54.750    9.375    513    21
INPUT 5             54.750   10.187    557    23
DC Output           Voltage(V) Current(A) Power(W) Load(%)
FPC 0              55.750   10.125    564    37
FPC 1              51.625    0.000     0     0
FPC 2              52.000    0.000     0     0
FPC 3              55.062   10.437    574    38
FPC 4              52.125    0.000     0     0
FPC 5              55.000    9.375    515    34
FPC 6              55.187    9.687    534    35
FPC 7              51.437    0.000     0     0
SCG/CB/SIB         55.375   15.750    872    35
FAN                54.562   14.750    804    42

```

#### show chassis environment pem (T640/T1600/T4000 Routers With Six-Input DC Power Supply)

```
user@host> show chassis environment pem
```

```

PEM 1 status:
State                Online
Temperature          36 degrees C / 96 degrees F
DC Input:           OK
                    Voltage(V) Current(A) Power(W) Load(%)
INPUT 0             0.000    0.000     0     0
INPUT 1             54.875    3.812    209    27
INPUT 2             55.375    3.937    218    29
INPUT 3             54.625    3.750    204    27
INPUT 4             55.125    3.375    186    24
INPUT 5             55.125    3.375    186    24
DC Output           Voltage(V) Current(A) Power(W) Load(%)
FPC 0              52.312    0.000     0     0
FPC 1              52.687    0.000     0     0
FPC 2              52.812    0.000     0     0
FPC 3              55.812    7.062    394    52
FPC 4              52.625    0.000     0     0
FPC 5              52.625    0.000     0     0
FPC 6              52.750    0.000     0     0
FPC 7              52.750    0.000     0     0
SCG/CB/SIB         55.937   11.937    667    55
FAN                55.812    4.937    275    36

```

#### show chassis environment pem lcc (TX Matrix Routing Matrix)

```
user@host> show chassis environment pem 0 lcc 0
```

```
lcc0-re0:
```

```

-----
PEM 0 status:
State                Present
Temperature          27 degrees C / 80 degrees F

```

DC input:		Check		
DC output:	Voltage	Current	Power	Load
FPC 0	0	0	0	0
FPC 1	0	0	0	0
FPC 2	0	0	0	0
FPC 3	0	0	0	0
FPC 4	0	0	0	0
FPC 5	0	0	0	0
FPC 6	0	0	0	0
FPC 7	0	0	0	0
SCG/CB/SIB	0	0	0	0

### show chassis environment pem scc (TX Matrix Routing Matrix)

```
user@host> show chassis environment pem scc
```

```
scc-re0:
```

```
-----
```

```
PEM 1 status:
```

State	Online			
Temperature	24 degrees C / 75 degrees F			
DC input:	OK			
DC output:	Voltage	Current	Power	Load
SIB 0	0	0	0	0
SIB 1	0	0	0	0
SIB 2	0	0	0	0
SIB 3	56550	0	0	0
SIB 4	55958	6912	386	51

### show chassis environment pem sfc (TX Matrix Plus Routing Matrix)

```
user@host> show chassis environment pem sfc 0
```

```
sfc0-re0:
```

```
-----
```

```
PEM 0 status:
```

State	Online			
Temperature	35 degrees C / 95 degrees F			
DC Input:	OK			
DC Output	Voltage	Current	Power	Load
Channel 0	53820	14140	761	59
Channel 1	53550	12720	681	53
Channel 2	53840	12930	696	54
Channel 3	53690	14990	804	63
Channel 4	53620	15070	808	63
Channel 5	53900	14820	798	62
Channel 6	54120	5020	271	21

### show chassis environment pem lcc (TX Matrix Plus Routing Matrix)

```
user@host> show chassis environment lcc 0
```

```
lcc0-re1:
```

```
-----
```

```
PEM 0 status:
```

State	Online
Temperature	38 degrees C / 100 degrees F
DC Input:	OK

DC Output	Voltage	Current	Power	Load
FPC 0	0	0	0	0
FPC 1	0	0	0	0
FPC 2	0	0	0	0
FPC 3	0	0	0	0
FPC 4	56408	7575	427	56
FPC 5	0	0	0	0
FPC 6	56266	7956	447	59
FPC 7	56283	6100	343	45
SCG/CB/SIB	55916	8950	500	41

PEM 1 status:

State	Present
Temperature	35 degrees C / 95 degrees F
DC Input:	Check

DC Output	Voltage	Current	Power	Load
FPC 0	0	0	0	0
FPC 1	0	0	0	0
FPC 2	0	0	0	0
FPC 3	0	0	0	0
FPC 4	0	0	0	0
FPC 5	0	0	0	0
FPC 6	0	0	0	0
FPC 7	0	0	0	0
SCG/CB/SIB	0	0	0	0

#### show chassis environment pem node-device (QFabric System)

```
user@switch> show chassis environment pem node-device node1
```

FPC 0 PEM 0 status:

State	Check
Airflow	Front to Back
Temperature	OK
AC Input:	OK

DC Output	Voltage(V)	Current(A)	Power(W)	Load(%)
	12	10	120	18

FPC 0 PEM 1 status:

State	Online
Airflow	Back to Front
Temperature	OK
AC Input:	OK

DC Output	Voltage(V)	Current(A)	Power(W)	Load(%)
	11	10	110	17

#### show chassis environment pem (QFX Series and OCX Series)

```
user@switch> show chassis environment pem
```

FPC 0 PEM 1 status:

State	Online
Airflow	Front to Back
Temperature	OK
AC Input:	OK

DC Output	Voltage(V)	Current(A)	Power(W)	Load(%)
	12	17	204	31

#### show chassis environment pem interconnect-device (QFabric System)

```
user@switch> show chassis environment pem interconnect-device IC11
```

```

IC1 PEM 1 status:
  State          Online
  Airflow        Front to Back
  Temperature     OK
  AC Input:      OK
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12          18       216     33

```

### show chassis environment pem (EX9251 Switches)

```

user@switch> show chassis environment pem

PEM 0 status:
  State          Present
PEM 1 status:
  State          Online
  Airflow        Front to Back
  Temperature     OK   36 degrees C / 96 degrees F
  Temperature     OK   35 degrees C / 95 degrees F
  Fan Sensor      5940 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  11.85      17       201     30

```

### show chassis environment pem (EX9253 Switches)

```

user@switch> show chassis environment pem

PEM 0 status:
  State          Online
  Airflow        Front to Back
  Temperature     OK   56 degrees C / 132 degrees F
  Temperature     OK   46 degrees C / 114 degrees F
  Temperature     OK   28 degrees C / 82 degrees F
  Firmware version 04.10
  Cooling Fan     9056 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      47       564     19
PEM 1 status:
  State          Present
PEM 2 status:
  State          Empty
PEM 3 status:
  State          Empty
PEM 4 status:
  State          Present
PEM 5 status:
  State          Online
  Airflow        Front to Back
  Temperature     OK   61 degrees C / 141 degrees F
  Temperature     OK   49 degrees C / 120 degrees F
  Temperature     OK   28 degrees C / 82 degrees F
  Firmware version 04.10
  Cooling Fan     8656 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      51       612     21

```

### show chassis environment pem (PTX1000 Packet Transport Routers)

```

user@router> show chassis environment pem

```

```

PEM 0 status:
  State           Online
  Airflow         Front to Back
  Temp Sensor 0   OK    22 degrees C / 71 degrees F
  Temp Sensor 1   OK    23 degrees C / 73 degrees F
  Fan 0           9184 RPM
  Fan 1           7936 RPM
  DC Output       Voltage(V) Current(A) Power(W) Load(%)
                  12          24          288      18

PEM 2 status:
  State           Online
  Airflow         Front to Back
  Temp Sensor 0   OK    22 degrees C / 71 degrees F
  Temp Sensor 1   OK    26 degrees C / 78 degrees F
  Fan 0           9056 RPM
  Fan 1           7808 RPM
  DC Output       Voltage(V) Current(A) Power(W) Load(%)
                  12          24          288      18

```

On PTX1000 Packet Transport Routers, you cannot view the **show chassis environment pem** output at the PEM slot level, by using the command **show chassis environment pem slot**.



## show chassis environment routing-engine

<b>List of Syntax</b>	<a href="#">Syntax on page 371</a> <a href="#">Syntax (TX Matrix Routers) on page 371</a> <a href="#">Syntax (TX Matrix Plus Routers) on page 371</a> <a href="#">Syntax (MX104, MX2010, MX2020, MX10003, MX204, and MX2008 Universal Routing Platforms) on page 371</a> <a href="#">Syntax (MX Series Routers) on page 371</a> <a href="#">Syntax (PTX Series Routers) on page 371</a> <a href="#">Syntax (QFX Series) on page 372</a> <a href="#">Syntax (OCX Series) on page 372</a> <a href="#">Syntax (ACX5048 and ACX5096 Routers) on page 372</a> <a href="#">Syntax (ACX500 Routers) on page 372</a> <a href="#">Syntax (EX9251, EX9253 Switches) on page 372</a>
<b>Syntax</b>	show chassis environment routing-engine <slot>
<b>Syntax (TX Matrix Routers)</b>	show chassis environment routing-engine <lcc number   scc> <slot>
<b>Syntax (TX Matrix Plus Routers)</b>	show chassis environment routing-engine <lcc number   sfc number> <slot>
<b>Syntax (MX104, MX2010, MX2020, MX10003, MX204, and MX2008 Universal Routing Platforms)</b>	show chassis environment routing-engine <slot> <satellite [fpc-slot slot-id   device-alias alias-name]
<b>Syntax (MX Series Routers)</b>	show chassis environment routing-engine <slot> <all-members> <local> <member member-id>
<b>Syntax (PTX Series Routers)</b>	show chassis environment routing-engine <slot> <all-members> <local> <member member-id>

<b>Syntax (QFX Series)</b>	show chassis environment routing-engine interconnect-device <i>name</i>
<b>Syntax (OCX Series)</b>	show chassis environment routing-engine interconnect-device <i>name</i>
<b>Syntax (ACX5048 and ACX5096 Routers)</b>	show chassis environment routing-engine
<b>Syntax (ACX500 Routers)</b>	show chassis environment routing-engine
<b>Syntax (EX9251, EX9253 Switches)</b>	show chassis environment routing-engine
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Routers and T4000 Core Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Routers.</p>
<b>Description</b>	Display Routing Engine environmental status information.
<b>Options</b>	<p><b>none</b>—Display environmental information about all Routing Engines. For a TX Matrix router, display environmental information about all Routing Engines on the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display environmental information about all Routing Engines on the TX Matrix Plus router and its attached routers.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in all member routers in the Virtual Chassis configuration.</p>

**interconnect-device *name***—(QFabric systems only) (Optional) Display environmental information about the Routing Engines for the Interconnect device.

**lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in the specified member in the Virtual Chassis configuration. Replace *member-id* with the value of 0 or 1.

**satellite [*fpc-slot slot-id* | *device-alias alias-name*]**—(Junos Fusion only)(Optional) Display environmental information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix router (switch-card chassis).

**sfc**—(TX Matrix Plus router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix Plus router (or switch-fabric chassis).

**slot**—(Optional) Display environmental information about an individual Routing Engine. On M10i, M20, M40e, M120, M160, M320, MX Series, MX104 routers, MX2010 routers, MX2020 routers, MX2008 routers, and T Series routers, replace *slot* with 0 or 1. On M5, M7i, M10, and M40 routers, replace *slot* with 0. On EX3200 and EX4200 standalone switches, replace *slot* with 0. On EX4200 switches in a Virtual Chassis configuration and on EX8208 and EX8216 switches, replace *slot* with 0 or 1. On the QFX3500 switch, there is only one Routing Engine, so you do not need to specify the slot number. On PTX Series Packet Transport Routers, replace *slot* with 0 or 1.

**Required Privilege Level** view

**Related Documentation**

- *request chassis routing-engine master*
- [show chassis routing-engine on page 687](#)

- List of Sample Output**
- [show chassis environment routing-engine \(Nonredundant\) on page 375](#)
  - [show chassis environment routing-engine \(Redundant\) on page 375](#)
  - [show chassis environment routing-engine \(MX150\) on page 375](#)
  - [show chassis environment routing-engine \(MX104 Router\) on page 375](#)
  - [show chassis environment routing-engine \(MX2010 Router\) on page 375](#)
  - [show chassis environment routing-engine \(MX2020 Router\) on page 375](#)
  - [show chassis environment routing-engine \(MX2008 Router\) on page 376](#)
  - [show chassis environment routing-engine \(TX Matrix Plus Router\) on page 376](#)
  - [show chassis environment routing-engine \(T4000 Core Router\) on page 376](#)
  - [show chassis environment routing-engine \(QFX Series and OCX Series\) on page 376](#)
  - [show chassis environment routing-engine interconnect-device \(QFabric System\) on page 377](#)
  - [show chassis environment routing-engine \(PTX5000 Packet Transport Router\) on page 377](#)
  - [show chassis environment routing-engine \(PTX10008 Router\) on page 377](#)
  - [show chassis environment routing-engine \(PTX10016 Router\) on page 377](#)
  - [show chassis environment routing-engine \(ACX5048 and ACX5096 Routers\) on page 377](#)
  - [show chassis environment routing-engine \(ACX500 Routers\) on page 378](#)
  - [show chassis environment routing-engine \(PTX5000 \(RE-PTX-X8-64G\), MX240 \(RE-S-X6-64G\), MX480 \(RE-S-X6-64G\), MX960 \(RE-S-X6-64G\), MX2010 \(RE-MX2K-X8-64G\), MX2020 \(RE-MX2K-X8-64G\) on page 378](#)
  - [show chassis environment routing-engine \(MX204 Routers\) on page 378](#)
  - [show chassis environment routing-engine \(MX10008 Routers\) on page 378](#)
  - [show chassis environment routing-engine \(EX9251 Switches\) on page 378](#)
  - [show chassis environment routing-engine \(EX9253 Switches\) on page 378](#)

**Output Fields** Table 13 on page 374 lists the output fields for the **show chassis environment routing-engine** command. Output fields are listed in the approximate order in which they appear.

*Table 13: show chassis environment routing-engine Output Fields*

Field Name	Field Description
Routing engine <i>slot</i> status	Number of the Routing Engine slot: 0 or 1.
State	Status of the Routing Engine: <ul style="list-style-type: none"> <li>• Online Master—Routing Engine is online, operating as Master.</li> <li>• Online Standby—Routing Engine is online, operating as Standby.</li> <li>• Offline—Routing Engine is offline.</li> </ul>
Temperature	Temperature of the air flowing past the Routing Engine.
CPU Temperature	(PTX Series and T4000 Core Routers only) Temperature of the air flowing past the Routing Engine CPU.

## Sample Output

### show chassis environment routing-engine (Nonredundant)

```
user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           27 degrees C / 80 degrees
```

### show chassis environment routing-engine (Redundant)

```
user@host> show chassis environment routing-engine

Route Engine 0 status:
  State                Online Master
  Temperature           26 degrees C / 78 degrees F
Route Engine 1 status:
  State                Online Standby
  Temperature           26 degrees C / 78 degrees F
```

### show chassis environment routing-engine (MX150)

```
user@ host >show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  CPU Temperature       42 degrees C / 107 degrees F
```

### show chassis environment routing-engine (MX104 Router)

```
user@ host >show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           34 degrees C / 93 degrees F
  CPU Temperature       43 degrees C / 109 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature           33 degrees C / 91 degrees F
  CPU Temperature       39 degrees C / 102 degrees F
```

### show chassis environment routing-engine (MX2010 Router)

```
user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           37 degrees C / 98 degrees F
  CPU Temperature       37 degrees C / 98 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature           35 degrees C / 95 degrees F
  CPU Temperature       34 degrees C / 93 degrees F
```

### show chassis environment routing-engine (MX2020 Router)

```
user@host> show chassis environment routing-engine
```

```

Routing Engine 0 status:
  State           Online Master
  Temperature      35 degrees C / 95 degrees F
  CPU Temperature  34 degrees C / 93 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      44 degrees C / 111 degrees F
  CPU Temperature  43 degrees C / 109 degrees F

```

#### show chassis environment routing-engine (MX2008 Router)

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State           Online Master
  CPU Temperature  75 degrees C / 167 degrees F
Routing Engine 1 status:
  State           Online Standby
  CPU Temperature  47 degrees C / 116 degrees F

```

#### show chassis environment routing-engine (TX Matrix Plus Router)

```

user@host> show chassis environment routing-engine

sfc0-re0:
-----
Routing Engine 0 status:
  State           Online Master
  Temperature      26 degrees C / 78 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      28 degrees C / 82 degrees F

lcc0-re0:
-----
Routing Engine 0 status:
  State           Online Master
  Temperature      30 degrees C / 86 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      29 degrees C / 84 degrees F

```

#### show chassis environment routing-engine (T4000 Core Router)

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State           Online Master
  Temperature      33 degrees C / 91 degrees F
  CPU Temperature  50 degrees C / 122 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      33 degrees C / 91 degrees F
  CPU Temperature  46 degrees C / 114 degrees F

```

#### show chassis environment routing-engine (QFX Series and OCX Series)

```

user@switch> show chassis environment routing-engine

```

```
Routing Engine 0 status:
  State           Online Master
  Temperature      42 degrees C / 107 degrees F
```

### show chassis environment routing-engine interconnect-device (QFabric System)

```
user@switch> show chassis environment routing-engine interconnect-device interconnect1
routing-engine interconnect-device interconnect1
Routing Engine 0 status:
  State           Online Standby
  Temperature      52 degrees C / 125 degrees F
Routing Engine 1 status:
  State           Online Master
  Temperature      57 degrees C / 134 degrees F
```

### show chassis environment routing-engine (PTX5000 Packet Transport Router)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature      55 degrees C / 131 degrees F
  CPU Temperature  66 degrees C / 150 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      52 degrees C / 125 degrees F
  CPU Temperature  64 degrees C / 147 degrees F
```

### show chassis environment routing-engine (PTX10008 Router)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  CPU Temperature  40 degrees C / 104 degrees F
Routing Engine 1 status:
  State           Online Standby
  CPU Temperature  40 degrees C / 104 degrees F
```

### show chassis environment routing-engine (PTX10016 Router)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  CPU Temperature  33 degrees C / 91 degrees F
Routing Engine 1 status:
  State           Online Standby
  CPU Temperature  38 degrees C / 100 degrees F
```

### show chassis environment routing-engine (ACX5048 and ACX5096 Routers)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature      33 degrees C / 91 degrees F
```

**show chassis environment routing-engine (ACX500 Routers)**

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           54 degrees C / 129 degrees F

```

**Sample Output****show chassis environment routing-engine (PTX5000 (RE-PTX-X8-64G), MX240 (RE-S-X6-64G), MX480 (RE-S-X6-64G), MX960 (RE-S-X6-64G), MX2010 (RE-MX2K-X8-64G), MX2020 (RE-MX2K-X8-64G))**

```

user@switch> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           37 degrees C / 98 degrees F
  CPU Temperature       52 degrees C / 125 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature           37 degrees C / 98 degrees F
  CPU Temperature       51 degrees C / 123 degrees F

```

**show chassis environment routing-engine (MX204 Routers)**

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master

```

**show chassis environment routing-engine (MX10008 Routers)**

```

Routing Engine 0 status:
  State                Online Master
  CPU Temperature       41 degrees C / 105 degrees F
Routing Engine 1 status:
  State                Online Standby
  CPU Temperature       40 degrees C / 104 degrees F

```

**show chassis environment routing-engine (EX9251 Switches)**

```

user@switch> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master

```

**show chassis environment routing-engine (EX9253 Switches)**

```

user@switch> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
Routing Engine 1 status:
  State                Present

```





## show chassis fan

<b>List of Syntax</b>	<a href="#">Syntax on page 380</a>
	<a href="#">Syntax (ACX4000 Series Router) on page 380</a>
	<a href="#">Syntax (ACX5048 and ACX5096 Routers) on page 380</a>
	<a href="#">Syntax (MX Series Routers) on page 380</a>
	<a href="#">Syntax (T Series Routers) on page 380</a>
	<a href="#">Syntax (MX104, MX204, MX2010, MX2020, MX2008, and MX10003 Universal Routing Platform) on page 380</a>
	<a href="#">Syntax (MX10003 Universal Routing Platform) on page 380</a>
	<a href="#">Syntax (PTX Series) on page 380</a>
	<a href="#">Syntax (QFX Series) on page 381</a>
	<a href="#">Syntax (OCX Series) on page 381</a>
	<a href="#">Syntax (TX Matrix Router) on page 381</a>
	<a href="#">Syntax (TX Matrix Plus Router) on page 381</a>
	<a href="#">Syntax (EX9251, EX9253 Switches) on page 381</a>

<b>Syntax</b>	show chassis fan
<b>Syntax (ACX4000 Series Router)</b>	show chassis fan
<b>Syntax (ACX5048 and ACX5096 Routers)</b>	show chassis fan
<b>Syntax (MX Series Routers)</b>	show chassis fan <all-members> <local> <member <i>member-id</i> >
<b>Syntax (T Series Routers)</b>	show chassis fan
<b>Syntax (MX104, MX204, MX2010, MX2020, MX2008, and MX10003 Universal Routing Platform)</b>	show chassis fan <satellite [slot-id <i>slot-id</i> [device-alias <i>alias-name</i> ]]>
<b>Syntax (MX10003 Universal Routing Platform)</b>	show chassis fan
<b>Syntax (PTX Series)</b>	show chassis fan

Syntax (QFX Series)	show chassis fan <interconnect-device <i>name</i> >
Syntax (OCX Series)	show chassis fan
Syntax (TX Matrix Router)	show chassis fan <lcc <i>number</i>   scc>
Syntax (TX Matrix Plus Router)	show chassis fan <lcc <i>number</i>   sfc <i>number</i> >
Syntax (EX9251, EX9253 Switches)	show chassis fan
Release Information	<p>Command introduced in Junos OS Release 10.0 on MX Series 5G Universal Routing Platforms, M120 routers, and M320 routers, T320 routers, T640 routers, T1600 routers, TX Matrix Routers, and TX Matrix Plus routers.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 11.4 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for T4000 routers.</p> <p>Command introduced in Junos OS Release 12.3 for PTX5000 Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms, and ACX Series Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p>
Description	<p>(T Series routers, TX Matrix routers, TX Matrix Plus routers, M120 routers, M320 routers, MX104 routers, MX2010 routers, MX2020 routers, MX2008 routers, MX Series 5G Universal Routing Platforms, QFX3008-I Interconnect devices, QFX Series, OCX Series, EX Series switches, and PTX Series Packet Transport Routers only) Show information about the fan tray and fans.</p>
Options	<p><b>all-members</b>—(MX Series routers only) (Optional) Display information about the fan tray and fans for all members of the Virtual Chassis configuration.</p> <p><b>local</b>—(MX Series routers only) (Optional) Display information about the fan tray and fans for the local Virtual Chassis member.</p>

**member *member-id***—(MX Series routers only) (Optional) Display information about the fan tray and fans for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* variable with a value 0 or 1.

**interconnect-device *name***—(QFX3000-G QFabric systems only) (Optional) Display information about the fan tray and fans for the specified QFX3008-I Interconnect device.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display information about the fan tray and fans for the specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display information about the fan tray and fans for the specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**satellite [*slot-id slot-id* | device-alias *alias-name*]**—(Junos Fusion only) (Optional) Display information about the fan tray and fans for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display information about the fan tray and fans for the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Display information about the fan tray and fans for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with 0.

**Required Privilege Level**

view

**List of Sample Output**

[show chassis fan on page 384](#)  
[show chassis fan \(QFabric Systems\) on page 384](#)  
[show chassis fan \(EX Series Switches\) on page 385](#)  
[show chassis fan \(T320 Router\) on page 386](#)  
[show chassis fan \(T640 Router\) on page 386](#)  
[show chassis fan \(T1600 Router\) on page 387](#)  
[show chassis fan \(T4000 Core Router\) on page 387](#)  
[show chassis fan \(TX Matrix Router\) on page 387](#)  
[show chassis fan \(TX Matrix Plus Router\) on page 388](#)

[show chassis fan \(TX Matrix Plus Router with 3D SIBs\) on page 390](#)  
[show chassis fan \(PTX5000 Packet Transport Router\) on page 392](#)  
[show chassis fan \(PTX10008 Router\) on page 392](#)  
[show chassis fan \(MX150\) on page 393](#)  
[show chassis fan \(MX104 Router\) on page 393](#)  
[show chassis fan \(MX2010 Router\) on page 393](#)  
[show chassis fan \(MX2020 Router\) on page 394](#)  
[show chassis fan \(MX2008 Router\) on page 394](#)  
[show chassis fan \(MX10003 Router\) on page 394](#)  
[show chassis fan \(MX204 Router\) on page 395](#)  
[show chassis fan \(MX10008 Router\) on page 395](#)  
[show chassis fan \(ACX4000 Router\) on page 395](#)  
[show chassis fan \(ACX5048 Router\) on page 396](#)  
[show chassis fan \(QFX5100 Switch and OCX Series\) on page 396](#)  
[show chassis fan \(EX9251 switches\) on page 396](#)  
[show chassis fan \(EX9253 switches\) on page 396](#)

**Output Fields** Table 14 on page 383 lists the output fields for the **show chassis fan** command. Output fields are listed in the approximate order in which they appear.

*Table 14: show chassis fan Output Fields*

Field Name	Field Description
<b>Item</b>	Fan item identifier.
<b>Status</b>	Status of the fan: <ul style="list-style-type: none"> <li>• <b>OK</b>—Fan is running properly and within the normal range.</li> <li>• <b>Check</b>—Fan is in <b>Check</b> state because of some fault or alarm condition.</li> </ul>
<b>RPM</b>	(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 5G Universal Routing Platforms, QFX3108 Interconnect devices, and EX Series switches only) Fan speed in revolutions per minute (RPM).
<b>% RPM</b>	(MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series Packet Transport Routers only) Percentage of the fan speed being used.
<b>Measurement</b>	(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 5G Universal Routing Platforms, QFX3108 Interconnect devices, and EX Series switches only) Fan speed status based on different chassis cooling requirements: <ul style="list-style-type: none"> <li>• Spinning at high speed</li> <li>• Spinning at intermediate speed</li> <li>• Spinning at normal speed</li> <li>• Spinning at low speed (except EX Series switches)</li> </ul> (MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series Packet Transport Routers only) Fan speed in revolutions per minute (RPM) for each fan in the fan tray.

## Sample Output

### show chassis fan

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Tray Fan 1	OK	3790	Spinning at normal speed
Top Tray Fan 2	OK	3769	Spinning at normal speed
Top Tray Fan 3	OK	3769	Spinning at normal speed
Top Tray Fan 4	OK	3790	Spinning at normal speed
Top Tray Fan 5	OK	3790	Spinning at normal speed
Top Tray Fan 6	OK	3769	Spinning at normal speed
Top Tray Fan 7	OK	3790	Spinning at normal speed
Top Tray Fan 8	OK	3769	Spinning at normal speed
Top Tray Fan 9	OK	3769	Spinning at normal speed
Top Tray Fan 10	OK	3790	Spinning at normal speed
Top Tray Fan 11	OK	3790	Spinning at normal speed
Top Tray Fan 12	OK	3769	Spinning at normal speed
Bottom Tray Fan 1	OK	2880	Spinning at normal speed
Bottom Tray Fan 2	OK	2912	Spinning at normal speed
Bottom Tray Fan 3	OK	2928	Spinning at normal speed
Bottom Tray Fan 4	OK	2896	Spinning at normal speed
Bottom Tray Fan 5	OK	2896	Spinning at normal speed
Bottom Tray Fan 6	OK	2928	Spinning at normal speed

### show chassis fan (QFabric Systems)

```
user@host> show chassis fan interconnect-device interconnect1
```

Item	Status	RPM	Measurement
TFT 0 Fan 0	OK	2849	Spinning at normal speed
TFT 0 Fan 1	OK	2821	Spinning at normal speed
TFT 0 Fan 2	OK	2735	Spinning at normal speed
TFT 0 Fan 3	OK	2815	Spinning at normal speed
TFT 0 Fan 4	OK	2828	Spinning at normal speed
TFT 0 Fan 5	OK	2863	Spinning at normal speed
BFT 1 Fan 0	OK	2941	Spinning at normal speed
BFT 1 Fan 1	OK	3008	Spinning at normal speed
BFT 1 Fan 2	OK	3073	Spinning at normal speed
BFT 1 Fan 3	OK	2925	Spinning at normal speed
BFT 1 Fan 4	OK	2863	Spinning at normal speed
BFT 1 Fan 5	OK	2933	Spinning at normal speed
SFT 0 Fan 0 Rotor 0	OK	15472	Spinning at normal speed
SFT 0 Fan 0 Rotor 1	OK	14477	Spinning at normal speed
SFT 0 Fan 1 Rotor 0	OK	15561	Spinning at normal speed
SFT 0 Fan 1 Rotor 1	OK	14210	Spinning at normal speed
SFT 0 Fan 2 Rotor 0	OK	16167	Spinning at normal speed
SFT 0 Fan 2 Rotor 1	OK	14248	Spinning at normal speed
SFT 0 Fan 3 Rotor 0	OK	16463	Spinning at normal speed
SFT 0 Fan 3 Rotor 1	OK	14099	Spinning at normal speed
SFT 1 Fan 0 Rotor 0	OK	15083	Spinning at normal speed
SFT 1 Fan 0 Rotor 1	OK	13533	Spinning at normal speed
SFT 1 Fan 1 Rotor 0	OK	16071	Spinning at normal speed
SFT 1 Fan 1 Rotor 1	OK	14400	Spinning at normal speed
SFT 1 Fan 2 Rotor 0	OK	15517	Spinning at normal speed
SFT 1 Fan 2 Rotor 1	OK	14210	Spinning at normal speed
SFT 1 Fan 3 Rotor 0	OK	16413	Spinning at normal speed

```

SFT 1 Fan 3 Rotor 1    OK    14400    Spinning at normal speed
SFT 2 Fan 0 Rotor 0    OK    15297    Spinning at normal speed
SFT 2 Fan 0 Rotor 1    OK    14634    Spinning at normal speed
SFT 2 Fan 1 Rotor 0    OK    15561    Spinning at normal speed
SFT 2 Fan 1 Rotor 1    OK    14285    Spinning at normal speed
SFT 2 Fan 2 Rotor 0    OK    15835    Spinning at normal speed
SFT 2 Fan 2 Rotor 1    OK    14400    Spinning at normal speed
SFT 2 Fan 3 Rotor 0    OK    15789    Spinning at normal speed
SFT 2 Fan 3 Rotor 1    OK    14323    Spinning at normal speed
SFT 3 Fan 0 Rotor 0    OK    16314    Spinning at normal speed
SFT 3 Fan 0 Rotor 1    OK    14876    Spinning at normal speed
SFT 3 Fan 1 Rotor 0    OK    15835    Spinning at normal speed
SFT 3 Fan 1 Rotor 1    OK    14323    Spinning at normal speed
SFT 3 Fan 2 Rotor 0    OK    16265    Spinning at normal speed
SFT 3 Fan 2 Rotor 1    OK    14594    Spinning at normal speed
SFT 3 Fan 3 Rotor 0    OK    16071    Spinning at normal speed
SFT 3 Fan 3 Rotor 1    OK    14323    Spinning at normal speed
SFT 4 Fan 0 Rotor 0    OK    15652    Spinning at normal speed
SFT 4 Fan 0 Rotor 1    OK    14438    Spinning at normal speed
SFT 4 Fan 1 Rotor 0    OK    16167    Spinning at normal speed
SFT 4 Fan 1 Rotor 1    OK    14555    Spinning at normal speed
SFT 4 Fan 2 Rotor 0    OK    16023    Spinning at normal speed
SFT 4 Fan 2 Rotor 1    OK    14361    Spinning at normal speed
SFT 4 Fan 3 Rotor 0    OK    16216    Spinning at normal speed
SFT 4 Fan 3 Rotor 1    OK    14438    Spinning at normal speed
SFT 5 Fan 0 Rotor 0    OK    15297    Spinning at normal speed
SFT 5 Fan 0 Rotor 1    OK    14173    Spinning at normal speed
SFT 5 Fan 1 Rotor 0    OK    15472    Spinning at normal speed
SFT 5 Fan 1 Rotor 1    OK    13846    Spinning at normal speed
SFT 5 Fan 2 Rotor 0    OK    15340    Spinning at normal speed
SFT 5 Fan 2 Rotor 1    OK    13917    Spinning at normal speed
SFT 5 Fan 3 Rotor 0    OK    15835    Spinning at normal speed
SFT 5 Fan 3 Rotor 1    OK    13917    Spinning at normal speed
SFT 6 Fan 0 Rotor 0    OK    15743    Spinning at normal speed
SFT 6 Fan 0 Rotor 1    OK    14594    Spinning at normal speed
SFT 6 Fan 1 Rotor 0    OK    16167    Spinning at normal speed
SFT 6 Fan 1 Rotor 1    OK    14634    Spinning at normal speed
SFT 6 Fan 2 Rotor 0    OK    16167    Spinning at normal speed
SFT 6 Fan 2 Rotor 1    OK    14516    Spinning at normal speed
SFT 6 Fan 3 Rotor 0    OK    16666    Spinning at normal speed
SFT 6 Fan 3 Rotor 1    OK    14438    Spinning at normal speed
SFT 7 Fan 0 Rotor 0    OK    15517    Spinning at normal speed
SFT 7 Fan 0 Rotor 1    OK    14438    Spinning at normal speed
SFT 7 Fan 1 Rotor 0    OK    15517    Spinning at normal speed
SFT 7 Fan 1 Rotor 1    OK    14361    Spinning at normal speed
SFT 7 Fan 2 Rotor 0    OK    16167    Spinning at normal speed
SFT 7 Fan 2 Rotor 1    OK    14555    Spinning at normal speed
SFT 7 Fan 3 Rotor 0    OK    15697    Spinning at normal speed
SFT 7 Fan 3 Rotor 1    OK    14361    Spinning at normal speed

```

### show chassis fan (EX Series Switches)

```
user@host> show chassis fan
```

```

Item           Status  RPM    Measurement
Fan 1          OK      3477    Spinning at normal speed
Fan 2          OK      3477    Spinning at normal speed
Fan 3          OK      3479    Spinning at normal speed
Fan 4          OK      3508    Spinning at normal speed

```

Fan 5	OK	3517	Spinning at normal speed
Fan 6	OK	3531	Spinning at normal speed
Fan 7	OK	3439	Spinning at normal speed
Fan 8	OK	3424	Spinning at normal speed
Fan 9	OK	3413	Spinning at normal speed
Fan 10	OK	3439	Spinning at normal speed
Fan 11	OK	3446	Spinning at normal speed
Fan 12	OK	3432	Spinning at normal speed

### show chassis fan (T320 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	2850	Spinning at normal speed
Top Left Middle fan	OK	2820	Spinning at normal speed
Top Left Rear fan	OK	2970	Spinning at normal speed
Top Right Front fan	OK	2790	Spinning at normal speed
Top Right Middle fan	OK	2640	Spinning at normal speed
Top Right Rear fan	OK	2790	Spinning at normal speed
Bottom Left Front fan	OK	2520	Spinning at normal speed
Bottom Left Middle fan	OK	2610	Spinning at normal speed
Bottom Left Rear fan	OK	2550	Spinning at normal speed
Bottom Right Front fan	OK	2610	Spinning at normal speed
Bottom Right Middle fan	OK	2880	Spinning at normal speed
Bottom Right Rear fan	OK	2790	Spinning at normal speed
Rear Tray Top fan	OK	2130	Spinning at normal speed
Rear Tray Second fan	OK	2190	Spinning at normal speed
Rear Tray Middle fan	OK	2250	Spinning at normal speed
Rear Tray Fourth fan	OK	2220	Spinning at normal speed
Rear Tray Bottom fan	OK	2280	Spinning at normal speed

### show chassis fan (T640 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3390	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3390	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	5220	Spinning at normal speed
Rear Tray Second fan	OK	5220	Spinning at normal speed
Rear Tray Third fan	OK	5220	Spinning at normal speed
Rear Tray Fourth fan	OK	5220	Spinning at normal speed
Rear Tray Fifth fan	OK	5220	Spinning at normal speed
Rear Tray Sixth fan	OK	5220	Spinning at normal speed
Rear Tray Seventh fan	OK	5220	Spinning at normal speed
Rear Tray Bottom fan	OK	5220	Spinning at normal speed



## show chassis fan (T1600 Router)

user@host&gt; show chassis fan

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3450	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3390	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3390	Spinning at normal speed
Bottom Right Middle fan	OK	3420	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	5190	Spinning at normal speed
Rear Tray Second fan	OK	5190	Spinning at normal speed
Rear Tray Third fan	OK	5190	Spinning at normal speed
Rear Tray Fourth fan	OK	5190	Spinning at normal speed
Rear Tray Fifth fan	OK	5190	Spinning at normal speed
Rear Tray Sixth fan	OK	5190	Spinning at normal speed
Rear Tray Seventh fan	OK	5190	Spinning at normal speed
Rear Tray Bottom fan	OK	5190	Spinning at normal speed

## show chassis fan (T4000 Core Router)

user@host&gt; show chassis fan

Item	Status	RPM	Measurement
Top Left Front fan	OK	5190	Spinning at high speed
Top Left Middle fan	OK	5220	Spinning at high speed
Top Left Rear fan	OK	5190	Spinning at high speed
Top Right Front fan	OK	5160	Spinning at high speed
Top Right Middle fan	OK	5190	Spinning at high speed
Top Right Rear fan	OK	5160	Spinning at high speed
Bottom Left Front fan	OK	6030	Spinning at high speed
Bottom Left Middle fan	OK	6090	Spinning at high speed
Bottom Left Rear fan	OK	6090	Spinning at high speed
Bottom Right Front fan	OK	6030	Spinning at high speed
Bottom Right Middle fan	OK	6060	Spinning at high speed
Bottom Right Rear fan	OK	6060	Spinning at high speed
Rear Tray Top fan	OK	10000	Spinning at high speed
Rear Tray Second fan	OK	10000	Spinning at high speed
Rear Tray Third fan	OK	10000	Spinning at high speed
Rear Tray Fourth fan	OK	10000	Spinning at high speed
Rear Tray Fifth fan	OK	10000	Spinning at high speed
Rear Tray Sixth fan	OK	10000	Spinning at high speed
Rear Tray Seventh fan	OK	10000	Spinning at high speed
Rear Tray Bottom fan	OK	10000	Spinning at high speed

## show chassis fan (TX Matrix Router)

user@host&gt; show chassis fan

scc-re0:

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3390	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3390	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3450	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3420	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray Top fan	OK	3420	Spinning at normal speed
Rear Tray Second fan	OK	5190	Spinning at normal speed
Rear Tray Third fan	OK	5190	Spinning at normal speed
Rear Tray Fourth fan	OK	5190	Spinning at normal speed
Rear Tray Fifth fan	OK	3420	Spinning at normal speed
Rear Tray Sixth fan	OK	3420	Spinning at normal speed
Rear Tray Seventh fan	OK	3420	Spinning at normal speed
Rear Tray Bottom fan	OK	3420	Spinning at normal speed

lcc2-re0:

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3450	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3450	Spinning at normal speed
Top Right Rear fan	OK	3360	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3480	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray Top fan	OK	3420	Spinning at normal speed
Rear Tray Second fan	OK	3420	Spinning at normal speed
Rear Tray Third fan	OK	3420	Spinning at normal speed
Rear Tray Fourth fan	OK	3420	Spinning at normal speed
Rear Tray Fifth fan	OK	3420	Spinning at normal speed
Rear Tray Sixth fan	OK	3420	Spinning at normal speed
Rear Tray Seventh fan	OK	3420	Spinning at normal speed
Rear Tray Bottom fan	OK	3420	Spinning at normal speed

### show chassis fan (TX Matrix Plus Router)

user@host&gt; show chassis fan

sfc0-re0:

Item	Status	RPM	Measurement
Fan Tray 0 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 0 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 0 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 0 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 0 Fan 5	OK	4350	Spinning at normal speed
Fan Tray 0 Fan 6	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 1	OK	4410	Spinning at normal speed

Fan Tray 1 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 5	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 1	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 4	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 8	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 9	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 3 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 3 Fan 4	OK	4440	Spinning at normal speed
Fan Tray 3 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 3 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 3 Fan 8	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 9	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 1	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 2	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 4 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 4 Fan 5	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 8	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 9	OK	4410	Spinning at normal speed
Fan Tray 5 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 5 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 4	OK	4350	Spinning at normal speed
Fan Tray 5 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 5 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 5 Fan 8	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 9	OK	4410	Spinning at normal speed

1cc0-re0:

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3450	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3420	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	7050	Spinning at normal speed
Rear Tray Second fan	OK	7050	Spinning at normal speed
Rear Tray Third fan	OK	7050	Spinning at normal speed

Rear Tray Fourth fan	OK	7050	Spinning at normal speed
Rear Tray Fifth fan	OK	7050	Spinning at normal speed
Rear Tray Sixth fan	OK	7050	Spinning at normal speed
Rear Tray Seventh fan	OK	7050	Spinning at normal speed
Rear Tray Bottom fan	OK	7050	Spinning at normal speed

### show chassis fan (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fan
```

```
sfc0-re0:
```

Item	Status	RPM	Measurement
Fan Tray 0 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 0 Fan 2	OK	4860	Spinning at normal speed
Fan Tray 0 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 0 Fan 4	OK	4800	Spinning at normal speed
Fan Tray 0 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 0 Fan 6	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 1	OK	4800	Spinning at normal speed
Fan Tray 1 Fan 2	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 3	OK	4800	Spinning at normal speed
Fan Tray 1 Fan 4	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 5	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 6	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 1	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 2	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 6	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 7	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 8	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 9	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 1	OK	4860	Spinning at normal speed
Fan Tray 3 Fan 2	OK	4860	Spinning at normal speed
Fan Tray 3 Fan 3	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 6	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 7	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 8	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 9	OK	4800	Spinning at normal speed
Fan Tray 4 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 2	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 6	OK	4860	Spinning at normal speed
Fan Tray 4 Fan 7	OK	4800	Spinning at normal speed
Fan Tray 4 Fan 8	OK	4860	Spinning at normal speed
Fan Tray 4 Fan 9	OK	4770	Spinning at normal speed
Fan Tray 5 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 2	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 4	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 5	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 6	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 7	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 8	OK	4830	Spinning at normal speed

Fan Tray 5 Fan 9	Check	2010			
lcc0-re0:					
Item	Status	RPM	Measurement		
Top Left Front fan	OK	3420	Spinning	at normal	speed
Top Left Middle fan	OK	3390	Spinning	at normal	speed
Top Left Rear fan	OK	3390	Spinning	at normal	speed
Top Right Front fan	OK	3420	Spinning	at normal	speed
Top Right Middle fan	OK	3420	Spinning	at normal	speed
Top Right Rear fan	OK	3450	Spinning	at normal	speed
Bottom Left Front fan	OK	3420	Spinning	at normal	speed
Bottom Left Middle fan	OK	3390	Spinning	at normal	speed
Bottom Left Rear fan	OK	3420	Spinning	at normal	speed
Bottom Right Front fan	OK	3420	Spinning	at normal	speed
Bottom Right Middle fan	OK	3390	Spinning	at normal	speed
Bottom Right Rear fan	OK	3420	Spinning	at normal	speed
Rear Tray fan 1 (Top)	OK	7740	Spinning	at normal	speed
Rear Tray fan 2	OK	7740	Spinning	at normal	speed
Rear Tray fan 3	OK	7740	Spinning	at normal	speed
Rear Tray fan 4	OK	7740	Spinning	at normal	speed
Rear Tray fan 5	OK	7740	Spinning	at normal	speed
Rear Tray fan 6	OK	7740	Spinning	at normal	speed
Rear Tray fan 7	OK	7740	Spinning	at normal	speed
Rear Tray fan 8	OK	7740	Spinning	at normal	speed
Rear Tray fan 9	OK	7740	Spinning	at normal	speed
Rear Tray fan 10	OK	7740	Spinning	at normal	speed
Rear Tray fan 11	OK	7740	Spinning	at normal	speed
Rear Tray fan 12	OK	7740	Spinning	at normal	speed
Rear Tray fan 13	OK	7740	Spinning	at normal	speed
Rear Tray fan 14	OK	7740	Spinning	at normal	speed
Rear Tray fan 15	OK	7740	Spinning	at normal	speed
Rear Tray fan 16 (Bottom)	OK	7740	Spinning	at normal	speed
lcc2-re0:					
Item	Status	RPM	Measurement		
Top Left Front fan	OK	3420	Spinning	at normal	speed
Top Left Middle fan	OK	3390	Spinning	at normal	speed
Top Left Rear fan	OK	3420	Spinning	at normal	speed
Top Right Front fan	OK	3420	Spinning	at normal	speed
Top Right Middle fan	OK	3420	Spinning	at normal	speed
Top Right Rear fan	OK	3450	Spinning	at normal	speed
Bottom Left Front fan	OK	3420	Spinning	at normal	speed
Bottom Left Middle fan	OK	3390	Spinning	at normal	speed
Bottom Left Rear fan	OK	3420	Spinning	at normal	speed
Bottom Right Front fan	OK	3420	Spinning	at normal	speed
Bottom Right Middle fan	OK	3390	Spinning	at normal	speed
Bottom Right Rear fan	OK	3420	Spinning	at normal	speed
Rear Tray fan 1 (Top)	OK	7740	Spinning	at normal	speed
Rear Tray fan 2	OK	7740	Spinning	at normal	speed
Rear Tray fan 3	OK	7740	Spinning	at normal	speed
Rear Tray fan 4	OK	7740	Spinning	at normal	speed
Rear Tray fan 5	OK	7740	Spinning	at normal	speed
Rear Tray fan 6	OK	7740	Spinning	at normal	speed
Rear Tray fan 7	OK	7740	Spinning	at normal	speed
Rear Tray fan 8	OK	7740	Spinning	at normal	speed
Rear Tray fan 9	OK	7740	Spinning	at normal	speed
Rear Tray fan 10	OK	7740	Spinning	at normal	speed
Rear Tray fan 11	OK	7740	Spinning	at normal	speed

Rear Tray fan 12	OK	7740	Spinning at normal speed
Rear Tray fan 13	OK	7740	Spinning at normal speed
Rear Tray fan 14	OK	7740	Spinning at normal speed
Rear Tray fan 15	OK	7740	Spinning at normal speed
Rear Tray fan 16 (Bottom)	OK	7740	Spinning at normal speed

### show chassis fan (PTX5000 Packet Transport Router)

```
user@host> show chassis fan
```

```
user@host> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	29%	2700 RPM
Fan Tray 0 Fan 2	OK	29%	2700 RPM
Fan Tray 0 Fan 3	OK	29%	2742 RPM
Fan Tray 0 Fan 4	OK	29%	2700 RPM
Fan Tray 0 Fan 5	OK	30%	2828 RPM
Fan Tray 0 Fan 6	OK	30%	2828 RPM
Fan Tray 0 Fan 7	OK	29%	2700 RPM
Fan Tray 0 Fan 8	OK	30%	2785 RPM
Fan Tray 0 Fan 9	OK	30%	2828 RPM
Fan Tray 0 Fan 10	OK	30%	2828 RPM
Fan Tray 0 Fan 11	OK	30%	2785 RPM
Fan Tray 0 Fan 12	OK	30%	2828 RPM
Fan Tray 0 Fan 13	OK	31%	2871 RPM
Fan Tray 0 Fan 14	OK	30%	2828 RPM
Fan Tray 1 Fan 1	OK	42%	3033 RPM
Fan Tray 1 Fan 2	OK	42%	3066 RPM
Fan Tray 1 Fan 3	OK	43%	3099 RPM
Fan Tray 1 Fan 4	OK	43%	3166 RPM
Fan Tray 1 Fan 5	OK	45%	3266 RPM
Fan Tray 1 Fan 6	OK	43%	3133 RPM
Fan Tray 2 Fan 1	OK	29%	2099 RPM
Fan Tray 2 Fan 2	OK	30%	2199 RPM
Fan Tray 2 Fan 3	OK	30%	2166 RPM
Fan Tray 2 Fan 4	OK	33%	2399 RPM
Fan Tray 2 Fan 5	OK	29%	2133 RPM
Fan Tray 2 Fan 6	OK	32%	2366 RPM

### show chassis fan (PTX10008 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Fan Tray 0 Fan 0	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 1	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 2	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 3	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 4	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 5	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 6	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 7	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 8	OK	8850	Spinning at normal speed
Fan Tray 0 Fan 9	OK	8850	Spinning at normal speed
Fan Tray 0 Fan 10	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 0	OK	9150	Spinning at normal speed
Fan Tray 1 Fan 1	OK	9150	Spinning at normal speed
Fan Tray 1 Fan 2	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 3	OK	9000	Spinning at normal speed

Fan Tray 1 Fan 4	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 5	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 6	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 7	OK	9150	Spinning at normal speed
Fan Tray 1 Fan 8	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 9	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 10	OK	9000	Spinning at normal speed

### show chassis fan (MX150)

user@host > show chassis fan

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	7419	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	7419	Spinning at normal speed

### show chassis fan (MX104 Router)

user@host > show chassis fan

Item	Status	RPM	Measurement
Fan 1	OK	5640	Spinning at normal speed
Fan 2	OK	5640	Spinning at normal speed
Fan 3	OK	5760	Spinning at normal speed
Fan 4	OK	5640	Spinning at normal speed
Fan 5	OK	5640	Spinning at normal speed

### show chassis fan (MX2010 Router)

user@host > show chassis fan

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	37%	3360 RPM
Fan Tray 0 Fan 2	OK	38%	3480 RPM
Fan Tray 0 Fan 3	OK	37%	3360 RPM
Fan Tray 0 Fan 4	OK	37%	3360 RPM
Fan Tray 0 Fan 5	OK	38%	3480 RPM
Fan Tray 0 Fan 6	OK	37%	3360 RPM
Fan Tray 1 Fan 1	OK	38%	3480 RPM
Fan Tray 1 Fan 2	OK	40%	3600 RPM
Fan Tray 1 Fan 3	OK	38%	3480 RPM
Fan Tray 1 Fan 4	OK	38%	3480 RPM
Fan Tray 1 Fan 5	OK	38%	3480 RPM
Fan Tray 1 Fan 6	OK	38%	3480 RPM
Fan Tray 2 Fan 1	OK	38%	3480 RPM
Fan Tray 2 Fan 2	OK	41%	3720 RPM
Fan Tray 2 Fan 3	OK	38%	3480 RPM
Fan Tray 2 Fan 4	OK	38%	3480 RPM
Fan Tray 2 Fan 5	OK	38%	3480 RPM
Fan Tray 2 Fan 6	OK	38%	3480 RPM
Fan Tray 3 Fan 1	OK	38%	3480 RPM
Fan Tray 3 Fan 2	OK	40%	3600 RPM
Fan Tray 3 Fan 3	OK	40%	3600 RPM
Fan Tray 3 Fan 4	OK	40%	3600 RPM
Fan Tray 3 Fan 5	OK	40%	3600 RPM
Fan Tray 3 Fan 6	OK	38%	3480 RPM

## show chassis fan (MX2020 Router)

user@host &gt; show chassis fan

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	37%	3360 RPM
Fan Tray 0 Fan 2	OK	37%	3360 RPM
Fan Tray 0 Fan 3	OK	36%	3240 RPM
Fan Tray 0 Fan 4	OK	37%	3360 RPM
Fan Tray 0 Fan 5	OK	37%	3360 RPM
Fan Tray 0 Fan 6	OK	37%	3360 RPM
Fan Tray 1 Fan 1	OK	37%	3360 RPM
Fan Tray 1 Fan 2	OK	37%	3360 RPM
Fan Tray 1 Fan 3	OK	37%	3360 RPM
Fan Tray 1 Fan 4	OK	37%	3360 RPM
Fan Tray 1 Fan 5	OK	37%	3360 RPM
Fan Tray 1 Fan 6	OK	36%	3240 RPM
Fan Tray 2 Fan 1	OK	37%	3360 RPM
Fan Tray 2 Fan 2	OK	37%	3360 RPM
Fan Tray 2 Fan 3	OK	37%	3360 RPM
Fan Tray 2 Fan 4	OK	37%	3360 RPM
Fan Tray 2 Fan 5	OK	37%	3360 RPM
Fan Tray 2 Fan 6	OK	38%	3480 RPM
Fan Tray 3 Fan 1	OK	38%	3480 RPM
Fan Tray 3 Fan 2	OK	38%	3480 RPM
Fan Tray 3 Fan 3	OK	38%	3480 RPM
Fan Tray 3 Fan 4	OK	37%	3360 RPM
Fan Tray 3 Fan 5	OK	37%	3360 RPM
Fan Tray 3 Fan 6	OK	37%	3360 RPM

## show chassis fan (MX2008 Router)

user@host &gt; show chassis fan

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	64%	5760 RPM
Fan Tray 0 Fan 2	OK	62%	5640 RPM
Fan Tray 0 Fan 3	OK	64%	5760 RPM
Fan Tray 0 Fan 4	OK	60%	5400 RPM
Fan Tray 0 Fan 5	OK	61%	5520 RPM
Fan Tray 0 Fan 6	OK	62%	5640 RPM
Fan Tray 1 Fan 1	OK	61%	5520 RPM
Fan Tray 1 Fan 2	OK	61%	5520 RPM
Fan Tray 1 Fan 3	OK	61%	5520 RPM
Fan Tray 1 Fan 4	OK	62%	5640 RPM
Fan Tray 1 Fan 5	OK	62%	5640 RPM
Fan Tray 1 Fan 6	OK	64%	5760 RPM

## show chassis fan (MX10003 Router)

user@host&gt; show chassis fan

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	7296 RPM
Fan Tray 0 Fan 1	OK	40%	6656 RPM
Fan Tray 0 Fan 2	OK	40%	7296 RPM
Fan Tray 0 Fan 3	OK	40%	6400 RPM
Fan Tray 1 Fan 0	OK	40%	7296 RPM
Fan Tray 1 Fan 1	OK	40%	6528 RPM



Fan Tray 1 Fan 2	OK	40%	7296 RPM
Fan Tray 1 Fan 3	OK	40%	6784 RPM
Fan Tray 2 Fan 0	OK	40%	7552 RPM
Fan Tray 2 Fan 1	OK	40%	6784 RPM
Fan Tray 2 Fan 2	OK	40%	7424 RPM
Fan Tray 2 Fan 3	OK	40%	6528 RPM
Fan Tray 3 Fan 0	OK	40%	7552 RPM
Fan Tray 3 Fan 1	OK	40%	6528 RPM
Fan Tray 3 Fan 2	OK	40%	7296 RPM
Fan Tray 3 Fan 3	OK	40%	6656 RPM

**show chassis fan (MX204 Router)**

```
user@host> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	9344 RPM
Fan Tray 0 Fan 1	OK	40%	8576 RPM
Fan Tray 1 Fan 0	OK	40%	9344 RPM
Fan Tray 1 Fan 1	OK	40%	8832 RPM
Fan Tray 2 Fan 0	OK	40%	9344 RPM
Fan Tray 2 Fan 1	OK	40%	8576 RPM

**show chassis fan (MX10008 Router)**

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Fan Tray 0 Fan 0	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 1	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 2	OK	9900	Spinning at normal speed
Fan Tray 0 Fan 3	OK	9600	Spinning at normal speed
Fan Tray 0 Fan 4	Failed		
Fan Tray 0 Fan 5	Failed		
Fan Tray 0 Fan 6	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 7	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 8	OK	9600	Spinning at normal speed
Fan Tray 0 Fan 9	OK	9600	Spinning at normal speed
Fan Tray 0 Fan 10	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 0	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 1	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 2	OK	9750	Spinning at normal speed
Fan Tray 1 Fan 3	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 4	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 5	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 6	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 7	OK	9750	Spinning at normal speed
Fan Tray 1 Fan 8	OK	9750	Spinning at normal speed
Fan Tray 1 Fan 9	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 10	OK	9600	Spinning at normal speed

**show chassis fan (ACX4000 Router)**

```
user@host > show chassis fan
```

Item	Status	RPM	Measurement
Fan 1	OK	4140	Spinning at normal speed
Fan 2	OK	4200	Spinning at normal speed

**show chassis fan (ACX5048 Router)**

```
user@host > show chassis fan
```

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	18305	Spinning at normal speed
FPC 0 Tray 0 Fan 1	OK	15743	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	18305	Spinning at normal speed
FPC 0 Tray 1 Fan 1	OK	15606	Spinning at normal speed
FPC 0 Tray 2 Fan 0	OK	19014	Spinning at normal speed
FPC 0 Tray 2 Fan 1	OK	16167	Spinning at normal speed
FPC 0 Tray 3 Fan 0	OK	18947	Spinning at normal speed
FPC 0 Tray 3 Fan 1	OK	16265	Spinning at normal speed
FPC 0 Tray 4 Fan 0	OK	18120	Spinning at normal speed
FPC 0 Tray 4 Fan 1	OK	15743	Spinning at normal speed

**show chassis fan (QFX5100 Switch and OCX Series)**

```
user@switch > show chassis fan
```

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	6428	Spinning at normal speed
FPC 0 Tray 0 Fan 1	OK	5515	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	6360	Spinning at normal speed
FPC 0 Tray 1 Fan 1	OK	5532	Spinning at normal speed

**show chassis fan (EX9251 switches)**

```
user@switch > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	9600 RPM
Fan Tray 0 Fan 1	OK	40%	8832 RPM
Fan Tray 1 Fan 0	OK	40%	9728 RPM
Fan Tray 1 Fan 1	OK	40%	9088 RPM
Fan Tray 2	Absent		

**show chassis fan (EX9253 switches)**

```
user@switch > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	7552 RPM
Fan Tray 0 Fan 1	OK	40%	6272 RPM
Fan Tray 0 Fan 2	OK	40%	7552 RPM
Fan Tray 0 Fan 3	OK	40%	6272 RPM
Fan Tray 1 Fan 0	OK	40%	7552 RPM
Fan Tray 1 Fan 1	OK	40%	6272 RPM
Fan Tray 1 Fan 2	OK	40%	7552 RPM
Fan Tray 1 Fan 3	OK	40%	6272 RPM
Fan Tray 2 Fan 0	OK	40%	7552 RPM
Fan Tray 2 Fan 1	OK	40%	6400 RPM
Fan Tray 2 Fan 2	OK	40%	7552 RPM

Fan Tray 2 Fan 3	OK	40%	6272 RPM
Fan Tray 3 Fan 0	OK	40%	7552 RPM
Fan Tray 3 Fan 1	OK	40%	6400 RPM
Fan Tray 3 Fan 2	OK	40%	7552 RPM
Fan Tray 3 Fan 3	OK	40%	6272 RPM

## show chassis firmware

- List of Syntax**
- Syntax on page 398
  - Syntax (TX Matrix Routers) on page 398
  - Syntax (TX Matrix Plus Routers) on page 398
  - Syntax (MX Series Routers) on page 398
  - Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms) on page 398
  - Syntax (MX10008 Universal Routing Platforms) on page 398
  - Syntax (PTX Series) on page 398
  - Syntax (QFX Series) on page 399
  - Syntax (OCX Series) on page 399
  - Syntax (ACX Series Universal Metro Routers) on page 399
  - Syntax (ACX5048 and ACX5096 Routers) on page 399
  - Syntax (ACX500 Routers) on page 399
  - Syntax (EX Series Switches) on page 399

**Syntax** show chassis firmware

**Syntax (TX Matrix Routers)** show chassis firmware  
<lcc *number* | scc>

**Syntax (TX Matrix Plus Routers)** show chassis firmware  
<lcc *number* | sfc *number*>

**Syntax (MX Series Routers)** show chassis firmware  
<all-members>  
<local>  
<member *member-id*>

**Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms)** show chassis firmware  
<satellite [slot-id *slot-id* | device-alias *alias-name*]>

**Syntax (MX10008 Universal Routing Platforms)** show chassis firmware

**Syntax (PTX Series)** show chassis firmware

Syntax (QFX Series)	show chassis firmware interconnect-device <i>name</i> node-device <i>name</i>
Syntax (OCX Series)	show chassis firmware
Syntax (ACX Series Universal Metro Routers)	show chassis firmware
Syntax (ACX5048 and ACX5096 Routers)	show chassis firmware interconnect-device <i>name</i> node-device <i>name</i>
Syntax (ACX500 Routers)	show chassis firmware
Syntax (EX Series Switches)	show chassis firmware <detail> <satellite [slot-id <i>slot-id</i>  device-alias <i>alias-name</i> ]>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced for EX8200 switches in Junos OS Release 10.2 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms, and ACX4000 Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p>

**Description** On routers and switches, display the version levels of the firmware running on the System Control Board (SCB), Switching and Forwarding Module (SFM), System and Switch Board (SSB), Forwarding Engine Board (FEB), Flexible PIC Concentrators (FPCs), and Routing Engines. On a TX Matrix Plus router, display the version levels of the firmware running on the FPCs and the Switch Processor Mezzanine Board (SPMBs).

On EX2200, EX3200, EX4200, QFX Series, and OCX Series switches, display the version levels of the firmware running on the switch. On an EX8208 switch, display the version levels of the firmware running on the Switch Fabric and Routing Engine (SRE) modules and on the line cards (shown as FPCs). On an EX8216 switch, display the version levels of the firmware running on the Routing Engine (RE) modules and on the line cards (shown as FPCs).

**Options** **none**—Display the version levels of the firmware running. For an EX4200 switch that is a member of a Virtual Chassis, display version levels for all members. For a TX Matrix router, display version levels for the firmware on the TX Matrix router and on all the T640 routers connected to the TX Matrix router. For a TX Matrix Plus router, display version levels for the firmware on the TX Matrix Plus router and on all the routers connected to the TX Matrix Plus router.

**all-members**—(MX Series routers only) (Optional) Display the version levels of the firmware running for all members of the Virtual Chassis configuration.

**interconnect-device *name***—(QFabric systems) (Optional) Display the version levels of the firmware running on the Interconnect device.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display version levels for the firmware on a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display the version levels for the firmware on a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display the version levels of the firmware running for the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display the version levels of the firmware running for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-device**—(QFabric systems only) (Optional) Display the version levels of the firmware running on the Node device.

**satellite [*slot-id slot-id* | *device-alias alias-name*]**—(Junos Fusion only) (Optional) Display version levels of the firmware running for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

**scc**—(TX Matrix router only) (Optional) Display version levels for the firmware on the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus router only) (Optional) Display version levels for the firmware on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

**detail**—(EX3200, EX3300, EX4200, and EX4500 standalone and Virtual Chassis member switches only) (Optional) Display version levels of the firmware running on the switch for its programmable hardware components.

**Required Privilege Level** view

**List of Sample Output**

- [show chassis firmware \(M10 Router\) on page 403](#)
- [show chassis firmware \(M20 Router\) on page 403](#)
- [show chassis firmware \(M40 Router\) on page 403](#)
- [show chassis firmware \(M120 Router\) on page 403](#)
- [show chassis firmware \(M160 Router\) on page 403](#)
- [show chassis firmware \(MX150\) on page 404](#)
- [show chassis firmware \(MX104 Router\) on page 404](#)
- [show chassis firmware \(MX240 Router\) on page 404](#)
- [show chassis firmware \(MX480 Router\) on page 404](#)
- [show chassis firmware \(MX960 Router\) on page 404](#)
- [show chassis firmware \(MX2010 Router\) on page 404](#)
- [show chassis firmware \(MX2020 Router\) on page 405](#)
- [show chassis firmware \(MX2008 Router\) on page 406](#)
- [show chassis firmware \(MX10003\) on page 406](#)
- [show chassis firmware \(MX204 Router\) on page 406](#)
- [show chassis firmware \(MX10008 Router\) on page 407](#)
- [show chassis firmware \(MX240, MX480, MX960 Router with Application Services Modular Line Card\) on page 408](#)
- [show chassis firmware \(EX4200 Switch\) on page 408](#)
- [show chassis firmware \(EX8200 Switch\) on page 408](#)
- [show chassis firmware \(EX9200 Switch\) on page 408](#)
- [show chassis firmware \(EX9251 Switch\) on page 408](#)
- [show chassis firmware \(EX9253 Switch\) on page 409](#)
- [show chassis firmware lcc \(TX Matrix Router\) on page 409](#)
- [show chassis firmware scc \(TX Matrix Router\) on page 409](#)
- [show chassis firmware \(TX Matrix Plus Router\) on page 409](#)

[show chassis firmware lcc \(TX Matrix Plus Router\) on page 411](#)  
[show chassis firmware sfc \(TX Matrix Plus Router\) on page 411](#)  
[show chassis firmware \(QFX Series and OCX Series\) on page 412](#)  
[show chassis firmware \(PTX1000 Packet Transport Routers\) on page 412](#)  
[show chassis firmware \(PTX10008 Routers\) on page 412](#)  
[show chassis firmware interconnect-device \(QFabric System\) on page 413](#)  
[show chassis firmware \(ACX2000 Universal Metro Router\) on page 413](#)  
[show chassis firmware detail \(EX3300 Switch\) on page 413](#)  
[show chassis firmware \(MX Routers with Media Services Blade \[MSB\]\) on page 413](#)  
[show chassis firmware \(ACX5048 Router\) on page 413](#)  
[show chassis firmware \(ACX5096 Router\) on page 414](#)  
[show chassis firmware \(ACX500 Router\) on page 414](#)

**Output Fields** [Table 15 on page 402](#) lists the output fields for the show chassis firmware command. Output fields are listed in the approximate order in which they appear.

*Table 15: show chassis firmware Output Fields*

Field Name	Field Description
<b>Part</b>	(MX Series, MX2010, MX2020, and MX2008 routers) Chassis part name.
<b>Type</b>	(MX Series, MX2010, MX2020, and MX2008 routers) Type of firmware: On routers: ROM or O/S. On switches: uboot or loader.
<b>Version</b>	(MX Series, MX2010, MX2020, and MX2008 routers) Version of firmware running on the chassis part.
<b>FPC</b>	( <i>detail</i> option only) Number of FPC. For a standalone switch, the value is 0. For a Virtual Chassis configuration, value in the range of 0-9; refers to the member ID assigned to the switch.
<b>AFEB</b>	(MX104 routers) Version of the compact Forwarding Engine Board.
<b>Boot</b>	( <i>detail</i> option only) Version of the SYSPLD.
<b>PoE</b>	( <i>detail</i> option only) Version of the PoE firmware.
<b>PFE-&lt;number&gt;</b>	( <i>detail</i> option only) Version of the Packet Forwarding Engine used in the switch.
<b>PHY-</b>	( <i>detail</i> option only) Version of the physical layer device (PHY) used in the switch.
<b>microcode</b>	( <i>detail</i> option only) Microcode of the physical layer devices (PHY) used in the switch.
<b>uboot</b>	( <i>detail</i> option only) Version of the u-boot used in the switch.
<b>loader</b>	( <i>detail</i> option only) Version of the loader used in the switch.



## Sample Output

### show chassis firmware (M10 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
Forwarding engine board	ROM	Juniper ROM Monitor Version 4.1b2
	O/S	Version 4.1I1 by usera on 2000-04-24 11:27

### show chassis firmware (M20 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
System switch board	ROM	Juniper ROM Monitor Version 3.4b26
	O/S	Version 3.4I16 by userc on 2000-02-29 2
FPC 1	ROM	Juniper ROM Monitor Version 3.0b1
	O/S	Version 3.4I4 by userc on 2000-02-25 21
FPC 2	ROM	Juniper ROM Monitor Version 3.0b1
	O/S	Version 3.4I4 by userc on 2000-02-25 21

### show chassis firmware (M40 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
System control board	ROM	Juniper ROM Monitor Version 2.0i126Copyri
	O/S	Version 2.0i1 by root on Thu Jul 23 00:51
FPC 5	ROM	Juniper ROM Monitor Version 2.0i49Copyrig
	O/S	Version 2.0i1 by root on Thu Jul 23 00:59

### show chassis firmware (M120 Router)

```
user@host> show chassis firmware
```

FPC 2	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:2
FPC 3	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:2
FPC 4	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:2
FEB 3	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:1
FEB 4	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:1

### show chassis firmware (M160 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
SFM 0	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by usera on 2000-02-29 11:50
SFM 1	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by usera on 2000-02-29 11:50
FPC 0	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by usera on 2000-02-29 11:56
FPC 1	ROM	Juniper ROM Monitor Version 4.0b2

FPC 2	O/S	Version 4.0I1 by usera on 2000-02-29 11:56
	ROM	Juniper ROM Monitor Version 4.0b3
	O/S	Version 4.0I1 by usera on 2000-02-29 11:56

**show chassis firmware (MX150)**

```
user@host > show chassis firmware
```

Part	Type	Version
FPC	ROM	PC Bios
	O/S	Version 17.2I20170220_0929_rohitn by rohitn
on 2017-02-20 09:38:59 UTC		

**show chassis firmware (MX104 Router)**

```
user@host > show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-
FPC 1	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-
FPC 2	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-
AFEB	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-

**show chassis firmware (MX240 Router)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20080103.0 by userb on 2008-0
FPC 2	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20080103.0 by userb on 2008-0

**show chassis firmware (MX480 Router)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20070916.3 by userb on 2007-0

**show chassis firmware (MX960 Router)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 4	ROM	Juniper ROM Monitor Version 8.0b8
	O/S	Version 8.2I59 by user3 on 2006-10-31 19:22
FPC 7	ROM	Juniper ROM Monitor Version 8.2b1
	O/S	Version 8.2-20061026.1 by userb on 2006-1

**show chassis firmware (MX2010 Router)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 12.3b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 1	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 2	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 3	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 4	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 5	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 6	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 7	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 8	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 9	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
SPMB 0	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
SPMB 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20121220.0 by userb on 2012-

#### show chassis firmware (MX2020 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 1	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 2	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 3	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 4	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 5	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 6	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 7	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 8	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 9	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 10	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 11	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 12	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 13	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 14	ROM	Juniper ROM Monitor Version 10.0b39

FPC 15	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 16	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 17	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 18	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 19	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
SPMB 0	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 12.1b1
SPMB 1	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20130415.0 by userb on 2013-

### show chassis firmware (MX2008 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:15:48 UTC		
FPC 3	ROM	Juniper ROM Monitor Version 13.3b1
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:16:31 UTC		
FPC 5	ROM	Juniper ROM Monitor Version 13.3b1
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:16:31 UTC		
FPC 7	ROM	Juniper ROM Monitor Version 11.4b2
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:15:48 UTC		
FPC 9	ROM	Juniper ROM Monitor Version 13.2b1
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:15:58 UTC		

### show chassis firmware (MX10003)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_SUM0_00.11.01
	RE-FPGA	402
RE 1	PRI BIOS	CBEP_P_SUM0_00.11.01
	RE-FPGA	301
FPC 0	ROM	PC Bios
	O/S	Version 17.3-20170719.0 by builder on
2017-07-19 01:27:58 UTC		
FPC 1	ROM	PC Bios
	O/S	Version 17.3-20170719.0 by builder on
2017-07-19 01:27:58 UTC		

### show chassis firmware (MX204 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_SUM1_00.11.01
	RE-FPGA	300
FPC	ROM	PC Bios
	O/S	Version 17.4I20171105_0609_aahluwalia by aahluwalia on 2017-11-05 06:09:28 UTC

### show chassis firmware (MX10008 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_VAL0_00.14.1
	FPGA	264.0
	RE-FPGA	41.0
	RE-SSD1	SF-SBR12050
	RE-SSD2	SF-SBR12050
	i40e-NVM	6.01
RE 1	PRI BIOS	CBEP_P_VAL0_00.13.01
	FPGA	261.0
	RE-FPGA	41.0
	RE-SSD1	SF-SBR12034
	RE-SSD2	SF-SBR12034
	i40e-NVM	5.02
FPC 0	ROM	PC Bios
	O/S	Version 18.4-20180716_dev_common.0 by builder on 2018-07-16 00:43:35 UTC
	ROM Monitor	0 9.14.0
	PCIE Sw(0)	1.0.0
	MPCS(0)	0.2.0
	I2CS CPLD	0.4.0
	BOOT CPLD	0.4.0
FPC 2	ROM	PC Bios
	O/S	Version 18.4-20180716_dev_common.0 by builder on 2018-07-16 00:43:35 UTC
	ROM Monitor	0 9.14.0
	PCIE Sw(0)	1.0.0
	MPCS(0)	0.2.0
	I2CS CPLD	0.4.0
	BOOT CPLD	0.4.0
FPC 3	ROM	PC Bios
	O/S	Version 18.4-20180716_dev_common.0 by builder on 2018-07-16 00:43:35 UTC
	ROM Monitor	0 9.14.0
	PCIE Sw(0)	1.0.0
	MPCS(0)	0.4.0
	I2CS CPLD	0.8.0
	BOOT CPLD	0.8.0
FPM	FPGA	1.9
FTC 0	FPGA	2.0
FTC 1	FPGA	2.0
SFB 0	FPGA	3.0
SFB 1	FPGA	3.0
SFB 2	FPGA	3.0
SFB 3	FPGA	3.0
SFB 4	FPGA	3.0
SFB 5	FPGA	3.0

**show chassis firmware (MX240, MX480, MX960 Router with Application Services Modular Line Card)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM O/S	Juniper ROM Monitor Version 12.1b1 Version 12.2I21 by user1 on 2012-06-19 17:

**show chassis firmware (EX4200 Switch)**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0	uboot loader	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42) FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 1	uboot loader	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42) FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 2	uboot loader	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42) FreeBSD/PowerPC U-Boot bootstrap loader 2.1

**show chassis firmware (EX8200 Switch)**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0	U-Boot loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 3	U-Boot loader	U-Boot 1.1.6 (Dec 4 2009 - 13:17:34) 3.1.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 5	U-Boot loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 7	U-Boot loader	U-Boot 1.1.6 (Feb 6 2009 - 05:31:46) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
Routing Engine 0	U-Boot loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
Routing Engine 1	U-Boot loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2

**show chassis firmware (EX9200 Switch)**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 2	ROM O/S	Juniper ROM Monitor Version 11.4b2 Version 14.1I20140312_0741 by userd o
FPC 3	ROM O/S	Juniper ROM Monitor Version 10.4b1 Version 14.1I20140312_0741 by userd o

**show chassis firmware (EX9251 Switch)**

```
user@switch> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_SUM1_00.11.01

```

FPC                                RE-FPGA  301
                                ROM        PC Bios
                                O/S        Version 18.1R1.4 by builder on 2018-03-06
00:31:54 UTC

```

### show chassis firmware (EX9253 Switch)

```

user@switch> show chassis firmware

Part      Type      Version
RE 0      PRI BIOS  CBEP_P_SUM1_00.11.01
          RE-FPGA  402
RE 1      PRI BIOS  CBEP_P_SUM1_00.11.01
          RE-FPGA  402
FPC 0      ROM      PC Bios
          O/S      Version 18.2-20180129_dev_common.1 by builder
on 2018-01-29 13:35:11 UTC
FPC 1      ROM      PC Bios
          O/S      Version 18.2-20180129_dev_common.1 by builder
on 2018-01-29 13:35:11 UTC

```

### show chassis firmware lcc (TX Matrix Router)

```

user@host> show chassis firmware lcc 0

lcc0-re0:
-----
Part      Type      Version
FPC 1      ROM      Juniper ROM Monitor Version 6.4b18
          O/S      Version 7.0-20040804.0 by userb on 2004-0
FPC 2      ROM      Juniper ROM Monitor Version 6.4b20
          O/S      Version 7.0-20040804.0 by userb on 2004-0
SPMB 0      ROM      Juniper ROM Monitor Version 6.4b18
          O/S      Version 7.0-20040804.0 by userb on 2004-0

```

### show chassis firmware scc (TX Matrix Router)

```

user@host> show chassis firmware scc

scc-re0:
-----
Part      Type      Version
SPMB 0      ROM      Juniper ROM Monitor Version 6.4b18
          O/S      Version 7.0-20040804.0 by userb on 2004-0

```

### show chassis firmware (TX Matrix Plus Router)

```

user@host> show chassis firmware

sfc0-re0:
-----
Part      Type      Version
Global FPC 4
Global FPC 6
Global FPC 7
Global FPC 12
Global FPC 14
Global FPC 15
Global FPC 20

```

```

Global FPC 21
Global FPC 22
Global FPC 23
Global FPC 24
Global FPC 25
Global FPC 26
Global FPC 28
Global FPC 29
Global FPC 31
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

lcc0-re1:
-----
Part            Type      Version
FPC 4           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 6           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 7           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

lcc1-re1:
-----
Part            Type      Version
FPC 4           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 6           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 7           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

lcc2-re1:
-----
Part            Type      Version
FPC 4           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 5           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 6           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 7           ROM      Juniper ROM Monitor Version 7.5b4
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

lcc3-re1:
-----

```



Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 1	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 2	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 4	ROM	Juniper ROM Monitor Version 7.5b4
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 5	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 7	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0

### show chassis firmware lcc (TX Matrix Plus Router)

```
user@host> show chassis firmware lcc 0
```

```
lcc0-re1:
```

Part	Type	Version
FPC 4	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 6	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 7	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0

### show chassis firmware sfc (TX Matrix Plus Router)

```
user@host> show chassis firmware sfc 0
```

```
sfc0-re0:
```

Part	Type	Version
Global FPC 4		
Global FPC 6		
Global FPC 7		
Global FPC 12		
Global FPC 14		
Global FPC 15		
Global FPC 20		
Global FPC 21		
Global FPC 22		
Global FPC 23		
Global FPC 24		
Global FPC 25		
Global FPC 26		
Global FPC 28		
Global FPC 29		
Global FPC 31		

SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0

### show chassis firmware (QFX Series and OCX Series)

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0		
Routing Engine 0	U-Boot loader	U-Boot 1.1.6 (Sep 15 2010 - 02:11:11) 1.0.5 FreeBSD/MIPS U-Boot bootstrap loader 0.1

### show chassis firmware (PTX1000 Packet Transport Routers)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	U-Boot loader	*** FreeBSD/i386 bootstrap loader 1.2
	BIOS	V0018.2U
	EC FPGA	2.0
	MAIN_CPLD	1.f
	MEZZ_CPLD	1.f
	RE FPGA	2.3

### show chassis firmware (PTX10008 Routers)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	QFXS_SFP_00.31_01.01
	GDN BIOS	QFXS_SFP_00.31_01.01
	FPGA	2.4
	RE-FPGA	3.2
RE 1	PRI BIOS	QFXS_SFP_00.31_01.01
	GDN BIOS	QFXS_SFP_00.31_01.01
	FPGA	2.3
	RE-FPGA	3.2
FPC 0 - 22:56:52)	U-Boot	Bank A: U-Boot 2011.12-gfbea47a (Feb 26 2016)
	CTRL FPGA	4.1
	PORT FPGA	2.0
FPC 5 - 22:56:52)	U-Boot	Bank A: U-Boot 2011.12-gfbea47a (Feb 26 2016)
	CTRL FPGA	3.1
	PORT FPGA	2.0
FPC 6 - 22:56:52)	U-Boot	Bank B: U-Boot 2011.12-gfbea47a (Feb 26 2016)
	CTRL FPGA	3.1
	PORT FPGA	2.0
FPM	FPGA	1.9
FTC 0	FPGA	2.0
FTC 1	FPGA	2.0
SIB 0	FPGA	3.0
SIB 1	FPGA	3.0

**show chassis firmware interconnect-device (QFabric System)**

```
user@switch> show chassis firmware interconnect-device interconnect1
```

Part	Type	Version
Routing Engine 0	U-Boot loader	U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1 FreeBSD/MIPS U-Boot bootstrap loader 0.1
Routing Engine 1	U-Boot loader	U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1 FreeBSD/MIPS U-Boot bootstrap loader 0.1

**show chassis firmware (ACX2000 Universal Metro Router)**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC	O/S	Version 12.2I13 by user2 on 2012-05-29 06:
FEB	O/S	Version 12.2I13 by user2 on 2012-05-29 06:

**show chassis firmware detail (EX3300 Switch)**

```
user@switch> show chassis firmware detail
```

FPC 0		
Boot SYSPLD	3	
PoE firmware	4.1.6	
PFE-0	3	
PFE-1	3	
PHY		
microcode	0x514	
Boot Firmware		
uboot loader	U-Boot 1.1.6 (Aug 21 2011 - 01:45:26)	1.0.0 FreeBSD/arm U-Boot loader 1.0

**show chassis firmware (MX Routers with Media Services Blade [MSB])**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.2I21 by user1 on 2012-06-19 17:

**show chassis firmware (ACX5048 Router)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC	loader	FreeBSD/i386 bootstrap loader 1.2
	BIOS	V0018.7
	TMC FPGA	6.d8
	PICO CPLD0	7.b
	PICO CPLD1	7.b
	PICO CPLD2	7.b
	PICO CPLD3	7.b
	PICO CPLD4	7.b
	PICO CPLD5	7.b
	PICO CPLD6	6.a
	MRE	17.9
	Power CPLD	3.a

**show chassis firmware (ACX5096 Router)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC	Loader	FreeBSD/i386 bootstrap loader 1.2
	BIOS	V0018.7
	TMC FPGA	3000001.5
	PIC0 CPLD0	7.b
	PIC0 CPLD1	7.b
	PIC0 CPLD2	7.b
	PIC0 CPLD3	7.b
	PIC0 CPLD4	7.b
	PIC0 CPLD5	7.b
	PIC0 CPLD6	c6.a
	PIC0 CPLD7	-NA-
	PIC0 CPLD8	7.b
	PIC0 CPLD9	7.b
	PIC0 CPLD10	7.b
	PIC0 CPLD11	7.b
	PIC0 CPLD12	7.b
	PIC0 CPLD13	7.b
	PIC0 CPLD14	c6.a
	MRE	7.5
	Power CPLD	4.1

**show chassis firmware (ACX500 Router)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC	O/S	Version 15.2-20150815_dev_rbu_1_16q1.0 by
userb on 2015-08-15 04:18:02 UTC		
FEB	O/S	Version 15.2-20150815_dev_rbu_1_16q1.0 by
userb on 2015-08-15 04:18:02 UTC		

## show chassis hardware

<b>List of Syntax</b>	<a href="#">Syntax on page 415</a>
	<a href="#">Syntax (EX Series) on page 415</a>
	<a href="#">Syntax (T4000 Router) on page 415</a>
	<a href="#">Syntax (TX Matrix Router) on page 415</a>
	<a href="#">Syntax (TX Matrix Plus Router) on page 415</a>
	<a href="#">Syntax (MX Series Routers) on page 416</a>
	<a href="#">Syntax (MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms) on page 416</a>
	<a href="#">Syntax (QFX Series) on page 416</a>
	<a href="#">Syntax (OCX Series) on page 416</a>
	<a href="#">Syntax (PTX Series Packet Transport Routers) on page 416</a>
	<a href="#">Syntax (ACX Series Universal Metro Routers) on page 416</a>
	<a href="#">Syntax (ACX5048 and ACX5096 Routers) on page 416</a>
	<a href="#">Syntax (ACX500 Routers) on page 416</a>

**Syntax** show chassis hardware  
 <detail | extensive>  
 <clei-models>  
 <models>

**Syntax (EX Series)** show chassis hardware  
 <clei-models>  
 <detail | extensive>  
 <models>  
 <satellite [slot-id *slot-id* | device-alias *alias-name*]>

**Syntax (T4000 Router)** show chassis hardware  
 <clei-models>  
 <detail | extensive>  
 <models>

**Syntax (TX Matrix Router)** show chassis hardware  
 <clei-models>  
 <detail | extensive>  
 <models>  
 <lcc *number* | scc>

**Syntax (TX Matrix Plus Router)** show chassis hardware  
 <clei-models>  
 <detail | extensive>  
 <models>  
 <lcc *number* | sfc *number*>

Syntax (MX Series Routers)	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt; &lt;models&gt; &lt;all-members&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt;</pre>
Syntax (MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms)	<pre>show chassis hardware &lt;clei-models&gt; &lt;detail   extensive&gt; &lt;models&gt; &lt;satellite [<i>slot-id slot-id</i>   device-alias <i>alias-name</i>]&gt;</pre>
Syntax (QFX Series)	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt; &lt;interconnect-device <i>name</i>&gt; &lt;node-device <i>name</i>&gt; &lt;models&gt;</pre>
Syntax (OCX Series)	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt; &lt;models&gt;</pre>
Syntax (PTX Series Packet Transport Routers)	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt; &lt;models&gt;</pre>
Syntax (ACX Series Universal Metro Routers)	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt; &lt;models&gt;</pre>
Syntax (ACX5048 and ACX5096 Routers)	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt; &lt;models&gt;</pre>
Syntax (ACX500 Routers)	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt;</pre>

```
<models>
```

<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p><b>models</b> option introduced in Junos OS Release 8.2.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.</p> <p>Information for <b>disk</b> and <b>usb</b> introduced in Junos OS Release 15.1X53-D60 for QFX10002, QFX10008, and QFX10016 switches.</p> <p>Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Routers.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Routers</p>
<b>Description</b>	<p>Display a list of all Flexible PIC Concentrators (FPCs) and PICs installed in the router or switch chassis, including the hardware version level and serial number.</p> <p>In the EX Series switch command output, FPC refers to the following:</p> <ul style="list-style-type: none"> <li>• On EX2200 switches, EX3200 switches, EX4200 standalone switches, and EX4500 switches—Refers to the switch; FPC <i>number</i> is always 0.</li> <li>• On EX4200 switches in a Virtual Chassis configuration—Refers to the member of a Virtual Chassis; FPC <i>number</i> equals the member ID, from 0 through 9.</li> <li>• On EX8208 and EX8216 switches—Refers to a line card; FPC <i>number</i> equals the slot number for the line card.</li> </ul> <p>On QFX3500, QFX5100, and OCX Series standalone switches, and PTX1000 routers both the FPC and FPC <i>number</i> are always 0.</p> <p>On T4000 Type 5 FPCs, there are no <b>top temperature sensor</b> or <b>bottom temperature sensor</b> parameters. Instead, <b>fan intake temperature sensor</b> and <b>fan exhaust temperature sensors</b> parameters are displayed.</p> <p>Starting from Junos OS Release 11.4, the output of the <b>show chassis hardware models</b> operational mode command displays the enhanced midplanes FRU model numbers (CHAS-BP3-MX240-S, CHAS-BP3-MX480-S or CHAS-BP3-MX960-S) based on the router. Prior to release 11.4, the FRU model numbers are left blank when the router has</p>

enhanced midplanes. Note that the enhanced midplanes are introduced through the Junos OS Release 13.3, but can be supported on all Junos OS releases.

Starting with Junos OS Release 14.1, the output of the **show chassis hardware detail | extensive | clei-models | models** operational mode command displays the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-P1A) and other components in a PTX5000 Packet Transport Router.

**Options** **none**—Display information about hardware. For a TX Matrix router, display information about the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display information about the TX Matrix Plus router and its attached routers.

**clei-models**—(Optional) Display Common Language Equipment Identifier (CLEI) barcode and model number for orderable field-replaceable units (FRUs).

**detail**—(Optional) Include RAM and disk information in output.

**extensive**—(Optional) Display ID EEPROM information.

**all-members**—(MX Series routers only) (Optional) Display hardware-specific information for all the members of the Virtual Chassis configuration.

**interconnect-device *name***—(QFabric systems only) (Optional) Display hardware-specific information for the Interconnect device.

**lcc *number***—(TX Matrix routers and TX Matrix Plus router only) (Optional) On a TX Matrix router, display hardware information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display hardware information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display hardware-specific information for the local Virtual Chassis members.

**member *member-id***—(MX Series routers and EX Series switches) (Optional) Display hardware-specific information for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value 0 or 1.



**models**—(Optional) Display model numbers and part numbers for orderable FRUs and, for components that use ID EEPROM format v2, the CLEI code.

**node-device *name***—(QFabric systems only) (Optional) Display hardware-specific information for the Node device.

**satellite [*slot-id slot-id* | device-alias *alias-name*]**—(Junos Fusion only) (Optional) Display hardware information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix router only) (Optional) Display hardware information for the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus router only) (Optional) Display hardware information for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with 0.

**Additional Information** The **show chassis hardware detail** command now displays DIMM information for the following Routing Engines, as shown in [Table 16 on page 419](#).

**Table 16: Routing Engines Displaying DIMM Information**

Routing Engines	Routers
RE-S-1800x2 and RE-S-1800x4	MX240, MX480, and MX960 routers
RE-A-1800x2	M120 and M320 routers

In Junos OS Release 11.4 and later, the output for the **show chassis hardware models** operational mode command for MX Series routers display the enhanced midplanes FRU model numbers—CHAS-BP3-MX240-S, CHAS-BP3-MX480-S, or CHAS-BP3-MX960-S—based on the router. In releases before Junos OS Release 11.4, the FRU model numbers are left blank when the router has enhanced midplanes. Note that the enhanced midplanes are introduced through Junos OS Release 13.3, but can be supported on all Junos OS releases.

Starting with Junos OS Release 17.3R1, the output of the **show chassis hardware** command displays the mode in which vMX is running (performance mode or lite mode) in the part number field for the FPC. **RIOT-PERF** indicates performance mode and **RIOT-LITE** indicates lite mode.

**Required Privilege Level** view

**Related Documentation**

- *show chassis power*

**List of Sample Output**

- [show chassis hardware \(EX8216 Switch\) on page 427](#)
- [show chassis hardware clei-models \(EX8216 Switch\) on page 429](#)
- [show chassis hardware clei-models \(T1600 Router\) on page 429](#)
- [show chassis hardware clei-models \(PTX10008 Routers\) on page 430](#)

[show chassis hardware clei-models \(PTX10016 Routers\) on page 430](#)  
[show chassis hardware \(EX2300-C Switch\) on page 431](#)  
[show chassis hardware \(EX2300 Switch\) on page 432](#)  
[show chassis hardware detail \(EX4200 Switch\) on page 432](#)  
[show chassis hardware \(EX4300 Switch\) on page 432](#)  
[show chassis hardware models \(EX4500 Switch\) on page 433](#)  
[show chassis hardware detail \(EX9200 Switch\) on page 433](#)  
[show chassis hardware detail \(EX9251 Switch\) on page 434](#)  
[show chassis hardware detail \(EX9253 Switch\) on page 434](#)  
[show chassis hardware detail \(PTX10008 Routers\) on page 435](#)  
[show chassis hardware detail \(PTX10016 Routers\) on page 437](#)  
[show chassis hardware \(M7i Router\) on page 438](#)  
[show chassis hardware \(M10 Router\) on page 439](#)  
[show chassis hardware models \(M10 Router\) on page 439](#)  
[show chassis hardware \(M20 Router\) on page 440](#)  
[show chassis hardware models \(M20 Router\) on page 440](#)  
[show chassis hardware \(M40 Router\) on page 441](#)  
[show chassis hardware \(M40e Router\) on page 441](#)  
[show chassis hardware \(M120 Router\) on page 442](#)  
[show chassis hardware detail \(M120 Router\) on page 443](#)  
[show chassis hardware models \(M120 Router\) on page 444](#)  
[show chassis hardware \(M160 Router\) on page 445](#)  
[show chassis hardware models \(M160 Router\) on page 445](#)  
[show chassis hardware detail \(M160 Router\) on page 446](#)  
[show chassis hardware \(M320 Router\) on page 447](#)  
[show chassis hardware models \(M320 Router\) on page 448](#)  
[show chassis hardware \(MX5 Router\) on page 449](#)  
[show chassis hardware \(MX10 Router\) on page 449](#)  
[show chassis hardware \(MX40 Router\) on page 450](#)  
[show chassis hardware \(Fixed MX80 Router\) on page 450](#)  
[show chassis hardware \(Modular MX80 Router\) on page 451](#)  
[show chassis hardware \(MX150\) on page 451](#)  
[show chassis hardware models \(MX150\) on page 452](#)  
[show chassis hardware \(MX104 Router\) on page 452](#)  
[show chassis hardware detail \(MX104 Router\) on page 453](#)  
[show chassis hardware detail \(MX480 Packet Transport Router with details of virtual disk size\) on page 453](#)  
[show chassis hardware extensive \(MX104 Router\) on page 454](#)  
[show chassis hardware extensive \(PTX10008 Router\) on page 457](#)  
[show chassis hardware extensive \(PTX10016 Router\) on page 470](#)  
[show chassis hardware models \(MX104 Router\) on page 482](#)  
[show chassis hardware models \(PTX10008 Router\) on page 482](#)  
[show chassis hardware models \(PTX10016 Router\) on page 483](#)  
[show chassis hardware clei-models \(MX104 Router\) on page 484](#)  
[show chassis hardware \(MX240 Router\) on page 484](#)  
[show chassis hardware detail \(MX 240 Router with Routing Engine Displaying DIMM Information\) on page 485](#)  
[show chassis hardware \(MX240 Router with Enhanced MX SCB\) on page 485](#)  
[show chassis hardware \(MX480 Router\) on page 486](#)

[show chassis hardware \(MX480 Router with Enhanced MX SCB\) on page 487](#)  
[show chassis hardware \(MX480 Routers with MPC5E and Built-In OTN PIC\) on page 487](#)  
[show chassis hardware detail \(MX480 Routers with MPC5E and Built-In OTN PIC\) on page 489](#)  
[show chassis hardware extensive \(MX480 Routers with MPC5E and Built-In OTN PIC\) on page 490](#)  
[show chassis hardware \(MX960 Router\) on page 493](#)  
[show chassis hardware \(MX960 Router with Bidirectional Optics\) on page 494](#)  
[show chassis hardware \(MX960 Router with Enhanced MX SCB\) on page 494](#)  
[show chassis hardware models \(MX960 Router with Enhanced MX SCB\) on page 496](#)  
[show chassis hardware \(MX960 Router with MPC5EQ\) on page 497](#)  
[show chassis hardware detail \(MX960 Router\) on page 500](#)  
[show chassis hardware detail \(MX960 Router with MPC5EQ\) on page 500](#)  
[show chassis hardware extensive \(MX960 Router with MPC5EQ\) on page 504](#)  
[show chassis hardware models \(MX960 Router with MPC5EQ\) on page 512](#)  
[show chassis hardware clei-models \(MX960 Router with MPC5EQ\) on page 513](#)  
[show chassis hardware \(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC\) on page 513](#)  
[show chassis hardware clei-models \(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC\) on page 514](#)  
[show chassis hardware \(MX10008 Router\) on page 515](#)  
[show chassis hardware clei-models \(MX10008 Router\) on page 516](#)  
[show chassis hardware detail \(MX10008 Router\) on page 516](#)  
[show chassis hardware extensive \(MX10008 Router\) on page 518](#)  
[show chassis hardware models \(MX10008 Router\) on page 532](#)  
[show chassis hardware \(PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC\) on page 532](#)  
[show chassis hardware clei-models \(PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC\) on page 533](#)  
[show chassis hardware \(MX2010 Router\) on page 534](#)  
[show chassis hardware detail \(MX2010 Router\) on page 536](#)  
[show chassis hardware extensive \(MX2010 Router\) on page 541](#)  
[show chassis hardware models \(MX2010 Router\) on page 546](#)  
[show chassis hardware clei-models \(MX2010 Routers\) on page 547](#)  
[show chassis hardware \(MX2010 Routers with MPC6E and OTN MIC\) on page 548](#)  
[show chassis hardware detail \(MX2010 Routers with MPC6E and OTN MIC\) on page 550](#)  
[show chassis hardware extensive \(MX2010 Routers with MPC6E and OTN MIC\) on page 552](#)  
[show chassis hardware \(MX2020 Router\) on page 557](#)  
[show chassis hardware detail \(MX2020 Router\) on page 565](#)  
[show chassis hardware \(MX2020 Router with 240-V high-voltage DC PSMs and PDMs\) on page 574](#)  
[show chassis hardware models \(MX2020 Router\) on page 576](#)  
[show chassis hardware clei-models \(MX2020 Router\) on page 577](#)  
[show chassis hardware \(MX2020 Router with MPC5EQ and MPC6E\) on page 578](#)  
[show chassis hardware detail \(MX2020 Router with MPC5EQ and MPC6E\) on page 583](#)  
[show chassis hardware extensive \(MX2020 Router with MPC5EQ and MPC6E\) on page 585](#)

[show chassis hardware models \(MX2020 Routers with MPC5EQ and MPC6E\) on page 591](#)  
[show chassis hardware clei-models \(MX2020 Router with MPC5EQ and MPC6E\) on page 592](#)  
[show chassis hardware \(MX Series routers with ATM MIC\) on page 593](#)  
[show chassis hardware \(MX240, MX480, MX960 routers with Application Services Modular Line Card\) on page 593](#)  
[show chassis hardware extensive \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 594](#)  
[show chassis hardware \(MX480 Router with MPC4E\) on page 595](#)  
[show chassis hardware \(MX2020 Router with MPC4E\) on page 596](#)  
[show chassis hardware \(MX5, MX10, MX40, MX80, MX240, MX480, and MX960 Routers with Enhanced 20-Port Gigabit Ethernet MIC\) on page 598](#)  
[show chassis hardware models \(MX5, MX10, MX40, MX80, MX240, MX480, and MX960 Routers with Enhanced 20-Port Gigabit Ethernet MIC\) on page 598](#)  
[show chassis hardware \(MX2008 Router\) on page 599](#)  
[show chassis hardware detail \(MX2008 Router\) on page 600](#)  
[show chassis hardware extensive \(MX2008 Router\) on page 601](#)  
[show chassis hardware models \(MX2008 Router\) on page 613](#)  
[show chassis hardware clei-models \(MX2008 Router\) on page 614](#)  
[show chassis hardware \(MX10003 Router\) on page 615](#)  
[show chassis hardware \(MX204 Router\) on page 615](#)  
[show chassis hardware \(vMX running in lite mode\) on page 616](#)  
[show chassis hardware \(vMX running in performance mode\) on page 616](#)  
[show chassis hardware \(T320 Router\) on page 616](#)  
[show chassis hardware \(T640 Router\) on page 617](#)  
[show chassis hardware models \(T640 Router\) on page 618](#)  
[show chassis hardware extensive \(T640 Router\) on page 618](#)  
[show chassis hardware \(T4000 Router\) on page 619](#)  
[show chassis hardware \(T4000 Router with 16-GB Line Card Chassis \(LCC\) Routing Engine\) on page 621](#)  
[show chassis hardware \(T4000 Router with LSR FPC\) on page 622](#)  
[show chassis hardware clei-models \(T4000 Router\) on page 622](#)  
[show chassis hardware detail \(T4000 Router\) on page 623](#)  
[show chassis hardware models \(T4000 Router\) on page 625](#)  
[show chassis hardware lcc \(TX Matrix Router\) on page 625](#)  
[show chassis hardware scc \(TX Matrix Router\) on page 626](#)  
[show chassis hardware \(T1600 Router\) on page 626](#)  
[show chassis hardware \(TX Matrix Plus Router\) on page 629](#)  
[show chassis hardware sfc \(TX Matrix Plus Router\) on page 634](#)  
[show chassis hardware extensive \(TX Matrix Plus Router\) on page 635](#)  
[show chassis hardware clei-models \(TX Matrix Plus Router\) on page 636](#)  
[show chassis hardware detail \(TX Matrix Plus Router\) on page 639](#)  
[show chassis hardware models \(TX Matrix Plus Router\) on page 640](#)  
[show chassis hardware \(TX Matrix Plus Router with 3D SIBs\) on page 643](#)  
[show chassis hardware clei-models \(TX Matrix Plus Router with 3D SIBs\) on page 647](#)  
[show chassis hardware detail \(TX Matrix Plus Router with 3D SIBs\) on page 651](#)  
[show chassis hardware lcc \(TX Matrix Plus Router with 3D SIBs\) on page 654](#)  
[show chassis hardware sfc \(TX Matrix Plus Router with 3D SIBs\) on page 655](#)

[show chassis hardware \(16-Port 10-Gigabit Ethernet MPC with SFP+ Optics \[MX Series Routers\]\) on page 657](#)

[show chassis hardware \(MPC3E \[MX Series Routers\]\) on page 657](#)

[show chassis hardware \(QFX3500 Switches\) on page 658](#)

[show chassis hardware detail \(QFX3500 Switches\) on page 659](#)

[show chassis hardware models \(QFX3500 Switches\) on page 660](#)

[show chassis hardware clei-models \(QFX3500 Switches\) on page 660](#)

[show chassis hardware clei-models \(QFX5100 Switches\) on page 660](#)

[show chassis hardware \(QFX10002 Switches\) on page 661](#)

[show chassis hardware detail \(QFX10002 Switches\) on page 661](#)

[show chassis hardware \(QFX10008 and QFX10016 Switches\) on page 662](#)

[show chassis hardware detail \(QFX10008 and QFX10016 Switches\) on page 663](#)

[show chassis hardware interconnect-device \(QFabric Systems\) on page 663](#)

[show chassis hardware node-device \(QFabric Systems\) on page 663](#)

[show chassis hardware \(PTX5000 Packet Transport Router\) on page 664](#)

[show chassis hardware \(PTX5000 Packet Transport Router with AC PSM and PDU\) on page 665](#)

[show chassis hardware \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 666](#)

[show chassis hardware clei-models \(PTX5000 Packet Transport Router\) on page 666](#)

[show chassis hardware clei-models \(PTX5000 Packet Transport Router with AC PSM and PDU\) on page 667](#)

[show chassis hardware clei-models \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 667](#)

[show chassis hardware detail \(PTX5000 Packet Transport Router\) on page 667](#)

[show chassis hardware detail \(PTX5000 Packet Transport Router with AC PSM and PDU\) on page 669](#)

[show chassis hardware detail \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 669](#)

[show chassis hardware models \(PTX5000 Packet Transport Router\) on page 670](#)

[show chassis hardware models \(PTX5000 Packet Transport Router with AC PSM and PDU\) on page 670](#)

[show chassis hardware models \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 671](#)

[show chassis hardware extensive \(PTX5000 Packet Transport Router\) on page 671](#)

[show chassis hardware extensive \(PTX1000 Packet Transport Router\) on page 672](#)

[show chassis hardware extensive \(PTX5000 with Control Board 2\) on page 673](#)

[show chassis hardware \(MX Routers with Media Services Blade \[MSB\]\) on page 673](#)

[show chassis hardware extensive \(MX Routers with Media Services Blade \[MSB\]\) on page 673](#)

[show chassis hardware \(ACX5048 Router\) on page 674](#)

[show chassis hardware detail \(ACX5048 Router\) on page 675](#)

[show chassis hardware clei-models \(ACX5048 Router\) on page 676](#)

[show chassis hardware models \(ACX5048 Router\) on page 676](#)

[show chassis hardware \(ACX5096 Router\) on page 676](#)

[show chassis hardware detail \(ACX5096 Router\) on page 677](#)

[show chassis hardware clei-models \(ACX5096 Router\) on page 677](#)

[show chassis hardware models \(ACX5096 Router\) on page 678](#)

[show chassis hardware \(ACX500 Router\) on page 678](#)

[show chassis hardware detail \(ACX500 Router\) on page 678](#)  
[show chassis hardware extensive \(ACX500 Router\) on page 679](#)  
[show chassis hardware clei-models \(ACX500 Router\) on page 680](#)  
[show chassis hardware models \(ACX500 Router\) on page 681](#)  
[show chassis hardware \(MX960 Router with MPC10E-15C-MRATE Line Card\) on page 681](#)

**Output Fields** [Table 17 on page 425](#) lists the output fields for the **show chassis hardware** command. Output fields are listed in the approximate order in which they appear.

Table 17: show chassis hardware Output Fields

Field Name	Field Description	Level of Output
<b>Item</b>	<p>Chassis component:</p> <ul style="list-style-type: none"> <li>(EX Series switches)—Information about the chassis, Routing Engine (SRE and Routing Engine modules in EX8200 switches), power supplies, fan trays, and LCD panel. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs). Information about the backplane, midplane, and SIBs (SF modules) is displayed for EX8200 switches.</li> <li>(MX Series routers and EX Series switches)—Information about the backplane, Routing Engine, Power Entry Modules (PEMs), and fan trays. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs), Modular Port Concentrators (MPCs) and associated Modular Interface Cards (MICs), or Dense Port Concentrators (DPCs). MX80 routers have a single Routing Engine and a built-in Packet Forwarding Engine that attaches directly to MICs. The Packet Forwarding Engine has two “pseudo” FPCs (FPC 0 and FPC1). MX80 routers also have a Forwarding Engine Board (FEB). MX104 routers have a built-in Packet forwarding Engine and a Forwarding Engine Board (FEB). The Packet Forwarding Engine of the MX104 router has three “pseudo” FPCs (FPC0, FPC1, and FPC2).</li> <li>(M Series routers, except for the M320 router)—Information about the backplane; power supplies; fan trays; Routing Engine; maxicab (the connection between the Routing Engine and the backplane, for the M40 router only); SCB, SSB, SFM, or FEB; MCS and PCG (for the M160 router only); each FPC and PIC; and each fan, blower, and impeller.</li> <li>(M120, M320, and T Series routers)—Information about the backplane, power supplies, fan trays, midplane, FPM (craft interface), CIP, PEM, SCG, CB, FPC, PIC, SFP, SPMB, and SIB.</li> <li>(QFX Series)—Information about the chassis, Pseudo CB, Routing Engine, power supplies, fan trays, Interconnect devices, and Node devices. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs).</li> <li>(PTX Series)—Information about the chassis, midplane, craft interface (FPM), power distribution units (PDUs) and Power Supply Modules (PSMs), Centralized Clock Generators (CCGs), Routing Engines, Control Boards (CBs) and Switch Processor Mezzanine Boards (SPMBs), Flexible PIC Concentrators (FPCs), PICs, Switch Interface Boards (SIBs), and fan trays (vertical and horizontal).</li> <li>(MX2010, MX2020, and MX2008 routers)—Information about the chassis, midplane, craft interface (FPM), power midplane (PMP), Power Supply Modules (PSMs), Power Distribution Modules (PDMs), Routing Engines, Control Boards (CBs) and Switch Processor Mezzanine Boards (SPMBs), Switch Fabric Boards (SFBs), Flexible PIC Concentrators (FPCs), PICs, adapter cards (ADCs) and fan trays.</li> <li>(vMX routers)—Information about the chassis, midplane, Routing Engines, and Control Boards (CBs). Also displays information about Flexible PIC Concentrators (FPCs) and associated Modular Interface Cards (MICs) and Physical Interface Cards (PICs).</li> </ul>	All levels
<b>Version</b>	Revision level of the chassis component.	All levels
<b>Part number</b>	Part number of the chassis component.	All levels



Table 17: show chassis hardware Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Serial number</b>	Serial number of the chassis component. The serial number of the backplane is also the serial number of the router chassis. Use this serial number when you need to contact Juniper Networks Customer Support about the router or switch chassis.	All levels
<b>Assb ID or Assembly ID</b>	( <b>extensive</b> keyword only) Identification number that describes the FRU hardware.	<b>extensive</b>
<b>Assembly Version</b>	( <b>extensive</b> keyword only) Version number of the FRU hardware.	<b>extensive</b>
<b>Assembly Flags</b>	( <b>extensive</b> keyword only) Flags.	<b>extensive</b>
<b>FRU model number</b>	( <b>clei-models</b> , <b>extensive</b> , and <b>models</b> keyword only) Model number of the FRU hardware component.	none specified
<b>CLEI code</b>	( <b>clei-models</b> and <b>extensive</b> keyword only) Common Language Equipment Identifier code. This value is displayed only for hardware components that use ID EEPROM format v2. This value is not displayed for components that use ID EEPROM format v1.	none specified
<b>EEPROM Version</b>	ID EEPROM version used by the hardware component: <b>0x00</b> (version 0), <b>0x01</b> (version 1), or <b>0x02</b> (version 2).	<b>extensive</b>
<b>Description</b>	<p>Brief description of the hardware item:</p> <ul style="list-style-type: none"> <li>• Type of power supply.</li> <li>• Type of PIC. If the PIC type is not supported on the current software release, the output states <b>Hardware Not Supported</b>.</li> <li>• Type of FPC: <b>FPC Type 1</b>, <b>FPC Type 2</b>, <b>FPC Type 3</b>, <b>FPC Type 4</b>, or <b>FPC TypeOC192</b>.</li> </ul> <p>On EX Series switches, a brief description of the FPC.</p> <p>The following list shows the PIM abbreviation in the output and the corresponding PIM name.</p> <ul style="list-style-type: none"> <li>• <b>2x FE</b>—Either two built-in Fast Ethernet interfaces (fixed PIM) or dual-port Fast Ethernet PIM</li> <li>• <b>4x FE</b>—4-port Fast Ethernet ePIM</li> <li>• <b>1x GE Copper</b>—Copper Gigabit Ethernet ePIM (one 10-Mbps, 100-Mbps, or 1000-Mbps port)</li> <li>• <b>1x GE SFP</b>—SFP Gigabit Ethernet ePIM (one fiber port)</li> <li>• <b>2x Serial</b>—Dual-port serial PIM</li> <li>• <b>2x T1</b>—Dual-port T1 PIM</li> <li>• <b>2x E1</b>—Dual-port E1 PIM</li> <li>• <b>2x CT1E1</b>—Dual-port channelized T1/E1 PIM</li> <li>• <b>1x T3</b>—T3 PIM (one port)</li> <li>• <b>1x E3</b>—E3 PIM (one port)</li> <li>• <b>4x BRI S/T</b>—4-port ISDN BRI S/T PIM</li> <li>• <b>4x BRI U</b>—4-port ISDN BRI U PIM</li> <li>• <b>1x ADSL Annex A</b>—ADSL 2/2+ Annex A PIM (one port, for POTS)</li> </ul>	All levels



Table 17: show chassis hardware Output Fields (continued)

Field Name	Field Description	Level of Output
	<ul style="list-style-type: none"> <li>• <b>1x ADSL Annex B</b>—ADSL 2/2+ Annex B PIM (one port, for ISDN)</li> <li>• <b>2x SHDSL (ATM)</b>—G SHDSL PIM (2-port two-wire module or 1-port four-wire module)</li> <li>• <b>1x TGM550</b>—TGM550 Telephony Gateway Module (Avaya VoIP gateway module with one console port, two analog <b>LINE</b> ports, and two analog <b>TRUNK</b> ports)</li> <li>• <b>1x DS1 TIM510</b>—TIM510 E1/T1 Telephony Interface Module (Avaya VoIP media module with one E1 or T1 trunk termination port and ISDN PRI backup)</li> <li>• <b>4x FXS, 4x FXO, TIM514</b>—TIM514 Analog Telephony Interface Module (Avaya VoIP media module with four analog <b>LINE</b> ports and four analog <b>TRUNK</b> ports)</li> <li>• <b>4x BRI TIM521</b>—TIM521 BRI Telephony Interface Module (Avaya VoIP media module with four ISDN BRI ports)</li> <li>• <b>Crypto Accelerator Module</b>—For enhanced performance of cryptographic algorithms used in IP Security (IPsec) services</li> <li>• <b>MPC M16x10GE</b>—16-port 10-Gigabit Module Port Concentrator that supports SFP+ optical transceivers. (Not on EX Series switches.)</li> <li>• For hosts, the Routing Engine type.</li> <li>• For small form-factor pluggable transceiver (SFP) modules, the type of fiber: <b>LX, SX, LH, or T</b>.</li> <li>• LCD description for EX Series switches (except EX2200 switches).</li> <li>• <b>MPC2</b>—1-port MPC2 that supports two separate slots for MICs.</li> <li>• <b>MPC3E</b>—1-port MPC3E that supports two separate slots for MICs (MIC-3D-1X100GE-CFP and MIC-3D-20GE-SFP) on MX960, MX480, and MX240 routers. The MPC3E maps one MIC to one PIC (1 MIC, 1 PIC), which differs from the mapping of legacy MPCs.</li> <li>• 100GBASE-LR4, pluggable CFP optics</li> <li>• Supports the Enhanced MX Switch Control Board with fabric redundancy and existing SCBs without fabric redundancy.</li> <li>• Interoperates with existing MX Series line cards, including Flexible Port Concentrators (FPC), Dense Port Concentrators (DPCs), and Modular Port Concentrators (MPCs).</li> <li>• <b>MPC4E</b>—Fixed configuration MPC4E that is available in two flavors: MPC4E-3D-32XGE-SFPP and MPC4E-3D-2CGE-8XGE on MX2020, MX960, MX480, and MX240 routers.</li> <li>• LCD description for MX Series routers</li> </ul>	

## Sample Output

### show chassis hardware (EX8216 Switch)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis	REV 06		CY0109220035	EX8216
Midplane	REV 06	710-016845	BA0909120112	EX8216-MP
CB 0	REV 22	710-020771	AX0109197723	EX8216-RE320
CB 1	REV 22	710-020771	AX0109197726	EX8216-RE320

Routing Engine 1		BUILTIN	BUILTIN	RE-EX8216
FPC 3	REV 19	710-020683	BC0109083125	EX8200-48F
CPU	REV 13	710-020598	BF0109144549	EX8200-CPU
FPC 4	REV 17	710-020683	BC0108500127	EX8200-48F
CPU	REV 10	710-020598	BF0108460510	EX8200-CPU
PIC 0		BUILTIN	BUILTIN	48x 100 Base-QFX/1000
Base-X				
Xcvr 1	REV 01	740-011613	PE70V89	SFP-SX
Xcvr 11	REV 01	740-011613	PE70YCE	SFP-SX
Xcvr 12	REV 01	740-011613	PE70VSH	SFP-SX
Xcvr 13	REV 01	740-011613	E08C02063	SFP-SX
Xcvr 14	REV 01	740-011613	PE70VKU	SFP-SX
Xcvr 15	REV 01	740-011613	E08E03372	SFP-SX
Xcvr 21	REV 01	740-011613	PE70VAD	SFP-SX
Xcvr 22	REV 01	740-011613	E08E01228	SFP-SX
Xcvr 23	REV 01	740-011613	PE70VSL	SFP-SX
Xcvr 24	REV 01	740-011613	E08E03409	SFP-SX
Xcvr 25	REV 01	740-011613	PE70VL4	SFP-SX
Xcvr 26	REV 01	740-011613	PDQ4L2Z	SFP-SX
Xcvr 27	REV 01	740-011613	PE70WFK	SFP-SX
Xcvr 28	REV 01	740-011782	PBD2B5U	SFP-SX
Xcvr 29	REV 01	740-011613	PE70UQX	SFP-SX
Xcvr 30	REV 01	740-011613	PE70VL5	SFP-SX
Xcvr 31	REV 01	740-011613	PE70V0F	SFP-SX
Xcvr 32	REV 01	740-011613	E08C02052	SFP-SX
Xcvr 33	REV 01	740-011613	E08C02197	SFP-SX
Xcvr 34	REV 01	740-011613	PE70V0L	SFP-SX
Xcvr 35	REV 01	740-011613	E08E03390	SFP-SX
Xcvr 36	REV 01	740-011613	PDQ4VL9	SFP-SX
Xcvr 37	REV 01	740-011613	E08E03370	SFP-SX
Xcvr 38	REV 01	740-011613	E08E03362	SFP-SX
Xcvr 39	REV 01	740-011613	E08C02065	SFP-SX
Xcvr 40	REV 01	740-011613	E08E03405	SFP-SX
Xcvr 41	REV 01	740-011613	E08E03411	SFP-SX
Xcvr 43	REV 01	740-011613	E08C02171	SFP-SX
Xcvr 45	REV 01	740-011613	E08E03410	SFP-SX
FPC 13	REV 16	710-016837	BB0109051344	EX8200-8XS
CPU				
SIB 0	REV 10	710-021613	AY0109166244	EX8216-SF320
SIB 1	REV 10	710-021613	AY0109166357	EX8216-SF320
SIB 2	REV 10	710-021613	AY0109166362	EX8216-SF320
SIB 3	REV 10	710-021613	AY0109166338	EX8216-SF320
SIB 4	REV 10	710-021613	AY0109166350	EX8216-SF320
SIB 5	REV 10	710-021613	AY0109166365	EX8216-SF320
SIB 6	REV 10	710-021613	AY0109166361	EX8216-SF320
SIB 7	REV 10	710-021613	AY0109166399	EX8216-SF320
PSU 0	REV 17	740-021466	BG0709170003	EX8200-AC2K
PSU 1	REV 17	740-021466	BG0709170004	EX8200-AC2K
PSU 2	REV 17	740-021466	BG0709170020	EX8200-AC2K
PSU 3	REV 17	740-021466	BG0709170017	EX8200-AC2K
PSU 4	REV 17	740-021466	BG0709170008	EX8200-AC2K
PSU 5	REV 17	740-021466	BG0709170018	EX8200-AC2K
Top Fan Tray				
FTC 0	REV 4	760-022620	CX1209140212	EX8216-FT
FTC 1	REV 4	760-022620	CX1209140212	EX8216-FT
Bottom Fan Tray				
FTC 0	REV 4	760-022620	CX1209140211	EX8216-FT
FTC 1	REV 4	760-022620	CX1209140211	EX8216-FT
LCD 0	REV 04	710-025742	CE0109186919	EX8200 LCD

**show chassis hardware clei-models (EX8216 Switch)**

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 08	710-016845		
PSU 0	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 1	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 2	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 3	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 4	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 5	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
Top Fan Tray				
Bottom Fan Tray				

**show chassis hardware clei-models (T1600 Router)**

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-005608		CHAS-BP-T640-S
FPM Display	REV 05	710-002897		CRAFT-T640-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	Rev 07	740-017906	IPUPAC7KTA	PWR-T1600-3-80-DC-S
PEM 1	Rev 18	740-002595		PWR-T-DC-S
SCG 0	REV 15	710-003423		SCG-T-S
Routing Engine 0	REV 08	740-014082		RE-A-2000-4096-S
Routing Engine 1	REV 07	740-014082		RE-A-2000-4096-S
CB 0	REV 05	710-007655		CB-T-S
CB 1	REV 03	710-017707		CB-T-S
FPC 0	REV 07	710-013558		T640-FPC2-E2
PIC 0	REV 01	750-010618		PB-4GE-SFP
PIC 1	REV 06	750-001900		PB-10C48-SON-SMSR
PIC 2	REV 14	750-001901		PB-40C12-SON-SMIR
PIC 3	REV 07	750-001900		PB-10C48-SON-SMSR
FPC 1	REV 06	710-013553		T640-FPC1-E2
PIC 0	REV 08	750-001072		P-1GE-SX
PIC 1	REV 10	750-012266		PB-4GE-TYPE1-SFP-IQ2
PIC 2	REV 22	750-005634		PB-1CH0C12SMIR-QPP
FPC 2				
PIC 0	REV 16	750-007141		PC-10GE-SFP
PIC 1	REV 06	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 2	REV 05	750-004695		PC-TUNNEL
PIC 3	REV 17	750-009553		PC-40C48-SON-SFP
FPC 3	REV 01	710-010154		T640-FPC3-E
PIC 0	REV 07	750-012793		PC-1XGE-TYPE3-XFP-IQ2
PIC 1	REV 25	750-007141		PC-10GE-SFP
PIC 2	REV 17	750-009553		PC-40C48-SON-SFP
PIC 3	REV 32	750-003700		PC-10C192-SON-VSR
FPC 4	REV 16	710-013037		T1600-FPC4-ES
PIC 1	REV 06	750-034781		PD-1CE-CFP
FPC 5	REV 02	710-013037		T1600-FPC4-ES
PIC 0	REV 16	750-012518		PD-40C192-SON-XFP
PIC 1	REV 01	750-010850		PD-10C768-SON-SR
FPC 6	REV 14	710-013037		T1600-FPC4-ES
PIC 0	REV 11	750-017405		PD-4XGE-XFP
PIC 1	REV 13	750-017405		PD-4XGE-XFP
FPC 7	REV 09	710-007529		T640-FPC3

PIC 0	REV 10	750-012793	PC-1XGE-TYPE3-XFP-IQ2
PIC 1	REV 01	750-015217	PC-8GE-TYPE3-SFP-IQ2
PIC 2	REV 01	750-015217	PC-8GE-TYPE3-SFP-IQ2
PIC 3	REV 15	750-009450	PC-10C192-S0N-SR2
SIB 0	REV 07	710-013074	SIB-I-T1600-S
SIB 1	REV 07	710-013074	SIB-I-T1600-S
SIB 2	REV 07	710-013074	SIB-I-T1600-S
SIB 3	REV 07	710-013074	SIB-I-T1600-S
SIB 4	REV 07	710-013074	SIB-I-T1600-S
Fan Tray 0			FANTRAY-T-S
Fan Tray 1			FANTRAY-T-S
Fan Tray 2			FAN-REAR-TX-T640-S

### show chassis hardware clei-models (PTX10008 Routers)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 27	750-054097	CMMUM00ARA	QFX10008-CHAS
CB 0	REV 02	750-068820	CMUCAH3CTB	QFX10000-RE
CB 1	REV 02	750-068820	CMUCAH3CTB	QFX10000-RE
FPC 0	REV 36	750-051354	CMUIAM9BAA	QFX10000-36Q
PIC 0		BUILTIN		
FPC 1	REV 33	750-051354	CMUIAM9BAA	QFX10000-36Q
PIC 0		BUILTIN		
FPC 2	REV 32	750-051357	CMUIANABAA	QFX10000-30C
PIC 0		BUILTIN		
FPC 3	REV 35	750-051357	CMUIANABAA	QFX10000-30C
PIC 0		BUILTIN		
FPC 5	REV 08	750-068822	CMUIAM9BAB	QFX10000-36Q
PIC 0		BUILTIN		
FPC 6	REV 08	750-068822	CMUIAM9BAB	QFX10000-36Q
PIC 0		BUILTIN		
FPD Board	REV 07	711-054687		
Power Supply 0	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 1	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 2	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 3	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 4	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 5	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
FTC 0	REV 14	750-050108	CMUCAHZCAA	QFX10008-FAN-CTRL
FTC 1	REV 14	750-050108	CMUCAHZCAA	QFX10008-FAN-CTRL
Fan Tray 0	REV 09	760-054372	CMUCAHYCAA	QFX10008-FAN
Fan Tray 1	REV 09	760-054372	CMUCAHYCAA	QFX10008-FAN
SIB 0	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 1	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 2	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 3	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 4	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 5	REV 23	750-050058	CMUCAH0CAA	QFX10008-SF

### show chassis hardware clei-models (PTX10016 Routers)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 24	750-077138	CMMUN00ARA	JNP10016

CB 0	REV 04	711-065897	PROTOXCLEI	PROTO-ASSEMBLY
CB 1	REV 05	711-065897	PROTOXCLEI	PROTO-ASSEMBLY
FPC 2				
PIC 0		BUILTIN		
FPC 4	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 5	REV 13	750-068822	CMUIAM9BAC	QFX10000-36Q
PIC 0		BUILTIN		
FPC 6	REV 41	750-071976	CMUIANABAB	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 7	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 8	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 9	REV 41	750-071976	CMUIANABAB	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 10	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 11	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 13	REV 41	750-071976	CMUIANABAB	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 15	REV 37	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
Power Supply 0	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 1	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 2	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 3	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 4	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 5	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 6	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 7	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 8	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 9	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Fan Tray 0				QFX5100-FAN-AFO
Fan Tray 1				QFX5100-FAN-AFO
SIB 0	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 1	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 2	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 3	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 4	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 5	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
FPD Board	REV 07	711-054687		

### show chassis hardware (EX2300-C Switch)

```
user@switch> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			HV0215410003	EX2300-C-12P
Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	RE-EX2300C-12P
FPC 0	REV 04	650-059984	HV0215410003	EX2300-C-12P
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0	REV 04	BUILTIN	BUILTIN	12x10/100/1000 Base-T
PIC 1	REV 04	650-059984	HV0215410003	2x10G SFP/SFP+
Xcvr 0	REV 01	740-021309	T09K00695	SFP+-10G-LR
Xcvr 1	REV 01	740-030658	AD1146A05JT	SFP+-10G-USR
Power Supply 0				JPSU-170W-AC

## show chassis hardware (EX2300 Switch)

```
user@switch> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JY0215410033	EX2300-24P
Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	RE-EX2300-24P
FPC 0	REV 05	650-059968	JY0215410033	EX2300-24P
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0	REV 05	BUILTIN	BUILTIN	24x10/100/1000 Base-T
PIC 1	REV 05	650-059968	JY0215410033	4x10G SFP/SFP+
Xcvr 0	REV 01	740-030658	AD1125A03ES	SFP+-10G-USR
Xcvr 1	REV 01	740-021308	AJPOTDZ	SFP+-10G-SR
Xcvr 3	REV 01	740-021309	A9401FL	SFP+-10G-LR
Power Supply 0				JPSU-450W-AC-AFO
Fan Tray 0 (AFO)				Fan Module, Airflow Out
Fan Tray 1 (AFO)				Fan Module, Airflow Out

## show chassis hardware detail (EX4200 Switch)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			BM0208327733	EX4200-24T
Routing Engine 0	REV 11	750-021256	BM0208327733	EX4200-24T, 8 POE
Routing Engine 0			BM0208327733	EX4200-24T, 8 POE
FPC 0	REV 11	750-021256	BM0208327733	EX4200-24T, 8 POE
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	24x 10/100/1000 Base-T
PIC 1	REV 03B	711-021270	AR0208162285	4x GE SFP
BRD	REV 08	711-021264	AK0208328289	EX4200-24T, 8 POE
Power Supply 0	REV 03	740-020957	AT0508346354	PS 320W AC
Fan Tray				Fan Tray

## show chassis hardware (EX4300 Switch)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			PD3713160055	EX4300-48P
Routing Engine 0	REV 04	650-044930	PD3713160055	EX4300-48P
FPC 0	REV 04	650-044930	PD3713160055	EX4300-48P
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0	REV 04	BUILTIN	BUILTIN	48x 10/100/1000 Base-T
PIC 1	REV 04	BUILTIN	BUILTIN	4x 40GE
Power Supply 0	REV 01	740-046871	1EDA3090026	JPSU-1100-AC-AFO-A
Fan Tray 0 (AFO)				Fan Module, Airflow Out
Fan Tray 1 (AFO)				Fan Module, Airflow Out

## show chassis hardware models (EX4500 Switch)

```
user@host> show chassis hardware models
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	FRU model number
Routing Engine 0	REV 01	750-035700	GG0210271867	EX4500-40F-FB-C
FPC 0	REV 01	750-035700	GG0210271867	EX4500-40F-FB-C
PIC 0		BUILTIN	BUILTIN	EX4500-40F-FB-C
Power Supply 1	REV 01	740-029654	H884FS00JC09	EX4500-PWR1-AC-FB

## show chassis hardware detail (EX9200 Switch)

```
user@switch> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN111DA44RFB	EX9208
Midplane	REV 05	710-017414	TS2912	EX9208-BP
FPM Board	REV 02	710-017254	XN1804	Front Panel Display
PEM 0	Rev 01	740-022697	QCS0906C033	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 01	740-022697	QCS0906C095	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 08	740-031116	9009122883	RE-S-EX9200-1800X4
CB 0	REV 16	750-031391	CAAW4391	EX9200-SCBEF
PC 0	REV 07	750-049612	CABJ9312	EX9200 40x1G Copper
CPU	REV 04	711-038484	CABH8268	MPCE PMB 2G
MIC 0	REV 02	750-049607	CABT9623	40x 1GE RJ45
PIC 0		BUILTIN	BUILTIN	10x 1GE RJ45
PIC 1		BUILTIN	BUILTIN	10x 1GE RJ45
PIC 2		BUILTIN	BUILTIN	10x 1GE RJ45
PIC 3		BUILTIN	BUILTIN	10x 1GE RJ45
FPC 1	REV 10	710-013699	CAAN3529	EX9200-40x1G-SFP
CPU	REV 04	711-038484	CAAL7608	MPCE PMB 2G
MIC 0	REV 26	750-028392	CAAS5151	20x 1GE SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE SFP
PIC 1		BUILTIN	BUILTIN	10x 1GE SFP
MIC 1	REV 26	750-028392	CAAC8006	20x 1GE SFP
PIC 2		BUILTIN	BUILTIN	10x 1GE SFP
Xcvr 8	REV 01	740-011613	E08L03674	SFP-SX
Xcvr 9	REV 01	740-011613	E08M00243	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE SFP
FPC 3	REV 10	710-013699	CAAR5261	EX9200-40x1G-SFP
CPU	REV 04	711-038484	CAAS2118	MPCE PMB 2G
MIC 0	REV 26	750-028392	CAAS5067	20x 1GE SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE SFP
Xcvr 2	REV 01	740-031851	PNA7L8U	SFP-SX
Xcvr 3	REV 02	740-011613	AM0943SEKGZ	SFP-SX
Xcvr 4	REV 02	740-011613	AM0943SEJZ9	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE SFP
MIC 1	REV 26	750-028392	CAAS5132	20x 1GE SFP
PIC 2		BUILTIN	BUILTIN	10x 1GE SFP
Xcvr 4	REV 01	740-011613	E08D02625	SFP-SX
Xcvr 9	REV 02	740-011613	PJH4RD9	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE SFP
Xcvr 0	REV 01	740-011613	AM0813S8YME	SFP-SX
Fan Tray				Left Fan Tray

## show chassis hardware detail (EX9251 Switch)

```
user@switch> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			BLANK	EX9251
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x6
CB 0	REV 05	750-069579	CAGT1382	EX9251
FPC 0		BUILTIN	BUILTIN	MPC
PIC 0		BUILTIN	BUILTIN	4XSFP28 PIC
Xcvr 0	REV 01	740-044512	APF14500007NHC	QSFP+-40G-CU50CM
Xcvr 2	REV 01	740-046565	QH21035H	QSFP+-40G-SR4
PIC 1		BUILTIN	BUILTIN	8XSFP PIC
Xcvr 0	REV 01	740-031980	AA15393URH7	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AA162832LVG	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	MXAONKJ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	MXAOK75	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	MXA138L	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	13T511102684	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	MXA138E	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	MXA152N	SFP+-10G-SR
PEM 0	REV 02	740-070749	1F186390060	AC AFO 650W PSU
PEM 1	REV 02	740-070749	1F186390045	AC AFO 650W PSU
Fan Tray 0				Fan Tray, Front to Back
Airflow - AFO				
Fan Tray 1				Fan Tray, Front to Back
Airflow - AFO				

## show chassis hardware detail (EX9253 Switch)

```
user@switch> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN126145CJCB	EX9253
Midplane	REV 06	750-074276	CAJE4108	Midplane 2
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x6
Routing Engine 1		BUILTIN	BUILTIN	RE-S-2X00x6
CB 0	REV 24	750-067071	CAJF6414	Control Board
Mezz	REV 14	711-066896	CAJF6327	Control Mezz Board
CB 1	REV 24	750-067071	CAJF6398	Control Board
Mezz	REV 14	711-066896	CAJF6314	Control Mezz Board
FPC 0	REV 19	750-066879	CAJD1692	LC2103
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0		BUILTIN	BUILTIN	6xQSFP
Xcvr 0	REV 01	740-054053	QH20019A	QSFP+-4X10G-SR
PIC 1	REV 15	750-068806	CAJD1416	MIC1
Xcvr 0	REV 01	740-061405	1ECQ1151163	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-061405	1ECQ11511AK	QSFP-100GBASE-SR4
Xcvr 2	REV 01	740-032986	QB160112	QSFP+-40G-SR4
FPC 1	REV 19	750-066879	CAJD1685	LC2103
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0		BUILTIN	BUILTIN	6xQSFP
PIC 1	REV 15	750-068806	CAJD1393	MIC1
Xcvr 0	REV 01	740-032986	QB120887	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QD465034	QSFP+-40G-SR4
Xcvr 2	REV 01	740-052009	UWE2CBQ	QSFP+-40G-LR4
Xcvr 4	REV 01	740-032986	QB120701	QSFP+-40G-SR4
PEM 0	REV 01	740-066937	1HS17070027	JNP-PWR1600-AC



PEM 1	REV 01	740-066937	1HS17070151	JNP-PWR1600-AC
PEM 4	REV 01	740-066937	1HS17070090	JNP-PWR1600-AC
PEM 5	REV 01	740-066937	1HS16480119	JNP-PWR1600-AC
Fan Tray 0	REV 08	760-069329	CAJF6944	JNP FAN 3RU
Fan Tray 1	REV 08	760-069329	CAJF6863	JNP FAN 3RU
Fan Tray 2	REV 08	760-069329	CAJF6891	JNP FAN 3RU
Fan Tray 3	REV 08	760-069329	CAJF6937	JNP FAN 3RU

### show chassis hardware detail (PTX10008 Routers)

user@switch> show chassis hardware detail

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			DE487	JNP10008 [PTX10008 -
PILOT BUILD V1.1]				
Midplane	REV 27	750-054097	ACPD4307	Midplane 8
Routing Engine 0		BUILTIN	BUILTIN	RE-PTX-2X00x4
vtbd0 15360 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 128 MB	QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1)	EHCI root HUB 0		Intel	uhub0
usb1 (addr 0.2)	product 0x0020 32		vendor 0x8087	uhub1
Routing Engine 1		BUILTIN	BUILTIN	RE-PTX-2X00x4
vtbd0 15360 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 128 MB	QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1)	EHCI root HUB 0		Intel	uhub0
usb1 (addr 0.2)	product 0x0020 32		vendor 0x8087	uhub1
CB 0	REV 02	750-068820	ACNZ4440	Control Board
CB 1	REV 02	750-068820	ACNZ8284	Control Board
FPC 0	REV 36	750-051354	ACNP4679	LC1102 - 12C / 36Q /
144X				
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 1	REV 01	740-058734	1ECQ113834D	QSFP-100GBASE-SR4
Xcvr 5	REV 01	740-058734	1ECQ1137067	QSFP-100GBASE-SR4
Xcvr 6	REV 01	740-054053	QF3205SD	QSFP+-4X10G-SR
Xcvr 7	REV 01	740-058734	1ECQ11381MP	QSFP-100GBASE-SR4
Xcvr 11	REV 01	740-061405	1ACQ110507K	QSFP-100GBASE-SR4
Xcvr 13	REV 01	740-058734	1ECQ11390ZB	QSFP-100GBASE-SR4
Xcvr 17	REV 01	740-058734	1ECQ11381M1	QSFP-100GBASE-SR4
Xcvr 19	REV 01	740-058734	1ECQ11381JS	QSFP-100GBASE-SR4
Xcvr 23	REV 01	740-058734	1ACQ112000E	QSFP-100GBASE-SR4
Xcvr 25	REV 01	740-058734	1ECQ11381NT	QSFP-100GBASE-SR4
Xcvr 28	REV 01	740-054053	QG1502WV	QSFP+-4X10G-SR
Xcvr 29	REV 01	740-058734	1ACQ112000D	QSFP-100GBASE-SR4
Xcvr 33	REV 01	740-058734	1ACQ1134065	QSFP-100GBASE-SR4
Xcvr 34	REV 01	740-067442	XV20L4L	QSFP+-40G-SR4
FPC 1	REV 33	750-051354	ACNX8831	LC1102 - 12C / 36Q /
144X				
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 5		NON-JNPR	37700171YY0084	QSFP-100GBASE-LR4
Xcvr 25		NON-JNPR	GDA2017459	QSFP-100GBASE-LR4
Xcvr 29		NON-JNPR	GDF2008750	QSFP-100GBASE-LR4
FPC 2	REV 32	750-051357	ACPB0341	LC1101 - 30C / 30Q / 96X

CPU PIC 0		BUILTIN BUILTIN	BUILTIN BUILTIN	FPC CPU 30x100GE/30x40GE/96x10GE
Xcvr 0		NON-JNPR	37700170YZC305	QSFP-100GBASE-LR4
Xcvr 4		NON-JNPR	37700170YZC306	QSFP-100GBASE-LR4
Xcvr 9	REV 01	740-054053	QF36013S	QSFP+-4X10G-SR
Xcvr 12	REV 01	740-067442	XV301AU	QSFP+-40G-SR4
Xcvr 14	REV 01	740-043308	UWE2CG9	QSFP+-40G-LR4
Xcvr 16	REV 01	740-043308	UWH141S	QSFP+-40G-LR4
Xcvr 17	REV 01	740-058734	1ECQ11180VH	QSFP-100GBASE-SR4
Xcvr 18	REV 01	740-054050	INFJA0492237	QSFP+-4X10G-LR
Xcvr 26	REV 01	740-058734	1ACQ111803N	QSFP-100GBASE-SR4
Xcvr 27	REV 01	740-058734	1ACQ113405S	QSFP-100GBASE-SR4
FPC 3	REV 35	750-051357	ACPD2186	LC1101 - 30C / 30Q / 96X
CPU PIC 0		BUILTIN BUILTIN	BUILTIN BUILTIN	FPC CPU 30x100GE/30x40GE/96x10GE
Xcvr 0	REV 01	740-061409	1GCQA1470A3	QSFP-100GBASE-LR4-T2
Xcvr 1	REV 01	740-061409	1GCQA1470XC	QSFP-100GBASE-LR4-T2
Xcvr 7		NON-JNPR	FG4550500008	QSFP-100G-CWDM4
Xcvr 24	REV 01	740-058734	1ECQ11381LX	QSFP-100GBASE-SR4
Xcvr 29	REV 01	740-043308	UWE0UYS	QSFP+-40G-LR4
FPC 5 144X	REV 08	750-068822	ACPF0057	LC1102 - 12C / 36Q /
CPU PIC 0		BUILTIN BUILTIN	BUILTIN BUILTIN	FPC CPU 12x100GE/36x40GE/144x10GE
FPC 6 144X	REV 08	750-068822	ACPE9951	LC1102 - 12C / 36Q /
CPU PIC 0		BUILTIN BUILTIN	BUILTIN BUILTIN	FPC CPU 12x100GE/36x40GE/144x10GE
Xcvr 1	REV 01	740-054053	QF3208LG	QSFP+-4X10G-SR
Xcvr 7	REV 01	740-067442	XV20LGN	QSFP+-40G-SR4
Xcvr 8	REV 01	740-067442	XV20VMV	QSFP+-40G-SR4
Xcvr 9	REV 01	740-067442	XV20KCN	QSFP+-40G-SR4
Xcvr 10	REV 01	740-067442	XU504QD	QSFP+-40G-SR4
Xcvr 11	REV 01	740-067442	XU504X7	QSFP+-40G-SR4
Xcvr 12	REV 01	740-067442	XU504W8	QSFP+-40G-SR4
Xcvr 16	REV 01	740-032986	QF4301JP	QSFP+-40G-SR4
Xcvr 17	REV 01	740-032986	QF4303AE	QSFP+-40G-SR4
Xcvr 18	REV 01	740-054050	INFJA0492400	QSFP+-4X10G-LR
Xcvr 19	REV 01	740-054050	INFJA0492142	QSFP+-4X10G-LR
Xcvr 24	REV 01	740-032986	QF4301KB	QSFP+-40G-SR4
Xcvr 25	REV 01	740-032986	QF4303YP	QSFP+-40G-SR4
Xcvr 30	REV 01	740-067442	XV300ZX	QSFP+-40G-SR4
Xcvr 31	REV 01	740-043308	UWH2KBW	QSFP+-40G-LR4
Xcvr 34	REV 01	740-054053	QG1501YU	QSFP+-4X10G-SR
FPD Board	REV 07	711-054687	ACPC7142	Front Panel Display
Power Supply 0	REV 02	740-049388	1EDL62102N9	Power Supply AC
Power Supply 1	REV 02	740-049388	1EDL60300KX	Power Supply AC
Power Supply 2	REV 02	740-049388	1EDL60300DL	Power Supply AC
Power Supply 3	REV 02	740-049388	1EDL61701BT	Power Supply AC
Power Supply 4	REV 02	740-049388	1EDL62102P7	Power Supply AC
Power Supply 5	REV 02	740-049388	1EDL62102PP	Power Supply AC
FTC 0	REV 14	750-050108	ACPE4038	Fan Controller 8
FTC 1	REV 14	750-050108	ACPE4032	Fan Controller 8
Fan Tray 0	REV 09	760-054372	ACPD6799	Fan Tray 8
Fan Tray 1	REV 09	760-054372	ACNZ3584	Fan Tray 8

SIB 0	REV 24	750-050058	ACPD4587	Switch Fabric 8
SIB 1	REV 24	750-050058	ACNZ0635	Switch Fabric 8
SIB 2	REV 24	750-050058	ACPD4908	Switch Fabric 8
SIB 3	REV 24	750-050058	ACNZ0617	Switch Fabric 8
SIB 4	REV 24	750-050058	ACNZ0527	Switch Fabric 8
SIB 5	REV 23	750-050058	ACNX6980	Switch Fabric 8

### show chassis hardware detail (PTX10016 Routers)

```
user@switch> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			DH995	JNP10016 [PTX10016]
Midplane	REV 22	750-056555	ACPM7810	Midplane 16
Routing Engine 0		BUILTIN	BUILTIN	RE-PTX-2X00x4
vtbd0 15360 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 128 MB	QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1)	EHCI root HUB 0		Intel	uhub0
usb1 (addr 0.2)	product 0x0020 32		vendor 0x8087	uhub1
Routing Engine 1		BUILTIN	BUILTIN	RE-PTX-2X00x4
vtbd0 15360 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 128 MB	QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1)	EHCI root HUB 0		Intel	uhub0
usb1 (addr 0.2)	product 0x0020 32		vendor 0x8087	uhub1
CB 0	REV 03	750-068820	ACPL7238	Control Board
CB 1	REV 03	750-068820	ACPL7298	Control Board
FPC 1	REV 36	750-077140	ACNP4590	LC1102 - 12C / 36Q / 144X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 0	REV 01	740-054053	QF3600AV	QSFP+-4X10G-SR
Xcvr 35	REV 01	740-061405	1ACQ110507K	QSFP-100GBASE-SR4
FPC 3	REV 07	750-071975	CAHA2224	LC1102 - 12C / 36Q / 144X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 0	REV 01	740-054053	QG1505YM	QSFP+-4X10G-SR
Xcvr 11		NON-JNPR	GDA2017459	QSFP-100GBASE-LR4
Xcvr 35		NON-JNPR	GDF2008750	QSFP-100GBASE-LR4
FPC 5	REV 13	750-068822	ACPD6501	LC1102 - 12C / 36Q / 144X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 1	REV 01	740-058734	1ECQ11381LA	QSFP-100GBASE-SR4
Xcvr 2	REV 01	740-043308	UWH141S	QSFP+-40G-LR4
Xcvr 3	REV 01	740-043308	UWE2CG9	QSFP+-40G-LR4
FPC 6	REV 37	750-077140	ACNS2793	LC1102 - 12C / 36Q / 144X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 0	REV 01	740-032986	QH0400VH	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QH0400VM	QSFP+-40G-SR4

Xcvr 35	REV 01	740-058734	1ECQ11390ZB	QSFP-100GBASE-SR4
FPC 8	REV 36	750-077140	ACNP4625	LC1102 - 12C / 36Q /
144X				
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 1	REV 01	740-058732	1AMQA14206D	QSFP-100GBASE-LR4
Xcvr 10	REV 01	740-032986	QF4301KB	QSFP+-40G-SR4
Xcvr 24	REV 01	740-054050	INFAJ0492244	QSFP+-4X10G-LR
FPC 9	REV 35	750-071976	ACPD3055	LC1101 - 30C / 30Q / 96X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	30x100GE/30x40GE/96x10GE
Xcvr 0		NON-JNPR	INGBT7970007	QSFP-100GBASE-LR4
Xcvr 1		NON-JNPR	UWQ24D9	QSFP-100GBASE-LR4
Xcvr 2		NON-JNPR	INGBT7970011	QSFP-100GBASE-LR4
Xcvr 3		NON-JNPR	UX60AF1	QSFP-100G-CWDM4
Xcvr 4		NON-JNPR	UX408JJ	QSFP-100GBASE-LR4
Xcvr 11	REV 01	740-058734	1ECQ113835F	QSFP-100GBASE-SR4
Xcvr 18		NON-JNPR	Q7496	QSFP-100G-CWDM4
Xcvr 29	REV 01	740-058734	1ECQ11380LZ	QSFP-100GBASE-SR4
Power Supply 0	REV 02	740-049388	1EDL625039E	Power Supply AC
Power Supply 1	REV 02	740-049388	1EDL62503AD	Power Supply AC
Power Supply 2	REV 02	740-049388	1EDL625039P	Power Supply AC
Power Supply 3	REV 02	740-049388	1EDL702004E	Power Supply AC
Power Supply 4	REV 02	740-049388	1EDL625039D	Power Supply AC
Power Supply 5	REV 02	740-049388	1EDL63706JD	Power Supply AC
Power Supply 6	REV 02	740-049388	1EDL63706JH	Power Supply AC
FTC 0	REV 10	750-050309	ACPM2918	Fan Controller 16
FTC 1	REV 10	750-050309	ACPE8185	Fan Controller 16
Fan Tray 0	REV 10	760-077141	ACPV7288	Fan Tray 16
Fan Tray 1	REV 10	760-057901	ACPL0546	Fan Tray 16
SIB 0	REV 15	750-058270	ACPM2804	Switch Fabric 16
SIB 1	REV 15	750-058270	ACPM2808	Switch Fabric 16
SIB 2	REV 15	750-058270	ACPL4450	Switch Fabric 16
SIB 3	REV 15	750-058270	ACPJ9834	Switch Fabric 16
SIB 4	REV 15	750-058270	ACPM2814	Switch Fabric 16
SIB 5	REV 15	750-058270	ACPL4277	Switch Fabric 16
FPD Board	REV 07	711-054687	ACPL1407	Front Panel Display

### show chassis hardware (M7i Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			31959	M7i
Midplane	REV 02	710-008761	CA0209	M7i Midplane
Power Supply 0	Rev 04	740-008537	PD10272	AC Power Supply
Routing Engine	REV 01	740-008846	1000396803	RE-5.0
CFEB	REV 02	750-009492	CA0166	Internet Processor IIV1
FPC 0				E-FPC
PIC 0	REV 04	750-003163	HJ6416	1x G/E, 1000 BASE-SX
PIC 1	REV 04	750-003163	HJ6423	1x G/E, 1000 BASE-SX
PIC 2	REV 04	750-003163	HJ6421	1x G/E, 1000 BASE-SX
PIC 3	REV 02	750-003163	HJ0425	1x G/E, 1000 BASE-SX
FPC 1				E-FPC
PIC 2	REV 01	750-009487	HM2275	ASP - Integrated
PIC 3	REV 01	750-009098	CA0142	2x F/E, 100 BASE-TX

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			B1157	M7i
Midplane	REV 05	710-008761	DM0840	M7i Midplane
Power Supply 0	Rev 08	740-008537	TE53755	AC Power Supply
Routing Engine	REV 07	740-011202	1000736567	RE-850
CFEB	REV 09	750-010463	DK6952	Internet Processor II
FPC 0				E-FPC
PIC 0	REV 12	750-012838	DL7993	4x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011614	PD94TDJ	SFP-LX10
Xcvr 1	REV 01	740-011615	PAD5EER	UNSUPPORTED
Xcvr 2	REV 01	740-011614	PD94THU	SFP-LX10
Xcvr 3		NON-JNPR	PDC2E7A	SFP-LX10
PIC 1	REV 03	750-023116	JT0203	4x CHSTM1 SDH CE SFP
Xcvr 0	REV 01	740-012434	AGT063832PS	SFP-SR
Xcvr 1	REV 01	740-012434	AGT063832LY	SFP-SR
Xcvr 3	REV 01	740-016064	C06J19018	SFP-LR
PIC 2	REV 15	750-014895	DM5757	MultiServices 100
PIC 3	REV 01	750-025390	JW9448	12x T1/E1 CE
FPC 1				E-FPC
PIC 2		BUILTIN	BUILTIN	1x Tunnel
PIC 3	REV 09	750-009099	DM0899	1x G/E, 1000 BASE
Xcvr 0	REV 01	740-012434	AGT07150HGJ	UNSUPPORTED
Fan Tray				Rear Fan Tray

### show chassis hardware (M10 Router)

user@host> show chassis hardware				
Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			1122	M10
Midplane	REV 1.1	710-001950	S/N AC6626	
Power supply A	Rev 01	740-002497	S/N LC36095	AC
Power supply B	Rev 01	740-002497	S/N LC36100	AC
Display	REV 1.2	710-001995	S/N AC6656	
Host			18000005dfb3fb01	teknor
FEB	REV 01	710-001948	S/N AC6632	Internet Processor II
FPC 0				
PIC 0	REV 08	750-001072	S/N AB2485	1x G/E, 1000 BASE-SX
PIC 1	REV 01	750-000613	S/N AA1048	1x OC-12 SONET, SMIR
FPC 1				
Fan Tray 0				FANTRAY-M10I-S
Fan Tray 1				FANTRAY-M10I-S

### show chassis hardware models (M10 Router)

user@host> show chassis hardware models				
Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	710-008920		CHAS-MP-M10i-S
Power Supply 0	Rev 06	740-008537		PWR-M10i-M7i-AC-S
Power Supply 1	Rev 06	740-008537		PWR-M10i-M7i-AC-S
HCM 0	REV 03	710-010580		HCM-M10i-S
HCM 1	REV 03	710-010580		HCM-M10i-S
Routing Engine 0	REV 09	740-009459		RE-400-256-S
CFEB 0	REV 05	750-010465		FEB-M10i-M7i-S
FPC 0				

PIC 0	REV 10	750-002971	PE-40C3-SON-MM
PIC 1	REV 11	750-002992	PE-4FE-TX
PIC 2	REV 03	750-002977	PE-20C3-ATM-MM
PIC 3	REV 08	750-005724	PE-20C3-ATM2-MM
FPC 1			
PIC 2	REV 12	750-008425	PE-AS
PIC 3	REV 13	750-005636	PE-4CHDS3-QPP
Fan Tray 0			FANTRAY-M10I-S
Fan Tray 1			FANTRAY-M10I-S

### show chassis hardware (M20 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			20033	M20
Backplane	REV 07	710-001517	S/N AA7940	
Power supply B	Rev 01	740-001465	S/N 000001	AC
Display	REV 02	710-001519	S/N AA9704	
Host 0			98000004f8f27501	teknor
SSB slot 0	REV 01	710-001951	S/N AD5905	Internet Processor II
SSRAM bank 0	REV 01	710-001385	S00480	2 MB
SSRAM bank 1	REV 01	710-001385	S00490	2 MB
SSRAM bank 2	REV 01	710-001385	S001:?	2 MB
SSRAM bank 3	REV 01	710-001385	S00483	2 MB
SSB slot 1	N/A	N/A	N/A	Backup
FPC 1	REV 01	710-001292	S/N AB7528	
SSRAM	REV 01	710-000077	S/N 304209	1 MB
SDRAM bank 0	REV 01	710-000099	S/N 000603	64 MB
SDRAM bank 1	REV 01	710-000099	S/N 000414	64 MB
PIC 0	REV 03	750-000612	S/N AB8433	2x OC-3 ATM, MM
PIC 1	REV 01	750-000616	S/N AA1168	1x OC-12 ATM, MM
PIC 2	REV 01	750-000613	S/N AA1008	1x OC-12 SONET, SMIR
PIC 3	REV 01	750-002501	S/N AD5810	4x E3
FPC 2	REV 01	710-001292	S/N AC0119	
SSRAM	REV 01	710-000077	S/N 503241	1 MB
SDRAM bank 0	REV 01	710-000099	S/N 306835	64 MB
SDRAM bank 1	REV 01	710-000099	S/N 306832	64 MB
Fan Tray 0				Front Upper Fan Tray
Fan Tray 1				Front Middle Fan Tray
Fan Tray 2				Front Bottom Fan Tray
Fan Tray 3				Rear Fan Tray

### show chassis hardware models (M20 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Backplane	REV 03	710-002334		CHAS-MP-M20-S
Power Supply A	REV 06	740-001465		PWR-M20-AC-S
Display	REV 04	710-001519		CRAFT-M20-S
Routing Engine 0	REV 06	740-003239		RE-333-768-S
Routing Engine 1	REV 06	740-003239		RE-333-768-S
SSB 0	REV 02	710-001951		SSB-E-M20
SSB 1	N/A	N/A		
FPC 0	REV 03	710-003308		FPC-E
PIC 0	REV 08	750-002303		P-4FE-TX

PIC 1	REV 07	750-004745	P-2MCDS3
PIC 2	REV 03	750-002965	PE-4CHDS3
FPC 1	REV 03	710-003308	FPC-E
PIC 0	REV 03	750-002914	P-20C3-ATM-MM
Fan Tray 0			FANTRAY-F-M20-S
Fan Tray 1			FANTRAY-F-M20-S
Fan Tray 2			FANTRAY-F-M20-S
Fan Tray 3			FANTRAY-R-M20-S

### show chassis hardware (M40 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Backplane	REV 02	710-000073	S/N AA0053	
Power supply A	Rev 2	740-000235	S/N 000042	DC
Maxicab	REV X1	710-000229	S/N AA0139	
Minicab	REV X1	710-000482	S/N AA0201	
Display	REV 06	710-000150	S/N AA0905	
Host				cpv5000
SCB	REV X1	710-000075	S/N AA0158	Internet Processor I
SSRAM bank 0	REV 02	710-000077	S/N AA2267	1 MB
SSRAM bank 1	REV 02	710-000077	S/N AA2270	1 MB
SSRAM bank 2	REV 02	710-000077	S/N AA2269	1 MB
SSRAM bank 3	REV 02	710-000077	S/N AA2268	1 MB
FPC 0	REV 01	710-000175	S/N AA0048	
SSRAM	REV 01	710-000077	S/N AA2333	1 MB
SDRAM bank 0	REV 01	710-000099	S/N AA2332	64 MB
SDRAM bank 1	REV X1	710-000099	S/N AA2337	64 MB
PIC 0	REV 04	750-000613	S/N aa0343	1x OC-12 SONET, SMIR
PIC 1	REV 04	750-000613	S/N AA0379	1x OC-12 SONET, SMIR
PIC 2	REV 04	750-000613	S/N AA0377	1x OC-12 SONET, SMIR
PIC 3	REV 04	750-000613	S/N AA0378	1x Tunnel
FPC 2	REV 01	710-000175	S/N AA0042	
SSRAM	REV 02	710-000077	S/N AA2288	1 MB
SDRAM bank 0	REV 01	710-000099	S/N AA2331	64 MB
SDRAM bank 1	REV 01	710-000099	S/N AA2330	64 MB
PIC 0	REV X1	750-000603	S/N AA0143	4x OC-3 SONET, SMIR
PIC 1	REV X1	750-000615	S/N AA0149	4x OC-3 SONET, MM
PIC 2	REV X1	750-000611	S/N AA0148	4x OC-3 SONET, MM
PIC 3	REV 04	750-000613	S/N AA0330	1x OC-12 SONET, SMIR
FPC 4	REV 01	710-000175	S/N AA0050	
SSRAM	REV 01	710-000077	S/N AA2327	1 MB
SDRAM bank 0	REV 01	710-000099	S/N AA2329	64 MB
SDRAM bank 1	REV 01	710-000099	S/N AA2328	64 MB
PIC 0	REV 04	750-000613	S/N AA0320	1x OC-12 SONET, SMIR
PIC 2	REV 05	750-000616	S/N AA1341	1x OC-12 ATM, MM
PIC 3	REV 08	750-001072	S/N AB2462	1x G/E, 1000 BASE-SX
FPC 5	REV 10	710-000175	S/N AA7663	
SSRAM	REV 01	710-000077	S/N 501590	1 MB
SDRAM bank 0	REV 01	710-000099	S/N 300949	64 MB
SDRAM bank 1	REV 01	710-000099	S/N 300868	64 MB
PIC 1	REV 01	750-001323	S/N AB1670	1x Tunnel

### show chassis hardware (M40e Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis				m40e
Midplane	REV 01	710-005071	AX3671	
FPM CMB	REV 03	710-001642	AR9074	
FPM Display	REV 03	710-001647	AR7331	
CIP	REV 04	710-002649	BB4449	
PEM 0	Rev 01	740-003787	MC12364	Power Entry Module
PEM 1	Rev 01	740-003787	MC12383	Power Entry Module
PCG 0	REV 07	710-001568	AG1332	
PCG 1	REV 07	710-001568	AR3789	
Host 0			3e000007c8176601	Present
MCS 0	REV 11	710-001226	AN5813	
SFM 0 SPP	REV 07	710-001228	AG4676	
SFM 0 SPR	REV 05	710-002189	AE4735	Internet Processor II
SFM 1 SPP	REV 07	710-001228	AP1347	
SFM 1 SPR	REV 05	710-002189	BE0063	Internet Processor II
FPC 0	REV 01	710-011725	BE0669	M40e-EP-FPC Type 1
CPU	REV 01	710-004600	BD9504	
PIC 0	REV 03	750-003737	AY3991	4x G/E, 1000 BASE-SX
FPC 1	REV 01	710-005197	BD9842	M40e-FPC Type 2
CPU	REV 01	710-004600	BB4869	
PIC 0	REV 07	750-001900	AR8278	1x OC-48 SONET, SMSR
FPC 2	REV 02	710-005197	BD9824	M40e-FPC Type 2
CPU	REV 01	710-004600	BD9531	
PIC 0	REV 03	750-003737	AY3986	4x G/E, 1000 BASE-SX
FPC 4	REV 02	710-005078	BE0664	M40e-FPC Type 1
CPU	REV 01	710-004600	BD9559	
PIC 0	REV 03	750-001894	AG7963	1x G/E, 1000 BASE-SX
PIC 2	REV 01	750-002575	AF2472	4x OC-3 SONET, SMIR
FPC 6	REV 02	710-005078	BE0652	M40e-FPC Type 1
CPU	REV 01	710-004600	BD9607	
PIC 0	REV 02	750-002911	AN2286	4x F/E, 100 BASE-TX
PIC 2	REV 01	750-002577	AP6345	4x OC-3 SONET, MM

### show chassis hardware (M120 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN000054AC	M120
Midplane	REV 01	710-013667	RB4170	M120 Midplane
FPM Board	REV 02	710-011407	CJ9186	M120 FPM Board
FPM Display	REV 02	710-011405	CJ9173	M120 FPM Display
FPM CIP	REV 02	710-011410	CJ9221	M120 FPM CIP
PEM 0	Rev 05	740-011936	RM28320	AC Power Entry Module
PEM 1	Rev 05	740-011936	RM28321	AC Power Entry Module
Routing Engine 0	REV 03	740-014080	1000642883	RE-A-1000
CB 0	REV 03	710-011403	CM8346	M120 Control Board
CB 1	REV 06	710-011403	CP6728	M120 Control Board
FPC 1	REV 02	710-015908	CP6925	M120 CFPC 10GE
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN) XFP
Xcvr 0	REV 01	740-014279	62E204N00007	XFP-10G-LR
FPC 3	REV 03	710-011393	CJ9234	M120 FPC Type 2
PIC 0	REV 16	750-008155	NB5229	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F15JB	SFP-SX
Xcvr 1	REV 01	740-007326	P4Q0R9G	SFP-SX
PIC 1	REV 09	750-007745	CG4360	4x OC-3 SONET, SMIR
PIC 2	REV 16	750-008155	ND7787	2x G/E IQ, 1000 BASE



Xcvr 0	REV 01	740-011613	P9F12AS	SFP-SX
Xcvr 1	REV 01	740-011613	P9F1ALU	SFP-SX
PIC 3	REV 07	750-011800	JW1284	8x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	P9F1AM6	SFP-SX
Xcvr 6	REV 01	740-011613	P9F16NN	SFP-SX
Xcvr 7	REV 01	740-011782	P8C29Y7	SFP-SX
Board B	REV 02	710-011395	CN3754	M120 FPC Mezz
FPC 4	REV 02	710-011398	CP6741	M120 FPC Type 3
PIC 0	REV 16	750-007141	NB2855	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	P922A1F	SFP-SX
Xcvr 1	REV 01	740-011782	P922A16	SFP-SX
Xcvr 2	REV 01	740-011782	P922A0U	SFP-SX
Xcvr 3	REV 01	740-011782	P9229UZ	SFP-SX
Xcvr 4	REV 01	740-009029	P11JXWP	SFP-LX
Xcvr 6	REV 01	740-011613	P9F1ALW	SFP-SX
FPC 5	REV 01	710-011388	CJ9088	M120 FPC Type 1
PIC 0	*** Hardware Not Supported ***			
PIC 1	REV 05	750-012052	NB0410	1x CHOC3 IQ SONET, SMLR
PIC 2	REV 01	750-013167	CM3824	4x CHDS3 IQ
PIC 3	REV 01	750-010240	CB5366	1x G/E SFP, 1000 BASE
Board B	REV 01	710-011390	CJ9103	M120 FPC Mezz Board
FEB 3	REV 04	710-011663	CP6673	M120 FEB
FEB 4	REV 04	710-011663	CJ9368	M120 FEB
FEB 5	REV 04	710-011663	CJ9386	M120 FEB
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Top Fan Tray
Fan Tray 3				Rear Bottom Fan Tray

### show chassis hardware detail (M120 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN000054AC	M120
Midplane	REV 01	710-013667	RB4170	M120 Midplane
FPM Board	REV 02	710-011407	CJ9186	M120 FPM Board
FPM Display	REV 02	710-011405	CJ9173	M120 FPM Display
FPM CIP	REV 02	710-011410	CJ9221	M120 FPM CIP
PEM 0	Rev 05	740-011936	RM28320	AC Power Entry Module
PEM 1	Rev 05	740-011936	RM28321	AC Power Entry Module
Routing Engine 0	REV 03	740-014080	1000642883	RE-A-1000
ad0	248 MB	SILICONSYSTEMS INC	256M 126CT505S0763SC00110	Compact Flash
ad2	38154 MB	HTES41040G9SA00	MPBBTOX2HS2E3M	Hard Disk
CB 0	REV 03	710-011403	CM8346	M120 Control Board
CB 1	REV 06	710-011403	CP6728	M120 Control Board
FPC 1	REV 02	710-015908	CP6925	M120 CFPC 10GE
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN) XFP
Xcvr 0	REV 01	740-014279	62E204N00007	XFP-10G-LR
FPC 3	REV 03	710-011393	CJ9234	M120 FPC Type 2
PIC 0	REV 16	750-008155	NB5229	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F15JB	SFP-SX
Xcvr 1	REV 01	740-007326	P4Q0R9G	SFP-SX
PIC 1	REV 09	750-007745	CG4360	4x OC-3 SONET, SMIR
PIC 2	REV 16	750-008155	ND7787	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F12AS	SFP-SX
Xcvr 1	REV 01	740-011613	P9F1ALU	SFP-SX

PIC 3	REV 07	750-011800	JW1284	8x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	P9F1AM6	SFP-SX
Xcvr 6	REV 01	740-011613	P9F16NN	SFP-SX
Xcvr 7	REV 01	740-011782	P8C29Y7	SFP-SX
Board B	REV 02	710-011395	CN3754	M120 FPC Mezz
FPC 4	REV 02	710-011398	CP6741	M120 FPC Type 3
PIC 0	REV 16	750-007141	NB2855	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	P922A1F	SFP-SX
Xcvr 1	REV 01	740-011782	P922A16	SFP-SX
Xcvr 2	REV 01	740-011782	P922A0U	SFP-SX
Xcvr 3	REV 01	740-011782	P9229UZ	SFP-SX
Xcvr 4	REV 01	740-009029	P11JXWP	SFP-LX
Xcvr 6	REV 01	740-011613	P9F1ALW	SFP-SX
FPC 5	REV 01	710-011388	CJ9088	M120 FPC Type 1
PIC 0	*** Hardware Not Supported ***			
PIC 1	REV 05	750-012052	NB0410	1x CHOC3 IQ SONET, SMLR
PIC 2	REV 01	750-013167	CM3824	4x CHDS3 IQ
PIC 3	REV 01	750-010240	CB5366	1x G/E SFP, 1000 BASE
Board B	REV 01	710-011390	CJ9103	M120 FPC Mezz Board
FEB 3	REV 04	710-011663	CP6673	M120 FEB
FEB 4	REV 04	710-011663	CJ9368	M120 FEB
FEB 5	REV 04	710-011663	CJ9386	M120 FEB
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Top Fan Tray
Fan Tray 3				Rear Bottom Fan Tray

### show chassis hardware models (M120 Router)

```
user@host> show chassis hardware models
```

#### Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-013667		
FPM CIP	REV 02	710-011410		CRAFT-M120-S
PEM 0	Rev 05	740-011936		PWR-M120-AC-S
PEM 1	Rev 05	740-011936		PWR-M120-AC-S
Routing Engine 0	REV 03	740-014080		RE-A-1000-2048-S
CB 0	REV 03	710-011403		CB-M120-S
CB 1	REV 06	710-011403		CB-M120-S
FPC 1	REV 02	710-015908		M120-cFPC-1XGE-XFP
FPC 3				
PIC 0	REV 16	750-008155		PB-2GE-SFP-QPP
PIC 1	REV 09	750-007745		PC-4OC3-SON-SMIR
PIC 2	REV 16	750-008155		PB-2GE-SFP-QPP
PIC 3	REV 07	750-011800		PB-8GE-TYPE2-SFP-IQ2
FPC 4				
PIC 0	REV 16	750-007141		PC-10GE-SFP
FPC 5				
PIC 1	REV 05	750-012052		PB-1CHOC3-SMIR-QPP
PIC 2	REV 01	750-013167		PE-4CHDS3-QPP
PIC 3	REV 01	750-010240		PB-1GE-SFP
Fan Tray 0				FFANTRAY-M120-S
Fan Tray 1				FFANTRAY-M120-S
Fan Tray 2				RFANTRAY-M120-S
Fan Tray 3				RFANTRAY-M120-S

## show chassis hardware (M160 Router)

user@host&gt; show chassis hardware

Item	Version	Part number	Serial number	Description
Chassis			101	M160
Midplane	REV 02	710-001245	S/N AB4107	
FPM CMB	REV 01	710-001642	S/N AA2911	
FPM Display	REV 01	710-001647	S/N AA2999	
CIP	REV 02	710-001593	S/N AA9563	
PEM 0	Rev 01	740-001243	S/N KJ35769	DC
PEM 1	Rev 01	740-001243	S/N KJ35765	DC
PCG 0	REV 01	710-001568	S/N AA9794	
PCG 1	REV 01	710-001568	S/N AA9804	
Host 1			da000004f8d57001	teknor
MCS 1	REV 03	710-001226	S/N AA9777	
SFM 0 SPP	REV 04	710-001228	S/N AA2975	
SFM 0 SPR	REV 02	710-001224	S/N AA9838	Internet Processor I
SFM 1 SPP	REV 04	710-001228	S/N AA2860	
SFM 1 SPR	REV 01	710-001224	S/N AB0139	Internet Processor I
FPC 0	REV 03	710-001255	S/N AA9806	FPC Type 1
CPU	REV 02	710-001217	S/N AA9590	
PIC 1	REV 05	750-000616	S/N AA1527	1x OC-12 ATM, MM
PIC 2	REV 05	750-000616	S/N AA1535	1x OC-12 ATM, MM
PIC 3	REV 01	750-000616	S/N AA1519	1x OC-12 ATM, MM
FPC 1	REV 02	710-001611	S/N AA9523	FPC Type 2
CPU	REV 02	710-001217	S/N AA9571	
PIC 0	REV 03	750-001900	S/N AA9626	1x STM-16 SDH, SMIR
PIC 1	REV 01	710-002381	S/N AD3633	2x G/E, 1000 BASE-SX
FPC 2				FPC Type OC192
CPU	REV 03	710-001217	S/N AB3329	
PIC 0	REV 01			1x OC-192 SM SR-2
Fan Tray 0				Rear Bottom Blower
Fan Tray 1				Rear Top Blower
Fan Tray 2				Front Top Blower
Fan Tray 3				Front Fan Tray

## show chassis hardware models (M160 Router)

user@host&gt; show chassis hardware models

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-009120		CHAS-BP-M320-S
FPM Display	REV 02	710-009351		CRAFT-M320-S
CIP	REV 03	710-005926		CIP-M320-S
PEM 2	Rev X4	740-009148		PWR-M-DC-S
PEM 3	Rev X4	740-009148		PWR-M-DC-S
Routing Engine 0	REV 02	740-008883		RE-1600-2048-S
Routing Engine 1	REV 02	740-008883		RE-1600-2048-S
FPC 0	REV 02	710-010419		M320-FPC1
PIC 0	REV 01	750-001323		P-TUNNEL
PIC 1	REV 02	750-002987		PE-10C12-SON-SMIR
PIC 2	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 04	750-001896		PB-10C12-SON-SMIR
FPC 1	REV 02	710-010419		M320-FPC1
PIC 0	REV 04	750-001894		PB-1GE-SX
PIC 1	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 03	750-001894		PB-1GE-SX
FPC 2	REV 02	710-010419		M320-FPC1

PIC 0	REV 10	750-005634	PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634	PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634	PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634	PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634	PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634	PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634	PB-1CHOC12SMIR-QPP
FPC 3			
PIC 0	REV 03	750-001895	PB-10C12-SON-MM
PIC 1	REV 04	750-001894	PB-1GE-SX
PIC 3	REV 04	750-003141	PB-1GE-SX-B
FPC 4	REV 02	710-010419	M320-FPC1
FPC 5	REV 02	710-010419	M320-FPC1
FPC 6	REV 02	710-010419	M320-FPC1
FPC 7			
PIC 0	REV 15	750-001901	PB-40C12-SON-SMIR
PIC 1	REV 06	750-001900	PB-10C48-SON-SMSR
PIC 2	REV 07	750-001900	PB-10C48-SON-SMSR
PIC 3	REV 05	750-003737	PB-4GE-SX
SIB 0	REV 03	710-009184	SIB-M-S
SIB 1	REV 03	710-009184	SIB-M-S
SIB 2	REV 03	710-009184	SIB-M-S
SIB 3	REV 03	710-009184	SIB-M-S
Fan Tray 0			FFANTRAY-M320-S
Fan Tray 1			FFANTRAY-M320-S
Fan Tray 2			RFANTRAY-M320-S

### show chassis hardware detail (M160 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			101	M160
Midplane	REV 02	710-001245	S/N AB4107	
FPM CMB	REV 01	710-001642	S/N AA2911	
FPM Display	REV 01	710-001647	S/N AA2999	
CIP	REV 02	710-001593	S/N AA9563	
PEM 0	Rev 01	740-001243	S/N KJ35769	DC
PEM 1	Rev 01	740-001243	S/N KJ35765	DC
PCG 0	REV 01	710-001568	S/N AA9794	
PCG 1	REV 01	710-001568	S/N AA9804	
Host 1			da000004f8d57001	teknor
MCS 1	REV 03	710-001226	S/N AA9777	
SFM 0 SPP	REV 04	710-001228	S/N AA2975	
SFM 0 SPR	REV 02	710-001224	S/N AA9838	Internet Processor I
SSRAM bank 0	REV 01	710-000077	S/N 306456	1 MB
SSRAM bank 1	REV 01	710-000077	S/N 306474	1 MB
SSRAM bank 2	REV 01	710-000077	S/N 306388	1 MB
SSRAM bank 3	REV 01	710-000077	S/N 306392	1 MB
SFM 1 SPP	REV 04	710-001228	S/N AA2860	
SFM 1 SPR	REV 01	710-001224	S/N AB0139	Internet Processor I
SSRAM bank 0	REV 01	710-000077	S/N 302917	1 MB
SSRAM bank 1	REV 01	710-000077	S/N 302662	1 MB
SSRAM bank 2	REV 01	710-000077	S/N 302593	1 MB
SSRAM bank 3	REV 01	710-000077	S/N 100160	1 MB
FPC 0	REV 03	710-001255	S/N AA9806	FPC Type 1
CPU	REV 02	710-001217	S/N AA9590	
SSRAM	REV 01	710-000077	S/N 302836	1 MB
SDRAM 0	REV 01	710-001196	S00141	32 MB

SDRAM 1	REV 01	710-001196	S0010;	32 MB
SSRAM	REV 01	710-000077	S/N 302633	1 MB
SDRAM 0	REV 01	710-001196	S00143	32 MB
SDRAM 1	REV 01	710-001196	S00115	32 MB
SSRAM	REV 01	710-000077	S/N 302952	1 MB
SDRAM 0	REV 01	710-001196	S00135	32 MB
SDRAM 1	REV 01	710-001196	S001=3	32 MB
SSRAM	REV 01	710-000077	S/N 302892	1 MB
SDRAM 0	REV 01	710-001196	S00076	32 MB
SDRAM 1	REV 01	710-001196	S001=5	32 MB
PIC 1	REV 05	750-000616	S/N AA1527	1x OC-12 ATM, MM
PIC 2	REV 05	750-000616	S/N AA1535	1x OC-12 ATM, MM
PIC 3	REV 01	750-000616	S/N AA1519	1x OC-12 ATM, MM
FPC 1	REV 02	710-001611	S/N AA9523	FPC Type 2
CPU	REV 02	710-001217	S/N AA9571	
SSRAM	REV 01	710-000077	S/N 306340	1 MB
SDRAM 0	REV 01	710-001196	S00012	32 MB
SDRAM 1	REV 01	710-001196	S00017	32 MB
SSRAM	REV 01	710-000077	S/N 306454	1 MB
SDRAM 0	REV 01	710-001196	S00028	32 MB
SDRAM 1	REV 01	710-001196	S00027	32 MB
SSRAM	REV 01	710-000077	S/N 306492	1 MB
SDRAM 0	REV 01	710-001196	S00015	32 MB
SDRAM 1	REV 01	710-001196	S00031	32 MB
SSRAM	REV 01	710-000077	S/N 306363	1 MB
SDRAM 0	REV 01	710-001196	S00013	32 MB
SDRAM 1	REV 01	710-001196	S00032	32 MB
PIC 0	REV 03	750-001900	S/N AA9626	1x STM-16 SDH, SMIR
PIC 1	REV 01	710-002381	S/N AD3633	2x G/E, 1000 BASE-SX
FPC 2				FPC Type OC192
... SSRAM	REV 01	710-000077	S/N 306466	1 MB

### show chassis hardware (M320 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			67245	M320
Midplane	REV 05	710-009120	RB1202	M320 Midplane
FPM GBUS	REV 04	710-005928	HZ5697	M320 Board
FPM Display	REV 05	710-009351	HR1464	M320 FPM Display
CIP	REV 04	710-005926	HT8672	M320 CIP
PEM 0	Rev 05	740-009148	QK34208	DC Power Entry Module
PEM 1	Rev 05	740-009148	QK34262	DC Power Entry Module
PEM 2	Rev 05	740-009148	QF10449	DC Power Entry Module
PEM 3	Rev 05	740-009148	QJ18257	DC Power Entry Module
Routing Engine 0	REV 06	740-008883	P11123901185	RE-4.0
CB 0	REV 07	710-009115	JB2382	M320 Control Board
FPC 0	REV 02	710-005017	CD9926	M320 FPC Type 2
CPU	REV 01	710-011659	CJ6940	M320 PCA SCPU
PIC 0	REV 07	750-001900	AT1594	1x OC-48 SONET, SMSR
PIC 1	REV 03	750-001850	HS2746	1x Tunnel
PIC 2	REV 05	750-010618	JE7117	4x G/E SFP, 1000 BASE
PIC 3	REV 06	750-001900	HE6083	1x OC-48 SONET, SMSR
FPC 2	REV 02	710-005017	CH0319	M320 FPC Type 1
CPU	REV 01	710-011659	CJ6942	M320 PCA SCPU
PIC 0	REV 05	750-003034	BD8705	4x OC-3 SONET, SMIR
FPC 5	REV 02	710-005017	CD9938	M320 FPC Type 2
CPU				

FPC 7	REV 02	710-005017	CD9934	M320 FPC Type 2
CPU				
SIB 0	REV 09	710-009184	JA6540	M320 SIB
SIB 1	REV 09	710-009184	HV9511	M320 SIB
SIB 2	REV 09	710-009184	HW2057	M320 SIB
SIB 3	REV 09	710-009184	JA6687	M320 SIB
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray

### show chassis hardware models (M320 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-009120		CHAS-BP-M320-S
FPM Display	REV 02	710-009351		CRAFT-M320-S
CIP	REV 03	710-005926		CIP-M320-S
PEM 2	Rev X4	740-009148		PWR-M-DC-S
PEM 3	Rev X4	740-009148		PWR-M-DC-S
Routing Engine 0	REV 02	740-008883		RE-1600-2048-S
Routing Engine 1	REV 02	740-008883		RE-1600-2048-S
FPC 0	REV 02	710-010419		M320-FPC1
PIC 0	REV 01	750-001323		P-TUNNEL
PIC 1	REV 02	750-002987		PE-10C12-SON-SMIR
PIC 2	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 04	750-001896		PB-10C12-SON-SMIR
FPC 1	REV 02	710-010419		M320-FPC1
PIC 0	REV 04	750-001894		PB-1GE-SX
PIC 1	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 03	750-001894		PB-1GE-SX
FPC 2	REV 02	710-010419		M320-FPC1
PIC 0	REV 10	750-005634		PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634		PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634		PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634		PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634		PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634		PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634		PB-1CHOC12SMIR-QPP
FPC 3				
PIC 0	REV 03	750-001895		PB-10C12-SON-MM
PIC 1	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 04	750-003141		PB-1GE-SX-B
FPC 4	REV 02	710-010419		M320-FPC1
FPC 5	REV 02	710-010419		M320-FPC1
FPC 6	REV 02	710-010419		M320-FPC1
FPC 7				
PIC 0	REV 15	750-001901		PB-40C12-SON-SMIR
PIC 1	REV 06	750-001900		PB-10C48-SON-SMSR
PIC 2	REV 07	750-001900		PB-10C48-SON-SMSR
PIC 3	REV 05	750-003737		PB-4GE-SX
SIB 0	REV 03	710-009184		SIB-M-S
SIB 1	REV 03	710-009184		SIB-M-S
SIB 2	REV 03	710-009184		SIB-M-S
SIB 3	REV 03	710-009184		SIB-M-S
Fan Tray 0				FFANTRAY-M320-S
Fan Tray 1				FFANTRAY-M320-S
Fan Tray 2				RFANTRAY-M320-S

## show chassis hardware (MX5 Router)

user@host&gt; show chassis hardware

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			E1368	MX5-T
Midplane	REV 01	711-038215	YF5288	MX5-T
PEM 0	Rev 04	740-028288	VA01215	AC Power Entry Module
PEM 1	Rev 04	740-028288	VA01218	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZA9136	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 24	750-028392	YX9820	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AM1045SUAQ3	SFP-SX
Xcvr 1	REV 01	740-031851	AM1045SUAPA	SFP-SX
Xcvr 2	REV 01	740-031851	AM1045SUAN7	SFP-SX
Xcvr 3	REV 01	740-031851	AM1045SU91Q	SFP-SX
Xcvr 4	REV 01	740-031851	AM1045SUDDR	SFP-SX
Xcvr 9	REV 01	740-011613	AM0848SB6A1	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AM1045SUANO	SFP-SX
Xcvr 1	REV 01	740-011613	AS0812S0719	SFP-SX
Xcvr 2	REV 01	740-011613	AM0821SA121	SFP-SX
Xcvr 3	REV 01	740-011613	PF21K21	SFP-SX
Xcvr 4	REV 01	740-011613	AM0848SB69Z	SFP-SX
Xcvr 5	REV 01	740-011782	P9P0XV3	SFP-SX
Xcvr 6	REV 01	740-011613	AM0812S8WJN	SFP-SX
Xcvr 7	REV 01	740-011613	PAM3G9Q	SFP-SX
Xcvr 8	REV 01	740-011613	AM0848SB4A6	SFP-SX
Xcvr 9	REV 01	740-011782	P9M0U37	SFP-SX
MIC 1	REV 20	750-028380	ZG2657	3D 2x 10GE XFP
PIC 2		BUILTIN	BUILTIN	1x 10GE XFP
PIC 3		BUILTIN	BUILTIN	1x 10GE XFP
Fan Tray				Fan Tray

## show chassis hardware (MX10 Router)

user@host&gt; show chassis hardware

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			E1372	MX10-T
Midplane	REV 01	711-038211	YF5285	MX10-T
PEM 0	Rev 04	740-028288	VB01678	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZA9053	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 24	750-028392	YX9436	3D 20x 1GE(LAN) SFP

PIC 0			BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AM1107SUFQW		SFP-SX
PIC 1		BUILTIN	BUILTIN		10x 1GE(LAN) SFP
Fan Tray					Fan Tray

### show chassis hardware (MX40 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			E1367	MX40-T
Midplane	REV 01	711-038211	YF5284	MX40-T
PEM 0	Rev 04	740-028288	VB01680	AC Power Entry Module
PEM 1	Rev 04	740-028288	VB01700	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZA9048	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
Xcvr 0	REV 01	740-014279	M7067UPP	XFP-10G-LR
Xcvr 1		NON-JNPR	K9J02UN	XFP-10G-LR
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 24	750-028392	YX3504	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011613	AM0812S8WTE	SFP-SX
Xcvr 1	REV 01	740-011613	PFA6KV2	SFP-SX
Xcvr 2	REV 01	740-031851	AM1045SUDDM	SFP-SX
Xcvr 3	REV 01	740-011613	PD63C7M	SFP-SX
Xcvr 4	REV 01	740-011613	PD63DJY	SFP-SX
Xcvr 5	REV 02	740-011613	AA0950STLL9	SFP-SX
Xcvr 6	REV 01	740-011782	PAR1YHC	SFP-SX
Xcvr 7	REV 01	740-011782	P9P0XXL	SFP-SX
Xcvr 8	REV 01	740-011613	PD63D95	SFP-SX
Xcvr 9	REV 01	740-031851	AM1045SU9B8	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011613	PF21L3Z	SFP-SX
Xcvr 1	REV 01	740-031851	AM1045SU7M9	SFP-SX
Xcvr 2	REV 01	740-031851	AM1045SUAPT	SFP-SX
Xcvr 3	REV 01	740-011613	PFF2BZH	SFP-SX
Xcvr 4	REV 01	740-031851	AM1045SUDDN	SFP-SX
Xcvr 5	REV 01	740-031851	AM1039S00ZR	SFP-SX
Xcvr 6	REV 01	740-031851	AM1045SUD6Y	SFP-SX
Xcvr 8	REV 01	740-011613	PFM1QBS	SFP-SX
Xcvr 9	REV 01	740-011613	PFF2E25	SFP-SX
MIC 1	REV 01	750-021130	KG4391	3D 2x 10GE XFP
PIC 2		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-011571	C645XJ04G	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0		NON-JNPR	CA49BK0AE	XFP-10G-SR
Fan Tray				Fan Tray

### show chassis hardware (Fixed MX80 Router)

```
user@host> show chassis hardware
```



Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis				MX80-48T
Midplane	REV 01	711-031603	KF9250	MX80-48T
Routing Engine		BUILTIN	BUILTIN	Routing Engine
FEB 0		BUILTIN	BUILTIN	Forwarding Engine Board
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
Xcvr 0		NON-JNPR	M6439D41	XFP-10G-LR
Xcvr 1	REV 01	740-014279	6XE931N00202	XFP-10G-LR
Xcvr 2	REV 01	740-014289	C715XU05F	XFP-10G-SR
Xcvr 3	REV 01	740-014289	C650XU0EP	XFP-10G-SR
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 01	711-029399	JR6981	12x 1GE(LAN) RJ45
PIC 0		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
PIC 1		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
MIC 1	REV 01	BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
PIC 2		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
PIC 3		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
Fan Tray				Fan Tray

#### show chassis hardware (Modular MX80 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis				MX80
Midplane	REV 02	711-031594	JR7084	MX80
PEM 0	Rev 01	740-028288	000018	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
FEB 0		BUILTIN	BUILTIN	Forwarding Engine Board
QXM 0	REV 05	711-028408	JR7041	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 02	750-028380	JR6598	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-014289	T07M86365	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-014289	T07M71094	XFP-10G-SR
MIC 1	REV 02	750-028380	JG8548	3D 2x 10GE XFP
PIC 2		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	T08L86302	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	C810XU0BA	XFP-10G-SR
Fan Tray				Fan Tray

#### show chassis hardware (MX150)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			DD2316AF0078	MX150

Midplane	REV 04	650-066113	DD2316AF0078	MX150
Power Supply 0				
Routing Engine 0				RE-VMX
CB 0				VMX SCB
CB 1				VMX SCB
FPC 0				Virtual FPC
CPU	Rev. 1.0	RIOT	BUILTIN	
MIC 0				Virtual
PIC 0		BUILTIN	BUILTIN	Virtual
Xcvr 10	REV 02	740-013111	A331846	SFP-T
Xcvr 11	REV 02	740-013111	C248517	SFP-T
Fan Tray 0				fan-ctrl-0 0, Front to
Back Airflow - AFO				
Fan Tray 1				fan-ctrl-0 1, Front to
Back Airflow - AFO				

### show chassis hardware models (MX150)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	Serial number	FRU model number
Midplane	REV 04	650-066113	DD2316AF0163	MX150
Fan Tray 0				Assy,Sub,Fan
Tray,AFO,Opus-AFO				
Fan Tray 1				Assy,Sub,Fan
Tray,AFO,Opus-AFO				

### show chassis hardware (MX104 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			G3503	MX104
Midplane	REV 28	750-044219	CAAX5741	MX104
PEM 0	REV 03	740-045933	1H072500016	AC Power Entry Module
PEM 1	REV 03	740-045932	1H073050017	DC Power Entry Module
Routing Engine 0	REV 20	750-044228	CAAY7935	RE-MX-104
Routing Engine 1	REV 13	750-044228	CAAM6380	RE-MX-104
AFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 15	750-036132	CAAF7948	2x0C12/8x0C3 CC-CE
PIC 0		BUILTIN	BUILTIN	2x0C12/8x0C3 CC-CE
Xcvr 0	REV 01	740-011615	PCQ0U2J	SFP-IR
Xcvr 1	REV 01	740-016068	PJL7A6G	SFP-SR
Xcvr 2	REV 01	740-016068	PJL7A5J	SFP-SR
Xcvr 3	REV 01	740-016065	PJN5HPZ	SFP-SR
Xcvr 4	REV 01	740-029122	PKB38TL	SFP-LR
Xcvr 5	REV 01	740-011787	P6A107G	SFP-LR
Xcvr 6	REV 01	740-029122	PKB38TR	SFP-LR
Xcvr 7	REV 01	740-011787	PBKONK3	SFP-LR
MIC 1				
FPC 2		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B10F00465	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	B10F00461	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10G01545	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10G01385	SFP+-10G-SR
Fan Tray 0	REV 02	711-049570	CAAX6538	Fan Tray

### show chassis hardware detail (MX104 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			G3503	MX104
Midplane	REV 28	750-044219	CAAX5741	MX104
PEM 0	REV 03	740-045933	1H072500016	AC Power Entry Module
PEM 1	REV 03	740-045932	1H073050017	DC Power Entry Module
Routing Engine 0	REV 20	750-044228	CAAY7935	RE-MX-104
da0 7836 MB	ATP IG	eUSB SSD		Nand Flash 0
usb0 (addr 1)	EHCI root hub 0		Freescall	uhub0
usb0 (addr 2)	USB2513Bi	9491	SMSC	uhub1
usb0 (addr 3)	ATP IG	eUSB SSD 44801	ATP Electronics	umass0
Routing Engine 1	REV 13	750-044228	CAAM6380	RE-MX-104
da0 7836 MB	ATP IG	eUSB SSD		Nand Flash 0
AFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 15	750-036132	CAAF7948	2x0C12/8x0C3 CC-CE
PIC 0		BUILTIN	BUILTIN	2x0C12/8x0C3 CC-CE
Xcvr 0	REV 01	740-011615	PCQ0U2J	SFP-IR
Xcvr 1	REV 01	740-016068	PJL7A6G	SFP-SR
Xcvr 2	REV 01	740-016068	PJL7A5J	SFP-SR
Xcvr 3	REV 01	740-016065	PJN5HPZ	SFP-SR
Xcvr 4	REV 01	740-029122	PKB38TL	SFP-LR
Xcvr 5	REV 01	740-011787	P6A107G	SFP-LR
Xcvr 6	REV 01	740-029122	PKB38TR	SFP-LR
Xcvr 7	REV 01	740-011787	PBKONK3	SFP-LR
MIC 1				
FPC 2		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B10F00465	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10F00461	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10G01545	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10G01385	SFP+-10G-SR
Fan Tray 0	REV 02	711-049570	CAAX6538	Fan Tray

### show chassis hardware detail (MX480 Packet Transport Router with details of virtual disk size)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN122FFD9AFB	MX480
Midplane	REV 05	710-017414	ACRB8882	MX480 Midplane
FPM Board	REV 02	710-017254	CADF7623	Front Panel Display
PEM 0	Rev 07	740-017343	QCS1128A0TY	DC Power Entry Module
PEM 1	Rev 07	740-017343	QCS1128A0JM	DC Power Entry Module
Routing Engine 0	REV 07	750-054758	CADG2028	RE-S-2X00x6
vtbd0 15361 MB				Virtio Block Disk

vtbd1 15360 MB				Virtio Block Disk
ada0 511 MB	QEMU HARDDISK	QM00002		Emulated IDE Disk
usb0 (addr 1)	UHCI root HUB 0	Intel		uhub0
Routing Engine 1	REV 00 750-054758			RE-S-2X00x6
vtbd0 15361 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 511 MB	QEMU HARDDISK	QM00002		Emulated IDE Disk
usb0 (addr 1)	UHCI root HUB 0	Intel		uhub0
CB 0	REV 01 750-055976	CACS1837		Enhanced MX SCB 2
CB 1	REV 01 750-055976	CADD9894		Enhanced MX SCB 2
Xcvr 1	REV 01 740-031980	AP41KCL		SFP+-10G-SR
FPC 0	REV 09 750-049040	CACX1759		LOAD MPC Type 2
CPU	REV 10 711-035209	CACP9324		HMPC PMB 2G
FPC 4	REV 28 750-037355	CACY8384		MPC4E 3D 2CGE+8XGE
CPU	REV 10 711-035209	CACX0428		HMPC PMB 2G
Fan Tray				Enhanced Left Fan Tray

### show chassis hardware extensive (MX104 Router)

```
user@host> show chassis hardware extensive
```

#### Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			G3503	MX104

JeDEC Code:	0x7fb0	EEPROM Version:	0x02
-------------	--------	-----------------	------

S/N:	G3503
------	-------

Assembly ID:	0x0560	Assembly Version:	00.00
--------------	--------	-------------------	-------

Date:	00-00-0000	Assembly Flags:	0x00
-------	------------	-----------------	------

ID: MX104

#### Board Information Record:

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

#### I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 60 00 00 00 00 00 00 00 00 00 00

Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x20: 47 33 35 30 33 00 00 00 00 00 00 00 00 00 00 00

Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Midplane	REV 28	750-044219	CAAX5741	MX104
----------	--------	------------	----------	-------

JeDEC Code:	0x7fb0	EEPROM Version:	0x02
-------------	--------	-----------------	------

P/N:	750-044219	S/N:	CAAX5741
------	------------	------	----------

Assembly ID:	0x0560	Assembly Version:	01.28
--------------	--------	-------------------	-------

Date:	03-27-2013	Assembly Flags:	0x00
-------	------------	-----------------	------

Version:	REV 28	CLEI Code:	PROTOXCLEI
----------	--------	------------	------------

ID: MX104	FRU Model Number:	PROTO-ASSEMBLY
-----------	-------------------	----------------

#### Board Information Record:

Address 0x00: ad 01 08 00 b0 a8 6e a7 f8 00 ff ff ff ff ff ff

#### I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 60 01 1c 52 45 56 20 32 38 00 00

Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 32 31 39 00 00

Address 0x20: 53 2f 4e 20 43 41 41 58 35 37 34 31 00 1b 03 07

Address 0x30: dd ff ff ff ad 01 08 00 b0 a8 6e a7 f8 00 ff ff

Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50

Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00

Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff

Address 0x70: ff ff ff c2 47 33 35 30 33 00 00 00 00 00 00 00

PEM 0	REV 03	740-045933	1H072500016	AC Power Entry Module
-------	--------	------------	-------------	-----------------------

JeDEC Code:	0x7fb0	EEPROM Version:	0x02
-------------	--------	-----------------	------

```

P/N:          740-045933      S/N:          1H072500016
Assembly ID:  0x0475          Assembly Version: 00.03
Date:         12-14-2012      Assembly Flags:  0x00
Version:      REV 03          CLEI Code:       IPUPAJ9KAA
ID: AC Power Entry Module     FRU Model Number: PWR-AMX1100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff 02 02 00 ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 75 00 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 39 33 33 00 00
  Address 0x20: 31 48 30 37 32 35 30 30 30 31 36 00 00 0e 0c 07
  Address 0x30: dc 30 43 ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 02 02 00 ff 01 49 50 55 50 41 4a 39 4b 41 41 50
  Address 0x50: 57 52 2d 41 4d 58 31 31 30 30 2d 41 43 2d 53 00
  Address 0x60: 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff 70 ff ff ff ff ff ff ff ff ff ff ff ff
PEM 1          REV 03      740-045932      1H073050017      DC Power Entry Module
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:          740-045932      S/N:          1H073050017
Assembly ID:  0x0476          Assembly Version: 00.03
Date:         01-30-2013      Assembly Flags:  0x00
Version:      REV 03          CLEI Code:       IPUPAJ8KAA
ID: DC Power Entry Module     FRU Model Number: PWR-AMX1100-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff 02 02 00 ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 76 00 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 39 33 32 00 00
  Address 0x20: 31 48 30 37 33 30 35 30 30 31 37 00 00 1e 01 07
  Address 0x30: dd 30 44 ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 02 02 00 ff 01 49 50 55 50 41 4a 38 4b 41 41 50
  Address 0x50: 57 52 2d 41 4d 58 31 31 30 30 2d 44 43 2d 53 00
  Address 0x60: 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff 72 ff ff ff ff ff ff ff ff ff ff ff ff
Routing Engine 0 REV 20      750-044228      CAAY7935      RE-MX-104
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:          750-044228      S/N:          CAAY7935
Assembly ID:  0x0b81          Assembly Version: 01.20
Date:         03-18-2013      Assembly Flags:  0x00
Version:      REV 20          CLEI Code:       PROTOXCLEI
ID: RE-MX-104          FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ad 01 00 08 b0 a8 6e a6 fc 10 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0b 81 01 14 52 45 56 20 32 30 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 32 32 38 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 59 37 39 33 35 00 12 03 07
  Address 0x30: dd ff ff ff ad 01 00 08 b0 a8 6e a6 fc 10 ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
da0      7836 MB  ATP IG eUSB SSD      Nand Flash 0
usb0 (addr 1) EHCI root hub 0      Freescale      uhub0
usb0 (addr 2) USB2513Bi 9491      SMSC          uhub1
usb0 (addr 3) ATP IG eUSB SSD 44801 ATP Electronics  umass0
Routing Engine 1 REV 13      750-044228      CAAM6380      RE-MX-104
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:          750-044228      S/N:          CAAM6380
Assembly ID:  0x0b81          Assembly Version: 01.13

```

```

Date:          09-17-2012      Assembly Flags:  0x00
Version:       REV 13          CLEI Code:       PROTOXCLEI
ID: RE-MX-104      FRU Model Number:  PROTO-ASSEMBLY

Board Information Record:
  Address 0x00: ad 01 00 08 64 87 88 27 08 18 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0b 81 01 0d 52 45 56 20 31 33 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 32 32 38 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 4d 36 33 38 30 00 11 09 07
  Address 0x30: dc ff ff ff ad 01 00 08 64 87 88 27 08 18 ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
da0      7836 MB  ATP IG  eUSB SSD      Nand Flash 0
AFEB 0              BUILTIN          BUILTIN          Forwarding Engine
Processor
FPC 0              BUILTIN          BUILTIN          MPC BUILTIN
FPC 1              BUILTIN          BUILTIN          MPC BUILTIN
  MIC 0            REV 15      750-036132  CAAF7948      2x0C12/8x0C3 CC-CE
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:       750-036132    S/N:       CAAF7948
Assembly ID: 0x0a1a     Assembly Version: 01.15
Date:      07-03-2012   Assembly Flags: 0x00
Version:   REV 15      CLEI Code:       IP9IAM2DAA
ID: 2x0C12/8x0C3 CC-CE  FRU Model Number: MIC-3D-80C3-20C12-ATM

Board Information Record:
  Address 0x00: 12 01 05 03 05 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0a 1a 01 0f 52 45 56 20 31 35 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 36 31 33 32 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 46 37 39 34 38 00 03 07 07
  Address 0x30: dc ff ff ff 12 01 05 03 05 ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 39 49 41 4d 32 44 41 41 4d
  Address 0x50: 49 43 2d 33 44 2d 38 4f 43 33 2d 32 4f 43 31 32
  Address 0x60: 2d 41 54 4d 00 00 41 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff e3 c0 02 a3 9c 00 00 00 00 0a 60 00 00
  PIC 0              BUILTIN          BUILTIN          2x0C12/8x0C3 CC-CE
    Xcvr 0           REV 01      740-011615  PCQ0U2J      SFP-IR
    Xcvr 1           REV 01      740-016068  PjL7A6G      SFP-SR
    Xcvr 2           REV 01      740-016068  PjL7A5J      SFP-SR
    Xcvr 3           REV 01      740-016065  PjN5HPZ      SFP-SR
    Xcvr 4           REV 01      740-029122  PKB38TL      SFP-LR
    Xcvr 5           REV 01      740-011787  P6A107G      SFP-LR
    Xcvr 6           REV 01      740-029122  PKB38TR      SFP-LR
    Xcvr 7           REV 01      740-011787  PBKONK3      SFP-LR
  MIC 1
FPC 2              BUILTIN          BUILTIN          MPC BUILTIN
  MIC 0              BUILTIN          BUILTIN          4x 10GE(LAN) SFP+
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:       BUILTIN      S/N:       BUILTIN
Assembly ID: 0x0a60     Assembly Version: 00.00
Date:      00-00-0000   Assembly Flags: 0x00
ID: 4x 10GE(LAN) SFP+

Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a 60 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 4d 58 43 00
  Address 0x20: 42 55 49 4c 54 49 4e 00 4d 58 43 00 00 00 00 00

```

```

Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 a5 04 7f b0 02 ff 0a 1a 01 0f
PIC 0          BUILTIN          BUILTIN          4x 10GE(LAN) SFP+
Xcvr 0        REV 01          740-031980          B10F00465          SFP+-10G-SR
Xcvr 1        REV 01          740-031980          B10F00461          SFP+-10G-SR
Xcvr 2        REV 01          740-031980          B10G01545          SFP+-10G-SR
Xcvr 3        REV 01          740-031980          B10G01385          SFP+-10G-SR
Fan Tray 0    REV 02          711-049570          CAAX6538          Fan Tray
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          711-049570      S/N:          CAAX6538
Assembly ID:  0x0b82          Assembly Version: 01.02
Date:         03-01-2013      Assembly Flags: 0x00
Version:      REV 02          CLEI Code:     PROTOXCLEI
ID: Fan Tray          FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 82 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 39 35 37 30 00 00
Address 0x20: 53 2f 4e 20 43 41 41 58 36 35 33 38 00 01 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

```

### show chassis hardware extensive (PTX10008 Router)

```
user@host> show chassis hardware extensive
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
PILOT BUILD V1.1]
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          DE487
Assembly ID:  0x0566          Assembly Version: 01.27
Date:         08-08-2016      Assembly Flags: 0x00
CLEI Code:     CMMUM00ARA
ID: JNP10008          FRU Model Number: QFX10008-CHAS
Board Information Record:
Address 0x00: ad 01 08 00 30 b6 4f e9 74 c4 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 66 01 1b 00 45 56 20 32 37 00 00
Address 0x10: 00 00 00 00 00 35 30 2d 30 35 34 30 39 37 00 00
Address 0x20: 44 45 34 38 37 00 00 00 00 00 00 00 00 08 08 07
Address 0x30: e0 ff ff ff ad 01 08 00 30 b6 4f e9 74 c4 ff ff
Address 0x40: ff ff ff ff 01 43 4d 4d 55 4d 30 30 41 52 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 43 48 41 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 63 44 45 34 38 37 00 00 00 00 00 00 00
Midplane      REV 27          750-054097          ACPD4307          Midplane 8
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-054097      S/N:          ACPD4307
Assembly ID:  0x0be3          Assembly Version: 01.27
Date:         08-08-2016      Assembly Flags: 0x00
Version:      REV 27          CLEI Code:     CMMUM00ARA

```

```

ID: QFX10008 Midplane          FRU Model Number: QFX10008-CHAS
Board Information Record:
Address 0x00: ad 01 08 00 30 b6 4f e9 74 c4 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e3 01 1b 52 45 56 20 32 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 34 30 39 37 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 34 33 30 37 00 08 08 07
Address 0x30: e0 ff ff ff ad 01 08 00 30 b6 4f e9 74 c4 ff ff
Address 0x40: ff ff ff ff 01 43 4d 4d 55 4d 30 30 41 52 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 43 48 41 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 63 44 45 34 38 37 00 00 00 00 00 00 00
Routing Engine 0          BUILTIN          BUILTIN          RE-PTX-2X00x4
vtbd0 15360 MB          Virtio Block Disk
vtbd1 15360 MB          Virtio Block Disk
ada0 128 MB QEMU          QM00002          Virtio Block Disk
usb0 (addr 0.1) EHCI root HUB 0          Intel          uhub0
usb1 (addr 0.2) product 0x0020 32          vendor 0x8087          uhub1
Routing Engine 1          BUILTIN          BUILTIN          RE-PTX-2X00x4
vtbd0 15360 MB          Virtio Block Disk
vtbd1 15360 MB          Virtio Block Disk
ada0 128 MB QEMU          QM00002          Virtio Block Disk
usb0 (addr 0.1) EHCI root HUB 0          Intel          uhub0
usb1 (addr 0.2) product 0x0020 32          vendor 0x8087          uhub1
CB 0          REV 02          750-068820          ACNZ4440          Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-068820          S/N: ACNZ4440
Assembly ID: 0x0b9d          Assembly Version: 01.02
Date: 06-13-2016          Assembly Flags: 0x00
Version: REV 02          CLEI Code: CMUCAH3CTB
ID: Control Board          FRU Model Number: QFX10000-RE
Board Information Record:
Address 0x00: ad 01 00 10 84 c1 c1 54 10 be ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9d 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 34 34 34 30 00 0d 06 07
Address 0x30: e0 ff ff ff ad 01 00 10 84 c1 c1 54 10 be ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 33 43 54 42 51
Address 0x50: 46 58 31 30 30 30 30 2d 52 45 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff db ff ff ff ff ff ff ff ff ff ff ff ff
CB 1          REV 02          750-068820          ACNZ8284          Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-068820          S/N: ACNZ8284
Assembly ID: 0x0b9d          Assembly Version: 01.02
Date: 06-27-2016          Assembly Flags: 0x00
Version: REV 02          CLEI Code: CMUCAH3CTB
ID: Control Board          FRU Model Number: QFX10000-RE
Board Information Record:
Address 0x00: ad 01 00 10 84 c1 c1 e5 b1 46 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9d 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 38 32 38 34 00 1b 06 07
Address 0x30: e0 ff ff ff ad 01 00 10 84 c1 c1 e5 b1 46 ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 33 43 54 42 51
Address 0x50: 46 58 31 30 30 30 30 2d 52 45 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff db ff ff ff ff ff ff ff ff ff ff ff ff

```



```

FPC 0          REV 36  750-051354  ACNP4679          LC1102 - 12C / 36Q /
144X
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-051354      S/N:           ACNP4679
Assembly ID:   0x0be7          Assembly Version: 01.36
Date:          11-11-2016      Assembly Flags: 0x00
Version:       REV 36          CLEI Code:     CMUIAM9BAA
ID: ULC-36Q-12Q28             FRU Model Number: QFX10000-36Q
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b e7 01 24 52 45 56 20 33 36 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 35 31 33 35 34 00 00
  Address 0x20: 53 2f 4e 20 41 43 4e 50 34 36 37 39 00 0b 0b 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff fe ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN          BUILTIN          FPC CPU
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           BUILTIN          S/N:           BUILTIN
Assembly ID:   0xf020          Assembly Version: 02.17
Date:          04-19-2012      Assembly Flags: 0x00
Board Information Record:
  Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff f0 20 02 11 00 e0 3c fa 09 00 70 87
  Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 e0 3c fa
  Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
  Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
  Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE

Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           BUILTIN          S/N:           BUILTIN
Assembly ID:   0xf050          Assembly Version: 02.17
Date:          04-19-2012      Assembly Flags: 0x00
Board Information Record:
  Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
  Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
  Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
  Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 1        REV 01  740-058734  1ECQ113834D  QSFP-100GBASE-SR4
Xcvr 5        REV 01  740-058734  1ECQ1137067  QSFP-100GBASE-SR4
Xcvr 6        REV 01  740-054053  QF3205SD    QSFP+-4X10G-SR
Xcvr 7        REV 01  740-058734  1ECQ11381MP  QSFP-100GBASE-SR4
Xcvr 11       REV 01  740-061405  1ACQ110507K  QSFP-100GBASE-SR4
Xcvr 13       REV 01  740-058734  1ECQ11390ZB  QSFP-100GBASE-SR4
Xcvr 17       REV 01  740-058734  1ECQ11381M1  QSFP-100GBASE-SR4
Xcvr 19       REV 01  740-058734  1ECQ11381JS  QSFP-100GBASE-SR4

```

```

Xcvr 23      REV 01    740-058734    1ACQ112000E    QSFP-100GBASE-SR4
Xcvr 25      REV 01    740-058734    1ECQ11381NT    QSFP-100GBASE-SR4
Xcvr 28      REV 01    740-054053    QG1502WV       QSFP+-4X10G-SR
Xcvr 29      REV 01    740-058734    1ACQ112000D    QSFP-100GBASE-SR4
Xcvr 33      REV 01    740-058734    1ACQ1134065    QSFP-100GBASE-SR4
Xcvr 34      REV 01    740-067442    XV20L4L        QSFP+-40G-SR4
FPC 1        REV 33    750-051354    ACNX8831        LC1102 - 12C / 36Q /
144X
Jedec Code:  0x7fb0          EEPROM Version: 0x02
P/N:          750-051354      S/N:            ACNX8831
Assembly ID:  0x0be7          Assembly Version: 01.33
Date:         06-03-2016      Assembly Flags:  0x00
Version:      REV 33          CLEI Code:       CMUIAM9BAA
ID: ULC-36Q-12Q28            FRU Model Number: QFX10000-36Q
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 21 52 45 56 20 33 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 31 33 35 34 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 58 38 38 33 31 00 03 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fb ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN        BUILTIN        FPC CPU
Jedec Code:  0x7fb0          EEPROM Version: 0x02
P/N:          BUILTIN        S/N:            BUILTIN
Assembly ID:  0xf020          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 20 3e fa 09 00 10 8a
Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 20 3e fa
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0        BUILTIN        BUILTIN        12x100GE/36x40GE/144x10GE
Jedec Code:  0x7fb0          EEPROM Version: 0x02
P/N:          BUILTIN        S/N:            BUILTIN
Assembly ID:  0xf050          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 5        NON-JNPR      37700171YY0084    QSFP-100GBASE-LR4
Xcvr 25       NON-JNPR      GDA2017459        QSFP-100GBASE-LR4

```

```

Xcvr 29      NON-JNPR      GDF2008750      QSFP-100GBASE-LR4
FPC 2        REV 32      750-051357      ACPB0341      LC1101 - 30C / 30Q / 96X

Jedec Code:  0x7fb0      EEPROM Version:  0x02
P/N:         750-051357  S/N:            ACPB0341
Assembly ID: 0x0be8      Assembly Version: 01.32
Date:        06-04-2016  Assembly Flags:  0x00
Version:     REV 32      CLEI Code:      CMUIANABAA
ID: ULC-30Q28           FRU Model Number: QFX10000-30C
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e8 01 20 52 45 56 20 33 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 31 33 35 37 00 00
Address 0x20: 53 2f 4e 20 41 43 50 42 30 33 34 31 00 04 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4e 41 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 30 43 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff ef ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN      BUILTIN      FPC CPU
Jedec Code:  0x7fb0      EEPROM Version:  0x02
P/N:         BUILTIN      S/N:            BUILTIN
Assembly ID: 0xf020      Assembly Version: 02.17
Date:        04-19-2012  Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 00 67 00 0a 00 b0 8c
Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 00 67 00
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN      30x100GE/30x40GE/96x10GE

Jedec Code:  0x7fb0      EEPROM Version:  0x02
P/N:         BUILTIN      S/N:            BUILTIN
Assembly ID: 0xf050      Assembly Version: 02.17
Date:        04-19-2012  Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 de ad be ef de ad be ef de ad be ef

Xcvr 0      NON-JNPR      37700170YZC305  QSFP-100GBASE-LR4
Xcvr 4      NON-JNPR      37700170YZC306  QSFP-100GBASE-LR4
Xcvr 9      REV 01      740-054053      QF36013S      QSFP+-4X10G-SR
Xcvr 12     REV 01      740-067442      XV301AU      QSFP+-40G-SR4
Xcvr 14     REV 01      740-043308      UWE2CG9      QSFP+-40G-LR4
Xcvr 16     REV 01      740-043308      UWH141S      QSFP+-40G-LR4
Xcvr 17     REV 01      740-058734      1ECQ11180VH  QSFP-100GBASE-SR4

```

```

Xcvr 18      REV 01    740-054050    INFAJ0492237    QSFP+-4X10G-LR
Xcvr 26      REV 01    740-058734    1ACQ111803N    QSFP-100GBASE-SR4
Xcvr 27      REV 01    740-058734    1ACQ113405S    QSFP-100GBASE-SR4
FPC 3        REV 35    750-051357    ACPD2186        LC1101 - 30C / 30Q / 96X

Jedec Code:  0x7fb0      EEPROM Version: 0x02
P/N:         750-051357  S/N:           ACPD2186
Assembly ID: 0x0be8      Assembly Version: 01.35
Date:        09-21-2016  Assembly Flags: 0x00
Version:     REV 35      CLEI Code:     CMUIANABAA
ID: ULC-30Q28           FRU Model Number: QFX10000-30C
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e8 01 23 52 45 56 20 33 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 31 33 35 37 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 32 31 38 36 00 15 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4e 41 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 30 43 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN      BUILTIN      FPC CPU
Jedec Code:  0x7fb0      EEPROM Version: 0x02
P/N:         BUILTIN     S/N:           BUILTIN
Assembly ID: 0xf020      Assembly Version: 02.17
Date:        04-19-2012  Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 80 70 fa 09 00 50 8f
Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 80 70 fa
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0        BUILTIN      BUILTIN      30x100GE/30x40GE/96x10GE

Jedec Code:  0x7fb0      EEPROM Version: 0x02
P/N:         BUILTIN     S/N:           BUILTIN
Assembly ID: 0xf050      Assembly Version: 02.17
Date:        04-19-2012  Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 0      REV 01    740-061409    1GCQA1470A3    QSFP-100GBASE-LR4-T2
Xcvr 1      REV 01    740-061409    1GCQA1470XC    QSFP-100GBASE-LR4-T2
Xcvr 7      NON-JNPR   FG4550500008    QSFP-100G-CWDM4
Xcvr 24     REV 01    740-058734    1ECQ11381LX    QSFP-100GBASE-SR4
Xcvr 29     REV 01    740-043308    UWE0UYS        QSFP+-40G-LR4

```

```

FPC 5          REV 08   750-068822   ACPF0057          LC1102 - 12C / 36Q /
144X
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-068822      S/N:             ACPF0057
Assembly ID:   0x0be7          Assembly Version: 01.08
Date:          09-01-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        CMUIAM9BAB
ID: ULC-36Q-12Q28             FRU Model Number: QFX10000-36Q

Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b e7 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 32 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 46 30 30 35 37 00 01 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 42 51
  Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN          BUILTIN          FPC CPU
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           BUILTIN          S/N:             BUILTIN
Assembly ID:   0xf020          Assembly Version: 02.17
Date:          04-19-2012      Assembly Flags:   0x00
Board Information Record:
  Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff f0 20 02 11 00 00 3d fa 09 00 90 94
  Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 00 3d fa
  Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
  Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
  Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE

Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           BUILTIN          S/N:             BUILTIN
Assembly ID:   0xf050          Assembly Version: 02.17
Date:          04-19-2012      Assembly Flags:   0x00
Board Information Record:
  Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
  Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
  Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
  Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
FPC 6          REV 08   750-068822   ACPE9951          LC1102 - 12C / 36Q /
144X
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-068822      S/N:             ACPE9951
Assembly ID:   0x0be7          Assembly Version: 01.08
Date:          09-01-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        CMUIAM9BAB
ID: ULC-36Q-12Q28             FRU Model Number: QFX10000-36Q

```

```

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 32 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 39 39 35 31 00 01 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 42 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
CPU                               BUILTIN      BUILTIN      FPC CPU
Jedec Code: 0x7fb0                EEPROM Version: 0x02
P/N:      BUILTIN                 S/N:      BUILTIN
Assembly ID: 0xf020              Assembly Version: 02.17
Date:     04-19-2012             Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 c0 3e fa 09 00 30 97
Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 c0 3e fa
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0                               BUILTIN      BUILTIN      12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0                EEPROM Version: 0x02
P/N:      BUILTIN                 S/N:      BUILTIN
Assembly ID: 0xf050              Assembly Version: 02.17
Date:     04-19-2012             Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 1      REV 01 740-054053 QF3208LG      QSFP+-4X10G-SR
Xcvr 7      REV 01 740-067442 XV20LGN       QSFP+-40G-SR4
Xcvr 8      REV 01 740-067442 XV20VMV       QSFP+-40G-SR4
Xcvr 9      REV 01 740-067442 XV20KCN       QSFP+-40G-SR4
Xcvr 10     REV 01 740-067442 XU504QD       QSFP+-40G-SR4
Xcvr 11     REV 01 740-067442 XU504X7       QSFP+-40G-SR4
Xcvr 12     REV 01 740-067442 XU504W8       QSFP+-40G-SR4
Xcvr 16     REV 01 740-032986 QF4301JP      QSFP+-40G-SR4
Xcvr 17     REV 01 740-032986 QF4303AE      QSFP+-40G-SR4
Xcvr 18     REV 01 740-054050 INFJA0492400  QSFP+-4X10G-LR
Xcvr 19     REV 01 740-054050 INFJA0492142  QSFP+-4X10G-LR
Xcvr 24     REV 01 740-032986 QF4301KB      QSFP+-40G-SR4
Xcvr 25     REV 01 740-032986 QF4303YP      QSFP+-40G-SR4
Xcvr 30     REV 01 740-067442 XV300ZX       QSFP+-40G-SR4
Xcvr 31     REV 01 740-043308 UWH2KBW       QSFP+-40G-LR4
Xcvr 34     REV 01 740-054053 QG1501YU      QSFP+-4X10G-SR

```

```

FPD Board          REV 07   711-054687   ACPC7142          Front Panel Display
Jedec Code:        0x7fb0          EEPROM Version:    0x01
P/N:               711-054687      S/N:              ACPC7142
Assembly ID:       0x0bf2          Assembly Version:  01.07
Date:              07-22-2016      Assembly Flags:   0x00
Version:           REV 07
ID: QFX10000 FPD
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0b f2 01 07 52 45 56 20 30 37 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 35 34 36 38 37 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 43 37 31 34 32 00 16 07 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

Power Supply 0     REV 02   740-049388   1EDL62102N9      Power Supply AC
Jedec Code:        0x7fb0          EEPROM Version:    0x02
P/N:               740-049388      S/N:              1EDL62102N9
Assembly ID:       0x0483          Assembly Version:  01.02
Date:              05-25-2016      Assembly Flags:   0x00
Version:           REV 02          CLEI Code:        CMUPADNBAA
ID: QFX10000 AC      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
  Address 0x20: 31 45 44 4c 36 32 31 30 32 4e 39 00 00 19 05 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
  Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff

Power Supply 1     REV 02   740-049388   1EDL60300KX      Power Supply AC
Jedec Code:        0x7fb0          EEPROM Version:    0x02
P/N:               740-049388      S/N:              1EDL60300KX
Assembly ID:       0x0483          Assembly Version:  01.02
Date:              01-20-2016      Assembly Flags:   0x00
Version:           REV 02          CLEI Code:        CMUPADNBAA
ID: QFX10000 AC      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
  Address 0x20: 31 45 44 4c 36 30 33 30 30 4b 58 00 00 14 01 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
  Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff

Power Supply 2     REV 02   740-049388   1EDL60300DL      Power Supply AC
Jedec Code:        0x7fb0          EEPROM Version:    0x02
P/N:               740-049388      S/N:              1EDL60300DL
Assembly ID:       0x0483          Assembly Version:  01.02
Date:              01-20-2016      Assembly Flags:   0x00
Version:           REV 02          CLEI Code:        CMUPADNBAA

```

```

ID: QFX10000 AC                      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 30 33 30 30 44 4c 00 00 14 01 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 3  REV 02  740-049388  1EDL61701BT  Power Supply AC
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-049388            S/N: 1EDL61701BT
Assembly ID: 0x0483        Assembly Version: 01.02
Date: 05-01-2016          Assembly Flags: 0x00
Version: REV 02           CLEI Code: CMUPADNBAA
ID: QFX10000 AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 31 37 30 31 42 54 00 00 01 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 4  REV 02  740-049388  1EDL62102P7  Power Supply AC
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-049388            S/N: 1EDL62102P7
Assembly ID: 0x0483        Assembly Version: 01.02
Date: 05-25-2016          Assembly Flags: 0x00
Version: REV 02           CLEI Code: CMUPADNBAA
ID: QFX10000 AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 31 30 32 50 37 00 00 19 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 5  REV 02  740-049388  1EDL62102PP  Power Supply AC
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-049388            S/N: 1EDL62102PP
Assembly ID: 0x0483        Assembly Version: 01.02
Date: 05-25-2016          Assembly Flags: 0x00
Version: REV 02           CLEI Code: CMUPADNBAA
ID: QFX10000 AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00

```



```

Address 0x20: 31 45 44 4c 36 32 31 30 32 50 50 00 00 19 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff
FTC 0          REV 14    750-050108    ACPE4038          Fan Controller 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050108      S/N:           ACPE4038
Assembly ID:   0x0bee          Assembly Version: 01.14
Date:          09-27-2016      Assembly Flags: 0x00
Version:       REV 14          CLEI Code:     CMUCAHZCAA
ID: QFX10000 FTC              FRU Model Number: QFX10008-FAN-CTRL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ee 01 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 31 30 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 34 30 33 38 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 5a 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 98 ff ff ff ff ff ff ff ff ff ff ff
FTC 1          REV 14    750-050108    ACPE4032          Fan Controller 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050108      S/N:           ACPE4032
Assembly ID:   0x0bee          Assembly Version: 01.14
Date:          09-27-2016      Assembly Flags: 0x00
Version:       REV 14          CLEI Code:     CMUCAHZCAA
ID: QFX10000 FTC              FRU Model Number: QFX10008-FAN-CTRL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ee 01 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 31 30 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 34 30 33 32 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 5a 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 98 ff ff ff ff ff ff ff ff ff ff ff
Fan Tray 0     REV 09    760-054372    ACPD6799          Fan Tray 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           760-054372      S/N:           ACPD6799
Assembly ID:   0x0bf0          Assembly Version: 01.09
Date:          09-28-2016      Assembly Flags: 0x00
Version:       REV 09          CLEI Code:     CMUCAHYCAA
ID: QFX10008 FHB              FRU Model Number: QFX10008-FAN
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b f0 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 34 33 37 32 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 36 37 39 39 00 1c 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 59 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff
Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff

```

```

Fan Tray 1          REV 09   760-054372   ACNZ3584          Fan Tray 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 760-054372          S/N: ACNZ3584
Assembly ID: 0x0bf0        Assembly Version: 01.09
Date: 08-30-2016          Assembly Flags: 0x00
Version: REV 09          CLEI Code: CMUCAHYCAA
ID: QFX10008 FHB          FRU Model Number: QFX10008-FAN

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b f0 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 34 33 37 32 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 33 35 38 34 00 1e 08 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 59 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff ff

SIB 0              REV 24   750-050058   ACPD4587          Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058          S/N: ACPD4587
Assembly ID: 0x0bec        Assembly Version: 01.24
Date: 06-19-2016          Assembly Flags: 0x00
Version: REV 24          CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 34 35 38 37 00 13 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00

SIB 1              REV 24   750-050058   ACNZ0635          Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058          S/N: ACNZ0635
Assembly ID: 0x0bec        Assembly Version: 01.24
Date: 06-06-2016          Assembly Flags: 0x00
Version: REV 24          CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 36 33 35 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00

SIB 2              REV 24   750-050058   ACPD4908          Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058          S/N: ACPD4908
Assembly ID: 0x0bec        Assembly Version: 01.24
Date: 07-12-2016          Assembly Flags: 0x00
Version: REV 24          CLEI Code: CMUCAHOCAA

```

```

ID: QFX10008 SIB                      FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 34 39 30 38 00 0c 07 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SIB 3                      REV 24      750-050058      ACNZ0617      Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058            S/N: ACNZ0617
Assembly ID: 0x0bec         Assembly Version: 01.24
Date: 06-07-2016           Assembly Flags: 0x00
Version: REV 24             CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 36 31 37 00 07 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SIB 4                      REV 24      750-050058      ACNZ0527      Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058            S/N: ACNZ0527
Assembly ID: 0x0bec         Assembly Version: 01.24
Date: 06-06-2016           Assembly Flags: 0x00
Version: REV 24             CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 35 32 37 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SIB 5                      REV 23      750-050058      ACNX6980      Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058            S/N: ACNX6980
Assembly ID: 0x0bec         Assembly Version: 01.23
Date: 05-16-2016           Assembly Flags: 0x00
Version: REV 23             CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 17 52 45 56 20 32 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00

```

```

Address 0x20: 53 2f 4e 20 41 43 4e 58 36 39 38 30 00 10 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff ce 00 00 00 00 00 00 00 00 00 00 00

```

### show chassis hardware extensive (PTX10016 Router)

```
user@host> show chassis hardware extensive
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          DH995
Assembly ID:  0x0566          Assembly Version: 01.22
Date:         02-16-2017     Assembly Flags:  0x00
CLEI Code:    CMMUN00ARA
ID: JNP10016          FRU Model Number: QFX10016-CHAS
Board Information Record:
Address 0x00: ad 01 10 00 44 aa 50 ab 1b b6 ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 66 01 16 00 45 56 20 32 32 00 00
Address 0x10: 00 00 00 00 00 35 30 2d 30 35 36 35 35 35 00 00
Address 0x20: 44 48 39 39 35 00 00 00 00 00 00 00 10 02 07
Address 0x30: e1 ff ff ff ad 01 10 00 44 aa 50 ab 1b b6 ff ff
Address 0x40: ff ff ff ff 01 43 4d 4d 55 4e 30 30 41 52 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 43 48 41 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 32 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 51 44 48 39 39 35 00 00 00 00 00 00 00
Midplane      REV 22    750-056555    ACPM7810      Midplane 16
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-056555      S/N:          ACPM7810
Assembly ID:  0x0be4          Assembly Version: 01.22
Date:         02-16-2017     Assembly Flags:  0x00
Version:      REV 22          CLEI Code:    CMMUN00ARA
ID: QFX10016 Midplane        FRU Model Number: QFX10016-CHAS
Board Information Record:
Address 0x00: ad 01 10 00 44 aa 50 ab 1b b6 ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e4 01 16 52 45 56 20 32 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 36 35 35 35 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4d 37 38 31 30 00 10 02 07
Address 0x30: e1 ff ff ff ad 01 10 00 44 aa 50 ab 1b b6 ff ff
Address 0x40: ff ff ff ff 01 43 4d 4d 55 4e 30 30 41 52 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 43 48 41 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 32 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 51 44 48 39 39 35 00 00 00 00 00 00 00
Routing Engine 0          BUILTIN          BUILTIN          RE-PTX-2X00x4
vtbd0 15360 MB            Virtio Block Disk
vtbd1 15360 MB            Virtio Block Disk
ada0 128 MB QEMU          QM00002          Virtio Block Disk
usb0 (addr 0.1) EHCI root HUB 0 Intel          uhub0
usb1 (addr 0.2) product 0x0020 32 vendor 0x8087      uhub1
Routing Engine 1          BUILTIN          BUILTIN          RE-PTX-2X00x4
vtbd0 15360 MB            Virtio Block Disk
vtbd1 15360 MB            Virtio Block Disk
ada0 128 MB QEMU          QM00002          Virtio Block Disk

```

```

usb0 (addr 0.1) EHCI root HUB 0      Intel      uhub0
usb1 (addr 0.2) product 0x0020 32    vendor 0x8087 uhub1
CB 0      REV 03    750-068820    ACPL7238    Control Board
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      750-068820    S/N:      ACPL7238
Assembly ID: 0x0b9d    Assembly Version: 01.03
Date:      03-15-2017  Assembly Flags: 0x00
Version:    REV 03      CLEI Code: CMUCAH3CTB
ID: Control Board      FRU Model Number: QFX10000-RE
Board Information Record:
Address 0x00: ad 01 00 10 e8 b6 c2 46 aa 29 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9d 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 37 32 33 38 00 0f 03 07
Address 0x30: e1 ff ff ff ad 01 00 10 e8 b6 c2 46 aa 29 ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 33 43 54 42 51
Address 0x50: 46 58 31 30 30 30 30 2d 52 45 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff db ff ff ff ff ff ff ff ff ff ff ff ff
CB 1      REV 03    750-068820    ACPL7298    Control Board
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      750-068820    S/N:      ACPL7298
Assembly ID: 0x0b9d    Assembly Version: 01.03
Date:      03-15-2017  Assembly Flags: 0x00
Version:    REV 03      CLEI Code: CMUCAH3CTB
ID: Control Board      FRU Model Number: QFX10000-RE
Board Information Record:
Address 0x00: ad 01 00 10 e8 b6 c2 46 99 b9 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9d 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 37 32 39 38 00 0f 03 07
Address 0x30: e1 ff ff ff ad 01 00 10 e8 b6 c2 46 99 b9 ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 33 43 54 42 51
Address 0x50: 46 58 31 30 30 30 30 2d 52 45 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff db ff ff ff ff ff ff ff ff ff ff ff ff
FPC 1      REV 36    750-077140    ACNP4590    LC1102 - 12C / 36Q /
144X
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      750-077140    S/N:      ACNP4590
Assembly ID: 0x0be7    Assembly Version: 01.36
Date:      10-17-2016  Assembly Flags: 0x00
Version:    REV 36      CLEI Code: CMUIAM9BAA
ID: ULC-36Q-12Q28      FRU Model Number: QFX10000-36Q
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 24 52 45 56 20 33 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 37 31 34 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 50 34 35 39 30 00 11 0a 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fe ff ff ff ff ff ff ff ff ff ff ff ff
CPU      BUILTIN      BUILTIN      FPC CPU
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      BUILTIN      S/N:      BUILTIN

```

```

Assembly ID: 0xf020      Assembly Version: 02.17
Date: 04-19-2012      Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 40 36 bd 09 40 25 32
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 40 36 bd
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0      BUILTIN      BUILTIN      12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: BUILTIN      S/N: BUILTIN
Assembly ID: 0xf050      Assembly Version: 02.17
Date: 04-19-2012      Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 0      REV 01      740-054053      QF3600AV      QSFP+-4X10G-SR
Xcvr 35      REV 01      740-061405      1ACQ110507K      QSFP-100GBASE-SR4
FPC 3      REV 07      750-071975      CAHA2224      LC1102 - 12C / 36Q /
144X
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-071975      S/N: CAHA2224
Assembly ID: 0x0be7      Assembly Version: 01.07
Date: 01-17-2017      Assembly Flags: 0x00
Version: REV 07      CLEI Code: PROTOXCLEI
ID: ULC-36Q-12Q28      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 07 52 45 56 20 30 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 31 39 37 35 00 00
Address 0x20: 53 2f 4e 20 43 41 48 41 32 32 32 34 00 11 01 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU      BUILTIN      BUILTIN      FPC CPU
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: BUILTIN      S/N: BUILTIN
Assembly ID: 0xf020      Assembly Version: 02.17
Date: 04-19-2012      Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 60 b6 be 09 c0 cf 38

```

```

Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 60 b6 be
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0                BUILTIN        BUILTIN        12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:        BUILTIN        S/N:        BUILTIN
Assembly ID: 0xf050        Assembly Version: 02.17
Date:       04-19-2012    Assembly Flags: 0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 0      REV 01      740-054053    QG1505YM      QSFP+-4X10G-SR
Xcvr 11          NON-JNPR    GDA2017459    QSFP-100GBASE-LR4
Xcvr 35          NON-JNPR    GDF2008750    QSFP-100GBASE-LR4
FPC 5      REV 13      750-068822    ACPD6501      LC1102 - 12C / 36Q /
144X
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:        750-068822    S/N:        ACPD6501
Assembly ID: 0x0be7        Assembly Version: 01.13
Date:       06-29-2017    Assembly Flags: 0x00
Version:    REV 13        CLEI Code:    CMUIAM9BAC
ID: ULC-36Q-12Q28        FRU Model Number: QFX10000-36Q

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 32 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 36 35 30 31 00 1d 06 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 43 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 43 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fd ff ff ff ff ff ff ff ff ff ff ff ff
CPU                BUILTIN        BUILTIN        FPC CPU
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:        BUILTIN        S/N:        BUILTIN
Assembly ID: 0xf020        Assembly Version: 02.17
Date:       04-19-2012    Assembly Flags: 0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 c0 c6 bc 09 c0 ca 40
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 c0 c6 bc
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

```

```

Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0                BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:         BUILTIN        S/N:         BUILTIN
Assembly ID: 0xf050        Assembly Version: 02.17
Date:        04-19-2012    Assembly Flags: 0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 1      REV 01 740-058734 1ECQ11381LA QSF+100GBASE-SR4
Xcvr 2      REV 01 740-043308 UWH141S QSF+40G-LR4
Xcvr 3      REV 01 740-043308 UWE2CG9 QSF+40G-LR4
FPC 6       REV 37 750-077140 ACNS2793 LC1102 - 12C / 36Q /
144X

Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:         750-077140    S/N:         ACNS2793
Assembly ID: 0x0be7        Assembly Version: 01.37
Date:        03-25-2017    Assembly Flags: 0x00
Version:     REV 37        CLEI Code:    CMUIAM9BAA
ID: ULC-36Q-12Q28         FRU Model Number: QFX10000-36Q

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 25 52 45 56 20 33 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 37 31 34 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 53 32 37 39 33 00 19 03 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fe ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN          BUILTIN          FPC CPU

Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:         BUILTIN        S/N:         BUILTIN
Assembly ID: 0xf020        Assembly Version: 02.17
Date:        04-19-2012    Assembly Flags: 0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 a0 e6 d4 09 00 bd 43
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 a0 e6 d4
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0                BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0          EEPROM Version: 0x02

```



```

P/N:          BUILTIN          S/N:          BUILTIN
Assembly ID:  0xf050          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 0        REV 01        740-032986    QH0400VH        QSFP+-40G-SR4
Xcvr 1        REV 01        740-032986    QH0400VM        QSFP+-40G-SR4
Xcvr 35       REV 01        740-058734    1ECQ11390ZB    QSFP-100GBASE-SR4
FPC 8         REV 36        750-077140    ACNP4625        LC1102 - 12C / 36Q /
144X
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-077140      S/N:          ACNP4625
Assembly ID:  0x0be7          Assembly Version: 01.36
Date:         10-17-2016      Assembly Flags:  0x00
Version:      REV 36          CLEI Code:     CMUIAM9BAA
ID: ULC-36Q-12Q28            FRU Model Number: QFX10000-36Q
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 24 52 45 56 20 33 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 37 31 34 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 50 34 36 32 35 00 11 0a 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fe ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN          BUILTIN          FPC CPU
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          BUILTIN          S/N:          BUILTIN
Assembly ID:  0xf020          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 c0 e6 d4 09 40 59 4a
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 c0 e6 d4
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          BUILTIN          S/N:          BUILTIN
Assembly ID:  0xf050          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff

```

```

I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
    Xcvr 1      REV 01    740-058732    1AMQA14206D    QSFP-100GBASE-LR4
    Xcvr 10     REV 01    740-032986    QF4301KB      QSFP+-40G-SR4
    Xcvr 24     REV 01    740-054050    INFJA0492244  QSFP+-4X10G-LR
FPC 9          REV 35    750-071976    ACPD3055      LC1101 - 30C / 30Q / 96X

Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           750-071976  S/N:           ACPD3055
Assembly ID:   0x0be8      Assembly Version: 01.35
Date:          05-26-2016  Assembly Flags: 0x00
Version:       REV 35      CLEI Code:     CMUIANABAA
ID: ULC-30Q28      FRU Model Number: JNP10K-LC1101

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e8 01 23 52 45 56 20 33 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 31 39 37 36 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 33 30 35 35 00 1a 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4e 41 42 41 41 4a
Address 0x50: 4e 50 31 30 4b 2d 4c 43 31 31 30 31 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff ef ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN      BUILTIN      FPC CPU
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           BUILTIN      S/N:           BUILTIN
Assembly ID:   0xf020      Assembly Version: 02.17
Date:          04-19-2012  Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 20 e7 d4 09 00 a6 d4
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 20 e7 d4
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN      30x100GE/30x40GE/96x10GE

Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           BUILTIN      S/N:           BUILTIN
Assembly ID:   0xf050      Assembly Version: 02.17
Date:          04-19-2012  Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff

```

```

Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
  Xcvr 0          NON-JNPR    INGBT7970007    QSFP-100GBASE-LR4
  Xcvr 1          NON-JNPR    UWQ24D9       QSFP-100GBASE-LR4
  Xcvr 2          NON-JNPR    INGBT7970011  QSFP-100GBASE-LR4
  Xcvr 3          NON-JNPR    UX60AF1      QSFP-100G-CWDM4
  Xcvr 4          NON-JNPR    UX408JJ      QSFP-100GBASE-LR4
  Xcvr 11         REV 01     740-058734   1ECQ113835F   QSFP-100GBASE-SR4
  Xcvr 18         NON-JNPR    Q7496        QSFP-100G-CWDM4
  Xcvr 29         REV 01     740-058734   1ECQ11380LZ   QSFP-100GBASE-SR4
Power Supply 0   REV 02     740-049388   1EDL625039E   Power Supply AC
Jedec Code:      0x7fb0          EEPROM Version: 0x02
P/N:             740-049388      S/N:           1EDL625039E
Assembly ID:     0x0483          Assembly Version: 01.02
Date:            06-19-2016      Assembly Flags: 0x00
Version:         REV 02          CLEI Code:     CMUPADNBAA
ID: QFX10000 AC    FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
  Address 0x20: 31 45 44 4c 36 32 35 30 33 39 45 00 00 13 06 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
  Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 1   REV 02     740-049388   1EDL62503AD    Power Supply AC
Jedec Code:      0x7fb0          EEPROM Version: 0x02
P/N:             740-049388      S/N:           1EDL62503AD
Assembly ID:     0x0483          Assembly Version: 01.02
Date:            06-19-2016      Assembly Flags: 0x00
Version:         REV 02          CLEI Code:     CMUPADNBAA
ID: QFX10000 AC    FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
  Address 0x20: 31 45 44 4c 36 32 35 30 33 41 44 00 00 13 06 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
  Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 2   REV 02     740-049388   1EDL625039P    Power Supply AC
Jedec Code:      0x7fb0          EEPROM Version: 0x02
P/N:             740-049388      S/N:           1EDL625039P
Assembly ID:     0x0483          Assembly Version: 01.02
Date:            06-19-2016      Assembly Flags: 0x00
Version:         REV 02          CLEI Code:     CMUPADNBAA
ID: QFX10000 AC    FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00

```

```

Address 0x20: 31 45 44 4c 36 32 35 30 33 39 50 00 00 13 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 3  REV 02  740-049388  1EDL702004E  Power Supply AC
Jedec Code: 0x7fb0  EEPROM Version: 0x02
P/N: 740-049388  S/N: 1EDL702004E
Assembly ID: 0x0483  Assembly Version: 01.02
Date: 01-18-2017  Assembly Flags: 0x00
Version: REV 02  CLEI Code: CMUPADNBAA
ID: QFX10000 AC  FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 37 30 32 30 30 34 45 00 00 12 01 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 4  REV 02  740-049388  1EDL625039D  Power Supply AC
Jedec Code: 0x7fb0  EEPROM Version: 0x02
P/N: 740-049388  S/N: 1EDL625039D
Assembly ID: 0x0483  Assembly Version: 01.02
Date: 06-19-2016  Assembly Flags: 0x00
Version: REV 02  CLEI Code: CMUPADNBAA
ID: QFX10000 AC  FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 35 30 33 39 44 00 00 13 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 5  REV 02  740-049388  1EDL63706JD  Power Supply AC
Jedec Code: 0x7fb0  EEPROM Version: 0x02
P/N: 740-049388  S/N: 1EDL63706JD
Assembly ID: 0x0483  Assembly Version: 01.02
Date: 09-13-2016  Assembly Flags: 0x00
Version: REV 02  CLEI Code: CMUPADNBAA
ID: QFX10000 AC  FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 33 37 30 36 4a 44 00 00 0d 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff

```

```

Power Supply 6      REV 02      740-049388      1EDL63706JH      Power Supply AC
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-049388      S/N: 1EDL63706JH
Assembly ID: 0x0483      Assembly Version: 01.02
Date: 09-13-2016      Assembly Flags: 0x00
Version: REV 02      CLEI Code: CMUPADNBAA
ID: QFX10000 AC      FRU Model Number: QFX10000-PWR-AC

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 33 37 30 36 4a 48 00 00 0d 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff

FTC 0      REV 10      750-050309      ACPM2918      Fan Controller 16
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-050309      S/N: ACPM2918
Assembly ID: 0x0b9c      Assembly Version: 01.10
Date: 01-13-2017      Assembly Flags: 0x00
Version: REV 10      CLEI Code: CMUCAH5CAA
ID: QFX10016 FTC      FRU Model Number: QFX10016-FAN-CTRL

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9c 01 0a 52 45 56 20 31 30 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 33 30 39 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4d 32 39 31 38 00 0d 01 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 35 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6f ff ff ff ff ff ff ff ff ff ff ff ff

FTC 1      REV 10      750-050309      ACPE8185      Fan Controller 16
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-050309      S/N: ACPE8185
Assembly ID: 0x0b9c      Assembly Version: 01.10
Date: 12-22-2016      Assembly Flags: 0x00
Version: REV 10      CLEI Code: CMUCAH5CAA
ID: QFX10016 FTC      FRU Model Number: QFX10016-FAN-CTRL

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9c 01 0a 52 45 56 20 31 30 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 33 30 39 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 38 31 38 35 00 16 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 35 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6f ff ff ff ff ff ff ff ff ff ff ff ff

Fan Tray 0      REV 10      760-077141      ACPV7288      Fan Tray 16
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 760-077141      S/N: ACPV7288
Assembly ID: 0x0bf1      Assembly Version: 01.10
Date: 06-07-2017      Assembly Flags: 0x00
Version: REV 10      CLEI Code: CMUCAH4CAA

```

```

ID: QFX10016 FHB                      FRU Model Number: JNP10016-FAN
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b f1 01 0a 52 45 56 20 31 30 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 37 37 31 34 31 00 00
Address 0x20: 53 2f 4e 20 41 43 50 56 37 32 38 38 00 07 06 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 34 43 41 41 4a
Address 0x50: 4e 50 31 30 30 31 36 2d 46 41 4e 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 0d ff ff ff ff ff ff ff ff ff ff ff ff
Fan Tray 1          REV 10    760-057901    ACPL0546          Fan Tray 16
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 760-057901          S/N: ACPL0546
Assembly ID: 0x0bf1        Assembly Version: 01.10
Date: 02-14-2017          Assembly Flags: 0x00
Version: REV 10          CLEI Code: CMUCAH4CAA
ID: QFX10016 FHB          FRU Model Number: QFX10016-FAN
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b f1 01 0a 52 45 56 20 31 30 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 37 39 30 31 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 30 35 34 36 00 0e 02 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 34 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 46 41 4e 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 0d ff ff ff ff ff ff ff ff ff ff ff ff
SIB 0              REV 15    750-058270    ACPM2804          Switch Fabric 16
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-058270          S/N: ACPM2804
Assembly ID: 0x0bed        Assembly Version: 01.15
Date: 12-21-2016          Assembly Flags: 0x00
Version: REV 15          CLEI Code: CMUCAH6CAA
ID: QFX10016 SIB          FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4d 32 38 30 34 00 15 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00 00
SIB 1              REV 15    750-058270    ACPM2808          Switch Fabric 16
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-058270          S/N: ACPM2808
Assembly ID: 0x0bed        Assembly Version: 01.15
Date: 12-21-2016          Assembly Flags: 0x00
Version: REV 15          CLEI Code: CMUCAH6CAA
ID: QFX10016 SIB          FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00

```

```

Address 0x20: 53 2f 4e 20 41 43 50 4d 32 38 30 38 00 15 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00
SIB 2          REV 15    750-058270    ACPL4450          Switch Fabric 16
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-058270      S/N:             ACPL4450
Assembly ID:   0x0bed          Assembly Version: 01.15
Date:          02-17-2017      Assembly Flags:   0x00
Version:       REV 15          CLEI Code:        CMUCAH6CAA
ID: QFX10016 SIB              FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 34 34 35 30 00 11 02 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00
SIB 3          REV 15    750-058270    ACPJ9834          Switch Fabric 16
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-058270      S/N:             ACPJ9834
Assembly ID:   0x0bed          Assembly Version: 01.15
Date:          12-17-2016      Assembly Flags:   0x00
Version:       REV 15          CLEI Code:        CMUCAH6CAA
ID: QFX10016 SIB              FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4a 39 38 33 34 00 11 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00
SIB 4          REV 15    750-058270    ACPM2814          Switch Fabric 16
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-058270      S/N:             ACPM2814
Assembly ID:   0x0bed          Assembly Version: 01.15
Date:          12-21-2016      Assembly Flags:   0x00
Version:       REV 15          CLEI Code:        CMUCAH6CAA
ID: QFX10016 SIB              FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4d 32 38 31 34 00 15 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00

```

```

SIB 5          REV 15    750-058270    ACPL4277          Switch Fabric 16
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-058270      S/N:              ACPL4277
Assembly ID:   0x0bed          Assembly Version:  01.15
Date:          02-17-2017      Assembly Flags:    0x00
Version:       REV 15          CLEI Code:         CMUCAH6CAA
ID: QFX10016 SIB              FRU Model Number:  QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 34 32 37 37 00 11 02 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00 00

FPD Board      REV 07    711-054687    ACPL1407          Front Panel Display
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-054687      S/N:              ACPL1407
Assembly ID:   0x0bf2          Assembly Version:  01.07
Date:          02-12-2017      Assembly Flags:    0x00
Version:       REV 07
ID: QFX10000 FPD
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b f2 01 07 52 45 56 20 30 37 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 35 34 36 38 37 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 31 34 30 37 00 0c 02 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

### show chassis hardware models (MX104 Router)

```
user@host> show chassis hardware models
```

```

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 20    750-044219   CAAS5849      PROTO-ASSEMBLY
PEM 0         REV 01    740-045932   1H072400065
Routing Engine 0 REV 16    750-044228   CAAR5915      PROTO-ASSEMBLY
AFEB 0                                     BUILTIN
FPC 0                                     BUILTIN
FPC 1                                     BUILTIN
  MIC 0         REV 01    750-046905   CAAK7103      MIC-3D-20GE-SFP-EH
FPC 2                                     BUILTIN
Fan Tray      REV 02    711-049570   CAAX6538      PROTO-ASSEMBLY

```

### show chassis hardware models (PTX10008 Router)

```
user@host> show chassis hardware models
```

```

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number

```



Midplane	REV 27	750-054097	ACPD4307	QFX10008-CHAS
CB 0	REV 02	750-068820	ACNZ4440	QFX10000-RE
CB 1	REV 02	750-068820	ACNZ8284	QFX10000-RE
FPC 0	REV 36	750-051354	ACNP4679	QFX10000-36Q
PIC 0		BUILTIN	BUILTIN	
FPC 1	REV 33	750-051354	ACNX8831	QFX10000-36Q
PIC 0		BUILTIN	BUILTIN	
FPC 2	REV 32	750-051357	ACPB0341	QFX10000-30C
PIC 0		BUILTIN	BUILTIN	
FPC 3	REV 35	750-051357	ACPD2186	QFX10000-30C
PIC 0		BUILTIN	BUILTIN	
FPC 5	REV 08	750-068822	ACPF0057	QFX10000-36Q
PIC 0		BUILTIN	BUILTIN	
FPC 6	REV 08	750-068822	ACPE9951	QFX10000-36Q
PIC 0		BUILTIN	BUILTIN	
FPD Board	REV 07	711-054687	ACPC7142	
Power Supply 0	REV 02	740-049388	1EDL62102N9	QFX10000-PWR-AC
Power Supply 1	REV 02	740-049388	1EDL60300KX	QFX10000-PWR-AC
Power Supply 2	REV 02	740-049388	1EDL60300DL	QFX10000-PWR-AC
Power Supply 3	REV 02	740-049388	1EDL61701BT	QFX10000-PWR-AC
Power Supply 4	REV 02	740-049388	1EDL62102P7	QFX10000-PWR-AC
Power Supply 5	REV 02	740-049388	1EDL62102PP	QFX10000-PWR-AC
FTC 0	REV 14	750-050108	ACPE4038	QFX10008-FAN-CTRL
FTC 1	REV 14	750-050108	ACPE4032	QFX10008-FAN-CTRL
Fan Tray 0	REV 09	760-054372	ACPD6799	QFX10008-FAN
Fan Tray 1	REV 09	760-054372	ACNZ3584	QFX10008-FAN
SIB 0	REV 24	750-050058	ACPD4587	QFX10008-SF
SIB 1	REV 24	750-050058	ACNZ0635	QFX10008-SF
SIB 2	REV 24	750-050058	ACPD4908	QFX10008-SF
SIB 3	REV 24	750-050058	ACNZ0617	QFX10008-SF
SIB 4	REV 24	750-050058	ACNZ0527	QFX10008-SF
SIB 5	REV 23	750-050058	ACNX6980	QFX10008-SF

### show chassis hardware models (PTX10016 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 24	750-077138	ACPR5157	JNP10016
CB 0	REV 04	711-065897	CAHA9983	PROTO-ASSEMBLY
CB 1	REV 05	711-065897	CAJD3802	PROTO-ASSEMBLY
FPC 2				
PIC 0		BUILTIN	BUILTIN	
FPC 4	REV 35	750-071976	ACPD2168	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 5	REV 13	750-068822	ACPA0336	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 6	REV 41	750-071976	ACPF0695	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 7	REV 35	750-071976	ACPD2139	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 8	REV 35	750-071976	ACPD2142	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 9	REV 41	750-071976	ACPM5461	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 10	REV 35	750-071976	ACNS6795	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 11	REV 35	750-071976	ACPD1831	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	

FPC 13	REV 41	750-071976	ACPS2075	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 15	REV 37	750-071976	ACPL7163	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
Power Supply 0	REV 01	740-073147	1EDM6171155	JNP10K-PWR-DC
Power Supply 1	REV 01	740-073147	1EDM6281575	JNP10K-PWR-DC
Power Supply 2	REV 01	740-073147	1EDM6171044	JNP10K-PWR-DC
Power Supply 3	REV 01	740-073147	1EDM6281244	JNP10K-PWR-DC
Power Supply 4	REV 01	740-073147	1EDM6282093	JNP10K-PWR-DC
Power Supply 5	REV 01	740-073147	1EDM6281413	JNP10K-PWR-DC
Power Supply 6	REV 01	740-073147	1EDM6171071	JNP10K-PWR-DC
Power Supply 7	REV 01	740-073147	1EDM6170709	JNP10K-PWR-DC
Power Supply 8	REV 01	740-073147	1EDM6171169	JNP10K-PWR-DC
Power Supply 9	REV 01	740-073147	1EDM6170754	JNP10K-PWR-DC
Fan Tray 0				QFX5100-FAN-AFO
Fan Tray 1				QFX5100-FAN-AFO
SIB 0	REV 15	750-077140	ACPV3933	JNP10016-SF
SIB 1	REV 15	750-077140	ACPV3938	JNP10016-SF
SIB 2	REV 15	750-077140	ACPV3974	JNP10016-SF
SIB 3	REV 15	750-077140	ACPV3879	JNP10016-SF
SIB 4	REV 15	750-077140	ACPV3964	JNP10016-SF
SIB 5	REV 15	750-077140	ACPV3981	JNP10016-SF
FPD Board	REV 07	711-054687	ACPS8855	

#### show chassis hardware clei-models (MX104 Router)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 20	750-044219	PROTOXCLEI	PROTO-ASSEMBLY
PEM 0	REV 01	740-045932		
Routing Engine 0	REV 16	750-044228	PROTOXCLEI	PROTO-ASSEMBLY
AFEB 0		BUILTIN		
FPC 0		BUILTIN		
FPC 1		BUILTIN		
MIC 0	REV 01	750-046905	PROTOXCLEI	MIC-3D-20GE-SFP-EH
FPC 2		BUILTIN		
Fan Tray	REV 02	711-049570	CAAX6538	PROTO-ASSEMBLY

#### show chassis hardware (MX240 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN10C7F7EAFC	MX240
Midplane	REV 01	710-021041	TR1502	MX240 Backplane
FPM Board	REV 01	710-017254	KD4017	Front Panel Display
PEM 0	Rev 02	740-017330	000332	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	000226	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 06	740-013063	1000703522	RE-S-2000
Routing Engine 1	REV 06	740-015113	1000687625	RE-S-1300
CB 0	REV 07	710-013385	KC9057	MX SCB
CB 1	REV 05	710-013385	JY4760	MX SCB
FPC 1	REV 01	750-021679	KC7340	DPCE 40x 1GE R
CPU	REV 06	710-013713	KD4078	DPC PMB

PIC 0			BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	P9F18ME		SFP-SX
PIC 1			BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 2			BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 3			BUILTIN	BUILTIN	10x 1GE(LAN)
FPC 2	REV 04	710-016669	JS4529		DPCE 40x 1GE R EQ
CPU	REV 06	710-013713	KB3969		DPC PMB
PIC 0			BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y79		SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XU8		SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YG6		SFP-SX
Xcvr 3	REV 01	740-011613	PBG3XUG		SFP-SX
Xcvr 4	REV 01	740-011613	PBG3XTJ		SFP-SX
PIC 1			BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3ZUM		SFP-SX
Xcvr 1	REV 01	740-011613	PBG3Y5H		SFP-SX
Xcvr 2	REV 01	740-011613	PBG3UZT		SFP-SX
Xcvr 3	REV 01	740-011613	PBG3US1		SFP-SX
PIC 2			BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3YG7		SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XZ9		SFP-SX
Xcvr 2	REV 01	740-011613	PBG3XTY		SFP-SX
Xcvr 3	REV 01	740-011613	PBG3UZG		SFP-SX
PIC 3			BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y8W		SFP-SX
Xcvr 1	REV 01	740-011613	PBG3YVX		SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YB3		SFP-SX
Xcvr 3	REV 01	740-011613	PBG43VQ		SFP-SX
Fan Tray 0	REV 01	710-021113	JS4642		MX240 Fan Tray

### show chassis hardware detail (MX 240 Router with Routing Engine Displaying DIMM Information)

```
user@host> show chassis hardware detail
```

Item	Version	Part number	Serial number	Description
Chassis			JN11279B4AFC	MX240 Backplane
Midplane	REV 07	760-021404	TS2474	MX240 Backplane
FPM Board	REV 03	760-021392	XC2643	Front Panel Display
PEM 0	Rev 03	740-017343	QCS0908A068	DC Power Entry Module
Routing Engine 0	REV 01	740-031117	AARCH00	RE-S-1800x4
ad0 3764 MB	STEC M2+	CF 9.0.2	STIM2Q3209239145303	Removable Compact Flash
ad1 28626 MB	WDC SSD-F0030S-5000		C933Z036237215548S00	Compact Flash
usb0 (addr 1)	EHCI root hub 0		Intel	uhub0
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub1
DIMM 0	VL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
DIMM 1	VL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
DIMM 2	VL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
DIMM 3	SL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
CB 0	REV 03	710-021523	XD7225	MX SCB
Fan Tray 0	REV 01	710-021113	WZ4986	MX240 Fan Tray

### show chassis hardware (MX240 Router with Enhanced MX SCB)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
------	---------	-------------	---------------	-------------

Chassis			JN10C7F7EAFB	MX240
Midplane	REV 01	710-021041	TR1502	MX240 Backplane
FPM Board	REV 01	710-017254	KD4017	Front Panel Display
PEM 0	Rev 02	740-017330	000332	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	000226	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 06	740-013063	1000703522	RE-S-2000
Routing Engine 1	REV 06	740-015113	1000687625	RE-S-1300
CB 0	REV 02	710-031391	YE8494	Enhanced MX SCB
CB 1	REV 05	710-031391	YOP5764	Enhanced MX SCB
FPC 1	REV 01	750-021679	KC7340	DPCE 40x 1GE R
CPU	REV 06	710-013713	KD4078	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	P9F18ME	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
FPC 2	REV 04	710-016669	JS4529	DPCE 40x 1GE R EQ
CPU	REV 06	710-013713	KB3969	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y79	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XU8	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YG6	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3XUG	SFP-SX
Xcvr 4	REV 01	740-011613	PBG3XTJ	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3ZUM	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3Y5H	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3UZT	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3US1	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3YG7	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XZ9	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3XTY	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3UZG	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y8W	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3YVX	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YB3	SFP-SX
Xcvr 3	REV 01	740-011613	PBG43VQ	SFP-SX
Fan Tray 0	REV 01	710-021113	JS4642	MX240 Fan Tray

### show chassis hardware (MX480 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN10C7F7FAFB	MX480
Midplane	REV 04	710-017414	TR2071	MX480 Midplane
FPM Board	REV 02	710-017254	KB8459	Front Panel Display
PEM 0	Rev 02	740-017330	QCS07519029	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	QCS07519041	PS 1.2-1.7kW; 100-240V
AC in				
PEM 2	Rev 02	740-017330	QCS07519097	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 07	740-013063	1000733381	RE-S-2000
Routing Engine 1	REV 07	740-013063	1000733540	RE-S-2000

CB 0	REV 07	710-013385	KA8022	MX SCB
CB 1	REV 07	710-013385	KA8303	MX SCB
FPC 0	REV 09	750-020452	KA8660	DPCE 40x 1GE X EQ
CPU	REV 06	710-013713	KA8185	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Fan Tray				Left Fan Tray

### show chassis hardware (MX480 Router with Enhanced MX SCB)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN10C7F7FAFB	MX480
Midplane	REV 04	710-017414	TR2071	MX480 Midplane
FPM Board	REV 02	710-017254	KB8459	Front Panel Display
PEM 0	Rev 02	740-017330	QCS07519029	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	QCS07519041	PS 1.2-1.7kW; 100-240V
AC in				
PEM 2	Rev 02	740-017330	QCS07519097	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 07	740-013063	1000733381	RE-S-2000
Routing Engine 1	REV 07	740-013063	1000733540	RE-S-2000
CB 0	REV 07	710-013385	KA8022	Enhanced MX SCB
CB 1	REV 07	710-013385	KA8303	Enhanced MX SCB
FPC 0	REV 09	750-020452	KA8660	DPCE 40x 1GE X EQ
CPU	REV 06	710-013713	KA8185	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Fan Tray				Left Fan Tray

### show chassis hardware (MX480 Routers with MPC5E and Built-In OTN PIC)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN11C0338AFB	MX480
Midplane	REV 05	710-017414	ABAB8430	MX480 Midplane
FPM Board	REV 02	710-017254	ZS8005	Front Panel Display
PEM 0	Rev 05	740-029970	QCS1024U089	PS 1.4-2.52kW; 90-264V
AC in				
PEM 1	Rev 10	740-029970	QCS1314U0FJ	PS 1.4-2.52kW; 90-264V
AC in				
PEM 2	Rev 07	740-029970	QCS1121U076	PS 1.4-2.52kW; 90-264V
AC in				
Routing Engine 0	REV 05	740-031116	9009092471	RE-S-1800x4
Routing Engine 1	REV 05	740-031116	9009097958	RE-S-1800x4
CB 0	REV 16	750-031391	CAAX0789	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAX0856	Enhanced MX SCB
FPC 0	REV 32	750-028467	ABBP1782	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBP5410	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-021308	983152A00038	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00211	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AQ72LPB	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AHNOWR5	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11J03627	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00300	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ42WSS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HGC	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	ANAONDO	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANAONGF	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	ANAONG9	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	ANAOMP9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQA06CG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	19T511100493	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	APR040J	SFP+-10G-SR
FPC 1	REV 26	750-046005	CACN1894	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8698	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	163363A03046	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JS8	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	153363A00593	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JUJ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQCOB53	CFP2-100G-LR4-D
FPC 2	REV 26	750-046005	CACN1891	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8694	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0		NON-JNPR	URA012A	SFP+-10G-LR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	J13F47042	CFP2-100G-LR4-D
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AJCOBM3	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	11T511100917	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQK07SU	CFP2-100G-LR4-D
FPC 3	REV 03	750-045372	CAAD9425	MPCE Type 3 3D
CPU	REV 08	711-035209	CAAD9094	HMPC PMB 2G
MIC 0	REV 14	750-033196	CAAW9204	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC034	CFP2-100G-SR10
MIC 1	REV 19	750-033199	CAAJ1814	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 4	REV 21.0.11	750-045715	CAAY3568	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7430	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AP406NG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AR41NLP	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11D05630	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 12	750-049136	CACM6678	MPC5E 24XGE OTN Mezz
FPC 5	REV 11	750-045372	CABK7539	MPCE Type 3 3D
CPU	REV 08	711-035209	CABJ2466	HMPC PMB 2G
MIC 0	REV 19	750-033199	CAAJ9719	1X100GE CFP

PIC 0			BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	UP1020P		CFP-100G-SR10
MIC 1	REV 07	750-033196	YZ0797		1X100GE CXP
PIC 2			BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC42FC022		CFP2-100G-SR10
Fan Tray					Enhanced Left Fan Tray

### show chassis hardware detail (MX480 Routers with MPC5E and Built-In OTN PIC)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11C0338AFB	MX480
Midplane	REV 05	710-017414	ABAB8430	MX480 Midplane
FPM Board	REV 02	710-017254	ZS8005	Front Panel Display
PEM 0	Rev 05	740-029970	QCS1024U089	PS 1.4-2.52kW; 90-264V
AC in				
PEM 1	Rev 10	740-029970	QCS1314U0FJ	PS 1.4-2.52kW; 90-264V
AC in				
PEM 2	Rev 07	740-029970	QCS1121U076	PS 1.4-2.52kW; 90-264V
AC in				
Routing Engine 0	REV 05	740-031116	9009092471	RE-S-1800x4
ad0 3896 MB	VRFCF14096DIHK1		VM4096MB 6862	Compact Flash
ad1 30533 MB	UGB94ARF32H0S3-KC		UNIGEN-478612-001127	Disk 1
usb0 (addr 1)	EHCI root hub 0		Intel	uhub0
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub1
DIMM 0	SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80	
DIMM 1	SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80	
DIMM 2	SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80	
DIMM 3	SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80	
Routing Engine 1	REV 05	740-031116	9009097958	RE-S-1800x4
ad0 3896 MB	VRFCF14096DIHK1		VM4096MB 6145	Compact Flash
ad1 30533 MB	UGB94ARF32H0S3-KC		UNIGEN-499551-000273	Disk 1
CB 0	REV 16	750-031391	CAAX0789	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAX0856	Enhanced MX SCB
FPC 0	REV 32	750-028467	ABBP1782	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBP5410	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	983152A00038	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00211	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AQ72LPB	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AHNRW5	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11J03627	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00300	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ42WSS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HGC	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	ANAONDO	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANAONGF	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	ANAONG9	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	ANAOMP9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQA06CG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	19T511100493	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	APR040J	SFP+-10G-SR
FPC 1	REV 26	750-046005	CACN1894	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8698	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN

Xcvr 0	REV 01	740-031980	163363A03046	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JS8	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
PIC 2		BUILTIN	BUILTIN	2X100GE SFPP OTN
Xcvr 0	REV 01	740-031980	153363A00593	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JUJ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQCOB53	CFP2-100G-LR4-D
FPC 2	REV 26	750-046005	CACN1891	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8694	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X100GE SFPP OTN
Xcvr 0		NON-JNPR	URA012A	SFP+-10G-LR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	J13F47042	CFP2-100G-LR4-D
PIC 2		BUILTIN	BUILTIN	2X100GE SFPP OTN
Xcvr 0	REV 01	740-031980	AJC0BM3	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	11T511100917	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQK07SU	CFP2-100G-LR4-D
FPC 3	REV 03	750-045372	CAAD9425	MPC Type 3 3D
CPU	REV 08	711-035209	CAAD9094	HMPC PMB 2G
MIC 0	REV 14	750-033196	CAAW9204	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC034	CFP2-100G-SR10
MIC 1	REV 19	750-033199	CAAJ1814	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 4	REV 21.0.11	750-045715	CAAY3568	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7430	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X100GE SFPP OTN
Xcvr 0	REV 01	740-031980	AP406NG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AR41NLP	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11D05630	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X100GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 12	750-049136	CACM6678	MPC5E 24XGE OTN Mezz
FPC 5	REV 11	750-045372	CABK7539	MPCE Type 3 3D
CPU	REV 08	711-035209	CABJ2466	HMPC PMB 2G
MIC 0	REV 19	750-033199	CAAJ9719	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	UP1020P	CFP-100G-SR10
MIC 1	REV 07	750-033196	YZ0797	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC42FC022	CFP2-100G-SR10
Fan Tray				Enhanced Left Fan Tray

### show chassis hardware extensive (MX480 Routers with MPC5E and Built-In OTN PIC)

```
user@host> show chassis hardware extensive
```

#### Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11C0338AFB	MX480
Jedec Code:	0x7fb0	EEPROM Version:	0x02	
		S/N:	JN11C0338AFB	
Assembly ID:	0x01fe	Assembly Version:	00.00	
Date:	00-00-0000	Assembly Flags:	0x02	
ID:	MX480			
Board Information Record:				



```

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 01 fe 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 31 43 30 33 33 38 41 46 42 02 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane          REV 05    710-017414    ABAB8430          MX480 Midplane
Jedec Code:      0x7fb0          EEPROM Version:    0x01
P/N:             710-017414      S/N:             ABAB8430
Assembly ID:     0x01fe          Assembly Version: 01.05
Date:           12-13-2011      Assembly Flags:   0x00
Version:         REV 05
ID: MX480 Midplane          FRU Model Number: CHAS-BP-MX480-S
Board Information Record:
Address 0x00: ad 01 08 00 00 23 9c fc 98 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 01 fe 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 31 37 34 31 34 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 38 34 33 30 00 0d 0c 07
Address 0x30: db ff ff ff ad 01 08 00 00 23 9c fc 98 00 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
Address 0x50: 48 41 53 2d 42 50 2d 4d 58 34 38 30 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board          REV 02    710-017254    ZS8005          Front Panel Display
Jedec Code:      0x7fb0          EEPROM Version:    0x01
P/N:             710-017254      S/N:             ZS8005
Assembly ID:     0x01ff          Assembly Version: 01.02
Date:           11-21-2011      Assembly Flags:   0x00
Version:         REV 02
ID: Front Panel Display          FRU Model Number: CRAFT-MX480-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 01 ff 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 31 37 32 35 34 00 00
Address 0x20: 53 2f 4e 20 5a 53 38 30 30 35 00 00 00 15 0b 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
Address 0x50: 52 41 46 54 2d 4d 58 34 38 30 2d 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PEM 0              Rev 05    740-029970    QCS1024U089      PS 1.4-2.52kW; 90-264V
AC in
Jedec Code:      0x7fb0          EEPROM Version:    0x01
P/N:             740-029970      S/N:             QCS1024U089
Assembly ID:     0x0432          Assembly Version: 01.05
Date:           06-17-2010      Assembly Flags:   0x00
Version:         Rev 05
ID: PS 1.4-2.52kW; 90-264V AC in FRU Model Number: PWR-MX480-2520-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 32 01 05 52 65 76 20 30 35 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 32 39 39 37 30 00 00
Address 0x20: 51 43 53 31 30 32 34 55 30 38 39 00 00 11 06 07

```

```

Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
Address 0x50: 57 52 2d 4d 58 34 38 30 2d 32 35 32 30 2d 41 43
Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 1          Rev 10    740-029970    QCS1314U0FJ    PS 1.4-2.52kW; 90-264V
AC in
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           740-029970      S/N:              QCS1314U0FJ
Assembly ID:   0x0432          Assembly Version:  01.10
Date:          04-04-2013      Assembly Flags:    0x00
Version:       Rev 10
ID: PS 1.4-2.52kW; 90-264V AC in FRU Model Number: PWR-MX480-2520-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 32 01 0a 52 65 76 20 31 30 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 32 39 39 37 30 00 00
Address 0x20: 51 43 53 31 33 31 34 55 30 46 4a 00 00 04 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
Address 0x50: 57 52 2d 4d 58 34 38 30 2d 32 35 32 30 2d 41 43
Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 2          Rev 07    740-029970    QCS1121U076    PS 1.4-2.52kW; 90-264V
AC in
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           740-029970      S/N:              QCS1121U076
Assembly ID:   0x0432          Assembly Version:  01.07
Date:          05-23-2011      Assembly Flags:    0x00
Version:       Rev 07
ID: PS 1.4-2.52kW; 90-264V AC in FRU Model Number: PWR-MX480-2520-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 32 01 07 52 65 76 20 30 37 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 32 39 39 37 30 00 00
Address 0x20: 51 43 53 31 31 32 31 55 30 37 36 00 00 17 05 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
Address 0x50: 57 52 2d 4d 58 34 38 30 2d 32 35 32 30 2d 41 43
Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0 REV 05    740-031116    9009092471    RE-S-1800x4
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-031116      S/N:              9009092471
Assembly ID:   0x09c0          Assembly Version:  01.05
Date:          11-01-2011      Assembly Flags:    0x00
Version:       REV 05          CLEI Code:         COUCALDBAA
ID: RE-S-1800x4          FRU Model Number:  RE-S-1800X4-16G-S
Board Information Record:
Address 0x00: 54 32 30 32 37 43 41 2d 34 32 46 42 23 23 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00
Address 0x20: 39 30 30 39 30 39 32 34 37 31 00 00 00 01 0b 07
Address 0x30: db ff ff ff 54 32 30 32 37 43 41 2d 34 32 46 42
Address 0x40: 23 23 23 00 01 43 4f 55 43 41 4c 44 42 41 41 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff

```

```

Address 0x70: ff ff ff 4b ff ff ff ff ff ff ff ff ff ff
ad0 3896 MB VRFCF14096DIHK1 VM4096MB 6862 Compact Flash
ad1 30533 MB UGB94ARF32H0S3-KC UNIGEN-478612-001127 Disk 1
usb0 (addr 1) EHCI root hub 0 Intel uhub0
usb0 (addr 2) product 0x0020 32 vendor 0x8087 uhub1
DIMM 0 SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 1 SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 2 SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 3 SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
Routing Engine 1 REV 05 740-031116 9009097958 RE-S-1800x4
Jedec Code: 0x7fb0 EEPROM Version: 0x02
P/N: 740-031116 S/N: 9009097958
Assembly ID: 0x09c0 Assembly Version: 01.05
Date: 02-06-2012 Assembly Flags: 0x00
Version: REV 05 CLEI Code: COUCALDBAA
ID: RE-S-1800x4 FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
Address 0x00: 54 32 30 32 37 43 41 2d 34 32 46 42 23 23 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 36 00 00
Address 0x20: 39 30 30 39 30 39 37 39 35 38 00 00 06 02 07
Address 0x30: dc ff ff ff 54 32 30 32 37 43 41 2d 34 32 46 42
Address 0x40: 23 23 23 00 01 43 4f 55 43 41 4c 44 42 41 41 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 4b ff ff ff ff ff ff ff ff ff ff ff
ad0 3896 MB VRFCF14096DIHK1 VM4096MB 6145 Compact Flash
ad1 30533 MB UGB94ARF32H0S3-KC UNIGEN-499551-000273 Disk 1
...

```

### show chassis hardware (MX960 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis				MX960
Midplane	REV 01	710-013698	AA6082	MX960 Midplane
PIM	Rev 01	740-013110	000008	Power Inlet Module
PEM 2				
PEM 3	Rev 01	740-013682	000038	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 00	740-015113	1000617944	RE-S-1300
CB 0	REV 05	710-013725	JK6947	MX960 Test SCB
FPC 4	REV 01	710-013305	JM7617	MX960 Test DPC
CPU				
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 1		BUILTIN	BUILTIN	10x 1GE
FPC 7	REV 01	710-013305	JL9634	MX960 Test DPC
CPU				
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0		NON-JNPR	MYBG65I82C	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	10x 1GE
Xcvr 1	REV 01	740-011782	P7N0368	SFP-SX
Xcvr 4	REV 01	740-011782	P8J1W27	SFP-SX
Xcvr 6	REV 01	740-011782	P8J1VSD	SFP-SX
Xcvr 9	REV 01	740-011782	P8J1W25	SFP-SX
Fan Tray 0				
Fan Tray 1				

## show chassis hardware (MX960 Router with Bidirectional Optics)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN10BA5B9AFA	MX960
Midplane	REV 03	710-013698	TR0234	MX960 Backplane
FPM Board	REV 03	710-014974	JA0878	Front Panel Display
PDM	Rev 03	740-013110	QCS11135028	Power Distribution Module
PEM 0	Rev 03	740-013682	QCS11154036	PS 1.7kW; 200-240VAC in
PEM 1	Rev 03	740-013682	QCS11154010	PS 1.7kW; 200-240VAC in
PEM 2	Rev 03	740-013682	QCS11154022	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 06	740-013063	1000691458	RE-S-2000
CB 0	REV 07	710-013385	KA2190	MX SCB
CB 1	REV 07	710-013385	KA0837	MX SCB
FPC 3	REV 02	750-018122	KB3890	DPCE 40x 1GE R
CPU				
FPC 4	REV 01	750-018122	KB3889	DPCE 40x 1GE R
CPU	REV 06	710-013713	KB3976	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 1	REV 01	740-020426	4910549	SFP-1000BASE-BX40-D
Xcvr 2	REV 01	740-020426	4910551	SFP-1000BASE-BX40-D
Xcvr 5	REV 01	740-021340	77E245N00006	SFP-1000BASE-BX10-U
Xcvr 6	REV 01	740-020425	4882821	SFP-1000BASE-BX40-U
Xcvr 8	REV 01	740-020425	4882820	SFP-1000BASE-BX40-U
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-020465	77E555N00894	SFP-1000BASE-BX10-D
Xcvr 1	REV 01	740-020465	75E467X00818	SFP-1000BASE-BX10-D
Xcvr 2	REV 01	740-020465	75E467X00573	SFP-1000BASE-BX10-D
Xcvr 3	REV 01	740-020465	4888227	SFP-1000BASE-BX10-D
Xcvr 4	REV 01	740-020465	4888241	SFP-1000BASE-BX10-D
Xcvr 5	REV 01	740-021340	77E245N00005	SFP-1000BASE-BX10-U
Xcvr 6	REV 01	740-021340	76E245X00487	SFP-1000BASE-BX10-U
Xcvr 7	REV 01	740-021341	5255889	SFP-1000BASE-BX10-U
Xcvr 8	REV 01	740-021341	5255887	SFP-1000BASE-BX10-U
Xcvr 9	REV 01	740-021340	77E245N00004	SFP-1000BASE-BX10-U
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-020424	5007582	SFP-1000BASE-BX10-D
Xcvr 1	REV 01	740-020424	4888187	SFP-1000BASE-BX10-D
Xcvr 2	REV 01	740-020424	4656500	SFP-1000BASE-BX10-D
Xcvr 5	REV 01	740-021341	5255886	SFP-1000BASE-BX10-U
Xcvr 7	REV 01	740-021340	77E245N00003	SFP-1000BASE-BX10-U
Xcvr 8	REV 01	740-021341	5255888	SFP-1000BASE-BX10-U
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-017726	74S184H30341	SFP-EX
Xcvr 1	REV 01	740-017726	4814061	SFP-EX
Xcvr 5	REV 01	740-017726	6ZS184H31108	SFP-EX
Xcvr 9	REV 01	740-021340	76E245X00486	SFP-1000BASE-BX10-U
Fan Tray 0				
Fan Tray 1	REV 03	740-014971	TP0850	Fan Tray

## show chassis hardware (MX960 Router with Enhanced MX SCB)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN1096805AFA	MX960
Midplane	REV 03	710-013698	TR0183	MX960 Backplane

Fan Extender	REV 02	710-018051	JY5227	Extended Cable Manager
FPM Board	REV 03	710-014974	JZ6876	Front Panel Display
PDM	Rev 03	740-013110	QCS11035023	Power Distribution Module
PEM 1	Rev 03	740-013682	QCS1109400L	PS 1.7kW; 200-240VAC in
PEM 2	Rev 03	740-013682	QCS11094015	PS 1.7kW; 200-240VAC in
PEM 3	Rev 03	740-013682	QCS11094012	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 06	740-013063	1000687969	RE-S-2000
Routing Engine 1	REV 06	740-013063	1000687955	RE-S-2000
CB 0	REV 11	750-031391	YZ6072	Enhanced MX SCB
CB 1	REV 11	750-031391	YZ6068	Enhanced MX SCB
CB 2	REV 11	750-031391	YZ6081	Enhanced MX SCB
FPC 0	REV 01	750-018122	KA5576	DPCE 40x 1GE R
CPU	REV 06	710-013713	KB3961	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	P9F18GF	SFP-SX
Xcvr 2	REV 01	740-011782	P9M0TL9	SFP-SX
Xcvr 7	REV 01	740-011782	P9POXXH	SFP-SX
Xcvr 9	REV 01	740-011782	P9M0TN1	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	PAJ4UHC	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	PFF2CD0	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3ZUT	SFP-SX
Xcvr 2	REV 01	740-011613	PFF2DDV	SFP-SX
Xcvr 5	REV 01	740-011613	P8E2SST	SFP-SX
Xcvr 9	REV 01	740-011782	PB8329N	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-026192	1U0201084503342	SFP-100BASE-BX10-U
Xcvr 1	REV 01	740-026193	1U1201084503313	SFP-100BASE-BX10-D
Xcvr 2	REV 01	740-011613	PAJ4Y5B	SFP-SX
Xcvr 6	REV 01	740-011782	P9M0U3M	SFP-SX
Xcvr 7	REV 01	740-011782	P9M0TLA	SFP-SX
FPC 1	REV 16	750-031089	YL0719	MPC Type 2 3D
CPU	REV 06	711-030884	YL1463	MPC PMB 2G
MIC 0	REV 07	750-028387	JR6500	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 01	740-014279	733019A00154	XFP-10G-LR
Xcvr 1	REV 02	740-014289	T09F55034	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 01	740-014279	913019B00791	XFP-10G-LR
Xcvr 1	REV 01	740-014289	98S803A90384	XFP-10G-SR
MIC 1	REV 24	750-028387	YJ3950	3D 4x 10GE XFP
PIC 2		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 02	740-014279	T10B36134	XFP-10G-LR
Xcvr 1	REV 01	740-014289	T07M86354	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	2x 10GE XFP
FPC 2	REV 08	710-014219	JY9654	DPCE 4x 10GE R
CPU	REV 06	710-013713	JZ6549	DPC PMB
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 1		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 2		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 03	740-011571	C931BK028	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
FPC 3	REV 10	750-024199	XJ6692	MX FPC Type 3
CPU	REV 03	710-022351	XF5182	DPC PMB
PIC 0	REV 17	750-009553	RJ2945	4x OC-48 SONET
Xcvr 1	REV 01	740-011785	PCP3YLL	SFP-SR
Xcvr 3	REV 01	740-011785	PDSOMRY	SFP-SR
PIC 1	REV 32	750-003700	DP2113	1x OC-192 12xMM VSR
FPC 5	REV 25	750-028467	YM8256	MPC 3D 16x 10GE

CPU	REV 10	711-029089	YL3029	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 1	REV 01	740-031980	AHNOX1Z	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
FPC 7	REV 02	750-031092	JR6658	MPC Type 1 3D Q
CPU	REV 01	711-030884	JZ9038	MPC PMB 2G
MIC 0	REV 08	750-028392	JZ8737	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011782	PBE2C6Y	SFP-SX
Xcvr 2		NON-JNPR	U8105N8	SFP-SX
Xcvr 4	REV 01	740-011613	PFM18EF	SFP-SX
Xcvr 7	REV 01	740-011613	PFF2AM8	SFP-SX
Xcvr 8	REV 01	740-011613	PFF2CT6	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011782	PB82VHH	SFP-SX
Xcvr 1	REV 01	740-011613	PFF2CSW	SFP-SX
Xcvr 9	REV 01	740-011613	PFF2BY0	SFP-SX
QXM 0	REV 04	711-028408	JR6372	MPC QXM
FPC 8	REV 05	750-024387	JW9754	MX FPC Type 2
CPU	REV 03	710-022351	KF1651	DPC PMB
PIC 0	REV 08	750-014730	DM3664	4x OC-3 1x OC-12 SFP
Xcvr 0	REV 01	740-016065	81S290N00077	SFP-SR
Xcvr 1		NON-JNPR	2191844	SFP-SR
Xcvr 2	REV 01	740-011618	PD81EE5	SFP-IR
PIC 1	REV 08	750-014637	DM3671	4x OC-12-3 SFP
Xcvr 0	REV 01	740-011785	PCK3UNK	SFP-SR
Xcvr 3	REV 01	740-011785	PDSOMPZ	SFP-SR
FPC 10	REV 04	710-013699	JY4654	DPCE 40x 1GE R
CPU	REV 05	710-013713	JS9717	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 5	REV 01	740-011782	PAR1L72	SFP-SX
Xcvr 6	REV 01	740-011782	P8N1YQ4	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011782	P8Q2AVL	SFP-SX
Xcvr 5	REV 01	740-011782	PAR1L7B	SFP-SX
Xcvr 6	REV 01	740-011782	PAR1L2J	SFP-SX
Xcvr 8	REV 01	740-011782	P8N1YMY	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Fan Tray 0	REV 03	740-014971	TP0567	Fan Tray
Fan Tray 1	REV 03	740-014971	TP0702	Fan Tray

### show chassis hardware models (MX960 Router with Enhanced MX SCB)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 03	710-013698	TR0183	CHAS-BP-MX960-S
Fan Extender	REV 02	710-018051	JY5227	ECM-MX960
FPM Board	REV 03	710-014974	JZ6876	CRAFT-MX960-S
Routing Engine 0	REV 06	740-013063	1000687969	RE-S-2000-4096-S
Routing Engine 1	REV 06	740-013063	1000687955	RE-S-2000-4096-S
CB 0	REV 11	750-031391	YZ6072	SCBE-MX-S
CB 1	REV 11	750-031391	YZ6068	SCBE-MX-S
CB 2	REV 11	750-031391	YZ6081	SCBE-MX-S
FPC 0	REV 01	750-018122	KA5576	DPCE-R-40GE-SFP
FPC 1	REV 16	750-031089	YL0719	MX-MPC2-3D

MIC 0	REV 07	750-028387	JR6500	MIC-3D-4XGE-XFP
MIC 1	REV 24	750-028387	YJ3950	MIC-3D-4XGE-XFP
FPC 2	REV 08	710-014219	JY9654	DPC-R-4XGE-XFP
FPC 3	REV 10	750-024199	XJ6692	MX-FPC3
PIC 0	REV 17	750-009553	RJ2945	PC-40C48-SON-SFP
PIC 1	REV 32	750-003700	DP2113	PC-10C192-SON-VSR
FPC 5	REV 25	750-028467	YM8256	MPC-3D-16XGE-SFPP
FPC 7	REV 02	750-031092	JR6658	MX-MPC1-3D-Q
MIC 0	REV 08	750-028392	JZ8737	MIC-3D-20GE-SFP
FPC 8	REV 05	750-024387	JW9754	MX-FPC2
PIC 0	REV 08	750-014730	DM3664	PB-40C3-10C12-SON2-SFP
PIC 1	REV 08	750-014637	DM3671	PB-40C3-40C12-SON-SFP
FPC 10	REV 04	710-013699	JY4654	DPC-R-40GE-SFP
Fan Tray 0	REV 03	740-014971	TP0567	FFANTRAY-MX960-S
Fan Tray 1	REV 03	740-014971	TP0702	FFANTRAY-MX960-S

### show chassis hardware (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN1214852AFA	MX960
Midplane	REV 01	710-030012	ACAX3674	MX960 Backplane
FPM Board	REV 03	710-014974	CAAZ9326	Front Panel Display
PDM	Rev 03	740-013110	QCS17025017	Power Distribution Module
PEM 0 in	Rev 10	740-027760	QCS1702N062	PS 4.1kW; 200-240V AC
PEM 1 in	Rev 04	740-027760	QCS1422N02C	PS 4.1kW; 200-240V AC
PEM 2 in	Rev 09	740-027760	QCS1614N01X	PS 4.1kW; 200-240V AC
Routing Engine 0	REV 08	740-031116	9009131803	RE-S-1800x4
Routing Engine 1	REV 08	740-031116	9009124913	RE-S-1800x4
CB 0	REV 18	750-031391	CABF0579	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAZ2471	Enhanced MX SCB
CB 2	REV 16	750-031391	CAAW9595	Enhanced MX SCB
FPC 0	REV 18	750-046005	CACE6574	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8908	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQAODYT	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMS7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03Z	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	ANAONAJ	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMRQ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-049775	J13K72993	CFP2-100G-LR4
FPC 1	REV 11	750-045372	CABK8154	MPCE Type 3 3D
CPU	REV 08	711-035209	CABE7370	HMPC PMB 2G
MIC 0	REV 07	750-033307	CABD5255	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-021308	AQ50319	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ5035V	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502XJ	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HHR	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQ502YA	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ502EU	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ502HR	SFP+-10G-SR

Xcvr 7	REV 01	740-021308	AQ502A6	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ43H8M	SFP+-10G-SR
MIC 1	REV 14	750-033196	CAAP1398	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC064	CFP-100G-SR10
FPC 3	REV 35	750-028467	CAAT9156	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAV4645	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HZ1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43HZC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HD2	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502HN	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HGF	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501RZ	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5029V	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ501X9	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ502ZN	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43H86	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502ZY	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502PZ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ503E6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502XN	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11F00213	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ50336	SFP+-10G-SR
FPC 4	REV 18	750-046005	CACE6568	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8900	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA095A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOM1E	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000F	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOLYC	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLYB	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-048813	XD32FE00Z	CFP2-100G-SR10
FPC 5	REV 18	750-046005	CACE6577	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8902	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOMXE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLVY	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03T	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOLW1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLW3	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000J	CFP2-100G-SR10
FPC 7	REV 09	750-037355	CAAF0937	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAD8004	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	ANAO3M3	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X000C163	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQGOMS6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMRX	SFP+-10G-SR



Xcvr 2	REV 01	740-021308	AQG0M6Y	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQG0LZM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00499	CFP-100G-SR10
FPC 8	REV 39	750-045715	CACD1903	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1815	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QC480289	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QC480274	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130190	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130197	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130180	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130199	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0415	MPC5E 24XGE OTN Mezz
FPC 9	REV 05	750-044444	CAAY9801	MPCE Type 2 3D P
CPU	REV 04	711-038484	CAAW3673	MPCE PMB 2G
MIC 0	REV 28	750-028387	CAAX1071	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T12L92342	XFP-10G-SR
Xcvr 1		NON-JNPR	T12L92303	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	CC07BK02X	XFP-10G-SR
QXM 0	REV 06	711-028408	CAAW4883	MPC QXM
QXM 1	REV 06	711-028408	CAAW4603	MPC QXM
FPC 10	REV 21.0.11	750-045715	CAAY3541	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7426	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-031980	AHK01AP	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502ZU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP41BLS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQA08YA	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQA0K26	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA06S3	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQA06AS	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQA053N	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0E97	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA0GS4	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA0JVA	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-021308	AQA057A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANA0MLS	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQA093A	SFP+-10G-SR
Xcvr 3	REV 01	740-021309	943153A00075	SFP+-10G-LR
Xcvr 4	REV 01	740-021308	AQA077B	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQA0JSC	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA0735	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ5028N	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AP40VN5	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0K0J	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA07AP	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA08YB	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 07	750-045717	CAAX3123	MPC5E 24XGE Mezz
FPC 11	REV 17	750-037355	CAAT3986	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAR3972	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP

Xcvr 0	REV 01	740-021308	AQA0DSE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501Y3	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ501XU	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ5036Y	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00247	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	ALQ1DKF	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ403YA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP40TY0	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ14G0	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00095	CFP-100G-SR10
Fan Tray 0	REV 08	740-031521	ACAF4219	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACAF4225	Enhanced Fan Tray

### show chassis hardware detail (MX960 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis				MX960
Midplane	REV 01	710-013698	AA6082	MX960 Midplane
PIM	Rev 01	740-013110	000008	Power Inlet Module
PEM 2				
PEM 3	Rev 01	740-013682	000038	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 00	740-015113	1000617944	RE-S-1300
ad0 245 MB	SanDisk	SDCFB-256	111419E1805T1141	Compact Flash
ad2 38154 MB	FUJITSU	MHT2040BH	NR0WT5925N77	Hard Disk
CB 0	REV 05	710-013725	JK6947	MX960 Test SCB
FPC 4	REV 01	710-013305	JM7617	MX960 Test DPC
CPU				
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 1		BUILTIN	BUILTIN	10x 1GE
FPC 7	REV 01	710-013305	JL9634	MX960 Test DPC
CPU				
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0		NON-JNPR	MYBG65I82C	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	10x 1GE
Xcvr 1	REV 01	740-011782	P7N0368	SFP-SX
Xcvr 4	REV 01	740-011782	P8J1W27	SFP-SX
Xcvr 6	REV 01	740-011782	P8J1VSD	SFP-SX
Xcvr 9	REV 01	740-011782	P8J1W25	SFP-SX
Fan Tray 0				
Fan Tray 1				

### show chassis hardware detail (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1214852AFA	MX960
Midplane	REV 01	710-030012	ACAX3674	MX960 Backplane
FPM Board	REV 03	710-014974	CAAZ9326	Front Panel Display
PDM	Rev 03	740-013110	QCS17025017	Power Distribution Module
PEM 0	Rev 10	740-027760	QCS1702N062	PS 4.1kW; 200-240V AC in

PEM 1	Rev 04	740-027760	QCS1422N02C	PS 4.1kW; 200-240V AC
in				
PEM 2	Rev 09	740-027760	QCS1614N01X	PS 4.1kW; 200-240V AC
in				
Routing Engine 0	REV 08	740-031116	9009131803	RE-S-1800x4
ad0 3831 MB	UGB30SFA4000T1		SFA4000T1 000016CD	Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI		11000061346	Disk 1
usb0 (addr 1)	EHCI root hub 0		Intel	uhub0
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub1
DIMM 0	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 1	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 2	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 3	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
Routing Engine 1	REV 08	740-031116	9009124913	RE-S-1800x4
ad0 3831 MB	UGB30SFA4000T1		SFA4000T1 0000106D	Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI		11000052402	Disk 1
CB 0	REV 18	750-031391	CABF0579	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAZ2471	Enhanced MX SCB
CB 2	REV 16	750-031391	CAAW9595	Enhanced MX SCB
FPC 0	REV 18	750-046005	CACE6574	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8908	RMPD PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA0DYT	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0MS7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03Z	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	ANA0NAJ	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0MRQ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-049775	J13K72993	CFP2-100G-LR4
FPC 1	REV 11	750-045372	CABK8154	MPCE Type 3 3D
CPU	REV 08	711-035209	CABE7370	HMPD PMB 2G
MIC 0	REV 07	750-033307	CABD5255	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-021308	AQ50319	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ5035V	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502XJ	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HHR	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQ502YA	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ502EU	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ502HR	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ502A6	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ43H8M	SFP+-10G-SR
MIC 1	REV 14	750-033196	CAAP1398	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC064	CFP2-100G-SR10
FPC 3	REV 35	750-028467	CAAT9156	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAV4645	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HZ1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43HZC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HD2	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502HN	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HGF	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501RZ	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5029V	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ501X9	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-021308	AQ502ZN	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43H86	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502ZY	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502PZ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ503E6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502XN	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11F00213	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ50336	SFP+-10G-SR
FPC 4	REV 18	750-046005	CACE6568	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8900	RMP C PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA095A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOM1E	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000F	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOLYC	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLYB	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-048813	XD32FE00Z	CFP2-100G-SR10
FPC 5	REV 18	750-046005	CACE6577	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8902	RMP C PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOMXE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLVY	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03T	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOLW1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLW3	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000J	CFP2-100G-SR10
FPC 7	REV 09	750-037355	CAAF0937	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAD8004	HMP C PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	ANAO MM3	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X000C163	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQGOMS6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMRX	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQGOM6Y	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQGOLZM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00499	CFP-100G-SR10
FPC 8	REV 39	750-045715	CACD1903	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1815	RMP C PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFP
Xcvr 0	REV 01	740-046565	QC480289	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QC480274	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130190	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	3X40GE QSFP
Xcvr 0	REV 01	740-046565	QD130197	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130180	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130199	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0415	MPC5E 24XGE OTN Mezz
FPC 9	REV 05	750-044444	CAAY9801	MPCE Type 2 3D P

CPU	REV 04	711-038484	CAAW3673	MPCE PMB 2G
MIC 0	REV 28	750-028387	CAAX1071	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T12L92342	XFP-10G-SR
Xcvr 1		NON-JNPR	T12L92303	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	CC07BK02X	XFP-10G-SR
QXM 0	REV 06	711-028408	CAAW4883	MPC QXM
QXM 1	REV 06	711-028408	CAAW4603	MPC QXM
FPC 10	REV 21.0.11	750-045715	CAAY3541	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7426	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-031980	AHK01AP	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502ZU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP41BLS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQA08YA	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQA0K26	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA06S3	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQA06AS	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQA053N	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0E97	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA0GS4	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA0JVA	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-021308	AQA057A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANAOMLS	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQA093A	SFP+-10G-SR
Xcvr 3	REV 01	740-021309	943153A00075	SFP+-10G-LR
Xcvr 4	REV 01	740-021308	AQA077B	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQA0JSC	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA0735	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ5028N	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AP40VN5	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0K0J	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA07AP	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA08YB	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 07	750-045717	CAAX3123	MPC5E 24XGE Mezz
FPC 11	REV 17	750-037355	CAAT3986	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAR3972	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQA0DSE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501Y3	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ501XU	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ5036Y	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00247	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	ALQ1DKF	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ403YA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP40TY0	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ14G0	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00095	CFP-100G-SR10
Fan Tray 0	REV 08	740-031521	ACAF4219	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACAF4225	Enhanced Fan Tray

# show chassis hardware extensive (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware extensive
```

## Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1214852AFA	MX960
Jedec Code:	0x7fb0		EEPROM Version:	0x02
			S/N:	JN1214852AFA
Assembly ID:	0x0512		Assembly Version:	00.00
Date:	00-00-0000		Assembly Flags:	0x00
ID:	MX960			
Board Information Record:				
Address 0x00:	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00			
I2C Hex Data:				
Address 0x00:	7f b0 02 ff 05 12 00 00 00 00 00 00 00 00 00 00			
Address 0x10:	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00			
Address 0x20:	4a 4e 31 32 31 34 38 35 32 41 46 41 00 00 00 00			
Address 0x30:	00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00			
Address 0x40:	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00			
Address 0x50:	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00			
Address 0x60:	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00			
Address 0x70:	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00			
Midplane	REV 01	710-030012	ACAX3674	MX960 Backplane
Jedec Code:	0x7fb0		EEPROM Version:	0x02
P/N:	710-030012		S/N:	ACAX3674
Assembly ID:	0x01df		Assembly Version:	01.01
Date:	01-19-2013		Assembly Flags:	0x00
Version:	REV 01		CLEI Code:	COM8T00CRB
ID:	MX960 Backplane		FRU Model Number:	CHAS-BP-MX960-S
Board Information Record:				
Address 0x00:	ad 01 08 00 54 e0 32 bc 68 00 ff ff ff ff ff ff			
I2C Hex Data:				
Address 0x00:	7f b0 02 ff 01 df 01 01 52 45 56 20 30 31 00 00			
Address 0x10:	00 00 00 00 37 31 30 2d 30 33 30 30 31 32 00 00			
Address 0x20:	53 2f 4e 20 41 43 41 58 33 36 37 34 00 13 01 07			
Address 0x30:	dd ff ff ff ad 01 08 00 54 e0 32 bc 68 00 ff ff			
Address 0x40:	ff ff ff ff 01 43 4f 4d 38 54 30 30 43 52 42 43			
Address 0x50:	48 41 53 2d 42 50 2d 4d 58 39 36 30 2d 53 00 00			
Address 0x60:	00 00 00 00 00 00 42 00 00 ff ff ff ff ff ff			
Address 0x70:	ff ff ff aa ff ff ff ff ff ff ff ff ff ff ff			
FPM Board	REV 03	710-014974	CAAZ9326	Front Panel Display
Jedec Code:	0x7fb0		EEPROM Version:	0x01
P/N:	710-014974		S/N:	CAAZ9326
Assembly ID:	0x01e6		Assembly Version:	01.03
Date:	12-31-2012		Assembly Flags:	0x00
Version:	REV 03			
ID:	Front Panel Display		FRU Model Number:	CRAFT-MX960-S
Board Information Record:				
Address 0x00:	ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff			
I2C Hex Data:				
Address 0x00:	7f b0 01 ff 01 e6 01 03 52 45 56 20 30 33 00 00			
Address 0x10:	00 00 00 00 37 31 30 2d 30 31 34 39 37 34 00 00			
Address 0x20:	53 2f 4e 20 43 41 41 5a 39 33 32 36 00 1f 0c 07			
Address 0x30:	dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff			
Address 0x40:	ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43			
Address 0x50:	52 41 46 54 2d 4d 58 39 36 30 2d 53 00 00 00 00			
Address 0x60:	00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff			
Address 0x70:	ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff			
PDM	Rev 03	740-013110	QCS17025017	Power Distribution Module
Jedec Code:	0x7fb0		EEPROM Version:	0x01

```

P/N:          740-013110      S/N:          QCS17025017
Assembly ID:  0x0416          Assembly Version: 01.03
Date:         01-10-2013      Assembly Flags:  0x00
Version:      Rev 03
ID: Power Distribution Module
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 16 01 03 52 65 76 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 31 33 31 31 30 00 00
  Address 0x20: 51 43 53 31 37 30 32 35 30 31 37 00 00 0a 01 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 0          Rev 10    740-027760    QCS1702N062    PS 4.1kW; 200-240V AC
in
Jedec Code:    0x7fb0      EEPROM Version:  0x01
P/N:          740-027760    S/N:          QCS1702N062
Assembly ID:   0x0430      Assembly Version: 01.10
Date:         01-15-2013   Assembly Flags:  0x00
Version:      Rev 10
ID: PS 4.1kW; 200-240V AC in  FRU Model Number: PWR-MX960-4100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 30 01 0a 52 65 76 20 31 30 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 32 37 37 36 30 00 00
  Address 0x20: 51 43 53 31 37 30 32 4e 30 36 32 00 00 0f 01 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
  Address 0x50: 57 52 2d 4d 58 39 36 30 2d 34 31 30 30 2d 41 43
  Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 1          Rev 04    740-027760    QCS1422N02C    PS 4.1kW; 200-240V AC
in
Jedec Code:    0x7fb0      EEPROM Version:  0x01
P/N:          740-027760    S/N:          QCS1422N02C
Assembly ID:   0x0430      Assembly Version: 01.04
Date:         06-04-2010   Assembly Flags:  0x00
Version:      Rev 04
ID: PS 4.1kW; 200-240V AC in  FRU Model Number: PWR-MX960-4100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 30 01 04 52 65 76 20 30 34 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 32 37 37 36 30 00 00
  Address 0x20: 51 43 53 31 34 32 32 4e 30 32 43 00 00 04 06 07
  Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
  Address 0x50: 57 52 2d 4d 58 39 36 30 2d 34 31 30 30 2d 41 43
  Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 2          Rev 09    740-027760    QCS1614N01X    PS 4.1kW; 200-240V AC
in
Jedec Code:    0x7fb0      EEPROM Version:  0x01
P/N:          740-027760    S/N:          QCS1614N01X
Assembly ID:   0x0430      Assembly Version: 01.09
Date:         04-07-2012   Assembly Flags:  0x00

```

```

Version:          Rev 09
ID: PS 4.1kW; 200-240V AC in    FRU Model Number: PWR-MX960-4100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 30 01 09 52 65 76 20 30 39 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 32 37 37 36 30 00 00
  Address 0x20: 51 43 53 31 36 31 34 4e 30 31 58 00 00 07 04 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
  Address 0x50: 57 52 2d 4d 58 39 36 30 2d 34 31 30 30 2d 41 43
  Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0 REV 08    740-031116    9009131803    RE-S-1800x4
Jedec Code: 0x7fb0        EEPROM Version: 0x02
P/N:          740-031116    S/N:          9009131803
Assembly ID: 0x09c0        Assembly Version: 01.08
Date:         03-04-2013    Assembly Flags: 0x00
Version:      REV 08        CLEI Code:    COUCASKBAA
ID: RE-S-1800x4            FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
  Address 0x00: 54 32 30 32 37 44 42 2d 34 34 47 42 23 42 23 00
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 09 c0 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00
  Address 0x20: 39 30 30 39 31 33 31 38 30 33 00 00 00 04 03 07
  Address 0x30: dd ff ff ff 54 32 30 32 37 44 42 2d 34 34 47 42
  Address 0x40: 23 42 23 00 01 43 4f 55 43 41 53 4b 42 41 41 52
  Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 59 ff ff ff ff ff ff ff ff ff ff ff ff
ad0    3831 MB    UGB30SFA4000T1    SFA4000T1 000016CD Compact Flash
ad1    30533 MB   UGB94BPH32H0S1-KCI 11000061346    Disk 1
usb0 (addr 1) EHCI root hub 0    Intel    uhub0
usb0 (addr 2) product 0x0020 32    vendor 0x8087    uhub1
DIMM 0    VL31B5263F-F8SD DIE REV-0 PCB REV-0    MFR ID-ce80
DIMM 1    VL31B5263F-F8SD DIE REV-0 PCB REV-0    MFR ID-ce80
DIMM 2    VL31B5263F-F8SD DIE REV-0 PCB REV-0    MFR ID-ce80
DIMM 3    VL31B5263F-F8SD DIE REV-0 PCB REV-0    MFR ID-ce80
Routing Engine 1 REV 08    740-031116    9009124913    RE-S-1800x4
Jedec Code: 0x7fb0        EEPROM Version: 0x02
P/N:          740-031116    S/N:          9009124913
Assembly ID: 0x09c0        Assembly Version: 01.08
Date:         01-09-2013    Assembly Flags: 0x00
Version:      REV 08        CLEI Code:    COUCASKBAA
ID: RE-S-1800x4            FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
  Address 0x00: 54 32 30 32 37 44 42 2d 34 34 47 42 23 42 23 00
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 09 c0 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00
  Address 0x20: 39 30 30 39 31 32 34 39 31 33 00 00 00 09 01 07
  Address 0x30: dd ff ff ff 54 32 30 32 37 44 42 2d 34 34 47 42
  Address 0x40: 23 42 23 00 01 43 4f 55 43 41 53 4b 42 41 41 52
  Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 59 ff ff ff ff ff ff ff ff ff ff ff ff
ad0    3831 MB    UGB30SFA4000T1    SFA4000T1 0000106D Compact Flash
ad1    30533 MB   UGB94BPH32H0S1-KCI 11000052402    Disk 1
CB 0    REV 18    750-031391    CABF0579    Enhanced MX SCB

```



```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-031391        S/N: CABF0579
Assembly ID: 0x09b0     Assembly Version: 01.18
Date: 04-15-2013       Assembly Flags: 0x00
Version: REV 18         CLEI Code: COUCASRBAA
ID: Enhanced MX SCB    FRU Model Number: SCBE-MX-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 b0 01 12 52 45 56 20 31 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 31 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 42 46 30 35 37 39 00 0f 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 43 41 53 52 42 41 41 53
Address 0x50: 43 42 45 2d 4d 58 2d 53 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 43 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 7d ff ff ff ff ff ff ff ff ff ff ff ff

CB 1      REV 16      750-031391      CAAZ2471      Enhanced MX SCB
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-031391        S/N: CAAZ2471
Assembly ID: 0x09b0     Assembly Version: 01.16
Date: 03-09-2013       Assembly Flags: 0x00
Version: REV 16         CLEI Code: COUCARCBAB
ID: Enhanced MX SCB    FRU Model Number: SCBE-MX-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 b0 01 10 52 45 56 20 31 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 31 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 41 5a 32 34 37 31 00 09 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 43 41 52 43 42 41 42 53
Address 0x50: 43 42 45 2d 4d 58 2d 53 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6d ff ff ff ff ff ff ff ff ff ff ff ff

CB 2      REV 16      750-031391      CAAW9595      Enhanced MX SCB
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-031391        S/N: CAAW9595
Assembly ID: 0x09b0     Assembly Version: 01.16
Date: 02-01-2013       Assembly Flags: 0x00
Version: REV 16         CLEI Code: COUCARCBAB
ID: Enhanced MX SCB    FRU Model Number: SCBE-MX-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 b0 01 10 52 45 56 20 31 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 31 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 41 57 39 35 39 35 00 01 02 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 43 41 52 43 42 41 42 53
Address 0x50: 43 42 45 2d 4d 58 2d 53 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6d ff ff ff ff ff ff ff ff ff ff ff ff

FPC 0      REV 18      750-046005      CACE6574      MPC5E 3D Q 2CGE+4XGE
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-046005        S/N: CACE6574
Assembly ID: 0x0b8c     Assembly Version: 01.18
Date: 11-20-2013       Assembly Flags: 0x00
Version: REV 18         CLEI Code: PROTOXCLEI
ID: MPC5E 3D Q 2CGE+4XGE FRU Model Number: PROTO-ASSEMBLY

```

```

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 8c 01 12 52 45 56 20 31 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 36 30 30 35 00 00
Address 0x20: 53 2f 4e 20 43 41 43 45 36 35 37 34 00 14 0b 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 09   711-045719   CACG8908          RMPC PMB
Jedec Code:  0x7fb0          EEPROM Version:  0x02
P/N:         711-045719      S/N:          CACG8908
Assembly ID: 0x0b85          Assembly Version: 01.09
Date:        11-13-2013      Assembly Flags: 0x00
Version:     REV 09
ID: RMPC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 85 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 35 37 31 39 00 00
Address 0x20: 53 2f 4e 20 43 41 43 47 38 39 30 38 00 0d 0b 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          2X10GE SFPP OTN
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN          S/N:          BUILTIN
Assembly ID: 0x0a90          Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 2X10GE SFPP OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 90 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 ae dc 00 00 00 00 0a 6e 00 00
Xcvr 0          REV 01   740-021308   AQA0DYT          SFP+-10G-SR
  Xcvr 1          REV 01   740-021308   AQG0MS7          SFP+-10G-SR
PIC 1          BUILTIN          BUILTIN          1X100GE CFP2 OTN
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN          S/N:          BUILTIN
Assembly ID: 0x0a6e          Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 1X100GE CFP2 OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 6e 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00

```

```

Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 03 f3 8c 31 5c e7 80 00 00 00 02
Xcvr 0      REV 01  740-046563  XD16FC03Z      CFP2-100G-SR10
PIC 2      BUILTIN  BUILTIN      2X10GE SFPP OTN
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:      BUILTIN      S/N:      BUILTIN
Assembly ID: 0x0a90      Assembly Version: 00.00
Date:      00-00-0000      Assembly Flags: 0x00
ID: 2X10GE SFPP OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 90 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 03 f5 6c 31 5c db 40 00 00 00 02
Xcvr 0      REV 01  740-021308  ANAONAJ      SFP+-10G-SR
Xcvr 1      REV 01  740-021308  AQGOMRQ      SFP+-10G-SR
PIC 3      BUILTIN  BUILTIN      1X100GE CFP2 OTN
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:      BUILTIN      S/N:      BUILTIN
Assembly ID: 0x0a6e      Assembly Version: 00.00
Date:      00-00-0000      Assembly Flags: 0x00
ID: 1X100GE CFP2 OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 6e 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 03 ed ec 31 5c e2 e8 00 00 00 02
Xcvr 0      REV 01  740-049775  J13K72993      CFP2-100G-LR4
FPC 1      REV 11  750-045372  CABK8154      MPCE Type 3 3D
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      750-045372      S/N:      CABK8154
Assembly ID: 0x09db      Assembly Version: 04.11
Date:      05-18-2013      Assembly Flags: 0x00
Version:      REV 11      CLEI Code:      COUIBBNBAA
ID: MPCE Type 3 3D      FRU Model Number: MX-MPC3E-3D
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 db 04 0b 52 45 56 20 31 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 35 33 37 32 00 00
Address 0x20: 53 2f 4e 20 43 41 42 4b 38 31 35 34 00 12 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 42 4e 42 41 41 4d
Address 0x50: 58 2d 4d 50 43 33 45 2d 33 44 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 44 00 00 ff ff ff ff ff ff ff

```

```

Address 0x70: ff ff ff cf ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 08   711-035209   CABE7370   HMPC PMB 2G
Jedec Code:  0x7fb0   EEPROM Version: 0x01
P/N:         711-035209   S/N:         CABE7370
Assembly ID: 0x0b04   Assembly Version: 01.08
Date:        05-08-2013   Assembly Flags: 0x00
Version:     REV 08
ID: HMPC PMB 2G
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 04 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 35 32 30 39 00 00
Address 0x20: 53 2f 4e 20 43 41 42 45 37 33 37 30 00 08 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
MIC 0        REV 07   750-033307   CABD5255   10X10GE SFPP
Jedec Code:  0x7fb0   EEPROM Version: 0x02
P/N:         750-033307   S/N:         CABD5255
Assembly ID: 0x0a2a   Assembly Version: 02.07
Date:        04-25-2013   Assembly Flags: 0x00
Version:     REV 07   CLEI Code:   COUIBBJBAA
ID: 10X10GE SFPP   FRU Model Number: MIC3-3D-10XGE-SFPP
Board Information Record:
Address 0x00: 34 01 03 03 05 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0a 2a 02 07 52 45 56 20 30 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 33 33 30 37 00 00
Address 0x20: 53 2f 4e 20 43 41 42 44 35 32 35 35 00 19 04 07
Address 0x30: dd ff ff ff 34 01 03 03 05 ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 42 4a 42 41 41 4d
Address 0x50: 49 43 33 2d 33 44 2d 31 30 58 47 45 2d 53 46 50
Address 0x60: 50 00 00 00 00 00 41 00 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 82 c0 03 f0 bc 57 79 83 80 00 00 00 02
PIC 0        BUILTIN   BUILTIN   10X10GE SFPP
Xcvr 0      REV 01   740-021308   AQ50319   SFP+-10G-SR
Xcvr 1      REV 01   740-021308   AQ5035V   SFP+-10G-SR
Xcvr 2      REV 01   740-021308   AQ502XJ   SFP+-10G-SR
Xcvr 3      REV 01   740-021308   AQ43HHR   SFP+-10G-SR
Xcvr 4      REV 01   740-021308   AQ502YA   SFP+-10G-SR
Xcvr 5      REV 01   740-021308   AQ502EU   SFP+-10G-SR
Xcvr 6      REV 01   740-021308   AQ502HR   SFP+-10G-SR
Xcvr 7      REV 01   740-021308   AQ502A6   SFP+-10G-SR
Xcvr 8      REV 01   740-021308   AQ43H8M   SFP+-10G-SR
MIC 1        REV 14   750-033196   CAAP1398   1X100GE CXP
Jedec Code:  0x7fb0   EEPROM Version: 0x02
P/N:         750-033196   S/N:         CAAP1398
Assembly ID: 0x0a29   Assembly Version: 03.14
Date:        10-27-2012   Assembly Flags: 0x00
Version:     REV 14   CLEI Code:   COUIBBKBAA
ID: 1X100GE CXP   FRU Model Number: MIC3-3D-1X100GE-CXP
Board Information Record:
Address 0x00: 34 01 07 07 08 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0a 29 03 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 33 31 39 36 00 00
Address 0x20: 53 2f 4e 20 43 41 41 50 31 33 39 38 00 1b 0a 07

```

```

Address 0x30: dc ff ff ff 34 01 07 07 08 ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 42 4b 42 41 41 4d
Address 0x50: 49 43 33 2d 33 44 2d 31 58 31 30 30 47 45 2d 43
Address 0x60: 58 50 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 96 c0 03 ef cc 57 79 85 08 00 00 00 02
  PIC 2          BUILTIN          BUILTIN          1X100GE CXP
  Xcvr 0      REV 01      740-046563      XD16FC064      CFP2-100G-SR10
FPC 3          REV 35      750-028467      CAAT9156      MPC 3D 16x 10GE
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           750-028467      S/N:        CAAT9156
Assembly ID:   0x0997          Assembly Version: 01.35
Date:          12-17-2012      Assembly Flags: 0x00
Version:       REV 35
ID: MPC 3D 16x 10GE          FRU Model Number: MPC-3D-16XGE-SFPP
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 09 97 01 23 52 45 56 20 33 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 32 38 34 36 37 00 00
Address 0x20: 53 2f 4e 20 43 41 41 54 39 31 35 36 00 11 0c 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00 4d
Address 0x50: 50 43 2d 33 44 2d 31 36 58 47 45 2d 53 46 50 50
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 11      711-029089      CAAV4645      AMPC PMB
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-029089      S/N:        CAAV4645
Assembly ID:   0x0998          Assembly Version: 01.11
Date:          12-13-2012      Assembly Flags: 0x00
Version:       REV 11
ID: AMPC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 09 98 01 0b 52 45 56 20 31 31 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 32 39 30 38 39 00 00
Address 0x20: 53 2f 4e 20 43 41 41 56 34 36 34 35 00 0d 0c 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
  PIC 0          BUILTIN          BUILTIN          4x 10GE(LAN) SFP+
Jedec Code:    0x0000          EEPROM Version:    0x00
P/N:           BUILTIN          S/N:        BUILTIN
Assembly ID:   0x02fe          Assembly Version: 00.00
Date:          00-00-0000      Assembly Flags: 0x00
ID: 4x 10GE(LAN) SFP+
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 02 fe 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 6b 94 00 00 00 00 02 fe 00 00

```

```

Xcvr 0      REV 01  740-021308  AQ43HZ1      SFP+-10G-SR
Xcvr 1      REV 01  740-021308  AQ43HZC      SFP+-10G-SR
Xcvr 2      REV 01  740-021308  AQ43HD2      SFP+-10G-SR
Xcvr 3      REV 01  740-021308  AQ502HN      SFP+-10G-SR
PIC 1              BUILTIN      BUILTIN      4x 10GE(LAN) SFP+
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN      S/N:         BUILTIN
Assembly ID: 0x02fe      Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 4x 10GE(LAN) SFP+
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 02 fe 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 ac 0c 00 00 00 00 02 fe 00 00
Xcvr 0      REV 01  740-021308  AQ43HGF      SFP+-10G-SR
Xcvr 1      REV 01  740-021308  AQ501RZ      SFP+-10G-SR
Xcvr 2      REV 01  740-021308  AQ5029V      SFP+-10G-SR
Xcvr 3      REV 01  740-021308  AQ501X9      SFP+-10G-SR
PIC 2              BUILTIN      BUILTIN      4x 10GE(LAN) SFP+
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN      S/N:         BUILTIN
Assembly ID: 0x02fe      Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
.....

```

### show chassis hardware models (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware models
```

```

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 01  710-030012  ACAX3674      CHAS-BP-MX960-S
FPM Board     REV 03  710-014974  CAAZ9326      CRAFT-MX960-S
PEM 0         Rev 10  740-027760  QCS1702N062   PWR-MX960-4100-AC-S
PEM 1         Rev 04  740-027760  QCS1422N02C   PWR-MX960-4100-AC-S
PEM 2         Rev 09  740-027760  QCS1614N01X   PWR-MX960-4100-AC-S
Routing Engine 0 REV 08  740-031116  9009131803    RE-S-1800X4-16G-S
Routing Engine 1 REV 08  740-031116  9009124913    RE-S-1800X4-16G-S
CB 0          REV 18  750-031391  CABF0579      SCBE-MX-S
CB 1          REV 16  750-031391  CAAZ2471      SCBE-MX-S
CB 2          REV 16  750-031391  CAAW9595      SCBE-MX-S
FPC 0         REV 18  750-046005  CACE6574      PROTO-ASSEMBLY
FPC 1         REV 11  750-045372  CABK8154      MX-MPC3E-3D
  MIC 0       REV 07  750-033307  CABD5255      MIC3-3D-10XGE-SFPP
  MIC 1       REV 14  750-033196  CAAP1398      MIC3-3D-1X100GE-CXP
FPC 3         REV 35  750-028467  CAAT9156      MPC-3D-16XGE-SFPP
FPC 4         REV 18  750-046005  CACE6568      PROTO-ASSEMBLY
FPC 5         REV 18  750-046005  CACE6577      PROTO-ASSEMBLY
FPC 7         REV 09  750-037355  CAAF0937      MPC4E-2CGE-8XGE
FPC 8         REV 39  750-045715  CACD1903      PROTO-ASSEMBLY
FPC 9         REV 05  750-044444  CAAY9801      MX-MPC2E-3D-P
  MIC 0       REV 28  750-028387  CAAX1071      MIC-3D-4XGE-XFP
FPC 10        REV 21.0.11 750-045715  CAAY3541      PROTO-ASSEMBLY

```

FPC 11	REV 17	750-037355	CAAT3986	MPC4E-3D-2CGE-8XGE
Fan Tray 0	REV 08	740-031521	ACAF4219	FFANTRAY-MX960-HC-S
Fan Tray 1	REV 08	740-031521	ACAF4225	FFANTRAY-MX960-HC-S

### show chassis hardware clei-models (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-030012	COM8T00CRB	CHAS-BP-MX960-S
FPM Board	REV 03	710-014974		CRAFT-MX960-S
PEM 0	Rev 10	740-027760		PWR-MX960-4100-AC-S
PEM 1	Rev 04	740-027760		PWR-MX960-4100-AC-S
PEM 2	Rev 09	740-027760		PWR-MX960-4100-AC-S
Routing Engine 0	REV 08	740-031116	COUCASKBAA	RE-S-1800X4-16G-S
Routing Engine 1	REV 08	740-031116	COUCASKBAA	RE-S-1800X4-16G-S
CB 0	REV 18	750-031391	COUCASRBAA	SCBE-MX-S
CB 1	REV 16	750-031391	COUCARCBAB	SCBE-MX-S
CB 2	REV 16	750-031391	COUCARCBAB	SCBE-MX-S
FPC 0	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 1	REV 11	750-045372	COUIBBNBAA	MX-MPC3E-3D
MIC 0	REV 07	750-033307	COUIBBJBAA	MIC3-3D-10XGE-SFPP
MIC 1	REV 14	750-033196	COUIBBKBAA	MIC3-3D-1X100GE-CXP
FPC 3	REV 35	750-028467		MPC-3D-16XGE-SFPP
FPC 4	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 5	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 7	REV 09	750-037355	PROTOXCLEI	MPC4E-2CGE-8XGE
FPC 8	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 9	REV 05	750-044444	COUIBBGBAA	MX-MPC2E-3D-P
MIC 0	REV 28	750-028387	COUIA16BAA	MIC-3D-4XGE-XFP
FPC 10	REV 21.0.11	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 11	REV 17	750-037355	IPU3A4DHAA	MPC4E-3D-2CGE-8XGE
Fan Tray 0	REV 08	740-031521		FFANTRAY-MX960-HC-S
Fan Tray 1	REV 08	740-031521		FFANTRAY-MX960-HC-S

### show chassis hardware (MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN123F6D9AFA	MX960
Midplane	REV 04	750-047849	ACRC8764	Enhanced MX960 Backplane
FPM Board	REV 03	710-014974	CACS4395	Front Panel Display
PDM	Rev 03	740-013110	QCS1809500Z	Power Distribution Module
PEM 0	Rev 08	740-029344	QCS1817V0LK	DC 4.1kW Power Entry
Module				
PEM 1	Rev 08	740-029344	QCS1814V01F	DC 4.1kW Power Entry
Module				
PEM 2	Rev 08	740-029344	QCS1810V1EW	DC 4.1kW Power Entry
Module				
PEM 3	Rev 08	740-029344	QCS1810V1K5	DC 4.1kW Power Entry
Module				
Routing Engine 0	REV 11	740-031116	9013103483	RE-S-1800x4
Routing Engine 1	REV 10	740-031116	9009198513	RE-S-1800x4
CB 0	REV 23	750-031391	CADW3218	Enhanced MX SCB
CB 1	REV 14	750-031391	ABBK5220	Enhanced MX SCB
FPC 1	REV 14	750-045372	CADK0464	MPCE Type 3 3D

CPU	REV 10	711-035209	CADM9839	HMPC PMB 2G
MIC 0	REV 19	750-033199	CAAE5870	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	UTHOH0W	CFP-100G-LR4
FPC 2	REV 14	750-045372	CADN3262	MPCE Type 3 3D
CPU	REV 10	711-035209	CADN8129	HMPC PMB 2G
FPC 3	REV 14	750-045372	CADH0146	MPCE Type 3 3D
CPU	REV 10	711-035209	CADT2458	HMPC PMB 2G
MIC 0	REV 03	750-057666	CADP1386	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	SMD5136.1	OTN-100G-LH
FPC 4	REV 18	750-045372	CAEV5668	MPCE Type 3 3D
CPU	REV 10	711-035209	CAET7827	HMPC PMB 2G
FPC 7	REV 14	750-045372	CADJ1947	MPCE Type 3 3D
CPU	REV 10	711-035209	CADJ1561	HMPC PMB 2G
MIC 0	REV 05	750-057666	CAEB5763	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	1DJBZ052002	OTN-100G-LH
FPC 8	REV 14	750-045372	CADK0485	MPCE Type 3 3D
CPU	REV 10	711-035209	CADM9828	HMPC PMB 2G
MIC 0	REV 03	750-057666	CADP1390	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
FPC 9	REV 14	750-045372	CADJ1936	MPCE Type 3 3D
CPU	REV 10	711-035209	CADJ1566	HMPC PMB 2G
MIC 0	REV 14	750-057666	CAFF7544	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	1DJBZ05100K	OTN-100G-LH
FPC 10	REV 14	750-054901	CADJ3846	MPC3E NG HQoS
CPU	REV 11	711-045719	CADN5471	RMPC PMB
MIC 0	REV 05	750-057666	CAEB5760	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	SMD5091.1	CFP-Loopback
Fan Tray 0	REV 08	740-031521	ACDB4083	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACDB3995	Enhanced Fan Tray

### show chassis hardware clei-models(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis hardware clei-models
```

#### Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	750-047849	CMMJA10BRA	CHAS-BP3-MX960-S
FPM Board	REV 03	710-014974		CRAFT-MX960-S
PEM 0	Rev 08	740-029344		PWR-MX960-4100-DC-S
PEM 1	Rev 08	740-029344		PWR-MX960-4100-DC-S
PEM 2	Rev 08	740-029344		PWR-MX960-4100-DC-S
PEM 3	Rev 08	740-029344		PWR-MX960-4100-DC-S
Routing Engine 0	REV 11	740-031116	COUCASYBAB	RE-S-1800X4-16G-S
Routing Engine 1	REV 10	740-031116	COUCASYBAA	RE-S-1800X4-16G-S
CB 0	REV 23	750-031391	COUCATXBAA	SCBE-MX-S
CB 1	REV 14	750-031391	COUCARCBA	SCBE-MX-S
FPC 1	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
MIC 0	REV 19	750-033199	COUIBA8BAA	MIC3-3D-1X100GE-CFP
FPC 2	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
FPC 3	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
MIC 0	REV 03	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
FPC 4	REV 18	750-045372	COUIBBNBAC	MX-MPC3E-3D
FPC 7	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
MIC 0	REV 05	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
FPC 8	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D



MIC 0	REV 03	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
FPC 9	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
MIC 0	REV 14	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
FPC 10	REV 14	750-054901	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 05	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
Fan Tray 0	REV 08	740-031521		FFANTRAY-MX960-HC-S
Fan Tray 1	REV 08	740-031521		FFANTRAY-MX960-HC-S

### show chassis hardware (MX10008 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			DE487	JNP10008 [MX10008]
Midplane	REV 27	750-054097	ACPD4307	Midplane 8
Routing Engine 0		BUILTIN	BUILTIN	RE X10 LT
Routing Engine 1		BUILTIN	BUILTIN	RE X10
CB 0	REV 02	750-079563	CAFF4580	Control Board
CB 1	REV 04	750-079563	CAGL8034	Control Board
...				
...				
...				
FPC 3	REV 04	750-084779	CAKR7019	JNP10K-LC2101
CPU	REV 05	750-073391	CAKJ2854	LC 2101 PMB
PIC 0		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-058734	1ACQ104300K	QSFP-100GBASE-SR4
PIC 1		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-061405	1ACQ12110AN	QSFP-100GBASE-SR4
PIC 2		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-046565	QG1105B2	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-045627	QH08036X	40GBASE eSR4
PIC 4		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-067443	XWRORY7	QSFP+-40G-SR4
Xcvr 1	REV 01	740-067443	XWRORYH	QSFP+-40G-SR4
Xcvr 2	REV 01	740-067443	XWRORYP	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XWS028S	QSFP+-40G-SR4
PIC 5		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 3	REV 01	740-058734	1ACQ113406C	QSFP-100GBASE-SR4
FPD Board	REV 07	711-054687	ACPC7142	Front Panel Display
PEM 0	REV 02	740-049388	1EDL62102N9	Power Supply AC
PEM 1	REV 02	740-049388	1EDL60300KX	Power Supply AC
PEM 2	REV 02	740-049388	1EDL60300DL	Power Supply AC
PEM 3	REV 02	740-049388	1EDL61701BT	Power Supply AC
PEM 4	REV 02	740-049388	1EDL62102P7	Power Supply AC
PEM 5	REV 02	740-049388	1EDL62102PP	Power Supply AC
FTC 0	REV 14	750-050108	ACPE4038	Fan Controller 8
FTC 1	REV 14	750-050108	ACPE4032	Fan Controller 8
Fan Tray 0	REV 09	760-054372	ACPD6799	Fan Tray 8
Fan Tray 1	REV 09	760-054372	ACNZ3584	Fan Tray 8
SFB 0	REV 24	750-050058	ACPD4587	Switch Fabric (SIB) 8
SFB 1	REV 24	750-050058	ACNZ0635	Switch Fabric (SIB) 8
SFB 2	REV 24	750-050058	ACPD4908	Switch Fabric (SIB) 8
SFB 3	REV 24	750-050058	ACNZ0617	Switch Fabric (SIB) 8
SFB 4	REV 24	750-050058	ACNZ0527	Switch Fabric (SIB) 8
SFB 5	REV 23	750-050058	ACNX6980	Switch Fabric (SIB) 8

## show chassis hardware clei-models (MX10008 Router)

user@host&gt; show chassis hardware clei-models

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 27	750-054097	CMMUM00ARA	QFX10008-CHAS
CB 0	REV 02	750-079563		
CB 1	REV 04	750-079563		
FPC 0	REV 12	750-073174	PROTOXCLEI	PROTO-ASSEMBLY
FPC 2	REV 03	750-073174	PROTOXCLEI	PROTO-ASSEMBLY
FPC 3	REV 04	750-084779	PROTOXCLEI	PROTO-ASSEMBLY
FPD Board	REV 07	711-054687		
PEM 0	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 1	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 2	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 3	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 4	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 5	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
FTC 0	REV 14	750-050108	CMUCAHZCAA	QFX10008-FAN-CTRL
FTC 1	REV 14	750-050108	CMUCAHZCAA	QFX10008-FAN-CTRL
Fan Tray 0	REV 09	760-054372	CMUCAHYCAA	QFX10008-FAN
Fan Tray 1	REV 09	760-054372	CMUCAHYCAA	QFX10008-FAN
SFB 0	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 1	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 2	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 3	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 4	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 5	REV 23	750-050058	CMUCAHOCOA	QFX10008-SF

## show chassis hardware detail (MX10008 Router)

user@host&gt; show chassis hardware detail

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			DE487	JNP10008 [MX10008]
Midplane	REV 27	750-054097	ACPD4307	Midplane 8
Routing Engine 0		BUILTIN	BUILTIN	RE X10 LT
vtbd0 17408 MB				Virtio Block Disk
vtbd1 57344 MB				Virtio Block Disk
vtbd2 12288 MB				Virtio Block Disk
ada0 128 MB QEMU			QM00002	Virtio Block Disk
usb0 (addr 0.1) XHCI root HUB 0			0x8086	uhub0
Routing Engine 1		BUILTIN	BUILTIN	RE X10
vtbd0 17408 MB				Virtio Block Disk
vtbd1 57344 MB				Virtio Block Disk
vtbd2 12288 MB				Virtio Block Disk
ada0 128 MB QEMU			QM00002	Virtio Block Disk
usb0 (addr 0.1) XHCI root HUB 0			0x8086	uhub0
CB 0	REV 02	750-079563	CAFF4580	Control Board
CB 1	REV 04	750-079563	CAGL8034	Control Board
FPC 0	REV 12	750-073174	CAJK0253	JNP10K-LC2102
CPU	REV 04	750-073391	CAKJ0761	LC 2101 PMB
PIC 0		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-054053	QF4807XH	QSFP+-4X10G-SR
Xcvr 1	REV 01	740-046565	QF121734	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XWS027R	QSFP+-40G-SR4
PIC 1		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-045627	QH080366	40GBASE eSR4

Xcvr 1	REV 01	740-054053	XYJ0A4P	QSFP+-4X10G-SR
PIC 2		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-058734	1ACQ113404E	QSFP-100GBASE-SR4
PIC 3		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-058734	1ACQ1041018	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-067443	XWS08JK	QSFP+-40G-SR4
Xcvr 2	REV 01	740-032986	QF340C63	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XWS08JL	QSFP+-40G-SR4
PIC 4		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0		NON-JNPR	37700171YY0083	QSFP-100GBASE-LR4
PIC 5		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-032986	QE201294	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QH0603VK	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD510321	QSFP+-40G-SR4
Xcvr 3	REV 01	740-054053	QF3208KP	QSFP+-4X10G-SR
FPC 2	REV 03	750-073174	CAJB6004	JNP10K-LC2102
CPU	REV 01	750-073391	CAHM7956	LC 2101 PMB
PIC 0		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-061405	1ACQ12110JK	QSFP-100GBASE-SR4
PIC 1		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-046565	XYH0P6F	QSFP+-40G-SR4
PIC 2		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-067442	XX401TT	QSFP+-40G-SR4
Xcvr 1	REV 01	740-067443	XV3002D	QSFP+-40G-SR4
Xcvr 2	REV 01	740-067442	XX401SL	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XV30A78	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-067442	XX401T2	QSFP+-40G-SR4
Xcvr 1	REV 01	740-067442	XX401SZ	QSFP+-40G-SR4
PIC 4		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-061405	1ACQ12110JS	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-061405	1ACQ12110JP	QSFP-100GBASE-SR4
Xcvr 2	REV 01	740-061405	1ACQ12110JQ	QSFP-100GBASE-SR4
Xcvr 3	REV 01	740-061405	1ACQ121109R	QSFP-100GBASE-SR4
PIC 5		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-061405	1ACQ121109P	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-061405	1ACQ12110JC	QSFP-100GBASE-SR4
FPC 3	REV 04	750-084779	CAKR7019	JNP10K-LC2101
CPU	REV 05	750-073391	CAKJ2854	LC 2101 PMB
PIC 0		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-058734	1ACQ104300K	QSFP-100GBASE-SR4
PIC 1		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-061405	1ACQ12110AN	QSFP-100GBASE-SR4
PIC 2		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-046565	QG1105B2	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-045627	QH08036X	40GBASE eSR4
PIC 4		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-067443	XWRORY7	QSFP+-40G-SR4
Xcvr 1	REV 01	740-067443	XWRORYH	QSFP+-40G-SR4
Xcvr 2	REV 01	740-067443	XWRORYP	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XWS028S	QSFP+-40G-SR4
PIC 5		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 3	REV 01	740-058734	1ACQ113406C	QSFP-100GBASE-SR4
FPD Board	REV 07	711-054687	ACPC7142	Front Panel Display
PEM 0	REV 02	740-049388	1EDL62102N9	Power Supply AC
PEM 1	REV 02	740-049388	1EDL60300KX	Power Supply AC
PEM 2	REV 02	740-049388	1EDL60300DL	Power Supply AC
PEM 3	REV 02	740-049388	1EDL61701BT	Power Supply AC
PEM 4	REV 02	740-049388	1EDL62102P7	Power Supply AC

PEM 5	REV 02	740-049388	1EDL62102PP	Power Supply AC
FTC 0	REV 14	750-050108	ACPE4038	Fan Controller 8
FTC 1	REV 14	750-050108	ACPE4032	Fan Controller 8
Fan Tray 0	REV 09	760-054372	ACPD6799	Fan Tray 8
Fan Tray 1	REV 09	760-054372	ACNZ3584	Fan Tray 8
SFB 0	REV 24	750-050058	ACPD4587	Switch Fabric (SIB) 8
SFB 1	REV 24	750-050058	ACNZ0635	Switch Fabric (SIB) 8
SFB 2	REV 24	750-050058	ACPD4908	Switch Fabric (SIB) 8
SFB 3	REV 24	750-050058	ACNZ0617	Switch Fabric (SIB) 8
SFB 4	REV 24	750-050058	ACNZ0527	Switch Fabric (SIB) 8
SFB 5	REV 23	750-050058	ACNX6980	Switch Fabric (SIB) 8

### show chassis hardware extensive(MX10008 Router)

```
user@host> show chassis hardware extensive
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			DE487	JNP10008 [MX10008]

Jedec Code:	0x7fb0	EEPROM Version:	0x02
		S/N:	DE487
Assembly ID:	0x0566	Assembly Version:	01.27
Date:	08-08-2016	Assembly Flags:	0x00
		CLEI Code:	CMMUM00ARA
ID: JNP10008		FRU Model Number:	QFX10008-CHAS

Board Information Record:

Address 0x00: ad 01 08 00 30 b6 4f e9 74 c4 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 66 01 1b 00 45 56 20 32 37 00 00  
 Address 0x10: 00 00 00 00 00 35 30 2d 30 35 34 30 39 37 00 00  
 Address 0x20: 44 45 34 38 37 00 00 00 00 00 00 00 00 08 08 07  
 Address 0x30: e0 ff ff ff ad 01 08 00 30 b6 4f e9 74 c4 ff ff  
 Address 0x40: ff ff ff ff 01 43 4d 4d 55 4d 30 30 41 52 41 51  
 Address 0x50: 46 58 31 30 30 30 38 2d 43 48 41 53 00 00 00 00  
 Address 0x60: 00 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff  
 Address 0x70: ff ff ff 63 44 45 34 38 37 00 00 00 00 00 00 00

Midplane	REV 27	750-054097	ACPD4307	Midplane 8
----------	--------	------------	----------	------------

Jedec Code:	0x7fb0	EEPROM Version:	0x02
P/N:	750-054097	S/N:	ACPD4307
Assembly ID:	0x0be3	Assembly Version:	01.27
Date:	08-08-2016	Assembly Flags:	0x00
Version:	REV 27	CLEI Code:	CMMUM00ARA
ID: Midplane 8		FRU Model Number:	QFX10008-CHAS

Board Information Record:

Address 0x00: ad 01 08 00 30 b6 4f e9 74 c4 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 0b e3 01 1b 52 45 56 20 32 37 00 00  
 Address 0x10: 00 00 00 00 37 35 30 2d 30 35 34 30 39 37 00 00  
 Address 0x20: 53 2f 4e 20 41 43 50 44 34 33 30 37 00 08 08 07  
 Address 0x30: e0 ff ff ff ad 01 08 00 30 b6 4f e9 74 c4 ff ff  
 Address 0x40: ff ff ff ff 01 43 4d 4d 55 4d 30 30 41 52 41 51  
 Address 0x50: 46 58 31 30 30 30 38 2d 43 48 41 53 00 00 00 00  
 Address 0x60: 00 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff  
 Address 0x70: ff ff ff 63 44 45 34 38 37 00 00 00 00 00 00 00

Routing Engine 0	BUILTIN	BUILTIN	RE X10 LT
vtbd0 17408 MB			Virtio Block Disk
vtbd1 57344 MB			Virtio Block Disk
vtbd2 12288 MB			Virtio Block Disk
ada0 128 MB QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1) XHCI root HUB 0		0x8086	uhub0

```

Routing Engine 1          BUILTIN          BUILTIN          RE X10
vtbd0 17408 MB
vtbd1 57344 MB
vtbd2 12288 MB
ada0 128 MB QEMU          QM00002          Virtio Block Disk
usb0 (addr 0.1) XHCI root HUB 0          0x8086          Virtio Block Disk
uhub0
CB 0          REV 02 750-079563 CAFF4580          Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x01
P/N: 750-079563          S/N: CAFF4580
Assembly ID: 0x0ca3          Assembly Version: 01.02
Date: 06-06-2016          Assembly Flags: 0x00
Version: REV 02
ID: Control Board
Board Information Record:
Address 0x00: ad 01 00 40 4c 16 fc 91 7c 85 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 fe 0c a3 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 39 35 36 33 00 00
Address 0x20: 53 2f 4e 20 43 41 46 46 34 35 38 30 00 06 06 07
Address 0x30: e0 fe ff ff ad 01 00 40 4c 16 fc 91 7c 85 ff ff
Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
CB 1          REV 04 750-079563 CAGL8034          Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x01
P/N: 750-079563          S/N: CAGL8034
Assembly ID: 0x0ca3          Assembly Version: 01.04
Date: 06-28-2018          Assembly Flags: 0x00
Version: REV 04
ID: Control Board
Board Information Record:
Address 0x00: ad 01 00 40 4c 16 fc 91 7c c5 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 fe 0c a3 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 39 35 36 33 00 00
Address 0x20: 53 2f 4e 20 43 41 47 4c 38 30 33 34 00 1c 06 07
Address 0x30: e2 fc ff ff ad 01 00 40 4c 16 fc 91 7c c5 ff ff
Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPC 0          REV 12 750-073174 CAJK0253          JNP10K-LC2102
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-073174          S/N: CAJK0253
Assembly ID: 0x0ca5          Assembly Version: 01.12
Date: 09-28-2017          Assembly Flags: 0x00
Version: REV 12          CLEI Code: PROTOXCLEI
ID: JNP10K-LC2102          FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c a5 01 0c 52 45 56 20 31 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 31 37 34 00 00
Address 0x20: 53 2f 4e 20 43 41 4a 4b 30 32 35 33 00 1c 09 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

```

```

CPU          REV 04   750-073391   CAKJ0761          LC 2101 PMB
Jedec Code:  0x7fb0          EEPROM Version:  0x02
P/N:         750-073391      S/N:         CAKJ0761
Assembly ID: 0x0cda          Assembly Version: 01.04
Date:        01-22-2018      Assembly Flags: 0x00
Version:     REV 04
ID: LC 2101 PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c da 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 4b 4a 30 37 36 31 00 16 01 07
Address 0x30: e2 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          4xQSFP28 MACSEC
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN          S/N:         BUILTIN
Assembly ID: 0x0af1          Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 00 d1 f1 00 00 00 00 0a f1 00 00
Xcvr 0        REV 01   740-054053   QF4807XH          QSFP+-4X10G-SR
Xcvr 1        REV 01   740-046565   QF121734          QSFP+-40G-SR4
Xcvr 3        REV 01   740-067443   XWS027R           QSFP+-40G-SR4
PIC 1          BUILTIN          BUILTIN          4xQSFP28 MACSEC
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN          S/N:         BUILTIN
Assembly ID: 0x0af1          Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 b1 f3 00 00 00 00 0a f1 00 00
Xcvr 0        REV 01   740-045627   QH080366          40GBASE eSR4
Xcvr 1        REV 01   740-054053   XYJ0A4P           QSFP+-4X10G-SR
PIC 2          BUILTIN          BUILTIN          4xQSFP28 MACSEC
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN          S/N:         BUILTIN

```

```

Assembly ID: 0x0af1          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 73 e8 00 00 00 00 00 00 00 00
Xcvr 0      REV 01      740-058734      1ACQ113404E      QSFP-100GBASE-SR4
PIC 3      BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN          S/N: BUILTIN
Assembly ID: 0x0af1          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 51 ea 00 00 00 00 0a f1 00 00
Xcvr 0      REV 01      740-058734      1ACQ1041018      QSFP-100GBASE-SR4
Xcvr 1      REV 01      740-067443      XWS08JK      QSFP+-40G-SR4
Xcvr 2      REV 01      740-032986      QF340C63      QSFP+-40G-SR4
Xcvr 3      REV 01      740-067443      XWS08JL      QSFP+-40G-SR4
PIC 4      BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN          S/N: BUILTIN
Assembly ID: 0x0af1          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 31 ec 00 00 00 00 0a f1 00 00
Xcvr 0      NON-JNPR      37700171YY0083      QSFP-100GBASE-LR4
PIC 5      BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN          S/N: BUILTIN
Assembly ID: 0x0af1          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC

```

```

Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 11 ee 00 00 00 00 0a f1 00 00
Xcvr 0      REV 01  740-032986  QE201294      QSFP+-40G-SR4
Xcvr 1      REV 01  740-046565  QH0603VK      QSFP+-40G-SR4
Xcvr 2      REV 01  740-046565  QD510321      QSFP+-40G-SR4
Xcvr 3      REV 01  740-054053  QF3208KP      QSFP+-4X10G-SR
FPC 2       REV 03  750-073174  CAJB6004      JNP10K-LC2102
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:        750-073174  S/N:          CAJB6004
Assembly ID: 0x0ca5     Assembly Version: 01.03
Date:       06-20-2017  Assembly Flags: 0x00
Version:    REV 03     CLEI Code:    PROTOXCLEI
ID: JNP10K-LC2102     FRU Model Number: PROTO-ASSEMBLY

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c a5 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 31 37 34 00 00
Address 0x20: 53 2f 4e 20 43 41 4a 42 36 30 30 34 00 14 06 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU      REV 01  750-073391  CAHM7956      LC 2101 PMB
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:        750-073391  S/N:          CAHM7956
Assembly ID: 0x0cda     Assembly Version: 01.01
Date:       05-08-2017  Assembly Flags: 0x00
Version:    REV 01
ID: LC 2101 PMB

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c da 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 48 4d 37 39 35 36 00 08 05 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0      BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:        BUILTIN     S/N:          BUILTIN
Assembly ID: 0x0af1     Assembly Version: 00.00
Date:       00-00-0000  Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC

Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:

```



```

Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 00 d1 f1 00 00 00 00 0a f1 00 00
Xcvr 0      REV 01      740-061405      1ACQ12110JK      QSFP-100GBASE-SR4
PIC 1      BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:      BUILTIN      S/N:      BUILTIN
Assembly ID: 0x0af1      Assembly Version: 00.00
Date:      00-00-0000      Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 b1 f3 00 00 00 00 0a f1 00 00
Xcvr 0      REV 01      740-046565      XYH0P6F      QSFP+-40G-SR4
PIC 2      BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:      BUILTIN      S/N:      BUILTIN
Assembly ID: 0x0af1      Assembly Version: 00.00
Date:      00-00-0000      Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 73 e8 00 00 00 00 00 00 00 00
Xcvr 0      REV 01      740-067442      XX401TT      QSFP+-40G-SR4
Xcvr 1      REV 01      740-067443      XV3002D      QSFP+-40G-SR4
Xcvr 2      REV 01      740-067442      XX401SL      QSFP+-40G-SR4
Xcvr 3      REV 01      740-067443      XV30A78      QSFP+-40G-SR4
PIC 3      BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:      BUILTIN      S/N:      BUILTIN
Assembly ID: 0x0af1      Assembly Version: 00.00
Date:      00-00-0000      Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00

```

```

Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 51 ea 00 00 00 00 0a f1 00 00
  Xcvr 0      REV 01  740-067442  XX401T2      QSFP+-40G-SR4
  Xcvr 1      REV 01  740-067442  XX401SZ      QSFP+-40G-SR4
PIC 4        BUILTIN  BUILTIN      4xQSFP28 MACSEC
Jedec Code:  0x0000      EEPROM Version:  0x00
P/N:         BUILTIN      S/N:         BUILTIN
Assembly ID: 0x0af1      Assembly Version: 00.00
Date:        00-00-0000   Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 31 ec 00 00 00 00 0a f1 00 00
  Xcvr 0      REV 01  740-061405  1ACQ12110JS   QSFP-100GBASE-SR4
  Xcvr 1      REV 01  740-061405  1ACQ12110JP   QSFP-100GBASE-SR4
  Xcvr 2      REV 01  740-061405  1ACQ12110JQ   QSFP-100GBASE-SR4
  Xcvr 3      REV 01  740-061405  1ACQ121109R   QSFP-100GBASE-SR4
PIC 5        BUILTIN  BUILTIN      4xQSFP28 MACSEC
Jedec Code:  0x0000      EEPROM Version:  0x00
P/N:         BUILTIN      S/N:         BUILTIN
Assembly ID: 0x0af1      Assembly Version: 00.00
Date:        00-00-0000   Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 11 ee 00 00 00 00 0a f1 00 00
  Xcvr 0      REV 01  740-061405  1ACQ121109P   QSFP-100GBASE-SR4
  Xcvr 1      REV 01  740-061405  1ACQ12110JC   QSFP-100GBASE-SR4
FPC 3        REV 04  750-084779  CAKR7019      JNP10K-LC2101
Jedec Code:  0x7fb0      EEPROM Version:  0x02
P/N:         750-084779   S/N:         CAKR7019
Assembly ID: 0x0cff      Assembly Version: 01.04
Date:        03-11-2018   Assembly Flags: 0x00
Version:     REV 04      CLEI Code:    PROTOXCLEI
ID: JNP10K-LC2101      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c ff 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 38 34 37 37 39 00 00
Address 0x20: 53 2f 4e 20 43 41 4b 52 37 30 31 39 00 0b 03 07

```

```

Address 0x30: e2 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 05    750-073391    CAKJ2854          LC 2101 PMB
Jedec Code:  0x7fb0          EEPROM Version:  0x01
P/N:         750-073391      S/N:         CAKJ2854
Assembly ID: 0x0cda          Assembly Version: 01.05
Date:        03-12-2018     Assembly Flags: 0x00
Version:     REV 05
ID: LC 2101 PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0c da 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 4b 4a 32 38 35 34 00 0c 03 07
Address 0x30: e2 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN    BUILTIN          4xQSFP28 SYNCE
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN        S/N:         BUILTIN
Assembly ID: 0x0af3          Assembly Version: 00.00
Date:        00-00-0000     Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 00 b1 f3 00 00 00 00 0a f3 00 00
Xcvr 0        REV 01    740-058734    1ACQ104300K          QSFP-100GBASE-SR4
PIC 1          BUILTIN    BUILTIN          4xQSFP28 SYNCE
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN        S/N:         BUILTIN
Assembly ID: 0x0af3          Assembly Version: 00.00
Date:        00-00-0000     Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Xcvr 0        REV 01    740-061405    1ACQ12110AN          QSFP-100GBASE-SR4
PIC 2          BUILTIN    BUILTIN          4xQSFP28 SYNCE

```

```

Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN    S/N:         BUILTIN
Assembly ID: 0x0af3     Assembly Version: 00.00
Date:        00-00-0000 Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 83 80 b1 8a b5 cf 0b 5f 08 00 73 6d
  Xcvr 0      REV 01    740-046565    QG1105B2      QSFP+-40G-SR4
  PIC 3       BUILTIN   BUILTIN       4xQSFP28 SYNCE
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN    S/N:         BUILTIN
Assembly ID: 0x0af3     Assembly Version: 00.00
Date:        00-00-0000 Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 83 80 11 94 b5 cf 0b 5f 0c 00 73 6d
  Xcvr 0      REV 01    740-045627    QH08036X      40GBASE eSR4
  PIC 4       BUILTIN   BUILTIN       4xQSFP28 SYNCE
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN    S/N:         BUILTIN
Assembly ID: 0x0af3     Assembly Version: 00.00
Date:        00-00-0000 Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 83 80 71 9d b5 cf 0b 5f 10 00 73 6d
  Xcvr 0      REV 01    740-067443    XWRORY7      QSFP+-40G-SR4
  Xcvr 1      REV 01    740-067443    XWRORYH      QSFP+-40G-SR4
  Xcvr 2      REV 01    740-067443    XWRORYP      QSFP+-40G-SR4
  Xcvr 3      REV 01    740-067443    XWS028S      QSFP+-40G-SR4
  PIC 5       BUILTIN   BUILTIN       4xQSFP28 SYNCE
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN    S/N:         BUILTIN
Assembly ID: 0x0af3     Assembly Version: 00.00

```

```

Date:          00-00-0000      Assembly Flags:    0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 83 80 d1 a6 b5 cf 0b 5f 14 00 73 6d
  Xcvr 3      REV 01    740-058734    1ACQ113406C    QSFP-100GBASE-SR4
FPD Board    REV 07    711-054687    ACPC7142      Front Panel Display
Jedec Code:  0x7fb0      EEPROM Version:    0x01
P/N:         711-054687    S/N:          ACPC7142
Assembly ID: 0x0bf2      Assembly Version: 01.07
Date:        07-22-2016    Assembly Flags: 0x00
Version:     REV 07
ID: Front Panel Display
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0b f2 01 07 52 45 56 20 30 37 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 35 34 36 38 37 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 43 37 31 34 32 00 16 07 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PEM 0        REV 02    740-049388    1EDL62102N9    Power Supply AC
Jedec Code:  0x7fb0      EEPROM Version:    0x02
P/N:         740-049388    S/N:          1EDL62102N9
Assembly ID: 0x0483      Assembly Version: 01.02
Date:        05-25-2016    Assembly Flags: 0x00
Version:     REV 02      CLEI Code:      CMUPADNBAA
ID: Power Supply AC      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
  Address 0x20: 31 45 44 4c 36 32 31 30 32 4e 39 00 00 19 05 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
  Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
PEM 1        REV 02    740-049388    1EDL60300KX    Power Supply AC
Jedec Code:  0x00b0      EEPROM Version:    0x02
P/N:         740-049388    S/N:          1EDL60300KX
Assembly ID: 0x0483      Assembly Version: 01.02
Date:        01-20-2016    Assembly Flags: 0x00
Version:     REV 02      CLEI Code:      CMUPADNBAA
ID: Power Supply AC      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:

```

```

Address 0x00: 00 b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 30 33 30 30 4b 58 00 00 14 01 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
PEM 2          REV 02  740-049388  1EDL60300DL  Power Supply AC
Jedec Code:    0x7fb0          EEPROM Version: 0x02
P/N:           740-049388      S/N:           1EDL60300DL
Assembly ID:   0x0483          Assembly Version: 01.02
Date:          01-20-2016      Assembly Flags: 0x00
Version:       REV 02          CLEI Code:      CMUPADNBAA
ID: Power Supply AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 30 33 30 30 44 4c 00 00 14 01 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
PEM 3          REV 02  740-049388  1EDL61701BT  Power Supply AC
Jedec Code:    0x7fb0          EEPROM Version: 0x02
P/N:           740-049388      S/N:           1EDL61701BT
Assembly ID:   0x0483          Assembly Version: 01.02
Date:          05-01-2016      Assembly Flags: 0x00
Version:       REV 02          CLEI Code:      CMUPADNBAA
ID: Power Supply AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 31 37 30 31 42 54 00 00 01 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
PEM 4          REV 02  740-049388  1EDL62102P7  Power Supply AC
Jedec Code:    0x7fb0          EEPROM Version: 0x02
P/N:           740-049388      S/N:           1EDL62102P7
Assembly ID:   0x0483          Assembly Version: 01.02
Date:          05-25-2016      Assembly Flags: 0x00
Version:       REV 02          CLEI Code:      CMUPADNBAA
ID: Power Supply AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 31 30 32 50 37 00 00 19 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00

```

```

Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff
PEM 5          REV 02    740-049388    1EDL62102PP    Power Supply AC
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-049388      S/N:             1EDL62102PP
Assembly ID:   0x0483          Assembly Version: 01.02
Date:          05-25-2016      Assembly Flags:   0x00
Version:       REV 02          CLEI Code:        CMUPADNBAA
ID: Power Supply AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 31 30 32 50 50 00 00 19 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff
FTC 0          REV 14    750-050108    ACPE4038      Fan Controller 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050108      S/N:             ACPE4038
Assembly ID:   0x0bee          Assembly Version: 01.14
Date:          09-27-2016      Assembly Flags:   0x00
Version:       REV 14          CLEI Code:        CMUCAHZCAA
ID: Fan Controller 8          FRU Model Number: QFX10008-FAN-CTRL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ee 01 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 31 30 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 34 30 33 38 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 5a 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 98 ff ff ff ff ff ff ff ff ff ff ff ff
FTC 1          REV 14    750-050108    ACPE4032      Fan Controller 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050108      S/N:             ACPE4032
Assembly ID:   0x0bee          Assembly Version: 01.14
Date:          09-27-2016      Assembly Flags:   0x00
Version:       REV 14          CLEI Code:        CMUCAHZCAA
ID: Fan Controller 8          FRU Model Number: QFX10008-FAN-CTRL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ee 01 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 31 30 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 34 30 33 32 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 5a 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 98 ff ff ff ff ff ff ff ff ff ff ff ff
Fan Tray 0     REV 09    760-054372    ACPD6799      Fan Tray 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           760-054372      S/N:             ACPD6799
Assembly ID:   0x0bf0          Assembly Version: 01.09

```

```

Date:          09-28-2016      Assembly Flags:  0x00
Version:       REV 09         CLEI Code:       CMUCAHYCAA
ID: Fan Tray 8                FRU Model Number: QFX10008-FAN
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b f0 01 09 52 45 56 20 30 39 00 00
  Address 0x10: 00 00 00 00 37 36 30 2d 30 35 34 33 37 32 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 44 36 37 39 39 00 1c 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 59 43 41 41 51
  Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff ff

Fan Tray 1          REV 09    760-054372    ACNZ3584          Fan Tray 8
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 760-054372        S/N: ACNZ3584
Assembly ID: 0x0bf0     Assembly Version: 01.09
Date: 08-30-2016       Assembly Flags: 0x00
Version: REV 09        CLEI Code: CMUCAHYCAA
ID: Fan Tray 8        FRU Model Number: QFX10008-FAN
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b f0 01 09 52 45 56 20 30 39 00 00
  Address 0x10: 00 00 00 00 37 36 30 2d 30 35 34 33 37 32 00 00
  Address 0x20: 53 2f 4e 20 41 43 4e 5a 33 35 38 34 00 1e 08 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 59 43 41 41 51
  Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff ff

SFB 0              REV 24    750-050058    ACPD4587          Switch Fabric (SIB) 8
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-050058        S/N: ACPD4587
Assembly ID: 0x0bec     Assembly Version: 01.24
Date: 06-19-2016       Assembly Flags: 0x00
Version: REV 24        CLEI Code: CMUCAHOCAA
ID: Switch Fabric (SIB) 8 FRU Model Number: QFX10008-SF
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 44 34 35 38 37 00 13 06 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
  Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00

SFB 1              REV 24    750-050058    ACNZ0635          Switch Fabric (SIB) 8
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-050058        S/N: ACNZ0635
Assembly ID: 0x0bec     Assembly Version: 01.24
Date: 06-06-2016       Assembly Flags: 0x00
Version: REV 24        CLEI Code: CMUCAHOCAA
ID: Switch Fabric (SIB) 8 FRU Model Number: QFX10008-SF
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:

```



```

Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 36 33 35 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SFB 2          REV 24    750-050058    ACPD4908          Switch Fabric (SIB) 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050058      S/N:              ACPD4908
Assembly ID:   0x0bec          Assembly Version: 01.24
Date:          07-12-2016      Assembly Flags:   0x00
Version:       REV 24          CLEI Code:        CMUCAH0CAA
ID: Switch Fabric (SIB) 8      FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 34 39 30 38 00 0c 07 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SFB 3          REV 24    750-050058    ACNZ0617          Switch Fabric (SIB) 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050058      S/N:              ACNZ0617
Assembly ID:   0x0bec          Assembly Version: 01.24
Date:          06-07-2016      Assembly Flags:   0x00
Version:       REV 24          CLEI Code:        CMUCAH0CAA
ID: Switch Fabric (SIB) 8      FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 36 31 37 00 07 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SFB 4          REV 24    750-050058    ACNZ0527          Switch Fabric (SIB) 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050058      S/N:              ACNZ0527
Assembly ID:   0x0bec          Assembly Version: 01.24
Date:          06-06-2016      Assembly Flags:   0x00
Version:       REV 24          CLEI Code:        CMUCAH0CAA
ID: Switch Fabric (SIB) 8      FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 35 32 37 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00

```

```

Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SFB 5          REV 23    750-050058    ACNX6980          Switch Fabric (SIB) 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050058      S/N:              ACNX6980
Assembly ID:   0x0bec          Assembly Version:  01.23
Date:          05-16-2016      Assembly Flags:    0x00
Version:       REV 23          CLEI Code:         CMUCAH0CAA
ID: Switch Fabric (SIB) 8      FRU Model Number:  QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 17 52 45 56 20 32 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 58 36 39 38 30 00 10 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff ce 00 00 00 00 00 00 00 00 00 00 00 00

```

#### show chassis hardware models(MX10008 Router)

```
user@host> show chassis hardware models
```

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 27	750-054097	ACPD4307	QFX10008-CHAS
CB 0	REV 02	750-079563	CAFF4580	
CB 1	REV 04	750-079563	CAGL8034	
FPC 0	REV 12	750-073174	CAJK0253	PROTO-ASSEMBLY
FPC 2	REV 03	750-073174	CAJB6004	PROTO-ASSEMBLY
FPC 3	REV 04	750-084779	CAKR7019	PROTO-ASSEMBLY
FPD Board	REV 07	711-054687	ACPC7142	
PEM 0	REV 02	740-049388	1EDL62102N9	QFX10000-PWR-AC
PEM 1	REV 02	740-049388	1EDL60300KX	QFX10000-PWR-AC
PEM 2	REV 02	740-049388	1EDL60300DL	QFX10000-PWR-AC
PEM 3	REV 02	740-049388	1EDL61701BT	QFX10000-PWR-AC
PEM 4	REV 02	740-049388	1EDL62102P7	QFX10000-PWR-AC
PEM 5	REV 02	740-049388	1EDL62102PP	QFX10000-PWR-AC
FTC 0	REV 14	750-050108	ACPE4038	QFX10008-FAN-CTRL
FTC 1	REV 14	750-050108	ACPE4032	QFX10008-FAN-CTRL
Fan Tray 0	REV 09	760-054372	ACPD6799	QFX10008-FAN
Fan Tray 1	REV 09	760-054372	ACNZ3584	QFX10008-FAN
SFB 0	REV 24	750-050058	ACPD4587	QFX10008-SF
SFB 1	REV 24	750-050058	ACNZ0635	QFX10008-SF
SFB 2	REV 24	750-050058	ACPD4908	QFX10008-SF
SFB 3	REV 24	750-050058	ACNZ0617	QFX10008-SF
SFB 4	REV 24	750-050058	ACNZ0527	QFX10008-SF
SFB 5	REV 23	750-050058	ACNX6980	QFX10008-SF

#### show chassis hardware (PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN123AC42AJC	PTX3000
Midplane	REV 22	750-044645	ACLP6640	Backplane
FPM	REV 07	760-044663	ACMX2146	Front Panel Display

PSM 1	REV 02	740-044980	1EDD3080169	DC 12V Power Supply
PSM 2	REV 06	740-044981	1EDK5040563	AC 12V Power Supply
PSM 3	REV 06	740-044981	1EDK5040313	AC 12V Power Supply
PSM 4	REV 04	740-044980	1EDJ3330088	DC 12V Power Supply
Routing Engine 0	REV 12	740-026942	P737A-006029	RE-DUO-2600
CB 0	REV 18	750-044656	ACMZ3179	Control Board
FPC 2	REV 06	750-057064	ACAM6098	FPC3-SFF-PTX-1X
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0	REV 17	750-059747	ACNW3510	5X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	1DJBZ040003	OTN-100G-LH
Xcvr 2	REV 01	740-062357	1DJBZ044004	OTN-100G-LH
Xcvr 3	REV 01	740-062357	1DJBZ03500P	OTN-100G-LH
Xcvr 4	REV 01	740-062357	1DJBZ03700C	OTN-100G-LH
FPC 4	REV 12	750-057064	ACAM7153	FPC3-SFF-PTX-1X
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0	REV 17	750-059747	ACNW3511	5X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-061663	47	OTN-100G-LH
Xcvr 1	REV 01	740-061663	39	OTN-100G-LH
Xcvr 2	REV 01	740-062357	1DJBZ044002	OTN-100G-LH
Xcvr 3	REV 01	740-062357	1DJBZ03700G	OTN-100G-LH
Xcvr 4	REV 01	740-062357	1DJBZ041001	OTN-100G-LH
FPC 8	REV 11	750-057064	ACAM6808	FPC3-SFF-PTX-1X
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0	REV 17	750-059747	ACNW3508	5X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-061663	194	OTN-100G-LH
Xcvr 1	REV 01	740-061663	168	OTN-100G-LH
Xcvr 2	REV 01	740-061663	52	OTN-100G-LH
Xcvr 3	REV 01	740-061663	85	OTN-100G-LH
Xcvr 4	REV 01	740-061663	218	OTN-100G-LH
SIB 0	REV 03	750-057067	ACAM8513	SIB3-SFF-PTX
SIB 1	REV 01	750-057067	ACAM5918	SIB3-SFF-PTX
SIB 2	REV 01	711-057066	ACAM4325	SIB3-SFF-PTX
SIB 3	REV 01	711-057066	ACAM4328	SIB3-SFF-PTX
SIB 4	REV 01	711-057066	ACAM4349	SIB3-SFF-PTX
SIB 5	REV 01	711-057066	ACAM4323	SIB3-SFF-PTX
SIB 6	REV 01	711-057066	ACAM4344	SIB3-SFF-PTX
SIB 7	REV 01	750-057067	ACAM4346	SIB3-SFF-PTX
SIB 8	REV 01	750-057067	ACAM5911	SIB3-SFF-PTX
Fan Tray 0	REV 13	760-044659	ACMP6395	Fan Tray (Exhaust)
Fan Tray 1	REV 13	760-044659	ACMZ6957	Fan Tray (Exhaust)

### show chassis hardware clei-models (PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC)

```
user@host> show chassis hardware clei-models
```

#### Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 22	750-044645	IPMVN10FRA	CHAS-MP-PTX3000-S
FPM	REV 07	760-044663	IPUCBE5CAA	FPD-SFF-PTX-S
PSM 1	REV 02	740-044980	PROTOPWRDC	PSM-SFF-PTX-DC-2200-S
PSM 2	REV 06	740-044981	IPUPAK0KAB	PSM-SFF-PTX-AC-S
PSM 3	REV 06	740-044981	IPUPAK0KAB	PSM-SFF-PTX-AC-S
PSM 4	REV 04	740-044980	IPUPAK1KAA	PSM-SFF-PTX-DC-S
Routing Engine 0	REV 12	740-026942		RE-DUO-C2600-16G-S
CB 0	REV 18	750-044656	IPUCBE6CAB	CB-SFF-PTX-S
FPC 2	REV 06	750-057064	PROTOXCLEI	PROTO-ASSEMBLY
PIC 0	REV 17	750-059747	IPU3BC5HAA	PTX-5-100G-WDM
FPC 4	REV 12	750-057064		
PIC 0	REV 17	750-059747	IPU3BC5HAA	PTX-5-100G-WDM
FPC 8	REV 11	750-057064		

PIC 0	REV 17	750-059747	IPU3BC5HAA	PTX-5-100G-WDM
SIB 0	REV 03	750-057067	PROTOXCLEI	PROTO-ASSEMBLY
SIB 1	REV 01	750-057067	PROTOXCLEI	PROTO-ASSEMBLY
SIB 2	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 3	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 4	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 5	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 6	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 7	REV 01	750-057067	PROTOXCLEI	PROTO-ASSEMBLY
SIB 8	REV 01	750-057067	PROTOXCLEI	PROTO-ASSEMBLY
Fan Tray 0	REV 13	760-044659	IPUCBE8CAA	FAN-SFF-PTX-S
Fan Tray 1	REV 13	760-044659	IPUCBE8CAA	FAN-SFF-PTX-S

### show chassis hardware (MX2010 Router)

```
user@host > show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11E3217AFK	MX2010
Midplane				Lower Backplane
Midplane 1	REV 01	750-044636	ABAB8506	Upper Backplane
PMP	REV 03	711-032426	ACA11388	Power Midplane
FPM Board	REV 06	711-032349	ZX8744	Front Panel Display
PSM 4	REV 0C	740-033727	VK00254	DC 52V Power Supply
Module				
PSM 5	REV 0B	740-033727	VG00015	DC 52V Power Supply
Module				
PSM 6	REV 0B	740-033727	VH00097	DC 52V Power Supply
Module				
PSM 7	REV 0C	740-033727	VJ00151	DC 52V Power Supply
Module				
PSM 8	REV 0C	740-033727	VJ00149	DC 52V Power Supply
Module				
PDM 0	REV 0B	740-038109	WA00008	DC Power Dist Module
PDM 1	REV 0B	740-038109	WA00014	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009094134	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009094141	RE-S-1800x4
CB 0	REV 08	750-040257	CAAB3491	Control Board
CB 1	REV 08	750-040257	CAAB3489	Control Board
SPMB 0	REV 02	711-041855	CAA6135	PMB Board
SPMB 1	REV 02	711-041855	CAA6137	PMB Board
SFB 0	REV 06	711-032385	ZV1828	Switch Fabric Board
SFB 1	REV 07	711-032385	ZZ2568	Switch Fabric Board
SFB 2	REV 07	711-032385	ZZ2563	Switch Fabric Board
SFB 3	REV 07	711-032385	ZZ2564	Switch Fabric Board
SFB 4	REV 07	711-032385	ZZ2580	Switch Fabric Board
SFB 5	REV 07	711-032385	ZZ2579	Switch Fabric Board
SFB 6	REV 07	711-032385	CAAB4882	Switch Fabric Board
SFB 7	REV 07	711-032385	CAAB4898	Switch Fabric Board
FPC 0	REV 33	750-028467	CAAB1919	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAB7174	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH02RE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMH038C	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH0390	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMG0SUA	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH0579	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMG0SGP	SFP+-10G-SR

Xcvr 2	REV 01	740-021308	AMH04SV	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMH04X3	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH0135	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMH02NC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH02XB	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMH02PN	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH057Y	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMG0JHE	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH02HT	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMH04V4	SFP+-10G-SR
FPC 1	REV 21	750-033205	ZG5027	MPC Type 3
CPU	REV 04	711-035209	YT4780	HMPC PMB 2G
MIC 0	REV 03	750-033307	ZV6299	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-031980	083363A00410	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	083363A00334	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	113363A00125	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	083363A00953	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AHR013D	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJ40JUR	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJ40JKL	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJ30ECK	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	19T511100864	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	19T511100868	SFP+-10G-SR
MIC 1	REV 03	750-033307	ZV6268	10X10GE SFPP
PIC 2		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-031980	AJC0JML	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ403PC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJ10N25	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJ40JF4	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJ40JSJ	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJ403V7	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJ40JN3	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJ40JSU	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	19T511100468	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	19T511101363	SFP+-10G-SR
FPC 8	REV 22	750-031089	ZT9746	MPC Type 2 3D
CPU	REV 06	711-030884	ZS1271	MPC PMB 2G
MIC 0	REV 26	750-028392	ABBS1150	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	PLG023C	SFP-SX
Xcvr 1	REV 01	740-031851	PLG09C6	SFP-SX
Xcvr 2	REV 02	740-011613	AM0950SF9L7	SFP-SX
Xcvr 3	REV 02	740-011613	AM1001SFN1H	SFP-SX
Xcvr 4	REV 02	740-011613	AM1001SFM9D	SFP-SX
Xcvr 5	REV 02	740-011613	AM1001SFLTJ	SFP-SX
Xcvr 6	REV 01	740-031851	AC1108S03L9	SFP-SX
Xcvr 7	REV 01	740-031851	AC1102S00NC	SFP-SX
Xcvr 8	REV 01	740-031851	AC1102S00MX	SFP-SX
Xcvr 9	REV 01	740-031851	AC1102S0085	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AC1102S00KU	SFP-SX
Xcvr 1	REV 01	740-031851	AC1102S00NG	SFP-SX
Xcvr 2	REV 01	740-031851	AC1102S00K3	SFP-SX
Xcvr 3	REV 01	740-031851	AC1102S008R	SFP-SX
Xcvr 4	REV 01	740-031851	AM1107SUFVJ	SFP-SX
Xcvr 5	REV 01	740-031851	AC1108S03LG	SFP-SX
MIC 1	REV 26	750-028387	ABBR9582	3D 4x 10GE XFP

PIC 2		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T10A91703	XFP-10G-SR
Xcvr 1		NON-JNPR	T09L42604	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	2x 10GE XFP
FPC 9	REV 11	750-036284	ZL3591	MPC 3D 16x 10GE EM
CPU	REV 10	711-029089	ZL0513	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101825	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101821	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101682	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ13R6	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101828	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101716	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101732	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALPOTR1	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101741	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101829	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101669	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ14E3	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101826	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101817	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101735	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ159A	SFP+-10G-SR
ADC 0	REV 05	750-043596	CAAC2073	Adapter Card
ADC 1	REV 01	750-043596	ZV4117	Adapter Card
ADC 8	REV 01	750-043596	ZV4107	Adapter Card
ADC 9	REV 02	750-043596	ZW1555	Adapter Card
Fan Tray 0	REV 2A	760-046960	ACAY0015	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0019	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0020	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0021	172mm FanTray - 6 Fans

### show chassis hardware detail (MX2010 Router)

```
user@host > show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN11E233DAFK	MX2010
Midplane	REV 26	750-044636	ABAB9357	Lower Backplane
Midplane 1	REV 01	711-044557	ABAB8643	Upper Backplane
PMP	REV 04	711-032426	ACAJ1677	Power Midplane
FPM Board	REV 08	760-044634	ABBV9726	Front Panel Display
PSM 0	REV 01	740-045050	1E02224000P	DC 52V Power Supply
Module				
PSM 1	REV 01	740-045050	1E02224000M	DC 52V Power Supply
Module				
PSM 2	REV 01	740-045050	1E022240010	DC 52V Power Supply
Module				
PSM 3	REV 01	740-045050	1E02224000G	DC 52V Power Supply
Module				
PSM 4	REV 01	740-045050	1E022240013	DC 52V Power Supply
Module				
PSM 5	REV 01	740-045050	1E022240007	DC 52V Power Supply
Module				
PSM 6	REV 01	740-045050	1E02224001C	DC 52V Power Supply
Module				

PSM 7 Module	REV 01	740-045050	1E02224001D	DC 52V Power Supply
PSM 8 Module	REV 01	740-045050	1E02224001B	DC 52V Power Supply
PDM 0	REV 01	740-045234	1E262250067	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009099704	RE-S-1800x4
ad0 3831 MB		UGB30SFA4000T1	SFA4000T1 00000651	Compact Flash
ad1 30533 MB		UGB94BPH32H0S1-KCI	11000019592	Disk 1
usb0 (addr 1)		EHCI root hub 0	Intel	uhub0
usb0 (addr 2)		product 0x0020 32	vendor 0x8087	uhub1
DIMM 0		SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80	
DIMM 1		SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80	
DIMM 2		SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80	
DIMM 3		SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80	
Routing Engine 1	REV 02	740-041821	9009099706	RE-S-1800x4
ad0 3998 MB		Virtium - TuffDrive	VCF P1T0200262860208 114	Compact Flash
ad1 30533 MB		UGB94ARF32H0S3-KC	UNIGEN-499551-000404	Disk 1
CB 0	REV 13	750-040257	CAAF8436	Control Board
CB 1	REV 13	750-040257	CAAF8434	Control Board
SPMB 0	REV 02	711-041855	ABBV3825	PMB Board
SPMB 1	REV 02	711-041855	ABBV3833	PMB Board
SFB 0	REV 05	711-044466	ABBX5682	Switch Fabric Board
SFB 1	REV 05	711-044466	ABBX5676	Switch Fabric Board
SFB 2	REV 05	711-044466	ABBX5665	Switch Fabric Board
SFB 3	REV 05	711-044466	ABBX5699	Switch Fabric Board
SFB 4	REV 05	711-044466	ABBX5603	Switch Fabric Board
SFB 5	REV 05	711-044466	ABBX5587	Switch Fabric Board
SFB 6	REV 05	711-044466	ABBX5607	Switch Fabric Board
SFB 7	REV 05	711-044466	ABBX5669	Switch Fabric Board
FPC 0	REV 09	750-037355	CAAF0924	MPC Type 4-2
CPU	REV 08	711-035209	CAAB9842	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	19T511101656	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AMA04RU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00558	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10M00202	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00328	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	AMA088W	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10L04211	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	19T511101602	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10L04151	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00332	CFP-100G-SR10
FPC 1	REV 18	750-033205	ZE0128	MPC Type 3
CPU	REV 06	711-035209	ZG5431	HMPC PMB 2G
MIC 0	REV 15	750-033199	ZP6435	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	J11E46118	CFP-100G-LR4
MIC 1	REV 15	750-033199	ZP6442	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	UMN03T4	CFP-100G-LR4
FPC 2	REV 16	750-037358	CAAL1001	MPC Type 4-1
CPU	REV 08	711-035209	CAAK7927	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	193363A00589	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00028	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00376	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00016	SFP+-10G-SR

Xcvr 4	REV 01	740-031980	193363A00499	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00039	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11E01239	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00058	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	B10M00075	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00014	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AMA0638	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00063	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AMA0629	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00053	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00344	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00046	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	AMA062M	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00080	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00580	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00064	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	093363A01494	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00020	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	123363A00047	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00072	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-021308	03DZ06A01033	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00022	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	03DZ06A01026	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00013	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	03DZ06A01028	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00079	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	03DZ06A01018	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00025	SFP+-10G-SR
FPC 3	REV 33	750-028467	CAAF5400	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAH7626	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00066	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00021	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00062	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00027	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00065	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00069	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00026	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00003	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00035	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00004	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00049	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00055	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00010	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00001	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00073	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00012	SFP+-10G-SR
FPC 4	REV 21	750-033205	ZG5028	MPC Type 3
CPU	REV 05	711-035209	YX3911	HMPC PMB 2G
MIC 0	REV 03	750-036233	ZL2036	2X40GE QSFP
PIC 0		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB220708	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB220735	QSFP+-40G-SR4
MIC 1	REV 03	750-036233	ZL2028	2X40GE QSFP



PIC 2			BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB220727	QSFP+-40G-SR4	
Xcvr 1	REV 01	740-032986	QB220715	QSFP+-40G-SR4	
FPC 5	REV 11	750-037358	CAAE2196	MPC Type 4-1	
CPU	REV 08	711-035209	CAAD9074	HMPC PMB 2G	
PIC 0		BUILTIN	BUILTIN	8X10GE SFP	
Xcvr 0	REV 01	740-031980	AMA062S	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AMA062P	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AMA052R	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AMA0632	SFP+-10G-SR	
Xcvr 4	REV 01	740-031980	193363A00564	SFP+-10G-SR	
Xcvr 5	REV 01	740-031980	193363A00229	SFP+-10G-SR	
Xcvr 6	REV 01	740-031980	193363A00363	SFP+-10G-SR	
Xcvr 7	REV 01	740-031980	193363A00278	SFP+-10G-SR	
PIC 1		BUILTIN	BUILTIN	8X10GE SFP	
Xcvr 0	REV 01	740-031980	AMA04CC	SFP+-10G-SR	
Xcvr 1	REV 01	740-021308	AD0927A001W	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AMA04N2	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AMA062U	SFP+-10G-SR	
Xcvr 4	REV 01	740-031980	193363A00491	SFP+-10G-SR	
Xcvr 5	REV 01	740-031980	183363A01511	SFP+-10G-SR	
Xcvr 6	REV 01	740-031980	193363A00565	SFP+-10G-SR	
Xcvr 7	REV 01	740-031980	193363A00405	SFP+-10G-SR	
PIC 2		BUILTIN	BUILTIN	8X10GE SFP	
Xcvr 0	REV 01	740-031980	AMA07QX	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AMA06MS	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	193363A00318	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	193363A00402	SFP+-10G-SR	
Xcvr 4	REV 01	740-031980	193363A00174	SFP+-10G-SR	
Xcvr 5	REV 01	740-031980	193363A00388	SFP+-10G-SR	
Xcvr 6	REV 01	740-031980	193363A00377	SFP+-10G-SR	
Xcvr 7	REV 01	740-031980	193363A00234	SFP+-10G-SR	
PIC 3		BUILTIN	BUILTIN	8X10GE SFP	
Xcvr 0	REV 01	740-031980	AMA062T	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	193363A00550	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	193363A00364	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AMA0630	SFP+-10G-SR	
Xcvr 4	REV 01	740-031980	193363A00509	SFP+-10G-SR	
Xcvr 5	REV 01	740-031980	193363A00459	SFP+-10G-SR	
Xcvr 6	REV 01	740-031980	113363A00191	SFP+-10G-SR	
Xcvr 7	REV 01	740-031980	193363A00352	SFP+-10G-SR	
FPC 6	REV 33	750-028467	CAAF5552	MPC 3D 16x 10GE	
CPU	REV 11	711-029089	CAAH7601	AMPC PMB	
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+	
Xcvr 0	REV 01	740-021308	AD0927A0036	SFP+-10G-SR	
Xcvr 1	REV 01	740-021308	AD0927A003M	SFP+-10G-SR	
Xcvr 2	REV 01	740-021308	AD0927A003G	SFP+-10G-SR	
Xcvr 3	REV 01	740-021308	AD0927A0031	SFP+-10G-SR	
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+	
Xcvr 0	REV 01	740-031980	193363A00331	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	193363A00325	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	193363A00417	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	183363A02509	SFP+-10G-SR	
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+	
Xcvr 0	REV 01	740-021308	T09K75140	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	B11A04356	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	B11K01952	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	B11K01914	SFP+-10G-SR	
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+	
Xcvr 0	REV 01	740-021308	T09K75157	SFP+-10G-SR	

Xcvr 1	REV 01	740-021308	T09K75194	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01926	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01936	SFP+-10G-SR
FPC 7	REV 16	750-037358	CAAL1012	MPC Type 4-1
CPU	REV 08	711-035209	CAAJ3851	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	AMA04NK	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00260	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11E02192	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AMA04CP	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJ40JJK	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11F00238	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B10M00275	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	193363A00211	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	B11D05577	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11G00586	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AMA08B7	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AMA04Q0	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11D05840	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11E00467	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11E00029	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	19T511101712	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	193363A00568	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10M00166	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10M00212	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11D05823	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	03DZ06A01005	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	03DZ06A01003	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	03DZ06A01009	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	03DZ06A01004	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-021308	03DZ06A01017	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	03DZ06A01016	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	03DZ06A01024	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	03DZ06A01008	SFP+-10G-SR
Xcvr 4	REV 01	740-030658	AD0946A02UH	SFP+-10G-USR
Xcvr 5	REV 01	740-021308	T09J67913	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AD0837ES09G	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	03DZ06A01015	SFP+-10G-SR
FPC 8	REV 03	750-045372	CAAD3111	MPC Type 3
CPU	REV 08	711-035209	CAAD8033	HMPC PMB 2G
MIC 0	REV 03	750-036233	ZL2032	2X40GE QSFP
PIC 0		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB230273	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB230254	QSFP+-40G-SR4
MIC 1	REV 03	750-036233	ZL2021	2X40GE QSFP
PIC 2		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB390962	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB390960	QSFP+-40G-SR4
FPC 9	REV 09	750-037355	CAAF1531	MPC Type 4-2
CPU	REV 08	711-035209	CAAB9927	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	193363A00525	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	193363A00504	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00368	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJ40JSS	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP

Xcvr 0	REV 01	740-031980	123363A00042	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10M00023	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJ802EM	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11E02348	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
ADC 0	REV 13	750-043596	ABBX5532	Adapter Card
ADC 1	REV 13	750-043596	ABBX5550	Adapter Card
ADC 2	REV 13	750-043596	ABBX5571	Adapter Card
ADC 3	REV 13	750-043596	ABBX5568	Adapter Card
ADC 4	REV 13	750-043596	ABBX5556	Adapter Card
ADC 5	REV 13	750-043596	ABBX5553	Adapter Card
ADC 6	REV 13	750-043596	ABBX5541	Adapter Card
ADC 7	REV 13	750-043596	ABBX5578	Adapter Card
ADC 8	REV 13	750-043596	ABBX5560	Adapter Card
ADC 9	REV 07	750-043596	ABBV7188	Adapter Card
Fan Tray 0	REV 03	760-046960	ACAY0127	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0068	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0072	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0070	172mm FanTray - 6 Fans

### show chassis hardware extensive (MX2010 Router)

```
user@host > show chassis hardware extensive
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          JN11E233DAFK
Assembly ID:  0x0557          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags:  0x00
ID: MX2010
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 31 45 32 33 33 44 41 46 4b 00 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 26      750-044636  ABAB9357      Lower Backplane
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-044636      S/N:          ABAB9357
Assembly ID:  0x0b66          Assembly Version: 01.26
Date:         08-28-2012      Assembly Flags: 0x00
Version:      REV 26          CLEI Code:    PROTOXCLEI
ID: Lower Backplane          FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ad 01 08 00 2c 21 72 70 a0 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 66 01 1a 52 45 56 20 32 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 36 33 36 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 39 33 35 37 00 1c 08 07
Address 0x30: dc ff ff ff ad 01 08 00 2c 21 72 70 a0 00 ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
```

```

Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff
Midplane 1      REV 01      711-044557      ABAB8643      Upper Backplane
Jedec Code:    0x7fb0      EEPROM Version:    0x01
P/N:          711-044557      S/N:          ABAB8643
Assembly ID:  0x0b65      Assembly Version: 01.01
Date:         07-27-2012      Assembly Flags: 0x00
Version:      REV 01
ID: Upper Backplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 65 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 34 35 35 37 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 38 36 34 33 00 1b 07 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP            REV 04      711-032426      ACAJ1677      Power Midplane
Jedec Code:    0x7fb0      EEPROM Version:    0x01
P/N:          711-032426      S/N:          ACAJ1677
Assembly ID:  0x045d      Assembly Version: 01.04
Date:         07-20-2012      Assembly Flags: 0x00
Version:      REV 04
ID: Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5d 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 36 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 31 36 37 37 00 14 07 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board      REV 08      760-044634      ABBV9726      Front Panel Display
Jedec Code:    0x7fb0      EEPROM Version:    0x02
P/N:          760-044634      S/N:          ABBV9726
Assembly ID:  0x0b64      Assembly Version: 01.08
Date:         09-10-2012      Assembly Flags: 0x00
Version:      REV 08      CLEI Code:      IPMYA4EJRA
ID: Front Panel Display      FRU Model Number: MX2010-CRAFT-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 64 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 34 34 36 33 34 00 00
Address 0x20: 53 2f 4e 20 41 42 42 56 39 37 32 36 00 0a 09 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 59 41 34 45 4a 52 41 4d
Address 0x50: 58 32 30 31 30 2d 43 52 41 46 54 2d 53 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 93 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0          REV 01      740-045050      1E02224000P      DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version:    0x02
P/N:          740-045050      S/N:          1E02224000P
Assembly ID:  0x0478      Assembly Version: 01.01

```

```

Date:          12-06-2012      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         XXXXXXXXXX
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-HC-DC-S-A
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 30 35 30 00 00
  Address 0x20: 31 45 30 32 32 32 34 30 30 30 50 00 00 06 0c 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 58 58 58 58 58 58 58 58 58 58 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 48 43 2d 44 43 2d
  Address 0x60: 53 2d 41 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 4a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 1          REV 01    740-045050    1E02224000M    DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-045050      S/N:             1E02224000M
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          12-06-2012      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         XXXXXXXXXX
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-HC-DC-S-A
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 30 35 30 00 00
  Address 0x20: 31 45 30 32 32 32 34 30 30 30 4d 00 00 06 0c 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 58 58 58 58 58 58 58 58 58 58 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 48 43 2d 44 43 2d
  Address 0x60: 53 2d 41 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 4a 00 00 00 00 00 00 00 00 00 00 00 00
...
PDM 0          REV 01    740-045234    1E262250067    DC Power Dist Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-045234      S/N:             1E262250067
Assembly ID:   0x047b          Assembly Version: 01.01
Date:          06-28-2012      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         IPUPAJSKAA
ID: DC Power Dist Module      FRU Model Number:  MX2000-PDM-DC-S-A
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 7b 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 32 33 34 00 00
  Address 0x20: 31 45 32 36 32 32 35 30 30 36 37 00 00 1c 06 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4a 53 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 44 4d 2d 44 43 2d 53 2d 41
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 89 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0 REV 02    740-041821    9009099704    RE-S-1800x4
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-041821      S/N:             9009099704
Assembly ID:   0x09c0          Assembly Version: 01.02
Date:          03-15-2012      Assembly Flags:  0x00
Version:       REV 02
ID: RE-S-1800x4              FRU Model Number:  RE-S-1800X4-16G-S
Board Information Record:

```

```

Address 0x00: 54 32 30 32 37 44 41 2d 34 34 47 42 23 41 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 31 38 32 31 00 00
Address 0x20: 39 30 30 39 30 39 39 37 30 34 00 00 00 0f 03 07
Address 0x30: dc ff ff ff 54 32 30 32 37 44 41 2d 34 34 47 42
Address 0x40: 23 41 23 00 01 00 00 00 00 00 00 00 00 00 00 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 8c ff ff ff ff ff ff ff ff ff ff ff ff
ad0 3831 MB UGB30SFA4000T1 SFA4000T1 00000651 Compact Flash
ad1 30533 MB UGB94BPH32H0S1-KCI 11000019592 Disk 1
usb0 (addr 1) EHCI root hub 0 Intel uhub0
usb0 (addr 2) product 0x0020 32 vendor 0x8087 uhub1
DIMM 0 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 1 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 2 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 3 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
Routing Engine 1 REV 02 740-041821 9009099706 RE-S-1800x4
Jedec Code: 0x7fb0 EEPROM Version: 0x02
P/N: 740-041821 S/N: 9009099706
Assembly ID: 0x09c0 Assembly Version: 01.02
Date: 02-23-2012 Assembly Flags: 0x00
Version: REV 02
ID: RE-S-1800x4 FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
Address 0x00: 54 32 30 32 37 44 41 2d 34 34 47 42 23 41 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 31 38 32 31 00 00
Address 0x20: 39 30 30 39 30 39 39 37 30 36 00 00 00 17 02 07
Address 0x30: dc ff ff ff 54 32 30 32 37 44 41 2d 34 34 47 42
Address 0x40: 23 41 23 00 01 00 00 00 00 00 00 00 00 00 00 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 8c ff ff ff ff ff ff ff ff ff ff ff ff
ad0 3998 MB Virtium - TuffDrive VCF P1T0200262860208 114 Compact Flash
ad1 30533 MB UGB94ARF32H0S3-KC UNIGEN-499551-000404 Disk 1
CB 0 REV 13 750-040257 CAAF8436 Control Board
Jedec Code: 0x7fb0 EEPROM Version: 0x02
P/N: 750-040257 S/N: CAAF8436
Assembly ID: 0x0b26 Assembly Version: 01.13
Date: 08-29-2012 Assembly Flags: 0x00
Version: REV 13 CLEI Code: PROTOXCLEI
ID: Control Board FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 26 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 30 32 35 37 00 00
Address 0x20: 53 2f 4e 20 43 41 41 46 38 34 33 36 00 1d 08 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
...
SPMB 0 REV 02 711-041855 ABBV3825 PMB Board
Jedec Code: 0x7fb0 EEPROM Version: 0x01
P/N: 711-041855 S/N: ABBV3825

```

```

Assembly ID: 0x0b29      Assembly Version: 01.02
Date: 08-14-2012      Assembly Flags: 0x00
Version: REV 02
ID: PMB Board
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0b 29 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 34 31 38 35 35 00 00
  Address 0x20: 53 2f 4e 20 41 42 42 56 33 38 32 35 00 0e 08 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
...
SFB 0      REV 05      711-044466      ABBX5682      Switch Fabric Board
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 711-044466      S/N: ABBX5682
Assembly ID: 0x0b25      Assembly Version: 01.05
Date: 09-07-2012      Assembly Flags: 0x00
Version: REV 05      CLEI Code: PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b 25 01 05 52 45 56 20 30 35 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 34 34 34 36 36 00 00
  Address 0x20: 53 2f 4e 20 41 42 42 58 35 36 38 32 00 07 09 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 00 00 00 01 00 00 00 00 00 00 48 00
...
FPC 0      REV 09      750-037355      CAAF0924      MPC Type 4-2
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-037355      S/N: CAAF0924
Assembly ID: 0x0b4e      Assembly Version: 01.09
Date: 05-21-2012      Assembly Flags: 0x00
Version: REV 09      CLEI Code: PROTOXCLEI
ID: MPC Type 4-2      FRU Model Number: MPC4E-2CGE-8XGE
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b 4e 01 09 52 45 56 20 30 39 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 33 35 35 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 46 30 39 32 34 00 15 05 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 4d
  Address 0x50: 50 43 34 45 2d 32 43 47 45 2d 38 58 47 45 00 00
  Address 0x60: 00 00 00 00 00 00 30 39 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c6 ff ff ff ff ff ff ff ff ff ff ff ff
CPU      REV 08      711-035209      CAAB9842      HMPC PMB 2G
Jedec Code: 0x7fb0      EEPROM Version: 0x01
P/N: 711-035209      S/N: CAAB9842
Assembly ID: 0x0b04      Assembly Version: 01.08
Date: 05-17-2012      Assembly Flags: 0x00
Version: REV 08
ID: HMPC PMB 2G

```

```

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 04 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 35 32 30 39 00 00
Address 0x20: 53 2f 4e 20 43 41 41 42 39 38 34 32 00 11 05 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          4x10GE SFPP
Jedec Code:    0x0000          EEPROM Version: 0x00
P/N:          BUILTIN          S/N:          BUILTIN
Assembly ID:   0x0a53          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags: 0x00
ID: 4x10GE SFPP
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 53 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 4d 58 43 00
Address 0x20: 42 55 49 4c 54 49 4e 00 4d 58 43 00 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 ae 64 00 00 00 00 0a 52 00 00
Xcvr 0      REV 01    740-021308    19T511101656    SFP+-10G-SR
Xcvr 1      REV 01    740-031980    AMA04RU        SFP+-10G-SR
Xcvr 2      REV 01    740-031980    193363A00558   SFP+-10G-SR
Xcvr 3      REV 01    740-031980    B10M00202      SFP+-10G-SR
...
ADC 0       REV 13    750-043596    ABBX5532      Adapter Card
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:        750-043596      S/N:          ABBX5532
Assembly ID: 0x0b3d          Assembly Version: 01.13
Date:       09-12-2012      Assembly Flags: 0x00
Version:    REV 13          CLEI Code:    IPUCBA8CAA
ID: Adapter Card            FRU Model Number: MX2000-LC-ADAPTER
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 3d 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 33 35 39 36 00 00
Address 0x20: 53 2f 4e 20 41 42 42 58 35 35 33 32 00 0c 09 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 41 38 43 41 41 4d
Address 0x50: 58 32 30 30 30 2d 4c 43 2d 41 44 41 50 54 45 52
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 3a 00 00 00 00 00 00 00 00 00 00 00 00
...

```

### show chassis hardware models (MX2010 Router)

```
user@host > show chassis hardware models
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	FRU model number
FPM Board	REV 06	711-032349	ZX8744	711-032349



PSM 4	REV 0C	740-033727	VK00254	000000000000000000000000
PSM 5	REV 0B	740-033727	VG00015	000000000000000000000000
PSM 6	REV 0B	740-033727	VH00097	000000000000000000000000
PSM 7	REV 0C	740-033727	VJ00151	000000000000000000000000
PSM 8	REV 0C	740-033727	VJ00149	000000000000000000000000
PDM 0	REV 0B	740-038109	WA00008	
PDM 1	REV 0B	740-038109	WA00014	
Routing Engine 0	REV 02	740-041821	9009094134	RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821	9009094141	RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	CAAB3491	750-040257
CB 1	REV 08	750-040257	CAAB3489	750-040257
SFB 0	REV 06	711-032385	ZV1828	711-032385
SFB 1	REV 07	711-032385	ZZ2568	711-032385
SFB 2	REV 07	711-032385	ZZ2563	711-032385
SFB 3	REV 07	711-032385	ZZ2564	711-032385
SFB 4	REV 07	711-032385	ZZ2580	711-032385
SFB 5	REV 07	711-032385	ZZ2579	711-0323856
SFB 6	REV 07	711-032385	CAAB4882	711-044170
SFB 7	REV 07	711-032385	CAAB4898	711-044170
FPC 0	REV 33	750-028467	CAAB1919	MPC-3D-16XGE-SFPP
FPC 1	REV 21	750-033205	ZG5027	MX-MPC3-3D
MIC 0	REV 03	750-033307	ZV6299	MIC3-3D-10XGE-SFPP
MIC 1	REV 03	750-033307	ZV6268	MIC3-3D-10XGE-SFPP
FPC 8	REV 22	750-031089	ZT9746	MX-MPC2-3D
MIC 0	REV 26	750-028392	ABBS1150	MIC-3D-20GE-SFP
MIC 1	REV 26	750-028387	ABBR9582	MIC-3D-4XGE-XFP
FPC 9	REV 11	750-036284	ZL3591	MPCE-3D-16XGE-SFPP
ADC 0	REV 05	750-043596	CAAC2073	750-043596
ADC 1	REV 01	750-043596	ZV4117	750-043596
ADC 8	REV 01	750-043596	ZV4107	750-043596
ADC 9	REV 02	750-043596	ZW1555	750-043596
Fan Tray 0	REV 2A	760-046960	ACAY0015	
Fan Tray 1	REV 2A	760-046960	ACAY0019	
Fan Tray 2	REV 2A	760-046960	ACAY0020	
Fan Tray 3	REV 2A	760-046960	ACAY0021	

### show chassis hardware clei-models (MX2010 Routers)

```
user@host > show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
FPM Board	REV 06	711-032349	PROTOXCLEI	711-032349
PSM 4	REV 0C	740-033727	0000000000	000000000000000000000000
PSM 5	REV 0B	740-033727	0000000000	000000000000000000000000
PSM 6	REV 0B	740-033727	0000000000	000000000000000000000000
PSM 7	REV 0C	740-033727	0000000000	000000000000000000000000
PSM 8	REV 0C	740-033727	0000000000	000000000000000000000000
PDM 0	REV 0B	740-038109		
PDM 1	REV 0B	740-038109		
Routing Engine 0	REV 02	740-041821		RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821		RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	PROTOXCLEI	750-040257
CB 1	REV 08	750-040257	PROTOXCLEI	750-040257
SFB 0	REV 06	711-032385	PROTOXCLEI	711-032385
SFB 1	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 2	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 3	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 4	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 5	REV 07	711-032385	PROTOXCLEI	711-0323856

SFB 6	REV 07	711-032385	PROTOXCLEI	711-044170
SFB 7	REV 07	711-032385	PROTOXCLEI	711-044170
FPC 0	REV 33	750-028467		MPC-3D-16XGE-SFPP
FPC 1	REV 21	750-033205		MX-MPC3-3D
MIC 0	REV 03	750-033307	PROTOXCLEI	MIC3-3D-10XGE-SFPP
MIC 1	REV 03	750-033307	PROTOXCLEI	MIC3-3D-10XGE-SFPP
FPC 8	REV 22	750-031089	COUIBAYBAA	MX-MPC2-3D
MIC 0	REV 26	750-028392	COUIA15BAA	MIC-3D-20GE-SFP
MIC 1	REV 26	750-028387	COUIA16BAA	MIC-3D-4XGE-XFP
FPC 9	REV 11	750-036284	CMUIACGBAA	MPCE-3D-16XGE-SFPP
ADC 0	REV 05	750-043596	PROTOXCLEI	750-043596
ADC 1	REV 01	750-043596	PROTOXCLEI	750-043596
ADC 8	REV 01	750-043596	PROTOXCLEI	750-043596
ADC 9	REV 02	750-043596	PROTOXCLEI	750-043596
Fan Tray 0	REV 2A	760-046960		
Fan Tray 1	REV 2A	760-046960		
Fan Tray 2	REV 2A	760-046960		
Fan Tray 3	REV 2A	760-046960		

### show chassis hardware (MX2010 Routers with MPC6E and OTN MIC)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN11C9AFEAFK	MX2010
Midplane	REV 35	750-044636	ABAB9188	Lower Backplane
Midplane 1	REV 02	711-044557	ABAB8729	Upper Backplane
PMP	REV 04	711-032426	ACAJ2432	Power Midplane
FPM Board	REV 09	760-044634	ABCA4314	Front Panel Display
PSM 0	REV 01	740-050037	1EDB321015C	DC 52V Power Supply
Module				
PSM 1	REV 01	740-050037	1EDB321015J	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32000K8	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB32101JW	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB321015G	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB32101HH	DC 52V Power Supply
Module				
PSM 6	REV 01	740-050037	1EDB32101HD	DC 52V Power Supply
Module				
PSM 7	REV 01	740-050037	1EDB321015F	DC 52V Power Supply
Module				
PSM 8	REV 01	740-050037	1EDB321015B	DC 52V Power Supply
Module				
PDM 0	REV 03	740-045234	1EFA3220433	DC Power Dist Module
PDM 1	REV 03	740-045234	1EFA3220425	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009115685	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009099711	RE-S-1800x4
CB 0	REV 23	750-040257	CABE8395	Control Board
CB 1	REV 12	750-040257	CAAD9499	Control Board
SPMB 0	REV 02	711-041855	ABCG8426	PMB Board
SPMB 1	REV 02	711-041855	ABBS1481	PMB Board
SFB 0	REV 06	711-044466	ABCD5013	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD5160	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCD5175	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCD4938	Switch Fabric Board

SFB 4	REV 06	711-044466	ABCD4944	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCD4968	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCD5267	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCD4997	Switch Fabric Board
FPC 0	REV 59	750-044130	ABCT7676	MPC6E 3D
CPU	REV 10	711-045719	ABCK8527	RMPC PMB
XLM 0	REV 13	711-046638	ABCT7810	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7811	MPC6E XL
FPC 2	REV 27	750-033205	ZL6014	MPCE Type 3 3D
CPU	REV 07	711-035209	ZK9068	HMPC PMB 2G
MIC 0	REV 14	750-033196	CAAW9214	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC49FC030	CFP2-100G-SR10
MIC 1	REV 18	750-033199	CAAC3231	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 3	REV 59	750-044130	ABCT7682	MPC6E 3D
CPU	REV 10	711-045719	ABCK8531	RMPC PMB
XLM 0	REV 13	711-046638	ABCT7818	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7819	MPC6E XL
FPC 4	REV 33	750-044130	ABBY9278	MPC6E 3D
CPU	REV 09	711-045719	ABBY8677	RMPC PMB
XLM 0	REV 06.2.00	711-046638	ABBY8844	MPC6E XL
XLM 1	REV 06.2.00	711-046638	ABBY8830	MPC6E XL
FPC 5	REV 59	750-044130	ABCT7675	MPC6E 3D
CPU	REV 10	711-045719	ABCK8526	RMPC PMB
XLM 0	REV 13	711-046638	ABCT7808	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7809	MPC6E XL
FPC 6	REV 30	750-028467	ZM4986	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6541	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43GAC	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	ALMOA6D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AQFORB3	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	153363A00333	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AN10KYE	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	APK04YM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AQFOH44	SFP+-10G-SR
FPC 8	REV 38	750-031090	CABF7313	MPC Type 2 3D EQ
CPU	REV 08	711-030884	CABE6727	MPC PMB 2G
MIC 0	REV 18	750-028380	YK8253	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 03	740-014289	AD1148M00TP	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
QXM 0	REV 06	711-028408	CABC5614	MPC QXM
QXM 1	REV 06	711-028408	CABC5550	MPC QXM
FPC 9	REV 39	750-044130	ABCK1652	MPC6E 3D
CPU	REV 09	711-045719	ABCK1655	RMPC PMB
MIC 0	REV 09	750-049457	ABCP1230	2X100GE CFP2 OTN
PIC 0		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	37300222WP0002	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	FD46F001Y	CFP2-100G-SR10
MIC 1	REV 07	750-049457	ABCV6662	2X100GE CFP2 OTN
PIC 1		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQD0014	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	J13J68335	CFP2-100G-LR4-D
XLM 0	REV 07.2.00	711-046638	ABCK5491	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5475	MPC6E XL

ADC 1	REV 17	750-043596	ABCG9023	Adapter Card
ADC 2	REV 01	750-043596	ZV4079	Adapter Card
ADC 6	REV 17	750-043596	ABCG8866	Adapter Card
ADC 8	REV 17	750-043596	ABCA8993	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0354	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0831	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0892	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0839	172mm FanTray - 6 Fans

### show chassis hardware detail (MX2010 Routers with MPC6E and OTN MIC)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11C9AFEAFK	MX2010
Midplane	REV 35	750-044636	ABAB9188	Lower Backplane
Midplane 1	REV 02	711-044557	ABAB8729	Upper Backplane
PMP	REV 04	711-032426	ACAJ2432	Power Midplane
FPM Board	REV 09	760-044634	ABCA4314	Front Panel Display
PSM 0	REV 01	740-050037	1EDB321015C	DC 52V Power Supply
Module				
PSM 1	REV 01	740-050037	1EDB321015J	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32000K8	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB32101JW	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB321015G	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB32101HH	DC 52V Power Supply
Module				
PSM 6	REV 01	740-050037	1EDB32101HD	DC 52V Power Supply
Module				
PSM 7	REV 01	740-050037	1EDB321015F	DC 52V Power Supply
Module				
PSM 8	REV 01	740-050037	1EDB321015B	DC 52V Power Supply
Module				
PDM 0	REV 03	740-045234	1EFA3220433	DC Power Dist Module
PDM 1	REV 03	740-045234	1EFA3220425	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009115685	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive	VCF P1T0200274310822	191	Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI	11000043190		Disk 1
usb0 (addr 1)	EHCI root hub 0	Intel		uhub0
usb0 (addr 2)	product 0x0020 32	vendor 0x8087		uhub1
DIMM 0	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 1	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 2	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 3	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
Routing Engine 1	REV 02	740-041821	9009099711	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive	VCF P1T0200262860208	30	Compact Flash
ad1 30533 MB	UGB94ARF32H0S3-KC	UNIGEN-499551-000146		Disk 1
CB 0	REV 23	750-040257	CABE8395	Control Board
CB 1	REV 12	750-040257	CAAD9499	Control Board
SPMB 0	REV 02	711-041855	ABCG8426	PMB Board
SPMB 1	REV 02	711-041855	ABBS1481	PMB Board
SFB 0	REV 06	711-044466	ABCD5013	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD5160	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCD5175	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCD4938	Switch Fabric Board

SFB 4	REV 06	711-044466	ABCD4944	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCD4968	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCD5267	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCD4997	Switch Fabric Board
FPC 0	REV 59	750-044130	ABCT7676	MPC6E 3D
CPU	REV 10	711-045719	ABCK8527	RMPK PMB
XLM 0	REV 13	711-046638	ABCT7810	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7811	MPC6E XL
FPC 2	REV 27	750-033205	ZL6014	MPCE Type 3 3D
CPU	REV 07	711-035209	ZK9068	HMPK PMB 2G
MIC 0	REV 14	750-033196	CAAW9214	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC49FC030	CFP2-100G-SR10
MIC 1	REV 18	750-033199	CAAC3231	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 3	REV 59	750-044130	ABCT7682	MPC6E 3D
CPU	REV 10	711-045719	ABCK8531	RMPK PMB
XLM 0	REV 13	711-046638	ABCT7818	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7819	MPC6E XL
FPC 4	REV 33	750-044130	ABBY9278	MPC6E 3D
CPU	REV 09	711-045719	ABBY8677	RMPK PMB
XLM 0	REV 06.2.00	711-046638	ABBY8844	MPC6E XL
XLM 1	REV 06.2.00	711-046638	ABBY8830	MPC6E XL
FPC 5	REV 59	750-044130	ABCT7675	MPC6E 3D
CPU	REV 10	711-045719	ABCK8526	RMPK PMB
XLM 0	REV 13	711-046638	ABCT7808	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7809	MPC6E XL
FPC 6	REV 30	750-028467	ZM4986	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6541	AMPK PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43GAC	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	ALMOA6D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AQFORB3	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	153363A00333	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AN10KYE	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	APK04YM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AQFOH44	SFP+-10G-SR
FPC 8	REV 38	750-031090	CABF7313	MPC Type 2 3D EQ
CPU	REV 08	711-030884	CABE6727	MPC PMB 2G
MIC 0	REV 18	750-028380	YK8253	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 03	740-014289	AD1148M00TP	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
QXM 0	REV 06	711-028408	CABC5614	MPC QXM
QXM 1	REV 06	711-028408	CABC5550	MPC QXM
FPC 9	REV 39	750-044130	ABCK1652	MPC6E 3D
CPU	REV 09	711-045719	ABCK1655	RMPK PMB
MIC 0	REV 09	750-049457	ABCP1230	2X100GE CFP2 OTN
PIC 0		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	37300222WP0002	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	FD46F001Y	CFP2-100G-SR10
MIC 1	REV 07	750-049457	ABCV6662	2X100GE CFP2 OTN
PIC 1		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQD0014	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	J13J68335	CFP2-100G-LR4-D
XLM 0	REV 07.2.00	711-046638	ABCK5491	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5475	MPC6E XL

ADC 1	REV 17	750-043596	ABCG9023	Adapter Card
ADC 2	REV 01	750-043596	ZV4079	Adapter Card
ADC 6	REV 17	750-043596	ABCG8866	Adapter Card
ADC 8	REV 17	750-043596	ABCA8993	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0354	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0831	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0892	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0839	172mm FanTray - 6 Fans

### show chassis hardware extensive (MX2010 Routers with MPC6E and OTN MIC)

```
user@host> show chassis hardware extensive
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11C9AFEAFK	MX2010
Jedec Code:	0x7fb0		EEPROM Version:	0x02
			S/N:	JN11C9AFEAFK
Assembly ID:	0x0557		Assembly Version:	00.00
Date:	00-00-0000		Assembly Flags:	0x00

ID: MX2010

Board Information Record:

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00  
 Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
 Address 0x20: 4a 4e 31 31 43 39 41 46 45 41 46 4b 00 00 00 00  
 Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00  
 Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
 Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
 Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
 Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Midplane	REV 35	750-044636	ABAB9188	Lower Backplane
----------	--------	------------	----------	-----------------

Jedec Code:	0x7fb0		EEPROM Version:	0x02
P/N:	750-044636		S/N:	ABAB9188
Assembly ID:	0x0b66		Assembly Version:	01.35
Date:	06-21-2013		Assembly Flags:	0x00
Version:	REV 35		CLEI Code:	IPMU810ARA
ID: Lower Backplane			FRU Model Number:	CHAS-BP-MX2010-S

Board Information Record:

Address 0x00: ad 01 08 00 3c 8a b0 38 68 00 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 0b 66 01 23 52 45 56 20 33 35 00 00  
 Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 36 33 36 00 00  
 Address 0x20: 53 2f 4e 20 41 42 41 42 39 31 38 38 00 15 06 07  
 Address 0x30: dd ff ff ff ad 01 08 00 3c 8a b0 38 68 00 ff ff  
 Address 0x40: ff ff ff ff 01 49 50 4d 55 38 31 30 41 52 41 43  
 Address 0x50: 48 41 53 2d 42 50 2d 4d 58 32 30 31 30 2d 53 00  
 Address 0x60: 00 00 00 00 00 00 30 36 00 ff ff ff ff ff ff ff  
 Address 0x70: ff ff ff f8 ff ff ff ff ff ff ff ff ff ff ff ff

Midplane 1	REV 02	711-044557	ABAB8729	Upper Backplane
------------	--------	------------	----------	-----------------

Jedec Code:	0x7fb0		EEPROM Version:	0x01
P/N:	711-044557		S/N:	ABAB8729
Assembly ID:	0x0b65		Assembly Version:	01.02
Date:	03-21-2013		Assembly Flags:	0x00
Version:	REV 02			

ID: Upper Backplane

Board Information Record:

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

I2C Hex Data:

```

Address 0x00: 7f b0 01 ff 0b 65 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 34 35 35 37 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 38 37 32 39 00 15 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP                REV 04    711-032426    ACAJ2432                Power Midplane
Jedec Code:    0x7fb0                EEPROM Version:    0x01
P/N:          711-032426            S/N:              ACAJ2432
Assembly ID:  0x045d                Assembly Version:  01.04
Date:         03-28-2013            Assembly Flags:    0x00
Version:      REV 04
ID: Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5d 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 36 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 32 34 33 32 00 1c 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board          REV 09    760-044634    ABCA4314                Front Panel Display
Jedec Code:    0x7fb0                EEPROM Version:    0x02
P/N:          760-044634            S/N:              ABCA4314
Assembly ID:  0x0b64                Assembly Version:  01.09
Date:         03-28-2013            Assembly Flags:    0x00
Version:      REV 09                CLEI Code:        IPMYA4EJRA
ID: Front Panel Display            FRU Model Number: MX2010-CRAFT-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 64 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 34 34 36 33 34 00 00
Address 0x20: 53 2f 4e 20 41 42 43 41 34 33 31 34 00 1c 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 59 41 34 45 4a 52 41 4d
Address 0x50: 58 32 30 31 30 2d 43 52 41 46 54 2d 53 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 93 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0              REV 01    740-050037    1EDB321015C            DC 52V Power Supply
Module
Jedec Code:    0x7fb0                EEPROM Version:    0x02
P/N:          740-050037            S/N:              1EDB321015C
Assembly ID:  0x0478                Assembly Version:  01.01
Date:         05-28-2013            Assembly Flags:    0x00
Version:      REV 01                CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module    FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 43 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d

```

```

Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 1          REV 01  740-050037  1EDB321015J  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB321015J
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-28-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 4a 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 2          REV 01  740-050037  1EDB32000K8  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB32000K8
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-23-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 30 30 30 4b 38 00 00 17 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 3          REV 01  740-050037  1EDB32101JW  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB32101JW
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-30-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 4a 57 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

```



```

PSM 4          REV 01  740-050037  1EDB321015G  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:            1EDB321015G
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-28-2013      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:       IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 47 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 5          REV 01  740-050037  1EDB32101HH  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:            1EDB32101HH
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-30-2013      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:       IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 48 48 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 6          REV 01  740-050037  1EDB32101HD  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:            1EDB32101HD
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-30-2013      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:       IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 48 44 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 7          REV 01  740-050037  1EDB321015F  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02

```

```

P/N:          740-050037      S/N:          1EDB321015F
Assembly ID:  0x0478         Assembly Version: 01.01
Date:         05-28-2013     Assembly Flags:  0x00
Version:      REV 01         CLEI Code:       IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 31 30 31 35 46 00 00 1c 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 8          REV 01      740-050037      1EDB321015B      DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:          740-050037   S/N:          1EDB321015B
Assembly ID:   0x0478     Assembly Version: 01.01
Date:         05-28-2013  Assembly Flags:  0x00
Version:      REV 01     CLEI Code:     IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 31 30 31 35 42 00 00 1c 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PDM 0          REV 03      740-045234      1EFA3220433      DC Power Dist Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:          740-045234   S/N:          1EFA3220433
Assembly ID:   0x047b     Assembly Version: 01.03
Date:         05-30-2013  Assembly Flags:  0x00
Version:      REV 03     CLEI Code:     IPUPAJSKAA
ID: DC Power Dist Module  FRU Model Number: MX2000-PDM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 7b 01 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 32 33 34 00 00
  Address 0x20: 31 45 46 41 33 32 32 30 34 33 33 00 00 1e 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4a 53 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 44 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 33 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 1d 00 00 00 00 00 00 00 00 00 00 00 00
PDM 1          REV 03      740-045234      1EFA3220425      DC Power Dist Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:          740-045234   S/N:          1EFA3220425
Assembly ID:   0x047b     Assembly Version: 01.03
Date:         05-30-2013  Assembly Flags:  0x00
Version:      REV 03     CLEI Code:     IPUPAJSKAA
ID: DC Power Dist Module  FRU Model Number: MX2000-PDM-DC-S

```

```
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
..
```

### show chassis hardware (MX2020 Router)

```
user@host > show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11E2227AFJ	MX2020
Midplane	REV 27	750-040240	ABAB9384	Lower Power Midplane
Midplane 1	REV 04	711-032386	ABAB9386	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ1579	Upper Power Midplane
PMP 0	REV 04	711-032426	ACAJ1524	Lower Power Midplane
FPM Board	REV 06	760-040242	ABBT8837	Front Panel Display
PSM 0	REV 01	740-045050	1E022240056	DC 52V Power Supply
Module				
PSM 1	REV 01	740-045050	1E022240054	DC 52V Power Supply
Module				
PSM 2	REV 01	740-045050	1E02224005H	DC 52V Power Supply
Module				
PSM 3	REV 01	740-045050	1E022240053	DC 52V Power Supply
Module				
PSM 4	REV 01	740-045050	1E02224004K	DC 52V Power Supply
Module				
PSM 7	REV 01	740-045050	1E02224006W	DC 52V Power Supply
Module				
PSM 8	REV 01	740-045050	1E022240062	DC 52V Power Supply
Module				
PSM 9	REV 01	740-045050	1E02224005B	DC 52V Power Supply
Module				
PSM 10	REV 01	740-045050	1E02224005A	DC 52V Power Supply
Module				
PSM 11	REV 01	740-045050	1E022240052	DC 52V Power Supply
Module				
PSM 12	REV 01	740-045050	1E022240051	DC 52V Power Supply
Module				
PSM 13	REV 01	740-045050	1E022240058	DC 52V Power Supply
Module				
PSM 14	REV 01	740-045050	1E02224004L	DC 52V Power Supply
Module				
PSM 15	REV 01	740-045050	1E02224005M	DC 52V Power Supply
Module				
PSM 16	REV 01	740-045050	1E02224006S	DC 52V Power Supply
Module				
PSM 17	REV 01	740-045050	1E02224005Z	DC 52V Power Supply
Module				
PDM 0	REV 01	740-045234	1E012150033	DC Power Dist Module
PDM 1	REV 01	740-045234	1E012150027	DC Power Dist Module
PDM 2	REV 01	740-045234	1E012150028	DC Power Dist Module
PDM 3	REV 01	740-045234	1E012150045	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009089704	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009094138	RE-S-1800x4
CB 0	REV 14	750-040257	CAAF8430	Control Board
CB 1	REV 08	750-040257	CAAB3482	Control Board
SPMB 0	REV 01	711-041855	ZS2290	PMB Board
SPMB 1	REV 02	711-041855	CAAA6141	PMB Board
SFB 0	REV 03	711-044466	ABBV6789	Switch Fabric Board
SFB 1	REV 05	711-044466	ABBX5666	Switch Fabric Board

SFB 2	REV 05	711-044466	ABBX5678	Switch Fabric Board
SFB 3	REV 05	711-044466	ABBX5687	Switch Fabric Board
SFB 4	REV 05	711-044466	ABBX5609	Switch Fabric Board
SFB 5	REV 05	711-044466	ABBX5675	Switch Fabric Board
SFB 6	REV 03	711-044466	ABBV6805	Switch Fabric Board
SFB 7	REV 05	711-044466	ABBX5701	Switch Fabric Board
FPC 0	REV 30	750-028467	ABBN0284	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0507	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00990	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04357	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01327	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04375	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02760	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02904	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E03963	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00756	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04418	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01077	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01128	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01253	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01140	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01626	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01075	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01177	SFP+-10G-USR
FPC 1	REV 30	750-028467	ABBN0208	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABB11084	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04745	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01570	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04388	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01439	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04739	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01869	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01675	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01901	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01346	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01288	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01824	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04312	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02811	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01495	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01265	SFP+-10G-USR
FPC 2	REV 30	750-028467	ZM5111	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6607	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LJA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MFZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKL	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KF4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FBJ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MM2	SFP+-10G-SR

Xcvr 2	REV 01	740-031980	AK80LJV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NXV	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1H	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLS	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FL5	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG2	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KDU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MG1	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM0	SFP+-10G-SR
FPC 3	REV 30	750-028467	ABBN0302	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0495	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01581	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01176	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01251	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02752	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00786	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01020	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01023	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02819	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02812	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11D04437	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01279	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01333	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00978	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01018	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01784	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	AK80NKP	SFP+-10G-SR
FPC 4	REV 30	750-028467	ABBN0308	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1095	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04305	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01147	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01195	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01743	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01892	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02880	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00725	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01057	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02816	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11C04501	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02764	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00789	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01250	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00787	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E03803	SFP+-10G-USR
FPC 5	REV 30	750-028467	ABBN0316	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1082	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00523	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	B11K01848	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01865	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00540	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00422	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00428	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00423	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01855	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01847	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00526	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00529	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00525	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00425	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00530	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01851	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00528	SFP+-10G-SR
FPC 6	REV 32	750-028467	ABBN6832	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6534	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MB4	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FQ6	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N1F	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLQ	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80KDR	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FGJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N5G	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KD8	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LET	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80N1X	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRF	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL2	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N3D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MRB	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LEQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LER	SFP+-10G-SR
FPC 7	REV 32	750-028467	ABBN6811	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7288	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NK8	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LJC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LBU	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N21	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEU	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLM	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NL6	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LES	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEN	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80ME0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LMG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM1	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MG7	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KF9	SFP+-10G-SR

Xcvr 2	REV 01	740-031980	AK80NRQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLE	SFP+-10G-SR
FPC 8	REV 23	750-028467	YN2977	MPC 3D 16x 10GE
CPU	REV 10	711-029089	YP1856	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00875	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00851	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00772	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00882	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00735	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00169	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00726	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00077	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00168	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00676	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00732	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00091	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00642	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00871	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00853	SFP+-10G-SR
FPC 9	REV 32	750-028467	ABBN6798	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6556	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	9ZD206A00055	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00239	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AD0915E003K	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AD0915E003A	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MRC	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLS	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKN	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N3U	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1T	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ808DJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NG4	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FND	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLT	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKR	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LKM	SFP+-10G-SR
FPC 10	REV 32	750-028467	ABBN6813	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6542	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NA3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLF	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MRH	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00030	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80L9H	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80ME8	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLR	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG1	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	AK80MCA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LFC	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LEM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N9X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LAC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LF2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N8T	SFP+-10G-SR
FPC 11	REV 30	750-028467	ABBN0281	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0526	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01326	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03973	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00950	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00674	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00775	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04461	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01074	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02821	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04501	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00757	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01623	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01022	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04359	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02751	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02736	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01178	SFP+-10G-USR
FPC 12	REV 32	750-028467	ABBN6796	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7259	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01856	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01853	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01863	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02863	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02668	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02881	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01671	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02627	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02692	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02730	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03081	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02736	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02568	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02747	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02579	SFP+-10G-SR
FPC 13	REV 30	750-028467	ABBN0270	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABB30966	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NL1	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NXW	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KD2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FMD	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+



Xcvr 0	REV 01	740-031980	AK80NKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MGH	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N38	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL7	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEL	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NKD	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCY	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LHK	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80M5J	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MBE	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NLG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LFH	SFP+-10G-SR
FPC 14	REV 32	750-028467	ABBN6790	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6515	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LZM	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MCC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCM	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE0	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021310	C10F99155	SFP+-10G-LRM
Xcvr 1	REV 01	740-021310	C10F99049	SFP+-10G-LRM
Xcvr 2	REV 01	740-021310	C10F99128	SFP+-10G-LRM
Xcvr 3	REV 01	740-021310	C10F99169	SFP+-10G-LRM
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LF3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02597	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03060	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03057	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEX	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FEU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FNM	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AJQQ05G	SFP+-10G-SR
FPC 15	REV 32	750-028467	ABBN6791	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7289	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00424	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01849	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01862	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01852	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00427	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00430	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01854	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00426	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00429	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01864	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01850	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00522	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01144	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00985	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00796	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	B11K01866	SFP+-10G-SR
FPC 16	REV 30	750-028467	ABBM4592	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0465	AMPC PMB

PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01435	SFP+-10G-USR	
Xcvr 1	REV 01	740-030658	B11E01052	SFP+-10G-USR	
Xcvr 2	REV 01	740-030658	B11F01328	SFP+-10G-USR	
Xcvr 3	REV 01	740-030658	B11F01254	SFP+-10G-USR	
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02738	SFP+-10G-USR	
Xcvr 1	REV 01	740-030658	B11E02881	SFP+-10G-USR	
Xcvr 2	REV 01	740-030658	B11F01624	SFP+-10G-USR	
Xcvr 3	REV 01	740-030658	B11E00889	SFP+-10G-USR	
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02883	SFP+-10G-USR	
Xcvr 1	REV 01	740-030658	B11E00681	SFP+-10G-USR	
Xcvr 2	REV 01	740-030658	B11E04306	SFP+-10G-USR	
Xcvr 3	REV 01	740-030658	B11E02813	SFP+-10G-USR	
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01801	SFP+-10G-USR	
Xcvr 1	REV 01	740-030658	B11E02753	SFP+-10G-USR	
Xcvr 2	REV 01	740-030658	B11E01156	SFP+-10G-USR	
Xcvr 3	REV 01	740-030658	B11E04324	SFP+-10G-USR	
FPC 17	REV 32	750-028467	ABBN6810	MPC 3D 16x 10GE	
CPU	REV 10	711-029089	ABBN7237	AMPC PMB	
PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02638	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02082	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A01674	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A03058	SFP+-10G-SR	
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03048	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02729	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A02566	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A02567	SFP+-10G-SR	
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02878	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02739	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A01959	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A02660	SFP+-10G-SR	
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02731	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02588	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A02673	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A02654	SFP+-10G-SR	
FPC 18	REV 30	750-028467	ABBM4739	MPC 3D 16x 10GE	
CPU	REV 10	711-029089	ABBN0487	AMPC PMB	
PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02569	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02886	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A03082	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	133363A00297	SFP+-10G-SR	
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02726	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A03050	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A02884	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A03076	SFP+-10G-SR	
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02581	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02873	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A02582	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A03083	SFP+-10G-SR	
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-031981	UL70BU6	SFP+-10G-LR
Xcvr 1	REV 01	740-031981	UL50QC6	SFP+-10G-LR
Xcvr 2	REV 01	740-031981	UL708N6	SFP+-10G-LR
Xcvr 3	REV 01	740-031981	UL603KK	SFP+-10G-LR
FPC 19	REV 32	750-028467	ABBN6827	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6508	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A01688	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A01724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01773	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02593	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03061	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03056	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02669	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03070	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02572	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02697	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02585	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03052	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02591	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02649	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02577	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02698	SFP+-10G-SR
ADC 0	REV 13	750-043596	ABBX5561	Adapter Card
ADC 1	REV 13	750-043596	ABBX5546	Adapter Card
ADC 2	REV 13	750-043596	ABBX5535	Adapter Card
ADC 3	REV 13	750-043596	ABBX5552	Adapter Card
ADC 4	REV 13	750-043596	ABBX5581	Adapter Card
ADC 5	REV 13	750-043596	ABBX5545	Adapter Card
ADC 6	REV 13	750-043596	ABBX5554	Adapter Card
ADC 7	REV 07	750-043596	ABBV7194	Adapter Card
ADC 8	REV 07	750-043596	ABBV7251	Adapter Card
ADC 9	REV 07	750-043596	ABBV7202	Adapter Card
ADC 10	REV 13	750-043596	ABBX5538	Adapter Card
ADC 11	REV 13	750-043596	ABBX5566	Adapter Card
ADC 12	REV 13	750-043596	ABBX5542	Adapter Card
ADC 13	REV 13	750-043596	ABBX5539	Adapter Card
ADC 14	REV 13	750-043596	ABBX5555	Adapter Card
ADC 15	REV 13	750-043596	ABBX5557	Adapter Card
ADC 16	REV 13	750-043596	ABBX5536	Adapter Card
ADC 17	REV 13	750-043596	ABBX5559	Adapter Card
ADC 18	REV 13	750-043596	ABBX5537	Adapter Card
ADC 19	REV 11	750-043596	ABBW5685	Adapter Card
Fan Tray 0	REV 2A	760-046960	ACAY0030	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0039	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0033	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0062	172mm FanTray - 6 Fans

### show chassis hardware detail (MX2020 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11E2227AFJ	MX2020
Midplane	REV 27	750-040240	ABAB9384	Lower Power Midplane
Midplane 1	REV 04	711-032386	ABAB9386	Upper Backplane

PMP 1	REV 05	711-032428	ACA11821	Upper Power Midplane
PMP 0	REV 04	711-032426	ACA11524	Lower Power Midplane
FPM Board	REV 06	760-040242	ABBT8837	Front Panel Display
PSM 0	REV 01	740-045050	1E02224006G	DC 52V Power Supply
Module				
PSM 1	REV 01	740-045050	1E022240053	DC 52V Power Supply
Module				
PSM 2	REV 01	740-045050	1E02224004K	DC 52V Power Supply
Module				
PSM 3	REV 01	740-045050	1E022240056	DC 52V Power Supply
Module				
PSM 4	REV 01	740-045050	1E022240054	DC 52V Power Supply
Module				
PSM 5	REV 01	740-045050	1E02224005H	DC 52V Power Supply
Module				
PSM 6	REV 01	740-045050	1E02224006S	DC 52V Power Supply
Module				
PSM 7	REV 01	740-045050	1E02224005M	DC 52V Power Supply
Module				
PSM 8	REV 01	740-045050	1E022240062	DC 52V Power Supply
Module				
PSM 9	REV 03	740-045050	1EDB2350095	DC 52V Power Supply
Module				
PSM 10	REV 03	740-045050	1EDB235009L	DC 52V Power Supply
Module				
PSM 11	REV 03	740-045050	1EDB2350092	DC 52V Power Supply
Module				
PSM 12	REV 03	740-045050	1EDB23500AT	DC 52V Power Supply
Module				
PSM 13	REV 03	740-045050	1EDB2350094	DC 52V Power Supply
Module				
PSM 15	REV 03	740-045050	1EDB235008X	DC 52V Power Supply
Module				
PDM 0	REV 01	740-045234	1E012150033	DC Power Dist Module
PDM 1	REV 01	740-045234	1E012150027	DC Power Dist Module
PDM 2	REV 01	740-045234	1E262250072	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009094138	RE-S-1800x4
ad0 3998 MB		Virtium - TuffDisk	VCF3 20110825A021D0000064	Compact Flash
ad1 30533 MB		UGB94ARF32H0S3-KC	UNIGEN-499551-000347	Disk 1
usb0 (addr 1)		EHCI root hub 0	Intel	uhub0
usb0 (addr 2)		product 0x0020 32	vendor 0x8087	uhub1
DIMM 0		SGU04G72H1BD2SA-BB	DIE REV-52 PCB REV-54	MFR ID-ce80
DIMM 1		SGU04G72H1BD2SA-BB	DIE REV-52 PCB REV-54	MFR ID-ce80
DIMM 2		SGU04G72H1BD2SA-BB	DIE REV-52 PCB REV-54	MFR ID-ce80
DIMM 3		SGU04G72H1BD2SA-BB	DIE REV-52 PCB REV-54	MFR ID-ce80
Routing Engine 1	REV 02	740-041821	9009089709	RE-S-1800x4
ad0 3831 MB		UGB30SFA4000T1	SFA4000T1 00000113	Compact Flash
ad1 30533 MB		UGB94ARF32H0S3-KC	UNIGEN-478612-001044	Disk 1
CB 0	REV 08	750-040257	CAAB3482	Control Board
CB 1	REV 04	750-040257	ZT2864	Control Board
SPMB 0	REV 02	711-041855	CAA6141	PMB Board
SPMB 1	REV 01	711-041855	ZS2275	PMB Board
SFB 0	REV 05	711-044466	ABBT2161	Switch Fabric Board
SFB 1	REV 05	711-044466	ABBT2159	Switch Fabric Board
SFB 2	REV 05	711-044466	ABBX3718	Switch Fabric Board
SFB 3	REV 05	711-044466	ABBT2152	Switch Fabric Board
SFB 4	REV 05	711-044466	ABBT2160	Switch Fabric Board
SFB 5	REV 05	711-044466	ABBT2145	Switch Fabric Board
SFB 6	REV 05	711-044466	ABBT2150	Switch Fabric Board
SFB 7	REV 05	711-044466	ABBT2163	Switch Fabric Board

FPC 0	REV 30	750-028467	ABBN0284	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0507	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00990	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04357	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01327	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04375	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02760	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02904	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E03963	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00756	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04418	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01077	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01128	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01253	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01140	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01626	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01075	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01177	SFP+-10G-USR
FPC 1	REV 30	750-028467	ABBN0308	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN1095	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04305	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01147	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01195	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01743	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01892	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02880	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00725	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01057	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02816	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11C04501	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02764	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00789	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01250	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00787	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E03803	SFP+-10G-USR
FPC 2	REV 30	750-028467	ABBN0316	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN1082	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00523	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01848	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01865	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00540	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00422	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00428	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00423	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01855	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01847	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00526	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00529	SFP+-10G-SR

Xcvr 3	REV 01	740-031980	B11K00525	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00425	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00530	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01851	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00528	SFP+-10G-SR
FPC 3	REV 32	750-028467	ABBN6832	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6534	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MB4	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FQ6	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N1F	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLQ	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80KDR	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FGJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N5G	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KD8	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LET	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80N1X	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRF	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL2	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N3D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MRB	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LEQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LER	SFP+-10G-SR
FPC 4	REV 32	750-028467	ABBN6811	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7288	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NK8	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LJC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LBU	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N21	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEU	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLM	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NL6	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LES	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEN	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80ME0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LMG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM1	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MG7	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KF9	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLE	SFP+-10G-SR
FPC 5	REV 32	750-028467	ABBN6791	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7289	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00424	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01849	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01862	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01852	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP
Xcvr 0	REV 01	740-031980	B11K00427	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00430	SFP+-10G-SR

Xcvr 2	REV 01	740-031980	B11K01854	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00426	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00429	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01864	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01850	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00522	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01144	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00985	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00796	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	B11K01866	SFP+-10G-SR
FPC 6	REV 30	750-028467	ABBM4592	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0465	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01435	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01052	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01328	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01254	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02738	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02881	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01624	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00889	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02883	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00681	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04306	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02813	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01801	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02753	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01156	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04324	SFP+-10G-USR
FPC 7	REV 32	750-028467	ABBN6810	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7237	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03058	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02082	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01674	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02638	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03048	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02729	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02566	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02567	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02878	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02739	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01959	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02660	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02731	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02588	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02673	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02654	SFP+-10G-SR
FPC 8	REV 30	750-028467	ABBM4739	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0487	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02569	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	163363A02886	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03082	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	133363A00297	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02726	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03050	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02884	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03076	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02581	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02873	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02582	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03083	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031981	UL70BU6	SFP+-10G-LR
Xcvr 1	REV 01	740-031981	UL50QC6	SFP+-10G-LR
Xcvr 2	REV 01	740-031981	UL708N6	SFP+-10G-LR
Xcvr 3	REV 01	740-031981	UL603KK	SFP+-10G-LR
FPC 9	REV 32	750-028467	ABBN6827	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN6508	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A01688	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A01724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01773	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02593	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03061	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03056	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02669	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03070	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02572	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02697	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02585	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03052	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02591	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02649	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02577	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02698	SFP+-10G-SR
FPC 10	REV 30	750-028467	ABBN0302	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0495	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01581	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01176	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01251	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02752	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00786	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01020	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01023	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02819	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02812	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11D04437	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01279	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01333	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00978	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01018	SFP+-10G-USR



Xcvr 2	REV 01	740-030658	B11F01784	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	AK80NKP	SFP+-10G-SR
FPC 11	REV 32	750-028467	ABBN6790	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6515	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LZM	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MCC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCM	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE0	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021310	C10F99155	SFP+-10G-LRM
Xcvr 1	REV 01	740-021310	C10F99049	SFP+-10G-LRM
Xcvr 2	REV 01	740-021310	C10F99128	SFP+-10G-LRM
Xcvr 3	REV 01	740-021310	C10F99169	SFP+-10G-LRM
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LF3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02597	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03060	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03057	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEX	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FEU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FNM	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AJQ0Q5G	SFP+-10G-SR
FPC 12	REV 30	750-028467	ZM5111	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6607	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LJA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MFZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKL	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KF4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FBJ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MM2	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LJV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NXV	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1H	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLS	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FL5	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG2	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KDU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MG1	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM0	SFP+-10G-SR
FPC 13	REV 30	750-028467	ABBN0208	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABB11084	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04745	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01570	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04388	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01439	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04739	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01869	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01675	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01901	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01346	SFP+-10G-USR

Xcvr 1	REV 01	740-030658	B11F01288	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01824	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04312	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02811	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01495	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01265	SFP+-10G-USR
FPC 14	REV 23	750-028467	YN2977	MPC 3D 16x 10GE
CPU	REV 10	711-029089	YP1856	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00875	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00851	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00772	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00882	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00735	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00169	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00726	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00077	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00168	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00676	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00732	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00091	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00642	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00871	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00853	SFP+-10G-SR
FPC 15	REV 32	750-028467	ABBN6798	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6556	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	9ZDZ06A00055	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00239	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AD0915E003K	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AD0915E003A	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MRC	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NL5	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKN	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N3U	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1T	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ808DJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NG4	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FND	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLT	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKR	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LKM	SFP+-10G-SR
FPC 16	REV 30	750-028467	ABBN0270	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABB30966	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NL1	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NXW	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KD2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FMD	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-031980	AK80NKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MGH	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N38	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL7	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80M5J	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NKD	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCY	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LHK	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEL	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MBE	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NLG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LFH	SFP+-10G-SR
FPC 17	REV 32	750-028467	ABBN6796	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7259	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01856	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01853	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01863	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02863	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02668	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02881	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01671	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02627	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02692	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02730	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03081	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02736	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02568	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02747	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02579	SFP+-10G-SR
FPC 18	REV 30	750-028467	ABBN0281	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0526	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01326	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03973	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00950	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00674	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00775	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04461	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01074	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02821	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04501	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00757	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01623	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01022	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04359	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02751	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02736	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01178	SFP+-10G-USR
FPC 19	REV 32	750-028467	ABBN6813	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6542	AMPC PMB

PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NA3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLF	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MRH	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00030	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80L9H	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80ME8	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLR	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG1	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MCA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LFC	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LEM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N9X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LAC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LF2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N8T	SFP+-10G-SR
ADC 0	REV 13	750-043596	ABBX5561	Adapter Card
ADC 1	REV 13	750-043596	ABBX5546	Adapter Card
ADC 2	REV 13	750-043596	ABBX5535	Adapter Card
ADC 3	REV 13	750-043596	ABBX5552	Adapter Card
ADC 4	REV 13	750-043596	ABBX5581	Adapter Card
ADC 5	REV 13	750-043596	ABBX5545	Adapter Card
ADC 6	REV 13	750-043596	ABBX5554	Adapter Card
ADC 7	REV 07	750-043596	ABBV7194	Adapter Card
ADC 8	REV 07	750-043596	ABBV7251	Adapter Card
ADC 9	REV 07	750-043596	ABBV7202	Adapter Card
ADC 10	REV 13	750-043596	ABBX5579	Adapter Card
ADC 11	REV 13	750-043596	ABBX5548	Adapter Card
ADC 12	REV 13	750-043596	ABBX5575	Adapter Card
ADC 13	REV 13	750-043596	ABBX5539	Adapter Card
ADC 14	REV 13	750-043596	ABBX5555	Adapter Card
ADC 15	REV 13	750-043596	ABBX5557	Adapter Card
ADC 16	REV 13	750-043596	ABBX5536	Adapter Card
ADC 17	REV 13	750-043596	ABBX5559	Adapter Card
ADC 18	REV 13	750-043596	ABBX5537	Adapter Card
ADC 19	REV 11	750-043596	ABBW5685	Adapter Card
Fan Tray 0	REV 04	760-046960	ACAY0090	172mm FanTray - 6 Fans
Fan Tray 1	REV 04	760-046960	ACAY0088	172mm FanTray - 6 Fans
Fan Tray 2	REV 04	760-046960	ACAY0089	172mm FanTray - 6 Fans
Fan Tray 3	REV 04	760-046960	ACAY0108	172mm FanTray - 6 Fans

### show chassis hardware (MX2020 Router with 240-V high-voltage DC PSMs and PDMs)

```
user@host > show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN1248551AFJ	MX2020
Midplane	REV 51	750-040240	ABAD0719	Lower Backplane
Midplane 1	REV 06	711-032386	ABAD1385	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ3828	Upper Power Midplane
PMP 0	REV 04	711-032426	ACAJ3642	Lower Power Midplane
FPM Board	REV 13	760-040242	ABCX9082	Front Panel Display
PSM 0	Rev 02	740-078881	1EDX813007L	MX2K 240V HVDC PSM
PSM 1	Rev 02	740-078881	1EDX81300BB	MX2K 240V HVDC PSM

PSM 2	Rev 02	740-078881	1EDX81300AD	MX2K 240V HVDC PSM
PSM 3	Rev 02	740-078881	1EDX813007D	MX2K 240V HVDC PSM
PSM 4	Rev 02	740-078881	1EDX81300AY	MX2K 240V HVDC PSM
PSM 5	Rev 02	740-078881	1EDX813009B	MX2K 240V HVDC PSM
PSM 6	Rev 02	740-078881	1EDX81300AB	MX2K 240V HVDC PSM
PSM 7	Rev 02	740-078881	1EDX81300A4	MX2K 240V HVDC PSM
PSM 8	Rev 02	740-078881	1EDX81300A6	MX2K 240V HVDC PSM
PSM 9	Rev 02	740-078881	1EDX81300AE	MX2K 240V HVDC PSM
PSM 10	Rev 02	740-078881	1EDX813007N	MX2K 240V HVDC PSM
PSM 11	Rev 02	740-078881	1EDX813009F	MX2K 240V HVDC PSM
PSM 12	Rev 02	740-078881	1EDX81300B3	MX2K 240V HVDC PSM
PSM 13	Rev 02	740-078881	1EDX813008W	MX2K 240V HVDC PSM
PSM 14	Rev 02	740-078881	1EDX813007M	MX2K 240V HVDC PSM
PSM 15	Rev 02	740-078881	1EDX81300AL	MX2K 240V HVDC PSM
PSM 16	Rev 02	740-078881	1EDX813009E	MX2K 240V HVDC PSM
PSM 17	Rev 02	740-078881	1EDX81300A7	MX2K 240V HVDC PSM
PDM 0	REV 01	740-079470	1EFH8130057	MX2K 240V HVDC PDM
PDM 1	REV 01	740-079470	1EFH8130051	MX2K 240V HVDC PDM
PDM 2	REV 01	740-079470	1EFH8130039	MX2K 240V HVDC PDM
PDM 3	REV 01	740-079470	1EFH8130036	MX2K 240V HVDC PDM
Routing Engine 0	REV 03	740-031114	9009053584	RE-S-1800x2
Routing Engine 1	REV 02	740-041821	9009099699	RE-S-1800x4
CB 0	REV 20	750-040257	CAAJ5213	Control Board
CB 1	REV 12	750-040257	CAAD9490	Control Board
SPMB 0	REV 02	711-041855	ABBX5197	PMB Board
SPMB 1	REV 02	711-041855	ABBS1487	PMB Board
SFB 0	REV 05	711-044466	ABBX5586	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD9861	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCG3642	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCG3670	Switch Fabric Board
SFB 4	REV 06	711-044466	ABCG3676	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCY1288	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCG3657	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCG3704	Switch Fabric Board
FPC 0	REV 02	750-038060	CAAD2115	Load DPC
FPC 1	REV 02	750-038060	CAAD2121	Load DPC
FPC 2	REV 01	750-038060	ZS4429	Load DPC
FPC 3	REV 02	750-038060	CAAE6456	Load DPC
FPC 4	REV 02	750-038060	CAAD2111	Load DPC
FPC 5	REV 07	750-038060	CAJW7933	Load DPC
FPC 6	REV 07	750-038060	CAJW7983	Load DPC
FPC 7	REV 02	750-038060	CAAD2124	Load DPC
FPC 8	REV 01	750-038060	ZS4443	Load DPC
FPC 9	REV 02	750-038060	CAAD2120	Load DPC
FPC 13	REV 02	750-038060	CAAD2133	Load DPC
FPC 14	REV 02	750-038060	CAAD2116	Load DPC
FPC 15	REV 02	750-038060	CAAE6464	Load DPC
FPC 16	REV 02	750-038060	CAAD2126	Load DPC
FPC 17	REV 02	750-038060	CAAC0099	Load DPC
ADC 0	REV 17	750-043596	ABCA8963	Adapter Card
ADC 1	REV 15	750-043596	ABCA8119	Adapter Card
ADC 2	REV 17	750-043596	ABCG8929	Adapter Card
ADC 3	REV 15	750-043596	ABCA8113	Adapter Card
ADC 4	REV 15	750-043596	ABCA8099	Adapter Card
ADC 5	REV 19	750-043596	ABCG5703	Adapter Card
ADC 6	REV 17	750-043596	ABCG8960	Adapter Card
ADC 7	REV 19	750-043596	ABCD1988	Adapter Card
ADC 8	REV 07	750-043596	ABBV7184	Adapter Card
ADC 9	REV 15	750-043596	ABCA8107	Adapter Card
ADC 12	REV 17	750-043596	ABBZ2297	Adapter Card

ADC 13	REV 17	750-043596	ABCD5500	Adapter Card
ADC 14	REV 17	750-043596	ABCA8981	Adapter Card
ADC 15	REV 19	750-043596	ABBZ4170	Adapter Card
ADC 16	REV 07	750-043596	ABBV7215	Adapter Card
ADC 17	REV 15	750-043596	ABCA8086	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0860	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY2638	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY1206	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY2693	172mm FanTray - 6 Fans

### show chassis hardware models (MX2020 Router)

```
user@host > show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 27	750-040240	ABAB9384	750-040240
FPM Board	REV 06	760-040242	ABBT8837	760-040242
PSM 0	REV 01	740-045050	1E02224006G	MX2000-PSM-HC-DC-S-A
PSM 1	REV 01	740-045050	1E022240053	MX2000-PSM-HC-DC-S-A
PSM 2	REV 01	740-045050	1E02224004K	MX2000-PSM-HC-DC-S-A
PSM 3	REV 01	740-045050	1E022240056	MX2000-PSM-HC-DC-S-A
PSM 4	REV 01	740-045050	1E022240054	MX2000-PSM-HC-DC-S-A
PSM 5	REV 01	740-045050	1E02224005H	MX2000-PSM-HC-DC-S-A
PSM 6	REV 01	740-045050	1E02224006S	MX2000-PSM-HC-DC-S-A
PSM 7	REV 01	740-045050	1E02224005M	MX2000-PSM-HC-DC-S-A
PSM 8	REV 01	740-045050	1E022240062	MX2000-PSM-HC-DC-S-A
PSM 9	REV 03	740-045050	1EDB2350095	MX2000-PSM-DC-S-A
PSM 10	REV 03	740-045050	1EDB235009L	MX2000-PSM-DC-S-A
PSM 11	REV 03	740-045050	1EDB2350092	MX2000-PSM-DC-S-A
PSM 12	REV 03	740-045050	1EDB23500AT	MX2000-PSM-DC-S-A
PSM 13	REV 03	740-045050	1EDB2350094	MX2000-PSM-DC-S-A
PSM 15	REV 03	740-045050	1EDB235008X	MX2000-PSM-DC-S-A
PDM 0	REV 01	740-045234	1E012150033	
PDM 1	REV 01	740-045234	1E012150027	
PDM 2	REV 01	740-045234	1E262250072	MX2000-PDM-DC-S-A
Routing Engine 0	REV 02	740-041821	9009094138	RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821	9009089709	RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	CAAB3482	750-040257
CB 1	REV 04	750-040257	ZT2864	750-040257
SFB 0	REV 05	711-044466	ABBT2161	MX2000-SFB-S
SFB 1	REV 05	711-044466	ABBT2159	MX2000-SFB-S
SFB 2	REV 05	711-044466	ABBX3718	MX2000-SFB-S
SFB 4	REV 05	711-044466	ABBT2160	MX2000-SFB-S
SFB 5	REV 05	711-044466	ABBT2145	MX2000-SFB-S
SFB 7	REV 05	711-044466	ABBT2163	MX2000-SFB-S
FPC 0	REV 30	750-028467	ABBN0284	MPC-3D-16XGE-SFPP
FPC 1	REV 30	750-028467	ABBN0308	MPC-3D-16XGE-SFPP
FPC 2	REV 30	750-028467	ABBN0316	MPC-3D-16XGE-SFPP
FPC 3	REV 32	750-028467	ABBN6832	MPC-3D-16XGE-SFPP
FPC 4	REV 32	750-028467	ABBN6811	MPC-3D-16XGE-SFPP
FPC 5	REV 32	750-028467	ABBN6791	MPC-3D-16XGE-SFPP
FPC 6	REV 30	750-028467	ABBM4592	MPC-3D-16XGE-SFPP
FPC 7	REV 32	750-028467	ABBN6810	MPC-3D-16XGE-SFPP
FPC 8	REV 30	750-028467	ABBM4739	MPC-3D-16XGE-SFPP
FPC 9	REV 32	750-028467	ABBN6827	MPC-3D-16XGE-SFPP
FPC 10	REV 30	750-028467	ABBN0302	MPC-3D-16XGE-SFPP
FPC 11	REV 32	750-028467	ABBN6790	MPC-3D-16XGE-SFPP
FPC 12	REV 30	750-028467	ZM5111	MPC-3D-16XGE-SFPP
FPC 13	REV 30	750-028467	ABBN0208	MPC-3D-16XGE-SFPP

FPC 14	REV 23	750-028467	YN2977	MPC-3D-16XGE-SFPP
FPC 15	REV 32	750-028467	ABBN6798	MPC-3D-16XGE-SFPP
FPC 16	REV 30	750-028467	ABBN0270	MPC-3D-16XGE-SFPP
FPC 17	REV 32	750-028467	ABBN6796	MPC-3D-16XGE-SFPP
FPC 18	REV 30	750-028467	ABBN0281	MPC-3D-16XGE-SFPP
FPC 19	REV 32	750-028467	ABBN6813	MPC-3D-16XGE-SFPP
ADC 0	REV 13	750-043596	ABBX5561	PROTO-ASSEMBLY
ADC 1	REV 13	750-043596	ABBX5546	PROTO-ASSEMBLY
ADC 2	REV 13	750-043596	ABBX5535	MX2000-LC-ADAPTER
ADC 3	REV 13	750-043596	ABBX5552	MX2000-LC-ADAPTER
ADC 4	REV 13	750-043596	ABBX5581	MX2000-LC-ADAPTER
ADC 5	REV 13	750-043596	ABBX5545	PROTO-ASSEMBLY
ADC 6	REV 13	750-043596	ABBX5554	PROTO-ASSEMBLY
ADC 7	REV 07	750-043596	ABBV7194	MX2000-LC-ADAPTER
ADC 8	REV 07	750-043596	ABBV7251	MX2000-LC-ADAPTER
ADC 9	REV 07	750-043596	ABBV7202	MX2000-LC-ADAPTER
ADC 10	REV 13	750-043596	ABBX5579	MX2000-LC-ADAPTER
ADC 12	REV 13	750-043596	ABBX5575	MX2000-LC-ADAPTER
ADC 13	REV 13	750-043596	ABBX5539	PROTO-ASSEMBLY
ADC 14	REV 13	750-043596	ABBX5555	PROTO-ASSEMBLY
ADC 15	REV 13	750-043596	ABBX5557	MX2000-LC-ADAPTER
ADC 16	REV 13	750-043596	ABBX5536	PROTO-ASSEMBLY
ADC 17	REV 13	750-043596	ABBX5559	PROTO-ASSEMBLY
ADC 18	REV 13	750-043596	ABBX5537	PROTO-ASSEMBLY
ADC 19	REV 11	750-043596	ABBW5685	PROTO-ASSEMBLY
Fan Tray 0	REV 04	760-046960	ACAY0090	
Fan Tray 1	REV 04	760-046960	ACAY0088	
Fan Tray 2	REV 04	760-046960	ACAY0089	
Fan Tray 3	REV 04	760-046960	ACAY0108	

### show chassis hardware clei-models (MX2020 Router)

```
user@ host > show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 27	750-040240	PROTOXCLEI	750-040240
FPM Board	REV 06	760-040242	PROTOXCLEI	760-040242
PSM 0	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 1	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 2	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 3	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 4	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 5	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 6	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 7	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 8	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 9	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 10	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 11	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 12	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 13	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 15	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PDM 0	REV 01	740-045234		
PDM 1	REV 01	740-045234		
PDM 2	REV 01	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S-A
Routing Engine 0	REV 02	740-041821		RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821		RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	PROTOXCLEI	750-040257
CB 1	REV 04	750-040257	PROTOXCLEI	750-040257

SFB 0	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 1	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 2	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 4	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 5	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 7	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
FPC 0	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 1	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 2	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 3	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 4	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 5	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 6	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 7	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 8	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 9	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 10	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 11	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 12	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 13	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 14	REV 23	750-028467		MPC-3D-16XGE-SFPP
FPC 15	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 16	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 17	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 18	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 19	REV 32	750-028467		MPC-3D-16XGE-SFPP
ADC 0	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 1	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 2	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 3	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 4	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 5	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 6	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 7	REV 07	750-043596	PROTOXCLEI	MX2000-LC-ADAPTER
ADC 8	REV 07	750-043596	PROTOXCLEI	MX2000-LC-ADAPTER
ADC 9	REV 07	750-043596	PROTOXCLEI	MX2000-LC-ADAPTER
ADC 10	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 12	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 13	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 14	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 15	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 16	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 17	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 18	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 19	REV 11	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
Fan Tray 0	REV 04	760-046960		
Fan Tray 1	REV 04	760-046960		
Fan Tray 2	REV 04	760-046960		
Fan Tray 3	REV 04	760-046960		

### show chassis hardware (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN120BADBAFJ	MX2020
Midplane	REV 51	750-040240	ABAB9243	Lower Backplane
Midplane 1	REV 04	711-032386	ABAB9399	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ2541	Upper Power Midplane



PMP 0	REV 04	711-032426	ACAJ2194	Lower Power Midplane
FPM Board	REV 13	760-040242	ABCA8835	Front Panel Display
Module	REV 01	740-050037	1EDB32403L5	DC 52V Power Supply
PSM 1	REV 01	740-050037	1EDB32403L3	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32403KM	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB3130079	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB3130077	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB3130020	DC 52V Power Supply
Module				
PSM 6	REV 01	740-050037	1EDB313009S	DC 52V Power Supply
Module				
PSM 7	REV 01	740-050037	1EDB313008E	DC 52V Power Supply
Module				
PSM 8	REV 01	740-050037	1EDB3130063	DC 52V Power Supply
Module				
PSM 12	REV 01	740-050037	1EDB3130026	DC 52V Power Supply
Module				
PSM 13	REV 01	740-050037	1EDB3130074	DC 52V Power Supply
Module				
PSM 14	REV 01	740-050037	1EDB313009D	DC 52V Power Supply
Module				
PSM 15	REV 01	740-050037	1EDB3130024	DC 52V Power Supply
Module				
PSM 16	REV 01	740-050037	1EDB3130054	DC 52V Power Supply
Module				
PSM 17	REV 01	740-050037	1EDB3130080	DC 52V Power Supply
Module				
PDM 0	REV 03	740-045234	1EGA3170144	DC Power Dist Module
PDM 1	REV 03	740-045234	1EGA3170158	DC Power Dist Module
PDM 2	REV 03	740-045234	1EGA3170182	DC Power Dist Module
PDM 3	REV 03	740-045234	1EGA3170207	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009112112	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009112087	RE-S-1800x4
CB 0	REV 23	750-040257	CABA2295	Control Board
CB 1	REV 23	750-040257	CABE8379	Control Board
SPMB 0	REV 02	711-041855	ABCE8851	PMB Board
SPMB 1	REV 02	711-041855	ABCE8839	PMB Board
SFB 0	REV 06	711-044466	ABCD5001	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD5034	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCH3899	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCD5020	Switch Fabric Board
SFB 4	REV 06	711-044466	ABCD4975	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCH3881	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCD5026	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCD5032	Switch Fabric Board
FPC 0	REV 39	750-045715	CACD1902	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACB1933	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	B11F00361	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	19T511101854	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	19T511100377	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	ANT0878	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	19T511100398	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ4363J	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	19T511101377	SFP+-10G-SR

Xcvr 8	REV 01	740-031980	ANT072M	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AG90C7N	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AM30M09	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B10E01016	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	B10L04151	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	19T511101379	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5036J	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AG90C4M	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	19T511101104	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ502ZM	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AN10KY2	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ43G41	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ41F04	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AMS16N3	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AMH04Y3	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	ANA093E	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 09	750-049136	CABN0410	MPC5E 24XGE OTN Mezz
FPC 1	REV 11	750-045372	CABK8112	MPCE Type 3 3D
CPU	REV 08	711-035209	CABJ6621	HMPC PMB 2G
MIC 0	REV 07	750-033307	CAAZ2897	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-021308	AQ501VK	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501YC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HJF	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43H8D	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	19T511100370	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	153363A00763	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	APH2LXB	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AMCOLVV	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B11F00230	SFP+-10G-SR
MIC 1	REV 14	750-033196	CAAP1390	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-032166	XB11F000M	CFP2-100G-SR10
FPC 2	REV 17	750-037355	CAAS5826	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAR3986	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	T09F43722	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	ALP0KXF	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502FC	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502T7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00571	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	AJ71KEH	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11E01355	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11F00249	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
FPC 3	REV 05	750-044444	CAAY9920	MPCE Type 2 3D P
CPU	REV 04	711-038484	CAAW3639	MPCE PMB 2G
MIC 0	REV 28	750-028387	CAAX1083	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	CC07BK05B	XFP-10G-SR
Xcvr 1	REV 01	740-011571	C728XJ00U	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T12L92339	XFP-10G-SR
QXM 0	REV 06	711-028408	CAAW4915	MPC QXM
QXM 1	REV 06	711-028408	CAAW4894	MPC QXM

FPC 4	REV 18	750-046005	CACH5661	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACF2880	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03Y	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-049775	J13K72997	CFP2-100G-LR4-D
FPC 5	REV 35	750-028467	CAAR2623	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAR0491	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ5027T	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502J0	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5027S	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ501Y7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ501YB	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ503EB	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HJH	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43J0Y	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ50352	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501X6	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502NV	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502ZJ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ502H4	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43HJK	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJ30CU7	SFP+-10G-SR
FPC 9	REV 30	750-044130	ABCF5773	MPC6E 3D
CPU	REV 09	711-045719	ABCF1270	RMPC PMB
MIC 0	REV 05	750-049457	ABCD7829	2X100GE CFP2 OTN
PIC 0		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000K	CFP2-100G-SR10
Xcvr 1	REV 01	740-048813	XD32FE017	CFP2-100G-LR-D
MIC 1	REV 07	750-049457	ABCK2812	2X100GE CFP2 OTN
PIC 1		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0	REV 01	740-048813	XD32FE018	CFP2-100G-SR10
Xcvr 1		NON-JNPR	FE13F000E	CFP2-100G-LR4-D
XLM 0	REV 05.2.00	711-046638	ABCF5915	MPC6E XL
XLM 1	REV 05.2.00	711-046638	ABCF5916	MPC6E XL
FPC 10	REV 36	750-044130	ABCS8602	MPC6E 3D
CPU	REV 09	711-045719	ABCS8779	RMPC PMB
MIC 0	REV 06	750-049979	ABCK2656	24X10GE SFPP OTN
PIC 0		BUILTIN	BUILTIN	24X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQ43J08	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQE1Y2E	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQE1UW4	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQE1MQF	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQGOMN1	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQE1L9M	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQGOMPD	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQE1Y2B	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQGOLT5	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQD2ET4	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQGOMPC	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQGOM63	SFP+-10G-SR
Xcvr 12	REV 01	740-021308	AQGOLT1	SFP+-10G-SR
Xcvr 13	REV 01	740-021308	AQGOM4L	SFP+-10G-SR
Xcvr 14	REV 01	740-021308	AQGOLS7	SFP+-10G-SR

Xcvr 15	REV 01	740-021308	AQE1MQB	SFP+-10G-SR
Xcvr 16	REV 01	740-021308	AQGOLZP	SFP+-10G-SR
Xcvr 17	REV 01	740-021308	AQE1LU9	SFP+-10G-SR
Xcvr 18	REV 01	740-021308	AQGOMRZ	SFP+-10G-SR
Xcvr 19	REV 01	740-021308	AQE1MQ9	SFP+-10G-SR
Xcvr 20	REV 01	740-021308	AQGOLRX	SFP+-10G-SR
Xcvr 21	REV 01	740-021308	AQE1UWD	SFP+-10G-SR
Xcvr 22	REV 01	740-021308	AQGOLT4	SFP+-10G-SR
Xcvr 23	REV 01	740-021308	AQE1MQL	SFP+-10G-SR
MIC 1	REV 12	750-050008	ABCK5372	4X100GE CXP
PIC 1		BUILTIN	BUILTIN	4X100GE CXP
Xcvr 3	REV 01	740-046563	XD16FC02Z	CFP2-100G-SR10
XLM 0	REV 07.2.00	711-046638	ABCK3481	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK4725	MPC6E XL
FPC 17	REV 28	750-044130	ABBZ3873	MPC6E 3D
CPU	REV 08	711-045719	ABBZ3770	RMPK PMB
MIC 0	REV 11	750-046535	ABCC7731	24X10GE SFPP
PIC 0		BUILTIN	BUILTIN	24X10GE SFPP
Xcvr 1	REV 01	740-021308	APK0543	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10G01119	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502SX	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQ43H84	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ501TB	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ502JZ	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ502SC	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ502JW	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQ502RM	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AHK013B	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQGOMRT	SFP+-10G-SR
Xcvr 13	REV 01	740-031980	AMC0JTC	SFP+-10G-SR
Xcvr 14	REV 01	740-021308	ANAOMQ0	SFP+-10G-SR
Xcvr 15	REV 01	740-021308	AQ502GS	SFP+-10G-SR
Xcvr 16	REV 01	740-021308	AQGOM0J	SFP+-10G-SR
Xcvr 17	REV 01	740-021308	AQGOMUR	SFP+-10G-SR
Xcvr 18	REV 01	740-021308	AQGOMRR	SFP+-10G-SR
Xcvr 19	REV 01	740-021308	AQGOM0F	SFP+-10G-SR
Xcvr 20	REV 01	740-021308	AQ50312	SFP+-10G-SR
Xcvr 21	REV 01	740-021308	AQ5032U	SFP+-10G-SR
Xcvr 22	REV 01	740-021308	APE17B5	SFP+-10G-SR
Xcvr 23	REV 01	740-021309	91D104A00011	SFP+-10G-LR
MIC 1	REV 03	750-050008	ABCC4522	4X100GE CXP
PIC 1		BUILTIN	BUILTIN	4X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC02U	CFP2-100G-SR10
Xcvr 1	REV 01	740-046563	XC42FC03K	CFP2-100G-SR10
Xcvr 2	REV 01	740-046563	XC42FC01Z	CFP2-100G-SR10
Xcvr 3	REV 01	740-046563	XC42FC02U	CFP2-100G-SR10
XLM 0	REV 04.2.00	711-046638	ABBZ3779	MPC6E XL
XLM 1	REV 04.2.00	711-046638	ABBZ3780	MPC6E XL
FPC 18	REV 39	750-045715	CACD1910	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1817	RMPK PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130194	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130193	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130196	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130191	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130198	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130192	QSFP+-40G-SR4

WAN MEZZ	REV 09	750-049136	CABN0411	MPC5E 24XGE OTN Mezz
FPC 19	REV 39	750-045715	CACD1908	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1820	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA0EXJ	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOM6D	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQGOLW7	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQA0JKB	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQGOMTM	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQA07NE	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQGOM41	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQGOMU7	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQGOMUG	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQGOMMX	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQGOM5K	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQGOLVZ	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130242	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130245	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130613	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0418	MPC5E 24XGE OTN Mezz
ADC 0	REV 17	750-043596	ABCD5378	Adapter Card
ADC 1	REV 17	750-043596	ABCD5465	Adapter Card
ADC 2	REV 17	750-043596	ABCD5431	Adapter Card
ADC 3	REV 17	750-043596	ABCD5356	Adapter Card
ADC 4	REV 02	750-043596	ZW1545	Adapter Card
ADC 5	REV 17	750-043596	ABCD5517	Adapter Card
ADC 18	REV 17	750-043596	ABCD5535	Adapter Card
ADC 19	REV 01	750-043596	ZV4127	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0791	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0788	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0755	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0441	172mm FanTray - 6 Fans

### show chassis hardware detail (MX2020 Router with MPC5EQ and MPC6E)

```
user@host>show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN120BADBAFJ	MX2020
Midplane	REV 51	750-040240	ABAB9243	Lower Backplane
Midplane 1	REV 04	711-032386	ABAB9399	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ2541	Upper Power Midplane
PMP 0	REV 04	711-032426	ACAJ2194	Lower Power Midplane
FPM Board	REV 13	760-040242	ABCA8835	Front Panel Display
PSM 0	REV 01	740-050037	1EDB32403L5	DC 52V Power Supply
Module				
PSM 1	REV 01	740-050037	1EDB32403L3	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32403KM	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB3130079	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB3130077	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB3130020	DC 52V Power Supply
Module				

PSM 6 Module	REV 01	740-050037	1EDB313009S	DC 52V Power Supply
PSM 7 Module	REV 01	740-050037	1EDB313008E	DC 52V Power Supply
PSM 8 Module	REV 01	740-050037	1EDB3130063	DC 52V Power Supply
PSM 12 Module	REV 01	740-050037	1EDB3130026	DC 52V Power Supply
PSM 13 Module	REV 01	740-050037	1EDB3130074	DC 52V Power Supply
PSM 14 Module	REV 01	740-050037	1EDB313009D	DC 52V Power Supply
PSM 15 Module	REV 01	740-050037	1EDB3130024	DC 52V Power Supply
PSM 16 Module	REV 01	740-050037	1EDB3130054	DC 52V Power Supply
PSM 17 Module	REV 01	740-050037	1EDB3130080	DC 52V Power Supply
PDM 0	REV 03	740-045234	1EGA3170144	DC Power Dist Module
PDM 1	REV 03	740-045234	1EGA3170158	DC Power Dist Module
PDM 2	REV 03	740-045234	1EGA3170182	DC Power Dist Module
PDM 3	REV 03	740-045234	1EGA3170207	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009112112	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive		VCF P1T0200274310822	113 Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI		11000031656	Disk 1
usb0 (addr 1)	EHCI root hub 0		Intel	uhub0
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub1
DIMM 0	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80			
DIMM 1	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80			
DIMM 2	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80			
DIMM 3	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80			
Routing Engine 1	REV 02	740-041821	9009112087	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive		VCF P1T0200274310822	366 Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI		11000039979	Disk 1
CB 0	REV 23	750-040257	CABA2295	Control Board
CB 1	REV 23	750-040257	CABE8379	Control Board
SPMB 0				
SPMB 1				
FPC 0 CPU	REV 39	750-045715	CACD1902	MPC5E 3D Q 24XGE+6XLGE
FPC 1 CPU	REV 11	750-045372	CABK8112	MPCE Type 3 3D
FPC 2 CPU	REV 17	750-037355	CAAS5826	MPC4E 3D 2CGE+8XGE
FPC 3 CPU	REV 05	750-044444	CAAY9920	MPCE Type 2 3D P
FPC 4 CPU	REV 18	750-046005	CACH5661	MPC5E 3D Q 2CGE+4XGE
FPC 5 CPU	REV 35	750-028467	CAAR2623	MPC 3D 16x 10GE
FPC 9 CPU	REV 30	750-044130	ABCF5773	MPC6E 3D
FPC 10 CPU	REV 36	750-044130	ABCS8602	MPC6E 3D
FPC 17 CPU	REV 28	750-044130	ABBZ3873	MPC6E 3D
FPC 18 CPU	REV 39	750-045715	CACD1910	MPC5E 3D Q 24XGE+6XLGE
FPC 19 CPU	REV 39	750-045715	CACD1908	MPC5E 3D Q 24XGE+6XLGE

Fan Tray 0	REV 06	760-046960	ACAY0791	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0788	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0755	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0441	172mm FanTray - 6 Fans

### show chassis hardware extensive (MX2020 Router with MPC5EQ and MPC6E)

```

user@host> show chassis hardware extensive

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN120BADBAFJ    MX2020
Jedec Code:   0x7fb0                    EEPROM Version: 0x02
                                           S/N:           JN120BADBAFJ
Assembly ID:  0x0557                    Assembly Version: 00.00
Date:         00-00-0000                 Assembly Flags:  0x00
ID: MX2020
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 32 30 42 41 44 42 41 46 4a 00 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 51    750-040240    ABAB9243          Lower Backplane
Jedec Code:   0x7fb0                    EEPROM Version: 0x02
P/N:         750-040240                 S/N:           ABAB9243
Assembly ID:  0x0b22                    Assembly Version: 01.51
Date:         05-30-2013                 Assembly Flags: 0x00
Version:      REV 51                    CLEI Code:     IPMU710ARA
ID: Lower Backplane                     FRU Model Number: CHAS-BP-MX2020-S
Board Information Record:
Address 0x00: ad 01 10 00 4c 96 14 72 30 08 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 22 01 33 52 45 56 20 35 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 30 32 34 30 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 39 32 34 33 00 1e 05 07
Address 0x30: dd ff ff ff ad 01 10 00 4c 96 14 72 30 08 ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 55 37 31 30 41 52 41 43
Address 0x50: 48 41 53 2d 42 50 2d 4d 58 32 30 32 30 2d 53 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d3 ff ff ff ff ff ff ff ff ff ff ff ff
Midplane 1    REV 04    711-032386    ABAB9399          Upper Backplane
Jedec Code:   0x7fb0                    EEPROM Version: 0x01
P/N:         711-032386                 S/N:           ABAB9399
Assembly ID:  0x0b23                    Assembly Version: 01.04
Date:         10-22-2012                 Assembly Flags: 0x00
Version:      REV 04
ID: Upper Backplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 fe 0b 23 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 33 38 36 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 39 33 39 39 00 16 0a 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

```

Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP 1          REV 05   711-032428   ACAJ2541          Upper Power Midplane
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-032428      S/N:           ACAJ2541
Assembly ID:   0x045c          Assembly Version: 01.05
Date:          04-26-2013      Assembly Flags: 0x00
Version:       REV 05
ID: Upper Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5c 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 38 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 32 35 34 31 00 1a 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP 0          REV 04   711-032426   ACAJ2194          Lower Power Midplane
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-032426      S/N:           ACAJ2194
Assembly ID:   0x045d          Assembly Version: 01.04
Date:          01-29-2013      Assembly Flags: 0x00
Version:       REV 04
ID: Lower Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5d 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 36 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 32 31 39 34 00 1d 01 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board      REV 13   760-040242   ABCA8835          Front Panel Display
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           760-040242      S/N:           ABCA8835
Assembly ID:   0x0b24          Assembly Version: 01.13
Date:          04-13-2013      Assembly Flags: 0x00
Version:       REV 13          CLEI Code:       IPMYAESJRA
ID: Front Panel Display      FRU Model Number: MX2020-CRAFT-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 24 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 34 30 32 34 32 00 00
Address 0x20: 53 2f 4e 20 41 42 43 41 38 38 33 35 00 0d 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 59 41 45 35 4a 52 41 4d
Address 0x50: 58 32 30 32 30 2d 43 52 41 46 54 2d 53 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 95 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0          REV 01   740-050037   1EDB32403L5      DC 52V Power Supply
Module

```



```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB32403L5
Assembly ID: 0x0478     Assembly Version: 01.01
Date: 06-21-2013       Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 34 30 33 4c 35 00 00 15 06 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 1          REV 01 740-050037 1EDB32403L3 DC 52V Power Supply
Module
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB32403L3
Assembly ID: 0x0478     Assembly Version: 01.01
Date: 06-21-2013       Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 34 30 33 4c 33 00 00 15 06 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 2          REV 01 740-050037 1EDB32403KM DC 52V Power Supply
Module
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB32403KM
Assembly ID: 0x0478     Assembly Version: 01.01
Date: 06-21-2013       Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 34 30 33 4b 4d 00 00 15 06 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 3          REV 01 740-050037 1EDB3130079 DC 52V Power Supply
Module
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB3130079
Assembly ID: 0x0478     Assembly Version: 01.01

```

```

Date:          05-16-2013      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 31 33 30 30 37 39 00 00 10 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 4          REV 01    740-050037    1EDB3130077    DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:          740-050037      S/N:            1EDB3130077
Assembly ID:   0x0478         Assembly Version: 01.01
Date:         05-17-2013      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 31 33 30 30 37 37 00 00 11 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 5          REV 01    740-050037    1EDB3130020    DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:          740-050037      S/N:            1EDB3130020
Assembly ID:   0x0478         Assembly Version: 01.01
Date:         05-16-2013      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 31 33 30 30 32 30 00 00 10 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 6          REV 01    740-050037    1EDB313009S    DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:          740-050037      S/N:            1EDB313009S
Assembly ID:   0x0478         Assembly Version: 01.01
Date:         05-17-2013      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-DC-S

```

```

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 39 53 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 7          REV 01   740-050037   1EDB313008E   DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version: 0x02
P/N:           740-050037      S/N:           1EDB313008E
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-17-2013      Assembly Flags: 0x00
Version:       REV 01          CLEI Code:     IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 38 45 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 8          REV 01   740-050037   1EDB3130063   DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version: 0x02
P/N:           740-050037      S/N:           1EDB3130063
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-17-2013      Assembly Flags: 0x00
Version:       REV 01          CLEI Code:     IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 36 33 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 12         REV 01   740-050037   1EDB3130026   DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version: 0x02
P/N:           740-050037      S/N:           1EDB3130026
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-16-2013      Assembly Flags: 0x00
Version:       REV 01          CLEI Code:     IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:

```

```

Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 32 36 00 00 10 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 13          REV 01   740-050037   1EDB3130074          DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB3130074
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-17-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 37 34 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 14          REV 01   740-050037   1EDB313009D          DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB313009D
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-17-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 39 44 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 15          REV 01   740-050037   1EDB3130024          DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB3130024
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-16-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
...

```

## show chassis hardware models (MX2020 Routers with MPC5EQ and MPC6E)

user@host&gt; show chassis hardware models

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 51	750-040240	ABAB9243	CHAS-BP-MX2020-S
FPM Board	REV 13	760-040242	ABCA8835	MX2020-CRAFT-S
PSM 0	REV 01	740-050037	1EDB32403L5	MX2000-PSM-DC-S
PSM 1	REV 01	740-050037	1EDB32403L3	MX2000-PSM-DC-S
PSM 2	REV 01	740-050037	1EDB32403KM	MX2000-PSM-DC-S
PSM 3	REV 01	740-050037	1EDB3130079	MX2000-PSM-DC-S
PSM 4	REV 01	740-050037	1EDB3130077	MX2000-PSM-DC-S
PSM 5	REV 01	740-050037	1EDB3130020	MX2000-PSM-DC-S
PSM 6	REV 01	740-050037	1EDB313009S	MX2000-PSM-DC-S
PSM 7	REV 01	740-050037	1EDB313008E	MX2000-PSM-DC-S
PSM 8	REV 01	740-050037	1EDB3130063	MX2000-PSM-DC-S
PSM 12	REV 01	740-050037	1EDB3130026	MX2000-PSM-DC-S
PSM 13	REV 01	740-050037	1EDB3130074	MX2000-PSM-DC-S
PSM 14	REV 01	740-050037	1EDB313009D	MX2000-PSM-DC-S
PSM 15	REV 01	740-050037	1EDB3130024	MX2000-PSM-DC-S
PSM 16	REV 01	740-050037	1EDB3130054	MX2000-PSM-DC-S
PSM 17	REV 01	740-050037	1EDB3130080	MX2000-PSM-DC-S
PDM 0	REV 03	740-045234	1EGA3170144	MX2000-PDM-DC-S
PDM 1	REV 03	740-045234	1EGA3170158	MX2000-PDM-DC-S
PDM 2	REV 03	740-045234	1EGA3170182	MX2000-PDM-DC-S
PDM 3	REV 03	740-045234	1EGA3170207	MX2000-PDM-DC-S
Routing Engine 0	REV 02	740-041821	9009112112	RE-MX2000-1800X4-S
Routing Engine 1	REV 02	740-041821	9009112087	RE-MX2000-1800X4-S
CB 0	REV 23	750-040257	CABA2295	RE-MX2000-1800X4-S
CB 1	REV 23	750-040257	CABE8379	RE-MX2000-1800X4-S
SFB 0	REV 06	711-044466	ABCD5001	MX2000-SFB-S
SFB 1	REV 06	711-044466	ABCD5034	MX2000-SFB-S
SFB 2	REV 06	711-044466	ABCH3899	MX2000-SFB-S
SFB 3	REV 06	711-044466	ABCD5020	MX2000-SFB-S
SFB 4	REV 06	711-044466	ABCD4975	MX2000-SFB-S
SFB 5	REV 06	711-044466	ABCH3881	MX2000-SFB-S
SFB 6	REV 06	711-044466	ABCD5026	MX2000-SFB-S
SFB 7	REV 06	711-044466	ABCD5032	MX2000-SFB-S
FPC 0	REV 39	750-045715	CACD1902	PROTO-ASSEMBLY
FPC 1	REV 11	750-045372	CABK8112	MX-MPC3E-3D
FPC 2	REV 17	750-037355	CAAS5826	MPC4E-3D-2CGE-8XGE
FPC 3	REV 05	750-044444	CAAY9920	MX-MPC2E-3D-P
FPC 4	REV 18	750-046005	CACH5661	PROTO-ASSEMBLY
FPC 5	REV 35	750-028467	CAAR2623	MPC-3D-16XGE-SFPP
FPC 9	REV 30	750-044130	ABCF5773	PROTO-ASSEMBLY
FPC 10	REV 36	750-044130	ABCS8602	PROTO-ASSEMBLY
FPC 17	REV 28	750-044130	ABBZ3873	PROTO-ASSEMBLY
FPC 18	REV 39	750-045715	CACD1910	PROTO-ASSEMBLY
FPC 19	REV 39	750-045715	CACD1908	PROTO-ASSEMBLY
ADC 0	REV 17	750-043596	ABCD5378	MX2000-LC-ADAPTER
ADC 1	REV 17	750-043596	ABCD5465	MX2000-LC-ADAPTER
ADC 2	REV 17	750-043596	ABCD5431	MX2000-LC-ADAPTER
ADC 3	REV 17	750-043596	ABCD5356	MX2000-LC-ADAPTER
ADC 4	REV 02	750-043596	ZW1545	750-043596
ADC 5	REV 17	750-043596	ABCD5517	MX2000-LC-ADAPTER
ADC 18	REV 17	750-043596	ABCD5535	MX2000-LC-ADAPTER
ADC 19	REV 01	750-043596	ZV4127	750-043596
Fan Tray 0	REV 06	760-046960	ACAY0791	MX2000-FANTRAY-S
Fan Tray 1	REV 06	760-046960	ACAY0788	MX2000-FANTRAY-S

Fan Tray 2	REV 06	760-046960	ACAY0755	MX2000-FANTRAY-S
Fan Tray 3	REV 06	760-046960	ACAY0441	MX2000-FANTRAY-S

### show chassis hardware clei-models (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 51	750-040240	IPMU710ARA	CHAS-BP-MX2020-S
FPM Board	REV 13	760-040242	IPMYAE5JRA	MX2020-CRAFT-S
PSM 0	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 1	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 2	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 3	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 4	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 5	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 6	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 7	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 8	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 12	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 13	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 14	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 15	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 16	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 17	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PDM 0	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
PDM 1	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
PDM 2	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
PDM 3	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
CB 0	REV 23	750-040257	IPUCBA7CTA	RE-MX2000-1800X4-S
CB 1	REV 23	750-040257	IPUCBA7CTA	RE-MX2000-1800X4-S
SFB 0	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 1	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 2	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 3	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 4	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 5	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 6	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 7	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
FPC 0	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 1	REV 11	750-045372	COUIBBNBAA	MX-MPC3E-3D
FPC 2	REV 17	750-037355	IPU3A4DHAA	MPC4E-3D-2CGE-8XGE
FPC 3	REV 05	750-044444	COUIBBGBAA	MX-MPC2E-3D-P
MIC 0	REV 28	750-028387	COUIA16BAA	MIC-3D-4XGE-XFP
FPC 4	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 5	REV 35	750-028467		MPC-3D-16XGE-SFPP
FPC 9	REV 30	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 05	750-049457	PROTOXCLEI	PROTO-ASSEMBLY
FPC 10	REV 36	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 06	750-049979	PROTOXCLEI	PROTO-ASSEMBLY
MIC 1	REV 12	750-050008	PROTOXCLEI	PROTO-ASSEMBLY
FPC 17	REV 28	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 1	REV 03	750-050008	PROTOXCLEI	PROTO-ASSEMBLY
FPC 18	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 19	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
ADC 0	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 1	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 2	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 3	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER

ADC 4	REV 02	750-043596	PROTOXCLEI	750-043596
ADC 5	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 18	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 19	REV 01	750-043596	PROTOXCLEI	750-043596
Fan Tray 0	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S
Fan Tray 1	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S
Fan Tray 2	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S
Fan Tray 3	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S

### show chassis hardware (MX Series routers with ATM MIC)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN115736EAFc	MX240
Midplane	REV 07	760-021404	ABAA5038	MX240 Backplane
FPM Board	REV 03	760-021392	ABBA2758	Front Panel Display
PEM 0	Rev 01	740-022697	QCS0937C07K	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 01	740-022697	QCS0939C04X	PS 1.2-1.7kW; 100-240V
AC in				
PEM 2	Rev 01	740-022697	QCS0937C06B	PS 1.2-1.7kW; 100-240V
AC in				
PEM 3	Rev 01	740-022697	QCS0937C07U	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 12	740-013063	9009042291	RE-S-2000
Routing Engine 1	REV 12	740-013063	9009042266	RE-S-2000
CB 0	REV 06	710-021523	ABBC1435	MX SCB
CB 1	REV 06	710-021523	ABBC1497	MX SCB
FPC 2	REV 14	750-031088	YH8446	MPC Type 2 3D Q
CPU	REV 06	711-030884	YH9612	MPC PMB 2G
MIC 0				
MIC 1	REV 10	750-036132	ZP7062	2x0C12/8x0C3 CC-CE
PIC 2		BUILTIN	BUILTIN	2x0C12/8x0C3 CC-CE
Xcvr 0	NON-JNPR	23393-00492		UNKNOWN
Xcvr 1	NON-JNPR	23393-00500		UNKNOWN
Xcvr 2	NON-JNPR	23393-00912		UNKNOWN
Xcvr 3	REV 01	740-015638	22216-00575	Load SFP
Xcvr 4	REV 01	740-015638	24145-00110	Load SFP
Xcvr 5	REV 01	740-015638	24145-00016	Load SFP
Xcvr 6	REV 01	740-015638	24145-00175	Load SFP
Xcvr 7	NON-JNPR	23393-00627		UNKNOWN
QXM 0	REV 05	711-028408	YF4681	MPC QXM
QXM 1	REV 05	711-028408	YF4817	MPC QXM
Fan Tray 0	REV 01	710-021113	XL3645	MX240 Fan Tray

### show chassis hardware (MX240, MX480, MX960 routers with Application Services Modular Line Card)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11D969BAFA	MX960
Midplane	REV 03	710-013698	ACAA2362	MX960 Backplane

FPM Board	REV 03	710-014974	ZR0639	Front Panel Display
PDM	Rev 03	740-013110	QCS152250SX	Power Distribution Module
PEM 0	Rev 10	740-013683	QCS1512718W	DC Power Entry Module
PEM 1	Rev 10	740-013683	QCS1512702Y	DC Power Entry Module
Routing Engine 0	REV 15	740-013063	9012024667	RE-S-2000
Routing Engine 1	REV 15	740-013063	9012024649	RE-S-2000
CB 0	REV 14	750-031391	ZJ7749	Enhanced MX SCB
CB 1	REV 14	750-031391	ZJ7750	Enhanced MX SCB
CB 2	REV 14	750-031391	ZY9233	Enhanced MX SCB
FPC 0	REV 17	750-031089	YR7434	MPC Type 2 3D
CPU				
FPC 1	REV 11	750-037207	ZW9727	AS-MCC
CPU	REV 04	711-038173	ZW4817	AS-MCC-PMB
MIC 0	REV 01	750-037214	ZH3764	AS-MSC
PIC 0		BUILTIN	BUILTIN	AS-MSC
MIC 1	REV 01	711-028408	JZ9200	AS-MXC
PIC 2		BUILTIN	BUILTIN	AS-MXC
FPC 4	REV 30	750-028467	ABBN0232	MPC 3D 16x 10GE
CPU				
FPC 5	REV 04	750-037207	ZK9074	AS-MCC
CPU				
Fan Tray 0	REV 05	740-014971	VT5683	Fan Tray
Fan Tray 1	REV 05	740-014971	VT5684	Fan Tray

### show chassis hardware extensive (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host> show chassis hardware extensive
```

```
ID: AS-MCC                                FRU Model Number: 750-037207
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff I2C Hex Data:
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 30 37 00 00
Address 0x20: 53 2f 4e 20 5a 57 39 37 32 37 00 00 00 11 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 35 30 2d 30 33 37 32 30 37 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 31 31 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 5e ff ff ff ff ff ff ff ff ff ff ff ff
CPU                                REV 04    711-038173    ZW4817    AS-MCC-PMB
Jedec Code: 0x7fb0                EEPROM Version: 0x02
P/N: 711-038173                   S/N: ZW4817
Assembly ID: 0x0b38               Assembly Version: 01.04
Date: 12-30-2011                 Assembly Flags: 0x00
Version: REV 04
ID: AS-MCC-PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff I2C Hex Data:
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 38 31 37 33 00 00
Address 0x20: 53 2f 4e 20 5a 57 34 38 31 37 00 00 00 1e 0c 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 31 31 2d 30 33 38 31 37 33 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 30 34 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 60 00 00 00 00 00 00 00 00 00 00 00 00
MIC 0                                REV 01    750-037214    ZH3764    AS-MSC
```



```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-037214        S/N: ZH3764
Assembly ID: 0x0a44     Assembly Version: 01.01
Date: 07-04-2011       Assembly Flags: 0x00
Version: REV 01
ID: AS-MSC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff I2C Hex Data:
Address 0x00: 7f b0 02 ff 0a 44 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 31 34 00 00
Address 0x20: 53 2f 4e 20 5a 48 33 37 36 34 00 00 00 04 07 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 ff ff ff ff ff
Address 0x70: ff ff ff f6 c0 03 e1 bc 00 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN      AS-MSC
FPC 4          REV 30      750-028467  ABBN0232      MPC 3D 16x 10GE
Jedec Code: 0x7fb0      EEPROM Version: 0x01

```

### show chassis hardware (MX480 Router with MPC4E)

```
user@host> show chassis hardware
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN10FF57BAFB  MX480
Midplane      REV 05   750-047849   Good          MX480 Midplane
FPM Board     REV 02   710-017254   KG2066        Front Panel Display
PEM 0         Rev 03   740-017330   QCS081590BJ   PS 1.2-1.7kW; 100-240V
AC in
PEM 1         Rev 03   740-017330   QCS0815908Z   PS 1.2-1.7kW; 100-240V
AC in
PEM 2         Rev 03   740-029970   QCS1001U001   PS 1.4-2.52kW; 90-264V
AC in
Routing Engine 0 REV 05   740-031116   9009089502    RE-S-1800x4
Routing Engine 1 REV 05   740-031116   9009089624    RE-S-1800x4
CB 0          REV 02   750-031391   YE8506        Enhanced MX SCB
CB 1          REV 14   750-031391   ZK8265        Enhanced MX SCB
FPC 2         REV 05   750-037358   ZT0638        MPC4E 3D 32XGE
CPU           REV 07   711-035209   ZK3187        HMPD PMB 2G
PIC 0         BUILTIN  BUILTIN      8X10GE SFPP
PIC 1         BUILTIN  BUILTIN      8X10GE SFPP
PIC 2         BUILTIN  BUILTIN      8X10GE SFPP
PIC 3         BUILTIN  BUILTIN      8X10GE SFPP
FPC 3         REV 06   750-037355   CAAB1144      MPC4E 3D 2CGE+8XGE
CPU           REV 08   711-035209   CAAB1278      HMPD PMB 2G
PIC 0         BUILTIN  BUILTIN      4x10GE SFPP
Xcvr 0        REV 01   740-031980   B11E01439     SFP+-10G-SR
Xcvr 1        REV 01   740-031980   B11D05809     SFP+-10G-SR
PIC 1         BUILTIN  BUILTIN      1X100GE CFP
Xcvr 0        NON-JNPR D5418        UNKNOWN
PIC 2         BUILTIN  BUILTIN      4x10GE SFPP
PIC 3         BUILTIN  BUILTIN      1X100GE CFP
Xcvr 0        NON-JNPR X12J00362    CFP-100G-SR10
FPC 4         REV 12.3.10 750-033205   YR9445        MPCE Type 3 3D
CPU
Fan Tray                               Enhanced Left Fan Tray

```

# show chassis hardware (MX2020 Router with MPC4E)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11E188CAFJ	MX2020
Midplane				Lower Backplane
Midplane 1	REV 04	711-032387	ABAC7474	Upper Backplane
PMP 1	REV 03	711-032428	ACAJ1137	Upper Power Midplane
PMP 0	REV 03	711-032426	ACAJ1016	Lower Power Midplane
FPM Board	REV 06	760-040242	ABBT8832	Front Panel Display
PSM 3	REV 0C	740-033727	VK00255	DC 52V Power Supply
Module				
PSM 4	REV 0C	740-033727	VJ00148	DC 52V Power Supply
Module				
PSM 5	REV 0C	740-033727	VK00207	DC 52V Power Supply
Module				
PSM 6	REV 0C	740-033727	VK00319	DC 52V Power Supply
Module				
PSM 7	REV 0C	740-033727	VK00264	DC 52V Power Supply
Module				
PSM 8	REV 0B	740-033727	VG00025	DC 52V Power Supply
Module				
PSM 13	REV 0C	740-033727	VK00274	DC 52V Power Supply
Module				
PSM 14	REV 0C	740-033727	VJ00167	DC 52V Power Supply
Module				
PSM 15	REV 0C	740-033727	VK00299	DC 52V Power Supply
Module				
PSM 16	REV 0C	740-033727	VK00213	DC 52V Power Supply
Module				
PSM 17	REV 0C	740-033727	VK00253	DC 52V Power Supply
Module				
PDM 0	REV 0B	740-038109	VJ00040	DC Power Dist Module
PDM 2	REV 0B	740-038109	VJ00025	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009089735	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009089731	RE-S-1800x4
CB 0	REV 04	750-040257	ZT2846	Control Board
CB 1	REV 04	750-040257	ZT2877	Control Board
SPMB 0	REV 01	711-041855	ZS2282	PMB Board
SPMB 1	REV 01	711-041855	ZS2261	PMB Board
SFB 0	REV 07	711-032385	ZZ2582	Switch Fabric Board
SFB 1	REV 04	711-032385	ZV4229	Switch Fabric Board
SFB 2	REV 07	711-032385	CAAB4902	Switch Fabric Board
SFB 3	REV 07	711-032385	CAAB4891	Switch Fabric Board
SFB 4	REV 07	711-032385	CAAB4883	Switch Fabric Board
SFB 5	REV 07	711-032385	CAAB4889	Switch Fabric Board
SFB 6	REV 06	711-032385	ZV1818	Switch Fabric Board
SFB 7	REV 07	711-032385	CAAB4897	Switch Fabric Board
FPC 0	REV 34	750-031090	ZT9799	MPC Type 2 3D EQ
CPU	REV 06	711-030884	ZS1122	MPC PMB 2G
MIC 0	REV 11	750-033535	CAAD7674	MIC-3D-10C192-XFP
PIC 0		BUILTIN	BUILTIN	MIC-3D-10C192-XFP
Xcvr 0	REV 01	740-014279	753019A00404	XFP-OC192-SR
MIC 1	REV 14	750-031967	ZM6103	MIC-3D-80C30C12-40C48
PIC 2		BUILTIN	BUILTIN	MIC-3D-80C30C12-40C48
Xcvr 0	REV 01	740-011615	PEF1AZP	SFP-IR
Xcvr 1	REV 01	740-011615	PEF1AZN	SFP-IR
Xcvr 2	REV 01	740-021308	ANA0N8S	SFP+-10G-SR
QXM 0	REV 06	711-028408	ZT9339	MPC QXM

QXM 1	REV 06	711-028408	ZT9237	MPC QXM
FPC 9	REV 34	750-031090	ZT9770	MPC Type 2 3D EQ
CPU	REV 06	711-030884	ZS1302	MPC PMB 2G
MIC 0	REV 24	750-028387	YJ3950	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T09M52516	XFP-10G-SR
Xcvr 1		NON-JNPR	CA49BK095	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 02	740-014289	C834XU01T	XFP-10G-SR
Xcvr 1		NON-JNPR	T09M52515	XFP-10G-SR
MIC 1	REV 11	750-033535	CAAD7681	MIC-3D-10C192-XFP
PIC 2		BUILTIN	BUILTIN	MIC-3D-10C192-XFP
Xcvr 0	REV 01	740-014279	KBQ02BE	XFP-0C192-SR
QXM 0	REV 06	711-028408	ZT9151	MPC QXM
QXM 1	REV 06	711-028408	ZT9116	MPC QXM
FPC 10	REV 27	750-033205	ZL6215	MPCE Type 3 3D
CPU	REV 07	711-035209	ZK9038	HMPC PMB 2G
MIC 0	REV 18	750-028380	YG6885	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-014289	C706XU0AG	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	T08L84366	XFP-10G-SR
FPC 14	REV 09	750-037355	CAAF1534	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAB9879	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFP
Xcvr 0	REV 01	740-021308	21T511100436	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AHPOGPM	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	123363A00032	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	19T511100477	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00260	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFP
Xcvr 0	REV 01	740-021308	21T511104086	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	21T511104627	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	21T511104644	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
FPC 19	REV 32	750-028467	ZR2008	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZT6933	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	19T511100291	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMH02VE	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	23T511102128	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMS15PP	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	123363A00716	SFP+-10G-SR
ADC 0	REV 05	750-043596	CAAC2072	Adapter Card
ADC 9	REV 01	750-043596	ZV4111	Adapter Card
ADC 10	REV 05	750-043596	CAAC2058	Adapter Card
ADC 14	REV 02	750-043596	ZW1561	Adapter Card
ADC 19	REV 01	750-043596	ZV4127	Adapter Card
Fan Tray 0	REV 03	760-046960	ACAY0124	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0022	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0023	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0025	172mm FanTray - 6 Fans

## show chassis hardware (MX5, MX10, MX40, MX80, MX240, MX480, and MX960 Routers with Enhanced 20-Port Gigabit Ethernet MIC)

```
user@host> show chassis hardware
```

### Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			F3434	MX80-P
Midplane	REV 01	711-044315	ZK2681	MX80-P
PEM 0	Rev 04	740-028288	VE05267	AC Power Entry Module
PEM 1	Rev 04	740-028288	VE05270	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZK0952	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 02	750-049846	CAAV2153	3D 20x 1GE(LAN)-E,SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) -E SFP
Xcvr 0	REV 01	740-011613	AM0816S9B81	SFP-SX
Xcvr 1	REV 02	740-011613	AM0925SBLK7	SFP-SX
Xcvr 2	REV 01	740-011613	UAQ0005	SFP-SX
Xcvr 3	REV 01	740-011613	UAQ000C	SFP-SX
Xcvr 4	REV 01	740-011613	P9F195E	SFP-SX
Xcvr 5	REV 01	740-011613	UAQ0003	SFP-SX
Xcvr 6	REV 01	740-031851	AM1041SU1LD	SFP-SX
Xcvr 8	REV 02	740-013111	B101501	SFP-T
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) -E SFP
Xcvr 0	REV 01	740-011613	PFM1ML7	SFP-SX
Xcvr 4	REV 01	740-011613	PE729P6	SFP-SX
Xcvr 6	REV 02	740-011613	AM1014SGC84	SFP-SX
Xcvr 9	REV 01	740-011613	AM0812S8UK3	SFP-SX
MIC 1	REV 26	750-028392	ZY0187	3D 20x 1GE(LAN) SFP
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011613	P9F1AN9	SFP-SX
Xcvr 5	REV 02	740-011613	AM1003SFUF4	SFP-SX
Xcvr 9	REV 01	740-031851	AM1041SU1LM	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 4	REV 01	740-011613	PAJ4MYT	SFP-SX
Xcvr 7	+	NON-JNPR	XG32A024	SFP-SX
Xcvr 8		NON-JNPR	PFROV6J	SFP-SX
Xcvr 9	REV 01	740-031851	AM1041SU02U	SFP-SX
Fan Tray				

## show chassis hardware models (MX5, MX10, MX40, MX80, MX240, MX480, and MX960 Routers with Enhanced 20-Port Gigabit Ethernet MIC)

```
user@host> show chassis hardware models
```

### Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
PEM 0	Rev 04	740-028288	VE05267	PWR-MX80-AC-S
PEM 1	Rev 04	740-028288	VE05270	PWR-MX80-AC-S
Routing Engine		BUILTIN	BUILTIN	
TFEB 0		BUILTIN	BUILTIN	
FPC 0		BUILTIN	BUILTIN	
FPC 1		BUILTIN	BUILTIN	
MIC 0	REV 02	750-049846	CAAV2153	MIC-3D-20GE-SFP-E

MIC 1	REV 26	750-028392	ZY0187	MIC-3D-20GE-SFP
Fan Tray				FANTRAY-MX80-S

### show chassis hardware (MX2008 Router)

```
user@host>show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1259E1CAFL	MX2008
Midplane	REV 47	750-044636	ABAD1739	Lower Backplane
PMP	REV 01	711-051406	ACVD0738	Power Midplane
FPM Board	REV 02	760-068193	ABDG7408	Front Panel Display
PSM 1	REV 06	740-050037	1EDB61200R8	DC 52V Power Supply
Module				
PSM 2	REV 06	740-050037	1EDB61200WA	DC 52V Power Supply
Module				
PSM 3	REV 06	740-050037	1EDB61200NY	DC 52V Power Supply
Module				
PSM 4	REV 06	740-050037	1EDB61200N2	DC 52V Power Supply
Module				
PSM 5	REV 06	740-050037	1EDB61200RN	DC 52V Power Supply
Module				
PSM 6	REV 06	740-050037	1EDB61200RF	DC 52V Power Supply
Module				
PSM 7	REV 06	740-050037	1EDB61200R7	DC 52V Power Supply
Module				
PDM 0	REV 01	740-060189	1EFF5250143	DC PDM Optimized
PDM 1	REV 01	740-060189	1EFF5250074	DC PDM Optimized
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x8
Routing Engine 1		BUILTIN	BUILTIN	RE-S-2X00x8
CB 0	REV 01	750-067373	ABDJ0047	Control Board
CB 1	REV 03	750-067373	ABDH3016	Control Board
SFB 0	REV 08	750-067371	ABDK7180	Switch Fabric Board
SFB 1	REV 08	750-067371	ABDK7024	Switch Fabric Board
SFB 2	REV 08	750-067371	ABDK7188	Switch Fabric Board
SFB 3	REV 08	750-067371	ABDK7143	Switch Fabric Board
SFB 4	REV 08	750-067371	ABDK7030	Switch Fabric Board
SFB 5	REV 08	750-067371	ABDK7146	Switch Fabric Board
SFB 6	REV 08	750-067371	ABDK7203	Switch Fabric Board
SFB 7	REV 08	750-067371	ABDK7238	Switch Fabric Board
FPC 0	REV 36	750-044130	ABCS8607	MPC6E 3D
CPU	REV 09	711-045719	ABCS8776	RMPCE PMB
MIC 0	REV 21	750-050008	ABCT5920	4X100GE CXP
PIC 0		BUILTIN	BUILTIN	4X100GE CXP
XLM 0	REV 07.2.00	711-046638	ABCK3488	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5482	MPC6E XL
FPC 1	REV 22	750-063414	CAFJ3026	MPC9E 3D
CPU	REV 16	750-057177	CAFF9332	SMPC PMB
FPC 7	REV 08	750-038492	ZX4080	MPCE Type 2 3D EQ
CPU	REV 03	711-038484	ZX3665	MPCE PMB 2G
MIC 0	REV 05	750-037128	ZR4031	1xCOC12/4xCOC3 CH-CE
PIC 0		BUILTIN	BUILTIN	1xCOC12/4xCOC3 CH-CE
MIC 1	REV 23	750-032479	CADE8614	MIC-3D-8DS3-E3
PIC 2		BUILTIN	BUILTIN	MIC-3D-8DS3-E3
QXM 0	REV 06	711-028408	ZW8299	MPC QXM
QXM 1	REV 06	711-028408	ZY0609	MPC QXM
ADC 7	REV 17	750-043596	ABCA0990	Adapter Card
Fan Tray 0	REV 01	760-052467	ACAY6190	172mm FanTray - 6 Fans
Fan Tray 1	REV 01	760-052467	ACAY6414	172mm FanTray - 6 Fans

## show chassis hardware detail (MX2008 Router)

user@host&gt;show chassis hardware detail

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1259E1CAFL	MX2008
Midplane	REV 47	750-044636	ABAD1739	Lower Backplane
PMP	REV 01	711-051406	ACVD0738	Power Midplane
FPM Board	REV 02	760-068193	ABDG7408	Front Panel Display
PSM 1	REV 06	740-050037	1EDB61200R8	DC 52V Power Supply
Module				
PSM 2	REV 06	740-050037	1EDB61200WA	DC 52V Power Supply
Module				
PSM 3	REV 06	740-050037	1EDB61200NY	DC 52V Power Supply
Module				
PSM 4	REV 06	740-050037	1EDB61200N2	DC 52V Power Supply
Module				
PSM 5	REV 06	740-050037	1EDB61200RN	DC 52V Power Supply
Module				
PSM 6	REV 06	740-050037	1EDB61200RF	DC 52V Power Supply
Module				
PSM 7	REV 06	740-050037	1EDB61200R7	DC 52V Power Supply
Module				
PDM 0	REV 01	740-060189	1EFF5250143	DC PDM Optimized
PDM 1	REV 01	740-060189	1EFF5250074	DC PDM Optimized
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x8
vtbd0 15361 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 511 MB	QEMU HARDDISK		QM00002	Emulated IDE Disk
usb0 (addr 1)	XHCI root HUB 0		0x8086	uhub0
Routing Engine 1		BUILTIN	BUILTIN	RE-S-2X00x8
vtbd0 15361 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 511 MB	QEMU HARDDISK		QM00002	Emulated IDE Disk
usb0 (addr 1)	XHCI root HUB 0		0x8086	uhub0
CB 0	REV 01	750-067373	ABDJ0047	Control Board
CB 1	REV 03	750-067373	ABDH3016	Control Board
SFB 0	REV 08	750-067371	ABDK7180	Switch Fabric Board
SFB 1	REV 08	750-067371	ABDK7024	Switch Fabric Board
SFB 2	REV 08	750-067371	ABDK7188	Switch Fabric Board
SFB 3	REV 08	750-067371	ABDK7143	Switch Fabric Board
SFB 4	REV 08	750-067371	ABDK7030	Switch Fabric Board
SFB 5	REV 08	750-067371	ABDK7146	Switch Fabric Board
SFB 6	REV 08	750-067371	ABDK7203	Switch Fabric Board
SFB 7	REV 08	750-067371	ABDK7238	Switch Fabric Board
FPC 0	REV 36	750-044130	ABCS8607	MPC6E 3D
CPU	REV 09	711-045719	ABCS8776	RMPC PMB
MIC 0	REV 21	750-050008	ABCT5920	4X100GE CXP
PIC 0		BUILTIN	BUILTIN	4X100GE CXP
XLM 0	REV 07.2.00	711-046638	ABCK3488	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5482	MPC6E XL
FPC 1	REV 22	750-063414	CAFJ3026	MPC9E 3D
CPU	REV 16	750-057177	CAFF9332	SMPC PMB
FPC 7	REV 08	750-038492	ZX4080	MPCE Type 2 3D EQ
CPU	REV 03	711-038484	ZX3665	MPCE PMB 2G
MIC 0	REV 05	750-037128	ZR4031	1xCOC12/4xCOC3 CH-CE
PIC 0		BUILTIN	BUILTIN	1xCOC12/4xCOC3 CH-CE
MIC 1	REV 23	750-032479	CADE8614	MIC-3D-8DS3-E3
PIC 2		BUILTIN	BUILTIN	MIC-3D-8DS3-E3

QXM 0	REV 06	711-028408	ZW8299	MPC QXM
QXM 1	REV 06	711-028408	ZY0609	MPC QXM
ADC 7	REV 17	750-043596	ABCA0990	Adapter Card
Fan Tray 0	REV 01	760-052467	ACAY6190	172mm FanTray - 6 Fans
Fan Tray 1	REV 01	760-052467	ACAY6414	172mm FanTray - 6 Fans

### show chassis hardware extensive (MX2008 Router)

```
user@host>show chassis hardware extensive
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          JN1259E1CAFL
Assembly ID:  0x0557          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags:  0x00
ID: MX2008
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 32 35 39 45 31 43 41 46 4c 00 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 47    750-044636  ABAD1739      Lower Backplane
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-044636      S/N:          ABAD1739
Assembly ID:  0x0b66          Assembly Version: 01.47
Date:         06-08-2016      Assembly Flags: 0x00
Version:      REV 47          CLEI Code:    IPMU810ARB
ID: Lower Backplane          FRU Model Number: CHAS-BP-MX2010-S
Board Information Record:
Address 0x00: ad 01 08 00 f4 cc 55 3e 35 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 66 01 2f 52 45 56 20 34 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 36 33 36 00 00
Address 0x20: 53 2f 4e 20 41 42 41 44 31 37 33 39 00 08 06 07
Address 0x30: e0 ff ff ff ad 01 08 00 f4 cc 55 3e 35 00 ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 55 38 31 30 41 52 42 43
Address 0x50: 48 41 53 2d 42 50 2d 4d 58 32 30 31 30 2d 53 00
Address 0x60: 00 00 00 00 00 00 42 43 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 18 ff ff ff ff ff ff ff ff ff ff ff ff
PMP           REV 01    711-051406  ACVD0738      Power Midplane
Jedec Code:   0x7fb0          EEPROM Version: 0x01
P/N:          711-051406      S/N:          ACVD0738
Assembly ID:  0x045d          Assembly Version: 01.01
Date:         06-06-2016      Assembly Flags: 0x00
Version:      REV 01
ID: Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5d 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 35 31 34 30 36 00 00
Address 0x20: 53 2f 4e 20 41 43 56 44 30 37 33 38 00 06 06 07
```

```

Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board      REV 02   760-068193   ABDG7408      Front Panel Display
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           760-068193   S/N:           ABDG7408
Assembly ID:   0x0cac      Assembly Version: 01.02
Date:          06-06-2016   Assembly Flags: 0x00
Version:       REV 02      CLEI Code:     PROTOXCLEI
ID: Front Panel Display    FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c ac 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 36 38 31 39 33 00 00
Address 0x20: 53 2f 4e 20 41 42 44 47 37 34 30 38 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 1          REV 06   740-050037   1EDB61200R8   DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           740-050037   S/N:           1EDB61200R8
Assembly ID:   0x0478      Assembly Version: 01.06
Date:          03-16-2016   Assembly Flags: 0x00
Version:       REV 06      CLEI Code:     IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 52 38 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 2          REV 06   740-050037   1EDB61200WA   DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           740-050037   S/N:           1EDB61200WA
Assembly ID:   0x0478      Assembly Version: 01.06
Date:          03-16-2016   Assembly Flags: 0x00
Version:       REV 06      CLEI Code:     IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 57 41 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff

```



```

Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 3          REV 06   740-050037   1EDB61200NY   DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB61200NY
Assembly ID:   0x0478          Assembly Version: 01.06
Date:          03-16-2016      Assembly Flags:   0x00
Version:       REV 06          CLEI Code:        IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 4e 59 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 4          REV 06   740-050037   1EDB61200N2   DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB61200N2
Assembly ID:   0x0478          Assembly Version: 01.06
Date:          03-16-2016      Assembly Flags:   0x00
Version:       REV 06          CLEI Code:        IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 4e 32 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 5          REV 06   740-050037   1EDB61200RN   DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB61200RN
Assembly ID:   0x0478          Assembly Version: 01.06
Date:          03-16-2016      Assembly Flags:   0x00
Version:       REV 06          CLEI Code:        IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 52 4e 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 6          REV 06   740-050037   1EDB61200RF   DC 52V Power Supply
Module

```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB61200RF
Assembly ID: 0x0478     Assembly Version: 01.06
Date: 03-16-2016        Assembly Flags: 0x00
Version: REV 06         CLEI Code: IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 36 31 32 30 30 52 46 00 00 10 03 07
  Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff
  Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00
PSM 7          REV 06 740-050037 1EDB61200R7      DC 52V Power Supply
Module
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB61200R7
Assembly ID: 0x0478     Assembly Version: 01.06
Date: 03-16-2016        Assembly Flags: 0x00
Version: REV 06         CLEI Code: IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 36 31 32 30 30 52 37 00 00 10 03 07
  Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff
  Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00
PDM 0          REV 01 740-060189 1EFF5250143      DC PDM Optimized
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-060189        S/N: 1EFF5250143
Assembly ID: 0x0495     Assembly Version: 01.01
Date: 07-21-2015        Assembly Flags: 0x00
Version: REV 01         CLEI Code: IPUPAN1KAA
ID: DC PDM Optimized    FRU Model Number: MX2K-PDM-OP-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 95 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 36 30 31 38 39 00 00
  Address 0x20: 31 45 46 46 35 32 35 30 31 34 33 00 00 15 07 07
  Address 0x30: df ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4e 31 4b 41 41 4d
  Address 0x50: 58 32 4b 2d 50 44 4d 2d 4f 50 2d 44 43 2d 53 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff
  Address 0x70: ff ff ff 84 00 00 00 00 00 00 00 00 00 00 00
PDM 1          REV 01 740-060189 1EFF5250074      DC PDM Optimized
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-060189        S/N: 1EFF5250074
Assembly ID: 0x0495     Assembly Version: 01.01
Date: 07-21-2015        Assembly Flags: 0x00
Version: REV 01         CLEI Code: IPUPAN1KAA

```

```

ID: DC PDM Optimized          FRU Model Number: MX2K-PDM-OP-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 95 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 36 30 31 38 39 00 00
Address 0x20: 31 45 46 46 35 32 35 30 30 37 34 00 00 15 07 07
Address 0x30: df ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4e 31 4b 41 41 4d
Address 0x50: 58 32 4b 2d 50 44 4d 2d 4f 50 2d 44 43 2d 53 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 84 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0          BUILTIN          BUILTIN          RE-S-2X00x8
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN          S/N: BUILTIN
Assembly ID: 0x0c10          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: RE-S-2X00x8
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0c 10 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 00 00 00 00
Address 0x20: 42 55 49 4c 54 49 4e 00 00 00 00 00 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
vtbd0 15361 MB          Virtio Block Disk
vtbd1 15360 MB          Virtio Block Disk
ada0 511 MB QEMU HARDDISK QM00002 Emulated IDE Disk
usb0 (addr 1) XHCI root HUB 0 0x8086 uhub0
Routing Engine 1          BUILTIN          BUILTIN          RE-S-2X00x8
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN          S/N: BUILTIN
Assembly ID: 0x0c10          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: RE-S-2X00x8
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0c 10 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 00 00 00 00
Address 0x20: 42 55 49 4c 54 49 4e 00 00 00 00 00 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
vtbd0 15361 MB          Virtio Block Disk
vtbd1 15360 MB          Virtio Block Disk
ada0 511 MB QEMU HARDDISK QM00002 Emulated IDE Disk
usb0 (addr 1) XHCI root HUB 0 0x8086 uhub0
CB 0          REV 01 750-067373 ABDJ0047          Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-067373          S/N: ABDJ0047
Assembly ID: 0x0c96          Assembly Version: 01.01
Date: 06-21-2016          Assembly Flags: 0x00
Version: REV 01          CLEI Code: PROTOXCLEI

```

```

ID: Control Board                      FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ad 01 00 20 28 8a 1c 6d c4 7e ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 96 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 33 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4a 30 30 34 37 00 15 06 07
Address 0x30: e0 ff ff ff ad 01 00 20 28 8a 1c 6d c4 7e ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

CB 1                      REV 03      750-067373      ABDH3016      Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-067373            S/N: ABDH3016
Assembly ID: 0x0c96        Assembly Version: 01.03
Date: 05-07-2016          Assembly Flags: 0x00
Version: REV 03            CLEI Code: PROTOXCLEI
ID: Control Board          FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ad 01 00 20 f4 cc 55 35 71 a0 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 96 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 33 00 00
Address 0x20: 53 2f 4e 20 41 42 44 48 33 30 31 36 00 07 05 07
Address 0x30: e0 ff ff ff ad 01 00 20 f4 cc 55 35 71 a0 ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

SFB 0                      REV 08      750-067371      ABDK7180      Switch Fabric Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-067371            S/N: ABDK7180
Assembly ID: 0x0c97        Assembly Version: 01.08
Date: 09-27-2016          Assembly Flags: 0x00
Version: REV 08            CLEI Code: PROTOXCLEI
ID: Switch Fabric Board    FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4b 37 31 38 30 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 00 00 48 00

SFB 1                      REV 08      750-067371      ABDK7024      Switch Fabric Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-067371            S/N: ABDK7024
Assembly ID: 0x0c97        Assembly Version: 01.08
Date: 09-27-2016          Assembly Flags: 0x00
Version: REV 08            CLEI Code: PROTOXCLEI
ID: Switch Fabric Board    FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00

```

```

Address 0x20: 53 2f 4e 20 41 42 44 4b 37 30 32 34 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 01 00 48 00
SFB 2          REV 08    750-067371    ABDK7188          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:           ABDK7188
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-28-2016      Assembly Flags: 0x00
Version:       REV 08          CLEI Code:     PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4b 37 31 38 38 00 1c 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 02 00 48 00
SFB 3          REV 08    750-067371    ABDK7143          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:           ABDK7143
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-27-2016      Assembly Flags: 0x00
Version:       REV 08          CLEI Code:     PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4b 37 31 34 33 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 03 00 48 00
SFB 4          REV 08    750-067371    ABDK7030          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:           ABDK7030
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-24-2016      Assembly Flags: 0x00
Version:       REV 08          CLEI Code:     PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4b 37 30 33 30 00 18 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 04 00 48 00

```

```

SFB 5          REV 08   750-067371   ABDK7146          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:           ABDK7146
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-27-2016      Assembly Flags: 0x00
Version:       REV 08          CLEI Code:     PROTOXCLEI
ID: Switch Fabric Board        FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
  Address 0x20: 53 2f 4e 20 41 42 44 4b 37 31 34 36 00 1b 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 05 00 48 00

SFB 6          REV 08   750-067371   ABDK7203          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:           ABDK7203
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-28-2016      Assembly Flags: 0x00
Version:       REV 08          CLEI Code:     PROTOXCLEI
ID: Switch Fabric Board        FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
  Address 0x20: 53 2f 4e 20 41 42 44 4b 37 32 30 33 00 1c 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 06 00 48 00

SFB 7          REV 08   750-067371   ABDK7238          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:           ABDK7238
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-27-2016      Assembly Flags: 0x00
Version:       REV 08          CLEI Code:     PROTOXCLEI
ID: Switch Fabric Board        FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
  Address 0x20: 53 2f 4e 20 41 42 44 4b 37 32 33 38 00 1b 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 07 00 48 00

FPC 0          REV 36   750-044130   ABCS8607          MPC6E 3D
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-044130      S/N:           ABCS8607
Assembly ID:   0x0b86          Assembly Version: 01.36
Date:          10-29-2013      Assembly Flags: 0x00
Version:       REV 36          CLEI Code:     PROTOXCLEI

```

```

ID: MPC6E 3D                      FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0b 86 01 24 52 45 56 20 33 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 31 33 30 00 00
Address 0x20: 53 2f 4e 20 41 42 43 53 38 36 30 37 00 1d 0a 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU                      REV 09    711-045719    ABCS8776    RMPC PMB
Jedec Code: 0x7fb0        EEPROM Version: 0x02
P/N: 711-045719          S/N: ABCS8776
Assembly ID: 0x0b85      Assembly Version: 01.09
Date: 10-24-2013        Assembly Flags: 0x00
Version: REV 09
ID: RMPC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 85 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 35 37 31 39 00 00
Address 0x20: 53 2f 4e 20 41 42 43 53 38 37 37 36 00 18 0a 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 16 47 1f b0 00 00 00 00
MIC 0                      REV 21    750-050008    ABCT5920    4X100GE CXP
Jedec Code: 0x7fb0        EEPROM Version: 0x02
P/N: 750-050008          S/N: ABCT5920
Assembly ID: 0x0a83      Assembly Version: 01.21
Date: 09-29-2014        Assembly Flags: 0x00
Version: REV 21          CLEI Code: IP9IATYDAA
ID: 4X100GE CXP          FRU Model Number: MIC6-100G-CXP
Board Information Record:
Address 0x00: 12 01 07 02 03 ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0a 83 01 15 52 45 56 20 32 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 30 38 00 00
Address 0x20: 53 2f 4e 20 41 42 43 54 35 39 32 30 00 1d 09 07
Address 0x30: de ff ff ff 12 01 07 02 03 ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 39 49 41 54 59 44 41 41 4d
Address 0x50: 49 43 36 2d 31 30 30 47 2d 43 58 50 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 74 00 00 00 00 10 09 73 3c c0 02 70 3c
PIC 0                      BUILTIN    BUILTIN    4X100GE CXP
XLM 0                      REV 07.2.00 711-046638 ABCK3488    MPC6E XL
Jedec Code: 0x7fb0        EEPROM Version: 0x02
P/N: 711-046638          S/N: ABCK3488
Assembly ID: 0x0b88      Assembly Version: 01.07
Date: 11-11-2013        Assembly Flags: 0x00
Version: REV 07.2.00
ID: MPC6E XL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 88 01 07 52 45 56 20 30 37 2e 32

```

```

Address 0x10: 2e 30 30 00 37 31 31 2d 30 34 36 36 33 38 00 00
Address 0x20: 53 2f 4e 20 41 42 43 4b 33 34 38 38 00 0b 0b 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
XLM 1          REV 07.2.00 711-046638 ABCK5482          MPC6E XL
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           711-046638      S/N:              ABCK5482
Assembly ID:   0x0b88          Assembly Version: 01.07
Date:          10-21-2013      Assembly Flags:  0x00
Version:       REV 07.2.00
ID: MPC6E XL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 88 01 07 52 45 56 20 30 37 2e 32
Address 0x10: 2e 30 30 00 37 31 31 2d 30 34 36 36 33 38 00 00
Address 0x20: 53 2f 4e 20 41 42 43 4b 35 34 38 32 00 15 0a 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
FPC 1          REV 22      750-063414 CAFJ3026          MPC9E 3D
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-063414      S/N:              CAFJ3026
Assembly ID:   0x0c43          Assembly Version: 01.22
Date:          03-28-2016      Assembly Flags:  0x00
Version:       REV 22          CLEI Code:          IPUCBMUCAA
ID: MPC9E 3D          FRU Model Number: MX2K-MPC9E
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c 43 01 16 52 45 56 20 32 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 33 34 31 34 00 00
Address 0x20: 53 2f 4e 20 43 41 46 4a 33 30 32 36 00 1c 03 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 4d 55 43 41 41 4d
Address 0x50: 58 32 4b 2d 4d 50 43 39 45 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 16      750-057177 CAFF9332          SMPC PMB
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           750-057177      S/N:              CAFF9332
Assembly ID:   0x0c22          Assembly Version: 01.16
Date:          03-20-2016      Assembly Flags:  0x00
Version:       REV 16
ID: SMPC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0c 22 01 10 52 45 56 20 31 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 37 31 37 37 00 00
Address 0x20: 53 2f 4e 20 43 41 46 46 39 33 33 32 00 14 03 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```



```

Address 0x70: ff ff ff ff 00 00 00 00 38 f9 0d e0 4f d1 4b 08
FPC 7          REV 08    750-038492    ZX4080          MPCE Type 2 3D EQ
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:          750-038492      S/N:          ZX4080
Assembly ID:   0x0b35          Assembly Version: 01.08
Date:         02-03-2012      Assembly Flags: 0x00
Version:      REV 08          CLEI Code:    COUIBA5BAA
ID: MPCE Type 2 3D EQ          FRU Model Number: MX-MPC2E-3D-EQ
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 35 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 38 34 39 32 00 00
Address 0x20: 53 2f 4e 20 5a 58 34 30 38 30 00 00 00 03 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 41 35 42 41 41 4d
Address 0x50: 58 2d 4d 50 43 32 45 2d 33 44 2d 45 51 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 74 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 03    711-038484    ZX3665          MPCE PMB 2G
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:          711-038484      S/N:          ZX3665
Assembly ID:   0x0b36          Assembly Version: 01.03
Date:         02-01-2012      Assembly Flags: 0x00
Version:      REV 03
ID: MPCE PMB 2G
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 36 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 38 34 38 34 00 00
Address 0x20: 53 2f 4e 20 5a 58 33 36 36 35 00 00 00 01 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 02 00 00 0c 00 42 5f c0 a4
MIC 0          REV 05    750-037128    ZR4031          1xCOC12/4xCOC3 CH-CE
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:          750-037128      S/N:          ZR4031
Assembly ID:   0x0a1b          Assembly Version: 01.05
Date:         12-04-2011      Assembly Flags: 0x00
Version:      REV 05          CLEI Code:    PROTOXCLEI
ID: 1xCOC12/4xCOC3 CH-CE      FRU Model Number: MIC-3D-4CHOC3-10C12-CE
Board Information Record:
Address 0x00: 12 01 05 03 05 ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0a 1b 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 31 32 38 00 00
Address 0x20: 53 2f 4e 20 5a 52 34 30 33 31 00 00 00 04 0c 07
Address 0x30: db ff ff ff 12 01 05 03 05 ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 4d
Address 0x50: 49 43 2d 33 44 2d 34 43 48 4f 43 33 2d 31 4f 43
Address 0x60: 31 32 2d 43 45 00 30 32 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 98 c0 02 61 bc 7f b0 02 ff 0a 11 01 17
PIC 0          BUILTIN    BUILTIN          1xCOC12/4xCOC3 CH-CE
MIC 1          REV 23    750-032479    CADE8614        MIC-3D-8DS3-E3
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:          750-032479      S/N:          CADE8614
Assembly ID:   0x0a11          Assembly Version: 01.23

```

```

Date:          07-24-2014      Assembly Flags:    0x00
Version:       REV 23         CLEI Code:       COUIA8DBAA
ID: MIC-3D-8DS3-E3          FRU Model Number: MIC-3D-8DS3-E3
Board Information Record:
  Address 0x00: 56 01 ff ff 03 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0a 11 01 17 52 45 56 20 32 33 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 32 34 37 39 00 00
  Address 0x20: 53 2f 4e 20 43 41 44 45 38 36 31 34 00 18 07 07
  Address 0x30: de ff ff ff 56 01 ff ff 03 ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4f 55 49 41 38 44 42 41 41 4d
  Address 0x50: 49 43 2d 33 44 2d 38 44 53 33 2d 45 33 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 7b c0 03 e5 7c 4f 8a 9e 10 00 00 00 02
PIC 2          BUILTIN      BUILTIN      MIC-3D-8DS3-E3
QXM 0          REV 06      711-028408    ZW8299      MPC QXM
Jedec Code:    0x7fb0      EEPROM Version:    0x01
P/N:           711-028408    S/N:              ZW8299
Assembly ID:   0x097a      Assembly Version:  02.06
Date:          01-19-2012    Assembly Flags:    0x00
Version:       REV 06
ID: MPC QXM
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 09 7a 02 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 32 38 34 30 38 00 00
  Address 0x20: 53 2f 4e 20 5a 57 38 32 39 39 00 00 00 13 01 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
QXM 1          REV 06      711-028408    ZY0609      MPC QXM
Jedec Code:    0x7fb0      EEPROM Version:    0x01
P/N:           711-028408    S/N:              ZY0609
Assembly ID:   0x097a      Assembly Version:  02.06
Date:          01-19-2012    Assembly Flags:    0x00
Version:       REV 06
ID: MPC QXM
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 09 7a 02 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 32 38 34 30 38 00 00
  Address 0x20: 53 2f 4e 20 5a 59 30 36 30 39 00 00 00 13 01 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
ADC 7          REV 17      750-043596    ABCA0990      Adapter Card
Jedec Code:    0x7fb0      EEPROM Version:    0x02
P/N:           750-043596    S/N:              ABCA0990
Assembly ID:   0x0b3d      Assembly Version:  01.17
Date:          03-07-2013    Assembly Flags:    0x00
Version:       REV 17      CLEI Code:        IPUCBA8CAA
ID: Adapter Card          FRU Model Number:  MX2000-LC-ADAPTER
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

```

I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 3d 01 11 52 45 56 20 31 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 33 35 39 36 00 00
Address 0x20: 53 2f 4e 20 41 42 43 41 30 39 39 30 00 07 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 41 38 43 41 41 4d
Address 0x50: 58 32 30 30 30 2d 4c 43 2d 41 44 41 50 54 45 52
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 3a 00 00 00 00 00 00 00 00 00 00 00 00
Fan Tray 0      REV 01    760-052467    ACAY6190      172mm FanTray - 6 Fans
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           760-052467    S/N:          ACAY6190
Assembly ID:   0x0b96      Assembly Version: 02.10
Date:          09-18-2015    Assembly Flags: 0x00
Version:       REV 01      CLEI Code:    IPUCBENCAA
ID: 172mm FanTray - 6 Fans    FRU Model Number: MX2000-FANTRAY-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 96 02 0a 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 32 34 36 37 00 00
Address 0x20: 53 2f 4e 20 41 43 41 59 36 31 39 30 00 12 09 07
Address 0x30: df ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 45 4e 43 41 41 4d
Address 0x50: 58 32 30 30 30 2d 46 41 4e 54 52 41 59 2d 53 00
Address 0x60: 00 00 00 00 00 00 31 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff 1a ff ff ff ff ff ff ff ff ff ff ff ff
Fan Tray 1      REV 01    760-052467    ACAY6414      172mm FanTray - 6 Fans
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           760-052467    S/N:          ACAY6414
Assembly ID:   0x0b96      Assembly Version: 02.10
Date:          10-28-2015    Assembly Flags: 0x00
Version:       REV 01      CLEI Code:    IPUCBENCAA
ID: 172mm FanTray - 6 Fans    FRU Model Number: MX2000-FANTRAY-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 96 02 0a 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 32 34 36 37 00 00
Address 0x20: 53 2f 4e 20 41 43 41 59 36 34 31 34 00 1c 0a 07
Address 0x30: df ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 45 4e 43 41 41 4d
Address 0x50: 58 32 30 30 30 2d 46 41 4e 54 52 41 59 2d 53 00
Address 0x60: 00 00 00 00 00 00 31 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff 1a ff ff ff ff ff ff ff ff ff ff ff ff

```

### show chassis hardware models (MX2008 Router)

```
user@host>show chassis hardware models
```

```

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 47   750-044636   ABAD1739      CHAS-BP-MX2010-S
PMP           REV 01   711-051406   ACVD0738
FPM Board     REV 02   760-068193   ABDG7408      PROTO-ASSEMBLY
PSM 1         REV 06   740-050037   1EDB61200R8   MX2000-PSM-DC-S
PSM 2         REV 06   740-050037   1EDB61200WA   MX2000-PSM-DC-S
PSM 3         REV 06   740-050037   1EDB61200NY   MX2000-PSM-DC-S
PSM 4         REV 06   740-050037   1EDB61200N2   MX2000-PSM-DC-S
PSM 5         REV 06   740-050037   1EDB61200RN   MX2000-PSM-DC-S

```

PSM 6	REV 06	740-050037	1EDB61200RF	MX2000-PSM-DC-S
PSM 7	REV 06	740-050037	1EDB61200R7	MX2000-PSM-DC-S
PDM 0	REV 01	740-060189	1EFF5250143	MX2K-PDM-OP-DC-S
PDM 1	REV 01	740-060189	1EFF5250074	MX2K-PDM-OP-DC-S
CB 0	REV 01	750-067373	ABDJ0047	PROTO-ASSEMBLY
CB 1	REV 03	750-067373	ABDH3016	PROTO-ASSEMBLY
SFB 0	REV 08	750-067371	ABDK7180	PROTO-ASSEMBLY
SFB 1	REV 08	750-067371	ABDK7024	PROTO-ASSEMBLY
SFB 2	REV 08	750-067371	ABDK7188	PROTO-ASSEMBLY
SFB 3	REV 08	750-067371	ABDK7143	PROTO-ASSEMBLY
SFB 4	REV 08	750-067371	ABDK7030	PROTO-ASSEMBLY
SFB 5	REV 08	750-067371	ABDK7146	PROTO-ASSEMBLY
SFB 6	REV 08	750-067371	ABDK7203	PROTO-ASSEMBLY
SFB 7	REV 08	750-067371	ABDK7238	PROTO-ASSEMBLY
FPC 0	REV 36	750-044130	ABCS8607	PROTO-ASSEMBLY
MIC 0	REV 21	750-050008	ABCT5920	MIC6-100G-CXP
FPC 1	REV 22	750-063414	CAFJ3026	MX2K-MPC9E
FPC 7	REV 08	750-038492	ZX4080	MX-MPC2E-3D-EQ
MIC 0	REV 05	750-037128	ZR4031	MIC-3D-4CH0C3-10C12-CE
MIC 1	REV 23	750-032479	CADE8614	MIC-3D-8DS3-E3
ADC 7	REV 17	750-043596	ABCA0990	MX2000-LC-ADAPTER
Fan Tray 0	REV 01	760-052467	ACAY6190	MX2000-FANTRAY-S
Fan Tray 1	REV 01	760-052467	ACAY6414	MX2000-FANTRAY-S

### show chassis hardware clei-models (MX2008 Router)

```
user@host>show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 47	750-044636	IPMU810ARB	CHAS-BP-MX2010-S
PMP	REV 01	711-051406		
FPM Board	REV 02	760-068193	PROTOXCLEI	PROTO-ASSEMBLY
PSM 1	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 2	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 3	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 4	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 5	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 6	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 7	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PDM 0	REV 01	740-060189	IPUPAN1KAA	MX2K-PDM-OP-DC-S
PDM 1	REV 01	740-060189	IPUPAN1KAA	MX2K-PDM-OP-DC-S
CB 0	REV 01	750-067373	PROTOXCLEI	PROTO-ASSEMBLY
CB 1	REV 03	750-067373	PROTOXCLEI	PROTO-ASSEMBLY
SFB 0	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 1	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 2	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 3	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 4	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 5	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 6	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 7	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
FPC 0	REV 36	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 21	750-050008	IP9IATYDAA	MIC6-100G-CXP
FPC 1	REV 22	750-063414	IPUCBMUCAA	MX2K-MPC9E
FPC 7	REV 08	750-038492	COUIBA5BAA	MX-MPC2E-3D-EQ
MIC 0	REV 05	750-037128	PROTOXCLEI	MIC-3D-4CH0C3-10C12-CE
MIC 1	REV 23	750-032479	COUIA8DBAA	MIC-3D-8DS3-E3
ADC 7	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER

Fan Tray 0	REV 01	760-052467	IPUCBENCAA	MX2000-FANTRAY-S
Fan Tray 1	REV 01	760-052467	IPUCBENCAA	MX2000-FANTRAY-S

### show chassis hardware (MX10003 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			BLANK	JNP10003 [MX10003]
Midplane	REV 01	750-066883	CAGM0759	Midplane 2
Routing Engine 0		BUILTIN	BUILTIN	Routing Engine
Routing Engine 1		BUILTIN	BUILTIN	Routing Engine
CB 0	REV 07	750-067071	CAGX4354	SPM
Mezz	REV 10	711-066896	CAHS7200	SPM Mezz Board
CB 1	REV 07	750-067071	CAGX4363	SPM
Mezz	REV 10	711-066896	CAHS7193	SPM Mezz Board
FPC 0	REV 05	750-066879	CAGV0273	LC2103
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0				
PIC 1				
FPC 1	REV 05	750-066879	CAGV0278	LC2103
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0		BUILTIN	BUILTIN	6xQSFP
PIC 1				
PEM 0	REV 01	740-066937	1HS16320003	JNP-PWR1600-AC
PEM 1	REV 01	740-066937	1HS16320002	JNP-PWR1600-AC
Fan Tray 0	REV 02	760-069329	CAGS7731	JNP FAN 3RU
Fan Tray 1	REV 02	760-069329	CAGS7776	JNP FAN 3RU
Fan Tray 2	REV 02	760-069329	CAGS7659	JNP FAN 3RU
Fan Tray 3	REV 02	760-069329	CAGS7669	JNP FAN 3RU

### show chassis hardware (MX204 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			BB768	JNP204 [MX204]
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x6
CB 0	REV 11	750-069579	CAJD3113	JNP204 [MX204]
FPC 0		BUILTIN	BUILTIN	MPC
PIC 0		BUILTIN	BUILTIN	4XSFP28 PIC
Xcvr 0	REV 01	740-061405	1ACQ110409R	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-054053	QF027546	QSFP+-4X10G-SR
Xcvr 2	REV 01	740-058732	1AMQA142092	QSFP-100GBASE-LR4
Xcvr 3	REV 01	740-058732	1AMQA14203J	QSFP-100GBASE-LR4
PIC 1		BUILTIN	BUILTIN	8XSFP PIC
PEM 1	REV 04	740-043886	1GA46361256	JPSU-650W-DC-AFO
Fan Tray 0				Fan Tray, Front to Back
Airflow - AFO				
Fan Tray 1				Fan Tray, Front to Back
Airflow - AFO				
Fan Tray 2				Fan Tray, Front to Back
Airflow - AFO				

**show chassis hardware (vMX running in lite mode)**

```
user@host> show chassis hardware
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               VM54599D128A  VMX
Midplane
Routing Engine 0
CB 0
CB 1
FPC 0
  CPU          Rev. 1.0 RIOT-LITE  BUILTIN
  MIC 0
  PIC 0        BUILTIN  BUILTIN
Virtual FPC
Virtual
Virtual
```

**show chassis hardware (vMX running in performance mode)**

```
user@host> show chassis hardware
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               VM54599D128A  VMX
Midplane
Routing Engine 0
CB 0
CB 1
FPC 0
  CPU          Rev. 1.0 RIOT-PERF  BUILTIN
  MIC 0
  PIC 0        BUILTIN  BUILTIN
Virtual FPC
Virtual
Virtual
```

**show chassis hardware (T320 Router)**

```
user@host> show chassis hardware
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               19093          T320
Midplane      REV 04    710-004339  BC1436         T320 Backplane
FPM GBUS      REV 03    710-004461  BC1407         T320 FPM Board
FPM Display   REV 04    710-002897  BE0763         FPM Display
CIP           REV 05    710-002895  BB2311         T Series CIP
PEM 0        Rev 01    740-004359  NB12546        Power Entry Module
SCG 0        REV 06    710-004455  AY4522         T320 Sonet
Clock Gen.
Routing Engine 0
CB 0          REV 13    710-002728  BC1577         unknown
T Series
Control Board
CB 1          REV 13    710-002728  BC1595         T Series
Control Board
FPC 1         REV 09    710-007531  HS1572         FPC Type 2
  CPU          REV 15    710-001726  HR8763         FPC CPU
  PIC 0        REV 01    750-010618  CB5579         4x G/E SFP,
1000 BASE
  SFP 0        REV 01    740-007326  P5809Z1        SFP-SX
  SFP 1        REV 01    740-007326  P4Q10XU        SFP-SX
  SFP 2        NON-JNPR  RA45020031     SFP-SX
  SFP 3        NON-JNPR  RA45020032     SFP-SX
  PIC 1        REV 01    750-010618  CD9587         4x G/E SFP,
```

```

1000 BASE
  SFP 0          NON-JNPR    P5A08QZ    SFP-T
  SFP 1          REV 01    740-007326    P4Q133K    SFP-SX
  SFP 2          REV 01    740-007326    P5809YY    SFP-SX
  SFP 3          REV 01    740-007327    4C81704    SFP-LX
  MMB 1          REV 03    710-005555    HR9401     MMB-288mbit
  PPB 0          REV 04    710-003758    HR2886     PPB Type 2
FPC 2          REV 07    710-005860    HP2392     FPC Type 1
  CPU          REV 14    710-001726    HP7797     FPC CPU
  PIC 0          REV 02    750-007643    HM0853     1x G/E QPP,
1000 BASE
  SFP 0          REV 01    740-007326    P11E9JJ    SFP-SX
  MMB 1          REV 02    710-005555    HN2379     MMB-288mbit
  PPB 0          REV 04    710-003758    HP8092     PPB Type 2
FPC 3          REV 07    710-005860    HP2393     FPC Type 1
  CPU          REV 14    710-001726    HP0968     FPC CPU
  PIC 0          REV 01    750-010240    CB5363     1x G/E SFP,
1000 BASE
  SFP 0          REV 01    740-007326    P4R0PNH    SFP-SX
  PIC 1          REV 03    750-003034    HD2832     4x OC-3 SONET,
SMIR
  MMB 1          REV 02    710-005555    HN6307     MMB-288mbit
  PPB 0          REV 04    710-003758    HP5051     PPB Type 2
FPC 4          REV 01    710-010845    JD3872     FPC Type 4
  CPU          REV 02    710-011481    JB6042     FPC CPU
  5          REV 01    710-005802    BC1566     FPC Type 2
  CPU          REV 09    710-001726    AY4922     FPC CPU
  PIC 0          REV 02    750-008155    BE2114     2x G/E QPP,
1000 BASE
  SFP 0          REV 01    740-007326    P4R0PMQ    SFP-SX
  SFP 1          REV 01    740-007326    P4R0PN9    SFP-SX
  PIC 1          REV 01    750-008155    BE2116     2x G/E QPP,
1000 BASE
  SFP 0          REV 01    740-007326    P4R0PNZ    SFP-SX
  SFP 1          NON-JNPR    2908       SFP-T
  MMB 1          REV 01    710-005555    AZ2246     MMB-288mbit
  PPB 0          REV 03    710-003758    AY4839     PPB Type 2
FPC 7          REV 01    710-005803    AZ2123     FPC Type 3
...

```

### show chassis hardware (T640 Router)

```
user@host> show chassis hardware
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               19182         T640
Midplane      REV 04   710-002726   AX5608        T640 Backplane
FPM GBUS      REV 02   710-002901   HE3064        T640 FPM Board
FPM Display   REV 02   710-002897   HE7864        FPM Display
CIP           REV 05   710-002895   HA5024        T Series CIP
PEM 0         Rev 02   740-029522   VH26235       AC PEM 10kW US
PEM 1         Rev 02   740-029522   VH26230       AC PEM 10kW US
SCG 0         REV 03   710-003423   HA4508        T640 Sonet Clock Gen.
Routing Engine 0 REV 02   740-005022   210865700483 RE-3.0 (RE-600)
CB 0          REV 01   710-002728   HD3044        T Series Control Board
FPC 2         REV 04   710-001721   HD5572        FPC Type 3
  CPU        REV 06   710-001726   HA4712        FPC CPU
  PIC 1       REV 03   750-009567   HV2331        1x 10GE(LAN),XENPAK
  SFP 0       REV 01   740-009898   USC202R103    XENPAK-SR

```

PIC 2	REV 03	750-009567	HV2332	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-011268	USC202R112	XENPAK-ZR
PIC 3	REV 03	750-009567	HX4416	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-012056	434TC004	XENPAK-CX4
PIC 4	REV 03	750-009567	HX4420	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-012058	434TC124	XENPAK-LX4
FPC 5	REV 01	710-013553	JE4839	E2-FPC Type 1
CPU	REV 01	710-013569	JW9163	FPC CPU
PIC 0	REV 01	750-009567	HX4419	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-009898	USC202RT05	XENPAK-LR
PIC 1	REV 03	750-009567	HN7426	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-009550	03L90051	XENPAK-ER
PIC 2	REV 03	750-009467	HT7423	1x 10GE(LAN),XENPAK
SFP 0		NON-JNPR		UNKNOWN
PIC 3	REV 04	750-005100	AY4850	1x 10GE(LAN),DwDM
FPC 4	REV 01	710-010845	JD3872	FPC Type 4
CPU	REV 02	710-011481	JB6042	FPC CPU
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray

#### show chassis hardware models (T640 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	710-002726		CHAS-BP-T640-S
FPM Display	REV 02	710-002897		CRAFT-T640-S
CIP	REV 05	710-002895		CIP-L-T640-S
PEM 0	Rev 01	740-002595		PWR-T-DC-S
SCG 0	REV 04	710-003423		SCG-T-S
SCG 1	REV 04	710-003423		SCG-T-S
Routing Engine 0	REV 01	740-005022		RE-600-2048-S
Routing Engine 1	REV 07	740-005022		RE-600-2048-S
CB 0	REV 06	710-002726		CHAS-BP-T640-S
CB 1	REV 06	710-002728		CB-L-T-S
FPC 5	REV 05	710-007527		T640-FPC2
PIC 0	REV 05	750-002510		PB-2GE-SX
PIC 1	REV 05	750-001901		PB-40C12-SON-SMIR
FPC 6	REV 03	710-001721		T640-FPC3
PIC 1	REV 01	750-009553		PC-40C48-SON-SFP
SIB 4	REV 02	750-005486		SIB-I-T640-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FAN-REAR-TX-T640-S

#### show chassis hardware extensive (T640 Router)

```
user@host> show chassis hardware extensive
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis				T640
Jedec Code:	0x7fb0	EEPROM Version:	0x01	
P/N:	.....	S/N:	.....	
Assembly ID:	0x0507	Assembly Version:	00.00	
Date:	00-00-0000	Assembly Flags:	0x00	
Version:	.....			



```

ID: Gibson LCC Chassis
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 05 07 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane          REV 04    710-002726    AX5633
Jedec Code:       0x7fb0          EEPROM Version:    0x01
P/N:              710-002726.      S/N:              AX5633.
Assembly ID:      0x0127          Assembly Version: 01.04
Date:             06-27-2001      Assembly Flags:   0x00
Version:          REV 04.....
ID: Gibson Backplane
Board Information Record:
Address 0x00: ad 01 08 00 00 90 69 0e f8 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 01 27 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 30 32 37 32 36 00 00
Address 0x20: 53 2f 4e 20 41 58 35 36 33 33 00 00 00 1b 06 07
Address 0x30: d1 ff ff ff ad 01 08 00 00 90 69 0e f8 00 ff ff
Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM GBUS          REV 02    710-002901    HE3245
...
FPM Display       REV 02    710-002897    HA4873
...
CIP               REV 05    710-002895    HA4729
...
PEM 1             RevX02    740-002595    MD21815          Power Entry Module
...
SCG 0             REV 04    710-003423    HF6023
...
SCG 1             REV 04    710-003423    HF6061
...
Routing Engine 0  REV 01    740-005022    210865700292    RE-3.0
...
CB 0              REV 06    710-002728    HE3614
...
FPC 1             REV 01    710-002385    HE3009          FPC Type 1
...
                  REV 06    710-001726    HC0010

```

### show chassis hardware (T4000 Router)

```
user@host> show chassis hardware
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN1172F25AHA  T4000
Midplane      REV 01    710-027486   RC8355         T-series Backplane
FPM GBUS      REV 13    710-002901   BBAE0927       T640 FPM Board
FPM Display   REV 01    710-021387   EF6764         T1600 FPM Display
CIP           REV 06    710-002895   BBAD9210       T-series CIP
PEM 0         REV 01    740-036442   VA00016        Power Entry Module 6x60
SCG 0         REV 18    710-003423   BBAD7248       T640 Sonet Clock Gen.
SCG 1         REV 18    710-003423   BBAE3874       T640 Sonet Clock Gen.
Routing Engine 0 REV 05    740-026941   P737F-002248   RE-DUO-1800
Routing Engine 1 REV 06    740-026941   P737F-002653   RE-DUO-1800
CB 0          REV 09    710-022597   ED0295         LCC Control Board

```

CB 1	REV 09	710-022597	EA6050	LCC Control Board
FPC 0	REV 26	750-032819	EK1173	FPC Type 5-3D
CPU	REV 12	711-030686	EJ8584	SNG PMB
PIC 0	REV 07	750-034624	EF6837	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	123363A01145	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	123363A01147	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01P3	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10M03256	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01M2	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	123363A01137	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01PN	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01NW	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	123363A01139	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01KE	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01336	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B10M01325	SFP+-10G-SR
PIC 1	REV 07	750-034624	EF6800	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJJ01SA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01QZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJH0217	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ01TE	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01KV	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJJ01MU	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01R0	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01TC	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ0364	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJD0GV3	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B10M03343	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01QJ	SFP+-10G-SR
LMB 0	REV 05	711-034381	EJ8490	Type-0 LMB
LMB 1	REV 04	711-035774	EJ8517	Type-1 LMB
LMB 2	REV 05	711-034381	EJ8489	Type-0 LMB
FPC 3	REV 07	750-032819	EG3637	FPC Type 5-3D
CPU	REV 09	711-030686	EG0150	SNG PMB
PIC 0	REV 08	750-035293	EF3657	1x100GE
Xcvr 0	REV 01	740-032210	C22CQNJ	CFP-100G-LR4
PIC 1	REV 10	750-034624	BBAN4098	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04902	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04891	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01MX	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04183	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04894	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04184	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04897	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04899	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ01TV	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04057	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ01M4	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04905	SFP+-10G-SR
LMB 0	REV 04	711-034381	EG1524	Type-0 LMB
LMB 1	REV 03	711-035774	EG0345	Type-1 LMB
LMB 2	REV 04	711-034381	EG1522	Type-0 LMB
FPC 5	REV 03	710-033871	BBAJ0768	FPC Type 4-ES
CPU	REV 11	710-016744	BBAH9342	ST-PMB2
PIC 0	REV 09	750-029262	EE6789	100GE
PIC 1	REV 03	750-034781	EE6655	100GE CFP
Xcvr 0	REV 01	740-032210	J11A22334	CFP-100G-LR4
BRIDGE 0	REV 03	711-029995	EE6572	100GE Bridge Board
MMB 0	REV 07	710-025563	BBAJ4657	ST-MMB2
MMB 1	REV 07	710-025563	BBAJ3073	ST-MMB2

FPC 6	REV 05	750-010153	EF4936	FPC Type 5-3D
CPU	REV 06	711-030686	EF4189	SNG PMB
PIC 0	REV 10	750-034624	BBAN4109	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04895	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04898	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11J04021	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04903	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04311	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04059	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04016	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04017	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B11J04887	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04297	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11J04893	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04022	SFP+-10G-SR
PIC 1	REV 02	750-034624	EE3711	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJH033X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01N0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01SV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ032L	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B10M01593	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJD0FF1	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01NU	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	123363A01305	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B10M00361	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01M7	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ032X	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01PG	SFP+-10G-SR
LMB 0	REV 04	711-034381	EF3838	Type-0 LMB
LMB 1	REV 03	711-035774	EF3821	Type-1 LMB
LMB 2	REV 04	711-034381	EF3834	Type-0 LMB
SPMB 0	REV 05	710-023321	ED1990	LCC Switch CPU
SPMB 1	REV 05	710-023321	EA2768	LCC Switch CPU
SIB 0	REV 02	711-036340	EF8802	SIB-HC-3D
SIB 1	REV 07	711-036340	EG2286	SIB-HC-3D
SIB 2	REV 07	711-036340	EG2252	SIB-HC-3D
SIB 3	REV 02	711-036340	EF1358	SIB-HC-3D
SIB 4	REV 02	711-036340	EF8806	SIB-HC-3D
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
-- Rev 2				
Fan Tray 2				Rear Fan Tray -- Rev 3

### show chassis hardware (T4000 Router with 16-GB Line Card Chassis (LCC) Routing Engine)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11BDF2CAHA	T1600
Midplane	REV 01	710-027486	ACAJ0774	T640 Backplane
FPM GBUS	REV 13	710-002901	BBAL6812	T640 FPM Board
FPM Display	REV 04	710-021387	BBAP2679	T1600 FPM Display
CIP	REV 06	710-002895	BBAP4758	T-series CIP
PEM 0	Rev 03	740-026384	XF86421	Power Entry Module 3x80
PEM 1	Rev 03	740-026384	XF86429	Power Entry Module 3x80
SCG 0	REV 18	710-003423	BBAP1896	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAN8659	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-042243	737F-002238	RE-DUO-1800-16G
Routing Engine 1	REV 01	740-042243	737F-002403	RE-DUO-1800-16G

CB 1	REV 11	710-022597	EK4526	LCC Control Board
CB 1	REV 11	710-022597	EK4527	LCC Control Board
FPC 0	REV 05	710-033871	EK5644	FPC Type 4-ES
CPU	REV 11	710-016744	EK3428	ST-PMB2
PIC 0	REV 20	750-017405	EJ3041	4x 10GE (LAN/WAN) XFP
PIC 1	REV 17	750-026962	EH7536	10x10GE (LAN/WAN) SFPP
MMB 0	REV 07	710-025563	EK6039	ST-MMB2
MMB 1	REV 07	710-025563	EK6086	ST-MMB2
FPC 1	REV 05	710-033871	EK6583	FPC Type 4-ES
CPU	REV 11	710-016744	EK3401	ST-PMB2
PIC 0	REV 17	750-026962	EJ8948	10x10GE (LAN/WAN) SFPP
MMB 0	REV 07	710-025563	EK6202	ST-MMB2
MMB 1	REV 07	710-025563	EK6112	ST-MMB2
SPMB 1	REV 05	710-023321	EK4900	LCC Switch CPU
SIB 0	REV 11	710-013074	EK5958	SIB-I8-SF
SIB 1	REV 11	710-013074	EK4606	SIB-I8-SF
SIB 2	REV 11	710-013074	EK5971	SIB-I8-SF
SIB 3	REV 11	710-013074	EK4609	SIB-I8-SF
SIB 4	REV 11	710-013074	EK4602	SIB-I8-SF
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 2

#### show chassis hardware (T4000 Router with LSR FPC)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN1173A24AHA	T4000
FPC 3	REV	750-048373	AN7797	FPC Type 5-LSR
CPU	REV 10	711-030686	AN6649	SNG PMB
PIC 0	REV 07	750-034624	EF6830	12x10GE (LAN/WAN) SFPP

#### show chassis hardware clei-models (T4000 Router)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-027486	IPMJ700DRD	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	REV 01	740-036442	IPUPAG6KAA	PWR-T-6-60-DC
SCG 0	REV 18	710-003423		SCG-T-S
SCG 1	REV 18	710-003423		SCG-T-S
Routing Engine 0	REV 05	740-026941		RE-DU0-C1800-8G-S
Routing Engine 1	REV 06	740-026941		RE-DU0-C1800-8G-S
CB 0	REV 09	710-022597		CB-LCC-S
CB 1	REV 09	710-022597		CB-LCC-S
FPC 3				
PIC 0	REV 08	750-035293	XXXXXXXXBB	PF-1CGE-CFP
PIC 1	REV 10	750-034624	XXXXXXXXCC	PF-12XGE-SFPP
FPC 5	REV 03	710-033871	IPUCAMBCTD	T1600-FPC4-ES
PIC 1	REV 03	750-034781	IPUIBKLMMA	PD-1CE-CFP-FPC4
FPC 6				
PIC 0	REV 10	750-034624	XXXXXXXXCC	PF-12XGE-SFPP
Fan Tray 0				FANTRAY-T-S

Fan Tray 1	FANTRAY-T4000-S
Fan Tray 2	FANTRAY-TXP-R-S

### show chassis hardware detail (T4000 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1172F25AHA	T4000
Midplane	REV 01	710-027486	RC8355	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAE0927	T640 FPM Board
FPM Display	REV 01	710-021387	EF6764	T1600 FPM Display
CIP	REV 06	710-002895	BBAD9210	T-series CIP
PEM 0	REV 01	740-036442	VA00016	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAD7248	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAE3874	T640 Sonet Clock Gen.
Routing Engine 0	REV 05	740-026941	P737F-002248	RE-DUO-1800
ad0	3823 MB	SMART CF	2009121602A661576157	Compact Flash
ad1	59690 MB	STEC MACH-8 SSD	STM000103FDB	Disk 1
Routing Engine 1	REV 06	740-026941	P737F-002653	RE-DUO-1800
ad0	3823 MB	SMART CF	201011150153F52CF52C	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	2010110900150A880A88	Disk 1
CB 0	REV 09	710-022597	ED0295	LCC Control Board
CB 1	REV 09	710-022597	EA6050	LCC Control Board
FPC 0	REV 26	750-032819	EK1173	FPC Type 5-3D
CPU	REV 12	711-030686	EJ8584	SNG PMB
PIC 0	REV 07	750-034624	EF6837	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	123363A01145	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	123363A01147	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01P3	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10M03256	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01M2	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	123363A01137	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01PN	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01NW	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	123363A01139	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01KE	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01336	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B10M01325	SFP+-10G-SR
PIC 1	REV 07	750-034624	EF6800	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJJ01SA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01QZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJH0217	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ01TE	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01KV	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJJ01MU	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01R0	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01TC	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ0364	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJD0GV3	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B10M03343	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01QJ	SFP+-10G-SR
LMB 0	REV 05	711-034381	EJ8490	Type-0 LMB
LMB 1	REV 04	711-035774	EJ8517	Type-1 LMB
LMB 2	REV 05	711-034381	EJ8489	Type-0 LMB
FPC 3	REV 07	750-032819	EG3637	FPC Type 5-3D
CPU	REV 09	711-030686	EG0150	SNG PMB
PIC 0	REV 08	750-035293	EF3657	1x100GE
Xcvr 0	REV 01	740-032210	C22CQNJ	CFP-100G-LR4

PIC 1	REV 10	750-034624	BBAN4098	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04902	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04891	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01MX	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04183	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04894	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04184	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04897	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04899	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ01TV	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04057	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ01M4	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04905	SFP+-10G-SR
LMB 0	REV 04	711-034381	EG1524	Type-0 LMB
LMB 1	REV 03	711-035774	EG0345	Type-1 LMB
LMB 2	REV 04	711-034381	EG1522	Type-0 LMB
FPC 5	REV 03	710-033871	BBAJ0768	FPC Type 4-ES
CPU	REV 11	710-016744	BBAH9342	ST-PMB2
PIC 0	REV 09	750-029262	EE6789	100GE
PIC 1	REV 03	750-034781	EE6655	100GE CFP
Xcvr 0	REV 01	740-032210	J11A22334	CFP-100G-LR4
BRIDGE 0	REV 03	711-029995	EE6572	100GE Bridge Board
MMB 0	REV 07	710-025563	BBAJ4657	ST-MMB2
MMB 1	REV 07	710-025563	BBAJ3073	ST-MMB2
FPC 6	REV 05	750-010153	EF4936	FPC Type 5-3D
CPU	REV 06	711-030686	EF4189	SNG PMB
PIC 0	REV 10	750-034624	BBAN4109	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04895	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04898	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11J04021	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04903	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04311	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04059	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04016	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04017	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B11J04887	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04297	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11J04893	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04022	SFP+-10G-SR
PIC 1	REV 02	750-034624	EE3711	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJH033X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01N0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01SV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ032L	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B10M01593	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJD0FF1	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01NU	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	123363A01305	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B10M00361	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01M7	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ032X	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01PG	SFP+-10G-SR
LMB 0	REV 04	711-034381	EF3838	Type-0 LMB
LMB 1	REV 03	711-035774	EF3821	Type-1 LMB
LMB 2	REV 04	711-034381	EF3834	Type-0 LMB
SPMB 0	REV 05	710-023321	ED1990	LCC Switch CPU
SPMB 1	REV 05	710-023321	EA2768	LCC Switch CPU
SIB 0	REV 02	711-036340	EF8802	SIB-HC-3D
SIB 1	REV 07	711-036340	EG2286	SIB-HC-3D
SIB 2	REV 07	711-036340	EG2252	SIB-HC-3D

SIB 3	REV 02	711-036340	EF1358	SIB-HC-3D
SIB 4	REV 02	711-036340	EF8806	SIB-HC-3D
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
-- Rev 2				
Fan Tray 2				Rear Fan Tray -- Rev 3

### show chassis hardware models (T4000 Router)

```
user@host> show chassis hardware models
```

```
Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 01   710-027486   RC8355         CHAS-BP-T1600-S
FPM Display   REV 01   710-021387   EF6764         CRAFT-T1600-S
CIP           REV 06   710-002895   BBAD9210       CIP-L-T640-S
PEM 0         REV 01   740-036442   VA00016        PWR-T-6-60-DC
SCG 0         REV 18   710-003423   BBAD7248       SCG-T-S
SCG 1         REV 18   710-003423   BBAE3874       SCG-T-S
Routing Engine 0 REV 05   740-026941   P737F-002248   RE-DUO-C1800-8G-S
Routing Engine 1 REV 06   740-026941   P737F-002653   RE-DUO-C1800-8G-S
CB 0          REV 09   710-022597   ED0295         CB-LCC-S
CB 1          REV 09   710-022597   EA6050         CB-LCC-S
FPC 3
  PIC 0        REV 08   750-035293   EF3657         PF-1CGE-CFP
  PIC 1        REV 10   750-034624   BBAN4098       PF-12XGE-SFPP
FPC 5         REV 03   710-033871   BBAJ0768       T1600-FPC4-ES
  PIC 1        REV 03   750-034781   EE6655         PD-1CE-CFP-FPC4
FPC 6
  PIC 0        REV 10   750-034624   BBAN4109       PF-12XGE-SFPP
Fan Tray 0    FANTRAY-T-S
Fan Tray 1    FANTRAY-T4000-S
Fan Tray 2    FAN-REAR-TXP-LCC
```

### show chassis hardware lcc (TX Matrix Router)

```
user@host> show chassis hardware lcc 0
```

```
lcc0-re0:
-----
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis              65751        T640
Midplane            REV 03   710-005608   RA1408        T640 Backplane
FPM GBUS            REV 09   710-002901   RA2784        T640 FPM Board
FPM Display         REV 05   710-002897   RA2825        FPM Display
CIP                 REV 06   710-002895   HT0684        T Series CIP
PEM 0               Rev 11   740-002595   PM18483       Power Entry Module
PEM 1               Rev 11   740-002595   qb13984       Power Entry Module
SCG 0               REV 11   710-003423   HT0022        T640 Sonet Clock Gen.
Routing Engine 0    REV 13   740-005022   210865700363  RE-3.0 (RE-600)
CB 0                REV 03   710-007655   HW1195        Control Board (CB-T)
FPC 1               REV 05   710-007527   HM3245        FPC Type 2
  CPU               REV 14   710-001726   HM1084        FPC CPU
  PIC 0             REV 02   750-007218   AZ1112        2x OC-12 ATM2 IQ, SMIR
  PIC 1             REV 02   750-007745   HG3462        4x OC-3 SONET, SMIR
  PIC 2             REV 14   750-001901   BA5390        4x OC-12 SONET, SMIR
  PIC 3             REV 09   750-008155   HS3012        2x G/E IQ, 1000 BASE
```

SFP 0		NON-JNPR	P1186TY	SFP-S
SFP 1	REV 01	740-007326	P11WLTF	SFP-SX
MMB 1	REV 02	710-005555	HL7514	MMB-288mbit
PPB 0	REV 04	710-003758	HM4405	PPB Type 2
PPB 1	REV 04	710-003758	AV1960	PPB Type 2
FPC 2	REV 08	710-010154	HZ3578	E-FPC Type 3
CPU	REV 05	710-010169	HZ3219	FPC CPU-Enhanced
PIC 0	REV 02	750-009567	HX2882	1x 10GE(LAN), XENPAK
SFP 0	REV 01	740-009898	USC202U709	XENPAK-LR
PIC 1	REV 03	750-003336	HJ9954	4x OC-48 SONET, SMSR
PIC 2	REV 01	750-004535	HC0235	1x OC-192 SM SR1
PIC 3	REV 07	750-007141	HX1699	10x 1GE(LAN), 1000 BASE

SFP 0	REV 01	740-007326	2441042	SFP-SX
SFP 1	REV 01	740-007326	2441027	SFP-SX
MMB 0	REV 03	710-010171	HV2365	MMB-5M3-288mbit
MMB 1	REV 03	710-010171	HZ3888	MMB-5M3-288mbit
SPMB 0	REV 09	710-003229	HW5245	T Series Switch CPU
SIB 3	REV 07	710-005781	HR5927	SIB-L8-F16
B Board	REV 06	710-005782	HR5971	SIB-L8-F16 (B)
SIB 4	REV 07	710-005781	HR5903	SIB-L8-F16
B Board	REV 06	710-005782	HZ5275	SIB-L8-F16 (B)

#### show chassis hardware scc (TX Matrix Router)

```
user@host> show chassis hardware scc
```

```
scc-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis				TX Matrix
Midplane	REV 04	710-004396	RB0014	SCC Midplane
FPM GBUS	REV 04	710-004617	HW9141	SCC FPM Board
FPM Display	REV 04	710-004619	HS5950	SCC FPM
CIP 0	REV 01	710-010218	HV9151	SCC CIP
CIP 1	REV 01	710-010218	HV9152	SCC CIP
PEM 1	Rev 11	740-002595	QB13977	Power Entry Module
Routing Engine 0	REV 05	740-008883	P11123900153	RE-4.0 (RE-1600)
CB 0	REV 01	710-011709	HR5964	Control Board (CB-TX)
SPMB 0	REV 09	710-003229	HW5293	T Series Switch CPU
SIB 3				
SIB 4	REV 01	710-005839	HW1177	SIB-S8-F16
B Board	REV 01	710-005840	HW1202	SIB-S8-F16 (B)

#### show chassis hardware (T1600 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			B2703	T1600
Midplane	REV 03	710-005608	RC4137	T640 Backplane
FPM GBUS	REV 10	710-002901	DT7062	T640 FPM Board
FPM Display	REV 05	710-002897	DS3067	FPM Display
CIP	REV 06	710-002895	DT3386	T-series CIP
PEM 0	Rev 07	740-017906	UA26344	Power Entry Module 3x80
PEM 1	Rev 18	740-002595	UF38441	Power Entry Module
SCG 0	REV 15	710-003423	DV0941	T640 Sonet Clock Gen.



Routing Engine 0	REV 08	740-014082	9009014502	RE-A-2000
Routing Engine 1	REV 07	740-014082	9009009591	RE-A-2000
CB 0	REV 05	710-007655	JA9360	Control Board (CB-T)
CB 1	REV 03	710-017707	DT3251	Control Board (CB-T)
FPC 0	REV 07	710-013558	DR4253	E2-FPC Type 2
CPU	REV 05	710-013563	DS3902	FPC CPU-Enhanced
PIC 0	REV 01	750-010618	CB5446	4x G/E SFP, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F11CW	SFP-SX
Xcvr 1	REV 01	740-011613	P9F15C2	SFP-SX
Xcvr 2	REV 01	740-011782	PB94K0L	SFP-SX
PIC 1	REV 06	750-001900	HB6399	1x OC-48 SONET, SMSR
PIC 2	REV 14	750-001901	AP1092	4x OC-12 SONET, SMIR
PIC 3	REV 07	750-001900	AR8275	1x OC-48 SONET, SMSR
MMB 1	REV 07	710-010171	DS1524	MMB-5M3-288mbit
FPC 1	REV 06	710-013553	DL9067	E2-FPC Type 1
CPU	REV 04	710-013563	DM1685	FPC CPU-Enhanced
PIC 0	REV 08	750-001072	AB1688	1x G/E, 1000 BASE-SX
PIC 1	REV 10	750-012266	JX5519	4x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	AM0812S8UK6	SFP-SX
Xcvr 2	REV 01	740-011613	AM0812S8UK1	SFP-SX
Xcvr 3	REV 01	740-011782	P8N1YHG	SFP-SX
PIC 2	REV 22	750-005634	DP0083	1x CHOC12 IQ SONET, SMIR
MMB 1	REV 07	710-008923	DN1862	MMB 3M 288-bit
FPC 2	REV 01	710-005548	HJ9899	FPC Type 3
CPU	REV 06	710-001726	HC0586	FPC CPU
PIC 0	REV 16	750-007141	NC9660	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011613	AM0812S8XAR	SFP-SX
Xcvr 1	REV 01	740-011782	P920E7B	SFP-SX
Xcvr 2	REV 01	740-011613	AM0812S8XAU	SFP-SX
Xcvr 4	REV 01	740-011613	AM0812S8XAK	SFP-SX
Xcvr 5	REV 01	740-011613	AM0812S8XAA	SFP-SX
Xcvr 6	REV 01	740-011613	PAJ4NKY	SFP-SX
Xcvr 7	REV 01	740-011613	AM0812S8UJW	SFP-SX
Xcvr 8	REV 01	740-011782	PB81X89	SFP-SX
Xcvr 9	REV 01	740-011613	AM0812S8UJX	SFP-SX
PIC 1	REV 06	750-015217	DK3280	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P8POA3T	SFP-SX
Xcvr 1	REV 01	740-013111	5090002	SFP-T
Xcvr 2	REV 01	740-011613	AM0814S93BQ	SFP-SX
Xcvr 4		NON-JNPR	PDE0FAN	SFP-SX
Xcvr 5	REV 01	740-011782	P8Q20XY	SFP-SX
Xcvr 6	REV 01	740-011613	AM0812S8UJV	SFP-SX
Xcvr 7	REV 01	740-011613	AM0812S8UP7	SFP-SX
PIC 2	REV 05	750-004695	HT4383	1x Tunnel
PIC 3	REV 17	750-009553	RL0204	4x OC-48 SONET
Xcvr 0	REV 01	740-011785	PDS3T23	SFP-SR
Xcvr 1	REV 01	740-011785	P6Q0F3E	SFP-SR
MMB 0	REV 03	710-004047	HD5843	MMB-288mbit
MMB 1	REV 03	710-004047	HE3208	MMB-288mbit
PPB 0	REV 02	710-002845	HA4524	PPB Type 3
PPB 1	REV 02	710-002845	HA4766	PPB Type 3
FPC 3	REV 01	710-010154	HR0863	E-FPC Type 3
CPU	REV 01	710-010169	HN3422	FPC CPU-Enhanced
PIC 0	REV 07	750-012793	WF5096	1x 10GE(LAN/WAN) IQ2
Xcvr 0		NON-JNPR	M64294TP	XFP-10G-LR
PIC 1	REV 25	750-007141	DV2127	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011613	PFA6LTJ	SFP-SX

Xcvr 1	REV 01	740-011782	P9P0XV4	SFP-SX
Xcvr 2	REV 01	740-011782	P9M0TNX	SFP-SX
Xcvr 4	REV 01	740-011782	P9B0TTP	SFP-SX
Xcvr 5		NON-JNPR	PBS4LED	SFP-SX
PIC 2	REV 17	750-009553	RL0212	4x OC-48 SONET
Xcvr 0	REV 01	740-011785	PDS3T8G	SFP-SR
PIC 3	REV 32	750-003700	DL1279	1x OC-192 12xMM VSR
MMB 0	REV 01	710-010171	HR0821	MMB-288mbit
MMB 1	REV 01	710-010171	HR0818	MMB-288mbit
FPC 4	REV 16	710-013037	EB4919	FPC Type 4-ES
CPU	REV 09	710-016744	BBAA4382	ST-PMB2
PIC 0	REV 03	711-029996	EB1569	100GE
PIC 1	REV 05	711-029999	EB9983	100GE CFP
Xcvr 0	REV 0	740-032210	J10G80746	CFP-100G-LR4
BRIDGE 0	REV 02	711-029995	EB2235	100GE Bridge Board
MMB 0	REV 04	710-025563	BBAA7112	ST-MMB2
MMB 1	REV 04	710-025563	BBAA7149	ST-MMB2
FPC 5	REV 02	710-013037	DE3407	FPC Type 4-ES
CPU	REV 04	710-016744	DA2124	ST-PMB2
PIC 0	REV 16	750-012518	DF2554	4x OC-192 SONET XFP
Xcvr 0	REV 01	740-014279	AA0745N1FX8	XFP-OC192-SR
Xcvr 1	REV 01	740-014279	AA0748N1HN5	XFP-OC192-SR
Xcvr 2	REV 01	740-014279	AA0748N1HT6	XFP-OC192-SR
Xcvr 3	REV 01	740-014279	AA0744N1EC9	XFP-OC192-SR
PIC 1	REV 01	750-010850	JA0329	1x OC-768 SONET SR
MMB 0	REV 04	710-016036	DE9577	ST-MMB2
MMB 1	REV 04	710-016036	DK4060	ST-MMB2
FPC 6	REV 14	710-013037	DV1431	FPC Type 4-ES
CPU	REV 09	710-016744	DT9020	ST-PMB2
PIC 0	REV 11	750-017405	DM6261	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 01	740-014289	C701XU05Q	XFP-10G-SR
Xcvr 1	REV 01	740-014279	AA0748N1HPT	XFP-10G-LR
Xcvr 2	REV 01	740-014289	T08E19189	XFP-10G-SR
Xcvr 3	REV 01	740-014289	C715XU058	XFP-10G-SR
PIC 1	REV 13	750-017405	DP8772	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 02	740-011571	C850XJ037	XFP-10G-SR
Xcvr 1	REV 02	740-014289	C839XU0L9	XFP-10G-SR
Xcvr 2	REV 02	740-014289	C834XU05A	XFP-10G-SR
Xcvr 3	REV 02	740-014289	C810XU0CE	XFP-10G-SR
MMB 0	REV 01	710-025563	DT8454	ST-MMB2
MMB 1	REV 01	710-025563	DT8366	ST-MMB2
FPC 7	REV 09	710-007529	HZ7624	FPC Type 3
CPU	REV 15	710-001726	HZ1413	FPC CPU
PIC 0	REV 10	750-012793	DM5627	1x 10GE (LAN/WAN) IQ2
Xcvr 0	REV 02	740-011571	C831XJ062	XFP-10G-SR
PIC 1	REV 01	750-015217	JT6762	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P8Q25JU	SFP-SX
Xcvr 1	REV 01	740-011782	P9B0U0K	SFP-SX
PIC 2	REV 01	750-015217	JS4268	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011613	AM0812S8XBZ	SFP-SX
Xcvr 1	REV 01	740-011613	AM0812S8XAP	SFP-SX
Xcvr 2	REV 01	740-011613	AM0812S8XBY	SFP-SX
Xcvr 3	REV 01	740-011613	AM0812S8XBX	SFP-SX
Xcvr 4	REV 01	740-011613	P9F1652	SFP-SX
Xcvr 5	REV 01	740-011782	P8Q21YC	SFP-SX
Xcvr 6	REV 01	740-011782	P8Q27HQ	SFP-SX
Xcvr 7	REV 01	740-011613	P8E2SSU	SFP-SX
PIC 3	REV 15	750-009450	NB6790	1x OC-192 SM SR2
MMB 0	REV 03	710-005555	HZ3450	MMB-288mbit
MMB 1	REV 03	710-005555	HZ3415	MMB-288mbit

PPB 0	REV 04	710-002845	HP0887	PPB Type 3
PPB 1	REV 04	710-002845	HW5255	PPB Type 3
SPMB 0	REV 10	710-003229	HX3699	T-series Switch CPU
SPMB 1	REV 12	710-003229	DT3091	T-series Switch CPU
SIB 0	REV 07	710-013074	DS4747	SIB-I8-SF
SIB 1	REV 07	710-013074	DS4942	SIB-I8-SF
SIB 2	REV 07	710-013074	DS4965	SIB-I8-SF
SIB 3	REV 07	710-013074	DS4990	SIB-I8-SF
SIB 4	REV 07	710-013074	DS4944	SIB-I8-SF
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 2

### show chassis hardware (TX Matrix Plus Router)

```
user@host> show chassis hardware
```

```
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN113186EAHB	TXP
Midplane	REV 05	710-022574	TS3822	SFC Midplane
FPM Display	REV 03	710-024027	DW4701	TXP FPM Display
CIP 0	REV 05	710-023792	DW7998	TXP CIP
CIP 1	REV 05	710-023792	DW7999	TXP CIP
PEM 0	Rev 04	740-027463	UM26367	Power Entry Module
PEM 1	Rev 04	740-027463	UM26346	Power Entry Module
Routing Engine 0	REV 06	740-026942	737A-1081	RE-DUO-2600
Routing Engine 1	REV 06	740-026942	737A-1043	RE-DUO-2600
CB 0	REV 05	710-022606	DW4435	SFC Control Board
CB 1	REV 09	710-022606	DW6100	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 04	750-024564	DW5764	F13 SIB
B Board	REV 03	710-023431	DW9053	F13 SIB Mezz
SIB F13 3	REV 04	750-024564	DW5785	F13 SIB
B Board	REV 03	710-023431	DW9030	F13 SIB Mezz
SIB F13 6				
SIB F13 8	REV 04	750-024564	DW5752	F13 SIB
B Board	REV 03	710-023431	DW9051	F13 SIB Mezz
SIB F13 11	REV 04	750-024564	DW5782	F13 SIB
B Board	REV 03	710-023431	DW9058	F13 SIB Mezz
SIB F13 12	REV 03	750-024564	DT9466	F13 SIB
B Board	REV 02	710-023431	DT6556	F13 SIB Mezz
SIB F2S 0/0	REV 05	710-022603	DW7898	F2S SIB
B Board	REV 05	710-023787	DW7625	F2S SIB Mezz
SIB F2S 0/2	REV 05	710-022603	DW7811	F2S SIB
B Board	REV 05	710-023787	DW7550	F2S SIB Mezz
SIB F2S 0/4	REV 04	710-022603	DW4873	F2S SIB
B Board	REV 05	710-023787	DW8509	F2S SIB Mezz
SIB F2S 0/6	REV 04	710-022603	DW4867	F2S SIB
B Board	REV 05	710-023787	DW8472	F2S SIB Mezz
SIB F2S 1/0	REV 04	710-022603	DW4871	F2S SIB
B Board	REV 05	710-023787	DW8497	F2S SIB Mezz
SIB F2S 1/2	REV 05	710-022603	DW7868	F2S SIB
B Board	REV 05	710-023787	DW7551	F2S SIB Mezz
SIB F2S 1/4	REV 04	710-022603	DW4854	F2S SIB
B Board	REV 05	710-023787	DW8496	F2S SIB Mezz
SIB F2S 1/6	REV 05	710-022603	DW7889	F2S SIB

B Board	REV 05	710-023787	DW7496	F2S SIB Mezz
SIB F2S 2/0	REV 04	710-022603	DW4852	F2S SIB
B Board	REV 05	710-023787	DW8498	F2S SIB Mezz
SIB F2S 2/2	REV 04	710-022603	DW4845	F2S SIB
B Board	REV 05	710-023787	DW8457	F2S SIB Mezz
SIB F2S 2/4	REV 05	710-022603	DW7802	F2S SIB
B Board	REV 05	710-023787	DW7562	F2S SIB Mezz
SIB F2S 2/6	REV 04	710-022603	DW4822	F2S SIB
B Board	REV 05	710-023787	DW8467	F2S SIB Mezz
SIB F2S 3/0	REV 05	710-022603	DW7815	F2S SIB
B Board	REV 05	710-023787	DW7518	F2S SIB Mezz
SIB F2S 3/2	REV 03	710-022603	DV0068	F2S SIB
B Board	REV 03	710-023787	DT9974	F2S SIB Mezz
SIB F2S 3/4	REV 05	710-022603	DW7874	F2S SIB
B Board	REV 05	710-023787	DW7601	F2S SIB Mezz
SIB F2S 3/6	REV 03	710-022603	DV0033	F2S SIB
B Board	REV 03	710-023787	DT9969	F2S SIB Mezz
SIB F2S 4/0	REV 03	710-022603	DV0043	F2S SIB
B Board	REV 03	710-023787	DT9948	F2S SIB Mezz
SIB F2S 4/2	REV 05	710-022603	DW5446	F2S SIB
B Board	REV 05	710-023787	DW7611	F2S SIB Mezz
SIB F2S 4/4	REV 04	710-022603	DW4826	F2S SIB
B Board	REV 05	710-023787	DW8458	F2S SIB Mezz
SIB F2S 4/6	REV 03	710-022603	DV0026	F2S SIB
B Board	REV 03	710-023787	DT9963	F2S SIB Mezz
Fan Tray 0	REV 02	760-024497	DR8290	Front Fan Tray
Fan Tray 1	REV 02	760-024497	DR8293	Front Fan Tray
Fan Tray 2	REV 05	760-024502	DR8280	Rear Fan Tray
Fan Tray 3				
Fan Tray 4	REV 05	760-024502	DR8276	Rear Fan Tray
Fan Tray 5	REV 02	760-024502	DP5643	Rear Fan Tray

lcc0-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11036F8AHA	T1600
Midplane	REV 03	710-017247	RC3799	T-series Backplane
FPM GBUS	REV 10	710-002901	DP7009	T640 FPM Board
FPM Display	REV 01	710-021387	DN7026	T1600 FPM Display
CIP	REV 06	710-002895	DP6024	T-series CIP
PEM 1	Rev 02	740-023211	WA50019	Power Entry Module 4x60A
SCG 0	REV 15	710-003423	DR6757	T640 Sonet Clock Gen.
SCG 1	REV 15	710-003423	DS2225	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-026941	737F-1040	RE-DUO-1800
Routing Engine 1	REV 01	740-026941	737F-1016	RE-DUO-1800
CB 0	REV 06	710-022597	DX4011	LCC Control Board
CB 1	REV 06	710-022597	DX4017	LCC Control Board
FPC 1	REV 07	710-013035	DN5847	FPC Type 3-ES
CPU	REV 08	710-016744	DP2570	ST-PMB2
PIC 0	REV 05	750-015217	DB0418	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P8Q27ZG	SFP-SX
Xcvr 1		NON-JNPR	PDA1U0D	SFP-SX
Xcvr 2	REV 01	740-011613	P9F1ALW	SFP-SX
Xcvr 3	REV 01	740-011782	PBA403V	SFP-SX
Xcvr 4		NON-JNPR	PDE09DP	SFP-SX
Xcvr 5	REV 01	740-011782	PCH2P4K	SFP-SX
Xcvr 6	REV 01	740-011782	PB94K0F	SFP-SX
Xcvr 7	REV 01	740-011782	PBA2R2A	SFP-SX
PIC 1	REV 03	750-004424	HJ4020	1x 10GE(LAN), DWDM

PIC 2	REV 01	750-003336	HG6073	4x OC-48 SONET, SMSR
MMB 0	REV 04	710-016036	DP3401	ST-MMB2
FPC 3	REV 12	710-013037	DR1169	FPC Type 4-ES
CPU	REV 08	710-016744	DP9429	ST-PMB2
PIC 0	REV 02	750-010850	JA0332	1x OC-768 SONET SR
MMB 0	REV 04	710-016036	DR0628	ST-MMB2
MMB 1	REV 04	710-016036	DR0592	ST-MMB2
FPC 4	REV 05	710-021534	DR7350	FPC Type 1-ES
CPU	REV 08	710-016744	DP8096	ST-PMB2
PIC 0	REV 04	750-014627	DP9171	4x OC-3 1x OC-12 SFP
Xcvr 0	REV 02	740-011615	PDE2RVR	SFP-SR
PIC 1	REV 22	750-005634	DS5815	1x CHOC12 IQ SONET, SMIR
PIC 2	REV 09	750-002911	CF4539	4x F/E, 100 BASE-TX
PIC 3	REV 08	750-021652	DR2827	1x CHOC12 IQE SONET
Xcvr 0		NON-JNPR	8	UNKNOWN
MMB 0	REV 04	710-016036	DR0809	ST-MMB2
FPC 5	REV 07	710-007529	HS5608	FPC Type 3
CPU	REV 15	710-001726	HX4351	FPC CPU
PIC 0	REV 14	750-009567	WJ8961	1x 10GE(LAN), XENPAK
Xcvr 0	REV 01	740-013170	J05K05961	XENPAK-LR
PIC 1	REV 16	750-007141	JJ8146	10x 1GE(LAN), 1000 BASE
Xcvr 1	REV 01	740-011613	P9F117T	SFP-SX
Xcvr 2	REV 01	740-011782	PBA2VCL	SFP-SX
Xcvr 3	REV 01	740-011782	PB83DRB	SFP-SX
Xcvr 4	REV 01	740-011613	AM0812S8UP8	SFP-SX
PIC 2	REV 12	750-009567	WF3566	1x 10GE(LAN), XENPAK
Xcvr 0	REV 02	740-013170	T07C94489	XENPAK-LR
MMB 0	REV 03	710-005555	HZ1907	MMB-288mbit
MMB 1	REV 03	710-005555	HW5283	MMB-288mbit
PPB 0	REV 04	710-002845	HZ7717	PPB Type 3
PPB 1	REV 04	710-002845	HS0110	PPB Type 3
FPC 6	REV 07	710-013035	DP7486	FPC Type 3-ES
CPU	REV 08	710-016744	DP2545	ST-PMB2
PIC 0	REV 09	750-009567	NE6323	1x 10GE(LAN), XENPAK
Xcvr 0	REV 02	740-013170	T09C71959	XENPAK-LR
PIC 1	REV 06	750-015217	DN4775	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P7E0T6M	SFP-SX
Xcvr 1	REV 01	740-011613	AM0812S8XAY	SFP-SX
Xcvr 2	REV 01	740-011782	P7E0T6J	SFP-SX
Xcvr 3	REV 01	740-011782	PCH2P7D	SFP-SX
Xcvr 4	REV 01	740-011782	P9B0QYT	SFP-SX
Xcvr 5	REV 01	740-011613	AM0812S8WQJ	SFP-SX
Xcvr 6	REV 02	740-013111	9301220	SFP-T
Xcvr 7	REV 01	740-011782	P9B0TZ5	SFP-SX
PIC 2	REV 06	750-015217	DM6747	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011613	PAP0ZB2	SFP-SX
Xcvr 1	REV 01	740-013111	70191002	SFP-T
Xcvr 6	REV 01	740-011782	PBA29H8	SFP-SX
Xcvr 7	REV 01	740-011613	AM0812S8WQG	SFP-SX
MMB 0	REV 04	710-016036	DP3238	ST-MMB2
FPC 7	REV 03	710-021540	DV3154	FPC Type 2-ES
CPU	REV 09	710-016744	DT9053	ST-PMB2
PIC 0	REV 13	750-001901	HB4225	4x OC-12 SONET, SMIR
PIC 1	REV 05	750-001900	AD3644	1x OC-48 SONET, SMSR
PIC 2	REV 10	750-008155	HV0335	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011782	PCH2UKF	SFP-SX
Xcvr 1	REV 01	740-011782	PCH2V19	SFP-SX
PIC 3	REV 03	750-014638	JS9493	1x OC-48-12-3 SFP

Xcvr 0	REV 01	740-011785	P6Q0ENK	SFP-SR
MMB 0	REV 05	710-016036	DP3323	ST-MMB2
SPMB 0	REV 04	710-023321	DX3004	LCC Switch CPU
SPMB 1	REV 04	710-023321	DX3009	LCC Switch CPU
SIB 0	REV 07	710-022594	DW4195	LCC SIB
B Board	REV 07	710-023185	DW3930	LCC SIB Mezz
SIB 1	REV 07	710-022594	DW4179	LCC SIB
B Board	REV 07	710-023185	DW3919	LCC SIB Mezz
SIB 2				
SIB 3	REV 06	710-022594	DT8251	LCC SIB
B Board	REV 06	710-023185	DT5792	LCC SIB Mezz
SIB 4	REV 08	710-022594	DW8014	LCC SIB
B Board	REV 07	710-023185	DW3917	LCC SIB Mezz
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 3

lcc1-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1102270AHA	T1600
Midplane	REV 04	710-017247	RC5358	T-series Backplane
FPM GBUS	REV 10	710-002901	DS3443	T640 FPM Board
FPM Display	REV 01	710-021387	DS6411	T1600 FPM Display
CIP	REV 06	710-002895	DS4235	T-series CIP
PEM 0	Rev 02	740-023211	VM82438	Power Entry Module 4x60A
SCG 0	REV 15	710-003423	DS6649	T640 Sonet Clock Gen.
SCG 1	REV 15	710-003423	DR6775	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-026941	737F-1083	RE-DUO-1800
Routing Engine 1	REV 01	740-026941	737F-1104	RE-DUO-1800
CB 0	REV 06	710-022597	DW8542	LCC Control Board
CB 1	REV 06	710-022597	DW8530	LCC Control Board
FPC 0	REV 02	710-010845	JE2392	FPC Type 4
CPU	REV 02	710-011481	JF6820	FPC CPU-Enhanced
PIC 0	REV 11	750-017405	DP7259	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 01	740-014279	AA0741N1C8T	XFP-10G-LR
Xcvr 1	REV 01	740-014279	AA0746N1GAM	XFP-10G-LR
Xcvr 2	REV 01	740-014279	AA0747N1H0B	XFP-10G-LR
Xcvr 3	REV 01	740-014279	AA0748N1HZ5	XFP-10G-LR
MMB 0	REV 03	710-010842	HY7601	ST-MMB
FPC 1	REV 16	710-013037	BBAA7398	FPC Type 4-ES
CPU	REV 09	710-016744	BBAA2329	ST-PMB2
PIC 0	REV 03	711-029996	EB1575	100GE
PIC 1	REV 06	750-034781	EB9980	100GE CFP
MMB 0	REV 04	710-025563	BBAA5325	ST-MMB2
MMB 1	REV 04	710-025563	BBAA5444	ST-MMB2
FPC 2	REV 16	710-013037	BBAA7185	FPC Type 4-ES
CPU	REV 09	710-016744	BBAA3522	ST-PMB2
PIC 0	REV 03	711-029996	EB1557	100GE
PIC 1	REV 05	750-034781	EB4660	100GE CFP
Xcvr 0	REV 0	740-032210	J10F73666	CFP-100G-LR4
BRIDGE 0	REV 02	711-029995	EB2237	100GE Bridge Board
MMB 0	REV 04	710-025563	BBAA5347	ST-MMB2
MMB 1	REV 04	710-025563	BBAA5401	ST-MMB2
FPC 3	REV 10	710-021534	DZ0941	FPC Type 1-ES
CPU	REV 09	710-016744	DY6364	ST-PMB2
PIC 0	REV 13	750-012266	DK9192	4x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	AM0812S8WVD	SFP-SX
Xcvr 1		NON-JNPR	PDD63Q4	SFP-SX

Xcvr 2		NON-JNPR	PDE4G54	SFP-SX
Xcvr 3		NON-JNPR	PD40MAG	SFP-SX
PIC 1	REV 01	750-007641	HJ2003	1x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	AM0812S8WVG	SFP-SX
PIC 3	REV 17	750-007444	JB6873	1x CHSTM1 IQ SDH, SMIR
MMB 0	REV 04	710-025563	DZ0281	ST-MMB2
FPC 4	REV 06	710-013035	DK0614	FPC Type 3-ES
CPU	REV 07	710-016744	DK1616	ST-PMB2
PIC 0	REV 22	750-007141	DM1870	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	PCL3UKW	SFP-SX
Xcvr 1	REV 01	740-011782	P7E0T73	SFP-SX
Xcvr 2	REV 01	740-007326	P4T0WLR	SFP-SX
Xcvr 3	REV 01	740-011782	PAR1LRL	SFP-SX
Xcvr 4	REV 01	740-011782	P9M0U3Z	SFP-SX
Xcvr 5	REV 01	740-011782	P9M0U0C	SFP-SX
Xcvr 6	REV 01	740-011782	P9M0TLG	SFP-SX
Xcvr 7	REV 01	740-011782	P9M0U0F	SFP-SX
Xcvr 8	REV 01	740-011613	PFA6LAP	SFP-SX
Xcvr 9	REV 01	740-011782	PCH2POU	SFP-SX
PIC 1	REV 16	750-009450	CV2565	1x OC-192 SM SR2
PIC 2	REV 05	750-004424	HH3057	1x 10GE(LAN),10GBASE-LR
PIC 3	REV 12	750-013423	DP0403	MultiServices 500
MMB 0	REV 04	710-016036	DK1988	ST-MMB2
FPC 5	REV 07	710-013560	DR0004	E2-FPC Type 3
CPU	REV 05	710-013563	DR0089	FPC CPU-Enhanced
PIC 0	REV 11	750-012793	DR6107	1x 10GE(LAN/WAN) IQ2
Xcvr 0	REV 01	740-014289	C743XU074	XFP-10G-SR
PIC 1	REV 01	750-004695	HD5980	1x Tunnel
PIC 2	REV 32	750-003700	DL3770	1x OC-192 12xMM VSR
PIC 3	REV 12	750-009553	WB8901	4x OC-48 SONET
Xcvr 0	REV 01	740-011785	P9D1GTQ	SFP-SR
Xcvr 1	REV 01	740-011785	PDSOMMB	SFP-SR
Xcvr 3	REV 01	740-011785	PDE1KXP	SFP-SR
MMB 0	REV 07	710-010171	DP7374	MMB-5M3-288mbit
MMB 1	REV 07	710-010171	DP7404	MMB-5M3-288mbit
FPC 6	REV 07	710-013035	DM0994	FPC Type 3-ES
CPU	REV 07	710-016744	DM3651	ST-PMB2
PIC 0	REV 07	750-015217	DN4743	8x 1GE(TYPE3), IQ2
Xcvr 3	REV 01	740-011613	AM0812S8XB0	SFP-SX
Xcvr 4	REV 01	740-011782	PB829RB	SFP-SX
Xcvr 5	REV 01	740-011782	P8J1SYX	SFP-SX
PIC 1	REV 03	750-003336	HJ9954	4x OC-48 SONET, SMSR
PIC 3	REV 02	750-012793	JM7665	1x 10GE(LAN/WAN) IQ2
MMB 0	REV 04	710-016036	DN6913	ST-MMB2
FPC 7	REV 08	710-010845	JM3958	FPC Type 4
CPU	REV 04	710-011481	JK3669	FPC CPU-Enhanced
PIC 0	REV 11	750-017405	DP8837	4x 10GE (LAN/WAN) XFP
Xcvr 1	REV 01	740-014279	753019A00277	XFP-10G-LR
Xcvr 2	REV 02	740-011571	C850XJ00P	XFP-10G-SR
Xcvr 3	REV 01	740-014279	AA0813N1RTG	XFP-10G-LR
MMB 0	REV 04	710-010842	JN1971	ST-MMB
SPMB 0	REV 04	710-023321	DW3629	LCC Switch CPU
SPMB 1	REV 04	710-023321	DW3621	LCC Switch CPU
SIB 0	REV 07	710-022594	DW4200	LCC SIB
B Board	REV 07	710-023185	DW3932	LCC SIB Mezz
SIB 1	REV 07	710-022594	DW4193	LCC SIB
B Board	REV 07	710-023185	DW3904	LCC SIB Mezz
SIB 2				

SIB 3	REV 07	710-022594	DW4210	LCC SIB
B Board	REV 06	710-023185	DT5780	LCC SIB Mezz
SIB 4	REV 08	710-022594	DW8019	LCC SIB
B Board	REV 06	710-023185	DT5795	LCC SIB Mezz
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 3

### show chassis hardware sfc (TX Matrix Plus Router)

```
user@host> show chassis hardware sfc 0
```

```
sfc0-re0:
```

```
-----
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN112F007AHB	TXP
Midplane	REV 05	710-022574	TS4027	SFC Midplane
FPM Display	REV 03	710-024027	DX0282	TXP FPM Display
CIP 0	REV 04	710-023792	DW4889	TXP CIP
CIP 1	REV 04	710-023792	DW4887	TXP CIP
PEM 0	Rev 07	740-027463	UM26368	Power Entry Module
Routing Engine 0	REV 01	740-026942	737A-1064	SFC RE
Routing Engine 1	REV 01	740-026942	737A-1082	SFC RE
CB 0	REV 09	710-022606	DW6099	SFC Control Board
CB 1	REV 09	710-022606	DW6096	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 04	710-022600	DX0841	F13 SIB
B Board	REV 03	710-023431	DX0966	F13 SIB Mezz
SIB F13 1	REV 04	750-024564	DW5776	F13 SIB
B Board	REV 03	710-023431	DW9028	F13 SIB
SIB F13 3	REV 04	750-024564	DW5762	F13 SIB
B Board	REV 03	710-023431	DW9059	F13 SIB
SIB F13 4	REV 04	750-024564	DW5797	F13 SIB
B Board	REV 03	710-023431	DW9041	F13 SIB
SIB F13 6	REV 04	750-024564	DW5770	F13 SIB
B Board	REV 03	710-023431	DW9079	F13 SIB Mezz
SIB F13 7	REV 04	750-024564	DW5758	F13 SIB
B Board	REV 03	710-023431	DW9047	F13 SIB
SIB F13 8	REV 04	750-024564	DW5761	F13 SIB
B Board	REV 03	710-023431	DW9043	F13 SIB Mezz
SIB F13 9	REV 04	750-024564	DW5754	F13 SIB
B Board	REV 03	710-023431	DW9078	F13 SIB Mezz
SIB F13 11	REV 04	710-022600	DX0826	F13 SIB
B Board	REV 03	710-023431	DX0967	F13 SIB Mezz
SIB F13 12	REV 04	750-024564	DW5794	F13 SIB
B Board	REV 03	710-023431	DW9044	F13 SIB Mezz
SIB F2S 0/0	REV 05	710-022603	DW7897	F2S SIB
B Board	REV 05	710-023787	DW7657	NEO PMB
SIB F2S 0/2	REV 05	710-022603	DW7833	F2S SIB
B Board	REV 05	710-023787	DW7526	NEO PMB
SIB F2S 0/4	REV 05	710-022603	DW7875	F2S SIB
B Board	REV 05	710-023787	DW7588	NEO PMB
SIB F2S 0/6	REV 05	710-022603	DW7860	F2S SIB
B Board	REV 05	710-023787	DW7589	NEO PMB
SIB F2S 1/0	REV 04	710-022603	DW4820	F2S SIB
B Board	REV 05	710-023787	DW8510	NEO PMB
SIB F2S 1/2	REV 05	710-022603	DW7849	F2S SIB
B Board	REV 05	710-023787	DW7525	NEO PMB



SIB F2S 1/4	REV 05	710-022603	DW7927	F2S SIB
B Board	REV 05	710-023787	DW7556	F2S SIB Mezz
SIB F2S 1/6	REV 05	710-022603	DW7866	F2S SIB
B Board	REV 05	710-023787	DW7651	NEO PMB
SIB F2S 2/0	REV 05	710-022603	DW7880	F2S SIB
B Board	REV 05	710-023787	DW7523	NEO PMB
SIB F2S 2/2	REV 05	710-022603	DW7895	F2S SIB
B Board	REV 05	710-023787	DW7591	NEO PMB
SIB F2S 2/4	REV 05	710-022603	DW7907	F2S SIB
B Board	REV 05	710-023787	DW7590	NEO PMB
SIB F2S 2/6	REV 05	710-022603	DW7785	F2S SIB
B Board	REV 05	710-023787	DW7524	NEO PMB
SIB F2S 3/0	REV 05	710-022603	DW7782	F2S SIB
B Board	REV 05	710-023787	DW7634	NEO PMB
SIB F2S 3/2	REV 05	710-022603	DW7793	F2S SIB
B Board	REV 05	710-023787	DW7548	NEO PMB
SIB F2S 3/4	REV 05	710-022603	DW7779	F2S SIB
B Board	REV 05	710-023787	DW7587	NEO PMB
SIB F2S 3/6	REV 05	710-022603	DW7930	F2S SIB
B Board	REV 05	710-023787	DW7505	NEO PMB
SIB F2S 4/0	REV 05	710-022603	DW7867	F2S SIB
B Board	REV 05	710-023787	DW7656	NEO PMB
SIB F2S 4/2	REV 05	710-022603	DW7917	F2S SIB
B Board	REV 05	710-023787	DW7640	NEO PMB
SIB F2S 4/4	REV 05	710-022603	DW7929	F2S SIB
B Board	REV 05	710-023787	DW7643	NEO PMB
SIB F2S 4/6	REV 05	710-022603	DW7870	F2S SIB
B Board	REV 05	710-023787	DW7635	NEO PMB
Fan Tray 0	REV 06	760-024497	DV7831	Front Fan Tray
Fan Tray 1	REV 06	760-024497	DV9614	Front Fan Tray
Fan Tray 2	REV 06	760-024502	DV9618	Rear Fan Tray
Fan Tray 3	REV 06	760-024502	DV9616	Rear Fan Tray
Fan Tray 4	REV 06	760-024502	DV7807	Rear Fan Tray
Fan Tray 5	REV 06	760-024502	DV7828	Rear Fan Tray

### show chassis hardware extensive (TX Matrix Plus Router)

```
user@host> show chassis hardware extensive
```

```
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN112F007AHB	TXP
Jedec Code:	0x7fb0	EEPROM Version:	0x02	
		S/N:	JN112F007AHB	
Assembly ID:	0x052c	Assembly Version:	00.00	
Date:	00-00-0000	Assembly Flags:	0x00	
ID:	TXP			

```
Board Information Record:
```

```
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
I2C Hex Data:
```

```
Address 0x00: 7f b0 02 ff 05 2c 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x20: 4a 4e 31 31 32 46 30 30 37 41 48 42 00 00 00 00
```

```
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```

Midplane          REV 05   710-022574   TS4027          SFC Midplane
Jedec Code:      0x7fb0          EEPROM Version: 0x01
P/N:             710-022574      S/N:            TS4027
Assembly ID:     0x0962          Assembly Version: 01.05
Date:            03-23-2009      Assembly Flags: 0x00
Version:         REV 05
ID: SFC Midplane
Board Information Record:
  Address 0x00: ad 01 ff ff 00 1d b5 14 00 00 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 09 62 01 05 52 45 56 20 30 35 00 00
  Address 0x10: 00 00 00 00 37 31 30 2d 30 32 32 35 37 34 00 00
  Address 0x20: 53 2f 4e 20 54 53 34 30 32 37 00 00 00 17 03 07
  Address 0x30: d9 ff ff ff ad 01 ff ff 00 1d b5 14 00 00 ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

FPM Display       REV 03   710-024027   DX0282          TXP FPM Display
Jedec Code:      0x7fb0          EEPROM Version: 0x01
P/N:             710-024027      S/N:            DX0282
Assembly ID:     0x096c          Assembly Version: 01.03
Date:            02-10-2009      Assembly Flags: 0x00
Version:         REV 03
ID: TXP FPM Display          FRU Model Number: CRAFT-TXP
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 09 6c 01 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 31 30 2d 30 32 34 30 32 37 00 00
  Address 0x20: 53 2f 4e 20 44 58 30 32 38 32 00 00 00 0a 02 07
  Address 0x30: d9 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
  Address 0x50: 52 41 46 54 2d 54 58 50 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

CIP 0             REV 04   710-023792   DW4889          TXP CIP
Jedec Code:      0x7fb0          EEPROM Version: 0x01
P/N:             710-023792      S/N:            DW4889
Assembly ID:     0x0969          Assembly Version: 01.04
Date:            01-26-2009      Assembly Flags: 0x00
Version:         REV 04
ID: TXP CIP          FRU Model Number: CIP-TXP
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

### show chassis hardware clei-models (TX Matrix Plus Router)

```
user@host> show chassis hardware clei-models
```

```
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 05	710-022574		CHAS-BP-TXP-S
FPM Display	REV 03	710-024027		CRAFT-TXP-S
CIP 0	REV 05	710-023792		CIP-TXP-S
CIP 1	REV 05	710-023792		CIP-TXP-S
PEM 0	Rev 04	740-027463	IPUPAFGKTA	PWR-TXP-7-60-DC
PEM 1	Rev 04	740-027463	IPUPAFGKTA	PWR-TXP-7-60-DC

Routing Engine 0	REV 06	740-026942	RE-DUO-C2600-16G-S
Routing Engine 1	REV 06	740-026942	RE-DUO-C2600-16G-S
CB 0	REV 05	710-022606	CB-TXP-S
CB 1	REV 09	710-022606	CB-TXP-S
SIB F13 0	REV 04	750-024564	SIB-TXP-F13
SIB F13 3	REV 04	750-024564	SIB-TXP-F13
SIB F13 8	REV 04	750-024564	SIB-TXP-F13
SIB F13 11	REV 04	750-024564	SIB-TXP-F13
SIB F13 12	REV 03	750-024564	SIB-TXP-F13
SIB F2S 0/0	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 0/2	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 0/4	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 0/6	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 1/0	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 1/2	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 1/4	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 1/6	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 2/0	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 2/2	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 2/4	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 2/6	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 3/0	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 3/2	REV 03	710-022603	SIB-TXP-F2S-S
SIB F2S 3/4	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 3/6	REV 03	710-022603	SIB-TXP-F2S-S
SIB F2S 4/0	REV 03	710-022603	SIB-TXP-F2S-S
SIB F2S 4/2	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 4/4	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 4/6	REV 03	710-022603	SIB-TXP-F2S-S
Fan Tray 0	REV 02	760-024497	FANTRAY-TXP-H-S
Fan Tray 1	REV 02	760-024497	FANTRAY-TXP-H-S
Fan Tray 2	REV 05	760-024502	FANTRAY-TXP-V-S
Fan Tray 3			
Fan Tray 4	REV 05	760-024502	FANTRAY-TXP-V-S
Fan Tray 5	REV 02	760-024502	FANTRAY-TXP-V-S

```
1cc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-017247		CHAS-BP-T1600-S
FPM Display	REV 01	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 1	Rev 02	740-023211	IPUPAC8KTA	PWR-T1600-4-60-DC-S
SCG 0	REV 15	710-003423		SCG-T-S
SCG 1	REV 15	710-003423		SCG-T-S
Routing Engine 0	REV 01	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 01	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 06	710-022597		CB-LCC-S
CB 1	REV 06	710-022597		CB-LCC-S
FPC 1	REV 07	710-013035		T640-FPC3-ES
PIC 0	REV 05	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 1	REV 03	750-004424		PC-1XGE-LR
PIC 2	REV 01	750-003336		PC-40C48-SON-SMSR
FPC 3	REV 12	710-013037		T1600-FPC4-ES
PIC 0	REV 02	750-010850		PD-10C768-SON-SR
FPC 4	REV 05	710-021534		T640-FPC1-ES
PIC 0	REV 04	750-014627		PB-40C3-10C12-SON-SFP
PIC 1	REV 22	750-005634		PB-1CHOC12SMIR-QPP
PIC 2	REV 09	750-002911		PB-4FE-TX

PIC 3	REV 08	750-021652	PB-1CH0C12-STM4-IQE-SFP
FPC 5	REV 07	710-007529	T640-FPC3
PIC 0	REV 14	750-009567	PC-1XGE-XENPAK
PIC 1	REV 16	750-007141	PC-10GE-SFP
PIC 2	REV 12	750-009567	PC-1XGE-XENPAK
FPC 6	REV 07	710-013035	T640-FPC3-ES
PIC 0	REV 09	750-009567	PC-1XGE-XENPAK
PIC 1	REV 06	750-015217	PC-8GE-TYPE3-SFP-IQ2
PIC 2	REV 06	750-015217	PC-8GE-TYPE3-SFP-IQ2
FPC 7	REV 03	710-021540	T640-FPC2-ES
PIC 0	REV 13	750-001901	PB-40C12-SON-SMIR
PIC 1	REV 05	750-001900	PB-10C48-SON-SMSR
PIC 2	REV 10	750-008155	PB-2GE-SFP-QPP
PIC 3	REV 03	750-014638	PB-10C48-SON-B-SFP
SIB 0	REV 07	710-022594	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	SIB-TXP-T1600-S
SIB 3	REV 06	710-022594	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	SIB-TXP-T1600-S
Fan Tray 0			FANTRAY-T-S
Fan Tray 1			FANTRAY-T-S
Fan Tray 2			FANTRAY-TXP-R-S

lcc1-re0:

-----  
Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	710-017247		CHAS-BP-T1600-S
FPM Display	REV 01	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	Rev 02	740-023211	IPUPAC8KTA	PWR-T1600-4-60-DC-S
SCG 0	REV 15	710-003423		SCG-T-S
SCG 1	REV 15	710-003423		SCG-T-S
Routing Engine 0	REV 01	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 01	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 06	710-022597		CB-LCC-S
CB 1	REV 06	710-022597		CB-LCC-S
FPC 0	REV 02	710-010845		T640-FPC4-ES
PIC 0	REV 11	750-017405		PD-4XGE-XFP
FPC 1	REV 16	710-013037		T1600-FPC4-ES
PIC 1	REV 06	750-034781		PD-1CE-CFP
FPC 2	REV 16	710-013037		T1600-FPC4-ES
PIC 1	REV 05	750-034781		PD-1CE-CFP
FPC 3	REV 10	710-021534		T640-FPC1-ES
PIC 0	REV 13	750-012266		PB-4GE-TYPE1-SFP-IQ2
PIC 1	REV 01	750-007641		PE-1GE-SFP-QPP
PIC 3	REV 17	750-007444		PB-1CHSTM1-SMIR-QPP
FPC 4	REV 06	710-013035		T640-FPC3-ES
PIC 0	REV 22	750-007141		PC-10GE-SFP
PIC 1	REV 16	750-009450		PC-10C192-SON-SR2
PIC 2	REV 05	750-004424		PC-1XGE-LR
PIC 3	REV 12	750-013423		PC-MS-500-3
FPC 5	REV 07	710-013560		T640-FPC3-E2
PIC 0	REV 11	750-012793		PC-1XGE-TYPE3-XFP-IQ2
PIC 1	REV 01	750-004695		PC-TUNNEL
PIC 2	REV 32	750-003700		PC-10C192-SON-VSR
PIC 3	REV 12	750-009553		PC-40C48-SON-SFP
FPC 6	REV 07	710-013035		T640-FPC3-ES
PIC 0	REV 07	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 1	REV 03	750-003336		PC-40C48-SON-SMSR
PIC 3	REV 02	750-012793		PC-1XGE-TYPE3-XFP-IQ2

FPC 7	REV 08	710-010845	T640-FPC4-ES
PIC 0	REV 11	750-017405	PD-4XGE-XFP
SIB 0	REV 07	710-022594	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	SIB-TXP-T1600-S
SIB 3	REV 07	710-022594	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	SIB-TXP-T1600-S
Fan Tray 0			FANTRAY-T-S
Fan Tray 1			FANTRAY-T-S
Fan Tray 2			FANTRAY-TXP-R-S

### show chassis hardware detail (TX Matrix Plus Router)

```
user@host> show chassis hardware detail
```

```
sfc0-re0:
```

```
-----  
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN111B023AHB	TXP
Midplane	REV 01	710-022574	TR7990	SFC Midplane
FPM Display	REV 03	710-024027	DW4699	TXP FPM Display
CIP 0	REV 01	710-023792	DR1437	TXP CIP
CIP 1	REV 02	710-023792	DS4564	TXP CIP
PEM 0	Rev 07	740-027463	UM26360	Power Entry Module
Routing Engine 0	REV 01	740-026942	737A-1024	SFC RE
ad0	3887 MB	SMART CF	200811050193CEB1CEB1	Compact Flash
ad1	30533 MB	SAMSUNG MCBQE32G8MPP-0V	SY814A0762	Disk 1
Routing Engine 1	REV 01	740-026942	737A-1024	SFC RE
ad0	3887 MB	SMART CF	20081105004C19A019A0	Compact Flash
ad1	30533 MB	SAMSUNG MCBQE32G8MPP-0V	SY814A0794	Disk 1
CB 0	REV 03	710-022606	DR7134	SFC Control Board
CB 1	REV 01	710-022606	DP8890	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 03	750-024564	DT9478	F13 SIB
B Board	REV 02	710-023431	DT6554	F13 SIB
SIB F13 1	REV 03	750-024564	DT9454	F13 SIB
B Board	REV 02	710-023431	DT6551	F13 SIB
SIB F2S 0/0	REV 02	710-022603	DT2838	F2S SIB
B Board	REV 02	710-023787	DT1725	NEO PMB
SIB F2S 0/2	REV 02	710-022603	DT2824	F2S SIB
B Board	REV 02	710-023787	DT1706	NEO PMB
SIB F2S 0/4	REV 02	710-022603	DT2822	F2S SIB
B Board	REV 02	710-023787	DT1696	NEO PMB
SIB F2S 0/6	REV 02	710-022603	DT2823	F2S SIB
B Board	REV 02	710-023787	DT1717	NEO PMB
SIB F2S 1/0	REV 03	710-022603	DV0059	F2S SIB
B Board	REV 03	710-023787	DT9942	NEO PMB
SIB F2S 1/2	REV 02	710-022603	DT2826	F2S SIB
B Board	REV 02	710-023787	DT1713	NEO PMB
SIB F2S 1/4	REV 03	710-022603	DV0092	F2S SIB
B Board	REV 03	710-023787	DV0000	NEO PMB
SIB F2S 1/6	REV 03	710-022603	DV0079	F2S SIB
B Board	REV 03	710-023787	DT9972	NEO PMB
SIB F2S 2/0	REV 03	710-022603	DV0100	F2S SIB
B Board	REV 03	710-023787	DT9925	NEO PMB
SIB F2S 2/2	REV 03	710-022603	DV0050	F2S SIB
B Board	REV 03	710-023787	DV0005	NEO PMB
SIB F2S 2/4	REV 03	710-022603	DV0097	F2S SIB
B Board	REV 03	710-023787	DT9936	NEO PMB

Fan Tray 0	REV 02	760-024497	DR8286	Front Fan Tray
Fan Tray 1	REV 06	760-024497	DV9624	Front Fan Tray
Fan Tray 2	REV 02	760-024502	DR8259	Rear Fan Tray
Fan Tray 3	REV 02	760-024502	DR8270	Rear Fan Tray
Fan Tray 4	REV 02	760-024502	DR8284	Rear Fan Tray
Fan Tray 5	REV 06	760-024502	DV7813	Rear Fan Tray

lcc0-re0:

-----

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1101F27AHA	T1600
Midplane	REV 04	710-017247	RC5317	T Series Backplane
FPM GBUS	REV 10	710-002901	DS8197	T640 FPM Board
FPM Display	REV 01	710-021387	DS6433	T1600 FPM Display
CIP	REV 06	710-002895	DS1493	T Series CIP
PEM 0	Rev 08	740-017906	UD26601	Power Entry Module 3x80
SCG 0	REV 15	710-003423	DP5847	T640 Sonet Clock Gen.
SCG 1	REV 15	710-003423	DR0924	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-026942	737F-1024	LCC RE
ad0	3887 MB	SMART CF	2008110502B63E513E51	Compact Flash
ad1	30533 MB	SAMSUNG	MCBQE32G8MPP-0V SY814A1208	Disk 1
Routing Engine 1	REV 01	740-026942	737F-1024	LCC RE
ad0	3887 MB	SMART CF	2008110500F9A8A8A8A8	Compact Flash
ad1	30533 MB	SAMSUNG	MCBQE32G8MPP-0V SY814A1076	Disk 1
CB 0	REV 05	710-022597	DV4264	LCC Control Board
CB 1	REV 03	710-022597	DP8558	LCC Control Board
FPC 0	REV 14	710-013037	DS9967	FPC Type 4-ES
CPU	REV 08	710-016744	DS3989	ST-PMB2
PIC 0	REV 12	750-013198	DL7506	1x Tunnel
PIC 1	REV 12	750-013198	DL7505	1x Tunnel
MMB 0	REV 01	710-025563	DS8524	ST-MMB2
MMB 1	REV 01	710-025563	DS8373	ST-MMB2
FPC 1	REV 14	710-013037	DT0027	FPC Type 4-ES
CPU	REV 09	710-016744	DS7684	ST-PMB2
PIC 0	REV 12	750-013198	DL7512	1x Tunnel
PIC 1	REV 12	750-013198	DL7498	1x Tunnel
MMB 0	REV 01	710-025563	DS8494	ST-MMB2
MMB 1	REV 01	710-025563	DS8436	ST-MMB2
SPMB 0	REV 04	710-023321	DV3867	LCC Switch CPU
SPMB 1	REV 02	710-023321	DP0238	LCC Switch CPU
SIB 0	REV 06	710-022594	DT8268	LCC SIB
B Board	REV 06	710-023185	DT5791	LCC SIB Mezz
SIB 1	REV 06	710-022594	DT8261	LCC SIB
B Board	REV 06	710-023185	DT5769	LCC SIB Mezz
SIB 2	REV 04	710-022594	DS2315	LCC SIB
B Board	REV 06	710-023185	DT5788	LCC SIB Mezz
SIB 3	REV 06	710-022594	DT8253	LCC SIB
B Board	REV 06	710-023185	DT5811	LCC SIB Mezz
SIB 4	REV 06	710-022594	DT8248	LCC SIB
B Board	REV 06	710-023185	DT5812	LCC SIB Mezz
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray

### show chassis hardware models (TX Matrix Plus Router)

```
user@host> show chassis hardware models
```

sfc0-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
FPM Display	REV 03	710-024027	DX0282	CRAFT-TXP
CIP 0	REV 04	710-023792	DW4889	CIP-TXP
CIP 1	REV 04	710-023792	DW4887	CIP-TXP
PEM 0	Rev 07	740-027463	UM26368	yyyyyyyyyyyyyyyyyyyyyyyyyy
Routing Engine 0	REV 01	740-026942	737A-1064	RE-TXP-SFC-DU0-2600-16G
Routing Engine 1	REV 01	740-026942	737A-1082	RE-TXP-SFC-DU0-2600-16G
CB 0	REV 09	710-022606	DW6099	CB-TXP
CB 1	REV 09	710-022606	DW6096	CB-TXP
SIB F13 1	REV 04	750-024564	DW5776	SIB-TXP-F13
SIB F13 3	REV 04	750-024564	DW5762	SIB-TXP-F13
SIB F13 4	REV 04	750-024564	DW5797	SIB-TXP-F13
SIB F13 6	REV 04	750-024564	DW5770	SIB-TXP-F13
SIB F13 7	REV 04	750-024564	DW5758	SIB-TXP-F13
SIB F13 8	REV 04	750-024564	DW5761	SIB-TXP-F13
SIB F13 9	REV 04	750-024564	DW5754	SIB-TXP-F13
SIB F13 12	REV 04	750-024564	DW5794	SIB-TXP-F13
SIB F2S 0/0	REV 05	710-022603	DW7897	
SIB F2S 0/2	REV 05	710-022603	DW7833	
SIB F2S 0/4	REV 05	710-022603	DW7875	
SIB F2S 0/6	REV 05	710-022603	DW7860	
SIB F2S 1/0	REV 04	710-022603	DW4820	
SIB F2S 1/2	REV 05	710-022603	DW7849	
SIB F2S 1/4	REV 05	710-022603	DW7927	SIB-TXP-F2S
SIB F2S 1/6	REV 05	710-022603	DW7866	
SIB F2S 2/0	REV 05	710-022603	DW7880	
SIB F2S 2/2	REV 05	710-022603	DW7895	
SIB F2S 2/4	REV 05	710-022603	DW7907	
SIB F2S 2/6	REV 05	710-022603	DW7785	
SIB F2S 3/0	REV 05	710-022603	DW7782	
SIB F2S 3/2	REV 05	710-022603	DW7793	
SIB F2S 3/4	REV 05	710-022603	DW7779	
SIB F2S 3/6	REV 05	710-022603	DW7930	
SIB F2S 4/0	REV 05	710-022603	DW7867	
SIB F2S 4/2	REV 05	710-022603	DW7917	
SIB F2S 4/4	REV 05	710-022603	DW7929	
SIB F2S 4/6	REV 05	710-022603	DW7870	
Fan Tray 0	REV 06	760-024497	DV7831	FANTRAY-TXP-F
Fan Tray 1	REV 06	760-024497	DV9614	FANTRAY-TXP-F
Fan Tray 2	REV 06	760-024502	DV9618	FANTRAY-TXP-R
Fan Tray 3	REV 06	760-024502	DV9616	FANTRAY-TXP-R
Fan Tray 4	REV 06	760-024502	DV7807	FANTRAY-TXP-R
Fan Tray 5	REV 06	760-024502	DV7828	FANTRAY-TXP-R

lcc0-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 03	710-017247	RC3765	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DN5441	CRAFT-T1600-S
CIP	REV 06	710-002895	DP6021	CIP-L-T640-S
PEM 0	Rev 07	740-017906	UA26384	PWR-T1600-3-80-DC-S
PEM 1	Rev 07	740-017906	UA26296	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DR0875	SCG-T-S
CB 0	REV 06	710-022597	DW8534	CB-LCC
CB 1	REV 06	710-022597	DW8527	CB-LCC
FPC 4	REV 12	710-013037	DJ8717	T1600-FPC4-ES

PIC 0	REV 11	750-017405	DP8795	PD-4XGE-XFP
PIC 1	REV 11	750-017405	DP8794	PD-4XGE-XFP
FPC 6	REV 14	710-013037	DS5335	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7634	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7637	PD-4XGE-XFP
FPC 7	REV 07	710-013035	DM0990	T1600-FPC3-ES
PIC 0	REV 16	750-007141	JJ8067	PC-10GE-SFP
PIC 1	REV 08	750-015749	WE9598	PC-10C192-SON-XFP
PIC 2	REV 10	750-009450	HX6466	PC-10C192-SON-SR2
SIB 0	REV 08	710-022594	DW8033	SIB-TXP-T1600-S
SIB 1	REV 08	710-022594	DW8044	SIB-TXP-T1600-S
SIB 2	REV 08	710-022594	DW8020	SIB-TXP-T1600-S
SIB 3	REV 08	710-022594	DW8063	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	DW8064	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

lcc1-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 04	710-017247	RC5361	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DS6430	CRAFT-T1600-S
CIP	REV 06	710-002895	DS4239	CIP-L-T640-S
PEM 0	Rev 08	740-017906	UD26649	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DP5820	SCG-T-S
CB 0	REV 06	710-022597	DW8523	CB-LCC
CB 1	REV 06	710-022597	DW8528	CB-LCC
FPC 4	REV 12	710-013037	DP8509	T1600-FPC4-ES
PIC 0	REV 11	750-017405	DP8808	PD-4XGE-XFP
PIC 1	REV 11	750-017405	DP7263	PD-4XGE-XFP
FPC 6	REV 14	710-013037	DS9961	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS5532	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7639	PD-4XGE-XFP
FPC 7	REV 03	710-013035	DF5564	T1600-FPC3-ES
PIC 0	REV 16	750-007141	JJ8063	PC-10GE-SFP
SIB 0	REV 08	710-022594	DW8035	SIB-TXP-T1600-S
SIB 1	REV 10	710-022594	DX7672	SIB-TXP-T1600-S
SIB 2	REV 08	710-022594	DW8060	SIB-TXP-T1600-S
SIB 3	REV 08	710-022594	DW8072	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	DW8043	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

lcc2-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 03	710-017247	RC3956	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DN7030	CRAFT-T1600-S
CIP	REV 06	710-002895	DM3962	CIP-L-T640-S
PEM 0	Rev 08	740-017906	UD26519	PWR-T1600-3-80-DC-S
PEM 1	Rev 07	740-017906	UC26601	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DP0277	SCG-T-S
CB 0	REV 06	710-022597	DW8524	CB-LCC
CB 1	REV 06	710-022597	DW8536	CB-LCC
FPC 4	REV 12	710-013037	DR1194	T1600-FPC4-ES
PIC 0	REV 11	750-017405	DP8811	PD-4XGE-XFP



```

    PIC 1          REV 11  750-017405  DP8823      PD-4XGE-XFP
FPC 5            REV 12  710-013037  DR1184      T1600-FPC4-ES
    PIC 1          REV 11  750-017405  DP4744      PD-4XGE-XFP
FPC 6            REV 12  710-013037  DN8622      T1600-FPC4-ES
    PIC 0          REV 14  750-012518  JY9924      PD-40C192-SON-XFP
    PIC 1          REV 11  750-017405  DP8776      PD-4XGE-XFP
FPC 7            REV 04  710-013560  JR3968      T640-FPC3-E2
    PIC 0          REV 16  750-007141  NC9330      PC-10GE-SFP
SIB 0            REV 07  710-022594  DW4217      SIB-TXP-T1600-S
SIB 1            REV 07  710-022594  DW4213      SIB-TXP-T1600-S
SIB 2            REV 07  710-022594  DW4189      SIB-TXP-T1600-S
SIB 3            REV 07  710-022594  DW4173      SIB-TXP-T1600-S
SIB 4            REV 07  710-022594  DW4201      SIB-TXP-T1600-S
Fan Tray 0
Fan Tray 1
Fan Tray 2

```

```
lcc3-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 04	710-017247	RC5319	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DS6402	CRAFT-T1600-S
CIP	REV 06	710-002895	DR9973	CIP-L-T640-S
PEM 0	Rev 07	740-017906	UC26496	PWR-T1600-3-80-DC-S
PEM 1	Rev 07	740-017906	UC26599	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DP5831	SCG-T-S
CB 0	REV 06	710-022597	DW8533	CB-LCC
CB 1	REV 06	710-022597	DW8538	CB-LCC
FPC 0	REV 14	710-013037	DS5345	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7641	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS5479	PD-4XGE-XFP
FPC 1	REV 14	710-013037	DS7338	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7631	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7632	PD-4XGE-XFP
FPC 2	REV 14	710-013037	DS9962	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7581	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7627	PD-4XGE-XFP
FPC 4	REV 10	710-010845	JZ6573	T640-FPC4-ES
PIC 0	REV 14	750-012518	JT5124	PD-40C192-SON-XFP
FPC 5	REV 14	710-013037	DT0016	T1600-FPC4-ES
PIC 0	REV 14	750-012518	JY9918	PD-40C192-SON-XFP
FPC 7	REV 07	710-013035	DM0967	T1600-FPC3-ES
PIC 0	REV 16	750-007141	JJ8059	PC-10GE-SFP
PIC 1	REV 13	750-004695	DM5712	PC-TUNNEL
SIB 0	REV 07	710-022594	DW4174	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	DW4207	SIB-TXP-T1600-S
SIB 2	REV 06	710-022594	DT8231	SIB-TXP-T1600-S
SIB 3	REV 07	710-022594	DW4175	SIB-TXP-T1600-S
SIB 4	REV 07	710-022594	DW4209	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

### show chassis hardware (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis hardware
```

```
sfc0-re0:
```

## Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11CAAA4AHB	TXP
Midplane	REV 05	710-022574	ABAC4696	SFC Midplane
FPM Display	REV 09	710-024027	EH3138	TXP FPM Display
CIP 0	REV 12	710-023792	EF6349	TXP CIP
CIP 1	REV 12	710-023792	EG5294	TXP CIP
PEM 0	Rev 06	740-027463	XH04595	Power Entry Module
PEM 1	Rev 06	740-027463	XH04592	Power Entry Module
Routing Engine 0	REV 07	740-026942	P737A-002541	RE-DUO-2600
Routing Engine 1	REV 07	740-026942	P737A-002602	RE-DUO-2600
CB 0	REV 15	710-022606	EH4376	SFC Control Board
CB 1	REV 15	710-022606	EH4379	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 10	750-035002	EM9305	F13 SIB 3D
B Board	REV 06	711-035082	EM9667	F13 SIB 3D Mezz
P Board	REV 05	711-043544	EM9708	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB34FB00S	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01H	CXP Module
Xcvr 4	REV 01	740-047547	XB34FB02W	CXP Module
Xcvr 6	REV 01	740-047547	XB34FB01T	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB00W	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01S	CXP Module
Xcvr 12	REV 01	740-047547	XB34FB03H	CXP Module
Xcvr 14	REV 01	740-047547	XB34FB023	CXP Module
SIB F13 3	REV 01	710-035001	EJ2612	F13 SIB 3D
B Board	REV 01	711-035082	EJ3815	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2678	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB04C	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB00Z	CXP Module
Xcvr 4	REV 01	740-047547	XB47FB036	CXP Module
Xcvr 6	REV 01	740-047547	XB47FB029	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02N	CXP Module
Xcvr 10	REV 01	740-047547	XB42FB0CS	CXP Module
Xcvr 12	REV 01	740-047547	XB47FB01X	CXP Module
Xcvr 14	REV 01	740-047547	XB48FB02F	CXP Module
SIB F13 6	REV 05	750-035002	EK2675	F13 SIB 3D
B Board	REV 03	711-035082	EK2612	F13 SIB 3D Mezz
P Board	REV 04	711-043544	EK1179	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB01T	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB02M	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB031	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB04P	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02T	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01V	CXP Module
Xcvr 12	REV 01	740-047547	XB48FB02C	CXP Module
Xcvr 14		NON-JNPR		No Module
SIB F13 12	REV 01	710-035001	EJ2631	F13 SIB 3D
B Board	REV 01	711-035082	EJ3808	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2676	F13 SIB 3D Power
SIB F2S 0/0	REV 01	711-034977	EH9829	F2S SIB 3D
B Board	REV 01	711-034979	EH9927	F2S SIB 3D Mezz
SIB F2S 0/2	REV 01	711-034977	EH9791	F2S SIB 3D
B Board	REV 01	711-034979	EH9852	F2S SIB 3D Mezz
SIB F2S 0/4	REV 01	711-034977	EH9803	F2S SIB 3D
B Board	REV 01	711-034979	EH9915	F2S SIB 3D Mezz
SIB F2S 0/6	REV 01	711-034977	EH9763	F2S SIB 3D
B Board	REV 01	711-034979	EH9880	F2S SIB 3D Mezz
SIB F2S 1/0	REV 01	711-034977	EH9757	F2S SIB 3D

B Board	REV 01	711-034979	EH9889	F2S SIB 3D Mezz
SIB F2S 1/2	REV 01	711-034977	EH9815	F2S SIB 3D
B Board	REV 01	711-034979	EH9890	F2S SIB 3D Mezz
SIB F2S 1/4	REV 08	750-034978	EN1954	F2S SIB 3D
B Board	REV 02	711-034979	EN1436	F2S SIB 3D Mezz
SIB F2S 1/6	REV 01	711-034977	EJ7054	F2S SIB 3D
B Board	REV 01	711-034979	EJ8238	F2S SIB 3D Mezz
SIB F2S 2/0	REV 01	711-034977	EH9830	F2S SIB 3D
B Board	REV 01	711-034979	EH9844	F2S SIB 3D Mezz
SIB F2S 2/2	REV 01	711-034977	EH9818	F2S SIB 3D
B Board	REV 01	711-034979	EH9888	F2S SIB 3D Mezz
SIB F2S 2/4	REV 01	711-034977	EH9795	F2S SIB 3D
B Board	REV 01	711-034979	EH9869	F2S SIB 3D Mezz
SIB F2S 2/6	REV 01	711-034977	EJ7026	F2S SIB 3D
B Board	REV 01	711-034979	EJ8273	F2S SIB 3D Mezz
SIB F2S 3/0	REV 01	711-034977	EH9811	F2S SIB 3D
B Board	REV 01	711-034979	EH9892	F2S SIB 3D Mezz
SIB F2S 3/2	REV 01	711-034977	EH9812	F2S SIB 3D
B Board	REV 01	711-034979	EH9877	F2S SIB 3D Mezz
SIB F2S 3/4	REV 08	750-034978	EN1947	F2S SIB 3D
B Board	REV 02	711-034979	EN1471	F2S SIB 3D Mezz
Fan Tray 0	REV 10	760-024497	EH3313	Front Fan Tray
Fan Tray 1	REV 10	760-024497	EH3290	Front Fan Tray
Fan Tray 2	REV 10	760-024502	EH3292	Rear Fan Tray
Fan Tray 3	REV 10	760-024502	EH3287	Rear Fan Tray
Fan Tray 4	REV 10	760-024502	EH3286	Rear Fan Tray
Fan Tray 5	REV 10	760-024502	EH3285	Rear Fan Tray

lcc0-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B23FEAHA	T1600
Midplane	REV 01	710-027486	RC9787	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5132	T640 FPM Board
FPM Display	REV 04	710-021387	BBAL9612	T1600 FPM Display
CIP	REV 06	710-002895	BBAN0605	T-series CIP
PEM 0	REV 05	740-036442	1G022060143	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060011	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAL7318	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7255	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002933	RE-DUO-1800
Routing Engine 1	REV 06	740-026941	P737F-002749	RE-DUO-1800
CB 0	REV 11	710-022597	EH3611	LCC Control Board
CB 1	REV 11	710-022597	EH4798	LCC Control Board
FPC 5	REV 17	710-013037	BBAC5333	FPC Type 4-ES
CPU	REV 10	710-016744	BBAB7619	ST-PMB2
PIC 0	REV 18	750-017405	BBAE3420	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10C90659	XFP-10G-SR
MMB 0	REV 05	710-025563	BBAB9538	ST-MMB2
MMB 1	REV 05	710-025563	BBAB9502	ST-MMB2
FPC 7	REV 01	750-045173	BBAV0032	FPC Type 5-3D
CPU				
SPMB 0	REV 05	710-023321	EG9434	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3878	LCC Switch CPU
SIB 0	REV 01	750-041657	EH7997	LCC SIB 3D
B Board	REV 01	711-042424	EH7674	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB014	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB05A	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB052	CXP Module

Xcvr 6	REV 01	740-047547	XB48FB01B	CXP Module
SIB 1	REV 01	750-041657	EH8023	LCC SIB 3D
B Board	REV 01	711-042424	EH7659	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05J	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01E	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB01J	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB02S	CXP Module
SIB 2	REV 03	750-041657	EJ6554	LCC SIB 3D
B Board	REV 02	711-042424	EJ5756	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB34FB01Z	CXP Module
Xcvr 2	REV 01	740-047547	XB34FB013	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04Z	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05N	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

lcc2-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B3975AHA	T1600
Midplane	REV 01	710-027486	RC9826	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5124	T640 FPM Board
FPM Display	REV 03	710-021387	BBAJ1112	T1600 FPM Display
CIP	REV 06	710-002895	BBAL3744	T-series CIP
PEM 0	REV 05	740-036442	1G022060081	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060188	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAH8775	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7272	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002992	RE-DUO-1800
Routing Engine 1	REV 07	740-026941	P737F-002938	RE-DUO-1800
CB 0	REV 11	710-022597	EH4805	LCC Control Board
CB 1	REV 11	710-022597	EH4786	LCC Control Board
FPC 1	REV 01	710-033873	BBAH0320	FPC Type 3-ES
CPU	REV 11	710-016744	BBAF3281	ST-PMB2
MMB 0	REV 06	710-025563	BBAF5061	ST-MMB2
FPC 5	REV 04	710-033871	BBAM5070	FPC Type 4-ES
CPU	REV 11	710-016744	BBAM6653	ST-PMB2
PIC 1	REV 20	750-017405	BBAM1296	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10B42981	XFP-10G-SR
MMB 0	REV 07	710-025563	BBAN2631	ST-MMB2
MMB 1	REV 07	710-025563	BBAN2538	ST-MMB2
SPMB 0	REV 05	710-023321	EH3903	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3902	LCC Switch CPU
SIB 0	REV 01	750-041657	EH8019	LCC SIB 3D
B Board	REV 01	711-042424	EH7680	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB04F	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB04S	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04B	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB043	CXP Module
SIB 1	REV 01	750-041657	EH8012	LCC SIB 3D
B Board	REV 01	711-042424	EH7658	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05E	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01Z	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB018	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB054	CXP Module
SIB 2	REV 01	750-041657	EH7993	LCC SIB 3D
B Board	REV 01	711-042424	EH7678	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05C	CXP Module

Xcvr 2	REV 01	740-047547	XB47FB00N	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB05U	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05L	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

### show chassis hardware clei-models (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis hardware clei-models
```

```
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 05	710-022574		CHAS-BP-TXP-S
FPM Display	REV 09	710-024027		CRAFT-TXP-S
CIP 0	REV 12	710-023792		CIP-TXP-S
CIP 1	REV 12	710-023792		CIP-TXP-S
PEM 0	Rev 06	740-027463	IPUPAFGKTA	PWR-TXP-7-60-DC-S
Routing Engine 0	REV 07	740-026942		RE-DUO-C2600-16G-S
Routing Engine 1	REV 07	740-026942		RE-DUO-C2600-16G-S
CB 0	REV 13	710-022606		CB-TXP-S
CB 1	REV 14	710-022606		CB-TXP-S
SIB F13 0	REV 10	750-035002	PROTOXCLEI	SIB-TXP-3D-F13-S
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 1	REV 10	750-035002	PROTOXCLEI	SIB-TXP-3D-F13-S
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-048813		
Xcvr 10	REV 01	740-048813		

Xcvr 12	REV 01	740-048813		
Xcvr 14	REV 01	740-048813		
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 6	REV 16	750-035002	PROTOXCLEI	SIB-TXP-3D-F13
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 7	REV 10	750-035002	PROTOXCLEI	SIB-TXP-3D-F13-S
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 9	REV 16	750-035002	PROTOXCLEI	SIB-TXP-3D-F13
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D

Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 11	REV 10	750-035002	PROTOXCLEI	750-035002
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 12	REV 16	750-035002	PROTOXCLEI	SIB-TXP-3D-F13
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F2S 0/0	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 0/2	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 0/4	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 0/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/0	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/2	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/4	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/6	REV 08	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/0	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/2	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/4	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/0	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/2	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/4	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/0	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/2	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/4	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
Fan Tray 0	REV 10	760-024497		FANTRAY-TXP-H-S
Fan Tray 1	REV 10	760-024497		FANTRAY-TXP-H-S
Fan Tray 2	REV 10	760-024502		FANTRAY-TXP-V-S
Fan Tray 3	REV 10	760-024502		FANTRAY-TXP-V-S
Fan Tray 4	REV 10	760-024502		FANTRAY-TXP-V-S
Fan Tray 5	REV 10	760-024502		FANTRAY-TXP-V-S

```
lcc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-027486	IPMJ700DRD	CHAS-BP-T1600-S
FPM Display	REV 04	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	REV 05	740-036442	IPUPAG6KAA	PWR-T-6-60-DC-S
PEM 1	REV 05	740-036442	IPUPAG6KAA	PWR-T-6-60-DC-S
SCG 0	REV 18	710-003423		SCG-T-S
SCG 1	REV 18	710-003423		SCG-T-S
Routing Engine 0	REV 10	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 07	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 11	710-022597		CB-LCC-S
CB 1	REV 11	710-022597		CB-LCC-S
FPC 0	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
FPC 3	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 13	750-033423	XXXXXXXXDD	PF-12-24XGE-SFPP
FPC 4	REV 02	750-045173	IP9IAL4DAC	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
FPC 5	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
FPC 6	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 10	750-035293	IP9IAL3DAA	PF-1CGE-CFP
SIB 0	REV 06	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
SIB 1	REV 06	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
SIB 2	REV 06	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
SIB 3	REV 07	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		



```

Xcvr 6      REV 01  740-048813
Xcvr 7      REV 01  740-048813
SIB 4       REV 06  750-041657  PROTOXCLEI  SIB-TXP-3D-LCC
Xcvr 0      REV 01  740-048813
Xcvr 1      REV 01  740-048813
Xcvr 2      REV 01  740-048813
Xcvr 3      REV 01  740-048813
Xcvr 4      REV 01  740-048813
Xcvr 5      REV 01  740-048813
Xcvr 6      REV 01  740-048813
Xcvr 7      REV 01  740-048813
Fan Tray 0
Fan Tray 1
Fan Tray 2
[Output Truncated]
FANTRAY-T-S
FANTRAY-T-S
FANTRAY-TXP3D-LCC-R-S

```

### show chassis hardware detail (TX Matrix Plus Router with 3D SIBs)

```

user@host> show chassis hardware detail

sfc0-re0:
-----
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN11CAAA4AHB   TXP
Midplane      REV 05   710-022574   ABAC4696       SFC Midplane
FPM Display   REV 09   710-024027   EH3138         TXP FPM Display
CIP 0         REV 12   710-023792   EF6349         TXP CIP
CIP 1         REV 12   710-023792   EG5294         TXP CIP
PEM 0         Rev 06   740-027463   XH04595        Power Entry Module
PEM 1         Rev 06   740-027463   XH04592        Power Entry Module
Routing Engine 0 REV 07   740-026942   P737A-002541   RE-DUO-2600
  ad0 3823 MB SMART CF 2011030400062C132C13 Compact Flash
  ad1 62720 MB SMART Lite SATA Drive 201105100009A452A452 Disk 1
Routing Engine 1 REV 07   740-026942   P737A-002602   RE-DUO-2600
  ad0 3823 MB SMART CF 20110508085EE471E471 Compact Flash
  ad1 62720 MB SMART Lite SATA Drive 201110210089DF39DF39 Disk 1
CB 0          REV 15   710-022606   EH4376         SFC Control Board
CB 1          REV 15   710-022606   EH4379         SFC Control Board
SPMB 0        BUILTIN
SPMB 1        BUILTIN
SIB F13 0     REV 10   750-035002   EM9305         F13 SIB 3D
  B Board     REV 06   711-035082   EM9667         F13 SIB 3D Mezz
  P Board     REV 05   711-043544   EM9708         F13 SIB 3D Power
  Xcvr 0      REV 01   740-047547   XB34FB00S      CXP Module
  Xcvr 2      REV 01   740-047547   XB48FB01H      CXP Module
  Xcvr 4      REV 01   740-047547   XB34FB02W      CXP Module
  Xcvr 6      REV 01   740-047547   XB34FB01T      CXP Module
  Xcvr 8      REV 01   740-047547   XB48FB00W      CXP Module
  Xcvr 10     REV 01   740-047547   XB34FB01S      CXP Module
  Xcvr 12     REV 01   740-047547   XB34FB03H      CXP Module
  Xcvr 14     REV 01   740-047547   XB34FB023      CXP Module
SIB F13 3     REV 01   710-035001   EJ2612         F13 SIB 3D
  B Board     REV 01   711-035082   EJ3815         F13 SIB 3D Mezz
  P Board     REV 01   711-043544   EJ2678         F13 SIB 3D Power
  Xcvr 0      REV 01   740-047547   XB48FB04C      CXP Module
  Xcvr 2      REV 01   740-047547   XB48FB00Z      CXP Module
  Xcvr 4      REV 01   740-047547   XB47FB036      CXP Module
  Xcvr 6      REV 01   740-047547   XB47FB029      CXP Module
  Xcvr 8      REV 01   740-047547   XB48FB02N      CXP Module

```

Xcvr 10	REV 01	740-047547	XB42FB0CS	CXP Module
Xcvr 12	REV 01	740-047547	XB47FB01X	CXP Module
Xcvr 14	REV 01	740-047547	XB48FB02F	CXP Module
SIB F13 6	REV 05	750-035002	EK2675	F13 SIB 3D
B Board	REV 03	711-035082	EK2612	F13 SIB 3D Mezz
P Board	REV 04	711-043544	EK1179	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB01T	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB02M	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB031	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB04P	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02T	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01V	CXP Module
Xcvr 12	REV 01	740-047547	XB48FB02C	CXP Module
Xcvr 14		NON-JNPR		No Module
SIB F13 12	REV 01	710-035001	EJ2631	F13 SIB 3D
B Board	REV 01	711-035082	EJ3808	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2676	F13 SIB 3D Power
SIB F2S 0/0	REV 01	711-034977	EH9829	F2S SIB 3D
B Board	REV 01	711-034979	EH9927	F2S SIB 3D Mezz
SIB F2S 0/2	REV 01	711-034977	EH9791	F2S SIB 3D
B Board	REV 01	711-034979	EH9852	F2S SIB 3D Mezz
SIB F2S 0/4	REV 01	711-034977	EH9803	F2S SIB 3D
B Board	REV 01	711-034979	EH9915	F2S SIB 3D Mezz
SIB F2S 0/6	REV 01	711-034977	EH9763	F2S SIB 3D
B Board	REV 01	711-034979	EH9880	F2S SIB 3D Mezz
SIB F2S 1/0	REV 01	711-034977	EH9757	F2S SIB 3D
B Board	REV 01	711-034979	EH9889	F2S SIB 3D Mezz
SIB F2S 1/2	REV 01	711-034977	EH9815	F2S SIB 3D
B Board	REV 01	711-034979	EH9890	F2S SIB 3D Mezz
SIB F2S 1/4	REV 08	750-034978	EN1954	F2S SIB 3D
B Board	REV 02	711-034979	EN1436	F2S SIB 3D Mezz
SIB F2S 1/6	REV 01	711-034977	EJ7054	F2S SIB 3D
B Board	REV 01	711-034979	EJ8238	F2S SIB 3D Mezz
SIB F2S 2/0	REV 01	711-034977	EH9830	F2S SIB 3D
B Board	REV 01	711-034979	EH9844	F2S SIB 3D Mezz
SIB F2S 2/2	REV 01	711-034977	EH9818	F2S SIB 3D
B Board	REV 01	711-034979	EH9888	F2S SIB 3D Mezz
SIB F2S 2/4	REV 01	711-034977	EH9795	F2S SIB 3D
B Board	REV 01	711-034979	EH9869	F2S SIB 3D Mezz
SIB F2S 2/6	REV 01	711-034977	EJ7026	F2S SIB 3D
B Board	REV 01	711-034979	EJ8273	F2S SIB 3D Mezz
SIB F2S 3/0	REV 01	711-034977	EH9811	F2S SIB 3D
B Board	REV 01	711-034979	EH9892	F2S SIB 3D Mezz
SIB F2S 3/2	REV 01	711-034977	EH9812	F2S SIB 3D
B Board	REV 01	711-034979	EH9877	F2S SIB 3D Mezz
SIB F2S 3/4	REV 08	750-034978	EN1947	F2S SIB 3D
B Board	REV 02	711-034979	EN1471	F2S SIB 3D Mezz
Fan Tray 0	REV 10	760-024497	EH3313	Front Fan Tray
Fan Tray 1	REV 10	760-024497	EH3290	Front Fan Tray
Fan Tray 2	REV 10	760-024502	EH3292	Rear Fan Tray
Fan Tray 3	REV 10	760-024502	EH3287	Rear Fan Tray
Fan Tray 4	REV 10	760-024502	EH3286	Rear Fan Tray
Fan Tray 5	REV 10	760-024502	EH3285	Rear Fan Tray

1cc0-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B23FEAHA	T1600
Midplane	REV 01	710-027486	RC9787	T-series Backplane

FPM GBUS	REV 13	710-002901	BBAG5132	T640 FPM Board
FPM Display	REV 04	710-021387	BBAL9612	T1600 FPM Display
CIP	REV 06	710-002895	BBAN0605	T-series CIP
PEM 0	REV 05	740-036442	1G022060143	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060011	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAL7318	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7255	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002933	RE-DUO-1800
ad0	3823 MB	SMART CF	201103030490604E604E	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	20110729028B11D411D4	Disk 1
Routing Engine 1	REV 06	740-026941	P737F-002749	RE-DUO-1800
ad0	3823 MB	SMART CF	2011010504EB99649964	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	201102140058934A934A	Disk 1
CB 0	REV 11	710-022597	EH3611	LCC Control Board
CB 1	REV 11	710-022597	EH4798	LCC Control Board
FPC 5	REV 17	710-013037	BBAC5333	FPC Type 4-ES
CPU	REV 10	710-016744	BBAB7619	ST-PMB2
PIC 0	REV 18	750-017405	BBAE3420	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10C90659	XFP-10G-SR
MMB 0	REV 05	710-025563	BBAB9538	ST-MMB2
MMB 1	REV 05	710-025563	BBAB9502	ST-MMB2
FPC 7	REV 01	750-045173	BBAV0032	FPC Type 5-3D
CPU				
SPMB 0	REV 05	710-023321	EG9434	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3878	LCC Switch CPU
SIB 0	REV 01	750-041657	EH7997	LCC SIB 3D
B Board	REV 01	711-042424	EH7674	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB014	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB05A	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB052	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB01B	CXP Module
SIB 1	REV 01	750-041657	EH8023	LCC SIB 3D
B Board	REV 01	711-042424	EH7659	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05J	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01E	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB01J	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB02S	CXP Module
SIB 2	REV 03	750-041657	EJ6554	LCC SIB 3D
B Board	REV 02	711-042424	EJ5756	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB34FB01Z	CXP Module
Xcvr 2	REV 01	740-047547	XB34FB013	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04Z	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05N	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

lcc2-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B3975AHA	T1600
Midplane	REV 01	710-027486	RC9826	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5124	T640 FPM Board
FPM Display	REV 03	710-021387	BBAJ1112	T1600 FPM Display
CIP	REV 06	710-002895	BBAL3744	T-series CIP
PEM 0	REV 05	740-036442	1G022060081	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060188	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAH8775	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7272	T640 Sonet Clock Gen.

Routing Engine 0	REV 07	740-026941	P737F-002992	RE-DUO-1800
ad0	3823 MB	SMART CF	201103030356329E329E	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	2011051000488D8B8D8B	Disk 1
Routing Engine 1	REV 07	740-026941	P737F-002938	RE-DUO-1800
ad0	3823 MB	SMART CF	20110304000F02680268	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	201105300A70F325F325	Disk 1
CB 0	REV 11	710-022597	EH4805	LCC Control Board
CB 1	REV 11	710-022597	EH4786	LCC Control Board
FPC 1	REV 01	710-033873	BBAH0320	FPC Type 3-ES
CPU	REV 11	710-016744	BBAF3281	ST-PMB2
MMB 0	REV 06	710-025563	BBAF5061	ST-MMB2
FPC 5	REV 04	710-033871	BBAM5070	FPC Type 4-ES
CPU	REV 11	710-016744	BBAM6653	ST-PMB2
PIC 1	REV 20	750-017405	BBAM1296	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10B42981	XFP-10G-SR
MMB 0	REV 07	710-025563	BBAN2631	ST-MMB2
MMB 1	REV 07	710-025563	BBAN2538	ST-MMB2
SPMB 0	REV 05	710-023321	EH3903	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3902	LCC Switch CPU
SIB 0	REV 01	750-041657	EH8019	LCC SIB 3D
B Board	REV 01	711-042424	EH7680	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB04F	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB04S	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04B	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB043	CXP Module
SIB 1	REV 01	750-041657	EH8012	LCC SIB 3D
B Board	REV 01	711-042424	EH7658	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05E	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01Z	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB018	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB054	CXP Module
SIB 2	REV 01	750-041657	EH7993	LCC SIB 3D
B Board	REV 01	711-042424	EH7678	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05C	CXP Module
Xcvr 2	REV 01	740-047547	XB47FB00N	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB05U	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05L	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

### show chassis hardware lcc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis hardware lcc 0
```

```
lcc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11B23FEAHA	T1600
Midplane	REV 01	710-027486	RC9787	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5132	T640 FPM Board
FPM Display	REV 04	710-021387	BBAL9612	T1600 FPM Display
CIP	REV 06	710-002895	BBAN0605	T-series CIP
PEM 0	REV 05	740-036442	1G022060143	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060011	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAL7318	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7255	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002933	RE-DUO-1800
Routing Engine 1	REV 06	740-026941	P737F-002749	RE-DUO-1800

CB 0	REV 11	710-022597	EH3611	LCC Control Board
CB 1	REV 11	710-022597	EH4798	LCC Control Board
FPC 5	REV 17	710-013037	BBAC5333	FPC Type 4-ES
CPU	REV 10	710-016744	BBAB7619	ST-PMB2
PIC 0	REV 18	750-017405	BBAE3420	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10C90659	XFP-10G-SR
MMB 0	REV 05	710-025563	BBAB9538	ST-MMB2
MMB 1	REV 05	710-025563	BBAB9502	ST-MMB2
FPC 7	REV 01	750-045173	BBAV0032	FPC Type 5-3D
CPU				
SPMB 0	REV 05	710-023321	EG9434	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3878	LCC Switch CPU
SIB 0	REV 01	750-041657	EH7997	LCC SIB 3D
B Board	REV 01	711-042424	EH7674	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB014	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB05A	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB052	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB01B	CXP Module
SIB 1	REV 01	750-041657	EH8023	LCC SIB 3D
B Board	REV 01	711-042424	EH7659	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05J	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01E	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB01J	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB02S	CXP Module
SIB 2	REV 03	750-041657	EJ6554	LCC SIB 3D
B Board	REV 02	711-042424	EJ5756	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB34FB01Z	CXP Module
Xcvr 2	REV 01	740-047547	XB34FB013	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04Z	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05N	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

### show chassis hardware sfc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis hardware sfc 0
```

```
sfc0-re0:
```

```
-----
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11CAAA4AHB	TXP
Midplane	REV 05	710-022574	ABAC4696	SFC Midplane
FPM Display	REV 09	710-024027	EH3138	TXP FPM Display
CIP 0	REV 12	710-023792	EF6349	TXP CIP
CIP 1	REV 12	710-023792	EG5294	TXP CIP
PEM 0	Rev 06	740-027463	XH04595	Power Entry Module
PEM 1	Rev 06	740-027463	XH04592	Power Entry Module
Routing Engine 0	REV 07	740-026942	P737A-002541	RE-DUO-2600
Routing Engine 1	REV 07	740-026942	P737A-002602	RE-DUO-2600
CB 0	REV 15	710-022606	EH4376	SFC Control Board
CB 1	REV 15	710-022606	EH4379	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 10	750-035002	EM9305	F13 SIB 3D
B Board	REV 06	711-035082	EM9667	F13 SIB 3D Mezz
P Board	REV 05	711-043544	EM9708	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB34FB00S	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01H	CXP Module

Xcvr 4	REV 01	740-047547	XB34FB02W	CXP Module
Xcvr 6	REV 01	740-047547	XB34FB01T	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB00W	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01S	CXP Module
Xcvr 12	REV 01	740-047547	XB34FB03H	CXP Module
Xcvr 14	REV 01	740-047547	XB34FB023	CXP Module
SIB F13 3	REV 01	710-035001	EJ2612	F13 SIB 3D
B Board	REV 01	711-035082	EJ3815	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2678	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB04C	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB00Z	CXP Module
Xcvr 4	REV 01	740-047547	XB47FB036	CXP Module
Xcvr 6	REV 01	740-047547	XB47FB029	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02N	CXP Module
Xcvr 10	REV 01	740-047547	XB42FB0CS	CXP Module
Xcvr 12	REV 01	740-047547	XB47FB01X	CXP Module
Xcvr 14	REV 01	740-047547	XB48FB02F	CXP Module
SIB F13 6	REV 05	750-035002	EK2675	F13 SIB 3D
B Board	REV 03	711-035082	EK2612	F13 SIB 3D Mezz
P Board	REV 04	711-043544	EK1179	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB01T	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB02M	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB031	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB04P	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02T	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01V	CXP Module
Xcvr 12	REV 01	740-047547	XB48FB02C	CXP Module
Xcvr 14		NON-JNPR		No Module
SIB F13 12	REV 01	710-035001	EJ2631	F13 SIB 3D
B Board	REV 01	711-035082	EJ3808	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2676	F13 SIB 3D Power
SIB F2S 0/0	REV 01	711-034977	EH9829	F2S SIB 3D
B Board	REV 01	711-034979	EH9927	F2S SIB 3D Mezz
SIB F2S 0/2	REV 01	711-034977	EH9791	F2S SIB 3D
B Board	REV 01	711-034979	EH9852	F2S SIB 3D Mezz
SIB F2S 0/4	REV 01	711-034977	EH9803	F2S SIB 3D
B Board	REV 01	711-034979	EH9915	F2S SIB 3D Mezz
SIB F2S 0/6	REV 01	711-034977	EH9763	F2S SIB 3D
B Board	REV 01	711-034979	EH9880	F2S SIB 3D Mezz
SIB F2S 1/0	REV 01	711-034977	EH9757	F2S SIB 3D
B Board	REV 01	711-034979	EH9889	F2S SIB 3D Mezz
SIB F2S 1/2	REV 01	711-034977	EH9815	F2S SIB 3D
B Board	REV 01	711-034979	EH9890	F2S SIB 3D Mezz
SIB F2S 1/4	REV 08	750-034978	EN1954	F2S SIB 3D
B Board	REV 02	711-034979	EN1436	F2S SIB 3D Mezz
SIB F2S 1/6	REV 01	711-034977	EJ7054	F2S SIB 3D
B Board	REV 01	711-034979	EJ8238	F2S SIB 3D Mezz
SIB F2S 2/0	REV 01	711-034977	EH9830	F2S SIB 3D
B Board	REV 01	711-034979	EH9844	F2S SIB 3D Mezz
SIB F2S 2/2	REV 01	711-034977	EH9818	F2S SIB 3D
B Board	REV 01	711-034979	EH9888	F2S SIB 3D Mezz
SIB F2S 2/4	REV 01	711-034977	EH9795	F2S SIB 3D
B Board	REV 01	711-034979	EH9869	F2S SIB 3D Mezz
SIB F2S 2/6	REV 01	711-034977	EJ7026	F2S SIB 3D
B Board	REV 01	711-034979	EJ8273	F2S SIB 3D Mezz
SIB F2S 3/0	REV 01	711-034977	EH9811	F2S SIB 3D
B Board	REV 01	711-034979	EH9892	F2S SIB 3D Mezz
SIB F2S 3/2	REV 01	711-034977	EH9812	F2S SIB 3D
B Board	REV 01	711-034979	EH9877	F2S SIB 3D Mezz
SIB F2S 3/4	REV 08	750-034978	EN1947	F2S SIB 3D

B Board	REV 02	711-034979	EN1471	F2S SIB 3D Mezz
Fan Tray 0	REV 10	760-024497	EH3313	Front Fan Tray
Fan Tray 1	REV 10	760-024497	EH3290	Front Fan Tray
Fan Tray 2	REV 10	760-024502	EH3292	Rear Fan Tray
Fan Tray 3	REV 10	760-024502	EH3287	Rear Fan Tray
Fan Tray 4	REV 10	760-024502	EH3286	Rear Fan Tray
Fan Tray 5	REV 10	760-024502	EH3285	Rear Fan Tray

### show chassis hardware (16-Port 10-Gigabit Ethernet MPC with SFP+ Optics [MX Series Routers])

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN112D865AFA	MX960
Midplane	REV 03	710-013698	TS3339	MX960 Backplane
FPM Board	REV 03	710-014974	WW6267	Front Panel Display
PDM	Rev 03	740-013110	QCS12485026	Power Distribution
Module				
PEM 0	Rev 04	740-013682	QCS12434086	PS 1.7kW; 200-240VAC
in				
PEM 1	Rev 04	740-013682	QCS1243408Z	PS 1.7kW; 200-240VAC
in				
PEM 2	Rev 04	740-013682	QCS1243407X	PS 1.7kW; 200-240VAC
in				
Routing Engine 0	REV 07	740-015113	9009009677	RE-S-1300
Routing Engine 1	REV 07	740-015113	9009011510	RE-S-1300
CB 0	REV 03	710-021523	XF0394	MX SCB
CB 1	REV 03	710-021523	XF0550	MX SCB
CB 2	REV 03	710-021523	XD7455	MX SCB
FPC 4	REV 02	750-028467	JR6127	MPC M 16x 10GE
CPU	REV 02	711-029089	JX0129	AS PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Fan Tray 0	REV 05	740-014971	TP9990	Fan Tray
Fan Tray 1	REV 05	740-014971	VS1709	Fan Tray

### show chassis hardware (MPC3E [MX Series Routers])

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1101AFEAFB	MX480
Midplane	REV 05	710-017414	TR4444	MX480 Midplane
FPM Board	REV 02	710-017254	KG6056	Front Panel Display
PEM 0	Rev 03	740-017330	QCS082090FC	PS 1.2-1.7kW; 100-240V
PEM 1	Rev 03	740-017330	QCS082090FD	PS 1.2-1.7kW; 100-240V
Routing Engine 0	REV 07	740-013063	9009004124	RE-S-2000
Routing Engine 1	REV 07	740-013063	9009005569	RE-S-2000
CB 0	REV 07	710-021523	XZ3587	MX SCB
CB 1	REV 03	710-021523	KH8306	MX SCB
FPC 1	REV 04.1.07	750-033205	P1240	MPC Type 3

CPU	REV 01	711-035209	YL0504	HMPC PMB 2G
MIC 1	REV 10	750-033199	YX4495	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	C22CQNE	CFP-100G-LR4
FPC 2	REV 26	750-016670	KH0045	DPCE 40x 1GE R EQ
CPU	REV 07	710-013713	KF5448	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PF21JHU	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 9	REV 01	740-011613	AM0813S8ZL6	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 02	740-011613	PGL2KYF	SFP-SX
Xcvr 2	REV 01	740-011613	AM0806S8N4P	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 5	REV 01	740-011613	AM0815S967N	SFP-SX
Xcvr 7	REV 01	740-011613	AM0806S8N1X	SFP-SX
Xcvr 8	REV 01	740-011613	AM0815S967J	SFP-SX
Xcvr 9	REV 01	740-011613	AM0815S967M	SFP-SX
FPC 3	REV 12.2.09	750-033205	YR9443	MPC Type 3
CPU	REV 03	711-035209	YL6931	HMPC PMB 2G
MIC 0	REV 05	750-033199	YR3269	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	ULH0KG3	CFP-100G-LR4
MIC 1	REV 02	750-033199	YG3245	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	ULH0KGF	CFP-100G-LR4
FPC 4	REV 12.3.09	750-033205	YR9437	MPC Type 3
CPU	REV 03	711-035209	YT5857	HMPC PMB 2G
MIC 0	REV 05	750-033199	YR3295	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12000187	CFP-100G-SR10
MIC 1	REV 10	750-033199	YX4518	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00008	CFP-100G-SR10
FPC 5	REV 06	750-024884	JW9769	MPC Type 2 3D EQ
CPU	REV 02	711-028401	JR6158	MPC PMB 2G Proto
MIC 0	REV 05	750-028387	JR6197	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 01	740-014289	T07M71112	XFP-10G-SR
Xcvr 1	REV 02	740-014289	T08L85610	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
MIC 1	REV 22	750-028392	YM0053	3D 20x 1GE(LAN) SFP
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011613	AM0703S005B	SFP-SX
Xcvr 1	REV 01	740-011613	E07L01352	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 5	REV 01	740-013111	6500217	SFP-T
Xcvr 9	REV 02	740-013111	8499527	SFP-T
Fan Tray				Left Fan Tray

The PIC number for MIC 1 always starts from 2 (even if the first MIC is a 1X100GE CFP or a legacy MIC).

#### show chassis hardware (QFX3500 Switches)

```
user@switch> show chassis hardware
```



Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis				QFX3500
Routing Engine 0		BUILTIN	BUILTIN	QFX Routing Engine
FPC 0	REV 04	750-044071	BBAR3902	QFX3500-48S4Q-AFI
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	48x 10G-SFP+
PIC 1		BUILTIN	BUILTIN	15x 10G-SFP+
MGMT BRD	REV 02	750-044063	BBAR0398	QFX3500-MGMT-SFP-AFO
Xcvr 0	REV 01	740-011614	AC0946S0BD1	SFP-LX10
Xcvr 1	REV 02	740-013111	A281922	SFP-T
Power Supply 0	Rev 04	740-032091	UI00677	JPSU-650W-AC-AFI
Power Supply 1	REV 00	740-041741	VJ00162	JPSU-650W-AC-AFO
Fan Tray 0				QFX Fan Tray, Back to
Front Airflow				
Fan Tray 1				QFX Fan Tray, Back to
Front Airflow				
Fan Tray 2				QFX Fan Tray, Back to
Front Airflow				

### show chassis hardware detail (QFX3500 Switches)

```
user@switch> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN000TEST5	QFX3500
Routing Engine 0		BUILTIN	BUILTIN	QFX Routing Engine
FPC 0	REV 05	750-036931	EE0823	QFX3500-48S4Q-AFI
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	48x 10G-SFP+
Xcvr 0	REV 01	740-030589	S99E270079	SFP+-10G-LPBK
Xcvr 1	REV 01	740-030589	S9AK450099	SFP+-10G-LPBK
Xcvr 2	REV 01	740-030589	S99E270078	SFP+-10G-LPBK
Xcvr 3	REV 01	740-030589	S9AK450098	SFP+-10G-LPBK
Xcvr 4	REV 01	740-030589	S99E270075	SFP+-10G-LPBK
Xcvr 5	REV 01	740-030589	S9AK450093	SFP+-10G-LPBK
Xcvr 6	REV 01	740-030589	S9AK450097	SFP+-10G-LPBK
Xcvr 7	REV 01	740-030589	S9AK450095	SFP+-10G-LPBK
Xcvr 8	REV 01	740-030589	S99E270072	SFP+-10G-LPBK
Xcvr 9	REV 01	740-030589	S99E270073	SFP+-10G-LPBK
Xcvr 10	REV 01	740-030589	S99E270080	SFP+-10G-LPBK
Xcvr 11	REV 01	740-030589	S9AK450169	SFP+-10G-LPBK
Xcvr 12	REV 01	740-030589	S99E270076	SFP+-10G-LPBK
Xcvr 13	REV 01	740-030589	S9AK450167	SFP+-10G-LPBK
Xcvr 14	REV 01	740-030589	S9AK450170	SFP+-10G-LPBK
Xcvr 15	REV 01	740-030589	S9AK450166	SFP+-10G-LPBK
Xcvr 16	REV 01	740-030589	S9AK450092	SFP+-10G-LPBK
Xcvr 17	REV 01	740-030589	S9AK450163	SFP+-10G-LPBK
Xcvr 18	REV 01	740-030589	S9AK450094	SFP+-10G-LPBK
Xcvr 19	REV 01	740-030589	S9AK450100	SFP+-10G-LPBK
Xcvr 20	REV 01	740-030589	S9AK450168	SFP+-10G-LPBK
Xcvr 21	REV 01	740-030589	S9AK450165	SFP+-10G-LPBK
Xcvr 22	REV 01	740-030589	S9AK450073	SFP+-10G-LPBK
Xcvr 23	REV 01	740-030589	S9AK450164	SFP+-10G-LPBK
Xcvr 24	REV 01	740-030589	S9AK450074	SFP+-10G-LPBK
Xcvr 25	REV 01	740-030589	SA62270195	SFP+-10G-LPBK
Xcvr 26	REV 01	740-030589	S9AK450078	SFP+-10G-LPBK

Xcvr 27	REV 01	740-030589	S9AK450024	SFP+-10G-LPBK
Xcvr 28	REV 01	740-030589	S9AK450027	SFP+-10G-LPBK
Xcvr 29	REV 01	740-030589	S9AK450080	SFP+-10G-LPBK
Xcvr 30	REV 01	740-030589	S9AK450030	SFP+-10G-LPBK
Xcvr 31	REV 01	740-030589	S9AK450025	SFP+-10G-LPBK
Xcvr 32	REV 01	740-030589	S9AK450023	SFP+-10G-LPBK
Xcvr 33	REV 01	740-030589	S9AK450075	SFP+-10G-LPBK
Xcvr 34	REV 01	740-030589	S9AK450161	SFP+-10G-LPBK
Xcvr 35	REV 01	740-030589	S9AK450071	SFP+-10G-LPBK
Xcvr 36	REV 01	740-030589	S9AK450072	SFP+-10G-LPBK
Xcvr 37	REV 01	740-030589	S9AK450022	SFP+-10G-LPBK
Xcvr 38	REV 01	740-030589	S9AK450021	SFP+-10G-LPBK
Xcvr 39	REV 01	740-030589	S9AK450175	SFP+-10G-LPBK
Xcvr 40	REV 01	740-030589	S9AK450162	SFP+-10G-LPBK
Xcvr 41	REV 01	740-030589	S99E270074	SFP+-10G-LPBK
Xcvr 42	REV 01	740-030589	S9AK450174	SFP+-10G-LPBK
Xcvr 43	REV 01	740-030589	S9AK450077	SFP+-10G-LPBK
Xcvr 44	REV 01	740-030589	S9AK450076	SFP+-10G-LPBK
Xcvr 45	REV 01	740-030589	S9AK450026	SFP+-10G-LPBK
Xcvr 46	REV 01	740-030589	S9AK450079	SFP+-10G-LPBK
Xcvr 47	REV 01	740-030589	S9AK450029	SFP+-10G-LPBK
PIC 1		BUILTIN	BUILTIN	15x 10G-SFP+
Xcvr 1	REV 01	740-032986	QA170087	QSFP+-40G-SR4
Xcvr 4	REV 01	740-032986	QA360442	QSFP+-40G-SR4
Xcvr 8	REV 01	740-032986	QA170091	QSFP+-40G-SR4
Xcvr 12	REV 01	740-032986	QA170042	QSFP+-40G-SR4
MGMT BRD	REV 08	750-036946	EE0731	QFX3500-MB
Power Supply 0	Rev 04	740-032091	UI00690	QFX PS 650W AC
Power Supply 1	Rev 04	740-032091	UI00679	QFX PS 650W AC
Fan Tray 0				QFX Fan Tray
Fan Tray 1				QFX Fan Tray

### show chassis hardware models (QFX3500 Switches)

```
user@switch> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	Serial number	FRU model number
Routing Engine 0		BUILTIN	BUILTIN	
FPC 0	REV 02	711-032234	EC4074	
Power Supply 0	PSMI 2C	11-d65800	--	

### show chassis hardware clei-models (QFX3500 Switches)

```
user@switch> show chassis hardware clei-models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Routing Engine 0		BUILTIN		
FPC 0	REV 02	711-032234		
Power Supply 0	PSMI 2C	11-d65800		

### show chassis hardware clei-models (QFX5100 Switches)

```
user@switch> show chassis hardware clei-models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Routing Engine 0		BUILTIN	CMMNV10BRA	

FPC 0	REV 01	611-053010	CMMNV10BRA	
PIC 0		BUILTIN	CMMNV10BRA	
Power Supply 0	REV 03	740-053352	MUPABHBAA	JPSU-850W-AC-AFO
Power Supply 1	REV 03	740-053352	MUPABHBAA	JPSU-850W-AC-AFO
Fan Tray 0				QFX5100-96S-FANAFO
Fan Tray 1				QFX5100-96S-FANAFO
Fan Tray 2				QFX5100-96S-FANAFO

### show chassis hardware (QFX10002 Switches)

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			12345	QFX10002-36Q
Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	RE-QFX10002-36Q
FPC 0	REV 26	750-059497	ACNL1387	QFX10002-36Q
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	36X40G
Xcvr 0	REV 01	740-038623	MOC15476230389	QSFP+-40G-CU1M
Xcvr 1	REV 01	740-038623	MOC15476230438	QSFP+-40G-CU1M
Xcvr 2	REV 01	740-038623	MOC15446231917	QSFP+-40G-CU1M
Xcvr 3	REV 01	740-038623	MOC15446232043	QSFP+-40G-CU1M
Xcvr 4	REV	740-038624	APF15470032AVB	QSFP+-40G-CU3M
Xcvr 5	REV	740-038624	APF15470032H15	QSFP+-40G-CU3M
Xcvr 6	REV	740-038624	APF15470032A9J	QSFP+-40G-CU3M
Xcvr 7	REV	740-038624	APF15470032AG7	QSFP+-40G-CU3M
Xcvr 8	REV	740-038624	APF15470032ALD	QSFP+-40G-CU3M
Xcvr 9	REV 01	740-053203	APF15470071V43	QSFP+-40G-ACU7M
Xcvr 10	REV 01	740-053203	APF15470071V15	QSFP+-40G-ACU7M
Xcvr 11	REV 01	740-053203	APF15470071V12	QSFP+-40G-ACU7M
Xcvr 13	REV	740-038624	APF15470032H1N	QSFP+-40G-CU3M
Xcvr 18	REV 01	740-053203	APF154800738HW	QSFP+-40G-ACU7M
Xcvr 19	REV 01	740-038153	MOC12161530041	QSFP+-40G-CU3M
Xcvr 20	REV 01	740-038153	APF15500034A29	QSFP+-40G-CU3M
Xcvr 30	REV 01	740-038623	MOC15476230444	QSFP+-40G-CU1M
Xcvr 31	REV 01	740-032986	QC330038	QSFP+-40G-SR4
Xcvr 32	REV 01	740-032986	QC290540	QSFP+-40G-SR4
Mezz	REV 02	711-059316	ACNG9344	QFX10002 36X40G Mezz
Power Supply 0	REV 03	740-054405	1EDN5389293	AC AFO 1600W PSU
Power Supply 1	REV 03	740-054405	1EDN5346300	AC AFO 1600W PSU
Fan Tray 0				QFX10002 Fan Tray 0,
Front to Back Airflow - AFO				
Fan Tray 1				QFX10002 Fan Tray 1,
Front to Back Airflow - AFO				
Fan Tray 2				QFX10002 Fan Tray 2,
Front to Back Airflow - AFO				

### show chassis hardware detail (QFX10002 Switches)

```
user@switch> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			12345	QFX10002-72Q
Pseudo CB 0				

Routing Engine 0		BUILTIN	BUILTIN	RE-QFX10002-72Q
ada0	8193 MB	QEMU	QM00001	Virtio Block Disk
ada1	4096 MB	QEMU	QM00002	Virtio Block Disk
ada2	512 MB	QEMU	QM00003	Virtio Block Disk
ada3	1024 MB	QEMU	QM00004	Virtio Block Disk
usb0 (addr 0.1)	UHCI root HUB 0	Intel		uhub0
usb0 (addr 1.1)	EHCI root HUB 0	Intel		uhub1
usb0 (addr 1.2)	product 0x0020 32	vendor 0x8087		uhub2
usb0 (addr 1.3)	Ultra Fit 21891	SanDisk		umass0
FPC 0	REV 05	750-055415	ACAM4724	QFX10002-72Q
CPU		BUILTIN	BUILTIN	FPC CPU

### show chassis hardware (QFX10008 and QFX10016 Switches)

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			DE994	QFX10008
Midplane	REV 28	750-054097	ACPG3671	QFX10008 Midplane
Routing Engine 0		BUILTIN	BUILTIN	Routing Engine
Routing Engine 1		BUILTIN	BUILTIN	Routing Engine
CB 0	REV 03	750-068820	ACPA3224	Control Board
CB 1	REV 03	750-068820	ACPM9059	Control Board
FPC 0	REV 33	750-051354	ACNP4522	ULC-36Q-12Q28
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	36X40G
Xcvr 0	REV 01	740-038623	MOC16016230802	QSFP+-40G-CU1M
Xcvr 1	REV 01	740-038623	MOC16016230802	QSFP+-40G-CU1M
Xcvr 2	REV 01	740-038623	MOC16016231080	QSFP+-40G-CU1M
Xcvr 3	REV 01	740-038623	MOC16016231080	QSFP+-40G-CU1M
Xcvr 4	REV	740-038624	APF16220038H15	QSFP+-40G-CU3M
Xcvr 5	REV	740-038624	APF16220038H5M	QSFP+-40G-CU3M
Xcvr 6	REV	740-038624	APF160600308W8	QSFP+-40G-CU3M
Xcvr 8	REV	740-038624	APF16210038FFL	QSFP+-40G-CU3M
Xcvr 9	REV	740-038624	APF16210038F6F	QSFP+-40G-CU3M
Xcvr 10	REV	740-038624	APF1605003032B	QSFP+-40G-CU3M
Xcvr 11	REV	740-038624	APF16070030CDB	QSFP+-40G-CU3M
Xcvr 13	REV	740-038624	APF16210038FEW	QSFP+-40G-CU3M
Xcvr 15	REV 01	740-052307	APF16100071C1L	QSFP+-40G-ACU7M
Xcvr 16	REV	740-038625	APF1623005048E	QSFP+-40G-CU5M
Xcvr 17	REV	740-038625	APF16230050471	QSFP+-40G-CU5M
Xcvr 18	REV	740-038625	APF1623005044D	QSFP+-40G-CU5M
Xcvr 19	REV 01	740-052307	APF16100071C30	QSFP+-40G-ACU7M
Xcvr 20	REV	740-038625	APF16290055004	QSFP+-40G-CU5M
Xcvr 21	REV 01	740-038153	APF1622003970G	QSFP+-40G-CU3M
Xcvr 22	REV	740-038624	APF16190036R90	QSFP+-40G-CU3M
Xcvr 23	REV	740-038624	APF16050030374	QSFP+-40G-CU3M
Xcvr 24	REV 01	740-038153	APF162400318HC	QSFP+-40G-CU3M
Xcvr 30	REV	740-038624	APF1606003097A	QSFP+-40G-CU3M
Xcvr 31	REV 01	740-052307	APF160500702R9	QSFP+-40G-ACU7M
Xcvr 32	REV	740-038624	APF16220038GVR	QSFP+-40G-CU3M
FPD Board	REV 07	711-054687	ACPC7158	QFX10000 FPD
Power Supply 0	REV 02	740-049388	1EDL63104D6	QFX10000 AC
Power Supply 1	REV 02	740-049388	1EDL62503XC	QFX10000 AC
Power Supply 2	REV 02	740-049388	1EDL62503XS	QFX10000 AC
Power Supply 3	REV 02	740-049388	1EDL62503T8	QFX10000 AC
Power Supply 4	REV 02	740-049388	1EDL62503TR	QFX10000 AC
Power Supply 5	REV 02	740-049388	1EDL62503T5	QFX10000 AC
FTC 0	REV 15	750-050108	ACPF4227	QFX10000 FTC

FTC 1	REV 15	750-050108	ACPF4228	QFX10000 FTC
Fan Tray 0	REV 09	760-054372	ACNV5506	QFX10008 FHB
Fan Tray 1	REV 09	760-054372	ACNV5365	QFX10008 FHB
SIB 0	REV 27	750-050058	ACPM4212	QFX10008 SIB
SIB 1	REV 27	750-050058	ACPM4253	QFX10008 SIB
SIB 2	REV 27	750-050058	ACPM4174	QFX10008 SIB
SIB 3	REV 27	750-050058	ACPM4191	QFX10008 SIB
SIB 4	REV 27	750-050058	ACPM4216	QFX10008 SIB
SIB 5	REV 27	750-050058	ACPM4286	QFX10008 SIB

### show chassis hardware detail (QFX10008 and QFX10016 Switches)

```
user@switch> show chassis hardware details
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			12345	QFX10008
Midplane	REV 01	750-054097	ACAM1754	QFX10008 Midplane
Routing Engine 0		BUILTIN	BUILTIN	Routing Engine
ada0	8193 MB	QEMU	QM00001	Virtio Block Disk
ada1	4096 MB	QEMU	QM00002	Virtio Block Disk
ada2	512 MB	QEMU	QM00003	Virtio Block Disk
ada3	1024 MB	QEMU	QM00004	Virtio Block Disk
usb0 (addr 1)	UHCI root HUB 0		Intel	uhub0
usb0 (addr 1)	EHCI root HUB 0		Intel	uhub1
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub2
Routing Engine 1		BUILTIN	BUILTIN	Routing Engine
ada0	8193 MB	QEMU	QM00001	Virtio Block Disk
ada1	4096 MB	QEMU	QM00002	Virtio Block Disk
ada2	512 MB	QEMU	QM00003	Virtio Block Disk
ada3	1024 MB	QEMU	QM00004	Virtio Block Disk
usb0 (addr 0.1)	UHCI root HUB 0		Intel	uhub0
usb0 (addr 1.1)	EHCI root HUB 0		Intel	uhub1
usb0 (addr 1.2)	product 0x0020 32		vendor 0x8087	uhub2
CB 0	REV 16	750-052688	ACAM7936	Control Board
CB 1	REV 18	750-052688	ACAM7708	Control Board
FPC 0	REV 26	750-051351	ACPJ1372	ULC-60S-6Q Main Board
CPU		BUILTIN	BUILTIN	FPC CPU

### show chassis hardware interconnect-device (QFabric Systems)

```
user@switch> show chassis hardware interconnect-device interconnect1
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis	REV 07			QFX_olive
Midplane	REV 07	750-021261	BH0208188289	QFX Midplane
CB 0	REV 07	750-021261	BH0208188289	QFXIC08-CB4S

### show chassis hardware node-device (QFabric Systems)

```
user@switch> show chassis hardware node-device node1
```

Routing Engine 0	BUILTIN	BUILTIN	QFX Routing Engine
node1	REV 05	711-032234	ED3694 QFX3500-48S4Q-AFI
CPU	BUILTIN	BUILTIN	FPC CPU
PIC 0	BUILTIN	BUILTIN	48x 10G-SFP+

```

Xcvr 8      REV 01  740-030658  AD0946A028B  SFP+-10G-USR
...

```

### show chassis hardware (PTX5000 Packet Transport Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11D1FD7AJA	PTX5000
Midplane	REV 03	711-031896	ABAC5589	Midplane-8S
FPM	REV 08	760-030647	EG1679	Front Panel Display
PDU 0	Rev 05	740-032019	ZE00006	DC Power Dist Unit
PSM 0	Rev 05	740-032022	ZJ00018	DC 12V Power Supply
PSM 1	Rev 04	740-032022	ZC00052	DC 12V Power Supply
PSM 2	Rev 04	740-032022	ZD00051	DC 12V Power Supply
PSM 3	Rev 05	740-032022	ZJ00060	DC 12V Power Supply
CCG 0	REV 04	750-030653	EG3703	Clock Generator
CCG 1	REV 04	750-030653	EG3698	Clock Generator
Routing Engine 0	REV 05	740-026942	P737A-002231	RE-DUO-2600
Routing Engine 1	REV 06	740-026942	P737A-002438	RE-DUO-2600
CB 0	REV 08	750-030625	EG5519	Control Board
CB 1	REV 08	750-030625	EG5516	Control Board
FPC 0	REV 18	750-036844	EJ3080	FPC
CPU	REV 12	711-030686	EJ3260	SNG PMB
FPC 2	REV 13	750-036844	EG5065	FPC
CPU	REV 09	711-030686	EG4082	SNG PMB
PIC 0	REV 14	750-031913	EG5127	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	143363A00240	SFP+-10G-SR
Xcvr 1	REV 01	740-031981	UK90PZ1	SFP+-10G-LR
Xcvr 2	REV 01	740-031980	AD1141A04XH	SFP+-10G-SR
Xcvr 3	REV 01	740-031981	UK90Q46	SFP+-10G-LR
Xcvr 4	REV 01	740-031980	AD1141A04X4	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11H02560	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11C01589	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AD1141A04XF	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01094	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LKF	SFP+-10G-SR
Xcvr 12	REV 01	740-031980	183363A01528	SFP+-10G-SR
Xcvr 14	REV 01	740-031980	193363A01079	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	AK80MC8	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	AJC0BHC	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08D26856	SFP+-10G-LR
Xcvr 21	REV 01	740-031980	AK80KCT	SFP+-10G-SR
Xcvr 22	REV 01	740-031981	UK90PZL	SFP+-10G-LR
Xcvr 23	REV 01	740-031980	AK80N1V	SFP+-10G-SR
FPC 3	REV 13	750-036844	EG5074	FPC
CPU	REV 09	711-030686	EG4064	SNG PMB
PIC 1	REV 10	750-031903	EG0325	SNG Load
FPC 5	REV 06	750-036844	EH3198	FPC
CPU				
PIC 0	REV 14	750-031913	EG5134	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LBH	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11B03724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FMH	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J00818	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00743	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11B06125	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11H02529	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LFB	SFP+-10G-SR

Xcvr 12	REV 01	740-031980	193363A01061	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	B11J00687	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	193363A00738	SFP+-10G-SR
Xcvr 18	REV 01	740-031980	AK80MQX	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08C17257	SFP+-10G-LR
Xcvr 22	REV 01	740-031980	B11J00730	SFP+-10G-SR
Xcvr 23	REV 01	740-031980	AK80KEE	SFP+-10G-SR
PIC 1	REV 08	750-036710	EG3105	2x 40GE CFP
Xcvr 0	REV 01	740-034554	B260HLT	CFP-40G-LR4
Xcvr 1	REV 01	740-034554	B11C02847	CFP-40G-LR4
FPC 6	REV 18	750-036844	EJ4391	FPC
CPU	REV 12	711-030686	EJ3257	SNG PMB
FPC 7	REV 18	750-036844	EJ4382	FPC
CPU	REV 12	711-030686	EJ3238	SNG PMB
SPMB 0	REV 10	711-030686	EG5418	SNG PMB
SPMB 1	REV 09	711-030686	EG5373	SNG PMB
SIB 0	REV 07	750-030631	EG4858	SIB-I-8S
SIB 1	REV 07	750-030631	EG4872	SIB-I-8S
SIB 2	REV 07	750-030631	EG4866	SIB-I-8S
SIB 3	REV 07	750-030631	EG6011	SIB-I-8S
SIB 4	REV 07	750-030631	EG4907	SIB-I-8S
SIB 5	REV 07	750-030631	EG4879	SIB-I-8S
SIB 6	REV 07	750-030631	EG4864	SIB-I-8S
SIB 7	REV 07	750-030631	EG4899	SIB-I-8S
SIB 8	REV 07	750-030631	EG4880	SIB-I-8S
Fan Tray 0	REV 04	760-032784	EG1496	Vertical Fan Tray
Fan Tray 1	REV 04	760-030642	EG1335	Horizontal Fan Tray
Fan Tray 2	REV 02	760-030642	ED4952	Horizontal Fan Tray

### show chassis hardware (PTX5000 Packet Transport Router with AC PSM and PDU)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN12223A6AJA	PTX5000
Midplane	REV 16	750-035893	ACRA1350	Midplane-8S
FPM	REV 12	760-030647	BBBD5625	Front Panel Display
PDU 0	Rev 01	740-048338	1GB83360005	High Capacity AC WYE PDU
PSM 0	Rev 01	740-048334	1GB43360074	High Capacity AC PSM
PSM 1	Rev 01	740-048334	1GB43360001	High Capacity AC PSM
PSM 2	Rev 01	740-048334	1GB43360104	High Capacity AC PSM
PSM 3	Rev 01	740-048334	1GB43360042	High Capacity AC PSM
PSM 4	Rev 01	740-048334	1GB43360068	High Capacity AC PSM
PSM 5	Rev 01	740-048334	1GB43360080	High Capacity AC PSM
PSM 6	Rev 01	740-048334	1GB43360046	High Capacity AC PSM
PSM 7	Rev 01	740-048334	1GB43360100	High Capacity AC PSM
PDU 1	Rev 01	740-048338	1GB83360006	High Capacity AC WYE PDU
PSM 0	Rev 01	740-048334	1GB43360069	High Capacity AC PSM
PSM 1	Rev 01	740-048334	1GB43360099	High Capacity AC PSM
PSM 2	Rev 01	740-048334	1GB43360050	High Capacity AC PSM
PSM 3	Rev 01	740-048334	1GB43360095	High Capacity AC PSM
PSM 4	Rev 01	740-048334	1GB43360101	High Capacity AC PSM
PSM 5	Rev 01	740-048334	1GB43360075	High Capacity AC PSM
PSM 6	Rev 01	740-048334	1GB43360047	High Capacity AC PSM
PSM 7	Rev 01	740-048334	1GB43360019	High Capacity AC PSM
CCG 0	REV 09	750-030653	BBAZ5345	Clock Generator
...				

**show chassis hardware (PTX5000 Packet Transport Router with FPC2-PTX-P1A)**

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN1204FC0AJA	PTX5000
Midplane	REV 11	750-035893	ACAB8038	Midplane-8S
FPM	REV 12	760-030647	BBBD5619	Front Panel
Display				
PDU 0	Rev 04	740-048336	1GB93470043	High Capacity DC PDU
PSM 0	Rev 04	740-046988	1GB63500184	High Capacity DC PSM
PSM 2	Rev 04	740-046988	1GB63500169	High Capacity DC PSM
PSM 4	Rev 04	740-046988	1GB63500306	High Capacity DC PSM
PSM 6	Rev 04	740-046988	1GB63500074	High Capacity DC PSM
PDU 1	Rev 04	740-048336	1GB93470045	High Capacity DC PDU
PSM 1	Rev 04	740-046988	1GB63500193	High Capacity DC PSM
PSM 3	Rev 04	740-046988	1GB63500143	High Capacity DC PSM
PSM 5	Rev 04	740-046988	1GB63500146	High Capacity DC PSM
PSM 7	Rev 04	740-046988	1GB63500192	High Capacity DC PSM
CCG 0	REV 09	750-030653	BBBC1909	Clock Generator
CCG 1	REV 09	750-030653	BBBD2970	Clock Generator
...				

**show chassis hardware clei-models (PTX5000 Packet Transport Router)**

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
FPM	REV 08	760-030647	PROTOXCLEI	CRAFT-PTX5000-S
PDU 0	Rev 05	740-032019	IPUPAHLKAA	PWR-SAN-PDU-DC
PSM 0	Rev 05	740-032022	IPUPAHNKAA	PSM-PTX-DC-120-S
PSM 1	Rev 04	740-032022	032022XXXX	PWR-SAN-12-DC
PSM 2	Rev 04	740-032022	032022XXXX	PWR-SAN-12-DC
PSM 3	Rev 05	740-032022	IPUPAHNKAA	PSM-PTX-DC-120-S
CCG 0	REV 04	750-030653	PROTOXCLEI	CCG-PTX-S
CCG 1	REV 04	750-030653	PROTOXCLEI	CCG-PTX-S
Routing Engine 0	REV 05	740-026942		RE-DUO-C2600-16G-S
Routing Engine 1	REV 06	740-026942		RE-DUO-C2600-16G-S
CB 0	REV 08	750-030625	PROTOXCLEI	CB-PTX-S
CB 1	REV 08	750-030625	PROTOXCLEI	CB-PTX-S
FPC 0	REV 18	750-036844	PROTOXCLEI	FPC-PTX-P1-A
FPC 2	REV 13	750-036844	PROTOXCLEI	FPC-PTX-P1-A
PIC 0	REV 14	750-031913	PROTOXCLEI	P1-PTX-24-10GE-SFPP
FPC 3	REV 13	750-036844	PROTOXCLEI	FPC-PTX-P1-A
FPC 5				
PIC 0	REV 14	750-031913	PROTOXCLEI	P1-PTX-24-10GE-SFPP
FPC 6	REV 18	750-036844	PROTOXCLEI	FPC-PTX-P1-A
FPC 7	REV 18	750-036844	PROTOXCLEI	FPC-PTX-P1-A
SIB 0	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 1	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 2	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 3	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 4	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 5	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 6	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 7	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 8	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
Fan Tray 1	REV 04	760-030642	PROTOXCLEI	FAN-PTX-H-S



## show chassis hardware clei-models (PTX5000 Packet Transport Router with AC PSM and PDU)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 16	750-035893	IPMUN00ARA	CHAS-MP-PTX5000-S
FPM	REV 12	760-030647	IPUCA7SCAA	CRAFT-PTX5000-S
PDU 0	Rev 01	740-048338	PROTOACPDU	PDU2-PTX-AC-W
PSM 0	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 1	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 2	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 3	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 4	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 5	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 6	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 7	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PDU 1	Rev 01	740-048338	PROTOACPDU	PDU2-PTX-AC-W
PSM 0	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 1	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 2	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 3	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 4	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 5	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 6	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 7	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
CCG 0	REV 09	750-030653	IPUCA7DCAA	CCG-PTX-S
...				

## show chassis hardware clei-models (PTX5000 Packet Transport Router with FPC2-PTX-PIA)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 11	750-035893	IPMUN00ARA	CHAS-MP-PTX5000-S
FPM	REV 12	760-030647	IPUCA7SCAA	CRAFT-PTX5000-S
PDU 0	Rev 04	740-048336	IPUPAL7KAA	PDU2-PTX-DC-S
PSM 0	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 2	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 4	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 6	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PDU 1	Rev 04	740-048336	IPUPAL7KAA	PDU2-PTX-DC-S
PSM 1	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 3	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 5	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 7	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
CCG 0	REV 09	750-030653	IPUCA7DCAA	CCG-PTX-S
CCG 1	REV 09	750-030653	IPUCA7DCAA	CCG-PTX-S
...				

## show chassis hardware detail (PTX5000 Packet Transport Router)

```
user@host> show chassis hardware detail
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN1D1FD7AJA	PTX5000
Midplane	REV 03	711-031896	ABAC5589	Midplane-8S
FPM	REV 08	760-030647	EG1679	Front Panel Display

PDU 0	Rev 05	740-032019	ZE00006	DC Power Dist Unit
PSM 0	Rev 05	740-032022	ZJ00018	DC 12V Power Supply
PSM 1	Rev 04	740-032022	ZC00052	DC 12V Power Supply
PSM 2	Rev 04	740-032022	ZD00051	DC 12V Power Supply
PSM 3	Rev 05	740-032022	ZJ00060	DC 12V Power Supply
CCG 0	REV 04	750-030653	EG3703	Clock Generator
CCG 1	REV 04	750-030653	EG3698	Clock Generator
Routing Engine 0	REV 05	740-026942	P737A-002231	RE-DUO-2600
ad0	3823 MB	SMART CF	201006190039C02DC02D	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	2011042300CF4C6B4C6B	Disk 1
Routing Engine 1	REV 06	740-026942	P737A-002438	RE-DUO-2600
ad0	3823 MB	SMART CF	20100619053455F055F0	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	20110423000AE8E7E8E7	Disk 1
CB 0	REV 08	750-030625	EG5519	Control Board
CB 1	REV 08	750-030625	EG5516	Control Board
FPC 0	REV 18	750-036844	EJ3080	FPC
CPU	REV 12	711-030686	EJ3260	SNG PMB
FPC 2	REV 13	750-036844	EG5065	FPC
CPU	REV 09	711-030686	EG4082	SNG PMB
PIC 0	REV 14	750-031913	EG5127	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	143363A00240	SFP+-10G-SR
Xcvr 1	REV 01	740-031981	UK90PZ1	SFP+-10G-LR
Xcvr 2	REV 01	740-031980	AD1141A04XH	SFP+-10G-SR
Xcvr 3	REV 01	740-031981	UK90Q46	SFP+-10G-LR
Xcvr 4	REV 01	740-031980	AD1141A04X4	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11H02560	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11C01589	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AD1141A04XF	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01094	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LKF	SFP+-10G-SR
Xcvr 12	REV 01	740-031980	183363A01528	SFP+-10G-SR
Xcvr 14	REV 01	740-031980	193363A01079	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	AK80MC8	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	AJC0BHC	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08D26856	SFP+-10G-LR
Xcvr 21	REV 01	740-031980	AK80KCT	SFP+-10G-SR
Xcvr 22	REV 01	740-031981	UK90PZL	SFP+-10G-LR
Xcvr 23	REV 01	740-031980	AK80N1V	SFP+-10G-SR
FPC 3	REV 13	750-036844	EG5074	FPC
CPU	REV 09	711-030686	EG4064	SNG PMB
PIC 1	REV 10	750-031903	EG0325	SNG Load
FPC 5	REV 06	750-036844	EH3198	FPC
CPU				
PIC 0	REV 14	750-031913	EG5134	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LBH	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11B03724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FMH	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J00818	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00743	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11B06125	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11H02529	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LFB	SFP+-10G-SR
Xcvr 12	REV 01	740-031980	193363A01061	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	B11J00687	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	193363A00738	SFP+-10G-SR
Xcvr 18	REV 01	740-031980	AK80MQX	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08C17257	SFP+-10G-LR
Xcvr 22	REV 01	740-031980	B11J00730	SFP+-10G-SR
Xcvr 23	REV 01	740-031980	AK80KEE	SFP+-10G-SR
PIC 1	REV 08	750-036710	EG3105	2x 40GE CFP

Xcvr 0	REV 01	740-034554	B260HLT	CFP-40G-LR4
Xcvr 1	REV 01	740-034554	B11C02847	CFP-40G-LR4
FPC 6	REV 18	750-036844	EJ4391	FPC
CPU	REV 12	711-030686	EJ3257	SNG PMB
FPC 7	REV 18	750-036844	EJ4382	FPC
CPU	REV 12	711-030686	EJ3238	SNG PMB
SPMB 0	REV 10	711-030686	EG5418	SNG PMB
SPMB 1	REV 09	711-030686	EG5373	SNG PMB
SIB 0	REV 07	750-030631	EG4858	SIB-I-8S
SIB 1	REV 07	750-030631	EG4872	SIB-I-8S
SIB 2	REV 07	750-030631	EG4866	SIB-I-8S
SIB 3	REV 07	750-030631	EG6011	SIB-I-8S
SIB 4	REV 07	750-030631	EG4907	SIB-I-8S
SIB 5	REV 07	750-030631	EG4879	SIB-I-8S
SIB 6	REV 07	750-030631	EG4864	SIB-I-8S
SIB 7	REV 07	750-030631	EG4899	SIB-I-8S
SIB 8	REV 07	750-030631	EG4880	SIB-I-8S
Fan Tray 0	REV 04	760-032784	EG1496	Vertical Fan Tray
Fan Tray 1	REV 04	760-030642	EG1335	Horizontal Fan Tray
Fan Tray 2	REV 02	760-030642	ED4952	Horizontal Fan Tray

#### show chassis hardware detail (PTX5000 Packet Transport Router with AC PSM and PDU)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN12223A6AJA	PTX5000
Midplane	REV 16	750-035893	ACRA1350	Midplane-8S
FPM	REV 12	760-030647	BBBD5625	Front Panel Display
PDU 0	Rev 01	740-048338	1GB83360005	High Capacity AC WYE PDU
PSM 0	Rev 01	740-048334	1GB43360074	High Capacity AC PSM
PSM 1	Rev 01	740-048334	1GB43360001	High Capacity AC PSM
PSM 2	Rev 01	740-048334	1GB43360104	High Capacity AC PSM
PSM 3	Rev 01	740-048334	1GB43360042	High Capacity AC PSM
PSM 4	Rev 01	740-048334	1GB43360068	High Capacity AC PSM
PSM 5	Rev 01	740-048334	1GB43360080	High Capacity AC PSM
PSM 6	Rev 01	740-048334	1GB43360046	High Capacity AC PSM
PSM 7	Rev 01	740-048334	1GB43360100	High Capacity AC PSM
PDU 1	Rev 01	740-048338	1GB83360006	High Capacity AC WYE PDU
PSM 0	Rev 01	740-048334	1GB43360069	High Capacity AC PSM
PSM 1	Rev 01	740-048334	1GB43360099	High Capacity AC PSM
PSM 2	Rev 01	740-048334	1GB43360050	High Capacity AC PSM
PSM 3	Rev 01	740-048334	1GB43360095	High Capacity AC PSM
PSM 4	Rev 01	740-048334	1GB43360101	High Capacity AC PSM
PSM 5	Rev 01	740-048334	1GB43360075	High Capacity AC PSM
PSM 6	Rev 01	740-048334	1GB43360047	High Capacity AC PSM
PSM 7	Rev 01	740-048334	1GB43360019	High Capacity AC PSM
CCG 0	REV 09	750-030653	BBAZ5345	Clock Generator

#### show chassis hardware detail (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1204FC0AJA	PTX5000

Midplane	REV 11	750-035893	ACAB8038	Midplane-8S
FPM	REV 12	760-030647	BBBD5619	Front Panel
Display				
PDU 0	Rev 04	740-048336	1GB93470043	High Capacity DC PDU
PSM 0	Rev 04	740-046988	1GB63500184	High Capacity DC PSM
PSM 2	Rev 04	740-046988	1GB63500169	High Capacity DC PSM
PSM 4	Rev 04	740-046988	1GB63500306	High Capacity DC PSM
PSM 6	Rev 04	740-046988	1GB63500074	High Capacity DC PSM
PDU 1	Rev 04	740-048336	1GB93470045	High Capacity DC PDU
PSM 1	Rev 04	740-046988	1GB63500193	High Capacity DC PSM
PSM 3	Rev 04	740-046988	1GB63500143	High Capacity DC PSM
PSM 5	Rev 04	740-046988	1GB63500146	High Capacity DC PSM
PSM 7	Rev 04	740-046988	1GB63500192	High Capacity DC PSM
CCG 0	REV 09	750-030653	BBBC1909	Clock Generator
CCG 1	REV 09	750-030653	BBBD2970	Clock Generator
...				

### show chassis hardware models (PTX5000 Packet Transport Router)

```
user@host> show chassis hardware models
```

#### Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
FPM	REV 08	760-030647	EG1679	CRAFT-PTX5000-S
PDU 0	Rev 05	740-032019	ZE00006	PWR-SAN-PDU-DC
PSM 0	Rev 05	740-032022	ZJ00018	PSM-PTX-DC-120-S
PSM 1	Rev 04	740-032022	ZC00052	PWR-SAN-12-DC
PSM 2	Rev 04	740-032022	ZD00051	PWR-SAN-12-DC
PSM 3	Rev 05	740-032022	ZJ00060	PSM-PTX-DC-120-S
CCG 0	REV 04	750-030653	EG3703	CCG-PTX-S
CCG 1	REV 04	750-030653	EG3698	CCG-PTX-S
Routing Engine 0	REV 05	740-026942	P737A-002231	RE-DUO-C2600-16G-S
Routing Engine 1	REV 06	740-026942	P737A-002438	RE-DUO-C2600-16G-S
CB 0	REV 08	750-030625	EG5519	CB-PTX-S
CB 1	REV 08	750-030625	EG5516	CB-PTX-S
FPC 0	REV 18	750-036844	EJ3080	FPC-PTX-P1-A
FPC 2	REV 13	750-036844	EG5065	FPC-PTX-P1-A
PIC 0	REV 14	750-031913	EG5127	P1-PTX-24-10GE-SFPP
FPC 3	REV 13	750-036844	EG5074	FPC-PTX-P1-A
FPC 5				
PIC 0	REV 14	750-031913	EG5134	P1-PTX-24-10GE-SFPP
FPC 6	REV 18	750-036844	EJ4391	FPC-PTX-P1-A
FPC 7	REV 18	750-036844	EJ4382	FPC-PTX-P1-A
SIB 0	REV 07	750-030631	EG4858	SIB-I-PTX5008
SIB 1	REV 07	750-030631	EG4872	SIB-I-PTX5008
SIB 2	REV 07	750-030631	EG4866	SIB-I-PTX5008
SIB 3	REV 07	750-030631	EG6011	SIB-I-PTX5008
SIB 4	REV 07	750-030631	EG4907	SIB-I-PTX5008
SIB 5	REV 07	750-030631	EG4879	SIB-I-PTX5008
SIB 6	REV 07	750-030631	EG4864	SIB-I-PTX5008
SIB 7	REV 07	750-030631	EG4899	SIB-I-PTX5008
SIB 8	REV 07	750-030631	EG4880	SIB-I-PTX5008
Fan Tray 1	REV 04	760-030642	EG1335	FAN-PTX-H-S

### show chassis hardware models (PTX5000 Packet Transport Router with AC PSM and PDU)

```
user@host> show chassis hardware models
```

```

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 16   750-035893  ACRA1350      CHAS-MP-PTX5000-S
FPM           REV 12   760-030647  BBBD5625      CRAFT-PTX5000-S
PDU 0         Rev 01   740-048338  1GB83360005   PDU2-PTX-AC-W
  PSM 0       Rev 01   740-048334  1GB43360074   PSM2-PTX-AC
  PSM 1       Rev 01   740-048334  1GB43360001   PSM2-PTX-AC
  PSM 2       Rev 01   740-048334  1GB43360104   PSM2-PTX-AC
  PSM 3       Rev 01   740-048334  1GB43360042   PSM2-PTX-AC
  PSM 4       Rev 01   740-048334  1GB43360068   PSM2-PTX-AC
  PSM 5       Rev 01   740-048334  1GB43360080   PSM2-PTX-AC
  PSM 6       Rev 01   740-048334  1GB43360046   PSM2-PTX-AC
  PSM 7       Rev 01   740-048334  1GB43360100   PSM2-PTX-AC
PDU 1         Rev 01   740-048338  1GB83360006   PDU2-PTX-AC-W
  PSM 0       Rev 01   740-048334  1GB43360069   PSM2-PTX-AC
  PSM 1       Rev 01   740-048334  1GB43360099   PSM2-PTX-AC
  PSM 2       Rev 01   740-048334  1GB43360050   PSM2-PTX-AC
  PSM 3       Rev 01   740-048334  1GB43360095   PSM2-PTX-AC
  PSM 4       Rev 01   740-048334  1GB43360101   PSM2-PTX-AC
  PSM 5       Rev 01   740-048334  1GB43360075   PSM2-PTX-AC
  PSM 6       Rev 01   740-048334  1GB43360047   PSM2-PTX-AC
  PSM 7       Rev 01   740-048334  1GB43360019   PSM2-PTX-AC
CCG 0         REV 09   750-030653  BBAZ5345      CCG-PTX-S
...

```

#### show chassis hardware models (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```

user@host> show chassis hardware models

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 11   750-035893  ACAB8038      CHAS-MP-PTX5000-S
FPM           REV 12   760-030647  BBBD5619      CRAFT-PTX5000-S
PDU 0         Rev 04   740-048336  1GB93470043   PDU2-PTX-DC-S
  PSM 0       Rev 04   740-046988  1GB63500184   PSM2-PTX-DC-S
  PSM 2       Rev 04   740-046988  1GB63500169   PSM2-PTX-DC-S
  PSM 4       Rev 04   740-046988  1GB63500306   PSM2-PTX-DC-S
  PSM 6       Rev 04   740-046988  1GB63500074   PSM2-PTX-DC-S
PDU 1         Rev 04   740-048336  1GB93470045   PDU2-PTX-DC-S
  PSM 1       Rev 04   740-046988  1GB63500193   PSM2-PTX-DC-S
  PSM 3       Rev 04   740-046988  1GB63500143   PSM2-PTX-DC-S
  PSM 5       Rev 04   740-046988  1GB63500146   PSM2-PTX-DC-S
  PSM 7       Rev 04   740-046988  1GB63500192   PSM2-PTX-DC-S
CCG 0         REV 09   750-030653  BBBC1909      CCG-PTX-S
CCG 1         REV 09   750-030653  BBBD2970      CCG-PTX-S
...

```

#### show chassis hardware extensive (PTX5000 Packet Transport Router)

```

user@host> show chassis hardware extensive

Hardware inventory:
Item          Version  Part number  Serial number  Description
.....
PDU 0         Rev 04   740-032019  UE0003         DC Power Dist Unit
Jedec Code:   0x7fb0                EEPROM Version: 0x02
P/N:          740-032019        S/N:           UE0003
Assembly ID:  0x043d            Assembly Version: 04.00
Date:         11-29-2010        Assembly Flags: 0x00

```

```

Version:      Rev 04          CLEI Code:      032022XXXX
ID: DC Power Dist Unit      FRU Model Number: PWR-SAN-PDU-DC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 3d 04 00 52 65 76 20 30 34 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 32 30 31 39 00 00
Address 0x20: 53 2f 4e 20 55 45 30 30 30 33 00 00 00 1d 0b 07
Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 30 33 32 30 32 32 58 58 58 58 50
Address 0x50: 57 52 2d 53 41 4e 2d 50 44 55 2d 44 43 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 a3 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0          Rev 04      740-032022      YG00065          DC 12V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-032022      S/N:              YG00065
Assembly ID:   0x0440          Assembly Version:  04.00
Date:          07-30-2010      Assembly Flags:    0x00
Version:       Rev 04          CLEI Code:        032022XXXX
ID: DC 12V Power Supply Module FRU Model Number: PWR-SAN-12-DC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 40 04 00 52 65 76 20 30 34 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 32 30 32 32 00 00
Address 0x20: 53 2f 4e 20 59 47 30 30 30 36 35 00 00 1e 07 07
Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 30 33 32 30 32 32 58 58 58 58 50
Address 0x50: 57 52 2d 53 41 4e 2d 31 32 2d 44 43 20 20 20 20
Address 0x60: 20 20 20 20 20 20 01 00 ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff 0c ff ff ff ff ff ff ff ff ff ff ff ff

```

### show chassis hardware extensive (PTX1000 Packet Transport Router)

```
user@host> show chassis hardware extensive
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               UNDEFINED    PTX1000
Pseudo CB 0
Routing Engine 0
FPC 0         REV 06    750-053330   ACAM4850       PTX1000-FPC-P2-BUILTIN
CPU           BUILTIN   BUILTIN      FPC CPU
PIC 0         BUILTIN   BUILTIN      288X10GE/72X40GE/24X100GE

    Xcvr 2     REV 01    740-046565   QE240845       QSFP+-40G-SR4
    Xcvr 3     REV 01    740-046565   QE240962       QSFP+-40G-SR4
    Xcvr 5     REV 01    740-032986   ES400LZ        QSFP+-40G-SR4
    Xcvr 12    REV 01    740-054053   QE419452       QSFP+-4X10G-SR
    Xcvr 18    REV 01    740-054053   QE419481       QSFP+-4X10G-SR
    Xcvr 30    REV 01    740-046565   QE440485       QSFP+-40G-SR4
    Xcvr 48    REV 01    740-032986   ES400K3        QSFP+-40G-SR4
    Xcvr 68    REV 01    740-046565   QF2805J3       QSFP+-40G-SR4
    Mezz       REV 05    711-053333   ACAM4282       Mezzanine Board
Power Supply 2 REV 01    740-054405   1EDN4470131    AC AFO 1600W PSU
Power Supply 3 REV 01    740-054405   1EDN4470112    AC AFO 1600W PSU
Fan Tray 0                               PTX1000 Fan Tray 0, Front
to Back Airflow - AFO
Fan Tray 1                               PTX1000 Fan Tray 1, Front

```

```

to Back Airflow - AFO
Fan Tray 2
to Back Airflow - AFO
PTX1000 Fan Tray 2, Front

```

### show chassis hardware extensive (PTX5000 with Control Board 2)

```
user@host> show chassis hardware grep CB
```

```

CB 0          REV 06  750-055537  ACLZ9541  Control Board 2
CB 1          REV 06  750-055537  ACLY5329  Control Board 2

```

### show chassis hardware (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1100FB1AFB	MX480
Midplane	REV 05	710-017414	TR3310	MX480 Midplane
FPM Board	REV 02	710-017254	KG1872	Front Panel Display
PEM 2	Rev 02	740-017343	QCS0812A00N	DC Power Entry Module
PEM 3	Rev 02	740-017343	QCS0812A00U	DC Power Entry Module
Routing Engine 0	REV 07	740-015113	1000740938	RE-S-1300
CB 0	REV 03	710-021523	KF4630	MX SCB
FPC 1	REV 11	750-037207	ZW9726	AS-MCC
CPU	REV 04	711-038173	ZW4819	AS-MCC PMB
MIC 0	REV 06	750-037214	ZW3574	AS-MSC
PIC 0		BUILTIN	BUILTIN	AS-MSC
MIC 1	REV 00	750-037211		AS-MXC
PIC 2		BUILTIN	BUILTIN	AS-MXC

### show chassis hardware extensive (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis hardware extensive
```

```

FPC 1          REV 11  750-037207  ZW9726          AS-MCC
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           750-037207      S/N:             ZW9726
Assembly ID:   0x0b37          Assembly Version: 01.11
Date:          02-17-2012      Assembly Flags:   0x00
Version:       REV 11          CLEI Code:        PROTOXCLEI
ID: AS-MCC          FRU Model Number: 750-037207
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 37 01 0b 52 45 56 20 31 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 30 37 00 00
Address 0x20: 53 2f 4e 20 5a 57 39 37 32 36 00 00 00 11 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 35 30 2d 30 33 37 32 30 37 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 31 31 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 5e ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 04  711-038173  ZW4819          AS-MCC-PMB
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           711-038173      S/N:             ZW4819
Assembly ID:   0x0b38          Assembly Version: 01.04
Date:          12-30-2011      Assembly Flags:   0x00

```

```

Version:      REV 04
ID: AS-MCC PMB
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b 38 01 04 52 45 56 20 30 34 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 33 38 31 37 33 00 00
  Address 0x20: 53 2f 4e 20 5a 57 34 38 31 39 00 00 00 1e 0c 07
  Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 37
  Address 0x50: 31 31 2d 30 33 38 31 37 33 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 30 34 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 60 00 00 00 00 00 00 00 00 00 00 00 00
MIC 0          REV 06      750-037214      ZW3574      AS-MSC
Jedec Code:    0x7fb0      EEPROM Version:    0x02
P/N:           750-037214      S/N:           ZW3574
Assembly ID:   0x0a44      Assembly Version: 01.06
Date:          02-19-2012      Assembly Flags: 0x00
Version:       REV 06      CLEI Code:      PROTOXCLEI
ID: AS-MSC      FRU Model Number: 750-037214
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0a 44 01 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 31 34 00 00
  Address 0x20: 53 2f 4e 20 5a 57 33 35 37 34 00 00 00 13 02 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 37
  Address 0x50: 35 30 2d 30 33 37 32 31 34 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 30 36 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 60 c0 03 e5 f4 00 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN      AS-MSC
MIC 1          REV 00      750-037211      AS-MXC
Jedec Code:    0x7fb0      EEPROM Version:    0x01
P/N:           750-037211
Assembly ID:   0x0a43      Assembly Version: 01.00
Date:          255-255-65535  Assembly Flags: 0x00
Version:       REV 00
ID: AS-MXC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0a 43 01 00 52 45 56 20 30 30 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 31 31 00 00
  Address 0x20: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 ff ff ff
  Address 0x30: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff c0 02 e6 6c 7f b0 02 ff 0a 44 01 06
PIC 2          BUILTIN      BUILTIN      AS-MXC

```

### show chassis hardware (ACX5048 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			VF3714170810	ACX5048



```

Pseudo CB 0
Routing Engine 0          BUILTIN      BUILTIN      ACX5K Routing Engine
FPC 0                     REV 05      650-056267   VF3714170810 ACX5048
  CPU                     BUILTIN      BUILTIN      FPC CPU
  PIC 0                   BUILTIN      BUILTIN      48x10G-6x40G
    Xcvr 0                REV 02      740-011613   NR2051S       SFP-SX
    Xcvr 33               REV 01      740-030589   SE5N290041    SFP+-10G-LPBK
    Xcvr 35               REV 01      740-030589   SE5N290926    SFP+-10G-LPBK
    Xcvr 37               REV 01      740-030589   SE5N290049    SFP+-10G-LPBK
    Xcvr 39               REV 01      740-030589   SE5N290046    SFP+-10G-LPBK
    Xcvr 48               NON-JNPR    409310098    UNKNOWN
Power Supply 1           REV 03      740-041741   1GA24081097   JPSU-650W-AC-AFO
Fan Tray 0
  to Back Airflow - AFO   ACX5K Fan Tray 0, Front
Fan Tray 1
  to Back Airflow - AFO   ACX5K Fan Tray 1, Front
Fan Tray 2
  to Back Airflow - AFO   ACX5K Fan Tray 2, Front
Fan Tray 3
  to Back Airflow - AFO   ACX5K Fan Tray 3, Front
Fan Tray 4
  to Back Airflow - AFO   ACX5K Fan Tray 4, Front

```

#### show chassis hardware detail (ACX5048 Router)

```
user@host> show chassis hardware detail
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Pseudo CB 0
Routing Engine 0          BUILTIN      BUILTIN      ACX5K Routing Engine
  ad0      509 MB  QEMU HARDDISK  QM00001      Hard Disk
  ad1     4095 MB  QEMU HARDDISK  QM00002      Hard Disk
  ad2      511 MB  QEMU HARDDISK  QM00003      Hard Disk
  ad3     1023 MB  QEMU HARDDISK  QM00004      Hard Disk
  usb0 (addr 1) product 0x0000 0 vendor 0x0000    uhub1
  usb0 (addr 2) product 0x0020 32 vendor 0x8087    uhub2
FPC 0           REV 05      650-056267   VF3714170810 ACX5048
  CPU           BUILTIN      BUILTIN      FPC CPU
  PIC 0         BUILTIN      BUILTIN      48x10G-6x40G
    Xcvr 0      REV 02      740-011613   NR2051S       SFP-SX
    Xcvr 33     REV 01      740-030589   SE5N290041    SFP+-10G-LPBK
    Xcvr 35     REV 01      740-030589   SE5N290926    SFP+-10G-LPBK
    Xcvr 37     REV 01      740-030589   SE5N290049    SFP+-10G-LPBK
    Xcvr 39     REV 01      740-030589   SE5N290046    SFP+-10G-LPBK
    Xcvr 48     NON-JNPR    409310098    UNKNOWN
Power Supply 1   REV 03      740-041741   1GA24081097   JPSU-650W-AC-AFO
Fan Tray 0
  to Back Airflow - AFO   ACX5K Fan Tray 0, Front
Fan Tray 1
  to Back Airflow - AFO   ACX5K Fan Tray 1, Front
Fan Tray 2
  to Back Airflow - AFO   ACX5K Fan Tray 2, Front
Fan Tray 3
  to Back Airflow - AFO   ACX5K Fan Tray 3, Front
Fan Tray 4
  to Back Airflow - AFO   ACX5K Fan Tray 4, Front

```

**show chassis hardware clei-models (ACX5048 Router)**

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Routing Engine 0		BUILTIN	CMMRG00BRA	ACX5048
FPC 0	REV 05	650-056267	CMMRG00BRA	ACX5048
PIC 0		BUILTIN	CMMRG00BRA	ACX5048
Power Supply 1	REV 03	740-041741	CMUPABHBAA	JPSU-650W-AC-AFO
Fan Tray 0				ACX5K-FAN
Fan Tray 1				ACX5K-FAN
Fan Tray 2				ACX5K-FAN
Fan Tray 3				ACX5K-FAN
Fan Tray 4				ACX5K-FAN

**show chassis hardware models (ACX5048 Router)**

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Routing Engine 0		BUILTIN	BUILTIN	ACX5048
FPC 0	REV 05	650-056267	VF3714170810	ACX5048
PIC 0		BUILTIN	BUILTIN	ACX5048
Power Supply 1	REV 03	740-041741	1GA24081097	JPSU-650W-AC-AFO
Fan Tray 0				ACX5K-FAN
Fan Tray 1				ACX5K-FAN
Fan Tray 2				ACX5K-FAN
Fan Tray 3				ACX5K-FAN
Fan Tray 4				ACX5K-FAN

**show chassis hardware (ACX5096 Router)**

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			VB3714510139	ACX5096
Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	ACX5K Routing Engine
FPC 0	REV 09	650-053391	VB3714510139	ACX5096
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	96x10G-8x40G
Xcvr 0	REV 01	740-021308	ARS186H	SFP+-10G-SR
Xcvr 2	REV 01	740-031851	AM1045SUA1G	SFP-SX
Xcvr 10	REV 02	740-011613	NS11KRP	SFP-SX
Xcvr 14	REV 01	740-031980	AMCOLKL	SFP+-10G-SR
Xcvr 20	REV 01	740-021308	ARS18A2	SFP+-10G-SR
Xcvr 30	REV 02	740-011613	PJ21954	SFP-SX
Xcvr 35	REV 01	740-031851	PN344LV	SFP-SX
Xcvr 40	REV 01	740-031851	PLG028R	SFP-SX
Xcvr 41	REV 01	740-021308	L12D01919	SFP+-10G-SR
Xcvr 46	REV 01	740-011613	PD91F10	SFP-SX
Xcvr 64	REV 01	740-031980	AMS0YSS	SFP+-10G-SR
Xcvr 96	REV 01	740-032986	QE481421	QSFP+-40G-SR4
Xcvr 99	REV 01	740-032986	QE494942	QSFP+-40G-SR4
Xcvr 100	REV 01	740-032986	QE494756	QSFP+-40G-SR4
Power Supply 0	REV 01	740-053352	1GD14220106	JPSU-850W-AC-AFO
Power Supply 1	REV 01	740-053352	1GD14220102	JPSU-850W-AC-AFO

```

Fan Tray 0
to Back Airflow - AFO
Fan Tray 1
to Back Airflow - AFO
Fan Tray 2
to Back Airflow - AFO

```

ACX5K Fan Tray 0, Front

ACX5K Fan Tray 1, Front

ACX5K Fan Tray 2, Front

### show chassis hardware detail (ACX5096 Router)

```
user@host> show chassis hardware detail
```

```

Hardware inventory:
Item              Version  Part number  Serial number  Description
Chassis
Pseudo CB 0
Routing Engine 0
  ad0      509 MB  QEMU HARDDISK  BUILTIN      ACX5K Routing Engine
  ad1     4095 MB  QEMU HARDDISK  QM00001      Hard Disk
  ad2      511 MB  QEMU HARDDISK  QM00002      Hard Disk
  ad3     1023 MB  QEMU HARDDISK  QM00003      Hard Disk
  ad3     1023 MB  QEMU HARDDISK  QM00004      Hard Disk
  usb0 (addr 1)  product 0x0000 0  vendor 0x0000  uhub1
  usb0 (addr 2)  product 0x0020 32  vendor 0x8087  uhub2
FPC 0
  REV 09      650-053391  VB3714510139  ACX5096
CPU
  BUILTIN      BUILTIN      FPC CPU
PIC 0
  BUILTIN      BUILTIN      96x10G-8x40G
  Xcvr 0      REV 01      740-021308  ARS186H      SFP+-10G-SR
  Xcvr 10     REV 02      740-011613  NS11KRP      SFP-SX
  Xcvr 14     REV 01      740-031980  AMCOLKL      SFP+-10G-SR
  Xcvr 20     REV 01      740-021308  ARS18A2      SFP+-10G-SR
  Xcvr 30     REV 02      740-011613  PJ21954      SFP-SX
  Xcvr 41     REV 01      740-021308  L12D01919    SFP+-10G-SR
  Xcvr 46     REV 01      740-011613  PD91F10      SFP-SX
  Xcvr 64     REV 01      740-031980  AMSOYSS      SFP+-10G-SR
  Xcvr 78     REV 01      740-031851  AM1045SUA1G  SFP-SX
  Xcvr 96     REV 01      740-032986  QE481421     QSFP+-40G-SR4
  Xcvr 99     REV 01      740-032986  QE494942     QSFP+-40G-SR4
  Xcvr 100    REV 01      740-032986  QE494756     QSFP+-40G-SR4
Power Supply 0  REV 01      740-053352  1GD14220106  JPSU-850W-AC-AFO
Power Supply 1  REV 01      740-053352  1GD14220102  JPSU-850W-AC-AFO
Fan Tray 0
to Back Airflow - AFO
Fan Tray 1
to Back Airflow - AFO
Fan Tray 2
to Back Airflow - AFO

```

ACX5K Fan Tray 0, Front

ACX5K Fan Tray 1, Front

ACX5K Fan Tray 2, Front

### show chassis hardware clei-models (ACX5096 Router)

```
user@host> show chassis hardware clei-models
```

```

Hardware inventory:
Item              Version  Part number  CLEI code      FRU model number
Routing Engine 0
FPC 0
  REV 09      650-053391  CMMNX10BRA     ACX5096
PIC 0
  BUILTIN      BUILTIN      CMMNX10BRA     ACX5096
Power Supply 0  REV 01      740-053352  CMUPACSBAA     JPSU-850W-AC-AFO
Power Supply 1  REV 01      740-053352  CMUPACSBAA     JPSU-850W-AC-AFO
Fan Tray 0

```

ACX5K-FAN

Fan Tray 1	ACX5K-FAN
Fan Tray 2	ACX5K-FAN

### show chassis hardware models (ACX5096 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	Serial number	FRU model number
Routing Engine 0		BUILTIN	BUILTIN	ACX5096
FPC 0	REV 09	650-053391	VB3714510139	ACX5096
PIC 0		BUILTIN	BUILTIN	ACX5096
Power Supply 0	REV 01	740-053352	1GD14220106	JPSU-850W-AC-AFO
Power Supply 1	REV 01	740-053352	1GD14220102	JPSU-850W-AC-AFO
Fan Tray 0				ACX5K-FAN
Fan Tray 1				ACX5K-FAN
Fan Tray 2				ACX5K-FAN

### show chassis hardware (ACX500 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			VJ0214510035	ACX500-AC
Midplane	REV 01	650-055932	VJ0214510035	ACX500-AC
Routing Engine		BUILTIN	BUILTIN	Routing Engine
FEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
FPC 0		BUILTIN	BUILTIN	FPC BUILTIN
MIC 0		BUILTIN	BUILTIN	2x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	2x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	PMF2Y3C	SFP-SX
Xcvr 1	REV 01	740-031851	PN342QN	SFP-SX
MIC 1		BUILTIN	BUILTIN	4x 1GE(LAN) SFP, RJ45
PIC 1		BUILTIN	BUILTIN	4x 1GE(LAN) SFP, RJ45
Xcvr 0	REV 01	740-011613	PF30K0L	SFP-SX
MIC 2		BUILTIN	BUILTIN	MS BUILTIN
PIC 2		BUILTIN	BUILTIN	MS BUILTIN

### show chassis hardware detail (ACX500 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			VJ0214510035	ACX500-AC
Midplane	REV 01	650-055932	VJ0214510035	ACX500-AC
Routing Engine		BUILTIN	BUILTIN	Routing Engine
da0 3820 MB USB DISK 2.0				Nand Flash 0
FEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
FPC 0		BUILTIN	BUILTIN	FPC BUILTIN
MIC 0		BUILTIN	BUILTIN	2x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	2x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	PMF2Y3C	SFP-SX
Xcvr 1	REV 01	740-031851	PN342QN	SFP-SX
MIC 1		BUILTIN	BUILTIN	4x 1GE(LAN) SFP, RJ45
PIC 1		BUILTIN	BUILTIN	4x 1GE(LAN) SFP, RJ45

Xcvr 0	REV 01	740-011613	PF30K0L	SFP-SX
MIC 2		BUILTIN	BUILTIN	MS BUILTIN
PIC 2		BUILTIN	BUILTIN	MS BUILTIN

### show chassis hardware extensive (ACX500 Router)

```
user@host> show chassis hardware extensive
```

#### Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			VJ0214510035	ACX500-AC
Jedec Code:	0x7fb0		EEPROM Version:	0x02
			S/N:	VJ0214510035
Assembly ID:	0x057c		Assembly Version:	00.00
Date:	00-00-0000		Assembly Flags:	0x00
ID:	ACX500-AC			

#### Board Information Record:

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

#### I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 7c 00 00 00 00 00 00 00 00 00 00

Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x20: 56 4a 30 32 31 34 35 31 30 30 33 35 00 00 00 00

Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Midplane	REV 01	650-055932	VJ0214510035	ACX500-AC
Jedec Code:	0x7fb0		EEPROM Version:	0x02
P/N:	650-055932		S/N:	VJ0214510035
Assembly ID:	0x057c		Assembly Version:	01.00
Date:	12-23-2014		Assembly Flags:	0x00
Version:	REV 01		CLEI Code:	PROTOXCLEI
ID:	ACX500-AC		FRU Model Number:	ACX500-AC

#### Board Information Record:

Address 0x00: ad 01 00 80 f0 1c 2d 1b 60 80 ff ff ff ff ff ff

#### I2C Hex Data:

Address 0x00: 7f b0 02 fe 05 7c 01 00 52 45 56 20 30 31 00 00

Address 0x10: 00 00 00 00 36 35 30 2d 30 35 35 39 33 32 00 00

Address 0x20: 56 4a 30 32 31 34 35 31 30 30 33 35 00 17 0c 07

Address 0x30: de ff ff ff ad 01 00 80 f0 1c 2d 1b 60 80 ff ff

Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 41

Address 0x50: 43 58 35 30 30 2d 41 43 00 00 00 00 00 00 00 00

Address 0x60: 00 00 00 00 00 00 30 41 00 ff ff ff ff ff ff ff

Address 0x70: ff ff ff 93 56 4a 30 32 31 34 35 31 30 30 33 35

Routing Engine	BUILTIN	BUILTIN	Routing Engine
da0 3820 MB USB DISK 2.0			Nand Flash 0
FEB 0	BUILTIN	BUILTIN	Forwarding Engine

#### Processor

FPC 0	BUILTIN	BUILTIN	FPC BUILTIN	
MIC 0	BUILTIN	BUILTIN	2x 1GE(LAN) SFP	
Jedec Code:	0x0000		EEPROM Version:	0x00
P/N:	BUILTIN		S/N:	BUILTIN
Assembly ID:	0x0a40		Assembly Version:	00.00
Date:	00-00-0000		Assembly Flags:	0x00
ID:	2x 1GE(LAN) SFP			

#### Board Information Record:

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

#### I2C Hex Data:

Address 0x00: 00 00 00 00 0a 40 00 00 00 00 00 00 00 00 00 00

```

Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 49 6e 76 61
Address 0x20: 42 55 49 4c 54 49 4e 00 49 6e 76 61 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 de ad be ef 64 20 22 a8 60 af 21 38
  PIC 0          BUILTIN      BUILTIN      2x 1GE(LAN) SFP
    Xcvr 0      REV 01      740-031851    PMF2Y3C      SFP-SX
    Xcvr 1      REV 01      740-031851    PN342QN      SFP-SX
  MIC 1          BUILTIN      BUILTIN      4x 1GE(LAN) SFP, RJ45
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N: BUILTIN      S/N: BUILTIN
Assembly ID: 0x0aac      Assembly Version: 00.00
Date: 00-00-0000      Assembly Flags: 0x00
ID: 4x 1GE(LAN) SFP, RJ45
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a ac 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 49 6e 76 61
Address 0x20: 42 55 49 4c 54 49 4e 00 49 6e 76 61 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 64 20 b5 c0 60 af 21 38
  PIC 1          BUILTIN      BUILTIN      4x 1GE(LAN) SFP, RJ45
    Xcvr 0      REV 01      740-011613    PF30K0L      SFP-SX
  MIC 2          BUILTIN      BUILTIN      MS BUILTIN
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N: BUILTIN      S/N: BUILTIN
Assembly ID: 0x0aaf      Assembly Version: 00.00
Date: 00-00-0000      Assembly Flags: 0x00
ID: MS BUILTIN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a af 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 49 6e 76 61
Address 0x20: 42 55 49 4c 54 49 4e 00 49 6e 76 61 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 de ad be ef 64 22 cd 48 60 af 21 38
  PIC 2          BUILTIN      BUILTIN      MS BUILTIN

```

### show chassis hardware clei-models (ACX500 Router)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	650-055932	PROTOXCLEI	ACX500-AC
Routing Engine		BUILTIN		
FEB 0		BUILTIN		
FPC 0		BUILTIN		

## show chassis hardware models (ACX500 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 01	650-055932	VJ0214510035	ACX500-AC
Routing Engine		BUILTIN	BUILTIN	
FEB 0		BUILTIN	BUILTIN	
FPC 0		BUILTIN	BUILTIN	

## show chassis hardware (MX960 Router with MPC10E-15C-MRATE Line Card)

```
user@router> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1209223AFA	MX960
Midplane	REV 02	750-047849	ACAW7314	Enhanced MX960 Backplane
FPM Board	REV 03	710-014974	ABBX4362	Front Panel Display
PDM	Rev 03	740-013110	QCS161050P8	Power Distribution Module
PEM 0	Rev 09	740-027760	QCS1638N02M	PS 4.1kW; 200-240V AC
in				
PEM 1	Rev 09	740-027760	QCS1638N048	PS 4.1kW; 200-240V AC
in				
PEM 2	Rev 09	740-027760	QCS1638N03C	PS 4.1kW; 200-240V AC
in				
PEM 3	Rev 09	740-027760	QCS1638N04Z	PS 4.1kW; 200-240V AC
in				
Routing Engine 0	REV 06	740-031117	9009103158	RE-S-1800x2
Routing Engine 1	REV 07	740-031116	9009109318	RE-S-1800x4
CB 0	REV 08	750-070866	CAJZ0417	Enhanced MX SCB 3
CB 1	REV 08	750-070866	CAJZ0431	Enhanced MX SCB 3
CB 2	REV 19	750-070866	CAKT9953	Enhanced MX SCB 3
FPC 0	REV 21	750-038768	CAJM2611	MS-MPC
CPU		BUILTIN	BUILTIN	MS-MPC-PMB
PIC 0		BUILTIN	BUILTIN	MS-MPC-PIC
PIC 1		BUILTIN	BUILTIN	MS-MPC-PIC
PIC 2		BUILTIN	BUILTIN	MS-MPC-PIC
PIC 3		BUILTIN	BUILTIN	MS-MPC-PIC
FPC 1	REV 15	750-056519	CADW0665	MPC7E 3D
MRATE-12xQSFP-XGE-XLGE-CGE				
CPU	REV 07	750-057177	CADZ1082	SMPC PMB
PIC 0		BUILTIN	BUILTIN	MRATE-6xQSFP-XGE-XLGE-CGE
PIC 1		BUILTIN	BUILTIN	MRATE-6xQSFP-XGE-XLGE-CGE
FPC 3	REV 37	750-037355	CAGA8501	MPC4E 3D 2CGE+8XGE
CPU	REV 11	711-035209	CAFT1293	HMPD PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-034554	16E620N00023	UNKNOWN
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	UR512T8	CFP-100G-SR10
FPC 4	REV 56	750-045715	CADM2878	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 11	711-045719	CADK9816	RMPD PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 1	REV 01	740-011613	PDE0SD9	SFP-SX
Xcvr 5	REV 02	740-011613	PQH3N22	SFP-SX

PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 13	750-049136	CADN2809	MPC5E 24XGE OTN Mezz
FPC 7	REV 13	750-070395	CAKR7041	MPC10E 3D MRATE-15xQSFPP
CPU	REV 09	750-072571	CAKJ8683	FMPC PMB
PIC 0		BUILTIN	BUILTIN	MRATE-5xQSFPP
Xcvr 0	REV 01	740-058732	1AMQA3110KQ	QSFPP-100GBASE-LR4
PIC 1		BUILTIN	BUILTIN	MRATE-5xQSFPP
PIC 2		BUILTIN	BUILTIN	MRATE-5xQSFPP
Xcvr 4	REV 01	740-058732	1AMQA312001	QSFPP-100GBASE-LR4
FPC 8	REV 18	750-033205	ZE0107	MPCE Type 3 3D
CPU	REV 06	711-035209	ZG5430	HMPC PMB 2G
MIC 0	REV 10	750-033199	YX4509	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-047682	J15H28989	CFP-100G-LR4
MIC 1	REV 10	750-033199	YX4501	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-047682	J15K69366	CFP-100G-LR4
FPC 10	REV 08	750-063180	CAHT2319	MPC3E NG HQoS
CPU	REV 13	711-045719	CAHT9650	RMPC PMB
MIC 0	REV 20	750-028380	YR6025	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0		NON-JNPR	CA49BK02A	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	C836XU0AJ	XFP-10G-SR
Fan Tray 0	REV 08	740-031521	ACAF1864	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACAF1992	Enhanced Fan Tray



## show chassis led satellite

<b>Syntax</b>	<code>show chassis led satellite [slot-id <i>slot-id</i>  device-alias <i>alias-name</i>]</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.
<b>Description</b>	Display the status and colors of the chassis LEDs of the satellite devices in a Junos Fusion. A major alarm (red) indicates a critical error condition that requires immediate action. A minor alarm (yellow) indicates a noncritical condition that requires monitoring or maintenance. A minor alarm that is left unchecked might cause interruption in service or performance degradation.
<b>Options</b>	<p><b>none</b>—Display the status of the chassis status LEDs of every satellite device in the Junos Fusion.</p> <p><b>slot-id <i>slot-id</i></b>—(Optional) Display the status of the chassis status LEDs of the satellite device using the specified FPC slot identifier in the Junos Fusion. The <i>slot-id</i> is the FPC slot ID number.</p> <p><b>device-alias <i>alias-name</i></b>—(Optional) Display the status of the chassis status LEDs of the satellite device using the specified alias in the Junos Fusion.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 73</a></li> <li>• <i>Understanding Junos Fusion Provider Edge Components</i></li> <li>• <i>Understanding Junos Fusion Enterprise Components</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show chassis led satellite on page 685</a>
<b>Output Fields</b>	<a href="#">Table 18 on page 684</a> lists the output fields for the <b>show chassis led satellite</b> command. Output fields are listed in the approximate order in which they appear.

Table 18: show chassis led Output Fields

Field Name	Field Description
<b>Beacon LED</b>	<p>(Applies when QFX5100, QFX5110, and QFX5200 switches are in an satellite device role only) Indicates if the beacon feature is on or off. The beacon feature is always off in a Junos Fusion.</p> <p>The <b>Beacon LED</b> output maps to the <b>ID—Identification</b> LED state.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Chassis Status LEDs on a QFX5100 Device</i></li> <li>• <i>QFX5110 Chassis Status LEDs</i></li> <li>• <i>QFX5200 Chassis Status LEDs</i></li> </ul>
<b>System LED</b>	<p>Indicates the state of the System (<b>SYS</b>) LED on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Chassis Status LEDs on EX4300 Switches</i></li> <li>• <i>Chassis Status LEDs on a QFX5100 Device</i></li> <li>• <i>QFX5110 Chassis Status LEDs</i></li> <li>• <i>QFX5200 Chassis Status LEDs</i></li> </ul>
<b>Master LED</b>	<p>Indicates the state of the Master (<b>MST</b>) LED on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Chassis Status LEDs on EX4300 Switches</i></li> <li>• <i>Chassis Status LEDs on a QFX5100 Device</i></li> <li>• <i>QFX5110 Chassis Status LEDs</i></li> <li>• <i>QFX5200 Chassis Status LEDs</i></li> </ul>
<b>Alarm LED</b>	<p>Indicates the state of the Alarm (<b>ALM</b>) LED on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Chassis Status LEDs on EX4300 Switches</i></li> <li>• <i>Chassis Status LEDs on a QFX5100 Device</i></li> <li>• <i>QFX5110 Chassis Status LEDs</i></li> <li>• <i>QFX5200 Chassis Status LEDs</i></li> </ul>
<b>Mgmt Port0 LED</b>	<p>(Applies when QFX5100, QFX5110, and QFX5200 switches are in an satellite device role only) Indicates the state of the management port 0 (<b>em0</b>) LED status on the satellite device.</p> <p>This port is always off in a Junos Fusion.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Management Port LEDs on a QFX5100 Device</i></li> <li>• <i>QFX5110 Management Port LEDs</i></li> <li>• <i>QFX5200 Management Port LEDs</i></li> </ul>

Table 18: show chassis led Output Fields (continued)

Field Name	Field Description
Mgmt Port1 LED	<p>(Applies when QFX5100, QFX5110, and QFX5200 switches are in an satellite device role only) Indicates the state of the management port 1(<b>em0</b>) LED status on the satellite device.</p> <p>This port is always off in a Junos Fusion.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Management Port LEDs on a QFX5100 Device</i></li> <li>• <i>QFX5110 Management Port LEDs</i></li> <li>• <i>QFX5200 Management Port LEDs</i></li> </ul>
Interface	<p>The interface name on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Management Port LEDs on a QFX5100 Device</i></li> <li>• <i>QFX5110 Management Port LEDs</i></li> <li>• <i>QFX5200 Management Port LEDs</i></li> </ul>
Status LED	<p>The state of the Status LED for the particular interface on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Network Port, Built-In QSFP+ Port, Uplink Port, and Uplink Module Port LEDs on EX4300 Switches</i></li> <li>• <i>Access Port and Uplink Port LEDs on a QFX5100 Device</i></li> <li>• <i>QFX5110 Network Port LEDs</i></li> <li>• <i>QFX5200 Access Port and Uplink Port LEDs</i></li> </ul>
Link/Activity LED	<p>The state of the Link/Activity LED for the particular interface on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Network Port, Built-In QSFP+ Port, Uplink Port, and Uplink Module Port LEDs on EX4300 Switches</i></li> <li>• <i>Access Port and Uplink Port LEDs on a QFX5100 Device</i></li> <li>• <i>QFX5110 Network Port LEDs</i></li> <li>• <i>QFX5200 Access Port and Uplink Port LEDs</i></li> </ul>

## Sample Output

### show chassis led satellite

```
user@aggregation-device> show chassis led satellite
```

```

LED status for: FPC 101
-----
LEDs status:
  Beacon LED: OFF
  System LED: GREEN
```

```
Master LED: OFF
Alarm LED : YELLOW
Mgmt Port0 LED: OFF
Mgmt Port1 LED: OFF
```

Interface	STATUS LED	LINK/ACTIVITY LED
xe-101/0/0	green	
xe-101/0/1	green	
xe-101/0/10	off	
xe-101/0/48:0	green	
xe-101/0/48:1	green	
xe-101/0/48:2	green	
xe-101/0/48:3	green	

LED status for: FPC 102

LEDs status:

```
Beacon LED: OFF
System LED: GREEN
Master LED: OFF
Alarm LED : YELLOW
Mgmt Port0 LED: OFF
Mgmt Port1 LED: OFF
```

Interface	STATUS LED	LINK/ACTIVITY LED
xe-102/0/0	green	
xe-102/0/1	green	
xe-102/0/10	off	
xe-102/0/48:0	green	
xe-102/0/48:1	green	
xe-102/0/48:2	green	
xe-102/0/48:3	green	

## show chassis routing-engine

- List of Syntax**
- Syntax on page 687
  - Syntax (ACX Series Universal Metro Routers) on page 687
  - Syntax (EX Series Switches) on page 687
  - Syntax (QFX Series) on page 687
  - Syntax (MX Series Routers) on page 687
  - Syntax (MX2010 Universal Routing Platforms) on page 687
  - Syntax (MX2020 Universal Routing Platforms) on page 688
  - Syntax (MX104 Universal Routing Platforms) on page 688
  - Syntax (MX204 and MX10003 Universal Routing Platforms) on page 688
  - Syntax (PTX Series Packet Transport Routers) on page 688
  - Syntax (T Series Routers) on page 688
  - Syntax (TX Matrix Routers) on page 688
  - Syntax (TX Matrix Plus Routers) on page 688

**Syntax** show chassis routing-engine  
<bios | *slot*>

**Syntax (ACX Series Universal Metro Routers)** show chassis routing-engine

**Syntax (EX Series Switches)** show chassis routing-engine  
<*slot*>  
<satellite [*slot-id slot-id* | device-alias *alias-name*]>

**Syntax (QFX Series)** show chassis routing-engine  
<interconnect-device *name*>  
<node-device *name*>  
<*slot*>  
<*bios*>  
<*errors*>

**Syntax (MX Series Routers)** show chassis routing-engine  
<all-members>  
<bios | *slot*>  
<local>  
<member *member-id*>  
<satellite [*slot-id slot-id* | device-alias *alias-name*]>

**Syntax (MX2010 Universal Routing Platforms)** show chassis routing-engine  
<bios | *slot*>

Syntax (MX2020 Universal Routing Platforms)	show chassis routing-engine <bios   <i>slot</i> >
Syntax (MX104 Universal Routing Platforms)	show chassis routing-engine
Syntax (MX204 and MX10003 Universal Routing Platforms)	show chassis routing-engine < <i>slot</i> > <bios> <errors>
Syntax (PTX Series Packet Transport Routers)	show chassis routing-engine
Syntax (T Series Routers)	show chassis routing-engine <bios   <i>slot</i> >
Syntax (TX Matrix Routers)	show chassis routing-engine <bios   <i>slot</i> > <lcc <i>number</i>   scc>
Syntax (TX Matrix Plus Routers)	show chassis routing-engine <bios   <i>slot</i> > <lcc <i>number</i>   sfc <i>number</i> >
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced in Junos OS Release in 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p><b>5 sec CPU Utilization, 1 min CPU Utilization, 5 min CPU Utilization, and 15 min CPU Utilization</b> output fields introduced in Junos OS Release 11.3R1.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 switches.</p>

**Description** Display the status of the Routing Engine.

**Options** **none**—Display information about one or more Routing Engines. On a TX Matrix router, display information about all Routing Engines on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display information about all Routing Engines on the TX Matrix Plus router and its attached routers.

**all-members**—(MX Series routers only) (Optional) Display Routing Engine information for all members of the Virtual Chassis configuration.

**bios**—(Optional) Display the (BIOS) firmware version.

**errors**—(Optional) Display routing engine errors.

**interconnect-device *number***—(QFabric systems only) (Optional) Display Routing Engine information for a specified Interconnect device.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display Routing Engine information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display Routing Engine information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display Routing Engine information for the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display Routing Engine information for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**node-device *number***—(QFabric systems only) (Optional) Display Routing Engine information for a specified Node device.

**satellite [*slot-id slot-id* [*device-alias alias-name*]]**—(Junos Fusion only) (Optional) Display Routing Engine information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display Routing Engine information for the TX Matrix router (switch-card chassis).

**sfc number**—(TX Matrix Plus routers only) (Optional) Display Routing Engine information for the TX Matrix Plus router (or switch-fabric chassis). Replace **number** with 0.

**slot**—(Systems with multiple Routing Engines) (Optional) Display information for an individual Routing Engine. Replace **slot** with 0 or 1. For QFX3500 switches, there is only one Routing Engine, so you do not need to specify the slot number.

**Required Privilege Level**

view

**Related Documentation**

- [request chassis routing-engine master](#)
- [Configuring Routing Engine Redundancy](#)
- [Switching the Global Master and Backup Roles in a Virtual Chassis Configuration](#)

**List of Sample Output**

[show chassis routing-engine \(M5 Router\) on page 693](#)  
[show chassis routing-engine \(M10 Router\) on page 694](#)  
[show chassis routing-engine \(M20 Router\) on page 694](#)  
[show chassis routing-engine \(M40 Router\) on page 695](#)  
[show chassis routing-engine \(M120 Router\) on page 695](#)  
[show chassis routing-engine \(M160 Router\) on page 696](#)  
[show chassis routing-engine \(MX104 Router\) on page 697](#)  
[show chassis routing-engine \(MX240 Router\) on page 698](#)  
[show chassis routing-engine \(MX480 Router\) on page 698](#)  
[show chassis routing-engine \(MX960 Router\) on page 700](#)  
[show chassis routing-engine \(MX2010 Router\) on page 701](#)  
[show chassis routing-engine \(MX2020 Router\) on page 702](#)  
[show chassis routing-engine \(MX10003 Router\) on page 703](#)  
[show chassis routing-engine \(MX204 Router\) on page 704](#)  
[show chassis routing-engine \(T320 Router\) on page 704](#)  
[show chassis routing-engine \(T640 Router\) on page 705](#)  
[show chassis routing-engine \(T1600 Router\) on page 706](#)  
[show chassis routing-engine \(T4000 Router\) on page 707](#)  
[show chassis routing-engine \(TX Matrix Router\) on page 707](#)  
[show chassis routing-engine lcc \(TX Matrix Router\) on page 709](#)  
[show chassis routing-engine bios \(TX Matrix Router\) on page 709](#)  
[show chassis routing-engine \(TX Matrix Plus Router\) on page 709](#)  
[show chassis routing-engine lcc \(TX Matrix Plus Router\) on page 711](#)  
[show chassis routing-engine bios \(TX Matrix Plus Router\) on page 712](#)  
[show chassis routing-engine \(QFX Series\) on page 712](#)  
[show chassis routing-engine \(OCX Series\) on page 712](#)  
[show chassis routing-engine interconnect-device \(QFabric Systems\) on page 713](#)  
[show chassis routing-engine \(PTX Series Packet Transport Router\) on page 713](#)  
[show chassis routing-engine \(EX9200 Switch\) on page 714](#)  
[show chassis routing-engine \(EX9251 Switch\) on page 715](#)  
[show chassis routing-engine \(ACX2000 Universal Metro Router\) on page 715](#)  
[show chassis routing-engine \(ACX1000 Universal Metro Router\) on page 716](#)



[show chassis routing-engine](#) (Displaying the guest reboot reason on PTX5000, MX240, MX480, MX960 < MX2010, and MX2020) on page 716

**Output Fields** [Table 19 on page 691](#) lists the output fields for the **show chassis routing-engine** command. Output fields are listed in the approximate order in which they appear.

*Table 19: show chassis routing-engine Output Fields*

Field Name	Field Description
Slot	(Systems with single and multiple Routing Engines) Slot number.
Current state	(Systems with multiple Routing Engines) Current state of the Routing Engine: <b>Master</b> , <b>Backup</b> , or <b>Disabled</b> .
Election priority	(Systems with multiple Routing Engines) Election priority for the Routing Engine: <b>Master</b> or <b>Backup</b> .
Temperature	Temperature of the air flowing past the Routing Engine.
CPU Temperature	Temperature of the CPU.
DRAM	Total DRAM available to the Routing Engine's processor.  Starting with Junos OS Release 12.3R1, the DRAM field displays both available memory and installed memory.
Memory utilization	Percentage of Routing Engine memory being used.  <b>NOTE:</b> For platforms running Junos OS with upgraded FreeBSD, the way memory utilization is calculated has changed. Starting in Junos OS Release 15.1R1, inactive memory is no longer included in the calculation for memory utilization. Inactive memory is now considered as free. That is, the value for used memory decreases and results in more memory to be available for other processes. For platforms that run Junos OS with upgraded FreeBSD, see <i>Release Information for Junos OS with Upgraded FreeBSD</i> .
CPU utilization	Information about the Routing Engine's CPU utilization: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>
5 sec CPU Utilization	Information about the Routing Engine's CPU utilization in the past 5 seconds: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>

Table 19: show chassis routing-engine Output Fields (continued)

Field Name	Field Description
<b>1 min CPU Utilization</b>	Information about the Routing Engine's CPU utilization in the past 1 minute: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>
<b>5 min CPU Utilization</b>	Information about the Routing Engine's CPU utilization in the past 5 minutes: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>
<b>15 min CPU Utilization</b>	Information about the Routing Engine's CPU utilization in the past 15 minutes: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>
<b>Model</b>	Routing Engine model number.
<b>Serial ID</b>	(Systems with multiple Routing Engines) Identification number of the Routing Engine in this slot.
<b>Start time</b>	Time at which the Routing Engine started running.
<b>Uptime</b>	How long the Routing Engine has been running.
Routing Engine BIOS Version	BIOS version being run by the Routing Engine.

Table 19: show chassis routing-engine Output Fields (continued)

Field Name	Field Description
Last reboot reason	<p>Reason for last reboot, including:</p> <ul style="list-style-type: none"> <li><b>power cycle/failure</b>—Halt of the Routing Engine using the <b>halt</b> command, powering down using the power button on the chassis or any other method (such as removal of the control board or Routing Engine), and then powering back the Routing Engine. A halt of the operating system also occurs if you enter the <b>request system halt</b> command. You can enter this command to halt the system operations on the chassis or specific Routing Engines. To restart the software, press any key on the keyboard.</li> <li><b>watchdog</b>—Reboot due to a hardware watchdog. A watchdog is a hardware monitoring process that examines the health and performance of the router to enable the device to recover from failures. A watchdog checks for problems at certain intervals, and reboots the routing engine if a problem is encountered.</li> <li><b>reset-button reset</b>—(Not available on the EX Series switch) Reboot due to pressing of the reset button on the Routing Engine.</li> <li><b>power-button hard power off</b>—Reboot due to pressing of the power button on the chassis. A powering down of the software also occurs if you enter the <b>request system power-off</b> command. You can enter this command to power down the chassis or specific Routing Engines; you can then restart the software.</li> <li><b>misc hardware reason</b>—Reboot due to miscellaneous hardware reasons.</li> <li><b>thermal shutdown</b>—Reboot due to the router or switch reaching a critical temperature at which point it is unsafe to continue operations.</li> <li><b>hard disk failure</b>—Reboot due to a hard disk or solid-state drive (SSD) failure.</li> <li><b>reset from debugger</b>—Reboot due to reset from the debugger.</li> <li><b>chassis control reset</b>—Restart the chassis process that manages PICs, FPCs, and other hardware components. The chassis control module that runs the Routing Engine performs management and monitoring functions, and it provides a single access point for operational and maintenance functions. A reset of the chassis management process occurs when you enter the <b>restart chassis-control</b> command.</li> <li><b>bios auto recovery reset</b>—Reboot due to a BIOS auto-recovery reset.</li> <li><b>could not be determined</b>—Reboot due to an undetermined reason.</li> <li><b>Router rebooted after a normal shutdown</b>—Reboot due to a normal shutdown. This reason is displayed if the Routing Engine is powered down by pushing and holding the online/offline button on the Routing Engine faceplate for 30 seconds, and then powered back. A reboot of the software also occurs if you enter the <b>request system reboot</b> command. You can enter this command to reboot the chassis or specific Routing Engines.</li> <li><b>Hypervisor reboot</b>—When both Linux host and Junos OS is rebooted using the <b>request vmhost reboot</b> command.</li> <li><b>VJUNOS Reboot</b>—When Junos OS is rebooted using the <b>request system reboot</b> command.</li> </ul>
Load averages	Routing Engine load averages for the last 1, 5, and 15 minutes.

## Sample Output

### show chassis routing-engine (M5 Router)

```

user@host> show chassis routing-engine

Routing Engine status:
  Temperature           25 degrees C / 77 degrees F
  DRAM                   768 MB
  Memory utilization     21 percent

```

```

CPU utilization:
  User          0 percent
  Background    0 percent
  Kernel        0 percent
  Interrupt     0 percent
  Idle          100 percent
Model          RE-2.0
Serial ID      31000007349bf701
Start time     2003-12-04 09:42:17 PST
Uptime         26 days, 1 hour, 12 minutes, 27 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute  5 minute 15 minute
                  0.00    0.01    0.00

```

### show chassis routing-engine (M10 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Temperature      25 degrees C / 77 degrees F
  DRAM             768 MB
  Memory utilization 21 percent
  CPU utilization:
    User          0 percent
    Background    0 percent
    Kernel        0 percent
    Interrupt     0 percent
    Idle          100 percent
  Model           RE-2.0
  Serial ID      31000007349bf701
  Start time     2003-12-04 09:42:17 PST
  Uptime         26 days, 1 hour, 12 minutes, 27 seconds
  Last reboot reason Router rebooted after a normal shutdown
  Load averages: 1 minute  5 minute 15 minute
                    0.00    0.01    0.00

```

### show chassis routing-engine (M20 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Slot 0:
    Current state      Master
    Election priority  Master (default)
    Temperature        29 degrees C / 84 degrees F
    DRAM               768 MB
    Memory utilization  20 percent
    CPU utilization:
      User             1 percent
      Background       0 percent
      Kernel           2 percent
      Interrupt        0 percent
      Idle             97 percent
    Model             RE-2.0
    Serial ID         58000007348d9a01
    Start time        2003-12-30 07:05:47 PST
    Uptime            3 hours, 41 minutes, 14 seconds
    Last reboot reason Router rebooted after a normal shutdown
    Load averages:   1 minute  5 minute 15 minute

```

```

                                0.00      0.02      0.00
Routing Engine status:
  Slot 1:
    Current state                Backup
    Election priority            Backup (default)
    Temperature                  29 degrees C / 84 degrees F
    DRAM                        768 MB
    Memory utilization           0 percent
    CPU utilization:
      User                       0 percent
      Background                 0 percent
      Kernel                     1 percent
      Interrupt                   0 percent
      Idle                       99 percent
    Model                       RE-2.0
    Serial ID                    d800000734745701
    Start time                   2003-06-17 16:37:33 PDT
    Uptime                       195 days, 18 hours, 47 minutes, 9 seconds
    Last reboot reason           Router rebooted after a normal shutdown

```

### show chassis routing-engine (M40 Router)

```

user@host> show chassis routing-engine

Routing Engine status:
  Temperature                  25 degrees C / 77 degrees F
  DRAM                        768 MB
  Memory utilization           21 percent
  CPU utilization:
    User                       0 percent
    Background                 0 percent
    Kernel                     0 percent
    Interrupt                   0 percent
    Idle                       100 percent
  Model                       RE-2.0
  Serial ID                    31000007349bf701
  Start time                   2003-12-04 09:42:17 PST
  Uptime                       26 days, 1 hour, 12 minutes, 27 seconds
  Last reboot reason           Router rebooted after a normal shutdown
  Load averages:              1 minute   5 minute   15 minute
                                0.00      0.01      0.00

```

### show chassis routing-engine (M120 Router)

```

user@host> show chassis routing-engine

Routing Engine status:
  Slot 0:
    Current state                Master
    Election priority            Master (default)
    Temperature                  46 degrees C / 114 degrees F
    CPU temperature              44 degrees C / 111 degrees F
    DRAM                        2048 MB
    Memory utilization           18 percent
    CPU utilization:
      User                       0 percent
      Background                 0 percent
      Kernel                     5 percent
      Interrupt                   0 percent

```

```

Idle 95 percent
Model RE-A-1000
Serial ID 1000621154
Start time 2006-10-31 17:10:05 PST
Uptime 14 minutes, 31 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute 5 minute 15 minute
                0.02      0.07      0.07

Routing Engine status:
Slot 1:
Current state Backup
Election priority Backup (default)
Temperature 45 degrees C / 113 degrees F
CPU temperature 42 degrees C / 107 degrees F
DRAM 2048 MB
Memory utilization 15 percent
CPU utilization:
  User 0 percent
  Background 0 percent
  Kernel 0 percent
  Interrupt 0 percent
  Idle 100 percent
Model RE-A-1000
Serial ID 1000621151
Start time 2006-10-31 17:10:04 PST
Uptime 14 minutes, 30 seconds
Last reboot reason Router rebooted after a normal shutdown

```

### show chassis routing-engine (M160 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
Current state Master
Election priority Master (default)
Temperature 43 degrees C / 109 degrees F
DRAM 2048 MB
Memory utilization 11 percent
CPU utilization:
  User 1 percent
  Background 0 percent
  Kernel 2 percent
  Interrupt 0 percent
  Idle 97 percent
Model RE-3.0
Serial ID 210865700403
Start time 2003-12-23 12:25:55 PST
Uptime 6 days, 22 hours, 33 minutes, 24 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute 5 minute 15 minute
                0.24      0.13      0.04

Routing Engine status:
Slot 1:
Current state Backup
Election priority Backup (default)
Temperature 40 degrees C / 104 degrees F
DRAM 2048 MB
Memory utilization 9 percent
CPU utilization:

```

```

User          0 percent
Background    0 percent
Kernel        0 percent
Interrupt     0 percent
Idle          100 percent
Model         RE-3.0
Serial ID     210865700332
Start time    2003-12-23 12:25:55 PST
Uptime        6 days, 22 hours, 33 minutes, 21 seconds
Last reboot reason Router rebooted after a normal shutdown

```

### show chassis routing-engine (MX104 Router)

```
user@host> show chassis routing-engine
```

#### Routing Engine status:

##### Slot 0:

```

Current state      Master
Election priority  Master (default)
Temperature        32 degrees C / 89 degrees F
CPU temperature    42 degrees C / 107 degrees F
DRAM              3840 MB (3840 MB installed)
Memory utilization 18 percent
CPU utilization:
  User            0 percent
  Background      0 percent
  Kernel          3 percent
  Interrupt       2 percent
  Idle            94 percent
Model             RE-MX-104
Serial ID         CAAR5925
Start time        2013-06-05 13:17:08 IST
Uptime            1 hour, 15 minutes, 8 seconds
Last reboot reason 0x200:normal shutdown
Load averages:    1 minute  5 minute 15 minute
                  0.87      0.90     0.41

```

#### Routing Engine status:

##### Slot 1:

```

Current state      Backup
Election priority  Backup (default)
Temperature        32 degrees C / 89 degrees F
CPU temperature    38 degrees C / 100 degrees F
DRAM              3840 MB (3840 MB installed)
Memory utilization 13 percent
CPU utilization:
  User            0 percent
  Background      0 percent
  Kernel          1 percent
  Interrupt       2 percent
  Idle            97 percent
Model             RE-MX-104
Serial ID         CAAM6369
Start time        2013-06-05 13:07:37 IST
Uptime            1 hour, 24 minutes, 34 seconds
Last reboot reason 0x200:normal shutdown
Load averages:    1 minute  5 minute 15 minute
                  0.19      0.15     0.06

```

**show chassis routing-engine (MX240 Router)**

```
user@host> show chassis routing-engine
```

**Routing Engine status:****Slot 0:**

Current state	Master
Election priority	Master (default)
Temperature	36 degrees C / 96 degrees F
CPU temperature	35 degrees C / 95 degrees F
DRAM	3314 MB (8192 MB installed)
Memory utilization	37 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
1 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
5 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
15 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
Model	RE-S-1800x4
Serial ID	9009074155
Start time	2014-10-13 00:35:41 PDT
Uptime	98 days, 2 hours, 6 minutes, 35 seconds
Last reboot reason	Router rebooted after a normal shutdown.
Load averages:	1 minute    5 minute    15 minute
	0.12            0.12            0.13

**Routing Engine status:****Slot 1:**

Current state	Present
---------------	---------

**show chassis routing-engine (MX480 Router)**

```
user@host> show chassis routing-engine
```

**Routing Engine status:****Slot 0:**

Current state	Backup
Election priority	Master (default)
Temperature	30 degrees C / 86 degrees F
CPU temperature	32 degrees C / 89 degrees F
DRAM	3314 MB (8192 MB installed)
Memory utilization	51 percent
5 sec CPU utilization:	



```

User                0 percent
Background          0 percent
Kernel              0 percent
Interrupt            0 percent
Idle                100 percent
1 min CPU utilization:
User                0 percent
Background          0 percent
Kernel              0 percent
Interrupt            0 percent
Idle                0 percent
5 min CPU utilization:
User                0 percent
Background          0 percent
Kernel              0 percent
Interrupt            0 percent
Idle                0 percent
15 min CPU utilization:
User                0 percent
Background          0 percent
Kernel              0 percent
Interrupt            0 percent
Idle                0 percent
Model               RE-S-1800x4
Serial ID            9009079817
Start time           2015-01-19 01:45:58 PST
Uptime               7 minutes, 23 seconds
Last reboot reason    Router rebooted after a normal shutdown.
Load averages:        1 minute   5 minute   15 minute
                       0.16       0.16       0.09

Routing Engine status:
Slot 1:
  Current state       Master
  Election priority    Backup (default)
  Temperature          31 degrees C / 87 degrees F
  CPU temperature       32 degrees C / 89 degrees F
  DRAM                 8144 MB (8192 MB installed)
  Memory utilization    23 percent
  5 sec CPU utilization:
    User               0 percent
    Background          0 percent
    Kernel              1 percent
    Interrupt            0 percent
    Idle                99 percent
  1 min CPU utilization:
    User               0 percent
    Background          0 percent
    Kernel              1 percent
    Interrupt            0 percent
    Idle                98 percent
  5 min CPU utilization:
    User               0 percent
    Background          0 percent
    Kernel              1 percent
    Interrupt            0 percent
    Idle                98 percent
  15 min CPU utilization:
    User               0 percent
    Background          0 percent
    Kernel              1 percent

```

Interrupt	0 percent
Idle	98 percent
Model	RE-S-1800x4
Serial ID	9009079838
Start time	2015-01-09 10:52:20 PST
Uptime	9 days, 15 hours, 1 minute, 4 seconds
Last reboot reason	Router rebooted after a normal shutdown.
Load averages:	1 minute    5 minute    15 minute
	0.10            0.16            0.16

### show chassis routing-engine (MX960 Router)

```
user@host> show chassis routing-engine
```

#### Routing Engine status:

##### Slot 0:

Current state	Master
Election priority	Master (default)
Temperature	37 degrees C / 98 degrees F
CPU temperature	34 degrees C / 93 degrees F
DRAM	3313 MB (16384 MB installed)
Memory utilization	31 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	3 percent
Interrupt	1 percent
Idle	96 percent
1 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	4 percent
Interrupt	1 percent
Idle	96 percent
5 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	4 percent
Interrupt	1 percent
Idle	95 percent
15 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	4 percent
Interrupt	1 percent
Idle	95 percent
Model	RE-S-1800x4
Serial ID	9013043785
Start time	2015-01-12 23:37:53 PST
Uptime	6 days, 2 hours, 17 minutes, 3 seconds
Last reboot reason	Router rebooted after a normal shutdown.
Load averages:	1 minute    5 minute    15 minute
	0.00            0.02            0.00

#### Routing Engine status:

##### Slot 1:

Current state	Backup
Election priority	Backup (default)
Temperature	37 degrees C / 98 degrees F
CPU temperature	34 degrees C / 93 degrees F
DRAM	3313 MB (16384 MB installed)

```

Memory utilization          26 percent
5 sec CPU utilization:
  User                      0 percent
  Background                0 percent
  Kernel                    0 percent
  Interrupt                  0 percent
  Idle                      99 percent
1 min CPU utilization:
  User                      0 percent
  Background                0 percent
  Kernel                    0 percent
  Interrupt                  0 percent
  Idle                      0 percent
5 min CPU utilization:
  User                      0 percent
  Background                0 percent
  Kernel                    0 percent
  Interrupt                  0 percent
  Idle                      0 percent
15 min CPU utilization:
  User                      0 percent
  Background                0 percent
  Kernel                    0 percent
  Interrupt                  0 percent
  Idle                      0 percent
Model                      RE-S-1800x4
Serial ID                   9013037303
Start time                  2015-01-12 23:25:29 PST
Uptime                      6 days, 2 hours, 29 minutes, 21 seconds
Last reboot reason          Router rebooted after a normal shutdown.
Load averages:              1 minute   5 minute   15 minute
                             0.00       0.00       0.00

```

### show chassis routing-engine (MX2010 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state              Master
  Election priority          Master (default)
  Temperature                41 degrees C / 105 degrees F
  CPU temperature            38 degrees C / 100 degrees F
  DRAM                       3313 MB (16384 MB installed)
  Memory utilization         37 percent
  5 sec CPU utilization:
    User                     0 percent
    Background               0 percent
    Kernel                   2 percent
    Interrupt                 2 percent
    Idle                     96 percent
  1 min CPU utilization:
    User                     0 percent
    Background               0 percent
    Kernel                   2 percent
    Interrupt                 2 percent
    Idle                     97 percent
  5 min CPU utilization:
    User                     0 percent
    Background               0 percent

```

```

Kernel                2 percent
Interrupt             2 percent
Idle                 97 percent
15 min CPU utilization:
User                  0 percent
Background            0 percent
Kernel                2 percent
Interrupt             2 percent
Idle                 97 percent
Model                 RE-S-1800x4
Serial ID              9009146890
Start time             2015-01-18 21:35:12 PST
Uptime                4 hours, 21 minutes, 34 seconds
Last reboot reason     Router rebooted after a normal shutdown.
Load averages:         1 minute  5 minute 15 minute
                       0.11      0.14    0.14

```

### show chassis routing-engine (MX2020 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             2 degrees C / 35 degrees F
  CPU temperature         32 degrees C / 89 degrees F
  DRAM                    32735 MB (32768 MB installed)
  Memory utilization      10 percent
  5 sec CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                1 percent
    Interrupt             1 percent
    Idle                 98 percent
  1 min CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                1 percent
    Interrupt             1 percent
    Idle                 99 percent
  5 min CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                1 percent
    Interrupt             1 percent
    Idle                 99 percent
  15 min CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                1 percent
    Interrupt             1 percent
    Idle                 99 percent
  Model                  RE-S-2X00x8
  Serial ID               CADN0309
  Start time              2015-01-08 16:31:15 PST
  Uptime                  4 days, 22 hours, 59 minutes, 3 seconds
  Last reboot reason      Router rebooted after a normal shutdown.
  Load averages:         1 minute  5 minute 15 minute
                       0.39      0.41    0.34

```

## show chassis routing-engine (MX10003 Router)

```
user@host> show chassis routing-engine
```

## Routing Engine status:

## Slot 0:

Current state	Master
Election priority	Master (default)
Temperature	43 degrees C / 109 degrees F
CPU temperature	40 degrees C / 104 degrees F
DRAM	49112 MB (49152 MB installed)
Memory utilization	4 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	2 percent
Interrupt	0 percent
Idle	98 percent
1 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	98 percent
5 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	98 percent
15 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	96 percent
Model	RE-S-2X00x6
Start time	2017-08-08 23:13:16 PDT
Uptime	53 minutes, 38 seconds
Last reboot reason	0x1:power cycle/failure
Load averages:	1 minute    5 minute    15 minute
	0.23        0.28        0.25

## Routing Engine status:

## Slot 1:

Current state	Backup
Election priority	Backup (default)
Temperature	38 degrees C / 100 degrees F
CPU temperature	39 degrees C / 102 degrees F
DRAM	49112 MB (49152 MB installed)
Memory utilization	4 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
Model	RE-S-2X00x6
Start time	2017-08-08 23:13:18 PDT
Uptime	53 minutes, 25 seconds

Last reboot reason	0x1:power cycle/failure		
Load averages:	1 minute	5 minute	15 minute
	0.21	0.19	0.17

### show chassis routing-engine (MX204 Router)

```
user@host> show chassis routing-engine
```

```
Routing Engine status:
  Temperature          52 degrees C / 125 degrees F
  CPU temperature      52 degrees C / 125 degrees F
  DRAM                 16341 MB (16384 MB installed)
  Memory utilization   11 percent
  5 sec CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  1 min CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  5 min CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  15 min CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  Model                RE-S-2X00x6
  Start time           2017-11-04 00:30:31 PDT
  Uptime                4 days, 7 hours, 17 minutes, 3 seconds
  Last reboot reason   0x1:power cycle/failure
  Load averages:      1 minute   5 minute   15 minute
                      0.17       0.12       0.13
```

### show chassis routing-engine (T320 Router)

```
user@host> show chassis routing-engine
```

```
Slot 0:
  Current state        Master
  Election priority     Master (default)
  Temperature          51 degrees C / 123 degrees F
  CPU temperature      55 degrees C / 131 degrees F
  DRAM                 3584 MB
  Memory utilization   11 percent
  CPU utilization:
    User               0 percent
    Background         0 percent
```

```

    Kernel                2 percent
    Interrupt             0 percent
    Idle                  97 percent
    Model                 RE-A-2000
    Serial ID              9009010618
    Start time             2012-10-10 01:24:05 PDT
    Uptime                 5 days, 10 hours, 49 minutes, 23 seconds
    Last reboot reason      0x1:power cycle/failure
    Load averages:        1 minute   5 minute   15 minute
                           0.00        0.05        0.04

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature              45 degrees C / 113 degrees F
  CPU temperature          48 degrees C / 118 degrees F
  DRAM                     3584 MB
  Memory utilization       9 percent
  CPU utilization:
    User                   0 percent
    Background             0 percent
    Kernel                 0 percent
    Interrupt              0 percent
    Idle                   100 percent
  Model                   RE-A-2000
  Serial ID                9009003642
  Start time               2012-10-10 01:24:04 PDT
  Uptime                   5 days, 10 hours, 49 minutes, 28 seconds
  Last reboot reason        0x1:power cycle/failure

```

### show chassis routing-engine (T640 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature              50 degrees C / 122 degrees F
  CPU temperature          58 degrees C / 136 degrees F
  DRAM                     3584 MB
  Memory utilization       14 percent
  CPU utilization:
    User                   1 percent
    Background             0 percent
    Kernel                 4 percent
    Interrupt              1 percent
    Idle                   95 percent
  Model                   RE-A-2000
  Serial ID                1000686556
  Start time               2012-10-10 01:24:02 PDT
  Uptime                   5 days, 10 hours, 50 minutes, 27 seconds
  Last reboot reason        0x1:power cycle/failure
  Load averages:          1 minute   5 minute   15 minute
                           1.24        0.33        0.12

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature              44 degrees C / 111 degrees F

```

```

CPU temperature      49 degrees C / 120 degrees F
DRAM                3584 MB
Memory utilization   12 percent
CPU utilization:
  User               0 percent
  Background         0 percent
  Kernel             0 percent
  Interrupt          1 percent
  Idle              99 percent
Model               RE-A-2000
Serial ID           1000702739
Start time          2012-10-10 01:24:02 PDT
Uptime              5 days, 10 hours, 50 minutes, 26 seconds
Last reboot reason   0x1:power cycle/failure

```

### show chassis routing-engine (TI600 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state      Master
  Election priority   Master (default)
  Temperature        48 degrees C / 118 degrees F
  CPU temperature     58 degrees C / 136 degrees F
  DRAM               3584 MB
  Memory utilization  13 percent
  CPU utilization:
    User             0 percent
    Background       0 percent
    Kernel           3 percent
    Interrupt        1 percent
    Idle            96 percent
  Model              RE-A-2000
  Serial ID          1000704521
  Start time         2012-10-10 01:23:41 PDT
  Uptime             5 days, 10 hours, 46 minutes, 56 seconds
  Last reboot reason 0x1:power cycle/failure
  Load averages:     1 minute   5 minute   15 minute
                     0.05       0.03       0.01

Routing Engine status:
Slot 1:
  Current state      Backup
  Election priority   Backup (default)
  Temperature        44 degrees C / 111 degrees F
  CPU temperature     48 degrees C / 118 degrees F
  DRAM               3584 MB
  Memory utilization  12 percent
  CPU utilization:
    User             0 percent
    Background       0 percent
    Kernel           0 percent
    Interrupt        0 percent
    Idle            100 percent
  Model              RE-A-2000
  Serial ID          9009006579
  Start time         2012-10-10 01:23:42 PDT
  Uptime             5 days, 10 hours, 46 minutes, 54 seconds
  Last reboot reason 0x1:power cycle/failure

```



**show chassis routing-engine (T4000 Router)**

```
user@host> show chassis routing-engine
```

```
Routing Engine status:
```

```
Slot 0:
```

```

Current state           Master
Election priority       Master (default)
Temperature             33 degrees C / 91 degrees F
CPU temperature         50 degrees C / 122 degrees F
DRAM                   8960 MB
Memory utilization      18 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                4 percent
  Interrupt             1 percent
  Idle                  95 percent
Model                  RE-DUO-1800
Serial ID              P737F-002248
Start time             2012-02-09 22:49:53 PST
Uptime                 2 hours, 21 minutes, 35 seconds
Last reboot reason     Router rebooted after a normal shutdown.
Load averages:         1 minute   5 minute  15 minute
                       0.00       0.04    0.00

```

```
Routing Engine status:
```

```
Slot 1:
```

```

Current state           Backup
Election priority       Backup (default)
Temperature             32 degrees C / 89 degrees F
CPU temperature         46 degrees C / 114 degrees F
DRAM                   8960 MB
Memory utilization      24 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                0 percent
  Interrupt             0 percent
  Idle                  99 percent
Model                  RE-DUO-1800
Serial ID              P737F-002653
Start time             2012-02-08 20:12:51 PST
Uptime                 1 day, 4 hours, 58 minutes, 28 seconds
Last reboot reason     Router rebooted after a normal shutdown.

```

**show chassis routing-engine (TX Matrix Router)**

```
user@host> show chassis routing-engine
```

```
scc-re0:
```

```
-----
Routing Engine status:
```

```
Slot 0:
```

```

Current state           Master
Election priority       Master (default)
Temperature             34 degrees C / 93 degrees F
CPU temperature         33 degrees C / 91 degrees F
DRAM                   2048 MB
Memory utilization      12 percent
CPU utilization:

```

```

User          0 percent
Background    0 percent
Kernel        2 percent
Interrupt     0 percent
Idle          98 percent
Model         RE-4.0
Serial ID     P11123900153
Start time    2004-08-05 18:42:05 PDT
Uptime        9 days, 22 hours, 49 minutes, 50 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute   5 minute   15 minute
                  0.00      0.08      0.07

```

lcc0-re0:

-----  
Routing Engine status:

```

Slot 0:
  Current state      Master
  Election priority  Master (default)
  Temperature        33 degrees C / 91 degrees F
  CPU temperature    30 degrees C / 86 degrees F
  DRAM               2048 MB
  Memory utilization 12 percent
  CPU utilization:
    User             0 percent
    Background       0 percent
    Kernel           1 percent
    Interrupt        0 percent
    Idle             98 percent
  Model              RE-3.0
  Serial ID          210865700363
  Start time         2004-08-05 18:42:05 PDT
  Uptime             9 days, 22 hours, 48 minutes, 20 seconds
  Last reboot reason Router rebooted after a normal shutdown
  Load averages:    1 minute   5 minute   15 minute
                      0.00      0.02      0.00

```

lcc2-re0:

-----  
Routing Engine status:

```

Slot 0:
  Current state      Master
  Election priority  Master (default)
  Temperature        34 degrees C / 93 degrees F
  CPU temperature    35 degrees C / 95 degrees F
  DRAM               2048 MB
  Memory utilization 12 percent
  CPU utilization:
    User             0 percent
    Background       0 percent
    Kernel           2 percent
    Interrupt        0 percent
    Idle             98 percent
  Model              RE-4.0
  Serial ID          P11123900126
  Start time         2004-08-05 18:42:05 PDT
  Uptime             9 days, 22 hours, 49 minutes, 4 seconds
  Last reboot reason Router rebooted after a normal shutdown
  Load averages:    1 minute   5 minute   15 minute
                      0.01      0.01      0.0

```

**show chassis routing-engine lcc (TX Matrix Router)**

```

user@host> show chassis routing-engine 0 lcc 0
lcc0-re0:
-----
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             33 degrees C / 91 degrees F
  CPU temperature         30 degrees C / 86 degrees F
  DRAM                    2048 MB
  Memory utilization      12 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                1 percent
    Interrupt             0 percent
    Idle                  98 percent
  Model                   RE-3.0
  Serial ID               210865700363
  Start time              2004-08-05 18:42:05 PDT
  Uptime                  7 days, 22 hours, 49 minutes, 6 seconds
  Last reboot reason      Router rebooted after a normal shutdown
  Load averages:         1 minute  5 minute 15 minute
                        0.00      0.00   0.00

```

**show chassis routing-engine bios (TX Matrix Router)**

```

user@host> show chassis routing-engine bios
scc-re0:
-----
Routing Engine BIOS Version: V1.0.0
lcc0-re0:
-----
Routing Engine BIOS Version: V1.0.17
lcc2-re0:
-----
Routing Engine BIOS Version: V1.0.0

```

**show chassis routing-engine (TX Matrix Plus Router)**

```

user@host> show chassis routing-engine
sfc0-re0:
-----
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             27 degrees C / 80 degrees F
  CPU temperature         42 degrees C / 107 degrees F
  DRAM                    3327 MB
  Memory utilization      12 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                2 percent

```

```

        Interrupt          0 percent
        Idle               98 percent
        Model              RE-TXP-SFC
        Serial ID          737A-1024
        Start time         2009-05-11 17:39:49 PDT
        Uptime             3 hours, 45 minutes, 25 seconds
        Last reboot reason  Router rebooted after a normal shutdown.
        Load averages:     1 minute   5 minute   15 minute
                           0.00       0.00       0.00

```

## Routing Engine status:

## Slot 1:

```

        Current state      Backup
        Election priority   Backup (default)
        Temperature        29 degrees C / 84 degrees F
        CPU temperature     43 degrees C / 109 degrees F
        DRAM                3327 MB
        Memory utilization  11 percent
        CPU utilization:
            User            0 percent
            Background      0 percent
            Kernel          0 percent
            Interrupt       0 percent
            Idle            100 percent
        Model              RE-TXP-SFC
        Serial ID          737A-1024
        Start time         2009-05-11 17:08:54 PDT
        Uptime             4 hours, 16 minutes, 52 seconds
        Last reboot reason  0x1:power cycle/failure

```

## lcc0-re0:

-----  
Routing Engine status:

## Slot 0:

```

        Current state      Master
        Election priority   Master (default)
        Temperature        30 degrees C / 86 degrees F
        CPU temperature     43 degrees C / 109 degrees F
        DRAM                3327 MB
        Memory utilization  9 percent
        CPU utilization:
            User            0 percent
            Background      0 percent
            Kernel          2 percent
            Interrupt       0 percent
            Idle            98 percent
        Model              RE-TXP-LCC
        Serial ID          737F-1024
        Start time         2009-05-11 17:40:32 PDT
        Uptime             3 hours, 44 minutes, 51 seconds
        Last reboot reason  Router rebooted after a normal shutdown.
        Load averages:     1 minute   5 minute   15 minute
                           0.00       0.00       0.00

```

## Routing Engine status:

## Slot 1:

```

        Current state      Backup
        Election priority   Backup (default)
        Temperature        30 degrees C / 86 degrees F
        CPU temperature     43 degrees C / 109 degrees F
        DRAM                3327 MB
        Memory utilization  9 percent

```

```

CPU utilization:
  User          0 percent
  Background    0 percent
  Kernel        0 percent
  Interrupt     0 percent
  Idle          100 percent
Model          RE-TXP-LCC
Serial ID      737F-1024
Start time     2009-05-06 17:31:32 PDT
Uptime         5 days, 3 hours, 54 minutes, 19 seconds
Last reboot reason Router rebooted after a normal shutdown.

```

### show chassis routing-engine lcc (TX Matrix Plus Router)

```
user@host> show chassis routing-engine 0 lcc 0
```

```

lcc0-re0:
-----
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature              30 degrees C / 86 degrees F
  CPU temperature          43 degrees C / 109 degrees F
  DRAM                    3327 MB
  Memory utilization       9 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                 2 percent
    Interrupt             0 percent
    Idle                  98 percent
  Model                   RE-TXP-LCC
  Serial ID               737F-1024
  Start time              2009-05-11 17:40:32 PDT
  Uptime                  3 hours, 45 minutes, 26 seconds
  Last reboot reason      Router rebooted after a normal shutdown.
  Load averages:         1 minute   5 minute   15 minute
                        0.00       0.00       0.00

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature              30 degrees C / 86 degrees F
  CPU temperature          43 degrees C / 109 degrees F
  DRAM                    3327 MB
  Memory utilization       9 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                 0 percent
    Interrupt             0 percent
    Idle                 100 percent
  Model                   RE-TXP-LCC
  Serial ID               737F-1024
  Start time              2009-05-06 17:31:32 PDT
  Uptime                  5 days, 3 hours, 54 minutes, 59 seconds
  Last reboot reason      Router rebooted after a normal shutdown.

```

### show chassis routing-engine bios (TX Matrix Plus Router)

```
user@host> show chassis routing-engine bios
```

```
sfc0-re0:
```

```
-----  
Routing Engine BIOS Version: V0.0.Z
```

```
lcc0-re0:
```

```
-----  
Routing Engine BIOS Version: V0.0.N
```

### show chassis routing-engine (QFX Series)

```
user@switch> show chassis routing-engine
```

```
Routing Engine status:
```

```
Slot 0:
```

```
Current state Master
```

```
Election priority Master (default)
```

```
DRAM 2820 MB
```

```
Memory utilization 49 percent
```

```
CPU utilization:
```

```
User 1 percent
```

```
Background 0 percent
```

```
Kernel 1 percent
```

```
Interrupt 0 percent
```

```
Idle 97 percent
```

```
Model QFX3500-48S4Q
```

```
Serial ID S/N ED3709
```

```
Uptime 3 days, 4 hours, 29 minutes, 42 seconds
```

```
Last reboot reason 0x200:chassis control reset
```

```
Load averages: 1 minute 5 minute 15 minute
```

```
0.37 0.26 0.19
```

### show chassis routing-engine (OCX Series)

```
user@switch> show chassis routing-engine
```

```
Routing Engine status:
```

```
Slot 0:
```

```
Current state Master
```

```
Election priority Master (default)
```

```
DRAM 2820 MB
```

```
Memory utilization 49 percent
```

```
CPU utilization:
```

```
User 1 percent
```

```
Background 0 percent
```

```
Kernel 1 percent
```

```
Interrupt 0 percent
```

```
Idle 97 percent
```

```
Model OCX-1100-48SX-AFI
```

```
Serial ID S/N ED3709
```

```
Uptime 3 days, 4 hours, 29 minutes, 42 seconds
```

```
Last reboot reason 0x200:chassis control reset
```

```
Load averages: 1 minute 5 minute 15 minute
```

```
0.37 0.26 0.19
```

**show chassis routing-engine interconnect-device (QFabric Systems)**

```
user@switch> show chassis routing-engine
```

**Routing Engine status:****Slot 0:**

Current state	Master
Election priority	Master (default)
Temperature	48 degrees C / 118 degrees F
DRAM	3312 MB
Memory utilization	63 percent
CPU utilization:	
User	14 percent
Background	0 percent
Kernel	5 percent
Interrupt	0 percent
Idle	81 percent
Model	RE-QFXC08-CB4S
Serial ID	BUILTIN
Start time	2011-07-06 13:26:15 UTC
Uptime	11 hours, 24 minutes, 57 seconds
Last reboot reason	0x4:reset-button reset
Load averages:	1 minute    5 minute    15 minute
	2.62          2.31          2.28

**Routing Engine status:****Slot 1:**

Current state	Backup
Election priority	Backup (default)
Temperature	39 degrees C / 102 degrees F
DRAM	3312 MB
Memory utilization	59 percent
CPU utilization:	
User	9 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	91 percent
Model	RE-QFXC08-CB4S
Serial ID	BUILTIN
Start time	2011-07-06 13:24:58 UTC
Uptime	11 hours, 26 minutes, 18 seconds
Last reboot reason	0x4:reset-button reset

**show chassis routing-engine (PTX Series Packet Transport Router)**

```
user@switch> show chassis routing-engine
```

**Routing Engine status:****Slot 0:**

Current state	Master
Election priority	Master (default)
Temperature	60 degrees C / 140 degrees F
CPU temperature	76 degrees C / 168 degrees F
DRAM	17152 MB
Memory utilization	11 percent
CPU utilization:	
User	0 percent
Background	0 percent
Kernel	4 percent

```

        Interrupt          0 percent
        Idle               95 percent
        Model              RE-DUO-2600
        Serial ID          P737A-002231
        Start time         2011-12-21 16:54:37 PST
        Uptime             25 minutes, 44 seconds
        Last reboot reason  Router rebooted after a normal shutdown.
        Load averages:    1 minute   5 minute   15 minute
                           0.01       0.02       0.06

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature             50 degrees C / 122 degrees F
  CPU temperature         64 degrees C / 147 degrees F
  DRAM                   17152 MB
  Memory utilization      10 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                0 percent
    Interrupt             0 percent
    Idle                  99 percent
  Model                  RE-DUO-2600
  Serial ID              P737A-002438
  Start time             2011-12-21 16:52:26 PST
  Uptime                 27 minutes, 49 seconds
  Last reboot reason      Router rebooted after a normal shutdown.

```

### show chassis routing-engine (EX9200 Switch)

```

user@switch> show chassis routing-engine

Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             35 degrees C / 95 degrees F
  CPU temperature         33 degrees C / 91 degrees F
  DRAM                   8157 MB
  Installed Memory        8192 MB
  Memory utilization      18 percent
  CPU utilization:
    User                  1 percent
    Background            0 percent
    Kernel                4 percent
    Interrupt             1 percent
    Idle                  94 percent
  Model                  RE-S-EX9200-1800X4
  Serial ID              9009119555
  Start time             2014-03-12 14:58:05 UTC
  Uptime                 1 hour, 41 minutes, 51 seconds
  Last reboot reason      Router rebooted after a normal shutdown.
  Load averages:        1 minute   5 minute   15 minute
                           0.02       0.02       0.00

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)

```



[...Output truncated...]

### show chassis routing-engine (EX9251 Switch)

```
user@switch> show chassis routing-engine
```

```
Routing Engine status:
  Temperature           50 degrees C / 122 degrees F
  CPU temperature       50 degrees C / 122 degrees F
  DRAM                  16340 MB (16384 MB installed)
  Memory utilization    6 percent
  5 sec CPU utilization:
    User                2 percent
    Background          0 percent
    Kernel              19 percent
    Interrupt           0 percent
    Idle                79 percent
  1 min CPU utilization:
    User                2 percent
    Background          0 percent
    Kernel              19 percent
    Interrupt           0 percent
    Idle                79 percent
  5 min CPU utilization:
    User                2 percent
    Background          0 percent
    Kernel              19 percent
    Interrupt           0 percent
    Idle                79 percent
  15 min CPU utilization:
    User                2 percent
    Background          0 percent
    Kernel              19 percent
    Interrupt           0 percent
    Idle                79 percent
  Model                RE-S-2X00x6
  Start time            2018-03-08 05:11:33 PST
  Uptime                10 days, 18 hours, 59 minutes, 15 seconds
  Last reboot reason    0x4000:VJUNOS reboot
  Load averages:       1 minute   5 minute  15 minute
                      1.06       1.09     1.08
```

### show chassis routing-engine (ACX2000 Universal Metro Router)

```
user@host> show chassis routing-engine
```

```
Routing Engine status:
  Temperature           53 degrees C / 127 degrees F
  DRAM                  1536 MB
  Memory utilization    25 percent
  CPU utilization:
    User                0 percent
    Background          0 percent
    Kernel              0 percent
    Interrupt           1 percent
    Idle                99 percent
  Model                RE-ACX-2000
  Start time            2012-05-09 00:57:07 PDT
```

```

Uptime                5 days, 3 hours, 16 minutes, 15 seconds
Last reboot reason    Router rebooted after a normal shutdown.
Load averages:        1 minute   5 minute  15 minute
                       0.00       0.03    0.05

```

#### show chassis routing-engine (ACX1000 Universal Metro Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Temperature          36 degrees C / 96 degrees F
  DRAM                 768 MB
  Memory utilization    50 percent
  CPU utilization:
    User               3 percent
    Background         0 percent
    Kernel             6 percent
    Interrupt          0 percent
    Idle               91 percent
  Model               RE-ACX-1000
  Start time          2012-05-10 07:12:23 PDT
  Uptime              4 days, 10 hours, 46 minutes, 53 seconds
  Last reboot reason   Router rebooted after a normal shutdown.
  Load averages:      1 minute   5 minute  15 minute
                       0.00       0.00    0.00

```

#### show chassis routing-engine (Displaying the guest reboot reason on PTX5000,MX240, MX480, MX960< MX2010, and MX2020)

```
user@host> show chassis routing-engine re0 | match "Last reboot reason"
```

```
Last reboot reason 0x4000:VJUNOS reboot
```

## show chassis satellite

<b>Syntax</b>	<pre>show chassis satellite [device-alias <i>device-alias</i>   fpc-slot <i>fpc-slot</i>   cluster <i>cluster-name</i>] [brief   detail   extensive   terse] &lt;since <i>time</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	Display the status of the satellite device connections in a Junos Fusion.
<b>Options</b>	<p><b>none</b>—(Same as <b>brief</b>) Display satellite device connection information</p> <p><b>device-alias <i>device-alias</i></b>—(Optional) Display satellite device connection information for the satellite device using the specified device alias only.</p> <p><b>fpc-slot <i>fpc-slot</i></b>—(Optional) Display satellite device connection information for the satellite device using the specified FPC slot number only.</p> <p><b>cluster <i>cluster-name</i></b>—(Optional) Display satellite device connection information for the satellite devices in the specified satellite device cluster only.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>since <i>time</i></b>—(Optional) Display the satellite devices that have been added to the Junos Fusion on or after a certain date or time, in YYYY-MM-DD.HH:MM:SS format.</p> <p>To display all satellite devices added since a specified date, enter the specific date. For instance, to display all satellite devices added on or after December 22nd, 2015, enter <b>2015-12-22</b> as the <i>time</i>.</p> <p>To display all satellite devices added since a specified time, enter the specific date and time. For instance, to display all satellite devices added on or after 11:01AM on December 22nd, 2015, enter <b>2015-12-22.11:01:00</b> as the <i>time</i>.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show chassis satellite on page 723</a></p> <p><a href="#">show chassis satellite device-alias on page 724</a></p> <p><a href="#">show chassis satellite fpc-slot 130 on page 724</a></p> <p><a href="#">show chassis satellite terse on page 724</a></p>

[show chassis satellite detail on page 725](#)

**Output Fields** [Table 20 on page 718](#) lists the output fields for the **show chassis satellite** command. Output fields are listed in the approximate order in which they appear.

*Table 20: show chassis satellite Output Fields*

Field Name	Field Description	Level of Output
<b>Fields for Interface</b>		
<b>Alias</b>	The satellite device's alias.	brief
	The satellite device's alias is configured using the <b>set chassis satellite-management fpc slot-id alias alias</b> statement.	extensive none
<b>Slot</b>	The slot number of the satellite device.	brief
	The slot number can be configured using the <b>set chassis satellite-management fpc slot-id</b> statement..	terse extensive none

Table 20: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Device State</b>	<p>The state of the satellite device within the Junos Fusion.</p> <p>The most common device states:</p> <ul style="list-style-type: none"> <li>• <b>Online</b>—the satellite device is online and active. This is the satellite device state during normal operating procedure.</li> <li>• <b>Offline</b>—the satellite device is offline and not detected. This state is typically seen when the satellite device has been disconnected from the aggregation device, or when all cascade or uplink ports connecting the satellite device to the aggregation device are down.</li> <li>• <b>Present</b>—the satellite device is recognized by the aggregation device, but is not online. This state is typically seen before a satellite device goes online, or while satellite device configuration is in progress or finalizing.</li> <li>• <b>Rebooting</b>—the satellite device is rebooting.</li> <li>• <b>Disable</b>—the satellite device has been disabled.</li> <li>• <b>Misconfig</b>—the satellite device is not properly configured. This state is typically seen when the system ID, cascade port, or FPC slot ID defined for the satellite device has a misconfiguration.</li> <li>• <b>Miswire</b>—the satellite device is miswired. This state is typically seen when a satellite device is wired to two aggregation devices but is not configured for multihoming. Use <b>show chassis satellite detail</b> to gather more information on the issue when the device state is <b>Miswire</b>.</li> </ul> <p>Other less common device states include:</p> <ul style="list-style-type: none"> <li>• <b>ModeChanging</b>—the device is converting from a standalone device to a satellite device, or from a satellite device to a standalone device.</li> <li>• <b>ModeChangeFail</b>—the mode change operation failed.</li> <li>• <b>MinorUpgradeOn</b>—A minor satellite software upgrade is in progress.</li> <li>• <b>MajorUpgradeOn</b>—A major satellite software upgrade is in progress.</li> <li>• <b>Upgrade-pending</b>—the satellite device is waiting for a satellite software upgrade.</li> <li>• <b>ProvSessionDn</b>—the provisioning session is down.</li> <li>• <b>ReconcileState</b>—the satellite provisioning daemon has restarted and is reconciling the satellite device state.</li> </ul>	<p>brief terse extensive none</p>
<b>Cascade Ports</b>	<p>The cascade port or ports.</p> <p>A cascade port is a port on the aggregation device that connects to a satellite device in a Junos Fusion.</p>	<p>brief extensive none</p>

Table 20: *show chassis satellite Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Port State</b>	<p>The state of the cascade port on the aggregation device.</p> <p>Port states include:</p> <ul style="list-style-type: none"> <li>• <b>online</b>—the cascade port is online and active. This is the port state during normal operating procedure.</li> <li>• <b>txUpRxDn</b>—Tx or Rx forwarding is disabled on the cascade port. This state is often seen when a second aggregation device is added to a Junos Fusion topology, and the devices in the Junos Fusion are synchronizing to the new topology.</li> <li>• <b>miswire</b>—the cascade port is miswired. This state is typically seen when a satellite device is interconnected to two aggregation devices but multihoming is not configured. Use <b>show chassis satellite detail</b> to gather more information on the issue when the device state is <b>Miswire</b>.</li> <li>• <b>present</b>—The cascade port recognized the satellite device and is up.</li> <li>• <b>misconfig</b>—the cascade port is assigned, but this interface is not working correctly due to a misconfiguration.</li> <li>• <b>down</b>—the cascade port is down.</li> <li>• <b>offline</b>—the satellite device was previously recognized from this interface, but is no longer present.</li> <li>• <b>absent</b>—the cascade port is configured but no satellite device is detected on the interface.</li> </ul>	<p>brief</p> <p>extensive</p> <p>none</p>
<b>Extended Ports Total</b>	<p>The total number of extended ports on the satellite device.</p> <p>An extended port is a network-facing port on the satellite device that sends and receives network traffic for the Junos Fusion.</p>	<p>brief</p> <p>none</p> <p>terse</p>
<b>Extended Ports Up</b>	The number of active extended ports.	<p>brief</p> <p>none</p> <p>terse</p>
<b>Model</b>	The hardware model of the satellite device.	terse
<b>Version</b>	The version of satellite device software running on the satellite device.	terse
<b>Satellite Alias</b>	<p>The satellite device's alias.</p> <p>The satellite device's alias is configured using the <b>set chassis satellite-management fpc slot-id alias alias</b> statement.</p>	detail
<b>FPC slot</b>	<p>The FPC slot number of the satellite device.</p> <p>The slot number can be configured using the <b>set chassis satellite-management fpc slot-id</b> statement.</p>	detail

Table 20: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Operational State</b>	<p>The operational state of the satellite device.</p> <p>The state UFDDown indicates that uplink failure detection disabled the satellite device's extended ports due to an uplink port failure.</p>	detail
<b>Product Model</b>	The hardware model of the satellite device.	detail
<b>Product Family</b>	The product family of the satellite device.	detail
<b>Serial number</b>	The serial number of the satellite device.	detail
<b>System ID</b>	The system ID of the satellite device. The system ID is also the satellite device's MAC address.	detail
<b>Software package version</b>	The satellite software version running on the satellite device.	detail
<b>Host software version</b>	The host operating system software version running on the satellite device.	detail
<b>Management Address</b>	<p>The management IP address of the satellite device.</p> <p>This management IP address belongs to an internal routing instance. This management address is assigned by the control plane internally based on FPC slot ID and is used for the control plane traffic between the aggregation device and satellite device.</p> <p>All management in a Junos Fusion should be done through the aggregation device. The management IP address of the satellite device is useful for debugging purposes by expert users only.</p>	detail
<b>UFD config state</b>	Uplink failure detection configuration state.	detail
<b>Minimum link</b>	Uplink failure detection minimum active uplink port setting.	detail
<b>Holdddown timer (seconds)</b>	Uplink failure detection holdddown timer setting, in seconds.	detail
<b>UFD operational state</b>	Uplink failure detection operational state.	detail

Table 20: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Candidate uplink interfaces (pic/port)</b>	Uplink failure detection candidate uplink interfaces.	detail
<b>Extended Ports</b>	The number of extended ports for the satellite device. The number on the left is the total number of extended ports, and the number on the right is the total number of extended ports currently in the up state.	extensive
<b>When</b>	The date and time of the event.	extensive
<b>Event</b>	The event.	extensive
<b>Action</b>	The actions that resulted from the event.	extensive
<b>Fields for Cascade interfaces</b>		
<b>Interface Name</b>	The name of the cascade interface on the aggregation device.	detail
<b>State</b>	The state of the cascade interface.	detail
<b>Uplink Interface</b>	The name of the uplink interface on the satellite device.	detail
<b>Adjacency state</b>	The adjacency state of the cascade to uplink interface link.	detail
<b>Last transition</b>	The amount of time that has passed since the last transition of the cascade to uplink interface link.	detail
<b>Adjacency down count (Interface Name)</b>	The number of times the cascade to uplink interface link has gone into the down state.	detail
<b>RX Packet</b>	The number of packets received on the cascade interface.	detail
<b>Last received packet</b>	The amount of time that has passed since the last packet was received on the cascade interface.	detail
<b>Peer adjacency information</b>	The amount of time that has passed since the last peer adjacency transition.	detail
<b>Adjacency down count (Peer adjacency information)</b>	The number of times the cascade to uplink interface link has gone into the down state.	detail



Table 20: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Last down cause</b>	The cause of the last adjacency failure.	detail
<b>SDPD restart detected</b>	The number of times that the satellite device protocol process has restarted.	detail
<b>Fields for Process information</b>		
<b>Process Name</b>	The name of the process.	detail
<b>PID</b>	The process identification number of the process.	detail
<b>State</b>	The current state of the process.	detail
<b>Number of restart detected</b>	The number of times the process has restarted.	detail
<b>Uptime</b>	The amount of time that the process has been running.	detail

## Sample Output

### show chassis satellite

```
user@aggregation-device> show chassis satellite
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
qfx5100-24q-01	100	Online	xe-0/0/1 xe-0/3/0	online online	9/2
qfx5100-24q-02	101	Online	xe-0/0/2 xe-0/3/1	online online	20/12
qfx5100-24q-03	102	Online	xe-0/0/3 xe-0/3/2	online online	16/6
qfx5100-24q-04	103	Online	xe-0/0/4 xe-0/3/3	online online	16/4
qfx5100-24q-05	104	Online	xe-0/0/5 xe-0/3/4	online online	13/3
qfx5100-24q-06	105	Online	xe-0/0/6 xe-0/3/5	online online	24/15
qfx5100-24q-07	106	Online	xe-0/0/7 xe-0/3/6	online online	24/15
qfx5100-24q-08	107	Online	xe-0/0/8 xe-0/3/7	online online	21/12
ex4300-01	109	Online	xe-1/0/1	online	49/2
ex4300-02	110	Online	xe-1/0/2	online	49/2
ex4300-03	111	Online	xe-1/0/3	online	49/2
ex4300-04	112	Online	xe-1/0/4	online	49/11
ex4300-05	113	Online	xe-1/0/5	online	49/11
ex4300-06	114	Online	xe-1/0/6	online	49/11
ex4300-07	115	Online	xe-1/0/7	online	49/11
ex4300-08	116	Online	xe-1/1/0	online	49/11
ex4300-09	117	Online	xe-1/1/1	online	49/11

ex4300-10	118	Online	xe-1/1/2	online	49/11
ex4300-11	119	Online	xe-1/1/3	online	49/11
ex4300-12	120	Online	xe-1/1/4	online	49/11
ex4300-13	121	Online	xe-1/1/5	online	49/11
ex4300-14	122	Online	xe-1/1/6	online	49/11
ex4300-15	123	Online	xe-1/1/7	online	49/11
ex4300-16	124	Online	xe-1/2/1	online	49/11
ex4300-17	125	Online	xe-1/2/2	online	49/11
ex4300-18	126	Online	xe-1/2/3	online	49/2
ex4300-19	127	Online	xe-1/2/4	online	49/1
ex4300-20	128	Online	xe-1/2/5	online	49/1
ex4300-21	129	Online	xe-1/2/6	online	49/1
ex4300-22	130	Online	xe-1/2/7	online	49/1

## Sample Output

### show chassis satellite device-alias

```
user@aggregation-device> show chassis satellite device-alias ex4300-22
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
ex4300-22	130	Online	xe-0/2/7	online	49/1

## Sample Output

### show chassis satellite fpc-slot 130

```
user@aggregation-device> show chassis satellite fpc-slot 130
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
ex4300-22	101	Online	xe-0/0/2 xe-0/3/1	online online	20/12

## Sample Output

### show chassis satellite terse

```
user@aggregation-device> show chassis satellite terse
```

Slot	Device State	Model	Extended Ports	
			Total/Up	Version
101	Online	QFX5100-48S-6Q	7/7	3.0R1.1
102	Online	QFX5100-48S-6Q	7/7	3.0R1.1
103	Online	QFX5100-48S-6Q	6/5	3.0R1.1
104	Online	QFX5100-48S-6Q	14/14	3.0R1.1
105	Online	QFX5100-48S-6Q	18/18	3.0R1.1
106	Online	QFX5100-48S-6Q	17/16	3.0R1.1
107	Online	EX4300-48T	52/6	3.0R1.1
108	Online	EX4300-48T	52/15	3.0R1.1
109	Online	EX4300-48T	51/14	3.0R1.1
110	Online	EX4300-48T	51/14	3.0R1.1
111	Online	EX4300-48T	51/13	3.0R1.1
112	Online	EX4300-48T	51/12	3.0R1.1
113	Online	EX4300-48T	51/13	3.0R1.1
114	Online	QFX5100-24Q-2P	17/13	3.0R1.1

## show chassis satellite detail

```
user@aggregation-device> show chassis satellite detail
```

```
Satellite Alias: qfx5100-48s-02
FPC Slot: 101
Operational State: Online
Product Model: QFX5100-48S-6Q
Product Family: i386
Serial number: ABC123DEF456
System id: 00:11:22:aa:bb:cc
Software package version: 3.0R1.1
Host software version: 1.0.0
Management Address: 172.16.0.101/32
Cascade interfaces:
  Interface Name: xe-0/0/2 State: online
    Uplink Interface: xe-001/0/48:0
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-0/2/1 State: online
    Uplink Interface: xe-001/0/48:1
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 64 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-2/0/0 State: online
    Uplink Interface: xe-001/0/48:2
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-2/1/6 State: online
    Uplink Interface: xe-001/0/48:3
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Hold timer expire
      SDPD restart detected: 3
Process information:
  Process Name: Provisioning PID: 6716 State: Running
    Number of restart detected: 0
    Uptime: 00:10:22
  Process Name: PFE PID: 3194 State: Running
```

```
Number of restart detected: 0
Uptime: 00:10:22
UFD config state: Enable (persist), Minimum link: 1,
Holdddown timer (seconds): 6
UFD operational state: Enable
Candidate uplink interfaces (pic/port):
  1/0
  1/1
  1/2
  1/3
  2/0
  2/1
  2/2
  2/3

Satellite Alias: qfx5100-48s-03
FPC Slot: 102
Operational State: Online
Product Model: QFX5100-48S-6Q
Product Family: i386
Serial number: ABCDEFG12345
System id: 00:11:22:aa:ba:cc
Software package version: 3.0R1.1
Host software version: 1.0.0
Management Address: 172.16.0.102/32
Cascade interfaces:
  Interface Name: xe-0/0/3 State: online
    Uplink Interface: xe-002/0/48:0
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-0/2/2 State: online
    Uplink Interface: xe-002/0/48:1
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-2/0/1 State: online
    Uplink Interface: xe-002/0/48:2
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-2/1/7 State: online
    Uplink Interface: xe-002/0/48:3
    Adjacency state: Two-Way
    Last transition: 00:10:22
```

```
Adjacency down count: 0
Rx Packet: 65 Last received packet: 00:00:02
Peer adjacency information: 00:10:22
  Adjacency down count: 3
  Last down cause: Interface Down
  SDPD restart detected: 3
Process information:
  Process Name: Provisioning PID: 6667 State: Running
  Number of restart detected: 0
  Uptime: 00:10:22
  Process Name: PFE PID: 3155 State: Running
  Number of restart detected: 0
  Uptime: 00:10:22
<additional output removed for brevity>
```

## show chassis satellite extended-port

<b>Syntax</b>	<pre>show chassis satellite extended-port <i>interface-name</i> &lt;fpc-slot <i>fpc-slot</i>&gt; &lt;interface-name <i>interface-name</i>&gt; [<i>brief</i>   <i>detail</i>   <i>extensive</i>   <i>terse</i>] &lt;since <i>time</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Display the status of the extended ports on the satellite devices in a Junos Fusion.</p> <p>The extended ports are the network-facing ports on satellite devices that send and receive network traffic for a Junos Fusion.</p>
<b>Options</b>	<p><b>none</b>—(Same as <b>brief</b> and <b>terse</b>) Display extended port status information.</p> <p><b>brief</b>   <b>detail</b>   <b>extensive</b>   <b>terse</b>—(Optional) Display the specified level of output.</p> <p><b>fpc <i>fpc-slot</i></b>—Display extended port status information for the specified FPC slot only. In a Junos Fusion, one FPC slot ID is assigned to each satellite device, so you can use this option to display extended port status information for all extended ports on one satellite device.</p> <p><b>interface-name <i>interface-name</i></b>—Display extended port status information for the extended port interface only.</p> <p><b>history</b>—Display extended port history.</p> <p><b>statistics</b>—Display extended port statistics.</p> <p><b>since <i>time</i></b>—(Optional) Display extended port status information for the satellite devices that have been added to the Junos Fusion on or after a certain date or time, which is entered in the YYYY-MM-DD.HH:MM:SS format.</p> <p>To display extended port status information for all satellite devices added since a specified date, enter the specific date as the <i>time</i>. For instance, <b>2015-12-22</b>.</p> <p>To display extended port status information for all satellite devices added since a specified time, enter the specific date and time as the <i>time</i>. For instance, <b>2015-12-22.11:01:00</b>.</p>
<b>Required Privilege Level</b>	view

- Related Documentation**
- *Configuring or Expanding a Junos Fusion Enterprise*
  - *Configuring Junos Fusion Provider Edge*

**List of Sample Output** [show chassis satellite extended-port on page 730](#)

**Output Fields** [Table 21 on page 729](#) lists the output fields for the **show chassis satellite extended-port** command. Output fields are listed in the approximate order in which they appear.

*Table 21: show chassis satellite extended-port Output Fields*

Field Name	Field Description	Level of Output
Fields for Interface		
<b>Name</b>	The interface name of the extended port.	brief terse detail extensive none
<b>State</b>	The state of the extended port.	brief terse detail extensive none
<b>Rx Request State</b>	The receive request state of the extended port.	brief terse detail extensive none
<b>Tx Request State</b>	The transmit request state of the extended port.	brief terse detail extensive none
<b>Admin State</b>	The administrative state of the extended port.	brief terse detail extensive none
<b>Op State</b>	The operational state of the extended port.	brief terse detail extensive none
<b>IFD Idx</b>	The internal interface index.	brief terse detail extensive none

Table 21: show chassis satellite extended-port Output Fields (continued)

Field Name	Field Description	Level of Output
PCID	The port's E-channel identifier (ECID), abbreviated as PCID.	brief terse detail extensive none
When	The date and time of the event.	detail extensive
Event	The event.	detail extensive
Action	The actions that resulted from the event.	detail extensive

## Sample Output

### show chassis satellite extended-port

```
user@aggregation-device> show chassis satellite extended-port
```

Legend for interface types:

\* -- Uplink interface

Name	State	Rx Request	Tx State	Admin/Op	IFD Idx	PCID
et-100/0/2	AddComplete	None	Ready	Up/Dn	838	110
et-104/0/2	AddComplete	None	Ready	Up/Dn	813	110
et-107/0/23	AddComplete	None	Ready	Up/Up	544	194
ge-109/0/0	AddComplete	None	Ready	Up/Up	402	115
ge-109/0/1	AddComplete	None	Ready	Up/Dn	403	114
ge-109/0/10	AddComplete	None	Ready	Up/Dn	412	113
ge-109/0/11	AddComplete	None	Ready	Up/Dn	413	112
ge-109/0/12	AddComplete	None	Ready	Up/Dn	414	123
ge-109/0/13	AddComplete	None	Ready	Up/Dn	415	122
ge-109/0/14	AddComplete	None	Ready	Up/Dn	416	125
ge-109/0/15	AddComplete	None	Ready	Up/Dn	417	124
ge-109/0/16	AddComplete	None	Ready	Up/Dn	418	131
ge-109/0/17	AddComplete	None	Ready	Up/Dn	419	130
ge-109/0/18	AddComplete	None	Ready	Up/Dn	420	133
ge-109/0/19	AddComplete	None	Ready	Up/Dn	421	132
ge-109/0/2	AddComplete	None	Ready	Up/Dn	404	117
ge-109/0/20	AddComplete	None	Ready	Up/Dn	422	127
ge-109/0/21	AddComplete	None	Ready	Up/Dn	423	126
ge-109/0/22	AddComplete	None	Ready	Up/Dn	424	129
ge-109/0/23	AddComplete	None	Ready	Up/Dn	425	128
ge-109/0/24	AddComplete	None	Ready	Up/Dn	426	103
ge-109/0/25	AddComplete	None	Ready	Up/Dn	427	102
ge-109/0/26	AddComplete	None	Ready	Up/Dn	428	105
ge-109/0/27	AddComplete	None	Ready	Up/Dn	429	104
ge-109/0/28	AddComplete	None	Ready	Up/Dn	430	107
ge-109/0/29	AddComplete	None	Ready	Up/Dn	431	106
ge-109/0/3	AddComplete	None	Ready	Up/Dn	405	116
ge-109/0/30	AddComplete	None	Ready	Up/Dn	432	109
ge-109/0/31	AddComplete	None	Ready	Up/Dn	433	108



ge-109/0/32	AddComplete	None	Ready	Up/Dn	434	135
ge-109/0/33	AddComplete	None	Ready	Up/Dn	435	134
ge-109/0/34	AddComplete	None	Ready	Up/Dn	436	137
ge-109/0/35	AddComplete	None	Ready	Up/Dn	437	136
ge-109/0/36	AddComplete	None	Ready	Up/Dn	438	144
ge-109/0/37	AddComplete	None	Ready	Up/Dn	439	143
ge-109/0/38	AddComplete	None	Ready	Up/Dn	440	146
ge-109/0/39	AddComplete	None	Ready	Up/Dn	441	145
ge-109/0/4	AddComplete	None	Ready	Up/Dn	406	119
ge-109/0/40	AddComplete	None	Ready	Up/Dn	442	140
ge-109/0/41	AddComplete	None	Ready	Up/Dn	443	139
ge-109/0/42	AddComplete	None	Ready	Up/Dn	444	142
ge-109/0/43	AddComplete	None	Ready	Up/Dn	445	141
ge-109/0/44	AddComplete	None	Ready	Up/Dn	446	148
ge-109/0/45	AddComplete	None	Ready	Up/Dn	447	147
ge-109/0/46	AddComplete	None	Ready	Up/Dn	448	150
ge-109/0/47	AddComplete	None	Ready	Up/Dn	449	149
ge-109/0/5	AddComplete	None	Ready	Up/Dn	407	118
ge-109/0/6	AddComplete	None	Ready	Up/Dn	408	121
ge-109/0/7	AddComplete	None	Ready	Up/Dn	409	120
ge-109/0/8	AddComplete	None	Ready	Up/Dn	410	111
ge-109/0/9	AddComplete	None	Ready	Up/Dn	411	110
ge-110/0/0	AddComplete	None	Ready	Up/Up	728	115
ge-110/0/1	AddComplete	None	Ready	Up/Dn	729	114

## show chassis satellite interface

<b>Syntax</b>	<pre>show chassis satellite interface &lt;interface-name&gt; [ brief   detail   extensive ] &lt;since time&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Display the status of the cascade ports as well as the internal satellite interfaces in a Junos Fusion.</p> <p>You might see <b>sd</b> interfaces in the output of this command. These are internal interfaces for the Junos Fusion.</p>
<b>Options</b>	<p><b>interface-name</b>—Specify the name of the interface.</p> <p><b>none</b>—(Same as <b>brief</b>) Display aggregation device interface information.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>since time</b>—(Optional) Display interface status information for the satellite devices that have been added to the Junos Fusion on or after a certain date or time, which is entered in the <i>YYYY-MM-DD.HH:MM:SS</i> format.</p> <p>To display extended port status information for all satellite devices added since a specified date, enter the specific date as the time as the <i>time</i>. For instance, <b>2015-12-22</b>.</p> <p>To display extended port status information for all satellite devices added since a specified time, enter the specific date and time as the <i>time</i>. For instance, <b>2015-12-22.11:01:00</b>.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show chassis satellite interface on page 733</a></p> <p><a href="#">show chassis satellite interface (Junos Fusion Data Center with EVPN-VXLAN) on page 736</a></p>
<b>Output Fields</b>	<p><a href="#">Table 22 on page 733</a> lists the output fields for the <b>show chassis satellite interface</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 22: show chassis satellite interface Output Fields

Field Name	Field Description	Level of Output
<b>Fields for Interface</b>		
<b>Interface</b>	The interface name.	brief detail extensive none
<b>State</b>	The state of the interface.	brief detail extensive none
<b>Type</b>	The type of interface.	brief detail extensive none
<b>DF-Role</b>	<p>(Junos Fusion Data Center with EVPN-VXLAN architecture) The designated forwarder (DF) role:</p> <ul style="list-style-type: none"> <li>• <b>NA</b>—Not applicable.</li> <li>• <b>NON-DF</b>—This aggregation device is not the designated forwarder for the satellite device</li> <li>• <b>DF</b>—This aggregation device is the designated forwarder for the satellite device.</li> </ul>	brief detail extensive none
<b>Provisioned Addresses</b>	<p>The provisioned IP addresses for the Junos Fusion.</p> <p>This information is primarily useful for debugging purposes by expert users.</p>	detail extensive
<b>Operational Addresses</b>	<p>The operational IP addresses for the Junos Fusion.</p> <p>This information is primarily useful for debugging purposes by expert users.</p>	detail extensive
<b>When</b>	The date and time of the event.	detail extensive
<b>Event</b>	The event.	detail extensive
<b>Action</b>	The actions that resulted from the event.	detail extensive

## Sample Output

### show chassis satellite interface

```
user@aggregation-device> show chassis satellite interface
```

Interface	State	Type
lo0	Up	Loopback
sd-101/0/0	Up	Satellite
sd-102/0/0	Up	Satellite
sd-103/0/0	Up	Satellite
sd-104/0/0	Up	Satellite
sd-105/0/0	Up	Satellite
sd-106/0/0	Up	Satellite
sd-107/0/0	Up	Satellite
sd-108/0/0	Up	Satellite
sd-109/0/0	Up	Satellite
sd-110/0/0	Up	Satellite
sd-111/0/0	Up	Satellite
sd-112/0/0	Up	Satellite
sd-113/0/0	Up	Satellite
sd-114/0/0	Up	Satellite
xe-0/0/1	Up	Cascade
xe-0/0/2	Up	Cascade
xe-0/0/3	Up	Cascade
xe-0/0/4	Up	Cascade
xe-0/0/5	Up	Cascade
xe-0/0/6	Up	Cascade
xe-0/0/7	Up	Cascade
xe-0/0/8	Up	Cascade
xe-0/0/9	Up	Cascade
xe-0/2/0	Up	Cascade
xe-0/2/1	Up	Cascade
xe-0/2/2	Up	Cascade
xe-0/2/3	Up	Cascade
xe-0/2/4	Up	Cascade

xe-0/2/5	Up	Cascade
xe-0/2/6	Up	Cascade
xe-0/2/7	Up	Cascade
xe-1/0/1	Up	Cascade
xe-1/0/2	Up	Cascade
xe-1/0/3	Up	Cascade
xe-1/2/1	Up	Cascade
xe-1/2/2	Up	Cascade
xe-1/2/3	Up	Cascade
xe-2/0/0	Up	Cascade
xe-2/0/1	Up	Cascade
xe-2/0/2	Up	Cascade
xe-2/0/3	Up	Cascade
xe-2/0/4	Up	Cascade
xe-2/0/5	Up	Cascade
xe-2/0/6	Up	Cascade
xe-2/0/7	Up	Cascade
xe-2/1/0	Up	Cascade
xe-2/1/1	Up	Cascade
xe-2/1/2	Up	Cascade
xe-2/1/3	Up	Cascade
xe-2/1/4	Up	Cascade
xe-2/1/5	Up	Cascade
xe-2/1/6	Up	Cascade
xe-2/1/7	Up	Cascade
xe-2/2/0	Up	Cascade
xe-2/2/1	Up	Cascade
xe-2/2/2	Up	Cascade
xe-2/2/3	Up	Cascade
xe-2/2/4	Up	Cascade

xe-2/2/5	Up	Cascade
xe-2/2/6	Up	Cascade
xe-2/2/7	Up	Cascade
xe-2/3/0	Up	Cascade
xe-2/3/3	Dn	Cascade
xe-2/3/4	Up	Cascade
xe-2/3/5	Up	Cascade
xe-2/3/6	Up	Cascade
xe-2/3/7	Up	Cascade

## Sample Output

### show chassis satellite interface (Junos Fusion Data Center with EVPN-VXLAN)

```
user@aggregation-device> show chassis satellite interface
```

Interface	State	Type	DF-Role
lo0	Up	Loopback	NA
sd-101/0/0	Up	Satellite	Non-DF
sd-102/0/0	Up	Satellite	Non-DF
sd-103/0/0	Up	Satellite	DF
xe-0/0/1	Up	Cascade	NA
xe-0/0/2	Up	Cascade	NA
xe-0/0/3	Up	Cascade	NA
xe-0/0/4	Up	Cascade	NA
xe-0/0/5	Up	Cascade	NA

## show chassis satellite neighbor

**Syntax** `show chassis satellite neighbor`  
`[interface-name]`  
`[ brief | detail | extensive | terse]`  
`<since time>`

**Release Information** Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.  
 Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.  
 Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

**Description** Display the status of the satellite device to aggregation device links in a Junos Fusion.

**Options** *interface-name*—Specify the name of the cascade port on the aggregation device.

*none*—(Same as *terse*) Display satellite device connection information.

*brief | detail | extensive | terse*—(Optional) Display the specified level of output.

*since time*—(Optional) Display satellite device connection information for the satellite devices that have been added to the Junos Fusion on or after a certain date or time, which is entered in the *YYYY-MM-DD.HH:MM:SS* format.

To display satellite device connection information for all satellite devices added since a specified date, enter the specific date as the *time* as the *time*. For instance, **2015-12-22**.

To display satellite device connection information for all satellite devices added since a specified time, enter the specific date and time as the *time*. For instance, **2015-12-22.11:01:00**.

**Required Privilege Level** view

**Related Documentation**

- *Configuring or Expanding a Junos Fusion Enterprise*
- *Configuring Junos Fusion Provider Edge*

**List of Sample Output** [show chassis satellite neighbor on page 740](#)

**Output Fields** [Table 23 on page 737](#) lists the output fields for the **show chassis satellite neighbor** command. Output fields are listed in the approximate order in which they appear.

*Table 23: show chassis satellite neighbor Output Fields*

Field Name	Field Description	Level of Output
Fields for Interface		

Table 23: show chassis satellite neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Interface</b>	<p>A cascade port interface on the aggregation device in the Junos Fusion.</p> <p>A cascade port interface on an aggregation device connects to a satellite device in a Junos Fusion.</p>	<p>brief terse detail extensive none</p>
<b>State</b>	The state of the interface.	<p>brief terse detail extensive none</p>
<b>Port Info</b>	<p>The uplink port interface on the satellite device.</p> <p>An uplink port interface on a satellite device connects the satellite device to an aggregation device in a Junos Fusion.</p>	<p>brief terse detail extensive none</p>
<b>System Name</b>	<p>The system name, or alias, of the satellite device.</p> <p>The satellite device's alias is configured using the <b>set chassis satellite-management fpc slot-id alias alias</b> statement.</p>	<p>brief terse detail extensive none</p>
<b>Model</b>	The hardware model of the satellite device.	<p>brief terse detail extensive none</p>
<b>SW Version</b>	The version of satellite software running on the satellite device.	<p>brief terse detail extensive none</p>
<b>Adjacency up-down transition count</b>	The number of times that the adjacency has transitioned between up and down.	<p>brief detail extensive</p>
<b>Last transition</b>	The last transition of the adjacency state.	<p>brief detail extensive</p>
<b>Device Serial Number</b>	The serial number of the satellite device.	<p>brief detail extensive</p>
<b>Chassis ID</b>	The chassis ID of the satellite device. The chassis ID of the satellite device is the satellite's device's MAC address. The chassis ID is also specified as the system ID in some Junos Fusion configuration tasks.	<p>brief detail extensive</p>



Table 23: show chassis satellite neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Device Family Name</b>	The device family name.	brief detail extensive
<b>Version Sequence Number</b>	The version sequence number.	brief detail extensive
<b>System Description</b>	A plain-text description of the hardware and software currently running on the satellite device.	brief detail extensive
<b>Build date</b>	The date and time that the satellite software was built.	brief detail extensive
<b>Hello interval</b>	The current hello interval configuration.	brief detail extensive
<b>Satellite hello interval</b>	The current satellite device hello interval configuration.	brief detail extensive
<b>Local-end (Local assigned primary address)</b>	The local-end cascade port IP address.	brief detail extensive
<b>Remote-end (Local assigned primary address)</b>	The remote-end uplink port IP address.	brief detail extensive
<b>Cause (Adjacency Down History)</b>	The cause of the last adjacency down event.	brief detail extensive
<b>Timestamp (Adjacency Down History)</b>	The date and time of the last adjacency down event.	brief detail extensive
<b>Information (Adjacency Down History)</b>	Information related to the last adjacency down event.	brief detail extensive
<b>When</b>	The date and time of the event.	detail extensive
<b>Event</b>	The event.	detail extensive

Table 23: show chassis satellite neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
Action	The actions that resulted from the event.	detail extensive

## Sample Output

### show chassis satellite neighbor

```
user@aggregation-device> show chassis satellite neighbor
```

Interface	State	Port Info	System Name	Model	SW Version
xe-2/3/7	Init				
xe-2/3/6	Init				
xe-2/3/5	Init				
xe-2/3/4	Init				
xe-2/3/3	Dn				
xe-2/3/0	Two-Way	xe-0/2/2	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/7	Two-Way	xe-0/2/2	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/6	Two-Way	xe-0/2/2	ex4300-27	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/5	Two-Way	xe-0/2/2	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/4	Init				
xe-2/2/3	Init				
xe-2/2/2	Two-Way	xe-0/0/48:3	qfx5100-48s-06	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/2/1	Two-Way	xe-0/0/48:3	qfx5100-48s-05	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/2/0	Init				
xe-2/1/7	Init				
xe-2/1/6	Init				
xe-2/1/5	Two-Way	xe-0/0/4:2	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18
27_dc-builder					
xe-2/1/4	Two-Way	xe-0/2/1	ex4300-31	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/3	Two-Way	xe-0/2/1	ex4300-30	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/2	Two-Way	xe-0/2/1	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/1	Two-Way	xe-0/2/1	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/0	Init				
xe-2/0/7	Two-Way	xe-0/2/1	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/0/6	Init				
xe-2/0/5	Init				
xe-2/0/4	Init				
xe-2/0/3	Init				
xe-2/0/2	Two-Way	xe-0/0/48:2	qfx5100-48s-04	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/0/1	Two-Way	xe-0/0/48:2	qfx5100-48s-03	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/0/0	Init				
xe-1/2/3	Two-Way	xe-0/0/0:0	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18

```

27_dc-builder
xe-1/2/2    Two-Way    xe-0/2/0      ex4300-31 EX4300-48T    0.1I20150224_182
7_dc-builder
xe-1/2/1    Two-Way    xe-0/2/0      ex4300-30 EX4300-48T    0.1I20150224_182
7_dc-builder
xe-1/0/3    Two-Way    xe-0/2/0      ex4300-29 EX4300-48T    0.1I20150224_182
7_dc-builder
xe-1/0/2    Two-Way    xe-0/2/0      ex4300-28 EX4300-48T    0.1I20150224_182
7_dc-builder
xe-1/0/1    Two-Way    xe-0/2/0      ex4300-27 EX4300-48T    0.1I20150224_182
7_dc-builder
xe-0/2/7    Two-Way    xe-0/0/0:1    qfx5100-24q-09 QFX5100-24Q-2P 0.1I20150224_18
27_dc-builder
xe-0/2/6    Init
xe-0/2/5    Init
xe-0/2/4    Two-Way    xe-0/0/48:1    qfx5100-48s-05 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/2/3    Two-Way    xe-0/0/48:1    qfx5100-48s-04 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/2/2    Two-Way    xe-0/0/48:1    qfx5100-48s-03 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/2/1    Init
xe-0/2/0    Init
xe-0/0/9    Two-Way    xe-0/2/0      ex4300-26 EX4300-48T    0.1I20150224_182
7_dc-builder
xe-0/0/8    Two-Way    xe-0/2/0      ex4300-25 EX4300-48T    0.1I20150224_182
7_dc-builder
xe-0/0/7    Two-Way    xe-0/0/48:0    qfx5100-48s-07 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/0/6    Two-Way    xe-0/0/48:0    qfx5100-48s-06 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/0/5    Two-Way    xe-0/0/48:0    qfx5100-48s-05 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/0/4    Two-Way    xe-0/0/48:0    qfx5100-48s-04 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/0/3    Two-Way    xe-0/0/48:0    qfx5100-48s-03 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/0/2    Two-Way    xe-0/0/48:0    qfx5100-48s-02 QFX5100-48S-6Q 0.1I20150224_18
27_dc-builder
xe-0/0/1    Init

```

## show chassis satellite redundancy-group

<b>Syntax</b>	<pre>show chassis satellite redundancy-group [brief   detail   extensive   terse] &lt;since <i>time</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Display the status of the redundancy group in a Junos Fusion.</p> <p>Redundancy groups are used in a Junos Fusion to configure, monitor, and maintain a topology using two aggregation devices.</p>
<b>Options</b>	<p><b>none</b>—(Same as <b>terse</b> and <b>brief</b>) Display redundancy group information for the Junos Fusion.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>since <i>time</i></b>—(Optional) Display redundancy group information on or after a certain date or time, in YYYY-MM-DD.HH:MM:SS format.</p> <p>To display all output since a specified date, enter the specific date. For instance, enter <b>2015-12-22</b> as the <i>time</i>.</p> <p>To display all output since a specified time, enter the specific date and time. For instance, to display all information on or after 11:01AM on December 22nd, 2015, enter <b>2015-12-22.11:01:00</b> as the <i>time</i>.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show chassis satellite redundancy-group on page 744</a>
<b>Output Fields</b>	<p><a href="#">Table 24 on page 743</a> lists the output fields for the <b>show chassis satellite redundancy-groups</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 24: *show chassis satellite redundancy-groups* Output Fields

Field Name	Field Description	Level of Output
<b>Name</b>	The name of the redundancy group.  The redundancy group name is set using the <b>set chassis satellite-management redundancy-groups redundancy-group-name</b> statement.	none
		terse
		brief
		detail
		extensive
<b>Cluster State</b>	The cluster state.	none
		terse
		brief
		detail
		extensive
<b>Peer Chassis ID</b>	The chassis ID of the peer chassis.  In a Junos Fusion using redundancy groups, the peer chassis ID is the chassis ID of the other aggregation device and is required to create an interchassis link (ICL).  The chassis ID is set using the <b>set redundancy-group-name chassis-id chassis-id-number</b> statement.	none
		terse
		brief
		detail
		extensive
<b>Peer Chassis SN</b>	The serial number of the peer chassis.  In a Junos Fusion using redundancy groups, the peer chassis serial number is the serial number of the other aggregation device.	none
		terse
		brief
		detail
		extensive
<b>Device Count</b>	The device count.	none
		terse
		brief
		detail
		extensive
<b>When</b>	The date and time of the event.	detail
		extensive

Table 24: show chassis satellite redundancy-groups Output Fields (continued)

Field Name	Field Description	Level of Output
Event	The event.	detail
		extensive
Action	The actions that resulted from the event.	detail
		extensive

## Sample Output

### show chassis satellite redundancy-group

```
user@aggregation-device> show chassis satellite redundancy-group
```

Name	Cluster State	Peer Chassis ID	Peer Chassis SN	Device Count
gr1	Online	2	DC334	143/143/150

## show chassis satellite redundancy-group devices

<b>Syntax</b>	show chassis satellite redundancy-group devices [brief   detail   extensive   terse] <history>
<b>Release Information</b>	Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Display the status of the devices in a redundancy group in a Junos Fusion.  Redundancy groups are used in a Junos Fusion to configure, monitor, and maintain a topology using two aggregation devices.
<b>Options</b>	<b>none</b> —(Same as <b>terse</b> and <b>brief</b> ) Display redundancy group device information for the Junos Fusion.  <b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output.  <b>history</b> —(Optional) Display historical output.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show chassis satellite redundancy-group devices on page 746</a>
<b>Output Fields</b>	<a href="#">Table 25 on page 745</a> lists the output fields for the <b>show chassis satellite redundancy-groups</b> command. Output fields are listed in the approximate order in which they appear.

Table 25: show chassis satellite redundancy-groups Output Fields

Field Name	Field Description	Level of Output
Cluster Name	The name of the redundancy group.	none
	The redundancy group name is set using the <b>set chassis satellite-management redundancy-groups redundancy-group-name</b> statement.	terse
		brief
		detail
		extensive

Table 25: show chassis satellite redundancy-groups Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Slot ID</b>	The FPC slot ID of the satellite device.	none
		terse
		brief
		detail
		extensive
<b>Local State</b>	The local state of the satellite device.	none
		terse
		brief
		detail
		extensive
<b>Peer State</b>	The peer state.	none
		terse
		brief
		detail
		extensive
<b>When</b>	The date and time of the event.	detail
		extensive
<b>Event</b>	The event.	detail
		extensive
<b>Action</b>	The actions that resulted from the event.	detail
		extensive

## Sample Output

### show chassis satellite redundancy-group devices

```
user@aggregation-device> show chassis satellite redundancy-group devices
```

Cluster name	Slot-ID	Local State	Peer State
gr1	100	online	online
gr1	101	online	online
gr1	102	online	online



gr1	103	not-provisioned online
gr1	104	not-provisioned online
gr1	105	not-provisioned online
gr1	106	not-provisioned online
gr1	107	not-provisioned online
gr1	108	not-provisioned online
gr1	109	not-provisioned online

## show chassis satellite software

<b>Syntax</b>	<code>show chassis satellite software</code> <code>[ brief   detail ]</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Display information related to the satellite software in the Junos Fusion.
<b>Options</b>	<b>none</b> —(Same as <b>brief</b> ) Display satellite device software information. <b>brief   detail</b> —(Optional) Display the specified level of output.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li><i>Configuring Junos Fusion Provider Edge</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show chassis satellite software on page 749</a> <a href="#">show chassis satellite software detail on page 749</a>
<b>Output Fields</b>	Table 26 on page 748 lists the output fields for the <b>show chassis satellite neighbor</b> command. Output fields are listed in the approximate order in which they appear.

Table 26: show chassis satellite software Output Fields

Field Name	Field Description	Level of Output
Fields for Interface		
<b>Version</b>	The versions of satellite software that are installed and associated with a software upgrade group.	brief none
<b>Platforms</b>	The hardware platform information.	brief none
<b>Group</b>	The name of the assigned satellite software group or groups, if assigned.	brief none
<b>Software Package Version</b>	The satellite software package version.	detail
<b>Platform</b>	The platform type.	detail
<b>Host Version</b>	The host version of software for the platform.	detail

Table 26: show chassis satellite software Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Current Groups</b>	The name or names of the satellite software upgrade groups that are using the software package.  This output only appears if the software package is associated with a satellite software upgrade group.	detail
<b>Former Groups</b>	The name or names of satellite software upgrade groups that were previously using the software package.  This output only appears if the software package was previously associated with a satellite software upgrade group.	detail

## Sample Output

### show chassis satellite software

```
user@aggregation-device> show chassis satellite software
```

Version	Platforms	Group
3.0R1.1	i386 ppc	group0

## Sample Output

### show chassis satellite software detail

```
user@aggregation-device> show chassis satellite software detail
```

```
Software package version: 3.0R1.6
Platforms supported by package: i386 ppc arm arm563xx
Platform      Host Version  Models Supported
i386          3.0.3        QFX5100-24Q-2P
               QFX5100-48C-6Q
               QFX5100-48S-6Q
               QFX5100-48T-6Q
               QFX5100-96S-8Q
               QFX5100-48SH-6Q
               QFX5100-48TH-6Q
ppc           1.1.2        EX4300-24P
               EX4300-24T
               EX4300-48P
               EX4300-48T
               EX4300-48T-BF
               EX4300-48T-DC
               EX4300-48T-DC-BF
arm           1.0.0        EX2300-24P
               EX2300-24T-DC
               EX2300-C-12T
               EX4300-C-12P
arm563xx      1.0.0        EX3400-24P
               EX3400-24T
               EX3400-48T
               EX3400-48P
Current Groups: group1
```

```
group2  
group3  
group4  
group5
```

## show chassis satellite statistics

<b>Syntax</b>	<pre>show chassis satellite statistics &lt;device-alias device-alias&gt; &lt;fpc-slot fpc-slot&gt; &lt;cluster cluster-name&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	Display statistics for satellite devices in a Junos Fusion.
<b>Options</b>	<p><b>device-alias</b>—Display output for the specified satellite device, which is identified by the device alias, only.</p> <p><b>fpc-slot</b> —Display output for the specified satellite device, which is identified by the FPC slot ID, only.</p> <p><b>cluster-name</b>—Display output for the satellite devices in the specified satellite device cluster only.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li><i>Configuring Junos Fusion Provider Edge</i></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show chassis satellite statistics on page 752</a></p> <p><a href="#">show chassis satellite statistics device-alias qfx5100-48s-02 on page 755</a></p> <p><a href="#">show chassis satellite statistics fpc-slot 101 on page 755</a></p>
<b>Output Fields</b>	<p><a href="#">Table 27 on page 751</a> lists the output fields for the <b>show chassis satellite statistics</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 27: show chassis satellite statistics Output Fields*

Field Name	Field Description
<b>Fields for Interface</b>	
<b>Serial Number</b>	The serial number of the satellite device.
<b>Slot-ID</b>	The FPC slot ID of the satellite device.
<b>CSP down transition count</b>	The number of times that the Control and Status Protocol (CSP) session has gone down.

Table 27: show chassis satellite statistics Output Fields (continued)

Field Name	Field Description
Last transition (CSP down transition count)	The last time that the Control and Status Protocol (CSP) session transitioned.
Reachability down transition count	The number of times the satellite device has been in the reachability down state.
Reachability change transition count (Reachability down transition count)	The number of times that the satellite device's reachability state has transitioned.
S/W image update count	The number of times that the satellite software has been updated on the satellite device.
Extended Port add/delete/up/down request/response	The number of times an extended port—a network-facing port on the satellite device—has been added, deleted, placed in the up position, received a down request, or received a response.
Extended Port Params change request	The number of times that an extended port—a network-facing port on the satellite device—has had a change request.
Extended Port up/down operational state transition	The number of times that an extended port—a network-facing port on the satellite device—has had an operational state transition to up or down.
Rx sync complete	The number of times the receive synchronization state has been completed.
Uplink ready rx count	The number of times the uplink port—the port on the satellite device that connects to the aggregation device—has been placed in the ready-to-receive state.
Uplink ready tx count	The number of times the uplink port—the port on the satellite device that connects to the aggregation device—has been placed in the ready-to-transmit state.

## Sample Output

### show chassis satellite statistics

```

user@aggregation-device> show chassis satellite statistics
Serial Number: TA3714160468 Slot-ID: 101
  CSP down transition count: 0 Last transition: 05:23:56
  Reachability down transition count: 0
  Reachability change transition count: 4 Last transition: 05:23:16
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 7/0/7/2 7/0/7/2
  Extended Port Params change request: 0
  Extended Port up/down operational state transition: 7/0
  Rx sync complete: 1
  Uplink ready rx count: 4
  Uplink ready tx count: 4
Serial Number: TA3714160046 Slot-ID: 102
  CSP down transition count: 0 Last transition: 05:23:55
  Reachability down transition count: 0
  Reachability change transition count: 4 Last transition: 05:23:19
  S/W image update count: 0

```

```

Extended Port add/delete/up/down request/response: 7/0/7/2 7/0/7/2
Extended Port Params change request: 0
Extended Port up/down operational state transition: 7/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: TA3714140404 Slot-ID: 103
CSP down transition count: 0 Last transition: 05:23:57
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:14
S/W image update count: 0
Extended Port add/delete/up/down request/response: 6/0/5/3 6/0/5/3
Extended Port Params change request: 0
Extended Port up/down operational state transition: 5/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: TA3714141327 Slot-ID: 104
CSP down transition count: 0 Last transition: 05:23:57
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:15
S/W image update count: 0
Extended Port add/delete/up/down request/response: 14/0/14/2 14/0/14/2
Extended Port Params change request: 0
Extended Port up/down operational state transition: 14/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: TA3714140200 Slot-ID: 105
CSP down transition count: 0 Last transition: 05:23:59
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:15
S/W image update count: 0
Extended Port add/delete/up/down request/response: 18/0/18/2 18/0/18/2
Extended Port Params change request: 6
Extended Port up/down operational state transition: 18/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: TA3714140904 Slot-ID: 106
CSP down transition count: 0 Last transition: 05:23:57
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:16
S/W image update count: 0
Extended Port add/delete/up/down request/response: 17/0/16/3 17/0/16/3
Extended Port Params change request: 2
Extended Port up/down operational state transition: 16/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: PE3714040197 Slot-ID: 107
CSP down transition count: 0 Last transition: 05:24:32
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:18
S/W image update count: 0
Extended Port add/delete/up/down request/response: 52/0/7/50 52/0/7/50
Extended Port Params change request: 0
Extended Port up/down operational state transition: 7/1
Rx sync complete: 1
Uplink ready rx count: 4

```

```
Uplink ready tx count: 4
Serial Number: PE3714080398 Slot-ID: 108
  CSP down transition count: 0 Last transition: 05:24:32
  Reachability down transition count: 0
  Reachability change transition count: 4 Last transition: 05:23:18
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 52/0/15/40 52/0/15/40
  Extended Port Params change request: 0
  Extended Port up/down operational state transition: 15/0
  Rx sync complete: 1
  Uplink ready rx count: 4
  Uplink ready tx count: 4
Serial Number: PE3714080103 Slot-ID: 109
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 3 Last transition: 05:23:19
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 51/0/14/37 51/0/14/37
  Extended Port Params change request: 51
  Extended Port up/down operational state transition: 14/0
  Rx sync complete: 1
  Uplink ready rx count: 3
  Uplink ready tx count: 3
Serial Number: PE3714090246 Slot-ID: 110
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 3 Last transition: 05:23:19
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 51/0/14/37 51/0/14/37
  Extended Port Params change request: 42
  Extended Port up/down operational state transition: 14/0
  Rx sync complete: 1
  Uplink ready rx count: 3
  Uplink ready tx count: 3
Serial Number: PE3714080417 Slot-ID: 111
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 3 Last transition: 05:23:19
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 51/0/13/38 51/0/13/38
  Extended Port Params change request: 51
  Extended Port up/down operational state transition: 13/0
  Rx sync complete: 1
  Uplink ready rx count: 3
  Uplink ready tx count: 3
Serial Number: PE3714080018 Slot-ID: 112
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 2 Last transition: 05:23:18
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 51/0/12/39 51/0/12/39
  Extended Port Params change request: 51
  Extended Port up/down operational state transition: 12/0
  Rx sync complete: 1
  Uplink ready rx count: 2
  Uplink ready tx count: 2
Serial Number: PE3714080030 Slot-ID: 113
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 3 Last transition: 05:23:18
```



```

S/W image update count: 0
Extended Port add/delete/up/down request/response: 51/0/13/38 51/0/13/38
Extended Port Params change request: 51
Extended Port up/down operational state transition: 13/0
Rx sync complete: 1
Uplink ready rx count: 3
Uplink ready tx count: 3
Serial Number: TB3714070145 Slot-ID: 114
CSP down transition count: 0 Last transition: 05:23:58
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:15
S/W image update count: 0
Extended Port add/delete/up/down request/response: 17/0/13/7 17/0/13/7
Extended Port Params change request: 0
Extended Port up/down operational state transition: 13/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4

```

## Sample Output

**show chassis satellite statistics device-alias qfx5100-48s-02**

```

user@aggregation-device> show chassis satellite statistics device-alias qfx5100-48s-02
Serial Number: TA3714160468 Slot-ID: 101
CSP down transition count: 0 Last transition: 05:52:44
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:52:04
S/W image update count: 0
Extended Port add/delete/up/down request/response: 7/0/7/2 7/0/7/2
Extended Port Params change request: 0
Extended Port up/down operational state transition: 7/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4

```

## Sample Output

**show chassis satellite statistics fpc-slot 101**

```

user@aggregation-device> show chassis satellite statistics fpc-slot 101
Serial Number: TA3714160468 Slot-ID: 101
CSP down transition count: 0 Last transition: 05:52:44
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:52:04
S/W image update count: 0
Extended Port add/delete/up/down request/response: 7/0/7/2 7/0/7/2
Extended Port Params change request: 0
Extended Port up/down operational state transition: 7/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4

```

## show chassis satellite unprovision

---

**Syntax** show chassis satellite unprovision  
[brief | detail | extensive]  
[cluster *cluster-name*]  
<since *time*>

**Release Information** Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.  
Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.  
Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

**Description** Display information about unprovisioned satellite devices in a Junos Fusion.

An unprovisioned satellite device in a Junos Fusion is a satellite device that is recognized by the aggregation device, but is not participating in a Junos Fusion.

No output appears when this command is entered when a Junos Fusion contains no unprovisioned satellite devices.

This command is helpful in identifying satellite devices that are not participating in a Junos Fusion due to configuration issues. Notably, a satellite device that has not been associated with an FPC ID in a Junos Fusion becomes an unprovisioned satellite device. See *Configuring Junos Fusion Provider Edge* or *Configuring or Expanding a Junos Fusion Enterprise* for information on associating an FPC ID with a Junos Fusion.

**Options** **none**—(Same as **brief**) Display unprovisioned satellite device information.

**brief | detail | extensive**—(Optional) Display the specified level of output.

**cluster *cluster-name***—(Optional) Display unprovisioned satellite device information for the specified satellite device cluster only.

**since *time***—(Optional) Display unprovisioned satellite device information for the satellite devices that have been unprovisioned from a Junos Fusion on or after a certain date or time, which is entered in the *YYYY-MM-DD.HH:MM:SS* format.

To display unprovisioned satellite device information for all satellite devices unprovisioned since a specified date, enter the specific date as the *time* as the *time*. For instance, **2015-12-22**.

To display unprovisioned satellite device information for all satellite devices added since a specified time, enter the specific date and time as the *time*. For instance, **2015-12-22.11:01:00**.

**Required Privilege Level** view

- Related Documentation**
- [Configuring or Expanding a Junos Fusion Enterprise](#)
  - [Configuring Junos Fusion Provider Edge](#)

**List of Sample Output** [show chassis satellite unprovision on page 758](#)  
[show chassis satellite unprovision detail on page 759](#)

**Output Fields** [Table 28 on page 757](#) lists the output fields for the **show chassis satellite unprovision** command. Output fields are listed in the approximate order in which they appear.

*Table 28: show chassis satellite unprovision Output Fields*

Field Name	Field Description	Level of Output
<b>System-Id</b>	The MAC address of the satellite device.	brief extensive none
<b>Serial-Number</b>	The serial number of the satellite device.	brief extensive none
<b>Device State</b>	The device state of the unprovisioned satellite device.	brief extensive none
<b>Cascade Ports</b>	The cascade ports on the aggregation device that are connected to the satellite device.	brief extensive none
<b>Port State</b>	The port state of the cascade port.	brief extensive none
<b>Operational State</b>	The operational state of the satellite device.	detail
<b>Product Model</b>	The product model of the satellite device.	detail
<b>Product Family</b>	The product family of the satellite device.	detail
<b>Serial number</b>	The serial number of the satellite device.	detail
<b>System id</b>	The MAC address of the satellite device.	detail
<b>Software package version</b>	The satellite software package version running on the satellite device.	detail
<b>Host software version</b>	The host software version.	detail
<b>Fields for Cascade interfaces</b>		
<b>Interface Name</b>	The interface name of the cascade port on the aggregation device.	detail

Table 28: show chassis satellite unprovision Output Fields (continued)

Field Name	Field Description	Level of Output
<b>State</b>	The state of the cascade port.	detail
<b>Uplink Interface</b>	The uplink interface name. The uplink interface is the interface on the satellite device that connects to the aggregation device.	detail
<b>Adjacency State</b>	The adjacency state of the uplink interface to cascade port link.	detail
<b>Last transition</b>	The amount of time that has passed since the last link transition.	detail
<b>Adjacency down count</b>	The number of times that the uplink interface to cascade port link has gone into the adjacency down count.	detail
<b>Rx Packet</b>	The number of received packets.	detail
<b>Last received packet</b>	The amount of time that has passed since the last received packet.	detail
<b>Peer adjacency information</b>	The amount of time that the adjacency has been active.	detail
<b>Last down cause</b>	The cause of the last time the adjacency went down.	detail
<b>SDPD restart detected</b>	The number of times that the SDPD has restarted.	detail
<b>Fields for process information</b>		
<b>Process Name</b>	The name of the process.	detail
<b>PID</b>	The PID of the process.	detail
<b>State</b>	The current state of the process.	detail
<b>Number of restart detected</b>	The number of times that the process has restarted.	detail
<b>Uptime</b>	The amount of time that the process has been active.	detail
<b>When</b>	The date and time of the event.	extensive
<b>Event</b>	The event.	extensive
<b>Action</b>	The actions that resulted from the event.	extensive

## Sample Output

### show chassis satellite unprovision

```
user@aggregation-device> show chassis satellite unprovision
```

System-Id	Serial-Number	Device State	Cascade Ports	Port State
AA:BB:CC:aa:bb:cc	TABCDE111111	Present	xe-0/0/1	present
			xe-0/1/2	present
AA:BB:CC:aa:bb:zz	PABCDE111111	Present	xe-0/0/2	present
			xe-0/3/2	present

## Sample Output

### show chassis satellite unprovision detail

```
user@aggregation-device> show chassis satellite unprovision detail
```

```
Operational State: Present
Product Model: QFX5100-48S-6Q
Product Family: i386
Serial number: TABCDE111111
System id: AA:BB:CC:aa:bb:cc
Software package version: 3.0R1
Host software version: 0.2.3
Cascade interfaces:
  Interface Name: xe-0/0/1 State: present
    Uplink Interface: xe-0/0/25
    Adjacency state: Two-Way
    Last transition: 3d 22:06:55
    Adjacency down count: 0
    Rx Packet: 33875 Last received packet: 00:00:09
    Peer adjacency information: 3d 22:06:55
      Adjacency down count: 3
      Last down cause: TTL is 0
      SDPD restart detected: 3
  Interface Name: xe-0/1/2 State: present
    Uplink Interface: xe-0/0/24
    Adjacency state: Two-Way
    Last transition: 3d 22:06:58
    Adjacency down count: 0
    Rx Packet: 33875 Last received packet: 00:00:09
    Peer adjacency information: 3d 22:06:58
      Adjacency down count: 5
      Last down cause: TTL is 0
      SDPD restart detected: 3
Process information:
  Process Name: Provisioning PID: 2488 State: Running
    Number of restart detected: 0
    Uptime: 3d 22:06:58
  Process Name: PFE PID: 2631 State: Running
    Number of restart detected: 0
    Uptime: 3d 22:06:58
Operational State: Present
Product Model: EX4300-48T
Product Family: ppc
Serial number: PABCDE111111
System id: AA:BB:CC:aa:bb:zz
Software package version: 3.0R1
Host software version: 0.2.4
Cascade interfaces:
  Interface Name: xe-0/0/2 State: present
    Uplink Interface: xe-0/2/1
    Adjacency state: Two-Way
    Last transition: 3d 22:06:56
```

```
Adjacency down count: 0
Rx Packet: 33876 Last received packet: 00:00:05
Peer adjacency information: 3d 22:06:56
  Adjacency down count: 1
  Last down cause: TTL is 0
  SDPD restart detected: 2
Interface Name: xe-0/3/2 State: present
Uplink Interface: xe-0/2/0
Adjacency state: Two-Way
Last transition: 3d 22:06:57
Adjacency down count: 0
Rx Packet: 33876 Last received packet: 00:00:05
Peer adjacency information: 3d 22:06:57
  Adjacency down count: 3
  Last down cause: TTL is 0
  SDPD restart detected: 2
Process information:
  Process Name: Provisioning PID: 1603 State: Running
  Number of restart detected: 0
  Uptime: 3d 22:06:57
  Process Name: PFE PID: 1615 State: Running
  Number of restart detected: 0
  Uptime: 3d 22:06:57
```

## show chassis satellite upgrade-group

<b>Syntax</b>	<pre>show chassis satellite upgrade-group &lt;upgrade-group-name&gt; [ brief   detail   extensive   terse]</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Display information about the satellite software upgrade groups for the Junos Fusion.</p> <p>A satellite software upgrade group is a group of satellite devices that are updated at the same time to the same version of the satellite software. One Junos Fusion can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusions to avoid network downtimes during satellite software installations.</p> <p>A satellite software upgrade group that contains all satellite devices in a satellite device cluster is automatically created when a satellite device cluster is configured. The software upgrade group name for these automatically created software upgrade groups is the cluster name.</p>
<b>Options</b>	<p><b>none</b>—(Same as <b>brief</b> and <b>terse</b>) Display satellite software upgrade group information for all satellite software upgrade groups.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>upgrade-group-name</b>—Display satellite software upgrade group information for the specified satellite software upgrade group only.</p> <p>The satellite software upgrade group name is set using the <b>set chassis satellite-management upgrade-groups upgrade-group-name</b> statement for standalone satellite devices and is the cluster name for satellite device clusters.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show chassis satellite upgrade-group on page 763</a></p> <p><a href="#">show chassis satellite upgrade-group detail on page 763</a></p>
<b>Output Fields</b>	<p><a href="#">Table 29 on page 762</a> lists the output fields for the <b>show chassis satellite upgrade-group</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 29: show chassis satellite upgrade-group Output Fields

Field Name	Field Description	Level of Output
<b>Fields for Interface</b>		
<b>Group</b>	<p>The satellite software upgrade group name.</p> <p>The satellite software upgrade group name is the name of the satellite device cluster when used with a satellite device cluster. A satellite software upgrade group with the name of the satellite device cluster is created automatically when a satellite device cluster is configured.</p> <p>The satellite software upgrade group name is set using the <b>set chassis satellite-management upgrade-groups upgrade-group-name</b> statement for standalone satellite devices.</p>	<p>brief</p> <p>terse</p> <p>extensive</p> <p>none</p>
<b>Sw-Version</b>	The version of satellite software associated with the satellite software upgrade group.	<p>brief</p> <p>terse</p> <p>extensive</p> <p>none</p>
<b>Group State</b>	The state of the satellite software upgrade group.	<p>brief</p> <p>terse</p> <p>extensive</p> <p>none</p>
<b>Slot</b>	The FPC slot identification number of the satellite device that is a member of the satellite software upgrade group.	<p>brief</p> <p>terse</p> <p>detail</p> <p>extensive</p> <p>none</p>
<b>Device State</b>	<p>The state of the satellite software for the specified member of the satellite software upgrade group.</p> <p>The <b>version-in-sync</b> output appears when the satellite device is running the satellite software version that is associated with the satellite software upgrade group.</p>	<p>brief</p> <p>terse</p> <p>detail</p> <p>extensive</p> <p>none</p>
<b>Software upgrade group</b>	The name of the satellite software upgrade group.	detail
<b>Software package version</b>	The satellite software package associated with the satellite software upgrade group.	detail
<b>Previous software package version</b>	<p>The satellite software package that was previously associated with the satellite software upgrade group.</p> <p>This output only appears if the satellite software upgrade group was previously associated with another version of satellite software.</p>	detail



## Sample Output

### show chassis satellite upgrade-group

```
user@aggregation-device> show chassis satellite upgrade-group
```

Group	Sw-Version	Group State	Slot	Device State
__ungrouped__ ex4300	3.0R1.0	in-sync	107	version-in-sync
			108	version-in-sync
			109	version-in-sync
			110	version-in-sync
			111	version-in-sync
			112	version-in-sync
qfx	3.0R1.0	in-sync	113	version-in-sync
			102	version-in-sync
			103	version-in-sync
			104	version-in-sync
			105	version-in-sync
			106	version-in-sync
			114	version-in-sync

## Sample Output

### show chassis satellite upgrade-group detail

```
user@aggregation-device> show chassis satellite upgrade-group detail
```

```
Software upgrade group: ex4300
Software package version: 3.0R1.0
Previous software package version: 3.0R1.1
Slot  Device State
107   version-in-sync
108   version-in-sync
109   version-in-sync
110   version-in-sync
111   version-in-sync
112   version-in-sync
113   version-in-sync

Software upgrade group: qfx
Software package version: 3.0R1.0
Slot  Device State
102   version-in-sync
103   version-in-sync
104   version-in-sync
105   version-in-sync
```

106	version-in-sync
114	version-in-sync

## show chassis temperature-thresholds

**List of Syntax**    [Syntax on page 765](#)  
                          [Syntax \(TX Matrix Routers\) on page 765](#)  
                          [Syntax \(TX Matrix Plus Routers\) on page 765](#)  
                          [Syntax \(MX Series Routers\) on page 765](#)  
                          [Syntax \(MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms\) on page 765](#)  
                          [Syntax \(QFX Series\) on page 765](#)  
                          [Syntax \(PTX Series\) on page 765](#)  
                          [Syntax \(EX9251, EX9253 Switches\) on page 765](#)

**Syntax**    show chassis temperature-thresholds

**Syntax (TX Matrix Routers)**    show chassis temperature-thresholds  
    <lcc *number* | scc>

**Syntax (TX Matrix Plus Routers)**    show chassis temperature-thresholds  
    <lcc *number* | sfc *number*>

**Syntax (MX Series Routers)**    show chassis temperature-thresholds  
    <all-members>  
    <local>  
    <member *member-id*>  
    <satellite [slot-id *slot-ID* | device-alias *alias-name*]>

**Syntax (MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms)**    show chassis temperature-thresholds

**Syntax (QFX Series)**    show chassis temperature-thresholds  
    <interconnect-device *name*>  
    <node-device *name*>

**Syntax (PTX Series)**    show chassis temperature-thresholds

**Syntax (EX9251, EX9253 Switches)**    show chassis temperature-thresholds

**Release Information** Command introduced in Junos OS Release 8.0.  
Command introduced in Junos OS Release 9.0 for EX Series switches.  
**sfc** command introduced in Junos OS Release 9.6 for the TX Matrix Plus router.  
Command introduced in Junos OS Release 11.1 for QFX Series.  
Command introduced in Junos OS Release 12.1 for T4000 Core Routers.  
Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.  
Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.  
Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.  
**satellite** option introduced in Junos OS Release 14.2R3.  
Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.  
Command introduced in Junos OS Release 17.2 for PTX10008 Routers.  
Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.  
Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.  
Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.  
Command introduced in Junos OS Release 18.1R1 for EX9251 switches.  
Command introduced in Junos OS Release 18.2 for EX9253 Switches.  
Command introduced in Junos OS Release 18.2R1 for MX10008 Routers.

**Description** Display chassis temperature threshold settings, in degrees Celsius.

**Options** **none**—Display the temperature threshold details.

**all-members**—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of all member routers in the Virtual Chassis configuration.

**interconnect-device *name***—(QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Interconnect device.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the temperature threshold details of a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display the temperature threshold details of a specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-device *name***—(QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Node device.

**satellite [*slot-id slot-ID* | device-alias *alias-name*]**—(Junos Fusion only) (Optional) Display the chassis temperature threshold settings for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display the temperature threshold details of the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) On TX Matrix Plus routers, display the temperature threshold details of the TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* with 0.

**Required Privilege Level** view

**List of Sample Output**

- [show chassis temperature-thresholds on page 769](#)
- [show chassis temperature-thresholds \(MX150\) on page 769](#)
- [show chassis temperature-thresholds \(MX104 Router\) on page 769](#)
- [show chassis temperature-thresholds \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 770](#)
- [show chassis temperature-thresholds \(MX480 Router with MPC4E\) on page 770](#)
- [show chassis temperature-thresholds \(MX2010 Router with MPC7E, MPC8E, and MPC9E\) on page 770](#)
- [show chassis temperature-thresholds \(MX2010 Router\) on page 774](#)
- [show chassis temperature-thresholds \(MX2020 Router\) on page 776](#)
- [show chassis temperature-thresholds \(MX2020 Router with MPC4E\) on page 779](#)
- [show chassis temperature-thresholds \(MX2008 Routers\) on page 781](#)
- [show chassis temperature-thresholds \(MX10003 Router\) on page 785](#)
- [show chassis temperature-thresholds \(MX10008 Router\) on page 787](#)
- [show chassis temperature-thresholds \(MX204 Router\) on page 795](#)
- [show chassis temperature-thresholds \(PTX10008 Routers\) on page 796](#)
- [show chassis temperature-thresholds \(T4000 Core Routers\) on page 797](#)
- [show chassis temperature-thresholds \(TX Matrix Plus Router\) on page 798](#)
- [show chassis temperature-thresholds lcc \(TX Matrix Plus Router\) on page 799](#)
- [show chassis temperature-thresholds sfc \(TX Matrix Plus Router\) on page 799](#)
- [show chassis temperature-thresholds \(TX Matrix Plus routers with 3D SIBs\) on page 800](#)
- [show chassis temperature-thresholds \(QFX3500 Switch and QFX3600\) on page 802](#)
- [show chassis temperature-thresholds interconnect-device \(QFabric System\) on page 802](#)
- [show chassis temperature-thresholds \(PTX5000 Packet Transport Router\) on page 802](#)

[show chassis temperature-thresholds \(PTX1000 Packet Transport Router\) on page 804](#)  
[show chassis temperature-thresholds \(MX Routers with Media Services Blade \[MSB\]\) on page 804](#)  
[show chassis temperature-thresholds \(EX9251 Switches\) on page 805](#)  
[show chassis temperature-thresholds \(EX9253 switches\) on page 806](#)

**Output Fields** Table 30 on page 768 lists the output fields for the **show chassis temperature-thresholds** command. Output fields are listed in the approximate order in which they appear.

*Table 30: show chassis temperature-thresholds Output Fields*

Field name	Field Description
Item	Chassis component. If per FRU per slot thresholds are configured, the components about which information is displayed include the chassis, the Routing Engines, FPCs, and FEBs. If per FRU per slot thresholds are not configured, the components about which information is displayed include the chassis and the Routing Engines.
Fan speed	<p><b>NOTE:</b> On the QFX3500 switch and QFX3600 switch, there are four fan speeds: <b>low</b>, <b>medium-low</b>, <b>medium-high</b>, and <b>high</b>. The fan speed changes at the threshold when going from a low speed to a higher speed. When the fan speed changes from a higher speed to a lower speed, the temperature changes two degrees below the threshold.</p> <p>Temperature threshold settings, in degrees Celsius, for the fans to operate at normal and high speeds.</p> <ul style="list-style-type: none"> <li>Normal—The fans operate at normal speed if the component is at or below this temperature and all the fans are present and functioning normally.</li> </ul> <p><b>NOTE:</b> On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 70°C for <b>Normal</b> fan speed, which is less than or equal to 4800 RPM.</p> <ul style="list-style-type: none"> <li>High—The fans operate at high speed if the component has exceeded this temperature or a fan has failed or is missing.</li> </ul> <p><b>NOTE:</b> On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 75°C for <b>High</b> fan speed, which is greater than or equal to 5000 RPM.</p> <p><b>NOTE:</b> For MX480 Routers, there are three fan speeds: Low, Medium, and High.</p> <p>An alarm is not triggered until the temperature exceeds the threshold settings for a yellow alarm or a red alarm.</p>
Yellow alarm	<p>Temperature threshold settings, in degrees Celsius, that trigger a yellow alarm.</p> <ul style="list-style-type: none"> <li>Normal—The temperature that must be exceeded on the component to trigger a yellow alarm when the fans are running at full speed.</li> <li>Bad fan—The temperature that must be exceeded on the component to trigger a yellow alarm when one or more fans have failed or are missing.</li> </ul>
Red alarm	<p>Temperature threshold settings, in degrees Celsius, that trigger a red alarm.</p> <ul style="list-style-type: none"> <li>Normal—The temperature that must be exceeded on the component to trigger a red alarm when the fans are running at full speed.</li> <li>Bad fan—The temperature that must be exceeded on the component to trigger a red alarm when one or more fans have failed or are missing.</li> </ul>
Fire Shutdown	(T4000 routers, TX Matrix Plus router with 3D SIBs, and PTX Series Packet Transport Routers only)—Temperature threshold settings, in degrees Celsius, for the network device to shut down.

## Sample Output

### show chassis temperature-thresholds

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	70	80	95	95	110	110
Routing Engine 1	70	80	95	95	110	110
FPC 0	55	60	75	65	90	80
FPC 1	55	60	75	65	90	80
FPC 2	55	60	75	65	90	80
FPC 3	55	60	75	65	90	80
FPC 4	55	60	75	65	90	80
FPC 5	55	60	75	65	90	80
FPC 6	55	60	75	65	90	80
FPC 7	55	60	75	65	90	80
FPC 8	55	60	75	65	90	80
FPC 9	55	60	75	65	90	80
FPC 10	55	60	75	65	90	80
FPC 11	55	60	75	65	90	80

### show chassis temperature-thresholds (MX150)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	High	Normal	Bad fan	Normal	Bad fan
FPC 0 Sensor 1	43	65	68	68	70	70		
FPC 0 Sensor 2	43	65	68	68	70	70		
FPC 0 Coretemp	78	94	100	100	105	105		

### show chassis temperature-thresholds (MX104 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65		
Routing Engine 0	55	80	95	95	105	100		

### show chassis temperature-thresholds (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host> show chassis temperature-thresholds
```

Fan speed (degrees C)	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Item						
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 0	55	60	75	65	90	80
95						
FPC 1	55	60	75	65	90	80
95						
FPC 2	55	60	75	65	90	80
95						
FPC 4	55	60	75	65	90	80
95						
FPC 5	55	60	75	65	90	80
95						

### show chassis temperature-thresholds (MX480 Router with MPC4E)

```
user@ host> show chassis temperature-thresholds
```

Fan speed (degrees C)	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Item						
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 2	55	60	75	65	95	80
100						
FPC 3	55	60	75	65	95	80
100						
FPC 4	55	60	75	65	90	80
95						

### show chassis temperature-thresholds (MX2010 Router with MPC7E, MPC8E, and MPC9E)

```
user@ host> show chassis temperature-thresholds
```

Fire Shutdown (degrees C)	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Item						
Bad fan						
Normal						



FPC 3 Intake	53	59	72	67	80
75 85					
FPC 3 Exhaust A	77	85	98	93	103
98 108					
FPC 3 Exhaust B	54	62	80	75	103
98 108					
FPC 3 EA0 Chip	64	72	90	90	100
100 105					
FPC 3 EA0_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA0_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 EA1 Chip	64	72	90	90	100
100 105					
FPC 3 EA1_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA1_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 PEX Chip	74	82	100	100	105
105 110					
FPC 3 EA2 Chip	64	72	90	90	100
100 105					
FPC 3 EA2_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA2_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 EA3 Chip	64	72	90	90	100
100 105					
FPC 3 EA3_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA3_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 EA0_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA0_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA0_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA0_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA0_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA0_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA1_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA1_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA1_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA1_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA1_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA1_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA2_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA2_HMC0 DRAM botm	76	84	98	98	102
102 106					

FPC 3 EA2_HMC1 Logic die 107 111	81	89	103	103	107
FPC 3 EA2_HMC1 DRAM botm 102 106	76	84	98	98	102
FPC 3 EA2_HMC2 Logic die 107 111	81	89	103	103	107
FPC 3 EA2_HMC2 DRAM botm 102 106	76	84	98	98	102
FPC 3 EA3_HMC0 Logic die 107 111	81	89	103	103	107
FPC 3 EA3_HMC0 DRAM botm 102 106	76	84	98	98	102
FPC 3 EA3_HMC1 Logic die 107 111	81	89	103	103	107
FPC 3 EA3_HMC1 DRAM botm 102 106	76	84	98	98	102
FPC 3 EA3_HMC2 Logic die 107 111	81	89	103	103	107
FPC 3 EA3_HMC2 DRAM botm 102 106	76	84	98	98	102
FPC 4 Intake 76 90	46	55	65	60	81
FPC 4 Exhaust A 95 110	61	70	80	75	100
FPC 4 Exhaust B 90 105	61	70	80	75	95
FPC 4 EA0 Chip 112 123	86	95	105	100	117
FPC 4 EA0_XR0 Chip 105 116	86	95	105	100	110
FPC 4 EA0_XR1 Chip 110 121	86	95	105	100	115
FPC 4 EA1 Chip 112 123	86	95	105	100	117
FPC 4 EA1_XR0 Chip 105 116	86	95	105	100	110
FPC 4 EA1_XR1 Chip 110 121	86	95	105	100	115
FPC 4 PCIE_SW Chip 110 121	81	90	105	100	115
FPC 4 EA0_HMC0 DRAM botm 110 121	86	95	105	100	115
FPC 4 EA0_HMC1 DRAM botm 110 121	86	95	105	100	115
FPC 4 EA1_HMC0 DRAM botm 110 121	86	95	105	100	115
FPC 4 EA1_HMC1 DRAM botm 110 121	86	95	105	100	115
FPC 7 Intake 75 85	53	59	72	67	80
FPC 7 Exhaust A 98 108	77	85	98	93	103
FPC 7 Exhaust B 98 108	54	62	80	75	103
FPC 7 EA0 Chip 100 105	64	72	90	90	100
FPC 7 EA0_XR0 Chip 106 108	79	87	102	102	106
FPC 7 EA0_XR1 Chip 106 108	79	87	102	102	106

FPC 7 EA1 Chip	64	72	90	90	100
100 105					
FPC 7 EA1_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA1_XR1 Chip	79	87	102	102	106
106 108					
FPC 7 PEX Chip	74	82	100	100	105
105 110					
FPC 7 EA2 Chip	64	72	90	90	100
100 105					
FPC 7 EA2_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA2_XR1 Chip	79	87	102	102	106
106 108					
FPC 7 EA3 Chip	64	72	90	90	100
100 105					
FPC 7 EA3_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA3_XR1 Chip	79	87	102	102	106
106 108					
FPC 7 EA0_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA0_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA0_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA0_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA0_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA0_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA1_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA1_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA1_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA1_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA1_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA1_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA2_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA2_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA2_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA2_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA2_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA2_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA3_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA3_HMC0 DRAM botm	76	84	98	98	102
102 106					

FPC 7 EA3_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA3_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA3_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA3_HMC2 DRAM botm	76	84	98	98	102
102 106					

As per the above output, the MPC7E, MPC8E, and MPC9E are installed in the FPC slots 4, 7, and 3, respectively.

### show chassis temperature-thresholds (MX2010 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal	
Routing Engine 0	70	80	95	95	110	110	112	
Routing Engine 1	70	80	95	95	110	110	112	
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95	
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95	
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95	
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95	
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95	
CB 0 TCBC-Zone0	60	65	78	75	85	80	95	
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95	
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95	
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95	
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95	
CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95	
CB 1 TCBC-Zone0	60	65	78	75	85	80	95	
SPMB 0 Intake	56	62	75	63	83	76	95	
SPMB 1 Intake	56	62	75	63	83	76	95	
SFB 0 Intake-Zone0	56	62	75	63	82	70	87	
SFB 0 Exhaust-Zone1	56	62	75	63	82	70	87	
SFB 0 IntakeA-Zone0	56	62	75	63	82	70	87	
SFB 0 IntakeB-Zone1	56	62	75	63	82	70	87	
SFB 0 Exhaust-Zone0	56	62	75	63	82	70	87	
SFB 0 SFB-XF2-Zone1	70	80	90	90	107	107	115	
SFB 0 SFB-XF1-Zone0	70	80	90	90	107	107	115	
SFB 0 SFB-XF0-Zone0	70	80	90	90	107	107	115	
SFB 1 Intake-Zone0	56	62	75	63	82	70	87	
SFB 1 Exhaust-Zone1	56	62	75	63	82	70	87	
SFB 1 IntakeA-Zone0	56	62	75	63	82	70	87	
SFB 1 IntakeB-Zone1	56	62	75	63	82	70	87	
SFB 1 Exhaust-Zone0	56	62	75	63	82	70	87	
SFB 1 SFB-XF2-Zone1	70	80	90	90	107	107	115	
SFB 1 SFB-XF1-Zone0	70	80	90	90	107	107	115	
SFB 1 SFB-XF0-Zone0	70	80	90	90	107	107	115	
SFB 2 Intake-Zone0	56	62	75	63	82	70	87	
SFB 2 Exhaust-Zone1	56	62	75	63	82	70	87	
SFB 2 IntakeA-Zone0	56	62	75	63	82	70	87	
SFB 2 IntakeB-Zone1	56	62	75	63	82	70	87	
SFB 2 Exhaust-Zone0	56	62	75	63	82	70	87	
SFB 2 SFB-XF2-Zone1	70	80	90	90	107	107	115	
SFB 2 SFB-XF1-Zone0	70	80	90	90	107	107	115	
SFB 2 SFB-XF0-Zone0	70	80	90	90	107	107	115	

SFB 3 Intake-Zone0	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 3 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 3 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 3 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 3 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 3 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 4 Intake-Zone0	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 4 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 4 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 4 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 4 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 4 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 5 Intake-Zone0	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 5 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 5 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 5 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 5 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 5 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 6 Intake-Zone0	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 6 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 6 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 6 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 6 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 6 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 7 Intake-Zone0	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 7 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 7 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 7 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 7 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 7 SFB-XF0-Zone0	70	80	90	90	107	107	115
FPC 0	55	60	75	65	95	80	100
FPC 1	55	60	75	65	90	80	95
FPC 2	55	60	75	65	95	80	100
FPC 3	55	60	75	65	90	80	95
FPC 4	55	60	75	65	90	80	95
FPC 5	55	60	75	65	95	80	100
FPC 6	55	60	75	65	90	80	95
FPC 7	55	60	75	65	95	80	100
FPC 8	55	60	75	65	90	80	95
FPC 9	55	60	75	65	95	80	100
ADC 0 Intake	56	62	75	63	83	76	95
ADC 0 Exhaust	56	62	75	63	83	76	95
ADC 0 ADC-XF1	70	80	90	90	107	107	115
ADC 0 ADC-XF0	70	80	90	90	107	107	115
ADC 1 Intake	56	62	75	63	83	76	95
ADC 1 Exhaust	56	62	75	63	83	76	95
ADC 1 ADC-XF1	70	80	90	90	107	107	115
ADC 1 ADC-XF0	70	80	90	90	107	107	115
ADC 2 Intake	56	62	75	63	83	76	95
ADC 2 Exhaust	56	62	75	63	83	76	95

ADC 2 ADC-XF1	70	80	90	90	107	107	115
ADC 2 ADC-XF0	70	80	90	90	107	107	115
ADC 3 Intake	56	62	75	63	83	76	95
ADC 3 Exhaust	56	62	75	63	83	76	95
ADC 3 ADC-XF1	70	80	90	90	107	107	115
ADC 3 ADC-XF0	70	80	90	90	107	107	115
ADC 4 Intake	56	62	75	63	83	76	95
ADC 4 Exhaust	56	62	75	63	83	76	95
ADC 4 ADC-XF1	70	80	90	90	107	107	115
ADC 4 ADC-XF0	70	80	90	90	107	107	115
ADC 5 Intake	56	62	75	63	83	76	95
ADC 5 Exhaust	56	62	75	63	83	76	95
ADC 5 ADC-XF1	70	80	90	90	107	107	115
ADC 5 ADC-XF0	70	80	90	90	107	107	115
ADC 6 Intake	56	62	75	63	83	76	95
ADC 6 Exhaust	56	62	75	63	83	76	95
ADC 6 ADC-XF1	70	80	90	90	107	107	115
ADC 6 ADC-XF0	70	80	90	90	107	107	115
ADC 7 Intake	56	62	75	63	83	76	95
ADC 7 Exhaust	56	62	75	63	83	76	95
ADC 7 ADC-XF1	70	80	90	90	107	107	115
ADC 7 ADC-XF0	70	80	90	90	107	107	115
ADC 8 Intake	56	62	75	63	83	76	95
ADC 8 Exhaust	56	62	75	63	83	76	95
ADC 8 ADC-XF1	70	80	90	90	107	107	115
ADC 8 ADC-XF0	70	80	90	90	107	107	115
ADC 9 Intake	56	62	75	63	83	76	95
ADC 9 Exhaust	56	62	75	63	83	76	95
ADC 9 ADC-XF1	70	80	90	90	107	107	115
ADC 9 ADC-XF0	70	80	90	90	107	107	115

### show chassis temperature-thresholds (MX2020 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed		Yellow alarm		Red alarm		Fire Shutdown
	(degrees C) Normal	(degrees C) High	(degrees C) Normal	(degrees C) Bad fan	(degrees C) Normal	(degrees C) Bad fan	(degrees C) Normal
Routing Engine 0	70	80	95	95	110	110	112
Routing Engine 1	70	80	95	95	110	110	112
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 0 TCBC-Zone0	60	65	78	75	85	80	95
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 1 TCBC-Zone0	60	65	78	75	85	80	95
SPMB 0 Intake	56	62	75	63	83	76	95
SPMB 1 Intake	56	62	75	63	83	76	95
SFB 0 Intake-Zone0	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 0 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 0 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone0	56	62	75	63	82	70	87

SFB 0 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 0 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 0 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 1 Intake-Zone0	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 1 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 1 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 1 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 1 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 1 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 2 Intake-Zone0	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 2 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 2 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 2 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 2 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 2 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 3 Intake-Zone0	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 3 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 3 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 3 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 3 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 3 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 4 Intake-Zone0	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 4 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 4 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 4 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 4 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 4 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 5 Intake-Zone0	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 5 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 5 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 5 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 5 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 5 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 6 Intake-Zone0	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 6 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 6 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 6 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 6 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 6 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 7 Intake-Zone0	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 7 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 7 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 7 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 7 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 7 SFB-XF0-Zone0	70	80	90	90	107	107	115
FPC 0	55	60	75	65	90	80	95

FPC 1	55	60	75	65	90	80	95
FPC 2	55	60	75	65	90	80	95
FPC 3	55	60	75	65	90	80	95
FPC 4	55	60	75	65	90	80	95
FPC 5	55	60	75	65	90	80	95
FPC 6	55	60	75	65	90	80	95
FPC 7	55	60	75	65	90	80	95
FPC 8	55	60	75	65	90	80	95
FPC 9	55	60	75	65	90	80	95
FPC 10	55	60	75	65	90	80	95
FPC 11	55	60	75	65	90	80	95
FPC 12	55	60	75	65	90	80	95
FPC 13	55	60	75	65	90	80	95
FPC 14	55	60	75	65	90	80	95
FPC 15	55	60	75	65	90	80	95
FPC 16	55	60	75	65	90	80	95
FPC 17	55	60	75	65	90	80	95
FPC 18	55	60	75	65	90	80	95
FPC 19	55	60	75	65	90	80	95
ADC 0 Intake	56	62	75	63	83	76	95
ADC 0 Exhaust	56	62	75	63	83	76	95
ADC 0 ADC-XF1	70	80	90	90	107	107	115
ADC 0 ADC-XF0	70	80	90	90	107	107	115
ADC 1 Intake	56	62	75	63	83	76	95
ADC 1 Exhaust	56	62	75	63	83	76	95
ADC 1 ADC-XF1	70	80	90	90	107	107	115
ADC 1 ADC-XF0	70	80	90	90	107	107	115
ADC 2 Intake	56	62	75	63	83	76	95
ADC 2 Exhaust	56	62	75	63	83	76	95
ADC 2 ADC-XF1	70	80	90	90	107	107	115
ADC 2 ADC-XF0	70	80	90	90	107	107	115
ADC 3 Intake	56	62	75	63	83	76	95
ADC 3 Exhaust	56	62	75	63	83	76	95
ADC 3 ADC-XF1	70	80	90	90	107	107	115
ADC 3 ADC-XF0	70	80	90	90	107	107	115
ADC 4 Intake	56	62	75	63	83	76	95
ADC 4 Exhaust	56	62	75	63	83	76	95
ADC 4 ADC-XF1	70	80	90	90	107	107	115
ADC 4 ADC-XF0	70	80	90	90	107	107	115
ADC 5 Intake	56	62	75	63	83	76	95
ADC 5 Exhaust	56	62	75	63	83	76	95
ADC 5 ADC-XF1	70	80	90	90	107	107	115
ADC 5 ADC-XF0	70	80	90	90	107	107	115
ADC 6 Intake	56	62	75	63	83	76	95
ADC 6 Exhaust	56	62	75	63	83	76	95
ADC 6 ADC-XF1	70	80	90	90	107	107	115
ADC 6 ADC-XF0	70	80	90	90	107	107	115
ADC 7 Intake	56	62	75	63	83	76	95
ADC 7 Exhaust	56	62	75	63	83	76	95
ADC 7 ADC-XF1	70	80	90	90	107	107	115
ADC 7 ADC-XF0	70	80	90	90	107	107	115
ADC 8 Intake	56	62	75	63	83	76	95
ADC 8 Exhaust	56	62	75	63	83	76	95
ADC 8 ADC-XF1	70	80	90	90	107	107	115
ADC 8 ADC-XF0	70	80	90	90	107	107	115
ADC 9 Intake	56	62	75	63	83	76	95
ADC 9 Exhaust	56	62	75	63	83	76	95
ADC 9 ADC-XF1	70	80	90	90	107	107	115
ADC 9 ADC-XF0	70	80	90	90	107	107	115
ADC 10 Intake	56	62	75	63	83	76	95



ADC 10 Exhaust	56	62	75	63	83	76	95
ADC 10 ADC-XF1	70	80	90	90	107	107	115
ADC 10 ADC-XF0	70	80	90	90	107	107	115
ADC 11 Intake	56	62	75	63	83	76	95
ADC 11 Exhaust	56	62	75	63	83	76	95
ADC 11 ADC-XF1	70	80	90	90	107	107	115
ADC 11 ADC-XF0	70	80	90	90	107	107	115
ADC 12 Intake	56	62	75	63	83	76	95
ADC 12 Exhaust	56	62	75	63	83	76	95
ADC 12 ADC-XF1	70	80	90	90	107	107	115
ADC 12 ADC-XF0	70	80	90	90	107	107	115
ADC 13 Intake	56	62	75	63	83	76	95
ADC 13 Exhaust	56	62	75	63	83	76	95
ADC 13 ADC-XF1	70	80	90	90	107	107	115
ADC 13 ADC-XF0	70	80	90	90	107	107	115
ADC 14 Intake	56	62	75	63	83	76	95
ADC 14 Exhaust	56	62	75	63	83	76	95
ADC 14 ADC-XF1	70	80	90	90	107	107	115
ADC 14 ADC-XF0	70	80	90	90	107	107	115
ADC 15 Intake	56	62	75	63	83	76	95
ADC 15 Exhaust	56	62	75	63	83	76	95
ADC 15 ADC-XF1	70	80	90	90	107	107	115
ADC 15 ADC-XF0	70	80	90	90	107	107	115
ADC 16 Intake	56	62	75	63	83	76	95
ADC 16 Exhaust	56	62	75	63	83	76	95
ADC 16 ADC-XF1	70	80	90	90	107	107	115
ADC 16 ADC-XF0	70	80	90	90	107	107	115
ADC 17 Intake	56	62	75	63	83	76	95
ADC 17 Exhaust	56	62	75	63	83	76	95
ADC 17 ADC-XF1	70	80	90	90	107	107	115
ADC 17 ADC-XF0	70	80	90	90	107	107	115
ADC 18 Intake	56	62	75	63	83	76	95
ADC 18 Exhaust	56	62	75	63	83	76	95
ADC 18 ADC-XF1	70	80	90	90	107	107	115
ADC 18 ADC-XF0	70	80	90	90	107	107	115
ADC 19 Intake	56	62	75	63	83	76	95
ADC 19 Exhaust	56	62	75	63	83	76	95
ADC 19 ADC-XF1	70	80	90	90	107	107	115
ADC 19 ADC-XF0	70	80	90	90	107	107	115

### show chassis temperature-thresholds (MX2020 Router with MPC4E)

```
user@host> show chassis temperature-thresholds
```

Fan speed	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)		(degrees C)
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal
Routing Engine 0	70	80	95	95	110	110	112
Routing Engine 1	70	80	95	95	110	110	112
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 0 TCBC-Zone0	60	65	78	75	85	80	95
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95

CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 1 TCBC-Zone0	60	65	78	75	85	80	95
SPMB 0 Intake	56	62	75	63	83	76	95
SPMB 1 Intake	56	62	75	63	83	76	95
SFB 0 Intake-Zone0	56	62	70	70	85	85	89
SFB 0 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 0 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 0 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 0 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 0 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 0 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 0 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 1 Intake-Zone0	56	62	70	70	85	85	89
SFB 1 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 1 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 1 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 1 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 1 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 1 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 1 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 2 Intake-Zone0	56	62	70	70	85	85	89
SFB 2 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 2 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 2 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 2 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 2 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 2 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 2 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 3 Intake-Zone0	56	62	70	70	85	85	89
SFB 3 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 3 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 3 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 3 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 3 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 3 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 3 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 4 Intake-Zone0	56	62	70	70	85	85	89
SFB 4 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 4 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 4 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 4 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 4 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 4 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 4 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 5 Intake-Zone0	56	62	70	70	85	85	89
SFB 5 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 5 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 5 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 5 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 5 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 5 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 5 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 6 Intake-Zone0	56	62	70	70	85	85	89
SFB 6 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 6 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 6 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 6 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 6 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 6 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 6 SFB-XF0-Zone0	70	75	90	85	95	90	100

SFB 7 Intake-Zone0	56	62	70	70	85	85	89
SFB 7 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 7 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 7 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 7 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 7 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 7 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 7 SFB-XF0-Zone0	70	75	90	85	95	90	100
FPC 0	55	60	75	65	90	80	95
FPC 9	55	60	75	65	90	80	95
FPC 10	55	60	75	65	90	80	95
FPC 14	55	60	75	65	95	80	100
FPC 19	55	60	75	65	90	80	95
ADC 0 Intake	50	55	60	60	65	65	80
ADC 0 Exhaust	50	55	60	60	65	65	80
ADC 0 ADC-XF1	70	75	90	85	95	90	100
ADC 0 ADC-XF0	70	75	90	85	95	90	100
ADC 9 Intake	50	55	60	60	65	65	80
ADC 9 Exhaust	50	55	60	60	65	65	80
ADC 9 ADC-XF1	70	75	90	85	95	90	100
ADC 9 ADC-XF0	70	75	90	85	95	90	100
ADC 10 Intake	50	55	60	60	65	65	80
ADC 10 Exhaust	50	55	60	60	65	65	80
ADC 10 ADC-XF1	70	75	90	85	95	90	100
ADC 10 ADC-XF0	70	75	90	85	95	90	100
ADC 14 Intake	50	55	60	60	65	65	80
ADC 14 Exhaust	50	55	60	60	65	65	80
ADC 14 ADC-XF1	70	75	90	85	95	90	100
ADC 14 ADC-XF0	70	75	90	85	95	90	100
ADC 19 Intake	50	55	60	60	65	65	80
ADC 19 Exhaust	50	55	60	60	65	65	80
ADC 19 ADC-XF1	70	75	90	85	95	90	100
ADC 19 ADC-XF0	70	75	90	85	95	90	100

### show chassis temperature-thresholds (MX2008 Routers)

```
user@host> show chassis temperature-thresholds
```

Shutdown (degrees C) Item	Fan speed		Yellow alarm		Red alarm		Fire
	(degrees C)		(degrees C)		(degrees C)		
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0 CPU 98	58	63	78	75	93	90	
Routing Engine 1 CPU 98	58	63	78	75	93	90	
CB 0 Inlet1 85	55	60	65	62	75	72	
CB 0 Inlet2 90	45	50	61	58	80	77	
CB 0 Inlet3 90	57	62	68	65	80	77	
CB 0 Inlet4 95	55	60	80	77	90	87	
CB 0 Exhaust1 85	55	60	65	62	75	72	
CB 0 Exhaust2 90	50	55	60	57	80	77	

CB 0 Exhaust3 96	70	75	81	78	91	88
CB 0 Exhaust4 105	75	80	90	87	100	97
CB 1 Inlet1 85	55	60	65	62	75	72
CB 1 Inlet2 90	45	50	61	58	80	77
CB 1 Inlet3 90	57	62	68	65	80	77
CB 1 Inlet4 95	55	60	80	77	90	87
CB 1 Exhaust1 85	55	60	65	62	75	72
CB 1 Exhaust2 90	50	55	60	57	80	77
CB 1 Exhaust3 96	70	75	81	78	91	88
CB 1 Exhaust4 105	75	80	90	87	100	97
SFB 0 Inlet1 81	49	54	62	59	76	73
SFB 0 Inlet2 88	65	70	71	68	83	80
SFB 0 Exhaust1 80	45	50	61	58	75	72
SFB 0 Exhaust2 85	60	65	69	66	80	77
SFB 0 SFB2-PF-local 100	65	70	75	72	95	92
SFB 0 SFB2-PF-die 120	88	93	98	95	118	115
SFB 1 Inlet1 81	49	54	62	59	76	73
SFB 1 Inlet2 88	65	70	71	68	83	80
SFB 1 Exhaust1 80	45	50	61	58	75	72
SFB 1 Exhaust2 85	60	65	69	66	80	77
SFB 1 SFB2-PF-local 100	65	70	75	72	95	92
SFB 1 SFB2-PF-die 120	88	93	98	95	118	115
SFB 2 Inlet1 81	49	54	62	59	76	73
SFB 2 Inlet2 88	65	70	71	68	83	80
SFB 2 Exhaust1 80	45	50	61	58	75	72
SFB 2 Exhaust2 85	60	65	69	66	80	77
SFB 2 SFB2-PF-local 100	65	70	75	72	95	92
SFB 2 SFB2-PF-die 120	88	93	98	95	118	115
SFB 3 Inlet1 81	49	54	62	59	76	73
SFB 3 Inlet2 88	65	70	71	68	83	80

SFB 3 Exhaust1 80	45	50	61	58	75	72
SFB 3 Exhaust2 85	60	65	69	66	80	77
SFB 3 SFB2-PF-local 100	65	70	75	72	95	92
SFB 3 SFB2-PF-die 120	88	93	98	95	118	115
SFB 4 Inlet1 81	49	54	62	59	76	73
SFB 4 Inlet2 88	65	70	71	68	83	80
SFB 4 Exhaust1 80	45	50	61	58	75	72
SFB 4 Exhaust2 85	60	65	69	66	80	77
SFB 4 SFB2-PF-local 100	65	70	75	72	95	92
SFB 4 SFB2-PF-die 120	88	93	98	95	118	115
SFB 5 Inlet1 81	49	54	62	59	76	73
SFB 5 Inlet2 88	65	70	71	68	83	80
SFB 5 Exhaust1 80	45	50	61	58	75	72
SFB 5 Exhaust2 85	60	65	69	66	80	77
SFB 5 SFB2-PF-local 100	65	70	75	72	95	92
SFB 5 SFB2-PF-die 120	88	93	98	95	118	115
SFB 6 Inlet1 81	49	54	62	59	76	73
SFB 6 Inlet2 88	65	70	71	68	83	80
SFB 6 Exhaust1 80	45	50	61	58	75	72
SFB 6 Exhaust2 85	60	65	69	66	80	77
SFB 6 SFB2-PF-local 100	65	70	75	72	95	92
SFB 6 SFB2-PF-die 120	88	93	98	95	118	115
SFB 7 Inlet1 81	49	54	62	59	76	73
SFB 7 Inlet2 88	65	70	71	68	83	80
SFB 7 Exhaust1 80	45	50	61	58	75	72
SFB 7 Exhaust2 85	60	65	69	66	80	77
SFB 7 SFB2-PF-local 100	65	70	75	72	95	92
SFB 7 SFB2-PF-die 120	88	93	98	95	118	115
FPC 0 95	55	60	75	65	90	80
FPC 3 110	55	60	75	65	105	80

FPC 5 110	55	60	75	65	105	80
FPC 7 95	55	60	75	65	90	80
FPC 9 Intake 95	60	65	75	75	85	85
FPC 9 Exhaust A 95	60	65	75	75	85	85
FPC 9 Exhaust B 95	60	65	75	75	85	85
FPC 9 XL 0 Chip 110	70	75	85	85	102	102
FPC 9 XL 0 XR2 0 Chip 115	75	80	90	90	105	105
FPC 9 XL 0 XR2 1 Chip 115	75	80	90	90	105	105
FPC 9 XL 1 Chip 110	70	75	85	85	102	102
FPC 9 XL 1 XR2 0 Chip 115	75	80	90	90	105	105
FPC 9 XL 1 XR2 1 Chip 115	75	80	90	90	105	105
FPC 9 XM 0 Chip 110	70	75	85	85	100	100
FPC 9 XM 1 Chip 110	70	75	85	85	100	100
FPC 9 XM 2 Chip 110	70	75	85	85	100	100
FPC 9 XM 3 Chip 110	70	75	85	85	100	100
FPC 9 PCIe Switch Chip 120	80	85	95	95	105	105
ADC 0 Intake 80	50	55	65	65	75	75
ADC 0 Exhaust 80	50	55	65	65	75	75
ADC 0 ADC-XF1 100	70	75	90	85	95	90
ADC 0 ADC-XF0 100	70	75	90	85	95	90
ADC 3 Intake 80	50	55	65	65	75	75
ADC 3 Exhaust 80	50	55	65	65	75	75
ADC 3 ADC-XF1 100	70	75	90	85	95	90
ADC 3 ADC-XF0 100	70	75	90	85	95	90
ADC 5 Intake 80	50	55	65	65	75	75
ADC 5 Exhaust 80	50	55	65	65	75	75
ADC 5 ADC-XF1 100	70	75	90	85	95	90
ADC 5 ADC-XF0 100	70	75	90	85	95	90
ADC 7 Intake 80	50	55	65	65	75	75
ADC 7 Exhaust 80	50	55	65	65	75	75

ADC 7 ADC-XF1 100	70	75	90	85	95	90
ADC 7 ADC-XF0 100	70	75	90	85	95	90

### show chassis temperature-thresholds (MX10003 Router)

```
user@host> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0 102	48	54	85	85	100	100	
Routing Engine 1 102	48	54	85	85	100	100	
CB 0 Exhaust Temp Sensor 95	60	65	75	75	85	85	
CB 0 Inlet Temp Sensor 95	60	65	75	75	85	85	
CB 0 CPU DIE Temp Sensor 110	83	90	98	98	105	105	
CB 1 Exhaust Temp Sensor 95	60	65	75	75	85	85	
CB 1 Inlet Temp Sensor 95	60	65	75	75	85	85	
CB 1 CPU DIE Temp Sensor 110	83	90	98	98	105	105	
FPC 0 Intake Temp Sensor 95	40	45	75	70	85	80	
FPC 0 Exhaust-A Temp Sensor 100	55	60	85	80	90	90	
FPC 0 Exhaust-B Temp Sensor 100	55	60	85	80	90	90	
FPC 0 EA0 Chip 110	87	92	97	97	105	105	
FPC 0 EA0-XR0 Chip 125	88	93	98	98	120	120	
FPC 0 EA0-XR1 Chip 125	88	93	98	98	120	120	
FPC 0 EA1 Chip 110	87	92	97	97	105	105	
FPC 0 EA1-XR0 Chip 125	88	93	98	98	120	120	
FPC 0 EA1-XR1 Chip 125	88	93	98	98	120	120	
FPC 0 EA2 Chip 110	87	92	97	97	105	105	
FPC 0 EA2-XR0 Chip 125	88	93	98	98	120	120	
FPC 0 EA2-XR1 Chip 125	88	93	98	98	120	120	
FPC 0 PF Chip 120	89	94	104	104	120	120	
FPC 0 EA0_HMC0 Logic die 125	88	93	103	103	120	120	

FPC 0 EA0_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA0_HMC1 Logic die 125	88	93	103	103	120	120
FPC 0 EA0_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA0_HMC2 Logic die 125	88	93	103	103	120	120
FPC 0 EA0_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA1_HMC0 Logic die 125	88	93	103	103	120	120
FPC 0 EA1_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA1_HMC1 Logic die 125	88	93	103	103	120	120
FPC 0 EA1_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA1_HMC2 Logic die 125	88	93	103	103	120	120
FPC 0 EA1_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA2_HMC0 Logic die 125	88	93	103	103	120	120
FPC 0 EA2_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA2_HMC1 Logic die 125	88	93	103	103	120	120
FPC 0 EA2_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA2_HMC2 Logic die 125	88	93	103	103	120	120
FPC 0 EA2_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 1 Intake Temp Sensor 95	40	45	75	70	85	80
FPC 1 Exhaust-A Temp Sensor 100	55	60	85	80	90	90
FPC 1 Exhaust-B Temp Sensor 100	55	60	85	80	90	90
FPC 1 EA0 Chip 110	87	92	97	97	105	105
FPC 1 EA0-XR0 Chip 125	88	93	98	98	120	120
FPC 1 EA0-XR1 Chip 125	88	93	98	98	120	120
FPC 1 EA1 Chip 110	87	92	97	97	105	105
FPC 1 EA1-XR0 Chip 125	88	93	98	98	120	120
FPC 1 EA1-XR1 Chip 125	88	93	98	98	120	120
FPC 1 EA2 Chip 110	87	92	97	97	105	105
FPC 1 EA2-XR0 Chip 125	88	93	98	98	120	120
FPC 1 EA2-XR1 Chip 125	88	93	98	98	120	120
FPC 1 PF Chip 120	89	94	104	104	120	120



FPC 1 EA0_HMC0 Logic die	88	93	103	103	120	120
125						
FPC 1 EA0_HMC0 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA0_HMC1 Logic die	88	93	103	103	120	120
125						
FPC 1 EA0_HMC1 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA0_HMC2 Logic die	88	93	103	103	120	120
125						
FPC 1 EA0_HMC2 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA1_HMC0 Logic die	88	93	103	103	120	120
125						
FPC 1 EA1_HMC0 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA1_HMC1 Logic die	88	93	103	103	120	120
125						
FPC 1 EA1_HMC1 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA1_HMC2 Logic die	88	93	103	103	120	120
125						
FPC 1 EA1_HMC2 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA2_HMC0 Logic die	88	93	103	103	120	120
125						
FPC 1 EA2_HMC0 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA2_HMC1 Logic die	88	93	103	103	120	120
125						
FPC 1 EA2_HMC1 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA2_HMC2 Logic die	88	93	103	103	120	120
125						
FPC 1 EA2_HMC2 DRAM botm	83	88	98	98	120	120
125						

### show chassis temperature-thresholds (MX10008 Router)

```
user@host> show chassis temperature-thresholds
```

Fire Shutdown		Fan speed		Yellow alarm		Red alarm
		(degrees C)		(degrees C)		(degrees
C)	(degrees C)	Normal	High	Normal	Bad fan	Normal
Item						
Bad fan	Normal					
Routing Engine 0		65	70	95	95	100
100	110					
Routing Engine 1		65	70	95	95	100
100	110					
CB 0 Intake A Temp Sensor		30	35	80	80	85
85	95					
CB 0 Intake B Temp Sensor		30	35	80	80	85
85	95					
CB 0 Exhaust A Temp Sensor		40	45	80	80	85
85	95					
CB 0 Exhaust B Temp Sensor		40	45	80	80	85
85	95					
CB 0 Middle Temp Sensor		40	45	80	80	85

85	95					
CB 1 Intake A Temp Sensor	85	95	30	35	80	80 85
CB 1 Intake B Temp Sensor	85	95	30	35	80	80 85
CB 1 Exhaust A Temp Sensor	85	95	40	45	80	80 85
CB 1 Exhaust B Temp Sensor	85	95	40	45	80	80 85
CB 1 Middle Temp Sensor	85	95	40	45	80	80 85
FPC 0 Intake-A Temp Sensor	85	90	52	62	72	72 85
FPC 0 Exhaust-A Temp Sensor	103	108	75	85	98	98 103
FPC 0 Exhaust-B Temp Sensor	103	108	75	85	98	98 103
FPC 0 EA0 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA0_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA0_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA1 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA1_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA1_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA2 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA2_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA2_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA3 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA3_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA3_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA4 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA4_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA4_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA5 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA5_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA5_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA0_HMC0 Logic die	110	115	79	89	103	103 110
FPC 0 EA0_HMC0 DRAM botm	105	110	74	84	98	98 105
FPC 0 EA0_HMC1 Logic die	110	115	79	89	103	103 110
FPC 0 EA0_HMC1 DRAM botm			74	84	98	98 105

105	110				
FPC 0 EA0_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA0_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA1_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA1_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA1_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA1_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA1_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA1_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA2_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA2_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA2_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA2_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA2_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA2_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA3_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA3_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA3_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA3_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA3_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA3_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA4_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA4_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA4_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA4_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA4_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA4_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA5_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA5_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA5_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA5_HMC1 DRAM botm	74	84	98	98	105

105	110					
FPC 0 EA5_HMC2	Logic die	79	89	103	103	110
110	115					
FPC 0 EA5_HMC2	DRAM botm	74	84	98	98	105
105	110					
FPC 2 Intake-A	Temp Sensor	52	62	72	72	85
85	90					
FPC 2 Exhaust-A	Temp Sensor	75	85	98	98	103
103	108					
FPC 2 Exhaust-B	Temp Sensor	75	85	98	98	103
103	108					
FPC 2 EA0	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA0_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA0_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA1	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA1_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA1_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA2	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA2_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA2_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA3	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA3_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA3_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA4	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA4_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA4_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA5	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA5_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA5_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA0_HMC0	Logic die	79	89	103	103	110
110	115					
FPC 2 EA0_HMC0	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA0_HMC1	Logic die	79	89	103	103	110
110	115					
FPC 2 EA0_HMC1	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA0_HMC2	Logic die	79	89	103	103	110
110	115					
FPC 2 EA0_HMC2	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA1_HMC0	Logic die	79	89	103	103	110

110	115				
FPC 2 EA1_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA1_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA1_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA1_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA1_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA2_HMC0	Logic die	79	89	103	103 110
110	115				
FPC 2 EA2_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA2_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA2_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA2_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA2_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA3_HMC0	Logic die	79	89	103	103 110
110	115				
FPC 2 EA3_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA3_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA3_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA3_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA3_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA4_HMC0	Logic die	79	89	103	103 110
110	115				
FPC 2 EA4_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA4_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA4_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA4_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA4_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA5_HMC0	Logic die	79	89	103	103 110
110	115				
FPC 2 EA5_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA5_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA5_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA5_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA5_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 3 Intake-A	Temp Sensor	52	62	72	72 85

85	90				
FPC 3 Exhaust-A Temp Sensor	75	85	98	98	103
103 108					
FPC 3 Exhaust-B Temp Sensor	75	85	98	98	103
103 108					
FPC 3 EA0 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA0_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA0_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA1 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA1_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA1_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA2 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA2_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA2_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA3 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA3_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA3_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA4 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA4_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA4_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA5 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA5_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA5_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA0_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 3 EA0_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA0_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 3 EA0_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA0_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 3 EA0_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA1_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 3 EA1_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA1_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 3 EA1_HMC1 DRAM botm	74	84	98	98	105

105	110				
FPC 3 EA1_HMC2 Logic die	79	89	103	103	110
110	115				
FPC 3 EA1_HMC2 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA2_HMC0 Logic die	79	89	103	103	110
110	115				
FPC 3 EA2_HMC0 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA2_HMC1 Logic die	79	89	103	103	110
110	115				
FPC 3 EA2_HMC1 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA2_HMC2 Logic die	79	89	103	103	110
110	115				
FPC 3 EA2_HMC2 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA3_HMC0 Logic die	79	89	103	103	110
110	115				
FPC 3 EA3_HMC0 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA3_HMC1 Logic die	79	89	103	103	110
110	115				
FPC 3 EA3_HMC1 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA3_HMC2 Logic die	79	89	103	103	110
110	115				
FPC 3 EA3_HMC2 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA4_HMC0 Logic die	79	89	103	103	110
110	115				
FPC 3 EA4_HMC0 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA4_HMC1 Logic die	79	89	103	103	110
110	115				
FPC 3 EA4_HMC1 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA4_HMC2 Logic die	79	89	103	103	110
110	115				
FPC 3 EA4_HMC2 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA5_HMC0 Logic die	79	89	103	103	110
110	115				
FPC 3 EA5_HMC0 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA5_HMC1 Logic die	79	89	103	103	110
110	115				
FPC 3 EA5_HMC1 DRAM botm	74	84	98	98	105
105	110				
FPC 3 EA5_HMC2 Logic die	79	89	103	103	110
110	115				
FPC 3 EA5_HMC2 DRAM botm	74	84	98	98	105
105	110				
SFB 0 Intake-A	65	75	85	85	95
95	105				
SFB 0 Intake-B	65	75	85	85	95
95	105				
SFB 0 Exhaust-A	75	85	95	95	95
95	105				
SFB 0 Exhaust-B	75	85	95	95	95

95	105					
SFB 0 PF0		65	75	100	100	105
105	115					
SFB 0 PF1		65	75	100	100	105
105	115					
SFB 1 Intake-A		65	75	85	85	95
95	105					
SFB 1 Intake-B		65	75	85	85	95
95	105					
SFB 1 Exhaust-A		75	85	95	95	95
95	105					
SFB 1 Exhaust-B		75	85	95	95	95
95	105					
SFB 1 PF0		65	75	100	100	105
105	115					
SFB 1 PF1		65	75	100	100	105
105	115					
SFB 2 Intake-A		65	75	85	85	95
95	105					
SFB 2 Intake-B		65	75	85	85	95
95	105					
SFB 2 Exhaust-A		75	85	95	95	95
95	105					
SFB 2 Exhaust-B		75	85	95	95	95
95	105					
SFB 2 PF0		65	75	100	100	105
105	115					
SFB 2 PF1		65	75	100	100	105
105	115					
SFB 3 Intake-A		65	75	85	85	95
95	105					
SFB 3 Intake-B		65	75	85	85	95
95	105					
SFB 3 Exhaust-A		75	85	95	95	95
95	105					
SFB 3 Exhaust-B		75	85	95	95	95
95	105					
SFB 3 PF0		65	75	100	100	105
105	115					
SFB 3 PF1		65	75	100	100	105
105	115					
SFB 4 Intake-A		65	75	85	85	95
95	105					
SFB 4 Intake-B		65	75	85	85	95
95	105					
SFB 4 Exhaust-A		75	85	95	95	95
95	105					
SFB 4 Exhaust-B		75	85	95	95	95
95	105					
SFB 4 PF0		65	75	100	100	105
105	115					
SFB 4 PF1		65	75	100	100	105
105	115					
SFB 5 Intake-A		65	75	85	85	95
95	105					
SFB 5 Intake-B		65	75	85	85	95
95	105					
SFB 5 Exhaust-A		75	85	95	95	95
95	105					
SFB 5 Exhaust-B		75	85	95	95	95



95	105					
SFB 5 PF0		65	75	100	100	105
105	115					
SFB 5 PF1		65	75	100	100	105
105	115					

### show chassis temperature-thresholds (MX204 Router)

```
user@host> show chassis temperature-thresholds
```

Fire Shutdown		Fan speed		Yellow alarm		Red alarm
		(degrees C)		(degrees C)		(degrees
Item	(degrees C)	Normal	High	Normal	Bad fan	Normal
Bad fan	Normal					
Routing Engine		48	54	85	85	100
100	102					
CB Top Right Inlet Sensor		35	40	63	63	85
85	95					
CB Top Left Inlet Sensor		40	45	65	65	85
85	95					
CB Top Right Exhaust Sensor		45	50	68	68	85
85	95					
CB Top Left Exhaust Sensor		65	70	78	78	85
85	95					
CB CPU Core-0 Temp		65	70	80	80	90
90	100					
CB CPU Core-1 Temp		65	70	80	80	90
90	100					
CB CPU Core-2 Temp		65	70	80	80	90
90	100					
CB CPU Core-3 Temp		65	70	80	80	90
90	100					
CB CPU Core-4 Temp		65	70	80	80	90
90	100					
CB CPU Core-5 Temp		65	70	80	80	90
90	100					
CB CPU Core-6 Temp		65	70	80	80	90
90	100					
CB CPU Core-7 Temp		65	70	80	80	90
90	100					
FPC EA0_HMC0 Logic die		85	90	95	95	105
105	110					
FPC EA0_HMC0 DRAM botm		80	85	90	90	105
105	110					
FPC EA0_HMC1 Logic die		85	90	95	95	105
105	110					
FPC EA0_HMC1 DRAM botm		80	85	90	90	105
105	110					
FPC EA0 Chip		92	97	103	103	109
109	115					
FPC EA0-XR0 Chip		85	90	98	98	103
103	110					
FPC EA0-XR1 Chip		85	90	98	98	103
103	110					

## show chassis temperature-thresholds (PTX10008 Routers)

user@host&gt; show chassis temperature-thresholds

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0	48	54	85	85	100	100	
102							
Routing Engine 1	48	54	85	85	100	100	
102							
CB 0 Intake Temp Sensor	30	35	80	80	85	85	
95							
CB 0 Exhaust Temp Sensor	30	35	80	80	85	85	
95							
CB 0 CPU Die Temp Sensor	40	45	95	95	100	100	
110							
CB 1 Intake Temp Sensor	30	35	80	80	85	85	
95							
CB 1 Exhaust Temp Sensor	30	35	80	80	85	85	
95							
CB 1 CPU Die Temp Sensor	40	45	95	95	100	100	
110							
FPC 0 Intake-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Intake-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Exhaust-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Exhaust-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Exhaust-C Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 PE0 Temp Sensor	40	45	100	100	105	105	
115							
FPC 0 PE1 Temp Sensor	40	45	100	100	105	105	
115							
FPC 0 PE2 Temp Sensor	40	45	100	100	105	105	
115							
FPC 0 LCPU Temp Sensor	40	45	95	95	100	100	
110							
FPC 5 Intake-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Intake-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Exhaust-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Exhaust-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Exhaust-C Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 PE0 Temp Sensor	40	45	100	100	105	105	
115							
FPC 5 PE1 Temp Sensor	40	45	100	100	105	105	
115							
FPC 5 PE2 Temp Sensor	40	45	100	100	105	105	
115							
FPC 5 PE3 Temp Sensor	40	45	100	100	105	105	

115							
FPC 5	PE4 Temp Sensor	40	45	100	100	105	105
115							
FPC 5	PE5 Temp Sensor	40	45	100	100	105	105
115							
FPC 5	LCPU Temp Sensor	40	45	95	95	100	100
110							
FPC 6	Intake-A Temp Sensor	30	35	80	80	85	85
95							
FPC 6	Intake-B Temp Sensor	30	35	80	80	85	85
95							
FPC 6	Exhaust-A Temp Sensor	30	35	80	80	85	85
95							
FPC 6	Exhaust-B Temp Sensor	30	35	80	80	85	85
95							
FPC 6	Exhaust-C Temp Sensor	30	35	80	80	85	85
95							
FPC 6	PE0 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE1 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE2 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE3 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE4 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE5 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	LCPU Temp Sensor	40	45	95	95	100	100
110							
SIB 0	Intake-A Temp Sensor	40	45	90	90	95	95
105							
SIB 0	Intake-B Temp Sensor	40	45	90	90	95	95
105							
SIB 0	Exhaust-A Temp Sensor	40	45	90	90	95	95
105							
SIB 0	Exhaust-B Temp Sensor	40	45	90	90	95	95
105							
SIB 0	PF0 Temp Sensor	50	55	100	100	105	105
115							
SIB 0	PF1 Temp Sensor	50	55	100	100	105	105
115							
SIB 1	Intake-A Temp Sensor	40	45	90	90	95	95
105							
SIB 1	Intake-B Temp Sensor	40	45	90	90	95	95
105							
SIB 1	Exhaust-A Temp Sensor	40	45	90	90	95	95
105							
SIB 1	Exhaust-B Temp Sensor	40	45	90	90	95	95
105							
SIB 1	PF0 Temp Sensor	50	55	100	100	105	105
115							
SIB 1	PF1 Temp Sensor	50	55	100	100	105	105
115							

#### show chassis temperature-thresholds (T4000 Core Routers)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed		Yellow alarm		Red alarm		Fire Shutdown
	(degrees C)		(degrees C)		(degrees C)		(degrees C)
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal
Chassis default	48	54	65	55	75	65	100
Routing Engine 0	55	65	85	85	100	100	102
Routing Engine 1	55	65	85	85	100	100	102
FPC 0	63	68	75	70	90	83	95
FPC 3	63	68	75	70	90	83	95
FPC 5	56	62	75	63	83	76	95
FPC 6	63	68	75	70	90	83	95
SIB 0	64	70	76	72	87	84	95
SIB 1	64	70	76	72	87	84	95
SIB 2	64	70	76	72	87	84	95
SIB 3	64	70	76	72	87	84	95
SIB 4	64	70	76	72	87	84	95

### show chassis temperature-thresholds (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds
```

```
sfc0-re0:
```

Item	Fan speed		Yellow alarm		Red alarm	
	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
SIB F13 0	64	70	76	72	90	84
SIB F13 3	64	70	76	72	90	84
SIB F13 6	64	70	76	72	90	84
SIB F13 8	64	70	76	72	90	84
SIB F13 11	64	70	76	72	90	84
SIB F13 12	64	70	76	72	90	84
SIB F2S 16	64	70	76	72	90	84
SIB F2S 17	64	70	76	72	90	84
SIB F2S 18	64	70	76	72	90	84
SIB F2S 19	64	70	76	72	90	84
SIB F2S 20	64	70	76	72	90	84
SIB F2S 21	64	70	76	72	90	84
SIB F2S 22	64	70	76	72	90	84
SIB F2S 23	64	70	76	72	90	84
SIB F2S 24	64	70	76	72	90	84
SIB F2S 25	64	70	76	72	90	84
SIB F2S 26	64	70	76	72	90	84
SIB F2S 27	64	70	76	72	90	84
SIB F2S 28	64	70	76	72	90	84
SIB F2S 29	64	70	76	72	90	84
SIB F2S 30	64	70	76	72	90	84
SIB F2S 31	64	70	76	72	90	84
SIB F2S 32	64	70	76	72	90	84
SIB F2S 33	64	70	76	72	90	84
SIB F2S 34	64	70	76	72	90	84
SIB F2S 35	64	70	76	72	90	84

```
lcc0-re0:
```

Fan speed		Yellow alarm		Red alarm	
-----------	--	--------------	--	-----------	--

Item	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
FPC 7	56	62	75	63	83	76
SIB 0	48	54	65	60	80	75
SIB 1	48	54	65	60	80	75
SIB 2	48	54	65	60	80	75
SIB 3	48	54	65	60	80	75
SIB 4	48	54	65	60	80	75

lcc1-re0:

---

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
...						

### show chassis temperature-thresholds lcc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds lcc 1
```

lcc1-re0:

---

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
SIB 0	48	54	65	60	80	75
SIB 1	48	54	65	60	80	75
SIB 2	48	54	65	60	80	75
SIB 3	48	54	65	60	80	75
SIB 4	48	54	65	60	80	75

### show chassis temperature-thresholds sfc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds sfc 0
```

sfc0-re0:

---

Fan speed		Yellow alarm		Red alarm	
-----------	--	--------------	--	-----------	--

Item	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
SIB F13 0	64	70	76	72	90	84
SIB F13 3	64	70	76	72	90	84
SIB F13 6	64	70	76	72	90	84
SIB F13 8	64	70	76	72	90	84
SIB F13 11	64	70	76	72	90	84
SIB F13 12	64	70	76	72	90	84
SIB F2S 16	64	70	76	72	90	84
SIB F2S 17	64	70	76	72	90	84
SIB F2S 18	64	70	76	72	90	84
SIB F2S 19	64	70	76	72	90	84
SIB F2S 20	64	70	76	72	90	84
SIB F2S 21	64	70	76	72	90	84
SIB F2S 22	64	70	76	72	90	84
SIB F2S 23	64	70	76	72	90	84
SIB F2S 24	64	70	76	72	90	84
SIB F2S 25	64	70	76	72	90	84
SIB F2S 26	64	70	76	72	90	84
SIB F2S 27	64	70	76	72	90	84
SIB F2S 28	64	70	76	72	90	84
SIB F2S 29	64	70	76	72	90	84
SIB F2S 30	64	70	76	72	90	84
SIB F2S 31	64	70	76	72	90	84
SIB F2S 32	64	70	76	72	90	84
SIB F2S 33	64	70	76	72	90	84
SIB F2S 34	64	70	76	72	90	84
SIB F2S 35	64	70	76	72	90	84

### show chassis temperature-thresholds (TX Matrix Plus routers with 3D SIBs)

```
user@host> show chassis temperature-thresholds
```

```
sfc0-re0:
```

Shutdown (degrees C) Item	Fan speed		Yellow alarm		Red alarm		Fire
	(degrees C)		(degrees C)		(degrees C)		
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Chassis default	48	54	65	55	75	65	
100							
Routing Engine 0	70	75	90	87	102	97	
115							
Routing Engine 1	70	75	90	87	102	97	
115							
SIB F13 0 Board	60	65	78	75	85	80	
95							
SIB F13 0 XF Junction	70	75	82	74	105	100	
107							
SIB F13 4 Board	60	65	78	75	85	80	
95							
SIB F13 4 XF Junction	70	75	82	74	105	100	
107							
SIB F13 6 Board	60	65	78	75	85	80	
95							

SIB F13 6 XF Junction 107	70	75	82	74	105	100	
SIB F2S 16 Board 95	60	65	78	75	85	80	
SIB F2S 16 XF Junction 107	70	75	82	74	105	100	
SIB F2S 17 Board 95	60	65	78	75	85	80	
SIB F2S 17 XF Junction 107	70	75	82	74	105	100	
SIB F2S 18 Board 95	60	65	78	75	85	80	
SIB F2S 18 XF Junction 107	70	75	82	74	105	100	
SIB F2S 19 Board 95	60	65	78	75	85	80	
SIB F2S 19 XF Junction 107	70	75	82	74	105	100	
SIB F2S 24 Board 95	60	65	78	75	85	80	
SIB F2S 24 XF Junction 107	70	75	82	74	105	100	
SIB F2S 25 Board 95	60	65	78	75	85	80	
SIB F2S 25 XF Junction 107	70	75	82	74	105	100	
SIB F2S 26 Board 95	60	65	78	75	85	80	
SIB F2S 26 XF Junction 107	70	75	82	74	105	100	
SIB F2S 27 Board 95	60	65	78	75	85	80	
SIB F2S 27 XF Junction 107	70	75	82	74	105	100	
lcc0-re0:							
-----							
Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Chassis default 100	48	54	65	55	75	65	
Routing Engine 0 102	55	65	85	85	100	100	
FPC 0 95	63	68	75	70	90	83	
FPC 1 95	56	62	75	63	83	76	
FPC 7 95	56	62	75	63	83	76	
SIB 0 95	64	70	76	72	87	84	
SIB 0 ASIC Junction 107	63	68	75	70	105	100	
SIB 2 95	64	70	76	72	87	84	
SIB 2 ASIC Junction	63	68	75	70	105	100	

107						
SIB 3	64	70	76	72	87	84
95						
SIB 3 ASIC Junction	63	68	75	70	105	100
107						

### show chassis temperature-thresholds (QFX3500 Switch and QFX3600)

```
user@switch> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
rmal						
FPC Sensor TopLeft I	48	56	53	43	56	46
FPC Sensor TopRight I	46	54	51	41	54	44
FPC Sensor TopLeft E	58	65	62	52	65	55
FPC Sensor TopRight E	56	64	61	51	64	54
FPC Sensor TopMiddle I	58	64	61	51	64	54
FPC Sensor TopMiddle E	67	74	71	61	74	64
FPC Sensor Bottom I	59	67	64	54	67	57
FPC Sensor Bottom E	66	73	70	60	73	63
FPC Sensor Die Temp	69	75	72	62	75	65
FPC Sensor Mgmt Brd I	46	54	51	41	54	44
FPC Sensor Switch I	56	63	60	50	63	53

### show chassis temperature-thresholds interconnect-device (QFabric System)

```
user@switch> show chassis temperature-thresholds interconnect-device interconnect1
```

Item	Fan speed		Yellow alarm		Red alarm	
	Normal	High	Normal	Bad fan	Normal	Bad fan
temperature-thresholds interconnect-device interconnect1						
Chassis default	48	54	65	55	75	65

### show chassis temperature-thresholds (PTX5000 Packet Transport Router)

```
user@switch> show chassis temperature-thresholds
```

```
user@switch> show chassis temperature-thresholds
```

Item	Fan speed		Yellow alarm		Red alarm		Fire
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Shutdown							
(degrees C)							
Routing Engine 0	80	90	95	85	105	95	
115							
CB 0 Exhaust A	60	65	78	75	85	80	
95							
CB 0 Exhaust B	60	65	78	75	85	80	
95							
CB 1 Exhaust A	60	65	78	75	85	80	
95							
CB 1 Exhaust B	60	65	78	75	85	80	
95							
FPC 3 Exhaust A	80	90	95	85	105	95	
115							



FPC 3 Exhaust B 115	80	90	95	85	105	95
FPC 3 TL5 115	80	90	95	85	105	95
FPC 3 TQ5 115	80	90	95	85	105	95
FPC 3 TL6 115	80	90	95	85	105	95
FPC 3 TQ6 115	80	90	95	85	105	95
FPC 3 TL1 115	80	90	95	85	105	95
FPC 3 TQ1 115	80	90	95	85	105	95
FPC 3 TL2 115	80	90	95	85	105	95
FPC 3 TQ2 115	80	90	95	85	105	95
FPC 3 TL4 115	80	90	95	85	105	95
FPC 3 TQ4 115	80	90	95	85	105	95
FPC 3 TL7 115	80	90	95	85	105	95
FPC 3 TQ7 115	80	90	95	85	105	95
FPC 3 TL0 115	80	90	95	85	105	95
FPC 3 TQ0 115	80	90	95	85	105	95
FPC 3 TL3 115	80	90	95	85	105	95
FPC 3 TQ3 115	80	90	95	85	105	95
SIB 0 Exhaust 95	60	65	78	75	85	80
SIB 0 Junction 115	75	80	90	85	105	95
SIB 1 Exhaust 95	60	65	78	75	85	80
SIB 1 Junction 115	75	80	90	85	105	95
SIB 2 Exhaust 95	60	65	78	75	85	80
SIB 2 Junction 115	75	80	90	85	105	95
SIB 3 Exhaust 95	60	65	78	75	85	80
SIB 3 Junction 115	75	80	90	85	105	95
SIB 4 Exhaust 95	60	65	78	75	85	80
SIB 4 Junction 115	75	80	90	85	105	95
SIB 5 Exhaust 95	60	65	78	75	85	80
SIB 5 Junction 115	75	80	90	85	105	95
SIB 6 Exhaust 95	60	65	78	75	85	80

SIB 6 Junction 115	75	80	90	85	105	95
SIB 7 Exhaust 95	60	65	78	75	85	80
SIB 7 Junction 115	75	80	90	85	105	95
SIB 8 Exhaust 95	60	65	78	75	85	80
SIB 8 Junction 115	75	80	90	85	105	95

### show chassis temperature-thresholds (PTX1000 Packet Transport Router)

```
user@host> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
FPC 0 Intake Temp Sensor 75	30	65	65	65	70	70	
FPC 0 Exhaust Temp Sensor 75	30	65	65	65	70	70	
FPC 0 Mezz Temp Sensor 0 75	30	65	65	65	70	70	
FPC 0 Mezz Temp Sensor 1 75	30	65	65	65	70	70	
FPC 0 PE2 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE1 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PF0 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE0 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE5 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE4 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PF1 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE3 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 CPU Die Temp Sensor 103	50	90	90	90	100	100	
FPC 0 OCX0 Temp Sensor 103	50	90	90	90	100	100	

### show chassis temperature-thresholds (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis temperature-thresholds
```

Fan speed (degrees C)	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
Item	Normal	High	Normal	Bad fan	Normal	Bad fan
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 0	55	60	75	65	90	80
95						
FPC 1	55	60	75	65	90	80
95						
FPC 2	55	60	75	65	90	80
95						
FPC 4	55	60	75	65	90	80
95						
FPC 5	55	60	75	65	90	80
95						

#### show chassis temperature-thresholds (EX9251 Switches)

```
user@switch> show chassis temperature-thresholds
```

Shutdown	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire
(degrees C)	Normal	High	Normal	Bad fan	Normal	Bad fan	
Item							
Normal							
Routing Engine			48	54	85	85	100
100	102						
CB Top Right Inlet Sensor			35	40	63	63	85
85	95						
CB Top Left Inlet Sensor			40	45	65	65	85
85	95						
CB Top Right Exhaust Sensor			45	50	68	68	85
85	95						
CB Top Left Exhaust Sensor			65	70	78	78	85
85	95						
CB CPU Core-0 Temp			65	70	80	80	90
90	100						
CB CPU Core-1 Temp			65	70	80	80	90
90	100						
CB CPU Core-2 Temp			65	70	80	80	90
90	100						
CB CPU Core-3 Temp			65	70	80	80	90
90	100						
CB CPU Core-4 Temp			65	70	80	80	90
90	100						
CB CPU Core-5 Temp			65	70	80	80	90
90	100						
CB CPU Core-6 Temp			65	70	80	80	90
90	100						
CB CPU Core-7 Temp			65	70	80	80	90
90	100						

FPC EA0_HMC0 Logic die	85	90	95	95	105
105 110					
FPC EA0_HMC0 DRAM botm	80	85	90	90	105
105 110					
FPC EA0_HMC1 Logic die	85	90	95	95	105
105 110					
FPC EA0_HMC1 DRAM botm	80	85	90	90	105
105 110					
FPC EA0 Chip	92	97	103	103	109
109 115					
FPC EA0-XR0 Chip	85	90	98	98	103
103 110					
FPC EA0-XR1 Chip	85	90	98	98	103
103 110					

### show chassis temperature-thresholds (EX9253 witches)

```
user@switch> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0			48	54	85	85	100
100 102							
CB 0 Exhaust Temp Sensor			60	65	75	75	85
85 95							
CB 0 Inlet Temp Sensor			60	65	75	75	85
85 95							
CB 0 CPU DIE Temp Sensor			83	90	98	98	105
105 110							
CB 1 Exhaust Temp Sensor			60	65	75	75	85
85 95							
CB 1 Inlet Temp Sensor			60	65	75	75	85
85 95							
CB 1 CPU DIE Temp Sensor			83	90	98	98	105
105 110							
FPC 0 Intake Temp Sensor			40	45	75	70	85
80 95							
FPC 0 Exhaust-A Temp Sensor			55	60	85	80	90
90 100							
FPC 0 Exhaust-B Temp Sensor			55	60	85	80	90
90 100							
FPC 0 EA0 Chip			87	92	97	97	105
105 110							
FPC 0 EA0-XR0 Chip			88	93	98	98	120
120 125							
FPC 0 EA0-XR1 Chip			88	93	98	98	120
120 125							
FPC 0 EA1 Chip			87	92	97	97	105
105 110							
FPC 0 EA1-XR0 Chip			88	93	98	98	120
120 125							
FPC 0 EA1-XR1 Chip			88	93	98	98	120
120 125							
FPC 0 EA2 Chip			87	92	97	97	105
105 110							

FPC 0 EA2-XR0 Chip	88	93	98	98	120
120 125					
FPC 0 EA2-XR1 Chip	88	93	98	98	120
120 125					
FPC 0 PF Chip	89	94	104	104	120
120 120					
FPC 0 EA0_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 0 EA0_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA0_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 0 EA0_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA0_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 0 EA0_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA1_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 0 EA1_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA1_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 0 EA1_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA1_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 0 EA1_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA2_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 0 EA2_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA2_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 0 EA2_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA2_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 0 EA2_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 1 Intake Temp Sensor	40	45	75	70	85
80 95					
FPC 1 Exhaust-A Temp Sensor	55	60	85	80	90
90 100					
FPC 1 Exhaust-B Temp Sensor	55	60	85	80	90
90 100					
FPC 1 EA0 Chip	87	92	97	97	105
105 110					
FPC 1 EA0-XR0 Chip	88	93	98	98	120
120 125					
FPC 1 EA0-XR1 Chip	88	93	98	98	120
120 125					
FPC 1 EA1 Chip	87	92	97	97	105
105 110					
FPC 1 EA1-XR0 Chip	88	93	98	98	120
120 125					
FPC 1 EA1-XR1 Chip	88	93	98	98	120
120 125					

FPC 1 EA2 Chip	87	92	97	97	105
105 110					
FPC 1 EA2-XR0 Chip	88	93	98	98	120
120 125					
FPC 1 EA2-XR1 Chip	88	93	98	98	120
120 125					
FPC 1 PF Chip	89	94	104	104	120
120 120					
FPC 1 EA0_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 1 EA0_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA0_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 1 EA0_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA0_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 1 EA0_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA1_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 1 EA1_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA1_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 1 EA1_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA1_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 1 EA1_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA2_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 1 EA2_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA2_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 1 EA2_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA2_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 1 EA2_HMC2 DRAM botm	83	88	98	98	120
120 125					

## show ethernet-switching table

<b>List of Syntax</b>	<a href="#">Syntax (QFX Series, QFabric, NFX Series and EX4600) on page 809</a> <a href="#">Syntax (EX Series) on page 809</a> <a href="#">Syntax (EX Series, MX Series and QFX Series) on page 809</a> <a href="#">Syntax (SRX Series) on page 809</a>
<b>Syntax (QFX Series, QFabric, NFX Series and EX4600)</b>	<pre>show ethernet-switching table &lt;brief   detail   extensive   summary&gt; &lt;interface <i>interface-name</i>&gt; &lt;management-vlan&gt; &lt;sort-by (<i>name</i>   <i>tag</i>)&gt; &lt;vlan <i>vlan-name</i>&gt;</pre>
<b>Syntax (EX Series)</b>	<pre>show ethernet-switching table &lt;brief   detail   extensive   summary&gt; &lt;interface <i>interface-name</i>&gt; &lt;management-vlan&gt; &lt;persistent-mac &lt;interface <i>interface-name</i>&gt;&gt; &lt;sort-by (<i>name</i>   <i>tag</i>)&gt; &lt;vlan <i>vlan-name</i>&gt;</pre>
<b>Syntax (EX Series, MX Series and QFX Series)</b>	<pre>show ethernet-switching table &lt;brief   count   detail   extensive   summary&gt; &lt;address&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; isis <i>isid</i> &lt;logical-system <i>logical-system-name</i>&gt; &lt;persistent-learning (interface <i>interface-name</i>   mac <i>mac-address</i>)&gt; &lt;address&gt; &lt;vlan-id (all-vlan   <i>vlan-id</i>)&gt; &lt;vlan-name (all   <i>vlan-name</i>)&gt;</pre>
<b>Syntax (SRX Series)</b>	<pre>show ethernet-switching table (brief   detail   extensive) interface <i>interface-name</i></pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 9.5 for SRX Series.</p> <p>Options <b>summary</b>, <b>management-vlan</b>, and <b>vlan <i>vlan-name</i></b> introduced in Junos OS Release 9.6 for EX Series switches.</p> <p>Option <b>sort-by</b> and field name <b>tag</b> introduced in Junos OS Release 10.1 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Output for private VLANs introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Option <b>persistent-mac</b> introduced in Junos OS Release 11.4 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.3R2.</p>

Command introduced in Junos OS Release 12.3R2 for EX Series switches.  
Options **logical-system**, **persistent-learning**, and **summary** introduced in Junos OS Release 13.2X50-D10 (ELS).

- Description** Displays the Ethernet switching table.
- (MX Series routers, EX Series switches only) Displays Layer 2 MAC address information.
- Options** For QFX Series, QFabric, NFX Series and EX4600:
- none**—(Optional) Display brief information about the Ethernet switching table.
- brief | detail | extensive | summary**—(Optional) Display the specified level of output.
- interface *interface-name***—(Optional) Display the Ethernet switching table for a specific interface.
- management-vlan**—(Optional) Display the Ethernet switching table for a management VLAN.
- persistent-mac <interface *interface-name*>**—(Optional) Display the persistent MAC addresses learned for all interfaces or a specified interface. You can use this command to view entries that you want to clear for an interface that you intentionally disabled.
- sort-by (*name* | *tag*)**—(Optional) Display VLANs in ascending order of VLAN IDs or VLAN names.
- vlan *vlan-name***—(Optional) Display the Ethernet switching table for a specific VLAN.
- For EX Series, MX Series and QFX Series:
- none**—Display all learned Layer 2 MAC address information.
- brief | count | detail | extensive | summary**—(Optional) Display the specified level of output.
- address**—(Optional) Display the specified learned Layer 2 MAC address information.
- instance *instance-name***—(Optional) Display learned Layer 2 MAC addresses for the specified routing instance.
- interface *interface-name***—(Optional) Display learned Layer 2 MAC addresses for the specified interface.
- isid *isid***—(Optional) Display learned Layer 2 MAC addresses for the specified ISID.
- logical-system *logical-system-name***—(Optional) Display Ethernet-switching statistics information for the specified logical system.
- persistent-learning (interface *interface-name* | mac *mac-address*)**—(Optional) Display dynamically learned MAC addresses that are retained despite device restarts and



interface failures for a specified interface, or information about a specified MAC address.

**vlan-id (all-vlan | *vlan-id*)**—(Optional) Display learned Layer 2 MAC addresses for all VLANs or for the specified VLAN.

**vlan-name (all | *vlan-name*)**—(Optional) Display learned Layer 2 MAC addresses for all VLANs or for the specified VLAN.

For SRX Series:

- **none**—(Optional) Display brief information about the Ethernet switching table.
- **brief | detail | extensive**—(Optional) Display the specified level of output.
- **interface-name**—(Optional) Display the Ethernet switching table for a specific interface.

**Additional Information** When Layer 2 protocol tunneling is enabled, the tunneling MAC address 01:00:0c:cd:cd:d0 is installed in the MAC table. When the Cisco Discovery Protocol (CDP), Spanning Tree Protocol (STP), or VLAN Trunk Protocol (VTP) is configured for Layer 2 protocol tunneling on an interface, the corresponding protocol MAC address is installed in the MAC table.

**Required Privilege Level** view

**Related Documentation**

- *Example: Setting Up Basic Bridging and a VLAN on Switches*
- *Example: Setting Up Bridging with Multiple VLANs*
- *Example: Setting Up Basic Bridging and a VLAN for an EX Series Switch*
- *Example: Setting Up Bridging with Multiple VLANs for EX Series Switches*
- *Example: Setting Up Q-in-Q Tunneling on EX Series Switches*
- *clear ethernet-switching table*
- *show ethernet-switching mac-learning-log*

**List of Sample Output** [show ethernet-switching table \(Enhanced Layer 2 Software on QFX Series, QFabric, NFX Series and EX460\) on page 815](#)  
[show ethernet-switching table \(QFX Series, QFabric, NFX Series and EX460\) on page 816](#)  
[show ethernet-switching table \(Private VLANs on QFX Series, QFabric, NFX Series and EX460\) on page 817](#)  
[show ethernet-switching table \(Junos Fusion Data Center with EVPN on QFX Series switches\) on page 817](#)  
[show ethernet-switching table brief \(QFX Series, QFabric, NFX Series and EX460\) on page 818](#)  
[show ethernet-switching table detail \(QFX Series, QFabric, NFX Series and EX460\) on page 819](#)  
[show ethernet-switching table extensive \(QFX Series, QFabric, NFX Series and EX460\) on page 820](#)

[show ethernet-switching table interface \(QFX Series, QFabric, NFX Series and EX460\) on page 822](#)  
[show ethernet-switching table \(EX Series switches\) on page 822](#)  
[show ethernet-switching table brief \(EX Series switches\) on page 823](#)  
[show ethernet-switching table detail \(EX Series switches\) on page 823](#)  
[show ethernet-switching table extensive \(EX Series switches\) on page 824](#)  
[show ethernet-switching table persistent-mac \(EX Series switches\) on page 824](#)  
[show ethernet-switching table persistent-mac interface ge-0/0/16.0 \(EX Series switches\) on page 825](#)  
[show ethernet-switching table \(EX Series, MX Series and QFX Series\) on page 825](#)  
[show ethernet-switching table brief on page 826](#)  
[show ethernet-switching table count on page 827](#)  
[show ethernet-switching table extensive on page 828](#)  
[show ethernet-switching table detail \(SRX Series\) on page 829](#)  
[show ethernet-switching table extensive \(SRX Series\) on page 830](#)  
[show ethernet-switching table interface ge-0/0/1 \(SRX Series\) on page 831](#)

**Output Fields** For QFX Series, QFabric, NFX Series and EX4600:

The following table lists the output fields for the **show ethernet-switching table** command on QFX Series, QFabric, NFX Series and EX4600. Output fields are listed in the approximate order in which they appear.

*Table 31: show ethernet-switching table Output Fields*

Field Name	Field Description	Level of Output
<b>VLAN</b>	Name of a VLAN.	All levels
<b>MAC address</b>	MAC address associated with the VLAN.	All levels
<b>Type</b>	Type of MAC address: <ul style="list-style-type: none"> <li><b>static</b>—The MAC address is manually created.</li> <li><b>learn</b>—The MAC address is learned dynamically from a packet's source MAC address.</li> <li><b>flood</b>—The MAC address is unknown and flooded to all members.</li> </ul>	All levels
<b>Age</b>	Time remaining before the entry ages out and is removed from the Ethernet switching table.	All levels
<b>Interfaces</b>	Interface associated with learned MAC addresses or with the <b>All-members</b> option (flood entry).	All levels
<b>Learned</b>	For learned entries, the time at which the entry was added to the Ethernet switching table.	<b>detail, extensive</b>

For EX Series switches:

The following table lists the output fields for the **show ethernet-switching table** command on EX Series switches. Output fields are listed in the approximate order in which they appear.

Table 32: show ethernet-switching table Output Fields

Field Name	Field Description	Level of Output
<b>VLAN</b>	The name of a VLAN.	All levels
<b>Tag</b>	The VLAN ID tag name or number.	<b>extensive</b>
<b>MAC or MAC address</b>	The MAC address associated with the VLAN.	All levels
<b>Type</b>	The type of MAC address. Values are: <ul style="list-style-type: none"> <li>• <b>static</b>—The MAC address is manually created.</li> <li>• <b>learn</b>—The MAC address is learned dynamically from a packet's source MAC address.</li> <li>• <b>flood</b>—The MAC address is unknown and flooded to all members.</li> <li>• <b>persistent</b>—The learned MAC addresses that will persist across restarts of the switch or interface-down events.</li> </ul>	All levels except <b>persistent-mac</b>
<b>Type</b>	The type of MAC address. Values are: <ul style="list-style-type: none"> <li>• <b>installed</b>—addresses that are in the Ethernet switching table.</li> <li>• <b>uninstalled</b>—addresses that could not be installed in the table or were uninstalled in an interface-down event and will be reinstalled in the table when the interface comes back up.</li> </ul>	<b>persistent-mac</b>
<b>Age</b>	The time remaining before the entry ages out and is removed from the Ethernet switching table.	All levels
<b>Interfaces</b>	Interface associated with learned MAC addresses or <b>All-members</b> (flood entry).	All levels
<b>Learned</b>	For learned entries, the time which the entry was added to the Ethernet switching table.	<b>detail, extensive</b>
<b>Nexthop index</b>	The next-hop index number.	<b>detail, extensive</b>
<b>persistent-mac</b>	<b>installed</b> indicates MAC addresses that are in the Ethernet switching table and <b>uninstalled</b> indicates MAC addresses that could not be installed in the table or were uninstalled in an interface-down event (and will be reinstalled in the table when the interface comes back up).	

For EX Series, MX Series and QFX Series:

The table describes the output fields for the **show ethernet-switching table** command on EX Series, MX Series and QFX Series. Output fields are listed in the approximate order in which they appear.

Table 33: show ethernet-switching table Output fields

Field Name	Field Description
<b>Routing instance</b>	Name of the routing instance.
<b>VLAN name</b>	Name of the VLAN.

**Table 33: show ethernet-switching table Output fields (continued)**

Field Name	Field Description
<b>MAC address</b>	MAC address or addresses learned on a logical interface.
<b>MAC flags</b>	Status of MAC address learning properties for each interface: <ul style="list-style-type: none"> <li>• <b>S</b>—Static MAC address is configured.</li> <li>• <b>D</b>—Dynamic MAC address is configured.</li> <li>• <b>L</b>—Locally learned MAC address is configured.</li> <li>• <b>SE</b>—MAC accounting is enabled.</li> <li>• <b>NM</b>—Non-configured MAC.</li> <li>• <b>R</b>—Locally learned MAC address is configured.</li> </ul>
<b>Age</b>	This field is not supported.
<b>Logical interface</b>	Name of the logical interface.
<b>Active source</b>	IP address of remote entity on which MAC address is learned.
<b>MAC count</b>	Number of MAC addresses learned on the specific routing instance or interface.
<b>Learning interface</b>	Name of the logical interface on which the MAC address was learned.
<b>Learning VLAN</b>	VLAN ID of the routing instance or VLAN in which the MAC address was learned.
<b>Layer 2 flags</b>	Debugging flags signifying that the MAC address is present in various lists.
<b>Epoch</b>	Spanning-tree-protocol epoch number identifying when the MAC address was learned. Used for debugging.
<b>Sequence number</b>	Sequence number assigned to this MAC address. Used for debugging.
<b>Learning mask</b>	Mask of the Packet Forwarding Engines where this MAC address was learned. Used for debugging.
<b>IPC generation</b>	Creation time of the logical interface when this MAC address was learned. Used for debugging.

For SRX Series:

[Table 34 on page 814](#) lists the output fields for the **show ethernet-switching table** command. Output fields are listed in the approximate order in which they appear.

**Table 34: show ethernet-switching table Output Fields**

Field Name	Field Description
<b>VLAN</b>	The name of a VLAN.

Table 34: show ethernet-switching table Output Fields (continued)

Field Name	Field Description
<b>MAC address</b>	The MAC address associated with the VLAN.
<b>Type</b>	The type of MAC address. Values are: <ul style="list-style-type: none"> <li>static—The MAC address is manually created.</li> <li>learn—The MAC address is learned dynamically from a packet's source MAC address.</li> <li>flood—The MAC address is unknown and flooded to all members.</li> </ul>
<b>Age</b>	The time remaining before the entry ages out and is removed from the Ethernet switching table.
<b>Interfaces</b>	Interface associated with learned MAC addresses or All-members (flood entry).
<b>Learned</b>	For learned entries, the time which the entry was added to the Ethernet switching table.

## Sample Output

### show ethernet-switching table (Enhanced Layer 2 Software on QFX Series, QFabric, NFX Series and EX460)

```

user@switch> show ethernet-switching table

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned, P - Persistent
static
      SE - statistics enabled, NM - non configured MAC, R - remote PE MAC,
O - ovsdb MAC)

Ethernet switching table : 2 entries, 2 learned
Routing instance : default-switch
  Vlan      MAC      MAC      Age   Logical
  name      address  flags
  vlan1     b0:c6:9a:ca:3c:01  D        -     ae1.0

  vlan1     b0:c6:9a:ca:3c:03  D        -     ae1.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned, P - Persistent
static
      SE - statistics enabled, NM - non configured MAC, R - remote PE MAC,
O - ovsdb MAC)

Ethernet switching table : 2 entries, 2 learned
Routing instance : default-switch
  Vlan      MAC      MAC      Age   Logical
  name      address  flags
  vlan10    b0:c6:9a:ca:3c:01  D        -     ae1.0

  vlan10    b0:c6:9a:ca:3c:03  D        -     ae1.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned, P - Persistent
static

```

SE - statistics enabled, NM - non configured MAC, R - remote PE MAC,  
O - ovssdb MAC)

Ethernet switching table : 2 entries, 2 learned

Routing instance : default-switch

Vlan name	MAC address	MAC flags	Age	Logical interface
vlan2	b0:c6:9a:ca:3c:01	D	-	ae1.0
vlan2	b0:c6:9a:ca:3c:03	D	-	ae1.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned, P - Persistent static

SE - statistics enabled, NM - non configured MAC, R - remote PE MAC,  
O - ovssdb MAC)

Ethernet switching table : 2 entries, 2 learned

Routing instance : default-switch

Vlan name	MAC address	MAC flags	Age	Logical interface
vlan3	b0:c6:9a:ca:3c:01	D	-	ae1.0
vlan3	b0:c6:9a:ca:3c:03	D	-	ae1.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned, P - Persistent static

SE - statistics enabled, NM - non configured MAC, R - remote PE MAC,  
O - ovssdb MAC)

Ethernet switching table : 2 entries, 2 learned

Routing instance : default-switch

Vlan name	MAC address	MAC flags	Age	Logical interface
vlan4	b0:c6:9a:ca:3c:01	D	-	ae1.0
vlan4	b0:c6:9a:ca:3c:03	D	-	ae1.0

### show ethernet-switching table (QFX Series, QFabric, NFX Series and EX460)

user@switch> show ethernet-switching table

Ethernet-switching table: 57 entries, 17 learned

VLAN	MAC address	Type	Age	Interfaces
F2	*	Flood	-	All-members
F2	00:00:05:00:00:03	Learn	0	xe-0/0/44.0
F2	00:19:e2:50:7d:e0	Static	-	Router
Linux	*	Flood	-	All-members
Linux	00:19:e2:50:7d:e0	Static	-	Router
Linux	00:30:48:90:54:89	Learn	0	xe-0/0/47.0
T1	*	Flood	-	All-members
T1	00:00:05:00:00:01	Learn	0	xe-0/0/46.0
T1	00:00:5e:00:01:00	Static	-	Router
T1	00:19:e2:50:63:e0	Learn	0	xe-0/0/46.0
T1	00:19:e2:50:7d:e0	Static	-	Router
T10	*	Flood	-	All-members

```

T10      00:00:5e:00:01:09 Static      - Router
T10      00:19:e2:50:63:e0 Learn       0 xe-0/0/46.0
T10      00:19:e2:50:7d:e0 Static      - Router
T111     *                               Flood      - All-members
T111     00:19:e2:50:63:e0 Learn       0 xe-0/0/15.0
T111     00:19:e2:50:7d:e0 Static      - Router
T111     00:19:e2:50:ac:00 Learn       0 xe-0/0/15.0
T2       *                               Flood      - All-members
T2       00:00:5e:00:01:01 Static      - Router
T2       00:19:e2:50:63:e0 Learn       0 xe-0/0/46.0
T2       00:19:e2:50:7d:e0 Static      - Router
T3       *                               Flood      - All-members
T3       00:00:5e:00:01:02 Static      - Router
T3       00:19:e2:50:63:e0 Learn       0 xe-0/0/46.0
T3       00:19:e2:50:7d:e0 Static      - Router
T4       *                               Flood      - All-members
T4       00:00:5e:00:01:03 Static      - Router
T4       00:19:e2:50:63:e0 Learn       0 xe-0/0/46.0
[output truncated]

```

### show ethernet-switching table (Private VLANs on QFX Series, QFabric, NFX Series and EX460)

```
user@switch> show ethernet-switching table
```

```

Ethernet-switching table: 10 entries, 3 learned
VLAN      MAC address      Type      Age  Interfaces
pvlan     *                Flood     -    All-members
pvlan     00:10:94:00:00:02 Replicated -    xe-0/0/28.0
pvlan     00:10:94:00:00:35 Replicated -    xe-0/0/46.0
pvlan     00:10:94:00:00:46 Replicated -    xe-0/0/4.0
c2        *                Flood     -    All-members
c2        00:10:94:00:00:02 Learn       0    xe-0/0/28.0
c1        *                Flood     -    All-members
c1        00:10:94:00:00:46 Learn       0    xe-0/0/4.0
__pvlan_pvlan_xe-0/0/46.0__ *          Flood     -    All-members
__pvlan_pvlan_xe-0/0/46.0__ 00:10:94:00:00:35 Learn       0    xe-0/0/46.0

```

### show ethernet-switching table (Junos Fusion Data Center with EVPN on QFX Series switches)

```
user@switch> show ethernet-switching table
```

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned, P - Persistent static

SE - statistics enabled, NM - non configured MAC, R - remote PE MAC, 0 - ovsdb MAC)

Ethernet switching table : 30 entries, 30 learned

Routing instance : default-switch

Vlan	MAC	MAC	Logical	Active
name	address	flags	interface	source
v100	00:31:46:e8:f9:d6	D	vtep.32768	
192.168.2.22				
v100	7c:e2:ca:e2:75:7c	D	vtep.32771	
192.168.4.44				
v100	7c:e2:ca:e4:05:9a	D	vtep.32770	
192.168.3.33				
v101	00:31:46:e8:f9:d6	D	vtep.32768	

192.168.2.22			
v101	7c:e2:ca:e2:75:7c	D	vtep.32771
192.168.4.44			
v101	7c:e2:ca:e4:05:9a	D	vtep.32770
192.168.3.33			
v102	00:31:46:e8:f9:d6	D	vtep.32768
192.168.2.22			
v102	7c:e2:ca:e2:75:7c	D	vtep.32771
192.168.4.44			
v102	7c:e2:ca:e4:05:9a	D	vtep.32770
192.168.3.33			
v103	00:31:46:e8:f9:d6	D	vtep.32768
192.168.2.22			
v103	7c:e2:ca:e2:75:7c	D	vtep.32771
192.168.4.44			
v103	7c:e2:ca:e4:05:9a	D	vtep.32770
192.168.3.33			
v3001	00:31:46:e8:f9:d6	D	vtep.32768
192.168.2.22			
v3001	28:c0:da:6a:9f:c2	DL	ae11.0
v3001	7c:e2:ca:e2:75:7c	D	vtep.32771
192.168.4.44			
v3001	7c:e2:ca:e4:05:9a	D	vtep.32770
192.168.3.33			
v3002	00:31:46:e8:f9:d6	D	vtep.32768
192.168.2.22			
v3002	7c:e2:ca:e2:75:7c	D	vtep.32771
192.168.4.44			
v3002	7c:e2:ca:e4:05:9a	D	vtep.32770
192.168.3.33			
v3003	00:31:46:e8:f9:d6	D	vtep.32768
192.168.2.22			
v3003	28:c0:da:6a:9f:c2	DL	ae11.0
v3003	7c:e2:ca:e2:75:7c	D	vtep.32771
192.168.4.44			
v3003	7c:e2:ca:e4:05:9a	D	vtep.32770
192.168.3.33			
v3004	00:31:46:e8:f9:d6	D	vtep.32768
192.168.2.22			
v3004	7c:e2:ca:e2:75:7c	D	vtep.32771
192.168.4.44			
v3004	7c:e2:ca:e4:05:9a	D	vtep.32770
192.168.3.33			
v3005	00:31:46:e8:f9:d6	D	vtep.32768
192.168.2.22			
v3005	28:c0:da:6a:9f:c2	DL	ae11.0
v3005	7c:e2:ca:e2:75:7c	D	vtep.32771
192.168.4.44			
v3005	7c:e2:ca:e4:05:9a	D	vtep.32770
192.168.3.33			

#### show ethernet-switching table brief (QFX Series, QFabric, NFX Series and EX460)

```
user@switch> show ethernet-switching table brief
```

```
Ethernet-switching table: 57 entries, 17 learned
```

VLAN	MAC address	Type	Age	Interfaces
F2	*	Flood		- All-members
F2	00:00:05:00:00:03	Learn	0	xe-0/0/44.0
F2	00:19:e2:50:7d:e0	Static		- Router



```

Linux      *      Flood      - All-members
Linux      00:19:e2:50:7d:e0 Static - Router
Linux      00:30:48:90:54:89 Learn  0 xe-0/0/47.0
T1         *      Flood      - All-members
T1         00:00:05:00:00:01 Learn  0 xe-0/0/46.0
T1         00:00:5e:00:01:00 Static - Router
T1         00:19:e2:50:63:e0 Learn  0 xe-0/0/46.0
T1         00:19:e2:50:7d:e0 Static - Router
T10        *      Flood      - All-members
T10        00:00:5e:00:01:09 Static - Router
T10        00:19:e2:50:63:e0 Learn  0 xe-0/0/46.0
T10        00:19:e2:50:7d:e0 Static - Router
T111       *      Flood      - All-members
T111       00:19:e2:50:63:e0 Learn  0 xe-0/0/15.0
T111       00:19:e2:50:7d:e0 Static - Router
T111       00:19:e2:50:ac:00 Learn  0 xe-0/0/15.0
T2         *      Flood      - All-members
T2         00:00:5e:00:01:01 Static - Router
T2         00:19:e2:50:63:e0 Learn  0 xe-0/0/46.0
T2         00:19:e2:50:7d:e0 Static - Router
T3         *      Flood      - All-members
T3         00:00:5e:00:01:02 Static - Router
T3         00:19:e2:50:63:e0 Learn  0 xe-0/0/46.0
T3         00:19:e2:50:7d:e0 Static - Router
T4         *      Flood      - All-members
T4         00:00:5e:00:01:03 Static - Router
T4         00:19:e2:50:63:e0 Learn  0 xe-0/0/46.0
[output truncated]

```

### show ethernet-switching table detail (QFX Series, QFabric, NFX Series and EX460)

```

user@switch> show ethernet-switching table detail

Ethernet-switching table: 57 entries, 17 learned
F2, *
  Interface(s): xe-0/0/44.0
  Type: Flood
  Nexthop index: 0

F2, 00:00:05:00:00:03
  Interface(s): xe-0/0/44.0
  Type: Learn, Age: 0, Learned: 2:03:09
  Nexthop index: 0

F2, 00:19:e2:50:7d:e0
  Interface(s): Router
  Type: Static
  Nexthop index: 0

Linux, *
  Interface(s): xe-0/0/47.0
  Type: Flood
  Nexthop index: 0

Linux, 00:19:e2:50:7d:e0
  Interface(s): Router
  Type: Static
  Nexthop index: 0

Linux, 00:30:48:90:54:89

```

```

Interface(s): xe-0/0/47.0
Type: Learn, Age: 0, Learned: 2:03:08
Nexthop index: 0

T1, *
Interface(s): xe-0/0/46.0
Type: Flood
Nexthop index: 0

T1, 00:00:05:00:00:01
Interface(s): xe-0/0/46.0
Type: Learn, Age: 0, Learned: 2:03:07
Nexthop index: 0

T1, 00:00:5e:00:01:00
Interface(s): Router
Type: Static
Nexthop index: 0

T1, 00:19:e2:50:63:e0
Interface(s): xe-0/0/46.0
Type: Learn, Age: 0, Learned: 2:03:07
Nexthop index: 0

T1, 00:19:e2:50:7d:e0
Interface(s): Router
Type: Static
Nexthop index: 0

T10, *
Interface(s): xe-0/0/46.0
Type: Flood
Nexthop index: 0

T10, 00:00:5e:00:01:09
Interface(s): Router
Type: Static
Nexthop index: 0

T10, 00:19:e2:50:63:e0
Interface(s): xe-0/0/46.0
Type: Learn, Age: 0, Learned: 2:03:08
Nexthop index: 0

T10, 00:19:e2:50:7d:e0
Interface(s): Router
Type: Static
Nexthop index: 0

T111, *
Interface(s): xe-0/0/15.0
Type: Flood
Nexthop index: 0
[output truncated]

```

### show ethernet-switching table extensive (QFX Series, QFabric, NFX Series and EX460)

```
user@switch> show ethernet-switching table extensive
```

Ethernet-switching table: 57 entries, 17 learned

F2, \*

Interface(s): xe-0/0/44.0  
Type: Flood  
Nexthop index: 0

F2, 00:00:05:00:00:03

Interface(s): xe-0/0/44.0  
Type: Learn, Age: 0, Learned: 2:03:09  
Nexthop index: 0

F2, 00:19:e2:50:7d:e0

Interface(s): Router  
Type: Static  
Nexthop index: 0

Linux, \*

Interface(s): xe-0/0/47.0  
Type: Flood  
Nexthop index: 0

Linux, 00:19:e2:50:7d:e0

Interface(s): Router  
Type: Static  
Nexthop index: 0

Linux, 00:30:48:90:54:89

Interface(s): xe-0/0/47.0  
Type: Learn, Age: 0, Learned: 2:03:08  
Nexthop index: 0

T1, \*

Interface(s): xe-0/0/46.0  
Type: Flood  
Nexthop index: 0

T1, 00:00:05:00:00:01

Interface(s): xe-0/0/46.0  
Type: Learn, Age: 0, Learned: 2:03:07  
Nexthop index: 0

T1, 00:00:5e:00:01:00

Interface(s): Router  
Type: Static  
Nexthop index: 0

T1, 00:19:e2:50:63:e0

Interface(s): xe-0/0/46.0  
Type: Learn, Age: 0, Learned: 2:03:07  
Nexthop index: 0

T1, 00:19:e2:50:7d:e0

Interface(s): Router  
Type: Static  
Nexthop index: 0

T10, \*

Interface(s): xe-0/0/46.0  
Type: Flood  
Nexthop index: 0

```

T10, 00:00:5e:00:01:09
  Interface(s): Router
  Type: Static
  Nexthop index: 0

T10, 00:19:e2:50:63:e0
  Interface(s): xe-0/0/46.0
  Type: Learn, Age: 0, Learned: 2:03:08
  Nexthop index: 0

T10, 00:19:e2:50:7d:e0
  Interface(s): Router
  Type: Static
  Nexthop index: 0

T111, *
  Interface(s): xe-0/0/15.0
  Type: Flood
  Nexthop index: 0
[output truncated]

```

#### show ethernet-switching table interface (QFX Series, QFabric, NFX Series and EX460)

```
user@switch> show ethernet-switching table interface xe-0/0/1
```

```
Ethernet-switching table: 1 unicast entries
```

VLAN	MAC address	Type	Age	Interfaces
V1	*	Flood		- All-members
V1	00:00:05:00:00:05	Learn	0	xe-0/0/1.0

#### show ethernet-switching table (EX Series switches)

```
user@switch> show ethernet-switching table
```

```
Ethernet-switching table: 57 entries, 15 learned, 2 persistent
```

VLAN	MAC address	Type	Age	Interfaces
F2	*	Flood		- All-members
F2	00:00:05:00:00:03	Learn	0	ge-0/0/44.0
F2	00:19:e2:50:7d:e0	Static		- Router
Linux	*	Flood		- All-members
Linux	00:19:e2:50:7d:e0	Static		- Router
Linux	00:30:48:90:54:89	Learn	0	ge-0/0/47.0
T1	*	Flood		- All-members
T1	00:00:05:00:00:01	Persistent	0	ge-0/0/46.0
T1	00:00:5e:00:01:00	Static		- Router
T1	00:19:e2:50:63:e0	Persistent	0	ge-0/0/46.0
T1	00:19:e2:50:7d:e0	Static		- Router
T10	*	Flood		- All-members
T10	00:00:5e:00:01:09	Static		- Router
T10	00:19:e2:50:63:e0	Learn	0	ge-0/0/46.0
T10	00:19:e2:50:7d:e0	Static		- Router
T111	*	Flood		- All-members
T111	00:19:e2:50:63:e0	Learn	0	ge-0/0/15.0
T111	00:19:e2:50:7d:e0	Static		- Router
T111	00:19:e2:50:ac:00	Learn	0	ge-0/0/15.0
T2	*	Flood		- All-members
T2	00:00:5e:00:01:01	Static		- Router
T2	00:19:e2:50:63:e0	Learn	0	ge-0/0/46.0

```

T2          00:19:e2:50:7d:e0 Static      - Router
T3          *                      Flood    - All-members
T3          00:00:5e:00:01:02 Static      - Router
T3          00:19:e2:50:63:e0 Learn       0 ge-0/0/46.0
T3          00:19:e2:50:7d:e0 Static      - Router
T4          *                      Flood    - All-members
T4          00:00:5e:00:01:03 Static      - Router
T4          00:19:e2:50:63:e0 Learn       0 ge-0/0/46.0
[output truncated]

```

### show ethernet-switching table brief (EX Series switches)

```

user@switch> show ethernet-switching table brief

Ethernet-switching table: 57 entries, 15 learned, 2 persistent entries
VLAN      MAC address      Type      Age Interfaces
F2        *              Flood     - All-members
F2        00:00:05:00:00:03 Learn     0 ge-0/0/44.0
F2        00:19:e2:50:7d:e0 Static    - Router
Linux     *              Flood     - All-members
Linux     00:19:e2:50:7d:e0 Static    - Router
Linux     00:30:48:90:54:89 Learn     0 ge-0/0/47.0
T1        *              Flood     - All-members
T1        00:00:05:00:00:01 Persistent 0 ge-0/0/46.0
T1        00:00:5e:00:01:00 Static    - Router
T1        00:19:e2:50:63:e0 Persistent 0 ge-0/0/46.0
T1        00:19:e2:50:7d:e0 Static    - Router
T10       *              Flood     - All-members
T10       00:00:5e:00:01:09 Static    - Router
T10       00:19:e2:50:63:e0 Learn     0 ge-0/0/46.0
T10       00:19:e2:50:7d:e0 Static    - Router
T111      *              Flood     - All-members
T111      00:19:e2:50:63:e0 Learn     0 ge-0/0/15.0
T111      00:19:e2:50:7d:e0 Static    - Router
T111      00:19:e2:50:ac:00 Learn     0 ge-0/0/15.0
T2        *              Flood     - All-members
T2        00:00:5e:00:01:01 Static    - Router
T2        00:19:e2:50:63:e0 Learn     0 ge-0/0/46.0
T2        00:19:e2:50:7d:e0 Static    - Router
T3        *              Flood     - All-members
T3        00:00:5e:00:01:02 Static    - Router
T3        00:19:e2:50:63:e0 Learn     0 ge-0/0/46.0
T3        00:19:e2:50:7d:e0 Static    - Router
T4        *              Flood     - All-members
T4        00:00:5e:00:01:03 Static    - Router
T4        00:19:e2:50:63:e0 Learn     0 ge-0/0/46.0
[output truncated]

```

### show ethernet-switching table detail (EX Series switches)

```

user@switch> show ethernet-switching table detail

Ethernet-switching table: 5 entries, 2 learned entries
VLAN: default, Tag: 0, MAC: *, Interface: All-members
Interfaces:
  ge-0/0/11.0, ge-0/0/20.0, ge-0/0/30.0, ge-0/0/36.0, ge-0/0/3.0
Type: Flood
Nexthop index: 1307

```

```

VLAN: default, Tag: 0, MAC: 00:1f:12:30:b8:83, Interface: ge-0/0/3.0
  Type: Learn, Age: 0, Learned: 20:09:26
  Nexthop index: 1315

VLAN: v1, Tag: 101, MAC: *, Interface: All-members
  Interfaces:
    ge-0/0/31.0
  Type: Flood
  Nexthop index: 1313

VLAN: v1, Tag: 101, MAC: 00:1f:12:30:b8:89, Interface: ge-0/0/31.0
  Type: Learn, Age: 0, Learned: 20:09:25
  Nexthop index: 1312

VLAN: v2, Tag: 102, MAC: *, Interface: All-members
  Interfaces:
    ae0.0
  Type: Flood
  Nexthop index: 1317

```

### show ethernet-switching table extensive (EX Series switches)

```
user@switch> show ethernet-switching table extensive
```

```
Ethernet-switching table: 3 entries, 1 learned, 5 persistent entries
```

```

VLAN: v1, Tag: 10, MAC: *, Interface: All-members
  Interfaces:
    ge-0/0/14.0, ge-0/0/1.0, ge-0/0/2.0, ge-0/0/3.0, ge-0/0/4.0,
    ge-0/0/5.0, ge-0/0/6.0, ge-0/0/7.0, ge-0/0/8.0, ge-0/0/10.0,
    ge-0/0/0.0
  Type: Flood
  Nexthop index: 567

VLAN: v1, Tag: 10, MAC: 00:21:59:c6:93:22, Interface: Router
  Type: Static
  Nexthop index: 0

VLAN: v1, Tag: 10, MAC: 00:21:59:c9:9a:4e, Interface: ge-0/0/14.0
  Type: Learn, Age: 0, Learned: 18:40:50
  Nexthop index: 564

```

### show ethernet-switching table persistent-mac (EX Series switches)

```
user@switch> show ethernet-switching table persistent-mac
```

VLAN	MAC address	Type	Interface
default	00:10:94:00:00:02	installed	ge-0/0/42.0
default	00:10:94:00:00:03	installed	ge-0/0/42.0
default	00:10:94:00:00:04	installed	ge-0/0/42.0
default	00:10:94:00:00:05	installed	ge-0/0/42.0
default	00:10:94:00:00:06	installed	ge-0/0/42.0
default	00:10:94:00:05:02	uninstalled	ge-0/0/16.0
default	00:10:94:00:06:03	uninstalled	ge-0/0/16.0
default	00:10:94:00:07:04	uninstalled	ge-0/0/16.0

**show ethernet-switching table persistent-mac interface ge-0/0/16.0 (EX Series switches)**

VLAN	MAC address	Type	Interface
default	00:10:94:00:05:02	uninstalled	ge-0/0/16.0
default	00:10:94:00:06:03	uninstalled	ge-0/0/16.0
default	00:10:94:00:07:04	uninstalled	ge-0/0/16.0

**show ethernet-switching table (EX Series, MX Series and QFX Series)**

```
user@host> show ethernet-switching table
```

```
MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
           SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)
```

```
Routing instance : default-switch
```

Vlan	MAC	MAC	Age	Logical
name	address	flags		interface
VLAN101	88:e0:f3:bb:07:f0	D	-	ae20.0

```
MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
           SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)
```

```
Routing instance : default-switch
```

Vlan	MAC	MAC	Age	Logical
name	address	flags		interface
VLAN102	88:e0:f3:bb:07:f0	D	-	ae20.0

```
MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
           SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)
```

```
Routing instance : default-switch
```

Vlan	MAC	MAC	Age	Logical
name	address	flags		interface
VLAN103	88:e0:f3:bb:07:f0	D	-	ae20.0

```
MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
           SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)
```

```
Routing instance : default-switch
```

Vlan	MAC	MAC	Age	Logical
name	address	flags		interface
VLAN104	88:e0:f3:bb:07:f0	D	-	ae20.0

```
MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
           SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)
```

```
Routing instance : default-switch
```

Vlan	MAC	MAC	Age	Logical
name	address	flags		interface
VLAN1101	00:1f:12:32:f5:c1	D	-	ae0.0

```
MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
           SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)
```

```

Routing instance : default-switch
  Vlan      MAC      MAC      Age      Logical
  name      address   flags      interface
  VLAN1102  00:1f:12:32:f5:c1  D          -      ae0.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)

Routing instance : default-switch
  Vlan      MAC      MAC      Age      Logical
  name      address   flags      interface
  VLAN1103  00:1f:12:32:f5:c1  D          -      ae0.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)

Routing instance : default-switch
  Vlan      MAC      MAC      Age      Logical
  name      address   flags      interface
  VLAN1104  00:1f:12:32:f5:c1  D          -      ae0.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)

Routing instance : default-switch
  Vlan      MAC      MAC      Age      Logical
  name      address   flags      interface
  VLAN1105  00:1f:12:32:f5:c1  D          -      ae0.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)

Routing instance : default-switch
  Vlan      MAC      MAC      Age      Logical
  name      address   flags      interface
  VLAN1106  00:1f:12:32:f5:c1  D          -      ae0.0
[...output truncated...]

```

### show ethernet-switching table brief

```

user@host> show ethernet-switching table brief

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)

Routing instance : default-switch
  Vlan      MAC      MAC      Age      Logical
  name      address   flags      interface
  VLAN101   88:e0:f3:bb:07:f0  D          -      ae20.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)

Routing instance : default-switch
  Vlan      MAC      MAC      Age      Logical

```



```

name          address          flags          interface
VLAN102       88:e0:f3:bb:07:f0    D              -      ae20.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)

Routing instance : default-switch
Vlan          MAC          MAC          Age          Logical
name          address      flags          interface
VLAN103       88:e0:f3:bb:07:f0    D              -      ae20.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)

Routing instance : default-switch
Vlan          MAC          MAC          Age          Logical
name          address      flags          interface
VLAN104       88:e0:f3:bb:07:f0    D              -      ae20.0

MAC flags (S - static MAC, D - dynamic MAC, L - locally learned
          SE - statistics enabled, NM - non configured MAC, R - remote PE MAC)

Routing instance : default-switch
Vlan          MAC          MAC          Age          Logical
name          address      flags          interface
VLAN1101      00:1f:12:32:f5:c1    D              -      ae0.0
[...output truncated...]

```

### show ethernet-switching table count

```

user@host> show ethernet-switching table count

0 MAC address learned in routing instance default-switch VLAN VLAN1000
ae26.0:1000

1 MAC address learned in routing instance default-switch VLAN VLAN101
ae20.0:101

MAC address count per learn VLAN within routing instance:
Learn VLAN ID      MAC count      Static MAC count
101                1              0

1 MAC address learned in routing instance default-switch VLAN VLAN102
ae20.0:102

MAC address count per learn VLAN within routing instance:
Learn VLAN ID      MAC count      Static MAC count
102                1              0

1 MAC address learned in routing instance default-switch VLAN VLAN103
ae20.0:103

MAC address count per learn VLAN within routing instance:
Learn VLAN ID      MAC count      Static MAC count
103                1              0

1 MAC address learned in routing instance default-switch VLAN VLAN104

```

```

ae20.0:104

  MAC address count per learn VLAN within routing instance:
    Learn VLAN ID      MAC count      Static MAC count
          104             1             0

0 MAC address learned in routing instance default-switch VLAN VLAN105
ae20.0:105

0 MAC address learned in routing instance default-switch VLAN VLAN106
ae20.0:106

0 MAC address learned in routing instance default-switch VLAN VLAN107
ae20.0:107

0 MAC address learned in routing instance default-switch VLAN VLAN108
ae20.0:108

0 MAC address learned in routing instance default-switch VLAN VLAN109
ae20.0:109

0 MAC address learned in routing instance default-switch VLAN VLAN110
ae20.0:110

1 MAC address learned in routing instance default-switch VLAN VLAN1101
ae0.0:1101

  MAC address count per learn VLAN within routing instance:
    Learn VLAN ID      MAC count      Static MAC count
          1101             1             0

1 MAC address learned in routing instance default-switch VLAN VLAN1102
ae0.0:1102

  MAC address count per learn VLAN within routing instance:
    Learn VLAN ID      MAC count      Static MAC count
          1102             1             0
[...output truncated...]

```

### show ethernet-switching table extensive

```

user@host> show ethernet-switching table extensive

MAC address: 88:e0:f3:bb:07:f0
  Routing instance: default-switch
  VLAN ID: 101
    Learning interface: ae20.0
    Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
    Epoch: 0                      Sequence number: 2
    Learning mask: 0x00000008

MAC address: 88:e0:f3:bb:07:f0
  Routing instance: default-switch
  VLAN ID: 102
    Learning interface: ae20.0
    Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
    Epoch: 0                      Sequence number: 2
    Learning mask: 0x00000008

```

```

MAC address: 88:e0:f3:bb:07:f0
  Routing instance: default-switch
VLAN ID: 103
  Learning interface: ae20.0
  Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
  Epoch: 0                               Sequence number: 2
  Learning mask: 0x00000008

MAC address: 88:e0:f3:bb:07:f0
  Routing instance: default-switch
VLAN ID: 104
  Learning interface: ae20.0
  Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
  Epoch: 0                               Sequence number: 2
  Learning mask: 0x00000008

MAC address: 00:1f:12:32:f5:c1
  Routing instance: default-switch
VLAN ID: 1101
  Learning interface: ae0.0
  Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
  Epoch: 0                               Sequence number: 2
  Learning mask: 0x00000008

MAC address: 00:1f:12:32:f5:c1
  Routing instance: default-switch
VLAN ID: 1102
  Learning interface: ae0.0
  Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
  Epoch: 0                               Sequence number: 2
  Learning mask: 0x00000008

MAC address: 00:1f:12:32:f5:c1
  Routing instance: default-switch
VLAN ID: 1103
  Learning interface: ae0.0
  Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
  Epoch: 0                               Sequence number: 2
  Learning mask: 0x00000008

MAC address: 00:1f:12:32:f5:c1
  Routing instance: default-switch
VLAN ID: 1104
  Learning interface: ae0.0
  Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
  Epoch: 0                               Sequence number: 2
  Learning mask: 0x00000008

```

## Sample Output

### show ethernet-switching table detail (SRX Series)

```

user@host> show ethernet-switching table detail

Ethernet-switching table: 57 entries, 17 learned
F2, *
Interface(s): ge-0/0/44.0
Type: Flood
F2, 00:00:5E:00:53:AC
Interface(s): ge-0/0/44.0

```

```

Type: Learn, Age: 0, Learned: 2:03:09
F2, 00:00:5E:00:53:AA
Interface(s): Router
Type: Static
Linux, *
Interface(s): ge-0/0/47.0
Type: Flood
Linux, 00:00:5E:00:53:AB
Interface(s): Router
Type: Static
Linux, 00:00:5E:00:53:AC
Interface(s): ge-0/0/47.0
Type: Learn, Age: 0, Learned: 2:03:08
T1, *
Interface(s): ge-0/0/46.0
Type: Flood
T1, 00:00:5E:00:53:AD
Interface(s): ge-0/0/46.0
Type: Learn, Age: 0, Learned: 2:03:07
T1, 00:00:5E:00:53:AE
Interface(s): Router
Type: Static
T1, 00:00:5E:00:53:AF
Interface(s): ge-0/0/46.0
Type: Learn, Age: 0, Learned: 2:03:07
T1, 00:00:5E:00:53:AG
Interface(s): Router
Type: Static
T10, *
Interface(s): ge-0/0/46.0
Type: Flood
T10, 00:00:5E:00:53:AH
Interface(s): Router
Type: Static
T10, 00:00:5E:00:53:AI
Interface(s): ge-0/0/46.0
Type: Learn, Age: 0, Learned: 2:03:08
T10, 00:00:5E:00:53:AJ
Interface(s): Router
Type: Static
T111, *
Interface(s): ge-0/0/15.0
Type: Flood
[output truncated]

```

## Sample Output

### show ethernet-switching table extensive (SRX Series)

```

user@host> show ethernet-switching table extensive

Ethernet-switching table: 57 entries, 17 learned
F2, *
Interface(s): ge-0/0/44.0
Type: Flood
F2, 00:00:5E:00:53:AC
Interface(s): ge-0/0/44.0
Type: Learn, Age: 0, Learned: 2:03:09
F2, 00:00:5E:00:53:AA
Interface(s): Router

```

```

Type: Static
Linux, *
Interface(s): ge-0/0/47.0
Type: Flood
Linux, 00:00:5E:00:53:AB
Interface(s): Router
Type: Static
Linux, 00:00:5E:00:53:AC
Interface(s): ge-0/0/47.0
Type: Learn, Age: 0, Learned: 2:03:08
T1, *
Interface(s): ge-0/0/46.0
Type: Flood
T1, 00:00:5E:00:53:AD
Interface(s): ge-0/0/46.0
Type: Learn, Age: 0, Learned: 2:03:07
T1, 00:00:5E:00:53:AE
Interface(s): Router
Type: Static
T1, 00:00:5E:00:53:AF
Interface(s): ge-0/0/46.0
Type: Learn, Age: 0, Learned: 2:03:07
T1, 00:00:5E:00:53:AG
Interface(s): Router
Type: Static
T10, *
Interface(s): ge-0/0/46.0
Type: Flood
T10, 00:00:5E:00:53:AH
Interface(s): Router
Type: Static
T10, 00:00:5E:00:53:AI
Interface(s): ge-0/0/46.0
Type: Learn, Age: 0, Learned: 2:03:08
T10, 00:00:5E:00:53:AJ
Interface(s): Router
Type: Static
T111, *
Interface(s): ge-0/0/15.0
Type: Flood
[output truncated]

```

## Sample Output

### show ethernet-switching table interface ge-0/0/1 (SRX Series)

```

user@host> show ethernet-switching table interface ge-0/0/1

Ethernet-switching table: 1 unicast entries
VLAN      MAC address      Type    Age Interfaces
V1        *                Flood   - All-members
V1        00:00:5E:00:53:AF Learn    0 ge-0/0/1.0

```

## show interfaces extensive satellite-device

<b>Syntax</b>	<code>show interfaces extensive satellite-device (device-alias   all)</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Enterprise.
<b>Description</b>	Display the satellite device extended ports in a Junos Fusion.
<b>Options</b>	<p><b>device-alias <i>device-alias</i></b>—Display extended port information for the satellite device using the specified device alias only.</p> <p><b>all</b>—Display information for all extended ports and aggregated Ethernet interfaces with extended ports as members configured on all of the satellite devices.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show interfaces extensive satellite-device all on page 838</a>
<b>Output Fields</b>	<a href="#">Table 35 on page 832</a> lists the output fields for the <b>show interfaces extensive satellite-device</b> command. Output fields are listed in the approximate order in which they appear.

*Table 35: show interfaces extensive satellite-device Output Fields*

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>Device flags</b>	Information about the physical device.	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
	<b>NOTE:</b> This field is only displayed if asymmetric flow control is not configured.	
<b>Pad to minimum frame size</b>	Pad Tx VLAN-tagged frame to minimum of 68 bytes.	
<b>Device flags</b>	Information about the physical device.	All levels
<b>Interface flags</b>	Information about the interface.	All levels

Table 35: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
Current address	Configured MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2008-01-16 10:52:40 UTC (3d 22:58 ago)</b> .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Extended port information	Satellite device port ID	
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li><b>Input bytes</b>—Number of bytes received on the interface.</li> <li><b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li><b>Input packets</b>—Number of packets received on the interface.</li> <li><b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p><b>NOTE:</b> The bandwidth bps counter is not enabled.</p>	detail extensive
IPv6 transit statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li><b>Input bytes</b>—Number of bytes received on the interface.</li> <li><b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li><b>Input packets</b>—Number of packets received on the interface.</li> <li><b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p><b>NOTE:</b> The bandwidth bps counter is not enabled.</p>	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li><b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li><b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li><b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li><b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li><b>Giants</b>—Number of frames received that are greater than the giant threshold.</li> <li><b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li><b>Resource errors</b>—Sum of transmit drops.</li> </ul>	extensive

Table 35: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.	<b>detail extensive</b>
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Queue Number</b>	The CoS queue number and the forwarding classes mapped to the queue number. The <b>Mapped forwarding class</b> column lists the forwarding classes mapped to each CoS queue.	<b>detail extensive</b>
<b>Active alarms and Active defects</b>	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the switch configuration, an alarm can ring the red or yellow alarm bell on the switch, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	<b>detail extensive none</b>



Table 35: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>MAC statistics</b>	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem.</p> <ul style="list-style-type: none"> <li>• <b>Total octets and total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type.</li> <li>• <b>Unicast packets, Broadcast packets, and Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—Number of packets that exceeds the configured MTU.</li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. This counter is not supported on EX Series switches and is always displayed as 0.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	<b>extensive</b>
<b>Filter statistics</b>	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem.</p>	<b>extensive</b>

Table 35: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Packet Forwarding Engine configuration</b>	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface.	All levels
<b>Statistics</b>	<ul style="list-style-type: none"> <li>• <b>Packets</b></li> <li>• <b>pps</b></li> <li>• <b>Bytes</b></li> <li>• <b>bps</b></li> </ul>	All levels
<b>Bundle</b>	Provide information for each active bundle link. <ul style="list-style-type: none"> <li>• <b>Input</b> <ul style="list-style-type: none"> <li>• <b>Packets</b>—</li> <li>• <b>pps</b></li> <li>• <b>Bytes</b></li> <li>• <b>bps</b></li> </ul> </li> <li>• <b>Output</b> <ul style="list-style-type: none"> <li>• <b>Packets</b>—</li> <li>• <b>pps</b></li> <li>• <b>Bytes</b></li> <li>• <b>bps</b></li> </ul> </li> </ul>	All levels

Table 35: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Adaptive Statistics</b>	<ul style="list-style-type: none"> <li>• <b>Adaptive Adjusts</b></li> <li>• <b>Adaptive Scans</b></li> <li>• <b>Adaptive Updates</b></li> </ul>	All levels
<b>Link</b>	Link state: up or down.	All levels
<b>LACP info</b>	<p>LACP state information for each aggregated interface:</p> <ul style="list-style-type: none"> <li>• <b>Role priority</b>—Role played by the interface. It can be one of the following: <ul style="list-style-type: none"> <li>• <b>Actor</b>—Local device participating in LACP negotiation.</li> <li>• <b>Partner</b>—Remote device participating in LACP negotiation.</li> <li>• <b>System identifier</b>—48-bit (6-byte) globally unique field.</li> <li>• <b>System priority</b>—LACP system priority at the aggregated Ethernet interface level. This system priority value takes precedence over a system priority value configured at the global [edit chassis] hierarchy level.</li> </ul> </li> <li>• <b>Port number</b></li> <li>• <b>Port key</b></li> <li>• <b>Port</b></li> </ul>	All levels
<b>LACP Statistics</b>	<p>LACP statistics are returned when the <b>extensive</b> option is used and provides the following information:</p> <ul style="list-style-type: none"> <li>• <b>LACP Rx</b>—LACP received counter that increments for each normal hello.</li> <li>• <b>LACP Tx</b>—Number of LACP transmit packet errors logged.</li> <li>• <b>Unknown Rx</b>—Number of unrecognized packet errors logged.</li> <li>• <b>Illegal Rx</b>—Number of invalid packets received.</li> </ul>	All levels
<b>Marker statistics</b>	<p>Marker statistics are returned when the <b>extensive</b> option is used and provides the following information:</p> <ul style="list-style-type: none"> <li>• <b>Marker Rx</b>—Marker received counter that increments for each normal hello.</li> <li>• <b>Resp Tx</b>—Number of RESP transmit packet errors logged.</li> <li>• <b>Unknown Rx</b>—Number of unrecognized packet errors logged.</li> <li>• <b>Illegal Rx</b>—Number of invalid packets received.</li> </ul>	All levels
<b>Protocol</b>	Protocol family configured on the logical interface.	All levels
<b>MTU</b>	MTU size on the logical interface. If the MTU value is negotiated down to meet the MRRU requirement on the remote side, this value is marked Adjusted.	All levels
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	All levels
<b>Route table</b>	Routing table in which this address exists. For example, Route table:0 refers to inet.0.	All levels
<b>Mesh table</b>	Information regarding mesh topology.	All levels

## Sample Output

### show interfaces extensive satellite-device all

```
user@aggregation-device> show interfaces extensive satellite-device all
```

```
Physical interface: ae0 (Extended Port, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 574, Generation: 131
Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None, MAC-REWRITE
Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c0, Hardware address: f4:b5:2f:f7:3f:c0
Last flapped : 2015-03-31 18:36:43 PDT (07:05:56 ago)
Statistics last cleared: Never
Extended port information:
  Satellite device port id : 415
Traffic statistics:
  Input bytes :          13515908          2032 bps
  Output bytes :          12289920          2032 bps
  Input packets:           99514           2 pps
  Output packets:          96015           2 pps
IPv6 transit statistics:
  Input bytes :           0
  Output bytes :           0
  Input packets:           0
  Output packets:          0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0                   0                95867                   0
  1                   0                 0                   0
  2                   0                 0                   0
  3                   0                 0                   0
  4                   0                 0                   0
  5                   0                 0                   0
  7                   0                 0                   0

Queue number:      Mapped forwarding classes
  0                FC0
  1                FC1
  2                FC2
  3                FC3
  4                FC4
  5                FC5, be-3
```

```

7                                be-2

Logical interface ae0.0 (Index 337) (SNMP ifIndex 575) (Generation 1194)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics          Packets          pps          Bytes          bps
Bundle:
  Input :             1729             0          601692           0
  Output:              0             0              0           0
Adaptive Statistics:
  Adaptive Adjusts:           0
  Adaptive Scans  :           0
  Adaptive Updates:           0
Link:
  ge-104/0/24.0
    Input :              0             0              0           0
    Output:              0             0              0           0
  ge-103/0/0.0
    Input :             1729             0          601692           0
    Output:              0             0              0           0
LACP info:          Role    System                               System    Port    Port    Port
                                priority          identifier    priority    number    key

  ge-104/0/24.0    Actor      127    f4:b5:2f:f7:3f:c0          127        31      1
  ge-104/0/24.0    Partner   127    f4:b5:2f:41:0a:40          127        24      1
  ge-103/0/0.0     Actor      127    f4:b5:2f:f7:3f:c0          127         7      1
  ge-103/0/0.0     Partner   127    f4:b5:2f:41:0a:40          127         1      1

LACP Statistics:      LACP Rx    LACP Tx    Unknown Rx    Illegal Rx
  ge-104/0/24.0        25470        25495           0           0
  ge-103/0/0.0         25469        25512           0           0
Marker Statistics:    Marker Rx    Resp Tx    Unknown Rx    Illegal Rx
  ge-104/0/24.0           0           0           0           0
  ge-103/0/0.0           0           0           0           0
Protocol bridge, MTU: 1514, Generation: 1229, Route table: 3, Mesh Group:
__all_ces__
Physical interface: ae1 (Extended Port, Enabled, Physical link is Up)
Interface index: 129, SNMP ifIndex: 790, Generation: 132
Link-level type: Ethernet, MTU: 1514, Speed: 200mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c1, Hardware address: f4:b5:2f:f7:3f:c1
Last flapped : 2015-03-31 18:36:44 PDT (07:05:55 ago)
Statistics last cleared: Never
Extended port information:
  Satellite device port id : 431
Traffic statistics:
  Input bytes :             13285288          2032 bps
  Output bytes :            12166400          2032 bps
  Input packets:              98447           2 pps
  Output packets:            95050           2 pps
IPv6 transit statistics:
  Input bytes :              0

```

```

Output bytes :          0
Input  packets:         0
Output packets:         0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0                    0                94909                    0
1                    0                0                      0
2                    0                0                      0
3                    0                0                      0
4                    0                0                      0
5                    0                0                      0
7                    0                0                      0

Queue number:      Mapped forwarding classes
0                  FC0
1                  FC1
2                  FC2
3                  FC3
4                  FC4
5                  FC5, be-3
7                  be-2

Logical interface ae1.0 (Index 338) (SNMP ifIndex 1216) (Generation 1195)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics      Packets      pps      Bytes      bps
Bundle:
Input :         2785         0      688380         0
Output:          0         0         0         0
Adaptive Statistics:
Adaptive Adjusts:         0
Adaptive Scans :         0
Adaptive Updates:        0
Link:
ge-104/0/25.0
Input :          10         0         600         0
Output:          0         0         0         0
ge-103/0/1.0
Input :         2775         0      687780         0
Output:          0         0         0         0
LACP info:      Role      System      System      Port      Port      Port
                priority      identifier      priority      number      key

ge-104/0/25.0  Actor      127  f4:b5:2f:f7:3f:c0      127      32      2
ge-104/0/25.0  Partner    127  f4:b5:2f:41:0a:40      127      25      2

```

```

ge-103/0/1.0 Actor 127 f4:b5:2f:f7:3f:c0 127 8 2
ge-103/0/1.0 Partner 127 f4:b5:2f:41:0a:40 127 2 2

LACP Statistics: LACP Rx LACP Tx Unknown Rx Illegal Rx
ge-104/0/25.0 25470 25494 0 0
ge-103/0/1.0 25469 25513 0 0
Marker Statistics: Marker Rx Resp Tx Unknown Rx Illegal Rx
ge-104/0/25.0 0 0 0 0
ge-103/0/1.0 0 0 0 0
Protocol bridge, MTU: 1514, Generation: 1230, Route table: 3, Mesh Group:
__all_ces__
Physical interface: ae0 (Extended Port, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 574, Generation: 131
Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None, MAC-REWRITE
Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c0, Hardware address: f4:b5:2f:f7:3f:c0
Last flapped : 2015-03-31 18:36:43 PDT (07:05:56 ago)
Statistics last cleared: Never
Extended port information:
Satellite device port id : 415
Traffic statistics:
Input bytes : 13515908 2032 bps
Output bytes : 12289920 2032 bps
Input packets: 99514 2 pps
Output packets: 96015 2 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 0 95867 0
1 0 0 0
2 0 0 0
3 0 0 0
4 0 0 0
5 0 0 0
7 0 0 0

Queue number: Mapped forwarding classes

```

```

0          FC0
1          FC1
2          FC2
3          FC3
4          FC4
5          FC5, be-3
7          be-2

```

Logical interface ae0.0 (Index 337) (SNMP ifIndex 575) (Generation 1194)

Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge

Statistics	Packets	pps	Bytes	bps
Bundle:				
Input :	1729	0	601692	0
Output:	0	0	0	0

Adaptive Statistics:

Adaptive Adjusts:	0
Adaptive Scans :	0
Adaptive Updates:	0

Link:

ge-104/0/24.0

Input :	0	0	0	0
Output:	0	0	0	0

ge-103/0/0.0

Input :	1729	0	601692	0
Output:	0	0	0	0

LACP info:	Role	System	System	Port	Port	Port
		priority	identifier	priority	number	key
ge-104/0/24.0	Actor	127	f4:b5:2f:f7:3f:c0	127	31	1
ge-104/0/24.0	Partner	127	f4:b5:2f:41:0a:40	127	24	1
ge-103/0/0.0	Actor	127	f4:b5:2f:f7:3f:c0	127	7	1
ge-103/0/0.0	Partner	127	f4:b5:2f:41:0a:40	127	1	1

LACP Statistics:	LACP Rx	LACP Tx	Unknown Rx	Illegal Rx
ge-104/0/24.0	25470	25495	0	0
ge-103/0/0.0	25469	25512	0	0
Marker Statistics:	Marker Rx	Resp Tx	Unknown Rx	Illegal Rx
ge-104/0/24.0	0	0	0	0
ge-103/0/0.0	0	0	0	0

Protocol bridge, MTU: 1514, Generation: 1229, Route table: 3, Mesh Group:

\_\_all\_ces\_\_

Physical interface: ae1 (Extended Port, Enabled, Physical link is Up)

Interface index: 129, SNMP ifIndex: 790, Generation: 132

Link-level type: Ethernet, MTU: 1514, Speed: 200mbps, BPDU Error: None,  
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,  
Flow control: Disabled

Pad to minimum frame size: Disabled

Minimum links needed: 1, Minimum bandwidth needed: 1bps

Device flags : Present Running

Interface flags: SNMP-Traps Internal: 0x4000

Current address: f4:b5:2f:f7:3f:c1, Hardware address: f4:b5:2f:f7:3f:c1

Last flapped : 2015-03-31 18:36:44 PDT (07:05:55 ago)

Statistics last cleared: Never

Extended port information:

Satellite device port id : 431

Traffic statistics:



```

Input bytes :          13285288          2032 bps
Output bytes :          12166400          2032 bps
Input packets:           98447           2 pps
Output packets:          95050           2 pps
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0                   0                94909                   0
  1                   0                0                     0
  2                   0                0                     0
  3                   0                0                     0
  4                   0                0                     0
  5                   0                0                     0
  7                   0                0                     0

Queue number:      Mapped forwarding classes
  0                FC0
  1                FC1
  2                FC2
  3                FC3
  4                FC4
  5                FC5, be-3
  7                be-2

Logical interface ae1.0 (Index 338) (SNMP ifIndex 1216) (Generation 1195)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :        2785         0      688380         0
  Output:         0         0         0         0
Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:      0
Link:
  ge-104/0/25.0
    Input :         10         0         600         0
    Output:          0         0          0         0
  ge-103/0/1.0
    Input :        2775         0      687780         0
    Output:         0         0          0         0
LACP info:      Role      System      System      Port      Port      Port

```

		priority	identifier	priority	number	key
ge-104/0/25.0	Actor	127	f4:b5:2f:f7:3f:c0	127	32	2
ge-104/0/25.0	Partner	127	f4:b5:2f:41:0a:40	127	25	2
ge-103/0/1.0	Actor	127	f4:b5:2f:f7:3f:c0	127	8	2
ge-103/0/1.0	Partner	127	f4:b5:2f:41:0a:40	127	2	2
LACP Statistics:						
	LACP Rx	LACP Tx	Unknown Rx	Illegal Rx		
ge-104/0/25.0	25470	25494	0	0		
ge-103/0/1.0	25469	25513	0	0		
Marker Statistics:						
	Marker Rx	Resp Tx	Unknown Rx	Illegal Rx		
ge-104/0/25.0	0	0	0	0		
ge-103/0/1.0	0	0	0	0		
Protocol bridge, MTU: 1514, Generation: 1230, Route table: 3, Mesh Group: __all_ces__						
Physical interface: ae0 (Extended Port, Enabled, Physical link is Up						
Interface index: 128, SNMP ifIndex: 574, Generation: 131						
Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,						
Flow control: Disabled						
Pad to minimum frame size: Disabled						
Minimum links needed: 1, Minimum bandwidth needed: 1bps						
Device flags : Present Running						
Interface flags: SNMP-Traps Internal: 0x4000						
Current address: f4:b5:2f:f7:3f:c0, Hardware address: f4:b5:2f:f7:3f:c0						
Last flapped : 2015-03-31 18:36:43 PDT (07:05:56 ago)						
Statistics last cleared: Never						
Extended port information:						
Satellite device port id : 415						
Traffic statistics:						
Input bytes :	13515908		2032 bps			
Output bytes :	12289920		2032 bps			
Input packets:	99514		2 pps			
Output packets:	96015		2 pps			
IPv6 transit statistics:						
Input bytes :	0					
Output bytes :	0					
Input packets:	0					
Output packets:	0					
Input errors:						
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards: 0, Resource errors: 0						
Output errors:						
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors: 0						
Egress queues: 8 supported, 7 in use						
Queue counters:	Queued packets	Transmitted packets		Dropped packets		
0	0	95867		0		
1	0	0		0		
2	0	0		0		
3	0	0		0		

```

4              0              0              0
5              0              0              0
7              0              0              0

Queue number:      Mapped forwarding classes
0                  FC0
1                  FC1
2                  FC2
3                  FC3
4                  FC4
5                  FC5, be-3
7                  be-2

Logical interface ae0.0 (Index 337) (SNMP ifIndex 575) (Generation 1194)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics          Packets      pps      Bytes      bps
Bundle:
  Input :           1729          0      601692      0
  Output:            0          0          0      0
Adaptive Statistics:
  Adaptive Adjusts:          0
  Adaptive Scans :          0
  Adaptive Updates:          0
Link:
  ge-104/0/24.0
    Input :            0          0          0      0
    Output:            0          0          0      0
  ge-103/0/0.0
    Input :           1729          0      601692      0
    Output:            0          0          0      0
LACP info:          Role      System      System      Port      Port      Port
                  priority      identifier      priority      number      key

  ge-104/0/24.0  Actor      127  f4:b5:2f:f7:3f:c0      127      31      1
  ge-104/0/24.0  Partner    127  f4:b5:2f:41:0a:40      127      24      1
  ge-103/0/0.0   Actor      127  f4:b5:2f:f7:3f:c0      127      7      1
  ge-103/0/0.0   Partner    127  f4:b5:2f:41:0a:40      127      1      1

LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
  ge-104/0/24.0      25470      25495          0          0
  ge-103/0/0.0      25469      25512          0          0
Marker Statistics:      Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  ge-104/0/24.0          0          0          0          0
  ge-103/0/0.0          0          0          0          0
Protocol bridge, MTU: 1514, Generation: 1229, Route table: 3, Mesh Group:
__all_ces__
Physical interface: ae1 (Extended Port, Enabled, Physical link is Up
Interface index: 129, SNMP ifIndex: 790, Generation: 132
Link-level type: Ethernet, MTU: 1514, Speed: 200mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags : Present Running

```

```

Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c1, Hardware address: f4:b5:2f:f7:3f:c1
Last flapped : 2015-03-31 18:36:44 PDT (07:05:55 ago)
Statistics last cleared: Never
Extended port information:
  Satellite device port id : 431
Traffic statistics:
  Input bytes :          13285288          2032 bps
  Output bytes :         12166400          2032 bps
  Input packets:          98447           2 pps
  Output packets:         95050           2 pps
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0                    0                94909                0
  1                    0                 0                0
  2                    0                 0                0
  3                    0                 0                0
  4                    0                 0                0
  5                    0                 0                0
  7                    0                 0                0

Queue number:      Mapped forwarding classes
  0                FC0
  1                FC1
  2                FC2
  3                FC3
  4                FC4
  5                FC5, be-3
  7                be-2

Logical interface ae1.0 (Index 338) (SNMP ifIndex 1216) (Generation 1195)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :        2785         0      688380         0
  Output:         0         0         0         0
Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:     0
Link:
  ge-104/0/25.0

```

```

    Input :          10          0          600          0
    Output:          0          0          0          0
ge-103/0/1.0
    Input :        2775          0        687780          0
    Output:          0          0          0          0
LACP info:          Role      System              System      Port      Port      Port
                  priority          identifier priority number key

ge-104/0/25.0 Actor      127 f4:b5:2f:f7:3f:c0      127      32      2
ge-104/0/25.0 Partner    127 f4:b5:2f:41:0a:40      127      25      2
ge-103/0/1.0 Actor      127 f4:b5:2f:f7:3f:c0      127       8      2
ge-103/0/1.0 Partner    127 f4:b5:2f:41:0a:40      127       2      2

LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
ge-104/0/25.0        25470        25494          0          0
ge-103/0/1.0         25469        25513          0          0
Marker Statistics:    Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
ge-104/0/25.0          0          0          0          0
ge-103/0/1.0          0          0          0          0
Protocol bridge, MTU: 1514, Generation: 1230, Route table: 3, Mesh Group:
__all_ces__
Physical interface: ge-101/0/7 (Extended Port, Enabled, Physical link is Down
Interface index: 328, SNMP ifIndex: 1587, Generation: 331
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 1000mbps
Device flags : Present Running
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Damping : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
Current address: 10:0e:7e:bf:2d:0c, Hardware address: 10:0e:7e:bf:2d:0c
Last flapped : Never
Statistics last cleared: Never
Extended port information:
  Satellite device port id : 143
Traffic statistics:
Input bytes :          0          0 bps
Output bytes :          0          0 bps
Input packets:          0          0 pps
Output packets:          0          0 pps
IPv6 transit statistics:
Input bytes :          0
Output bytes :          0
Input packets:          0
Output packets:          0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 7 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

```

0	0	0	0
1	0	0	0
2	0	0	0
3	0	0	0
4	0	0	0
5	0	0	0
7	0	0	0
Queue number: Mapped forwarding classes			
0	FC0		
1	FC1		
2	FC2		
3	FC3		
4	FC4		
5	FC5, be-3		
7	be-2		
Active alarms : None			
Active defects : None			
MAC statistics:			
	Receive	Transmit	
Total octets	0	0	
Total packets	0	0	
Unicast packets	0	0	
Broadcast packets	0	0	
Multicast packets	0	0	
CRC/Align errors	0	0	
FIFO errors	0	0	
MAC control frames	0	0	
MAC pause frames	0	0	
Oversized frames	0		
Jabber frames	0		
Fragment frames	0		
VLAN tagged frames	0		
Code violations	0		
Total errors	0	0	
Filter statistics:			
Input packet count	0		
Input packet rejects	0		
Input DA rejects	0		
Input SA rejects	0		
Output packet count		0	
Output packet pad count		0	
Output packet error count		0	
CAM destination filters: 0, CAM source filters: 0			
Packet Forwarding Engine configuration:			
Destination slot: 0 (0x00)			
CoS information:			
Direction : Output			
CoS transmit queue	Bandwidth		Buffer Priority
Limit			
	%	bps	%
0 FC0	95	950000000	95
none			
3 FC3	5	50000000	5
none			
		usec	
		0	low
		0	low

```

Interface transmit statistics: Disabled

Physical interface: ge-101/0/8 (Extended Port, Enabled, Physical link is Down
Interface index: 329, SNMP ifIndex: 1586, Generation: 332
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 1000mbps
Device flags   : Present Running
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 8 supported, 8 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Damping       : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
Current address: 10:0e:7e:bf:2d:0d, Hardware address: 10:0e:7e:bf:2d:0d
Last flapped   : Never
Statistics last cleared: Never
Extended port information:
  Satellite device port id : 159
Traffic statistics:
  Input bytes   : 0 0 bps
  Output bytes  : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 7 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

  0 0 0 0
  1 0 0 0
  2 0 0 0
  3 0 0 0
  4 0 0 0
  5 0 0 0
  7 0 0 0

Queue number:  Mapped forwarding classes
0 FC0
1 FC1
2 FC2
3 FC3
4 FC4
5 FC5, be-3
7 be-2
Active alarms : None

```

```

Active defects : None
MAC statistics:
    Receive      Transmit
Total octets      0          0
Total packets     0          0
Unicast packets   0          0
Broadcast packets 0          0
Multicast packets 0          0
CRC/Align errors  0          0
FIFO errors       0          0
MAC control frames 0          0
MAC pause frames  0          0
Oversized frames  0
Jabber frames     0
Fragment frames   0
VLAN tagged frames 0
Code violations    0
Total errors       0          0
Filter statistics:
    Input packet count      0
    Input packet rejects    0
    Input DA rejects        0
    Input SA rejects        0
    Output packet count     0
    Output packet pad count  0
    Output packet error count 0
    CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
    Destination slot: 0 (0x00)
CoS information:
    Direction : Output
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    0 FC0      95      950000000  95      0      low
none
    3 FC3      5       50000000   5       0      low
none
Interface transmit statistics: Disabled

```



## show interfaces satellite-device

<b>Syntax</b>	<code>show interfaces satellite-device (device-alias   all)</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Display the satellite device extended ports in a Junos Fusion.
<b>Options</b>	<p><b>device-alias <i>device-alias</i></b>—Display extended port information for the satellite device using the specified device alias only.</p> <p><b>all</b>—Display information for all extended ports and aggregated Ethernet interfaces with extended ports as members configured on all of the satellite devices.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show interfaces satellite-device all on page 853</a>
<b>Output Fields</b>	<a href="#">Table 36 on page 851</a> lists the output fields for the <b>show interfaces satellite-device</b> command. Output fields are listed in the approximate order in which they appear.

*Table 36: show interfaces satellite-device Output Fields*

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>Device flags</b>	Information about the physical device.	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .  <i>NOTE:</i> This field is only displayed if asymmetric flow control is not configured.	All levels
<b>Pad to minimum frame size</b>	Pad Tx VLAN-tagged frame to minimum of 68 bytes.	All levels

Table 36: *show interfaces satellite-device* Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Minimum links needed</b>	Minimum number of aggregated links.	All levels
<b>Minimum bandwidth needed</b>	Minimum bandwidth configured for aggregated bundle.	All levels
<b>Device flags</b>	Information about the physical device.	All levels
<b>Interface flags</b>	Information about the interface.	All levels
<b>Current address</b>	Configured MAC address.	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2008-01-16 10:52:40 UTC (3d 22:58 ago)</b> .	<b>detail extensive none</b>
<b>Input rate</b>	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	All levels
<b>Output rate</b>	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	All levels
<b>Extended port information</b>	Satellite device port ID	All levels
<b>Active alarms and Active defects</b>	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the switch configuration, an alarm can ring the red or yellow alarm bell on the switch, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	<b>detail extensive none</b>
<b>Interface transmit statistics</b>	All levels	All levels
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

Table 36: *show interfaces satellite-device* Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Flags</b>	Information about the logical interface.	All levels
<b>Statistics</b>	<ul style="list-style-type: none"> <li>• Packets</li> <li>• pps</li> <li>• Bytes</li> <li>• bps</li> </ul>	All levels
<b>Bundle</b>	Provides information for each active bundle link. <ul style="list-style-type: none"> <li>• Input               <ul style="list-style-type: none"> <li>• Packets</li> <li>• pps</li> <li>• Bytes</li> <li>• bps</li> </ul> </li> <li>• Output               <ul style="list-style-type: none"> <li>• Packets—</li> <li>• pps</li> <li>• Bytes</li> <li>• bps</li> </ul> </li> </ul>	All levels
<b>Adaptive Statistics</b>	<ul style="list-style-type: none"> <li>• Adaptive Adjusts</li> <li>• Adaptive Scans</li> <li>• Adaptive Updates</li> </ul>	All levels
<b>Protocol</b>	Protocol family configured on the logical interface.	All levels

## Sample Output

### Sample Output

*show interfaces satellite-device all*

```

user@aggregation-device> show interfaces satellite-device all

Physical interface: ae0 (Extended Port, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 574
  Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None, MAC-REWRITE
  Error: None, Loopback: Disabled, Source filtering: Disabled,
  Flow control: Disabled
  Pad to minimum frame size: Disabled
  Minimum links needed: 1, Minimum bandwidth needed: 1bps
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Current address: f4:b5:2f:f7:3f:c0, Hardware address: f4:b5:2f:f7:3f:c0
  Last flapped   : 2015-03-31 18:36:43 PDT (06:54:08 ago)
  Input rate      : 2032 bps (2 pps)
  Output rate     : 3048 bps (2 pps)

Logical interface ae0.0 (Index 337) (SNMP ifIndex 575)

```

```

Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics          Packets          pps          Bytes          bps
Bundle:
  Input :           1704             0          592992           0
  Output:             0             0             0           0
Adaptive Statistics:
  Adaptive Adjusts:             0
  Adaptive Scans :             0
  Adaptive Updates:            0
Protocol bridge, MTU: 1514

Physical interface: ae1 (Extended Port, Enabled, Physical link is Up
Interface index: 129, SNMP ifIndex: 790
Link-level type: Ethernet, MTU: 1514, Speed: 200mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c1, Hardware address: f4:b5:2f:f7:3f:c1
Last flapped   : 2015-03-31 18:36:44 PDT (06:54:07 ago)
Input rate     : 2032 bps (2 pps)
Output rate    : 2032 bps (2 pps)

Logical interface ae1.0 (Index 338) (SNMP ifIndex 1216)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics          Packets          pps          Bytes          bps
Bundle:
  Input :           2759             0          679982           0
  Output:             0             0             0           0
Adaptive Statistics:
  Adaptive Adjusts:             0
  Adaptive Scans :             0
  Adaptive Updates:            0
Protocol bridge, MTU: 1514

Physical interface: xe-101/0/31 (Extended Port, Enabled, Physical link is Up
Interface index: 336, SNMP ifIndex: 829
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Current address: 10:0e:7e:bf:2d:24, Hardware address: 10:0e:7e:bf:2d:24
Last flapped   : 2015-03-31 08:28:23 PDT (17:02:29 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms : None
Active defects : None
Interface transmit statistics: Disabled

Logical interface xe-101/0/31.0 (Index 491) (SNMP ifIndex 926)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Input packets : 0
Output packets: 0
Protocol bridge, MTU: 1514

Physical interface: xe-101/0/32 (Extended Port, Enabled, Physical link is Up
Interface index: 337, SNMP ifIndex: 836
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps

```

```
Device flags      : Present Running
Interface flags:  SNMP-Traps Internal: 0x4000
Link flags       : None
CoS queues       : 8 supported, 8 maximum usable queues
Current address:  10:0e:7e:bf:2d:25, Hardware address: 10:0e:7e:bf:2d:25
Last flapped    : 2015-03-31 08:28:23 PDT (17:02:29 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
Active alarms   : None
Active defects  : None
Interface transmit statistics: Disabled

Logical interface xe-101/0/32.0 (Index 492) (SNMP ifIndex 935)
  Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
  Input packets : 0
  Output packets: 0
  Protocol bridge, MTU: 1514
```

## show interfaces statistics

**Syntax** `show interfaces statistics interface-name`  
`<satellite-device [device-alias-name | all ]>`  
`<detail>`

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.  
 Command introduced in Junos OS Release 12.2 for ACX Series Routers.  
**satellite-device** option introduced in Junos OS Release 14.2R3.

**Description** Display static interface statistics, such as errors.



**NOTE:** When the `show interfaces statistics` command is executed on an interface that is configured on T4000 Type 5 FPC, the *IPv6 transit statistics* field displays:

- Total statistics (sum of transit and local statistics) at the physical interface level
- Transit statistics at the logical interface level

**Options** *interface-name*—Name of an interface.

**satellite-device [*device-alias-name* | all ]**—(Junos Fusion only) (Optional) Display interface statistics for interfaces on the specified satellite device in the Junos Fusion, or on all satellite devices in the Junos Fusion.



**NOTE:** In a Junos Fusion Enterprise, logical interface statistics are not synced across aggregation devices in a dual-aggregation device topology.

**detail**—(Optional) Display detailed output.

**Required Privilege Level** view

**Related Documentation**

- *clear interfaces statistics*

**List of Sample Output** [show interfaces statistics \(Fast Ethernet\) on page 857](#)  
[show interfaces statistics \(Gigabit Ethernet PIC—Egress\) on page 858](#)

[show interfaces statistics detail \(Aggregated Ethernet\) on page 860](#)  
[show interfaces statistics detail \(Aggregated Ethernet—Ingress\) on page 861](#)  
[show interfaces statistics detail \(Aggregated Ethernet—Egress\) on page 862](#)  
[show interfaces statistics \(SONET/SDH\) on page 863](#)  
[show interfaces statistics \(Aggregated SONET/SDH—Ingress\) on page 865](#)  
[show interfaces statistics \(Aggregated SONET/SDH—Egress\) on page 866](#)  
[show interfaces statistics \(MX Series Routers\) on page 867](#)  
[show interfaces statistics \(MX Series Routers: Dynamic Interfaces with RPF Check Detail\) on page 867](#)  
[show interfaces statistics \(PTX Series Packet Transport Routers\) on page 868](#)  
[show interfaces statistics \(ACX Series routers\) on page 868](#)

**Output Fields** Output from both the **show interfaces *interface-name* detail** and the **show interfaces *interface-name* extensive** commands include all the information displayed in the output from the **show interfaces statistics** command. For more information, see the particular interface type in which you are interested. For information about destination class and source class statistics, see the “Destination Class Field” section and the “Source Class Field” section under *Common Output Fields Description*. For information about the input errors and output errors, see *Fast Ethernet and Gigabit Ethernet Counters*.

## Sample Output

### show interfaces statistics (Fast Ethernet)

```

user@host> show interfaces fe-1/3/1 statistics

Physical interface: fe-1/3/1, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 1042
  Description: ford fe-1/3/1
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:00:5E:00:53:dc, Hardware address: 00:00:5E:00:53:dc
  Last flapped   : 2006-04-18 03:08:59 PDT (00:01:24 ago)
  Statistics last cleared: Never
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  Input errors: 0, Output errors: 0
  Active alarms  : None
  Active defects : None
  Logical interface fe-1/3/1.0 (Index 69) (SNMP ifIndex 50)
    Flags: SNMP-Traps Encapsulation: ENET2
    Protocol inet, MTU: 1500
      Flags: Is-Primary, DCU, SCU-in

      Destination class      Packets          Bytes
                        (packet-per-second)  (bits-per-second)
                        silver1              0              0
                        (                  0) (
                        silver2              0              0
                        (                  0) (
                        silver3              0              0
                        (                  0) (
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 10.27.245/24, Local: 10.27.245.2,

```

```

Broadcast: 10.27.245.255
Protocol iso, MTU: 1497
Flags: Is-Primary

```

### show interfaces statistics (Gigabit Ethernet PIC—Egress)

```
user@host> show interfaces ge-5/2/0 statistics detail
```

```

Physical interface: ge-5/2/0, Enabled, Physical link is Up
Interface index: 146, SNMP ifIndex: 519, Generation: 149
Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:74, Hardware address: 00:00:5E:00:53:74
Last flapped   : 2009-11-11 11:24:00 PST (09:23:08 ago)
Statistics last cleared: 2009-11-11 17:50:58 PST (02:56:10 ago)
Traffic statistics:
Input bytes   :          271524          0 bps
Output bytes  :       37769598       352 bps
Input packets :          3664          0 pps
Output packets:       885790          0 pps
IPv6 transit statistics:
Input bytes   :              0
Output bytes  :       16681118
Input packets :              0
Output packets:       362633
Multicast statistics:
IPv4 multicast statistics:
Input bytes   :       112048          0 bps
Output bytes  :       20779920          0 bps
Input packets :        1801          0 pps
Output packets:       519498          0 pps
IPv6 multicast statistics:
Input bytes   :       156500          0 bps
Output bytes  :       16681118          0 bps
Input packets :        1818          0 pps
Output packets:       362633          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort          882558          882558          0

1 expedited-fo              0              0          0

2 assured-forw          0              0          0

```



```

3 network-cont          3232          3232          0

Active alarms : None
Active defects : None

Logical interface ge-5/2/0.0 (Index 71) (SNMP ifIndex 573) (Generation 135)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes :          271524
  Output bytes :        37769598
  Input packets:          3664
  Output packets:       885790
IPv6 transit statistics:
  Input bytes :           0
  Output bytes :       16681118
  Input packets:           0
  Output packets:      362633
Local statistics:
  Input bytes :          271524
  Output bytes :       308560
  Input packets:          3664
  Output packets:        3659
Transit statistics:
  Input bytes :           0
  Output bytes :       37461038
  Input packets:           0
  Output packets:      882131
IPv6 transit statistics:
  Input bytes :           0
  Output bytes :       16681118
  Input packets:           0
  Output packets:      362633
Multicast statistics:
IPv4 multicast statistics:
  Input bytes :          112048
  Output bytes :       20779920
  Input packets:          1801
  Output packets:       519498
IPv6 multicast statistics:
  Input bytes :          156500
  Output bytes :       16681118
  Input packets:          1818
  Output packets:       362633
Protocol inet, MTU: 1500, Generation: 151, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.40.40.0/30, Local: 10.40.40.2, Broadcast: 10.40.40.3,
Generation: 167
  Protocol inet6, MTU: 1500, Generation: 152, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: ::10.40.40.0/126, Local: ::10.40.40.2
Generation: 169
  Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::21d:b5ff:fe61:d974
Protocol multiservice, MTU: Unlimited, Generation: 171
Generation: 153, Route table: 0
  Policer: Input: __default_arp_policer__

```

## show interfaces statistics detail (Aggregated Ethernet)

user@host&gt; show interfaces ae0 detail

```

Physical interface: ae0, Enabled, Physical link is Up
  Interface index: 186, SNMP ifIndex: 111, Generation: 187
  Link-level type: Ethernet, MTU: 1514, Speed: 2000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1,
  Minimum bandwidth needed: 0
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Current address: 00:00:5E:0053:f0, Hardware address: 00:00:5E:00:53:f0
  Last flapped   : Never
  Statistics last cleared: 2006-12-23 03:04:16 PST (01:16:24 ago)
Traffic statistics:
  Input bytes :          28544          0 bps
  Output bytes :          39770          0 bps
  Input packets:           508          0 pps
  Output packets:          509          0 pps
  Input bytes :          IPv6 28544
  Output bytes :          IPv6 0
  Input packets:          IPv6 508
  Output packets:          IPv6 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

Logical interface ae0.0 (Index 67) (SNMP ifIndex 139) (Generation 145)
  Flags: SNMP-Traps Encapsulation: ENET2
  Statistics
  Packets      pps      Bytes      bps
Bundle:
  Input :      508      0      28544      0
  Output:      509      0      35698      0
Link:
  ge-3/3/8.0
  Input :      508      0      28544      0
  Output:      0      0      0      0
  ge-3/3/9.0
  Input :      0      0      0      0
  Output:      0      0      0      0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  ge-3/3/8.0          0          0          0          0
  ge-3/3/9.0          0          0          0          0
Egress queues: 8 supported, 8 in use
Queue counters:      Queued packets      Transmitted packets      Dropped packets

  0 best-effort          0          0          0
  1 expedited-fo          0          0          0
  2 assured-forw          0          0          0
  3 network-cont          0          0          0

Protocol inet, MTU: 1500, Generation: 166, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary

```

```

    Destination: 10.1.1/24, Local: 10.1.1.1, Broadcast: 10.1.1.255,
    Generation: 159
  Protocol inet6, MTU: 1500, Generation: 163, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::206:5bff:fe05:c321,
    Broadcast: Unspecified, Generation: 161

```

### show interfaces statistics detail (Aggregated Ethernet—Ingress)

```
user@host> show interfaces statistics detail ae0 | no-more
```

```

Physical interface: ae0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 504, Generation: 278
  Link-level type: Ethernet, MTU: 1514, Speed: 1Gbps, BPDU Error: None, MAC-REWRITE
  Error: None, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1,
  Minimum bandwidth needed: 0
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Current address: 00:00:5E:00:53:f0, Hardware address: 00:00:5E:00:53:f0
  Last flapped   : 2009-11-09 03:30:23 PST (00:01:28 ago)
  Statistics last cleared: 2009-11-09 03:26:18 PST (00:05:33 ago)
  Traffic statistics:
    Input bytes :          544009602          54761856 bps
    Output bytes :             3396             0 bps
    Input packets:          11826292          148809 pps
    Output packets:             42             0 pps
  IPv6 transit statistics:
    Input bytes :       350818604
    Output bytes :             0
    Input packets:       7626488
    Output packets:             0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
  0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
  0
  Ingress queues: 8 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort          0              0              0
    1 expedited-fo         0              0              0
    2 assured-forw         0              0              0
    3 network-cont         0              0              0

  Egress queues: 8 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort         21             21             0
    1 expedited-fo         0              0              0
    2 assured-forw         0              0              0
    3 network-cont        451            451             0

```

```

Logical interface ae0.0 (Index 70) (SNMP ifIndex 574) (Generation 177)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Statistics
Bundle:
  Packets      pps      Bytes      bps
  Input :      11826292    148809    544009602    54761856
  Output:        42         0        3396         0
Link:
  ge-5/2/0.0
  Input :      11826292    148809    544009602    54761856
  Output:        42         0        3396         0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
ge-5/2/0.0          0         0         0         0
Protocol inet, MTU: 1500, Generation: 236, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.30.30.0/30, Local: 10.30.30.2, Broadcast: 10.30.30.3,
Generation: 310
Protocol inet6, MTU: 1500, Generation: 237, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
  Destination: ::10.30.30.0/126, Local: ::10.30.30.2
Generation: 312
Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::21d:b5ff:fe61:dbf0
Protocol multiservice, MTU: Unlimited, Generation: 314
Generation: 238, Route table: 0
Policer: Input: __default_arp_policer__

```

### show interfaces statistics detail (Aggregated Ethernet—Egress)

```
user@host> show interfaces statistics detail ae0 | no-more
```

```

Physical interface: ae0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 501, Generation: 319
Link-level type: Ethernet, MTU: 1514, Speed: 1Gbps, BPDU Error: None, MAC-REWRITE
Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1,
Minimum bandwidth needed: 0
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: 00:00:5E:00:53:f0, Hardware address: 00:00:5E:00:53:f0
Last flapped : 2009-11-09 03:30:24 PST (00:02:42 ago)
Statistics last cleared: 2009-11-09 03:26:42 PST (00:06:24 ago)
Traffic statistics:
  Input bytes :          440          0 bps
  Output bytes :      1047338120      54635848 bps
  Input packets:           7          0 pps
  Output packets:    22768200    148466 pps
IPv6 transit statistics:
  Input bytes :          288
  Output bytes :      723202616
  Input packets:           4
  Output packets:    15721796
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Ingress queues: 8 supported, 4 in use

```

```

Queue counters:      Queued packets  Transmitted packets      Dropped packets

 0 best-effort              0              0              0
 1 expedited-fo             0              0              0
 2 assured-forw             0              0              0
 3 network-cont             0              0              0

Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

 0 best-effort      201985796      201985796              0
 1 expedited-fo             0              0              0
 2 assured-forw             0              0              0
 3 network-cont        65              65              0

Logical interface ae0.0 (Index 72) (SNMP ifIndex 505) (Generation 204)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :          7          0          440          0
  Output:    22768200    148466    1047338120    54635848
Link:
  ge-2/1/6.0
  Input :          7          0          440          0
  Output:    22768200    148466    1047338120    54635848
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
ge-2/1/6.0              0              0              0              0
Protocol inet, MTU: 1500, Generation: 291, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.30.30.0/30, Local: 10.30.30.1, Broadcast: 10.30.30.3,
Generation: 420
  Protocol inet6, MTU: 1500, Generation: 292, Route table: 0
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: ::/26, Local: ::10.30.30.1
Generation: 422
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::21f:12ff:fec2:37f0
Protocol multiservice, MTU: Unlimited, Generation: 424
Generation: 293, Route table: 0
  Policer: Input: __default_arp_policer__

```

### show interfaces statistics (SONET/SDH)

```
user@host> show interfaces statistics detail so-3/0/0 | no-more
```

```

Physical interface: so-3/0/0, Enabled, Physical link is Up
Interface index: 133, SNMP ifIndex: 538, Generation: 283
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC192,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms

```

```

Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 13 (last seen 00:00:04 ago)
  Output: 14 (last sent 00:00:02 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Opened, iso: Not-configured, mp1s: Not-configured

CHAP state: Closed
PAP state: Closed
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2009-11-09 02:52:34 PST (01:12:39 ago)
Statistics last cleared: 2009-11-09 03:58:54 PST (00:06:19 ago)
Traffic statistics:
  Input bytes :          2559160294          54761720 bps
  Output bytes :             10640             48 bps
  Input packets:          55633975          148809 pps
  Output packets:             216             0 pps
IPv6 transit statistics:
  Input bytes :          647922328
  Output bytes :              0
  Input packets:          14085269
  Output packets:              0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Bucket drops:
0, Policed discards: 0, L3 incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0, HS link
FIFO overflows: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO
underflows: 0, MTU errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          4              4              0
  1 expedited-fo         0              0              0
  2 assured-forw         0              0              0
  3 network-cont        213             213             0

SONET alarms   : None
SONET defects  : None

Logical interface so-3/0/0.0 (Index 72) (SNMP ifIndex 578) (Generation 182)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 244, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.30.30.0/30, Local: 10.30.30.2, Broadcast: 10.30.30.3,
Generation: 322
  Protocol inet6, MTU: 4470, Generation: 245, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: ::10.30.30.0/126, Local: ::10.30.30.2
Generation: 324
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::2a0:a5ff:fe61:9264
Generation: 326

```

## show interfaces statistics (Aggregated SONET/SDH—Ingress)

```
user@host> show interfaces statistics detail as0 | no-more
```

```
Physical interface: as0, Enabled, Physical link is Up
Interface index: 132, SNMP ifIndex: 534, Generation: 282
Link-level type: PPP, MTU: 4474, Speed: OC192, Minimum links needed: 1, Minimum
bandwidth needed: 0
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Last flapped : 2009-11-09 03:45:53 PST (00:09:38 ago)
Statistics last cleared: 2009-11-09 03:48:17 PST (00:07:14 ago)
Traffic statistics:
Input bytes :          2969786332          54761688 bps
Output bytes :          11601          0 bps
Input packets:          64560636          148808 pps
Output packets:          225          0 pps
IPv6 transit statistics:
Input bytes :          2086013152
Output bytes :          0
Input packets:          45348114
Output packets:          0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort          3              3              0

1 expedited-fo          0              0              0

2 assured-forw          0              0              0

3 network-cont          222            222            0

Logical interface as0.0 (Index 71) (SNMP ifIndex 576) (Generation 179)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Statistics      Packets      pps      Bytes      bps
Bundle:
Input :          64560550      148808      2969785300      54761688
Output:          139          0          10344          0
Link:
so-3/0/0.0
Input :          64560550      148808      2969785300      54761688
Output:          139          0          10344          0
Protocol inet, MTU: 4470, Generation: 240, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.30.30.0/30, Local: 10.30.30.2, Broadcast: 10.30.30.3,
Generation: 316
Protocol inet6, MTU: 4470, Generation: 241, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: ::10.30.30.0/126, Local: ::10.30.30.2
Generation: 318
Addresses, Flags: Is-Preferred
```

```

Destination: fe80::/64, Local: fe80::2a0:a5ff:fe61:9264
Generation: 320

```

### show interfaces statistics (Aggregated SONET/SDH—Egress)

```
user@host> show interfaces statistics detail as0 | no-more
```

```

Physical interface: as0, Enabled, Physical link is Up
  Interface index: 132, SNMP ifIndex: 565, Generation: 323
  Link-level type: PPP, MTU: 4474, Speed: OC192, Minimum links needed: 1, Minimum
  bandwidth needed: 0
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Last flapped   : 2009-11-09 03:43:37 PST (00:12:48 ago)
  Statistics last cleared: 2009-11-09 03:48:54 PST (00:07:31 ago)
  Traffic statistics:
    Input bytes :           11198           392 bps
    Output bytes :        3101452132       54783448 bps
    Input packets:             234             0 pps
    Output packets:        67422937       148868 pps
  IPv6 transit statistics:
    Input bytes :           5780
    Output bytes :        2171015678
    Input packets:             72
    Output packets:        47195993
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Giants: 0, Policed discards:
    0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
    0
  Egress queues: 8 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort      67422830          67422830          0

    1 expedited-fo           0              0              0

    2 assured-forw         0              0              0

    3 network-cont        90              90              0

  Logical interface as0.0 (Index 71) (SNMP ifIndex 548) (Generation 206)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  Statistics
    Packets      pps      Bytes      bps
  Bundle:
    Input :       144         0       10118       392
    Output:    67422847    148868    3101450962    54783448
  Link:
    so-0/1/0.0
    Input :       144         0       10118       392
    Output:    67422847    148868    3101450962    54783448
  Protocol inet, MTU: 4470, Generation: 295, Route table: 0
    Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.30.30.0/30, Local: 10.30.30.1, Broadcast: 10.30.30.3,
    Generation: 426
    Protocol inet6, MTU: 4470, Generation: 296, Route table: 0

```



```

Addresses, Flags: Is-Preferred Is-Primary
Destination: ::/26, Local: ::10.30.30.1
Generation: 428
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::2a0:a5ff:fe63:1d0a
Generation: 429

```

### show interfaces statistics (MX Series Routers)

```
user@host> show interfaces xe-0/0/0 statistics
```

```

Physical interface: xe-0/0/0, Enabled, Physical link is Up
Interface index: 145, SNMP ifIndex: 592
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None, Source filtering: Disabled, Flow control: Enabled
Pad to minimum frame size: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Current address: 00:00:5E:00:53:f0, Hardware address: 00:00:5E:00:53:f0
Last flapped   : 2013-10-26 03:20:40 test (2w3d 03:29 ago)
Statistics last cleared: Never
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Input errors: 0, Output errors: 0
Active alarms  : LINK
Active defects : LINK
PCS statistics
  Bit errors           Seconds
  Errored blocks       109
Interface transmit statistics: Disabled

```

### show interfaces statistics (MX Series Routers: Dynamic Interfaces with RPF Check Detail)

```
user@host> show interfaces statistics pp0.3221225475 detail
```

```

Logical interface pp0.3221225475 (Index 536870921) (SNMP ifIndex 200000009)
(Generation 6)
Flags: Up Point-To-Point Encapsulation: PPPoE
PPPoE:
  State: SessionUp, Session ID: 1,
  Session AC name: B, Remote MAC address: 00:00:5E:00:53:01,
  Underlying interface: xe-1/0/0.3221225474 (Index 536870919)
  Ignore End-Of-List tag: Disable
Bandwidth: 0
Traffic statistics:
  Input bytes   : 34
  Output bytes  : 0
  Input packets: 1
  Output packets: 1
Local statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes   : 34
  Output bytes  : 0

```

```

      Input  packets:                1                0 pps
      Output packets:                1                0 pps
    Keepalive settings: Interval 30 seconds, Up-count 3, Down-count 3
    LCP state: Opened
    NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
    CHAP state: Success
    PAP state: Closed
      Protocol inet, MTU: 1492
      Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
      Generation: 0, Route table: 0
      Flags: uRPF, Unnumbered
      RPF Failures: Packets: 0, Bytes: 0
      Donor interface: lo0.0 (Index 320)
      Input Filters: upstrm1-inet-pp0.3221225475-in
      Output Filters: dwnstrm1-inet-pp0.3221225475-out
      Addresses, Flags: Is-Primary
      Destination: Unspecified, Local: 10.255.96.19, Broadcast: Unspecified,
Generation: 0

```

#### show interfaces statistics (PTX Series Packet Transport Routers)

```

user@host> show interfaces statistics em0

Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:1b, Hardware address: 00:00:5E:00:53:1b
  Last flapped   : Never
  Statistics last cleared: Never
Input packets : 212620
Output packets: 71
  Input errors: 0, Output errors: 0

  Logical interface em0.0 (Index 3) (SNMP ifIndex 0)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 212590
  Output packets: 71
  Protocol inet, MTU: 1500
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 192.168.3/24, Local: 192.168.3.30,
  Broadcast: 192.168.3.255

```

#### show interfaces statistics (ACX Series routers)

```

user@host> show interfaces statistics ge-0/1/7

Physical interface: ge-0/1/7, Enabled, Physical link is Down
  Interface index: 151, SNMP ifIndex: 524
  Link-level type: Ethernet, Media type: Copper, MTU: 1514, Link-mode: Full-duplex,
Speed: 1000mbps, BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,

  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online

```

```
Device flags      : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags       : None
CoS queues       : 8 supported, 8 maximum usable queues
Current address: 00:00:5E:00:53:a3, Hardware address: 00:00:5E:00:53:a3
Last flapped    : 2012-05-11 04:25:28 PDT (2d 20:23 ago)
Statistics last cleared: 2012-05-13 23:07:23 PDT (01:41:25 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
Input errors: 0, Output errors: 0
Active alarms   : LINK
Active defects  : LINK
Interface transmit statistics: Disabled
```

## show interfaces terse satellite-device

<b>Syntax</b>	<code>show interfaces terse satellite-device (device-alias   all)</code>
<b>Release Information</b>	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Display the satellite device extended ports in a Junos Fusion.
<b>Options</b>	<p><b>device-alias <i>device-alias</i></b>—Display extended port information for the satellite device using the specified device alias only.</p> <p><b>all</b>—Display information for all extended ports and aggregated Ethernet interfaces with extended ports as members configured on all of the satellite devices.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show interfaces terse satellite-device device-alias on page 871</a></p> <p><a href="#">show interfaces terse satellite-device all on page 871</a></p>
<b>Output Fields</b>	Table 37 on page 870 lists the output fields for the <b>show interfaces terse satellite-device</b> command. Output fields are listed in the approximate order in which they appear.

*Table 37: show interfaces terse satellite-device Output Fields*

Field Name	Field Description
Interface	Interface name.
Admin	Whether the interface is turned on (up) or off (down).
Link	Link state: <b>up</b> or <b>down</b> .
Proto	Protocol family configured on the logical interface.
Local	Local IP address of the logical interface.
Remote	Remote IP address of the logical interface.

## Sample Output

show interfaces terse satellite-device device-alias

```
user@aggregation-device> show interfaces terse satellite-device TOR1
```

Interface	Admin	Link	Proto	Local	Remote
sd-101/0/0	up	up			
sd-101/0/0.32770	up	up	bridge		
xe-101/0/14	up	up			
xe-101/0/15	up	up			
xe-101/0/16	up	up			
xe-101/0/17	up	up			
xe-101/0/24	up	up			
xe-101/0/25	up	up			
xe-101/0/31	up	up			
xe-101/0/31.0	up	up	bridge		
xe-101/0/32	up	down			
xe-101/0/32.0	up	down	bridge		
xe-101/0/33	up	down			
xe-101/0/33.0	up	down	bridge		
ge-101/0/36	up	down			
et-101/0/48	up	down			
xe-101/0/50:0	up	up			
xe-101/0/50:0.0	up	up	bridge		
xe-101/0/50:1	up	up			
xe-101/0/50:2	up	up			
xe-101/0/50:2.0	up	up	bridge		
xe-101/0/50:3	up	up			

## Sample Output

show interfaces terse satellite-device all

```
user@aggregation-device> show interfaces terse satellite-device all
```

Interface	Admin	Link	Proto	Local	Remote
ae0	up	up			
ae0.0	up	up	bridge		
ae1	up	up			
ae1.0	up	up	bridge		
ae2	up	up			
ae2.0	up	up	bridge		
ae3	up	up			
ae3.0	up	up	bridge		
ae4	up	up			
ae4.0	up	up	bridge		
ae5	up	up			
ae5.0	up	up	bridge		
ae6	up	up			
ae6.0	up	up	bridge		
ae7	up	up			
ae7.0	up	up	bridge		
ae8	up	up			
ae8.0	up	up	bridge		
ae9	up	up			
ae9.0	up	up	bridge		
ae10	up	down			
ae10.0	up	down	bridge		
xe-101/0/14	up	up			

xe-101/0/15	up	up	
xe-101/0/16	up	up	
xe-101/0/17	up	up	
xe-101/0/24	up	up	
xe-101/0/25	up	up	
xe-101/0/31	up	up	
xe-101/0/31.0	up	up	bridge
xe-101/0/32	up	down	
xe-101/0/32.0	up	down	bridge
xe-101/0/33	up	down	
xe-101/0/33.0	up	down	bridge
ge-101/0/36	up	down	
et-101/0/48	up	down	
xe-101/0/50:0	up	up	
xe-101/0/50:0.0	up	up	bridge
xe-101/0/50:1	up	up	
xe-101/0/50:2	up	up	
xe-101/0/50:2.0	up	up	bridge
xe-101/0/50:3	up	up	
xe-102/0/10	up	up	
xe-102/0/11	up	up	
xe-102/0/12	up	down	
xe-102/0/13	up	up	
xe-102/0/14	up	up	
xe-102/0/15	up	up	
xe-102/0/16	up	up	
xe-102/0/17	up	up	
xe-102/0/24	up	up	
xe-102/0/25	up	up	
xe-102/0/31	up	up	
xe-102/0/31.0	up	up	bridge
xe-102/0/32	up	up	
xe-102/0/32.0	up	up	bridge
xe-102/0/33	up	up	
xe-102/0/45	up	down	
ge-102/0/46	up	down	
xe-102/0/47	up	down	
et-102/0/48	up	down	
et-102/0/49	up	down	
et-102/0/50	up	down	
et-102/0/51	up	down	
et-102/0/52	up	down	
et-102/0/53	up	down	
ge-103/0/0	up	up	
ge-103/0/0.0	up	up	aenet --> ae0.0
ge-103/0/1	up	down	
ge-103/0/1.0	up	down	aenet --> ae1.0
ge-103/0/2	up	up	
ge-103/0/2.0	up	up	aenet --> ae2.0
ge-103/0/3	up	up	

## show system core-dumps

<b>List of Syntax</b>	<a href="#">Syntax on page 873</a> <a href="#">Syntax (Junos OS Evolved) on page 873</a> <a href="#">Syntax (EX Series Switches) on page 873</a> <a href="#">Syntax (TX Matrix Router) on page 873</a> <a href="#">Syntax (TX Matrix Plus Router) on page 873</a> <a href="#">Syntax (QFX Series and OCX Series) on page 873</a>
<b>Syntax</b>	<pre>show system core-dumps &lt;re0&gt; &lt;re1&gt; &lt;routing-engine&gt; &lt;satellite [<i>fpc-slot-id</i>   <i>device-alias alias-name</i>]&gt;</pre>
<b>Syntax (Junos OS Evolved)</b>	<pre>show system core-dumps</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show system core-dumps &lt;all-members&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt;</pre>
<b>Syntax (TX Matrix Router)</b>	<pre>show system core-dumps &lt;all-chassis   all-lcc   lcc <i>number</i>   scc&gt;</pre>
<b>Syntax (TX Matrix Plus Router)</b>	<pre>show system core-dumps &lt;all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i>&gt;</pre>
<b>Syntax (QFX Series and OCX Series)</b>	<pre>show system core-dumps &lt;component (<i>UUID</i>   <i>serial number</i>   all)&gt; &lt;display-period (<i>hours</i>   <i>minutes</i>   <i>seconds</i>)&gt; &lt;display-order&gt; &lt;kernel-crashinfo component (<i>UUID</i>   <i>serial number</i>)&gt; &lt;repository (core   log)&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 8.5.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p><b>re0</b>, <b>re1</b>, and <b>routing-engine</b> options introduced for dual Routing Engines in Junos OS Release 13.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p>

**core-file-info** option is deprecated in Junos OS Release 16.1R3.

**Description** Show core files on all routers or switches running Junos OS. You can use the **show system core-dumps** command to show a list of system core files created when the router or switch has failed. This command can be useful for diagnostic purposes. Each list item includes the file permissions, number of links, owner, group, size, modification date, and path and filename. If dual Routing Engines are present, you can view core-dump files for either routing engine or both routing engines together. On a QFabric system, you can view core-dump files on individual QFabric system devices as well as on the entire QFabric system.

**Options** **none**—Display a list of all existing core-dump files.



**NOTE:** If dual Routing Engines are present, then only the core-dump files for the active Routing Engine are listed. For Junos OS Evolved, core-dump files for all Routing Engines are listed.

**all-chassis**—(TX Matrix and TX Matrix Plus routers only) (Optional) On a routing matrix based on a TX Matrix router, display system core files for the TX Matrix router switch-card chassis [SCC] and all the T640 routers [LCCs] connected to the TX Matrix router.

On a routing matrix based on a TX Matrix Plus router, display system core files for the TX Matrix Plus router (switch-fabric chassis [SFC]) and all the T1600 routers [LCCs] connected to the TX Matrix Plus router.

**<all-lcc | lcc number>**—(TX Matrix and TX Matrix Plus routers only) (Optional) On a routing matrix based on the TX Matrix router, display core dump files for all T640 routers (line-card chassis [LCCs]) or a specific T640 router [LCC] connected to the TX Matrix router.

On a routing matrix based on the TX Matrix Plus router, display logging information for all T1600 routers (line-card chassis [LCCs]) or a specific T1600 router (LCC) connected to the TX Matrix Plus router. When using the **lcc number** option, replace **number** with a value from 0 through 3.



**NOTE:** The **all-chassis** option displays system core files for the SCC or SFC and the LCCs connected to the SCC or SFC in the routing matrix while the **all-lcc** option only displays system core files for the LCCs in the routing matrix.

**all-members**—(EX4200 switches) (Optional) Display system core files on all members of the Virtual Chassis configuration.



**component** (*UUID | serial number | all*)—(QFabric systems only) (Optional) Display a list of core-dump files located on individual QFabric system device or on the entire QFabric system.

**display-order** (*timestamp-sort | alphanumeric-sort*)—(QFabric systems only) (Optional) Display list of debug artifacts generated within the specified period—for example, within the last hour, within the last 20 minutes, or within the last 32 seconds—or according to their filename.

**display-period** (*hours | minutes | seconds*)—(QFabric systems only) (Optional) Display core-dump files generated within the specified period—for example, within the last hour, within the last 20 minutes, or within the last 32 seconds.

**kernel-crashinfo component** (*UUID | serial number*)—(QFabric systems only) (Optional) Display kernel crash information from the EEPROM on a QFabric system device.

**local**—(EX4200 switches only) (Optional) Display system core files on the local Virtual Chassis member.

**member** *member-id*—(EX4200 switches only) (Optional) Display system core files on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value from 0 through 9.

**node** *node-name*—(Optional) (Junos OS Evolved only) Display system core files generated on the specified node.

**re0**—(Dual Routing Engines only) Display the core-dump files on re0.

**re1**—(Dual Routing Engines only) Display the coredump files on re1.

**repository** (*core | log*)—(QFabric systems only) (Optional) Specify either the core or log repository in which to view core-dump files.

**routing-engine** (*backup | both | local | master | other*)—(Dual routing engines only) Display a list of core-dump files for either the backup, local, master, or other routing engine or both routing engines.

**satellite** [*fpc-slot-id | device-alias alias-name*]—(Junos Fusion only) (Optional) Display system core files for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display system core files on the TX Matrix router (or switch-card chassis).

**sfc**—(TX Matrix Plus routers only) (Optional) Display system core files on the TX Matrix Plus router (or switch-fabric chassis).

**Required Privilege Level** view

**List of Sample Output** [show system core-dumps on page 877](#)  
[show system core-dumps on page 878](#)

[show system core-dumps routing-engine both on page 878](#)  
[show system core-dumps \(TX Matrix Plus Router\) on page 878](#)  
[show system core-dumps \(QFX3500 Switch\) on page 880](#)  
[show system core-dumps \(QFabric Systems\) on page 880](#)  
[show system core-dumps component serial number display-order alphanumeric-sort repository core \(QFabric Systems\) on page 881](#)  
[show system core-dumps display-period \(QFabric Systems\) on page 881](#)  
[show system core-dumps kernel-crashinfo component serial number \(QFabric Systems\) on page 883](#)  
[show system core-dumps repository core \(QFabric Systems\) on page 885](#)  
[show system core-dumps repository log \(QFabric Systems\) on page 885](#)

**Output Fields** Table 38 on page 876 describes the output fields for the **show system core-dumps** command. Output fields are listed in the approximate order in which they appear.

*Table 38: show system core-dumps Output Fields*

Field Name	Field Description
<i>Permissions</i>	Read/write permissions for the file named.
<i>Links</i>	Number of links to the file.
<i>Owner</i>	Name of the file owner.
<i>Group</i>	Name of the group with file access.
<i>File size</i>	File size in bytes.
<i>Modified</i>	Last file modification date and time.
<i>Path/filename</i>	File path where the file resides and the filename.  (MX Series routers only) When you display the core files for an MX Series Virtual Chassis, the <b>show system core-dumps</b> command does not display information about files pertaining to the relayd process.
<b>Repository scope:</b>	Repository where core-dump files and log files are stored. The core-dump files are located in the <b>core</b> repository, and the log files are located in the <b>log</b> repository. The default <b>Repository scope</b> is shared since both the <b>core</b> and <b>log</b> repositories are shared by all of the QFabric system devices.
<b>Repository head:</b>	Path to the top-level repository location.
<b>Repository name:</b>	Name of the repository: <b>core</b> or <b>log</b> .
<b>List of nodes for core repository:</b>	List of core-dump files associated with a particular QFabric system device located in the core repository.
<b>Node Group</b>	Name of the QFabric system device.

*Table 38: show system core-dumps Output Fields (continued)*

Field Name	Field Description
<b>Node Identifier</b>	UUID or serial number of the QFabric system device.
<b>Num</b>	Number of core-dump and log files.
<b>Model</b>	Model number of the QFabric system device.
<b>Usage</b>	Usage of the repository in megabytes.
<b>Total usage of core repository:</b>	Total usage of core-dump files associated with a particular QFabric system device located in the core repository. Usage is specified in megabytes and as a percentage.
<b>Total usage of log repository:</b>	Total usage of log files associated with a particular QFabric system device located in the log repository. Usage is specified in megabytes and as a percentage.
<b>List of nodes for core repository:</b>	List of core-dump files associated with a particular QFabric system device located in the core repository.
<b>List of nodes for log repository:</b>	List of log files associated with a particular QFabric system device located in the log repository.
<b>Filename</b>	Name of the core-dump file.
<b>Date</b>	Last core-dump file modification date and time.
<b>Size</b>	Size of the core-dump file.
<b>Core filename</b>	Filename of the core-dump file.
<b>Process name</b>	Name of the process that is generating a core-dump file or log file.
<b>Release</b>	Junos OS release.
<b>Build server</b>	Junos OS build server.
<b>Build date</b>	Junos OS build date.
<b>Stack trace</b>	Stack trace of the core-dump file.

## Sample Output

### show system core-dumps

This example shows the command output if core files exist.

```
user@host> show system core-dumps
```

```
-rw----- 1 root wheel 268369920 Jun 18 17:59 /var/crash/vmcore.0
-rw-rw---- 1 root field 3371008 Jun 18 17:53 /var/tmp/rpd.core.0
-rw-r--r-- 1 root wheel 27775914 Jun 18 17:59 /var/crash/kernel.0
```

### show system core-dumps

This example shows the command output if core files do not exist.

```
user@host> show system core-dumps

/var/crash/*core*: No such file or directory
/var/tmp/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
```

### show system core-dumps routing-engine both

This example shows the command output if dual Routing Engines are present.

```
user@host> show system core-dumps routing-engine both

re0:
-----
/var/crash/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory

/var/tmp/cores:
total blocks: 496776
-rw-rw---- 1 root field 11910589 Nov 8 13:20 chassisd.core.0.201311081320
...

-rw-rw---- 1 root field 11737227 Oct 28 14:21
rpd.core-tarball.4.tgz.201310281421.3458162
total files: 10

re1:
-----
/var/crash/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory

/var/tmp/cores:
total blocks: 3178420
-rw-rw---- 1 root field 19039721 Nov 8 14:29
chassisd.core.0.201311081429.3485600.gz
-rw-rw---- 1 root field 19039793 Nov 8 14:37
chassisd.core.1.201311081437.3485599.gz
..

-rw-rw---- 1 root field 11710113 Oct 17 15:26
rpd.core-tarball.1.1.tgz.201310171526.3430028
```

### show system core-dumps (TX Matrix Plus Router)

```
user@host> show system core-dumps

sfc0-re0:
-----
```

```

/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 1627592
-rw-r--r-- 1 root field 535346090 May 15 07:36
rpd.core-tarball.0.090515.0736.tgz
-rw-r--r-- 1 root field 105632057 May 15 07:37
rpd.core-tarball.1.090515.0737.tgz
-rw-r--r-- 1 root field 101981681 May 15 07:38
rpd.core-tarball.2.090515.0738.tgz
-rw-r--r-- 1 root field 85854573 May 15 07:40
rpd.core-tarball.3.090515.0740.tgz
-rw-r--r-- 1 root field 4157845 May 15 08:18
rpd.core-tarball.4.090515.0818.tgz

lcc0-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 12

lcc1-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 10024
-rw-r--r-- 1 root field 1875794 Apr 22 15:47
chassisd.core-tarball.0.090422.1547.tgz
-rw-r--r-- 1 root field 1894183 Apr 22 19:02
chassisd.core-tarball.0.090422.1902.tgz
-rw-r--r-- 1 root field 1290240 Apr 26 16:01 ksyncd_1558.core.0.090426.1601

lcc2-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 21124008
-rw-r--r-- 1 root wheel 1022376528 May 2 06:43
core-LCC2-EGFPC7.core.0.090502.0643
-rw-r--r-- 1 root wheel 1022376528 May 2 08:13
core-LCC2-EGFPC7.core.0.090502.0813
-rw-r--r-- 1 root wheel 1022376544 May 5 06:15
core-LCC2-EGFPC7.core.0.090505.0615
-rw-r--r-- 1 root wheel 1022376544 May 6 10:59

```

```

core-LCC2-EGFPC7.core.0.090506.1059
-rw-r--r-- 1 root wheel 1022376528 May 2 06:58
core-LCC2-EGFPC7.core.1.090502.0658
-rw-r--r-- 1 root wheel 754271232 May 5 06:33
core-LCC2-EGFPC7.core.1.090505.0633
-rw-r--r-- 1 root wheel 264897536 May 6 11:12
core-LCC2-EGFPC7.core.1.090506.1112
-rw-r--r-- 1 root wheel 1022376528 May 2 07:22
core-LCC2-EGFPC7.core.2.090502.0722
-rw-r--r-- 1 root wheel 163633152 May 5 06:52
core-LCC2-EGFPC7.core.2.090505.0652
-rw-r--r-- 1 root wheel 171312128 May 6 12:13
core-LCC2-EGFPC7.core.2.090506.1213
-rw-r--r-- 1 root wheel 1022376528 May 2 07:39
core-LCC2-EGFPC7.core.3.090502.0739
-rw-r--r-- 1 root wheel 1022376528 May 2 07:55
core-LCC2-EGFPC7.core.4.090502.0755
-rw-r--r-- 1 root wheel 427277312 May 7 04:47
core-LCC2-STFPC4.core.0.090507.0447
-rw-r--r-- 1 root wheel 419609600 May 7 04:47
core-LCC2-STFPC5.core.0.090507.0447
-rw-r--r-- 1 root wheel 432356352 May 7 04:47
core-LCC2-STFPC6.core.0.090507.0447

/var/tmp/cores:
total 2568
-rw-r--r-- 1 root field 1290240 May 14 14:26 ksyncd_1540.core.0.090514.1426
...

```

### show system core-dumps (QFX3500 Switch)

```

user@switch> show system core-dumps

/var/crash/*core*: No such file or directory
-rw-rw---- 1 root field 1545143 Jun 4 2012 /var/tmp/pafxpc.core.0.gz
-rw-rw---- 1 root field 1545146 Jun 4 2012 /var/tmp/pafxpc.core.1.gz
-rw-rw---- 1 root field 1545141 Jun 4 2012 /var/tmp/pafxpc.core.2.gz
-rw-rw---- 1 root field 1545146 Jun 4 2012 /var/tmp/pafxpc.core.3.gz
-rw-rw---- 1 root field 1545142 Jun 5 2012 /var/tmp/pafxpc.core.4.gz
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory
total 5

```

### show system core-dumps (QFabric Systems)

```

user@switch> show system core-dumps

Repository scope: shared
Repository head: /pbdata/export
List of nodes for core repository: /pbdata/export/r.dumps/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	0	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	0	fx-jvre	OM
NW-NG-0	BBAK0394	0	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	0	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	0	fx-jvre	OM

FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	0	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	0	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YW3803	0	qfxc08-3008	OM
IC-WS001	WS001/YN5999	0	qfxc08-3008	OM
node-device1	BBAK0372	0	qfx3500	OM
node-device1	EE3093	0	qfx3500	OM
Total usage of core repository:0M of 70000M (0.0%)				
List of nodes for log repository: /pbdata/export/rlogs/				
Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	1	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	1	fx-jvre	OM
NW-NG-0	BBAK0394	1	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	1	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	3	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	1	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	1	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YN5999	1	qfxc08-3008	OM
IC-WS001	WS001/YW3803	1	qfxc08-3008	OM
node-device1	BBAK0372	1	qfx3500	OM
node-device1	EE3093	1	qfx3500	OM
Total usage of log repository:0M of 70000M (0.0%)				

### show system core-dumps component serial number display-order alphanumeric-sort repository core (QFabric Systems)

```
user@switch> show system core-dumps component BBAK8891 display-order alphanumeric-sort repository core
```

```
Repository scope: shared
Repository head: /pbdata/export
Repository name: core
List of core dumps for component BBAK8891
Repository location: /pbdata/export/rdumps/BBAK8891
```

Filename	Date	Size
eswd.core.0.1361.11172011214257.gz	Nov 17 21:43:10 2011	4779553
eswd.core.1.80267.11172011214514.gz	Nov 17 21:45:19 2011	3541648
eswd.core.2.80682.11172011214535.gz	Nov 17 21:45:43 2011	2156683
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375617

Number of core dumps in repository:4

### show system core-dumps display-period (QFabric Systems)

```
user@switch> show system core-dumps display-period 24h
```

```
show system core-dumps display-period 24h
Repository scope: shared
Repository head: /pbdata/export
List of core dumps at repository: /pbdata/export/rdumps
Delta timespec: Last 24h
Component: BBAK8273
```

Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375794

Component: cedb7b0e-0025-11e1-9a5f-00e081c52990		
Filename	Size	Date
vccpd.core.0.1461.11182011151131.gz	Nov 18 15:11:31 2011	120951
Component: ee19c4f8-0025-11e1-aef6-00e081c52990		
Filename	Size	Date
vccpd.core.0.1462.11182011151131.gz	Nov 18 15:11:31 2011	109420
Component: BBAK8281		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:36 2011	375373
Component: BBAK8891		
Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375617
Component: BBAK8276		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:35 2011	375350
Component: BBAK8868		
Filename	Size	Date
vccpd.core.0.1196.11182011151130.gz	Nov 18 15:11:34 2011	376211
Component: BBAK8835		
Filename	Size	Date
vccpd.core.0.1195.11182011151130.gz	Nov 18 15:11:35 2011	375700
Component: BBAK8283		
Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:36 2011	368298
Component: YW3781/YW3781		
Filename	Size	Date
vccpd.core.0.1220.11182011151131.gz	Nov 18 15:11:38 2011	380002
Component: 09726be2-0026-11e1-82d9-00e081c52990		
Filename	Size	Date
vccpd.core.0.1461.11182011151130.gz	Nov 18 15:11:31 2011	119965
Component: BBAK8309		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:36 2011	378930
Component: 303d476a-0026-11e1-abf4-00e081c52990		
Filename	Size	Date
vccpd.core.0.1460.11182011151131.gz	Nov 18 15:11:31 2011	118385
Component: YW3798/YW3798		
Filename	Size	Date
vccpd.core.0.1219.11182011151131.gz	Nov 18 15:11:36 2011	380455
List of log dumps at repository: /pbdata/export/rlogs		
Delta timespec: Last 24h		
Component: BBAK8273		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:39 2011	20415
Component: cedb7b0e-0025-11e1-9a5f-00e081c52990		
Filename	Size	Date



vccpd.tarball.0.1461.11182011151131.tgz	Nov 18 15:11:33 2011	19651
Component: ee19c4f8-0025-11e1-aef6-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1462.11182011151133.tgz	Nov 18 15:11:36 2011	24650
Component: BBAK8281		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:41 2011	19445
Component: BBAK8891		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:41 2011	21916
Component: BBAK8276		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:39 2011	20461
Component: BBAK8868		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:41 2011	21924
Component: BBAK8835		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151137.tgz	Nov 18 15:11:39 2011	19424
Component: BBAK8283		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:42 2011	31186
Component: YW3781/YW3781		
Filename	Size	Date
vccpd.tarball.0.1220.11182011151141.tgz	Nov 18 15:11:45 2011	27565
Component: 09726be2-0026-11e1-82d9-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1461.11182011151130.tgz	Nov 18 15:11:34 2011	19613
Component: BBAK8309		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151138.tgz	Nov 18 15:11:46 2011	50362
Component: 303d476a-0026-11e1-abf4-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1460.11182011151133.tgz	Nov 18 15:11:33 2011	19360
Component: YW3798/YW3798		
Filename	Size	Date
vccpd.tarball.0.1219.11182011151140.tgz	Nov 18 15:11:49 2011	24473

#### show system core-dumps kernel-crashinfo component serial number (QFabric Systems)

```

user@switch> show system core-dumps kernel-crashinfo component A0001/YA0197
Node: A0001/YA0197

Information about previous kernel crash:

-- Kernel panic data --

```

```

Panic string: kdb_sysctl_panic
System uptime: 3 day 20 hr 59 min 40 sec Kernel crash time: 2011-11-15 Wed 15:25:17
Kernel build linkstamp: JUNOS 11.3I #0: 2011-11-10 20:42:27 UTC

-- Stacktrace of panicing context --
Processor 1 (crash monarch):
savectx+0x0 (c9552800,80214efc,802a7fbc,c88ad05c) ra 801b93a8 sz 0
kdm_kcore_save_crashinfo+0x254 (c9552800,0,802a7fbc,c88ad05c) ra 801b9f44 sz 784
  kdm_kcore_kern_panic_event_handler+0x4b0 (c9552800,0,802a7fbc,c88ad05c) ra
  8022a9b8 sz 88
panic+0x1d0 (c9552800,0,4,77fed534) ra 802540c0 sz 56
kdb_sysctl_panic+0x70 (c9552800,0,4,77fed534) ra 80237e58 sz 40 sysctl_root+0x12c
  (c9552800,0,4,e8bc5cf8) ra 80238e50 sz 48
userland_sysctl+0x164 (c9552800,0,4,e8bc5cf8) ra 8023956c sz 104
__sysctl+0xe4 (c9552800,0,4,e8bc5cf8) ra 806d62e8 sz 160
trap+0xe1c (c9552800,0,4,e8bc5cf8) ra 80896e68 sz 128
MipsUserGenException+0x1a4 (c9552800,0,4,405cd12c) ra 0 sz 0
pid 82340, process: sysctl

Processor 0:
restoreintr+0x14 (1,81bca820,3,0) ra 806cdc3c sz 0
spinlock_exit+0x30 (1,81bca820,3,0) ra 8025d354 sz 24
sleepq_release+0x64 (1,81bca820,3,0) ra 8025e670 sz 24
sleepq_timeout+0x224 (1,81bca820,3,0) ra 80240294 sz 48
softclock+0x434 (1,81bca820,3,0) ra 802067f8 sz 80
ithread_loop+0x244 (1,81bca820,3,0) ra 80200e28 sz 64 fork_exit+0xc0
  (1,81bca820,3,0) ra 80897c28 sz 48
MipsNMIException+0x34 (1,81bca820,3,0) ra 0 sz 0
pid 82340, process: sysctl

Processor 2:
cpu_idle+0x20 (80960000,51bbc,2031df,81bca1b8) ra 80204948 sz 24 idle_proc+0x130
  (80960000,51bbc,2031df,81bca1b8) ra 80200e28 sz 56 fork_exit+0xc0
  (80960000,51bbc,2031df,81bca1b8) ra 80897c28 sz 48
MipsNMIException+0x34 (80960000,51bbc,2031df,81bca1b8) ra 0 sz 0
pid 82340, process: sysctl

Processor 3:
cpu_idle+0x20 (80960000,51bbc,2038df,81bca300) ra 80204948 sz 24 idle_proc+0x130
  (80960000,51bbc,2038df,81bca300) ra 80200e28 sz 56 fork_exit+0xc0
  (80960000,51bbc,2038df,81bca300) ra 80897c28 sz 48
MipsNMIException+0x34 (80960000,51bbc,2038df,81bca300) ra 0 sz 0
pid 82340, process: sysctl

Processor 4:
cpu_idle+0x20 (80960000,51bbc,2037df,81bca448) ra 80204948 sz 24 idle_proc+0x130
  (80960000,51bbc,2037df,81bca448) ra 80200e28 sz 56 fork_exit+0xc0
  (80960000,51bbc,2037df,81bca448) ra 80897c28 sz 48
MipsNMIException+0x34 (80960000,51bbc,2037df,81bca448) ra 0 sz 0
pid 82340, process: sysctl

Processor 5:
restoreintr+0x14 (1,51bbc,203edf,81bca590) ra 806cdc3c sz 0
spinlock_exit+0x30 (1,51bbc,203edf,81bca590) ra 80204a34 sz 24 idle_proc+0x21c
  (1,51bbc,203edf,81bca590) ra 80200e28 sz 56 fork_exit+0xc0
  (1,51bbc,203edf,81bca590) ra 80897c28 sz 48
MipsNMIException+0x34 (1,51bbc,203edf,81bca590) ra 0 sz 0
pid 82340, process: sysctl

```

```

Processor 6:
cpu_idle+0x20 (80960000,51bbc,205cdf,81bca6d8) ra 80204948 sz 24 idle_proc+0x130
(80960000,51bbc,205cdf,81bca6d8) ra 80200e28 sz 56 fork_exit+0xc0
(80960000,51bbc,205cdf,81bca6d8) ra 80897c28 sz 48
MipsNMIException+0x34 (80960000,51bbc,205cdf,81bca6d8) ra 0 sz 0
pid 82340, process: sysctl

Processor 7:
lockmgr+0x5ac (c97e8484,c8dd9800,0,c8dd9800) ra 8c11c81c sz 48
sal_sem_take+0x134 (c97e8484,c8dd9800,0,c8dd9800) ra 8c351108 sz 56
_bcm_esw_linkscan_thread+0x45c (c97e8484,c8dd9800,0,c8dd9800) ra 8c11cdb4 sz 104
sal_thread_start_wrap+0x74 (c97e8484,c8dd9800,0,c8dd9800) ra 80200e28 sz 32
fork_exit+0xc0 (c97e8484,c8dd9800,0,c8dd9800) ra 80897c28 sz 48
MipsNMIException+0x34 (c97e8484,c8dd9800,0,c8dd9800) ra 0 sz 0
pid 82340, process: sysctl
-- End of stacktrace --

```

### show system core-dumps repository core (QFabric Systems)

```

user@switch> show system core-dumps repository core

Repository scope: shared
Repository head: /pbdata/export
Repository name: core
List of nodes for core repository: /pbdata/export/rdumps/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	0	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	0	fx-jvre	OM
NW-NG-0	BBAK0394	0	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	0	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	0	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	0	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	0	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YW3803	0	qfxc08-3008	OM
IC-WS001	WS001/YN5999	0	qfxc08-3008	OM
node-device1	BBAK0372	0	qfx3500	OM
node-device1	EE3093	0	qfx3500	OM

Total usage of core repository: 0M of 70000M (0.0%)

### show system core-dumps repository log (QFabric Systems)

```

user@switch> show system core-dumps repository log

Repository scope: shared
Repository head: /pbdata/export
Repository name: log
List of nodes for log repository: /pbdata/export/rlogs/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	1	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	1	fx-jvre	OM
NW-NG-0	BBAK0394	1	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	1	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	3	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	1	fx-jvre	OM

FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	1	fx-jvre	0M
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YN5999	1	qfxc08-3008	0M
IC-WS001	WS001/YW3803	1	qfxc08-3008	0M
node-device1	BBAK0372	1	qfx3500	0M
node-device1	EE3093	1	qfx3500	0M
Total usage of log repository:0M of 70000M (0.0%)				

## CHAPTER 6

# Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link in a Junos Fusion

- [Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link on page 887](#)
- [no-auto-iccp-provisioning \(Junos Fusion Redundancy Group\) on page 889](#)
- [no-auto-vlan-provisioning \(Junos Fusion Redundancy Group\) on page 890](#)

## Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link

---

This topic discusses how automatic ICCP provisioning and automatic VLAN provisioning of the interchassis link simplify the configuration of a Junos Fusion. It covers the following items:

- [Automatic Interchassis Control Protocol \(ICCP\) Provisioning of an Interchassis Link on page 887](#)
- [Automatic VLAN Provisioning of an Interchassis Link on page 888](#)

### Automatic Interchassis Control Protocol (ICCP) Provisioning of an Interchassis Link

For simplicity, the ICCP configuration is now handled through redundancy group configuration. When you configure the chassis ID, redundancy group ID, and peer chassis ID for the redundancy group, those parameters are used to automatically configure the ICCP parameters for the ICL. For information on how to create a redundancy group, see [“Configuring or Expanding a Junos Fusion Data Center” on page 48](#).

Automatic ICCP provisioning is enabled by default, and the values that are created by automatic ICCP provisioning are exposed at the **[edit chassis satellite-management redundancy-groups redundancy-group-name peer-chassis-id peer-chassis-id-number]** hierarchy level. You can configure the ICCP parameters manually at the **[edit protocols iccp]** hierarchy level but doing this is only recommended for expert users. If you manually configure an ICCP parameter that is normally set by default, your configuration automatically overrides the default parameter. If you decide to configure ICCP, you must configure matching configurations on both aggregation devices.



**NOTE:** ICCP configuration is beyond the scope of this document. See *Configuring Multichassis Link Aggregation on EX Series Switches* for more information.

You can disable automatic ICCP provisioning by enabling the **no-auto-iccp-provisioning** statement at the **[edit chassis satellite-management redundancy-groups redundancy-group-name peer-chassis-id peer-chassis-id-number]** hierarchy level.

## Automatic VLAN Provisioning of an Interchassis Link

Automatic VLAN provisioning of an interchassis link (ICL) simplifies configuration of a Junos Fusion by allowing the ICL interconnecting the dual aggregation devices to automatically detect all VLAN traffic on the Junos Fusion and seamlessly forward VLAN information between the aggregation devices over the ICL. You do not have to manually change the VLAN membership on the ICL every time VLAN membership of a satellite device changes. For example, if satellite devices 100-103 have port membership for additional VLANs with IDs of 11-15, you no longer need to add the new VLAN IDs to the VLAN ID list.

Automatic VLAN provisioning detects VLANs on dual-homed satellite interfaces which are either manually configured or those that are detected as part of the VLAN autosensing feature and provisions those VLANs on the ICL. For information on VLAN autosensing, see [“Understanding VLAN Autosensing” on page 927](#). Automatic VLAN provisioning only works when the ICL is in trunk mode, and when the ICL interfaces are configured with the **unit 0 family ethernet-switching** option.

Automatic VLAN provisioning is enabled by default in a Junos Fusion Data Center. You can disable automatic VLAN provisioning by configuring the **no-auto-vlan-provisioning** statement at the **edit chassis satellite-management redundancy-groups redundancy-group-name peer-chassis-id peer-chassis-id-number** hierarchy. When automatic VLAN provisioning is disabled, you have to manually configure the supported VLANs on each ICL to ensure VLAN information is shared between aggregation devices. However, any VLANs that you have configured manually are retained when you disable automatic VLAN provisioning.



**NOTE:** ICL configuration is beyond the scope of this document. See *Configuring Multichassis Link Aggregation on EX Series Switches* for more information.

### Related Documentation

- [Understanding VLAN Autosensing on page 927](#)
- [no-auto-iccp-provisioning on page 889](#)
- [no-auto-vlan-provisioning on page 890](#)
- *Configuring Multichassis Link Aggregation on EX Series Switches*

## no-auto-iccp-provisioning (Junos Fusion Redundancy Group)

<b>Syntax</b>	<code>no-auto-iccp-provisioning;</code>
<b>Hierarchy Level</b>	<code>[edit chassis satellite-management redundancy-groups <i>redundancy-group-name</i> peer-chassis-id <i>peer-chassis-id-number</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.
<b>Description</b>	<p>Disable automatic ICCP provisioning of an interchassis link (ICL) for the redundancy group used to configure dual aggregation devices in a Junos Fusion topology.</p> <p>Automatic ICCP provisioning of an interchassis link (ICL) simplifies configuration of a Junos Fusion with dual aggregation devices by automatically provisioning the ICCP configuration within the Junos Fusion, instead of requiring the user to manually configure all ICCP parameters. Automatic ICCP Provisioning of an interchassis link (ICL) is enabled by default for a Junos Fusion using a dual aggregation device topology; this statement disables automatic ICCP provisioning.</p> <p>If this statement is entered, the user has to manually configure ICCP in the redundancy group used to configure dual aggregation devices in a Junos Fusion topology.</p> <p>This statement is optional. You can manually configure any available ICCP configuration parameters in the redundancy group when automatic ICCP provisioning is enabled. In cases where a user configures an ICCP parameter when automatic ICCP provisioning is enabled, the user-configured ICCP configuration is used over the automatically-provisioned ICCP configuration parameter.</p> <p>User configuration of ICCP in a Junos Fusion is not required. This statement is recommended for use by expert users only.</p>
<b>Default</b>	Automatic ICCP Provisioning is enabled by default in redundancy groups used to configure dual aggregation devices in a Junos Fusion topology.
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link on page 887</a></li> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## no-auto-vlan-provisioning (Junos Fusion Redundancy Group)

<b>Syntax</b>	no-auto-vlan-provisioning;
<b>Hierarchy Level</b>	[edit chassis satellite-management redundancy-groups <i>redundancy-group-name</i> peer-chassis-id <i>peer-chassis-id-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.
<b>Description</b>	<p>Disables Automatic VLAN Provisioning of an interchassis link (ICL) in a Junos Fusion with dual aggregation devices.</p> <p>Automatic VLAN Provisioning of an interchassis link (ICL) in a Junos Fusion simplifies configuration of a Junos Fusion with dual aggregation devices by allowing the ICL interconnecting the dual aggregation devices to automatically detect all VLAN traffic on the Junos Fusion and seamlessly forward VLAN information between the aggregation devices over the ICL.</p> <p>When automatic VLAN Provisioning is disabled, you have to manually configure the supported VLANs on each ICL to ensure VLAN information is shared between aggregation devices.</p> <p>Automatic VLAN Provisioning only works when the ICL is in trunk mode, and when the ICL interfaces are configured into <b>unit 0 family ethernet-switching</b>.</p>
<b>Default</b>	Automatic VLAN Provisioning is enabled by default for ICLs in trunk mode in a Junos Fusion using dual aggregation devices, when the ICL interfaces are configured into <b>unit 0 family ethernet-switching</b> .
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link on page 887</a></li> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>



## CHAPTER 7

# Configuration Synchronization in a Junos Fusion

- [Understanding Configuration Synchronization on page 891](#)
- [Synchronizing and Committing Configurations on page 896](#)
- [groups on page 909](#)
- [peers \(Commit\) on page 911](#)
- [peers-synchronize on page 912](#)

## Understanding Configuration Synchronization

---

Configuration synchronization works on QFX Series switches, Junos Fusion Provider Edge, Junos Fusion Enterprise, EX Series switches, and MX Series routers.

This topic describes:

- [Benefits of Configuration Synchronization on page 891](#)
- [How Configuration Synchronization Works on page 891](#)
- [How to Enable Configuration Synchronization on page 892](#)
- [How Configuration Synchronization is Supported on page 892](#)
- [Configuration Groups for Local, Remote and Global Configurations on page 892](#)
- [Creating Conditional Groups for Certain Devices on page 893](#)
- [Applying Configuration Groups on page 893](#)
- [Device Configuration Details for Configuration Synchronization on page 893](#)
- [How Configurations and Commits Are Synchronized Between Devices on page 894](#)

## Benefits of Configuration Synchronization

Configuration synchronization enables you to propagate, synchronize, and commit configurations from one device to another. You can log into any one of those devices to manage all devices, thus having a single point of management.

## How Configuration Synchronization Works

Use configuration groups to simplify the configuration process. For example, you can create one configuration group for the local device, one or more for the remote devices,

and one for the global configuration, which is essentially a configuration that is common to all devices.

In addition, you can create conditional groups to specify when a configuration is synchronized with another device. You can enable the **peers-synchronize** statement at the **[edit system commit]** hierarchy to synchronize the configurations and commits across the devices by default. NETCONF over SSH provides a secure connection between the devices, and Secure Copy Protocol (SCP) copies the configurations securely between them.

## How to Enable Configuration Synchronization

To enable configuration synchronization, perform the following steps:

1. Statically map the local device to the remote devices.
2. Create configuration groups for local, remote, and global configurations.
3. Create conditional groups.
4. Create apply groups.
5. Enable NETCONF over SSH.
6. Configure the device details and user authentication details for configuration synchronization.
7. Enable the **peers-synchronize** statement or issue the **commit peers-synchronize** command to synchronize and commit the configurations between local and remote devices.

## How Configuration Synchronization is Supported

On MX Series routers and Junos Fusion, support for configuration synchronization started with Junos OS Release 14.2R6. On QFX Series switches, support for configuration synchronization started with Junos OS Release 15.1X53-D60. On Junos Fusion Data Center, support for configuration synchronization started with Junos OS Release 17.4R1.

## Configuration Groups for Local, Remote and Global Configurations

You can create configuration groups for local, remote and global configurations. A local configuration group is used by the local device, a remote configuration group is used by the remote device, and a global configuration group is shared between the local and remote devices.

For example, you could create a local configuration group called Group A, which would include the configuration used by the local device (Switch A), a remote configuration group called Group B, which would include the configuration used by remote devices (Switch B, Switch C, and Switch D), and a global configuration group called Group C, which would include the configuration that is common to all devices.

Create configuration groups at the **[edit groups]** hierarchy level.



**NOTE:** Configuration synchronization does not support nested groups.

## Creating Conditional Groups for Certain Devices

You can create conditional groups to specify when a particular configuration should be applied to a device. If you want to apply the global configuration to all devices in a four-device configuration, for example, enable the **when peers** [*<name of local peer> <name of remote peer> <name of remote peer> <name of remote peer>*] statement at the **[edit groups]** hierarchy level. If, for example, you want to apply the global configuration (Group C) to the local and remote devices (Switch A, Switch B, Switch C, and Switch D), you could issue the **set groups Group C when peers [Switch A Switch B Switch C Switch D]** command.

## Applying Configuration Groups

To apply configuration groups, enable the **apply-groups** statement at the **[edit]** hierarchy level. For example, to apply the local configuration group (Group A, for example), remote configuration group (Group B, for example), and global configuration group (Group C, for example), issue the **set apply-groups [ GroupA GroupB GroupC ]** command.

## Device Configuration Details for Configuration Synchronization

To synchronize configurations between devices, you need to configure the hostname or IP address, username, and password for the remote devices. To do this, issue the **set peers <hostname-of-remote-peer> user <name-of-user> authentication <plain-text-password-string>** command at the **[edit system commit]** hierarchy on the local device.

For example, to synchronize a configuration from Switch A to Switch B, issue the **set peers SwitchB user administrator authentication test123** command on Switch A.

You also need to statically map the local device to the remote devices. To this, issue the **set system commit peers**

For example, to synchronize a configuration from Switch A to Switch B, Switch C, and Switch D, configure the following on Switch A:

```
Switch A [edit system commit]
peers {
  switchB {
    user admin-swB;
    authentication "$ABC123";
  }
  switchC {
    user admin-swC;
    authentication ""$ABC123";
  }
  switchD {
    user admin-swD;
    authentication "$ABC123";
  }
}
```

```
}  
}  
[edit system]  
  static-host-mapping [  
    SwitchA{  
      inet [ 10.92.76.2 ];  
    }  
    SwitchB{  
      inet [ 10.92.76.4 ];  
    }  
    SwitchC{  
      inet [ 10.92.76.6 ];  
    }  
    SwitchD{  
      inet [ 10.92.76.8 ];  
    }  
  ]  
}
```

If you only want to synchronize configurations from Switch A to Switch B, Switch C, and Switch D, you do not need to configure the **peers** statement on Switch B, Switch C, and Switch D.

The configuration details from the peers statements are also used to establish a NETCONF over SSH connection between the devices. To enable NETCONF over SSH, issue the **set system services netconf ssh** command on all devices.

## How Configurations and Commits Are Synchronized Between Devices

The local (or requesting) device on which you enable the **peers-synchronize** statement or issue the **commit peers-synchronize** command copies and loads its configuration to the remote (or responding) device. Each device then performs a syntax check on the configuration file being committed. If no errors are found, the configuration is activated and becomes the current operational configuration on all devices. The commits are propagated using a remote procedural call (RPC).

The following events occur during configuration synchronization:

1. The local device sends the sync-peers.conf file (the configuration that will be shared with the devices specified in the conditional group) to the remote devices.
2. The remote devices load the configuration, send the results of the load to the local device, export their configuration to the local device, and reply that the commit is complete.
3. The local device reads the replies from the remote devices.
4. If successful, the configuration is committed.

Configuration synchronization is not successful if either a) the remote device is unavailable or b) the remote device is reachable, but there are failures due to the following reasons:

- SSH connection fails because of user and authentication issues.
- Junos OS RPC fails because a lock cannot be obtained on the remote database.
- Loading the configuration fails because of syntax problems.
- Commit check fails.

The **peers-synchronize** statement uses the hostname or IP address, username, and password for the devices you configured in the **peers** statement. With the **peers-synchronize** statement enabled, you can simply issue the **commit** command to synchronize the configuration from one device to another. For example, if you configured the **peers** statement on the local device, and want to synchronize the configuration with the remote device, you can simply issue the **commit** command on the local device. However, if you issue the **commit** command on the local device and the remote device is not reachable, you will receive a warning message saying that the remote device is not reachable and only the configuration on the local device is committed:

Here is an example warning message:

```
error: netconf: could not read hello
error: did not receive hello packet from server
error: Setting up sessions for peer: 'peer1' failed
warning: Cannot connect to remote peers, ignoring it
commit complete
```

If you do not have the **peers** statement configured with the remote device information and you issue the **commit** command, only the configuration on the local device is committed. If the remote device is unreachable and there are other failures, the commit is unsuccessful on both the local and remote devices.



**NOTE:** When you enable the **peers-synchronize** statement and issue the **commit** command, the commit might take longer than a normal commit. Even if the configuration is the same across the devices and does not require synchronization, the system still attempts to synchronize the configurations.

The **commit peers-synchronize** command also uses the hostname or IP address, username, and password for the devices configured in the **peers** statement. If you issue the **commit peers-synchronize** command on the local device to synchronize the configuration with the remote device and the remote device is reachable but there are other failures, the commit fails on both the local and remote devices.

Release History Table

Release	Description
17.4R1	On Junos Fusion Data Center, support for configuration synchronization started with Junos OS Release 17.4R1.
15.1X53-D60	On QFX Series switches, support for configuration synchronization started with Junos OS Release 15.1X53-D60.
14.2R6	On MX Series routers and Junos Fusion, support for configuration synchronization started with Junos OS Release 14.2R6.

## Synchronizing and Committing Configurations

To propagate, synchronize, and commit configuration changes from one device (Junos Fusion Provider Edge, Junos Fusion Enterprise, EX Series switches, and MX Series routers) to another, perform following tasks:

- [Configure Devices for Configuration Synchronization on page 896](#)
- [Create a Global Configuration Group on page 898](#)
- [Create a Local Configuration Group on page 901](#)
- [Create a Remote Configuration Group on page 903](#)
- [Create Apply Groups for the Local, Remote, and Global Configurations on page 905](#)
- [Synchronizing and Committing Configurations on page 905](#)
- [Troubleshooting Remote Device Connections on page 906](#)

### Configure Devices for Configuration Synchronization

Configure the hostnames or IP addresses for the devices that will be synchronizing their configurations as well as the usernames and authentication details for the users administering configuration synchronization. Additionally, enable a NETCONF connection so that the devices can synchronize their configurations. Secure Copy Protocol (SCP) copies the configurations securely between the devices.

For example, if you have a local device named Switch A and want to synchronize a configuration with remote devices named Switch B, Switch C, and Switch D, you need to configure the details for Switch B, Switch C, and Switch D on Switch A.

To specify the configuration details:

1. On the local device, specify the configuration details for the remote device.

```
[edit system commit]
user@switch# set peers hostname user username authentication password string
```

For example, if the local device is Switch A, and the remote devices are Switch B, Switch C, and Switch D:

```
[edit system commit]
user@Switch A# set peers Switch B user admin-SwitchB authentication "$ABC123"
```

```

user@Switch A# set peers Switch C user admin-SwitchC authentication "$ABC123"
user@Switch A# set peers Switch D user admin-SwitchD authentication "$ABC123"

```

The password string is stored as an authenticated password string.

The output for Switch A is as follows:

```

[edit system commit]
  peers {
    Switch B{
      user admin-SwitchB;
      authentication "$ABC123";
    }
    Switch C{
      user admin-SwitchC;
      authentication "$ABC123";
    }
    Switch D{
      user admin-SwitchD;
      authentication "$ABC123";
    }
  }
}

```

2. Statically map Switch A to Switch B, Switch C, and Switch D.

For example:

```

[edit system ]
user@Switch A# set static-host-mapping Switch A inet 10.92.76.2
user@Switch A# set static-host-mapping Switch B inet 10.92.76.4
user@Switch A# set static-host-mapping Switch C inet 10.92.76.6
user@Switch A# set static-host-mapping Switch D inet 10.92.76.8

```

The output is as follows:

```

[edit system]
  static-host-mapping [
    SwitchA{
      inet [ 10.92.76.2 ];
    }
    SwitchB{
      inet [ 10.92.76.4 ];
    }
    SwitchC{
      inet [ 10.92.76.6 ];
    }
    SwitchD{
      inet [ 10.92.76.8 ];
    }
  ]
}

```

3. Enable a NETCONF connection using SSH between all devices (Switch A, Switch B, Switch C, and Switch D).

For example:

```
[edit]
user@Switch A# set system services netconf ssh
```

```
[edit]
user@Switch B# set system services netconf ssh
```

```
[edit]
user@Switch C# set system services netconf ssh
```

```
[edit]
user@Switch D# set system services netconf ssh
```

## Create a Global Configuration Group

Create a global configuration group the local and remote devices.

To create a global configuration group:

1. Specify the devices that will receive the configuration:

```
[edit]
user@switch# set groups <name of group> when peers [<name of local peer> <name of remote peer>]
```

For example:

```
[edit]
user@switch# set groups global when peers [Switch A Switch B Switch C Switch D]
```

2. Create the global configuration that will be shared between the devices.

For example:

```
interfaces {
  ge-0/0/0 {
    unit 0 {
      family inet {
        address 10.1.1.1/8;
      }
    }
  }
  ge-0/0/1 {
    ether-options {
      802.3ad ae0;
    }
  }
  ge-0/0/2 {
    ether-options {
      802.3ad ae1;
    }
  }
  ae0 {
    aggregated-ether-options {
```



```

    lacp {
        active;
    }
}
unit 0 {
    family ethernet-switching {
        interface-mode trunk;
        vlan {
            members v1;
        }
    }
}
}
ae1 {
    aggregated-ether-options {
        lacp {
            active;
            system-id 00:01:02:03:04:05;
            admin-key 3;
        }
        mc-ae {
            mc-ae-id 1;
            redundancy-group 1;
            mode active-active;
        }
    }
    unit 0 {
        family ethernet-switching {
            interface-mode access;
            vlan {
                members v1;
            }
        }
    }
}
}
switch-options {
    service-id 1;
}
}
vlangs {
    v1 {
        vlan-id 100;
        l3-interface irb.100;
    }
}
}
}

```

The output for the configuration is as follows:

```

groups {
    global {
        when {
            peers [ Switch A Switch B Switch C Switch D ];
        }
    }
}

```

```
interfaces {
  ge-0/0/0 {
    unit 0 {
      family inet {
        address 10.1.1.1/8;
      }
    }
  }
  ge-0/0/1 {
    ether-options {
      802.3ad ae0;
    }
  }
  ge-0/0/2 {
    ether-options {
      802.3ad ae1;
    }
  }
  ae0 {
    aggregated-ether-options {
      lacp {
        active;
      }
    }
    unit 0 {
      family ethernet-switching {
        interface-mode trunk;
        vlan {
          members vl1;
        }
      }
    }
  }
  ae1 {
    aggregated-ether-options {
      lacp {
        active;
        system-id 00:01:02:03:04:05;
        admin-key 3;
      }
      mc-ae {
        mc-ae-id 1;
        redundancy-group 1;
        mode active-active;
      }
    }
    unit 0 {
      family ethernet-switching {
        interface-mode access;
        vlan {
          members vl1;
        }
      }
    }
  }
}
```

```

    }
    switch-options {
        service-id 1;
    }
    vlans {
        vl {
            vlan-id 100;
            l3-interface irb.100;
        }
    }
}
}
}

```

## Create a Local Configuration Group

Create a local configuration group for the local device.

To create a local configuration group:

1. Specify the local configuration group name.

```

[edit]
user@switch# set groups name of group when peers [name of local peer]

```

For example:

```

[edit]
user@switch# set groups local when peers [Switch A]

```

2. Include the local configuration that will be used by the local device.

For example:

```

interfaces {
    ae1 {
        aggregated-ether-options {
            mc-ae {
                chassis-id 0;
                status-control active;
                events {
                    iccp-peer-down {
                        prefer-status-control-active;
                    }
                }
            }
        }
    }
}
}
}
irb {
    unit 100 {
        family inet {
            address 10.10.10.3/8 {
                arp 10.10.10.2 l2-interface ae0.0 mac 00:00:5E:00:53:00;
            }
        }
    }
}
}

```

```

    }
  }
  multi-chassis {
    multi-chassis-protection 10.1.1.1 {
      interface ae0;
    }
  }
}

```

The output for the configuration is as follows:

```

groups {
  local {
    when {
      peers Switch A;
    }
    interfaces {
      ae1 {
        aggregated-ether-options {
          mc-ae {
            chassis-id 0;
            status-control active;
            events {
              iccp-peer-down {
                prefer-status-control-active;
              }
            }
          }
        }
      }
    }
  }
  irb {
    unit 100 {
      family inet {
        address 10.10.10.3/8 {
          arp 10.10.10.2 l2-interface ae0.0 mac 00:00:5E:00:53:00;
        }
      }
    }
  }
  multi-chassis {
    multi-chassis-protection 10.1.1.1 {
      interface ae0;
    }
  }
}

```

## Create a Remote Configuration Group

Create a remote configuration group for remote devices.

To create a remote configuration group:

1. Specify the remote configuration group name.

```
[edit]
user@switch# set groups name of group when peers [names of remote peers]
```

For example:

```
[edit]
user@switch# set groups remote when peers [Switch B Switch C Switch D]
```

2. Include the remote configuration that will be used by the remote devices.

For example:

```
interfaces {
  ae1 {
    aggregated-ether-options {
      mc-ae {
        chassis-id 1;
        status-control standby;
        events {
          iccp-peer-down {
            prefer-status-control-active;
          }
        }
      }
    }
  }
}
irb {
  unit 100 {
    family inet {
      address 10.10.10.3/8 {
        arp 10.10.10.2 l2-interface ae0.0 mac 00:00:5E:00:53:00;
      }
    }
  }
}
multi-chassis {
  multi-chassis-protection 10.1.1.1 {
    interface ae0;
  }
}
```

The output for the configuration is as follows:

```
groups {
  remote {
    when {
      peers Switch B Switch C Switch D
    }
  }
  interfaces {
    ae1 {
      aggregated-ether-options {
        mc-ae {
          chassis-id 1;
          status-control standby;
          events {
            iccp-peer-down {
              prefer-status-control-active;
            }
          }
        }
      }
    }
  }
  irb {
    unit 100 {
      family inet {
        address 10.10.10.3/8 {
          arp 10.10.10.2 l2-interface ae0.0 mac 00:00:5E:00:53:00;
        }
      }
    }
  }
  multi-chassis {
    multi-chassis-protection 10.1.1.1 {
      interface ae0;
    }
  }
}
```

## Create Apply Groups for the Local, Remote, and Global Configurations

Create apply groups so changes in the configuration are inherited by local, remote, and global configuration groups. List the configuration groups in order of inheritance, where the configuration data in the first configuration group takes priority over the data in subsequent configuration groups.

When you apply the configuration groups and issue the **commit peers-synchronize** command, changes are committed on both the local and remote devices. If there is an error on any of the devices, an error message is issued, and the commit is aborted.

To apply the configuration groups:

1. Specify the names of the configuration groups.

```
[edit]
user@switch# set apply-groups [<name of global configuration group> <name of local
configuration group> <name of remote configuration group>]
```

For example:

```
[edit]
user@switch# set apply-groups [ global local remote ]
```

The output for the configuration is as follows:

```
apply-groups [ global local remote ];
```

## Synchronizing and Committing Configurations



**NOTE:** The **commit at <"string">** command is not supported when performing configuration synchronization.

You can enable the **peers-synchronize** statement on the local (or requesting) device to copy and load its configuration to the remote (or responding) device by default. You can alternatively issue the **commit peers-synchronize** command.

- Configure the **commit** command on the local (or requesting) to automatically perform a **peers-synchronize** action between devices.

```
[edit]
user@switch# set system commit peers-synchronize
```

The output for the configuration is as follows:

```
system {
  commit {
    peers-synchronize;
  }
}
```

- Issue the **commit peers-synchronize** command on the local (or requesting) device.

```
[edit]
user@switch# commit peers-synchronize
```

## Troubleshooting Remote Device Connections

### Problem Description:

When you issue the **commit** command, the system issues the following error message:

```
root@Switch A# commit
error: netconf: could not read hello error: did not receive hello packet from server error: Setting
up sessions for peer: 'Switch B' failed warning: Cannot connect to remote peers, ignoring it
```

The error message shows that there is a NETCONF connection issue between the local device and remote device.



- Resolution** 1. Verify that the SSH connection to the remote device (Switch B) is working.

```
root@Switch A# ssh root@Switch B
@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@
@ WARNING: REMOTE HOST IDENTIFICATION HAS CHANGED! @
@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@
IT IS POSSIBLE THAT SOMEONE IS DOING SOMETHING NASTY! Someone could be
eavesdropping on you right now (man-in-the-middle attack)! It is also possible that a host
key has just been changed. The fingerprint for the ECDSA key sent by the remote host is
21:e8:5a:58:bb:29:8b:96:a4:eb:cc:8a:32:95:53:c0. Please contact your system administrator.
Add correct host key in /root/.ssh/known_hosts to get rid of this message. Offending ECDSA
key in /root/.ssh/known_hosts:1 ECDSA host key for Switch A has changed and you have
requested strict checking. Host key verification failed.
```

The error message shows that the SSH connection is not working.

2. Delete the key entry in the `/root/.ssh/known_hosts:1` directory and try to connect to Switch B again.

```
root@Switch A# ssh root@Switch B
The authenticity of host 'Switch B (10.92.76.235)' can't be established. ECDSA key fingerprint
is 21:e8:5a:58:bb:29:8b:96:a4:eb:cc:8a:32:95:53:c0. Are you sure you want to continue
connecting (yes/no)? yes Warning: Permanently added 'Switch A,10.92.76.235' (ECDSA) to
the list of known hosts. Password: Last login: Wed Apr 13 15:29:58 2016 from 192.168.61.129 -
JUNOS 15.1I20160412_0929_dc-builder Kernel 64-bit FLEX
JNPR-10.1-20160217.114153_fbsd-builder_stable_10 At least one package installed on this
device has limited support. Run 'file show /etc/notices/unsupported.txt' for details.
```

Connection to Switch B was successful.

3. Log out of Switch B.

```
root@Switch B# exit
logout Connection to Switch B closed.
```

4. Verify that NETCONF over SSH is working.

```
root@Switch A# ssh root@Switch B -s netconf
logout Connection to st-72q-01 closed.
Password:
<hello xmlns="urn:ietf:params:xml:ns:netconf:base:1.0">
<capabilities>
<capability>urn:ietf:params:netconf:base:1.0</capability>
<capability>urn:ietf:params:netconf:capability:candidate:1.0</capability>
```

The log message shows that the NETCONF over SSH was successful.

If the error message showed that NETCONF over SSH was not successful, enable NETCONF over SSH by issuing the **set system services netconf ssh** command.

5. Create configuration groups to synchronize if you have not done so already.

You can issue the **show | compare** command to see if any configuration groups have been created.

```
root@Switch A# show | compare
```

6. Issue the **commit** command.

```
root@Switch A# commit
[edit chassis]
configuration check succeeds
commit complete
{master:0}[edit]
```

The log message shows that the commit was successful.

## groups

```
Syntax  groups {
        group-name {
            configuration-data;
            when {
                chassis chassis-id;
                member member-id;
                model model-id;
                node node-id;
                peers [ names of peers ]
                routing-engine routing-engine-id;
                time <start-time> [to <end-time>];
            }
            conditional-data;
        }
        lccn-re0 {
            configuration-data;
        }
        lccn-re1 {
            configuration-data;
        }
    }
```

Hierarchy Level [edit]

Release Information Statement introduced before Junos OS Release 7.4.

Description Create a configuration group.

Options —

***group-name***—Name of the configuration group. To configure multiple groups, specify more than one ***group-name***.

***configuration-data***—The configuration statements that are to be applied elsewhere in the configuration with the **apply-groups** statement, to have the target configuration inherit the statements in the group.

**when *conditional-data***—Option introduced in Junos 11.3. The conditional statements that are to be applied when this configuration group is applied.

On routers that support multiple Routing Engines, you can also specify two special group names:

**re0**—Configuration statements that are to be applied to the Routing Engine in slot 0.

**re1**—Configuration statements that are to be applied to the Routing Engine in slot 1.

The configuration specified in group **re0** is applied only if the current Routing Engine is in slot 0; likewise, the configuration specified in group **re1** is applied only if the current Routing Engine is in slot 1. Therefore, both Routing Engines can use the same configuration file, each using only the configuration statements that apply to it. Each **re0** or **re1** group contains at a minimum the configuration for the hostname and the management interface (**fxp0**). If each Routing Engine uses a different management interface, the group also should contain the configuration for the backup router and static routes.

(Routing matrix only) The TX Matrix router supports group names for the Routing Engines in each connected T640 router in the following formats:



**NOTE:** The management Ethernet interface used for the TX Matrix Plus router, T1600 routers in a routing matrix, and PTX Series Packet Transport Routers, is **em0**. Junos OS automatically creates the router's management Ethernet interface, **em0**.

- **lccn-re0**—Configuration statements applied to the Routing Engine in slot 0 of the specified T640 router that is connected to a TX Matrix router.
- **lccn-re1**—Configuration statements applied to the specified to the Routing Engine in slot 1 of the specified T640 router that is connected to a TX Matrix router.

*n* identifies the T640 router and can be from 0 through 3.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**      configure—To enter configuration mode.

**Related Documentation**

- *Creating a Junos OS Configuration Group*
- *apply-groups*
- *apply-groups-except*

## peers (Commit)

<b>Syntax</b>	<pre> peers {   <i>name of peer</i> {     <i>user name of user</i>;     <i>authentication string</i>;   } } </pre>
<b>Hierarchy Level</b>	[edit system commit]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 14.2R6 for the MX Series and Junos Fusion.</p> <p>Statement introduced in Junos OS Release 15.1X53-D60 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 16.1R1 for the EX Series.</p>
<b>Description</b>	Configure options for the peers participating in commit synchronization.
<b>Options</b>	<p><b><i>name of peer</i></b>—Hostname or IP address of the peer participating in commit synchronization.</p> <p><b><i>user</i></b>—Name of administrator configuring commit synchronization.</p> <p><b><i>authentication</i></b>—Plain-text password string that is stored as an encrypted password string.</p>
<b>Required Privilege Level</b>	<p><b>maintenance</b>—To view this statement in the configuration.</p> <p><b>maintenance-control</b>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>delta-export</i></li> <li>• <i>fast-synchronize</i></li> <li>• <a href="#">peers-synchronize on page 92</a></li> <li>• <i>persist-groups-inheritance</i></li> <li>• <i>server</i></li> <li>• <i>synchronize</i></li> </ul>

## peers-synchronize

---

Syntax	peers-synchronize;
Hierarchy Level	[edit system commit]
Release Information	Statement introduced in Junos OS Release 14.2R6 for the MX Series and Junos Fusion. Statement introduced in Junos OS Release 15.1X53-D60 for the QFX Series. Statement introduced in Junos OS Release 16.1R1 for the EX Series.
Description	Configure the <b>commit</b> command to automatically perform a <b>peers-synchronize</b> action between peers. The local peer (or requesting peer) on which you enable the <b>peers-synchronize</b> statement copies and loads its configuration to the remote (or responding) peer. Each peer then performs a syntax check on the configuration file being committed. If no errors are found, the configuration is activated and becomes the current operational configuration on both peers.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>delta-export</i></li><li>• <i>fast-synchronize</i></li><li>• <i>persist-groups-inheritance</i></li><li>• <i>server</i></li><li>• <i>synchronize</i></li></ul>

## CHAPTER 8

# Licenses in a Junos Fusion

- [Understanding Junos Fusion Licenses on page 913](#)

## Understanding Junos Fusion Licenses

---

Starting with Junos OS Release 17.2R1, you need to install a Junos Fusion license in addition to any other feature licenses that you install to track and activate certain QFX5100-48SH and QFX5100-48TH models that are shipped with satellite software. These models can only be used as satellite devices. For these models, you need to install a Junos Fusion license in addition to any other feature licenses that you install. See [Table 39 on page 914](#) for a list of satellite devices that require Junos Fusion licenses.



**NOTE:** You do not need Junos Fusion licenses for satellite device models that were purchased as Junos OS-based top-of-rack switches.

Install the Junos Fusion licenses on the aggregation device because the aggregation device is the single point of management in a Junos Fusion. If your Junos Fusion is operating in a topology with multiple aggregation devices, you only need to install the licenses on one aggregation device because the license keys are synchronized between the two aggregation devices.

You can install a single-pack license to activate one satellite device, or you can install multi-pack licenses, which can activate up to 128 satellite devices. If the number of satellite devices in a Junos Fusion exceeds the number of Junos Fusion licenses you have installed, the satellite devices are provisioned, but the system will issue a warning saying that there is a license limit violation. If the satellite device does not have a corresponding Junos Fusion license installed, the satellite device is provisioned, but the system will issue a warning.

[Table 39 on page 914](#) lists the supported aggregation and satellite devices as well as the model numbers of the Junos Fusion license packs.

For information about how to purchase a software license, contact your Juniper Networks sales representative. For information on standard Junos OS feature licenses, see *Software Features That Require Licenses on the QFX Series*.

**Table 39: Junos Fusion License Model Numbers for Satellite Devices**

Aggregation Devices Supported	Satellite Devices Requiring Licenses	Model Numbers of License Packs
QFX10002, QFX10008 and QFX10016 switches	• QFX5100-48SH-AFO	QFX10K-C1-JFS-1
	• QFX5100-48SH-AFI	QFX10K-C1-JFS-4
	• QFX5100-48TH-AFO	QFX10K-C1-JFS-8
	• QFX5100-48TH-AFI	QFX10K-C1-JFS-16
		QFX10K-C1-JFS-32
		QFX10K-C1-JFS-64

- Related Documentation**
- *Junos OS Feature Licenses*
  - *Junos OS Feature License Keys*
  - *Generating License Keys*
  - *Adding New Licenses (CLI Procedure)*
  - *Deleting License Keys (CLI)*
  - *Saving License Keys (CLI)*
  - *Verifying Junos OS License Installation (CLI)*



## CHAPTER 9

# Link Aggregation and LACP on Junos Fusion Data Center

- [Understanding Link Aggregation and Link Aggregation Control Protocol in a Junos Fusion on page 915](#)
- [Configuring an Aggregated Ethernet Interface on page 917](#)
- [Configuring Junos OS for Supporting Aggregated Devices on page 919](#)

## Understanding Link Aggregation and Link Aggregation Control Protocol in a Junos Fusion

---

- [Link Aggregation in Junos Fusion on page 915](#)
- [Link Aggregation Control Protocol in Junos Fusion on page 915](#)
- [Configuring Link Aggregation and LACP in Junos Fusion on page 916](#)
- [Software and Hardware Guidelines when Configuring Link Aggregation and LACP in Junos Fusion on page 917](#)

### Link Aggregation in Junos Fusion

Link aggregation is used to aggregate Ethernet interfaces between two devices. The aggregated Ethernet interfaces that participate in a *link aggregation group (LAG)* are called *member links*. Because a LAG is composed of multiple member links, even if one member link fails, the LAG continues to carry traffic over the remaining links.

### Link Aggregation Control Protocol in Junos Fusion

Link Aggregation Control Protocol (LACP) is one method of bundling several physical interfaces to form one logical aggregated Ethernet interface. LACP is a subcomponent of the IEEE 802.3ad standard and is used as a discovery protocol. The LACP mode can be active or passive. The transmitting link is known as the *actor*, and the receiving link is known as the *partner*. If the actor and partner are both in passive mode, they do not exchange LACP packets, and the aggregated Ethernet links do not come up. If either the actor or partner is active, they do exchange LACP packets. By default, LACP is in passive mode on aggregated Ethernet interfaces. To initiate transmission of LACP packets and response to LACP packets, you must enable LACP active mode. You can configure Ethernet links to actively transmit protocol data units (PDUs), or you can configure the links to passively transmit them, sending out LACP PDUs only when they receive them.

from another link. You can configure both VLAN-tagged and untagged aggregated Ethernet interfaces without LACP enabled. LACP is defined in IEEE 802.3ad, *Aggregation of Multiple Link Segments*.

LACP was designed to achieve the following:

- Automatic addition and deletion of individual links to the LAG without user intervention.
- Link monitoring to check whether both ends of the bundle are connected to the correct group.

The satellite devices provide network interfaces that send and receive network traffic and process the periodic transmission of LACP packets. You can include extended ports (physical interface on a satellite device that provides a connection to servers or endpoints) or local ports in LAGs and MC-LAGs, but not both.

When a dual-homed end device is deployed with Junos Fusion, the network interface cards form a LAG with the Junos Fusion. During a Junos Fusion upgrade, the end device may not be able to exchange LACP PDUs. In such a situation you can configure an interface to be in the **up** state even if no PDUs are exchanged. Use the **force-up** statement to configure an interface when the peer has limited LACP capability. The interface selects the associated LAG by default, whether the LACP mode is active or passive. When there are no received PDUs, the partner is considered to be working in the passive mode. Therefore, LACP PDU transmissions are controlled by the transmitting link.

In Junos Fusion with EVPN, all aggregation devices have knowledge of any extended ports in a LAG because each LAG is assigned a unique Ethernet Segment Identifier (ESI). The ESI is based on the redundancy group configuration and global LAG interface ID.

## Configuring Link Aggregation and LACP in Junos Fusion

1. Create a logical aggregated Ethernet interface.
2. Define the parameters associated with the logical aggregated Ethernet interface, such as a logical unit, interface properties, and Link Aggregation Control Protocol (LACP).
3. Define the member links to be contained within the aggregated Ethernet interface—for example, two local 10-Gigabit Ethernet interfaces on the aggregation device or two extended ports on the aggregation device.
  - LAGs and MC-LAGs cannot include a mix of extended ports and local ports on the aggregation device.
  - LAGs can span across multiple satellite devices in Junos Fusion Provider Edge and Junos Fusion Data Center.
  - LAGs cannot contain both single-homed and multihomed members.
  - Existing restrictions that apply to LAGs and MC-LAGs also apply to LAGs and MC-LAGs that include extended ports.
4. Configure LACP for link detection.

## Software and Hardware Guidelines when Configuring Link Aggregation and LACP in Junos Fusion

Keep in mind these hardware and software guidelines:

- Up to 1750 LAGs are supported in Junos Fusion Provider Edge, Junos Fusion Enterprise, and Junos Fusion Data Center, and the LAGs are numbered from ae0 through ae4091.
- Up to 16 members are supported in a LAG in Junos Fusion Provider Edge, Junos Fusion Enterprise, and Junos Fusion Data Center.
- Configure the LAG on both sides of the link.
- The interfaces on either side of the link must be set to the same speed and be in full-duplex mode.
- Configure LACP for dual-homed extended ports identically on both of the aggregation devices; otherwise LACP will not be in a forwarding state.

### Related Documentation

- [Junos Fusion Provider Edge Overview](#)
- [Understanding Junos Fusion Ports on page 12](#)
- [Configuring Junos OS for Supporting Aggregated Devices on page 919](#)

## Configuring an Aggregated Ethernet Interface

On Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces on M Series and T Series routers, you can associate a physical interface with an aggregated Ethernet interface.



**NOTE:** On a Junos Fusion, you can include extended ports (physical interface on a satellite device that provides a connection to servers or endpoints) or local ports in link aggregation groups (LAGs) and MC-LAGs, but not both. For information on extended ports, see [“Understanding Junos Fusion Ports” on page 12](#).

To configure an aggregated Ethernet interface:

1. Specify that you want to configure the link aggregation group interface.

```
user@host# edit interfaces interface-name
```

2. Configure the aggregated Ethernet interface.

```
[edit interfaces interface-name]  
user@host# set (fastether-options | gigether-options) 802.3ad aex
```

You specify the interface instance number *x* to complete the link association; *x* can be from 0 through 127, for a total of 128 aggregated interfaces on M Series and T Series routers and can be from 1 through 480, for a total of 480 aggregated interfaces on MX Series routers. For MX Series routers running Junos release 14.2R3 and later you can configure a maximum of 1000 aggregated interfaces. Aggregated interfaces are numbered from **ae0** through **ae4092**.



**NOTE:** On MX2010 and MX2020 routers you can configure a maximum of 800 aggregated interfaces.

You must also include a statement defining **aex** at the **[edit interfaces]** hierarchy level. You can optionally specify other physical properties that apply specifically to the aggregated Ethernet interfaces; for details, see *Ethernet Interfaces Overview*, and for a sample configuration, see *Example: Configuring Aggregated Ethernet Interfaces*.



**NOTE:** In general, aggregated Ethernet bundles support the features available on all supported interfaces that can become a member link within the bundle. As an exception, Gigabit Ethernet IQ features and some newer Gigabit Ethernet features are not supported in aggregated Ethernet bundles.

Gigabit Ethernet IQ and SFP interfaces can be member links, but IQ- and SFP-specific features are not supported on the aggregated Ethernet bundle even if all the member links individually support those features.

You need to configure the correct link speed for the aggregated Ethernet interface to eliminate any warning message.



**NOTE:** Before you commit an aggregated Ethernet configuration, ensure that link mode is not configured on any member interface of the aggregated Ethernet bundle; otherwise, the configuration commit check fails.

#### Related Documentation

- *Configuring the Number of Aggregated Ethernet Interfaces on the Device*
- *Deleting an Aggregated Ethernet Interface*
- *Aggregated Ethernet Interfaces Overview*
- *Ethernet Interfaces Feature Guide for Routing Devices*

## Configuring Junos OS for Supporting Aggregated Devices

Junos OS supports the aggregation of physical devices into defined virtual links, such as the link aggregation of Ethernet interfaces defined by the IEEE 802.3ad standard.

Tasks for configuring aggregated devices are:

- [Configuring Virtual Links for Aggregated Devices on page 919](#)
- [Configuring LACP Link Protection at the Chassis Level on page 920](#)
- [Enabling LACP Link Protection on page 920](#)
- [Configuring System Priority on page 921](#)
- [Configuring the Maximum Links Limit on page 921](#)
- [Configuring PPM on Junos Fusion on page 922](#)

### Configuring Virtual Links for Aggregated Devices

To define virtual links, you need to specify the associations between physical and logical devices within the **[edit interfaces]** hierarchy, and assign the correct number of logical devices by including the **device-count** statement at the **[edit chassis aggregated-devices ethernet]** and **[edit chassis aggregated-devices sonet]** hierarchy levels:

```
[edit chassis]
aggregated-devices {
  ethernet {
    device-count number;
  }
  sonet {
    device-count number;
  }
}
```

The aggregated interfaces are numbered from **ae0** through **ae4091**. The maximum number of aggregated interfaces supported by different routers is listed below:

- For PTX Series routers, you can configure a maximum of 128 aggregated interfaces.
- For M Series and T Series routers, you can configure a maximum of 128 aggregated interfaces (LAG bundles).
- In Junos release 14.2R2 and earlier, you can configure a maximum of 480 aggregated interfaces on MX Series routers.
- In Junos release 14.2R3 and later, you can configure a maximum of 1000 aggregated interfaces on MX240, MX480, and MX960 routers.
- In Junos release 14.2R3 and later, you can configure a maximum of 800 aggregated interfaces on MX2010 and MX2020 routers.

- In Junos OS 15.1F5 and 15.1F6 releases, you can configure a maximum of 480 aggregated interfaces on MX240, MX480, and MX960 routers.
- In Junos OS 15.1F5 and 15.1F6 releases, you can configure a maximum of 800 aggregated interfaces on MX2010 and MX2020 routers.

For SONET/SDH, starting with Junos OS Release 13.2, the maximum number of logical interfaces is 64, numbered from **as0** through **as63**. In releases before Junos OS Release 13.2, the maximum was 16.

## Configuring LACP Link Protection at the Chassis Level

Link Aggregation Control Protocol (LACP) is one method of bundling several physical interfaces to form one logical interface. You can configure both VLAN-tagged and untagged aggregated Ethernet with or without LACP enabled. LACP exchanges are made between actors and partners. An actor is the local interface in an LACP exchange. A partner is the remote interface in an LACP exchange.

LACP link protection enables you to force active and standby links within an aggregated Ethernet. You configure LACP link protection by using the **link-protection** and **system-priority** statements at either the chassis or interface level and by configuring port priority at the interface level using the **system-priority** statement. Configuring LACP parameters at the chassis level results in all aggregated Ethernet interfaces using the defined values unless overridden by the LACP configuration on a specific interface.

```
[edit chassis]
aggregated-devices {
  ethernet {
    lacp {
      link-protection {
        non-revertive;
      }
      system-priority priority;
    }
  }
}
```



**NOTE:** LACP link protection also uses port priority. You can configure port priority at the Ethernet interface [**gigether-options**] hierarchy level using the **port-priority** statement. If you choose not to configure port priority, LACP link protection uses the default value for port priority (127).

### See Also

## Enabling LACP Link Protection

To enable LACP link protection for aggregated Ethernet interfaces on the chassis, use the **link-protection** statement at the [**edit chassis aggregated-devices ethernet lacp**] hierarchy level:

```
[edit chassis aggregated-devices ethernet lacp]
link-protection {
  non-revertive;
}
```

By default, LACP link protection reverts to a higher-priority (lower-numbered) link when that higher-priority link becomes operational or a link is added to the aggregator that is determined to be higher in priority. However, you can suppress link calculation by adding the **non-revertive** statement to the LACP link protection configuration. In nonrevertive mode, after a link is active and collecting and distributing packets, the subsequent addition of a higher-priority (better) link does not result in a switch, and the current link remains active.



**BEST PRACTICE:** (MX Series) In a highly scaled configuration over aggregated Ethernet, we recommend that you prevent the router from performing such a switch by including the **non-revertive** statement. Failure to do so may result in some traffic loss if a MIC on which a member interface is located reboots. Using the **non-revertive** statement for this purpose is not effective if both the primary and secondary interfaces are on the MIC that reboots.



**CAUTION:** If both ends of an aggregator have LACP link protection enabled, make sure to configure both ends of the aggregator to use the same mode. Mismatching LACP link protection modes can result in lost traffic.

## Configuring System Priority

To configure LACP system priority for aggregated Ethernet interfaces on the chassis, use the **system-priority** statement at the **[edit chassis aggregated-devices ethernet lacp]** hierarchy level:

```
[edit chassis aggregated-devices ethernet lacp]
system-priority priority;
```

The system priority is a 2-octet binary value that is part of the LACP system ID. The LACP system ID consists of the system priority as the two most-significant octets and the interface MAC address as the six least-significant octets. The system with the numerically lower value for system priority has the higher priority. By default, system priority is 127, with a range of 0 through 65,535.

## Configuring the Maximum Links Limit

To configure the maximum links limit, use the **maximum-links** statement at the **[edit chassis aggregated-devices]** hierarchy level:

```
[edit chassis aggregated-devices]
maximum-links maximum-links-limit;
```

## Configuring PPM on Junos Fusion

If you use Junos Fusion with Junos OS Release 14.2R3, you need to ensure that link aggregation (and STP) work properly by configuring timers for the periodic packet management (PPM) daemons on the aggregation and satellite devices. We recommend using the following timer values:

```
[edit routing-options ppm]
  redistribution-timer 120;
  tcp-keepalive-interval 3000;
  tcp-keepalive-idle 3000;
```

Starting in Junos OS Release 14.2R4, the timer values that ensure proper link aggregation and STP functions are configured by default if you use Junos Fusion with Junos OS.

Release History Table

Release	Description
15.1F5	In Junos OS 15.1F5 and 15.1F6 releases, you can configure a maximum of 480 aggregated interfaces on MX240, MX480, and MX960 routers.
15.1F5	In Junos OS 15.1F5 and 15.1F6 releases, you can configure a maximum of 800 aggregated interfaces on MX2010 and MX2020 routers.
14.2R4	Starting in Junos OS Release 14.2R4, the timer values that ensure proper link aggregation and STP functions are configured by default if you use Junos Fusion with Junos OS.
14.2R3	In Junos release 14.2R3 and later, you can configure a maximum of 1000 aggregated interfaces on MX240, MX480, and MX960 routers.
14.2R3	In Junos release 14.2R3 and later, you can configure a maximum of 800 aggregated interfaces on MX2010 and MX2020 routers.
14.2R3	If you use Junos Fusion with Junos OS Release 14.2R3, you need to ensure that link aggregation (and STP) work properly by configuring timers for the periodic packet management (PPM) daemons on the aggregation and satellite devices.
14.2R2	In Junos release 14.2R2 and earlier, you can configure a maximum of 480 aggregated interfaces on MX Series routers.
13.2	For SONET/SDH, starting with Junos OS Release 13.2, the maximum number of logical interfaces is 64, numbered from <b>as0</b> through <b>as63</b> .

### Related Documentation

- [Configuring an Aggregated Ethernet Interface on page 917](#)
- [Ethernet Interfaces Feature Guide for Routing Devices](#)
- [Configuring Aggregated Ethernet Interfaces on PTX Series Packet Transport Routers](#)
- [Configuring Aggregated SONET/SDH Interfaces](#)



## CHAPTER 10

# MAC Address Synchronization in a Junos Fusion

- [Understanding MAC Address Synchronization in a Junos Fusion on page 923](#)

## Understanding MAC Address Synchronization in a Junos Fusion

---

- [Understanding MAC Address Synchronization on page 923](#)
- [Troubleshooting MAC Address Synchronization on page 924](#)

### Understanding MAC Address Synchronization

In a Junos Fusion that is deployed in a dual-aggregation device topology, traffic on extended ports is load-balanced between the two aggregation devices. In this scenario, two potential problems might occur that can be solved with MAC address synchronization:

- Layer 2 unicast traffic received on an extended port enters one aggregation device while traffic leaving the extended port exits out of the other aggregation device. MAC learning only occurs on one aggregation device, which results in an unknown unicast flood on the other aggregation device.
- If one of the aggregation devices goes down, all multihomed extended port traffic is redirected to the other aggregation device, and MAC address are flooded until local MAC learning is completed.

In Junos Fusion Data Center with MC-LAG, the two aggregation devices use the Inter-Chassis Control Protocol (ICCP) to connect and maintain the Junos Fusion topology. With MAC address synchronization, the Layer 2 address learning process (L2ALD) synchronizes the MAC addresses that are learned on extended ports and uses ICCP to exchange information, such as a MAC address or an IRB MAC address, from one aggregation device to another. For ICCP to work, make sure that your aggregation devices are part of a redundancy group. See [“Configuring or Expanding a Junos Fusion Data Center” on page 48](#) for information on how to configure a redundancy group. In Junos Fusion with EVPN, aggregation devices use BGP to distribute learned MAC addresses that are behind an extended port to other aggregation devices. MAC address synchronization is especially useful when a satellite device is multihomed to both aggregation devices because when a MAC address is learned on one of the extended ports on one aggregation device, the MAC address is synchronized to the other aggregation

device. MAC address synchronization requires no configuration because it is implicitly enabled.



**NOTE:** Static MAC addresses are not synchronized.

## Troubleshooting MAC Address Synchronization

If MAC addresses are not being synchronized, verify the following items:

- Both aggregation devices are part of a redundancy group.

A redundancy group is required for ICCP to work. See [“Configuring or Expanding a Junos Fusion Data Center” on page 48](#) for information on how to configure a redundancy group.

- VLANs and extended ports are configured identically on both aggregation devices.

To verify that the extended ports are configured identically, issue the **show chassis satellite** command on both aggregation devices.

For example, issue the **show chassis satellite** command on aggregation-device1:

```
user@aggregation-device1> show chassis satellite
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
qfx5100-24q-01	100	Online	xe-0/0/1 xe-1/3/0	online online	9/2
qfx5100-24q-02	101	Online	xe-0/0/2 xe-1/3/1	online online	20/12
qfx5100-24q-03	102	Online	xe-0/0/3 xe-1/3/2	online online	16/6
qfx5100-24q-04	103	Online	xe-0/0/4 xe-1/3/3	online online	16/4
qfx5100-24q-05	104	Online	xe-0/0/5 xe-1/3/4	online online	13/3
qfx5100-24q-06	105	Online	xe-0/0/6 xe-1/3/5	online online	24/15
qfx5100-24q-07	106	Online	xe-0/0/7 xe-1/3/6	online online	24/15
qfx5100-24q-08	107	Online	xe-0/0/8 xe-1/3/7	online online	21/12
ex4300-01	109	Online	xe-1/0/1	online	49/2
ex4300-02	110	Online	xe-1/0/2	online	49/2
ex4300-03	111	Online	xe-1/0/3	online	49/2
ex4300-04	112	Online	xe-1/0/4	online	49/11
ex4300-05	113	Online	xe-1/0/5	online	49/11
ex4300-06	114	Online	xe-1/0/6	online	49/11
ex4300-07	115	Online	xe-1/0/7	online	49/11
ex4300-08	116	Online	xe-1/1/0	online	49/11
ex4300-09	117	Online	xe-1/1/1	online	49/11
ex4300-10	118	Online	xe-1/1/2	online	49/11
ex4300-11	119	Online	xe-1/1/3	online	49/11
ex4300-12	120	Online	xe-1/1/4	online	49/11
ex4300-13	121	Online	xe-1/1/5	online	49/11
ex4300-14	122	Online	xe-1/1/6	online	49/11
ex4300-15	123	Online	xe-1/1/7	online	49/11

ex4300-16	124	Online	xe-1/2/1	online	49/11
ex4300-17	125	Online	xe-1/2/2	online	49/11
ex4300-18	126	Online	xe-1/2/3	online	49/2
ex4300-19	127	Online	xe-1/2/4	online	49/1
ex4300-20	128	Online	xe-1/2/5	online	49/1
ex4300-21	129	Online	xe-1/2/6	online	49/1
ex4300-22	130	Online	xe-1/2/7	online	49/1

The output in **Extended Ports** field shows that extended ports are up on aggregation-device1.

- Source MAC addresses are learned by L2ALD.

To verify that the source MAC addresses are learned by L2ALD, issue the **show ethernet-switching table** command on both aggregation devices.

For example, issue the **show ethernet-switching table** command on aggregation-device1:

```
user@aggregation-device1> show ethernet-switching table
D - dynamic MAC, L - locally learned from PFE, R - Remotely learnt from other
AD
vlan_2001      00:23:01:00:00:01  DL      -   ae307.0
  0            0
vlan_2001      00:23:01:00:00:0e  DR      -   ae307.0
  0            0
vlan_2001      00:23:01:00:00:25  DLR     -   ae307.0
  0            0
```

The output shows that MAC address 00:23:01:00:00:25 was learned remotely by the other aggregation device.

- ICCP is configured on both aggregation devices.

To verify that ICCP is configured, issue the **show iccp** command on both aggregation devices.

For example, issue the **show iccp** command on aggregation-device1:

```
user@aggregation-device1> show iccp
Redundancy Group Information for peer 172.16.32.5
  TCP Connection      : Established
  Liveliness Detection : Up

Backup liveness peer status: Up
  Redundancy Group ID      Status
  1                        Up

Client Application: lacpd
  Redundancy Group IDs Joined: 1

Client Application: l2ald_iccpd_client
  Redundancy Group IDs Joined: 1

Client Application: mclag_cfgchkd
  Redundancy Group IDs Joined: 1
```

The output shows that all processes related to ICCP are up and running.

- Trace options are enabled for L2ALD and the Inter-Chassis Control Protocol process (ICCPD).

To enable trace options for L2ALD, issue the **set protocols l2-learning traceoptions** command.

To enable trace options for ICCPD, issue the **set protocols iccp traceoptions** command.

## CHAPTER 11

# VLAN Autosensing in a Junos Fusion

- [Understanding VLAN Autosensing on page 927](#)
- [vlan-auto-sense \(Interfaces\) on page 929](#)
- [vlan-auto-sense \(Satellite\) on page 929](#)
- `clear ethernet-switching satellite vlan-auto-sense`
- `show ethernet-switching interfaces satellite`
- `show vlans satellite`

## Understanding VLAN Autosensing

---

This topic discusses how VLAN autosensing provisions VLANs dynamically on extended ports as part of a Junos Fusion. It covers the following items:

- [Understanding VLAN Autosensing on page 927](#)
- [Configuring VLAN Autosensing on page 927](#)
- [Clearing VLAN Members Learned by VLAN Autosensing on page 928](#)

## Understanding VLAN Autosensing

VLAN autosensing allows extended ports on satellite devices in a Junos Fusion to provision VLANs dynamically, as needed, to preserve the VLAN memory of the aggregation device with no or minimal impact to the forwarding of VLAN traffic in the Junos Fusion. Because the number of extended ports can scale to more than 3000 ports in a Junos Fusion, the system must be able to automatically provision VLANs only when there is VLAN traffic on an extended port. VLAN membership remains provisioned until there is at least one MAC address learned on the VLAN that is provisioned on the extended port. When the last MAC address gets deleted or ages out, the VLAN membership is deleted after a fixed interval of time. The default aging-out time for VLAN membership is 600 seconds, but it can be modified by the configuration.

VLAN autosensing is supported on extended ports only, and only single VLAN-tagged packets are autosensed.

## Configuring VLAN Autosensing

- To enable VLAN autosensing on an extended port, issue the **`set interfaces interface-name unit number family ethernet-switching vlan-auto-sense`** command.

For example:

```
user@switch# set interfaces xe-101/0/0 unit 0 family ethernet-switching
vlan-auto-sense
```

- To specify the number of seconds for which the VLAN members are retained after the last source MAC address is deleted or aged out, issue the **set forwarding-options satellite vlan-auto-sense expiry-time *seconds*** command.

The default aging-out time for VLAN membership is 600 seconds.

For example:

```
user@switch# set forwarding-options satellite vlan-auto-sense expiry-time 600
```

## Clearing VLAN Members Learned by VLAN Autosensing

You can clear VLAN members either globally, per extended port, or per Flexible PIC Concentrator (FPC).

For example, to clear VLAN members on an extended port, issue the **clear ethernet-switching satellite vlan-auto-sense interface *name*** command.

For example:

```
user@switch> clear ethernet-switching satellite vlan-auto-sense interface xe-101/0/1
```

- See Also**
- [vlan-auto-sense \(Interfaces\) on page 929](#)
  - [vlan-auto-sense \(Satellite\) on page 929](#)
  - [clear ethernet-switching satellite vlan-auto-sense on page 930](#)

## vlan-auto-sense (Interfaces)

<b>Syntax</b>	<code>vlan-auto-sense;</code>
<b>Hierarchy Level</b>	[edit interfaces unit <i>unit-number</i> family ethernet-switching]
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Enable automatic provisioning of VLAN members only when VLAN traffic is detected on extended ports in a Junos Fusion.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding VLAN Autosensing on page 927</a></li> </ul>

## vlan-auto-sense (Satellite)

<b>Syntax</b>	<code>vlan-auto-sense {     expiry-time <i>seconds</i>; }</code>
<b>Hierarchy Level</b>	[edit forwarding-options satellite]
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Configure the duration of time for which the VLAN members are retained after the last source MAC address is deleted or ages out. The default time is 600 seconds.
<b>Options</b>	<b>expiry-time <i>seconds</i></b> —Specify the number of seconds for which VLAN members are retained after the last source MAC address is deleted or ages out.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding VLAN Autosensing on page 927</a></li> </ul>

## clear ethernet-switching satellite vlan-auto-sense

---

<b>Syntax</b>	<code>clear ethernet-switching satellite vlan-auto-sense &lt;interface <i>interface-name</i>   fpc <i>slot-number</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Clear VLAN members learned by VLAN autosensing either globally, per extended port, or per Flexible PIC Concentrator (FPC).
<b>Options</b>	<b>interface <i>interface-name</i></b> —(Optional) Clear VLAN members learned by VLAN autosensing per interface.  <b>fpc <i>slot-number</i></b> —(Optional) Clear VLAN members learned by VLAN autosensing per Flexible PIC Concentrator (FPC).
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Understanding VLAN Autosensing on page 927</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear ethernet-switching satellite vlan-auto-sense on page 930</a> <a href="#">clear ethernet-switching satellite vlan-auto-sense interface <i>interface-name</i> on page 930</a> <a href="#">clear ethernet-switching satellite vlan-auto-sense fpc <i>slot-number</i> on page 930</a>

### Sample Output

#### clear ethernet-switching satellite vlan-auto-sense

```
user@switch> clear ethernet-switching satellite vlan-auto-sense
```

#### clear ethernet-switching satellite vlan-auto-sense interface *interface-name*

```
user@switch> clear ethernet-switching satellite vlan-auto-sense interface xe-100/0/1
```

#### clear ethernet-switching satellite vlan-auto-sense fpc *slot-number*

```
user@switch> clear ethernet-switching satellite vlan-auto-sense fpc slot 100
```



## show ethernet-switching interfaces satellite

**Syntax** `show ethernet-switching interfaces satellite`  
`<brief | detail | extensive>`  
`<interface interface-name>`  
`<fpc slot-number>`

**Release Information** Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

**Description** Display information about Ethernet switching interfaces and VLAN memberships. This command displays both static and autosensed VLAN members.



**NOTE:** The `brief`, `detail`, and `extensive` options do not provide different output from that of specifying no options.

**Options** **none**—Display information for Ethernet switching extended ports globally.

**brief | detail | extensive**—(Optional) Display the specified level of output.

**fpc *slot-number***—(Optional) Display information for Ethernet switching extended ports on a Flexible Port Concentrator (FPC).

**interface-name *interface-name***—(Optional) Display information for a specific Ethernet switching extended port.

**Required Privilege Level** view

**Related Documentation**

- [Understanding VLAN Autosensing on page 927](#)

**List of Sample Output** [show ethernet-switching interfaces satellite on page 932](#)  
[show ethernet-switching interfaces satellite interface-name on page 932](#)  
[show ethernet-switching interfaces satellite fpc on page 932](#)

**Output Fields** [Table 40 on page 931](#) lists the output fields for the `show ethernet-switching interfaces satellite` command. Output fields are listed in the approximate order in which they appear.

*Table 40: show ethernet-switching interfaces satellite Output Fields*

Field Name	Field Description
Interface	Name of extended port.
Instance	Name of the virtual switch instance.

Table 40: show ethernet-switching interfaces satellite Output Fields (continued)

Field Name	Field Description
<b>Port mode</b>	The <b>access</b> mode is the port mode default and works with a single VLAN. Port mode can also be <b>trunk</b> , which accepts tagged packets from multiple VLANs on other switches. The third port mode value is <b>tagged-access</b> , which accepts tagged packets from access devices.
<b>Autosense</b>	Displays whether VLAN autosense is enabled or disabled.
<b>VLAN</b>	Names of VLANs that belong to a particular extended port.

## Sample Output

### show ethernet-switching interfaces satellite

```
user@switch> show ethernet-switching interfaces satellite
```

Interface	Instance	PORT-MODE	Auto-Sense	VLAN
xe-101/0/16.0	default-switch	TRUNK	ENABLE	default
xe-101/0/48:3.0	default-switch	TRUNK	ENABLE	default

### show ethernet-switching interfaces satellite interface-name

```
user@switch> show ethernet-switching interfaces satellite interface-name xe-101/0/16
```

Interface	Instance	PORT-MODE	Auto-Sense	VLAN
xe-101/0/16.0	default-switch	TRUNK	ENABLE	default

### show ethernet-switching interfaces satellite fpc

```
user@switch> show ethernet-switching interfaces satellite fpc 101
```

Interface	Instance	PORT-MODE	Auto-Sense	VLAN
xe-101/0/16.0	default-switch	TRUNK	ENABLE	default
xe-101/0/48:3.0	default-switch	TRUNK	ENABLE	default

## show vlans satellite

**Syntax** `show vlans satellite`  
`[brief | detail | extensive]`  
`<fpc-fpc-slot>`  
`<vlan-name vlan-name>`

**Release Information** Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

**Description** Display information for VLANs and VLAN memberships.



**NOTE:** The `brief`, `detail`, and `extensive` options do not provide different output from that of specifying no options.

**Options** `none`—Display information for all VLAN memberships.

`brief | detail | extensive`—(Optional) Display the specified level of output.

`fpc slot-number`—(Optional) Display information for VLAN memberships on a Flexible Port Concentrator (FPC).

`vlan-name vlan-name`—(Optional) Display information for a specific VLAN.

**Required Privilege Level** view

**Related Documentation**

- [Understanding VLAN Autosensing on page 927](#)

**List of Sample Output**

- [show vlans satellite on page 934](#)
- [show vlans satellite fpc 101 on page 934](#)
- [show vlans satellite vlan-name v100 on page 934](#)

**Output Fields** [Table 41 on page 933](#) lists the output fields for the `show vlans satellite` command. Output fields are listed in the approximate order in which they appear.

*Table 41: show vlans satellite Output Fields*

Field Name	Field Description
Instance	Name of the virtual switch instance.
VLAN name	Names of VLANs that belong to the extended port.
Tag	The 802.1Q tag applied to this VLAN. If none is displayed, no tag is applied.

Table 41: show vlans satellite Output Fields (continued)

Field Name	Field Description
<b>Interfaces</b>	Interface associated with learned MAC addresses or all-members (flood entry).

## Sample Output

show vlans satellite

```
user@switch> show vlans satellite
```

Instance	VLAN name	Tag	Interfaces
default-switch	vlan100	100	xe-100/0/1.0 (AS)
			xe-101/0/2.0 (AS)

## Sample Output

show vlans satellite fpc 101

```
user@switch> show vlans satellite fpc 101
```

Instance	VLAN name	Tag	Interfaces
default-switch	default	1	
			xe-101/0/16.0 (AS)
			xe-101/0/48:3.0 (AS)

## Sample Output

show vlans satellite vlan-name v100

```
user@switch> show vlans satellite vlan-name v100
```

Instance	VLAN name	Tag	Interfaces
default-switch	default	1	
			ae9.0
			xe-101/0/16.0 (AS)
			xe-101/0/48:3.0 (AS)

# SNMP MIB Support on Junos Fusion Data Center

- [Chassis MIB Support \(Junos Fusion\) on page 935](#)

## Chassis MIB Support (Junos Fusion)

The Chassis MIB has been enhanced to enable satellite devices to be represented in the chassis MIB. Satellite devices are represented as FPCs/slots (100, 101, 102,...) in the aggregation device. The support is enabled using a separate range of container indices (CIDX), which allows the SNMP process to redirect relevant SNMP requests to the satellite device management process.

The CIDX for representing satellite device hardware components in Junos Fusion are offset by 100 from indices for hardware components on Junos devices; for example a regular CIDX 2 (Power Supply) is 102 for the power supply of the satellite device. Using these indices you can distinguish the satellite device hardware from the aggregate device. The L1 index for satellite device entries refers to their FPC slot identifiers. As per the chassis MIB convention, identifiers are 1-based. For example, satellite device 100 will have an L1 index of 101, satellite device 101 will have an L1 index of 102, and so on.

[Table 42 on page 935](#) shows the CIDXs used for satellite devices.

*Table 42: CIDX's for Satellite Devices*

CIDX	Component Type
102	Power Supply
104	Fan
107	FPC
108	PIC

The following tables have been enhanced to include object IDs for satellite devices:

- `jnxContainersTable`
- `jnxContentsTable`

- jnxFilledTable
- jnxOperatingTable
- jnxFRUTable

Examples of new object IDs in the jnxContainersTable:

```
jnxContainersType.102 = jnxSatelliteDeviceSlotPower.0
jnxContainersType.104 = jnxSatelliteDeviceSlotFan.0
jnxContainersType.107 = jnxSatelliteDeviceSlotFPC.0
jnxContainersType.108 = jnxSatelliteDeviceMediaCardSpacePIC.0
...
jnxContainersDescr.102 = SD PEM slot
jnxContainersDescr.104 = SD FAN slot
jnxContainersDescr.107 = SD FPC slot
jnxContainersDescr.108 = SD PIC slot
```

Examples of new object IDs in the jnxContentsTable:

```
jnxContentsType.102.102.1.0 = jnxSatelliteDeviceSlotPower
jnxContentsType.102.102.2.0 = jnxSatelliteDeviceSlotPower
jnxContentsType.104.102.1.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.104.102.2.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.104.102.3.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.104.102.4.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.104.102.5.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.107.102.0.0 = jnxSatelliteDeviceSlotFPC
jnxContentsType.108.102.1.0 = jnxSatelliteDeviceMediaCardSpacePIC
...
jnxContentsDescr.102.102.1.0 = SD101 PEM 0
jnxContentsDescr.102.102.2.0 = SD101 PEM 1
jnxContentsDescr.104.102.1.0 = SD101 Fan Tray 0
jnxContentsDescr.104.102.2.0 = SD101 Fan Tray 1
jnxContentsDescr.104.102.3.0 = SD101 Fan Tray 2
jnxContentsDescr.104.102.4.0 = SD101 Fan Tray 3
jnxContentsDescr.104.102.5.0 = SD101 Fan Tray 4
jnxContentsDescr.107.102.0.0 = SD101 FPC: QFX5100-48S-6Q @ 101/*/*
jnxContentsDescr.108.102.1.0 = SD101 PIC: 48x10G-6x40G @ 101/0/*
```

The following SNMP traps are generated for Satellite Devices, which are also logged as syslog messages:

- Satellite Device (as FPC) add (online) or remove
- Satellite Device Fan add (online) or remove
- Satellite Device PSU add (online) or remove
- Satellite Device PIC add (online) or remove
- Satellite Device FAN failure or status
- Satellite Device PSU failure or status

Table 43 on page 937 shows the SNMP traps that can be generated for satellite devices.

**Table 43: SNMP Traps Generated for Satellite Devices**

Trap	Condition
jnxFruRemoval	Sent when the specified FRU (FAN/PSU) has been removed from the chassis, or the satellite device has been removed from the aggregation device's database
jnxFruInsertion	Sent when the specified FRU (FAN/PSU) has been inserted into the satellite device
jnxFruPowerOff	Sent when the specified FRU (FAN/PSU) has been powered off in the satellite device
jnxFruPowerOn	Sent when the specified FRU (FAN/PSU) has been powered on in the satellite device
jnxFruFailed	Sent when the specified FRU (FAN/PSU) has failed in the satellite device. Typically, this is due to the FRU not powering up or being unable to load software. FRU replacement might be required
jnxFruOK	
jnxFruOffline	Sent when FPC's new reported state is not online or PSU/FAN/PIC is not present due to satellite device removal
jnxFruOnline	Sent when specified FRU (FPC,PIC,PSU,FAN) gets added in the aggregation device database
jnxFruCheck	Sent when the specified FRU (FAN/PSU) has encountered operational errors

Given below are examples of the system log messages generated:

```
messages:Apr 15 21:28:36 card spmd[6706]: SPMD_SNMP_TRAP10: SNMP trap generated:
  Fru Offline (jnxFruContentsIndex 102, jnxFruL1Index 109, jnxFruL2Index 1,
jnxFruL3Index 0, jnxFruName SD108 PEM 0, jnxFruType 7, jnxFruSlot 0,
jnxFruOfflineReason 1, jnxFruLastPowerOff 0, jnxFruLastPowerOn 0)
```

```
messages:Apr 15 21:28:36 card spmd[6706]: SPMD_SNMP_TRAP10: SNMP trap generated:
  Fru Offline (jnxFruContentsIndex 104, jnxFruL1Index 109, jnxFruL2Index 1,
jnxFruL3Index 1, jnxFruName SD108 Fan Tray 0, jnxFruType 13, jnxFruSlot 0,
jnxFruOfflineReason 1, jnxFruLastPowerOff 0, jnxFruLastPowerOn 0)
```

```
messages:Apr 15 21:28:57 card spmd[8847]: SPMD_SNMP_TRAP7: SNMP trap generated:
  Fru Online (jnxFruContentsIndex 107, jnxFruL1Index 103, jnxFruL2Index 0,
jnxFruL3Index 0, jnxFruName SD102 FPC: @ 102/*/*, jnxFruType 3, jnxFruSlot 102)
```

```
messages:Apr 15 21:28:36 card spmd[6706]: SPMD_SNMP_TRAP10: SNMP trap generated:
  Fru Offline (jnxFruContentsIndex 108, jnxFruL1Index 109, jnxFruL2Index 1,
jnxFruL3Index 0, jnxFruName SD108 PIC: 48x 10/100/1000 Base-T @ 108/0/*, jnxFruType
11, jnxFruSlot 0, jnxFruOfflineReason 1, jnxFruLastPowerOff 0, jnxFruLastPowerOn
0)
```





# DHCP Relay on Junos Fusion Data Center

- [Understanding DHCP Relay in Junos Fusion Data Center on page 939](#)

## Understanding DHCP Relay in Junos Fusion Data Center

---

A Dynamic Host Control Protocol (DHCP) relay agent is any host that forwards DHCP packets between clients and servers. Relay agents are used to forward requests and replies between clients and servers when they are not on the same physical subnet.

The general functionality of DHCP relay for Junos Fusion Data Center with a single aggregation device is the same as for standalone QFX switches. See *DHCP and BOOTP Relay Overview* for a detailed overview of DHCP relay on standalone QFX Series switches.

In a Junos Fusion Data Center with two or more aggregation devices, there are special considerations for DHCP relay. This topic covers:

- [DHCP Relay Packet Flow on page 939](#)
- [DHCP Option 82 on page 939](#)
- [DHCP Relay Configuration on page 940](#)

### DHCP Relay Packet Flow

In a Junos Fusion topology with two or more aggregation devices, each aggregation device acts independently as a DHCP relay agent. When the client sends a DHCP DISCOVER packet, it is broadcast to all aggregation devices, which relay the packet to the DHCP server. The DHCP server receives as many DHCP DISCOVER packets as the number of aggregation devices for the same client. Each packet has a different gateway address (giaddr) but all have the same client identifier.

The DHCP server sends a separate DHCP OFFER packet to each aggregation device in response, offering the same IP address for the client. Each of the aggregation devices forwards the packet to the client. If an aggregation device is not connected directly to the client, the packet is switched through the MC-LAG or EVPN core.

### DHCP Option 82

The DHCP relay agent adds the relay agent information option (option 82) to the packet before forwarding it to the DHCP server. The circuit ID sub-option contains the local identifier of the circuit where the initial request packet was received from the client. In a

Junos Fusion, option 82 is required for the DHCP relay agent to map the DHCP server response to the client interface.

## DHCP Relay Configuration

You configure DHCP relay at the `[edit forwarding-options dhcp-relay]` hierarchy level. DHCP relay configuration on an extended port in a Junos Fusion is identical for a standalone QFX Series switch, with the following caveats for configuring DHCP relay in a Junos Fusion topology with two or more aggregation devices:

- DHCP relay configuration must be synced across the aggregation devices.
- Only stateless DHCP relay is supported.
- Creating a subscriber session on the aggregation devices is not supported.



**NOTE:** In the case where the client and server reside on different VRFs, you must configure the `forward-only` option to ensure that DHCP relay agent does not create a new session or perform any other subscriber management operations (such as creating dynamic interfaces or maintaining leases).

---

- The DHCP server cannot be behind a VXLAN tunnel.

### Related Documentation

- *DHCP and BOOTP Relay Overview*

# LLDP and LLDP-MED on Junos Fusion Data Center

- [Understanding LLDP and LLDP-MED on a Junos Fusion on page 941](#)

## Understanding LLDP and LLDP-MED on a Junos Fusion

---

This topic describes Link Layer Discovery Protocol (LLDP) and Link Layer Discovery Protocol–Media Endpoint Discovery (LLDP-MED) in a Junos Fusion.

This topic covers:

- [LLDP and LLDP-MED in a Junos Fusion Overview on page 941](#)
- [Understanding LLDP and LLDP-MED Configuration and Traffic Handling in a Junos Fusion on page 942](#)

## LLDP and LLDP-MED in a Junos Fusion Overview

LLDP and LLDP-MED are used to learn and distribute device information on network links. The information enables the switch to quickly identify a variety of devices, resulting in a LAN that interoperates smoothly and efficiently.

LLDP-capable devices transmit information in type, length, and value (TLV) messages to neighbor devices. Device information can include information such as chassis and port identification and system name and system capabilities. The TLVs leverage this information from parameters that have already been configured in the Junos operating system (Junos OS).

Many LLDP and LLDP-MED concepts for standalone EX Series switches that support the features also apply to LLDP and LLDP-MED on Junos Fusion . See *Understanding LLDP and LLDP-MED on EX Series Switches* for a detailed overview of LLDP and LLDP-MED on standalone EX Series switches.



**NOTE:** LLDP-MED goes one step further than LLDP, exchanging IP-telephony messages between the switch and the IP telephone. LLDP-MED is an important access layer switch feature that is supported in a Junos Fusion despite not being supported on a standalone EX9200 switch.

## Understanding LLDP and LLDP-MED Configuration and Traffic Handling in a Junos Fusion

LLDP and LLDP-MED traffic is generally handled the same in a Junos Fusion or a standalone series switch. LLDP and LLDP-MED configuration on an extended port in a Junos Fusion is identical for a standalone EX Series switch. See *Configuring LLDP (CLI Procedure)* or *Configuring LLDP-MED (CLI Procedure)*.

The following specifications apply to the device information transmitted by LLDP and LLDP-MED in a Junos Fusion topology with two or more aggregation devices:

- Management address TLVs are merged into a single packet in such a way that the packet contains two or more management address TLVs.
- The SNMP index used as the port ID TLV is derived so that all aggregation devices receive the same index value for port IDs of extended ports.
- The system name for extended ports is the configured redundancy group name. A redundancy group has to be configured in order to enable a topology with two or more aggregation devices.
- The chassis ID is the same for all aggregation devices. If a system MAC address is defined for the redundancy group, is it used as the chassis ID. The system MAC address is configured using the **set chassis satellite-management redundancy-groups *redundancy-group-name* system-mac-address *system-mac-address*** command. If the system MAC is not configured, the chassis ID is the default MAC address, which is 00:00:00:00:00:01.



**BEST PRACTICE:** We recommend specifying a system MAC address if you are running LLDP or LLDP-MED traffic in your Junos Fusion topology.

### Related Documentation

- *Configuring LLDP (CLI Procedure)*
- *Configuring LLDP-MED (CLI Procedure)*

## CHAPTER 15

# DCBX on Junos Fusion Data Center

- [Understanding DCBX on Junos Fusion Data Center on page 943](#)
- [show dcbx neighbors](#)

## Understanding DCBX on Junos Fusion Data Center

---

This topic describes support for Data Center Bridging Capability Exchange protocol (DCBX) on Junos Fusion Data Center, and includes the following sections:

- [DCBX Overview on Junos Fusion Data Center on page 943](#)
- [Understanding DCBX Traffic Handling on Junos Fusion Data Center on page 943](#)
- [Understanding Satellite Device DCBX TLV Inspection to Enable and Disable PFC on page 945](#)

## DCBX Overview on Junos Fusion Data Center

Data Center Bridging Capability Exchange protocol (DCBX) discovers the data center bridging (DCB) capabilities of connected peers. DCBX also advertises the capabilities of applications on interfaces by exchanging application protocol information through application type, length, and value (TLV) elements. DCBX is an extension of Link Layer Discovery Protocol (LLDP), so LLDP must remain enabled on interfaces on which you want to use DCBX. Junos Fusion Data Center uses DCBX and other Data Center Bridging (DCB) features such as Priority Flow Control (PFC) to support Fibre Channel over Ethernet (FCoE) traffic forwarding.

Configuring DCBX for Junos Fusion Data Center extended port interfaces is the same as configuring DCBX for interfaces on standalone QFX Series switches. For details, see *Understanding DCBX* and *Configuring the DCBX Mode*.

## Understanding DCBX Traffic Handling on Junos Fusion Data Center

Junos Fusion Data Center DCBX traffic is generally handled the same as on a standalone QFX series switch, but has some accommodations for the Junos Fusion Data Center architecture.

Extended ports are accessed through satellite devices that are dual-homed or multi-homed to more than one aggregation device operating in active-active mode. For DCBX operation, each aggregation device maintains a DCBX state machine, and the satellite devices act as proxy devices relaying LLDP packets with DCBX TLVs from the

aggregation devices to the DCBX peer. In general, the aggregation devices communicate the same DCBX TLVs because they all have the same configured and operational DCBX parameters.

When using DCBX in IEEE DCBX mode, the satellite device merges the DCBX TLV information from the aggregation devices into a single packet before forwarding it to the peer.

When using DCBX in DCBX Version 1.01 mode, the satellite device cannot simply merge DCBX TLV information because the DCBX *SeqNo* Control TLV can possibly become out-of-sync among different aggregation devices. The SeqNo value in the DCBX state machine is updated each time an exchanged DCB TLV parameter changes. Among Junos Fusion Data Center aggregation devices, the SeqNo value might become out-of-sync if the controlling process or an aggregation device is restarted. As a result, the satellite device maintains the SeqNo field value locally for each extended port interface with DCBX configured, and writes the local SeqNo value in the DCBX packet to the peer after merging the DCBX TLVs from the aggregation devices. The DCBX peer sees only the local satellite device SeqNo, and sends acknowledgement messages for that SeqNo.

The satellite device also maintains a table mapping local SeqNo values to each aggregation device state machine's DCBX SeqNo value. Upon receiving a DCBX TLV with an AckNo field from the peer (an acknowledgement corresponding to the most recently-handled local SeqNo), the satellite device looks up the stored SeqNo mapping for the corresponding aggregation device and rewrites the DCBX AckNo field with the mapped value before relaying the packet to that aggregation device.

Starting in Junos OS Release 17.2R1 and until Junos OS Release 18.1R2 on Junos Fusion Data Center with MC-LAG for dual aggregation devices, the output of the `show dcbx neighbors interface interface-name` command for DCBX Version 1.01 mode displays the satellite device SeqNo value and both aggregation device SeqNo values in the **Local-Advertisement** section. Refer to the following sample output:

```
user@switch> show dcbx neighbors interface xe-100/0/16.0
```

```
Interface : xe-100/0/16.0
  Active-application-map: iscsi-map
  Protocol Mode: DCBX Version 1.01
  Protocol-State: in-sync

  Local-Advertisement:
    Operational version: 0
    sequence-number: 3, acknowledge-id: 6
    satellite sequence-number: 5, peer-chassis sequence-number: 4

  Peer-Advertisement:
    Operational version: 0
    sequence-number: 6, acknowledge-id: 3
```

The **sequence-number** output field shows the aggregation device SeqNo value, the **satellite sequence-number** output field shows the satellite device local SeqNo value, and the **peer-chassis sequence-number** output field shows the SeqNo value on the *other* aggregation device (the peer aggregation device in the Junos Fusion Data Center MC-LAG topology). For a DCBX TLV exchange based on the sample output above, when the

satellite device receives a DCBX TLV packet from the DCBX peer with an AckNo value of 5 acknowledging that DCBX TLV information with SeqNo 5 was handled, the satellite device maps the AckNo field to the value 3 (the corresponding aggregation device's SeqNo value) before relaying it to the aggregation device. Similarly, the satellite device maps that field to the value 4 (the peer aggregation device's SeqNo value) before relaying it to the peer Junos Fusion Data Center aggregation device.

Starting in Junos OS Release 18.1R2-S2 on Junos Fusion Data Center with EVPN, which supports up to 4 aggregation devices, the **show dcbx neighbors** command does not display a **peer-chassis sequence-number** output field because there can be multiple additional aggregation devices with different SeqNo values. The satellite device maintains the sequence number mappings for all aggregation devices locally, and rewrites the SeqNo and AckNo fields before relaying DCBX packets to an aggregation device or DCBX peer as required. The **show dcbx neighbors** command displays only the **sequence-number** local to the aggregation device and the **satellite sequence-number** local to the satellite device, as follows:

```
user@switch> show dcbx neighbors interface xe-150/0/18.0
```

```
Interface : xe-150/0/18.0
  Active-application-map: iscsi-map
  Protocol Mode: DCBX Version 1.01
  Protocol-State: in-sync

  Local-Advertisement:
    Operational version: 0
    sequence-number: 3, acknowledge-id: 6
    satellite sequence-number: 5

  Peer-Advertisement:
    Operational version: 0
    sequence-number: 6, acknowledge-id: 3
```

## Understanding Satellite Device DCBX TLV Inspection to Enable and Disable PFC

When PFC is enabled on an interface, standalone QFX series switches use DCBX to exchange PFC TLVs with a DCBX peer. DCBX uses auto-negotiation to operationally enable PFC in the hardware if the PFC capabilities and parameters on the switch match those advertised by the DCBX peer, or disable PFC if they do not match. In this context, enabled or disabled represents the PFC operational state. PFC must be configured on an interface and also operationally enabled for the feature to affect traffic on an interface for a configured priority and code point.

When DCBX and PFC are configured for Junos Fusion Data Center extended port interfaces, although the aggregation devices run the DCBX state machine, the satellite devices need the same type of information to operationally enable or disable PFC in the hardware locally for an extended port. Because the satellite devices relay DCBX packets for the aggregation devices, the satellite devices get this information by snooping into the PFC TLVs in the DCBX packets exchanged between the aggregation device and the DCBX peer. If the PFC parameters from the aggregation device and DCBX peer do not match, the satellite device can signal the hardware to disable PFC. When either the aggregation device or the DCBX peer indicates updated TLVs so the PFC parameters match, the satellite device can enable PFC.

See [“Configuring CoS in Junos Fusion Data Center” on page 1118](#) for details on configuring and enabling PFC on extended ports.

**Release History Table**

Release	Description
18.1R2-S2	Starting in Junos OS Release 18.1R2-S2 on Junos Fusion Data Center with EVPN, which supports up to 4 aggregation devices, the <b>show dcbx neighbors</b> command does not display a <b>peer-chassis sequence-number</b> output field because there can be multiple additional aggregation devices with different SeqNo values.
17.2R1	Starting in Junos OS Release 17.2R1 and until Junos OS Release 18.1R2 on Junos Fusion Data Center with MC-LAG for dual aggregation devices, the output of the <b>show dcbx neighbors interface interface-name</b> command for DCBX Version 1.01 mode displays the satellite device SeqNo value and both aggregation device SeqNo values in the <b>Local-Advertisement</b> section.

**Related Documentation**

- *Understanding DCBX*
- *Configuring the DCBX Mode*
- [Configuring CoS in Junos Fusion Data Center on page 1118](#)



## show dcbx neighbors

<b>Syntax</b>	<b>show dcbx neighbors</b> <b>&lt;interface <i>interface-name</i>&gt;</b> <b>&lt;terse&gt;</b>
<b>Release Information</b>	Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 11.3 for EX Series switches.
<b>Description</b>	Display information about Data Center Bridging Capability Exchange protocol (DCBX) neighbor interfaces.
<b>Options</b>	<b>none</b> —Display information about all DCBX neighbor interfaces.  <b><i>interface-name</i></b> —(Optional) Display information for the specified interface.  <b>terse</b> —Display the specified level of output.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring DCBX Autonegotiation</i></li> <li>• <i>Example: Configuring DCBX Application Protocol TLV Exchange</i></li> <li>• <i>Example: Configuring an FCoE Transit Switch</i></li> <li>• <i>Example: Configuring DCBX to Support an iSCSI Application</i></li> <li>• <i>Understanding DCB Features and Requirements</i></li> <li>• <i>Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches</i></li> <li>• <a href="#">Understanding DCBX on Junos Fusion Data Center on page 943</a></li> <li>• <i>dcbx</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show dcbx neighbors interface (Junos Fusion Data Center, DCBX Version 1.01 Mode) on page 962</a> <a href="#">show dcbx neighbors interface (QFX Series, DCBX Version 1.01 Mode) on page 966</a> <a href="#">show dcbx neighbors interface (QFX Series, IEEE DCBX Mode) on page 967</a> <a href="#">show dcbx neighbors terse (QFX Series) on page 970</a> <a href="#">show dcbx neighbors (EX4500 Switch: FCoE Interfaces on Both Local and Peer with PFC Configured Compatibly) on page 970</a> <a href="#">show dcbx neighbors (EX4500 Switch: DCBX Interfaces on Local and Peer Are Configured Compatibly with iSCSI Application) on page 971</a> <a href="#">show dcbx neighbors (EX4500 Switch: Includes ETS) on page 972</a>
<b>Output Fields</b>	<a href="#">Table 44 on page 948</a> lists the output fields for the <b>show dcbx neighbors</b> command. Output fields are listed in the approximate order in which they appear.

Table 44: show dcbx neighbors Output Fields

Field Name	Field Description
Interface	Name of the interface.
Parent Interface	Name of the link aggregation group (LAG) interface to which the DCBX interface belongs.
Active-application-map	Name of the application map applied to the interface.
Protocol-Mode	<p>(QFX Series) DCBX protocol mode the interface uses:</p> <ul style="list-style-type: none"><li>• IEEE DCBX Version—The interface uses IEEE DCBX mode.</li><li>• DCBX Version 1.01—The interface uses DCBX version 1.01.</li></ul> <p><b>NOTE:</b> On interfaces that use the IEEE DCBX mode, the <b>show dcbx neighbors interface <i>interface-name</i></b> operational command does not include application, PFC, or ETS operational state in the output.</p>
Protocol-State	<p>(DCBX Version 1.01 only) DCBX protocol state synchronization status:</p> <ul style="list-style-type: none"><li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received a state change message sent by the local interface.</li><li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received a state change message sent by the local interface.</li></ul>

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
Local-Advertisement	<p>(DCBX Version 1.01 only)</p> <p>Status of advertisements that the local interface sends to the peer.</p>
Operational version	Version of the DCBX standard used.
sequence-number	<p>Number of state change messages sent to the peer.</p> <p>If the interface <b>Protocol-State</b> value is <b>in-sync</b>, this number should match the <b>acknowledge-id</b> number in the <b>Peer-Advertisement</b> section.</p> <p>If the interface <b>Protocol-State</b> value is <b>ack-pending</b>, this number does not match the <b>acknowledge-id</b> number in the <b>Peer-Advertisement</b> section.</p> <p>On Junos Fusion Data Center, this field represents the number of DCBX state changes maintained by an aggregation device, which might differ among the aggregation devices in the system. Satellite devices acting as proxy DCBX peers for the aggregation devices maintain a local sequence number (see <b>satellite sequence-number</b> output field) that maps to this value for each aggregation device. In this way, the satellite device presents a consistent sequence number for DCBX TLV traffic to and from the DCBX peer.</p>
acknowledge-id	<p>Number of acknowledge messages received from the peer.</p> <p>If the <b>Protocol-State</b> value is <b>in-sync</b>, this number should match the <b>sequence-number</b> value in the <b>Peer-Advertisement</b> section.</p> <p>If the <b>Protocol-State</b> value is <b>ack-pending</b>, this number does not match the <b>sequence-number</b> value in the <b>Peer-Advertisement</b> section.</p> <p>Similar to the <b>sequence-number</b> field, this field represents the number of received DCBX acknowledge messages maintained by an aggregation device on Junos Fusion Data Center, which might differ among the aggregation devices in the system. Satellite devices acting as proxy DCBX peers for the aggregation devices map <b>acknowledge-id</b> values in received DCBX packets to the equivalent <b>sequence-number</b> value actually being acknowledged for each aggregation device.</p>
satellite sequence-number	

Table 44: *show dcbx neighbors* Output Fields (continued)

Field Name	Field Description
	<p>(Junos Fusion Data Center only) Count of state change messages to the DCBX peer maintained locally on the Junos Fusion satellite device, as compared to the count maintained on the aggregation device displayed in this section's <b>sequence-number</b> output field. Satellite devices act as proxy DCBX peers for the aggregation devices, and map received DCBX <b>acknowledge-id</b> values (corresponding to local satellite sequence number values) to the equivalent aggregation device <b>sequence-number</b> value being acknowledged for each aggregation device. The <b>satellite sequence-number</b> field shows the local satellite device sequence number value actually being exchanged with the DCBX peer.</p>
<b>peer-chassis sequence-number</b>	<p>(Junos Fusion Data Center, starting in Junos OS Release 17.2R1 up until Junos OS Release 18.1R2-S2) Count of state change messages to the DCBX peer maintained by the other aggregation device in the system, as compared to the <b>sequence-number</b> output field in this section. Satellite devices acting as proxy DCBX peers for the aggregation devices map received DCBX <b>acknowledge-id</b> values to the equivalent <b>sequence-number</b> value being acknowledged for each aggregation device. The <b>satellite sequence-number</b> field shows the local satellite device sequence number value actually being exchanged with the DCBX peer.</p> <p>This field is not displayed starting with Junos OS Release 18.1R2-S2 on Junos Fusion Data Center.</p>

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
<b>Peer-Advertisement</b>	(DCBX Version 1.01 only)  Status of advertisements that the peer sends to the local interface.
<b>Operational version</b>	Version of the DCBX standard used.
<b>sequence-number</b>	Number of state change messages the peer sent to the local interface.  If this number matches the <b>acknowledge-id</b> number in the <b>Local-Advertisement</b> field, this indicates that the local interface has acknowledged all of the peer's state change messages and is synchronized.  If this number does not match the <b>acknowledge-id</b> number in the <b>Local-Advertisement</b> field, this indicates that the peer has not yet received an acknowledgment for a state change message from the local interface.
<b>acknowledge-id</b>	Number of acknowledge messages the peer has received from the local interface.  If this number matches the <b>sequence-number</b> value in the <b>Local-Advertisement</b> field, this indicates that the peer has acknowledged all of the local interface's state change messages and is in synchronization.  If this number does not match the <b>sequence-number</b> value in the <b>Local-Advertisement</b> field, this indicates that the peer has not yet sent an acknowledgment for a state change message from the local interface.

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
<b>Feature: PFC</b>	Priority-based flow control (PFC) feature DCBX state information.
<b>Protocol-State</b>	(DCBX Version 1.01 only)  DCBX protocol state synchronization status: <ul style="list-style-type: none"> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received a PFC state change message sent by the local interface.</li> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received a PFC state change message sent by the local interface.</li> <li>• <b>not-applicable</b>—PFC autonegotiation is disabled.</li> </ul>
<b>Operational State</b>	(DCBX Version 1.01 only)  Operational state of the feature: <b>enabled</b> or <b>disabled</b> .
<b>Local-Advertisement</b>	Status of advertisements that the local interface sends to the peer.
<b>Enable</b>	(DCBX Version 1.01 only)  State that the local interface advertises to the peer: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>
<b>Willing</b>	Willingness of the local interface to learn the PFC configuration from the peer using DCBX: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The local interface is willing to learn the PFC configuration from the peer.</li> <li>• <b>No</b>—The local interface is not willing to learn the PFC configuration from the peer.</li> </ul>
<b>Mac auth Bypass Capability</b>	(IEEE DCBX only)  (QFX Series) Media access controller (MAC) authentication bypass provides access to devices based on MAC address authentication. This is not supported, so the only value seen in the local advertisement field is <b>no</b> .
<b>Error</b>	(DCBX Version 1.01 only)  Configuration compatibility error status: <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. Local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. Local and peer configuration are not compatible.</li> </ul>

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
<b>Operational State</b>	<p>PFC operational state on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled on the interface</li> <li>• <b>Disabled</b>—PFC is disabled on the interface</li> </ul>
<b>Maximum Traffic Classes capable to support PFC</b>	<p>Largest number of traffic classes the local interface supports for PFC:</p> <ul style="list-style-type: none"> <li>• <b>6</b> (EX Series switches)</li> <li>• <b>6</b> (QFX Series)</li> </ul>
<b>Code Point</b>	<p>PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.</p>
<b>Admin Mode</b>	<p>PFC administrative state for each code point on the local interface:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled for the code point.</li> <li>• <b>Disabled</b>—PFC is disabled for the code point.</li> </ul>
<b>Operational Mode</b>	<p>(QFX Series) PFC operational mode for each code point:</p> <ul style="list-style-type: none"> <li>• <b>Enable</b>—PFC is enabled on the code point.</li> <li>• <b>Disable</b>—PFC is disabled on the code point.</li> </ul>
<b>Peer-Advertisement</b>	<p>Status of advertisements that the peer sends to the local interface.</p>
<b>Enable</b>	<p>(DCBX Version 1.01 only)</p> <p>State that the peer advertises to the local interface:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>
<b>Willing</b>	<p>Willingness of the peer to learn the PFC configuration from the local interface using DCBX:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The peer is willing to learn the PFC configuration from the local interface.</li> <li>• <b>No</b>—The peer is not willing to learn the PFC configuration from the local interface.</li> </ul>
<b>Error</b>	<p>(DCBX Version 1.01 only)</p> <p>Configuration compatibility error status:</p> <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. Local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. Local and peer configuration are not compatible.</li> </ul>

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
<b>Operational State</b>	<p>PFC operational state on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled on the interface</li> <li>• <b>Disabled</b>—PFC is disabled on the interface</li> </ul>
<b>Mac auth Bypass Capability</b>	<p>(IEEE DCBX only)</p> <p>(QFX Series) Media access controller (MAC) authentication bypass provides access to devices based on MAC address authentication. Although the QFX Series does not support this feature, the connected peer might support it. This field reports the peer state:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The connected peer supports MAC authentication bypass.</li> <li>• <b>No</b>—The connected peer does not support MAC authentication bypass.</li> </ul>
<b>Maximum Traffic Classes capable to support PFC</b>	<p>Largest number of traffic classes the peer supports for PFC:</p> <ul style="list-style-type: none"> <li>• <b>6</b> (EX Series switches)</li> <li>• <b>8</b> (QFX Series)</li> </ul>
<b>Code Point</b>	<p>PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.</p>
<b>Admin Mode</b>	<p>PFC administrative state for each code point on the peer:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—PFC is enabled for the code point.</li> <li>• <b>Disabled</b>—PFC is disabled for the code point.</li> </ul>



Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
<b>Feature: Application</b>	State information for the DCBX application.
<b>Protocol-State</b>	<p>(DCBX Version 1.01 only)</p> <p>DCBX protocol state synchronization status:</p> <ul style="list-style-type: none"> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received an FCoE state change message sent by the local interface.</li> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received an FCoE state change message sent by the local interface.</li> <li>• <b>not-applicable</b>—The local interface is set to <b>no-auto-negotiation</b> (autonegotiation is disabled). If the interface is associated with an FCoE forwarding class, the interface advertises FCoE capability even if the connected peer does not advertise FCoE capability.</li> </ul>
<b>Local-Advertisement</b>	<p>Status of advertisements that the local interface sends to the peer.</p> <p>If the local interface is set to <b>no-auto-negotiation</b> (autonegotiation is disabled), the local advertisement portion of the output is not shown.</p>
<b>Enable</b>	<p>(DCBX Version 1.01 only)</p> <p>State that the local interface advertises to the peer:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>
<b>Willing</b>	<p>(DCBX Version 1.01 only)</p> <p>Willingness of the local interface to learn the FCoE interface state from the peer using DCBX:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The local interface is willing to learn the FCoE interface state from the peer.</li> <li>• <b>No</b>—The local interface is not willing to learn the FCoE interface state from the peer.</li> </ul>
<b>Error</b>	<p>(DCBX Version 1.01 only)</p> <p>Configuration compatibility error status:</p> <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. The local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. The local and peer configuration are not compatible.</li> </ul>
<b>Appl-Name</b>	Name of the application:

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
<b>Ethernet-Type</b>	<p>(DCBX Version 1.01 only)</p> <p>Ethernet type (EtherType) of the application. For example, <b>0x8906</b> indicates the EtherType for the FCoE application. Either the EtherType (for Layer 2 applications) or the Socket Number (for Layer 4 applications) of the application is displayed in the output.</p>
<b>Socket-Number</b>	<p>Destination port socket number of the application, if applicable. Either the EtherType (for Layer 2 applications) or the Socket Number (for Layer 4 applications) of the application is displayed in the output.</p>
<b>Priority-Field or Priority-Map</b>	<p>Priority assigned to the application.</p> <p>For EX Series switches, the priority of the FCoE application is determined by the PFC congestion notification profile that has been configured and associated with the FCoE interface. For other applications, the priority is based on the application map.</p>
<b>Status</b>	<p>(DCBX Version 1.01 only)</p> <p>Local status when autonegotiation is enabled:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—The application feature is enabled on both the local interface and the peer interface. (The local configuration and the peer configuration match.)</li> <li>• <b>Disabled</b>—The local configuration and the peer configuration do not match.</li> </ul> <p><b>NOTE:</b> If there is a configuration mismatch in one application between the switch and the peer, all the other applications including FCoE are disabled.</p>
<b>Peer-Advertisement</b>	<p>Status of advertisements that the peer sends to the local interface.</p>
<b>Enable</b>	<p>(DCBX Version 1.01 only)</p> <p>State that the peer advertises to the local interface:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>
<b>Willing</b>	<p>(DCBX Version 1.01 only)</p> <p>Willingness of the peer to learn the FCoE interface state from the local interface using DCBX:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—The peer is willing to learn the FCoE interface state from the local interface.</li> <li>• <b>No</b>—The peer is not willing to learn the FCoE interface state from the local interface.</li> </ul>

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
<b>Error</b>	<p>(DCBX Version 1.01 only)</p> <p>Configuration compatibility error status:</p> <ul style="list-style-type: none"> <li>• <b>No</b>—No error detected. Local and peer configuration are compatible.</li> <li>• <b>Yes</b>—Error detected. Local and peer configuration are not compatible.</li> </ul>
<b>Appl-Name</b>	<p>Name of the application:</p> <ul style="list-style-type: none"> <li>• <b>FCoE</b>—Fibre Channel over Ethernet</li> </ul>
<b>Ethernet-Type</b>	<p>Ethernet type (EtherType) of the application. For example, <b>0x8906</b> indicates the EtherType for the FCoE application. Either the EtherType (for Layer 2 applications) or the Socket-Number (for Layer 4 applications) of the application is displayed in the output.</p>
<b>Socket-Number</b>	<p>Destination port socket number of the application, if applicable. Either the EtherType (for Layer 2 applications) or the Socket Number (for Layer 4 applications) of the application is displayed in the output.</p>
<b>Priority-Field or Priority-Map</b>	<p>Priority assigned to the application.</p>
<b>Status</b>	<p>(DCBX Version 1.01 only)</p> <p>Peer interface status:</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—The application feature is enabled on both the local interface and the peer interface. (The local configuration and the peer configuration match.)</li> <li>• <b>Disabled</b>—The local configuration and the peer configuration do not match.</li> </ul>

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
<b>Feature: ETS</b>	Enhanced Transmission Selection (ETS) DCBX state information.
<b>Protocol-State</b>	(DCBX Version 1.01 only)  ETS protocol state synchronization status: <ul style="list-style-type: none"> <li>• <b>in-sync</b>—The local interface received an acknowledge message from the peer to indicate that the peer received an ETS state change message sent by the local interface.</li> <li>• <b>ack-pending</b>—The local interface has not yet received an acknowledge message from the peer to indicate that the peer received an ETS state change message sent by the local interface.</li> </ul>
<b>Operational State</b>	(DCBX Version 1.01 only)  Operational state of the feature, <b>enabled</b> or <b>disabled</b> .
<b>Local-Advertisement</b>	Status of advertisements that the local interface sends to the peer.
<b>Enable</b>	(DCBX Version 1.01 only)  State that the local interface advertises to the peer: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>
<b>TLV Type</b>	(IEEE DCBX only)  Type of ETS TLV: <ul style="list-style-type: none"> <li>• <b>Configuration</b>—Advertises the Configuration TLV, which communicates the local ETS configuration to the peer but does not ask the peer to use the configuration.</li> <li>• <b>Recommendation</b>—Advertises the Recommendation TLV, which communicates the local ETS configuration to the peer, and if the peer is “willing,” configures the peer interface to match the local ETS configuration.</li> <li>• <b>Recommendation-or-Configuration</b>—Advertises both TLVs.</li> </ul>
<b>Willing</b>	Willingness of the local interface to learn the ETS state from the peer using DCBX (EX Series switches always advertise <b>No</b> for this field): <ul style="list-style-type: none"> <li>• <b>Yes</b>—Local interface is willing to learn the ETS state from the peer.</li> <li>• <b>No</b>—Local interface is not willing to learn the ETS state from the peer.</li> </ul>
<b>Credit Based Shaper</b>	

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
	(IEEE DCBX only)  Alternative method of flow control to buffer-to-buffer credit. The QFX Series does not support a credit-based shaper, so the value of this field is always <b>No</b> .
<b>Error</b>	(DCBX Version 1.01 only)  Configuration error status: <ul style="list-style-type: none"> <li>• <b>No</b>—No error. This should always be the switch ETS error state.</li> <li>• <b>Yes</b>—Error detected.</li> </ul>
<b>Maximum Traffic Classes capable to support PFC</b>	(DCBX Version 1.01 only)  Largest number of traffic classes the local interface supports for PFC.
<b>Maximum Traffic Classes supported</b>	(IEEE DCBX only)  Largest number of traffic classes the local interface supports for ETS. (EX Series switches support only one traffic class for ETS. However, a different value might be shown for this field.)
<b>Code Point</b>	PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.
<b>Priority-Group</b>	Class-of-service (CoS) priority group (forwarding class set) identification number.
<b>Percentage B/W</b>	Configured minimum percentage of link bandwidth allocated to the priority group. Only explicitly configured values appear in this output column. If the link bandwidth is the default percentage, it is not shown. (EX Series switches allocate 100% of link bandwidth to the default priority group, group 7.)
<b>Transmission Selection Algorithm</b>	(IEEE DCBX only)  The transmission selection algorithm used by the interface. The QFX Series supports ETS but does not support using the credit-based shaper algorithm, so the only value shown in this field is <b>ETS</b> .
<b>Peer-Advertisement</b>	Status of advertisements that the peer sends to the local interface.
<b>Enable</b>	

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
	(DCBX Version 1.01 only)  State that the peer advertises to the local interface: <ul style="list-style-type: none"> <li>• <b>Yes</b>—The feature is enabled.</li> <li>• <b>No</b>—The feature is disabled.</li> </ul>
<b>TLV Type</b>	(IEEE DCBX only)  Type of ETS TLV: <ul style="list-style-type: none"> <li>• <b>Configuration</b>—Advertises the Configuration TLV, which communicates the local ETS configuration to the peer but does not ask the peer to use the configuration.</li> <li>• <b>Recommendation</b>—Advertises the Recommendation TLV, which communicates the local ETS configuration to the peer, and if the peer is "willing," configures the peer interface to match the local ETS configuration.</li> <li>• <b>Configuration/Recommendation</b>—Advertises both TLVs.</li> </ul>
<b>Willing</b>	Willingness of the peer to learn the ETS state from the local interface using DCBX: <ul style="list-style-type: none"> <li>• <b>Yes</b>—Peer is willing to learn the ETS state from the local interface.</li> <li>• <b>No</b>—Peer is not willing to learn the ETS state from the local interface.</li> </ul>
<b>Credit Based Shaper</b>	(IEEE DCBX only)  Alternative method of flow control to buffer-to-buffer credit. The QFX Series does not support a credit-based shaper, so the value of this field is always <b>No</b> .
<b>Error</b>	(DCBX Version 1.01 only)  Configuration error status of the peer: <ul style="list-style-type: none"> <li>• <b>No</b>—No error in peer ETS TLV.</li> <li>• <b>Yes</b>—Error in peer ETS TLV.</li> </ul>
<b>Maximum Traffic Classes capable to support PFC</b>	(DCBX Version 1.01 only)  Largest number of traffic classes the local interface supports for PFC.
<b>Maximum Traffic Classes supported</b>	(IEEE DCBX only)  Largest number of traffic classes the local interface supports for ETS. (EX Series switches support only one traffic class for ETS. However, a different value might be shown for this field.)
<b>Code Point</b>	

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
	PFC code point, which is specified in the 3-bit class-of-service field in the VLAN header.
Priority-Group	CoS priority group (forwarding class set) identification number.
Percentage B/W	Configured minimum percentage of link bandwidth allocated to the priority group. (EX Series switches allocate 100% of link bandwidth to the default priority group, group 7.)
Transmission Selection Algorithm	(IEEE DCBX only) Transmission selection algorithm used by the interface. The QFX Series supports ETS but does not support using the credit-based shaper algorithm, so the only value shown in this field is <b>ETS</b> .
PFC	(QFX Series, <b>terse</b> option only) DCBX TLV advertisement state for PFC: <ul style="list-style-type: none"> <li>• Disabled—PFC configuration matches the configuration on the connected peer and PFC is disabled</li> <li>• Enabled—PFC configuration matches the configuration on the connected peer and PFC is enabled</li> <li>• Not Advt—Interface does not advertise PFC to the connected peer</li> </ul>
ETS	( <b>terse</b> option only) Local DCBX TLV advertisement state for ETS: <ul style="list-style-type: none"> <li>• Advt—Interface advertises ETS TLVs</li> <li>• Disabled—ETS is disabled on the interface (interface does not advertise ETS)</li> </ul>
ETS Rec	( <b>terse</b> option only) DCBX TLV peer advertisement state for ETS (state received from the connected DCBX peer): <ul style="list-style-type: none"> <li>• Advt—Peer interface advertises ETS TLVs</li> <li>• Not Advt—Peer interface does not advertise ETS</li> </ul> <p><b>NOTE:</b> When the DCBX mode is DCBX version 1.01, no peer information is displayed.</p>

Table 44: show dcbx neighbors Output Fields (continued)

Field Name	Field Description
Version	<p>(<b>terse</b> option only) The DCBX version used on the interface and whether the DCBX version was autonegotiated or explicitly configured:</p> <ul style="list-style-type: none"> <li>• <b>IEEE</b>—The interface uses IEEE DCBX.</li> <li>• <b>1.01</b>—The interface uses DCBX version 1.01.</li> </ul> <p>When the DCBX version used is the result of autonegotiation, the term <b>(Auto)</b> appears next to the version. For example, <b>IEEE (Auto)</b> indicates that the interface autonegotiated with the connected peer to use IEEE DCBX. Autonegotiation is enabled by default.</p>

## Sample Output

### show dcbx neighbors interface (Junos Fusion Data Center, DCBX Version 1.01 Mode)

```
user@aggregation-device> show dcbx neighbors interface xe-0/0/0
```

```
Interface : xe-103/0/10.0 - Parent Interface: ae2.0
Active-application-map: iscsi-map
Protocol Mode: DCBX Version 1.01
Protocol-State: in-sync

Local-Advertisement:
  Operational version: 0
  sequence-number: 1, acknowledge-id: 6
  satellite sequence-number: 2

Peer-Advertisement:
  Operational version: 0
  sequence-number: 6, acknowledge-id: 1

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 8

Code Point      Admin Mode
000             Disabled
001             Disabled
010             Disabled
011             Enabled
100             Enabled
101             Disabled
110             Disabled
111             Disabled

Peer-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 8
```



Code Point	Admin Mode
000	Disabled
001	Disabled
010	Disabled
011	Enabled
100	Enabled
101	Disabled
110	Disabled
111	Disabled

Feature: Application, Protocol-State: in-sync

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

App1-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00001000	Enabled
iSCSI		3260	00010000	Enabled

Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

App1-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00001000	Enabled
iSCSI		3260	00010000	Enabled

Feature: ETS, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes supported : 3

Code Point	Priority-Group
000	0
001	6
010	6
011	1
100	2
101	6
110	6
111	6

Priority-Group	Percentage B/W
0	35%
1	40%
2	25%
6	0%

Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes supported : 3

Code Point	Priority-Group
000	0

001	6
010	6
011	1
100	2
101	6
110	6
111	6

Priority-Group	Percentage B/W
0	35%
1	40%
2	25%
6	0%

Interface : xe-103/0/3.0 - Parent Interface: ae2.0

Active-application-map: iscsi-map

Protocol Mode: DCBX Version 1.01

Protocol-State: in-sync

Local-Advertisement:

Operational version: 0

sequence-number: 1, acknowledge-id: 5

satellite sequence-number: 2

Peer-Advertisement:

Operational version: 0

sequence-number: 5, acknowledge-id: 1

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 8

Code Point	Admin Mode
000	Disabled
001	Disabled
010	Disabled
011	Enabled
100	Enabled
101	Disabled
110	Disabled
111	Disabled

Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 8

Code Point	Admin Mode
000	Disabled
001	Disabled
010	Disabled
011	Enabled
100	Enabled
101	Disabled
110	Disabled
111	Disabled

Feature: Application, Protocol-State: in-sync

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Appl-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00001000	Enabled
iSCSI		3260	00010000	Enabled

Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Appl-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00001000	Enabled
iSCSI		3260	00010000	Enabled

Feature: ETS, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes supported : 3

Code Point	Priority-Group
000	0
001	6
010	6
011	1
100	2
101	6
110	6
111	6

Priority-Group	Percentage B/W
0	35%
1	40%
2	25%
6	0%

Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes supported : 3

Code Point	Priority-Group
000	0
001	6
010	6
011	1
100	2
101	6
110	6
111	6

Priority-Group	Percentage B/W
0	35%

1	40%
2	25%
6	0%

**show dcbx neighbors interface (QFX Series, DCBX Version 1.01 Mode)**

```
user@switch> show dcbx neighbors interface xe-0/0/0
```

```
Interface : xe-0/0/0.0 - Parent Interface: ae0.0
```

```
Active-application-map: app-map-1
```

```
Protocol-State: in-sync
```

```
Protocol-Mode: DCBX Version 1.01
```

```
Local-Advertisement:
```

```
Operational version: 1
```

```
sequence-number: 130, acknowledge-id: 102
```

```
Peer-Advertisement:
```

```
Operational version: 1
```

```
sequence-number: 102, acknowledge-id: 130
```

```
Feature: PFC, Protocol-State: in-sync
```

```
Operational State: Enabled
```

```
Local-Advertisement:
```

```
Enable: Yes, Willing: No, Error: No
```

```
Maximum Traffic Classes capable to support PFC: 8
```

Code Point	Admin Mode	Operational Mode
000	Disabled	Disable
001	Disabled	Disable
010	Disabled	Disable
011	Enabled	Enable
100	Enabled	Enable
101	Disabled	Disable
110	Disabled	Disable
111	Disabled	Disable

```
Peer-Advertisement:
```

```
Enable: Yes, Willing: No, Error: No
```

```
Maximum Traffic Classes capable to support PFC: 8
```

Code Point	Admin Mode
000	Disabled
001	Disabled
010	Disabled
011	Enabled
100	Enabled
101	Disabled
110	Disabled
111	Disabled

```
Feature: Application, Protocol-State: in-sync
```

```
Local-Advertisement:
```

```
Enable: Yes, Willing: No, Error: No
```

Appl-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00001110	Enabled

```

iSCSI                                3260                10000000        Enabled

Peer-Advertisement:
  Enable: Yes, Willing: Yes, Error: No

  Appl-Name    Ethernet-Type    Socket-Number    Priority-Map    Status
  FCoE         0x8906                N/A              00001110        Enabled

Feature: ETS, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 8

  Code Point    Priority-Group
  000            0
  001            7
  010            7
  011            7
  100            0
  101            1
  110            1
  111            7

  Priority-Group    Percentage B/W
  0                 40%
  1                 5%

Peer-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 8

  Code Point    Priority-Group
  000            0
  001            7
  010            7
  011            7
  100            0
  101            1
  110            1
  111            7

  Priority-Group    Percentage B/W
  0                 40%
  1                 5%

```

#### show dcbx neighbors interface (QFX Series, IEEE DCBX Mode)

```

user@switch> show dcbx neighbors interface xe-0/0/0

Interface : xe-0/0/0.0 - Parent Interface: ae0.0
Active-application-map: app-map-1

```

Protocol-Mode: IEEE-DCBX Version

Feature: PFC

Local-Advertisement:

Willing: No  
Mac auth Bypass Capability: No  
Operational State: Enabled

Maximum Traffic Classes capable to support PFC: 8

Code Point	Admin Mode
000	Disabled
001	Disabled
010	Disabled
011	Enabled
100	Enabled
101	Disabled
110	Disabled
111	Disabled

Peer-Advertisement:

Willing: No  
Mac auth Bypass Capability: No  
Operational State: Enabled

Maximum Traffic Classes capable to support PFC: 8

Code Point	Admin Mode
000	Disabled
001	Disabled
010	Disabled
011	Enabled
100	Enabled
101	Disabled
110	Disabled
111	Disabled

Feature: Application

Local-Advertisement:

Appl-Name	Ethernet-Type	Socket-Number	Priority-field
FCoE	0x8906		00001110
iSCSI		3260	10000000

Peer-Advertisement:

Appl-Name	Ethernet-Type	Socket-Number	Priority-field
FCoE	0x8906	N/A	00001110

Feature: ETS

Local-Advertisement:

TLV Type: Configuration/Recommendation  
Willing: No  
Credit Based Shaper: No  
Maximum Traffic Classes supported: 3

Code Point	Priority-Group
000	0

001	7
010	7
011	7
100	0
101	1
110	1
111	7

Priority-Group	Percentage B/W
0	40%
1	5%

Priority-Group	Transmission Selection Algorithm
0	Enhanced Transmission Selection
1	Enhanced Transmission Selection

## Peer-Advertisement:

TLV Type: Configuration

Willing: No

Credit Based Shaper: No

Code Point	Priority-Group
000	0
001	7
010	7
011	7
100	0
101	1
110	1
111	7

Priority-Group	Percentage B/W
0	40%
1	5%

Priority-Group	Transmission Selection Algorithm
0	Enhanced Transmission Selection
1	Enhanced Transmission Selection

## Peer-Advertisement:

TLV Type: Recommendation

Code Point	Priority-Group
000	0
001	7
010	7
011	7
100	0
101	1
110	1
111	7

Priority-Group	Percentage B/W
0	40%
1	5%

Priority-Group	Transmission Selection Algorithm
0	Enhanced Transmission Selection

# 1 Enhanced Transmission Selection

## show dcbx neighbors terse (QFX Series)

```
user@switch> show dcbx neighbors terse
```

Interface	Parent Interface	PFC	ETS	ETS	Version Rec
xe-0/0/8.0	-	Enabled	Advt	Advt	IEEE (Auto)
xe-0/0/9.0	-	Disabled	Disabled		1.01
xe-0/0/11.0	ae0.0	Enabled	Advt	Advt	IEEE (Auto)
xe-0/0/12.0	ae0.0	Enabled	Advt	Advt	IEEE (Auto)
xe-0/0/32.0	-	Enabled	Advt	Not Advt	IEEE
xe-0/0/36.0	-	Not Advt	Advt	Advt	IEEE

## show dcbx neighbors (EX4500 Switch: FCoE Interfaces on Both Local and Peer with PFC Configured Compatibly)

```
user@switch> show dcbx neighbors interface xe-0/0/14
```

```
Interface : xe-0/0/14.0 - Parent Interface: ae0.0
Protocol-State: in-sync

Local-Advertisement:
  Operational version: 0
  sequence-number: 6, acknowledge-id: 6

Peer-Advertisement:
  Operational version: 0
  sequence-number: 6, acknowledge-id: 6

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 6

Code Point          Admin Mode
000                  Disabled
001                  Disabled
010                  Disabled
011                  Enabled
100                  Disabled
101                  Disabled
110                  Disabled
111                  Disabled

Peer-Advertisement:
  Enable: Yes, Willing: No, Error: No
  Maximum Traffic Classes capable to support PFC: 6

Code Point          Admin Mode
```



```

000      Disabled
001      Disabled
010      Disabled
011      Enabled
100      Disabled
101      Disabled
110      Disabled
111      Disabled

```

Feature: Application, Protocol-State: in-sync

Local-Advertisement:

Enable: Yes, Willing: No, Error: No <<< Error bit will not be set as there is no miss configuration between local and peer.

Appl-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00001000	Enabled

Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Status	Appl-Name	Ethernet-Type	Socket-Number	Priority-Map
Enabled	FCoE	0x8906		00001000

### show dcbx neighbors (EX4500 Switch: DCBX Interfaces on Local and Peer Are Configured Compatibly with iSCSI Application)

```
user@switch> show dcbx neighbors interface xe-0/0/14
```

Interface : xe-0/0/14.0 - Parent Interface: ae0.0

Protocol-State: in-sync

Active-application-map: iscsi-map

Local-Advertisement:

Operational version: 0  
sequence-number: 9, acknowledge-id: 12

Peer-Advertisement:

Operational version: 0  
sequence-number: 12, acknowledge-id: 9

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

Local-Advertisement:

Enable: Yes, Willing: No, Error: No  
Maximum Traffic Classes capable to support PFC: 6

Code Point	Admin Mode
000	Disabled
001	Disabled
010	Disabled
011	Enabled
100	Disabled
101	Disabled
110	Disabled
111	Disabled

## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes capable to support PFC: 6

Code Point	Admin Mode
000	Disabled
001	Disabled
010	Disabled
011	Enabled
100	Disabled
101	Disabled
110	Disabled
111	Disabled

Feature: Application, Protocol-State: in-sync

## Local-Advertisement:

Enable: Yes, Willing: No, Error: No

App1-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00001000	Enabled
iscsi		3260	00100000	Enabled

## Peer-Advertisement:

Enable: Yes, Willing: No, Error: No

App1-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00001000	Enabled
iscsi		3260	00100000	Enabled

**show dcbx neighbors (EX4500 Switch: Includes ETS)**user@switch> **show dcbx neighbors interface xe-0/0/3**

```

Interface : xe-0/0/3.0
Protocol-State: in-sync
Active-application-map: map_iscsi

Local-Advertisement:
  Operational version: 0
  sequence-number: 1, acknowledge-id: 5

```

## Peer-Advertisement:

Operational version: 0  
sequence-number: 5, acknowledge-id: 1

Feature: PFC, Protocol-State: in-sync

Operational State: Enabled

## Local-Advertisement:

Enable: Yes, Willing: No, Error: No  
Maximum Traffic Classes capable to support PFC: 6

Code Point	Admin Mode
000	Enabled
001	Enabled
010	Disabled
011	Disabled
100	Disabled
101	Disabled
110	Disabled
111	Disabled

## Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No  
Maximum Traffic Classes capable to support PFC: 8

Code Point	Admin Mode
000	Enabled
001	Disabled
010	Disabled
011	Disabled
100	Enabled
101	Disabled
110	Disabled
111	Disabled

Feature: Application, Protocol-State: in-sync

## Local-Advertisement:

Enable: Yes, Willing: No, Error: No

Appl-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00000001	Enabled
iscsi		3260	00000010	Enabled

## Peer-Advertisement:

Enable: Yes, Willing: Yes, Error: No

Appl-Name	Ethernet-Type	Socket-Number	Priority-Map	Status
FCoE	0x8906		00001000	Enabled
iscsi		3260	00010000	Enabled

Feature: ETS, Protocol-State: in-sync

Operational State: Enabled

**Local-Advertisement:**

Enable: Yes, Willing: No, Error: No

Maximum Traffic Classes supported : 3

Code Point	Priority-Group
000	7
001	7
010	7
011	7
100	7
101	7
110	7
111	7

Priority-Group	Percentage B/W
7	100%

**Peer-Advertisement:**

Enable: Yes, Willing: Yes, Error: No

Maximum Traffic Classes supported : 8

Code Point	Priority-Group
000	0
001	1
010	0
011	0
100	2
101	0
110	0
111	0

Priority-Group	Percentage B/W
0	30%
1	40%
2	30%

# Local Switching on Junos Fusion Data Center

- [Configuring Local Switching on Junos Fusion Data Center on page 975](#)
- [local-switching on page 978](#)

## Configuring Local Switching on Junos Fusion Data Center

---



**NOTE:** Local switching is not supported on Junos Fusion Data Center with EVPN.


In a Junos Fusion topology, Layer 2 traffic that ingresses on the extended ports of a satellite device is forwarded to the aggregation device by default, even if the destination is reachable from the same satellite device. The satellite device does not perform any processing on the incoming traffic. Because the traffic utilizes bandwidth on the uplink interfaces, this can lead to higher packet latency or packet drop when the uplink interface bandwidth is over-utilized.

You can configure the satellite device on Junos Fusion Data Center to perform switching of Layer 2 unicast traffic if the destination MAC address is on the same satellite device. This helps reduce usage of the uplink interfaces and improves switching latency.

With local switching enabled, all Layer 2 unicast traffic for which the source and destination port are local to a given satellite device is forwarded by the satellite device itself based on the destination MAC address. The satellite device maintains a bridge forwarding table with the local MAC addresses for devices that are connected directly to the satellite device and forwards the data packets with local MAC addresses. Packets with unknown MAC addresses are sent to the aggregate device.


[Figure 13 on page 976](#) shows a Junos Fusion topology operating in extended mode, with two satellite devices connected to one aggregation device. Host 2 and Host 4 are connected to the same satellite device. When Host 2 sends a unicast packet to Host 4, the packet is forwarded to the aggregation device, which switches the packet to its destination.

**Figure 13: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Extended Mode**

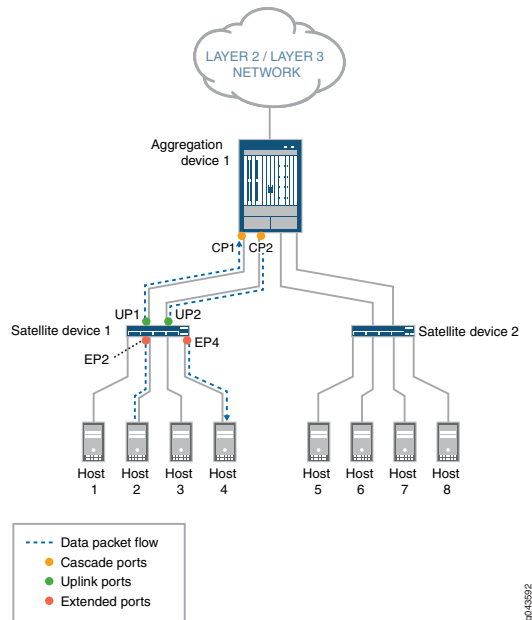

In [Figure 14 on page 976](#), local switching is enabled on Satellite device 1. When Host 2 sends a unicast packet to Host 4, the packet is switched by the satellite device, and does not traverse the uplink ports.

**Figure 14: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Local Switching enabled**

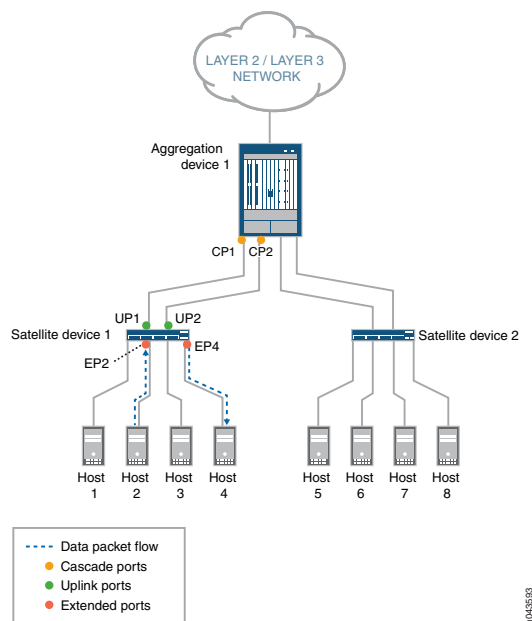

Local switching is enabled at the satellite device level. When you enable local switching on a satellite device, all VLANs on that satellite device are subject to local switching. Local switching supports only a single switching instance per satellite device and only untagged or single VLAN-tagged packets. Dual-tagged (Q-in-Q) packets are not supported.

The following features are not supported with local switching:

- VLAN translation
- Logical interfaces configured that are not configured with **family ethernet-switching**



.....  
**NOTE:** Local switching is not supported in a Junos Fusion Data Center with EVPN.  
.....


To enable local switching on a satellite device, issue the following command:

```
user@aggregation-device> set forwarding-options satellite fpc slot-id local-switching
```

#### Related Documentation

- [Understanding the Flow of Data Packets in a Junos Fusion Topology on page 38](#)

## local-switching

<b>Syntax</b>	local-switching
<b>Hierarchy Level</b>	[edit forwarding-options satellite fpc <i>slot-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Configure the satellite device on Junos Fusion Data Center to perform switching of Layer 2 traffic if the destination MAC address is on the same satellite device. This helps reduce usage of the uplink interfaces and improves switching latency.</p> <p>In local switching mode, all Layer 2 traffic for which the source and destination port are local to a given satellite device is forwarded by the satellite device itself based on the destination MAC address. Each satellite device maintains only the local destination MAC addresses for directly connected devices in the bridge forwarding table. If the destination MAC address is unknown on the satellite device, the packet is sent to the aggregation device for forwarding.</p> <p>Local switching can be selectively enabled at the satellite device level. When you enable local switching on a satellite device, all VLANs on that satellite device are subject to local switching.</p>
	<div>  <p><b>NOTE:</b> Local switching is not supported in a Junos Fusion Data Center with EVPN.</p> </div>
<b>Default</b>	By default, Layer 2 unicast traffic that ingresses on the extended ports of a satellite device is always forwarded to the aggregation device, even if the destination is reachable from the same satellite device.
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Local Switching on Junos Fusion Data Center on page 975</a></li> </ul>



## CHAPTER 17

# Loop Detection and Prevention on Junos Fusion Data Center

- [Understanding Loop Detection and Prevention on a Junos Fusion on page 979](#)
- [Configuring Loop Detection in a Junos Fusion on page 981](#)
- [loop-detect on page 983](#)
- [interface \(Loop Detection\) on page 984](#)
- [clear error loop-detect interface](#)
- [show loop-detect interface](#)
- [show loop-detect statistics interface](#)

## Understanding Loop Detection and Prevention on a Junos Fusion

---

Ethernet networks are susceptible to broadcast storms if loops are introduced. However, an Ethernet network needs to include loops because they provide redundant paths in case of a link failure. You can configure a Junos Fusion to detect and prevent undesirable loops while still maintaining link redundancy.

- [Spanning Tree Protocols in a Junos Fusion on page 979](#)
- [BPDU Protection in a Junos Fusion Data Center on page 980](#)
- [Loop Detection in a Junos Fusion on page 980](#)

## Spanning Tree Protocols in a Junos Fusion

Junos Fusion provides Layer 2 loop prevention through Rapid Spanning Tree Protocol (RSTP) and VLAN Spanning Tree Protocol (VSTP). Spanning-tree protocols intelligently avoid loops in a network by identifying certain links as point to point links and blocking other possible paths. When one of the point-to-point links fails, a designated alternate link transitions from the blocked state to the forwarding state and takes over.

RSTP and VSTP can be configured on up to 1100 extended ports in Junos Fusion. Spanning-tree protocols in a Junos Fusion presents scaling limitations due to the processing resources required for the aggregation device to manage the transitions from the default blocking state to the forwarding state for STP-enabled ports.

RSTP and VSTP configuration in a Junos Fusion is identical for a standalone switch. For configuration details, see *Configuring VSTP* and *Configuring Rapid Spanning Tree Protocol*.

For a complete overview of spanning-tree protocols, see *Eliminating Bridge Loops in Ethernet LANs with Spanning Tree Protocol*.



**NOTE:** Full support for RSTP and VSTP is provided only for single-homed satellite devices in a Junos Fusion.

---

## BPDU Protection in a Junos Fusion Data Center

Spanning-tree protocols support a loop-free network through the exchange of bridge protocol data units (BPDUs). A BPDU frame is a message sent from one switch to another to communicate information about itself, such as its bridge ID, root path costs, and port MAC addresses. The exchange of BPDUs prevents loops in network traffic by determining which interfaces block traffic and which interfaces forward traffic.

Other devices--PC bridging applications, for example--also use BPDUs and generate their own BPDUs that are not compatible with those used by spanning-tree protocols. Receipt of outside BPDUs in a spanning-tree topology can lead to network outages by triggering an STP misconfiguration. To prevent such outages, you can configure BPDU protection on extended ports in a Junos Fusion. If an outside BPDU is received on a BPDU-protected interface, the interface shuts down to prevent the outside BPDU from accessing the STP interface.

BPDU protection is supported for single-homed and dual-homed satellite devices in a Junos Fusion, and can be configured on up to 10000 extended ports. You can configure BPDU protection for both RSTP and VSTP. For configuration details, see *Configuring BPDU Protection on ACX Router, EX Switch and MX Router Edge Ports*.

## Loop Detection in a Junos Fusion

You can configure loop detection in a Junos Fusion to address the scaling limitations of spanning-tree protocols. Loop detection is a lightweight Layer 2 protocol that can be enabled on all extended ports in a Junos Fusion. When loop detection is enabled on an extended port, the port periodically transmits a Layer 2 multicast packet with a user-defined MAC address. If the packet is received on an extended port interface in the Junos Fusion topology, the ingress interface is logically shut down and a loop detect error is flagged. If a loop is created between two extended ports, both interfaces receive the packets transmitted from the other interface, and both ports are shut down. Manual intervention is required to bring the interfaces back online.

Loop detection is useful for detecting accidental loops caused by faulty wiring or by VLAN configuration errors. Loop detection also supports servers that run spanning-tree protocols and transmit BPDUs. An interface configured with BPDU protection is disabled if it receives a BPDU from the server. Because loop detection uses a proprietary PDU instead of BPDUs, an interface configured with loop detection instead of BPDU protection remains operational on receipt of a BPDU.

Loop detection is supported for single-homed and dual-homed satellite devices in a Junos Fusion. See ["Configuring Loop Detection in a Junos Fusion" on page 981](#).

- Related Documentation**
- *Eliminating Bridge Loops in Ethernet LANs with Spanning Tree Protocol*
  - [Configuring Loop Detection in a Junos Fusion on page 981](#)

## Configuring Loop Detection in a Junos Fusion

You can configure loop detection in a Junos Fusion to detect accidental loops caused by faulty wiring or by VLAN configuration errors. When loop detection is enabled on an extended port, the port periodically transmits a Layer 2 multicast packet with a user-defined MAC address. If the loop detection packet is received on an extended port interface in the Junos Fusion topology, the ingress interface is logically shut down and a loop detect error is flagged. Manual intervention is required to bring the interface back online.

Loop detection can be configured on extended port interfaces in a Junos Fusion, either on a per-interface basis or for all interfaces. You can configure the interval of time in seconds at which the loop detection packets are transmitted from the extended ports. The default interval is 30 seconds.

To configure loop detection in a Junos Fusion:

1. Configure loop detection for a specific interface or for all interfaces:

- To configure a specific interface:

```
[edit]
user@aggregation-device# set protocols loop-detect interface interface-name
```

- To configure all interfaces:

```
[edit]
user@aggregation-device# set protocols loop-detect interface all-extended-ports
```

2. Specify the MAC address to use in the loop detection packet:

```
[edit]
user@aggregation-device# set protocols loop-detect destination-mac mac-address
```

3. (Optional) Configure the interval at which the extended ports transmit a loop detection packet:

```
[edit]
user@aggregation-device# set protocols loop-detect transmit-interval seconds
```

To bring up an interface after it has been disabled by a loop detect error, issue the following command:

- [edit]  
user@aggregation-device> **clear error loop-detect interface** *interface-name*

**Related  
Documentation**

- [Understanding Loop Detection and Prevention on a Junos Fusion on page 979](#)

## loop-detect

<b>Syntax</b>	<pre> loop-detect {   destination-mac <i>mac-address</i>;   interface (<i>interface-name</i>   all-extended-ports) {     disable <i>disable</i>;   }   transmit-interval <i>seconds</i>; } </pre>
<b>Hierarchy Level</b>	[edit logical-systems <i>name</i> protocols], [edit protocols]
<b>Release Information</b>	Statement introduced in Junos OS Release 17.1R1 for Junos Fusion.
<b>Description</b>	<p>Configure loop detection in a Junos Fusion to detect accidental loops that be caused by faulty wiring or by VLAN configuration errors. When loop detection is enabled on an extended port, the port periodically transmits a Layer 2 multicast packet with a user-defined MAC address. If the loop detection packet is received on an extended port interface in the Junos Fusion topology, the interface is logically shut down and a loop detect error is flagged. If a loop is created between two extended ports, both interfaces receive the packets transmitted from the other interface, and both ports are shut down. Manual intervention is required to bring the interfaces back online.</p> <p>Loop detection can be configured on extended port interfaces in a Junos Fusion, either on a per-interface basis or for all interfaces. You can configure the interval of time in seconds at which the loop detection packets are transmitted from the extended ports. The default interval is 30 seconds.</p>
<b>Default</b>	Loop detection is disabled by default.
<b>Options</b>	<p><b>destination-mac <i>mac-address</i></b>—Configure the destination MAC address to be included in the loop detection PDUs.</p> <p><b>transmit-interval <i>seconds</i></b>—Configure the time interval in seconds at which loop detection PDUs are transmitted from the extended ports.</p> <p><b>Range:</b> 5 through 3600</p> <p><b>Default:</b> 30</p> <p>The remaining statements are described separately.</p>
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.

- Related Documentation**
- [Configuring Loop Detection in a Junos Fusion on page 981](#)

## interface (Loop Detection)

<b>Syntax</b>	<pre> interface {   all-extended-ports;   interface-name {     disable <i>disable</i>;   } } </pre>
<b>Hierarchy Level</b>	<pre> [edit logical-systems <i>name</i> protocols loop-detect], [edit protocols loop-detect] </pre>
<b>Release Information</b>	Statement introduced in Junos OS Release 17.1R1 for Junos Fusion.
<b>Description</b>	<p>Specify the extended port interface for configuring loop detection in a Junos Fusion. You can configure loop detection to find accidental loops in a Junos Fusion topology that might be caused by faulty wiring or by VLAN configuration errors. When loop detection is enabled on an extended port, the port periodically transmits a Layer 2 multicast packet with a user-defined MAC address. If the loop detection packet is received on an extended port interface in the Junos Fusion topology, the interface is logically shut down and a loop detect error is flagged. If a loop is created between two extended ports, both interfaces receive the packets transmitted from the other interface, and both ports are shut down. Manual intervention is required to bring the interfaces back online.</p> <p>Loop detection can be configured on extended port interfaces in a Junos Fusion, either on a per-interface basis or for all interfaces. You can configure loop detection on an extended port interface in either access or trunk mode.</p>
<b>Default</b>	Loop detection is disabled by default.
<b>Options</b>	<p><b><i>interface-name</i></b>—Configure loop detection on the specified interface.</p> <p><b><i>disable</i></b>—Configure the disable option to selectively disable the loop detection on individual interfaces.</p> <p><b><i>all-extended-ports</i></b>—Configure loop detection on all extended port interfaces.</p>
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Loop Detection in a Junos Fusion on page 981</a></li> </ul>

## clear error loop-detect interface

<b>Syntax</b>	<code>clear error loop-detect interface &lt;interface <i>interface-name</i>&gt;</code>
<b>Release Information</b>	Command introduced in JUNOS Release 17.1 for Junos Fusion.
<b>Description</b>	Clear loop detection errors from all the extended port interfaces in a Junos Fusion or from the specified interface, and restore all interfaces or the specified interface to service. When loop detection is enabled on an extended port, the port periodically transmits a Layer 2 multicast packet with a user-defined MAC address. If the loop detection packet is received on an extended port interface in the Junos Fusion topology, the ingress interface is logically shut down and a loop detect error is flagged. Manual intervention is required to bring the interface back online.
<b>Options</b>	<p><b>none</b>—Clear loop detection errors from all the extended port interfaces in a Junos Fusion and restore these interfaces to service.</p> <p><b><i>interface-name</i></b>—(Optional) Clear loop detection errors from the specified interface and restore the interface to service.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Loop Detection in a Junos Fusion on page 981</a></li> <li>• <a href="#">loop-detect on page 983</a></li> <li>• <a href="#">interface on page 984</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear error loop-detect interface on page 985</a>
<b>Output Fields</b>	This command produces no output.

## Sample Output

### clear error loop-detect interface

```
user@aggregation-device> clear error loop-detect interface
```

## show loop-detect interface

**Syntax** `show loop-detect interface  
<interface-name>`

**Release Information** Command introduced in Junos OS Release 17.1 for Junos Fusion.

**Description** Display the state of extended port interfaces on which the loop detection feature is enabled in a Junos Fusion. When loop detection is enabled on an extended port, the port periodically transmits a Layer 2 multicast packet with a user-defined MAC address. If the loop detection packet is received on an extended port interface in the Junos Fusion topology, the ingress interface is logically shut down and a loop detect error is flagged. Manual intervention is required to bring the interface back online.

**Options** *interface-name*—(Optional) Display the state of the specified interface enabled with loop detection.

**Required Privilege Level** view

**Related Documentation**

- [Configuring Loop Detection in a Junos Fusion on page 981](#)
- [show loop-detect statistics interface on page 988](#)
- [clear error loop-detect interface on page 985](#)

**List of Sample Output** [show loop-detect interface on page 987](#)  
[show loop-detect interface on page 987](#)

**Output Fields** [Table 45 on page 986](#) lists the output fields for the **show loop-detect interface** command. Output fields are listed in the approximate order in which they appear.

*Table 45: show loop-detect interface Output Fields*

Field Name	Field Description	Level of Output
<b>Interface</b>	Interface on which loop detection has been enabled.	All levels
<b>Parent interface</b>	Name of the aggregated interface for AE member interfaces.	All levels
<b>State</b>	State of the interface. <ul style="list-style-type: none"> <li>• <b>UP</b>—The interface is operational.</li> <li>• <b>DOWN</b>—The interface has been logically shut down as a result of a loop detect error.</li> </ul>	All levels



## Sample Output

### show loop-detect interface

```
user@aggregation-device> show loop-detect interface
```

Interface	Parent-Interface	State
xe-123/0/38	ae2	DOWN
xe-123/0/41	ae2	UP
xe-123/0/42	-	UP
xe-123/0/50:1	ae0	UP
xe-123/0/50:2	ae0	UP
xe-123/0/51:1	ae1	UP
xe-123/0/51:2	ae1	UP
xe-124/2/2	-	DOWN

## Sample Output

### show loop-detect interface

```
user@aggregation-device> show loop-detect interface xe-151/0/44
```

Interface	Parent-Interface	State
xe-123/0/42	-	UP

## show loop-detect statistics interface

**Syntax** `show loop-detect statistics interface  
<interface-name>`

**Release Information** Command introduced in Junos OS Release 17.1 for Junos Fusion.

**Description** Display loop detection statistics on extended port interfaces in a Junos Fusion. When loop detection is enabled on an extended port, the port periodically transmits a Layer 2 multicast packet with a user-defined MAC address. If the loop detection packet is received on an extended port interface in the Junos Fusion topology, the ingress interface is logically shut down and a loop detect error is flagged. Manual intervention is required to bring the interface back online.

**Options** *interface-name*—(Optional) Display loop detection statistics for the specified interface.

**Required Privilege Level** view

**Related Documentation**

- [Configuring Loop Detection in a Junos Fusion on page 981](#)
- [show loop-detect interface on page 986](#)
- [clear error loop-detect interface on page 985](#)

**List of Sample Output** [show loop-detect statistics interface on page 988](#)  
[show loop-detect statistics interface on page 989](#)

**Output Fields** [Table 45 on page 986](#) lists the output fields for the **show loop-detect statistics interface** command. Output fields are listed in the approximate order in which they appear.

*Table 46: show loop-detect statistics interface Output Fields*

Field Name	Field Description	Level of Output
Interface	Interface on which loop detection has been applied.	All levels
Packets sent	Total number of loop detection packets that have been transmitted from the interface.	All levels
Packets received	Total number of loop detection packets that have been received on the interface.	All levels

## Sample Output

### show loop-detect statistics interface

```
user@aggregation-device> show loop-detect statistics interface
```

Interface	Packets sent	Packets received
xe-151/0/44	7	0
xe-151/0/45	10	0
xe-151/0/46	12	0

## Sample Output

### show loop-detect statistics interface

```
user@aggregation-device> show loop-detect statistics interface xe-151/0/44
```

Interface	Packets sent	Packets received
xe-151/0/44	7	0



## CHAPTER 18

# Multicast Forwarding on Junos Fusion Data Center


- [Multicast Forwarding at Layer 3 in a Junos Fusion Data Center with EVPN on page 992](#)
- [Understanding Layer 3 Multicast Convergence Enhancements for Dual Aggregation Devices in Junos Fusion Data Center with MC-LAG on page 997](#)
- [Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN on page 999](#)
- [Understanding Multicast Replication in a Junos Fusion on page 1014](#)
- [Ingress Replication at the Aggregation Device to Satellite Devices on page 1020](#)
- [Egress \(Local\) Replication on the Satellite Devices on page 1023](#)
- [Configuring Egress \(Local\) Replication on a Junos Fusion on page 1029](#)
- [Monitoring Layer 2 Multicast Forwarding in a Junos Fusion Data Center with EVPN on page 1030](#)
- [local-replication on page 1038](#)
- [show ethernet-switching flood](#)
- [show ethernet-switching flood next-hops satellite](#)
- [show ethernet-switching flood satellite](#)
- [show ethernet-switching satellite device](#)
- [show multicast ecid-mapping satellite](#)
- [show multicast next-hops satellite](#)
- [show multicast snooping next-hops satellite](#)
- [show multicast snooping route satellite](#)
- [show multicast statistics satellite](#)
- [show multicast summary satellite](#)

## Multicast Forwarding at Layer 3 in a Junos Fusion Data Center with EVPN

---

The Junos Fusion Data Center with EVPN topology referenced in this topic is shown in [Figure 15 on page 993](#). In this architecture, the core devices are referred to as aggregation devices, and the access devices are referred to as satellite devices. These satellite devices appear to the aggregation devices as logical line cards by virtue of the IEEE 802.1BR protocol and proprietary extensions. Ports on the satellite device are referred to as extended ports, and the upstream aggregation interfaces on the satellite devices that connect to the aggregation devices are called cascade ports.

*Figure 15: Junos Fusion Data Center with EVPN Network Topology*

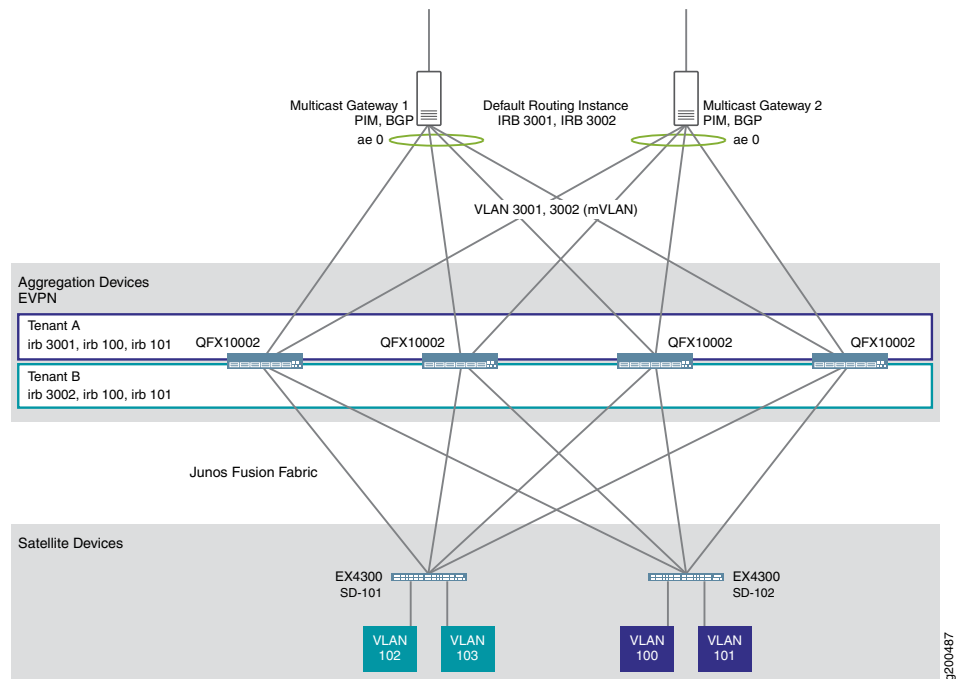

IGMPv3 runs between the aggregation devices and the gateways. When a multicast receiver that is connected to an extended port on the fabric sends an IGMP join, the fabric as a whole (that is, all four aggregation devices) initiates an IGMP join towards the gateways, which accepts the joins. The gateways send the multicast traffic they receive to the aggregation devices, which in turn sends it to the particular receiver.

Junos Fusion Data Center with EVPN leverages the EVPN BGP control plane to signal the EVPN topology, as well as to distribute MAC address reachability and other states between the aggregation devices. It is in this context that Junos Fusion Data Center with EVPN is able to support PIM-less multicast within the fabric for users who do not want to run PIM on their network between aggregation devices, or between the aggregation devices and the gateways. Instead of PIM, Junos Fusion Data Center with EVPN uses a simplified IGMP control plane, so IGMP joins go from the fabric to the connected gateways. In addition, the number of IGMP joins from the fabric to the multicast gateway is reduced through the use of multicast VLANs (mVLAN) between the aggregation devices and the gateways instead of IGMP snooping.

Besides keeping the complexities of PIM out of the fabric, the benefit of using the IGMP control plane for multicast is that it is highly scalable, supports multi-tenancy, and provides operational simplicity.

For example, to enable multicast flows (Layer 2 and Layer 3) in Junos Fusion Data Center with EVPN, you need only configure **passive-pim** on the aggregation devices (so they do not form PIM neighborships), and **pim-to-igmp-proxy** (so that when an aggregation device receives a IGMP join request from a server, it can create a PIM state that triggers an IGMP join towards the gateways).

On the multicast gateway devices, you can configure **accept-remote-source** if you need to support multicast traffic originating from a source outside the fabric so the traffic can ingress to the gateways. The gateways form a PIM neighborship, and one becomes the DR (designated router), which sends source traffic to the core fabric.

Junos Fusion Data Center with EVPN supports layer 3 multicast within the fabric, which means you can have servers connected on extended ports that are in different tenants. In some cases, one may be a source and the other a receiver. Routing between the tenants in such a case is handled by the gateways; the source sends traffic to the aggregation devices, which in turn send it to the multicast gateway via the mVLAN for that tenant. You can see this in [Figure 15 on page 993](#). The gateways handle routing between tenants by sending it back through the fabric and on to the receiver VLAN. For example, the multicast gateway can see multicast traffic on IRB 3001, even though source of the multicast stream may actually belong to VLAN 100.

Additional key points are listed here:

- Two or more satellite devices are multihomed to four fully meshed aggregation devices.
- The aggregation devices can be QFX10002, QFX10008, or QFX10016 switches running Junos 18.1R2S1 or later.
- PIM is running over an EVPN VLAN between the multicast gateway devices.
- Between the aggregation devices and the gateways is a dedicated mVLAN.
- BGP is running between the mVLAN IRBs on the PIM gateways, and the gateways and the aggregation devices.
- No default routing instance should be configured or enabled on the gateway servers.

The aggregation devices are configured for the following:

- PIM passive mode.
- IGMP Snooping.
- Implicit IGMP querier running on IRB of the revenue VLANs.

The multicast gateway servers are configured for the following:



- PIM, configured to **accept-remote-source**.
- BGP running between each aggregation device and the multicast gateway pair.
- Implicit IGMP querier on the mVLAN IRB.
- Per tenant mVLAN on L2 ESI/lag between the PIM gateways and aggregation devices.
- You can choose the same or different routing instances for multiple Tenants.

The satellite devices are configured for the following:

- Local-replication is enabled (this will support optimized L2 multicast, which means only one copy of a multicast stream needs to be sent to a given satellite device, even if that satellite device has multiple extended-port receivers).
- All extended ports on the satellite-devices are running in Active/Active mode.

In addition to the base Junos Fusion Data Center with EVPN configuration, the setup referenced in [Figure 15 on page 993](#) includes some additional configurations such as are shown in the samples below.

#### Multicast on the aggregation devices

```
protocols {
  evpn {
    multicast-mode ingress-replication;
  }
}

forwarding-options {
  multicast-replication {
    evpn {
      irb local-only;
    }
  }
}
```

#### Multicast on the gateways

```
protocols {
  pim {
    rp {
      local {
        address <address>;
      }
    }
  }
  interface irb.3001 {
    accept-remote-source;
  }
  interface irb.3002 {
    accept-remote-source;
  }
}
```

## Egress replication

By default, egress multicast replication (also called local replication) is disabled, and Junos Fusion uses ingress replication. When you enable local replication, egress multicast replication is activated for all satellite devices that are connected to the aggregation device.

```
forwarding-options {
  satellite {
    local-replication;
  }
}
routing-instances {
  TenantA {
    instance-type vrf;
    interface irb.100;
    interface irb.101;
    interface irb.200;
    interface irb.3001;
    interface lo0.1;
    vrf-target target:9999:1;
    routing-options {
      multicast {
        pim-to-igmp-proxy {
          upstream-interface irb.3001;
        }
      }
      auto-export;
    }
    protocols {
      pim {
        passive;
        interface irb.100;
        interface irb.101;
        interface irb.3001;
      }
    }
  }
}
vlangs {
  v100 {
    vlan-id 100;
    l3-interface irb.100;
    vxlan {
      vni 100;
    }
  }
  v101 {
    vlan-id 101;
    l3-interface irb.101;
    vxlan {
      vni 101;
    }
  }
  v3001 {
    description mVLAN-TenantA;
    vlan-id 3001;
    l3-interface irb.3001;
  }
}
```

```

        vxlan {
            vni 3001;
        }
    }
}

```

**Release History Table**

Release	Description
18.1R2-S1	Junos Fusion Data Center with EVPN is able to support PIM-less multicast within the fabric for users who do not want to run PIM on their network between aggregation devices, or between the aggregation devices and the gateways.

**Related Documentation**

- [Understanding Multicast Replication in a Junos Fusion on page 1014](#)
- [Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion on page 43](#)
- [Understanding EVPN in a Junos Fusion Data Center on page 26](#)

## Understanding Layer 3 Multicast Convergence Enhancements for Dual Aggregation Devices in Junos Fusion Data Center with MC-LAG

When you configure Protocol Independent Multicast (PIM) in Junos Fusion Data Center with MC-LAG for managing Layer 3 multicast traffic over IRB interfaces, one aggregation device acts as the designated router (DR) and actively forwards multicast traffic for a multicast group. If that aggregation device becomes unavailable, the other aggregation device detects the peer is down, takes over the DR role, builds the multicast forwarding tree, and multicast traffic flow resumes. Starting in Junos OS Release 17.2R1, to reduce multicast traffic convergence time and resume traffic forwarding more quickly in a Junos Fusion Data Center with MC-LAG, you can enable PIM dual designated router mode or enhanced dual designated router mode on interfaces with multicast traffic.

- [PIM Dual Designated Router Mode on page 997](#)
- [Enhanced PIM Dual Designated Router Mode for Junos Fusion on page 998](#)
- [Configuring Dual Designated Router Mode on page 998](#)

### PIM Dual Designated Router Mode

With PIM dual designated router mode enabled, one aggregation device acts as the primary DR and the other acts as the standby DR for the multicast group. Both aggregation devices join the multicast distribution tree and receive the multicast traffic, which enables the standby DR aggregation device to more quickly take over forwarding multicast packets if the primary DR aggregation device fails. Both aggregation devices forward the multicast packets until the PIM assert mechanism elects which aggregation device should be the PIM forwarder. The aggregation device that loses the PIM forwarder election stops forwarding the multicast traffic to avoid wasting bandwidth sending duplicate packets.

When operating in dual designated router mode, the convergence delay is limited to the standby DR detecting the DR is down, and then the standby DR quickly takes over forwarding the multicast traffic. However, when the original DR aggregation device comes back online, it resumes the DR role and begin receiving and forwarding multicast traffic. Both aggregation devices forward copies of multicast packets for a short time again until the PIM forwarder election causes one aggregation device to stop forwarding. Relying on the PIM assert mechanism to stop duplicate multicast packet traffic might not scale well when managing traffic for a large number of multicast groups.

See *Understanding Multichassis Link Aggregation Groups* for more information on PIM dual designated router mode on peers in an MC-LAG.

## Enhanced PIM Dual Designated Router Mode for Junos Fusion

You can enable enhanced PIM dual designated router mode in a Junos Fusion Data Center with MC-LAG, which further improves convergence time after primary DR failure, and eliminates sending duplicate packets.

With enhanced PIM dual designated router mode configured, both aggregation devices join the multicast forwarding tree and receive multicast data, but only the primary DR aggregation device forwards the traffic. The PIM assert mechanism is not used to elect which aggregation device should stop forwarding duplicate multicast packets; the standby DR receives the traffic but drops the packets. If the primary DR becomes unavailable, the standby DR switches to primary DR role and quickly takes over forwarding the multicast traffic.

When the standby DR aggregation device switches to primary DR role, it also raises its DR priority level to ensure that it retains the primary DR role when the original primary DR aggregation device comes back online (instead of both aggregation devices switching roles again). Multicast traffic forwarding continues without interruption, and without generating duplicate traffic.

## Configuring Dual Designated Router Mode

To enable dual designated router mode on a Junos Fusion Data Center with MC-LAG, include the following command when configuring IRB or VLAN interfaces handling traffic for multicast groups:

```
set protocols pim interface interface-name dual-dr
```

For example:

```
user@device# set protocols pim interface vlan.100 dual-dr
```

To enable enhanced dual designated router mode, add the **enhanced** option to the **dual-dr** configuration statement, as follows:

```
set protocols pim interface interface-name dual-dr enhanced
```

For example:

```
user@device# set protocols pim interface irb.500 dual-dr enhanced
```

yeah

#### Release History Table

Release	Description
17.2R1	Starting in Junos OS Release 17.2R1, to reduce multicast traffic convergence time and resume traffic forwarding more quickly in a Junos Fusion Data Center with MC-LAG, you can enable PIM dual designated router mode or enhanced dual designated router mode on interfaces with multicast traffic.

#### Related Documentation

- [Understanding Multichassis Link Aggregation Groups](#)
- [dual-dr on page 86](#)

## Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN

In a Junos Fusion Data Center with EVPN, extended ports on the satellite devices are multihomed to all aggregation devices. Each extended port is modeled as an EVPN Ethernet Segment (ES) and assigned an ES ID (ESI). To support multicast traffic replication and forwarding in the multihoming environment, the infrastructure employs a combination of BGP EVPN multicast signaling and IEEE 802.1BR tagging, IGMP state synchronization among the aggregation devices, local bias or designated forwarder (DF) replication and forwarding, and custom optimizations to better support the large number of extended ports in this architecture.

When forwarding multicast traffic in a Junos Fusion Data Center with EVPN, aggregation devices default to using ingress replication to extended ports on satellite devices, where the aggregation device replicates and sends copies of the traffic to every destination extended port individually. You can alternatively enable egress (local) replication to offload some of the traffic replication and forwarding responsibility from the aggregation devices to the satellite devices for their local extended ports. See [“Understanding Multicast Replication in a Junos Fusion” on page 1014](#) for limitations on enabling local replication.

Junos Fusion Data Center with EVPN uses the same methods for multicast forwarding described here to also manage other multi-destination traffic for VLAN flooding (forwarding unknown unicast traffic to all extended ports in a VLAN) and broadcast traffic (flooding traffic to all extended ports in a broadcast domain).

See [“Monitoring Layer 2 Multicast Forwarding in a Junos Fusion Data Center with EVPN” on page 1030](#) for a summary of the CLI commands you can use to view multicast replication and forwarding information in a Junos Fusion Data Center with EVPN.

- [Multicast Infrastructure in a Junos Fusion Data Center with EVPN on page 1000](#)
- [Multicast Replication and Forwarding in a Junos Fusion Data Center with EVPN on page 1003](#)

## Multicast Infrastructure in a Junos Fusion Data Center with EVPN

In a Junos Fusion Data Center with EVPN, the central EVPN infrastructure, referred to as the EVPN core, encompasses one EVPN instance (EVI). This section describes how the EVPN core manages multicast traffic forwarding.

- [Multicast Route Signaling and Source Traffic Forwarding in the EVPN Core on page 1000](#)
- [Designated Forwarder Election on page 1000](#)
- [IGMP Proxy and IGMP Report Synchronization in Aggregation Devices on page 1001](#)
- [ECIDs for Forwarding Multicast Traffic Between Aggregation Devices and Satellite Devices on page 1002](#)

---

### Multicast Route Signaling and Source Traffic Forwarding in the EVPN Core

Whenever a VLAN is configured on an aggregation device in the EVI, the aggregation device signals a BGP EVPN Type 3 (Inclusive Multicast Ethernet Tag [IMET]) route for the VLAN. Because the configuration is synchronized among all aggregation devices in the EVPN core, all the aggregation devices effectively join a core multicast replication tree consisting of all of those routes for each configured VLAN.

An aggregation device that initially receives multicast source traffic for a VLAN and multicast group is referred to as the *ingress aggregation device*. Junos Fusion Data Center with EVPN uses only ingress replication tunnel mode in the EVPN core, in which the ingress aggregation device replicates the packets and floods them on each EVPN tunnel to all of the other aggregation devices or any external edge routers in the EVI that might need to forward the traffic.

---

### Designated Forwarder Election

In an EVPN fabric with multihoming, a designated forwarder (DF) is assigned to each ES so only one device forwards traffic to that ES, which eliminates duplicate traffic and prevents traffic loops. The devices in the provider edge (PE) role in the EVPN network generate Ethernet Segment (ES) routes for each connected extended port, and use BGP to advertise these routes to the other multihoming PE devices. BGP convergence determines a DF for a particular ES and VLAN. See *EVPN Multihoming Overview* for details. When local replication is *not* enabled in a Junos Fusion Data Center with EVPN, the aggregation devices use this process to elect the DF for each extended port ES.

When local replication is enabled, Junos Fusion Data Center with EVPN uses a different DF election model that is optimized for the large number of extended ports usually present in this architecture. The infrastructure already maintains connectivity information between aggregation devices and the extended ports on satellite devices using the IEEE 802.1BR protocol, so it does not require BGP signaling to build the ES topology, and does not need to rely on BGP route convergence when reassigning DFs.

In the optimized DF election model for local replication, a satellite device is responsible for electing its DF. Because all of the extended ports connected to a satellite device share its multihoming properties to the aggregation devices, it is sufficient to elect a DF at the granularity of the satellite device rather than for each extended port. As a result, the DF for an extended port is derived from the extended port's satellite device. This model

allows local replication at the satellite devices for any broadcast, unknown unicast, and multicast (BUM) traffic. With local replication enabled, the forwarding aggregation device only needs to send one copy of the traffic to each satellite device with destination extended ports, and the satellite devices then replicate and forward the traffic to their extended ports.

Satellite devices elect a DF as follows:

- Each satellite device maintains a list of all the aggregation devices to which it has connectivity in order by IP address.
- The satellite device performs a modulo hash of the satellite device ID with the number of connected aggregation devices, and uses the hash value as the index to choose the aggregation device to be its DF.

For example, if a satellite device with ID 101 is connected to four aggregation devices listed using indices 0 through 3, the satellite device calculates  $101 \text{ modulo } 4 = 1$ , so the second aggregation device in the list at index 1 is selected as the DF for that satellite device.

The satellite device notifies the designated aggregation device that it is the DF for that satellite device, and notifies all the other connected aggregation devices that they are not the DF for that satellite device.

Upon receiving this notification, the aggregation devices associate the DF election or non-DF status with that satellite device's virtual interface. Satellite devices re-elect a new DF upon detecting link failure to the current DF. For reliable convergence, satellite devices dampen re-election if a link is flapping, keeping one DF assigned while delaying reassignment until that link stabilizes (up or down).

### **IGMP Proxy and IGMP Report Synchronization in Aggregation Devices**

---

For multicast group management in a multihomed environment, to avoid flooding IGMP reports in the EVPN core, the aggregation devices provide an IGMP proxy mechanism using BGP EVPN Type 6 (Selective Multicast Ethernet Tag [SMET]) routes. The aggregation device elected as the DF for an extended port signals a Type 6 route for each VLAN and multicast group combination ([VLAN, group]) in the EVI for which there is at least one receiver for that [VLAN, group]. These Type 6 routes summarize the IGMP state of the system.

Because the satellite devices balance their traffic among the available aggregation devices, IGMP membership reports (IGMP join messages) from an extended port might be sent to an aggregation device that is not that extended port's DF. An IGMP leave message might also not be sent to the extended port's DF, nor to the same aggregation device as the one that received the corresponding join message. As a result, the IGMP state must be synchronized from the aggregation device receiving IGMP reports for an extended port to that extended port's DF aggregation device. For simplicity and faster convergence when a DF must be re-elected, the aggregation devices simply synchronize the IGMP state for each extended port among all of the aggregation devices connected to that extended port.

To achieve IGMP report synchronization for extended ports, Junos Fusion Data Center with EVPN uses the BGP EVPN control plane.

When an aggregation device learns the snooped IGMP state with group membership status for an extended port, the aggregation device originates and advertises a BGP EVPN Type 7 (IGMP Join Sync) route, which includes the VLAN and multicast group address, the extended port's ES ID, and the EVI. The Type 7 route uses the same ES-Import route target extended community as the ES route for that extended port, so the route is only picked up by the aggregation devices that are connected to that extended port.

Synchronizing IGMP leave message status is more involved because in BGP, only the BGP device that advertises a route owns and can withdraw that route. The aggregation devices use BGP EVPN Type 8 (IGMP Leave Sync) routes to facilitate withdrawal of the route by advertiser of the IGMP join state as follows:

- An aggregation device receives an IGMP leave message from an extended port, and starts a maximum response timer. The aggregation device might or might not be the extended port's DF.
- If the aggregation device receiving the IGMP leave message does not own that route, the aggregation device advertises a BGP EVPN Type 8 route to all aggregation devices connected to that extended port. Like the BGP EVPN Type 7 route, the BGP EVPN Type 8 route includes the VLAN, multicast group address, extended port ESI and EVI, and also carries the maximum response time. The advertising scope is limited to the ES-Import route target for that extended port.
- The multicast router device in the network acting as the IGMP querier sends out group queries.
- Any aggregation devices receiving the BGP EVPN Type 8 route start a leave timer with the maximum response time from the advertised route.
- If the DF for the extended port that sent the IGMP leave message no longer has any local join state for that multicast group, the DF withdraws the join state for that extended port ES.
- Finally, on the aggregation device that advertised the BGP EVPN Type 8 route, after the maximum response timer expires, the aggregation device withdraws the BGP EVPN Type 8 route.

### **ECIDs for Forwarding Multicast Traffic Between Aggregation Devices and Satellite Devices**

---

When a multihomed satellite device in a Junos Fusion Data Center with EVPN sends multicast source traffic to one of the aggregation devices, the satellite device includes the source (ingress) extended port unicast E-channel ID (ECID) in the 802.1BR header.

When forwarding multicast traffic to destination extended ports, aggregation devices send a multicast destination ECID in the 802.1BR header so the receiving satellite devices can direct the traffic to the right extended ports. The ingress aggregation device also includes the source extended port ECID in the 802.1BR header when forwarding the traffic back to the source satellite device. The ingress ECID is required for the satellite device



to make split-horizon decisions when forwarding to its local extended ports, and avoid forwarding the traffic back to the source port.

Extended ports in a Junos Fusion Data Center with EVPN can be part of a link aggregation group (LAG) on one satellite device or spanning satellite devices. Like standalone extended ports, LAGs of extended ports are represented as an ES and are assigned a special LAG ESI. LAGs of extended ports are also assigned a LAG ECID for 802.1BR communication to the satellite devices. See [“Understanding EVPN in a Junos Fusion Data Center” on page 26](#) for an overview of extended port LAGs. If an ingress aggregation device receives source traffic that originates on a LAG of extended ports, it also includes the 802.1BR header in the VXLAN packets when flooding the source traffic in the EVPN core, so any DF aggregation device can also send the ingress LAG ECID to its designated satellite device for split-horizon considerations. This is the only case in which 802.1BR ECIDs are included in traffic forwarded over the VXLAN tunnels.

See [“Understanding Multicast Replication in a Junos Fusion” on page 1014](#) for more information on how Junos Fusion architectures use 802.1BR E-channel IDs (ECIDs) for managing multicast traffic flow between aggregation devices and satellite devices.

## Multicast Replication and Forwarding in a Junos Fusion Data Center with EVPN

This section explains the Junos Fusion Data Center with EVPN multicast replication and forwarding model with and without local replication enabled, and illustrates several different forwarding scenarios.

- [Ingress Replication in the EVPN Core and Local Bias Forwarding to Multicast Destination Extended Ports on page 1003](#)
- [Local Bias Forwarding to Extended Ports with Ingress Replication to the Satellite Devices \(No Local Replication\) on page 1005](#)
- [Local Bias Forwarding to Extended Ports with Local Replication at the Satellite Devices on page 1007](#)
- [Designated Forwarder Traffic Forwarding with Local Replication at the Satellite Devices on page 1009](#)
- [Handling Split-horizon on a LAG of Ingress Extended Ports Across Satellite Devices on page 1011](#)

### Ingress Replication in the EVPN Core and Local Bias Forwarding to Multicast Destination Extended Ports


To forward the traffic to destination extended ports in the VLAN and multicast group, the ingress aggregation device uses a *local bias* forwarding model. With local bias forwarding, the ingress aggregation device forwards the traffic to any multicast destination extended ports (ES) that it can reach directly, regardless of whether it is the DF for a particular multicast destination ES or not.

To ensure the multicast traffic reaches other listeners in the EVI, the ingress aggregation device then replicates the packets and floods them on each EVPN tunnel in the EVI, sending the traffic to the other aggregation devices and edge routers in the EVI that share BGP EVPN Type 3 IMET routes for the VLAN (see [“Multicast Route Signaling and Source](#)

[Traffic Forwarding in the EVPN Core” on page 1000](#)). This behavior is referred to as ingress replication tunnel mode in the EVPN core.

For example, see [Figure 16 on page 1004](#).

**Figure 16: Junos Fusion Data Center with EVPN—Ingress Replication in EVPN Core and Local Bias Forwarding**

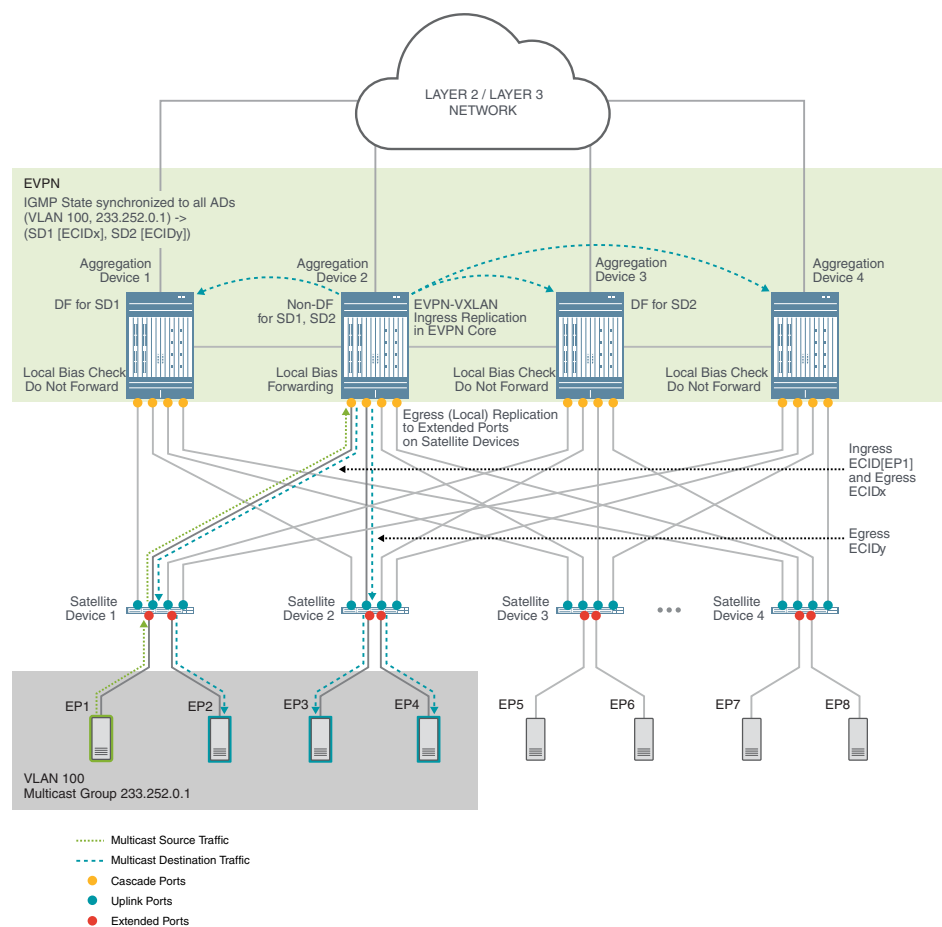

In [Figure 16 on page 1004](#), Aggregation Device 2 is the ingress aggregation device that receives multicast source traffic for VLAN 100 and multicast group address 233.252.0.1 from multihomed extended port EP1.

Based on the IGMP snooping state synchronized to all aggregation devices, extended ports EP2 on Satellite Device 1 (multicast ECIDx) and EP3 and EP4 on Satellite Device 2 (multicast ECIDy) have multicast listeners for that group in VLAN 100.



**NOTE:** Local replication is enabled in this scenario, so the aggregation device uses multicast ECIDs to offload most of the replication to the satellite devices. “[Local Bias Forwarding to Extended Ports with Local Replication at the Satellite Devices](#)” on page 1007 explains more about local replication for this example.

Aggregation Device 2 forwards the traffic as follows:

- Using the local bias model, Aggregation Device 2 forwards the traffic to Satellite Device 1 using ECIDx and Satellite Device 2 using ECIDy to reach the multicast listeners on EP2, EP3, and EP4 even though it is not the DF for these destination extended ports.
- Using ingress replication in the EVPN core, Aggregation Device 2 also floods the traffic to the three other aggregation devices in the EVI to reach other destination extended ports to which it is not directly connected.

The aggregation device that is the DF for a particular destination extended port ES would normally handle replication and forwarding to that ES upon receiving the source multicast source traffic. To avoid generating duplicate traffic if the ingress aggregation device already forwarded the traffic according to the local bias model, each DF aggregation device performs a *local bias check* using the following information to decide whether to forward the traffic to its ESs:

- The packets forwarded in the EVPN core carry the ingress aggregation device’s IP address in the VXLAN header (the outer IP address), so the receiving aggregation devices know which other aggregation device was the source of the traffic.
- Any aggregation device can check the shared topology information maintained the EVPN core for all connected extended ports to determine whether the source aggregation device has a direct connection to a given extended port.

The DF does not forward the traffic to its designated ESs for which the source aggregation device has connectivity and would have already forwarded the traffic. The DF does forward the traffic to its designated ESs that fail the local bias check.

In [Figure 16 on page 1004](#), Aggregation Device 1 is the elected DF for EP1 on Satellite Device 1, but does not forward the traffic to EP1 after performing a local bias check and determining that the source aggregation device, Aggregation Device 2, has connectivity to EP1 and would have already forwarded the traffic to EP1 using local bias forwarding. Similarly, Aggregation Device 3, the elected DF For EP3 and EP4, performs the local bias check and does not forward the traffic to Satellite Device 2.


### Local Bias Forwarding to Extended Ports with Ingress Replication to the Satellite Devices (No Local Replication)

By default, any aggregation device forwarding multicast traffic to destination extended ports uses ingress multicast replication towards the destination extended ports. This replication method applies whether the forwarding aggregation device is the ingress aggregation device using local bias forwarding or is a DF forwarding traffic for destination extended ports that failed the local bias check.

With ingress replication, the forwarding aggregation device creates copies of the traffic for every destination extended port, and uses the individual unicast ECIDs to send the copies to the satellite device connected to the destination extended ports. The satellite device then forwards the traffic addressed to each of its local destination extended ports.

Figure 17 on page 1006 illustrates local bias forwarding with ingress replication towards the extended ports.

**Figure 17: Junos Fusion Data Center with EVPN—Local Bias with Local Replication Not Enabled**

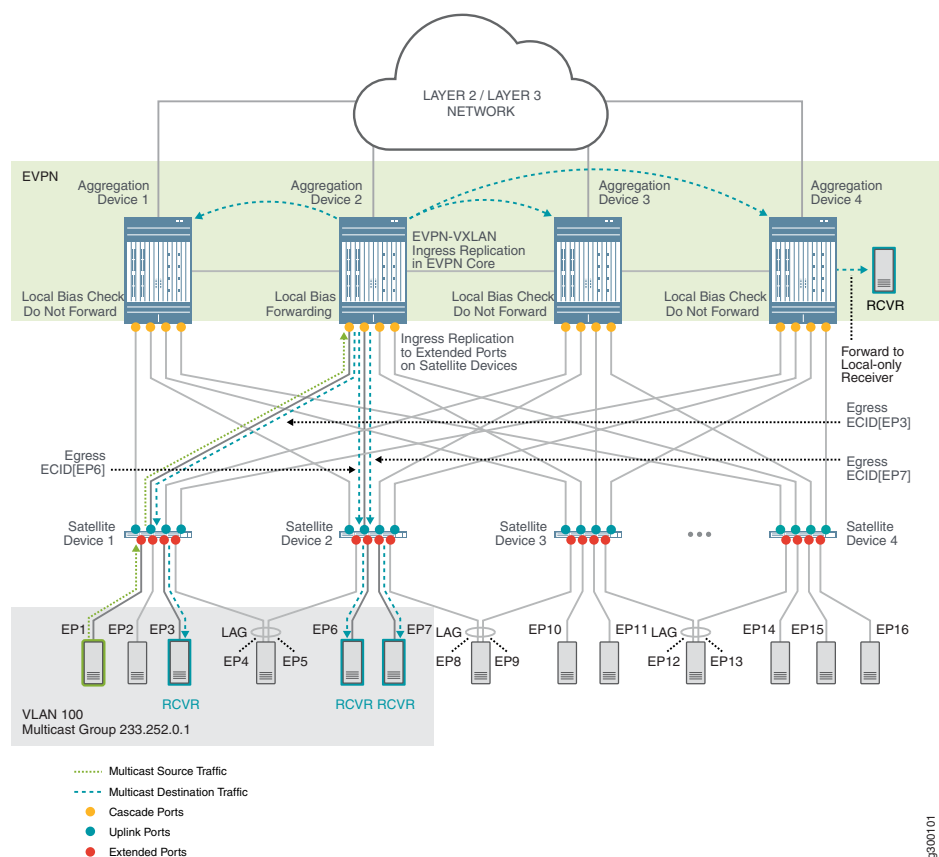

Aggregation Device 2 is the ingress aggregation device that receives multicast source traffic for VLAN 100 and multicast group address 233.252.0.1 from multihomed extended port EP1. Based on the IGMP state synchronized across the aggregation devices, extended ports EP3 on Satellite Device 1 and EP6 and EP7 on Satellite Device 2 have multicast listeners for that group in VLAN 100. Aggregation Device 2 is not the DF for any of these extended ports, but forwards the traffic to Satellite Device 1 and Satellite Device 2 for those extended ports according to the local bias model.

Aggregation Device 2 uses ingress replication towards the three destination extended ports as follows:

- Creates and forwards one copy for EP3 to Satellite Device 1 using ECID[EP3]

- Creates and forwards two copies to Satellite Device 2, one for EP6 (using ECID[EP6]) and one for EP7 (using ECID[EP7])

The satellite devices forward the traffic to each of their destination extended ports. Aggregation Device 2 also floods the traffic to the three other aggregation devices in the EVI in case there are other destinations to which it is not directly connected. The other aggregation devices that are DFs for extended ports on Satellite Device 1 and Satellite Device 2 receive the traffic, perform a local bias check, and do not forward the traffic to EP3, EP6, or EP7.

See [“Understanding Multicast Replication in a Junos Fusion” on page 1014](#) and [“Ingress Replication at the Aggregation Device to Satellite Devices” on page 1020](#) for more details on how Junos Fusion architectures use 802.1BR E-channel IDs (ECIDs) and ingress replication for managing multicast traffic flow between aggregation devices and extended ports by way of their satellite devices.


### **Local Bias Forwarding to Extended Ports with Local Replication at the Satellite Devices**

---

You can enable egress replication, also called local replication, in a Junos Fusion Data Center with EVPN to offload most of the replication and forwarding work to the satellite devices connected to the destination extended ports. (See [“Configuring Egress \(Local\) Replication on a Junos Fusion” on page 1029](#).) With local replication enabled, the forwarding aggregation device creates and forwards only one copy of the traffic to each satellite device that has one or more destination extended ports, and each satellite device replicates the packets and forwards copies to each of its local destination extended ports.

[Figure 18 on page 1008](#) illustrates local bias forwarding with local replication towards the extended ports.

**Figure 18: Junos Fusion Data Center with EVPN—Local Bias Forwarding with Local Replication Enabled**

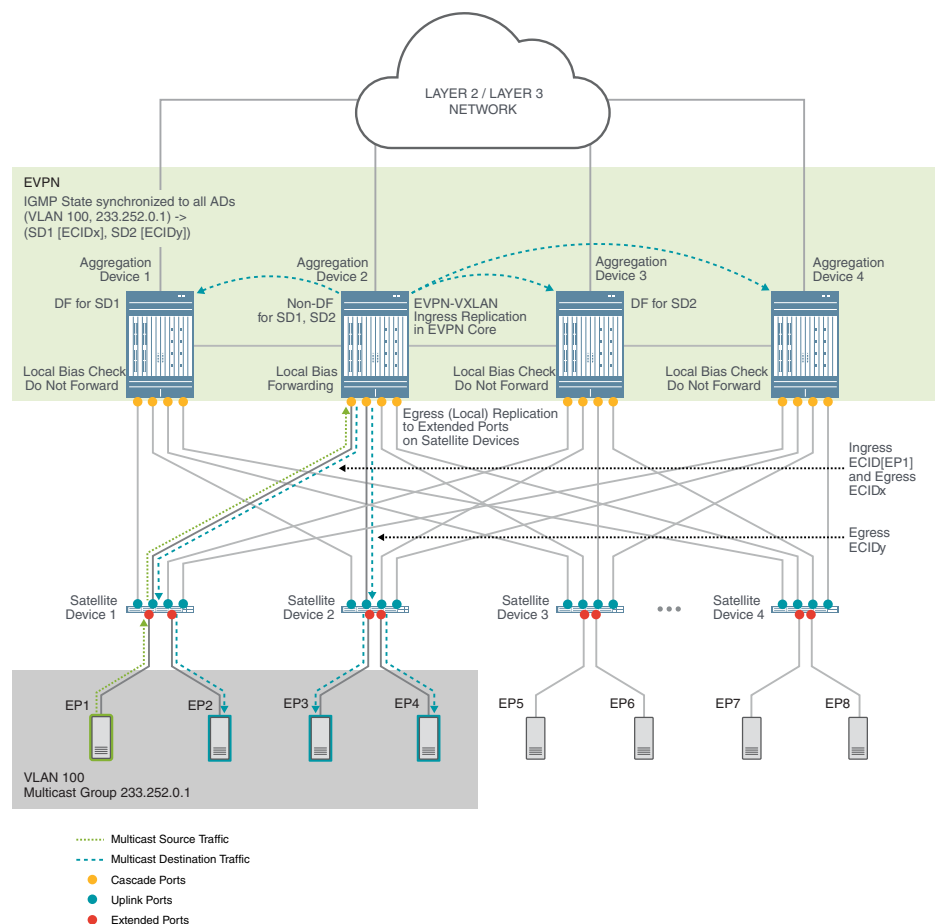

g300102

In [Figure 18 on page 1008](#), incoming traffic from a multicast source on EP1, hashed among the aggregation devices to which EP1 is multi-homed, arrives on Aggregation Device 2 for VLAN 100 and multicast group address 233.252.0.1. Based on the IGMP snooping state synchronized to all aggregation devices, extended ports EP2 on Satellite Device 1 (multicast ECIDx) and EP3 and EP4 on Satellite Device 2 (multicast ECIDy) have multicast listeners for that group in VLAN 100. Aggregation Device 2 is not the DF for these destination extended ports, but according to the local bias model, Aggregation Device 2 forwards the traffic to multicast listeners on EP2, EP3, and EP4. Replication and forwarding proceeds as follows with local replication enabled:

- Aggregation Device 2 creates and forwards one copy for EP2 to Satellite Device 1 using multicast ECIDx.



**NOTE:** The 802.1BR header also carries the ingress ECID (ECID[EP1]), so Satellite Device 1 would not replicate and forward the traffic back out of the source extended port (EP1).

- Aggregation Device 2 creates and forwards one copy to Satellite Device 2 for EP3 and EP4 using multicast ECIDy.
- Satellite Device 1 forwards the traffic to EP2.
- Satellite Device 2 replicates the traffic and sends one copy to EP3 and one copy to EP4.

Aggregation Device 2 also floods the traffic to the three other aggregation devices in the EVI in case there are other destinations to which it is not directly connected. In [Figure 18 on page 1008](#), other aggregation devices that are DFs for extended ports on Satellite Device 1 and Satellite Device 2 receive the traffic, perform a local bias check, and do not forward the traffic to their assigned extended ports.

See “[Understanding Multicast Replication in a Junos Fusion](#)” on page 1014 and “[Egress \(Local\) Replication on the Satellite Devices](#)” on page 1023 for full details on how Junos Fusion architectures use 802.1BR E-channel IDs (ECIDs) and local replication for managing multicast traffic flow between aggregation devices and extended ports by way of their satellite devices.


### Designated Forwarder Traffic Forwarding with Local Replication at the Satellite Devices

In a Junos Fusion Data Center with EVPN topology, if an ingress aggregation device loses direct connectivity to a satellite device, it cannot perform local bias forwarding to destination extended ports on that satellite device. In that case, the DF for each destination extended port is responsible to forward the traffic. Upon receiving multicast source traffic from the ingress aggregation device, the DF for a given destination extended port performs the usual local bias check. If the local bias check fails, the DF becomes the forwarding aggregation device for its destination extended ports.

With local replication enabled, the DF creates and forwards only one copy of the traffic to each satellite device that has one or more of its destination extended port ESs, and each satellite device replicates and forwards copies to each of its local destination extended ports.

[Figure 19 on page 1010](#) illustrates DF forwarding with local replication towards the extended ports.

**Figure 19: Junos Fusion Data Center with EVPN—Designated Forwarder Using Local Replication**

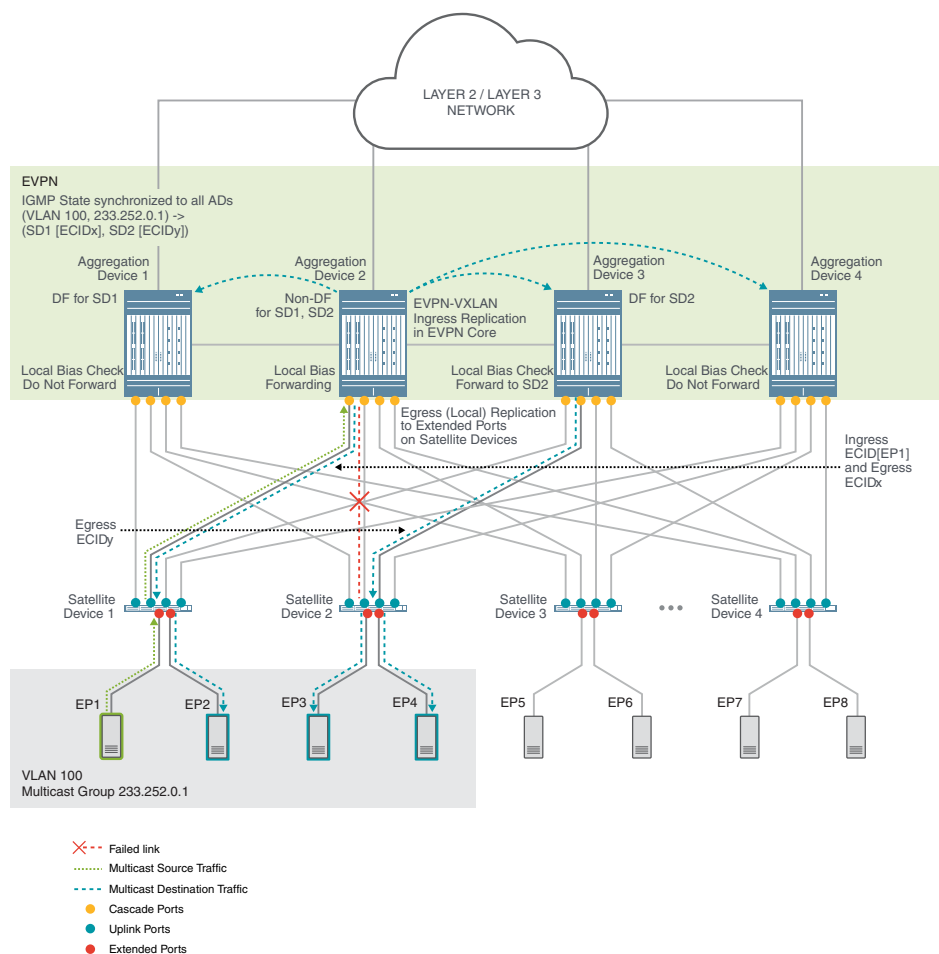

In [Figure 19 on page 1010](#), incoming traffic from a multicast source on EP1, hashed among the aggregation devices to which EP1 is multihomed, arrives on Aggregation Device 2 for VLAN 100 and multicast group address 233.252.0.1. Based on the IGMP snooping state synchronized to all aggregation devices, extended ports EP2 on Satellite Device 1 (multicast ECIDx) and EP3 and EP4 on Satellite Device 2 (multicast ECIDy) have multicast listeners for that group in VLAN 100. Aggregation Device 2 is not the DF for these destination extended ports, has direct connectivity to EP2 by way of Satellite Device 1, but does not have direct connectivity to EP3 and EP4 due to a failed cascade link to Satellite Device 2. As a result, Aggregation Device 3, the DF for EP3 and EP4, is responsible to forward the traffic to EP3 and EP4.

Replication and forwarding to the multicast listeners on EP2, EP3, and EP4 proceeds as follows with local replication enabled:



- Aggregation Device 2 creates and forwards one copy for EP2 to Satellite Device 1 using multicast ECIDx.



**NOTE:** The 802.1BR header also carries the ingress ECID (ECID[EP1]), so Satellite Device 1 would not replicate and forward the traffic back out of the source extended port (EP1).

- Aggregation Device 2 floods the traffic into the EVPN core to reach other destinations to which it is not directly connected (which include EP3 and EP4).
- Aggregation Device 3 receives the traffic from Aggregation Device 2 and determines it must forward the traffic to EP3 and EP4 because it is the DF for those extended ports, and a local bias check for Aggregation Device 2 connectivity to these destinations fails.
- Aggregation Device 3 creates and forwards one copy to Satellite Device 2 for both EP3 and EP4 using multicast ECIDy.
- Satellite Device 1 forwards the traffic to EP2.
- Satellite Device 2 replicates the traffic and sends one copy to EP3 and one copy to EP4.
- Aggregation Device 1 receives the traffic from the EVPN core, performs a local bias check, and does not forward the traffic to EP2.

### Handling Split-horizon on a LAG of Ingress Extended Ports Across Satellite Devices

Extended ports in a Junos Fusion Data Center with EVPN can be part of a link aggregation group (LAG) that spans satellite devices. Extended port LAGs are assigned special LAG ECIDs.

Forwarding multicast traffic from a source on an extended port LAG is similar to forwarding traffic from a single source extended port, but special handling in the EVPN core is required when the LAG spans satellite devices.

A Junos Fusion Data Center with EVPN uses these forwarding actions whether the source is a LAG of extended ports on one satellite device or a LAG of extended ports across satellite devices:

- A satellite device receiving multicast source traffic on an extended port LAG includes the source (ingress) extended port LAG ECID in the 802.1BR header when forwarding the traffic to the aggregation devices.
- When the ingress aggregation device forwards traffic towards destination extended ports, it sends the multicast destination ECID in the 802.1BR header so the receiving satellite devices can direct the traffic to the right extended ports.
- The ingress aggregation device also includes the source extended port LAG ECID from the 802.1BR header when forwarding the traffic back to the source satellite device. The source satellite device requires this information to apply split-horizon forwarding

to its extended ports, and does not forward the traffic back out of the source extended port LAG.

- Upon receiving the source traffic from the ingress aggregation device, if a DF determines from the local bias check that it needs to forward the traffic to its ESs, the DF includes the multicast destination ECID in the 802.1BR header when it forwards the traffic to the satellite devices connected to its ESs.


Additional actions are required when the source LAG spans satellite devices. Due to the multihoming environment and local bias or DF forwarding methods, other aggregation devices besides the ingress aggregation device might be responsible for forwarding the traffic to satellite devices with extended ports in the source LAG. These DF aggregation devices also need to forward the source extended port LAG ECID to their satellite devices so those satellite devices can apply split-horizon loop prevention when forwarding the traffic.

As a result, the aggregation devices also perform these actions only when the source LAG spans satellite devices:

- When the ingress aggregation device floods source traffic into the EVPN core to the other aggregation devices, the ingress aggregation preserves and inserts the 802.1BR header (containing the source LAG ECID) with the multicast payload in the VXLAN tunnel encapsulation.
- Each DF receives the source LAG ECID and can include that in the 802.1BR header with the traffic forwarded to the satellite devices for its destination ESs, and the satellite devices can avoid forwarding the data to other extended ports in the source LAG.

[Figure 20 on page 1013](#) shows a simplified example of a Junos Fusion Data Center with EVPN topology in which the traffic source ingresses on a LAG of extended ports that spans satellite devices. The link between Aggregation Device 2 and Satellite Device 2 has failed. (Local replication is enabled in this example, but the replication method does not have any bearing on the requirement to share the source LAG ECID across the aggregation devices in the EVPN core.)

**Figure 20: Junos Fusion Data Center with EVPN—Multicast Source LAG of Extended Ports Spanning Satellite Devices**

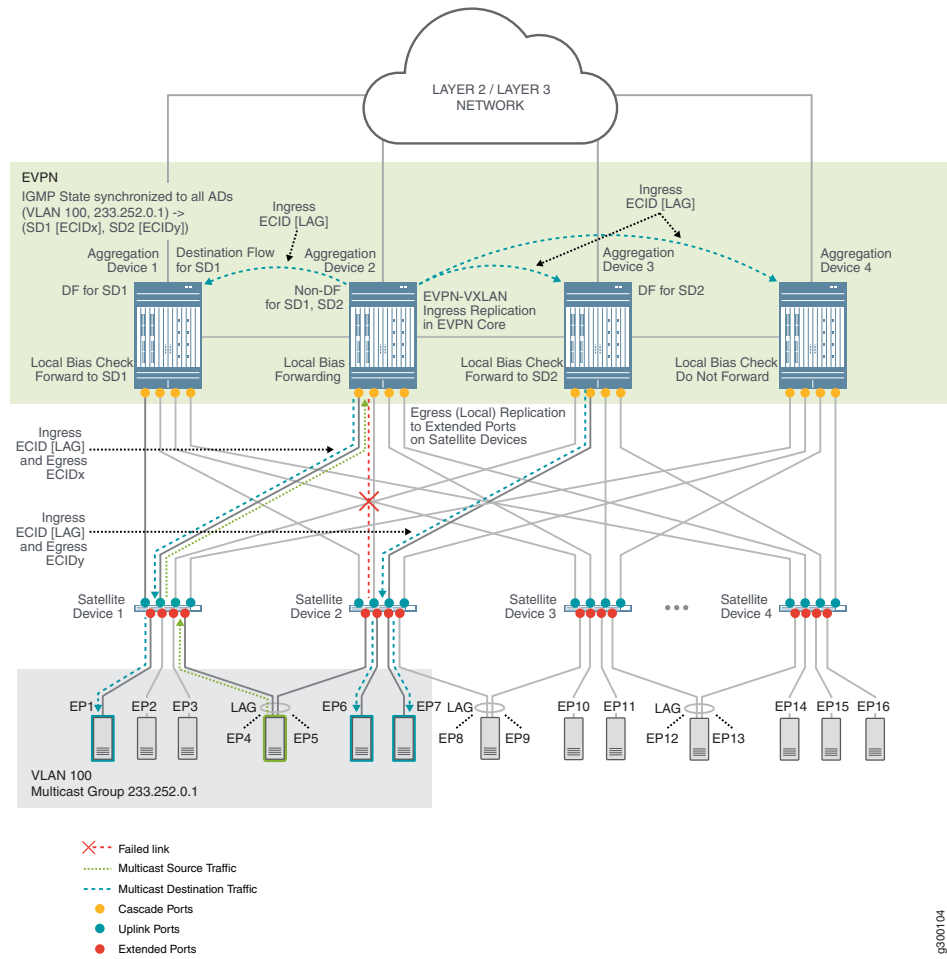

9300104

In [Figure 20 on page 1013](#), both Satellite Device 1 and Satellite Device 2 have extended ports (EP4 and EP5) in the LAG, and the source traffic ingresses on EP4 on Satellite Device 1.

- Satellite Device 1 sends the traffic to one of the aggregation devices to which it is multihomed, in this case Aggregation Device 2, and includes the ECID of the LAG as the source or ingress ECID.
- Aggregation Device 2 recognizes that the source is part of a LAG, and inserts the source LAG ECID into the packets it floods into the EVPN core to the other aggregation devices.
- Aggregation Device 3 is the DF for EP6 and EP7 on Satellite Device 2, so it forwards the traffic to its ESs because the local bias check for Satellite Device 2 failed. When forwarding the traffic, Aggregation Device 3 also includes the source LAG ECID in the 802.1BR header to Satellite Device 2 so the satellite device can ensure the traffic is not sent out on destination extended ports that are members of the source LAG.

- Aggregation Device 2 has connectivity to Satellite Device 1 and can perform local bias forwarding to reach the receiver at EP 1. Aggregation Device 2 also includes the source LAG ECID so Satellite Device 1 can ensure the traffic is not sent out of EP4, the source extended port and a member of the source extended port LAG.
- Aggregation Device 1, the DF for EP 1, does not forward the traffic to Satellite Device 1 because the local bias check shows Aggregation Device 2 has connectivity and would have already forwarded the traffic.

**Related Documentation**

- [Junos Fusion Data Center Overview on page 3](#)
- [Understanding Junos Fusion Data Center Components on page 6](#)
- [Understanding EVPN in a Junos Fusion Data Center on page 26](#)
- [\*EVPN Multihoming Overview\*](#)
- [Understanding Multicast Replication in a Junos Fusion on page 1014](#)
- [Ingress Replication at the Aggregation Device to Satellite Devices on page 1020](#)
- [Egress \(Local\) Replication on the Satellite Devices on page 1023](#)
- [Multicast Forwarding at Layer 3 in a Junos Fusion Data Center with EVPN on page 992](#)

---

## Understanding Multicast Replication in a Junos Fusion

This topic introduces how multicast packets are replicated in a Junos Fusion and forwarded to multicast subscribers on satellite device extended ports.

- [Junos Fusion Multicast Replication Overview on page 1014](#)
- [ECIDs for Multicast Traffic on page 1018](#)
- [Multicast Replication Limitations in a Junos Fusion on page 1019](#)


### Junos Fusion Multicast Replication Overview

Aggregation devices and satellite devices work together to manage the traffic flow from multicast sources to multicast destination ports in a Junos Fusion, resolving a source packet forwarding path to multiple destination ports.

Multicast source packets might be received through a network port on the aggregation device or an extended port on a satellite device. When a multicast source packet ingresses at a satellite device, the satellite device sends the source packet on an uplink port to the aggregation device in one of the following ways:


- In a Junos Fusion Provider Edge architecture, the satellite device load-balances forwarded source traffic over the available uplink ports to the aggregation device.
- In a Junos Fusion Data Center with MC-LAG, the satellite device load-balances source traffic over the available uplink ports to either of the two available aggregation devices. For example, see [Figure 21 on page 1015](#), where the source traffic from Host 1 on Satellite Device 1 is load-balanced between Aggregation Device 1 and Aggregation Device 2.

Figure 21: Multicast Replication in a Junos Fusion Data Center with MC-LAG

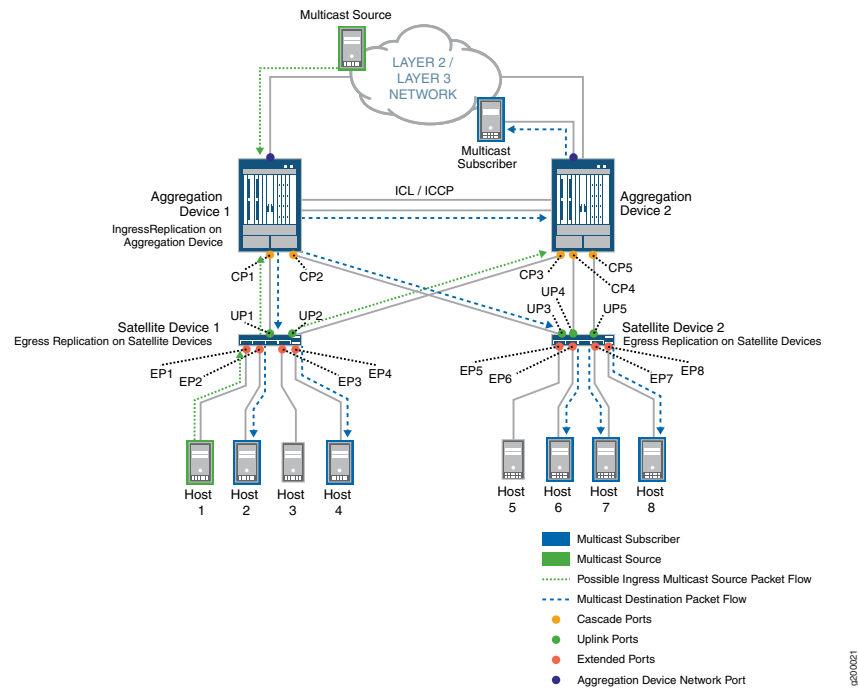

- In a Junos Fusion Data Center with EVPN, extended ports on the satellite devices are multihomed to all aggregation devices, and each is modeled as an EVPN Ethernet Segment (ES). One aggregation device is elected as the designated forwarder (DF) for each ES. A satellite device receiving multicast source traffic hashes among the uplink ports and forwards the traffic to one of its available aggregation devices. For example, see [Figure 22 on page 1016](#), where Satellite Device 1 is multihomed to four aggregation devices, and the source traffic from Host 1 on Satellite Device 1 is hashed to Aggregation Device 2.

Figure 22: Multicast Replication in a Junos Fusion Data Center with EVPN

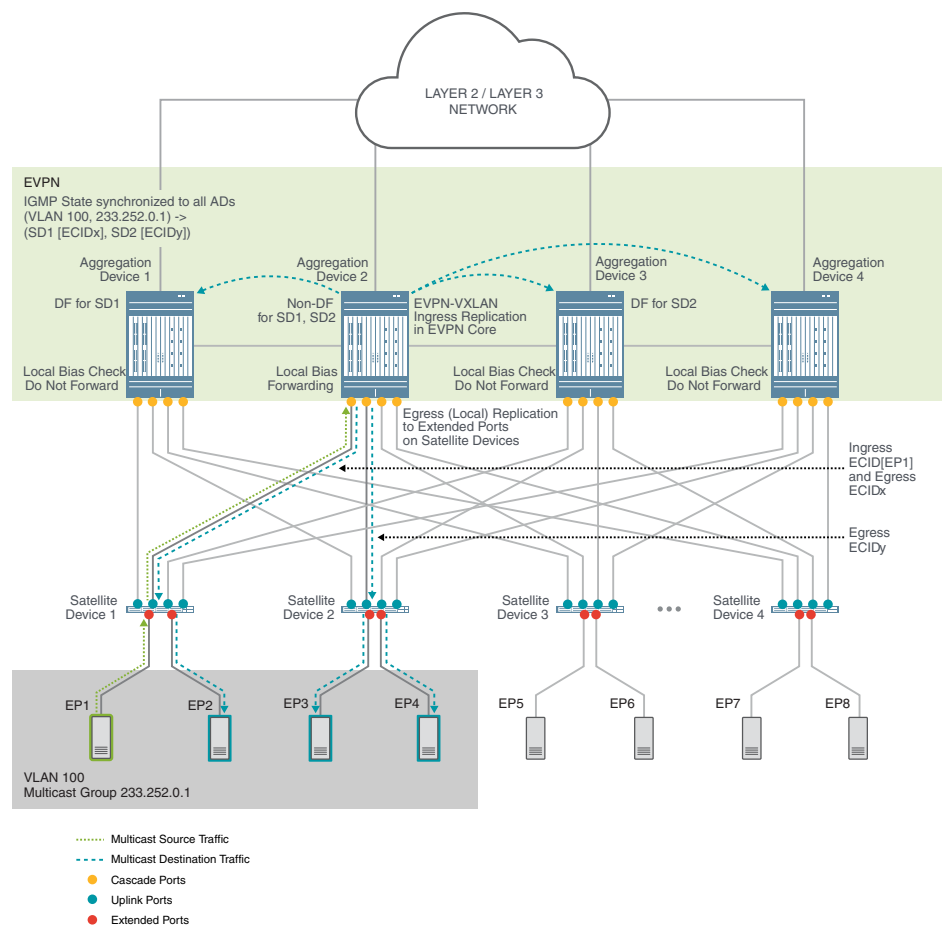

g300102

The aggregation device that initially receives the source traffic to be forwarded is referred to as the *ingress aggregation device*. All multicast destination resolution is done on the aggregation devices. In Junos Fusion architectures with multiple aggregation devices, the ingress aggregation device also forwards the multicast traffic to the other aggregation device or devices to reach multicast subscribers that are only accessible through those other devices, or to support the forwarding behavior of a particular Junos Fusion architecture.

- For Junos Fusion Data Center with MC-LAG, traffic is forwarded between aggregation devices using the inter-chassis link (ICL).
- For Junos Fusion Data Center with EVPN, the traffic is flooded in the EVPN core to the other aggregation devices to reach destinations that might only be available through those devices.



**NOTE:** For more efficient forwarding, as shown in [Figure 22 on page 1016](#), an aggregation device in a Junos Fusion Data Center with EVPN employs local bias behavior and forwards the traffic to locally-reachable destination ESs even if it is not the EVPN multihoming DF for that ES. To avoid duplicate packet flows, the other aggregation devices that might be DFs for a destination ES check to see if the ES is currently reachable by the ingress aggregation device (called a *local bias check*), and do not forward the traffic in that case. See [“Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN” on page 999](#) for details.

To forward multicast traffic to destinations on satellite device extended ports, the aggregation device uses E-channel Identifier (ECID) mappings to determine the forwarding paths to the destination extended ports, including which cascade ports link to the corresponding satellite devices. (See [“ECIDs for Multicast Traffic” on page 1018](#).) Multicast traffic flowing from the aggregation device to destination satellite devices is load-balanced over the available cascade ports to each destination satellite device. Satellite devices use the ECID in the multicast packets from the aggregation device to determine which local port or ports should receive the multicast traffic.



**NOTE:** This behavior applies similarly to flooding unknown unicast traffic within a VLAN in a Junos Fusion.

By default, the ingress aggregation device replicates multicast and broadcast packets to forward to each destination extended port. This behavior is referred to as *ingress multicast replication*. The aggregation device sends multiple copies of the packet to each satellite device, one copy for each destination extended port on that satellite device, identified by the extended port’s unicast ECID. See [“Ingress Replication at the Aggregation Device to Satellite Devices” on page 1020](#) for more information.

Starting in Junos OS Release 16.1, Junos Fusion supports enabling *egress multicast replication*, also referred to as *local replication*, where satellite devices replicate the multicast and broadcast packets destined for their local ports. Starting in Junos OS Release 17.2R1, local replication is supported in Junos Fusion Data Center with MC-LAG architectures. In Junos OS Release 18.1R2-S2, local replication is supported in Junos Fusion Data Center with EVPN architectures. Egress or local replication uses special multicast ECIDs corresponding to one or more extended ports to which a satellite device should forward the traffic. (See [“ECIDs for Multicast Traffic” on page 1018](#).) Local replication helps to distribute most of the replication load from aggregation devices to the satellite devices where the traffic egresses, and reduces traffic on cascade ports. When enabled, local replication applies to all satellite devices in the Junos Fusion; you cannot enable it only for individual satellite devices.

Local replication behavior differs slightly for different types of multicast and broadcast traffic, and for different Junos Fusion architectures. See [“Egress \(Local\) Replication on the Satellite Devices” on page 1023](#) for details.

To avoid creating loops and broadcast storms, for both ingress and egress multicast replication, both the aggregation devices and satellite devices maintain split-horizon next-hop information to prevent resending multicast or broadcast packets back out of the ingress port.

## ECIDs for Multicast Traffic

Traffic sent between aggregation devices and satellite devices is sent over a logical path, called an *e-channel*. The packets sent between the aggregation device and satellite device include the IEEE 802.1BR E-channel tag (ETAG) header with an E-channel identifier (ECID). The ECID identifies the path that will be used in forwarding traffic packets. Each extended port is identified by a unique ECID value. Junos Fusion reserves ECID values 1 through 4095 for unicast data packets. ECID values from 4096 through 16382, also called *multicast ECIDs*, are reserved for multicast, VLAN flooding, and broadcast data packets. Multicast ECIDs correspond to one or more destination extended ports on a satellite device.

The aggregation device automatically creates virtual interfaces named **sd-fpc-id/0/0** (where *fpc-id* is the satellite device ID) to represent satellite devices, and uses these virtual interfaces as the next-hop interface when forwarding traffic to a satellite device.

When local replication is disabled, similar to unicast packet flow (see [“Understanding the Flow of Data Packets in a Junos Fusion Topology” on page 38](#)), the aggregation device assigns a unicast ECID value for each destination extended port on a satellite device for both unicast traffic and multicast traffic. The aggregation device replicates multicast packets, tags them with the assigned ECID for the destination, and sends a copy to each destination extended port by way of the corresponding satellite device interface.

When local replication is enabled, Junos Fusion uses ECID values greater than 4095 to identify multicast traffic and associate one or more extended ports on a satellite device as the multicast destination. Junos Fusion dynamically assigns multicast ECID values. When the aggregation device requires a new multicast ECID value for a group of ports or if it needs to add a port to an existing ECID, the process is as follows:

1. The aggregation device sends a request to the satellite device to assign an ECID value (or update an existing ECID mapping when multicast group or VLAN membership changes).
2. The satellite device assigns an ECID value and adds an entry to its ECID table to map the ECID value to the corresponding extended ports.
3. The satellite device sends a message back to the aggregation device with the ECID value that satisfies the request for the corresponding extended ports.
4. The aggregation device adds this information to its ECID table. It uses the **sd** virtual interface as the next-hop interface to send multicast traffic for those extended ports on the satellite device.

When the satellite device receives a data packet from the aggregation device with a multicast ECID value, the satellite device begins to replicate and forward packets to the extended ports associated with that ECID. Satellite devices do not do multicast lookups; they only maintain ECID tables to determine the port or ports corresponding to an ECID



in a packet received from the aggregation device. The aggregation devices perform all multicast route maintenance and forwarding path resolution.



**NOTE:** In Junos Fusion Data Center with EVPN, if multicast source traffic ingresses on a link aggregation group (LAG) of extended ports that spans satellite devices, the 802.1BR header carries the source (ingress) extended port LAG ECID. The ingress aggregation device includes this header when forwarding the traffic to other aggregation devices in the EVPN core. The ingress aggregation device and any other DF aggregation devices that must forward traffic to destination ESs include the source extended port LAG ECID when sending the traffic to the satellite devices, so the satellite devices with extended ports in the LAG can make spit-horizon decisions.

An ECID value is only unique locally on the satellite device. Another satellite device can use the same ECID value for its own extended ports. The aggregation device maintains a composite mapping of ECID values to the different satellite devices and the corresponding extended ports on those satellite devices.

## Multicast Replication Limitations in a Junos Fusion

Junos Fusion strives to optimize data replication on satellite devices when local replication is enabled. However, for the following features, although local replication might be enabled, Junos Fusion does not trigger egress replication optimization, and instead defaults to using ingress replication:

- Multicast traffic on pure Layer 3 extended ports
- Multicast Listener Discovery (MLD) snooping on an IPv6 network

You might choose not to enable local replication because egress multicast replication is incompatible with some Junos OS protocol and traffic management features programmed on individual extended ports. The following features do not work when egress multicast replication is enabled; if you want to use these features, you cannot take advantage of egress replication optimizations:

- VLAN tag manipulations, such as VLAN tag translations, VLAN tag stacking, and VLAN per-port policies. Using egress multicast replication with this feature can cause dropped packets due to unexpected VLAN tags.
- Multicast support for the extended ports on the edge side of Pseudowire connection in a VPLS network.
- Multicast support for the extended ports on the edge side of EVPNs.
- Multicast VPN deployments.
- Features that perform egress actions on individual extended ports, such as egress local-port mirroring (port mirroring on endpoints connected to satellite device extended ports).

Release History Table

Release	Description
18.1R2-S2	In Junos OS Release 18.1R2-S2, local replication is supported in Junos Fusion Data Center with EVPN architectures.
17.2R1	Starting in Junos OS Release 17.2R1, local replication is supported in Junos Fusion Data Center with MC-LAG architectures.
16.1	Starting in Junos OS Release 16.1, Junos Fusion supports enabling <i>egress multicast replication</i> , also referred to as <i>local replication</i> , where satellite devices replicate the multicast and broadcast packets destined for their local ports.

#### Related Documentation

- [Ingress Replication at the Aggregation Device to Satellite Devices on page 1020](#)
- [Egress \(Local\) Replication on the Satellite Devices on page 1023](#)
- [Configuring Egress \(Local\) Replication on a Junos Fusion on page 1029](#)
- [Understanding the Flow of Data Packets in a Junos Fusion Topology on page 38](#)
- [Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN on page 999](#)


## Ingress Replication at the Aggregation Device to Satellite Devices

By default, Junos Fusion uses ingress replication on the aggregation devices to replicate and forward copies of packets to multicast destinations.

In ingress replication mode, the ingress aggregation device replicates the multicast packets and forwards them to every destination extended port. The data packet flow is similar to unicast data packet flow from the multicast source to each destination.

[Figure 23 on page 1021](#) shows multicast source data packets received from a multicast source on an extended port, EP1, with traffic destined for endpoints connected to extended ports EP2 through EP5. Each extended port has an associated E-channel Identifier (ECID) value that the aggregation device uses to forward the data packet to each destination extended port. The aggregation device replicates the data packets for all multicast destination extended ports on all attached satellite devices, as follows:

- Two copies for satellite device 1 (for EP2 and EP3)
- Two copies for satellite device 2 (for EP4 and EP5)

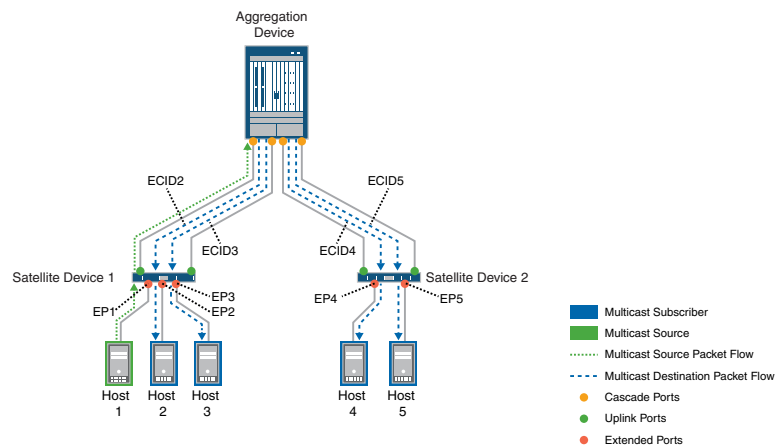*Figure 23: Ingress Replication at the Aggregation Device*

The aggregation device sends each packet on the respective cascade ports to the satellite devices with destination extended ports. Multicast traffic destined for EP2 is tagged with ECID2, traffic destined for EP3 is tagged with ECID3, and so on for all the destination extended ports on both satellite devices. The satellite devices receive and forward the packets to their respective extended ports.

The aggregation device maintains multicast routing information and next-hop tables, including ECID label mappings to satellite devices and the corresponding extended ports. For a multicast destination on a satellite device, the aggregation device resolves the next-hop path through a corresponding cascade port that reaches the satellite device. When there are multiple cascade port links to a satellite device, the aggregation device load-balances the traffic to choose which cascade port to use.

Each receiving satellite device maintains tables that map the assigned ECIDs to the corresponding extended ports, and simply forwards outgoing multicast packets to the destination extended ports. The satellite devices do not maintain multicast routing information.


Other multicast destinations might be reached through local ports on the aggregation device, rather than through extended ports. For these destinations, the aggregation device creates and sends copies to those local ports directly.

In Junos Fusion Data Center with MC-LAG topologies, which have dual aggregation devices, for multicast subscribers on ports on the other aggregation device, the ingress aggregation device creates copies for those ports, and sends them over the ICL link to the other aggregation device to forward to its local destination ports.

In a Junos Fusion Data Center with EVPN, the ingress aggregation device floods the traffic in the EVPN core to all other aggregation devices, and uses local bias forwarding whenever possible to send a copy of the multicast stream to all locally-reachable destination extended port Ethernet Segments (ESs). See [Figure 24 on page 1022](#). Other aggregation devices that are designated forwarders (DFs) for multihomed destination ESs perform a local bias check, and only forward traffic to their designated ESs that the ingress

aggregation device could not reach. In either the local bias or DF forwarding case with ingress replication, the forwarding aggregation device sends one copy of the multicast stream to every destination ES using the extended port ECID, similar to [Figure 23 on page 1021](#).

**Figure 24: Ingress Replication to the Satellite Devices in a Junos Fusion with EVPN**

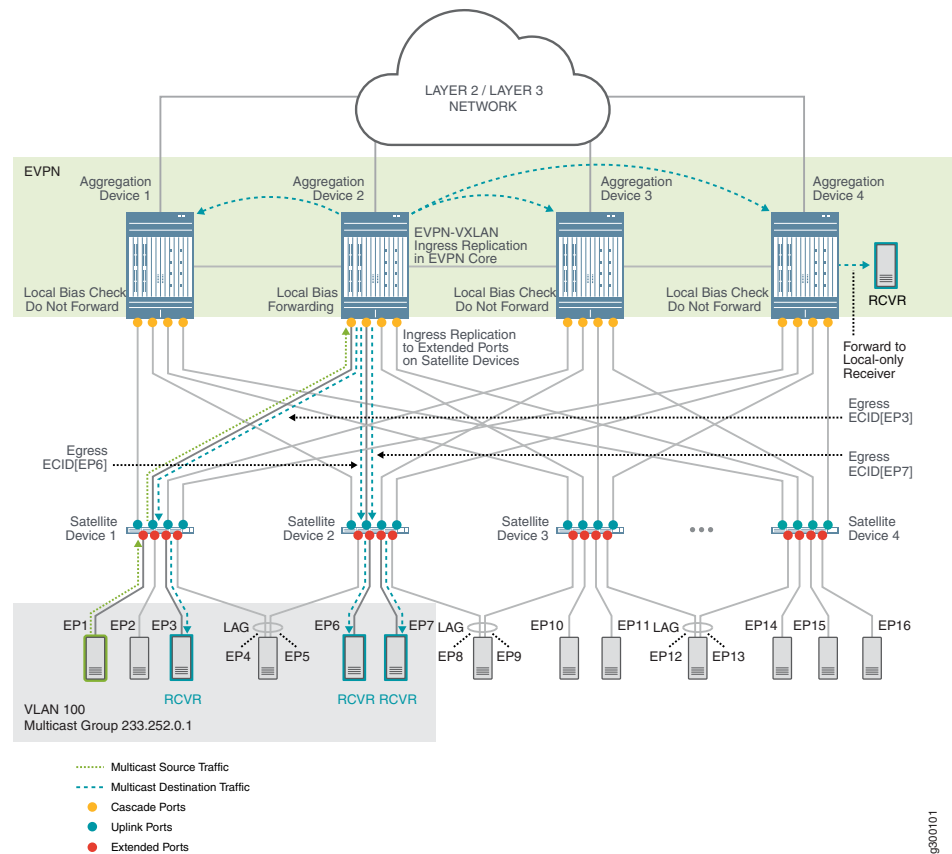

Multicast support using ingress replication does not scale well for a large number of multicast destinations or higher bandwidth multicast traffic. Ingress replication increases aggregation device Packet Forwarding Engine processing load and consumes bandwidth on the links between cascade ports and uplink ports, potentially resulting in link oversubscription and latency among multicast recipients.

You can alternatively enable *egress multicast replication*, also referred to as *local replication*. Local replication optimizes multicast replication by distributing the replication load between the aggregation devices and the satellite devices that have multicast destination ports. However, local replication requires more control plane processing than ingress replication, which results in a slight increase in multicast group join and leave latency. See [“Egress \(Local\) Replication on the Satellite Devices” on page 1023](#) for more information on how local replication works for different types of multicast or broadcast traffic.

- Related Documentation**
- [Understanding Multicast Replication in a Junos Fusion on page 1014](#)
  - [Egress \(Local\) Replication on the Satellite Devices on page 1023](#)
  - [Understanding the Flow of Data Packets in a Junos Fusion Topology on page 38](#)
  - [Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN on page 999](#)

---

## Egress (Local) Replication on the Satellite Devices

Egress multicast replication in a Junos Fusion is referred to as *local replication*. In egress or local replication mode, the aggregation device optimizes replication by off-loading replication whenever possible to satellite devices that have destination extended ports. From the point of view of the aggregation device, replication is supported at an egress port, and from the point of view of the satellite device, replication is managed locally. Local replication alleviates some of the problems associated with ingress replication, reducing the potential for bandwidth oversubscription and replication latency when there are a large number of receivers.

Local replication is performed at Layer 2. Each receiving satellite device maintains tables that map the assigned ECIDs to corresponding destination extended ports, and simply forward outgoing multicast or broadcast packets to local extended ports. For Layer 3 multicast traffic, such as when forwarding packets between VLANs, the aggregation device performs replication to resolve Layer 3 information not maintained by satellite devices.


This topic describes local replication behavior for multicast traffic forwarded to the access side both within and across VLANs and when flooding traffic within a VLAN.

- [Local Replication for Layer 2 Multicast Traffic with IGMP Snooping on page 1023](#)
- [Local Replication for VLAN Flooding on page 1026](#)
- [Local Replication for Layer 3 Multicast Traffic Over IRB Interfaces on page 1027](#)

### Local Replication for Layer 2 Multicast Traffic with IGMP Snooping

[Figure 25 on page 1024](#) illustrates Layer 2 multicast traffic flow with IGMP snooping when local replication is enabled.

Figure 25: Local Replication with Layer 2 Multicast and IGMP Snooping in Junos Fusion

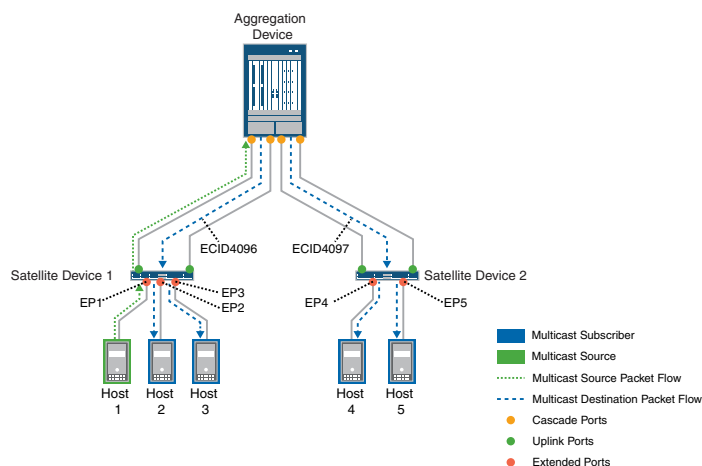

A data packet is received from a multicast source on an extended port, EP1, with traffic destined for endpoints connected to extended ports EP2 through EP5. The aggregation device acquires *multicast* ECIDs from the satellite devices, which represent a set of multicast destination extended ports on each satellite device. The diagram shows ECID value ECID4096 is assigned to the multicast subscribers behind extended ports EP2 and EP3 on satellite device 1, and ECID4097 is assigned to the multicast subscribers behind extended ports EP4 and EP5 on satellite device 2. The aggregation device creates only one copy of the source packet for each satellite device that has multicast destination extended ports, inserts the corresponding satellite device multicast ECID value in the IEEE 802.1BR ETAG header of each copy, and forwards the copies to those satellite devices.

In this case, the aggregation device creates two copies, forwards one with ECID4096 to satellite device 1, and forwards the other with ECID4097 to satellite device 2. Each satellite device receives its copy and uses the multicast ECID value to determine which of its extended ports should receive the multicast traffic. Satellite device 1 replicates the packet and forwards copies to EP2 and EP3; satellite device 2 replicates the packet and forwards copies to EP4 and EP5.


When forwarding replicated multicast packets to satellite devices, the aggregation device resolves the next-hop path through a corresponding cascade port that reaches the satellite device. When there are multiple cascade port links to a satellite device, the aggregation device load-balances the traffic when choosing which cascade port to use.

Other multicast destinations might be reached through ports on the aggregation devices, rather than through extended ports. For these destinations, the aggregation device creates and sends copies to those local ports directly.

In Junos Fusion Data Center with MC-LAG topologies, which have dual aggregation devices, for multicast subscribers behind ports on the other aggregation device, the ingress aggregation device creates copies for those ports, and sends them over the ICL link to the other aggregation device to forward to its local destination ports. This behavior is the same for ingress or egress multicast replication.

In a Junos Fusion Data Center with EVPN, when local replication is enabled, multicast traffic follows the same behavior shown in [Figure 25 on page 1024](#) using multicast ECIDs between the forwarding aggregation device and the destination extended ports' satellite devices. See [Figure 26 on page 1025](#).

**Figure 26: Local Replication with Layer 2 Multicast and IGMP Snooping in Junos Fusion Data Center with EVPN**

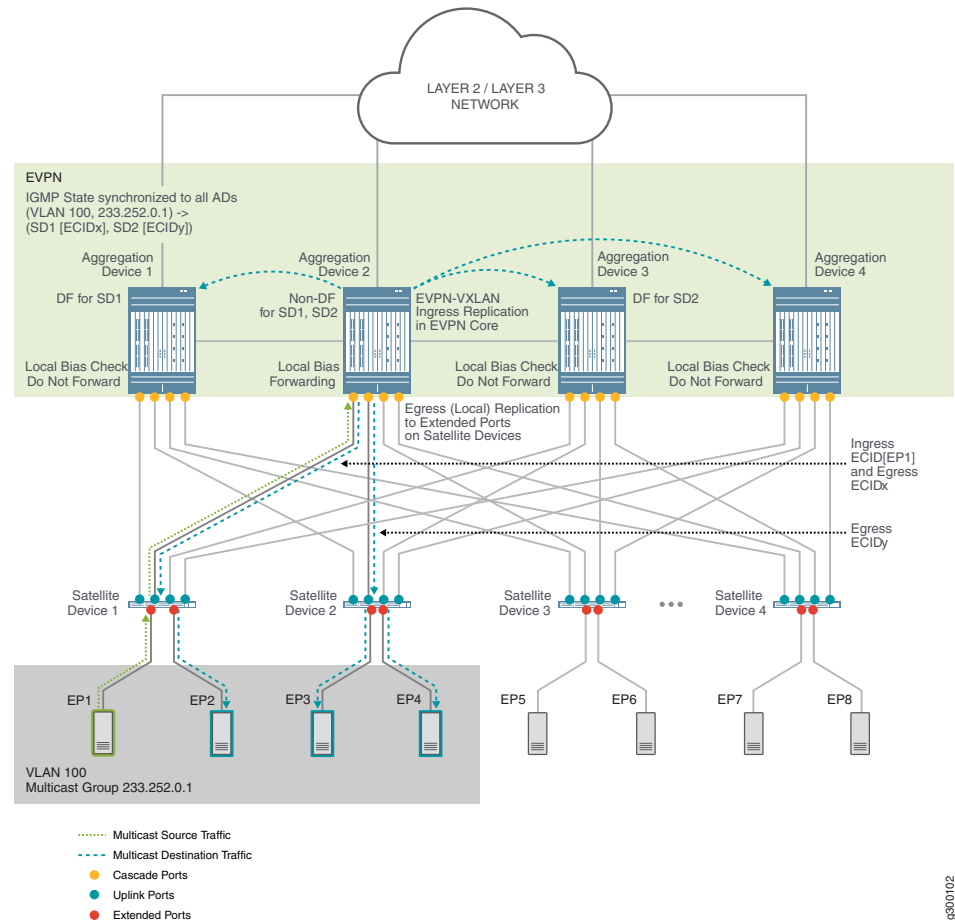

g300102


In a Junos Fusion Data Center with EVPN, the forwarding aggregation device might be the ingress aggregation device employing local bias forwarding to any reachable destination extended port Ethernet Segments (ESs), or the designated forwarder (DF) for a destination extended port ES that the ingress aggregation device could not reach. In either the local bias or DF forwarding case, with local replication enabled, the forwarding aggregation device sends only one copy of the multicast stream to each satellite device that has one or more multicast destination extended port ESs. The ingress aggregation device also floods the traffic toward the EVPN core so other aggregation devices can forward the traffic to ESs that the ingress aggregation device cannot reach using local bias forwarding. See [“Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN” on page 999](#) for details.

## Local Replication for VLAN Flooding

An aggregation device might initiate VLAN flooding (broadcasting or flooding the packet out to all interfaces in the VLAN) to learn the MAC address for a destination that is not already in its Ethernet switching tables. When local replication is not enabled, the aggregation device uses ingress replication, creating and sending copies to each destination extended port on each satellite device that has destination extended ports in the VLAN. With local replication enabled, the aggregation device requests multicast ECIDs to represent the extended ports in the VLAN on each satellite device. The aggregation device sends a copy of the source packet tagged with each ECID in the IEEE 802.1BR header to the corresponding satellite device. Each receiving satellite device does the replication locally for its extended ports in the VLAN.

Figure 27 on page 1026 illustrates the packet flow for VLAN flooding when local replication is enabled.

Figure 27: Local Replication with VLAN Flooding

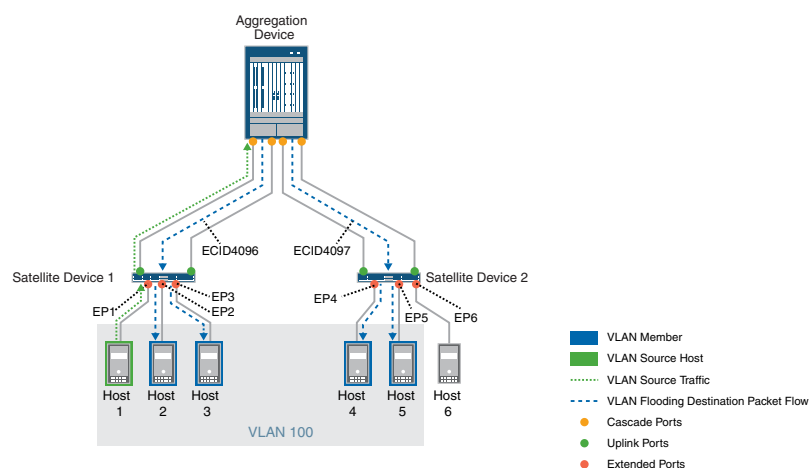

In this example, a multicast source packet for VLAN 100 ingresses on EP1, and satellite device 1 forwards the packet to the aggregation device. The aggregation device cannot resolve the destination MAC address, and decides to flood the packet to all extended port destinations in VLAN 100.



**NOTE:** When a source packet ingresses at a satellite device with uplink ports to dual aggregation devices, the satellite device load-balances forwarding the ingress traffic among the available uplink ports, so either aggregation device might receive the source packet and manage flooding the packet to destination VLAN members.

Multicast ECID4096 is allocated to represent extended ports on satellite device 1 that are members of VLAN 100—EP1, EP2 and EP3, and multicast ECID4097 represents extended ports on satellite device 2 that are also members of VLAN 100—EP4 and EP5. Host 6 behind extended port EP6 is not a member of VLAN 100 and is not a destination



for the flooded traffic. The aggregation device creates one copy of the packet tagged with ECID4096 and sends it to satellite device 1, and sends one copy tagged with ECID4097 to satellite device 2. Satellite device 1 replicates and forwards the packet for its own destination ports in VLAN 100, EP2 and EP3. (The ingress ECID split-horizon mechanism prevents forwarding traffic to the ingress port, EP1.) Satellite device 2 replicates and forwards the packet for EP4 and EP5, its local destination ports in VLAN 100. The extended port mapping for ECID4097 does not include EP6, so satellite device 2 does not forward the packet to that port.

When there are multiple cascade port links to a satellite device, the aggregation device load-balances the traffic when choosing which cascade port to use.

For destination VLAN members reachable through aggregation device ports (rather than extended ports), the aggregation device creates and sends copies to those local ports directly.

In Junos Fusion Data Center with MC-LAG topologies, which have dual aggregation devices, when there are VLAN members behind ports on the other aggregation device, the ingress aggregation device creates copies for those ports, and sends them over the ICL link to the other aggregation device to forward to its local destination ports. This behavior is the same for ingress or egress multicast replication.

In a Junos Fusion Data Center with EVPN, the aggregation devices handle VLAN flooding in the same way as multicast traffic forwarding. See [Figure 26 on page 1025](#). The ingress aggregation device (Aggregation Device 2 in the figure) floods the traffic in the EVPN core to all other aggregation devices, and uses local bias forwarding whenever possible to send a copy of the multicast stream to all locally-reachable extended port Ethernet Segments (ESs) in the VLAN (EP2 on Satellite Device 1 and EP3 and EP4 on Satellite Device 2 in [Figure 26 on page 1025](#)). The other aggregation devices that are designated forwarders (DFs) for multihomed ESs in the VLAN perform a local bias check, and only forward traffic to their designated ESs that the ingress aggregation device could not reach. In either the local bias or DF forwarding case with local replication enabled, the forwarding aggregation device sends only one copy of the traffic stream to each satellite device that has one or more extended port ESs in the VLAN. See [“Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN” on page 999](#) for details.

## Local Replication for Layer 3 Multicast Traffic Over IRB Interfaces


Integrated Routing and Bridging (IRB) provides support for Layer 2 bridging and Layer 3 routing on the same interface, and IRB interfaces are used to route traffic between VLANs. Because satellite devices do not maintain Layer 3 routing information, local replication on the satellite devices only occurs for Layer 2 traffic, and the aggregation device manages the replication of multicast destination packets at Layer 3.

In Junos Fusion Enterprise or Junos Fusion Provider Edge architectures, the aggregation device forwarding the traffic replicates the multicast source packet for each IRB interface in the Layer 3 replication list for a multicast group, and performs a VLAN tag rewrite for each corresponding VLAN. When there are extended ports in multiple VLANs on a satellite device that are receivers in the same multicast group, the aggregation device sends copies to each IRB with its corresponding VLAN ID to that satellite device. If an IRB interface (VLAN membership) spans multiple satellite devices, the aggregation device creates

and sends one copy to each satellite device that has multicast receivers that are members of that VLAN. Each satellite device then replicates and forwards copies of the received packet for its local multicast destination extended ports.

Figure 28 on page 1028 shows an example of Layer 3 multicast replication for VLANs over IRB interfaces in a Junos Fusion. In this case, two VLANs with corresponding IRB interfaces are configured on the aggregation device. In this case, multicast source packets ingress on an aggregation device port, and multicast subscribers are connected to extended ports EP1 through EP5, where extended ports EP1 and EP2 are in VLAN 100 and EP3 through EP5 are in VLAN 200.

**Figure 28: Local Replication with Layer 3 Multicast**

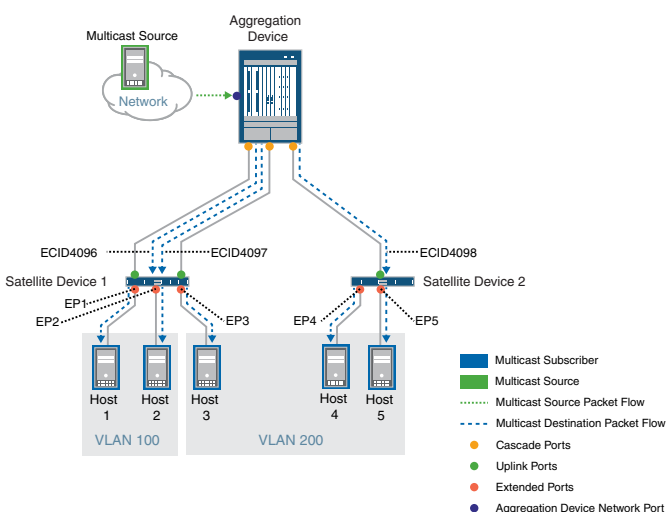

When the aggregation device receives a packet from the multicast source, it manages the Layer 3 replication by acquiring multicast ECIDs representing the destination extended ports in each VLAN on each satellite device, and creating, tagging, and forwarding copies on each VLAN's IRB interface to the satellite devices that have destination extended ports. As the figure shows, the aggregation device creates 3 copies of the source packet, as follows:

- Multicast ECID4096 represents EP1 and EP2 in VLAN 100 on satellite device 1. The aggregation device forwards one copy tagged with ECID4096 to satellite device 1 for the VLAN 100 IRB interface.
- Multicast ECID4097 represents EP3 in VLAN 200 on satellite device 1. The aggregation device forwards a second copy tagged with ECID4097 to satellite device 1 for the VLAN 200 IRB interface.
- Multicast ECID4098 represents EP4 and EP5 in VLAN 200 on satellite device 2. The aggregation device forwards a third copy tagged with ECID4098 for the VLAN 200 IRB interface to satellite device 2.

Each satellite device manages the Layer 2 processing by replicating the packets received from the aggregation device for the multicast subscribers behind its extended ports in each VLAN, as follows:

- Satellite device 1 replicates and forwards packets tagged with ECID4096 to extended ports EP1 and EP2, and forwards packets tagged with ECID4097 to EP3.
- Satellite device 2 replicates and forwards the packets tagged with ECID4096 to extended ports EP4 and EP5.

When there are multiple cascade port links to a satellite device, the aggregation device load-balances the traffic when choosing which cascade port to use.

For multicast destination VLAN members reachable through aggregation device ports (rather than extended ports), the aggregation device creates and sends copies to those local ports using the corresponding IRB interfaces.

In a Junos Fusion Data Center with MC-LAG, which has dual aggregation devices, when there are multicast subscribers behind ports on the other aggregation device, the ingress aggregation device creates copies for those ports, and sends them over the ICL link to the other aggregation device to forward to its local destination ports. This behavior is the same for ingress or egress multicast replication.

For details on multicast traffic routing at Layer 3 in a Junos Fusion Data Center with EVPN, which uses an external gateway device to route traffic between VLANs, see [“Multicast Forwarding at Layer 3 in a Junos Fusion Data Center with EVPN” on page 992](#).

#### Related Documentation

- [Understanding Multicast Replication in a Junos Fusion on page 1014](#)
- [Ingress Replication at the Aggregation Device to Satellite Devices on page 1020](#)
- [Configuring Egress \(Local\) Replication on a Junos Fusion on page 1029](#)
- [Multicast Forwarding at Layer 3 in a Junos Fusion Data Center with EVPN on page 992](#)

## Configuring Egress (Local) Replication on a Junos Fusion

By default, egress replication (also called *local replication*) for multi-destination traffic is disabled, and Junos Fusion uses ingress replication on the access side. When you enable local replication, the feature is activated for all satellite devices that are connected to the aggregation device. You cannot enable local replication for just a few selected satellite devices, specific bridge domains, or specific route prefixes.

To enable local replication on the satellite devices, configure the [local-replication](#) statement at the `[edit forwarding-options satellite]` hierarchy level.

```
[edit forwarding-options satellite]
user@router1# set local-replication
```

The `show multicast summary satellite` operational command displays **Egress replication: Enabled** when this feature is configured.

See [“Understanding Multicast Replication in a Junos Fusion” on page 1014](#) for an overview of Junos Fusion multicast replication and the limitations to enabling this feature. Some Junos OS protocol and traffic management features are not supported with egress

replication, and you should not plan to configure local replication if you want to use those features.

For full details on how multicast traffic is forwarded in a Junos Fusion Data Center with EVPN, which uses 802.1BR ECIDs in conjunction with multidestination traffic forwarding elements of EVPN networks, see [“Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN” on page 999](#).

#### Related Documentation

- [Ingress Replication at the Aggregation Device to Satellite Devices on page 1020](#)
- [Egress \(Local\) Replication on the Satellite Devices on page 1023](#)
- [Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN on page 999](#)
- [Monitoring Layer 2 Multicast Forwarding in a Junos Fusion Data Center with EVPN on page 1030](#)

## Monitoring Layer 2 Multicast Forwarding in a Junos Fusion Data Center with EVPN

This topic summarizes the CLI commands you can use to inspect multicast forwarding and VLAN flooding information in a Junos Fusion Data Center with EVPN.

- [Viewing EVPN Type 3 \(Inclusive Multicast Ethernet Tag \[IMET\]\) Routes for Configured VLANs on page 1030](#)
- [Checking Designated Forwarder Status of an Aggregation Device on page 1031](#)
- [Viewing Advertised EVPN Type 7 \(IGMP Join Sync\) and Type 8 \(IGMP Leave Sync\) Routes on page 1032](#)
- [Viewing Layer 2 Multicast Routes for Destination Extended Ports on Satellite Devices on page 1033](#)
- [Viewing Satellite Device Multicast Next-Hop Information on page 1034](#)
- [Viewing VLAN Flood Routes on page 1035](#)

### Viewing EVPN Type 3 (Inclusive Multicast Ethernet Tag [IMET]) Routes for Configured VLANs

Aggregation devices in a Junos Fusion Data Center with EVPN use BGP EVPN Type 3 routes to establish a core multicast replication tree for each configured VLAN.

You can use the **show route table** CLI command for the `bgp.evpn.0` routing table and filter the output for Type 3 entries to view the advertised IMET routes for different VLANs. The following sample output shows Type 3 routes, which include a route distinguisher for the EVPN instance, the VLAN ID, and keyword IM identifying this as an IMET route.

```
user@fusion-dc-ad1> show route table bgp.evpn.0 | find ^3
3:10.2.2.22:1::100::10.2.2.22/248 IM
    *[BGP/170] 00:24:32, localpref 100, from 10.2.2.22
    AS path: I, validation-state: unverified
    > to 10.1.12.2 via et-0/0/1.0
    to 10.0.12.2 via et-0/0/11.0
3:10.2.2.22:1::101::10.2.2.22/248 IM
    *[BGP/170] 00:24:32, localpref 100, from 10.2.2.22
```

```

AS path: I, validation-state: unverified
> to 10.1.12.2 via et-0/0/1.0
  to 10.0.12.2 via et-0/0/11.0
3:10.2.2.22:1::102::10.2.2.22/248 IM
*[BGP/170] 00:24:32, localpref 100, from 10.2.2.22
AS path: I, validation-state: unverified
> to 10.1.12.2 via et-0/0/1.0
  to 10.0.12.2 via et-0/0/11.0

```

## Checking Designated Forwarder Status of an Aggregation Device

In an EVPN fabric with multihoming, a designated forwarder (DF) is assigned to each ES so only one device forwards traffic to that ES, which eliminates duplicate traffic and prevents traffic loops.

In a Junos Fusion Data Center with EVPN, when local replication is not enabled, aggregation devices employ the EVPN DF election method that relies on BGP convergence to determine the DF for a given ES and VLAN. You can use the **show evpn instance** CLI command on an aggregation device to see the elected DF for each extended port ES when local replication is not enabled. In the extensive output section for each extended port ESI, the **Designated forwarder** field shows the IP address of the DF aggregation device.

The following command finds the ES details section of the output from the **show evpn instance extensive** command. The sample output highlights the ESI value for the extended port, the interface name mapping for the ES, and the elected DF for the ES:

```
user@ad-2> show evpn instance extensive | find "ethernet segments"
```

```

Number of ethernet segments: 17
...
ESI: 03:44:aa:50:b1:40:00:64:0f:00
Status: Resolved by IFL xe-100/0/15:0.0
Local interface: xe-100/0/15:0.0, Status: Up/Forwarding
Number of remote PEs connected: 3
  Remote PE      MAC label  Aliasing label  Mode
  192.168.1.11   100        0                all-active
  192.168.4.44   100        0                all-active
  192.168.2.22   100        0                all-active
DF Election Algorithm: MOD based
Designated forwarder: 192.168.1.11
Backup forwarder: 192.168.2.22
Backup forwarder: 192.168.3.33
Backup forwarder: 192.168.4.44
Last designated forwarder update: Sep 06 15:06:10
ESI: 03:7c:e2:ca:0f:4b:00:65:1b:00
Status: Resolved by IFL xe-101/0/27.0
Local interface: xe-101/0/27.0, Status: Up/Forwarding
Number of remote PEs connected: 3
  Remote PE      MAC label  Aliasing label  Mode
  192.168.4.44   0          0                all-active
  192.168.2.22   0          0                all-active
  192.168.1.11   0          0                all-active
---(more 52%)---[abort]

{master:0}
user@ad-2>

```

When local replication is enabled, DF election is at the granularity of the satellite devices rather than for every extended port ES. Each satellite device elects a DF based on Junos Fusion connectivity information maintained between the aggregation devices and satellite devices using the IEEE 802.1BR protocol. You can use the `show chassis satellite interface` CLI command on an aggregation device to view its designated forwarder (DF) role—DF or non-DF—for each satellite device interface. In the following example, aggregation device **ad-2** is the DF for satellite device ID 102 and is not the DF for satellite device IDs 100 or 101.

```
user@ad-2> show chassis satellite interface
```

Interface	State	Type	DF-Role
et-0/0/10	Up	Cascade	NA
et-0/0/6	Up	Cascade	NA
et-0/0/9	Up	Cascade	NA
lo0	Up	Loopback	NA
sd-100/0/0	Up	Satellite	<b>NON-DF</b>
sd-101/0/0	Up	Satellite	<b>NON-DF</b>
sd-102/0/0	Up	Satellite	<b>DF</b>
...			

## Viewing Advertised EVPN Type 7 (IGMP Join Sync) and Type 8 (IGMP Leave Sync) Routes

The aggregation devices in a Junos Fusion Data Center with EVPN use Type 7 (IGMP Join Sync) and Type 8 (IGMP Leave Sync) routes to synchronize the IGMP state learned from IGMP snooping.

You can use the `show route table` CLI command for the `bgp.evpn.0` routing table and filter the output for Type 7 or Type 8 entries to view the advertised IGMP Join Sync and IGMP Leave Sync routes for different VLANs.

For example, the following sample output shows Type 7 routes, which include a route distinguisher in the prefix for the EVPN instance, the ESI (highlighted), and the BGP next-hop.

```
user@fusion-dc-ad1> show route table bgp.evpn.0 | find ^7
```

```
7:10.3.3.3:0::039ccc83f0f160650000::1::233.252.0.1::10.3.3.3/600
    * [BGP/170] 20:23:14, localpref 100, from 3.3.3.3
    AS path: I, validation-state: unverified
    > to 10.0.23.2 via et-0/0/5.0
7:10.3.3.3:0::039ccc83f0f160650000::2::233.252.0.1::10.3.3.3/600
    * [BGP/170] 20:23:14, localpref 100, from 3.3.3.3
    AS path: I, validation-state: unverified
    > to 10.0.23.2 via et-0/0/5.0
7:10.3.3.3:0::039ccc83f0f160650000::3::233.252.0.1::10.3.3.3/600
    * [BGP/170] 20:23:14, localpref 100, from 10.3.3.3
```

```
AS path: I, validation-state: unverified
...
```

## Viewing Layer 2 Multicast Routes for Destination Extended Ports on Satellite Devices

The aggregation devices in a Junos Fusion Data Center with EVPN create satellite device next-hop chains to multicast destination extended ports through the corresponding satellite devices.

You can use the `show multicast snooping route satellite` CLI command to view Layer 2 multicast routes with IGMP snooping for destination ports on satellite devices. The next-hop ID is listed as the original **NH Index** for ingress replication towards the satellite devices, and when local replication is enabled, each entry also lists the for the satellite device next-hop chain ID as the **Linked NH Index** (highlighted in the sample below).

The following sample command displays satellite device destination extended port routes in multicast group 233.252.0.1 with local replication enabled:

```
user@ad-2> show multicast snooping route satellite group 233.252.0.1
```

```
Route: 00.02.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
  Bridge Domain: v1
  NH Index: 2101168
  Linked NH Index: 2101169
Route: 00.03.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
  Bridge Domain: v10
  NH Index: 2100167
  Linked NH Index: 2100671
Route: 00.04.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
  Bridge Domain: v100
  NH Index: 2100257
  Linked NH Index: 2100761
Route: 00.06.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
  Bridge Domain: v101
  NH Index: 2099153
  Linked NH Index: 2099155
...
```

The following sample command uses the detail option for a given multicast group (233.252.0.1) and VLAN (v1 from the brief output of the previous sample command). The **detail** output shows ingress replication next hops, satellite next hops for local replication, and EVPN-VXLAN core tunnel details:

```
user@ad-2> show multicast snooping route satellite group 233.252.0.1 vlan-name v1 detail
```

```
-----VSwitch Instance: default-switch-----
Route: 00.02.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
  Bridge Domain: v1
  Next-hop information:
```

```

2101168                                     <<< Original ingress replication
NH Index details
  aggregation-device:
    ->1767 xe-0/0/12:2.0
  satellite-device-id 101:                 <<< Satellite device port for
ingress replication
  ->6226 xe-101/2/0.0
  ->6227 xe-101/2/1.0
  EVPN VXLAN Core:                         <<< EVPN Core VXLAN tunnel
details
  2097156
    ->4808 VXLAN RVTEP: 10.4.4.4
    ->4812 VXLAN RVTEP: 10.3.3.3
    ->9813 VXLAN RVTEP: 10.1.1.1
  MRouter:
    2099159
      aggregation-device:
        ->1766 xe-0/0/12:1.0
2101169                                     <<< Satellite device Linked NH
Index details
  aggregation-device:
    ->1767 xe-0/0/12:2.0
  satellite-device-id 101:
    ->7555 sd-101/0/0.32770 label=4097 <<< Satellite device virtual
interface for local replication
  EVPN VXLAN Core:                         <<< EVPN Core VXLAN tunnel
details
  2097156
    ->4808 VXLAN RVTEP: 10.4.4.4
    ->4812 VXLAN RVTEP: 10.3.3.3
    ->9813 VXLAN RVTEP: 10.1.1.1
  MRouter:
    2099159
      aggregation-device:
        ->1766 xe-0/0/12:1.0
...

```

## Viewing Satellite Device Multicast Next-Hop Information

You can use the `show multicast snooping next-hops satellite` CLI command to see a list of multicast next hops for satellite device destinations or details on a given satellite device next-hop entry. Satellite device composite next hops for extended port multicast destinations that are resolved to their corresponding satellite device virtual interfaces have the keyword SAT in the **Flags** output field. Specifying the **detail** option for a given next-hop ID additionally lists the corresponding ECID in the **label** output field, and the **extensive** option includes a timeline of the events contributing to any satellite device next-hop entry updates.

```
user@ad-2> show multicast snooping next-hops satellite
```

Next-hop ID	Forwarding Next-Hop Type	Table	Flags
2097150	COMPOSITE	inet.0	
2097151	COMPOSITE	inet.0	
2097154	COMPOSITE	inet.0	



```

2097156    COMPOSITE    inet.0
2097158    COMPOSITE    inet.0
2097159    COMPOSITE    inet.0
2097160    COMPOSITE    inet.0
2097161    COMPOSITE    inet.0
2097162    COMPOSITE    inet.0
2097163    COMPOSITE    inet.0
2097164    COMPOSITE    inet.0
2097165    COMPOSITE    inet.0
2097166    COMPOSITE    inet.0
...
...
2099155    COMPOSITE    inet.0          SAT
2099156    COMPOSITE    inet.0
2099158    COMPOSITE    inet.0
2099159    COMPOSITE    inet.0
2099160    COMPOSITE    inet.0
2099161    COMPOSITE    inet.0
2099162    COMPOSITE    inet.0
2099163    COMPOSITE    inet.0          SAT
2099164    COMPOSITE    inet.0
2099165    COMPOSITE    inet.0          SAT

```

```
user@ad-2> show multicast snooping next-hops satellite nexthop-id 2101169 detail
```

Next-hop ID	Forwarding Next-Hop Type	Table	Flags
2101169	COMPOSITE	inet.0	SAT

```

aggregation-device:
->1767 xe-0/0/12:2.0
satellite-device-id 101:
->7555 sd-101/0/0.32770 label=4097
EVPN VXLAN Core:
2097156
->4808 VXLAN RVTEP: 10.4.4.4
->4812 VXLAN RVTEP: 10.3.3.3
->9813 VXLAN RVTEP: 10.1.1.1
MRouter:
2099159
aggregation-device:
->1766 xe-0/0/12:1.0
Linked Next-hop: 2101168

```

## Viewing VLAN Flood Routes

You can use the following CLI commands to view the same information for VLAN flood satellite device routes and next-hop details that is available for multicast routes.

- **show ethernet-switching flood satellite** —View satellite device destination flood routes. The second route of the three control-plane routes is of most interest to you in this Junos Fusion Data Center with EVPN-VXLAN architecture because it contains all relevant next-hop information. **NhIndex** refers to next hops without local replication enabled—it shows ingress replication. **Satellite-Nh** refers to next hops with local replication enabled.

```
user@ad-2> show ethernet-switching flood satellite
```

```
VSwitch instance: default-switch
----- Vlan: default -----
Flood Routes:
Prefix          Token          NhIndex      Satellite-Nh
00.03.00.00.60.04.c0/51  0x30026      2010        2045
00.03.00.01.60.01.e0/51  0x3000F      1984        2044 <<< CE-facing
interface
00.03.ff.fe.60.00.20/51  0x30001      1983        2043
----- Vlan: VLAN800 -----
Flood Routes:
Prefix          Token          NhIndex      Satellite-Nh
00.04.00.01.60.04.e0/51  0x30027      2012        2048
00.04.00.01.60.02.00/51  0x30010      1987        2047 <<< CE-facing
interface
00.04.ff.fe.60.00.40/51  0x30002      1986        2046
```

- **show ethernet-switching flood satellite vlan-name *vlan* detail**—View details (expanded next-hop chains) for satellite device destination flood routes for a given VLAN, including EVPN core next hops.

This sample output shows the original next-hop chain (**NhIndex** 1984) and satellite next-hop chain (**Satellite-Nh** 2044) with corresponding assigned ECID labels representing destination extended ports on each satellite device.

```
user@ad-2> show ethernet-switching flood satellite vlan-name v100 detail
```

```
VSwitch instance: default-switch
----- Vlan: v100 -----
...
Flood route prefix      Token
00.03.00.01.60.01.e0/51 0x3000F
Next-hop information:
1984                      <<< Ingress replication NH
Index details
->1982                    <<< EVPN Core next hops
->1922 VXLAN RVTEP: 10.3.3.33
->1918 VXLAN RVTEP: 10.2.2.22
->1956 VXLAN RVTEP: 10.4.4.44
->2009                    <<< CE-facing next hops
satellite-device-id 100:
->1959 xe-100/0/15:0.0
satellite-device-id 101:
->1988 xe-101/0/27.0
2044                      <<< Local replication NH Index
details
->1982                    <<< Composite next hop for the
EVPN Core
->1922 VXLAN RVTEP: 10.3.3.33
->1918 VXLAN RVTEP: 10.2.2.22
->1956 VXLAN RVTEP: 10.4.4.44
->2032
satellite-device-id 100:
->2031 sd-100/0/0.32770 label=4097 <<< Next-hop interfaces
are sd-<vlan> extended-port interfaces
satellite-device-id 101:
```

```

->2077 sd-101/0/0.32770 label=4098 <<< Label = Egress ECID
for multicast
...

```

- [show ethernet-switching flood next-hops satellite](#)—View EVPN flood next-hop entries for the EVPN core (**Composite function** is FLOOD\_ALL and **Flags** field is VENH for VXLAN encapsulation next hop).

```
user@ad-2> show ethernet-switching flood next-hops satellite
```

Next-hop ID	Composite function	Table	Flags
1761	VXLAN_CORE_ENCAP	vp1s.4	<<< VXLAN
encapsulation next hop toward a given aggregation device			
1897	FLOOD_ALL	vp1s.4	VENH
1898	FLOOD_ALL	vp1s.4	
1899	FLOOD_ALL	vp1s.4	VENH
1900	FLOOD_ALL	vp1s.4	
1901	FLOOD_ALL	vp1s.4	VENH
1902	FLOOD_ALL	vp1s.4	
1903	FLOOD_ALL	vp1s.4	VENH
1904	FLOOD_ALL	vp1s.4	

#### Related Documentation

- [Multicast Forwarding at Layer 2 in a Junos Fusion Data Center with EVPN on page 999](#)
- [Understanding EVPN in a Junos Fusion Data Center on page 26](#)
- [Understanding Multicast Replication in a Junos Fusion on page 1014](#)
- [Ingress Replication at the Aggregation Device to Satellite Devices on page 1020](#)
- [Egress \(Local\) Replication on the Satellite Devices on page 1023](#)

## local-replication

---

<b>Syntax</b>	local-replication
<b>Hierarchy Level</b>	[edit forwarding-options satellite]
<b>Release Information</b>	Statement introduced in Junos OS Release 16.1. Statement introduced in Junos OS Release 17.1R1 for Junos Fusion Data Center.
<b>Description</b>	Enables multicast replication on all the satellite devices that are connected to the aggregation device. You cannot selectively enable local replication for specific satellite devices, bridge domains, or route prefixes.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Egress (Local) Replication on a Junos Fusion on page 1029</a></li></ul>

## show ethernet-switching flood

<b>Syntax</b>	<pre>show ethernet-switching flood &lt;brief   detail   extensive&gt; &lt;event-queue&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system <i>logical-system-name</i>&gt; &lt;route (all-ce-flood   all ve-flood   alt-root-flood   bd-flood   mlp-flood   re-flood)&gt; &lt;vlan-name <i>vlan-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 12.3R2.</p> <p>Command introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>Command introduced in Junos OS Release 17.4R1 for QFX Series switches.</p>
<b>Description</b>	(EX Series switches and QFX Series switches only) Display Ethernet-switching flooding information.
<b>Options</b>	<p><b>none</b>—Display all Ethernet-switching flooding information for all VLANs.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>event-queue</b>—(Optional) Display the queue of pending Ethernet-switching flood events.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display Ethernet-switching flooding information for the specified routing instance.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display Ethernet-switching flooding information for the specified logical system.</p> <p><b>route (all-ce-flood   all ve-flood   alt-root-flood   bd-flood   mlp-flood   re-flood)</b>—(Optional) Display the following:</p> <ul style="list-style-type: none"> <li>• <b>all-ce-flood</b>—Display the route for flooding traffic to all customer edge routers or switches if <b>no-local-switching</b> is enabled.</li> <li>• <b>all-ve-flood</b>—Display the route for flooding traffic to all VPLS edge routers or switches if <b>no-local-switching</b> is enabled.</li> <li>• <b>alt-root-flood</b>—Display the Spanning Tree Protocol (STP) alt-root flooding route used for the interface.</li> <li>• <b>bd-flood</b>—Display the route for flooding traffic of a VLAN if <b>no-local-switching</b> is not enabled.</li> <li>• <b>mlp-flood</b>—Display the route for flooding traffic to MAC learning chips.</li> <li>• <b>re-flood</b>—Display the route for Routing Engine flooding to all interfaces.</li> </ul> <p><b>vlan-name <i>vlan-name</i></b>—(Optional) Display Ethernet-switching flooding information for the specified VLAN.</p>

**Required Privilege Level** view

**List of Sample Output** [show ethernet-switching flood on page 1040](#)  
[show ethernet-switching flood brief on page 1040](#)  
[show ethernet-switching flood detail on page 1040](#)  
[show ethernet-switching flood extensive on page 1041](#)  
[show ethernet-switching flood extensive \(Junos Fusion Data Center with EVPN\) on page 1043](#)

## Sample Output

### show ethernet-switching flood

```
user@host> show ethernet-switching flood

Name: __juniper_private1__
CEs: 0
VEs: 0
Name: default-switch
CEs: 9
VEs: 0
VLAN Name: VLAN101
Flood Routes:
  Prefix    Type      Owner      NhType      NhIndex
  0x3057b/51 FLOOD_GRP_COMP_NH __all_ces__ comp        12866
  0x30004/51 FLOOD_GRP_COMP_NH __re_flood__ comp        12863
VLAN Name: VLAN102
Flood Routes:
  Prefix    Type      Owner      NhType      NhIndex
  0x3057c/51 FLOOD_GRP_COMP_NH __all_ces__ comp        12875
  0x30005/51 FLOOD_GRP_COMP_NH __re_flood__ comp        12872
VLAN Name: VLAN103
Flood Routes:
  Prefix    Type      Owner      NhType      NhIndex
  0x3057d/51 FLOOD_GRP_COMP_NH __all_ces__ comp        12884
  0x30006/51 FLOOD_GRP_COMP_NH __re_flood__ comp        12881
```

### show ethernet-switching flood brief

```
user@host> show ethernet-switching flood brief

Name                Active CEs      Active VEs
__juniper_private1__ 0                0
default-switch       9                0
```

### show ethernet-switching flood detail

```
user@host> show ethernet-switching flood detail

Name: __juniper_private1__
CEs: 0
VEs: 0
Name: default-switch
CEs: 9
VEs: 0
VLAN Name: VLAN101
Flood Routes:
```

Prefix	Type	Owner	NhType	NhIndex
0x3057b/51	FLOOD_GRP_COMP_NH	__all_ces__	comp	12866
0x30004/51	FLOOD_GRP_COMP_NH	__re_flood__	comp	12863

VLAN Name: VLAN102

Flood Routes:

Prefix	Type	Owner	NhType	NhIndex
0x3057c/51	FLOOD_GRP_COMP_NH	__all_ces__	comp	12875
0x30005/51	FLOOD_GRP_COMP_NH	__re_flood__	comp	12872

VLAN Name: VLAN103

Flood Routes:

Prefix	Type	Owner	NhType	NhIndex
0x3057d/51	FLOOD_GRP_COMP_NH	__all_ces__	comp	12884
0x30006/51	FLOOD_GRP_COMP_NH	__re_flood__	comp	12881

### show ethernet-switching flood extensive

```
user@host> show ethernet-switching flood extensive
```

```
Name: __juniper_private1__
CEs: 0
VEs: 0
Name: default-switch
CEs: 9
VEs: 0
VLAN Name: VLAN101
  Flood route prefix: 0x3057b/51
  Flood route type: FLOOD_GRP_COMP_NH
  Flood route owner: __all_ces__
  Flood group name: __all_ces__
  Flood group index: 1
  Nexthop type: comp
  Nexthop index: 12866
  Flooding to:
    Name      Type      NhType      Index
    __all_ces__ Group      comp        12860
    Composition: split-horizon
  Flooding to:
    Name      Type      NhType      Index
    ae20.0    CE        ucst        7605

  Flood route prefix: 0x30004/51
  Flood route type: FLOOD_GRP_COMP_NH
  Flood route owner: __re_flood__
  Flood group name: __re_flood__
  Flood group index: 65534
  Nexthop type: comp
  Nexthop index: 12863
  Flooding to:
    Name      Type      NhType      Index
    __all_ces__ Group      comp        12860
    Composition: split-horizon
  Flooding to:
    Name      Type      NhType      Index
    ae20.0    CE        ucst        7605

VLAN Name: VLAN102

  Flood route prefix: 0x3057c/51
  Flood route type: FLOOD_GRP_COMP_NH
  Flood route owner: __all_ces__
  Flood group name: __all_ces__
```

```

Flood group index: 1
Nexthop type: comp
Nexthop index: 12875
Flooding to:
  Name      Type      NhType      Index
  __all_ces__ Group      comp      12869
  Composition: split-horizon
  Flooding to:
    Name      Type      NhType      Index
    ae20.0      CE      ucst      7605

Flood route prefix: 0x30005/51
Flood route type: FLOOD_GRP_COMP_NH
Flood route owner: __re_flood__
Flood group name: __re_flood__
Flood group index: 65534
Nexthop type: comp
Nexthop index: 12872
Flooding to:
  Name      Type      NhType      Index
  __all_ces__ Group      comp      12869
  Composition: split-horizon
  Flooding to:
    Name      Type      NhType      Index
    ae20.0      CE      ucst      7605
VLAN Name: VLAN103

Flood route prefix: 0x3057d/51
Flood route type: FLOOD_GRP_COMP_NH
Flood route owner: __all_ces__
Flood group name: __all_ces__
Flood group index: 1
Nexthop type: comp
Nexthop index: 12884
Flooding to:
  Name      Type      NhType      Index
  __all_ces__ Group      comp      12878
  Composition: split-horizon
  Flooding to:
    Name      Type      NhType      Index
    ae20.0      CE      ucst      7605

Flood route prefix: 0x30006/51
Flood route type: FLOOD_GRP_COMP_NH
Flood route owner: __re_flood__
Flood group name: __re_flood__
Flood group index: 65534
Nexthop type: comp
Nexthop index: 12881
Flooding to:
  Name      Type      NhType      Index
  __all_ces__ Group      comp      12878
  Composition: split-horizon
  Flooding to:
    Name      Type      NhType      Index
    ae20.0      CE      ucst      7605
VLAN Name: VLAN104

```



## show ethernet-switching flood extensive (Junos Fusion Data Center with EVPN)

```
user@host> show ethernet-switching flood extensive
```

```
Name: __juniper_private1__
```

```
CEs: 0
```

```
VEs: 0
```

```
Name: default-switch
```

```
CEs: 3
```

```
VEs: 3
```

```
VLAN Name: v100
```

```
Flood route prefix: 0x3001b/51
```

```
Flood route type: FLOOD_GRP_COMP_NH
```

```
Flood route owner: __ves__
```

```
Flood group name: __ves__
```

```
Flood group index: 0
```

```
Nexthop type: comp
```

```
Nexthop index: 1946
```

```
Flooding to:
```

Name	Type	NhType	Index
__all_ces__	Group	comp	1945

```
Composition: split-horizon
```

```
Flooding to:
```

Name	Type	NhType	Index
ae0.0	CE	ucst	1886

```
Flood route prefix: 0x3000f/51
```

```
Flood route type: FLOOD_GRP_COMP_NH
```

```
Flood route owner: __all_ces__
```

```
Flood group name: __all_ces__
```

```
Flood group index: 1
```

```
Nexthop type: comp
```

```
Nexthop index: 1905
```

```
Flooding to:
```

Name	Type	NhType	Index
__ves__	Group	comp	1971

```
Composition: flood-to-all
```

```
Flooding to:
```

Name	Type	NhType	Index
vtep.32769	CORE_FACING	venh	1917
vtep.32770	CORE_FACING	venh	1918
vtep.32771	CORE_FACING	venh	1923

```
Flooding to:
```

Name	Type	NhType	Index
__all_ces__	Group	comp	1945

```
Composition: split-horizon
```

```
Flooding to:
```

Name	Type	NhType	Index
ae0.0	CE	ucst	1886

```
Flood route prefix: 0x30001/51
```

```
Flood route type: FLOOD_GRP_COMP_NH
```

```
Flood route owner: __re_flood__
```

```
Flood group name: __re_flood__
```

```
Flood group index: 65534
```

```
Nexthop type: comp
```

Name	Type	NhType	Index
vtep.32769	CORE_FACING	venh	1917
vtep.32770	CORE_FACING	venh	1918
vtep.32771	CORE_FACING	venh	1923

```
Flooding to:
Name      Type      NhType      Index
__all_ces__ Group      comp        1907
Composition: split-horizon
Flooding to:
Name      Type      NhType      Index
ae12.0     CE        ucst        1681

Flood route prefix: 0x30006/51
Flood route type: FLOOD_GRP_COMP_NH
Flood route owner: __re_flood__
Flood group name: __re_flood__
Flood group index: 65534
Nexthop type: comp
Nexthop index: 1891
Flooding to:
Name      Type      NhType      Index
__ves__   Group      comp        1961
Composition: flood-to-all
Flooding to:
Name      Type      NhType      Index
vtep.32769 CORE_FACING venh        1917
vtep.32770 CORE_FACING venh        1918
vtep.32771 CORE_FACING venh        1923
Flooding to:
Name      Type      NhType      Index
__all_ces__ Group      comp        1907
Composition: split-horizon
Flooding to:
Name      Type      NhType      Index
ae12.0     CE        ucst        1681

...
```

## show ethernet-switching flood next-hops satellite

<b>Syntax</b>	<pre>show ethernet-switching flood next-hops satellite &lt;brief   detail   extensive&gt; &lt;nexthop-id <i>nexthop-id</i>&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Display VLAN flood next-hop information for satellite device destinations.</p> <p>You can use this command to:</p> <ul style="list-style-type: none"> <li>• View the current list of all flood traffic composite next hops.</li> <li>• See details about a specified composite next hop.</li> <li>• Follow aggregation device composite next-hop processing as the aggregation device resolves and updates composite next-hop table entries for extended port destinations.</li> </ul> <p>The aggregation device allocates ECID tags that represent multicast or broadcast destinations behind satellite device extended ports, associates them with the corresponding satellite device virtual interfaces (<b><i>sd-fpc-id/0/0</i></b>), and updates flood next-hop table entries accordingly. More detailed output from this command shows events that result in next-hop table updates.</p>
<b>Options</b>	<p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output. The default output level is <b>brief</b>.</p> <p><b>nexthop-id <i>nexthop-id</i></b>—Display more detailed VLAN flooding next-hop information only for a specified next hop.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast Replication in a Junos Fusion on page 1014</a></li> <li>• <a href="#">Egress (Local) Replication on the Satellite Devices on page 1023</a></li> <li>• <a href="#">Monitoring Layer 2 Multicast Forwarding in a Junos Fusion Data Center with EVPN on page 1030</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show ethernet-switching flood next-hops satellite on page 1047</a></p> <p><a href="#">show ethernet-switching flood next-hops satellite (Junos Fusion Data Center with EVPN) on page 1047</a></p> <p><a href="#">show ethernet-switching flood next-hops satellite (detail view) on page 1047</a></p> <p><a href="#">show ethernet-switching flood next-hops satellite nexthop-id (extensive view for specified next hop) on page 1049</a></p>

**Output Fields** Table 47 on page 1046 lists the output fields for the **show ethernet-switching flood next-hops satellite** command. Output fields are listed in the approximate order in which they appear.

*Table 47: show ethernet-switching flood next-hops satellite Command Output Fields*

Field Name	Field Description	Level of Output
<b>Next-hop ID</b>	Next-hop ID for each next-hop entry displayed.	All
<b>Composite function</b>	Purpose of a composite next-hop entry. Values include: <ul style="list-style-type: none"> <li>FLOOD_ALL—Flood next hop.</li> <li>FLOOD_ALL_SPLIT_HZ—Flood next hop including split-horizon information.</li> <li>VXLAN_CORE_ENCAP—VXLAN encapsulation next hop for an aggregation device in a Junos Fusion Data Center with EVPN.</li> </ul>	All
<b>Table</b>	Name of next-hop routing or forwarding table for the listed entry.	All
<b>Flags</b>	Flags giving additional information about a next-hop entry. Values include: <ul style="list-style-type: none"> <li>SAT—The entry is a satellite destination composite next hop for an extended port destination that has been resolved and updated with the corresponding satellite device interface, <b>sd-fpc-id/0/0</b>, and the associated ECID shown in the <b>label</b> field.</li> <li>ST—The entry is stale and waiting to be refreshed.</li> <li>RU—The entry is stale, but is marked to be reused.</li> <li>VENH—The entry is a VXLAN encapsulation next hop for an aggregation device in a Junos Fusion Data Center with EVPN.</li> </ul>	All
<b>aggregation-device</b>	Next-hop IDs and corresponding interfaces to reach local flood destination ports on the aggregation device.	detail extensive
<b>satellite-device-id id</b>	Satellite device ID with the next-hop IDs and interface names to reach extended ports that are flood destinations on the listed satellite device.  When an ECID has been assigned to destination extended ports on a satellite device, this field lists the satellite next-hop ID, the corresponding virtual satellite device interface ( <b>sd-fpc-id/0/0</b> ), and the allocated ECID ( <b>label</b> field).	detail extensive
<b>label</b>	ECID associated with a group of flood destination extended ports on the satellite device specified in the <b>satellite-device-id</b> field.	detail extensive
<b>When</b>	Elapsed time since an event related to a flood next-hop entry change.	extensive

Table 47: *show ethernet-switching flood next-hops satellite Command Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Event</b>	Brief description of the event related to a flood next-hop entry change.	extensive
<b>Action</b>	Brief description of actions that resulted from the event.	extensive

## Sample Output

### show ethernet-switching flood next-hops satellite

```
user@host> show ethernet-switching flood next-hops satellite
```

Next-hop ID	Composite function	Table	Flags
1771	FLOOD_ALL_SPLIT_HZ	vp1s.6	
1772	FLOOD_ALL	vp1s.6	
1773	FLOOD_ALL	vp1s.6	
1779	FLOOD_ALL_SPLIT_HZ	vp1s.6	
1780	FLOOD_ALL	vp1s.6	
1781	FLOOD_ALL	vp1s.6	
1832	FLOOD_ALL_SPLIT_HZ	vp1s.6	SAT
1833	FLOOD_ALL	vp1s.6	SAT
1834	FLOOD_ALL	vp1s.6	SAT

### show ethernet-switching flood next-hops satellite (Junos Fusion Data Center with EVPN)

```
user@host> show ethernet-switching flood next-hops satellite
```

Next-hop ID	Composite function	Table	Flags
1761	VXLAN_CORE_ENCAP	vp1s.4	
1897	FLOOD_ALL	vp1s.4	VENH
1898	FLOOD_ALL	vp1s.4	
1899	FLOOD_ALL	vp1s.4	VENH
1900	FLOOD_ALL	vp1s.4	
1901	FLOOD_ALL	vp1s.4	VENH
1902	FLOOD_ALL	vp1s.4	
1903	FLOOD_ALL	vp1s.4	VENH
1904	FLOOD_ALL	vp1s.4	

### show ethernet-switching flood next-hops satellite (detail view)

```
user@host> show ethernet-switching flood next-hops satellite detail
```

Next-hop ID	Composite function	Table	Flags
1758	FLOOD_ALL_SPLIT_HZ	vp1s.6	
aggregation-device:			
->1742 et-0/0/32.0			
->1711 xe-0/0/28:0.0			
satellite-device-id 101:			
->1768 ae0.0			
satellite-device-id 106:			
->1768 ae0.0			
AE:			

```

->1768 ae0.0
1759      FLOOD_ALL          vpls.6
->1758
    aggregation-device:
      ->1742 et-0/0/32.0
      ->1711 xe-0/0/28:0.0
    satellite-device-id 101:
      ->1768 ae0.0
    satellite-device-id 106:
      ->1768 ae0.0
    AE:
      ->1768 ae0.0
1760      FLOOD_ALL          vpls.6
->1758
    aggregation-device:
      ->1742 et-0/0/32.0
      ->1711 xe-0/0/28:0.0
    satellite-device-id 101:
      ->1768 ae0.0
    satellite-device-id 106:
      ->1768 ae0.0
    AE:
      ->1768 ae0.0
1777      FLOOD_ALL_SPLIT_HZ vpls.6
    aggregation-device:
      ->1742 et-0/0/32.0
1778      FLOOD_ALL          vpls.6
->1777
    aggregation-device:
      ->1742 et-0/0/32.0
1779      FLOOD_ALL          vpls.6
->1777
    aggregation-device:
      ->1742 et-0/0/32.0
1783      FLOOD_ALL_SPLIT_HZ vpls.6          SAT
    aggregation-device:
      ->1742 et-0/0/32.0
      ->1711 xe-0/0/28:0.0
    satellite-device-id 101:
      ->1782 sd-101/0/0.32770 label=4099
    satellite-device-id 106:
      ->1784 sd-106/0/0.32770 label=4099
1785      FLOOD_ALL          vpls.6          SAT
->1783
    aggregation-device:
      ->1742 et-0/0/32.0
      ->1711 xe-0/0/28:0.0
    satellite-device-id 101:
      ->1782 sd-101/0/0.32770 label=4099
    satellite-device-id 106:
      ->1784 sd-106/0/0.32770 label=4099
1786      FLOOD_ALL          vpls.6          SAT
->1783
    aggregation-device:
      ->1742 et-0/0/32.0
      ->1711 xe-0/0/28:0.0
    satellite-device-id 101:
      ->1782 sd-101/0/0.32770 label=4099
    satellite-device-id 106:

```

```
->1784 sd-106/0/0.32770 label=4099
```

### show ethernet-switching flood next-hops satellite nexthop-id (extensive view for specified next hop)

```
user@host> show bridge flood next-hops satellite nexthop-id 1415 extensive
```

Next-hop ID	Composite function	Table	Flags
1415	FLOOD_ALL_SPLIT_HZ	default-switch	SAT
satellite-device-id 100:			
->612 sd-100/0/0.32770 label=4129			
satellite-device-id 103:			
->1080 sd-103/0/0.32770 label=4116			

When	Event	Action
02:05:35.90	Kernel update	op:2, cnh_id=0, len=712
02:05:35.90	Next-hop linking	Linked with nhid:962
02:05:35.90	Next-hop change	db entry change
		list[2]: {612 1080 }
2d 19:07:05.164	Next-hop linking	Linked with nhid:962
2d 19:07:05.164	KRT get	nhid=1415
2d 19:07:05.164	Kernel update	op:8, cnh_id=0, len=712
2d 19:07:05.161	Next-hop linking	Linked with nhid:962
2d 19:07:05.161	Next-hop add	nhid not yet available
		list[1]: {1080 }

## show ethernet-switching flood satellite

<b>Syntax</b>	<pre>show ethernet-switching flood satellite &lt;brief   detail   extensive&gt; &lt;vlan-name <i>vlan-name</i>&gt; &lt;vswitch-name <i>vswitch-name</i>&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Display VLAN flood routing information for the satellite devices in Junos Fusion Data Center.</p> <p>This command lists flood routes by route prefix for each VLAN. Each flood route prefix entry lists the ingress replication next-hop ID (<b>NhIndex</b>). When egress (local) replication is enabled and the VLAN has multiple destination extended ports on a satellite device, the aggregation device:</p> <ul style="list-style-type: none"> <li>Creates a satellite device next-hop chain to reach those destinations through their corresponding satellite devices.</li> <li>Updates the flood route entry with a satellite next-hop chain ID (<b>Satellite-Nh</b>).</li> </ul> <p>When a flood route does not have a satellite next-hop chain, the value <b>0</b> is displayed in the <b>Satellite-Nh</b> column. When the <b>Satellite-Nh</b> value is non-zero, the aggregation device uses the satellite next-hop chain instead of the original ingress replication next-hop (<b>NhIndex</b>). You can see satellite device flood next-hop chain details, including the ECIDs assigned to satellite device flood destination extended ports, using the <b>detail</b> option and the <b>vlan-name</b> option for a specific VLAN.</p>
<b>Options</b>	<p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>vlan-name <i>vlan-name</i></b>—Display VLAN flooding information for the specified VLAN.</p> <p><b>vswitch-name <i>vswitch-name</i></b>—Display VLAN flooding information for a specified <i>virtual</i> satellite device.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Understanding Multicast Replication in a Junos Fusion on page 1014</a></li> <li><a href="#">Egress (Local) Replication on the Satellite Devices on page 1023</a></li> <li><a href="#">Monitoring Layer 2 Multicast Forwarding in a Junos Fusion Data Center with EVPN on page 1030</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show ethernet-switching flood satellite on page 1052</a></p> <p><a href="#">show ethernet-switching flood satellite vlan-name (specific VLAN) on page 1052</a></p>



[show ethernet-switching flood satellite vlan-name \(detail view for specific VLAN\) on page 1052](#)

[show ethernet-switching flood satellite vlan-name \(detail view for specific VLAN in Junos Fusion Data Center with EVPN\) on page 1053](#)

[show ethernet-switching flood satellite \(extensive view\) on page 1054](#)

**Output Fields** Table 48 on page 1051 lists the output fields for the **show ethernet-switching flood satellite** command. Output fields are listed in the approximate order in which they appear, although the display order varies between the different levels of output.

*Table 48: show ethernet-switching flood satellite Command Output Fields*

Field Name	Field Description	Level of Output
<b>Vlan</b>	VLAN name.	All
<b>Flood Routes</b>	Flood route information listed by route prefix.  If aggregation devices are deployed in a Junos Fusion Data Center with an EVPN-VXLAN architecture, the middle route of 3 routes is the route for the CE-facing interface. This route entry is likely to be of most interest because it contains all relevant next-hop information.	All
<b>Prefix</b>	Flood route prefix.	All
<b>Token</b>	Internal ID for flood route prefix.	All
<b>NhIndex</b>	The ingress replication next-hop for the flood route.	All
<b>Satellite-Nh</b>	Satellite device next-hop ID when local replication is enabled and there are multiple flood destination extended ports.	All
<b>Next-hop information</b>	Details for each next hop, listed by next-hop or satellite next-hop ID.	detail extensive
<b>aggregation-device</b>	Next-hop interfaces for ports that are flood destinations on the aggregation device, listed by next-hop ID.	detail extensive
<b>VXLAN RVTEP</b>	Appears only if aggregation devices are deployed in a Junos Fusion Data Center with an EVPN-VXLAN architecture.  IP addresses of remote aggregation devices that function as virtual tunnel endpoints (VTEPs) in Junos Fusion Data Center.	detail extensive
<b>satellite-device-id id</b>	Next-hop interfaces for extended ports that are flood destinations on satellite devices, listed by satellite next-hop ID.	detail extensive
<b>label</b>	ECID assigned to a satellite device interface.	detail extensive

Table 48: show ethernet-switching flood satellite Command Output Fields (continued)

Field Name	Field Description	Level of Output
<b>When</b>	Elapsed time since an event related to a flood route entry change.	extensive
<b>Event</b>	Brief description of the event related to a flood route entry change.	extensive
<b>Action</b>	Brief description of actions that resulted from the event.	extensive

## Sample Output

### show ethernet-switching flood satellite

```

user@host> show ethernet-switching flood satellite

VSwitch instance: default-switch
----- Vlan: default -----
Flood Routes:
Prefix          Token          NhIndex      Satellite-Nh
00.03.00.00.60.04.c0/51  0x30026      2010        2045
00.03.00.01.60.01.e0/51  0x3000F      1984        2044
00.03.ff.fe.60.00.20/51  0x30001      1983        2043
----- Vlan: VLAN800 -----
Flood Routes:
Prefix          Token          NhIndex      Satellite-Nh
00.04.00.01.60.04.e0/51  0x30027      2012        2048
00.04.00.01.60.002.00/51  0x30010      1987        2047
00.04.ff.fe.60.00.40/51  0x30002      1986        2046

```

### show ethernet-switching flood satellite vlan-name (specific VLAN)

```

user@host> show ethernet-switching flood satellite vlan-name VLAN100

VSwitch instance: default-switch
----- Vlan: VLAN100 -----
Flood Routes:
Prefix          Token          NhIndex      Satellite-Nh
00.15.00.01.60.06.40/51  0x30032      968         1553
00.15.ff.fe.60.02.80/51  0x30014      965         1550

```

### show ethernet-switching flood satellite vlan-name (detail view for specific VLAN)

This sample output shows the original next-hop chain (**NhIndex** 968) and satellite next-hop chain (**Satellite-Nh** 1553) with corresponding assigned ECID labels representing destination extended ports on each satellite device.

```

user@host> show ethernet-switching flood satellite vlan-name VLAN100 detail

VSwitch instance: default-switch
----- Vlan: VLAN100 -----

```

```

Flood route prefix      Token
00.15.00.01.60.06.40/51 0x30032
  Next-hop information:
    968
    ->962
      satellite-device-id 100:
        ->610 xe-100/0/6.0
        ->611 xe-100/0/7.0
      satellite-device-id 103:
        ->682 xe-103/0/30.0
        ->683 xe-103/0/31.0
        ->684 xe-103/0/32.0
        ->685 xe-103/0/33.0
        ->686 xe-103/0/34.0
        ->687 xe-103/0/35.0
    1553
    ->1415
      satellite-device-id 100:
        ->612 sd-100/0/0.32770 label=4129
      satellite-device-id 103:
        ->1080 sd-103/0/0.32770 label=4116

```

#### show ethernet-switching flood satellite vlan-name (detail view for specific VLAN in Junos Fusion Data Center with EVPN)

This sample output shows the original next-hop chain (**NhIndex** 1984) and satellite next-hop chain (**Satellite-Nh** 2044) with corresponding assigned ECID labels representing destination extended ports on each satellite device.

```
user@host> show ethernet-switching flood satellite vlan-name v100 detail
```

```

VSwitch instance: default-switch
----- Vlan: v100 -----
...
Flood route prefix      Token
00.03.00.01.60.01.e0/51 0x3000F
  Next-hop information:
    1984
    ->1982
      ->1922 VXLAN RVTEP: 10.3.3.33
      ->1918 VXLAN RVTEP: 10.2.2.22
      ->1956 VXLAN RVTEP: 10.4.4.44
    ->2009
      satellite-device-id 100:
        ->1959 xe-100/0/15:0.0
      satellite-device-id 101:
        ->1988 xe-101/0/27.0
    2044
    ->1982
      ->1922 VXLAN RVTEP: 10.3.3.33
      ->1918 VXLAN RVTEP: 10.2.2.22
      ->1956 VXLAN RVTEP: 10.4.4.44
    ->2032
      satellite-device-id 100:
        ->2031 sd-100/0/0.32770 label=4097
      satellite-device-id 101:
        ->2077 sd-101/0/0.32770 label=4098
...

```

**show ethernet-switching flood satellite (extensive view)**

user@host&gt; show ethernet-switching flood satellite extensive

```

VSwitch instance: default-switch
----- Vlan: default -----
  Flood route prefix      Token      Flags
  00.02.00.01.60.00.40/51  0x30002

When      Event      Action
01:37:48.666  Processing Translate Q      Processing rte: op:1
                                Deferring translation
01:37:46.117  Add to Translate Q      Orig: rte added to translate queue for op: 1
01:37:46.117  Route add      Adding Orig route with nhid:1772
    Next-hop information:
      1772
      ->1771
      aggregation-device:
        ->1708 et-0/0/30.0
  Flood route prefix      Token      Flags
  00.02.ff.fe.60.00.00/51  0x30000

When      Event      Action
01:37:48.666  Processing Translate Q      Processing rte: op:1
                                Deferring translation
01:37:46.117  Add to Translate Q      Orig: rte added to translate queue for op: 1
01:37:46.117  Route add      Adding Orig route with nhid:1773
    Next-hop information:
      1773
      ->1771
      aggregation-device:
        ->1708 et-0/0/30.0
----- Vlan: VLAN800 -----
  Flood route prefix      Token      Flags
  00.03.00.01.60.00.60/51  0x30003

When      Event      Action
01:38:05.588  Kernel route updation      op:1, nh_id=1833, len=232
01:38:05.587  Route add      Adding SAT route with nhid:1833
01:38:05.587  Processing Translate Q      Processing rte: op:1
01:38:05.587  Add to Translate Q      Orig: rte added to translate queue for op: 1
01:38:05.587  Route dependency      Child-cnhid:1833 --> rte:prefix:00.03.00.01.60.00.60/51

```

## show ethernet-switching satellite device

<b>Syntax</b>	show ethernet-switching satellite device <brief   detail> <device-id <i>device-id</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Display status and control information for all satellite devices or a specified satellite device.
<b>Options</b>	<b>brief   detail</b> —(Optional) Display the specified level of output. The default output level is <b>brief</b> .  <b>device-id <i>device-id</i></b> —(Optional) Display information only for the specified satellite device.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast Replication in a Junos Fusion on page 1014</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show ethernet-switching satellite device on page 1057</a> <a href="#">show ethernet-switching satellite device device-id (brief view for specified device) on page 1057</a> <a href="#">show ethernet-switching satellite device device-id (detail view or specified device) on page 1057</a>
<b>Output Fields</b>	Table 49 on page 1055 lists the output fields for the <b>show ethernet-switching satellite device</b> command. Output fields are listed in the approximate order in which they appear, although the display order varies between the different levels of output.

Table 49: show ethernet-switching satellite device Command Output Fields

Field Name	Field Description	Level of Output
<b>Device ID</b>	Satellite device ID.	All
<b>Device</b> (detail view)		
<b>Interface Index</b>	Internal ID for the satellite device virtual interface.	All
<b>Device Interface Index</b> (detail view)		

Table 49: show ethernet-switching satellite device Command Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Interface Name</b>  <b>Device Interface Name</b> (detail view)	Satellite device virtual interface name ( <b>sd-fpc-id/0/0</b> , where <i>fpc-id</i> is the satellite device ID).	All
<b>State</b>  <b>Device Interface State</b> (detail view)	State of the satellite device virtual interface. If the interface is created and active, possible values include <b>Up</b> or <b>Down</b> .	All
<b>Connection State</b>  <b>Device connection Status</b> (detail view)	State of the satellite device interface connection to the aggregation device. The connection state is monitored using keep-alive messages between satellite and aggregation device control processes. Possible values include <b>Up</b> or <b>Down</b> .	All
<b>Requests</b>	Number of request messages sent to the listed satellite device aggregation device to allocate or update ECID mappings.	All
<b>Responses</b>	Number of response messages returned from the listed satellite device to the aggregation device for granting ECID requests.	All
<b>Device connection uptime</b>	Duration of the connection between the aggregation device and the specified satellite device.	detail
<b>Device heartbeat status</b>	Status of keep-alive message exchange between satellite device and aggregation device control processes.	detail
<b>Echo packets sent</b>	Number of keep-alive packets sent to the satellite device from the aggregation device.	detail
<b>Echo packets received</b>	Number of keep-alive response packets sent to the aggregation device from the satellite device.	detail
<b>Multicast IPC stats</b>	Number of inter-process control (IPC) messages sent from the aggregation device to the satellite device related to multicast functions on the satellite device. This value is displayed for active satellite device connections.	detail
<b>Bridge IPC stats</b>	Number of IPC messages sent from the aggregation device to the satellite device related to Layer 2 bridging functions on the satellite device. This value is displayed for active satellite device connections.	detail

## Sample Output

### show ethernet-switching satellite device

```
user@host> show ethernet-switching satellite device
```

Device ID	Interface index	Interface Name	State	Connection State	Requests	Responses
100	370	sd-100/0/0.32770	Up	Up	5	5
101	342	sd-101/0/0.32770	Up	Up	4	4
102	365	sd-102/0/0.32770	Up	Up	3	3
105	364	sd-105/0/0.32770	Up	Up	2	2

### show ethernet-switching satellite device device-id (brief view for specified device)

```
user@host> show ethernet-switching satellite device device-id 101
```

Device ID	Interface index	Interface Name	State	Connection State
100	370	sd-100/0/0.32770	Up	Up

### show ethernet-switching satellite device device-id (detail view or specified device)

```
user@host> show ethernet-switching satellite device device-id 101 detail
```

```
Device: 101
Device Interface Index: 3294
Device Interface Name: sd-101/0/0.32770
Device Interface State: Up
Device connection status: Up
Device connection uptime: 00:41:43
Device heartbeat status: Enabled
Echo packets sent: 41
Echo packets received: 41
Multicast IPC stats:
  ECID add sent: 0
  ECID update sent: 0
  ECID release sent: 0
  ECID cancel sent: 0
  ECID response received: 0
  Sync complete sent: 1
  Restart message sent: 0
  Restart complete message sent: 0
Bridge IPC stats:
  Bridge global messages sent: 1
  Bridge port add sent: 3
  Bridge port update sent: 0
  Bridge port delete sent: 0
  VLAN add sent: 60
  VLAN update sent: 0
  VLAN delete sent: 0
  VLAN member add sent: 60
  VLAN member update sent: 0
  VLAN member delete sent: 0
  VLAN member add received: 0
  VLAN member delete received: 0
  MAC prefix add sent: 0
```

```
MAC prefix update sent: 0
MAC prefix delete sent: 0
MAC prefix add received: 0
MAC prefix delete received: 0
STP add sent: 3
STP update sent: 0
STP delete sent: 0
```



## show multicast ecid-mapping satellite

<b>Syntax</b>	<pre>show multicast ecid-mapping satellite &lt;brief   detail   extensive&gt; &lt;device-id device-id&gt; &lt;ecid ecid&gt; &lt;reference-id reference-id&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 16.1.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Displays entries in the satellite multicast ECID mapping database.</p> <p>ECID database entries map a group of extended ports to an ECID value for the satellite devices in a Junos Fusion. Each entry also records the next hop to reach the corresponding destination extended ports.</p>
<b>Options</b>	<p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>device-id device-ID</b>—Display information from the ECID database for a specified satellite device ID.</p> <p><b>ecid ecid</b>—Display information from the ECID database for a specified ECID.</p> <p><b>reference-id reference ID</b>—Display information from the ECID database for a specified internally-assigned reference ID related to the ECID request messages exchanged during ECID allocation (used for troubleshooting issues with ECID allocation).</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast Replication in a Junos Fusion on page 1014</a></li> <li>• <a href="#">Egress (Local) Replication on the Satellite Devices on page 1023</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show multicast ecid-mapping satellite on page 1060</a></p> <p><a href="#">show multicast ecid-mapping satellite (for specified satellite device-id and ECID) on page 1061</a></p>
<b>Output Fields</b>	<p><a href="#">Table 50 on page 1059</a> lists the output fields for the <b>show multicast ecid-mapping satellite</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 50: show multicast ecid-mapping satellite Command Output Fields*

Field Name	Field Description	Level of Output
Satellite Device ID	Satellite device ID.	All

Table 50: show multicast ecid-mapping satellite Command Output Fields (continued)

Field Name	Field Description	Level of Output
<b>ECID</b>	ECID assigned to a grouping of extended ports on the satellite device.  Satellite devices have multiple ECIDs assigned that represent different groups of extended ports.	All
<b>State</b>	Status of requesting and allocating the ECID. Values include: <ul style="list-style-type: none"> <li>Init—An ECID mapping entry for a group of ports has been created.</li> <li>Request Scheduled—An ECID mapping entry has been queued for an ECID value request.</li> <li>Request Sent—The ECID request has been sent to the corresponding satellite device.</li> <li>Response Received—An ECID value has been received from the satellite device.</li> <li>Sync—An ECID mapping with an ECID value is to be synchronized with a satellite device.</li> <li>Ready—An ECID next hop has been created and is ready to be referenced for forwarding.</li> </ul>	All
<b>Flags</b>	Internal flag values for troubleshooting.	All
<b>nhid</b>	Satellite device next-hop ID associated with the ECID.	All
<b>Reference ID</b>	Internal reference ID assigned to an ECID request message, used for troubleshooting ECID communication with satellite devices.	All (with specified <b>device-id</b> or <b>ecid</b> )

## Sample Output

### show multicast ecid-mapping satellite

```
user@host> show multicast ecid-mapping satellite
```

Satellite Device ID	ECID	State	Flags
100	4129	Ready [nhid=612]	0x0
	xe-100/0/6.0		
	xe-100/0/7.0		
100	4097	Ready [nhid=1061]	0x0
	xe-100/0/0.0		
	xe-100/0/1.0		
100	4122	Ready [nhid=1190]	0x0
	xe-100/0/2.0		
	xe-100/0/3.0		
	xe-100/0/4.0		
	xe-100/0/5.0		
103	4103	Ready [nhid=1062]	0x0
	xe-103/0/5.0		
	xe-103/0/6.0		
103	4104	Ready [nhid=1068]	0x0

```

xe-103/0/7.0
xe-103/0/8.0
103      4105      Ready [nhid=1069]      0x0
xe-103/0/10.0
xe-103/0/9.0
103      4106      Ready [nhid=1070]      0x0
xe-103/0/11.0
xe-103/0/12.0
103      4107      Ready [nhid=1071]      0x0
xe-103/0/13.0
xe-103/0/14.0
103      4109      Ready [nhid=1097]      0x0
xe-103/0/15.0
xe-103/0/16.0
103      4110      Ready [nhid=1074]      0x0
xe-103/0/17.0
xe-103/0/18.0
103      4111      Ready [nhid=1075]      0x0
xe-103/0/19.0
xe-103/0/20.0
103      4112      Ready [nhid=1076]      0x0
xe-103/0/21.0
xe-103/0/22.0

```

#### show multicast ecid-mapping satellite (for specified satellite device-id and ECID)

```
user@host> show multicast ecid-mapping satellite device-id 100 ecid 4101
```

Satellite Device ID	ECID	State	Reference ID
100	4101	Ready [nhid=1845]	14

## show multicast next-hops satellite

<b>Syntax</b>	<code>show multicast next-hops satellite</code>
<b>Release Information</b>	Command introduced in Junos OS Release 16.1. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Display satellite multicast next-hop table information.  The output lists next-hops for all interfaces in the VPLS address family used in multicast replication.
<b>Options</b>	<b>brief   detail</b> —(Optional) Output level is the same when either option or no option is specified.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast Replication in a Junos Fusion on page 1014</a></li> <li>• <a href="#">show multicast snooping next-hops satellite on page 1065</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show multicast next-hops satellite on page 1063</a>
<b>Output Fields</b>	<a href="#">Table 51 on page 1062</a> lists the output fields for the <b>show multicast next-hops satellite</b> command. Output fields are listed in the approximate order in which they appear, although the display order varies between the different levels of output.

*Table 51: show multicast next-hops satellite Command Output Fields*

Field Name	Field Description	Level of Output
<b>Next-hop ID</b>	Next-hop ID in the database.	All
<b>Interface Index</b>	Internal ID for a satellite device virtual interface.	All
<b>Interface Name</b>	Interface name for configured interfaces in the Junos Fusion.  A satellite device virtual interface named <b>sd-fpc-id/0/0</b> is used to send traffic to extended ports on satellite device <i>fpc-id</i> .	All
<b>Label</b>	A multicast ECID assigned to the satellite device interface next hop. If no ECIDs are assigned for the interface, the value displayed in this field is 0.  Satellite device interfaces might have multiple ECIDs listed that represent different groups of multicast destination extended ports on that satellite device.	All

Table 51: show multicast next-hops satellite Command Output Fields (continued)

Field Name	Field Description	Level of Output
Flags	<p>Flags giving additional information about a next-hop entry. Values include:</p> <ul style="list-style-type: none"> <li>SAT—The entry is a satellite composite next hop for extended port destinations that has been resolved and updated with the corresponding satellite device interface, <b>sd-fpc-id/0/0</b>, and the associated ECID shown in the <b>Label</b> field.</li> </ul>	All

## Sample Output

### show multicast next-hops satellite

```
user@host> show multicast next-hops satellite
```

Next-hop ID	Interface index	Interface Name	Label	Flags
186	1	unknown	0	
530	323	unknown	0	
574	331	1c-0/0/0.32769	0	
578	335	ge-0/0/4.32770	0	
583	341	ge-0/0/7.32770	0	
584	343	ge-0/0/8.32770	0	
585	345	ge-0/0/9.32770	0	
586	337	ge-0/0/5.32770	0	
587	339	ge-0/0/6.32770	0	
610	347	xe-100/0/6.0	0	
611	349	xe-100/0/7.0	0	
612	348	sd-100/0/0.32770	4129	SAT
618	350	xe-100/0/0.0	0	
619	351	xe-100/0/1.0	0	
620	352	xe-100/0/2.0	0	
621	353	xe-100/0/3.0	0	
622	354	xe-100/0/4.0	0	
...				
1061	348	sd-100/0/0.32770	4097	SAT
1062	346	sd-103/0/0.32770	4103	SAT
1068	346	sd-103/0/0.32770	4104	SAT
1069	346	sd-103/0/0.32770	4105	SAT
1070	346	sd-103/0/0.32770	4106	SAT
1071	346	sd-103/0/0.32770	4107	SAT
1074	346	sd-103/0/0.32770	4110	SAT
1075	346	sd-103/0/0.32770	4111	SAT
1076	346	sd-103/0/0.32770	4112	SAT
1077	346	sd-103/0/0.32770	4113	SAT
1078	346	sd-103/0/0.32770	4114	SAT
1079	346	sd-103/0/0.32770	4115	SAT
1080	346	sd-103/0/0.32770	4116	SAT
1081	346	sd-103/0/0.32770	4117	SAT
1082	346	sd-103/0/0.32770	4118	SAT
1085	346	sd-103/0/0.32770	4121	SAT
1097	346	sd-103/0/0.32770	4109	SAT
1189	346	sd-103/0/0.32770	4120	SAT
1190	348	sd-100/0/0.32770	4122	SAT

1363	433	ge-0/0/1.0	0
1364	434	ge-0/0/2.0	0

## show multicast snooping next-hops satellite

<b>Syntax</b>	<pre>show multicast snooping next-hops satellite &lt;brief   detail   extensive&gt; &lt;nexthop-id <i>nexthop-id</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 16.1.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Display detailed multicast next-hop information for satellite device destinations.</p> <p>You can use this command to:</p> <ul style="list-style-type: none"> <li>• View the current list of all multicast traffic next hops.</li> <li>• See details about a specified multicast next hop.</li> <li>• Follow aggregation device composite next-hop processing as the aggregation device resolves and updates multicast next-hop table entries for extended port destinations.</li> </ul> <p>The aggregation device allocates ECID tags that represent multicast or broadcast destinations behind satellite device extended ports, associates them with the corresponding satellite device virtual interfaces (<b><i>sd-fpc-id/0/0</i></b>), and updates multicast next-hop table entries accordingly. More detailed output from this command shows events that result in next-hop table updates.</p>
<b>Options</b>	<p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output. The default output level is <b>brief</b>.</p> <p><b>nexthop-id <i>nexthop-id</i></b>—Display more detailed multicast satellite next-hop information only for the specified next-hop ID.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast Replication in a Junos Fusion on page 1014</a></li> <li>• <a href="#">Egress (Local) Replication on the Satellite Devices on page 1023</a></li> <li>• <a href="#">show multicast snooping route satellite on page 1070</a></li> <li>• <a href="#">Monitoring Layer 2 Multicast Forwarding in a Junos Fusion Data Center with EVPN on page 1030</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show multicast snooping next-hops satellite on page 1067</a></p> <p><a href="#">show multicast snooping next-hops satellite nexthop-id (detail view for a specified next-hop ID) on page 1067</a></p> <p><a href="#">show multicast snooping next-hops satellite nexthop-id (detail view for a specified next-hop ID on Junos Fusion Data Center with EVPN-VXLAN) on page 1068</a></p>

[show multicast snooping next-hops satellite nexthop-id](#) (extensive view for a specified next-hop ID) on page 1068

**Output Fields** Table 52 on page 1066 lists the output fields for the **show ethernet-switching flood next-hops satellite** command. Output fields are listed in the approximate order in which they appear.

Table 52: *show multicast snooping next-hops satellite Command Output Fields*

Field Name	Field Description	Level of Output
<b>Next-hop ID</b>	Multicast next-hop ID (original multicast next hop used with ingress multicast replication).	All
<b>Forwarding Next-Hop Type</b>	Type of next-hop entry. Values include: <ul style="list-style-type: none"> <li>COMPOSITE—Composite next hop.</li> </ul>	All
<b>Table</b>	Name of routing or forwarding table for the listed entry.	All
<b>Flags</b>	Flags giving additional information about a next-hop entry. Values include: <ul style="list-style-type: none"> <li>SAT—The entry is a satellite destination composite next hop for an extended port destination that has been resolved and updated with the corresponding satellite device interface, <b>sd-fpc/0/0</b>, and the associated ECID shown in the <b>label</b> field.</li> <li>ST—The entry is stale and waiting to be refreshed.</li> <li>RU—The entry is stale, but is marked to be reused.</li> </ul>	All
<b>EVPN VXLAN Core</b>	(Junos Fusion Data Center with EVPN-VXLAN) Ingress replication next-hop chain list for VXLAN remote VTEPs (RVTEPs)	detail extensive
<b>Mrouter</b>	Next-hop list for multicast routers connected to the bridge domain or VLAN.	detail extensive
<b>aggregation-device</b>	Next-hop IDs and corresponding interfaces for the composite next hop to reach local multicast destination ports on the aggregation device.	detail extensive
<b>satellite-device-id id</b>	Satellite device ID with the next-hop IDs and corresponding interface names for the composite next-hop chain to reach extended ports that are multicast destinations on that satellite device. <p>When an ECID has been assigned to destination extended ports on a satellite device, this field lists the satellite next-hop ID, the corresponding virtual satellite device interface (<b>sd-fpc-id/0/0</b>), and the allocated ECID (<b>label</b> field).</p>	detail extensive
<b>AE</b>	Link aggregation group interface next-hop IDs and interface names for multicast destination composite next hops.	detail extensive



Table 52: show multicast snooping next-hops satellite Command Output Fields (continued)

Field Name	Field Description	Level of Output
<b>label</b>	ECID associated with one or more multicast destination extended ports on the satellite device in the <b>satellite-device-id</b> field.	detail extensive
<b>Linked Next-hop</b>	Multicast satellite next-hop ID (next hop used with egress multicast replication).	detail extensive
<b>When</b>	Elapsed time since an event related to a multicast next-hop entry change.	extensive
<b>Event</b>	Brief description of the event related to a multicast next-hop entry change.	extensive
<b>Action</b>	Brief description of actions that resulted from the event.	extensive

## Sample Output

### show multicast snooping next-hops satellite

```
user@host> show multicast snooping next-hops satellite
```

Next-hop ID	Forwarding Next-Hop Type	Table	Flags
2097265	COMPOSITE	inet.0	
2097267	COMPOSITE	inet.0	
2097270	COMPOSITE	inet.0	
2097271	COMPOSITE	inet.0	
2094267	COMPOSITE	inet.0	SAT

### show multicast snooping next-hops satellite nexthop-id (detail view for a specified next-hop ID)

```
user@host> show multicast snooping next-hops satellite nexthop-id 524296 detail
```

Next-hop ID	Forwarding Next-Hop Type	Table	Flags
524296	COMPOSITE	inet.0	SAT

```

satellite-device-id 106:
->1839 sd-106/0/0.32770 label=4104
MRouter:
524293
aggregation-device:
->1708 et-0/0/30.0
->1826 xe-0/0/28:1.0
satellite-device-id 100:
->1845 sd-100/0/0.32770 label=4101
satellite-device-id 106:
->1847 sd-106/0/0.32770 label=4103
Linked Next-hop: 524295

```

### show multicast snooping next-hops satellite nexthop-id (detail view for a specified next-hop ID on Junos Fusion Data Center with EVPN-VXLAN)

```
user@host> show multicast snooping next-hops satellite nexthop-id 524296 detail
```

Next-hop ID	Forwarding Next-Hop Type	Table	Flags
2101169	COMPOSITE	inet.0	SAT

```

aggregation-device:
->1767 xe-0/0/12:2.0
satellite-device-id 101:
->7555 sd-101/0/0.32770 label=4097
EVPN VXLAN Core:
2097156
->4808 VXLAN RVTEP: 10.4.4.4
->4812 VXLAN RVTEP: 10.3.3.3
->9813 VXLAN RVTEP: 10.1.1.1
MRouter:
2099159
aggregation-device:
->1766 xe-0/0/12:1.0
Linked Next-hop: 2101168

```

### show multicast snooping next-hops satellite nexthop-id (extensive view for a specified next-hop ID)

```
user@host> show multicast snooping next-hops satellite nexthop-id 1048576 extensive
```

Next-hop ID	Forwarding Next-Hop Type	Table	Flags
1048576	COMPOSITE	default	

```

satellite-device-id 100:
->54297 xe-100/0/12.0
->54299 xe-100/0/13.0
satellite-device-id 101:
->54303 xe-101/0/12.0
->54339 xe-101/0/13.0
Linked Next-hop: 1048578

```

When	Event	Action
1w0d 21:07:51.281	Next-hop linking	Linked with satellite nhid:1048578
1w0d 21:07:51.260	Adding satellite Indirect	DB add
1w0d 21:07:51.260	Processing translate Q	Translating Multicast composite INH sd-100/0/0.32770 ECID:4105 [nhid=627] sd-101/0/0.32770 ECID:4104 [nhid=626]
1w0d 21:07:51.260	inh dependency	[ECID 4105] nhid:627 --> inhid:1048576
1w0d 21:07:51.260	inh dependency	[ECID 4104] nhid:626 --> inhid:1048576
1w0d 21:07:51.254	inh dependency	[ECID 4105] nhid:627 --> inhid:1048576
1w0d 21:07:51.254	Add to translate Q	inhid:1048576 added
1w0d 21:07:51.254	inh dependency	[ECID 4104] nhid:626 --> inhid:1048576
1w0d 21:07:51.241	Translate Q Skip	inhid:1048576: [ECID=0] Next-hop not ready
1w0d 21:07:51.241	Translate Q Skip	inhid:1048576: [ECID=0] Next-hop not ready
1w0d 21:07:51.241	Processing translate Q	Translating Multicast composite INH
1w0d 21:07:51.241	Add to translate Q	inhid:1048576 added
1w0d 21:07:51.241	Add to translate Q	Original INH decoded - Adding to Translate Q
1w0d 21:07:51.241	ECID reference	Added ECID reference-ID:2
1w0d 21:07:51.241	ECID reference	Added ECID reference-ID:1
1w0d 21:07:51.241	Next-hop add	Linked to fwd CNH extension: 0xa67a200

```
list[4]: {54297 54299 54303 54339 }  
nhid:1048576 from kernel  
fwd nhid[619]:
```

## show multicast snooping route satellite

**Syntax** show multicast snooping route satellite  
 <brief | detail | extensive>  
 <bridge-domain-name *bridge-domain-name* | <vlan-name *vlan-name*>  
 <group *group-address*>  
 <source *source-address*>  
 <vswitch-name *virtual-switch-name*>

**Release Information** Command introduced in Junos OS Release 16.1.  
 Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

**Description** Display Layer 2 multicast routing information (with IGMP snooping) for destination ports on satellite devices.

This command lists multicast routing entries by route prefix and bridge domain name (Junos Fusion Provider Edge) or VLAN name (Junos Fusion Data Center). Each route entry lists the next-hop ID (**NH Index**) used when the aggregation device performs ingress multicast replication. When local replication is enabled and the VLAN has multicast destination extended ports on a satellite device, the aggregation device:

- Creates a satellite device next-hop chain to those multicast destinations through their corresponding satellite device.
- Updates the multicast route entry with a link to the satellite next-hop chain (**Linked NH Index**).

If a multicast route does not have a satellite next-hop chain, **Linked NH Index** is 0. When the **Linked NH Index** value is non-zero, **NH Index** refers to the *original* next-hop information, but the aggregation device uses the satellite next-hop chain (**Linked NH Index**) for routing multicast traffic to satellite device extended ports. Use the **detail** or **extensive** option to expand the output to include details about the original next-hop and satellite next-hop chains.

**Options** **brief | detail | extensive**—(Optional) Display the specified level of output. The default output level is **brief**. The **detail** output level expands the original and satellite device next-hop chains for each route displayed. The **extensive** output level includes details about multicast next-hop entry update events used mainly for troubleshooting.

**bridge-domain-name *bridge-domain-name***—(Junos Fusion Provider Edge only) Filter output to display bridge domain flooding information only for the specified bridge domain name.

**vlan-name *vlan-name***—(Junos Fusion Data Center only) Filter output to display VLAN flooding information only for the specified VLAN name.

**group *group-address***—Filter output to display flooding information only for the specified multicast group.

**source *source-address***—Filter output to display flooding information only for the specified multicast source.

**vswitch-name *virtual-switch-name***—Filter output to display flooding information only for the specified Layer 2 virtual switch.

**Required Privilege Level** view

- Related Documentation**
- [Understanding Multicast Replication in a Junos Fusion on page 1014](#)
  - [Egress \(Local\) Replication on the Satellite Devices on page 1023](#)
  - [show multicast snooping next-hops satellite on page 1065](#)
  - [Monitoring Layer 2 Multicast Forwarding in a Junos Fusion Data Center with EVPN on page 1030](#)

**List of Sample Output**

[show multicast snooping route satellite on page 1072](#)  
[show multicast snooping route satellite detail on page 1073](#)  
[show multicast snooping route satellite group on page 1074](#)  
[show multicast snooping route satellite vlan-name \(for specific VLAN on Junos Fusion Data Center\) on page 1074](#)  
[show multicast snooping route satellite group address vlan-name \(detail for specific VLAN on Junos Fusion Data Center\) on page 1074](#)  
[show multicast snooping route satellite bridge-domain-name \(for specific bridge domain with detail view on Junos Fusion Provider Edge\) on page 1075](#)

**Output Fields** [Table 53 on page 1071](#) lists the output fields for the **show multicast snooping route satellite** command. Output fields are listed in the approximate order in which they appear.

*Table 53: show multicast snooping route satellite Command Output Fields*

Field Name	Field Description	Level of Output
<b>Route</b>	Multicast route information listed by route prefix under this heading.	All
<b>(S, G/m)</b>	Multicast entry state.	All
<b>Bridge Domain</b>	Bridge domain or VLAN name.	All
<b>NH Index</b>	Multicast next-hop ID (original multicast next hop used with ingress multicast replication).	brief
<b>Linked NH Index</b>	Multicast satellite next-hop ID (next hop used with egress multicast replication).	brief
<b>Next-hop information</b>	Detailed list of next-hop chain information for the original and satellite next-hop chains, listed by original next-hop index ( <b>NH Index</b> ) and satellite next-hop chain index ( <b>Linked NH Index</b> ) output field values.	detail extensive

Table 53: show multicast snooping route satellite Command Output Fields (continued)

Field Name	Field Description	Level of Output
<b>EVPN VXLAN Core</b>	(Junos Fusion Data Center with EVPN-VXLAN) Ingress replication next-hop chain list for VXLAN remote VTEPs (RVTEPs)	detail extensive
<b>Mrouter</b>	Next-hop chain list for multicast routers connected to the bridge domain or VLAN.	detail extensive
<b>aggregation-device</b>	Next-hop IDs and corresponding interfaces for the composite next hop to reach local multicast destination ports on the aggregation device.	detail extensive
<b>satellite-device-id id</b>	Satellite device ID with the next-hop IDs and corresponding interface names for the composite next-hop chain to reach extended ports that are multicast destinations on that satellite device.  When an ECID has been assigned to destination extended ports on a satellite device, this field lists the satellite next-hop ID, the corresponding virtual satellite device interface ( <b>sd-fpc-id/0/0</b> ), and the allocated ECID ( <b>label</b> field).	detail extensive
<b>AE</b>	Link aggregation group interface next-hop IDs and interface names multicast destination composite next hops.	detail extensive
<b>label</b>	ECID associated with one or more multicast destination extended ports on the satellite device in the <b>satellite-device-id</b> field.	
<b>When</b>	Elapsed time since an event related to a multicast next-hop entry addition or update.	extensive
<b>Event</b>	Brief description of the event related to a multicast next-hop entry addition or update.	extensive
<b>Action</b>	Brief description of actions that resulted from the event.	extensive

## Sample Output

### show multicast snooping route satellite

```

user@host> show multicast snooping route satellite

-----VSwitch Instance: default-switch-----
Route: 00.04.00.01.00.00.233.252.0.0.0.0.0.0.00.00/72
  (S, G/m): (*, 233.252.0.0/24)
    Bridge Domain:   bd100
    NH Index:        1048582
    Linked NH Index: 1048620
Route: 00.05.00.01.00.00.233.252.0.0.0.0.0.0.00.00/72

```

```

(S, G/m): (*, 233.252.0.0/24)
  Bridge Domain: bd1
  NH Index:      1048582
  Linked NH Index: 1048620
Route: 00.06.00.01.00.00.233.252.0.0.0.0.0.0.00.00/72
(S, G/m): (*, 233.252.0.0/24)
  Bridge Domain: bd10
  NH Index:      1048582
  Linked NH Index: 1048620

```

### show multicast snooping route satellite detail

```
user@host> show multicast snooping route satellite detail
```

```

-----VSwitch Instance: default-switch-----
Route: 00.03.00.01.00.00.233.252.0.0.0.0.0.0.00.00/52
(S, G/m): (*, 233.252.0.0/4)
  Bridge Domain: VLAN800
  Next-hop information:
    524287
    MRouter:
      524286
      aggregation-device:
        ->1708 et-0/0/30.0
        ->1826 xe-0/0/28:1.0
      satellite-device-id 100:
        ->1838 xe-100/0/49:3.0
      satellite-device-id 106:
        ->1834 xe-106/0/11.0
    524294
    MRouter:
      524293
      aggregation-device:
        ->1708 et-0/0/30.0
        ->1826 xe-0/0/28:1.0
      satellite-device-id 100:
        ->1845 sd-100/0/0.32770 label=4101
      satellite-device-id 106:
        ->1847 sd-106/0/0.32770 label=4103
Route: 00.03.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
  Bridge Domain: VLAN800
  Next-hop information:
    524295
    satellite-device-id 106:
      ->1804 xe-106/0/13.0
    MRouter:
      524286
      aggregation-device:
        ->1708 et-0/0/30.0
        ->1826 xe-0/0/28:1.0
      satellite-device-id 100:
        ->1838 xe-100/0/49:3.0
      satellite-device-id 106:
        ->1834 xe-106/0/11.0
    524296
    satellite-device-id 106:
      ->1839 sd-106/0/0.32770 label=4104
    MRouter:

```

```

524293
aggregation-device:
->1708 et-0/0/30.0
->1826 xe-0/0/28:1.0
satellite-device-id 100:
->1845 sd-100/0/0.32770 label=4101
satellite-device-id 106:
->1847 sd-106/0/0.32770 label=4103

```

### show multicast snooping route satellite group

```
user@host> show multicast snooping route satellite group 233.252.0.1
```

```

-----VSwitch Instance: default-switch-----
Route: 00.04.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
Bridge Domain: bd100
NH Index: 1048585
Linked NH Index: 1048621

```

### show multicast snooping route satellite vlan-name (for specific VLAN on Junos Fusion Data Center)

```
user@host> show multicast snooping route satellite vlan-name VLAN800 group 233.252.0.1
```

```

-----VSwitch Instance: default-switch-----
Route: 00.03.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
Bridge Domain: VLAN800
NH Index: 524295
Linked NH Index: 524296

```

### show multicast snooping route satellite group address vlan-name (detail for specific VLAN on Junos Fusion Data Center)

```
user@host> show multicast snooping route satellite group 233.252.0.1 vlan-name v1 detail
```

```

-----VSwitch Instance: default-switch-----
Route: 00.02.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
Bridge Domain: v1
Next-hop information:
2101168
aggregation-device:
->1767 xe-0/0/12:2.0
satellite-device-id 101:
->6226 xe-101/2/0.0
->6227 xe-101/2/1.0
EVPN VXLAN Core:
2097156
->4808 VXLAN RVTEP: 10.4.4.4
->4812 VXLAN RVTEP: 10.3.3.3
->9813 VXLAN RVTEP: 10.1.1.1
MRouter:
2099159
aggregation-device:
->1766 xe-0/0/12:1.0
2101169

```



```

aggregation-device:
->1767 xe-0/0/12:2.0
satellite-device-id 101:
->7555 sd-101/0/0.32770 label=4097
EVPN VXLAN Core:
2097156
->4808 VXLAN RVTEP: 10.4.4.4
->4812 VXLAN RVTEP: 10.3.3.3
->9813 VXLAN RVTEP: 10.1.1.1
MRouter:
2099159
aggregation-device:
->1766 xe-0/0/12:1.0

```

**show multicast snooping route satellite bridge-domain-name (for specific bridge domain with detail view on Junos Fusion Provider Edge)**

```

user@host> show multicast snooping route satellite bridge-domain-name bd100 group 233.252.0.1
detail

```

```

-----VSwitch Instance: default-switch-----
Route: 00.04.00.01.00.00.233.252.0.1.0.0.0.0.00.00/80
(S, G/m): (*, 233.252.0.1/32)
Bridge Domain: bd100
Next-hop information:
1048576
satellite-device-id 100:
->54297 xe-100/0/12.0
->54299 xe-100/0/13.0
satellite-device-id 101:
->54303 xe-101/0/12.0
->54339 xe-101/0/13.0
1048578
satellite-device-id 100:
->627 sd-100/0/0.32770 label=4105
satellite-device-id 101:
->626 sd-101/0/0.32770 label=4104

```

## show multicast statistics satellite

<b>Syntax</b>	<code>show multicast statistics satellite</code> <code>&lt;brief   detail &gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 16.1. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Display statistics about multicast satellite routing tables and ECID management.
<b>Options</b>	<b>brief   detail</b> —(Optional) Display the specified level of output. The default output level is <b>brief</b> .
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast Replication in a Junos Fusion on page 1014</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show multicast statistics satellite on page 1076</a>

### Sample Output

#### show multicast statistics satellite

```

user@host> show multicast statistics satellite

Multicast Statistics:
  Number of flood route entries:          8000
  Number of satellite flood route entries: 8000
  Number of MCINET route entries:        44000
  Number of satellite MCINET route entries: 36000
  Unicast VPLS next-hops(non-satellite): 32
  Number of satellite ECID next-hops:     12
  Number of VPLS composite next-hops:     12000
  Number of satellite composite next-hops: 12000
  Number of Indirect next-hops:           28002
  Number of Satellite Indirect next-hops: 28001
  Number of ECIDs requested:              14
  Number of ECID responses received:       14
  Number of ECID delete messages:         2
  Number of ECID mapping entries in DB:    12
  Number of ECID mapping entries ready:   12

```

## show multicast summary satellite

<b>Syntax</b>	show multicast summary satellite
<b>Release Information</b>	Command introduced in Junos OS Release 16.1. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	<p>Display summary status of multicast replication features in a Junos Fusion.</p> <p>This command displays whether or not egress multicast replication (also called local replication) is enabled. When local replication is configured, this command displays <b>Egress replication: Enabled</b>, and <b>Egress replication: Disabled</b> otherwise.</p> <p>This command also displays the graceful restart state of the satellite management control plane processes for local replication when these processes are first activated or have been restarted. The <b>Restart phase</b> output field value indicates the phase where the restart process stalled or failed, or displays a <b>Complete</b> message if the restart process completed successfully.</p>
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast Replication in a Junos Fusion on page 1014</a></li> <li>• <a href="#">Configuring Egress (Local) Replication on a Junos Fusion on page 1029</a></li> <li>• <a href="#">show multicast statistics satellite on page 1076</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show multicast summary satellite on page 1077</a>

## Sample Output

### show multicast summary satellite

```

user@host>show multicast summary satellite
Multicast:
  Restart phase:      Complete (11/11)
  Egress replication: Enabled

```



## CHAPTER 19

# Port Mirroring Analyzers on Junos Fusion Data Center

- [Understanding Port Mirroring on a Junos Fusion Data Center on page 1079](#)
- [analyzer-vlan \(Remote Analyzer\) on page 1081](#)
- [satellite \(Remote Analyzer\) on page 1082](#)

## Understanding Port Mirroring on a Junos Fusion Data Center

- [Port Mirroring Analyzers on a Junos Fusion Data Center Overview on page 1079](#)
- [Understanding the Configuration of Analyzers in a Junos Fusion Data Center on page 1080](#)
- [Limitations for Port Mirroring Analyzers on a Junos Fusion Data Center on page 1080](#)

### Port Mirroring Analyzers on a Junos Fusion Data Center Overview

You can use port mirroring (analyzers) on extended ports on satellite devices in a Junos Fusion Data Center. Extended-port port mirroring copies packets entering or exiting a port or entering a VLAN and sends the copies to a VLAN for remote monitoring. Use port mirroring to send traffic to applications that analyze traffic for purposes such as monitoring compliance, enforcing policies, detecting intrusions, monitoring and predicting traffic patterns, correlating events, and so on. When a port is ingress-mirrored, any packet received on that port is mirrored to the destination that you configure in your port mirroring configuration destination. When a port is egress-mirrored, any packet transmitted from that port is mirrored to your configured port-mirroring destination.

Many port mirroring analyzer concepts for standalone switches also apply to port mirroring analyzers on Junos Fusion Data Center. See *Understanding Port Mirroring* for information about port mirroring analyzers on standalone switches.

In Junos Fusion Data Center, you can use analyzers on extended ports for these purposes:

- Mirror aggregation device ports to extended ports
- Mirror extended ports to extended ports
- Mirror extended ports to aggregation device ports

## Understanding the Configuration of Analyzers in a Junos Fusion Data Center

Like all features in a Junos Fusion Data Center, port mirroring analyzers are configured from the aggregation devices.

You use the same CLI commands to configure analyzers on a JFDC that you use to configure analyzers on a standalone switch. The following are configuration guidelines that are specific to analyzers on JFDC:

- Configure mirroring on logical ports, not physical ports.
- Configure an explicit firewall filter with a port-mirroring instance.
- Configure mirroring on any of the following:
  - Logical network ports
  - VLANs
  - LAGs
  - Extended ports
- Use either ports or VLANs as binding points for egress port/VLAN and ingress VLAN mirroring. Use firewall filters as binding points for ingress port mirroring.



**NOTE:** Binding points and the output port or VLAN can be in different satellite devices.

- If mirrored traffic is to be sent to an output VLAN (an analyzer VLAN) and the output VLAN spans extended ports, configure the output VLAN with the following command:

[edit]

```
user@aggregation-device# set forwarding-options satellite analyzer-vlan vlan-name
```

where *vlan-name* is the name of the output VLAN.

## Limitations for Port Mirroring Analyzers on a Junos Fusion Data Center

Consider the following limitations when you configure port mirroring analyzers on a JFDC:

- You cannot mirror a cascade port. (See the configuration guidelines in *Understanding Port Mirroring* for other port types that cannot be mirrored.)
- The limitations of the native QFX10000 switch analyzer apply to analyzers on JFDC. See *Understanding Port Mirroring* for those limitations.
- Extended remote port mirroring—that is, remote port mirroring to an IP address (GRE encapsulation)—is not supported for JFDC.

- Ingress sampling on extended ports must be done with filters.
- If the output interface (or “monitor interface”) is on a satellite device, then it must be on the same VLAN and have the same port mode as the input interface (or “mirrored interface”).

**Related Documentation**

- [Understanding Port Mirroring](#)

## analyzer-vlan (Remote Analyzer)

<b>Syntax</b>	<code>analyzer-vlan <i>vlan-name</i>;</code>
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">satellite</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Specify the analyzer VLAN (output VLAN) that spans extended ports on the Junos Fusion Data Center.
<b>Options</b>	<b><i>vlan-name</i></b> —Name of the analyzer VLAN.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Port Mirroring on a Junos Fusion Data Center on page 1079</a></li> </ul>

## satellite (Remote Analyzer)

---

<b>Syntax</b>	<pre>satellite {   analyzer-vlan <i>vlan-name</i>; }</pre>
<b>Hierarchy Level</b>	[edit forwarding-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
<b>Description</b>	Specify that mirrored traffic is to be forwarded on all satellite devices that are connected to the aggregation device.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Understanding Port Mirroring on a Junos Fusion Data Center on page 1079</a></li></ul>



## CHAPTER 20

# Remapping Uplink Traffic Flows on Junos Fusion Data Center

- [Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 1083](#)
- [Configuring Uplink Port Pinning for Satellite Devices on a Junos Fusion Data Center on page 1086](#)
- [Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089](#)
- [Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094](#)
- [chassis-group-alias on page 1096](#)
- [filter on page 1098](#)
- [forwarding-policy on page 1099](#)
- [fpc \(Junos Fusion\) on page 1100](#)
- [holddown \(satellite-policies\) on page 1101](#)
- [minimum-links \(satellite-policies\) on page 1102](#)
- [mirror-egress on page 1103](#)
- [mirror-ingress on page 1104](#)
- [port-group-alias \(satellite-policies\) on page 1105](#)
- [port-group-extended on page 1106](#)
- [port-group-mirror on page 1107](#)
- [port-group-uplink \(satellite-policies\) on page 1108](#)
- [product-model \(Junos Fusion\) on page 1109](#)
- [satellite-policies on page 1110](#)
- [satellite-management \(Junos Fusion\) on page 1112](#)

### Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center

---

On a Juniper Networks Junos Fusion Data Center, traffic flows are load-balanced by default through the 5-tuple hashing method. This type of load balancing might result in poor usage of network resources. You can configure uplink port pinning and flow-based

uplink selection to improve load balancing of traffic flows across uplink ports. You can use local port mirroring to troubleshoot and monitor applications.

- [Why 5-Tuple Hashing Might Not Be Enough on page 1084](#)
- [How Uplink Port Pinning Improves Load Balancing on page 1084](#)
- [How Flow-Based Uplink Selection Improves Load Balancing on page 1085](#)
- [How Local Port Mirroring Is Used for Traffic Analysis and Monitoring on page 1086](#)

## Why 5-Tuple Hashing Might Not Be Enough

A traffic flow is a set of unidirectional packets that share the same 5-tuple packet fields that make up a Transmission Control Protocol/Internet Protocol (TCP/IP) connection. The packet fields include a source IP address/port number, destination IP address/port number and the IP protocol. Based on the contents of these packet fields, traffic flows are load-balanced in a best-effort manner with 5-tuple hashing. However, the unique characteristics of traffic flows in a network outstrip the best efforts of 5-tuple hashing to balance them efficiently.

Applications have varying requirements and constraints on network resources that create disparities in the size of flows. Elephant flows are long-lived flows with a high rate of traffic. They usually originate from applications that use big file transfers or multicast streaming, and they use advance-caching techniques to prevent the flows from being latency-sensitive. In contrast, a mice flow is a highly latency-sensitive and short-lived flow. While the majority of flows are mice flows, best-effort hashing cannot protect them from becoming starved for network resources when elephant flows are aggressively using network resources. Additionally, balancing flows with best-effort hashing can further degrade network performance when available links are underutilized.

To achieve better utilization of network resources, use remapping techniques to reroute, rate-limit, or prioritize elephant flows accordingly. Remapping elephant flows away from link bundles containing mice flows will prevent delays for latency-intensive mice flows and even out the distribution of flows among member links.



**NOTE:** This topic does not include information regarding the detection of traffic flows in a Junos Fusion Data Center network.

---

## How Uplink Port Pinning Improves Load Balancing

Use the uplink port-pinning feature on a Junos Fusion Data Center to enable satellite devices to load-balance traffic across uplink ports according to ingress ports.

By changing the default mapping behavior, uplink port pinning:

- Improves uplink capacity
- Facilitates traffic isolation
- Creates better end-to-end forwarding performance

By default on a Junos Fusion Data Center platform, when the provisioning protocol detects the uplink ports connected to aggregation and satellite devices, all uplink ports are bundled into a single link aggregation group (LAG) for traffic distribution. Consequently, traffic received on a satellite device port is load-balanced on uplink ports across aggregation devices using 5-tuple hashing. Such mapping might not be suitable if traffic received on satellite device ports is not evenly distributed and only a few ports are receiving the majority of forwarded traffic.

With uplink port pinning, you create uplink groups on a satellite device and assign specific ports to the uplink group. When you create uplink groups, instead of all uplink ports being added to a single LAG during the provisioning phase, a LAG is created for each uplink group.

As well as creating uplink groups, you can map a set of ingress interfaces to a given uplink group. To do this, add a port pinning policy configuration under the satellite policy configuration to define the satellite downlink to uplink group mapping for traffic load-balancing purposes.

The same product types can share the same port-pinning policy configuration, as long as their satellite downlink to uplink group mapping is the same.

Uplink port-pinning can be applied to satellite devices in three ways:

- Global policy, where the policy is applied to all the satellite devices connected to the aggregate device.
- Model-based, where the policy is applied to all the satellite devices whose model number match the model number in the configured policy.
- FPC-based, where the policy is applied to certain satellite devices using an FPC number on the satellite device. Configure this option using the **set chassis satellite-management fpc fpc-number forwarding-policy policy-name** statement.



**NOTE:** The port pinning-policy is configured from the aggregation device, so it is possible to get conflicting pinning policies from the aggregation device when it is in a transient state during configuration changes.

## How Flow-Based Uplink Selection Improves Load Balancing

On a Junos Fusion Data Center, you can configure flow-based uplink selection for satellite devices to achieve better utilization of network resources. As noted previously, elephant flows are long-lived flows with a high rate of traffic; the flows are low priority and not latency-sensitive. In a multitenant network in which satellite devices are hard-partitioned, programming the same flow entries on all satellite devices might not scale. Flow-based uplink selection enables you to program flow entries only on source satellite devices on which flows are expected. To remap specified elephant flows from satellite devices to aggregation devices, you can program remapping on all or specific satellite devices to override the default 5-tuple hashing and then distribute those specified flows across uplinks toward aggregation devices. You define specific flows by using flow-based firewall filters statements, and those flows are sent to the uplink port or ports that you define.

The definition of flows for uplink selection depends on the end-applications that are sharing the network resources. You use the satellite firewall filter configuration to specify flow action.

## How Local Port Mirroring Is Used for Traffic Analysis and Monitoring

Junos Fusion Data Center supports local port mirroring. Port mirroring copies packets entering or exiting a port or entering a VLAN and sends the copies to a local interface for local monitoring. You can use local port mirroring to troubleshoot and monitor applications. You can mirror packets per port, and you can configure the source and mirror ports on the same satellite device.

### Related Documentation

- [Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089](#)
- [Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094](#)
- [Configuring Uplink Port Pinning for Satellite Devices on a Junos Fusion Data Center on page 1086](#)

## Configuring Uplink Port Pinning for Satellite Devices on a Junos Fusion Data Center

---

Junos Fusion Data Center supports uplink port pinning. Uplink port pinning lets you redistribute traffic received on satellite devices when the default 5-tuple hashing cannot adequately load-balance the flows.

A satellite device might have a few ports receiving the majority of forwarding traffic. In such cases, the uplink port pinning feature will override the default load balancing and define flow mapping that will yield better link utilization of uplink capacity, traffic isolation, and better end-to-end forwarding performance.



**NOTE:** All configuration tasks for satellite devices are done on an aggregation device.

To configure uplink port pinning for a satellite device:

1. Specify a policy for satellite devices without a specific product model.

```
[edit]
user@aggregation-device# set policy-options satellite-policies forwarding-policy
  policy-name port-group-extended extended-port-group-name port-group-uplink
  -port-group-uplink-name
```

For example, the forwarding policy **policy-1** is applied to the extended port group **ep1** and the uplink port group **up1**.

```
[edit]
user@aggregation-device# set policy-options satellite-policies forwarding-policy
  policy-1 port-group-extended ep1 port-group-uplink up1
```

- Specify a policy for satellite devices with a specific product model using the **term** statement.

```
[edit]
user@aggregation-device# set policy-options satellite-policies forwarding-policy
  policy-name term from product-model product-model-name port-group-extended
  extended-port-group-name port-group-uplink port-group-uplink-name
```

For example, the forwarding policy **policy-1** is applied to the extended port group **ep1** and the uplink port group **up2** on all QFX5100 satellite devices.

```
[edit]
user@aggregation-device# set policy-options satellite-policies forwarding-policy
  monitor-traffic product-model QFX5100* port-group-extended ep1 mirror-ingress
  port-group-uplink up2
```

- Specify ports for the uplink port groups and the extended port groups:

```
[edit]
user@aggregation-device# set policy-options satellite-policies port-group-alias
  alias-name pic pic-number port [list-of-port-numbers]
```

For example:

```
[edit]
user@aggregation-device# set policy-options satellite-policies port-group-alias ep1
  pic 0 port [10 20]
user@aggregation-device# set policy-options satellite-policies port-group-alias up1
  pic 0 port 24
user@aggregation-device# set policy-options satellite-policies port-group-alias up2
  pic 0 port 22
```

- Add the forwarding policy to the chassis configuration. Optionally, include the FPC identifier for a particular satellite device:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc slot-id
  forwarding-policy policy-name
```

For example:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 102 forwarding-policy
  monitor-traffic
```

#### Related Documentation

- [Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089](#)
- [Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094](#)

- [Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 1083](#)

## Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center

---

You can configure flow-based uplink selection for satellite devices to achieve better utilization of network resources on a Junos Fusion Data Center (JFDC)—that is, you remap specified *elephant flows* from satellite devices to aggregation devices. (See [“Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center” on page 1083](#) for information about elephant flows.)

You program remapping of the uplink traffic on all or specific satellite devices to:

- Override the default 5-tuple hashing
- Distribute those specified flows across uplinks toward aggregation devices

You define specific traffic flows for uplink selection using flow-based filters, and then direct those traffic flows to a specific uplink port group. Starting in Junos OS Release 18.1R2-S2, you can also direct uplink traffic flows to a specific chassis group.

The flow-based filter is a firewall filter with two components: flow definition and action. To configure the flow definition, you identify the traffic flows for uplink selection using match conditions. Your definition of a flow will depend on the end-applications that share network resources. The flow definition might be as granular as 5-tuple or as simple as vlan/src-mac. See [Table 54 on page 1093](#) for supported packet fields and match conditions.

To configure the filter action, you direct those flows to use a specified uplink port group or chassis group as the next hop. You define the uplink port group or chassis group for the next hop by assigning an alias to the group. To define an uplink port group, use the **port-group-alias** CLI statement under the **satellite-policies** stanza; for a chassis group, use the **chassis-group-alias** CLI statement.

If you define a chassis group, you have the option to configure the mode of the chassis group. You can configure primary and backup chassis groups for uplink traffic flows. Uplink interfaces for the chassis group configured as primary will be the first selected for uplink traffic flows. When connectivity to the primary chassis group is down, the uplink traffic flows will be directed to the backup chassis group. When connectivity to the primary chassis group is restored, the uplink traffic flows won't switch back to the primary chassis group until connectivity to the backup chassis group is lost. You can also configure a list of core interfaces for the chassis group. The core interfaces are native ports on the aggregation device. The uplink traffic flows are directed to the chassis group when at least one of the core interfaces is up. If all of the core interfaces are down, then the firewall filter is disabled.

The filter is applied to a group of extended ports on the satellite device using a forwarding policy. You must define the group of extended ports by assigning an alias to the extended port group using the **port-group-alias** statement. Divide and group the extended ports depending on the traffic flows expected on those ports. Attach the filter to the extended port group using the **port-group-extended** statement.



**NOTE:** To configure uplink selection on all extended ports, specify **port-group-extended all** in the forwarding policy (that is, supply the keyword **all** instead of providing a port-group name).

---



To configure flow-based uplink selection:

1. Define a group of extended ports on the satellite device on which uplink selection will be applied by assigning an alias to the extended port group using the **port-group-alias** statement:

```
[edit]
user@aggregation-device# set policy-options satellite-policies port-group-alias
    extended-port-group-name pic pic-number port [list-of-port-numbers]
```

For example:

```
[edit]
user@aggregation-device# set policy-options satellite-policies port-group-alias eg1
    pic 0 port [10 20]
```

2. Define an alias for the uplink port group or chassis group to which the uplink traffic flows will be directed:
  - To define an uplink port group alias, use the PIC and port numbers:

```
[edit]
user@aggregation-device# set policy-options satellite-policies port-group-alias
    uplink-port-group-name pic pic-number port [list-of-port-numbers]
```

For example:

```
[edit]
user@aggregation-device# set policy-options satellite-policies port-group-alias
    ug1 pic 0 port [0 1]
```

- To define a chassis group alias, use the chassis identifier set at the **[edit chassis satellite-management redundancy-groups chassis-id id-number]** hierarchy level:

```
[edit]
user@aggregation-device# set policy-options satellite-policies chassis-group-alias
    chassis-group-name chassis-id id-number
```

For example, to configure chassis groups in primary and backup mode:

```
[edit]
user@aggregation-device# set policy-options satellite-policies chassis-group-alias
    c1 chassis-id 1 mode primary
[edit]
user@aggregation-device# set policy-options satellite-policies chassis-group-alias
    c1 chassis-id 2 mode backup
```

3. Configure a firewall filter and provide the alias of an uplink port group or chassis group as the next-hop group:
  - Specify **ethernet-switching** as the filter family.
  - See [Table 54 on page 1093](#) for supported packet fields and match conditions.

```
[edit]
user@aggregation-device# set chassis satellite-management firewall family
family-name filter filter-name term term-name from match-condition then
next-hop-group (uplink-port-group-name | chassis-group-name)
```

For example:

```
[edit]
user@aggregation-device# set chassis satellite-management firewall family
ethernet-switching filter ftp-flows term t1 from ip-protocol ftp then next-hop-group
ug1
```

4. Configure a forwarding policy that applies the firewall filter to the extended port group that was defined in Step 1. Optionally, specify a product model for the satellite devices on which the policy is applied:

```
[edit]
user@aggregation-device# set policy-options satellite-policies forwarding-policy
policy-name product-model product-model-name port-group-extended
extended-port-group-name filter filter-name
```

For example:

```
[edit]
user@aggregation-device# set policy-options satellite-policies forwarding-policy
elephant-flow-uplink-selection product-model QFX5100* port-group-extended eg1
filter ftp-flows
```

5. Bind the forwarding policy to all satellite devices or to a specific satellite device:

To bind the forwarding policy to *all* satellite devices:

```
[edit]
user@aggregation-device# set chassis satellite-management forwarding-policy
policy-name
```

For example:

```
[edit]
user@aggregation-device# set chassis satellite-management forwarding-policy
elephant-flow-uplink-selection
```

To bind the forwarding policy to a *specific* satellite device:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc fpc-id
forwarding-policy policy-name
```

For example:

```
[edit]
```

```
user@aggregation-device# set chassis satellite-management fpc 110 forwarding-policy
elephant-flow-uplink-selection
```

*Table 54: Packet Fields and Match Conditions Supported for Flow-based Uplink Selection*

Packet Fields	Match Conditions
destination-mac	destination-mac-address <i>address</i>
ip-destination-address	ip-destination-address <i>address</i>
ip-l4-protocol	ip-protocol <i>number</i>
ip-source-address	ip-source-address <i>address</i>
l4-destination-port (TCP/UDP)	destination-port <i>number</i>
l4-source-port (TCP/UDP)	source-port <i>number</i>
source-mac	source-mac-address <i>address</i>
vlan-id	user-vlan-id <i>number</i>

For details about the match conditions, see *Firewall Filter Match Conditions and Actions (QFX10000)*.

#### Release History Table

Release	Description
17.4R1	Starting in Junos OS Release 18.1R2-S2, you can also direct uplink traffic flows to a specific chassis group.

#### Related Documentation

- [Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094](#)
- [Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 1083](#)

## Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center

Junos Fusion Data Center supports local port mirroring. Port mirroring copies packets entering or exiting a port or entering a VLAN and sends the copies to a local interface for local monitoring. You can use local port mirroring to troubleshoot and monitor applications. You can mirror packets per port, and you can configure the source and mirror ports on the same satellite device.

To configure local port mirroring on a satellite device:

1. Add the forwarding policy to the chassis configuration. Optionally, include the FPC identifier for a particular satellite device:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc slot-id
forwarding-policy policy-name
```

For example:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 102 forwarding-policy
my-pol102
```

2. Specify the mirror port group for the extended port group. Optionally, specify a product model for the satellite devices on which the policy is applied:



**NOTE:** You can configure both ingress and egress or just one of the two.

```
[edit]
user@aggregation-device# set policy-options satellite-policies forwarding-policy
policy-name product-model product-model-name port-group-extended
extended-port-group-name mirror-egress port-group-mirror mirror-port-group-name
mirror-ingress port-group-mirror mirror-port-group-name
```

For example:

```
[edit]
user@aggregation-device# set policy-options satellite-policies forwarding-policy
monitor-traffic product-model QFX5100* port-group-extended eg1 mirror-egress
port-group-mirror mp1 mirror-ingress port-group-mirror mg1
```

3. Specify port(s) for the mirroring port group(s) and the extended port group(s):

```
[edit]
user@aggregation-device# set policy-options satellite-policies port-group-alias
alias-name pic pic-number port [list-of-port-numbers]
```

For example:

```
[edit]
user@aggregation-device# set policy-options satellite-policies port-group-alias
mg1 pic 0 port 24
user@aggregation-device# set policy-options satellite-policies port-group-alias eg1
pic 0 port [10 20]
```

4. Bind the extended-port forwarding policy to all satellite devices or to a specific satellite device:

To bind the forwarding policy to *all* satellite devices:

```
[edit]
user@aggregation-device# set chassis satellite-management forwarding-policy
policy-name
```

For example:

```
[edit]
user@aggregation-device# set chassis satellite-management forwarding-policy
monitor-traffic
```

To bind the forwarding policy to a *specific* satellite device:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc slot-id
forwarding-policy policy-name
```

For example:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 110 forwarding-policy
monitor-traffic
```

#### Related Documentation

- [Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 1083](#)

## chassis-group-alias

<b>Syntax</b>	<pre>chassis-group-alias <i>chassis-group-alias-name</i> {   chassis-id <i>id-number</i> {     core-interfaces [<i>list-of-interfaces</i>];     mode primary/backup;   }   prefer-primary; }</pre>
<b>Hierarchy Level</b>	[edit policy-options <a href="#">satellite-policies</a> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 18.1R2 for Junos Fusion Data Center.</p> <p>Support for <b>prefer-primary</b> option introduced in Junos OS Release 18.4R1 for Junos Fusion Data Center.</p>
<b>Description</b>	<p>Configure a chassis group alias for flow-based uplink selection in a Junos Fusion. You can configure flow-based uplink selection for satellite devices to achieve better utilization of network resources by remapping specified uplink traffic flows on the satellite device.</p> <p>When configuring flow-based uplink selection, there are two ways to select the uplink ports towards: using an uplink port group or using a chassis group. The uplink traffic flows, which are defined using a firewall filter, are directed towards the uplink port group or the chassis group.</p> <p>To configure the chassis group, you assign an alias to a group of chassis IDs. The chassis group alias is then used in the firewall filter configuration as the next-hop group for the uplink traffic flows. You configure the firewall filter at the <b>[edit chassis satellite-management firewall]</b> hierarchy level.</p> <p>You can configure primary and backup members in a chassis group. Uplink interfaces for the chassis group member configured as primary will be the first selected for uplink traffic flows. When connectivity to the primary member is down, the uplink traffic flows will be directed to the backup member. When connectivity to the primary member is restored, the uplink traffic flows won't switch back to the primary member until connectivity to the backup member is lost.</p> <p>You can also configure a list of core interfaces for the chassis group. The core interfaces are native ports on the aggregation device. The uplink traffic flows are directed to the chassis group when at least one of the core interfaces is up. If all of the core interfaces are down, then the firewall filter is disabled.</p>
<b>Default</b>	If flow-based uplink selection is not configured, traffic flows are load-balanced by default through the 5-tuple hashing method.
<b>Options</b>	<b><i>chassis-group-alias-name</i></b> —The user-defined name of the chassis group.

**chassis-id *id-number***—The chassis ID found in **set chassis satellite-management redundancy-groups chassis-id *id-number*** on the aggregation device.

**primary**—Configure a member of the chassis group to be in primary mode. Must be configured along with a backup member using the **backup** option.

**backup**—Configure a member of the chassis group to be in backup mode. If connectivity to the primary member is down, uplink traffic flows are directed to the backup member. Must be configured along with a primary chassis group member using the **primary** option.

**core-interfaces *list-of-interfaces***—Configure the core interfaces for the chassis group so that uplink traffic is directed to the chassis group as long as one of the core interfaces is up.

**prefer-primary**—Directs traffic flows from an external host destined to an aggregation device only on the uplinks towards that particular aggregation via the satellite device layer towards the aggregation devices.

<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
---------------------------------	---

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089</a></li></ul>
------------------------------	--

## filter

<b>Syntax</b>	<code>filter <i>filter-name</i>;</code>
<b>Hierarchy Level</b>	<p>[edit chassis <a href="#">satellite-management</a> firewall family <i>family-name</i>],</p> <p>[edit policy-options <a href="#">satellite-policies forwarding-policy</a> <i>policy-name</i> term <i>term-name</i> from <a href="#">product-model</a> <i>model-name</i> <a href="#">port-group-extended</a> <i>name</i>],</p> <p>[edit policy-options <a href="#">satellite-policies forwarding-policy</a> <i>policy-name</i> <a href="#">port-group-extended</a> <i>name</i>]</p>
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion.
<b>Description</b>	On a Junos Fusion Data Center (JFDC), assign a filter for uplink selection for use with satellite policy configurations.
<b>Options</b>	<i>name</i> —Filter name.
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089</a></li> <li>• <a href="#">Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094</a></li> <li>• <a href="#">Configuring Uplink Port Pinning for Satellite Devices on a Junos Fusion Data Center on page 1086</a></li> </ul>



## forwarding-policy

```
Syntax forwarding-policy {
  policy-name {
    term term-name {
      from {
        product-model model-name;
        port-group-extended port-group-extended-name {
          filter filter-name;
          mirror-egress port-group-mirror port-group-mirror;
          mirror-ingress port-group-mirror port-group-mirror;
          port-group-uplink port-group-uplink-name
          hold-down time;
          minimum-links number;
        }
      }
    }
  }
}
```

**Hierarchy Level** [edit policy-options [satellite-policies](#)]

**Release Information** Statement introduced in Junos OS Release 17.2R1 for Junos Fusion.

**Description** Configure forwarding satellite policies for Junos Fusion.

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing—To add this statement to the configuration.

**Related Documentation**

- [Configuring Junos Fusion Provider Edge](#)
- [Configuring or Expanding a Junos Fusion Enterprise](#)
- [Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089](#)
- [Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094](#)
- [Configuring Uplink Port Pinning for Satellite Devices on a Junos Fusion Data Center on page 1086](#)
- [Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 1083](#)

## fpc (Junos Fusion)

<b>Syntax</b>	<pre>fpc slot-id{   alias alias;   cascade-ports interface-name;   description description;   environment-monitoring-policy policy;   serial-number serial-number;   system-id mac-address;   uplink-failure-detection {     candidate-uplink-policy policy;   }   local switching;   selective-vlan-switching{     routing-instance routing-instance;   } }</pre>
<b>Hierarchy Level</b>	[edit chassis <a href="#">satellite-management</a> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p> <p><b>local-switching</b> and <b>selective-vlan-switching</b> introduced in Junos OS Release 17.2R1 for Junos Fusion Provider Edge.</p>
<b>Description</b>	Configure an FPC identifier for a satellite device within a Junos Fusion, or modify the configuration of an existing satellite device in a Junos Fusion.
<b>Options</b>	<p><b>slot-id</b>—Specifies the FPC identifier of the device and functions as the FPC identifier in the interface name when configuring satellite device interfaces.</p> <p>In a Junos Fusion Data Center, the <i>slot-id</i> must have a value in the range of 65 to 254.</p> <p>In a Junos Fusion Enterprise or Junos Fusion Provider Edge, the <i>slot-id</i> must have a value of 34 or greater.</p> <p><b>local switching</b>—Enables local-switching for all the ports on the satellite device.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Junos Fusion Provider Edge</i></li> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## holddown (satellite-policies)

<b>Syntax</b>	<code>holddown <i>time</i>;</code>
<b>Hierarchy Level</b>	<p>[edit policy-options <a href="#">satellite-policies forwarding-policy name</a> <a href="#">port-group-extended port-group-extended-name</a> <a href="#">port-group-uplink port-group-uplink-name</a>]</p> <p>[edit policy-options <a href="#">satellite-policies forwarding-policy policy-name</a> term <i>name</i> from <a href="#">port-group-extended port-group-extended-name</a> <a href="#">port-group-uplink port-group-uplink-name</a>]</p>
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R for Junos Fusion.
<b>Description</b>	On a Junos Fusion Data Center for satellite policy configurations, define the amount of time to hold down after uplink failure.
<b>Options</b>	<b><i>time</i></b> —Time in seconds. The range is from 1 through 600 seconds.
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Junos Fusion Provider Edge</a></li> <li>• <a href="#">Configuring or Expanding a Junos Fusion Enterprise</a></li> <li>• <a href="#">Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089</a></li> <li>• <a href="#">Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094</a></li> <li>• <a href="#">Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 1083</a></li> </ul>

## minimum-links (satellite-policies)

<b>Syntax</b>	<code>minimum-links <i>number</i>;</code>
<b>Hierarchy Level</b>	<p>[edit policy-options <a href="#">satellite-policies forwarding-policy name</a> <a href="#">port-group-extended port-group-extended-name</a> <a href="#">port-group-uplink port-group-uplink-name</a>]</p> <p>[edit policy-options <a href="#">satellite-policies forwarding-policy policy-name</a> term <i>name</i> from <a href="#">port-group-extended port-group-extended-name</a> <a href="#">port-group-uplink port-group-uplink-name</a>]</p>
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion.
<b>Description</b>	On a Junos Fusion Data Center for satellite policy configurations, define the minimum number of child links required to keep extended ports UP.
<b>Options</b>	<b>number</b> —Number of minimum child links. The range is from 1 through 32 links.
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 1083</a></li> <li>• <a href="#">Configuring Junos Fusion Provider Edge</a></li> <li>• <a href="#">Configuring or Expanding a Junos Fusion Enterprise</a></li> <li>• <a href="#">Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089</a></li> <li>• <a href="#">Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094</a></li> </ul>

## mirror-egress

<b>Syntax</b>	<pre>mirror-egress {   port-group-mirror <i>port-group-mirror</i>; }</pre>
<b>Hierarchy Level</b>	[edit policy-options <a href="#">satellite-policies forwarding-policy <i>name</i> port-group-extended <i>name</i></a> ], [edit policy-options <a href="#">satellite-policies forwarding-policy <i>name</i> term <i>name</i> from port-group-extended <i>name</i></a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center (JFDC).
<b>Description</b>	Define an egress port mirror for local port mirroring on a satellite device.
<b>Options</b>	The remaining statement is explained separately.
<b>Required Privilege Level</b>	routing
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094</a></li> </ul>

## mirror-ingress

---

Syntax	<pre>mirror-ingress {   port-group-mirror <i>port-group-mirror</i>; }</pre>
Hierarchy Level	[edit policy-options <a href="#">satellite-policies forwarding-policy <i>name</i> port-group-extended <i>name</i></a> ], [edit policy-options <a href="#">satellite-policies forwarding-policy <i>name</i> term <i>name</i> from port-group-extended <i>name</i></a> ]
Release Information	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center (JFDC).
Description	Define an ingress port mirror for local port mirroring on a satellite device.
Options	The remaining statement is explained separately.
Required Privilege Level	routing
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094</a></li></ul>

## port-group-alias (satellite-policies)

**Syntax**

```
port-group-alias port-group-alias-name {
  pic pic-number {
    port [port-number | port-number-range | all];
  }
}
```

**Hierarchy Level** [edit policy-options [satellite-policies](#)]

**Release Information** Statement introduced in Junos OS Release 14.2R3.

**Description** Configure a port group alias for satellite policies in a Junos Fusion.

A port group alias is used to define the candidate uplink ports on satellite devices that use the satellite policy.



**CAUTION:** The physically connected uplink ports on a satellite device must be defined as candidate uplink ports in the Junos Fusion configuration. If the uplink ports on a satellite device are not configured as candidate uplink ports, uplink failure detection cannot be enabled on the device, and a system log message is generated.

A port group alias is associated with a satellite policy using the **set uplink-port-group uplink-port-group-name** statement in the [edit policy-options [satellite-policies](#) candidate-uplink-policy *policy-name*] hierarchy.

**Default** Each satellite device model has a set of default uplink ports (see [“Overview of Uplink Failure Detection on a Junos Fusion” on page 1127](#)). You only need to assign an uplink port group to a satellite device if you do not want to use the default uplink ports.

**Options** ***port-group-alias-name***—The user-defined name of the port group alias.

The remaining statements are explained separately.

**Required Privilege Level** admin—To view this statement in the configuration.  
admin-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Junos Fusion Provider Edge](#)
- [Configuring or Expanding a Junos Fusion Enterprise](#)

## port-group-extended

Syntax	<pre>port-group-extended <i>name</i>;   filter <i>filter-name</i>;   mirror-egress port-group-mirror <i>port-group-mirror</i>;   mirror-ingress port-group-mirror <i>port-group-mirror</i>;   port-group-uplink hold-down seconds <i>minimum-links</i> <i>minimum-links</i>     port-group-uplink-alias-name;</pre>
Hierarchy Level	<pre>[edit policy-options satellite-policies forwarding-policy <i>policy-name</i> term <i>term-name</i>   from product-model <i>model-name</i>], [edit policy-options satellite-policies forwarding-policy <i>policy-name</i> ]</pre>
Release Information	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion.
Description	<p>On a Junos Fusion Data Center (JFDC), define the satellite device extended port group for use with satellite policy configurations.</p> <p>In a JFDC environment, extended ports are access ports on satellite devices that connect to end user devices (such as laptops, phones, and printers).</p>
Options	<p><b>name</b>—Extended port group alias name to which the policy applies.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089</a></li> <li>• <a href="#">Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094</a></li> <li>• <a href="#">Configuring Uplink Port Pinning for Satellite Devices on a Junos Fusion Data Center on page 1086</a></li> </ul>



## port-group-mirror

<b>Syntax</b>	<code>port-group-mirror <i>port-group-mirror</i>;</code>
<b>Hierarchy Level</b>	<p>[edit policy-options satellite-policies forwarding-policy <i>name</i> port-group-extended <i>name</i> mirror-egress],</p> <p>[edit policy-options satellite-policies forwarding-policy <i>name</i> term <i>name</i> from port-group-extended <i>name</i> mirror-egress],</p> <p>[edit policy-options satellite-policies forwarding-policy <i>name</i> port-group-extended <i>name</i> mirror-ingress],</p> <p>[edit policy-options satellite-policies forwarding-policy <i>name</i> term <i>name</i> from port-group-extended <i>name</i> mirror-ingress]</p>
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center (JFDC).
<b>Description</b>	Specify the mirror port group alias name for local port mirroring on a satellite device.
<b>Required Privilege Level</b>	routing
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094</a></li> </ul>

## port-group-uplink (satellite-policies)

<b>Syntax</b>	<pre>port-group-uplink <i>port-group-uplink-name</i>   holdddowntime;   minimum-links <i>number</i>;</pre>
<b>Hierarchy Level</b>	<pre>[edit policy-options <i>satellite-policies forwarding-policy policy-name</i> term <i>term-name</i>   from <i>product-model model-name</i>] [edit policy-options <i>satellite-policies forwarding-policy name port-group-extended</i>   <i>port-group-extended-name</i>] [edit policy-options <i>satellite-policies forwarding-policy policy-name</i> term <i>name</i>   from <i>port-group-extended port-group-extended-name</i>]</pre>
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2R1 for Junos Fusion.
<b>Description</b>	On a Junos Fusion Data Center, define an uplink port mapping for satellite policy configurations.
<b>Options</b>	<p><b><i>name</i></b>—Name of the uplink port group.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Junos Fusion Provider Edge</a></li> <li>• <a href="#">Configuring or Expanding a Junos Fusion Enterprise</a></li> <li>• <a href="#">Configuring Flow-Based Uplink Selection on a Junos Fusion Data Center on page 1089</a></li> <li>• <a href="#">Configuring Local Port Mirroring for Satellite Devices on a Junos Fusion Data Center on page 1094</a></li> <li>• <a href="#">Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 1083</a></li> </ul>

## product-model (Junos Fusion)

Syntax	<code>product-model <i>model-name</i>;</code>
Hierarchy Level	<pre>[edit policy-options satellite-policies candidate-uplink-port-policy <i>policy-name</i> <b>term</b> <i>term-name</i> from] [edit policy-options satellite-policies candidate-uplink-port-policy <i>policy-name</i> <b>term</b> <i>term-name</i> from] [edit policy-options satellite-policies forwarding-policy <i>policy-name</i> <b>term</b> <i>term-name</i> from]</pre>
Release Information	Statement introduced in Junos OS Release 14.2R3.
Description	<p>Define the satellite device product models that will use the candidate uplink port policy defined in the <b>from</b> statement.</p> <p>The other statements in the same <b>from</b> statement are applied to satellite devices that match the <b>product-model</b> <i>model-name</i> definition. Those configuration statements are not applied to satellite devices that do not match the definition.</p>
Options	<p><b>model-name</b>—Defines the satellite device product models that will use the candidate uplink port policy. It can be a complete device model name, to match that device model exactly. You can also use the wildcard character (*) in the match term to match zero or more of any character.</p> <p>Some examples of using the wildcard character in the match term:</p> <ul style="list-style-type: none"> <li>To apply the satellite policy to all EX4300 switches in the satellite device role, enter <b>EX4300*</b> as the <i>model-name</i>.</li> <li>To apply the satellite policy to all QFX5100 switches in the satellite device role, enter <b>QFX5100*</b> as the <i>model-name</i>.</li> <li>To apply the satellite policy to QFX5100 switches with model names that start with QFX5100-96, enter <b>QFX5100-96*</b> as the <i>model-name</i>.</li> </ul>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li><i>Configuring Junos Fusion Provider Edge</i></li> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## satellite-policies

```
Syntax satellite-policies {
  <candidate-uplink-port-profile policy-name> {
    <holddown holddown-time>;
    <minimum-links number-of-links>;
    <uplink-port-group uplink-port-group-name>;
    term term-name {
      from {
        product-model model-name;
        <holddown holddown-time>;
        <minimum-links number-of-links>;
        <uplink-port-group uplink-port-group-name>;
      }
    }
  }
  environment-monitoring-policy policy-name {
    <alarm <linkdown>
    term term-name {
      from {
        product-model model-name;
      }
    }
  }
  forwarding-policy {
    policy-name {
      port-group-extended name;
      filter filter-name;
      mirror-egress port-group-mirror port-group-mirror;
      mirror-ingress port-group-mirror port-group-mirror;
      port-group-uplink port-group-uplink-name
        holddowntime;
      minimum-links number;
      term term-name {
        from {
          port-group-extended name;
          filter filter-name;
          mirror-egress port-group-mirror port-group-mirror;
          mirror-ingress port-group-mirror port-group-mirror;
          port-group-uplink port-group-uplink-name
            holddowntime;
          minimum-links number;
          product-model model-name;
          port-group-extended port-group-alias-name {
            port-group-uplink port-group-alias-name;
          }
        }
      }
    }
  }
  port-group-alias port-group-alias-name {
    pic pic-number {
      port [port-number | port-number-range | all];
    }
  }
}
```

```
}  
}
```

**Hierarchy Level** [edit policy-options]

**Release Information** Statement introduced in Junos OS Release 14.2R3 for Junos Fusion.

**Description** Configure satellite policies for a Junos Fusion.

**Options** The remaining statements are explained separately.

**Required Privilege Level** admin—To view this statement in the configuration.  
admin-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Junos Fusion Provider Edge*
- *Configuring or Expanding a Junos Fusion Enterprise*

## satellite-management (Junos Fusion)

```
Syntax satellite-management {
  aging-timer aging-timer;
  auto-satellite-conversion {
    satellite [slot-id | range | all];
  }
  cluster cluster-name {
    cascade-ports interface-name;
    cluster-id cluster-id-number;
    fpc slot-id {
      alias alias;
      description description;
      member-id member-id-number;
      system-id mac-address;
    }
  }
  designated-event-forwarding
  environment-monitoring-policy policy;
  firewall
    family family-name {
      filter filter-name {
        term term-name {
          from {
            match-conditions;
          }
          then {
            action;
            action-modifiers;
          }
        }
      }
    }
  }
  fpc slot-id {
    alias alias;
    cascade-ports interface-name;
    description description;
    environment-monitoring-policy policy;
    serial-number serial-number;
    system-id mac-address;
    uplink-failure-detection {
      candidate-uplink-policy policy;
    }
  }
  psu {
    redundancy {
      n-plus-n;
    }
  }
  redundancy-groups {
    chassis-id number;
    redundancy-group-name {
      redundancy-group-id redundancy-group-id-number;
    }
  }
}
```

```

peer-chassis-id peer-chassis-id-number {
  inter-chassis-link interface-name;
  no-auto-iccp-provisioning;
  no-auto-vlan-provisioning;
  satellite satellite-device-fpc-IDs;
}
}
single-home {
  satellite [slot-id | slot-id-range | all];
}
upgrade-groups upgrade-group-name {
  satellite [slot-id | range | all];
}
uplink-failure-detection {
  candidate-uplink-policy policy;
}
}

```

Hierarchy Level [edit chassis]

**Release Information** Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.  
Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.  
Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

**Description** Configure and manage a Junos Fusion.

If you enter the **delete chassis satellite-management** command to delete a Junos Fusion configuration, we recommend also rebooting the Routing Engines on your device to maximize device performance.



**NOTE:** In a Junos Fusion Data Center with EVPN wherein VXLAN encapsulation is used, firewall filters with next-interface or next-ip actions are not supported.

**Options** The remaining statements are explained separately.

**Required Privilege Level** admin—To view this statement in the configuration.  
admin-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring or Expanding a Junos Fusion Enterprise*
- *Configuring Junos Fusion Provider Edge*





# Class of Service on Junos Fusion Data Center

- [Understanding CoS in Junos Fusion Data Center on page 1115](#)
- [Configuring CoS in Junos Fusion Data Center on page 1118](#)


## Understanding CoS in Junos Fusion Data Center

---

Junos Fusion provides a method of significantly expanding the number of available network interfaces on an *aggregation device* by allowing the aggregation device to add interfaces through interconnections with *satellite devices*. The entire system—the interconnected aggregation device and satellite devices—is called Junos Fusion. Junos Fusion simplifies network administration by appearing in the network topology as a single device, and the single device is managed from a single IP address.

[Figure 29 on page 1115](#) shows the basic Junos Fusion Data Center topology.

*Figure 29: Basic Junos Fusion Topology*

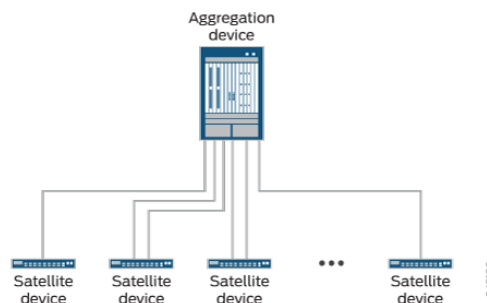

Beginning with Junos OS Release 17.2R1, Junos Fusion Data Center supports CoS on single- or dual- aggregation device configurations. Beginning with Junos OS Release 18.1R2, Junos Fusion Data Center supports CoS on quad-aggregation device configurations. CoS configuration is the same on Junos Fusion Data Center regardless of the selected architecture - single, dual, or quad aggregation devices.

This topic describes class of service (CoS) on the different types of ports in Junos Fusion.


This topic covers:

- [Overview of CoS on Different Types of Ports in Junos Fusion on page 1116](#)
- [CoS on Extended Ports and Uplink Ports in Junos Fusion on page 1117](#)
- [CoS on Cascade Ports in Junos Fusion on page 1118](#)

## Overview of CoS on Different Types of Ports in Junos Fusion

[Figure 30 on page 1116](#) provides an overview of packet flow through Junos Fusion and how CoS features are applied at the different ports.

*Figure 30: Junos Fusion CoS Feature Application*

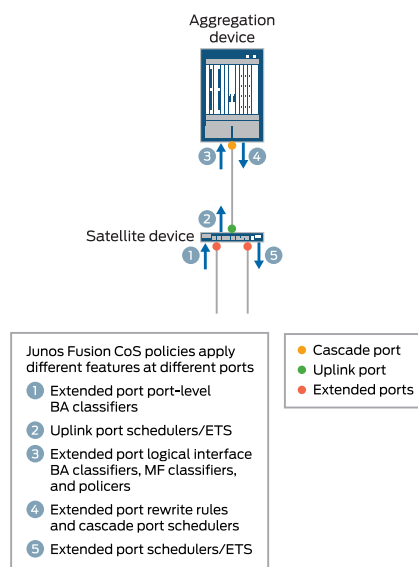

All configuration for CoS policies for Junos Fusion is done on the aggregation device. For CoS policies that you define for extended ports, however, different portions of that policy are applied at different points in a packet's path through Junos Fusion. From [Figure 30 on page 1116](#):

1. As a packet enters an extended port, any port-level (physical interface-level) behavior aggregate (BA) classifier you define for that port is applied to derive a forwarding class and packet loss priority.
2. As that packet exits the uplink port, you can apply schedulers or enhanced transmission selection (ETS) based on the port-level BA classifier assigned at the ingress extended port.
3. As the packet enters the aggregation device at the cascade port, any multifield classifiers, policers, or logical interface-level BA classifiers you define for the ingress extended port are applied.
4. As the packet exits the aggregation device at the cascade port, any rewrite rules you define for the egress extended port, as well as any schedulers you define for the cascade port, are applied. Also, the forwarding class determined in the previous step

is carried in the 801.2BR header to the satellite device and used to select the output queue at the egress extended port.

5. Finally, as the packet exits an extended port, any schedulers or ETS you define for that port are applied based on the forwarding class determined by the multifield classifiers, policers, or logical interface-level BA classifiers defined for the ingress extended port.

The following sections provide further information about implementing CoS on each port type in Junos Fusion.

## CoS on Extended Ports and Uplink Ports in Junos Fusion

As with all other software configuration in a Junos Fusion, all class of service (CoS) scheduling policies for extended ports and uplink ports on the satellite devices are provisioned on the aggregation device. Similarly, standard Junos OS CoS commands are issued on the aggregation device for retrieving extended port and uplink port CoS states and queue statistics. The aggregation device supports configuring the following CoS features for each extended port and uplink port on each satellite device:

- Behavior aggregate classifiers
- Multifield classifiers
- Input and output policers
- Forwarding classes
- Priority-based flow control (PFC)
- Enhanced transmission selection (ETS)
- Traffic control profiles
- Schedulers and scheduler maps
- Egress rewrite rules



**NOTE:** Configuring CoS policies on *satellite devices* (on both extended and uplink ports) has the following restrictions:

- IP precedence classifiers are not supported. DSCP classifiers are supported, however.
- Interpolated drop profiles are not supported.
- The **transmit-rate** option is supported for schedulers. However, the **remainder**, **rate-limit**, and **exact** options are not supported under **transmit-rate**.

While CoS features for satellite device ports are configured on the aggregation device, the actual classification, queueing, and scheduling is performed on the satellite devices. Information on actual traffic shaping is not passed back to the aggregation device. Logical interface statistics for the **show interfaces** command are collected on the aggregate

device and do not include shaping rate data. For actual traffic statistics gathered on satellite device interfaces, use the statistics for the physical interface and not the logical interface.



**NOTE:** CoS statistics are not supported on extended ports.

## CoS on Cascade Ports in Junos Fusion

When a cascade port is created, two priority groups are automatically created:

- One in-band management priority group for traffic that only flows between the aggregation device and the satellite devices, such as keepalives, for provisioning information, and for software updates.
- One for data logical priority group for regular traffic that flows into and out of Junos Fusion.

One percent (1%) of bandwidth is reserved for the management priority group. The remaining bandwidth is available to the data priority group.

The default scheduling policy is applied to the data priority group. This reserves 15 percent of the available bandwidth and buffer space for the best effort forwarding class (mapped to queue 0), 35 percent for the fcoe forwarding class (queue 3), 35 percent for the no-loss forwarding class (queue 4) and 15 percent for the network control forwarding class (queue 7). You can create custom forwarding classes and schedulers by applying a custom scheduler map to this priority group.

**Release History Table**

Release	Description
18.1R2	Beginning with Junos OS Release 18.1R2, Junos Fusion Data Center support CoS on quad-aggregation device configurations.
17.2R1	Beginning with Junos OS Release 17.2R1, Junos Fusion Data Center supports CoS on single- or dual- aggregation device configurations.

### Related Documentation

- [Junos Fusion Data Center Overview on page 3](#)
- [Understanding Junos Fusion Data Center Components on page 6](#)
- [Configuring CoS in Junos Fusion Data Center on page 1118](#)

## Configuring CoS in Junos Fusion Data Center

Junos Fusion significantly expands the number of available network interfaces on an *aggregation device* by allowing the aggregation device to add interfaces through interconnections with *satellite devices*. The entire system—the interconnected aggregation device and satellite devices—is called Junos Fusion. Junos Fusion simplifies network

administration by appearing in the network topology as a single device, and the single device is managed from a single IP address.

This topic describes how to configure CoS on the different types of ports in Junos Fusion.

This topic covers:

- [Configuring Behavior Aggregate Classifiers on Satellite Device Extended Ports on page 1119](#)
- [Configuring Rewrite Rules on Satellite Device Extended Ports on page 1120](#)
- [Changing the Default Scheduling Policy on an Aggregated Device Cascade Port on page 1121](#)
- [Configuring PFC in Junos Fusion Data Center on page 1125](#)

## Configuring Behavior Aggregate Classifiers on Satellite Device Extended Ports

Normally, you apply a behavior aggregate (BA) classifier to a logical interface on an aggregation device at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level. When traffic from a satellite device extended port reaches the aggregation device, the BA classifier configured for the logical interface level of the satellite device extended port is applied the same as it is for traffic from other non-extended ports to help determine the forwarding class of the traffic; policers and multifield classifiers can also factor in determining the forwarding class of the traffic. When the aggregation device sends the traffic out to the satellite device, the forwarding class is carried in the 801.2BR header. The satellite device then uses the forwarding class to select the output queue at the *egress extended port*.

You can also apply a BA classifier at the physical interface level of an extended port. This classifier is used to determine the output queue at the *uplink port* of the satellite device.



**NOTE:** IP precedence classifiers are not supported on extended ports at the physical interface level. DSCP classifiers are supported, however.



**NOTE:** You cannot apply a physical interface-level classifier on an aggregation device local port.

To add a behavior aggregate classifier to the physical interface level of a satellite device extended port in Junos Fusion:

1. Define the classifier.

```
[edit class-of-service]
user@agg-device#set classifiers dscp dscp-1 forwarding-class best-effort-3
loss-priority low code-points 001010
```

2. Apply the classifier to the physical extended port.

```
[edit class-of-service]
user@agg-device#set interfaces xe-100/0/33 classifiers dscp dscp-1
```

3. Commit the changes and then confirm the configuration.

```
[edit class-of-service]
user@agg-device# show
classifiers {
  dscp dscp-1 {
    forwarding-class best-effort-3 {
      loss-priority low code-points 001010;
    }
  }
}
interfaces {
  xe-100/0/33 {
    classifiers {
      dscp dscp-1;
    }
  }
}
```

In the above configuration example, packets entering port xe-100/0/33 with a DSCP value of **001010** will be assigned a forwarding class of **best-effort-3** to select the output queue at the uplink port as the packet travels from the satellite device to the aggregation device.

- See Also**
- [Understanding Junos Fusion Ports on page 12](#)
  - *Understanding How Behavior Aggregate Classifiers Prioritize Trusted Traffic*
  - *Overview of Assigning Service Levels to Packets Based on Multiple Packet Header Fields*

## Configuring Rewrite Rules on Satellite Device Extended Ports

You apply rewrite rules to logical interfaces on satellite device extended ports.

To add a rewrite rule to a satellite device extended port in a Junos Fusion:

1. Define the rewrite rule.

```
[edit class-of-service]
user@agg-device#set rewrite-rules ieee-802.1 rewrite1p forwarding-class best-effort
loss-priority low code-point 010
```

2. Apply the rewrite rule to a logical interface.

```
[edit class-of-service]
user@agg-device#set interfaces xe-108/0/47 unit 0 rewrite-rules ieee-802.1 rewrite1p
```

3. Commit the changes and then confirm the configuration.

```
[edit class-of-service]
user@agg-device# show
rewrite-rules {
    ieee-802.1 rewrite1p {
        forwarding-class best-effort {
            loss-priority low code-point 010;
        }
    }
}
interfaces {
    xe-108/0/47 {
        unit 0 {
            rewrite-rules {
                ieee-802.1 rewrite-1p;
            }
        }
    }
}
```

In Junos OS, rewrite rules only look at the forwarding class and packet loss priority of the packet (as assigned by a behavior aggregate or multifield classifier at ingress), not at the incoming CoS value, to determine the CoS value to write to the packet header at egress. The above configuration means that, for any packet exiting the xe-108/0/47.0 interface that has a forwarding class of **best-effort** and a packet loss priority of **low**, the ieee-802.1 CoS value will be rewritten to **010**.

- See Also**
- [Understanding Junos Fusion Ports on page 12](#)
  - *Rewriting Packet Headers to Ensure Forwarding Behavior*

## Changing the Default Scheduling Policy on an Aggregated Device Cascade Port

When a cascade port is created, two logical interfaces are automatically created:

- One in-band management logical interface (assigned unit 32769) for traffic that only flows between the aggregation device and the satellite devices, such as keepalives, for provisioning information, and for software updates.
- One for data logical interface (assigned unit 32770) for regular traffic that flows into and out of Junos Fusion.

Let's say, for example, that interface xe-0/0/1 is configured as a cascade port. The command **show interfaces xe-0/0/1 terse** produces output similar to the following:

```
user@agg-device# run show interfaces xe-0/0/1 terse
Interface      Admin Link Proto  Local      Remote
xe-0/0/1       up    up
xe-0/0/1.32769 up    up   inet   10.0.0.5/30
xe-0/0/1.32770 up    up   bridge
```

The control logical interface (unit 32769) is automatically assigned an internal traffic control profile (`__cp_control_tc_prof`) that guarantees 50 Mbps of bandwidth for the

logical interface, a 10 percent shaping rate, and the default scheduling policy. The default scheduling policy is applied to the data logical interface. For example:

```
user@agg-device# run show class-of-service interface xe-0/0/1
Physical interface: xe-0/0/1, Index: 144
Maximum usable queues: 8, Queues in use: 4
  Scheduler map: <default>, Index: 2
  Congestion-notification: Disabled

  Logical interface: xe-0/0/1.32769, Index: 344
Object      Name                                     Type      Index
Traffic-control-profile  __cp_control_tc_prof  Output    17227
Classifier      ipprec-compatibility  ip        13

  Logical interface: xe-0/0/1.32770, Index: 343
Object      Name                                     Type      Index
Scheduler-map  <default>                Output    2
```

and:

```
user@agg-device# run show class-of-service scheduler-hierarchy interface xe-0/0/1
```

Interface/ Resource name	Shaping rate kbits	Guaranteed rate kbits	Guaranteed/ Excess priority		Queue weight	Excess weight high/low	
xe-0/0/1.32770	10000000	0				1	1
BE	10000000	0	Low	Low	118		
NC	10000000	0	Low	Low	6		
xe-0/0/1.32769	1000000	50000				62	62
BE	1000000	47500	Low	Low	118		
NC	1000000	2500	Low	Low	6		

You can create custom forwarding classes and schedulers for the data logical interface by applying a customer scheduler map to that logical interface. For example, to apply a customer scheduler policy to the data logical interface:

1. Create customer schedulers.

```
[edit class-of-service]
user@ex9200-agg-device#set schedulers AF_SCH_CORE transmit-rate percent 40
user@ex9200-agg-device#set schedulers AF_SCH_CORE buffer-size percent 40
user@ex9200-agg-device#set schedulers AF_SCH_CORE priority medium-high
user@ex9200-agg-device#set schedulers BE_SCH_CORE transmit-rate percent 10
user@ex9200-agg-device#set schedulers BE_SCH_CORE buffer-size percent 10
user@ex9200-agg-device#set schedulers BE_SCH_CORE priority low
user@ex9200-agg-device#set schedulers EF_SCH_CORE transmit-rate percent 40
user@ex9200-agg-device#set schedulers EF_SCH_CORE buffer-size percent 40
user@ex9200-agg-device#set schedulers EF_SCH_CORE priority medium-low
user@ex9200-agg-device#set schedulers NC_SCH_CORE transmit-rate percent 10
user@ex9200-agg-device#set schedulers NC_SCH_CORE buffer-size percent 10
user@ex9200-agg-device#set schedulers NC_SCH_CORE priority high
```

2. Create a scheduler map.



```
[edit class-of-service]
user@ex9200-agg-device#set scheduler-maps CORE_SCHED_MAP forwarding-class
BE scheduler BE_SCH_CORE
user@ex9200-agg-device#set scheduler-maps CORE_SCHED_MAP forwarding-class
EF scheduler EF_SCH_CORE
user@ex9200-agg-device#set scheduler-maps CORE_SCHED_MAP forwarding-class
AF scheduler AF_SCH_CORE
user@ex9200-agg-device#set scheduler-maps CORE_SCHED_MAP forwarding-class
NC scheduler NC_SCH_CORE
```

3. Apply the scheduler map to the data logical interface.

```
[edit class-of-service]
user@ex9200-agg-device#set interfaces xe-0/0/1 unit 32770 scheduler-map
CORE_SCHED_MAP
```

4. Commit the changes and then confirm the configuration.

```
[edit class-of-service]
user@agg-device# show
interfaces {
  xe-0/0/1 {
    unit 32770 {
      scheduler-map CORE_SCHED_MAP;
    }
  }
}
scheduler-maps {
  CORE_SCHED_MAP {
    forwarding-class BE scheduler BE_SCH_CORE;
    forwarding-class EF scheduler EF_SCH_CORE;
    forwarding-class AF scheduler AF_SCH_CORE;
    forwarding-class NC scheduler NC_SCH_CORE;
  }
}
schedulers {
  BE_SCH_CORE {
    transmit-rate percent 10;
    buffer-size percent 10;
    priority low;
  }
  EF_SCH_CORE {
    transmit-rate percent 40;
    buffer-size percent 40;
    priority medium-low;
  }
  AF_SCH_CORE {
    transmit-rate percent 40;
    buffer-size percent 40;
    priority medium-high;
  }
  NC_SCH_CORE {
    transmit-rate percent 10;
    buffer-size percent 10;
    priority high;
  }
}
```

```
}
}
```

5. Verify your changes.

```
user@agg-device# run show class-of-service interface xe-0/0/1
Physical interface: xe-0/0/1, Index: 144
Maximum usable queues: 8, Queues in use: 4
  Scheduler map: <default>, Index: 2
  Congestion-notification: Disabled

  Logical interface: xe-0/0/1.32769, Index: 344
Object      Name                               Type      Index
Traffic-control-profile  __cp_control_tc_prof  Output    17227
Classifier      ipprec-compatibility  ip        13

  Logical interface: xe-0/0/1.32770, Index: 343
Object      Name                               Type      Index
Scheduler-map  CORE_SCHED_MAP       Output    23433
```

and:

```
user@agg-device# run show class-of-service scheduler-hierarchy interface
xe-0/0/1
Interface/           Shaping Guaranteed  Guaranteed/  Queue  Excess
Resource name        rate      rate      Excess    weight weight
                        kbits      kbits      priority      high/low

  xe-0/0/1.32770      10000000      0
1
  BE                  10000000      0      Low  Low    12
  EF                  10000000      0      Medium Low    50
  AF                  10000000      0      Medium Low    50
  NC                  10000000      0      High  High   12
  xe-0/0/1.32769      1000000      50000
62
  BE                  1000000      47500      Low  Low   118
  NC                  1000000      2500      Low  Low    6
```

- See Also**
- *How Schedulers Define Output Queue Properties*
  - *Default Schedulers Overview*

## Configuring PFC in Junos Fusion Data Center

Priority-based flow control (PFC) helps ensure lossless transport across data center bridging interfaces by pausing incoming traffic when output queue buffers fill to a certain threshold. PFC is only available in Junos Fusion Data Center on forwarding paths through satellite devices that support PFC and lossless forwarding classes.

To guarantee lossless behavior when configuring PFC in Junos Fusion Data Center:

- PFC must be enabled end to end (including the cascade ports, uplink ports, and extended ports) for the lossless traffic path.
- Redundant cascade links are available and the destination extended port next hop can always be resolved to a *local* PFC-enabled cascade port (so packets are not forwarded through another aggregation device).

PFC is implicitly enabled on cascade ports and uplink ports for all default and custom no-loss forwarding classes. To enable PFC end to end in Junos Fusion Data Center for default forwarding classes, you need only enable PFC on extended ports.



**NOTE:** To configure end-to-end PFC with a custom-configured forwarding class, you must also configure a custom scheduler on the cascade ports, and configure classifiers on the extended port physical interface and logical interface to map the traffic to the correct no-loss forwarding queues. (See *Assigning CoS Components to Interfaces*.)

To apply PFC to a satellite device extended port in Junos Fusion Data Center:

1. Define the congestion notification profile.

```
[edit class-of-service]
user@agg-device#set congestion-notification-profile lossless-cnp input ieee-802.1
code-point 011 pfc
user@agg-device#set congestion-notification-profile lossless-cnp input ieee-802.1
code-point 100 pfc
```

2. Apply the congestion notification profile to an extended port interface.

```
[edit class-of-service]
user@agg-device#set interfaces xe-100/0/20 congestion-notification-profile
lossless-cnp
```

3. Commit the changes and then confirm the configuration.

```
[edit class-of-service]
user@agg-device# show
congestion-notification profile {
  lossless-cnp {
    input {
```

```
        ieee-802.1 {
            code-point 011 {
                pfc;
            }
            code-point 100 {
                pfc;
            }
        }
    }
}
interfaces {
    xe-100/0/20 {
        congestion-notification-profile {
            lossless-cnp;
        }
    }
}
```

Enable PFC end-to-end.

**Related Documentation**

- [Understanding CoS in Junos Fusion Data Center on page 1115](#)

## CHAPTER 22

# Uplink Failure Detection on Junos Fusion Data Center

- [Overview of Uplink Failure Detection on a Junos Fusion on page 1127](#)
- [Configuring Uplink Failure Detection on a Junos Fusion on page 1129](#)
- [candidate-uplink-port-policy \(satellite-policies\) on page 1134](#)
- [holddown \(candidate-uplink-port-profile\) on page 1135](#)
- [minimum-links \(candidate-uplink-port-profile\) on page 1136](#)
- [pic \(satellite-policies port-group-alias\) on page 1137](#)
- [port \(satellite-policies port-group-alias\) on page 1138](#)
- [port-group-alias \(satellite-policies\) on page 1139](#)
- [product-model \(Junos Fusion\) on page 1140](#)
- [satellite-policies on page 1141](#)
- [term \(candidate-uplink-policy\) on page 1143](#)
- [uplink-failure-detection \(Junos Fusion\) on page 1144](#)
- [uplink-port-group \(Junos Fusion\) on page 1145](#)
- [show chassis satellite](#)

## Overview of Uplink Failure Detection on a Junos Fusion

---

The uplink failure detection feature on a Junos Fusion enables satellite devices to detect link failures on the uplink interfaces used to connect to aggregation devices. When uplink failure detection detects uplink failure on a satellite device, all of the device's extended ports (which connect to host devices) are shut down. Shutting down the extended ports allows downstream host devices to more quickly identify and adapt to the outage. For example, when a host device is connected to two satellite devices, and uplink failure detection shuts down the extended ports on one satellite device, the host device can more quickly recognize the uplink failure and redirect traffic through the other, active satellite device.

You can configure uplink failure detection globally, for all satellite devices of a Junos Fusion, and for individual satellite devices. Uplink failure detection configuration at the satellite device level overrides the global uplink failure detection configuration.

Uplink failure detection configuration allows you to configure these options:

- The minimum number of active uplink ports a satellite device must have to remain active. The default is one active uplink port. You can use this option to specify more minimum active ports.
- The amount of time uplink failure detection waits to try to re-enable disabled extended ports. This wait time is called a hold-down period. It is intended to avoid port flapping on the extended ports when uplink port connectivity is unstable. The default hold-down period is six seconds.

Uplink failure detection must know which ports on a satellite device can be used as uplink ports. These are called candidate uplink ports. [Table 55 on page 1128](#) shows the default set of candidate uplink ports that uplink failure detection selects for failure detection. If you choose not to use the default uplink ports for your satellite devices, you need to specify which uplink ports you want to use for uplink failure detection by creating a candidate uplink port profile and applying it to the satellite device's uplink failure detection configuration.



**CAUTION:** The physically connected uplink ports on a satellite device must be defined as candidate uplink ports in the Junos Fusion configuration. If the uplink ports on a satellite device are not configured as candidate uplink ports, uplink failure detection cannot be enabled on the device, and a system log message is generated.

**Table 55: UFD Default Uplink Interfaces for Satellite Devices**

Device Type	Default Uplink Interfaces
EX4300-24T (4 ports each on PIC1 and PIC2)	1/0 through 1/3 and 2/0 through 2/3
EX4300-32F (4 ports on PIC 0, 2 ports on PIC 1 and 8 ports on PIC 2)	0/32 through 0/35 1/0 through 1/1 2/0 through 2/7
EX4300-48T (4 ports each on PIC1 and PIC2)	1/0 through 1/3 and 2/0 through 2/3
EX4300-48T-BF (4 ports each on PIC1 and PIC2)	1/0 through 1/3 and 2/0 through 2/3
QFX5100-24Q-2P (4 ports on PIC 0)	0/20 through 0/23
QFX5100-48S-6Q (6 QSFP+ ports)	0/48 through 0/53
QFX5100-48T-6Q (6 QSFP+ ports)	0/48 through 0/53
QFX5100-96S-8Q (8 QSFP+ ports)	0/96 through 0/103

- Related Documentation**
- [Configuring Uplink Failure Detection on a Junos Fusion on page 1129](#)

## Configuring Uplink Failure Detection on a Junos Fusion

The uplink failure detection feature on a Junos Fusion enables satellite devices to detect link failures on the uplink interfaces used to connect to aggregation devices. When uplink failure detection detects uplink failure on a satellite device, all of the device's extended ports (which connect to host devices) are shut down.

The following topics describe how to configure uplink failure detection on a Junos Fusion:

- [Enabling Uplink Failure Detection on a Junos Fusion on page 1129](#)
- [Configuring a Candidate Uplink Port Policy on page 1130](#)
- [Configuring an Uplink Port Group on page 1132](#)

### Enabling Uplink Failure Detection on a Junos Fusion

You can enable uplink failure detection on a Junos Fusion at the following levels in the configuration hierarchy:

- To enable uplink failure detection globally, for all satellite devices in the Junos Fusion, include the uplink failure detection configuration at the **[edit chassis satellite-management]** level.
- To enable uplink failure detection on a specific satellite device, include the uplink failure detection configuration at the **[edit chassis satellite-management fpc slot-id]** level. Uplink failure detection configuration applied to a satellite device overrides the global uplink failure detection configuration.

Uplink failure detection configuration syntax is the same at all hierarchy levels. This topic shows how to configure uplink failure detection at the global level, but you can also apply uplink failure detection configuration at the satellite device level.

To enable uplink failure detection on a Junos Fusion, do the following on the fabric's aggregation device:

1. Enable uplink failure detection with default settings:

```
[edit chassis satellite-management]
user@switch# set uplink-failure-detection
```

The default configuration parameters are described in [Table 56 on page 1130](#).

2. (Optional) Apply custom uplink failure detection settings by specifying a candidate uplink port policy:

```
[edit chassis satellite-management uplink-failure-detection]
user@switch# candidate-uplink-policy policy-name
```

For information about configuring candidate uplink policies, see [“Configuring a Candidate Uplink Port Policy” on page 1130](#).

*Table 56: Junos Fusion Uplink Failure Detection Default Configuration*

Configuration Parameter	Description	Default
<b>holddown</b>	Configures the interval of time uplink failure detection waits before trying to re-enable a satellite device's extended ports after shutting them down due to an uplink port failure.	6 seconds
<b>minimum-links</b>	Configures the minimum number of active uplink ports a satellite device must have. If a satellite device has fewer than this number of active uplink ports, uplink failure detection shuts down its extended ports.	1 link
<b>uplink-port-group</b>	Defines a set of candidate uplink ports to assign to satellite devices.	Each satellite device model has a set of default uplink ports. You only need to assign uplink ports if you do not want to use the default ports. See <a href="#">Table 55 on page 1128</a> for the default uplink ports by device.

## Configuring a Candidate Uplink Port Policy

A candidate uplink port policy contains uplink failure detection uplink port configuration that you can apply to satellite devices to override the default uplink failure detection behavior.

You can enter configuration statements in a candidate uplink port policy at these levels of the hierarchy:

- Enter configuration statements at the level **[edit policy-options satellite-policies candidate-uplink-port-policy *policy-name*]** to override the default uplink failure detection behavior. Statements configured at this level are applied if the policy is applied to a satellite device that does not match a **product-model** statement in any term in the policy. If the policy contains no terms, the statements at this level are applied to every satellite device to which the policy is applied.
- Create terms within the candidate uplink port policy at the level **[edit policy-options satellite-policies candidate-uplink-port-policy *policy-name* term *term-name*]**. Use terms to apply different uplink failure detection configurations to certain satellite devices, based on their product model. Each term contains match criteria that is compared against the model name of each satellite device to which the policy is applied. If the criteria matches the device model, the configuration specified in the term is applied to the device. Terms are evaluated in the order they appear in the configuration. The first term that matches a satellite device is applied to the device.

Configuring a candidate uplink port policy is described in the following sections:

- [Configuring Candidate Uplink Port Policy Default Configuration on page 1131](#)
- [Configuring Candidate Uplink Port Policy Terms on page 1131](#)



### Configuring Candidate Uplink Port Policy Default Configuration

Uplink failure detection has the following default configuration parameters that apply if you enable uplink failure detection with no additional configuration:

- The default configuration settings are described in [Table 56 on page 1130](#).
- The default uplink ports that are assigned to each satellite device type are described in [“Overview of Uplink Failure Detection on a Junos Fusion” on page 1127](#).

A candidate uplink port policy can contain configuration statements that override the defaults if the policy is applied to a satellite device that does not match a **product-model** statement in any term in the policy.

To configure a candidate uplink port policy default configuration:

1. (Optional) Specify the interval of time uplink failure detection waits before trying to re-enable a satellite device's extended ports after shutting them down due to an uplink port failure:

```
[edit policy-options satellite-policies candidate-uplink-port-policy
policy-name]
user@switch# set holddown interval
```

2. (Optional) Specify the minimum number of active uplink ports a satellite device must have. If a satellite device has fewer than this number of active uplink ports, uplink failure detection shuts down its extended ports:

```
[edit policy-options satellite-policies candidate-uplink-port-policy
policy-name]
user@switch# set minimum-links link-count
```

3. (Optional) Specify an uplink port group to assign to satellite devices:

```
[edit policy-options satellite-policies candidate-uplink-port-policy
policy-name]
user@switch# set uplink-port-group group-name
```

For information about configuring an uplink port group, see [“Configuring an Uplink Port Group” on page 1132](#).

### Configuring Candidate Uplink Port Policy Terms

You can configure terms in a candidate uplink port policy to apply uplink failure detection configuration to certain satellite devices, based on their device model. For example, you can create a term that matches all QFX 5100 Series switches. When the policy is applied to a QFX 5100 Series switch, the other configuration statements in the term are applied to the switch. If the policy is applied to satellite devices that are not QFX 5100 Series switches, the configuration statements in the term are not applied. When a candidate uplink port policy has multiple terms, the terms are evaluated in the order they appear in the configuration. The first term that matches a satellite device is applied to that satellite device.

To configure a candidate uplink port policy term:

1. Specify which device models the term will apply to:

```
[edit policy-options satellite-policies candidate-uplink-port-policy policy-name
term term-name from]
user@switch# set product-model model-name
```

The other configuration statements in the term are only applied to satellite devices whose device model matches the match term *model-name*.

The match term *model-name* can be a complete device model name, to match that device model exactly. You can also use the wildcard character (\*) in the match term to match zero or more of any character.

Some examples of using the wildcard character in the match term:

- To apply the satellite policy to all EX 4300 Series switches in the satellite device role, enter **EX4300\*** as the *model-name*.
  - To apply the satellite policy to all QFX 5100 Series switches in the satellite device role, enter **QFX5100\*** as the *model-name*.
  - To apply the satellite policy to QFX 5100 Series switches with model names that start with QFX5100-96, enter **QFX5100-96\*** as the *model-name*.
2. (Optional) Specify the interval of time uplink failure detection waits to re-enable a satellite device's extended ports after shutting them down due to an uplink port failure:

```
[edit policy-options satellite-policies candidate-uplink-port-policy policy-name
term term-name from]
user@switch# set holddown interval
```

3. (Optional) Specify the minimum number of active uplink ports a satellite device must have. If a satellite device has fewer than this number of active uplink ports, uplink failure detection shuts down its extended ports:

```
[edit policy-options satellite-policies candidate-uplink-port-policy
policy-name]
user@switch# set minimum-links link-count
```

4. (Optional) Specify an uplink port group to assign to satellite devices:

```
[edit policy-options satellite-policies candidate-uplink-port-policy policy-name
term term-name from]
user@switch# set uplink-port-group group-name
```

For information about configuring an uplink port group, see [“Configuring an Uplink Port Group” on page 1132](#).

## Configuring an Uplink Port Group

An uplink port group defines a set of candidate uplink ports on a satellite device. Uplink port groups are assigned to candidate uplink port policies, which are assigned to satellite devices. Every satellite device type has default candidate uplink ports, which are described

in [“Overview of Uplink Failure Detection on a Junos Fusion” on page 1127](#). You do not need to create uplink ports groups if you want to use the default candidate uplink ports on satellite devices.



**CAUTION:** The physically connected uplink ports on a satellite device must be defined as candidate uplink ports in the Junos Fusion configuration. If the uplink ports on a satellite device are not configured as candidate uplink ports, uplink failure detection cannot be enabled on the device, and a system log message is generated.

To create an uplink port group:

1. Specify the uplink port group name:

```
[edit policy-options satellite-policies]
user@switch# set port-group-alias port-group-alias-name
```

2. Configure the PICs that will contain ports to be identified as candidate uplink ports:

```
[edit policy-options satellite-policies port-group-alias port-group-alias-name]
user@switch# set pic pic-number
```

3. Configure the ports on the PICs that will be identified as candidate uplink ports:

```
[edit policy-options satellite-policies port-group-alias port-group-alias-name
pic pic-number]
user@switch# set port [port-number | port-number-range | all]
```

#### Related Documentation

- [Overview of Uplink Failure Detection on a Junos Fusion on page 1127](#)

## candidate-uplink-port-policy (satellite-policies)

<b>Syntax</b>	<pre> candidate-uplink-port-policy <i>policy-name</i>{   &lt;holddown&gt;<i>holddown-time</i>&gt;;   &lt;minimum-links&gt;<i>number-of-links</i>&gt;;   &lt;uplink-port-group&gt; <i>uplink-port-group-name</i>&gt;;   term <i>term-name</i> {     from {       product-model <i>model-name</i>;       &lt;holddown&gt; <i>holddown-time</i>&gt;;       &lt;minimum-links&gt; <i>number-of-links</i>&gt;;       &lt;uplink-port-group&gt; <i>uplink-port-group-name</i>&gt;;     }   } } </pre>
<b>Hierarchy Level</b>	[edit policy-options <a href="#">satellite-policies</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3.
<b>Description</b>	Configures a candidate uplink port profile, which contains uplink failure detection feature configuration that can be applied to satellite devices in a Junos Fusion.
<b>Default</b>	There is no configured candidate uplink port profile, by default.
<b>Options</b>	<p><b><i>policy-name</i></b>—User-defined name for the policy.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Junos Fusion Provider Edge</i></li> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## holddown (candidate-uplink-port-profile)

<b>Syntax</b>	<code>holddown <i>interval</i>;</code>
<b>Hierarchy Level</b>	<code>[edit policy-options satellite-policies <b>candidate-uplink-port-profile</b> <i>profile-name</i>]</code> <code>[edit policy-options satellite-policies candidate-uplink-port-profile <i>profile-name</i> <b>term</b> <i>term-name</i> from]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3.
<b>Description</b>	Configures the interval of time uplink failure detection waits before trying to try re-enable a satellite device's extended ports after shutting them down due to an uplink port failure. It is intended to avoid port flapping on the extended ports when uplink port connectivity is unstable.
<b>Default</b>	The default holddown interval is 6 seconds.
<b>Options</b>	<i>interval</i> —The holddown interval, in seconds. Valid values are 1-600 seconds.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## minimum-links (candidate-uplink-port-profile)

---

<b>Syntax</b>	<code>minimum-links <i>link-count</i>;</code>
<b>Hierarchy Level</b>	<code>[edit policy-options satellite-policies <a href="#">candidate-uplink-port-profile</a> <i>profile-name</i>]</code> <code>[edit policy-options satellite-policies candidate-uplink-port-profile <i>profile-name</i> <a href="#">term</a> <i>term-name</i> from]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3.
<b>Description</b>	Configures the minimum number of active uplink ports a satellite device must have. If a satellite device has fewer than this number of active uplink ports, uplink failure detection shuts down its extended ports.
<b>Default</b>	The default number of minimum links is 1.
<b>Options</b>	<i>link-count</i> —Specifies the minimum number of active uplink ports a satellite device must have. Valid values are 1-32 links.
<b>Required Privilege Level</b>	<code>admin</code> —To view this statement in the configuration. <code>admin-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Junos Fusion Provider Edge</i></li><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li></ul>

## pic (satellite-policies port-group-alias)

<b>Syntax</b>	<pre>pic <i>pic-number</i> {   port [<i>port-number</i>   <i>port-number-range</i>   all]; }</pre>
<b>Hierarchy Level</b>	[edit policy-options satellite-policies <b>port-group-alias</b> <i>port-group-alias-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3.
<b>Description</b>	<p>Specify the PIC number to apply a port group alias for satellite policies in a Junos Fusion.</p> <p>You must also specify the ports on the PIC when you use this statement.</p>
<b>Options</b>	<p><b><i>pic-number</i></b>—The PIC number on the satellite device.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## port (satellite-policies port-group-alias)

---

Syntax	port [ <i>port-number</i>   <i>port-number-range</i>   all];
Hierarchy Level	[edit policy-options satellite-policies port-group-alias <i>port-group-alias-name</i> <b>pic</b> <i>pic-number</i> ]
Release Information	Statement introduced in Junos OS Release 14.2R3.
Description	<p>Specify the port or ports to apply a port group alias for satellite policies in a Junos Fusion.</p> <p>You must also specify the PIC when you use this statement.</p>
Options	<p><b><i>port-number</i></b>—The port number on the PIC on the satellite device.</p> <p><b><i>port-number-range</i></b>—A range of port numbers on the PIC.</p> <p><b>all</b>—All ports on the PIC.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"><li>• <i>Configuring Junos Fusion Provider Edge</i></li><li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li></ul>



## port-group-alias (satellite-policies)

**Syntax**

```
port-group-alias port-group-alias-name {
  pic pic-number {
    port [port-number | port-number-range | all];
  }
}
```

**Hierarchy Level** [edit policy-options [satellite-policies](#)]

**Release Information** Statement introduced in Junos OS Release 14.2R3.

**Description** Configure a port group alias for satellite policies in a Junos Fusion.

A port group alias is used to define the candidate uplink ports on satellite devices that use the satellite policy.



**CAUTION:** The physically connected uplink ports on a satellite device must be defined as candidate uplink ports in the Junos Fusion configuration. If the uplink ports on a satellite device are not configured as candidate uplink ports, uplink failure detection cannot be enabled on the device, and a system log message is generated.

A port group alias is associated with a satellite policy using the **set uplink-port-group uplink-port-group-name** statement in the [edit policy-options [satellite-policies](#) candidate-uplink-policy *policy-name*] hierarchy.

**Default** Each satellite device model has a set of default uplink ports (see “[Overview of Uplink Failure Detection on a Junos Fusion](#)” on page 1127). You only need to assign an uplink port group to a satellite device if you do not want to use the default uplink ports.

**Options** ***port-group-alias-name***—The user-defined name of the port group alias.

The remaining statements are explained separately.

**Required Privilege Level** admin—To view this statement in the configuration.  
admin-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Junos Fusion Provider Edge](#)
- [Configuring or Expanding a Junos Fusion Enterprise](#)

## product-model (Junos Fusion)

Syntax	<code>product-model <i>model-name</i>;</code>
Hierarchy Level	<p>[edit policy-options satellite-policies candidate-uplink-port-policy <i>policy-name</i> <b>term</b> <i>term-name</i> from]</p> <p>[edit policy-options satellite-policies candidate-uplink-port-policy <i>policy-name</i> <b>term</b> <i>term-name</i> from]</p> <p>[edit policy-options satellite-policies forwarding-policy <i>policy-name</i> <b>term</b> <i>term-name</i> from]</p>
Release Information	Statement introduced in Junos OS Release 14.2R3.
Description	<p>Define the satellite device product models that will use the candidate uplink port policy defined in the <b>from</b> statement.</p> <p>The other statements in the same <b>from</b> statement are applied to satellite devices that match the <b>product-model</b> <i>model-name</i> definition. Those configuration statements are not applied to satellite devices that do not match the definition.</p>
Options	<p><b>model-name</b>—Defines the satellite device product models that will use the candidate uplink port policy. It can be a complete device model name, to match that device model exactly. You can also use the wildcard character (*) in the match term to match zero or more of any character.</p> <p>Some examples of using the wildcard character in the match term:</p> <ul style="list-style-type: none"> <li>To apply the satellite policy to all EX4300 switches in the satellite device role, enter <b>EX4300*</b> as the <i>model-name</i>.</li> <li>To apply the satellite policy to all QFX5100 switches in the satellite device role, enter <b>QFX5100*</b> as the <i>model-name</i>.</li> <li>To apply the satellite policy to QFX5100 switches with model names that start with QFX5100-96, enter <b>QFX5100-96*</b> as the <i>model-name</i>.</li> </ul>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li><i>Configuring Junos Fusion Provider Edge</i></li> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## satellite-policies

```
Syntax satellite-policies {
  <candidate-uplink-port-profile policy-name> {
    <holddown holddown-time>;
    <minimum-links number-of-links>;
    <uplink-port-group uplink-port-group-name>;
    term term-name {
      from {
        product-model model-name;
        <holddown holddown-time>;
        <minimum-links number-of-links>;
        <uplink-port-group uplink-port-group-name>;
      }
    }
  }
  environment-monitoring-policy policy-name {
    <alarm <linkdown>
    term term-name {
      from {
        product-model model-name;
      }
    }
  }
  forwarding-policy {
    policy-name {
      port-group-extended name;
      filter filter-name;
      mirror-egress port-group-mirror port-group-mirror;
      mirror-ingress port-group-mirror port-group-mirror;
      port-group-uplink port-group-uplink-name
        holddowntime;
      minimum-links number;
      term term-name {
        from {
          port-group-extended name;
          filter filter-name;
          mirror-egress port-group-mirror port-group-mirror;
          mirror-ingress port-group-mirror port-group-mirror;
          port-group-uplink port-group-uplink-name
            holddowntime;
          minimum-links number;
          product-model model-name;
          port-group-extended port-group-alias-name {
            port-group-uplink port-group-alias-name;
          }
        }
      }
    }
  }
  port-group-alias port-group-alias-name {
    pic pic-number {
      port [port-number | port-number-range | all];
    }
  }
}
```

```
}  
}
```

**Hierarchy Level** [edit policy-options]

**Release Information** Statement introduced in Junos OS Release 14.2R3 for Junos Fusion.

**Description** Configure satellite policies for a Junos Fusion.

**Options** The remaining statements are explained separately.

**Required Privilege Level** admin—To view this statement in the configuration.  
admin-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Junos Fusion Provider Edge*
- *Configuring or Expanding a Junos Fusion Enterprise*


## term (candidate-uplink-policy)

Syntax	<pre> term term-name{   from {     product-model model-name;     &lt;holddown holddown-time&gt;;     &lt;minimum-links number-of-links&gt;;     &lt;uplink-port-group uplink-port-group-name&gt;;   } } </pre>
Hierarchy Level	[edit policy-options satellite-policies <b>candidate-uplink-port-profile</b> policy-name]
Release Information	Statement introduced in Junos OS Release 14.2R3.
Description	<p>Create and configure a term in a candidate uplink satellite policy within a Junos Fusion.</p> <p>A term in a candidate uplink port policy in a Junos Fusion is used to apply an uplink failure detection configuration to certain satellite devices, based on their product model only. The more complex options that are available for other policies in Junos OS—such as the terms available for routing policies—are not available for candidate uplink port policies.</p>
Options	<p><b>term-name</b>—The user-defined name of the term.</p> <p>A <i>term</i> is a named structure in which match conditions and configuration statements are defined. A candidate uplink policy can contain multiple terms. The terms are evaluated in the order they appear in the configuration. The first term that matches a satellite device is applied to that satellite device.</p> <p><b>from</b>—The statements under the <b>from</b> statement define the satellite device model match criteria and uplink failure detection configuration for the term. Each term can contain only one <b>from</b> statement.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li>Configuring Junos Fusion Provider Edge</li> <li>Configuring or Expanding a Junos Fusion Enterprise</li> </ul>

## uplink-failure-detection (Junos Fusion)

<b>Syntax</b>	<pre>uplink-failure-detection {   &lt;candidate-uplink-policy <i>policy-name</i>&gt;; }</pre>
<b>Hierarchy Level</b>	<pre>[edit chassis <b>satellite-management</b>] [edit chassis <b>satellite-management fpc slot-id</b>]</pre>
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3.
<b>Description</b>	<p>Enables uplink failure detection in a Junos Fusion.</p> <p>The uplink failure detection feature on a Junos Fusion enables satellite devices to detect link failures on the uplink interfaces used to connect to aggregation devices. When uplink failure detection detects uplink failure on a satellite device, all of the device's extended ports (which connect to host devices) are shut down. Shutting down the extended ports allows downstream host devices to more quickly identify and adapt to the outage. For example, when a host device is connected to two satellite devices, and uplink failure detection shuts down the extended ports on one satellite device, the host device can more quickly recognize the uplink failure and redirect traffic through the other, active satellite device.</p> <p>You can configure uplink failure detection in a Junos Fusion for a single satellite device using the <b>fpc slot-id</b> option. If uplink failure detection is enabled without specifying the <b>fpc slot-id</b> option, uplink failure detection is enabled for all cascade ports on the aggregation device.</p> <p>If you enable uplink failure detection without the <b>candidate-uplink-policy</b> substatement, the default uplink failure detection settings are applied. To configure non-default uplink failure detection settings, include the <b>candidate-uplink-policy</b> substatement. Candidate uplink policies are configured under <b>[edit policy-options satellite-policies candidate-uplink-port-policy]</b>.</p>
<b>Default</b>	Uplink failure detection is disabled.
<b>Options</b>	The remaining statements are explained separately.
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Junos Fusion Provider Edge</i></li> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## uplink-port-group (Junos Fusion)

<b>Syntax</b>	<code>uplink-port-group <i>group-name</i>;</code>
<b>Hierarchy Level</b>	<code>[edit policy-options satellite-policies <a href="#">candidate-uplink-port-profile</a> <i>profile-name</i>]</code> <code>[edit policy-options satellite-policies candidate-uplink-port-profile <i>profile-name</i> <a href="#">term</a> <i>term-name</i> from]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 14.2R3.
<b>Description</b>	<p>In Junos Fusion configuration, assign an uplink port group to a candidate uplink port policy.</p> <p>An uplink port group defines a set of candidate uplink ports that are assigned to satellite devices to which the candidate uplink port group is assigned.</p>
	<div>  <p><b>CAUTION:</b> The physically connected uplink ports on a satellite device must be defined as candidate uplink ports in the Junos Fusion configuration. If the uplink ports on a satellite device are not configured as candidate uplink ports, uplink failure detection cannot be enabled on the device, and a system log message is generated.</p> </div>
	<p>Uplink port groups are defined under <code>[edit policy-options satellite-policies port-group-alias]</code>.</p>
<b>Default</b>	Each satellite device model has a set of default uplink ports (see “ <a href="#">Overview of Uplink Failure Detection on a Junos Fusion</a> ” on page 1127). You only need to assign an uplink port group to a satellite device if you do not want to use the default uplink ports.
<b>Options</b>	<b><i>group-name</i></b> —The name of the port group to assign.
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Junos Fusion Provider Edge</i></li> <li><i>Configuring or Expanding a Junos Fusion Enterprise</i></li> </ul>

## show chassis satellite

<b>Syntax</b>	<pre>show chassis satellite [device-alias <i>device-alias</i>   fpc-slot <i>fpc-slot</i>   cluster <i>cluster-name</i>] [brief   detail   extensive   terse] &lt;since <i>time</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
<b>Description</b>	Display the status of the satellite device connections in a Junos Fusion.
<b>Options</b>	<p><b>none</b>—(Same as <b>brief</b>) Display satellite device connection information</p> <p><b>device-alias <i>device-alias</i></b>—(Optional) Display satellite device connection information for the satellite device using the specified device alias only.</p> <p><b>fpc-slot <i>fpc-slot</i></b>—(Optional) Display satellite device connection information for the satellite device using the specified FPC slot number only.</p> <p><b>cluster <i>cluster-name</i></b>—(Optional) Display satellite device connection information for the satellite devices in the specified satellite device cluster only.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>since <i>time</i></b>—(Optional) Display the satellite devices that have been added to the Junos Fusion on or after a certain date or time, in YYYY-MM-DD.HH:MM:SS format.</p> <p>To display all satellite devices added since a specified date, enter the specific date. For instance, to display all satellite devices added on or after December 22nd, 2015, enter <b>2015-12-22</b> as the <i>time</i>.</p> <p>To display all satellite devices added since a specified time, enter the specific date and time. For instance, to display all satellite devices added on or after 11:01AM on December 22nd, 2015, enter <b>2015-12-22.11:01:00</b> as the <i>time</i>.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring or Expanding a Junos Fusion Enterprise</i></li> <li>• <i>Configuring Junos Fusion Provider Edge</i></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show chassis satellite on page 1152</a></p> <p><a href="#">show chassis satellite device-alias on page 1153</a></p> <p><a href="#">show chassis satellite fpc-slot 130 on page 1153</a></p> <p><a href="#">show chassis satellite terse on page 1153</a></p>



[show chassis satellite detail on page 1154](#)

**Output Fields** [Table 20 on page 718](#) lists the output fields for the **show chassis satellite** command. Output fields are listed in the approximate order in which they appear.

*Table 57: show chassis satellite Output Fields*

Field Name	Field Description	Level of Output
<b>Fields for Interface</b>		
<b>Alias</b>	The satellite device's alias.	brief
	The satellite device's alias is configured using the <b>set chassis satellite-management fpc slot-id alias alias</b> statement.	extensive none
<b>Slot</b>	The slot number of the satellite device.	brief
	The slot number can be configured using the <b>set chassis satellite-management fpc slot-id</b> statement..	terse extensive none

Table 57: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Device State</b>	<p>The state of the satellite device within the Junos Fusion.</p> <p>The most common device states:</p> <ul style="list-style-type: none"> <li>• <b>Online</b>—the satellite device is online and active. This is the satellite device state during normal operating procedure.</li> <li>• <b>Offline</b>—the satellite device is offline and not detected. This state is typically seen when the satellite device has been disconnected from the aggregation device, or when all cascade or uplink ports connecting the satellite device to the aggregation device are down.</li> <li>• <b>Present</b>—the satellite device is recognized by the aggregation device, but is not online. This state is typically seen before a satellite device goes online, or while satellite device configuration is in progress or finalizing.</li> <li>• <b>Rebooting</b>—the satellite device is rebooting.</li> <li>• <b>Disable</b>—the satellite device has been disabled.</li> <li>• <b>Misconfig</b>—the satellite device is not properly configured. This state is typically seen when the system ID, cascade port, or FPC slot ID defined for the satellite device has a misconfiguration.</li> <li>• <b>Miswire</b>—the satellite device is miswired. This state is typically seen when a satellite device is wired to two aggregation devices but is not configured for multihoming. Use <b>show chassis satellite detail</b> to gather more information on the issue when the device state is <b>Miswire</b>.</li> </ul> <p>Other less common device states include:</p> <ul style="list-style-type: none"> <li>• <b>ModeChanging</b>—the device is converting from a standalone device to a satellite device, or from a satellite device to a standalone device.</li> <li>• <b>ModeChangeFail</b>—the mode change operation failed.</li> <li>• <b>MinorUpgradeOn</b>—A minor satellite software upgrade is in progress.</li> <li>• <b>MajorUpgradeOn</b>—A major satellite software upgrade is in progress.</li> <li>• <b>Upgrade-pending</b>—the satellite device is waiting for a satellite software upgrade.</li> <li>• <b>ProvSessionDn</b>—the provisioning session is down.</li> <li>• <b>ReconcileState</b>—the satellite provisioning daemon has restarted and is reconciling the satellite device state.</li> </ul>	<p>brief terse extensive none</p>
<b>Cascade Ports</b>	<p>The cascade port or ports.</p> <p>A cascade port is a port on the aggregation device that connects to a satellite device in a Junos Fusion.</p>	<p>brief extensive none</p>

Table 57: *show chassis satellite Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Port State</b>	<p>The state of the cascade port on the aggregation device.</p> <p>Port states include:</p> <ul style="list-style-type: none"> <li>• <b>online</b>—the cascade port is online and active. This is the port state during normal operating procedure.</li> <li>• <b>txUpRxDn</b>—Tx or Rx forwarding is disabled on the cascade port. This state is often seen when a second aggregation device is added to a Junos Fusion topology, and the devices in the Junos Fusion are synchronizing to the new topology.</li> <li>• <b>miswire</b>—the cascade port is miswired. This state is typically seen when a satellite device is interconnected to two aggregation devices but multihoming is not configured. Use <b>show chassis satellite detail</b> to gather more information on the issue when the device state is <b>Miswire</b>.</li> <li>• <b>present</b>—The cascade port recognized the satellite device and is up.</li> <li>• <b>misconfig</b>—the cascade port is assigned, but this interface is not working correctly due to a misconfiguration.</li> <li>• <b>down</b>—the cascade port is down.</li> <li>• <b>offline</b>—the satellite device was previously recognized from this interface, but is no longer present.</li> <li>• <b>absent</b>—the cascade port is configured but no satellite device is detected on the interface.</li> </ul>	<p>brief</p> <p>extensive</p> <p>none</p>
<b>Extended Ports Total</b>	<p>The total number of extended ports on the satellite device.</p> <p>An extended port is a network-facing port on the satellite device that sends and receives network traffic for the Junos Fusion.</p>	<p>brief</p> <p>none</p> <p>terse</p>
<b>Extended Ports Up</b>	The number of active extended ports.	<p>brief</p> <p>none</p> <p>terse</p>
<b>Model</b>	The hardware model of the satellite device.	terse
<b>Version</b>	The version of satellite device software running on the satellite device.	terse
<b>Satellite Alias</b>	<p>The satellite device's alias.</p> <p>The satellite device's alias is configured using the <b>set chassis satellite-management fpc slot-id alias alias</b> statement.</p>	detail
<b>FPC slot</b>	<p>The FPC slot number of the satellite device.</p> <p>The slot number can be configured using the <b>set chassis satellite-management fpc slot-id</b> statement.</p>	detail

Table 57: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Operational State</b>	<p>The operational state of the satellite device.</p> <p>The state UFDDown indicates that uplink failure detection disabled the satellite device's extended ports due to an uplink port failure.</p>	detail
<b>Product Model</b>	The hardware model of the satellite device.	detail
<b>Product Family</b>	The product family of the satellite device.	detail
<b>Serial number</b>	The serial number of the satellite device.	detail
<b>System ID</b>	The system ID of the satellite device. The system ID is also the satellite device's MAC address.	detail
<b>Software package version</b>	The satellite software version running on the satellite device.	detail
<b>Host software version</b>	The host operating system software version running on the satellite device.	detail
<b>Management Address</b>	<p>The management IP address of the satellite device.</p> <p>This management IP address belongs to an internal routing instance. This management address is assigned by the control plane internally based on FPC slot ID and is used for the control plane traffic between the aggregation device and satellite device.</p> <p>All management in a Junos Fusion should be done through the aggregation device. The management IP address of the satellite device is useful for debugging purposes by expert users only.</p>	detail
<b>UFD config state</b>	Uplink failure detection configuration state.	detail
<b>Minimum link</b>	Uplink failure detection minimum active uplink port setting.	detail
<b>Holdddown timer (seconds)</b>	Uplink failure detection holdddown timer setting, in seconds.	detail
<b>UFD operational state</b>	Uplink failure detection operational state.	detail

Table 57: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Candidate uplink interfaces (pic/port)</b>	Uplink failure detection candidate uplink interfaces.	detail
<b>Extended Ports</b>	The number of extended ports for the satellite device. The number on the left is the total number of extended ports, and the number on the right is the total number of extended ports currently in the up state.	extensive
<b>When</b>	The date and time of the event.	extensive
<b>Event</b>	The event.	extensive
<b>Action</b>	The actions that resulted from the event.	extensive
<b>Fields for Cascade interfaces</b>		
<b>Interface Name</b>	The name of the cascade interface on the aggregation device.	detail
<b>State</b>	The state of the cascade interface.	detail
<b>Uplink Interface</b>	The name of the uplink interface on the satellite device.	detail
<b>Adjacency state</b>	The adjacency state of the cascade to uplink interface link.	detail
<b>Last transition</b>	The amount of time that has passed since the last transition of the cascade to uplink interface link.	detail
<b>Adjacency down count (Interface Name)</b>	The number of times the cascade to uplink interface link has gone into the down state.	detail
<b>RX Packet</b>	The number of packets received on the cascade interface.	detail
<b>Last received packet</b>	The amount of time that has passed since the last packet was received on the cascade interface.	detail
<b>Peer adjacency information</b>	The amount of time that has passed since the last peer adjacency transition.	detail
<b>Adjacency down count (Peer adjacency information)</b>	The number of times the cascade to uplink interface link has gone into the down state.	detail

Table 57: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Last down cause</b>	The cause of the last adjacency failure.	detail
<b>SDPD restart detected</b>	The number of times that the satellite device protocol process has restarted.	detail
<b>Fields for Process information</b>		
<b>Process Name</b>	The name of the process.	detail
<b>PID</b>	The process identification number of the process.	detail
<b>State</b>	The current state of the process.	detail
<b>Number of restart detected</b>	The number of times the process has restarted.	detail
<b>Uptime</b>	The amount of time that the process has been running.	detail

## Sample Output

### show chassis satellite

```
user@aggregation-device> show chassis satellite
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
qfx5100-24q-01	100	Online	xe-0/0/1 xe-0/3/0	online online	9/2
qfx5100-24q-02	101	Online	xe-0/0/2 xe-0/3/1	online online	20/12
qfx5100-24q-03	102	Online	xe-0/0/3 xe-0/3/2	online online	16/6
qfx5100-24q-04	103	Online	xe-0/0/4 xe-0/3/3	online online	16/4
qfx5100-24q-05	104	Online	xe-0/0/5 xe-0/3/4	online online	13/3
qfx5100-24q-06	105	Online	xe-0/0/6 xe-0/3/5	online online	24/15
qfx5100-24q-07	106	Online	xe-0/0/7 xe-0/3/6	online online	24/15
qfx5100-24q-08	107	Online	xe-0/0/8 xe-0/3/7	online online	21/12
ex4300-01	109	Online	xe-1/0/1	online	49/2
ex4300-02	110	Online	xe-1/0/2	online	49/2
ex4300-03	111	Online	xe-1/0/3	online	49/2
ex4300-04	112	Online	xe-1/0/4	online	49/11
ex4300-05	113	Online	xe-1/0/5	online	49/11
ex4300-06	114	Online	xe-1/0/6	online	49/11
ex4300-07	115	Online	xe-1/0/7	online	49/11
ex4300-08	116	Online	xe-1/1/0	online	49/11
ex4300-09	117	Online	xe-1/1/1	online	49/11

ex4300-10	118	Online	xe-1/1/2	online	49/11
ex4300-11	119	Online	xe-1/1/3	online	49/11
ex4300-12	120	Online	xe-1/1/4	online	49/11
ex4300-13	121	Online	xe-1/1/5	online	49/11
ex4300-14	122	Online	xe-1/1/6	online	49/11
ex4300-15	123	Online	xe-1/1/7	online	49/11
ex4300-16	124	Online	xe-1/2/1	online	49/11
ex4300-17	125	Online	xe-1/2/2	online	49/11
ex4300-18	126	Online	xe-1/2/3	online	49/2
ex4300-19	127	Online	xe-1/2/4	online	49/1
ex4300-20	128	Online	xe-1/2/5	online	49/1
ex4300-21	129	Online	xe-1/2/6	online	49/1
ex4300-22	130	Online	xe-1/2/7	online	49/1

## Sample Output

show chassis satellite device-alias

```
user@aggregation-device> show chassis satellite device-alias ex4300-22
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
ex4300-22	130	Online	xe-0/2/7	online	49/1

## Sample Output

show chassis satellite fpc-slot 130

```
user@aggregation-device> show chassis satellite fpc-slot 130
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
ex4300-22	101	Online	xe-0/0/2 xe-0/3/1	online online	20/12

## Sample Output

show chassis satellite terse

```
user@aggregation-device> show chassis satellite terse
```

Slot	Device State	Model	Extended Ports Total/Up	Version
101	Online	QFX5100-48S-6Q	7/7	3.0R1.1
102	Online	QFX5100-48S-6Q	7/7	3.0R1.1
103	Online	QFX5100-48S-6Q	6/5	3.0R1.1
104	Online	QFX5100-48S-6Q	14/14	3.0R1.1
105	Online	QFX5100-48S-6Q	18/18	3.0R1.1
106	Online	QFX5100-48S-6Q	17/16	3.0R1.1
107	Online	EX4300-48T	52/6	3.0R1.1
108	Online	EX4300-48T	52/15	3.0R1.1
109	Online	EX4300-48T	51/14	3.0R1.1
110	Online	EX4300-48T	51/14	3.0R1.1
111	Online	EX4300-48T	51/13	3.0R1.1
112	Online	EX4300-48T	51/12	3.0R1.1
113	Online	EX4300-48T	51/13	3.0R1.1
114	Online	QFX5100-24Q-2P	17/13	3.0R1.1

**show chassis satellite detail**

```
user@aggregation-device> show chassis satellite detail

Satellite Alias: qfx5100-48s-02
FPC Slot: 101
Operational State: Online
Product Model: QFX5100-48S-6Q
Product Family: i386
Serial number: ABC123DEF456
System id: 00:11:22:aa:bb:cc
Software package version: 3.0R1.1
Host software version: 1.0.0
Management Address: 172.16.0.101/32
Cascade interfaces:
  Interface Name: xe-0/0/2 State: online
    Uplink Interface: xe-001/0/48:0
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-0/2/1 State: online
    Uplink Interface: xe-001/0/48:1
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 64 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-2/0/0 State: online
    Uplink Interface: xe-001/0/48:2
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-2/1/6 State: online
    Uplink Interface: xe-001/0/48:3
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Hold timer expire
      SDPD restart detected: 3
Process information:
  Process Name: Provisioning PID: 6716 State: Running
    Number of restart detected: 0
    Uptime: 00:10:22
  Process Name: PFE PID: 3194 State: Running
```



```

        Number of restart detected: 0
        Uptime: 00:10:22
UFD config state: Enable (persist), Minimum link: 1,
Holdddown timer (seconds): 6
UFD operational state: Enable
Candidate uplink interfaces (pic/port):
    1/0
    1/1
    1/2
    1/3
    2/0
    2/1
    2/2
    2/3

Satellite Alias: qfx5100-48s-03
FPC Slot: 102
Operational State: Online
Product Model: QFX5100-48S-6Q
Product Family: i386
Serial number: ABCDEFG12345
System id: 00:11:22:aa:ba:cc
Software package version: 3.0R1.1
Host software version: 1.0.0
Management Address: 172.16.0.102/32
Cascade interfaces:
    Interface Name: xe-0/0/3 State: online
        Uplink Interface: xe-002/0/48:0
        Adjacency state: Two-Way
        Last transition: 00:10:22
        Adjacency down count: 0
        Rx Packet: 65 Last received packet: 00:00:02
        Peer adjacency information: 00:10:22
            Adjacency down count: 3
            Last down cause: Interface Down
            SDPD restart detected: 3
    Interface Name: xe-0/2/2 State: online
        Uplink Interface: xe-002/0/48:1
        Adjacency state: Two-Way
        Last transition: 00:10:22
        Adjacency down count: 0
        Rx Packet: 65 Last received packet: 00:00:02
        Peer adjacency information: 00:10:22
            Adjacency down count: 3
            Last down cause: Interface Down
            SDPD restart detected: 3
    Interface Name: xe-2/0/1 State: online
        Uplink Interface: xe-002/0/48:2
        Adjacency state: Two-Way
        Last transition: 00:10:22
        Adjacency down count: 0
        Rx Packet: 65 Last received packet: 00:00:02
        Peer adjacency information: 00:10:22
            Adjacency down count: 3
            Last down cause: Interface Down
            SDPD restart detected: 3
    Interface Name: xe-2/1/7 State: online
        Uplink Interface: xe-002/0/48:3
        Adjacency state: Two-Way
        Last transition: 00:10:22

```

```
Adjacency down count: 0
Rx Packet: 65 Last received packet: 00:00:02
Peer adjacency information: 00:10:22
  Adjacency down count: 3
  Last down cause: Interface Down
  SDPD restart detected: 3
Process information:
  Process Name: Provisioning PID: 6667 State: Running
  Number of restart detected: 0
  Uptime: 00:10:22
  Process Name: PFE PID: 3155 State: Running
  Number of restart detected: 0
  Uptime: 00:10:22
<additional output removed for brevity>
```