



Junos Fusion Enterprise Feature Guide



Modified: 2019-03-27

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos Fusion Enterprise Feature Guide
Copyright © 2019 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xv
	Documentation and Release Notes	xv
	Using the Examples in This Manual	xv
	Merging a Full Example	xvi
	Merging a Snippet	xvi
	Documentation Conventions	xvii
	Documentation Feedback	xix
	Requesting Technical Support	xix
	Self-Help Online Tools and Resources	xx
	Creating a Service Request with JTAC	xx
Part 1	Junos Fusion Enterprise	
Chapter 1	Junos Fusion Enterprise Overview	3
	Junos Fusion Enterprise Overview	3
	Understanding Junos Fusion Enterprise Components	5
	Junos Fusion Topology	6
	Aggregation Devices	7
	Aggregation Devices Overview	7
	Dual Aggregation Device Topologies	7
	Satellite Devices	8
	Satellite Devices Overview	8
	Satellite Device Clustering	8
	Cascade Ports	9
	Uplink Ports	10
	Extended Ports	11
	Clustering Ports	11
	Understanding FPC Identifiers and Assignment in a Junos Fusion	11
	Understanding Software in a Junos Fusion Enterprise	12
	Understanding Interface Naming in a Junos Fusion	12
	Understanding Feature Configuration in a Junos Fusion Enterprise	13
	Understanding Satellite Device Clustering in a Junos Fusion	13
	Satellite Device Clustering Overview	14
	Satellite Device Cluster Topology	14
	Satellite Device Cluster Names and Identifiers	14
	Satellite Device Cluster Uplink Interfaces	14
	Cluster Interfaces	15
	Satellite Device Cluster Software Management	15
	FPC Identifiers and Extended Port Interfaces in a Satellite Device Cluster	15

Understanding 40-Gbps Interfaces with QSFP+ Transceiver Roles for Satellite Devices in a Satellite Device Cluster	16
Understanding Junos Fusion Ports	17
Understanding Cascade Ports	19
Understanding Uplink Ports	20
Understanding Extended Ports	21
Understanding Software in a Junos Fusion Enterprise	22
Understanding Junos OS for the Aggregation Device in a Junos Fusion	22
Understanding Satellite Software for the Satellite Devices in a Junos Fusion	22
Understanding Satellite Software Upgrade Groups	23
Understanding Satellite Software Requirements for a Satellite Device Cluster	24
Understanding Satellite Software Requirements in a Dual Aggregation Device Topology	24
Understanding the Platform Specific Satellite Software Image	24
Understanding Configuration Synchronization in a Junos Fusion	25
Configuration Synchronization and Aggregation Devices with Two Routing Engines in a Junos Fusion Data Center with EVPN	25
Understanding Junos Fusion Enterprise Software and Hardware Requirements	26
Aggregation Device to Satellite Device Software Compatibility	26
Aggregation Devices	27
Aggregation Device Hardware Models	27
Maximum Number of Aggregation Devices	28
Cascade Ports	28
Satellite Devices	30
Satellite Device Hardware Models	30
Satellite Device Firmware Requirements	32
Satellite Device Software Requirements for Satellite Device Clustering	33
Satellite Software to Junos OS Conversion Requirements	34
Power over Ethernet Requirements for a Satellite Device	35
Maximum Number of Satellite Devices or Extended Ports	35
Understanding ICCP in a Junos Fusion using Dual Aggregation Devices	35
ICCP in a Junos Fusion Overview	36
Automatic ICCP Provisioning	36
Understanding the Flow of Data Packets in a Junos Fusion Topology	37
Understanding Satellite Policies in a Junos Fusion	41
Satellite Policies Overview	41
Understanding Environment Monitoring Satellite Policies	42
Understanding Uplink Failure Detection Satellite Policies	42
Understanding Satellite Policies for Remapping Uplink Traffic Flows on a Junos Fusion Data Center	42
Understanding Multicast Forwarding on a Junos Fusion Enterprise	43
Overview of Multicast Forwarding	43
Configuring Layer 2 Multicast Forwarding in a Junos Fusion Enterprise	43
Configuring Layer 3 Multicast Forwarding in a Junos Fusion Enterprise	44

Chapter 2	Junos Fusion Enterprise Configuration	45
	Configuring or Expanding a Junos Fusion Enterprise	45
	Preparing the Aggregation Devices	45
	Preparing a Switch Running Junos OS to Become a Satellite Device	47
	Configuring the FPC Slot IDs, Cascade Ports, and Satellite Device Clusters on the Junos Fusion	49
	Configuring the FPC Slot ID and Cascade Ports for a Standalone Satellite Device	49
	Configuring the FPC Slot ID, Cascade Ports, and Satellite Device Clusters for Satellite Devices in a Satellite Device Cluster	52
	Managing Software Upgrade Groups on the Aggregation Device	55
	Configuring the Dual Aggregation Device Topology (Dual Aggregation Device Topologies Only)	58
	Installing Satellite Software and Adding Satellite Devices to the Junos Fusion	62
	Junos Fusion Enterprise Installation Checklist	64
	Adding a Switch Running Satellite Software to a Junos Fusion Enterprise	75
	Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion	77
	Configuring Uplink Port Policies on a Junos Fusion	82
	Configuring an Uplink Port Policy for a Standalone Satellite Device	82
	Configuring an Uplink Port Policy for a Satellite Device Cluster	83
	Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion	84
Chapter 3	Junos Fusion Enterprise Configuration Statements	87
	aging-timer (Junos Fusion)	88
	alarm (Satellite Policies)	89
	alias (Junos Fusion)	90
	alias (Junos Fusion Satellite Device Clustering)	91
	auto-satellite-conversion (Junos Fusion)	92
	bgp-peer	93
	cascade-port	94
	cascade-ports	95
	cascade-ports (Junos Fusion Satellite Device Cluster)	96
	cluster (Junos Fusion)	97
	cluster-id (Junos Fusion Satellite Device Cluster)	98
	description (Junos Fusion)	99
	description (Junos Fusion Satellite Device Cluster)	100
	environment-monitoring-policy (satellite-management)	101
	environment-monitoring-policy (satellite-policies)	102
	fpc (Junos Fusion)	103
	fpc (Junos Fusion Satellite Device Cluster)	104
	linkdown (satellite-policies alarm)	105
	mclag	106
	member-id (Junos Fusion Satellite Device Cluster)	107
	no-auto-iccp-provisioning (Junos Fusion Redundancy Group)	108
	redundancy-group-id (Junos Fusion)	109
	redundancy-groups (Junos Fusion)	110

	satellite (Junos Fusion Automatic Satellite Conversion)	112
	satellite (Junos Fusion Satellite Device Homing)	113
	satellite (Junos Fusion Satellite Software Upgrade Groups)	114
	satellite-management (Junos Fusion)	115
	serial-number (Junos Fusion)	117
	single-home (Junos Fusion)	118
	system-id (Junos Fusion)	119
	system-id (Junos Fusion Satellite Device Cluster)	120
	upgrade-groups (Junos Fusion)	121
Chapter 4	Junos Fusion Enterprise Administration	123
	Managing Satellite Software Upgrade Groups in a Junos Fusion	123
	Creating a Satellite Software Upgrade Group	124
	Adding Satellite Devices to a Satellite Software Upgrade Group	124
	Removing a Satellite Device from a Satellite Software Upgrade Group	125
	Modifying the Satellite Software Used by a Satellite Software Upgrade Group	125
	Deleting Associated Satellite Software from a Satellite Software Upgrade Group	126
	Deleting Satellite Software on the Aggregation Device	127
	Upgrading Junos OS and Satellite Software in an Operational Junos Fusion Enterprise with Dual Aggregation Devices	127
	Verifying Connectivity, Device States, Satellite Software Versions, and Operations in a Junos Fusion	129
	Verifying a Junos Fusion Configuration	129
	Verifying Basic Junos Fusion Connectivity	130
	Verifying the Satellite Device Hardware Model	131
	Verifying Cascade Port and Uplink Port State	132
	Verifying That a Cascade Port Recognizes a Satellite Device	134
	Verifying Extended Port Operation	136
	Verifying the Satellite Software Version	138
	Verifying the Devices and Software Used in a Satellite Software Upgrade Group	139
	Converting a Satellite Device in a Junos Fusion to a Standalone Device	140
	Download Junos OS Software	140
	Disable the Automatic Conversion Configuration	141
	Install Junos OS Software on the Satellite Device	143
	Installing Junos OS Software on a Standalone Device Running Satellite Software	144
Chapter 5	Junos Fusion Enterprise Operational Commands	147
	request chassis device-mode satellite	149
	request chassis satellite beacon	150
	request chassis satellite disable	151
	request chassis satellite enable	153
	request chassis satellite file-copy	154
	request chassis satellite install	156
	request chassis satellite interface	158
	request chassis satellite login	159
	request chassis satellite reboot	160

	request chassis satellite restart	161
	request chassis satellite shell-command	162
	request system software add	163
	request system software delete	177
	request system software rollback	182
	request system storage cleanup	187
	show chassis alarms	202
	show chassis environment	222
	show chassis environment fpc	307
	show chassis environment pem	367
	show chassis environment routing-engine	382
	show chassis fan	391
	show chassis firmware	409
	show chassis hardware	426
	show chassis led satellite	694
	show chassis routing-engine	698
	show chassis satellite	728
	show chassis satellite extended-port	739
	show chassis satellite interface	743
	show chassis satellite neighbor	748
	show chassis satellite redundancy-group	753
	show chassis satellite redundancy-group devices	756
	show chassis satellite software	759
	show chassis satellite statistics	762
	show chassis satellite unprovision	767
	show chassis satellite upgrade-group	772
	show chassis satellite-cluster	776
	show chassis satellite-cluster route	781
	show chassis satellite-cluster statistics	783
	show chassis temperature-thresholds	787
	show interfaces extensive satellite-device	831
	show interfaces satellite-device	850
	show interfaces statistics	855
	show interfaces terse satellite-device	869
	show system core-dumps	872
Chapter 6	Enabling Layer 3 Support in a Junos Fusion Enterprise	887
	Understanding Integrated Routing and Bridging (IRB) Interfaces in a Junos Fusion Enterprise	887
Chapter 7	802.1X in a Junos Fusion Enterprise	889
	Understanding 802.1X on a Junos Fusion Enterprise	889
Chapter 8	Junos Fusion Enterprise Half-Duplex Links on Satellite Devices	891
	Understanding Half-Duplex Links on Satellite Devices in a Junos Fusion Enterprise	891
	Half-Duplex Links on Satellite Devices Overview	891
	Understanding Configuration of Full-Duplex Link Mode on a Satellite Device and Verification of Half-Duplex Mode	892
	link-mode	893

Chapter 9	Junos Fusion Enterprise Network Monitoring and Analyzers	895
	Understanding sFlow Technology on a Junos Fusion Enterprise	895
	sFlow Technology on a Junos Fusion Enterprise Overview	895
	Understanding the sFlow Sampling Mechanism on a Junos Fusion Enterprise	895
	Limitations for sFlow on a Junos Fusion Enterprise	896
	Understanding Port Mirroring Analyzers on a Junos Fusion Enterprise	897
	Port Mirroring Analyzers on a Junos Fusion Enterprise Overview	897
	Understanding the Configuration of Analyzers in a Junos Fusion Enterprise	897
	Limitations for Port Mirroring Analyzers on a Junos Fusion Enterprise	898
Chapter 10	Junos Fusion Enterprise Private VLANs	899
	Understanding Private VLANs on a Junos Fusion Enterprise	899
	PVLANS on a Junos Fusion Enterprise Overview	899
	Understanding the Configuration of PVLANS in a Junos Fusion Enterprise	900
	Limitations for PVLANS on a Junos Fusion Enterprise	901
Chapter 11	Power over Ethernet, LLDP, and LLDP-MED on Junos Fusion Enterprise	903
	Understanding Power over Ethernet in a Junos Fusion	903
	Power over Ethernet in a Junos Fusion Overview	903
	Understanding the Role of the Aggregation Devices for PoE Support in a Junos Fusion	904
	Understanding the Role of the Satellite Devices for PoE Support in a Junos Fusion	904
	Understanding PoE Configuration in a Junos Fusion	904
	Understanding PoE Support Standards for Extended Ports in a Junos Fusion	905
	Understanding Maximum PoE Power Budgets in a Junos Fusion	905
	Understanding PoE Controller Software in a Junos Fusion	905
	Understanding PoE Power Allocation Configuration Options in a Junos Fusion	906
	Understanding LLDP and LLDP-MED on a Junos Fusion	906
	LLDP and LLDP-MED in a Junos Fusion Overview	906
	Understanding LLDP and LLDP-MED Configuration and Traffic Handling in a Junos Fusion	907
	Configuring Power over Ethernet in a Junos Fusion	907
	PoE Configurable Options	908
	Enabling PoE	908
	Disabling PoE	909
	Setting the Power Management Mode	909
	Setting the Maximum Power That Can Be Delivered from a PoE Interface	910
	Setting the Guard Band	910

	Setting the PoE Interface Priority	910
	Verifying PoE Configuration and Status for a Junos Fusion (CLI Procedure)	911
	PoE Power Budgets, Consumption, and Mode on Satellite Devices	911
	PoE Interface Configuration and Status	912
Chapter 12	Configuration Statements for Power over Ethernet and Power Supply Management on Junos Fusion Enterprise	915
	disable (Power over Ethernet)	916
	guard-band	917
	interface (Power over Ethernet)	918
	management	919
	maximum-power (Interface)	920
	n-plus-n (satellite-management)	922
	poe	923
	priority (Power over Ethernet)	925
	psu (satellite-management)	926
	redundancy (satellite-management)	927
Chapter 13	Operational Commands for Power over Ethernet and Power Supply Management on Junos Fusion Enterprise	929
	show chassis satellite power-budget-statistics	930
	show poe controller	933
	show poe interface	936
Chapter 14	Link Aggregation and LACP on Junos Fusion Enterprise	941
	Configuring Link Aggregation on Satellite Devices in a Junos Fusion Enterprise	941
	Configuring an Aggregated Ethernet Interface	942
	Configuring Aggregated Ethernet LACP	943
	Configuring the LACP Interval	945
	Configuring LACP Link Protection	945
	Configuring LACP System Priority	947
	Configuring LACP System Identifier	947
	Configuring LACP administrative Key	947
	Configuring LACP Port Priority	948
	Tracing LACP Operations	948
	LACP Limitations	949
	Example: Configuring Aggregated Ethernet LACP	949
Chapter 15	SNMP MIB Support on Junos Fusion Enterprise	951
	Chassis MIB Support (Junos Fusion)	951
Chapter 16	Media Access Control Security (MACsec) on Junos Fusion Enterprise	955
	Understanding Media Access Control Security on a Junos Fusion Enterprise	955
	MacSec Overview	955
	Enabling MACsec in a Junos Fusion Enterprise	955
Chapter 17	Class of Service on Junos Fusion Enterprise	957
	Understanding CoS in Junos Fusion Enterprise	957
	Overview of CoS on Different Types of Ports in Junos Fusion	958
	CoS on Extended Ports and Uplink Ports in Junos Fusion	960

	CoS on Cascade Ports in Junos Fusion	960
	Configuring CoS in Junos Fusion Enterprise	961
	Configuring Behavior Aggregate Classifiers on Satellite Device Extended Ports	962
	Configuring Rewrite Rules on Satellite Device Extended Ports	963
	Changing the Default Scheduling Policy on an Aggregated Device Cascade Port	964
Chapter 18	Extending a Junos Fusion Enterprise Using EVPN-MPLS	969
	Understanding EVPN-MPLS Interworking with Junos Fusion Enterprise and MC-LAG	969
	Benefits of Using EVPN-MPLS with Junos Fusion Enterprise and MC-LAG	971
	BUM Traffic Handling	971
	Split Horizon	972
	MAC Learning	973
	Handling Down Link Between Cascade and Uplink Ports in Junos Fusion Enterprise	973
	Layer 3 Gateway Support	974
	Example: EVPN-MPLS Interworking With Junos Fusion Enterprise	974
Chapter 19	Storm Control on a Junos Fusion Enterprise	993
	Understanding Storm Control on a Junos Fusion Enterprise	993
Chapter 20	DHCP Snooping and Port Security on a Junos Fusion Enterprise	995
	Understanding Port Security Features on a Junos Fusion Enterprise	995
Chapter 21	MAC Limiting and Persistent MAC Learning on a Junos Fusion Enterprise	997
	Understanding MAC Address Limiting and Persistent MAC Learning on a Junos Fusion Enterprise	997
	MAC Address Limiting on a Junos Fusion Enterprise	997
	Persistent MAC Learning on a Junos Fusion Enterprise	998

List of Figures

Part 1	Junos Fusion Enterprise	
Chapter 1	Junos Fusion Enterprise Overview	3
	Figure 1: Basic Junos Fusion Enterprise Topology	4
	Figure 2: Junos Fusion Topology with Dual Aggregation Devices and Satellite Device Clusters	4
	Figure 3: Basic Junos Fusion Topology	6
	Figure 4: Junos Fusion Topology with Dual Aggregation Devices and Satellite Device Clusters	7
	Figure 5: Cascade Ports	9
	Figure 6: Junos Fusion Enterprise Ports	10
	Figure 7: Satellite Device Cluster Topology	14
	Figure 8: Cascade, Uplink, and Extended Ports in a Junos Fusion Topology With Two Aggregation Devices and MC-LAG	18
	Figure 9: Cascade, Uplink, and Extended Ports in a Junos Fusion Data Center Topology With Four Aggregation Devices and EVPN	19
	Figure 10: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Scenario 1	38
	Figure 11: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Scenario 2	39
Chapter 17	Class of Service on Junos Fusion Enterprise	957
	Figure 12: Basic Junos Fusion Topology	957
	Figure 13: Junos Fusion Topology with Dual Aggregation Devices and Satellite Device Clusters	958
	Figure 14: Junos Fusion CoS Feature Application	959
Chapter 18	Extending a Junos Fusion Enterprise Using EVPN-MPLS	969
	Figure 15: EVPN-MPLS Interworking with Junos Fusion Enterprise	970
	Figure 16: EVPN-MPLS Interworking with MC-LAG	970
	Figure 17: EVPN-MPLS Interworking with Junos Fusion Enterprise	976

List of Tables

	About the Documentation	xv
	Table 1: Notice Icons	xvii
	Table 2: Text and Syntax Conventions	xviii
Part 1	Junos Fusion Enterprise	
Chapter 1	Junos Fusion Enterprise Overview	3
	Table 3: Default Uplink Interfaces for Junos Fusion Enterprise Satellite Devices	16
	Table 4: Supported Aggregation Device Hardware and Supported Satellite Devices by Junos OS Release	27
	Table 5: Line Cards on EX9200 Switch Cascade Port Support	28
	Table 6: Supported EX2300 Satellite Device Hardware and Initial Junos OS Release	31
	Table 7: Supported EX3400 Satellite Device Hardware and Initial Junos OS Release	31
	Table 8: Supported EX4300 Satellite Device Hardware and Initial Junos OS Release	31
	Table 9: Supported QFX5100 Satellite Device Hardware and Initial Junos OS Release	32
	Table 10: Supported EX4600 Satellite Device Hardware and Initial Junos OS Release	32
	Table 11: Minimum Satellite Device Firmware Version Requirements	33
Chapter 2	Junos Fusion Enterprise Configuration	45
	Table 12: Minimum PoE Firmware Versions	48
	Table 13: Junos Fusion Enterprise Installation Checklist	65
Chapter 5	Junos Fusion Enterprise Operational Commands	147
	Table 14: request system storage cleanup Output Fields	190
	Table 15: show chassis alarms Output Fields	210
	Table 16: show chassis environment Output Fields	231
	Table 17: show chassis environment fpc Output Fields	311
	Table 18: show chassis environment pem Output Fields	370
	Table 19: show chassis environment routing-engine Output Fields	385
	Table 20: show chassis fan Output Fields	394
	Table 21: show chassis firmware Output Fields	413
	Table 22: Routing Engines Displaying DIMM Information	430
	Table 23: show chassis hardware Output Fields	436
	Table 24: show chassis led Output Fields	695
	Table 25: show chassis routing-engine Output Fields	702

	Table 26: show chassis satellite Output Fields	729
	Table 27: show chassis satellite extended-port Output Fields	740
	Table 28: show chassis satellite interface Output Fields	744
	Table 29: show chassis satellite neighbor Output Fields	748
	Table 30: show chassis satellite redundancy-groups Output Fields	754
	Table 31: show chassis satellite redundancy-groups Output Fields	756
	Table 32: show chassis satellite software Output Fields	759
	Table 33: show chassis satellite statistics Output Fields	762
	Table 34: show chassis satellite unprovision Output Fields	768
	Table 35: show chassis satellite upgrade-group Output Fields	773
	Table 36: show chassis satellite-cluster Output Fields	776
	Table 37: show chassis satellite-cluster route Output Fields	781
	Table 38: show chassis satellite-cluster statistics Output Fields	783
	Table 39: show chassis temperature-thresholds Output Fields	790
	Table 40: show interfaces extensive satellite-device Output Fields	831
	Table 41: show interfaces satellite-device Output Fields	850
	Table 42: show interfaces terse satellite-device Output Fields	869
	Table 43: show system core-dumps Output Fields	875
Chapter 11	Power over Ethernet, LLDP, and LLDP-MED on Junos Fusion Enterprise	903
	Table 44: Configurable PoE Options and Default Settings	908
Chapter 13	Operational Commands for Power over Ethernet and Power Supply Management on Junos Fusion Enterprise	929
	Table 45: show chassis satellite-management power-budget-statistics Output Fields	930
	Table 46: show poe controller Output Fields	933
	Table 47: show poe interface Output Fields	936
Chapter 15	SNMP MIB Support on Junos Fusion Enterprise	951
	Table 48: CIDX's for Satellite Devices	951
	Table 49: SNMP Traps Generated for Satellite Devices	953
Chapter 18	Extending a Junos Fusion Enterprise Using EVPN-MPLS	969
	Table 50: BUM Traffic: Issues and Resolutions	972
	Table 51: BUM Traffic: Split Horizon-Related Issue and Resolution	972
	Table 52: MAC Learning: EVPN and MC-LAG Synchronization Issue and Implementation Details	973
	Table 53: Key Junos Fusion Enterprise and EVPN (BGP and MPLS) Attributes Configured on PE1, PE2, and PE3	977

About the Documentation

- Documentation and Release Notes on page xv
- Using the Examples in This Manual on page xv
- Documentation Conventions on page xvii
- Documentation Feedback on page xix
- Requesting Technical Support on page xix

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```


2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

Documentation Conventions

Table 1 on page xvii defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xviii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

GUI Conventions

Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:



- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.

PART 1

Junos Fusion Enterprise

- [Junos Fusion Enterprise Overview on page 3](#)
- [Junos Fusion Enterprise Configuration on page 45](#)
- [Junos Fusion Enterprise Configuration Statements on page 87](#)
- [Junos Fusion Enterprise Administration on page 123](#)
- [Junos Fusion Enterprise Operational Commands on page 147](#)
- [Enabling Layer 3 Support in a Junos Fusion Enterprise on page 887](#)
- [802.1X in a Junos Fusion Enterprise on page 889](#)
- [Junos Fusion Enterprise Half-Duplex Links on Satellite Devices on page 891](#)
- [Junos Fusion Enterprise Network Monitoring and Analyzers on page 895](#)
- [Junos Fusion Enterprise Private VLANs on page 899](#)
- [Power over Ethernet, LLDP, and LLDP-MED on Junos Fusion Enterprise on page 903](#)
- [Configuration Statements for Power over Ethernet and Power Supply Management on Junos Fusion Enterprise on page 915](#)
- [Operational Commands for Power over Ethernet and Power Supply Management on Junos Fusion Enterprise on page 929](#)
- [Link Aggregation and LACP on Junos Fusion Enterprise on page 941](#)
- [SNMP MIB Support on Junos Fusion Enterprise on page 951](#)
- [Media Access Control Security \(MACsec\) on Junos Fusion Enterprise on page 955](#)
- [Class of Service on Junos Fusion Enterprise on page 957](#)
- [Extending a Junos Fusion Enterprise Using EVPN-MPLS on page 969](#)
- [Storm Control on a Junos Fusion Enterprise on page 993](#)
- [DHCP Snooping and Port Security on a Junos Fusion Enterprise on page 995](#)
- [MAC Limiting and Persistent MAC Learning on a Junos Fusion Enterprise on page 997](#)

CHAPTER 1

Junos Fusion Enterprise Overview

- [Junos Fusion Enterprise Overview on page 3](#)
- [Understanding Junos Fusion Enterprise Components on page 5](#)
- [Understanding Satellite Device Clustering in a Junos Fusion on page 13](#)
- [Understanding Junos Fusion Ports on page 17](#)
- [Understanding Software in a Junos Fusion Enterprise on page 22](#)
- [Understanding Configuration Synchronization in a Junos Fusion on page 25](#)
- [Understanding Junos Fusion Enterprise Software and Hardware Requirements on page 26](#)
- [Understanding ICCP in a Junos Fusion using Dual Aggregation Devices on page 35](#)
- [Understanding the Flow of Data Packets in a Junos Fusion Topology on page 37](#)
- [Understanding Satellite Policies in a Junos Fusion on page 41](#)
- [Understanding Multicast Forwarding on a Junos Fusion Enterprise on page 43](#)

Junos Fusion Enterprise Overview


Junos Fusion provides a method of significantly expanding the number of available network interfaces on a device—called an *aggregation device*—by allowing the aggregation device to add interfaces through interconnections with *satellite devices*. The entire system—the interconnected aggregation device and satellite devices—is called a *Junos Fusion*. A Junos Fusion simplifies network topologies and administration because it appears to the larger network as a single, port-dense device that is managed using one IP address.

Junos Fusion Enterprise brings the Junos Fusion technology to enterprise switching networks. In a Junos Fusion Enterprise, EX9200 switches act as aggregation devices while EX2300, EX3400, EX4300 or QFX5100 switches act as satellite devices.

In a Junos Fusion Enterprise, each satellite device has at least one connection to the aggregation device. The aggregation device acts as the single point of management for all devices in the Junos Fusion Enterprise. The satellite devices provide network interfaces that send and receive network traffic.

[Figure 1 on page 4](#) provides an illustration of a basic Junos Fusion Enterprise topology.


Figure 1: Basic Junos Fusion Enterprise Topology

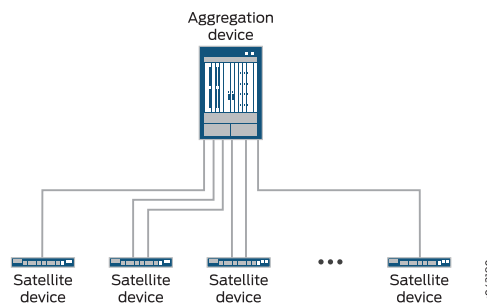

Junos Fusion Enterprise supports up to two aggregation devices that can be multi-homed to each satellite device, as well as satellite device clustering, which allows multiple satellite devices to be clustered into a group and cabled into the Junos Fusion as a group instead of as individual satellite devices. A Junos Fusion Enterprise using two aggregation devices uses the ICCP protocol from MC-LAG to connect and maintain the Junos Fusion topology.

Figure 2 on page 4 provides an illustration of a more complex Junos Fusion Enterprise topology that is using multiple aggregation devices as well as satellite device clustering.

Figure 2: Junos Fusion Topology with Dual Aggregation Devices and Satellite Device Clusters

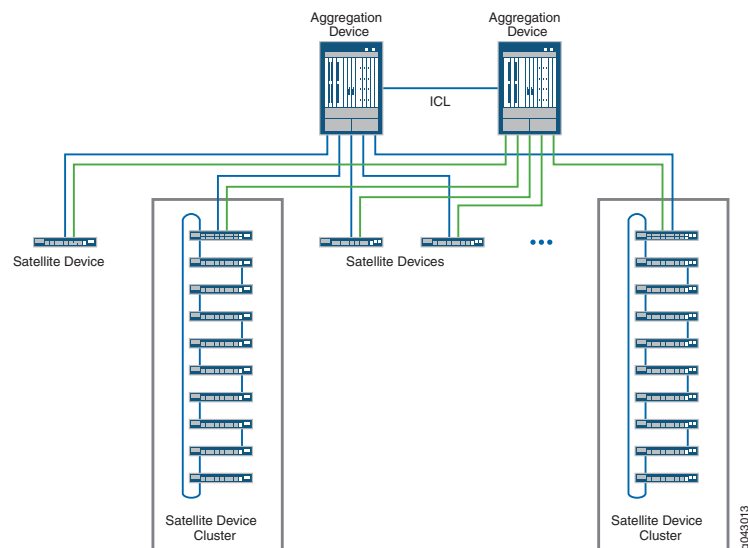

An EX9200 switch acting as an aggregation device in a Junos Fusion Enterprise is responsible for almost all management tasks, including interface configuration for every satellite device interface in the topology. The aggregation device runs Junos OS software for the entire Junos Fusion Enterprise, and the network-facing interfaces on the satellite devices—called *extended ports*—are configured from the aggregation device and support features that are supported by the version of Junos OS running on the aggregation device.

The satellite devices and the aggregation device maintain the control plane for the Junos Fusion Enterprise using multiple internal satellite management protocols. Network traffic can be forwarded between satellite devices through the aggregation device. Junos Fusion Enterprise supports the IEEE 802.1BR standard.

Junos Fusion Enterprise provides the following benefits:

- **Simplified network topology**—You can combine multiple devices into a topology that appears to the larger network as a single device, and then manage the device from a single IP address.
- **Port density**—You can configure a large number of network-facing interfaces into a topology that operates as a single network device.
- **Manageability**—You can manage a Junos Fusion that supports a large number of network-facing interfaces from a single point. The single point of management, the aggregation device, runs Junos OS software for the entire Junos Fusion.
- **Flexibility**—You can easily expand the size of your Junos Fusion by adding satellite devices to the Junos Fusion as your networking needs grow.
- **Investment protection**—In environments that need to expand because the capabilities of the existing hardware are maximized, a Junos Fusion can be a logical upgrade option because it enables the network to evolve with minimal disruption to the existing network and without having to remove the existing, previously purchased devices from the network.

**Related
Documentation**

- [Network Configuration Example: Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#)
- [Understanding Junos Fusion Enterprise Components on page 5](#)
- [Understanding Junos Fusion Ports on page 17](#)
- [Understanding the Flow of Data Packets in a Junos Fusion Topology on page 37](#)
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

Understanding Junos Fusion Enterprise Components

This topic describes the components of a Junos Fusion Enterprise. It covers:

- [Junos Fusion Topology on page 6](#)
- [Aggregation Devices on page 7](#)
- [Satellite Devices on page 8](#)
- [Cascade Ports on page 9](#)
- [Uplink Ports on page 10](#)
- [Extended Ports on page 11](#)
- [Clustering Ports on page 11](#)
- [Understanding FPC Identifiers and Assignment in a Junos Fusion on page 11](#)

- [Understanding Software in a Junos Fusion Enterprise on page 12](#)
- [Understanding Interface Naming in a Junos Fusion on page 12](#)
- [Understanding Feature Configuration in a Junos Fusion Enterprise on page 13](#)

Junos Fusion Topology


A basic Junos Fusion topology is composed of an aggregation device and multiple satellite devices. Each satellite device has at least one connection to the aggregation device. The satellite devices provide interfaces that send and receive network traffic. Network traffic can be forwarded over the aggregation device within the Junos Fusion.

The satellite devices and the aggregation device maintain the control plane for the Junos Fusion using multiple internal satellite management protocols. Junos Fusion supports the IEEE 802.1BR standard.

The aggregation device acts as the management points for all devices in the Junos Fusion. All Junos Fusion management responsibilities, including interface configuration for every satellite device interface in the Junos Fusion, are handled by the aggregation device. The aggregation device runs Junos OS software for the entire Junos Fusion, and the interfaces on the satellite devices are configured from the aggregation device and mostly support features that are supported by the version of Junos OS running on the aggregation device.

See [Figure 3 on page 6](#) for an illustration of a basic Junos Fusion topology.


Figure 3: Basic Junos Fusion Topology

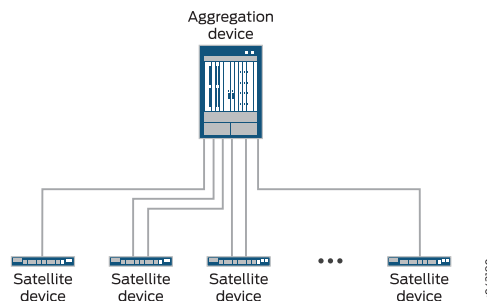

Junos Fusion Enterprise supports multihomed dual aggregation device topologies and satellite device clusters. A multihomed topology with two aggregation devices provides load balancing and redundancy to the Junos Fusion Enterprise topology. A satellite device cluster allows you to group multiple satellite devices into a single group, and connect the group to the Junos Fusion as a group instead of as single standalone devices. Dual aggregation device topologies and satellite device clustering are discussed in more detail in [“Dual Aggregation Device Topologies” on page 7](#) and [“Satellite Device Clustering” on page 8](#).

[Figure 4 on page 7](#) shows a complex Junos Fusion Enterprise topology using dual aggregation devices and satellite device clusters.

Figure 4: Junos Fusion Topology with Dual Aggregation Devices and Satellite Device Clusters

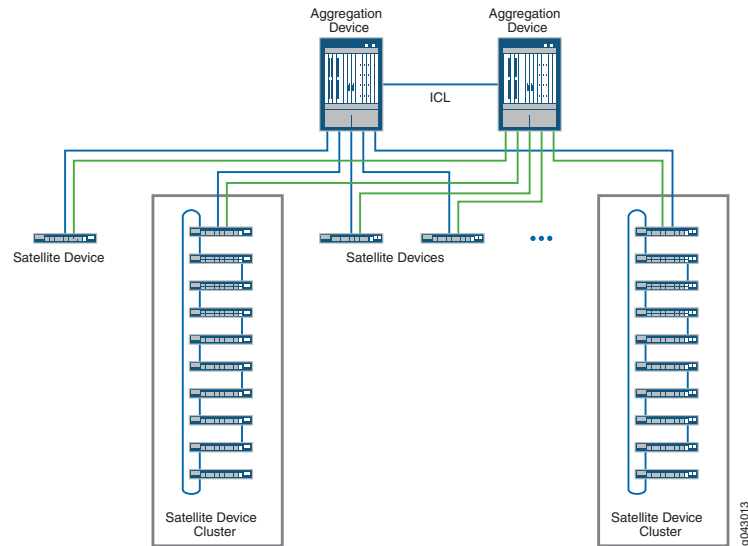

Aggregation Devices

This section discusses aggregation devices and contains the following sections:

- [Aggregation Devices Overview on page 7](#)
- [Dual Aggregation Device Topologies on page 7](#)

Aggregation Devices Overview

An aggregation device:

- Is an EX9200 switch in a Junos Fusion Enterprise.
- Has at least one connection to each satellite device or satellite device cluster.
- Runs Junos OS software.
- Manages the entire Junos Fusion. All Junos Fusion configuration management is handled on the aggregation device or devices, including interface configuration of the satellite device interfaces.

The hardware specifications for aggregation devices in a Junos Fusion Enterprise are discussed in greater detail in [Understanding Junos Fusion Enterprise Software and Hardware Requirements](#).

Dual Aggregation Device Topologies

Junos Fusion Enterprise supports dual aggregation device topologies. The advantages of a dual aggregation device topology include:

- Load balancing. Traffic traversing the Junos Fusion Enterprise can be load balanced across both aggregation devices.

- Redundancy. The Junos Fusion Enterprise can pass traffic even in the unexpected event of an aggregation device failure.

A Junos Fusion Enterprise supports multiple aggregation devices using Multichassis Link Aggregation (MC-LAG) groups and the Inter-Chassis Control Protocol (ICCP).

A Junos Fusion Enterprise with dual aggregation devices is configured as an MC-LAG with one redundancy group. The redundancy group includes two peering chassis IDs—the aggregation devices—and all satellite devices in the Junos Fusion Enterprise. The aggregation devices are connected using an interchassis link (ICL) in the MC-LAG topology.



NOTE: Direct attach copper (DAC) cable connections cannot be used to configure an ICL connecting aggregation devices in a Junos Fusion Enterprise topology.

ICCP runs inside the Junos Fusion on all dual aggregation topologies. ICCP parameters are automatically configured in a Junos Fusion Enterprise by the automatic ICCP provisioning feature, which simplifies the ICCP configuration procedure. ICCP configuration can be customized, however. See *Configuring Multichassis Link Aggregation on EX Series Switches* for information on configuring ICCP parameters.

[Figure 4 on page 7](#) provides an illustration of a dual aggregation device topology.

Satellite Devices

Satellite Devices Overview

A satellite device:

- Is an EX2300, EX3400, EX4300 or QFX5100 switch in a Junos Fusion Enterprise.
- Runs a version of satellite software after being converted into a satellite device.
- Has either a direct connection to an aggregation device, or is part of a satellite device cluster that is cabled to an aggregation device.
- Provides network interfaces to send and receive traffic for the Junos Fusion.
- Is managed and configured by the aggregation device.

The hardware specifications for satellite devices in a Junos Fusion Enterprise are discussed in greater detail in [Understanding Junos Fusion Enterprise Software and Hardware Requirements](#).

Satellite Device Clustering

Satellite device clustering allows you to connect up to ten satellite devices into a single cluster, and connect the satellite device cluster to the aggregation device as a single group instead of as individual satellite devices.

Satellite device clustering is particularly useful in scenarios where optical cabling options between buildings are limited and in scenarios where you want to preserve optical interfaces for other purposes. If you have, for instance, two buildings that have limited

optical interfaces between each other and you want to put an aggregation device in one building and ten satellite devices in the other building, you can group the ten satellite devices into a cluster and connect the cluster to the aggregation device with a single cable.

See ["Understanding Satellite Device Clustering in a Junos Fusion"](#) on page 13 for additional information on satellite device clustering.

Cascade Ports

A *cascade port* is a port on an aggregation device that sends and receives control and network traffic from an attached satellite device or satellite device cluster. All traffic passed between a satellite device or cluster and the aggregation device in a Junos Fusion traverses the cascade port.

The link that connects an aggregation device to a satellite device has an interface on each end of the link. The interface on the aggregation device end of the link is a cascade port. The interface on the satellite device end of the link is an uplink port.


Satellite devices are added to a Junos Fusion by configuring the interface on the aggregation device end of a link into a satellite device.

A cascade port is typically a 10-Gbps interface with an SFP+ transceiver or a 40-Gbps interface with a QSFP+ transceiver, but any interface on the aggregation device that connects to the satellite device can be converted into a cascade port.

Direct attach copper (DAC) cable connections cannot be configured as cascade ports.

The location of the cascade ports in a Junos Fusion are illustrated in [Figure 5 on page 9](#).

Figure 5: Cascade Ports

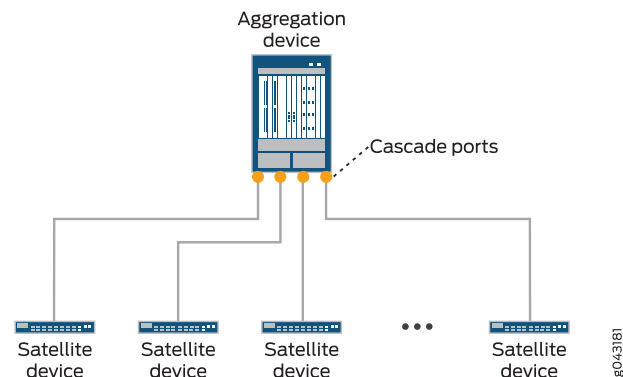

The hardware specifications for cascade ports for a Junos Fusion Enterprise are discussed in greater detail in [Understanding Junos Fusion Enterprise Software and Hardware Requirements](#).

Uplink Ports

An *uplink port* is a physical interface on a satellite device that provides a connection to an aggregation device. All network and control traffic on a satellite device that is transported to an aggregation device is sent or received on the satellite device's uplink port.

The link that connects an aggregation device to a satellite device has an interface on each end of the link. The interface on the aggregation device end of the link is a cascade port. The interface on the satellite device end of the link is an uplink port. Uplink ports are automatically created when a cascade port is configured on the aggregation device end of the link.

Each satellite device model (EX4300, EX2300, EX3400 and QFX5100) has a set of default uplink ports that the device uses to connect to the aggregation device and, in the case of a satellite device cluster, to other satellite devices. The set of uplink (and clustering) ports may be overridden by configuring an uplink port policy for the device. The uplink port policy must include at least one default uplink port. See [“Configuring Uplink Port Policies on a Junos Fusion” on page 82](#) for more information on uplink port policies.

An uplink port is typically a 10-Gbps SFP+ interface or a 40-Gbps QSFP+ interface, but any 1-Gbps interface that connects a satellite device to an aggregation device can become an uplink port if it is included in an uplink port policy.


A single satellite device can have multiple uplink port connections to an aggregation device. The multiple uplink port connections to a single aggregation device provide redundancy and additional bandwidth for satellite device to aggregation device connections.

Satellite devices in a Junos Fusion with dual aggregation devices must have at least one uplink port connection to each aggregation device.

In a satellite device cluster, some cluster member satellite devices do not have uplink port connections to the aggregation device. Satellite devices in a satellite device cluster pass traffic to the aggregation device using another cluster member's uplink port.

[Figure 6 on page 10](#) labels the uplink port location in a Junos Fusion Enterprise.

Figure 6: Junos Fusion Enterprise Ports

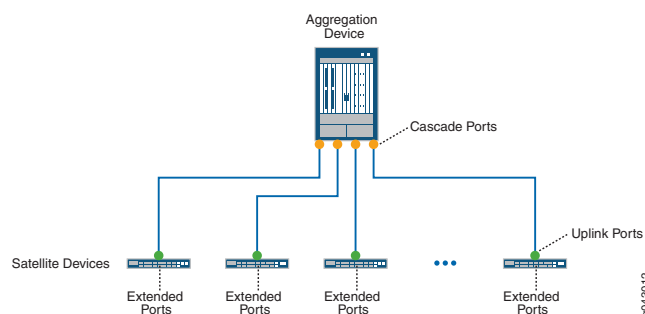

Extended Ports

An *extended port* is a network-facing port on a satellite device that transmits and receives network traffic for the Junos Fusion.

Network traffic received on an extended port is passed, when appropriate, to the aggregation device over the uplink port to cascade port link.

Each network-facing port on a satellite device in a Junos Fusion is also an extended port. A single cascade port is associated with multiple extended ports.

Figure 6 on page 10 labels the extended ports location in a Junos Fusion Enterprise.

Clustering Ports

Clustering ports are interfaces that interconnect satellite devices in the same satellite device cluster.

See “Understanding Satellite Device Clustering in a Junos Fusion” on page 13 for more information on clustering ports.

Understanding FPC Identifiers and Assignment in a Junos Fusion

In a Junos Fusion, each satellite device—including each member satellite device in a satellite device cluster—must have a Flexible PIC Concentrator identifier (FPC ID).

The FPC ID is in the range of 65-254, and is used for Junos Fusion configuration, monitoring, and maintenance. Interface names—which are identified using the *type-fpc / pic / port* format—use the FPC ID as the *fpc* variable when the satellite device is participating in a Junos Fusion. For instance, built-in port 2 on PIC 0 of a satellite device—a Gigabit Ethernet interface on a satellite device that is using 101 as its FPC ID—uses **ge-101/0/2** as its interface name.

A Junos Fusion provides two methods of assigning an FPC identifier:

- Unique ID-based FPC identification
- Connectivity-based FPC identification

In unique ID-based FPC identification, the FPC ID is mapped to the serial number or MAC address of the satellite device. For instance, if a satellite device whose serial number was **ABCDEFGHIJKL** was assigned to FPC ID 110 using unique ID-based FPC identification, the satellite device with the serial number **ABCDEFGHIJKL** will always be associated with FPC ID 110 in the Junos Fusion. If the satellite device with the serial number **ABCDEFGHIJKL** connects to the aggregation device using a different cascade port, the FPC ID for the satellite device remains 110.

In connectivity-based FPC identification, the FPC ID is mapped to the cascade port. For instance, connectivity-based FPC identification can be used to assign FPC ID 120 to the satellite device that connects to the aggregation device using cascade port **xe-0/0/2**. If the existing satellite device that connects to cascade port **xe-0/0/2** is replaced by a new satellite device, the new satellite device connected to the cascade port assumes FPC ID 120.

Unique ID-based FPC identification is configured using the [serial-number](#) or [system-id](#) statement in the [edit *chassis* [satellite-management](#) [fpc](#) *slot-id*] hierarchy.

Connectivity-based FPC identification is configured using the [cascade-ports](#) statement in the [edit *chassis* [satellite-management](#) [fpc](#) *slot-id*] hierarchy.

FPC ID configurations must be identical between aggregation devices in a Junos Fusion Enterprise with two aggregation devices. A satellite device that has two FPC IDs because of mismatched aggregation device configurations goes offline until the configuration issue is fixed.

If a prospective satellite device is connected to a Junos Fusion without having a configured FPC slot ID, the prospective satellite device does not participate in the Junos Fusion until an FPC ID is associated with it. The **show chassis satellite unprovision** output includes a list of satellite devices that are not participating in a Junos Fusion because of an FPC ID association issue.

Understanding Software in a Junos Fusion Enterprise

In a Junos Fusion, the aggregation device is responsible for all configuration and management within the Junos Fusion and runs Junos OS software.

The satellite devices, meanwhile, run satellite software that has the built-in intelligence to extend features on the Junos OS software onto the satellite device.

The role of Junos OS and satellite software is discussed in greater detail in [“Understanding Software in a Junos Fusion Enterprise” on page 22](#).

You can see software version compatibility information for any Junos Fusion Enterprise using the [Junos Fusion Hardware and Software Compatibility Matrices](#).

The software specifications for a Junos Fusion Enterprise are discussed in greater detail in [Understanding Junos Fusion Enterprise Software and Hardware Requirements](#).

Understanding Interface Naming in a Junos Fusion

Network interfaces in Junos OS are specified as follows:

- *type-fpc / pic / port*

In a Junos Fusion, the interface names on the satellite devices follow this naming convention, where:

- The *type* does not change for the interface when it becomes part of a Junos Fusion. The *type* for a 10-Gbps interface, for instance, remains **xe** regardless of whether the interface is or is not in a Junos Fusion.

You will see internally created **sd** interfaces in a Junos Fusion. The **sd** interfaces map to uplink ports and are used internally by the Junos Fusion to process some types of traffic.

- The *fpc* identifier in a Junos Fusion, which is user-configurable, is the FPC slot identifier. See [“Understanding FPC Identifiers and Assignment in a Junos Fusion” on page 11](#).

For instance, built-in port 2 on PIC 0—a Gigabit Ethernet interface that is acting as an extended port—on the satellite device numbered as FPC slot 101 would be identified as:

ge-101/0/2

Understanding Feature Configuration in a Junos Fusion Enterprise

In a Junos Fusion, the aggregation device is responsible for all configuration and management within the Junos Fusion and runs Junos OS software.

In a Junos Fusion with one aggregation device, all configuration—whether it's a command that enables a feature globally or enables a feature on a specific extended port—is done on the lone aggregation device.

In a Junos Fusion with two aggregation devices, the configuration of any command must match between aggregation devices. If a command is enabled differently on the aggregation devices, the command might be implemented in an unpredictable manner or may not be implemented at all.

A Junos Fusion Enterprise with dual aggregation devices is an MC-LAG topology. MC-LAG topologies support commitment synchronization, a feature that allows users to configure commands on one device within a group and then share that group with other devices. In a Junos Fusion Enterprise with dual aggregation devices, commitment synchronization can be used to ensure identical configuration between aggregation devices by sharing configuration between aggregation devices.

See “Understanding Configuration Synchronization in a Junos Fusion” on page 25.

Related Documentation

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
- [Network Configuration Example: Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#)
- [Junos Fusion Hardware and Software Compatibility Matrices](#)

Understanding Satellite Device Clustering in a Junos Fusion

This topic describes satellite device clustering in a Junos Fusion. It covers:

- [Satellite Device Clustering Overview on page 14](#)
- [Satellite Device Cluster Topology on page 14](#)
- [Satellite Device Cluster Names and Identifiers on page 14](#)
- [Satellite Device Cluster Uplink Interfaces on page 14](#)
- [Cluster Interfaces on page 15](#)
- [Satellite Device Cluster Software Management on page 15](#)
- [FPC Identifiers and Extended Port Interfaces in a Satellite Device Cluster on page 15](#)
- [Understanding 40-Gbps Interfaces with QSFP+ Transceiver Roles for Satellite Devices in a Satellite Device Cluster on page 16](#)

Satellite Device Clustering Overview

Satellite device clustering allows you to connect up to ten satellite devices into a single cluster, then connect the satellite device cluster to the aggregation device as a single group instead of as individual satellite devices.


Satellite device clustering is particularly useful in scenarios where optical cabling options between buildings are limited and in scenarios where you want to preserve optical interfaces for other purposes. If you have, for instance, two buildings that have limited optical interfaces between each other and you want to put an aggregation device in one building and ten satellite devices in the other building, you can group the ten satellite devices into a cluster and connect the cluster to the aggregation device with a single cable.

Satellite Device Cluster Topology

A satellite device cluster must be cabled into a ring topology. No other cabling topologies are supported for a satellite device cluster.

Figure 7 on page 14 shows a picture of a sample satellite device cluster connected to a single aggregation device.

Figure 7: Satellite Device Cluster Topology

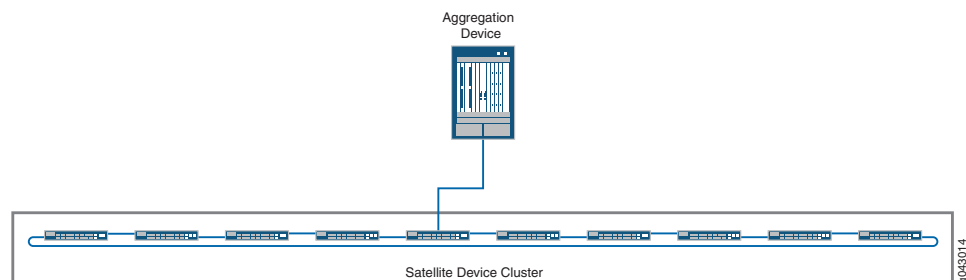

Satellite Device Cluster Names and Identifiers

In a Junos Fusion, each satellite device cluster is named and assigned a number. The number is called the *cluster identifier*, or *cluster ID*.

The cluster name and ID are used by the aggregation device to identify a cluster for configuration, monitoring, and troubleshooting purposes.

The cluster name and ID are set using the **set chassis satellite-management cluster *cluster-name* cluster-id *cluster-id-number*** statement.

Satellite Device Cluster Uplink Interfaces

A satellite device cluster must have at least one member with an uplink interface connection to the aggregation device.

In a dual aggregation device topology using satellite device clustering, each satellite device cluster must have at least one uplink interface connection to both aggregation

devices. The uplink interfaces to the aggregation devices can be on any member satellite devices in each satellite device cluster.



NOTE: Junos Fusion Provider Edge supports only one aggregation device.

A satellite device cluster supports multiple uplink interfaces. The uplink interfaces can be on any satellite devices that are members of the satellite device cluster. The advantages of configuring multiple uplink interfaces for a satellite device cluster is resiliency—all traffic can be forwarded to another uplink interface if an uplink interface fails—and efficiency—multiple uplink interfaces can reduce the number of hops that traffic takes across a cluster before it is forwarded to an aggregation device.

Cluster Interfaces

Clustering ports are interfaces that interconnect satellite devices in the same satellite device cluster.

Traffic originating from an access device connected to an extended port travels over cluster interfaces to get to an uplink port. Traffic from an aggregation device travels to a satellite device uplink port then over cluster interfaces before it is delivered to an access device connected to an extended port.

Cluster interfaces are typically 10-Gbps SFP+ interfaces. 10-Gbps SFP+ and 40-Gbps QSFP+ interfaces can be used as cluster interfaces. Other interfaces cannot be used as cluster interfaces by default. To use other interfaces as cluster interfaces, you must configure a candidate uplink port policy.

See [“Configuring Uplink Port Policies on a Junos Fusion” on page 82](#) for additional information on candidate uplink port policies.

Satellite Device Cluster Software Management

All satellite devices in a satellite device cluster are associated with a single satellite software upgrade group, which is automatically created when a satellite device cluster is configured as part of a Junos Fusion. The satellite software upgrade group is named after the satellite device cluster name, and ensures that all satellite devices in the cluster run the same version of satellite software.

See [“Understanding Software in a Junos Fusion Enterprise” on page 22](#) for additional information on software management for a satellite device cluster.

See [Understanding Junos Fusion Enterprise Software and Hardware Requirements](#) for information on software requirements for satellite devices in a satellite device cluster.

FPC Identifiers and Extended Port Interfaces in a Satellite Device Cluster

Each satellite device in a satellite device cluster has a unique FPC identifier (FPC ID), in the same way that a satellite device that is not part of a cluster has a unique FPC ID.

For this reason, all interface naming for satellite device cluster member switches is not impacted by cluster membership. If a switch is assigned FPC ID 103, for instance, the

aggregation device views the satellite device as FPC 103 regardless of whether it is or is not part of a satellite device cluster.

The FPC ID is used in the FPC slot name for an extended port interface; for instance, ge-103/0/2. An extended port is any network-facing interface on a satellite device. As with FPC ID naming, extended port interface names are not impacted by satellite device cluster membership status.



NOTE: Satellite devices in a cluster are configured using the unique ID-based FPC identification method of FPC identifier assignment. For more information, see *Understanding FPC Identifiers and Assignment in a Junos Fusion* in “Understanding Junos Fusion Enterprise Components” on page 5.

Understanding 40-Gbps Interfaces with QSFP+ Transceiver Roles for Satellite Devices in a Satellite Device Cluster

40-Gbps QSFP+ interfaces on satellite devices in a satellite device cluster can be used as clustering ports to cable to other satellite devices in the cluster or as uplink ports to cable the satellite device cluster to the aggregation device.

40-Gbps QSFP+ interfaces on EX2300, EX3400, EX4300 and QFX5100 satellite devices are default uplink ports. Please see [Table 3 on page 16](#) for the default uplink ports for satellite devices. When these devices are part of a satellite device cluster, the default uplink ports cannot be configured as extended ports to pass network traffic unless they have a direct connection to the aggregation device or if there is an uplink port policy configured that excludes them from acting as uplink ports.

Table 3: Default Uplink Interfaces for Junos Fusion Enterprise Satellite Devices

Device Type	Default Uplink Interfaces
EX2300 (4 ports on PIC1)	1/0 through 1/3
EX3400 (4 ports each on PIC1 and PIC2)	1/0 through 1/3 and 2/0 through 2/3
EX4300-24T (4 ports each on PIC1 and PIC2)	1/0 through 1/3 and 2/0 through 2/3
EX4300-32F (4 ports on PIC 0, 2 ports on PIC 1 and 8 ports on PIC 2)	0/32 through 0/35 1/0 through 1/1 2/0 through 2/7
EX4300-48T (4 ports each on PIC1 and PIC2)	1/0 through 1/3 and 2/0 through 2/3
EX4300-48T-BF (4 ports each on PIC1 and PIC2)	1/0 through 1/3 and 2/0 through 2/3
EX4300-48T-DC (4 ports each on PIC1 and PIC2)	1/0 through 1/3 and 2/0 through 2/3
EX4300-48T-DC-BF (4 ports each on PIC1 and PIC2)	1/0 through 1/3 and 2/0 through 2/3

Table 3: Default Uplink Interfaces for Junos Fusion Enterprise Satellite Devices (continued)

Device Type	Default Uplink Interfaces
QFX5100-48S-6Q (6 QSFP+ ports)	0/48 through 0/53
QFX5100-48T-6Q (6 QSFP+ ports)	0/48 through 0/53

**Related
Documentation**

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
- [Understanding Junos Fusion Enterprise Components on page 5](#)
- [Configuring Uplink Port Policies on a Junos Fusion on page 82](#)

Understanding Junos Fusion Ports


In a Junos Fusion topology, cascade, uplink, and extended ports are components that play key roles. [Figure 8 on page 18](#) and [Figure 9 on page 19](#) show sample Junos Fusion topologies, which serve as points of reference for this discussion of cascade, uplink, and extended ports.

In the Junos Fusion topology shown in [Figure 8 on page 18](#), two aggregation devices and two satellite devices are deployed. The aggregation devices are connected to each other through a multichassis link aggregation group (MC-LAG). Each satellite device is connected to its respective aggregation device through one or two links.

In the Junos Fusion Data Center topology shown in [Figure 9 on page 19](#), four aggregation devices and four satellite devices are deployed. The four aggregation devices form an EVPN core fabric wherein each satellite device is multihomed to each aggregation device. Also, in this topology, some hosts are single-homed to a satellite device, and other hosts are multihomed to two satellite devices.


On the aggregation devices in each illustration, each link is connected to a cascade port (for example, CP1 on Aggregation device 1), while on the satellite devices, each link is connected to an uplink port (for example, UP1 on Satellite device 1). Hosts 1 through 4 are connected to Satellite device 1 through extended ports EP1 through EP4, and so on.

Figure 8: Cascade, Uplink, and Extended Ports in a Junos Fusion Topology With Two Aggregation Devices and MC-LAG

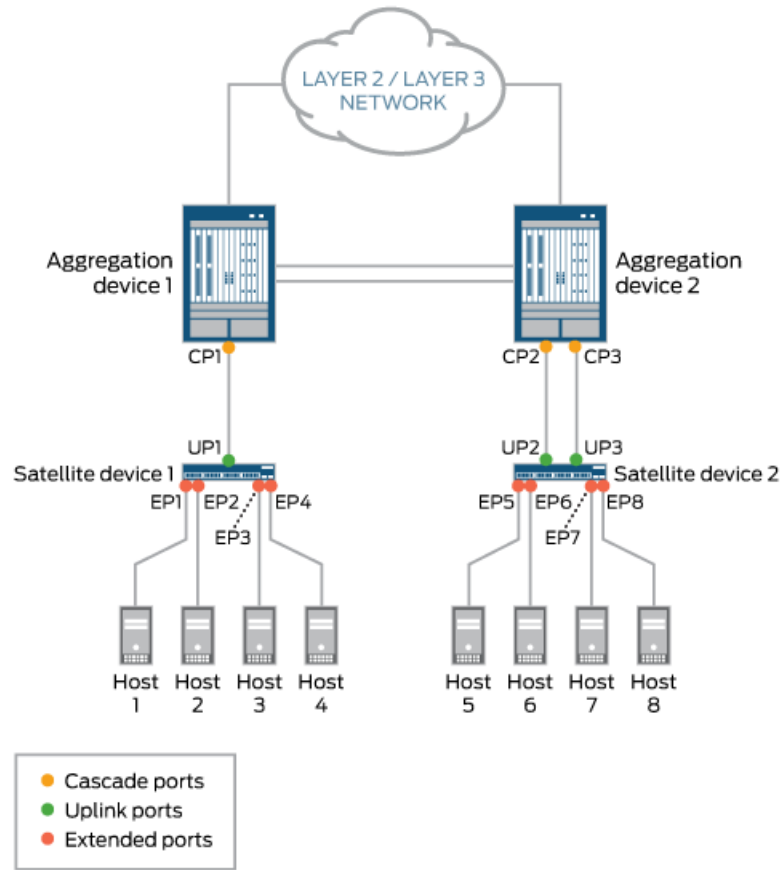

8043167

Figure 9: Cascade, Uplink, and Extended Ports in a Junos Fusion Data Center Topology With Four Aggregation Devices and EVPN

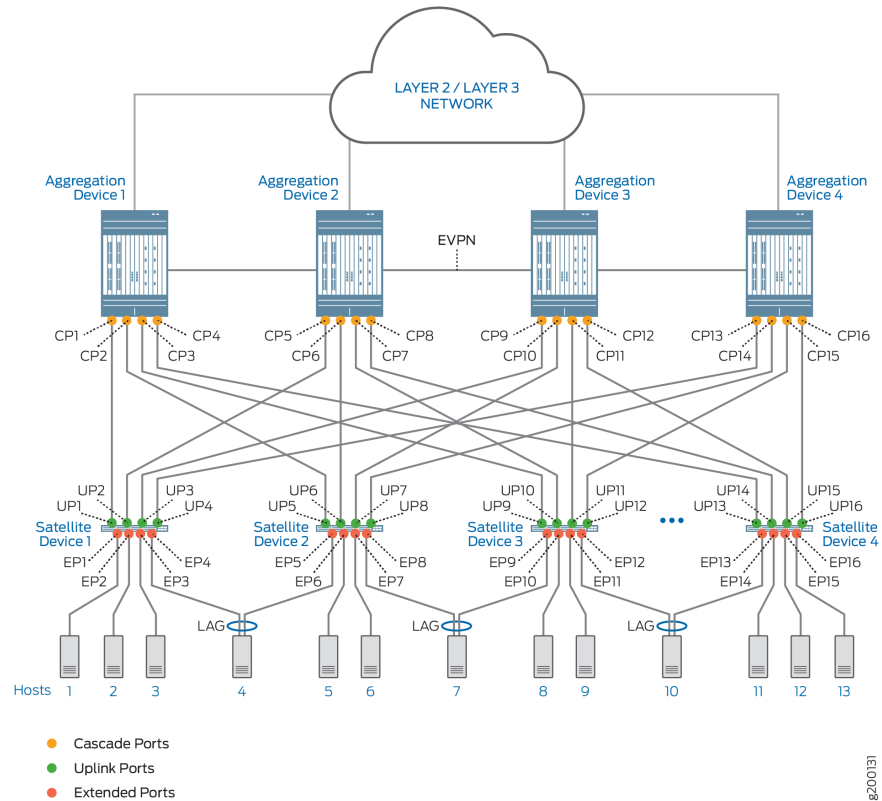

This topic provides the following information:

- [Understanding Cascade Ports on page 19](#)
- [Understanding Uplink Ports on page 20](#)
- [Understanding Extended Ports on page 21](#)

Understanding Cascade Ports

A *cascade port* is a physical interface on an aggregation device that provides a connection to a satellite device. A cascade port on an aggregation device connects to an uplink port on a satellite device.

On an aggregation device, you can set up one or more cascade port connections with a satellite device. For example, in the Junos Fusion topology shown in [Figure 8 on page 18](#), Aggregation device 1 has one cascade port connection (CP1) to Satellite device 1, and Aggregation device 2 has two cascade port connections (CP2 and CP3) to Satellite device 2. In the Junos Fusion Data Center in [Figure 9 on page 19](#), where EVPN multihoming is implemented, each aggregation device is connected to each satellite device through one cascade port. For example, on Aggregation device 1, cascade port CP1 is connected to the leftmost satellite device, cascade port CP2 is connected to the next satellite device, and so on.

When there are multiple cascade port connections to a satellite device, as shown in [Figure 8 on page 18](#), the traffic handled by the ports is automatically load-balanced. For a packet destined for a satellite device, the cascade port over which to forward the packet is chosen based on a per-packet hash that is computed using key fields in the packet. To select the key fields to be used, you can specify the **hash-key** statement in the **[edit forwarding-options]** hierarchy or the **enhanced-hash-key** statement in the **[edit forwarding-options]**, **[edit logical-systems *logical-system-name* routing-instances *instance-name* forwarding-options]**, and **[edit routing-instances *instance-name* forwarding-options]** hierarchies.



NOTE: The 802.1BR tag is not included in the load-balancing hash computation for cascade ports.

In addition, a cascade port can handle the traffic for all extended ports on a particular satellite device. However, you cannot specify that a particular cascade port handle the traffic for a particular extended port.

After you configure an interface as a cascade port (for example, by issuing **set interfaces xe-0/0/1 cascade-port**), you cannot configure the interface as a Layer 2 interface (for example, by issuing **set interfaces xe-0/0/1 unit 0 family bridge**) or a Layer 3 interface (for example, **set interfaces xe-0/0/1 unit 0 family inet**). If you try to configure a cascade port as a Layer 2 or Layer 3 interface, you receive an error message.

On a cascade port, you can configure class-of-service (CoS) policies.

Understanding Uplink Ports

An *uplink port* is a physical interface on a satellite device that provides a connection to an aggregation device. An uplink port on a satellite device connects to a cascade port on an aggregation device.

After a cascade port is configured on the aggregation device end of a link, a corresponding uplink port is automatically created on the satellite device. From the aggregation device, you can monitor port and queue statistics for uplink ports. However, we do not recommend that you configure Layer 2 or Layer 3 forwarding features on uplink ports.

On a satellite device, you can set up one or more uplink port connections to an aggregation device. For example, in the Junos Fusion topology shown in [Figure 8 on page 18](#), Satellite device 1 has one uplink port (UP1) to Aggregation device 1, and Satellite device 2 has two uplink ports (UP2 and UP3) to Aggregation device 2. In the Junos Fusion Data Center in [Figure 9 on page 19](#), where EVPN multihoming is implemented, each satellite device is connected to each aggregation device through an uplink port. For example, on the leftmost satellite device, uplink port UP1 is connected to Aggregation device 1, uplink port UP2 is connected to Aggregation device 2, and so on.

When a satellite device has multiple uplink ports to an aggregation device, the traffic from the extended ports is automatically load-balanced among the uplink ports. For example, in the Junos Fusion topology shown in [Figure 8 on page 18](#), the traffic from extended ports EP5 through EP8 is load balanced between uplink ports UP2 and UP3 to

reach Aggregation device 2. In this situation, each packet is examined, and if an IPv4 or IPv6 header is found, a load-balancing algorithm chooses the uplink port based on the header (source and destination IP addresses, and source and destination TCP/UDP ports). If an IPv4 or IPv6 header is not found, the load-balancing algorithm chooses the uplink port based on the Layer 2 header (destination and source MAC addresses, Ether type, and outer VLAN ID) of the packet.

Understanding Extended Ports

An *extended port* is a physical interface on a satellite device that provides a connection to servers or endpoints. To an aggregation device, a satellite device appears as an additional Flexible PIC Concentrator (FPC) and the extended ports on the satellite device appear as additional interfaces to be managed by the aggregation device.

On aggregation devices, you can configure extended ports by using the same Junos OS CLI and naming convention used for Junos OS interfaces on standalone routers and switches. The only difference is that when you specify an extended port name, the FPC slot number must be in the range of 100 through 254 in Junos OS Release 14.2 and in the range of 65 through 254 in Junos OS Release 16.1 and later.

For example, for the four extended ports shown on Satellite device 1 in [Figure 8 on page 18](#) and the leftmost satellite device in [Figure 9 on page 19](#), the FPC slot number could be 100, the PIC slot number could be 0, the first extended port could be 1, the second extended port could be 2, the third extended port could be 3, and the fourth extended port could be 4. The complete 10-Gigabit Ethernet extended port names could be as follows:

xe-100/0/1

xe-100/0/2

xe-100/0/3

xe-100/0/4

You can configure the following features on extended ports:

- Layer 2 bridging protocols
- Integrated routing and bridging (IRB)
- Firewall filters



NOTE: In a Junos Fusion Data Center with EVPN wherein VXLAN encapsulation is used, firewall filters with next-interface or next-ip actions are not supported.

- CoS policies

Related Documentation

- [Understanding the Flow of Data Packets in a Junos Fusion Topology on page 37](#)
- *hash-key*

- *enhanced-hash-key*

Understanding Software in a Junos Fusion Enterprise

This topic discusses the role of software in a Junos Fusion Enterprise. It covers:

- [Understanding Junos OS for the Aggregation Device in a Junos Fusion on page 22](#)
- [Understanding Satellite Software for the Satellite Devices in a Junos Fusion on page 22](#)
- [Understanding Satellite Software Upgrade Groups on page 23](#)
- [Understanding Satellite Software Requirements for a Satellite Device Cluster on page 24](#)
- [Understanding Satellite Software Requirements in a Dual Aggregation Device Topology on page 24](#)
- [Understanding the Platform Specific Satellite Software Image on page 24](#)

Understanding Junos OS for the Aggregation Device in a Junos Fusion

An aggregation device in a Junos Fusion always runs Junos OS software and is responsible for almost all management tasks, including configuring all network-facing ports—the *extended ports*—on all satellite devices in the Junos Fusion. The extended ports in a Junos Fusion, therefore, typically support features that are supported by the version of Junos OS running on the aggregation device.

An aggregation device in a Junos Fusion runs the same Junos OS software regardless of whether it is or is not part of a Junos Fusion. Hence, Junos OS software is acquired, installed, and managed on an aggregation device in a Junos Fusion in the same manner that it is acquired, installed, and managed on a standalone device that is not part of a Junos Fusion.

Understanding Satellite Software for the Satellite Devices in a Junos Fusion

The satellite devices in a Junos Fusion run satellite software that has the built-in intelligence to extend features on the Junos OS software onto the satellite device. The satellite software is a Linux-based operating system that allows the satellite devices to communicate with the aggregation device for control plane data while also passing network traffic.

All satellite devices in a Junos Fusion must run satellite software that is compatible with the Junos OS software running on the aggregation device. See [Junos Fusion Hardware and Software Compatibility Matrices](#) for software compatibility requirements and links to the satellite software.

You can run the same version of satellite software on satellite devices that are different hardware platforms. For instance, if your Junos Fusion included EX2300 and EX4300 switches as satellite devices, the EX2300 and EX4300 switches acting as satellite devices could install the satellite software from the same satellite software package.

You can download satellite software from the software center for any satellite device. See the [Junos Fusion Hardware and Software Compatibility Matrices](#), which provides software requirements as well as links to satellite device and Junos OS software.

Additionally, you have the option to order some switches with the satellite software preinstalled from the factory.

The satellite software packages are stored on the aggregation device after a satellite software package installation—which is typically managed from the aggregation device—has been executed. The satellite software packages remain in the file system even if the Junos OS on the aggregation device is upgraded. The satellite software on a satellite device can be updated individually or, more commonly, using satellite software upgrade-groups, which are discussed in more detail in this document.

A device cannot simultaneously run Junos OS and the satellite software. If you remove a satellite device from a Junos Fusion, you have to install the Junos OS onto the device before you can use it in your network as a standalone Junos switch.

Satellite software is sometimes referred to as satellite network operating system (SNOS) software in the command-line interface and in other documentation.

The satellite software requirements for a Junos Fusion Enterprise are discussed in [Understanding Junos Fusion Enterprise Software and Hardware Requirements](#).

Understanding Satellite Software Upgrade Groups

A satellite software upgrade group is a group of satellite devices that are designated to upgrade to the same satellite software version. One Junos Fusion can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusions to avoid network downtimes during satellite software installations.

When a satellite device is added to a Junos Fusion, the aggregation device checks if the satellite device is using an FPC ID that is included in a satellite software upgrade group. If the satellite device is using an FPC ID that is part of a satellite software upgrade group, the device upgrades its satellite software to the version of software associated with the satellite software upgrade group - unless it is already running the defined version.

When the satellite software package associated with an existing satellite software group is changed, the satellite software for all member satellite devices is upgraded using a throttled upgrade. The throttled upgrade ensures that the aggregation device is not overwhelmed with providing satellite software simultaneously to many satellite devices.

When satellite devices of a satellite device cluster are upgraded, members of the same satellite device cluster download the software to be used and install the software at the same time as other members of the cluster. This ensures that cluster members run the same version of software as each other in case there are incompatibilities between satellite software versions.

The two most common methods of installing satellite software onto a Junos switch—autoconverting a device into a satellite device when it is cabled into an aggregation device and manually converting a device that is cabled into an aggregation device into a satellite device—require the presence of a configured satellite software upgrade group.

Software upgrade groups are configured and managed on the aggregation device.

Understanding Satellite Software Requirements for a Satellite Device Cluster

All satellite devices in a satellite device cluster are associated with a single satellite software upgrade group, which is automatically created when a satellite device cluster is configured as part of a Junos Fusion. The satellite software upgrade group uses the same name as the satellite device cluster name, and ensures that all satellite devices in the cluster run the same version of satellite software.

The automatically created software upgrade group for the satellite device cluster is managed like any other software upgrade group.

Understanding Satellite Software Requirements in a Dual Aggregation Device Topology

In a Junos Fusion with dual aggregation devices, you must ensure that only one version of satellite software is associated with each satellite software upgrade group.

When configuring a Junos Fusion into a dual aggregation topology, do one of the following to ensure satellite software is properly maintained:

- Configure all satellite software upgrade groups on one of the aggregation devices.
- Configure the exact same satellite software upgrade group—a satellite software upgrade group with the same name and same FPC ID associations—on both aggregation devices.

If there is a mismatch between satellite software upgrade group membership or satellite software version for a satellite software upgrade group, satellite software is not upgraded on any satellite devices in the upgrade group until the configuration and version association is addressed.

Understanding the Platform Specific Satellite Software Image

The platform specific satellite software package is required to install satellite software onto an EX2300, EX3400 or EX4300 switch that is not connected to an aggregation device. Use the platform specific satellite software package when you want to manually install satellite software on a switch using the **request chassis device-mode satellite URL-to-satellite-software** command before you interconnect that switch into a Junos Fusion Enterprise.



NOTE: Platform specific satellite software is not required for QFX5100 switches.

You can identify the platform specific satellite software by looking for the satellite-ppc prefix in the satellite software image name; for example, satellite-ppc-3.0R1.1-signed.tgz. To find the image that is compatible with your satellite device, please refer to [Junos Fusion Hardware and Software Compatibility Matrices](#).

Related Documentation

- [Junos Fusion Hardware and Software Compatibility Matrices](#)

- [Understanding Junos Fusion Enterprise Software and Hardware Requirements on page 26](#)
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

Understanding Configuration Synchronization in a Junos Fusion

All configuration and management for a Junos Fusion are done from the aggregation devices, which run Junos OS software.

In a Junos Fusion with one aggregation device, all configuration—whether it's a configuration statement that enables a feature globally or enables a feature on a specific extended port—is done from the lone aggregation device.

A Junos Fusion with multiple aggregation devices often requires that the configuration of a feature—for example, an extended port, and entities such as routing instances and VLANs that include the extended port—must match on all aggregation devices. If a configuration statement for the feature—in this case, the extended port—is specified differently on one aggregation device, the statement on that particular aggregation device might be implemented in an unpredictable manner or might not be implemented at all.

Junos Fusion supports configuration synchronization, a feature that allows users to specify configuration statements within a group on one aggregation device and then share that group with other aggregation devices.

We strongly recommend using configuration synchronization to configure software features in multiple aggregation device topologies. Configuration synchronization ensures configuration consistency by sharing the exact same configuration between aggregation devices. Configuration synchronization also simplifies administration of a Junos Fusion by allowing users to enter configuration statements once in a configuration group and apply the configuration group to all aggregation devices rather than repeating a configuration procedure manually on each aggregation device.

For more information about configuration synchronization, see [“Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion” on page 77](#), [Understanding MC-LAG Configuration Synchronization](#), and [Synchronizing and Committing MC-LAG Configurations](#).

See [Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#) for a sample Junos Fusion Enterprise topology configured largely using configuration synchronization. See [Enterprise Data Center: Junos Fusion Data Center Architecture](#) for a sample Junos Fusion Data Center topology largely configured using configuration synchronization.

Configuration Synchronization and Aggregation Devices with Two Routing Engines in a Junos Fusion Data Center with EVPN

QFX10008 and QFX10016 switches, which support two Routing Engines, can function as aggregation devices in a Junos Fusion Data Center with EVPN. When a configuration group is applied to a QFX10008 or QFX10016 switch, the configuration must be shared with both Routing Engines on the switch.

You can identify each Routing Engine by configuring an IP address for the Routing Engine in slot 0 (re0) and another IP address for the Routing Engine in slot 1 (re1). We recommend using management interface em0.0 for both re0 and re1, which you can configure using configuration groups for re0 and re1. For example:

```
[edit]
user@aggregation-device-1# set groups re0 interfaces em0 unit 0 family inet address
172.16.75.10/24
user@aggregation-device-1# set groups re1 interfaces em0 unit 0 family inet address
172.16.75.20/24
```

When applying a configuration group to a Routing Engine, you must specify the IP address assigned to the Routing Engine. For example, if a Junos Fusion Data Center with an EVPN architecture has four QFX10008 switches that serve as aggregation devices, you can apply a configuration group named overlay to Routing Engines re0 and re1 on each aggregation device as follows. This configuration is performed on aggregation device-1 (ad-1):

```
[edit]
user@aggregation-device-1# set groups overlay when peers 172.16.75.10 (ad-1, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.20 (ad-1, re1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.30 (ad-2, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.40 (ad-2, re1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.50 (ad-3, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.60 (ad-3, re1)
user@aggregation-device-1# set groups overlay when peers 172.16.75.70 (ad-4, re0)
user@aggregation-device-1# set groups overlay when peers 172.16.75.80 (ad-4, re1)
```

Related Documentation • [Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion on page 77](#)

Understanding Junos Fusion Enterprise Software and Hardware Requirements

This topic describes the software and hardware requirements for a Junos Fusion Enterprise. For Junos Fusion Provider Edge software and hardware requirements, see [Understanding Junos Fusion Provider Edge Software and Hardware Requirements](#). For Junos Fusion Data Center software and hardware requirements, see [Understanding Junos Fusion Data Center Software and Hardware Requirements](#).

It covers:

- [Aggregation Device to Satellite Device Software Compatibility on page 26](#)
- [Aggregation Devices on page 27](#)
- [Satellite Devices on page 30](#)

Aggregation Device to Satellite Device Software Compatibility

A Junos Fusion Enterprise includes an aggregation device or devices running Junos OS and satellite devices running satellite software. The version of Junos OS running on the aggregation device must be compatible with the satellite software versions running on the satellite device in order for the Junos Fusion Enterprise to function.

See [Junos Fusion Hardware and Software Compatibility Matrices](#) for software compatibility information for any Junos Fusion Enterprise.



NOTE: When you upgrade the satellite software version to a release later than the recommend versions listed in the [Junos Fusion Hardware and Software Compatibility Matrices](#), your Junos Fusion system will only benefit from the satellite software fixes. To acquire the full benefits of a satellite software release, including satellite software fixes and new features, we recommend you upgrade both the aggregation device software and its compatible satellite device software for a complete upgrade.

Aggregation Devices

This section details the hardware and software requirements for an aggregation device in a Junos Fusion Enterprise. It covers:

- [Aggregation Device Hardware Models on page 27](#)
- [Maximum Number of Aggregation Devices on page 28](#)
- [Cascade Ports on page 28](#)

Aggregation Device Hardware Models

[Table 4 on page 27](#) lists the hardware platforms that are supported as aggregation devices for a Junos Fusion Enterprise. It also lists the supported satellite devices for each Junos OS Release supporting Junos Fusion Enterprise.

Table 4: Supported Aggregation Device Hardware and Supported Satellite Devices by Junos OS Release

Aggregation Device Hardware	Supported Satellite Devices by Junos OS Release
EX9204 Switch	16.1R1 (EX4300)
	17.1R1 (EX2300, EX3400, EX4300)
	17.3R1 (EX2300, EX3400, EX4300, QFX5100)
	18.2R1 (EX2300, EX3400, EX4300, QFX5100, EX4600)
EX9208 Switch	16.1R1 (EX4300)
	17.1R1 (EX2300, EX3400, EX4300)
	17.3R1 (EX2300, EX3400, EX4300, QFX5100)
	18.2R1 (EX2300, EX3400, EX4300, QFX5100, EX4600)

Table 4: Supported Aggregation Device Hardware and Supported Satellite Devices by Junos OS Release (continued)

Aggregation Device Hardware	Supported Satellite Devices by Junos OS Release
EX9214 Switch	16.1R1 (EX4300)
	17.1R1 (EX2300, EX3400, EX4300)
	17.3R1 (EX2300, EX3400, EX4300, QFX5100)
	18.2R1 (EX2300, EX3400, EX4300, QFX5100, EX4600)
EX9251 Switch	18.1R1 (EX2300, EX3400, EX4300, QFX5100)
	18.2R1 (EX2300, EX3400, EX4300, QFX5100, EX4600)
EX9253 Switch	18.2R1 (EX2300, EX3400, EX4300, QFX5100, EX4600)

Maximum Number of Aggregation Devices

A Junos Fusion Enterprise supports one or two aggregation devices.

Cascade Ports

A *cascade port* is a port on an aggregation device that sends and receives control and network traffic from an attached satellite device.

Table 5 on page 28 provides a list of line cards on an EX9200 switch that have interfaces that can be converted into cascade ports, and the initial Junos OS release that introduced cascade port support for interfaces on the line card.

Direct attach copper (DAC) cable connections cannot be configured as cascade ports.



BEST PRACTICE: A cascade port is typically a 10-Gbps interface with an SFP+ transceiver or a 40-Gbps interface with a QSFP+ transceiver, although other interfaces on the aggregation device can be converted into a cascade port.

Table 5: Line Cards on EX9200 Switch Cascade Port Support

Line Card	Switch Model	Initial Junos OS Release
EX9200-6QS (6-port 40-Gigabit Ethernet QSFP+, 24-port 10-Gigabit Ethernet SFP+ line card)	EX9204	16.1R1
	EX9208	16.1R1
	EX9214	16.1R1

Table 5: Line Cards on EX9200 Switch Cascade Port Support (continued)

Line Card	Switch Model	Initial Junos OS Release
EX9200-32XS (32-port SFP+ line card)	EX9204	16.1R1
	EX9208	16.1R1
	EX9214	16.1R1
EX9200-40T (40-port 10/100/1000BASE-T RJ-45 line card)	EX9204	16.1R1
	EX9208	16.1R1
	EX9214	16.1R1
EX9200-MPC (modular line card) The following MICs are supported: <ul style="list-style-type: none"> • EX9200-10XS-MIC • EX9200-20F-MIC • EX9200-40T-MIC 	EX9204	17.1R1
	EX9208	17.1R1
	EX9214	17.1R1
EX9200-40F (40-port 100FX/1000BASE-X SFP line card)	EX9204	17.4R1
	EX9208	17.4R1
	EX9214	17.4R1
EX9200-40F-M (40-port 100FX/1000BASE-X SFP line card with MACsec)	EX9204	17.4R1
	EX9208	17.4R1
	EX9214	17.4R1
EX9200-40XS (40-port 10GbE SFP+ line card with MACsec)	EX9204	17.4R1
	EX9208	17.4R1
	EX9214	17.4R1

Table 5: Line Cards on EX9200 Switch Cascade Port Support (continued)

Line Card	Switch Model	Initial Junos OS Release
EX9200-12QS (12-port 10GbE/40GbE QSFP+ or 4-port 100GbE QSFP28 combo line card)	EX9204	17.4R1
	EX9208	17.4R1
	EX9214	17.4R1
NOTE: All ports can operate at 10-Gbps and 40-Gbps speeds. The ports are configured to operate at 10-Gbps speed by default.		
EX9253-6Q12C (12-port QSFP28 40GbE/100GbE and 6-port QSFP+ 40GbE line card)	EX9253	18.2R1
EX9253-6Q12C-M (12-port QSFP28 40GbE/100GbE and 6-port QSFP+ 40GbE line card with MACsec)	EX9253	18.2R1

Satellite Devices

This section details the hardware and software requirements for a satellite device in a Junos Fusion Enterprise. It covers:

- [Satellite Device Hardware Models on page 30](#)
- [Satellite Device Firmware Requirements on page 32](#)
- [Satellite Device Software Requirements for Satellite Device Clustering on page 33](#)
- [Satellite Software to Junos OS Conversion Requirements on page 34](#)
- [Power over Ethernet Requirements for a Satellite Device on page 35](#)
- [Maximum Number of Satellite Devices or Extended Ports on page 35](#)

Satellite Device Hardware Models

[Table 6 on page 31](#) lists the EX2300 hardware platforms that are supported as satellite devices for a Junos Fusion Enterprise.

To find the required satellite software version, see [Junos Fusion Hardware and Software Compatibility Matrices](#).

Table 6: Supported EX2300 Satellite Device Hardware and Initial Junos OS Release

Hardware	Initial Junos OS Release
EX2300-C-12P	15.1X53-D55
EX2300-C-12T	15.1X53-D55
EX2300-24P	15.1X53-D55
EX2300-24T	15.1X53-D55
EX2300-24T-DC	15.1X53-D55
EX2300-48P	15.1X53-D55
EX2300-48T	15.1X53-D55

[Table 7 on page 31](#) lists the EX3400 hardware platforms that are supported as satellite devices for a Junos Fusion Enterprise.

To find the required satellite software version, see [Junos Fusion Hardware and Software Compatibility Matrices](#).

Table 7: Supported EX3400 Satellite Device Hardware and Initial Junos OS Release

Hardware	Initial Junos OS Release
EX3400-24P	15.1X53-D55
EX3400-24T	15.1X53-D55
EX3400-24T-DC	15.1X53-D55
EX3400-48P	15.1X53-D55
EX3400-48T	15.1X53-D55
EX3400-48T-AFI	15.1X53-D55

[Table 8 on page 31](#) lists the EX4300 hardware platforms that are supported as satellite devices for a Junos Fusion Enterprise.

To find the required satellite software version, see [Junos Fusion Hardware and Software Compatibility Matrices](#).

Table 8: Supported EX4300 Satellite Device Hardware and Initial Junos OS Release

Hardware	Initial Junos OS Release
EX4300-24P	14.1X53-D43

Table 8: Supported EX4300 Satellite Device Hardware and Initial Junos OS Release (continued)

Hardware	Initial Junos OS Release
EX4300-24T	14.1X53-D43
EX4300-32F	14.1X53-D43
EX4300-48P	14.1X53-D43
EX4300-48T	14.1X53-D43
EX4300-48T-BF	14.1X53-D43
EX4300-48T-DC	14.1X53-D43
EX4300-48T-DC-BF	14.1X53-D43

Table 9 on page 32 lists the QFX5100 hardware platforms that are supported as satellite devices for a Junos Fusion Enterprise.

To find the required satellite software version, see [Junos Fusion Hardware and Software Compatibility Matrices](#).

Table 9: Supported QFX5100 Satellite Device Hardware and Initial Junos OS Release

Hardware	Initial Junos OS Release
QFX5100-48S-6Q	14.1X53-D43
QFX5100-48T-6Q	14.1X53-D43

Table 10 on page 32 lists the EX4600 hardware platforms that are supported as satellite devices for a Junos Fusion Enterprise.



NOTE: The EX4600-EM-8F and QFX-EM-4Q expansion modules are not supported in a Junos Fusion Enterprise.

Table 10: Supported EX4600 Satellite Device Hardware and Initial Junos OS Release

Hardware	Initial Junos OS Release
EX4600-40F	14.1X53-D47

Satellite Device Firmware Requirements

Table 11 on page 33 lists the firmware requirements for satellite devices for a Junos Fusion Enterprise.

Table 11: Minimum Satellite Device Firmware Version Requirements

Satellite Device	Minimum U-boot Release	Minimum Loader Version	Minimum PoE Firmware
EX2300	1.3.2	NA	1.6.1.1.9
EX3400	1.3.0	NA	1.6.1.1.9
EX4300	NA	NA	2.6.3.9.2.1
EX4600	NA	NA	NA
QFX5100	NA	NA	NA

Satellite Device Software Requirements for Satellite Device Clustering

A standalone switch must be running the required satellite software before it can be added to a Junos Fusion Enterprise as a member of a satellite device cluster. A standalone switch running any version of satellite software below the minimum required version for that switch is not recognized by the aggregation device and cannot be added to a Junos Fusion Enterprise as a member of a satellite device cluster. To find the required satellite software version, see [Junos Fusion Hardware and Software Compatibility Matrices](#).

If your switch is running a version of satellite or Junos OS software below the required minimum and you want to include the switch in a satellite device cluster, follow one of these procedures:

- if your switch is already cabled into a Junos Fusion and is able to upgrade to a version of satellite software that supports satellite device clustering, upgrade the satellite software on the switch before adding it to the satellite device cluster. See [“Configuring or Expanding a Junos Fusion Enterprise”](#) on page 45.
- If your switch is not cabled into a Junos Fusion, install a version of Junos OS that supports satellite device clustering using the procedure outlined in [“Installing Junos OS Software on a Standalone Device Running Satellite Software”](#) on page 144 before installing the switch into the satellite device cluster.

Once the switch is running a version of Junos OS that supports satellite device clustering, you can install the required satellite software version manually or as part of the satellite software installation that occurs as part of the procedure for adding a satellite device to a Junos Fusion Enterprise.



NOTE: An aggregation device running Junos OS Release 16.1 is compatible with clustered satellite devices running SNOS version 2.0R1. If the aggregation device is running Junos OS Release 17.1, the clustered satellite devices must be running SNOS version 3.0R1. To upgrade an aggregation device from Junos OS Release 16.1 to Junos OS Release 17.1 (or to add EX2300 and EX3400 switches to your Junos Fusion Enterprise setup), you must first upgrade the EX4300 satellite devices to SNOS version 3.0R1 and then upgrade the aggregation device to Junos OS Release 17.1. See *Upgrading from Junos OS Release 16.1 to 17.1 in a JUNOS Fusion Enterprise System* in “[Configuring or Expanding a Junos Fusion Enterprise](#)” on page 45.

Satellite Software to Junos OS Conversion Requirements

A satellite device can be removed from a Junos Fusion Enterprise and reinserted into a network as a switch running Junos OS. See *Removing a Satellite Device from a Junos Fusion*.

A device running satellite software must be converted to a version of Junos OS that supports satellite device conversion. The minimum Junos OS versions that support satellite device conversion are provided in this document.

The following list provides additional information for converting each type of switch from satellite software to Junos OS.

- EX2300 and EX3400 switches:
 - EX2300 and EX3400 switches cannot be converted from satellite software to Junos from an aggregation device. To convert the satellite software, remove the satellite device from the Junos Fusion Enterprise and perform the upgrade manually. See [Installing Junos OS Software on a Standalone Device Running Satellite Software](#)
 - EX2300 and EX3400 switches must be converted to Junos OS Release 15.1X53-D55 or later.
 - The target Junos OS image must be a signed version of Junos OS. The text string *-signed* text must be in the Junos OS image filename when the image is downloaded from the Software Center.
- EX4300 switches:
 - EX4300 switches must be converted to Junos OS Release 14.1X53-D43 or later.
 - The target Junos OS image must be a signed version of Junos OS. The text string *-signed* text must be in the Junos OS image filename when the image is downloaded.
- QFX5100 switches:
 - The QFX5100 switch must be converted to Junos OS Release 14.1X53-D43 or later.
 - The target Junos OS image must be a Preboot eXecution Environment (PXE) version of Junos OS. The PXE version of Junos OS includes *pxe* in the package name when it is downloaded from the Software Center—for example, the PXE image for Junos

OS Release 14.1X53-D43 is named
install-media-pxe-qfx-5-14.1X53-D43.3-domestic-signed.tgz.

- The target Junos OS image must be a signed version of Junos OS. The text string *-signed* text must be in the Junos OS image filename when the image is downloaded.
- EX4600 switches:
 - The EX4600 switch must be converted to Junos OS Release 14.1X53-D47 or later.
 - The target Junos OS image must be a Preboot eXecution Environment (PXE) version of Junos OS. The PXE version of Junos OS includes *pxe* in the package name when it is downloaded from the Software Center—for example, *install-media-pxe-qfx-5-14.1X53-D47.<version>-domestic-signed.tgz*.
 - The target Junos OS image must be a signed version of Junos OS. The text string *-signed* text must be in the Junos OS image filename when the image is downloaded.

Power over Ethernet Requirements for a Satellite Device

A satellite device must be running Power over Ethernet (PoE) controller software version as specified in [Table 11 on page 33](#).

To check the PoE controller software version, enter the **show chassis firmware detail** command and view the **PoE firmware** output.

For information on checking and upgrading the PoE controller software, see *Upgrading the PoE Controller Software*.



NOTE: PoE is not supported for QFX5100 satellite devices.

Maximum Number of Satellite Devices or Extended Ports

A Junos Fusion Enterprise supports up to 128 satellite devices or 6,000 extended port access interfaces.

Related Documentation

- [Junos Fusion Hardware and Software Compatibility Matrices](#)
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

Understanding ICCP in a Junos Fusion using Dual Aggregation Devices

This topic describes the Inter-Chassis Control Protocol (ICCP) in a Junos Fusion. It covers:

- [ICCP in a Junos Fusion Overview on page 36](#)
- [Automatic ICCP Provisioning on page 36](#)

ICCP in a Junos Fusion Overview

Inter-Chassis Control Protocol (ICCP) is used in MC-LAG topologies to exchange control information between the devices in the topology. See [Multichassis Link Aggregation Features, Terms, and Best Practices](#) for additional information on ICCP.

A Junos Fusion with two aggregation devices is an MC-LAG topology, and is therefore always running ICCP as the control protocol. A Junos Fusion using a single aggregation device is not an MC-LAG topology and does not run ICCP.

A dedicated ICCP link is highly recommended in a Junos Fusion deployment, but is not required. ICCP traffic is transmitted across the ICL when an ICCP link is not configured. An ICCP link can be one link or an aggregated ethernet interface. In most Junos Fusion deployments, we recommend using a 40-Gbps link or an aggregated ethernet interface as the ICCP link.

Automatic ICCP Provisioning

Junos Fusion supports automatic ICCP provisioning, which automatically configures ICCP in a dual aggregation device setup without any user action. Automatic ICCP provisioning is enabled by default and is often the preferred method of enabling ICCP for a Junos Fusion in greenfield deployments that are not being integrated into an existing network. If you are installing your Junos Fusion in an environment that doesn't have to integrate into an existing campus network, you can usually ignore manual ICCP configuration processes and allow automatic ICCP provisioning to enable ICCP. Automatic ICCP provisioning is described in more detail in [Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link](#).

Many Junos Fusion installations occur in brownfield deployments and the Junos Fusion has to be integrated into an existing network. Brownfield deployments often have a need to maintain existing ICCP settings, in particular in scenarios where a Junos Fusion is replacing an MC-LAG topology or is supporting a network that includes other MC-LAG topologies. ICCP must be configured manually in these scenarios.

See [Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#) for an example of a Junos Fusion Enterprise deployment that manually configures ICCP. See [Configuring Multichassis Link Aggregation on EX Series Switches](#) for comprehensive information on configuring ICCP manually.

Related Documentation

- [Multichassis Link Aggregation Features, Terms, and Best Practices](#)
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)


Understanding the Flow of Data Packets in a Junos Fusion Topology

All Ethernet data packets that are exchanged between aggregation devices and satellite devices in a Junos Fusion topology include an E-channel tag (ETAG) header that carries an E-channel identifier (ECID) value. The ECID value, which is assigned by the aggregation device, identifies the source or destination extended port on one of the connected satellite devices.

In a sample Junos Fusion topology, where an aggregation device is connected to two satellite devices, the following Layer 2 unicast data packet flow scenarios can occur:


- Scenario 1—A host on one satellite device sends a packet to another host on the same satellite device. For example, Host 2 sends a unicast packet to Host 4. Both hosts are connected to Satellite device 1. (See [Figure 10 on page 38](#).)
- Scenario 2—A host on one satellite device sends a packet to another host on the other satellite device. For example, Host 2, which is connected to Satellite device 1, sends a unicast packet to Host 7, which is connected to Satellite device 2. (See [Figure 11 on page 39](#).)

Figure 10: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Scenario 1

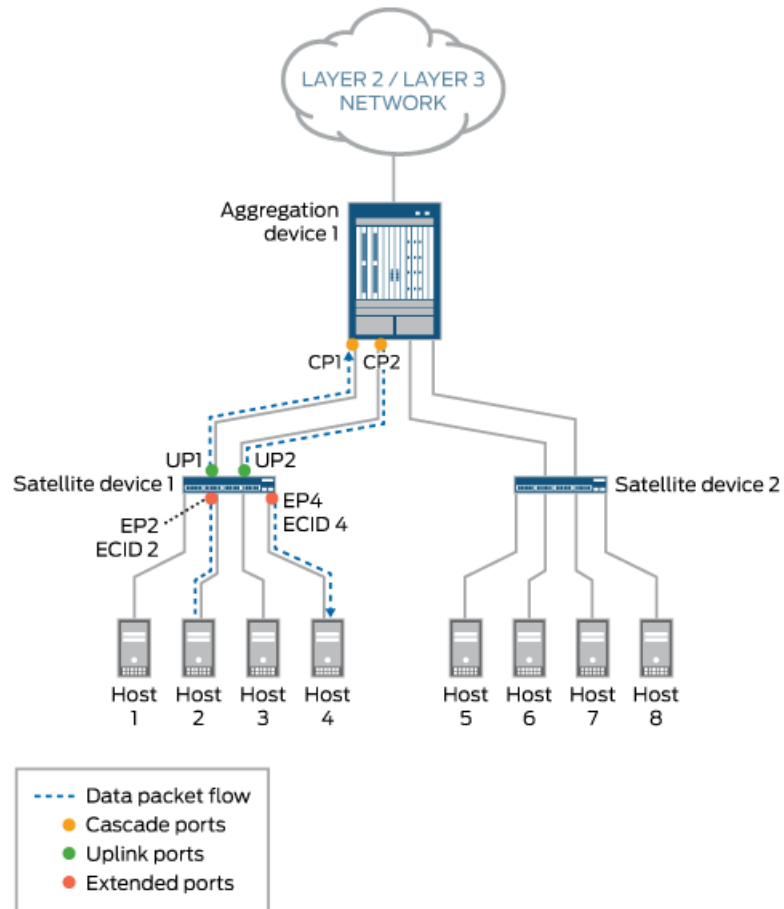

8043179

Figure 11: Layer 2 Unicast Data Packet Flow Through a Junos Fusion Topology—Scenario 2

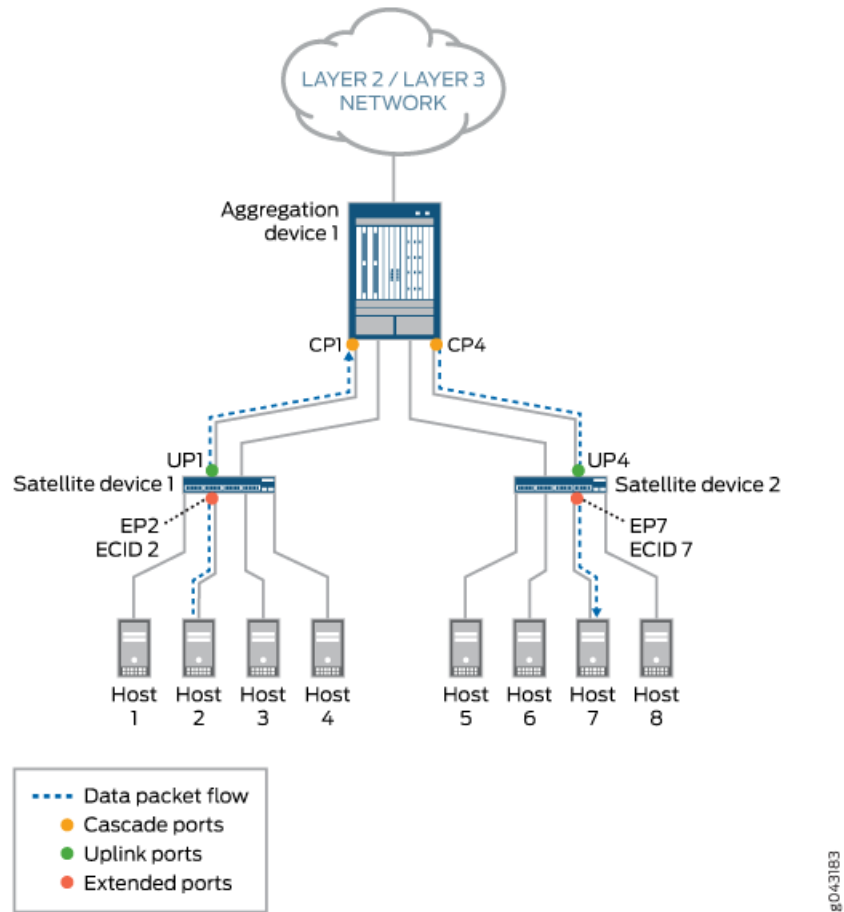

In scenario 1, where Host 2 sends a unicast data packet to Host 4, the following events occur:



NOTE: Only the events that are performed by Junos Fusion components are listed. Events handled by components that are not specific to the Junos Fusion topology are excluded.

1. Extended port EP2 on Satellite device 1 receives the packet from Host 2.
2. Satellite device 1 inserts an ETAG header in the packet. The ETAG header carries the ECID value (ECID 2), which is assigned by Aggregation device 1 to extended port EP2.
3. On Satellite device 1, two uplink ports (UP1 and UP2) are connected to Aggregation device 1. As a result, traffic between the devices can be load-balanced. In this case,

uplink port UP1 is chosen to forward the packet to cascade port CP1 on Aggregation device 1.

4. On receiving the packet, Aggregation device 1 extracts the ECID value (ECID 2) from the ETAG header of the packet and learns that the packet is from extended port EP2 on Satellite device 1. Aggregation device 1 then removes the ETAG header from the packet.
5. Aggregation device 1 performs a lookup for Host 4. The result of the lookup is extended port EP4 on Satellite device 1.
6. On Aggregation device 1, two cascade ports (CP1 and CP2) are connected to Satellite device 1. As a result, traffic between the devices can be load-balanced. In this case, cascade port CP2 is chosen to forward the packet to uplink port UP2 on Satellite device 1.
7. The packet is forwarded to cascade port CP2, where a new ETAG header and ECID value (ECID 4), which is assigned by Aggregation device 1 to extended port EP4, is added.
8. The packet is received by uplink port UP2 on Satellite device 1.
9. Satellite device 1 extracts the ECID value (ECID 4) from the ETAG header of the packet, then maps ECID 4 to extended port EP4.
10. Host 4 receives the packet from extended port EP4.

In scenario 2, where Host 2 sends a unicast data packet to Host 7, the events that occur are the same as for scenario 1 except for the following:

- Event 5—Aggregation device 1 performs a lookup for Host 7. The result of the lookup is extended port EP7 on Satellite device 2.
- Event 6—On Aggregation device 1, two cascade ports (CP3 and CP4) are connected to Satellite device 2. As a result, traffic between the devices can be load-balanced. In this case, cascade port CP4 is chosen to forward the packet to uplink port UP4 on Satellite device 2.
- Event 7—The packet is forwarded to cascade port CP4, where a new ETAG header and ECID value (ECID 7), which is assigned by Aggregation device 1 to extended port EP7, is added.
- Event 8—The packet is received by uplink port UP4 on Satellite device 2.
- Event 9—Satellite device 2 extracts the ECID value (ECID 7) from the ETAG header of the packet, and then maps ECID 7 to extended port EP7.
- Event 10—Host 7 receives the packet from extended port EP7.

Related Documentation

- [Understanding Junos Fusion Provider Edge Components](#)
- [Understanding Junos Fusion Enterprise Components on page 5](#)

Understanding Satellite Policies in a Junos Fusion

- [Satellite Policies Overview on page 41](#)
- [Understanding Environment Monitoring Satellite Policies on page 42](#)
- [Understanding Uplink Failure Detection Satellite Policies on page 42](#)
- [Understanding Satellite Policies for Remapping Uplink Traffic Flows on a Junos Fusion Data Center on page 42](#)

Satellite Policies Overview

Satellite policies are used in a Junos Fusion to define how certain features are configured for standalone satellite devices within a Junos Fusion. Satellite policies can be used to configure standalone satellite devices or all satellite devices in a satellite device cluster.

Environment monitoring of the satellite devices, uplink failure detection for satellite device uplink ports, and remapping uplinks—with port pinning, uplink selection, and local port mirroring—are configured using satellite policies. See [“Understanding Environment Monitoring Satellite Policies” on page 42](#), [“Understanding Uplink Failure Detection Satellite Policies” on page 42](#), and [“Understanding Satellite Policies for Remapping Uplink Traffic Flows on a Junos Fusion Data Center” on page 42](#).

Satellite policies are configured as independent policies on the aggregation device, and then associated with the Junos Fusion configuration.

Understanding Environment Monitoring Satellite Policies

You can configure an environment monitoring satellite policy in a Junos Fusion to configure how a Junos Fusion responds to link-down alarms on satellite devices.

In the environment monitoring satellite policy, you define how you want a link-down alarm from a satellite device to be handled by the Junos Fusion. The Junos Fusion can treat the link-down alarm as a yellow or red alarm, or it can be configured to ignore the alarm.

The environment monitoring policy provides the flexibility to define different alarm handling based on user preference. You can, for instance, assign environment monitoring policies to individual satellite devices based on FPC ID. You can also configure environment monitoring policies based on the product model of the satellite devices, if desired. You can, for instance, specify that all link-down alarms from EX4300 switches acting as satellite devices are treated as yellow alarms, while all link-down alarms from QFX5100 switches acting as satellite devices are treated as red alarms.

Environment monitoring satellite policies are configured using the `environment-monitoring-policy` statement in the `[edit policy-options satellite-policies]` hierarchy level.

An environment monitoring policy is applied for a single satellite device in a Junos Fusion using the `environment-monitoring-policy` statement in the `[edit chassis satellite-management]` or the `[edit chassis satellite-management fpc slot-id]` hierarchy levels.

You can configure a different environment monitoring policy for a single satellite device in the `fpc slot-id` when an environment monitoring policy for all satellite devices is configured. The environment monitoring policy for the FPC is enabled in cases when both an individual and global environment monitoring policy is configured.

Understanding Uplink Failure Detection Satellite Policies

Satellite policies are used to configure uplink failure detection on satellite device uplink ports within a Junos Fusion.



NOTE: Uplink failure detection is supported only on Junos Fusion Data Center.

For information on uplink failure detection within a Junos Fusion, see *Overview of Uplink Failure Detection on a Junos Fusion*.

Understanding Satellite Policies for Remapping Uplink Traffic Flows on a Junos Fusion Data Center

Satellite policies are used to configure the remapping of uplink traffic flows within a Junos Fusion Data Center. You can configure uplink port pinning and flow-based uplink selection to improve load-balancing of traffic flows across uplink ports. You can use local port mirroring to troubleshoot and monitor applications.

See *Understanding Remapping Uplink Traffic Flows on a Junos Fusion Data Center*.

- Related Documentation**
- [Configuring Junos Fusion Provider Edge](#)
 - [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

Understanding Multicast Forwarding on a Junos Fusion Enterprise

Starting with Junos OS Release 17.1R1, multicast traffic forwarding is supported in Junos Fusion Enterprise. Multicast forwarding is supported only on the aggregation device (AD).

- [Overview of Multicast Forwarding on page 43](#)
- [Configuring Layer 2 Multicast Forwarding in a Junos Fusion Enterprise on page 43](#)
- [Configuring Layer 3 Multicast Forwarding in a Junos Fusion Enterprise on page 44](#)

Overview of Multicast Forwarding

The AD performs ingress multicast replication to a set of extended ports. On the satellite device, multicast traffic is received for each of the extended ports. The following scenarios are supported for both IPv4 and IPv6 traffic:

- Layer 2 multicast with VLAN flooding—IGMP snooping and the Multicast Learner Discovery (MLD) protocol are configured on the AD to forward multicast traffic
- Layer 3 multicast—IGMP and PIM are configured on the AD to forward multicast traffic. Only versions 2 and 3 of IGMP are supported.

Configuring Layer 2 Multicast Forwarding in a Junos Fusion Enterprise

To configure Layer 2 multicast forwarding in a Junos Fusion Enterprise, configure IGMP snooping and MLD snooping on each VLAN. The following example shows the basic configuration required. Virtual router instances with integrated routing and bridging (IRB) interfaces are also supported.

```
protocols {
  igmp-snooping {
    vlan team-a {
      interface ge-101/0/0.0 {
        multicast-router-interface;
      }
      interface ge-101/0/1.0 {
        static {
          group 233.252.0.1;
        }
      }
    }
    vlan team-b;
  }
}
```

Configuring Layer 3 Multicast Forwarding in a Junos Fusion Enterprise

To configure Layer 3 multicast forwarding in a Junos Fusion Enterprise, enable PIM and IGMP. The following example shows the basic configuration required. Note that an IRB interface are also required as the multicast traffic is forwarded through IRB interfaces.

```
protocols {
  igmp {
    accounting;
    interface all;
    interface irb.40 {
      version 2;
    }
    interface irb.50 {
      static {
        group 233.252.0.1;
      }
    }
  }
  pim {
    rp {
      auto-rp discovery;
      static {
        address 192.0.2.1;
      }
    }
    interface all {
      mode sparse;
    }
  }
}
```

Related Documentation

- [Junos Fusion Enterprise Overview on page 3](#)

CHAPTER 2

Junos Fusion Enterprise Configuration

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
- [Junos Fusion Enterprise Installation Checklist on page 64](#)
- [Adding a Switch Running Satellite Software to a Junos Fusion Enterprise on page 75](#)
- [Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion on page 77](#)
- [Configuring Uplink Port Policies on a Junos Fusion on page 82](#)
- [Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 84](#)

Configuring or Expanding a Junos Fusion Enterprise

This topic provides the instructions needed to configure a Junos Fusion Enterprise—a Junos Fusion using EX9200 switches as aggregation devices—and to add satellite devices or an aggregation device to an existing Junos Fusion Enterprise. It covers:

- [Preparing the Aggregation Devices on page 45](#)
- [Preparing a Switch Running Junos OS to Become a Satellite Device on page 47](#)
- [Configuring the FPC Slot IDs, Cascade Ports, and Satellite Device Clusters on the Junos Fusion on page 49](#)
- [Managing Software Upgrade Groups on the Aggregation Device on page 55](#)
- [Configuring the Dual Aggregation Device Topology \(Dual Aggregation Device Topologies Only\) on page 58](#)
- [Installing Satellite Software and Adding Satellite Devices to the Junos Fusion on page 62](#)

Preparing the Aggregation Devices

Ensure your aggregation devices are running a version of Junos OS software that is compatible with Junos Fusion Enterprise. Junos Fusion Enterprise support was introduced for EX9200 switches in Junos OS Release 16.1R1. See [Junos Fusion Hardware and Software Compatibility Matrices](#) to learn more about Junos OS software compatibility requirements and to obtain Junos OS and satellite software for your Junos Fusion Enterprise. See [“Understanding Junos Fusion Enterprise Software and Hardware Requirements” on page 26](#) for additional information on Junos Fusion Enterprise hardware and software requirements.

If the aggregation device does not have the correct version of Junos OS installed, upgrade the Junos OS on both Routing Engines on your aggregation device.



NOTE: If your aggregation device is part of an existing Junos Fusion Enterprise installation with satellite device clusters that is running Junos OS Release 16.1 and you wish to upgrade to Junos OS Release 17.1 or later, please refer to the upgrade instructions in the 17.1R1 release notes.

The following procedure shows one method of upgrading Junos OS software. The instructions assume that you know the basics of Junos OS image file management and have already acquired the target Junos OS image. The target Junos OS image can be obtained using the [Junos Fusion Hardware and Software Compatibility Matrices](#). This upgrade procedure causes avoidable system downtime.

The number of Junos OS software upgrade options available for EX9200 switches is beyond the scope of this document. For information on Junos OS software installation options for EX9200 switches, see the *Software Installation and Upgrade Guide*.

To upgrade Junos OS software, enter the following commands on the aggregation device:

```
user@aggregation-device> request system software add aggregation-device-package-name
re0
```

```
user@aggregation-device> request system software add aggregation-device-package-name
re1
```

After performing the upgrade, reboot both Routing Engines to complete the software upgrade.

```
user@aggregation-device> request system reboot both-routing-engines
```

Preparing a Switch Running Junos OS to Become a Satellite Device

Use this procedure to prepare all switches running Junos OS software to become satellite devices. This procedure must be performed on all satellite devices, regardless of whether the satellite device will be converted into a standalone satellite device or be part of a satellite device cluster.

This section can be skipped if your satellite device or all satellite devices in your satellite device cluster are already running satellite software.



NOTE: The following conditions must be met before a Junos switch that is running Junos OS Release 17.1R1 can be converted to a satellite device when the action is initiated from the aggregation device:

- The Junos switch can only be converted to SNOS 3.0 and higher.
- The Junos switch must be either set to factory default configuration, or the following command must be included in the configuration: **set chassis satellite-management auto-satellite-conversion**.

To prepare a switch running Junos OS software to become a satellite device:

1. Log into the device that will become a satellite device through the console port.
2. Ensure the device is running a version of Junos OS that allows it to be converted into a satellite device. See [Junos Fusion Hardware and Software Compatibility Matrices](#) and “Understanding Junos Fusion Enterprise Software and Hardware Requirements” on [page 26](#) for information on minimum Junos OS requirements for satellite devices.



NOTE: In case of difficulty moving to the required versions of U-boot and JLOADER, please contact the Juniper Networks Technical Assistance Center.

If you need to upgrade Junos OS on your satellite device before proceeding, see the [Junos Fusion Hardware and Software Compatibility Matrices](#) to obtain the software. Upgrade Junos OS before converting your switch into a satellite device.

3. (Satellite devices providing interfaces for PoE only) If you plan on using the satellite device interfaces to provide PoE, check the satellite device's PoE firmware version:
 - Enter the **show chassis firmware detail** command to learn the PoE firmware version running on the device.

```
user@sd1-ex4300> show chassis firmware detail
FPC 0
  Boot SYSPLD           10
  PoE firmware          2.6.3.92.1
```

(additional output omitted)

- The satellite device must have the following minimum PoE versions to support PoE in a Junos Fusion Enterprise.

Table 12: Minimum PoE Firmware Versions

Satellite Device Platform	Minimum PoE Firmware Version
EX2300	1.6.1.1.9
EX3400	1.6.1.1.9
EX4300	2.6.3.92.1
QFX5100	No minimum version requirement

See [Minimum Satellite Device Firmware Version Requirements table](#) for additional information on firmware version requirements for devices in a Junos Fusion Enterprise.

- If your device meets the minimum PoE firmware requirement, proceed to the next step.

If a PoE firmware update is required, upgrade the PoE firmware. See [Upgrading the PoE Controller Software](#).

4. Zeroize the device:

```
[edit]
user@satellite-device# request system zeroize
```



NOTE: The device reboots to complete the procedure for zeroizing the device.

If you are not logged into the device using the console port connection, your connection to the device is lost after entering the **request system zeroize** command.

If you lose your connection to the device, log in using the console port.

5. (EX3400 and EX4300 switch uplink ports only) After the reboot is complete, convert the built-in 40-Gbps interfaces with QSFP+ transceivers from Virtual Chassis ports (VCPs) into network ports:

```
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port port-number
```

For example, to convert all four built-in 40-Gbps interfaces with QSFP+ transceivers on an EX4300-24P switch into network ports:

```
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port 0
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port 1
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port 2
```

```
user@satellite-device> request virtual-chassis vc-port delete pic-slot 1 port 3
```

The number of built-in 40-Gbps interfaces with QSFP+ transceivers varies by switch model. See the hardware documentation for your switch.

This step is required for the 40-Gbps interfaces with QSFP+ transceivers that will be used as uplink interfaces to directly connect to the aggregation device in a Junos Fusion Enterprise, because zeroizing the devices restores the default settings and 40-Gbps interfaces with QSFP+ transceivers on EX3400 and EX4300 switches are configured into VCPs by default. VCPs cannot be used as uplink ports to connect to aggregation devices in a Junos Fusion.

6. (EX3400 and EX4300 switches using direct attach copper (DAC) cables as clustering ports only) Disable auto-negotiation on interfaces that will be converted into clustering ports:

```
user@satellite-device# delete interfaces xe-0/1/0 ether-options auto-negotiation
user@satellite-device# delete interfaces xe-0/1/1 ether-options auto-negotiation
user@satellite-device# delete interfaces xe-0/1/1 ether-options auto-negotiation
user@satellite-device# delete interfaces xe-0/1/1 ether-options auto-negotiation
```

7. Commit the configuration.

```
user@satellite-device# commit
```

Configuring the FPC Slot IDs, Cascade Ports, and Satellite Device Clusters on the Junos Fusion

Use this procedure to configure FPC slot IDs, cascade ports, and satellite device clusters.

For more information on FPC slot IDs, cascade ports, and satellite device clusters, see [“Understanding Junos Fusion Enterprise Components” on page 5](#).

This section provides separate instructions for configuring FPC slot IDs and cascade ports for standalone satellite devices and satellite devices in a satellite device cluster. A Junos Fusion Enterprise can and often does support standalone satellite devices and satellite device clusters in the same Junos Fusion topology.

This section covers the following procedures:

1. [Configuring the FPC Slot ID and Cascade Ports for a Standalone Satellite Device on page 49](#)
2. [Configuring the FPC Slot ID, Cascade Ports, and Satellite Device Clusters for Satellite Devices in a Satellite Device Cluster on page 52](#)

Configuring the FPC Slot ID and Cascade Ports for a Standalone Satellite Device

Use this procedure to configure the FPC slot IDs and cascade ports for standalone satellite devices, which are satellite devices that are not part of a satellite device cluster:

1. Configure the cascade ports, and commit the configuration.

A cascade port is a port on an aggregation device that connects to a satellite device or a satellite device cluster. Data and control traffic is passed between the aggregation device and the satellite devices over the cascade port link.

To configure a cascade port:

```
[edit]
user@aggregation-device# set interfaces interface-name cascade-port
```

where *interface-name* in the cascade port interface on the aggregation device.

For example, to configure interface xe-0/0/1 on the aggregation device into a cascade port:

```
[edit]
user@aggregation-device# set interfaces xe-0/0/1 cascade-port
```

Commit the configuration on both Routing Engines:

```
[edit]
user@aggregation-device# commit synchronize
```

or onto a single Routing Engine:

```
[edit]
user@aggregation-device# commit
```

2. Configure the FPC slot ID number of each satellite device.

In a Junos Fusion Enterprise, each satellite device, including each satellite device in a satellite device cluster, must be mapped to an FPC identifier (FPC ID). The FPC ID is in the range of 65 through 255, and it is used for Junos Fusion Enterprise configuration, monitoring, and maintenance. Interface names—which are identified using the *type-fpc / pic / port* format—use the FPC ID as the *fpc* variable when the satellite device is participating in a Junos Fusion Enterprise.

You can assign an FPC identifier to the satellite device based on either the satellite device's MAC address, serial number, or cascade port.

- To map the FPC slot ID to a standalone satellite device's MAC address:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc slot-id system-id
mac-address
```

where *slot-id* becomes the FPC slot ID of the satellite device and *mac-address* is the satellite device's MAC address. The FPC slot ID must be 65 or larger, and it functions as the FPC slot identifier.

For example, to map FPC slot ID to the satellite device using MAC address 00:00:5E:00:53:00:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 110 system-id
00:00:5E:00:53:00
```



NOTE: To find out the system MAC of the satellite device, use the `show chassis mac-addresses` command on the satellite device.

- To map the FPC slot ID to a standalone satellite device's serial number:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc slot-id serial-number
serial-number
```

where *slot-id* becomes the FPC slot ID of the satellite device and *serial-number* is the satellite device's serial number. The FPC slot ID must be 65 or larger, and it functions as the FPC slot identifier.

For instance, to map FPC slot ID 101 to the satellite device using the serial number ABCDEFGHIJKL:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 101 serial-number
ABCDEFGHIJKL
```



NOTE: To find out the serial number of the satellite device, use the `show chassis hardware` command on the satellite device.

- To configure the FPC slot ID for a standalone satellite device—a satellite device not part of a satellite device cluster—to a cascade port, enter:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc slot-id cascade-ports
interface-name
```

where *slot-id* becomes the FPC slot ID of the satellite device, and *interface-name* is the name of the interface.

For example, to configure the FPC slot ID of the satellite device that is connected to xe-0/0/1 to 101:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 101 cascade-ports
xe-0/0/1
```

If a prospective satellite device is connected to a Junos Fusion Enterprise without having a configured FPC slot ID, the prospective satellite device does not participate in the Junos Fusion Enterprise until an FPC ID is associated with it. The **show chassis satellite unprovision** output includes a list of satellite devices that are not participating in a Junos Fusion Enterprise because of an FPC ID association issue.

The FPC slot ID configuration must match on both aggregation devices in dual-homed dual aggregation device topologies.

Configuring the FPC Slot ID, Cascade Ports, and Satellite Device Clusters for Satellite Devices in a Satellite Device Cluster

Use this procedure to configure the FPC slot IDs, cascade ports, and satellite device clusters for satellite devices in a satellite device cluster:

1. Configure the cascade ports, and commit the configuration.

A cascade port is a port on an aggregation device that connects to a satellite device in a satellite device cluster. An aggregation device can have multiple cascade ports connecting to multiple satellite device member switches in the same satellite device cluster. Data and control traffic is passed between the aggregation device and the satellite devices over a cascade port link.



BEST PRACTICE: Use the `show interfaces` command to confirm your interface is up before configuring it into a cascade port.

To configure a cascade port:

```
[edit]
user@aggregation-device# set interfaces interface-name cascade-port
```

For example, to configure interface xe-0/0/1 on the aggregation device into a cascade port:

```
[edit]
user@aggregation-device# set interfaces xe-0/0/1 cascade-port
```

Commit the configuration on both Routing Engines:

```
[edit]
user@aggregation-device# commit synchronize
```

or onto a single Routing Engine:

```
[edit]
user@aggregation-device# commit
```

2. Create the satellite device clusters, and assign a name and a cluster ID to each satellite device cluster:

```
[edit]
user@aggregation-device# set chassis satellite-management cluster cluster-name cluster-id cluster-id-number
```

For instance, to create a satellite device cluster named **building-1** and assign it cluster ID 1:

```
[edit]
user@aggregation-device# set chassis satellite-management cluster building-1 cluster-id 1
```


The *cluster-name* and *cluster-id-number* specified in this step must match on both aggregation devices in dual aggregation device topologies.

3. Define the cascade ports associated with the satellite device cluster.

An aggregation device can have multiple cascade port connections to the satellite devices in the satellite device cluster, and it must have at least one cascade port connection to one of the satellite devices in the satellite device cluster.

For example, to configure interfaces xe-0/0/1 and xe-0/0/2 on the aggregation device into cascade ports connecting to the satellite device cluster named **building-1**:

```
[edit]
user@aggregation-device# set chassis satellite-management cluster building-1
cascade-ports xe-0/0/1
user@aggregation-device# set chassis satellite-management cluster building-1
cascade-ports xe-0/0/2
```



NOTE: This step defines which aggregation device ports will be used as cascade ports with the satellite device cluster only.

The aggregation device interfaces still must be configured into cascade ports, which is accomplished in step 1 of this procedure.

4. Configure the FPC slot ID number of each satellite device.

In a Junos Fusion Enterprise, each satellite device, including each satellite device in a satellite device cluster, must be mapped to an FPC identifier (FPC ID). The FPC ID is in the range of 65 through 255, and it is used for Junos Fusion Enterprise configuration, monitoring, and maintenance. Interface names—which are identified using the *type-fpc / pic / port* format—use the FPC ID as the *fpc* variable when the satellite device is participating in a Junos Fusion Enterprise.

- To map the FPC slot ID to the MAC address of a satellite device in a satellite device cluster:



NOTE: You must map the FPC slot ID to the satellite device's MAC address when the satellite device is a member of a satellite device cluster.

```
[edit]
user@aggregation-device# set chassis satellite-management cluster cluster-name fpc
slot-id system-id mac-address
```

where *cluster-name* is the name of the satellite device cluster, *slot-id* becomes the FPC slot ID of the satellite device, and *mac-address* is the satellite device's MAC address. The FPC slot ID must be 65 or larger, and it functions as the FPC slot identifier.

For instance, to map FPC slot ID 101 to the satellite device using MAC address 00:00:5E:00:53:00, FPC slot ID 102 to the satellite device using MAC address 00:00:5E:00:53:01, and FPC slot ID 103 to the satellite device using MAC address 00:00:5E:00:53:02 in the satellite device cluster named **building-1**:

```
[edit]
user@aggregation-device# set chassis satellite-management cluster building-1 fpc 101
system-id 00:00:5E:00:53:00
user@aggregation-device# set chassis satellite-management cluster building-1 fpc 102
system-id 00:00:5E:00:53:01
user@aggregation-device# set chassis satellite-management
cluster building-1 fpc 103 system-id 00:00:5E:00:53:02
```



NOTE: To find out the system MAC of the satellite device, use the `show chassis mac-addresses` command on the satellite device.

5. Assign a member ID to each satellite device in the satellite device cluster:

```
[edit]
user@aggregation-device# set chassis satellite-management cluster cluster-name fpc
fpc-slot-ID member-id member-ID-number
```

For instance, to assign member ID numbers 1, 2, and 3 to FPC ID numbers 101, 102, and 103 in the satellite device cluster named **building-1**:

```
[edit]
user@aggregation-device# set chassis satellite-management cluster building-1 fpc 101
member-id 1
user@aggregation-device# set chassis satellite-management cluster building-1 fpc 102
member-id 2
user@aggregation-device# set chassis satellite-management cluster building-1 fpc 103
member-id 3
```

The member ID assignments for a satellite device cluster must match on both Routing Engines in a dual aggregation device topology.

6. (Dual-homed dual aggregation device topologies only) Repeat this procedure to configure the FPC slot IDs, cascade ports, and satellite device clusters on the other aggregation device.



NOTE: The cluster name, ID and FPC information for each satellite device in the cluster must be the same on both aggregation devices.

Managing Software Upgrade Groups on the Aggregation Device

A satellite software upgrade group is a group of satellite devices that are designated to run the same satellite software version using the same satellite software package. One Junos Fusion Enterprise can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusion Enterprises to avoid network downtimes during satellite software installations.

When a satellite device is added to a Junos Fusion Enterprise, the aggregation device checks if the satellite device is using an FPC ID that is included in a satellite software upgrade group. If the satellite device is using an FPC ID that is part of a satellite software upgrade group, the device upgrades its satellite software to the version of software associated with the satellite software upgrade group - unless it is already running the defined version.

When the satellite software package associated with an existing satellite software group is changed, the satellite software for all member satellite devices is upgraded using a throttled upgrade. The throttled upgrade ensures that the aggregation device is not overwhelmed with providing satellite software simultaneously to many satellite devices.

The two most common methods for installing satellite software onto a Junos OS device—autoconverting a device into a satellite device when it is cabled into an aggregation device and manually converting a device that is cabled into an aggregation device into a satellite device—require that a satellite software upgrade group is configured.

Software upgrade groups are managed from the aggregation device. All satellite devices in a satellite device cluster are part of the same software upgrade group, and a software upgrade group with the name of the satellite device cluster is automatically created when the satellite device cluster is created.

To manage a software upgrade group:

1. Log into the aggregation device.
2. Download the satellite software onto both aggregation devices (recommended) or onto a remote server.

The satellite software can be downloaded from the main Junos Fusion software download page:

[Junos Fusion - Download Software](#)

3. (Standalone satellite device only) Create a satellite software upgrade group, and associate the standalone satellite device with the satellite software upgrade group:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups
upgrade-group-name satellite slot-id-number-or-range
```

where *upgrade-group-name* is the name of the upgrade group, and the *slot-id-number-or-range* is the FPC slot ID number or range of numbers, of the satellite devices that are being added to the upgrade group.



NOTE: If you enter the name of an existing satellite software upgrade group as the *upgrade-group-name*, the specified satellite devices are added to the existing software upgrade group.

For example, to create a software upgrade group named **group1** that includes all satellite devices numbered 101 through 120:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups group1
satellite 101-120
```

The satellite software upgrade group name and associated FPC slot ID configurations must match on both Routing Engines in a dual-homed dual aggregation device topology.

4. Commit the configuration to both Routing Engines on the aggregation device:

```
[edit]
user@aggregation-device# commit synchronize
```

If you are using an aggregation device with a single Routing Engine or want to commit the configuration to a single Routing Engine only:

```
[edit]
user@aggregation-device# commit
```

The configuration must be committed before associating a satellite software image with the satellite software upgrade group, which is done in Step 5.

5. Associate the satellite software upgrade group with a satellite software image.

- Satellite device clusters:
 - Associate all satellite devices in the cluster with the automatically-created satellite software upgrade group:

```
user@aggregation-device> request system software add package-name upgrade-group
upgrade-group-name
```

where *package-name* is the URL to the satellite software package, and *upgrade-group-name* is the name of the satellite device cluster.

For example, to associate a satellite software image named **satellite-3.0R1.2-signed.tgz** that is currently stored in the **/var/tmp** directory on the aggregation device to the upgrade group named **building1**:

```
user@aggregation-device> request system software add
/var/tmp/satellite-3.0R1.2-signed.tgz upgrade-group building1
```

- Standalone satellite devices:
 - Associate the satellite device with the previously-configured satellite software upgrade group:

```
user@aggregation-device> request system software add package-name upgrade-group
upgrade-group-name
```

where *package-name* is the URL to the satellite software package, and *upgrade-group-name* is the name of the upgrade group that was assigned by the user earlier in this procedure.

For example, to associate a satellite software image named **satellite-3.0R1.2-signed.tgz** that is currently stored in the **/var/tmp** directory on the aggregation device to the upgrade group named **group1**:

```
user@aggregation-device> request system software add
/var/tmp/satellite-3.0R1.2-signed.tgz upgrade-group group1
```

Associating a satellite software image to a new satellite software package can trigger a satellite software upgrade. A throttled satellite software upgrade might begin after entering the **request system software add** command to associate a satellite software package with a satellite software upgrade group. A satellite software upgrade might also be triggered when a configuration that uses the satellite software upgrade group is committed.

6. (Dual-homed dual aggregation device topology only) Repeat Steps 1 through 4 using the exact same configuration—including the same *package-name* and *upgrade-group-name*—to configure software upgrade groups on the second aggregation device.

The software upgrade group configurations must match in dual aggregation topologies for the satellite software upgrade to proceed. If you do not associate the software upgrade group on the second aggregation device with a satellite software version, then the satellite device software upgrade will be managed only by the other aggregation device. If you associate the software upgrade group on the second aggregation with a satellite software version, then the satellite software version must be the same on both aggregation devices.

Configuring the Dual Aggregation Device Topology (Dual Aggregation Device Topologies Only)

Use this procedure to connect and configure a second aggregation device into a Junos Fusion Enterprise topology.

Before you begin:

- Ensure that a Junos Fusion topology has already been configured, and that the topology includes a satellite software upgrade group.
- Ensure that the aggregation devices are already cabled together and that all cabling to all satellite devices has been completed for both aggregation devices. For information on cabling requirements, see [“Understanding Junos Fusion Enterprise Software and Hardware Requirements” on page 26](#).

1. (Required only if aggregation device was previously configured into single home mode)
Delete single home configuration mode:

On aggregation device 1 and 2:

[edit]

```
user@aggregation-device# delete chassis satellite-management single-home
```



NOTE: Single home mode is not supported in a dual-aggregated device Junos Fusion Enterprise topology.

2. Create and configure a redundancy group on the first aggregation device.

A dual aggregation device topology in a Junos Fusion is a multichassis link aggregation group (MC-LAG) that uses the Inter-Chassis Communications Protocol (ICCP) to communicate between the aggregation devices. ICCP is typically used in an MC-LAG to exchange information between MC-LAG peers. The MC-LAG peers in a Junos Fusion dual aggregation topology are the aggregation devices.

A redundancy group is required to enable ICCP in a Junos Fusion. A Junos Fusion topology supports one redundancy group that includes two member devices—the aggregation devices—while also including a configuration parameter that allows users to specify that the satellite devices or satellite clusters also belong to the redundancy group.



NOTE: All satellite devices, whether standalone satellites or satellite clusters, must be associated to a redundancy group on both aggregated devices; otherwise, they act as single-homed devices, which are not supported in a dual-aggregation device Junos Fusion Enterprise topology.

To create and configure the redundancy group on the first aggregation device:

- a. Specify the redundancy group ID number on both aggregation devices. The redundancy group name is created and named as part of this process.

The redundancy group ID number and name must match on both aggregation devices.

On aggregation device 1 and 2:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set redundancy-group-name redundancy-group-id
redundancy-group-id-number
```

For instance, to create a redundancy group named `junos-fusion-campus-network` that uses redundancy group ID 1 on aggregation device 1:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set junos-fusion-campus-network redundancy-group-id 1
```

Repeat this procedure on aggregation device 2:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set junos-fusion-campus-network redundancy-group-id 1
```

- b. Define the chassis ID number of the each aggregation device:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set chassis-id chassis-id-number
```

For instance, to assign the aggregation device 1 the chassis ID of 1 for the `junos-fusion-campus-network` redundancy group:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set chassis-id 1
```

To assign aggregation device 2 the chassis ID of 2 for the `junos-fusion-campus-network` redundancy group:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set chassis-id 2
```

The chassis ID numbers cannot match and are used to create the ICL that interconnects the aggregation device in the Junos Fusion topology.

- c. Define the peer chassis ID number—the chassis ID number of the other aggregation device—and interface to use for the ICL:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set redundancy-group-name peer-chassis-id
peer-chassis-id-number inter-chassis-link interface-name
```

For instance, to use the xe-0/0/1 interface on aggregation device 1 to create an ICL that connects to aggregation device 2:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set junos-fusion-campus-network peer-chassis-id 2
inter-chassis-link xe-0/0/1
```

To complete the configuration by defining the peer chassis ID and interface on aggregation device 2:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set junos-fusion-campus-network peer-chassis-id 1
inter-chassis-link xe-0/0/1
```

The ICL is used to pass traffic between the aggregation devices.

- d. Define the satellite devices that are part of the redundancy group.

You can add a standalone satellite device or a satellite device cluster to the redundancy group in this step.

The satellite devices added to the redundancy group in this step must match on both redundancy groups.

All satellite devices in the Junos Fusion should be added to the redundancy group in this step.

- To add standalone satellite devices to the redundancy group:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set redundancy-group-name satellite
satellite-device-fpc-IDs
```

For instance, to include satellite devices using FPC IDs 100-140 in the redundancy group:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set junos-fusion-campus-network satellite 100-140
```

- To add a satellite device cluster to the redundancy group:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set redundancy-group-name cluster cluster-name
```

For instance, to include satellite device cluster **building-1** to the redundancy group:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set junos-fusion-campus-network cluster building-1
```

Repeat the same configuration steps on the other aggregation device.

For instance:

```
[edit chassis satellite-management redundancy-groups]
user@aggregation-device# set junos-fusion-campus-network satellite 100-140
user@aggregation-device# set junos-fusion-campus-network cluster building-1
```

3. (Recommended) Ensure at least one link besides the ICL is connecting the aggregation devices. This link automatically becomes the ICCP link.

An ICCP link can be one link or an aggregated ethernet interface. In most Junos Fusion Enterprise deployments, we recommend using a 40-Gbps link or an aggregated ethernet interface as the ICCP link.

An ICCP link is recommended but is optional because ICCP traffic is transmitted across the ICL when a dedicated ICCP link is not configured.

ICCP configuration is not required. ICCP is automatically provisioned in a Junos Fusion using dual aggregation devices, by default. User configuration of ICCP is not required and is only recommended for expert users.

If you configure an ICCP parameter in a Junos Fusion, the user-configured parameter overrides the automatically provisioned parameter for the configured parameter only.

You can disable automatic ICCP provisioning using the [no-auto-iccp-provisioning](#) statement.

If you decide to configure ICCP, you must configure matching configurations on both aggregation devices.



NOTE: ICCP configuration is beyond the scope of this document. See *Configuring Multichassis Link Aggregation on EX Series Switches*.

4. Configure ICCP.

ICCP can be configured in one of the following ways:

- Automatic ICCP provisioning

Automatic ICCP provisioning automatically configures ICCP in a dual aggregation device setup without any user action. Automatic ICCP provisioning is enabled by default and is often the preferred method of enabling ICCP for a Junos Fusion in greenfield deployments that are not being integrated into an existing network.

No user action is required to configure ICCP if automatic ICCP provisioning is used.

- Manual ICCP configuration.

Manual ICCP configuration is typically used to integrate a Junos Fusion Enterprise into an existing network or by expert users that want to finely tune ICCP settings.

Many Junos Fusion Enterprise installations occur in brownfield deployments and the Junos Fusion Enterprise has to be integrated into an existing Enterprise network. Brownfield deployments often have a need to maintain existing ICCP settings, in particular in scenarios where a Junos Fusion Enterprise is replacing an MC-LAG

topology or is supporting a network that includes other MC-LAG topologies. ICCP must be configured manually in these scenarios.

See *Configuring Multichassis Link Aggregation on EX Series Switches* for the steps and options available to configure ICCP.

If you configure an ICCP parameter in a Junos Fusion, the user-configured parameter overrides the automatically provisioned parameter for the configured parameter only. You can disable all automatic ICCP provisioning using the `no-auto-iccp-provisioning` statement.

If you decide to manually configure ICCP, you must configure matching configurations on both aggregation devices.

Installing Satellite Software and Adding Satellite Devices to the Junos Fusion

Use this procedure to install satellite software onto a satellite device. A satellite device is not active in a Junos Fusion until satellite software is installed.

Before you begin:

- Ensure you have prepared your satellite device, as described in the “Preparing a Switch Running Junos OS to Become a Satellite Device” section.
- Ensure that the satellite software package is compatible with the aggregation device software. See *Junos Fusion Hardware and Software Compatibility Matrices* at <https://www.juniper.net/support/downloads/solutions/fusion/>.
- Ensure the minimum satellite device version requirements are met. For information on requirements, see “Understanding Junos Fusion Enterprise Software and Hardware Requirements” on page 26.
- Complete the other steps in this document—created cascade ports, associated FPC slot IDs with satellite devices, and created the satellite software upgrade groups—to ensure the satellite software can be successfully installed.

To install satellite software onto a satellite device and add it to the Junos Fusion Enterprise.

1. Decide how satellite software will be installed onto the satellite devices:
 - Autoconversion(Recommended)—Satellite software is installed onto satellite device automatically when it is cabled to the aggregation device.
 - Manual conversion—Satellite software is installed when user enters a CLI command from aggregation device to install satellite software.
 - Pre-installation—Satellite software is installed on satellite device before the satellite device is cabled into the Junos Fusion Enterprise.
2. Install the satellite software, or configure how it will be installed:
 - To enable autoconversion for a standalone satellite device or a satellite device in a satellite device cluster, enter the following commands from an aggregation device:

[edit]

```

user@aggregation-device# set chassis satellite-management auto-satellite-conversion
satellite slot-id
user@aggregation-device# commit

```

For example, to automatically convert FPC 101 into a satellite device:

```

[edit]
user@aggregation-device# set chassis satellite-management auto-satellite-conversion
satellite 101
user@aggregation-device# commit

```

In this example, autoconversion installs the satellite software associated with FPC slot 101, which was defined in the satellite software upgrade group configuration.

The process to install the satellite software onto the satellite device with the specified FPC slot ID does not begin until the configuration is committed.

- To manually install satellite software onto a satellite device, enter the following command from an aggregation device:

```

user@aggregation-device> request chassis satellite interface interface-name device-mode
satellite

```

where *interface-name* is one of the following values:

- standalone satellite device: the *interface-name* is the cascade port interface on the aggregation device.
- satellite device in satellite device cluster that is directly cabled to the aggregation device: the *interface-name* is the cascade port interface on the aggregation device.
- satellite device in satellite device cluster that is not directly cabled to an aggregation device: the *interface-name* is a clustering port—a port on a satellite device in a satellite device cluster that interconnects satellite devices—on a satellite device.

For example, to manually configure the switch that is connecting the satellite device to interface xe-0/0/1 on the aggregation device into a satellite device:

```

user@aggregation-device> request chassis satellite interface xe-0/0/1 device-mode
satellite

```

To manually configure a switch connecting to interface xe-101/2/0 on a satellite device in a satellite device cluster into a satellite device:

```

user@aggregation-device> request chassis satellite interface xe-101/2/0 device-mode
satellite

```

- To pre-install software onto a satellite device before connecting it into the Junos Fusion Enterprise:
 - a. Copy a version of satellite software onto the satellite device running Junos OS.
For EX2300, EX3400, and EX4300 switches, you must install a platform specific satellite software image in order to pre-install satellite software. See

Understanding the Platform Specific Satellite Software Image in [“Understanding Software in a Junos Fusion Enterprise”](#) on page 22.

Satellite software images can be downloaded from the [Junos Fusion software download page](#).

- b. Enter the following command from the satellite device:

```
user@satellite-device> request chassis device-mode satellite  
URL-to-satellite-software
```

For instance, to install the satellite software package **satellite-ppc-3.0R1.2-signed.tgz** stored in the **/var/tmp/** folder on an EX4300 switch:

```
user@satellite-device> request chassis device-mode satellite  
/var/tmp/satellite-ppc-3.0R1.2-signed.tgz
```

- c. Cable the satellite device directly to the aggregation device or into a satellite device cluster.



NOTE: The satellite device version is compared against the satellite device version associated with the software upgrade group upon insertion into the Junos Fusion. If the satellite device is running a version of satellite software that is different than it's associated satellite software upgrade group, the satellite software upgrade group installs the satellite software associated with the satellite software upgrade group onto the satellite device.

The procedure for adding a satellite device running satellite software into a Junos Fusion is also covered in [“Adding a Switch Running Satellite Software to a Junos Fusion Enterprise”](#) on page 75.

Related Documentation

- [Junos Fusion Hardware and Software Compatibility Matrices](#)
- [Understanding Junos Fusion Enterprise Software and Hardware Requirements](#)
- [Verifying Connectivity, Device States, Satellite Software Versions, and Operations in a Junos Fusion](#) on page 129
- [Understanding Junos Fusion Enterprise Components](#) on page 5
- [Understanding Software in a Junos Fusion Enterprise](#) on page 22

Junos Fusion Enterprise Installation Checklist

The checklist in [Table 13](#) on page 65 summarizes the tasks you need to perform when installing a Junos Fusion Enterprise. This checklist should be used with the [“Configuring](#)

or [Expanding a Junos Fusion Enterprise](#)" on page 45 document, which provides detailed step-by-step instructions for configuring a Junos Fusion Enterprise.



NOTE: If your aggregation device is part of an existing Junos Fusion Enterprise installation with satellite device clusters that is running Junos OS Release 16.1 and you want to upgrade to Junos OS Release 17.1 or later, please refer to the upgrade instructions in the Junos OS 17.1R1 Release Notes.

Table 13: Junos Fusion Enterprise Installation Checklist

Task	Additional Information	For More Information	Performed by and Date
Prepare Aggregation Device (Aggregation Devices)			
Install a supported version of Junos OS onto each aggregation device.	EX9200 switches can act as aggregation devices in a Junos Fusion Enterprise when running Junos OS Release 16.1R1 or later.	<p>Junos Fusion main software download page and software support matrix: Junos Fusion - Download Software</p> <p>Junos Fusion Enterprise software requirements: Junos Fusion Hardware and Software Compatibility Matrices</p> <p>EX9200 switch software installation: Software Installation and Upgrade Guide</p> <p>Junos Fusion Enterprise software overview: "Understanding Software in a Junos Fusion Enterprise" on page 22</p>	
Prepare Satellite Devices (Satellite Devices)			
Ensure each satellite device is running a version of Junos OS that allows it to be converted into a satellite device.	<p>EX2300 and EX3400 switches must be running Junos OS Release 15.1X53-D55 or later to be converted into a satellite device.</p> <p>EX4300 switches must be running Junos OS Release 14.1X53-D43 or later to be converted into a satellite device.</p> <p>QFX5100 switches must be running Junos OS Release 14.1X53-D43 or later to be converted into a satellite device.</p>	<p>Satellite device software requirements: Junos Fusion Hardware and Software Compatibility Matrices</p> <p>Upgrading Junos OS on an EX2300, EX3400, or EX4300 switch: Software Installation and Upgrade Guide</p> <p>Upgrading Junos OS on a QFX5100 switch: Installing Software Packages on QFX Series Devices</p>	
Zeroize each satellite device.	<p>BEST PRACTICE: Perform this procedure from the console port.</p> <p>To zeroize a satellite device: request system zeroize</p>	<p>Zeroizing a switch:</p> <ul style="list-style-type: none"> <code>request system zeroize</code> <code>Reverting to the Default Factory Configuration for the EX Series Switch</code> 	

Table 13: Junos Fusion Enterprise Installation Checklist (continued)

Task	Additional Information	For More Information	Performed by and Date
(EX3400 and EX4300 switches only) Convert the built-in 40-Gbps interfaces from Virtual Chassis ports (VCPs) to network ports.	<p>The number of built-in 40-Gbps interfaces with QSFP+ transceivers varies by EX4300 switch model.</p> <p>To convert four built-in 40-Gbps interfaces with QSFP+ transceivers on an EX4300 switch:</p> <pre>request virtual-chassis vc-port delete pic-slot 1 port 0 request virtual-chassis vc-port delete pic-slot 1 port 1 request virtual-chassis vc-port delete pic-slot 1 port 2 request virtual-chassis vc-port delete pic-slot 1 port 3</pre>	<p>Deleting a VCP:</p> <pre>request virtual-chassis vc-port</pre>	
Configure Cascade Ports and FPC slot IDs (Aggregation Devices)			
Configure cascade ports on the aggregation devices.	<p>A cascade port is a port on the aggregation device that connects to a satellite device.</p> <p>To configure a cascade port:</p> <pre>set interfaces xe-0/0/1 cascade-port</pre>	<p>Cascade port overview:</p> <p>"Understanding Junos Fusion Enterprise Components" on page 5</p> <p>Cascade port configuration:</p> <ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • cascade-port 	
<p>(Satellite device clusters only) Create and number the satellite device clusters.</p> <p>NOTE: You can skip this step if you are not using satellite device clusters.</p>	<p>Satellite device clustering allows you to connect up to ten satellite devices into a single cluster, then connect the satellite device cluster to the aggregation device as a single group instead of as individual satellite devices.</p> <p>This configuration must match on both aggregation devices.</p> <p>To create and number a satellite device cluster:</p> <pre>set chassis satellite-management cluster sd-cluster-building1 cluster-id 1</pre>	<p>Satellite device clustering overview:</p> <p>"Understanding Satellite Device Clustering in a Junos Fusion" on page 13</p> <p>Satellite device clustering configuration:</p> <ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • cluster-id 	

Table 13: Junos Fusion Enterprise Installation Checklist (continued)

Task	Additional Information	For More Information	Performed by and Date
(Satellite device clusters only) Associate the satellite device clusters with a cascade port.	<p>To associate a cascade port with a satellite device cluster:</p> <pre>set chassis satellite-management cluster sd-cluster-building1 cascade-ports xe-0/0/1</pre>	Satellite device clustering configuration: "Configuring or Expanding a Junos Fusion Enterprise" on page 45	
<p>Configure the FPC slot Identifiers (IDs) using one of the following methods on both aggregation devices:</p> <ul style="list-style-type: none"> map FPC slot ID to a satellite device's MAC address (unique ID-based FPC identification) map FPC slot ID to a satellite device's serial number (unique ID-based FPC identification) map FPC slot ID with a cascade port (connectivity-based FPC identification) 	<p>Each satellite device in a Junos Fusion is identified by its FPC slot ID.</p> <p>To map an FPC slot ID to a satellite device's MAC address:</p> <ul style="list-style-type: none"> Satellite device in a cluster: <pre>set chassis satellite-management cluster sd-cluster-building1 fpc 101 system-id 00:00:5E:00:53:01</pre> <p>NOTE: You must map the FPC slot ID to the satellite device's MAC address when the satellite device is a member of a satellite device cluster.</p> Standalone satellite device: <pre>[edit] user@aggregation-device# set chassis satellite-management fpc 101 system-id 00:00:5E:00:53:01</pre> <p>To map an FPC slot ID to a satellite device's serial number:</p> <pre>set chassis satellite-management fpc 101 serial-number TA0123456789</pre> <p>To map an FPC slot ID to a cascade port:</p> <pre>set chassis satellite-management fpc 101 cascade-ports xe-0/0/1</pre>	<p>FPC slot ID overview: "Understanding Junos Fusion Enterprise Components" on page 5</p> <p>Configuring FPC slot IDs:</p> <ul style="list-style-type: none"> Configuring or Expanding a Junos Fusion Enterprise on page 45 system-id serial-number cascade-ports 	

Table 13: Junos Fusion Enterprise Installation Checklist (continued)

Task	Additional Information	For More Information	Performed by and Date
(Satellite device clusters only) Assign a member ID to each satellite device in a satellite device cluster.	<p>To assign a member ID to a satellite device in a satellite device cluster:</p> <pre>set chassis satellite-management cluster sd-cluster-building1 fpc 101 member-id 1</pre> <p>Satellite device cluster member ID configuration must match on both aggregation devices.</p>	<p>Satellite device clustering overview: "Understanding Satellite Device Clustering in a Junos Fusion" on page 13</p> <p>Satellite device cluster member ID configuration:</p> <ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • member-id 	
Satellite Software Upgrade Group (Aggregation Devices)			
Acquire the satellite software image and place it on the aggregation devices (recommended) or on a remote server.	The satellite software image is used to install satellite software onto satellite devices.	Junos Fusion main software download page: Junos Fusion - Download Software	

Table 13: Junos Fusion Enterprise Installation Checklist (continued)

Task	Additional Information	For More Information	Performed by and Date
<p>Manage the satellite software upgrade groups.</p> <ul style="list-style-type: none"> (satellite devices that are part of a satellite device cluster) associate the satellite devices in a cluster with a satellite software image. (standalone satellite devices) create the satellite software upgrade group and include the satellite device in it. 	<p>A satellite software upgrade group is used to upgrade the satellite software of all satellite devices in the upgrade group.</p> <p>A satellite device must be part of a satellite software upgrade group to install satellite software on satellite devices in most installation scenarios.</p> <p>All satellite devices in a satellite device cluster are automatically part of the same satellite software upgrade group. The satellite software upgrade group for the satellite devices in the cluster is automatically created and has the same name as the satellite device cluster.</p> <p>Satellite software upgrade group associations must match on both aggregation devices.</p> <ul style="list-style-type: none"> (satellite device cluster) To associate all satellite devices in the satellite device cluster with a satellite software image. For example: <pre>request system software add /var/tmp/satellite-3.0R12-signed.tgz upgrade-group sd-cluster-building1</pre> (standalone satellite device) Create a satellite software upgrade group, and associate the satellite device with a satellite software image. For example: <pre>set chassis satellite-management upgrade-groups standalone-satdevs-building1 satellite 130-139 request system software add /var/tmp/satellite-3.0R12-signed.tgz upgrade-group standalone-satdevs-building1</pre> 	<p>Satellite software upgrade group overview: "Understanding Software in a Junos Fusion Enterprise" on page 22</p> <p>Satellite software upgrade group management:</p> <ul style="list-style-type: none"> Managing Satellite Software Upgrade Groups in a Junos Fusion on page 123 satellite Configuring or Expanding a Junos Fusion Enterprise on page 45 request system software add 	

Configuring the Second Aggregation Device (Dual Aggregation Device Topologies Only) (Aggregation Devices)

Table 13: Junos Fusion Enterprise Installation Checklist (continued)

Task	Additional Information	For More Information	Performed by and Date
Delete single home configuration mode on both aggregation devices.	<p>To delete single home configuration mode on aggregation device 1:</p> <pre>delete chassis satellite-management single-home</pre> <p>Enter the same command on aggregation device 2:</p> <pre>delete chassis satellite-management single-home</pre>	<p>Dual aggregation device overview: "Understanding Junos Fusion Enterprise Components" on page 5</p> <p>Deleting single home configuration:</p> <ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 <p>single-home</p>	
Create and number the redundancy group on both aggregation devices.	<p>To create and number the redundancy group on aggregation device 1:</p> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network redundancy-group-id 1</pre> <p>Enter the same command on aggregation device 2:</p> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network redundancy-group-id 1</pre>	<p>Dual aggregation device overview: "Understanding Junos Fusion Enterprise Components" on page 5</p> <p>Dual aggregation device configuration: "Configuring or Expanding a Junos Fusion Enterprise" on page 45</p>	
Define the chassis ID number on each aggregation device.	<p>To define the chassis ID on aggregation device 1:</p> <pre>set chassis satellite-management redundancy-groups chassis-id 1</pre> <p>To define the chassis ID on aggregation device 2:</p> <pre>set chassis satellite-management redundancy-groups chassis-id 2</pre>	<p>Dual aggregation device overview: "Understanding Junos Fusion Enterprise Components" on page 5</p> <p>Dual aggregation device configuration: "Configuring or Expanding a Junos Fusion Enterprise" on page 45</p>	

Table 13: Junos Fusion Enterprise Installation Checklist (continued)

Task	Additional Information	For More Information	Performed by and Date
Define the peer chassis ID number and ICL interface on each aggregation device.	<p>To define the peer chassis ID and ICL interface on aggregation device 1:</p> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network peer-chassis-id 2 inter-chassis-link xe-0/0/1</pre> <p>To define the peer chassis ID and ICL interface on aggregation device 2:</p> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network peer-chassis-id 1 inter-chassis-link xe-0/0/1</pre>	<p>Dual aggregation device overview: "Understanding Junos Fusion Enterprise Components" on page 5</p> <p>Dual aggregation device configuration: "Configuring or Expanding a Junos Fusion Enterprise" on page 45</p>	

Table 13: Junos Fusion Enterprise Installation Checklist (continued)

Task	Additional Information	For More Information	Performed by and Date
Add all satellite devices to the redundancy group on each aggregation device.	<p>On aggregation device 1:</p> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network satellite 130-131</pre> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network cluster building-1</pre> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network cluster building-2</pre> <p>Enter the same commands on aggregation device 2:</p> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network satellite 130-131</pre> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network cluster building-1</pre> <pre>set chassis satellite-management redundancy-groups junos-fusion-campus-network cluster building-2</pre>	<p>Dual aggregation device overview: "Understanding Junos Fusion Enterprise Components" on page 5</p> <p>Dual aggregation device configuration: "Configuring or Expanding a Junos Fusion Enterprise" on page 45</p>	

Table 13: Junos Fusion Enterprise Installation Checklist (continued)

Task	Additional Information	For More Information	Performed by and Date
<p>Ensure ICCP is configured:</p> <ul style="list-style-type: none"> Automatic ICCP provisioning. If you are not integrating your Junos Fusion Enterprise into an existing Enterprise or campus network, ICCP is automatically provisioned. No user action is required. Manual ICCP configuration. If you are integrating your Junos Fusion Enterprise into an existing Enterprise or campus network, you may have to modify some ICCP setting to ensure the Junos Fusion Enterprise functions properly in your environment. 	<ul style="list-style-type: none"> Automatic ICCP provisioning: No user action required. Manual ICCP configuration. See <i>Configuring Multichassis Link Aggregation on EX Series Switches</i>. 	<p>ICCP overview: “Understanding ICCP in a Junos Fusion using Dual Aggregation Devices” on page 35</p> <p>Manual ICCP configuration:</p> <ul style="list-style-type: none"> <i>Configuring Multichassis Link Aggregation on EX Series Switches</i> 	

Adding Satellite Devices (Aggregation Devices)

Table 13: Junos Fusion Enterprise Installation Checklist (continued)

Task	Additional Information	For More Information	Performed by and Date
<p>Install satellite software onto a satellite device that is currently running Junos OS using one of the following methods:</p> <ul style="list-style-type: none"> • (Recommended) Autoconversion—Satellite software installed when satellite device cabled to aggregation device. • Manual conversion—Satellite software is installed when user enters CLI command to install satellite software. • Pre-installation—Satellite software is installed on satellite device before cabling it into the Junos Fusion. A switch may have satellite software pre-installed because it was ordered from the factory running satellite software, it was previously part of a different Junos Fusion, or a user manually installed satellite software onto the switch. 	<ul style="list-style-type: none"> • To enable autoconversion: set chassis satellite-management auto-satellite-conversion satellite 101 • To manually convert a satellite device: NOTE: This command is entered from an aggregation device. request chassis satellite interface xe-0/0/1 device-mode satellite • To manually install satellite software onto a satellite device: NOTE: This command is entered on the satellite device before it is configured into the Junos Fusion Enterprise. Please use the platform specific satellite software package appropriate for the platform as documented in <i>Understanding Platform-specific Satellite Software</i> in “Understanding Software in a Junos Fusion Enterprise” on page 22. 	<p>Satellite software installation methods overview: “Understanding Software in a Junos Fusion Enterprise” on page 22</p> <p>Installing satellite software:</p> <ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • satellite (Junos Fusion Automatic Satellite Conversion) • request chassis satellite interface • request chassis device-mode satellite 	

Related Documentation

- [Junos Fusion Hardware and Software Compatibility Matrices](#)
- [Understanding Junos Fusion Enterprise Software and Hardware Requirements on page 26](#)
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
- [Understanding Junos Fusion Enterprise Components on page 5](#)

Adding a Switch Running Satellite Software to a Junos Fusion Enterprise

Use this procedure to add a switch that is already running satellite software to an operational Junos Fusion Enterprise as a satellite device.



NOTE: To add a switch running satellite software version 2.0 to a satellite device cluster of a Junos Fusion Enterprise system:

1. Convert the switch to Junos OS. See [“Installing Junos OS Software on a Standalone Device Running Satellite Software”](#) on page 144.
2. Switch to the Junos Fusion Enterprise system. See the section *Installing Satellite Software and Adding Satellite Devices to the Junos Fusion* in [“Configuring or Expanding a Junos Fusion Enterprise”](#) on page 45.

A switch could already be running satellite software because it was previously part of another Junos Fusion, or because a user manually installed the satellite software.

To add a switch running satellite software to a Junos Fusion Enterprise as a satellite device:

Before you begin:

- Ensure the version of satellite software on your switch is supported by the Junos Fusion Enterprise. See [“Understanding Junos Fusion Enterprise Software and Hardware Requirements”](#) on page 26.
- Ensure that a Junos Fusion Enterprise is configured and operational. For detailed information on setting up a Junos Fusion Enterprise, see [“Configuring or Expanding a Junos Fusion Enterprise”](#) on page 45.

1. Log into the aggregation device.
2. Configure the link on the aggregation device into a cascade port, if you have not done so already.

For example, to configure interface xe-0/0/1 on the aggregation device into a cascade port:

```
[edit]
user@aggregation-device# set interfaces xe-0/0/1 cascade-port
```

3. Associate an FPC slot ID with the satellite device.

There are multiple methods of associating FPC slot IDs. See [“Configuring or Expanding a Junos Fusion Enterprise”](#) on page 45 for detailed information regarding FPC slot ID associations with satellite devices.

Examples:

- To associate FPC slot ID 101 with the satellite device that is connected to xe-0/0/1:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 101 cascade-ports
xe-0/0/1
```

- To associate FPC slot ID 101 with the satellite device using the serial number ABCDEFGHIJKL:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 101 serial-number
ABCDEFGHIJKL
```

- To associate FPC slot ID 101 with the satellite device using MAC address 12:34:56:AB:CD:EF:

```
[edit]
user@aggregation-device# set chassis satellite-management fpc 101 system-id
12:34:56:AB:CD:EF
```

4. (Recommended) Configure the satellite switch into a satellite software upgrade group that uses the same version of satellite software that was manually installed onto the switch.

This step is advisable, but not always required. Completing this step ensures that the satellite software on your device is not upgraded to the version of satellite software associated with the satellite software upgrade group upon installation.

5. Commit the configuration to both Routing Engines:

```
[edit]
user@aggregation-device# commit synchronize
```

If you want to commit the configuration to a single Routing Engine:

```
[edit]
user@aggregation-device# commit
```

6. Cable the aggregation device to the satellite device using the assigned cascade port interface on the aggregation device that was assigned in Step 2.

Cascade port interface support is discussed in [“Understanding Junos Fusion Enterprise Software and Hardware Requirements” on page 26](#).

7. Power on the satellite device, if you have not already done so.



NOTE: The satellite device can be powered on at any point in this procedure.

Related Documentation

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

- [Understanding Junos Fusion Enterprise Software and Hardware Requirements on page 26](#)

[Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion](#)

A Junos Fusion using multiple aggregation devices often requires that the configuration of a feature—for example, an extended port, and entities such as routing instances and VLANs that include the extended port—must match on all aggregation devices. If a configuration statement for the feature—in this case, the extended port—is specified differently on one aggregation device, the statement on that aggregation device might be implemented in an unpredictable manner or might not be implemented at all.

Configuration synchronization can be used to ensure that configuration done in a configuration group is applied on all aggregation devices when committed. Configuration synchronization simplifies administration of a Junos Fusion by allowing users to enter configuration statements in a configuration group and apply the configuration group to all aggregation devices rather than repeating a configuration procedure manually on each aggregation device. Configuration synchronization also ensures configuration consistency in that the same configuration is applied to all aggregation devices.

We strongly recommend using configuration synchronization for software features that must be configured exactly the same on all aggregation devices.

In a Junos Fusion Data Center with EVPN, QFX10008 and QFX10016 switches, which support two Routing Engines, can function as aggregation devices. When applying a configuration group to aggregation devices that support two Routing Engines, you must apply the configuration group to each Routing Engine. For information about configuring an IP address for each Routing Engine, see [“Understanding Configuration Synchronization in a Junos Fusion” on page 25](#).

The available group configuration options are beyond the scope of this document; see [Understanding MC-LAG Configuration Synchronization](#) and [Synchronizing and Committing MC-LAG Configurations](#) for additional information on using group configurations in an MC-LAG topology.

To enable configuration synchronization between aggregation devices in a Junos Fusion.



NOTE: For the sake of brevity, the examples in this procedure show the configuration on only two aggregation devices. Unless specifically called out, the examples for two aggregation devices also apply to topologies with four aggregation devices.

1. Ensure the aggregation devices are reachable from one another:

Aggregation device 1:

```
user@ad1> ping ad2 rapid
PING ad2.host.example.net (192.168.255.41): 56 data bytes
!!!!
mostly o--- ad2.example.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.317/0.331/0.378/0.024 ms
```

Aggregation device 2:

```
user@ad2> ping ad1 rapid
PING ad1.host.example.net (192.168.255.40): 56 data bytes
!!!!
--- ad1.example.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.317/0.331/0.378/0.024 ms
```

If the devices cannot ping one another, try statically mapping the hostnames of each device's management IP address and retry the ping.

Aggregation device 1:

```
user@ad1# set system static-host-mapping inet 192.168.255.41
user@ad1# commit
user@ad1# run ping ad2 rapid
```

Aggregation device 2:

```
user@ad2# set system static-host-mapping ad1 inet 192.168.255.40
user@ad2# commit
user@ad2# run ping ad1 rapid
```

If the devices cannot ping one another after the hostnames are statically mapped, see [Connecting and Configuring an EX9200 Switch \(CLI Procedure\)](#) or the [Installation and Upgrade Guide for EX9200 Switches](#).

2. Enable configuration synchronization:

Aggregation device 1:

```
user@ad1# set system commit peers-synchronize
```

Aggregation device 2:

```
user@ad2# set system commit peers-synchronize
```

3. Configure each aggregation device so that the other aggregation devices are identified as configuration peers. Enter the authentication credentials of each peer aggregation device to ensure group configurations on one aggregation device are committed to the other aggregation devices.



WARNING: The password *password* is used in this configuration step for illustrative purposes only. Use a more secure password in your device configuration.



NOTE: This step assumes a user with an authentication password has already been created on each Juniper Networks switch acting as an aggregation device. For instructions on configuring username and password combinations, see [Connecting and Configuring an EX9200 Switch \(CLI Procedure\)](#).

Aggregation device 1:

```
user@ad1# set system commit peers ad2 user root authentication password
```

Aggregation device 2:

```
user@ad2# set system commit peers ad1 user root authentication password
```

4. Enable the Network Configuration (NETCONF) protocol over SSH:

Aggregation device 1:

```
user@ad1# set system services netconf ssh
```

Aggregation device 2:

```
user@ad2# set system services netconf ssh
```

5. Commit the configuration:

Aggregation device 1:

```
user@ad1# commit
```

Aggregation device 2:

```
user@ad2# commit
```

6. (Optional) Create a configuration group for testing to ensure configuration synchronization is working.

Example for Junos Fusion Enterprise and Junos Fusion Data Center with aggregation devices that have one Routing Engine:

Aggregation Device 1:

```
user@ad1# set groups TEST when peers [ad1 ad2]
user@ad1# set apply-groups TEST
```

Aggregation Device 2:

```
user@ad2# set apply-groups TEST
```

Example for Junos Fusion Data Center with EVPN architecture and QFX10008 or QFX10016 switches with two Routing Engines as aggregation devices:

Aggregation Device 1:

```
user@ad1# set groups TEST when peers 172.16.75.10 (ad1, re0)
user@ad1# set groups TEST when peers 172.16.75.20 (ad1, re1)
user@ad1# set groups TEST when peers 172.16.75.30 (ad2, re0)
user@ad1# set groups TEST when peers 172.16.75.40 (ad2, re1)
user@ad1# set groups TEST when peers 172.16.75.50 (ad3, re0)
user@ad1# set groups TEST when peers 172.16.75.60 (ad3, re1)
user@ad1# set groups TEST when peers 172.16.75.70 (ad4, re0)
user@ad1# set groups TEST when peers 172.16.75.80 (ad4, re1)
user@ad1# set apply-groups TEST
```

Aggregation Device 2:

```
user@ad2# set apply-groups TEST
```

Aggregation Device 3:

```
user@ad2# set apply-groups TEST
```

Aggregation Device 4:

```
user@ad2# set apply-groups TEST
```

7. (Optional) Configure and commit a group on aggregation device 1, and confirm it is implemented on aggregation device 2:



NOTE: This step shows how to change one interface configuration using groups. Interface ranges cannot be specified within groups and synchronized between configuration peers in a Junos Fusion to configure multiple interfaces simultaneously.

Aggregation device 1:

```
user@ad1# set groups TEST interfaces ge-0/0/1 description testing123
user@ad1# commit
```

Aggregation device 2:

```
user@ad2# show groups TEST
when {
  peers [ ad1 ad2 ];
}
interfaces {
  ge-0/0/1 {
    description testing123;
  }
}
user@ad2# run show interfaces ge-0/0/1
Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 235, SNMP ifIndex: 743
Description: testing123
(additional output removed for brevity)
```

Perform the same procedure to verify configuration synchronization from aggregation device 2 to aggregation device 1, if desired.

Delete the test configuration group on each aggregation device.

Aggregation device 1:

```
user@ad1# delete groups test
```

Aggregation device 2:

```
user@ad2# delete groups test
```

See [Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#) for a sample Junos Fusion Enterprise topology configured largely using configuration synchronization. See [Enterprise Data Center: Junos Fusion Data Center Architecture](#) for a sample Junos Fusion Data Center topology largely configured using configuration synchronization.

Related Documentation

- [Network Configuration Example: Configuring MC-LAG on EX9200 Switches in the Core for Campus Networks](#)
- [Synchronizing and Committing MC-LAG Configurations](#)

- [Understanding MC-LAG Configuration Synchronization](#)
- [Understanding Configuration Synchronization in a Junos Fusion on page 25](#)
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

Configuring Uplink Port Policies on a Junos Fusion

Ports on a satellite device that can be used as uplink ports are called candidate uplink ports. Each satellite device model has a set of default candidate uplink ports that the device can use to connect to the aggregation device and, in the case of a satellite device cluster, to other satellite devices. You can override the default set of candidate uplink and clustering ports by defining a candidate uplink port policy for the device.

To configure a candidate uplink port policy, you must first configure an uplink port group. The uplink port group defines a set of candidate uplink ports on a satellite device. Uplink port groups are assigned to candidate uplink port policies, which are assigned to satellite devices.



NOTE: The candidate uplink port policy must include at least one port from the default candidate uplink port. Otherwise, the aggregation device will not be able to communicate with the satellite device in order to provision the satellite device with the uplink port policy.

-
- [Configuring an Uplink Port Policy for a Standalone Satellite Device on page 82](#)
 - [Configuring an Uplink Port Policy for a Satellite Device Cluster on page 83](#)

Configuring an Uplink Port Policy for a Standalone Satellite Device

To configure an uplink port policy:

1. Create an uplink port group:

```
[edit policy-options satellite-policies]
user@switch# set port-group-alias port-group-alias-name
```

2. Configure the PICs that contain ports to be identified as candidate uplink ports:

```
[edit policy-options satellite-policies port-group-alias port-group-alias-name]
user@switch# set pic pic-number
```

3. Configure the ports on the PICs to be identified as candidate uplink ports:

```
[edit policy-options satellite-policies port-group-alias port-group-alias-name
pic pic-number]
user@switch# set port [port-number | port-number-range | all]
```

4. Create a candidate uplink port policy:

```
[edit policy-options satellite-policies]
```

```
user@switch# set candidate-uplink-port-policy policy-name
```

5. Assign the uplink port group to the candidate uplink port policy:

```
[edit policy-options satellite-policies candidate-uplink-port-policy
policy-name]
user@switch# set uplink-port-group group-name
```

Configuring an Uplink Port Policy for a Satellite Device Cluster

Candidate uplink port policies for a satellite device cluster can be applied at the cluster level, FPC level, or globally. Policies configured at the FPC-level take precedence over cluster and global policies. Policies configured at the cluster level take precedence over global policies.

1. Follow steps 1-3 in the procedure above to create an uplink port group.
2. Configure a candidate uplink port policy for a satellite cluster at the cluster level, FPC level, or global level:

- To configure a policy at the cluster level:

```
[edit]
user@switch# set chassis satellite-management cluster cluster-name cluster-policy
satellite-port-policy satellite-port-policy-name
```

- To configure a policy at the FPC level:

```
[edit]
user@switch# set chassis satellite-management cluster cluster-name fpc fpc-number
cluster-policy satellite-port-policy-name
```

- To configure a policy at the global level:

```
[edit]
user@switch# set chassis satellite-management cluster-policy satellite-port-policy-name
```

3. Assign the uplink port group to the candidate uplink port policy:

```
[edit policy-options satellite-policies candidate-uplink-port-policy
policy-name]
user@switch# set uplink-port-group group-name
```

Related Documentation

- [Understanding Satellite Policies in a Junos Fusion on page 41](#)

Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion

This topic shows how to configure the alarm levels for link-down events on a satellite device in a Junos Fusion.

To configure system alarm handling in a Junos Fusion using an environment monitoring satellite policy:

1. Log in to the aggregation device.
2. Create and name the environment monitoring satellite policy:

```
[edit]
user@aggregation-device# set policy-options satellite-policies
environment-monitoring-policy policy-name
```

For example, to create an environment monitoring satellite policy named **linkdown-alarm-monitoring-1**:

```
[edit]
user@aggregation-device# set policy-options satellite-policies
environment-monitoring-policy linkdown-alarm-monitoring-1
```

3. Configure the link-down alarm behavior for the Junos Fusion using one or both of the following methods:
 - Set the default link-down alarm to one setting whenever it is experienced in a Junos Fusion:

```
[edit policy-options satellite-policies environment-monitoring-policy
policy-name]
user@aggregation-device# set alarm linkdown [ignore | red | yellow]
```

For example, to set the default link-down alarm to ignore for **linkdown-alarm-monitoring-1**:

```
[edit policy-options satellite-policies environment-monitoring-policy
linkdown-alarm-monitoring-1]
user@aggregation-device# set alarm linkdown ignore
```

- Set the link-down alarm behavior for a specific satellite device hardware model using terms:

```
[edit policy-options satellite-policies environment-monitoring-policy
policy-name]
user@aggregation-device# set term term-name from product-model model-name alarm
linkdown [ignore | red | yellow]
```

where *term-name* is the user-defined name of the term, and *model-name* defines the product model of the satellite device that uses the satellite policy.

You can apply environment monitoring satellite policies individually or globally. You can, therefore, create multiple policies using the instructions in this step and apply them to different satellite devices in your Junos Fusion, when needed.

You can use multiple terms in the same environment monitoring satellite policy.

For example, if you wanted to configure EX4300 switches acting as satellite devices to send yellow alarms when link-down errors occur while QFX5100 switches acting as satellite devices send red alarms for the same condition:

```
[edit policy-options satellite-policies environment-monitoring-policy
linkdown-alarm-monitoring-1]
user@aggregation-device# set term ex4300-yellow from product-model EX4300* alarm
linkdown yellow
user@aggregation-device# set term qfx5100-red from product-model QFX5100* alarm
linkdown red
```

4. Associate the environment monitoring satellite policy with a Junos Fusion configuration.

- To associate an environment monitoring satellite policy for all satellite devices in a Junos Fusion:

```
[edit chassis satellite-management]
user@aggregation-device# set environment-monitoring-policy policy-name
```

For example, to associate an environment monitoring satellite policy named **linkdown-alarm-monitoring-1** for all satellite devices in a Junos Fusion:

```
[edit chassis satellite-management]
user@aggregation-device# set environment-monitoring-policy
linkdown-alarm-monitoring-1
```

- To associate an environment monitoring satellite policy for select FPC IDs in a Junos Fusion:

```
[edit chassis satellite-management fpc slot-id]
user@aggregation-device# set environment-monitoring-policy policy-name
```

For example, to associate an environment monitoring satellite policy named **linkdown-alarm-monitoring-1** for the satellite device associated with FPC ID 101 in a Junos Fusion:

```
[edit chassis satellite-management fpc 101]
user@aggregation-device# set environment-monitoring-policy
linkdown-alarm-monitoring-1
```

You can configure a different environment monitoring policy for a single satellite device using the **fpc slot-id** when an environment monitoring policy for all satellite devices is configured. The environment monitoring policy for the FPC is enabled in cases when both an individual and global environment monitoring policy are configured.

5. Commit the configuration to both Routing Engines:

```
[edit]
user@aggregation-device# commit synchronize
```

If you want to commit the configuration to the active Routing Engine only:

```
[edit]  
user@aggregation-device# commit
```

- Related Documentation**
- *Configuring Junos Fusion Provider Edge*
 - [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

CHAPTER 3

Junos Fusion Enterprise Configuration Statements

- [aging-timer \(Junos Fusion\) on page 88](#)
- [alarm \(Satellite Policies\) on page 89](#)
- [alias \(Junos Fusion\) on page 90](#)
- [alias \(Junos Fusion Satellite Device Clustering\) on page 91](#)
- [auto-satellite-conversion \(Junos Fusion\) on page 92](#)
- [bgp-peer on page 93](#)
- [cascade-port on page 94](#)
- [cascade-ports on page 95](#)
- [cascade-ports \(Junos Fusion Satellite Device Cluster\) on page 96](#)
- [cluster \(Junos Fusion\) on page 97](#)
- [cluster-id \(Junos Fusion Satellite Device Cluster\) on page 98](#)
- [description \(Junos Fusion\) on page 99](#)
- [description \(Junos Fusion Satellite Device Cluster\) on page 100](#)
- [environment-monitoring-policy \(satellite-management\) on page 101](#)
- [environment-monitoring-policy \(satellite-policies\) on page 102](#)
- [fpc \(Junos Fusion\) on page 103](#)
- [fpc \(Junos Fusion Satellite Device Cluster\) on page 104](#)
- [linkdown \(satellite-policies alarm\) on page 105](#)
- [mclag on page 106](#)
- [member-id \(Junos Fusion Satellite Device Cluster\) on page 107](#)
- [no-auto-iccp-provisioning \(Junos Fusion Redundancy Group\) on page 108](#)
- [redundancy-group-id \(Junos Fusion\) on page 109](#)
- [redundancy-groups \(Junos Fusion\) on page 110](#)
- [satellite \(Junos Fusion Automatic Satellite Conversion\) on page 112](#)
- [satellite \(Junos Fusion Satellite Device Homing\) on page 113](#)
- [satellite \(Junos Fusion Satellite Software Upgrade Groups\) on page 114](#)

- [satellite-management \(Junos Fusion\)](#) on page 115
- [serial-number \(Junos Fusion\)](#) on page 117
- [single-home \(Junos Fusion\)](#) on page 118
- [system-id \(Junos Fusion\)](#) on page 119
- [system-id \(Junos Fusion Satellite Device Cluster\)](#) on page 120
- [upgrade-groups \(Junos Fusion\)](#) on page 121

aging-timer (Junos Fusion)

Syntax	<code>aging-timer <i>aging-timer</i>;</code>
Hierarchy Level	<code>[edit chassis satellite-management]</code>
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Configure the aging timer on the aggregation device in a Junos Fusion.</p> <p>The aging timer is used on the aggregation device to specify the amount of time, in minutes, to maintain the device state of an unreachable satellite device before deleting the satellite device from the Junos Fusion.</p> <p>If the unreachable satellite device is discovered before the aging timer expires, the satellite device is reactivated in the Junos Fusion without having to restore its device state.</p>
Default	The default aging time is 10 minutes.
Options	The remaining statements are explained separately. Range: 2 through 60,000 minutes
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring or Expanding a Junos Fusion Enterprise on page 45• Configuring Junos Fusion Provider Edge

alarm (Satellite Policies)

Syntax	<pre>alarm { linkdown [ignore red yellow] }</pre>
Hierarchy Level	[edit policy-options satellite-policies environment-monitoring-policy <i>policy-name</i>]
Release Information	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	Configure the link down alarm that is sent within the Junos Fusion whenever a satellite device experiences a link-down error.
Default	Link-down alarms are not sent on satellite devices in a Junos Fusion until an environment monitoring policy is configured.
Options	The remaining statements are explained separately.
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 84 • Understanding Satellite Policies in a Junos Fusion on page 41

alias (Junos Fusion)

Syntax	<code>alias <i>alias</i>;</code>
Hierarchy Level	[edit chassis satellite-management fpc <i>slot-id</i>]
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Configure an alias to label a satellite device.</p> <p>Satellite device alias configuration is optional, but recommended. In a Junos Fusion, satellite device aliases assist with administration tasks, such as monitoring satellite devices using show command outputs, as well as with some configuration tasks that provide an option to identify a satellite device by its alias.</p>
Default	Satellite devices are not assigned an alias, by default.
Options	alias —The user-defined text name of the alias.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring or Expanding a Junos Fusion Enterprise on page 45• Configuring Junos Fusion Provider Edge

alias (Junos Fusion Satellite Device Clustering)

Syntax	<code>alias <i>alias</i>;</code>
Hierarchy Level	<code>[edit chassis satellite-management cluster <i>cluster-name</i> fpc <i>slot-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 16.1R1.
Description	<p>Configure an alias to label a satellite device in a satellite device cluster.</p> <p>Satellite device alias configuration is optional, but recommended. In a Junos Fusion, satellite device aliases assist with administration tasks, such as monitoring satellite devices using show command outputs, as well as with some configuration tasks that provide an option to identify a satellite device by its alias.</p>
Default	Satellite devices in a satellite device cluster are not assigned an alias, by default.
Options	alias —The user-defined text name of the alias.
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge

auto-satellite-conversion (Junos Fusion)

Syntax	<pre>auto-satellite-conversion { satellite [<i>slot-id</i> <i>range</i> all]; }</pre>
Hierarchy Level	[edit chassis satellite-management]
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Enable automatic satellite conversion in a Junos Fusion.</p> <p>Automatic satellite conversion automatically configures a switch into a satellite device when it is cabled into the aggregation device.</p> <p>Additional configuration steps are required to add satellite devices to a Junos Fusion using automatic satellite conversion. See <i>Configuring Junos Fusion Provider Edge</i> or “<i>Configuring or Expanding a Junos Fusion Enterprise</i>” on page 45.</p>
Options	The remaining statements are explained separately.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring or Expanding a Junos Fusion Enterprise on page 45• <i>Configuring Junos Fusion Provider Edge</i>

bgp-peer

Syntax	<code>bgp-peer <i>ip-address</i>;</code>
Hierarchy Level	<code>[edit routing-instances <i>name</i> protocols evpn mclag]</code>
Release Information	Statement introduced in Junos OS Release 17.4R1 on MX Series routers, EX Series switches, and Junos Fusion Enterprise.
Description	Configure an aggregation device in a Junos Fusion Enterprise or a multichassis link aggregation group (MC-LAG) topology to interwork with an Ethernet VPN-MPLS (EVPN-MPLS) device.
Options	<i>ip-address</i> —IP address of the BGP peer. Typically, a BGP peer is identified by the IP address of the device's loopback interface.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Understanding EVPN-MPLS Interworking with Junos Fusion Enterprise and MC-LAG on page 969

cascade-port

Syntax	<code>cascade-port;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Configure the specified interface on the aggregation device in a Junos Fusion into a cascade port.</p> <p>Additional configuration is required to configure cascade ports on a Junos Fusion. See <i>Configuring Junos Fusion Provider Edge</i> or “Configuring or Expanding a Junos Fusion Enterprise” on page 45.</p>
Default	No interfaces are cascade ports, by default.
Options	<i>interface-name</i> —Specifies the name of the interface.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring or Expanding a Junos Fusion Enterprise on page 45• <i>Configuring Junos Fusion Provider Edge</i>

cascade-ports

Syntax	<code>cascade-ports <i>interface-name</i>;</code>
Hierarchy Level	[edit chassis satellite-management fpc slot-id]
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Associate a cascade port with an FPC slot ID number in a Junos Fusion.</p> <p>The FPC slot ID of the satellite device is determined by the value entered as the FPC <i>slot-id</i>. For instance, if the set chassis satellite-management fpc 105 cascade-ports xe-0/0/1 statement is used to configure interface xe-0/0/1 into a cascade port, the satellite device that connects to interface xe-0/0/1 has an FPC slot ID of 105 in the Junos Fusion.</p> <p>A Junos Fusion provides two methods of assigning an FPC identifier: Unique ID-based FPC identification and connectivity-based FPC identification. Unique ID-based FPC identification maps an FPC slot ID to a satellite device's MAC address or serial number, while connectivity-based FPC identification maps an FPC slot ID to a cascade port. This statement is used to assign an FPC ID using connectivity-based FPC identification by mapping an FPC slot ID to a cascade port.</p> <p>In a Junos Fusion, each satellite device must be mapped to an FPC identifier (FPC ID). The FPC ID is used for Junos Fusion configuration, monitoring, and maintenance. Interface names—which are identified using the <i>type-fpc / pic / port</i> format—use the FPC ID as the <i>fpc</i> variable when the satellite device is participating in a Junos Fusion. For instance, built-in port 2—a Gigabit Ethernet interface on a satellite device that is using 101 as its FPC ID—uses ge-101/0/2 as its interface name.</p> <p>For additional information on the role of FPC slot IDs in a Junos Fusion, see <i>Understanding Junos Fusion Provider Edge Components</i> or “Understanding Junos Fusion Enterprise Components” on page 5.</p>
Default	No FPC slot IDs are associated with satellite devices, by default.
Options	<i>interface-name</i> —Specifies the name of the interface.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring or Expanding a Junos Fusion Enterprise on page 45 Configuring Junos Fusion Provider Edge

cascade-ports (Junos Fusion Satellite Device Cluster)

Syntax	<code>cascade-ports <i>interface-name</i>;</code>
Hierarchy Level	<code>[edit chassis satellite-management cluster <i>cluster-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 16.1R1.
Description	<p>Associate a cascade port with a satellite device cluster in a Junos Fusion.</p> <p>This command defines which cascade ports are associated with a satellite device cluster only. An interface still needs to be converted into a cascade port before it performs cascade port functions. There are multiple ways to convert an interface on the aggregation device into a cascade port. See “Configuring or Expanding a Junos Fusion Enterprise” on page 45.</p>
Default	Cascade ports are not associated with satellite device clusters, by default.
Options	<i>interface-name</i> —Specifies the name of the interface on the aggregation device that is associated with the satellite device cluster.
Required Privilege Level	<code>admin</code> —To view this statement in the configuration. <code>admin-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring or Expanding a Junos Fusion Enterprise on page 45

cluster (Junos Fusion)

Syntax	<pre>cluster <i>cluster-name</i>{ cascade-ports <i>interface-name</i>; cluster-id <i>cluster-id-number</i>; fpc <i>slot-id</i>{ alias <i>alias</i>; description <i>description</i>; member-id <i>member-id-number</i>; system-id <i>mac-address</i>; } }</pre>
Hierarchy Level	[edit chassis satellite-management]
Release Information	Statement introduced in Junos OS Release 16.1R1.
Description	Create and name a satellite device cluster.
Default	Satellite device clusters are not present, by default.
Options	<p><i>cluster-name</i>—Specifies the name of the satellite device cluster.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45

cluster-id (Junos Fusion Satellite Device Cluster)

Syntax	<code>cluster-id <i>cluster-id-number</i>;</code>
Hierarchy Level	[edit chassis satellite-management cluster <i>cluster-name</i>]
Release Information	Statement introduced in Junos OS Release 16.1R1.
Description	<p>Assign a cluster identification number to a satellite device cluster in a Junos Fusion.</p> <p>The cluster identification number is used to identify a satellite device cluster in a Junos Fusion.</p>
Default	Cluster identification numbers are not assigned in a Junos Fusion, by default.
Options	<i>cluster-id-number</i> —Specifies the cluster identification number of the satellite device cluster in the Junos Fusion.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring or Expanding a Junos Fusion Enterprise on page 45

description (Junos Fusion)

Syntax	<code>description <i>description</i>;</code>
Hierarchy Level	[edit chassis satellite-management fpc slot-id]
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Configure a description for the satellite device. The description is optional and used for information purposes only.
Default	Satellite devices do not have descriptions, by default.
Options	<i>description</i> —A text description of the satellite device.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Junos Fusion Provider Edge • Configuring or Expanding a Junos Fusion Enterprise on page 45

description (Junos Fusion Satellite Device Cluster)

Syntax	<code>description <i>description</i>;</code>
Hierarchy Level	<code>[edit chassis satellite-management cluster <i>cluster-name</i> fpc <i>slot-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 16.1R1.
Description	<p>Configure a description for the satellite device in the satellite device cluster.</p> <p>The description is optional and used for information purposes only.</p>
Default	Satellite devices in satellite device clusters do not have descriptions, by default.
Options	<i>description</i> —A text description of the satellite device in the satellite device cluster.
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring or Expanding a Junos Fusion Enterprise on page 45

environment-monitoring-policy (satellite-management)

Syntax	<code>environment-monitoring-policy <i>policy-name</i>;</code>
Hierarchy Level	<code>[edit chassis satellite-management]</code> <code>[edit chassis satellite-management fpc slot-id]</code>
Release Information	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Enable an environment monitoring policy in a Junos Fusion.</p> <p>You configure environment monitoring policies for a Junos Fusion in the <code>[edit policy-options environment-monitoring-policy <i>policy-name</i>]</code> hierarchy.</p> <p>You can configure an environment monitoring policy in a Junos Fusion for a single satellite device using the <i>fpc slot-id</i> option, or for all satellite devices in the Junos Fusion by not specifying the <i>fpc slot-id</i> option.</p> <p>You can configure a different environment monitoring policy for a single satellite device using the <i>fpc slot-id</i> when an environment monitoring policy for all satellite devices is configured. The environment monitoring policy for the FPC is enabled in cases when both an individual and global environment monitoring policy are configured.</p>
Default	<p>No environment monitoring policies for the Junos Fusion are present.</p> <p>If you enable an environment monitoring policy in a Junos Fusion without specifying the <i>fpc slot-id</i> option, the environment monitoring policy is applied for all satellite devices in the Junos Fusion.</p>
Options	<p><i>policy-name</i>—Specifies the name of the environment monitoring policy.</p> <p>The <i>policy-name</i> name is defined as part of the environment monitoring policy configuration procedure, which is handled in the <code>[edit policy-options environment-monitoring-policy <i>policy-name</i>]</code> hierarchy.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 84 • Understanding Satellite Policies in a Junos Fusion on page 41

environment-monitoring-policy (satellite-policies)

Syntax	<pre>environment-monitoring-policy <i>policy-name</i>{ alarm { linkdown [ignore red yellow] } term <i>term-name</i>{ from { product-model <i>model-name</i>; } } }</pre>
Hierarchy Level	[edit policy-options satellite-policies]
Release Information	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Configure an environment monitoring satellite policy for a device or devices in a Junos Fusion.</p> <p>An environment monitoring satellite policy is used to configure alarm behavior on satellite devices in a Junos Fusion.</p> <p>The environment monitoring policy is applied to a Junos Fusion using the environment-monitoring-policy statement in the [edit <i>chassis</i> satellite-management] or [edit <i>chassis</i> satellite-management fpc slot-id] hierarchy levels.</p>
Options	<p><i>policy-name</i>—Specifies the user-defined name of the environment monitoring policy.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 84 • Understanding Satellite Policies in a Junos Fusion on page 41

fpc (Junos Fusion)

Syntax	<pre>fpc slot-id{ alias alias; cascade-ports interface-name; description description; environment-monitoring-policy policy; serial-number serial-number; system-id mac-address; uplink-failure-detection { candidate-uplink-policy policy; } local switching; selective-vlan-switching{ routing-instance routing-instance; } }</pre>
Hierarchy Level	[edit chassis satellite-management]
Release Information	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p> <p>local-switching and selective-vlan-switching introduced in Junos OS Release 17.2R1 for Junos Fusion Provider Edge.</p>
Description	Configure an FPC identifier for a satellite device within a Junos Fusion, or modify the configuration of an existing satellite device in a Junos Fusion.
Options	<p>slot-id—Specifies the FPC identifier of the device and functions as the FPC identifier in the interface name when configuring satellite device interfaces.</p> <p>In a Junos Fusion Data Center, the <i>slot-id</i> must have a value in the range of 65 to 254.</p> <p>In a Junos Fusion Enterprise or Junos Fusion Provider Edge, the <i>slot-id</i> must have a value of 34 or greater.</p> <p>local switching—Enables local-switching for all the ports on the satellite device.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring Junos Fusion Provider Edge Configuring or Expanding a Junos Fusion Enterprise on page 45

fpc (Junos Fusion Satellite Device Cluster)

Syntax `fpc slot-id{
 alias alias;
 description description;
 member-id member-id-number;
 system-id mac-address;
}`

Hierarchy Level `[edit chassis satellite-management cluster cluster-name]`

Release Information Statement introduced in Junos OS Release 16.1R1.

Description Configure an FPC identifier for a satellite device in a satellite device cluster for a Junos Fusion, or modify the configuration of an existing satellite device in a satellite device cluster in a Junos Fusion.

Options *slot-id*—Specifies the FPC identifier of the device.

In a Junos Fusion, the *slot-id* must be 34 or larger, and functions as the FPC identifier in the interface name when configuring satellite device interfaces.

The remaining statements are explained separately.

Required Privilege Level admin—To view this statement in the configuration.
admin-control—To add this statement to the configuration.

Related Documentation

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

linkdown (satellite-policies alarm)

Syntax	<code>linkdown [ignore red yellow]</code>
Hierarchy Level	<code>[edit policy-options satellite-policies environment-monitoring-policy <i>policy-name</i> alarm]</code>
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Configure the alarm behavior when an Ethernet link goes down on a satellite device in a Junos Fusion. The configured alarm behavior can be applied to any satellite device in the Junos Fusion. The alarm behavior is applied to satellite devices using environment monitoring policies.
Options	ignore —Do not signal an alarm when an Ethernet link-down event occurs. red —Raise a major alarm when an Ethernet link-down event occurs. yellow —Raise a minor alarm when an Ethernet link-down event occurs.
Required Privilege Level	admin —To view this statement in the configuration. admin-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 84 • Understanding Satellite Policies in a Junos Fusion on page 41

mclag

Syntax	<pre>mclag { bgp-peer <i>ip-address</i>; }</pre>
Hierarchy Level	[edit routing-instances <i>name</i> protocols evpn]
Release Information	Statement introduced in Junos OS Release 17.4R1 on MX Series routers, EX Series switches, and Junos Fusion Enterprise.
Description	<p>Configure parameters that enable the interworking of Ethernet VPN-MPLS (EVPN-MPLS) with a Junos Fusion Enterprise or a multichassis link aggregation group (MC-LAG) topology.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding EVPN-MPLS Interworking with Junos Fusion Enterprise and MC-LAG on page 969

member-id (Junos Fusion Satellite Device Cluster)

Syntax	<code>member-id <i>member-ID-number</i>;</code>
Hierarchy Level	<code>[edit chassis satellite-management cluster <i>cluster-name</i> fpc <i>slot-id</i>]</code>
Release Information	Statement introduced in Junos OS Release 16.1R1.
Description	<p>Assign a member ID number to a satellite device in a satellite device cluster.</p> <p>The member ID is used to identify the satellite device within the satellite device cluster.</p>
Default	Member ID numbers are not assigned in a satellite device cluster, by default.
Options	<i>member-ID-number</i> —Specifies the member ID of the satellite device in the satellite device cluster.
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45

no-auto-iccp-provisioning (Junos Fusion Redundancy Group)

Syntax	no-auto-iccp-provisioning;
Hierarchy Level	[edit chassis satellite-management redundancy-groups <i>redundancy-group-name</i> peer-chassis-id <i>peer-chassis-id-number</i>]
Release Information	Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.
Description	<p>Disable automatic ICCP provisioning of an interchassis link (ICL) for the redundancy group used to configure dual aggregation devices in a Junos Fusion topology.</p> <p>Automatic ICCP provisioning of an interchassis link (ICL) simplifies configuration of a Junos Fusion with dual aggregation devices by automatically provisioning the ICCP configuration within the Junos Fusion, instead of requiring the user to manually configure all ICCP parameters. Automatic ICCP Provisioning of an interchassis link (ICL) is enabled by default for a Junos Fusion using a dual aggregation device topology; this statement disables automatic ICCP provisioning.</p> <p>If this statement is entered, the user has to manually configure ICCP in the redundancy group used to configure dual aggregation devices in a Junos Fusion topology.</p> <p>This statement is optional. You can manually configure any available ICCP configuration parameters in the redundancy group when automatic ICCP provisioning is enabled. In cases where a user configures an ICCP parameter when automatic ICCP provisioning is enabled, the user-configured ICCP configuration is used over the automatically-provisioned ICCP configuration parameter.</p> <p>User configuration of ICCP in a Junos Fusion is not required. This statement is recommended for use by expert users only.</p>
Default	Automatic ICCP Provisioning is enabled by default in redundancy groups used to configure dual aggregation devices in a Junos Fusion topology.
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link • Configuring or Expanding a Junos Fusion Enterprise on page 45

redundancy-group-id (Junos Fusion)

Syntax	<code>redundancy-group-id <i>redundancy-group-id-number</i>;</code>
Hierarchy Level	<code>[edit chassis satellite-management redundancy-groups <i>redundancy-group-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.
Description	<p>Defines a redundancy group ID number for a redundancy group in a Junos Fusion using dual aggregation devices.</p> <p>A Junos Fusion using dual aggregation devices must have one redundancy group that includes both aggregation devices and all satellite devices. The redundancy group must be configured individually on each aggregation device. The redundancy group name and redundancy group ID number must match on the redundancy group configuration on each aggregation device in the Junos Fusion.</p>
Default	A redundancy group does not have a redundancy group ID number by default.
Options	<p><i>redundancy-group-id-number</i>—The user-defined redundancy group ID number.</p> <p>Range: 1 through 255</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45

redundancy-groups (Junos Fusion)

Syntax

```

redundancy-groups {
  chassis-id number;
  redundancy-group-name {
    redundancy-group-id redundancy-group-id-number;
    protocol {
      evpn {
        peer-ip [ IP address ]
      }
    }
    peer-chassis-id peer-chassis-id-number {
      inter-chassis-link interface-name;
      authentication-key string;
      liveness-detection {
        detection-time {
          threshold milliseconds;
        }
        minimum-interval milliseconds;
        minimum-receive-interval milliseconds;
        multiplier number;
        no-adaptation;
        transmit-interval {
          minimum-interval milliseconds;
          threshold milliseconds;
        }
        version (1 | automatic);
      }
      session-establishment-hold-time seconds;
      traceoptions;
    }
    no-auto-iccp-provisioning;
    no-auto-vlan-provisioning;
    satellite satellite-device-fpc-IDs;
  }
}

```

Hierarchy Level [edit chassis [satellite-management](#)]

Release Information Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

Description Configure a redundancy group for Junos Fusion. A Junos Fusion topology supports one redundancy group that includes up to four devices—the aggregation devices—while also including a configuration parameter that allows users to specify that the satellite devices also belong to the redundancy group.

In a Junos Fusion with MC-LAG, a redundancy group is required to enable ICCP. ICCP is automatically provisioned on the interchassis link, but you can manually configure the

ICCP parameters. Any ICCP parameter you configure overrides the default settings. You can also disable automatic ICCP provisioning.

In Junos Fusion Data Center with EVPN, a redundancy group configuration enables the EVPN protocol. ICCP configuration is not required when configuring Junos Fusion with EVPN.

Options The remaining statements are explained separately.

Required Privilege Level admin—To view this statement in the configuration.
 admin-control—To add this statement to the configuration.

Related Documentation

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
- *Configuring Junos Fusion Provider Edge*
- *Understanding Automatic ICCP Provisioning and Automatic VLAN Provisioning of an Interchassis Link*

satellite (Junos Fusion Automatic Satellite Conversion)

Syntax	<code>satellite [slot-id range all];</code>
Hierarchy Level	[edit chassis satellite-management auto-satellite-conversion]
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Specify the interface to enable automatic software conversion in a Junos Fusion. The device that is cabled to the slot specified in this command is automatically converted into a satellite device. Additional configuration steps are required to add satellite devices to a Junos Fusion using automatic satellite conversion. See “Configuring or Expanding a Junos Fusion Enterprise” on page 45 or <i>Configuring Junos Fusion Provider Edge</i> .
Options	<p>slot-id—Specifies the FPC slot identifier of the device that will be automatically converted into a satellite device.</p> <p>The FPC identifier must be mapped to a cascade port interface before this command is operational. See “Configuring or Expanding a Junos Fusion Enterprise” on page 45 or <i>Configuring Junos Fusion Provider Edge</i>.</p> <p>range—Specifies a range of FPC slot identifiers that will automatically be converted into satellite devices. For instance, to specify that FPC IDs 103, 104, and 105 should be automatically converted into satellite devices, enter a <i>range</i> of 103-105.</p> <p>all—Specifies that all FPC slot identifiers in the Junos Fusion will automatically be converted into satellite devices.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Configuring Junos Fusion Provider Edge</i> Configuring or Expanding a Junos Fusion Enterprise on page 45

satellite (Junos Fusion Satellite Device Homing)

Syntax	<code>satellite [<i>slot-id</i> <i>slot-id-range</i> <i>all</i>];</code>
Hierarchy Level	[edit chassis satellite-management single-home]
Release Information	Statement introduced in Junos OS Release 14.2R3. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Specify which satellite device links are single-homed to the aggregation device. You must enter this statement to configure a Junos Fusion when the aggregation device is running Junos OS Release 14.2R3 or 14.2R4. You are not required to enter this command when the aggregation device is running Junos OS Release 14.2R5 or later.
Options	<p><i>slot-id</i>—Specifies that a link from a specified satellite device is single-homed to the aggregation device. The <i>slot-id</i> is the satellite device member number.</p> <p><i>slot-id-range</i>—Specifies that the links from a range of specified satellite devices are single-homed to the aggregation device. The <i>slot-id-range</i> includes the satellite device member numbers.</p> <p><i>all</i>—Specifies that all links from satellite devices are single-homed to the aggregation device.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring Junos Fusion Provider Edge Configuring or Expanding a Junos Fusion Enterprise on page 45

satellite (Junos Fusion Satellite Software Upgrade Groups)

Syntax	<code>satellite [<i>slot-id</i> <i>range</i> <i>all</i>];</code>
Hierarchy Level	<code>[edit chassis satellite-management upgrade-groups <i>upgrade-group-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Specify the satellite device to add to the satellite software upgrade group.</p> <p>This statement is entered on an aggregation device in a Junos Fusion. Software upgrade groups are configured and managed using the aggregation device.</p>
Options	<p><i>slot-id</i>—Specifies the FPC slot identification number of the satellite device that is being added to the satellite software upgrade group.</p> <p><i>range</i>—Specifies a range of FPC slot identifiers to add to the satellite software upgrade group. For instance, to specify that FPC IDs 103, 104, and 105 should be automatically converted into satellite devices, enter a <i>range</i> of 103-105.</p> <p><i>all</i>—Specifies that all FPC slot identifiers in the Junos Fusion are added to the satellite software upgrade group.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Junos Fusion Provider Edge• Configuring or Expanding a Junos Fusion Enterprise on page 45

satellite-management (Junos Fusion)

```
Syntax  satellite-management {
    aging-timer aging-timer;
    auto-satellite-conversion {
        satellite [slot-id | range | all];
    }
    cluster cluster-name{
        cascade-ports interface-name;
        cluster-id cluster-id-number;
        fpc slot-id{
            alias alias;
            description description;
            member-id member-id-number;
            system-id mac-address;
        }
    }
    designated-event-forwarding
    environment-monitoring-policy policy;
    firewall
        family family-name {
            filter filter-name {
                term term-name {
                    from {
                        match-conditions;
                    }
                    then {
                        action;
                        action-modifiers;
                    }
                }
            }
        }
    }
    fpc slot-id{
        alias alias;
        cascade-ports interface-name;
        description description;
        environment-monitoring-policy policy;
        serial-number serial-number;
        system-id mac-address;
        uplink-failure-detection {
            candidate-uplink-policy policy;
        }
    }
    psu {
        redundancy {
            n-plus-n;
        }
    }
    redundancy-groups {
        chassis-id number;
        redundancy-group-name {
            redundancy-group-id redundancy-group-id-number;
        }
    }
}
```

```

peer-chassis-id peer-chassis-id-number {
  inter-chassis-link interface-name;
  no-auto-iccp-provisioning;
  no-auto-vlan-provisioning;
  satellite satellite-device-fpc-IDs;
}
}
single-home {
  satellite [slot-id | slot-id-range | all];
}
upgrade-groups upgrade-group-name {
  satellite [slot-id | range | all];
}
uplink-failure-detection {
  candidate-uplink-policy policy;
}
}

```

Hierarchy Level [edit chassis]

Release Information Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.
Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.
Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

Description Configure and manage a Junos Fusion.

If you enter the **delete chassis satellite-management** command to delete a Junos Fusion configuration, we recommend also rebooting the Routing Engines on your device to maximize device performance.



NOTE: In a Junos Fusion Data Center with EVPN wherein VXLAN encapsulation is used, firewall filters with next-interface or next-ip actions are not supported.

Options The remaining statements are explained separately.

Required Privilege Level admin—To view this statement in the configuration.
admin-control—To add this statement to the configuration.

Related Documentation

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
- [Configuring Junos Fusion Provider Edge](#)

serial-number (Junos Fusion)

Syntax	<code>serial-number <i>serial-number</i>;</code>
Hierarchy Level	[edit chassis satellite-management fpc <i>slot-id</i>]
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Bind the specified FPC slot ID to a satellite device based on the serial number.</p> <p>A Junos Fusion provides two methods of assigning an FPC identifier: Unique ID-based FPC identification and connectivity-based FPC identification. Unique ID-based FPC identification maps an FPC slot ID to a satellite device's MAC address or serial number, while connectivity-based FPC identification maps an FPC slot ID to a cascade port. This statement is used to assign an FPC ID using unique ID-based FPC identification by mapping the FPC slot ID to the satellite device's serial number.</p> <p>In a Junos Fusion, each satellite device must be mapped to an FPC identifier (FPC ID). The FPC ID is used for Junos Fusion configuration, monitoring, and maintenance. Interface names—which are identified using the <i>type-fpc / pic / port</i> format—use the FPC ID as the <i>fpc</i> variable when the satellite device is participating in a Junos Fusion. For instance, built-in port 2—a Gigabit Ethernet interface on a satellite device that is using 101 as its FPC ID—uses ge-101/0/2 as its interface name.</p> <p>For additional information on the role of FPC slot IDs in a Junos Fusion, see “Understanding Junos Fusion Enterprise Components” on page 5 or <i>Understanding Junos Fusion Provider Edge Components</i>.</p> <p>If the serial number that is configured using this statement does not match the serial number of the satellite device, the device is not converted into a satellite device.</p>
Default	No FPC slot IDs are associated with satellite devices, by default.
Options	<i>serial-number</i> —Specifies the serial number of the satellite device.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring Junos Fusion Provider Edge Configuring or Expanding a Junos Fusion Enterprise on page 45

single-home (Junos Fusion)

Syntax	<pre>single-home { satellite [<i>slot-id</i> <i>slot-id-range</i> all]; }</pre>
Hierarchy Level	[edit chassis satellite-management]
Release Information	Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Specify that the links connecting the satellite device to the aggregation device are connected to the aggregation device only.
Options	The remaining statements are explained separately.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Junos Fusion Provider Edge</i>• Configuring or Expanding a Junos Fusion Enterprise on page 45

system-id (Junos Fusion)

Syntax	<code>system-id mac-address;</code>
Hierarchy Level	<code>[edit chassis satellite-management fpc slot-id]</code>
Release Information	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Assign the specified FPC identifier to the satellite device based on the satellite device's MAC address.</p> <p>For instance, if you wanted the satellite device using MAC address 01:02:03:AA:BB:CC to be assigned FPC identifier 101, enter the set chassis satellite-management fpc 101 system-id 01:02:03:AA:BB:CC statement.</p> <p>A Junos Fusion provides two methods of assigning an FPC identifier: Unique ID-based FPC identification and connectivity-based FPC identification. Unique ID-based FPC identification maps an FPC slot ID to a satellite device's MAC address or serial number, while connectivity-based FPC identification maps an FPC slot ID to a cascade port. This statement is used to assign an FPC ID using unique ID-based FPC identification by mapping the FPC slot ID to the satellite device's MAC address.</p> <p>In a Junos Fusion, each satellite device must be mapped to an FPC identifier (FPC ID). The FPC ID is used for Junos Fusion configuration, monitoring, and maintenance. Interface names—which are identified using the <i>type-fpc / pic / port</i> format—use the FPC ID as the <i>fpc</i> variable when the satellite device is participating in a Junos Fusion. For instance, built-in port 2—a gigabit Ethernet interface on a satellite device that is using 101 as its FPC ID—uses ge-101/0/2 as its interface name.</p> <p>For additional information on the role of FPC slot IDs in a Junos Fusion, see <i>Understanding Junos Fusion Provider Edge Components</i> or “Understanding Junos Fusion Enterprise Components” on page 5.</p> <p>If the serial number that is configured using this statement does not match the serial number of the satellite device, the device is not converted into a satellite device.</p> <p>If the MAC address that is configured using this statement does not match the MAC address of the satellite device, the device is not converted into a satellite device.</p>
Default	No FPC slot IDs are associated with satellite devices, by default.
Options	mac-address —Specifies the MAC address of the satellite device.

Required Privilege Level admin—To view this statement in the configuration.
admin-control—To add this statement to the configuration.

Related Documentation

- [Configuring Junos Fusion Provider Edge](#)
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

system-id (Junos Fusion Satellite Device Cluster)

Syntax `system-id mac-address;`

Hierarchy Level [edit chassis [satellite-management](#) cluster *cluster-name* fpc *slot-id*]

Release Information Statement introduced in Junos OS Release 16.1R1.

Description Assign the specified FPC identifier to the satellite device in the satellite device cluster based on the satellite device's MAC address.

For instance, if you wanted the satellite device using MAC address **01:02:03:AA:BB:CC** in the satellite device cluster named **building-1** to be assigned FPC identifier 101, enter the **set chassis satellite-management cluster building-1 fpc 101 system-id 01:02:03:AA:BB:CC** statement.

If the MAC address that is configured using this statement does not match the MAC address of the satellite device, the device is not converted into a satellite device.

Default No FPC slot ID numbers are associated with satellite devices, by default.

Options *mac-address*—Specifies the MAC address of the satellite device.

Required Privilege Level admin—To view this statement in the configuration.
admin-control—To add this statement to the configuration.

Related Documentation

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

upgrade-groups (Junos Fusion)

Syntax	<pre> upgrade-groups <i>upgrade-group-name</i> { <i>satellite</i> [<i>slot-id</i> <i>range</i> all]; }</pre>
Hierarchy Level	[edit chassis <i>satellite-management</i>]
Release Information	<p>Statement introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Statement introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Create and name a satellite software upgrade group for a Junos Fusion, or specify an existing satellite software upgrade group to configure.</p> <p>A satellite software upgrade group is a group of satellite devices that are designated to upgrade to the same satellite software version using the same satellite software package. One Junos Fusion can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusions to avoid network downtimes during satellite software installations.</p> <p>The two most common methods of installing satellite software in a Junos Fusion—autoconverting a device into a satellite device when it is cabled into an aggregation device and manually converting a device that is cabled into an aggregation device into a satellite device—require a configured satellite software upgrade group.</p> <p>Software upgrade groups are configured and managed from the aggregation device.</p> <p>To associate a satellite software package with a satellite software upgrade group, use the request system software add <i>package-name</i> upgrade-group <i>upgrade-group-name</i> command.</p> <p>This statement is entered on an aggregation device in a Junos Fusion. Software upgrade groups are configured and managed from the aggregation device.</p> <p>The software upgrade group configurations must match exactly—including the same <i>package-name</i> and <i>upgrade-group-name</i>—in every Junos Fusion with dual aggregation devices to avoid satellite device downtime.</p> <p>All satellite devices in a satellite device cluster are associated with a single satellite software upgrade group, which is automatically created when a satellite device cluster becomes part of a Junos Fusion. The satellite software upgrade group is named after the satellite device cluster name, and ensures that all satellite devices in the cluster run the same version of satellite software. See “Understanding Software in a Junos Fusion Enterprise” on page 22 for additional information on software management for a satellite device cluster.</p>
Default	No satellite software upgrade groups are present, by default.

A satellite software upgrade group with the name of the satellite device cluster is created automatically when a satellite device cluster is created.

Options *upgrade-group-name*—Specifies the user-defined name for the satellite software upgrade group.

The remaining statements are explained separately.

Required Privilege Level admin—To view this statement in the configuration.
 admin-control—To add this statement to the configuration.

Related Documentation • [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
 • *Configuring Junos Fusion Provider Edge*

CHAPTER 4

Junos Fusion Enterprise Administration

- [Managing Satellite Software Upgrade Groups in a Junos Fusion on page 123](#)
- [Upgrading Junos OS and Satellite Software in an Operational Junos Fusion Enterprise with Dual Aggregation Devices on page 127](#)
- [Verifying Connectivity, Device States, Satellite Software Versions, and Operations in a Junos Fusion on page 129](#)
- [Converting a Satellite Device in a Junos Fusion to a Standalone Device on page 140](#)
- [Installing Junos OS Software on a Standalone Device Running Satellite Software on page 144](#)

Managing Satellite Software Upgrade Groups in a Junos Fusion

This topic discusses maintaining satellite software upgrade groups in a Junos Fusion. For more information on the process for creating a satellite software upgrade group, see *Configuring Junos Fusion Provider Edge* or [“Configuring or Expanding a Junos Fusion Enterprise” on page 45](#).

A satellite software upgrade group is a group of satellite devices that are designated to upgrade to the same satellite software version using the same satellite software package. One Junos Fusion can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusions to avoid network downtimes during satellite software installations.

When a satellite device is added to a Junos Fusion, the aggregation device checks if the satellite device is using an FPC ID that is included in a satellite software upgrade group. If the satellite device is using an FPC ID that is part of a satellite software upgrade group, the device upgrades its satellite software to the version of software associated with the satellite software upgrade group - unless it is already running the defined version.

When the satellite software package associated with an existing satellite software group is changed, the satellite software for all member satellite devices is upgraded using a throttled upgrade. The throttled upgrade ensures that the aggregation device is not overwhelmed with providing satellite software simultaneously to many satellite devices.

The two most common methods of installing satellite software—autoconverting a device into a satellite device when it is cabled into an aggregation device and manually converting a device that is cabled into an aggregation device into a satellite device—require a configured satellite software upgrade group.

Software upgrade groups are configured and managed from the aggregation device. All satellite devices in a satellite device cluster are part of the same software upgrade group, and a software upgrade group with the name of the satellite device cluster is automatically created when the satellite device cluster is created.

- [Creating a Satellite Software Upgrade Group on page 124](#)
- [Adding Satellite Devices to a Satellite Software Upgrade Group on page 124](#)
- [Removing a Satellite Device from a Satellite Software Upgrade Group on page 125](#)
- [Modifying the Satellite Software Used by a Satellite Software Upgrade Group on page 125](#)
- [Deleting Associated Satellite Software from a Satellite Software Upgrade Group on page 126](#)
- [Deleting Satellite Software on the Aggregation Device on page 127](#)

Creating a Satellite Software Upgrade Group

If your satellite device is a member of a satellite device cluster, a satellite software upgrade group with the name of the satellite device cluster is automatically created when the satellite device cluster is created. This satellite software upgrade group must be used to manage the satellite software for all member satellite devices in the satellite device cluster.

For information on creating a satellite software upgrade group for a satellite device that is not part of a satellite device cluster, see *Configuring Junos Fusion Provider Edge* or “Configuring or Expanding a Junos Fusion Enterprise” on page 45.

Adding Satellite Devices to a Satellite Software Upgrade Group

To add a satellite device to an existing satellite software upgrade group, enter the **set chassis satellite-management upgrade-groups *upgrade-group-name* satellite *slot-id-or-range*** command:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups
upgrade-group-name satellite slot-id-or-range
```

where *upgrade-group-name* is the name of the existing satellite software upgrade group, and the *slot-id-or-range* is the FPC slot ID or range of FPC slot IDs of the satellite devices that are being added to the upgrade group.

For example, to add FPC slot IDs 121, 122, and 123 to a satellite software upgrade group named **group1**:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups group1 satellite
121-123
```

Additionally, you can use the **all** statement as your *slot-id-or-range* to include all satellite devices in the Junos Fusion in the satellite software upgrade group.

For example, to add all satellite devices in the Junos Fusion to a satellite software upgrade group named **group1**:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups group1 satellite
all
```

Removing a Satellite Device from a Satellite Software Upgrade Group

To remove a satellite device from an existing satellite software upgrade group, enter the **delete chassis satellite-management upgrade-groups *upgrade-group-name* satellite *slot-id-or-range*** statement to delete the statements that initially added the member satellite devices to the satellite software upgrade group.

```
[edit]
user@aggregation-device# delete chassis satellite-management upgrade-groups
upgrade-group-name satellite slot-id-or-range
```

where *upgrade-group-name* is the name of the existing satellite software upgrade group, and the *slot-id-or-range* is the FPC slot ID or range of FPC slot IDs of the satellite devices that are being added to the upgrade group.

In cases where you want to remove some FPC slot IDs that were configured within a range of FPC slot IDs, you might consider re-creating the satellite software group by first deleting it, then re-creating it. To delete the satellite software upgrade group:

```
[edit]
user@aggregation-device# delete chassis satellite-management upgrade-groups
upgrade-group-name
```

You can then re-create the satellite software upgrade group and add satellite devices using the **set chassis satellite-management upgrade-groups *upgrade-group-name* satellite *slot-id-or-range*** statement:

```
[edit]
user@aggregation-device# set chassis satellite-management upgrade-groups
upgrade-group-name satellite slot-id-or-range
```

For more information on the satellite software upgrade group creation process, see *Configuring Junos Fusion Provider Edge* or [“Configuring or Expanding a Junos Fusion Enterprise” on page 45](#).

Modifying the Satellite Software Used by a Satellite Software Upgrade Group

To associate a new satellite software image with the software upgrade group:

Before you begin:

- Ensure that a satellite software package is downloaded to the location where you will use it to install the satellite software.

```
user@aggregation-device> request system software add package-name upgrade-group
upgrade-group-name
```



NOTE: A satellite software *upgrade-group-name* can be a user-configured upgrade group or the name of a satellite device cluster.

To associate a satellite software image named **satellite-2.0R1.2-signed.tgz** that is currently stored in the **/var/tmp/** directory from the aggregation device to the upgrade group named **group1**:

```
user@aggregation-device> request system software add /var/tmp/satellite-2.0R1.2-signed.tgz
upgrade-group group1
```

To associate a satellite software package that was previously installed on the aggregation device with a software upgrade group:

```
user@aggregation-device> request system software add version version upgrade-group group1
```

For instance:

```
user@aggregation-device> request system software add version 2.0R1.2 upgrade-group group1
```

The satellite software upgrade group is associated with the software package after either of these commands are entered.



NOTE: A satellite software upgrade group can be a user-configured upgrade group or the name of a satellite device cluster.

If the group was already associated with a satellite software upgrade group, the previous satellite software package associated with the software group remains the second option for updating satellite software for the satellite software upgrade group. You can disassociate any satellite software package from a satellite software upgrade group using the instructions in the next section.

Deleting Associated Satellite Software from a Satellite Software Upgrade Group

This section describes how to delete a satellite software package association from a satellite software upgrade group.

This procedure is always optional. You can always update the satellite software associated with a satellite software upgrade group using the procedure in the previous section, without deleting the satellite software from the satellite software upgrade group.

When a new satellite software package is associated with a satellite software upgrade, the previous satellite software package remains associated with the upgrade group as a backup option. The satellite software upgrade group can be associated with up to two satellite software packages, so no other satellite software packages can be associated with the satellite software upgrade group.

This process disassociates the specified satellite software package from the list of potential packages used by a satellite software upgrade group. It is useful for maintenance

purposes only, like if you wanted to ensure a satellite software upgrade group was never associated with a specific satellite software package.

To disassociate a satellite software image from a satellite software upgrade group:

```
user@aggregation-device> request system software delete upgrade-group upgrade-group-name
```

where the *upgrade-group-name* is the name of the upgrade group that was assigned by the user.

For example, to delete the current satellite software image association to the upgrade group named **group1**:

```
user@aggregation-device> request system software delete upgrade-group group1
```

Deleting Satellite Software on the Aggregation Device

This section describes how to remove a satellite software package from a Junos Fusion system. This will remove the software from the aggregation device as well as any association with any satellite software upgrade groups. This should be done when another satellite software version is available and will free up the space occupied by the software being removed.



NOTE: We recommend deleting satellite software that is not in use to free up space on a QFX10000 acting as an aggregation device.

```
user@aggregation-device> request system software delete version version
```

For example:

```
user@aggregation-device> request system software delete version 2.0R1.2
```

Related Documentation

- [Configuring Junos Fusion Provider Edge](#)
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

Upgrading Junos OS and Satellite Software in an Operational Junos Fusion Enterprise with Dual Aggregation Devices

You may have to upgrade Junos OS on the aggregation devices in your Junos Fusion Enterprise after initial setup.

To ensure consistent behavior and feature support in your Junos Fusion Enterprise, we strongly recommend that both aggregation devices—and both Routing Engines in the aggregation devices—run the same version of Junos OS.

Satellite software should also be upgraded after the Junos OS upgrade to ensure it is compatible with the upgraded Junos OS.

We recommend following this procedure to upgrade Junos OS in a Junos Fusion Enterprise using a dual aggregation device topology:

1. Upgrade the Junos OS software on the backup Routing Engine of one of the aggregation devices. Do not reboot the backup Routing Engine to complete the upgrade at this point of the procedure.

See [Junos Fusion Hardware and Software Compatibility Matrices](#) for software compatibility information and to retrieve Junos OS images for EX9200 switches that can act as aggregation devices in a Junos Fusion Enterprise.

This step is performed in this example by showing an upgrade to 17.2R1 with a Junos OS image that is installed in the local /var/tmp folder. See [Understanding Software Installation on EX Series Switches](#) for information on other procedures that can be used to upgrade Junos OS running on a Routing Engine on an EX9200 switch.

```
user@ad2-ex9208> request system software add
/var/tmp/junos-install-ex92xx-x86-64-17.1R2.7.tgz re1
```

2. Upgrade the Junos OS software on the master Routing Engine of the same aggregation device. Do not reboot the master Routing Engine to complete the upgrade at this point of the procedure.

```
user@ad2-ex9208> request system software add
/var/tmp/junos-install-ex92xx-x86-64-17.1R2.7.tgz re0
```

3. After steps 1 and 2 are completed successfully, reboot both Routing Engines simultaneously:

```
user@ad2-ex9208> request system reboot both-routing-engines
```

4. Repeat the same procedure on the other aggregation device:

```
user@ad1-ex9208> request system software add
/var/tmp/junos-install-ex92xx-x86-64-17.1R2.7.tgz re1
```

```
user@ad1-ex9208> request system software add
/var/tmp/junos-install-ex92xx-x86-64-17.1R2.7.tgz re0
```

```
user@ad1-ex9208> request system reboot both-routing-engines
```

5. After all Routing Engines on both aggregation devices have rebooted to complete the Junos OS upgrade, upgrade the satellite software on all satellite devices to the satellite software version that is compatible with the Junos OS running on the aggregation devices.

To identify the version of satellite software that works with the new version of Junos OS, see [Junos Fusion Hardware and Software Compatibility Matrices](#).

To install the new version of satellite software, see [Installing Satellite Software and Adding Satellite Devices to the Junos Fusion](#) and [Modifying the Satellite Software Used by a Satellite Software Upgrade Group](#).

- Related Documentation**
- [Junos Fusion Hardware and Software Compatibility Matrices](#)
 - [Installing Satellite Software and Adding Satellite Devices to the Junos Fusion](#)

Verifying Connectivity, Device States, Satellite Software Versions, and Operations in a Junos Fusion

This topic provides information on common procedures to verify connectivity, device states, satellite software versions, and other operations in a Junos Fusion. It covers:

- [Verifying a Junos Fusion Configuration on page 129](#)
- [Verifying Basic Junos Fusion Connectivity on page 130](#)
- [Verifying the Satellite Device Hardware Model on page 131](#)
- [Verifying Cascade Port and Uplink Port State on page 132](#)
- [Verifying That a Cascade Port Recognizes a Satellite Device on page 134](#)
- [Verifying Extended Port Operation on page 136](#)
- [Verifying the Satellite Software Version on page 138](#)
- [Verifying the Devices and Software Used in a Satellite Software Upgrade Group on page 139](#)

Verifying a Junos Fusion Configuration

Purpose Verify that a device is recognized as a satellite device by the aggregation device.

Action Enter the **show chassis satellite** command and review the output.



NOTE: On a Junos Fusion Data Center with a QFX10000 switch in the aggregation device role, the number of the FPC in the interface name of the cascade ports is always 0.

```
user@aggregation-device> show chassis satellite
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
qfx5100-24q-01	100	Online	xe-0/0/1 xe-1/3/0	online online	9/2
qfx5100-24q-02	101	Online	xe-0/0/2 xe-1/3/1	online online	20/10
qfx5100-24q-03	102	Online	xe-0/0/3 xe-1/3/2	online online	16/4
qfx5100-24q-04	103	Online	xe-0/0/4 xe-1/3/3	absent online	13/3

ex4300-01	109	Online	xe-1/0/1	online	49/2
ex4300-02	110	Online	xe-1/0/2	online	49/2

Meaning Use the output of **show chassis satellite** to confirm the following connections in a Junos Fusion:

- Whether a satellite device is recognized at all by the aggregation device. If the satellite device does not appear in the **show chassis satellite** output, then it is not recognized by the aggregation device as a satellite device.
- The state of a particular satellite device, via the **Device State** output.
- The state of the cascade port connection, via the **Cascade State** output.

Verifying Basic Junos Fusion Connectivity

Purpose Verify that all satellite devices are recognized by the aggregation device, and that all cascade and extended ports are recognized.

Action Enter the **show chassis satellite** command on the aggregation device.



NOTE: On a Junos Fusion Data Center with a QFX10000 switch in the aggregation device role, the number of the FPC in the interface name of the cascade ports is always 0.

```
user@aggregation-device> show chassis satellite
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
qfx5100-24q-01	100	Online	xe-0/0/1 xe-1/3/0	online online	9/2
qfx5100-24q-02	101	Online	xe-0/0/2 xe-1/3/1	online online	20/12
qfx5100-24q-03	102	Online	xe-0/0/3 xe-1/3/2	online online	16/6
qfx5100-24q-04	103	Online	xe-0/0/4 xe-1/3/3	online online	16/4
qfx5100-24q-05	104	Online	xe-0/0/5 xe-1/3/4	online online	13/3
qfx5100-24q-06	105	Online	xe-0/0/6 xe-1/3/5	online online	24/15
qfx5100-24q-07	106	Online	xe-0/0/7 xe-1/3/6	online online	24/15
qfx5100-24q-08	107	Online	xe-0/0/8 xe-1/3/7	online online	21/12
ex4300-01	109	Online	xe-1/0/1	online	49/2
ex4300-02	110	Online	xe-1/0/2	online	49/2
ex4300-03	111	Online	xe-1/0/3	online	49/2
ex4300-04	112	Online	xe-1/0/4	online	49/11
ex4300-05	113	Online	xe-1/0/5	online	49/11

ex4300-06	114	Online	xe-1/0/6	online	49/11
ex4300-07	115	Online	xe-1/0/7	online	49/11
ex4300-08	116	Online	xe-1/1/0	online	49/11
ex4300-09	117	Online	xe-1/1/1	online	49/11
ex4300-10	118	Online	xe-1/1/2	online	49/11
ex4300-11	119	Online	xe-1/1/3	online	49/11
ex4300-12	120	Online	xe-1/1/4	online	49/11
ex4300-13	121	Online	xe-1/1/5	online	49/11
ex4300-14	122	Online	xe-1/1/6	online	49/11
ex4300-15	123	Online	xe-1/1/7	online	49/11
ex4300-16	124	Online	xe-1/2/1	online	49/11
ex4300-17	125	Online	xe-1/2/2	online	49/11
ex4300-18	126	Online	xe-1/2/3	online	49/2
ex4300-19	127	Online	xe-1/2/4	online	49/1
ex4300-20	128	Online	xe-1/2/5	online	49/1
ex4300-21	129	Online	xe-1/2/6	online	49/1
ex4300-22	130	Online	xe-1/2/7	online	49/1

Meaning The output confirms:

- Each listed satellite device—the satellite devices are listed by alias-name in the **Alias** column or by FPC slot ID in the **Slot** column—is recognized by the aggregation device, because the **Device State** output is **Online** for every listed satellite device.
- Each cascade port is operational, because **Port State** is **online** for every cascade port. The cascade port is the port on the aggregation device that connects to the satellite device.
- The number of available and active extended ports for each satellite device, using the **Extended Ports total** and **Extended Ports up** outputs. The number of extended ports varies by satellite devices, and in this output the total number of extended ports includes both network-facing extended ports as well as uplink ports.

Verifying the Satellite Device Hardware Model

Purpose Verify the hardware model of each satellite device in the Junos Fusion.

Action Enter the **show chassis satellite terse** command on the aggregation device.

```
user@aggregation-device> show chassis satellite terse
```

Slot	Device State	Model	Extended Ports Total/Up	Version
101	Online	QFX5100-48S-6Q	7/6	3.0R1.0
102	Online	QFX5100-48S-6Q	7/6	3.0R1.0
103	Online	QFX5100-48S-6Q	6/4	3.0R1.0
104	Online	QFX5100-48S-6Q	14/14	3.0R1.0
105	Online	QFX5100-48S-6Q	18/18	3.0R1.0
106	Online	QFX5100-48S-6Q	17/16	3.0R1.0
107	Online	EX4300-48T	52/6	3.0R1.0
108	Online	EX4300-48T	52/13	3.0R1.0
109	Online	EX4300-48T	51/13	3.0R1.0
110	Online	EX4300-48T	51/14	3.0R1.0
111	Online	EX4300-48T	51/13	3.0R1.0

112	Online	EX4300-48T	51/12	3.0R1.0
113	Online	EX4300-48T	51/13	3.0R1.0
114	Online	QFX5100-24Q-2P	17/13	3.0R1.0

Meaning The output shows the device model of each satellite device in the **Device Model** output, which are listed by FPC slot identification number using the **Slot** output.

This command is also useful for verifying the version satellite software running on each satellite device, as the version is listed in the **Version** output.

Verifying Cascade Port and Uplink Port State

Purpose Verify that the cascade port and uplink port interfaces are up.

Action Enter the **show chassis satellite interface** command:

```
user@aggregation-device> show chassis satellite interface
```

Interface	State	Type
lo0	Up	Loopback
sd-101/0/0	Up	Satellite
sd-102/0/0	Up	Satellite
sd-103/0/0	Up	Satellite
sd-104/0/0	Up	Satellite
sd-105/0/0	Up	Satellite
sd-106/0/0	Up	Satellite
sd-107/0/0	Up	Satellite
sd-108/0/0	Up	Satellite
sd-109/0/0	Up	Satellite
sd-110/0/0	Up	Satellite
sd-111/0/0	Up	Satellite
sd-112/0/0	Up	Satellite
sd-113/0/0	Up	Satellite
sd-114/0/0	Up	Satellite
xe-0/0/1	Up	Cascade
xe-0/0/2	Up	Cascade

xe-0/0/3	Up	Cascade
xe-0/0/4	Up	Cascade
xe-0/0/5	Up	Cascade
xe-0/0/6	Up	Cascade
xe-0/0/7	Up	Cascade
xe-0/0/8	Up	Cascade
xe-0/0/9	Up	Cascade
xe-0/2/0	Up	Cascade
xe-0/2/1	Up	Cascade
xe-0/2/2	Up	Cascade
xe-0/2/3	Up	Cascade
xe-0/2/4	Up	Cascade
xe-0/2/5	Up	Cascade
xe-0/2/6	Up	Cascade
xe-0/2/7	Up	Cascade
xe-1/0/1	Up	Cascade
xe-1/0/2	Up	Cascade
xe-1/0/3	Up	Cascade
xe-1/2/1	Up	Cascade
xe-1/2/2	Up	Cascade
xe-1/2/3	Up	Cascade
xe-2/0/0	Up	Cascade
xe-2/0/1	Up	Cascade
xe-2/0/2	Up	Cascade
xe-2/0/3	Up	Cascade
xe-2/0/4	Up	Cascade
xe-2/0/5	Up	Cascade
xe-2/0/6	Up	Cascade
xe-2/0/7	Up	Cascade
xe-2/1/0	Up	Cascade

xe-2/1/1	Up	Cascade
xe-2/1/2	Up	Cascade
xe-2/1/3	Up	Cascade
xe-2/1/4	Up	Cascade
xe-2/1/5	Up	Cascade
xe-2/1/6	Up	Cascade
xe-2/1/7	Up	Cascade
xe-2/2/0	Up	Cascade
xe-2/2/1	Up	Cascade
xe-2/2/2	Up	Cascade
xe-2/2/3	Up	Cascade
xe-2/2/4	Up	Cascade
xe-2/2/5	Up	Cascade
xe-2/2/6	Up	Cascade
xe-2/2/7	Up	Cascade
xe-2/3/0	Up	Cascade
xe-2/3/3	Dn	Cascade
xe-2/3/4	Up	Cascade
xe-2/3/5	Up	Cascade
xe-2/3/6	Up	Cascade
xe-2/3/7	Up	Cascade

Meaning The output shows:

- Whether the recognized port is up or down, using the **State** column output. The **State** column output is **Up** when the interface is up and **Dn** when the interface is down.

Verifying That a Cascade Port Recognizes a Satellite Device

Purpose Verify that a cascade port on an aggregation device recognizes a satellite device in the Junos Fusion. This procedure also provides a method of verifying the hardware and software information for each satellite device in the Junos Fusion.

Action Enter the `show chassis satellite neighbor` command:

```
user@aggregation-device> show chassis satellite neighbor
```

Interface	State	Port Info	System Name	Model	SW Version
xe-2/3/7	Init				
xe-2/3/6	Init				
xe-2/3/5	Init				
xe-2/3/4	Init				
xe-2/3/3	Dn				
xe-2/3/0	Two-Way	xe-0/2/2	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/7	Two-Way	xe-0/2/2	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/6	Two-Way	xe-0/2/2	ex4300-27	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/5	Two-Way	xe-0/2/2	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/4	Init				
xe-2/2/3	Init				
xe-2/2/2	Two-Way	xe-0/0/48:3	qfx5100-48s-06	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/2/1	Two-Way	xe-0/0/48:3	qfx5100-48s-05	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/2/0	Init				
xe-2/1/7	Init				
xe-2/1/6	Init				
xe-2/1/5	Two-Way	xe-0/0/4:2	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18
27_dc-builder					
xe-2/1/4	Two-Way	xe-0/2/1	ex4300-31	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/3	Two-Way	xe-0/2/1	ex4300-30	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/2	Two-Way	xe-0/2/1	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/1	Two-Way	xe-0/2/1	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/0	Init				
xe-2/0/7	Two-Way	xe-0/2/1	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/0/6	Init				
xe-2/0/5	Init				
xe-2/0/4	Init				
xe-2/0/3	Init				
xe-2/0/2	Two-Way	xe-0/0/48:2	qfx5100-48s-04	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/0/1	Two-Way	xe-0/0/48:2	qfx5100-48s-03	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/0/0	Init				
xe-1/2/3	Two-Way	xe-0/0/0:0	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18
27_dc-builder					
xe-1/2/2	Two-Way	xe-0/2/0	ex4300-31	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/2/1	Two-Way	xe-0/2/0	ex4300-30	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/0/3	Two-Way	xe-0/2/0	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/0/2	Two-Way	xe-0/2/0	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/0/1	Two-Way	xe-0/2/0	ex4300-27	EX4300-48T	0.1I20150224_182
7_dc-builder					

```

xe-0/2/7    Two-Way    xe-0/0/0:1  qfx5100-24q-09  QFX5100-24Q-2P  0.1I20150224_18
27_dc-builder
xe-0/2/6    Init
xe-0/2/5    Init
xe-0/2/4    Two-Way    xe-0/0/48:1  qfx5100-48s-05  QFX5100-48S-6Q  0.1I20150224_18
27_dc-builder
xe-0/2/3    Two-Way    xe-0/0/48:1  qfx5100-48s-04  QFX5100-48S-6Q  0.1I20150224_18
27_dc-builder
xe-0/2/2    Two-Way    xe-0/0/48:1  qfx5100-48s-03  QFX5100-48S-6Q  0.1I20150224_18
27_dc-builder
xe-0/2/1    Init
xe-0/2/0    Init
xe-0/0/9    Two-Way    xe-0/2/0      ex4300-26  EX4300-48T      0.1I20150224_182
7_dc-builder
xe-0/0/8    Two-Way    xe-0/2/0      ex4300-25  EX4300-48T      0.1I20150224_182
7_dc-builder
xe-0/0/7    Two-Way    xe-0/0/48:0  qfx5100-48s-07  QFX5100-48S-6Q  0.1I20150224_18
27_dc-builder
xe-0/0/6    Two-Way    xe-0/0/48:0  qfx5100-48s-06  QFX5100-48S-6Q  0.1I20150224_18
27_dc-builder
xe-0/0/5    Two-Way    xe-0/0/48:0  qfx5100-48s-05  QFX5100-48S-6Q  0.1I20150224_18
27_dc-builder
xe-0/0/4    Two-Way    xe-0/0/48:0  qfx5100-48s-04  QFX5100-48S-6Q  0.1I20150224_18
27_dc-builder
xe-0/0/3    Two-Way    xe-0/0/48:0  qfx5100-48s-03  QFX5100-48S-6Q  0.1I20150224_18
27_dc-builder
xe-0/0/2    Two-Way    xe-0/0/48:0  qfx5100-48s-02  QFX5100-48S-6Q  0.1I20150224_18
27_dc-builder
xe-0/0/1    Init

```

Meaning The output confirms:

- The cascade ports on the aggregation device that are recognized by the Junos Fusion. All recognized cascade port interfaces are listed in the **Interface** output.
- The uplink ports on the satellite devices that are connected to the cascade ports. The cascade port on each satellite device is identified in the **Port Info** column, and the satellite device itself is identified in the **System Name** output.
- Whether the cascade port to uplink port connection has initialized, using the **State** output. The **State** output is **Two-Way** when the satellite device is properly initialized, and traffic can be passed between the aggregation device and the satellite device over the link.
- The hardware model of each satellite device in the **Model** column, and the satellite software running on each satellite device in the **SW Version** output.

Verifying Extended Port Operation

Purpose Verify that a specific extended port is recognized by the aggregation device, and is operational.

Action Enter the `show chassis satellite extended-port` command on the aggregation device:

```
user@aggregation-device> show chassis satellite extended-port
```

Legend for interface types:

* -- Uplink interface

Name	State	Rx Request	Rx State	Tx Request	Tx State	Admin/Op State	IFD Idx	PCID
et-100/0/2	AddComplete	None		Ready		Up/Dn	838	110
et-104/0/2	AddComplete	None		Ready		Up/Dn	813	110
et-107/0/23	AddComplete	None		Ready		Up/Up	544	194
ge-109/0/0	AddComplete	None		Ready		Up/Up	402	115
ge-109/0/1	AddComplete	None		Ready		Up/Dn	403	114
ge-109/0/10	AddComplete	None		Ready		Up/Dn	412	113
ge-109/0/11	AddComplete	None		Ready		Up/Dn	413	112
ge-109/0/12	AddComplete	None		Ready		Up/Dn	414	123
ge-109/0/13	AddComplete	None		Ready		Up/Dn	415	122
ge-109/0/14	AddComplete	None		Ready		Up/Dn	416	125
ge-109/0/15	AddComplete	None		Ready		Up/Dn	417	124
ge-109/0/16	AddComplete	None		Ready		Up/Dn	418	131
ge-109/0/17	AddComplete	None		Ready		Up/Dn	419	130
ge-109/0/18	AddComplete	None		Ready		Up/Dn	420	133
ge-109/0/19	AddComplete	None		Ready		Up/Dn	421	132
ge-109/0/2	AddComplete	None		Ready		Up/Dn	404	117
ge-109/0/20	AddComplete	None		Ready		Up/Dn	422	127
ge-109/0/21	AddComplete	None		Ready		Up/Dn	423	126
ge-109/0/22	AddComplete	None		Ready		Up/Dn	424	129
ge-109/0/23	AddComplete	None		Ready		Up/Dn	425	128
ge-109/0/24	AddComplete	None		Ready		Up/Dn	426	103
ge-109/0/25	AddComplete	None		Ready		Up/Dn	427	102
ge-109/0/26	AddComplete	None		Ready		Up/Dn	428	105
ge-109/0/27	AddComplete	None		Ready		Up/Dn	429	104
ge-109/0/28	AddComplete	None		Ready		Up/Dn	430	107
ge-109/0/29	AddComplete	None		Ready		Up/Dn	431	106
ge-109/0/3	AddComplete	None		Ready		Up/Dn	405	116
ge-109/0/30	AddComplete	None		Ready		Up/Dn	432	109
ge-109/0/31	AddComplete	None		Ready		Up/Dn	433	108
ge-109/0/32	AddComplete	None		Ready		Up/Dn	434	135
ge-109/0/33	AddComplete	None		Ready		Up/Dn	435	134
ge-109/0/34	AddComplete	None		Ready		Up/Dn	436	137
ge-109/0/35	AddComplete	None		Ready		Up/Dn	437	136
ge-109/0/36	AddComplete	None		Ready		Up/Dn	438	144
ge-109/0/37	AddComplete	None		Ready		Up/Dn	439	143
ge-109/0/38	AddComplete	None		Ready		Up/Dn	440	146
ge-109/0/39	AddComplete	None		Ready		Up/Dn	441	145
ge-109/0/4	AddComplete	None		Ready		Up/Dn	406	119
ge-109/0/40	AddComplete	None		Ready		Up/Dn	442	140
ge-109/0/41	AddComplete	None		Ready		Up/Dn	443	139
ge-109/0/42	AddComplete	None		Ready		Up/Dn	444	142
ge-109/0/43	AddComplete	None		Ready		Up/Dn	445	141
ge-109/0/44	AddComplete	None		Ready		Up/Dn	446	148
ge-109/0/45	AddComplete	None		Ready		Up/Dn	447	147
ge-109/0/46	AddComplete	None		Ready		Up/Dn	448	150
ge-109/0/47	AddComplete	None		Ready		Up/Dn	449	149
ge-109/0/5	AddComplete	None		Ready		Up/Dn	407	118
ge-109/0/6	AddComplete	None		Ready		Up/Dn	408	121
ge-109/0/7	AddComplete	None		Ready		Up/Dn	409	120
ge-109/0/8	AddComplete	None		Ready		Up/Dn	410	111
ge-109/0/9	AddComplete	None		Ready		Up/Dn	411	110
ge-110/0/0	AddComplete	None		Ready		Up/Up	728	115
ge-110/0/1	AddComplete	None		Ready		Up/Dn	729	114

Meaning The output confirms:

- That an extended port is recognized by the aggregation device. All extended ports are listed in the **Name** column of the output.
- That the listed extended ports have been added to the Junos Fusion, as shown by the **AddComplete** output in the **State** column.
- The administrative and operational state of each extended port. An extended port is operating correctly when the **Admin State** and **Op State** outputs are both in the **Up** state.

Verifying the Satellite Software Version

Purpose Verify the satellite software versions available on the aggregation device in a Junos Fusion.

Action Enter the **show chassis satellite software** command on the aggregation device.

```
user@aggregation-device> show chassis satellite software
```

Version	Platforms	Group
3.0R1.1	i386 ppc	group1
		group2
		group3
		group4
		group5
3.0R1.0	i386 ppc	

For more detailed output, you can also enter the **show chassis satellite software detail** on the aggregation device.

```
Software package version: 3.0R1.6
Platforms supported by package: i386 ppc arm arm563xx
Platform      Host Version  Models Supported
i386          3.0.3        QFX5100-24Q-2P
               QFX5100-48C-6Q
               QFX5100-48S-6Q
               QFX5100-48T-6Q
               QFX5100-96S-8Q
               QFX5100-48SH-6Q
               QFX5100-48TH-6Q
ppc           1.1.2        EX4300-24P
               EX4300-24T
               EX4300-48P
               EX4300-48T
               EX4300-48T-BF
               EX4300-48T-DC
               EX4300-48T-DC-BF
arm           1.0.0        EX2300-24P
               EX2300-24T-DC
               EX2300-C-12T
               EX4300-C-12P
arm563xx      1.0.0        EX3400-24P
```

```

Current Groups: group1
                  group2
                  group3
                  group4
                  group5
                  EX3400-24T
                  EX3400-48T
                  EX3400-48P

```

Meaning The version of satellite software installed is displayed in the **Version** or **Software package version** column, and the satellite software upgrade group associated with each version of satellite software is listed in the **Group** or **Current Groups** output.

Verifying the Devices and Software Used in a Satellite Software Upgrade Group

Purpose Verify the satellite software upgrade groups in the Junos Fusion, and which satellite devices are part of which satellite software upgrade groups.

A satellite software upgrade group can be a user configured group or the name of a satellite device cluster.

Action Enter the **show chassis satellite upgrade-group** command on the aggregation device.

show chassis satellite upgrade-group

```
user@aggregation-device> show chassis satellite upgrade-group
```

Group	Sw-Version	Group State	Slot	Device State
__ungrouped__ group1	3.0R1.1	in-sync	107	version-in-sync
			108	version-in-sync
			109	version-in-sync
			110	version-in-sync
			111	version-in-sync
			112	version-in-sync
group2	3.0R1.1	in-sync	113	version-in-sync
			102	version-in-sync
			103	version-in-sync
			104	version-in-sync
			105	version-in-sync
			106	version-in-sync
			114	version-in-sync

Meaning The output shows that two satellite software upgrade groups—**ex4300** and **qfx**—have been created, and that both are using satellite software version 1.0R1.1. The **Group Slot** output shows which satellite devices—listed by FPC slot ID number—are in which software group, and the **Device State** output showing **version-in-sync** confirms that the satellite devices are running the satellite software that is associated with the satellite software upgrade group.

Related Documentation

- [Configuring Junos Fusion Provider Edge](#)
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

Converting a Satellite Device in a Junos Fusion to a Standalone Device

In the event that you need to convert a satellite device to a standalone device, you will need to download and install a new Junos OS software package on the satellite device. The satellite device stops participating in the Junos Fusion topology once the software installation starts.

The following steps explain how to convert a satellite device that is participating in a Junos Fusion to a standalone device running Junos OS. If you have a standalone switch that is not part of a Junos Fusion but is running satellite software, and you want the switch to run Junos OS software, see [“Installing Junos OS Software on a Standalone Device Running Satellite Software” on page 144](#).



NOTE: The QFX5100-48SH and QFX5100-48TH switch models are shipped from the factory with satellite device software. You cannot convert these switches to become standalone devices.

Conversion of EX2300 and EX3400 switches from satellite devices to standalone devices cannot be initiated from the aggregation device. To install Junos OS software on an EX2300 or EX3400 switch acting as a satellite device, see [“Installing Junos OS Software on a Standalone Device Running Satellite Software” on page 144](#).

-
- [Download Junos OS Software on page 140](#)
 - [Disable the Automatic Conversion Configuration on page 141](#)
 - [Install Junos OS Software on the Satellite Device on page 143](#)

Download Junos OS Software

Before you install a new Junos OS software package on a satellite device, make sure you download the correct software package for that device:

- If the satellite device is a QFX5110, QFX5200 or EX4300 switch, you install a standard, signed **jinstall** version of Junos OS.

- If the satellite device is a QFX5100 switch that can be converted to a standalone device, you must install a Preboot eXecution Environment (PXE) version of Junos OS. The PXE version of Junos OS software supports the same feature set as the other Junos OS software packages for a release, but is specially engineered to install Junos OS onto a device running satellite software. The PXE Junos OS package name uses the format **install-media-pxe-qfx-5-version-domestic.tgz**.
- For Junos Fusion systems running Junos OS Release 17.2R1 and later, if the satellite device is a QFX5100 switch that can be converted to a standalone device, you must install a signed PXE version of Junos OS to convert the satellite device running satellite software to a standalone device running Junos OS software. The signed PXE Junos OS package name uses the format **install-media-pxe-qfx-5-version-domestic-signed.tgz**.

To download the version of Junos OS that you want to run on the satellite device after removing it from the Junos Fusion:

1. Using a Web browser, navigate to the Junos OS software download URL on the Juniper Networks webpage:
<https://www.juniper.net/support/downloads>
2. Log in to the Juniper Networks authentication system using the username (generally your e-mail address) and password supplied by Juniper Networks representatives.
3. Select **By Technology > Junos Platform > Junos Fusion** from the drop-down list and select the switch platform series and model for your satellite device.
4. Select the version of Junos OS that you want to run on the satellite device after removing it from the Junos Fusion.
5. Review and accept the End User License Agreement.
6. Download the software to a local host.
7. Copy the software to the routing platform or to your internal software distribution site.

Disable the Automatic Conversion Configuration

Before removing a satellite device from an operational Junos Fusion, you must disable the configuration for automatic satellite conversion. If automatic satellite conversion is enabled for the FPC slot ID, the Junos OS installation cannot proceed.

For example, the following installation on an EX4300 satellite device is blocked:

```
[edit]
user@aggregation-device> request chassis satellite install fpc-slot 103
/var/tmp/jinstall-ex-4300-14.1X53-D43.7-domestic-signed.tgz
Convert satellite device to Junos standalone device? [yes,no] (no) yes
```

Verified jinstall-ex-4300-14.1X53-D43.7-domestic.tgz signed by
PackageProductionEc_2017 method ECDSA256+SHA256
Satellite 103 is configured in the auto-satellite-conversion list
Please remove it from the list before converting to standalone

You can check the automatic satellite conversion configuration by entering the **show** statement at the [**edit chassis satellite-management auto-satellite-conversion**] hierarchy level.

1. If automatic satellite conversion is enabled for the satellite device's FPC slot ID, remove the FPC slot ID from the automatic satellite conversion configuration.

```
[edit]
user@aggregation-device# delete chassis satellite-management auto-satellite-conversion
satellite slot-id
```

For example, to remove FPC slot ID 103 from the Junos Fusion.

```
[edit]
user@aggregation-device# delete chassis satellite-management auto-satellite-conversion
satellite 103
```

2. Commit the configuration.

- To commit the configuration to a single Routing Engine only:

```
[edit]
user@aggregation-device# commit
```

- To commit the configuration to all Routing Engines in multiple-aggregation device topology:

```
[edit]
user@aggregation-device# commit synchronize
```

Install Junos OS Software on the Satellite Device

1. To install the Junos OS software on the satellite device to convert the device to a standalone device, use the following CLI command:

```
[edit]
user@aggregation-device> request chassis satellite install fpc-slot slot-id
URL-to-software-package
```

For example, to install a software package stored in the **var/tmp** folder on the aggregation device onto an EX4300 switch acting as the satellite device using FPC slot 103:

```
[edit]
user@aggregation-device> request chassis satellite install fpc-slot 103
/var/tmp/jinstall-ex-4300-14.1X53-D43.7-domestic-signed.tgz
Convert satellite device to Junos standalone device? [yes,no] (no) yes
```

```
Verified jinstall-ex-4300-14.1X53-D43.7-domestic.tgz signed by
PackageProductionEc_2017 method ECDSA256+SHA256
Initiating Junos standalone conversion on device 103...
Response from device: Conversion started
```



NOTE: If you are converting a QFX5100 switch and the Junos Fusion is running a Junos OS release earlier than 17.2R1, you must install the unsigned PXE software package on the QFX5100 switch:

```
[edit]
user@aggregation-device> request chassis satellite install fpc-slot 103
/var/tmp/install-media-pxe-qfx-5-14.1X53-D43.7-domestic.tgz
```

The satellite device stops participating in the Junos Fusion topology once the software installation starts. The software upgrade starts after this command is entered.

2. To check the progress of the conversion, issue the **show chassis satellite fpc-slot** command:

```
[edit]
user@aggregation-device> show chassis satellite fpc-slot 103 extensive
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports
ex4300-24t-16	103	Online	xe-1/0/3	online	52/29
xe-2/0/3		online			

When	Event	Action
Nov 30 15:48:22.914	Rx SW-Update JSON-RPC response	Conversion started
Nov 30 15:47:54.375	Start-SW-Update	Junos conversion

3. Wait for the reboot that accompanies the software installation to complete.
4. When you are prompted to log back into your device, uncable the device from the Junos Fusion topology. See *Removing a Transceiver*. Your device has been removed from Junos Fusion.



NOTE: The device uses a factory-default configuration after the Junos OS installation is complete.

Release History Table

Release	Description
17.2R1	For Junos Fusion systems running Junos OS Release 17.2R1 and later, if the satellite device is a QFX5100 switch that can be converted to a standalone device, you must install a signed PXE version of Junos OS to convert the satellite device running satellite software to a standalone device running Junos OS software.

Related Documentation

- *Understanding Software in a Junos Fusion Provider Edge*
- [Understanding Software in a Junos Fusion Enterprise on page 22](#)
- *Understanding Software in a Junos Fusion Data Center*

Installing Junos OS Software on a Standalone Device Running Satellite Software

This process should be used when you have a standalone switch running satellite software and you want the switch to run Junos OS software. A standalone device is running satellite software for one of the following reasons:

- It was removed from a Junos Fusion without following the instructions in [“Converting a Satellite Device in a Junos Fusion to a Standalone Device” on page 140](#), which include a Junos OS installation.
- Satellite software was installed on the device but the device was never provisioned into a Junos Fusion.



NOTE: If you are removing a satellite device from a Junos Fusion, you must first make sure that automatic satellite conversion is disabled for the satellite device's FPC slot ID. See [“Converting a Satellite Device in a Junos Fusion to a Standalone Device” on page 140](#).

To install Junos OS onto a QFX5100, QFX5100 or QFX5200 switch running satellite software:

- Select a Junos OS image that meets the satellite software to Junos OS conversion requirements. See [Junos Fusion Hardware and Software Compatibility Matrices](#) for satellite software to Junos OS conversion requirements.
- Copy the Junos OS image onto a USB flash drive and use the USB flash drive to install the Junos OS. See [Performing a Recovery Installation Using an Emergency Boot Device](#).

To install Junos OS onto an EX4300 switch running satellite software:

1. Log in to the console port of your switch.
2. Power off the switch, and power it back on.
3. While the switch is powering back on, enter the UBoot prompt (`=>`) by pressing Ctrl+C on your keyboard.
4. From the Uboot prompt, set the operating system environment mode on the switch to Junos. Save the configuration and reset the kernel:

```
=> setenv osmode junos
=> setenv snos_previous_boot 0
=> save
=> reset
```

After the reset operation completes, the loader prompt (**loader>**) appears.

5. Install Junos OS using a USB flash drive from the loader prompt. See *Booting an EX Series Switch Using a Software Package Stored on a USB Flash Drive*.

To install Junos OS onto an EX2300 or EX3400 switch running satellite software:

- Log in to the satellite software (SNOS) on the switch to be converted back to Junos OS and use the following sequence of commands to install the Junos package:

```
#####  
dd bs=512 count=1 if=/dev/zero of=/dev/sda  
echo -e "o\nn\np\n1\n\nnw" | fdisk /dev/sda  
mkfs.vfat /dev/sda1  
fw_setenv target_os  
reboot  
#####  
>>Get to the loader prompt  
#####  
loader> install --format tftp://<tftp server>/<Junos package name>
```

**Related
Documentation**

- [Understanding Junos Fusion Enterprise Software and Hardware Requirements on page 26](#)
- [Junos Fusion Hardware and Software Compatibility Matrices](#)
- [Converting a Satellite Device in a Junos Fusion to a Standalone Device on page 140](#)

CHAPTER 5

Junos Fusion Enterprise Operational Commands

- request chassis device-mode satellite
- request chassis satellite beacon
- request chassis satellite disable
- request chassis satellite enable
- request chassis satellite file-copy
- request chassis satellite install
- request chassis satellite interface
- request chassis satellite login
- request chassis satellite reboot
- request chassis satellite restart
- request chassis satellite shell-command
- request system software add
- request system software delete
- request system software rollback
- request system storage cleanup
- show chassis alarms
- show chassis environment
- show chassis environment fpc
- show chassis environment pem
- show chassis environment routing-engine
- show chassis fan
- show chassis firmware
- show chassis hardware
- show chassis led satellite
- show chassis routing-engine
- show chassis satellite

- `show chassis satellite extended-port`
- `show chassis satellite interface`
- `show chassis satellite neighbor`
- `show chassis satellite redundancy-group`
- `show chassis satellite redundancy-group devices`
- `show chassis satellite software`
- `show chassis satellite statistics`
- `show chassis satellite unprovision`
- `show chassis satellite upgrade-group`
- `show chassis satellite-cluster`
- `show chassis satellite-cluster route`
- `show chassis satellite-cluster statistics`
- `show chassis temperature-thresholds`
- `show interfaces extensive satellite-device`
- `show interfaces satellite-device`
- `show interfaces statistics`
- `show interfaces terse satellite-device`
- `show system core-dumps`

request chassis device-mode satellite

Syntax	<code>request chassis device-mode satellite <i>package-name</i></code>
Release Information	Command introduced in Junos OS Release 14.1X53-D16.
Description	<p>Manually install satellite software onto a switch before interconnecting the switch as a satellite device into a Junos Fusion.</p> <p>There are other methods of installing satellite software onto a satellite device, and each Junos Fusion has individual requirements for manually installing satellite software. See <i>Configuring Junos Fusion Provider Edge</i> or “Configuring or Expanding a Junos Fusion Enterprise” on page 45 before manually installing satellite software.</p> <p>This command is entered from a standalone device before it is configured into a satellite device in a Junos Fusion.</p>
Options	<i>package-name</i> —The URL to the satellite software package.
Required Privilege Level	system-control
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring Junos Fusion Provider Edge</i> • Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	request chassis device-mode satellite /var/tmp/satellite-3.0R1.1-signed.tgz on page 149

Sample Output

`request chassis device-mode satellite /var/tmp/satellite-3.0R1.1-signed.tgz`

```
user@satellite-device> request chassis device-mode satellite
/var/tmp/satellite-3.0R1.1-signed.tgz
```

request chassis satellite beacon

Syntax	<pre>request chassis satellite beacon <(off on)> <fpc-slot slot-id (off on)> <range range (off on)></pre>
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion.
Description	<p>This command is used to enable or disable the beacon LED on satellite devices in a Junos Fusion.</p> <p>To display the status and colors of the beacon LEDs of the satellite devices in a Junos Fusion, use the show chassis led satellite command.</p>
Options	<p>off—Turn the beacon LED off.</p> <p>on—Turn the beacon LED on.</p> <p>range range—Enable or disable the beacon LED in a range of FPC slot identifiers. For example, you can specify FPC slot identifiers 101, 102, and 103 by entering a range of 101-103.</p> <p>fpc-slot slot-id—Enable or disable beacon LED for the satellite device using the specified FPC slot identifier in the Junos Fusion. The <i>slot-id</i> is the FPC slot ID number.</p>
Required Privilege Level	maintenance
Related Documentation	<ul style="list-style-type: none">• show chassis led satellite on page 694• Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	request chassis satellite beacon fpc-slot 136 on on page 150 request chassis satellite beacon range 101-103 off on page 150
Sample Output	
request chassis satellite beacon fpc-slot 136 on	<pre>user@aggregation-device> request chassis satellite beacon fpc-slot 136 on</pre>
request chassis satellite beacon range 101-103 off	<pre>user@aggregation-device> request chassis satellite beacon range 101-103 off</pre>

request chassis satellite disable

Syntax	request chassis satellite disable <device-alias <i>alias-name</i> > <fpc-slot <i>fpc-slot</i> >
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Disable the specified satellite device from the Junos Fusion.</p> <p>When a satellite device is disabled from a Junos Fusion, all extended ports are immediately placed in the down state. The satellite device cannot send or receive traffic for the Junos Fusion until it is reenabled.</p> <p>This command is useful whenever you need to disable a satellite device from a Junos Fusion, such as for troubleshooting scenarios. If you are removing a satellite device from a Junos Fusion to use the device elsewhere on the network, use the request chassis satellite install command to install Junos OS onto your satellite device before removing it from the Junos Fusion. See <i>Removing a Satellite Device from a Junos Fusion</i>.</p> <p>You can reenable a satellite device that was disabled using this command using the request chassis satellite enable command.</p>
Options	<p>device-alias <i>alias-name</i>—Disable the satellite device with the specified alias name from the Junos Fusion.</p> <p>fpc <i>fpc-slot</i>—Disable the satellite device with the specified FPC slot identifier from the Junos Fusion.</p>
Required Privilege Level	system-control
Related Documentation	<ul style="list-style-type: none"> • Configuring Junos Fusion Provider Edge • Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	request chassis satellite disable device-alias satellite-01 on page 151 request chassis satellite disable fpc-slot 101 on page 152

Sample Output

[request chassis satellite disable device-alias satellite-01](#)

```
user@aggregation-device> request chassis satellite disable device-alias satellite-01
```

Sample Output

request chassis satellite disable fpc-slot 101

```
user@aggregation-device> request chassis satellite disable fpc-slot 101
```

request chassis satellite enable

Syntax	<pre>request chassis satellite enable <device-alias <i>alias-name</i>> <fpc-slot <i>fpc-slot</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Enable the specified device as a satellite device in a Junos Fusion.</p> <p>This command is typically not used in any standard Junos Fusion initial configuration procedure. This command is typically needed in cases where the satellite device or cascade port has been disabled and needs to be re-enabled.</p>
Options	<p>device-alias <i>alias-name</i>—Enable the satellite device with the specified alias name in the Junos Fusion.</p> <p>fpc <i>fpc-slot</i>—Enable the device with the specified FPC slot ID as a satellite device in the Junos Fusion.</p>
Required Privilege Level	system-control
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge
List of Sample Output	<p>request chassis satellite enable device-alias satellite-01 on page 153</p> <p>request chassis satellite enable fpc-slot 101 on page 153</p>

Sample Output

request chassis satellite enable device-alias satellite-01

```
user@aggregation-device> request chassis satellite enable device-alias satellite-01
```

Sample Output

request chassis satellite enable fpc-slot 101

```
user@aggregation-device> request chassis satellite enable fpc-slot 101
```

request chassis satellite file-copy

Syntax	<code>request chassis satellite file-copy [remote local] <source-URL> <destination-URL></code>
Release Information	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	Copy a file between a satellite device and an aggregation device in a Junos Fusion.
Options	<p>local—Indicate that the file-copy from satellite-device has been initiated by a local user.</p> <p>remote—Indicate that the file-copy from satellite-device has been initiated by a remote user.</p> <p>source-URL—Specify the URL of the file that is copied.</p> <p>If no device is specified as the <i>source-URL</i>, the file is copied from the aggregation device.</p> <p>To specify a satellite device in the <i>source-URL</i>, enter sdslot-id-number at the beginning of the <i>source-URL</i>. For example, enter sd101:/var/tmp/filename.txt to specify that filename.txt in the /var/tmp directory on the satellite device using FPC slot ID number 101 is the <i>source-URL</i>.</p> <p>destination-URL—Specify the destination URL where the file is copied into.</p> <p>If no device is specified as the <i>destination-URL</i>, the file is copied into the aggregation device.</p> <p>To specify a satellite device in the <i>destination-URL</i>, enter sdslot-id-number at the beginning of the <i>destination-URL</i>. For example, enter sd101:/var/tmp/ to specify the /var/tmp directory on the satellite device using FPC slot ID number 101 as the <i>source-URL</i>.</p>
Required Privilege Level	system-control
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge
List of Sample Output	request chassis satellite file-copy on page 155

Sample Output

request chassis satellite file-copy

```
user@aggregation-device> request chassis satellite file-copy /var/tmp/file_name  
sd101:/var/tmp/
```

request chassis satellite install

Syntax `request chassis satellite install package-name
[fpc-slot fpc-slot | device-alias device-alias]
<no-confirm>`

Release Information Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.
Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.
Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

Description Install a version of Junos OS software onto a satellite device in a Junos Fusion.

Any device operating as a satellite device in a Junos Fusion is running satellite software. A device running satellite software cannot operate as a standalone network device until it is running a version of Junos OS software.

You would typically enter this command to install Junos OS onto a satellite device before removing the satellite device from a Junos Fusion. Installing the Junos OS software onto the satellite device before removing it from the Junos Fusion allows you to more easily install the device elsewhere in your network.

If you are using the automatic satellite conversion feature to convert devices into satellite devices in your Junos Fusion, remove the FPC slot ID to the satellite device from the automatic satellite conversion configuration before using this command to install the Junos OS software. You can update the automatic satellite conversion feature using the **set chassis satellite-management auto-satellite-conversion satellite slot-id** configuration statement.

You must install a PXE version of compatible Junos OS to convert the satellite device running satellite software to a standalone device running Junos OS software on QFX5100 switches acting as satellite devices. The PXE version of Junos OS is the software that includes **pxe** in the Junos OS package name when it is downloaded from the Software Center—for example, the PXE image for Junos OS Release 14.1X53-D16 is named **install-media-pxe-qfx-5-14.1X53-D16.2.tgz**.

For Junos Fusion systems running Junos OS Release 17.2R1 and later, you must install a signed PXE version of Junos OS to convert the satellite device running satellite software to a standalone device running Junos OS software. The signed PXE Junos OS package name uses the format **install-media-pxe-qfx-5-version-domestic-signed.tgz**.

The device uses a factory-default configuration after the Junos OS installation is complete. No Junos OS configuration is modified and the previous Junos OS configuration is not restored after the Junos OS software installation.

Options ***package-name***—Specify the URL to the Junos OS image to install onto the satellite device.

fpc fpc-slot—Install the Junos OS software onto the satellite device with the specified FPC slot ID in the Junos Fusion.

device-alias *device-alias*—Install the Junos OS software onto the satellite device with the alias name in the Junos Fusion.

no-confirm—(Optional) Install the Junos OS software onto the satellite device immediately without further confirmation prompting.

Required Privilege Level system-control

Related Documentation

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
- [Configuring Junos Fusion Provider Edge](#)

List of Sample Output

[request chassis satellite install /var/tmp/jinstall-ex-4300-14.1X53-D16.1-domestic-signed.tgz fpc-slot 101 \(EX4300 switch as satellite device\) on page 157](#)

[request chassis satellite install /var/tmp/install-media-pxe-qfx-5-14.1X53-D16.2.tgz fpc-slot 102 \(QFX5100 switch as satellite device\) on page 157](#)

Sample Output

[request chassis satellite install /var/tmp/jinstall-ex-4300-14.1X53-D16.1-domestic-signed.tgz fpc-slot 101 \(EX4300 switch as satellite device\)](#)

```
user@aggregation-device> request chassis satellite install
/var/tmp/jinstall-ex-4300-14.1X53-D16.1-domestic-signed.tgz fpc-slot 101
Response from device:
  Conversion Started
```

[request chassis satellite install /var/tmp/install-media-pxe-qfx-5-14.1X53-D16.2.tgz fpc-slot 102 \(QFX5100 switch as satellite device\)](#)

```
user@aggregation-device> request chassis satellite install
/var/tmp/install-media-pxe-qfx-5-14.1X53-D16.2.tgz fpc-slot 102
Response from device:
  Conversion Started
```

request chassis satellite interface

Syntax	<code>request chassis satellite interface <i>interface-name</i> device-mode satellite</code>
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	<p>Change the device mode for a device.</p> <p>This command is used to change a device into a satellite device for a Junos Fusion. After interconnecting a device to an aggregation device in a Junos Fusion, enter this command from the aggregation device to begin the manual satellite device conversion procedure.</p> <p>Other configuration steps, such as configuring the cascade port and creating a satellite software upgrade group, must be completed before this command can be used to convert a device into a satellite device. See <i>Configuring Junos Fusion Provider Edge</i> or “Configuring or Expanding a Junos Fusion Enterprise” on page 45.</p>
Options	<i>interface-name</i> —Specify the name of the cascade port interface on the aggregation device that connects to the device that will be converted into a satellite device.
Required Privilege Level	system-control
Related Documentation	<ul style="list-style-type: none">• <i>Configuring Junos Fusion Provider Edge</i>• Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	request chassis satellite interface xe-0/0/1 device-mode satellite on page 158

Sample Output

`request chassis satellite interface xe-0/0/1 device-mode satellite`

```
user@aggregation-device> request chassis satellite interface xe-0/0/1 device-mode satellite
```

request chassis satellite login

Syntax	<code>request chassis satellite login</code> <code><fpc-slot <i>fpc-slot</i>></code> <code><interface-name <i>interface-name</i>></code>
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Log in to the satellite device from the aggregation device. This command is typically used to log in to the satellite device by expert users for debugging purposes. You can perform all configuration and administration tasks in a Junos Fusion from the aggregation device.
Options	<i>fpc fpc-slot</i> —Log in to the satellite device with the specified FPC slot ID. <i>interface-name interface-name</i> —Log in to the satellite device connected to the specified interface. The <i>interface-name</i> is the cascade port on the aggregation device.
Required Privilege Level	system-control
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge
List of Sample Output	request chassis satellite login fpc-slot 101 on page 159

Sample Output

request chassis satellite login fpc-slot 101

```
user@aggregation-device> request chassis satellite login fpc-slot 101
```

request chassis satellite reboot

Syntax	<code>request chassis satellite reboot</code> <code><fpc-slot <i>fpc-slot</i>></code> <code><range <i>range</i>></code>
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Reboot the satellite device or devices from the aggregation device in a Junos Fusion.
Options	fpc <i>fpc-slot</i> —Reboot the satellite device with the specified FPC slot identifier. range <i>range</i> —Reboot all satellite devices in a range of FPC slot identifiers. For instance, you can reboot the satellite devices using FPC slot identifiers 101, 102, and 103 by entering a <i>range</i> of 101-103 .
Required Privilege Level	system-control
Related Documentation	<ul style="list-style-type: none">• Configuring or Expanding a Junos Fusion Enterprise on page 45• Configuring Junos Fusion Provider Edge
List of Sample Output	request chassis satellite reboot fpc 101 on page 160 request chassis satellite reboot range 101-103 on page 160

Sample Output

request chassis satellite reboot fpc 101

```
user@aggregation-device> request chassis satellite reboot fpc 101
```

Sample Output

request chassis satellite reboot range 101-103

```
user@aggregation-device> request chassis satellite reboot range 101-103
```

request chassis satellite restart

Syntax	<code>request chassis satellite restart [fpc-slot <i>fpc-slot</i> range <i>range</i>] <<i>process-name</i>></code>
Release Information	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Restart a process on a satellite device or devices from the aggregation device in a Junos Fusion.</p> <p>You would typically restart a process in a Junos Fusion for troubleshooting or debugging purposes.</p> <p>This command is intended for use by expert users for debugging purposes.</p>
Options	<p>fpc <i>fpc-slot</i>—Restart the specified process on the satellite device in the specified FPC slot ID only.</p> <p>range—Restart the process on the satellite devices in the specified range of FPC slot IDs only.</p> <p>For instance, if you want to reboot the satellite devices using FPC slot IDs 101, 102, and 103, you can enter a <i>range</i> of 101-103.</p> <p><i>process-name</i>—Restart the specified process on the specified FPC slot ID or range of FPC slot IDs.</p>
Required Privilege Level	system-control
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge

request chassis satellite shell-command

Syntax	<code>request chassis satellite shell-command [fpc-slot <i>fpc-slot</i> [<i>range</i>] <<i>remote-command</i>></code>
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Run a UNIX shell command for a satellite device from the aggregation device in a Junos Fusion.
Options	<p>fpc <i>fpc-slot</i>—Run the shell command on the satellite device using the specified FPC slot identifier only.</p> <p><i>range</i>—Run the shell command on the satellite devices in the specified range of FPC slot identifiers only.</p> <p>For instance, you can run the shell command on the satellite devices in FPC slot identifiers 101, 102, and 103 by entering a <i>range</i> of 101-103.</p> <p><i>remote-command</i>—Specify the UNIX shell command to run on the satellite device or devices.</p>
Required Privilege Level	system-control
Related Documentation	<ul style="list-style-type: none">• Configuring or Expanding a Junos Fusion Enterprise on page 45• Configuring Junos Fusion Provider Edge

request system software add

List of Syntax [Syntax on page 163](#)
 [Syntax \(EX Series Switches\) on page 163](#)
 [Syntax \(TX Matrix Router\) on page 163](#)
 [Syntax \(TX Matrix Plus Router\) on page 164](#)
 [Syntax \(MX Series Router\) on page 164](#)
 [Syntax \(QFX Series\) on page 164](#)
 [Syntax \(OCX Series\) on page 165](#)
 [Syntax \(Junos OS Evolved\) on page 165](#)

Syntax `request system software add package-name`
 `<best-effort-load>`
 `<delay-restart>`
 `<device-alias alias-name>`
 `<force>`
 `<no-copy>`
 `<no-validate>`
 `<re0 | re1>`
 `<reboot>`
 `<satellite slot-id>`
 `<set [package-name1 package-name2]>`
 `<unlink>`
 `<upgrade-group [all | upgrade-group-name]>`
 `<upgrade-with-config>`
 `<satellite slot-id>`
 `<validate>`
 `<version version-string>`

Syntax (EX Series Switches) `request system software add package-name`
 `<best-effort-load>`
 `<delay-restart>`
 `<force>`
 `<no-copy>`
 `<no-validate>`
 `<re0 | re1>`
 `<reboot>`
 `<set [package-name1 package-name2]>`
 `<upgrade-with-config>`
 `<validate>`
 `<validate-on-host hostname>`
 `<validate-on-routing-engine routing-engine>`

Syntax (TX Matrix Router) `request system software add package-name`
 `<best-effort-load>`
 `<delay-restart>`
 `<force>`
 `<lcc number | scc>`
 `<no-copy>`

```

<no-validate>
<re0 | re1>
<reboot>
<set [package-name1 package-name2]>
<unlink>
<upgrade-with-config>
<validate>
<validate-on-host hostname>
<validate-on-routing-engine routing-engine>

```

Syntax (TX Matrix Plus Router)

```

request system software add package-name
<best-effort-load>
<delay-restart>
<force>
<lcc number | sfc number>
<no-copy>
<no-validate>
<re0 | re1>
<reboot>
<set [package-name1 package-name2]>
<unlink>
<upgrade-with-config>
<validate>
<validate-on-host hostname>
<validate-on-routing-engine routing-engine>

```

Syntax (MX Series Router)

```

request system software add package-name
<best-effort-load>
<delay-restart>
<device-alias alias-name>
<force>
<member member-id>
<no-copy>
<no-validate>
<re0 | re1>
<reboot>
<satellite slot-id>
<set [package-name1 package-name2]>
<upgrade-group [all [upgrade-group-name]]>
<unlink>
<upgrade-with-config>
<validate>
<version version-string>
<validate-on-host hostname>
<validate-on-routing-engine routing-engine>

```

Syntax (QFX Series)

```

request system software add package-name
<best-effort-load>
<component all>
<delay-restart>

```



```

<force>
<force-host>
<no-copy>
<partition>
<reboot>
<unlink>
<upgrade-with-config>

```

Syntax (OCX Series) `request system software add package-name`

```

<best-effort-load>
<delay-restart>
<force>
<force-host>
<no-copy>
<no-validate>
<reboot>
<unlink>
<upgrade-with-config>
<validate>

```

Syntax (Junos OS Evolved) `request system software add package-name`

```

<force>
<no-validate>
<reboot>
<restart>

```

Release Information Command introduced before Junos OS Release 7.4.
best-effort-load and **unlink** options added in Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
set [*package-name1 package-name2*] option added in Junos OS Release 11.1 for EX Series switches. Added in Junos OS Release 12.2 for M Series, MX Series, and T Series routers.



NOTE: On EX Series switches, the **set [*package-name1 package-name2*]** option allows you to install only two software packages on a mixed EX4200 and EX4500 Virtual Chassis, whereas, on M Series, MX Series, and T Series routers, the **set [*package-name1 package-name2 package-name3*]** option allows you to install multiple software packages and software add-on packages at the same time.

upgrade-with-config and **upgrade-with-config-format *format*** options added in Junos OS Release 12.3 for M Series routers, MX Series routers, and T Series routers, EX Series Ethernet switches, and QFX Series devices.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

device-alias, **satellite**, **upgrade-group**, and **version** options introduced in Junos OS Release 14.2R3 for Junos Fusion.

validate-on-host and **validate-on-routing-engine** options added in Junos OS Release 15.1F3 for PTX5000 routers and MX240, MX480, and MX960 routers.

upgrade-with-config-format *format* option deleted in Junos OS Release 16.1 for M Series routers, MX Series routers, and T Series routers, EX Series Ethernet switches, and QFX Series devices.

The following options are deprecated in Junos OS Evolved Release 18.3R1: **best-effort-load**, **delay-restart**, **no-copy**, **on-primary**, (**re0** | **re1**), **set**, **unlink**, **validate**, **validate-on-host**, and **validate-on-routing-engine**.

Description For Junos OS Evolved, the **request system software add** command has a built-in feature not to start upgrade if a reboot is pending after an upgrade or rollback.



NOTE: We recommend that you always download the software image to `/var/tmp` only. On EX Series and QFX Series switches, you must use the `/var/tmp` directory. Other directories are not supported.

Install a software package or bundle on the router or switch.

For information on valid filename and URL formats, see *Format for Specifying Filenames and URLs in Junos OS CLI Commands*.



CAUTION: Any configuration changes performed after inputting the **request system software add** command will be lost when the system reboots with an upgraded version of Junos OS.



NOTE: Starting from Junos OS Release 17.2R1, PTX10008 routers do not support the **request system software add** command. Starting from Junos OS Release 17.4R1, PTX10016 routers do not support the **request system software add** command. Use the **request vmhost software add** command instead of the **request system software add** command on the PTX10008 and PTX10016 routers to install or upgrade the Junos OS software package or bundle on the router. See *request vmhost software add*.



NOTE: When graceful Routing Engine switchover (GRES) is enabled on a device, you must perform a unified ISSU operation to update the software running on the device. With GRES enabled, if you attempt to perform a software upgrade by entering the `request system software add package-name` command, an error message is displayed stating that only in-service-software-upgrades are supported when GRES is configured. In such a case, you must either remove the GRES configuration before you attempt the upgrade or perform a unified ISSU.



NOTE: Starting with Junos OS Release 15.1F3, the statement `request system software add` installs a software package for the guest OS only for the PTX5000 router with RE-DUO-C2600-16G, and for MX240, MX480, and MX960 routers with RE-S-1800X4-32G-S.

Starting with Junos OS Release 15.1F5, the statement `request system software add` installs a software package for the guest OS only for the MX2010 and MX2020 routers with REMX2K-1800-32G-S.

On these routers, in order to install both Junos software and host software packages, use the `request vmhost software add` command.

Options *package-name*—Location from which the software package or bundle is to be installed.
For example:

- `/var/tmp/package-name`—For a software package or bundle that is being installed from a local directory on the router or switch.
- `protocol://hostname/pathname/package-name`—For a software package or bundle that is to be downloaded and installed from a remote location. Replace *protocol* with one of the following:
 - **ftp**—File Transfer Protocol.
Use `ftp://hostname/pathname/package-name`. To specify authentication credentials, use `ftp://<username>:<password>@hostname/pathname/package-name`. To have the system prompt you for the password, specify **prompt** in place of the password. If a password is required, and you do not specify the password or **prompt**, an error message is displayed.
 - **http**—Hypertext Transfer Protocol.
Use `http://hostname/pathname/package-name`. To specify authentication credentials, use `http://<username>:<password>@hostname/pathname/package-name`. If a password is required and you omit it, you are prompted for it.
 - **scp**—Secure copy (not available for limited editions).

Use `scp://hostname/pathname/package-name`. To specify authentication credentials, use `scp://<username>:<password>@hostname/pathname/package-name`.



NOTE:

- The *pathname* in the protocol is the relative path to the user's home directory on the remote system and not the root directory.
 - Do not use the `scp` protocol in the `request system software add` command to download and install a software package or bundle from a remote location. The previous statement does not apply to the QFabric switch. The software upgrade is handled by the management process (`mgd`), which does not support `scp`.
Use the file copy command to copy the software package or bundle from the remote location to the `/var/tmp` directory on the hard disk:
`file copy scp://source/package-name /var/tmp`
Then install the software package or bundle using the `request system software add` command:
`request system software add /var/tmp/package-name`
-

best-effort-load—(Optional) Activate a partial load and treat parsing errors as warnings instead of errors.

component all—(QFabric systems only) (Optional) Install software package on all of the QFabric components.

delay-restart—(Optional) Install a software package or bundle, but do not restart software processes.

device-alias *alias-name*—(Junos Fusion only) (Optional) Install the satellite software package onto the specified satellite device using the satellite device's alias name.

force—(Optional) Force the addition of the software package or bundle (ignore warnings).

force-host—(Optional) Force the addition of host software package or bundle (ignore warnings) on the QFX5100 device.

lcc *number* —(TX Matrix routers and TX Matrix Plus routers only) (Optional) In a routing matrix based on the TX Matrix router, install a software package or bundle on a T640 router that is connected to the TX Matrix router. In a routing matrix based on the TX Matrix Plus router, install a software package or bundle on a router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

member *member-id*—(MX Series routers only) (Optional) Install a software package on the specified Virtual Chassis member. Replace *member-id* with a value of 0 or 1.

partition—(QFX3500 switches only) (Optional) Format and repartition the media before installation.

satellite *slot-id*—(Junos Fusion only) (Optional) Install the satellite software package onto the specified satellite device using the satellite devices FPC slot identifier.

scc—(TX Matrix routers only) (Optional) Install a software package or bundle on a Routing Engine on a TX Matrix router (or switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Install a software package or bundle on a Routing Engine on a TX Matrix Plus router. Replace *number* with 0.

no-copy—(Optional) Install a software package or bundle, but do not save copies of the package or bundle files.

no-validate—(Optional) When loading a software package or bundle with a different release, suppress the default behavior of the **validate** option.



NOTE: Software packages from unidentified providers cannot be loaded. To authorize providers, include the **provider-id** statement at the [edit system extensions provider] hierarchy level.

re0 | re1—(Optional) On routers or switches that support dual or redundant Routing Engines, load a software package or bundle on the Routing Engine in slot 0 (re0) or the Routing Engine in slot 1 (re1).

reboot—(Optional) After adding the software package or bundle, reboot the system. On a QFabric switch, the software installation is not complete until you reboot the component for which you have installed the software.

set [*package-name1 package-name2*]—(Mixed EX4200 and EX4500 Virtual Chassis, M Series, MX Series, and T Series routers only) (Optional) Install multiple packages at same time:

- In the case of mixed EX4200 and EX4500 Virtual Chassis, install two software packages—a package for an EX4200 switch and the same release of the package for an EX4500 switch—to upgrade all member switches in a mixed EX4200 and EX4500 Virtual Chassis.
- In the case of M Series, MX Series, and T Series routers, install multiple (two or more) software packages and software add-on packages at the same time. The variable **package-name** can either be a list of installation packages, each separated by a blank space, or the full URL to the directory or tar file containing the list of installation packages.

In each case, **installation-package** can either be a list of installation packages, each separated by a blank space, or the full URL to the directory or tar file containing the list of installation packages.

Use the **request system software add set** command to retain any SDK configuration by installing the SDK add-on packages along with the core Junos OS installation package.

unlink—(Optional) On M Series, T Series, and MX Series routers, use the unlink option to remove the software package from this directory after a successful upgrade is completed.

upgrade-group [**all** *upgrade-group-name*]—(Junos Fusion only) (Required to configure a Junos Fusion using autoconversion or manual conversion) Associate a satellite software image with a satellite software upgrade group. The satellite software package is associated with the specified satellite software upgrade group using the *upgrade-group-name*, or for all satellite software upgrade groups in a Junos Fusion when the all keyword is specified.

A satellite software upgrade group is a group of satellite devices in a Junos Fusion that are designated to upgrade to the same satellite software version using the same satellite software package. See *Understanding Software in a Junos Fusion Provider Edge*, “[Understanding Software in a Junos Fusion Enterprise](#)” on page 22, and “[Managing Satellite Software Upgrade Groups in a Junos Fusion](#)” on page 123.

upgrade-with-config—(Optional) Install one or more configuration files.



NOTE: Configuration files specified with this option must have the extension .text or .xml and have the extension specified. Using the extension .txt will not work.

validate—(Optional) Validate the software package or bundle against the current configuration as a prerequisite to adding the software package or bundle. This is the

default behavior when the software package or bundle being added is a different release.



NOTE: The `validate` option only works on systems that do not have graceful-switchover (GRES) enabled. To use the `validate` option on a system with GRES, either disable GRES for the duration of the installation, or install using the command `request system software in-service-upgrade`, which requires nonstop active routing (NSR) to be enabled when using GRES.

validate-on-host *hostname*—(Optional) Validate the software package by comparing it to the running configuration on a remote Junos OS host. Specify a host, replacing ***hostname*** with the remote hostname. You can optionally provide the username that will be used to log in to the remote host by specifying the hostname in the format ***user@hostname***.

validate-on-routing-engine *routing-engine*—(Optional) Validate the software bundle or package by comparing it to the running configuration on a Junos OS Routing Engine on the same chassis. Specify a Routing Engine, replacing ***routing-engine*** with the routing engine name.

Additional Information

Before upgrading the software on the router or switch, when you have a known stable system, issue the **request system snapshot** command to back up the software, including the configuration, to the **/altroot** and **/altconfig** file systems. After you have upgraded the software on the router or switch and are satisfied that the new package or bundle is successfully installed and running, issue the **request system snapshot** command again to back up the new software to the **/altroot** and **/altconfig** file systems.



NOTE: The `request system snapshot` command is currently not supported on the QFabric system. Also, you cannot add or install multiple packages on a QFabric system.

After you run the **request system snapshot** command, you cannot return to the previous version of the software because the running and backup copies of the software are identical.

If you are upgrading more than one package at the same time, delete the operating system package, `jkernel`, last. Add the operating system package, `jkernel`, first and the routing software package, `jroute`, last. If you are upgrading all packages at once, delete and add them in the following order:

```
user@host> request system software add /var/tmp/jbase
user@host> request system software add /var/tmp/jkernel
user@host> request system software add /var/tmp/jpfe
```

```
user@host> request system software add /var/tmp/jdocs
user@host> request system software add /var/tmp/jroute
user@host> request system software add /var/tmp/jcrypto
```

By default, when you issue the **request system software add *package-name*** command on a TX Matrix master Routing Engine, all the T640 master Routing Engines that are connected to it are upgraded to the same version of software. If you issue the same command on the TX Matrix backup Routing Engine, all the T640 backup Routing Engines that are connected to it are upgraded to the same version of software.

Likewise, when you issue the **request system software add *package-name*** command on a TX Matrix Plus master Routing Engine, all the T1600 or T4000 master Routing Engines that are connected to it are upgraded to the same version of software. If you issue the same command on the TX Matrix Plus backup Routing Engine, all the T1600 or T4000 backup Routing Engines that are connected to it are upgraded to the same version of software.

Required Privilege Level

maintenance

Related Documentation

- *Format for Specifying Filenames and URLs in Junos OS CLI Commands*
- [request system software delete on page 177](#)
- [request system software rollback on page 182](#)
- [request system storage cleanup on page 187](#)
- *Installing Software Packages on QFX Series Devices*
- *Upgrading Software on a QFabric System*
- [Managing Satellite Software Upgrade Groups in a Junos Fusion on page 123](#)
- *request system software add (Maintenance)*
- *Routing Matrix with a TX Matrix Plus Router Solutions Page*

List of Sample Output

[request system software add validate on page 173](#)
[request system software add /var/tmp/ no-validate on page 173](#)
[request system software add no-copy no-validate reboot on page 174](#)
[request system software add validate-on-host on page 174](#)
[request system software add \(Mixed EX4200 and EX4500 Virtual Chassis\) on page 176](#)
[request system software add component all \(QFabric Systems\) on page 176](#)
[request system software add upgrade-group \(Junos Fusion\) on page 176](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system software add validate

```

user@host> request system software add validate /var/tmp/jinstall-7.2R1.7-domestic-signed.tgz

Checking compatibility with configuration
Initializing...
Using jbase-7.1R2.2
Using /var/tmp/jinstall-7.2R1.7-domestic-signed.tgz
Verified jinstall-7.2R1.7-domestic.tgz signed by PackageProduction_7_2_0
Using /var/validate/tmp/jinstall-signed/jinstall-7.2R1.7-domestic.tgz
Using /var/validate/tmp/jinstall/jbundle-7.2R1.7-domestic.tgz
Checking jbundle requirements on /
Using /var/validate/tmp/jbundle/jbase-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jkernel-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jcrypto-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jpfe-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jdocs-7.2R1.7.tgz
Using /var/validate/tmp/jbundle/jroute-7.2R1.7.tgz
Validating against /config/juniper.conf.gz
mgd: commit complete
Validation succeeded
Validating against /config/rescue.conf.gz
mgd: commit complete
Validation succeeded
Installing package '/var/tmp/jinstall-7.2R1.7-domestic-signed.tgz' ...
Verified jinstall-7.2R1.7-domestic.tgz signed by PackageProduction_7_2_0
Adding jinstall...

WARNING: This package will load JUNOS 7.2R1.7 software.
WARNING: It will save JUNOS configuration files, and SSH keys
WARNING: (if configured), but erase all other files and information
WARNING: stored on this machine. It will attempt to preserve dumps
WARNING: and log files, but this can not be guaranteed. This is the
WARNING: pre-installation stage and all the software is loaded when
WARNING: you reboot the system.

Saving the config files ...
Installing the bootstrap installer ...

WARNING: A REBOOT IS REQUIRED TO LOAD THIS SOFTWARE CORRECTLY. Use the
WARNING: 'request system reboot' command when software installation is
WARNING: complete. To abort the installation, do not reboot your system,
WARNING: instead use the 'request system software delete jinstall'
WARNING: command as soon as this operation completes.

Saving package file in /var/sw/pkg/jinstall-7.2R1.7-domestic-signed.tgz ...
Saving state for rollback ...

```

request system software add /var/tmp/ no-validate

```

user@host> request system software add no-validate
/var/tmp/junos-install-mx-x86-32-15.1R1.9.tgz

Installing package '/var/tmp/junos-install-mx-x86-32-15.1R1.9.tgz' ...
Verified manifest signed by PackageProductionEc_2015
Verified manifest signed by PackageProductionRSA_2015
Verified contents.iso
Verified issu-indb.tgz

```

```

Verified junos-x86-32.tgz
Verified kernel
Verified metatags
Verified package.xml
Verified pkgtools.tgz
camcontrol: not found
camcontrol: not found
Verified manifest signed by PackageProductionEc_2015
Saving the config files ...
NOTICE: uncommitted changes have been saved in
/var/db/config/juniper.conf.pre-install
Saving package file in
/var/sw/pkg/junos-install-x86-32-domestic-20150618.043753_builder_junos_151_r1.tgz
...
Saving state for rollback ...

```

request system software add no-copy no-validate reboot

```

user@host> request system software add no-copy no-validate junos-install-srx-x86-64-17.3R1.tgz
reboot

Verified junos-install-srx-x86-64-17.3R1 signed by PackageProductionEc_2017 method
ECDSA256+SHA256
Verified manifest signed by PackageProductionEc_2017 method ECDSA256+SHA256
Checking PIC combinations
Verified fips-mode signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding fips-mode-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jail-runtime signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jail-runtime-x86-32-20170725.352915_builder_stable_10 ...
Verified jdocs signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jdocs-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jfirmware signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jfirmware-x86-32-17.3R1 ...
Verified jpfe-X signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jpfe-X-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jpfe-X960 signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jpfe-X960-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jpfe-common signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jpfe-common-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jpfe-fips signed by PackageProductionEc_2017 method ECDSA256+SHA256
Verified jpfe-wrlinux signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jpfe-wrlinux-x86-32-20170728.153050_builder_junos_173_r1 ...
Verified jsd-jet-1 signed by PackageProductionEc_2017 method ECDSA256+SHA256
Adding jsd-x86-32-17.3R1-jet-1 ...

```

request system software add validate-on-host

```

user@host> request system software add validate-on-host user@xyz
:/var/tmp/jinstall-15.1-20150516_ib_15_2_psd.0-domestic-signed.tgz

user@host> request system software add validate-on-host user@xyz
:/var/tmp/jinstall-15.1-20150516_ib_15_2_psd.0-domestic-signed.tgz
Extracting JUNOS version from package...
Connecting to remote host xyz...
Password:
Sending configuration to xyz...
Validating configuration on xyz...
PACKAGE TYPE: not found
Checking compatibility with configuration

```

```

Initializing...
Using jbase-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jruntime-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jkernel-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jroute-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jcrypto-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using jweb-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using /var/packages/jtools-15.1-20150516_ib_15_2_psd.0
Verified manifest signed by PackageDevelopmentEc_2015
Using /var/tmp/config.tgz
Hardware Database regeneration succeeded
Validating against /config/juniper.conf.gz
mgd: warning: schema: init: 'logical-systems-vlans' contains-node 'juniper-config
  vlans': not found
mgd: commit complete
Validation succeeded
Installing package
'/var/tmp/jinstall-15.1-20150516_ib_15_2_psd.0-domestic-signed.tgz' ...
Verified jinstall-15.1-20150516_ib_15_2_psd.0-domestic.tgz signed by
PackageDevelopmentEc_2015
Adding jinstall...

WARNING:    The software that is being installed has limited support.
WARNING:    Run 'file show /etc/notices/unsupported.txt' for details.

WARNING:    This package will load JUNOS 15.1-20150516_ib_15_2_psd.0 software.
WARNING:    It will save JUNOS configuration files, and SSH keys
WARNING:    (if configured), but erase all other files and information
WARNING:    stored on this machine. It will attempt to preserve dumps
WARNING:    and log files, but this can not be guaranteed. This is the
WARNING:    pre-installation stage and all the software is loaded when
WARNING:    you reboot the system.

Saving the config files ...
NOTICE: uncommitted changes have been saved in
/var/db/config/juniper.conf.pre-install
Installing the bootstrap installer ...

WARNING:    A REBOOT IS REQUIRED TO LOAD THIS SOFTWARE CORRECTLY. Use the
WARNING:    'request system reboot' command when software installation is
WARNING:    complete. To abort the installation, do not reboot your system,
WARNING:    instead use the 'request system software delete jinstall'
WARNING:    command as soon as this operation completes.

Saving package file in
/var/sw/pkg/jinstall-15.1-20150516_ib_15_2_psd.0-domestic-signed.tgz ...
Saving state for rollback ...

```

Sample Output

request system software add (Mixed EX4200 and EX4500 Virtual Chassis)

```
user@switch> request system software add set  
[/var/tmp/jinstall-ex-4200-11.1R1.1-domestic-signed.tgz  
/var/tmp/jinstall-ex-4500-11.1R1.1-domestic-signed.tgz]  
...
```

request system software add component all (QFabric Systems)

```
user@switch> request system software add /pbdata/packages/jinstall-qfabric-12.2X50-D1.3.rpm  
component all  
...
```

request system software add upgrade-group (Junos Fusion)

```
user@aggregation-device> request system software add /var/tmp/satellite-3.0R1.1-signed.tgz  
upgrade-group group1
```

request system software delete

List of Syntax [Syntax on page 177](#)
 [Syntax \(TX Matrix Router\) on page 177](#)
 [Syntax \(Junos OS Evolved \) on page 177](#)

Syntax `request system software delete software-package`
 `<force>`
 `<reboot>`
 `<set [package-name package-name]>`
 `<upgrade-group [all |upgrade-group-name]>`
 `<version version-string>`

Syntax (TX Matrix Router) `request system software delete software-package`
 `<force>`
 `<lcc number | scc>`
 `<reboot>`
 `<set [package-name package-name]>`

Syntax (Junos OS Evolved) `request system software delete`
 `<force>`
 `<reboot>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 9.0 for EX Series switches.
 sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.
 Command introduced in Junos OS Release 11.1 for the QFX Series.
 set [*package-name package-name*] option added in Junos OS Release 12.2 for M Series, MX Series, and T Series routers.
 reboot option introduced in Junos OS Release 12.3.
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
 upgrade-group, and **version** options introduced in Junos OS Release 14.2R3 for Junos Fusion.

Description Remove a software package or bundle from the router or switch.



CAUTION: Before removing a software package or bundle, make sure that you have already placed the new software package or bundle that you intend to load onto the router or switch.

Options ***package-name***—(Only for Junos OS Evolved) Name of the Junos OS Evolved package running on the device. You can see this package name by using the **request system software list** command.

software-package—(Not available on Junos OS Evolved) Software package or bundle name.

You can delete any or all of the following software bundles or packages:

- **jbase**—(Optional) Junos base software suite
- **jcrypto**—(Optional, in domestic version only) Junos security software
- **jdocs**—(Optional) Junos online documentation file
- **jkernel**—(Optional) Junos kernel software suite
- **jpfe**—(Optional) Junos Packet Forwarding Engine support
- **jroute**—(Optional) Junos routing software suite
- **junos**—(Optional) Junos base software



NOTE: On EX Series switches, some of the package names are different than those listed. To see the list of packages that you can delete on an EX Series switch, enter the command **show system software**.

force—(Optional) Ignore warnings and force removal of the software.

lcc number—(TX Matrix routers and TX Matrix Plus routers only) (Optional) In a routing matrix, delete a software package or bundle on a T640 router indicated by **lcc number** that is connected to the TX Matrix router. In a routing matrix, delete a software package or bundle on a router indicated by **lcc number** that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

re0 | re1—(Optional) On routers or switches that support dual or redundant Routing Engines, delete a software package or bundle on the Routing Engine in slot 0 (re0) or the Routing Engine in slot 1 (re1).

reboot—As of Junos OS 12.3 and greater, automatically reboot upon completing the **request system software delete** command.

scc—(TX Matrix routers only) (Optional) Remove an extension or upgrade package from the TX Matrix router (or switch-card chassis).

set [package-name package-name]—(M Series, MX Series, and T Series routers only) (Optional) Install multiple software packages or software add-on packages at the same time.

sfc number—(TX Matrix Plus routers only) (Optional) Remove an extension or upgrade package from the TX Matrix Plus router. Replace *number* with 0.

upgrade-group [all |upgrade-group-name]—(Junos Fusion only) Delete the satellite software image association with the specified satellite software upgrade group.

A satellite software upgrade group is a group of satellite devices in the same Junos Fusion that are designated to upgrade to the same satellite software version using the same satellite software package.

version version-string—(Junos Fusion only) (Optional) Delete a satellite software package association with a satellite software upgrade group by selecting the satellite software package's version.

Additional Information Before upgrading the software on the router or switch, when you have a known stable system, issue the **request system snapshot** command to back up the software, including the configuration, to the /altroot and /altconfig file systems (on routers) or the /, /altroot, /config, /var, and /var/tmp file systems (on switches). After you have upgraded the software on the router or switch and are satisfied that the new packages are successfully installed and running, issue the **request system snapshot** command again to back up the new software to the /altroot and /altconfig file systems (on routers) or the /, /altroot, /config, /var, and /var/tmp file systems (on switches). After you run the **request system snapshot** command, you cannot return to the previous version of the software, because the running and backup copies of the software are identical.

Required Privilege Level maintenance

Related Documentation

- [request system software add on page 163](#)
- [request system software rollback on page 182](#)
- [request system software validate](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output [request system software delete jdocs on page 180](#)
[request system software delete \(Junos OS Evolved\) on page 180](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system software delete jdocs

The following example displays the system software packages before and after the **jdocs** package is deleted through the **request system software delete** command:

```
user@host> show system software
Information for jbase:

Comment:
JUNOS Base OS Software Suite [7.2R1.7]

Information for jcrypto:

Comment:
JUNOS Crypto Software Suite [7.2R1.7]

Information for jdocs:

Comment:
JUNOS Online Documentation [7.2R1.7]

Information for jkernel:

Comment:
JUNOS Kernel Software Suite [7.2R1.7]

...
```

```
user@host> show system software
Information for jbase:

Comment:
JUNOS Base OS Software Suite [7.2R1.7]

Information for jcrypto:

Comment:
JUNOS Crypto Software Suite [7.2R1.7]

Information for jkernel:

Comment:
JUNOS Kernel Software Suite [7.2R1.7]

...
```

request system software delete (Junos OS Evolved)

```
user@host> request system software delete
junos-evo-install-qfx-fixed-x86-64-18.3I20180911102422
```



```
Removing version 'junos-evo-install-qfx-fixed-x86-64-18.3I20180911102422'.  
Software ... done.  
Data ... done.  
Version 'junos-evo-evo-qfx-fixed-x86-64-18.3I20180911102422' removed successfully.
```

request system software rollback

List of Syntax	Syntax on page 182 Syntax (EX Series Switches) on page 182 Syntax (TX Matrix Router) on page 182 Syntax (TX Matrix Plus Router) on page 182 Syntax (MX Series Router) on page 182 Syntax (Junos OS Evolved) on page 182
Syntax	request system software rollback
Syntax (EX Series Switches)	request system software rollback <all-members> <local> <member <i>member-id</i> > <reboot>
Syntax (TX Matrix Router)	request system software rollback <lcc <i>number</i> scc> <reboot>
Syntax (TX Matrix Plus Router)	request system software rollback <lcc <i>number</i> sfc <i>number</i> > <reboot>
Syntax (MX Series Router)	request system software rollback <all-members> <device-alias <i>alias-name</i> > <local> <member <i>member-id</i> > <reboot> <satellite <i>slot-id</i> > <upgrade-group [all <i>upgrade-group-name</i>]>
Syntax (Junos OS Evolved)	request system software rollback <no-validate> <package-name <i>version</i> > <reboot> <validate> <with-old-snapshot-config>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.

Command introduced in Junos OS Release 11.1 for the QFX Series.

Command behavior changed in Junos OS Release 12.1.

reboot option introduced in Junos OS Release 12.3.

device-alias, **satellite**, and **upgrade-group** options introduced in Junos OS Release 14.2R3 for Junos Fusion.

force option deprecated in Junos OS Release 15.1 for Junos OS with Upgraded FreeBSD.



NOTE: To determine which platforms run Junos OS with Upgraded FreeBSD, see the table listing the platforms currently running Junos OS with upgraded FreeBSD in *Release Information for Junos OS with Upgraded FreeBSD*.

validate and **no-validate** options introduced for Junos OS Evolved Release 18.3R1.

package-name version option introduced for Junos OS Evolved Release 18.3R1.

with-old-snapshot-config option introduced for Junos OS Evolved Release 18.3R1.

Description This command reverts to the last successfully installed package before the **request system software (add | delete)** command. It uses the copy stored in the `/var/sw/pkg` directory.

Additional Information

- On Junos Fusion, the **request system software rollback** command can be used to roll back the version of satellite software associated with a satellite software upgrade group. Rolling back the version of satellite software associated with a satellite software upgrade group triggers a satellite software upgrade.
- On M Series and T Series routers, if **request system software add <jinstall> reboot** was used for the previous installation, then **request system software rollback** has no effect. In this case, use **jinstall** to reinstall the required package.
- On M Series and T Series routers, if **request system software add <sdk1>** was used for the previous installation, then **request system software rollback** removes the last installed SDK package (**sdk1** in this example).
- On SRX Series devices with dual root systems, when **request system software rollback** is run, the system switches to the alternate root. Each root can have a different version of Junos OS. Roll back takes each root back to the previously installed image.
- On QFX3500 and QFX3600 devices in a mixed Virtual Chassis, when the **request system software rollback** command is issued, the system does not rollback to the image stored in the alternate partition.
- On QFX5100 switches, the **reboot** option has been removed. To reboot the switch after a software rollback, issue the **request system reboot** command as a separate, secondary command.
- On Junos OS Evolved, the **reboot** command is required in order to complete the rollback.

Options **all-members**—(EX4200 switches and MX Series routers only) (Optional) Attempt to roll back to the previous set of packages on all members of the Virtual Chassis configuration.

device-alias *alias-name*—(Junos Fusion only) (Optional) Rollback the satellite software package onto the specified satellite device using the satellite devices FPC slot identifier.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, attempt to roll back to the previous set of packages on a T640 router connected to the TX Matrix router. On a TX Matrix Plus router, attempt to roll back to the previous set of packages on a connected router connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(EX4200 switches and MX Series routers only) (Optional) Attempt to roll back to the previous set of packages on the local Virtual Chassis member.

member *member-id*—(EX4200 switches and MX Series routers only) (Optional) Attempt to roll back to the previous set of packages on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

no-validate | validate—(Only for Junos OS Evolved) Check compatibility with current configuration, yes or no.

none—For all versions of Junos OS up to and including Junos OS 11.4, revert to the set of software as of the last successful **request system software add**. As of Junos OS 12.1 and later, revert to the last known good state before the most recent **request system software (add | delete)** command.

package-name *version*—(Junos OS Evolved only) Select any installed version for the rollback. The **request system software rollback** command uses the version instead of the package-name. you can see the available versions by using the **show system software list** command. If a version is not specified, the system rolls back to the default rollback version (the one with the '<' before it on the **show system software list** command output). You can specify any previous Junos OS Evolved release as long as it is not the one that is currently running or the rollback version.

reboot—(Optional) For Junos OS 12.3 and later, the system reboots automatically to complete the rollback. However, for Junos OS Evolved, you must explicitly specify the **reboot** option to complete the rollback.

satellite slot-id—(Junos Fusion only) (Optional) Roll back the satellite software package onto the specified satellite device using the satellite devices FPC slot identifier.

scc—(TX Matrix routers only) (Optional) Attempt to roll back to the previous set of packages on the TX Matrix router (or switch-card chassis).

sfc number—(TX Matrix Plus routers only) (Optional) Attempt to roll back to the previous set of packages on the TX Matrix Plus router. Replace *number* with 0.

upgrade-group [all | *upgrade-group-name*]—(Junos Fusion only) Roll back the satellite software image associated with the specified satellite software upgrade group, or for all satellite software upgrade groups in the Junos Fusion when **all** is entered.

validate | no-validate—(Junos OS Evolved only).

with-old-snapshot-config—(Optional) (Junos OS Evolved only) Rolls back system to the specified version with the old snapshot of the configuration used in that version. Otherwise, the rollback, by default, takes the current configuration.

Required Privilege Level maintenance

Related Documentation

- *request system software abort*
- [request system software add on page 163](#)
- [request system software delete on page 177](#)
- *request system software validate*
- *request system configuration rescue delete*
- *request system configuration rescue save*
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

List of Sample Output [request system software rollback on page 186](#)

Output Fields When you enter this command, you are provided feedback on the status of your request.

Sample Output

request system software rollback

```
user@host> request system software rollback

Verified SHA1 checksum of ./jbase-7.2R1.7.tgz
Verified SHA1 checksum of ./jdocs-7.2R1.7.tgz
Verified SHA1 checksum of ./jroute-7.2R1.7.tgz
Installing package './jbase-7.2R1.7.tgz' ...
Available space: 35495 require: 7335
Installing package './jdocs-7.2R1.7.tgz' ...
Available space: 35339 require: 3497
Installing package './jroute-7.2R1.7.tgz' ...
Available space: 35238 require: 6976
NOTICE: uncommitted changes have been saved in
/var/db/config/juniper.conf.pre-install
Reloading /config/juniper.conf.gz ...
Activating /config/juniper.conf.gz ...
mgd: commit complete
Restarting mgd ...
Restarting aprobed ...
Restarting apsd ...
Restarting cosd ...
Restarting fsad ...
Restarting fud ...
Restarting gcdrd ...
Restarting ilmid ...
Restarting irsd ...
Restarting l2tpd ...
Restarting mib2d ...
Restarting nasd ...
Restarting pppoed ...
Restarting rdd ...
Restarting rmopd ...
Restarting rtspd ...
Restarting sampled ...
Restarting serviced ...
Restarting snmpd ...
Restarting spd ...
Restarting vrrpd ...

WARNING: cli has been replaced by an updated version:
CLI release 7.2R1.7 built by builder on 2005-04-22 02:03:44 UTC
Restart cli using the new version ? [yes,no] (yes) yes

Restarting cli ...
user@host
```

request system storage cleanup

List of Syntax [Syntax on page 187](#)
 [Syntax \(EX Series Switches\) on page 187](#)
 [Syntax \(MX Series Router\) on page 187](#)
 [Syntax \(QFX Series\) on page 187](#)
 [Syntax \(SRX Series\) on page 187](#)
 [Syntax \(Junos OS Evolved\) on page 188](#)

Syntax request system storage cleanup
 <dry-run>
 <no-confirm>
 <re0 | re1 | routing-engine (backup | both | local | master | other)>

Syntax (EX Series Switches) request system storage cleanup
 <all-members>
 <dry-run>
 <local>
 <member *member-id*>
 <no-confirm>
 <re0 | re1 | routing-engine (backup | both | local | master | other)>
 <satellite [slot-id *slot-id* | device-alias *alias-name*]>

Syntax (MX Series Router) request system storage cleanup
 <all-members>
 <dry-run>
 <local>
 <member *member-id*>
 <no-confirm>
 <re0 | re1 | routing-engine (backup | both | local | master | other)>
 <satellite [slot-id *slot-id* | device-alias *alias-name*]>

Syntax (QFX Series) request system storage cleanup
 <component (*serial number* | *UUID* | all)>
 <director-group *name*>
 <dry-run>
 <infrastructure *name*>
 <interconnect-device *name*>
 <name-tag *name-tag*>
 <no-confirm>
 <node-group *name*>
 <prune>
 <qfabric (component *name*) | dry-run | name-tag | repository>
 <repository (core | log)>
 <re0 | re1 | routing-engine (backup | both | local | master | other)>

Syntax (SRX Series) request system storage cleanup

	<pre> <dry-run> <no-confirm> <re0 re1 routing-engine (backup both local master other)> </pre>
Syntax (Junos OS Evolved)	request system storage cleanup (dry-run force-deep no-confirm)
Release Information	<p>Command introduced in Junos OS Release 7.4.</p> <p>dry-run option introduced in Junos OS Release 7.6.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 9.2 for SRX Series.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>satellite option introduced in Junos OS Release 14.2R3.</p> <p>no-confirm and (re0 re1 routing-engine (backup both local master other)) options introduced in Junos OS 17.3R1.</p> <p>force-deep options introduced in Junos OS Evolved Release 18.3R1.</p>
Description	<p>Free storage space on the router or switch by rotating log files and proposing a list of files for deletion. User input is required for file deletion. On a QFabric system, you can delete debug files located on individual devices or on the entire QFabric system.</p> <p>The Junos OS Evolved implementation of the request system storage cleanup command is slightly different from the implementation on Junos OS:</p> <ul style="list-style-type: none"> The user is prompted to specify the dry-run option: <pre> Please check the list of files to be deleted using the dry-run option. Continue anyway without checking? [yes,no] (yes) </pre> <p>The command cleans up any ISO files on the system, rotates syslogs, clears trace file. It does not remove user-created files</p> <ul style="list-style-type: none"> To delete any user-generated files as well, use the force-deep option. In Junos OS Evolved, the system computes the available space and emits o/p on console for reference.
Options	all-members —(EX4200 switches and MX Series routers only) (Optional) Delete files on the Virtual Chassis master Routing Engine only.



NOTE: To delete files on the other members of the Virtual Chassis configuration, log in to each backup Routing Engine and delete the files using the **request system storage cleanup local** command.

component (*UUID | serial number | all*)—(QFabric systems only) (Optional) Delete files located on individual QFabric system devices or on the entire QFabric system.

director-group name—(QFabric systems only) (Optional) Delete files on the Director group.

dry-run—(Optional) List files proposed for deletion (without deleting them).

force-deep—(Junos OS Evolved only) (Optional) Clear temporary user-generated files in */home/user* and */var/tmp* as well as any ISO files on the system, rotates syslogs, clears trace file. User is prompted to use the **dry-run** option.

infrastructure name—(QFabric systems only) (Optional) Delete files on the fabric control Routing Engine and fabric manager Routing Engine.

interconnect-device name—(QFabric systems only) (Optional) Delete files on the Interconnect device.

local—(EX4200 switches and MX Series routers only) (Optional) Delete files on the local Virtual Chassis member.

member member-id—(EX4200 switches and MX Series routers only) (Optional) Delete files on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace **member-id** with a value from 0 through 9. For an MX Series Virtual Chassis, replace **member-id** with a value of 0 or 1.

name-tag name-tag—(QFabric systems only) (Optional) Delete debug files that match a specific regular expression.

node-group name—(QFabric systems only) (Optional) Delete files on the Node group.

no-confirm—(Optional) Do not ask for confirmation before doing the cleanup.

prune—(QFabric systems only) (Optional) Delete debug files located in either the core or log debug repositories of a QFabric system device.

qfabric component name—(QFabric systems only) (Optional) Delete debug files located in the debug repositories of a QFabric system device.

(re0 | re1 | routing-engine (backup | both | local | master | other))—(Optional) Request operation on system storage on RE0, RE1, or on specified Routing Engine by these classifications: backup, both, local, master, or other.

When Routing Engine is specified, the below message is shown before listing the files and deleting them.

```
Please check the list of files to be deleted using the dry-run option. i.e.
request system storage cleanup dry-run
Do you want to proceed ? [yes,no] (no)
```

repository (core | log)—(QFabric systems only) (Optional) Specify the repository on the QFabric system device for which you want to delete debug files.

satellite [**slot-id** *slot-id* | **device-alias** *alias-name*](Junos Fusion only) (Optional)
Specify the satellite device in the Junos Fusion by FPC ID or device alias name for which you want to delete debug files.

Additional Information If logging is configured and being used, the **dry-run** option rotates the log files. In that case, the output displays the message “Currently rotating log files, please wait.” If no logging is currently under way, the output displays only a list of files to delete.

Required Privilege Level maintenance

List of Sample Output [request system storage cleanup dry-run on page 191](#)
[request system storage cleanup on page 191](#)
[request system storage cleanup \(Junos OS Evolved\) on page 192](#)
[request system storage cleanup dry-run \(Junos OS Evolved\) on page 192](#)
[request system storage cleanup force-deep \(Junos OS Evolved\) on page 193](#)
[request system storage cleanup director-group \(QFabric Systems\) on page 195](#)
[request system storage cleanup infrastructure device-name \(QFabric Systems\) on page 197](#)
[request system storage cleanup interconnect-device device-name \(QFabric Systems\) on page 198](#)
[request system storage cleanup node-group group-name \(QFabric Systems\) on page 199](#)
[request system storage cleanup qfabric component device-name \(QFabric Systems\) on page 200](#)
[request system storage cleanup qfabric component device-name repository core \(QFabric Systems\) on page 200](#)
[request system storage cleanup qfabric component all \(QFabric Systems\) on page 200](#)

Output Fields [Table 14 on page 190](#) describes the output fields for the **request system storage cleanup** command. Output fields are listed in the approximate order in which they appear.

Table 14: request system storage cleanup Output Fields

Field Name	Field Description
List of files to delete:	Shows list of files available for deletion.
Size	Size of the core-dump file.
Date	Last core-dump file modification date and time.
Name	Name of the core-dump file.
Directory to delete:	Shows list of directories available for deletion.
Repository scope:	Repository where core-dump files and log files are stored. The core-dump files are located in the core repository, and the log files are located in the log repository. The default Repository scope is shared since both the core and log repositories are shared by all of the QFabric system devices.

Table 14: request system storage cleanup Output Fields (continued)

Field Name	Field Description
Repository head:	Name of the top-level repository location.
Repository name:	Name of the repository: core or log .
Creating list of debug artifacts to be removed under:	Shows location of files available for deletion.
List of debug artifacts to be removed under:	Shows list of files available for deletion.

Sample Output

request system storage cleanup dry-run

```
user@host> request system storage cleanup dry-run
```

Currently rotating log files, please wait.
This operation can take up to a minute.

List of files to delete:

Size	Date	Name
11.4K	Mar 8 15:00	/var/log/messages.1.gz
7245B	Feb 5 15:00	/var/log/messages.3.gz
11.8K	Feb 22 13:00	/var/log/messages.2.gz
3926B	Mar 16 13:57	/var/log/messages.0.gz
3962B	Feb 22 12:47	/var/log/sampled.1.gz
4146B	Mar 8 12:20	/var/log/sampled.0.gz
4708B	Dec 21 11:39	/var/log/sampled.2.gz
7068B	Jan 16 18:00	/var/log/messages.4.gz
13.7K	Dec 27 22:00	/var/log/messages.5.gz
890B	Feb 22 17:22	/var/tmp/sampled.pkts
65.8M	Oct 26 09:10	/var/sw/pkg/jinstall-7.4R1.7-export-signed.tgz
63.1M	Oct 26 09:13	/var/sw/pkg/jbundle-7.4R1.7.tgz

request system storage cleanup

```
user@host> request system storage cleanup
```

Currently rotating log files, please wait.
This operation can take up to a minute.

List of files to delete:

Size	Date	Name
11.4K	Mar 8 15:00	/var/log/messages.1.gz
7245B	Feb 5 15:00	/var/log/messages.3.gz
11.8K	Feb 22 13:00	/var/log/messages.2.gz
3926B	Mar 16 13:57	/var/log/messages.0.gz
11.6K	Mar 8 15:00	/var/log/messages.5.gz
7254B	Feb 5 15:00	/var/log/messages.6.gz
12.9K	Feb 22 13:00	/var/log/messages.8.gz

```

3726B Mar 16 13:57 /var/log/messages.7.gz
3962B Feb 22 12:47 /var/log/sampled.1.gz
4146B Mar 8 12:20 /var/log/sampled.0.gz
4708B Dec 21 11:39 /var/log/sampled.2.gz
7068B Jan 16 18:00 /var/log/messages.4.gz
13.7K Dec 27 22:00 /var/log/messages.5.gz
890B Feb 22 17:22 /var/tmp/sampled.pkts
65.8M Oct 26 09:10 /var/sw/pkg/jinstall-7.4R1.7-export-signed.tgz
63.1M Oct 26 09:13 /var/sw/pkg/jbundle-7.4R1.7.tgz

```

Delete these files ? [yes,no] (yes)

request system storage cleanup (Junos OS Evolved)

```
user@host> request system storage cleanup
```

Please check the list of files to be deleted using the dry-run option.
Continue anyway without checking? [yes,no] (no)

request system storage cleanup dry-run (Junos OS Evolved)

```
user@host> request system storage cleanup dry-run
```

```
-----
node: re0
-----
```

```
=== Other candidate logs, traces, core files which would be removed ===
```

```
total 0
```

```

-rw-r--r-- 1 root root 0 Jun 14 11:38 /var/log/access.log
-rw-r--r-- 1 root root 1243 Jun 14 11:55 /var/log/agentd-trace.log
-rw-r--r-- 1 root root 638 Jun 14 11:54 /var/log/alarm-mgmt-trace.log
-rw-r--r-- 1 root root 3319611 Jun 14 13:40 /var/log/alarm-mgmt.log
-rw-r--r-- 1 root root 620 Jun 14 11:55 /var/log/alarmd-trace.log
-rw-r--r-- 1 root root 3436048 Jun 14 13:40 /var/log/alarmd.log
-rw-r--r-- 1 root root 621 Jun 14 11:55 /var/log/arpd-trace.log
-rw-r--r-- 1 root root 6595285 Jun 14 15:14 /var/log/arpd.log
-rw-r--r-- 1 root root 645 Jun 14 11:55 /var/log/bios-manager-trace.log
-rw-r--r-- 1 root root 3165769 Jun 14 13:40 /var/log/bios-manager.log
-rw-r--r-- 1 root root 2152 Jun 14 11:55 /var/log/ccdbq.log
-rw-r--r-- 1 root root 687637 Jun 14 13:40 /var/log/ccdinfra.log
-rw-r--r-- 1 root root 1861 Jun 14 11:55 /var/log/ccdre-trace.log
-rw-r--r-- 1 root root 611 Jun 14 11:55 /var/log/cfmd-trace.log
-rw-r--r-- 1 root root 3256076 Jun 14 13:40 /var/log/cfmd.log
-rw-r--r-- 1 root root 627 Jun 14 11:54 /var/log/charonctl-trace.log
-rw-r--r-- 1 root root 3138411 Jun 14 13:40 /var/log/charonctl.log
-rw-r--r-- 1 root root 180 Jun 14 11:54 /var/log/charonctl_trace.log
-rw-r--r-- 1 root root 85557 Jun 14 11:47
/var/log/cli-mgd-interaction.log.1497465690
-rw-r--r-- 1 root root 23603 Jun 14 11:47
/var/log/cli-mgd-interaction.log.1497466033
. . .
-rw-r--r-- 1 root root 11520 Jun 15 14:19 /var/log/wtmp
-rw-r--r-- 1 root root 12938555 Jun 15 14:24 /var/log/zookeeper--server-re0.log
-rw-r--r-- 1 root root 926 Jun 14 11:53 /var/log/zookeeper--server-re0.out

```

```
/var/log/journal:
```

```
total 4
```

```
drwxr-xr-x 2 root root 4096 Jun 14 11:37 ecd9ed14512f11e7953f0050569fd61f
```

```

/var/log/junosvm:
total 0

/var/log/lttng-traces:
total 8
drwxr-x--- 3 root root 4096 Jun 14 11:54 re0
drwxr-x--- 3 root root 4096 Jun 14 11:54 re1

/var/log/lttng-traces-re1:
total 8
drwxr-x--- 3 root root 4096 Jun 14 11:39 re0
drwxr-x--- 3 root root 4096 Jun 14 11:39 re1

/var/log/traces:
total 26472
drwxr-xr-x 2 root root 4096 Jun 14 11:43 fpc0.ccdpfe-t1.0
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.1
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.10
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.11
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.12
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.13
drwxr-xr-x 2 root root 4096 Jun 14 11:59 fpc0.ccdpfe-t1.14
. . .
drwxr-xr-x 2 root root 4096 Jun 14 18:42 re1.trace_client.2
drwxr-xr-x 2 root root 4096 Jun 15 01:31 re1.trace_client.3
drwxr-xr-x 2 root root 4096 Jun 15 08:21 re1.trace_client.4
drwxr-xr-x 2 root root 4096 Jun 14 11:39 re1.trace_conf.0
drwxr-xr-x 2 root root 4096 Jun 14 11:54 re1.trace_conf.1
drwxr-xr-x 2 root root 4096 Jun 14 11:39 re1.trace_server.0
drwxr-xr-x 2 root root 4096 Jun 14 11:54 re1.trace_server.1
drwxr-xr-x 2 root root 4096 Jun 14 20:59 re1.trace_server.2
drwxr-xr-x 2 root root 4096 Jun 15 06:06 re1.trace_server.3

/var/log/watchdog:
total 0
=== Removes any ISO files in /data partition ===
find: '/var/lib/ftp/in/*': No such file or directory
=== Current list of software versions installed ===
=== Software versions except current and rollback would be removed ===
List of installed version(s) :

[1] -> junos-evo-install-qfx-x86-64-16.2I20170614010254_evo-builder - [2017-06-14
11:36:21]

    '-' running version
    '>' next boot version
    '<' rollback boot version

```

request system storage cleanup force-deep (Junos OS Evolved)

```

user@host> request system storage cleanup force-deep

Please check the list of files to be deleted using the dry-run option.
Continue anyway without checking? [yes,no] (no) yes

-----
node: re0
-----
.....

```

```
===== Start cleanup now =====
=== Start removing other logs, traces, core files ===
Clearing core files
Clearing FPC logs
Clearing logical-systems logs
=== Clearing journal logs ===
Clearing log: /var/log/RE_journal.log
Clearing log: /var/log/RE_journal_boot.log
Clearing log: /var/log/alarm-mgmd
Clearing log: /var/log/appDemo_stdout
Clearing log: /var/log/charonctl_trace.log
Clearing log: /var/log/configd-streamer.log
Clearing log: /var/log/core_mgr.log
Clearing log: /var/log/cscript.log
Clearing log: /var/log/eth_linkmon.log
Clearing log: /var/log/evo-cda-zx.log
Clearing log: /var/log/evoinit.log
Clearing log: /var/log/fibd-proxy.log
Clearing log: /var/log/i2ctrace.log
Clearing log: /var/log/i2ctrace_spmbo.log
Clearing log: /var/log/i2ctrace_spmbl.log
Clearing log: /var/log/icmpd.log
Clearing log: /var/log/ifinfo.log
Clearing log: /var/log/imgd_svr.log
Clearing log: /var/log/install
Clearing log: /var/log/interactive-commands
Clearing log: /var/log/jsd
Clearing log: /var/log/lastlog
Clearing log: /var/log/mcelog.log
Clearing log: /var/log/messages
Clearing log: /var/log/mgd-api
Clearing log: /var/log/mgmt-ethd-helper.log
Clearing log: /var/log/mib2d
Clearing log: /var/log/na-grpcd
Clearing log: /var/log/objmon_sync.json
Clearing log: /var/log/packetio-cout.log
Clearing log: /var/log/picd.log
Clearing log: /var/log/platform_mon.log
Clearing log: /var/log/policer.log
Clearing log: /var/log/postinstall.log
Clearing log: /var/log/ptp_fpga.log
Clearing log: /var/log/reboot_node.log
Clearing log: /var/log/rollback.log
Clearing log: /var/log/security
Clearing log: /var/log/semctl.log
Clearing log: /var/log/set_mgmt_mac.log
Clearing log: /var/log/shutdown_complete.log
Clearing log: /var/log/sinet.log
Clearing log:
/var/log/smartd-attr-SFSA200GM3AA4T0_C_HC_636_JUN-000060139624B1000020.log
Clearing log:
/var/log/smartd-attr-SFSA200GM3AA4T0_C_HC_636_JUN-000060139624B1000022.log
Clearing log: /var/log/snmpd
Clearing log: /var/log/ss.log
Clearing log: /var/log/ssh-key-utils.log
Clearing log: /var/log/sshd_lua.log
Clearing log: /var/log/sysconfig.log
Clearing log: /var/log/sysman.conf
Clearing log: /var/log/system-events
Clearing log: /var/log/upgrade_master.log
```

```

Clearing log: /var/log/uswitch.log
Clearing log: /var/log/uswitch.log.prev
Clearing log: /var/log/validator_debug.log
Clearing log: /var/log/wtmp
Clearing log: /var/log/zookeeper--server-re.log
Clearing log: /var/log/zookeeper--server-re.out
Clearing log: /var/log/ztp.log
=== Clearing all traces ===
=== Clearing SI traces ===
=== Removing other logs, traces, core files completed ===
=== Started removing any ISO files in /data
=== Removing any ISO files in /data completed
=== Start Software versions cleanup ===
Removing older software versions except current and rollback
=== Software versions cleanup completed ===
===== Cleanup done =====
Current space available in /soft: 12372572 K
Current space available in /data: 2638752 K
Cannot delete junos-evo-install-qfx-fixed-x86-64-18.3I20180906130134_mkamil - It
is the rollback version
Cannot delete junos-evo-install-qfx-fixed-x86-64-18.3-20180906.3 - It is the
current version
Removing version junos-evo-install-qfx-x86-64-16.2I20180516093649...
Done.

```

request system storage cleanup director-group (QFabric Systems)

```
user@switch> request system storage cleanup director-group
```

```
List of files to delete:
```

	Size	Date	Name
4.0K	2011-11-07 05:16:29	/tmp/2064.sfcauth	
4.0K	2011-11-07 05:07:34	/tmp/30804.sfcauth	
4.0K	2011-11-07 04:13:41	/tmp/26792.sfcauth	
4.0K	2011-11-07 04:13:39	/tmp/26432.sfcauth	
0	2011-11-07 07:45:40	/tmp/cluster_cleanup.log	
1.3M	2011-11-07 07:39:11	/tmp/cn_monitor.20111107-052401.log	
4.0K	2011-11-07 07:36:29	/tmp/clustat.28019.log	
4.0K	2011-11-07 07:36:29	/tmp/clustat_x.28019.log	
9.6M	2011-11-07 05:30:24	/tmp/sfc.2.log	
4.0K	2011-11-07 05:28:11	/tmp/mgd-init.1320672491.log	
248K	2011-11-07 05:19:24	/tmp/cn_monitor.20111107-045111.log	
4.0K	2011-11-07 05:17:18	/tmp/clustat.3401.log	
4.0K	2011-11-07 05:17:18	/tmp/clustat_x.3401.log	
8.0K	2011-11-07 04:58:25	/tmp/mgd-init.1320670633.log	
0	2011-11-07 04:54:01	/tmp/mysql_db_install_5.1.37.log	
4.0K	2011-11-07 04:52:08	/tmp/cn_send.log	
0	2011-11-07 04:52:00	/tmp/init_eth0.log	
4.0K	2011-11-07 04:49:35	/tmp/install_interfaces.sh.log	
4.0K	2011-11-07 04:48:15	/tmp/bootstrap.sh.log	
160K	2011-11-07 04:47:43	/tmp/bootstrap_cleanup.log	
38M	2011-11-07 04:42:42	/tmp/cn_monitor.20111104-110308.log	
4.0K	2011-11-07 04:38:47	/tmp/clustat.30913.log	
4.0K	2011-11-07 04:38:47	/tmp/clustat_x.30913.log	
4.0K	2011-11-07 04:38:03	/tmp/dcf_upgrade.sh.remove.log	
4.0K	2011-11-07 04:38:03	/tmp/peer_update.log	
4.0K	2011-11-07 04:38:02	/tmp/dcf_upgrade.log	
4.0K	2011-11-07 04:38:02	/tmp/perl_mark_upgrade.log	

```

8.0K 2011-11-07 04:13:42 /tmp/install_dcf_rpm.log
4.0K 2011-11-07 04:13:06 /tmp/00_cleanup.sh.1320667986.log
0 2011-11-07 04:13:06 /tmp/ccif_patch_4410_4450.sh.1320667986.log
4.0K 2011-11-07 04:13:06 /tmp/pcf-tools.sh.1320667986.log
0 2011-11-07 04:13:06 /tmp/initial.sh.1320667986.log
0 2011-11-07 04:13:06 /tmp/inventory.sh.1320667986.log
4.0K 2011-11-07 04:13:06 /tmp/qf-db.sh.1320667986.log
4.0K 2011-11-07 04:13:06 /tmp/sfc.sh.1320667986.log
8.0K 2011-11-07 04:13:05 /tmp/jinstall-qfabric.log
8.0K 2011-11-04 11:10:24 /tmp/mgd-init.1320430192.log
4.0K 2011-11-04 11:07:03 /tmp/mysql_dcf_db_install.log
8.0K 2011-11-04 10:55:07 /tmp/ccif_patch_4410_4450.sh.1320429307.log
8.0K 2011-11-04 10:55:07 /tmp/initial.sh.1320429307.log
4.0K 2011-11-04 10:55:07 /tmp/inventory.sh.1320429307.log
8.0K 2011-11-04 10:55:07 /tmp/sfc.sh.1320429307.log
4.0K 2011-11-04 10:54:09 /tmp/ks-script-Ax0tz5.log
4.0K 2011-11-07 04:13:06 /tmp//sfc.sh.1320667986.log
8.0K 2011-11-04 10:55:07 /tmp//sfc.sh.1320429307.log

```

Directory to delete:

```

45M 2011-11-08 10:57:43 /tmp/sfc-captures

```

List of files to delete:

	Size	Date	Name
4.0K	2011-11-08	05:47:47	/tmp/5713.sfcauth
4.0K	2011-11-08	05:14:32	/tmp/14494.sfcauth
4.0K	2011-11-08	05:11:47	/tmp/9978.sfcauth
4.0K	2011-11-08	05:09:37	/tmp/6128.sfcauth
4.0K	2011-11-08	05:04:28	/tmp/29703.sfcauth
4.0K	2011-11-07	11:59:10	/tmp/7811.sfcauth
4.0K	2011-11-07	11:36:08	/tmp/32415.sfcauth
4.0K	2011-11-07	11:30:30	/tmp/22406.sfcauth
4.0K	2011-11-07	11:24:37	/tmp/12131.sfcauth
4.0K	2011-11-07	10:48:42	/tmp/12687.sfcauth
4.0K	2011-11-07	09:27:20	/tmp/31082.sfcauth
4.0K	2011-11-07	07:33:58	/tmp/14633.sfcauth
4.0K	2011-11-07	05:08:25	/tmp/15447.sfcauth
4.0K	2011-11-07	04:12:29	/tmp/26874.sfcauth
4.0K	2011-11-07	04:12:27	/tmp/26713.sfcauth
4.0K	2011-11-07	03:49:17	/tmp/17691.sfcauth
4.0K	2011-11-05	01:32:23	/tmp/5716.sfcauth
4.0K	2011-11-07	08:00:17	/tmp/sfcsnmpd.log
4.0K	2011-11-07	07:57:50	/tmp/cluster_cleanup.log
824K	2011-11-07	07:38:37	/tmp/cn_monitor.20111107-053643.log
4.0K	2011-11-07	07:36:30	/tmp/clustat.18399.log
4.0K	2011-11-07	07:36:30	/tmp/clustat_x.18399.log
4.0K	2011-11-07	07:35:47	/tmp/command_lock.log
4.0K	2011-11-07	05:39:54	/tmp/mgd-init.1320673194.log
92K	2011-11-07	05:19:25	/tmp/cn_monitor.20111107-050412.log
4.0K	2011-11-07	05:17:20	/tmp/clustat.30115.log
4.0K	2011-11-07	05:17:20	/tmp/clustat_x.30115.log
8.0K	2011-11-07	05:08:07	/tmp/mgd-init.1320671241.log
4.0K	2011-11-07	05:04:57	/tmp/cn_send.log
0	2011-11-07	05:04:52	/tmp/init_eth0.log
4.0K	2011-11-07	05:02:38	/tmp/install_interfaces.sh.log
4.0K	2011-11-07	05:01:19	/tmp/bootstrap.sh.log
160K	2011-11-07	05:00:47	/tmp/bootstrap_cleanup.log
28M	2011-11-07	04:42:27	/tmp/cn_monitor.20111104-112954.log
4.0K	2011-11-07	04:38:49	/tmp/clustat.6780.log


```

4.0K 2011-11-07 04:38:49 /tmp/clustat_x.6780.log
4.0K 2011-11-07 04:38:05 /tmp/issue_event.log
4.0K 2011-11-07 04:38:05 /tmp/peer_upgrade_reboot.log
12K 2011-11-07 04:38:05 /tmp/primary_update.log
4.0K 2011-11-07 04:38:04 /tmp/dcf_upgrade.sh.remove.log
4.0K 2011-11-07 04:38:04 /tmp/peer_rexec_upgrade.log
4.0K 2011-11-07 04:13:42 /tmp/peer_install_dcf_rpm.log
4.0K 2011-11-07 04:11:57 /tmp/dcf-tools.sh.1320667917.log
0 2011-11-07 04:11:57 /tmp/initial.sh.1320667917.log
0 2011-11-07 04:11:57 /tmp/inventory.sh.1320667917.log
4.0K 2011-11-07 04:11:57 /tmp/qf-db.sh.1320667917.log
4.0K 2011-11-07 04:11:57 /tmp/sfc.sh.1320667917.log
4.0K 2011-11-07 04:11:56 /tmp/00_cleanup.sh.1320667916.log
0 2011-11-07 04:11:56 /tmp/ccif_patch_4410_4450.sh.1320667916.log
8.0K 2011-11-07 04:11:56 /tmp/jinstall-qfabric.log
4.0K 2011-11-07 04:11:33 /tmp/dcf_upgrade.log
8.0K 2011-11-04 11:53:12 /tmp/mgd-init.1320432782.log
8.0K 2011-11-04 11:06:17 /tmp/ccif_patch_4410_4450.sh.1320429977.log
8.0K 2011-11-04 11:06:17 /tmp/initial.sh.1320429977.log
4.0K 2011-11-04 11:06:17 /tmp/inventory.sh.1320429977.log
8.0K 2011-11-04 11:06:17 /tmp/sfc.sh.1320429977.log
4.0K 2011-11-04 11:05:19 /tmp/ks-script_tnWeb.log
4.0K 2011-11-07 04:11:57 /tmp//sfc.sh.1320667917.log
8.0K 2011-11-04 11:06:17 /tmp//sfc.sh.1320429977.log

```

Directory to delete:

```
49M 2011-11-08 10:45:20 /tmp/sfc-captures
```

request system storage cleanup infrastructure device-name (QFabric Systems)

```
user@switch> request system storage cleanup infrastructure FC
```

```
re0:
```

List of files to delete:

Size	Date	Name
139B	Nov 8 19:03	/var/log/default-log-messages.0.gz
5602B	Nov 8 19:03	/var/log/messages.0.gz
28.4K	Nov 8 10:15	/var/log/messages.1.gz
35.2K	Nov 7 13:45	/var/log/messages.2.gz
207B	Nov 7 16:02	/var/log/wtmp.0.gz
27B	Nov 7 12:14	/var/log/wtmp.1.gz
184.4M	Nov 7 12:16	/var/sw/pkg/jinstall-dc-re-11.3I20111104_1216_dc-builder-domestic-signed.tgz
124.0K	Nov 7 15:59	/var/tmp/gres-tp/env.dat
0B	Nov 7 12:57	/var/tmp/gres-tp/lock
155B	Nov 7 16:02	/var/tmp/krt_gencfg_filter.txt
0B	Nov 7 12:35	/var/tmp/last_ccif_update
1217B	Nov 7 12:15	/var/tmp/loader.conf.preinstall
184.4M	Nov 6 07:11	/var/tmp/mchassis-install.tgz
10.8M	Nov 7 12:16	/var/tmp/preinstall/bootstrap-install-11.3I20111104_1216_dc-builder.tar
57.4K	Nov 7 12:16	/var/tmp/preinstall/configs-11.3I20111104_1216_dc-builder.tgz
259B	Nov 7 12:16	/var/tmp/preinstall/install.conf
734.3K	Nov 4 13:46	/var/tmp/preinstall/jboot-dc-re-11.3I20111104_1216_dc-builder.tgz
177.8M	Nov 7 12:16	

```

/var/tmp/preinstall/jbundle-dc-re-11.3I20111104_1216_dc-builder-domestic.tgz
124B Nov 7 12:15 /var/tmp/preinstall/metatags
1217B Nov 7 12:16 /var/tmp/preinstall_boot_loader.conf
0B Nov 7 16:02 /var/tmp/rtssdb/if-rtssdb

```

request system storage cleanup interconnect-device device-name (QFabric Systems)

```
user@switch> request system storage cleanup interconnect IC
```

```
re1:
```

```
-----
List of files to delete:
```

	Size	Date	Name
	11B	Nov 7 15:55	/var/jail/tmp/alarmd.ts
	128B	Nov 8 19:06	/var/log/default-log-messages.0.gz
	9965B	Nov 8 19:06	/var/log/messages.0.gz
	15.8K	Nov 8 12:30	/var/log/messages.1.gz
	15.8K	Nov 8 11:00	/var/log/messages.2.gz
	15.7K	Nov 8 07:30	/var/log/messages.3.gz
	15.8K	Nov 8 04:00	/var/log/messages.4.gz
	15.7K	Nov 8 00:30	/var/log/messages.5.gz
	18.7K	Nov 7 21:00	/var/log/messages.6.gz
	17.6K	Nov 7 19:00	/var/log/messages.7.gz
	58.3K	Nov 7 16:00	/var/log/messages.8.gz
	20.3K	Nov 7 15:15	/var/log/messages.9.gz
	90B	Nov 7 15:41	/var/log/wtmp.0.gz
	57B	Nov 7 12:41	/var/log/wtmp.1.gz
	124.0K	Nov 7 15:42	/var/tmp/gres-tp/env.dat
	0B	Nov 7 12:40	/var/tmp/gres-tp/lock
	0B	Nov 7 12:41	/var/tmp/if-rtssdb/env.lck
	12.0K	Nov 7 15:41	/var/tmp/if-rtssdb/env.mem
	132.0K	Nov 7 15:55	/var/tmp/if-rtssdb/shm_usr1.mem
	2688.0K	Nov 7 15:41	/var/tmp/if-rtssdb/shm_usr2.mem
	2048.0K	Nov 7 15:41	/var/tmp/if-rtssdb/trace.mem
	730B	Nov 7 19:57	/var/tmp/juniper.conf+.gz
	155B	Nov 7 15:53	/var/tmp/krt_gencfg_filter.txt
	0B	Nov 7 15:41	/var/tmp/rtssdb/if-rtssdb

```
re0:
```

```
-----
List of files to delete:
```

	Size	Date	Name
	11B	Nov 7 15:55	/var/jail/tmp/alarmd.ts
	121B	Nov 8 19:06	/var/log/default-log-messages.0.gz
	16.7K	Nov 8 19:06	/var/log/messages.0.gz
	22.2K	Nov 8 17:45	/var/log/messages.1.gz
	K	Nov 8 17:00	/var/log/messages.2.gz
	21.6K	Nov 8 16:00	/var/log/messages.3.gz
	17.9K	Nov 8 14:30	/var/log/messages.4.gz
	19.4K	Nov 8 13:30	/var/log/messages.5.gz
	18.2K	Nov 8 12:30	/var/log/messages.6.gz
	20.4K	Nov 8 11:30	/var/log/messages.7.gz
	21.4K	Nov 8 10:15	/var/log/messages.8.gz
	21.0K	Nov 8 09:00	/var/log/messages.9.gz
	19.9K	Nov 8 08:13	/var/log/snmp-traps.0.gz
	203B	Nov 8 15:36	/var/log/wtmp.0.gz

```

57B Nov 7 12:41 /var/log/wtmp.1.gz
124.0K Nov 7 15:42 /var/tmp/gres-tp/env.dat
0B Nov 7 12:40 /var/tmp/gres-tp/lock
0B Nov 7 12:41 /var/tmp/if-rtbdb/env.lck
12.0K Nov 7 15:41 /var/tmp/if-rtbdb/env.mem
132.0K Nov 7 15:55 /var/tmp/if-rtbdb/shm_usr1.mem
2688.0K Nov 7 15:41 /var/tmp/if-rtbdb/shm_usr2.mem
2048.0K Nov 7 15:41 /var/tmp/if-rtbdb/trace.mem
727B Nov 7 15:54 /var/tmp/juniper.conf+.gz
155B Nov 7 15:55 /var/tmp/krt_gencfg_filter.txt
0B Nov 7 15:41 /var/tmp/rtbdb/if-rtbdb

```

request system storage cleanup node-group group-name (QFabric Systems)

```
user@switch> request system storage cleanup node-group NW-NG
```

```
BBAK0372:
```

```
-----
List of files to delete:
```

	Size	Date	Name
	126B	Nov 8 19:07	/var/log/default-log-messages.0.gz
	179B	Nov 7 13:32	/var/log/install.0.gz
	22.9K	Nov 8 19:07	/var/log/messages.0.gz
	26.5K	Nov 8 17:30	/var/log/messages.1.gz
	20.5K	Nov 8 13:15	/var/log/messages.2.gz
	33.2K	Nov 7 17:45	/var/log/messages.3.gz
	35.5K	Nov 7 15:45	/var/log/messages.4.gz
	339B	Nov 8 17:10	/var/log/wtmp.0.gz
	58B	Nov 7 12:40	/var/log/wtmp.1.gz
	124.0K	Nov 8 17:08	/var/tmp/gres-tp/env.dat
	0B	Nov 7 12:39	/var/tmp/gres-tp/lock
	0B	Nov 7 12:59	/var/tmp/if-rtbdb/env.lck
	12.0K	Nov 8 17:09	/var/tmp/if-rtbdb/env.mem
	2688.0K	Nov 8 17:09	/var/tmp/if-rtbdb/shm_usr1.mem
	132.0K	Nov 8 17:09	/var/tmp/if-rtbdb/shm_usr2.mem
	2048.0K	Nov 8 17:09	/var/tmp/if-rtbdb/trace.mem
	1082B	Nov 8 17:09	/var/tmp/juniper.conf+.gz
	155B	Nov 7 17:39	/var/tmp/krt_gencfg_filter.txt
	0B	Nov 8 17:09	/var/tmp/rtbdb/if-rtbdb

```
EE3093:
```

```
-----
List of files to delete:
```

	Size	Date	Name
	11B	Nov 8 17:33	/var/jail/tmp/alarmd.ts
	119B	Nov 8 19:08	/var/log/default-log-messages.0.gz
	180B	Nov 7 17:41	/var/log/install.0.gz
	178B	Nov 7 13:32	/var/log/install.1.gz
	2739B	Nov 8 19:08	/var/log/messages.0.gz
	29.8K	Nov 8 18:45	/var/log/messages.1.gz
	31.8K	Nov 8 17:15	/var/log/messages.2.gz
	20.6K	Nov 8 16:00	/var/log/messages.3.gz
	15.4K	Nov 8 10:15	/var/log/messages.4.gz
	15.4K	Nov 8 02:15	/var/log/messages.5.gz
	25.5K	Nov 7 20:45	/var/log/messages.6.gz
	48.0K	Nov 7 17:45	/var/log/messages.7.gz

```

32.8K Nov  7 13:45 /var/log/messages.8.gz
684B Nov  8 17:02 /var/log/wtmp.0.gz
58B Nov  7 12:40 /var/log/wtmp.1.gz
124.0K Nov  7 17:34 /var/tmp/gres-tp/env.dat
  0B Nov  7 12:40 /var/tmp/gres-tp/lock
  0B Nov  7 12:59 /var/tmp/if-rtbdb/env.lck
12.0K Nov  7 17:39 /var/tmp/if-rtbdb/env.mem
2688.0K Nov  7 17:39 /var/tmp/if-rtbdb/shm_usr1.mem
132.0K Nov  7 17:40 /var/tmp/if-rtbdb/shm_usr2.mem
2048.0K Nov  7 17:39 /var/tmp/if-rtbdb/trace.mem
155B Nov  7 17:40 /var/tmp/krt_gencfg_filter.txt
  0B Nov  7 17:39 /var/tmp/rtbdb/if-rtbdb

```

request system storage cleanup qfabric component device-name (QFabric Systems)

```
user@switch> request system storage cleanup qfabric component Test
```

```

Repository type: regular
Repository head: /pbstorage
Creating list of debug artifacts to be removed under: /pbstorage/rdumps/Test
Removing debug artifacts ... (press control C to abort)
Removing /pbstorage/rdumps/Test/cosd.core.0.0.05162011123308.gz ... done
Removing /pbstorage/rdumps/Test/cosd.core.1.0.05162011123614.gz ... done
Removing /pbstorage/rdumps/Test/cosd.core.2.0.05162011123920.gz ... done
Removing /pbstorage/rdumps/Test/livecore.05132011163930.gz ... done
Removing /pbstorage/rdumps/Test/tnetd.core.0.1057.05162011124500.gz ... done
Removing /pbstorage/rdumps/Test/vmcore.05132011120528.gz ... done
Removing /pbstorage/rdumps/Test/vmcore.kz ... done
Creating list of debug artifacts to be removed under: /pbstorage/rlogs/Test
Removing debug artifacts ... (press control C to abort)
Removing /pbstorage/rlogs/Test/kdumpinfo.05132011120528 ... done
Removing /pbstorage/rlogs/Test/kernel.tarball.0.1039.051220111234415.tgz ... done
Removing /pbstorage/rlogs/Test/kernel.tarball.1.1039.05132011175544.tgz ... done
Removing /pbstorage/rlogs/Test/tnetd.tarball.0.1057.05162011175453.tgz ... done

```

request system storage cleanup qfabric component device-name repository core (QFabric Systems)

```
user@switch> request system storage cleanup qfabric component Test repository core
```

```

Repository scope: shared
Repository head: /pbdata/export
Repository name: core
Creating list of debug artifacts to be removed under: /pbdata/export/rdumps/Test
NOTE: core repository under /pbdata/export/rdumps/Test empty

```

request system storage cleanup qfabric component all (QFabric Systems)

```
user@switch> request system storage cleanup qfabric component all
```

```

Repository scope: shared
Repository head: /pbdata/export
Creating list of debug artifacts to be removed under: /pbdata/export/rdumps
NOTE: core repository under /pbdata/export/rdumps/all empty
Creating list of debug artifacts to be removed under: /pbdata/export/rlogs
List of debug artifacts to clean up ... (press control C to abort)
/pbdata/export/rlogs/73747cd8-0710-11e1-b6a4-00e081c5297e/install-11072011125819.log
/pbdata/export/rlogs/77116f18-0710-11e1-a2a0-00e081c5297e/install-11072011125819.log
/pbdata/export/rlogs/BBAK0372/install-11072011121538.log
/pbdata/export/rlogs/BBAK0394/install-11072011121532.log

```

```
/pbdata/export/rlogs/EE3093/install-11072011121536.log  
/pbdata/export/rlogs/WS001/YN5999/install-11072011121644.log  
/pbdata/export/rlogs/WS001/YW3803/install-11072011122429.log  
/pbdata/export/rlogs/cd78871a-0710-11e1-878e-00e081c5297e/install-11072011125932.log  
/pbdata/export/rlogs/d0afda1e-0710-11e1-a1d0-00e081c5297e/install-11072011125930.log  
/pbdata/export/rlogs/d0afda1e-0710-11e1-a1d0-00e081c5297e/install-11072011133211.log  
/pbdata/export/rlogs/d0afda1e-0710-11e1-a1d0-00e081c5297e/install-11072011155302.log  
/pbdata/export/rlogs/d31ab7a6-0710-11e1-ad1b-00e081c5297e/install-11072011125931.log  
/pbdata/export/rlogs/d4d0f254-0710-11e1-90c3-00e081c5297e/install-11072011125932.log
```

show chassis alarms

List of Syntax	Syntax on page 202
	Syntax (TX Matrix Routers) on page 202
	Syntax (TX Matrix Plus Routers) on page 202
	Syntax (MX Series Routers) on page 202
	Syntax (MX104, MX2010, MX2020, and MX2008 Universal Routing Platforms) on page 202
	Syntax (MX10003, MX204, and MX10008) on page 202
	Syntax (QFX Series) on page 202
	Syntax (OCX Series) on page 202
	Syntax (PTX Series Packet Transport Routers) on page 203
	Syntax (ACX Series Universal Metro Routers) on page 203
	Syntax (EX9251, EX9253 Switches) on page 203

Syntax	show chassis alarms
Syntax (TX Matrix Routers)	show chassis alarms <lcc <i>number</i> scc>
Syntax (TX Matrix Plus Routers)	show chassis alarms <lcc <i>number</i> sfc <i>number</i> >
Syntax (MX Series Routers)	show chassis alarms <all-members> <local> <member <i>member-id</i> >
Syntax (MX104, MX2010, MX2020, and MX2008 Universal Routing Platforms)	show chassis alarms <satellite [slot-id <i>slot-id</i>]>
Syntax (MX10003, MX204, and MX10008)	show chassis alarms
Syntax (QFX Series)	show chassis alarms <interconnect-device <i>name</i> > <node-device <i>name</i> >
Syntax (OCX Series)	show chassis alarms

Syntax (PTX Series Packet Transport Routers)	show chassis alarms
Syntax (ACX Series Universal Metro Routers)	show chassis alarms
Syntax (EX9251, EX9253 Switches)	show chassis alarms
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX 2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>satellite option introduced in Junos OS Release 14.2R3 for Junos Fusion.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Universal Routing Platforms.</p>
Description	Display information about the conditions that have been configured to trigger alarms.
Options	<p>none—Display information about the conditions that have been configured to trigger alarms.</p> <p>all-members—(MX Series routers only) (Optional) Display information about alarm conditions for all the member routers of the Virtual Chassis configuration.</p> <p>interconnect-device <i>name</i>—(QFabric systems only) (Optional) Display information about alarm conditions for the Interconnect device.</p> <p>lcc <i>number</i>—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.</p>

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display information about alarm conditions for the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display information about alarm conditions for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value of 0 or 1.

node-device *name*—(QFabric systems only) (Optional) Display information about alarm conditions for the Node device.

satellite [*slot-id slot-id*]—(Junos Fusion only) (Optional) Display information about alarm conditions for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc—(TX Matrix router only) (Optional) Show information about the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus router only) (Optional) Show information about the respective TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* variable with 0.

Additional Information Chassis alarms are preset. You cannot modify them.

You cannot clear the alarms for chassis components. Instead, you must remedy the cause of the alarm. When a chassis alarm LED is lit, it indicates that you are running the router or switch in a manner that we do not recommend.

On routers, you can manually silence external devices connected to the alarm relay contacts by pressing the alarm cutoff button, located on the craft interface. Silencing the device does not remove the alarm messages from the display (if present on the router) or extinguish the alarm LEDs. In addition, new alarms that occur after you silence an external device reactivate the external device.



NOTE: MX10003 routers do not support craft interface.

In Junos OS release 11.1 and later, alarms for fans also show the slot number of the fans in the CLI output.

In Junos OS Release 11.2 and later, the command output on EX8200 switches shows the detailed location (**Plane/FPC/PFE**) for link errors in the chassis.

In Junos OS Release 10.2 and later, an alarm is shown on T Series routers for a standby SONET Clock Generator (SCG) that is offline or absent.

You may often see the following error messages, in which only the error code is shown and no other information is provided:

```
Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major Errors
- Error code: 257
Apr 12 08:04:19 send: red alarm set, device FPC 1, reason FPC 1 Major Errors
- Error code: 559
```

To understand what CM_ALARM error codes mean, you need to first identify the structure of the CM Alarm codes. A CM_ALARM code has the following structure:

Bits:	Error type:
1-31	Major (1)
0	Minor (0)

According to the table above, the LSB (bit 0) identifies the **Error Type** (major alarm, if the bit is set and minor alarm if the bit is unset). The rest of the bits (1 - 31) identify the actual error code.

Take an example of the following error code, which was logged on a T1600:

```
Apr 12 08:04:10 send: red alarm set, device FPC 1, reason FPC 1 Major Errors
- Error code: 559
```

First, you have to convert 559 to binary; that is **1000101111**. The LSB in this case is 1, which means that this is a major alarm. After removing the LSB, you are left with **100010111**, which is equal to 279 in decimal. This is the actual error code, its meaning can be found from the following list:

Chip Type: L Chip	Code
CMALARM_LCHIP_LOUT_DESRD_PARITY_ERR	1
CMALARM_LCHIP_LOUT_DESRD_UNINIT_ERR	2
CMALARM_LCHIP_LOUT_DESRD_ILLEGALLINK_ERR	3
CMALARM_LCHIP_LOUT_DESRD_ILLEGALSIZE_ERR	4
CMALARM_LCHIP_LOUT_HDRF_TOERR_ERR	5

CMALARM_LCHIP_LOUT_HDRF_PARITY_ERR	6
CMALARM_LCHIP_LOUT_HDRF_UCERR_ERR	7
CMALARM_LCHIP_LOUT_NLIF_CRCDROP_ERR	8
CMALARM_LCHIP_LOUT_NLIF_CRCERR_ERR	9
CMALARM_LCHIP_UCODE_TIMEOUT_ERR	10
CMALARM_LCHIP_LIN_SRCTL_ACCT_DROP_ERR	11
CMALARM_LCHIP_LIN_SRCTL_ACCT_ADDR_SIZE_ERR	12
CMALARM_LCHIP_SRAM_PARITY_ERR	13
CMALARM_LCHIP_UCODE_OVFLW_ERR	14
CMALARM_LCHIP_LOUT_HDRF_MTU_ERR	15
Chip Type: M Chip	
CMALARM_MCHIP_ECC_UNCORRECT_ERR	128
Chip Type: N Chip	
CMALARM_NCHIP_RDDMA_JBUS_TIMEOUT_ERR	256
CMALARM_NCHIP_RDDMA_FIFO_OVFLW_ERR	257
CMALARM_NCHIP_RDDMA_FIFO_UNFLW_ERR	258
CMALARM_NCHIP_RDDMA_SIZE_ERR	259
CMALARM_NCHIP_RDDMA_JBUS_CRC_ERR	260
CMALARM_NCHIP_WRDMA_PKTR_ERR	261
CMALARM_NCHIP_WRDMA_PKT_CRC_ERR	262
CMALARM_NCHIP_WRDMA_JBUS_TIMEOUT_ERR	263
CMALARM_NCHIP_WRDMA_FIFO_OVFLW_ERR	264
CMALARM_NCHIP_WRDMA_FIFO_UNFLW_ERR	265
CMALARM_NCHIP_WRDMA_PKT_LEN_ERR	266
CMALARM_NCHIP_WRDMA_JBUS_CRC_ERR	267

CMALARM_NCHIP_PKTR_DMA_AGE_ERR	268
CMALARM_NCHIP_PKTR_ICELLSIG_ERR	269
CMALARM_NCHIP_PKTR_FTTL_ERR	270
CMALARM_NCHIP_RODR_OFFSET_OVFLW_ERR	271
CMALARM_NCHIP_PKTR_TMO_CELL_ERR	272
CMALARM_NCHIP_PKTR_TMO_OUTRANGE_ERR	273
CMALARM_NCHIP_PKTR_MD_REQUEST_Q_OVFLW_ERR	274
CMALARM_NCHIP_PKTR_DMA_BUFFER_OVFLW_ERR	275
CMALARM_NCHIP_PKTR_GRT_OVFLW_ERR	276
CMALARM_NCHIP_FRQ_ERR	277
CMALARM_NCHIP_RODR_IN_Q_OVFLW_ERR	278
CMALARM_NCHIP_DBUF_CRC_ERR	279

Chip Type: R Chip	Code
CMALARM_RCHIP_SRAM_PARITY_ERR	512

Chip Type: R Chip	Code
CMALARM_ICHIP_WO_DESRD_ID_ERR	601
CMALARM_ICHIP_WO_DESRD_DATA_ERR	602
CMALARM_ICHIP_WO_DESRD_OFLOW_ERR	603
CMALARM_ICHIP_WO_HDRF_UCERR_ERR	604
CMALARM_ICHIP_WO_HDRF_MTUERR_ERR	605
CMALARM_ICHIP_WO_HDRF_PARITY_ERR	606
CMALARM_ICHIP_WO_HDRF_TOERR_ERR	607
CMALARM_ICHIP_WO_IP_CRC_ERR	608
CMALARM_ICHIP_WO_IP_INTER_ERR	609
CMALARM_ICHIP_WI_WAN_TIMEOUT_ERR	625

CMALARM_ICHIP_WI_FAB_TIMEOUT_ERR	626
CMALARM_ICHIP_RLDRAM_BIST_ERR	630
CMALARM_ICHIP_SDRAM_BIST_ERR	631
CMALARM_ICHIP_RLDRAM_PARITY_ERR	632
CMALARM_ICHIP_SDRAM_UNCORRECT_ERR	633
CMALARM_ICHIP_SDRAM_CORRECT_ERR	634
CMALARM_ICHIP_FUSE_DONE_ERR	635

According to the table above, the **279** error code corresponds to **CMALARM_NCHIP_DBUF_CRC_ERR**; this means that new CRC errors were seen on the NCHIP of this particular FPC, which is FPC as per the logs.

If you do not want to convert decimal to binary and vice versa, you may use the following shortcut:

For major alarms, the **Actual Error Code = (Error Code - 1)/2**, where **Error Code** is the code that you get in the log message. For example, if you get the following log:

```
Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major
Errors - Error code: 257
```

Actual Error Code = $(257-1)/2 = 128$. Similarly, for minor alarms, Actual Error Code = $(\text{Error Code})/2$



NOTE: Starting in Junos OS Release 18.2R1, on MX Series routers, the **show chassis alarms** output does not display error codes for PFE-related errors. You can use the following commands to view more details of the errors that caused the alarms:

- **show chassis errors active**
- **show chassis errors active detail**

Required Privilege Level view

Related Documentation

- *Configuring an RMON Alarm Entry and Its Attributes*
- *Chassis Conditions That Trigger Alarms*

List of Sample Output	show chassis alarms (Alarms Active) on page 210
	show chassis alarms (No Alarms Active) on page 210
	show chassis alarms (Fan Tray) on page 210
	show chassis alarms (MX150) on page 210
	show chassis alarms (MX104 Router) on page 210
	show chassis alarms (MX2010 Router) on page 211
	show chassis alarms (MX2020 Router) on page 211
	show chassis alarms (MX10003 Router) on page 211
	show chassis alarms (MX204 Router) on page 211
	show chassis alarms (MX2008 Router) on page 211
	show chassis alarms (MX960, MX480, and MX240 Routers showing Major CB Failure) on page 212
	show chassis alarms (PTX10008 Router) on page 212
	show chassis alarms (T4000 Router) on page 212
	show chassis alarms (Unreachable Destinations Present on a T Series Router) on page 213
	show chassis alarms (FPC Offline Due to Unreachable Destinations on a T Series Router) on page 213
	show chassis alarms (SCG Absent on a T Series Router) on page 213
	show chassis alarms (Alarms Active on a TX Matrix Router) on page 213
	show chassis alarms (TX Matrix Plus router with 3D SIBs) on page 214
	show chassis alarms (Alarms on a T4000 Router After the enhanced-mode Statement is Enabled) on page 216
	show chassis alarms (Backup Routing Engine) on page 216
	show chassis alarms (EX Series Switch) on page 216
	show chassis alarms (Alarms Active on the QFX Series and OCX Series Switches) on page 216
	show chassis alarms node-device (Alarms Active on the QFabric System) on page 216
	show chassis alarms (Alarms Active on the QFabric System) on page 217
	show chassis alarms (Alarms Active on an EX8200 Switch) on page 217
	show chassis alarms (EX9251 Switch) on page 217
	show chassis alarms (EX9253 Switch) on page 218
	show chassis alarms (Alarms Active on a PTX5000 Packet Transport Router) on page 218
	show chassis alarms (Mix of PDUs Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A) on page 218
	show chassis alarms (PDU Converter Failed Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A) on page 218
	show chassis alarms (No Power for System Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A) on page 219
	show chassis alarms (Alarms Active on an ACX2000 Universal Metro Router) on page 219
	show chassis alarms (Active Alarm to Indicate Status of the Bad SCB Clock on MX Series) on page 219
	show chassis alarms (Alarms active on a PTX1000 Packet Transport Router) on page 219
	show chassis alarms (MX10003 Router) on page 220
	show chassis alarms (Alarms active on a MX10008 Router) on page 221

Output Fields Table 15 on page 210 lists the output fields for the **show chassis alarms** command. Output fields are listed in the approximate order in which they appear.

Table 15: show chassis alarms Output Fields

Field Name	Field Description
Alarm time	Date and time the alarm was first recorded.
Class	Severity class for this alarm: Minor or Major .
Description	Information about the alarm.

Sample Output

show chassis alarms (Alarms Active)

```
user@host> show chassis alarms

3 alarms are currently active
Alarm time      Class  Description
2000-02-07 10:12:22 UTC Major fxp0: ethernet link down
2000-02-07 10:11:54 UTC Minor YELLOW ALARM - PEM 1 Removed
2000-02-07 10:11:03 UTC Minor YELLOW ALARM - Lower Fan Tray Removed
```

show chassis alarms (No Alarms Active)

```
user@host> show chassis alarms

No alarms are currently active
```

show chassis alarms (Fan Tray)

```
user@host> show chassis alarms

4 alarms currently active
Alarm time      Class  Description
2010-11-11 20:27:38 UTC Major Side Fan Tray 7 Failure
2010-11-11 20:27:13 UTC Minor Side Fan Tray 7 Overspeed
2010-11-11 20:27:13 UTC Major Side Fan Tray 5 Failure
2010-11-11 20:27:13 UTC Major Side Fan Tray 0 Failure
```

show chassis alarms (MX150)

```
user@host > show chassis alarms

1 alarms currently active
Alarm time      Class  Description
2016-06-04 01:49:43 PDT Major Fan Tray 1 Fan 0 failed
```

show chassis alarms (MX104 Router)

```
user@host >show chassis alarms
```

```
1 alarms currently active
Alarm time      Class  Description
2013-06-05 14:43:31 IST  Minor Backup RE Active
```

show chassis alarms (MX2010 Router)

```
user@host> show chassis alarms

7 alarms currently active
Alarm time      Class  Description
2012-08-07 00:46:06 PDT  Major Fan Tray 2 Failure
2012-08-06 18:24:36 PDT  Minor Redundant feed missing for PSM 6
2012-08-06 07:41:04 PDT  Minor Redundant feed missing for PSM 8
2012-08-04 02:42:06 PDT  Minor Redundant feed missing for PSM 5
2012-08-03 21:14:24 PDT  Minor Loss of communication with Backup RE
2012-08-03 12:26:03 PDT  Minor Redundant feed missing for PSM 4
2012-08-03 10:40:18 PDT  Minor Redundant feed missing for PSM 7
```

show chassis alarms (MX2020 Router)

```
user@host> show chassis alarms

1 alarms currently active
Alarm time Class Description
2012-10-03 12:14:59 PDT Minor Plane 0 not online
```

show chassis alarms (MX10003 Router)

```
user@host> show chassis alarms

9 alarms currently active
Alarm time      Class  Description
2017-07-13 21:50:31 PDT  Major FPC 1 Temperature Hot
2017-07-13 21:50:04 PDT  Minor FPC 1 PIC 1 Invalid port profile configuration
2017-07-13 21:49:13 PDT  Minor FPC 1 PIC 0 Invalid port profile configuration
2017-07-13 21:48:54 PDT  Major FPC 0 Temperature Hot
2017-07-13 21:43:57 PDT  Minor PEM 5 Not Present
2017-07-13 21:43:57 PDT  Minor PEM 4 Not Present
2017-07-13 21:43:54 PDT  Minor CB 1 Voltage Sensor ADS7830_0x4B Sensor Failed
2017-07-13 21:43:54 PDT  Minor CB 0 Voltage Sensor ADS7830_0x4B Sensor Failed
2017-07-13 21:43:31 PDT  Minor Loss of communication with Backup RE
```

show chassis alarms (MX204 Router)

```
user@host> show chassis alarms

1 alarms currently active
Alarm time      Class  Description
2017-11-05 22:13:03 PST  Major PEM 0 Not Present
```

show chassis alarms (MX2008 Router)

```
user@host>show chassis alarms

No alarms currently active
```

show chassis alarms (MX960, MX480, and MX240 Routers showing Major CB Failure)

A major CB 0 failure alarm occurs in the event of a bad CB (unknown or mismatched CBs do not trigger this alarm in Junos Release OS 12.3R9 and later). Following GRES or recovery, if the hardware issue persists, the traffic moves to the good CB and continues. If the alarm was triggered by something transient like a power zone budget on GRES, bringing the CB back online can clear the alarm. Otherwise, replace the bad CB. Note that fabric link speed is not impacted by an offline SCB. The alarm might be raised on CB0, CB1, and CB2.

```
user@host> show chassis alarms
```

```
6 alarms currently active
Alarm time      Class Description
2014-10-31 16:49:41 EDT Major PEM 3 Not OK
2014-10-31 16:49:41 EDT Major PEM 2 Not OK
2014-10-31 16:49:31 EDT Major CB 0 Failure
2014-10-31 16:49:31 EDT Minor CB 0 Fabric Chip 0 Not Online
2014-10-31 16:49:31 EDT Minor CB 0 Fabric Chip 1 Not Online
2014-10-31 16:49:31 EDT Minor Backup RE Active
```

show chassis alarms (PTX10008 Router)

```
user@host>show chassis alarms
```

```
12 alarms currently active
Alarm time      Class Description
2017-05-09 01:38:55 PDT Minor Loss of communication with Backup RE
2017-05-05 06:49:57 PDT Major FPC 5 LCPU Temp Sensor Access Failed
2017-05-05 06:49:57 PDT Major FPC 5 PE2 Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 PE1 Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 PEO Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 Exhaust-C Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 Exhaust-B Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 Exhaust-A Temp Sensor Hot
2017-05-05 06:49:57 PDT Major FPC 5 Intake-B Temp Sensor Access Failed
2017-05-05 06:49:57 PDT Major FPC 5 Intake-A Temp Sensor Access Failed
2017-05-05 06:49:57 PDT Major Fan Tray 0 Fan 5 running at lower speed
2017-05-05 06:49:57 PDT Major Fan Tray 0 Fan 4 running at lower speed
```

show chassis alarms (T4000 Router)

```
user@host> show chassis alarms
```

```
9 alarms currently active
Alarm time      Class Description
2007-06-02 01:41:10 UTC Minor RE 0 Not Supported
2007-06-02 01:41:10 UTC Minor CB 0 Not Supported
2007-06-02 01:41:10 UTC Minor Mixed Master and Backup RE types
2007-05-30 19:37:33 UTC Major SPMB 1 not online
2007-05-30 19:37:29 UTC Minor Front Bottom Fan Tray Absent
2007-05-30 19:37:13 UTC Major PEM 1 Input Failure
2007-05-30 19:37:13 UTC Major PEM 0 Not OK
2007-05-30 19:37:03 UTC Major PEM 0 Improper for Platform
2007-05-30 19:37:03 UTC Minor Backup RE Active
```


show chassis alarms (Unreachable Destinations Present on a T Series Router)

```

user@host> show chassis alarms

10 alarms currently active
Alarm time      Class  Description
2011-08-30 18:43:53 PDT Major FPC 7 has unreachable destinations
2011-08-30 18:43:53 PDT Major FPC 5 has unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 3 has unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 2 has unreachable destinations
2011-08-30 18:43:52 PDT Minor SIB 0 Not Online
2011-08-30 18:43:33 PDT Minor SIB 4 Not Online
2011-08-30 18:43:28 PDT Minor SIB 3 Not Online
2011-08-30 18:43:05 PDT Minor SIB 2 Not Online
2011-08-30 18:43:28 PDT Minor SIB 1 Not Online
2011-08-30 18:43:05 PDT Major PEM 1 Not Ok

```

show chassis alarms (FPC Offline Due to Unreachable Destinations on a T Series Router)

```

user@host> show chassis alarms

10 alarms currently active
Alarm time      Class  Description
2011-08-30 18:43:53 PDT Major FPC 7 offline due to unreachable destinations
2011-08-30 18:43:53 PDT Major FPC 5 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 3 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 2 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Minor SIB 0 Not Online
2011-08-30 18:43:33 PDT Minor SIB 4 Not Online
2011-08-30 18:43:28 PDT Minor SIB 3 Not Online
2011-08-30 18:43:05 PDT Minor SIB 2 Not Online
2011-08-30 18:43:28 PDT Minor SIB 1 Not Online
2011-08-30 18:43:05 PDT Major PEM 1 Not Ok

```

show chassis alarms (SCG Absent on a T Series Router)

```

user@host> show chassis alarms

4 alarms currently active
Alarm time      Class  Description
2011-01-23 21:42:46 PST Major SCG 0 NO EXT CLK MEAS-BKUP SCG ABS

```

show chassis alarms (Alarms Active on a TX Matrix Router)

```

user@host> show chassis alarms

scc-re0:
-----
8 alarms currently active
Alarm time      Class  Description
2004-08-05 18:43:53 PDT Minor LCC 0 Minor Errors
2004-08-05 18:43:53 PDT Minor SIB 3 Not Online
2004-08-05 18:43:52 PDT Major SIB 2 Absent
2004-08-05 18:43:52 PDT Major SIB 1 Absent
2004-08-05 18:43:52 PDT Major SIB 0 Absent
2004-08-05 18:43:33 PDT Major LCC 2 Major Errors
2004-08-05 18:43:28 PDT Major LCC 0 Major Errors
2004-08-05 18:43:05 PDT Minor LCC 2 Minor Errors
lcc0-re0:
-----

```

```

5 alarms currently active
Alarm time      Class  Description
2004-08-05 18:43:53 PDT  Minor  SIB 3 Not Online
2004-08-05 18:43:49 PDT  Major  SIB 2 Absent
2004-08-05 18:43:49 PDT  Major  SIB 1 Absent
2004-08-05 18:43:49 PDT  Major  SIB 0 Absent
2004-08-05 18:43:28 PDT  Major  PEM 0 Not OK
lcc2-re0:

```

```

-----
5 alarms currently active
Alarm time      Class  Description
2004-08-05 18:43:35 PDT  Minor  SIB 3 Not Online
2004-08-05 18:43:33 PDT  Major  SIB 2 Absent
2004-08-05 18:43:33 PDT  Major  SIB 1 Absent
2004-08-05 18:43:33 PDT  Major  SIB 0 Absent
2004-08-05 18:43:05 PDT  Minor  PEM 1 Absent

```

show chassis alarms (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis alarms
```

```

sfc0-re0:
-----
Alarm time      Class  Description
2014-04-08 14:35:13 IST  Minor  FPM 0 SFC Config Size Changed
2014-04-08 14:32:58 IST  Major  Fan Tray Failure
2014-04-08 14:31:53 IST  Major  SIB F13 6 Fault
2014-04-08 14:31:43 IST  Major  SIB F13 11 Fault
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 3 Fbr Cbl
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 15 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 14 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 14
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 10 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 8 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 8
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 7 fault
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 4 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 3 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 3
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 12 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 6 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 4 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 2 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 0 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 14 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 14
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 12 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 12
2014-04-08 14:31:08 IST  Major  SIB F13 6 CXP 10 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 8 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 8
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 6 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 6
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 4 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 4

```

```

2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 2 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 2
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 0 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 0
2014-04-08 14:31:08 IST Minor SIB F13 12 CXP 14 XC HSL Link Error
2014-04-08 14:29:27 IST Minor LCC 0 Minor Errors
2014-04-08 14:28:37 IST Major LCC 0 Major Errors
2014-04-08 14:28:37 IST Major LCC 2 Major Errors
2014-04-08 14:28:37 IST Minor LCC 2 Minor Errors
2014-04-08 14:28:24 IST Major SIB F2S 4/6 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/4 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/2 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/0 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/6 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/4 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/2 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/0 Absent
2014-04-08 14:28:24 IST Major SIB F13 9 Absent
2014-04-08 14:28:24 IST Major SIB F13 8 Absent
2014-04-08 14:28:24 IST Major SIB F13 7 Absent
2014-04-08 14:28:24 IST Major SIB F13 4 Absent
2014-04-08 14:28:24 IST Major SIB F13 1 Absent
2014-04-08 14:28:22 IST Major PEM 0 Input Failure
2014-04-08 14:28:22 IST Major PEM 0 Not OK

```

lcc0-re0:

12 alarms currently active

Alarm time	Class	Description
2014-04-08 14:36:08 IST	Minor	CB 1 M/S Switch Changed
2014-04-08 14:36:08 IST	Minor	CB 1 CHASSIS ID Changed
2014-04-08 14:35:43 IST	Minor	CB 0 M/S Switch Changed
2014-04-08 14:35:43 IST	Minor	CB 0 CHASSIS ID Changed
2014-04-08 14:29:30 IST	Minor	SIB 4 Not Online
2014-04-08 14:29:30 IST	Minor	SIB 3 Not Online
2014-04-08 14:29:30 IST	Minor	SIB 2 Not Online
2014-04-08 14:29:24 IST	Major	Rear Fan Tray Failure
2014-04-08 14:29:24 IST	Major	Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:24 IST	Major	Front Top Fan Tray Improper for Platform
2014-04-08 14:28:37 IST	Major	SIB 4 Absent
2014-04-08 14:28:37 IST	Major	SIB 3 Absent

lcc2-re0:

12 alarms currently active

Alarm time	Class	Description
2014-04-08 14:36:02 IST	Minor	CB 1 M/S Switch Changed
2014-04-08 14:36:02 IST	Minor	CB 1 CHASSIS ID Changed
2014-04-08 14:35:42 IST	Minor	CB 0 M/S Switch Changed
2014-04-08 14:34:42 IST	Minor	CB 0 CHASSIS ID Changed
2014-04-08 14:29:29 IST	Minor	SIB 0 CXP 7 Unsupported Optics
2014-04-08 14:29:27 IST	Major	Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:27 IST	Major	Front Top Fan Tray Improper for Platform
2014-04-08 14:29:25 IST	Minor	SIB 4 Not Online
2014-04-08 14:29:25 IST	Minor	SIB 3 Not Online
2014-04-08 14:28:47 IST	Major	PEM 0 Not OK
2014-04-08 14:28:36 IST	Major	SIB 2 Absent
2014-04-08 14:28:36 IST	Minor	Host 0 Boot from alternate media

lcc6-re0:

```
-----
2 alarms currently active
Alarm time           Class  Description
2013-11-06 04:03:56 PST  Minor SIB 1 CXP 0 XC HSL Link Error
2013-11-06 03:49:32 PST  Major PEM 1 Not OK
```

show chassis alarms (Alarms on a T4000 Router After the enhanced-mode Statement is Enabled)

To enable improved virtual private LAN service (VPLS) MAC address learning on T4000 routers, you must include the **enhanced-mode** statement at the **[edit chassis network-services]** hierarchy level and reboot the router. When router reboots, only the T4000 Type 5 FPCs are required to be present on the router. If there are any other FPCs (apart from T4000 Type 5 FPCs) on the T4000 router, such FPCs become offline, and FPC misconfiguration alarms are generated. The **show chassis alarm** command output displays FPC misconfiguration (**FPC *fpc-slot* misconfig**) as the reason for the generation of the alarms.

```
user@host> show chassis alarms

2 alarms currently active
Alarm time           Class  Description
2011-10-22 10:10:47 PDT  Major FPC 1 misconfig
2011-10-22 10:10:46 PDT  Major FPC 0 misconfig
```

show chassis alarms (Backup Routing Engine)

```
user@host> show chassis alarms

2 alarms are currently active
Alarm time           Class  Description
2005-04-07 10:12:22 PDT  Minor Host 1 Boot from alternate media
2005-04-07 10:11:54 PDT  Major Host 1 compact-flash missing in Boot List
```

show chassis alarms (EX Series Switch)

```
user@switch> show chassis alarms

4 alarms currently active
Alarm time           Class  Description
2014-03-12 15:36:09 UTC  Minor Require a Fan Tray upgrade
2014-03-12 15:00:02 UTC  Major PEM 0 Input Failure
2014-03-12 15:00:02 UTC  Major PEM 0 Not OK
2014-03-12 14:59:51 UTC  Minor Host 1 Boot from alternate media
```

show chassis alarms (Alarms Active on the QFX Series and OCX Series Switches)

```
user@switch> show chassis alarms

1 alarms currently active
Alarm time           Class  Description
2012-03-05 2:10:24 UTC  Major FPC 0 PEM 0 Airflow not matching Chassis Airflow
```

show chassis alarms node-device (Alarms Active on the QFabric System)

```
user@switch> show chassis alarms node-device Test
```

```
node-device ED3694
3 alarms currently active
Alarm time          Class Description
2011-08-24 16:04:15 UTC Major Test:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC Major Test:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC Major Test PEM 0 is not supported/powered
```

show chassis alarms (Alarms Active on the QFabric System)

```
user@switch> show chassis alarms
```

```
IC-1:
```

```
-----
1 alarms currently active
Alarm time          Class Description
2011-08-24 16:04:15 UTC Minor Backup RE Active
```

```
Test:
```

```
-----
3 alarms currently active
Alarm time          Class Description
2011-08-24 16:04:15 UTC Major Test:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC Major Test:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC Major Test PEM 0 is not supported/powered
```

```
SNG-0:
```

```
NW-NG-0:
```

```
-----
1 alarms currently active
Alarm time          Class Description
2011-08-24 15:49:27 UTC Major Test PEM 0 is not supported/powered
```

show chassis alarms (Alarms Active on an EX8200 Switch)

```
user@switch> show chassis alarms
```

```
6 alarms currently active
Alarm time          Class Description
2010-12-02 19:15:22 UTC Major Fan Tray Failure
2010-12-02 19:15:22 UTC Major Fan Tray Failure
2010-12-02 19:15:14 UTC Minor Check CB 0 Fabric Chip 1 on Plane/FPC/PFE: 1/5/0,
1/5/1, 1/5/2, 1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:15:14 UTC Minor Check CB 0 Fabric Chip 0 on Plane/FPC/PFE: 1/5/0,
1/5/1, 1/5/2, 1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:14:18 UTC Major PSU 1 Output Failure
2010-12-02 19:14:18 UTC Minor Loss of communication with Backup RE
```

show chassis alarms (EX9251 Switch)

```
user@switch> show chassis alarms
```

```
2 alarms currently active
Alarm time          Class Description
2018-03-08 05:13:10 PST Major PEM 0 Not Powered
2018-03-08 05:13:10 PST Major Fan Tray 2 is not present
```

show chassis alarms (EX9253 Switch)

```
user@switch> show chassis alarms
```

```
6 alarms currently active
```

Alarm time	Class	Description
2018-03-07 01:09:01 PST	Major	Power Budget:Insufficient Power
2018-03-06 23:56:34 PST	Minor	Loss of communication with Backup RE
2018-02-15 00:48:10 PST	Minor	PEM 3 Not Present
2018-02-15 00:48:10 PST	Minor	PEM 2 Not Present
2018-02-15 00:48:07 PST	Major	PEM 4 Not Powered
2018-02-15 00:48:07 PST	Major	PEM 1 Not Powered

show chassis alarms (Alarms Active on a PTX5000 Packet Transport Router)

```
user@host> show chassis alarms
```

```
23 alarms currently active
```

Alarm time	Class	Description
2011-07-12 16:22:05 PDT	Minor	No Redundant Power for Rear Chassis
2011-07-12 16:22:05 PDT	Major	PDU 0 PSM 1 Not OK
2011-07-12 16:21:57 PDT	Minor	No Redundant Power for Fan 0-2
2011-07-12 16:21:57 PDT	Major	PDU 0 PSM 0 Not OK
2011-07-12 15:56:06 PDT	Major	PDU 1 PSM 2 Not OK
2011-07-12 15:56:06 PDT	Minor	No Redundant Power for FPC 0-7
2011-07-12 15:56:06 PDT	Major	PDU 0 PSM 3 Not OK
2011-07-12 15:28:20 PDT	Major	PDU 0 PSM 2 Not OK
2011-07-12 15:19:14 PDT	Minor	Backup RE Active

show chassis alarms (Mix of PDUs Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA)

All PDUs installed on a PTX5000 router must be of the same type. The **Mix of PDUs** or **Power Manager Non Operational** alarm is raised when different types of PDUs are installed on a PTX5000 router.

```
user@host> show chassis alarms
```

```
15 alarms currently active
```

Alarm time	Class	Description
2013-03-19 23:03:53 PDT	Minor	No Redundant Power
2013-03-19 23:03:48 PDT	Minor	Mix of PDUs
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 3 Absent
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 2 Absent
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 1 Absent
2013-03-19 23:03:47 PDT	Minor	PDU 1 PSM 0 Absent
2013-03-19 23:03:46 PDT	Major	No CG Online

show chassis alarms (PDU Converter Failed Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA)

The **PDU Converter Failed** alarm is raised when one or more 36 V booster converter of a DC PDU fails. If two or more 36 V booster converter fails, fan trays fail and the router might get over heated. Therefore, when this alarm is raised, check the PDU and replace it, if required.

```
user@host> show chassis alarms
```

```

11 alarms currently active
Alarm time      Class Description
2013-12-11 22:14:13 PST Minor No Redundant Power for System
2013-12-11 22:14:10 PST Major PDU 0 PSM 7 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 6 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 5 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 4 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 3 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 2 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 1 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 0 Not OK
2013-12-11 22:14:10 PST Major PDU 0 Not OK
2013-12-11 22:14:01 PST Major PDU 0 Converter Failed

```

show chassis alarms (No Power for System Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA)

```

user@host> show chassis alarms

8 alarms currently active
Alarm time      Class Description
2013-11-19 01:58:41 PST Major No Power for System
2013-11-19 01:58:37 PST Major PDU 0 PSM 1 Not OK
2013-11-19 01:56:46 PST Major PDU 0 PSM 2 Not OK
2013-11-19 01:54:26 PST Major PDU 0 PSM 3 Not OK
2013-11-19 01:53:30 PST Major PDU 1 PSM 3 Not OK
2013-11-19 01:53:29 PST Major PDU 1 PSM 2 Not OK
2013-11-19 01:53:29 PST Major PDU 1 PSM 1 Not OK
2013-11-19 01:53:29 PST Major PDU 1 PSM 0 Not OK

```

show chassis alarms (Alarms Active on an ACX2000 Universal Metro Router)

```

user@host> show chassis alarms

7 alarms currently active
Alarm time      Class Description
2012-05-22 11:19:09 UTC Major xe-0/3/1: Link down
2012-05-22 11:19:09 UTC Major xe-0/3/0: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/7: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/6: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/3: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/2: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/1: Link down

```

show chassis alarms (Active Alarm to Indicate Status of the Bad SCB Clock on MX Series)

```

user@host> show chassis alarms

1 alarm currently active
Alarm time      Class Description
2013-08-06 07:48:35 PDT Major CB 0 19.44 MHz clock failure

```

show chassis alarms (Alarms active on a PTX1000 Packet Transport Router)

```

user@host> show chassis alarms

2 alarms currently active
Alarm time      Class Description
2004-08-10 00:55:49 UTC Major PEM 1 Not Present
2004-08-10 00:55:49 UTC Major PEM 0 Not Present

```

show chassis alarms (MX10003 Router)

If LCMD is down on the backup RE, then the following alarm is seen on the Master.

```
user@host> show chassis alarms
```

```
1 alarm currently active
Alarm time      Class  Description
2017-05-09 13:26:27 PDT Major  VMHost RE 1 host application failed
```

If LCMD is down on the master, then following alarms are displayed.

```
user@host> show chassis alarms
```

```
3 alarms currently active
Alarm time      Class  Description
2017-05-10 14:12:21 PDT Major  VMHost RE 0 host application failed
2017-05-10 14:12:16 PDT Minor  LCM Peer Absent
2017-05-09 13:26:27 PDT Major  VMHost RE 1 host application failed
```

If the LCMD process is crashing on the master, the system will switchover after one minute provided the backup RE LCMD connection is stable. The system will not switchover under the following conditions: if the backup RE LCMD connection is unstable or if the current master just gained mastership. When the master has just gained mastership, the switchover happens only after four minutes.

The LCM peer connection un-stable alarm is raised when the LCMD-CHASD IPC communication flaps three times within a small interval of two to three minutes. Once LCM peer connection un-stable alarm is raised, the connection status is monitored for two minutes.

```
user@host> show chassis alarms
```

```
7 alarms currently active
Alarm time      Class  Description
2017-05-29 10:12:17 PDT Minor  LCM Peer Connection un-stable
2017-05-29 09:04:17 PDT Minor  PEM 8 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 9 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 7 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 3 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 0 Not Powered
2017-05-29 09:04:08 PDT Minor  Loss of communication with Backup RE
```

If there are no more connection flaps within this two minutes time interval, the LCM peer connection un-stable alarm is cleared.

```
6 alarms currently active
Alarm time      Class  Description
2017-05-29 09:04:17 PDT Minor  PEM 8 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 9 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 7 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 3 Not Powered
2017-05-29 09:04:17 PDT Minor  PEM 0 Not Powered
2017-05-29 09:04:08 PDT Minor  Loss of communication with Backup RE
```

A major alarm is raised even if there is on one PLL lock error, and this alarm can be cleared only through an FPC restart.


```
user@host> show chassis alarms
```

```
4 alarms currently active
```

Alarm time		Class	Description
2017-02-16 09:06:06 PDT	Major	FPC 0 Major Errors	
2017-02-16 09:08:40 PDT	Major	FPC 1 Major Errors	
2017-02-16 09:11:47 PST	Minor	Fan Tray 3 Pair 1 Outer Fan running at over speed	
2017-02-16 09:11:47 PST	Minor	Fan Tray 3 Pair 1 Inner Fan running at over speed	

show chassis alarms (Alarms active on a MX10008 Router)

```
user@host> show chassis alarms
```

```
13 alarms currently active
```

Alarm time		Class	Description
2018-07-17 05:48:08 PDT	Major	FPC 2 I2C Failure	
2018-07-17 05:47:02 PDT	Minor	Mixed Master and Backup RE types	
2018-07-17 05:47:01 PDT	Major	Fan Tray 0 Fan 5 Failed	
2018-07-17 05:47:01 PDT	Major	Fan Tray 0 Fan 4 Failed	
2018-07-17 05:47:01 PDT	Minor	PEM 5 Not Powered	
2018-07-17 05:47:01 PDT	Minor	PEM 5 Feed 2 has no input source	
2018-07-17 05:47:01 PDT	Minor	PEM 5 Feed 1 has no input source	
2018-07-17 05:47:01 PDT	Minor	PEM 4 Not Powered	
2018-07-17 05:47:01 PDT	Minor	PEM 4 Feed 2 has no input source	
2018-07-17 05:47:01 PDT	Minor	PEM 4 Feed 1 has no input source	
2018-07-17 05:47:01 PDT	Minor	PEM 3 Not Powered	
2018-07-17 05:47:01 PDT	Minor	PEM 3 Feed 2 has no input source	
2018-07-17 05:47:01 PDT	Minor	PEM 3 Feed 1 has no input source	

show chassis environment

List of Syntax	Syntax on page 222
	Syntax (T320, T640, T1600, and T4000 Routers) on page 222
	Syntax (TX Matrix Routers) on page 222
	Syntax (TX Matrix Plus Routers) on page 222
	Syntax (MX Series Routers) on page 223
	Syntax (MX104 Universal Routing Platforms) on page 223
	Syntax (MX150 Router Appliance) on page 223
	Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms) on page 223
	Syntax (MX10003 and MX204 Universal Routing Platforms) on page 223
	Syntax (EX8200 Switches) on page 223
	Syntax (EX Series Switches except EX8200) on page 224
	Syntax (QFX Series) on page 224
	Syntax (OCX Series) on page 224
	Syntax (PTX Series Packet Transport Routers) on page 224
	Syntax (ACX Series Universal Metro Routers) on page 224
	Syntax (ACX5048 and ACX5096 Routers) on page 224
	Syntax (ACX500 Routers) on page 224

Syntax	show chassis environment
---------------	---------------------------------

Syntax (T320, T640, T1600, and T4000 Routers)	<pre>show chassis environment <cb cb-slot-number> <fpc fpc-slot-number> <fpm> <pem pem-slot-number> <routing-engine re-slot-number> <scg scg-slot-number> <sib sib-slot-number></pre>
--	---

Syntax (TX Matrix Routers)	<pre>show chassis environment <lcc number scc></pre>
-----------------------------------	--

Syntax (TX Matrix Plus Routers)	<pre>show chassis environment <cb cb-slot-number> <cip cip-slot-number> <fpc fpc-slot-number> <fpm> <lcc number> <pem pem-slot-number> <routing-engine re-slot-number> <scg scg-slot-number> <sfc number> <sib sib-slot-number></pre>
--	---

Syntax (MX Series Routers)	<pre>show chassis environment <all-members> <local> <member <i>member-id</i>></pre>
Syntax (MX104 Universal Routing Platforms)	<pre>show chassis environment <cb> <pem <i>pem-slot-number</i>> <routing-engine <i>re-slot-number</i>></pre>
Syntax (MX150 Router Appliance)	<pre>show chassis environment <pem <i>pem-slot-number</i>> <routing-engine <i>re-slot-number</i>></pre>
Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms)	<pre>show chassis environment <adc <i>adc-slot-number</i>> <all-members> <cb <i>cb-slot-number</i>> <fan <i>fantray-slot-number</i>> <fpc <i>fpc-slot-number</i>> <fpm> <local> <member <i>member-id</i>> <monitored> <psm <i>psm-slot-number</i>> <routing-engine <i>re-slot-number</i>> <sfb <i>sfb-slot-number</i>> <satellite [<i>fpc-slot slot-id</i> [<i>device-alias alias-name</i>]]></pre>
Syntax (MX10003 and MX204 Universal Routing Platforms)	<pre>show chassis environment <cb <i>cb-slot-number</i>> <fpc <i>fpc-slot-number</i>> <pem <i>pem-slot-number</i>> <routing-engine <i>re-slot-number</i>></pre>
Syntax (EX8200 Switches)	<pre>show chassis environment <all-members> <cb <i>cb-slot-number</i>> <fpc <i>fpc-slot-number</i>> <local> <member <i>member-id</i>> <psu <i>psu-slot-number</i>> <routing-engine <i>re-slot-number</i>></pre>

Syntax (EX Series Switches except EX8200)	<pre> show chassis environment <all-members> <fpc fpc-slot-number> <local> <member member-id> <power-supply-unit> <routing-engine> <satellite [fpc-slot slot-id device-alias alias-name]> </pre>
Syntax (QFX Series)	<pre> show chassis environment <cb slot-number <interconnect-device name>> <fpc slot-number <interconnect-device name>> <interconnect-device name <slot-number> <node-device name> <pem slot-number (interconnect-device name slot-number) (node-device name)> <routing-engine name <interconnect-device name slot-number>> </pre>
Syntax (OCX Series)	<pre> show chassis environment </pre>
Syntax (PTX Series Packet Transport Routers)	<pre> show chassis environment <cb cb-slot-number> <ccg ccg-slot-number > <fpc fpc-slot-number> <fpm> <monitored> <pdu pdu-slot-number> <routing-engine re-slot-number> <sib sib-slot-number> </pre>
Syntax (ACX Series Universal Metro Routers)	<pre> show chassis environment <cb cb-slot-number> <pem pem-slot-number> <routing-engine re-slot-number> </pre>
Syntax (ACX5048 and ACX5096 Routers)	<pre> show chassis environment <fpc slot-number> <pem> <routing-engine> </pre>
Syntax (ACX500 Routers)	<pre> show chassis environment <cb cb-slot-number> <routing-engine re-slot-number> </pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>

sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.
 Command introduced in Junos OS Release 11.1 for QFX Series.
 Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.
monitored option added in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.
 Command introduced in Junos OS Release 12.1 for T4000 Core Routers.
 Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
 Command introduced in Junos OS Release 12.3 for MX 2020 and MX2010 Universal Routing Platforms.
pem option introduced in Junos OS Release 12.3 for ACX4000 Universal Metro Routers.
satellite option introduced in Junos OS Release 14.2R3.
all-members, **local**, and **member** *member-id* options introduced in Junos OS Release 15.1 for MX2010 and MX2020 routers.
 Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.
 Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.
 Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.
 Command introduced in Junos OS Release 17.2 for PTX10008 Routers.
 Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.
 Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.
 Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.
 Command introduced in Junos OS Release 18.2 for EX9253 Switches.
 Command introduced in Junos OS Release 18.2R1 for MX10008 Routers.

Description Display environmental information about the router or switch chassis, including the temperature and information about the fans, power supplies, and Routing Engine.

In addition, on ACX4000 routers, display temperature information about the different channels of a Modular Interface Card (MIC). The number of channels displayed depends on the type of MIC installed.

Starting with Junos OS Release 14.1, the **show chassis environment cb cb-slot-number | ccg ccg-slot-number | fpc fpc-slot-number | fpm | monitored | pdu pdu-slot-number | routing-engine re-slot-number | sib sib-slot-number** operational mode command output displays environmental information for the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-PIA) and other components in a PTX5000 Packet Transport Router.

Options **none**—Display environmental information about the router or switch chassis. On a TX Matrix router, display environmental information about the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about the TX Matrix Plus router and its attached routers.

all-members—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for all the members of the Virtual Chassis configuration.

adc adc-slot-number—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the adapter cards. For MX2020 routers, replace

adc-slot-number with a value from 0 through 19. For MX2010 and MX2008 routers, replace ***adc-slot-number*** with a value from 0 through 9.

cb *cb-slot-number*—(ACX Series Universal Metro Routers, EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2020 routers, MX2010 routers, MX2008 routers, PTX Series Packet Transport Routers, QFX Series, and T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Control Board. On devices other than EX Series switches, replace ***cb-slot*** with 0 or 1.

cip *cip-slot-number*—(TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Connection Interface Panel (CIP). Replace the ***cip-slot-number*** variable with a value of 0 or 1.

cb *interconnect-device name*—(QFabric systems only) (Optional) Display chassis environmental information for the Control Board on an Interconnect device.

ccg *ccg-slot-number*—(PTX Series only) (Optional) Display chassis environmental information for the Centralized Clock Generator. Replace ***cb-slot*** with a value of 0 or 1.

fan *fantray-slot-number*—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the fan trays. Replace ***fantray-slot-number*** with a value from 0 through 3.

fpc *fpc-slot*—(EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2010 routers, MX2020 routers, MX2008 routers, PTX Series Packet Transport Routers, QFX Series, QFX3500 switches, QFabric systems, T Series routers, and TX Matrix Plus routers) (Optional) Display chassis environmental information for a specified Flexible PIC Concentrator. For MX2010 and MX2008 routers, replace ***fpc-slot*** with a value from 0 through 9. For MX2020 routers, replace ***fpc-slot*** with a value from 0 through 19. For information about FPC numbering, see [show chassis environment fpc](#). On a QFabric system, display chassis environmental information for a specified Flexible PIC Concentrator on an Interconnect device. On an EX Series switch, display chassis environmental information for a specified Flexible PIC Concentrator; see the hardware documentation for your switch for information on FPC numbering. On a TX Matrix Plus router with 3D SIBs replace ***fpc-slot*** with a value from 0 through 63.

fpm—(M120, M320, and M40e routers, MX2010 routers, MX2020 routers, MX2008 routers, PTX Series, Packet Transport Routers, T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the craft interface (FPM).

interconnect-device *name*—(QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.

lcc *number*—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for the local Virtual Chassis member.

member *member-id*—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for the specified member of the Virtual Chassis configuration. On MX Series routers, replace *member-id* with a value of **0** or **1**. For EX Series switches, see *member* for member ID values.

monitored—(MX2020 routers and PTX Series Packet Transport Routers only) (Optional) Display chassis environmental information for monitored temperatures only. Temperatures that are not included in temperature alarm computations are not displayed.

node-device *name*—(QFabric systems only) (Optional) Display chassis environmental information for the Node device.

pdu *pdu-slot-number*—(PTX Series only) (Optional) Display chassis environmental information for the specified power distribution unit.

pem—(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Interconnect device or Node device.

pem *pem-slot-number*—(ACX Series Universal Metro Routers, M120, M320, and M40e routers, MX Series routers, MX104 routers, QFX Series, and T Series routers only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Power Entry Module. For information about the options, see [show chassis environment pem](#).

psm *psm-slot-number*—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the power supply module. For MX2020 routers, replace *psm-slot-number* with a value from **0** through **17**. For MX2010 and MX2008 routers, replace *psm-slot-number* with a value from **0** through **8**.

psu *psu-slot-number*—(EX Series switches only) (Optional) Display chassis environmental information for a specified power supply.

routing-engine—(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Routing Engine on the specified Interconnect device.

routing-engine re-slot-number—(Optional) Display chassis environmental information for the specified Routing Engine. For information about the options, see [show chassis environment routing-engine](#).

satellite [fpc-slot slot-id | device-alias alias-name]—(Junos Fusion only)(Optional) Display chassis environmental information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scg—(T Series routers only) (Optional) Display chassis environmental information about the SONET Clock Generator.

scc—(TX Matrix routers only) (Optional) Display chassis environmental information about the TX Matrix router (switch-card chassis).

sfb sfb-slot-number—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the switch fabric board. Replace **sfb-slot-number** with a value from 0 through 7.

sfc number—(TX Matrix Plus routers only) (Optional) Display chassis environmental information about the respective TX Matrix Plus router (switch-fabric chassis). Replace **number** variable with 0.

sib sib-slot-number—(M320 routers, PTX Series Packet Transport Routers, and T Series routers only) (Optional) Display chassis environmental information about the specified switch interface board. For information about the options, see [show chassis environment sib](#).

Required Privilege Level view

Related Documentation

- [show chassis environment adc](#)
- [show chassis environment cb](#)
- [show chassis environment ccg](#)
- [show chassis environment cip](#)
- [show chassis environment fpc on page 307](#)
- [show chassis environment fpm](#)
- [show chassis environment lcc](#)
- [show chassis environment mcs](#)
- [show chassis environment monitored](#)
- [show chassis environment pcg](#)

- *show chassis environment pdu*
- [show chassis environment pem on page 367](#)
- *show chassis environment psm*
- *show chassis environment psu*
- [show chassis environment routing-engine on page 382](#)
- *show chassis environment scg*
- *show chassis environment sfb*
- *show chassis environment sib*
- *show chassis environment sfc*

List of Sample Output

[show chassis environment \(M5 Router\) on page 232](#)
[show chassis environment \(M7i Router\) on page 232](#)
[show chassis environment \(M10 Router\) on page 233](#)
[show chassis environment \(M10i Router\) on page 233](#)
[show chassis environment \(M20 Router\) on page 234](#)
[show chassis environment \(M40 Router\) on page 234](#)
[show chassis environment \(M40e Router\) on page 234](#)
[show chassis environment \(M120 Router\) on page 235](#)
[show chassis environment \(M160 Router\) on page 236](#)
[show chassis environment \(M320 Router\) on page 237](#)
[show chassis environment \(MX150\) on page 237](#)
[show chassis environment \(MX104 Router\) on page 238](#)
[show chassis environment \(MX240 Router\) on page 238](#)
[show chassis environment \(MX240 Router with SCBE\) on page 239](#)
[show chassis environment \(MX480 Router\) on page 240](#)
[show chassis environment \(MX480 Router with SCBE\) on page 241](#)
[show chassis environment \(MX960 Router\) on page 242](#)
[show chassis environment \(MX960 Router with SCBE\) on page 243](#)
[show chassis environment \(MX960 Router with MPC5EQ\) on page 245](#)
[show chassis environment \(MX2020 Router\) on page 249](#)
[show chassis environment \(MX2020 Router with MPC5EQ and MPC6E\) on page 259](#)
[show chassis environment \(MX2010 Router\) on page 263](#)
[show chassis environment \(MX2008 Router\) on page 268](#)
[show chassis environment \(T320 Router\) on page 272](#)
[show chassis environment \(MX10003 Router\) on page 273](#)
[show chassis environment \(MX10008 Router\) on page 274](#)
[show chassis environment \(MX204 Router\) on page 278](#)
[show chassis environment \(T640 Router\) on page 279](#)
[show chassis environment \(T4000 Router\) on page 280](#)
[show chassis environment \(TX Matrix Router\) on page 281](#)
[show chassis environment \(T1600 Router\) on page 283](#)
[show chassis environment \(TX Matrix Plus Router\) on page 284](#)
[show chassis environment \(TX Matrix Plus router with 3D SIBs\) on page 286](#)
[show chassis environment \(EX4200 Standalone Switch\) on page 289](#)

[show chassis environment \(EX8216 Switch\) on page 290](#)
[show chassis environment \(EX9200 Switch\) on page 290](#)
[show chassis environment \(EX9251 Switch\) on page 291](#)
[show chassis environment \(EX9253 Switch\) on page 291](#)
[show chassis environment \(QFX Series and OCX Series\) on page 292](#)
[show chassis environment interconnect-device \(QFabric System\) on page 293](#)
[show chassis environment node-device \(QFabric System\) on page 295](#)
[show chassis environment pem node-device \(QFabric System\) on page 295](#)
[show chassis environment \(PTX5000 Packet Transport Router\) on page 295](#)
[show chassis environment \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 298](#)
[show chassis environment \(PTX1000 Packet Transport Router\) on page 298](#)
[show chassis environment \(PTX10008 Router\) on page 299](#)
[show chassis environment \(PTX10016 Router\) on page 301](#)
[show chassis environment \(ACX2000 Universal Metro Router\) on page 304](#)
[show chassis environment \(ACX4000 Universal Metro Router\) on page 304](#)
[show chassis environment \(ACX5048 Router\) on page 305](#)
[show chassis environment \(ACX5096 Router\) on page 305](#)
[show chassis environment \(ACX500 Router\) on page 306](#)

Output Fields [Table 16 on page 231](#) lists the output fields for the **show chassis environment** command. Output fields are listed in the approximate order in which they appear.

Table 16: show chassis environment Output Fields

Field Name	Field Description
Class	<p>Information about the category or class of chassis component:</p> <ul style="list-style-type: none"> • Power: Power information: <ul style="list-style-type: none"> • (M5, M10, M20, and M40 routers and EX Series switches only) Power supply status: OK, Testing, (during initial power-on), Failed, or Absent. • (M7i, M10i, M40e, M120, M160, M320, and T Series routers and EX Series switches only) Power Entry Modules status: OK, Testing, (during initial power-on), Check, Failed, or Absent. • (PTX Series only) Power information is reported in PDU or PSM combinations. The status is: OK, Testing, (during initial power-on), Check, Failed, or Absent. • Temp: Temperature of air flowing through the chassis in degrees Celsius (C) and Fahrenheit (F). <ul style="list-style-type: none"> • On PTX Series Packet Transport Routers and MX2010, MX2020, and MX2008 Routers, multiple cooling zones are supported. FRU temperatures in each zone are coordinated with the fan speed of fan trays in those zones. • EX2200 switches have a side-to-rear cooling system. The Local Intake temperature is measured by the sensor on the right side of the chassis, and the Remote Intake temperature is measured by the sensor on the left side of the chassis. • Pic: On ACX4000 routers, multiple temperature channels on a MIC. The status is: OK and the Measurement is in degrees Celsius (C) and Fahrenheit (F). • Fan: Fan status: OK, Testing (during initial power-on), Failed, or Absent. On PTX Series Packet Transport Routers and MX2010, MX2020, and MX2008 Routers, multiple fan trays are supported. Fan status is reported in Fan Tray or Fan combinations. Measurement indicates actual fan RPM (PTX and MX2010, MX2020, and MX2008 Routers only). • Misc: Information about other components of the chassis. <ul style="list-style-type: none"> • On some routers, this field indicates the status of one or more additional components. • On the M40e, M160, and M320 router, Misc includes CIP (Connector Interface Panel). OK indicates that the CIP is present. Absent indicates that the CIP is not present. • On T Series routers, Misc includes CIP and SPMB (Switch Processor Mezzanine Board). OK indicates that the CIP or SPMB is present. Absent indicates that the CIP or SPMB is not present. • On PTX Series Packet Transport Routers, Misc includes the SPMB (Switch Processor Mezzanine Board). The SPMB is located on the control boards. OK indicates that the control board is present. Absent indicates that the control board is not present.
Item	<p>(MX2010, MX2020, and MX2008 Routers) Information about the chassis component: Routing Engines, Controls Boards (CBs), Switch Fabric Boards (SFBs), PICs, Flexible PIC Concentrators (FPCs), and Adapter Cards (ADCs).</p> <p>(MX104 Routers) Information about the chassis components: Routing Engines, Control Board (CB), Power Entry Module (PEM), and Compact Forwarding Engine Board (AFEB).</p> <p>(QFabric Systems) Information about the chassis component: Control Boards, Routing Engines, Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs), Node Devices, and Interconnect Devices.</p> <p>(QFX Series) Information about the chassis component: Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs).</p>

Table 16: show chassis environment Output Fields (continued)

Field Name	Field Description
Status	<p>(MX104, MX2010, MX2020, and MX2008 Routers) Status of the specified chassis component. For example, if the Class is Fan, the fan status can be:</p> <ul style="list-style-type: none"> • OK: The fans are operational. • Testing: The fans are being tested during initial power-on. • Failed: The fans have failed or the fans are not spinning. • Absent: The fan tray is not installed. <p>If the Class is Power, the power supply status can be:</p> <ul style="list-style-type: none"> • OK: The power component is operational. • Testing: The power component is being tested during initial power-on. • Check: There is insufficient power---that is, fewer than the minimum required feeds are connected. • Failed: The inputs leads have failed. • Absent: The power component is not installed.
Measurement	<p>(MX104, MX2010, MX2020, and MX2008 Routers) Dependant on the Class. For example, if the Class is Temp, indicates the temperature in degree Celsius and degrees Fahrenheit. If the Class is Fan, indicates actual fan RPM.</p>

Sample Output

show chassis environment (M5 Router)

```

user@host> show chassis environment

Class Item           Status Measurement
Power Power Supply A   OK
      Power Supply B   Absent
Temp  FPC 0            OK      30 degrees C / 86 degrees F
      FEB             OK      33 degrees C / 91 degrees F
      PS Intake        OK      27 degrees C / 80 degrees F
      PS Exhaust       OK      27 degrees C / 80 degrees F
      Routing Engine    OK      34 degrees C / 93 degrees F
Fans  Left Fan 1       OK      Spinning at normal speed
      Left Fan 2       OK      Spinning at normal speed
      Left Fan 3       OK      Spinning at normal speed
      Left Fan 4       OK      Spinning at normal speed
Misc  Craft Interface  OK

```

show chassis environment (M7i Router)

```

user@host> show chassis environment

Class Item           Status Measurement
Power Power Supply 0   OK
      Power Supply 1   Absent
Temp  Intake           OK      22 degrees C / 71 degrees F
      FPC 0            OK      23 degrees C / 73 degrees F
      Power Supplies    OK      23 degrees C / 73 degrees F
      CFEB Intake       OK      24 degrees C / 75 degrees F
      CFEB Exhaust      OK      29 degrees C / 84 degrees F

```

	Routing Engine	OK	26 degrees C / 78 degrees F
Fans	Fan 1	OK	Spinning at normal speed
	Fan 2	OK	Spinning at normal speed
	Fan 3	OK	Spinning at normal speed
	Fan 4	OK	Spinning at normal speed

show chassis environment (M10 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply A	OK	
	Power Supply B	Failed	
Temp	FPC 0	OK	36 degrees C / 96 degrees F
	FPC 1	OK	35 degrees C / 95 degrees F
	FEB	OK	34 degrees C / 93 degrees F
	PS Intake	OK	31 degrees C / 87 degrees F
	PS Exhaust	OK	34 degrees C / 93 degrees F
	Routing Engine	OK	35 degrees C / 95 degrees F
Fans	Left Fan 1	OK	Spinning at normal speed
	Left Fan 2	OK	Spinning at normal speed
	Left Fan 3	OK	Spinning at normal speed
	Left Fan 4	OK	Spinning at normal speed
Misc	Craft Interface	OK	

show chassis environment (M10i Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply 0	OK	
	Power Supply 1	OK	
	Power Supply 2	Absent	
	Power Supply 3	Absent	
Temp	Intake	OK	26 degrees C / 78 degrees F
	FPC 0	OK	27 degrees C / 80 degrees F
	FPC 1	OK	28 degrees C / 82 degrees F
	Lower Power Supplies	OK	29 degrees C / 84 degrees F
	Upper Power Supplies	OK	28 degrees C / 82 degrees F
	CFEB Intake	OK	27 degrees C / 80 degrees F
	CFEB Exhaust	OK	36 degrees C / 96 degrees F
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	27 degrees C / 80 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed
	Fan Tray 0 Fan 8	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	Absent	
	Fan Tray 1 Fan 2	Absent	
	Fan Tray 1 Fan 3	Absent	
	Fan Tray 1 Fan 4	Absent	
	Fan Tray 1 Fan 5	Absent	
	Fan Tray 1 Fan 6	Absent	

Fan Tray 1 Fan 7	Absent
Fan Tray 1 Fan 8	Absent

show chassis environment (M20 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply A	OK	
	Power Supply B	Absent	
Temp	FPC 0	OK	28 degrees C / 82 degrees F
	FPC 1	OK	27 degrees C / 80 degrees F
	Power Supply A	OK	22 degrees C / 71 degrees F
	Power Supply B	Absent	
	SSB 0	OK	30 degrees C / 86 degrees F
	Backplane	OK	22 degrees C / 71 degrees F
	Routing Engine 0	OK	26 degrees C / 78 degrees F
Fans	Routing Engine 1	Testing	
	Rear Fan	OK	Spinning at normal speed
	Front Upper Fan	OK	Spinning at normal speed
	Front Middle Fan	OK	Spinning at normal speed
	Front Bottom Fan	OK	Spinning at normal speed
Misc	Craft Interface	OK	

show chassis environment (M40 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply A	OK	
	Power Supply B	Absent	
Temp	FPC 3	OK	24 degrees C / 75 degrees F
	FPC 6	OK	26 degrees C / 78 degrees F
	SCB	OK	26 degrees C / 78 degrees F
	Backplane @ A1	OK	28 degrees C / 82 degrees F
	Backplane @ A2	OK	23 degrees C / 73 degrees F
	Routing Engine	OK	26 degrees C / 78 degrees F
Fans	Top Impeller	OK	Spinning at normal speed
	Bottom impeller	OK	Spinning at normal speed
	Rear Left Fan	OK	Spinning at normal speed
	Rear Center Fan	OK	Spinning at normal speed
	Rear Right Fan	OK	Spinning at normal speed
Misc	Craft Interface	OK	

show chassis environment (M40e Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	
	PEM 1	Absent	
Temp	PCG 0	OK	44 degrees C / 111 degrees F
	PCG 1	OK	47 degrees C / 116 degrees F
	Routing Engine 0	OK	40 degrees C / 104 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	MCS 0	OK	45 degrees C / 113 degrees F

MCS 1	OK	42 degrees C / 107 degrees F
SFM 0 SPP	OK	40 degrees C / 104 degrees F
SFM 0 SPR	OK	44 degrees C / 111 degrees F
SFM 1 SPP	OK	43 degrees C / 109 degrees F
SFM 1 SPR	OK	45 degrees C / 113 degrees F
FPC 0	OK	38 degrees C / 100 degrees F
FPC 1	OK	40 degrees C / 104 degrees F
FPC 2	OK	38 degrees C / 100 degrees F
FPC 4	OK	34 degrees C / 93 degrees F
FPC 5	OK	43 degrees C / 109 degrees F
FPC 6	OK	41 degrees C / 105 degrees F
FPC 7	OK	43 degrees C / 109 degrees F
FPM CMB	OK	28 degrees C / 82 degrees F
FPM Display	OK	28 degrees C / 82 degrees F
Fans Rear Bottom Blower	OK	Spinning at normal speed
Rear Top Blower	OK	Spinning at normal speed
Front Top Blower	OK	Spinning at normal speed
Fan Tray Rear Left	OK	Spinning at normal speed
Fan Tray Rear Right	OK	Spinning at normal speed
Fan Tray Front Left	OK	Spinning at normal speed
Fan Tray Front Right	OK	Spinning at normal speed
Misc CIP	OK	

show chassis environment (M120 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	
	PEM 1	OK	
	Routing Engine 0	OK	43 degrees C / 109 degrees F
	Routing Engine 1	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	33 degrees C / 91 degrees F
	CB 0 Exhaust A	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust B	OK	35 degrees C / 95 degrees F
	CB 1 Intake	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 1 Exhaust B	OK	35 degrees C / 95 degrees F
	FEB 3 Intake	OK	35 degrees C / 95 degrees F
	FEB 3 Exhaust A	OK	37 degrees C / 98 degrees F
	FEB 3 Exhaust B	OK	39 degrees C / 102 degrees F
	FEB 4 Intake	OK	33 degrees C / 91 degrees F
	FEB 4 Exhaust A	OK	39 degrees C / 102 degrees F
	FEB 4 Exhaust B	OK	36 degrees C / 96 degrees F
	FPC 2 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 2 Exhaust B	OK	31 degrees C / 87 degrees F
	FPC 3 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 3 Exhaust B	OK	33 degrees C / 91 degrees F
	FPC 4 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 4 Exhaust B	OK	30 degrees C / 86 degrees F
Fans	Front Top Tray Fan 1	OK	Spinning at normal speed
	Front Top Tray Fan 2	OK	Spinning at normal speed
	Front Top Tray Fan 3	OK	Spinning at normal speed
	Front Top Tray Fan 4	OK	Spinning at normal speed
	Front Top Tray Fan 5	OK	Spinning at normal speed
	Front Top Tray Fan 6	OK	Spinning at normal speed
	Front Top Tray Fan 7	OK	Spinning at normal speed
	Front Top Tray Fan 8	OK	Spinning at normal speed
	Front Bottom Tray Fan 1	OK	Spinning at normal speed

Front Bottom Tray Fan 2	OK	Spinning at normal speed
Front Bottom Tray Fan 3	OK	Spinning at normal speed
Front Bottom Tray Fan 4	OK	Spinning at normal speed
Front Bottom Tray Fan 5	OK	Spinning at normal speed
Front Bottom Tray Fan 6	OK	Spinning at normal speed
Front Bottom Tray Fan 7	OK	Spinning at normal speed
Front Bottom Tray Fan 8	OK	Spinning at normal speed
Rear Top Tray Fan 1	OK	Spinning at normal speed
Rear Top Tray Fan 2	OK	Spinning at normal speed
Rear Top Tray Fan 3	OK	Spinning at normal speed
Rear Top Tray Fan 4	OK	Spinning at normal speed
Rear Top Tray Fan 5	OK	Spinning at normal speed
Rear Top Tray Fan 6	OK	Spinning at normal speed
Rear Top Tray Fan 7	OK	Spinning at normal speed
Rear Top Tray Fan 8	OK	Spinning at normal speed
Rear Bottom Tray Fan 1	OK	Spinning at normal speed
Rear Bottom Tray Fan 2	OK	Spinning at normal speed
Rear Bottom Tray Fan 3	OK	Spinning at normal speed
Rear Bottom Tray Fan 4	OK	Spinning at normal speed
Rear Bottom Tray Fan 5	OK	Spinning at normal speed
Rear Bottom Tray Fan 6	OK	Spinning at normal speed
Rear Bottom Tray Fan 7	OK	Spinning at normal speed
Rear Bottom Tray Fan 8	OK	Spinning at normal speed

show chassis environment (M160 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	PEM 1
Temp	PCG 0	OK	45 degrees C / 113 degrees F
	PCG 1	Absent	
	Routing Engine 0	OK	35 degrees C / 95 degrees F
	Routing Engine 1	Absent	
	MCS 0	OK	50 degrees C / 122 degrees F
	SFM 0 SPP	OK	47 degrees C / 116 degrees F
	SFM 0 SPR	OK	49 degrees C / 120 degrees F
	SFM 1 SPP	OK	50 degrees C / 122 degrees F
	SFM 1 SPR	OK	50 degrees C / 122 degrees F
	SFM 2 SPP	OK	51 degrees C / 123 degrees F
	SFM 2 SPR	OK	52 degrees C / 125 degrees F
	SFM 3 SPP	OK	52 degrees C / 125 degrees F
	SFM 3 SPR	OK	48 degrees C / 118 degrees F
	FPC 0	OK	45 degrees C / 113 degrees F
	FPC 6	OK	43 degrees C / 109 degrees F
	FPM CMB	OK	31 degrees C / 87 degrees F
	FPM Display	OK	33 degrees C / 91 degrees F
Fans	Rear Bottom Blower	OK	Spinning at normal speed
	Rear Top Blower	OK	Spinning at normal speed
	Front Top Blower	OK	Spinning at normal speed
	Fan Tray Rear Left	OK	Spinning at normal speed
	Fan Tray Rear Right	OK	Spinning at normal speed
	Fan Tray Front Left	OK	Spinning at normal speed
	Fan Tray Front Right	OK	Spinning at normal speed
Misc	CIP	OK	

show chassis environment (M320 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	Absent	
	PEM 2	OK	
	PEM 3	OK	
	Routing Engine 0	OK	33 degrees C / 91 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	CB 0	OK	36 degrees C / 96 degrees F
	CB 1	OK	36 degrees C / 96 degrees F
	SIB 0	OK	38 degrees C / 100 degrees F
	SIB 1	OK	29 degrees C / 84 degrees F
	SIB 2	OK	38 degrees C / 100 degrees F
	SIB 3	OK	41 degrees C / 105 degrees F
	FPC 0 Intake	OK	28 degrees C / 82 degrees F
	FPC 0 Exhaust	OK	40 degrees C / 104 degrees F
	FPC 1 Intake	OK	29 degrees C / 84 degrees F
	FPC 1 Exhaust	OK	39 degrees C / 102 degrees F
	FPC 2 Intake	OK	28 degrees C / 82 degrees F
	FPC 2 Exhaust	OK	38 degrees C / 100 degrees F
	FPC 3 Intake	OK	28 degrees C / 82 degrees F
	FPC 3 Exhaust	OK	39 degrees C / 102 degrees F
	FPC 6 Intake	OK	27 degrees C / 80 degrees F
	FPC 6 Exhaust	OK	39 degrees C / 102 degrees F
	FPC 7 Intake	OK	27 degrees C / 80 degrees F
	FPC 7 Exhaust	OK	42 degrees C / 107 degrees F
	FPM GBUS	OK	30 degrees C / 86 degrees F
Fan	Top Left Front fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Rear Fan 1 (TOP)	OK	Spinning at normal speed
	Rear Fan 2	OK	Spinning at normal speed
	Rear Fan 3	OK	Spinning at normal speed
	Rear Fan 4	OK	Spinning at normal speed
	Rear Fan 5	OK	Spinning at normal speed
	Rear Fan 6	OK	Spinning at normal speed
	Rear Fan 7 (Bottom)	OK	Spinning at normal speed
Misc	CIP	OK	

show chassis environment (MX150)

user@host> show chassis environment

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
Temp	FPC 0 Sensor 1	OK	42 degrees C / 107 degrees F
	FPC 0 Sensor 2	OK	39 degrees C / 102 degrees F
	FPC 0 Coretemp	OK	75 degrees C / 167 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed

show chassis environment (MX104 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	34 degrees C / 93 degrees F
	PEM 1	Absent	
	ABB 0 Intake	OK	33 degrees C / 91 degrees F
	ABB 0 Exhaust A	OK	42 degrees C / 107 degrees F
	ABB 0 Exhaust B	OK	43 degrees C / 109 degrees F
	ABB 1 Intake	Absent	
	ABB 1 Exhaust A	Absent	
	ABB 1 Exhaust B	Absent	
	Routing Engine 0	OK	34 degrees C / 93 degrees F
	Routing Engine 0 CPU	OK	46 degrees C / 114 degrees F
	Routing Engine 1	Absent	
	Routing Engine 1 CPU	Absent	
	AFEB 0 AFEB Processor	OK	33 degrees C / 91 degrees F
	Fan 1	OK	Spinning at normal speed
Fans	Fan 2	OK	Spinning at normal speed
	Fan 3	OK	Spinning at normal speed
	Fan 4	OK	Spinning at normal speed
	Fan 5	OK	Spinning at normal speed

show chassis environment (MX240 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 0 Exhaust B	OK	38 degrees C / 100 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 SF A	OK	49 degrees C / 120 degrees F
	CB 0 SF B	OK	41 degrees C / 105 degrees F
	CB 1 Intake	OK	37 degrees C / 98 degrees F
	CB 1 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 SF A	OK	47 degrees C / 116 degrees F
	CB 1 SF B	OK	41 degrees C / 105 degrees F
	FPC 1 Intake	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust B	OK	53 degrees C / 127 degrees F
	FPC 1 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 1 I3 0 Chip	OK	53 degrees C / 127 degrees F
	FPC 1 I3 1 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	47 degrees C / 116 degrees F
	FPC 1 I3 2 Chip	OK	49 degrees C / 120 degrees F
	FPC 1 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 1 IA 0 Chip	OK	44 degrees C / 111 degrees F

	FPC 1 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 Intake	OK	32 degrees C / 89 degrees F
	FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
	FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 2 I3 1 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 1 Chip	OK	55 degrees C / 131 degrees F
	FPC 2 I3 2 TSensor	OK	49 degrees C / 120 degrees F
	FPC 2 I3 2 Chip	OK	52 degrees C / 125 degrees F
	FPC 2 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 2 I3 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 2 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 2 IA 1 Chip	OK	53 degrees C / 127 degrees F
Fans	Front Fan	OK	Spinning at normal speed
	Middle Fan	OK	Spinning at normal speed
	Rear Fan	OK	Spinning at normal speed

show chassis environment (MX240 Router with SCBE)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 0 Exhaust B	OK	38 degrees C / 100 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 XF A	OK	49 degrees C / 120 degrees F
	CB 0 XF B	OK	41 degrees C / 105 degrees F
	CB 1 Intake	OK	37 degrees C / 98 degrees F
	CB 1 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 XF A	OK	47 degrees C / 116 degrees F
	CB 1 XF B	OK	41 degrees C / 105 degrees F
	FPC 1 Intake	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust B	OK	53 degrees C / 127 degrees F
	FPC 1 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 1 I3 0 Chip	OK	53 degrees C / 127 degrees F
	FPC 1 I3 1 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	47 degrees C / 116 degrees F
	FPC 1 I3 2 Chip	OK	49 degrees C / 120 degrees F
	FPC 1 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 1 IA 0 Chip	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 Intake	OK	32 degrees C / 89 degrees F

	FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
	FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 2 I3 1 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 1 Chip	OK	55 degrees C / 131 degrees F
	FPC 2 I3 2 TSensor	OK	49 degrees C / 120 degrees F
	FPC 2 I3 2 Chip	OK	52 degrees C / 125 degrees F
	FPC 2 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 2 I3 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 2 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 2 IA 1 Chip	OK	53 degrees C / 127 degrees F
Fans	Front Fan	OK	Spinning at normal speed
	Middle Fan	OK	Spinning at normal speed
	Rear Fan	OK	Spinning at normal speed

show chassis environment (MX480 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	35 degrees C / 95 degrees F
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	44 degrees C / 111 degrees F
	Routing Engine 1	OK	45 degrees C / 113 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 SF A	OK	51 degrees C / 123 degrees F
	CB 0 SF B	OK	44 degrees C / 111 degrees F
	CB 1 Intake	OK	36 degrees C / 96 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	40 degrees C / 104 degrees F
	CB 1 ACBC	OK	37 degrees C / 98 degrees F
	CB 1 SF A	OK	50 degrees C / 122 degrees F
	CB 1 SF B	OK	43 degrees C / 109 degrees F
	FPC 0 Intake	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	51 degrees C / 123 degrees F
	FPC 0 I3 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 0 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 0 I3 3 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust A	OK	41 degrees C / 105 degrees F
	FPC 1 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 1 I3 0 TSensor	OK	51 degrees C / 123 degrees F

	FPC 1 I3 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 1 I3 1 TSensor	OK	48 degrees C / 118 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 I3 2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 IA 1 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 IA 1 Chip	OK	50 degrees C / 122 degrees F
Fans	Top Rear Fan	OK	Spinning at normal speed
	Bottom Rear Fan	OK	Spinning at normal speed
	Top Middle Fan	OK	Spinning at normal speed
	Bottom Middle Fan	OK	Spinning at normal speed
	Top Front Fan	OK	Spinning at normal speed
	Bottom Front Fan	OK	Spinning at normal speed

show chassis environment (MX480 Router with SCBE)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	35 degrees C / 95 degrees F
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	44 degrees C / 111 degrees F
	Routing Engine 1	OK	45 degrees C / 113 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 XF A	OK	51 degrees C / 123 degrees F
	CB 0 XF B	OK	44 degrees C / 111 degrees F
	CB 1 Intake	OK	36 degrees C / 96 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	40 degrees C / 104 degrees F
	CB 1 ACBC	OK	37 degrees C / 98 degrees F
	CB 1 XF A	OK	50 degrees C / 122 degrees F
	CB 1 XF B	OK	43 degrees C / 109 degrees F
	FPC 0 Intake	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	51 degrees C / 123 degrees F
	FPC 0 I3 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 0 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 0 I3 3 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust A	OK	41 degrees C / 105 degrees F
	FPC 1 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 1 I3 0 TSensor	OK	51 degrees C / 123 degrees F

	FPC 1 I3 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 1 I3 1 TSensor	OK	48 degrees C / 118 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 I3 2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 IA 1 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 IA 1 Chip	OK	50 degrees C / 122 degrees F
Fans	Top Rear Fan	OK	Spinning at normal speed
	Bottom Rear Fan	OK	Spinning at normal speed
	Top Middle Fan	OK	Spinning at normal speed
	Bottom Middle Fan	OK	Spinning at normal speed
	Top Front Fan	OK	Spinning at normal speed
	Bottom Front Fan	OK	Spinning at normal speed

show chassis environment (MX960 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	Absent	
	PEM 2	Check	
	PEM 3	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	37 degrees C / 98 degrees F
	Routing Engine 1	Absent	
	CB 0 Intake	OK	24 degrees C / 75 degrees F
	CB 0 Exhaust A	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust B	OK	27 degrees C / 80 degrees F
	CB 1 Intake	Absent	
	CB 1 Exhaust A	Absent	
	CB 1 Exhaust B	Absent	
	CB 1 ACBC	Absent	
	CB 1 SF A	Absent	
	CB 1 SF B	Absent	
	CB 2 Intake	Absent	
	CB 2 Exhaust A	Absent	
	CB 2 Exhaust B	Absent	
	CB 2 ACBC	Absent	
	CB 2 SF A	Absent	
	CB 2 SF B	Absent	
	FPC 4 Intake	OK	24 degrees C / 75 degrees F
	FPC 4 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 4 Exhaust B	OK	38 degrees C / 100 degrees F
	FPC 7 Intake	OK	24 degrees C / 75 degrees F
	FPC 7 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 7 Exhaust B	OK	42 degrees C / 107 degrees F
Fans	Top Fan Tray Temp	Failed	
	Top Tray Fan 1	OK	Spinning at normal speed
	Top Tray Fan 2	OK	Spinning at normal speed
	Top Tray Fan 3	OK	Spinning at normal speed
	Top Tray Fan 4	OK	Spinning at normal speed
	Top Tray Fan 5	OK	Spinning at normal speed
	Top Tray Fan 6	OK	Spinning at normal speed
	Bottom Fan Tray Temp	Failed	
	Bottom Tray Fan 1	OK	Spinning at normal speed
	Bottom Tray Fan 2	OK	Spinning at normal speed

Bottom Tray Fan 3	OK	Spinning at normal speed
Bottom Tray Fan 4	OK	Spinning at normal speed
Bottom Tray Fan 5	OK	Spinning at normal speed
Bottom Tray Fan 6	OK	Spinning at normal speed

show chassis environment (MX960 Router with SCBE)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	50 degrees C / 122 degrees F
	PEM 2	OK	50 degrees C / 122 degrees F
	PEM 3	OK	50 degrees C / 122 degrees F
	Routing Engine 0	OK	42 degrees C / 107 degrees F
	Routing Engine 0 CPU	OK	51 degrees C / 123 degrees F
	Routing Engine 1	OK	39 degrees C / 102 degrees F
	Routing Engine 1 CPU	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	35 degrees C / 95 degrees F
	CB 0 Exhaust A	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust B	OK	43 degrees C / 109 degrees F
	CB 0 ACBC	OK	38 degrees C / 100 degrees F
	CB 0 XF A	OK	53 degrees C / 127 degrees F
	CB 0 XF B	OK	47 degrees C / 116 degrees F
	CB 1 Intake	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust A	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust B	OK	41 degrees C / 105 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 XF A	OK	52 degrees C / 125 degrees F
	CB 1 XF B	OK	47 degrees C / 116 degrees F
	CB 2 Intake	OK	32 degrees C / 89 degrees F
	CB 2 Exhaust A	OK	30 degrees C / 86 degrees F
	CB 2 Exhaust B	OK	35 degrees C / 95 degrees F
	CB 2 ACBC	OK	33 degrees C / 91 degrees F
	CB 2 XF A	OK	51 degrees C / 123 degrees F
	CB 2 XF B	OK	50 degrees C / 122 degrees F
	FPC 0 Intake	OK	35 degrees C / 95 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	50 degrees C / 122 degrees F
	FPC 0 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	50 degrees C / 122 degrees F
	FPC 0 I3 2 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	41 degrees C / 105 degrees F
	FPC 0 I3 3 Chip	OK	44 degrees C / 111 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	36 degrees C / 96 degrees F
	FPC 1 Exhaust A	OK	47 degrees C / 116 degrees F
	FPC 1 Exhaust B	OK	43 degrees C / 109 degrees F
	FPC 1 LU 0 TCAM TSensor	OK	53 degrees C / 127 degrees F
	FPC 1 LU 0 TCAM Chip	OK	57 degrees C / 134 degrees F
	FPC 1 LU 0 TSensor	OK	53 degrees C / 127 degrees F
	FPC 1 LU 0 Chip	OK	60 degrees C / 140 degrees F
	FPC 1 MQ 0 TSensor	OK	53 degrees C / 127 degrees F
	FPC 1 MQ 0 Chip	OK	56 degrees C / 132 degrees F

FPC 1 LU 1 TCAM TSensor	OK	51 degrees C / 123 degrees F
FPC 1 LU 1 TCAM Chip	OK	52 degrees C / 125 degrees F
FPC 1 LU 1 TSensor	OK	51 degrees C / 123 degrees F
FPC 1 LU 1 Chip	OK	53 degrees C / 127 degrees F
FPC 1 MQ 1 TSensor	OK	51 degrees C / 123 degrees F
FPC 1 MQ 1 Chip	OK	58 degrees C / 136 degrees F
FPC 2 Intake	OK	35 degrees C / 95 degrees F
FPC 2 Exhaust A	OK	39 degrees C / 102 degrees F
FPC 2 Exhaust B	OK	54 degrees C / 129 degrees F
FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
FPC 2 I3 0 Chip	OK	59 degrees C / 138 degrees F
FPC 2 I3 1 TSensor	OK	48 degrees C / 118 degrees F
FPC 2 I3 1 Chip	OK	52 degrees C / 125 degrees F
FPC 2 I3 2 TSensor	OK	47 degrees C / 116 degrees F
FPC 2 I3 2 Chip	OK	49 degrees C / 120 degrees F
FPC 2 I3 3 TSensor	OK	41 degrees C / 105 degrees F
FPC 2 I3 3 Chip	OK	44 degrees C / 111 degrees F
FPC 2 IA 0 TSensor	OK	47 degrees C / 116 degrees F
FPC 2 IA 0 Chip	OK	46 degrees C / 114 degrees F
FPC 2 IA 1 TSensor	OK	45 degrees C / 113 degrees F
FPC 2 IA 1 Chip	OK	49 degrees C / 120 degrees F
FPC 3 Intake	OK	34 degrees C / 93 degrees F
FPC 3 Exhaust A	OK	34 degrees C / 93 degrees F
FPC 3 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 3 I3 0 TSensor	OK	48 degrees C / 118 degrees F
FPC 3 I3 0 Chip	OK	52 degrees C / 125 degrees F
FPC 3 I3 1 TSensor	OK	46 degrees C / 114 degrees F
FPC 3 I3 1 Chip	OK	48 degrees C / 118 degrees F
FPC 3 IA 0 TSensor	OK	41 degrees C / 105 degrees F
FPC 3 IA 0 Chip	OK	40 degrees C / 104 degrees F
FPC 5 Intake	OK	42 degrees C / 107 degrees F
FPC 5 Exhaust A	OK	42 degrees C / 107 degrees F
FPC 5 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 5 LU 0 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 0 Chip	OK	54 degrees C / 129 degrees F
FPC 5 LU 1 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 1 Chip	OK	61 degrees C / 141 degrees F
FPC 5 LU 2 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 5 LU 3 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 5 MQ 0 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 1 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 2 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 5 MQ 3 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 3 Chip	OK	45 degrees C / 113 degrees F
FPC 7 Intake	OK	36 degrees C / 96 degrees F
FPC 7 Exhaust A	OK	35 degrees C / 95 degrees F
FPC 7 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 7 QX 0 TSensor	OK	42 degrees C / 107 degrees F
FPC 7 QX 0 Chip	OK	47 degrees C / 116 degrees F
FPC 7 LU 0 TCAM TSensor	OK	42 degrees C / 107 degrees F
FPC 7 LU 0 TCAM Chip	OK	44 degrees C / 111 degrees F
FPC 7 LU 0 TSensor	OK	42 degrees C / 107 degrees F
FPC 7 LU 0 Chip	OK	46 degrees C / 114 degrees F
FPC 7 MQ 0 TSensor	OK	42 degrees C / 107 degrees F
FPC 7 MQ 0 Chip	OK	45 degrees C / 113 degrees F

	FPC 8 Intake	OK	33 degrees C / 91 degrees F
	FPC 8 Exhaust A	OK	33 degrees C / 91 degrees F
	FPC 8 Exhaust B	OK	36 degrees C / 96 degrees F
	FPC 8 I3 0 TSensor	OK	38 degrees C / 100 degrees F
	FPC 8 I3 0 Chip	OK	43 degrees C / 109 degrees F
	FPC 8 BDS 0 TSensor	OK	37 degrees C / 98 degrees F
	FPC 8 BDS 0 Chip	OK	36 degrees C / 96 degrees F
	FPC 8 IA 0 TSensor	OK	37 degrees C / 98 degrees F
	FPC 8 IA 0 Chip	OK	37 degrees C / 98 degrees F
	FPC 10 Intake	OK	38 degrees C / 100 degrees F
	FPC 10 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 10 Exhaust B	OK	41 degrees C / 105 degrees F
	FPC 10 I3 0 TSensor	OK	40 degrees C / 104 degrees F
	FPC 10 I3 0 Chip	OK	42 degrees C / 107 degrees F
	FPC 10 I3 1 TSensor	OK	40 degrees C / 104 degrees F
	FPC 10 I3 1 Chip	OK	44 degrees C / 111 degrees F
	FPC 10 I3 2 TSensor	OK	42 degrees C / 107 degrees F
	FPC 10 I3 2 Chip	OK	43 degrees C / 109 degrees F
	FPC 10 I3 3 TSensor	OK	39 degrees C / 102 degrees F
	FPC 10 I3 3 Chip	OK	44 degrees C / 111 degrees F
	FPC 10 IA 0 TSensor	OK	36 degrees C / 96 degrees F
	FPC 10 IA 0 Chip	OK	36 degrees C / 96 degrees F
	FPC 10 IA 1 TSensor	OK	43 degrees C / 109 degrees F
	FPC 10 IA 1 Chip	OK	42 degrees C / 107 degrees F
Fans	Top Fan Tray Temp	OK	37 degrees C / 98 degrees F
	Top Tray Fan 1	OK	Spinning at normal speed
	Top Tray Fan 2	OK	Spinning at normal speed
	Top Tray Fan 3	OK	Spinning at normal speed
	Top Tray Fan 4	OK	Spinning at normal speed
	Top Tray Fan 5	OK	Spinning at normal speed
	Top Tray Fan 6	OK	Spinning at normal speed
	Bottom Fan Tray Temp	OK	28 degrees C / 82 degrees F
	Bottom Tray Fan 1	OK	Spinning at normal speed
	Bottom Tray Fan 2	OK	Spinning at normal speed
	Bottom Tray Fan 3	OK	Spinning at normal speed
	Bottom Tray Fan 4	OK	Spinning at normal speed
	Bottom Tray Fan 5	OK	Spinning at normal speed
	Bottom Tray Fan 6	OK	Spinning at normal speed

show chassis environment (MX960 Router with MPC5EQ)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	50 degrees C / 122 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	OK	45 degrees C / 113 degrees F
	PEM 3	Absent	
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 0 CPU	OK	30 degrees C / 86 degrees F
	Routing Engine 1	Present	
	Routing Engine 1 CPU	Present	
	CB 0 Intake	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust A	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust B	OK	34 degrees C / 93 degrees F
	CB 0 ACBC	OK	32 degrees C / 89 degrees F
	CB 0 XF A	OK	49 degrees C / 120 degrees F
	CB 0 XF B	OK	45 degrees C / 113 degrees F
	CB 1 Intake	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust A	OK	26 degrees C / 78 degrees F

CB 1 Exhaust B	OK	27 degrees C / 80 degrees F
CB 1 ACBC	OK	26 degrees C / 78 degrees F
CB 1 XF A	OK	32 degrees C / 89 degrees F
CB 1 XF B	OK	32 degrees C / 89 degrees F
CB 2 Intake	OK	28 degrees C / 82 degrees F
CB 2 Exhaust A	OK	27 degrees C / 80 degrees F
CB 2 Exhaust B	OK	33 degrees C / 91 degrees F
CB 2 ACBC	OK	30 degrees C / 86 degrees F
CB 2 XF A	OK	48 degrees C / 118 degrees F
CB 2 XF B	OK	46 degrees C / 114 degrees F
FPC 0 Intake	OK	38 degrees C / 100 degrees F
FPC 0 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 0 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 0 XL TSen	OK	48 degrees C / 118 degrees F
FPC 0 XL Chip	OK	50 degrees C / 122 degrees F
FPC 0 XL_XR0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR0 Chip	OK	53 degrees C / 127 degrees F
FPC 0 XL_XR1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR1 Chip	OK	54 degrees C / 129 degrees F
FPC 0 XQ TSen	OK	48 degrees C / 118 degrees F
FPC 0 XQ Chip	OK	52 degrees C / 125 degrees F
FPC 0 XQ_XR0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XQ_XR0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XQ_XR1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XQ_XR1 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XM 0 TSen	OK	53 degrees C / 127 degrees F
FPC 0 XM 0 Chip	OK	63 degrees C / 145 degrees F
FPC 0 XM 1 TSen	OK	53 degrees C / 127 degrees F
FPC 0 XM 1 Chip	OK	46 degrees C / 114 degrees F
FPC 0 PLX PCIe Switch TSe	OK	53 degrees C / 127 degrees F
FPC 0 PLX PCIe Switch Chi	OK	66 degrees C / 150 degrees F
FPC 1 Intake	OK	31 degrees C / 87 degrees F
FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
FPC 1 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 1 LU 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 0 Chip	OK	47 degrees C / 116 degrees F
FPC 1 LU 1 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 1 Chip	OK	42 degrees C / 107 degrees F
FPC 1 LU 2 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 2 Chip	OK	46 degrees C / 114 degrees F
FPC 1 LU 3 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 1 XM 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 XM 0 Chip	OK	49 degrees C / 120 degrees F
FPC 1 XF 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 XF 0 Chip	OK	63 degrees C / 145 degrees F
FPC 1 PLX Switch TSen	OK	41 degrees C / 105 degrees F
FPC 1 PLX Switch Chip	OK	43 degrees C / 109 degrees F
FPC 3 Intake	OK	31 degrees C / 87 degrees F
FPC 3 Exhaust A	OK	37 degrees C / 98 degrees F
FPC 3 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 3 LU 0 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 0 Chip	OK	43 degrees C / 109 degrees F
FPC 3 LU 1 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 1 Chip	OK	46 degrees C / 114 degrees F
FPC 3 LU 2 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 2 Chip	OK	40 degrees C / 104 degrees F
FPC 3 LU 3 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 3 Chip	OK	41 degrees C / 105 degrees F
FPC 3 MQ 0 TSen	OK	37 degrees C / 98 degrees F

FPC 3 MQ 0 Chip	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 Chip	OK	40 degrees C / 104 degrees F
FPC 3 MQ 2 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 2 Chip	OK	36 degrees C / 96 degrees F
FPC 3 MQ 3 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 3 Chip	OK	38 degrees C / 100 degrees F
FPC 4 Intake	OK	34 degrees C / 93 degrees F
FPC 4 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 4 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 4 XL TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL Chip	OK	47 degrees C / 116 degrees F
FPC 4 XL_XR0 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL_XR0 Chip	OK	48 degrees C / 118 degrees F
FPC 4 XL_XR1 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL_XR1 Chip	OK	47 degrees C / 116 degrees F
FPC 4 XQ TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ Chip	OK	47 degrees C / 116 degrees F
FPC 4 XQ_XR0 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 4 XQ_XR1 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ_XR1 Chip	OK	58 degrees C / 136 degrees F
FPC 4 XM 0 TSen	OK	51 degrees C / 123 degrees F
FPC 4 XM 0 Chip	OK	61 degrees C / 141 degrees F
FPC 4 XM 1 TSen	OK	51 degrees C / 123 degrees F
FPC 4 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 4 PLX PCIe Switch TSe	OK	51 degrees C / 123 degrees F
FPC 4 PLX PCIe Switch Chi	OK	60 degrees C / 140 degrees F
FPC 5 Intake	OK	34 degrees C / 93 degrees F
FPC 5 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 5 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 5 XL TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL Chip	OK	47 degrees C / 116 degrees F
FPC 5 XL_XR0 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL_XR0 Chip	OK	49 degrees C / 120 degrees F
FPC 5 XL_XR1 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL_XR1 Chip	OK	49 degrees C / 120 degrees F
FPC 5 XQ TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ Chip	OK	48 degrees C / 118 degrees F
FPC 5 XQ_XR0 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ_XR0 Chip	OK	60 degrees C / 140 degrees F
FPC 5 XQ_XR1 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ_XR1 Chip	OK	58 degrees C / 136 degrees F
FPC 5 XM 0 TSen	OK	50 degrees C / 122 degrees F
FPC 5 XM 0 Chip	OK	48 degrees C / 118 degrees F
FPC 5 XM 1 TSen	OK	50 degrees C / 122 degrees F
FPC 5 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 5 PLX PCIe Switch TSe	OK	50 degrees C / 122 degrees F
FPC 5 PLX PCIe Switch Chi	OK	59 degrees C / 138 degrees F
FPC 7 Intake	OK	32 degrees C / 89 degrees F
FPC 7 Exhaust A	OK	32 degrees C / 89 degrees F
FPC 7 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 7 LU 0 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 0 Chip	OK	44 degrees C / 111 degrees F
FPC 7 LU 1 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 1 Chip	OK	47 degrees C / 116 degrees F
FPC 7 LU 2 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 2 Chip	OK	39 degrees C / 102 degrees F
FPC 7 LU 3 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 3 Chip	OK	43 degrees C / 109 degrees F

FPC 7 XM 0 TSen	OK	49 degrees C / 120 degrees F
FPC 7 XM 0 Chip	OK	57 degrees C / 134 degrees F
FPC 7 XM 1 TSen	OK	49 degrees C / 120 degrees F
FPC 7 XM 1 Chip	OK	48 degrees C / 118 degrees F
FPC 7 PLX Switch TSen	OK	49 degrees C / 120 degrees F
FPC 7 PLX Switch Chip	OK	45 degrees C / 113 degrees F
FPC 8 Intake	OK	36 degrees C / 96 degrees F
FPC 8 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 8 Exhaust B	OK	46 degrees C / 114 degrees F
FPC 8 XL TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL Chip	OK	47 degrees C / 116 degrees F
FPC 8 XL_XR0 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL_XR0 Chip	OK	53 degrees C / 127 degrees F
FPC 8 XL_XR1 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL_XR1 Chip	OK	52 degrees C / 125 degrees F
FPC 8 XQ TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ Chip	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR0 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR0 Chip	OK	59 degrees C / 138 degrees F
FPC 8 XQ_XR1 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR1 Chip	OK	57 degrees C / 134 degrees F
FPC 8 XM 0 TSen	OK	52 degrees C / 125 degrees F
FPC 8 XM 0 Chip	OK	61 degrees C / 141 degrees F
FPC 8 XM 1 TSen	OK	52 degrees C / 125 degrees F
FPC 8 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 8 PLX PCIe Switch TSe	OK	52 degrees C / 125 degrees F
FPC 8 PLX PCIe Switch Chi	OK	63 degrees C / 145 degrees F
FPC 9 Intake	OK	31 degrees C / 87 degrees F
FPC 9 Exhaust A	OK	34 degrees C / 93 degrees F
FPC 9 Exhaust B	OK	35 degrees C / 95 degrees F
FPC 9 QX 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 QX 0 Chip	OK	45 degrees C / 113 degrees F
FPC 9 LU 0 TCAM TSen	OK	42 degrees C / 107 degrees F
FPC 9 LU 0 TCAM Chip	OK	41 degrees C / 105 degrees F
FPC 9 LU 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 LU 0 Chip	OK	43 degrees C / 109 degrees F
FPC 9 MQ 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 MQ 0 Chip	OK	43 degrees C / 109 degrees F
FPC 9 QX 1 TSen	OK	38 degrees C / 100 degrees F
FPC 9 QX 1 Chip	OK	40 degrees C / 104 degrees F
FPC 9 LU 1 TCAM TSen	OK	38 degrees C / 100 degrees F
FPC 9 LU 1 TCAM Chip	OK	38 degrees C / 100 degrees F
FPC 9 LU 1 TSen	OK	38 degrees C / 100 degrees F
FPC 9 LU 1 Chip	OK	41 degrees C / 105 degrees F
FPC 9 MQ 1 TSen	OK	38 degrees C / 100 degrees F
FPC 9 MQ 1 Chip	OK	41 degrees C / 105 degrees F
FPC 10 Intake	OK	35 degrees C / 95 degrees F
FPC 10 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 10 Exhaust B	OK	46 degrees C / 114 degrees F
FPC 10 XL TSen	OK	42 degrees C / 107 degrees F
FPC 10 XL Chip	OK	44 degrees C / 111 degrees F
FPC 10 XL_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 10 XL_XR0 Chip	OK	47 degrees C / 116 degrees F
FPC 10 XL_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 10 XL_XR1 Chip	OK	48 degrees C / 118 degrees F
FPC 10 XQ TSen	OK	42 degrees C / 107 degrees F
FPC 10 XQ Chip	OK	46 degrees C / 114 degrees F
FPC 10 XQ_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 10 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 10 XQ_XR1 TSen	OK	42 degrees C / 107 degrees F

	FPC 10 XQ_XR1 Chip	OK	53 degrees C / 127 degrees F
	FPC 10 XM 0 TSen	OK	51 degrees C / 123 degrees F
	FPC 10 XM 0 Chip	OK	61 degrees C / 141 degrees F
	FPC 10 XM 1 TSen	OK	51 degrees C / 123 degrees F
	FPC 10 XM 1 Chip	OK	49 degrees C / 120 degrees F
	FPC 10 PLX PCIe Switch TSe	OK	51 degrees C / 123 degrees F
	FPC 10 PLX PCIe Switch Chi	OK	61 degrees C / 141 degrees F
	FPC 11 Intake	OK	33 degrees C / 91 degrees F
	FPC 11 Exhaust A	OK	33 degrees C / 91 degrees F
	FPC 11 Exhaust B	OK	34 degrees C / 93 degrees F
	FPC 11 LU 0 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 11 LU 1 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 1 Chip	OK	50 degrees C / 122 degrees F
	FPC 11 LU 2 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 2 Chip	OK	41 degrees C / 105 degrees F
	FPC 11 LU 3 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 11 XM 0 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 XM 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 11 XM 1 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 XM 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 11 PLX Switch TSen	OK	50 degrees C / 122 degrees F
	FPC 11 PLX Switch Chip	OK	45 degrees C / 113 degrees F
Fans	Top Fan Tray Temp	OK	42 degrees C / 107 degrees F
	Top Tray Fan 1	OK	Spinning at high speed
Top Tray Fan 2		OK	Spinning at high speed
	Top Tray Fan 3	OK	Spinning at high speed
	Top Tray Fan 4	OK	Spinning at high speed
	Top Tray Fan 5	OK	Spinning at high speed
	Top Tray Fan 6	OK	Spinning at high speed
	Top Tray Fan 7	OK	Spinning at high speed
	Top Tray Fan 8	OK	Spinning at high speed
	Top Tray Fan 9	OK	Spinning at high speed
	Top Tray Fan 10	OK	Spinning at high speed
	Top Tray Fan 11	OK	Spinning at high speed
	Top Tray Fan 12	OK	Spinning at high speed
	Bottom Fan Tray Temp	OK	33 degrees C / 91 degrees F
	Bottom Tray Fan 1	OK	Spinning at high speed
	Bottom Tray Fan 2	OK	Spinning at high speed
	Bottom Tray Fan 3	OK	Spinning at high speed
	Bottom Tray Fan 4	OK	Spinning at high speed
	Bottom Tray Fan 5	OK	Spinning at high speed
	Bottom Tray Fan 6	OK	Spinning at high speed
	Bottom Tray Fan 7	OK	Spinning at high speed
	Bottom Tray Fan 8	OK	Spinning at high speed
	Bottom Tray Fan 9	OK	Spinning at high speed
	Bottom Tray Fan 10	OK	Spinning at high speed
	Bottom Tray Fan 11	OK	Spinning at high speed
	Bottom Tray Fan 12	OK	Spinning at high speed

show chassis environment (MX2020 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PSM 0	Absent	
	PSM 1	Absent	
	PSM 2	OK	41 degrees C / 105 degrees F
	PSM 3	OK	39 degrees C / 102 degrees F

PSM 4	OK	39 degrees C / 102 degrees F
PSM 5	OK	38 degrees C / 100 degrees F
PSM 6	OK	38 degrees C / 100 degrees F
PSM 7	OK	38 degrees C / 100 degrees F
PSM 8	OK	37 degrees C / 98 degrees F
PSM 9	Absent	
PSM 10	Absent	
PSM 11	OK	47 degrees C / 116 degrees F
PSM 12	OK	45 degrees C / 113 degrees F
PSM 13	OK	44 degrees C / 111 degrees F
PSM 14	OK	44 degrees C / 111 degrees F
PSM 15	OK	43 degrees C / 109 degrees F
PSM 16	OK	42 degrees C / 107 degrees F
PSM 17	OK	41 degrees C / 105 degrees F
PDM 0	OK	
PDM 1	Absent	
PDM 2	Absent	
PDM 3	OK	
CB 0 IntakeA-Zone0	OK	45 degrees C / 113 degrees F
CB 0 IntakeB-Zone1	OK	34 degrees C / 93 degrees F
CB 0 IntakeC-Zone0	OK	48 degrees C / 118 degrees F
CB 0 ExhaustA-Zone0	OK	45 degrees C / 113 degrees F
CB 0 ExhaustB-Zone1	OK	37 degrees C / 98 degrees F
CB 0 TCBC-Zone0	OK	41 degrees C / 105 degrees F
CB 1 IntakeA-Zone0	OK	46 degrees C / 114 degrees F
CB 1 IntakeB-Zone1	OK	42 degrees C / 107 degrees F
CB 1 IntakeC-Zone0	OK	49 degrees C / 120 degrees F
CB 1 ExhaustA-Zone0	OK	46 degrees C / 114 degrees F
CB 1 ExhaustB-Zone1	OK	41 degrees C / 105 degrees F
CB 1 TCBC-Zone0	OK	46 degrees C / 114 degrees F
SPMB 0 Intake	OK	33 degrees C / 91 degrees F
SPMB 1 Intake	OK	42 degrees C / 107 degrees F
Routing Engine 0	OK	35 degrees C / 95 degrees F
Routing Engine 0 CPU	OK	34 degrees C / 93 degrees F
Routing Engine 1	OK	44 degrees C / 111 degrees F
Routing Engine 1 CPU	OK	42 degrees C / 107 degrees F
SFB 0 Intake-Zone0	OK	55 degrees C / 131 degrees F
SFB 0 Exhaust-Zone1	OK	48 degrees C / 118 degrees F
SFB 0 IntakeA-Zone0	OK	50 degrees C / 122 degrees F
SFB 0 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 0 Exhaust-Zone0	OK	52 degrees C / 125 degrees F
SFB 0 SFB-XF2-Zone1	OK	61 degrees C / 141 degrees F
SFB 0 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 0 SFB-XF0-Zone0	OK	68 degrees C / 154 degrees F
SFB 1 Intake-Zone0	OK	56 degrees C / 132 degrees F
SFB 1 Exhaust-Zone1	OK	47 degrees C / 116 degrees F
SFB 1 IntakeA-Zone0	OK	51 degrees C / 123 degrees F
SFB 1 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 1 Exhaust-Zone0	OK	51 degrees C / 123 degrees F
SFB 1 SFB-XF2-Zone1	OK	62 degrees C / 143 degrees F
SFB 1 SFB-XF1-Zone0	OK	67 degrees C / 152 degrees F
SFB 1 SFB-XF0-Zone0	OK	69 degrees C / 156 degrees F
SFB 2 Intake-Zone0	OK	56 degrees C / 132 degrees F
SFB 2 Exhaust-Zone1	OK	47 degrees C / 116 degrees F
SFB 2 IntakeA-Zone0	OK	51 degrees C / 123 degrees F
SFB 2 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 2 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 2 SFB-XF2-Zone1	OK	65 degrees C / 149 degrees F
SFB 2 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 2 SFB-XF0-Zone0	OK	70 degrees C / 158 degrees F

SFB 3 Intake-Zone0	OK	57 degrees C / 134 degrees F
SFB 3 Exhaust-Zone1	OK	48 degrees C / 118 degrees F
SFB 3 IntakeA-Zone0	OK	52 degrees C / 125 degrees F
SFB 3 IntakeB-Zone1	OK	41 degrees C / 105 degrees F
SFB 3 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 3 SFB-XF2-Zone1	OK	66 degrees C / 150 degrees F
SFB 3 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 3 SFB-XF0-Zone0	OK	71 degrees C / 159 degrees F
SFB 4 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 4 Exhaust-Zone1	OK	49 degrees C / 120 degrees F
SFB 4 IntakeA-Zone0	OK	54 degrees C / 129 degrees F
SFB 4 IntakeB-Zone1	OK	42 degrees C / 107 degrees F
SFB 4 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 4 SFB-XF2-Zone1	OK	64 degrees C / 147 degrees F
SFB 4 SFB-XF1-Zone0	OK	68 degrees C / 154 degrees F
SFB 4 SFB-XF0-Zone0	OK	71 degrees C / 159 degrees F
SFB 5 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 5 Exhaust-Zone1	OK	50 degrees C / 122 degrees F
SFB 5 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 5 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 5 Exhaust-Zone0	OK	54 degrees C / 129 degrees F
SFB 5 SFB-XF2-Zone1	OK	66 degrees C / 150 degrees F
SFB 5 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 5 SFB-XF0-Zone0	OK	74 degrees C / 165 degrees F
SFB 6 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 6 Exhaust-Zone1	OK	49 degrees C / 120 degrees F
SFB 6 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 6 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 6 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 6 SFB-XF2-Zone1	OK	65 degrees C / 149 degrees F
SFB 6 SFB-XF1-Zone0	OK	68 degrees C / 154 degrees F
SFB 6 SFB-XF0-Zone0	OK	72 degrees C / 161 degrees F
SFB 7 Intake-Zone0	OK	57 degrees C / 134 degrees F
SFB 7 Exhaust-Zone1	OK	50 degrees C / 122 degrees F
SFB 7 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 7 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 7 Exhaust-Zone0	OK	54 degrees C / 129 degrees F
SFB 7 SFB-XF2-Zone1	OK	68 degrees C / 154 degrees F
SFB 7 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 7 SFB-XF0-Zone0	OK	73 degrees C / 163 degrees F
FPC 0 Intake	OK	41 degrees C / 105 degrees F
FPC 0 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 0 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 0 LU 0 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 1 Chip	OK	64 degrees C / 147 degrees F
FPC 0 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 0 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 0 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 1 Chip	OK	51 degrees C / 123 degrees F
FPC 0 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 0 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 3 Chip	OK	45 degrees C / 113 degrees F
FPC 1 Intake	OK	40 degrees C / 104 degrees F

FPC 1 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 1 Exhaust B	OK	58 degrees C / 136 degrees F
FPC 1 LU 0 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 0 Chip	OK	56 degrees C / 132 degrees F
FPC 1 LU 1 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 1 Chip	OK	58 degrees C / 136 degrees F
FPC 1 LU 2 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 2 Chip	OK	49 degrees C / 120 degrees F
FPC 1 LU 3 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 1 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 0 Chip	OK	48 degrees C / 118 degrees F
FPC 1 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 1 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 1 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 3 Chip	OK	44 degrees C / 111 degrees F
FPC 2 Intake	OK	39 degrees C / 102 degrees F
FPC 2 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 2 Exhaust B	OK	61 degrees C / 141 degrees F
FPC 2 LU 0 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 0 Chip	OK	60 degrees C / 140 degrees F
FPC 2 LU 1 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 1 Chip	OK	65 degrees C / 149 degrees F
FPC 2 LU 2 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 2 LU 3 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 2 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 2 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 2 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 2 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 3 Intake	OK	40 degrees C / 104 degrees F
FPC 3 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 3 Exhaust B	OK	61 degrees C / 141 degrees F
FPC 3 LU 0 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 0 Chip	OK	61 degrees C / 141 degrees F
FPC 3 LU 1 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 3 LU 2 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 3 LU 3 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 3 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 3 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 3 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 3 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 3 Chip	OK	48 degrees C / 118 degrees F
FPC 4 Intake	OK	40 degrees C / 104 degrees F
FPC 4 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 4 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 4 LU 0 TSen	OK	59 degrees C / 138 degrees F

FPC 4 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 4 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 1 Chip	OK	65 degrees C / 149 degrees F
FPC 4 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 4 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 4 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 4 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 4 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 4 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 5 Intake	OK	41 degrees C / 105 degrees F
FPC 5 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 5 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 5 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 0 Chip	OK	63 degrees C / 145 degrees F
FPC 5 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 1 Chip	OK	66 degrees C / 150 degrees F
FPC 5 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 2 Chip	OK	56 degrees C / 132 degrees F
FPC 5 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 5 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 5 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 2 Chip	OK	48 degrees C / 118 degrees F
FPC 5 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 6 Intake	OK	42 degrees C / 107 degrees F
FPC 6 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 6 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 6 LU 0 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 0 Chip	OK	64 degrees C / 147 degrees F
FPC 6 LU 1 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 1 Chip	OK	66 degrees C / 150 degrees F
FPC 6 LU 2 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 2 Chip	OK	56 degrees C / 132 degrees F
FPC 6 LU 3 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 3 Chip	OK	56 degrees C / 132 degrees F
FPC 6 MQ 0 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 0 Chip	OK	56 degrees C / 132 degrees F
FPC 6 MQ 1 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 1 Chip	OK	59 degrees C / 138 degrees F
FPC 6 MQ 2 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 2 Chip	OK	49 degrees C / 120 degrees F
FPC 6 MQ 3 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 7 Intake	OK	41 degrees C / 105 degrees F
FPC 7 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 7 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 7 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 0 Chip	OK	61 degrees C / 141 degrees F
FPC 7 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 1 Chip	OK	65 degrees C / 149 degrees F

FPC 7 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 2 Chip	OK	54 degrees C / 129 degrees F
FPC 7 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 7 MQ 0 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 0 Chip	OK	53 degrees C / 127 degrees F
FPC 7 MQ 1 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 7 MQ 2 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 7 MQ 3 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 8 Intake	OK	41 degrees C / 105 degrees F
FPC 8 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 8 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 8 LU 0 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 8 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 1 Chip	OK	64 degrees C / 147 degrees F
FPC 8 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 2 Chip	OK	55 degrees C / 131 degrees F
FPC 8 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 8 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 0 Chip	OK	51 degrees C / 123 degrees F
FPC 8 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 8 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 8 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 9 Intake	OK	42 degrees C / 107 degrees F
FPC 9 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 9 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 9 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 0 Chip	OK	65 degrees C / 149 degrees F
FPC 9 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 1 Chip	OK	67 degrees C / 152 degrees F
FPC 9 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 2 Chip	OK	54 degrees C / 129 degrees F
FPC 9 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 9 MQ 0 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 0 Chip	OK	55 degrees C / 131 degrees F
FPC 9 MQ 1 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 1 Chip	OK	59 degrees C / 138 degrees F
FPC 9 MQ 2 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 2 Chip	OK	49 degrees C / 120 degrees F
FPC 9 MQ 3 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 10 Intake	OK	44 degrees C / 111 degrees F
FPC 10 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 10 Exhaust B	OK	55 degrees C / 131 degrees F
FPC 10 LU 0 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 0 Chip	OK	55 degrees C / 131 degrees F
FPC 10 LU 1 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 1 Chip	OK	59 degrees C / 138 degrees F
FPC 10 LU 2 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 2 Chip	OK	52 degrees C / 125 degrees F
FPC 10 LU 3 TSen	OK	54 degrees C / 129 degrees F

FPC 10 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 10 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 0 Chip	OK	49 degrees C / 120 degrees F
FPC 10 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 10 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 10 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 11 Intake	OK	30 degrees C / 86 degrees F
FPC 11 Exhaust A	OK	35 degrees C / 95 degrees F
FPC 11 Exhaust B	OK	30 degrees C / 86 degrees F
FPC 11 LU 0 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 0 Chip	OK	58 degrees C / 136 degrees F
FPC 11 LU 1 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 11 LU 2 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 11 LU 3 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 11 MQ 0 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 11 MQ 1 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 1 Chip	OK	57 degrees C / 134 degrees F
FPC 11 MQ 2 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 2 Chip	OK	48 degrees C / 118 degrees F
FPC 11 MQ 3 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 3 Chip	OK	52 degrees C / 125 degrees F
FPC 12 Intake	OK	40 degrees C / 104 degrees F
FPC 12 Exhaust A	OK	47 degrees C / 116 degrees F
FPC 12 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 12 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 12 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 12 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 2 Chip	OK	47 degrees C / 116 degrees F
FPC 12 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 3 Chip	OK	50 degrees C / 122 degrees F
FPC 12 MQ 0 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 0 Chip	OK	46 degrees C / 114 degrees F
FPC 12 MQ 1 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 12 MQ 2 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 12 MQ 3 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 13 Intake	OK	40 degrees C / 104 degrees F
FPC 13 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 13 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 13 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 13 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 13 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 2 Chip	OK	48 degrees C / 118 degrees F
FPC 13 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 3 Chip	OK	48 degrees C / 118 degrees F
FPC 13 MQ 0 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 0 Chip	OK	46 degrees C / 114 degrees F

FPC 13 MQ 1 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 13 MQ 2 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 13 MQ 3 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 14 Intake	OK	40 degrees C / 104 degrees F
FPC 14 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 14 Exhaust B	OK	51 degrees C / 123 degrees F
FPC 14 LU 0 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 0 Chip	OK	50 degrees C / 122 degrees F
FPC 14 LU 1 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 1 Chip	OK	54 degrees C / 129 degrees F
FPC 14 LU 2 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 2 Chip	OK	47 degrees C / 116 degrees F
FPC 14 LU 3 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 3 Chip	OK	49 degrees C / 120 degrees F
FPC 14 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 0 Chip	OK	46 degrees C / 114 degrees F
FPC 14 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 1 Chip	OK	51 degrees C / 123 degrees F
FPC 14 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 14 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 3 Chip	OK	48 degrees C / 118 degrees F
FPC 15 Intake	OK	44 degrees C / 111 degrees F
FPC 15 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 15 Exhaust B	OK	60 degrees C / 140 degrees F
FPC 15 LU 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 0 Chip	OK	56 degrees C / 132 degrees F
FPC 15 LU 1 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 1 Chip	OK	50 degrees C / 122 degrees F
FPC 15 LU 2 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 2 Chip	OK	58 degrees C / 136 degrees F
FPC 15 LU 3 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 3 Chip	OK	63 degrees C / 145 degrees F
FPC 15 XM 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 XM 0 Chip	OK	56 degrees C / 132 degrees F
FPC 15 XF 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 XF 0 Chip	OK	68 degrees C / 154 degrees F
FPC 15 PLX Switch TSen	OK	50 degrees C / 122 degrees F
FPC 15 PLX Switch Chip	OK	56 degrees C / 132 degrees F
FPC 16 Intake	OK	42 degrees C / 107 degrees F
FPC 16 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 16 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 16 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 16 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 16 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 2 Chip	OK	48 degrees C / 118 degrees F
FPC 16 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 3 Chip	OK	49 degrees C / 120 degrees F
FPC 16 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 0 Chip	OK	48 degrees C / 118 degrees F
FPC 16 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 16 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 16 MQ 3 TSen	OK	49 degrees C / 120 degrees F

FPC 16 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 17 Intake	OK	43 degrees C / 109 degrees F
FPC 17 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 17 Exhaust B	OK	55 degrees C / 131 degrees F
FPC 17 LU 0 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 0 Chip	OK	57 degrees C / 134 degrees F
FPC 17 LU 1 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 1 Chip	OK	60 degrees C / 140 degrees F
FPC 17 LU 2 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 17 LU 3 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 17 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 17 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 17 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 17 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 3 Chip	OK	51 degrees C / 123 degrees F
FPC 18 Intake	OK	44 degrees C / 111 degrees F
FPC 18 Exhaust A	OK	53 degrees C / 127 degrees F
FPC 18 Exhaust B	OK	57 degrees C / 134 degrees F
FPC 18 LU 0 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 0 Chip	OK	57 degrees C / 134 degrees F
FPC 18 LU 1 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 18 LU 2 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 18 LU 3 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 3 Chip	OK	55 degrees C / 131 degrees F
FPC 18 MQ 0 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 0 Chip	OK	54 degrees C / 129 degrees F
FPC 18 MQ 1 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 1 Chip	OK	58 degrees C / 136 degrees F
FPC 18 MQ 2 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 2 Chip	OK	50 degrees C / 122 degrees F
FPC 18 MQ 3 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 3 Chip	OK	53 degrees C / 127 degrees F
FPC 19 Intake	OK	48 degrees C / 118 degrees F
FPC 19 Exhaust A	OK	56 degrees C / 132 degrees F
FPC 19 Exhaust B	OK	64 degrees C / 147 degrees F
FPC 19 LU 0 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 0 Chip	OK	64 degrees C / 147 degrees F
FPC 19 LU 1 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 1 Chip	OK	70 degrees C / 158 degrees F
FPC 19 LU 2 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 2 Chip	OK	61 degrees C / 141 degrees F
FPC 19 LU 3 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 3 Chip	OK	62 degrees C / 143 degrees F
FPC 19 MQ 0 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 0 Chip	OK	60 degrees C / 140 degrees F
FPC 19 MQ 1 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 1 Chip	OK	62 degrees C / 143 degrees F
FPC 19 MQ 2 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 2 Chip	OK	56 degrees C / 132 degrees F
FPC 19 MQ 3 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 3 Chip	OK	57 degrees C / 134 degrees F
ADC 0 Intake	OK	40 degrees C / 104 degrees F
ADC 0 Exhaust	OK	52 degrees C / 125 degrees F

ADC 0 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 0 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 1 Intake	OK	38 degrees C / 100 degrees F
ADC 1 Exhaust	OK	50 degrees C / 122 degrees F
ADC 1 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 1 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 2 Intake	OK	37 degrees C / 98 degrees F
ADC 2 Exhaust	OK	52 degrees C / 125 degrees F
ADC 2 ADC-XF1	OK	53 degrees C / 127 degrees F
ADC 2 ADC-XF0	OK	61 degrees C / 141 degrees F
ADC 3 Intake	OK	40 degrees C / 104 degrees F
ADC 3 Exhaust	OK	51 degrees C / 123 degrees F
ADC 3 ADC-XF1	OK	61 degrees C / 141 degrees F
ADC 3 ADC-XF0	OK	64 degrees C / 147 degrees F
ADC 4 Intake	OK	39 degrees C / 102 degrees F
ADC 4 Exhaust	OK	51 degrees C / 123 degrees F
ADC 4 ADC-XF1	OK	60 degrees C / 140 degrees F
ADC 4 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 5 Intake	OK	38 degrees C / 100 degrees F
ADC 5 Exhaust	OK	54 degrees C / 129 degrees F
ADC 5 ADC-XF1	OK	56 degrees C / 132 degrees F
ADC 5 ADC-XF0	OK	67 degrees C / 152 degrees F
ADC 6 Intake	OK	39 degrees C / 102 degrees F
ADC 6 Exhaust	OK	52 degrees C / 125 degrees F
ADC 6 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 6 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 7 Intake	OK	39 degrees C / 102 degrees F
ADC 7 Exhaust	OK	54 degrees C / 129 degrees F
ADC 7 ADC-XF1	OK	62 degrees C / 143 degrees F
ADC 7 ADC-XF0	OK	70 degrees C / 158 degrees F
ADC 8 Intake	OK	39 degrees C / 102 degrees F
ADC 8 Exhaust	OK	52 degrees C / 125 degrees F
ADC 8 ADC-XF1	OK	61 degrees C / 141 degrees F
ADC 8 ADC-XF0	OK	65 degrees C / 149 degrees F
ADC 9 Intake	OK	41 degrees C / 105 degrees F
ADC 9 Exhaust	OK	51 degrees C / 123 degrees F
ADC 9 ADC-XF1	OK	63 degrees C / 145 degrees F
ADC 9 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 10 Intake	OK	48 degrees C / 118 degrees F
ADC 10 Exhaust	OK	53 degrees C / 127 degrees F
ADC 10 ADC-XF1	OK	67 degrees C / 152 degrees F
ADC 10 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 12 Intake	OK	49 degrees C / 120 degrees F
ADC 12 Exhaust	OK	54 degrees C / 129 degrees F
ADC 12 ADC-XF1	OK	67 degrees C / 152 degrees F
ADC 12 ADC-XF0	OK	67 degrees C / 152 degrees F
ADC 13 Intake	OK	49 degrees C / 120 degrees F
ADC 13 Exhaust	OK	57 degrees C / 134 degrees F
ADC 13 ADC-XF1	OK	66 degrees C / 150 degrees F
ADC 13 ADC-XF0	OK	69 degrees C / 156 degrees F
ADC 14 Intake	OK	51 degrees C / 123 degrees F
ADC 14 Exhaust	OK	59 degrees C / 138 degrees F
ADC 14 ADC-XF1	OK	69 degrees C / 156 degrees F
ADC 14 ADC-XF0	OK	74 degrees C / 165 degrees F
ADC 15 Intake	OK	50 degrees C / 122 degrees F
ADC 15 Exhaust	OK	59 degrees C / 138 degrees F
ADC 15 ADC-XF1	OK	68 degrees C / 154 degrees F
ADC 15 ADC-XF0	OK	69 degrees C / 156 degrees F
ADC 16 Intake	OK	52 degrees C / 125 degrees F
ADC 16 Exhaust	OK	58 degrees C / 136 degrees F

	ADC 16 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 16 ADC-XF0	OK	70 degrees C / 158 degrees F
	ADC 17 Intake	OK	52 degrees C / 125 degrees F
	ADC 17 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 17 ADC-XF1	OK	69 degrees C / 156 degrees F
	ADC 17 ADC-XF0	OK	71 degrees C / 159 degrees F
	ADC 18 Intake	OK	53 degrees C / 127 degrees F
	ADC 18 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 18 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 18 ADC-XF0	OK	73 degrees C / 163 degrees F
	ADC 19 Intake	OK	50 degrees C / 122 degrees F
	ADC 19 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 19 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 19 ADC-XF0	OK	72 degrees C / 161 degrees F
Fans	Fan Tray 0 Fan 1	OK	7440 RPM
	Fan Tray 0 Fan 2	OK	7200 RPM
	Fan Tray 0 Fan 3	OK	6960 RPM
	Fan Tray 0 Fan 4	OK	7200 RPM
	Fan Tray 0 Fan 5	OK	7080 RPM
	Fan Tray 0 Fan 6	OK	6840 RPM
	Fan Tray 1 Fan 1	OK	6840 RPM
	Fan Tray 1 Fan 2	OK	6960 RPM
	Fan Tray 1 Fan 3	OK	6960 RPM
	Fan Tray 1 Fan 4	OK	7080 RPM
	Fan Tray 1 Fan 5	OK	6960 RPM
	Fan Tray 1 Fan 6	OK	6960 RPM
	Fan Tray 2 Fan 1	OK	8640 RPM
	Fan Tray 2 Fan 2	OK	8640 RPM
	Fan Tray 2 Fan 3	OK	8760 RPM
	Fan Tray 2 Fan 4	OK	8760 RPM
	Fan Tray 2 Fan 5	OK	8640 RPM
	Fan Tray 2 Fan 6	OK	8640 RPM
	Fan Tray 3 Fan 1	OK	8520 RPM
	Fan Tray 3 Fan 2	OK	8520 RPM
	Fan Tray 3 Fan 3	OK	8640 RPM
	Fan Tray 3 Fan 4	OK	8640 RPM
	Fan Tray 3 Fan 5	OK	8520 RPM
	Fan Tray 3 Fan 6	OK	8520 RPM

show chassis environment (MX2020 Router with MPC5EQ and MPC6E)

Class	Item	Status	Measurement
Temp	PSM 0	OK	32 degrees C / 89 degrees F
	PSM 1	OK	32 degrees C / 89 degrees F
	PSM 2	OK	32 degrees C / 89 degrees F
	PSM 3	OK	32 degrees C / 89 degrees F
	PSM 4	OK	32 degrees C / 89 degrees F
	PSM 5	OK	33 degrees C / 91 degrees F
	PSM 6	OK	32 degrees C / 89 degrees F
	PSM 7	OK	32 degrees C / 89 degrees F
	PSM 8	OK	32 degrees C / 89 degrees F
	PSM 9	Absent	
	PSM 10	Absent	
	PSM 11	Absent	
	PSM 12	OK	33 degrees C / 91 degrees F
	PSM 13	OK	33 degrees C / 91 degrees F
	PSM 14	OK	34 degrees C / 93 degrees F
	PSM 15	OK	34 degrees C / 93 degrees F
	PSM 16	OK	33 degrees C / 91 degrees F

PSM 17	OK	33 degrees C / 91 degrees F
PDM 0	OK	
PDM 1	OK	
PDM 2	OK	
PDM 3	OK	
CB 0 IntakeA-Zone0	OK	34 degrees C / 93 degrees F
CB 0 IntakeB-Zone1	OK	26 degrees C / 78 degrees F
CB 0 IntakeC-Zone0	OK	38 degrees C / 100 degrees F
CB 0 ExhaustA-Zone0	OK	34 degrees C / 93 degrees F
CB 0 ExhaustB-Zone1	OK	27 degrees C / 80 degrees F
CB 0 TCBC-Zone0	OK	32 degrees C / 89 degrees F
CB 1 IntakeA-Zone0	OK	24 degrees C / 75 degrees F
CB 1 IntakeB-Zone1	OK	22 degrees C / 71 degrees F
CB 1 IntakeC-Zone0	OK	34 degrees C / 93 degrees F
CB 1 ExhaustA-Zone0	OK	31 degrees C / 87 degrees F
CB 1 ExhaustB-Zone1	OK	24 degrees C / 75 degrees F
CB 1 TCBC-Zone0	OK	27 degrees C / 80 degrees F
SPMB 0 Intake	OK	25 degrees C / 77 degrees F
SPMB 1 Intake	OK	23 degrees C / 73 degrees F
Routing Engine 0	OK	28 degrees C / 82 degrees F
Routing Engine 0 CPU	OK	25 degrees C / 77 degrees F
Routing Engine 1	OK	25 degrees C / 77 degrees F
Routing Engine 1 CPU	OK	24 degrees C / 75 degrees F
SFB 0 Intake-Zone0	OK	45 degrees C / 113 degrees F
SFB 0 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 0 IntakeA-Zone0	OK	32 degrees C / 89 degrees F
SFB 0 IntakeB-Zone1	OK	28 degrees C / 82 degrees F
SFB 0 Exhaust-Zone0	OK	36 degrees C / 96 degrees F
SFB 0 SFB-XF2-Zone1	OK	46 degrees C / 114 degrees F
SFB 0 SFB-XF1-Zone0	OK	48 degrees C / 118 degrees F
SFB 0 SFB-XF0-Zone0	OK	60 degrees C / 140 degrees F
SFB 1 Intake-Zone0	OK	44 degrees C / 111 degrees F
SFB 1 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 1 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 1 IntakeB-Zone1	OK	27 degrees C / 80 degrees F
SFB 1 Exhaust-Zone0	OK	37 degrees C / 98 degrees F
SFB 1 SFB-XF2-Zone1	OK	47 degrees C / 116 degrees F
SFB 1 SFB-XF1-Zone0	OK	49 degrees C / 120 degrees F
SFB 1 SFB-XF0-Zone0	OK	56 degrees C / 132 degrees F
SFB 2 Intake-Zone0	OK	41 degrees C / 105 degrees F
SFB 2 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 2 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 2 IntakeB-Zone1	OK	28 degrees C / 82 degrees F
SFB 2 Exhaust-Zone0	OK	37 degrees C / 98 degrees F
SFB 2 SFB-XF2-Zone1	OK	47 degrees C / 116 degrees F
SFB 2 SFB-XF1-Zone0	OK	55 degrees C / 131 degrees F
SFB 2 SFB-XF0-Zone0	OK	55 degrees C / 131 degrees F
SFB 3 Intake-Zone0	OK	43 degrees C / 109 degrees F
SFB 3 Exhaust-Zone1	OK	33 degrees C / 91 degrees F
SFB 3 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 3 IntakeB-Zone1	OK	27 degrees C / 80 degrees F
SFB 3 Exhaust-Zone0	OK	36 degrees C / 96 degrees F
SFB 3 SFB-XF2-Zone1	OK	46 degrees C / 114 degrees F
SFB 3 SFB-XF1-Zone0	OK	46 degrees C / 114 degrees F
SFB 3 SFB-XF0-Zone0	OK	57 degrees C / 134 degrees F
SFB 4 Intake-Zone0	OK	36 degrees C / 96 degrees F
SFB 4 Exhaust-Zone1	OK	32 degrees C / 89 degrees F
SFB 4 IntakeA-Zone0	OK	31 degrees C / 87 degrees F
SFB 4 IntakeB-Zone1	OK	26 degrees C / 78 degrees F
SFB 4 Exhaust-Zone0	OK	32 degrees C / 89 degrees F

SFB 4 SFB-XF2-Zone1	OK	44 degrees C / 111 degrees F
SFB 4 SFB-XF1-Zone0	OK	45 degrees C / 113 degrees F
SFB 4 SFB-XF0-Zone0	OK	52 degrees C / 125 degrees F
SFB 5 Intake-Zone0	OK	31 degrees C / 87 degrees F
SFB 5 Exhaust-Zone1	OK	30 degrees C / 86 degrees F
SFB 5 IntakeA-Zone0	OK	26 degrees C / 78 degrees F
SFB 5 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 5 Exhaust-Zone0	OK	29 degrees C / 84 degrees F
SFB 5 SFB-XF2-Zone1	OK	43 degrees C / 109 degrees F
SFB 5 SFB-XF1-Zone0	OK	47 degrees C / 116 degrees F
SFB 5 SFB-XF0-Zone0	OK	49 degrees C / 120 degrees F
SFB 6 Intake-Zone0	OK	30 degrees C / 86 degrees F
SFB 6 Exhaust-Zone1	OK	29 degrees C / 84 degrees F
SFB 6 IntakeA-Zone0	OK	25 degrees C / 77 degrees F
SFB 6 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 6 Exhaust-Zone0	OK	29 degrees C / 84 degrees F
SFB 6 SFB-XF2-Zone1	OK	43 degrees C / 109 degrees F
SFB 6 SFB-XF1-Zone0	OK	44 degrees C / 111 degrees F
SFB 6 SFB-XF0-Zone0	OK	45 degrees C / 113 degrees F
SFB 7 Intake-Zone0	OK	31 degrees C / 87 degrees F
SFB 7 Exhaust-Zone1	OK	30 degrees C / 86 degrees F
SFB 7 IntakeA-Zone0	OK	26 degrees C / 78 degrees F
SFB 7 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 7 Exhaust-Zone0	OK	28 degrees C / 82 degrees F
SFB 7 SFB-XF2-Zone1	OK	50 degrees C / 122 degrees F
SFB 7 SFB-XF1-Zone0	OK	43 degrees C / 109 degrees F
SFB 7 SFB-XF0-Zone0	OK	47 degrees C / 116 degrees F
FPC 0 Intake	OK	31 degrees C / 87 degrees F
FPC 0 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 0 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 0 XL TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL Chip	OK	46 degrees C / 114 degrees F
FPC 0 XL_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL_XR0 Chip	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL_XR1 Chip	OK	48 degrees C / 118 degrees F
FPC 0 XQ TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ Chip	OK	44 degrees C / 111 degrees F
FPC 0 XQ_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 0 XQ_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ_XR1 Chip	OK	55 degrees C / 131 degrees F
FPC 0 XM 0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XM 0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XM 1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XM 1 Chip	OK	44 degrees C / 111 degrees F
FPC 0 PLX PCIe Switch TSe	OK	48 degrees C / 118 degrees F
FPC 0 PLX PCIe Switch Chi	OK	57 degrees C / 134 degrees F
FPC 1 Intake	OK	29 degrees C / 84 degrees F
FPC 1 Exhaust A	OK	36 degrees C / 96 degrees F
FPC 1 Exhaust B	OK	44 degrees C / 111 degrees F
FPC 1 LU 0 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 0 Chip	OK	45 degrees C / 113 degrees F
FPC 1 LU 1 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 1 Chip	OK	38 degrees C / 100 degrees F
FPC 1 LU 2 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 2 Chip	OK	42 degrees C / 107 degrees F
FPC 1 LU 3 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 3 Chip	OK	47 degrees C / 116 degrees F
FPC 1 XM 0 TSen	OK	38 degrees C / 100 degrees F

FPC 1 XM 0 Chip	OK	44 degrees C / 111 degrees F
FPC 1 XF 0 TSen	OK	38 degrees C / 100 degrees F
FPC 1 XF 0 Chip	OK	54 degrees C / 129 degrees F
FPC 1 PLX Switch TSen	OK	38 degrees C / 100 degrees F
FPC 1 PLX Switch Chip	OK	41 degrees C / 105 degrees F
FPC 2 Intake	OK	28 degrees C / 82 degrees F
FPC 2 Exhaust A	OK	28 degrees C / 82 degrees F
FPC 2 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 2 LU 0 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 0 Chip	OK	40 degrees C / 104 degrees F
FPC 2 LU 1 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 1 Chip	OK	41 degrees C / 105 degrees F
FPC 2 LU 2 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 2 Chip	OK	34 degrees C / 93 degrees F
FPC 2 LU 3 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 3 Chip	OK	38 degrees C / 100 degrees F
FPC 2 XM 0 TSen	OK	40 degrees C / 104 degrees F
FPC 2 XM 0 Chip	OK	47 degrees C / 116 degrees F
FPC 2 XM 1 TSen	OK	40 degrees C / 104 degrees F
FPC 2 XM 1 Chip	OK	42 degrees C / 107 degrees F
FPC 2 PLX Switch TSen	OK	40 degrees C / 104 degrees F
FPC 2 PLX Switch Chip	OK	39 degrees C / 102 degrees F
FPC 3 Intake	OK	27 degrees C / 80 degrees F
FPC 3 Exhaust A	OK	38 degrees C / 100 degrees F
FPC 3 Exhaust B	OK	31 degrees C / 87 degrees F
FPC 3 QX 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 QX 0 Chip	OK	42 degrees C / 107 degrees F
FPC 3 LU 0 TCAM TSen	OK	38 degrees C / 100 degrees F
FPC 3 LU 0 TCAM Chip	OK	43 degrees C / 109 degrees F
FPC 3 LU 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 LU 0 Chip	OK	42 degrees C / 107 degrees F
FPC 3 MQ 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 MQ 0 Chip	OK	39 degrees C / 102 degrees F
FPC 3 QX 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 QX 1 Chip	OK	36 degrees C / 96 degrees F
FPC 3 LU 1 TCAM TSen	OK	32 degrees C / 89 degrees F
FPC 3 LU 1 TCAM Chip	OK	35 degrees C / 95 degrees F
FPC 3 LU 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 LU 1 Chip	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 MQ 1 Chip	OK	36 degrees C / 96 degrees F
FPC 4 Intake	OK	29 degrees C / 84 degrees F
FPC 4 Exhaust A	OK	36 degrees C / 96 degrees F
FPC 4 Exhaust B	OK	40 degrees C / 104 degrees F
FPC 4 XL TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL Chip	OK	42 degrees C / 107 degrees F
FPC 4 XL_XR0 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL_XR0 Chip	OK	45 degrees C / 113 degrees F
FPC 4 XL_XR1 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL_XR1 Chip	OK	46 degrees C / 114 degrees F
FPC 4 XQ TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ Chip	OK	42 degrees C / 107 degrees F
FPC 4 XQ_XR0 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ_XR0 Chip	OK	54 degrees C / 129 degrees F
FPC 4 XQ_XR1 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ_XR1 Chip	OK	53 degrees C / 127 degrees F
FPC 4 XM 0 TSen	OK	45 degrees C / 113 degrees F
FPC 4 XM 0 Chip	OK	59 degrees C / 138 degrees F
FPC 4 XM 1 TSen	OK	45 degrees C / 113 degrees F
FPC 4 XM 1 Chip	OK	41 degrees C / 105 degrees F

```

FPC 4 PLX PCIe Switch TSe      OK      45 degrees C / 113 degrees F
FPC 4 PLX PCIe Switch Chi      OK      58 degrees C / 136 degrees F
FPC 5 Intake                    OK      29 degrees C / 84 degrees F
FPC 5 Exhaust A                 OK      33 degrees C / 91 degrees F
FPC 5 Exhaust B                 OK      39 degrees C / 102 degrees F
FPC 5 LU 0 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 0 Chip                 OK      40 degrees C / 104 degrees F
FPC 5 LU 1 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 1 Chip                 OK      45 degrees C / 113 degrees F
FPC 5 LU 2 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 2 Chip                 OK      40 degrees C / 104 degrees F
FPC 5 LU 3 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 3 Chip                 OK      46 degrees C / 114 degrees F
FPC 5 MQ 0 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 0 Chip                 OK      33 degrees C / 91 degrees F
FPC 5 MQ 1 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 1 Chip                 OK      35 degrees C / 95 degrees F
FPC 5 MQ 2 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 2 Chip                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 3 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 3 Chip                 OK      32 degrees C / 89 degrees F
FPC 9 Intake                    OK      25 degrees C / 77 degrees F
FPC 9 Exhaust A                 OK      37 degrees C / 98 degrees F
FPC 9 Exhaust B                 OK      40 degrees C / 104 degrees F
FPC 9 XL 0 TSen                 OK      40 degrees C / 104 degrees F
...

```

show chassis environment (MX2010 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PSM 0	OK	7 degrees C / 44 degrees F
	PSM 1	OK	7 degrees C / 44 degrees F
	PSM 2	OK	7 degrees C / 44 degrees F
	PSM 3	OK	6 degrees C / 42 degrees F
	PSM 4	OK	6 degrees C / 42 degrees F
	PSM 5	OK	6 degrees C / 42 degrees F
	PSM 6	OK	6 degrees C / 42 degrees F
	PSM 7	OK	7 degrees C / 44 degrees F
	PSM 8	OK	7 degrees C / 44 degrees F
	PDM 0	OK	
	PDM 1	Absent	
	CB 0 IntakeA-Zone0	OK	14 degrees C / 57 degrees F
	CB 0 IntakeB-Zone1	OK	7 degrees C / 44 degrees F
	CB 0 IntakeC-Zone0	OK	22 degrees C / 71 degrees F
	CB 0 ExhaustA-Zone0	OK	14 degrees C / 57 degrees F
	CB 0 ExhaustB-Zone1	OK	9 degrees C / 48 degrees F
	CB 0 TCBC-Zone0	OK	11 degrees C / 51 degrees F
	CB 1 IntakeA-Zone0	OK	9 degrees C / 48 degrees F
	CB 1 IntakeB-Zone1	OK	5 degrees C / 41 degrees F
	CB 1 IntakeC-Zone0	OK	20 degrees C / 68 degrees F
	CB 1 ExhaustA-Zone0	OK	12 degrees C / 53 degrees F
	CB 1 ExhaustB-Zone1	OK	7 degrees C / 44 degrees F
	CB 1 TCBC-Zone0	OK	10 degrees C / 50 degrees F
	SPMB 0 Intake	OK	5 degrees C / 41 degrees F
	SPMB 1 Intake	OK	4 degrees C / 39 degrees F
	Routing Engine 0	OK	9 degrees C / 48 degrees F
	Routing Engine 0 CPU	OK	9 degrees C / 48 degrees F
	Routing Engine 1	OK	6 degrees C / 42 degrees F

Routing Engine 1 CPU	OK	6 degrees C / 42 degrees F
SFB 0 Intake-Zone0	OK	26 degrees C / 78 degrees F
SFB 0 Exhaust-Zone1	OK	17 degrees C / 62 degrees F
SFB 0 IntakeA-Zone0	OK	16 degrees C / 60 degrees F
SFB 0 IntakeB-Zone1	OK	11 degrees C / 51 degrees F
SFB 0 Exhaust-Zone0	OK	18 degrees C / 64 degrees F
SFB 0 SFB-XF2-Zone1	OK	25 degrees C / 77 degrees F
SFB 0 SFB-XF1-Zone0	OK	23 degrees C / 73 degrees F
SFB 0 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
SFB 1 Intake-Zone0	OK	27 degrees C / 80 degrees F
SFB 1 Exhaust-Zone1	OK	15 degrees C / 59 degrees F
SFB 1 IntakeA-Zone0	OK	20 degrees C / 68 degrees F
SFB 1 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 1 Exhaust-Zone0	OK	19 degrees C / 66 degrees F
SFB 1 SFB-XF2-Zone1	OK	26 degrees C / 78 degrees F
SFB 1 SFB-XF1-Zone0	OK	27 degrees C / 80 degrees F
SFB 1 SFB-XF0-Zone0	OK	32 degrees C / 89 degrees F
SFB 2 Intake-Zone0	OK	21 degrees C / 69 degrees F
SFB 2 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 2 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 2 IntakeB-Zone1	OK	9 degrees C / 48 degrees F
SFB 2 Exhaust-Zone0	OK	16 degrees C / 60 degrees F
SFB 2 SFB-XF2-Zone1	OK	24 degrees C / 75 degrees F
SFB 2 SFB-XF1-Zone0	OK	21 degrees C / 69 degrees F
SFB 2 SFB-XF0-Zone0	OK	26 degrees C / 78 degrees F
SFB 4 Intake-Zone0	OK	28 degrees C / 82 degrees F
SFB 4 Exhaust-Zone1	OK	16 degrees C / 60 degrees F
SFB 4 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 4 IntakeB-Zone1	OK	11 degrees C / 51 degrees F
SFB 4 Exhaust-Zone0	OK	19 degrees C / 66 degrees F
SFB 4 SFB-XF2-Zone1	OK	27 degrees C / 80 degrees F
SFB 4 SFB-XF1-Zone0	OK	27 degrees C / 80 degrees F
SFB 4 SFB-XF0-Zone0	OK	32 degrees C / 89 degrees F
SFB 5 Intake-Zone0	OK	22 degrees C / 71 degrees F
SFB 5 Exhaust-Zone1	OK	14 degrees C / 57 degrees F
SFB 5 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 5 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 5 Exhaust-Zone0	OK	17 degrees C / 62 degrees F
SFB 5 SFB-XF2-Zone1	OK	22 degrees C / 71 degrees F
SFB 5 SFB-XF1-Zone0	OK	29 degrees C / 84 degrees F
SFB 5 SFB-XF0-Zone0	OK	27 degrees C / 80 degrees F
SFB 6 Intake-Zone0	OK	27 degrees C / 80 degrees F
SFB 6 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 6 IntakeA-Zone0	OK	19 degrees C / 66 degrees F
SFB 6 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 6 Exhaust-Zone0	OK	20 degrees C / 68 degrees F
SFB 6 SFB-XF2-Zone1	OK	24 degrees C / 75 degrees F
SFB 6 SFB-XF1-Zone0	OK	32 degrees C / 89 degrees F
SFB 6 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
SFB 7 Intake-Zone0	OK	25 degrees C / 77 degrees F
SFB 7 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 7 IntakeA-Zone0	OK	14 degrees C / 57 degrees F
SFB 7 IntakeB-Zone1	OK	8 degrees C / 46 degrees F
SFB 7 Exhaust-Zone0	OK	17 degrees C / 62 degrees F
SFB 7 SFB-XF2-Zone1	OK	21 degrees C / 69 degrees F
SFB 7 SFB-XF1-Zone0	OK	21 degrees C / 69 degrees F
SFB 7 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
FPC 0 Intake	OK	13 degrees C / 55 degrees F
FPC 0 Exhaust A	OK	13 degrees C / 55 degrees F
FPC 0 Exhaust B	OK	14 degrees C / 57 degrees F

FPC 0 LU 0 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 0 Chip	OK	25 degrees C / 77 degrees F
FPC 0 LU 1 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 0 LU 2 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 0 LU 3 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 3 Chip	OK	23 degrees C / 73 degrees F
FPC 0 XM 0 TSen	OK	28 degrees C / 82 degrees F
FPC 0 XM 0 Chip	OK	33 degrees C / 91 degrees F
FPC 0 XM 1 TSen	OK	28 degrees C / 82 degrees F
FPC 0 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 0 PLX Switch TSen	OK	28 degrees C / 82 degrees F
FPC 0 PLX Switch Chip	OK	26 degrees C / 78 degrees F
FPC 1 Intake	OK	10 degrees C / 50 degrees F
FPC 1 Exhaust A	OK	24 degrees C / 75 degrees F
FPC 1 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 1 LU 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 0 Chip	OK	31 degrees C / 87 degrees F
FPC 1 LU 1 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 1 Chip	OK	21 degrees C / 69 degrees F
FPC 1 LU 2 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 2 Chip	OK	25 degrees C / 77 degrees F
FPC 1 LU 3 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 1 XM 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 XM 0 Chip	OK	30 degrees C / 86 degrees F
FPC 1 XF 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 XF 0 Chip	OK	37 degrees C / 98 degrees F
FPC 1 PLX Switch TSen	OK	22 degrees C / 71 degrees F
FPC 1 PLX Switch Chip	OK	22 degrees C / 71 degrees F
FPC 2 Intake	OK	9 degrees C / 48 degrees F
FPC 2 Exhaust A	OK	10 degrees C / 50 degrees F
FPC 2 Exhaust B	OK	10 degrees C / 50 degrees F
FPC 2 LU 0 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 0 Chip	OK	25 degrees C / 77 degrees F
FPC 2 LU 1 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 1 Chip	OK	26 degrees C / 78 degrees F
FPC 2 LU 2 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 2 Chip	OK	17 degrees C / 62 degrees F
FPC 2 LU 3 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 2 XM 0 TSen	OK	26 degrees C / 78 degrees F
FPC 2 XM 0 Chip	OK	34 degrees C / 93 degrees F
FPC 2 XM 1 TSen	OK	26 degrees C / 78 degrees F
FPC 2 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 2 PLX Switch TSen	OK	26 degrees C / 78 degrees F
FPC 2 PLX Switch Chip	OK	20 degrees C / 68 degrees F
FPC 3 Intake	OK	12 degrees C / 53 degrees F
FPC 3 Exhaust A	OK	16 degrees C / 60 degrees F
FPC 3 Exhaust B	OK	26 degrees C / 78 degrees F
FPC 3 LU 0 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 0 Chip	OK	26 degrees C / 78 degrees F
FPC 3 LU 1 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 3 LU 2 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 2 Chip	OK	22 degrees C / 71 degrees F
FPC 3 LU 3 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 3 Chip	OK	21 degrees C / 69 degrees F
FPC 3 MQ 0 TSen	OK	15 degrees C / 59 degrees F

FPC 3 MQ 0 Chip	OK	18 degrees C / 64 degrees F
FPC 3 MQ 1 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 1 Chip	OK	20 degrees C / 68 degrees F
FPC 3 MQ 2 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 2 Chip	OK	17 degrees C / 62 degrees F
FPC 3 MQ 3 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 3 Chip	OK	16 degrees C / 60 degrees F
FPC 4 Intake	OK	11 degrees C / 51 degrees F
FPC 4 Exhaust A	OK	22 degrees C / 71 degrees F
FPC 4 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 4 LU 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 0 Chip	OK	33 degrees C / 91 degrees F
FPC 4 LU 1 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 1 Chip	OK	21 degrees C / 69 degrees F
FPC 4 LU 2 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 2 Chip	OK	26 degrees C / 78 degrees F
FPC 4 LU 3 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 4 XM 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 XM 0 Chip	OK	30 degrees C / 86 degrees F
FPC 4 XF 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 XF 0 Chip	OK	37 degrees C / 98 degrees F
FPC 4 PLX Switch TSen	OK	22 degrees C / 71 degrees F
FPC 4 PLX Switch Chip	OK	23 degrees C / 73 degrees F
FPC 5 Intake	OK	12 degrees C / 53 degrees F
FPC 5 Exhaust A	OK	12 degrees C / 53 degrees F
FPC 5 Exhaust B	OK	12 degrees C / 53 degrees F
FPC 5 LU 0 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 0 Chip	OK	28 degrees C / 82 degrees F
FPC 5 LU 1 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 5 LU 2 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 5 LU 3 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 5 XM 0 TSen	OK	27 degrees C / 80 degrees F
FPC 5 XM 0 Chip	OK	36 degrees C / 96 degrees F
FPC 5 XM 1 TSen	OK	27 degrees C / 80 degrees F
FPC 5 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 5 PLX Switch TSen	OK	27 degrees C / 80 degrees F
FPC 5 PLX Switch Chip	OK	24 degrees C / 75 degrees F
FPC 6 Intake	OK	12 degrees C / 53 degrees F
FPC 6 Exhaust A	OK	17 degrees C / 62 degrees F
FPC 6 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 6 LU 0 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 0 Chip	OK	29 degrees C / 84 degrees F
FPC 6 LU 1 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 1 Chip	OK	30 degrees C / 86 degrees F
FPC 6 LU 2 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 2 Chip	OK	24 degrees C / 75 degrees F
FPC 6 LU 3 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 6 MQ 0 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 0 Chip	OK	19 degrees C / 66 degrees F
FPC 6 MQ 1 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 1 Chip	OK	20 degrees C / 68 degrees F
FPC 6 MQ 2 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 2 Chip	OK	17 degrees C / 62 degrees F
FPC 6 MQ 3 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 3 Chip	OK	16 degrees C / 60 degrees F

FPC 7 Intake	OK	10 degrees C / 50 degrees F
FPC 7 Exhaust A	OK	10 degrees C / 50 degrees F
FPC 7 Exhaust B	OK	11 degrees C / 51 degrees F
FPC 7 LU 0 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 0 Chip	OK	26 degrees C / 78 degrees F
FPC 7 LU 1 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 1 Chip	OK	29 degrees C / 84 degrees F
FPC 7 LU 2 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 7 LU 3 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 3 Chip	OK	24 degrees C / 75 degrees F
FPC 7 XM 0 TSen	OK	26 degrees C / 78 degrees F
FPC 7 XM 0 Chip	OK	34 degrees C / 93 degrees F
FPC 7 XM 1 TSen	OK	26 degrees C / 78 degrees F
FPC 7 XM 1 Chip	OK	32 degrees C / 89 degrees F
FPC 7 PLX Switch TSen	OK	26 degrees C / 78 degrees F
FPC 7 PLX Switch Chip	OK	22 degrees C / 71 degrees F
FPC 8 Intake	OK	10 degrees C / 50 degrees F
FPC 8 Exhaust A	OK	22 degrees C / 71 degrees F
FPC 8 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 8 LU 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 0 Chip	OK	33 degrees C / 91 degrees F
FPC 8 LU 1 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 1 Chip	OK	23 degrees C / 73 degrees F
FPC 8 LU 2 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 2 Chip	OK	26 degrees C / 78 degrees F
FPC 8 LU 3 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 8 XM 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 XM 0 Chip	OK	29 degrees C / 84 degrees F
FPC 8 XF 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 XF 0 Chip	OK	38 degrees C / 100 degrees F
FPC 8 PLX Switch TSen	OK	20 degrees C / 68 degrees F
FPC 8 PLX Switch Chip	OK	24 degrees C / 75 degrees F
FPC 9 Intake	OK	11 degrees C / 51 degrees F
FPC 9 Exhaust A	OK	11 degrees C / 51 degrees F
FPC 9 Exhaust B	OK	11 degrees C / 51 degrees F
FPC 9 LU 0 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 0 Chip	OK	24 degrees C / 75 degrees F
FPC 9 LU 1 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 1 Chip	OK	26 degrees C / 78 degrees F
FPC 9 LU 2 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 2 Chip	OK	16 degrees C / 60 degrees F
FPC 9 LU 3 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 3 Chip	OK	21 degrees C / 69 degrees F
FPC 9 XM 0 TSen	OK	25 degrees C / 77 degrees F
FPC 9 XM 0 Chip	OK	32 degrees C / 89 degrees F
FPC 9 XM 1 TSen	OK	25 degrees C / 77 degrees F
FPC 9 XM 1 Chip	OK	25 degrees C / 77 degrees F
FPC 9 PLX Switch TSen	OK	25 degrees C / 77 degrees F
FPC 9 PLX Switch Chip	OK	21 degrees C / 69 degrees F
ADC 0 Intake	OK	12 degrees C / 53 degrees F
ADC 0 Exhaust	OK	20 degrees C / 68 degrees F
ADC 0 ADC-XF1	OK	26 degrees C / 78 degrees F
ADC 0 ADC-XF0	OK	32 degrees C / 89 degrees F
ADC 1 Intake	OK	11 degrees C / 51 degrees F
ADC 1 Exhaust	OK	21 degrees C / 69 degrees F
ADC 1 ADC-XF1	OK	24 degrees C / 75 degrees F
ADC 1 ADC-XF0	OK	31 degrees C / 87 degrees F
ADC 2 Intake	OK	14 degrees C / 57 degrees F

	ADC 2 Exhaust	OK	21 degrees C / 69 degrees F
	ADC 2 ADC-XF1	OK	28 degrees C / 82 degrees F
	ADC 2 ADC-XF0	OK	34 degrees C / 93 degrees F
	ADC 3 Intake	OK	13 degrees C / 55 degrees F
	ADC 3 Exhaust	OK	19 degrees C / 66 degrees F
	ADC 3 ADC-XF1	OK	24 degrees C / 75 degrees F
	ADC 3 ADC-XF0	OK	31 degrees C / 87 degrees F
	ADC 4 Intake	OK	9 degrees C / 48 degrees F
	ADC 4 Exhaust	OK	22 degrees C / 71 degrees F
	ADC 4 ADC-XF1	OK	28 degrees C / 82 degrees F
	ADC 4 ADC-XF0	OK	35 degrees C / 95 degrees F
	ADC 5 Intake	OK	12 degrees C / 53 degrees F
	ADC 5 Exhaust	OK	22 degrees C / 71 degrees F
	ADC 5 ADC-XF1	OK	28 degrees C / 82 degrees F
	ADC 5 ADC-XF0	OK	34 degrees C / 93 degrees F
	ADC 6 Intake	OK	11 degrees C / 51 degrees F
	ADC 6 Exhaust	OK	21 degrees C / 69 degrees F
	ADC 6 ADC-XF1	OK	26 degrees C / 78 degrees F
	ADC 6 ADC-XF0	OK	35 degrees C / 95 degrees F
	ADC 7 Intake	OK	14 degrees C / 57 degrees F
	ADC 7 Exhaust	OK	22 degrees C / 71 degrees F
	ADC 7 ADC-XF1	OK	26 degrees C / 78 degrees F
	ADC 7 ADC-XF0	OK	34 degrees C / 93 degrees F
	ADC 8 Intake	OK	14 degrees C / 57 degrees F
	ADC 8 Exhaust	OK	21 degrees C / 69 degrees F
	ADC 8 ADC-XF1	OK	24 degrees C / 75 degrees F
	ADC 8 ADC-XF0	OK	31 degrees C / 87 degrees F
	ADC 9 Intake	OK	10 degrees C / 50 degrees F
	ADC 9 Exhaust	OK	22 degrees C / 71 degrees F
	ADC 9 ADC-XF1	OK	28 degrees C / 82 degrees F
	ADC 9 ADC-XF0	OK	36 degrees C / 96 degrees F
Fans	Fan Tray 0 Fan 1	OK	3480 RPM
	Fan Tray 0 Fan 2	OK	3480 RPM
	Fan Tray 0 Fan 3	OK	3480 RPM
	Fan Tray 0 Fan 4	OK	3360 RPM
	Fan Tray 0 Fan 5	OK	3360 RPM
	Fan Tray 0 Fan 6	OK	3480 RPM
	Fan Tray 1 Fan 1	OK	3360 RPM
	Fan Tray 1 Fan 2	OK	3360 RPM
	Fan Tray 1 Fan 3	OK	3360 RPM
	Fan Tray 1 Fan 4	OK	3480 RPM
	Fan Tray 1 Fan 5	OK	3480 RPM
	Fan Tray 1 Fan 6	OK	3480 RPM
	Fan Tray 2 Fan 1	OK	3360 RPM
	Fan Tray 2 Fan 2	OK	3360 RPM
	Fan Tray 2 Fan 3	OK	3480 RPM
	Fan Tray 2 Fan 4	OK	3480 RPM
	Fan Tray 2 Fan 5	OK	3360 RPM
	Fan Tray 2 Fan 6	OK	3480 RPM
	Fan Tray 3 Fan 1	OK	3360 RPM
	Fan Tray 3 Fan 2	OK	3360 RPM
	Fan Tray 3 Fan 3	OK	3480 RPM
	Fan Tray 3 Fan 4	OK	3480 RPM
	Fan Tray 3 Fan 5	OK	3480 RPM
	Fan Tray 3 Fan 6	OK	3360 RPM

show chassis environment (MX2008 Router)

```
user@host>show chassis environment
```


Class	Item	Status	Measurement
Temp	PSM 0	Absent	
	PSM 1	OK	29 degrees C / 84 degrees F
	PSM 2	OK	30 degrees C / 86 degrees F
	PSM 3	OK	29 degrees C / 84 degrees F
	PSM 4	OK	29 degrees C / 84 degrees F
	PSM 5	OK	30 degrees C / 86 degrees F
	PSM 6	OK	29 degrees C / 84 degrees F
	PSM 7	OK	31 degrees C / 87 degrees F
	PSM 8	Absent	
	PDM 0	OK	
	PDM 1	OK	
	CB 0 Inlet1	OK	37 degrees C / 98 degrees F
	CB 0 Inlet2	OK	45 degrees C / 113 degrees F
	CB 0 Inlet3	OK	44 degrees C / 111 degrees F
	CB 0 Inlet4	OK	41 degrees C / 105 degrees F
	CB 0 Exhaust1	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust2	OK	40 degrees C / 104 degrees F
	CB 0 Exhaust3	OK	48 degrees C / 118 degrees F
	CB 0 Exhaust4	OK	46 degrees C / 114 degrees F
	CB 1 Inlet1	OK	30 degrees C / 86 degrees F
	CB 1 Inlet2	OK	31 degrees C / 87 degrees F
	CB 1 Inlet3	OK	29 degrees C / 84 degrees F
	CB 1 Inlet4	OK	32 degrees C / 89 degrees F
	CB 1 Exhaust1	OK	30 degrees C / 86 degrees F
	CB 1 Exhaust2	OK	33 degrees C / 91 degrees F
	CB 1 Exhaust3	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust4	OK	34 degrees C / 93 degrees F
	Routing Engine 0	OK	
	Routing Engine 0 CPU	OK	75 degrees C / 167 degrees F
	Routing Engine 1	OK	
	Routing Engine 1 CPU	OK	46 degrees C / 114 degrees F
	SFB 0 Inlet2	OK	44 degrees C / 111 degrees F
	SFB 0 Exhaust1	OK	39 degrees C / 102 degrees F
	SFB 0 Inlet1	OK	41 degrees C / 105 degrees F
	SFB 0 Exhaust2	OK	45 degrees C / 113 degrees F
	SFB 0 SFB2-PF-local	OK	45 degrees C / 113 degrees F
	SFB 0 SFB2-PF-die	OK	51 degrees C / 123 degrees F
	SFB 1 Inlet2	OK	30 degrees C / 86 degrees F
	SFB 1 Exhaust1	OK	27 degrees C / 80 degrees F
	SFB 1 Inlet1	OK	28 degrees C / 82 degrees F
	SFB 1 Exhaust2	OK	31 degrees C / 87 degrees F
	SFB 1 SFB2-PF-local	OK	30 degrees C / 86 degrees F
	SFB 1 SFB2-PF-die	OK	37 degrees C / 98 degrees F
	SFB 2 Inlet2	OK	28 degrees C / 82 degrees F
	SFB 2 Exhaust1	OK	26 degrees C / 78 degrees F
	SFB 2 Inlet1	OK	27 degrees C / 80 degrees F
	SFB 2 Exhaust2	OK	28 degrees C / 82 degrees F
	SFB 2 SFB2-PF-local	OK	27 degrees C / 80 degrees F
	SFB 2 SFB2-PF-die	OK	33 degrees C / 91 degrees F
	SFB 3 Inlet2	OK	28 degrees C / 82 degrees F
	SFB 3 Exhaust1	OK	26 degrees C / 78 degrees F
	SFB 3 Inlet1	OK	26 degrees C / 78 degrees F
	SFB 3 Exhaust2	OK	28 degrees C / 82 degrees F
	SFB 3 SFB2-PF-local	OK	27 degrees C / 80 degrees F
	SFB 3 SFB2-PF-die	OK	33 degrees C / 91 degrees F
	SFB 4 Inlet2	OK	28 degrees C / 82 degrees F
	SFB 4 Exhaust1	OK	26 degrees C / 78 degrees F
	SFB 4 Inlet1	OK	26 degrees C / 78 degrees F
	SFB 4 Exhaust2	OK	28 degrees C / 82 degrees F

SFB 4 SFB2-PF-local	OK	27 degrees C / 80 degrees F
SFB 4 SFB2-PF-die	OK	32 degrees C / 89 degrees F
SFB 5 Inlet2	OK	29 degrees C / 84 degrees F
SFB 5 Exhaust1	OK	27 degrees C / 80 degrees F
SFB 5 Inlet1	OK	28 degrees C / 82 degrees F
SFB 5 Exhaust2	OK	29 degrees C / 84 degrees F
SFB 5 SFB2-PF-local	OK	28 degrees C / 82 degrees F
SFB 5 SFB2-PF-die	OK	34 degrees C / 93 degrees F
SFB 6 Inlet2	OK	33 degrees C / 91 degrees F
SFB 6 Exhaust1	OK	32 degrees C / 89 degrees F
SFB 6 Inlet1	OK	32 degrees C / 89 degrees F
SFB 6 Exhaust2	OK	34 degrees C / 93 degrees F
SFB 6 SFB2-PF-local	OK	33 degrees C / 91 degrees F
SFB 6 SFB2-PF-die	OK	40 degrees C / 104 degrees F
SFB 7 Inlet2	OK	29 degrees C / 84 degrees F
SFB 7 Exhaust1	OK	28 degrees C / 82 degrees F
SFB 7 Inlet1	OK	29 degrees C / 84 degrees F
SFB 7 Exhaust2	OK	29 degrees C / 84 degrees F
SFB 7 SFB2-PF-local	OK	28 degrees C / 82 degrees F
SFB 7 SFB2-PF-die	OK	33 degrees C / 91 degrees F
FPC 0 Intake	OK	29 degrees C / 84 degrees F
FPC 0 Exhaust A	OK	42 degrees C / 107 degrees F
FPC 0 Exhaust B	OK	42 degrees C / 107 degrees F
FPC 0 XL 0 TSen	OK	38 degrees C / 100 degrees F
FPC 0 XL 0 Chip	OK	53 degrees C / 127 degrees F
FPC 0 XL 0 XR2 0 TSen	OK	38 degrees C / 100 degrees F
FPC 0 XL 0 XR2 0 Chip	OK	59 degrees C / 138 degrees F
FPC 0 XL 0 XR2 1 TSen	OK	38 degrees C / 100 degrees F
FPC 0 XL 0 XR2 1 Chip	OK	59 degrees C / 138 degrees F
FPC 0 XL 1 TSen	OK	30 degrees C / 86 degrees F
FPC 0 XL 1 Chip	OK	42 degrees C / 107 degrees F
FPC 0 XL 1 XR2 0 TSen	OK	30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 XL 1 XR2 1 TSen	OK	30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 1 Chip	OK	50 degrees C / 122 degrees F
FPC 0 XM 0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 XM 1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 1 Chip	OK	42 degrees C / 107 degrees F
FPC 0 XM 2 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 2 Chip	OK	42 degrees C / 107 degrees F
FPC 0 XM 3 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 3 Chip	OK	40 degrees C / 104 degrees F
FPC 0 PCIe Switch TSen	OK	42 degrees C / 107 degrees F
FPC 0 PCIe Switch Chip	OK	22 degrees C / 71 degrees F
FPC 1 Intake	OK	29 degrees C / 84 degrees F
FPC 1 Exhaust A	OK	52 degrees C / 125 degrees F
FPC 1 Exhaust B	OK	44 degrees C / 111 degrees F
FPC 1 EA0 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA0 Chip	OK	47 degrees C / 116 degrees F
FPC 1 EA0_XR0 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA0_XR0 Chip	OK	56 degrees C / 132 degrees F
FPC 1 EA0_XR1 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA0_XR1 Chip	OK	53 degrees C / 127 degrees F
FPC 1 EA1 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA1 Chip	OK	49 degrees C / 120 degrees F
FPC 1 EA1_XR0 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA1_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 1 EA1_XR1 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA1_XR1 Chip	OK	58 degrees C / 136 degrees F

FPC 1 PEX TSen	OK	54 degrees C / 129 degrees F
FPC 1 PEX Chip	OK	39 degrees C / 102 degrees F
FPC 1 EA2 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA2 Chip	OK	39 degrees C / 102 degrees F
FPC 1 EA2_XR0 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA2_XR0 Chip	OK	45 degrees C / 113 degrees F
FPC 1 EA2_XR1 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA2_XR1 Chip	OK	42 degrees C / 107 degrees F
FPC 1 EA3 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA3 Chip	OK	40 degrees C / 104 degrees F
FPC 1 EA3_XR0 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA3_XR0 Chip	OK	50 degrees C / 122 degrees F
FPC 1 EA3_XR1 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA3_XR1 Chip	OK	46 degrees C / 114 degrees F
FPC 1 EA0_HMC0 Logic die	OK	60 degrees C / 140 degrees F
FPC 1 EA0_HMC0 DRAM botm	OK	57 degrees C / 134 degrees F
FPC 1 EA0_HMC1 Logic die	OK	61 degrees C / 141 degrees F
FPC 1 EA0_HMC1 DRAM botm	OK	58 degrees C / 136 degrees F
FPC 1 EA0_HMC2 Logic die	OK	57 degrees C / 134 degrees F
FPC 1 EA0_HMC2 DRAM botm	OK	54 degrees C / 129 degrees F
FPC 1 EA1_HMC0 Logic die	OK	65 degrees C / 149 degrees F
FPC 1 EA1_HMC0 DRAM botm	OK	62 degrees C / 143 degrees F
FPC 1 EA1_HMC1 Logic die	OK	64 degrees C / 147 degrees F
FPC 1 EA1_HMC1 DRAM botm	OK	61 degrees C / 141 degrees F
FPC 1 EA1_HMC2 Logic die	OK	61 degrees C / 141 degrees F
FPC 1 EA1_HMC2 DRAM botm	OK	58 degrees C / 136 degrees F
FPC 1 EA2_HMC0 Logic die	OK	50 degrees C / 122 degrees F
FPC 1 EA2_HMC0 DRAM botm	OK	47 degrees C / 116 degrees F
FPC 1 EA2_HMC1 Logic die	OK	54 degrees C / 129 degrees F
FPC 1 EA2_HMC1 DRAM botm	OK	51 degrees C / 123 degrees F
FPC 1 EA2_HMC2 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA2_HMC2 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 1 EA3_HMC0 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA3_HMC0 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 1 EA3_HMC1 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA3_HMC1 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 1 EA3_HMC2 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA3_HMC2 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 7 Intake	OK	30 degrees C / 86 degrees F
FPC 7 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 7 Exhaust B	OK	38 degrees C / 100 degrees F
FPC 7 QX 0 TSen	OK	48 degrees C / 118 degrees F
FPC 7 QX 0 Chip	OK	51 degrees C / 123 degrees F
FPC 7 LU 0 TCAM TSen	OK	48 degrees C / 118 degrees F
FPC 7 LU 0 TCAM Chip	OK	51 degrees C / 123 degrees F
FPC 7 LU 0 TSen	OK	48 degrees C / 118 degrees F
FPC 7 LU 0 Chip	OK	50 degrees C / 122 degrees F
FPC 7 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 7 MQ 0 Chip	OK	54 degrees C / 129 degrees F
FPC 7 QX 1 TSen	OK	41 degrees C / 105 degrees F
FPC 7 QX 1 Chip	OK	42 degrees C / 107 degrees F
FPC 7 LU 1 TCAM TSen	OK	41 degrees C / 105 degrees F
FPC 7 LU 1 TCAM Chip	OK	43 degrees C / 109 degrees F
FPC 7 LU 1 TSen	OK	41 degrees C / 105 degrees F
FPC 7 LU 1 Chip	OK	46 degrees C / 114 degrees F
FPC 7 MQ 1 TSen	OK	41 degrees C / 105 degrees F
FPC 7 MQ 1 Chip	OK	47 degrees C / 116 degrees F
ADC 7 Intake	OK	32 degrees C / 89 degrees F
ADC 7 Exhaust	OK	39 degrees C / 102 degrees F
ADC 7 ADC-XF1	OK	46 degrees C / 114 degrees F

	ADC 7 ADC-XF0	OK	54 degrees C / 129 degrees F
Fans	Fan Tray 0 Fan 1	OK	6240 RPM
	Fan Tray 0 Fan 2	OK	6120 RPM
	Fan Tray 0 Fan 3	OK	6120 RPM
	Fan Tray 0 Fan 4	OK	5760 RPM
	Fan Tray 0 Fan 5	OK	5880 RPM
	Fan Tray 0 Fan 6	OK	6000 RPM
	Fan Tray 1 Fan 1	OK	5880 RPM
	Fan Tray 1 Fan 2	OK	5880 RPM
	Fan Tray 1 Fan 3	OK	6000 RPM
	Fan Tray 1 Fan 4	OK	6000 RPM
	Fan Tray 1 Fan 5	OK	6000 RPM
	Fan Tray 1 Fan 6	OK	6000 RPM

show chassis environment (T320 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	
	PEM 1	Absent	
Temp	SCG 0	OK	28 degrees C / 82 degrees F
	SCG 1	OK	28 degrees C / 82 degrees F
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	33 degrees C / 91 degrees F
	SIB 1	OK	33 degrees C / 91 degrees F
	SIB 2	OK	34 degrees C / 93 degrees F
	FPC 0 Top	OK	38 degrees C / 100 degrees F
	FPC 0 Bottom	OK	32 degrees C / 89 degrees F
	FPC 1 Top	OK	38 degrees C / 100 degrees F
	FPC 1 Bottom	OK	33 degrees C / 91 degrees F
	FPC 2 Top	OK	36 degrees C / 96 degrees F
	FPC 2 Bottom	OK	31 degrees C / 87 degrees F
	FPM GBUS	OK	26 degrees C / 78 degrees F
	FPM Display	OK	29 degrees C / 84 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (MX10003 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	CB 0 Exhaust Temp Sensor 0x49	OK	36 degrees C / 96 degrees F
	CB 0 Inlet Temp Sensor 0x49	OK	29 degrees C / 84 degrees F
	CB 1 Exhaust Temp Sensor 0x49	OK	36 degrees C / 96 degrees F
	CB 1 Inlet Temp Sensor 0x49	OK	31 degrees C / 87 degrees F
	FPC 0 Intake Temp Sensor	OK	29 degrees C / 84 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	55 degrees C / 131 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 0 EA0 Chip	OK	58 degrees C / 136 degrees F
	FPC 0 EA0-XR0 Chip	OK	61 degrees C / 141 degrees F
	FPC 0 EA0-XR1 Chip	OK	62 degrees C / 143 degrees F
	FPC 0 EA1 Chip	OK	67 degrees C / 152 degrees F
	FPC 0 EA1-XR0 Chip	OK	71 degrees C / 159 degrees F
	FPC 0 EA1-XR1 Chip	OK	72 degrees C / 161 degrees F
	FPC 0 PEX Chip	OK	75 degrees C / 167 degrees F
	FPC 0 EA2 Chip	OK	49 degrees C / 120 degrees F
	FPC 0 EA2-XR0 Chip	OK	55 degrees C / 131 degrees F
	FPC 0 EA2-XR1 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 PF Chip	OK	68 degrees C / 154 degrees F
	FPC 0 EA0_HMC0 Logic die	OK	72 degrees C / 161 degrees F
	FPC 0 EA0_HMC0 DRAM botm	OK	69 degrees C / 156 degrees F
	FPC 0 EA0_HMC1 Logic die	OK	72 degrees C / 161 degrees F
	FPC 0 EA0_HMC1 DRAM botm	OK	69 degrees C / 156 degrees F
	FPC 0 EA0_HMC2 Logic die	OK	75 degrees C / 167 degrees F
	FPC 0 EA0_HMC2 DRAM botm	OK	72 degrees C / 161 degrees F
	FPC 0 EA1_HMC0 Logic die	OK	81 degrees C / 177 degrees F
	FPC 0 EA1_HMC0 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 0 EA1_HMC1 Logic die	OK	79 degrees C / 174 degrees F
	FPC 0 EA1_HMC1 DRAM botm	OK	76 degrees C / 168 degrees F
	FPC 0 EA1_HMC2 Logic die	OK	82 degrees C / 179 degrees F
	FPC 0 EA1_HMC2 DRAM botm	OK	79 degrees C / 174 degrees F
	FPC 0 EA2_HMC0 Logic die	OK	61 degrees C / 141 degrees F
	FPC 0 EA2_HMC0 DRAM botm	OK	58 degrees C / 136 degrees F
	FPC 0 EA2_HMC1 Logic die	OK	62 degrees C / 143 degrees F
	FPC 0 EA2_HMC1 DRAM botm	OK	59 degrees C / 138 degrees F
	FPC 0 EA2_HMC2 Logic die	OK	64 degrees C / 147 degrees F
	FPC 0 EA2_HMC2 DRAM botm	OK	61 degrees C / 141 degrees F
	FPC 1 Intake Temp Sensor	OK	28 degrees C / 82 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 1 EA0 Chip	OK	64 degrees C / 147 degrees F
	FPC 1 EA0-XR0 Chip	OK	67 degrees C / 152 degrees F
	FPC 1 EA0-XR1 Chip	OK	68 degrees C / 154 degrees F
	FPC 1 EA1 Chip	OK	70 degrees C / 158 degrees F
	FPC 1 EA1-XR0 Chip	OK	74 degrees C / 165 degrees F
	FPC 1 EA1-XR1 Chip	OK	74 degrees C / 165 degrees F
	FPC 1 PEX Chip	OK	88 degrees C / 190 degrees F
	FPC 1 EA2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 EA2-XR0 Chip	OK	54 degrees C / 129 degrees F
	FPC 1 EA2-XR1 Chip	OK	56 degrees C / 132 degrees F
	FPC 1 PF Chip	OK	71 degrees C / 159 degrees F
	FPC 1 EA0_HMC0 Logic die	OK	74 degrees C / 165 degrees F
	FPC 1 EA0_HMC0 DRAM botm	OK	71 degrees C / 159 degrees F
	FPC 1 EA0_HMC1 Logic die	OK	78 degrees C / 172 degrees F
	FPC 1 EA0_HMC1 DRAM botm	OK	75 degrees C / 167 degrees F

	FPC 1 EA0_HMC2 Logic die	OK	78 degrees C / 172 degrees F
	FPC 1 EA0_HMC2 DRAM botm	OK	75 degrees C / 167 degrees F
	FPC 1 EA1_HMC0 Logic die	OK	84 degrees C / 183 degrees F
	FPC 1 EA1_HMC0 DRAM botm	OK	81 degrees C / 177 degrees F
	FPC 1 EA1_HMC1 Logic die	OK	81 degrees C / 177 degrees F
	FPC 1 EA1_HMC1 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 1 EA1_HMC2 Logic die	OK	85 degrees C / 185 degrees F
	FPC 1 EA1_HMC2 DRAM botm	OK	82 degrees C / 179 degrees F
	FPC 1 EA2_HMC0 Logic die	OK	63 degrees C / 145 degrees F
	FPC 1 EA2_HMC0 DRAM botm	OK	60 degrees C / 140 degrees F
	FPC 1 EA2_HMC1 Logic die	OK	60 degrees C / 140 degrees F
	FPC 1 EA2_HMC1 DRAM botm	OK	57 degrees C / 134 degrees F
	FPC 1 EA2_HMC2 Logic die	OK	66 degrees C / 150 degrees F
	FPC 1 EA2_HMC2 DRAM botm	OK	63 degrees C / 145 degrees F
Power	PEM 0	OK	
	PEM 1	OK	
	PEM 2	OK	
	PEM 3	OK	
	PEM 4	Absent	
	PEM 5	Absent	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 0	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed

show chassis environment (MX10008 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	Routing Engine 0 CPU	OK	41 degrees C / 105 degrees F
	Routing Engine 1 CPU	OK	40 degrees C / 104 degrees F
	CB 0 Intake A Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 0 Intake B Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 0 Exhaust A Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 0 Exhaust B Temp Sensor	OK	30 degrees C / 86 degrees F
	CB 0 Middle Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 1 Intake A Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 1 Intake B Temp Sensor	OK	23 degrees C / 73 degrees F
	CB 1 Exhaust A Temp Sensor	OK	27 degrees C / 80 degrees F
	CB 1 Exhaust B Temp Sensor	OK	29 degrees C / 84 degrees F
	CB 1 Middle Temp Sensor	OK	28 degrees C / 82 degrees F
	FPC 0 Intake-A Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 0 EA0 Temp Sensor	OK	66 degrees C / 150 degrees F
	FPC 0 EA0_XR0 Temp Sensor	OK	69 degrees C / 156 degrees F
	FPC 0 EA0_XR1 Temp Sensor	OK	73 degrees C / 163 degrees F

FPC 0 EA1 Temp Sensor	OK	60 degrees C / 140 degrees F
FPC 0 EA1_XR0 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 0 EA1_XR1 Temp Sensor	OK	63 degrees C / 145 degrees F
FPC 0 EA2 Temp Sensor	OK	68 degrees C / 154 degrees F
FPC 0 EA2_XR0 Temp Sensor	OK	73 degrees C / 163 degrees F
FPC 0 EA2_XR1 Temp Sensor	OK	72 degrees C / 161 degrees F
FPC 0 EA3 Temp Sensor	OK	63 degrees C / 145 degrees F
FPC 0 EA3_XR0 Temp Sensor	OK	66 degrees C / 150 degrees F
FPC 0 EA3_XR1 Temp Sensor	OK	65 degrees C / 149 degrees F
FPC 0 EA4 Temp Sensor	OK	68 degrees C / 154 degrees F
FPC 0 EA4_XR0 Temp Sensor	OK	71 degrees C / 159 degrees F
FPC 0 EA4_XR1 Temp Sensor	OK	70 degrees C / 158 degrees F
FPC 0 EA5 Temp Sensor	OK	56 degrees C / 132 degrees F
FPC 0 EA5_XR0 Temp Sensor	OK	61 degrees C / 141 degrees F
FPC 0 EA5_XR1 Temp Sensor	OK	63 degrees C / 145 degrees F
FPC 0 EA0_HMC0 Logic die	OK	75 degrees C / 167 degrees F
FPC 0 EA0_HMC0 DRAM botm	OK	72 degrees C / 161 degrees F
FPC 0 EA0_HMC1 Logic die	OK	75 degrees C / 167 degrees F
FPC 0 EA0_HMC1 DRAM botm	OK	72 degrees C / 161 degrees F
FPC 0 EA0_HMC2 Logic die	OK	77 degrees C / 170 degrees F
FPC 0 EA0_HMC2 DRAM botm	OK	74 degrees C / 165 degrees F
FPC 0 EA1_HMC0 Logic die	OK	72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 0 EA1_HMC1 Logic die	OK	73 degrees C / 163 degrees F
FPC 0 EA1_HMC1 DRAM botm	OK	70 degrees C / 158 degrees F
FPC 0 EA1_HMC2 Logic die	OK	72 degrees C / 161 degrees F
FPC 0 EA1_HMC2 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 0 EA2_HMC0 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA2_HMC0 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA2_HMC1 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA2_HMC1 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA2_HMC2 Logic die	OK	79 degrees C / 174 degrees F
FPC 0 EA2_HMC2 DRAM botm	OK	76 degrees C / 168 degrees F
FPC 0 EA3_HMC0 Logic die	OK	77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 DRAM botm	OK	74 degrees C / 165 degrees F
FPC 0 EA3_HMC1 Logic die	OK	78 degrees C / 172 degrees F
FPC 0 EA3_HMC1 DRAM botm	OK	75 degrees C / 167 degrees F
FPC 0 EA3_HMC2 Logic die	OK	77 degrees C / 170 degrees F
FPC 0 EA3_HMC2 DRAM botm	OK	74 degrees C / 165 degrees F
FPC 0 EA4_HMC0 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA4_HMC0 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA4_HMC1 Logic die	OK	81 degrees C / 177 degrees F
FPC 0 EA4_HMC1 DRAM botm	OK	78 degrees C / 172 degrees F
FPC 0 EA4_HMC2 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA4_HMC2 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA5_HMC0 Logic die	OK	68 degrees C / 154 degrees F
FPC 0 EA5_HMC0 DRAM botm	OK	65 degrees C / 149 degrees F
FPC 0 EA5_HMC1 Logic die	OK	68 degrees C / 154 degrees F
FPC 0 EA5_HMC1 DRAM botm	OK	65 degrees C / 149 degrees F
FPC 0 EA5_HMC2 Logic die	OK	67 degrees C / 152 degrees F
FPC 0 EA5_HMC2 DRAM botm	OK	64 degrees C / 147 degrees F
FPC 2 Intake-A Temp Sensor	OK	32 degrees C / 89 degrees F
FPC 2 Exhaust-A Temp Sensor	OK	52 degrees C / 125 degrees F
FPC 2 Exhaust-B Temp Sensor	OK	50 degrees C / 122 degrees F
FPC 2 EA0 Temp Sensor	OK	71 degrees C / 159 degrees F
FPC 2 EA0_XR0 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA0_XR1 Temp Sensor	OK	78 degrees C / 172 degrees F
FPC 2 EA1 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 2 EA1_XR0 Temp Sensor	OK	67 degrees C / 152 degrees F
FPC 2 EA1_XR1 Temp Sensor	OK	65 degrees C / 149 degrees F

FPC 2 EA2 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA2_XR0 Temp Sensor	OK	80 degrees C / 176 degrees F
FPC 2 EA2_XR1 Temp Sensor	OK	80 degrees C / 176 degrees F
FPC 2 EA3 Temp Sensor	OK	66 degrees C / 150 degrees F
FPC 2 EA3_XR0 Temp Sensor	OK	69 degrees C / 156 degrees F
FPC 2 EA3_XR1 Temp Sensor	OK	69 degrees C / 156 degrees F
FPC 2 EA4 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA4_XR0 Temp Sensor	OK	76 degrees C / 168 degrees F
FPC 2 EA4_XR1 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA5 Temp Sensor	OK	60 degrees C / 140 degrees F
FPC 2 EA5_XR0 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 2 EA5_XR1 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 2 EA0_HMC0 Logic die	OK	84 degrees C / 183 degrees F
FPC 2 EA0_HMC0 DRAM botm	OK	81 degrees C / 177 degrees F
FPC 2 EA0_HMC1 Logic die	OK	85 degrees C / 185 degrees F
FPC 2 EA0_HMC1 DRAM botm	OK	82 degrees C / 179 degrees F
FPC 2 EA0_HMC2 Logic die	OK	83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 DRAM botm	OK	80 degrees C / 176 degrees F
FPC 2 EA1_HMC0 Logic die	OK	76 degrees C / 168 degrees F
FPC 2 EA1_HMC0 DRAM botm	OK	73 degrees C / 163 degrees F
FPC 2 EA1_HMC1 Logic die	OK	76 degrees C / 168 degrees F
FPC 2 EA1_HMC1 DRAM botm	OK	73 degrees C / 163 degrees F
FPC 2 EA1_HMC2 Logic die	OK	76 degrees C / 168 degrees F
FPC 2 EA1_HMC2 DRAM botm	OK	73 degrees C / 163 degrees F
FPC 2 EA2_HMC0 Logic die	OK	86 degrees C / 186 degrees F
FPC 2 EA2_HMC0 DRAM botm	OK	83 degrees C / 181 degrees F
FPC 2 EA2_HMC1 Logic die	OK	87 degrees C / 188 degrees F
FPC 2 EA2_HMC1 DRAM botm	OK	84 degrees C / 183 degrees F
FPC 2 EA2_HMC2 Logic die	OK	87 degrees C / 188 degrees F
FPC 2 EA2_HMC2 DRAM botm	OK	84 degrees C / 183 degrees F
FPC 2 EA3_HMC0 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA3_HMC0 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA3_HMC1 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA3_HMC1 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA3_HMC2 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA3_HMC2 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA4_HMC0 Logic die	OK	88 degrees C / 190 degrees F
FPC 2 EA4_HMC0 DRAM botm	OK	85 degrees C / 185 degrees F
FPC 2 EA4_HMC1 Logic die	OK	89 degrees C / 192 degrees F
FPC 2 EA4_HMC1 DRAM botm	OK	86 degrees C / 186 degrees F
FPC 2 EA4_HMC2 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA4_HMC2 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA5_HMC0 Logic die	OK	72 degrees C / 161 degrees F
FPC 2 EA5_HMC0 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 Logic die	OK	69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 DRAM botm	OK	66 degrees C / 150 degrees F
FPC 2 EA5_HMC2 Logic die	OK	72 degrees C / 161 degrees F
FPC 2 EA5_HMC2 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 3 Intake-A Temp Sensor	OK	30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor	OK	48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor	OK	44 degrees C / 111 degrees F
FPC 3 EA0 Temp Sensor	OK	60 degrees C / 140 degrees F
FPC 3 EA0_XR0 Temp Sensor	OK	65 degrees C / 149 degrees F
FPC 3 EA0_XR1 Temp Sensor	OK	67 degrees C / 152 degrees F
FPC 3 EA1 Temp Sensor	OK	54 degrees C / 129 degrees F
FPC 3 EA1_XR0 Temp Sensor	OK	59 degrees C / 138 degrees F
FPC 3 EA1_XR1 Temp Sensor	OK	58 degrees C / 136 degrees F
FPC 3 EA2 Temp Sensor	OK	62 degrees C / 143 degrees F
FPC 3 EA2_XR0 Temp Sensor	OK	66 degrees C / 150 degrees F
FPC 3 EA2_XR1 Temp Sensor	OK	66 degrees C / 150 degrees F

	FPC 3 EA3 Temp Sensor	OK	54 degrees C / 129 degrees F
	FPC 3 EA3_XR0 Temp Sensor	OK	57 degrees C / 134 degrees F
	FPC 3 EA3_XR1 Temp Sensor	OK	56 degrees C / 132 degrees F
	FPC 3 EA4 Temp Sensor	OK	68 degrees C / 154 degrees F
	FPC 3 EA4_XR0 Temp Sensor	OK	71 degrees C / 159 degrees F
	FPC 3 EA4_XR1 Temp Sensor	OK	70 degrees C / 158 degrees F
	FPC 3 EA5 Temp Sensor	OK	55 degrees C / 131 degrees F
	FPC 3 EA5_XR0 Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 3 EA5_XR1 Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 3 EA0_HMC0 Logic die	OK	69 degrees C / 156 degrees F
	FPC 3 EA0_HMC0 DRAM botm	OK	66 degrees C / 150 degrees F
	FPC 3 EA0_HMC1 Logic die	OK	70 degrees C / 158 degrees F
	FPC 3 EA0_HMC1 DRAM botm	OK	67 degrees C / 152 degrees F
	FPC 3 EA0_HMC2 Logic die	OK	69 degrees C / 156 degrees F
	FPC 3 EA0_HMC2 DRAM botm	OK	66 degrees C / 150 degrees F
	FPC 3 EA1_HMC0 Logic die	OK	67 degrees C / 152 degrees F
	FPC 3 EA1_HMC0 DRAM botm	OK	64 degrees C / 147 degrees F
	FPC 3 EA1_HMC1 Logic die	OK	64 degrees C / 147 degrees F
	FPC 3 EA1_HMC1 DRAM botm	OK	61 degrees C / 141 degrees F
	FPC 3 EA1_HMC2 Logic die	OK	64 degrees C / 147 degrees F
	FPC 3 EA1_HMC2 DRAM botm	OK	61 degrees C / 141 degrees F
	FPC 3 EA2_HMC0 Logic die	OK	74 degrees C / 165 degrees F
	FPC 3 EA2_HMC0 DRAM botm	OK	71 degrees C / 159 degrees F
	FPC 3 EA2_HMC1 Logic die	OK	76 degrees C / 168 degrees F
	FPC 3 EA2_HMC1 DRAM botm	OK	73 degrees C / 163 degrees F
	FPC 3 EA2_HMC2 Logic die	OK	74 degrees C / 165 degrees F
	FPC 3 EA2_HMC2 DRAM botm	OK	71 degrees C / 159 degrees F
	FPC 3 EA3_HMC0 Logic die	OK	69 degrees C / 156 degrees F
	FPC 3 EA3_HMC0 DRAM botm	OK	66 degrees C / 150 degrees F
	FPC 3 EA3_HMC1 Logic die	OK	68 degrees C / 154 degrees F
	FPC 3 EA3_HMC1 DRAM botm	OK	65 degrees C / 149 degrees F
	FPC 3 EA3_HMC2 Logic die	OK	68 degrees C / 154 degrees F
	FPC 3 EA3_HMC2 DRAM botm	OK	65 degrees C / 149 degrees F
	FPC 3 EA4_HMC0 Logic die	OK	81 degrees C / 177 degrees F
	FPC 3 EA4_HMC0 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 3 EA4_HMC1 Logic die	OK	80 degrees C / 176 degrees F
	FPC 3 EA4_HMC1 DRAM botm	OK	77 degrees C / 170 degrees F
	FPC 3 EA4_HMC2 Logic die	OK	81 degrees C / 177 degrees F
	FPC 3 EA4_HMC2 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 3 EA5_HMC0 Logic die	OK	68 degrees C / 154 degrees F
	FPC 3 EA5_HMC0 DRAM botm	OK	65 degrees C / 149 degrees F
	FPC 3 EA5_HMC1 Logic die	OK	70 degrees C / 158 degrees F
	FPC 3 EA5_HMC1 DRAM botm	OK	67 degrees C / 152 degrees F
	FPC 3 EA5_HMC2 Logic die	OK	69 degrees C / 156 degrees F
	FPC 3 EA5_HMC2 DRAM botm	OK	66 degrees C / 150 degrees F
Power	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	OK	27 degrees C / 80 degrees F
	PEM 2	OK	30 degrees C / 86 degrees F
	PEM 3	Check	
	PEM 4	Check	
	PEM 5	Check	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	Failed	
	Fan Tray 0 Fan 5	Failed	
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed
	Fan Tray 0 Fan 8	OK	Spinning at normal speed

Fan Tray 0 Fan 9	OK	Spinning at normal speed
Fan Tray 0 Fan 10	OK	Spinning at normal speed
Fan Tray 1 Fan 0	OK	Spinning at normal speed
Fan Tray 1 Fan 1	OK	Spinning at normal speed
Fan Tray 1 Fan 2	OK	Spinning at normal speed
Fan Tray 1 Fan 3	OK	Spinning at normal speed
Fan Tray 1 Fan 4	OK	Spinning at normal speed
Fan Tray 1 Fan 5	OK	Spinning at normal speed
Fan Tray 1 Fan 6	OK	Spinning at normal speed
Fan Tray 1 Fan 7	OK	Spinning at normal speed
Fan Tray 1 Fan 8	OK	Spinning at normal speed
Fan Tray 1 Fan 9	OK	Spinning at normal speed
Fan Tray 1 Fan 10	OK	Spinning at normal speed
SFB 0 Intake-A	OK	32 degrees C / 89 degrees F
SFB 0 Intake-B	OK	21 degrees C / 69 degrees F
SFB 0 Exhaust-A	OK	27 degrees C / 80 degrees F
SFB 0 Exhaust-B	OK	32 degrees C / 89 degrees F
SFB 0 PF0	OK	39 degrees C / 102 degrees F
SFB 0 PF1	OK	29 degrees C / 84 degrees F
SFB 1 Intake-A	OK	43 degrees C / 109 degrees F
SFB 1 Intake-B	OK	20 degrees C / 68 degrees F
SFB 1 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 1 Exhaust-B	OK	44 degrees C / 111 degrees F
SFB 1 PF0	OK	50 degrees C / 122 degrees F
SFB 1 PF1	OK	29 degrees C / 84 degrees F
SFB 2 Intake-A	OK	39 degrees C / 102 degrees F
SFB 2 Intake-B	OK	20 degrees C / 68 degrees F
SFB 2 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 2 Exhaust-B	OK	38 degrees C / 100 degrees F
SFB 2 PF0	OK	45 degrees C / 113 degrees F
SFB 2 PF1	OK	30 degrees C / 86 degrees F
SFB 3 Intake-A	OK	36 degrees C / 96 degrees F
SFB 3 Intake-B	OK	20 degrees C / 68 degrees F
SFB 3 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 3 Exhaust-B	OK	35 degrees C / 95 degrees F
SFB 3 PF0	OK	42 degrees C / 107 degrees F
SFB 3 PF1	OK	29 degrees C / 84 degrees F
SFB 4 Intake-A	OK	30 degrees C / 86 degrees F
SFB 4 Intake-B	OK	20 degrees C / 68 degrees F
SFB 4 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 4 Exhaust-B	OK	31 degrees C / 87 degrees F
SFB 4 PF0	OK	41 degrees C / 105 degrees F
SFB 4 PF1	OK	29 degrees C / 84 degrees F
SFB 5 Intake-A	OK	30 degrees C / 86 degrees F
SFB 5 Intake-B	OK	21 degrees C / 69 degrees F
SFB 5 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 5 Exhaust-B	OK	30 degrees C / 86 degrees F
SFB 5 PF0	OK	35 degrees C / 95 degrees F
SFB 5 PF1	OK	34 degrees C / 93 degrees F

show chassis environment (MX204 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	CB 0 Top Right Inlet Sensor	OK	35 degrees C / 95 degrees F
	CB 0 Top Left Inlet Sensor	OK	37 degrees C / 98 degrees F
	CB 0 Top Right Exhaust Sensor	OK	43 degrees C / 109 degrees F
	CB 0 Top Left Exhaust Sensor	OK	50 degrees C / 122 degrees F

	CB 0 CPU Core-0 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-1 Temp	OK	48 degrees C / 118 degrees F
	CB 0 CPU Core-2 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-3 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-4 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-5 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-6 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-7 Temp	OK	47 degrees C / 116 degrees F
	FPC 0 EAO_HMC0 Logic die	OK	77 degrees C / 170 degrees F
	FPC 0 EAO_HMC0 DRAM botm	OK	74 degrees C / 165 degrees F
	FPC 0 EAO_HMC1 Logic die	OK	81 degrees C / 177 degrees F
	FPC 0 EAO_HMC1 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 0 EAO Chip	OK	94 degrees C / 201 degrees F
	FPC 0 EAO-XR0 Chip	OK	64 degrees C / 147 degrees F
	FPC 0 EAO-XR1 Chip	OK	65 degrees C / 149 degrees F
Power	PEM 0	Absent	
	PEM 1	OK	48 degrees C / 118 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed

show chassis environment (T640 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	22 degrees C / 71 degrees F
	SCG 0	OK	30 degrees C / 86 degrees F
	SCG 1	OK	30 degrees C / 86 degrees F
	Routing Engine 0	Present	
	Routing Engine 1	OK	27 degrees C / 80 degrees F
	CB 0	Present	
	CB 1	OK	33 degrees C / 91 degrees F
	SIB 0	Absent	
	SIB 1	Absent	
	SIB 2	Absent	
	SIB 3	Absent	
	SIB 4	Absent	
	FPC 4 Top	Testing	
	FPC 4 Bottom	Testing	
	FPC 5 Top	Testing	
	FPC 5 Bottom	Testing	
	FPC 6 Top	Testing	
	FPC 6 Bottom	Testing	
	FPM GBUS	OK	23 degrees C / 73 degrees F
	FPM Display	Absent	
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed

	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Fourth Blower from top	OK	Spinning at normal speed
	Bottom Blower	OK	Spinning at normal speed
	Middle Blower	OK	Spinning at normal speed
	Top Blower	OK	Spinning at normal speed
	Second Blower from top	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (T4000 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	33 degrees C / 91 degrees F
	PEM 1	Absent	
	SCG 0	OK	33 degrees C / 91 degrees F
	SCG 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	33 degrees C / 91 degrees F
	Routing Engine 0 CPU	OK	50 degrees C / 122 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU	OK	46 degrees C / 114 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	33 degrees C / 91 degrees F
	SIB 0	OK	42 degrees C / 107 degrees F
	SIB 1	OK	42 degrees C / 107 degrees F
	SIB 2	OK	42 degrees C / 107 degrees F
	SIB 3	OK	43 degrees C / 109 degrees F
	SIB 4	OK	45 degrees C / 113 degrees F
	FPC 0 Fan Intake	OK	34 degrees C / 93 degrees F
	FPC 0 Fan Exhaust	OK	48 degrees C / 118 degrees F
	FPC 0 PMB	OK	47 degrees C / 116 degrees F
	FPC 0 LMB0	OK	50 degrees C / 122 degrees F
	FPC 0 LMB1	OK	41 degrees C / 105 degrees F
	FPC 0 LMB2	OK	35 degrees C / 95 degrees F
	FPC 0 PFE1 LU2	OK	46 degrees C / 114 degrees F
	FPC 0 PFE1 LU0	OK	41 degrees C / 105 degrees F
	FPC 0 PFE0 LU0	OK	57 degrees C / 134 degrees F
	FPC 0 XF1	OK	46 degrees C / 114 degrees F
	FPC 0 XF0	OK	52 degrees C / 125 degrees F
	FPC 0 XM1	OK	41 degrees C / 105 degrees F
	FPC 0 XM0	OK	50 degrees C / 122 degrees F
	FPC 0 PFE0 LU1	OK	56 degrees C / 132 degrees F
	FPC 0 PFE0 LU2	OK	45 degrees C / 113 degrees F
	FPC 0 PFE1 LU1	OK	37 degrees C / 98 degrees F
	FPC 3 Fan Intake	OK	36 degrees C / 96 degrees F
	FPC 3 Fan Exhaust	OK	51 degrees C / 123 degrees F
	FPC 3 PMB	OK	43 degrees C / 109 degrees F
	FPC 3 LMB0	OK	57 degrees C / 134 degrees F
	FPC 3 LMB1	OK	54 degrees C / 129 degrees F
	FPC 3 LMB2	OK	38 degrees C / 100 degrees F
	FPC 3 PFE1 LU2	OK	63 degrees C / 145 degrees F
	FPC 3 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 3 PFE0 LU0	OK	69 degrees C / 156 degrees F
	FPC 3 XF1	OK	62 degrees C / 143 degrees F
	FPC 3 XF0	OK	63 degrees C / 145 degrees F
	FPC 3 XM1	OK	43 degrees C / 109 degrees F

	FPC 3 XM0	OK	67 degrees C / 152 degrees F
	FPC 3 PFE0 LU1	OK	63 degrees C / 145 degrees F
	FPC 3 PFE0 LU2	OK	66 degrees C / 150 degrees F
	FPC 3 PFE1 LU1	OK	41 degrees C / 105 degrees F
	FPC 5 Top	OK	39 degrees C / 102 degrees F
	FPC 5 Bottom	OK	38 degrees C / 100 degrees F
	FPC 6 Fan Intake	OK	33 degrees C / 91 degrees F
	FPC 6 Fan Exhaust	OK	49 degrees C / 120 degrees F
	FPC 6 PMB	OK	40 degrees C / 104 degrees F
	FPC 6 LMB0	OK	60 degrees C / 140 degrees F
	FPC 6 LMB1	OK	58 degrees C / 136 degrees F
	FPC 6 LMB2	OK	40 degrees C / 104 degrees F
	FPC 6 PFE1 LU2	OK	69 degrees C / 156 degrees F
	FPC 6 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 6 PFE0 LU0	OK	71 degrees C / 159 degrees F
	FPC 6 XF1	OK	58 degrees C / 136 degrees F
	FPC 6 XF0	OK	65 degrees C / 149 degrees F
	FPC 6 XM1	OK	39 degrees C / 102 degrees F
	FPC 6 XM0	OK	66 degrees C / 150 degrees F
	FPC 6 PFE0 LU1	OK	69 degrees C / 156 degrees F
	FPC 6 PFE0 LU2	OK	69 degrees C / 156 degrees F
	FPC 6 PFE1 LU1	OK	42 degrees C / 107 degrees F
	FPM GBUS	OK	24 degrees C / 75 degrees F
	FPM Display	OK	27 degrees C / 80 degrees F
Fans	Top Left Front fan	OK	Spinning at high speed
	Top Left Middle fan	OK	Spinning at high speed
	Top Left Rear fan	OK	Spinning at high speed
	Top Right Front fan	OK	Spinning at high speed
	Top Right Middle fan	OK	Spinning at high speed
	Top Right Rear fan	OK	Spinning at high speed
	Bottom Left Front fan	OK	Spinning at high speed
	Bottom Left Middle fan	OK	Spinning at high speed
	Bottom Left Rear fan	OK	Spinning at high speed
	Bottom Right Front fan	OK	Spinning at high speed
	Bottom Right Middle fan	OK	Spinning at high speed
	Bottom Right Rear fan	OK	Spinning at high speed
	Rear Tray Top fan	OK	Spinning at high speed
	Rear Tray Second fan	OK	Spinning at high speed
	Rear Tray Third fan	OK	Spinning at high speed
	Rear Tray Fourth fan	OK	Spinning at high speed
	Rear Tray Fifth fan	OK	Spinning at high speed
	Rear Tray Sixth fan	OK	Spinning at high speed
	Rear Tray Seventh fan	OK	Spinning at high speed
	Rear Tray Bottom fan	OK	Spinning at high speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (TX Matrix Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	29 degrees C / 84 degrees F
	Routing Engine 0	OK	34 degrees C / 93 degrees F
	Routing Engine 1	OK	34 degrees C / 93 degrees F
	CB 0	OK	32 degrees C / 89 degrees F

	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	44 degrees C / 111 degrees F
	SIB 0 (B)	OK	44 degrees C / 111 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	32 degrees C / 89 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP 0	OK	
	CIP 1	OK	
	SPMB 0	OK	
	SPMB 1	OK	

1cc0-re0:

Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Absent	
	SCG 0	OK	35 degrees C / 95 degrees F
	SCG 1	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	36 degrees C / 96 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	40 degrees C / 104 degrees F
	SIB 0 (B)	OK	51 degrees C / 123 degrees F
	FPC 0 Top	OK	45 degrees C / 113 degrees F
	FPC 0 Bottom	OK	31 degrees C / 87 degrees F
	FPC 1 Top	OK	34 degrees C / 93 degrees F
	FPC 1 Bottom	OK	31 degrees C / 87 degrees F
	FPM GBUS	OK	30 degrees C / 86 degrees F
	FPM Display	OK	34 degrees C / 93 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed

```

Bottom Right Rear fan OK      Spinning at normal speed
Rear Tray Top fan      OK      Spinning at normal speed
Rear Tray Second fan   OK      Spinning at normal speed
Rear Tray Third fan    OK      Spinning at normal speed
Rear Tray Fourth fan   OK      Spinning at normal speed
Rear Tray Fifth fan    OK      Spinning at normal speed
Rear Tray Sixth fan    OK      Spinning at normal speed
Rear Tray Seventh fan  OK      Spinning at normal speed
Rear Tray Bottom fan   OK      Spinning at normal speed
Misc CIP               OK
SPMB 0                 OK
SPMB 1                 OK

```

```
lcc2-re0:
```

```

-----
Class Item              Status      Measurement
Temp PEM 0              OK          29 degrees C / 84 degrees F
      PEM 1              Absent
      SCG 0              OK          32 degrees C / 89 degrees F
      SCG 1              Absent
      Routing Engine 0   OK          31 degrees C / 87 degrees F
      Routing Engine 1   OK          32 degrees C / 89 degrees F
      CB 0               OK          30 degrees C / 86 degrees F
      SIB 0              OK          38 degrees C / 100 degrees F
      SIB 0 (B)          OK          49 degrees C / 120 degrees F
      FPC 0 Top          OK          45 degrees C / 113 degrees F
      FPC 0 Bottom       OK          33 degrees C / 91 degrees F
      FPC 1 Top          OK          37 degrees C / 98 degrees F
      FPC 1 Bottom       OK          33 degrees C / 91 degrees F
      FPM GBUS           OK          30 degrees C / 86 degrees F
      FPM Display        OK          34 degrees C / 93 degrees F
Fans  Top Left Front fan OK          Spinning at normal speed
      Top Left Middle fan OK          Spinning at normal speed
...

```

show chassis environment (T1600 Router)

```
user@host> show chassis environment
```

```

Class Item              Status      Measurement
Temp PEM 0              OK          27 degrees C / 80 degrees F
      PEM 1              Absent
      SCG 0              OK          31 degrees C / 87 degrees F
      SCG 1              OK          35 degrees C / 95 degrees F
      Routing Engine 0   OK          30 degrees C / 86 degrees F
      Routing Engine 1   OK          30 degrees C / 86 degrees F
      CB 0               OK          31 degrees C / 87 degrees F
      CB 1               OK          31 degrees C / 87 degrees F
      SIB 0              OK          41 degrees C / 105 degrees F
      SIB 0 (B)          OK          34 degrees C / 93 degrees F
      SIB 1              OK          0 degrees C / 32 degrees F
      SIB 1 (B)          OK          0 degrees C / 32 degrees F
      SIB 2              OK          0 degrees C / 32 degrees F
      SIB 2 (B)          OK          0 degrees C / 32 degrees F
      SIB 3              OK          0 degrees C / 32 degrees F
      SIB 3 (B)          OK          0 degrees C / 32 degrees F
      SIB 4              OK          0 degrees C / 32 degrees F
      SIB 4 (B)          OK          0 degrees C / 32 degrees F
      FPC 0 Top          OK          49 degrees C / 120 degrees F
      FPC 0 Bottom       OK          50 degrees C / 122 degrees F

```

Fans	FPC 1 Top	OK	48 degrees C / 118 degrees F
	FPC 1 Bottom	OK	49 degrees C / 120 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	30 degrees C / 86 degrees F
	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
Misc	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (TX Matrix Plus Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	28 degrees C / 82 degrees F
	PEM 1	Absent	
	Routing Engine 0	OK	27 degrees C / 80 degrees F
	Routing Engine 1	OK	29 degrees C / 84 degrees F
	CB 0 Intake	OK	26 degrees C / 78 degrees F
	CB 0 Exhaust A	OK	25 degrees C / 77 degrees F
	CB 0 Exhaust B	OK	25 degrees C / 77 degrees F
	CB 1 Intake	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust A	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust B	OK	26 degrees C / 78 degrees F
	SIB F13 0	OK	47 degrees C / 116 degrees F
	SIB F13 0 (B)	OK	48 degrees C / 118 degrees F
	SIB F13 1	OK	38 degrees C / 100 degrees F
	SIB F13 1 (B)	OK	37 degrees C / 98 degrees F
	SIB F2S 0/0	OK	27 degrees C / 80 degrees F
	SIB F2S 0/2	OK	28 degrees C / 82 degrees F
	SIB F2S 0/4	OK	27 degrees C / 80 degrees F
	SIB F2S 0/6	OK	28 degrees C / 82 degrees F
	SIB F2S 1/0	OK	26 degrees C / 78 degrees F
	SIB F2S 1/2	OK	26 degrees C / 78 degrees F
	SIB F2S 1/4	OK	26 degrees C / 78 degrees F
	SIB F2S 1/6	OK	26 degrees C / 78 degrees F
	SIB F2S 2/0	OK	25 degrees C / 77 degrees F
	SIB F2S 2/2	OK	25 degrees C / 77 degrees F
	SIB F2S 2/4	OK	23 degrees C / 73 degrees F

	CIP 0 Intake	OK	23 degrees C / 73 degrees F
	CIP 0 Exhaust A	OK	24 degrees C / 75 degrees F
	CIP 0 Exhaust B	OK	24 degrees C / 75 degrees F
	CIP 1 Intake	OK	24 degrees C / 75 degrees F
	CIP 1 Exhaust A	OK	25 degrees C / 77 degrees F
	CIP 1 Exhaust B	OK	25 degrees C / 77 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 4	OK	Spinning at normal speed
	Fan Tray 2 Fan 5	OK	Spinning at normal speed
	Fan Tray 2 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 7	OK	Spinning at normal speed
	Fan Tray 2 Fan 8	OK	Spinning at normal speed
	Fan Tray 2 Fan 9	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 4	OK	Spinning at normal speed
	Fan Tray 3 Fan 5	OK	Spinning at normal speed
	Fan Tray 3 Fan 6	OK	Spinning at normal speed
	Fan Tray 3 Fan 7	OK	Spinning at normal speed
	Fan Tray 3 Fan 8	OK	Spinning at normal speed
	Fan Tray 3 Fan 9	OK	Spinning at normal speed
	Fan Tray 4 Fan 1	OK	Spinning at normal speed
	Fan Tray 4 Fan 2	OK	Spinning at normal speed
	Fan Tray 4 Fan 3	OK	Spinning at normal speed
	Fan Tray 4 Fan 4	OK	Spinning at normal speed
	Fan Tray 4 Fan 5	OK	Spinning at normal speed
	Fan Tray 4 Fan 6	OK	Spinning at normal speed
	Fan Tray 4 Fan 7	OK	Spinning at normal speed
	Fan Tray 4 Fan 8	OK	Spinning at normal speed
	Fan Tray 4 Fan 9	OK	Spinning at normal speed
	Fan Tray 5 Fan 1	OK	Spinning at normal speed
	Fan Tray 5 Fan 2	OK	Spinning at normal speed
	Fan Tray 5 Fan 3	OK	Spinning at normal speed
	Fan Tray 5 Fan 4	OK	Spinning at normal speed
	Fan Tray 5 Fan 5	OK	Spinning at normal speed
	Fan Tray 5 Fan 6	OK	Spinning at normal speed
	Fan Tray 5 Fan 7	OK	Spinning at normal speed
	Fan Tray 5 Fan 8	OK	Spinning at normal speed
	Fan Tray 5 Fan 9	OK	Spinning at normal speed
Misc	SPMB 0	OK	
	SPMB 1	OK	

1cc0-re0:

Class	Item	Status	Measurement
-------	------	--------	-------------

Temp	PEM 0	OK	27 degrees C / 80 degrees F
	PEM 1	Absent	
	SCG 0	OK	31 degrees C / 87 degrees F
	SCG 1	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	30 degrees C / 86 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	31 degrees C / 87 degrees F
	CB 1	OK	31 degrees C / 87 degrees F
	SIB 0	OK	41 degrees C / 105 degrees F
	SIB 0 (B)	OK	34 degrees C / 93 degrees F
	SIB 1	OK	0 degrees C / 32 degrees F
	SIB 1 (B)	OK	0 degrees C / 32 degrees F
	SIB 2	OK	0 degrees C / 32 degrees F
	SIB 2 (B)	OK	0 degrees C / 32 degrees F
	SIB 3	OK	0 degrees C / 32 degrees F
	SIB 3 (B)	OK	0 degrees C / 32 degrees F
	SIB 4	OK	0 degrees C / 32 degrees F
	SIB 4 (B)	OK	0 degrees C / 32 degrees F
	FPC 0 Top	OK	49 degrees C / 120 degrees F
	FPC 0 Bottom	OK	50 degrees C / 122 degrees F
	FPC 1 Top	OK	48 degrees C / 118 degrees F
	FPC 1 Bottom	OK	49 degrees C / 120 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	30 degrees C / 86 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	Check	30 degrees C / 86 degrees F
	PEM 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	28 degrees C / 82 degrees F
	Routing Engine 0 CPU	OK	42 degrees C / 107 degrees F
	Routing Engine 1	OK	29 degrees C / 84 degrees F

	Routing Engine 1 CPU	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust A	OK	28 degrees C / 82 degrees F
	CB 0 Exhaust B	OK	30 degrees C / 86 degrees F
	CB 1 Intake	OK	31 degrees C / 87 degrees F
	CB 1 Exhaust A	OK	27 degrees C / 80 degrees F
	CB 1 Exhaust B	OK	31 degrees C / 87 degrees F
	SIB F13 0 Board	OK	44 degrees C / 111 degrees F
	SIB F13 0 XF Junction	OK	62 degrees C / 143 degrees F
	SIB F13 3 Board	OK	45 degrees C / 113 degrees F
	SIB F13 3 XF Junction	OK	60 degrees C / 140 degrees F
	SIB F13 6 Board	OK	47 degrees C / 116 degrees F
	SIB F13 6 XF Junction	OK	62 degrees C / 143 degrees F
	SIB F2S 0/0 Board	OK	32 degrees C / 89 degrees F
	SIB F2S 0/0 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 0/2 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/2 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 0/4 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/4 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 0/6 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/6 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 1/0 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 1/0 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 1/2 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 1/2 XF Junction	OK	39 degrees C / 102 degrees F
	SIB F2S 1/4 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 1/4 XF Junction	OK	35 degrees C / 95 degrees F
	SIB F2S 1/6 Board	OK	30 degrees C / 86 degrees F
	SIB F2S 1/6 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 2/0 Board	OK	30 degrees C / 86 degrees F
	SIB F2S 2/0 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 2/2 Board	OK	28 degrees C / 82 degrees F
	SIB F2S 2/2 XF Junction	OK	39 degrees C / 102 degrees F
	SIB F2S 2/4 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 2/4 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 2/6 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 2/6 XF Junction	OK	41 degrees C / 105 degrees F
	CIP 0 Intake	OK	25 degrees C / 77 degrees F
	CIP 0 Exhaust A	OK	26 degrees C / 78 degrees F
	CIP 0 Exhaust B	OK	26 degrees C / 78 degrees F
	CIP 1 Intake	OK	26 degrees C / 78 degrees F
	CIP 1 Exhaust A	OK	27 degrees C / 80 degrees F
	CIP 1 Exhaust B	OK	27 degrees C / 80 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 4	OK	Spinning at normal speed
	Fan Tray 2 Fan 5	OK	Spinning at normal speed

	Fan Tray 2 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 7	OK	Spinning at normal speed
	Fan Tray 2 Fan 8	OK	Spinning at normal speed
	Fan Tray 2 Fan 9	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 4	OK	Spinning at normal speed
	Fan Tray 3 Fan 5	OK	Spinning at normal speed
	Fan Tray 3 Fan 6	OK	Spinning at normal speed
	Fan Tray 3 Fan 7	OK	Spinning at normal speed
	Fan Tray 3 Fan 8	OK	Spinning at normal speed
	Fan Tray 3 Fan 9	OK	Spinning at normal speed
	Fan Tray 4 Fan 1	OK	Spinning at normal speed
	Fan Tray 4 Fan 2	OK	Spinning at normal speed
	Fan Tray 4 Fan 3	OK	Spinning at normal speed
	Fan Tray 4 Fan 4	OK	Spinning at normal speed
	Fan Tray 4 Fan 5	OK	Spinning at normal speed
	Fan Tray 4 Fan 6	OK	Spinning at normal speed
	Fan Tray 4 Fan 7	OK	Spinning at normal speed
	Fan Tray 4 Fan 8	OK	Spinning at normal speed
	Fan Tray 4 Fan 9	OK	Spinning at normal speed
	Fan Tray 5 Fan 1	OK	Spinning at normal speed
	Fan Tray 5 Fan 2	OK	Spinning at normal speed
	Fan Tray 5 Fan 3	OK	Spinning at normal speed
	Fan Tray 5 Fan 4	OK	Spinning at normal speed
	Fan Tray 5 Fan 5	OK	Spinning at normal speed
	Fan Tray 5 Fan 6	OK	Spinning at normal speed
	Fan Tray 5 Fan 7	OK	Spinning at normal speed
	Fan Tray 5 Fan 8	OK	Spinning at normal speed
	Fan Tray 5 Fan 9	Check	
Misc	SPMB 0	OK	
	SPMB 1	OK	
lcc0-re0:			

Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Check	29 degrees C / 84 degrees F
	SCG 0	OK	32 degrees C / 89 degrees F
	SCG 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	32 degrees C / 89 degrees F
	Routing Engine 0 CPU	OK	51 degrees C / 123 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU	OK	49 degrees C / 120 degrees F
	CB 0	OK	34 degrees C / 93 degrees F
	CB 1	OK	34 degrees C / 93 degrees F
	SIB 0	OK	39 degrees C / 102 degrees F
	SIB 0 (B)	Absent	
	SIB 1	OK	39 degrees C / 102 degrees F
	SIB 1 (B)	Absent	
	SIB 2	OK	39 degrees C / 102 degrees F
	SIB 2 (B)	Absent	
	FPC 4 Top	OK	43 degrees C / 109 degrees F
	FPC 4 Bottom	OK	43 degrees C / 109 degrees F
	FPC 7 Fan Intake	OK	35 degrees C / 95 degrees F
	FPC 7 Fan Exhaust	OK	50 degrees C / 122 degrees F
	FPC 7 PMB	OK	50 degrees C / 122 degrees F
	FPC 7 LMB0	OK	55 degrees C / 131 degrees F
	FPC 7 LMB1	OK	49 degrees C / 120 degrees F

	FPC 7 LMB2	OK	39 degrees C / 102 degrees F
	FPC 7 PFE1 LU2	OK	55 degrees C / 131 degrees F
	FPC 7 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 7 PFE0 LU0	OK	62 degrees C / 143 degrees F
	FPC 7 XF1	OK	52 degrees C / 125 degrees F
	FPC 7 XF0	OK	61 degrees C / 141 degrees F
	FPC 7 XM1	OK	39 degrees C / 102 degrees F
	FPC 7 XM0	OK	56 degrees C / 132 degrees F
	FPC 7 PFE0 LU1	OK	60 degrees C / 140 degrees F
	FPC 7 PFE0 LU2	OK	55 degrees C / 131 degrees F
	FPC 7 PFE1 LU1	OK	41 degrees C / 105 degrees F
	FPM GBUS	OK	24 degrees C / 75 degrees F
	FPM Display	OK	28 degrees C / 82 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray fan 1 (Top)	OK	Spinning at normal speed
	Rear Tray fan 2	OK	Spinning at normal speed
	Rear Tray fan 3	OK	Spinning at normal speed
	Rear Tray fan 4	OK	Spinning at normal speed
Misc	Rear Tray fan 5	OK	Spinning at normal speed
	Rear Tray fan 6	OK	Spinning at normal speed
	Rear Tray fan 7	OK	Spinning at normal speed
	Rear Tray fan 8	OK	Spinning at normal speed
	Rear Tray fan 9	OK	Spinning at normal speed
	Rear Tray fan 10	OK	Spinning at normal speed
	Rear Tray fan 11	OK	Spinning at normal speed
	Rear Tray fan 12	OK	Spinning at normal speed
	Rear Tray fan 13	OK	Spinning at normal speed
	Rear Tray fan 14	OK	Spinning at normal speed
	Rear Tray fan 15	OK	Spinning at normal speed
	Rear Tray fan 16 (Bottom)	OK	Spinning at normal speed
	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

show chassis environment (EX4200 Standalone Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
	FPC 0 Power Supply 1	Absent	
Temp	FPC 0 CPU	OK	41 degrees C / 105 degrees F
	FPC 0 EX-PFE1	OK	42 degrees C / 107 degrees F
	FPC 0 EX-PFE2	OK	46 degrees C / 114 degrees F
	FPC 0 GEPHY Front Left	OK	25 degrees C / 77 degrees F
	FPC 0 GEPHY Front Right	OK	27 degrees C / 80 degrees F
Fans	FPC 0 Uplink Conn	OK	29 degrees C / 84 degrees F
	FPC 0 Fan 1	OK	Spinning at normal speed

FPC 0 Fan 2	OK	Spinning at normal speed
FPC 0 Fan 3	OK	Spinning at normal speed

show chassis environment (EX8216 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Power	PSU 0	OK	
	PSU 1	OK	
	PSU 2	OK	
	PSU 3	Check	
	PSU 4	Absent	
	PSU 5	Absent	
Temp	CB 0 Intake	OK	23 degrees C / 73 degrees F
	CB 0 Exhaust	OK	26 degrees C / 78 degrees F
	CB 1 Intake	OK	22 degrees C / 71 degrees F
	CB 1 Exhaust	OK	25 degrees C / 77 degrees F
	FPC 4 Intake	OK	49 degrees C / 120 degrees F
	FPC 4 Exhaust	OK	59 degrees C / 138 degrees F
	SIB 5 Intake	OK	25 degrees C / 77 degrees F
	SIB 5 Exhaust	OK	35 degrees C / 95 degrees F
	SIB 6 Intake	OK	25 degrees C / 77 degrees F
	SIB 6 Exhaust	OK	38 degrees C / 100 degrees F
Fans	Top Fan 1	OK	Spinning at normal speed
	Top Fan 2	OK	Spinning at normal speed
	Top Fan 3	OK	Spinning at normal speed
	Top Fan 4	OK	Spinning at normal speed
	Top Fan 5	OK	Spinning at normal speed
	Top Fan 6	OK	Spinning at normal speed
	Top Fan 7	OK	Spinning at normal speed
	Top Fan 8	OK	Spinning at normal speed
	Top Fan 9	OK	Spinning at normal speed
	Bottom Fan 1	OK	Spinning at normal speed
	Bottom Fan 2	OK	Spinning at normal speed
	Bottom Fan 3	OK	Spinning at normal speed
	Bottom Fan 4	OK	Spinning at normal speed
	Bottom Fan 5	OK	Spinning at normal speed
	Bottom Fan 6	OK	Spinning at normal speed
	Bottom Fan 7	OK	Spinning at normal speed
	Bottom Fan 8	OK	Spinning at normal speed
	Bottom Fan 9	OK	Spinning at normal speed

show chassis environment (EX9200 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	Check	
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	OK	40 degrees C / 104 degrees F
	PEM 3	Absent	
	Routing Engine 0	OK	35 degrees C / 95 degrees F
	Routing Engine 0 CPU	OK	33 degrees C / 91 degrees F
	Routing Engine 1	OK	38 degrees C / 100 degrees F
	Routing Engine 1 CPU	OK	33 degrees C / 91 degrees F
	CB 0 Intake	OK	35 degrees C / 95 degrees F
	CB 0 Exhaust A	OK	33 degrees C / 91 degrees F
	CB 0 Exhaust B	OK	40 degrees C / 104 degrees F

CB 0 ACBC	OK	39 degrees C / 102 degrees F
CB 0 XF A	OK	49 degrees C / 120 degrees F
CB 0 XF B	OK	46 degrees C / 114 degrees F
CB 1 Intake	OK	37 degrees C / 98 degrees F
CB 1 Exhaust A	OK	32 degrees C / 89 degrees F
CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
CB 1 ACBC	OK	41 degrees C / 105 degrees F
CB 1 XF A	OK	49 degrees C / 120 degrees F
CB 1 XF B	OK	49 degrees C / 120 degrees F
FPC 2 Intake	OK	37 degrees C / 98 degrees F
FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
FPC 2 Exhaust B	OK	34 degrees C / 93 degrees F
FPC 2 LU 0 TCAM TSen	OK	44 degrees C / 111 degrees F
FPC 2 LU 0 TCAM Chip	OK	48 degrees C / 118 degrees F
FPC 2 LU 0 TSen	OK	44 degrees C / 111 degrees F
FPC 2 LU 0 Chip	OK	60 degrees C / 140 degrees F
FPC 2 MQ 0 TSen	OK	44 degrees C / 111 degrees F
FPC 2 MQ 0 Chip	OK	51 degrees C / 123 degrees F
FPC 3 Intake	OK	39 degrees C / 102 degrees F
FPC 3 Exhaust A	OK	51 degrees C / 123 degrees F

[...Output truncated...]

Fans Top Rear Fan	OK	Spinning at intermediate-speed
Bottom Rear Fan	OK	Spinning at intermediate-speed
Top Middle Fan	OK	Spinning at intermediate-speed
Bottom Middle Fan	OK	Spinning at intermediate-speed
Top Front Fan	OK	Spinning at intermediate-speed
Bottom Front Fan	OK	Spinning at intermediate-speed

show chassis environment (EX9251 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Top Right Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Left Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Right Exhaust Sensor	OK	40 degrees C / 104 degrees F
	CB 0 Top Left Exhaust Sensor	OK	59 degrees C / 138 degrees F
	CB 0 CPU Core-0 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-1 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-2 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-3 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-4 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-5 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-6 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-7 Temp	OK	43 degrees C / 109 degrees F
Power	PEM 0	Check	
	PEM 1	OK	36 degrees C / 96 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	Absent	
	Fan Tray 2 Fan 1	Absent	

show chassis environment (EX9253 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Exhaust Temp Sensor	OK	37 degrees C / 98 degrees F
	CB 0 Inlet Temp Sensor	OK	31 degrees C / 87 degrees F
	CB 0 CPU DIE Temp Sensor	OK	42 degrees C / 107 degrees F
	CB 1 Exhaust Temp Sensor	OK	31 degrees C / 87 degrees F
	CB 1 Inlet Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 1 CPU DIE Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 0 Intake Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 1 Intake Temp Sensor	OK	29 degrees C / 84 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	59 degrees C / 138 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	48 degrees C / 118 degrees F
Power	PEM 0	OK	54 degrees C / 129 degrees F
	PEM 1	Check	
	PEM 2	Absent	
	PEM 3	Absent	
	PEM 4	Check	
	PEM 5	OK	61 degrees C / 141 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 0	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed

show chassis environment (QFX Series and OCX Series)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Top Right Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Left Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Right Exhaust Sensor	OK	40 degrees C / 104 degrees F
	CB 0 Top Left Exhaust Sensor	OK	59 degrees C / 138 degrees F
	CB 0 CPU Core-0 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-1 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-2 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-3 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-4 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-5 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-6 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-7 Temp	OK	43 degrees C / 109 degrees F
Power	PEM 0	Check	
	PEM 1	OK	36 degrees C / 96 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed

Fan Tray 2 Fan 0	Absent
Fan Tray 2 Fan 1	Absent

show chassis environment interconnect-device (QFabric System)

```
user@switch> show chassis environment interconnect-device IC-A0004
```

Class	Item	Status	Measurement
	CB 0		
	CB 0 L Intake	OK	30 degrees C / 86 degrees F
	CB 0 R Intake	OK	31 degrees C / 87 degrees F
	CB 0 L Exhaust	OK	32 degrees C / 89 degrees F
	CB 0 R Exhaust	OK	33 degrees C / 91 degrees F
	Routing Engine 0 CPU temp	OK	51 degrees C / 123 degrees F
	CB 1		
	CB 1 L Intake	OK	27 degrees C / 80 degrees F
	CB 1 R Intake	OK	29 degrees C / 84 degrees F
	CB 1 L Exhaust	OK	31 degrees C / 87 degrees F
	CB 1 R Exhaust	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU temp	OK	40 degrees C / 104 degrees F
	FC 0 FPC 0		
	FPC 0 L Intake	OK	25 degrees C / 77 degrees F
	FPC 0 R Intake	OK	28 degrees C / 82 degrees F
	FPC 0 L Exhaust	OK	28 degrees C / 82 degrees F
	FPC 0 R Exhaust	OK	29 degrees C / 84 degrees F
	FC 7 FPC 7		
	FPC 7 L Intake	OK	25 degrees C / 77 degrees F
	FPC 7 R Intake	OK	26 degrees C / 78 degrees F
	FPC 7 L Exhaust	OK	28 degrees C / 82 degrees F
	FPC 7 R Exhaust	OK	29 degrees C / 84 degrees F
	RC 0 FPC 8		
	FPC 8 L Intake	OK	25 degrees C / 77 degrees F
	FPC 8 R Intake	OK	26 degrees C / 78 degrees F
	FPC 8 L Exhaust	OK	32 degrees C / 89 degrees F
	FPC 8 R Exhaust	OK	30 degrees C / 86 degrees F
	RC 7 FPC 15		
	FPC 15 L Intake	OK	24 degrees C / 75 degrees F
	FPC 15 R Intake	OK	25 degrees C / 77 degrees F
	FPC 15 L Exhaust	OK	33 degrees C / 91 degrees F
	FPC 15 R Exhaust	OK	31 degrees C / 87 degrees F
Fans	TFT 0 Fan 0	OK	Spinning at normal speed
Fans	TFT 0 Fan 1	OK	Spinning at normal speed
Fans	TFT 0 Fan 2	OK	Spinning at normal speed
Fans	TFT 0 Fan 3	OK	Spinning at normal speed
Fans	TFT 0 Fan 4	OK	Spinning at normal speed
Fans	TFT 0 Fan 5	OK	Spinning at normal speed
Fans	BFT 1 Fan 0	OK	Spinning at normal speed
Fans	BFT 1 Fan 1	OK	Spinning at normal speed
Fans	BFT 1 Fan 2	OK	Spinning at normal speed
Fans	BFT 1 Fan 3	Check	
Fans	BFT 1 Fan 4	OK	Spinning at normal speed
Fans	BFT 1 Fan 5	OK	Spinning at normal speed
Fans	SFT 0 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 0 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 0 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 0 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 3 Rotor 1	OK	Spinning at normal speed

Fans	SFT 1	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 1	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 1	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 1	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 1	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 1	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 1	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 1	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 2	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 2	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 2	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 2	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 2	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 2	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 2	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 2	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 3	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 3	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 3	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 3	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 3	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 3	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 3	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 3	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 3	Rotor 1	OK	Spinning at normal speed
Power	PEM 0			OK	30 degrees C / 86 degrees F
Power	PEM 1			OK	30 degrees C / 86 degrees F
Power	PEM 2			OK	30 degrees C / 86 degrees F
Power	PEM 3			Absent	

Power	PEM 4	Absent
Power	PEM 5	Absent

show chassis environment node-device (QFabric System)

```
user@switch> show chassis environment node-device node1
```

Class	Item	Status	Measurement
Power	node1 Power Supply 0	Absent	
	node1 Power Supply 1	Absent	
Fans	node1 Fan Tray 0	Testing	
	node1 Fan Tray 1	Testing	
	node1 Fan Tray 2	Testing	

show chassis environment pem node-device (QFabric System)

```
user@switch> show chassis environment pem node-device node1
```

```
FPC 0 PEM 0 status:
  State           Check
  Airflow         Front to Back
  Temperature      OK
  AC Input:       OK
  DC Output       Voltage(V) Current(A) Power(W) Load(%)
                  12          10       120     18

FPC 0 PEM 1 status:
  State           Online
  Airflow         Back to Front
  Temperature      OK
  AC Input:       OK
  DC Output       Voltage(V) Current(A) Power(W) Load(%)
                  11          10       110     17
```

show chassis environment (PTX5000 Packet Transport Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PDU 0	OK	
	PDU 0 PSM 0	OK	36 degrees C / 96 degrees F
	PDU 0 PSM 1	OK	38 degrees C / 100 degrees F
	PDU 0 PSM 2	OK	38 degrees C / 100 degrees F
	PDU 0 PSM 3	OK	37 degrees C / 98 degrees F
	PDU 1	Absent	
	CCG 0	OK	44 degrees C / 111 degrees F
	CCG 1	OK	44 degrees C / 111 degrees F
	Routing Engine 0	OK	62 degrees C / 143 degrees F
	Routing Engine 0 CPU	OK	75 degrees C / 167 degrees F
	Routing Engine 1	OK	51 degrees C / 123 degrees F
	Routing Engine 1 CPU	OK	64 degrees C / 147 degrees F
	CB 0 Intake	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust A	OK	46 degrees C / 114 degrees F
	CB 0 Exhaust B	OK	42 degrees C / 107 degrees F
	CB 1 Intake	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	36 degrees C / 96 degrees F
	SIB 0 Exhaust	OK	47 degrees C / 116 degrees F
	SIB 0 Junction	OK	45 degrees C / 113 degrees F
	SIB 1 Exhaust	OK	44 degrees C / 111 degrees F

SIB 1 Junction	OK	43 degrees C / 109 degrees F
SIB 2 Exhaust	OK	47 degrees C / 116 degrees F
SIB 2 Junction	OK	42 degrees C / 107 degrees F
SIB 3 Exhaust	OK	43 degrees C / 109 degrees F
SIB 3 Junction	OK	43 degrees C / 109 degrees F
SIB 4 Exhaust	OK	47 degrees C / 116 degrees F
SIB 4 Junction	OK	42 degrees C / 107 degrees F
SIB 5 Exhaust	OK	42 degrees C / 107 degrees F
SIB 5 Junction	OK	40 degrees C / 104 degrees F
SIB 6 Exhaust	OK	46 degrees C / 114 degrees F
SIB 6 Junction	OK	42 degrees C / 107 degrees F
SIB 7 Exhaust	OK	43 degrees C / 109 degrees F
SIB 7 Junction	OK	39 degrees C / 102 degrees F
SIB 8 Exhaust	OK	44 degrees C / 111 degrees F
SIB 8 Junction	OK	41 degrees C / 105 degrees F
FPC 0 PMB	OK	35 degrees C / 95 degrees F
FPC 0 Intake	OK	33 degrees C / 91 degrees F
FPC 0 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 0 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 0 TL0	OK	48 degrees C / 118 degrees F
FPC 0 TQ0	OK	53 degrees C / 127 degrees F
FPC 0 TL1	OK	56 degrees C / 132 degrees F
FPC 0 TQ1	OK	58 degrees C / 136 degrees F
FPC 0 TL2	OK	55 degrees C / 131 degrees F
FPC 0 TQ2	OK	56 degrees C / 132 degrees F
FPC 0 TL3	OK	59 degrees C / 138 degrees F
FPC 0 TQ3	OK	59 degrees C / 138 degrees F
FPC 2 PMB	OK	35 degrees C / 95 degrees F
FPC 2 Intake	OK	34 degrees C / 93 degrees F
FPC 2 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 2 TL0	OK	53 degrees C / 127 degrees F
FPC 2 TQ0	OK	53 degrees C / 127 degrees F
FPC 2 TL1	OK	57 degrees C / 134 degrees F
FPC 2 TQ1	OK	58 degrees C / 136 degrees F
FPC 2 TL2	OK	54 degrees C / 129 degrees F
FPC 2 TQ2	OK	59 degrees C / 138 degrees F
FPC 2 TL3	OK	60 degrees C / 140 degrees F
FPC 2 TQ3	OK	64 degrees C / 147 degrees F
PIC 2/0 Ambient	OK	49 degrees C / 120 degrees F
FPC 3 PMB	OK	34 degrees C / 93 degrees F
FPC 3 Intake	OK	35 degrees C / 95 degrees F
FPC 3 Exhaust A	OK	54 degrees C / 129 degrees F
FPC 3 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 3 TL0	OK	49 degrees C / 120 degrees F
FPC 3 TQ0	OK	55 degrees C / 131 degrees F
FPC 3 TL1	OK	56 degrees C / 132 degrees F
FPC 3 TQ1	OK	58 degrees C / 136 degrees F
FPC 3 TL2	OK	56 degrees C / 132 degrees F
FPC 3 TQ2	OK	59 degrees C / 138 degrees F
FPC 3 TL3	OK	62 degrees C / 143 degrees F
FPC 3 TQ3	OK	63 degrees C / 145 degrees F
PIC 3/1	Absent	
FPC 5 PMB	OK	35 degrees C / 95 degrees F
FPC 5 Intake	OK	34 degrees C / 93 degrees F
FPC 5 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 5 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 5 TL0	OK	54 degrees C / 129 degrees F
FPC 5 TQ0	OK	52 degrees C / 125 degrees F
FPC 5 TL1	OK	61 degrees C / 141 degrees F

	FPC 5 TQ1	OK	60 degrees C / 140 degrees F
	FPC 5 TL2	OK	55 degrees C / 131 degrees F
	FPC 5 TQ2	OK	55 degrees C / 131 degrees F
	FPC 5 TL3	OK	59 degrees C / 138 degrees F
	FPC 5 TQ3	OK	58 degrees C / 136 degrees F
	PIC 5/0 Ambient	OK	51 degrees C / 123 degrees F
	PIC 5/1 Ambient	OK	34 degrees C / 93 degrees F
	PIC 5/1 cfp-5/1/0	OK	34 degrees C / 93 degrees F
	PIC 5/1 cfp-5/1/1	OK	36 degrees C / 96 degrees F
	FPC 6 PMB	OK	36 degrees C / 96 degrees F
	FPC 6 Intake	OK	33 degrees C / 91 degrees F
	FPC 6 Exhaust A	OK	51 degrees C / 123 degrees F
	FPC 6 Exhaust B	OK	39 degrees C / 102 degrees F
	FPC 6 TL0	OK	44 degrees C / 111 degrees F
	FPC 6 TQ0	OK	54 degrees C / 129 degrees F
	FPC 6 TL1	OK	59 degrees C / 138 degrees F
	FPC 6 TQ1	OK	58 degrees C / 136 degrees F
	FPC 6 TL2	OK	60 degrees C / 140 degrees F
	FPC 6 TQ2	OK	57 degrees C / 134 degrees F
	FPC 6 TL3	OK	65 degrees C / 149 degrees F
	FPC 6 TQ3	OK	60 degrees C / 140 degrees F
	FPC 7 PMB	OK	35 degrees C / 95 degrees F
	FPC 7 Intake	OK	33 degrees C / 91 degrees F
	FPC 7 Exhaust A	OK	53 degrees C / 127 degrees F
	FPC 7 Exhaust B	OK	40 degrees C / 104 degrees F
	FPC 7 TL0	OK	46 degrees C / 114 degrees F
	FPC 7 TQ0	OK	58 degrees C / 136 degrees F
	FPC 7 TL1	OK	53 degrees C / 127 degrees F
	FPC 7 TQ1	OK	59 degrees C / 138 degrees F
	FPC 7 TL2	OK	56 degrees C / 132 degrees F
	FPC 7 TQ2	OK	61 degrees C / 141 degrees F
	FPC 7 TL3	OK	63 degrees C / 145 degrees F
	FPC 7 TQ3	OK	63 degrees C / 145 degrees F
	FPM I2CS	OK	37 degrees C / 98 degrees F
Fans	Fan Tray 0 Fan 1	OK	3042 RPM
	Fan Tray 0 Fan 2	OK	3042 RPM
	Fan Tray 0 Fan 3	OK	3000 RPM
	Fan Tray 0 Fan 4	OK	3042 RPM
	Fan Tray 0 Fan 5	OK	3000 RPM
	Fan Tray 0 Fan 6	OK	3042 RPM
	Fan Tray 0 Fan 7	OK	3085 RPM
	Fan Tray 0 Fan 8	OK	3042 RPM
	Fan Tray 0 Fan 9	OK	3042 RPM
	Fan Tray 0 Fan 10	OK	3085 RPM
	Fan Tray 0 Fan 11	OK	3085 RPM
	Fan Tray 0 Fan 12	OK	3128 RPM
	Fan Tray 0 Fan 13	OK	3128 RPM
	Fan Tray 0 Fan 14	OK	3042 RPM
	Fan Tray 1 Fan 1	OK	2299 RPM
	Fan Tray 1 Fan 2	OK	2399 RPM
	Fan Tray 1 Fan 3	OK	2299 RPM
	Fan Tray 1 Fan 4	OK	2266 RPM
	Fan Tray 1 Fan 5	OK	2266 RPM
	Fan Tray 1 Fan 6	OK	2366 RPM
	Fan Tray 2 Fan 1	OK	2199 RPM
	Fan Tray 2 Fan 2	OK	2133 RPM
	Fan Tray 2 Fan 3	OK	2366 RPM
	Fan Tray 2 Fan 4	OK	2233 RPM
	Fan Tray 2 Fan 5	OK	2399 RPM
	Fan Tray 2 Fan 6	OK	2233 RPM

Misc	SPMB 0 Intake	OK	50 degrees C / 122 degrees F
	SPMB 1 Intake	OK	40 degrees C / 104 degrees F

show chassis environment (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PDU 0	OK	
	PDU 0 PSM 0	OK	41 degrees C / 105 degrees F
	PDU 0 PSM 1	Absent	
	PDU 0 PSM 2	OK	43 degrees C / 109 degrees F
	PDU 0 PSM 3	Absent	
	PDU 0 PSM 4	OK	44 degrees C / 111 degrees F
	PDU 0 PSM 5	Absent	
	PDU 0 PSM 6	OK	45 degrees C / 113 degrees F
	PDU 0 PSM 7	Absent	
	PDU 1	OK	
	PDU 1 PSM 0	Absent	
	PDU 1 PSM 1	OK	45 degrees C / 113 degrees F
	PDU 1 PSM 2	Absent	
	PDU 1 PSM 3	OK	43 degrees C / 109 degrees F
	PDU 1 PSM 4	Absent	
	PDU 1 PSM 5	OK	46 degrees C / 114 degrees F
	PDU 1 PSM 6	Absent	
	PDU 1 PSM 7	OK	46 degrees C / 114 degrees F
	CCG 0	OK	27 degrees C / 80 degrees F
	CCG 1	OK	29 degrees C / 84 degrees F
	...		

show chassis environment (PTX1000 Packet Transport Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	Absent	
	FPC 0 Power Supply 1	Absent	
	FPC 0 Power Supply 2	OK	
	FPC 0 Power Supply 3	OK	
Temp	FPC 0 Intake Temp Sensor	OK	25 degrees C / 77 degrees F
	FPC 0 Exhaust Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 0 Mezz Temp Sensor 0	OK	25 degrees C / 77 degrees F
	FPC 0 Mezz Temp Sensor 1	OK	34 degrees C / 93 degrees F
	FPC 0 PE2 Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 PE1 Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 0 PF0 Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 PE0 Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 0 PE5 Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 PE4 Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 PF1 Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 0 PE3 Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 0 CPU Die Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 OCX0 Temp Sensor	OK	37 degrees C / 98 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed
	FPC 0 Fan Tray 2	OK	Spinning at normal speed

show chassis environment (PTX10008 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	Routing Engine 0 CPU	OK	40 degrees C / 104 degrees F
	Routing Engine 1 CPU	OK	40 degrees C / 104 degrees F
	CB 0 Intake Temp Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust Temp Sensor	OK	33 degrees C / 91 degrees F
	CB 1 Intake Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 1 Exhaust Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 0 Intake-A Temp Sensor	OK	38 degrees C / 100 degrees F
	FPC 0 Intake-B Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 0 Exhaust-C Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 PE0 Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 PE1 Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 0 PE2 Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 0 LCPU Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 1 Intake-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Intake-B Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust-C Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 1 PE0 Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 1 PE1 Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 1 PE2 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 1 LCPU Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 2 Intake-A Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 2 Intake-B Temp Sensor	OK	30 degrees C / 86 degrees F
	FPC 2 Exhaust-A Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 2 Exhaust-B Temp Sensor	OK	54 degrees C / 129 degrees F
	FPC 2 Exhaust-C Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 2 PE0 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 2 PE1 Temp Sensor	OK	59 degrees C / 138 degrees F
	FPC 2 PE2 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 2 PE3 Temp Sensor	OK	60 degrees C / 140 degrees F
	FPC 2 PE4 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 2 PE5 Temp Sensor	OK	63 degrees C / 145 degrees F
	FPC 2 LCPU Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 3 Intake-A Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 3 Intake-B Temp Sensor	OK	30 degrees C / 86 degrees F
	FPC 3 Exhaust-A Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 3 Exhaust-B Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 3 Exhaust-C Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 3 PE0 Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 3 PE1 Temp Sensor	OK	53 degrees C / 127 degrees F
	FPC 3 PE2 Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 3 PE3 Temp Sensor	OK	53 degrees C / 127 degrees F
	FPC 3 PE4 Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 3 PE5 Temp Sensor	OK	57 degrees C / 134 degrees F
	FPC 3 LCPU Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 5 Intake-A Temp Sensor	Failed	
	FPC 5 Intake-B Temp Sensor	Failed	
	FPC 5 Exhaust-A Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 5 Exhaust-B Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 5 Exhaust-C Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 5 PE0 Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 5 PE1 Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 5 PE2 Temp Sensor	OK	51 degrees C / 123 degrees F

	FPC 5 LCPU Temp Sensor	Failed	
	FPC 6 Intake-A Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 6 Intake-B Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 6 Exhaust-A Temp Sensor	OK	39 degrees C / 102 degrees F
	FPC 6 Exhaust-B Temp Sensor	OK	39 degrees C / 102 degrees F
	FPC 6 Exhaust-C Temp Sensor	OK	39 degrees C / 102 degrees F
	FPC 6 PE0 Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 6 PE1 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 6 PE2 Temp Sensor	OK	50 degrees C / 122 degrees F
	FPC 6 LCPU Temp Sensor	OK	40 degrees C / 104 degrees F
	SIB 0 Intake-A Temp Sensor	OK	37 degrees C / 98 degrees F
	SIB 0 Intake-B Temp Sensor	OK	30 degrees C / 86 degrees F
	SIB 0 Exhaust-A Temp Sensor	OK	33 degrees C / 91 degrees F
	SIB 0 Exhaust-B Temp Sensor	OK	38 degrees C / 100 degrees F
	SIB 0 PF0 Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 0 PF1 Temp Sensor	OK	39 degrees C / 102 degrees F
	SIB 1 Intake-A Temp Sensor	OK	43 degrees C / 109 degrees F
	SIB 1 Intake-B Temp Sensor	OK	34 degrees C / 93 degrees F
	SIB 1 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	SIB 1 Exhaust-B Temp Sensor	OK	44 degrees C / 111 degrees F
	SIB 1 PF0 Temp Sensor	OK	54 degrees C / 129 degrees F
	SIB 1 PF1 Temp Sensor	OK	41 degrees C / 105 degrees F
	SIB 2 Intake-A Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 2 Intake-B Temp Sensor	OK	35 degrees C / 95 degrees F
	SIB 2 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	SIB 2 Exhaust-B Temp Sensor	OK	47 degrees C / 116 degrees F
	SIB 2 PF0 Temp Sensor	OK	55 degrees C / 131 degrees F
	SIB 2 PF1 Temp Sensor	OK	42 degrees C / 107 degrees F
	SIB 3 Intake-A Temp Sensor	OK	45 degrees C / 113 degrees F
	SIB 3 Intake-B Temp Sensor	OK	35 degrees C / 95 degrees F
	SIB 3 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	SIB 3 Exhaust-B Temp Sensor	OK	45 degrees C / 113 degrees F
	SIB 3 PF0 Temp Sensor	OK	54 degrees C / 129 degrees F
	SIB 3 PF1 Temp Sensor	OK	42 degrees C / 107 degrees F
	SIB 4 Intake-A Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 4 Intake-B Temp Sensor	OK	34 degrees C / 93 degrees F
	SIB 4 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	SIB 4 Exhaust-B Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 4 PF0 Temp Sensor	OK	54 degrees C / 129 degrees F
	SIB 4 PF1 Temp Sensor	OK	41 degrees C / 105 degrees F
	SIB 5 Intake-A Temp Sensor	OK	38 degrees C / 100 degrees F
	SIB 5 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	SIB 5 Exhaust-A Temp Sensor	OK	34 degrees C / 93 degrees F
	SIB 5 Exhaust-B Temp Sensor	OK	39 degrees C / 102 degrees F
	SIB 5 PF0 Temp Sensor	OK	44 degrees C / 111 degrees F
	SIB 5 PF1 Temp Sensor	OK	42 degrees C / 107 degrees F
Power	Power Supply 0	OK	
	Power Supply 1	OK	
	Power Supply 2	OK	
	Power Supply 3	OK	
	Power Supply 4	Check	
	Power Supply 5	OK	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	Failed	
	Fan Tray 0 Fan 5	Failed	
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed

Fan Tray 0 Fan 8	OK	Spinning at normal speed
Fan Tray 0 Fan 9	OK	Spinning at normal speed
Fan Tray 0 Fan 10	OK	Spinning at normal speed
Fan Tray 1 Fan 0	OK	Spinning at normal speed
Fan Tray 1 Fan 1	OK	Spinning at normal speed
Fan Tray 1 Fan 2	OK	Spinning at normal speed
Fan Tray 1 Fan 3	OK	Spinning at normal speed
Fan Tray 1 Fan 4	OK	Spinning at normal speed
Fan Tray 1 Fan 5	OK	Spinning at normal speed
Fan Tray 1 Fan 6	OK	Spinning at normal speed
Fan Tray 1 Fan 7	OK	Spinning at normal speed
Fan Tray 1 Fan 8	OK	Spinning at normal speed
Fan Tray 1 Fan 9	OK	Spinning at normal speed
Fan Tray 1 Fan 10	OK	Spinning at normal speed

show chassis environment (PTX10016 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
	Routing Engine 0 CPU	OK	34 degrees C / 93 degrees F
	Routing Engine 1 CPU	OK	34 degrees C / 93 degrees F
Temp	CB 0 Intake Temp Sensor	OK	20 degrees C / 68 degrees F
	CB 0 Exhaust Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 1 Intake Temp Sensor	OK	20 degrees C / 68 degrees F
	CB 1 Exhaust Temp Sensor	OK	23 degrees C / 73 degrees F
	FPC 1 Intake-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Intake-B Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 1 Exhaust-C Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 1 PE0 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 1 PE1 Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 1 PE2 Temp Sensor	OK	54 degrees C / 129 degrees F
	FPC 1 LCPU Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 3 Intake-A Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 3 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 3 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 3 Exhaust-B Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 3 Exhaust-C Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 3 PE0 Temp Sensor	OK	43 degrees C / 109 degrees F
	FPC 3 PE1 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 3 PE2 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 3 LCPU Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 Intake-A Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 6 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 6 Exhaust-A Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 Exhaust-B Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 Exhaust-C Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 PE0 Temp Sensor	OK	43 degrees C / 109 degrees F
	FPC 6 PE1 Temp Sensor	OK	43 degrees C / 109 degrees F
	FPC 6 PE2 Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 6 LCPU Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 8 Intake-A Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 8 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 8 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 8 Exhaust-B Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 8 Exhaust-C Temp Sensor	OK	38 degrees C / 100 degrees F
	FPC 8 PE0 Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 8 PE1 Temp Sensor	OK	44 degrees C / 111 degrees F

	FPC 8 PE2 Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 8 LCPU Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 9 Intake-A Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 9 Intake-B Temp Sensor	OK	28 degrees C / 82 degrees F
	FPC 9 Exhaust-A Temp Sensor	OK	51 degrees C / 123 degrees F
	FPC 9 Exhaust-B Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 9 Exhaust-C Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 9 PE0 Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 9 PE1 Temp Sensor	OK	66 degrees C / 150 degrees F
	FPC 9 PE2 Temp Sensor	OK	50 degrees C / 122 degrees F
	FPC 9 PE3 Temp Sensor	OK	65 degrees C / 149 degrees F
	FPC 9 PE4 Temp Sensor	OK	51 degrees C / 123 degrees F
	FPC 9 PE5 Temp Sensor	OK	68 degrees C / 154 degrees F
	FPC 9 LCPU Temp Sensor	OK	46 degrees C / 114 degrees F
Power	Power Supply 0	OK	22 degrees C / 71 degrees F
	Power Supply 1	OK	23 degrees C / 73 degrees F
	Power Supply 2	OK	23 degrees C / 73 degrees F
	Power Supply 3	OK	21 degrees C / 69 degrees F
	Power Supply 4	OK	22 degrees C / 71 degrees F
	Power Supply 5	OK	25 degrees C / 77 degrees F
	Power Supply 6	OK	21 degrees C / 69 degrees F
	Power Supply 7	Absent	
	Power Supply 8	Absent	
	Power Supply 9	Absent	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed
	Fan Tray 0 Fan 8	OK	Spinning at normal speed
	Fan Tray 0 Fan 9	OK	Spinning at normal speed
	Fan Tray 0 Fan 10	OK	Spinning at normal speed
	Fan Tray 0 Fan 11	OK	Spinning at normal speed
	Fan Tray 0 Fan 12	OK	Spinning at normal speed
	Fan Tray 0 Fan 13	OK	Spinning at normal speed
	Fan Tray 0 Fan 14	OK	Spinning at normal speed
	Fan Tray 0 Fan 15	OK	Spinning at normal speed
	Fan Tray 0 Fan 16	OK	Spinning at normal speed
	Fan Tray 0 Fan 17	OK	Spinning at normal speed
	Fan Tray 0 Fan 18	OK	Spinning at normal speed
	Fan Tray 0 Fan 19	OK	Spinning at normal speed
	Fan Tray 0 Fan 20	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 7	OK	Spinning at normal speed
	Fan Tray 1 Fan 8	OK	Spinning at normal speed
	Fan Tray 1 Fan 9	OK	Spinning at normal speed
	Fan Tray 1 Fan 10	OK	Spinning at normal speed
	Fan Tray 1 Fan 11	OK	Spinning at normal speed
	Fan Tray 1 Fan 12	OK	Spinning at normal speed
	Fan Tray 1 Fan 13	OK	Spinning at normal speed
	Fan Tray 1 Fan 14	OK	Spinning at normal speed

Fan Tray 1 Fan 15	OK	Spinning at normal speed
Fan Tray 1 Fan 16	OK	Spinning at normal speed
Fan Tray 1 Fan 17	OK	Spinning at normal speed
Fan Tray 1 Fan 18	OK	Spinning at normal speed
Fan Tray 1 Fan 19	OK	Spinning at normal speed
Fan Tray 1 Fan 20	OK	Spinning at normal speed
SIB 0 Intake-A Temp Sensor	OK	20 degrees C / 68 degrees F
SIB 0 Intake-B Temp Sensor	OK	20 degrees C / 68 degrees F
SIB 0 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 0 Exhaust-A Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 0 Exhaust-B Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 0 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 0 PF0 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 0 PF1 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 0 PF2 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 0 PF3 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 0 PF4 Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 0 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 1 Intake-A Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 1 Intake-B Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 1 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 1 Exhaust-A Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 1 Exhaust-B Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 1 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 1 PF0 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 1 PF1 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 1 PF2 Temp Sensor	OK	33 degrees C / 91 degrees F
SIB 1 PF3 Temp Sensor	OK	38 degrees C / 100 degrees F
SIB 1 PF4 Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 1 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 2 Intake-A Temp Sensor	OK	24 degrees C / 75 degrees F
SIB 2 Intake-B Temp Sensor	OK	21 degrees C / 69 degrees F
SIB 2 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 2 Exhaust-A Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 2 Exhaust-B Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 2 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 2 PF0 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 2 PF1 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 2 PF2 Temp Sensor	OK	33 degrees C / 91 degrees F
SIB 2 PF3 Temp Sensor	OK	41 degrees C / 105 degrees F
SIB 2 PF4 Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 2 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 3 Intake-A Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 3 Intake-B Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 3 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 3 Exhaust-A Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 3 Exhaust-B Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 3 Exhaust-C Temp Sensor	OK	24 degrees C / 75 degrees F
SIB 3 PF0 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 3 PF1 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 3 PF2 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 3 PF3 Temp Sensor	OK	39 degrees C / 102 degrees F
SIB 3 PF4 Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 3 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 4 Intake-A Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 4 Intake-B Temp Sensor	OK	25 degrees C / 77 degrees F
SIB 4 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 4 Exhaust-A Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 4 Exhaust-B Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 4 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F

SIB 4 PF0 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 4 PF1 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 4 PF2 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 4 PF3 Temp Sensor	OK	40 degrees C / 104 degrees F
SIB 4 PF4 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 4 PF5 Temp Sensor	OK	25 degrees C / 77 degrees F
SIB 5 Intake-A Temp Sensor	OK	21 degrees C / 69 degrees F
SIB 5 Intake-B Temp Sensor	OK	20 degrees C / 68 degrees F
SIB 5 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 5 Exhaust-A Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 5 Exhaust-B Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 5 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 5 PF0 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 5 PF1 Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 5 PF2 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 5 PF3 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 5 PF4 Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 5 PF5 Temp Sensor	OK	27 degrees C / 80 degrees F

show chassis environment (ACX2000 Universal Metro Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
	PCB Left	OK	44 degrees C / 111 degrees F
	SFP+ Xcvr	OK	50 degrees C / 122 degrees F
	FEB	OK	70 degrees C / 158 degrees F
	PCB Up	OK	63 degrees C / 145 degrees F
	PCB Mid	OK	66 degrees C / 150 degrees F
	Telecom Mod	OK	65 degrees C / 149 degrees F
	Routing Engine	OK	54 degrees C / 129 degrees F
	Heater off		

show chassis environment (ACX4000 Universal Metro Router)

On the ACX4000 router, the MIC output of the **show chassis environment** command varies depending on the number of temperature channels present in the installed MIC.

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	33 degrees C / 91 degrees F
	PEM 1	Absent	
	PCB Bottom	OK	30 degrees C / 86 degrees F
	PCB Middle	OK	34 degrees C / 93 degrees F
	BCM56445	OK	33 degrees C / 91 degrees F
	SFP+ Xcvr	OK	32 degrees C / 89 degrees F
	Fan tray inlet	OK	39 degrees C / 102 degrees F
	Exhaust	OK	30 degrees C / 86 degrees F
	Routing Engine	OK	32 degrees C / 89 degrees F
	Heater off		
Pic	PIC 0/0 Channel 0	OK	28 degrees C / 82 degrees F
	PIC 0/0 Channel 1	OK	29 degrees C / 84 degrees F
	PIC 0/0 Channel 2	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 3	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 4	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 5	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 6	OK	0 degrees C / 32 degrees F

	PIC 0/0 Channel 7	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 8	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 9	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 0	OK	33 degrees C / 91 degrees F
	PIC 1/0 Channel 1	OK	31 degrees C / 87 degrees F
	PIC 1/0 Channel 2	OK	30 degrees C / 86 degrees F
	PIC 1/0 Channel 3	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 4	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 5	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 6	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 7	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 8	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 0	OK	31 degrees C / 87 degrees F
	PIC 1/1 Channel 1	OK	29 degrees C / 84 degrees F
	PIC 1/1 Channel 2	OK	28 degrees C / 82 degrees F
	PIC 1/1 Channel 3	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 4	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 5	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 6	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 7	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 8	OK	0 degrees C / 32 degrees F
Fans	Fan 1	OK	Spinning at normal speed
	Fan 2	OK	Spinning at normal speed

show chassis environment (ACX5048 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	Absent	
	FPC 0 Power Supply 1	OK	
Temp	FPC 0 Sensor TopMiddle E	OK	23 degrees C / 73 degrees F
	FPC 0 Sensor TopRight C	OK	18 degrees C / 64 degrees F
	FPC 0 Sensor TopLeft C	OK	21 degrees C / 69 degrees F
	FPC 0 Sensor TopRight E	OK	20 degrees C / 68 degrees F
	FPC 0 Sensor CPURight C	OK	23 degrees C / 73 degrees F
	FPC 0 Sensor CPULeft E	OK	22 degrees C / 71 degrees F
	FPC 0 Sensor CPU Die Temp	OK	39 degrees C / 102 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed
	FPC 0 Fan Tray 2	OK	Spinning at normal speed
	FPC 0 Fan Tray 3	OK	Spinning at normal speed
	FPC 0 Fan Tray 4	OK	Spinning at normal speed

show chassis environment (ACX5096 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
	FPC 0 Power Supply 1	OK	
Temp	FPC 0 Sensor TopMiddle E	OK	32 degrees C / 89 degrees F
	FPC 0 Sensor TopRight I	OK	29 degrees C / 84 degrees F
	FPC 0 Sensor TopLeft I	OK	23 degrees C / 73 degrees F
	FPC 0 Sensor TopRight E	OK	28 degrees C / 82 degrees F
	FPC 0 Sensor CPURight I	OK	30 degrees C / 86 degrees F
	FPC 0 Sensor CPULeft I	OK	29 degrees C / 84 degrees F

	FPC 0 Sensor Die Temp	OK	46 degrees C / 114 degrees F
	FPC 0 Mezz Temp	OK	23 degrees C / 73 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed
	FPC 0 Fan Tray 2	OK	Spinning at normal speed

show chassis environment (ACX500 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
	Power Mod	OK	47 degrees C / 116 degrees F
	BCM54610	OK	46 degrees C / 114 degrees F
	DPLL31404	OK	45 degrees C / 113 degrees F
	CPLD	OK	42 degrees C / 107 degrees F
	1588-FPGA	OK	43 degrees C / 109 degrees F
	NPU	OK	62 degrees C / 143 degrees F
	MAC sensor 1	OK	40 degrees C / 104 degrees F
	MAC sensor 2	OK	38 degrees C / 100 degrees F
	SFP PHY	OK	38 degrees C / 100 degrees F
	Combo/RJ45 PHY	OK	37 degrees C / 98 degrees F
	SFP sensor 1	OK	35 degrees C / 95 degrees F
	SFP sensor 2	OK	33 degrees C / 91 degrees F
	SFP sensor 3	OK	32 degrees C / 89 degrees F
	Routing Engine	OK	54 degrees C / 129 degrees F
	Heater off		

show chassis environment fpc

List of Syntax	Syntax on page 307 Syntax (TX Matrix and TX Matrix Plus Routers) on page 307 Syntax (MX Series Routers) on page 307 Syntax (MX2010, MX10003, MX204, MX2008, and MX10008 Universal Routing Platforms) on page 307 Syntax (MX2020 Universal Routing Platforms) on page 307 Syntax (QFX Series) on page 307 Syntax (OCX Series) on page 307 Syntax (PTX3000 Series) on page 308 Syntax (PTX10008 Series) on page 308 Syntax (Junos OS Evolved) on page 308
Syntax	show chassis environment fpc <slot>
Syntax (TX Matrix and TX Matrix Plus Routers)	show chassis environment fpc <fcc number> <slot>
Syntax (MX Series Routers)	show chassis environment fpc <slot> <all-members> <local> <member <i>member-id</i> >
Syntax (MX2010, MX10003, MX204, MX2008, and MX10008 Universal Routing Platforms)	show chassis environment fpc <slot>
Syntax (MX2020 Universal Routing Platforms)	show chassis environment fpc <slot> <satellite [fpc-slot <i>slot-id</i> device-alias <i>alias-name</i>]
Syntax (QFX Series)	show chassis environment fpc <fpc-slot> interconnect-device <i>name</i>
Syntax (OCX Series)	show chassis environment fpc <fpc-slot>

Syntax (PTX3000 Series)	show chassis environment fpc <fpc-slot>
Syntax (PTX10008 Series)	show chassis environment fpc <fpc-slot>
Syntax (Junos OS Evolved)	show chassis environment fpc <fpc-slot>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.1 for T4000 Core Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX 2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>satellite option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Universal Routing Platforms.</p>
Description	(M40e, M120, M160, M320, MX Series, T Series routers, EX Series, QFX Series, and PTX Series routers only) Display environmental information about Flexible PIC Concentrators (FPCs).
Options	<p>none—Display environmental information about all FPCs. On a TX Matrix router, display environmental information about all FPCs on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about all FPCs on the TX Matrix Plus router and its attached routers.</p> <p>all-members—(MX Series routers only) (Optional) Display environmental information for the FPCs in all the members of the Virtual Chassis configuration.</p> <p>interconnect-device <i>name</i>—(QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.</p> <p>lcc <i>number</i>—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.</p>

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display environmental information for the FPCs in the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display environmental information for the FPCs in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

satellite [*fpc-slot slot-id* | *device-alias alias-name*]—(Junos Fusion only)(Optional) Display environmental information for the FPCs in the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

slot* or *fpc-slot—(Optional) Display environmental information about an individual FPC:

- (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, if you specify the number of the T640 router by using only the **lcc *number*** option (the recommended method), replace ***slot*** with a value from 0 through 7. Similarly, on a TX Matrix Plus router, if you specify the number of the router by using only the **lcc *number*** option (the recommended method), replace ***slot*** with a value from 0 through 7. Otherwise, replace ***slot*** with a value from 0 through 31. For example, the following commands have the same result:

```
user@host> show chassis environment fpc 1 lcc 1
user@host> show chassis environment fpc 9
```

- M120 router—Replace ***slot*** with a value from 0 through 5.
- MX240 router—Replace ***slot*** with a value from 0 through 2.
- MX480 router—Replace ***slot*** with a value from 0 through 5.
- MX960 router—Replace ***slot*** with a value from 0 through 11.
- MX2010 router—Replace ***slot*** with a value from 0 through 9.
- MX2020 router—Replace ***slot*** with a value from 0 through 19.
- MX2008 router—Replace ***slot*** with a value from 0 through 9.
- Other routers—Replace ***slot*** with a value from 0 through 7.

- EX Series switches:
 - EX3200 switches and EX4200 standalone switches—Replace **slot** with 0.
 - EX4200 switches in a Virtual Chassis configuration—Replace **slot** with a value from 0 through 9 (switch's member ID).
 - EX6210 switches—Replace **slot** with a value from 0 through 3 (line card only), 4 or 5 (line card or Switch Fabric and Rotuing Engine (SRE) module), or 6 through 9 (line card only).
 - EX8208 switches—Replace **slot** with a value from 0 through 7 (line card).
 - EX8216 switches—Replace **slot** with a value from 0 through 15 (line card).
- QFX3500 switches —Replace **fpc-slot** with 0 through 15.
- PTX5000 Packet Transport Router—Replace **fpc-slot** with 0 through 7.
- PTX3000 Packet Transport Router—Replace **fpc-slot** with 0 through 15.

Required Privilege Level view

Related Documentation

- *request chassis fpc*
- *show chassis fpc*
- *show chassis fpc-feb-connectivity*
- *Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online*
- *MX960 Flexible PIC Concentrator Description*

List of Sample Output

[show chassis environment fpc \(M120 Router\) on page 312](#)
[show chassis environment fpc \(M160 Router\) on page 313](#)
[show chassis environment fpc \(M320 Router\) on page 314](#)
[show chassis environment fpc \(MX2020 Router\) on page 314](#)
[show chassis environment fpc \(MX2010 Router\) on page 317](#)
[show chassis environment fpc \(MX2008 Router\) on page 320](#)
[show chassis environment fpc \(MX240 Router\) on page 323](#)
[show chassis environment fpc \(MX480 Router\) on page 325](#)
[show chassis environment fpc \(MX960 Router MPC10E-15C-MRATE\) on page 325](#)
[show chassis environment fpc \(MX960 Router\) on page 328](#)
[show chassis environment fpc \(MX480 Router with 100-Gigabit Ethernet CFP\) on page 329](#)
[show chassis environment fpc \(MX240, MX480, MX960 with Application Services Modular Line Card on page 331](#)
[show chassis environment fpc \(MX10003 Router\) on page 331](#)
[show chassis environment fpc \(MX204 Router\) on page 335](#)
[show chassis environment fpc \(MX10008 Router\) on page 335](#)
[show chassis environment fpc \(T320, T640, and T1600 Routers\) on page 342](#)

[show chassis environment fpc \(T4000 Router\) on page 343](#)
[show chassis environment fpc lcc \(TX Matrix Router\) on page 348](#)
[show chassis environment fpc lcc \(TX Matrix Plus Router\) on page 348](#)
[show chassis environment fpc \(QFX Series and OCX Series\) on page 349](#)
[show chassis environment fpc interconnect-device \(QFabric Systems\) on page 349](#)
[show chassis environment fpc 5 \(PTX3000 Packet Transport Router\) on page 350](#)
[show chassis environment fpc 0 \(PTX5000 Packet Transport Router\) on page 350](#)
[show chassis environment fpc 07 \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 351](#)
[show chassis environment fpc \(PTX10008 router\) on page 352](#)
[show chassis environment fpc \(PTX10016 router\) on page 356](#)
[show chassis environment FPC 1 \(MX Routers with Media Services Blade \[MSB\]\) on page 359](#)
[show chassis environment FPC \(Junos OS Evolved\) on page 359](#)

Output Fields Table 17 on page 311 lists the output fields for the **show chassis environment fpc** command. Output fields are listed in the approximate order in which they appear.

Table 17: show chassis environment fpc Output Fields

Field Name	Field Description
State	Status of the FPC: <ul style="list-style-type: none"> • Unknown—FPC is not detected by the router. • Empty—No FPC is present. • Present—FPC is detected by the chassis daemon but is either not supported by the current version of the Junos OS, or the FPC is coming up but not yet online. • Ready—FPC is in intermediate or transition state. • Announce online—Intermediate state during which the FPC is coming up but not yet online, and the chassis manager acknowledges the chassisd FPC online initiative. • Online—FPC is online and running. • Offline—FPC is powered down. • Diagnostics—FPC is set to operate in diagnostics mode.
Temperature	(M40e and M160 routers and QFX Series only) Temperature of the air flowing past the FPC.
PMB Temperature	(PTX Series only) Temperature of the air flowing past the PMB (bottom of the FPC). The PTX5000 Packet Transport Router with FPC2-PTX-P1A include multiple temperatures for PMB (TEMPO and TEMP1).
PMB CPU Temperature	(PTX5000 Packet Transport Router with FPC2-PTX-P1A only) Temperature of the air flowing past the PMB CPU.
Temperature Intake	(M320 routers, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series only) Temperature of the air flowing into the chassis.
Temperature Top	(T Series routers only) Temperature of the air flowing past the top of the FPC.

Table 17: show chassis environment fpc Output Fields (continued)

Field Name	Field Description
Temperature Exhaust	(M120 and M320 routers, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series only) Temperature of the air flowing out of the chassis. The PTX Series Packet Transport Routers, and the MX2010, MX2020, and MX2008 routers include exhaust temperatures for multiple zones (Exhaust A and Exhaust B).
Temperature Bottom	(T Series routers only) Temperature of the air flowing past the bottom of the FPC.
TL n Temperature	(PTX Series only) Temperature of the air flowing past the specified TL area of the packet forwarding engine (PFE) on the FPC.
TQ n Temperature	(PTX Series only) Temperature of the air flowing past the specified TQ area of the packet forwarding engine (PFE) on the FPC.
Temperature MMBO	(T640 router only) Temperature of the air flowing past the type 3 FPC.
Temperature MMB1	(M320 and T Series routers only) Temperature of the air flowing past the type 1, type 2, and type 3 FPC.
Power	Information about the voltage supplied to the FPC. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
CMB Revision or BUS revision	Revision level of the chassis management bus device (M Series router) or bus (T Series routers).

Sample Output

show chassis environment fpc (M120 Router)

```

user@host> show chassis environment fpc

FPC 2 status:
  State                Online
  Temperature Exhaust A 32 degrees C / 89 degrees F
  Temperature Exhaust B 31 degrees C / 87 degrees F
  Power A-Board
    1.2 V                1202 mV
    1.5 V                1508 mV
    1.8 V                1798 mV
    2.5 V                2507 mV
    3.3 V                3351 mV
    5.0 V                4995 mV
    3.3 V bias           3296 mV
    1.2 V Rocket IO      1205 mV
    1.5 V Rocket IO      1501 mV
  I2C Slave Revision    12
FPC 3 status:
  State                Online
  Temperature Exhaust A 31 degrees C / 87 degrees F
  Temperature Exhaust B 33 degrees C / 91 degrees F
  Power A-Board
    1.2 V                1211 mV

```

```

1.5 V          1501 mV
1.8 V          1798 mV
2.5 V          2471 mV
3.3 V          3293 mV
5.0 V          4930 mV
3.3 V bias     3296 mV
1.2 V Rocket IO 1205 mV
1.5 V Rocket IO 1501 mV
Power B-Board
1.2 V          1214 mV
1.5 V          1501 mV
2.5 V          2471 mV
3.3 V          3300 mV
5.0 V          4943 mV
3.3 V bias     3296 mV
1.2 V Rocket IO 1205 mV
1.5 V Rocket IO 1501 mV
I2C Slave Revision 12
FPC 4 status:
State          Online
Temperature Exhaust A 32 degrees C / 89 degrees F
Temperature Exhaust B 30 degrees C / 86 degrees F
Power A-Board
1.2 V          1195 mV
1.5 V          1504 mV
1.8 V          1801 mV
2.5 V          2504 mV
3.3 V          3293 mV
5.0 V          4917 mV
3.3 V bias     3296 mV
1.2 V Rocket IO 1202 mV
1.5 V Rocket IO 1492 mV
I2C Slave Revision 12

```

show chassis environment fpc (M160 Router)

```

user@host> show chassis environment fpc

FPC 0 status:
State          Online
Temperature          42 degrees C / 107 degrees F
Power:
1.5 V          1500 mV
2.5 V          2509 mV
3.3 V          3308 mV
5.0 V          4991 mV
5.0 V bias     4952 mV
8.0 V bias     8307 mV
CMB Revision     12
FPC 1 status:
State          Online
Temperature          45 degrees C / 113 degrees F
Power:
1.5 V          1498 mV
2.5 V          2501 mV
3.3 V          3319 mV
5.0 V          5020 mV
5.0 V bias     5025 mV
8.0 V bias     8307 mV
CMB Revision     12

```

show chassis environment fpc (M320 Router)

```

user@host> show chassis environment fpc

FPC 0 status:
  State                Online
  Temperature Intake    27 degrees C / 80 degrees F
  Temperature Exhaust   38 degrees C / 100 degrees F
  Temperature MMB1      31 degrees C / 87 degrees F
  Power:
    1.5 V               1487 mV
    1.5 V *             1494 mV
    1.8 V               1821 mV
    2.5 V               2533 mV
    3.3 V               3323 mV
    5.0 V               5028 mV
    3.3 V bias          3296 mV
    5.0 V bias          4984 mV
  CMB Revision         16
FPC 1 status:
  State                Online
  Temperature Intake    27 degrees C / 80 degrees F
  Temperature Exhaust   37 degrees C / 98 degrees F
  Temperature MMB1      32 degrees C / 89 degrees F
  Power:
    1.5 V               1504 mV
    1.5 V *             1499 mV
    1.8 V               1820 mV
    2.5 V               2529 mV
    3.3 V               3328 mV
    5.0 V               5013 mV
    3.3 V bias          3294 mV
    5.0 V bias          4984 mV
  CMB Revision         16
FPC 2 status:
  State                Online
  Temperature Intake    28 degrees C / 82 degrees F
  Temperature Exhaust   38 degrees C / 100 degrees F
  Temperature MMB1      32 degrees C / 89 degrees F
  Power:
    1.5 V               1498 mV
    1.5 V *             1487 mV
    1.8 V               1816 mV
    2.5 V               2531 mV
    3.3 V               3324 mV
    5.0 V               5025 mV
    3.3 V bias          3277 mV
    5.0 V bias          5013 mV
  CMB Revision         17
FPC 3 status:
...

```

show chassis environment fpc (MX2020 Router)

```

user@host> show chassis environment fpc

FPC 0 status:
  State                Online
  Temperature Intake    41 degrees C / 105 degrees F
  Temperature Exhaust A 48 degrees C / 118 degrees F

```

```

Temperature Exhaust B      60 degrees C / 140 degrees F
Temperature LU 0 TSen      56 degrees C / 132 degrees F
Temperature LU 0 Chip      59 degrees C / 138 degrees F
Temperature LU 1 TSen      56 degrees C / 132 degrees F
Temperature LU 1 Chip      61 degrees C / 141 degrees F
Temperature LU 2 TSen      56 degrees C / 132 degrees F
Temperature LU 2 Chip      52 degrees C / 125 degrees F
Temperature LU 3 TSen      56 degrees C / 132 degrees F
Temperature LU 3 Chip      52 degrees C / 125 degrees F
Temperature MQ 0 TSen      49 degrees C / 120 degrees F
Temperature MQ 0 Chip      49 degrees C / 120 degrees F
Temperature MQ 1 TSen      49 degrees C / 120 degrees F
Temperature MQ 1 Chip      52 degrees C / 125 degrees F
Temperature MQ 2 TSen      49 degrees C / 120 degrees F
Temperature MQ 2 Chip      45 degrees C / 113 degrees F
Temperature MQ 3 TSen      49 degrees C / 120 degrees F
Temperature MQ 3 Chip      46 degrees C / 114 degrees F
Power
  AS-BIAS3V3-z12105      3299 mV
  AS-VDD1V8-z12006      1807 mV
  AS-VDD2V5-z12006      2512 mV
  AS-AVDD1V0-z12004      997 mV
  AS-PCIE_1V0-z12004      996 mV
  AS-VDD3V3-z12004      3294 mV
  AS-VDD_1V5A-z12004      1501 mV
  AS-VDD_1V5B-z12004      1498 mV
  AS-LU0_1V0-z12004      998 mV
  AS-LU1_1V0-z12004      1002 mV
  AS-MQ0_1V0-z12004      999 mV
  AS-MQ1_1V0-z12004      994 mV
  AS-LU2_1V0-z12004      1000 mV
  AS-LU3_1V0-z12004      998 mV
  AS-MQ2_1V0-z12004      1002 mV
  AS-MQ3_1V0-z12004      999 mV
  AS-PMB_1V1-z12006      1096 mV
I2C Slave Revision      68
FPC 1 status:
State      Online
Temperature Intake      39 degrees C / 102 degrees F
Temperature Exhaust A    48 degrees C / 118 degrees F
Temperature Exhaust B    55 degrees C / 131 degrees F
Temperature LU 0 TSen    52 degrees C / 125 degrees F
Temperature LU 0 Chip    54 degrees C / 129 degrees F
Temperature LU 1 TSen    52 degrees C / 125 degrees F
Temperature LU 1 Chip    56 degrees C / 132 degrees F
Temperature LU 2 TSen    52 degrees C / 125 degrees F
Temperature LU 2 Chip    49 degrees C / 120 degrees F
Temperature LU 3 TSen    52 degrees C / 125 degrees F
Temperature LU 3 Chip    50 degrees C / 122 degrees F
Temperature MQ 0 TSen    48 degrees C / 118 degrees F
Temperature MQ 0 Chip    48 degrees C / 118 degrees F
Temperature MQ 1 TSen    48 degrees C / 118 degrees F
Temperature MQ 1 Chip    51 degrees C / 123 degrees F
Temperature MQ 2 TSen    48 degrees C / 118 degrees F
Temperature MQ 2 Chip    45 degrees C / 113 degrees F
Temperature MQ 3 TSen    48 degrees C / 118 degrees F
Temperature MQ 3 Chip    45 degrees C / 113 degrees F
Power
  AS-BIAS3V3-z12105      3291 mV
  AS-VDD1V8-z12006      1786 mV

```

```

AS-VDD2V5-z12006      2496 mV
AS-AVDD1V0-z12004     1000 mV
AS-PCIE_1V0-z12004     1000 mV
AS-VDD3V3-z12004      3294 mV
AS-VDD_1V5A-z12004     1500 mV
AS-VDD_1V5B-z12004     1498 mV
AS-LU0_1V0-z12004      1003 mV
AS-LU1_1V0-z12004      1000 mV
AS-MQ0_1V0-z12004      1000 mV
AS-MQ1_1V0-z12004      995 mV
AS-LU2_1V0-z12004      1002 mV
AS-LU3_1V0-z12004      997 mV
AS-MQ2_1V0-z12004      1000 mV
AS-MQ3_1V0-z12004      998 mV
AS-PMB_1V1-z12006      1096 mV
I2C Slave Revision     68
FPC 2 status:
State                   Online
Temperature Intake       39 degrees C / 102 degrees F
Temperature Exhaust A    48 degrees C / 118 degrees F
Temperature Exhaust B    58 degrees C / 136 degrees F
Temperature LU 0 TSen     55 degrees C / 131 degrees F
Temperature LU 0 Chip     57 degrees C / 134 degrees F
Temperature LU 1 TSen     55 degrees C / 131 degrees F
Temperature LU 1 Chip     63 degrees C / 145 degrees F
Temperature LU 2 TSen     55 degrees C / 131 degrees F
Temperature LU 2 Chip     51 degrees C / 123 degrees F
Temperature LU 3 TSen     55 degrees C / 131 degrees F
Temperature LU 3 Chip     52 degrees C / 125 degrees F
Temperature MQ 0 TSen     48 degrees C / 118 degrees F
Temperature MQ 0 Chip     50 degrees C / 122 degrees F
Temperature MQ 1 TSen     48 degrees C / 118 degrees F
Temperature MQ 1 Chip     52 degrees C / 125 degrees F
Temperature MQ 2 TSen     48 degrees C / 118 degrees F
Temperature MQ 2 Chip     47 degrees C / 116 degrees F
Temperature MQ 3 TSen     48 degrees C / 118 degrees F
Temperature MQ 3 Chip     47 degrees C / 116 degrees F
Power
AS-BIAS3V3-z12105       3299 mV
AS-VDD1V8-z12006        1805 mV
AS-VDD2V5-z12006        2510 mV
AS-AVDD1V0-z12004        999 mV
AS-PCIE_1V0-z12004        998 mV
AS-VDD3V3-z12004        3296 mV
AS-VDD_1V5A-z12004       1492 mV
AS-VDD_1V5B-z12004       1497 mV
AS-LU0_1V0-z12004        997 mV
AS-LU1_1V0-z12004       1000 mV
AS-MQ0_1V0-z12004        998 mV
AS-MQ1_1V0-z12004       1001 mV
AS-LU2_1V0-z12004        996 mV
AS-LU3_1V0-z12004        995 mV
AS-MQ2_1V0-z12004        998 mV
AS-MQ3_1V0-z12004        997 mV
AS-PMB_1V1-z12006       1100 mV
I2C Slave Revision     68
FPC 3 status:
State                   Online
Temperature Intake       41 degrees C / 105 degrees F
Temperature Exhaust A    48 degrees C / 118 degrees F

```



```

Temperature Exhaust B      58 degrees C / 136 degrees F
Temperature LU 0 TSen      56 degrees C / 132 degrees F
Temperature LU 0 Chip      59 degrees C / 138 degrees F
Temperature LU 1 TSen      56 degrees C / 132 degrees F
Temperature LU 1 Chip      61 degrees C / 141 degrees F
Temperature LU 2 TSen      56 degrees C / 132 degrees F
Temperature LU 2 Chip      51 degrees C / 123 degrees F
Temperature LU 3 TSen      56 degrees C / 132 degrees F
Temperature LU 3 Chip      53 degrees C / 127 degrees F
Temperature MQ 0 TSen      50 degrees C / 122 degrees F
Temperature MQ 0 Chip      51 degrees C / 123 degrees F
Temperature MQ 1 TSen      50 degrees C / 122 degrees F
Temperature MQ 1 Chip      55 degrees C / 131 degrees F
Temperature MQ 2 TSen      50 degrees C / 122 degrees F
Temperature MQ 2 Chip      47 degrees C / 116 degrees F
Temperature MQ 3 TSen      50 degrees C / 122 degrees F
Temperature MQ 3 Chip      50 degrees C / 122 degrees F
Power
  AS-BIAS3V3-z12105        3305 mV
  AS-VDD1V8-z12006         1810 mV
  AS-VDD2V5-z12006         2508 mV
  AS-AVDD1V0-z12004         999 mV
  AS-PCIE_1V0-z12004        1001 mV
  AS-VDD3V3-z12004         3294 mV
  AS-VDD_1V5A-z12004        1500 mV
  AS-VDD_1V5B-z12004        1498 mV
  AS-LU0_1V0-z12004         998 mV
  AS-LU1_1V0-z12004         998 mV
  AS-MQ0_1V0-z12004         999 mV
  AS-MQ1_1V0-z12004         998 mV
  AS-LU2_1V0-z12004        1000 mV
  AS-LU3_1V0-z12004        1001 mV
  AS-MQ2_1V0-z12004         996 mV
  AS-MQ3_1V0-z12004         998 mV
  AS-PMB_1V1-z12006        1098 mV
I2C Slave Revision        68
FPC 4 status:
...
```

show chassis environment fpc (MX2010 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State      Online
Temperature Intake      36 degrees C / 96 degrees F
Temperature Exhaust A   42 degrees C / 107 degrees F
Temperature Exhaust B   51 degrees C / 123 degrees F
Temperature LU 0 TSen    49 degrees C / 120 degrees F
Temperature LU 0 Chip    50 degrees C / 122 degrees F
Temperature LU 1 TSen    49 degrees C / 120 degrees F
Temperature LU 1 Chip    54 degrees C / 129 degrees F
Temperature LU 2 TSen    49 degrees C / 120 degrees F
Temperature LU 2 Chip    45 degrees C / 113 degrees F
Temperature LU 3 TSen    49 degrees C / 120 degrees F
Temperature LU 3 Chip    46 degrees C / 114 degrees F
Temperature MQ 0 TSen    40 degrees C / 104 degrees F
Temperature MQ 0 Chip    41 degrees C / 105 degrees F
Temperature MQ 1 TSen    40 degrees C / 104 degrees F
Temperature MQ 1 Chip    44 degrees C / 111 degrees F
```

```

Temperature MQ 2 TSen      40 degrees C / 104 degrees F
Temperature MQ 2 Chip      38 degrees C / 100 degrees F
Temperature MQ 3 TSen      40 degrees C / 104 degrees F
Temperature MQ 3 Chip      41 degrees C / 105 degrees F
Power
  AS-BIAS3V3-z12105        3300 mV
  AS-VDD1V8-z12006         1805 mV
  AS-VDD2V5-z12006         2505 mV
  AS-AVDD1V0-z12004         998 mV
  AS-PCIE_1V0-z12004        999 mV
  AS-VDD3V3-z12004         3303 mV
  AS-VDD_1V5A-z12004        1497 mV
  AS-VDD_1V5B-z12004        1497 mV
  AS-LU0_1V0-z12004         998 mV
  AS-LU1_1V0-z12004        1003 mV
  AS-MQ0_1V0-z12004         998 mV
  AS-MQ1_1V0-z12004         998 mV
  AS-LU2_1V0-z12004         997 mV
  AS-LU3_1V0-z12004        1001 mV
  AS-MQ2_1V0-z12004         996 mV
  AS-MQ3_1V0-z12004         994 mV
  AS-PMB_1V1-z12006        1097 mV
I2C Slave Revision        68
FPC 1 status:
State                      Online
Temperature Intake          34 degrees C / 93 degrees F
Temperature Exhaust A       46 degrees C / 114 degrees F
Temperature Exhaust B       54 degrees C / 129 degrees F
Temperature LU 0 TSen       45 degrees C / 113 degrees F
Temperature LU 0 Chip       55 degrees C / 131 degrees F
Temperature LU 1 TSen       45 degrees C / 113 degrees F
Temperature LU 1 Chip       44 degrees C / 111 degrees F
Temperature LU 2 TSen       45 degrees C / 113 degrees F
Temperature LU 2 Chip       50 degrees C / 122 degrees F
Temperature LU 3 TSen       45 degrees C / 113 degrees F
Temperature LU 3 Chip       58 degrees C / 136 degrees F
Temperature XM 0 TSen       45 degrees C / 113 degrees F
Temperature XM 0 Chip       51 degrees C / 123 degrees F
Temperature XF 0 TSen       45 degrees C / 113 degrees F
Temperature XF 0 Chip       63 degrees C / 145 degrees F
Temperature PLX Switch TSen 45 degrees C / 113 degrees F
Temperature PLX Switch Chip 47 degrees C / 116 degrees F
Power
  MPC-BIAS3V3-z12105        3300 mV
  MPC-VDD3V3-z16100         3294 mV
  MPC-VDD2V5-z16100         2505 mV
  MPC-VDD1V8-z12004         1796 mV
  MPC-AVDD1V0-z12004         991 mV
  MPC-VDD1V2-z16100         1196 mV
  MPC-VDD1V5A-z12004        1491 mV
  MPC-VDD1V5B-z12004        1492 mV
  MPC-XF_0V9-z12004         996 mV
  MPC-PCIE_1V0-z16100        1003 mV
  MPC-LU0_1V0-z12004         996 mV
  MPC-LU1_1V0-z12004         996 mV
  MPC-LU2_1V0-z12004         998 mV
  MPC-LU3_1V0-z12004         994 mV
  MPC-12VA-BMR453           12031 mV
  MPC-12VB-BMR453           12003 mV
  MPC-PMB_1V1-z12006        1104 mV

```

```

MPC-PMB_1V2-z12106      1194 mV
MPC-XM_OV9-vt273m      911 mV
I2C Slave Revision      110
FPC 8 status:
State                    Online
Temperature Intake       32 degrees C / 89 degrees F
Temperature Exhaust A    44 degrees C / 111 degrees F
Temperature Exhaust B    37 degrees C / 98 degrees F
Temperature LU 0 TCAM TSen 41 degrees C / 105 degrees F
Temperature LU 0 TCAM Chip 49 degrees C / 120 degrees F
Temperature LU 0 TSen     41 degrees C / 105 degrees F
Temperature LU 0 Chip     52 degrees C / 125 degrees F
Temperature MQ 0 TSen     41 degrees C / 105 degrees F
Temperature MQ 0 Chip     47 degrees C / 116 degrees F
Temperature LU 1 TCAM TSen 39 degrees C / 102 degrees F
Temperature LU 1 TCAM Chip 42 degrees C / 107 degrees F
Temperature LU 1 TSen     39 degrees C / 102 degrees F
Temperature LU 1 Chip     46 degrees C / 114 degrees F
Temperature MQ 1 TSen     39 degrees C / 102 degrees F
Temperature MQ 1 Chip     45 degrees C / 113 degrees F
Power
MPC-BIAS3V3-z12105      3296 mV
MPC-VDD3V3-z12006      3298 mV
MPC-VDD2V5-z12006      2505 mV
MPC-TCAM_1V0-z12004     997 mV
MPC-AVDD1V0-z12006      1007 mV
MPC-VDD1V8-z12006      1803 mV
MPC-PCIE_1V0-z12006     1004 mV
MPC-LU0_1V0-z12004      1000 mV
MPC-MQ0_1V0-z12004      999 mV
MPC-VDD_1V5-z12004      1498 mV
MPC-PMB_1V1-z12006      1102 mV
MPC-9VA-BMR453          9009 mV
MPC-9VB-BMR453          8960 mV
MPC-PMB_1V2-z12105      1202 mV
MPC-LU1_1V0-z12004      1005 mV
MPC-MQ1_1V0-z12004      1000 mV
I2C Slave Revision      70
FPC 9 status:
State                    Online
Temperature Intake       34 degrees C / 93 degrees F
Temperature Exhaust A    41 degrees C / 105 degrees F
Temperature Exhaust B    54 degrees C / 129 degrees F
Temperature LU 0 TSen     51 degrees C / 123 degrees F
Temperature LU 0 Chip     52 degrees C / 125 degrees F
Temperature LU 1 TSen     51 degrees C / 123 degrees F
Temperature LU 1 Chip     55 degrees C / 131 degrees F
Temperature LU 2 TSen     51 degrees C / 123 degrees F
Temperature LU 2 Chip     47 degrees C / 116 degrees F
Temperature LU 3 TSen     51 degrees C / 123 degrees F
Temperature LU 3 Chip     47 degrees C / 116 degrees F
Temperature MQ 0 TSen     40 degrees C / 104 degrees F
Temperature MQ 0 Chip     42 degrees C / 107 degrees F
Temperature MQ 1 TSen     40 degrees C / 104 degrees F
Temperature MQ 1 Chip     44 degrees C / 111 degrees F
Temperature MQ 2 TSen     40 degrees C / 104 degrees F
Temperature MQ 2 Chip     38 degrees C / 100 degrees F
Temperature MQ 3 TSen     40 degrees C / 104 degrees F
Temperature MQ 3 Chip     40 degrees C / 104 degrees F
Power

```

```

AS-BIAS3V3-z12105      3302 mV
AS-VDD1V8-z12006      1808 mV
AS-VDD2V5-z12006      2513 mV
AS-AVDD1V0-z12004      997 mV
AS-PCIE_1V0-z12004      999 mV
AS-VDD3V3-z12004      3294 mV
AS-VDD_1V5A-z12004     1503 mV
AS-VDD_1V5B-z12004     1502 mV
AS-LU0_1V0-z12004      996 mV
AS-LU1_1V0-z12004      999 mV
AS-MQ0_1V0-z12004      997 mV
AS-MQ1_1V0-z12004      999 mV
AS-LU2_1V0-z12004      997 mV
AS-LU3_1V0-z12004      998 mV
AS-MQ2_1V0-z12004     1000 mV
AS-MQ3_1V0-z12004     1000 mV
AS-PMB_1V1-z12006     1102 mV
I2C Slave Revision      68

```

show chassis environment fpc (MX2008 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State                               Online
Temperature Intake                  29 degrees C / 84 degrees F
Temperature Exhaust A               43 degrees C / 109 degrees F
Temperature Exhaust B               42 degrees C / 107 degrees F
Temperature XL 0 TSen                38 degrees C / 100 degrees F
Temperature XL 0 Chip                53 degrees C / 127 degrees F
Temperature XL 0 XR2 0 TSen          38 degrees C / 100 degrees F
Temperature XL 0 XR2 0 Chip          60 degrees C / 140 degrees F
Temperature XL 0 XR2 1 TSen          38 degrees C / 100 degrees F
Temperature XL 0 XR2 1 Chip          60 degrees C / 140 degrees F
Temperature XL 1 TSen                30 degrees C / 86 degrees F
Temperature XL 1 Chip                43 degrees C / 109 degrees F
Temperature XL 1 XR2 0 TSen          30 degrees C / 86 degrees F
Temperature XL 1 XR2 0 Chip          50 degrees C / 122 degrees F
Temperature XL 1 XR2 1 TSen          30 degrees C / 86 degrees F
Temperature XL 1 XR2 1 Chip          50 degrees C / 122 degrees F
Temperature XM 0 TSen                42 degrees C / 107 degrees F
Temperature XM 0 Chip                49 degrees C / 120 degrees F
Temperature XM 1 TSen                42 degrees C / 107 degrees F
Temperature XM 1 Chip                42 degrees C / 107 degrees F
Temperature XM 2 TSen                42 degrees C / 107 degrees F
Temperature XM 2 Chip                42 degrees C / 107 degrees F
Temperature XM 3 TSen                42 degrees C / 107 degrees F
Temperature XM 3 Chip                40 degrees C / 104 degrees F
Temperature PCIE Switch TSen         42 degrees C / 107 degrees F
Temperature PCIE Switch Chip         22 degrees C / 71 degrees F
Power
MPC-VDD_3V3-vt273m                 3304 mV
MPC-VDD_2V5-vt273m                 2503 mV
MPC-VDD_1V5-vt273m                 1499 mV
MPC-PCIE_0V9-vt273m                 900 mV
MPC-VDD_1V8-vt273m                 1799 mV
MPC-VDD_1V2-vt273m                 1203 mV
MPC-XM01_AVDD_1V0-vt273             1001 mV
MPC-XM23_AVDD_1V0-vt273             1001 mV
MPC-XM0_0V9-vt273m                 900 mV

```

```

MPC-XM1_OV9-vt273m      901 mV
MPC-XM2_OV9-vt273m      903 mV
MPC-XM3_OV9-vt273m      899 mV
MPC-XL0_XR0_OV9-vt273m  899 mV
MPC-XL0_XR1_OV9-vt273m  903 mV
MPC-XL0_OV9-vt273m      899 mV
MPC-XL0_AVDD_1V0-vt273m 1000 mV
MPC-XL0_VDD_1V5-vt273m  1498 mV
MPC-XL0_XR_1V2-vt273m   1200 mV
MPC-XL1_XR0_OV9-vt273m  899 mV
MPC-XL1_XR1_OV9-vt273m  899 mV
MPC-XL1_OV9-vt273m      900 mV
MPC-XL1_AVDD_1V0-vt273m 1000 mV
MPC-XL1_VDD_1V5-vt273m  1501 mV
MPC-XL1_XR_1V2-vt273m   1199 mV
MPC-PMB-1V05-ltc2978    1049 mV
MPC-PMB-1V5-ltc2978     1500 mV
MPC-PMB-2V5-ltc2978     2500 mV
MPC-PMB-3V3-ltc2978     3298 mV
I2C Slave Revision      20
FPC 1 status:
State                   Online
Temperature Intake       29 degrees C / 84 degrees F
Temperature Exhaust A    52 degrees C / 125 degrees F
Temperature Exhaust B    44 degrees C / 111 degrees F
Temperature EA0 TSen     55 degrees C / 131 degrees F
Temperature EA0 Chip     48 degrees C / 118 degrees F
Temperature EA0_XR0 TSen 55 degrees C / 131 degrees F
Temperature EA0_XR0 Chip 57 degrees C / 134 degrees F
Temperature EA0_XR1 TSen 55 degrees C / 131 degrees F
Temperature EA0_XR1 Chip 54 degrees C / 129 degrees F
Temperature EA1 TSen     55 degrees C / 131 degrees F
Temperature EA1 Chip     50 degrees C / 122 degrees F
Temperature EA1_XR0 TSen 55 degrees C / 131 degrees F
Temperature EA1_XR0 Chip 59 degrees C / 138 degrees F
Temperature EA1_XR1 TSen 55 degrees C / 131 degrees F
Temperature EA1_XR1 Chip 59 degrees C / 138 degrees F
Temperature PEX TSen     55 degrees C / 131 degrees F
Temperature PEX Chip     39 degrees C / 102 degrees F
Temperature EA2 TSen     43 degrees C / 109 degrees F
Temperature EA2 Chip     39 degrees C / 102 degrees F
Temperature EA2_XR0 TSen 43 degrees C / 109 degrees F
Temperature EA2_XR0 Chip 45 degrees C / 113 degrees F
Temperature EA2_XR1 TSen 43 degrees C / 109 degrees F
Temperature EA2_XR1 Chip 43 degrees C / 109 degrees F
Temperature EA3 TSen     43 degrees C / 109 degrees F
Temperature EA3 Chip     41 degrees C / 105 degrees F
Temperature EA3_XR0 TSen 43 degrees C / 109 degrees F
Temperature EA3_XR0 Chip 50 degrees C / 122 degrees F
Temperature EA3_XR1 TSen 43 degrees C / 109 degrees F
Temperature EA3_XR1 Chip 46 degrees C / 114 degrees F
Temperature EA0_HMC0 Logic die 61 degrees C / 141 degrees F
Temperature EA0_HMC0 DRAM botm 58 degrees C / 136 degrees F
Temperature EA0_HMC1 Logic die 62 degrees C / 143 degrees F
Temperature EA0_HMC1 DRAM botm 59 degrees C / 138 degrees F
Temperature EA0_HMC2 Logic die 59 degrees C / 138 degrees F
Temperature EA0_HMC2 DRAM botm 56 degrees C / 132 degrees F
Temperature EA1_HMC0 Logic die 67 degrees C / 152 degrees F
Temperature EA1_HMC0 DRAM botm 64 degrees C / 147 degrees F
Temperature EA1_HMC1 Logic die 65 degrees C / 149 degrees F

```

```

Temperature EA1_HMC1 DRAM botm 62 degrees C / 143 degrees F
Temperature EA1_HMC2 Logic die 63 degrees C / 145 degrees F
Temperature EA1_HMC2 DRAM botm 60 degrees C / 140 degrees F
Temperature EA2_HMC0 Logic die 51 degrees C / 123 degrees F
Temperature EA2_HMC0 DRAM botm 48 degrees C / 118 degrees F
Temperature EA2_HMC1 Logic die 55 degrees C / 131 degrees F
Temperature EA2_HMC1 DRAM botm 52 degrees C / 125 degrees F
Temperature EA2_HMC2 Logic die 52 degrees C / 125 degrees F
Temperature EA2_HMC2 DRAM botm 49 degrees C / 120 degrees F
Temperature EA3_HMC0 Logic die 51 degrees C / 123 degrees F
Temperature EA3_HMC0 DRAM botm 48 degrees C / 118 degrees F
Temperature EA3_HMC1 Logic die 52 degrees C / 125 degrees F
Temperature EA3_HMC1 DRAM botm 49 degrees C / 120 degrees F
Temperature EA3_HMC2 Logic die 52 degrees C / 125 degrees F
Temperature EA3_HMC2 DRAM botm 49 degrees C / 120 degrees F
Power
MPC-EA0_OV9-vt1527mb          950 mV
MPC-EA1_OV9-vt1527mb          950 mV
MPC-EA2_OV9-vt1527mb          925 mV
MPC-EA3_OV9-vt1527mb          924 mV
MAX20751-1V0                   1020 mV
MAX20731-OV9                    891 mV
MAX20751-EA0-AVDD1V0           1000 mV
MAX20731-EA0-1V2                1189 mV
MAX20731-EA0-HMC-1V2           1182 mV
MAX20731-EA0-OV906              899 mV
MAX20731-EA0-HMC-OV9            891 mV
MAX20751-EA1-AVDD1V0           1000 mV
MAX20731-EA1-1V2                1189 mV
MAX20731-EA1-HMC-1V2           1182 mV
MAX20731-EA1-OV906              899 mV
MAX20731-EA1-HMC-OV9            889 mV
MAX20751-EA2-AVDD1V0           1000 mV
MAX20731-EA2-1V2                1186 mV
MAX20731-EA2-HMC-1V2           1193 mV
MAX20731-EA2-OV906              899 mV
MAX20731-EA2-HMC-OV9            889 mV
MAX20751-EA3-AVDD1V0           1000 mV
MAX20731-EA3-1V2                1186 mV
MAX20731-EA3-HMC-1V2           1193 mV
MAX20731-EA3-OV906              897 mV
MAX20731-EA3-HMC-OV9            894 mV
MAX20731-3V3                    3268 mV
UCD9090_0-CH_1-EA0_PLL_         1010 mV
UCD9090_0-CH_2-EA0_1V04         1038 mV
UCD9090_0-CH_3-EA0_2V5          2499 mV
UCD9090_0-CH_4-EA0_1V5          1494 mV
UCD9090_0-CH_5-EA1_PLL_         1012 mV
UCD9090_0-CH_6-EA1_1V04         1038 mV
UCD9090_0-CH_7-EA1_2V5          2497 mV
UCD9090_0-CH_8-EA1_1V5          1498 mV
UCD9090_0-CH_9-VDD_1V8          1804 mV
UCD9090_0-CH_10-VDD_2V5         2499 mV
UCD9090_1-CH_1-EA2_PLL_         1017 mV
UCD9090_1-CH_2-EA2_1V04         1041 mV
UCD9090_1-CH_3-EA2_2V5          2499 mV
UCD9090_1-CH_4-EA2_1V5          1503 mV
UCD9090_1-CH_5-EA3_PLL_         1015 mV
UCD9090_1-CH_6-EA3_1V04         1048 mV
UCD9090_1-CH_7-EA3_2V5          2499 mV

```

```

UCD9090_1-CH_8-EA3_1V5      1500 mV
UCD9090_1-CH_9-VDD_1V5      1497 mV
UCD9090_1-CH_10-VDD_1V2     1216 mV
PMB PVCC 0.7V - 1.05V        802 mV
PMB PVNN 0V - 1.02V          976 mV
PMB 1.0V                      1002 mV
PMB 1.1V                      1076 mV
PMB 1.35V                     1347 mV
PMB VDDQ 1.5V                 1504 mV
PMB 1.8V                      1804 mV
PMB VDD 3.3V                  3292 mV
PMB BIAS 5.0V                 5008 mV
PMB USB 5.0V                  5000 mV
PMB 12V                       10866 mV
I2C Slave Revision           112
FPC 7 status:
State                         Online
Temperature Intake            31 degrees C / 87 degrees F
Temperature Exhaust A         46 degrees C / 114 degrees F
Temperature Exhaust B         38 degrees C / 100 degrees F
Temperature QX 0 TSen          49 degrees C / 120 degrees F
Temperature QX 0 Chip          52 degrees C / 125 degrees F
Temperature LU 0 TCAM TSen     49 degrees C / 120 degrees F
Temperature LU 0 TCAM Chip     52 degrees C / 125 degrees F
Temperature LU 0 TSen          49 degrees C / 120 degrees F
Temperature LU 0 Chip          51 degrees C / 123 degrees F
Temperature MQ 0 TSen          49 degrees C / 120 degrees F
Temperature MQ 0 Chip          55 degrees C / 131 degrees F
Temperature QX 1 TSen          41 degrees C / 105 degrees F
Temperature QX 1 Chip          42 degrees C / 107 degrees F
Temperature LU 1 TCAM TSen     41 degrees C / 105 degrees F
Temperature LU 1 TCAM Chip     43 degrees C / 109 degrees F
Temperature LU 1 TSen          41 degrees C / 105 degrees F
Temperature LU 1 Chip          46 degrees C / 114 degrees F
Temperature MQ 1 TSen          41 degrees C / 105 degrees F
Temperature MQ 1 Chip          47 degrees C / 116 degrees F
Power
MPC-BIAS3V3-z12105           3302 mV
MPC-VDD3V3-z12006            3307 mV
MPC-VDD2V5-z12006            2505 mV
MPC-TCAM_1V0-z12004           1000 mV
MPC-AVDD1V0-z12006            1006 mV
MPC-VDD1V8-z12006             1800 mV
MPC-PCIE_1V0-z12006           1000 mV
MPC-LU0_1V0-z12004            997 mV
MPC-MQ0_1V0-z12004            999 mV
MPC-VDD_1V5-z12004            1495 mV
MPC-PMB_1V1-z12006            1096 mV
MPC-9VA-BMR453                9051 mV
MPC-9VB-BMR453                8990 mV
MPC-PMB_1V2-z12106            1200 mV
MPC-LU1_1V0-z12004            997 mV
MPC-MQ1_1V0-z12004            998 mV
MPC-QXM0_1V0-z12006           1000 mV
MPC-QXM1_1V0-z12006           999 mV
I2C Slave Revision           70

```

show chassis environment fpc (MX240 Router)

```
user@host> show chassis environment fpc
```

FPC 1 status:

State	Online
Temperature Intake	34 degrees C / 93 degrees F
Temperature Exhaust A	39 degrees C / 102 degrees F
Temperature Exhaust B	53 degrees C / 127 degrees F
Temperature I3 0 TSensor	51 degrees C / 123 degrees F
Temperature I3 0 Chip	54 degrees C / 129 degrees F
Temperature I3 1 TSensor	50 degrees C / 122 degrees F
Temperature I3 1 Chip	53 degrees C / 127 degrees F
Temperature I3 2 TSensor	48 degrees C / 118 degrees F
Temperature I3 2 Chip	51 degrees C / 123 degrees F
Temperature I3 3 TSensor	45 degrees C / 113 degrees F
Temperature I3 3 Chip	48 degrees C / 118 degrees F
Temperature IA 0 TSensor	45 degrees C / 113 degrees F
Temperature IA 0 Chip	45 degrees C / 113 degrees F
Temperature IA 1 TSensor	45 degrees C / 113 degrees F
Temperature IA 1 Chip	49 degrees C / 120 degrees F
Power	
1.5 V	1492 mV
2.5 V	2507 mV
3.3 V	3306 mV
1.8 V PFE 0	1801 mV
1.8 V PFE 1	1804 mV
1.8 V PFE 2	1798 mV
1.8 V PFE 3	1798 mV
1.2 V PFE 0	1169 mV
1.2 V PFE 1	1189 mV
1.2 V PFE 2	1182 mV
1.2 V PFE 3	1176 mV
I2C Slave Revision	42

FPC 2 status:

State	Online
Temperature Intake	33 degrees C / 91 degrees F
Temperature Exhaust A	41 degrees C / 105 degrees F
Temperature Exhaust B	53 degrees C / 127 degrees F
Temperature I3 0 TSensor	53 degrees C / 127 degrees F
Temperature I3 0 Chip	58 degrees C / 136 degrees F
Temperature I3 1 TSensor	52 degrees C / 125 degrees F
Temperature I3 1 Chip	56 degrees C / 132 degrees F
Temperature I3 2 TSensor	50 degrees C / 122 degrees F
Temperature I3 2 Chip	52 degrees C / 125 degrees F
Temperature I3 3 TSensor	46 degrees C / 114 degrees F
Temperature I3 3 Chip	49 degrees C / 120 degrees F
Temperature IA 0 TSensor	51 degrees C / 123 degrees F
Temperature IA 0 Chip	49 degrees C / 120 degrees F
Temperature IA 1 TSensor	48 degrees C / 118 degrees F
Temperature IA 1 Chip	53 degrees C / 127 degrees F
Power	
1.5 V	1492 mV
2.5 V	2445 mV
3.3 V	3293 mV
1.8 V PFE 0	1827 mV
1.8 V PFE 1	1775 mV
1.8 V PFE 2	1788 mV
1.8 V PFE 3	1798 mV
1.2 V PFE 0	1250 mV
1.2 V PFE 1	1234 mV
1.2 V PFE 2	1231 mV
1.2 V PFE 3	1192 mV
I2C Slave Revision	42

show chassis environment fpc (MX480 Router)

```
user@host> show chassis environment fpc
```

```
FPC 1 status:
State                Online
Temperature Intake    36 degrees C / 96 degrees F
Temperature Exhaust A 41 degrees C / 105 degrees F
Temperature Exhaust B 55 degrees C / 131 degrees F
Temperature I3 0 TSensor 55 degrees C / 131 degrees F
Temperature I3 0 Chip  57 degrees C / 134 degrees F
Temperature I3 1 TSensor 53 degrees C / 127 degrees F
Temperature I3 1 Chip  53 degrees C / 127 degrees F
Temperature I3 2 TSensor 52 degrees C / 125 degrees F
Temperature I3 2 Chip  49 degrees C / 120 degrees F
Temperature I3 3 TSensor 47 degrees C / 116 degrees F
Temperature I3 3 Chip  47 degrees C / 116 degrees F
Temperature IA 0 TSensor 54 degrees C / 129 degrees F
Temperature IA 0 Chip  58 degrees C / 136 degrees F
Temperature IA 1 TSensor 48 degrees C / 118 degrees F
Temperature IA 1 Chip  53 degrees C / 127 degrees F
Power
  1.5 V                1479 mV
  2.5 V                2542 mV
  3.3 V                3319 mV
  1.8 V PFE 0          1811 mV
  1.8 V PFE 1          1804 mV
  1.8 V PFE 2          1804 mV
  1.8 V PFE 3          1814 mV
  1.2 V PFE 0          1192 mV
  1.2 V PFE 1          1202 mV
  1.2 V PFE 2          1205 mV
  1.2 V PFE 3          1189 mV
I2C Slave Revision    40
```

show chassis environment fpc (MX960 Router MPC10E-15C-MRATE)

```
user@router> show chassis environment fpc 8
```

```
FPC 8 status:
State                Online
Temperature Intake    37 degrees C / 98 degrees F
Temperature Exhaust A 50 degrees C / 122 degrees F
Temperature Exhaust B 56 degrees C / 132 degrees F
Temperature ZT0 Chip  83 degrees C / 181 degrees F
Temperature ZT1 Chip  80 degrees C / 176 degrees F
Temperature ZT2 Chip  81 degrees C / 177 degrees F
Temperature PCIE_SW Chip 64 degrees C / 147 degrees F
Temperature ZT0 TestMacro 73 degrees C / 163 degrees F
Temperature ZT0 hbmio_grp3 74 degrees C / 165 degrees F
```

Temperature ZT0 hbmio_grp0	76 degrees C / 168 degrees F
Temperature ZT0 gumem1	78 degrees C / 172 degrees F
Temperature ZT0 llm	80 degrees C / 176 degrees F
Temperature ZT0 wanio_sd	78 degrees C / 172 degrees F
Temperature ZT0 fabio_sd	84 degrees C / 183 degrees F
Temperature ZT0 flexmem	84 degrees C / 183 degrees F
Temperature ZT1 TestMacro	70 degrees C / 158 degrees F
Temperature ZT1 hbmio_grp3	71 degrees C / 159 degrees F
Temperature ZT1 hbmio_grp0	74 degrees C / 165 degrees F
Temperature ZT1 gumem1	75 degrees C / 167 degrees F
Temperature ZT1 llm	78 degrees C / 172 degrees F
Temperature ZT1 wanio_sd	76 degrees C / 168 degrees F
Temperature ZT1 fabio_sd	78 degrees C / 172 degrees F
Temperature ZT1 flexmem	82 degrees C / 179 degrees F
Temperature ZT2 TestMacro	71 degrees C / 159 degrees F
Temperature ZT2 hbmio_grp3	72 degrees C / 161 degrees F
Temperature ZT2 hbmio_grp0	75 degrees C / 167 degrees F
Temperature ZT2 gumem1	76 degrees C / 168 degrees F
Temperature ZT2 llm	78 degrees C / 172 degrees F
Temperature ZT2 wanio_sd	78 degrees C / 172 degrees F
Temperature ZT2 fabio_sd	80 degrees C / 176 degrees F
Temperature ZT2 flexmem	76 degrees C / 168 degrees F
Temperature ZT0 HBMO	74 degrees C / 165 degrees F
Temperature ZT0 HBM1	74 degrees C / 165 degrees F
Temperature ZT1 HBMO	74 degrees C / 165 degrees F
Temperature ZT1 HBM1	75 degrees C / 167 degrees F
Temperature ZT2 HBMO	73 degrees C / 163 degrees F
Temperature ZT2 HBM1	73 degrees C / 163 degrees F
Temperature FAB RT1.0	73 degrees C / 163 degrees F
Temperature FAB RT2.0	75 degrees C / 167 degrees F

Temperature FAB RT3.0	73 degrees C / 163 degrees F
Temperature FAB RT4.0	70 degrees C / 158 degrees F
Temperature FAB RT5.0	67 degrees C / 152 degrees F
Temperature FAB RT6.0	67 degrees C / 152 degrees F
Temperature FAB RT7.0	65 degrees C / 149 degrees F
Temperature FAB RT8.0	66 degrees C / 150 degrees F
Temperature WAN RT9.0	64 degrees C / 147 degrees F
Temperature WAN RT9.1	62 degrees C / 143 degrees F
Temperature WAN RT10.0	65 degrees C / 149 degrees F
Temperature WAN RT10.1	63 degrees C / 145 degrees F
Temperature WAN RT11.0	51 degrees C / 123 degrees F
Temperature WAN RT11.1	49 degrees C / 120 degrees F
Temperature PIM4820 T1	72 degrees C / 161 degrees F
Temperature BMR456-12V-BRICK-A T1	83 degrees C / 181 degrees F
Temperature BMR456-12V-BRICK-B T1	91 degrees C / 195 degrees F
Temperature MAX20730-ZT0-AVDDH T1	72 degrees C / 161 degrees F
Temperature MAX20730-ZT0-HBM-VDDQ T1	64 degrees C / 147 degrees F
Temperature MAX20730-ZT0-HBM-VDDC T1	65 degrees C / 149 degrees F
Temperature MAX20730-ZT1-AVDDH T1	65 degrees C / 149 degrees F
Temperature MAX20730-ZT1-HBM-VDDQ T1	60 degrees C / 140 degrees F
Temperature MAX20730-ZT1-HBM-VDDC T1	57 degrees C / 134 degrees F
Temperature MAX20730-ZT2-AVDDH T1	65 degrees C / 149 degrees F
Temperature MAX20730-ZT2-HBM-VDDQ T1	58 degrees C / 136 degrees F
Temperature MAX20730-ZT2-HBM-VDDC T1	55 degrees C / 131 degrees F
Temperature CPU0_PMB	61 degrees C / 141 degrees F
Temperature CPU7_PMB	61 degrees C / 141 degrees F
Temperature DDR4 A	38 degrees C / 100 degrees F
Temperature DDR4 B	37 degrees C / 98 degrees F
Power	
PIM4820	56967 mV
BMR456-12V-BRICK-A	12016 mV
BMR456-12V-BRICK-B	12039 mV

MAX20743-RT01-DVDD	724 mV
MAX20743-RT234-DVDD	724 mV
MAX20743-RT567-DVDD	724 mV
MAX20754-ZT0-VDD	750 mV
MAX20754-ZT0-VDDM	799 mV
MAX20743-ZT0-AVDD	904 mV
MAX20730-ZT0-AVDDH	1103 mV
MAX20730-ZT0-HBM-VDDQ	1198 mV
MAX20730-ZT0-HBM-VDDC	1202 mV
MAX20730-VDD-1V25	1246 mV
MAX20754-ZT1-VDD	724 mV
MAX20754-ZT1-VDDM	800 mV
MAX20743-ZT1-AVDD	904 mV
MAX20730-ZT1-AVDDH	1103 mV
MAX20730-ZT1-HBM-VDDQ	1202 mV
MAX20730-ZT1-HBM-VDDC	1198 mV
MAX20730-PCIE-0V9	901 mV
MAX20754-ZT2-VDD	724 mV
MAX20754-ZT2-VDDM	799 mV
MAX20743-ZT2-AVDD	904 mV
MAX20730-ZT2-AVDDH	1103 mV
MAX20730-ZT2-HBM-VDDQ	1198 mV
MAX20730-ZT2-HBM-VDDC	1198 mV
MAX20730-VDD3V3	3308 mV
MAX20754-WAN-VDD3V3	3301 mV
MAX20754-WAN-DVDD0V8	799 mV
MAX20743-WAN-VDD1V0A	1003 mV
MAX20743-WAN-AVDD0V8	800 mV
MAX20743-WAN-VDD1V0C	1003 mV
TPS53631-1V2-VDDQ-PMB	1225 mV
TPS53641-VCCIN-PMB	1770 mV
TPS53641-VCCSBUS-PMB	1040 mV
MAX20730-BIAS3P30-PMB	3308 mV
MAX20730-BIAS5P0-PMB	5063 mV
MAX20730-VPP-V2P5-PMB	2503 mV
MAX20730-VDD1V2	1195 mV
MAX20730-VDD1V5	1496 mV
MAX20730-VDD1V8	1799 mV
MAX20730-VDD2V5	2511 mV
MAX20754-RT-AVDD-0V8	800 mV
MAX20743-XGE-VDD-AVS	1012 mV
PMB VCC1P05_PCH_SW	1048 mV
PMB VCC1P3	1294 mV
PMB VCC1P5	1485 mV
PMB VCC1P7	1705 mV
PMB DDR4_VPP	2519 mV
PMB VCC3P3	3336 mV
PMB VCC3P3_PCH	3332 mV
I2C Slave Revision	124

show chassis environment fpc (MX960 Router)

```
user@host> show chassis environment fpc
```

```
FPC 5 status:
```

State	Online
Temperature Intake	27 degrees C / 80 degrees F
Temperature Exhaust A	34 degrees C / 93 degrees F
Temperature Exhaust B	40 degrees C / 104 degrees F
Temperature I3 0 TSensor	39 degrees C / 102 degrees F

```

Temperature I3 0 Chip      41 degrees C / 105 degrees F
Temperature I3 1 TSensor   38 degrees C / 100 degrees F
Temperature I3 1 Chip      37 degrees C / 98 degrees F
Temperature I3 2 TSensor   37 degrees C / 98 degrees F
Temperature I3 2 Chip      34 degrees C / 93 degrees F
Temperature I3 3 TSensor   32 degrees C / 89 degrees F
Temperature I3 3 Chip      33 degrees C / 91 degrees F
Temperature IA 0 TSensor   39 degrees C / 102 degrees F
Temperature IA 0 Chip      44 degrees C / 111 degrees F
Temperature IA 1 TSensor   36 degrees C / 96 degrees F
Temperature IA 1 Chip      44 degrees C / 111 degrees F
Power
  1.5 V                    1479 mV
  2.5 V                    2523 mV
  3.3 V                    3254 mV
  1.8 V PFE 0              1798 mV
  1.8 V PFE 1              1798 mV
  1.8 V PFE 2              1807 mV
  1.8 V PFE 3              1791 mV
  1.2 V PFE 0              1173 mV
  1.2 V PFE 1              1179 mV
  1.2 V PFE 2              1179 mV
  1.2 V PFE 3              1185 mV
I2C Slave Revision        6
FPC 6 status:
State                      Online
Temperature Intake          25 degrees C / 77 degrees F
Temperature Exhaust A       38 degrees C / 100 degrees F
Temperature Exhaust B       38 degrees C / 100 degrees F
Temperature I3 0 TSensor    40 degrees C / 104 degrees F
Temperature I3 0 Chip       40 degrees C / 104 degrees F
Temperature I3 1 TSensor    40 degrees C / 104 degrees F
Temperature I3 1 Chip       38 degrees C / 100 degrees F
Temperature I3 2 TSensor    37 degrees C / 98 degrees F
Temperature I3 2 Chip       32 degrees C / 89 degrees F
Temperature I3 3 TSensor    34 degrees C / 93 degrees F
Temperature I3 3 Chip       33 degrees C / 91 degrees F
Temperature IA 0 TSensor    45 degrees C / 113 degrees F
Temperature IA 0 Chip       47 degrees C / 116 degrees F
Temperature IA 1 TSensor    37 degrees C / 98 degrees F
Temperature IA 1 Chip       42 degrees C / 107 degrees F
Power
  1.5 V                    1485 mV
  2.5 V                    2510 mV
  3.3 V                    3332 mV
  1.8 V PFE 0              1801 mV
  1.8 V PFE 1              1814 mV
  1.8 V PFE 2              1804 mV
  1.8 V PFE 3              1820 mV
  1.2 V PFE 0              1192 mV
  1.2 V PFE 1              1189 mV
  1.2 V PFE 2              1202 mV
  1.2 V PFE 3              1156 mV
I2C Slave Revision        40

```

show chassis environment fpc (MX480 Router with 100-Gigabit Ethernet CFP)

```
user@host> show chassis environment fpc
```

FPC 0 status:

State	Online
Temperature Intake	32 degrees C / 89 degrees F
Temperature Exhaust A	39 degrees C / 102 degrees F
Temperature Exhaust B	37 degrees C / 98 degrees F
Temperature QX 0 TSen	44 degrees C / 111 degrees F
Temperature QX 0 Chip	48 degrees C / 118 degrees F
Temperature LU 0 TCAM TSen	44 degrees C / 111 degrees F
Temperature LU 0 TCAM Chip	47 degrees C / 116 degrees F
Temperature LU 0 TSen	44 degrees C / 111 degrees F
Temperature LU 0 Chip	48 degrees C / 118 degrees F
Temperature MQ 0 TSen	44 degrees C / 111 degrees F
Temperature MQ 0 Chip	47 degrees C / 116 degrees F
Power	
MPC-BIAS3V3-z12105	3297 mV
MPC-VDD3V3-z12105	3306 mV
MPC-VDD2V5-z12105	2498 mV
MPC-TCAM_1V0-z12004	999 mV
MPC-AVDD1V0-z12006	999 mV
MPC-VDD1V8-z12006	1796 mV
MPC-PCIE_1V0-z12006	1002 mV
MPC-LU0_1V0-z12004	997 mV
MPC-MQ0_1V0-z12004	995 mV
MPC-VDD_1V5-z12004	1496 mV
MPC-PMB_1V1-z12006	1094 mV
MPC-9VA-BMR453	9054 mV
MPC-9VB-BMR453	9037 mV
MPC-PMB_1V2-z12106	1191 mV
MPC-QXM0_1V0-z12006	1000 mV
I2C Slave Revision	66

FPC 1 status:

State	Online
Temperature Intake	35 degrees C / 95 degrees F
Temperature Exhaust A	50 degrees C / 122 degrees F
Temperature Exhaust B	56 degrees C / 132 degrees F
Temperature LU 0 TSen	46 degrees C / 114 degrees F
Temperature LU 0 Chip	59 degrees C / 138 degrees F
Temperature LU 1 TSen	46 degrees C / 114 degrees F
Temperature LU 1 Chip	45 degrees C / 113 degrees F
Temperature LU 2 TSen	46 degrees C / 114 degrees F
Temperature LU 2 Chip	60 degrees C / 140 degrees F
Temperature LU 3 TSen	46 degrees C / 114 degrees F
Temperature LU 3 Chip	71 degrees C / 159 degrees F
Temperature XM 0 TSen	46 degrees C / 114 degrees F
Temperature XM 0 Chip	-18 degrees C / 0 degrees F
Temperature XF 0 TSen	46 degrees C / 114 degrees F
Temperature XF 0 Chip	76 degrees C / 168 degrees F
Power	
MPC-BIAS3V3-z12105	3292 mV
MPC-VDD3V3-z16100	3303 mV
MPC-VDD2V5-z16100	2501 mV
MPC-VDD1V8-z12004	1801 mV
MPC-AVDD1V0-z12006	996 mV
MPC-VDD1V2-z16100	1199 mV
MPC-VDD1V5A-z12004	1493 mV
MPC-VDD1V5B-z12004	1498 mV
MPC-XF_0V9-z12006	996 mV
MPC-PCIE_1V0-z16100	1000 mV
MPC-LU0_1V0-z12004	994 mV
MPC-LU1_1V0-z12004	994 mV

```

MPC-LU2_1V0-z12004      992 mV
MPC-LU3_1V0-z12004      993 mV
MPC-12VA-BMR453         12003 mV
MPC-12VB-BMR453         12043 mV
MPC-PMB_1V1-z12006      1091 mV
MPC-PMB_1V2-z12106      1196 mV
MPC-XM_0V9-vt273m       899 mV
I2C Slave Revision      106

```

show chassis environment fpc (MX240, MX480, MX960 with Application Services Modular Line Card)

```
user@host>show chassis environment fpc 1
```

```

FPC 1 status:
State                               Online
Temperature Intake                  36 degrees C / 96 degrees F
Temperature Exhaust A               39 degrees C / 102 degrees F
Temperature LU TSen                 52 degrees C / 125 degrees F
Temperature LU Chip                 54 degrees C / 129 degrees F
Temperature XM TSen                 52 degrees C / 125 degrees F
Temperature XM Chip                 60 degrees C / 140 degrees F
Temperature PCIe TSen               52 degrees C / 125 degrees F
Temperature PCIe Chip               69 degrees C / 156 degrees F
Power
MPC-BIAS3V3-z12106                 3302 mV
MPC-VDD3V3-z16100                  3325 mV
MPC-AVDD1V0-z16100                 1007 mV
MPC-PCIE_1V0-z16100                904 mV
MPC-LU0_1V0-z12004                 996 mV
MPC-VDD_1V5-z12004                 1498 mV
MPC-12VA-BMR453                    11733 mV
MPC-12VB-BMR453                    11728 mV
MPC-XM_0V9-vt273m                  900 mV
I2C Slave Revision                  81

```

show chassis environment fpc (MX10003 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State                               Online
FPC 0 Intake Temp Sensor           29 degrees C / 84 degrees F
FPC 0 Exhaust-A Temp Sensor         56 degrees C / 132 degrees F
FPC 0 Exhaust-B Temp Sensor         44 degrees C / 111 degrees F
FPC 0 EA0 Chip                      58 degrees C / 136 degrees F
FPC 0 EA0-XR0 Chip                  61 degrees C / 141 degrees F
FPC 0 EA0-XR1 Chip                  62 degrees C / 143 degrees F
FPC 0 EA1 Chip                      67 degrees C / 152 degrees F
FPC 0 EA1-XR0 Chip                  72 degrees C / 161 degrees F
FPC 0 EA1-XR1 Chip                  72 degrees C / 161 degrees F
FPC 0 PEX Chip                      77 degrees C / 170 degrees F
FPC 0 EA2 Chip                      48 degrees C / 118 degrees F
FPC 0 EA2-XR0 Chip                  54 degrees C / 129 degrees F
FPC 0 EA2-XR1 Chip                  56 degrees C / 132 degrees F
FPC 0 PF Chip                       68 degrees C / 154 degrees F
FPC 0 EA0_HMC0 Logic die            72 degrees C / 161 degrees F
FPC 0 EA0_HMC0 DRAM botm            69 degrees C / 156 degrees F
FPC 0 EA0_HMC1 Logic die            71 degrees C / 159 degrees F

```

FPC 0 EA0_HMC1 DRAM botm	68 degrees C / 154 degrees F
FPC 0 EA0_HMC2 Logic die	75 degrees C / 167 degrees F
FPC 0 EA0_HMC2 DRAM botm	72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 Logic die	81 degrees C / 177 degrees F
FPC 0 EA1_HMC0 DRAM botm	78 degrees C / 172 degrees F
FPC 0 EA1_HMC1 Logic die	80 degrees C / 176 degrees F
FPC 0 EA1_HMC1 DRAM botm	77 degrees C / 170 degrees F
FPC 0 EA1_HMC2 Logic die	82 degrees C / 179 degrees F
FPC 0 EA1_HMC2 DRAM botm	79 degrees C / 174 degrees F
FPC 0 EA2_HMC0 Logic die	60 degrees C / 140 degrees F
FPC 0 EA2_HMC0 DRAM botm	57 degrees C / 134 degrees F
FPC 0 EA2_HMC1 Logic die	61 degrees C / 141 degrees F
FPC 0 EA2_HMC1 DRAM botm	58 degrees C / 136 degrees F
FPC 0 EA2_HMC2 Logic die	63 degrees C / 145 degrees F
FPC 0 EA2_HMC2 DRAM botm	60 degrees C / 140 degrees F

Power

LTC3887-PF-VDD0V9-RAIL	898 mV
LTC3887-PF-VDD0V9-DEV0-	898 mV
LTC3887-PF-VDD0V9-DEV0-	900 mV
LTC3887-PF-VDD0V9-DEV1-	899 mV
LTC3887-PF-VDD0V9-DEV1-	901 mV
LTC3887-PF-AVDD1V0-RAIL	998 mV
LTC3887-PF-AVDD1V0-CH0	998 mV
LTC3887-PF-AVDD1V0-CH1	999 mV
LTC3887-ETHSW-VDD1V0	1000 mV
LTC3887-VDD2V5	2499 mV
LTC3887-PCIE-VDD0V9	899 mV
LTC3887-V1P0	999 mV
LTC3887-PHY-VDD1V0-A	999 mV
LTC3887-3V3	3300 mV
LTC3887-VDD1V8	1799 mV
UCD9090_0-CH_1-EA0_PLL_	1005 mV
UCD9090_0-CH_2-EA0_1V4	1049 mV
UCD9090_0-CH_3-EA0_2V5	2499 mV
UCD9090_0-CH_4-EA0_1V5	1499 mV
UCD9090_0-CH_5-EA1_PLL_	999 mV
UCD9090_0-CH_6-EA1_1V4	1037 mV
UCD9090_0-CH_7-EA1_2V5	2499 mV
UCD9090_0-CH_8-EA1_1V5	1510 mV
UCD9090_0-CH_9-PVCC	797 mV
UCD9090_0-CH_10-PVNN	991 mV
UCD9090_1-CH_1-EA2_PLL_	1008 mV
UCD9090_1-CH_2-EA2_1V4	1009 mV
UCD9090_1-CH_3-EA2_2V5	2499 mV
UCD9090_1-CH_4-EA2_1V5	1513 mV
UCD9090_1-CH_5-1V0_PFP1	1009 mV
UCD9090_1-CH_6-V1P1	1075 mV
UCD9090_1-CH_7-V1P5	1531 mV
UCD9090_1-CH_8-V1P35	1359 mV
UCD9090_1-CH_9-VDD1V5	1511 mV
UCD9090_1-CH_10-VDD1V2	1210 mV
LTC3887-EA0-VDD0V9-RAIL	949 mV
LTC3887-EA0-VDD0V9-DEV0	949 mV
LTC3887-EA0-VDD0V9-DEV0	951 mV
LTC3887-EA0-VDD0V9-DEV1	949 mV
LTC3887-EA0-VDD0V9-DEV1	951 mV
LTC3887-EA0-VDD0V9R2-RA	947 mV
LTC3887-EA0-VDD0V9R2-CH	947 mV
LTC3887-EA0-VDD0V9R2-CH	949 mV
LTC3887-EA0-VDD1V0-RAIL	999 mV


```

LTC3887-EA0-VDD1V0-CH0      999 mV
LTC3887-EA0-VDD1V0-CH1      1001 mV
LTC3887-EA0-XR-VDD0V9        900 mV
LTC3887-EA0-XR-VDD1V2        1199 mV
LTC3887-EA0-HM1-VDD0V9        899 mV
LTC3887-EA0-HM-VDD1V2        1200 mV
LTC3887-EA0-HM-VDDM1V2        1199 mV
LTC3887-EA1-VDD0V9-RAIL      949 mV
LTC3887-EA1-VDD0V9-DEV0      952 mV
LTC3887-EA1-VDD0V9-DEV0      952 mV
LTC3887-EA1-VDD0V9-DEV1      951 mV
LTC3887-EA1-VDD0V9-DEV1      951 mV
LTC3887-EA1-VDD0V9R2-RA      948 mV
LTC3887-EA1-VDD0V9R2-CH      948 mV
LTC3887-EA1-VDD0V9R2-CH      950 mV
LTC3887-EA1-VDD1V0-RAIL      1000 mV
LTC3887-EA1-VDD1V0-CH0      1000 mV
LTC3887-EA1-VDD1V0-CH1      1001 mV
I2C Slave Revision           13
FPC 1 status:
State                         Online
FPC 1 Intake Temp Sensor      27 degrees C / 80 degrees F
FPC 1 Exhaust-A Temp Sensor    60 degrees C / 140 degrees F
FPC 1 Exhaust-B Temp Sensor    46 degrees C / 114 degrees F
FPC 1 EA0 Chip                 63 degrees C / 145 degrees F
FPC 1 EA0-XR0 Chip             67 degrees C / 152 degrees F
FPC 1 EA0-XR1 Chip             68 degrees C / 154 degrees F
FPC 1 EA1 Chip                 70 degrees C / 158 degrees F
FPC 1 EA1-XR0 Chip             75 degrees C / 167 degrees F
FPC 1 EA1-XR1 Chip             75 degrees C / 167 degrees F
FPC 1 PEX Chip                 89 degrees C / 192 degrees F
FPC 1 EA2 Chip                 49 degrees C / 120 degrees F
FPC 1 EA2-XR0 Chip             53 degrees C / 127 degrees F
FPC 1 EA2-XR1 Chip             56 degrees C / 132 degrees F
FPC 1 PF Chip                  71 degrees C / 159 degrees F
FPC 1 EA0_HMC0 Logic die       74 degrees C / 165 degrees F
FPC 1 EA0_HMC0 DRAM botm       71 degrees C / 159 degrees F
FPC 1 EA0_HMC1 Logic die       78 degrees C / 172 degrees F
FPC 1 EA0_HMC1 DRAM botm       75 degrees C / 167 degrees F
FPC 1 EA0_HMC2 Logic die       78 degrees C / 172 degrees F
FPC 1 EA0_HMC2 DRAM botm       75 degrees C / 167 degrees F
FPC 1 EA1_HMC0 Logic die       84 degrees C / 183 degrees F
FPC 1 EA1_HMC0 DRAM botm       81 degrees C / 177 degrees F
FPC 1 EA1_HMC1 Logic die       82 degrees C / 179 degrees F
FPC 1 EA1_HMC1 DRAM botm       79 degrees C / 174 degrees F
FPC 1 EA1_HMC2 Logic die       85 degrees C / 185 degrees F
FPC 1 EA1_HMC2 DRAM botm       82 degrees C / 179 degrees F
FPC 1 EA2_HMC0 Logic die       62 degrees C / 143 degrees F
FPC 1 EA2_HMC0 DRAM botm       59 degrees C / 138 degrees F
FPC 1 EA2_HMC1 Logic die       60 degrees C / 140 degrees F
FPC 1 EA2_HMC1 DRAM botm       57 degrees C / 134 degrees F
FPC 1 EA2_HMC2 Logic die       65 degrees C / 149 degrees F
FPC 1 EA2_HMC2 DRAM botm       62 degrees C / 143 degrees F
Power
LTC3887-PF-VDD0V9-RAIL        899 mV
LTC3887-PF-VDD0V9-DEV0-      899 mV
LTC3887-PF-VDD0V9-DEV0-      901 mV
LTC3887-PF-VDD0V9-DEV1-      899 mV
LTC3887-PF-VDD0V9-DEV1-      901 mV
LTC3887-PF-AVDD1V0-RAIL        998 mV

```

LTC3887-PF-AVDD1V0-CH0	998 mV
LTC3887-PF-AVDD1V0-CH1	999 mV
LTC3887-ETHSW-VDD1V0	999 mV
LTC3887-VDD2V5	2499 mV
LTC3887-PCIE-VDD0V9	900 mV
LTC3887-V1P0	1000 mV
LTC3887-PHY-VDD1V0-A	1000 mV
LTC3887-3V3	3300 mV
LTC3887-VDD1V8	1799 mV
UCD9090_0-CH_1-EA0_PLL_	1004 mV
UCD9090_0-CH_2-EA0_1V4	1004 mV
UCD9090_0-CH_3-EA0_2V5	2499 mV
UCD9090_0-CH_4-EA0_1V5	1511 mV
UCD9090_0-CH_5-EA1_PLL_	999 mV
UCD9090_0-CH_6-EA1_1V4	1008 mV
UCD9090_0-CH_7-EA1_2V5	2499 mV
UCD9090_0-CH_8-EA1_1V5	1510 mV
UCD9090_0-CH_9-PVCC	839 mV
UCD9090_0-CH_10-PVNN	1016 mV
UCD9090_1-CH_1-EA2_PLL_	1011 mV
UCD9090_1-CH_2-EA2_1V4	1046 mV
UCD9090_1-CH_3-EA2_2V5	2499 mV
UCD9090_1-CH_4-EA2_1V5	1501 mV
UCD9090_1-CH_5-1V0_PFP_L	1000 mV
UCD9090_1-CH_6-V1P1	1037 mV
UCD9090_1-CH_7-V1P5	1530 mV
UCD9090_1-CH_8-V1P35	1360 mV
UCD9090_1-CH_9-VDD1V5	1513 mV
UCD9090_1-CH_10-VDD1V2	1217 mV
LTC3887-EA0-VDD0V9-RAIL	949 mV
LTC3887-EA0-VDD0V9-DEV0	949 mV
LTC3887-EA0-VDD0V9-DEV0	951 mV
LTC3887-EA0-VDD0V9-DEV1	949 mV
LTC3887-EA0-VDD0V9-DEV1	952 mV
LTC3887-EA0-VDD0V9R2-RA	947 mV
LTC3887-EA0-VDD0V9R2-CH	947 mV
LTC3887-EA0-VDD0V9R2-CH	949 mV
LTC3887-EA0-VDD1V0-RAIL	1000 mV
LTC3887-EA0-VDD1V0-CH0	1000 mV
LTC3887-EA0-VDD1V0-CH1	1001 mV
LTC3887-EA0-XR-VDD0V9	899 mV
LTC3887-EA0-XR-VDD1V2	1200 mV
LTC3887-EA0-HM1-VDD0V9	899 mV
LTC3887-EA0-HM-VDD1V2	1199 mV
LTC3887-EA0-HM-VDDM1V2	1199 mV
LTC3887-EA1-VDD0V9-RAIL	948 mV
LTC3887-EA1-VDD0V9-DEV0	950 mV
LTC3887-EA1-VDD0V9-DEV0	950 mV
LTC3887-EA1-VDD0V9-DEV1	951 mV
LTC3887-EA1-VDD0V9-DEV1	951 mV
LTC3887-EA1-VDD0V9R2-RA	947 mV
LTC3887-EA1-VDD0V9R2-CH	947 mV
LTC3887-EA1-VDD0V9R2-CH	949 mV
LTC3887-EA1-VDD1V0-RAIL	1000 mV
LTC3887-EA1-VDD1V0-CH0	1000 mV
LTC3887-EA1-VDD1V0-CH1	1002 mV
I2C Slave Revision	99

show chassis environment fpc (MX204 Router)

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
State                               Online
FPC 0 EA0_HMC0 Logic die           77 degrees C / 170 degrees F
FPC 0 EA0_HMC0 DRAM botm           74 degrees C / 165 degrees F
FPC 0 EA0_HMC1 Logic die           80 degrees C / 176 degrees F
FPC 0 EA0_HMC1 DRAM botm           77 degrees C / 170 degrees F
FPC 0 EA0 Chip                      93 degrees C / 199 degrees F
FPC 0 EA0-XR0 Chip                  63 degrees C / 145 degrees F
FPC 0 EA0-XR1 Chip                  64 degrees C / 147 degrees F
Power
I2C Slave Revision                 0
```

show chassis environment fpc (MX10008 Router)

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
State                               Online
FPC 0 Intake-A Temp Sensor          32 degrees C / 89 degrees F
FPC 0 Exhaust-A Temp Sensor         44 degrees C / 111 degrees F
FPC 0 Exhaust-B Temp Sensor         50 degrees C / 122 degrees F
FPC 0 EA0 Temp Sensor               67 degrees C / 152 degrees F
FPC 0 EA0_XR0 Temp Sensor            69 degrees C / 156 degrees F
FPC 0 EA0_XR1 Temp Sensor            73 degrees C / 163 degrees F
FPC 0 EA1 Temp Sensor               61 degrees C / 141 degrees F
FPC 0 EA1_XR0 Temp Sensor            65 degrees C / 149 degrees F
FPC 0 EA1_XR1 Temp Sensor            63 degrees C / 145 degrees F
FPC 0 EA2 Temp Sensor               69 degrees C / 156 degrees F
FPC 0 EA2_XR0 Temp Sensor            73 degrees C / 163 degrees F
FPC 0 EA2_XR1 Temp Sensor            72 degrees C / 161 degrees F
FPC 0 EA3 Temp Sensor               64 degrees C / 147 degrees F
FPC 0 EA3_XR0 Temp Sensor            66 degrees C / 150 degrees F
FPC 0 EA3_XR1 Temp Sensor            66 degrees C / 150 degrees F
FPC 0 EA4 Temp Sensor               70 degrees C / 158 degrees F
FPC 0 EA4_XR0 Temp Sensor            72 degrees C / 161 degrees F
FPC 0 EA4_XR1 Temp Sensor            72 degrees C / 161 degrees F
FPC 0 EA5 Temp Sensor               58 degrees C / 136 degrees F
FPC 0 EA5_XR0 Temp Sensor            61 degrees C / 141 degrees F
FPC 0 EA5_XR1 Temp Sensor            64 degrees C / 147 degrees F
FPC 0 EA0_HMC0 Logic die            75 degrees C / 167 degrees F
FPC 0 EA0_HMC0 DRAM botm            72 degrees C / 161 degrees F
FPC 0 EA0_HMC1 Logic die            76 degrees C / 168 degrees F
FPC 0 EA0_HMC1 DRAM botm            73 degrees C / 163 degrees F
FPC 0 EA0_HMC2 Logic die            77 degrees C / 170 degrees F
FPC 0 EA0_HMC2 DRAM botm            74 degrees C / 165 degrees F
FPC 0 EA1_HMC0 Logic die            72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 DRAM botm            69 degrees C / 156 degrees F
FPC 0 EA1_HMC1 Logic die            73 degrees C / 163 degrees F
FPC 0 EA1_HMC1 DRAM botm            70 degrees C / 158 degrees F
FPC 0 EA1_HMC2 Logic die            72 degrees C / 161 degrees F
FPC 0 EA1_HMC2 DRAM botm            69 degrees C / 156 degrees F
FPC 0 EA2_HMC0 Logic die            80 degrees C / 176 degrees F
FPC 0 EA2_HMC0 DRAM botm            77 degrees C / 170 degrees F
FPC 0 EA2_HMC1 Logic die            81 degrees C / 177 degrees F
```

FPC 0 EA2_HMC1 DRAM botm	78 degrees C / 172 degrees F
FPC 0 EA2_HMC2 Logic die	80 degrees C / 176 degrees F
FPC 0 EA2_HMC2 DRAM botm	77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 Logic die	77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 DRAM botm	74 degrees C / 165 degrees F
FPC 0 EA3_HMC1 Logic die	78 degrees C / 172 degrees F
FPC 0 EA3_HMC1 DRAM botm	75 degrees C / 167 degrees F
FPC 0 EA3_HMC2 Logic die	77 degrees C / 170 degrees F
FPC 0 EA3_HMC2 DRAM botm	74 degrees C / 165 degrees F
FPC 0 EA4_HMC0 Logic die	80 degrees C / 176 degrees F
FPC 0 EA4_HMC0 DRAM botm	77 degrees C / 170 degrees F
FPC 0 EA4_HMC1 Logic die	81 degrees C / 177 degrees F
FPC 0 EA4_HMC1 DRAM botm	78 degrees C / 172 degrees F
FPC 0 EA4_HMC2 Logic die	80 degrees C / 176 degrees F
FPC 0 EA4_HMC2 DRAM botm	77 degrees C / 170 degrees F
FPC 0 EA5_HMC0 Logic die	69 degrees C / 156 degrees F
FPC 0 EA5_HMC0 DRAM botm	66 degrees C / 150 degrees F
FPC 0 EA5_HMC1 Logic die	68 degrees C / 154 degrees F
FPC 0 EA5_HMC1 DRAM botm	65 degrees C / 149 degrees F
FPC 0 EA5_HMC2 Logic die	68 degrees C / 154 degrees F
FPC 0 EA5_HMC2 DRAM botm	65 degrees C / 149 degrees F
Power	
12V SS 1	12259 mV 9841 mA 120642 mW
12V SS 2	12259 mV 21054 mA 258104 mW
12V SS 3	12285 mV 9841 mA 120902 mW
12V SS 4	12232 mV 20968 mA 256496 mW
12V SS 5	12179 mV 14993 mA 182614 mW
VDD 1.0V_A	1000 mV 95375 mA 95375 mW
VDD 1.0V_B	0 mV 0 mA 0 mW
VDD 3.3V	3298 mV 12500 mA 41235 mW
VDD 0.9V	894 mV 3569 mA 3192 mW
ETH SW 1V	980 mV 4500 mA 4410 mW
VDD 1.8V	1809 mV 895 mA 1619 mW
PVCC	951 mV 0 mA 0 mW
PVNN	1009 mV 0 mA 0 mW
V1P0	1006 mV 0 mA 0 mW
V1P1	1070 mV 0 mA 0 mW
V1P3	1351 mV 0 mA 0 mW
VDDQ	1500 mV 0 mA 0 mW
V1P8	1816 mV 0 mA 0 mW
VDD3V3	3296 mV 0 mA 0 mW
V5V0_BIAS	5025 mV 0 mA 0 mW
VDD12V0	12174 mV 0 mA 0 mW
EA0 Core 0.9V	900 mV 40625 mA 36578 mW
EA0 AVDD 1.0V	1000 mV 32500 mA 32500 mW
EA0 HMC Core 0.9V	894 mV 10081 mA 9017 mW
EA0 1.2V	1189 mV 15081 mA 17945 mW
EA01_HMC_VDDM 1.2V	1193 mV -151 mA -180 mW
EA0_XR 0.906V	905 mV 13802 mA 12496 mW
EA1 Core 0.9V	900 mV 41000 mA 36916 mW
EA1 AVDD 1.0V	1000 mV 28000 mA 28000 mW
EA1 HMC Core 0.9V	897 mV 9848 mA 8835 mW
EA1 1.2V	1197 mV 15313 mA 18332 mW
EA0_PLL_1V0	1003 mV 0 mA 0 mW
EA0_1V04	1032 mV 0 mA 0 mW
EA0_2V5	2445 mV 0 mA 0 mW
EA0_1V5	1512 mV 0 mA 0 mW
EA1_PLL_1V0	1000 mV 0 mA 0 mW
EA1_1V04	1051 mV 0 mA 0 mW
EA1_2V5	2516 mV 0 mA 0 mW

EA1_1V5	1503 mV	0 mA	0 mW
EA1_XR 0.906V	908 mV	14151 mA	12850 mW
EA2 Core 0.9V	899 mV	40625 mA	36538 mW
EA2 AVDD 1.0V	1000 mV	27250 mA	27276 mW
EA2 HMC Core 0.9V	897 mV	9616 mA	8627 mW
EA2 1.2V	1193 mV	15779 mA	18832 mW
EA23_HMC_VDDM 1.2V	1197 mV	81 mA	97 mW
EA2_XR 0.906V	908 mV	14848 mA	13484 mW
EA3 Core 0.9V	899 mV	40625 mA	36538 mW
EA3 AVDD 1.0V	1000 mV	28000 mA	28000 mW
EA3 HMC Core 0.9V	897 mV	10546 mA	9461 mW
EA3 1.2V	1197 mV	15895 mA	19028 mW
EA2_PLL_1V0	1025 mV	0 mA	0 mW
EA2_1V04	1048 mV	0 mA	0 mW
EA2_2V5	2516 mV	0 mA	0 mW
EA2_1V5	1500 mV	0 mA	0 mW
EA3_PLL_1V0	1009 mV	0 mA	0 mW
EA3_1V04	1032 mV	0 mA	0 mW
EA3_2V5	2551 mV	0 mA	0 mW
EA3_1V5	1496 mV	0 mA	0 mW
EA3_XR 0.906V	908 mV	15895 mA	14434 mW
EA4 Core 0.9V	900 mV	41000 mA	36916 mW
EA4 AVDD 1.0V	999 mV	31250 mA	31219 mW
EA4 HMC Core 0.9V	894 mV	9965 mA	8913 mW
EA4 1.2V	1197 mV	15779 mA	18889 mW
EA45_HMC_VDDM 1.2V	1197 mV	546 mA	654 mW
EA4_XR 0.906V	908 mV	15197 mA	13801 mW
EA5 Core 0.9V	900 mV	39750 mA	35790 mW
EA5 AVDD 1.0V	1000 mV	28000 mA	28000 mW
EA5 HMC Core 0.9V	897 mV	9965 mA	8940 mW
EA5 1.2V	1197 mV	15546 mA	18610 mW
EA4_PLL_1V0	1003 mV	0 mA	0 mW
EA4_1V04	1041 mV	0 mA	0 mW
EA4_2V5	2541 mV	0 mA	0 mW
EA4_1V5	1506 mV	0 mA	0 mW
EA5_PLL_1V0	1022 mV	0 mA	0 mW
EA5_1V04	1048 mV	0 mA	0 mW
EA5_2V5	2532 mV	0 mA	0 mW
EA5_1V5	1509 mV	0 mA	0 mW
VDD2V5	2503 mV	0 mA	0 mW
VDD1V5	1509 mV	0 mA	0 mW
VDD1V2	1206 mV	0 mA	0 mW
EA5_XR 0.906V	902 mV	14500 mA	13088 mW

FPC 2 status:

State	Online	
FPC 2 Intake-A Temp Sensor	33 degrees C / 91 degrees F	
FPC 2 Exhaust-A Temp Sensor	52 degrees C / 125 degrees F	
FPC 2 Exhaust-B Temp Sensor	50 degrees C / 122 degrees F	
FPC 2 EA0 Temp Sensor	72 degrees C / 161 degrees F	
FPC 2 EA0_XR0 Temp Sensor	76 degrees C / 168 degrees F	
FPC 2 EA0_XR1 Temp Sensor	79 degrees C / 174 degrees F	
FPC 2 EA1 Temp Sensor	64 degrees C / 147 degrees F	
FPC 2 EA1_XR0 Temp Sensor	68 degrees C / 154 degrees F	
FPC 2 EA1_XR1 Temp Sensor	66 degrees C / 150 degrees F	
FPC 2 EA2 Temp Sensor	75 degrees C / 167 degrees F	
FPC 2 EA2_XR0 Temp Sensor	81 degrees C / 177 degrees F	
FPC 2 EA2_XR1 Temp Sensor	81 degrees C / 177 degrees F	
FPC 2 EA3 Temp Sensor	67 degrees C / 152 degrees F	
FPC 2 EA3_XR0 Temp Sensor	69 degrees C / 156 degrees F	
FPC 2 EA3_XR1 Temp Sensor	69 degrees C / 156 degrees F	

FPC 2 EA4 Temp Sensor	76 degrees C / 168 degrees F
FPC 2 EA4_XR0 Temp Sensor	77 degrees C / 170 degrees F
FPC 2 EA4_XR1 Temp Sensor	76 degrees C / 168 degrees F
FPC 2 EA5 Temp Sensor	60 degrees C / 140 degrees F
FPC 2 EA5_XR0 Temp Sensor	65 degrees C / 149 degrees F
FPC 2 EA5_XR1 Temp Sensor	65 degrees C / 149 degrees F
FPC 2 EA0_HMC0 Logic die	84 degrees C / 183 degrees F
FPC 2 EA0_HMC0 DRAM botm	81 degrees C / 177 degrees F
FPC 2 EA0_HMC1 Logic die	86 degrees C / 186 degrees F
FPC 2 EA0_HMC1 DRAM botm	83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 Logic die	83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 DRAM botm	80 degrees C / 176 degrees F
FPC 2 EA1_HMC0 Logic die	76 degrees C / 168 degrees F
FPC 2 EA1_HMC0 DRAM botm	73 degrees C / 163 degrees F
FPC 2 EA1_HMC1 Logic die	77 degrees C / 170 degrees F
FPC 2 EA1_HMC1 DRAM botm	74 degrees C / 165 degrees F
FPC 2 EA1_HMC2 Logic die	76 degrees C / 168 degrees F
FPC 2 EA1_HMC2 DRAM botm	73 degrees C / 163 degrees F
FPC 2 EA2_HMC0 Logic die	87 degrees C / 188 degrees F
FPC 2 EA2_HMC0 DRAM botm	84 degrees C / 183 degrees F
FPC 2 EA2_HMC1 Logic die	89 degrees C / 192 degrees F
FPC 2 EA2_HMC1 DRAM botm	86 degrees C / 186 degrees F
FPC 2 EA2_HMC2 Logic die	88 degrees C / 190 degrees F
FPC 2 EA2_HMC2 DRAM botm	85 degrees C / 185 degrees F
FPC 2 EA3_HMC0 Logic die	80 degrees C / 176 degrees F
FPC 2 EA3_HMC0 DRAM botm	77 degrees C / 170 degrees F
FPC 2 EA3_HMC1 Logic die	81 degrees C / 177 degrees F
FPC 2 EA3_HMC1 DRAM botm	78 degrees C / 172 degrees F
FPC 2 EA3_HMC2 Logic die	81 degrees C / 177 degrees F
FPC 2 EA3_HMC2 DRAM botm	78 degrees C / 172 degrees F
FPC 2 EA4_HMC0 Logic die	88 degrees C / 190 degrees F
FPC 2 EA4_HMC0 DRAM botm	85 degrees C / 185 degrees F
FPC 2 EA4_HMC1 Logic die	90 degrees C / 194 degrees F
FPC 2 EA4_HMC1 DRAM botm	87 degrees C / 188 degrees F
FPC 2 EA4_HMC2 Logic die	81 degrees C / 177 degrees F
FPC 2 EA4_HMC2 DRAM botm	78 degrees C / 172 degrees F
FPC 2 EA5_HMC0 Logic die	73 degrees C / 163 degrees F
FPC 2 EA5_HMC0 DRAM botm	70 degrees C / 158 degrees F
FPC 2 EA5_HMC1 Logic die	69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 DRAM botm	66 degrees C / 150 degrees F
FPC 2 EA5_HMC2 Logic die	73 degrees C / 163 degrees F
FPC 2 EA5_HMC2 DRAM botm	70 degrees C / 158 degrees F

Power

12V SS 1	12285 mV	9408 mA	115582 mW
12V SS 2	12338 mV	20881 mA	257637 mW
12V SS 3	12351 mV	10317 mA	127430 mW
12V SS 4	12285 mV	21054 mA	258660 mW
12V SS 5	12153 mV	13954 mA	169591 mW
VDD 1.0V_A	1000 mV	91000 mA	91000 mW
VDD 1.0V_B	0 mV	0 mA	0 mW
VDD 3.3V	3298 mV	9125 mA	30101 mW
VDD 0.9V	897 mV	3337 mA	2993 mW
ETH SW 1V	0 mV	0 mA	0 mW
VDD 1.8V	1809 mV	1127 mA	2040 mW
PVCC	835 mV	0 mA	0 mW
PVNN	1000 mV	0 mA	0 mW
V1P0	1003 mV	0 mA	0 mW
V1P1	1070 mV	0 mA	0 mW
V1P3	1348 mV	0 mA	0 mW
VDDQ	1493 mV	0 mA	0 mW

V1P8	1806 mV	0 mA	0 mW
VDD3V3	3303 mV	0 mA	0 mW
V5V0_BIAS	5000 mV	0 mA	0 mW
VDD12V0	12116 mV	0 mA	0 mW
EA0 Core 0.9V	900 mV	38875 mA	35002 mW
EA0 AVDD 1.0V	999 mV	31875 mA	31843 mW
EA0 HMC Core 0.9V	894 mV	9034 mA	8081 mW
EA0 1.2V	1197 mV	15430 mA	18471 mW
EA01_HMC_VDDM 1.2V	1200 mV	-267 mA	-321 mW
EA0_XR 0.906V	908 mV	15430 mA	14012 mW
EA1 Core 0.9V	900 mV	38875 mA	35002 mW
EA1 AVDD 1.0V	1000 mV	28250 mA	28250 mW
EA1 HMC Core 0.9V	899 mV	8802 mA	7920 mW
EA1 1.2V	1197 mV	15081 mA	18054 mW
EA0_PLL_1V0	1003 mV	0 mA	0 mW
EA0_1V04	1048 mV	0 mA	0 mW
EA0_2V5	2425 mV	0 mA	0 mW
EA0_1V5	1483 mV	0 mA	0 mW
EA1_PLL_1V0	1019 mV	0 mA	0 mW
EA1_1V04	1019 mV	0 mA	0 mW
EA1_2V5	2490 mV	0 mA	0 mW
EA1_1V5	1480 mV	0 mA	0 mW
EA1_XR 0.906V	908 mV	14965 mA	13590 mW
EA2 Core 0.9V	900 mV	44000 mA	39617 mW
EA2 AVDD 1.0V	1000 mV	28625 mA	28625 mW
EA2 HMC Core 0.9V	891 mV	10546 mA	9404 mW
EA2 1.2V	1200 mV	15313 mA	18387 mW
EA23_HMC_VDDM 1.2V	1193 mV	-267 mA	-319 mW
EA2_XR 0.906V	908 mV	15197 mA	13801 mW
EA3 Core 0.9V	900 mV	39750 mA	35790 mW
EA3 AVDD 1.0V	1000 mV	27750 mA	27750 mW
EA3 HMC Core 0.9V	897 mV	9267 mA	8314 mW
EA3 1.2V	1197 mV	15430 mA	18471 mW
EA2_PLL_1V0	1009 mV	0 mA	0 mW
EA2_1V04	1041 mV	0 mA	0 mW
EA2_2V5	2496 mV	0 mA	0 mW
EA2_1V5	1493 mV	0 mA	0 mW
EA3_PLL_1V0	1003 mV	0 mA	0 mW
EA3_1V04	1041 mV	0 mA	0 mW
EA3_2V5	2490 mV	0 mA	0 mW
EA3_1V5	1500 mV	0 mA	0 mW
EA3_XR 0.906V	908 mV	15081 mA	13695 mW
EA4 Core 0.9V	899 mV	45750 mA	41148 mW
EA4 AVDD 1.0V	1000 mV	32250 mA	32250 mW
EA4 HMC Core 0.9V	897 mV	10779 mA	9670 mW
EA4 1.2V	1193 mV	16011 mA	19110 mW
EA45_HMC_VDDM 1.2V	1200 mV	-267 mA	-321 mW
EA4_XR 0.906V	905 mV	15779 mA	14286 mW
EA5 Core 0.9V	900 mV	38375 mA	34552 mW
EA5 AVDD 1.0V	1000 mV	27750 mA	27777 mW
EA5 HMC Core 0.9V	899 mV	8453 mA	7606 mW
EA5 1.2V	1200 mV	14732 mA	17689 mW
EA4_PLL_1V0	1012 mV	0 mA	0 mW
EA4_1V04	1029 mV	0 mA	0 mW
EA4_2V5	2496 mV	0 mA	0 mW
EA4_1V5	1490 mV	0 mA	0 mW
EA5_PLL_1V0	1003 mV	0 mA	0 mW
EA5_1V04	1032 mV	0 mA	0 mW
EA5_2V5	2503 mV	0 mA	0 mW
EA5_1V5	1480 mV	0 mA	0 mW

VDD2V5	2461 mV	0 mA	0 mW
VDD1V5	1490 mV	0 mA	0 mW
VDD1V2	1212 mV	0 mA	0 mW
EA5_XR 0.906V	910 mV	13686 mA	12466 mW
FPC 3 status:			
State	Online		
FPC 3 Intake-A Temp Sensor	30 degrees C / 86 degrees F		
FPC 3 Exhaust-A Temp Sensor	48 degrees C / 118 degrees F		
FPC 3 Exhaust-B Temp Sensor	45 degrees C / 113 degrees F		
FPC 3 EA0 Temp Sensor	60 degrees C / 140 degrees F		
FPC 3 EA0_XR0 Temp Sensor	65 degrees C / 149 degrees F		
FPC 3 EA0_XR1 Temp Sensor	67 degrees C / 152 degrees F		
FPC 3 EA1 Temp Sensor	54 degrees C / 129 degrees F		
FPC 3 EA1_XR0 Temp Sensor	60 degrees C / 140 degrees F		
FPC 3 EA1_XR1 Temp Sensor	58 degrees C / 136 degrees F		
FPC 3 EA2 Temp Sensor	62 degrees C / 143 degrees F		
FPC 3 EA2_XR0 Temp Sensor	67 degrees C / 152 degrees F		
FPC 3 EA2_XR1 Temp Sensor	67 degrees C / 152 degrees F		
FPC 3 EA3 Temp Sensor	55 degrees C / 131 degrees F		
FPC 3 EA3_XR0 Temp Sensor	57 degrees C / 134 degrees F		
FPC 3 EA3_XR1 Temp Sensor	57 degrees C / 134 degrees F		
FPC 3 EA4 Temp Sensor	69 degrees C / 156 degrees F		
FPC 3 EA4_XR0 Temp Sensor	71 degrees C / 159 degrees F		
FPC 3 EA4_XR1 Temp Sensor	70 degrees C / 158 degrees F		
FPC 3 EA5 Temp Sensor	55 degrees C / 131 degrees F		
FPC 3 EA5_XR0 Temp Sensor	58 degrees C / 136 degrees F		
FPC 3 EA5_XR1 Temp Sensor	59 degrees C / 138 degrees F		
FPC 3 EA0_HMC0 Logic die	69 degrees C / 156 degrees F		
FPC 3 EA0_HMC0 DRAM botm	66 degrees C / 150 degrees F		
FPC 3 EA0_HMC1 Logic die	70 degrees C / 158 degrees F		
FPC 3 EA0_HMC1 DRAM botm	67 degrees C / 152 degrees F		
FPC 3 EA0_HMC2 Logic die	70 degrees C / 158 degrees F		
FPC 3 EA0_HMC2 DRAM botm	67 degrees C / 152 degrees F		
FPC 3 EA1_HMC0 Logic die	68 degrees C / 154 degrees F		
FPC 3 EA1_HMC0 DRAM botm	65 degrees C / 149 degrees F		
FPC 3 EA1_HMC1 Logic die	65 degrees C / 149 degrees F		
FPC 3 EA1_HMC1 DRAM botm	62 degrees C / 143 degrees F		
FPC 3 EA1_HMC2 Logic die	64 degrees C / 147 degrees F		
FPC 3 EA1_HMC2 DRAM botm	61 degrees C / 141 degrees F		
FPC 3 EA2_HMC0 Logic die	74 degrees C / 165 degrees F		
FPC 3 EA2_HMC0 DRAM botm	71 degrees C / 159 degrees F		
FPC 3 EA2_HMC1 Logic die	77 degrees C / 170 degrees F		
FPC 3 EA2_HMC1 DRAM botm	74 degrees C / 165 degrees F		
FPC 3 EA2_HMC2 Logic die	74 degrees C / 165 degrees F		
FPC 3 EA2_HMC2 DRAM botm	71 degrees C / 159 degrees F		
FPC 3 EA3_HMC0 Logic die	70 degrees C / 158 degrees F		
FPC 3 EA3_HMC0 DRAM botm	67 degrees C / 152 degrees F		
FPC 3 EA3_HMC1 Logic die	68 degrees C / 154 degrees F		
FPC 3 EA3_HMC1 DRAM botm	65 degrees C / 149 degrees F		
FPC 3 EA3_HMC2 Logic die	68 degrees C / 154 degrees F		
FPC 3 EA3_HMC2 DRAM botm	65 degrees C / 149 degrees F		
FPC 3 EA4_HMC0 Logic die	82 degrees C / 179 degrees F		
FPC 3 EA4_HMC0 DRAM botm	79 degrees C / 174 degrees F		
FPC 3 EA4_HMC1 Logic die	80 degrees C / 176 degrees F		
FPC 3 EA4_HMC1 DRAM botm	77 degrees C / 170 degrees F		
FPC 3 EA4_HMC2 Logic die	81 degrees C / 177 degrees F		
FPC 3 EA4_HMC2 DRAM botm	78 degrees C / 172 degrees F		
FPC 3 EA5_HMC0 Logic die	69 degrees C / 156 degrees F		
FPC 3 EA5_HMC0 DRAM botm	66 degrees C / 150 degrees F		
FPC 3 EA5_HMC1 Logic die	70 degrees C / 158 degrees F		


```

FPC 3 EA5_HMC1 DRAM botm      67 degrees C / 152 degrees F
FPC 3 EA5_HMC2 Logic die      69 degrees C / 156 degrees F
FPC 3 EA5_HMC2 DRAM botm      66 degrees C / 150 degrees F
Power
    12V SS 1      12259 mV      9538 mA      116927 mW
    12V SS 2      12259 mV      20491 mA      251202 mW
    12V SS 3      12298 mV      9711 mA      119433 mW
    12V SS 4      12219 mV      20491 mA      250391 mW
    12V SS 5      12206 mV      10447 mA      127520 mW
    VDD 1.0V_A      1000 mV      42250 mA      42291 mW
    VDD 1.0V_B      996 mV      8918 mA      8890 mW
    VDD 3.3V      3301 mV      10375 mA      34255 mW
    VDD 0.9V      897 mV      3569 mA      3202 mW
    ETH SW 1V      983 mV      4267 mA      4195 mW
    VDD 1.8V      1812 mV      1825 mA      3309 mW
    PVCC      974 mV      0 mA      0 mW
    PVNN      1003 mV      0 mA      0 mW
    V1P0      1003 mV      0 mA      0 mW
    V1P1      1070 mV      0 mA      0 mW
    V1P3      1351 mV      0 mA      0 mW
    VDDQ      1496 mV      0 mA      0 mW
    V1P8      1809 mV      0 mA      0 mW
    VDD3V3      3309 mV      0 mA      0 mW
    V5V0_BIAS      4987 mV      0 mA      0 mW
    VDD12V0      12212 mV      0 mA      0 mW
    EA0 Core 0.9V      900 mV      38125 mA      34327 mW
    EA0 AVDD 1.0V      999 mV      31125 mA      31094 mW
    EA0 HMC Core 0.9V      897 mV      9500 mA      8522 mW
    EA0 1.2V      1193 mV      15430 mA      18416 mW
    EA01_HMC_VDDM 1.2V      1193 mV      313 mA      374 mW
    EA0_XR 0.906V      913 mV      14965 mA      13671 mW
    EA1 Core 0.9V      900 mV      39750 mA      35790 mW
    EA1 AVDD 1.0V      1000 mV      26000 mA      26000 mW
    EA1 HMC Core 0.9V      897 mV      8918 mA      8001 mW
    EA1 1.2V      1200 mV      15779 mA      18946 mW
    EA0_PLL_1V0      1003 mV      0 mA      0 mW
    EA0_1V04      1019 mV      0 mA      0 mW
    EA0_2V5      2448 mV      0 mA      0 mW
    EA0_1V5      1470 mV      0 mA      0 mW
    EA1_PLL_1V0      1016 mV      0 mA      0 mW
    EA1_1V04      1035 mV      0 mA      0 mW
    EA1_2V5      2506 mV      0 mA      0 mW
    EA1_1V5      1483 mV      0 mA      0 mW
    EA1_XR 0.906V      908 mV      13918 mA      12639 mW
    EA2 Core 0.9V      900 mV      38625 mA      34777 mW
    EA2 AVDD 1.0V      1000 mV      26375 mA      26400 mW
    EA2 HMC Core 0.9V      897 mV      9383 mA      8418 mW
    EA2 1.2V      1200 mV      15779 mA      18946 mW
    EA23_HMC_VDDM 1.2V      1193 mV      81 mA      97 mW
    EA2_XR 0.906V      908 mV      13918 mA      12639 mW
    EA3 Core 0.9V      899 mV      40250 mA      36201 mW
    EA3 AVDD 1.0V      1000 mV      26750 mA      26776 mW
    EA3 HMC Core 0.9V      894 mV      9267 mA      8289 mW
    EA3 1.2V      1197 mV      16127 mA      19306 mW
    EA2_PLL_1V0      993 mV      0 mA      0 mW
    EA2_1V04      1045 mV      0 mA      0 mW
    EA2_2V5      2474 mV      0 mA      0 mW
    EA2_1V5      1490 mV      0 mA      0 mW
    EA3_PLL_1V0      980 mV      0 mA      0 mW
    EA3_1V04      1032 mV      0 mA      0 mW

```

EA3_2V5	2506 mV	0 mA	0 mW
EA3_1V5	1474 mV	0 mA	0 mW
EA3_XR 0.906V	910 mV	14732 mA	13419 mW
EA4 Core 0.9V	900 mV	42500 mA	38266 mW
EA4 AVDD 1.0V	1000 mV	32250 mA	32281 mW
EA4 HMC Core 0.9V	899 mV	10081 mA	9071 mW
EA4 1.2V	1193 mV	16360 mA	19526 mW
EA45_HMC_VDDM 1.2V	1193 mV	662 mA	791 mW
EA4_XR 0.906V	908 mV	15430 mA	14012 mW
EA5 Core 0.9V	899 mV	37000 mA	33278 mW
EA5 AVDD 1.0V	1000 mV	26125 mA	26150 mW
EA5 HMC Core 0.9V	897 mV	9267 mA	8314 mW
EA5 1.2V	1197 mV	15662 mA	18750 mW
EA4_PLL_1V0	1000 mV	0 mA	0 mW
EA4_1V04	1029 mV	0 mA	0 mW
EA4_2V5	2487 mV	0 mA	0 mW
EA4_1V5	1496 mV	0 mA	0 mW
EA5_PLL_1V0	1009 mV	0 mA	0 mW
EA5_1V04	1032 mV	0 mA	0 mW
EA5_2V5	2503 mV	0 mA	0 mW
EA5_1V5	1496 mV	0 mA	0 mW
VDD2V5	2483 mV	0 mA	0 mW
VDD1V5	1470 mV	0 mA	0 mW
VDD1V2	1203 mV	0 mA	0 mW
EA5_XR 0.906V	908 mV	14500 mA	13167 mW

show chassis environment fpc (T320, T640, and T1600 Routers)

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
  State                               Online
  Temperature Top                     42 degrees C / 107 degrees F
  Temperature Bottom                  36 degrees C / 96 degrees F
  Temperature MMB1                    39 degrees C / 102 degrees F
  Power:
    1.8 V                             1959 mV
    2.5 V                             2495 mV
    3.3 V                             3344 mV
    5.0 V                             5047 mV
    1.8 V bias                         1787 mV
    3.3 V bias                         3291 mV
    5.0 V bias                         4998 mV
    8.0 V bias                         7343 mV
  BUS Revision                        40
FPC 1 status:
  State                               Online
  Temperature Top                     42 degrees C / 107 degrees F
  Temperature Bottom                  39 degrees C / 102 degrees F
  Temperature MMB1                    40 degrees C / 104 degrees F
  Power:
    1.8 V                             1956 mV
    2.5 V                             2498 mV
    3.3 V                             3340 mV
    5.0 V                             5023 mV
    1.8 V bias                         1782 mV
    3.3 V bias                         3277 mV
    5.0 V bias                         4989 mV
    8.0 V bias                         7289 mV
  BUS Revision                        40
```

```
FPC 2 status:
State                               Online
Temperature Top                     43 degrees C / 109 degrees F
Temperature Bottom                   39 degrees C / 102 degrees F
Temperature MMB1                     41 degrees C / 105 degrees F
Power:
  1.8 V                             1963 mV
  2.5 V                             2503 mV
  3.3 V                             3340 mV
  5.0 V                             5042 mV
  1.8 V bias                         1797 mV
  3.3 V bias                         3311 mV
  5.0 V bias                         5013 mV
  8.0 V bias                         7221 mV
BUS Revision                         40
```

show chassis environment fpc (T4000 Router)

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
State                               Online
Fan Intake                          34 degrees C / 93 degrees F
Fan Exhaust                         48 degrees C / 118 degrees F
PMB                                 47 degrees C / 116 degrees F
LMB0                                50 degrees C / 122 degrees F
LMB1                                41 degrees C / 105 degrees F
LMB2                                35 degrees C / 95 degrees F
PFE1 LU2                            46 degrees C / 114 degrees F
PFE1 LU0                            41 degrees C / 105 degrees F
PFE0 LU0                            57 degrees C / 134 degrees F
XF1                                 47 degrees C / 116 degrees F
XF0                                 52 degrees C / 125 degrees F
XM1                                 41 degrees C / 105 degrees F
XM0                                 50 degrees C / 122 degrees F
PFE0 LU1                            56 degrees C / 132 degrees F
PFE0 LU2                            45 degrees C / 113 degrees F
PFE1 LU1                            37 degrees C / 98 degrees F
Power 1
  1.0 V                             991 mV
  1.2 V bias                         1195 mV
  1.8 V                             1788 mV
  2.5 V                             2483 mV
  3.3 V                             3289 mV
  3.3 V bias                         3299 mV
  12.0 V A                           10608 mV
  12.0 V B                           10637 mV
Power 2
  0.9 V                             881 mV
  0.9 V PFE0                         916 mV
  0.9 V PFE1                         903 mV
  1.0 V PFE0                         1012 mV
  1.0 V PFE1                         1002 mV
  1.1 V                             1095 mV
  1.5 V_0                           1494 mV
  1.5 V_1                           1479 mV
Power 3
  1.0 V PFE0                         1000 mV
  1.0 V PFE1                         1002 mV
  1.0 V PFE0 *                       995 mV
```

1.0 V PFE1 *	995 mV
1.8 V PFE 0	1788 mV
1.8 V PFE 1	1789 mV
2.5 V	2482 mV
12.0 V	11614 mV
Power 4	
1.0 V PFE0 LU0	1003 mV
1.0 V PFE1 LU0	1003 mV
1.0 V PFE1 LU2	1004 mV
1.0 V PFE0 LU0 *	995 mV
1.0 V PFE1 LU0 *	998 mV
1.0 V PFE1 LU2 *	996 mV
12.0 V	11643 mV
12.0 V C	11711 mV
Power (Base/PMB/MMB)	
LMB0 VDD2V5	2488 mV
LMB0 VDD1V8	1788 mV
LMB0 VDD1V5	1496 mV
LMB0 PFE0 LU0 AVDD1V0	1002 mV
LMB0 PFE0 LU0 VDD1V0	1000 mV
LMB0 VDD12V0	10752 mV
LMB1 VDD2V5	2472 mV
LMB1 VDD1V8	1792 mV
LMB1 VDD1V5	1480 mV
LMB1 PFE0 LU2 AVDD1V0	994 mV
LMB1 PFE0 LU2 VDD1V0	1002 mV
LMB1 VDD12V0	10800 mV
LMB2 VDD2V5	2472 mV
LMB2 VDD1V8	1792 mV
LMB2 VDD1V5	1486 mV
LMB2 PFE1 LU1 AVDD1V0	996 mV
LMB2 PFE1 LU1 VDD1V0	998 mV
LMB2 VDD12V0	10704 mV
PMB 1.05v	1049 mV
PMB 1.5v	1500 mV
PMB 2.5v	2500 mV
PMB 3.3v	3299 mV
Bus Revision	113
FPC 3 status:	
State	Online
Fan Intake	37 degrees C / 98 degrees F
Fan Exhaust	51 degrees C / 123 degrees F
PMB	43 degrees C / 109 degrees F
LMB0	57 degrees C / 134 degrees F
LMB1	54 degrees C / 129 degrees F
LMB2	38 degrees C / 100 degrees F
PFE1 LU2	63 degrees C / 145 degrees F
PFE1 LU0	45 degrees C / 113 degrees F
PFE0 LU0	69 degrees C / 156 degrees F
XF1	62 degrees C / 143 degrees F
XF0	63 degrees C / 145 degrees F
XM1	43 degrees C / 109 degrees F
XM0	67 degrees C / 152 degrees F
PFE0 LU1	63 degrees C / 145 degrees F
PFE0 LU2	66 degrees C / 150 degrees F
PFE1 LU1	41 degrees C / 105 degrees F
Power 1	
1.0 V	1002 mV
1.2 V bias	1201 mV
1.8 V	1785 mV

```

2.5 V                2485 mV
3.3 V                3288 mV
3.3 V bias           3285 mV
12.0 V A             10412 mV
12.0 V B             10515 mV
Power 2
0.9 V                882 mV
0.9 V PFE0           920 mV
0.9 V PFE1           905 mV
1.0 V PFE0           1015 mV
1.0 V PFE1           1001 mV
1.1 V                1094 mV
1.5 V_0              1495 mV
1.5 V_1              1478 mV
Power 3
0.92 V PFE1          998 mV
1.0 V PFE0            997 mV
1.0 V PFE0 *          992 mV
1.0 V PFE1 *          991 mV
1.8 V PFE 0           1780 mV
1.8 V PFE 1           1797 mV
2.5 V                2492 mV
12.0 V               11604 mV
Power 4
1.0 V PFE0 LU0        1003 mV
1.0 V PFE1 LU0        1004 mV
1.0 V PFE1 LU2        1003 mV
1.0 V PFE0 LU0 *      1000 mV
1.0 V PFE1 LU0 *      1001 mV
1.0 V PFE1 LU2 *      1003 mV
12.0 V               11653 mV
12.0 V C              11672 mV
Power (Base/PMB/MMB)
LMB0 VDD2V5           2512 mV
LMB0 VDD1V8           1790 mV
LMB0 VDD1V5           1500 mV
LMB0 PFE0 LU0 AVDD1V0 1004 mV
LMB0 PFE0 LU0 VDD1V0  1002 mV
LMB0 VDD12V0          10608 mV
LMB1 VDD2V5           2472 mV
LMB1 VDD1V8           1788 mV
LMB1 VDD1V5           1480 mV
LMB1 PFE0 LU2 AVDD1V0 1000 mV
LMB1 PFE0 LU2 VDD1V0  1004 mV
LMB1 VDD12V0          10672 mV
LMB2 VDD2V5           2488 mV
LMB2 VDD1V8           1798 mV
LMB2 VDD1V5           1494 mV
LMB2 PFE1 LU1 AVDD1V0 1000 mV
LMB2 PFE1 LU1 VDD1V0  1004 mV
LMB2 VDD12V0          10528 mV
PMB 1.05v             1050 mV
PMB 1.5v              1500 mV
PMB 2.5v              2499 mV
PMB 3.3v              3299 mV
Bus Revision          113
FPC 5 status:
State                 Online
Temperature Top        39 degrees C / 102 degrees F
Temperature Bottom     38 degrees C / 100 degrees F

```

Power	
1.8 V	1804 mV
1.8 V bias	1802 mV
3.3 V	3294 mV
3.3 V bias	3277 mV
5.0 V bias	5008 mV
5.0 V TOP	5067 mV
8.0 V bias	6642 mV
Power (Base/PMB/MMB)	
1.2 V	1202 mV
1.5 V	1504 mV
5.0 V BOT	5079 mV
12.0 V TOP Base	11848 mV
12.0 V BOT Base	11780 mV
1.1 V PMB	1111 mV
1.2 V PMB	1189 mV
1.5 V PMB	1494 mV
1.8 V PMB	1819 mV
2.5 V PMB	2503 mV
3.3 V PMB	3294 mV
5.0 V PMB	5035 mV
12.0 V PMB	11788 mV
0.75 MMB TOP	766 mV
1.5 V MMB TOP	1484 mV
1.8 V MMB TOP	1772 mV
2.5 V MMB TOP	2485 mV
1.2 V MMB TOP	1137 mV
5.0 V MMB TOP	4946 mV
12.0 V MMB TOP	11772 mV
3.3 V MMB TOP	3289 mV
0.75 MMB BOT	759 mV
1.5 V MMB BOT	1482 mV
1.8 V MMB BOT	1792 mV
2.5 V MMB BOT	2490 mV
1.2 V MMB BOT	1145 mV
5.0 V MMB BOT	4922 mV
12.0 V MMB BOT	11625 mV
3.3 V MMB BOT	3282 mV
APS 00	2495 mV
APS 01	3308 mV
APS 02	3301 mV
5.0 V PIC 0	4967 mV
APS 10	2512 mV
APS 11	3316 mV
APS 12	3304 mV
5.0 V PIC 1	5081 mV
Bus Revision	49
FPC 6 status:	
State	Online
Fan Intake	34 degrees C / 93 degrees F
Fan Exhaust	49 degrees C / 120 degrees F
PMB	40 degrees C / 104 degrees F
LMB0	60 degrees C / 140 degrees F
LMB1	58 degrees C / 136 degrees F
LMB2	40 degrees C / 104 degrees F
PFE1 LU2	69 degrees C / 156 degrees F
PFE1 LU0	45 degrees C / 113 degrees F
PFE0 LU0	71 degrees C / 159 degrees F
XF1	58 degrees C / 136 degrees F
XF0	65 degrees C / 149 degrees F

```

XM1                                40 degrees C / 104 degrees F
XM0                                66 degrees C / 150 degrees F
PFE0 LU1                           69 degrees C / 156 degrees F
PFE0 LU2                           68 degrees C / 154 degrees F
PFE1 LU1                           42 degrees C / 107 degrees F
Power 1
  1.0 V                            998 mV
  1.2 V bias                       1191 mV
  1.8 V                            1781 mV
  2.5 V                            2487 mV
  3.3 V                            3302 mV
  3.3 V bias                       3300 mV
  12.0 V A                         10388 mV
  12.0 V B                         10388 mV
Power 2
  0.9 V                            902 mV
  0.9 V PFE0                       921 mV
  0.9 V PFE1                       907 mV
  1.0 V PFE0                       996 mV
  1.0 V PFE1                       974 mV
  1.1 V                            1095 mV
  1.5 V_0                          1495 mV
  1.5 V_1                          1478 mV
Power 3
  1.0 V PFE0                       997 mV
  1.0 V PFE1                       998 mV
  1.0 V PFE0 *                     993 mV
  1.0 V PFE1 *                     991 mV
  1.8 V PFE 0                      1796 mV
  1.8 V PFE 1                      1789 mV
  2.5 V                            2465 mV
  12.0 V                           11609 mV
Power 4
  1.0 V PFE0 LU0                   1003 mV
  1.0 V PFE1 LU0                   1006 mV
  1.0 V PFE1 LU2                   1002 mV
  1.0 V PFE0 LU0 *                 1000 mV
  1.0 V PFE1 LU0 *                 998 mV
  1.0 V PFE1 LU2 *                 998 mV
  12.0 V                           11638 mV
  12.0 V C                         11702 mV
Power (Base/PMB/MMB)
  LMB0 VDD2V5                      2484 mV
  LMB0 VDD1V8                      1780 mV
  LMB0 VDD1V5                      1496 mV
  LMB0 PFE0 LU0 AVDD1V0            998 mV
  LMB0 PFE0 LU0 VDD1V0             1004 mV
  LMB0 VDD12V0                    10528 mV
  LMB1 VDD2V5                      2472 mV
  LMB1 VDD1V8                      1776 mV
  LMB1 VDD1V5                      1474 mV
  LMB1 PFE0 LU2 AVDD1V0            994 mV
  LMB1 PFE0 LU2 VDD1V0             1004 mV
  LMB1 VDD12V0                    10544 mV
  LMB2 VDD2V5                      2476 mV
  LMB2 VDD1V8                      1790 mV
  LMB2 VDD1V5                      1492 mV
  LMB2 PFE1 LU1 AVDD1V0            996 mV
  LMB2 PFE1 LU1 VDD1V0             1010 mV
  LMB2 VDD12V0                    10528 mV

```

PMB 1.05v	1050 mV
PMB 1.5v	1499 mV
PMB 2.5v	2500 mV
PMB 3.3v	3300 mV
Bus Revision	80

show chassis environment fpc lcc (TX Matrix Router)

```
user@host> show chassis environment fpc lcc 0
```

```
lcc0-re0:
```

```
-----
```

```
FPC 1 status:
```

State	Online
Temperature Top	30 degrees C / 86 degrees F
Temperature Bottom	25 degrees C / 77 degrees F
Temperature MMB0	Absent
Temperature MMB1	27 degrees C / 80 degrees F
Power:	
1.8 V	1813 mV
2.5 V	2504 mV
3.3 V	3338 mV
5.0 V	5037 mV
1.8 V bias	1797 mV
3.3 V bias	3301 mV
5.0 V bias	5013 mV
8.0 V bias	7345 mV
BUS Revision	40

```
FPC 2 status:
```

State	Online
Temperature Top	37 degrees C / 98 degrees F
Temperature Bottom	26 degrees C / 78 degrees F
Temperature MMB0	32 degrees C / 89 degrees F
Temperature MMB1	27 degrees C / 80 degrees F
Power:	
1.8 V	1791 mV
2.5 V	2517 mV
3.3 V	3308 mV
5.0 V	5052 mV
1.8 V bias	1797 mV
3.3 V bias	3289 mV
5.0 V bias	4991 mV
8.0 V bias	7477 mV
BUS Revision	40

show chassis environment fpc lcc (TX Matrix Plus Router)

```
user@host> show chassis environment fpc lcc 0
```

```
lcc0-re0:
```

```
-----
```

```
FPC 1 status:
```

State	Online
Temperature Top	46 degrees C / 114 degrees F
Temperature Bottom	47 degrees C / 116 degrees F
Power	
1.8 V	1788 mV
1.8 V bias	1787 mV
3.3 V	3321 mV

3.3 V bias	3306 mV
5.0 V bias	5018 mV
5.0 V TOP	5037 mV
8.0 V bias	7223 mV
Power (Base/PMB/MMB)	
1.2 V	1205 mV
1.5 V	1503 mV
5.0 V BOT	5084 mV
12.0 V TOP Base	11775 mV
12.0 V BOT Base	11794 mV
1.1 V PMB	1108 mV
1.2 V PMB	1196 mV
1.5 V PMB	1499 mV
1.8 V PMB	1811 mV
2.5 V PMB	2515 mV
3.3 V PMB	3318 mV
5.0 V PMB	5030 mV
12.0 V PMB	11832 mV
0.75 MMB TOP	752 mV
1.5 V MMB TOP	1489 mV
1.8 V MMB TOP	1782 mV
2.5 V MMB TOP	2498 mV
1.2 V MMB TOP	1155 mV
5.0 V MMB TOP	4902 mV
12.0 V MMB TOP	11721 mV
3.3 V MMB TOP	3316 mV
0.75 MMB BOT	754 mV
1.5 V MMB BOT	1482 mV
1.8 V MMB BOT	1758 mV
2.5 V MMB BOT	2488 mV
1.2 V MMB BOT	1157 mV
5.0 V MMB BOT	4962 mV
12.0 V MMB BOT	11691 mV
3.3 V MMB BOT	3308 mV
APS 00	1484 mV
APS 01	2503 mV
APS 02	3313 mV
5.0 V PIC 0	5025 mV
APS 10	1501 mV
APS 11	2466 mV
APS 12	3311 mV
5.0 V PIC 1	5081 mV
Bus Revision	49

show chassis environment fpc (QFX Series and OCX Series)

```
user@switch> show chassis environment fpc 0
```

```
FPC 0 status:
State          Online
Temperature    42 degrees C / 107 degrees F
```

show chassis environment fpc interconnect-device (QFabric Systems)

```
user@switch> show chassis environment fpc interconnect-device interconnect1 0
```

```
FC 0 FPC 0 status:
State          Online
Left Intake Temperature 24 degrees C / 75 degrees F
```

```

Right Intake Temperature 24 degrees C / 75 degrees F
Left Exhaust Temperature 27 degrees C / 80 degrees F
Right Exhaust Temperature 27 degrees C / 80 degrees F
Power
  BIAS 3V3                3330 mV
  VDD 3V3                 3300 mV
  VDD 2V5                 2502 mV
  VDD 1V5                 1496 mV
  VDD 1V2                 1194 mV
  VDD 1V0                 1000 mV
  SW0 VDD 1V0             1020 mV
  SW0 CVDD 1V025          1032 mV
  SW1 VDD 1V0             1022 mV
  SW1 CVDD 1V025          1030 mV
  VDD 12V0 DIV3_33        3414 mV

```

show chassis environment fpc 5(PTX3000 Packet Transport Router)

```
user@host> show chassis environment fpc 5
```

```

FPC 5 status:
State                Online
Intake Temperature   31 degrees C / 87 degrees F
Exhaust Temperature  41 degrees C / 105 degrees F
Power
  FPC 12.0v          12221 mV
  FPC VCC 0.5-1.3v   1640 mV
  FPC VNN 0.5-1.3v   1640 mV
  FPC 1.0v           1640 mV
  FPC 1.1v           1640 mV
  FPC 1.35v          1640 mV
  FPC VDDQ 1.5v      1640 mV
  FPC 1.8v           1640 mV
  FPC 3.3v           3280 mV
  FPC 5.0v bias      5143 mV
  FPC 5.0v usb       5143 mV
  FPC VCC 12.0v      12289 mV
  FPC Vref 3.3v      3280 mV
  MAIN 12.0v-i       2265 mA

```

show chassis environment fpc 0 (PTX5000 Packet Transport Router)

```
user@host> show chassis environment fpc 0
```

```

FPC 0 status:
State                Online
PMB Temperature      35 degrees C / 95 degrees F
Intake Temperature    33 degrees C / 91 degrees F
Exhaust A Temperature 51 degrees C / 123 degrees F
Exhaust B Temperature 43 degrees C / 109 degrees F
TL0 Temperature       48 degrees C / 118 degrees F
TQ0 Temperature       53 degrees C / 127 degrees F
TL1 Temperature       56 degrees C / 132 degrees F
TQ1 Temperature       58 degrees C / 136 degrees F
TL2 Temperature       55 degrees C / 131 degrees F
TQ2 Temperature       57 degrees C / 134 degrees F
TL3 Temperature       59 degrees C / 138 degrees F
TQ3 Temperature       59 degrees C / 138 degrees F
Power

```

PMB	1.05v	1049 mV
PMB	1.5v	1500 mV
PMB	2.5v	2500 mV
PMB	3.3v	3299 mV
PFE0	1.5v	1500 mV
PFE0	1.0v	999 mV
TQ0	0.9v	900 mV
TL0	0.9v	900 mV
PFE1	1.5v	1499 mV
PFE1	1.0v	999 mV
TQ1	0.9v	899 mV
TL1	0.9v	900 mV
PFE2	1.5v	1500 mV
PFE2	1.0v	1000 mV
TQ2	0.9v	900 mV
TL2	0.9v	900 mV
PFE3	1.5v	1499 mV
PFE3	1.0v	1000 mV
TQ3	0.9v	900 mV
TL3	0.9v	900 mV
Bias	3.3v	3327 mV
FPC	3.3v	3300 mV
FPC	2.5v	2500 mV
SAM	0.9v	900 mV
A	12.0v	2014 mV
B	12.0v	2030 mV

show chassis environment fpc 07 (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis environment fpc 07
```

```
FPC 7 status:
State Online
PMB TEMPO Temperature 32 degrees C / 89 degrees F
PMB TEMP1 Temperature 28 degrees C / 82 degrees F
PMB CPU Temperature 46 degrees C / 114 degrees F
Intake Temperature 35 degrees C / 95 degrees F
Exhaust A Temperature 55 degrees C / 131 degrees F
Exhaust B Temperature 54 degrees C / 129 degrees F
TL5 Temperature 59 degrees C / 138 degrees F
TQ5 Temperature 57 degrees C / 134 degrees F
TL6 Temperature 57 degrees C / 134 degrees F
TQ6 Temperature 51 degrees C / 123 degrees F
TL1 Temperature 76 degrees C / 168 degrees F
TQ1 Temperature 58 degrees C / 136 degrees F
TL2 Temperature 75 degrees C / 167 degrees F
TQ2 Temperature 57 degrees C / 134 degrees F
TL4 Temperature 52 degrees C / 125 degrees F
TQ4 Temperature 66 degrees C / 150 degrees F
TL7 Temperature 52 degrees C / 125 degrees F
TQ7 Temperature 60 degrees C / 140 degrees F
TL0 Temperature 72 degrees C / 161 degrees F
TQ0 Temperature 73 degrees C / 163 degrees F
TL3 Temperature 64 degrees C / 147 degrees F
TQ3 Temperature 70 degrees C / 158 degrees F
Power
PMB 1.05v 1049 mV
PMB 3.3v 3299 mV
PMB 1.1v-a 1100 mV
PMB 1.5v 1499 mV
```

PMB	1.1v-b	1100 mV
Base	3.3v	3300 mV
FPC Base	2.5v	2499 mV
TL1	0.9v	897 mV
TQ1	0.9v	897 mV
PFE1	1.0v	999 mV
PFE1	1.5v	1499 mV
TL2	0.9v	897 mV
TQ2	0.9v	897 mV
PFE2	1.0v	999 mV
PFE2	1.5v	1499 mV
FPC Base	1.0v	1000 mV
FPC Base	1.2v	1199 mV
TL5	0.9v	898 mV
TQ5	0.9v	898 mV
PFE5	1.0v	1000 mV
PFE5	1.5v	1500 mV
TL6	0.9v	897 mV
TQ6	0.9v	897 mV
PFE6	1.0v	1000 mV
PFE6	1.5v	1499 mV
Mezz Base	2.5v	2500 mV
TL0	0.9v	896 mV
TQ0	0.9v	896 mV
PFE0	1.0v	999 mV
PFE0	1.5v	1499 mV

show chassis environment fpc (PTX10008 router)

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
State                               Online
FPC 0 Intake-A Temp Sensor 37 degrees C / 98 degrees F
FPC 0 Intake-B Temp Sensor 34 degrees C / 93 degrees F
FPC 0 Exhaust-A Temp Sensor37 degrees C / 98 degrees F
FPC 0 Exhaust-B Temp Sensor38 degrees C / 100 degrees F
FPC 0 Exhaust-C Temp Sensor40 degrees C / 104 degrees F
FPC 0 PE0 Temp Sensor        41 degrees C / 105 degrees F
FPC 0 PE1 Temp Sensor        42 degrees C / 107 degrees F
FPC 0 PE2 Temp Sensor        44 degrees C / 111 degrees F
FPC 0 LCPU Temp Sensor       40 degrees C / 104 degrees F
Power
  PE0 Core 0.9V                872 mV   28777 mA   25146 mW
  PE0 HMC0 Core 0.9V           899 mV   10359 mA   9328 mW
  PE1 Core 0.9V                896 mV   29476 mA   26414 mW
  PE1 HMC0 Core 0.9V           899 mV   10218 mA   9187 mW
  PE2 Core 0.9V                872 mV   28839 mA   25199 mW
  PE2 HMC0 Core 0.9V           900 mV   10296 mA   9265 mW
  PE0 Serdes 1.0V              1020 mV  29000 mA   29593 mW
  PE1 Serdes 1.0V              1019 mV  29109 mA   29718 mW
  PE2 Serdes 1.0V              1019 mV  28484 mA   29078 mW
  LCPU Platform 1.1V           1099 mV   3515 mA   3867 mW
  LCPU Core 1.0V               1000 mV   8750 mA   8703 mW
  PHY VDD B 1.0V               1000 mV  17062 mA  17031 mW
  PHY VDD A 1.0V               999 mV   15640 mA  15625 mW
  BCM Core 1.0V                999 mV   7054 mA   7054 mW
  BCM PEX 1.0V                 999 mV   3562 mA   3558 mW
  HMC Core 1.2V                1199 mV   1280 mA   1513 mW
  HMC Serdes 1.2V              1199 mV  32937 mA  39500 mW
```

VDD 1.5V	1500 mV	2824 mA	4234 mW
VDD 2.5V	2449 mV	3812 mA	9343 mW
VDD 3.3V	3299 mV	5085 mA	16796 mW
12V	12259 mV	29609 mA	368196 mW

FPC 1 status:

State	Online
FPC 1 Intake-A Temp Sensor	37 degrees C / 98 degrees F
FPC 1 Intake-B Temp Sensor	34 degrees C / 93 degrees F
FPC 1 Exhaust-A Temp Sensor	38 degrees C / 100 degrees F
FPC 1 Exhaust-B Temp Sensor	38 degrees C / 100 degrees F
FPC 1 Exhaust-C Temp Sensor	40 degrees C / 104 degrees F
FPC 1 PE0 Temp Sensor	41 degrees C / 105 degrees F
FPC 1 PE1 Temp Sensor	42 degrees C / 107 degrees F
FPC 1 PE2 Temp Sensor	44 degrees C / 111 degrees F
FPC 1 LCPU Temp Sensor	39 degrees C / 102 degrees F

Power

PE0 Core 0.9V	898 mV	29351 mA	26421 mW
PE0 HMC0 Core 0.9V	899 mV	9734 mA	8750 mW
PE1 Core 0.9V	873 mV	28539 mA	24933 mW
PE1 HMC0 Core 0.9V	899 mV	9937 mA	8937 mW
PE2 Core 0.9V	875 mV	28906 mA	25316 mW
PE2 HMC0 Core 0.9V	899 mV	10140 mA	9125 mW
PE0 Serdes 1.0V	1019 mV	28312 mA	28890 mW
PE1 Serdes 1.0V	1020 mV	28656 mA	29234 mW
PE2 Serdes 1.0V	1020 mV	29437 mA	30015 mW
LCPU Platform 1.1V	1100 mV	4617 mA	5078 mW
LCPU Core 1.0V	1000 mV	8781 mA	8781 mW
PHY VDD B 1.0V	1000 mV	15953 mA	15984 mW
PHY VDD A 1.0V	1000 mV	15484 mA	15484 mW
BCM Core 1.0V	999 mV	7945 mA	7937 mW
BCM PEX 1.0V	999 mV	3515 mA	3515 mW
HMC Core 1.2V	1199 mV	1269 mA	1521 mW
HMC Serdes 1.2V	1199 mV	33000 mA	39593 mW
VDD 1.5V	1500 mV	2691 mA	4062 mW
VDD 2.5V	2449 mV	3582 mA	8781 mW
VDD 3.3V	3300 mV	2563 mA	8458 mW
12V	12311 mV	29002 mA	357577 mW

FPC 2 status:

State	Online
FPC 2 Intake-A Temp Sensor	43 degrees C / 109 degrees F
FPC 2 Intake-B Temp Sensor	30 degrees C / 86 degrees F
FPC 2 Exhaust-A Temp Sensor	50 degrees C / 122 degrees F
FPC 2 Exhaust-B Temp Sensor	52 degrees C / 125 degrees F
FPC 2 Exhaust-C Temp Sensor	51 degrees C / 123 degrees F
FPC 2 PE0 Temp Sensor	48 degrees C / 118 degrees F
FPC 2 PE1 Temp Sensor	56 degrees C / 132 degrees F
FPC 2 PE2 Temp Sensor	48 degrees C / 118 degrees F
FPC 2 PE3 Temp Sensor	57 degrees C / 134 degrees F
FPC 2 PE4 Temp Sensor	48 degrees C / 118 degrees F
FPC 2 PE5 Temp Sensor	60 degrees C / 140 degrees F
FPC 2 LCPU Temp Sensor	47 degrees C / 116 degrees F

Power

PE0 Core 0.9V	874 mV	28117 mA	24617 mW
PE1 Core 0.9V	899 mV	29601 mA	26632 mW
PE0 Serdes 1.0V	1019 mV	41031 mA	41843 mW
PE1 Serdes 1.0V	1019 mV	35656 mA	36343 mW
PE0 HMC Core 0.9V	899 mV	8125 mA	7312 mW
PE0,1 HMC Memory 1.2V	1199 mV	565 mA	688 mW
PE1 HMC Core 0.9V	899 mV	7921 mA	7125 mW
PE0,1 HMC Serdes 1.2V	1199 mV	21281 mA	25562 mW

PE2 Core 0.9V	899 mV	29187 mA	26242 mW
PE3 Core 0.9V	899 mV	29976 mA	27074 mW
PE2 Serdes 1.0V	1019 mV	38562 mA	39343 mW
PE3 Serdes 1.0V	1019 mV	34937 mA	35656 mW
PE2 HMC Core 0.9V	899 mV	8093 mA	7281 mW
PE2,3 HMC Memory 1.2V	1199 mV	610 mA	732 mW
PE3 HMC Core 0.9V	899 mV	7710 mA	6937 mW
PE2,3 HMC Serdes 1.2V	1199 mV	21500 mA	25812 mW
VDD 3.3V	3300 mV	7937 mA	26187 mW
VDD 1.5V	1499 mV	3234 mA	4851 mW
VDD 2.5V	2449 mV	4539 mA	11109 mW
PE4 Core 0.9V	874 mV	29914 mA	26183 mW
PE5 Core 0.9V	874 mV	29820 mA	26031 mW
PE4 Serdes 1.0V	1020 mV	43968 mA	44843 mW
PE5 Serdes 1.0V	1019 mV	27453 mA	28031 mW
PE4 HMC Core 0.9V	900 mV	7937 mA	7140 mW
PE4,5 HMC Memory 1.2V	1200 mV	1185 mA	1421 mW
PE5 HMC Core 0.9V	899 mV	8718 mA	7843 mW
PE4,5 HMC Serdes 1.2V	1199 mV	21125 mA	25343 mW
LCPU platform 1.1V	1099 mV	3777 mA	4156 mW
LCPU core 1.0V	1000 mV	9062 mA	9062 mW
BCM core 1.0V	1000 mV	9328 mA	9328 mW
BCM & PEX Serdes 1.0V	999 mV	4125 mA	4125 mW
12V	12311 mV	53347 mA	660345 mW

FPC 3 status:

State	Online
FPC 3 Intake-A Temp Sensor	43 degrees C / 109 degrees F
FPC 3 Intake-B Temp Sensor	30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor	48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor	49 degrees C / 120 degrees F
FPC 3 Exhaust-C Temp Sensor	47 degrees C / 116 degrees F
FPC 3 PE0 Temp Sensor	48 degrees C / 118 degrees F
FPC 3 PE1 Temp Sensor	55 degrees C / 131 degrees F
FPC 3 PE2 Temp Sensor	47 degrees C / 116 degrees F
FPC 3 PE3 Temp Sensor	54 degrees C / 129 degrees F
FPC 3 PE4 Temp Sensor	48 degrees C / 118 degrees F
FPC 3 PE5 Temp Sensor	58 degrees C / 136 degrees F
FPC 3 LCPU Temp Sensor	46 degrees C / 114 degrees F

Power

PE0 Core 0.9V	899 mV	29695 mA	26718 mW
PE1 Core 0.9V	899 mV	29695 mA	26710 mW
PE0 Serdes 1.0V	1020 mV	40156 mA	40906 mW
PE1 Serdes 1.0V	1020 mV	35281 mA	35968 mW
PE0 HMC Core 0.9V	900 mV	7492 mA	6742 mW
PE0,1 HMC Memory 1.2V	1199 mV	569 mA	683 mW
PE1 HMC Core 0.9V	899 mV	7570 mA	6812 mW
PE0,1 HMC Serdes 1.2V	1199 mV	20562 mA	24656 mW
PE2 Core 0.9V	899 mV	29734 mA	26765 mW
PE3 Core 0.9V	900 mV	29960 mA	26968 mW
PE2 Serdes 1.0V	1019 mV	37718 mA	38500 mW
PE3 Serdes 1.0V	1020 mV	35250 mA	35937 mW
PE2 HMC Core 0.9V	899 mV	7750 mA	6976 mW
PE2,3 HMC Memory 1.2V	1200 mV	546 mA	656 mW
PE3 HMC Core 0.9V	899 mV	7718 mA	6945 mW
PE2,3 HMC Serdes 1.2V	1199 mV	20625 mA	24750 mW
VDD 3.3V	3299 mV	5917 mA	19515 mW
VDD 1.5V	1499 mV	4015 mA	6015 mW
VDD 2.5V	2449 mV	4335 mA	10625 mW
PE4 Core 0.9V	899 mV	29835 mA	26875 mW
PE5 Core 0.9V	924 mV	30554 mA	28277 mW

PE4 Serdes 1.0V	1019 mV	43281 mA	44187 mW
PE5 Serdes 1.0V	1020 mV	27140 mA	27703 mW
PE4 HMC Core 0.9V	899 mV	7476 mA	6726 mW
PE4,5 HMC Memory 1.2V	1199 mV	531 mA	637 mW
PE5 HMC Core 0.9V	899 mV	7539 mA	6781 mW
PE4,5 HMC Serdes 1.2V	1199 mV	20375 mA	24468 mW
LCPU platform 1.1V	1099 mV	3453 mA	3796 mW
LCPU core 1.0V	999 mV	8984 mA	8984 mW
BCM core 1.0V	999 mV	7929 mA	7921 mW
BCM & PEX Serdes 1.0V	1000 mV	4046 mA	4046 mW
12V	12351 mV	51918 mA	644880 mW

FPC 5 status:

```

State                               Online
FPC 5 Intake-A Temp Sensor Failed
FPC 5 Intake-B Temp Sensor Failed
FPC 5 Exhaust-A Temp Sensor41 degrees C / 105 degrees F
FPC 5 Exhaust-B Temp Sensor41 degrees C / 105 degrees F
FPC 5 Exhaust-C Temp Sensor42 degrees C / 107 degrees F
FPC 5 PE0 Temp Sensor      47 degrees C / 116 degrees F
FPC 5 PE1 Temp Sensor      49 degrees C / 120 degrees F
FPC 5 PE2 Temp Sensor      53 degrees C / 127 degrees F
FPC 5 LCPU Temp Sensor     Failed
Power

```

PE0 Core 0.9V	923 mV	30976 mA	28578 mW
PE0 HMC0 Core 0.9V	899 mV	10093 mA	9078 mW
PE1 Core 0.9V	897 mV	29398 mA	26414 mW
PE1 HMC0 Core 0.9V	899 mV	9734 mA	8750 mW
PE2 Core 0.9V	922 mV	30226 mA	27886 mW
PE2 HMC0 Core 0.9V	899 mV	9984 mA	8968 mW
PE0 Serdes 1.0V	1019 mV	29296 mA	29890 mW
PE1 Serdes 1.0V	1020 mV	28687 mA	29296 mW
PE2 Serdes 1.0V	1020 mV	28187 mA	28765 mW
LCPU Platform 1.1V	1100 mV	3664 mA	4031 mW
LCPU Core 1.0V	999 mV	9125 mA	9125 mW
PHY VDD B 1.0V	999 mV	15593 mA	15593 mW
PHY VDD A 1.0V	1000 mV	15453 mA	15453 mW
BCM Core 1.0V	999 mV	7773 mA	7765 mW
BCM PEX 1.0V	1000 mV	3460 mA	3464 mW
HMC Core 1.2V	1199 mV	1328 mA	1628 mW
HMC Serdes 1.2V	1199 mV	32203 mA	38625 mW
VDD 1.5V	1499 mV	2675 mA	4007 mW
VDD 2.5V	2450 mV	3675 mA	9000 mW
VDD 3.3V	3300 mV	1814 mA	5980 mW
12V	12272 mV	29045 mA	361369 mW

FPC 6 status:

```

State                               Online
FPC 6 Intake-A Temp Sensor 41 degrees C / 105 degrees F
FPC 6 Intake-B Temp Sensor 37 degrees C / 98 degrees F
FPC 6 Exhaust-A Temp Sensor40 degrees C / 104 degrees F
FPC 6 Exhaust-B Temp Sensor40 degrees C / 104 degrees F
FPC 6 Exhaust-C Temp Sensor40 degrees C / 104 degrees F
FPC 6 PE0 Temp Sensor      45 degrees C / 113 degrees F
FPC 6 PE1 Temp Sensor      47 degrees C / 116 degrees F
FPC 6 PE2 Temp Sensor      51 degrees C / 123 degrees F
FPC 6 LCPU Temp Sensor     41 degrees C / 105 degrees F
Power

```

PE0 Core 0.9V	897 mV	30214 mA	27179 mW
PE0 HMC0 Core 0.9V	899 mV	10000 mA	8984 mW
PE1 Core 0.9V	873 mV	29332 mA	25601 mW
PE1 HMC0 Core 0.9V	899 mV	9828 mA	8828 mW

PE2 Core 0.9V	898 mV	30781 mA	27675 mW
PE2 HMC0 Core 0.9V	899 mV	10328 mA	9296 mW
PE0 Serdes 1.0V	1019 mV	28921 mA	29531 mW
PE1 Serdes 1.0V	1020 mV	29437 mA	30046 mW
PE2 Serdes 1.0V	1019 mV	29671 mA	30281 mW
LCPU Platform 1.1V	1100 mV	3671 mA	4039 mW
LCPU Core 1.0V	1000 mV	8218 mA	8187 mW
PHY VDD B 1.0V	1000 mV	15984 mA	15984 mW
PHY VDD A 1.0V	999 mV	16093 mA	16093 mW
BCM Core 1.0V	1000 mV	8046 mA	8062 mW
BCM PEX 1.0V	1000 mV	3500 mA	3500 mW
HMC Core 1.2V	1199 mV	1327 mA	1579 mW
HMC Serdes 1.2V	1199 mV	33031 mA	39593 mW
VDD 1.5V	1499 mV	2722 mA	4078 mW
VDD 2.5V	2449 mV	3539 mA	8671 mW
VDD 3.3V	3299 mV	8082 mA	26656 mW
12V	12311 mV	31124 mA	385270 mW

show chassis environment fpc (PTX10016 router)

```
user@host> show chassis environment fpc
```

```
FPC 1 status:
```

```
State Online
FPC 1 Intake-A Temp Sensor 36 degrees C / 96 degrees F
FPC 1 Intake-B Temp Sensor 32 degrees C / 89 degrees F
FPC 1 Exhaust-A Temp Sensor 37 degrees C / 98 degrees F
FPC 1 Exhaust-B Temp Sensor 36 degrees C / 96 degrees F
FPC 1 Exhaust-C Temp Sensor 36 degrees C / 96 degrees F
FPC 1 PE0 Temp Sensor 45 degrees C / 113 degrees F
FPC 1 PE1 Temp Sensor 46 degrees C / 114 degrees F
FPC 1 PE2 Temp Sensor 53 degrees C / 127 degrees F
FPC 1 LCPU Temp Sensor 35 degrees C / 95 degrees F
```

```
Power
```

PE0 Core 0.9V	897 mV	28992 mA	26027 mW
PE0 HMC0 Core 0.9V	899 mV	10156 mA	9156 mW
PE1 Core 0.9V	871 mV	28800 mA	25164 mW
PE1 HMC0 Core 0.9V	899 mV	10125 mA	9109 mW
PE2 Core 0.9V	898 mV	29914 mA	26906 mW
PE2 HMC0 Core 0.9V	899 mV	10343 mA	9296 mW
PE0 Serdes 1.0V	1019 mV	27515 mA	28093 mW
PE1 Serdes 1.0V	1020 mV	27968 mA	28546 mW
PE2 Serdes 1.0V	1019 mV	27796 mA	28359 mW
LCPU Platform 1.1V	1100 mV	3347 mA	3289 mW
LCPU Core 1.0V	1000 mV	7960 mA	7960 mW
PHY VDD B 1.0V	1000 mV	16437 mA	16437 mW
PHY VDD A 1.0V	999 mV	15656 mA	15656 mW
BCM Core 1.0V	1000 mV	7289 mA	7335 mW
BCM PEX 1.0V	999 mV	3453 mA	3453 mW
HMC Core 1.2V	1199 mV	1218 mA	1453 mW
HMC Serdes 1.2V	1199 mV	32093 mA	38562 mW
VDD 1.5V	1500 mV	2859 mA	4289 mW
VDD 2.5V	2449 mV	3875 mA	9500 mW
VDD 3.3V	3299 mV	2806 mA	9257 mW
12V	12351 mV	28569 mA	354877 mW

```
FPC 3 status:
```

```
State Online
FPC 3 Intake-A Temp Sensor 35 degrees C / 95 degrees F
FPC 3 Intake-B Temp Sensor 31 degrees C / 87 degrees F
FPC 3 Exhaust-A Temp Sensor 36 degrees C / 96 degrees F
```



```

FPC 3 Exhaust-B Temp Sensor34 degrees C / 93 degrees F
FPC 3 Exhaust-C Temp Sensor33 degrees C / 91 degrees F
FPC 3 PE0 Temp Sensor      43 degrees C / 109 degrees F
FPC 3 PE1 Temp Sensor      45 degrees C / 113 degrees F
FPC 3 PE2 Temp Sensor      49 degrees C / 120 degrees F
FPC 3 LCPU Temp Sensor     35 degrees C / 95 degrees F
Power
  PE0 Core 0.9V            897 mV    28832 mA    25871 mW
  PE0 HMC0 Core 0.9V       899 mV    10359 mA    9328 mW
  PE1 Core 0.9V            873 mV    28230 mA    24671 mW
  PE1 HMC0 Core 0.9V       899 mV    10468 mA    9421 mW
  PE2 Core 0.9V            898 mV    29539 mA    26539 mW
  PE2 HMC0 Core 0.9V       899 mV    10656 mA    9593 mW
  PE0 Serdes 1.0V          1020 mV    27484 mA    28031 mW
  PE1 Serdes 1.0V          1019 mV    27515 mA    28078 mW
  PE2 Serdes 1.0V          1020 mV    27625 mA    28187 mW
  LCPU Platform 1.1V       1099 mV    3050 mA     3355 mW
  LCPU Core 1.0V           999 mV    7820 mA     7804 mW
  PHY VDD B 1.0V           999 mV    15406 mA    15406 mW
  PHY VDD A 1.0V           1000 mV    14953 mA    14953 mW
  BCM Core 1.0V            1000 mV    7648 mA     7648 mW
  BCM PEX 1.0V             1000 mV    3531 mA     3531 mW
  HMC Core 1.2V            1200 mV    1234 mA     1476 mW
  HMC Serdes 1.2V          1199 mV    34671 mA    41593 mW
  VDD 1.5V                 1499 mV    3484 mA     5226 mW
  VDD 2.5V                 2449 mV    3218 mA     7890 mW
  VDD 3.3V                 3299 mV    2468 mA     8148 mW
  12V                      12311 mV    28785 mA    355950 mW
FPC 6 status:
State                               Online
FPC 6 Intake-A Temp Sensor 34 degrees C / 93 degrees F
FPC 6 Intake-B Temp Sensor 31 degrees C / 87 degrees F
FPC 6 Exhaust-A Temp Sensor34 degrees C / 93 degrees F
FPC 6 Exhaust-B Temp Sensor35 degrees C / 95 degrees F
FPC 6 Exhaust-C Temp Sensor35 degrees C / 95 degrees F
FPC 6 PE0 Temp Sensor      42 degrees C / 107 degrees F
FPC 6 PE1 Temp Sensor      43 degrees C / 109 degrees F
FPC 6 PE2 Temp Sensor      47 degrees C / 116 degrees F
FPC 6 LCPU Temp Sensor     34 degrees C / 93 degrees F
Power
  PE0 Core 0.9V            922 mV    29394 mA    27160 mW
  PE0 HMC0 Core 0.9V       899 mV    10078 mA    9062 mW
  PE1 Core 0.9V            923 mV    29636 mA    27304 mW
  PE1 HMC0 Core 0.9V       899 mV    9890 mA     8890 mW
  PE2 Core 0.9V            898 mV    29734 mA    26757 mW
  PE2 HMC0 Core 0.9V       899 mV    9968 mA     8968 mW
  PE0 Serdes 1.0V          1020 mV    26968 mA    27515 mW
  PE1 Serdes 1.0V          1019 mV    27421 mA    27984 mW
  PE2 Serdes 1.0V          1019 mV    27625 mA    28171 mW
  LCPU Platform 1.1V       1099 mV    3230 mA     4742 mW
  LCPU Core 1.0V           999 mV    8171 mA     8171 mW
  PHY VDD B 1.0V           1000 mV    15671 mA    15687 mW
  PHY VDD A 1.0V           999 mV    15703 mA    15703 mW
  BCM Core 1.0V            999 mV    7500 mA     7492 mW
  BCM PEX 1.0V             1000 mV    3480 mA     3468 mW
  HMC Core 1.2V            1199 mV    1199 mA     1440 mW
  HMC Serdes 1.2V          1199 mV    31046 mA    37250 mW
  VDD 1.5V                 1499 mV    2804 mA     4203 mW
  VDD 2.5V                 2449 mV    3746 mA     9171 mW
  VDD 3.3V                 3300 mV    3173 mA    10476 mW

```

12V	12311 mV	28786 mA	355654 mW
FPC 8 status:			
State	Online		
FPC 8 Intake-A Temp Sensor	34 degrees C / 93 degrees F		
FPC 8 Intake-B Temp Sensor	30 degrees C / 86 degrees F		
FPC 8 Exhaust-A Temp Sensor	37 degrees C / 98 degrees F		
FPC 8 Exhaust-B Temp Sensor	37 degrees C / 98 degrees F		
FPC 8 Exhaust-C Temp Sensor	37 degrees C / 98 degrees F		
FPC 8 PE0 Temp Sensor	42 degrees C / 107 degrees F		
FPC 8 PE1 Temp Sensor	44 degrees C / 111 degrees F		
FPC 8 PE2 Temp Sensor	47 degrees C / 116 degrees F		
FPC 8 LCPU Temp Sensor	33 degrees C / 91 degrees F		
Power			
PE0 Core 0.9V	897 mV	29382 mA	26437 mW
PE0 HMC0 Core 0.9V	899 mV	10265 mA	9250 mW
PE1 Core 0.9V	872 mV	28867 mA	25175 mW
PE1 HMC0 Core 0.9V	899 mV	10171 mA	9109 mW
PE2 Core 0.9V	899 mV	30210 mA	27214 mW
PE2 HMC0 Core 0.9V	900 mV	10187 mA	9171 mW
PE0 Serdes 1.0V	1020 mV	27843 mA	28421 mW
PE1 Serdes 1.0V	1020 mV	28265 mA	28828 mW
PE2 Serdes 1.0V	1019 mV	28406 mA	29000 mW
LCPU Platform 1.1V	1099 mV	3000 mA	3300 mW
LCPU Core 1.0V	1000 mV	7937 mA	7937 mW
PHY VDD B 1.0V	1000 mV	15843 mA	15843 mW
PHY VDD A 1.0V	1000 mV	15250 mA	15250 mW
BCM Core 1.0V	999 mV	6914 mA	6898 mW
BCM PEX 1.0V	999 mV	3445 mA	3445 mW
HMC Core 1.2V	1199 mV	1162 mA	1390 mW
HMC Serdes 1.2V	1199 mV	33437 mA	40125 mW
VDD 1.5V	1499 mV	2851 mA	4273 mW
VDD 2.5V	2450 mV	3867 mA	9484 mW
VDD 3.3V	3300 mV	3258 mA	10753 mW
12V	12338 mV	28656 mA	356171 mW
FPC 9 status:			
State	Online		
FPC 9 Intake-A Temp Sensor	44 degrees C / 111 degrees F		
FPC 9 Intake-B Temp Sensor	28 degrees C / 82 degrees F		
FPC 9 Exhaust-A Temp Sensor	51 degrees C / 123 degrees F		
FPC 9 Exhaust-B Temp Sensor	52 degrees C / 125 degrees F		
FPC 9 Exhaust-C Temp Sensor	48 degrees C / 118 degrees F		
FPC 9 PE0 Temp Sensor	52 degrees C / 125 degrees F		
FPC 9 PE1 Temp Sensor	65 degrees C / 149 degrees F		
FPC 9 PE2 Temp Sensor	50 degrees C / 122 degrees F		
FPC 9 PE3 Temp Sensor	65 degrees C / 149 degrees F		
FPC 9 PE4 Temp Sensor	50 degrees C / 122 degrees F		
FPC 9 PE5 Temp Sensor	67 degrees C / 152 degrees F		
FPC 9 LCPU Temp Sensor	45 degrees C / 113 degrees F		
Power			
PE0 Core 0.9V	875 mV	28316 mA	24808 mW
PE1 Core 0.9V	875 mV	28546 mA	24996 mW
PE0 Serdes 1.0V	1019 mV	38906 mA	39687 mW
PE1 Serdes 1.0V	1020 mV	33078 mA	33781 mW
PE0 HMC Core 0.9V	899 mV	7718 mA	6945 mW
PE0,1 HMC Memory 1.2V	1199 mV	579 mA	695 mW
PE1 HMC Core 0.9V	899 mV	7289 mA	6570 mW
PE0,1 HMC Serdes 1.2V	1199 mV	20187 mA	24250 mW
PE2 Core 0.9V	924 mV	29062 mA	26894 mW
PE3 Core 0.9V	900 mV	28914 mA	26039 mW
PE2 Serdes 1.0V	1020 mV	36375 mA	37093 mW

PE3 Serdes 1.0V	1019 mV	32640 mA	33296 mW
PE2 HMC Core 0.9V	900 mV	7695 mA	6921 mW
PE2,3 HMC Memory 1.2V	1199 mV	562 mA	674 mW
PE3 HMC Core 0.9V	899 mV	7554 mA	6796 mW
PE2,3 HMC Serdes 1.2V	1199 mV	20156 mA	24218 mW
VDD 3.3V	3300 mV	8964 mA	29609 mW
VDD 1.5V	1499 mV	3968 mA	5945 mW
VDD 2.5V	2449 mV	4414 mA	10890 mW
PE4 Core 0.9V	900 mV	28527 mA	25679 mW
PE5 Core 0.9V	899 mV	28902 mA	26035 mW
PE4 Serdes 1.0V	1019 mV	41281 mA	42125 mW
PE5 Serdes 1.0V	1019 mV	25781 mA	26328 mW
PE4 HMC Core 0.9V	900 mV	7382 mA	6648 mW
PE4,5 HMC Memory 1.2V	1199 mV	626 mA	750 mW
PE5 HMC Core 0.9V	899 mV	7562 mA	6796 mW
PE4,5 HMC Serdes 1.2V	1199 mV	20312 mA	24375 mW
LCPU platform 1.1V	1099 mV	3687 mA	4054 mW
LCPU core 1.0V	1000 mV	9000 mA	9000 mW
BCM core 1.0V	999 mV	7843 mA	7835 mW
BCM & PEX Serdes 1.0V	999 mV	4062 mA	4062 mW
12V	12417 mV	51659 mA	643215 mW

show chassis environment FPC 1 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis environment fpc 1
```

FPC 1 status:

State	Online
Temperature Intake	36 degrees C / 96 degrees F
Temperature Exhaust A	39 degrees C / 102 degrees F
Temperature LU TSen	52 degrees C / 125 degrees F
Temperature LU Chip	54 degrees C / 129 degrees F
Temperature XM TSen	52 degrees C / 125 degrees F
Temperature XM Chip	60 degrees C / 140 degrees F
Temperature PCIE TSen	52 degrees C / 125 degrees F
Temperature PCIE Chip	69 degrees C / 156 degrees F
Power	
MPC-BIAS3V3-z12106	3302 mV
MPC-VDD3V3-z16100	3325 mV
MPC-AVDD1V0-z16100	1007 mV
MPC-PCIE_1V0-z16100	904 mV
MPC-LU0_1V0-z12004	996 mV
MPC-VDD_1V5-z12004	1498 mV
MPC-12VA-BMR453	11733 mV
MPC-12VB-BMR453	11728 mV
MPC-XM_0V9-vt273m	900 mV
I2C Slave Revision	81

show chassis environment FPC (Junos OS Evolved)

```
user@switch> show chassis environment fpc
```

FPC 0 status:

State	Online
Intake Temperature	32 degrees C / 89 degrees F
Exhaust-A Temperature	43 degrees C / 109 degrees F
Exhaust-B Temperature	32 degrees C / 89 degrees F
PE0 Temperature	34 degrees C / 93 degrees F

PE1 Temperature	38 degrees C / 100 degrees F
PE2 Temperature	38 degrees C / 100 degrees F
PE3 Temperature	36 degrees C / 96 degrees F
PE4 Temperature	35 degrees C / 95 degrees F
PE5 Temperature	35 degrees C / 95 degrees F
Power 1	
RT_1 1.0v	1018 mV
RT_2 1.0v	1018 mV
Power 2	
FPC 1 1.0v	999 mV
FPC 2 1.0v	998 mV
Power 3	
FPC 2.5v	2499 mV
FPC 3.3v	3299 mV
Power 4	
FPC 0.9v	899 mV
FPC 1.5v	1499 mV
Power 5	
PE0 1 1.0v	1039 mV
PE0 2 1.0v	1039 mV
Power 6	
PE0 1 0.9v	900 mV
PE0 2 0.9v	900 mV
Power 7	
PE0 3 0.9v	902 mV
PE0 4 0.9v	902 mV
Power 8	
PE0 H 0.9v	899 mV
PE0 H 1.2v	1199 mV
Power 9	
PE1 1 1.0v	1040 mV
PE1 2 1.0v	1039 mV
Power 10	
PE1 1 0.9v	901 mV
PE1 2 0.9v	901 mV
Power 11	
PE1 3 0.9v	900 mV
PE1 4 0.9v	900 mV
Power 12	
PE1 H 0.9v	899 mV
PE1 H 1.2v	1199 mV
Power 13	
PE2 1 1.0v	1039 mV
PE2 2 1.0v	1039 mV
Power 14	
PE2 1 0.9v	900 mV
PE2 2 0.9v	900 mV
Power 15	
PE2 3 0.9v	900 mV
PE2 4 0.9v	900 mV
Power 16	
PE2 H 0.9v	899 mV
PE2 H 1.2v	1199 mV
Power 17	
PE3 1 1.0v	1039 mV
PE3 2 1.0v	1039 mV
Power 18	
PE3 1 0.9v	899 mV
PE3 2 0.9v	900 mV
Power 19	

```

    PE3 3 0.9v          899 mV
    PE3 4 0.9v          900 mV
Power 20
    PE3 H 0.9v          899 mV
    PE3 H 1.2v          1199 mV
Power 21
    PE4 1 1.0v          1039 mV
    PE4 2 1.0v          1039 mV
Power 22
    PE4 1 0.9v          900 mV
    PE4 2 0.9v          900 mV
Power 23
    PE4 3 0.9v          901 mV
    PE4 4 0.9v          901 mV
Power 24
    PE4 H 0.9v          899 mV
    PE4 H 1.2v          1199 mV
Power 25
    PE5 1 1.0v          1040 mV
    PE5 2 1.0v          1039 mV
Power 26
    PE5 1 0.9v          901 mV
    PE5 2 0.9v          901 mV
Power 27
    PE5 3 0.9v          901 mV
    PE5 4 0.9v          901 mV
Power 28
    PE5 H 0.9v          899 mV
    PE5 H 1.2v          1199 mV
Power 29
    PIC0 12.0v          12342 mV
Power 30
    PIC1 12.0v          12342 mV
Power 31
    A    12.0v          12375 mV
    B    12.0v          1008 mV
Bus Revision          115
FPC 1 status:
State                Online
Intake Temperature   33 degrees C / 91 degrees F
Exhaust-A Temperature 44 degrees C / 111 degrees F
Exhaust-B Temperature 33 degrees C / 91 degrees F
PE0 Temperature      34 degrees C / 93 degrees F
PE1 Temperature      38 degrees C / 100 degrees F
PE2 Temperature      37 degrees C / 98 degrees F
PE3 Temperature      36 degrees C / 96 degrees F
PE4 Temperature      34 degrees C / 93 degrees F
PE5 Temperature      36 degrees C / 96 degrees F
Power 1
    RT_1 1.0v          1018 mV
    RT_2 1.0v          1018 mV
Power 2
    FPC 1 1.0v          999 mV
    FPC 2 1.0v          999 mV
Power 3
    FPC 2.5v          2499 mV
    FPC 3.3v          3300 mV
Power 4
    FPC 0.9v          899 mV
    FPC 1.5v          1500 mV

```

Power 5	
PE0 1 1.0v	1039 mV
PE0 2 1.0v	1039 mV
Power 6	
PE0 1 0.9v	925 mV
PE0 2 0.9v	925 mV
Power 7	
PE0 3 0.9v	925 mV
PE0 4 0.9v	926 mV
Power 8	
PE0 H 0.9v	899 mV
PE0 H 1.2v	1199 mV
Power 9	
PE1 1 1.0v	1040 mV
PE1 2 1.0v	1039 mV
Power 10	
PE1 1 0.9v	900 mV
PE1 2 0.9v	901 mV
Power 11	
PE1 3 0.9v	899 mV
PE1 4 0.9v	900 mV
Power 12	
PE1 H 0.9v	899 mV
PE1 H 1.2v	1199 mV
Power 13	
PE2 1 1.0v	1040 mV
PE2 2 1.0v	1039 mV
Power 14	
PE2 1 0.9v	926 mV
PE2 2 0.9v	926 mV
Power 15	
PE2 3 0.9v	927 mV
PE2 4 0.9v	927 mV
Power 16	
PE2 H 0.9v	899 mV
PE2 H 1.2v	1199 mV
Power 17	
PE3 1 1.0v	1039 mV
PE3 2 1.0v	1039 mV
Power 18	
PE3 1 0.9v	926 mV
PE3 2 0.9v	927 mV
Power 19	
PE3 3 0.9v	925 mV
PE3 4 0.9v	926 mV
Power 20	
PE3 H 0.9v	899 mV
PE3 H 1.2v	1199 mV
Power 21	
PE4 1 1.0v	1039 mV
PE4 2 1.0v	1040 mV
Power 22	
PE4 1 0.9v	925 mV
PE4 2 0.9v	925 mV
Power 23	
PE4 3 0.9v	925 mV
PE4 4 0.9v	926 mV
Power 24	
PE4 H 0.9v	900 mV
PE4 H 1.2v	1199 mV

```

Power 25
  PE5 1 1.0v          1039 mV
  PE5 2 1.0v          1039 mV
Power 26
  PE5 1 0.9v          898 mV
  PE5 2 0.9v          899 mV
Power 27
  PE5 3 0.9v          900 mV
  PE5 4 0.9v          900 mV
Power 28
  PE5 H 0.9v          899 mV
  PE5 H 1.2v          1199 mV
Power 29
  PICO 12.0v          0 mV
Power 30
  PIC1 12.0v          12402 mV
Power 31
  A    12.0v          12344 mV
  B    12.0v          1008 mV
Bus Revision          115
FPC 2 status:
State                 Online
Intake Temperature    31 degrees C / 87 degrees F
Exhaust-A Temperature 38 degrees C / 100 degrees F
Exhaust-B Temperature 28 degrees C / 82 degrees F
PE0 Temperature       28 degrees C / 82 degrees F
PE1 Temperature       33 degrees C / 91 degrees F
PE2 Temperature       34 degrees C / 93 degrees F
PE3 Temperature       31 degrees C / 87 degrees F
Power 1
  RT_1 1.0v          1018 mV
  RT_2 1.0v          1018 mV
Power 2
  FPC 1 1.0v          999 mV
  FPC 2 1.0v          999 mV
Power 3
  FPC 2.5v          2499 mV
  FPC 3.3v          3299 mV
Power 4
  FPC 0.9v          899 mV
  FPC 1.5v          1500 mV
Power 5
  PE0 1 1.0v          1039 mV
  PE0 2 1.0v          1040 mV
Power 6
  PE0 1 0.9v          900 mV
  PE0 2 0.9v          901 mV
Power 7
  PE0 3 0.9v          900 mV
  PE0 4 0.9v          900 mV
Power 8
  PE0 H 0.9v          899 mV
  PE0 H 1.2v          1199 mV
Power 9
  PE1 1 1.0v          1039 mV
  PE1 2 1.0v          1039 mV
Power 10
  PE1 1 0.9v          875 mV
  PE1 2 0.9v          876 mV
Power 11

```

```

    PE1 3 0.9v          875 mV
    PE1 4 0.9v          875 mV
Power 12
    PE1 H 0.9v          899 mV
    PE1 H 1.2v          1199 mV
Power 13
    PE2 1 1.0v          1039 mV
    PE2 2 1.0v          1039 mV
Power 14
    PE2 1 0.9v          900 mV
    PE2 2 0.9v          900 mV
Power 15
    PE2 3 0.9v          900 mV
    PE2 4 0.9v          900 mV
Power 16
    PE2 H 0.9v          899 mV
    PE2 H 1.2v          1199 mV
Power 17
    PE3 1 1.0v          1039 mV
    PE3 2 1.0v          1039 mV
Power 18
    PE3 1 0.9v          875 mV
    PE3 2 0.9v          875 mV
Power 19
    PE3 3 0.9v          875 mV
    PE3 4 0.9v          875 mV
Power 20
    PE3 H 0.9v          899 mV
    PE3 H 1.2v          1200 mV
Power 21
    PIC0 12.0v          12281 mV
Power 22
    PIC1 12.0v          0 mV
Power 23
    A    12.0v          12406 mV
    B    12.0v          1006 mV
Bus Revision          115
FPC 3 status:
State                Online
Intake Temperature   33 degrees C / 91 degrees F
Exhaust-A Temperature 44 degrees C / 111 degrees F
Exhaust-B Temperature 30 degrees C / 86 degrees F
PE0 Temperature      33 degrees C / 91 degrees F
PE1 Temperature      37 degrees C / 98 degrees F
PE2 Temperature      38 degrees C / 100 degrees F
PE3 Temperature      34 degrees C / 93 degrees F
PE4 Temperature      33 degrees C / 91 degrees F
PE5 Temperature      36 degrees C / 96 degrees F
Power 1
    RT_1 1.0v          1018 mV
    RT_2 1.0v          1018 mV
Power 2
    FPC 1 1.0v          999 mV
    FPC 2 1.0v          999 mV
Power 3
    FPC 2.5v          2500 mV
    FPC 3.3v          3299 mV
Power 4
    FPC 0.9v          899 mV
    FPC 1.5v          1500 mV

```



```

Power 5
  PE0 1 1.0v      1039 mV
  PE0 2 1.0v      1039 mV
Power 6
  PE0 1 0.9v      900 mV
  PE0 2 0.9v      900 mV
Power 7
  PE0 3 0.9v      898 mV
  PE0 4 0.9v      899 mV
Power 8
  PE0 H 0.9v      899 mV
  PE0 H 1.2v     1199 mV
Power 9
  PE1 1 1.0v      1040 mV
  PE1 2 1.0v      1039 mV
Power 10
  PE1 1 0.9v      926 mV
  PE1 2 0.9v      926 mV
Power 11
  PE1 3 0.9v      925 mV
  PE1 4 0.9v      925 mV
Power 12
  PE1 H 0.9v      900 mV
  PE1 H 1.2v     1199 mV
Power 13
  PE2 1 1.0v      1039 mV
  PE2 2 1.0v      1039 mV
Power 14
  PE2 1 0.9v      873 mV
  PE2 2 0.9v      873 mV
Power 15
  PE2 3 0.9v      875 mV
  PE2 4 0.9v      875 mV
Power 16
  PE2 H 0.9v      899 mV
  PE2 H 1.2v     1199 mV
Power 17
  PE3 1 1.0v      1039 mV
  PE3 2 1.0v      1039 mV
Power 18
  PE3 1 0.9v      899 mV
  PE3 2 0.9v      900 mV
Power 19
  PE3 3 0.9v      899 mV
  PE3 4 0.9v      899 mV
Power 20
  PE3 H 0.9v      899 mV
  PE3 H 1.2v     1199 mV
Power 21
  PE4 1 1.0v      1040 mV
  PE4 2 1.0v      1040 mV
Power 22
  PE4 1 0.9v      949 mV
  PE4 2 0.9v      950 mV
Power 23
  PE4 3 0.9v      950 mV
  PE4 4 0.9v      951 mV
Power 24
  PE4 H 0.9v      899 mV
  PE4 H 1.2v     1199 mV

```

```

Power 25
  PE5 1 1.0v          1039 mV
  PE5 2 1.0v          1039 mV
Power 26
  PE5 1 0.9v          900 mV
  PE5 2 0.9v          900 mV
Power 27
  PE5 3 0.9v          900 mV
  PE5 4 0.9v          900 mV
Power 28
  PE5 H 0.9v          899 mV
  PE5 H 1.2v          1199 mV
Power 29
  PIC0 12.0v          0 mV
Power 30
  PIC1 12.0v          0 mV
Power 31
  A    12.0v          12406 mV
  B    12.0v          1008 mV
Bus Revision          115
FPC 6 status:
State                 Onlining
Bus Revision          115

```

show chassis environment pem

List of Syntax [Syntax on page 367](#)
 [Syntax \(ACX4000 Router\) on page 367](#)
 [Syntax \(TX Matrix Routers\) on page 367](#)
 [Syntax \(TX Matrix Plus Routers\) on page 367](#)
 [Syntax \(MX Series Router\) on page 367](#)
 [Syntax \(PTX Series Router\) on page 367](#)
 [Syntax \(MX104 Universal Routing Platforms\) on page 367](#)
 [Syntax \(MX10003, MX204, and MX10008 Universal Routing Platforms\) on page 368](#)
 [Syntax \(QFX Series\) on page 368](#)
 [Syntax \(OCX Series\) on page 368](#)
 [Syntax \(EX9251, EX9253 Switches\) on page 368](#)

Syntax show chassis environment pem
 <slot>

Syntax (ACX4000 Router) show chassis environment pem


Syntax (TX Matrix Routers) show chassis environment pem
 <lcc number | scc>
 <slot>

Syntax (TX Matrix Plus Routers) show chassis environment pem
 <lcc number | sfc number>
 <slot>

Syntax (MX Series Router) show chassis environment pem
 <slot>
 <all-members>
 <local>
 <member member-id>

Syntax (PTX Series Router) show chassis environment pem
 <slot>
 <all-members>
 <local>
 <member member-id>

Syntax (MX104 Universal Routing Platforms) show chassis environment pem
 <slot>
 <satellite [fpc-slot slot-id | device-alias alias-name]

Syntax (MX10003 , MX204, and MX10008 Universal Routing Platforms)	show chassis environment pem <slot>
Syntax (QFX Series)	show chassis environment pem <slot (interconnect-device <i>name slot</i>) (node-device <i>name</i>)>
Syntax (OCX Series)	show chassis environment pem <slot>
Syntax (EX9251, EX9253 Switches)	show chassis environment pem <slot>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.3R2 for EX Series.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>satellite option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Routers</p>
Description	<p>Display Power Entry Module (PEM) environmental status information.</p> <div>  <p>NOTE: The new high-capacity (4100W) enhanced DC PEM on MX960 routers includes a new design that can condition the input voltage. This results in the output voltage differing from the input voltage. The earlier generation of DC PEMs coupled the input power directly to the output, thereby making it safe to assume that the output voltage was equal to the input voltage.</p> </div>
Options	<p>none—Display environmental information about both PEMs. For the TX Matrix router, display environmental information about the PEMs, the TX Matrix router, and its attached T640 routers. For the TX Matrix Plus router, display environmental information about the PEMs, the TX Matrix Plus router, and its attached routers.</p> <p>all-members—(MX Series routers only) (Optional) Display environmental information about the PEMs in all the member routers of the Virtual Chassis configuration.</p>

interconnect-device *name*—(QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Interconnect device.

lcc *number*—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display environmental information about the PEM in the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display environmental information about the PEM in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device *name*—(QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Node device.

satellite [*fpc-slot slot-id* | device-alias *alias-name*]—(Junos Fusion only)(Optional) Display environmental information about the PEM in the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc—(TX Matrix routers only) (Optional) Display environmental information about the PEM in the TX Matrix router (or switch-card chassis).

sfc—(TX Matrix Plus routers only) (Optional) Display environmental information about the PEM in the TX Matrix Plus router (or switch-fabric chassis).

slot —(Optional) Display environmental information about an individual PEM. Replace *slot* with 0 or 1.

Required Privilege Level

view

Related Documentation

- [show chassis hardware on page 426](#)

List of Sample Output

[show chassis environment pem \(M40e Router\) on page 371](#)
[show chassis environment pem \(M120 Router\) on page 371](#)

[show chassis environment pem \(M160 Router\) on page 372](#)
[show chassis environment pem \(M320 Router\) on page 372](#)
[show chassis environment pem \(MX150\) on page 372](#)
[show chassis environment pem \(MX104 Router\) on page 372](#)
[show chassis environment pem \(MX240 Router\) on page 373](#)
[show chassis environment pem \(MX480 Router\) on page 373](#)
[show chassis environment pem \(MX960 Router\) on page 373](#)
[show chassis environment pem \(MX10003 Router\) on page 373](#)
[show chassis environment pem \(MX204 Router\) on page 374](#)
[show chassis environment pem \(MX10008 Router\) on page 374](#)
[show chassis environment pem \(PTX10016 Router\) on page 375](#)
[show chassis environment pem \(T320 Router\) on page 376](#)
[show chassis environment pem \(T640 Router\) on page 376](#)
[show chassis environment pem \(T4000 Router\) on page 376](#)
[show chassis environment pem \(T640/T1600/T4000 Routers With Six-Input DC Power Supply\) on page 377](#)
[show chassis environment pem lcc \(TX Matrix Routing Matrix\) on page 377](#)
[show chassis environment pem scc \(TX Matrix Routing Matrix\) on page 378](#)
[show chassis environment pem sfc \(TX Matrix Plus Routing Matrix\) on page 378](#)
[show chassis environment pem lcc \(TX Matrix Plus Routing Matrix\) on page 378](#)
[show chassis environment pem node-device \(QFabric System\) on page 379](#)
[show chassis environment pem \(QFX Series and OCX Series\) on page 379](#)
[show chassis environment pem interconnect-device \(QFabric System\) on page 379](#)
[show chassis environment pem \(EX9251 Switches\) on page 380](#)
[show chassis environment pem \(EX9253 Switches\) on page 380](#)
[show chassis environment pem \(PTX1000 Packet Transport Routers\) on page 380](#)

Output Fields [Table 18 on page 370](#) lists the output fields for the **show chassis environment pem** command. Output fields are listed in the approximate order in which they appear.

Table 18: show chassis environment pem Output Fields

Field Name	Field Description
PEMslotstatus	Number of the PEM slot.
State	Status of the PEM.
Temperature	Temperature of the air flowing past the PEM.
AC Input	Status of the AC input for the specified component
AC Output	Status of the AC output for the specified component.
DC input	Status of the DC input for the specified component.
DC output	Status of the DC output for the specified component.
Load	(Not available on M40e or M160 routers) Information about the load on supply, in percentage of rated current being used.

Table 18: show chassis environment pem Output Fields (continued)

Field Name	Field Description
Voltage	(M120, M160, M320, T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about voltage supplied to the PEM. (MX104 routers only) Information about voltage supplied by the PEM to the system.
Current	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM current.
Power	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM power.
SCG/CB/SIB	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) SONET Clock Generator/Control Board/Switch Interface Board.
FAN	(T640, T1600, and T4000 routers with six-input DC power supply only) Information about the DC output to the fan.

Sample Output

show chassis environment pem (M40e Router)

```
user@host> show chassis environment pem
```

```
PEM 0 status:
  State           Online
  Temperature      OK
  AC input         OK
  DC output        OK
```

show chassis environment pem (M120 Router)

```
user@host> show chassis environment pem
```

```
PEM 0 status:
  State           Online
  Temperature      OK
  DC Input:        OK
  DC Output:       OK
  Load            Less than 20 percent
  Voltage:
    48.0 V input    52864 mV
    48.0 V fan supply 41655 mV
    3.3 V           3399 mV
PEM 1 status:
  State           Online
  Temperature      OK
  DC Input:        OK
  DC Output:       OK
  Load            Less than 20 percent
  Voltage:
    48.0 V input    54537 mV
    48.0 V fan supply 42910 mV
    3.3 V           3506 mV
```

show chassis environment pem (M160 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State           Online
  Temperature      OK
  DC input         OK
  DC output        OK
  Load            Less than 20 percent
  Voltage:
    48.0 V input   54833 mV
    48.0 V fan supply 50549 mV
    8.0 V bias     8239 mV
    5.0 V bias     5006 mV

```

show chassis environment pem (M320 Router)

```
user@host> show chassis environment pem
```

```

PEM 2 status:
  State           Online
  Temperature      OK
  DC input         OK
  Load            Less than 40 percent
    48.0 V input   51853 mV
    48.0 V fan supply 48877 mV
    8.0 V bias     8449 mV
    5.0 V bias     4998 mV
PEM 3 status:
  State           Online
  Temperature      OK
  DC input         OK
  Load            Less than 40 percent
    48.0 V input   51717 mV
    48.0 V fan supply 49076 mV
    8.0 V bias     8442 mV
    5.0 V bias     4998 mV

```

show chassis environment pem (MX150)

```
user@host> show chassis environment pem
```

```

FPC 0 PEM 0 status:
  State           Online
  Airflow          Front to Back
  Temperature      OK

```

show chassis environment pem (MX104 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State           Online
  Temperature      OK
  DC Output:       OK
  Voltage:
    12.0 V output  12281 mV
    3.3 V output   3353 mV

```



```

PEM 1 status:
  State          Empty

```

show chassis environment pem (MX240 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State          Online
  Temperature     OK
  DC Output:     OK
PEM 1 status:
  State          Online
  Temperature     OK
  DC Output:     OK

```

show chassis environment pem (MX480 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State          Online
  Temperature     OK
  DC Input:      OK
  DC Output:     OK
  Voltage:
PEM 1 status:
  State          Online
  Temperature     OK
  DC Input:      OK
  DC Output:     OK
  Voltage:

```

show chassis environment pem (MX960 Router)

```
user@host> show chassis environment pem
```

```

PEM 2 status:
  State          Present
PEM 3 status:
  State          Online
  Temperature     OK
  DC Output:     OK

```

show chassis environment pem (MX10003 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State          Online
  Airflow        Front to Back
  Temperature     OK   34 degrees C / 93 degrees F
  Temperature     OK   26 degrees C / 78 degrees F
  Temperature     OK   24 degrees C / 75 degrees F
  Firmware version 0x22
  Cooling Fan     8752 RPM
  DC Output       Voltage(V) Current(A) Power(W) Load(%)
                  12.00      26          312      10

```

```

PEM 1 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   35 degrees C / 95 degrees F
  Temperature    OK   26 degrees C / 78 degrees F
  Temperature    OK   25 degrees C / 77 degrees F
  Firmware version 0x22
  Cooling Fan    8480 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      27          324      11
PEM 2 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   37 degrees C / 98 degrees F
  Temperature    OK   29 degrees C / 84 degrees F
  Temperature    OK   25 degrees C / 77 degrees F
  Firmware version 0x22
  Cooling Fan    8656 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      25          300      10
PEM 3 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   35 degrees C / 95 degrees F
  Temperature    OK   26 degrees C / 78 degrees F
  Temperature    OK   25 degrees C / 77 degrees F
  Firmware version 0x22
  Cooling Fan    8448 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      26          312      10
PEM 4 status:
  State          Empty
PEM 5 status:
  State          Empty

```

show chassis environment pem (MX204 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State          Empty
PEM 1 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   48 degrees C / 118 degrees F
  Temperature    OK   51 degrees C / 123 degrees F
  Fan Sensor     5400 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  11.94      16          191      29

```

show chassis environment pem (MX10008 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State          Online
  Airflow        Front to Back
  Temperature    OK   29 degrees C / 84 degrees F

```

```

Firmware version      0x36
Fan 0                  5880 RPM
DC Output              Voltage(V) Current(A) Power(W) Load(%)
                       12.00      104      1248      46
PEM 1 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    27 degrees C / 80 degrees F
  Firmware version     0x36
  Fan 0                5940 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      104      1248      46
PEM 2 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    30 degrees C / 86 degrees F
  Firmware version     0x36
  Fan 0                5940 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      105      1260      46
PEM 3 status:
  State                Present
PEM 4 status:
  State                Present
PEM 5 status:
  State                Present

```

show chassis environment pem (PTX10016 Router)

```

user@host> show chassis environment pem
PEM 0 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    21 degrees C / 69 degrees F
  Firmware version     0x36
  Fan 0                5760 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      51      612      22
PEM 1 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    23 degrees C / 73 degrees F
  Firmware version     0x36
  Fan 0                5760 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      52      624      23
PEM 2 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    23 degrees C / 73 degrees F
  Firmware version     0x36
  Fan 0                5760 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                       12.00      51      612      22
PEM 3 status:
  State                Online
  Airflow              Front to Back
  Temperature          OK    21 degrees C / 69 degrees F
  Firmware version     0x36

```

```

Fan 0                    5760 RPM
DC Output                Voltage(V) Current(A) Power(W) Load(%)
                        12.00      51          612      22
PEM 4 status:
State                    Online
Airflow                  Front to Back
Temperature              OK 22 degrees C / 71 degrees F
Firmware version        0x36
Fan 0                    5760 RPM
DC Output                Voltage(V) Current(A) Power(W) Load(%)
                        12.00      52          624      23
PEM 5 status:
State                    Online
Airflow                  Front to Back
Temperature              OK 24 degrees C / 75 degrees F
Firmware version        0x36
Fan 0                    5700 RPM
DC Output                Voltage(V) Current(A) Power(W) Load(%)
                        12.00      51          612      22
PEM 6 status:
State                    Online
Airflow                  Front to Back
Temperature              OK 21 degrees C / 69 degrees F
Firmware version        0x36
Fan 0                    5700 RPM
DC Output                Voltage(V) Current(A) Power(W) Load(%)
                        12.00      50          600      22

```

show chassis environment pem (T320 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
State                    Online
Temperature              OK
DC input:                OK

```

show chassis environment pem (T640 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
State                    Online
Temperature              22 degrees C / 71 degrees F
AC input: OK
DC output:               Voltage    Current      Power      Load
FPC 0                   56875      606          34          4
FPC 1                   57016      525          29          3
FPC 2                    0           0            0            0
FPC 3                    0           0            0            0
FPC 4                    0           0            0            0
FPC 5                    0           0            0            0
FPC 6                   57158     1581          90         12
FPC 7                    0           0            0            0
SCG/CB/SIB              56750     1125          63            5

```

show chassis environment pem (T4000 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
State                Online
Temperature          33 degrees C / 91 degrees F
DC Input:           OK
                    Voltage(V) Current(A) Power(W) Load(%)
INPUT 0             54.625    9.812    535    22
INPUT 1             54.625   10.250    559    23
INPUT 2             55.125    0.125     6     0
INPUT 3             54.500   10.062    548    22
INPUT 4             54.750    9.375    513    21
INPUT 5             54.750   10.187    557    23
DC Output           Voltage(V) Current(A) Power(W) Load(%)
FPC 0               55.750   10.125    564    37
FPC 1               51.625    0.000     0     0
FPC 2               52.000    0.000     0     0
FPC 3               55.062   10.437    574    38
FPC 4               52.125    0.000     0     0
FPC 5               55.000    9.375    515    34
FPC 6               55.187    9.687    534    35
FPC 7               51.437    0.000     0     0
SCG/CB/SIB          55.375   15.750    872    35
FAN                 54.562   14.750    804    42

```

show chassis environment pem (T640/T1600/T4000 Routers With Six-Input DC Power Supply)

```
user@host> show chassis environment pem
```

```

PEM 1 status:
State                Online
Temperature          36 degrees C / 96 degrees F
DC Input:           OK
                    Voltage(V) Current(A) Power(W) Load(%)
INPUT 0              0.000    0.000     0     0
INPUT 1             54.875    3.812    209    27
INPUT 2             55.375    3.937    218    29
INPUT 3             54.625    3.750    204    27
INPUT 4             55.125    3.375    186    24
INPUT 5             55.125    3.375    186    24
DC Output           Voltage(V) Current(A) Power(W) Load(%)
FPC 0               52.312    0.000     0     0
FPC 1               52.687    0.000     0     0
FPC 2               52.812    0.000     0     0
FPC 3               55.812    7.062    394    52
FPC 4               52.625    0.000     0     0
FPC 5               52.625    0.000     0     0
FPC 6               52.750    0.000     0     0
FPC 7               52.750    0.000     0     0
SCG/CB/SIB          55.937   11.937    667    55
FAN                 55.812    4.937    275    36

```

show chassis environment pem lcc (TX Matrix Routing Matrix)

```
user@host> show chassis environment pem 0 lcc 0
```

```
lcc0-re0:
```

```

-----
PEM 0 status:
State                Present
Temperature          27 degrees C / 80 degrees F

```

DC input:		Check		
DC output:	Voltage	Current	Power	Load
FPC 0	0	0	0	0
FPC 1	0	0	0	0
FPC 2	0	0	0	0
FPC 3	0	0	0	0
FPC 4	0	0	0	0
FPC 5	0	0	0	0
FPC 6	0	0	0	0
FPC 7	0	0	0	0
SCG/CB/SIB	0	0	0	0

show chassis environment pem scc (TX Matrix Routing Matrix)

```
user@host> show chassis environment pem scc
```

```
scc-re0:
```

```
-----
```

```
PEM 1 status:
```

State	Online			
Temperature	24 degrees C / 75 degrees F			
DC input:	OK			
DC output:	Voltage	Current	Power	Load
SIB 0	0	0	0	0
SIB 1	0	0	0	0
SIB 2	0	0	0	0
SIB 3	56550	0	0	0
SIB 4	55958	6912	386	51

show chassis environment pem sfc (TX Matrix Plus Routing Matrix)

```
user@host> show chassis environment pem sfc 0
```

```
sfc0-re0:
```

```
-----
```

```
PEM 0 status:
```

State	Online			
Temperature	35 degrees C / 95 degrees F			
DC Input:	OK			
DC Output	Voltage	Current	Power	Load
Channel 0	53820	14140	761	59
Channel 1	53550	12720	681	53
Channel 2	53840	12930	696	54
Channel 3	53690	14990	804	63
Channel 4	53620	15070	808	63
Channel 5	53900	14820	798	62
Channel 6	54120	5020	271	21

show chassis environment pem lcc (TX Matrix Plus Routing Matrix)

```
user@host> show chassis environment lcc 0
```

```
lcc0-re1:
```

```
-----
```

```
PEM 0 status:
```

State	Online
Temperature	38 degrees C / 100 degrees F
DC Input:	OK

```

DC Output      Voltage    Current    Power    Load
FPC 0          0          0          0         0
FPC 1          0          0          0         0
FPC 2          0          0          0         0
FPC 3          0          0          0         0
FPC 4          56408      7575      427        56
FPC 5          0          0          0         0
FPC 6          56266      7956      447        59
FPC 7          56283      6100      343        45
SCG/CB/SIB     55916      8950      500        41

```

PEM 1 status:

```

State          Present
Temperature     35 degrees C / 95 degrees F
DC Input:       Check

```

DC Output	Voltage	Current	Power	Load
FPC 0	0	0	0	0
FPC 1	0	0	0	0
FPC 2	0	0	0	0
FPC 3	0	0	0	0
FPC 4	0	0	0	0
FPC 5	0	0	0	0
FPC 6	0	0	0	0
FPC 7	0	0	0	0
SCG/CB/SIB	0	0	0	0

show chassis environment pem node-device (QFabric System)

```

user@switch> show chassis environment pem node-device node1

```

FPC 0 PEM 0 status:

```

State          Check
Airflow        Front to Back
Temperature     OK
AC Input:      OK
DC Output      Voltage(V) Current(A) Power(W) Load(%)
                12          10        120      18

```

FPC 0 PEM 1 status:

```

State          Online
Airflow        Back to Front
Temperature     OK
AC Input:      OK
DC Output      Voltage(V) Current(A) Power(W) Load(%)
                11          10        110      17

```

show chassis environment pem (QFX Series and OCX Series)

```

user@switch> show chassis environment pem

```

FPC 0 PEM 1 status:

```

State          Online
Airflow        Front to Back
Temperature     OK
AC Input:      OK
DC Output      Voltage(V) Current(A) Power(W) Load(%)
                12          17        204      31

```

show chassis environment pem interconnect-device (QFabric System)

```

user@switch> show chassis environment pem interconnect-device IC11

```

```
IC1 PEM 1 status:
  State          Online
  Airflow        Front to Back
  Temperature     OK
  AC Input:      OK
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12          18       216    33
```

show chassis environment pem (EX9251 Switches)

```
user@switch> show chassis environment pem

PEM 0 status:
  State          Present
PEM 1 status:
  State          Online
  Airflow        Front to Back
  Temperature     OK   36 degrees C / 96 degrees F
  Temperature     OK   35 degrees C / 95 degrees F
  Fan Sensor      5940 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  11.85      17       201    30
```

show chassis environment pem (EX9253 Switches)

```
user@switch> show chassis environment pem

PEM 0 status:
  State          Online
  Airflow        Front to Back
  Temperature     OK   56 degrees C / 132 degrees F
  Temperature     OK   46 degrees C / 114 degrees F
  Temperature     OK   28 degrees C / 82 degrees F
  Firmware version 04.10
  Cooling Fan     9056 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      47       564    19
PEM 1 status:
  State          Present
PEM 2 status:
  State          Empty
PEM 3 status:
  State          Empty
PEM 4 status:
  State          Present
PEM 5 status:
  State          Online
  Airflow        Front to Back
  Temperature     OK   61 degrees C / 141 degrees F
  Temperature     OK   49 degrees C / 120 degrees F
  Temperature     OK   28 degrees C / 82 degrees F
  Firmware version 04.10
  Cooling Fan     8656 RPM
  DC Output      Voltage(V) Current(A) Power(W) Load(%)
                  12.00      51       612    21
```

show chassis environment pem (PTX1000 Packet Transport Routers)

```
user@router> show chassis environment pem
```



```

PEM 0 status:
  State                Online
  Airflow              Front to Back
  Temp Sensor 0        OK    22 degrees C / 71 degrees F
  Temp Sensor 1        OK    23 degrees C / 73 degrees F
  Fan 0                9184 RPM
  Fan 1                7936 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                      12          24          288      18

PEM 2 status:
  State                Online
  Airflow              Front to Back
  Temp Sensor 0        OK    22 degrees C / 71 degrees F
  Temp Sensor 1        OK    26 degrees C / 78 degrees F
  Fan 0                9056 RPM
  Fan 1                7808 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                      12          24          288      18

```

On PTX1000 Packet Transport Routers, you cannot view the **show chassis environment pem** output at the PEM slot level, by using the command **show chassis environment pem slot**.

show chassis environment routing-engine

- List of Syntax**
- Syntax on page 382
 - Syntax (TX Matrix Routers) on page 382
 - Syntax (TX Matrix Plus Routers) on page 382
 - Syntax (MX104, MX2010, MX2020, MX10003, MX204, and MX2008 Universal Routing Platforms) on page 382
 - Syntax (MX Series Routers) on page 382
 - Syntax (PTX Series Routers) on page 382
 - Syntax (QFX Series) on page 383
 - Syntax (OCX Series) on page 383
 - Syntax (ACX5048 and ACX5096 Routers) on page 383
 - Syntax (ACX500 Routers) on page 383
 - Syntax (EX9251, EX9253 Switches) on page 383

Syntax show chassis environment routing-engine
<slot>

Syntax (TX Matrix Routers) show chassis environment routing-engine
<lcc number | scc>
<slot>

Syntax (TX Matrix Plus Routers) show chassis environment routing-engine
<lcc number | sfc number>
<slot>

Syntax (MX104, MX2010, MX2020, MX10003, MX204, and MX2008 Universal Routing Platforms) show chassis environment routing-engine
<slot>
<satellite [fpc-slot slot-id | device-alias alias-name]

Syntax (MX Series Routers) show chassis environment routing-engine
<slot>
<all-members>
<local>
<member member-id>

Syntax (PTX Series Routers) show chassis environment routing-engine
<slot>
<all-members>
<local>
<member member-id>

Syntax (QFX Series)	show chassis environment routing-engine interconnect-device <i>name</i>
Syntax (OCX Series)	show chassis environment routing-engine interconnect-device <i>name</i>
Syntax (ACX5048 and ACX5096 Routers)	show chassis environment routing-engine
Syntax (ACX500 Routers)	show chassis environment routing-engine
Syntax (EX9251, EX9253 Switches)	show chassis environment routing-engine
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Routers and T4000 Core Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Routers.</p>
Description	Display Routing Engine environmental status information.
Options	<p>none—Display environmental information about all Routing Engines. For a TX Matrix router, display environmental information about all Routing Engines on the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display environmental information about all Routing Engines on the TX Matrix Plus router and its attached routers.</p> <p>all-members—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in all member routers in the Virtual Chassis configuration.</p>

interconnect-device *name*—(QFabric systems only) (Optional) Display environmental information about the Routing Engines for the Interconnect device.

lcc *number*—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in the specified member in the Virtual Chassis configuration. Replace *member-id* with the value of 0 or 1.

satellite [*fpc-slot slot-id* | *device-alias alias-name*]—(Junos Fusion only)(Optional) Display environmental information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc—(TX Matrix router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix router (switch-card chassis).

sfc—(TX Matrix Plus router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix Plus router (or switch-fabric chassis).

slot—(Optional) Display environmental information about an individual Routing Engine. On M10i, M20, M40e, M120, M160, M320, MX Series, MX104 routers, MX2010 routers, MX2020 routers, MX2008 routers, and T Series routers, replace *slot* with 0 or 1. On M5, M7i, M10, and M40 routers, replace *slot* with 0. On EX3200 and EX4200 standalone switches, replace *slot* with 0. On EX4200 switches in a Virtual Chassis configuration and on EX8208 and EX8216 switches, replace *slot* with 0 or 1. On the QFX3500 switch, there is only one Routing Engine, so you do not need to specify the slot number. On PTX Series Packet Transport Routers, replace *slot* with 0 or 1.

Required Privilege Level view

Related Documentation

- [request chassis routing-engine master](#)
- [show chassis routing-engine on page 698](#)

- List of Sample Output**
- [show chassis environment routing-engine \(Nonredundant\) on page 386](#)
 - [show chassis environment routing-engine \(Redundant\) on page 386](#)
 - [show chassis environment routing-engine \(MX150\) on page 386](#)
 - [show chassis environment routing-engine \(MX104 Router\) on page 386](#)
 - [show chassis environment routing-engine \(MX2010 Router\) on page 386](#)
 - [show chassis environment routing-engine \(MX2020 Router\) on page 386](#)
 - [show chassis environment routing-engine \(MX2008 Router\) on page 387](#)
 - [show chassis environment routing-engine \(TX Matrix Plus Router\) on page 387](#)
 - [show chassis environment routing-engine \(T4000 Core Router\) on page 387](#)
 - [show chassis environment routing-engine \(QFX Series and OCX Series\) on page 387](#)
 - [show chassis environment routing-engine interconnect-device \(QFabric System\) on page 388](#)
 - [show chassis environment routing-engine \(PTX5000 Packet Transport Router\) on page 388](#)
 - [show chassis environment routing-engine \(PTX10008 Router\) on page 388](#)
 - [show chassis environment routing-engine \(PTX10016 Router\) on page 388](#)
 - [show chassis environment routing-engine \(ACX5048 and ACX5096 Routers\) on page 388](#)
 - [show chassis environment routing-engine \(ACX500 Routers\) on page 389](#)
 - [show chassis environment routing-engine \(PTX5000 \(RE-PTX-X8-64G\), MX240 \(RE-S-X6-64G\), MX480 \(RE-S-X6-64G\), MX960 \(RE-S-X6-64G\), MX2010 \(RE-MX2K-X8-64G\), MX2020 \(RE-MX2K-X8-64G\) on page 389](#)
 - [show chassis environment routing-engine \(MX204 Routers\) on page 389](#)
 - [show chassis environment routing-engine \(MX10008 Routers\) on page 389](#)
 - [show chassis environment routing-engine \(EX9251 Switches\) on page 389](#)
 - [show chassis environment routing-engine \(EX9253 Switches\) on page 389](#)

Output Fields [Table 19 on page 385](#) lists the output fields for the **show chassis environment routing-engine** command. Output fields are listed in the approximate order in which they appear.

Table 19: show chassis environment routing-engine Output Fields

Field Name	Field Description
Routing engine <i>slot</i> status	Number of the Routing Engine slot: 0 or 1.
State	Status of the Routing Engine: <ul style="list-style-type: none"> • Online Master—Routing Engine is online, operating as Master. • Online Standby—Routing Engine is online, operating as Standby. • Offline—Routing Engine is offline.
Temperature	Temperature of the air flowing past the Routing Engine.
CPU Temperature	(PTX Series and T4000 Core Routers only) Temperature of the air flowing past the Routing Engine CPU.

Sample Output

show chassis environment routing-engine (Nonredundant)

```
user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           27 degrees C / 80 degrees
```

show chassis environment routing-engine (Redundant)

```
user@host> show chassis environment routing-engine

Route Engine 0 status:
  State                Online Master
  Temperature           26 degrees C / 78 degrees F
Route Engine 1 status:
  State                Online Standby
  Temperature           26 degrees C / 78 degrees F
```

show chassis environment routing-engine (MX150)

```
user@ host >show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  CPU Temperature       42 degrees C / 107 degrees F
```

show chassis environment routing-engine (MX104 Router)

```
user@ host >show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           34 degrees C / 93 degrees F
  CPU Temperature       43 degrees C / 109 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature           33 degrees C / 91 degrees F
  CPU Temperature       39 degrees C / 102 degrees F
```

show chassis environment routing-engine (MX2010 Router)

```
user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           37 degrees C / 98 degrees F
  CPU Temperature       37 degrees C / 98 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature           35 degrees C / 95 degrees F
  CPU Temperature       34 degrees C / 93 degrees F
```

show chassis environment routing-engine (MX2020 Router)

```
user@host> show chassis environment routing-engine
```

```

Routing Engine 0 status:
  State           Online Master
  Temperature      35 degrees C / 95 degrees F
  CPU Temperature  34 degrees C / 93 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      44 degrees C / 111 degrees F
  CPU Temperature  43 degrees C / 109 degrees F

```

show chassis environment routing-engine (MX2008 Router)

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State           Online Master
  CPU Temperature  75 degrees C / 167 degrees F
Routing Engine 1 status:
  State           Online Standby
  CPU Temperature  47 degrees C / 116 degrees F

```

show chassis environment routing-engine (TX Matrix Plus Router)

```

user@host> show chassis environment routing-engine

sfc0-re0:
-----
Routing Engine 0 status:
  State           Online Master
  Temperature      26 degrees C / 78 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      28 degrees C / 82 degrees F

lcc0-re0:
-----
Routing Engine 0 status:
  State           Online Master
  Temperature      30 degrees C / 86 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      29 degrees C / 84 degrees F

```

show chassis environment routing-engine (T4000 Core Router)

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State           Online Master
  Temperature      33 degrees C / 91 degrees F
  CPU Temperature  50 degrees C / 122 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      33 degrees C / 91 degrees F
  CPU Temperature  46 degrees C / 114 degrees F

```

show chassis environment routing-engine (QFX Series and OCX Series)

```

user@switch> show chassis environment routing-engine

```

```
Routing Engine 0 status:
  State           Online Master
  Temperature      42 degrees C / 107 degrees F
```

show chassis environment routing-engine interconnect-device (QFabric System)

```
user@switch> show chassis environment routing-engine interconnect-device interconnect1
routing-engine interconnect-device interconnect1
Routing Engine 0 status:
  State           Online Standby
  Temperature      52 degrees C / 125 degrees F
Routing Engine 1 status:
  State           Online Master
  Temperature      57 degrees C / 134 degrees F
```

show chassis environment routing-engine (PTX5000 Packet Transport Router)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature      55 degrees C / 131 degrees F
  CPU Temperature  66 degrees C / 150 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      52 degrees C / 125 degrees F
  CPU Temperature  64 degrees C / 147 degrees F
```

show chassis environment routing-engine (PTX10008 Router)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  CPU Temperature  40 degrees C / 104 degrees F
Routing Engine 1 status:
  State           Online Standby
  CPU Temperature  40 degrees C / 104 degrees F
```

show chassis environment routing-engine (PTX10016 Router)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  CPU Temperature  33 degrees C / 91 degrees F
Routing Engine 1 status:
  State           Online Standby
  CPU Temperature  38 degrees C / 100 degrees F
```

show chassis environment routing-engine (ACX5048 and ACX5096 Routers)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature      33 degrees C / 91 degrees F
```


show chassis environment routing-engine (ACX500 Routers)

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           54 degrees C / 129 degrees F

```

Sample Output**show chassis environment routing-engine (PTX5000 (RE-PTX-X8-64G), MX240 (RE-S-X6-64G), MX480 (RE-S-X6-64G), MX960 (RE-S-X6-64G), MX2010 (RE-MX2K-X8-64G), MX2020 (RE-MX2K-X8-64G))**

```

user@switch> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           37 degrees C / 98 degrees F
  CPU Temperature       52 degrees C / 125 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature           37 degrees C / 98 degrees F
  CPU Temperature       51 degrees C / 123 degrees F

```

show chassis environment routing-engine (MX204 Routers)

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master

```

show chassis environment routing-engine (MX10008 Routers)

```

Routing Engine 0 status:
  State                Online Master
  CPU Temperature      41 degrees C / 105 degrees F
Routing Engine 1 status:
  State                Online Standby
  CPU Temperature      40 degrees C / 104 degrees F

```

show chassis environment routing-engine (EX9251 Switches)

```

user@switch> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master

```

show chassis environment routing-engine (EX9253 Switches)

```

user@switch> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
Routing Engine 1 status:
  State                Present

```


show chassis fan

List of Syntax	Syntax on page 391
	Syntax (ACX4000 Series Router) on page 391
	Syntax (ACX5048 and ACX5096 Routers) on page 391
	Syntax (MX Series Routers) on page 391
	Syntax (T Series Routers) on page 391
	Syntax (MX104, MX204, MX2010, MX2020, MX2008, and MX10003 Universal Routing Platform) on page 391
	Syntax (MX10003 Universal Routing Platform) on page 391
	Syntax (PTX Series) on page 391
	Syntax (QFX Series) on page 392
	Syntax (OCX Series) on page 392
	Syntax (TX Matrix Router) on page 392
	Syntax (TX Matrix Plus Router) on page 392
	Syntax (EX9251, EX9253 Switches) on page 392

Syntax	show chassis fan
Syntax (ACX4000 Series Router)	show chassis fan
Syntax (ACX5048 and ACX5096 Routers)	show chassis fan
Syntax (MX Series Routers)	show chassis fan <all-members> <local> <member <i>member-id</i> >
Syntax (T Series Routers)	show chassis fan
Syntax (MX104, MX204, MX2010, MX2020, MX2008, and MX10003 Universal Routing Platform)	show chassis fan <satellite [<i>slot-id slot-id</i> [<i>device-alias alias-name</i>]]>
Syntax (MX10003 Universal Routing Platform)	show chassis fan
Syntax (PTX Series)	show chassis fan

Syntax (QFX Series)	show chassis fan <interconnect-device <i>name</i> >
Syntax (OCX Series)	show chassis fan
Syntax (TX Matrix Router)	show chassis fan <lcc <i>number</i> scc>
Syntax (TX Matrix Plus Router)	show chassis fan <lcc <i>number</i> sfc <i>number</i> >
Syntax (EX9251, EX9253 Switches)	show chassis fan
Release Information	<p>Command introduced in Junos OS Release 10.0 on MX Series 5G Universal Routing Platforms, M120 routers, and M320 routers, T320 routers, T640 routers, T1600 routers, TX Matrix Routers, and TX Matrix Plus routers.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 11.4 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for T4000 routers.</p> <p>Command introduced in Junos OS Release 12.3 for PTX5000 Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms, and ACX Series Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>satellite option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p>
Description	(T Series routers, TX Matrix routers, TX Matrix Plus routers, M120 routers, M320 routers, MX104 routers, MX2010 routers, MX2020 routers, MX2008 routers, MX Series 5G Universal Routing Platforms, QFX3008-I Interconnect devices, QFX Series, OCX Series, EX Series switches, and PTX Series Packet Transport Routers only) Show information about the fan tray and fans.
Options	<p>all-members—(MX Series routers only) (Optional) Display information about the fan tray and fans for all members of the Virtual Chassis configuration.</p> <p>local—(MX Series routers only) (Optional) Display information about the fan tray and fans for the local Virtual Chassis member.</p>

member *member-id*—(MX Series routers only) (Optional) Display information about the fan tray and fans for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* variable with a value 0 or 1.

interconnect-device *name*—(QFX3000-G QFabric systems only) (Optional) Display information about the fan tray and fans for the specified QFX3008-I Interconnect device.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display information about the fan tray and fans for the specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display information about the fan tray and fans for the specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

satellite [*slot-id slot-id* | device-alias *alias-name*]—(Junos Fusion only) (Optional) Display information about the fan tray and fans for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

scc—(TX Matrix routers only) (Optional) Display information about the fan tray and fans for the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) Display information about the fan tray and fans for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with 0.

Required Privilege Level

view

List of Sample Output

[show chassis fan on page 395](#)
[show chassis fan \(QFabric Systems\) on page 395](#)
[show chassis fan \(EX Series Switches\) on page 396](#)
[show chassis fan \(T320 Router\) on page 397](#)
[show chassis fan \(T640 Router\) on page 397](#)
[show chassis fan \(T1600 Router\) on page 398](#)
[show chassis fan \(T4000 Core Router\) on page 398](#)
[show chassis fan \(TX Matrix Router\) on page 398](#)
[show chassis fan \(TX Matrix Plus Router\) on page 399](#)

[show chassis fan \(TX Matrix Plus Router with 3D SIBs\) on page 401](#)
[show chassis fan \(PTX5000 Packet Transport Router\) on page 403](#)
[show chassis fan \(PTX10008 Router\) on page 403](#)
[show chassis fan \(MX150\) on page 404](#)
[show chassis fan \(MX104 Router\) on page 404](#)
[show chassis fan \(MX2010 Router\) on page 404](#)
[show chassis fan \(MX2020 Router\) on page 405](#)
[show chassis fan \(MX2008 Router\) on page 405](#)
[show chassis fan \(MX10003 Router\) on page 405](#)
[show chassis fan \(MX204 Router\) on page 406](#)
[show chassis fan \(MX10008 Router\) on page 406](#)
[show chassis fan \(ACX4000 Router\) on page 406](#)
[show chassis fan \(ACX5048 Router\) on page 407](#)
[show chassis fan \(QFX5100 Switch and OCX Series\) on page 407](#)
[show chassis fan \(EX9251 switches\) on page 407](#)
[show chassis fan \(EX9253 switches\) on page 407](#)

Output Fields Table 20 on page 394 lists the output fields for the **show chassis fan** command. Output fields are listed in the approximate order in which they appear.

Table 20: show chassis fan Output Fields

Field Name	Field Description
Item	Fan item identifier.
Status	Status of the fan: <ul style="list-style-type: none"> • OK—Fan is running properly and within the normal range. • Check—Fan is in Check state because of some fault or alarm condition.
RPM	(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 5G Universal Routing Platforms, QFX3108 Interconnect devices, and EX Series switches only) Fan speed in revolutions per minute (RPM).
% RPM	(MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series Packet Transport Routers only) Percentage of the fan speed being used.
Measurement	(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 5G Universal Routing Platforms, QFX3108 Interconnect devices, and EX Series switches only) Fan speed status based on different chassis cooling requirements: <ul style="list-style-type: none"> • Spinning at high speed • Spinning at intermediate speed • Spinning at normal speed • Spinning at low speed (except EX Series switches) (MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series Packet Transport Routers only) Fan speed in revolutions per minute (RPM) for each fan in the fan tray.

Sample Output

show chassis fan

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Tray Fan 1	OK	3790	Spinning at normal speed
Top Tray Fan 2	OK	3769	Spinning at normal speed
Top Tray Fan 3	OK	3769	Spinning at normal speed
Top Tray Fan 4	OK	3790	Spinning at normal speed
Top Tray Fan 5	OK	3790	Spinning at normal speed
Top Tray Fan 6	OK	3769	Spinning at normal speed
Top Tray Fan 7	OK	3790	Spinning at normal speed
Top Tray Fan 8	OK	3769	Spinning at normal speed
Top Tray Fan 9	OK	3769	Spinning at normal speed
Top Tray Fan 10	OK	3790	Spinning at normal speed
Top Tray Fan 11	OK	3790	Spinning at normal speed
Top Tray Fan 12	OK	3769	Spinning at normal speed
Bottom Tray Fan 1	OK	2880	Spinning at normal speed
Bottom Tray Fan 2	OK	2912	Spinning at normal speed
Bottom Tray Fan 3	OK	2928	Spinning at normal speed
Bottom Tray Fan 4	OK	2896	Spinning at normal speed
Bottom Tray Fan 5	OK	2896	Spinning at normal speed
Bottom Tray Fan 6	OK	2928	Spinning at normal speed

show chassis fan (QFabric Systems)

```
user@host> show chassis fan interconnect-device interconnect1
```

Item	Status	RPM	Measurement
TFT 0 Fan 0	OK	2849	Spinning at normal speed
TFT 0 Fan 1	OK	2821	Spinning at normal speed
TFT 0 Fan 2	OK	2735	Spinning at normal speed
TFT 0 Fan 3	OK	2815	Spinning at normal speed
TFT 0 Fan 4	OK	2828	Spinning at normal speed
TFT 0 Fan 5	OK	2863	Spinning at normal speed
BFT 1 Fan 0	OK	2941	Spinning at normal speed
BFT 1 Fan 1	OK	3008	Spinning at normal speed
BFT 1 Fan 2	OK	3073	Spinning at normal speed
BFT 1 Fan 3	OK	2925	Spinning at normal speed
BFT 1 Fan 4	OK	2863	Spinning at normal speed
BFT 1 Fan 5	OK	2933	Spinning at normal speed
SFT 0 Fan 0 Rotor 0	OK	15472	Spinning at normal speed
SFT 0 Fan 0 Rotor 1	OK	14477	Spinning at normal speed
SFT 0 Fan 1 Rotor 0	OK	15561	Spinning at normal speed
SFT 0 Fan 1 Rotor 1	OK	14210	Spinning at normal speed
SFT 0 Fan 2 Rotor 0	OK	16167	Spinning at normal speed
SFT 0 Fan 2 Rotor 1	OK	14248	Spinning at normal speed
SFT 0 Fan 3 Rotor 0	OK	16463	Spinning at normal speed
SFT 0 Fan 3 Rotor 1	OK	14099	Spinning at normal speed
SFT 1 Fan 0 Rotor 0	OK	15083	Spinning at normal speed
SFT 1 Fan 0 Rotor 1	OK	13533	Spinning at normal speed
SFT 1 Fan 1 Rotor 0	OK	16071	Spinning at normal speed
SFT 1 Fan 1 Rotor 1	OK	14400	Spinning at normal speed
SFT 1 Fan 2 Rotor 0	OK	15517	Spinning at normal speed
SFT 1 Fan 2 Rotor 1	OK	14210	Spinning at normal speed
SFT 1 Fan 3 Rotor 0	OK	16413	Spinning at normal speed

SFT 1 Fan 3 Rotor 1	OK	14400	Spinning at normal speed
SFT 2 Fan 0 Rotor 0	OK	15297	Spinning at normal speed
SFT 2 Fan 0 Rotor 1	OK	14634	Spinning at normal speed
SFT 2 Fan 1 Rotor 0	OK	15561	Spinning at normal speed
SFT 2 Fan 1 Rotor 1	OK	14285	Spinning at normal speed
SFT 2 Fan 2 Rotor 0	OK	15835	Spinning at normal speed
SFT 2 Fan 2 Rotor 1	OK	14400	Spinning at normal speed
SFT 2 Fan 3 Rotor 0	OK	15789	Spinning at normal speed
SFT 2 Fan 3 Rotor 1	OK	14323	Spinning at normal speed
SFT 3 Fan 0 Rotor 0	OK	16314	Spinning at normal speed
SFT 3 Fan 0 Rotor 1	OK	14876	Spinning at normal speed
SFT 3 Fan 1 Rotor 0	OK	15835	Spinning at normal speed
SFT 3 Fan 1 Rotor 1	OK	14323	Spinning at normal speed
SFT 3 Fan 2 Rotor 0	OK	16265	Spinning at normal speed
SFT 3 Fan 2 Rotor 1	OK	14594	Spinning at normal speed
SFT 3 Fan 3 Rotor 0	OK	16071	Spinning at normal speed
SFT 3 Fan 3 Rotor 1	OK	14323	Spinning at normal speed
SFT 4 Fan 0 Rotor 0	OK	15652	Spinning at normal speed
SFT 4 Fan 0 Rotor 1	OK	14438	Spinning at normal speed
SFT 4 Fan 1 Rotor 0	OK	16167	Spinning at normal speed
SFT 4 Fan 1 Rotor 1	OK	14555	Spinning at normal speed
SFT 4 Fan 2 Rotor 0	OK	16023	Spinning at normal speed
SFT 4 Fan 2 Rotor 1	OK	14361	Spinning at normal speed
SFT 4 Fan 3 Rotor 0	OK	16216	Spinning at normal speed
SFT 4 Fan 3 Rotor 1	OK	14438	Spinning at normal speed
SFT 5 Fan 0 Rotor 0	OK	15297	Spinning at normal speed
SFT 5 Fan 0 Rotor 1	OK	14173	Spinning at normal speed
SFT 5 Fan 1 Rotor 0	OK	15472	Spinning at normal speed
SFT 5 Fan 1 Rotor 1	OK	13846	Spinning at normal speed
SFT 5 Fan 2 Rotor 0	OK	15340	Spinning at normal speed
SFT 5 Fan 2 Rotor 1	OK	13917	Spinning at normal speed
SFT 5 Fan 3 Rotor 0	OK	15835	Spinning at normal speed
SFT 5 Fan 3 Rotor 1	OK	13917	Spinning at normal speed
SFT 6 Fan 0 Rotor 0	OK	15743	Spinning at normal speed
SFT 6 Fan 0 Rotor 1	OK	14594	Spinning at normal speed
SFT 6 Fan 1 Rotor 0	OK	16167	Spinning at normal speed
SFT 6 Fan 1 Rotor 1	OK	14634	Spinning at normal speed
SFT 6 Fan 2 Rotor 0	OK	16167	Spinning at normal speed
SFT 6 Fan 2 Rotor 1	OK	14516	Spinning at normal speed
SFT 6 Fan 3 Rotor 0	OK	16666	Spinning at normal speed
SFT 6 Fan 3 Rotor 1	OK	14438	Spinning at normal speed
SFT 7 Fan 0 Rotor 0	OK	15517	Spinning at normal speed
SFT 7 Fan 0 Rotor 1	OK	14438	Spinning at normal speed
SFT 7 Fan 1 Rotor 0	OK	15517	Spinning at normal speed
SFT 7 Fan 1 Rotor 1	OK	14361	Spinning at normal speed
SFT 7 Fan 2 Rotor 0	OK	16167	Spinning at normal speed
SFT 7 Fan 2 Rotor 1	OK	14555	Spinning at normal speed
SFT 7 Fan 3 Rotor 0	OK	15697	Spinning at normal speed
SFT 7 Fan 3 Rotor 1	OK	14361	Spinning at normal speed

show chassis fan (EX Series Switches)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Fan 1	OK	3477	Spinning at normal speed
Fan 2	OK	3477	Spinning at normal speed
Fan 3	OK	3479	Spinning at normal speed
Fan 4	OK	3508	Spinning at normal speed

Fan 5	OK	3517	Spinning at normal speed
Fan 6	OK	3531	Spinning at normal speed
Fan 7	OK	3439	Spinning at normal speed
Fan 8	OK	3424	Spinning at normal speed
Fan 9	OK	3413	Spinning at normal speed
Fan 10	OK	3439	Spinning at normal speed
Fan 11	OK	3446	Spinning at normal speed
Fan 12	OK	3432	Spinning at normal speed

show chassis fan (T320 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	2850	Spinning at normal speed
Top Left Middle fan	OK	2820	Spinning at normal speed
Top Left Rear fan	OK	2970	Spinning at normal speed
Top Right Front fan	OK	2790	Spinning at normal speed
Top Right Middle fan	OK	2640	Spinning at normal speed
Top Right Rear fan	OK	2790	Spinning at normal speed
Bottom Left Front fan	OK	2520	Spinning at normal speed
Bottom Left Middle fan	OK	2610	Spinning at normal speed
Bottom Left Rear fan	OK	2550	Spinning at normal speed
Bottom Right Front fan	OK	2610	Spinning at normal speed
Bottom Right Middle fan	OK	2880	Spinning at normal speed
Bottom Right Rear fan	OK	2790	Spinning at normal speed
Rear Tray Top fan	OK	2130	Spinning at normal speed
Rear Tray Second fan	OK	2190	Spinning at normal speed
Rear Tray Middle fan	OK	2250	Spinning at normal speed
Rear Tray Fourth fan	OK	2220	Spinning at normal speed
Rear Tray Bottom fan	OK	2280	Spinning at normal speed

show chassis fan (T640 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3390	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3390	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	5220	Spinning at normal speed
Rear Tray Second fan	OK	5220	Spinning at normal speed
Rear Tray Third fan	OK	5220	Spinning at normal speed
Rear Tray Fourth fan	OK	5220	Spinning at normal speed
Rear Tray Fifth fan	OK	5220	Spinning at normal speed
Rear Tray Sixth fan	OK	5220	Spinning at normal speed
Rear Tray Seventh fan	OK	5220	Spinning at normal speed
Rear Tray Bottom fan	OK	5220	Spinning at normal speed

show chassis fan (T1600 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3450	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3390	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3390	Spinning at normal speed
Bottom Right Middle fan	OK	3420	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	5190	Spinning at normal speed
Rear Tray Second fan	OK	5190	Spinning at normal speed
Rear Tray Third fan	OK	5190	Spinning at normal speed
Rear Tray Fourth fan	OK	5190	Spinning at normal speed
Rear Tray Fifth fan	OK	5190	Spinning at normal speed
Rear Tray Sixth fan	OK	5190	Spinning at normal speed
Rear Tray Seventh fan	OK	5190	Spinning at normal speed
Rear Tray Bottom fan	OK	5190	Spinning at normal speed

show chassis fan (T4000 Core Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	5190	Spinning at high speed
Top Left Middle fan	OK	5220	Spinning at high speed
Top Left Rear fan	OK	5190	Spinning at high speed
Top Right Front fan	OK	5160	Spinning at high speed
Top Right Middle fan	OK	5190	Spinning at high speed
Top Right Rear fan	OK	5160	Spinning at high speed
Bottom Left Front fan	OK	6030	Spinning at high speed
Bottom Left Middle fan	OK	6090	Spinning at high speed
Bottom Left Rear fan	OK	6090	Spinning at high speed
Bottom Right Front fan	OK	6030	Spinning at high speed
Bottom Right Middle fan	OK	6060	Spinning at high speed
Bottom Right Rear fan	OK	6060	Spinning at high speed
Rear Tray Top fan	OK	10000	Spinning at high speed
Rear Tray Second fan	OK	10000	Spinning at high speed
Rear Tray Third fan	OK	10000	Spinning at high speed
Rear Tray Fourth fan	OK	10000	Spinning at high speed
Rear Tray Fifth fan	OK	10000	Spinning at high speed
Rear Tray Sixth fan	OK	10000	Spinning at high speed
Rear Tray Seventh fan	OK	10000	Spinning at high speed
Rear Tray Bottom fan	OK	10000	Spinning at high speed

show chassis fan (TX Matrix Router)

```
user@host> show chassis fan
```

```
scc-re0:
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3390	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3390	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3450	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3420	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray Top fan	OK	3420	Spinning at normal speed
Rear Tray Second fan	OK	5190	Spinning at normal speed
Rear Tray Third fan	OK	5190	Spinning at normal speed
Rear Tray Fourth fan	OK	5190	Spinning at normal speed
Rear Tray Fifth fan	OK	3420	Spinning at normal speed
Rear Tray Sixth fan	OK	3420	Spinning at normal speed
Rear Tray Seventh fan	OK	3420	Spinning at normal speed
Rear Tray Bottom fan	OK	3420	Spinning at normal speed

lcc2-re0:

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3450	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3450	Spinning at normal speed
Top Right Rear fan	OK	3360	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3480	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray Top fan	OK	3420	Spinning at normal speed
Rear Tray Second fan	OK	3420	Spinning at normal speed
Rear Tray Third fan	OK	3420	Spinning at normal speed
Rear Tray Fourth fan	OK	3420	Spinning at normal speed
Rear Tray Fifth fan	OK	3420	Spinning at normal speed
Rear Tray Sixth fan	OK	3420	Spinning at normal speed
Rear Tray Seventh fan	OK	3420	Spinning at normal speed
Rear Tray Bottom fan	OK	3420	Spinning at normal speed

show chassis fan (TX Matrix Plus Router)

user@host> show chassis fan

sfc0-re0:

Item	Status	RPM	Measurement
Fan Tray 0 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 0 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 0 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 0 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 0 Fan 5	OK	4350	Spinning at normal speed
Fan Tray 0 Fan 6	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 1	OK	4410	Spinning at normal speed

Fan Tray 1 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 5	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 1	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 4	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 8	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 9	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 3 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 3 Fan 4	OK	4440	Spinning at normal speed
Fan Tray 3 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 3 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 3 Fan 8	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 9	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 1	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 2	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 4 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 4 Fan 5	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 8	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 9	OK	4410	Spinning at normal speed
Fan Tray 5 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 5 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 4	OK	4350	Spinning at normal speed
Fan Tray 5 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 5 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 5 Fan 8	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 9	OK	4410	Spinning at normal speed

1cc0-re0:

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3450	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3420	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	7050	Spinning at normal speed
Rear Tray Second fan	OK	7050	Spinning at normal speed
Rear Tray Third fan	OK	7050	Spinning at normal speed

Rear Tray Fourth fan	OK	7050	Spinning at normal speed
Rear Tray Fifth fan	OK	7050	Spinning at normal speed
Rear Tray Sixth fan	OK	7050	Spinning at normal speed
Rear Tray Seventh fan	OK	7050	Spinning at normal speed
Rear Tray Bottom fan	OK	7050	Spinning at normal speed

show chassis fan (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fan
```

```
sfc0-re0:
```

Item	Status	RPM	Measurement
Fan Tray 0 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 0 Fan 2	OK	4860	Spinning at normal speed
Fan Tray 0 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 0 Fan 4	OK	4800	Spinning at normal speed
Fan Tray 0 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 0 Fan 6	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 1	OK	4800	Spinning at normal speed
Fan Tray 1 Fan 2	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 3	OK	4800	Spinning at normal speed
Fan Tray 1 Fan 4	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 5	OK	4770	Spinning at normal speed
Fan Tray 1 Fan 6	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 1	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 2	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 6	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 7	OK	4800	Spinning at normal speed
Fan Tray 2 Fan 8	OK	4830	Spinning at normal speed
Fan Tray 2 Fan 9	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 1	OK	4860	Spinning at normal speed
Fan Tray 3 Fan 2	OK	4860	Spinning at normal speed
Fan Tray 3 Fan 3	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 6	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 7	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 8	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 9	OK	4800	Spinning at normal speed
Fan Tray 4 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 2	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 6	OK	4860	Spinning at normal speed
Fan Tray 4 Fan 7	OK	4800	Spinning at normal speed
Fan Tray 4 Fan 8	OK	4860	Spinning at normal speed
Fan Tray 4 Fan 9	OK	4770	Spinning at normal speed
Fan Tray 5 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 2	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 4	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 5	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 6	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 7	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 8	OK	4830	Spinning at normal speed

Fan Tray 5 Fan 9		Check	2010
lcc0-re0:			
Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3390	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3390	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray fan 1 (Top)	OK	7740	Spinning at normal speed
Rear Tray fan 2	OK	7740	Spinning at normal speed
Rear Tray fan 3	OK	7740	Spinning at normal speed
Rear Tray fan 4	OK	7740	Spinning at normal speed
Rear Tray fan 5	OK	7740	Spinning at normal speed
Rear Tray fan 6	OK	7740	Spinning at normal speed
Rear Tray fan 7	OK	7740	Spinning at normal speed
Rear Tray fan 8	OK	7740	Spinning at normal speed
Rear Tray fan 9	OK	7740	Spinning at normal speed
Rear Tray fan 10	OK	7740	Spinning at normal speed
Rear Tray fan 11	OK	7740	Spinning at normal speed
Rear Tray fan 12	OK	7740	Spinning at normal speed
Rear Tray fan 13	OK	7740	Spinning at normal speed
Rear Tray fan 14	OK	7740	Spinning at normal speed
Rear Tray fan 15	OK	7740	Spinning at normal speed
Rear Tray fan 16 (Bottom)	OK	7740	Spinning at normal speed
lcc2-re0:			
Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3390	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray fan 1 (Top)	OK	7740	Spinning at normal speed
Rear Tray fan 2	OK	7740	Spinning at normal speed
Rear Tray fan 3	OK	7740	Spinning at normal speed
Rear Tray fan 4	OK	7740	Spinning at normal speed
Rear Tray fan 5	OK	7740	Spinning at normal speed
Rear Tray fan 6	OK	7740	Spinning at normal speed
Rear Tray fan 7	OK	7740	Spinning at normal speed
Rear Tray fan 8	OK	7740	Spinning at normal speed
Rear Tray fan 9	OK	7740	Spinning at normal speed
Rear Tray fan 10	OK	7740	Spinning at normal speed
Rear Tray fan 11	OK	7740	Spinning at normal speed

Rear Tray fan 12	OK	7740	Spinning at normal speed
Rear Tray fan 13	OK	7740	Spinning at normal speed
Rear Tray fan 14	OK	7740	Spinning at normal speed
Rear Tray fan 15	OK	7740	Spinning at normal speed
Rear Tray fan 16 (Bottom)	OK	7740	Spinning at normal speed

show chassis fan (PTX5000 Packet Transport Router)

```
user@host> show chassis fan
```

```
user@host> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	29%	2700 RPM
Fan Tray 0 Fan 2	OK	29%	2700 RPM
Fan Tray 0 Fan 3	OK	29%	2742 RPM
Fan Tray 0 Fan 4	OK	29%	2700 RPM
Fan Tray 0 Fan 5	OK	30%	2828 RPM
Fan Tray 0 Fan 6	OK	30%	2828 RPM
Fan Tray 0 Fan 7	OK	29%	2700 RPM
Fan Tray 0 Fan 8	OK	30%	2785 RPM
Fan Tray 0 Fan 9	OK	30%	2828 RPM
Fan Tray 0 Fan 10	OK	30%	2828 RPM
Fan Tray 0 Fan 11	OK	30%	2785 RPM
Fan Tray 0 Fan 12	OK	30%	2828 RPM
Fan Tray 0 Fan 13	OK	31%	2871 RPM
Fan Tray 0 Fan 14	OK	30%	2828 RPM
Fan Tray 1 Fan 1	OK	42%	3033 RPM
Fan Tray 1 Fan 2	OK	42%	3066 RPM
Fan Tray 1 Fan 3	OK	43%	3099 RPM
Fan Tray 1 Fan 4	OK	43%	3166 RPM
Fan Tray 1 Fan 5	OK	45%	3266 RPM
Fan Tray 1 Fan 6	OK	43%	3133 RPM
Fan Tray 2 Fan 1	OK	29%	2099 RPM
Fan Tray 2 Fan 2	OK	30%	2199 RPM
Fan Tray 2 Fan 3	OK	30%	2166 RPM
Fan Tray 2 Fan 4	OK	33%	2399 RPM
Fan Tray 2 Fan 5	OK	29%	2133 RPM
Fan Tray 2 Fan 6	OK	32%	2366 RPM

show chassis fan (PTX10008 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Fan Tray 0 Fan 0	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 1	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 2	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 3	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 4	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 5	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 6	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 7	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 8	OK	8850	Spinning at normal speed
Fan Tray 0 Fan 9	OK	8850	Spinning at normal speed
Fan Tray 0 Fan 10	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 0	OK	9150	Spinning at normal speed
Fan Tray 1 Fan 1	OK	9150	Spinning at normal speed
Fan Tray 1 Fan 2	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 3	OK	9000	Spinning at normal speed

Fan Tray 1 Fan 4	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 5	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 6	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 7	OK	9150	Spinning at normal speed
Fan Tray 1 Fan 8	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 9	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 10	OK	9000	Spinning at normal speed

show chassis fan (MX150)

user@host > show chassis fan

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	7419	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	7419	Spinning at normal speed

show chassis fan (MX104 Router)

user@host > show chassis fan

Item	Status	RPM	Measurement
Fan 1	OK	5640	Spinning at normal speed
Fan 2	OK	5640	Spinning at normal speed
Fan 3	OK	5760	Spinning at normal speed
Fan 4	OK	5640	Spinning at normal speed
Fan 5	OK	5640	Spinning at normal speed

show chassis fan (MX2010 Router)

user@host > show chassis fan

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	37%	3360 RPM
Fan Tray 0 Fan 2	OK	38%	3480 RPM
Fan Tray 0 Fan 3	OK	37%	3360 RPM
Fan Tray 0 Fan 4	OK	37%	3360 RPM
Fan Tray 0 Fan 5	OK	38%	3480 RPM
Fan Tray 0 Fan 6	OK	37%	3360 RPM
Fan Tray 1 Fan 1	OK	38%	3480 RPM
Fan Tray 1 Fan 2	OK	40%	3600 RPM
Fan Tray 1 Fan 3	OK	38%	3480 RPM
Fan Tray 1 Fan 4	OK	38%	3480 RPM
Fan Tray 1 Fan 5	OK	38%	3480 RPM
Fan Tray 1 Fan 6	OK	38%	3480 RPM
Fan Tray 2 Fan 1	OK	38%	3480 RPM
Fan Tray 2 Fan 2	OK	41%	3720 RPM
Fan Tray 2 Fan 3	OK	38%	3480 RPM
Fan Tray 2 Fan 4	OK	38%	3480 RPM
Fan Tray 2 Fan 5	OK	38%	3480 RPM
Fan Tray 2 Fan 6	OK	38%	3480 RPM
Fan Tray 3 Fan 1	OK	38%	3480 RPM
Fan Tray 3 Fan 2	OK	40%	3600 RPM
Fan Tray 3 Fan 3	OK	40%	3600 RPM
Fan Tray 3 Fan 4	OK	40%	3600 RPM
Fan Tray 3 Fan 5	OK	40%	3600 RPM
Fan Tray 3 Fan 6	OK	38%	3480 RPM

show chassis fan (MX2020 Router)

user@host > show chassis fan

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	37%	3360 RPM
Fan Tray 0 Fan 2	OK	37%	3360 RPM
Fan Tray 0 Fan 3	OK	36%	3240 RPM
Fan Tray 0 Fan 4	OK	37%	3360 RPM
Fan Tray 0 Fan 5	OK	37%	3360 RPM
Fan Tray 0 Fan 6	OK	37%	3360 RPM
Fan Tray 1 Fan 1	OK	37%	3360 RPM
Fan Tray 1 Fan 2	OK	37%	3360 RPM
Fan Tray 1 Fan 3	OK	37%	3360 RPM
Fan Tray 1 Fan 4	OK	37%	3360 RPM
Fan Tray 1 Fan 5	OK	37%	3360 RPM
Fan Tray 1 Fan 6	OK	36%	3240 RPM
Fan Tray 2 Fan 1	OK	37%	3360 RPM
Fan Tray 2 Fan 2	OK	37%	3360 RPM
Fan Tray 2 Fan 3	OK	37%	3360 RPM
Fan Tray 2 Fan 4	OK	37%	3360 RPM
Fan Tray 2 Fan 5	OK	37%	3360 RPM
Fan Tray 2 Fan 6	OK	38%	3480 RPM
Fan Tray 3 Fan 1	OK	38%	3480 RPM
Fan Tray 3 Fan 2	OK	38%	3480 RPM
Fan Tray 3 Fan 3	OK	38%	3480 RPM
Fan Tray 3 Fan 4	OK	37%	3360 RPM
Fan Tray 3 Fan 5	OK	37%	3360 RPM
Fan Tray 3 Fan 6	OK	37%	3360 RPM

show chassis fan (MX2008 Router)

user@host > show chassis fan

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	64%	5760 RPM
Fan Tray 0 Fan 2	OK	62%	5640 RPM
Fan Tray 0 Fan 3	OK	64%	5760 RPM
Fan Tray 0 Fan 4	OK	60%	5400 RPM
Fan Tray 0 Fan 5	OK	61%	5520 RPM
Fan Tray 0 Fan 6	OK	62%	5640 RPM
Fan Tray 1 Fan 1	OK	61%	5520 RPM
Fan Tray 1 Fan 2	OK	61%	5520 RPM
Fan Tray 1 Fan 3	OK	61%	5520 RPM
Fan Tray 1 Fan 4	OK	62%	5640 RPM
Fan Tray 1 Fan 5	OK	62%	5640 RPM
Fan Tray 1 Fan 6	OK	64%	5760 RPM

show chassis fan (MX10003 Router)

user@host> show chassis fan

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	7296 RPM
Fan Tray 0 Fan 1	OK	40%	6656 RPM
Fan Tray 0 Fan 2	OK	40%	7296 RPM
Fan Tray 0 Fan 3	OK	40%	6400 RPM
Fan Tray 1 Fan 0	OK	40%	7296 RPM
Fan Tray 1 Fan 1	OK	40%	6528 RPM

Fan Tray 1 Fan 2	OK	40%	7296 RPM
Fan Tray 1 Fan 3	OK	40%	6784 RPM
Fan Tray 2 Fan 0	OK	40%	7552 RPM
Fan Tray 2 Fan 1	OK	40%	6784 RPM
Fan Tray 2 Fan 2	OK	40%	7424 RPM
Fan Tray 2 Fan 3	OK	40%	6528 RPM
Fan Tray 3 Fan 0	OK	40%	7552 RPM
Fan Tray 3 Fan 1	OK	40%	6528 RPM
Fan Tray 3 Fan 2	OK	40%	7296 RPM
Fan Tray 3 Fan 3	OK	40%	6656 RPM

show chassis fan (MX204 Router)

```
user@host> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	9344 RPM
Fan Tray 0 Fan 1	OK	40%	8576 RPM
Fan Tray 1 Fan 0	OK	40%	9344 RPM
Fan Tray 1 Fan 1	OK	40%	8832 RPM
Fan Tray 2 Fan 0	OK	40%	9344 RPM
Fan Tray 2 Fan 1	OK	40%	8576 RPM

show chassis fan (MX10008 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Fan Tray 0 Fan 0	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 1	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 2	OK	9900	Spinning at normal speed
Fan Tray 0 Fan 3	OK	9600	Spinning at normal speed
Fan Tray 0 Fan 4	Failed		
Fan Tray 0 Fan 5	Failed		
Fan Tray 0 Fan 6	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 7	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 8	OK	9600	Spinning at normal speed
Fan Tray 0 Fan 9	OK	9600	Spinning at normal speed
Fan Tray 0 Fan 10	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 0	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 1	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 2	OK	9750	Spinning at normal speed
Fan Tray 1 Fan 3	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 4	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 5	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 6	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 7	OK	9750	Spinning at normal speed
Fan Tray 1 Fan 8	OK	9750	Spinning at normal speed
Fan Tray 1 Fan 9	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 10	OK	9600	Spinning at normal speed

show chassis fan (ACX4000 Router)

```
user@host > show chassis fan
```

Item	Status	RPM	Measurement
Fan 1	OK	4140	Spinning at normal speed
Fan 2	OK	4200	Spinning at normal speed

show chassis fan (ACX5048 Router)

```
user@host > show chassis fan
```

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	18305	Spinning at normal speed
FPC 0 Tray 0 Fan 1	OK	15743	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	18305	Spinning at normal speed
FPC 0 Tray 1 Fan 1	OK	15606	Spinning at normal speed
FPC 0 Tray 2 Fan 0	OK	19014	Spinning at normal speed
FPC 0 Tray 2 Fan 1	OK	16167	Spinning at normal speed
FPC 0 Tray 3 Fan 0	OK	18947	Spinning at normal speed
FPC 0 Tray 3 Fan 1	OK	16265	Spinning at normal speed
FPC 0 Tray 4 Fan 0	OK	18120	Spinning at normal speed
FPC 0 Tray 4 Fan 1	OK	15743	Spinning at normal speed

show chassis fan (QFX5100 Switch and OCX Series)

```
user@switch > show chassis fan
```

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	6428	Spinning at normal speed
FPC 0 Tray 0 Fan 1	OK	5515	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	6360	Spinning at normal speed
FPC 0 Tray 1 Fan 1	OK	5532	Spinning at normal speed

show chassis fan (EX9251 switches)

```
user@switch > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	9600 RPM
Fan Tray 0 Fan 1	OK	40%	8832 RPM
Fan Tray 1 Fan 0	OK	40%	9728 RPM
Fan Tray 1 Fan 1	OK	40%	9088 RPM
Fan Tray 2	Absent		

show chassis fan (EX9253 switches)

```
user@switch > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	7552 RPM
Fan Tray 0 Fan 1	OK	40%	6272 RPM
Fan Tray 0 Fan 2	OK	40%	7552 RPM
Fan Tray 0 Fan 3	OK	40%	6272 RPM
Fan Tray 1 Fan 0	OK	40%	7552 RPM
Fan Tray 1 Fan 1	OK	40%	6272 RPM
Fan Tray 1 Fan 2	OK	40%	7552 RPM
Fan Tray 1 Fan 3	OK	40%	6272 RPM
Fan Tray 2 Fan 0	OK	40%	7552 RPM
Fan Tray 2 Fan 1	OK	40%	6400 RPM
Fan Tray 2 Fan 2	OK	40%	7552 RPM

Fan Tray 2 Fan 3	OK	40%	6272 RPM
Fan Tray 3 Fan 0	OK	40%	7552 RPM
Fan Tray 3 Fan 1	OK	40%	6400 RPM
Fan Tray 3 Fan 2	OK	40%	7552 RPM
Fan Tray 3 Fan 3	OK	40%	6272 RPM

show chassis firmware

List of Syntax	Syntax on page 409 Syntax (TX Matrix Routers) on page 409 Syntax (TX Matrix Plus Routers) on page 409 Syntax (MX Series Routers) on page 409 Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms) on page 409 Syntax (MX10008 Universal Routing Platforms) on page 409 Syntax (PTX Series) on page 409 Syntax (QFX Series) on page 410 Syntax (OCX Series) on page 410 Syntax (ACX Series Universal Metro Routers) on page 410 Syntax (ACX5048 and ACX5096 Routers) on page 410 Syntax (ACX500 Routers) on page 410 Syntax (EX Series Switches) on page 410
-----------------------	---

Syntax	show chassis firmware
---------------	-----------------------

Syntax (TX Matrix Routers)	show chassis firmware <lcc <i>number</i> scc>
-----------------------------------	--

Syntax (TX Matrix Plus Routers)	show chassis firmware <lcc <i>number</i> sfc <i>number</i> >
--	---

Syntax (MX Series Routers)	show chassis firmware <all-members> <local> <member <i>member-id</i> >
-----------------------------------	---

Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms)	show chassis firmware <satellite [slot-id <i>slot-id</i> device-alias <i>alias-name</i>]>
---	---

Syntax (MX10008 Universal Routing Platforms)	show chassis firmware
---	-----------------------

Syntax (PTX Series)	show chassis firmware
----------------------------	-----------------------

Syntax (QFX Series)	show chassis firmware interconnect-device <i>name</i> node-device <i>name</i>
Syntax (OCX Series)	show chassis firmware
Syntax (ACX Series Universal Metro Routers)	show chassis firmware
Syntax (ACX5048 and ACX5096 Routers)	show chassis firmware interconnect-device <i>name</i> node-device <i>name</i>
Syntax (ACX500 Routers)	show chassis firmware
Syntax (EX Series Switches)	show chassis firmware <detail> <satellite [slot-id <i>slot-id</i> device-alias <i>alias-name</i>]>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced for EX8200 switches in Junos OS Release 10.2 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms, and ACX4000 Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.</p> <p>satellite option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p>

Description On routers and switches, display the version levels of the firmware running on the System Control Board (SCB), Switching and Forwarding Module (SFM), System and Switch Board (SSB), Forwarding Engine Board (FEB), Flexible PIC Concentrators (FPCs), and Routing Engines. On a TX Matrix Plus router, display the version levels of the firmware running on the FPCs and the Switch Processor Mezzanine Board (SPMBs).

On EX2200, EX3200, EX4200, QFX Series, and OCX Series switches, display the version levels of the firmware running on the switch. On an EX8208 switch, display the version levels of the firmware running on the Switch Fabric and Routing Engine (SRE) modules and on the line cards (shown as FPCs). On an EX8216 switch, display the version levels of the firmware running on the Routing Engine (RE) modules and on the line cards (shown as FPCs).

Options **none**—Display the version levels of the firmware running. For an EX4200 switch that is a member of a Virtual Chassis, display version levels for all members. For a TX Matrix router, display version levels for the firmware on the TX Matrix router and on all the T640 routers connected to the TX Matrix router. For a TX Matrix Plus router, display version levels for the firmware on the TX Matrix Plus router and on all the routers connected to the TX Matrix Plus router.

all-members—(MX Series routers only) (Optional) Display the version levels of the firmware running for all members of the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems) (Optional) Display the version levels of the firmware running on the Interconnect device.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display version levels for the firmware on a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display the version levels for the firmware on a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display the version levels of the firmware running for the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display the version levels of the firmware running for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device—(QFabric systems only) (Optional) Display the version levels of the firmware running on the Node device.

satellite [*slot-id slot-id* | *device-alias alias-name*]—(Junos Fusion only) (Optional) Display version levels of the firmware running for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

scc—(TX Matrix router only) (Optional) Display version levels for the firmware on the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus router only) (Optional) Display version levels for the firmware on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

detail—(EX3200, EX3300, EX4200, and EX4500 standalone and Virtual Chassis member switches only) (Optional) Display version levels of the firmware running on the switch for its programmable hardware components.

Required Privilege Level view

List of Sample Output

- [show chassis firmware \(M10 Router\) on page 414](#)
- [show chassis firmware \(M20 Router\) on page 414](#)
- [show chassis firmware \(M40 Router\) on page 414](#)
- [show chassis firmware \(M120 Router\) on page 414](#)
- [show chassis firmware \(M160 Router\) on page 414](#)
- [show chassis firmware \(MX150\) on page 415](#)
- [show chassis firmware \(MX104 Router\) on page 415](#)
- [show chassis firmware \(MX240 Router\) on page 415](#)
- [show chassis firmware \(MX480 Router\) on page 415](#)
- [show chassis firmware \(MX960 Router\) on page 415](#)
- [show chassis firmware \(MX2010 Router\) on page 415](#)
- [show chassis firmware \(MX2020 Router\) on page 416](#)
- [show chassis firmware \(MX2008 Router\) on page 417](#)
- [show chassis firmware \(MX10003\) on page 417](#)
- [show chassis firmware \(MX204 Router\) on page 417](#)
- [show chassis firmware \(MX10008 Router\) on page 418](#)
- [show chassis firmware \(MX240, MX480, MX960 Router with Application Services Modular Line Card\) on page 419](#)
- [show chassis firmware \(EX4200 Switch\) on page 419](#)
- [show chassis firmware \(EX8200 Switch\) on page 419](#)
- [show chassis firmware \(EX9200 Switch\) on page 419](#)
- [show chassis firmware \(EX9251 Switch\) on page 419](#)
- [show chassis firmware \(EX9253 Switch\) on page 420](#)
- [show chassis firmware lcc \(TX Matrix Router\) on page 420](#)
- [show chassis firmware scc \(TX Matrix Router\) on page 420](#)
- [show chassis firmware \(TX Matrix Plus Router\) on page 420](#)

[show chassis firmware lcc \(TX Matrix Plus Router\) on page 422](#)
[show chassis firmware sfc \(TX Matrix Plus Router\) on page 422](#)
[show chassis firmware \(QFX Series and OCX Series\) on page 423](#)
[show chassis firmware \(PTX1000 Packet Transport Routers\) on page 423](#)
[show chassis firmware \(PTX10008 Routers\) on page 423](#)
[show chassis firmware interconnect-device \(QFabric System\) on page 424](#)
[show chassis firmware \(ACX2000 Universal Metro Router\) on page 424](#)
[show chassis firmware detail \(EX3300 Switch\) on page 424](#)
[show chassis firmware \(MX Routers with Media Services Blade \[MSB\]\) on page 424](#)
[show chassis firmware \(ACX5048 Router\) on page 424](#)
[show chassis firmware \(ACX5096 Router\) on page 425](#)
[show chassis firmware \(ACX500 Router\) on page 425](#)

Output Fields Table 21 on page 413 lists the output fields for the show chassis firmware command. Output fields are listed in the approximate order in which they appear.

Table 21: show chassis firmware Output Fields

Field Name	Field Description
Part	(MX Series, MX2010, MX2020, and MX2008 routers) Chassis part name.
Type	(MX Series, MX2010, MX2020, and MX2008 routers) Type of firmware: On routers: ROM or O/S. On switches: uboot or loader.
Version	(MX Series, MX2010, MX2020, and MX2008 routers) Version of firmware running on the chassis part.
FPC	(<i>detail</i> option only) Number of FPC. For a standalone switch, the value is 0. For a Virtual Chassis configuration, value in the range of 0-9; refers to the member ID assigned to the switch.
AFEB	(MX104 routers) Version of the compact Forwarding Engine Board.
Boot	(<i>detail</i> option only) Version of the SYSPLD.
PoE	(<i>detail</i> option only) Version of the PoE firmware.
PFE-<number>	(<i>detail</i> option only) Version of the Packet Forwarding Engine used in the switch.
PHY-	(<i>detail</i> option only) Version of the physical layer device (PHY) used in the switch.
microcode	(<i>detail</i> option only) Microcode of the physical layer devices (PHY) used in the switch.
uboot	(<i>detail</i> option only) Version of the u-boot used in the switch.
loader	(<i>detail</i> option only) Version of the loader used in the switch.

Sample Output

show chassis firmware (M10 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
Forwarding engine board	ROM	Juniper ROM Monitor Version 4.1b2
	O/S	Version 4.1I1 by usera on 2000-04-24 11:27

show chassis firmware (M20 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
System switch board	ROM	Juniper ROM Monitor Version 3.4b26
	O/S	Version 3.4I16 by userc on 2000-02-29 2
FPC 1	ROM	Juniper ROM Monitor Version 3.0b1
	O/S	Version 3.4I4 by userc on 2000-02-25 21
FPC 2	ROM	Juniper ROM Monitor Version 3.0b1
	O/S	Version 3.4I4 by userc on 2000-02-25 21

show chassis firmware (M40 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
System control board	ROM	Juniper ROM Monitor Version 2.0i126Copyri
	O/S	Version 2.0i1 by root on Thu Jul 23 00:51
FPC 5	ROM	Juniper ROM Monitor Version 2.0i49Copyrig
	O/S	Version 2.0i1 by root on Thu Jul 23 00:59

show chassis firmware (M120 Router)

```
user@host> show chassis firmware
```

FPC 2	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:2
FPC 3	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:2
FPC 4	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:2
FEB 3	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:1
FEB 4	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:1

show chassis firmware (M160 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
SFM 0	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by usera on 2000-02-29 11:50
SFM 1	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by usera on 2000-02-29 11:50
FPC 0	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by usera on 2000-02-29 11:56
FPC 1	ROM	Juniper ROM Monitor Version 4.0b2

FPC 2	O/S	Version 4.0I1 by usera on 2000-02-29 11:56
	ROM	Juniper ROM Monitor Version 4.0b3
	O/S	Version 4.0I1 by usera on 2000-02-29 11:56

show chassis firmware (MX150)

```
user@host > show chassis firmware
```

Part	Type	Version
FPC	ROM	PC Bios
	O/S	Version 17.2I20170220_0929_rohitn by rohitn
on 2017-02-20 09:38:59 UTC		

show chassis firmware (MX104 Router)

```
user@host > show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-
FPC 1	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-
FPC 2	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-
AFEB	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-

show chassis firmware (MX240 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20080103.0 by userb on 2008-0
FPC 2	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20080103.0 by userb on 2008-0

show chassis firmware (MX480 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20070916.3 by userb on 2007-0

show chassis firmware (MX960 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 4	ROM	Juniper ROM Monitor Version 8.0b8
	O/S	Version 8.2I59 by user3 on 2006-10-31 19:22
FPC 7	ROM	Juniper ROM Monitor Version 8.2b1
	O/S	Version 8.2-20061026.1 by userb on 2006-1

show chassis firmware (MX2010 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 12.3b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 1	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 2	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 3	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 4	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 5	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 6	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 7	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 8	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 9	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
SPMB 0	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
SPMB 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20121220.0 by userb on 2012-

show chassis firmware (MX2020 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 1	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 2	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 3	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 4	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 5	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 6	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 7	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 8	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 9	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 10	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 11	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 12	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 13	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 14	ROM	Juniper ROM Monitor Version 10.0b39

FPC 15	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 16	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 17	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 18	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 19	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
SPMB 0	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 12.1b1
SPMB 1	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20130415.0 by userb on 2013-

show chassis firmware (MX2008 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:15:48 UTC		
FPC 3	ROM	Juniper ROM Monitor Version 13.3b1
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:16:31 UTC		
FPC 5	ROM	Juniper ROM Monitor Version 13.3b1
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:16:31 UTC		
FPC 7	ROM	Juniper ROM Monitor Version 11.4b2
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:15:48 UTC		
FPC 9	ROM	Juniper ROM Monitor Version 13.2b1
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:15:58 UTC		

show chassis firmware (MX10003)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_SUM0_00.11.01
	RE-FPGA	402
RE 1	PRI BIOS	CBEP_P_SUM0_00.11.01
	RE-FPGA	301
FPC 0	ROM	PC Bios
	O/S	Version 17.3-20170719.0 by builder on
2017-07-19 01:27:58 UTC		
FPC 1	ROM	PC Bios
	O/S	Version 17.3-20170719.0 by builder on
2017-07-19 01:27:58 UTC		

show chassis firmware (MX204 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_SUM1_00.11.01
	RE-FPGA	300
FPC	ROM	PC Bios
	O/S	Version 17.4I20171105_0609_aahluwalia by aahluwalia on 2017-11-05 06:09:28 UTC

show chassis firmware (MX10008 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_VAL0_00.14.1
	FPGA	264.0
	RE-FPGA	41.0
	RE-SSD1	SF-SBR12050
	RE-SSD2	SF-SBR12050
	i40e-NVM	6.01
RE 1	PRI BIOS	CBEP_P_VAL0_00.13.01
	FPGA	261.0
	RE-FPGA	41.0
	RE-SSD1	SF-SBR12034
	RE-SSD2	SF-SBR12034
	i40e-NVM	5.02
FPC 0	ROM	PC Bios
	O/S	Version 18.4-20180716_dev_common.0 by builder on 2018-07-16 00:43:35 UTC
	ROM Monitor	0 9.14.0
	PCIE Sw(0)	1.0.0
	MPCS(0)	0.2.0
	I2CS CPLD	0.4.0
	BOOT CPLD	0.4.0
FPC 2	ROM	PC Bios
	O/S	Version 18.4-20180716_dev_common.0 by builder on 2018-07-16 00:43:35 UTC
	ROM Monitor	0 9.14.0
	PCIE Sw(0)	1.0.0
	MPCS(0)	0.2.0
	I2CS CPLD	0.4.0
	BOOT CPLD	0.4.0
FPC 3	ROM	PC Bios
	O/S	Version 18.4-20180716_dev_common.0 by builder on 2018-07-16 00:43:35 UTC
	ROM Monitor	0 9.14.0
	PCIE Sw(0)	1.0.0
	MPCS(0)	0.4.0
	I2CS CPLD	0.8.0
	BOOT CPLD	0.8.0
FPM	FPGA	1.9
FTC 0	FPGA	2.0
FTC 1	FPGA	2.0
SFB 0	FPGA	3.0
SFB 1	FPGA	3.0
SFB 2	FPGA	3.0
SFB 3	FPGA	3.0
SFB 4	FPGA	3.0
SFB 5	FPGA	3.0

show chassis firmware (MX240, MX480, MX960 Router with Application Services Modular Line Card)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.2I21 by user1 on 2012-06-19 17:

show chassis firmware (EX4200 Switch)

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0	uboot	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42)
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 1	uboot	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42)
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 2	uboot	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42)
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.1

show chassis firmware (EX8200 Switch)

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0	U-Boot	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 3	U-Boot	U-Boot 1.1.6 (Dec 4 2009 - 13:17:34) 3.1.0
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 5	U-Boot	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 7	U-Boot	U-Boot 1.1.6 (Feb 6 2009 - 05:31:46) 2.4.0
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.2
Routing Engine 0	U-Boot	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.2
Routing Engine 1	U-Boot	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0
	loader	FreeBSD/PowerPC U-Boot bootstrap loader 2.2

show chassis firmware (EX9200 Switch)

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 2	ROM	Juniper ROM Monitor Version 11.4b2
	O/S	Version 14.1I20140312_0741 by userd o
FPC 3	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 14.1I20140312_0741 by userd o

show chassis firmware (EX9251 Switch)

```
user@switch> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_SUM1_00.11.01

```

FPC                                RE-FPGA  301
                                ROM        PC Bios
                                O/S        Version 18.1R1.4 by builder on 2018-03-06
00:31:54 UTC

```

show chassis firmware (EX9253 Switch)

```

user@switch> show chassis firmware

Part      Type      Version
RE 0      PRI BIOS  CBEP_P_SUM1_00.11.01
          RE-FPGA  402
RE 1      PRI BIOS  CBEP_P_SUM1_00.11.01
          RE-FPGA  402
FPC 0      ROM       PC Bios
          O/S       Version 18.2-20180129_dev_common.1 by builder
on 2018-01-29 13:35:11 UTC
FPC 1      ROM       PC Bios
          O/S       Version 18.2-20180129_dev_common.1 by builder
on 2018-01-29 13:35:11 UTC

```

show chassis firmware lcc (TX Matrix Router)

```

user@host> show chassis firmware lcc 0

lcc0-re0:
-----
Part      Type      Version
FPC 1      ROM       Juniper ROM Monitor Version 6.4b18
          O/S       Version 7.0-20040804.0 by userb on 2004-0
FPC 2      ROM       Juniper ROM Monitor Version 6.4b20
          O/S       Version 7.0-20040804.0 by userb on 2004-0
SPMB 0      ROM       Juniper ROM Monitor Version 6.4b18
          O/S       Version 7.0-20040804.0 by userb on 2004-0

```

show chassis firmware scc (TX Matrix Router)

```

user@host> show chassis firmware scc

scc-re0:
-----
Part      Type      Version
SPMB 0      ROM       Juniper ROM Monitor Version 6.4b18
          O/S       Version 7.0-20040804.0 by userb on 2004-0

```

show chassis firmware (TX Matrix Plus Router)

```

user@host> show chassis firmware

sfc0-re0:
-----
Part      Type      Version
Global FPC 4
Global FPC 6
Global FPC 7
Global FPC 12
Global FPC 14
Global FPC 15
Global FPC 20

```



```

Global FPC 21
Global FPC 22
Global FPC 23
Global FPC 24
Global FPC 25
Global FPC 26
Global FPC 28
Global FPC 29
Global FPC 31
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

```

lcc0-re1:

```

-----
Part          Type      Version
FPC 4          ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 6          ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 7          ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

```

lcc1-re1:

```

-----
Part          Type      Version
FPC 4          ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 6          ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 7          ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

```

lcc2-re1:

```

-----
Part          Type      Version
FPC 4          ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 5          ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 6          ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 7          ROM      Juniper ROM Monitor Version 7.5b4
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

```

lcc3-re1:

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 1	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 2	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 4	ROM	Juniper ROM Monitor Version 7.5b4
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 5	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 7	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0

show chassis firmware lcc (TX Matrix Plus Router)

```
user@host> show chassis firmware lcc 0
```

```
lcc0-re1:
```

Part	Type	Version
FPC 4	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 6	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 7	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0

show chassis firmware sfc (TX Matrix Plus Router)

```
user@host> show chassis firmware sfc 0
```

```
sfc0-re0:
```

Part	Type	Version
Global FPC 4		
Global FPC 6		
Global FPC 7		
Global FPC 12		
Global FPC 14		
Global FPC 15		
Global FPC 20		
Global FPC 21		
Global FPC 22		
Global FPC 23		
Global FPC 24		
Global FPC 25		
Global FPC 26		
Global FPC 28		
Global FPC 29		
Global FPC 31		

SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0

show chassis firmware (QFX Series and OCX Series)

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0		
Routing Engine 0	U-Boot loader	U-Boot 1.1.6 (Sep 15 2010 - 02:11:11) 1.0.5 FreeBSD/MIPS U-Boot bootstrap loader 0.1

show chassis firmware (PTX1000 Packet Transport Routers)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	U-Boot loader	*** FreeBSD/i386 bootstrap loader 1.2
	BIOS	V0018.2U
	EC FPGA	2.0
	MAIN_CPLD	1.f
	MEZZ_CPLD	1.f
	RE FPGA	2.3

show chassis firmware (PTX10008 Routers)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	QFXS_SFP_00.31_01.01
	GDN BIOS	QFXS_SFP_00.31_01.01
	FPGA	2.4
	RE-FPGA	3.2
RE 1	PRI BIOS	QFXS_SFP_00.31_01.01
	GDN BIOS	QFXS_SFP_00.31_01.01
	FPGA	2.3
	RE-FPGA	3.2
FPC 0 - 22:56:52)	U-Boot	Bank A: U-Boot 2011.12-gfbea47a (Feb 26 2016)
	CTRL FPGA	4.1
	PORT FPGA	2.0
FPC 5 - 22:56:52)	U-Boot	Bank A: U-Boot 2011.12-gfbea47a (Feb 26 2016)
	CTRL FPGA	3.1
	PORT FPGA	2.0
FPC 6 - 22:56:52)	U-Boot	Bank B: U-Boot 2011.12-gfbea47a (Feb 26 2016)
	CTRL FPGA	3.1
	PORT FPGA	2.0
FPM	FPGA	1.9
FTC 0	FPGA	2.0
FTC 1	FPGA	2.0
SIB 0	FPGA	3.0
SIB 1	FPGA	3.0

show chassis firmware interconnect-device (QFabric System)

```
user@switch> show chassis firmware interconnect-device interconnect1
```

Part	Type	Version
Routing Engine 0	U-Boot loader	U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1 FreeBSD/MIPS U-Boot bootstrap loader 0.1
Routing Engine 1	U-Boot loader	U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1 FreeBSD/MIPS U-Boot bootstrap loader 0.1

show chassis firmware (ACX2000 Universal Metro Router)

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC	O/S	Version 12.2I13 by user2 on 2012-05-29 06:
FEB	O/S	Version 12.2I13 by user2 on 2012-05-29 06:

show chassis firmware detail (EX3300 Switch)

```
user@switch> show chassis firmware detail
```

FPC 0		
Boot SYSPLD	3	
PoE firmware	4.1.6	
PFE-0	3	
PFE-1	3	
PHY		
microcode	0x514	
Boot Firmware		
uboot loader	U-Boot 1.1.6 (Aug 21 2011 - 01:45:26)	1.0.0 FreeBSD/arm U-Boot loader 1.0

show chassis firmware (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.2I21 by user1 on 2012-06-19 17:

show chassis firmware (ACX5048 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC	loader	FreeBSD/i386 bootstrap loader 1.2
	BIOS	V0018.7
	TMC FPGA	6.d8
	PICO CPLD0	7.b
	PICO CPLD1	7.b
	PICO CPLD2	7.b
	PICO CPLD3	7.b
	PICO CPLD4	7.b
	PICO CPLD5	7.b
	PICO CPLD6	6.a
	MRE	17.9
	Power CPLD	3.a

show chassis firmware (ACX5096 Router)

user@host> show chassis firmware

Part	Type	Version
FPC	Loader	FreeBSD/i386 bootstrap loader 1.2
	BIOS	V0018.7
	TMC FPGA	3000001.5
	PIC0 CPLD0	7.b
	PIC0 CPLD1	7.b
	PIC0 CPLD2	7.b
	PIC0 CPLD3	7.b
	PIC0 CPLD4	7.b
	PIC0 CPLD5	7.b
	PIC0 CPLD6	c6.a
	PIC0 CPLD7	-NA-
	PIC0 CPLD8	7.b
	PIC0 CPLD9	7.b
	PIC0 CPLD10	7.b
	PIC0 CPLD11	7.b
	PIC0 CPLD12	7.b
	PIC0 CPLD13	7.b
	PIC0 CPLD14	c6.a
	MRE	7.5
	Power CPLD	4.1

show chassis firmware (ACX500 Router)

user@host> show chassis firmware

Part	Type	Version
FPC	O/S	Version 15.2-20150815_dev_rbu_1_16q1.0 by
userb on 2015-08-15 04:18:02 UTC		
FEB	O/S	Version 15.2-20150815_dev_rbu_1_16q1.0 by
userb on 2015-08-15 04:18:02 UTC		

show chassis hardware

List of Syntax	Syntax on page 426 Syntax (EX Series) on page 426 Syntax (T4000 Router) on page 426 Syntax (TX Matrix Router) on page 426 Syntax (TX Matrix Plus Router) on page 426 Syntax (MX Series Routers) on page 427 Syntax (MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms) on page 427 Syntax (QFX Series) on page 427 Syntax (OCX Series) on page 427 Syntax (PTX Series Packet Transport Routers) on page 427 Syntax (ACX Series Universal Metro Routers) on page 427 Syntax (ACX5048 and ACX5096 Routers) on page 427 Syntax (ACX500 Routers) on page 427
Syntax	<pre>show chassis hardware <detail extensive> <clei-models> <models></pre>
Syntax (EX Series)	<pre>show chassis hardware <clei-models> <detail extensive> <models> <satellite [slot-id slot-id device-alias alias-name]></pre>
Syntax (T4000 Router)	<pre>show chassis hardware <clei-models> <detail extensive> <models></pre>
Syntax (TX Matrix Router)	<pre>show chassis hardware <clei-models> <detail extensive> <models> <lcc number scc></pre>
Syntax (TX Matrix Plus Router)	<pre>show chassis hardware <clei-models> <detail extensive> <models> <lcc number sfc number></pre>

Syntax (MX Series Routers)	<pre>show chassis hardware <detail extensive> <clei-models> <models> <all-members> <local> <member <i>member-id</i>></pre>
Syntax (MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms)	<pre>show chassis hardware <clei-models> <detail extensive> <models> <satellite [<i>slot-id slot-id</i> <i>device-alias alias-name</i>]></pre>
Syntax (QFX Series)	<pre>show chassis hardware <detail extensive> <clei-models> <interconnect-device <i>name</i>> <node-device <i>name</i>> <models></pre>
Syntax (OCX Series)	<pre>show chassis hardware <detail extensive> <clei-models> <models></pre>
Syntax (PTX Series Packet Transport Routers)	<pre>show chassis hardware <detail extensive> <clei-models> <models></pre>
Syntax (ACX Series Universal Metro Routers)	<pre>show chassis hardware <detail extensive> <clei-models> <models></pre>
Syntax (ACX5048 and ACX5096 Routers)	<pre>show chassis hardware <detail extensive> <clei-models> <models></pre>
Syntax (ACX500 Routers)	<pre>show chassis hardware <detail extensive> <clei-models></pre>

<models>

Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>models option introduced in Junos OS Release 8.2.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.</p> <p>Information for disk and usb introduced in Junos OS Release 15.1X53-D60 for QFX10002, QFX10008, and QFX10016 switches.</p> <p>Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Routers.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Routers</p>
Description	<p>Display a list of all Flexible PIC Concentrators (FPCs) and PICs installed in the router or switch chassis, including the hardware version level and serial number.</p> <p>In the EX Series switch command output, FPC refers to the following:</p> <ul style="list-style-type: none"> • On EX2200 switches, EX3200 switches, EX4200 standalone switches, and EX4500 switches—Refers to the switch; FPC <i>number</i> is always 0. • On EX4200 switches in a Virtual Chassis configuration—Refers to the member of a Virtual Chassis; FPC <i>number</i> equals the member ID, from 0 through 9. • On EX8208 and EX8216 switches—Refers to a line card; FPC <i>number</i> equals the slot number for the line card. <p>On QFX3500, QFX5100, and OCX Series standalone switches, and PTX1000 routers both the FPC and FPC <i>number</i> are always 0.</p> <p>On T4000 Type 5 FPCs, there are no top temperature sensor or bottom temperature sensor parameters. Instead, fan intake temperature sensor and fan exhaust temperature sensors parameters are displayed.</p> <p>Starting from Junos OS Release 11.4, the output of the show chassis hardware models operational mode command displays the enhanced midplanes FRU model numbers (CHAS-BP3-MX240-S, CHAS-BP3-MX480-S or CHAS-BP3-MX960-S) based on the router. Prior to release 11.4, the FRU model numbers are left blank when the router has</p>

enhanced midplanes. Note that the enhanced midplanes are introduced through the Junos OS Release 13.3, but can be supported on all Junos OS releases.

Starting with Junos OS Release 14.1, the output of the **show chassis hardware detail | extensive | clei-models | models** operational mode command displays the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-P1A) and other components in a PTX5000 Packet Transport Router.

Options none—Display information about hardware. For a TX Matrix router, display information about the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display information about the TX Matrix Plus router and its attached routers.

clei-models—(Optional) Display Common Language Equipment Identifier (CLEI) barcode and model number for orderable field-replaceable units (FRUs).

detail—(Optional) Include RAM and disk information in output.

extensive—(Optional) Display ID EEPROM information.

all-members—(MX Series routers only) (Optional) Display hardware-specific information for all the members of the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems only) (Optional) Display hardware-specific information for the Interconnect device.

lcc *number*—(TX Matrix routers and TX Matrix Plus router only) (Optional) On a TX Matrix router, display hardware information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display hardware information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display hardware-specific information for the local Virtual Chassis members.

member *member-id*—(MX Series routers and EX Series switches) (Optional) Display hardware-specific information for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value 0 or 1.

models—(Optional) Display model numbers and part numbers for orderable FRUs and, for components that use ID EEPROM format v2, the CLEI code.

node-device *name*—(QFabric systems only) (Optional) Display hardware-specific information for the Node device.

satellite [*slot-id slot-id* | device-alias *alias-name*]—(Junos Fusion only) (Optional) Display hardware information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc—(TX Matrix router only) (Optional) Display hardware information for the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus router only) (Optional) Display hardware information for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with 0.

Additional Information The **show chassis hardware detail** command now displays DIMM information for the following Routing Engines, as shown in [Table 22 on page 430](#).

Table 22: Routing Engines Displaying DIMM Information

Routing Engines	Routers
RE-S-1800x2 and RE-S-1800x4	MX240, MX480, and MX960 routers
RE-A-1800x2	M120 and M320 routers

In Junos OS Release 11.4 and later, the output for the **show chassis hardware models** operational mode command for MX Series routers display the enhanced midplanes FRU model numbers—CHAS-BP3-MX240-S, CHAS-BP3-MX480-S, or CHAS-BP3-MX960-S—based on the router. In releases before Junos OS Release 11.4, the FRU model numbers are left blank when the router has enhanced midplanes. Note that the enhanced midplanes are introduced through Junos OS Release 13.3, but can be supported on all Junos OS releases.

Starting with Junos OS Release 17.3R1, the output of the **show chassis hardware** command displays the mode in which vMX is running (performance mode or lite mode) in the part number field for the FPC. **RIOT-PERF** indicates performance mode and **RIOT-LITE** indicates lite mode.

Required Privilege Level view

Related Documentation

- *show chassis power*

List of Sample Output

- [show chassis hardware \(EX8216 Switch\) on page 438](#)
- [show chassis hardware clei-models \(EX8216 Switch\) on page 440](#)
- [show chassis hardware clei-models \(T1600 Router\) on page 440](#)
- [show chassis hardware clei-models \(PTX10008 Routers\) on page 441](#)

[show chassis hardware clei-models \(PTX10016 Routers\) on page 441](#)
[show chassis hardware \(EX2300-C Switch\) on page 442](#)
[show chassis hardware \(EX2300 Switch\) on page 443](#)
[show chassis hardware detail \(EX4200 Switch\) on page 443](#)
[show chassis hardware \(EX4300 Switch\) on page 443](#)
[show chassis hardware models \(EX4500 Switch\) on page 444](#)
[show chassis hardware detail \(EX9200 Switch\) on page 444](#)
[show chassis hardware detail \(EX9251 Switch\) on page 445](#)
[show chassis hardware detail \(EX9253 Switch\) on page 445](#)
[show chassis hardware detail \(PTX10008 Routers\) on page 446](#)
[show chassis hardware detail \(PTX10016 Routers\) on page 448](#)
[show chassis hardware \(M7i Router\) on page 449](#)
[show chassis hardware \(M10 Router\) on page 450](#)
[show chassis hardware models \(M10 Router\) on page 450](#)
[show chassis hardware \(M20 Router\) on page 451](#)
[show chassis hardware models \(M20 Router\) on page 451](#)
[show chassis hardware \(M40 Router\) on page 452](#)
[show chassis hardware \(M40e Router\) on page 452](#)
[show chassis hardware \(M120 Router\) on page 453](#)
[show chassis hardware detail \(M120 Router\) on page 454](#)
[show chassis hardware models \(M120 Router\) on page 455](#)
[show chassis hardware \(M160 Router\) on page 456](#)
[show chassis hardware models \(M160 Router\) on page 456](#)
[show chassis hardware detail \(M160 Router\) on page 457](#)
[show chassis hardware \(M320 Router\) on page 458](#)
[show chassis hardware models \(M320 Router\) on page 459](#)
[show chassis hardware \(MX5 Router\) on page 460](#)
[show chassis hardware \(MX10 Router\) on page 460](#)
[show chassis hardware \(MX40 Router\) on page 461](#)
[show chassis hardware \(Fixed MX80 Router\) on page 461](#)
[show chassis hardware \(Modular MX80 Router\) on page 462](#)
[show chassis hardware \(MX150\) on page 462](#)
[show chassis hardware models \(MX150\) on page 463](#)
[show chassis hardware \(MX104 Router\) on page 463](#)
[show chassis hardware detail \(MX104 Router\) on page 464](#)
[show chassis hardware detail \(MX480 Packet Transport Router with details of virtual disk size\) on page 464](#)
[show chassis hardware extensive \(MX104 Router\) on page 465](#)
[show chassis hardware extensive \(PTX10008 Router\) on page 468](#)
[show chassis hardware extensive \(PTX10016 Router\) on page 481](#)
[show chassis hardware models \(MX104 Router\) on page 493](#)
[show chassis hardware models \(PTX10008 Router\) on page 493](#)
[show chassis hardware models \(PTX10016 Router\) on page 494](#)
[show chassis hardware clei-models \(MX104 Router\) on page 495](#)
[show chassis hardware \(MX240 Router\) on page 495](#)
[show chassis hardware detail \(MX 240 Router with Routing Engine Displaying DIMM Information\) on page 496](#)
[show chassis hardware \(MX240 Router with Enhanced MX SCB\) on page 496](#)
[show chassis hardware \(MX480 Router\) on page 497](#)

[show chassis hardware \(MX480 Router with Enhanced MX SCB\) on page 498](#)
[show chassis hardware \(MX480 Routers with MPC5E and Built-In OTN PIC\) on page 498](#)
[show chassis hardware detail \(MX480 Routers with MPC5E and Built-In OTN PIC\) on page 500](#)
[show chassis hardware extensive \(MX480 Routers with MPC5E and Built-In OTN PIC\) on page 501](#)
[show chassis hardware \(MX960 Router\) on page 504](#)
[show chassis hardware \(MX960 Router with Bidirectional Optics\) on page 505](#)
[show chassis hardware \(MX960 Router with Enhanced MX SCB\) on page 505](#)
[show chassis hardware models \(MX960 Router with Enhanced MX SCB\) on page 507](#)
[show chassis hardware \(MX960 Router with MPC5EQ\) on page 508](#)
[show chassis hardware detail \(MX960 Router\) on page 511](#)
[show chassis hardware detail \(MX960 Router with MPC5EQ\) on page 511](#)
[show chassis hardware extensive \(MX960 Router with MPC5EQ\) on page 515](#)
[show chassis hardware models \(MX960 Router with MPC5EQ\) on page 523](#)
[show chassis hardware clei-models \(MX960 Router with MPC5EQ\) on page 524](#)
[show chassis hardware \(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC\) on page 524](#)
[show chassis hardware clei-models \(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC\) on page 525](#)
[show chassis hardware \(MX10008 Router\) on page 526](#)
[show chassis hardware clei-models \(MX10008 Router\) on page 527](#)
[show chassis hardware detail \(MX10008 Router\) on page 527](#)
[show chassis hardware extensive \(MX10008 Router\) on page 529](#)
[show chassis hardware models \(MX10008 Router\) on page 543](#)
[show chassis hardware \(PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC\) on page 543](#)
[show chassis hardware clei-models \(PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC\) on page 544](#)
[show chassis hardware \(MX2010 Router\) on page 545](#)
[show chassis hardware detail \(MX2010 Router\) on page 547](#)
[show chassis hardware extensive \(MX2010 Router\) on page 552](#)
[show chassis hardware models \(MX2010 Router\) on page 557](#)
[show chassis hardware clei-models \(MX2010 Routers\) on page 558](#)
[show chassis hardware \(MX2010 Routers with MPC6E and OTN MIC\) on page 559](#)
[show chassis hardware detail \(MX2010 Routers with MPC6E and OTN MIC\) on page 561](#)
[show chassis hardware extensive \(MX2010 Routers with MPC6E and OTN MIC\) on page 563](#)
[show chassis hardware \(MX2020 Router\) on page 568](#)
[show chassis hardware detail \(MX2020 Router\) on page 576](#)
[show chassis hardware \(MX2020 Router with 240-V high-voltage DC PSMs and PDMs\) on page 585](#)
[show chassis hardware models \(MX2020 Router\) on page 587](#)
[show chassis hardware clei-models \(MX2020 Router\) on page 588](#)
[show chassis hardware \(MX2020 Router with MPC5EQ and MPC6E\) on page 589](#)
[show chassis hardware detail \(MX2020 Router with MPC5EQ and MPC6E\) on page 594](#)
[show chassis hardware extensive \(MX2020 Router with MPC5EQ and MPC6E\) on page 596](#)

[show chassis hardware models \(MX2020 Routers with MPC5EQ and MPC6E\) on page 602](#)

[show chassis hardware clei-models \(MX2020 Router with MPC5EQ and MPC6E\) on page 603](#)

[show chassis hardware \(MX Series routers with ATM MIC\) on page 604](#)

[show chassis hardware \(MX240, MX480, MX960 routers with Application Services Modular Line Card\) on page 604](#)

[show chassis hardware extensive \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 605](#)

[show chassis hardware \(MX480 Router with MPC4E\) on page 606](#)

[show chassis hardware \(MX2020 Router with MPC4E\) on page 607](#)

[show chassis hardware \(MX5, MX10, MX40, MX80, MX240, MX480, and MX960 Routers with Enhanced 20-Port Gigabit Ethernet MIC\) on page 609](#)

[show chassis hardware models \(MX5, MX10, MX40, MX80, MX240, MX480, and MX960 Routers with Enhanced 20-Port Gigabit Ethernet MIC\) on page 609](#)

[show chassis hardware \(MX2008 Router\) on page 610](#)

[show chassis hardware detail \(MX2008 Router\) on page 611](#)

[show chassis hardware extensive \(MX2008 Router\) on page 612](#)

[show chassis hardware models \(MX2008 Router\) on page 624](#)

[show chassis hardware clei-models \(MX2008 Router\) on page 625](#)

[show chassis hardware \(MX10003 Router\) on page 626](#)

[show chassis hardware \(MX204 Router\) on page 626](#)

[show chassis hardware \(vMX running in lite mode\) on page 627](#)

[show chassis hardware \(vMX running in performance mode\) on page 627](#)

[show chassis hardware \(T320 Router\) on page 627](#)

[show chassis hardware \(T640 Router\) on page 628](#)

[show chassis hardware models \(T640 Router\) on page 629](#)

[show chassis hardware extensive \(T640 Router\) on page 629](#)

[show chassis hardware \(T4000 Router\) on page 630](#)

[show chassis hardware \(T4000 Router with 16-GB Line Card Chassis \(LCC\) Routing Engine\) on page 632](#)

[show chassis hardware \(T4000 Router with LSR FPC\) on page 633](#)

[show chassis hardware clei-models \(T4000 Router\) on page 633](#)

[show chassis hardware detail \(T4000 Router\) on page 634](#)

[show chassis hardware models \(T4000 Router\) on page 636](#)

[show chassis hardware lcc \(TX Matrix Router\) on page 636](#)

[show chassis hardware scc \(TX Matrix Router\) on page 637](#)

[show chassis hardware \(T1600 Router\) on page 637](#)

[show chassis hardware \(TX Matrix Plus Router\) on page 640](#)

[show chassis hardware sfc \(TX Matrix Plus Router\) on page 645](#)

[show chassis hardware extensive \(TX Matrix Plus Router\) on page 646](#)

[show chassis hardware clei-models \(TX Matrix Plus Router\) on page 647](#)

[show chassis hardware detail \(TX Matrix Plus Router\) on page 650](#)

[show chassis hardware models \(TX Matrix Plus Router\) on page 651](#)

[show chassis hardware \(TX Matrix Plus Router with 3D SIBs\) on page 654](#)

[show chassis hardware clei-models \(TX Matrix Plus Router with 3D SIBs\) on page 658](#)

[show chassis hardware detail \(TX Matrix Plus Router with 3D SIBs\) on page 662](#)

[show chassis hardware lcc \(TX Matrix Plus Router with 3D SIBs\) on page 665](#)

[show chassis hardware sfc \(TX Matrix Plus Router with 3D SIBs\) on page 666](#)

[show chassis hardware \(16-Port 10-Gigabit Ethernet MPC with SFP+ Optics \[MX Series Routers\]\) on page 668](#)

[show chassis hardware \(MPC3E \[MX Series Routers\]\) on page 668](#)

[show chassis hardware \(QFX3500 Switches\) on page 669](#)

[show chassis hardware detail \(QFX3500 Switches\) on page 670](#)

[show chassis hardware models \(QFX3500 Switches\) on page 671](#)

[show chassis hardware clei-models \(QFX3500 Switches\) on page 671](#)

[show chassis hardware clei-models \(QFX5100 Switches\) on page 671](#)

[show chassis hardware \(QFX10002 Switches\) on page 672](#)

[show chassis hardware detail \(QFX10002 Switches\) on page 672](#)

[show chassis hardware \(QFX10008 and QFX10016 Switches\) on page 673](#)

[show chassis hardware detail \(QFX10008 and QFX10016 Switches\) on page 674](#)

[show chassis hardware interconnect-device \(QFabric Systems\) on page 674](#)

[show chassis hardware node-device \(QFabric Systems\) on page 674](#)

[show chassis hardware \(PTX5000 Packet Transport Router\) on page 675](#)

[show chassis hardware \(PTX5000 Packet Transport Router with AC PSM and PDU\) on page 676](#)

[show chassis hardware \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 677](#)

[show chassis hardware clei-models \(PTX5000 Packet Transport Router\) on page 677](#)

[show chassis hardware clei-models \(PTX5000 Packet Transport Router with AC PSM and PDU\) on page 678](#)

[show chassis hardware clei-models \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 678](#)

[show chassis hardware detail \(PTX5000 Packet Transport Router\) on page 678](#)

[show chassis hardware detail \(PTX5000 Packet Transport Router with AC PSM and PDU\) on page 680](#)

[show chassis hardware detail \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 680](#)

[show chassis hardware models \(PTX5000 Packet Transport Router\) on page 681](#)

[show chassis hardware models \(PTX5000 Packet Transport Router with AC PSM and PDU\) on page 681](#)

[show chassis hardware models \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 682](#)

[show chassis hardware extensive \(PTX5000 Packet Transport Router\) on page 682](#)

[show chassis hardware extensive \(PTX1000 Packet Transport Router\) on page 683](#)

[show chassis hardware extensive \(PTX5000 with Control Board 2\) on page 684](#)

[show chassis hardware \(MX Routers with Media Services Blade \[MSB\]\) on page 684](#)

[show chassis hardware extensive \(MX Routers with Media Services Blade \[MSB\]\) on page 684](#)

[show chassis hardware \(ACX5048 Router\) on page 685](#)

[show chassis hardware detail \(ACX5048 Router\) on page 686](#)

[show chassis hardware clei-models \(ACX5048 Router\) on page 687](#)

[show chassis hardware models \(ACX5048 Router\) on page 687](#)

[show chassis hardware \(ACX5096 Router\) on page 687](#)

[show chassis hardware detail \(ACX5096 Router\) on page 688](#)

[show chassis hardware clei-models \(ACX5096 Router\) on page 688](#)

[show chassis hardware models \(ACX5096 Router\) on page 689](#)

[show chassis hardware \(ACX500 Router\) on page 689](#)

[show chassis hardware detail \(ACX500 Router\) on page 689](#)
[show chassis hardware extensive \(ACX500 Router\) on page 690](#)
[show chassis hardware clei-models \(ACX500 Router\) on page 691](#)
[show chassis hardware models \(ACX500 Router\) on page 692](#)
[show chassis hardware \(MX960 Router with MPC10E-15C-MRATE Line Card\) on page 692](#)

Output Fields [Table 23 on page 436](#) lists the output fields for the **show chassis hardware** command. Output fields are listed in the approximate order in which they appear.

Table 23: show chassis hardware Output Fields

Field Name	Field Description	Level of Output
Item	<p>Chassis component:</p> <ul style="list-style-type: none"> (EX Series switches)—Information about the chassis, Routing Engine (SRE and Routing Engine modules in EX8200 switches), power supplies, fan trays, and LCD panel. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs). Information about the backplane, midplane, and SIBs (SF modules) is displayed for EX8200 switches. (MX Series routers and EX Series switches)—Information about the backplane, Routing Engine, Power Entry Modules (PEMs), and fan trays. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs), Modular Port Concentrators (MPCs) and associated Modular Interface Cards (MICs), or Dense Port Concentrators (DPCs). MX80 routers have a single Routing Engine and a built-in Packet Forwarding Engine that attaches directly to MICs. The Packet Forwarding Engine has two “pseudo” FPCs (FPC 0 and FPC1). MX80 routers also have a Forwarding Engine Board (FEB). MX104 routers have a built-in Packet forwarding Engine and a Forwarding Engine Board (FEB). The Packet Forwarding Engine of the MX104 router has three “pseudo” FPCs (FPC0, FPC1, and FPC2). (M Series routers, except for the M320 router)—Information about the backplane; power supplies; fan trays; Routing Engine; maxicab (the connection between the Routing Engine and the backplane, for the M40 router only); SCB, SSB, SFM, or FEB; MCS and PCG (for the M160 router only); each FPC and PIC; and each fan, blower, and impeller. (M120, M320, and T Series routers)—Information about the backplane, power supplies, fan trays, midplane, FPM (craft interface), CIP, PEM, SCG, CB, FPC, PIC, SFP, SPMB, and SIB. (QFX Series)—Information about the chassis, Pseudo CB, Routing Engine, power supplies, fan trays, Interconnect devices, and Node devices. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs). (PTX Series)—Information about the chassis, midplane, craft interface (FPM), power distribution units (PDUs) and Power Supply Modules (PSMs), Centralized Clock Generators (CCGs), Routing Engines, Control Boards (CBs) and Switch Processor Mezzanine Boards (SPMBs), Flexible PIC Concentrators (FPCs), PICs, Switch Interface Boards (SIBs), and fan trays (vertical and horizontal). (MX2010, MX2020, and MX2008 routers)—Information about the chassis, midplane, craft interface (FPM), power midplane (PMP), Power Supply Modules (PSMs), Power Distribution Modules (PDMs), Routing Engines, Control Boards (CBs) and Switch Processor Mezzanine Boards (SPMBs), Switch Fabric Boards (SFBs), Flexible PIC Concentrators (FPCs), PICs, adapter cards (ADCs) and fan trays. (vMX routers)—Information about the chassis, midplane, Routing Engines, and Control Boards (CBs). Also displays information about Flexible PIC Concentrators (FPCs) and associated Modular Interface Cards (MICs) and Physical Interface Cards (PICs). 	All levels
Version	Revision level of the chassis component.	All levels
Part number	Part number of the chassis component.	All levels

Table 23: show chassis hardware Output Fields (continued)

Field Name	Field Description	Level of Output
Serial number	Serial number of the chassis component. The serial number of the backplane is also the serial number of the router chassis. Use this serial number when you need to contact Juniper Networks Customer Support about the router or switch chassis.	All levels
Assb ID or Assembly ID	(extensive keyword only) Identification number that describes the FRU hardware.	extensive
Assembly Version	(extensive keyword only) Version number of the FRU hardware.	extensive
Assembly Flags	(extensive keyword only) Flags.	extensive
FRU model number	(clei-models , extensive , and models keyword only) Model number of the FRU hardware component.	none specified
CLEI code	(clei-models and extensive keyword only) Common Language Equipment Identifier code. This value is displayed only for hardware components that use ID EEPROM format v2. This value is not displayed for components that use ID EEPROM format v1.	none specified
EEPROM Version	ID EEPROM version used by the hardware component: 0x00 (version 0), 0x01 (version 1), or 0x02 (version 2).	extensive
Description	<p>Brief description of the hardware item:</p> <ul style="list-style-type: none"> • Type of power supply. • Type of PIC. If the PIC type is not supported on the current software release, the output states Hardware Not Supported. • Type of FPC: FPC Type 1, FPC Type 2, FPC Type 3, FPC Type 4, or FPC TypeOC192. <p>On EX Series switches, a brief description of the FPC.</p> <p>The following list shows the PIM abbreviation in the output and the corresponding PIM name.</p> <ul style="list-style-type: none"> • 2x FE—Either two built-in Fast Ethernet interfaces (fixed PIM) or dual-port Fast Ethernet PIM • 4x FE—4-port Fast Ethernet ePIM • 1x GE Copper—Copper Gigabit Ethernet ePIM (one 10-Mbps, 100-Mbps, or 1000-Mbps port) • 1x GE SFP—SFP Gigabit Ethernet ePIM (one fiber port) • 2x Serial—Dual-port serial PIM • 2x T1—Dual-port T1 PIM • 2x E1—Dual-port E1 PIM • 2x CT1E1—Dual-port channelized T1/E1 PIM • 1x T3—T3 PIM (one port) • 1x E3—E3 PIM (one port) • 4x BRI S/T—4-port ISDN BRI S/T PIM • 4x BRI U—4-port ISDN BRI U PIM • 1x ADSL Annex A—ADSL 2/2+ Annex A PIM (one port, for POTS) 	All levels

Table 23: show chassis hardware Output Fields (continued)

Field Name	Field Description	Level of Output
	<ul style="list-style-type: none"> • 1x ADSL Annex B—ADSL 2/2+ Annex B PIM (one port, for ISDN) • 2x SHDSL (ATM)—G SHDSL PIM (2-port two-wire module or 1-port four-wire module) • 1x TGM550—TGM550 Telephony Gateway Module (Avaya VoIP gateway module with one console port, two analog LINE ports, and two analog TRUNK ports) • 1x DS1 TIM510—TIM510 E1/T1 Telephony Interface Module (Avaya VoIP media module with one E1 or T1 trunk termination port and ISDN PRI backup) • 4x FXS, 4x FXO, TIM514—TIM514 Analog Telephony Interface Module (Avaya VoIP media module with four analog LINE ports and four analog TRUNK ports) • 4x BRI TIM521—TIM521 BRI Telephony Interface Module (Avaya VoIP media module with four ISDN BRI ports) • Crypto Accelerator Module—For enhanced performance of cryptographic algorithms used in IP Security (IPsec) services • MPC M16x10GE—16-port 10-Gigabit Module Port Concentrator that supports SFP+ optical transceivers. (Not on EX Series switches.) • For hosts, the Routing Engine type. • For small form-factor pluggable transceiver (SFP) modules, the type of fiber: LX, SX, LH, or T. • LCD description for EX Series switches (except EX2200 switches). • MPC2—1-port MPC2 that supports two separate slots for MICs. • MPC3E—1-port MPC3E that supports two separate slots for MICs (MIC-3D-1X100GE-CFP and MIC-3D-20GE-SFP) on MX960, MX480, and MX240 routers. The MPC3E maps one MIC to one PIC (1 MIC, 1 PIC), which differs from the mapping of legacy MPCs. • 100GBASE-LR4, pluggable CFP optics • Supports the Enhanced MX Switch Control Board with fabric redundancy and existing SCBs without fabric redundancy. • Interoperates with existing MX Series line cards, including Flexible Port Concentrators (FPC), Dense Port Concentrators (DPCs), and Modular Port Concentrators (MPCs). • MPC4E—Fixed configuration MPC4E that is available in two flavors: MPC4E-3D-32XGE-SFPP and MPC4E-3D-2CGE-8XGE on MX2020, MX960, MX480, and MX240 routers. • LCD description for MX Series routers 	

Sample Output

show chassis hardware (EX8216 Switch)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis	REV 06		CY0109220035	EX8216
Midplane	REV 06	710-016845	BA0909120112	EX8216-MP
CB 0	REV 22	710-020771	AX0109197723	EX8216-RE320
CB 1	REV 22	710-020771	AX0109197726	EX8216-RE320

Routing Engine 1		BUILTIN	BUILTIN	RE-EX8216
FPC 3	REV 19	710-020683	BC0109083125	EX8200-48F
CPU	REV 13	710-020598	BF0109144549	EX8200-CPU
FPC 4	REV 17	710-020683	BC0108500127	EX8200-48F
CPU	REV 10	710-020598	BF0108460510	EX8200-CPU
PIC 0		BUILTIN	BUILTIN	48x 100 Base-QFX/1000
Base-X				
Xcvr 1	REV 01	740-011613	PE70V89	SFP-SX
Xcvr 11	REV 01	740-011613	PE70YCE	SFP-SX
Xcvr 12	REV 01	740-011613	PE70VSH	SFP-SX
Xcvr 13	REV 01	740-011613	E08C02063	SFP-SX
Xcvr 14	REV 01	740-011613	PE70VKU	SFP-SX
Xcvr 15	REV 01	740-011613	E08E03372	SFP-SX
Xcvr 21	REV 01	740-011613	PE70VAD	SFP-SX
Xcvr 22	REV 01	740-011613	E08E01228	SFP-SX
Xcvr 23	REV 01	740-011613	PE70VSL	SFP-SX
Xcvr 24	REV 01	740-011613	E08E03409	SFP-SX
Xcvr 25	REV 01	740-011613	PE70VL4	SFP-SX
Xcvr 26	REV 01	740-011613	PDQ4L2Z	SFP-SX
Xcvr 27	REV 01	740-011613	PE70WFK	SFP-SX
Xcvr 28	REV 01	740-011782	PBD2B5U	SFP-SX
Xcvr 29	REV 01	740-011613	PE70UQX	SFP-SX
Xcvr 30	REV 01	740-011613	PE70VL5	SFP-SX
Xcvr 31	REV 01	740-011613	PE70V0F	SFP-SX
Xcvr 32	REV 01	740-011613	E08C02052	SFP-SX
Xcvr 33	REV 01	740-011613	E08C02197	SFP-SX
Xcvr 34	REV 01	740-011613	PE70V0L	SFP-SX
Xcvr 35	REV 01	740-011613	E08E03390	SFP-SX
Xcvr 36	REV 01	740-011613	PDQ4VL9	SFP-SX
Xcvr 37	REV 01	740-011613	E08E03370	SFP-SX
Xcvr 38	REV 01	740-011613	E08E03362	SFP-SX
Xcvr 39	REV 01	740-011613	E08C02065	SFP-SX
Xcvr 40	REV 01	740-011613	E08E03405	SFP-SX
Xcvr 41	REV 01	740-011613	E08E03411	SFP-SX
Xcvr 43	REV 01	740-011613	E08C02171	SFP-SX
Xcvr 45	REV 01	740-011613	E08E03410	SFP-SX
FPC 13	REV 16	710-016837	BB0109051344	EX8200-8XS
CPU				
SIB 0	REV 10	710-021613	AY0109166244	EX8216-SF320
SIB 1	REV 10	710-021613	AY0109166357	EX8216-SF320
SIB 2	REV 10	710-021613	AY0109166362	EX8216-SF320
SIB 3	REV 10	710-021613	AY0109166338	EX8216-SF320
SIB 4	REV 10	710-021613	AY0109166350	EX8216-SF320
SIB 5	REV 10	710-021613	AY0109166365	EX8216-SF320
SIB 6	REV 10	710-021613	AY0109166361	EX8216-SF320
SIB 7	REV 10	710-021613	AY0109166399	EX8216-SF320
PSU 0	REV 17	740-021466	BG0709170003	EX8200-AC2K
PSU 1	REV 17	740-021466	BG0709170004	EX8200-AC2K
PSU 2	REV 17	740-021466	BG0709170020	EX8200-AC2K
PSU 3	REV 17	740-021466	BG0709170017	EX8200-AC2K
PSU 4	REV 17	740-021466	BG0709170008	EX8200-AC2K
PSU 5	REV 17	740-021466	BG0709170018	EX8200-AC2K
Top Fan Tray				
FTC 0	REV 4	760-022620	CX1209140212	EX8216-FT
FTC 1	REV 4	760-022620	CX1209140212	EX8216-FT
Bottom Fan Tray				
FTC 0	REV 4	760-022620	CX1209140211	EX8216-FT
FTC 1	REV 4	760-022620	CX1209140211	EX8216-FT
LCD 0	REV 04	710-025742	CE0109186919	EX8200 LCD

show chassis hardware clei-models (EX8216 Switch)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 08	710-016845		
PSU 0	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 1	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 2	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 3	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 4	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
PSU 5	REV 05	740-023002	COUPAEAEAA	EX8200-PWR-AC3KR
Top Fan Tray				
Bottom Fan Tray				

show chassis hardware clei-models (T1600 Router)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-005608		CHAS-BP-T640-S
FPM Display	REV 05	710-002897		CRAFT-T640-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	Rev 07	740-017906	IPUPAC7KTA	PWR-T1600-3-80-DC-S
PEM 1	Rev 18	740-002595		PWR-T-DC-S
SCG 0	REV 15	710-003423		SCG-T-S
Routing Engine 0	REV 08	740-014082		RE-A-2000-4096-S
Routing Engine 1	REV 07	740-014082		RE-A-2000-4096-S
CB 0	REV 05	710-007655		CB-T-S
CB 1	REV 03	710-017707		CB-T-S
FPC 0	REV 07	710-013558		T640-FPC2-E2
PIC 0	REV 01	750-010618		PB-4GE-SFP
PIC 1	REV 06	750-001900		PB-10C48-SON-SMSR
PIC 2	REV 14	750-001901		PB-40C12-SON-SMIR
PIC 3	REV 07	750-001900		PB-10C48-SON-SMSR
FPC 1	REV 06	710-013553		T640-FPC1-E2
PIC 0	REV 08	750-001072		P-1GE-SX
PIC 1	REV 10	750-012266		PB-4GE-TYPE1-SFP-IQ2
PIC 2	REV 22	750-005634		PB-1CH0C12SMIR-QPP
FPC 2				
PIC 0	REV 16	750-007141		PC-10GE-SFP
PIC 1	REV 06	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 2	REV 05	750-004695		PC-TUNNEL
PIC 3	REV 17	750-009553		PC-40C48-SON-SFP
FPC 3	REV 01	710-010154		T640-FPC3-E
PIC 0	REV 07	750-012793		PC-1XGE-TYPE3-XFP-IQ2
PIC 1	REV 25	750-007141		PC-10GE-SFP
PIC 2	REV 17	750-009553		PC-40C48-SON-SFP
PIC 3	REV 32	750-003700		PC-10C192-SON-VSR
FPC 4	REV 16	710-013037		T1600-FPC4-ES
PIC 1	REV 06	750-034781		PD-1CE-CFP
FPC 5	REV 02	710-013037		T1600-FPC4-ES
PIC 0	REV 16	750-012518		PD-40C192-SON-XFP
PIC 1	REV 01	750-010850		PD-10C768-SON-SR
FPC 6	REV 14	710-013037		T1600-FPC4-ES
PIC 0	REV 11	750-017405		PD-4XGE-XFP
PIC 1	REV 13	750-017405		PD-4XGE-XFP
FPC 7	REV 09	710-007529		T640-FPC3

PIC 0	REV 10	750-012793	PC-1XGE-TYPE3-XFP-IQ2
PIC 1	REV 01	750-015217	PC-8GE-TYPE3-SFP-IQ2
PIC 2	REV 01	750-015217	PC-8GE-TYPE3-SFP-IQ2
PIC 3	REV 15	750-009450	PC-10C192-S0N-SR2
SIB 0	REV 07	710-013074	SIB-I-T1600-S
SIB 1	REV 07	710-013074	SIB-I-T1600-S
SIB 2	REV 07	710-013074	SIB-I-T1600-S
SIB 3	REV 07	710-013074	SIB-I-T1600-S
SIB 4	REV 07	710-013074	SIB-I-T1600-S
Fan Tray 0			FANTRAY-T-S
Fan Tray 1			FANTRAY-T-S
Fan Tray 2			FAN-REAR-TX-T640-S

show chassis hardware clei-models (PTX10008 Routers)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 27	750-054097	CMMUM00ARA	QFX10008-CHAS
CB 0	REV 02	750-068820	CMUCAH3CTB	QFX10000-RE
CB 1	REV 02	750-068820	CMUCAH3CTB	QFX10000-RE
FPC 0	REV 36	750-051354	CMUIAM9BAA	QFX10000-36Q
PIC 0		BUILTIN		
FPC 1	REV 33	750-051354	CMUIAM9BAA	QFX10000-36Q
PIC 0		BUILTIN		
FPC 2	REV 32	750-051357	CMUIANABAA	QFX10000-30C
PIC 0		BUILTIN		
FPC 3	REV 35	750-051357	CMUIANABAA	QFX10000-30C
PIC 0		BUILTIN		
FPC 5	REV 08	750-068822	CMUIAM9BAB	QFX10000-36Q
PIC 0		BUILTIN		
FPC 6	REV 08	750-068822	CMUIAM9BAB	QFX10000-36Q
PIC 0		BUILTIN		
FPD Board	REV 07	711-054687		
Power Supply 0	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 1	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 2	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 3	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 4	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
Power Supply 5	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
FTC 0	REV 14	750-050108	CMUCAHZCAA	QFX10008-FAN-CTRL
FTC 1	REV 14	750-050108	CMUCAHZCAA	QFX10008-FAN-CTRL
Fan Tray 0	REV 09	760-054372	CMUCAHYCAA	QFX10008-FAN
Fan Tray 1	REV 09	760-054372	CMUCAHYCAA	QFX10008-FAN
SIB 0	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 1	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 2	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 3	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 4	REV 24	750-050058	CMUCAH0CAA	QFX10008-SF
SIB 5	REV 23	750-050058	CMUCAH0CAA	QFX10008-SF

show chassis hardware clei-models (PTX10016 Routers)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 24	750-077138	CMMUN00ARA	JNP10016

CB 0	REV 04	711-065897	PROTOXCLEI	PROTO-ASSEMBLY
CB 1	REV 05	711-065897	PROTOXCLEI	PROTO-ASSEMBLY
FPC 2				
PIC 0		BUILTIN		
FPC 4	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 5	REV 13	750-068822	CMUIAM9BAC	QFX10000-36Q
PIC 0		BUILTIN		
FPC 6	REV 41	750-071976	CMUIANABAB	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 7	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 8	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 9	REV 41	750-071976	CMUIANABAB	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 10	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 11	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 13	REV 41	750-071976	CMUIANABAB	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 15	REV 37	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
Power Supply 0	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 1	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 2	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 3	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 4	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 5	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 6	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 7	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 8	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 9	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Fan Tray 0				QFX5100-FAN-AFO
Fan Tray 1				QFX5100-FAN-AFO
SIB 0	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 1	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 2	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 3	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 4	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 5	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
FPD Board	REV 07	711-054687		

show chassis hardware (EX2300-C Switch)

```
user@switch> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			HV0215410003	EX2300-C-12P
Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	RE-EX2300C-12P
FPC 0	REV 04	650-059984	HV0215410003	EX2300-C-12P
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0	REV 04	BUILTIN	BUILTIN	12x10/100/1000 Base-T
PIC 1	REV 04	650-059984	HV0215410003	2x10G SFP/SFP+
Xcvr 0	REV 01	740-021309	T09K00695	SFP+-10G-LR
Xcvr 1	REV 01	740-030658	AD1146A05JT	SFP+-10G-USR
Power Supply 0				JPSU-170W-AC

show chassis hardware (EX2300 Switch)

```
user@switch> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JY0215410033	EX2300-24P
Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	RE-EX2300-24P
FPC 0	REV 05	650-059968	JY0215410033	EX2300-24P
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0	REV 05	BUILTIN	BUILTIN	24x10/100/1000 Base-T
PIC 1	REV 05	650-059968	JY0215410033	4x10G SFP/SFP+
Xcvr 0	REV 01	740-030658	AD1125A03ES	SFP+-10G-USR
Xcvr 1	REV 01	740-021308	AJPOTDZ	SFP+-10G-SR
Xcvr 3	REV 01	740-021309	A9401FL	SFP+-10G-LR
Power Supply 0				JPSU-450W-AC-AF0
Fan Tray 0 (AF0)				Fan Module, Airflow Out
Fan Tray 1 (AF0)				Fan Module, Airflow Out

show chassis hardware detail (EX4200 Switch)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			BM0208327733	EX4200-24T
Routing Engine 0	REV 11	750-021256	BM0208327733	EX4200-24T, 8 POE
Routing Engine 0			BM0208327733	EX4200-24T, 8 POE
FPC 0	REV 11	750-021256	BM0208327733	EX4200-24T, 8 POE
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	24x 10/100/1000 Base-T
PIC 1	REV 03B	711-021270	AR0208162285	4x GE SFP
BRD	REV 08	711-021264	AK0208328289	EX4200-24T, 8 POE
Power Supply 0	REV 03	740-020957	AT0508346354	PS 320W AC
Fan Tray				Fan Tray

show chassis hardware (EX4300 Switch)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			PD3713160055	EX4300-48P
Routing Engine 0	REV 04	650-044930	PD3713160055	EX4300-48P
FPC 0	REV 04	650-044930	PD3713160055	EX4300-48P
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0	REV 04	BUILTIN	BUILTIN	48x 10/100/1000 Base-T
PIC 1	REV 04	BUILTIN	BUILTIN	4x 40GE
Power Supply 0	REV 01	740-046871	1EDA3090026	JPSU-1100-AC-AF0-A
Fan Tray 0 (AF0)				Fan Module, Airflow Out
Fan Tray 1 (AF0)				Fan Module, Airflow Out

show chassis hardware models (EX4500 Switch)

```
user@host> show chassis hardware models
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	FRU model number
Routing Engine 0	REV 01	750-035700	GG0210271867	EX4500-40F-FB-C
FPC 0	REV 01	750-035700	GG0210271867	EX4500-40F-FB-C
PIC 0		BUILTIN	BUILTIN	EX4500-40F-FB-C
Power Supply 1	REV 01	740-029654	H884FS00JC09	EX4500-PWR1-AC-FB

show chassis hardware detail (EX9200 Switch)

```
user@switch> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN111DA44RFB	EX9208
Midplane	REV 05	710-017414	TS2912	EX9208-BP
FPM Board	REV 02	710-017254	XN1804	Front Panel Display
PEM 0	Rev 01	740-022697	QCS0906C033	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 01	740-022697	QCS0906C095	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 08	740-031116	9009122883	RE-S-EX9200-1800X4
CB 0	REV 16	750-031391	CAAW4391	EX9200-SCBEF
PC 0	REV 07	750-049612	CABJ9312	EX9200 40x1G Copper
CPU	REV 04	711-038484	CABH8268	MPCE PMB 2G
MIC 0	REV 02	750-049607	CABT9623	40x 1GE RJ45
PIC 0		BUILTIN	BUILTIN	10x 1GE RJ45
PIC 1		BUILTIN	BUILTIN	10x 1GE RJ45
PIC 2		BUILTIN	BUILTIN	10x 1GE RJ45
PIC 3		BUILTIN	BUILTIN	10x 1GE RJ45
FPC 1	REV 10	710-013699	CAAN3529	EX9200-40x1G-SFP
CPU	REV 04	711-038484	CAAL7608	MPCE PMB 2G
MIC 0	REV 26	750-028392	CAAS5151	20x 1GE SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE SFP
PIC 1		BUILTIN	BUILTIN	10x 1GE SFP
MIC 1	REV 26	750-028392	CAAC8006	20x 1GE SFP
PIC 2		BUILTIN	BUILTIN	10x 1GE SFP
Xcvr 8	REV 01	740-011613	E08L03674	SFP-SX
Xcvr 9	REV 01	740-011613	E08M00243	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE SFP
FPC 3	REV 10	710-013699	CAAR5261	EX9200-40x1G-SFP
CPU	REV 04	711-038484	CAAS2118	MPCE PMB 2G
MIC 0	REV 26	750-028392	CAAS5067	20x 1GE SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE SFP
Xcvr 2	REV 01	740-031851	PNA7L8U	SFP-SX
Xcvr 3	REV 02	740-011613	AM0943SEKGZ	SFP-SX
Xcvr 4	REV 02	740-011613	AM0943SEJZ9	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE SFP
MIC 1	REV 26	750-028392	CAAS5132	20x 1GE SFP
PIC 2		BUILTIN	BUILTIN	10x 1GE SFP
Xcvr 4	REV 01	740-011613	E08D02625	SFP-SX
Xcvr 9	REV 02	740-011613	PJH4RD9	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE SFP
Xcvr 0	REV 01	740-011613	AM0813S8YME	SFP-SX
Fan Tray				Left Fan Tray

show chassis hardware detail (EX9251 Switch)

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			BLANK	EX9251
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x6
CB 0	REV 05	750-069579	CAGT1382	EX9251
FPC 0		BUILTIN	BUILTIN	MPC
PIC 0		BUILTIN	BUILTIN	4XQSFP28 PIC
Xcvr 0	REV 01	740-044512	APF14500007NHC	QSFP+-40G-CU50CM
Xcvr 2	REV 01	740-046565	QH21035H	QSFP+-40G-SR4
PIC 1		BUILTIN	BUILTIN	8XSFP PIC
Xcvr 0	REV 01	740-031980	AA15393URH7	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AA162832LVG	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	MXAONKJ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	MXAOK75	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	MXA138L	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	13T511102684	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	MXA138E	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	MXA152N	SFP+-10G-SR
PEM 0	REV 02	740-070749	1F186390060	AC AFO 650W PSU
PEM 1	REV 02	740-070749	1F186390045	AC AFO 650W PSU
Fan Tray 0				Fan Tray, Front to Back
Airflow - AFO				
Fan Tray 1				Fan Tray, Front to Back
Airflow - AFO				

show chassis hardware detail (EX9253 Switch)

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN126145CJCB	EX9253
Midplane	REV 06	750-074276	CAJE4108	Midplane 2
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x6
Routing Engine 1		BUILTIN	BUILTIN	RE-S-2X00x6
CB 0	REV 24	750-067071	CAJF6414	Control Board
Mezz	REV 14	711-066896	CAJF6327	Control Mezz Board
CB 1	REV 24	750-067071	CAJF6398	Control Board
Mezz	REV 14	711-066896	CAJF6314	Control Mezz Board
FPC 0	REV 19	750-066879	CAJD1692	LC2103
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0		BUILTIN	BUILTIN	6xQSFP
Xcvr 0	REV 01	740-054053	QH20019A	QSFP+-4X10G-SR
PIC 1	REV 15	750-068806	CAJD1416	MIC1
Xcvr 0	REV 01	740-061405	1ECQ1151163	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-061405	1ECQ11511AK	QSFP-100GBASE-SR4
Xcvr 2	REV 01	740-032986	QB160112	QSFP+-40G-SR4
FPC 1	REV 19	750-066879	CAJD1685	LC2103
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0		BUILTIN	BUILTIN	6xQSFP
PIC 1	REV 15	750-068806	CAJD1393	MIC1
Xcvr 0	REV 01	740-032986	QB120887	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QD465034	QSFP+-40G-SR4
Xcvr 2	REV 01	740-052009	UWE2CBQ	QSFP+-40G-LR4
Xcvr 4	REV 01	740-032986	QB120701	QSFP+-40G-SR4
PEM 0	REV 01	740-066937	1HS17070027	JNP-PWR1600-AC

PEM 1	REV 01	740-066937	1HS17070151	JNP-PWR1600-AC
PEM 4	REV 01	740-066937	1HS17070090	JNP-PWR1600-AC
PEM 5	REV 01	740-066937	1HS16480119	JNP-PWR1600-AC
Fan Tray 0	REV 08	760-069329	CAJF6944	JNP FAN 3RU
Fan Tray 1	REV 08	760-069329	CAJF6863	JNP FAN 3RU
Fan Tray 2	REV 08	760-069329	CAJF6891	JNP FAN 3RU
Fan Tray 3	REV 08	760-069329	CAJF6937	JNP FAN 3RU

show chassis hardware detail (PTX10008 Routers)

user@switch> show chassis hardware detail

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			DE487	JNP10008 [PTX10008 -
PILOT BUILD V1.1]				
Midplane	REV 27	750-054097	ACPD4307	Midplane 8
Routing Engine 0		BUILTIN	BUILTIN	RE-PTX-2X00x4
vtbd0 15360 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 128 MB	QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1)	EHCI root HUB 0		Intel	uhub0
usb1 (addr 0.2)	product 0x0020 32		vendor 0x8087	uhub1
Routing Engine 1		BUILTIN	BUILTIN	RE-PTX-2X00x4
vtbd0 15360 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 128 MB	QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1)	EHCI root HUB 0		Intel	uhub0
usb1 (addr 0.2)	product 0x0020 32		vendor 0x8087	uhub1
CB 0	REV 02	750-068820	ACNZ4440	Control Board
CB 1	REV 02	750-068820	ACNZ8284	Control Board
FPC 0	REV 36	750-051354	ACNP4679	LC1102 - 12C / 36Q /
144X				
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 1	REV 01	740-058734	1ECQ113834D	QSFP-100GBASE-SR4
Xcvr 5	REV 01	740-058734	1ECQ1137067	QSFP-100GBASE-SR4
Xcvr 6	REV 01	740-054053	QF3205SD	QSFP+-4X10G-SR
Xcvr 7	REV 01	740-058734	1ECQ11381MP	QSFP-100GBASE-SR4
Xcvr 11	REV 01	740-061405	1ACQ110507K	QSFP-100GBASE-SR4
Xcvr 13	REV 01	740-058734	1ECQ11390ZB	QSFP-100GBASE-SR4
Xcvr 17	REV 01	740-058734	1ECQ11381M1	QSFP-100GBASE-SR4
Xcvr 19	REV 01	740-058734	1ECQ11381JS	QSFP-100GBASE-SR4
Xcvr 23	REV 01	740-058734	1ACQ112000E	QSFP-100GBASE-SR4
Xcvr 25	REV 01	740-058734	1ECQ11381NT	QSFP-100GBASE-SR4
Xcvr 28	REV 01	740-054053	QG1502WV	QSFP+-4X10G-SR
Xcvr 29	REV 01	740-058734	1ACQ112000D	QSFP-100GBASE-SR4
Xcvr 33	REV 01	740-058734	1ACQ1134065	QSFP-100GBASE-SR4
Xcvr 34	REV 01	740-067442	XV20L4L	QSFP+-40G-SR4
FPC 1	REV 33	750-051354	ACNX8831	LC1102 - 12C / 36Q /
144X				
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 5		NON-JNPR	37700171YY0084	QSFP-100GBASE-LR4
Xcvr 25		NON-JNPR	GDA2017459	QSFP-100GBASE-LR4
Xcvr 29		NON-JNPR	GDF2008750	QSFP-100GBASE-LR4
FPC 2	REV 32	750-051357	ACPB0341	LC1101 - 30C / 30Q / 96X

CPU PIC 0		BUILTIN BUILTIN	BUILTIN BUILTIN	FPC CPU 30x100GE/30x40GE/96x10GE
Xcvr 0		NON-JNPR	37700170YZC305	QSFP-100GBASE-LR4
Xcvr 4		NON-JNPR	37700170YZC306	QSFP-100GBASE-LR4
Xcvr 9	REV 01	740-054053	QF36013S	QSFP+-4X10G-SR
Xcvr 12	REV 01	740-067442	XV301AU	QSFP+-40G-SR4
Xcvr 14	REV 01	740-043308	UWE2CG9	QSFP+-40G-LR4
Xcvr 16	REV 01	740-043308	UWH141S	QSFP+-40G-LR4
Xcvr 17	REV 01	740-058734	1ECQ11180VH	QSFP-100GBASE-SR4
Xcvr 18	REV 01	740-054050	INFAJ0492237	QSFP+-4X10G-LR
Xcvr 26	REV 01	740-058734	1ACQ111803N	QSFP-100GBASE-SR4
Xcvr 27	REV 01	740-058734	1ACQ113405S	QSFP-100GBASE-SR4
FPC 3	REV 35	750-051357	ACPD2186	LC1101 - 30C / 30Q / 96X
CPU PIC 0		BUILTIN BUILTIN	BUILTIN BUILTIN	FPC CPU 30x100GE/30x40GE/96x10GE
Xcvr 0	REV 01	740-061409	1GCQA1470A3	QSFP-100GBASE-LR4-T2
Xcvr 1	REV 01	740-061409	1GCQA1470XC	QSFP-100GBASE-LR4-T2
Xcvr 7		NON-JNPR	FG4550500008	QSFP-100G-CWDM4
Xcvr 24	REV 01	740-058734	1ECQ11381LX	QSFP-100GBASE-SR4
Xcvr 29	REV 01	740-043308	UWE0UYS	QSFP+-40G-LR4
FPC 5 144X	REV 08	750-068822	ACPF0057	LC1102 - 12C / 36Q /
CPU PIC 0		BUILTIN BUILTIN	BUILTIN BUILTIN	FPC CPU 12x100GE/36x40GE/144x10GE
FPC 6 144X	REV 08	750-068822	ACPE9951	LC1102 - 12C / 36Q /
CPU PIC 0		BUILTIN BUILTIN	BUILTIN BUILTIN	FPC CPU 12x100GE/36x40GE/144x10GE
Xcvr 1	REV 01	740-054053	QF3208LG	QSFP+-4X10G-SR
Xcvr 7	REV 01	740-067442	XV20LGN	QSFP+-40G-SR4
Xcvr 8	REV 01	740-067442	XV20VMV	QSFP+-40G-SR4
Xcvr 9	REV 01	740-067442	XV20KCN	QSFP+-40G-SR4
Xcvr 10	REV 01	740-067442	XU504QD	QSFP+-40G-SR4
Xcvr 11	REV 01	740-067442	XU504X7	QSFP+-40G-SR4
Xcvr 12	REV 01	740-067442	XU504W8	QSFP+-40G-SR4
Xcvr 16	REV 01	740-032986	QF4301JP	QSFP+-40G-SR4
Xcvr 17	REV 01	740-032986	QF4303AE	QSFP+-40G-SR4
Xcvr 18	REV 01	740-054050	INFAJ0492400	QSFP+-4X10G-LR
Xcvr 19	REV 01	740-054050	INFAJ0492142	QSFP+-4X10G-LR
Xcvr 24	REV 01	740-032986	QF4301KB	QSFP+-40G-SR4
Xcvr 25	REV 01	740-032986	QF4303YP	QSFP+-40G-SR4
Xcvr 30	REV 01	740-067442	XV300ZX	QSFP+-40G-SR4
Xcvr 31	REV 01	740-043308	UWH2KBW	QSFP+-40G-LR4
Xcvr 34	REV 01	740-054053	QG1501YU	QSFP+-4X10G-SR
FPD Board	REV 07	711-054687	ACPC7142	Front Panel Display
Power Supply 0	REV 02	740-049388	1EDL62102N9	Power Supply AC
Power Supply 1	REV 02	740-049388	1EDL60300KX	Power Supply AC
Power Supply 2	REV 02	740-049388	1EDL60300DL	Power Supply AC
Power Supply 3	REV 02	740-049388	1EDL61701BT	Power Supply AC
Power Supply 4	REV 02	740-049388	1EDL62102P7	Power Supply AC
Power Supply 5	REV 02	740-049388	1EDL62102PP	Power Supply AC
FTC 0	REV 14	750-050108	ACPE4038	Fan Controller 8
FTC 1	REV 14	750-050108	ACPE4032	Fan Controller 8
Fan Tray 0	REV 09	760-054372	ACPD6799	Fan Tray 8
Fan Tray 1	REV 09	760-054372	ACNZ3584	Fan Tray 8

SIB 0	REV 24	750-050058	ACPD4587	Switch Fabric 8
SIB 1	REV 24	750-050058	ACNZ0635	Switch Fabric 8
SIB 2	REV 24	750-050058	ACPD4908	Switch Fabric 8
SIB 3	REV 24	750-050058	ACNZ0617	Switch Fabric 8
SIB 4	REV 24	750-050058	ACNZ0527	Switch Fabric 8
SIB 5	REV 23	750-050058	ACNX6980	Switch Fabric 8

show chassis hardware detail (PTX10016 Routers)

```
user@switch> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			DH995	JNP10016 [PTX10016]
Midplane	REV 22	750-056555	ACPM7810	Midplane 16
Routing Engine 0		BUILTIN	BUILTIN	RE-PTX-2X00x4
vtbd0 15360 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 128 MB	QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1)	EHCI root HUB 0		Intel	uhub0
usb1 (addr 0.2)	product 0x0020 32		vendor 0x8087	uhub1
Routing Engine 1		BUILTIN	BUILTIN	RE-PTX-2X00x4
vtbd0 15360 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 128 MB	QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1)	EHCI root HUB 0		Intel	uhub0
usb1 (addr 0.2)	product 0x0020 32		vendor 0x8087	uhub1
CB 0	REV 03	750-068820	ACPL7238	Control Board
CB 1	REV 03	750-068820	ACPL7298	Control Board
FPC 1	REV 36	750-077140	ACNP4590	LC1102 - 12C / 36Q / 144X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 0	REV 01	740-054053	QF3600AV	QSFP+-4X10G-SR
Xcvr 35	REV 01	740-061405	1ACQ110507K	QSFP-100GBASE-SR4
FPC 3	REV 07	750-071975	CAHA2224	LC1102 - 12C / 36Q / 144X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 0	REV 01	740-054053	QG1505YM	QSFP+-4X10G-SR
Xcvr 11		NON-JNPR	GDA2017459	QSFP-100GBASE-LR4
Xcvr 35		NON-JNPR	GDF2008750	QSFP-100GBASE-LR4
FPC 5	REV 13	750-068822	ACPD6501	LC1102 - 12C / 36Q / 144X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 1	REV 01	740-058734	1ECQ11381LA	QSFP-100GBASE-SR4
Xcvr 2	REV 01	740-043308	UWH141S	QSFP+-40G-LR4
Xcvr 3	REV 01	740-043308	UWE2CG9	QSFP+-40G-LR4
FPC 6	REV 37	750-077140	ACNS2793	LC1102 - 12C / 36Q / 144X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 0	REV 01	740-032986	QH0400VH	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QH0400VM	QSFP+-40G-SR4

Xcvr 35	REV 01	740-058734	1ECQ11390ZB	QSFP-100GBASE-SR4
FPC 8	REV 36	750-077140	ACNP4625	LC1102 - 12C / 36Q /
144X				
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	12x100GE/36x40GE/144x10GE
Xcvr 1	REV 01	740-058732	1AMQA14206D	QSFP-100GBASE-LR4
Xcvr 10	REV 01	740-032986	QF4301KB	QSFP+-40G-SR4
Xcvr 24	REV 01	740-054050	INFAJ0492244	QSFP+-4X10G-LR
FPC 9	REV 35	750-071976	ACPD3055	LC1101 - 30C / 30Q / 96X
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	30x100GE/30x40GE/96x10GE
Xcvr 0		NON-JNPR	INGBT7970007	QSFP-100GBASE-LR4
Xcvr 1		NON-JNPR	UWQ24D9	QSFP-100GBASE-LR4
Xcvr 2		NON-JNPR	INGBT7970011	QSFP-100GBASE-LR4
Xcvr 3		NON-JNPR	UX60AF1	QSFP-100G-CWDM4
Xcvr 4		NON-JNPR	UX408JJ	QSFP-100GBASE-LR4
Xcvr 11	REV 01	740-058734	1ECQ113835F	QSFP-100GBASE-SR4
Xcvr 18		NON-JNPR	Q7496	QSFP-100G-CWDM4
Xcvr 29	REV 01	740-058734	1ECQ11380LZ	QSFP-100GBASE-SR4
Power Supply 0	REV 02	740-049388	1EDL625039E	Power Supply AC
Power Supply 1	REV 02	740-049388	1EDL62503AD	Power Supply AC
Power Supply 2	REV 02	740-049388	1EDL625039P	Power Supply AC
Power Supply 3	REV 02	740-049388	1EDL702004E	Power Supply AC
Power Supply 4	REV 02	740-049388	1EDL625039D	Power Supply AC
Power Supply 5	REV 02	740-049388	1EDL63706JD	Power Supply AC
Power Supply 6	REV 02	740-049388	1EDL63706JH	Power Supply AC
FTC 0	REV 10	750-050309	ACPM2918	Fan Controller 16
FTC 1	REV 10	750-050309	ACPE8185	Fan Controller 16
Fan Tray 0	REV 10	760-077141	ACPV7288	Fan Tray 16
Fan Tray 1	REV 10	760-057901	ACPL0546	Fan Tray 16
SIB 0	REV 15	750-058270	ACPM2804	Switch Fabric 16
SIB 1	REV 15	750-058270	ACPM2808	Switch Fabric 16
SIB 2	REV 15	750-058270	ACPL4450	Switch Fabric 16
SIB 3	REV 15	750-058270	ACPJ9834	Switch Fabric 16
SIB 4	REV 15	750-058270	ACPM2814	Switch Fabric 16
SIB 5	REV 15	750-058270	ACPL4277	Switch Fabric 16
FPD Board	REV 07	711-054687	ACPL1407	Front Panel Display

show chassis hardware (M7i Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			31959	M7i
Midplane	REV 02	710-008761	CA0209	M7i Midplane
Power Supply 0	Rev 04	740-008537	PD10272	AC Power Supply
Routing Engine	REV 01	740-008846	1000396803	RE-5.0
CFEB	REV 02	750-009492	CA0166	Internet Processor IIV1
FPC 0				E-FPC
PIC 0	REV 04	750-003163	HJ6416	1x G/E, 1000 BASE-SX
PIC 1	REV 04	750-003163	HJ6423	1x G/E, 1000 BASE-SX
PIC 2	REV 04	750-003163	HJ6421	1x G/E, 1000 BASE-SX
PIC 3	REV 02	750-003163	HJ0425	1x G/E, 1000 BASE-SX
FPC 1				E-FPC
PIC 2	REV 01	750-009487	HM2275	ASP - Integrated
PIC 3	REV 01	750-009098	CA0142	2x F/E, 100 BASE-TX

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			B1157	M7i
Midplane	REV 05	710-008761	DM0840	M7i Midplane
Power Supply 0	Rev 08	740-008537	TE53755	AC Power Supply
Routing Engine	REV 07	740-011202	1000736567	RE-850
CFEB	REV 09	750-010463	DK6952	Internet Processor II
FPC 0				E-FPC
PIC 0	REV 12	750-012838	DL7993	4x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011614	PD94TDJ	SFP-LX10
Xcvr 1	REV 01	740-011615	PAD5EER	UNSUPPORTED
Xcvr 2	REV 01	740-011614	PD94THU	SFP-LX10
Xcvr 3		NON-JNPR	PDC2E7A	SFP-LX10
PIC 1	REV 03	750-023116	JT0203	4x CHSTM1 SDH CE SFP
Xcvr 0	REV 01	740-012434	AGT063832PS	SFP-SR
Xcvr 1	REV 01	740-012434	AGT063832LY	SFP-SR
Xcvr 3	REV 01	740-016064	C06J19018	SFP-LR
PIC 2	REV 15	750-014895	DM5757	MultiServices 100
PIC 3	REV 01	750-025390	JW9448	12x T1/E1 CE
FPC 1				E-FPC
PIC 2		BUILTIN	BUILTIN	1x Tunnel
PIC 3	REV 09	750-009099	DM0899	1x G/E, 1000 BASE
Xcvr 0	REV 01	740-012434	AGT07150HGJ	UNSUPPORTED
Fan Tray				Rear Fan Tray

show chassis hardware (M10 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			1122	M10
Midplane	REV 1.1	710-001950	S/N AC6626	
Power supply A	Rev 01	740-002497	S/N LC36095	AC
Power supply B	Rev 01	740-002497	S/N LC36100	AC
Display	REV 1.2	710-001995	S/N AC6656	
Host			18000005dfb3fb01	teknor
FEB	REV 01	710-001948	S/N AC6632	Internet Processor II
FPC 0				
PIC 0	REV 08	750-001072	S/N AB2485	1x G/E, 1000 BASE-SX
PIC 1	REV 01	750-000613	S/N AA1048	1x OC-12 SONET, SMIR
FPC 1				
Fan Tray 0				FANTRAY-M10I-S
Fan Tray 1				FANTRAY-M10I-S

show chassis hardware models (M10 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	710-008920		CHAS-MP-M10i-S
Power Supply 0	Rev 06	740-008537		PWR-M10i-M7i-AC-S
Power Supply 1	Rev 06	740-008537		PWR-M10i-M7i-AC-S
HCM 0	REV 03	710-010580		HCM-M10i-S
HCM 1	REV 03	710-010580		HCM-M10i-S
Routing Engine 0	REV 09	740-009459		RE-400-256-S
CFEB 0	REV 05	750-010465		FEB-M10i-M7i-S
FPC 0				

PIC 0	REV 10	750-002971	PE-40C3-SON-MM
PIC 1	REV 11	750-002992	PE-4FE-TX
PIC 2	REV 03	750-002977	PE-20C3-ATM-MM
PIC 3	REV 08	750-005724	PE-20C3-ATM2-MM
FPC 1			
PIC 2	REV 12	750-008425	PE-AS
PIC 3	REV 13	750-005636	PE-4CHDS3-QPP
Fan Tray 0			FANTRAY-M10I-S
Fan Tray 1			FANTRAY-M10I-S

show chassis hardware (M20 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			20033	M20
Backplane	REV 07	710-001517	S/N AA7940	
Power supply B	Rev 01	740-001465	S/N 000001	AC
Display	REV 02	710-001519	S/N AA9704	
Host 0			98000004f8f27501	teknor
SSB slot 0	REV 01	710-001951	S/N AD5905	Internet Processor II
SSRAM bank 0	REV 01	710-001385	S00480	2 MB
SSRAM bank 1	REV 01	710-001385	S00490	2 MB
SSRAM bank 2	REV 01	710-001385	S001:?	2 MB
SSRAM bank 3	REV 01	710-001385	S00483	2 MB
SSB slot 1	N/A	N/A	N/A	Backup
FPC 1	REV 01	710-001292	S/N AB7528	
SSRAM	REV 01	710-000077	S/N 304209	1 MB
SDRAM bank 0	REV 01	710-000099	S/N 000603	64 MB
SDRAM bank 1	REV 01	710-000099	S/N 000414	64 MB
PIC 0	REV 03	750-000612	S/N AB8433	2x OC-3 ATM, MM
PIC 1	REV 01	750-000616	S/N AA1168	1x OC-12 ATM, MM
PIC 2	REV 01	750-000613	S/N AA1008	1x OC-12 SONET, SMIR
PIC 3	REV 01	750-002501	S/N AD5810	4x E3
FPC 2	REV 01	710-001292	S/N AC0119	
SSRAM	REV 01	710-000077	S/N 503241	1 MB
SDRAM bank 0	REV 01	710-000099	S/N 306835	64 MB
SDRAM bank 1	REV 01	710-000099	S/N 306832	64 MB
Fan Tray 0				Front Upper Fan Tray
Fan Tray 1				Front Middle Fan Tray
Fan Tray 2				Front Bottom Fan Tray
Fan Tray 3				Rear Fan Tray

show chassis hardware models (M20 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Backplane	REV 03	710-002334		CHAS-MP-M20-S
Power Supply A	REV 06	740-001465		PWR-M20-AC-S
Display	REV 04	710-001519		CRAFT-M20-S
Routing Engine 0	REV 06	740-003239		RE-333-768-S
Routing Engine 1	REV 06	740-003239		RE-333-768-S
SSB 0	REV 02	710-001951		SSB-E-M20
SSB 1	N/A	N/A		
FPC 0	REV 03	710-003308		FPC-E
PIC 0	REV 08	750-002303		P-4FE-TX

PIC 1	REV 07	750-004745	P-2MCDS3
PIC 2	REV 03	750-002965	PE-4CHDS3
FPC 1	REV 03	710-003308	FPC-E
PIC 0	REV 03	750-002914	P-20C3-ATM-MM
Fan Tray 0			FANTRAY-F-M20-S
Fan Tray 1			FANTRAY-F-M20-S
Fan Tray 2			FANTRAY-F-M20-S
Fan Tray 3			FANTRAY-R-M20-S

show chassis hardware (M40 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Backplane	REV 02	710-000073	S/N AA0053	
Power supply A	Rev 2	740-000235	S/N 000042	DC
Maxicab	REV X1	710-000229	S/N AA0139	
Minicab	REV X1	710-000482	S/N AA0201	
Display	REV 06	710-000150	S/N AA0905	
Host				cpv5000
SCB	REV X1	710-000075	S/N AA0158	Internet Processor I
SSRAM bank 0	REV 02	710-000077	S/N AA2267	1 MB
SSRAM bank 1	REV 02	710-000077	S/N AA2270	1 MB
SSRAM bank 2	REV 02	710-000077	S/N AA2269	1 MB
SSRAM bank 3	REV 02	710-000077	S/N AA2268	1 MB
FPC 0	REV 01	710-000175	S/N AA0048	
SSRAM	REV 01	710-000077	S/N AA2333	1 MB
SDRAM bank 0	REV 01	710-000099	S/N AA2332	64 MB
SDRAM bank 1	REV X1	710-000099	S/N AA2337	64 MB
PIC 0	REV 04	750-000613	S/N aa0343	1x OC-12 SONET, SMIR
PIC 1	REV 04	750-000613	S/N AA0379	1x OC-12 SONET, SMIR
PIC 2	REV 04	750-000613	S/N AA0377	1x OC-12 SONET, SMIR
PIC 3	REV 04	750-000613	S/N AA0378	1x Tunnel
FPC 2	REV 01	710-000175	S/N AA0042	
SSRAM	REV 02	710-000077	S/N AA2288	1 MB
SDRAM bank 0	REV 01	710-000099	S/N AA2331	64 MB
SDRAM bank 1	REV 01	710-000099	S/N AA2330	64 MB
PIC 0	REV X1	750-000603	S/N AA0143	4x OC-3 SONET, SMIR
PIC 1	REV X1	750-000615	S/N AA0149	4x OC-3 SONET, MM
PIC 2	REV X1	750-000611	S/N AA0148	4x OC-3 SONET, MM
PIC 3	REV 04	750-000613	S/N AA0330	1x OC-12 SONET, SMIR
FPC 4	REV 01	710-000175	S/N AA0050	
SSRAM	REV 01	710-000077	S/N AA2327	1 MB
SDRAM bank 0	REV 01	710-000099	S/N AA2329	64 MB
SDRAM bank 1	REV 01	710-000099	S/N AA2328	64 MB
PIC 0	REV 04	750-000613	S/N AA0320	1x OC-12 SONET, SMIR
PIC 2	REV 05	750-000616	S/N AA1341	1x OC-12 ATM, MM
PIC 3	REV 08	750-001072	S/N AB2462	1x G/E, 1000 BASE-SX
FPC 5	REV 10	710-000175	S/N AA7663	
SSRAM	REV 01	710-000077	S/N 501590	1 MB
SDRAM bank 0	REV 01	710-000099	S/N 300949	64 MB
SDRAM bank 1	REV 01	710-000099	S/N 300868	64 MB
PIC 1	REV 01	750-001323	S/N AB1670	1x Tunnel

show chassis hardware (M40e Router)

```
user@host> show chassis hardware
```


Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis				m40e
Midplane	REV 01	710-005071	AX3671	
FPM CMB	REV 03	710-001642	AR9074	
FPM Display	REV 03	710-001647	AR7331	
CIP	REV 04	710-002649	BB4449	
PEM 0	Rev 01	740-003787	MC12364	Power Entry Module
PEM 1	Rev 01	740-003787	MC12383	Power Entry Module
PCG 0	REV 07	710-001568	AG1332	
PCG 1	REV 07	710-001568	AR3789	
Host 0			3e000007c8176601	Present
MCS 0	REV 11	710-001226	AN5813	
SFM 0 SPP	REV 07	710-001228	AG4676	
SFM 0 SPR	REV 05	710-002189	AE4735	Internet Processor II
SFM 1 SPP	REV 07	710-001228	AP1347	
SFM 1 SPR	REV 05	710-002189	BE0063	Internet Processor II
FPC 0	REV 01	710-011725	BE0669	M40e-EP-FPC Type 1
CPU	REV 01	710-004600	BD9504	
PIC 0	REV 03	750-003737	AY3991	4x G/E, 1000 BASE-SX
FPC 1	REV 01	710-005197	BD9842	M40e-FPC Type 2
CPU	REV 01	710-004600	BB4869	
PIC 0	REV 07	750-001900	AR8278	1x OC-48 SONET, SMSR
FPC 2	REV 02	710-005197	BD9824	M40e-FPC Type 2
CPU	REV 01	710-004600	BD9531	
PIC 0	REV 03	750-003737	AY3986	4x G/E, 1000 BASE-SX
FPC 4	REV 02	710-005078	BE0664	M40e-FPC Type 1
CPU	REV 01	710-004600	BD9559	
PIC 0	REV 03	750-001894	AG7963	1x G/E, 1000 BASE-SX
PIC 2	REV 01	750-002575	AF2472	4x OC-3 SONET, SMIR
FPC 6	REV 02	710-005078	BE0652	M40e-FPC Type 1
CPU	REV 01	710-004600	BD9607	
PIC 0	REV 02	750-002911	AN2286	4x F/E, 100 BASE-TX
PIC 2	REV 01	750-002577	AP6345	4x OC-3 SONET, MM

show chassis hardware (M120 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN000054AC	M120
Midplane	REV 01	710-013667	RB4170	M120 Midplane
FPM Board	REV 02	710-011407	CJ9186	M120 FPM Board
FPM Display	REV 02	710-011405	CJ9173	M120 FPM Display
FPM CIP	REV 02	710-011410	CJ9221	M120 FPM CIP
PEM 0	Rev 05	740-011936	RM28320	AC Power Entry Module
PEM 1	Rev 05	740-011936	RM28321	AC Power Entry Module
Routing Engine 0	REV 03	740-014080	1000642883	RE-A-1000
CB 0	REV 03	710-011403	CM8346	M120 Control Board
CB 1	REV 06	710-011403	CP6728	M120 Control Board
FPC 1	REV 02	710-015908	CP6925	M120 CFPC 10GE
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN) XFP
Xcvr 0	REV 01	740-014279	62E204N00007	XFP-10G-LR
FPC 3	REV 03	710-011393	CJ9234	M120 FPC Type 2
PIC 0	REV 16	750-008155	NB5229	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F15JB	SFP-SX
Xcvr 1	REV 01	740-007326	P4Q0R9G	SFP-SX
PIC 1	REV 09	750-007745	CG4360	4x OC-3 SONET, SMIR
PIC 2	REV 16	750-008155	ND7787	2x G/E IQ, 1000 BASE

Xcvr 0	REV 01	740-011613	P9F12AS	SFP-SX
Xcvr 1	REV 01	740-011613	P9F1ALU	SFP-SX
PIC 3	REV 07	750-011800	JW1284	8x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	P9F1AM6	SFP-SX
Xcvr 6	REV 01	740-011613	P9F16NN	SFP-SX
Xcvr 7	REV 01	740-011782	P8C29Y7	SFP-SX
Board B	REV 02	710-011395	CN3754	M120 FPC Mezz
FPC 4	REV 02	710-011398	CP6741	M120 FPC Type 3
PIC 0	REV 16	750-007141	NB2855	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	P922A1F	SFP-SX
Xcvr 1	REV 01	740-011782	P922A16	SFP-SX
Xcvr 2	REV 01	740-011782	P922A0U	SFP-SX
Xcvr 3	REV 01	740-011782	P9229UZ	SFP-SX
Xcvr 4	REV 01	740-009029	P11JXWP	SFP-LX
Xcvr 6	REV 01	740-011613	P9F1ALW	SFP-SX
FPC 5	REV 01	710-011388	CJ9088	M120 FPC Type 1
PIC 0	*** Hardware Not Supported ***			
PIC 1	REV 05	750-012052	NB0410	1x CHOC3 IQ SONET, SMLR
PIC 2	REV 01	750-013167	CM3824	4x CHDS3 IQ
PIC 3	REV 01	750-010240	CB5366	1x G/E SFP, 1000 BASE
Board B	REV 01	710-011390	CJ9103	M120 FPC Mezz Board
FEB 3	REV 04	710-011663	CP6673	M120 FEB
FEB 4	REV 04	710-011663	CJ9368	M120 FEB
FEB 5	REV 04	710-011663	CJ9386	M120 FEB
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Top Fan Tray
Fan Tray 3				Rear Bottom Fan Tray

show chassis hardware detail (M120 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN000054AC	M120
Midplane	REV 01	710-013667	RB4170	M120 Midplane
FPM Board	REV 02	710-011407	CJ9186	M120 FPM Board
FPM Display	REV 02	710-011405	CJ9173	M120 FPM Display
FPM CIP	REV 02	710-011410	CJ9221	M120 FPM CIP
PEM 0	Rev 05	740-011936	RM28320	AC Power Entry Module
PEM 1	Rev 05	740-011936	RM28321	AC Power Entry Module
Routing Engine 0	REV 03	740-014080	1000642883	RE-A-1000
ad0	248 MB	SILICONSYSTEMS INC	256M 126CT505S0763SC00110	Compact Flash
ad2	38154 MB	HTES41040G9SA00	MPBBTOX2HS2E3M	Hard Disk
CB 0	REV 03	710-011403	CM8346	M120 Control Board
CB 1	REV 06	710-011403	CP6728	M120 Control Board
FPC 1	REV 02	710-015908	CP6925	M120 CFPC 10GE
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN) XFP
Xcvr 0	REV 01	740-014279	62E204N00007	XFP-10G-LR
FPC 3	REV 03	710-011393	CJ9234	M120 FPC Type 2
PIC 0	REV 16	750-008155	NB5229	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F15JB	SFP-SX
Xcvr 1	REV 01	740-007326	P4Q0R9G	SFP-SX
PIC 1	REV 09	750-007745	CG4360	4x OC-3 SONET, SMIR
PIC 2	REV 16	750-008155	ND7787	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F12AS	SFP-SX
Xcvr 1	REV 01	740-011613	P9F1ALU	SFP-SX

PIC 3	REV 07	750-011800	JW1284	8x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	P9F1AM6	SFP-SX
Xcvr 6	REV 01	740-011613	P9F16NN	SFP-SX
Xcvr 7	REV 01	740-011782	P8C29Y7	SFP-SX
Board B	REV 02	710-011395	CN3754	M120 FPC Mezz
FPC 4	REV 02	710-011398	CP6741	M120 FPC Type 3
PIC 0	REV 16	750-007141	NB2855	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	P922A1F	SFP-SX
Xcvr 1	REV 01	740-011782	P922A16	SFP-SX
Xcvr 2	REV 01	740-011782	P922A0U	SFP-SX
Xcvr 3	REV 01	740-011782	P9229UZ	SFP-SX
Xcvr 4	REV 01	740-009029	P11JXWP	SFP-LX
Xcvr 6	REV 01	740-011613	P9F1ALW	SFP-SX
FPC 5	REV 01	710-011388	CJ9088	M120 FPC Type 1
PIC 0	*** Hardware Not Supported ***			
PIC 1	REV 05	750-012052	NB0410	1x CHOC3 IQ SONET, SMLR
PIC 2	REV 01	750-013167	CM3824	4x CHDS3 IQ
PIC 3	REV 01	750-010240	CB5366	1x G/E SFP, 1000 BASE
Board B	REV 01	710-011390	CJ9103	M120 FPC Mezz Board
FEB 3	REV 04	710-011663	CP6673	M120 FEB
FEB 4	REV 04	710-011663	CJ9368	M120 FEB
FEB 5	REV 04	710-011663	CJ9386	M120 FEB
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Top Fan Tray
Fan Tray 3				Rear Bottom Fan Tray

show chassis hardware models (M120 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-013667		
FPM CIP	REV 02	710-011410		CRAFT-M120-S
PEM 0	Rev 05	740-011936		PWR-M120-AC-S
PEM 1	Rev 05	740-011936		PWR-M120-AC-S
Routing Engine 0	REV 03	740-014080		RE-A-1000-2048-S
CB 0	REV 03	710-011403		CB-M120-S
CB 1	REV 06	710-011403		CB-M120-S
FPC 1	REV 02	710-015908		M120-cFPC-1XGE-XFP
FPC 3				
PIC 0	REV 16	750-008155		PB-2GE-SFP-QPP
PIC 1	REV 09	750-007745		PC-4OC3-SON-SMIR
PIC 2	REV 16	750-008155		PB-2GE-SFP-QPP
PIC 3	REV 07	750-011800		PB-8GE-TYPE2-SFP-IQ2
FPC 4				
PIC 0	REV 16	750-007141		PC-10GE-SFP
FPC 5				
PIC 1	REV 05	750-012052		PB-1CHOC3-SMIR-QPP
PIC 2	REV 01	750-013167		PE-4CHDS3-QPP
PIC 3	REV 01	750-010240		PB-1GE-SFP
Fan Tray 0				FFANTRAY-M120-S
Fan Tray 1				FFANTRAY-M120-S
Fan Tray 2				RFANTRAY-M120-S
Fan Tray 3				RFANTRAY-M120-S

show chassis hardware (M160 Router)

user@host> show chassis hardware

Item	Version	Part number	Serial number	Description
Chassis			101	M160
Midplane	REV 02	710-001245	S/N AB4107	
FPM CMB	REV 01	710-001642	S/N AA2911	
FPM Display	REV 01	710-001647	S/N AA2999	
CIP	REV 02	710-001593	S/N AA9563	
PEM 0	Rev 01	740-001243	S/N KJ35769	DC
PEM 1	Rev 01	740-001243	S/N KJ35765	DC
PCG 0	REV 01	710-001568	S/N AA9794	
PCG 1	REV 01	710-001568	S/N AA9804	
Host 1			da000004f8d57001	teknor
MCS 1	REV 03	710-001226	S/N AA9777	
SFM 0 SPP	REV 04	710-001228	S/N AA2975	
SFM 0 SPR	REV 02	710-001224	S/N AA9838	Internet Processor I
SFM 1 SPP	REV 04	710-001228	S/N AA2860	
SFM 1 SPR	REV 01	710-001224	S/N AB0139	Internet Processor I
FPC 0	REV 03	710-001255	S/N AA9806	FPC Type 1
CPU	REV 02	710-001217	S/N AA9590	
PIC 1	REV 05	750-000616	S/N AA1527	1x OC-12 ATM, MM
PIC 2	REV 05	750-000616	S/N AA1535	1x OC-12 ATM, MM
PIC 3	REV 01	750-000616	S/N AA1519	1x OC-12 ATM, MM
FPC 1	REV 02	710-001611	S/N AA9523	FPC Type 2
CPU	REV 02	710-001217	S/N AA9571	
PIC 0	REV 03	750-001900	S/N AA9626	1x STM-16 SDH, SMIR
PIC 1	REV 01	710-002381	S/N AD3633	2x G/E, 1000 BASE-SX
FPC 2				FPC Type OC192
CPU	REV 03	710-001217	S/N AB3329	
PIC 0	REV 01			1x OC-192 SM SR-2
Fan Tray 0				Rear Bottom Blower
Fan Tray 1				Rear Top Blower
Fan Tray 2				Front Top Blower
Fan Tray 3				Front Fan Tray

show chassis hardware models (M160 Router)

user@host> show chassis hardware models

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-009120		CHAS-BP-M320-S
FPM Display	REV 02	710-009351		CRAFT-M320-S
CIP	REV 03	710-005926		CIP-M320-S
PEM 2	Rev X4	740-009148		PWR-M-DC-S
PEM 3	Rev X4	740-009148		PWR-M-DC-S
Routing Engine 0	REV 02	740-008883		RE-1600-2048-S
Routing Engine 1	REV 02	740-008883		RE-1600-2048-S
FPC 0	REV 02	710-010419		M320-FPC1
PIC 0	REV 01	750-001323		P-TUNNEL
PIC 1	REV 02	750-002987		PE-10C12-SON-SMIR
PIC 2	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 04	750-001896		PB-10C12-SON-SMIR
FPC 1	REV 02	710-010419		M320-FPC1
PIC 0	REV 04	750-001894		PB-1GE-SX
PIC 1	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 03	750-001894		PB-1GE-SX
FPC 2	REV 02	710-010419		M320-FPC1

PIC 0	REV 10	750-005634	PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634	PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634	PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634	PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634	PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634	PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634	PB-1CHOC12SMIR-QPP
FPC 3			
PIC 0	REV 03	750-001895	PB-10C12-SON-MM
PIC 1	REV 04	750-001894	PB-1GE-SX
PIC 3	REV 04	750-003141	PB-1GE-SX-B
FPC 4	REV 02	710-010419	M320-FPC1
FPC 5	REV 02	710-010419	M320-FPC1
FPC 6	REV 02	710-010419	M320-FPC1
FPC 7			
PIC 0	REV 15	750-001901	PB-40C12-SON-SMIR
PIC 1	REV 06	750-001900	PB-10C48-SON-SMSR
PIC 2	REV 07	750-001900	PB-10C48-SON-SMSR
PIC 3	REV 05	750-003737	PB-4GE-SX
SIB 0	REV 03	710-009184	SIB-M-S
SIB 1	REV 03	710-009184	SIB-M-S
SIB 2	REV 03	710-009184	SIB-M-S
SIB 3	REV 03	710-009184	SIB-M-S
Fan Tray 0			FFANTRAY-M320-S
Fan Tray 1			FFANTRAY-M320-S
Fan Tray 2			RFANTRAY-M320-S

show chassis hardware detail (M160 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			101	M160
Midplane	REV 02	710-001245	S/N AB4107	
FPM CMB	REV 01	710-001642	S/N AA2911	
FPM Display	REV 01	710-001647	S/N AA2999	
CIP	REV 02	710-001593	S/N AA9563	
PEM 0	Rev 01	740-001243	S/N KJ35769	DC
PEM 1	Rev 01	740-001243	S/N KJ35765	DC
PCG 0	REV 01	710-001568	S/N AA9794	
PCG 1	REV 01	710-001568	S/N AA9804	
Host 1			da000004f8d57001	teknor
MCS 1	REV 03	710-001226	S/N AA9777	
SFM 0 SPP	REV 04	710-001228	S/N AA2975	
SFM 0 SPR	REV 02	710-001224	S/N AA9838	Internet Processor I
SSRAM bank 0	REV 01	710-000077	S/N 306456	1 MB
SSRAM bank 1	REV 01	710-000077	S/N 306474	1 MB
SSRAM bank 2	REV 01	710-000077	S/N 306388	1 MB
SSRAM bank 3	REV 01	710-000077	S/N 306392	1 MB
SFM 1 SPP	REV 04	710-001228	S/N AA2860	
SFM 1 SPR	REV 01	710-001224	S/N AB0139	Internet Processor I
SSRAM bank 0	REV 01	710-000077	S/N 302917	1 MB
SSRAM bank 1	REV 01	710-000077	S/N 302662	1 MB
SSRAM bank 2	REV 01	710-000077	S/N 302593	1 MB
SSRAM bank 3	REV 01	710-000077	S/N 100160	1 MB
FPC 0	REV 03	710-001255	S/N AA9806	FPC Type 1
CPU	REV 02	710-001217	S/N AA9590	
SSRAM	REV 01	710-000077	S/N 302836	1 MB
SDRAM 0	REV 01	710-001196	S00141	32 MB

SDRAM 1	REV 01	710-001196	S0010;	32 MB
SSRAM	REV 01	710-000077	S/N 302633	1 MB
SDRAM 0	REV 01	710-001196	S00143	32 MB
SDRAM 1	REV 01	710-001196	S00115	32 MB
SSRAM	REV 01	710-000077	S/N 302952	1 MB
SDRAM 0	REV 01	710-001196	S00135	32 MB
SDRAM 1	REV 01	710-001196	S001=3	32 MB
SSRAM	REV 01	710-000077	S/N 302892	1 MB
SDRAM 0	REV 01	710-001196	S00076	32 MB
SDRAM 1	REV 01	710-001196	S001=5	32 MB
PIC 1	REV 05	750-000616	S/N AA1527	1x OC-12 ATM, MM
PIC 2	REV 05	750-000616	S/N AA1535	1x OC-12 ATM, MM
PIC 3	REV 01	750-000616	S/N AA1519	1x OC-12 ATM, MM
FPC 1	REV 02	710-001611	S/N AA9523	FPC Type 2
CPU	REV 02	710-001217	S/N AA9571	
SSRAM	REV 01	710-000077	S/N 306340	1 MB
SDRAM 0	REV 01	710-001196	S00012	32 MB
SDRAM 1	REV 01	710-001196	S00017	32 MB
SSRAM	REV 01	710-000077	S/N 306454	1 MB
SDRAM 0	REV 01	710-001196	S00028	32 MB
SDRAM 1	REV 01	710-001196	S00027	32 MB
SSRAM	REV 01	710-000077	S/N 306492	1 MB
SDRAM 0	REV 01	710-001196	S00015	32 MB
SDRAM 1	REV 01	710-001196	S00031	32 MB
SSRAM	REV 01	710-000077	S/N 306363	1 MB
SDRAM 0	REV 01	710-001196	S00013	32 MB
SDRAM 1	REV 01	710-001196	S00032	32 MB
PIC 0	REV 03	750-001900	S/N AA9626	1x STM-16 SDH, SMIR
PIC 1	REV 01	710-002381	S/N AD3633	2x G/E, 1000 BASE-SX
FPC 2				FPC Type OC192
... SSRAM	REV 01	710-000077	S/N 306466	1 MB

show chassis hardware (M320 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			67245	M320
Midplane	REV 05	710-009120	RB1202	M320 Midplane
FPM GBUS	REV 04	710-005928	HZ5697	M320 Board
FPM Display	REV 05	710-009351	HR1464	M320 FPM Display
CIP	REV 04	710-005926	HT8672	M320 CIP
PEM 0	Rev 05	740-009148	QK34208	DC Power Entry Module
PEM 1	Rev 05	740-009148	QK34262	DC Power Entry Module
PEM 2	Rev 05	740-009148	QF10449	DC Power Entry Module
PEM 3	Rev 05	740-009148	QJ18257	DC Power Entry Module
Routing Engine 0	REV 06	740-008883	P11123901185	RE-4.0
CB 0	REV 07	710-009115	JB2382	M320 Control Board
FPC 0	REV 02	710-005017	CD9926	M320 FPC Type 2
CPU	REV 01	710-011659	CJ6940	M320 PCA SCPU
PIC 0	REV 07	750-001900	AT1594	1x OC-48 SONET, SMSR
PIC 1	REV 03	750-001850	HS2746	1x Tunnel
PIC 2	REV 05	750-010618	JE7117	4x G/E SFP, 1000 BASE
PIC 3	REV 06	750-001900	HE6083	1x OC-48 SONET, SMSR
FPC 2	REV 02	710-005017	CH0319	M320 FPC Type 1
CPU	REV 01	710-011659	CJ6942	M320 PCA SCPU
PIC 0	REV 05	750-003034	BD8705	4x OC-3 SONET, SMIR
FPC 5	REV 02	710-005017	CD9938	M320 FPC Type 2
CPU				

FPC 7	REV 02	710-005017	CD9934	M320 FPC Type 2
CPU				
SIB 0	REV 09	710-009184	JA6540	M320 SIB
SIB 1	REV 09	710-009184	HV9511	M320 SIB
SIB 2	REV 09	710-009184	HW2057	M320 SIB
SIB 3	REV 09	710-009184	JA6687	M320 SIB
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray

show chassis hardware models (M320 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-009120		CHAS-BP-M320-S
FPM Display	REV 02	710-009351		CRAFT-M320-S
CIP	REV 03	710-005926		CIP-M320-S
PEM 2	Rev X4	740-009148		PWR-M-DC-S
PEM 3	Rev X4	740-009148		PWR-M-DC-S
Routing Engine 0	REV 02	740-008883		RE-1600-2048-S
Routing Engine 1	REV 02	740-008883		RE-1600-2048-S
FPC 0	REV 02	710-010419		M320-FPC1
PIC 0	REV 01	750-001323		P-TUNNEL
PIC 1	REV 02	750-002987		PE-10C12-SON-SMIR
PIC 2	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 04	750-001896		PB-10C12-SON-SMIR
FPC 1	REV 02	710-010419		M320-FPC1
PIC 0	REV 04	750-001894		PB-1GE-SX
PIC 1	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 03	750-001894		PB-1GE-SX
FPC 2	REV 02	710-010419		M320-FPC1
PIC 0	REV 10	750-005634		PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634		PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634		PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634		PB-1CHOC12SMIR-QPP
PIC 1	REV 10	750-005634		PB-1CHOC12SMIR-QPP
PIC 2	REV 07	750-005634		PB-1CHOC12SMIR-QPP
PIC 3	REV 07	750-005634		PB-1CHOC12SMIR-QPP
FPC 3				
PIC 0	REV 03	750-001895		PB-10C12-SON-MM
PIC 1	REV 04	750-001894		PB-1GE-SX
PIC 3	REV 04	750-003141		PB-1GE-SX-B
FPC 4	REV 02	710-010419		M320-FPC1
FPC 5	REV 02	710-010419		M320-FPC1
FPC 6	REV 02	710-010419		M320-FPC1
FPC 7				
PIC 0	REV 15	750-001901		PB-40C12-SON-SMIR
PIC 1	REV 06	750-001900		PB-10C48-SON-SMSR
PIC 2	REV 07	750-001900		PB-10C48-SON-SMSR
PIC 3	REV 05	750-003737		PB-4GE-SX
SIB 0	REV 03	710-009184		SIB-M-S
SIB 1	REV 03	710-009184		SIB-M-S
SIB 2	REV 03	710-009184		SIB-M-S
SIB 3	REV 03	710-009184		SIB-M-S
Fan Tray 0				FFANTRAY-M320-S
Fan Tray 1				FFANTRAY-M320-S
Fan Tray 2				RFANTRAY-M320-S

show chassis hardware (MX5 Router)

user@host> show chassis hardware

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			E1368	MX5-T
Midplane	REV 01	711-038215	YF5288	MX5-T
PEM 0	Rev 04	740-028288	VA01215	AC Power Entry Module
PEM 1	Rev 04	740-028288	VA01218	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZA9136	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 24	750-028392	YX9820	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AM1045SUAQ3	SFP-SX
Xcvr 1	REV 01	740-031851	AM1045SUAPA	SFP-SX
Xcvr 2	REV 01	740-031851	AM1045SUAN7	SFP-SX
Xcvr 3	REV 01	740-031851	AM1045SU91Q	SFP-SX
Xcvr 4	REV 01	740-031851	AM1045SUDDR	SFP-SX
Xcvr 9	REV 01	740-011613	AM0848SB6A1	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AM1045SUANO	SFP-SX
Xcvr 1	REV 01	740-011613	AS0812S0719	SFP-SX
Xcvr 2	REV 01	740-011613	AM0821SA121	SFP-SX
Xcvr 3	REV 01	740-011613	PF21K21	SFP-SX
Xcvr 4	REV 01	740-011613	AM0848SB69Z	SFP-SX
Xcvr 5	REV 01	740-011782	P9P0XV3	SFP-SX
Xcvr 6	REV 01	740-011613	AM0812S8WJN	SFP-SX
Xcvr 7	REV 01	740-011613	PAM3G9Q	SFP-SX
Xcvr 8	REV 01	740-011613	AM0848SB4A6	SFP-SX
Xcvr 9	REV 01	740-011782	P9M0U37	SFP-SX
MIC 1	REV 20	750-028380	ZG2657	3D 2x 10GE XFP
PIC 2		BUILTIN	BUILTIN	1x 10GE XFP
PIC 3		BUILTIN	BUILTIN	1x 10GE XFP
Fan Tray				Fan Tray

show chassis hardware (MX10 Router)

user@host> show chassis hardware

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			E1372	MX10-T
Midplane	REV 01	711-038211	YF5285	MX10-T
PEM 0	Rev 04	740-028288	VB01678	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZA9053	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 24	750-028392	YX9436	3D 20x 1GE(LAN) SFP

PIC 0			BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AM1107SUFQW		SFP-SX
PIC 1		BUILTIN	BUILTIN		10x 1GE(LAN) SFP
Fan Tray					Fan Tray

show chassis hardware (MX40 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			E1367	MX40-T
Midplane	REV 01	711-038211	YF5284	MX40-T
PEM 0	Rev 04	740-028288	VB01680	AC Power Entry Module
PEM 1	Rev 04	740-028288	VB01700	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZA9048	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
Xcvr 0	REV 01	740-014279	M7067UPP	XFP-10G-LR
Xcvr 1		NON-JNPR	K9J02UN	XFP-10G-LR
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 24	750-028392	YX3504	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011613	AM0812S8WTE	SFP-SX
Xcvr 1	REV 01	740-011613	PFA6KV2	SFP-SX
Xcvr 2	REV 01	740-031851	AM1045SUDDM	SFP-SX
Xcvr 3	REV 01	740-011613	PD63C7M	SFP-SX
Xcvr 4	REV 01	740-011613	PD63DJY	SFP-SX
Xcvr 5	REV 02	740-011613	AA0950STLL9	SFP-SX
Xcvr 6	REV 01	740-011782	PAR1YHC	SFP-SX
Xcvr 7	REV 01	740-011782	P9P0XXL	SFP-SX
Xcvr 8	REV 01	740-011613	PD63D95	SFP-SX
Xcvr 9	REV 01	740-031851	AM1045SU9B8	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011613	PF21L3Z	SFP-SX
Xcvr 1	REV 01	740-031851	AM1045SU7M9	SFP-SX
Xcvr 2	REV 01	740-031851	AM1045SUAPT	SFP-SX
Xcvr 3	REV 01	740-011613	PFF2BZH	SFP-SX
Xcvr 4	REV 01	740-031851	AM1045SUDDN	SFP-SX
Xcvr 5	REV 01	740-031851	AM1039S00ZR	SFP-SX
Xcvr 6	REV 01	740-031851	AM1045SUD6Y	SFP-SX
Xcvr 8	REV 01	740-011613	PFM1QBS	SFP-SX
Xcvr 9	REV 01	740-011613	PFF2E25	SFP-SX
MIC 1	REV 01	750-021130	KG4391	3D 2x 10GE XFP
PIC 2		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-011571	C645XJ04G	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0		NON-JNPR	CA49BK0AE	XFP-10G-SR
Fan Tray				Fan Tray

show chassis hardware (Fixed MX80 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis				MX80-48T
Midplane	REV 01	711-031603	KF9250	MX80-48T
Routing Engine		BUILTIN	BUILTIN	Routing Engine
FEB 0		BUILTIN	BUILTIN	Forwarding Engine Board
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
Xcvr 0		NON-JNPR	M6439D41	XFP-10G-LR
Xcvr 1	REV 01	740-014279	6XE931N00202	XFP-10G-LR
Xcvr 2	REV 01	740-014289	C715XU05F	XFP-10G-SR
Xcvr 3	REV 01	740-014289	C650XU0EP	XFP-10G-SR
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 01	711-029399	JR6981	12x 1GE(LAN) RJ45
PIC 0		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
PIC 1		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
MIC 1	REV 01	BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
PIC 2		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
PIC 3		BUILTIN	BUILTIN	12x 1GE(LAN) RJ45
Fan Tray				Fan Tray

show chassis hardware (Modular MX80 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis				MX80
Midplane	REV 02	711-031594	JR7084	MX80
PEM 0	Rev 01	740-028288	000018	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
FEB 0		BUILTIN	BUILTIN	Forwarding Engine Board
QXM 0	REV 05	711-028408	JR7041	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 02	750-028380	JR6598	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-014289	T07M86365	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-014289	T07M71094	XFP-10G-SR
MIC 1	REV 02	750-028380	JG8548	3D 2x 10GE XFP
PIC 2		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	T08L86302	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	C810XU0BA	XFP-10G-SR
Fan Tray				Fan Tray

show chassis hardware (MX150)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			DD2316AF0078	MX150

Midplane	REV 04	650-066113	DD2316AF0078	MX150
Power Supply 0				
Routing Engine 0				RE-VMX
CB 0				VMX SCB
CB 1				VMX SCB
FPC 0				Virtual FPC
CPU	Rev. 1.0	RIOT	BUILTIN	
MIC 0				Virtual
PIC 0		BUILTIN	BUILTIN	Virtual
Xcvr 10	REV 02	740-013111	A331846	SFP-T
Xcvr 11	REV 02	740-013111	C248517	SFP-T
Fan Tray 0				fan-ctrl-0 0, Front to
Back Airflow - AFO				
Fan Tray 1				fan-ctrl-0 1, Front to
Back Airflow - AFO				

show chassis hardware models (MX150)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	Serial number	FRU model number
Midplane	REV 04	650-066113	DD2316AF0163	MX150
Fan Tray 0				Assy,Sub,Fan
Tray,AFO,Opus-AFO				
Fan Tray 1				Assy,Sub,Fan
Tray,AFO,Opus-AFO				

show chassis hardware (MX104 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			G3503	MX104
Midplane	REV 28	750-044219	CAAX5741	MX104
PEM 0	REV 03	740-045933	1H072500016	AC Power Entry Module
PEM 1	REV 03	740-045932	1H073050017	DC Power Entry Module
Routing Engine 0	REV 20	750-044228	CAAY7935	RE-MX-104
Routing Engine 1	REV 13	750-044228	CAAM6380	RE-MX-104
AFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 15	750-036132	CAAF7948	2x0C12/8x0C3 CC-CE
PIC 0		BUILTIN	BUILTIN	2x0C12/8x0C3 CC-CE
Xcvr 0	REV 01	740-011615	PCQ0U2J	SFP-IR
Xcvr 1	REV 01	740-016068	PJL7A6G	SFP-SR
Xcvr 2	REV 01	740-016068	PJL7A5J	SFP-SR
Xcvr 3	REV 01	740-016065	PJN5HPZ	SFP-SR
Xcvr 4	REV 01	740-029122	PKB38TL	SFP-LR
Xcvr 5	REV 01	740-011787	P6A107G	SFP-LR
Xcvr 6	REV 01	740-029122	PKB38TR	SFP-LR
Xcvr 7	REV 01	740-011787	PBKONK3	SFP-LR
MIC 1				
FPC 2		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B10F00465	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	B10F00461	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10G01545	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10G01385	SFP+-10G-SR
Fan Tray 0	REV 02	711-049570	CAAX6538	Fan Tray

show chassis hardware detail (MX104 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			G3503	MX104
Midplane	REV 28	750-044219	CAAX5741	MX104
PEM 0	REV 03	740-045933	1H072500016	AC Power Entry Module
PEM 1	REV 03	740-045932	1H073050017	DC Power Entry Module
Routing Engine 0	REV 20	750-044228	CAAY7935	RE-MX-104
da0 7836 MB	ATP IG	eUSB SSD		Nand Flash 0
usb0 (addr 1)	EHCI root hub 0		Freescall	uhub0
usb0 (addr 2)	USB2513Bi	9491	SMSC	uhub1
usb0 (addr 3)	ATP IG	eUSB SSD 44801	ATP Electronics	umass0
Routing Engine 1	REV 13	750-044228	CAAM6380	RE-MX-104
da0 7836 MB	ATP IG	eUSB SSD		Nand Flash 0
AFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 15	750-036132	CAAF7948	2xOC12/8xOC3 CC-CE
PIC 0		BUILTIN	BUILTIN	2xOC12/8xOC3 CC-CE
Xcvr 0	REV 01	740-011615	PCQOU2J	SFP-IR
Xcvr 1	REV 01	740-016068	PJL7A6G	SFP-SR
Xcvr 2	REV 01	740-016068	PJL7A5J	SFP-SR
Xcvr 3	REV 01	740-016065	PJN5HPZ	SFP-SR
Xcvr 4	REV 01	740-029122	PKB38TL	SFP-LR
Xcvr 5	REV 01	740-011787	P6A107G	SFP-LR
Xcvr 6	REV 01	740-029122	PKB38TR	SFP-LR
Xcvr 7	REV 01	740-011787	PBKONK3	SFP-LR
MIC 1				
FPC 2		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B10F00465	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10F00461	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10G01545	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10G01385	SFP+-10G-SR
Fan Tray 0	REV 02	711-049570	CAAX6538	Fan Tray

show chassis hardware detail (MX480 Packet Transport Router with details of virtual disk size)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN122FFD9AFB	MX480
Midplane	REV 05	710-017414	ACRB8882	MX480 Midplane
FPM Board	REV 02	710-017254	CADF7623	Front Panel Display
PEM 0	Rev 07	740-017343	QCS1128A0TY	DC Power Entry Module
PEM 1	Rev 07	740-017343	QCS1128A0JM	DC Power Entry Module
Routing Engine 0	REV 07	750-054758	CADG2028	RE-S-2X00x6
vtbd0 15361 MB				Virtio Block Disk

```

vtbd1 15360 MB
ada0 511 MB QEMU HARDDISK QM00002 Virtio Block Disk
usb0 (addr 1) UHCI root HUB 0 Intel Emulated IDE Disk
Routing Engine 1 REV 00 750-054758 uhub0
vtbd0 15361 MB RE-S-2X00x6
vtbd1 15360 MB Virtio Block Disk
ada0 511 MB QEMU HARDDISK QM00002 Virtio Block Disk
usb0 (addr 1) UHCI root HUB 0 Intel Emulated IDE Disk
CB 0 REV 01 750-055976 CACS1837 uhub0
CB 1 REV 01 750-055976 CADD9894 Enhanced MX SCB 2
Xcvr 1 REV 01 740-031980 AP41KCL Enhanced MX SCB 2
FPC 0 REV 09 750-049040 CACX1759 SFP+-10G-SR
CPU REV 10 711-035209 CACP9324 LOAD MPC Type 2
FPC 4 REV 28 750-037355 CACY8384 HMPD PMB 2G
CPU REV 10 711-035209 CACX0428 MPC4E 3D 2CGE+8XGE
Fan Tray HMPD PMB 2G
Enhanced Left Fan Tray

```

show chassis hardware extensive (MX104 Router)

```
user@host> show chassis hardware extensive
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			G3503	MX104

JeDEC Code: 0x7fb0 EEPROM Version: 0x02

S/N: G3503

Assembly ID: 0x0560 Assembly Version: 00.00

Date: 00-00-0000 Assembly Flags: 0x00

ID: MX104

Board Information Record:

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 60 00 00 00 00 00 00 00 00 00 00

Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x20: 47 33 35 30 33 00 00 00 00 00 00 00 00 00 00 00

Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Midplane	REV 28	750-044219	CAAX5741	MX104
----------	--------	------------	----------	-------

JeDEC Code: 0x7fb0 EEPROM Version: 0x02

P/N: 750-044219 S/N: CAAX5741

Assembly ID: 0x0560 Assembly Version: 01.28

Date: 03-27-2013 Assembly Flags: 0x00

Version: REV 28 CLEI Code: PROTOXCLEI

ID: MX104 FRU Model Number: PROTO-ASSEMBLY

Board Information Record:

Address 0x00: ad 01 08 00 b0 a8 6e a7 f8 00 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 60 01 1c 52 45 56 20 32 38 00 00

Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 32 31 39 00 00

Address 0x20: 53 2f 4e 20 43 41 41 58 35 37 34 31 00 1b 03 07

Address 0x30: dd ff ff ff ad 01 08 00 b0 a8 6e a7 f8 00 ff ff

Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50

Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00

Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff

Address 0x70: ff ff ff c2 47 33 35 30 33 00 00 00 00 00 00 00

PEM 0	REV 03	740-045933	1H072500016	AC Power Entry Module
-------	--------	------------	-------------	-----------------------

JeDEC Code: 0x7fb0 EEPROM Version: 0x02

```

P/N:          740-045933      S/N:          1H072500016
Assembly ID:  0x0475          Assembly Version: 00.03
Date:         12-14-2012      Assembly Flags:  0x00
Version:      REV 03          CLEI Code:       IPUPAJ9KAA
ID: AC Power Entry Module     FRU Model Number: PWR-AMX1100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff 02 02 00 ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 75 00 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 39 33 33 00 00
  Address 0x20: 31 48 30 37 32 35 30 30 30 31 36 00 00 0e 0c 07
  Address 0x30: dc 30 43 ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 02 02 00 ff 01 49 50 55 50 41 4a 39 4b 41 41 50
  Address 0x50: 57 52 2d 41 4d 58 31 31 30 30 2d 41 43 2d 53 00
  Address 0x60: 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff 70 ff ff ff ff ff ff ff ff ff ff ff ff
PEM 1          REV 03      740-045932      1H073050017      DC Power Entry Module
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:          740-045932      S/N:          1H073050017
Assembly ID:  0x0476          Assembly Version: 00.03
Date:         01-30-2013      Assembly Flags:  0x00
Version:      REV 03          CLEI Code:       IPUPAJ8KAA
ID: DC Power Entry Module     FRU Model Number: PWR-AMX1100-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff 02 02 00 ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 76 00 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 39 33 32 00 00
  Address 0x20: 31 48 30 37 33 30 35 30 30 31 37 00 00 1e 01 07
  Address 0x30: dd 30 44 ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 02 02 00 ff 01 49 50 55 50 41 4a 38 4b 41 41 50
  Address 0x50: 57 52 2d 41 4d 58 31 31 30 30 2d 44 43 2d 53 00
  Address 0x60: 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff 72 ff ff ff ff ff ff ff ff ff ff ff ff
Routing Engine 0 REV 20      750-044228      CAAY7935          RE-MX-104
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:          750-044228      S/N:          CAAY7935
Assembly ID:  0x0b81          Assembly Version: 01.20
Date:         03-18-2013      Assembly Flags:  0x00
Version:      REV 20          CLEI Code:       PROTOXCLEI
ID: RE-MX-104          FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ad 01 00 08 b0 a8 6e a6 fc 10 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0b 81 01 14 52 45 56 20 32 30 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 32 32 38 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 59 37 39 33 35 00 12 03 07
  Address 0x30: dd ff ff ff ad 01 00 08 b0 a8 6e a6 fc 10 ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
da0      7836 MB  ATP IG eUSB SSD          Nand Flash 0
usb0 (addr 1) EHCI root hub 0      Freescale      uhub0
usb0 (addr 2) USB2513Bi 9491      SMSC          uhub1
usb0 (addr 3) ATP IG eUSB SSD 44801 ATP Electronics  umass0
Routing Engine 1 REV 13      750-044228      CAAM6380          RE-MX-104
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:          750-044228      S/N:          CAAM6380
Assembly ID:  0x0b81          Assembly Version: 01.13

```

```

Date:          09-17-2012      Assembly Flags:  0x00
Version:       REV 13         CLEI Code:       PROTOXCLEI
ID: RE-MX-104      FRU Model Number:  PROTO-ASSEMBLY

Board Information Record:
  Address 0x00: ad 01 00 08 64 87 88 27 08 18 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0b 81 01 0d 52 45 56 20 31 33 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 32 32 38 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 4d 36 33 38 30 00 11 09 07
  Address 0x30: dc ff ff ff ad 01 00 08 64 87 88 27 08 18 ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
da0      7836 MB  ATP IG  eUSB SSD      Nand Flash 0
AFEB 0                BUILTIN          BUILTIN          Forwarding Engine
Processor
FPC 0                BUILTIN          BUILTIN          MPC BUILTIN
FPC 1                BUILTIN          BUILTIN          MPC BUILTIN
  MIC 0              REV 15      750-036132  CAAF7948      2x0C12/8x0C3 CC-CE
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:       750-036132    S/N:       CAAF7948
Assembly ID: 0x0a1a      Assembly Version: 01.15
Date:      07-03-2012    Assembly Flags: 0x00
Version:   REV 15       CLEI Code:       IP9IAM2DAA
ID: 2x0C12/8x0C3 CC-CE  FRU Model Number: MIC-3D-80C3-20C12-ATM

Board Information Record:
  Address 0x00: 12 01 05 03 05 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0a 1a 01 0f 52 45 56 20 31 35 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 36 31 33 32 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 46 37 39 34 38 00 03 07 07
  Address 0x30: dc ff ff ff 12 01 05 03 05 ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 39 49 41 4d 32 44 41 41 4d
  Address 0x50: 49 43 2d 33 44 2d 38 4f 43 33 2d 32 4f 43 31 32
  Address 0x60: 2d 41 54 4d 00 00 41 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff e3 c0 02 a3 9c 00 00 00 00 0a 60 00 00
  PIC 0              BUILTIN          BUILTIN          2x0C12/8x0C3 CC-CE
    Xcvr 0          REV 01      740-011615  PCQ0U2J      SFP-IR
    Xcvr 1          REV 01      740-016068  PjL7A6G      SFP-SR
    Xcvr 2          REV 01      740-016068  PjL7A5J      SFP-SR
    Xcvr 3          REV 01      740-016065  PjN5HPZ      SFP-SR
    Xcvr 4          REV 01      740-029122  PKB38TL      SFP-LR
    Xcvr 5          REV 01      740-011787  P6A107G      SFP-LR
    Xcvr 6          REV 01      740-029122  PKB38TR      SFP-LR
    Xcvr 7          REV 01      740-011787  PBKONK3      SFP-LR
  MIC 1
FPC 2              BUILTIN          BUILTIN          MPC BUILTIN
  MIC 0              BUILTIN          BUILTIN          4x 10GE(LAN) SFP+
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:       BUILTIN      S/N:       BUILTIN
Assembly ID: 0x0a60      Assembly Version: 00.00
Date:      00-00-0000    Assembly Flags: 0x00
ID: 4x 10GE(LAN) SFP+

Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a 60 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 4d 58 43 00
  Address 0x20: 42 55 49 4c 54 49 4e 00 4d 58 43 00 00 00 00 00

```

```

Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 a5 04 7f b0 02 ff 0a 1a 01 0f
PIC 0          BUILTIN          BUILTIN          4x 10GE(LAN) SFP+
Xcvr 0        REV 01      740-031980    B10F00465      SFP+-10G-SR
Xcvr 1        REV 01      740-031980    B10F00461      SFP+-10G-SR
Xcvr 2        REV 01      740-031980    B10G01545      SFP+-10G-SR
Xcvr 3        REV 01      740-031980    B10G01385      SFP+-10G-SR
Fan Tray 0    REV 02      711-049570    CAAX6538      Fan Tray
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          711-049570      S/N:          CAAX6538
Assembly ID:  0x0b82          Assembly Version: 01.02
Date:         03-01-2013      Assembly Flags: 0x00
Version:      REV 02          CLEI Code:     PROTOXCLEI
ID: Fan Tray          FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 82 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 39 35 37 30 00 00
Address 0x20: 53 2f 4e 20 43 41 41 58 36 35 33 38 00 01 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

```

show chassis hardware extensive (PTX10008 Router)

```
user@host> show chassis hardware extensive
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
PILOT BUILD V1.1]
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          DE487
Assembly ID:  0x0566          Assembly Version: 01.27
Date:         08-08-2016      Assembly Flags: 0x00
CLEI Code:    CMMUM00ARA
ID: JNP10008          FRU Model Number: QFX10008-CHAS
Board Information Record:
Address 0x00: ad 01 08 00 30 b6 4f e9 74 c4 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 66 01 1b 00 45 56 20 32 37 00 00
Address 0x10: 00 00 00 00 00 35 30 2d 30 35 34 30 39 37 00 00
Address 0x20: 44 45 34 38 37 00 00 00 00 00 00 00 00 08 08 07
Address 0x30: e0 ff ff ff ad 01 08 00 30 b6 4f e9 74 c4 ff ff
Address 0x40: ff ff ff ff 01 43 4d 4d 55 4d 30 30 41 52 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 43 48 41 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 63 44 45 34 38 37 00 00 00 00 00 00 00
Midplane      REV 27      750-054097    ACPD4307      Midplane 8
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-054097      S/N:          ACPD4307
Assembly ID:  0x0be3          Assembly Version: 01.27
Date:         08-08-2016      Assembly Flags: 0x00
Version:      REV 27          CLEI Code:    CMMUM00ARA

```



```

ID: QFX10008 Midplane          FRU Model Number: QFX10008-CHAS
Board Information Record:
Address 0x00: ad 01 08 00 30 b6 4f e9 74 c4 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e3 01 1b 52 45 56 20 32 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 34 30 39 37 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 34 33 30 37 00 08 08 07
Address 0x30: e0 ff ff ff ad 01 08 00 30 b6 4f e9 74 c4 ff ff
Address 0x40: ff ff ff ff 01 43 4d 4d 55 4d 30 30 41 52 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 43 48 41 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 63 44 45 34 38 37 00 00 00 00 00 00 00
Routing Engine 0          BUILTIN          BUILTIN          RE-PTX-2X00x4
vtbd0 15360 MB          Virtio Block Disk
vtbd1 15360 MB          Virtio Block Disk
ada0 128 MB QEMU          QM00002          Virtio Block Disk
usb0 (addr 0.1) EHCI root HUB 0          Intel          uhub0
usb1 (addr 0.2) product 0x0020 32          vendor 0x8087          uhub1
Routing Engine 1          BUILTIN          BUILTIN          RE-PTX-2X00x4
vtbd0 15360 MB          Virtio Block Disk
vtbd1 15360 MB          Virtio Block Disk
ada0 128 MB QEMU          QM00002          Virtio Block Disk
usb0 (addr 0.1) EHCI root HUB 0          Intel          uhub0
usb1 (addr 0.2) product 0x0020 32          vendor 0x8087          uhub1
CB 0          REV 02          750-068820          ACNZ4440          Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-068820          S/N: ACNZ4440
Assembly ID: 0x0b9d          Assembly Version: 01.02
Date: 06-13-2016          Assembly Flags: 0x00
Version: REV 02          CLEI Code: CMUCAH3CTB
ID: Control Board          FRU Model Number: QFX10000-RE
Board Information Record:
Address 0x00: ad 01 00 10 84 c1 c1 54 10 be ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9d 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 34 34 34 30 00 0d 06 07
Address 0x30: e0 ff ff ff ad 01 00 10 84 c1 c1 54 10 be ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 33 43 54 42 51
Address 0x50: 46 58 31 30 30 30 30 2d 52 45 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff db ff ff ff ff ff ff ff ff ff ff ff ff
CB 1          REV 02          750-068820          ACNZ8284          Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-068820          S/N: ACNZ8284
Assembly ID: 0x0b9d          Assembly Version: 01.02
Date: 06-27-2016          Assembly Flags: 0x00
Version: REV 02          CLEI Code: CMUCAH3CTB
ID: Control Board          FRU Model Number: QFX10000-RE
Board Information Record:
Address 0x00: ad 01 00 10 84 c1 c1 e5 b1 46 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9d 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 38 32 38 34 00 1b 06 07
Address 0x30: e0 ff ff ff ad 01 00 10 84 c1 c1 e5 b1 46 ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 33 43 54 42 51
Address 0x50: 46 58 31 30 30 30 30 2d 52 45 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff db ff ff ff ff ff ff ff ff ff ff ff ff

```

```

FPC 0          REV 36   750-051354   ACNP4679          LC1102 - 12C / 36Q /
144X
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-051354      S/N:             ACNP4679
Assembly ID:   0x0be7          Assembly Version: 01.36
Date:          11-11-2016      Assembly Flags:   0x00
Version:       REV 36          CLEI Code:        CMUIAM9BAA
ID: ULC-36Q-12Q28             FRU Model Number: QFX10000-36Q
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b e7 01 24 52 45 56 20 33 36 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 35 31 33 35 34 00 00
  Address 0x20: 53 2f 4e 20 41 43 4e 50 34 36 37 39 00 0b 0b 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff fe ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN          BUILTIN          FPC CPU
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           BUILTIN          S/N:             BUILTIN
Assembly ID:   0xf020          Assembly Version: 02.17
Date:          04-19-2012      Assembly Flags:   0x00
Board Information Record:
  Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff f0 20 02 11 00 e0 3c fa 09 00 70 87
  Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 e0 3c fa
  Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
  Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
  Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE

Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           BUILTIN          S/N:             BUILTIN
Assembly ID:   0xf050          Assembly Version: 02.17
Date:          04-19-2012      Assembly Flags:   0x00
Board Information Record:
  Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
  Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
  Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
  Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 1        REV 01   740-058734   1ECQ113834D       QSFP-100GBASE-SR4
Xcvr 5        REV 01   740-058734   1ECQ1137067       QSFP-100GBASE-SR4
Xcvr 6        REV 01   740-054053   QF3205SD          QSFP+-4X10G-SR
Xcvr 7        REV 01   740-058734   1ECQ11381MP       QSFP-100GBASE-SR4
Xcvr 11       REV 01   740-061405   1ACQ110507K       QSFP-100GBASE-SR4
Xcvr 13       REV 01   740-058734   1ECQ11390ZB       QSFP-100GBASE-SR4
Xcvr 17       REV 01   740-058734   1ECQ11381M1       QSFP-100GBASE-SR4
Xcvr 19       REV 01   740-058734   1ECQ11381JS       QSFP-100GBASE-SR4

```

```

Xcvr 23      REV 01    740-058734    1ACQ112000E    QSFP-100GBASE-SR4
Xcvr 25      REV 01    740-058734    1ECQ11381NT    QSFP-100GBASE-SR4
Xcvr 28      REV 01    740-054053    QG1502WV       QSFP+-4X10G-SR
Xcvr 29      REV 01    740-058734    1ACQ112000D    QSFP-100GBASE-SR4
Xcvr 33      REV 01    740-058734    1ACQ1134065    QSFP-100GBASE-SR4
Xcvr 34      REV 01    740-067442    XV20L4L        QSFP+-40G-SR4
FPC 1        REV 33    750-051354    ACNX8831        LC1102 - 12C / 36Q /
144X
Jedec Code:  0x7fb0          EEPROM Version: 0x02
P/N:          750-051354      S/N:            ACNX8831
Assembly ID:  0x0be7          Assembly Version: 01.33
Date:         06-03-2016      Assembly Flags:  0x00
Version:      REV 33          CLEI Code:       CMUIAM9BAA
ID: ULC-36Q-12Q28            FRU Model Number: QFX10000-36Q

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 21 52 45 56 20 33 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 31 33 35 34 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 58 38 38 33 31 00 03 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fb ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN        BUILTIN        FPC CPU
Jedec Code:  0x7fb0          EEPROM Version: 0x02
P/N:          BUILTIN        S/N:            BUILTIN
Assembly ID:  0xf020          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 20 3e fa 09 00 10 8a
Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 20 3e fa
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0        BUILTIN        BUILTIN        12x100GE/36x40GE/144x10GE

Jedec Code:  0x7fb0          EEPROM Version: 0x02
P/N:          BUILTIN        S/N:            BUILTIN
Assembly ID:  0xf050          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 5        NON-JNPR      37700171YY0084    QSFP-100GBASE-LR4
Xcvr 25       NON-JNPR      GDA2017459        QSFP-100GBASE-LR4

```

```

Xcvr 29      NON-JNPR      GDF2008750      QSFP-100GBASE-LR4
FPC 2        REV 32      750-051357      ACPB0341      LC1101 - 30C / 30Q / 96X

Jedec Code:  0x7fb0      EEPROM Version:  0x02
P/N:         750-051357  S/N:            ACPB0341
Assembly ID: 0x0be8      Assembly Version: 01.32
Date:        06-04-2016  Assembly Flags:  0x00
Version:     REV 32      CLEI Code:      CMUIANABAA
ID: ULC-30Q28           FRU Model Number: QFX10000-30C

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e8 01 20 52 45 56 20 33 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 31 33 35 37 00 00
Address 0x20: 53 2f 4e 20 41 43 50 42 30 33 34 31 00 04 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4e 41 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 30 43 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff ef ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN      BUILTIN      FPC CPU
Jedec Code:  0x7fb0      EEPROM Version:  0x02
P/N:         BUILTIN      S/N:            BUILTIN
Assembly ID: 0xf020      Assembly Version: 02.17
Date:        04-19-2012  Assembly Flags:  0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 00 67 00 0a 00 b0 8c
Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 00 67 00
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN      30x100GE/30x40GE/96x10GE

Jedec Code:  0x7fb0      EEPROM Version:  0x02
P/N:         BUILTIN      S/N:            BUILTIN
Assembly ID: 0xf050      Assembly Version: 02.17
Date:        04-19-2012  Assembly Flags:  0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 de ad be ef de ad be ef de ad be ef

Xcvr 0      NON-JNPR      37700170YZC305      QSFP-100GBASE-LR4
Xcvr 4      NON-JNPR      37700170YZC306      QSFP-100GBASE-LR4
Xcvr 9      REV 01      740-054053      QF36013S      QSFP+-4X10G-SR
Xcvr 12     REV 01      740-067442      XV301AU      QSFP+-40G-SR4
Xcvr 14     REV 01      740-043308      UWE2CG9      QSFP+-40G-LR4
Xcvr 16     REV 01      740-043308      UWH141S      QSFP+-40G-LR4
Xcvr 17     REV 01      740-058734      1ECQ11180VH      QSFP-100GBASE-SR4

```

```

Xcvr 18      REV 01    740-054050    INFAJ0492237    QSFP+-4X10G-LR
Xcvr 26      REV 01    740-058734    1ACQ111803N    QSFP-100GBASE-SR4
Xcvr 27      REV 01    740-058734    1ACQ113405S    QSFP-100GBASE-SR4
FPC 3        REV 35    750-051357    ACPD2186        LC1101 - 30C / 30Q / 96X

Jedec Code:  0x7fb0      EEPROM Version: 0x02
P/N:         750-051357  S/N:           ACPD2186
Assembly ID: 0x0be8      Assembly Version: 01.35
Date:        09-21-2016  Assembly Flags: 0x00
Version:     REV 35      CLEI Code:     CMUIANABAA
ID: ULC-30Q28           FRU Model Number: QFX10000-30C
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e8 01 23 52 45 56 20 33 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 31 33 35 37 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 32 31 38 36 00 15 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4e 41 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 30 43 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN      BUILTIN      FPC CPU
Jedec Code:  0x7fb0      EEPROM Version: 0x02
P/N:         BUILTIN     S/N:           BUILTIN
Assembly ID: 0xf020      Assembly Version: 02.17
Date:        04-19-2012  Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 80 70 fa 09 00 50 8f
Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 80 70 fa
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0        BUILTIN      BUILTIN      30x100GE/30x40GE/96x10GE

Jedec Code:  0x7fb0      EEPROM Version: 0x02
P/N:         BUILTIN     S/N:           BUILTIN
Assembly ID: 0xf050      Assembly Version: 02.17
Date:        04-19-2012  Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 0      REV 01    740-061409    1GCQA1470A3    QSFP-100GBASE-LR4-T2
Xcvr 1      REV 01    740-061409    1GCQA1470XC    QSFP-100GBASE-LR4-T2
Xcvr 7      NON-JNPR   FG4550500008    QSFP-100G-CWDM4
Xcvr 24     REV 01    740-058734    1ECQ11381LX    QSFP-100GBASE-SR4
Xcvr 29     REV 01    740-043308    UWE0UYS        QSFP+-40G-LR4

```

```

FPC 5          REV 08  750-068822  ACPF0057          LC1102 - 12C / 36Q /
144X
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-068822      S/N:             ACPF0057
Assembly ID:   0x0be7          Assembly Version: 01.08
Date:          09-01-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        CMUIAM9BAB
ID: ULC-36Q-12Q28             FRU Model Number: QFX10000-36Q

Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b e7 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 32 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 46 30 30 35 37 00 01 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 42 51
  Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN          BUILTIN          FPC CPU
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           BUILTIN          S/N:             BUILTIN
Assembly ID:   0xf020          Assembly Version: 02.17
Date:          04-19-2012      Assembly Flags:   0x00
Board Information Record:
  Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff f0 20 02 11 00 00 3d fa 09 00 90 94
  Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 00 3d fa
  Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
  Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
  Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE

Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           BUILTIN          S/N:             BUILTIN
Assembly ID:   0xf050          Assembly Version: 02.17
Date:          04-19-2012      Assembly Flags:   0x00
Board Information Record:
  Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
  Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
  Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
  Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
FPC 6          REV 08  750-068822  ACPE9951          LC1102 - 12C / 36Q /
144X
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-068822      S/N:             ACPE9951
Assembly ID:   0x0be7          Assembly Version: 01.08
Date:          09-01-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        CMUIAM9BAB
ID: ULC-36Q-12Q28             FRU Model Number: QFX10000-36Q

```

Board Information Record:

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 0b e7 01 08 52 45 56 20 30 38 00 00
 Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 32 00 00
 Address 0x20: 53 2f 4e 20 41 43 50 45 39 39 35 31 00 01 09 07
 Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
 Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 42 51
 Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
 Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
 Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

CPU BUILTIN BUILTIN FPC CPU

Jedec Code: 0x7fb0 EEPROM Version: 0x02

P/N: BUILTIN S/N: BUILTIN

Assembly ID: 0xf020 Assembly Version: 02.17

Date: 04-19-2012 Assembly Flags: 0x00

Board Information Record:

Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff f0 20 02 11 00 c0 3e fa 09 00 30 97
 Address 0x10: 09 38 bb ff 42 55 49 4c 54 49 4e 00 00 c0 3e fa
 Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
 Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
 Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
 Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00

PIC 0 BUILTIN BUILTIN 12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0 EEPROM Version: 0x02

P/N: BUILTIN S/N: BUILTIN

Assembly ID: 0xf050 Assembly Version: 02.17

Date: 04-19-2012 Assembly Flags: 0x00

Board Information Record:

Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
 Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
 Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
 Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
 Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
 Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
 Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55

Xcvr 1	REV 01	740-054053	QF3208LG	QSFP+-4X10G-SR
Xcvr 7	REV 01	740-067442	XV20LGN	QSFP+-40G-SR4
Xcvr 8	REV 01	740-067442	XV20VMV	QSFP+-40G-SR4
Xcvr 9	REV 01	740-067442	XV20KCN	QSFP+-40G-SR4
Xcvr 10	REV 01	740-067442	XU504QD	QSFP+-40G-SR4
Xcvr 11	REV 01	740-067442	XU504X7	QSFP+-40G-SR4
Xcvr 12	REV 01	740-067442	XU504W8	QSFP+-40G-SR4
Xcvr 16	REV 01	740-032986	QF4301JP	QSFP+-40G-SR4
Xcvr 17	REV 01	740-032986	QF4303AE	QSFP+-40G-SR4
Xcvr 18	REV 01	740-054050	INFAJ0492400	QSFP+-4X10G-LR
Xcvr 19	REV 01	740-054050	INFAJ0492142	QSFP+-4X10G-LR
Xcvr 24	REV 01	740-032986	QF4301KB	QSFP+-40G-SR4
Xcvr 25	REV 01	740-032986	QF4303YP	QSFP+-40G-SR4
Xcvr 30	REV 01	740-067442	XV300ZX	QSFP+-40G-SR4
Xcvr 31	REV 01	740-043308	UWH2KBW	QSFP+-40G-LR4
Xcvr 34	REV 01	740-054053	QG1501YU	QSFP+-4X10G-SR

```

FPD Board          REV 07    711-054687    ACPC7142          Front Panel Display
Jedec Code:       0x7fb0          EEPROM Version:    0x01
P/N:              711-054687      S/N:              ACPC7142
Assembly ID:      0x0bf2          Assembly Version:  01.07
Date:             07-22-2016      Assembly Flags:   0x00
Version:          REV 07
ID: QFX10000 FPD
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0b f2 01 07 52 45 56 20 30 37 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 35 34 36 38 37 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 43 37 31 34 32 00 16 07 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

Power Supply 0     REV 02    740-049388    1EDL62102N9      Power Supply AC
Jedec Code:       0x7fb0          EEPROM Version:    0x02
P/N:              740-049388      S/N:              1EDL62102N9
Assembly ID:      0x0483          Assembly Version:  01.02
Date:             05-25-2016      Assembly Flags:   0x00
Version:          REV 02          CLEI Code:        CMUPADNBAA
ID: QFX10000 AC      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
  Address 0x20: 31 45 44 4c 36 32 31 30 32 4e 39 00 00 19 05 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
  Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff

Power Supply 1     REV 02    740-049388    1EDL60300KX      Power Supply AC
Jedec Code:       0x7fb0          EEPROM Version:    0x02
P/N:              740-049388      S/N:              1EDL60300KX
Assembly ID:      0x0483          Assembly Version:  01.02
Date:             01-20-2016      Assembly Flags:   0x00
Version:          REV 02          CLEI Code:        CMUPADNBAA
ID: QFX10000 AC      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
  Address 0x20: 31 45 44 4c 36 30 33 30 30 4b 58 00 00 14 01 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
  Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff

Power Supply 2     REV 02    740-049388    1EDL60300DL      Power Supply AC
Jedec Code:       0x7fb0          EEPROM Version:    0x02
P/N:              740-049388      S/N:              1EDL60300DL
Assembly ID:      0x0483          Assembly Version:  01.02
Date:             01-20-2016      Assembly Flags:   0x00
Version:          REV 02          CLEI Code:        CMUPADNBAA

```



```

ID: QFX10000 AC                      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 30 33 30 30 44 4c 00 00 14 01 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 3  REV 02  740-049388  1EDL61701BT  Power Supply AC
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-049388            S/N: 1EDL61701BT
Assembly ID: 0x0483        Assembly Version: 01.02
Date: 05-01-2016           Assembly Flags: 0x00
Version: REV 02            CLEI Code: CMUPADNBAA
ID: QFX10000 AC           FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 31 37 30 31 42 54 00 00 01 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 4  REV 02  740-049388  1EDL62102P7  Power Supply AC
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-049388            S/N: 1EDL62102P7
Assembly ID: 0x0483        Assembly Version: 01.02
Date: 05-25-2016           Assembly Flags: 0x00
Version: REV 02            CLEI Code: CMUPADNBAA
ID: QFX10000 AC           FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 31 30 32 50 37 00 00 19 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 5  REV 02  740-049388  1EDL62102PP  Power Supply AC
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 740-049388            S/N: 1EDL62102PP
Assembly ID: 0x0483        Assembly Version: 01.02
Date: 05-25-2016           Assembly Flags: 0x00
Version: REV 02            CLEI Code: CMUPADNBAA
ID: QFX10000 AC           FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00

```

```

Address 0x20: 31 45 44 4c 36 32 31 30 32 50 50 00 00 19 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
FTC 0          REV 14    750-050108    ACPE4038          Fan Controller 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050108      S/N:           ACPE4038
Assembly ID:   0x0bee          Assembly Version: 01.14
Date:          09-27-2016      Assembly Flags: 0x00
Version:       REV 14          CLEI Code:     CMUCAHZCAA
ID: QFX10000 FTC              FRU Model Number: QFX10008-FAN-CTRL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ee 01 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 31 30 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 34 30 33 38 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 5a 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 98 ff ff ff ff ff ff ff ff ff ff ff ff
FTC 1          REV 14    750-050108    ACPE4032          Fan Controller 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050108      S/N:           ACPE4032
Assembly ID:   0x0bee          Assembly Version: 01.14
Date:          09-27-2016      Assembly Flags: 0x00
Version:       REV 14          CLEI Code:     CMUCAHZCAA
ID: QFX10000 FTC              FRU Model Number: QFX10008-FAN-CTRL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ee 01 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 31 30 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 34 30 33 32 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 5a 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 98 ff ff ff ff ff ff ff ff ff ff ff ff
Fan Tray 0     REV 09    760-054372    ACPD6799          Fan Tray 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           760-054372      S/N:           ACPD6799
Assembly ID:   0x0bf0          Assembly Version: 01.09
Date:          09-28-2016      Assembly Flags: 0x00
Version:       REV 09          CLEI Code:     CMUCAHYCAA
ID: QFX10008 FHB              FRU Model Number: QFX10008-FAN
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b f0 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 34 33 37 32 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 36 37 39 39 00 1c 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 59 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff ff

```

```

Fan Tray 1          REV 09   760-054372   ACNZ3584          Fan Tray 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 760-054372          S/N: ACNZ3584
Assembly ID: 0x0bf0        Assembly Version: 01.09
Date: 08-30-2016          Assembly Flags: 0x00
Version: REV 09           CLEI Code: CMUCAHYCAA
ID: QFX10008 FHB          FRU Model Number: QFX10008-FAN

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b f0 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 34 33 37 32 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 33 35 38 34 00 1e 08 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 59 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff ff

SIB 0              REV 24   750-050058   ACPD4587          Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058          S/N: ACPD4587
Assembly ID: 0x0bec        Assembly Version: 01.24
Date: 06-19-2016          Assembly Flags: 0x00
Version: REV 24           CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 34 35 38 37 00 13 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00

SIB 1              REV 24   750-050058   ACNZ0635          Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058          S/N: ACNZ0635
Assembly ID: 0x0bec        Assembly Version: 01.24
Date: 06-06-2016          Assembly Flags: 0x00
Version: REV 24           CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 36 33 35 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00

SIB 2              REV 24   750-050058   ACPD4908          Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058          S/N: ACPD4908
Assembly ID: 0x0bec        Assembly Version: 01.24
Date: 07-12-2016          Assembly Flags: 0x00
Version: REV 24           CLEI Code: CMUCAHOCAA

```

```

ID: QFX10008 SIB                      FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 34 39 30 38 00 0c 07 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SIB 3                      REV 24      750-050058      ACNZ0617      Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058            S/N: ACNZ0617
Assembly ID: 0x0bec         Assembly Version: 01.24
Date: 06-07-2016           Assembly Flags: 0x00
Version: REV 24            CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 36 31 37 00 07 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SIB 4                      REV 24      750-050058      ACNZ0527      Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058            S/N: ACNZ0527
Assembly ID: 0x0bec         Assembly Version: 01.24
Date: 06-06-2016           Assembly Flags: 0x00
Version: REV 24            CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 35 32 37 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SIB 5                      REV 23      750-050058      ACNX6980      Switch Fabric 8
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-050058            S/N: ACNX6980
Assembly ID: 0x0bec         Assembly Version: 01.23
Date: 05-16-2016           Assembly Flags: 0x00
Version: REV 23            CLEI Code: CMUCAHOCAA
ID: QFX10008 SIB          FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 17 52 45 56 20 32 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00

```

```

Address 0x20: 53 2f 4e 20 41 43 4e 58 36 39 38 30 00 10 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff ce 00 00 00 00 00 00 00 00 00 00 00

```

show chassis hardware extensive (PTX10016 Router)

```
user@host> show chassis hardware extensive
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          DH995
Assembly ID:  0x0566          Assembly Version: 01.22
Date:         02-16-2017     Assembly Flags:  0x00
CLEI Code:    CMMUN00ARA
ID: JNP10016          FRU Model Number: QFX10016-CHAS
Board Information Record:
Address 0x00: ad 01 10 00 44 aa 50 ab 1b b6 ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 66 01 16 00 45 56 20 32 32 00 00
Address 0x10: 00 00 00 00 00 35 30 2d 30 35 36 35 35 35 00 00
Address 0x20: 44 48 39 39 35 00 00 00 00 00 00 00 10 02 07
Address 0x30: e1 ff ff ff ad 01 10 00 44 aa 50 ab 1b b6 ff ff
Address 0x40: ff ff ff ff 01 43 4d 4d 55 4e 30 30 41 52 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 43 48 41 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 32 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 51 44 48 39 39 35 00 00 00 00 00 00 00
Midplane      REV 22    750-056555    ACPM7810      Midplane 16
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-056555      S/N:          ACPM7810
Assembly ID:  0x0be4          Assembly Version: 01.22
Date:         02-16-2017     Assembly Flags:  0x00
Version:      REV 22          CLEI Code:    CMMUN00ARA
ID: QFX10016 Midplane        FRU Model Number: QFX10016-CHAS
Board Information Record:
Address 0x00: ad 01 10 00 44 aa 50 ab 1b b6 ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e4 01 16 52 45 56 20 32 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 36 35 35 35 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4d 37 38 31 30 00 10 02 07
Address 0x30: e1 ff ff ff ad 01 10 00 44 aa 50 ab 1b b6 ff ff
Address 0x40: ff ff ff ff 01 43 4d 4d 55 4e 30 30 41 52 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 43 48 41 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 32 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 51 44 48 39 39 35 00 00 00 00 00 00 00
Routing Engine 0          BUILTIN          BUILTIN          RE-PTX-2X00x4
vtbd0 15360 MB            Virtio Block Disk
vtbd1 15360 MB            Virtio Block Disk
ada0 128 MB QEMU           QM00002          Virtio Block Disk
usb0 (addr 0.1) EHCI root HUB 0 Intel              uhub0
usb1 (addr 0.2) product 0x0020 32 vendor 0x8087      uhub1
Routing Engine 1          BUILTIN          BUILTIN          RE-PTX-2X00x4
vtbd0 15360 MB            Virtio Block Disk
vtbd1 15360 MB            Virtio Block Disk
ada0 128 MB QEMU           QM00002          Virtio Block Disk

```

```

usb0 (addr 0.1) EHCI root HUB 0      Intel      uhub0
usb1 (addr 0.2) product 0x0020 32    vendor 0x8087 uhub1
CB 0      REV 03    750-068820    ACPL7238    Control Board
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      750-068820    S/N:      ACPL7238
Assembly ID: 0x0b9d    Assembly Version: 01.03
Date:      03-15-2017  Assembly Flags: 0x00
Version:    REV 03      CLEI Code: CMUCAH3CTB
ID: Control Board      FRU Model Number: QFX10000-RE
Board Information Record:
Address 0x00: ad 01 00 10 e8 b6 c2 46 aa 29 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9d 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 37 32 33 38 00 0f 03 07
Address 0x30: e1 ff ff ff ad 01 00 10 e8 b6 c2 46 aa 29 ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 33 43 54 42 51
Address 0x50: 46 58 31 30 30 30 30 2d 52 45 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff db ff ff ff ff ff ff ff ff ff ff ff ff
CB 1      REV 03    750-068820    ACPL7298    Control Board
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      750-068820    S/N:      ACPL7298
Assembly ID: 0x0b9d    Assembly Version: 01.03
Date:      03-15-2017  Assembly Flags: 0x00
Version:    REV 03      CLEI Code: CMUCAH3CTB
ID: Control Board      FRU Model Number: QFX10000-RE
Board Information Record:
Address 0x00: ad 01 00 10 e8 b6 c2 46 99 b9 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9d 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 37 32 39 38 00 0f 03 07
Address 0x30: e1 ff ff ff ad 01 00 10 e8 b6 c2 46 99 b9 ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 33 43 54 42 51
Address 0x50: 46 58 31 30 30 30 30 2d 52 45 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff db ff ff ff ff ff ff ff ff ff ff ff ff
FPC 1      REV 36    750-077140    ACNP4590    LC1102 - 12C / 36Q /
144X
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      750-077140    S/N:      ACNP4590
Assembly ID: 0x0be7    Assembly Version: 01.36
Date:      10-17-2016  Assembly Flags: 0x00
Version:    REV 36      CLEI Code: CMUIAM9BAA
ID: ULC-36Q-12Q28      FRU Model Number: QFX10000-36Q
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 24 52 45 56 20 33 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 37 31 34 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 50 34 35 39 30 00 11 0a 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fe ff ff ff ff ff ff ff ff ff ff ff ff
CPU      BUILTIN      BUILTIN      FPC CPU
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      BUILTIN      S/N:      BUILTIN

```

```

Assembly ID: 0xf020      Assembly Version: 02.17
Date: 04-19-2012      Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 40 36 bd 09 40 25 32
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 40 36 bd
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0      BUILTIN      BUILTIN      12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: BUILTIN      S/N: BUILTIN
Assembly ID: 0xf050      Assembly Version: 02.17
Date: 04-19-2012      Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 0      REV 01      740-054053      QF3600AV      QSFP+-4X10G-SR
Xcvr 35     REV 01      740-061405      1ACQ110507K      QSFP-100GBASE-SR4
FPC 3      REV 07      750-071975      CAHA2224      LC1102 - 12C / 36Q /
144X
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-071975      S/N: CAHA2224
Assembly ID: 0x0be7      Assembly Version: 01.07
Date: 01-17-2017      Assembly Flags: 0x00
Version: REV 07      CLEI Code: PROTOXCLEI
ID: ULC-36Q-12Q28      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 07 52 45 56 20 30 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 31 39 37 35 00 00
Address 0x20: 53 2f 4e 20 43 41 48 41 32 32 32 34 00 11 01 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU      BUILTIN      BUILTIN      FPC CPU
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: BUILTIN      S/N: BUILTIN
Assembly ID: 0xf020      Assembly Version: 02.17
Date: 04-19-2012      Assembly Flags: 0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 60 b6 be 09 c0 cf 38

```

```

Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 60 b6 be
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0                BUILTIN        BUILTIN        12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:        BUILTIN        S/N:        BUILTIN
Assembly ID: 0xf050        Assembly Version: 02.17
Date:       04-19-2012     Assembly Flags: 0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 0      REV 01      740-054053    QG1505YM      QSF+-4X10G-SR
Xcvr 11          NON-JNPR    GDA2017459    QSF-100GBASE-LR4
Xcvr 35          NON-JNPR    GDF2008750    QSF-100GBASE-LR4
FPC 5      REV 13      750-068822    ACPD6501      LC1102 - 12C / 36Q /
144X
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:        750-068822     S/N:        ACPD6501
Assembly ID: 0x0be7        Assembly Version: 01.13
Date:       06-29-2017     Assembly Flags: 0x00
Version:    REV 13        CLEI Code:   CMUIAM9BAC
ID: ULC-36Q-12Q28        FRU Model Number: QFX10000-36Q

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 38 38 32 32 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 36 35 30 31 00 1d 06 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 43 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 43 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fd ff ff ff ff ff ff ff ff ff ff ff ff
CPU                BUILTIN        BUILTIN        FPC CPU
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:        BUILTIN        S/N:        BUILTIN
Assembly ID: 0xf020        Assembly Version: 02.17
Date:       04-19-2012     Assembly Flags: 0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 c0 c6 bc 09 c0 ca 40
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 c0 c6 bc
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

```



```

Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0                BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:         BUILTIN        S/N:         BUILTIN
Assembly ID: 0xf050        Assembly Version: 02.17
Date:        04-19-2012    Assembly Flags: 0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 1      REV 01      740-058734      1ECQ11381LA      QSFP-100GBASE-SR4
Xcvr 2      REV 01      740-043308      UWH141S          QSFP+-40G-LR4
Xcvr 3      REV 01      740-043308      UWE2CG9          QSFP+-40G-LR4
FPC 6       REV 37      750-077140      ACNS2793         LC1102 - 12C / 36Q /
144X

Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:         750-077140    S/N:         ACNS2793
Assembly ID: 0x0be7        Assembly Version: 01.37
Date:        03-25-2017    Assembly Flags: 0x00
Version:     REV 37        CLEI Code:    CMUIAM9BAA
ID: ULC-36Q-12Q28         FRU Model Number: QFX10000-36Q

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 25 52 45 56 20 33 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 37 31 34 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 53 32 37 39 33 00 19 03 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fe ff ff ff ff ff ff ff ff ff ff ff ff
CPU                BUILTIN          BUILTIN          FPC CPU

Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:         BUILTIN        S/N:         BUILTIN
Assembly ID: 0xf020        Assembly Version: 02.17
Date:        04-19-2012    Assembly Flags: 0x00

Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 a0 e6 d4 09 00 bd 43
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 a0 e6 d4
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0                BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE

Jedec Code: 0x7fb0          EEPROM Version: 0x02

```

```

P/N:          BUILTIN          S/N:          BUILTIN
Assembly ID:  0xf050          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 0        REV 01 740-032986 QH0400VH QSFPA-40G-SR4
Xcvr 1        REV 01 740-032986 QH0400VM QSFPA-40G-SR4
Xcvr 35       REV 01 740-058734 1ECQ11390ZB QSFPA-100GBASE-SR4
FPC 8         REV 36 750-077140 ACNP4625 LC1102 - 12C / 36Q /
144X
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          750-077140      S/N:          ACNP4625
Assembly ID:  0x0be7          Assembly Version: 01.36
Date:         10-17-2016      Assembly Flags:  0x00
Version:      REV 36          CLEI Code:     CMUIAM9BAA
ID: ULC-36Q-12Q28            FRU Model Number: QFX10000-36Q
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b e7 01 24 52 45 56 20 33 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 37 31 34 30 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 50 34 36 32 35 00 11 0a 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4d 39 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 33 36 51 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff fe ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN          BUILTIN          FPC CPU
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          BUILTIN          S/N:          BUILTIN
Assembly ID:  0xf020          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff f0 20 02 11 00 c0 e6 d4 09 40 59 4a
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 c0 e6 d4
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          12x100GE/36x40GE/144x10GE
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:          BUILTIN          S/N:          BUILTIN
Assembly ID:  0xf050          Assembly Version: 02.17
Date:         04-19-2012      Assembly Flags:  0x00
Board Information Record:
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff

```

I2C Hex Data:

```

Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 1      REV 01      740-058732      1AMQA14206D      QSFP-100GBASE-LR4
Xcvr 10     REV 01      740-032986      QF4301KB        QSFP+-40G-SR4
Xcvr 24     REV 01      740-054050      INFJA0492244    QSFP+-4X10G-LR
FPC 9       REV 35      750-071976      ACPD3055        LC1101 - 30C / 30Q / 96X

```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:        750-071976  S/N:          ACPD3055
Assembly ID: 0x0be8     Assembly Version: 01.35
Date:       05-26-2016  Assembly Flags: 0x00
Version:    REV 35     CLEI Code:    CMUIANABAA
ID: ULC-30Q28          FRU Model Number: JNP10K-LC1101

```

Board Information Record:

```
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
```

I2C Hex Data:

```

Address 0x00: 7f b0 02 ff 0b e8 01 23 52 45 56 20 33 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 31 39 37 36 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 33 30 35 35 00 1a 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 49 41 4e 41 42 41 41 4a
Address 0x50: 4e 50 31 30 4b 2d 4c 43 31 31 30 31 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff ef ff ff ff ff ff ff ff ff ff ff ff ff
CPU          BUILTIN    BUILTIN          FPC CPU

```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:        BUILTIN     S/N:          BUILTIN
Assembly ID: 0xf020     Assembly Version: 02.17
Date:       04-19-2012  Assembly Flags: 0x00

```

Board Information Record:

```
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
```

I2C Hex Data:

```

Address 0x00: 7f b0 02 ff f0 20 02 11 00 20 e7 d4 09 00 a6 d4
Address 0x10: 09 e8 ba ff 42 55 49 4c 54 49 4e 00 00 20 e7 d4
Address 0x20: 42 55 49 4c 54 49 4e 00 42 55 49 4c 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff f3 50 36 36 36 36 00 00 00 00 00 00 00
PIC 0       BUILTIN    BUILTIN          30x100GE/30x40GE/96x10GE

```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:        BUILTIN     S/N:          BUILTIN
Assembly ID: 0xf050     Assembly Version: 02.17
Date:       04-19-2012  Assembly Flags: 0x00

```

Board Information Record:

```
Address 0x00: ad 01 01 04 ac 4b c8 1d f7 b6 ff ff ff ff ff ff
```

I2C Hex Data:

```

Address 0x00: 7f b0 02 ff f0 50 02 11 00 00 00 00 07 0a 20 45
Address 0x10: 6c 61 70 73 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 13 04 07
Address 0x30: dc ff ff ff ad 01 01 04 ac 4b c8 1d f7 b6 ff ff

```

```

Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 45 00 00 ff ff ff ff ff ff
Address 0x70: ff ff ff f3 55 55 55 55 55 55 55 55 55 55 55 55
Xcvr 0          NON-JNPR      INGBT7970007      QSFP-100GBASE-LR4
Xcvr 1          NON-JNPR      UWQ24D9        QSFP-100GBASE-LR4
Xcvr 2          NON-JNPR      INGBT7970011      QSFP-100GBASE-LR4
Xcvr 3          NON-JNPR      UX60AF1          QSFP-100G-CWDM4
Xcvr 4          NON-JNPR      UX408JJ          QSFP-100GBASE-LR4
Xcvr 11         REV 01        740-058734      1ECQ113835F      QSFP-100GBASE-SR4
Xcvr 18         NON-JNPR      Q7496            QSFP-100G-CWDM4
Xcvr 29         REV 01        740-058734      1ECQ11380LZ      QSFP-100GBASE-SR4
Power Supply 0  REV 02        740-049388      1EDL625039E      Power Supply AC
Jedec Code:     0x7fb0        EEPROM Version:  0x02
P/N:            740-049388    S/N:            1EDL625039E
Assembly ID:    0x0483        Assembly Version: 01.02
Date:           06-19-2016    Assembly Flags:  0x00
Version:        REV 02        CLEI Code:       CMUPADNBAA
ID: QFX10000 AC              FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 35 30 33 39 45 00 00 13 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 1  REV 02        740-049388      1EDL62503AD      Power Supply AC
Jedec Code:     0x7fb0        EEPROM Version:  0x02
P/N:            740-049388    S/N:            1EDL62503AD
Assembly ID:    0x0483        Assembly Version: 01.02
Date:           06-19-2016    Assembly Flags:  0x00
Version:        REV 02        CLEI Code:       CMUPADNBAA
ID: QFX10000 AC              FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 35 30 33 41 44 00 00 13 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
Power Supply 2  REV 02        740-049388      1EDL625039P      Power Supply AC
Jedec Code:     0x7fb0        EEPROM Version:  0x02
P/N:            740-049388    S/N:            1EDL625039P
Assembly ID:    0x0483        Assembly Version: 01.02
Date:           06-19-2016    Assembly Flags:  0x00
Version:        REV 02        CLEI Code:       CMUPADNBAA
ID: QFX10000 AC              FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00

```

```

Address 0x20: 31 45 44 4c 36 32 35 30 33 39 50 00 00 13 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff
Power Supply 3  REV 02  740-049388  1EDL702004E  Power Supply AC
Jedec Code: 0x7fb0  EEPROM Version: 0x02
P/N: 740-049388  S/N: 1EDL702004E
Assembly ID: 0x0483  Assembly Version: 01.02
Date: 01-18-2017  Assembly Flags: 0x00
Version: REV 02  CLEI Code: CMUPADNBAA
ID: QFX10000 AC  FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 37 30 32 30 30 34 45 00 00 12 01 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff
Power Supply 4  REV 02  740-049388  1EDL625039D  Power Supply AC
Jedec Code: 0x7fb0  EEPROM Version: 0x02
P/N: 740-049388  S/N: 1EDL625039D
Assembly ID: 0x0483  Assembly Version: 01.02
Date: 06-19-2016  Assembly Flags: 0x00
Version: REV 02  CLEI Code: CMUPADNBAA
ID: QFX10000 AC  FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 35 30 33 39 44 00 00 13 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff
Power Supply 5  REV 02  740-049388  1EDL63706JD  Power Supply AC
Jedec Code: 0x7fb0  EEPROM Version: 0x02
P/N: 740-049388  S/N: 1EDL63706JD
Assembly ID: 0x0483  Assembly Version: 01.02
Date: 09-13-2016  Assembly Flags: 0x00
Version: REV 02  CLEI Code: CMUPADNBAA
ID: QFX10000 AC  FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 33 37 30 36 4a 44 00 00 0d 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff

```

```

Power Supply 6      REV 02      740-049388      1EDL63706JH      Power Supply AC
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-049388      S/N: 1EDL63706JH
Assembly ID: 0x0483      Assembly Version: 01.02
Date: 09-13-2016      Assembly Flags: 0x00
Version: REV 02      CLEI Code: CMUPADNBAA
ID: QFX10000 AC      FRU Model Number: QFX10000-PWR-AC

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 33 37 30 36 4a 48 00 00 0d 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff

FTC 0      REV 10      750-050309      ACPM2918      Fan Controller 16
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-050309      S/N: ACPM2918
Assembly ID: 0x0b9c      Assembly Version: 01.10
Date: 01-13-2017      Assembly Flags: 0x00
Version: REV 10      CLEI Code: CMUCAH5CAA
ID: QFX10016 FTC      FRU Model Number: QFX10016-FAN-CTRL

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9c 01 0a 52 45 56 20 31 30 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 33 30 39 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4d 32 39 31 38 00 0d 01 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 35 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6f ff ff ff ff ff ff ff ff ff ff ff ff

FTC 1      REV 10      750-050309      ACPE8185      Fan Controller 16
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-050309      S/N: ACPE8185
Assembly ID: 0x0b9c      Assembly Version: 01.10
Date: 12-22-2016      Assembly Flags: 0x00
Version: REV 10      CLEI Code: CMUCAH5CAA
ID: QFX10016 FTC      FRU Model Number: QFX10016-FAN-CTRL

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 9c 01 0a 52 45 56 20 31 30 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 33 30 39 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 38 31 38 35 00 16 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 35 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6f ff ff ff ff ff ff ff ff ff ff ff ff

Fan Tray 0      REV 10      760-077141      ACPV7288      Fan Tray 16
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 760-077141      S/N: ACPV7288
Assembly ID: 0x0bf1      Assembly Version: 01.10
Date: 06-07-2017      Assembly Flags: 0x00
Version: REV 10      CLEI Code: CMUCAH4CAA

```

```

ID: QFX10016 FHB                      FRU Model Number: JNP10016-FAN
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b f1 01 0a 52 45 56 20 31 30 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 37 37 31 34 31 00 00
Address 0x20: 53 2f 4e 20 41 43 50 56 37 32 38 38 00 07 06 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 34 43 41 41 4a
Address 0x50: 4e 50 31 30 30 31 36 2d 46 41 4e 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 0d ff ff ff ff ff ff ff ff ff ff ff ff
Fan Tray 1          REV 10    760-057901    ACPL0546          Fan Tray 16
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 760-057901          S/N: ACPL0546
Assembly ID: 0x0bf1        Assembly Version: 01.10
Date: 02-14-2017          Assembly Flags: 0x00
Version: REV 10          CLEI Code: CMUCAH4CAA
ID: QFX10016 FHB          FRU Model Number: QFX10016-FAN
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b f1 01 0a 52 45 56 20 31 30 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 37 39 30 31 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 30 35 34 36 00 0e 02 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 34 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 46 41 4e 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 0d ff ff ff ff ff ff ff ff ff ff ff ff
SIB 0              REV 15    750-058270    ACPM2804          Switch Fabric 16
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-058270          S/N: ACPM2804
Assembly ID: 0x0bed        Assembly Version: 01.15
Date: 12-21-2016          Assembly Flags: 0x00
Version: REV 15          CLEI Code: CMUCAH6CAA
ID: QFX10016 SIB          FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4d 32 38 30 34 00 15 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00 00
SIB 1              REV 15    750-058270    ACPM2808          Switch Fabric 16
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-058270          S/N: ACPM2808
Assembly ID: 0x0bed        Assembly Version: 01.15
Date: 12-21-2016          Assembly Flags: 0x00
Version: REV 15          CLEI Code: CMUCAH6CAA
ID: QFX10016 SIB          FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00

```

```

Address 0x20: 53 2f 4e 20 41 43 50 4d 32 38 30 38 00 15 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00
SIB 2          REV 15    750-058270    ACPL4450          Switch Fabric 16
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-058270      S/N:              ACPL4450
Assembly ID:   0x0bed          Assembly Version:  01.15
Date:          02-17-2017      Assembly Flags:    0x00
Version:       REV 15          CLEI Code:         CMUCAH6CAA
ID: QFX10016 SIB              FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4c 34 34 35 30 00 11 02 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00
SIB 3          REV 15    750-058270    ACPJ9834          Switch Fabric 16
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-058270      S/N:              ACPJ9834
Assembly ID:   0x0bed          Assembly Version:  01.15
Date:          12-17-2016      Assembly Flags:    0x00
Version:       REV 15          CLEI Code:         CMUCAH6CAA
ID: QFX10016 SIB              FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4a 39 38 33 34 00 11 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00
SIB 4          REV 15    750-058270    ACPM2814          Switch Fabric 16
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-058270      S/N:              ACPM2814
Assembly ID:   0x0bed          Assembly Version:  01.15
Date:          12-21-2016      Assembly Flags:    0x00
Version:       REV 15          CLEI Code:         CMUCAH6CAA
ID: QFX10016 SIB              FRU Model Number: QFX10016-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
Address 0x20: 53 2f 4e 20 41 43 50 4d 32 38 31 34 00 15 0c 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff
Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00

```



```

SIB 5          REV 15  750-058270  ACPL4277          Switch Fabric 16
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-058270      S/N:             ACPL4277
Assembly ID:   0x0bed          Assembly Version: 01.15
Date:          02-17-2017      Assembly Flags:   0x00
Version:       REV 15          CLEI Code:        CMUCAH6CAA
ID: QFX10016 SIB              FRU Model Number: QFX10016-SF
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b ed 01 0f 52 45 56 20 31 35 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 35 38 32 37 30 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 4c 34 32 37 37 00 11 02 07
  Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 36 43 41 41 51
  Address 0x50: 46 58 31 30 30 31 36 2d 53 46 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff d3 00 00 00 00 00 00 00 00 00 00 00 00
FPD Board      REV 07  711-054687  ACPL1407          Front Panel Display
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-054687      S/N:             ACPL1407
Assembly ID:   0x0bf2          Assembly Version: 01.07
Date:          02-12-2017      Assembly Flags:   0x00
Version:       REV 07
ID: QFX10000 FPD
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0b f2 01 07 52 45 56 20 30 37 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 35 34 36 38 37 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 4c 31 34 30 37 00 0c 02 07
  Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

show chassis hardware models (MX104 Router)

```
user@host> show chassis hardware models
```

```

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 20   750-044219  CAAS5849      PROTO-ASSEMBLY
PEM 0         REV 01   740-045932  1H072400065
Routing Engine 0 REV 16   750-044228  CAAR5915      PROTO-ASSEMBLY
AFEB 0
FPC 0         BUILTIN  BUILTIN
FPC 1         BUILTIN  BUILTIN
MIC 0         REV 01   750-046905  CAAK7103      MIC-3D-20GE-SFP-EH
FPC 2         BUILTIN  BUILTIN
Fan Tray      REV 02   711-049570  CAAX6538      PROTO-ASSEMBLY

```

show chassis hardware models (PTX10008 Router)

```
user@host> show chassis hardware models
```

```

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number

```

Midplane	REV 27	750-054097	ACPD4307	QFX10008-CHAS
CB 0	REV 02	750-068820	ACNZ4440	QFX10000-RE
CB 1	REV 02	750-068820	ACNZ8284	QFX10000-RE
FPC 0	REV 36	750-051354	ACNP4679	QFX10000-36Q
PIC 0		BUILTIN	BUILTIN	
FPC 1	REV 33	750-051354	ACNX8831	QFX10000-36Q
PIC 0		BUILTIN	BUILTIN	
FPC 2	REV 32	750-051357	ACPB0341	QFX10000-30C
PIC 0		BUILTIN	BUILTIN	
FPC 3	REV 35	750-051357	ACPD2186	QFX10000-30C
PIC 0		BUILTIN	BUILTIN	
FPC 5	REV 08	750-068822	ACPF0057	QFX10000-36Q
PIC 0		BUILTIN	BUILTIN	
FPC 6	REV 08	750-068822	ACPE9951	QFX10000-36Q
PIC 0		BUILTIN	BUILTIN	
FPD Board	REV 07	711-054687	ACPC7142	
Power Supply 0	REV 02	740-049388	1EDL62102N9	QFX10000-PWR-AC
Power Supply 1	REV 02	740-049388	1EDL60300KX	QFX10000-PWR-AC
Power Supply 2	REV 02	740-049388	1EDL60300DL	QFX10000-PWR-AC
Power Supply 3	REV 02	740-049388	1EDL61701BT	QFX10000-PWR-AC
Power Supply 4	REV 02	740-049388	1EDL62102P7	QFX10000-PWR-AC
Power Supply 5	REV 02	740-049388	1EDL62102PP	QFX10000-PWR-AC
FTC 0	REV 14	750-050108	ACPE4038	QFX10008-FAN-CTRL
FTC 1	REV 14	750-050108	ACPE4032	QFX10008-FAN-CTRL
Fan Tray 0	REV 09	760-054372	ACPD6799	QFX10008-FAN
Fan Tray 1	REV 09	760-054372	ACNZ3584	QFX10008-FAN
SIB 0	REV 24	750-050058	ACPD4587	QFX10008-SF
SIB 1	REV 24	750-050058	ACNZ0635	QFX10008-SF
SIB 2	REV 24	750-050058	ACPD4908	QFX10008-SF
SIB 3	REV 24	750-050058	ACNZ0617	QFX10008-SF
SIB 4	REV 24	750-050058	ACNZ0527	QFX10008-SF
SIB 5	REV 23	750-050058	ACNX6980	QFX10008-SF

show chassis hardware models (PTX10016 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 24	750-077138	ACPR5157	JNP10016
CB 0	REV 04	711-065897	CAHA9983	PROTO-ASSEMBLY
CB 1	REV 05	711-065897	CAJD3802	PROTO-ASSEMBLY
FPC 2				
PIC 0		BUILTIN	BUILTIN	
FPC 4	REV 35	750-071976	ACPD2168	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 5	REV 13	750-068822	ACPA0336	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 6	REV 41	750-071976	ACPF0695	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 7	REV 35	750-071976	ACPD2139	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 8	REV 35	750-071976	ACPD2142	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 9	REV 41	750-071976	ACPM5461	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 10	REV 35	750-071976	ACNS6795	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 11	REV 35	750-071976	ACPD1831	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	

FPC 13	REV 41	750-071976	ACPS2075	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
FPC 15	REV 37	750-071976	ACPL7163	JNP10K-LC1101
PIC 0		BUILTIN	BUILTIN	
Power Supply 0	REV 01	740-073147	1EDM6171155	JNP10K-PWR-DC
Power Supply 1	REV 01	740-073147	1EDM6281575	JNP10K-PWR-DC
Power Supply 2	REV 01	740-073147	1EDM6171044	JNP10K-PWR-DC
Power Supply 3	REV 01	740-073147	1EDM6281244	JNP10K-PWR-DC
Power Supply 4	REV 01	740-073147	1EDM6282093	JNP10K-PWR-DC
Power Supply 5	REV 01	740-073147	1EDM6281413	JNP10K-PWR-DC
Power Supply 6	REV 01	740-073147	1EDM6171071	JNP10K-PWR-DC
Power Supply 7	REV 01	740-073147	1EDM6170709	JNP10K-PWR-DC
Power Supply 8	REV 01	740-073147	1EDM6171169	JNP10K-PWR-DC
Power Supply 9	REV 01	740-073147	1EDM6170754	JNP10K-PWR-DC
Fan Tray 0				QFX5100-FAN-AFO
Fan Tray 1				QFX5100-FAN-AFO
SIB 0	REV 15	750-077140	ACPV3933	JNP10016-SF
SIB 1	REV 15	750-077140	ACPV3938	JNP10016-SF
SIB 2	REV 15	750-077140	ACPV3974	JNP10016-SF
SIB 3	REV 15	750-077140	ACPV3879	JNP10016-SF
SIB 4	REV 15	750-077140	ACPV3964	JNP10016-SF
SIB 5	REV 15	750-077140	ACPV3981	JNP10016-SF
FPD Board	REV 07	711-054687	ACPS8855	

show chassis hardware clei-models (MX104 Router)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 20	750-044219	PROTOXCLEI	PROTO-ASSEMBLY
PEM 0	REV 01	740-045932		
Routing Engine 0	REV 16	750-044228	PROTOXCLEI	PROTO-ASSEMBLY
AFEB 0		BUILTIN		
FPC 0		BUILTIN		
FPC 1		BUILTIN		
MIC 0	REV 01	750-046905	PROTOXCLEI	MIC-3D-20GE-SFP-EH
FPC 2		BUILTIN		
Fan Tray	REV 02	711-049570	CAAX6538	PROTO-ASSEMBLY

show chassis hardware (MX240 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN10C7F7EAFC	MX240
Midplane	REV 01	710-021041	TR1502	MX240 Backplane
FPM Board	REV 01	710-017254	KD4017	Front Panel Display
PEM 0	Rev 02	740-017330	000332	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	000226	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 06	740-013063	1000703522	RE-S-2000
Routing Engine 1	REV 06	740-015113	1000687625	RE-S-1300
CB 0	REV 07	710-013385	KC9057	MX SCB
CB 1	REV 05	710-013385	JY4760	MX SCB
FPC 1	REV 01	750-021679	KC7340	DPCE 40x 1GE R
CPU	REV 06	710-013713	KD4078	DPC PMB

PIC 0			BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	P9F18ME		SFP-SX
PIC 1			BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 2			BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 3			BUILTIN	BUILTIN	10x 1GE(LAN)
FPC 2	REV 04	710-016669	JS4529		DPCE 40x 1GE R EQ
CPU	REV 06	710-013713	KB3969		DPC PMB
PIC 0			BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y79		SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XU8		SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YG6		SFP-SX
Xcvr 3	REV 01	740-011613	PBG3XUG		SFP-SX
Xcvr 4	REV 01	740-011613	PBG3XTJ		SFP-SX
PIC 1			BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3ZUM		SFP-SX
Xcvr 1	REV 01	740-011613	PBG3Y5H		SFP-SX
Xcvr 2	REV 01	740-011613	PBG3UZT		SFP-SX
Xcvr 3	REV 01	740-011613	PBG3US1		SFP-SX
PIC 2			BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3YG7		SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XZ9		SFP-SX
Xcvr 2	REV 01	740-011613	PBG3XTY		SFP-SX
Xcvr 3	REV 01	740-011613	PBG3UZG		SFP-SX
PIC 3			BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y8W		SFP-SX
Xcvr 1	REV 01	740-011613	PBG3YVX		SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YB3		SFP-SX
Xcvr 3	REV 01	740-011613	PBG43VQ		SFP-SX
Fan Tray 0	REV 01	710-021113	JS4642		MX240 Fan Tray

show chassis hardware detail (MX 240 Router with Routing Engine Displaying DIMM Information)

```
user@host> show chassis hardware detail
```

Item	Version	Part number	Serial number	Description
Chassis			JN11279B4AFC	MX240 Backplane
Midplane	REV 07	760-021404	TS2474	MX240 Backplane
FPM Board	REV 03	760-021392	XC2643	Front Panel Display
PEM 0	Rev 03	740-017343	QCS0908A068	DC Power Entry Module
Routing Engine 0	REV 01	740-031117	AARCH00	RE-S-1800x4
ad0	3764 MB	STEC M2+ CF 9.0.2	STIM2Q3209239145303	Removable Compact Flash
ad1	28626 MB	WDC SSD-F0030S-5000	C933Z036237215548S00	Compact Flash
usb0 (addr 1)	EHCI root hub 0		Intel	uhub0
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub1
DIMM 0	VL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
DIMM 1	VL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
DIMM 2	VL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
DIMM 3	SL31B5263E-F8S DIE REV-0 PCB REV-0			MFR ID-ce80
CB 0	REV 03	710-021523	XD7225	MX SCB
Fan Tray 0	REV 01	710-021113	WZ4986	MX240 Fan Tray

show chassis hardware (MX240 Router with Enhanced MX SCB)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
------	---------	-------------	---------------	-------------

Chassis			JN10C7F7EAFB	MX240
Midplane	REV 01	710-021041	TR1502	MX240 Backplane
FPM Board	REV 01	710-017254	KD4017	Front Panel Display
PEM 0	Rev 02	740-017330	000332	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	000226	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 06	740-013063	1000703522	RE-S-2000
Routing Engine 1	REV 06	740-015113	1000687625	RE-S-1300
CB 0	REV 02	710-031391	YE8494	Enhanced MX SCB
CB 1	REV 05	710-031391	YOP5764	Enhanced MX SCB
FPC 1	REV 01	750-021679	KC7340	DPCE 40x 1GE R
CPU	REV 06	710-013713	KD4078	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	P9F18ME	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
FPC 2	REV 04	710-016669	JS4529	DPCE 40x 1GE R EQ
CPU	REV 06	710-013713	KB3969	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y79	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XU8	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YG6	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3XUG	SFP-SX
Xcvr 4	REV 01	740-011613	PBG3XTJ	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3ZUM	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3Y5H	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3UZT	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3US1	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3YG7	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3XZ9	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3XTY	SFP-SX
Xcvr 3	REV 01	740-011613	PBG3UZG	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PBG3Y8W	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3YVX	SFP-SX
Xcvr 2	REV 01	740-011613	PBG3YB3	SFP-SX
Xcvr 3	REV 01	740-011613	PBG43VQ	SFP-SX
Fan Tray 0	REV 01	710-021113	JS4642	MX240 Fan Tray

show chassis hardware (MX480 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN10C7F7FAFB	MX480
Midplane	REV 04	710-017414	TR2071	MX480 Midplane
FPM Board	REV 02	710-017254	KB8459	Front Panel Display
PEM 0	Rev 02	740-017330	QCS07519029	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	QCS07519041	PS 1.2-1.7kW; 100-240V
AC in				
PEM 2	Rev 02	740-017330	QCS07519097	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 07	740-013063	1000733381	RE-S-2000
Routing Engine 1	REV 07	740-013063	1000733540	RE-S-2000

CB 0	REV 07	710-013385	KA8022	MX SCB
CB 1	REV 07	710-013385	KA8303	MX SCB
FPC 0	REV 09	750-020452	KA8660	DPCE 40x 1GE X EQ
CPU	REV 06	710-013713	KA8185	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Fan Tray				Left Fan Tray

show chassis hardware (MX480 Router with Enhanced MX SCB)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN10C7F7FAFB	MX480
Midplane	REV 04	710-017414	TR2071	MX480 Midplane
FPM Board	REV 02	710-017254	KB8459	Front Panel Display
PEM 0	Rev 02	740-017330	QCS07519029	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 02	740-017330	QCS07519041	PS 1.2-1.7kW; 100-240V
AC in				
PEM 2	Rev 02	740-017330	QCS07519097	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 07	740-013063	1000733381	RE-S-2000
Routing Engine 1	REV 07	740-013063	1000733540	RE-S-2000
CB 0	REV 07	710-013385	KA8022	Enhanced MX SCB
CB 1	REV 07	710-013385	KA8303	Enhanced MX SCB
FPC 0	REV 09	750-020452	KA8660	DPCE 40x 1GE X EQ
CPU	REV 06	710-013713	KA8185	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Fan Tray				Left Fan Tray

show chassis hardware (MX480 Routers with MPC5E and Built-In OTN PIC)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN11C0338AFB	MX480
Midplane	REV 05	710-017414	ABAB8430	MX480 Midplane
FPM Board	REV 02	710-017254	ZS8005	Front Panel Display
PEM 0	Rev 05	740-029970	QCS1024U089	PS 1.4-2.52kW; 90-264V
AC in				
PEM 1	Rev 10	740-029970	QCS1314U0FJ	PS 1.4-2.52kW; 90-264V
AC in				
PEM 2	Rev 07	740-029970	QCS1121U076	PS 1.4-2.52kW; 90-264V
AC in				
Routing Engine 0	REV 05	740-031116	9009092471	RE-S-1800x4
Routing Engine 1	REV 05	740-031116	9009097958	RE-S-1800x4
CB 0	REV 16	750-031391	CAAX0789	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAX0856	Enhanced MX SCB
FPC 0	REV 32	750-028467	ABBP1782	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBP5410	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-021308	983152A00038	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00211	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AQ72LPB	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AHNOWR5	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11J03627	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00300	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ42WSS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HGC	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	ANAONDO	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANAONGF	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	ANAONG9	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	ANAOMP9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQA06CG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	19T511100493	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	APR040J	SFP+-10G-SR
FPC 1	REV 26	750-046005	CACN1894	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8698	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	163363A03046	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JS8	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	153363A00593	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JUJ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQCOB53	CFP2-100G-LR4-D
FPC 2	REV 26	750-046005	CACN1891	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8694	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0		NON-JNPR	URA012A	SFP+-10G-LR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	J13F47042	CFP2-100G-LR4-D
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AJCOBM3	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	11T511100917	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQK07SU	CFP2-100G-LR4-D
FPC 3	REV 03	750-045372	CAAD9425	MPCE Type 3 3D
CPU	REV 08	711-035209	CAAD9094	HMPC PMB 2G
MIC 0	REV 14	750-033196	CAAW9204	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC034	CFP2-100G-SR10
MIC 1	REV 19	750-033199	CAAJ1814	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 4	REV 21.0.11	750-045715	CAAY3568	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7430	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AP406NG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AR41NLP	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11D05630	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 12	750-049136	CACM6678	MPC5E 24XGE OTN Mezz
FPC 5	REV 11	750-045372	CABK7539	MPCE Type 3 3D
CPU	REV 08	711-035209	CABJ2466	HMPC PMB 2G
MIC 0	REV 19	750-033199	CAAJ9719	1X100GE CFP

PIC 0			BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	UP1020P		CFP-100G-SR10
MIC 1	REV 07	750-033196	YZ0797		1X100GE CXP
PIC 2			BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC42FC022		CFP2-100G-SR10
Fan Tray					Enhanced Left Fan Tray

show chassis hardware detail (MX480 Routers with MPC5E and Built-In OTN PIC)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11C0338AFB	MX480
Midplane	REV 05	710-017414	ABAB8430	MX480 Midplane
FPM Board	REV 02	710-017254	ZS8005	Front Panel Display
PEM 0	Rev 05	740-029970	QCS1024U089	PS 1.4-2.52kW; 90-264V
AC in				
PEM 1	Rev 10	740-029970	QCS1314U0FJ	PS 1.4-2.52kW; 90-264V
AC in				
PEM 2	Rev 07	740-029970	QCS1121U076	PS 1.4-2.52kW; 90-264V
AC in				
Routing Engine 0	REV 05	740-031116	9009092471	RE-S-1800x4
ad0 3896 MB	VRFCF14096DIHK1		VM4096MB 6862	Compact Flash
ad1 30533 MB	UGB94ARF32H0S3-KC		UNIGEN-478612-001127	Disk 1
usb0 (addr 1)	EHCI root hub 0		Intel	uhub0
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub1
DIMM 0	SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80	
DIMM 1	SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80	
DIMM 2	SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80	
DIMM 3	SGU04G72H1BB2SA-BB DIE	REV-52 PCB REV-54	MFR ID-ce80	
Routing Engine 1	REV 05	740-031116	9009097958	RE-S-1800x4
ad0 3896 MB	VRFCF14096DIHK1		VM4096MB 6145	Compact Flash
ad1 30533 MB	UGB94ARF32H0S3-KC		UNIGEN-499551-000273	Disk 1
CB 0	REV 16	750-031391	CAAX0789	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAX0856	Enhanced MX SCB
FPC 0	REV 32	750-028467	ABBP1782	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBP5410	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	983152A00038	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00211	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AQ72LPB	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AHNRW5	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11J03627	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00300	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ42WSS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HGC	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	ANAONDO	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANAONGF	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	ANAONG9	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	ANAOMP9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQA06CG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	19T511100493	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	APR040J	SFP+-10G-SR
FPC 1	REV 26	750-046005	CACN1894	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8698	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN

Xcvr 0	REV 01	740-031980	163363A03046	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JS8	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	153363A00593	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ40JUJ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQCOB53	CFP2-100G-LR4-D
FPC 2	REV 26	750-046005	CACN1891	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACN8694	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0		NON-JNPR	URA012A	SFP+-10G-LR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	J13F47042	CFP2-100G-LR4-D
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AJC0BM3	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	11T511100917	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQK07SU	CFP2-100G-LR4-D
FPC 3	REV 03	750-045372	CAAD9425	MPC5E Type 3 3D
CPU	REV 08	711-035209	CAAD9094	HMPC PMB 2G
MIC 0	REV 14	750-033196	CAAW9204	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC034	CFP2-100G-SR10
MIC 1	REV 19	750-033199	CAAJ1814	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 4	REV 21.0.11	750-045715	CAAY3568	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7430	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	AP406NG	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AR41NLP	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11D05630	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 12	750-049136	CACM6678	MPC5E 24XGE OTN Mezz
FPC 5	REV 11	750-045372	CABK7539	MPCE Type 3 3D
CPU	REV 08	711-035209	CABJ2466	HMPC PMB 2G
MIC 0	REV 19	750-033199	CAAJ9719	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	UP1020P	CFP-100G-SR10
MIC 1	REV 07	750-033196	YZ0797	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC42FC022	CFP2-100G-SR10
Fan Tray				Enhanced Left Fan Tray

show chassis hardware extensive (MX480 Routers with MPC5E and Built-In OTN PIC)

```
user@host> show chassis hardware extensive
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11C0338AFB	MX480
Jedec Code:	0x7fb0	EEPROM Version:	0x02	
		S/N:	JN11C0338AFB	
Assembly ID:	0x01fe	Assembly Version:	00.00	
Date:	00-00-0000	Assembly Flags:	0x02	
ID:	MX480			
Board Information Record:				

```

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 01 fe 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 31 43 30 33 33 38 41 46 42 02 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane          REV 05    710-017414    ABAB8430          MX480 Midplane
Jedec Code:      0x7fb0          EEPROM Version:    0x01
P/N:             710-017414      S/N:             ABAB8430
Assembly ID:     0x01fe          Assembly Version: 01.05
Date:            12-13-2011      Assembly Flags:   0x00
Version:         REV 05
ID: MX480 Midplane          FRU Model Number: CHAS-BP-MX480-S
Board Information Record:
Address 0x00: ad 01 08 00 00 23 9c fc 98 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 01 fe 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 31 37 34 31 34 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 38 34 33 30 00 0d 0c 07
Address 0x30: db ff ff ff ad 01 08 00 00 23 9c fc 98 00 ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
Address 0x50: 48 41 53 2d 42 50 2d 4d 58 34 38 30 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board          REV 02    710-017254    ZS8005          Front Panel Display
Jedec Code:      0x7fb0          EEPROM Version:    0x01
P/N:             710-017254      S/N:             ZS8005
Assembly ID:     0x01ff          Assembly Version: 01.02
Date:            11-21-2011      Assembly Flags:   0x00
Version:         REV 02
ID: Front Panel Display          FRU Model Number: CRAFT-MX480-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 01 ff 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 31 37 32 35 34 00 00
Address 0x20: 53 2f 4e 20 5a 53 38 30 30 35 00 00 00 15 0b 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
Address 0x50: 52 41 46 54 2d 4d 58 34 38 30 2d 53 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PEM 0              Rev 05    740-029970    QCS1024U089    PS 1.4-2.52kW; 90-264V
AC in
Jedec Code:      0x7fb0          EEPROM Version:    0x01
P/N:             740-029970      S/N:             QCS1024U089
Assembly ID:     0x0432          Assembly Version: 01.05
Date:            06-17-2010      Assembly Flags:   0x00
Version:         Rev 05
ID: PS 1.4-2.52kW; 90-264V AC in FRU Model Number: PWR-MX480-2520-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 32 01 05 52 65 76 20 30 35 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 32 39 39 37 30 00 00
Address 0x20: 51 43 53 31 30 32 34 55 30 38 39 00 00 11 06 07

```

```

Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 50
Address 0x50: 57 52 2d 4d 58 34 38 30 2d 32 35 32 30 2d 41 43
Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 1          Rev 10    740-029970    QCS1314U0FJ    PS 1.4-2.52kW; 90-264V
AC in
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           740-029970      S/N:              QCS1314U0FJ
Assembly ID:   0x0432          Assembly Version:  01.10
Date:          04-04-2013      Assembly Flags:    0x00
Version:       Rev 10
ID: PS 1.4-2.52kW; 90-264V AC in FRU Model Number: PWR-MX480-2520-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 32 01 0a 52 65 76 20 31 30 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 32 39 39 37 30 00 00
Address 0x20: 51 43 53 31 33 31 34 55 30 46 4a 00 00 04 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
Address 0x50: 57 52 2d 4d 58 34 38 30 2d 32 35 32 30 2d 41 43
Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 2          Rev 07    740-029970    QCS1121U076    PS 1.4-2.52kW; 90-264V
AC in
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           740-029970      S/N:              QCS1121U076
Assembly ID:   0x0432          Assembly Version:  01.07
Date:          05-23-2011      Assembly Flags:    0x00
Version:       Rev 07
ID: PS 1.4-2.52kW; 90-264V AC in FRU Model Number: PWR-MX480-2520-AC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 32 01 07 52 65 76 20 30 37 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 32 39 39 37 30 00 00
Address 0x20: 51 43 53 31 31 32 31 55 30 37 36 00 00 17 05 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
Address 0x50: 57 52 2d 4d 58 34 38 30 2d 32 35 32 30 2d 41 43
Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0 REV 05    740-031116    9009092471    RE-S-1800x4
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-031116      S/N:              9009092471
Assembly ID:   0x09c0          Assembly Version:  01.05
Date:          11-01-2011      Assembly Flags:    0x00
Version:       REV 05          CLEI Code:         COUCALDBAA
ID: RE-S-1800x4          FRU Model Number:  RE-S-1800X4-16G-S
Board Information Record:
Address 0x00: 54 32 30 32 37 43 41 2d 34 32 46 42 23 23 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00
Address 0x20: 39 30 30 39 30 39 32 34 37 31 00 00 00 01 0b 07
Address 0x30: db ff ff ff 54 32 30 32 37 43 41 2d 34 32 46 42
Address 0x40: 23 23 23 00 01 43 4f 55 43 41 4c 44 42 41 41 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff

```

```

Address 0x70: ff ff ff 4b ff ff ff ff ff ff ff ff ff ff
ad0   3896 MB VRFCF14096DIHK1 VM4096MB 6862 Compact Flash
ad1   30533 MB UGB94ARF32H0S3-KC UNIGEN-478612-001127 Disk 1
usb0 (addr 1) EHCI root hub 0 Intel uhub0
usb0 (addr 2) product 0x0020 32 vendor 0x8087 uhub1
DIMM 0 SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 1 SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 2 SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 3 SGU04G72H1BB2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
Routing Engine 1 REV 05 740-031116 9009097958 RE-S-1800x4
Jedec Code: 0x7fb0 EEPROM Version: 0x02
P/N: 740-031116 S/N: 9009097958
Assembly ID: 0x09c0 Assembly Version: 01.05
Date: 02-06-2012 Assembly Flags: 0x00
Version: REV 05 CLEI Code: COUCALDBAA
ID: RE-S-1800x4 FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
Address 0x00: 54 32 30 32 37 43 41 2d 34 32 46 42 23 23 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 36 00 00
Address 0x20: 39 30 30 39 30 39 37 39 35 38 00 00 06 02 07
Address 0x30: dc ff ff ff 54 32 30 32 37 43 41 2d 34 32 46 42
Address 0x40: 23 23 23 00 01 43 4f 55 43 41 4c 44 42 41 41 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 4b ff ff ff ff ff ff ff ff ff ff ff
ad0   3896 MB VRFCF14096DIHK1 VM4096MB 6145 Compact Flash
ad1   30533 MB UGB94ARF32H0S3-KC UNIGEN-499551-000273 Disk 1
...

```

show chassis hardware (MX960 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis				MX960
Midplane	REV 01	710-013698	AA6082	MX960 Midplane
PIM	Rev 01	740-013110	000008	Power Inlet Module
PEM 2				
PEM 3	Rev 01	740-013682	000038	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 00	740-015113	1000617944	RE-S-1300
CB 0	REV 05	710-013725	JK6947	MX960 Test SCB
FPC 4	REV 01	710-013305	JM7617	MX960 Test DPC
CPU				
PIC 0		BUILTIN	BUILTIN	1x 10GE (LAN/WAN)
PIC 1		BUILTIN	BUILTIN	10x 1GE
FPC 7	REV 01	710-013305	JL9634	MX960 Test DPC
CPU				
PIC 0		BUILTIN	BUILTIN	1x 10GE (LAN/WAN)
Xcvr 0		NON-JNPR	MYBG65I82C	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	10x 1GE
Xcvr 1	REV 01	740-011782	P7N0368	SFP-SX
Xcvr 4	REV 01	740-011782	P8J1W27	SFP-SX
Xcvr 6	REV 01	740-011782	P8J1VSD	SFP-SX
Xcvr 9	REV 01	740-011782	P8J1W25	SFP-SX
Fan Tray 0				
Fan Tray 1				

show chassis hardware (MX960 Router with Bidirectional Optics)

user@host> show chassis hardware

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN10BA5B9AFA	MX960
Midplane	REV 03	710-013698	TR0234	MX960 Backplane
FPM Board	REV 03	710-014974	JA0878	Front Panel Display
PDM	Rev 03	740-013110	QCS11135028	Power Distribution Module
PEM 0	Rev 03	740-013682	QCS11154036	PS 1.7kW; 200-240VAC in
PEM 1	Rev 03	740-013682	QCS11154010	PS 1.7kW; 200-240VAC in
PEM 2	Rev 03	740-013682	QCS11154022	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 06	740-013063	1000691458	RE-S-2000
CB 0	REV 07	710-013385	KA2190	MX SCB
CB 1	REV 07	710-013385	KA0837	MX SCB
FPC 3	REV 02	750-018122	KB3890	DPCE 40x 1GE R
CPU				
FPC 4	REV 01	750-018122	KB3889	DPCE 40x 1GE R
CPU	REV 06	710-013713	KB3976	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 1	REV 01	740-020426	4910549	SFP-1000BASE-BX40-D
Xcvr 2	REV 01	740-020426	4910551	SFP-1000BASE-BX40-D
Xcvr 5	REV 01	740-021340	77E245N00006	SFP-1000BASE-BX10-U
Xcvr 6	REV 01	740-020425	4882821	SFP-1000BASE-BX40-U
Xcvr 8	REV 01	740-020425	4882820	SFP-1000BASE-BX40-U
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-020465	77E555N00894	SFP-1000BASE-BX10-D
Xcvr 1	REV 01	740-020465	75E467X00818	SFP-1000BASE-BX10-D
Xcvr 2	REV 01	740-020465	75E467X00573	SFP-1000BASE-BX10-D
Xcvr 3	REV 01	740-020465	4888227	SFP-1000BASE-BX10-D
Xcvr 4	REV 01	740-020465	4888241	SFP-1000BASE-BX10-D
Xcvr 5	REV 01	740-021340	77E245N00005	SFP-1000BASE-BX10-U
Xcvr 6	REV 01	740-021340	76E245X00487	SFP-1000BASE-BX10-U
Xcvr 7	REV 01	740-021341	5255889	SFP-1000BASE-BX10-U
Xcvr 8	REV 01	740-021341	5255887	SFP-1000BASE-BX10-U
Xcvr 9	REV 01	740-021340	77E245N00004	SFP-1000BASE-BX10-U
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-020424	5007582	SFP-1000BASE-BX10-D
Xcvr 1	REV 01	740-020424	4888187	SFP-1000BASE-BX10-D
Xcvr 2	REV 01	740-020424	4656500	SFP-1000BASE-BX10-D
Xcvr 5	REV 01	740-021341	5255886	SFP-1000BASE-BX10-U
Xcvr 7	REV 01	740-021340	77E245N00003	SFP-1000BASE-BX10-U
Xcvr 8	REV 01	740-021341	5255888	SFP-1000BASE-BX10-U
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-017726	74S184H30341	SFP-EX
Xcvr 1	REV 01	740-017726	4814061	SFP-EX
Xcvr 5	REV 01	740-017726	6ZS184H31108	SFP-EX
Xcvr 9	REV 01	740-021340	76E245X00486	SFP-1000BASE-BX10-U
Fan Tray 0				
Fan Tray 1	REV 03	740-014971	TP0850	Fan Tray

show chassis hardware (MX960 Router with Enhanced MX SCB)

user@host> show chassis hardware

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1096805AFA	MX960
Midplane	REV 03	710-013698	TR0183	MX960 Backplane

Fan Extender	REV 02	710-018051	JY5227	Extended Cable Manager
FPM Board	REV 03	710-014974	JZ6876	Front Panel Display
PDM	Rev 03	740-013110	QCS11035023	Power Distribution Module
PEM 1	Rev 03	740-013682	QCS1109400L	PS 1.7kW; 200-240VAC in
PEM 2	Rev 03	740-013682	QCS11094015	PS 1.7kW; 200-240VAC in
PEM 3	Rev 03	740-013682	QCS11094012	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 06	740-013063	1000687969	RE-S-2000
Routing Engine 1	REV 06	740-013063	1000687955	RE-S-2000
CB 0	REV 11	750-031391	YZ6072	Enhanced MX SCB
CB 1	REV 11	750-031391	YZ6068	Enhanced MX SCB
CB 2	REV 11	750-031391	YZ6081	Enhanced MX SCB
FPC 0	REV 01	750-018122	KA5576	DPCE 40x 1GE R
CPU	REV 06	710-013713	KB3961	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	P9F18GF	SFP-SX
Xcvr 2	REV 01	740-011782	P9M0TL9	SFP-SX
Xcvr 7	REV 01	740-011782	P9POXXH	SFP-SX
Xcvr 9	REV 01	740-011782	P9M0TN1	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	PAJ4UHC	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	PFF2CD0	SFP-SX
Xcvr 1	REV 01	740-011613	PBG3ZUT	SFP-SX
Xcvr 2	REV 01	740-011613	PFF2DDV	SFP-SX
Xcvr 5	REV 01	740-011613	P8E2SST	SFP-SX
Xcvr 9	REV 01	740-011782	PB8329N	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-026192	1U0201084503342	SFP-100BASE-BX10-U
Xcvr 1	REV 01	740-026193	1U1201084503313	SFP-100BASE-BX10-D
Xcvr 2	REV 01	740-011613	PAJ4Y5B	SFP-SX
Xcvr 6	REV 01	740-011782	P9M0U3M	SFP-SX
Xcvr 7	REV 01	740-011782	P9M0TLA	SFP-SX
FPC 1	REV 16	750-031089	YL0719	MPC Type 2 3D
CPU	REV 06	711-030884	YL1463	MPC PMB 2G
MIC 0	REV 07	750-028387	JR6500	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 01	740-014279	733019A00154	XFP-10G-LR
Xcvr 1	REV 02	740-014289	T09F55034	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 01	740-014279	913019B00791	XFP-10G-LR
Xcvr 1	REV 01	740-014289	98S803A90384	XFP-10G-SR
MIC 1	REV 24	750-028387	YJ3950	3D 4x 10GE XFP
PIC 2		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 02	740-014279	T10B36134	XFP-10G-LR
Xcvr 1	REV 01	740-014289	T07M86354	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	2x 10GE XFP
FPC 2	REV 08	710-014219	JY9654	DPCE 4x 10GE R
CPU	REV 06	710-013713	JZ6549	DPC PMB
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 1		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 2		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 03	740-011571	C931BK028	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
FPC 3	REV 10	750-024199	XJ6692	MX FPC Type 3
CPU	REV 03	710-022351	XF5182	DPC PMB
PIC 0	REV 17	750-009553	RJ2945	4x OC-48 SONET
Xcvr 1	REV 01	740-011785	PCP3YLL	SFP-SR
Xcvr 3	REV 01	740-011785	PDSOMRY	SFP-SR
PIC 1	REV 32	750-003700	DP2113	1x OC-192 12xMM VSR
FPC 5	REV 25	750-028467	YM8256	MPC 3D 16x 10GE

CPU	REV 10	711-029089	YL3029	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 1	REV 01	740-031980	AHNOX1Z	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
FPC 7	REV 02	750-031092	JR6658	MPC Type 1 3D Q
CPU	REV 01	711-030884	JZ9038	MPC PMB 2G
MIC 0	REV 08	750-028392	JZ8737	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011782	PBE2C6Y	SFP-SX
Xcvr 2		NON-JNPR	U8105N8	SFP-SX
Xcvr 4	REV 01	740-011613	PFM18EF	SFP-SX
Xcvr 7	REV 01	740-011613	PFF2AM8	SFP-SX
Xcvr 8	REV 01	740-011613	PFF2CT6	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011782	PB82VHH	SFP-SX
Xcvr 1	REV 01	740-011613	PFF2CSW	SFP-SX
Xcvr 9	REV 01	740-011613	PFF2BY0	SFP-SX
QXM 0	REV 04	711-028408	JR6372	MPC QXM
FPC 8	REV 05	750-024387	JW9754	MX FPC Type 2
CPU	REV 03	710-022351	KF1651	DPC PMB
PIC 0	REV 08	750-014730	DM3664	4x OC-3 1x OC-12 SFP
Xcvr 0	REV 01	740-016065	81S290N00077	SFP-SR
Xcvr 1		NON-JNPR	2191844	SFP-SR
Xcvr 2	REV 01	740-011618	PD81EE5	SFP-IR
PIC 1	REV 08	750-014637	DM3671	4x OC-12-3 SFP
Xcvr 0	REV 01	740-011785	PCK3UNK	SFP-SR
Xcvr 3	REV 01	740-011785	PDSOMPZ	SFP-SR
FPC 10	REV 04	710-013699	JY4654	DPCE 40x 1GE R
CPU	REV 05	710-013713	JS9717	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 5	REV 01	740-011782	PAR1L72	SFP-SX
Xcvr 6	REV 01	740-011782	P8N1YQ4	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011782	P8Q2AVL	SFP-SX
Xcvr 5	REV 01	740-011782	PAR1L7B	SFP-SX
Xcvr 6	REV 01	740-011782	PAR1L2J	SFP-SX
Xcvr 8	REV 01	740-011782	P8N1YMY	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Fan Tray 0	REV 03	740-014971	TP0567	Fan Tray
Fan Tray 1	REV 03	740-014971	TP0702	Fan Tray

show chassis hardware models (MX960 Router with Enhanced MX SCB)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	Serial number	FRU model number
Midplane	REV 03	710-013698	TR0183	CHAS-BP-MX960-S
Fan Extender	REV 02	710-018051	JY5227	ECM-MX960
FPM Board	REV 03	710-014974	JZ6876	CRAFT-MX960-S
Routing Engine 0	REV 06	740-013063	1000687969	RE-S-2000-4096-S
Routing Engine 1	REV 06	740-013063	1000687955	RE-S-2000-4096-S
CB 0	REV 11	750-031391	YZ6072	SCBE-MX-S
CB 1	REV 11	750-031391	YZ6068	SCBE-MX-S
CB 2	REV 11	750-031391	YZ6081	SCBE-MX-S
FPC 0	REV 01	750-018122	KA5576	DPCE-R-40GE-SFP
FPC 1	REV 16	750-031089	YL0719	MX-MPC2-3D

MIC 0	REV 07	750-028387	JR6500	MIC-3D-4XGE-XFP
MIC 1	REV 24	750-028387	YJ3950	MIC-3D-4XGE-XFP
FPC 2	REV 08	710-014219	JY9654	DPC-R-4XGE-XFP
FPC 3	REV 10	750-024199	XJ6692	MX-FPC3
PIC 0	REV 17	750-009553	RJ2945	PC-40C48-SON-SFP
PIC 1	REV 32	750-003700	DP2113	PC-10C192-SON-VSR
FPC 5	REV 25	750-028467	YM8256	MPC-3D-16XGE-SFPP
FPC 7	REV 02	750-031092	JR6658	MX-MPC1-3D-Q
MIC 0	REV 08	750-028392	JZ8737	MIC-3D-20GE-SFP
FPC 8	REV 05	750-024387	JW9754	MX-FPC2
PIC 0	REV 08	750-014730	DM3664	PB-40C3-10C12-SON2-SFP
PIC 1	REV 08	750-014637	DM3671	PB-40C3-40C12-SON-SFP
FPC 10	REV 04	710-013699	JY4654	DPC-R-40GE-SFP
Fan Tray 0	REV 03	740-014971	TP0567	FFANTRAY-MX960-S
Fan Tray 1	REV 03	740-014971	TP0702	FFANTRAY-MX960-S

show chassis hardware (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1214852AFA	MX960
Midplane	REV 01	710-030012	ACAX3674	MX960 Backplane
FPM Board	REV 03	710-014974	CAAZ9326	Front Panel Display
PDM	Rev 03	740-013110	QCS17025017	Power Distribution Module
PEM 0 in	Rev 10	740-027760	QCS1702N062	PS 4.1kW; 200-240V AC
PEM 1 in	Rev 04	740-027760	QCS1422N02C	PS 4.1kW; 200-240V AC
PEM 2 in	Rev 09	740-027760	QCS1614N01X	PS 4.1kW; 200-240V AC
Routing Engine 0	REV 08	740-031116	9009131803	RE-S-1800x4
Routing Engine 1	REV 08	740-031116	9009124913	RE-S-1800x4
CB 0	REV 18	750-031391	CABF0579	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAZ2471	Enhanced MX SCB
CB 2	REV 16	750-031391	CAAW9595	Enhanced MX SCB
FPC 0	REV 18	750-046005	CACE6574	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8908	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQAODYT	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMS7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03Z	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	ANAONAJ	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMRQ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-049775	J13K72993	CFP2-100G-LR4
FPC 1	REV 11	750-045372	CABK8154	MPCE Type 3 3D
CPU	REV 08	711-035209	CABE7370	HMPC PMB 2G
MIC 0	REV 07	750-033307	CABD5255	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-021308	AQ50319	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ5035V	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502XJ	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HHR	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQ502YA	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ502EU	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ502HR	SFP+-10G-SR

Xcvr 7	REV 01	740-021308	AQ502A6	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ43H8M	SFP+-10G-SR
MIC 1	REV 14	750-033196	CAAP1398	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC064	CFP-100G-SR10
FPC 3	REV 35	750-028467	CAAT9156	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAV4645	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HZ1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43HZC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HD2	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502HN	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HGF	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501RZ	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5029V	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ501X9	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ502ZN	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43H86	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502ZY	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502PZ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ503E6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502XN	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11F00213	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ50336	SFP+-10G-SR
FPC 4	REV 18	750-046005	CACE6568	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8900	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA095A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOM1E	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000F	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOLYC	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLYB	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-048813	XD32FE00Z	CFP2-100G-SR10
FPC 5	REV 18	750-046005	CACE6577	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8902	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOMXE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLVY	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03T	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOLW1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLW3	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000J	CFP2-100G-SR10
FPC 7	REV 09	750-037355	CAAF0937	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAD8004	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	ANAOMM3	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X000C163	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQGOMS6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMRX	SFP+-10G-SR

Xcvr 2	REV 01	740-021308	AQG0M6Y	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQG0LZM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00499	CFP-100G-SR10
FPC 8	REV 39	750-045715	CACD1903	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1815	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QC480289	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QC480274	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130190	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130197	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130180	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130199	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0415	MPC5E 24XGE OTN Mezz
FPC 9	REV 05	750-044444	CAAY9801	MPCE Type 2 3D P
CPU	REV 04	711-038484	CAAW3673	MPCE PMB 2G
MIC 0	REV 28	750-028387	CAAX1071	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T12L92342	XFP-10G-SR
Xcvr 1		NON-JNPR	T12L92303	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	CC07BK02X	XFP-10G-SR
QXM 0	REV 06	711-028408	CAAW4883	MPC QXM
QXM 1	REV 06	711-028408	CAAW4603	MPC QXM
FPC 10	REV 21.0.11	750-045715	CAAY3541	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7426	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-031980	AHK01AP	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502ZU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP41BLS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQA08YA	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQA0K26	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA06S3	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQA06AS	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQA053N	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0E97	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA0GS4	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA0JVA	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-021308	AQA057A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANA0MLS	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQA093A	SFP+-10G-SR
Xcvr 3	REV 01	740-021309	943153A00075	SFP+-10G-LR
Xcvr 4	REV 01	740-021308	AQA077B	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQA0JSC	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA0735	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ5028N	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AP40VN5	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0K0J	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA07AP	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA08YB	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 07	750-045717	CAAX3123	MPC5E 24XGE Mezz
FPC 11	REV 17	750-037355	CAAT3986	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAR3972	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP

Xcvr 0	REV 01	740-021308	AQA0DSE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501Y3	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ501XU	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ5036Y	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00247	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	ALQ1DKF	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ403YA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP40TY0	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ14G0	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00095	CFP-100G-SR10
Fan Tray 0	REV 08	740-031521	ACAF4219	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACAF4225	Enhanced Fan Tray

show chassis hardware detail (MX960 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis				MX960
Midplane	REV 01	710-013698	AA6082	MX960 Midplane
PIM	Rev 01	740-013110	000008	Power Inlet Module
PEM 2				
PEM 3	Rev 01	740-013682	000038	PS 1.7kW; 200-240VAC in
Routing Engine 0	REV 00	740-015113	1000617944	RE-S-1300
ad0 245 MB	SanDisk	SDCFB-256	111419E1805T1141	Compact Flash
ad2 38154 MB	FUJITSU	MHT2040BH	NR0WT5925N77	Hard Disk
CB 0	REV 05	710-013725	JK6947	MX960 Test SCB
FPC 4	REV 01	710-013305	JM7617	MX960 Test DPC
CPU				
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 1		BUILTIN	BUILTIN	10x 1GE
FPC 7	REV 01	710-013305	JL9634	MX960 Test DPC
CPU				
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0		NON-JNPR	MYBG65I82C	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	10x 1GE
Xcvr 1	REV 01	740-011782	P7N0368	SFP-SX
Xcvr 4	REV 01	740-011782	P8J1W27	SFP-SX
Xcvr 6	REV 01	740-011782	P8J1VSD	SFP-SX
Xcvr 9	REV 01	740-011782	P8J1W25	SFP-SX
Fan Tray 0				
Fan Tray 1				

show chassis hardware detail (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1214852AFA	MX960
Midplane	REV 01	710-030012	ACAX3674	MX960 Backplane
FPM Board	REV 03	710-014974	CAAZ9326	Front Panel Display
PDM	Rev 03	740-013110	QCS17025017	Power Distribution Module
PEM 0	Rev 10	740-027760	QCS1702N062	PS 4.1kW; 200-240V AC in

PEM 1	Rev 04	740-027760	QCS1422N02C	PS 4.1kW; 200-240V AC
in				
PEM 2	Rev 09	740-027760	QCS1614N01X	PS 4.1kW; 200-240V AC
in				
Routing Engine 0	REV 08	740-031116	9009131803	RE-S-1800x4
ad0 3831 MB	UGB30SFA4000T1		SFA4000T1 000016CD	Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI		11000061346	Disk 1
usb0 (addr 1)	EHCI root hub 0		Intel	uhub0
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub1
DIMM 0	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 1	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 2	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 3	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
Routing Engine 1	REV 08	740-031116	9009124913	RE-S-1800x4
ad0 3831 MB	UGB30SFA4000T1		SFA4000T1 0000106D	Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI		11000052402	Disk 1
CB 0	REV 18	750-031391	CABF0579	Enhanced MX SCB
CB 1	REV 16	750-031391	CAAZ2471	Enhanced MX SCB
CB 2	REV 16	750-031391	CAAW9595	Enhanced MX SCB
FPC 0	REV 18	750-046005	CACE6574	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8908	RMPD PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA0DYT	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0MS7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03Z	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	ANA0NAJ	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0MRQ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-049775	J13K72993	CFP2-100G-LR4
FPC 1	REV 11	750-045372	CABK8154	MPCE Type 3 3D
CPU	REV 08	711-035209	CABE7370	HMPC PMB 2G
MIC 0	REV 07	750-033307	CABD5255	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-021308	AQ50319	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ5035V	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502XJ	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43HHR	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQ502YA	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ502EU	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ502HR	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ502A6	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ43H8M	SFP+-10G-SR
MIC 1	REV 14	750-033196	CAAP1398	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC064	CFP2-100G-SR10
FPC 3	REV 35	750-028467	CAAT9156	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAV4645	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HZ1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43HZC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HD2	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502HN	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43HGF	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501RZ	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5029V	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ501X9	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-021308	AQ502ZN	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43H86	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502ZY	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502PZ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ503E6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502XN	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11F00213	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ50336	SFP+-10G-SR
FPC 4	REV 18	750-046005	CACE6568	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8900	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA095A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOM1E	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000F	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOLYC	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLYB	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-048813	XD32FE00Z	CFP2-100G-SR10
FPC 5	REV 18	750-046005	CACE6577	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACG8902	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOMXE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLVY	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03T	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQGOLW1	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOLW3	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000J	CFP2-100G-SR10
FPC 7	REV 09	750-037355	CAAF0937	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAD8004	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	ANAOmm3	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X000C163	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQGOMS6	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQGOMRX	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQGOM6Y	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQGOLZM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00499	CFP-100G-SR10
FPC 8	REV 39	750-045715	CACD1903	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1815	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFP
Xcvr 0	REV 01	740-046565	QC480289	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QC480274	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130190	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	3X40GE QSFP
Xcvr 0	REV 01	740-046565	QD130197	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130180	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130199	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0415	MPC5E 24XGE OTN Mezz
FPC 9	REV 05	750-044444	CAAY9801	MPCE Type 2 3D P

CPU	REV 04	711-038484	CAAW3673	MPCE PMB 2G
MIC 0	REV 28	750-028387	CAAX1071	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T12L92342	XFP-10G-SR
Xcvr 1		NON-JNPR	T12L92303	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	CC07BK02X	XFP-10G-SR
QXM 0	REV 06	711-028408	CAAW4883	MPC QXM
QXM 1	REV 06	711-028408	CAAW4603	MPC QXM
FPC 10	REV 21.0.11	750-045715	CAAY3541	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 07	711-045719	CAAW7426	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-031980	AHK01AP	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502ZU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP41BLS	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQA08YA	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQA0K26	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA06S3	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQA06AS	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQA053N	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0E97	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA0GS4	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA0JVA	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP
Xcvr 0	REV 01	740-021308	AQA057A	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	ANAOMLS	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQA093A	SFP+-10G-SR
Xcvr 3	REV 01	740-021309	943153A00075	SFP+-10G-LR
Xcvr 4	REV 01	740-021308	AQA077B	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQA0JSC	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQA0735	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ5028N	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AP40VN5	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQA0K0J	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQA07AP	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQA08YB	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 07	750-045717	CAAX3123	MPC5E 24XGE Mezz
FPC 11	REV 17	750-037355	CAAT3986	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAR3972	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	AQA0DSE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501Y3	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ501XU	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ5036Y	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00247	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	ALQ1DKF	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ403YA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AP40TY0	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ14G0	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00095	CFP-100G-SR10
Fan Tray 0	REV 08	740-031521	ACAF4219	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACAF4225	Enhanced Fan Tray


```

P/N:          740-013110      S/N:          QCS17025017
Assembly ID:  0x0416          Assembly Version: 01.03
Date:         01-10-2013      Assembly Flags:  0x00
Version:      Rev 03
ID: Power Distribution Module
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 16 01 03 52 65 76 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 31 33 31 31 30 00 00
  Address 0x20: 51 43 53 31 37 30 32 35 30 31 37 00 00 0a 01 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 0          Rev 10    740-027760    QCS1702N062    PS 4.1kW; 200-240V AC
in
Jedec Code:    0x7fb0          EEPROM Version:  0x01
P/N:          740-027760      S/N:          QCS1702N062
Assembly ID:   0x0430          Assembly Version: 01.10
Date:         01-15-2013      Assembly Flags:  0x00
Version:      Rev 10
ID: PS 4.1kW; 200-240V AC in  FRU Model Number: PWR-MX960-4100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 30 01 0a 52 65 76 20 31 30 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 32 37 37 36 30 00 00
  Address 0x20: 51 43 53 31 37 30 32 4e 30 36 32 00 00 0f 01 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
  Address 0x50: 57 52 2d 4d 58 39 36 30 2d 34 31 30 30 2d 41 43
  Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 1          Rev 04    740-027760    QCS1422N02C    PS 4.1kW; 200-240V AC
in
Jedec Code:    0x7fb0          EEPROM Version:  0x01
P/N:          740-027760      S/N:          QCS1422N02C
Assembly ID:   0x0430          Assembly Version: 01.04
Date:         06-04-2010      Assembly Flags:  0x00
Version:      Rev 04
ID: PS 4.1kW; 200-240V AC in  FRU Model Number: PWR-MX960-4100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 30 01 04 52 65 76 20 30 34 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 32 37 37 36 30 00 00
  Address 0x20: 51 43 53 31 34 32 32 4e 30 32 43 00 00 04 06 07
  Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
  Address 0x50: 57 52 2d 4d 58 39 36 30 2d 34 31 30 30 2d 41 43
  Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
PEM 2          Rev 09    740-027760    QCS1614N01X    PS 4.1kW; 200-240V AC
in
Jedec Code:    0x7fb0          EEPROM Version:  0x01
P/N:          740-027760      S/N:          QCS1614N01X
Assembly ID:   0x0430          Assembly Version: 01.09
Date:         04-07-2012      Assembly Flags:  0x00

```



```

Version:          Rev 09
ID: PS 4.1kW; 200-240V AC in    FRU Model Number: PWR-MX960-4100-AC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 04 30 01 09 52 65 76 20 30 39 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 32 37 37 36 30 00 00
  Address 0x20: 51 43 53 31 36 31 34 4e 30 31 58 00 00 07 04 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: 00 00 00 00 01 00 00 00 00 00 00 00 00 00 00 50
  Address 0x50: 57 52 2d 4d 58 39 36 30 2d 34 31 30 30 2d 41 43
  Address 0x60: 2d 53 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0 REV 08    740-031116    9009131803    RE-S-1800x4
Jedec Code: 0x7fb0        EEPROM Version: 0x02
P/N: 740-031116          S/N: 9009131803
Assembly ID: 0x09c0       Assembly Version: 01.08
Date: 03-04-2013         Assembly Flags: 0x00
Version: REV 08           CLEI Code: COUCASKBAA
ID: RE-S-1800x4           FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
  Address 0x00: 54 32 30 32 37 44 42 2d 34 34 47 42 23 42 23 00
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 09 c0 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00
  Address 0x20: 39 30 30 39 31 33 31 38 30 33 00 00 00 04 03 07
  Address 0x30: dd ff ff ff 54 32 30 32 37 44 42 2d 34 34 47 42
  Address 0x40: 23 42 23 00 01 43 4f 55 43 41 53 4b 42 41 41 52
  Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 59 ff ff ff ff ff ff ff ff ff ff ff ff
ad0 3831 MB UGB30SFA4000T1 SFA4000T1 000016CD Compact Flash
ad1 30533 MB UGB94BPH32H0S1-KCI 11000061346 Disk 1
usb0 (addr 1) EHCI root hub 0 Intel uhub0
usb0 (addr 2) product 0x0020 32 vendor 0x8087 uhub1
DIMM 0 VL31B5263F-F8SD DIE REV-0 PCB REV-0 MFR ID-ce80
DIMM 1 VL31B5263F-F8SD DIE REV-0 PCB REV-0 MFR ID-ce80
DIMM 2 VL31B5263F-F8SD DIE REV-0 PCB REV-0 MFR ID-ce80
DIMM 3 VL31B5263F-F8SD DIE REV-0 PCB REV-0 MFR ID-ce80
Routing Engine 1 REV 08    740-031116    9009124913    RE-S-1800x4
Jedec Code: 0x7fb0        EEPROM Version: 0x02
P/N: 740-031116          S/N: 9009124913
Assembly ID: 0x09c0       Assembly Version: 01.08
Date: 01-09-2013         Assembly Flags: 0x00
Version: REV 08           CLEI Code: COUCASKBAA
ID: RE-S-1800x4           FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
  Address 0x00: 54 32 30 32 37 44 42 2d 34 34 47 42 23 42 23 00
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 09 c0 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 33 31 31 31 36 00 00
  Address 0x20: 39 30 30 39 31 32 34 39 31 33 00 00 00 09 01 07
  Address 0x30: dd ff ff ff 54 32 30 32 37 44 42 2d 34 34 47 42
  Address 0x40: 23 42 23 00 01 43 4f 55 43 41 53 4b 42 41 41 52
  Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 59 ff ff ff ff ff ff ff ff ff ff ff ff
ad0 3831 MB UGB30SFA4000T1 SFA4000T1 0000106D Compact Flash
ad1 30533 MB UGB94BPH32H0S1-KCI 11000052402 Disk 1
CB 0 REV 18 750-031391 CABF0579 Enhanced MX SCB

```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-031391        S/N: CABF0579
Assembly ID: 0x09b0     Assembly Version: 01.18
Date: 04-15-2013       Assembly Flags: 0x00
Version: REV 18        CLEI Code: COUCASRBAA
ID: Enhanced MX SCB    FRU Model Number: SCBE-MX-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 b0 01 12 52 45 56 20 31 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 31 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 42 46 30 35 37 39 00 0f 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 43 41 53 52 42 41 41 53
Address 0x50: 43 42 45 2d 4d 58 2d 53 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 43 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 7d ff ff ff ff ff ff ff ff ff ff ff ff

CB 1      REV 16      750-031391      CAAZ2471      Enhanced MX SCB
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-031391        S/N: CAAZ2471
Assembly ID: 0x09b0     Assembly Version: 01.16
Date: 03-09-2013       Assembly Flags: 0x00
Version: REV 16        CLEI Code: COUCARCBAB
ID: Enhanced MX SCB    FRU Model Number: SCBE-MX-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 b0 01 10 52 45 56 20 31 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 31 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 41 5a 32 34 37 31 00 09 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 43 41 52 43 42 41 42 53
Address 0x50: 43 42 45 2d 4d 58 2d 53 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6d ff ff ff ff ff ff ff ff ff ff ff ff

CB 2      REV 16      750-031391      CAAW9595      Enhanced MX SCB
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-031391        S/N: CAAW9595
Assembly ID: 0x09b0     Assembly Version: 01.16
Date: 02-01-2013       Assembly Flags: 0x00
Version: REV 16        CLEI Code: COUCARCBAB
ID: Enhanced MX SCB    FRU Model Number: SCBE-MX-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 b0 01 10 52 45 56 20 31 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 31 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 41 57 39 35 39 35 00 01 02 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 43 41 52 43 42 41 42 53
Address 0x50: 43 42 45 2d 4d 58 2d 53 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 42 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 6d ff ff ff ff ff ff ff ff ff ff ff ff

FPC 0      REV 18      750-046005      CACE6574      MPC5E 3D Q 2CGE+4XGE
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-046005        S/N: CACE6574
Assembly ID: 0x0b8c     Assembly Version: 01.18
Date: 11-20-2013       Assembly Flags: 0x00
Version: REV 18        CLEI Code: PROTOXCLEI
ID: MPC5E 3D Q 2CGE+4XGE  FRU Model Number: PROTO-ASSEMBLY

```

```

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 8c 01 12 52 45 56 20 31 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 36 30 30 35 00 00
Address 0x20: 53 2f 4e 20 43 41 43 45 36 35 37 34 00 14 0b 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 09   711-045719   CACG8908           RMPC PMB
Jedec Code:  0x7fb0           EEPROM Version:  0x02
P/N:         711-045719       S/N:           CACG8908
Assembly ID: 0x0b85           Assembly Version: 01.09
Date:        11-13-2013      Assembly Flags: 0x00
Version:     REV 09
ID: RMPC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 85 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 35 37 31 39 00 00
Address 0x20: 53 2f 4e 20 43 41 43 47 38 39 30 38 00 0d 0b 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN          2X10GE SFPP OTN
Jedec Code:  0x0000           EEPROM Version:  0x00
P/N:         BUILTIN          S/N:           BUILTIN
Assembly ID: 0x0a90           Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 2X10GE SFPP OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 90 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 ae dc 00 00 00 00 0a 6e 00 00
Xcvr 0        REV 01   740-021308   AQA0DYT           SFP+-10G-SR
  Xcvr 1        REV 01   740-021308   AQG0MS7           SFP+-10G-SR
PIC 1          BUILTIN      BUILTIN          1X100GE CFP2 OTN
Jedec Code:  0x0000           EEPROM Version:  0x00
P/N:         BUILTIN          S/N:           BUILTIN
Assembly ID: 0x0a6e           Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 1X100GE CFP2 OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 6e 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00

```

```

Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 03 f3 8c 31 5c e7 80 00 00 00 02
Xcvr 0      REV 01  740-046563  XD16FC03Z      CFP2-100G-SR10
PIC 2      BUILTIN  BUILTIN      2X10GE SFPP OTN
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:      BUILTIN      S/N:      BUILTIN
Assembly ID: 0x0a90      Assembly Version: 00.00
Date:      00-00-0000      Assembly Flags: 0x00
ID: 2X10GE SFPP OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 90 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 03 f5 6c 31 5c db 40 00 00 00 02
Xcvr 0      REV 01  740-021308  ANA0NAJ      SFP+-10G-SR
Xcvr 1      REV 01  740-021308  AQGOMRQ      SFP+-10G-SR
PIC 3      BUILTIN  BUILTIN      1X100GE CFP2 OTN
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:      BUILTIN      S/N:      BUILTIN
Assembly ID: 0x0a6e      Assembly Version: 00.00
Date:      00-00-0000      Assembly Flags: 0x00
ID: 1X100GE CFP2 OTN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 6e 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 03 ed ec 31 5c e2 e8 00 00 00 02
Xcvr 0      REV 01  740-049775  J13K72993      CFP2-100G-LR4
FPC 1      REV 11  750-045372  CABK8154      MPCE Type 3 3D
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:      750-045372      S/N:      CABK8154
Assembly ID: 0x09db      Assembly Version: 04.11
Date:      05-18-2013      Assembly Flags: 0x00
Version:      REV 11      CLEI Code:      COUIBBNBAA
ID: MPCE Type 3 3D      FRU Model Number: MX-MPC3E-3D
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 db 04 0b 52 45 56 20 31 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 35 33 37 32 00 00
Address 0x20: 53 2f 4e 20 43 41 42 4b 38 31 35 34 00 12 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 42 4e 42 41 41 4d
Address 0x50: 58 2d 4d 50 43 33 45 2d 33 44 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 44 00 00 ff ff ff ff ff ff ff

```

```

Address 0x70: ff ff ff cf ff ff ff ff ff ff ff ff ff ff
CPU          REV 08   711-035209   CABE7370   HMPC PMB 2G
Jedec Code:  0x7fb0   EEPROM Version: 0x01
P/N:         711-035209   S/N:         CABE7370
Assembly ID: 0x0b04   Assembly Version: 01.08
Date:        05-08-2013   Assembly Flags: 0x00
Version:     REV 08
ID: HMPC PMB 2G
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 04 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 35 32 30 39 00 00
Address 0x20: 53 2f 4e 20 43 41 42 45 37 33 37 30 00 08 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
MIC 0        REV 07   750-033307   CABD5255   10X10GE SFPP
Jedec Code:  0x7fb0   EEPROM Version: 0x02
P/N:         750-033307   S/N:         CABD5255
Assembly ID: 0x0a2a   Assembly Version: 02.07
Date:        04-25-2013   Assembly Flags: 0x00
Version:     REV 07   CLEI Code:   COUIBBJBAA
ID: 10X10GE SFPP   FRU Model Number: MIC3-3D-10XGE-SFPP
Board Information Record:
Address 0x00: 34 01 03 03 05 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0a 2a 02 07 52 45 56 20 30 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 33 33 30 37 00 00
Address 0x20: 53 2f 4e 20 43 41 42 44 35 32 35 35 00 19 04 07
Address 0x30: dd ff ff ff 34 01 03 03 05 ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 42 4a 42 41 41 4d
Address 0x50: 49 43 33 2d 33 44 2d 31 30 58 47 45 2d 53 46 50
Address 0x60: 50 00 00 00 00 00 41 00 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 82 c0 03 f0 bc 57 79 83 80 00 00 00 02
PIC 0        BUILTIN   BUILTIN   10X10GE SFPP
Xcvr 0      REV 01   740-021308   AQ50319   SFP+-10G-SR
Xcvr 1      REV 01   740-021308   AQ5035V   SFP+-10G-SR
Xcvr 2      REV 01   740-021308   AQ502XJ   SFP+-10G-SR
Xcvr 3      REV 01   740-021308   AQ43HHR   SFP+-10G-SR
Xcvr 4      REV 01   740-021308   AQ502YA   SFP+-10G-SR
Xcvr 5      REV 01   740-021308   AQ502EU   SFP+-10G-SR
Xcvr 6      REV 01   740-021308   AQ502HR   SFP+-10G-SR
Xcvr 7      REV 01   740-021308   AQ502A6   SFP+-10G-SR
Xcvr 8      REV 01   740-021308   AQ43H8M   SFP+-10G-SR
MIC 1        REV 14   750-033196   CAAP1398   1X100GE CXP
Jedec Code:  0x7fb0   EEPROM Version: 0x02
P/N:         750-033196   S/N:         CAAP1398
Assembly ID: 0x0a29   Assembly Version: 03.14
Date:        10-27-2012   Assembly Flags: 0x00
Version:     REV 14   CLEI Code:   COUIBBKBAA
ID: 1X100GE CXP   FRU Model Number: MIC3-3D-1X100GE-CXP
Board Information Record:
Address 0x00: 34 01 07 07 08 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0a 29 03 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 33 31 39 36 00 00
Address 0x20: 53 2f 4e 20 43 41 41 50 31 33 39 38 00 1b 0a 07

```

```

Address 0x30: dc ff ff ff 34 01 07 07 08 ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 42 4b 42 41 41 4d
Address 0x50: 49 43 33 2d 33 44 2d 31 58 31 30 30 47 45 2d 43
Address 0x60: 58 50 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 96 c0 03 ef cc 57 79 85 08 00 00 00 02
PIC 2          BUILTIN          BUILTIN          1X100GE CXP
Xcvr 0        REV 01        740-046563    XD16FC064        CFP2-100G-SR10
FPC 3         REV 35        750-028467    CAAT9156          MPC 3D 16x 10GE
Jedec Code:   0x7fb0          EEPROM Version:   0x01
P/N:          750-028467      S/N:          CAAT9156
Assembly ID:  0x0997          Assembly Version: 01.35
Date:         12-17-2012      Assembly Flags: 0x00
Version:      REV 35
ID: MPC 3D 16x 10GE          FRU Model Number: MPC-3D-16XGE-SFPP
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 09 97 01 23 52 45 56 20 33 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 32 38 34 36 37 00 00
Address 0x20: 53 2f 4e 20 43 41 41 54 39 31 35 36 00 11 0c 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00 4d
Address 0x50: 50 43 2d 33 44 2d 31 36 58 47 45 2d 53 46 50 50
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 11        711-029089    CAAV4645          AMPC PMB
Jedec Code:   0x7fb0          EEPROM Version:   0x01
P/N:          711-029089      S/N:          CAAV4645
Assembly ID:  0x0998          Assembly Version: 01.11
Date:         12-13-2012      Assembly Flags: 0x00
Version:      REV 11
ID: AMPC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 09 98 01 0b 52 45 56 20 31 31 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 32 39 30 38 39 00 00
Address 0x20: 53 2f 4e 20 43 41 41 56 34 36 34 35 00 0d 0c 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          4x 10GE(LAN) SFP+
Jedec Code:   0x0000          EEPROM Version:   0x00
P/N:          BUILTIN          S/N:          BUILTIN
Assembly ID:  0x02fe          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags: 0x00
ID: 4x 10GE(LAN) SFP+
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 02 fe 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 6b 94 00 00 00 00 02 fe 00 00

```

```

Xcvr 0      REV 01  740-021308  AQ43HZ1      SFP+-10G-SR
Xcvr 1      REV 01  740-021308  AQ43HZC      SFP+-10G-SR
Xcvr 2      REV 01  740-021308  AQ43HD2      SFP+-10G-SR
Xcvr 3      REV 01  740-021308  AQ502HN      SFP+-10G-SR
PIC 1              BUILTIN      BUILTIN      4x 10GE(LAN) SFP+
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN      S/N:         BUILTIN
Assembly ID: 0x02fe      Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 4x 10GE(LAN) SFP+
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 02 fe 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 ac 0c 00 00 00 00 02 fe 00 00
Xcvr 0      REV 01  740-021308  AQ43HGF      SFP+-10G-SR
Xcvr 1      REV 01  740-021308  AQ501RZ      SFP+-10G-SR
Xcvr 2      REV 01  740-021308  AQ5029V      SFP+-10G-SR
Xcvr 3      REV 01  740-021308  AQ501X9      SFP+-10G-SR
PIC 2              BUILTIN      BUILTIN      4x 10GE(LAN) SFP+
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN      S/N:         BUILTIN
Assembly ID: 0x02fe      Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
.....

```

show chassis hardware models (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware models
```

```

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 01   710-030012  ACAX3674      CHAS-BP-MX960-S
FPM Board     REV 03   710-014974  CAAZ9326      CRAFT-MX960-S
PEM 0         Rev 10   740-027760  QCS1702N062   PWR-MX960-4100-AC-S
PEM 1         Rev 04   740-027760  QCS1422N02C   PWR-MX960-4100-AC-S
PEM 2         Rev 09   740-027760  QCS1614N01X   PWR-MX960-4100-AC-S
Routing Engine 0 REV 08   740-031116  9009131803    RE-S-1800X4-16G-S
Routing Engine 1 REV 08   740-031116  9009124913    RE-S-1800X4-16G-S
CB 0          REV 18   750-031391  CABF0579      SCBE-MX-S
CB 1          REV 16   750-031391  CAAZ2471      SCBE-MX-S
CB 2          REV 16   750-031391  CAAW9595      SCBE-MX-S
FPC 0         REV 18   750-046005  CACE6574      PROTO-ASSEMBLY
FPC 1         REV 11   750-045372  CABK8154      MX-MPC3E-3D
  MIC 0       REV 07   750-033307  CABD5255      MIC3-3D-10XGE-SFPP
  MIC 1       REV 14   750-033196  CAAP1398      MIC3-3D-1X100GE-CXP
FPC 3         REV 35   750-028467  CAAT9156      MPC-3D-16XGE-SFPP
FPC 4         REV 18   750-046005  CACE6568      PROTO-ASSEMBLY
FPC 5         REV 18   750-046005  CACE6577      PROTO-ASSEMBLY
FPC 7         REV 09   750-037355  CAAF0937      MPC4E-2CGE-8XGE
FPC 8         REV 39   750-045715  CACD1903      PROTO-ASSEMBLY
FPC 9         REV 05   750-044444  CAAY9801      MX-MPC2E-3D-P
  MIC 0       REV 28   750-028387  CAAX1071      MIC-3D-4XGE-XFP
FPC 10        REV 21.0.11 750-045715  CAAY3541      PROTO-ASSEMBLY

```

FPC 11	REV 17	750-037355	CAAT3986	MPC4E-3D-2CGE-8XGE
Fan Tray 0	REV 08	740-031521	ACAF4219	FFANTRAY-MX960-HC-S
Fan Tray 1	REV 08	740-031521	ACAF4225	FFANTRAY-MX960-HC-S

show chassis hardware clei-models (MX960 Router with MPC5EQ)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-030012	COM8T00CRB	CHAS-BP-MX960-S
FPM Board	REV 03	710-014974		CRAFT-MX960-S
PEM 0	Rev 10	740-027760		PWR-MX960-4100-AC-S
PEM 1	Rev 04	740-027760		PWR-MX960-4100-AC-S
PEM 2	Rev 09	740-027760		PWR-MX960-4100-AC-S
Routing Engine 0	REV 08	740-031116	COUCASKBAA	RE-S-1800X4-16G-S
Routing Engine 1	REV 08	740-031116	COUCASKBAA	RE-S-1800X4-16G-S
CB 0	REV 18	750-031391	COUCASRBAA	SCBE-MX-S
CB 1	REV 16	750-031391	COUCARCBAB	SCBE-MX-S
CB 2	REV 16	750-031391	COUCARCBAB	SCBE-MX-S
FPC 0	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 1	REV 11	750-045372	COUIBBNBAA	MX-MPC3E-3D
MIC 0	REV 07	750-033307	COUIBBJBAA	MIC3-3D-10XGE-SFPP
MIC 1	REV 14	750-033196	COUIBBKBAA	MIC3-3D-1X100GE-CXP
FPC 3	REV 35	750-028467		MPC-3D-16XGE-SFPP
FPC 4	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 5	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 7	REV 09	750-037355	PROTOXCLEI	MPC4E-2CGE-8XGE
FPC 8	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 9	REV 05	750-044444	COUIBBGBAA	MX-MPC2E-3D-P
MIC 0	REV 28	750-028387	COUIA16BAA	MIC-3D-4XGE-XFP
FPC 10	REV 21.0.11	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 11	REV 17	750-037355	IPU3A4DHAA	MPC4E-3D-2CGE-8XGE
Fan Tray 0	REV 08	740-031521		FFANTRAY-MX960-HC-S
Fan Tray 1	REV 08	740-031521		FFANTRAY-MX960-HC-S

show chassis hardware (MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN123F6D9AFA	MX960
Midplane	REV 04	750-047849	ACRC8764	Enhanced MX960 Backplane
FPM Board	REV 03	710-014974	CACS4395	Front Panel Display
PDM	Rev 03	740-013110	QCS1809500Z	Power Distribution Module
PEM 0	Rev 08	740-029344	QCS1817V0LK	DC 4.1kW Power Entry
Module				
PEM 1	Rev 08	740-029344	QCS1814V01F	DC 4.1kW Power Entry
Module				
PEM 2	Rev 08	740-029344	QCS1810V1EW	DC 4.1kW Power Entry
Module				
PEM 3	Rev 08	740-029344	QCS1810V1K5	DC 4.1kW Power Entry
Module				
Routing Engine 0	REV 11	740-031116	9013103483	RE-S-1800x4
Routing Engine 1	REV 10	740-031116	9009198513	RE-S-1800x4
CB 0	REV 23	750-031391	CADW3218	Enhanced MX SCB
CB 1	REV 14	750-031391	ABBK5220	Enhanced MX SCB
FPC 1	REV 14	750-045372	CADK0464	MPCE Type 3 3D

CPU	REV 10	711-035209	CADM9839	HMPC PMB 2G
MIC 0	REV 19	750-033199	CAAE5870	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	UTHOHOW	CFP-100G-LR4
FPC 2	REV 14	750-045372	CADN3262	MPCE Type 3 3D
CPU	REV 10	711-035209	CADN8129	HMPC PMB 2G
FPC 3	REV 14	750-045372	CADH0146	MPCE Type 3 3D
CPU	REV 10	711-035209	CADT2458	HMPC PMB 2G
MIC 0	REV 03	750-057666	CADP1386	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	SMD5136.1	OTN-100G-LH
FPC 4	REV 18	750-045372	CAEV5668	MPCE Type 3 3D
CPU	REV 10	711-035209	CAET7827	HMPC PMB 2G
FPC 7	REV 14	750-045372	CADJ1947	MPCE Type 3 3D
CPU	REV 10	711-035209	CADJ1561	HMPC PMB 2G
MIC 0	REV 05	750-057666	CAEB5763	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	1DJBZ052002	OTN-100G-LH
FPC 8	REV 14	750-045372	CADK0485	MPCE Type 3 3D
CPU	REV 10	711-035209	CADM9828	HMPC PMB 2G
MIC 0	REV 03	750-057666	CADP1390	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
FPC 9	REV 14	750-045372	CADJ1936	MPCE Type 3 3D
CPU	REV 10	711-035209	CADJ1566	HMPC PMB 2G
MIC 0	REV 14	750-057666	CAFF7544	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	1DJBZ05100K	OTN-100G-LH
FPC 10	REV 14	750-054901	CADJ3846	MPC3E NG HQoS
CPU	REV 11	711-045719	CADN5471	RMPC PMB
MIC 0	REV 05	750-057666	CAEB5760	1X100GE DWDM CFP2-ACO
PIC 0		BUILTIN	BUILTIN	1X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	SMD5091.1	CFP-Loopback
Fan Tray 0	REV 08	740-031521	ACDB4083	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACDB3995	Enhanced Fan Tray

show chassis hardware clei-models(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	750-047849	CMMJA10BRA	CHAS-BP3-MX960-S
FPM Board	REV 03	710-014974		CRAFT-MX960-S
PEM 0	Rev 08	740-029344		PWR-MX960-4100-DC-S
PEM 1	Rev 08	740-029344		PWR-MX960-4100-DC-S
PEM 2	Rev 08	740-029344		PWR-MX960-4100-DC-S
PEM 3	Rev 08	740-029344		PWR-MX960-4100-DC-S
Routing Engine 0	REV 11	740-031116	COUCASYBAB	RE-S-1800X4-16G-S
Routing Engine 1	REV 10	740-031116	COUCASYBAA	RE-S-1800X4-16G-S
CB 0	REV 23	750-031391	COUCATXBAA	SCBE-MX-S
CB 1	REV 14	750-031391	COUCARCBA	SCBE-MX-S
FPC 1	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
MIC 0	REV 19	750-033199	COUIBA8BAA	MIC3-3D-1X100GE-CFP
FPC 2	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
FPC 3	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
MIC 0	REV 03	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
FPC 4	REV 18	750-045372	COUIBBNBAC	MX-MPC3E-3D
FPC 7	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
MIC 0	REV 05	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
FPC 8	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D

MIC 0	REV 03	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
FPC 9	REV 14	750-045372	COUIBBNBAB	MX-MPC3E-3D
MIC 0	REV 14	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
FPC 10	REV 14	750-054901	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 05	750-057666	PROTOXCLEI	PROTO-ASSEMBLY
Fan Tray 0	REV 08	740-031521		FFANTRAY-MX960-HC-S
Fan Tray 1	REV 08	740-031521		FFANTRAY-MX960-HC-S

show chassis hardware (MX10008 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			DE487	JNP10008 [MX10008]
Midplane	REV 27	750-054097	ACPD4307	Midplane 8
Routing Engine 0		BUILTIN	BUILTIN	RE X10 LT
Routing Engine 1		BUILTIN	BUILTIN	RE X10
CB 0	REV 02	750-079563	CAFF4580	Control Board
CB 1	REV 04	750-079563	CAGL8034	Control Board
...				
...				
...				
4				
FPC 3	REV 04	750-084779	CAKR7019	JNP10K-LC2101
CPU	REV 05	750-073391	CAKJ2854	LC 2101 PMB
PIC 0		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-058734	1ACQ104300K	QSFP-100GBASE-SR4
PIC 1		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-061405	1ACQ12110AN	QSFP-100GBASE-SR4
PIC 2		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-046565	QG1105B2	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-045627	QH08036X	40GBASE eSR4
PIC 4		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-067443	XWRORY7	QSFP+-40G-SR4
Xcvr 1	REV 01	740-067443	XWRORYH	QSFP+-40G-SR4
Xcvr 2	REV 01	740-067443	XWRORYP	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XWS028S	QSFP+-40G-SR4
PIC 5		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 3	REV 01	740-058734	1ACQ113406C	QSFP-100GBASE-SR4
FPD Board	REV 07	711-054687	ACPC7142	Front Panel Display
PEM 0	REV 02	740-049388	1EDL62102N9	Power Supply AC
PEM 1	REV 02	740-049388	1EDL60300KX	Power Supply AC
PEM 2	REV 02	740-049388	1EDL60300DL	Power Supply AC
PEM 3	REV 02	740-049388	1EDL61701BT	Power Supply AC
PEM 4	REV 02	740-049388	1EDL62102P7	Power Supply AC
PEM 5	REV 02	740-049388	1EDL62102PP	Power Supply AC
FTC 0	REV 14	750-050108	ACPE4038	Fan Controller 8
FTC 1	REV 14	750-050108	ACPE4032	Fan Controller 8
Fan Tray 0	REV 09	760-054372	ACPD6799	Fan Tray 8
Fan Tray 1	REV 09	760-054372	ACNZ3584	Fan Tray 8
SFB 0	REV 24	750-050058	ACPD4587	Switch Fabric (SIB) 8
SFB 1	REV 24	750-050058	ACNZ0635	Switch Fabric (SIB) 8
SFB 2	REV 24	750-050058	ACPD4908	Switch Fabric (SIB) 8
SFB 3	REV 24	750-050058	ACNZ0617	Switch Fabric (SIB) 8
SFB 4	REV 24	750-050058	ACNZ0527	Switch Fabric (SIB) 8
SFB 5	REV 23	750-050058	ACNX6980	Switch Fabric (SIB) 8

show chassis hardware clei-models (MX10008 Router)

user@host> show chassis hardware clei-models

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 27	750-054097	CMMUM00ARA	QFX10008-CHAS
CB 0	REV 02	750-079563		
CB 1	REV 04	750-079563		
FPC 0	REV 12	750-073174	PROTOXCLEI	PROTO-ASSEMBLY
FPC 2	REV 03	750-073174	PROTOXCLEI	PROTO-ASSEMBLY
FPC 3	REV 04	750-084779	PROTOXCLEI	PROTO-ASSEMBLY
FPD Board	REV 07	711-054687		
PEM 0	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 1	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 2	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 3	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 4	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
PEM 5	REV 02	740-049388	CMUPADNBAA	QFX10000-PWR-AC
FTC 0	REV 14	750-050108	CMUCAHZCAA	QFX10008-FAN-CTRL
FTC 1	REV 14	750-050108	CMUCAHZCAA	QFX10008-FAN-CTRL
Fan Tray 0	REV 09	760-054372	CMUCAHYCAA	QFX10008-FAN
Fan Tray 1	REV 09	760-054372	CMUCAHYCAA	QFX10008-FAN
SFB 0	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 1	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 2	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 3	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 4	REV 24	750-050058	CMUCAHOCOA	QFX10008-SF
SFB 5	REV 23	750-050058	CMUCAHOCOA	QFX10008-SF

show chassis hardware detail (MX10008 Router)

user@host> show chassis hardware detail

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			DE487	JNP10008 [MX10008]
Midplane	REV 27	750-054097	ACPD4307	Midplane 8
Routing Engine 0		BUILTIN	BUILTIN	RE X10 LT
vtbd0 17408 MB				Virtio Block Disk
vtbd1 57344 MB				Virtio Block Disk
vtbd2 12288 MB				Virtio Block Disk
ada0 128 MB QEMU			QM00002	Virtio Block Disk
usb0 (addr 0.1) XHCI root HUB 0			0x8086	uhub0
Routing Engine 1		BUILTIN	BUILTIN	RE X10
vtbd0 17408 MB				Virtio Block Disk
vtbd1 57344 MB				Virtio Block Disk
vtbd2 12288 MB				Virtio Block Disk
ada0 128 MB QEMU			QM00002	Virtio Block Disk
usb0 (addr 0.1) XHCI root HUB 0			0x8086	uhub0
CB 0	REV 02	750-079563	CAFF4580	Control Board
CB 1	REV 04	750-079563	CAGL8034	Control Board
FPC 0	REV 12	750-073174	CAJK0253	JNP10K-LC2102
CPU	REV 04	750-073391	CAKJ0761	LC 2101 PMB
PIC 0		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-054053	QF4807XH	QSFP+-4X10G-SR
Xcvr 1	REV 01	740-046565	QF121734	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XWS027R	QSFP+-40G-SR4
PIC 1		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-045627	QH080366	40GBASE eSR4

Xcvr 1	REV 01	740-054053	XYJ0A4P	QSFP+-4X10G-SR
PIC 2		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-058734	1ACQ113404E	QSFP-100GBASE-SR4
PIC 3		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-058734	1ACQ1041018	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-067443	XWS08JK	QSFP+-40G-SR4
Xcvr 2	REV 01	740-032986	QF340C63	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XWS08JL	QSFP+-40G-SR4
PIC 4		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0		NON-JNPR	37700171YY0083	QSFP-100GBASE-LR4
PIC 5		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-032986	QE201294	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QH0603VK	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD510321	QSFP+-40G-SR4
Xcvr 3	REV 01	740-054053	QF3208KP	QSFP+-4X10G-SR
FPC 2	REV 03	750-073174	CAJB6004	JNP10K-LC2102
CPU	REV 01	750-073391	CAHM7956	LC 2101 PMB
PIC 0		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-061405	1ACQ12110JK	QSFP-100GBASE-SR4
PIC 1		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-046565	XYH0P6F	QSFP+-40G-SR4
PIC 2		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-067442	XX401TT	QSFP+-40G-SR4
Xcvr 1	REV 01	740-067443	XV3002D	QSFP+-40G-SR4
Xcvr 2	REV 01	740-067442	XX401SL	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XV30A78	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-067442	XX401T2	QSFP+-40G-SR4
Xcvr 1	REV 01	740-067442	XX401SZ	QSFP+-40G-SR4
PIC 4		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-061405	1ACQ12110JS	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-061405	1ACQ12110JP	QSFP-100GBASE-SR4
Xcvr 2	REV 01	740-061405	1ACQ12110JQ	QSFP-100GBASE-SR4
Xcvr 3	REV 01	740-061405	1ACQ121109R	QSFP-100GBASE-SR4
PIC 5		BUILTIN	BUILTIN	4xQSFP28 MACSEC
Xcvr 0	REV 01	740-061405	1ACQ121109P	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-061405	1ACQ12110JC	QSFP-100GBASE-SR4
FPC 3	REV 04	750-084779	CAKR7019	JNP10K-LC2101
CPU	REV 05	750-073391	CAKJ2854	LC 2101 PMB
PIC 0		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-058734	1ACQ104300K	QSFP-100GBASE-SR4
PIC 1		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-061405	1ACQ12110AN	QSFP-100GBASE-SR4
PIC 2		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-046565	QG1105B2	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-045627	QH08036X	40GBASE eSR4
PIC 4		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-067443	XWRORY7	QSFP+-40G-SR4
Xcvr 1	REV 01	740-067443	XWRORYH	QSFP+-40G-SR4
Xcvr 2	REV 01	740-067443	XWRORYP	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XWS028S	QSFP+-40G-SR4
PIC 5		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 3	REV 01	740-058734	1ACQ113406C	QSFP-100GBASE-SR4
FPD Board	REV 07	711-054687	ACPC7142	Front Panel Display
PEM 0	REV 02	740-049388	1EDL62102N9	Power Supply AC
PEM 1	REV 02	740-049388	1EDL60300KX	Power Supply AC
PEM 2	REV 02	740-049388	1EDL60300DL	Power Supply AC
PEM 3	REV 02	740-049388	1EDL61701BT	Power Supply AC
PEM 4	REV 02	740-049388	1EDL62102P7	Power Supply AC

PEM 5	REV 02	740-049388	1EDL62102PP	Power Supply AC
FTC 0	REV 14	750-050108	ACPE4038	Fan Controller 8
FTC 1	REV 14	750-050108	ACPE4032	Fan Controller 8
Fan Tray 0	REV 09	760-054372	ACPD6799	Fan Tray 8
Fan Tray 1	REV 09	760-054372	ACNZ3584	Fan Tray 8
SFB 0	REV 24	750-050058	ACPD4587	Switch Fabric (SIB) 8
SFB 1	REV 24	750-050058	ACNZ0635	Switch Fabric (SIB) 8
SFB 2	REV 24	750-050058	ACPD4908	Switch Fabric (SIB) 8
SFB 3	REV 24	750-050058	ACNZ0617	Switch Fabric (SIB) 8
SFB 4	REV 24	750-050058	ACNZ0527	Switch Fabric (SIB) 8
SFB 5	REV 23	750-050058	ACNX6980	Switch Fabric (SIB) 8

show chassis hardware extensive(MX10008 Router)

```
user@host> show chassis hardware extensive
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			DE487	JNP10008 [MX10008]

Jedec Code:	0x7fb0	EEPROM Version:	0x02
		S/N:	DE487
Assembly ID:	0x0566	Assembly Version:	01.27
Date:	08-08-2016	Assembly Flags:	0x00
		CLEI Code:	CMMUM00ARA
ID: JNP10008		FRU Model Number:	QFX10008-CHAS

Board Information Record:

Address 0x00: ad 01 08 00 30 b6 4f e9 74 c4 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 66 01 1b 00 45 56 20 32 37 00 00
 Address 0x10: 00 00 00 00 00 35 30 2d 30 35 34 30 39 37 00 00
 Address 0x20: 44 45 34 38 37 00 00 00 00 00 00 00 00 08 08 07
 Address 0x30: e0 ff ff ff ad 01 08 00 30 b6 4f e9 74 c4 ff ff
 Address 0x40: ff ff ff ff 01 43 4d 4d 55 4d 30 30 41 52 41 51
 Address 0x50: 46 58 31 30 30 30 38 2d 43 48 41 53 00 00 00 00
 Address 0x60: 00 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff
 Address 0x70: ff ff ff 63 44 45 34 38 37 00 00 00 00 00 00 00

Midplane	REV 27	750-054097	ACPD4307	Midplane 8
----------	--------	------------	----------	------------

Jedec Code:	0x7fb0	EEPROM Version:	0x02
P/N:	750-054097	S/N:	ACPD4307
Assembly ID:	0x0be3	Assembly Version:	01.27
Date:	08-08-2016	Assembly Flags:	0x00
Version:	REV 27	CLEI Code:	CMMUM00ARA
ID: Midplane 8		FRU Model Number:	QFX10008-CHAS

Board Information Record:

Address 0x00: ad 01 08 00 30 b6 4f e9 74 c4 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 0b e3 01 1b 52 45 56 20 32 37 00 00
 Address 0x10: 00 00 00 00 37 35 30 2d 30 35 34 30 39 37 00 00
 Address 0x20: 53 2f 4e 20 41 43 50 44 34 33 30 37 00 08 08 07
 Address 0x30: e0 ff ff ff ad 01 08 00 30 b6 4f e9 74 c4 ff ff
 Address 0x40: ff ff ff ff 01 43 4d 4d 55 4d 30 30 41 52 41 51
 Address 0x50: 46 58 31 30 30 30 38 2d 43 48 41 53 00 00 00 00
 Address 0x60: 00 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff
 Address 0x70: ff ff ff 63 44 45 34 38 37 00 00 00 00 00 00 00

Routing Engine 0	BUILTIN	BUILTIN	RE X10 LT
vtbd0 17408 MB			Virtio Block Disk
vtbd1 57344 MB			Virtio Block Disk
vtbd2 12288 MB			Virtio Block Disk
ada0 128 MB QEMU		QM00002	Virtio Block Disk
usb0 (addr 0.1) XHCI root HUB 0		0x8086	uhub0

```

Routing Engine 1          BUILTIN          BUILTIN          RE X10
vtbd0 17408 MB           Virtio Block Disk
vtbd1 57344 MB           Virtio Block Disk
vtbd2 12288 MB           Virtio Block Disk
ada0 128 MB QEMU          QM00002          Virtio Block Disk
usb0 (addr 0.1) XHCI root HUB 0 0x8086      uhub0
CB 0          REV 02 750-079563 CAFF4580      Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x01
P/N: 750-079563          S/N: CAFF4580
Assembly ID: 0x0ca3          Assembly Version: 01.02
Date: 06-06-2016          Assembly Flags: 0x00
Version: REV 02
ID: Control Board
Board Information Record:
Address 0x00: ad 01 00 40 4c 16 fc 91 7c 85 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 fe 0c a3 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 39 35 36 33 00 00
Address 0x20: 53 2f 4e 20 43 41 46 46 34 35 38 30 00 06 06 07
Address 0x30: e0 fe ff ff ad 01 00 40 4c 16 fc 91 7c 85 ff ff
Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
CB 1          REV 04 750-079563 CAGL8034      Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x01
P/N: 750-079563          S/N: CAGL8034
Assembly ID: 0x0ca3          Assembly Version: 01.04
Date: 06-28-2018          Assembly Flags: 0x00
Version: REV 04
ID: Control Board
Board Information Record:
Address 0x00: ad 01 00 40 4c 16 fc 91 7c c5 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 fe 0c a3 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 39 35 36 33 00 00
Address 0x20: 53 2f 4e 20 43 41 47 4c 38 30 33 34 00 1c 06 07
Address 0x30: e2 fc ff ff ad 01 00 40 4c 16 fc 91 7c c5 ff ff
Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPC 0          REV 12 750-073174 CAJK0253      JNP10K-LC2102
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-073174          S/N: CAJK0253
Assembly ID: 0x0ca5          Assembly Version: 01.12
Date: 09-28-2017          Assembly Flags: 0x00
Version: REV 12          CLEI Code: PROTOXCLEI
ID: JNP10K-LC2102          FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c a5 01 0c 52 45 56 20 31 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 31 37 34 00 00
Address 0x20: 53 2f 4e 20 43 41 4a 4b 30 32 35 33 00 1c 09 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

```

```

CPU          REV 04   750-073391   CAKJ0761   LC 2101 PMB
Jedec Code:  0x7fb0   EEPROM Version: 0x02
P/N:         750-073391 S/N:         CAKJ0761
Assembly ID: 0x0cda   Assembly Version: 01.04
Date:        01-22-2018 Assembly Flags: 0x00
Version:     REV 04
ID: LC 2101 PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c da 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 4b 4a 30 37 36 31 00 16 01 07
Address 0x30: e2 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code:    0x0000   EEPROM Version: 0x00
P/N:          BUILTIN   S/N:          BUILTIN
Assembly ID:   0x0af1   Assembly Version: 00.00
Date:         00-00-0000 Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 00 d1 f1 00 00 00 00 0a f1 00 00
Xcvr 0        REV 01   740-054053   QF4807XH   QSFP+-4X10G-SR
Xcvr 1        REV 01   740-046565   QF121734   QSFP+-40G-SR4
Xcvr 3        REV 01   740-067443   XWS027R    QSFP+-40G-SR4
PIC 1          BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code:    0x0000   EEPROM Version: 0x00
P/N:          BUILTIN   S/N:          BUILTIN
Assembly ID:   0x0af1   Assembly Version: 00.00
Date:         00-00-0000 Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 b1 f3 00 00 00 00 0a f1 00 00
Xcvr 0        REV 01   740-045627   QH080366   40GBASE eSR4
Xcvr 1        REV 01   740-054053   XYJ0A4P    QSFP+-4X10G-SR
PIC 2          BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code:    0x0000   EEPROM Version: 0x00
P/N:          BUILTIN   S/N:          BUILTIN

```

```

Assembly ID: 0x0af1          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 73 e8 00 00 00 00 00 00 00 00
Xcvr 0          REV 01      740-058734      1ACQ113404E      QSFP-100GBASE-SR4
PIC 3           BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN              S/N: BUILTIN
Assembly ID: 0x0af1          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 51 ea 00 00 00 00 0a f1 00 00
Xcvr 0          REV 01      740-058734      1ACQ1041018      QSFP-100GBASE-SR4
Xcvr 1          REV 01      740-067443      XWS08JK          QSFP+-40G-SR4
Xcvr 2          REV 01      740-032986      QF340C63         QSFP+-40G-SR4
Xcvr 3          REV 01      740-067443      XWS08JL          QSFP+-40G-SR4
PIC 4           BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN              S/N: BUILTIN
Assembly ID: 0x0af1          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 31 ec 00 00 00 00 0a f1 00 00
Xcvr 0          NON-JNPR    37700171YY0083      QSFP-100GBASE-LR4
PIC 5           BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN              S/N: BUILTIN
Assembly ID: 0x0af1          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC

```



```

Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 11 ee 00 00 00 00 0a f1 00 00
Xcvr 0      REV 01  740-032986  QE201294      QSFP+-40G-SR4
Xcvr 1      REV 01  740-046565  QH0603VK      QSFP+-40G-SR4
Xcvr 2      REV 01  740-046565  QD510321      QSFP+-40G-SR4
Xcvr 3      REV 01  740-054053  QF3208KP      QSFP+-4X10G-SR
FPC 2       REV 03  750-073174  CAJB6004      JNP10K-LC2102
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:        750-073174  S/N:          CAJB6004
Assembly ID: 0x0ca5     Assembly Version: 01.03
Date:       06-20-2017  Assembly Flags: 0x00
Version:    REV 03     CLEI Code:    PROTOXCLEI
ID: JNP10K-LC2102     FRU Model Number: PROTO-ASSEMBLY

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c a5 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 31 37 34 00 00
Address 0x20: 53 2f 4e 20 43 41 4a 42 36 30 30 34 00 14 06 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 01  750-073391  CAHM7956      LC 2101 PMB
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:        750-073391  S/N:          CAHM7956
Assembly ID: 0x0cda     Assembly Version: 01.01
Date:       05-08-2017  Assembly Flags: 0x00
Version:    REV 01
ID: LC 2101 PMB

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c da 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 48 4d 37 39 35 36 00 08 05 07
Address 0x30: e1 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0       BUILTIN      BUILTIN      4xQSFP28 MACSEC
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:        BUILTIN     S/N:          BUILTIN
Assembly ID: 0x0af1     Assembly Version: 00.00
Date:       00-00-0000  Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC

Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:

```

```

Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 00 d1 f1 00 00 00 00 0a f1 00 00
Xcvr 0      REV 01    740-061405    1ACQ12110JK    QSFP-100GBASE-SR4
PIC 1      BUILTIN    BUILTIN    4xQSFP28 MACSEC
Jedec Code: 0x0000    EEPROM Version: 0x00
P/N:        BUILTIN    S/N:        BUILTIN
Assembly ID: 0x0af1    Assembly Version: 00.00
Date:       00-00-0000    Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 b1 f3 00 00 00 00 0a f1 00 00
Xcvr 0      REV 01    740-046565    XYH0P6F    QSFP+-40G-SR4
PIC 2      BUILTIN    BUILTIN    4xQSFP28 MACSEC
Jedec Code: 0x0000    EEPROM Version: 0x00
P/N:        BUILTIN    S/N:        BUILTIN
Assembly ID: 0x0af1    Assembly Version: 00.00
Date:       00-00-0000    Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 73 e8 00 00 00 00 00 00 00 00
Xcvr 0      REV 01    740-067442    XX401TT    QSFP+-40G-SR4
Xcvr 1      REV 01    740-067443    XV3002D    QSFP+-40G-SR4
Xcvr 2      REV 01    740-067442    XX401SL    QSFP+-40G-SR4
Xcvr 3      REV 01    740-067443    XV30A78    QSFP+-40G-SR4
PIC 3      BUILTIN    BUILTIN    4xQSFP28 MACSEC
Jedec Code: 0x0000    EEPROM Version: 0x00
P/N:        BUILTIN    S/N:        BUILTIN
Assembly ID: 0x0af1    Assembly Version: 00.00
Date:       00-00-0000    Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00

```

```

Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 51 ea 00 00 00 00 0a f1 00 00
  Xcvr 0      REV 01  740-067442  XX401T2      QSFP+-40G-SR4
  Xcvr 1      REV 01  740-067442  XX401SZ      QSFP+-40G-SR4
PIC 4        BUILTIN  BUILTIN      4xQSFP28 MACSEC
Jedec Code:  0x0000      EEPROM Version:  0x00
P/N:         BUILTIN      S/N:         BUILTIN
Assembly ID: 0x0af1      Assembly Version: 00.00
Date:        00-00-0000   Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 31 ec 00 00 00 00 0a f1 00 00
  Xcvr 0      REV 01  740-061405  1ACQ12110JS  QSFP-100GBASE-SR4
  Xcvr 1      REV 01  740-061405  1ACQ12110JP  QSFP-100GBASE-SR4
  Xcvr 2      REV 01  740-061405  1ACQ12110JQ  QSFP-100GBASE-SR4
  Xcvr 3      REV 01  740-061405  1ACQ121109R  QSFP-100GBASE-SR4
PIC 5        BUILTIN  BUILTIN      4xQSFP28 MACSEC
Jedec Code:  0x0000      EEPROM Version:  0x00
P/N:         BUILTIN      S/N:         BUILTIN
Assembly ID: 0x0af1      Assembly Version: 00.00
Date:        00-00-0000   Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE MACSec PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f1 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 80 11 ee 00 00 00 00 0a f1 00 00
  Xcvr 0      REV 01  740-061405  1ACQ121109P  QSFP-100GBASE-SR4
  Xcvr 1      REV 01  740-061405  1ACQ12110JC  QSFP-100GBASE-SR4
FPC 3        REV 04  750-084779  CAKR7019     JNP10K-LC2101
Jedec Code:  0x7fb0      EEPROM Version:  0x02
P/N:         750-084779   S/N:         CAKR7019
Assembly ID: 0x0cff      Assembly Version: 01.04
Date:        03-11-2018   Assembly Flags: 0x00
Version:     REV 04      CLEI Code:    PROTOXCLEI
ID: JNP10K-LC2101      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c ff 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 38 34 37 37 39 00 00
Address 0x20: 53 2f 4e 20 43 41 4b 52 37 30 31 39 00 0b 03 07

```

```

Address 0x30: e2 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 05    750-073391    CAKJ2854          LC 2101 PMB
Jedec Code:  0x7fb0          EEPROM Version:  0x01
P/N:         750-073391      S/N:         CAKJ2854
Assembly ID: 0x0cda          Assembly Version: 01.05
Date:        03-12-2018      Assembly Flags: 0x00
Version:     REV 05
ID: LC 2101 PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0c da 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 37 33 33 39 31 00 00
Address 0x20: 53 2f 4e 20 43 41 4b 4a 32 38 35 34 00 0c 03 07
Address 0x30: e2 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN    BUILTIN          4xQSFP28 SYNCE
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN        S/N:         BUILTIN
Assembly ID: 0x0af3          Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 83 00 b1 f3 00 00 00 00 0a f3 00 00
Xcvr 0        REV 01    740-058734    1ACQ104300K          QSFP-100GBASE-SR4
PIC 1          BUILTIN    BUILTIN          4xQSFP28 SYNCE
Jedec Code:  0x0000          EEPROM Version:  0x00
P/N:         BUILTIN        S/N:         BUILTIN
Assembly ID: 0x0af3          Assembly Version: 00.00
Date:        00-00-0000      Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Xcvr 0        REV 01    740-061405    1ACQ12110AN          QSFP-100GBASE-SR4
PIC 2          BUILTIN    BUILTIN          4xQSFP28 SYNCE

```

```

Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN    S/N:         BUILTIN
Assembly ID: 0x0af3     Assembly Version: 00.00
Date:        00-00-0000  Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 83 80 b1 8a b5 cf 0b 5f 08 00 73 6d
  Xcvr 0      REV 01    740-046565    QG1105B2      QSFP+-40G-SR4
  PIC 3       BUILTIN   BUILTIN       4xQSFP28 SYNCE
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN    S/N:         BUILTIN
Assembly ID: 0x0af3     Assembly Version: 00.00
Date:        00-00-0000  Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 83 80 11 94 b5 cf 0b 5f 0c 00 73 6d
  Xcvr 0      REV 01    740-045627    QH08036X      40GBASE eSR4
  PIC 4       BUILTIN   BUILTIN       4xQSFP28 SYNCE
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN    S/N:         BUILTIN
Assembly ID: 0x0af3     Assembly Version: 00.00
Date:        00-00-0000  Assembly Flags: 0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 83 80 71 9d b5 cf 0b 5f 10 00 73 6d
  Xcvr 0      REV 01    740-067443    XWRORY7      QSFP+-40G-SR4
  Xcvr 1      REV 01    740-067443    XWRORYH      QSFP+-40G-SR4
  Xcvr 2      REV 01    740-067443    XWRORYP      QSFP+-40G-SR4
  Xcvr 3      REV 01    740-067443    XWS028S      QSFP+-40G-SR4
  PIC 5       BUILTIN   BUILTIN       4xQSFP28 SYNCE
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N:         BUILTIN    S/N:         BUILTIN
Assembly ID: 0x0af3     Assembly Version: 00.00

```

```

Date:          00-00-0000      Assembly Flags:    0x00
ID: 4x QSFP28 10/40/100GE SYNCE PIC
Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
  Address 0x00: 00 00 00 00 0a f3 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 25 73 3a 20
  Address 0x20: 42 55 49 4c 54 49 4e 00 25 73 3a 20 00 00 00 00
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x70: 00 00 00 00 83 80 d1 a6 b5 cf 0b 5f 14 00 73 6d
  Xcvr 3      REV 01    740-058734    1ACQ113406C    QSFP-100GBASE-SR4
FPD Board    REV 07    711-054687    ACPC7142      Front Panel Display
Jedec Code:  0x7fb0      EEPROM Version:    0x01
P/N:         711-054687    S/N:          ACPC7142
Assembly ID: 0x0bf2      Assembly Version: 01.07
Date:        07-22-2016    Assembly Flags: 0x00
Version:     REV 07
ID: Front Panel Display
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0b f2 01 07 52 45 56 20 30 37 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 35 34 36 38 37 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 43 37 31 34 32 00 16 07 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PEM 0        REV 02    740-049388    1EDL62102N9    Power Supply AC
Jedec Code:  0x7fb0      EEPROM Version:    0x02
P/N:         740-049388    S/N:          1EDL62102N9
Assembly ID: 0x0483      Assembly Version: 01.02
Date:        05-25-2016    Assembly Flags: 0x00
Version:     REV 02      CLEI Code:      CMUPADNBAA
ID: Power Supply AC      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
  Address 0x20: 31 45 44 4c 36 32 31 30 32 4e 39 00 00 19 05 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
  Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
  Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
PEM 1        REV 02    740-049388    1EDL60300KX    Power Supply AC
Jedec Code:  0x00b0      EEPROM Version:    0x02
P/N:         740-049388    S/N:          1EDL60300KX
Assembly ID: 0x0483      Assembly Version: 01.02
Date:        01-20-2016    Assembly Flags: 0x00
Version:     REV 02      CLEI Code:      CMUPADNBAA
ID: Power Supply AC      FRU Model Number: QFX10000-PWR-AC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:

```

```

Address 0x00: 00 b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 30 33 30 30 4b 58 00 00 14 01 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
PEM 2          REV 02  740-049388  1EDL60300DL  Power Supply AC
Jedec Code:    0x7fb0          EEPROM Version: 0x02
P/N:           740-049388      S/N:           1EDL60300DL
Assembly ID:   0x0483          Assembly Version: 01.02
Date:          01-20-2016      Assembly Flags: 0x00
Version:       REV 02          CLEI Code:      CMUPADNBAA
ID: Power Supply AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 30 33 30 30 44 4c 00 00 14 01 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
PEM 3          REV 02  740-049388  1EDL61701BT  Power Supply AC
Jedec Code:    0x7fb0          EEPROM Version: 0x02
P/N:           740-049388      S/N:           1EDL61701BT
Assembly ID:   0x0483          Assembly Version: 01.02
Date:          05-01-2016      Assembly Flags: 0x00
Version:       REV 02          CLEI Code:      CMUPADNBAA
ID: Power Supply AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 31 37 30 31 42 54 00 00 01 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff ff
PEM 4          REV 02  740-049388  1EDL62102P7  Power Supply AC
Jedec Code:    0x7fb0          EEPROM Version: 0x02
P/N:           740-049388      S/N:           1EDL62102P7
Assembly ID:   0x0483          Assembly Version: 01.02
Date:          05-25-2016      Assembly Flags: 0x00
Version:       REV 02          CLEI Code:      CMUPADNBAA
ID: Power Supply AC          FRU Model Number: QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 31 30 32 50 37 00 00 19 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00

```

```

Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff
PEM 5          REV 02   740-049388   1EDL62102PP   Power Supply AC
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-049388      S/N:              1EDL62102PP
Assembly ID:   0x0483          Assembly Version:  01.02
Date:          05-25-2016      Assembly Flags:    0x00
Version:       REV 02          CLEI Code:         CMUPADNBAA
ID: Power Supply AC          FRU Model Number:  QFX10000-PWR-AC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 83 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 39 33 38 38 00 00
Address 0x20: 31 45 44 4c 36 32 31 30 32 50 50 00 00 19 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 50 41 44 4e 42 41 41 51
Address 0x50: 46 58 31 30 30 30 30 2d 50 57 52 2d 41 43 00 00
Address 0x60: 00 00 00 00 00 00 01 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff dc ff ff ff ff ff ff ff ff ff ff ff
FTC 0          REV 14   750-050108   ACPE4038      Fan Controller 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050108      S/N:              ACPE4038
Assembly ID:   0x0bee          Assembly Version:  01.14
Date:          09-27-2016      Assembly Flags:    0x00
Version:       REV 14          CLEI Code:         CMUCAHZCAA
ID: Fan Controller 8          FRU Model Number:  QFX10008-FAN-CTRL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ee 01 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 31 30 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 34 30 33 38 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 5a 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 98 ff ff ff ff ff ff ff ff ff ff ff ff
FTC 1          REV 14   750-050108   ACPE4032      Fan Controller 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050108      S/N:              ACPE4032
Assembly ID:   0x0bee          Assembly Version:  01.14
Date:          09-27-2016      Assembly Flags:    0x00
Version:       REV 14          CLEI Code:         CMUCAHZCAA
ID: Fan Controller 8          FRU Model Number:  QFX10008-FAN-CTRL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ee 01 0e 52 45 56 20 31 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 31 30 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 45 34 30 33 32 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 5a 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 2d 43 54 52 4c
Address 0x60: 00 00 00 00 00 00 41 44 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 98 ff ff ff ff ff ff ff ff ff ff ff ff
Fan Tray 0     REV 09   760-054372   ACPD6799      Fan Tray 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           760-054372      S/N:              ACPD6799
Assembly ID:   0x0bf0          Assembly Version:  01.09

```



```

Date:          09-28-2016      Assembly Flags:  0x00
Version:       REV 09         CLEI Code:       CMUCAHYCAA
ID: Fan Tray 8                FRU Model Number: QFX10008-FAN
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b f0 01 09 52 45 56 20 30 39 00 00
  Address 0x10: 00 00 00 00 37 36 30 2d 30 35 34 33 37 32 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 44 36 37 39 39 00 1c 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 59 43 41 41 51
  Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff ff

Fan Tray 1          REV 09    760-054372    ACNZ3584          Fan Tray 8
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:       760-054372    S/N:       ACNZ3584
Assembly ID: 0x0bf0     Assembly Version: 01.09
Date:      08-30-2016    Assembly Flags: 0x00
Version:   REV 09       CLEI Code:   CMUCAHYCAA
ID: Fan Tray 8          FRU Model Number: QFX10008-FAN
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b f0 01 09 52 45 56 20 30 39 00 00
  Address 0x10: 00 00 00 00 37 36 30 2d 30 35 34 33 37 32 00 00
  Address 0x20: 53 2f 4e 20 41 43 4e 5a 33 35 38 34 00 1e 08 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 59 43 41 41 51
  Address 0x50: 46 58 31 30 30 30 38 2d 46 41 4e 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff f1 ff ff ff ff ff ff ff ff ff ff ff ff

SFB 0              REV 24    750-050058    ACPD4587          Switch Fabric (SIB) 8
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:       750-050058    S/N:       ACPD4587
Assembly ID: 0x0bec     Assembly Version: 01.24
Date:      06-19-2016    Assembly Flags: 0x00
Version:   REV 24       CLEI Code:   CMUCAHOCAA
ID: Switch Fabric (SIB) 8 FRU Model Number: QFX10008-SF
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
  Address 0x20: 53 2f 4e 20 41 43 50 44 34 35 38 37 00 13 06 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
  Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00

SFB 1              REV 24    750-050058    ACNZ0635          Switch Fabric (SIB) 8
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N:       750-050058    S/N:       ACNZ0635
Assembly ID: 0x0bec     Assembly Version: 01.24
Date:      06-06-2016    Assembly Flags: 0x00
Version:   REV 24       CLEI Code:   CMUCAHOCAA
ID: Switch Fabric (SIB) 8 FRU Model Number: QFX10008-SF
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:

```

```

Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 36 33 35 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SFB 2          REV 24    750-050058    ACPD4908          Switch Fabric (SIB) 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050058      S/N:             ACPD4908
Assembly ID:   0x0bec          Assembly Version: 01.24
Date:          07-12-2016      Assembly Flags:   0x00
Version:       REV 24          CLEI Code:        CMUCAH0CAA
ID: Switch Fabric (SIB) 8      FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 50 44 34 39 30 38 00 0c 07 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SFB 3          REV 24    750-050058    ACNZ0617          Switch Fabric (SIB) 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050058      S/N:             ACNZ0617
Assembly ID:   0x0bec          Assembly Version: 01.24
Date:          06-07-2016      Assembly Flags:   0x00
Version:       REV 24          CLEI Code:        CMUCAH0CAA
ID: Switch Fabric (SIB) 8      FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 36 31 37 00 07 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SFB 4          REV 24    750-050058    ACNZ0527          Switch Fabric (SIB) 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050058      S/N:             ACNZ0527
Assembly ID:   0x0bec          Assembly Version: 01.24
Date:          06-06-2016      Assembly Flags:   0x00
Version:       REV 24          CLEI Code:        CMUCAH0CAA
ID: Switch Fabric (SIB) 8      FRU Model Number: QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 18 52 45 56 20 32 34 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 5a 30 35 32 37 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00

```

```

Address 0x60: 00 00 00 00 00 00 41 45 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff d1 00 00 00 00 00 00 00 00 00 00 00 00
SFB 5          REV 23    750-050058    ACNX6980          Switch Fabric (SIB) 8
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-050058      S/N:              ACNX6980
Assembly ID:   0x0bec          Assembly Version:  01.23
Date:          05-16-2016      Assembly Flags:    0x00
Version:       REV 23          CLEI Code:         CMUCAH0CAA
ID: Switch Fabric (SIB) 8      FRU Model Number:  QFX10008-SF
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b ec 01 17 52 45 56 20 32 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 35 38 00 00
Address 0x20: 53 2f 4e 20 41 43 4e 58 36 39 38 30 00 10 05 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4d 55 43 41 48 30 43 41 41 51
Address 0x50: 46 58 31 30 30 30 38 2d 53 46 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 42 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff ce 00 00 00 00 00 00 00 00 00 00 00 00

```

show chassis hardware models(MX10008 Router)

```
user@host> show chassis hardware models
```

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 27	750-054097	ACPD4307	QFX10008-CHAS
CB 0	REV 02	750-079563	CAFF4580	
CB 1	REV 04	750-079563	CAGL8034	
FPC 0	REV 12	750-073174	CAJK0253	PROTO-ASSEMBLY
FPC 2	REV 03	750-073174	CAJB6004	PROTO-ASSEMBLY
FPC 3	REV 04	750-084779	CAKR7019	PROTO-ASSEMBLY
FPD Board	REV 07	711-054687	ACPC7142	
PEM 0	REV 02	740-049388	1EDL62102N9	QFX10000-PWR-AC
PEM 1	REV 02	740-049388	1EDL60300KX	QFX10000-PWR-AC
PEM 2	REV 02	740-049388	1EDL60300DL	QFX10000-PWR-AC
PEM 3	REV 02	740-049388	1EDL61701BT	QFX10000-PWR-AC
PEM 4	REV 02	740-049388	1EDL62102P7	QFX10000-PWR-AC
PEM 5	REV 02	740-049388	1EDL62102PP	QFX10000-PWR-AC
FTC 0	REV 14	750-050108	ACPE4038	QFX10008-FAN-CTRL
FTC 1	REV 14	750-050108	ACPE4032	QFX10008-FAN-CTRL
Fan Tray 0	REV 09	760-054372	ACPD6799	QFX10008-FAN
Fan Tray 1	REV 09	760-054372	ACNZ3584	QFX10008-FAN
SFB 0	REV 24	750-050058	ACPD4587	QFX10008-SF
SFB 1	REV 24	750-050058	ACNZ0635	QFX10008-SF
SFB 2	REV 24	750-050058	ACPD4908	QFX10008-SF
SFB 3	REV 24	750-050058	ACNZ0617	QFX10008-SF
SFB 4	REV 24	750-050058	ACNZ0527	QFX10008-SF
SFB 5	REV 23	750-050058	ACNX6980	QFX10008-SF

show chassis hardware (PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN123AC42AJC	PTX3000
Midplane	REV 22	750-044645	ACL P6640	Backplane
FPM	REV 07	760-044663	ACMX2146	Front Panel Display

PSM 1	REV 02	740-044980	1EDD3080169	DC 12V Power Supply
PSM 2	REV 06	740-044981	1EDK5040563	AC 12V Power Supply
PSM 3	REV 06	740-044981	1EDK5040313	AC 12V Power Supply
PSM 4	REV 04	740-044980	1EDJ3330088	DC 12V Power Supply
Routing Engine 0	REV 12	740-026942	P737A-006029	RE-DUO-2600
CB 0	REV 18	750-044656	ACMZ3179	Control Board
FPC 2	REV 06	750-057064	ACAM6098	FPC3-SFF-PTX-1X
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0	REV 17	750-059747	ACNW3510	5X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-062357	1DJBZ040003	OTN-100G-LH
Xcvr 2	REV 01	740-062357	1DJBZ044004	OTN-100G-LH
Xcvr 3	REV 01	740-062357	1DJBZ03500P	OTN-100G-LH
Xcvr 4	REV 01	740-062357	1DJBZ03700C	OTN-100G-LH
FPC 4	REV 12	750-057064	ACAM7153	FPC3-SFF-PTX-1X
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0	REV 17	750-059747	ACNW3511	5X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-061663	47	OTN-100G-LH
Xcvr 1	REV 01	740-061663	39	OTN-100G-LH
Xcvr 2	REV 01	740-062357	1DJBZ044002	OTN-100G-LH
Xcvr 3	REV 01	740-062357	1DJBZ03700G	OTN-100G-LH
Xcvr 4	REV 01	740-062357	1DJBZ041001	OTN-100G-LH
FPC 8	REV 11	750-057064	ACAM6808	FPC3-SFF-PTX-1X
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0	REV 17	750-059747	ACNW3508	5X100GE DWDM CFP2-ACO
Xcvr 0	REV 01	740-061663	194	OTN-100G-LH
Xcvr 1	REV 01	740-061663	168	OTN-100G-LH
Xcvr 2	REV 01	740-061663	52	OTN-100G-LH
Xcvr 3	REV 01	740-061663	85	OTN-100G-LH
Xcvr 4	REV 01	740-061663	218	OTN-100G-LH
SIB 0	REV 03	750-057067	ACAM8513	SIB3-SFF-PTX
SIB 1	REV 01	750-057067	ACAM5918	SIB3-SFF-PTX
SIB 2	REV 01	711-057066	ACAM4325	SIB3-SFF-PTX
SIB 3	REV 01	711-057066	ACAM4328	SIB3-SFF-PTX
SIB 4	REV 01	711-057066	ACAM4349	SIB3-SFF-PTX
SIB 5	REV 01	711-057066	ACAM4323	SIB3-SFF-PTX
SIB 6	REV 01	711-057066	ACAM4344	SIB3-SFF-PTX
SIB 7	REV 01	750-057067	ACAM4346	SIB3-SFF-PTX
SIB 8	REV 01	750-057067	ACAM5911	SIB3-SFF-PTX
Fan Tray 0	REV 13	760-044659	ACMP6395	Fan Tray (Exhaust)
Fan Tray 1	REV 13	760-044659	ACMZ6957	Fan Tray (Exhaust)

show chassis hardware clei-models (PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 22	750-044645	IPMVN10FRA	CHAS-MP-PTX3000-S
FPM	REV 07	760-044663	IPUCBE5CAA	FPD-SFF-PTX-S
PSM 1	REV 02	740-044980	PROTOPWRDC	PSM-SFF-PTX-DC-2200-S
PSM 2	REV 06	740-044981	IPUPAK0KAB	PSM-SFF-PTX-AC-S
PSM 3	REV 06	740-044981	IPUPAK0KAB	PSM-SFF-PTX-AC-S
PSM 4	REV 04	740-044980	IPUPAK1KAA	PSM-SFF-PTX-DC-S
Routing Engine 0	REV 12	740-026942		RE-DUO-C2600-16G-S
CB 0	REV 18	750-044656	IPUCBE6CAB	CB-SFF-PTX-S
FPC 2	REV 06	750-057064	PROTOXCLEI	PROTO-ASSEMBLY
PIC 0	REV 17	750-059747	IPU3BC5HAA	PTX-5-100G-WDM
FPC 4	REV 12	750-057064		
PIC 0	REV 17	750-059747	IPU3BC5HAA	PTX-5-100G-WDM
FPC 8	REV 11	750-057064		

PIC 0	REV 17	750-059747	IPU3BC5HAA	PTX-5-100G-WDM
SIB 0	REV 03	750-057067	PROTOXCLEI	PROTO-ASSEMBLY
SIB 1	REV 01	750-057067	PROTOXCLEI	PROTO-ASSEMBLY
SIB 2	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 3	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 4	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 5	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 6	REV 01	711-057066	PROTOXCLEI	PROTO-ASSEMBLY
SIB 7	REV 01	750-057067	PROTOXCLEI	PROTO-ASSEMBLY
SIB 8	REV 01	750-057067	PROTOXCLEI	PROTO-ASSEMBLY
Fan Tray 0	REV 13	760-044659	IPUCBE8CAA	FAN-SFF-PTX-S
Fan Tray 1	REV 13	760-044659	IPUCBE8CAA	FAN-SFF-PTX-S

show chassis hardware (MX2010 Router)

```
user@host > show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11E3217AFK	MX2010
Midplane				Lower Backplane
Midplane 1	REV 01	750-044636	ABAB8506	Upper Backplane
PMP	REV 03	711-032426	ACA11388	Power Midplane
FPM Board	REV 06	711-032349	ZX8744	Front Panel Display
PSM 4	REV 0C	740-033727	VK00254	DC 52V Power Supply
Module				
PSM 5	REV 0B	740-033727	VG00015	DC 52V Power Supply
Module				
PSM 6	REV 0B	740-033727	VH00097	DC 52V Power Supply
Module				
PSM 7	REV 0C	740-033727	VJ00151	DC 52V Power Supply
Module				
PSM 8	REV 0C	740-033727	VJ00149	DC 52V Power Supply
Module				
PDM 0	REV 0B	740-038109	WA00008	DC Power Dist Module
PDM 1	REV 0B	740-038109	WA00014	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009094134	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009094141	RE-S-1800x4
CB 0	REV 08	750-040257	CAAB3491	Control Board
CB 1	REV 08	750-040257	CAAB3489	Control Board
SPMB 0	REV 02	711-041855	CAA6135	PMB Board
SPMB 1	REV 02	711-041855	CAA6137	PMB Board
SFB 0	REV 06	711-032385	ZV1828	Switch Fabric Board
SFB 1	REV 07	711-032385	ZZ2568	Switch Fabric Board
SFB 2	REV 07	711-032385	ZZ2563	Switch Fabric Board
SFB 3	REV 07	711-032385	ZZ2564	Switch Fabric Board
SFB 4	REV 07	711-032385	ZZ2580	Switch Fabric Board
SFB 5	REV 07	711-032385	ZZ2579	Switch Fabric Board
SFB 6	REV 07	711-032385	CAAB4882	Switch Fabric Board
SFB 7	REV 07	711-032385	CAAB4898	Switch Fabric Board
FPC 0	REV 33	750-028467	CAAB1919	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAB7174	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH02RE	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMH038C	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH0390	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMG0SUA	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH0579	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMG0SGP	SFP+-10G-SR

Xcvr 2	REV 01	740-021308	AMH04SV	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMH04X3	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH0135	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMH02NC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH02XB	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMH02PN	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMH057Y	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMG0JHE	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AMH02HT	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AMH04V4	SFP+-10G-SR
FPC 1	REV 21	750-033205	ZG5027	MPC Type 3
CPU	REV 04	711-035209	YT4780	HMPC PMB 2G
MIC 0	REV 03	750-033307	ZV6299	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-031980	083363A00410	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	083363A00334	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	113363A00125	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	083363A00953	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AHR013D	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJ40JUR	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJ40JKL	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJ30ECK	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	19T511100864	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	19T511100868	SFP+-10G-SR
MIC 1	REV 03	750-033307	ZV6268	10X10GE SFPP
PIC 2		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-031980	AJC0JML	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ403PC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJ10N25	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJ40JF4	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJ40JSJ	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJ403V7	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJ40JN3	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJ40JSU	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	19T511100468	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	19T511101363	SFP+-10G-SR
FPC 8	REV 22	750-031089	ZT9746	MPC Type 2 3D
CPU	REV 06	711-030884	ZS1271	MPC PMB 2G
MIC 0	REV 26	750-028392	ABBS1150	3D 20x 1GE(LAN) SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	PLG023C	SFP-SX
Xcvr 1	REV 01	740-031851	PLG09C6	SFP-SX
Xcvr 2	REV 02	740-011613	AM0950SF9L7	SFP-SX
Xcvr 3	REV 02	740-011613	AM1001SFN1H	SFP-SX
Xcvr 4	REV 02	740-011613	AM1001SFM9D	SFP-SX
Xcvr 5	REV 02	740-011613	AM1001SFLTJ	SFP-SX
Xcvr 6	REV 01	740-031851	AC1108S03L9	SFP-SX
Xcvr 7	REV 01	740-031851	AC1102S00NC	SFP-SX
Xcvr 8	REV 01	740-031851	AC1102S00MX	SFP-SX
Xcvr 9	REV 01	740-031851	AC1102S0085	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-031851	AC1102S00KU	SFP-SX
Xcvr 1	REV 01	740-031851	AC1102S00NG	SFP-SX
Xcvr 2	REV 01	740-031851	AC1102S00K3	SFP-SX
Xcvr 3	REV 01	740-031851	AC1102S008R	SFP-SX
Xcvr 4	REV 01	740-031851	AM1107SUFVJ	SFP-SX
Xcvr 5	REV 01	740-031851	AC1108S03LG	SFP-SX
MIC 1	REV 26	750-028387	ABBR9582	3D 4x 10GE XFP

PIC 2		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T10A91703	XFP-10G-SR
Xcvr 1		NON-JNPR	T09L42604	XFP-10G-SR
PIC 3		BUILTIN	BUILTIN	2x 10GE XFP
FPC 9	REV 11	750-036284	ZL3591	MPC 3D 16x 10GE EM
CPU	REV 10	711-029089	ZL0513	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101825	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101821	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101682	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ13R6	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101828	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101716	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101732	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALPOTR1	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101741	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101829	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101669	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ14E3	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	1YT517101826	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	1YT517101817	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	1YT517101735	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	ALQ159A	SFP+-10G-SR
ADC 0	REV 05	750-043596	CAAC2073	Adapter Card
ADC 1	REV 01	750-043596	ZV4117	Adapter Card
ADC 8	REV 01	750-043596	ZV4107	Adapter Card
ADC 9	REV 02	750-043596	ZW1555	Adapter Card
Fan Tray 0	REV 2A	760-046960	ACAY0015	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0019	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0020	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0021	172mm FanTray - 6 Fans

show chassis hardware detail (MX2010 Router)

```
user@host > show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN11E233DAFK	MX2010
Midplane	REV 26	750-044636	ABAB9357	Lower Backplane
Midplane 1	REV 01	711-044557	ABAB8643	Upper Backplane
PMP	REV 04	711-032426	ACAJ1677	Power Midplane
FPM Board	REV 08	760-044634	ABBV9726	Front Panel Display
PSM 0	REV 01	740-045050	1E02224000P	DC 52V Power Supply
Module				
PSM 1	REV 01	740-045050	1E02224000M	DC 52V Power Supply
Module				
PSM 2	REV 01	740-045050	1E022240010	DC 52V Power Supply
Module				
PSM 3	REV 01	740-045050	1E02224000G	DC 52V Power Supply
Module				
PSM 4	REV 01	740-045050	1E022240013	DC 52V Power Supply
Module				
PSM 5	REV 01	740-045050	1E022240007	DC 52V Power Supply
Module				
PSM 6	REV 01	740-045050	1E02224001C	DC 52V Power Supply
Module				

PSM 7 Module	REV 01	740-045050	1E02224001D	DC 52V Power Supply
PSM 8 Module	REV 01	740-045050	1E02224001B	DC 52V Power Supply
PDM 0	REV 01	740-045234	1E262250067	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009099704	RE-S-1800x4
ad0 3831 MB		UGB30SFA4000T1	SFA4000T1 00000651	Compact Flash
ad1 30533 MB		UGB94BPH32H0S1-KCI	11000019592	Disk 1
usb0 (addr 1)		EHCI root hub 0	Intel	uhub0
usb0 (addr 2)		product 0x0020 32	vendor 0x8087	uhub1
DIMM 0		SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80	
DIMM 1		SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80	
DIMM 2		SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80	
DIMM 3		SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54	MFR ID-ce80	
Routing Engine 1	REV 02	740-041821	9009099706	RE-S-1800x4
ad0 3998 MB		Virtium - TuffDrive	VCF P1T0200262860208 114	Compact Flash
ad1 30533 MB		UGB94ARF32H0S3-KC	UNIGEN-499551-000404	Disk 1
CB 0	REV 13	750-040257	CAAF8436	Control Board
CB 1	REV 13	750-040257	CAAF8434	Control Board
SPMB 0	REV 02	711-041855	ABBV3825	PMB Board
SPMB 1	REV 02	711-041855	ABBV3833	PMB Board
SFB 0	REV 05	711-044466	ABBX5682	Switch Fabric Board
SFB 1	REV 05	711-044466	ABBX5676	Switch Fabric Board
SFB 2	REV 05	711-044466	ABBX5665	Switch Fabric Board
SFB 3	REV 05	711-044466	ABBX5699	Switch Fabric Board
SFB 4	REV 05	711-044466	ABBX5603	Switch Fabric Board
SFB 5	REV 05	711-044466	ABBX5587	Switch Fabric Board
SFB 6	REV 05	711-044466	ABBX5607	Switch Fabric Board
SFB 7	REV 05	711-044466	ABBX5669	Switch Fabric Board
FPC 0	REV 09	750-037355	CAAF0924	MPC Type 4-2
CPU	REV 08	711-035209	CAAB9842	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	19T511101656	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AMA04RU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00558	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10M00202	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00328	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	AMA088W	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10L04211	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	19T511101602	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10L04151	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00332	CFP-100G-SR10
FPC 1	REV 18	750-033205	ZE0128	MPC Type 3
CPU	REV 06	711-035209	ZG5431	HMPC PMB 2G
MIC 0	REV 15	750-033199	ZP6435	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	J11E46118	CFP-100G-LR4
MIC 1	REV 15	750-033199	ZP6442	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	UMN03T4	CFP-100G-LR4
FPC 2	REV 16	750-037358	CAAL1001	MPC Type 4-1
CPU	REV 08	711-035209	CAAK7927	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	193363A00589	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00028	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00376	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00016	SFP+-10G-SR

Xcvr 4	REV 01	740-031980	193363A00499	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00039	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11E01239	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00058	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	8X10GE SFP
Xcvr 0	REV 01	740-031980	B10M00075	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00014	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AMA0638	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00063	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AMA0629	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00053	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00344	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00046	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	8X10GE SFP
Xcvr 0	REV 01	740-031980	AMA062M	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00080	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00580	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00064	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	093363A01494	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00020	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	123363A00047	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00072	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	8X10GE SFP
Xcvr 0	REV 01	740-021308	03D206A01033	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00022	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	03D206A01026	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00013	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	03D206A01028	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	973152A00079	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	03D206A01018	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	973152A00025	SFP+-10G-SR
FPC 3	REV 33	750-028467	CAAF5400	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAH7626	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00066	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00021	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00062	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00027	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00065	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00069	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00026	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00003	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00035	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00004	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00049	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00055	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00010	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	973152A00001	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	973152A00073	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	973152A00012	SFP+-10G-SR
FPC 4	REV 21	750-033205	ZG5028	MPC Type 3
CPU	REV 05	711-035209	YX3911	HMPC PMB 2G
MIC 0	REV 03	750-036233	ZL2036	2X40GE QSFP
PIC 0		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB220708	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB220735	QSFP+-40G-SR4
MIC 1	REV 03	750-036233	ZL2028	2X40GE QSFP

PIC 2			BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB220727	QSFP+-40G-SR4	
Xcvr 1	REV 01	740-032986	QB220715	QSFP+-40G-SR4	
FPC 5	REV 11	750-037358	CAAE2196	MPC Type 4-1	
CPU	REV 08	711-035209	CAAD9074	HMPC PMB 2G	
PIC 0		BUILTIN	BUILTIN	8X10GE SFPP	
Xcvr 0	REV 01	740-031980	AMA062S	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AMA062P	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AMA052R	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AMA0632	SFP+-10G-SR	
Xcvr 4	REV 01	740-031980	193363A00564	SFP+-10G-SR	
Xcvr 5	REV 01	740-031980	193363A00229	SFP+-10G-SR	
Xcvr 6	REV 01	740-031980	193363A00363	SFP+-10G-SR	
Xcvr 7	REV 01	740-031980	193363A00278	SFP+-10G-SR	
PIC 1		BUILTIN	BUILTIN	8X10GE SFPP	
Xcvr 0	REV 01	740-031980	AMA04CC	SFP+-10G-SR	
Xcvr 1	REV 01	740-021308	AD0927A001W	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	AMA04N2	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AMA062U	SFP+-10G-SR	
Xcvr 4	REV 01	740-031980	193363A00491	SFP+-10G-SR	
Xcvr 5	REV 01	740-031980	183363A01511	SFP+-10G-SR	
Xcvr 6	REV 01	740-031980	193363A00565	SFP+-10G-SR	
Xcvr 7	REV 01	740-031980	193363A00405	SFP+-10G-SR	
PIC 2		BUILTIN	BUILTIN	8X10GE SFPP	
Xcvr 0	REV 01	740-031980	AMA07QX	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	AMA06MS	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	193363A00318	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	193363A00402	SFP+-10G-SR	
Xcvr 4	REV 01	740-031980	193363A00174	SFP+-10G-SR	
Xcvr 5	REV 01	740-031980	193363A00388	SFP+-10G-SR	
Xcvr 6	REV 01	740-031980	193363A00377	SFP+-10G-SR	
Xcvr 7	REV 01	740-031980	193363A00234	SFP+-10G-SR	
PIC 3		BUILTIN	BUILTIN	8X10GE SFPP	
Xcvr 0	REV 01	740-031980	AMA062T	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	193363A00550	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	193363A00364	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	AMA0630	SFP+-10G-SR	
Xcvr 4	REV 01	740-031980	193363A00509	SFP+-10G-SR	
Xcvr 5	REV 01	740-031980	193363A00459	SFP+-10G-SR	
Xcvr 6	REV 01	740-031980	113363A00191	SFP+-10G-SR	
Xcvr 7	REV 01	740-031980	193363A00352	SFP+-10G-SR	
FPC 6	REV 33	750-028467	CAAF5552	MPC 3D 16x 10GE	
CPU	REV 11	711-029089	CAAH7601	AMPC PMB	
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+	
Xcvr 0	REV 01	740-021308	AD0927A0036	SFP+-10G-SR	
Xcvr 1	REV 01	740-021308	AD0927A003M	SFP+-10G-SR	
Xcvr 2	REV 01	740-021308	AD0927A003G	SFP+-10G-SR	
Xcvr 3	REV 01	740-021308	AD0927A0031	SFP+-10G-SR	
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+	
Xcvr 0	REV 01	740-031980	193363A00331	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	193363A00325	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	193363A00417	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	183363A02509	SFP+-10G-SR	
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+	
Xcvr 0	REV 01	740-021308	T09K75140	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	B11A04356	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	B11K01952	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	B11K01914	SFP+-10G-SR	
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+	
Xcvr 0	REV 01	740-021308	T09K75157	SFP+-10G-SR	

Xcvr 1	REV 01	740-021308	T09K75194	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01926	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01936	SFP+-10G-SR
FPC 7	REV 16	750-037358	CAAL1012	MPC Type 4-1
CPU	REV 08	711-035209	CAAJ3851	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	AMA04NK	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11F00260	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11E02192	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AMA04CP	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJ40JJK	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11F00238	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B10M00275	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	193363A00211	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	B11D05577	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11G00586	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AMA08B7	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AMA04Q0	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11D05840	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11E00467	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11E00029	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	19T511101712	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-031980	193363A00568	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10M00166	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10M00212	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11D05823	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	03DZ06A01005	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	03DZ06A01003	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	03DZ06A01009	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	03DZ06A01004	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	8X10GE SFPP
Xcvr 0	REV 01	740-021308	03DZ06A01017	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	03DZ06A01016	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	03DZ06A01024	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	03DZ06A01008	SFP+-10G-SR
Xcvr 4	REV 01	740-030658	AD0946A02UH	SFP+-10G-USR
Xcvr 5	REV 01	740-021308	T09J67913	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AD0837ES09G	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	03DZ06A01015	SFP+-10G-SR
FPC 8	REV 03	750-045372	CAAD3111	MPC Type 3
CPU	REV 08	711-035209	CAAD8033	HMPC PMB 2G
MIC 0	REV 03	750-036233	ZL2032	2X40GE QSFP
PIC 0		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB230273	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB230254	QSFP+-40G-SR4
MIC 1	REV 03	750-036233	ZL2021	2X40GE QSFP
PIC 2		BUILTIN	BUILTIN	2X40GE QSFP
Xcvr 0	REV 01	740-032986	QB390962	QSFP+-40G-SR4
Xcvr 1	REV 01	740-032986	QB390960	QSFP+-40G-SR4
FPC 9	REV 09	750-037355	CAAF1531	MPC Type 4-2
CPU	REV 08	711-035209	CAAB9927	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	193363A00525	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	193363A00504	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	193363A00368	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJ40JSS	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP

Xcvr 0	REV 01	740-031980	123363A00042	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B10M00023	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJ802EM	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11E02348	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
ADC 0	REV 13	750-043596	ABBX5532	Adapter Card
ADC 1	REV 13	750-043596	ABBX5550	Adapter Card
ADC 2	REV 13	750-043596	ABBX5571	Adapter Card
ADC 3	REV 13	750-043596	ABBX5568	Adapter Card
ADC 4	REV 13	750-043596	ABBX5556	Adapter Card
ADC 5	REV 13	750-043596	ABBX5553	Adapter Card
ADC 6	REV 13	750-043596	ABBX5541	Adapter Card
ADC 7	REV 13	750-043596	ABBX5578	Adapter Card
ADC 8	REV 13	750-043596	ABBX5560	Adapter Card
ADC 9	REV 07	750-043596	ABBV7188	Adapter Card
Fan Tray 0	REV 03	760-046960	ACAY0127	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0068	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0072	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0070	172mm FanTray - 6 Fans

show chassis hardware extensive (MX2010 Router)

```
user@host > show chassis hardware extensive
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x02
S/N:          JN11E233DAFK
Assembly ID:  0x0557          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags:  0x00
ID: MX2010
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: 4a 4e 31 31 45 32 33 33 44 41 46 4b 00 00 00 00
Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 26      750-044636  ABAB9357      Lower Backplane
Jedec Code:   0x7fb0          EEPROM Version: 0x02
P/N:         750-044636      S/N:          ABAB9357
Assembly ID:  0x0b66          Assembly Version: 01.26
Date:         08-28-2012      Assembly Flags: 0x00
Version:      REV 26          CLEI Code:    PROTOXCLEI
ID: Lower Backplane          FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ad 01 08 00 2c 21 72 70 a0 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 66 01 1a 52 45 56 20 32 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 36 33 36 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 39 33 35 37 00 1c 08 07
Address 0x30: dc ff ff ff ad 01 08 00 2c 21 72 70 a0 00 ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
```

```

Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff
Midplane 1      REV 01    711-044557    ABAB8643      Upper Backplane
Jedec Code:    0x7fb0      EEPROM Version: 0x01
P/N:          711-044557    S/N:          ABAB8643
Assembly ID:  0x0b65      Assembly Version: 01.01
Date:         07-27-2012    Assembly Flags: 0x00
Version:      REV 01
ID: Upper Backplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 65 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 34 35 35 37 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 38 36 34 33 00 1b 07 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP            REV 04    711-032426    ACAJ1677      Power Midplane
Jedec Code:    0x7fb0      EEPROM Version: 0x01
P/N:          711-032426    S/N:          ACAJ1677
Assembly ID:  0x045d      Assembly Version: 01.04
Date:         07-20-2012    Assembly Flags: 0x00
Version:      REV 04
ID: Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5d 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 36 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 31 36 37 37 00 14 07 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board      REV 08    760-044634    ABBV9726      Front Panel Display
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:          760-044634    S/N:          ABBV9726
Assembly ID:  0x0b64      Assembly Version: 01.08
Date:         09-10-2012    Assembly Flags: 0x00
Version:      REV 08      CLEI Code:    IPMYA4EJRA
ID: Front Panel Display    FRU Model Number: MX2010-CRAFT-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 64 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 34 34 36 33 34 00 00
Address 0x20: 53 2f 4e 20 41 42 42 56 39 37 32 36 00 0a 09 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 59 41 34 45 4a 52 41 4d
Address 0x50: 58 32 30 31 30 2d 43 52 41 46 54 2d 53 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 93 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0          REV 01    740-045050    1E02224000P    DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:          740-045050    S/N:          1E02224000P
Assembly ID:  0x0478      Assembly Version: 01.01

```

```

Date:          12-06-2012      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         XXXXXXXXXX
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-HC-DC-S-A
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 30 35 30 00 00
  Address 0x20: 31 45 30 32 32 32 34 30 30 30 50 00 00 06 0c 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 58 58 58 58 58 58 58 58 58 58 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 48 43 2d 44 43 2d
  Address 0x60: 53 2d 41 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 4a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 1          REV 01    740-045050    1E02224000M    DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-045050      S/N:             1E02224000M
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          12-06-2012      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         XXXXXXXXXX
ID: DC 52V Power Supply Module FRU Model Number:  MX2000-PSM-HC-DC-S-A
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 30 35 30 00 00
  Address 0x20: 31 45 30 32 32 32 34 30 30 30 4d 00 00 06 0c 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 58 58 58 58 58 58 58 58 58 58 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 48 43 2d 44 43 2d
  Address 0x60: 53 2d 41 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 4a 00 00 00 00 00 00 00 00 00 00 00 00
...
PDM 0          REV 01    740-045234    1E262250067    DC Power Dist Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-045234      S/N:             1E262250067
Assembly ID:   0x047b          Assembly Version: 01.01
Date:          06-28-2012      Assembly Flags:  0x00
Version:       REV 01          CLEI Code:         IPUPAJSKAA
ID: DC Power Dist Module      FRU Model Number:  MX2000-PDM-DC-S-A
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 7b 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 32 33 34 00 00
  Address 0x20: 31 45 32 36 32 32 35 30 30 36 37 00 00 1c 06 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4a 53 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 44 4d 2d 44 43 2d 53 2d 41
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 89 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0 REV 02    740-041821    9009099704    RE-S-1800x4
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-041821      S/N:             9009099704
Assembly ID:   0x09c0          Assembly Version: 01.02
Date:          03-15-2012      Assembly Flags:  0x00
Version:       REV 02
ID: RE-S-1800x4              FRU Model Number:  RE-S-1800X4-16G-S
Board Information Record:

```

```

Address 0x00: 54 32 30 32 37 44 41 2d 34 34 47 42 23 41 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 31 38 32 31 00 00
Address 0x20: 39 30 30 39 30 39 39 37 30 34 00 00 00 0f 03 07
Address 0x30: dc ff ff ff 54 32 30 32 37 44 41 2d 34 34 47 42
Address 0x40: 23 41 23 00 01 00 00 00 00 00 00 00 00 00 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 8c ff ff ff ff ff ff ff ff ff ff ff ff
ad0 3831 MB UGB30SFA4000T1 SFA4000T1 00000651 Compact Flash
ad1 30533 MB UGB94BPH32H0S1-KCI 11000019592 Disk 1
usb0 (addr 1) EHCI root hub 0 Intel uhub0
usb0 (addr 2) product 0x0020 32 vendor 0x8087 uhub1
DIMM 0 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 1 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 2 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
DIMM 3 SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80
Routing Engine 1 REV 02 740-041821 9009099706 RE-S-1800x4
Jedec Code: 0x7fb0 EEPROM Version: 0x02
P/N: 740-041821 S/N: 9009099706
Assembly ID: 0x09c0 Assembly Version: 01.02
Date: 02-23-2012 Assembly Flags: 0x00
Version: REV 02
ID: RE-S-1800x4 FRU Model Number: RE-S-1800X4-16G-S
Board Information Record:
Address 0x00: 54 32 30 32 37 44 41 2d 34 34 47 42 23 41 23 00
I2C Hex Data:
Address 0x00: 7f b0 02 ff 09 c0 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 34 31 38 32 31 00 00
Address 0x20: 39 30 30 39 30 39 39 37 30 36 00 00 00 17 02 07
Address 0x30: dc ff ff ff 54 32 30 32 37 44 41 2d 34 34 47 42
Address 0x40: 23 41 23 00 01 00 00 00 00 00 00 00 00 00 52
Address 0x50: 45 2d 53 2d 31 38 30 30 58 34 2d 31 36 47 2d 53
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 8c ff ff ff ff ff ff ff ff ff ff ff ff
ad0 3998 MB Virtium - TuffDrive VCF P1T0200262860208 114 Compact Flash
ad1 30533 MB UGB94ARF32H0S3-KC UNIGEN-499551-000404 Disk 1
CB 0 REV 13 750-040257 CAAF8436 Control Board
Jedec Code: 0x7fb0 EEPROM Version: 0x02
P/N: 750-040257 S/N: CAAF8436
Assembly ID: 0x0b26 Assembly Version: 01.13
Date: 08-29-2012 Assembly Flags: 0x00
Version: REV 13 CLEI Code: PROTOXCLEI
ID: Control Board FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 26 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 30 32 35 37 00 00
Address 0x20: 53 2f 4e 20 43 41 41 46 38 34 33 36 00 1d 08 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
...
SPMB 0 REV 02 711-041855 ABBV3825 PMB Board
Jedec Code: 0x7fb0 EEPROM Version: 0x01
P/N: 711-041855 S/N: ABBV3825

```

```

Assembly ID: 0x0b29          Assembly Version: 01.02
Date: 08-14-2012           Assembly Flags: 0x00
Version: REV 02
ID: PMB Board
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0b 29 01 02 52 45 56 20 30 32 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 34 31 38 35 35 00 00
  Address 0x20: 53 2f 4e 20 41 42 42 56 33 38 32 35 00 0e 08 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
...
SFB 0          REV 05    711-044466  ABBX5682          Switch Fabric Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 711-044466          S/N: ABBX5682
Assembly ID: 0x0b25          Assembly Version: 01.05
Date: 09-07-2012          Assembly Flags: 0x00
Version: REV 05          CLEI Code: PROTOXCLEI
ID: Switch Fabric Board    FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b 25 01 05 52 45 56 20 30 35 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 34 34 34 36 36 00 00
  Address 0x20: 53 2f 4e 20 41 42 42 58 35 36 38 32 00 07 09 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 00 00 00 01 00 00 00 00 00 00 48 00
...
FPC 0          REV 09    750-037355  CAAF0924          MPC Type 4-2
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-037355          S/N: CAAF0924
Assembly ID: 0x0b4e          Assembly Version: 01.09
Date: 05-21-2012          Assembly Flags: 0x00
Version: REV 09          CLEI Code: PROTOXCLEI
ID: MPC Type 4-2          FRU Model Number: MPC4E-2CGE-8XGE
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b 4e 01 09 52 45 56 20 30 39 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 33 35 35 00 00
  Address 0x20: 53 2f 4e 20 43 41 41 46 30 39 32 34 00 15 05 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 4d
  Address 0x50: 50 43 34 45 2d 32 43 47 45 2d 38 58 47 45 00 00
  Address 0x60: 00 00 00 00 00 00 30 39 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c6 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 08    711-035209  CAAB9842          HMPC PMB 2G
Jedec Code: 0x7fb0          EEPROM Version: 0x01
P/N: 711-035209          S/N: CAAB9842
Assembly ID: 0x0b04          Assembly Version: 01.08
Date: 05-17-2012          Assembly Flags: 0x00
Version: REV 08
ID: HMPC PMB 2G

```



```

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 04 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 35 32 30 39 00 00
Address 0x20: 53 2f 4e 20 43 41 41 42 39 38 34 32 00 11 05 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
PIC 0          BUILTIN          BUILTIN          4x10GE SFPP
Jedec Code:    0x0000          EEPROM Version: 0x00
P/N:          BUILTIN          S/N:          BUILTIN
Assembly ID:   0x0a53          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags: 0x00
ID: 4x10GE SFPP
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a 53 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 4d 58 43 00
Address 0x20: 42 55 49 4c 54 49 4e 00 4d 58 43 00 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 c0 02 ae 64 00 00 00 00 0a 52 00 00
Xcvr 0      REV 01    740-021308    19T511101656    SFP+-10G-SR
Xcvr 1      REV 01    740-031980    AMA04RU         SFP+-10G-SR
Xcvr 2      REV 01    740-031980    193363A00558   SFP+-10G-SR
Xcvr 3      REV 01    740-031980    B10M00202      SFP+-10G-SR
...
ADC 0       REV 13    750-043596    ABBX5532        Adapter Card
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N:        750-043596      S/N:          ABBX5532
Assembly ID: 0x0b3d          Assembly Version: 01.13
Date:       09-12-2012      Assembly Flags: 0x00
Version:    REV 13          CLEI Code:    IPUCBA8CAA
ID: Adapter Card            FRU Model Number: MX2000-LC-ADAPTER
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 3d 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 33 35 39 36 00 00
Address 0x20: 53 2f 4e 20 41 42 42 58 35 35 33 32 00 0c 09 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 41 38 43 41 41 4d
Address 0x50: 58 32 30 30 30 2d 4c 43 2d 41 44 41 50 54 45 52
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 3a 00 00 00 00 00 00 00 00 00 00 00 00
...

```

show chassis hardware models (MX2010 Router)

```
user@host > show chassis hardware models
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	FRU model number
FPM Board	REV 06	711-032349	ZX8744	711-032349

PSM 4	REV 0C	740-033727	VK00254	000000000000000000000000
PSM 5	REV 0B	740-033727	VG00015	000000000000000000000000
PSM 6	REV 0B	740-033727	VH00097	000000000000000000000000
PSM 7	REV 0C	740-033727	VJ00151	000000000000000000000000
PSM 8	REV 0C	740-033727	VJ00149	000000000000000000000000
PDM 0	REV 0B	740-038109	WA00008	
PDM 1	REV 0B	740-038109	WA00014	
Routing Engine 0	REV 02	740-041821	9009094134	RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821	9009094141	RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	CAAB3491	750-040257
CB 1	REV 08	750-040257	CAAB3489	750-040257
SFB 0	REV 06	711-032385	ZV1828	711-032385
SFB 1	REV 07	711-032385	ZZ2568	711-032385
SFB 2	REV 07	711-032385	ZZ2563	711-032385
SFB 3	REV 07	711-032385	ZZ2564	711-032385
SFB 4	REV 07	711-032385	ZZ2580	711-032385
SFB 5	REV 07	711-032385	ZZ2579	711-0323856
SFB 6	REV 07	711-032385	CAAB4882	711-044170
SFB 7	REV 07	711-032385	CAAB4898	711-044170
FPC 0	REV 33	750-028467	CAAB1919	MPC-3D-16XGE-SFPP
FPC 1	REV 21	750-033205	ZG5027	MX-MPC3-3D
MIC 0	REV 03	750-033307	ZV6299	MIC3-3D-10XGE-SFPP
MIC 1	REV 03	750-033307	ZV6268	MIC3-3D-10XGE-SFPP
FPC 8	REV 22	750-031089	ZT9746	MX-MPC2-3D
MIC 0	REV 26	750-028392	ABBS1150	MIC-3D-20GE-SFP
MIC 1	REV 26	750-028387	ABBR9582	MIC-3D-4XGE-XFP
FPC 9	REV 11	750-036284	ZL3591	MPCE-3D-16XGE-SFPP
ADC 0	REV 05	750-043596	CAAC2073	750-043596
ADC 1	REV 01	750-043596	ZV4117	750-043596
ADC 8	REV 01	750-043596	ZV4107	750-043596
ADC 9	REV 02	750-043596	ZW1555	750-043596
Fan Tray 0	REV 2A	760-046960	ACAY0015	
Fan Tray 1	REV 2A	760-046960	ACAY0019	
Fan Tray 2	REV 2A	760-046960	ACAY0020	
Fan Tray 3	REV 2A	760-046960	ACAY0021	

show chassis hardware clei-models (MX2010 Routers)

```
user@host > show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
FPM Board	REV 06	711-032349	PROTOXCLEI	711-032349
PSM 4	REV 0C	740-033727	0000000000	000000000000000000000000
PSM 5	REV 0B	740-033727	0000000000	000000000000000000000000
PSM 6	REV 0B	740-033727	0000000000	000000000000000000000000
PSM 7	REV 0C	740-033727	0000000000	000000000000000000000000
PSM 8	REV 0C	740-033727	0000000000	000000000000000000000000
PDM 0	REV 0B	740-038109		
PDM 1	REV 0B	740-038109		
Routing Engine 0	REV 02	740-041821		RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821		RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	PROTOXCLEI	750-040257
CB 1	REV 08	750-040257	PROTOXCLEI	750-040257
SFB 0	REV 06	711-032385	PROTOXCLEI	711-032385
SFB 1	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 2	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 3	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 4	REV 07	711-032385	PROTOXCLEI	711-032385
SFB 5	REV 07	711-032385	PROTOXCLEI	711-0323856

SFB 6	REV 07	711-032385	PROTOXCLEI	711-044170
SFB 7	REV 07	711-032385	PROTOXCLEI	711-044170
FPC 0	REV 33	750-028467		MPC-3D-16XGE-SFPP
FPC 1	REV 21	750-033205		MX-MPC3-3D
MIC 0	REV 03	750-033307	PROTOXCLEI	MIC3-3D-10XGE-SFPP
MIC 1	REV 03	750-033307	PROTOXCLEI	MIC3-3D-10XGE-SFPP
FPC 8	REV 22	750-031089	COUIBAYBAA	MX-MPC2-3D
MIC 0	REV 26	750-028392	COUIA15BAA	MIC-3D-20GE-SFP
MIC 1	REV 26	750-028387	COUIA16BAA	MIC-3D-4XGE-XFP
FPC 9	REV 11	750-036284	CMUIACGBAA	MPCE-3D-16XGE-SFPP
ADC 0	REV 05	750-043596	PROTOXCLEI	750-043596
ADC 1	REV 01	750-043596	PROTOXCLEI	750-043596
ADC 8	REV 01	750-043596	PROTOXCLEI	750-043596
ADC 9	REV 02	750-043596	PROTOXCLEI	750-043596
Fan Tray 0	REV 2A	760-046960		
Fan Tray 1	REV 2A	760-046960		
Fan Tray 2	REV 2A	760-046960		
Fan Tray 3	REV 2A	760-046960		

show chassis hardware (MX2010 Routers with MPC6E and OTN MIC)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN11C9AFEAFK	MX2010
Midplane	REV 35	750-044636	ABAB9188	Lower Backplane
Midplane 1	REV 02	711-044557	ABAB8729	Upper Backplane
PMP	REV 04	711-032426	ACAJ2432	Power Midplane
FPM Board	REV 09	760-044634	ABCA4314	Front Panel Display
PSM 0	REV 01	740-050037	1EDB321015C	DC 52V Power Supply
Module				
PSM 1	REV 01	740-050037	1EDB321015J	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32000K8	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB32101JW	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB321015G	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB32101HH	DC 52V Power Supply
Module				
PSM 6	REV 01	740-050037	1EDB32101HD	DC 52V Power Supply
Module				
PSM 7	REV 01	740-050037	1EDB321015F	DC 52V Power Supply
Module				
PSM 8	REV 01	740-050037	1EDB321015B	DC 52V Power Supply
Module				
PDM 0	REV 03	740-045234	1EFA3220433	DC Power Dist Module
PDM 1	REV 03	740-045234	1EFA3220425	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009115685	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009099711	RE-S-1800x4
CB 0	REV 23	750-040257	CABE8395	Control Board
CB 1	REV 12	750-040257	CAAD9499	Control Board
SPMB 0	REV 02	711-041855	ABCG8426	PMB Board
SPMB 1	REV 02	711-041855	ABBS1481	PMB Board
SFB 0	REV 06	711-044466	ABCD5013	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD5160	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCD5175	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCD4938	Switch Fabric Board

SFB 4	REV 06	711-044466	ABCD4944	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCD4968	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCD5267	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCD4997	Switch Fabric Board
FPC 0	REV 59	750-044130	ABCT7676	MPC6E 3D
CPU	REV 10	711-045719	ABCK8527	RMPC PMB
XLM 0	REV 13	711-046638	ABCT7810	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7811	MPC6E XL
FPC 2	REV 27	750-033205	ZL6014	MPCE Type 3 3D
CPU	REV 07	711-035209	ZK9068	HMPC PMB 2G
MIC 0	REV 14	750-033196	CAAW9214	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC49FC030	CFP2-100G-SR10
MIC 1	REV 18	750-033199	CAAC3231	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 3	REV 59	750-044130	ABCT7682	MPC6E 3D
CPU	REV 10	711-045719	ABCK8531	RMPC PMB
XLM 0	REV 13	711-046638	ABCT7818	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7819	MPC6E XL
FPC 4	REV 33	750-044130	ABBY9278	MPC6E 3D
CPU	REV 09	711-045719	ABBY8677	RMPC PMB
XLM 0	REV 06.2.00	711-046638	ABBY8844	MPC6E XL
XLM 1	REV 06.2.00	711-046638	ABBY8830	MPC6E XL
FPC 5	REV 59	750-044130	ABCT7675	MPC6E 3D
CPU	REV 10	711-045719	ABCK8526	RMPC PMB
XLM 0	REV 13	711-046638	ABCT7808	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7809	MPC6E XL
FPC 6	REV 30	750-028467	ZM4986	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6541	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43GAC	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	ALMOA6D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AQFORB3	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	153363A00333	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AN10KYE	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	APK04YM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AQFOH44	SFP+-10G-SR
FPC 8	REV 38	750-031090	CABF7313	MPC Type 2 3D EQ
CPU	REV 08	711-030884	CABE6727	MPC PMB 2G
MIC 0	REV 18	750-028380	YK8253	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 03	740-014289	AD1148M00TP	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
QXM 0	REV 06	711-028408	CABC5614	MPC QXM
QXM 1	REV 06	711-028408	CABC5550	MPC QXM
FPC 9	REV 39	750-044130	ABCK1652	MPC6E 3D
CPU	REV 09	711-045719	ABCK1655	RMPC PMB
MIC 0	REV 09	750-049457	ABCP1230	2X100GE CFP2 OTN
PIC 0		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	37300222WP0002	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	FD46F001Y	CFP2-100G-SR10
MIC 1	REV 07	750-049457	ABCV6662	2X100GE CFP2 OTN
PIC 1		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQD0014	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	J13J68335	CFP2-100G-LR4-D
XLM 0	REV 07.2.00	711-046638	ABCK5491	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5475	MPC6E XL

ADC 1	REV 17	750-043596	ABCG9023	Adapter Card
ADC 2	REV 01	750-043596	ZV4079	Adapter Card
ADC 6	REV 17	750-043596	ABCG8866	Adapter Card
ADC 8	REV 17	750-043596	ABCA8993	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0354	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0831	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0892	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0839	172mm FanTray - 6 Fans

show chassis hardware detail (MX2010 Routers with MPC6E and OTN MIC)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11C9AFEAFK	MX2010
Midplane	REV 35	750-044636	ABAB9188	Lower Backplane
Midplane 1	REV 02	711-044557	ABAB8729	Upper Backplane
PMP	REV 04	711-032426	ACAJ2432	Power Midplane
FPM Board	REV 09	760-044634	ABCA4314	Front Panel Display
PSM 0	REV 01	740-050037	1EDB321015C	DC 52V Power Supply
Module				
PSM 1	REV 01	740-050037	1EDB321015J	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32000K8	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB32101JW	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB321015G	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB32101HH	DC 52V Power Supply
Module				
PSM 6	REV 01	740-050037	1EDB32101HD	DC 52V Power Supply
Module				
PSM 7	REV 01	740-050037	1EDB321015F	DC 52V Power Supply
Module				
PSM 8	REV 01	740-050037	1EDB321015B	DC 52V Power Supply
Module				
PDM 0	REV 03	740-045234	1EFA3220433	DC Power Dist Module
PDM 1	REV 03	740-045234	1EFA3220425	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009115685	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive	VCF P1T0200274310822	191	Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI	11000043190		Disk 1
usb0 (addr 1)	EHCI root hub 0	Intel		uhub0
usb0 (addr 2)	product 0x0020 32	vendor 0x8087		uhub1
DIMM 0	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 1	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 2	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
DIMM 3	VL31B5263F-F8SD DIE	REV-0 PCB REV-0		MFR ID-ce80
Routing Engine 1	REV 02	740-041821	9009099711	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive	VCF P1T0200262860208	30	Compact Flash
ad1 30533 MB	UGB94ARF32H0S3-KC	UNIGEN-499551-000146		Disk 1
CB 0	REV 23	750-040257	CABE8395	Control Board
CB 1	REV 12	750-040257	CAAD9499	Control Board
SPMB 0	REV 02	711-041855	ABCG8426	PMB Board
SPMB 1	REV 02	711-041855	ABBS1481	PMB Board
SFB 0	REV 06	711-044466	ABCD5013	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD5160	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCD5175	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCD4938	Switch Fabric Board

SFB 4	REV 06	711-044466	ABCD4944	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCD4968	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCD5267	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCD4997	Switch Fabric Board
FPC 0	REV 59	750-044130	ABCT7676	MPC6E 3D
CPU	REV 10	711-045719	ABCK8527	RMPK PMB
XLM 0	REV 13	711-046638	ABCT7810	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7811	MPC6E XL
FPC 2	REV 27	750-033205	ZL6014	MPCE Type 3 3D
CPU	REV 07	711-035209	ZK9068	HMPK PMB 2G
MIC 0	REV 14	750-033196	CAAW9214	1X100GE CXP
PIC 0		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-046563	XC49FC030	CFP2-100G-SR10
MIC 1	REV 18	750-033199	CAAC3231	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
FPC 3	REV 59	750-044130	ABCT7682	MPC6E 3D
CPU	REV 10	711-045719	ABCK8531	RMPK PMB
XLM 0	REV 13	711-046638	ABCT7818	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7819	MPC6E XL
FPC 4	REV 33	750-044130	ABBY9278	MPC6E 3D
CPU	REV 09	711-045719	ABBY8677	RMPK PMB
XLM 0	REV 06.2.00	711-046638	ABBY8844	MPC6E XL
XLM 1	REV 06.2.00	711-046638	ABBY8830	MPC6E XL
FPC 5	REV 59	750-044130	ABCT7675	MPC6E 3D
CPU	REV 10	711-045719	ABCK8526	RMPK PMB
XLM 0	REV 13	711-046638	ABCT7808	MPC6E XL
XLM 1	REV 13	711-046638	ABCT7809	MPC6E XL
FPC 6	REV 30	750-028467	ZM4986	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6541	AMPK PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ43GAC	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	ALMOA6D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AQFORB3	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	153363A00333	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AN10KYE	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	APK04YM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AQFOH44	SFP+-10G-SR
FPC 8	REV 38	750-031090	CABF7313	MPC Type 2 3D EQ
CPU	REV 08	711-030884	CABE6727	MPC PMB 2G
MIC 0	REV 18	750-028380	YK8253	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 03	740-014289	AD1148M00TP	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
QXM 0	REV 06	711-028408	CABC5614	MPC QXM
QXM 1	REV 06	711-028408	CABC5550	MPC QXM
FPC 9	REV 39	750-044130	ABCK1652	MPC6E 3D
CPU	REV 09	711-045719	ABCK1655	RMPK PMB
MIC 0	REV 09	750-049457	ABCP1230	2X100GE CFP2 OTN
PIC 0		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	37300222WP0002	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	FD46F001Y	CFP2-100G-SR10
MIC 1	REV 07	750-049457	ABCV6662	2X100GE CFP2 OTN
PIC 1		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	UQD0014	CFP2-100G-LR4-D
Xcvr 1		NON-JNPR	J13J68335	CFP2-100G-LR4-D
XLM 0	REV 07.2.00	711-046638	ABCK5491	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5475	MPC6E XL

ADC 1	REV 17	750-043596	ABCG9023	Adapter Card
ADC 2	REV 01	750-043596	ZV4079	Adapter Card
ADC 6	REV 17	750-043596	ABCG8866	Adapter Card
ADC 8	REV 17	750-043596	ABCA8993	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0354	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0831	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0892	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0839	172mm FanTray - 6 Fans

show chassis hardware extensive (MX2010 Routers with MPC6E and OTN MIC)

```
user@host> show chassis hardware extensive
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11C9AFEAFK	MX2010
Jedec Code:	0x7fb0		EEPROM Version:	0x02
			S/N:	JN11C9AFEAFK
Assembly ID:	0x0557		Assembly Version:	00.00
Date:	00-00-0000		Assembly Flags:	0x00

ID: MX2010

Board Information Record:

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00

Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x20: 4a 4e 31 31 43 39 41 46 45 41 46 4b 00 00 00 00

Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Midplane	REV 35	750-044636	ABAB9188	Lower Backplane
----------	--------	------------	----------	-----------------

Jedec Code:	0x7fb0	EEPROM Version:	0x02
-------------	--------	-----------------	------

P/N:	750-044636	S/N:	ABAB9188
------	------------	------	----------

Assembly ID:	0x0b66	Assembly Version:	01.35
--------------	--------	-------------------	-------

Date:	06-21-2013	Assembly Flags:	0x00
-------	------------	-----------------	------

Version:	REV 35	CLEI Code:	IPMU810ARA
----------	--------	------------	------------

ID: Lower Backplane	FRU Model Number:	CHAS-BP-MX2010-S
---------------------	-------------------	------------------

Board Information Record:

Address 0x00: ad 01 08 00 3c 8a b0 38 68 00 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 0b 66 01 23 52 45 56 20 33 35 00 00

Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 36 33 36 00 00

Address 0x20: 53 2f 4e 20 41 42 41 42 39 31 38 38 00 15 06 07

Address 0x30: dd ff ff ff ad 01 08 00 3c 8a b0 38 68 00 ff ff

Address 0x40: ff ff ff ff 01 49 50 4d 55 38 31 30 41 52 41 43

Address 0x50: 48 41 53 2d 42 50 2d 4d 58 32 30 31 30 2d 53 00

Address 0x60: 00 00 00 00 00 00 30 36 00 ff ff ff ff ff ff ff

Address 0x70: ff ff ff f8 ff ff ff ff ff ff ff ff ff ff ff ff

Midplane 1	REV 02	711-044557	ABAB8729	Upper Backplane
------------	--------	------------	----------	-----------------

Jedec Code:	0x7fb0	EEPROM Version:	0x01
-------------	--------	-----------------	------

P/N:	711-044557	S/N:	ABAB8729
------	------------	------	----------

Assembly ID:	0x0b65	Assembly Version:	01.02
--------------	--------	-------------------	-------

Date:	03-21-2013	Assembly Flags:	0x00
-------	------------	-----------------	------

Version:	REV 02
----------	--------

ID: Upper Backplane

Board Information Record:

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

I2C Hex Data:

```

Address 0x00: 7f b0 01 ff 0b 65 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 34 35 35 37 00 00
Address 0x20: 53 2f 4e 20 41 42 41 42 38 37 32 39 00 15 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP                REV 04    711-032426    ACAJ2432                Power Midplane
Jedec Code:    0x7fb0                EEPROM Version:    0x01
P/N:          711-032426                S/N:              ACAJ2432
Assembly ID:  0x045d                Assembly Version:  01.04
Date:         03-28-2013                Assembly Flags:    0x00
Version:      REV 04
ID: Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5d 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 36 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 32 34 33 32 00 1c 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board          REV 09    760-044634    ABCA4314                Front Panel Display
Jedec Code:    0x7fb0                EEPROM Version:    0x02
P/N:          760-044634                S/N:              ABCA4314
Assembly ID:  0x0b64                Assembly Version:  01.09
Date:         03-28-2013                Assembly Flags:    0x00
Version:      REV 09                CLEI Code:        IPMYA4EJRA
ID: Front Panel Display                FRU Model Number: MX2010-CRAFT-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 64 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 34 34 36 33 34 00 00
Address 0x20: 53 2f 4e 20 41 42 43 41 34 33 31 34 00 1c 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 59 41 34 45 4a 52 41 4d
Address 0x50: 58 32 30 31 30 2d 43 52 41 46 54 2d 53 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 93 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0              REV 01    740-050037    1EDB321015C            DC 52V Power Supply
Module
Jedec Code:    0x7fb0                EEPROM Version:    0x02
P/N:          740-050037                S/N:              1EDB321015C
Assembly ID:  0x0478                Assembly Version:  01.01
Date:         05-28-2013                Assembly Flags:    0x00
Version:      REV 01                CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module        FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 43 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d

```



```

Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 1          REV 01  740-050037  1EDB321015J  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB321015J
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-28-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 4a 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 2          REV 01  740-050037  1EDB32000K8  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB32000K8
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-23-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 30 30 30 4b 38 00 00 17 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 3          REV 01  740-050037  1EDB32101JW  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB32101JW
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-30-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 4a 57 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

```

```

PSM 4          REV 01  740-050037  1EDB321015G  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB321015G
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-28-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 35 47 00 00 1c 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

PSM 5          REV 01  740-050037  1EDB32101HH  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB32101HH
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-30-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 48 48 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

PSM 6          REV 01  740-050037  1EDB32101HD  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:             1EDB32101HD
Assembly ID:   0x0478          Assembly Version: 01.01
Date:          05-30-2013      Assembly Flags:   0x00
Version:       REV 01          CLEI Code:        IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 32 31 30 31 48 44 00 00 1e 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

PSM 7          REV 01  740-050037  1EDB321015F  DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02

```

```

P/N:          740-050037      S/N:          1EDB321015F
Assembly ID:  0x0478         Assembly Version: 01.01
Date:         05-28-2013     Assembly Flags:  0x00
Version:      REV 01         CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 31 30 31 35 46 00 00 1c 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 8          REV 01      740-050037      1EDB321015B      DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:          740-050037   S/N:          1EDB321015B
Assembly ID:   0x0478     Assembly Version: 01.01
Date:         05-28-2013  Assembly Flags:  0x00
Version:      REV 01     CLEI Code:    IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 31 30 31 35 42 00 00 1c 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PDM 0          REV 03      740-045234      1EFA3220433      DC Power Dist Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:          740-045234   S/N:          1EFA3220433
Assembly ID:   0x047b     Assembly Version: 01.03
Date:         05-30-2013  Assembly Flags:  0x00
Version:      REV 03     CLEI Code:    IPUPAJSKAA
ID: DC Power Dist Module FRU Model Number: MX2000-PDM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 7b 01 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 34 35 32 33 34 00 00
  Address 0x20: 31 45 46 41 33 32 32 30 34 33 33 00 00 1e 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4a 53 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 44 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 33 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 1d 00 00 00 00 00 00 00 00 00 00 00 00
PDM 1          REV 03      740-045234      1EFA3220425      DC Power Dist Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:          740-045234   S/N:          1EFA3220425
Assembly ID:   0x047b     Assembly Version: 01.03
Date:         05-30-2013  Assembly Flags:  0x00
Version:      REV 03     CLEI Code:    IPUPAJSKAA
ID: DC Power Dist Module FRU Model Number: MX2000-PDM-DC-S

```

```
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
..
```

show chassis hardware (MX2020 Router)

```
user@host > show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11E2227AFJ	MX2020
Midplane	REV 27	750-040240	ABAB9384	Lower Power Midplane
Midplane 1	REV 04	711-032386	ABAB9386	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ1579	Upper Power Midplane
PMP 0	REV 04	711-032426	ACAJ1524	Lower Power Midplane
FPM Board	REV 06	760-040242	ABBT8837	Front Panel Display
PSM 0	REV 01	740-045050	1E022240056	DC 52V Power Supply
Module				
PSM 1	REV 01	740-045050	1E022240054	DC 52V Power Supply
Module				
PSM 2	REV 01	740-045050	1E02224005H	DC 52V Power Supply
Module				
PSM 3	REV 01	740-045050	1E022240053	DC 52V Power Supply
Module				
PSM 4	REV 01	740-045050	1E02224004K	DC 52V Power Supply
Module				
PSM 7	REV 01	740-045050	1E02224006W	DC 52V Power Supply
Module				
PSM 8	REV 01	740-045050	1E022240062	DC 52V Power Supply
Module				
PSM 9	REV 01	740-045050	1E02224005B	DC 52V Power Supply
Module				
PSM 10	REV 01	740-045050	1E02224005A	DC 52V Power Supply
Module				
PSM 11	REV 01	740-045050	1E022240052	DC 52V Power Supply
Module				
PSM 12	REV 01	740-045050	1E022240051	DC 52V Power Supply
Module				
PSM 13	REV 01	740-045050	1E022240058	DC 52V Power Supply
Module				
PSM 14	REV 01	740-045050	1E02224004L	DC 52V Power Supply
Module				
PSM 15	REV 01	740-045050	1E02224005M	DC 52V Power Supply
Module				
PSM 16	REV 01	740-045050	1E02224006S	DC 52V Power Supply
Module				
PSM 17	REV 01	740-045050	1E02224005Z	DC 52V Power Supply
Module				
PDM 0	REV 01	740-045234	1E012150033	DC Power Dist Module
PDM 1	REV 01	740-045234	1E012150027	DC Power Dist Module
PDM 2	REV 01	740-045234	1E012150028	DC Power Dist Module
PDM 3	REV 01	740-045234	1E012150045	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009089704	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009094138	RE-S-1800x4
CB 0	REV 14	750-040257	CAAF8430	Control Board
CB 1	REV 08	750-040257	CAAB3482	Control Board
SPMB 0	REV 01	711-041855	ZS2290	PMB Board
SPMB 1	REV 02	711-041855	CAAA6141	PMB Board
SFB 0	REV 03	711-044466	ABBV6789	Switch Fabric Board
SFB 1	REV 05	711-044466	ABBX5666	Switch Fabric Board

SFB 2	REV 05	711-044466	ABBX5678	Switch Fabric Board
SFB 3	REV 05	711-044466	ABBX5687	Switch Fabric Board
SFB 4	REV 05	711-044466	ABBX5609	Switch Fabric Board
SFB 5	REV 05	711-044466	ABBX5675	Switch Fabric Board
SFB 6	REV 03	711-044466	ABBV6805	Switch Fabric Board
SFB 7	REV 05	711-044466	ABBX5701	Switch Fabric Board
FPC 0	REV 30	750-028467	ABBN0284	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0507	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00990	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04357	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01327	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04375	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02760	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02904	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E03963	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00756	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04418	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01077	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01128	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01253	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01140	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01626	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01075	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01177	SFP+-10G-USR
FPC 1	REV 30	750-028467	ABBN0208	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABB11084	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04745	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01570	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04388	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01439	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04739	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01869	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01675	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01901	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01346	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01288	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01824	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04312	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02811	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01495	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01265	SFP+-10G-USR
FPC 2	REV 30	750-028467	ZM5111	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6607	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LJA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MFZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKL	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KF4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FBJ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MM2	SFP+-10G-SR

Xcvr 2	REV 01	740-031980	AK80LJV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NXV	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1H	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLS	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FL5	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG2	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KDU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MG1	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM0	SFP+-10G-SR
FPC 3	REV 30	750-028467	ABBN0302	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0495	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01581	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01176	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01251	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02752	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00786	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01020	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01023	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02819	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02812	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11D04437	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01279	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01333	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00978	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01018	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01784	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	AK80NKP	SFP+-10G-SR
FPC 4	REV 30	750-028467	ABBN0308	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1095	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04305	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01147	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01195	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01743	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01892	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02880	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00725	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01057	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02816	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11C04501	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02764	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00789	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01250	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00787	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E03803	SFP+-10G-USR
FPC 5	REV 30	750-028467	ABBN0316	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1082	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00523	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	B11K01848	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01865	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00540	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00422	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00428	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00423	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01855	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01847	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00526	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00529	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00525	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00425	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00530	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01851	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00528	SFP+-10G-SR
FPC 6	REV 32	750-028467	ABBN6832	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6534	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MB4	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FQ6	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N1F	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLQ	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80KDR	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FGJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N5G	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KD8	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LET	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80N1X	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRF	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL2	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N3D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MRB	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LEQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LER	SFP+-10G-SR
FPC 7	REV 32	750-028467	ABBN6811	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7288	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NK8	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LJC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LBU	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N21	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEU	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLM	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NL6	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LES	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEN	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80ME0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LMG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM1	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MG7	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KF9	SFP+-10G-SR

Xcvr 2	REV 01	740-031980	AK80NRQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLE	SFP+-10G-SR
FPC 8	REV 23	750-028467	YN2977	MPC 3D 16x 10GE
CPU	REV 10	711-029089	YP1856	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00875	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00851	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00772	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00882	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00735	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00169	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00726	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00077	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00168	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00676	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00732	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00091	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00642	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00871	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00853	SFP+-10G-SR
FPC 9	REV 32	750-028467	ABBN6798	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6556	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	9ZD206A00055	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00239	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AD0915E003K	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AD0915E003A	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MRC	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLS	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKN	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N3U	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1T	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ808DJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NG4	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FND	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLT	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKR	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LKM	SFP+-10G-SR
FPC 10	REV 32	750-028467	ABBN6813	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6542	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NA3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLF	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MRH	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00030	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80L9H	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80ME8	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLR	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG1	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	AK80MCA	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LFC	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LEM	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N9X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LAC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LF2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N8T	SFP+-10G-SR
FPC 11	REV 30	750-028467	ABBN0281	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0526	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01326	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03973	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00950	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00674	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00775	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04461	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01074	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02821	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04501	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00757	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01623	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01022	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04359	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02751	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02736	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01178	SFP+-10G-USR
FPC 12	REV 32	750-028467	ABBN6796	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7259	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01856	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01853	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01863	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02863	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02668	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02881	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01671	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02627	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02692	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02730	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03081	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02736	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02568	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02747	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02579	SFP+-10G-SR
FPC 13	REV 30	750-028467	ABBN0270	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABB0966	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NL1	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NXW	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KD2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FMD	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-031980	AK80NKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MGH	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N38	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL7	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEL	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NKD	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCY	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LHK	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80M5J	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MBE	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NLG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LFH	SFP+-10G-SR
FPC 14	REV 32	750-028467	ABBN6790	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6515	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LZM	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MCC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCM	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE0	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021310	C10F99155	SFP+-10G-LRM
Xcvr 1	REV 01	740-021310	C10F99049	SFP+-10G-LRM
Xcvr 2	REV 01	740-021310	C10F99128	SFP+-10G-LRM
Xcvr 3	REV 01	740-021310	C10F99169	SFP+-10G-LRM
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LF3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02597	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03060	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03057	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEX	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FEU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FNM	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AJQQ05G	SFP+-10G-SR
FPC 15	REV 32	750-028467	ABBN6791	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7289	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00424	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01849	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01862	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01852	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00427	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00430	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01854	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00426	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00429	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01864	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01850	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00522	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01144	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00985	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00796	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	B11K01866	SFP+-10G-SR
FPC 16	REV 30	750-028467	ABBM4592	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0465	AMPC PMB

PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01435	SFP+-10G-USR	
Xcvr 1	REV 01	740-030658	B11E01052	SFP+-10G-USR	
Xcvr 2	REV 01	740-030658	B11F01328	SFP+-10G-USR	
Xcvr 3	REV 01	740-030658	B11F01254	SFP+-10G-USR	
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02738	SFP+-10G-USR	
Xcvr 1	REV 01	740-030658	B11E02881	SFP+-10G-USR	
Xcvr 2	REV 01	740-030658	B11F01624	SFP+-10G-USR	
Xcvr 3	REV 01	740-030658	B11E00889	SFP+-10G-USR	
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02883	SFP+-10G-USR	
Xcvr 1	REV 01	740-030658	B11E00681	SFP+-10G-USR	
Xcvr 2	REV 01	740-030658	B11E04306	SFP+-10G-USR	
Xcvr 3	REV 01	740-030658	B11E02813	SFP+-10G-USR	
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01801	SFP+-10G-USR	
Xcvr 1	REV 01	740-030658	B11E02753	SFP+-10G-USR	
Xcvr 2	REV 01	740-030658	B11E01156	SFP+-10G-USR	
Xcvr 3	REV 01	740-030658	B11E04324	SFP+-10G-USR	
FPC 17	REV 32	750-028467	ABBN6810	MPC 3D 16x 10GE	
CPU	REV 10	711-029089	ABBN7237	AMPC PMB	
PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02638	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02082	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A01674	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A03058	SFP+-10G-SR	
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03048	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02729	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A02566	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A02567	SFP+-10G-SR	
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02878	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02739	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A01959	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A02660	SFP+-10G-SR	
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02731	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02588	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A02673	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A02654	SFP+-10G-SR	
FPC 18	REV 30	750-028467	ABBM4739	MPC 3D 16x 10GE	
CPU	REV 10	711-029089	ABBN0487	AMPC PMB	
PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02569	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02886	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A03082	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	133363A00297	SFP+-10G-SR	
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02726	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A03050	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A02884	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A03076	SFP+-10G-SR	
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02581	SFP+-10G-SR	
Xcvr 1	REV 01	740-031980	163363A02873	SFP+-10G-SR	
Xcvr 2	REV 01	740-031980	163363A02582	SFP+-10G-SR	
Xcvr 3	REV 01	740-031980	163363A03083	SFP+-10G-SR	
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-031981	UL70BU6	SFP+-10G-LR
Xcvr 1	REV 01	740-031981	UL50QC6	SFP+-10G-LR
Xcvr 2	REV 01	740-031981	UL708N6	SFP+-10G-LR
Xcvr 3	REV 01	740-031981	UL603KK	SFP+-10G-LR
FPC 19	REV 32	750-028467	ABBN6827	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6508	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A01688	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A01724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01773	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02593	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03061	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03056	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02669	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03070	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02572	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02697	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02585	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03052	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02591	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02649	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02577	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02698	SFP+-10G-SR
ADC 0	REV 13	750-043596	ABBX5561	Adapter Card
ADC 1	REV 13	750-043596	ABBX5546	Adapter Card
ADC 2	REV 13	750-043596	ABBX5535	Adapter Card
ADC 3	REV 13	750-043596	ABBX5552	Adapter Card
ADC 4	REV 13	750-043596	ABBX5581	Adapter Card
ADC 5	REV 13	750-043596	ABBX5545	Adapter Card
ADC 6	REV 13	750-043596	ABBX5554	Adapter Card
ADC 7	REV 07	750-043596	ABBV7194	Adapter Card
ADC 8	REV 07	750-043596	ABBV7251	Adapter Card
ADC 9	REV 07	750-043596	ABBV7202	Adapter Card
ADC 10	REV 13	750-043596	ABBX5538	Adapter Card
ADC 11	REV 13	750-043596	ABBX5566	Adapter Card
ADC 12	REV 13	750-043596	ABBX5542	Adapter Card
ADC 13	REV 13	750-043596	ABBX5539	Adapter Card
ADC 14	REV 13	750-043596	ABBX5555	Adapter Card
ADC 15	REV 13	750-043596	ABBX5557	Adapter Card
ADC 16	REV 13	750-043596	ABBX5536	Adapter Card
ADC 17	REV 13	750-043596	ABBX5559	Adapter Card
ADC 18	REV 13	750-043596	ABBX5537	Adapter Card
ADC 19	REV 11	750-043596	ABBW5685	Adapter Card
Fan Tray 0	REV 2A	760-046960	ACAY0030	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0039	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0033	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0062	172mm FanTray - 6 Fans

show chassis hardware detail (MX2020 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11E2227AFJ	MX2020
Midplane	REV 27	750-040240	ABAB9384	Lower Power Midplane
Midplane 1	REV 04	711-032386	ABAB9386	Upper Backplane

PMP 1	REV 05	711-032428	ACAJ1821	Upper Power Midplane
PMP 0	REV 04	711-032426	ACAJ1524	Lower Power Midplane
FPM Board	REV 06	760-040242	ABBT8837	Front Panel Display
PSM 0	REV 01	740-045050	1E02224006G	DC 52V Power Supply
Module				
PSM 1	REV 01	740-045050	1E022240053	DC 52V Power Supply
Module				
PSM 2	REV 01	740-045050	1E02224004K	DC 52V Power Supply
Module				
PSM 3	REV 01	740-045050	1E022240056	DC 52V Power Supply
Module				
PSM 4	REV 01	740-045050	1E022240054	DC 52V Power Supply
Module				
PSM 5	REV 01	740-045050	1E02224005H	DC 52V Power Supply
Module				
PSM 6	REV 01	740-045050	1E02224006S	DC 52V Power Supply
Module				
PSM 7	REV 01	740-045050	1E02224005M	DC 52V Power Supply
Module				
PSM 8	REV 01	740-045050	1E022240062	DC 52V Power Supply
Module				
PSM 9	REV 03	740-045050	1EDB2350095	DC 52V Power Supply
Module				
PSM 10	REV 03	740-045050	1EDB235009L	DC 52V Power Supply
Module				
PSM 11	REV 03	740-045050	1EDB2350092	DC 52V Power Supply
Module				
PSM 12	REV 03	740-045050	1EDB23500AT	DC 52V Power Supply
Module				
PSM 13	REV 03	740-045050	1EDB2350094	DC 52V Power Supply
Module				
PSM 15	REV 03	740-045050	1EDB235008X	DC 52V Power Supply
Module				
PDM 0	REV 01	740-045234	1E012150033	DC Power Dist Module
PDM 1	REV 01	740-045234	1E012150027	DC Power Dist Module
PDM 2	REV 01	740-045234	1E262250072	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009094138	RE-S-1800x4
ad0 3998 MB		Virtium - TuffDisk	VCF3 20110825A021D0000064	Compact Flash
ad1 30533 MB		UGB94ARF32H0S3-KC	UNIGEN-499551-000347	Disk 1
usb0 (addr 1)		EHCI root hub 0	Intel	uhub0
usb0 (addr 2)		product 0x0020 32	vendor 0x8087	uhub1
DIMM 0		SGU04G72H1BD2SA-BB	DIE REV-52 PCB REV-54	MFR ID-ce80
DIMM 1		SGU04G72H1BD2SA-BB	DIE REV-52 PCB REV-54	MFR ID-ce80
DIMM 2		SGU04G72H1BD2SA-BB	DIE REV-52 PCB REV-54	MFR ID-ce80
DIMM 3		SGU04G72H1BD2SA-BB	DIE REV-52 PCB REV-54	MFR ID-ce80
Routing Engine 1	REV 02	740-041821	9009089709	RE-S-1800x4
ad0 3831 MB		UGB30SFA4000T1	SFA4000T1 00000113	Compact Flash
ad1 30533 MB		UGB94ARF32H0S3-KC	UNIGEN-478612-001044	Disk 1
CB 0	REV 08	750-040257	CAAB3482	Control Board
CB 1	REV 04	750-040257	ZT2864	Control Board
SPMB 0	REV 02	711-041855	CAA6141	PMB Board
SPMB 1	REV 01	711-041855	ZS2275	PMB Board
SFB 0	REV 05	711-044466	ABBT2161	Switch Fabric Board
SFB 1	REV 05	711-044466	ABBT2159	Switch Fabric Board
SFB 2	REV 05	711-044466	ABBX3718	Switch Fabric Board
SFB 3	REV 05	711-044466	ABBT2152	Switch Fabric Board
SFB 4	REV 05	711-044466	ABBT2160	Switch Fabric Board
SFB 5	REV 05	711-044466	ABBT2145	Switch Fabric Board
SFB 6	REV 05	711-044466	ABBT2150	Switch Fabric Board
SFB 7	REV 05	711-044466	ABBT2163	Switch Fabric Board

FPC 0	REV 30	750-028467	ABBN0284	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0507	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00990	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04357	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01327	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04375	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02760	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02904	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E03963	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00756	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04418	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01077	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01128	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01253	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01140	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01626	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01075	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01177	SFP+-10G-USR
FPC 1	REV 30	750-028467	ABBN0308	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1095	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04305	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01147	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01195	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01743	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01892	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02880	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00725	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01057	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02816	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11C04501	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02764	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00789	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01250	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00787	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E03803	SFP+-10G-USR
FPC 2	REV 30	750-028467	ABBN0316	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1082	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00523	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01848	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01865	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00540	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00422	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00428	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00423	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01855	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01847	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00526	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K00529	SFP+-10G-SR

Xcvr 3	REV 01	740-031980	B11K00525	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00425	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00530	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01851	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00528	SFP+-10G-SR
FPC 3	REV 32	750-028467	ABBN6832	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6534	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MB4	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FQ6	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N1F	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLQ	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80KDR	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FGJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N5G	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KD8	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LET	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80N1X	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRF	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL2	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N3D	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MRB	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LEQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LER	SFP+-10G-SR
FPC 4	REV 32	750-028467	ABBN6811	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7288	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NK8	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LJC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LBU	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N21	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEU	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLM	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NL6	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LES	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEN	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80ME0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LMG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM1	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MG7	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KF9	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NRQ	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLE	SFP+-10G-SR
FPC 5	REV 32	750-028467	ABBN6791	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7289	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00424	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01849	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01862	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K01852	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP
Xcvr 0	REV 01	740-031980	B11K00427	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K00430	SFP+-10G-SR

Xcvr 2	REV 01	740-031980	B11K01854	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00426	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K00429	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01864	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01850	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11K00522	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E01144	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00985	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00796	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	B11K01866	SFP+-10G-SR
FPC 6	REV 30	750-028467	ABBM4592	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0465	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01435	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01052	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01328	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01254	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02738	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02881	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01624	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00889	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02883	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00681	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04306	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02813	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01801	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02753	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01156	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04324	SFP+-10G-USR
FPC 7	REV 32	750-028467	ABBN6810	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7237	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03058	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02082	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01674	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02638	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03048	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02729	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02566	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02567	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02878	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02739	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01959	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02660	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02731	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02588	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02673	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02654	SFP+-10G-SR
FPC 8	REV 30	750-028467	ABBM4739	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0487	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02569	SFP+-10G-SR

Xcvr 1	REV 01	740-031980	163363A02886	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03082	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	133363A00297	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02726	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03050	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02884	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03076	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02581	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02873	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02582	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03083	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031981	UL70BU6	SFP+-10G-LR
Xcvr 1	REV 01	740-031981	UL50QC6	SFP+-10G-LR
Xcvr 2	REV 01	740-031981	UL708N6	SFP+-10G-LR
Xcvr 3	REV 01	740-031981	UL603KK	SFP+-10G-LR
FPC 9	REV 32	750-028467	ABBN6827	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6508	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A01688	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A01724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01773	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02593	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A03061	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A03056	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02669	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03070	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02572	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02697	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02585	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03052	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02591	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02649	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02577	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02698	SFP+-10G-SR
FPC 10	REV 30	750-028467	ABBN0302	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0495	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01581	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01176	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01251	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02752	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00786	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01020	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01023	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02819	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02812	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11D04437	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01279	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01333	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00978	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E01018	SFP+-10G-USR

Xcvr 2	REV 01	740-030658	B11F01784	SFP+-10G-USR
Xcvr 3	REV 01	740-031980	AK80NKP	SFP+-10G-SR
FPC 11	REV 32	750-028467	ABBN6790	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6515	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LZM	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MCC	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCM	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE0	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021310	C10F99155	SFP+-10G-LRM
Xcvr 1	REV 01	740-021310	C10F99049	SFP+-10G-LRM
Xcvr 2	REV 01	740-021310	C10F99128	SFP+-10G-LRM
Xcvr 3	REV 01	740-021310	C10F99169	SFP+-10G-LRM
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LF3	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02597	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A03060	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03057	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEX	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80FEU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FNM	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AJQ0Q5G	SFP+-10G-SR
FPC 12	REV 30	750-028467	ZM5111	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZP6607	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LJA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MFZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKL	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KF4	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FBJ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MM2	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LJV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NXV	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1H	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLS	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FL5	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL9	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG2	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80KDU	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MG1	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80MM0	SFP+-10G-SR
FPC 13	REV 30	750-028467	ABBN0208	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBJ1084	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04745	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01570	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E04388	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01439	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04739	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11F01869	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01675	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01901	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01346	SFP+-10G-USR

Xcvr 1	REV 01	740-030658	B11F01288	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01824	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E04312	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E02811	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03847	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01495	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11F01265	SFP+-10G-USR
FPC 14	REV 23	750-028467	YN2977	MPC 3D 16x 10GE
CPU	REV 10	711-029089	YP1856	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00875	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00851	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00772	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00882	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00735	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00169	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00726	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00077	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00168	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00676	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00732	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00091	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	183363A00725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00642	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	183363A00871	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	183363A00853	SFP+-10G-SR
FPC 15	REV 32	750-028467	ABBN6798	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6556	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	9ZDZ06A00055	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	183363A00239	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AD0915E003K	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AD0915E003A	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80MRC	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NL5	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKN	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N3U	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N1T	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJ808DJ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NG4	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FND	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80FKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLT	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NKR	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LKM	SFP+-10G-SR
FPC 16	REV 30	750-028467	ABBN0270	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABB30966	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NL1	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NXW	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KD2	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80FMD	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+

Xcvr 0	REV 01	740-031980	AK80NKQ	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MGH	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80N38	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NL7	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80M5J	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NKD	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80KCY	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LHK	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LEL	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MBE	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80NLG	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LFH	SFP+-10G-SR
FPC 17	REV 32	750-028467	ABBN6796	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN7259	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	B11K01856	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11K01853	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11K01863	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02863	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02668	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02881	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A01671	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02627	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02725	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02692	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02730	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A03081	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	163363A02736	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	163363A02568	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	163363A02747	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	163363A02579	SFP+-10G-SR
FPC 18	REV 30	750-028467	ABBN0281	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBN0526	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11F01326	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E03973	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E00950	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E00674	SFP+-10G-USR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E00775	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E04461	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E01074	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E02821	SFP+-10G-USR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04501	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E00757	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11F01623	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01022	SFP+-10G-USR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-030658	B11E04359	SFP+-10G-USR
Xcvr 1	REV 01	740-030658	B11E02751	SFP+-10G-USR
Xcvr 2	REV 01	740-030658	B11E02736	SFP+-10G-USR
Xcvr 3	REV 01	740-030658	B11E01178	SFP+-10G-USR
FPC 19	REV 32	750-028467	ABBN6813	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ABBK6542	AMPC PMB

PIC 0			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NA3		SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80NLF		SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80MRH		SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80KE4		SFP+-10G-SR
PIC 1			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	973152A00030		SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80L9H		SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80ME8		SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80NLR		SFP+-10G-SR
PIC 2			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80NG1		SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80MCA		SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LFC		SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80LEM		SFP+-10G-SR
PIC 3			BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80N9X		SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AK80LAC		SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80LF2		SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AK80N8T		SFP+-10G-SR
ADC 0	REV 13	750-043596	ABBX5561		Adapter Card
ADC 1	REV 13	750-043596	ABBX5546		Adapter Card
ADC 2	REV 13	750-043596	ABBX5535		Adapter Card
ADC 3	REV 13	750-043596	ABBX5552		Adapter Card
ADC 4	REV 13	750-043596	ABBX5581		Adapter Card
ADC 5	REV 13	750-043596	ABBX5545		Adapter Card
ADC 6	REV 13	750-043596	ABBX5554		Adapter Card
ADC 7	REV 07	750-043596	ABBV7194		Adapter Card
ADC 8	REV 07	750-043596	ABBV7251		Adapter Card
ADC 9	REV 07	750-043596	ABBV7202		Adapter Card
ADC 10	REV 13	750-043596	ABBX5579		Adapter Card
ADC 11	REV 13	750-043596	ABBX5548		Adapter Card
ADC 12	REV 13	750-043596	ABBX5575		Adapter Card
ADC 13	REV 13	750-043596	ABBX5539		Adapter Card
ADC 14	REV 13	750-043596	ABBX5555		Adapter Card
ADC 15	REV 13	750-043596	ABBX5557		Adapter Card
ADC 16	REV 13	750-043596	ABBX5536		Adapter Card
ADC 17	REV 13	750-043596	ABBX5559		Adapter Card
ADC 18	REV 13	750-043596	ABBX5537		Adapter Card
ADC 19	REV 11	750-043596	ABBW5685		Adapter Card
Fan Tray 0	REV 04	760-046960	ACAY0090		172mm FanTray - 6 Fans
Fan Tray 1	REV 04	760-046960	ACAY0088		172mm FanTray - 6 Fans
Fan Tray 2	REV 04	760-046960	ACAY0089		172mm FanTray - 6 Fans
Fan Tray 3	REV 04	760-046960	ACAY0108		172mm FanTray - 6 Fans

show chassis hardware (MX2020 Router with 240-V high-voltage DC PSMs and PDMs)

```
user@host > show chassis hardware
```

Hardware inventory:					
Item	Version	Part number	Serial number	Description	
Chassis			JN1248551AFJ	MX2020	
Midplane	REV 51	750-040240	ABAD0719	Lower Backplane	
Midplane 1	REV 06	711-032386	ABAD1385	Upper Backplane	
PMP 1	REV 05	711-032428	ACAJ3828	Upper Power Midplane	
PMP 0	REV 04	711-032426	ACAJ3642	Lower Power Midplane	
FPM Board	REV 13	760-040242	ABCX9082	Front Panel Display	
PSM 0	Rev 02	740-078881	1EDX813007L	MX2K 240V HVDC PSM	
PSM 1	Rev 02	740-078881	1EDX81300BB	MX2K 240V HVDC PSM	

PSM 2	Rev 02	740-078881	1EDX81300AD	MX2K 240V HVDC PSM
PSM 3	Rev 02	740-078881	1EDX813007D	MX2K 240V HVDC PSM
PSM 4	Rev 02	740-078881	1EDX81300AY	MX2K 240V HVDC PSM
PSM 5	Rev 02	740-078881	1EDX813009B	MX2K 240V HVDC PSM
PSM 6	Rev 02	740-078881	1EDX81300AB	MX2K 240V HVDC PSM
PSM 7	Rev 02	740-078881	1EDX81300A4	MX2K 240V HVDC PSM
PSM 8	Rev 02	740-078881	1EDX81300A6	MX2K 240V HVDC PSM
PSM 9	Rev 02	740-078881	1EDX81300AE	MX2K 240V HVDC PSM
PSM 10	Rev 02	740-078881	1EDX813007N	MX2K 240V HVDC PSM
PSM 11	Rev 02	740-078881	1EDX813009F	MX2K 240V HVDC PSM
PSM 12	Rev 02	740-078881	1EDX81300B3	MX2K 240V HVDC PSM
PSM 13	Rev 02	740-078881	1EDX813008W	MX2K 240V HVDC PSM
PSM 14	Rev 02	740-078881	1EDX813007M	MX2K 240V HVDC PSM
PSM 15	Rev 02	740-078881	1EDX81300AL	MX2K 240V HVDC PSM
PSM 16	Rev 02	740-078881	1EDX813009E	MX2K 240V HVDC PSM
PSM 17	Rev 02	740-078881	1EDX81300A7	MX2K 240V HVDC PSM
PDM 0	REV 01	740-079470	1EFH8130057	MX2K 240V HVDC PDM
PDM 1	REV 01	740-079470	1EFH8130051	MX2K 240V HVDC PDM
PDM 2	REV 01	740-079470	1EFH8130039	MX2K 240V HVDC PDM
PDM 3	REV 01	740-079470	1EFH8130036	MX2K 240V HVDC PDM
Routing Engine 0	REV 03	740-031114	9009053584	RE-S-1800x2
Routing Engine 1	REV 02	740-041821	9009099699	RE-S-1800x4
CB 0	REV 20	750-040257	CAAJ5213	Control Board
CB 1	REV 12	750-040257	CAAD9490	Control Board
SPMB 0	REV 02	711-041855	ABBX5197	PMB Board
SPMB 1	REV 02	711-041855	ABBS1487	PMB Board
SFB 0	REV 05	711-044466	ABBX5586	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD9861	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCG3642	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCG3670	Switch Fabric Board
SFB 4	REV 06	711-044466	ABCG3676	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCY1288	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCG3657	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCG3704	Switch Fabric Board
FPC 0	REV 02	750-038060	CAAD2115	Load DPC
FPC 1	REV 02	750-038060	CAAD2121	Load DPC
FPC 2	REV 01	750-038060	ZS4429	Load DPC
FPC 3	REV 02	750-038060	CAAE6456	Load DPC
FPC 4	REV 02	750-038060	CAAD2111	Load DPC
FPC 5	REV 07	750-038060	CAJW7933	Load DPC
FPC 6	REV 07	750-038060	CAJW7983	Load DPC
FPC 7	REV 02	750-038060	CAAD2124	Load DPC
FPC 8	REV 01	750-038060	ZS4443	Load DPC
FPC 9	REV 02	750-038060	CAAD2120	Load DPC
FPC 13	REV 02	750-038060	CAAD2133	Load DPC
FPC 14	REV 02	750-038060	CAAD2116	Load DPC
FPC 15	REV 02	750-038060	CAAE6464	Load DPC
FPC 16	REV 02	750-038060	CAAD2126	Load DPC
FPC 17	REV 02	750-038060	CAAC0099	Load DPC
ADC 0	REV 17	750-043596	ABCA8963	Adapter Card
ADC 1	REV 15	750-043596	ABCA8119	Adapter Card
ADC 2	REV 17	750-043596	ABCG8929	Adapter Card
ADC 3	REV 15	750-043596	ABCA8113	Adapter Card
ADC 4	REV 15	750-043596	ABCA8099	Adapter Card
ADC 5	REV 19	750-043596	ABCG5703	Adapter Card
ADC 6	REV 17	750-043596	ABCG8960	Adapter Card
ADC 7	REV 19	750-043596	ABCD1988	Adapter Card
ADC 8	REV 07	750-043596	ABBV7184	Adapter Card
ADC 9	REV 15	750-043596	ABCA8107	Adapter Card
ADC 12	REV 17	750-043596	ABBZ2297	Adapter Card

ADC 13	REV 17	750-043596	ABCD5500	Adapter Card
ADC 14	REV 17	750-043596	ABCA8981	Adapter Card
ADC 15	REV 19	750-043596	ABBZ4170	Adapter Card
ADC 16	REV 07	750-043596	ABBV7215	Adapter Card
ADC 17	REV 15	750-043596	ABCA8086	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0860	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY2638	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY1206	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY2693	172mm FanTray - 6 Fans

show chassis hardware models (MX2020 Router)

```
user@host > show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 27	750-040240	ABAB9384	750-040240
FPM Board	REV 06	760-040242	ABBT8837	760-040242
PSM 0	REV 01	740-045050	1E02224006G	MX2000-PSM-HC-DC-S-A
PSM 1	REV 01	740-045050	1E022240053	MX2000-PSM-HC-DC-S-A
PSM 2	REV 01	740-045050	1E02224004K	MX2000-PSM-HC-DC-S-A
PSM 3	REV 01	740-045050	1E022240056	MX2000-PSM-HC-DC-S-A
PSM 4	REV 01	740-045050	1E022240054	MX2000-PSM-HC-DC-S-A
PSM 5	REV 01	740-045050	1E02224005H	MX2000-PSM-HC-DC-S-A
PSM 6	REV 01	740-045050	1E02224006S	MX2000-PSM-HC-DC-S-A
PSM 7	REV 01	740-045050	1E02224005M	MX2000-PSM-HC-DC-S-A
PSM 8	REV 01	740-045050	1E022240062	MX2000-PSM-HC-DC-S-A
PSM 9	REV 03	740-045050	1EDB2350095	MX2000-PSM-DC-S-A
PSM 10	REV 03	740-045050	1EDB235009L	MX2000-PSM-DC-S-A
PSM 11	REV 03	740-045050	1EDB2350092	MX2000-PSM-DC-S-A
PSM 12	REV 03	740-045050	1EDB23500AT	MX2000-PSM-DC-S-A
PSM 13	REV 03	740-045050	1EDB2350094	MX2000-PSM-DC-S-A
PSM 15	REV 03	740-045050	1EDB235008X	MX2000-PSM-DC-S-A
PDM 0	REV 01	740-045234	1E012150033	
PDM 1	REV 01	740-045234	1E012150027	
PDM 2	REV 01	740-045234	1E262250072	MX2000-PDM-DC-S-A
Routing Engine 0	REV 02	740-041821	9009094138	RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821	9009089709	RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	CAAB3482	750-040257
CB 1	REV 04	750-040257	ZT2864	750-040257
SFB 0	REV 05	711-044466	ABBT2161	MX2000-SFB-S
SFB 1	REV 05	711-044466	ABBT2159	MX2000-SFB-S
SFB 2	REV 05	711-044466	ABBX3718	MX2000-SFB-S
SFB 4	REV 05	711-044466	ABBT2160	MX2000-SFB-S
SFB 5	REV 05	711-044466	ABBT2145	MX2000-SFB-S
SFB 7	REV 05	711-044466	ABBT2163	MX2000-SFB-S
FPC 0	REV 30	750-028467	ABBN0284	MPC-3D-16XGE-SFPP
FPC 1	REV 30	750-028467	ABBN0308	MPC-3D-16XGE-SFPP
FPC 2	REV 30	750-028467	ABBN0316	MPC-3D-16XGE-SFPP
FPC 3	REV 32	750-028467	ABBN6832	MPC-3D-16XGE-SFPP
FPC 4	REV 32	750-028467	ABBN6811	MPC-3D-16XGE-SFPP
FPC 5	REV 32	750-028467	ABBN6791	MPC-3D-16XGE-SFPP
FPC 6	REV 30	750-028467	ABBM4592	MPC-3D-16XGE-SFPP
FPC 7	REV 32	750-028467	ABBN6810	MPC-3D-16XGE-SFPP
FPC 8	REV 30	750-028467	ABBM4739	MPC-3D-16XGE-SFPP
FPC 9	REV 32	750-028467	ABBN6827	MPC-3D-16XGE-SFPP
FPC 10	REV 30	750-028467	ABBN0302	MPC-3D-16XGE-SFPP
FPC 11	REV 32	750-028467	ABBN6790	MPC-3D-16XGE-SFPP
FPC 12	REV 30	750-028467	ZM5111	MPC-3D-16XGE-SFPP
FPC 13	REV 30	750-028467	ABBN0208	MPC-3D-16XGE-SFPP

FPC 14	REV 23	750-028467	YN2977	MPC-3D-16XGE-SFPP
FPC 15	REV 32	750-028467	ABBN6798	MPC-3D-16XGE-SFPP
FPC 16	REV 30	750-028467	ABBN0270	MPC-3D-16XGE-SFPP
FPC 17	REV 32	750-028467	ABBN6796	MPC-3D-16XGE-SFPP
FPC 18	REV 30	750-028467	ABBN0281	MPC-3D-16XGE-SFPP
FPC 19	REV 32	750-028467	ABBN6813	MPC-3D-16XGE-SFPP
ADC 0	REV 13	750-043596	ABBX5561	PROTO-ASSEMBLY
ADC 1	REV 13	750-043596	ABBX5546	PROTO-ASSEMBLY
ADC 2	REV 13	750-043596	ABBX5535	MX2000-LC-ADAPTER
ADC 3	REV 13	750-043596	ABBX5552	MX2000-LC-ADAPTER
ADC 4	REV 13	750-043596	ABBX5581	MX2000-LC-ADAPTER
ADC 5	REV 13	750-043596	ABBX5545	PROTO-ASSEMBLY
ADC 6	REV 13	750-043596	ABBX5554	PROTO-ASSEMBLY
ADC 7	REV 07	750-043596	ABBV7194	MX2000-LC-ADAPTER
ADC 8	REV 07	750-043596	ABBV7251	MX2000-LC-ADAPTER
ADC 9	REV 07	750-043596	ABBV7202	MX2000-LC-ADAPTER
ADC 10	REV 13	750-043596	ABBX5579	MX2000-LC-ADAPTER
ADC 12	REV 13	750-043596	ABBX5575	MX2000-LC-ADAPTER
ADC 13	REV 13	750-043596	ABBX5539	PROTO-ASSEMBLY
ADC 14	REV 13	750-043596	ABBX5555	PROTO-ASSEMBLY
ADC 15	REV 13	750-043596	ABBX5557	MX2000-LC-ADAPTER
ADC 16	REV 13	750-043596	ABBX5536	PROTO-ASSEMBLY
ADC 17	REV 13	750-043596	ABBX5559	PROTO-ASSEMBLY
ADC 18	REV 13	750-043596	ABBX5537	PROTO-ASSEMBLY
ADC 19	REV 11	750-043596	ABBW5685	PROTO-ASSEMBLY
Fan Tray 0	REV 04	760-046960	ACAY0090	
Fan Tray 1	REV 04	760-046960	ACAY0088	
Fan Tray 2	REV 04	760-046960	ACAY0089	
Fan Tray 3	REV 04	760-046960	ACAY0108	

show chassis hardware clei-models (MX2020 Router)

```
user@ host > show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 27	750-040240	PROTOXCLEI	750-040240
FPM Board	REV 06	760-040242	PROTOXCLEI	760-040242
PSM 0	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 1	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 2	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 3	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 4	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 5	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 6	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 7	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 8	REV 01	740-045050	IPUPAJMKAA	MX2000-PSM-HC-DC-S-A
PSM 9	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 10	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 11	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 12	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 13	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PSM 15	REV 03	740-045050	IPUPAJMKAA	MX2000-PSM-DC-S-A
PDM 0	REV 01	740-045234		
PDM 1	REV 01	740-045234		
PDM 2	REV 01	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S-A
Routing Engine 0	REV 02	740-041821		RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821		RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	PROTOXCLEI	750-040257
CB 1	REV 04	750-040257	PROTOXCLEI	750-040257

SFB 0	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 1	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 2	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 4	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 5	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 7	REV 05	711-044466	IPUCBA6CAA	MX2000-SFB-S
FPC 0	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 1	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 2	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 3	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 4	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 5	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 6	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 7	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 8	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 9	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 10	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 11	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 12	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 13	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 14	REV 23	750-028467		MPC-3D-16XGE-SFPP
FPC 15	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 16	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 17	REV 32	750-028467		MPC-3D-16XGE-SFPP
FPC 18	REV 30	750-028467		MPC-3D-16XGE-SFPP
FPC 19	REV 32	750-028467		MPC-3D-16XGE-SFPP
ADC 0	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 1	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 2	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 3	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 4	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 5	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 6	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 7	REV 07	750-043596	PROTOXCLEI	MX2000-LC-ADAPTER
ADC 8	REV 07	750-043596	PROTOXCLEI	MX2000-LC-ADAPTER
ADC 9	REV 07	750-043596	PROTOXCLEI	MX2000-LC-ADAPTER
ADC 10	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 12	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 13	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 14	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 15	REV 13	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 16	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 17	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 18	REV 13	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
ADC 19	REV 11	750-043596	PROTOXCLEI	PROTO-ASSEMBLY
Fan Tray 0	REV 04	760-046960		
Fan Tray 1	REV 04	760-046960		
Fan Tray 2	REV 04	760-046960		
Fan Tray 3	REV 04	760-046960		

show chassis hardware (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN120BADBAFJ	MX2020
Midplane	REV 51	750-040240	ABAB9243	Lower Backplane
Midplane 1	REV 04	711-032386	ABAB9399	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ2541	Upper Power Midplane

PMP 0	REV 04	711-032426	ACAJ2194	Lower Power Midplane
FPM Board	REV 13	760-040242	ABCA8835	Front Panel Display
Module	REV 01	740-050037	1EDB32403L5	DC 52V Power Supply
PSM 1	REV 01	740-050037	1EDB32403L3	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32403KM	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB3130079	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB3130077	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB3130020	DC 52V Power Supply
Module				
PSM 6	REV 01	740-050037	1EDB313009S	DC 52V Power Supply
Module				
PSM 7	REV 01	740-050037	1EDB313008E	DC 52V Power Supply
Module				
PSM 8	REV 01	740-050037	1EDB3130063	DC 52V Power Supply
Module				
PSM 12	REV 01	740-050037	1EDB3130026	DC 52V Power Supply
Module				
PSM 13	REV 01	740-050037	1EDB3130074	DC 52V Power Supply
Module				
PSM 14	REV 01	740-050037	1EDB313009D	DC 52V Power Supply
Module				
PSM 15	REV 01	740-050037	1EDB3130024	DC 52V Power Supply
Module				
PSM 16	REV 01	740-050037	1EDB3130054	DC 52V Power Supply
Module				
PSM 17	REV 01	740-050037	1EDB3130080	DC 52V Power Supply
Module				
PDM 0	REV 03	740-045234	1EGA3170144	DC Power Dist Module
PDM 1	REV 03	740-045234	1EGA3170158	DC Power Dist Module
PDM 2	REV 03	740-045234	1EGA3170182	DC Power Dist Module
PDM 3	REV 03	740-045234	1EGA3170207	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009112112	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009112087	RE-S-1800x4
CB 0	REV 23	750-040257	CABA2295	Control Board
CB 1	REV 23	750-040257	CABE8379	Control Board
SPMB 0	REV 02	711-041855	ABCE8851	PMB Board
SPMB 1	REV 02	711-041855	ABCE8839	PMB Board
SFB 0	REV 06	711-044466	ABCD5001	Switch Fabric Board
SFB 1	REV 06	711-044466	ABCD5034	Switch Fabric Board
SFB 2	REV 06	711-044466	ABCH3899	Switch Fabric Board
SFB 3	REV 06	711-044466	ABCD5020	Switch Fabric Board
SFB 4	REV 06	711-044466	ABCD4975	Switch Fabric Board
SFB 5	REV 06	711-044466	ABCH3881	Switch Fabric Board
SFB 6	REV 06	711-044466	ABCD5026	Switch Fabric Board
SFB 7	REV 06	711-044466	ABCD5032	Switch Fabric Board
FPC 0	REV 39	750-045715	CACD1902	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACB1933	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	B11F00361	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	19T511101854	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	19T511100377	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	ANT0878	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	19T511100398	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ4363J	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	19T511101377	SFP+-10G-SR

Xcvr 8	REV 01	740-031980	ANT072M	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AG90C7N	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AM30M09	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B10E01016	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-031980	B10L04151	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	19T511101379	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5036J	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AG90C4M	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	19T511101104	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ502ZM	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AN10KY2	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ43G41	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ41F04	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AMS16N3	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AMH04Y3	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	ANA093E	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 09	750-049136	CABN0410	MPC5E 24XGE OTN Mezz
FPC 1	REV 11	750-045372	CABK8112	MPCE Type 3 3D
CPU	REV 08	711-035209	CABJ6621	HMPC PMB 2G
MIC 0	REV 07	750-033307	CAAZ2897	10X10GE SFPP
PIC 0		BUILTIN	BUILTIN	10X10GE SFPP
Xcvr 0	REV 01	740-021308	AQ501VK	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501YC	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HJF	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43H8D	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	19T511100370	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	153363A00763	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	APH2LXB	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AMCOLVV	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B11F00230	SFP+-10G-SR
MIC 1	REV 14	750-033196	CAAP1390	1X100GE CXP
PIC 2		BUILTIN	BUILTIN	1X100GE CXP
Xcvr 0	REV 01	740-032166	XB11F000M	CFP2-100G-SR10
FPC 2	REV 17	750-037355	CAAS5826	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAR3986	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-021308	T09F43722	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	ALP0KXF	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502FG	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502T7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12J00571	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
Xcvr 0	REV 01	740-031980	AJ71KEH	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11E01355	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11F00249	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
FPC 3	REV 05	750-044444	CAAY9920	MPCE Type 2 3D P
CPU	REV 04	711-038484	CAAW3639	MPCE PMB 2G
MIC 0	REV 28	750-028387	CAAX1083	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	CC07BK05B	XFP-10G-SR
Xcvr 1	REV 01	740-011571	C728XJ00U	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T12L92339	XFP-10G-SR
QXM 0	REV 06	711-028408	CAAW4915	MPC QXM
QXM 1	REV 06	711-028408	CAAW4894	MPC QXM

FPC 4	REV 18	750-046005	CACH5661	MPC5E 3D Q 2CGE+4XGE
CPU	REV 09	711-045719	CACF2880	RMPC PMB
PIC 0		BUILTIN	BUILTIN	2X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-046563	XD16FC03Y	CFP2-100G-SR10
PIC 2		BUILTIN	BUILTIN	2X10GE SFPP OTN
PIC 3		BUILTIN	BUILTIN	1X100GE CFP2 OTN
Xcvr 0	REV 01	740-049775	J13K72997	CFP2-100G-LR4-D
FPC 5	REV 35	750-028467	CAAR2623	MPC 3D 16x 10GE
CPU	REV 11	711-029089	CAAR0491	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ5027T	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ502J0	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ5027S	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ501Y7	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ501YB	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ503EB	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ43HJH	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ43J0Y	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ50352	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ501X6	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQ502NV	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502ZJ	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AQ502H4	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQ43HJK	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJ30CU7	SFP+-10G-SR
FPC 9	REV 30	750-044130	ABCF5773	MPC6E 3D
CPU	REV 09	711-045719	ABCF1270	RMPC PMB
MIC 0	REV 05	750-049457	ABCD7829	2X100GE CFP2 OTN
PIC 0		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0		NON-JNPR	FE13F000K	CFP2-100G-SR10
Xcvr 1	REV 01	740-048813	XD32FE017	CFP2-100G-LR-D
MIC 1	REV 07	750-049457	ABCK2812	2X100GE CFP2 OTN
PIC 1		BUILTIN	BUILTIN	2X100GE CFP2 OTN
Xcvr 0	REV 01	740-048813	XD32FE018	CFP2-100G-SR10
Xcvr 1		NON-JNPR	FE13F000E	CFP2-100G-LR4-D
XLM 0	REV 05.2.00	711-046638	ABCF5915	MPC6E XL
XLM 1	REV 05.2.00	711-046638	ABCF5916	MPC6E XL
FPC 10	REV 36	750-044130	ABCS8602	MPC6E 3D
CPU	REV 09	711-045719	ABCS8779	RMPC PMB
MIC 0	REV 06	750-049979	ABCK2656	24X10GE SFPP OTN
PIC 0		BUILTIN	BUILTIN	24X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQ43J08	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQE1Y2E	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQE1UW4	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQE1MQF	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQGOMN1	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQE1L9M	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQGOMPD	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQE1Y2B	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQGOLT5	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQD2ET4	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQGOMPC	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQGOM63	SFP+-10G-SR
Xcvr 12	REV 01	740-021308	AQGOLT1	SFP+-10G-SR
Xcvr 13	REV 01	740-021308	AQGOM4L	SFP+-10G-SR
Xcvr 14	REV 01	740-021308	AQGOLS7	SFP+-10G-SR

Xcvr 15	REV 01	740-021308	AQE1MQB	SFP+-10G-SR
Xcvr 16	REV 01	740-021308	AQGOLZP	SFP+-10G-SR
Xcvr 17	REV 01	740-021308	AQE1LU9	SFP+-10G-SR
Xcvr 18	REV 01	740-021308	AQGOMRZ	SFP+-10G-SR
Xcvr 19	REV 01	740-021308	AQE1MQ9	SFP+-10G-SR
Xcvr 20	REV 01	740-021308	AQGOLRX	SFP+-10G-SR
Xcvr 21	REV 01	740-021308	AQE1UWD	SFP+-10G-SR
Xcvr 22	REV 01	740-021308	AQGOLT4	SFP+-10G-SR
Xcvr 23	REV 01	740-021308	AQE1MQL	SFP+-10G-SR
MIC 1	REV 12	750-050008	ABCK5372	4X100GE CXP
PIC 1		BUILTIN	BUILTIN	4X100GE CXP
Xcvr 3	REV 01	740-046563	XD16FC02Z	CFP2-100G-SR10
XLM 0	REV 07.2.00	711-046638	ABCK3481	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK4725	MPC6E XL
FPC 17	REV 28	750-044130	ABBZ3873	MPC6E 3D
CPU	REV 08	711-045719	ABBZ3770	RMPD PMB
MIC 0	REV 11	750-046535	ABCC7731	24X10GE SFPP
PIC 0		BUILTIN	BUILTIN	24X10GE SFPP
Xcvr 1	REV 01	740-021308	APK0543	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B10G01119	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQ502SX	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQ43H84	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQ501TB	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQ502JZ	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQ502SC	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQ502JW	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQ502RM	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AHK013B	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQGOMRT	SFP+-10G-SR
Xcvr 13	REV 01	740-031980	AMC0JTC	SFP+-10G-SR
Xcvr 14	REV 01	740-021308	ANAOMQ0	SFP+-10G-SR
Xcvr 15	REV 01	740-021308	AQ502GS	SFP+-10G-SR
Xcvr 16	REV 01	740-021308	AQGOM0J	SFP+-10G-SR
Xcvr 17	REV 01	740-021308	AQGOMUR	SFP+-10G-SR
Xcvr 18	REV 01	740-021308	AQGOMRR	SFP+-10G-SR
Xcvr 19	REV 01	740-021308	AQGOM0F	SFP+-10G-SR
Xcvr 20	REV 01	740-021308	AQ50312	SFP+-10G-SR
Xcvr 21	REV 01	740-021308	AQ5032U	SFP+-10G-SR
Xcvr 22	REV 01	740-021308	APE17B5	SFP+-10G-SR
Xcvr 23	REV 01	740-021309	91D104A00011	SFP+-10G-LR
MIC 1	REV 03	750-050008	ABCC4522	4X100GE CXP
PIC 1		BUILTIN	BUILTIN	4X100GE CXP
Xcvr 0	REV 01	740-046563	XD16FC02U	CFP2-100G-SR10
Xcvr 1	REV 01	740-046563	XC42FC03K	CFP2-100G-SR10
Xcvr 2	REV 01	740-046563	XC42FC01Z	CFP2-100G-SR10
Xcvr 3	REV 01	740-046563	XC42FC02U	CFP2-100G-SR10
XLM 0	REV 04.2.00	711-046638	ABBZ3779	MPC6E XL
XLM 1	REV 04.2.00	711-046638	ABBZ3780	MPC6E XL
FPC 18	REV 39	750-045715	CACD1910	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1817	RMPD PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130194	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130193	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130196	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130191	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130198	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130192	QSFP+-40G-SR4

WAN MEZZ	REV 09	750-049136	CABN0411	MPC5E 24XGE OTN Mezz
FPC 19	REV 39	750-045715	CACD1908	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 09	711-045719	CACD1820	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 0	REV 01	740-021308	AQA0EXJ	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AQG0M6D	SFP+-10G-SR
Xcvr 2	REV 01	740-021308	AQG0LW7	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	AQA0JKB	SFP+-10G-SR
Xcvr 4	REV 01	740-021308	AQG0MTM	SFP+-10G-SR
Xcvr 5	REV 01	740-021308	AQA07NE	SFP+-10G-SR
Xcvr 6	REV 01	740-021308	AQG0M41	SFP+-10G-SR
Xcvr 7	REV 01	740-021308	AQG0MU7	SFP+-10G-SR
Xcvr 8	REV 01	740-021308	AQG0MUG	SFP+-10G-SR
Xcvr 9	REV 01	740-021308	AQG0MMX	SFP+-10G-SR
Xcvr 10	REV 01	740-021308	AQG0M5K	SFP+-10G-SR
Xcvr 11	REV 01	740-021308	AQG0LVZ	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
Xcvr 0	REV 01	740-046565	QD130242	QSFP+-40G-SR4
Xcvr 1	REV 01	740-046565	QD130245	QSFP+-40G-SR4
Xcvr 2	REV 01	740-046565	QD130613	QSFP+-40G-SR4
WAN MEZZ	REV 09	750-049136	CABN0418	MPC5E 24XGE OTN Mezz
ADC 0	REV 17	750-043596	ABCD5378	Adapter Card
ADC 1	REV 17	750-043596	ABCD5465	Adapter Card
ADC 2	REV 17	750-043596	ABCD5431	Adapter Card
ADC 3	REV 17	750-043596	ABCD5356	Adapter Card
ADC 4	REV 02	750-043596	ZW1545	Adapter Card
ADC 5	REV 17	750-043596	ABCD5517	Adapter Card
ADC 18	REV 17	750-043596	ABCD5535	Adapter Card
ADC 19	REV 01	750-043596	ZV4127	Adapter Card
Fan Tray 0	REV 06	760-046960	ACAY0791	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0788	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0755	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0441	172mm FanTray - 6 Fans

show chassis hardware detail (MX2020 Router with MPC5EQ and MPC6E)

```
user@host>show chassis hardware detail
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN120BADBAFJ	MX2020
Midplane	REV 51	750-040240	ABAB9243	Lower Backplane
Midplane 1	REV 04	711-032386	ABAB9399	Upper Backplane
PMP 1	REV 05	711-032428	ACAJ2541	Upper Power Midplane
PMP 0	REV 04	711-032426	ACAJ2194	Lower Power Midplane
FPM Board	REV 13	760-040242	ABCA8835	Front Panel Display
PSM 0	REV 01	740-050037	1EDB32403L5	DC 52V Power Supply
Module				
PSM 1	REV 01	740-050037	1EDB32403L3	DC 52V Power Supply
Module				
PSM 2	REV 01	740-050037	1EDB32403KM	DC 52V Power Supply
Module				
PSM 3	REV 01	740-050037	1EDB3130079	DC 52V Power Supply
Module				
PSM 4	REV 01	740-050037	1EDB3130077	DC 52V Power Supply
Module				
PSM 5	REV 01	740-050037	1EDB3130020	DC 52V Power Supply
Module				

PSM 6 Module	REV 01	740-050037	1EDB313009S	DC 52V Power Supply
PSM 7 Module	REV 01	740-050037	1EDB313008E	DC 52V Power Supply
PSM 8 Module	REV 01	740-050037	1EDB3130063	DC 52V Power Supply
PSM 12 Module	REV 01	740-050037	1EDB3130026	DC 52V Power Supply
PSM 13 Module	REV 01	740-050037	1EDB3130074	DC 52V Power Supply
PSM 14 Module	REV 01	740-050037	1EDB313009D	DC 52V Power Supply
PSM 15 Module	REV 01	740-050037	1EDB3130024	DC 52V Power Supply
PSM 16 Module	REV 01	740-050037	1EDB3130054	DC 52V Power Supply
PSM 17 Module	REV 01	740-050037	1EDB3130080	DC 52V Power Supply
PDM 0	REV 03	740-045234	1EGA3170144	DC Power Dist Module
PDM 1	REV 03	740-045234	1EGA3170158	DC Power Dist Module
PDM 2	REV 03	740-045234	1EGA3170182	DC Power Dist Module
PDM 3	REV 03	740-045234	1EGA3170207	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009112112	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive		VCF P1T0200274310822	113 Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI		11000031656	Disk 1
usb0 (addr 1)	EHCI root hub 0		Intel	uhub0
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub1
DIMM 0	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80			
DIMM 1	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80			
DIMM 2	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80			
DIMM 3	SGU04G72H1BD2SA-BB DIE REV-52 PCB REV-54 MFR ID-ce80			
Routing Engine 1	REV 02	740-041821	9009112087	RE-S-1800x4
ad0 3998 MB	Virtium - TuffDrive		VCF P1T0200274310822	366 Compact Flash
ad1 30533 MB	UGB94BPH32H0S1-KCI		11000039979	Disk 1
CB 0	REV 23	750-040257	CABA2295	Control Board
CB 1	REV 23	750-040257	CABE8379	Control Board
SPMB 0				
SPMB 1				
FPC 0 CPU	REV 39	750-045715	CACD1902	MPC5E 3D Q 24XGE+6XLGE
FPC 1 CPU	REV 11	750-045372	CABK8112	MPCE Type 3 3D
FPC 2 CPU	REV 17	750-037355	CAAS5826	MPC4E 3D 2CGE+8XGE
FPC 3 CPU	REV 05	750-044444	CAAY9920	MPCE Type 2 3D P
FPC 4 CPU	REV 18	750-046005	CACH5661	MPC5E 3D Q 2CGE+4XGE
FPC 5 CPU	REV 35	750-028467	CAAR2623	MPC 3D 16x 10GE
FPC 9 CPU	REV 30	750-044130	ABCF5773	MPC6E 3D
FPC 10 CPU	REV 36	750-044130	ABCS8602	MPC6E 3D
FPC 17 CPU	REV 28	750-044130	ABBZ3873	MPC6E 3D
FPC 18 CPU	REV 39	750-045715	CACD1910	MPC5E 3D Q 24XGE+6XLGE
FPC 19 CPU	REV 39	750-045715	CACD1908	MPC5E 3D Q 24XGE+6XLGE

Fan Tray 0	REV 06	760-046960	ACAY0791	172mm FanTray - 6 Fans
Fan Tray 1	REV 06	760-046960	ACAY0788	172mm FanTray - 6 Fans
Fan Tray 2	REV 06	760-046960	ACAY0755	172mm FanTray - 6 Fans
Fan Tray 3	REV 06	760-046960	ACAY0441	172mm FanTray - 6 Fans

show chassis hardware extensive (MX2020 Router with MPC5EQ and MPC6E)

```

user@host> show chassis hardware extensive

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN120BADBAFJ  MX2020
  Jedec Code:  0x7fb0                EEPROM Version: 0x02
                                     S/N:           JN120BADBAFJ
  Assembly ID: 0x0557                Assembly Version: 00.00
  Date:         00-00-0000           Assembly Flags:  0x00
  ID: MX2020
  Board Information Record:
    Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  I2C Hex Data:
    Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00
    Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
    Address 0x20: 4a 4e 31 32 30 42 41 44 42 41 46 4a 00 00 00 00
    Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
    Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
    Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
    Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
    Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Midplane          REV 51  750-040240  ABAB9243          Lower Backplane
  Jedec Code:  0x7fb0                EEPROM Version: 0x02
  P/N:         750-040240            S/N:           ABAB9243
  Assembly ID: 0x0b22                Assembly Version: 01.51
  Date:        05-30-2013           Assembly Flags:  0x00
  Version:     REV 51               CLEI Code:     IPMU710ARA
  ID: Lower Backplane              FRU Model Number: CHAS-BP-MX2020-S
  Board Information Record:
    Address 0x00: ad 01 10 00 4c 96 14 72 30 08 ff ff ff ff ff ff
  I2C Hex Data:
    Address 0x00: 7f b0 02 ff 0b 22 01 33 52 45 56 20 35 31 00 00
    Address 0x10: 00 00 00 00 37 35 30 2d 30 34 30 32 34 30 00 00
    Address 0x20: 53 2f 4e 20 41 42 41 42 39 32 34 33 00 1e 05 07
    Address 0x30: dd ff ff ff ad 01 10 00 4c 96 14 72 30 08 ff ff
    Address 0x40: ff ff ff ff 01 49 50 4d 55 37 31 30 41 52 41 43
    Address 0x50: 48 41 53 2d 42 50 2d 4d 58 32 30 32 30 2d 53 00
    Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
    Address 0x70: ff ff ff d3 ff ff ff ff ff ff ff ff ff ff ff ff
  Midplane 1        REV 04  711-032386  ABAB9399          Upper Backplane
  Jedec Code:  0x7fb0                EEPROM Version: 0x01
  P/N:         711-032386            S/N:           ABAB9399
  Assembly ID: 0x0b23                Assembly Version: 01.04
  Date:        10-22-2012           Assembly Flags:  0x00
  Version:     REV 04
  ID: Upper Backplane
  Board Information Record:
    Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  I2C Hex Data:
    Address 0x00: 7f b0 01 fe 0b 23 01 04 52 45 56 20 30 34 00 00
    Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 33 38 36 00 00
    Address 0x20: 53 2f 4e 20 41 42 41 42 39 33 39 39 00 16 0a 07
    Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```



```

Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP 1          REV 05   711-032428   ACAJ2541          Upper Power Midplane
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-032428      S/N:           ACAJ2541
Assembly ID:   0x045c          Assembly Version: 01.05
Date:          04-26-2013      Assembly Flags:  0x00
Version:       REV 05
ID: Upper Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5c 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 38 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 32 35 34 31 00 1a 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
PMP 0          REV 04   711-032426   ACAJ2194          Lower Power Midplane
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           711-032426      S/N:           ACAJ2194
Assembly ID:   0x045d          Assembly Version: 01.04
Date:          01-29-2013      Assembly Flags:  0x00
Version:       REV 04
ID: Lower Power Midplane
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 04 5d 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 32 34 32 36 00 00
Address 0x20: 53 2f 4e 20 41 43 41 4a 32 31 39 34 00 1d 01 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board      REV 13   760-040242   ABCA8835          Front Panel Display
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           760-040242      S/N:           ABCA8835
Assembly ID:   0x0b24          Assembly Version: 01.13
Date:          04-13-2013      Assembly Flags:  0x00
Version:       REV 13          CLEI Code:       IPMYAESJRA
ID: Front Panel Display      FRU Model Number: MX2020-CRAFT-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 24 01 0d 52 45 56 20 31 33 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 34 30 32 34 32 00 00
Address 0x20: 53 2f 4e 20 41 42 43 41 38 38 33 35 00 0d 04 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 4d 59 41 45 35 4a 52 41 4d
Address 0x50: 58 32 30 32 30 2d 43 52 41 46 54 2d 53 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff
Address 0x70: ff ff ff 95 ff ff ff ff ff ff ff ff ff ff ff
PSM 0          REV 01   740-050037   1EDB32403L5      DC 52V Power Supply
Module

```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB32403L5
Assembly ID: 0x0478     Assembly Version: 01.01
Date: 06-21-2013       Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 34 30 33 4c 35 00 00 15 06 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 1      REV 01 740-050037 1EDB32403L3 DC 52V Power Supply
Module
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB32403L3
Assembly ID: 0x0478     Assembly Version: 01.01
Date: 06-21-2013       Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 34 30 33 4c 33 00 00 15 06 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 2      REV 01 740-050037 1EDB32403KM DC 52V Power Supply
Module
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB32403KM
Assembly ID: 0x0478     Assembly Version: 01.01
Date: 06-21-2013       Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 32 34 30 33 4b 4d 00 00 15 06 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 3      REV 01 740-050037 1EDB3130079 DC 52V Power Supply
Module
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB3130079
Assembly ID: 0x0478     Assembly Version: 01.01

```

```

Date:          05-16-2013      Assembly Flags:  0x00
Version:       REV 01         CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 31 33 30 30 37 39 00 00 10 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 4          REV 01    740-050037    1EDB3130077    DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:          740-050037      S/N:            1EDB3130077
Assembly ID:   0x0478         Assembly Version: 01.01
Date:         05-17-2013     Assembly Flags:  0x00
Version:       REV 01         CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 31 33 30 30 37 37 00 00 11 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 5          REV 01    740-050037    1EDB3130020    DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:          740-050037      S/N:            1EDB3130020
Assembly ID:   0x0478         Assembly Version: 01.01
Date:         05-16-2013     Assembly Flags:  0x00
Version:       REV 01         CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 33 31 33 30 30 32 30 00 00 10 05 07
  Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 6          REV 01    740-050037    1EDB313009S    DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:          740-050037      S/N:            1EDB313009S
Assembly ID:   0x0478         Assembly Version: 01.01
Date:         05-17-2013     Assembly Flags:  0x00
Version:       REV 01         CLEI Code:      IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S

```

Board Information Record:

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00

Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00

Address 0x20: 31 45 44 42 33 31 33 30 30 39 53 00 00 11 05 07

Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d

Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00

Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff ff

Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

PSM 7 REV 01 740-050037 1EDB313008E DC 52V Power Supply
Module

Jedec Code: 0x7fb0 EEPROM Version: 0x02

P/N: 740-050037 S/N: 1EDB313008E

Assembly ID: 0x0478 Assembly Version: 01.01

Date: 05-17-2013 Assembly Flags: 0x00

Version: REV 01 CLEI Code: IPUPAKRKAA

ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S

Board Information Record:

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00

Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00

Address 0x20: 31 45 44 42 33 31 33 30 30 38 45 00 00 11 05 07

Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d

Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00

Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff ff

Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

PSM 8 REV 01 740-050037 1EDB3130063 DC 52V Power Supply
Module

Jedec Code: 0x7fb0 EEPROM Version: 0x02

P/N: 740-050037 S/N: 1EDB3130063

Assembly ID: 0x0478 Assembly Version: 01.01

Date: 05-17-2013 Assembly Flags: 0x00

Version: REV 01 CLEI Code: IPUPAKRKAA

ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S

Board Information Record:

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00

Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00

Address 0x20: 31 45 44 42 33 31 33 30 30 36 33 00 00 11 05 07

Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d

Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00

Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff ff

Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00

PSM 12 REV 01 740-050037 1EDB3130026 DC 52V Power Supply
Module

Jedec Code: 0x7fb0 EEPROM Version: 0x02

P/N: 740-050037 S/N: 1EDB3130026

Assembly ID: 0x0478 Assembly Version: 01.01

Date: 05-16-2013 Assembly Flags: 0x00

Version: REV 01 CLEI Code: IPUPAKRKAA

ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S

Board Information Record:

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

I2C Hex Data:

```

Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 32 36 00 00 10 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 13          REV 01   740-050037   1EDB3130074          DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB3130074
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-17-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 37 34 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 14          REV 01   740-050037   1EDB313009D          DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB313009D
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-17-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 33 31 33 30 30 39 44 00 00 11 05 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4b 52 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 2a 00 00 00 00 00 00 00 00 00 00 00 00
PSM 15          REV 01   740-050037   1EDB3130024          DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-050037      S/N:              1EDB3130024
Assembly ID:   0x0478          Assembly Version:  01.01
Date:          05-16-2013      Assembly Flags:    0x00
Version:       REV 01          CLEI Code:         IPUPAKRKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 01 52 45 56 20 30 31 00 00
...
```

show chassis hardware models (MX2020 Routers with MPC5EQ and MPC6E)

```
user@host> show chassis hardware models
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 51	750-040240	ABAB9243	CHAS-BP-MX2020-S
FPM Board	REV 13	760-040242	ABCA8835	MX2020-CRAFT-S
PSM 0	REV 01	740-050037	1EDB32403L5	MX2000-PSM-DC-S
PSM 1	REV 01	740-050037	1EDB32403L3	MX2000-PSM-DC-S
PSM 2	REV 01	740-050037	1EDB32403KM	MX2000-PSM-DC-S
PSM 3	REV 01	740-050037	1EDB3130079	MX2000-PSM-DC-S
PSM 4	REV 01	740-050037	1EDB3130077	MX2000-PSM-DC-S
PSM 5	REV 01	740-050037	1EDB3130020	MX2000-PSM-DC-S
PSM 6	REV 01	740-050037	1EDB313009S	MX2000-PSM-DC-S
PSM 7	REV 01	740-050037	1EDB313008E	MX2000-PSM-DC-S
PSM 8	REV 01	740-050037	1EDB3130063	MX2000-PSM-DC-S
PSM 12	REV 01	740-050037	1EDB3130026	MX2000-PSM-DC-S
PSM 13	REV 01	740-050037	1EDB3130074	MX2000-PSM-DC-S
PSM 14	REV 01	740-050037	1EDB313009D	MX2000-PSM-DC-S
PSM 15	REV 01	740-050037	1EDB3130024	MX2000-PSM-DC-S
PSM 16	REV 01	740-050037	1EDB3130054	MX2000-PSM-DC-S
PSM 17	REV 01	740-050037	1EDB3130080	MX2000-PSM-DC-S
PDM 0	REV 03	740-045234	1EGA3170144	MX2000-PDM-DC-S
PDM 1	REV 03	740-045234	1EGA3170158	MX2000-PDM-DC-S
PDM 2	REV 03	740-045234	1EGA3170182	MX2000-PDM-DC-S
PDM 3	REV 03	740-045234	1EGA3170207	MX2000-PDM-DC-S
Routing Engine 0	REV 02	740-041821	9009112112	RE-MX2000-1800X4-S
Routing Engine 1	REV 02	740-041821	9009112087	RE-MX2000-1800X4-S
CB 0	REV 23	750-040257	CABA2295	RE-MX2000-1800X4-S
CB 1	REV 23	750-040257	CABE8379	RE-MX2000-1800X4-S
SFB 0	REV 06	711-044466	ABCD5001	MX2000-SFB-S
SFB 1	REV 06	711-044466	ABCD5034	MX2000-SFB-S
SFB 2	REV 06	711-044466	ABCH3899	MX2000-SFB-S
SFB 3	REV 06	711-044466	ABCD5020	MX2000-SFB-S
SFB 4	REV 06	711-044466	ABCD4975	MX2000-SFB-S
SFB 5	REV 06	711-044466	ABCH3881	MX2000-SFB-S
SFB 6	REV 06	711-044466	ABCD5026	MX2000-SFB-S
SFB 7	REV 06	711-044466	ABCD5032	MX2000-SFB-S
FPC 0	REV 39	750-045715	CACD1902	PROTO-ASSEMBLY
FPC 1	REV 11	750-045372	CABK8112	MX-MPC3E-3D
FPC 2	REV 17	750-037355	CAAS5826	MPC4E-3D-2CGE-8XGE
FPC 3	REV 05	750-044444	CAAY9920	MX-MPC2E-3D-P
FPC 4	REV 18	750-046005	CACH5661	PROTO-ASSEMBLY
FPC 5	REV 35	750-028467	CAAR2623	MPC-3D-16XGE-SFPP
FPC 9	REV 30	750-044130	ABCF5773	PROTO-ASSEMBLY
FPC 10	REV 36	750-044130	ABCS8602	PROTO-ASSEMBLY
FPC 17	REV 28	750-044130	ABBZ3873	PROTO-ASSEMBLY
FPC 18	REV 39	750-045715	CACD1910	PROTO-ASSEMBLY
FPC 19	REV 39	750-045715	CACD1908	PROTO-ASSEMBLY
ADC 0	REV 17	750-043596	ABCD5378	MX2000-LC-ADAPTER
ADC 1	REV 17	750-043596	ABCD5465	MX2000-LC-ADAPTER
ADC 2	REV 17	750-043596	ABCD5431	MX2000-LC-ADAPTER
ADC 3	REV 17	750-043596	ABCD5356	MX2000-LC-ADAPTER
ADC 4	REV 02	750-043596	ZW1545	750-043596
ADC 5	REV 17	750-043596	ABCD5517	MX2000-LC-ADAPTER
ADC 18	REV 17	750-043596	ABCD5535	MX2000-LC-ADAPTER
ADC 19	REV 01	750-043596	ZV4127	750-043596
Fan Tray 0	REV 06	760-046960	ACAY0791	MX2000-FANTRAY-S
Fan Tray 1	REV 06	760-046960	ACAY0788	MX2000-FANTRAY-S

Fan Tray 2	REV 06	760-046960	ACAY0755	MX2000-FANTRAY-S
Fan Tray 3	REV 06	760-046960	ACAY0441	MX2000-FANTRAY-S

show chassis hardware clei-models (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 51	750-040240	IPMU710ARA	CHAS-BP-MX2020-S
FPM Board	REV 13	760-040242	IPMYAE5JRA	MX2020-CRAFT-S
PSM 0	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 1	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 2	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 3	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 4	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 5	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 6	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 7	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 8	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 12	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 13	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 14	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 15	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 16	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PSM 17	REV 01	740-050037	IPUPAKRKAA	MX2000-PSM-DC-S
PDM 0	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
PDM 1	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
PDM 2	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
PDM 3	REV 03	740-045234	IPUPAJSKAA	MX2000-PDM-DC-S
CB 0	REV 23	750-040257	IPUCBA7CTA	RE-MX2000-1800X4-S
CB 1	REV 23	750-040257	IPUCBA7CTA	RE-MX2000-1800X4-S
SFB 0	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 1	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 2	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 3	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 4	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 5	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 6	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
SFB 7	REV 06	711-044466	IPUCBA6CAA	MX2000-SFB-S
FPC 0	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 1	REV 11	750-045372	COUIBBNBAA	MX-MPC3E-3D
FPC 2	REV 17	750-037355	IPU3A4DHAA	MPC4E-3D-2CGE-8XGE
FPC 3	REV 05	750-044444	COUIBBGBAA	MX-MPC2E-3D-P
MIC 0	REV 28	750-028387	COUIA16BAA	MIC-3D-4XGE-XFP
FPC 4	REV 18	750-046005	PROTOXCLEI	PROTO-ASSEMBLY
FPC 5	REV 35	750-028467		MPC-3D-16XGE-SFPP
FPC 9	REV 30	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 05	750-049457	PROTOXCLEI	PROTO-ASSEMBLY
FPC 10	REV 36	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 06	750-049979	PROTOXCLEI	PROTO-ASSEMBLY
MIC 1	REV 12	750-050008	PROTOXCLEI	PROTO-ASSEMBLY
FPC 17	REV 28	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 1	REV 03	750-050008	PROTOXCLEI	PROTO-ASSEMBLY
FPC 18	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
FPC 19	REV 39	750-045715	PROTOXCLEI	PROTO-ASSEMBLY
ADC 0	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 1	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 2	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 3	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER

ADC 4	REV 02	750-043596	PROTOXCLEI	750-043596
ADC 5	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 18	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER
ADC 19	REV 01	750-043596	PROTOXCLEI	750-043596
Fan Tray 0	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S
Fan Tray 1	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S
Fan Tray 2	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S
Fan Tray 3	REV 06	760-046960	IPUCBA5CAA	MX2000-FANTRAY-S

show chassis hardware (MX Series routers with ATM MIC)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN115736EAFc	MX240
Midplane	REV 07	760-021404	ABAA5038	MX240 Backplane
FPM Board	REV 03	760-021392	ABBA2758	Front Panel Display
PEM 0	Rev 01	740-022697	QCS0937C07K	PS 1.2-1.7kW; 100-240V
AC in				
PEM 1	Rev 01	740-022697	QCS0939C04X	PS 1.2-1.7kW; 100-240V
AC in				
PEM 2	Rev 01	740-022697	QCS0937C06B	PS 1.2-1.7kW; 100-240V
AC in				
PEM 3	Rev 01	740-022697	QCS0937C07U	PS 1.2-1.7kW; 100-240V
AC in				
Routing Engine 0	REV 12	740-013063	9009042291	RE-S-2000
Routing Engine 1	REV 12	740-013063	9009042266	RE-S-2000
CB 0	REV 06	710-021523	ABBC1435	MX SCB
CB 1	REV 06	710-021523	ABBC1497	MX SCB
FPC 2	REV 14	750-031088	YH8446	MPC Type 2 3D Q
CPU	REV 06	711-030884	YH9612	MPC PMB 2G
MIC 0				
MIC 1	REV 10	750-036132	ZP7062	2x0C12/8x0C3 CC-CE
PIC 2		BUILTIN	BUILTIN	2x0C12/8x0C3 CC-CE
Xcvr 0	NON-JNPR	23393-00492		UNKNOWN
Xcvr 1	NON-JNPR	23393-00500		UNKNOWN
Xcvr 2	NON-JNPR	23393-00912		UNKNOWN
Xcvr 3	REV 01	740-015638	22216-00575	Load SFP
Xcvr 4	REV 01	740-015638	24145-00110	Load SFP
Xcvr 5	REV 01	740-015638	24145-00016	Load SFP
Xcvr 6	REV 01	740-015638	24145-00175	Load SFP
Xcvr 7	NON-JNPR	23393-00627		UNKNOWN
QXM 0	REV 05	711-028408	YF4681	MPC QXM
QXM 1	REV 05	711-028408	YF4817	MPC QXM
Fan Tray 0	REV 01	710-021113	XL3645	MX240 Fan Tray

show chassis hardware (MX240, MX480, MX960 routers with Application Services Modular Line Card)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11D969BAFA	MX960
Midplane	REV 03	710-013698	ACAA2362	MX960 Backplane

FPM Board	REV 03	710-014974	ZR0639	Front Panel Display
PDM	Rev 03	740-013110	QCS152250SX	Power Distribution Module
PEM 0	Rev 10	740-013683	QCS1512718W	DC Power Entry Module
PEM 1	Rev 10	740-013683	QCS1512702Y	DC Power Entry Module
Routing Engine 0	REV 15	740-013063	9012024667	RE-S-2000
Routing Engine 1	REV 15	740-013063	9012024649	RE-S-2000
CB 0	REV 14	750-031391	ZJ7749	Enhanced MX SCB
CB 1	REV 14	750-031391	ZJ7750	Enhanced MX SCB
CB 2	REV 14	750-031391	ZY9233	Enhanced MX SCB
FPC 0	REV 17	750-031089	YR7434	MPC Type 2 3D
CPU				
FPC 1	REV 11	750-037207	ZW9727	AS-MCC
CPU	REV 04	711-038173	ZW4817	AS-MCC-PMB
MIC 0	REV 01	750-037214	ZH3764	AS-MSC
PIC 0		BUILTIN	BUILTIN	AS-MSC
MIC 1	REV 01	711-028408	JZ9200	AS-MXC
PIC 2		BUILTIN	BUILTIN	AS-MXC
FPC 4	REV 30	750-028467	ABBN0232	MPC 3D 16x 10GE
CPU				
FPC 5	REV 04	750-037207	ZK9074	AS-MCC
CPU				
Fan Tray 0	REV 05	740-014971	VT5683	Fan Tray
Fan Tray 1	REV 05	740-014971	VT5684	Fan Tray

show chassis hardware extensive (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host> show chassis hardware extensive
```

```
ID: AS-MCC                      FRU Model Number: 750-037207
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff I2C Hex Data:
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 30 37 00 00
Address 0x20: 53 2f 4e 20 5a 57 39 37 32 37 00 00 00 11 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 35 30 2d 30 33 37 32 30 37 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 31 31 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 5e ff ff ff ff ff ff ff ff ff ff ff ff
CPU                      REV 04      711-038173      ZW4817          AS-MCC-PMB
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 711-038173        S/N: ZW4817
Assembly ID: 0x0b38     Assembly Version: 01.04
Date: 12-30-2011       Assembly Flags: 0x00
Version: REV 04
ID: AS-MCC-PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff I2C Hex Data:
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 38 31 37 33 00 00
Address 0x20: 53 2f 4e 20 5a 57 34 38 31 37 00 00 00 1e 0c 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 31 31 2d 30 33 38 31 37 33 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 30 34 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 60 00 00 00 00 00 00 00 00 00 00 00 00
MIC 0                   REV 01      750-037214      ZH3764          AS-MSC
```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 750-037214        S/N: ZH3764
Assembly ID: 0x0a44     Assembly Version: 01.01
Date: 07-04-2011       Assembly Flags: 0x00
Version: REV 01
ID: AS-MSC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff I2C Hex Data:
Address 0x00: 7f b0 02 ff 0a 44 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 31 34 00 00
Address 0x20: 53 2f 4e 20 5a 48 33 37 36 34 00 00 00 04 07 07
Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 ff ff ff ff ff
Address 0x70: ff ff ff f6 c0 03 e1 bc 00 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN      AS-MSC
FPC 4          REV 30      750-028467  ABBN0232      MPC 3D 16x 10GE
Jedec Code: 0x7fb0      EEPROM Version: 0x01

```

show chassis hardware (MX480 Router with MPC4E)

```
user@host> show chassis hardware
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN10FF57BAFB  MX480
Midplane      REV 05   750-047849   Good           MX480 Midplane
FPM Board     REV 02   710-017254   KG2066         Front Panel Display
PEM 0         Rev 03   740-017330   QCS081590BJ    PS 1.2-1.7kW; 100-240V
AC in
PEM 1         Rev 03   740-017330   QCS0815908Z    PS 1.2-1.7kW; 100-240V
AC in
PEM 2         Rev 03   740-029970   QCS1001U001    PS 1.4-2.52kW; 90-264V
AC in
Routing Engine 0 REV 05   740-031116   9009089502     RE-S-1800x4
Routing Engine 1 REV 05   740-031116   9009089624     RE-S-1800x4
CB 0          REV 02   750-031391   YE8506         Enhanced MX SCB
CB 1          REV 14   750-031391   ZK8265         Enhanced MX SCB
FPC 2         REV 05   750-037358   ZT0638         MPC4E 3D 32XGE
CPU           REV 07   711-035209   ZK3187         HMPD PMB 2G
PIC 0          BUILTIN  BUILTIN        8X10GE SFPP
PIC 1          BUILTIN  BUILTIN        8X10GE SFPP
PIC 2          BUILTIN  BUILTIN        8X10GE SFPP
PIC 3          BUILTIN  BUILTIN        8X10GE SFPP
FPC 3         REV 06   750-037355   CAAB1144       MPC4E 3D 2CGE+8XGE
CPU           REV 08   711-035209   CAAB1278       HMPD PMB 2G
PIC 0          BUILTIN  BUILTIN        4x10GE SFPP
Xcvr 0        REV 01   740-031980   B11E01439     SFP+-10G-SR
Xcvr 1        REV 01   740-031980   B11D05809     SFP+-10G-SR
PIC 1          BUILTIN  BUILTIN        1X100GE CFP
Xcvr 0        NON-JNPR D5418         UNKNOWN
PIC 2          BUILTIN  BUILTIN        4x10GE SFPP
PIC 3          BUILTIN  BUILTIN        1X100GE CFP
Xcvr 0        NON-JNPR X12J00362     CFP-100G-SR10
FPC 4         REV 12.3.10 750-033205   YR9445         MPCE Type 3 3D
CPU
Fan Tray                               Enhanced Left Fan Tray

```

show chassis hardware (MX2020 Router with MPC4E)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11E188CAFJ	MX2020
Midplane				Lower Backplane
Midplane 1	REV 04	711-032387	ABAC7474	Upper Backplane
PMP 1	REV 03	711-032428	ACAJ1137	Upper Power Midplane
PMP 0	REV 03	711-032426	ACAJ1016	Lower Power Midplane
FPM Board	REV 06	760-040242	ABBT8832	Front Panel Display
PSM 3	REV 0C	740-033727	VK00255	DC 52V Power Supply
Module				
PSM 4	REV 0C	740-033727	VJ00148	DC 52V Power Supply
Module				
PSM 5	REV 0C	740-033727	VK00207	DC 52V Power Supply
Module				
PSM 6	REV 0C	740-033727	VK00319	DC 52V Power Supply
Module				
PSM 7	REV 0C	740-033727	VK00264	DC 52V Power Supply
Module				
PSM 8	REV 0B	740-033727	VG00025	DC 52V Power Supply
Module				
PSM 13	REV 0C	740-033727	VK00274	DC 52V Power Supply
Module				
PSM 14	REV 0C	740-033727	VJ00167	DC 52V Power Supply
Module				
PSM 15	REV 0C	740-033727	VK00299	DC 52V Power Supply
Module				
PSM 16	REV 0C	740-033727	VK00213	DC 52V Power Supply
Module				
PSM 17	REV 0C	740-033727	VK00253	DC 52V Power Supply
Module				
PDM 0	REV 0B	740-038109	VJ00040	DC Power Dist Module
PDM 2	REV 0B	740-038109	VJ00025	DC Power Dist Module
Routing Engine 0	REV 02	740-041821	9009089735	RE-S-1800x4
Routing Engine 1	REV 02	740-041821	9009089731	RE-S-1800x4
CB 0	REV 04	750-040257	ZT2846	Control Board
CB 1	REV 04	750-040257	ZT2877	Control Board
SPMB 0	REV 01	711-041855	ZS2282	PMB Board
SPMB 1	REV 01	711-041855	ZS2261	PMB Board
SFB 0	REV 07	711-032385	ZZ2582	Switch Fabric Board
SFB 1	REV 04	711-032385	ZV4229	Switch Fabric Board
SFB 2	REV 07	711-032385	CAAB4902	Switch Fabric Board
SFB 3	REV 07	711-032385	CAAB4891	Switch Fabric Board
SFB 4	REV 07	711-032385	CAAB4883	Switch Fabric Board
SFB 5	REV 07	711-032385	CAAB4889	Switch Fabric Board
SFB 6	REV 06	711-032385	ZV1818	Switch Fabric Board
SFB 7	REV 07	711-032385	CAAB4897	Switch Fabric Board
FPC 0	REV 34	750-031090	ZT9799	MPC Type 2 3D EQ
CPU	REV 06	711-030884	ZS1122	MPC PMB 2G
MIC 0	REV 11	750-033535	CAAD7674	MIC-3D-10C192-XFP
PIC 0		BUILTIN	BUILTIN	MIC-3D-10C192-XFP
Xcvr 0	REV 01	740-014279	753019A00404	XFP-OC192-SR
MIC 1	REV 14	750-031967	ZM6103	MIC-3D-80C30C12-40C48
PIC 2		BUILTIN	BUILTIN	MIC-3D-80C30C12-40C48
Xcvr 0	REV 01	740-011615	PEF1AZP	SFP-IR
Xcvr 1	REV 01	740-011615	PEF1AZN	SFP-IR
Xcvr 2	REV 01	740-021308	ANA0N8S	SFP+-10G-SR
QXM 0	REV 06	711-028408	ZT9339	MPC QXM

QXM 1	REV 06	711-028408	ZT9237	MPC QXM
FPC 9	REV 34	750-031090	ZT9770	MPC Type 2 3D EQ
CPU	REV 06	711-030884	ZS1302	MPC PMB 2G
MIC 0	REV 24	750-028387	YJ3950	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0		NON-JNPR	T09M52516	XFP-10G-SR
Xcvr 1		NON-JNPR	CA49BK095	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 02	740-014289	C834XU01T	XFP-10G-SR
Xcvr 1		NON-JNPR	T09M52515	XFP-10G-SR
MIC 1	REV 11	750-033535	CAAD7681	MIC-3D-10C192-XFP
PIC 2		BUILTIN	BUILTIN	MIC-3D-10C192-XFP
Xcvr 0	REV 01	740-014279	KBQ02BE	XFP-0C192-SR
QXM 0	REV 06	711-028408	ZT9151	MPC QXM
QXM 1	REV 06	711-028408	ZT9116	MPC QXM
FPC 10	REV 27	750-033205	ZL6215	MPCE Type 3 3D
CPU	REV 07	711-035209	ZK9038	HMPC PMB 2G
MIC 0	REV 18	750-028380	YG6885	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 01	740-014289	C706XU0AG	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	T08L84366	XFP-10G-SR
FPC 14	REV 09	750-037355	CAAF1534	MPC4E 3D 2CGE+8XGE
CPU	REV 08	711-035209	CAAB9879	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFP+
Xcvr 0	REV 01	740-021308	21T511100436	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AHPOGPM	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	123363A00032	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	19T511100477	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12J00260	CFP-100G-SR10
PIC 2		BUILTIN	BUILTIN	4x10GE SFP+
Xcvr 0	REV 01	740-021308	21T511104086	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	21T511104627	SFP+-10G-SR
Xcvr 3	REV 01	740-021308	21T511104644	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
FPC 19	REV 32	750-028467	ZR2008	MPC 3D 16x 10GE
CPU	REV 10	711-029089	ZT6933	AMPC PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	19T511100291	SFP+-10G-SR
Xcvr 1	REV 01	740-021308	AMH02VE	SFP+-10G-SR
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	23T511102128	SFP+-10G-SR
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-021308	AMS15PP	SFP+-10G-SR
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	123363A00716	SFP+-10G-SR
ADC 0	REV 05	750-043596	CAAC2072	Adapter Card
ADC 9	REV 01	750-043596	ZV4111	Adapter Card
ADC 10	REV 05	750-043596	CAAC2058	Adapter Card
ADC 14	REV 02	750-043596	ZW1561	Adapter Card
ADC 19	REV 01	750-043596	ZV4127	Adapter Card
Fan Tray 0	REV 03	760-046960	ACAY0124	172mm FanTray - 6 Fans
Fan Tray 1	REV 2A	760-046960	ACAY0022	172mm FanTray - 6 Fans
Fan Tray 2	REV 2A	760-046960	ACAY0023	172mm FanTray - 6 Fans
Fan Tray 3	REV 2A	760-046960	ACAY0025	172mm FanTray - 6 Fans

show chassis hardware (MX5, MX10, MX40, MX80, MX240, MX480, and MX960 Routers with Enhanced 20-Port Gigabit Ethernet MIC)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			F3434	MX80-P
Midplane	REV 01	711-044315	ZK2681	MX80-P
PEM 0	Rev 04	740-028288	VE05267	AC Power Entry Module
PEM 1	Rev 04	740-028288	VE05270	AC Power Entry Module
Routing Engine		BUILTIN	BUILTIN	Routing Engine
TFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
QXM 0	REV 05	711-028408	ZK0952	MPC QXM
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	4x 10GE XFP
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 02	750-049846	CAAV2153	3D 20x 1GE(LAN)-E,SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) -E SFP
Xcvr 0	REV 01	740-011613	AM0816S9B81	SFP-SX
Xcvr 1	REV 02	740-011613	AM0925SBLK7	SFP-SX
Xcvr 2	REV 01	740-011613	UAQ0005	SFP-SX
Xcvr 3	REV 01	740-011613	UAQ000C	SFP-SX
Xcvr 4	REV 01	740-011613	P9F195E	SFP-SX
Xcvr 5	REV 01	740-011613	UAQ0003	SFP-SX
Xcvr 6	REV 01	740-031851	AM1041SU1LD	SFP-SX
Xcvr 8	REV 02	740-013111	B101501	SFP-T
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) -E SFP
Xcvr 0	REV 01	740-011613	PFM1ML7	SFP-SX
Xcvr 4	REV 01	740-011613	PE729P6	SFP-SX
Xcvr 6	REV 02	740-011613	AM1014SGC84	SFP-SX
Xcvr 9	REV 01	740-011613	AM0812S8UK3	SFP-SX
MIC 1	REV 26	750-028392	ZY0187	3D 20x 1GE(LAN) SFP
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011613	P9F1AN9	SFP-SX
Xcvr 5	REV 02	740-011613	AM1003SFUF4	SFP-SX
Xcvr 9	REV 01	740-031851	AM1041SU1LM	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 4	REV 01	740-011613	PAJ4MYT	SFP-SX
Xcvr 7	+	NON-JNPR	XG32A024	SFP-SX
Xcvr 8		NON-JNPR	PFROV6J	SFP-SX
Xcvr 9	REV 01	740-031851	AM1041SU02U	SFP-SX
Fan Tray				

show chassis hardware models (MX5, MX10, MX40, MX80, MX240, MX480, and MX960 Routers with Enhanced 20-Port Gigabit Ethernet MIC)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
PEM 0	Rev 04	740-028288	VE05267	PWR-MX80-AC-S
PEM 1	Rev 04	740-028288	VE05270	PWR-MX80-AC-S
Routing Engine		BUILTIN	BUILTIN	
TFEB 0		BUILTIN	BUILTIN	
FPC 0		BUILTIN	BUILTIN	
FPC 1		BUILTIN	BUILTIN	
MIC 0	REV 02	750-049846	CAAV2153	MIC-3D-20GE-SFP-E

MIC 1 Fan Tray	REV 26	750-028392	ZY0187	MIC-3D-20GE-SFP FANTRAY-MX80-S
-------------------	--------	------------	--------	-----------------------------------

show chassis hardware (MX2008 Router)

user@host>show chassis hardware

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1259E1CAFL	MX2008
Midplane	REV 47	750-044636	ABAD1739	Lower Backplane
PMP	REV 01	711-051406	ACVD0738	Power Midplane
FPM Board	REV 02	760-068193	ABDG7408	Front Panel Display
PSM 1	REV 06	740-050037	1EDB61200R8	DC 52V Power Supply
Module				
PSM 2	REV 06	740-050037	1EDB61200WA	DC 52V Power Supply
Module				
PSM 3	REV 06	740-050037	1EDB61200NY	DC 52V Power Supply
Module				
PSM 4	REV 06	740-050037	1EDB61200N2	DC 52V Power Supply
Module				
PSM 5	REV 06	740-050037	1EDB61200RN	DC 52V Power Supply
Module				
PSM 6	REV 06	740-050037	1EDB61200RF	DC 52V Power Supply
Module				
PSM 7	REV 06	740-050037	1EDB61200R7	DC 52V Power Supply
Module				
PDM 0	REV 01	740-060189	1EFF5250143	DC PDM Optimized
PDM 1	REV 01	740-060189	1EFF5250074	DC PDM Optimized
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x8
Routing Engine 1		BUILTIN	BUILTIN	RE-S-2X00x8
CB 0	REV 01	750-067373	ABDJ0047	Control Board
CB 1	REV 03	750-067373	ABDH3016	Control Board
SFB 0	REV 08	750-067371	ABDK7180	Switch Fabric Board
SFB 1	REV 08	750-067371	ABDK7024	Switch Fabric Board
SFB 2	REV 08	750-067371	ABDK7188	Switch Fabric Board
SFB 3	REV 08	750-067371	ABDK7143	Switch Fabric Board
SFB 4	REV 08	750-067371	ABDK7030	Switch Fabric Board
SFB 5	REV 08	750-067371	ABDK7146	Switch Fabric Board
SFB 6	REV 08	750-067371	ABDK7203	Switch Fabric Board
SFB 7	REV 08	750-067371	ABDK7238	Switch Fabric Board
FPC 0	REV 36	750-044130	ABCS8607	MPC6E 3D
CPU	REV 09	711-045719	ABCS8776	RMPCE PMB
MIC 0	REV 21	750-050008	ABCT5920	4X100GE CXP
PIC 0		BUILTIN	BUILTIN	4X100GE CXP
XLM 0	REV 07.2.00	711-046638	ABCK3488	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5482	MPC6E XL
FPC 1	REV 22	750-063414	CAFJ3026	MPC9E 3D
CPU	REV 16	750-057177	CAFF9332	SMPC PMB
FPC 7	REV 08	750-038492	ZX4080	MPCE Type 2 3D EQ
CPU	REV 03	711-038484	ZX3665	MPCE PMB 2G
MIC 0	REV 05	750-037128	ZR4031	1xCOC12/4xCOC3 CH-CE
PIC 0		BUILTIN	BUILTIN	1xCOC12/4xCOC3 CH-CE
MIC 1	REV 23	750-032479	CADE8614	MIC-3D-8DS3-E3
PIC 2		BUILTIN	BUILTIN	MIC-3D-8DS3-E3
QXM 0	REV 06	711-028408	ZW8299	MPC QXM
QXM 1	REV 06	711-028408	ZY0609	MPC QXM
ADC 7	REV 17	750-043596	ABCA0990	Adapter Card
Fan Tray 0	REV 01	760-052467	ACAY6190	172mm FanTray - 6 Fans
Fan Tray 1	REV 01	760-052467	ACAY6414	172mm FanTray - 6 Fans

show chassis hardware detail (MX2008 Router)

user@host>show chassis hardware detail

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1259E1CAFL	MX2008
Midplane	REV 47	750-044636	ABAD1739	Lower Backplane
PMP	REV 01	711-051406	ACVD0738	Power Midplane
FPM Board	REV 02	760-068193	ABDG7408	Front Panel Display
PSM 1	REV 06	740-050037	1EDB61200R8	DC 52V Power Supply
Module				
PSM 2	REV 06	740-050037	1EDB61200WA	DC 52V Power Supply
Module				
PSM 3	REV 06	740-050037	1EDB61200NY	DC 52V Power Supply
Module				
PSM 4	REV 06	740-050037	1EDB61200N2	DC 52V Power Supply
Module				
PSM 5	REV 06	740-050037	1EDB61200RN	DC 52V Power Supply
Module				
PSM 6	REV 06	740-050037	1EDB61200RF	DC 52V Power Supply
Module				
PSM 7	REV 06	740-050037	1EDB61200R7	DC 52V Power Supply
Module				
PDM 0	REV 01	740-060189	1EFF5250143	DC PDM Optimized
PDM 1	REV 01	740-060189	1EFF5250074	DC PDM Optimized
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x8
vtbd0 15361 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 511 MB	QEMU HARDDISK		QM00002	Emulated IDE Disk
usb0 (addr 1)	XHCI root HUB 0		0x8086	uhub0
Routing Engine 1		BUILTIN	BUILTIN	RE-S-2X00x8
vtbd0 15361 MB				Virtio Block Disk
vtbd1 15360 MB				Virtio Block Disk
ada0 511 MB	QEMU HARDDISK		QM00002	Emulated IDE Disk
usb0 (addr 1)	XHCI root HUB 0		0x8086	uhub0
CB 0	REV 01	750-067373	ABDJ0047	Control Board
CB 1	REV 03	750-067373	ABDH3016	Control Board
SFB 0	REV 08	750-067371	ABDK7180	Switch Fabric Board
SFB 1	REV 08	750-067371	ABDK7024	Switch Fabric Board
SFB 2	REV 08	750-067371	ABDK7188	Switch Fabric Board
SFB 3	REV 08	750-067371	ABDK7143	Switch Fabric Board
SFB 4	REV 08	750-067371	ABDK7030	Switch Fabric Board
SFB 5	REV 08	750-067371	ABDK7146	Switch Fabric Board
SFB 6	REV 08	750-067371	ABDK7203	Switch Fabric Board
SFB 7	REV 08	750-067371	ABDK7238	Switch Fabric Board
FPC 0	REV 36	750-044130	ABCS8607	MPC6E 3D
CPU	REV 09	711-045719	ABCS8776	RMPC PMB
MIC 0	REV 21	750-050008	ABCT5920	4X100GE CXP
PIC 0		BUILTIN	BUILTIN	4X100GE CXP
XLM 0	REV 07.2.00	711-046638	ABCK3488	MPC6E XL
XLM 1	REV 07.2.00	711-046638	ABCK5482	MPC6E XL
FPC 1	REV 22	750-063414	CAFJ3026	MPC9E 3D
CPU	REV 16	750-057177	CAFF9332	SMPC PMB
FPC 7	REV 08	750-038492	ZX4080	MPCE Type 2 3D EQ
CPU	REV 03	711-038484	ZX3665	MPCE PMB 2G
MIC 0	REV 05	750-037128	ZR4031	1xCOC12/4xCOC3 CH-CE
PIC 0		BUILTIN	BUILTIN	1xCOC12/4xCOC3 CH-CE
MIC 1	REV 23	750-032479	CADE8614	MIC-3D-8DS3-E3
PIC 2		BUILTIN	BUILTIN	MIC-3D-8DS3-E3

QXM 0	REV 06	711-028408	ZW8299	MPC QXM
QXM 1	REV 06	711-028408	ZY0609	MPC QXM
ADC 7	REV 17	750-043596	ABCA0990	Adapter Card
Fan Tray 0	REV 01	760-052467	ACAY6190	172mm FanTray - 6 Fans
Fan Tray 1	REV 01	760-052467	ACAY6414	172mm FanTray - 6 Fans

show chassis hardware extensive (MX2008 Router)

```
user@host>show chassis hardware extensive
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1259E1CAFL	MX2008
Jedec Code:	0x7fb0		EEPROM Version:	0x02
			S/N:	JN1259E1CAFL
Assembly ID:	0x0557		Assembly Version:	00.00
Date:	00-00-0000		Assembly Flags:	0x00
ID:	MX2008			

Board Information Record:

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 57 00 00 00 00 00 00 00 00 00 00
 Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x20: 4a 4e 31 32 35 39 45 31 43 41 46 4c 00 00 00 00
 Address 0x30: 00 00 00 ff 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Midplane	REV 47	750-044636	ABAD1739	Lower Backplane
----------	--------	------------	----------	-----------------

Jedec Code:	0x7fb0	EEPROM Version:	0x02
P/N:	750-044636	S/N:	ABAD1739
Assembly ID:	0x0b66	Assembly Version:	01.47
Date:	06-08-2016	Assembly Flags:	0x00
Version:	REV 47	CLEI Code:	IPMU810ARB
ID:	Lower Backplane	FRU Model Number:	CHAS-BP-MX2010-S

Board Information Record:

Address 0x00: ad 01 08 00 f4 cc 55 3e 35 00 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 ff 0b 66 01 2f 52 45 56 20 34 37 00 00
 Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 36 33 36 00 00
 Address 0x20: 53 2f 4e 20 41 42 41 44 31 37 33 39 00 08 06 07
 Address 0x30: e0 ff ff ff ad 01 08 00 f4 cc 55 3e 35 00 ff ff
 Address 0x40: ff ff ff ff 01 49 50 4d 55 38 31 30 41 52 42 43
 Address 0x50: 48 41 53 2d 42 50 2d 4d 58 32 30 31 30 2d 53 00
 Address 0x60: 00 00 00 00 00 00 42 43 00 ff ff ff ff ff ff
 Address 0x70: ff ff ff 18 ff ff ff ff ff ff ff ff ff ff ff ff

PMP	REV 01	711-051406	ACVD0738	Power Midplane
-----	--------	------------	----------	----------------

Jedec Code:	0x7fb0	EEPROM Version:	0x01
P/N:	711-051406	S/N:	ACVD0738
Assembly ID:	0x045d	Assembly Version:	01.01
Date:	06-06-2016	Assembly Flags:	0x00
Version:	REV 01		
ID:	Power Midplane		

Board Information Record:

Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 01 ff 04 5d 01 01 52 45 56 20 30 31 00 00
 Address 0x10: 00 00 00 00 37 31 31 2d 30 35 31 34 30 36 00 00
 Address 0x20: 53 2f 4e 20 41 43 56 44 30 37 33 38 00 06 06 07


```

Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM Board      REV 02   760-068193   ABDG7408      Front Panel Display
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           760-068193   S/N:           ABDG7408
Assembly ID:   0x0cac      Assembly Version: 01.02
Date:          06-06-2016   Assembly Flags: 0x00
Version:       REV 02      CLEI Code:     PROTOXCLEI
ID: Front Panel Display    FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c ac 01 02 52 45 56 20 30 32 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 36 38 31 39 33 00 00
Address 0x20: 53 2f 4e 20 41 42 44 47 37 34 30 38 00 06 06 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 1          REV 06   740-050037   1EDB61200R8   DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           740-050037   S/N:           1EDB61200R8
Assembly ID:   0x0478      Assembly Version: 01.06
Date:          03-16-2016   Assembly Flags: 0x00
Version:       REV 06      CLEI Code:     IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 52 38 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 2          REV 06   740-050037   1EDB61200WA   DC 52V Power Supply
Module
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           740-050037   S/N:           1EDB61200WA
Assembly ID:   0x0478      Assembly Version: 01.06
Date:          03-16-2016   Assembly Flags: 0x00
Version:       REV 06      CLEI Code:     IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 57 41 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff

```

```

Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 3          REV 06  740-050037  1EDB61200NY      DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:            1EDB61200NY
Assembly ID:   0x0478          Assembly Version: 01.06
Date:          03-16-2016      Assembly Flags:  0x00
Version:       REV 06          CLEI Code:       IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 4e 59 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 4          REV 06  740-050037  1EDB61200N2      DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:            1EDB61200N2
Assembly ID:   0x0478          Assembly Version: 01.06
Date:          03-16-2016      Assembly Flags:  0x00
Version:       REV 06          CLEI Code:       IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 4e 32 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 5          REV 06  740-050037  1EDB61200RN      DC 52V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           740-050037      S/N:            1EDB61200RN
Assembly ID:   0x0478          Assembly Version: 01.06
Date:          03-16-2016      Assembly Flags:  0x00
Version:       REV 06          CLEI Code:       IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
Address 0x20: 31 45 44 42 36 31 32 30 30 52 4e 00 00 10 03 07
Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00 00
PSM 6          REV 06  740-050037  1EDB61200RF      DC 52V Power Supply
Module

```

```

Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB61200RF
Assembly ID: 0x0478    Assembly Version: 01.06
Date: 03-16-2016      Assembly Flags: 0x00
Version: REV 06        CLEI Code: IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 36 31 32 30 30 52 46 00 00 10 03 07
  Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff
  Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00
PSM 7          REV 06 740-050037 1EDB61200R7      DC 52V Power Supply
Module
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-050037        S/N: 1EDB61200R7
Assembly ID: 0x0478    Assembly Version: 01.06
Date: 03-16-2016      Assembly Flags: 0x00
Version: REV 06        CLEI Code: IPUPAPDKAA
ID: DC 52V Power Supply Module FRU Model Number: MX2000-PSM-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 78 01 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 35 30 30 33 37 00 00
  Address 0x20: 31 45 44 42 36 31 32 30 30 52 37 00 00 10 03 07
  Address 0x30: e0 72 75 ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 50 44 4b 41 41 4d
  Address 0x50: 58 32 30 30 30 2d 50 53 4d 2d 44 43 2d 53 00 00
  Address 0x60: 00 00 00 00 00 00 31 30 36 ff ff ff ff ff ff
  Address 0x70: ff ff ff 26 00 00 00 00 00 00 00 00 00 00 00
PDM 0          REV 01 740-060189 1EFF5250143      DC PDM Optimized
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-060189        S/N: 1EFF5250143
Assembly ID: 0x0495    Assembly Version: 01.01
Date: 07-21-2015      Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAN1KAA
ID: DC PDM Optimized  FRU Model Number: MX2K-PDM-OP-DC-S
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 04 95 01 01 52 45 56 20 30 31 00 00
  Address 0x10: 00 00 00 00 37 34 30 2d 30 36 30 31 38 39 00 00
  Address 0x20: 31 45 46 46 35 32 35 30 31 34 33 00 00 15 07 07
  Address 0x30: df ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 49 50 55 50 41 4e 31 4b 41 41 4d
  Address 0x50: 58 32 4b 2d 50 44 4d 2d 4f 50 2d 44 43 2d 53 00
  Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff
  Address 0x70: ff ff ff 84 00 00 00 00 00 00 00 00 00 00 00
PDM 1          REV 01 740-060189 1EFF5250074      DC PDM Optimized
Jedec Code: 0x7fb0      EEPROM Version: 0x02
P/N: 740-060189        S/N: 1EFF5250074
Assembly ID: 0x0495    Assembly Version: 01.01
Date: 07-21-2015      Assembly Flags: 0x00
Version: REV 01        CLEI Code: IPUPAN1KAA

```

```

ID: DC PDM Optimized          FRU Model Number: MX2K-PDM-OP-DC-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 95 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 36 30 31 38 39 00 00
Address 0x20: 31 45 46 46 35 32 35 30 30 37 34 00 00 15 07 07
Address 0x30: df ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 50 41 4e 31 4b 41 41 4d
Address 0x50: 58 32 4b 2d 50 44 4d 2d 4f 50 2d 44 43 2d 53 00
Address 0x60: 00 00 00 00 00 00 31 30 31 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 84 00 00 00 00 00 00 00 00 00 00 00 00
Routing Engine 0          BUILTIN          BUILTIN          RE-S-2X00x8
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN          S/N: BUILTIN
Assembly ID: 0x0c10          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: RE-S-2X00x8
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0c 10 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 00 00 00 00
Address 0x20: 42 55 49 4c 54 49 4e 00 00 00 00 00 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
vtbd0 15361 MB          Virtio Block Disk
vtbd1 15360 MB          Virtio Block Disk
ada0 511 MB QEMU HARDDISK          QM00002          Emulated IDE Disk
usb0 (addr 1) XHCI root HUB 0          0x8086          uhub0
Routing Engine 1          BUILTIN          BUILTIN          RE-S-2X00x8
Jedec Code: 0x0000          EEPROM Version: 0x00
P/N: BUILTIN          S/N: BUILTIN
Assembly ID: 0x0c10          Assembly Version: 00.00
Date: 00-00-0000          Assembly Flags: 0x00
ID: RE-S-2X00x8
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0c 10 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 00 00 00 00
Address 0x20: 42 55 49 4c 54 49 4e 00 00 00 00 00 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
vtbd0 15361 MB          Virtio Block Disk
vtbd1 15360 MB          Virtio Block Disk
ada0 511 MB QEMU HARDDISK          QM00002          Emulated IDE Disk
usb0 (addr 1) XHCI root HUB 0          0x8086          uhub0
CB 0          REV 01 750-067373 ABDJ0047          Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-067373          S/N: ABDJ0047
Assembly ID: 0x0c96          Assembly Version: 01.01
Date: 06-21-2016          Assembly Flags: 0x00
Version: REV 01          CLEI Code: PROTOXCLEI

```

```

ID: Control Board                      FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ad 01 00 20 28 8a 1c 6d c4 7e ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 96 01 01 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 33 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4a 30 30 34 37 00 15 06 07
Address 0x30: e0 ff ff ff ad 01 00 20 28 8a 1c 6d c4 7e ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

CB 1                      REV 03    750-067373    ABDH3016          Control Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-067373            S/N: ABDH3016
Assembly ID: 0x0c96        Assembly Version: 01.03
Date: 05-07-2016          Assembly Flags: 0x00
Version: REV 03           CLEI Code: PROTOXCLEI
ID: Control Board          FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ad 01 00 20 f4 cc 55 35 71 a0 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 96 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 33 00 00
Address 0x20: 53 2f 4e 20 41 42 44 48 33 30 31 36 00 07 05 07
Address 0x30: e0 ff ff ff ad 01 00 20 f4 cc 55 35 71 a0 ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff

SFB 0                      REV 08    750-067371    ABDK7180          Switch Fabric Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-067371            S/N: ABDK7180
Assembly ID: 0x0c97        Assembly Version: 01.08
Date: 09-27-2016          Assembly Flags: 0x00
Version: REV 08           CLEI Code: PROTOXCLEI
ID: Switch Fabric Board    FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4b 37 31 38 30 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 00 00 48 00

SFB 1                      REV 08    750-067371    ABDK7024          Switch Fabric Board
Jedec Code: 0x7fb0          EEPROM Version: 0x02
P/N: 750-067371            S/N: ABDK7024
Assembly ID: 0x0c97        Assembly Version: 01.08
Date: 09-27-2016          Assembly Flags: 0x00
Version: REV 08           CLEI Code: PROTOXCLEI
ID: Switch Fabric Board    FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00

```

```

Address 0x20: 53 2f 4e 20 41 42 44 4b 37 30 32 34 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 01 00 48 00
SFB 2          REV 08    750-067371    ABDK7188          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:             ABDK7188
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-28-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4b 37 31 38 38 00 1c 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 02 00 48 00
SFB 3          REV 08    750-067371    ABDK7143          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:             ABDK7143
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-27-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4b 37 31 34 33 00 1b 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 03 00 48 00
SFB 4          REV 08    750-067371    ABDK7030          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:             ABDK7030
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-24-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
Address 0x20: 53 2f 4e 20 41 42 44 4b 37 30 33 30 00 18 09 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff
Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 04 00 48 00

```

```

SFB 5          REV 08   750-067371   ABDK7146          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:             ABDK7146
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-27-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
  Address 0x20: 53 2f 4e 20 41 42 44 4b 37 31 34 36 00 1b 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 05 00 48 00

SFB 6          REV 08   750-067371   ABDK7203          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:             ABDK7203
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-28-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
  Address 0x20: 53 2f 4e 20 41 42 44 4b 37 32 30 33 00 1c 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 06 00 48 00

SFB 7          REV 08   750-067371   ABDK7238          Switch Fabric Board
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-067371      S/N:             ABDK7238
Assembly ID:   0x0c97          Assembly Version: 01.08
Date:          09-27-2016      Assembly Flags:   0x00
Version:       REV 08          CLEI Code:        PROTOXCLEI
ID: Switch Fabric Board      FRU Model Number: PROTO-ASSEMBLY
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 fe 0c 97 01 08 52 45 56 20 30 38 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 36 37 33 37 31 00 00
  Address 0x20: 53 2f 4e 20 41 42 44 4b 37 32 33 38 00 1b 09 07
  Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
  Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff c2 07 00 00 00 00 00 00 00 07 00 48 00

FPC 0          REV 36   750-044130   ABCS8607          MPC6E 3D
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-044130      S/N:             ABCS8607
Assembly ID:   0x0b86          Assembly Version: 01.36
Date:          10-29-2013      Assembly Flags:   0x00
Version:       REV 36          CLEI Code:        PROTOXCLEI

```

```

ID: MPC6E 3D                                FRU Model Number:  PROTO-ASSEMBLY
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 fe 0b 86 01 24 52 45 56 20 33 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 34 31 33 30 00 00
Address 0x20: 53 2f 4e 20 41 42 43 53 38 36 30 37 00 1d 0a 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 ff ff ff ff ff ff ff ff ff ff ff ff
CPU                                REV 09    711-045719    ABCS8776    RMPC PMB
Jedec Code:  0x7fb0                EEPROM Version:  0x02
P/N:         711-045719            S/N:            ABCS8776
Assembly ID: 0x0b85                Assembly Version: 01.09
Date:        10-24-2013            Assembly Flags:  0x00
Version:     REV 09
ID: RMPC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 85 01 09 52 45 56 20 30 39 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 34 35 37 31 39 00 00
Address 0x20: 53 2f 4e 20 41 42 43 53 38 37 37 36 00 18 0a 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 16 47 1f b0 00 00 00 00
MIC 0                                REV 21    750-050008    ABCT5920    4X100GE CXP
Jedec Code:  0x7fb0                EEPROM Version:  0x02
P/N:         750-050008            S/N:            ABCT5920
Assembly ID: 0x0a83                Assembly Version: 01.21
Date:        09-29-2014            Assembly Flags:  0x00
Version:     REV 21                CLEI Code:      IP9IATYDAA
ID: 4X100GE CXP                    FRU Model Number: MIC6-100G-CXP
Board Information Record:
Address 0x00: 12 01 07 02 03 ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0a 83 01 15 52 45 56 20 32 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 30 30 30 38 00 00
Address 0x20: 53 2f 4e 20 41 42 43 54 35 39 32 30 00 1d 09 07
Address 0x30: de ff ff ff 12 01 07 02 03 ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 39 49 41 54 59 44 41 41 4d
Address 0x50: 49 43 36 2d 31 30 30 47 2d 43 58 50 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 74 00 00 00 00 10 09 73 3c c0 02 70 3c
PIC 0                                BUILTIN    BUILTIN    4X100GE CXP
XLM 0                                REV 07.2.00 711-046638 ABCK3488    MPC6E XL
Jedec Code:  0x7fb0                EEPROM Version:  0x02
P/N:         711-046638            S/N:            ABCK3488
Assembly ID: 0x0b88                Assembly Version: 01.07
Date:        11-11-2013            Assembly Flags:  0x00
Version:     REV 07.2.00
ID: MPC6E XL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 88 01 07 52 45 56 20 30 37 2e 32

```



```

Address 0x10: 2e 30 30 00 37 31 31 2d 30 34 36 36 33 38 00 00
Address 0x20: 53 2f 4e 20 41 42 43 4b 33 34 38 38 00 0b 0b 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
XLM 1          REV 07.2.00 711-046638 ABCK5482          MPC6E XL
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           711-046638      S/N:              ABCK5482
Assembly ID:   0x0b88          Assembly Version: 01.07
Date:          10-21-2013      Assembly Flags:  0x00
Version:       REV 07.2.00
ID: MPC6E XL
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 88 01 07 52 45 56 20 30 37 2e 32
Address 0x10: 2e 30 30 00 37 31 31 2d 30 34 36 36 33 38 00 00
Address 0x20: 53 2f 4e 20 41 42 43 4b 35 34 38 32 00 15 0a 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 50
Address 0x50: 52 4f 54 4f 2d 41 53 53 45 4d 42 4c 59 00 00 00
Address 0x60: 00 00 00 00 00 00 41 30 30 ff ff ff ff ff ff ff
Address 0x70: ff ff ff c2 00 00 00 00 00 00 00 00 00 00 00 00
FPC 1          REV 22      750-063414 CAFJ3026          MPC9E 3D
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           750-063414      S/N:              CAFJ3026
Assembly ID:   0x0c43          Assembly Version: 01.22
Date:          03-28-2016      Assembly Flags:  0x00
Version:       REV 22          CLEI Code:          IPUCBMUCAA
ID: MPC9E 3D          FRU Model Number: MX2K-MPC9E
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0c 43 01 16 52 45 56 20 32 32 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 36 33 34 31 34 00 00
Address 0x20: 53 2f 4e 20 43 41 46 4a 33 30 32 36 00 1c 03 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 4d 55 43 41 41 4d
Address 0x50: 58 32 4b 2d 4d 50 43 39 45 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 16      750-057177 CAFF9332          SMPC PMB
Jedec Code:    0x7fb0          EEPROM Version:    0x01
P/N:           750-057177      S/N:              CAFF9332
Assembly ID:   0x0c22          Assembly Version: 01.16
Date:          03-20-2016      Assembly Flags:  0x00
Version:       REV 16
ID: SMPC PMB
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0c 22 01 10 52 45 56 20 31 36 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 35 37 31 37 37 00 00
Address 0x20: 53 2f 4e 20 43 41 46 46 39 33 33 32 00 14 03 07
Address 0x30: e0 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

```

Address 0x70: ff ff ff ff 00 00 00 00 38 f9 0d e0 4f d1 4b 08
FPC 7          REV 08      750-038492    ZX4080      MPCE Type 2 3D EQ
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           750-038492   S/N:           ZX4080
Assembly ID:   0x0b35      Assembly Version: 01.08
Date:          02-03-2012  Assembly Flags: 0x00
Version:       REV 08      CLEI Code:     COUIBA5BAA
ID: MPCE Type 2 3D EQ      FRU Model Number: MX-MPC2E-3D-EQ

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 35 01 08 52 45 56 20 30 38 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 38 34 39 32 00 00
Address 0x20: 53 2f 4e 20 5a 58 34 30 38 30 00 00 00 03 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 43 4f 55 49 42 41 35 42 41 41 4d
Address 0x50: 58 2d 4d 50 43 32 45 2d 33 44 2d 45 51 00 00 00
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 74 ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 03      711-038484    ZX3665      MPCE PMB 2G
Jedec Code:    0x7fb0      EEPROM Version: 0x01
P/N:           711-038484   S/N:           ZX3665
Assembly ID:   0x0b36      Assembly Version: 01.03
Date:          02-01-2012  Assembly Flags: 0x00
Version:       REV 03
ID: MPCE PMB 2G

Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 0b 36 01 03 52 45 56 20 30 33 00 00
Address 0x10: 00 00 00 00 37 31 31 2d 30 33 38 34 38 34 00 00
Address 0x20: 53 2f 4e 20 5a 58 33 36 36 35 00 00 00 01 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff ff 00 00 00 02 00 00 0c 00 42 5f c0 a4
MIC 0          REV 05      750-037128    ZR4031      1xCOC12/4xCOC3 CH-CE
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           750-037128   S/N:           ZR4031
Assembly ID:   0x0a1b      Assembly Version: 01.05
Date:          12-04-2011  Assembly Flags: 0x00
Version:       REV 05      CLEI Code:     PROTOXCLEI
ID: 1xCOC12/4xCOC3 CH-CE  FRU Model Number: MIC-3D-4CHOC3-10C12-CE

Board Information Record:
Address 0x00: 12 01 05 03 05 ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0a 1b 01 05 52 45 56 20 30 35 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 31 32 38 00 00
Address 0x20: 53 2f 4e 20 5a 52 34 30 33 31 00 00 00 04 0c 07
Address 0x30: db ff ff ff 12 01 05 03 05 ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 4d
Address 0x50: 49 43 2d 33 44 2d 34 43 48 4f 43 33 2d 31 4f 43
Address 0x60: 31 32 2d 43 45 00 30 32 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 98 c0 02 61 bc 7f b0 02 ff 0a 11 01 17
PIC 0          BUILTIN    BUILTIN      1xCOC12/4xCOC3 CH-CE
MIC 1          REV 23      750-032479    CADE8614    MIC-3D-8DS3-E3
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           750-032479   S/N:           CADE8614
Assembly ID:   0x0a11      Assembly Version: 01.23

```

```

Date:          07-24-2014      Assembly Flags:  0x00
Version:       REV 23         CLEI Code:       COUIA8DBAA
ID: MIC-3D-8DS3-E3          FRU Model Number:  MIC-3D-8DS3-E3
Board Information Record:
  Address 0x00: 56 01 ff ff 03 ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0a 11 01 17 52 45 56 20 32 33 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 32 34 37 39 00 00
  Address 0x20: 53 2f 4e 20 43 41 44 45 38 36 31 34 00 18 07 07
  Address 0x30: de ff ff ff 56 01 ff ff 03 ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 43 4f 55 49 41 38 44 42 41 41 4d
  Address 0x50: 49 43 2d 33 44 2d 38 44 53 33 2d 45 33 00 00 00
  Address 0x60: 00 00 00 00 00 00 41 41 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 7b c0 03 e5 7c 4f 8a 9e 10 00 00 00 02
PIC 2          BUILTIN      BUILTIN      MIC-3D-8DS3-E3
QXM 0          REV 06      711-028408    ZW8299      MPC QXM
Jedec Code:    0x7fb0      EEPROM Version:  0x01
P/N:           711-028408  S/N:            ZW8299
Assembly ID:   0x097a      Assembly Version: 02.06
Date:         01-19-2012   Assembly Flags:  0x00
Version:       REV 06
ID: MPC QXM
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 09 7a 02 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 32 38 34 30 38 00 00
  Address 0x20: 53 2f 4e 20 5a 57 38 32 39 39 00 00 00 13 01 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
QXM 1          REV 06      711-028408    ZY0609      MPC QXM
Jedec Code:    0x7fb0      EEPROM Version:  0x01
P/N:           711-028408  S/N:            ZY0609
Assembly ID:   0x097a      Assembly Version: 02.06
Date:         01-19-2012   Assembly Flags:  0x00
Version:       REV 06
ID: MPC QXM
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 09 7a 02 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 32 38 34 30 38 00 00
  Address 0x20: 53 2f 4e 20 5a 59 30 36 30 39 00 00 00 13 01 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff 00 00 00 00 00 00 00 00 00 00 00 00
ADC 7          REV 17      750-043596    ABCA0990      Adapter Card
Jedec Code:    0x7fb0      EEPROM Version:  0x02
P/N:           750-043596  S/N:            ABCA0990
Assembly ID:   0x0b3d      Assembly Version: 01.17
Date:         03-07-2013   Assembly Flags:  0x00
Version:       REV 17      CLEI Code:       IPUCBA8CAA
ID: Adapter Card          FRU Model Number:  MX2000-LC-ADAPTER
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

```

I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 3d 01 11 52 45 56 20 31 37 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 34 33 35 39 36 00 00
Address 0x20: 53 2f 4e 20 41 42 43 41 30 39 39 30 00 07 03 07
Address 0x30: dd ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 41 38 43 41 41 4d
Address 0x50: 58 32 30 30 30 2d 4c 43 2d 41 44 41 50 54 45 52
Address 0x60: 00 00 00 00 00 00 41 00 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 3a 00 00 00 00 00 00 00 00 00 00 00 00
Fan Tray 0      REV 01    760-052467    ACAY6190      172mm FanTray - 6 Fans
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           760-052467    S/N:          ACAY6190
Assembly ID:   0x0b96      Assembly Version: 02.10
Date:          09-18-2015    Assembly Flags: 0x00
Version:       REV 01      CLEI Code:    IPUCBENCAA
ID: 172mm FanTray - 6 Fans    FRU Model Number: MX2000-FANTRAY-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 96 02 0a 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 32 34 36 37 00 00
Address 0x20: 53 2f 4e 20 41 43 41 59 36 31 39 30 00 12 09 07
Address 0x30: df ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 45 4e 43 41 41 4d
Address 0x50: 58 32 30 30 30 2d 46 41 4e 54 52 41 59 2d 53 00
Address 0x60: 00 00 00 00 00 00 31 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff 1a ff ff ff ff ff ff ff ff ff ff ff ff
Fan Tray 1      REV 01    760-052467    ACAY6414      172mm FanTray - 6 Fans
Jedec Code:    0x7fb0      EEPROM Version: 0x02
P/N:           760-052467    S/N:          ACAY6414
Assembly ID:   0x0b96      Assembly Version: 02.10
Date:          10-28-2015    Assembly Flags: 0x00
Version:       REV 01      CLEI Code:    IPUCBENCAA
ID: 172mm FanTray - 6 Fans    FRU Model Number: MX2000-FANTRAY-S
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 96 02 0a 52 45 56 20 30 31 00 00
Address 0x10: 00 00 00 00 37 36 30 2d 30 35 32 34 36 37 00 00
Address 0x20: 53 2f 4e 20 41 43 41 59 36 34 31 34 00 1c 0a 07
Address 0x30: df ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 49 50 55 43 42 45 4e 43 41 41 4d
Address 0x50: 58 32 30 30 30 2d 46 41 4e 54 52 41 59 2d 53 00
Address 0x60: 00 00 00 00 00 00 31 ff ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff 1a ff ff ff ff ff ff ff ff ff ff ff ff

```

show chassis hardware models (MX2008 Router)

```
user@host>show chassis hardware models
```

```

Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Midplane      REV 47   750-044636   ABAD1739      CHAS-BP-MX2010-S
PMP           REV 01   711-051406   ACVD0738
FPM Board     REV 02   760-068193   ABDG7408      PROTO-ASSEMBLY
PSM 1         REV 06   740-050037   1EDB61200R8   MX2000-PSM-DC-S
PSM 2         REV 06   740-050037   1EDB61200WA   MX2000-PSM-DC-S
PSM 3         REV 06   740-050037   1EDB61200NY   MX2000-PSM-DC-S
PSM 4         REV 06   740-050037   1EDB61200N2   MX2000-PSM-DC-S
PSM 5         REV 06   740-050037   1EDB61200RN   MX2000-PSM-DC-S

```

PSM 6	REV 06	740-050037	1EDB61200RF	MX2000-PSM-DC-S
PSM 7	REV 06	740-050037	1EDB61200R7	MX2000-PSM-DC-S
PDM 0	REV 01	740-060189	1EFF5250143	MX2K-PDM-OP-DC-S
PDM 1	REV 01	740-060189	1EFF5250074	MX2K-PDM-OP-DC-S
CB 0	REV 01	750-067373	ABDJ0047	PROTO-ASSEMBLY
CB 1	REV 03	750-067373	ABDH3016	PROTO-ASSEMBLY
SFB 0	REV 08	750-067371	ABDK7180	PROTO-ASSEMBLY
SFB 1	REV 08	750-067371	ABDK7024	PROTO-ASSEMBLY
SFB 2	REV 08	750-067371	ABDK7188	PROTO-ASSEMBLY
SFB 3	REV 08	750-067371	ABDK7143	PROTO-ASSEMBLY
SFB 4	REV 08	750-067371	ABDK7030	PROTO-ASSEMBLY
SFB 5	REV 08	750-067371	ABDK7146	PROTO-ASSEMBLY
SFB 6	REV 08	750-067371	ABDK7203	PROTO-ASSEMBLY
SFB 7	REV 08	750-067371	ABDK7238	PROTO-ASSEMBLY
FPC 0	REV 36	750-044130	ABCS8607	PROTO-ASSEMBLY
MIC 0	REV 21	750-050008	ABCT5920	MIC6-100G-CXP
FPC 1	REV 22	750-063414	CAFJ3026	MX2K-MPC9E
FPC 7	REV 08	750-038492	ZX4080	MX-MPC2E-3D-EQ
MIC 0	REV 05	750-037128	ZR4031	MIC-3D-4CH0C3-10C12-CE
MIC 1	REV 23	750-032479	CADE8614	MIC-3D-8DS3-E3
ADC 7	REV 17	750-043596	ABCA0990	MX2000-LC-ADAPTER
Fan Tray 0	REV 01	760-052467	ACAY6190	MX2000-FANTRAY-S
Fan Tray 1	REV 01	760-052467	ACAY6414	MX2000-FANTRAY-S

show chassis hardware clei-models (MX2008 Router)

```
user@host>show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 47	750-044636	IPMU810ARB	CHAS-BP-MX2010-S
PMP	REV 01	711-051406		
FPM Board	REV 02	760-068193	PROTOXCLEI	PROTO-ASSEMBLY
PSM 1	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 2	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 3	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 4	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 5	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 6	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PSM 7	REV 06	740-050037	IPUPAPDKAA	MX2000-PSM-DC-S
PDM 0	REV 01	740-060189	IPUPAN1KAA	MX2K-PDM-OP-DC-S
PDM 1	REV 01	740-060189	IPUPAN1KAA	MX2K-PDM-OP-DC-S
CB 0	REV 01	750-067373	PROTOXCLEI	PROTO-ASSEMBLY
CB 1	REV 03	750-067373	PROTOXCLEI	PROTO-ASSEMBLY
SFB 0	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 1	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 2	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 3	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 4	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 5	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 6	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
SFB 7	REV 08	750-067371	PROTOXCLEI	PROTO-ASSEMBLY
FPC 0	REV 36	750-044130	PROTOXCLEI	PROTO-ASSEMBLY
MIC 0	REV 21	750-050008	IP9IATYDAA	MIC6-100G-CXP
FPC 1	REV 22	750-063414	IPUCBMUCAA	MX2K-MPC9E
FPC 7	REV 08	750-038492	COUIBA5BAA	MX-MPC2E-3D-EQ
MIC 0	REV 05	750-037128	PROTOXCLEI	MIC-3D-4CH0C3-10C12-CE
MIC 1	REV 23	750-032479	COUIA8DBAA	MIC-3D-8DS3-E3
ADC 7	REV 17	750-043596	IPUCBA8CAA	MX2000-LC-ADAPTER

Fan Tray 0	REV 01	760-052467	IPUCBENCAA	MX2000-FANTRAY-S
Fan Tray 1	REV 01	760-052467	IPUCBENCAA	MX2000-FANTRAY-S

show chassis hardware (MX10003 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			BLANK	JNP10003 [MX10003]
Midplane	REV 01	750-066883	CAGM0759	Midplane 2
Routing Engine 0		BUILTIN	BUILTIN	Routing Engine
Routing Engine 1		BUILTIN	BUILTIN	Routing Engine
CB 0	REV 07	750-067071	CAGX4354	SPM
Mezz	REV 10	711-066896	CAHS7200	SPM Mezz Board
CB 1	REV 07	750-067071	CAGX4363	SPM
Mezz	REV 10	711-066896	CAHS7193	SPM Mezz Board
FPC 0	REV 05	750-066879	CAGV0273	LC2103
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0				
PIC 1				
FPC 1	REV 05	750-066879	CAGV0278	LC2103
CPU		BUILTIN	BUILTIN	SMPC PMB
PIC 0		BUILTIN	BUILTIN	6xQSFP
PIC 1				
PEM 0	REV 01	740-066937	1HS16320003	JNP-PWR1600-AC
PEM 1	REV 01	740-066937	1HS16320002	JNP-PWR1600-AC
Fan Tray 0	REV 02	760-069329	CAGS7731	JNP FAN 3RU
Fan Tray 1	REV 02	760-069329	CAGS7776	JNP FAN 3RU
Fan Tray 2	REV 02	760-069329	CAGS7659	JNP FAN 3RU
Fan Tray 3	REV 02	760-069329	CAGS7669	JNP FAN 3RU

show chassis hardware (MX204 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			BB768	JNP204 [MX204]
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x6
CB 0	REV 11	750-069579	CAJD3113	JNP204 [MX204]
FPC 0		BUILTIN	BUILTIN	MPC
PIC 0		BUILTIN	BUILTIN	4XSFP28 PIC
Xcvr 0	REV 01	740-061405	1ACQ110409R	QSFP-100GBASE-SR4
Xcvr 1	REV 01	740-054053	QF027546	QSFP+-4X10G-SR
Xcvr 2	REV 01	740-058732	1AMQA142092	QSFP-100GBASE-LR4
Xcvr 3	REV 01	740-058732	1AMQA14203J	QSFP-100GBASE-LR4
PIC 1		BUILTIN	BUILTIN	8XSFP PIC
PEM 1	REV 04	740-043886	1GA46361256	JPSU-650W-DC-AFO
Fan Tray 0				Fan Tray, Front to Back
Airflow - AFO				
Fan Tray 1				Fan Tray, Front to Back
Airflow - AFO				
Fan Tray 2				Fan Tray, Front to Back
Airflow - AFO				

show chassis hardware (vMX running in lite mode)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			VM54599D128A	VMX
Midplane				
Routing Engine 0				RE-VMX
CB 0				VMX SCB
CB 1				VMX SCB
FPC 0				Virtual FPC
CPU	Rev. 1.0	RIOT-LITE	BUILTIN	
MIC 0				Virtual
PIC 0		BUILTIN	BUILTIN	Virtual

show chassis hardware (vMX running in performance mode)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			VM54599D128A	VMX
Midplane				
Routing Engine 0				RE-VMX
CB 0				VMX SCB
CB 1				VMX SCB
FPC 0				Virtual FPC
CPU	Rev. 1.0	RIOT-PERF	BUILTIN	
MIC 0				Virtual
PIC 0		BUILTIN	BUILTIN	Virtual

show chassis hardware (T320 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			19093	T320
Midplane	REV 04	710-004339	BC1436	T320 Backplane
FPM GBUS	REV 03	710-004461	BC1407	T320 FPM Board
FPM Display	REV 04	710-002897	BE0763	FPM Display
CIP	REV 05	710-002895	BB2311	T Series CIP
PEM 0	Rev 01	740-004359	NB12546	Power Entry Module
SCG 0	REV 06	710-004455	AY4522	T320 Sonet
Clock Gen.				
Routing Engine 0				unknown
CB 0	REV 13	710-002728	BC1577	T Series
Control Board				
CB 1	REV 13	710-002728	BC1595	T Series
Control Board				
FPC 1	REV 09	710-007531	HS1572	FPC Type 2
CPU	REV 15	710-001726	HR8763	FPC CPU
PIC 0	REV 01	750-010618	CB5579	4x G/E SFP,
1000 BASE				
SFP 0	REV 01	740-007326	P5809Z1	SFP-SX
SFP 1	REV 01	740-007326	P4Q10XU	SFP-SX
SFP 2		NON-JNPR	RA45020031	SFP-SX
SFP 3		NON-JNPR	RA45020032	SFP-SX
PIC 1	REV 01	750-010618	CD9587	4x G/E SFP,

1000 BASE					
SFP 0			NON-JNPR	P5A08QZ	SFP-T
SFP 1	REV 01	740-007326	P4Q133K		SFP-SX
SFP 2	REV 01	740-007326	P5809YY		SFP-SX
SFP 3	REV 01	740-007327	4C81704		SFP-LX
MMB 1	REV 03	710-005555	HR9401		MMB-288mbit
PPB 0	REV 04	710-003758	HR2886		PPB Type 2
FPC 2	REV 07	710-005860	HP2392		FPC Type 1
CPU	REV 14	710-001726	HP7797		FPC CPU
PIC 0	REV 02	750-007643	HM0853		1x G/E QPP,
1000 BASE					
SFP 0	REV 01	740-007326	P11E9JJ		SFP-SX
MMB 1	REV 02	710-005555	HN2379		MMB-288mbit
PPB 0	REV 04	710-003758	HP8092		PPB Type 2
FPC 3	REV 07	710-005860	HP2393		FPC Type 1
CPU	REV 14	710-001726	HP0968		FPC CPU
PIC 0	REV 01	750-010240	CB5363		1x G/E SFP,
1000 BASE					
SFP 0	REV 01	740-007326	P4R0PNH		SFP-SX
PIC 1	REV 03	750-003034	HD2832		4x OC-3 SONET,
SMIR					
MMB 1	REV 02	710-005555	HN6307		MMB-288mbit
PPB 0	REV 04	710-003758	HP5051		PPB Type 2
FPC 4	REV 01	710-010845	JD3872		FPC Type 4
CPU	REV 02	710-011481	JB6042		FPC CPU
5	REV 01	710-005802	BC1566		FPC Type 2
CPU	REV 09	710-001726	AY4922		FPC CPU
PIC 0	REV 02	750-008155	BE2114		2x G/E QPP,
1000 BASE					
SFP 0	REV 01	740-007326	P4R0PMQ		SFP-SX
SFP 1	REV 01	740-007326	P4R0PN9		SFP-SX
PIC 1	REV 01	750-008155	BE2116		2x G/E QPP,
1000 BASE					
SFP 0	REV 01	740-007326	P4R0PNZ		SFP-SX
SFP 1		NON-JNPR	2908		SFP-T
MMB 1	REV 01	710-005555	AZ2246		MMB-288mbit
PPB 0	REV 03	710-003758	AY4839		PPB Type 2
FPC 7	REV 01	710-005803	AZ2123		FPC Type 3
...					

show chassis hardware (T640 Router)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			19182	T640
Midplane	REV 04	710-002726	AX5608	T640 Backplane
FPM GBUS	REV 02	710-002901	HE3064	T640 FPM Board
FPM Display	REV 02	710-002897	HE7864	FPM Display
CIP	REV 05	710-002895	HA5024	T Series CIP
PEM 0	Rev 02	740-029522	VH26235	AC PEM 10kW US
PEM 1	Rev 02	740-029522	VH26230	AC PEM 10kW US
SCG 0	REV 03	710-003423	HA4508	T640 Sonet Clock Gen.
Routing Engine 0	REV 02	740-005022	210865700483	RE-3.0 (RE-600)
CB 0	REV 01	710-002728	HD3044	T Series Control Board
FPC 2	REV 04	710-001721	HD5572	FPC Type 3
CPU	REV 06	710-001726	HA4712	FPC CPU
PIC 1	REV 03	750-009567	HV2331	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-009898	USC202R103	XENPAK-SR

PIC 2	REV 03	750-009567	HV2332	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-011268	USC202R112	XENPAK-ZR
PIC 3	REV 03	750-009567	HX4416	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-012056	434TC004	XENPAK-CX4
PIC 4	REV 03	750-009567	HX4420	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-012058	434TC124	XENPAK-LX4
FPC 5	REV 01	710-013553	JE4839	E2-FPC Type 1
CPU	REV 01	710-013569	JW9163	FPC CPU
PIC 0	REV 01	750-009567	HX4419	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-009898	USC202RT05	XENPAK-LR
PIC 1	REV 03	750-009567	HN7426	1x 10GE(LAN),XENPAK
SFP 0	REV 01	740-009550	03L90051	XENPAK-ER
PIC 2	REV 03	750-009467	HT7423	1x 10GE(LAN),XENPAK
SFP 0		NON-JNPR		UNKNOWN
PIC 3	REV 04	750-005100	AY4850	1x 10GE(LAN),DWDM
FPC 4	REV 01	710-010845	JD3872	FPC Type 4
CPU	REV 02	710-011481	JB6042	FPC CPU
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray

show chassis hardware models (T640 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	710-002726		CHAS-BP-T640-S
FPM Display	REV 02	710-002897		CRAFT-T640-S
CIP	REV 05	710-002895		CIP-L-T640-S
PEM 0	Rev 01	740-002595		PWR-T-DC-S
SCG 0	REV 04	710-003423		SCG-T-S
SCG 1	REV 04	710-003423		SCG-T-S
Routing Engine 0	REV 01	740-005022		RE-600-2048-S
Routing Engine 1	REV 07	740-005022		RE-600-2048-S
CB 0	REV 06	710-002726		CHAS-BP-T640-S
CB 1	REV 06	710-002728		CB-L-T-S
FPC 5	REV 05	710-007527		T640-FPC2
PIC 0	REV 05	750-002510		PB-2GE-SX
PIC 1	REV 05	750-001901		PB-40C12-SON-SMIR
FPC 6	REV 03	710-001721		T640-FPC3
PIC 1	REV 01	750-009553		PC-40C48-SON-SFP
SIB 4	REV 02	750-005486		SIB-I-T640-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FAN-REAR-TX-T640-S

show chassis hardware extensive (T640 Router)

```
user@host> show chassis hardware extensive
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis				T640
Jedec Code:	0x7fb0	EEPROM Version:	0x01	
P/N:	S/N:	
Assembly ID:	0x0507	Assembly Version:	00.00	
Date:	00-00-0000	Assembly Flags:	0x00	
Version:			

```

ID: Gibson LCC Chassis
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 05 07 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane          REV 04    710-002726    AX5633
Jedec Code:       0x7fb0          EEPROM Version:    0x01
P/N:              710-002726.      S/N:            AX5633.
Assembly ID:      0x0127          Assembly Version: 01.04
Date:             06-27-2001      Assembly Flags:  0x00
Version:          REV 04.....
ID: Gibson Backplane
Board Information Record:
Address 0x00: ad 01 08 00 00 90 69 0e f8 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 01 27 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 37 31 30 2d 30 30 32 37 32 36 00 00
Address 0x20: 53 2f 4e 20 41 58 35 36 33 33 00 00 00 1b 06 07
Address 0x30: d1 ff ff ff ad 01 08 00 00 90 69 0e f8 00 ff ff
Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM GBUS          REV 02    710-002901    HE3245
...
FPM Display       REV 02    710-002897    HA4873
...
CIP               REV 05    710-002895    HA4729
...
PEM 1             RevX02    740-002595    MD21815          Power Entry Module
...
SCG 0             REV 04    710-003423    HF6023
...
SCG 1             REV 04    710-003423    HF6061
...
Routing Engine 0  REV 01    740-005022    210865700292    RE-3.0
...
CB 0              REV 06    710-002728    HE3614
...
FPC 1             REV 01    710-002385    HE3009          FPC Type 1
...
                  REV 06    710-001726    HC0010

```

show chassis hardware (T4000 Router)

```
user@host> show chassis hardware
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN1172F25AHA  T4000
Midplane      REV 01    710-027486   RC8355         T-series Backplane
FPM GBUS      REV 13    710-002901   BBAE0927       T640 FPM Board
FPM Display   REV 01    710-021387   EF6764         T1600 FPM Display
CIP           REV 06    710-002895   BBAD9210       T-series CIP
PEM 0         REV 01    740-036442   VA00016        Power Entry Module 6x60
SCG 0         REV 18    710-003423   BBAD7248       T640 Sonet Clock Gen.
SCG 1         REV 18    710-003423   BBAE3874       T640 Sonet Clock Gen.
Routing Engine 0 REV 05    740-026941   P737F-002248   RE-DUO-1800
Routing Engine 1 REV 06    740-026941   P737F-002653   RE-DUO-1800
CB 0          REV 09    710-022597   ED0295         LCC Control Board

```

CB 1	REV 09	710-022597	EA6050	LCC Control Board
FPC 0	REV 26	750-032819	EK1173	FPC Type 5-3D
CPU	REV 12	711-030686	EJ8584	SNG PMB
PIC 0	REV 07	750-034624	EF6837	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	123363A01145	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	123363A01147	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01P3	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10M03256	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01M2	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	123363A01137	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01PN	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01NW	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	123363A01139	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01KE	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01336	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B10M01325	SFP+-10G-SR
PIC 1	REV 07	750-034624	EF6800	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJJ01SA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01QZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJH0217	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ01TE	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01KV	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJJ01MU	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01R0	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01TC	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ0364	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJD0GV3	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B10M03343	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01QJ	SFP+-10G-SR
LMB 0	REV 05	711-034381	EJ8490	Type-0 LMB
LMB 1	REV 04	711-035774	EJ8517	Type-1 LMB
LMB 2	REV 05	711-034381	EJ8489	Type-0 LMB
FPC 3	REV 07	750-032819	EG3637	FPC Type 5-3D
CPU	REV 09	711-030686	EG0150	SNG PMB
PIC 0	REV 08	750-035293	EF3657	1x100GE
Xcvr 0	REV 01	740-032210	C22CQNJ	CFP-100G-LR4
PIC 1	REV 10	750-034624	BBAN4098	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04902	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04891	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01MX	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04183	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04894	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04184	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04897	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04899	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ01TV	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04057	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ01M4	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04905	SFP+-10G-SR
LMB 0	REV 04	711-034381	EG1524	Type-0 LMB
LMB 1	REV 03	711-035774	EG0345	Type-1 LMB
LMB 2	REV 04	711-034381	EG1522	Type-0 LMB
FPC 5	REV 03	710-033871	BBAJ0768	FPC Type 4-ES
CPU	REV 11	710-016744	BBAH9342	ST-PMB2
PIC 0	REV 09	750-029262	EE6789	100GE
PIC 1	REV 03	750-034781	EE6655	100GE CFP
Xcvr 0	REV 01	740-032210	J11A22334	CFP-100G-LR4
BRIDGE 0	REV 03	711-029995	EE6572	100GE Bridge Board
MMB 0	REV 07	710-025563	BBAJ4657	ST-MMB2
MMB 1	REV 07	710-025563	BBAJ3073	ST-MMB2

FPC 6	REV 05	750-010153	EF4936	FPC Type 5-3D
CPU	REV 06	711-030686	EF4189	SNG PMB
PIC 0	REV 10	750-034624	BBAN4109	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04895	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04898	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11J04021	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04903	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04311	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04059	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04016	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04017	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B11J04887	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04297	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11J04893	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04022	SFP+-10G-SR
PIC 1	REV 02	750-034624	EE3711	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJH033X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01N0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01SV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ032L	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B10M01593	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJD0FF1	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01NU	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	123363A01305	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B10M00361	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01M7	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ032X	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01PG	SFP+-10G-SR
LMB 0	REV 04	711-034381	EF3838	Type-0 LMB
LMB 1	REV 03	711-035774	EF3821	Type-1 LMB
LMB 2	REV 04	711-034381	EF3834	Type-0 LMB
SPMB 0	REV 05	710-023321	ED1990	LCC Switch CPU
SPMB 1	REV 05	710-023321	EA2768	LCC Switch CPU
SIB 0	REV 02	711-036340	EF8802	SIB-HC-3D
SIB 1	REV 07	711-036340	EG2286	SIB-HC-3D
SIB 2	REV 07	711-036340	EG2252	SIB-HC-3D
SIB 3	REV 02	711-036340	EF1358	SIB-HC-3D
SIB 4	REV 02	711-036340	EF8806	SIB-HC-3D
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
-- Rev 2				
Fan Tray 2				Rear Fan Tray -- Rev 3

show chassis hardware (T4000 Router with 16-GB Line Card Chassis (LCC) Routing Engine)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN11BDF2CAHA	T1600
Midplane	REV 01	710-027486	ACAJ0774	T640 Backplane
FPM GBUS	REV 13	710-002901	BBAL6812	T640 FPM Board
FPM Display	REV 04	710-021387	BBAP2679	T1600 FPM Display
CIP	REV 06	710-002895	BBAP4758	T-series CIP
PEM 0	Rev 03	740-026384	XF86421	Power Entry Module 3x80
PEM 1	Rev 03	740-026384	XF86429	Power Entry Module 3x80
SCG 0	REV 18	710-003423	BBAP1896	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAN8659	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-042243	737F-002238	RE-DUO-1800-16G
Routing Engine 1	REV 01	740-042243	737F-002403	RE-DUO-1800-16G

CB 1	REV 11	710-022597	EK4526	LCC Control Board
CB 1	REV 11	710-022597	EK4527	LCC Control Board
FPC 0	REV 05	710-033871	EK5644	FPC Type 4-ES
CPU	REV 11	710-016744	EK3428	ST-PMB2
PIC 0	REV 20	750-017405	EJ3041	4x 10GE (LAN/WAN) XFP
PIC 1	REV 17	750-026962	EH7536	10x10GE (LAN/WAN) SFPP
MMB 0	REV 07	710-025563	EK6039	ST-MMB2
MMB 1	REV 07	710-025563	EK6086	ST-MMB2
FPC 1	REV 05	710-033871	EK6583	FPC Type 4-ES
CPU	REV 11	710-016744	EK3401	ST-PMB2
PIC 0	REV 17	750-026962	EJ8948	10x10GE (LAN/WAN) SFPP
MMB 0	REV 07	710-025563	EK6202	ST-MMB2
MMB 1	REV 07	710-025563	EK6112	ST-MMB2
SPMB 1	REV 05	710-023321	EK4900	LCC Switch CPU
SIB 0	REV 11	710-013074	EK5958	SIB-I8-SF
SIB 1	REV 11	710-013074	EK4606	SIB-I8-SF
SIB 2	REV 11	710-013074	EK5971	SIB-I8-SF
SIB 3	REV 11	710-013074	EK4609	SIB-I8-SF
SIB 4	REV 11	710-013074	EK4602	SIB-I8-SF
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 2

show chassis hardware (T4000 Router with LSR FPC)

```
user@host> show chassis hardware
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			JN1173A24AHA	T4000
FPC 3	REV	750-048373	AN7797	FPC Type 5-LSR
CPU	REV 10	711-030686	AN6649	SNG PMB
PIC 0	REV 07	750-034624	EF6830	12x10GE (LAN/WAN) SFPP

show chassis hardware clei-models (T4000 Router)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-027486	IPMJ700DRD	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	REV 01	740-036442	IPUPAG6KAA	PWR-T-6-60-DC
SCG 0	REV 18	710-003423		SCG-T-S
SCG 1	REV 18	710-003423		SCG-T-S
Routing Engine 0	REV 05	740-026941		RE-DU0-C1800-8G-S
Routing Engine 1	REV 06	740-026941		RE-DU0-C1800-8G-S
CB 0	REV 09	710-022597		CB-LCC-S
CB 1	REV 09	710-022597		CB-LCC-S
FPC 3				
PIC 0	REV 08	750-035293	XXXXXXXXBB	PF-1CGE-CFP
PIC 1	REV 10	750-034624	XXXXXXXXCC	PF-12XGE-SFPP
FPC 5	REV 03	710-033871	IPUCAMBCTD	T1600-FPC4-ES
PIC 1	REV 03	750-034781	IPUIBKLMMA	PD-1CE-CFP-FPC4
FPC 6				
PIC 0	REV 10	750-034624	XXXXXXXXCC	PF-12XGE-SFPP
Fan Tray 0				FANTRAY-T-S

Fan Tray 1	FANTRAY-T4000-S
Fan Tray 2	FANTRAY-TXP-R-S

show chassis hardware detail (T4000 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1172F25AHA	T4000
Midplane	REV 01	710-027486	RC8355	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAE0927	T640 FPM Board
FPM Display	REV 01	710-021387	EF6764	T1600 FPM Display
CIP	REV 06	710-002895	BBAD9210	T-series CIP
PEM 0	REV 01	740-036442	VA00016	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAD7248	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAE3874	T640 Sonet Clock Gen.
Routing Engine 0	REV 05	740-026941	P737F-002248	RE-DUO-1800
ad0	3823 MB	SMART CF	2009121602A661576157	Compact Flash
ad1	59690 MB	STEC MACH-8 SSD	STM000103FDB	Disk 1
Routing Engine 1	REV 06	740-026941	P737F-002653	RE-DUO-1800
ad0	3823 MB	SMART CF	201011150153F52CF52C	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	2010110900150A880A88	Disk 1
CB 0	REV 09	710-022597	ED0295	LCC Control Board
CB 1	REV 09	710-022597	EA6050	LCC Control Board
FPC 0	REV 26	750-032819	EK1173	FPC Type 5-3D
CPU	REV 12	711-030686	EJ8584	SNG PMB
PIC 0	REV 07	750-034624	EF6837	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	123363A01145	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	123363A01147	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01P3	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B10M03256	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01M2	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	123363A01137	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01PN	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01NW	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	123363A01139	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01KE	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01336	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B10M01325	SFP+-10G-SR
PIC 1	REV 07	750-034624	EF6800	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJJ01SA	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01QZ	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJH0217	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ01TE	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	AJJ01KV	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJJ01MU	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01R0	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	AJJ01TC	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ0364	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJD0GV3	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B10M03343	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01QJ	SFP+-10G-SR
LMB 0	REV 05	711-034381	EJ8490	Type-0 LMB
LMB 1	REV 04	711-035774	EJ8517	Type-1 LMB
LMB 2	REV 05	711-034381	EJ8489	Type-0 LMB
FPC 3	REV 07	750-032819	EG3637	FPC Type 5-3D
CPU	REV 09	711-030686	EG0150	SNG PMB
PIC 0	REV 08	750-035293	EF3657	1x100GE
Xcvr 0	REV 01	740-032210	C22CQNJ	CFP-100G-LR4

PIC 1	REV 10	750-034624	BBAN4098	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04902	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04891	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01MX	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04183	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04894	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04184	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04897	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04899	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AJJ01TV	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04057	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ01M4	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04905	SFP+-10G-SR
LMB 0	REV 04	711-034381	EG1524	Type-0 LMB
LMB 1	REV 03	711-035774	EG0345	Type-1 LMB
LMB 2	REV 04	711-034381	EG1522	Type-0 LMB
FPC 5	REV 03	710-033871	BBAJ0768	FPC Type 4-ES
CPU	REV 11	710-016744	BBAH9342	ST-PMB2
PIC 0	REV 09	750-029262	EE6789	100GE
PIC 1	REV 03	750-034781	EE6655	100GE CFP
Xcvr 0	REV 01	740-032210	J11A22334	CFP-100G-LR4
BRIDGE 0	REV 03	711-029995	EE6572	100GE Bridge Board
MMB 0	REV 07	710-025563	BBAJ4657	ST-MMB2
MMB 1	REV 07	710-025563	BBAJ3073	ST-MMB2
FPC 6	REV 05	750-010153	EF4936	FPC Type 5-3D
CPU	REV 06	711-030686	EF4189	SNG PMB
PIC 0	REV 10	750-034624	BBAN4109	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	B11J04895	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11J04898	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	B11J04021	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	B11J04903	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B11J04311	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J04059	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11J04016	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11J04017	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B11J04887	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	B11J04297	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11J04893	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	B11J04022	SFP+-10G-SR
PIC 1	REV 02	750-034624	EE3711	12x10GE (LAN/WAN) SFPP
Xcvr 0	REV 01	740-031980	AJH033X	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AJJ01N0	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AJJ01SV	SFP+-10G-SR
Xcvr 3	REV 01	740-031980	AJJ032L	SFP+-10G-SR
Xcvr 4	REV 01	740-031980	B10M01593	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	AJD0FF1	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	AJJ01NU	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	123363A01305	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	B10M00361	SFP+-10G-SR
Xcvr 9	REV 01	740-031980	AJJ01M7	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	AJJ032X	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AJJ01PG	SFP+-10G-SR
LMB 0	REV 04	711-034381	EF3838	Type-0 LMB
LMB 1	REV 03	711-035774	EF3821	Type-1 LMB
LMB 2	REV 04	711-034381	EF3834	Type-0 LMB
SPMB 0	REV 05	710-023321	ED1990	LCC Switch CPU
SPMB 1	REV 05	710-023321	EA2768	LCC Switch CPU
SIB 0	REV 02	711-036340	EF8802	SIB-HC-3D
SIB 1	REV 07	711-036340	EG2286	SIB-HC-3D
SIB 2	REV 07	711-036340	EG2252	SIB-HC-3D

SIB 3	REV 02	711-036340	EF1358	SIB-HC-3D
SIB 4	REV 02	711-036340	EF8806	SIB-HC-3D
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
-- Rev 2				
Fan Tray 2				Rear Fan Tray -- Rev 3

show chassis hardware models (T4000 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	Serial number	FRU model number
Midplane	REV 01	710-027486	RC8355	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	EF6764	CRAFT-T1600-S
CIP	REV 06	710-002895	BBAD9210	CIP-L-T640-S
PEM 0	REV 01	740-036442	VA00016	PWR-T-6-60-DC
SCG 0	REV 18	710-003423	BBAD7248	SCG-T-S
SCG 1	REV 18	710-003423	BBAE3874	SCG-T-S
Routing Engine 0	REV 05	740-026941	P737F-002248	RE-DUO-C1800-8G-S
Routing Engine 1	REV 06	740-026941	P737F-002653	RE-DUO-C1800-8G-S
CB 0	REV 09	710-022597	ED0295	CB-LCC-S
CB 1	REV 09	710-022597	EA6050	CB-LCC-S
FPC 3				
PIC 0	REV 08	750-035293	EF3657	PF-1CGE-CFP
PIC 1	REV 10	750-034624	BBAN4098	PF-12XGE-SFPP
FPC 5	REV 03	710-033871	BBAJ0768	T1600-FPC4-ES
PIC 1	REV 03	750-034781	EE6655	PD-1CE-CFP-FPC4
FPC 6				
PIC 0	REV 10	750-034624	BBAN4109	PF-12XGE-SFPP
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T4000-S
Fan Tray 2				FAN-REAR-TXP-LCC

show chassis hardware lcc (TX Matrix Router)

```
user@host> show chassis hardware lcc 0
```

```
lcc0-re0:
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			65751	T640
Midplane	REV 03	710-005608	RA1408	T640 Backplane
FPM GBUS	REV 09	710-002901	RA2784	T640 FPM Board
FPM Display	REV 05	710-002897	RA2825	FPM Display
CIP	REV 06	710-002895	HT0684	T Series CIP
PEM 0	Rev 11	740-002595	PM18483	Power Entry Module
PEM 1	Rev 11	740-002595	qb13984	Power Entry Module
SCG 0	REV 11	710-003423	HT0022	T640 Sonet Clock Gen.
Routing Engine 0	REV 13	740-005022	210865700363	RE-3.0 (RE-600)
CB 0	REV 03	710-007655	HW1195	Control Board (CB-T)
FPC 1	REV 05	710-007527	HM3245	FPC Type 2
CPU	REV 14	710-001726	HM1084	FPC CPU
PIC 0	REV 02	750-007218	AZ1112	2x OC-12 ATM2 IQ, SMIR
PIC 1	REV 02	750-007745	HG3462	4x OC-3 SONET, SMIR
PIC 2	REV 14	750-001901	BA5390	4x OC-12 SONET, SMIR
PIC 3	REV 09	750-008155	HS3012	2x G/E IQ, 1000 BASE

SFP 0		NON-JNPR	P1186TY	SFP-S
SFP 1	REV 01	740-007326	P11WLTF	SFP-SX
MMB 1	REV 02	710-005555	HL7514	MMB-288mbit
PPB 0	REV 04	710-003758	HM4405	PPB Type 2
PPB 1	REV 04	710-003758	AV1960	PPB Type 2
FPC 2	REV 08	710-010154	HZ3578	E-FPC Type 3
CPU	REV 05	710-010169	HZ3219	FPC CPU-Enhanced
PIC 0	REV 02	750-009567	HX2882	1x 10GE(LAN), XENPAK
SFP 0	REV 01	740-009898	USC202U709	XENPAK-LR
PIC 1	REV 03	750-003336	HJ9954	4x OC-48 SONET, SMSR
PIC 2	REV 01	750-004535	HC0235	1x OC-192 SM SR1
PIC 3	REV 07	750-007141	HX1699	10x 1GE(LAN), 1000 BASE

SFP 0	REV 01	740-007326	2441042	SFP-SX
SFP 1	REV 01	740-007326	2441027	SFP-SX
MMB 0	REV 03	710-010171	HV2365	MMB-5M3-288mbit
MMB 1	REV 03	710-010171	HZ3888	MMB-5M3-288mbit
SPMB 0	REV 09	710-003229	HW5245	T Series Switch CPU
SIB 3	REV 07	710-005781	HR5927	SIB-L8-F16
B Board	REV 06	710-005782	HR5971	SIB-L8-F16 (B)
SIB 4	REV 07	710-005781	HR5903	SIB-L8-F16
B Board	REV 06	710-005782	HZ5275	SIB-L8-F16 (B)

show chassis hardware scc (TX Matrix Router)

```
user@host> show chassis hardware scc
```

```
scc-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis				TX Matrix
Midplane	REV 04	710-004396	RB0014	SCC Midplane
FPM GBUS	REV 04	710-004617	HW9141	SCC FPM Board
FPM Display	REV 04	710-004619	HS5950	SCC FPM
CIP 0	REV 01	710-010218	HV9151	SCC CIP
CIP 1	REV 01	710-010218	HV9152	SCC CIP
PEM 1	Rev 11	740-002595	QB13977	Power Entry Module
Routing Engine 0	REV 05	740-008883	P11123900153	RE-4.0 (RE-1600)
CB 0	REV 01	710-011709	HR5964	Control Board (CB-TX)
SPMB 0	REV 09	710-003229	HW5293	T Series Switch CPU
SIB 3				
SIB 4	REV 01	710-005839	HW1177	SIB-S8-F16
B Board	REV 01	710-005840	HW1202	SIB-S8-F16 (B)

show chassis hardware (T1600 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			B2703	T1600
Midplane	REV 03	710-005608	RC4137	T640 Backplane
FPM GBUS	REV 10	710-002901	DT7062	T640 FPM Board
FPM Display	REV 05	710-002897	DS3067	FPM Display
CIP	REV 06	710-002895	DT3386	T-series CIP
PEM 0	Rev 07	740-017906	UA26344	Power Entry Module 3x80
PEM 1	Rev 18	740-002595	UF38441	Power Entry Module
SCG 0	REV 15	710-003423	DV0941	T640 Sonet Clock Gen.

Routing Engine 0	REV 08	740-014082	9009014502	RE-A-2000
Routing Engine 1	REV 07	740-014082	9009009591	RE-A-2000
CB 0	REV 05	710-007655	JA9360	Control Board (CB-T)
CB 1	REV 03	710-017707	DT3251	Control Board (CB-T)
FPC 0	REV 07	710-013558	DR4253	E2-FPC Type 2
CPU	REV 05	710-013563	DS3902	FPC CPU-Enhanced
PIC 0	REV 01	750-010618	CB5446	4x G/E SFP, 1000 BASE
Xcvr 0	REV 01	740-011613	P9F11CW	SFP-SX
Xcvr 1	REV 01	740-011613	P9F15C2	SFP-SX
Xcvr 2	REV 01	740-011782	PB94K0L	SFP-SX
PIC 1	REV 06	750-001900	HB6399	1x OC-48 SONET, SMSR
PIC 2	REV 14	750-001901	AP1092	4x OC-12 SONET, SMIR
PIC 3	REV 07	750-001900	AR8275	1x OC-48 SONET, SMSR
MMB 1	REV 07	710-010171	DS1524	MMB-5M3-288mbit
FPC 1	REV 06	710-013553	DL9067	E2-FPC Type 1
CPU	REV 04	710-013563	DM1685	FPC CPU-Enhanced
PIC 0	REV 08	750-001072	AB1688	1x G/E, 1000 BASE-SX
PIC 1	REV 10	750-012266	JX5519	4x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	AM0812S8UK6	SFP-SX
Xcvr 2	REV 01	740-011613	AM0812S8UK1	SFP-SX
Xcvr 3	REV 01	740-011782	P8N1YHG	SFP-SX
PIC 2	REV 22	750-005634	DP0083	1x CHOC12 IQ SONET, SMIR
MMB 1	REV 07	710-008923	DN1862	MMB 3M 288-bit
FPC 2	REV 01	710-005548	HJ9899	FPC Type 3
CPU	REV 06	710-001726	HC0586	FPC CPU
PIC 0	REV 16	750-007141	NC9660	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011613	AM0812S8XAR	SFP-SX
Xcvr 1	REV 01	740-011782	P920E7B	SFP-SX
Xcvr 2	REV 01	740-011613	AM0812S8XAU	SFP-SX
Xcvr 4	REV 01	740-011613	AM0812S8XAK	SFP-SX
Xcvr 5	REV 01	740-011613	AM0812S8XAA	SFP-SX
Xcvr 6	REV 01	740-011613	PAJ4NKY	SFP-SX
Xcvr 7	REV 01	740-011613	AM0812S8UJW	SFP-SX
Xcvr 8	REV 01	740-011782	PB81X89	SFP-SX
Xcvr 9	REV 01	740-011613	AM0812S8UJX	SFP-SX
PIC 1	REV 06	750-015217	DK3280	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P8POA3T	SFP-SX
Xcvr 1	REV 01	740-013111	5090002	SFP-T
Xcvr 2	REV 01	740-011613	AM0814S93BQ	SFP-SX
Xcvr 4		NON-JNPR	PDE0FAN	SFP-SX
Xcvr 5	REV 01	740-011782	P8Q20XY	SFP-SX
Xcvr 6	REV 01	740-011613	AM0812S8UJV	SFP-SX
Xcvr 7	REV 01	740-011613	AM0812S8UP7	SFP-SX
PIC 2	REV 05	750-004695	HT4383	1x Tunnel
PIC 3	REV 17	750-009553	RL0204	4x OC-48 SONET
Xcvr 0	REV 01	740-011785	PDS3T23	SFP-SR
Xcvr 1	REV 01	740-011785	P6Q0F3E	SFP-SR
MMB 0	REV 03	710-004047	HD5843	MMB-288mbit
MMB 1	REV 03	710-004047	HE3208	MMB-288mbit
PPB 0	REV 02	710-002845	HA4524	PPB Type 3
PPB 1	REV 02	710-002845	HA4766	PPB Type 3
FPC 3	REV 01	710-010154	HR0863	E-FPC Type 3
CPU	REV 01	710-010169	HN3422	FPC CPU-Enhanced
PIC 0	REV 07	750-012793	WF5096	1x 10GE(LAN/WAN) IQ2
Xcvr 0		NON-JNPR	M64294TP	XFP-10G-LR
PIC 1	REV 25	750-007141	DV2127	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011613	PFA6LTJ	SFP-SX

Xcvr 1	REV 01	740-011782	P9P0XV4	SFP-SX
Xcvr 2	REV 01	740-011782	P9M0TNX	SFP-SX
Xcvr 4	REV 01	740-011782	P9B0TTP	SFP-SX
Xcvr 5		NON-JNPR	PBS4LED	SFP-SX
PIC 2	REV 17	750-009553	RL0212	4x OC-48 SONET
Xcvr 0	REV 01	740-011785	PDS3T8G	SFP-SR
PIC 3	REV 32	750-003700	DL1279	1x OC-192 12xMM VSR
MMB 0	REV 01	710-010171	HR0821	MMB-288mbit
MMB 1	REV 01	710-010171	HR0818	MMB-288mbit
FPC 4	REV 16	710-013037	EB4919	FPC Type 4-ES
CPU	REV 09	710-016744	BBAA4382	ST-PMB2
PIC 0	REV 03	711-029996	EB1569	100GE
PIC 1	REV 05	711-029999	EB9983	100GE CFP
Xcvr 0	REV 0	740-032210	J10G80746	CFP-100G-LR4
BRIDGE 0	REV 02	711-029995	EB2235	100GE Bridge Board
MMB 0	REV 04	710-025563	BBAA7112	ST-MMB2
MMB 1	REV 04	710-025563	BBAA7149	ST-MMB2
FPC 5	REV 02	710-013037	DE3407	FPC Type 4-ES
CPU	REV 04	710-016744	DA2124	ST-PMB2
PIC 0	REV 16	750-012518	DF2554	4x OC-192 SONET XFP
Xcvr 0	REV 01	740-014279	AA0745N1FX8	XFP-OC192-SR
Xcvr 1	REV 01	740-014279	AA0748N1HN5	XFP-OC192-SR
Xcvr 2	REV 01	740-014279	AA0748N1HT6	XFP-OC192-SR
Xcvr 3	REV 01	740-014279	AA0744N1EC9	XFP-OC192-SR
PIC 1	REV 01	750-010850	JA0329	1x OC-768 SONET SR
MMB 0	REV 04	710-016036	DE9577	ST-MMB2
MMB 1	REV 04	710-016036	DK4060	ST-MMB2
FPC 6	REV 14	710-013037	DV1431	FPC Type 4-ES
CPU	REV 09	710-016744	DT9020	ST-PMB2
PIC 0	REV 11	750-017405	DM6261	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 01	740-014289	C701XU05Q	XFP-10G-SR
Xcvr 1	REV 01	740-014279	AA0748N1HPT	XFP-10G-LR
Xcvr 2	REV 01	740-014289	T08E19189	XFP-10G-SR
Xcvr 3	REV 01	740-014289	C715XU058	XFP-10G-SR
PIC 1	REV 13	750-017405	DP8772	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 02	740-011571	C850XJ037	XFP-10G-SR
Xcvr 1	REV 02	740-014289	C839XU0L9	XFP-10G-SR
Xcvr 2	REV 02	740-014289	C834XU05A	XFP-10G-SR
Xcvr 3	REV 02	740-014289	C810XU0CE	XFP-10G-SR
MMB 0	REV 01	710-025563	DT8454	ST-MMB2
MMB 1	REV 01	710-025563	DT8366	ST-MMB2
FPC 7	REV 09	710-007529	HZ7624	FPC Type 3
CPU	REV 15	710-001726	HZ1413	FPC CPU
PIC 0	REV 10	750-012793	DM5627	1x 10GE (LAN/WAN) IQ2
Xcvr 0	REV 02	740-011571	C831XJ062	XFP-10G-SR
PIC 1	REV 01	750-015217	JT6762	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P8Q25JU	SFP-SX
Xcvr 1	REV 01	740-011782	P9B0U0K	SFP-SX
PIC 2	REV 01	750-015217	JS4268	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011613	AM0812S8XBZ	SFP-SX
Xcvr 1	REV 01	740-011613	AM0812S8XAP	SFP-SX
Xcvr 2	REV 01	740-011613	AM0812S8XBY	SFP-SX
Xcvr 3	REV 01	740-011613	AM0812S8XBX	SFP-SX
Xcvr 4	REV 01	740-011613	P9F1652	SFP-SX
Xcvr 5	REV 01	740-011782	P8Q21YC	SFP-SX
Xcvr 6	REV 01	740-011782	P8Q27HQ	SFP-SX
Xcvr 7	REV 01	740-011613	P8E2SSU	SFP-SX
PIC 3	REV 15	750-009450	NB6790	1x OC-192 SM SR2
MMB 0	REV 03	710-005555	HZ3450	MMB-288mbit
MMB 1	REV 03	710-005555	HZ3415	MMB-288mbit

PPB 0	REV 04	710-002845	HP0887	PPB Type 3
PPB 1	REV 04	710-002845	HW5255	PPB Type 3
SPMB 0	REV 10	710-003229	HX3699	T-series Switch CPU
SPMB 1	REV 12	710-003229	DT3091	T-series Switch CPU
SIB 0	REV 07	710-013074	DS4747	SIB-I8-SF
SIB 1	REV 07	710-013074	DS4942	SIB-I8-SF
SIB 2	REV 07	710-013074	DS4965	SIB-I8-SF
SIB 3	REV 07	710-013074	DS4990	SIB-I8-SF
SIB 4	REV 07	710-013074	DS4944	SIB-I8-SF
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 2

show chassis hardware (TX Matrix Plus Router)

```
user@host> show chassis hardware
```

```
sfc0-re0:
```

```
-----
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN113186EAHB	TXP
Midplane	REV 05	710-022574	TS3822	SFC Midplane
FPM Display	REV 03	710-024027	DW4701	TXP FPM Display
CIP 0	REV 05	710-023792	DW7998	TXP CIP
CIP 1	REV 05	710-023792	DW7999	TXP CIP
PEM 0	Rev 04	740-027463	UM26367	Power Entry Module
PEM 1	Rev 04	740-027463	UM26346	Power Entry Module
Routing Engine 0	REV 06	740-026942	737A-1081	RE-DUO-2600
Routing Engine 1	REV 06	740-026942	737A-1043	RE-DUO-2600
CB 0	REV 05	710-022606	DW4435	SFC Control Board
CB 1	REV 09	710-022606	DW6100	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 04	750-024564	DW5764	F13 SIB
B Board	REV 03	710-023431	DW9053	F13 SIB Mezz
SIB F13 3	REV 04	750-024564	DW5785	F13 SIB
B Board	REV 03	710-023431	DW9030	F13 SIB Mezz
SIB F13 6				
SIB F13 8	REV 04	750-024564	DW5752	F13 SIB
B Board	REV 03	710-023431	DW9051	F13 SIB Mezz
SIB F13 11	REV 04	750-024564	DW5782	F13 SIB
B Board	REV 03	710-023431	DW9058	F13 SIB Mezz
SIB F13 12	REV 03	750-024564	DT9466	F13 SIB
B Board	REV 02	710-023431	DT6556	F13 SIB Mezz
SIB F2S 0/0	REV 05	710-022603	DW7898	F2S SIB
B Board	REV 05	710-023787	DW7625	F2S SIB Mezz
SIB F2S 0/2	REV 05	710-022603	DW7811	F2S SIB
B Board	REV 05	710-023787	DW7550	F2S SIB Mezz
SIB F2S 0/4	REV 04	710-022603	DW4873	F2S SIB
B Board	REV 05	710-023787	DW8509	F2S SIB Mezz
SIB F2S 0/6	REV 04	710-022603	DW4867	F2S SIB
B Board	REV 05	710-023787	DW8472	F2S SIB Mezz
SIB F2S 1/0	REV 04	710-022603	DW4871	F2S SIB
B Board	REV 05	710-023787	DW8497	F2S SIB Mezz
SIB F2S 1/2	REV 05	710-022603	DW7868	F2S SIB
B Board	REV 05	710-023787	DW7551	F2S SIB Mezz
SIB F2S 1/4	REV 04	710-022603	DW4854	F2S SIB
B Board	REV 05	710-023787	DW8496	F2S SIB Mezz
SIB F2S 1/6	REV 05	710-022603	DW7889	F2S SIB

B Board	REV 05	710-023787	DW7496	F2S SIB Mezz
SIB F2S 2/0	REV 04	710-022603	DW4852	F2S SIB
B Board	REV 05	710-023787	DW8498	F2S SIB Mezz
SIB F2S 2/2	REV 04	710-022603	DW4845	F2S SIB
B Board	REV 05	710-023787	DW8457	F2S SIB Mezz
SIB F2S 2/4	REV 05	710-022603	DW7802	F2S SIB
B Board	REV 05	710-023787	DW7562	F2S SIB Mezz
SIB F2S 2/6	REV 04	710-022603	DW4822	F2S SIB
B Board	REV 05	710-023787	DW8467	F2S SIB Mezz
SIB F2S 3/0	REV 05	710-022603	DW7815	F2S SIB
B Board	REV 05	710-023787	DW7518	F2S SIB Mezz
SIB F2S 3/2	REV 03	710-022603	DV0068	F2S SIB
B Board	REV 03	710-023787	DT9974	F2S SIB Mezz
SIB F2S 3/4	REV 05	710-022603	DW7874	F2S SIB
B Board	REV 05	710-023787	DW7601	F2S SIB Mezz
SIB F2S 3/6	REV 03	710-022603	DV0033	F2S SIB
B Board	REV 03	710-023787	DT9969	F2S SIB Mezz
SIB F2S 4/0	REV 03	710-022603	DV0043	F2S SIB
B Board	REV 03	710-023787	DT9948	F2S SIB Mezz
SIB F2S 4/2	REV 05	710-022603	DW5446	F2S SIB
B Board	REV 05	710-023787	DW7611	F2S SIB Mezz
SIB F2S 4/4	REV 04	710-022603	DW4826	F2S SIB
B Board	REV 05	710-023787	DW8458	F2S SIB Mezz
SIB F2S 4/6	REV 03	710-022603	DV0026	F2S SIB
B Board	REV 03	710-023787	DT9963	F2S SIB Mezz
Fan Tray 0	REV 02	760-024497	DR8290	Front Fan Tray
Fan Tray 1	REV 02	760-024497	DR8293	Front Fan Tray
Fan Tray 2	REV 05	760-024502	DR8280	Rear Fan Tray
Fan Tray 3				
Fan Tray 4	REV 05	760-024502	DR8276	Rear Fan Tray
Fan Tray 5	REV 02	760-024502	DP5643	Rear Fan Tray

lcc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11036F8AHA	T1600
Midplane	REV 03	710-017247	RC3799	T-series Backplane
FPM GBUS	REV 10	710-002901	DP7009	T640 FPM Board
FPM Display	REV 01	710-021387	DN7026	T1600 FPM Display
CIP	REV 06	710-002895	DP6024	T-series CIP
PEM 1	Rev 02	740-023211	WA50019	Power Entry Module 4x60A
SCG 0	REV 15	710-003423	DR6757	T640 Sonet Clock Gen.
SCG 1	REV 15	710-003423	DS2225	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-026941	737F-1040	RE-DUO-1800
Routing Engine 1	REV 01	740-026941	737F-1016	RE-DUO-1800
CB 0	REV 06	710-022597	DX4011	LCC Control Board
CB 1	REV 06	710-022597	DX4017	LCC Control Board
FPC 1	REV 07	710-013035	DN5847	FPC Type 3-ES
CPU	REV 08	710-016744	DP2570	ST-PMB2
PIC 0	REV 05	750-015217	DB0418	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P8Q27ZG	SFP-SX
Xcvr 1		NON-JNPR	PDA1U0D	SFP-SX
Xcvr 2	REV 01	740-011613	P9F1ALW	SFP-SX
Xcvr 3	REV 01	740-011782	PBA403V	SFP-SX
Xcvr 4		NON-JNPR	PDE09DP	SFP-SX
Xcvr 5	REV 01	740-011782	PCH2P4K	SFP-SX
Xcvr 6	REV 01	740-011782	PB94K0F	SFP-SX
Xcvr 7	REV 01	740-011782	PBA2R2A	SFP-SX
PIC 1	REV 03	750-004424	HJ4020	1x 10GE(LAN), DWDM

PIC 2	REV 01	750-003336	HG6073	4x OC-48 SONET, SMSR
MMB 0	REV 04	710-016036	DP3401	ST-MMB2
FPC 3	REV 12	710-013037	DR1169	FPC Type 4-ES
CPU	REV 08	710-016744	DP9429	ST-PMB2
PIC 0	REV 02	750-010850	JA0332	1x OC-768 SONET SR
MMB 0	REV 04	710-016036	DR0628	ST-MMB2
MMB 1	REV 04	710-016036	DR0592	ST-MMB2
FPC 4	REV 05	710-021534	DR7350	FPC Type 1-ES
CPU	REV 08	710-016744	DP8096	ST-PMB2
PIC 0	REV 04	750-014627	DP9171	4x OC-3 1x OC-12 SFP
Xcvr 0	REV 02	740-011615	PDE2RVR	SFP-SR
PIC 1	REV 22	750-005634	DS5815	1x CHOC12 IQ SONET, SMIR
PIC 2	REV 09	750-002911	CF4539	4x F/E, 100 BASE-TX
PIC 3	REV 08	750-021652	DR2827	1x CHOC12 IQE SONET
Xcvr 0		NON-JNPR	8	UNKNOWN
MMB 0	REV 04	710-016036	DR0809	ST-MMB2
FPC 5	REV 07	710-007529	HS5608	FPC Type 3
CPU	REV 15	710-001726	HX4351	FPC CPU
PIC 0	REV 14	750-009567	WJ8961	1x 10GE(LAN), XENPAK
Xcvr 0	REV 01	740-013170	J05K05961	XENPAK-LR
PIC 1	REV 16	750-007141	JJ8146	10x 1GE(LAN), 1000 BASE
Xcvr 1	REV 01	740-011613	P9F117T	SFP-SX
Xcvr 2	REV 01	740-011782	PBA2VCL	SFP-SX
Xcvr 3	REV 01	740-011782	PB83DRB	SFP-SX
Xcvr 4	REV 01	740-011613	AM0812S8UP8	SFP-SX
PIC 2	REV 12	750-009567	WF3566	1x 10GE(LAN), XENPAK
Xcvr 0	REV 02	740-013170	T07C94489	XENPAK-LR
MMB 0	REV 03	710-005555	HZ1907	MMB-288mbit
MMB 1	REV 03	710-005555	HW5283	MMB-288mbit
PPB 0	REV 04	710-002845	HZ7717	PPB Type 3
PPB 1	REV 04	710-002845	HS0110	PPB Type 3
FPC 6	REV 07	710-013035	DP7486	FPC Type 3-ES
CPU	REV 08	710-016744	DP2545	ST-PMB2
PIC 0	REV 09	750-009567	NE6323	1x 10GE(LAN), XENPAK
Xcvr 0	REV 02	740-013170	T09C71959	XENPAK-LR
PIC 1	REV 06	750-015217	DN4775	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011782	P7E0T6M	SFP-SX
Xcvr 1	REV 01	740-011613	AM0812S8XAY	SFP-SX
Xcvr 2	REV 01	740-011782	P7E0T6J	SFP-SX
Xcvr 3	REV 01	740-011782	PCH2P7D	SFP-SX
Xcvr 4	REV 01	740-011782	P9B0QYT	SFP-SX
Xcvr 5	REV 01	740-011613	AM0812S8WQJ	SFP-SX
Xcvr 6	REV 02	740-013111	9301220	SFP-T
Xcvr 7	REV 01	740-011782	P9B0TZ5	SFP-SX
PIC 2	REV 06	750-015217	DM6747	8x 1GE(TYPE3), IQ2
Xcvr 0	REV 01	740-011613	PAP0ZB2	SFP-SX
Xcvr 1	REV 01	740-013111	70191002	SFP-T
Xcvr 6	REV 01	740-011782	PBA29H8	SFP-SX
Xcvr 7	REV 01	740-011613	AM0812S8WQG	SFP-SX
MMB 0	REV 04	710-016036	DP3238	ST-MMB2
FPC 7	REV 03	710-021540	DV3154	FPC Type 2-ES
CPU	REV 09	710-016744	DT9053	ST-PMB2
PIC 0	REV 13	750-001901	HB4225	4x OC-12 SONET, SMIR
PIC 1	REV 05	750-001900	AD3644	1x OC-48 SONET, SMSR
PIC 2	REV 10	750-008155	HV0335	2x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011782	PCH2UKF	SFP-SX
Xcvr 1	REV 01	740-011782	PCH2V19	SFP-SX
PIC 3	REV 03	750-014638	JS9493	1x OC-48-12-3 SFP

Xcvr 0	REV 01	740-011785	P6Q0ENK	SFP-SR
MMB 0	REV 05	710-016036	DP3323	ST-MMB2
SPMB 0	REV 04	710-023321	DX3004	LCC Switch CPU
SPMB 1	REV 04	710-023321	DX3009	LCC Switch CPU
SIB 0	REV 07	710-022594	DW4195	LCC SIB
B Board	REV 07	710-023185	DW3930	LCC SIB Mezz
SIB 1	REV 07	710-022594	DW4179	LCC SIB
B Board	REV 07	710-023185	DW3919	LCC SIB Mezz
SIB 2				
SIB 3	REV 06	710-022594	DT8251	LCC SIB
B Board	REV 06	710-023185	DT5792	LCC SIB Mezz
SIB 4	REV 08	710-022594	DW8014	LCC SIB
B Board	REV 07	710-023185	DW3917	LCC SIB Mezz
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 3

lcc1-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1102270AHA	T1600
Midplane	REV 04	710-017247	RC5358	T-series Backplane
FPM GBUS	REV 10	710-002901	DS3443	T640 FPM Board
FPM Display	REV 01	710-021387	DS6411	T1600 FPM Display
CIP	REV 06	710-002895	DS4235	T-series CIP
PEM 0	Rev 02	740-023211	VM82438	Power Entry Module 4x60A
SCG 0	REV 15	710-003423	DS6649	T640 Sonet Clock Gen.
SCG 1	REV 15	710-003423	DR6775	T640 Sonet Clock Gen.
Routing Engine 0	REV 01	740-026941	737F-1083	RE-DUO-1800
Routing Engine 1	REV 01	740-026941	737F-1104	RE-DUO-1800
CB 0	REV 06	710-022597	DW8542	LCC Control Board
CB 1	REV 06	710-022597	DW8530	LCC Control Board
FPC 0	REV 02	710-010845	JE2392	FPC Type 4
CPU	REV 02	710-011481	JF6820	FPC CPU-Enhanced
PIC 0	REV 11	750-017405	DP7259	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 01	740-014279	AA0741N1C8T	XFP-10G-LR
Xcvr 1	REV 01	740-014279	AA0746N1GAM	XFP-10G-LR
Xcvr 2	REV 01	740-014279	AA0747N1H0B	XFP-10G-LR
Xcvr 3	REV 01	740-014279	AA0748N1HZ5	XFP-10G-LR
MMB 0	REV 03	710-010842	HY7601	ST-MMB
FPC 1	REV 16	710-013037	BBAA7398	FPC Type 4-ES
CPU	REV 09	710-016744	BBAA2329	ST-PMB2
PIC 0	REV 03	711-029996	EB1575	100GE
PIC 1	REV 06	750-034781	EB9980	100GE CFP
MMB 0	REV 04	710-025563	BBAA5325	ST-MMB2
MMB 1	REV 04	710-025563	BBAA5444	ST-MMB2
FPC 2	REV 16	710-013037	BBAA7185	FPC Type 4-ES
CPU	REV 09	710-016744	BBAA3522	ST-PMB2
PIC 0	REV 03	711-029996	EB1557	100GE
PIC 1	REV 05	750-034781	EB4660	100GE CFP
Xcvr 0	REV 0	740-032210	J10F73666	CFP-100G-LR4
BRIDGE 0	REV 02	711-029995	EB2237	100GE Bridge Board
MMB 0	REV 04	710-025563	BBAA5347	ST-MMB2
MMB 1	REV 04	710-025563	BBAA5401	ST-MMB2
FPC 3	REV 10	710-021534	DZ0941	FPC Type 1-ES
CPU	REV 09	710-016744	DY6364	ST-PMB2
PIC 0	REV 13	750-012266	DK9192	4x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	AM0812S8WVD	SFP-SX
Xcvr 1		NON-JNPR	PDD63Q4	SFP-SX

Xcvr 2		NON-JNPR	PDE4G54	SFP-SX
Xcvr 3		NON-JNPR	PD40MAG	SFP-SX
PIC 1	REV 01	750-007641	HJ2003	1x G/E IQ, 1000 BASE
Xcvr 0	REV 01	740-011613	AM0812S8WVG	SFP-SX
PIC 3	REV 17	750-007444	JB6873	1x CHSTM1 IQ SDH, SMIR
MMB 0	REV 04	710-025563	DZ0281	ST-MMB2
FPC 4	REV 06	710-013035	DK0614	FPC Type 3-ES
CPU	REV 07	710-016744	DK1616	ST-PMB2
PIC 0	REV 22	750-007141	DM1870	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	PCL3UKW	SFP-SX
Xcvr 1	REV 01	740-011782	P7E0T73	SFP-SX
Xcvr 2	REV 01	740-007326	P4TOWLR	SFP-SX
Xcvr 3	REV 01	740-011782	PAR1LRL	SFP-SX
Xcvr 4	REV 01	740-011782	P9MOU3Z	SFP-SX
Xcvr 5	REV 01	740-011782	P9MOU0C	SFP-SX
Xcvr 6	REV 01	740-011782	P9MOTLG	SFP-SX
Xcvr 7	REV 01	740-011782	P9MOU0F	SFP-SX
Xcvr 8	REV 01	740-011613	PFA6LAP	SFP-SX
Xcvr 9	REV 01	740-011782	PCH2POU	SFP-SX
PIC 1	REV 16	750-009450	CV2565	1x OC-192 SM SR2
PIC 2	REV 05	750-004424	HH3057	1x 10GE(LAN), 10GBASE-LR
PIC 3	REV 12	750-013423	DP0403	MultiServices 500
MMB 0	REV 04	710-016036	DK1988	ST-MMB2
FPC 5	REV 07	710-013560	DR0004	E2-FPC Type 3
CPU	REV 05	710-013563	DR0089	FPC CPU-Enhanced
PIC 0	REV 11	750-012793	DR6107	1x 10GE(LAN/WAN) IQ2
Xcvr 0	REV 01	740-014289	C743XU074	XFP-10G-SR
PIC 1	REV 01	750-004695	HD5980	1x Tunnel
PIC 2	REV 32	750-003700	DL3770	1x OC-192 12xMM VSR
PIC 3	REV 12	750-009553	WB8901	4x OC-48 SONET
Xcvr 0	REV 01	740-011785	P9D1GTQ	SFP-SR
Xcvr 1	REV 01	740-011785	PDSOMMB	SFP-SR
Xcvr 3	REV 01	740-011785	PDE1KXP	SFP-SR
MMB 0	REV 07	710-010171	DP7374	MMB-5M3-288mbit
MMB 1	REV 07	710-010171	DP7404	MMB-5M3-288mbit
FPC 6	REV 07	710-013035	DM0994	FPC Type 3-ES
CPU	REV 07	710-016744	DM3651	ST-PMB2
PIC 0	REV 07	750-015217	DN4743	8x 1GE(TYPE3), IQ2
Xcvr 3	REV 01	740-011613	AM0812S8XB0	SFP-SX
Xcvr 4	REV 01	740-011782	PB829RB	SFP-SX
Xcvr 5	REV 01	740-011782	P8J1SYX	SFP-SX
PIC 1	REV 03	750-003336	HJ9954	4x OC-48 SONET, SMSR
PIC 3	REV 02	750-012793	JM7665	1x 10GE(LAN/WAN) IQ2
MMB 0	REV 04	710-016036	DN6913	ST-MMB2
FPC 7	REV 08	710-010845	JM3958	FPC Type 4
CPU	REV 04	710-011481	JK3669	FPC CPU-Enhanced
PIC 0	REV 11	750-017405	DP8837	4x 10GE (LAN/WAN) XFP
Xcvr 1	REV 01	740-014279	753019A00277	XFP-10G-LR
Xcvr 2	REV 02	740-011571	C850XJ00P	XFP-10G-SR
Xcvr 3	REV 01	740-014279	AA0813N1RTG	XFP-10G-LR
MMB 0	REV 04	710-010842	JN1971	ST-MMB
SPMB 0	REV 04	710-023321	DW3629	LCC Switch CPU
SPMB 1	REV 04	710-023321	DW3621	LCC Switch CPU
SIB 0	REV 07	710-022594	DW4200	LCC SIB
B Board	REV 07	710-023185	DW3932	LCC SIB Mezz
SIB 1	REV 07	710-022594	DW4193	LCC SIB
B Board	REV 07	710-023185	DW3904	LCC SIB Mezz
SIB 2				

SIB 3	REV 07	710-022594	DW4210	LCC SIB
B Board	REV 06	710-023185	DT5780	LCC SIB Mezz
SIB 4	REV 08	710-022594	DW8019	LCC SIB
B Board	REV 06	710-023185	DT5795	LCC SIB Mezz
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 3

show chassis hardware sfc (TX Matrix Plus Router)

```
user@host> show chassis hardware sfc 0
```

```
sfc0-re0:
```

```
-----
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN112F007AHB	TXP
Midplane	REV 05	710-022574	TS4027	SFC Midplane
FPM Display	REV 03	710-024027	DX0282	TXP FPM Display
CIP 0	REV 04	710-023792	DW4889	TXP CIP
CIP 1	REV 04	710-023792	DW4887	TXP CIP
PEM 0	Rev 07	740-027463	UM26368	Power Entry Module
Routing Engine 0	REV 01	740-026942	737A-1064	SFC RE
Routing Engine 1	REV 01	740-026942	737A-1082	SFC RE
CB 0	REV 09	710-022606	DW6099	SFC Control Board
CB 1	REV 09	710-022606	DW6096	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 04	710-022600	DX0841	F13 SIB
B Board	REV 03	710-023431	DX0966	F13 SIB Mezz
SIB F13 1	REV 04	750-024564	DW5776	F13 SIB
B Board	REV 03	710-023431	DW9028	F13 SIB
SIB F13 3	REV 04	750-024564	DW5762	F13 SIB
B Board	REV 03	710-023431	DW9059	F13 SIB
SIB F13 4	REV 04	750-024564	DW5797	F13 SIB
B Board	REV 03	710-023431	DW9041	F13 SIB
SIB F13 6	REV 04	750-024564	DW5770	F13 SIB
B Board	REV 03	710-023431	DW9079	F13 SIB Mezz
SIB F13 7	REV 04	750-024564	DW5758	F13 SIB
B Board	REV 03	710-023431	DW9047	F13 SIB
SIB F13 8	REV 04	750-024564	DW5761	F13 SIB
B Board	REV 03	710-023431	DW9043	F13 SIB Mezz
SIB F13 9	REV 04	750-024564	DW5754	F13 SIB
B Board	REV 03	710-023431	DW9078	F13 SIB Mezz
SIB F13 11	REV 04	710-022600	DX0826	F13 SIB
B Board	REV 03	710-023431	DX0967	F13 SIB Mezz
SIB F13 12	REV 04	750-024564	DW5794	F13 SIB
B Board	REV 03	710-023431	DW9044	F13 SIB Mezz
SIB F2S 0/0	REV 05	710-022603	DW7897	F2S SIB
B Board	REV 05	710-023787	DW7657	NEO PMB
SIB F2S 0/2	REV 05	710-022603	DW7833	F2S SIB
B Board	REV 05	710-023787	DW7526	NEO PMB
SIB F2S 0/4	REV 05	710-022603	DW7875	F2S SIB
B Board	REV 05	710-023787	DW7588	NEO PMB
SIB F2S 0/6	REV 05	710-022603	DW7860	F2S SIB
B Board	REV 05	710-023787	DW7589	NEO PMB
SIB F2S 1/0	REV 04	710-022603	DW4820	F2S SIB
B Board	REV 05	710-023787	DW8510	NEO PMB
SIB F2S 1/2	REV 05	710-022603	DW7849	F2S SIB
B Board	REV 05	710-023787	DW7525	NEO PMB

SIB F2S 1/4	REV 05	710-022603	DW7927	F2S SIB
B Board	REV 05	710-023787	DW7556	F2S SIB Mezz
SIB F2S 1/6	REV 05	710-022603	DW7866	F2S SIB
B Board	REV 05	710-023787	DW7651	NEO PMB
SIB F2S 2/0	REV 05	710-022603	DW7880	F2S SIB
B Board	REV 05	710-023787	DW7523	NEO PMB
SIB F2S 2/2	REV 05	710-022603	DW7895	F2S SIB
B Board	REV 05	710-023787	DW7591	NEO PMB
SIB F2S 2/4	REV 05	710-022603	DW7907	F2S SIB
B Board	REV 05	710-023787	DW7590	NEO PMB
SIB F2S 2/6	REV 05	710-022603	DW7785	F2S SIB
B Board	REV 05	710-023787	DW7524	NEO PMB
SIB F2S 3/0	REV 05	710-022603	DW7782	F2S SIB
B Board	REV 05	710-023787	DW7634	NEO PMB
SIB F2S 3/2	REV 05	710-022603	DW7793	F2S SIB
B Board	REV 05	710-023787	DW7548	NEO PMB
SIB F2S 3/4	REV 05	710-022603	DW7779	F2S SIB
B Board	REV 05	710-023787	DW7587	NEO PMB
SIB F2S 3/6	REV 05	710-022603	DW7930	F2S SIB
B Board	REV 05	710-023787	DW7505	NEO PMB
SIB F2S 4/0	REV 05	710-022603	DW7867	F2S SIB
B Board	REV 05	710-023787	DW7656	NEO PMB
SIB F2S 4/2	REV 05	710-022603	DW7917	F2S SIB
B Board	REV 05	710-023787	DW7640	NEO PMB
SIB F2S 4/4	REV 05	710-022603	DW7929	F2S SIB
B Board	REV 05	710-023787	DW7643	NEO PMB
SIB F2S 4/6	REV 05	710-022603	DW7870	F2S SIB
B Board	REV 05	710-023787	DW7635	NEO PMB
Fan Tray 0	REV 06	760-024497	DV7831	Front Fan Tray
Fan Tray 1	REV 06	760-024497	DV9614	Front Fan Tray
Fan Tray 2	REV 06	760-024502	DV9618	Rear Fan Tray
Fan Tray 3	REV 06	760-024502	DV9616	Rear Fan Tray
Fan Tray 4	REV 06	760-024502	DV7807	Rear Fan Tray
Fan Tray 5	REV 06	760-024502	DV7828	Rear Fan Tray

show chassis hardware extensive (TX Matrix Plus Router)

```
user@host> show chassis hardware extensive
```

```
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN112F007AHB	TXP
Jedec Code:	0x7fb0	EEPROM Version:	0x02	
		S/N:	JN112F007AHB	
Assembly ID:	0x052c	Assembly Version:	00.00	
Date:	00-00-0000	Assembly Flags:	0x00	
ID:	TXP			

```
Board Information Record:
```

```
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
I2C Hex Data:
```

```
Address 0x00: 7f b0 02 ff 05 2c 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x20: 4a 4e 31 31 32 46 30 30 37 41 48 42 00 00 00 00
```

```
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```

Midplane          REV 05   710-022574   TS4027          SFC Midplane
Jedec Code:      0x7fb0          EEPROM Version: 0x01
P/N:             710-022574      S/N:           TS4027
Assembly ID:     0x0962          Assembly Version: 01.05
Date:            03-23-2009      Assembly Flags: 0x00
Version:         REV 05
ID: SFC Midplane
Board Information Record:
  Address 0x00: ad 01 ff ff 00 1d b5 14 00 00 ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 09 62 01 05 52 45 56 20 30 35 00 00
  Address 0x10: 00 00 00 00 37 31 30 2d 30 32 32 35 37 34 00 00
  Address 0x20: 53 2f 4e 20 54 53 34 30 32 37 00 00 00 17 03 07
  Address 0x30: d9 ff ff ff ad 01 ff ff 00 1d b5 14 00 00 ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

FPM Display       REV 03   710-024027   DX0282          TXP FPM Display
Jedec Code:      0x7fb0          EEPROM Version: 0x01
P/N:             710-024027      S/N:           DX0282
Assembly ID:     0x096c          Assembly Version: 01.03
Date:            02-10-2009      Assembly Flags: 0x00
Version:         REV 03
ID: TXP FPM Display          FRU Model Number: CRAFT-TXP
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 09 6c 01 03 52 45 56 20 30 33 00 00
  Address 0x10: 00 00 00 00 37 31 30 2d 30 32 34 30 32 37 00 00
  Address 0x20: 53 2f 4e 20 44 58 30 32 38 32 00 00 00 0a 02 07
  Address 0x30: d9 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 00 00 00 00 00 00 00 00 00 00 43
  Address 0x50: 52 41 46 54 2d 54 58 50 00 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

CIP 0             REV 04   710-023792   DW4889          TXP CIP
Jedec Code:      0x7fb0          EEPROM Version: 0x01
P/N:             710-023792      S/N:           DW4889
Assembly ID:     0x0969          Assembly Version: 01.04
Date:            01-26-2009      Assembly Flags: 0x00
Version:         REV 04
ID: TXP CIP          FRU Model Number: CIP-TXP
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

show chassis hardware clei-models (TX Matrix Plus Router)

```
user@host> show chassis hardware clei-models
```

```
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 05	710-022574		CHAS-BP-TXP-S
FPM Display	REV 03	710-024027		CRAFT-TXP-S
CIP 0	REV 05	710-023792		CIP-TXP-S
CIP 1	REV 05	710-023792		CIP-TXP-S
PEM 0	Rev 04	740-027463	IPUPAFGKTA	PWR-TXP-7-60-DC
PEM 1	Rev 04	740-027463	IPUPAFGKTA	PWR-TXP-7-60-DC

Routing Engine 0	REV 06	740-026942	RE-DUO-C2600-16G-S
Routing Engine 1	REV 06	740-026942	RE-DUO-C2600-16G-S
CB 0	REV 05	710-022606	CB-TXP-S
CB 1	REV 09	710-022606	CB-TXP-S
SIB F13 0	REV 04	750-024564	SIB-TXP-F13
SIB F13 3	REV 04	750-024564	SIB-TXP-F13
SIB F13 8	REV 04	750-024564	SIB-TXP-F13
SIB F13 11	REV 04	750-024564	SIB-TXP-F13
SIB F13 12	REV 03	750-024564	SIB-TXP-F13
SIB F2S 0/0	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 0/2	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 0/4	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 0/6	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 1/0	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 1/2	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 1/4	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 1/6	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 2/0	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 2/2	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 2/4	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 2/6	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 3/0	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 3/2	REV 03	710-022603	SIB-TXP-F2S-S
SIB F2S 3/4	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 3/6	REV 03	710-022603	SIB-TXP-F2S-S
SIB F2S 4/0	REV 03	710-022603	SIB-TXP-F2S-S
SIB F2S 4/2	REV 05	710-022603	SIB-TXP-F2S-S
SIB F2S 4/4	REV 04	710-022603	SIB-TXP-F2S-S
SIB F2S 4/6	REV 03	710-022603	SIB-TXP-F2S-S
Fan Tray 0	REV 02	760-024497	FANTRAY-TXP-H-S
Fan Tray 1	REV 02	760-024497	FANTRAY-TXP-H-S
Fan Tray 2	REV 05	760-024502	FANTRAY-TXP-V-S
Fan Tray 3			
Fan Tray 4	REV 05	760-024502	FANTRAY-TXP-V-S
Fan Tray 5	REV 02	760-024502	FANTRAY-TXP-V-S

1cc0-re0:

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 03	710-017247		CHAS-BP-T1600-S
FPM Display	REV 01	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 1	Rev 02	740-023211	IPUPAC8KTA	PWR-T1600-4-60-DC-S
SCG 0	REV 15	710-003423		SCG-T-S
SCG 1	REV 15	710-003423		SCG-T-S
Routing Engine 0	REV 01	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 01	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 06	710-022597		CB-LCC-S
CB 1	REV 06	710-022597		CB-LCC-S
FPC 1	REV 07	710-013035		T640-FPC3-ES
PIC 0	REV 05	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 1	REV 03	750-004424		PC-1XGE-LR
PIC 2	REV 01	750-003336		PC-40C48-SON-SMSR
FPC 3	REV 12	710-013037		T1600-FPC4-ES
PIC 0	REV 02	750-010850		PD-10C768-SON-SR
FPC 4	REV 05	710-021534		T640-FPC1-ES
PIC 0	REV 04	750-014627		PB-40C3-10C12-SON-SFP
PIC 1	REV 22	750-005634		PB-1CHOC12SMIR-QPP
PIC 2	REV 09	750-002911		PB-4FE-TX

PIC 3	REV 08	750-021652	PB-1CH0C12-STM4-IQE-SFP
FPC 5	REV 07	710-007529	T640-FPC3
PIC 0	REV 14	750-009567	PC-1XGE-XENPAK
PIC 1	REV 16	750-007141	PC-10GE-SFP
PIC 2	REV 12	750-009567	PC-1XGE-XENPAK
FPC 6	REV 07	710-013035	T640-FPC3-ES
PIC 0	REV 09	750-009567	PC-1XGE-XENPAK
PIC 1	REV 06	750-015217	PC-8GE-TYPE3-SFP-IQ2
PIC 2	REV 06	750-015217	PC-8GE-TYPE3-SFP-IQ2
FPC 7	REV 03	710-021540	T640-FPC2-ES
PIC 0	REV 13	750-001901	PB-40C12-SON-SMIR
PIC 1	REV 05	750-001900	PB-10C48-SON-SMSR
PIC 2	REV 10	750-008155	PB-2GE-SFP-QPP
PIC 3	REV 03	750-014638	PB-10C48-SON-B-SFP
SIB 0	REV 07	710-022594	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	SIB-TXP-T1600-S
SIB 3	REV 06	710-022594	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	SIB-TXP-T1600-S
Fan Tray 0			FANTRAY-T-S
Fan Tray 1			FANTRAY-T-S
Fan Tray 2			FANTRAY-TXP-R-S

```
lcc1-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 04	710-017247		CHAS-BP-T1600-S
FPM Display	REV 01	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	Rev 02	740-023211	IPUPAC8KTA	PWR-T1600-4-60-DC-S
SCG 0	REV 15	710-003423		SCG-T-S
SCG 1	REV 15	710-003423		SCG-T-S
Routing Engine 0	REV 01	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 01	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 06	710-022597		CB-LCC-S
CB 1	REV 06	710-022597		CB-LCC-S
FPC 0	REV 02	710-010845		T640-FPC4-ES
PIC 0	REV 11	750-017405		PD-4XGE-XFP
FPC 1	REV 16	710-013037		T1600-FPC4-ES
PIC 1	REV 06	750-034781		PD-1CE-CFP
FPC 2	REV 16	710-013037		T1600-FPC4-ES
PIC 1	REV 05	750-034781		PD-1CE-CFP
FPC 3	REV 10	710-021534		T640-FPC1-ES
PIC 0	REV 13	750-012266		PB-4GE-TYPE1-SFP-IQ2
PIC 1	REV 01	750-007641		PE-1GE-SFP-QPP
PIC 3	REV 17	750-007444		PB-1CHSTM1-SMIR-QPP
FPC 4	REV 06	710-013035		T640-FPC3-ES
PIC 0	REV 22	750-007141		PC-10GE-SFP
PIC 1	REV 16	750-009450		PC-10C192-SON-SR2
PIC 2	REV 05	750-004424		PC-1XGE-LR
PIC 3	REV 12	750-013423		PC-MS-500-3
FPC 5	REV 07	710-013560		T640-FPC3-E2
PIC 0	REV 11	750-012793		PC-1XGE-TYPE3-XFP-IQ2
PIC 1	REV 01	750-004695		PC-TUNNEL
PIC 2	REV 32	750-003700		PC-10C192-SON-VSR
PIC 3	REV 12	750-009553		PC-40C48-SON-SFP
FPC 6	REV 07	710-013035		T640-FPC3-ES
PIC 0	REV 07	750-015217		PC-8GE-TYPE3-SFP-IQ2
PIC 1	REV 03	750-003336		PC-40C48-SON-SMSR
PIC 3	REV 02	750-012793		PC-1XGE-TYPE3-XFP-IQ2

FPC 7	REV 08	710-010845	T640-FPC4-ES
PIC 0	REV 11	750-017405	PD-4XGE-XFP
SIB 0	REV 07	710-022594	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	SIB-TXP-T1600-S
SIB 3	REV 07	710-022594	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	SIB-TXP-T1600-S
Fan Tray 0			FANTRAY-T-S
Fan Tray 1			FANTRAY-T-S
Fan Tray 2			FANTRAY-TXP-R-S

show chassis hardware detail (TX Matrix Plus Router)

```
user@host> show chassis hardware detail
```

```
sfc0-re0:
```

```
-----  
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN111B023AHB	TXP
Midplane	REV 01	710-022574	TR7990	SFC Midplane
FPM Display	REV 03	710-024027	DW4699	TXP FPM Display
CIP 0	REV 01	710-023792	DR1437	TXP CIP
CIP 1	REV 02	710-023792	DS4564	TXP CIP
PEM 0	Rev 07	740-027463	UM26360	Power Entry Module
Routing Engine 0	REV 01	740-026942	737A-1024	SFC RE
ad0	3887 MB	SMART CF	200811050193CEB1CEB1	Compact Flash
ad1	30533 MB	SAMSUNG MCBQE32G8MPP-0V	SY814A0762	Disk 1
Routing Engine 1	REV 01	740-026942	737A-1024	SFC RE
ad0	3887 MB	SMART CF	20081105004C19A019A0	Compact Flash
ad1	30533 MB	SAMSUNG MCBQE32G8MPP-0V	SY814A0794	Disk 1
CB 0	REV 03	710-022606	DR7134	SFC Control Board
CB 1	REV 01	710-022606	DP8890	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 03	750-024564	DT9478	F13 SIB
B Board	REV 02	710-023431	DT6554	F13 SIB
SIB F13 1	REV 03	750-024564	DT9454	F13 SIB
B Board	REV 02	710-023431	DT6551	F13 SIB
SIB F2S 0/0	REV 02	710-022603	DT2838	F2S SIB
B Board	REV 02	710-023787	DT1725	NEO PMB
SIB F2S 0/2	REV 02	710-022603	DT2824	F2S SIB
B Board	REV 02	710-023787	DT1706	NEO PMB
SIB F2S 0/4	REV 02	710-022603	DT2822	F2S SIB
B Board	REV 02	710-023787	DT1696	NEO PMB
SIB F2S 0/6	REV 02	710-022603	DT2823	F2S SIB
B Board	REV 02	710-023787	DT1717	NEO PMB
SIB F2S 1/0	REV 03	710-022603	DV0059	F2S SIB
B Board	REV 03	710-023787	DT9942	NEO PMB
SIB F2S 1/2	REV 02	710-022603	DT2826	F2S SIB
B Board	REV 02	710-023787	DT1713	NEO PMB
SIB F2S 1/4	REV 03	710-022603	DV0092	F2S SIB
B Board	REV 03	710-023787	DV0000	NEO PMB
SIB F2S 1/6	REV 03	710-022603	DV0079	F2S SIB
B Board	REV 03	710-023787	DT9972	NEO PMB
SIB F2S 2/0	REV 03	710-022603	DV0100	F2S SIB
B Board	REV 03	710-023787	DT9925	NEO PMB
SIB F2S 2/2	REV 03	710-022603	DV0050	F2S SIB
B Board	REV 03	710-023787	DV0005	NEO PMB
SIB F2S 2/4	REV 03	710-022603	DV0097	F2S SIB
B Board	REV 03	710-023787	DT9936	NEO PMB

```

Fan Tray 0      REV 02  760-024497  DR8286      Front Fan Tray
Fan Tray 1      REV 06  760-024497  DV9624      Front Fan Tray
Fan Tray 2      REV 02  760-024502  DR8259      Rear Fan Tray
Fan Tray 3      REV 02  760-024502  DR8270      Rear Fan Tray
Fan Tray 4      REV 02  760-024502  DR8284      Rear Fan Tray
Fan Tray 5      REV 06  760-024502  DV7813      Rear Fan Tray

lcc0-re0:
-----
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN1101F27AHA  T1600
Midplane      REV 04  710-017247  RC5317        T Series Backplane
FPM GBUS      REV 10  710-002901  DS8197        T640 FPM Board
FPM Display   REV 01  710-021387  DS6433        T1600 FPM Display
CIP           REV 06  710-002895  DS1493        T Series CIP
PEM 0         Rev 08  740-017906  UD26601       Power Entry Module 3x80
SCG 0         REV 15  710-003423  DP5847        T640 Sonet Clock Gen.
SCG 1         REV 15  710-003423  DR0924        T640 Sonet Clock Gen.
Routing Engine 0 REV 01  740-026942  737F-1024     LCC RE
  ad0  3887 MB  SMART CF      2008110502B63E513E51 Compact Flash
  ad1  30533 MB SAMSUNG MCBQE32G8MPP-0V SY814A1208 Disk 1
Routing Engine 1 REV 01  740-026942  737F-1024     LCC RE
  ad0  3887 MB  SMART CF      2008110500F9A8A8A8A8 Compact Flash
  ad1  30533 MB SAMSUNG MCBQE32G8MPP-0V SY814A1076 Disk 1
CB 0          REV 05  710-022597  DV4264        LCC Control Board
CB 1          REV 03  710-022597  DP8558        LCC Control Board
FPC 0         REV 14  710-013037  DS9967        FPC Type 4-ES
  CPU         REV 08  710-016744  DS3989        ST-PMB2
  PIC 0       REV 12  750-013198  DL7506        1x Tunnel
  PIC 1       REV 12  750-013198  DL7505        1x Tunnel
  MMB 0       REV 01  710-025563  DS8524        ST-MMB2
  MMB 1       REV 01  710-025563  DS8373        ST-MMB2
FPC 1         REV 14  710-013037  DT0027        FPC Type 4-ES
  CPU         REV 09  710-016744  DS7684        ST-PMB2
  PIC 0       REV 12  750-013198  DL7512        1x Tunnel
  PIC 1       REV 12  750-013198  DL7498        1x Tunnel
  MMB 0       REV 01  710-025563  DS8494        ST-MMB2
  MMB 1       REV 01  710-025563  DS8436        ST-MMB2
SPMB 0        REV 04  710-023321  DV3867        LCC Switch CPU
SPMB 1        REV 02  710-023321  DP0238        LCC Switch CPU
SIB 0         REV 06  710-022594  DT8268        LCC SIB
  B Board     REV 06  710-023185  DT5791        LCC SIB Mezz
SIB 1         REV 06  710-022594  DT8261        LCC SIB
  B Board     REV 06  710-023185  DT5769        LCC SIB Mezz
SIB 2         REV 04  710-022594  DS2315        LCC SIB
  B Board     REV 06  710-023185  DT5788        LCC SIB Mezz
SIB 3         REV 06  710-022594  DT8253        LCC SIB
  B Board     REV 06  710-023185  DT5811        LCC SIB Mezz
SIB 4         REV 06  710-022594  DT8248        LCC SIB
  B Board     REV 06  710-023185  DT5812        LCC SIB Mezz
Fan Tray 0    Front Top Fan Tray
Fan Tray 1    Front Bottom Fan Tray
Fan Tray 2    Rear Fan Tray

```

show chassis hardware models (TX Matrix Plus Router)

```
user@host> show chassis hardware models
```

sfc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
FPM Display	REV 03	710-024027	DX0282	CRAFT-TXP
CIP 0	REV 04	710-023792	DW4889	CIP-TXP
CIP 1	REV 04	710-023792	DW4887	CIP-TXP
PEM 0	Rev 07	740-027463	UM26368	yyyyyyyyyyyyyyyyyyyyyyyyyy
Routing Engine 0	REV 01	740-026942	737A-1064	RE-TXP-SFC-DUO-2600-16G
Routing Engine 1	REV 01	740-026942	737A-1082	RE-TXP-SFC-DUO-2600-16G
CB 0	REV 09	710-022606	DW6099	CB-TXP
CB 1	REV 09	710-022606	DW6096	CB-TXP
SIB F13 1	REV 04	750-024564	DW5776	SIB-TXP-F13
SIB F13 3	REV 04	750-024564	DW5762	SIB-TXP-F13
SIB F13 4	REV 04	750-024564	DW5797	SIB-TXP-F13
SIB F13 6	REV 04	750-024564	DW5770	SIB-TXP-F13
SIB F13 7	REV 04	750-024564	DW5758	SIB-TXP-F13
SIB F13 8	REV 04	750-024564	DW5761	SIB-TXP-F13
SIB F13 9	REV 04	750-024564	DW5754	SIB-TXP-F13
SIB F13 12	REV 04	750-024564	DW5794	SIB-TXP-F13
SIB F2S 0/0	REV 05	710-022603	DW7897	
SIB F2S 0/2	REV 05	710-022603	DW7833	
SIB F2S 0/4	REV 05	710-022603	DW7875	
SIB F2S 0/6	REV 05	710-022603	DW7860	
SIB F2S 1/0	REV 04	710-022603	DW4820	
SIB F2S 1/2	REV 05	710-022603	DW7849	
SIB F2S 1/4	REV 05	710-022603	DW7927	SIB-TXP-F2S
SIB F2S 1/6	REV 05	710-022603	DW7866	
SIB F2S 2/0	REV 05	710-022603	DW7880	
SIB F2S 2/2	REV 05	710-022603	DW7895	
SIB F2S 2/4	REV 05	710-022603	DW7907	
SIB F2S 2/6	REV 05	710-022603	DW7785	
SIB F2S 3/0	REV 05	710-022603	DW7782	
SIB F2S 3/2	REV 05	710-022603	DW7793	
SIB F2S 3/4	REV 05	710-022603	DW7779	
SIB F2S 3/6	REV 05	710-022603	DW7930	
SIB F2S 4/0	REV 05	710-022603	DW7867	
SIB F2S 4/2	REV 05	710-022603	DW7917	
SIB F2S 4/4	REV 05	710-022603	DW7929	
SIB F2S 4/6	REV 05	710-022603	DW7870	
Fan Tray 0	REV 06	760-024497	DV7831	FANTRAY-TXP-F
Fan Tray 1	REV 06	760-024497	DV9614	FANTRAY-TXP-F
Fan Tray 2	REV 06	760-024502	DV9618	FANTRAY-TXP-R
Fan Tray 3	REV 06	760-024502	DV9616	FANTRAY-TXP-R
Fan Tray 4	REV 06	760-024502	DV7807	FANTRAY-TXP-R
Fan Tray 5	REV 06	760-024502	DV7828	FANTRAY-TXP-R

lcc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 03	710-017247	RC3765	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DN5441	CRAFT-T1600-S
CIP	REV 06	710-002895	DP6021	CIP-L-T640-S
PEM 0	Rev 07	740-017906	UA26384	PWR-T1600-3-80-DC-S
PEM 1	Rev 07	740-017906	UA26296	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DR0875	SCG-T-S
CB 0	REV 06	710-022597	DW8534	CB-LCC
CB 1	REV 06	710-022597	DW8527	CB-LCC
FPC 4	REV 12	710-013037	DJ8717	T1600-FPC4-ES

PIC 0	REV 11	750-017405	DP8795	PD-4XGE-XFP
PIC 1	REV 11	750-017405	DP8794	PD-4XGE-XFP
FPC 6	REV 14	710-013037	DS5335	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7634	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7637	PD-4XGE-XFP
FPC 7	REV 07	710-013035	DM0990	T1600-FPC3-ES
PIC 0	REV 16	750-007141	JJ8067	PC-10GE-SFP
PIC 1	REV 08	750-015749	WE9598	PC-10C192-SON-XFP
PIC 2	REV 10	750-009450	HX6466	PC-10C192-SON-SR2
SIB 0	REV 08	710-022594	DW8033	SIB-TXP-T1600-S
SIB 1	REV 08	710-022594	DW8044	SIB-TXP-T1600-S
SIB 2	REV 08	710-022594	DW8020	SIB-TXP-T1600-S
SIB 3	REV 08	710-022594	DW8063	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	DW8064	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

lcc1-re0:

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 04	710-017247	RC5361	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DS6430	CRAFT-T1600-S
CIP	REV 06	710-002895	DS4239	CIP-L-T640-S
PEM 0	Rev 08	740-017906	UD26649	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DP5820	SCG-T-S
CB 0	REV 06	710-022597	DW8523	CB-LCC
CB 1	REV 06	710-022597	DW8528	CB-LCC
FPC 4	REV 12	710-013037	DP8509	T1600-FPC4-ES
PIC 0	REV 11	750-017405	DP8808	PD-4XGE-XFP
PIC 1	REV 11	750-017405	DP7263	PD-4XGE-XFP
FPC 6	REV 14	710-013037	DS9961	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS5532	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7639	PD-4XGE-XFP
FPC 7	REV 03	710-013035	DF5564	T1600-FPC3-ES
PIC 0	REV 16	750-007141	JJ8063	PC-10GE-SFP
SIB 0	REV 08	710-022594	DW8035	SIB-TXP-T1600-S
SIB 1	REV 10	710-022594	DX7672	SIB-TXP-T1600-S
SIB 2	REV 08	710-022594	DW8060	SIB-TXP-T1600-S
SIB 3	REV 08	710-022594	DW8072	SIB-TXP-T1600-S
SIB 4	REV 08	710-022594	DW8043	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

lcc2-re0:

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 03	710-017247	RC3956	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DN7030	CRAFT-T1600-S
CIP	REV 06	710-002895	DM3962	CIP-L-T640-S
PEM 0	Rev 08	740-017906	UD26519	PWR-T1600-3-80-DC-S
PEM 1	Rev 07	740-017906	UC26601	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DP0277	SCG-T-S
CB 0	REV 06	710-022597	DW8524	CB-LCC
CB 1	REV 06	710-022597	DW8536	CB-LCC
FPC 4	REV 12	710-013037	DR1194	T1600-FPC4-ES
PIC 0	REV 11	750-017405	DP8811	PD-4XGE-XFP

PIC 1	REV 11	750-017405	DP8823	PD-4XGE-XFP
FPC 5	REV 12	710-013037	DR1184	T1600-FPC4-ES
PIC 1	REV 11	750-017405	DP4744	PD-4XGE-XFP
FPC 6	REV 12	710-013037	DN8622	T1600-FPC4-ES
PIC 0	REV 14	750-012518	JY9924	PD-40C192-SON-XFP
PIC 1	REV 11	750-017405	DP8776	PD-4XGE-XFP
FPC 7	REV 04	710-013560	JR3968	T640-FPC3-E2
PIC 0	REV 16	750-007141	NC9330	PC-10GE-SFP
SIB 0	REV 07	710-022594	DW4217	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	DW4213	SIB-TXP-T1600-S
SIB 2	REV 07	710-022594	DW4189	SIB-TXP-T1600-S
SIB 3	REV 07	710-022594	DW4173	SIB-TXP-T1600-S
SIB 4	REV 07	710-022594	DW4201	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

lcc3-re0:

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 04	710-017247	RC5319	CHAS-BP-T1600-S
FPM Display	REV 01	710-021387	DS6402	CRAFT-T1600-S
CIP	REV 06	710-002895	DR9973	CIP-L-T640-S
PEM 0	Rev 07	740-017906	UC26496	PWR-T1600-3-80-DC-S
PEM 1	Rev 07	740-017906	UC26599	PWR-T1600-3-80-DC-S
SCG 0	REV 15	710-003423	DP5831	SCG-T-S
CB 0	REV 06	710-022597	DW8533	CB-LCC
CB 1	REV 06	710-022597	DW8538	CB-LCC
FPC 0	REV 14	710-013037	DS5345	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7641	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS5479	PD-4XGE-XFP
FPC 1	REV 14	710-013037	DS7338	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7631	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7632	PD-4XGE-XFP
FPC 2	REV 14	710-013037	DS9962	T1600-FPC4-ES
PIC 0	REV 13	750-017405	DS7581	PD-4XGE-XFP
PIC 1	REV 13	750-017405	DS7627	PD-4XGE-XFP
FPC 4	REV 10	710-010845	JZ6573	T640-FPC4-ES
PIC 0	REV 14	750-012518	JT5124	PD-40C192-SON-XFP
FPC 5	REV 14	710-013037	DT0016	T1600-FPC4-ES
PIC 0	REV 14	750-012518	JY9918	PD-40C192-SON-XFP
FPC 7	REV 07	710-013035	DM0967	T1600-FPC3-ES
PIC 0	REV 16	750-007141	JJ8059	PC-10GE-SFP
PIC 1	REV 13	750-004695	DM5712	PC-TUNNEL
SIB 0	REV 07	710-022594	DW4174	SIB-TXP-T1600-S
SIB 1	REV 07	710-022594	DW4207	SIB-TXP-T1600-S
SIB 2	REV 06	710-022594	DT8231	SIB-TXP-T1600-S
SIB 3	REV 07	710-022594	DW4175	SIB-TXP-T1600-S
SIB 4	REV 07	710-022594	DW4209	SIB-TXP-T1600-S
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP-R-S

show chassis hardware (TX Matrix Plus Router with 3D SIBs)

user@host> show chassis hardware

sfc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11CAAA4AHB	TXP
Midplane	REV 05	710-022574	ABAC4696	SFC Midplane
FPM Display	REV 09	710-024027	EH3138	TXP FPM Display
CIP 0	REV 12	710-023792	EF6349	TXP CIP
CIP 1	REV 12	710-023792	EG5294	TXP CIP
PEM 0	Rev 06	740-027463	XH04595	Power Entry Module
PEM 1	Rev 06	740-027463	XH04592	Power Entry Module
Routing Engine 0	REV 07	740-026942	P737A-002541	RE-DUO-2600
Routing Engine 1	REV 07	740-026942	P737A-002602	RE-DUO-2600
CB 0	REV 15	710-022606	EH4376	SFC Control Board
CB 1	REV 15	710-022606	EH4379	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 10	750-035002	EM9305	F13 SIB 3D
B Board	REV 06	711-035082	EM9667	F13 SIB 3D Mezz
P Board	REV 05	711-043544	EM9708	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB34FB00S	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01H	CXP Module
Xcvr 4	REV 01	740-047547	XB34FB02W	CXP Module
Xcvr 6	REV 01	740-047547	XB34FB01T	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB00W	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01S	CXP Module
Xcvr 12	REV 01	740-047547	XB34FB03H	CXP Module
Xcvr 14	REV 01	740-047547	XB34FB023	CXP Module
SIB F13 3	REV 01	710-035001	EJ2612	F13 SIB 3D
B Board	REV 01	711-035082	EJ3815	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2678	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB04C	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB00Z	CXP Module
Xcvr 4	REV 01	740-047547	XB47FB036	CXP Module
Xcvr 6	REV 01	740-047547	XB47FB029	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02N	CXP Module
Xcvr 10	REV 01	740-047547	XB42FB0CS	CXP Module
Xcvr 12	REV 01	740-047547	XB47FB01X	CXP Module
Xcvr 14	REV 01	740-047547	XB48FB02F	CXP Module
SIB F13 6	REV 05	750-035002	EK2675	F13 SIB 3D
B Board	REV 03	711-035082	EK2612	F13 SIB 3D Mezz
P Board	REV 04	711-043544	EK1179	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB01T	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB02M	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB031	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB04P	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02T	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01V	CXP Module
Xcvr 12	REV 01	740-047547	XB48FB02C	CXP Module
Xcvr 14		NON-JNPR		No Module
SIB F13 12	REV 01	710-035001	EJ2631	F13 SIB 3D
B Board	REV 01	711-035082	EJ3808	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2676	F13 SIB 3D Power
SIB F2S 0/0	REV 01	711-034977	EH9829	F2S SIB 3D
B Board	REV 01	711-034979	EH9927	F2S SIB 3D Mezz
SIB F2S 0/2	REV 01	711-034977	EH9791	F2S SIB 3D
B Board	REV 01	711-034979	EH9852	F2S SIB 3D Mezz
SIB F2S 0/4	REV 01	711-034977	EH9803	F2S SIB 3D
B Board	REV 01	711-034979	EH9915	F2S SIB 3D Mezz
SIB F2S 0/6	REV 01	711-034977	EH9763	F2S SIB 3D
B Board	REV 01	711-034979	EH9880	F2S SIB 3D Mezz
SIB F2S 1/0	REV 01	711-034977	EH9757	F2S SIB 3D

B Board	REV 01	711-034979	EH9889	F2S SIB 3D Mezz
SIB F2S 1/2	REV 01	711-034977	EH9815	F2S SIB 3D
B Board	REV 01	711-034979	EH9890	F2S SIB 3D Mezz
SIB F2S 1/4	REV 08	750-034978	EN1954	F2S SIB 3D
B Board	REV 02	711-034979	EN1436	F2S SIB 3D Mezz
SIB F2S 1/6	REV 01	711-034977	EJ7054	F2S SIB 3D
B Board	REV 01	711-034979	EJ8238	F2S SIB 3D Mezz
SIB F2S 2/0	REV 01	711-034977	EH9830	F2S SIB 3D
B Board	REV 01	711-034979	EH9844	F2S SIB 3D Mezz
SIB F2S 2/2	REV 01	711-034977	EH9818	F2S SIB 3D
B Board	REV 01	711-034979	EH9888	F2S SIB 3D Mezz
SIB F2S 2/4	REV 01	711-034977	EH9795	F2S SIB 3D
B Board	REV 01	711-034979	EH9869	F2S SIB 3D Mezz
SIB F2S 2/6	REV 01	711-034977	EJ7026	F2S SIB 3D
B Board	REV 01	711-034979	EJ8273	F2S SIB 3D Mezz
SIB F2S 3/0	REV 01	711-034977	EH9811	F2S SIB 3D
B Board	REV 01	711-034979	EH9892	F2S SIB 3D Mezz
SIB F2S 3/2	REV 01	711-034977	EH9812	F2S SIB 3D
B Board	REV 01	711-034979	EH9877	F2S SIB 3D Mezz
SIB F2S 3/4	REV 08	750-034978	EN1947	F2S SIB 3D
B Board	REV 02	711-034979	EN1471	F2S SIB 3D Mezz
Fan Tray 0	REV 10	760-024497	EH3313	Front Fan Tray
Fan Tray 1	REV 10	760-024497	EH3290	Front Fan Tray
Fan Tray 2	REV 10	760-024502	EH3292	Rear Fan Tray
Fan Tray 3	REV 10	760-024502	EH3287	Rear Fan Tray
Fan Tray 4	REV 10	760-024502	EH3286	Rear Fan Tray
Fan Tray 5	REV 10	760-024502	EH3285	Rear Fan Tray

lcc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B23FEAHA	T1600
Midplane	REV 01	710-027486	RC9787	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5132	T640 FPM Board
FPM Display	REV 04	710-021387	BBAL9612	T1600 FPM Display
CIP	REV 06	710-002895	BBAN0605	T-series CIP
PEM 0	REV 05	740-036442	1G022060143	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060011	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAL7318	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7255	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002933	RE-DUO-1800
Routing Engine 1	REV 06	740-026941	P737F-002749	RE-DUO-1800
CB 0	REV 11	710-022597	EH3611	LCC Control Board
CB 1	REV 11	710-022597	EH4798	LCC Control Board
FPC 5	REV 17	710-013037	BBAC5333	FPC Type 4-ES
CPU	REV 10	710-016744	BBAB7619	ST-PMB2
PIC 0	REV 18	750-017405	BBAE3420	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10C90659	XFP-10G-SR
MMB 0	REV 05	710-025563	BBAB9538	ST-MMB2
MMB 1	REV 05	710-025563	BBAB9502	ST-MMB2
FPC 7	REV 01	750-045173	BBAV0032	FPC Type 5-3D
CPU				
SPMB 0	REV 05	710-023321	EG9434	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3878	LCC Switch CPU
SIB 0	REV 01	750-041657	EH7997	LCC SIB 3D
B Board	REV 01	711-042424	EH7674	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB014	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB05A	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB052	CXP Module

Xcvr 6	REV 01	740-047547	XB48FB01B	CXP Module
SIB 1	REV 01	750-041657	EH8023	LCC SIB 3D
B Board	REV 01	711-042424	EH7659	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05J	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01E	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB01J	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB02S	CXP Module
SIB 2	REV 03	750-041657	EJ6554	LCC SIB 3D
B Board	REV 02	711-042424	EJ5756	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB34FB01Z	CXP Module
Xcvr 2	REV 01	740-047547	XB34FB013	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04Z	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05N	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

lcc2-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B3975AHA	T1600
Midplane	REV 01	710-027486	RC9826	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5124	T640 FPM Board
FPM Display	REV 03	710-021387	BBAJ1112	T1600 FPM Display
CIP	REV 06	710-002895	BBAL3744	T-series CIP
PEM 0	REV 05	740-036442	1G022060081	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060188	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAH8775	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7272	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002992	RE-DUO-1800
Routing Engine 1	REV 07	740-026941	P737F-002938	RE-DUO-1800
CB 0	REV 11	710-022597	EH4805	LCC Control Board
CB 1	REV 11	710-022597	EH4786	LCC Control Board
FPC 1	REV 01	710-033873	BBAH0320	FPC Type 3-ES
CPU	REV 11	710-016744	BBAF3281	ST-PMB2
MMB 0	REV 06	710-025563	BBAF5061	ST-MMB2
FPC 5	REV 04	710-033871	BBAM5070	FPC Type 4-ES
CPU	REV 11	710-016744	BBAM6653	ST-PMB2
PIC 1	REV 20	750-017405	BBAM1296	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10B42981	XFP-10G-SR
MMB 0	REV 07	710-025563	BBAN2631	ST-MMB2
MMB 1	REV 07	710-025563	BBAN2538	ST-MMB2
SPMB 0	REV 05	710-023321	EH3903	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3902	LCC Switch CPU
SIB 0	REV 01	750-041657	EH8019	LCC SIB 3D
B Board	REV 01	711-042424	EH7680	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB04F	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB04S	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04B	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB043	CXP Module
SIB 1	REV 01	750-041657	EH8012	LCC SIB 3D
B Board	REV 01	711-042424	EH7658	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05E	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01Z	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB018	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB054	CXP Module
SIB 2	REV 01	750-041657	EH7993	LCC SIB 3D
B Board	REV 01	711-042424	EH7678	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05C	CXP Module

Xcvr 2	REV 01	740-047547	XB47FB00N	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB05U	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05L	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

show chassis hardware clei-models (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis hardware clei-models
```

```
sfc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 05	710-022574		CHAS-BP-TXP-S
FPM Display	REV 09	710-024027		CRAFT-TXP-S
CIP 0	REV 12	710-023792		CIP-TXP-S
CIP 1	REV 12	710-023792		CIP-TXP-S
PEM 0	Rev 06	740-027463	IPUPAFGKTA	PWR-TXP-7-60-DC-S
Routing Engine 0	REV 07	740-026942		RE-DUO-C2600-16G-S
Routing Engine 1	REV 07	740-026942		RE-DUO-C2600-16G-S
CB 0	REV 13	710-022606		CB-TXP-S
CB 1	REV 14	710-022606		CB-TXP-S
SIB F13 0	REV 10	750-035002	PROTOXCLEI	SIB-TXP-3D-F13-S
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 1	REV 10	750-035002	PROTOXCLEI	SIB-TXP-3D-F13-S
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-048813		
Xcvr 10	REV 01	740-048813		

Xcvr 12	REV 01	740-048813		
Xcvr 14	REV 01	740-048813		
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 6	REV 16	750-035002	PROTOXCLEI	SIB-TXP-3D-F13
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 7	REV 10	750-035002	PROTOXCLEI	SIB-TXP-3D-F13-S
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 9	REV 16	750-035002	PROTOXCLEI	SIB-TXP-3D-F13
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D

Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 11	REV 10	750-035002	PROTOXCLEI	750-035002
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-048813		
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F13 12	REV 16	750-035002	PROTOXCLEI	SIB-TXP-3D-F13
Xcvr 0	REV 01	740-047547		CXP-TXP-3D
Xcvr 1	REV 01	740-047547		CXP-TXP-3D
Xcvr 2	REV 01	740-047547		CXP-TXP-3D
Xcvr 3	REV 01	740-047547		CXP-TXP-3D
Xcvr 4	REV 01	740-047547		CXP-TXP-3D
Xcvr 5	REV 01	740-047547		CXP-TXP-3D
Xcvr 6	REV 01	740-047547		CXP-TXP-3D
Xcvr 7	REV 01	740-047547		CXP-TXP-3D
Xcvr 8	REV 01	740-047547		CXP-TXP-3D
Xcvr 10	REV 01	740-047547		CXP-TXP-3D
Xcvr 12	REV 01	740-047547		CXP-TXP-3D
Xcvr 14	REV 01	740-047547		CXP-TXP-3D
SIB F2S 0/0	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 0/2	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 0/4	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 0/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/0	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/2	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/4	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 1/6	REV 08	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/0	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/2	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/4	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 2/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/0	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/2	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/4	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 3/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/0	REV 07	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/2	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/4	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
SIB F2S 4/6	REV 06	750-034978	PROTOXCLEI	SIB-TXP-3D-F2S
Fan Tray 0	REV 10	760-024497		FANTRAY-TXP-H-S
Fan Tray 1	REV 10	760-024497		FANTRAY-TXP-H-S
Fan Tray 2	REV 10	760-024502		FANTRAY-TXP-V-S
Fan Tray 3	REV 10	760-024502		FANTRAY-TXP-V-S
Fan Tray 4	REV 10	760-024502		FANTRAY-TXP-V-S
Fan Tray 5	REV 10	760-024502		FANTRAY-TXP-V-S

1cc0-re0:

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	710-027486	IPMJ700DRD	CHAS-BP-T1600-S
FPM Display	REV 04	710-021387		CRAFT-T1600-S
CIP	REV 06	710-002895		CIP-L-T640-S
PEM 0	REV 05	740-036442	IPUPAG6KAA	PWR-T-6-60-DC-S
PEM 1	REV 05	740-036442	IPUPAG6KAA	PWR-T-6-60-DC-S
SCG 0	REV 18	710-003423		SCG-T-S
SCG 1	REV 18	710-003423		SCG-T-S
Routing Engine 0	REV 10	740-026941		RE-DUO-C1800-8G-S
Routing Engine 1	REV 07	740-026941		RE-DUO-C1800-8G-S
CB 0	REV 11	710-022597		CB-LCC-S
CB 1	REV 11	710-022597		CB-LCC-S
FPC 0	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
FPC 3	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 13	750-033423	XXXXXXXXDD	PF-12-24XGE-SFPP
FPC 4	REV 02	750-045173	IP9IAL4DAC	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
FPC 5	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
FPC 6	REV 01	750-045173	IP9IAL4DAB	T4000-FPC5-3D
PIC 0	REV 17	750-034624	IP9IAL2DAA	PF-12XGE-SFPP
PIC 1	REV 10	750-035293	IP9IAL3DAA	PF-1CGE-CFP
SIB 0	REV 06	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
SIB 1	REV 06	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
SIB 2	REV 06	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
SIB 3	REV 07	750-041657	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		

Xcvr 6	REV 01	740-048813	PROTOXCLEI	SIB-TXP-3D-LCC
Xcvr 7	REV 01	740-048813		
SIB 4	REV 06	750-041657		
Xcvr 0	REV 01	740-048813		
Xcvr 1	REV 01	740-048813		
Xcvr 2	REV 01	740-048813		
Xcvr 3	REV 01	740-048813		
Xcvr 4	REV 01	740-048813		
Xcvr 5	REV 01	740-048813		
Xcvr 6	REV 01	740-048813		
Xcvr 7	REV 01	740-048813		
Fan Tray 0				FANTRAY-T-S
Fan Tray 1				FANTRAY-T-S
Fan Tray 2				FANTRAY-TXP3D-LCC-R-S
[Output Truncated]				

show chassis hardware detail (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis hardware detail
```

```
sfc0-re0:
```

```
-----
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11CAAA4AHB	TXP
Midplane	REV 05	710-022574	ABAC4696	SFC Midplane
FPM Display	REV 09	710-024027	EH3138	TXP FPM Display
CIP 0	REV 12	710-023792	EF6349	TXP CIP
CIP 1	REV 12	710-023792	EG5294	TXP CIP
PEM 0	Rev 06	740-027463	XH04595	Power Entry Module
PEM 1	Rev 06	740-027463	XH04592	Power Entry Module
Routing Engine 0	REV 07	740-026942	P737A-002541	RE-DUO-2600
ad0	3823 MB	SMART CF	2011030400062C132C13	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	201105100009A452A452	Disk 1
Routing Engine 1	REV 07	740-026942	P737A-002602	RE-DUO-2600
ad0	3823 MB	SMART CF	20110508085EE471E471	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	201110210089DF39DF39	Disk 1
CB 0	REV 15	710-022606	EH4376	SFC Control Board
CB 1	REV 15	710-022606	EH4379	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 10	750-035002	EM9305	F13 SIB 3D
B Board	REV 06	711-035082	EM9667	F13 SIB 3D Mezz
P Board	REV 05	711-043544	EM9708	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB34FB00S	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01H	CXP Module
Xcvr 4	REV 01	740-047547	XB34FB02W	CXP Module
Xcvr 6	REV 01	740-047547	XB34FB01T	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB00W	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01S	CXP Module
Xcvr 12	REV 01	740-047547	XB34FB03H	CXP Module
Xcvr 14	REV 01	740-047547	XB34FB023	CXP Module
SIB F13 3	REV 01	710-035001	EJ2612	F13 SIB 3D
B Board	REV 01	711-035082	EJ3815	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2678	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB04C	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB00Z	CXP Module
Xcvr 4	REV 01	740-047547	XB47FB036	CXP Module
Xcvr 6	REV 01	740-047547	XB47FB029	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02N	CXP Module

Xcvr 10	REV 01	740-047547	XB42FB0CS	CXP Module
Xcvr 12	REV 01	740-047547	XB47FB01X	CXP Module
Xcvr 14	REV 01	740-047547	XB48FB02F	CXP Module
SIB F13 6	REV 05	750-035002	EK2675	F13 SIB 3D
B Board	REV 03	711-035082	EK2612	F13 SIB 3D Mezz
P Board	REV 04	711-043544	EK1179	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB01T	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB02M	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB031	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB04P	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02T	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01V	CXP Module
Xcvr 12	REV 01	740-047547	XB48FB02C	CXP Module
Xcvr 14		NON-JNPR		No Module
SIB F13 12	REV 01	710-035001	EJ2631	F13 SIB 3D
B Board	REV 01	711-035082	EJ3808	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2676	F13 SIB 3D Power
SIB F2S 0/0	REV 01	711-034977	EH9829	F2S SIB 3D
B Board	REV 01	711-034979	EH9927	F2S SIB 3D Mezz
SIB F2S 0/2	REV 01	711-034977	EH9791	F2S SIB 3D
B Board	REV 01	711-034979	EH9852	F2S SIB 3D Mezz
SIB F2S 0/4	REV 01	711-034977	EH9803	F2S SIB 3D
B Board	REV 01	711-034979	EH9915	F2S SIB 3D Mezz
SIB F2S 0/6	REV 01	711-034977	EH9763	F2S SIB 3D
B Board	REV 01	711-034979	EH9880	F2S SIB 3D Mezz
SIB F2S 1/0	REV 01	711-034977	EH9757	F2S SIB 3D
B Board	REV 01	711-034979	EH9889	F2S SIB 3D Mezz
SIB F2S 1/2	REV 01	711-034977	EH9815	F2S SIB 3D
B Board	REV 01	711-034979	EH9890	F2S SIB 3D Mezz
SIB F2S 1/4	REV 08	750-034978	EN1954	F2S SIB 3D
B Board	REV 02	711-034979	EN1436	F2S SIB 3D Mezz
SIB F2S 1/6	REV 01	711-034977	EJ7054	F2S SIB 3D
B Board	REV 01	711-034979	EJ8238	F2S SIB 3D Mezz
SIB F2S 2/0	REV 01	711-034977	EH9830	F2S SIB 3D
B Board	REV 01	711-034979	EH9844	F2S SIB 3D Mezz
SIB F2S 2/2	REV 01	711-034977	EH9818	F2S SIB 3D
B Board	REV 01	711-034979	EH9888	F2S SIB 3D Mezz
SIB F2S 2/4	REV 01	711-034977	EH9795	F2S SIB 3D
B Board	REV 01	711-034979	EH9869	F2S SIB 3D Mezz
SIB F2S 2/6	REV 01	711-034977	EJ7026	F2S SIB 3D
B Board	REV 01	711-034979	EJ8273	F2S SIB 3D Mezz
SIB F2S 3/0	REV 01	711-034977	EH9811	F2S SIB 3D
B Board	REV 01	711-034979	EH9892	F2S SIB 3D Mezz
SIB F2S 3/2	REV 01	711-034977	EH9812	F2S SIB 3D
B Board	REV 01	711-034979	EH9877	F2S SIB 3D Mezz
SIB F2S 3/4	REV 08	750-034978	EN1947	F2S SIB 3D
B Board	REV 02	711-034979	EN1471	F2S SIB 3D Mezz
Fan Tray 0	REV 10	760-024497	EH3313	Front Fan Tray
Fan Tray 1	REV 10	760-024497	EH3290	Front Fan Tray
Fan Tray 2	REV 10	760-024502	EH3292	Rear Fan Tray
Fan Tray 3	REV 10	760-024502	EH3287	Rear Fan Tray
Fan Tray 4	REV 10	760-024502	EH3286	Rear Fan Tray
Fan Tray 5	REV 10	760-024502	EH3285	Rear Fan Tray

1cc0-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B23FEAHA	T1600
Midplane	REV 01	710-027486	RC9787	T-series Backplane

FPM GBUS	REV 13	710-002901	BBAG5132	T640 FPM Board
FPM Display	REV 04	710-021387	BBAL9612	T1600 FPM Display
CIP	REV 06	710-002895	BBAN0605	T-series CIP
PEM 0	REV 05	740-036442	1G022060143	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060011	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAL7318	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7255	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002933	RE-DUO-1800
ad0 3823 MB	SMART CF		201103030490604E604E	Compact Flash
ad1 62720 MB	SMART Lite SATA Drive		20110729028B11D411D4	Disk 1
Routing Engine 1	REV 06	740-026941	P737F-002749	RE-DUO-1800
ad0 3823 MB	SMART CF		2011010504EB99649964	Compact Flash
ad1 62720 MB	SMART Lite SATA Drive		201102140058934A934A	Disk 1
CB 0	REV 11	710-022597	EH3611	LCC Control Board
CB 1	REV 11	710-022597	EH4798	LCC Control Board
FPC 5	REV 17	710-013037	BBAC5333	FPC Type 4-ES
CPU	REV 10	710-016744	BBAB7619	ST-PMB2
PIC 0	REV 18	750-017405	BBAE3420	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10C90659	XFP-10G-SR
MMB 0	REV 05	710-025563	BBAB9538	ST-MMB2
MMB 1	REV 05	710-025563	BBAB9502	ST-MMB2
FPC 7	REV 01	750-045173	BBAV0032	FPC Type 5-3D
CPU				
SPMB 0	REV 05	710-023321	EG9434	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3878	LCC Switch CPU
SIB 0	REV 01	750-041657	EH7997	LCC SIB 3D
B Board	REV 01	711-042424	EH7674	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB014	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB05A	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB052	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB01B	CXP Module
SIB 1	REV 01	750-041657	EH8023	LCC SIB 3D
B Board	REV 01	711-042424	EH7659	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05J	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01E	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB01J	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB02S	CXP Module
SIB 2	REV 03	750-041657	EJ6554	LCC SIB 3D
B Board	REV 02	711-042424	EJ5756	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB34FB01Z	CXP Module
Xcvr 2	REV 01	740-047547	XB34FB013	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04Z	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05N	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

lcc2-re0:

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN11B3975AHA	T1600
Midplane	REV 01	710-027486	RC9826	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5124	T640 FPM Board
FPM Display	REV 03	710-021387	BBAJ1112	T1600 FPM Display
CIP	REV 06	710-002895	BBAL3744	T-series CIP
PEM 0	REV 05	740-036442	1G022060081	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060188	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAH8775	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7272	T640 Sonet Clock Gen.

```

Routing Engine 0 REV 07 740-026941 P737F-002992 RE-DUO-1800
  ad0 3823 MB SMART CF 201103030356329E329E Compact Flash
  ad1 62720 MB SMART Lite SATA Drive 2011051000488D8B8D8B Disk 1
Routing Engine 1 REV 07 740-026941 P737F-002938 RE-DUO-1800
  ad0 3823 MB SMART CF 20110304000F02680268 Compact Flash
  ad1 62720 MB SMART Lite SATA Drive 201105300A70F325F325 Disk 1
CB 0 REV 11 710-022597 EH4805 LCC Control Board
CB 1 REV 11 710-022597 EH4786 LCC Control Board
FPC 1 REV 01 710-033873 BBAH0320 FPC Type 3-ES
  CPU REV 11 710-016744 BBAF3281 ST-PMB2
  MMB 0 REV 06 710-025563 BBAF5061 ST-MMB2
FPC 5 REV 04 710-033871 BBAM5070 FPC Type 4-ES
  CPU REV 11 710-016744 BBAM6653 ST-PMB2
  PIC 1 REV 20 750-017405 BBAM1296 4x 10GE (LAN/WAN) XFP
    Xcvr 0 REV 03 740-014289 T10B42981 XFP-10G-SR
  MMB 0 REV 07 710-025563 BBAN2631 ST-MMB2
  MMB 1 REV 07 710-025563 BBAN2538 ST-MMB2
SPMB 0 REV 05 710-023321 EH3903 LCC Switch CPU
SPMB 1 REV 05 710-023321 EH3902 LCC Switch CPU
SIB 0 REV 01 750-041657 EH8019 LCC SIB 3D
  B Board REV 01 711-042424 EH7680 LCC SIB 3D Mezz
    Xcvr 0 REV 01 740-047547 XB48FB04F CXP Module
    Xcvr 2 REV 01 740-047547 XB48FB04S CXP Module
    Xcvr 4 REV 01 740-047547 XB48FB04B CXP Module
    Xcvr 6 REV 01 740-047547 XB48FB043 CXP Module
  SIB 1 REV 01 750-041657 EH8012 LCC SIB 3D
    B Board REV 01 711-042424 EH7658 LCC SIB 3D Mezz
      Xcvr 0 REV 01 740-047547 XB48FB05E CXP Module
      Xcvr 2 REV 01 740-047547 XB48FB01Z CXP Module
      Xcvr 4 REV 01 740-047547 XB48FB018 CXP Module
      Xcvr 6 REV 01 740-047547 XB48FB054 CXP Module
  SIB 2 REV 01 750-041657 EH7993 LCC SIB 3D
    B Board REV 01 711-042424 EH7678 LCC SIB 3D Mezz
      Xcvr 0 REV 01 740-047547 XB48FB05C CXP Module
      Xcvr 2 REV 01 740-047547 XB47FB00N CXP Module
      Xcvr 4 REV 01 740-047547 XB48FB05U CXP Module
      Xcvr 6 REV 01 740-047547 XB48FB05L CXP Module
Fan Tray 0 Front Top Fan Tray
Fan Tray 1 Front Bottom Fan Tray
Fan Tray 2 Rear Fan Tray -- Rev 4

```

show chassis hardware lcc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis hardware lcc 0
```

```
lcc0-re0:
```

```
-----
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11B23FEAHA	T1600
Midplane	REV 01	710-027486	RC9787	T-series Backplane
FPM GBUS	REV 13	710-002901	BBAG5132	T640 FPM Board
FPM Display	REV 04	710-021387	BBAL9612	T1600 FPM Display
CIP	REV 06	710-002895	BBAN0605	T-series CIP
PEM 0	REV 05	740-036442	1G022060143	Power Entry Module 6x60
PEM 1	REV 05	740-036442	1G022060011	Power Entry Module 6x60
SCG 0	REV 18	710-003423	BBAL7318	T640 Sonet Clock Gen.
SCG 1	REV 18	710-003423	BBAL7255	T640 Sonet Clock Gen.
Routing Engine 0	REV 07	740-026941	P737F-002933	RE-DUO-1800
Routing Engine 1	REV 06	740-026941	P737F-002749	RE-DUO-1800

CB 0	REV 11	710-022597	EH3611	LCC Control Board
CB 1	REV 11	710-022597	EH4798	LCC Control Board
FPC 5	REV 17	710-013037	BBAC5333	FPC Type 4-ES
CPU	REV 10	710-016744	BBAB7619	ST-PMB2
PIC 0	REV 18	750-017405	BBAE3420	4x 10GE (LAN/WAN) XFP
Xcvr 0	REV 03	740-014289	T10C90659	XFP-10G-SR
MMB 0	REV 05	710-025563	BBAB9538	ST-MMB2
MMB 1	REV 05	710-025563	BBAB9502	ST-MMB2
FPC 7	REV 01	750-045173	BBAV0032	FPC Type 5-3D
CPU				
SPMB 0	REV 05	710-023321	EG9434	LCC Switch CPU
SPMB 1	REV 05	710-023321	EH3878	LCC Switch CPU
SIB 0	REV 01	750-041657	EH7997	LCC SIB 3D
B Board	REV 01	711-042424	EH7674	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB014	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB05A	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB052	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB01B	CXP Module
SIB 1	REV 01	750-041657	EH8023	LCC SIB 3D
B Board	REV 01	711-042424	EH7659	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB48FB05J	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01E	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB01J	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB02S	CXP Module
SIB 2	REV 03	750-041657	EJ6554	LCC SIB 3D
B Board	REV 02	711-042424	EJ5756	LCC SIB 3D Mezz
Xcvr 0	REV 01	740-047547	XB34FB01Z	CXP Module
Xcvr 2	REV 01	740-047547	XB34FB013	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB04Z	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB05N	CXP Module
Fan Tray 0				Front Top Fan Tray
Fan Tray 1				Front Bottom Fan Tray
Fan Tray 2				Rear Fan Tray -- Rev 4

show chassis hardware sfc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis hardware sfc 0
```

```
sfc0-re0:
```

```
-----
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11CAAA4AHB	TXP
Midplane	REV 05	710-022574	ABAC4696	SFC Midplane
FPM Display	REV 09	710-024027	EH3138	TXP FPM Display
CIP 0	REV 12	710-023792	EF6349	TXP CIP
CIP 1	REV 12	710-023792	EG5294	TXP CIP
PEM 0	Rev 06	740-027463	XH04595	Power Entry Module
PEM 1	Rev 06	740-027463	XH04592	Power Entry Module
Routing Engine 0	REV 07	740-026942	P737A-002541	RE-DUO-2600
Routing Engine 1	REV 07	740-026942	P737A-002602	RE-DUO-2600
CB 0	REV 15	710-022606	EH4376	SFC Control Board
CB 1	REV 15	710-022606	EH4379	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 10	750-035002	EM9305	F13 SIB 3D
B Board	REV 06	711-035082	EM9667	F13 SIB 3D Mezz
P Board	REV 05	711-043544	EM9708	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB34FB00S	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB01H	CXP Module

Xcvr 4	REV 01	740-047547	XB34FB02W	CXP Module
Xcvr 6	REV 01	740-047547	XB34FB01T	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB00W	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01S	CXP Module
Xcvr 12	REV 01	740-047547	XB34FB03H	CXP Module
Xcvr 14	REV 01	740-047547	XB34FB023	CXP Module
SIB F13 3	REV 01	710-035001	EJ2612	F13 SIB 3D
B Board	REV 01	711-035082	EJ3815	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2678	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB04C	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB00Z	CXP Module
Xcvr 4	REV 01	740-047547	XB47FB036	CXP Module
Xcvr 6	REV 01	740-047547	XB47FB029	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02N	CXP Module
Xcvr 10	REV 01	740-047547	XB42FB0CS	CXP Module
Xcvr 12	REV 01	740-047547	XB47FB01X	CXP Module
Xcvr 14	REV 01	740-047547	XB48FB02F	CXP Module
SIB F13 6	REV 05	750-035002	EK2675	F13 SIB 3D
B Board	REV 03	711-035082	EK2612	F13 SIB 3D Mezz
P Board	REV 04	711-043544	EK1179	F13 SIB 3D Power
Xcvr 0	REV 01	740-047547	XB48FB01T	CXP Module
Xcvr 2	REV 01	740-047547	XB48FB02M	CXP Module
Xcvr 4	REV 01	740-047547	XB48FB031	CXP Module
Xcvr 6	REV 01	740-047547	XB48FB04P	CXP Module
Xcvr 8	REV 01	740-047547	XB48FB02T	CXP Module
Xcvr 10	REV 01	740-047547	XB34FB01V	CXP Module
Xcvr 12	REV 01	740-047547	XB48FB02C	CXP Module
Xcvr 14		NON-JNPR		No Module
SIB F13 12	REV 01	710-035001	EJ2631	F13 SIB 3D
B Board	REV 01	711-035082	EJ3808	F13 SIB 3D Mezz
P Board	REV 01	711-043544	EJ2676	F13 SIB 3D Power
SIB F2S 0/0	REV 01	711-034977	EH9829	F2S SIB 3D
B Board	REV 01	711-034979	EH9927	F2S SIB 3D Mezz
SIB F2S 0/2	REV 01	711-034977	EH9791	F2S SIB 3D
B Board	REV 01	711-034979	EH9852	F2S SIB 3D Mezz
SIB F2S 0/4	REV 01	711-034977	EH9803	F2S SIB 3D
B Board	REV 01	711-034979	EH9915	F2S SIB 3D Mezz
SIB F2S 0/6	REV 01	711-034977	EH9763	F2S SIB 3D
B Board	REV 01	711-034979	EH9880	F2S SIB 3D Mezz
SIB F2S 1/0	REV 01	711-034977	EH9757	F2S SIB 3D
B Board	REV 01	711-034979	EH9889	F2S SIB 3D Mezz
SIB F2S 1/2	REV 01	711-034977	EH9815	F2S SIB 3D
B Board	REV 01	711-034979	EH9890	F2S SIB 3D Mezz
SIB F2S 1/4	REV 08	750-034978	EN1954	F2S SIB 3D
B Board	REV 02	711-034979	EN1436	F2S SIB 3D Mezz
SIB F2S 1/6	REV 01	711-034977	EJ7054	F2S SIB 3D
B Board	REV 01	711-034979	EJ8238	F2S SIB 3D Mezz
SIB F2S 2/0	REV 01	711-034977	EH9830	F2S SIB 3D
B Board	REV 01	711-034979	EH9844	F2S SIB 3D Mezz
SIB F2S 2/2	REV 01	711-034977	EH9818	F2S SIB 3D
B Board	REV 01	711-034979	EH9888	F2S SIB 3D Mezz
SIB F2S 2/4	REV 01	711-034977	EH9795	F2S SIB 3D
B Board	REV 01	711-034979	EH9869	F2S SIB 3D Mezz
SIB F2S 2/6	REV 01	711-034977	EJ7026	F2S SIB 3D
B Board	REV 01	711-034979	EJ8273	F2S SIB 3D Mezz
SIB F2S 3/0	REV 01	711-034977	EH9811	F2S SIB 3D
B Board	REV 01	711-034979	EH9892	F2S SIB 3D Mezz
SIB F2S 3/2	REV 01	711-034977	EH9812	F2S SIB 3D
B Board	REV 01	711-034979	EH9877	F2S SIB 3D Mezz
SIB F2S 3/4	REV 08	750-034978	EN1947	F2S SIB 3D

B Board	REV 02	711-034979	EN1471	F2S SIB 3D Mezz
Fan Tray 0	REV 10	760-024497	EH3313	Front Fan Tray
Fan Tray 1	REV 10	760-024497	EH3290	Front Fan Tray
Fan Tray 2	REV 10	760-024502	EH3292	Rear Fan Tray
Fan Tray 3	REV 10	760-024502	EH3287	Rear Fan Tray
Fan Tray 4	REV 10	760-024502	EH3286	Rear Fan Tray
Fan Tray 5	REV 10	760-024502	EH3285	Rear Fan Tray

show chassis hardware (16-Port 10-Gigabit Ethernet MPC with SFP+ Optics [MX Series Routers])

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN112D865AFA	MX960
Midplane	REV 03	710-013698	TS3339	MX960 Backplane
FPM Board	REV 03	710-014974	WW6267	Front Panel Display
PDM	Rev 03	740-013110	QCS12485026	Power Distribution
Module				
PEM 0	Rev 04	740-013682	QCS12434086	PS 1.7kW; 200-240VAC
in				
PEM 1	Rev 04	740-013682	QCS1243408Z	PS 1.7kW; 200-240VAC
in				
PEM 2	Rev 04	740-013682	QCS1243407X	PS 1.7kW; 200-240VAC
in				
Routing Engine 0	REV 07	740-015113	9009009677	RE-S-1300
Routing Engine 1	REV 07	740-015113	9009011510	RE-S-1300
CB 0	REV 03	710-021523	XF0394	MX SCB
CB 1	REV 03	710-021523	XF0550	MX SCB
CB 2	REV 03	710-021523	XD7455	MX SCB
FPC 4	REV 02	750-028467	JR6127	MPC M 16x 10GE
CPU	REV 02	711-029089	JX0129	AS PMB
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 1		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 2		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 3		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Fan Tray 0	REV 05	740-014971	TP9990	Fan Tray
Fan Tray 1	REV 05	740-014971	VS1709	Fan Tray

show chassis hardware (MPC3E [MX Series Routers])

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1101AFEAFB	MX480
Midplane	REV 05	710-017414	TR4444	MX480 Midplane
FPM Board	REV 02	710-017254	KG6056	Front Panel Display
PEM 0	Rev 03	740-017330	QCS082090FC	PS 1.2-1.7kW; 100-240V
PEM 1	Rev 03	740-017330	QCS082090FD	PS 1.2-1.7kW; 100-240V
Routing Engine 0	REV 07	740-013063	9009004124	RE-S-2000
Routing Engine 1	REV 07	740-013063	9009005569	RE-S-2000
CB 0	REV 07	710-021523	XZ3587	MX SCB
CB 1	REV 03	710-021523	KH8306	MX SCB
FPC 1	REV 04.1.07	750-033205	P1240	MPC Type 3

CPU	REV 01	711-035209	YL0504	HMPC PMB 2G
MIC 1	REV 10	750-033199	YX4495	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	C22CQNE	CFP-100G-LR4
FPC 2	REV 26	750-016670	KH0045	DPCE 40x 1GE R EQ
CPU	REV 07	710-013713	KF5448	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 01	740-011613	PF21JHU	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 9	REV 01	740-011613	AM0813S8ZL6	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 0	REV 02	740-011613	PGL2KYF	SFP-SX
Xcvr 2	REV 01	740-011613	AM0806S8N4P	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) EQ
Xcvr 5	REV 01	740-011613	AM0815S967N	SFP-SX
Xcvr 7	REV 01	740-011613	AM0806S8N1X	SFP-SX
Xcvr 8	REV 01	740-011613	AM0815S967J	SFP-SX
Xcvr 9	REV 01	740-011613	AM0815S967M	SFP-SX
FPC 3	REV 12.2.09	750-033205	YR9443	MPC Type 3
CPU	REV 03	711-035209	YL6931	HMPC PMB 2G
MIC 0	REV 05	750-033199	YR3269	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	ULH0KG3	CFP-100G-LR4
MIC 1	REV 02	750-033199	YG3245	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-032210	ULH0KGF	CFP-100G-LR4
FPC 4	REV 12.3.09	750-033205	YR9437	MPC Type 3
CPU	REV 03	711-035209	YT5857	HMPC PMB 2G
MIC 0	REV 05	750-033199	YR3295	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0		NON-JNPR	X12000187	CFP-100G-SR10
MIC 1	REV 10	750-033199	YX4518	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	X12300008	CFP-100G-SR10
FPC 5	REV 06	750-024884	JW9769	MPC Type 2 3D EQ
CPU	REV 02	711-028401	JR6158	MPC PMB 2G Proto
MIC 0	REV 05	750-028387	JR6197	3D 4x 10GE XFP
PIC 0		BUILTIN	BUILTIN	2x 10GE XFP
Xcvr 0	REV 01	740-014289	T07M71112	XFP-10G-SR
Xcvr 1	REV 02	740-014289	T08L85610	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	2x 10GE XFP
MIC 1	REV 22	750-028392	YM0053	3D 20x 1GE(LAN) SFP
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 0	REV 01	740-011613	AM0703S005B	SFP-SX
Xcvr 1	REV 01	740-011613	E07L01352	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN) SFP
Xcvr 5	REV 01	740-013111	6500217	SFP-T
Xcvr 9	REV 02	740-013111	8499527	SFP-T
Fan Tray				Left Fan Tray

The PIC number for MIC 1 always starts from 2 (even if the first MIC is a 1X100GE CFP or a legacy MIC).

show chassis hardware (QFX3500 Switches)

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis				QFX3500
Routing Engine 0		BUILTIN	BUILTIN	QFX Routing Engine
FPC 0	REV 04	750-044071	BBAR3902	QFX3500-48S4Q-AFI
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	48x 10G-SFP+
PIC 1		BUILTIN	BUILTIN	15x 10G-SFP+
MGMT BRD	REV 02	750-044063	BBAR0398	QFX3500-MGMT-SFP-AFO
Xcvr 0	REV 01	740-011614	AC0946S0BD1	SFP-LX10
Xcvr 1	REV 02	740-013111	A281922	SFP-T
Power Supply 0	Rev 04	740-032091	UI00677	JPSU-650W-AC-AFI
Power Supply 1	REV 00	740-041741	VJ00162	JPSU-650W-AC-AFO
Fan Tray 0				QFX Fan Tray, Back to
Front Airflow				
Fan Tray 1				QFX Fan Tray, Back to
Front Airflow				
Fan Tray 2				QFX Fan Tray, Back to
Front Airflow				

show chassis hardware detail (QFX3500 Switches)

user@switch> show chassis hardware detail

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN000TEST5	QFX3500
Routing Engine 0		BUILTIN	BUILTIN	QFX Routing Engine
FPC 0	REV 05	750-036931	EE0823	QFX3500-48S4Q-AFI
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	48x 10G-SFP+
Xcvr 0	REV 01	740-030589	S99E270079	SFP+-10G-LPBK
Xcvr 1	REV 01	740-030589	S9AK450099	SFP+-10G-LPBK
Xcvr 2	REV 01	740-030589	S99E270078	SFP+-10G-LPBK
Xcvr 3	REV 01	740-030589	S9AK450098	SFP+-10G-LPBK
Xcvr 4	REV 01	740-030589	S99E270075	SFP+-10G-LPBK
Xcvr 5	REV 01	740-030589	S9AK450093	SFP+-10G-LPBK
Xcvr 6	REV 01	740-030589	S9AK450097	SFP+-10G-LPBK
Xcvr 7	REV 01	740-030589	S9AK450095	SFP+-10G-LPBK
Xcvr 8	REV 01	740-030589	S99E270072	SFP+-10G-LPBK
Xcvr 9	REV 01	740-030589	S99E270073	SFP+-10G-LPBK
Xcvr 10	REV 01	740-030589	S99E270080	SFP+-10G-LPBK
Xcvr 11	REV 01	740-030589	S9AK450169	SFP+-10G-LPBK
Xcvr 12	REV 01	740-030589	S99E270076	SFP+-10G-LPBK
Xcvr 13	REV 01	740-030589	S9AK450167	SFP+-10G-LPBK
Xcvr 14	REV 01	740-030589	S9AK450170	SFP+-10G-LPBK
Xcvr 15	REV 01	740-030589	S9AK450166	SFP+-10G-LPBK
Xcvr 16	REV 01	740-030589	S9AK450092	SFP+-10G-LPBK
Xcvr 17	REV 01	740-030589	S9AK450163	SFP+-10G-LPBK
Xcvr 18	REV 01	740-030589	S9AK450094	SFP+-10G-LPBK
Xcvr 19	REV 01	740-030589	S9AK450100	SFP+-10G-LPBK
Xcvr 20	REV 01	740-030589	S9AK450168	SFP+-10G-LPBK
Xcvr 21	REV 01	740-030589	S9AK450165	SFP+-10G-LPBK
Xcvr 22	REV 01	740-030589	S9AK450073	SFP+-10G-LPBK
Xcvr 23	REV 01	740-030589	S9AK450164	SFP+-10G-LPBK
Xcvr 24	REV 01	740-030589	S9AK450074	SFP+-10G-LPBK
Xcvr 25	REV 01	740-030589	SA62270195	SFP+-10G-LPBK
Xcvr 26	REV 01	740-030589	S9AK450078	SFP+-10G-LPBK

Xcvr 27	REV 01	740-030589	S9AK450024	SFP+-10G-LPBK
Xcvr 28	REV 01	740-030589	S9AK450027	SFP+-10G-LPBK
Xcvr 29	REV 01	740-030589	S9AK450080	SFP+-10G-LPBK
Xcvr 30	REV 01	740-030589	S9AK450030	SFP+-10G-LPBK
Xcvr 31	REV 01	740-030589	S9AK450025	SFP+-10G-LPBK
Xcvr 32	REV 01	740-030589	S9AK450023	SFP+-10G-LPBK
Xcvr 33	REV 01	740-030589	S9AK450075	SFP+-10G-LPBK
Xcvr 34	REV 01	740-030589	S9AK450161	SFP+-10G-LPBK
Xcvr 35	REV 01	740-030589	S9AK450071	SFP+-10G-LPBK
Xcvr 36	REV 01	740-030589	S9AK450072	SFP+-10G-LPBK
Xcvr 37	REV 01	740-030589	S9AK450022	SFP+-10G-LPBK
Xcvr 38	REV 01	740-030589	S9AK450021	SFP+-10G-LPBK
Xcvr 39	REV 01	740-030589	S9AK450175	SFP+-10G-LPBK
Xcvr 40	REV 01	740-030589	S9AK450162	SFP+-10G-LPBK
Xcvr 41	REV 01	740-030589	S99E270074	SFP+-10G-LPBK
Xcvr 42	REV 01	740-030589	S9AK450174	SFP+-10G-LPBK
Xcvr 43	REV 01	740-030589	S9AK450077	SFP+-10G-LPBK
Xcvr 44	REV 01	740-030589	S9AK450076	SFP+-10G-LPBK
Xcvr 45	REV 01	740-030589	S9AK450026	SFP+-10G-LPBK
Xcvr 46	REV 01	740-030589	S9AK450079	SFP+-10G-LPBK
Xcvr 47	REV 01	740-030589	S9AK450029	SFP+-10G-LPBK
PIC 1		BUILTIN	BUILTIN	15x 10G-SFP+
Xcvr 1	REV 01	740-032986	QA170087	QSFP+-40G-SR4
Xcvr 4	REV 01	740-032986	QA360442	QSFP+-40G-SR4
Xcvr 8	REV 01	740-032986	QA170091	QSFP+-40G-SR4
Xcvr 12	REV 01	740-032986	QA170042	QSFP+-40G-SR4
MGMT BRD	REV 08	750-036946	EE0731	QFX3500-MB
Power Supply 0	Rev 04	740-032091	UI00690	QFX PS 650W AC
Power Supply 1	Rev 04	740-032091	UI00679	QFX PS 650W AC
Fan Tray 0				QFX Fan Tray
Fan Tray 1				QFX Fan Tray

show chassis hardware models (QFX3500 Switches)

```
user@switch> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	Serial number	FRU model number
Routing Engine 0		BUILTIN	BUILTIN	
FPC 0	REV 02	711-032234	EC4074	
Power Supply 0	PSMI 2C	11-d65800	--	

show chassis hardware clei-models (QFX3500 Switches)

```
user@switch> show chassis hardware clei-models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Routing Engine 0		BUILTIN		
FPC 0	REV 02	711-032234		
Power Supply 0	PSMI 2C	11-d65800		

show chassis hardware clei-models (QFX5100 Switches)

```
user@switch> show chassis hardware clei-models
```

Hardware inventory:				
Item	Version	Part number	CLEI code	FRU model number
Routing Engine 0		BUILTIN	CMMNV10BRA	

FPC 0	REV 01	611-053010	CMMNV10BRA	
PIC 0		BUILTIN	CMMNV10BRA	
Power Supply 0	REV 03	740-053352	MUPABHBAA	JPSU-850W-AC-AFO
Power Supply 1	REV 03	740-053352	MUPABHBAA	JPSU-850W-AC-AFO
Fan Tray 0				QFX5100-96S-FANAFO
Fan Tray 1				QFX5100-96S-FANAFO
Fan Tray 2				QFX5100-96S-FANAFO

show chassis hardware (QFX10002 Switches)

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			12345	QFX10002-36Q
Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	RE-QFX10002-36Q
FPC 0	REV 26	750-059497	ACNL1387	QFX10002-36Q
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	36X40G
Xcvr 0	REV 01	740-038623	MOC15476230389	QSFP+-40G-CU1M
Xcvr 1	REV 01	740-038623	MOC15476230438	QSFP+-40G-CU1M
Xcvr 2	REV 01	740-038623	MOC15446231917	QSFP+-40G-CU1M
Xcvr 3	REV 01	740-038623	MOC15446232043	QSFP+-40G-CU1M
Xcvr 4	REV	740-038624	APF15470032AVB	QSFP+-40G-CU3M
Xcvr 5	REV	740-038624	APF15470032H15	QSFP+-40G-CU3M
Xcvr 6	REV	740-038624	APF15470032A9J	QSFP+-40G-CU3M
Xcvr 7	REV	740-038624	APF15470032AG7	QSFP+-40G-CU3M
Xcvr 8	REV	740-038624	APF15470032ALD	QSFP+-40G-CU3M
Xcvr 9	REV 01	740-053203	APF15470071V43	QSFP+-40G-ACU7M
Xcvr 10	REV 01	740-053203	APF15470071V15	QSFP+-40G-ACU7M
Xcvr 11	REV 01	740-053203	APF15470071V12	QSFP+-40G-ACU7M
Xcvr 13	REV	740-038624	APF15470032H1N	QSFP+-40G-CU3M
Xcvr 18	REV 01	740-053203	APF154800738HW	QSFP+-40G-ACU7M
Xcvr 19	REV 01	740-038153	MOC12161530041	QSFP+-40G-CU3M
Xcvr 20	REV 01	740-038153	APF15500034A29	QSFP+-40G-CU3M
Xcvr 30	REV 01	740-038623	MOC15476230444	QSFP+-40G-CU1M
Xcvr 31	REV 01	740-032986	QC330038	QSFP+-40G-SR4
Xcvr 32	REV 01	740-032986	QC290540	QSFP+-40G-SR4
Mezz	REV 02	711-059316	ACNG9344	QFX10002 36X40G Mezz
Power Supply 0	REV 03	740-054405	1EDN5389293	AC AFO 1600W PSU
Power Supply 1	REV 03	740-054405	1EDN5346300	AC AFO 1600W PSU
Fan Tray 0				QFX10002 Fan Tray 0,
Front to Back Airflow - AFO				
Fan Tray 1				QFX10002 Fan Tray 1,
Front to Back Airflow - AFO				
Fan Tray 2				QFX10002 Fan Tray 2,
Front to Back Airflow - AFO				

show chassis hardware detail (QFX10002 Switches)

```
user@switch> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			12345	QFX10002-72Q
Pseudo CB 0				

Routing Engine 0		BUILTIN	BUILTIN	RE-QFX10002-72Q
ada0	8193 MB	QEMU	QM00001	Virtio Block Disk
ada1	4096 MB	QEMU	QM00002	Virtio Block Disk
ada2	512 MB	QEMU	QM00003	Virtio Block Disk
ada3	1024 MB	QEMU	QM00004	Virtio Block Disk
usb0 (addr 0.1)	UHCI root HUB 0		Intel	uhub0
usb0 (addr 1.1)	EHCI root HUB 0		Intel	uhub1
usb0 (addr 1.2)	product 0x0020 32		vendor 0x8087	uhub2
usb0 (addr 1.3)	Ultra Fit 21891		SanDisk	umass0
FPC 0	REV 05	750-055415	ACAM4724	QFX10002-72Q
CPU		BUILTIN	BUILTIN	FPC CPU

show chassis hardware (QFX10008 and QFX10016 Switches)

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			DE994	QFX10008
Midplane	REV 28	750-054097	ACPG3671	QFX10008 Midplane
Routing Engine 0		BUILTIN	BUILTIN	Routing Engine
Routing Engine 1		BUILTIN	BUILTIN	Routing Engine
CB 0	REV 03	750-068820	ACPA3224	Control Board
CB 1	REV 03	750-068820	ACPM9059	Control Board
FPC 0	REV 33	750-051354	ACNP4522	ULC-36Q-12Q28
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	36X40G
Xcvr 0	REV 01	740-038623	MOC16016230802	QSFP+-40G-CU1M
Xcvr 1	REV 01	740-038623	MOC16016230802	QSFP+-40G-CU1M
Xcvr 2	REV 01	740-038623	MOC16016231080	QSFP+-40G-CU1M
Xcvr 3	REV 01	740-038623	MOC16016231080	QSFP+-40G-CU1M
Xcvr 4	REV	740-038624	APF16220038H15	QSFP+-40G-CU3M
Xcvr 5	REV	740-038624	APF16220038H5M	QSFP+-40G-CU3M
Xcvr 6	REV	740-038624	APF160600308W8	QSFP+-40G-CU3M
Xcvr 8	REV	740-038624	APF16210038FFL	QSFP+-40G-CU3M
Xcvr 9	REV	740-038624	APF16210038F6F	QSFP+-40G-CU3M
Xcvr 10	REV	740-038624	APF1605003032B	QSFP+-40G-CU3M
Xcvr 11	REV	740-038624	APF16070030CDB	QSFP+-40G-CU3M
Xcvr 13	REV	740-038624	APF16210038FEW	QSFP+-40G-CU3M
Xcvr 15	REV 01	740-052307	APF16100071C1L	QSFP+-40G-ACU7M
Xcvr 16	REV	740-038625	APF1623005048E	QSFP+-40G-CU5M
Xcvr 17	REV	740-038625	APF16230050471	QSFP+-40G-CU5M
Xcvr 18	REV	740-038625	APF1623005044D	QSFP+-40G-CU5M
Xcvr 19	REV 01	740-052307	APF16100071C30	QSFP+-40G-ACU7M
Xcvr 20	REV	740-038625	APF16290055004	QSFP+-40G-CU5M
Xcvr 21	REV 01	740-038153	APF1622003970G	QSFP+-40G-CU3M
Xcvr 22	REV	740-038624	APF16190036R90	QSFP+-40G-CU3M
Xcvr 23	REV	740-038624	APF16050030374	QSFP+-40G-CU3M
Xcvr 24	REV 01	740-038153	APF162400318HC	QSFP+-40G-CU3M
Xcvr 30	REV	740-038624	APF1606003097A	QSFP+-40G-CU3M
Xcvr 31	REV 01	740-052307	APF160500702R9	QSFP+-40G-ACU7M
Xcvr 32	REV	740-038624	APF16220038GVR	QSFP+-40G-CU3M
FPD Board	REV 07	711-054687	ACPC7158	QFX10000 FPD
Power Supply 0	REV 02	740-049388	1EDL63104D6	QFX10000 AC
Power Supply 1	REV 02	740-049388	1EDL62503XC	QFX10000 AC
Power Supply 2	REV 02	740-049388	1EDL62503XS	QFX10000 AC
Power Supply 3	REV 02	740-049388	1EDL62503T8	QFX10000 AC
Power Supply 4	REV 02	740-049388	1EDL62503TR	QFX10000 AC
Power Supply 5	REV 02	740-049388	1EDL62503T5	QFX10000 AC
FTC 0	REV 15	750-050108	ACPF4227	QFX10000 FTC

FTC 1	REV 15	750-050108	ACPF4228	QFX10000 FTC
Fan Tray 0	REV 09	760-054372	ACNV5506	QFX10008 FHB
Fan Tray 1	REV 09	760-054372	ACNV5365	QFX10008 FHB
SIB 0	REV 27	750-050058	ACPM4212	QFX10008 SIB
SIB 1	REV 27	750-050058	ACPM4253	QFX10008 SIB
SIB 2	REV 27	750-050058	ACPM4174	QFX10008 SIB
SIB 3	REV 27	750-050058	ACPM4191	QFX10008 SIB
SIB 4	REV 27	750-050058	ACPM4216	QFX10008 SIB
SIB 5	REV 27	750-050058	ACPM4286	QFX10008 SIB

show chassis hardware detail (QFX10008 and QFX10016 Switches)

```
user@switch> show chassis hardware details
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			12345	QFX10008
Midplane	REV 01	750-054097	ACAM1754	QFX10008 Midplane
Routing Engine 0		BUILTIN	BUILTIN	Routing Engine
ada0	8193 MB	QEMU	QM00001	Virtio Block Disk
ada1	4096 MB	QEMU	QM00002	Virtio Block Disk
ada2	512 MB	QEMU	QM00003	Virtio Block Disk
ada3	1024 MB	QEMU	QM00004	Virtio Block Disk
usb0 (addr 1)	UHCI root HUB 0		Intel	uhub0
usb0 (addr 1)	EHCI root HUB 0		Intel	uhub1
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub2
Routing Engine 1		BUILTIN	BUILTIN	Routing Engine
ada0	8193 MB	QEMU	QM00001	Virtio Block Disk
ada1	4096 MB	QEMU	QM00002	Virtio Block Disk
ada2	512 MB	QEMU	QM00003	Virtio Block Disk
ada3	1024 MB	QEMU	QM00004	Virtio Block Disk
usb0 (addr 0.1)	UHCI root HUB 0		Intel	uhub0
usb0 (addr 1.1)	EHCI root HUB 0		Intel	uhub1
usb0 (addr 1.2)	product 0x0020 32		vendor 0x8087	uhub2
CB 0	REV 16	750-052688	ACAM7936	Control Board
CB 1	REV 18	750-052688	ACAM7708	Control Board
FPC 0	REV 26	750-051351	ACPJ1372	ULC-60S-6Q Main Board
CPU		BUILTIN	BUILTIN	FPC CPU

show chassis hardware interconnect-device (QFabric Systems)

```
user@switch> show chassis hardware interconnect-device interconnect1
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis	REV 07			QFX_olive
Midplane	REV 07	750-021261	BH0208188289	QFX Midplane
CB 0	REV 07	750-021261	BH0208188289	QFXIC08-CB4S

show chassis hardware node-device (QFabric Systems)

```
user@switch> show chassis hardware node-device node1
```

Routing Engine 0	BUILTIN	BUILTIN	QFX Routing Engine
node1	REV 05	711-032234	ED3694 QFX3500-48S4Q-AFI
CPU	BUILTIN	BUILTIN	FPC CPU
PIC 0	BUILTIN	BUILTIN	48x 10G-SFP+

```

Xcvr 8      REV 01  740-030658  AD0946A028B  SFP+-10G-USR
...

```

show chassis hardware (PTX5000 Packet Transport Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN11D1FD7AJA	PTX5000
Midplane	REV 03	711-031896	ABAC5589	Midplane-8S
FPM	REV 08	760-030647	EG1679	Front Panel Display
PDU 0	Rev 05	740-032019	ZE00006	DC Power Dist Unit
PSM 0	Rev 05	740-032022	ZJ00018	DC 12V Power Supply
PSM 1	Rev 04	740-032022	ZC00052	DC 12V Power Supply
PSM 2	Rev 04	740-032022	ZD00051	DC 12V Power Supply
PSM 3	Rev 05	740-032022	ZJ00060	DC 12V Power Supply
CCG 0	REV 04	750-030653	EG3703	Clock Generator
CCG 1	REV 04	750-030653	EG3698	Clock Generator
Routing Engine 0	REV 05	740-026942	P737A-002231	RE-DUO-2600
Routing Engine 1	REV 06	740-026942	P737A-002438	RE-DUO-2600
CB 0	REV 08	750-030625	EG5519	Control Board
CB 1	REV 08	750-030625	EG5516	Control Board
FPC 0	REV 18	750-036844	EJ3080	FPC
CPU	REV 12	711-030686	EJ3260	SNG PMB
FPC 2	REV 13	750-036844	EG5065	FPC
CPU	REV 09	711-030686	EG4082	SNG PMB
PIC 0	REV 14	750-031913	EG5127	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	143363A00240	SFP+-10G-SR
Xcvr 1	REV 01	740-031981	UK90PZ1	SFP+-10G-LR
Xcvr 2	REV 01	740-031980	AD1141A04XH	SFP+-10G-SR
Xcvr 3	REV 01	740-031981	UK90Q46	SFP+-10G-LR
Xcvr 4	REV 01	740-031980	AD1141A04X4	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11H02560	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11C01589	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AD1141A04XF	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01094	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LKF	SFP+-10G-SR
Xcvr 12	REV 01	740-031980	183363A01528	SFP+-10G-SR
Xcvr 14	REV 01	740-031980	193363A01079	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	AK80MC8	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	AJC0BHC	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08D26856	SFP+-10G-LR
Xcvr 21	REV 01	740-031980	AK80KCT	SFP+-10G-SR
Xcvr 22	REV 01	740-031981	UK90PZL	SFP+-10G-LR
Xcvr 23	REV 01	740-031980	AK80N1V	SFP+-10G-SR
FPC 3	REV 13	750-036844	EG5074	FPC
CPU	REV 09	711-030686	EG4064	SNG PMB
PIC 1	REV 10	750-031903	EG0325	SNG Load
FPC 5	REV 06	750-036844	EH3198	FPC
CPU				
PIC 0	REV 14	750-031913	EG5134	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LBH	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11B03724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FMH	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J00818	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00743	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11B06125	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11H02529	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LFB	SFP+-10G-SR

Xcvr 12	REV 01	740-031980	193363A01061	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	B11J00687	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	193363A00738	SFP+-10G-SR
Xcvr 18	REV 01	740-031980	AK80MQX	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08C17257	SFP+-10G-LR
Xcvr 22	REV 01	740-031980	B11J00730	SFP+-10G-SR
Xcvr 23	REV 01	740-031980	AK80KEE	SFP+-10G-SR
PIC 1	REV 08	750-036710	EG3105	2x 40GE CFP
Xcvr 0	REV 01	740-034554	B260HLT	CFP-40G-LR4
Xcvr 1	REV 01	740-034554	B11C02847	CFP-40G-LR4
FPC 6	REV 18	750-036844	EJ4391	FPC
CPU	REV 12	711-030686	EJ3257	SNG PMB
FPC 7	REV 18	750-036844	EJ4382	FPC
CPU	REV 12	711-030686	EJ3238	SNG PMB
SPMB 0	REV 10	711-030686	EG5418	SNG PMB
SPMB 1	REV 09	711-030686	EG5373	SNG PMB
SIB 0	REV 07	750-030631	EG4858	SIB-I-8S
SIB 1	REV 07	750-030631	EG4872	SIB-I-8S
SIB 2	REV 07	750-030631	EG4866	SIB-I-8S
SIB 3	REV 07	750-030631	EG6011	SIB-I-8S
SIB 4	REV 07	750-030631	EG4907	SIB-I-8S
SIB 5	REV 07	750-030631	EG4879	SIB-I-8S
SIB 6	REV 07	750-030631	EG4864	SIB-I-8S
SIB 7	REV 07	750-030631	EG4899	SIB-I-8S
SIB 8	REV 07	750-030631	EG4880	SIB-I-8S
Fan Tray 0	REV 04	760-032784	EG1496	Vertical Fan Tray
Fan Tray 1	REV 04	760-030642	EG1335	Horizontal Fan Tray
Fan Tray 2	REV 02	760-030642	ED4952	Horizontal Fan Tray

show chassis hardware (PTX5000 Packet Transport Router with AC PSM and PDU)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN12223A6AJA	PTX5000
Midplane	REV 16	750-035893	ACRA1350	Midplane-8S
FPM	REV 12	760-030647	BBBD5625	Front Panel Display
PDU 0	Rev 01	740-048338	1GB83360005	High Capacity AC WYE PDU
PSM 0	Rev 01	740-048334	1GB43360074	High Capacity AC PSM
PSM 1	Rev 01	740-048334	1GB43360001	High Capacity AC PSM
PSM 2	Rev 01	740-048334	1GB43360104	High Capacity AC PSM
PSM 3	Rev 01	740-048334	1GB43360042	High Capacity AC PSM
PSM 4	Rev 01	740-048334	1GB43360068	High Capacity AC PSM
PSM 5	Rev 01	740-048334	1GB43360080	High Capacity AC PSM
PSM 6	Rev 01	740-048334	1GB43360046	High Capacity AC PSM
PSM 7	Rev 01	740-048334	1GB43360100	High Capacity AC PSM
PDU 1	Rev 01	740-048338	1GB83360006	High Capacity AC WYE PDU
PSM 0	Rev 01	740-048334	1GB43360069	High Capacity AC PSM
PSM 1	Rev 01	740-048334	1GB43360099	High Capacity AC PSM
PSM 2	Rev 01	740-048334	1GB43360050	High Capacity AC PSM
PSM 3	Rev 01	740-048334	1GB43360095	High Capacity AC PSM
PSM 4	Rev 01	740-048334	1GB43360101	High Capacity AC PSM
PSM 5	Rev 01	740-048334	1GB43360075	High Capacity AC PSM
PSM 6	Rev 01	740-048334	1GB43360047	High Capacity AC PSM
PSM 7	Rev 01	740-048334	1GB43360019	High Capacity AC PSM
CCG 0	REV 09	750-030653	BBAZ5345	Clock Generator
...				

show chassis hardware (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN1204FC0AJA	PTX5000
Midplane	REV 11	750-035893	ACAB8038	Midplane-8S
FPM	REV 12	760-030647	BBBD5619	Front Panel
Display				
PDU 0	Rev 04	740-048336	1GB93470043	High Capacity DC PDU
PSM 0	Rev 04	740-046988	1GB63500184	High Capacity DC PSM
PSM 2	Rev 04	740-046988	1GB63500169	High Capacity DC PSM
PSM 4	Rev 04	740-046988	1GB63500306	High Capacity DC PSM
PSM 6	Rev 04	740-046988	1GB63500074	High Capacity DC PSM
PDU 1	Rev 04	740-048336	1GB93470045	High Capacity DC PDU
PSM 1	Rev 04	740-046988	1GB63500193	High Capacity DC PSM
PSM 3	Rev 04	740-046988	1GB63500143	High Capacity DC PSM
PSM 5	Rev 04	740-046988	1GB63500146	High Capacity DC PSM
PSM 7	Rev 04	740-046988	1GB63500192	High Capacity DC PSM
CCG 0	REV 09	750-030653	BBBC1909	Clock Generator
CCG 1	REV 09	750-030653	BBBD2970	Clock Generator
...				

show chassis hardware clei-models (PTX5000 Packet Transport Router)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
FPM	REV 08	760-030647	PROTOXCLEI	CRAFT-PTX5000-S
PDU 0	Rev 05	740-032019	IPUPAHLKAA	PWR-SAN-PDU-DC
PSM 0	Rev 05	740-032022	IPUPAHNKAA	PSM-PTX-DC-120-S
PSM 1	Rev 04	740-032022	032022XXXX	PWR-SAN-12-DC
PSM 2	Rev 04	740-032022	032022XXXX	PWR-SAN-12-DC
PSM 3	Rev 05	740-032022	IPUPAHNKAA	PSM-PTX-DC-120-S
CCG 0	REV 04	750-030653	PROTOXCLEI	CCG-PTX-S
CCG 1	REV 04	750-030653	PROTOXCLEI	CCG-PTX-S
Routing Engine 0	REV 05	740-026942		RE-DUO-C2600-16G-S
Routing Engine 1	REV 06	740-026942		RE-DUO-C2600-16G-S
CB 0	REV 08	750-030625	PROTOXCLEI	CB-PTX-S
CB 1	REV 08	750-030625	PROTOXCLEI	CB-PTX-S
FPC 0	REV 18	750-036844	PROTOXCLEI	FPC-PTX-P1-A
FPC 2	REV 13	750-036844	PROTOXCLEI	FPC-PTX-P1-A
PIC 0	REV 14	750-031913	PROTOXCLEI	P1-PTX-24-10GE-SFPP
FPC 3	REV 13	750-036844	PROTOXCLEI	FPC-PTX-P1-A
FPC 5				
PIC 0	REV 14	750-031913	PROTOXCLEI	P1-PTX-24-10GE-SFPP
FPC 6	REV 18	750-036844	PROTOXCLEI	FPC-PTX-P1-A
FPC 7	REV 18	750-036844	PROTOXCLEI	FPC-PTX-P1-A
SIB 0	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 1	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 2	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 3	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 4	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 5	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 6	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 7	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
SIB 8	REV 07	750-030631	PROTOXCLEI	SIB-I-PTX5008
Fan Tray 1	REV 04	760-030642	PROTOXCLEI	FAN-PTX-H-S

show chassis hardware clei-models (PTX5000 Packet Transport Router with AC PSM and PDU)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 16	750-035893	IPMUN00ARA	CHAS-MP-PTX5000-S
FPM	REV 12	760-030647	IPUCA7SCAA	CRAFT-PTX5000-S
PDU 0	Rev 01	740-048338	PROTOACPDU	PDU2-PTX-AC-W
PSM 0	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 1	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 2	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 3	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 4	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 5	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 6	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 7	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PDU 1	Rev 01	740-048338	PROTOACPDU	PDU2-PTX-AC-W
PSM 0	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 1	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 2	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 3	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 4	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 5	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 6	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
PSM 7	Rev 01	740-048334	PROTOACPSM	PSM2-PTX-AC
CCG 0	REV 09	750-030653	IPUCA7DCAA	CCG-PTX-S
...				

show chassis hardware clei-models (PTX5000 Packet Transport Router with FPC2-PTX-PIA)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 11	750-035893	IPMUN00ARA	CHAS-MP-PTX5000-S
FPM	REV 12	760-030647	IPUCA7SCAA	CRAFT-PTX5000-S
PDU 0	Rev 04	740-048336	IPUPAL7KAA	PDU2-PTX-DC-S
PSM 0	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 2	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 4	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 6	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PDU 1	Rev 04	740-048336	IPUPAL7KAA	PDU2-PTX-DC-S
PSM 1	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 3	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 5	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
PSM 7	Rev 04	740-046988	IPUPAL8KAA	PSM2-PTX-DC-S
CCG 0	REV 09	750-030653	IPUCA7DCAA	CCG-PTX-S
CCG 1	REV 09	750-030653	IPUCA7DCAA	CCG-PTX-S
...				

show chassis hardware detail (PTX5000 Packet Transport Router)

```
user@host> show chassis hardware detail
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN1D1FD7AJA	PTX5000
Midplane	REV 03	711-031896	ABAC5589	Midplane-8S
FPM	REV 08	760-030647	EG1679	Front Panel Display

PDU 0	Rev 05	740-032019	ZE00006	DC Power Dist Unit
PSM 0	Rev 05	740-032022	ZJ00018	DC 12V Power Supply
PSM 1	Rev 04	740-032022	ZC00052	DC 12V Power Supply
PSM 2	Rev 04	740-032022	ZD00051	DC 12V Power Supply
PSM 3	Rev 05	740-032022	ZJ00060	DC 12V Power Supply
CCG 0	REV 04	750-030653	EG3703	Clock Generator
CCG 1	REV 04	750-030653	EG3698	Clock Generator
Routing Engine 0	REV 05	740-026942	P737A-002231	RE-DUO-2600
ad0	3823 MB	SMART CF	201006190039C02DC02D	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	2011042300CF4C6B4C6B	Disk 1
Routing Engine 1	REV 06	740-026942	P737A-002438	RE-DUO-2600
ad0	3823 MB	SMART CF	20100619053455F055F0	Compact Flash
ad1	62720 MB	SMART Lite SATA Drive	20110423000AE8E7E8E7	Disk 1
CB 0	REV 08	750-030625	EG5519	Control Board
CB 1	REV 08	750-030625	EG5516	Control Board
FPC 0	REV 18	750-036844	EJ3080	FPC
CPU	REV 12	711-030686	EJ3260	SNG PMB
FPC 2	REV 13	750-036844	EG5065	FPC
CPU	REV 09	711-030686	EG4082	SNG PMB
PIC 0	REV 14	750-031913	EG5127	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	143363A00240	SFP+-10G-SR
Xcvr 1	REV 01	740-031981	UK90PZ1	SFP+-10G-LR
Xcvr 2	REV 01	740-031980	AD1141A04XH	SFP+-10G-SR
Xcvr 3	REV 01	740-031981	UK90Q46	SFP+-10G-LR
Xcvr 4	REV 01	740-031980	AD1141A04X4	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	B11H02560	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11C01589	SFP+-10G-SR
Xcvr 8	REV 01	740-031980	AD1141A04XF	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	123363A01094	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LKF	SFP+-10G-SR
Xcvr 12	REV 01	740-031980	183363A01528	SFP+-10G-SR
Xcvr 14	REV 01	740-031980	193363A01079	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	AK80MC8	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	AJC0BHC	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08D26856	SFP+-10G-LR
Xcvr 21	REV 01	740-031980	AK80KCT	SFP+-10G-SR
Xcvr 22	REV 01	740-031981	UK90PZL	SFP+-10G-LR
Xcvr 23	REV 01	740-031980	AK80N1V	SFP+-10G-SR
FPC 3	REV 13	750-036844	EG5074	FPC
CPU	REV 09	711-030686	EG4064	SNG PMB
PIC 1	REV 10	750-031903	EG0325	SNG Load
FPC 5	REV 06	750-036844	EH3198	FPC
CPU				
PIC 0	REV 14	750-031913	EG5134	24x 10GE(LAN) SFP+
Xcvr 0	REV 01	740-031980	AK80LBH	SFP+-10G-SR
Xcvr 1	REV 01	740-031980	B11B03724	SFP+-10G-SR
Xcvr 2	REV 01	740-031980	AK80FMH	SFP+-10G-SR
Xcvr 5	REV 01	740-031980	B11J00818	SFP+-10G-SR
Xcvr 6	REV 01	740-031980	193363A00743	SFP+-10G-SR
Xcvr 7	REV 01	740-031980	B11B06125	SFP+-10G-SR
Xcvr 10	REV 01	740-031980	B11H02529	SFP+-10G-SR
Xcvr 11	REV 01	740-031980	AK80LFB	SFP+-10G-SR
Xcvr 12	REV 01	740-031980	193363A01061	SFP+-10G-SR
Xcvr 15	REV 01	740-031980	B11J00687	SFP+-10G-SR
Xcvr 16	REV 01	740-031980	193363A00738	SFP+-10G-SR
Xcvr 18	REV 01	740-031980	AK80MQX	SFP+-10G-SR
Xcvr 19	REV 01	740-021309	J08C17257	SFP+-10G-LR
Xcvr 22	REV 01	740-031980	B11J00730	SFP+-10G-SR
Xcvr 23	REV 01	740-031980	AK80KEE	SFP+-10G-SR
PIC 1	REV 08	750-036710	EG3105	2x 40GE CFP

Xcvr 0	REV 01	740-034554	B260HLT	CFP-40G-LR4
Xcvr 1	REV 01	740-034554	B11C02847	CFP-40G-LR4
FPC 6	REV 18	750-036844	EJ4391	FPC
CPU	REV 12	711-030686	EJ3257	SNG PMB
FPC 7	REV 18	750-036844	EJ4382	FPC
CPU	REV 12	711-030686	EJ3238	SNG PMB
SPMB 0	REV 10	711-030686	EG5418	SNG PMB
SPMB 1	REV 09	711-030686	EG5373	SNG PMB
SIB 0	REV 07	750-030631	EG4858	SIB-I-8S
SIB 1	REV 07	750-030631	EG4872	SIB-I-8S
SIB 2	REV 07	750-030631	EG4866	SIB-I-8S
SIB 3	REV 07	750-030631	EG6011	SIB-I-8S
SIB 4	REV 07	750-030631	EG4907	SIB-I-8S
SIB 5	REV 07	750-030631	EG4879	SIB-I-8S
SIB 6	REV 07	750-030631	EG4864	SIB-I-8S
SIB 7	REV 07	750-030631	EG4899	SIB-I-8S
SIB 8	REV 07	750-030631	EG4880	SIB-I-8S
Fan Tray 0	REV 04	760-032784	EG1496	Vertical Fan Tray
Fan Tray 1	REV 04	760-030642	EG1335	Horizontal Fan Tray
Fan Tray 2	REV 02	760-030642	ED4952	Horizontal Fan Tray

show chassis hardware detail (PTX5000 Packet Transport Router with AC PSM and PDU)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN12223A6AJA	PTX5000
Midplane	REV 16	750-035893	ACRA1350	Midplane-8S
FPM	REV 12	760-030647	BBBD5625	Front Panel Display
PDU 0	Rev 01	740-048338	1GB83360005	High Capacity AC WYE PDU
PSM 0	Rev 01	740-048334	1GB43360074	High Capacity AC PSM
PSM 1	Rev 01	740-048334	1GB43360001	High Capacity AC PSM
PSM 2	Rev 01	740-048334	1GB43360104	High Capacity AC PSM
PSM 3	Rev 01	740-048334	1GB43360042	High Capacity AC PSM
PSM 4	Rev 01	740-048334	1GB43360068	High Capacity AC PSM
PSM 5	Rev 01	740-048334	1GB43360080	High Capacity AC PSM
PSM 6	Rev 01	740-048334	1GB43360046	High Capacity AC PSM
PSM 7	Rev 01	740-048334	1GB43360100	High Capacity AC PSM
PDU 1	Rev 01	740-048338	1GB83360006	High Capacity AC WYE PDU
PSM 0	Rev 01	740-048334	1GB43360069	High Capacity AC PSM
PSM 1	Rev 01	740-048334	1GB43360099	High Capacity AC PSM
PSM 2	Rev 01	740-048334	1GB43360050	High Capacity AC PSM
PSM 3	Rev 01	740-048334	1GB43360095	High Capacity AC PSM
PSM 4	Rev 01	740-048334	1GB43360101	High Capacity AC PSM
PSM 5	Rev 01	740-048334	1GB43360075	High Capacity AC PSM
PSM 6	Rev 01	740-048334	1GB43360047	High Capacity AC PSM
PSM 7	Rev 01	740-048334	1GB43360019	High Capacity AC PSM
CCG 0	REV 09	750-030653	BBAZ5345	Clock Generator

show chassis hardware detail (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis hardware detail
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1204FC0AJA	PTX5000

Midplane	REV 11	750-035893	ACAB8038	Midplane-8S
FPM	REV 12	760-030647	BBBD5619	Front Panel
Display				
PDU 0	Rev 04	740-048336	1GB93470043	High Capacity DC PDU
PSM 0	Rev 04	740-046988	1GB63500184	High Capacity DC PSM
PSM 2	Rev 04	740-046988	1GB63500169	High Capacity DC PSM
PSM 4	Rev 04	740-046988	1GB63500306	High Capacity DC PSM
PSM 6	Rev 04	740-046988	1GB63500074	High Capacity DC PSM
PDU 1	Rev 04	740-048336	1GB93470045	High Capacity DC PDU
PSM 1	Rev 04	740-046988	1GB63500193	High Capacity DC PSM
PSM 3	Rev 04	740-046988	1GB63500143	High Capacity DC PSM
PSM 5	Rev 04	740-046988	1GB63500146	High Capacity DC PSM
PSM 7	Rev 04	740-046988	1GB63500192	High Capacity DC PSM
CCG 0	REV 09	750-030653	BBBC1909	Clock Generator
CCG 1	REV 09	750-030653	BBBD2970	Clock Generator
...				

show chassis hardware models (PTX5000 Packet Transport Router)

```
user@host> show chassis hardware models
```

Hardware inventory:				
Item	Version	Part number	Serial number	FRU model number
FPM	REV 08	760-030647	EG1679	CRAFT-PTX5000-S
PDU 0	Rev 05	740-032019	ZE00006	PWR-SAN-PDU-DC
PSM 0	Rev 05	740-032022	ZJ00018	PSM-PTX-DC-120-S
PSM 1	Rev 04	740-032022	ZC00052	PWR-SAN-12-DC
PSM 2	Rev 04	740-032022	ZD00051	PWR-SAN-12-DC
PSM 3	Rev 05	740-032022	ZJ00060	PSM-PTX-DC-120-S
CCG 0	REV 04	750-030653	EG3703	CCG-PTX-S
CCG 1	REV 04	750-030653	EG3698	CCG-PTX-S
Routing Engine 0	REV 05	740-026942	P737A-002231	RE-DUO-C2600-16G-S
Routing Engine 1	REV 06	740-026942	P737A-002438	RE-DUO-C2600-16G-S
CB 0	REV 08	750-030625	EG5519	CB-PTX-S
CB 1	REV 08	750-030625	EG5516	CB-PTX-S
FPC 0	REV 18	750-036844	EJ3080	FPC-PTX-P1-A
FPC 2	REV 13	750-036844	EG5065	FPC-PTX-P1-A
PIC 0	REV 14	750-031913	EG5127	P1-PTX-24-10GE-SFPP
FPC 3	REV 13	750-036844	EG5074	FPC-PTX-P1-A
FPC 5				
PIC 0	REV 14	750-031913	EG5134	P1-PTX-24-10GE-SFPP
FPC 6	REV 18	750-036844	EJ4391	FPC-PTX-P1-A
FPC 7	REV 18	750-036844	EJ4382	FPC-PTX-P1-A
SIB 0	REV 07	750-030631	EG4858	SIB-I-PTX5008
SIB 1	REV 07	750-030631	EG4872	SIB-I-PTX5008
SIB 2	REV 07	750-030631	EG4866	SIB-I-PTX5008
SIB 3	REV 07	750-030631	EG6011	SIB-I-PTX5008
SIB 4	REV 07	750-030631	EG4907	SIB-I-PTX5008
SIB 5	REV 07	750-030631	EG4879	SIB-I-PTX5008
SIB 6	REV 07	750-030631	EG4864	SIB-I-PTX5008
SIB 7	REV 07	750-030631	EG4899	SIB-I-PTX5008
SIB 8	REV 07	750-030631	EG4880	SIB-I-PTX5008
Fan Tray 1	REV 04	760-030642	EG1335	FAN-PTX-H-S

show chassis hardware models (PTX5000 Packet Transport Router with AC PSM and PDU)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 16	750-035893	ACRA1350	CHAS-MP-PTX5000-S
FPM	REV 12	760-030647	BBBD5625	CRAFT-PTX5000-S
PDU 0	Rev 01	740-048338	1GB83360005	PDU2-PTX-AC-W
PSM 0	Rev 01	740-048334	1GB43360074	PSM2-PTX-AC
PSM 1	Rev 01	740-048334	1GB43360001	PSM2-PTX-AC
PSM 2	Rev 01	740-048334	1GB43360104	PSM2-PTX-AC
PSM 3	Rev 01	740-048334	1GB43360042	PSM2-PTX-AC
PSM 4	Rev 01	740-048334	1GB43360068	PSM2-PTX-AC
PSM 5	Rev 01	740-048334	1GB43360080	PSM2-PTX-AC
PSM 6	Rev 01	740-048334	1GB43360046	PSM2-PTX-AC
PSM 7	Rev 01	740-048334	1GB43360100	PSM2-PTX-AC
PDU 1	Rev 01	740-048338	1GB83360006	PDU2-PTX-AC-W
PSM 0	Rev 01	740-048334	1GB43360069	PSM2-PTX-AC
PSM 1	Rev 01	740-048334	1GB43360099	PSM2-PTX-AC
PSM 2	Rev 01	740-048334	1GB43360050	PSM2-PTX-AC
PSM 3	Rev 01	740-048334	1GB43360095	PSM2-PTX-AC
PSM 4	Rev 01	740-048334	1GB43360101	PSM2-PTX-AC
PSM 5	Rev 01	740-048334	1GB43360075	PSM2-PTX-AC
PSM 6	Rev 01	740-048334	1GB43360047	PSM2-PTX-AC
PSM 7	Rev 01	740-048334	1GB43360019	PSM2-PTX-AC
CCG 0	REV 09	750-030653	BBAZ5345	CCG-PTX-S
...				

show chassis hardware models (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

user@host> show chassis hardware models

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 11	750-035893	ACAB8038	CHAS-MP-PTX5000-S
FPM	REV 12	760-030647	BBBD5619	CRAFT-PTX5000-S
PDU 0	Rev 04	740-048336	1GB93470043	PDU2-PTX-DC-S
PSM 0	Rev 04	740-046988	1GB63500184	PSM2-PTX-DC-S
PSM 2	Rev 04	740-046988	1GB63500169	PSM2-PTX-DC-S
PSM 4	Rev 04	740-046988	1GB63500306	PSM2-PTX-DC-S
PSM 6	Rev 04	740-046988	1GB63500074	PSM2-PTX-DC-S
PDU 1	Rev 04	740-048336	1GB93470045	PDU2-PTX-DC-S
PSM 1	Rev 04	740-046988	1GB63500193	PSM2-PTX-DC-S
PSM 3	Rev 04	740-046988	1GB63500143	PSM2-PTX-DC-S
PSM 5	Rev 04	740-046988	1GB63500146	PSM2-PTX-DC-S
PSM 7	Rev 04	740-046988	1GB63500192	PSM2-PTX-DC-S
CCG 0	REV 09	750-030653	BBBC1909	CCG-PTX-S
CCG 1	REV 09	750-030653	BBBD2970	CCG-PTX-S
...				

show chassis hardware extensive (PTX5000 Packet Transport Router)

user@host> show chassis hardware extensive

Hardware inventory:

Item	Version	Part number	Serial number	Description
.....				
PDU 0	Rev 04	740-032019	UE0003	DC Power Dist Unit
Jedec Code:	0x7fb0		EEPROM Version:	0x02
P/N:	740-032019		S/N:	UE0003
Assembly ID:	0x043d		Assembly Version:	04.00
Date:	11-29-2010		Assembly Flags:	0x00

```

Version:      Rev 04          CLEI Code:      032022XXXX
ID: DC Power Dist Unit      FRU Model Number: PWR-SAN-PDU-DC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 3d 04 00 52 65 76 20 30 34 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 32 30 31 39 00 00
Address 0x20: 53 2f 4e 20 55 45 30 30 30 33 00 00 00 1d 0b 07
Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 30 33 32 30 32 32 58 58 58 58 50
Address 0x50: 57 52 2d 53 41 4e 2d 50 44 55 2d 44 43 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 a3 ff ff ff ff ff ff ff ff ff ff ff ff
PSM 0          Rev 04      740-032022      YG00065          DC 12V Power Supply
Module
Jedec Code:    0x7fb0          EEPROM Version:    0x02
P/N:           740-032022      S/N:              YG00065
Assembly ID:   0x0440          Assembly Version:  04.00
Date:          07-30-2010      Assembly Flags:    0x00
Version:       Rev 04          CLEI Code:        032022XXXX
ID: DC 12V Power Supply Module FRU Model Number: PWR-SAN-12-DC
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 04 40 04 00 52 65 76 20 30 34 00 00
Address 0x10: 00 00 00 00 37 34 30 2d 30 33 32 30 32 32 00 00
Address 0x20: 53 2f 4e 20 59 47 30 30 30 36 35 00 00 1e 07 07
Address 0x30: da ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 30 33 32 30 32 32 58 58 58 58 50
Address 0x50: 57 52 2d 53 41 4e 2d 31 32 2d 44 43 20 20 20 20
Address 0x60: 20 20 20 20 20 20 01 00 ff ff ff ff ff ff ff ff
Address 0x70: ff ff ff 0c ff ff ff ff ff ff ff ff ff ff ff ff

```

show chassis hardware extensive (PTX1000 Packet Transport Router)

```
user@host> show chassis hardware extensive
```

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               UNDEFINED    PTX1000
Pseudo CB 0
Routing Engine 0
FPC 0         REV 06    750-053330   ACAM4850       PTX1000-FPC-P2-BUILTIN
CPU           BUILTIN   BUILTIN      FPC CPU
PIC 0         BUILTIN   BUILTIN      288X10GE/72X40GE/24X100GE

    Xcvr 2     REV 01    740-046565   QE240845       QSFP+-40G-SR4
    Xcvr 3     REV 01    740-046565   QE240962       QSFP+-40G-SR4
    Xcvr 5     REV 01    740-032986   ES400LZ        QSFP+-40G-SR4
    Xcvr 12    REV 01    740-054053   QE419452       QSFP+-4X10G-SR
    Xcvr 18    REV 01    740-054053   QE419481       QSFP+-4X10G-SR
    Xcvr 30    REV 01    740-046565   QE440485       QSFP+-40G-SR4
    Xcvr 48    REV 01    740-032986   ES400K3        QSFP+-40G-SR4
    Xcvr 68    REV 01    740-046565   QF2805J3       QSFP+-40G-SR4
    Mezz       REV 05    711-053333   ACAM4282       Mezzanine Board
Power Supply 2 REV 01    740-054405   1EDN4470131    AC AFO 1600W PSU
Power Supply 3 REV 01    740-054405   1EDN4470112    AC AFO 1600W PSU
Fan Tray 0                               PTX1000 Fan Tray 0, Front
to Back Airflow - AFO
Fan Tray 1                               PTX1000 Fan Tray 1, Front

```

```

to Back Airflow - AFO
Fan Tray 2
to Back Airflow - AFO
PTX1000 Fan Tray 2, Front

```

show chassis hardware extensive (PTX5000 with Control Board 2)

```
user@host> show chassis hardware grep CB
```

```

CB 0          REV 06  750-055537  ACLZ9541  Control Board 2
CB 1          REV 06  750-055537  ACLY5329  Control Board 2

```

show chassis hardware (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1100FB1AFB	MX480
Midplane	REV 05	710-017414	TR3310	MX480 Midplane
FPM Board	REV 02	710-017254	KG1872	Front Panel Display
PEM 2	Rev 02	740-017343	QCS0812A00N	DC Power Entry Module
PEM 3	Rev 02	740-017343	QCS0812A00U	DC Power Entry Module
Routing Engine 0	REV 07	740-015113	1000740938	RE-S-1300
CB 0	REV 03	710-021523	KF4630	MX SCB
FPC 1	REV 11	750-037207	ZW9726	AS-MCC
CPU	REV 04	711-038173	ZW4819	AS-MCC PMB
MIC 0	REV 06	750-037214	ZW3574	AS-MSC
PIC 0		BUILTIN	BUILTIN	AS-MSC
MIC 1	REV 00	750-037211		AS-MXC
PIC 2		BUILTIN	BUILTIN	AS-MXC

show chassis hardware extensive (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis hardware extensive
```

```

FPC 1          REV 11  750-037207  ZW9726          AS-MCC
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           750-037207      S/N:             ZW9726
Assembly ID:   0x0b37          Assembly Version: 01.11
Date:          02-17-2012      Assembly Flags:   0x00
Version:       REV 11          CLEI Code:        PROTOXCLEI
ID: AS-MCC          FRU Model Number: 750-037207
Board Information Record:
Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 02 ff 0b 37 01 0b 52 45 56 20 31 31 00 00
Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 30 37 00 00
Address 0x20: 53 2f 4e 20 5a 57 39 37 32 36 00 00 00 11 02 07
Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff
Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 37
Address 0x50: 35 30 2d 30 33 37 32 30 37 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 31 31 00 ff ff ff ff ff ff ff
Address 0x70: ff ff ff 5e ff ff ff ff ff ff ff ff ff ff ff ff
CPU          REV 04  711-038173  ZW4819          AS-MCC-PMB
Jedec Code:    0x7fb0          EEPROM Version:  0x02
P/N:           711-038173      S/N:             ZW4819
Assembly ID:   0x0b38          Assembly Version: 01.04
Date:          12-30-2011      Assembly Flags:   0x00

```



```

Version:      REV 04
ID: AS-MCC PMB
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0b 38 01 04 52 45 56 20 30 34 00 00
  Address 0x10: 00 00 00 00 37 31 31 2d 30 33 38 31 37 33 00 00
  Address 0x20: 53 2f 4e 20 5a 57 34 38 31 39 00 00 00 1e 0c 07
  Address 0x30: db ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 50 52 4f 54 4f 58 43 4c 45 49 37
  Address 0x50: 31 31 2d 30 33 38 31 37 33 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 30 34 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 60 00 00 00 00 00 00 00 00 00 00 00 00
MIC 0          REV 06      750-037214      ZW3574      AS-MSC
Jedec Code:    0x7fb0      EEPROM Version:    0x02
P/N:           750-037214      S/N:           ZW3574
Assembly ID:   0x0a44      Assembly Version: 01.06
Date:          02-19-2012      Assembly Flags: 0x00
Version:       REV 06      CLEI Code:      PROTOXCLEI
ID: AS-MSC      FRU Model Number: 750-037214
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 02 ff 0a 44 01 06 52 45 56 20 30 36 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 31 34 00 00
  Address 0x20: 53 2f 4e 20 5a 57 33 35 37 34 00 00 00 13 02 07
  Address 0x30: dc ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 37
  Address 0x50: 35 30 2d 30 33 37 32 31 34 00 00 00 00 00 00 00
  Address 0x60: 00 00 00 00 00 00 30 36 00 ff ff ff ff ff ff ff
  Address 0x70: ff ff ff 60 c0 03 e5 f4 00 00 00 00 00 00 00 00
PIC 0          BUILTIN      BUILTIN      AS-MSC
MIC 1          REV 00      750-037211      AS-MXC
Jedec Code:    0x7fb0      EEPROM Version:    0x01
P/N:           750-037211
Assembly ID:   0x0a43      Assembly Version: 01.00
Date:          255-255-65535  Assembly Flags: 0x00
Version:       REV 00
ID: AS-MXC
Board Information Record:
  Address 0x00: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
I2C Hex Data:
  Address 0x00: 7f b0 01 ff 0a 43 01 00 52 45 56 20 30 30 00 00
  Address 0x10: 00 00 00 00 37 35 30 2d 30 33 37 32 31 31 00 00
  Address 0x20: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 ff ff ff
  Address 0x30: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x40: ff ff ff ff 00 ff ff ff ff ff ff ff ff ff ff ff
  Address 0x50: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x60: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
  Address 0x70: ff ff ff ff c0 02 e6 6c 7f b0 02 ff 0a 44 01 06
PIC 2          BUILTIN      BUILTIN      AS-MXC

```

show chassis hardware (ACX5048 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			VF3714170810	ACX5048

Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	ACX5K Routing Engine
FPC 0	REV 05	650-056267	VF3714170810	ACX5048
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	48x10G-6x40G
Xcvr 0	REV 02	740-011613	NR2051S	SFP-SX
Xcvr 33	REV 01	740-030589	SE5N290041	SFP+-10G-LPBK
Xcvr 35	REV 01	740-030589	SE5N290926	SFP+-10G-LPBK
Xcvr 37	REV 01	740-030589	SE5N290049	SFP+-10G-LPBK
Xcvr 39	REV 01	740-030589	SE5N290046	SFP+-10G-LPBK
Xcvr 48		NON-JNPR	409310098	UNKNOWN
Power Supply 1	REV 03	740-041741	1GA24081097	JPSU-650W-AC-AFO
Fan Tray 0				ACX5K Fan Tray 0, Front
to Back Airflow - AFO				
Fan Tray 1				ACX5K Fan Tray 1, Front
to Back Airflow - AFO				
Fan Tray 2				ACX5K Fan Tray 2, Front
to Back Airflow - AFO				
Fan Tray 3				ACX5K Fan Tray 3, Front
to Back Airflow - AFO				
Fan Tray 4				ACX5K Fan Tray 4, Front
to Back Airflow - AFO				

show chassis hardware detail (ACX5048 Router)

```
user@host> show chassis hardware detail
```

Hardware inventory:				
Item	Version	Part number	Serial number	Description
Chassis			VF3714170810	ACX5048
Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	ACX5K Routing Engine
ad0	509 MB	QEMU HARDDISK	QM00001	Hard Disk
ad1	4095 MB	QEMU HARDDISK	QM00002	Hard Disk
ad2	511 MB	QEMU HARDDISK	QM00003	Hard Disk
ad3	1023 MB	QEMU HARDDISK	QM00004	Hard Disk
usb0 (addr 1)	product 0x0000 0		vendor 0x0000	uhub1
usb0 (addr 2)	product 0x0020 32		vendor 0x8087	uhub2
FPC 0	REV 05	650-056267	VF3714170810	ACX5048
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	48x10G-6x40G
Xcvr 0	REV 02	740-011613	NR2051S	SFP-SX
Xcvr 33	REV 01	740-030589	SE5N290041	SFP+-10G-LPBK
Xcvr 35	REV 01	740-030589	SE5N290926	SFP+-10G-LPBK
Xcvr 37	REV 01	740-030589	SE5N290049	SFP+-10G-LPBK
Xcvr 39	REV 01	740-030589	SE5N290046	SFP+-10G-LPBK
Xcvr 48		NON-JNPR	409310098	UNKNOWN
Power Supply 1	REV 03	740-041741	1GA24081097	JPSU-650W-AC-AFO
Fan Tray 0				ACX5K Fan Tray 0, Front
to Back Airflow - AFO				
Fan Tray 1				ACX5K Fan Tray 1, Front
to Back Airflow - AFO				
Fan Tray 2				ACX5K Fan Tray 2, Front
to Back Airflow - AFO				
Fan Tray 3				ACX5K Fan Tray 3, Front
to Back Airflow - AFO				
Fan Tray 4				ACX5K Fan Tray 4, Front
to Back Airflow - AFO				

show chassis hardware clei-models (ACX5048 Router)

```
user@host> show chassis hardware clei-models
```

Hardware inventory:

Item	Version	Part number	CLEI code	FRU model number
Routing Engine 0		BUILTIN	CMMRG00BRA	ACX5048
FPC 0	REV 05	650-056267	CMMRG00BRA	ACX5048
PIC 0		BUILTIN	CMMRG00BRA	ACX5048
Power Supply 1	REV 03	740-041741	CMUPABHBAA	JPSU-650W-AC-AFO
Fan Tray 0				ACX5K-FAN
Fan Tray 1				ACX5K-FAN
Fan Tray 2				ACX5K-FAN
Fan Tray 3				ACX5K-FAN
Fan Tray 4				ACX5K-FAN

show chassis hardware models (ACX5048 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Routing Engine 0		BUILTIN	BUILTIN	ACX5048
FPC 0	REV 05	650-056267	VF3714170810	ACX5048
PIC 0		BUILTIN	BUILTIN	ACX5048
Power Supply 1	REV 03	740-041741	1GA24081097	JPSU-650W-AC-AFO
Fan Tray 0				ACX5K-FAN
Fan Tray 1				ACX5K-FAN
Fan Tray 2				ACX5K-FAN
Fan Tray 3				ACX5K-FAN
Fan Tray 4				ACX5K-FAN

show chassis hardware (ACX5096 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			VB3714510139	ACX5096
Pseudo CB 0				
Routing Engine 0		BUILTIN	BUILTIN	ACX5K Routing Engine
FPC 0	REV 09	650-053391	VB3714510139	ACX5096
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	96x10G-8x40G
Xcvr 0	REV 01	740-021308	ARS186H	SFP+-10G-SR
Xcvr 2	REV 01	740-031851	AM1045SUA1G	SFP-SX
Xcvr 10	REV 02	740-011613	NS11KRP	SFP-SX
Xcvr 14	REV 01	740-031980	AMCOLKL	SFP+-10G-SR
Xcvr 20	REV 01	740-021308	ARS18A2	SFP+-10G-SR
Xcvr 30	REV 02	740-011613	PJ21954	SFP-SX
Xcvr 35	REV 01	740-031851	PN344LV	SFP-SX
Xcvr 40	REV 01	740-031851	PLG028R	SFP-SX
Xcvr 41	REV 01	740-021308	L12D01919	SFP+-10G-SR
Xcvr 46	REV 01	740-011613	PD91F10	SFP-SX
Xcvr 64	REV 01	740-031980	AMS0YSS	SFP+-10G-SR
Xcvr 96	REV 01	740-032986	QE481421	QSFP+-40G-SR4
Xcvr 99	REV 01	740-032986	QE494942	QSFP+-40G-SR4
Xcvr 100	REV 01	740-032986	QE494756	QSFP+-40G-SR4
Power Supply 0	REV 01	740-053352	1GD14220106	JPSU-850W-AC-AFO
Power Supply 1	REV 01	740-053352	1GD14220102	JPSU-850W-AC-AFO

```

Fan Tray 0
to Back Airflow - AFO
Fan Tray 1
to Back Airflow - AFO
Fan Tray 2
to Back Airflow - AFO

```

ACX5K Fan Tray 0, Front
ACX5K Fan Tray 1, Front
ACX5K Fan Tray 2, Front

show chassis hardware detail (ACX5096 Router)

```
user@host> show chassis hardware detail
```

```

Hardware inventory:
Item              Version  Part number  Serial number  Description
Chassis
Pseudo CB 0
Routing Engine 0
  ad0      509 MB  QEMU HARDDISK  QM00001      ACX5K Routing Engine
  ad1     4095 MB  QEMU HARDDISK  QM00002      Hard Disk
  ad2      511 MB  QEMU HARDDISK  QM00003      Hard Disk
  ad3     1023 MB  QEMU HARDDISK  QM00004      Hard Disk
  usb0 (addr 1) product 0x0000 0  vendor 0x0000  uhub1
  usb0 (addr 2) product 0x0020 32  vendor 0x8087  uhub2
FPC 0
  CPU
  PIC 0
  Xcvr 0      REV 01  740-021308  ARS186H      SFP+-10G-SR
  Xcvr 10     REV 02  740-011613  NS11KRP      SFP-SX
  Xcvr 14     REV 01  740-031980  AMCOLKL      SFP+-10G-SR
  Xcvr 20     REV 01  740-021308  ARS18A2      SFP+-10G-SR
  Xcvr 30     REV 02  740-011613  PJ21954      SFP-SX
  Xcvr 41     REV 01  740-021308  L12D01919    SFP+-10G-SR
  Xcvr 46     REV 01  740-011613  PD91F10      SFP-SX
  Xcvr 64     REV 01  740-031980  AMS0YSS      SFP+-10G-SR
  Xcvr 78     REV 01  740-031851  AM1045SUA1G  SFP-SX
  Xcvr 96     REV 01  740-032986  QE481421     QSFP+-40G-SR4
  Xcvr 99     REV 01  740-032986  QE494942     QSFP+-40G-SR4
  Xcvr 100    REV 01  740-032986  QE494756     QSFP+-40G-SR4
Power Supply 0  REV 01  740-053352  1GD14220106  JPSU-850W-AC-AFO
Power Supply 1  REV 01  740-053352  1GD14220102  JPSU-850W-AC-AFO
Fan Tray 0
to Back Airflow - AFO
Fan Tray 1
to Back Airflow - AFO
Fan Tray 2
to Back Airflow - AFO

```

ACX5096
FPC CPU
96x10G-8x40G
SFP+-10G-SR
SFP-SX
SFP+-10G-SR
SFP+-10G-SR
SFP-SX
SFP+-10G-SR
SFP-SX
SFP+-10G-SR
SFP-SX
QSFP+-40G-SR4
QSFP+-40G-SR4
QSFP+-40G-SR4
JPSU-850W-AC-AFO
JPSU-850W-AC-AFO
ACX5K Fan Tray 0, Front
ACX5K Fan Tray 1, Front
ACX5K Fan Tray 2, Front

show chassis hardware clei-models (ACX5096 Router)

```
user@host> show chassis hardware clei-models
```

```

Hardware inventory:
Item              Version  Part number  CLEI code      FRU model number
Routing Engine 0
FPC 0
  PIC 0
Power Supply 0  REV 01  740-053352  CMMNX10BRA     ACX5096
Power Supply 1  REV 01  740-053352  CMMNX10BRA     ACX5096
Fan Tray 0

```

ACX5096
ACX5096
CMMNX10BRA
CMMNX10BRA
CMMNX10BRA
JPSU-850W-AC-AFO
JPSU-850W-AC-AFO
ACX5K-FAN

Fan Tray 1	ACX5K-FAN
Fan Tray 2	ACX5K-FAN

show chassis hardware models (ACX5096 Router)

```
user@host> show chassis hardware models
```

```
Hardware inventory:
Item          Version  Part number  Serial number  FRU model number
Routing Engine 0
FPC 0          REV 09    650-053391  VB3714510139  ACX5096
  PIC 0        BUILTIN   BUILTIN     ACX5096
Power Supply 0  REV 01    740-053352  1GD14220106   JPSU-850W-AC-AFO
Power Supply 1  REV 01    740-053352  1GD14220102   JPSU-850W-AC-AFO
Fan Tray 0
Fan Tray 1
Fan Tray 2
```

show chassis hardware (ACX500 Router)

```
user@host> show chassis hardware
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Midplane      REV 01    650-055932  VJ0214510035  ACX500-AC
Routing Engine
FEB 0         BUILTIN   BUILTIN     Routing Engine
Processor
FPC 0         BUILTIN   BUILTIN     Forwarding Engine
  MIC 0        BUILTIN   BUILTIN     FPC BUILTIN
    PIC 0      BUILTIN   BUILTIN     2x 1GE(LAN) SFP
      Xcvr 0    REV 01    740-031851  PMF2Y3C       SFP-SX
      Xcvr 1    REV 01    740-031851  PN342QN       SFP-SX
    MIC 1      BUILTIN   BUILTIN     4x 1GE(LAN) SFP, RJ45
      PIC 1    BUILTIN   BUILTIN     4x 1GE(LAN) SFP, RJ45
        Xcvr 0  REV 01    740-011613  PF30K0L       SFP-SX
    MIC 2      BUILTIN   BUILTIN     MS BUILTIN
      PIC 2    BUILTIN   BUILTIN     MS BUILTIN
```

show chassis hardware detail (ACX500 Router)

```
user@host> show chassis hardware detail
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Midplane      REV 01    650-055932  VJ0214510035  ACX500-AC
Routing Engine
da0  3820 MB  USB DISK 2.0  BUILTIN       BUILTIN       Routing Engine
FEB 0         BUILTIN   BUILTIN     Nand Flash 0
Processor
FPC 0         BUILTIN   BUILTIN     Forwarding Engine
  MIC 0        BUILTIN   BUILTIN     FPC BUILTIN
    PIC 0      BUILTIN   BUILTIN     2x 1GE(LAN) SFP
      Xcvr 0    REV 01    740-031851  PMF2Y3C       SFP-SX
      Xcvr 1    REV 01    740-031851  PN342QN       SFP-SX
    MIC 1      BUILTIN   BUILTIN     4x 1GE(LAN) SFP, RJ45
      PIC 1    BUILTIN   BUILTIN     4x 1GE(LAN) SFP, RJ45
```

Xcvr 0	REV 01	740-011613	PF30K0L	SFP-SX
MIC 2		BUILTIN	BUILTIN	MS BUILTIN
PIC 2		BUILTIN	BUILTIN	MS BUILTIN

show chassis hardware extensive (ACX500 Router)

```
user@host> show chassis hardware extensive
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			VJ0214510035	ACX500-AC
Jedec Code:	0x7fb0		EEPROM Version:	0x02
			S/N:	VJ0214510035
Assembly ID:	0x057c		Assembly Version:	00.00
Date:	00-00-0000		Assembly Flags:	0x00
ID:	ACX500-AC			

Board Information Record:

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

I2C Hex Data:

Address 0x00: 7f b0 02 ff 05 7c 00 00 00 00 00 00 00 00 00 00
 Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x20: 56 4a 30 32 31 34 35 31 30 30 33 35 00 00 00 00
 Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 Address 0x70: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Midplane	REV 01	650-055932	VJ0214510035	ACX500-AC
Jedec Code:	0x7fb0		EEPROM Version:	0x02
P/N:	650-055932		S/N:	VJ0214510035
Assembly ID:	0x057c		Assembly Version:	01.00
Date:	12-23-2014		Assembly Flags:	0x00
Version:	REV 01		CLEI Code:	PROTOXCLEI
ID:	ACX500-AC		FRU Model Number:	ACX500-AC

Board Information Record:

Address 0x00: ad 01 00 80 f0 1c 2d 1b 60 80 ff ff ff ff ff ff

I2C Hex Data:

Address 0x00: 7f b0 02 fe 05 7c 01 00 52 45 56 20 30 31 00 00
 Address 0x10: 00 00 00 00 36 35 30 2d 30 35 35 39 33 32 00 00
 Address 0x20: 56 4a 30 32 31 34 35 31 30 30 33 35 00 17 0c 07
 Address 0x30: de ff ff ff ad 01 00 80 f0 1c 2d 1b 60 80 ff ff
 Address 0x40: ff ff ff ff 01 50 52 4f 54 4f 58 43 4c 45 49 41
 Address 0x50: 43 58 35 30 30 2d 41 43 00 00 00 00 00 00 00 00
 Address 0x60: 00 00 00 00 00 00 30 41 00 ff ff ff ff ff ff ff
 Address 0x70: ff ff ff 93 56 4a 30 32 31 34 35 31 30 30 33 35

Routing Engine	BUILTIN	BUILTIN	Routing Engine
da0 3820 MB USB DISK 2.0			Nand Flash 0
FEB 0	BUILTIN	BUILTIN	Forwarding Engine

Processor

FPC 0	BUILTIN	BUILTIN	FPC BUILTIN	
MIC 0	BUILTIN	BUILTIN	2x 1GE(LAN) SFP	
Jedec Code:	0x0000		EEPROM Version:	0x00
P/N:	BUILTIN		S/N:	BUILTIN
Assembly ID:	0x0a40		Assembly Version:	00.00
Date:	00-00-0000		Assembly Flags:	0x00
ID:	2x 1GE(LAN) SFP			

Board Information Record:

Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

I2C Hex Data:

Address 0x00: 00 00 00 00 0a 40 00 00 00 00 00 00 00 00 00 00

```

Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 49 6e 76 61
Address 0x20: 42 55 49 4c 54 49 4e 00 49 6e 76 61 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 de ad be ef 64 20 22 a8 60 af 21 38
  PIC 0          BUILTIN      BUILTIN      2x 1GE(LAN) SFP
    Xcvr 0      REV 01      740-031851    PMF2Y3C      SFP-SX
    Xcvr 1      REV 01      740-031851    PN342QN      SFP-SX
  MIC 1          BUILTIN      BUILTIN      4x 1GE(LAN) SFP, RJ45
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N: BUILTIN      S/N: BUILTIN
Assembly ID: 0x0aac      Assembly Version: 00.00
Date: 00-00-0000      Assembly Flags: 0x00
ID: 4x 1GE(LAN) SFP, RJ45
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a ac 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 49 6e 76 61
Address 0x20: 42 55 49 4c 54 49 4e 00 49 6e 76 61 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 00 00 00 00 64 20 b5 c0 60 af 21 38
  PIC 1          BUILTIN      BUILTIN      4x 1GE(LAN) SFP, RJ45
    Xcvr 0      REV 01      740-011613    PF30K0L      SFP-SX
  MIC 2          BUILTIN      BUILTIN      MS BUILTIN
Jedec Code: 0x0000      EEPROM Version: 0x00
P/N: BUILTIN      S/N: BUILTIN
Assembly ID: 0x0aaf      Assembly Version: 00.00
Date: 00-00-0000      Assembly Flags: 0x00
ID: MS BUILTIN
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 00 00 00 00 0a af 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 42 55 49 4c 54 49 4e 00 49 6e 76 61
Address 0x20: 42 55 49 4c 54 49 4e 00 49 6e 76 61 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x50: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x60: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x70: 00 00 00 00 de ad be ef 64 22 cd 48 60 af 21 38
  PIC 2          BUILTIN      BUILTIN      MS BUILTIN

```

show chassis hardware clei-models (ACX500 Router)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 01	650-055932	PROTOXCLEI	ACX500-AC
Routing Engine		BUILTIN		
FEB 0		BUILTIN		
FPC 0		BUILTIN		

show chassis hardware models (ACX500 Router)

```
user@host> show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
Midplane	REV 01	650-055932	VJ0214510035	ACX500-AC
Routing Engine		BUILTIN	BUILTIN	
FEB 0		BUILTIN	BUILTIN	
FPC 0		BUILTIN	BUILTIN	

show chassis hardware (MX960 Router with MPC10E-15C-MRATE Line Card)

```
user@router> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN1209223AFA	MX960
Midplane	REV 02	750-047849	ACAW7314	Enhanced MX960 Backplane
FPM Board	REV 03	710-014974	ABBX4362	Front Panel Display
PDM	Rev 03	740-013110	QCS161050P8	Power Distribution Module
PEM 0	Rev 09	740-027760	QCS1638N02M	PS 4.1kW; 200-240V AC
in				
PEM 1	Rev 09	740-027760	QCS1638N048	PS 4.1kW; 200-240V AC
in				
PEM 2	Rev 09	740-027760	QCS1638N03C	PS 4.1kW; 200-240V AC
in				
PEM 3	Rev 09	740-027760	QCS1638N04Z	PS 4.1kW; 200-240V AC
in				
Routing Engine 0	REV 06	740-031117	9009103158	RE-S-1800x2
Routing Engine 1	REV 07	740-031116	9009109318	RE-S-1800x4
CB 0	REV 08	750-070866	CAJZ0417	Enhanced MX SCB 3
CB 1	REV 08	750-070866	CAJZ0431	Enhanced MX SCB 3
CB 2	REV 19	750-070866	CAKT9953	Enhanced MX SCB 3
FPC 0	REV 21	750-038768	CAJM2611	MS-MPC
CPU		BUILTIN	BUILTIN	MS-MPC-PMB
PIC 0		BUILTIN	BUILTIN	MS-MPC-PIC
PIC 1		BUILTIN	BUILTIN	MS-MPC-PIC
PIC 2		BUILTIN	BUILTIN	MS-MPC-PIC
PIC 3		BUILTIN	BUILTIN	MS-MPC-PIC
FPC 1	REV 15	750-056519	CADW0665	MPC7E 3D
MRATE-12xQSFP-XGE-XLGE-CGE				
CPU	REV 07	750-057177	CADZ1082	SMPC PMB
PIC 0		BUILTIN	BUILTIN	MRATE-6xQSFP-XGE-XLGE-CGE
PIC 1		BUILTIN	BUILTIN	MRATE-6xQSFP-XGE-XLGE-CGE
FPC 3	REV 37	750-037355	CAGA8501	MPC4E 3D 2CGE+8XGE
CPU	REV 11	711-035209	CAFT1293	HMPC PMB 2G
PIC 0		BUILTIN	BUILTIN	4x10GE SFPP
PIC 1		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-034554	16E620N00023	UNKNOWN
PIC 2		BUILTIN	BUILTIN	4x10GE SFPP
PIC 3		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-035329	UR512T8	CFP-100G-SR10
FPC 4	REV 56	750-045715	CADM2878	MPC5E 3D Q 24XGE+6XLGE
CPU	REV 11	711-045719	CADK9816	RMPC PMB
PIC 0		BUILTIN	BUILTIN	12X10GE SFPP OTN
Xcvr 1	REV 01	740-011613	PDE0SD9	SFP-SX
Xcvr 5	REV 02	740-011613	PQH3NZ2	SFP-SX

PIC 1		BUILTIN	BUILTIN	12X10GE SFPP OTN
PIC 2		BUILTIN	BUILTIN	3X40GE QSFPP
PIC 3		BUILTIN	BUILTIN	3X40GE QSFPP
WAN MEZZ	REV 13	750-049136	CADN2809	MPC5E 24XGE OTN Mezz
FPC 7	REV 13	750-070395	CAKR7041	MPC10E 3D MRATE-15xQSFPP
CPU	REV 09	750-072571	CAKJ8683	FMPC PMB
PIC 0		BUILTIN	BUILTIN	MRATE-5xQSFPP
Xcvr 0	REV 01	740-058732	1AMQA3110KQ	QSFP-100GBASE-LR4
PIC 1		BUILTIN	BUILTIN	MRATE-5xQSFPP
PIC 2		BUILTIN	BUILTIN	MRATE-5xQSFPP
Xcvr 4	REV 01	740-058732	1AMQA312001	QSFP-100GBASE-LR4
FPC 8	REV 18	750-033205	ZE0107	MPCE Type 3 3D
CPU	REV 06	711-035209	ZG5430	HMPC PMB 2G
MIC 0	REV 10	750-033199	YX4509	1X100GE CFP
PIC 0		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-047682	J15H28989	CFP-100G-LR4
MIC 1	REV 10	750-033199	YX4501	1X100GE CFP
PIC 2		BUILTIN	BUILTIN	1X100GE CFP
Xcvr 0	REV 01	740-047682	J15K69366	CFP-100G-LR4
FPC 10	REV 08	750-063180	CAHT2319	MPC3E NG HQoS
CPU	REV 13	711-045719	CAHT9650	RMPC PMB
MIC 0	REV 20	750-028380	YR6025	3D 2x 10GE XFP
PIC 0		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0		NON-JNPR	CA49BK02A	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE XFP
Xcvr 0	REV 02	740-014289	C836XU0AJ	XFP-10G-SR
Fan Tray 0	REV 08	740-031521	ACAF1864	Enhanced Fan Tray
Fan Tray 1	REV 08	740-031521	ACAF1992	Enhanced Fan Tray

show chassis led satellite

Syntax	<code>show chassis led satellite [slot-id <i>slot-id</i> device-alias <i>alias-name</i>]</code>
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.
Description	Display the status and colors of the chassis LEDs of the satellite devices in a Junos Fusion. A major alarm (red) indicates a critical error condition that requires immediate action. A minor alarm (yellow) indicates a noncritical condition that requires monitoring or maintenance. A minor alarm that is left unchecked might cause interruption in service or performance degradation.
Options	<p>none—Display the status of the chassis status LEDs of every satellite device in the Junos Fusion.</p> <p>slot-id <i>slot-id</i>—(Optional) Display the status of the chassis status LEDs of the satellite device using the specified FPC slot identifier in the Junos Fusion. The <i>slot-id</i> is the FPC slot ID number.</p> <p>device-alias <i>alias-name</i>—(Optional) Display the status of the chassis status LEDs of the satellite device using the specified alias in the Junos Fusion.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none">• Configuring Satellite Device Alarm Handling Using an Environment Monitoring Satellite Policy in a Junos Fusion on page 84• Understanding Junos Fusion Provider Edge Components• Understanding Junos Fusion Enterprise Components on page 5
List of Sample Output	show chassis led satellite on page 696
Output Fields	Table 24 on page 695 lists the output fields for the show chassis led satellite command. Output fields are listed in the approximate order in which they appear.

Table 24: show chassis led Output Fields

Field Name	Field Description
Beacon LED	<p>(Applies when QFX5100, QFX5110, and QFX5200 switches are in an satellite device role only) Indicates if the beacon feature is on or off. The beacon feature is always off in a Junos Fusion.</p> <p>The Beacon LED output maps to the ID—Identification LED state.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> • <i>Chassis Status LEDs on a QFX5100 Device</i> • <i>QFX5110 Chassis Status LEDs</i> • <i>QFX5200 Chassis Status LEDs</i>
System LED	<p>Indicates the state of the System (SYS) LED on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> • <i>Chassis Status LEDs on EX4300 Switches</i> • <i>Chassis Status LEDs on a QFX5100 Device</i> • <i>QFX5110 Chassis Status LEDs</i> • <i>QFX5200 Chassis Status LEDs</i>
Master LED	<p>Indicates the state of the Master (MST) LED on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> • <i>Chassis Status LEDs on EX4300 Switches</i> • <i>Chassis Status LEDs on a QFX5100 Device</i> • <i>QFX5110 Chassis Status LEDs</i> • <i>QFX5200 Chassis Status LEDs</i>
Alarm LED	<p>Indicates the state of the Alarm (ALM) LED on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> • <i>Chassis Status LEDs on EX4300 Switches</i> • <i>Chassis Status LEDs on a QFX5100 Device</i> • <i>QFX5110 Chassis Status LEDs</i> • <i>QFX5200 Chassis Status LEDs</i>
Mgmt Port0 LED	<p>(Applies when QFX5100, QFX5110, and QFX5200 switches are in an satellite device role only) Indicates the state of the management port 0 (em0) LED status on the satellite device.</p> <p>This port is always off in a Junos Fusion.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> • <i>Management Port LEDs on a QFX5100 Device</i> • <i>QFX5110 Management Port LEDs</i> • <i>QFX5200 Management Port LEDs</i>

Table 24: show chassis led Output Fields (continued)

Field Name	Field Description
Mgmt Port1 LED	<p>(Applies when QFX5100, QFX5110, and QFX5200 switches are in an satellite device role only) Indicates the state of the management port 1(em0) LED status on the satellite device.</p> <p>This port is always off in a Junos Fusion.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> • <i>Management Port LEDs on a QFX5100 Device</i> • <i>QFX5110 Management Port LEDs</i> • <i>QFX5200 Management Port LEDs</i>
Interface	<p>The interface name on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> • <i>Management Port LEDs on a QFX5100 Device</i> • <i>QFX5110 Management Port LEDs</i> • <i>QFX5200 Management Port LEDs</i>
Status LED	<p>The state of the Status LED for the particular interface on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> • <i>Network Port, Built-In QSFP+ Port, Uplink Port, and Uplink Module Port LEDs on EX4300 Switches</i> • <i>Access Port and Uplink Port LEDs on a QFX5100 Device</i> • <i>QFX5110 Network Port LEDs</i> • <i>QFX5200 Access Port and Uplink Port LEDs</i>
Link/Activity LED	<p>The state of the Link/Activity LED for the particular interface on the satellite device.</p> <p>For more information, see:</p> <ul style="list-style-type: none"> • <i>Network Port, Built-In QSFP+ Port, Uplink Port, and Uplink Module Port LEDs on EX4300 Switches</i> • <i>Access Port and Uplink Port LEDs on a QFX5100 Device</i> • <i>QFX5110 Network Port LEDs</i> • <i>QFX5200 Access Port and Uplink Port LEDs</i>

Sample Output

show chassis led satellite

```
user@aggregation-device> show chassis led satellite
```

```

LED status for: FPC 101
-----
LEDs status:
  Beacon LED: OFF
  System LED: GREEN
```

```

Master LED: OFF
Alarm LED : YELLOW
Mgmt Port0 LED: OFF
Mgmt Port1 LED: OFF

```

Interface	STATUS LED	LINK/ACTIVITY LED
xe-101/0/0	green	
xe-101/0/1	green	
xe-101/0/10	off	
xe-101/0/48:0	green	
xe-101/0/48:1	green	
xe-101/0/48:2	green	
xe-101/0/48:3	green	

LED status for: FPC 102

LEDs status:

```

Beacon LED: OFF
System LED: GREEN
Master LED: OFF
Alarm LED : YELLOW
Mgmt Port0 LED: OFF
Mgmt Port1 LED: OFF

```

Interface	STATUS LED	LINK/ACTIVITY LED
xe-102/0/0	green	
xe-102/0/1	green	
xe-102/0/10	off	
xe-102/0/48:0	green	
xe-102/0/48:1	green	
xe-102/0/48:2	green	
xe-102/0/48:3	green	

show chassis routing-engine

- List of Syntax**
- Syntax on page 698
 - Syntax (ACX Series Universal Metro Routers) on page 698
 - Syntax (EX Series Switches) on page 698
 - Syntax (QFX Series) on page 698
 - Syntax (MX Series Routers) on page 698
 - Syntax (MX2010 Universal Routing Platforms) on page 698
 - Syntax (MX2020 Universal Routing Platforms) on page 699
 - Syntax (MX104 Universal Routing Platforms) on page 699
 - Syntax (MX204 and MX10003 Universal Routing Platforms) on page 699
 - Syntax (PTX Series Packet Transport Routers) on page 699
 - Syntax (T Series Routers) on page 699
 - Syntax (TX Matrix Routers) on page 699
 - Syntax (TX Matrix Plus Routers) on page 699

Syntax show chassis routing-engine
<bios | *slot*>

Syntax (ACX Series Universal Metro Routers) show chassis routing-engine

Syntax (EX Series Switches) show chassis routing-engine
<*slot*>
<satellite [*slot-id slot-id* | device-alias *alias-name*]>

Syntax (QFX Series) show chassis routing-engine
<interconnect-device *name*>
<node-device *name*>
<*slot*>
<*bios*>
<*errors*>

Syntax (MX Series Routers) show chassis routing-engine
<all-members>
<bios | *slot*>
<local>
<member *member-id*>
<satellite [*slot-id slot-id* | device-alias *alias-name*]>

Syntax (MX2010 Universal Routing Platforms) show chassis routing-engine
<bios | *slot*>

Syntax (MX2020 Universal Routing Platforms)	show chassis routing-engine <bios <i>slot</i> >
Syntax (MX104 Universal Routing Platforms)	show chassis routing-engine
Syntax (MX204 and MX10003 Universal Routing Platforms)	show chassis routing-engine < <i>slot</i> > <bios> <errors>
Syntax (PTX Series Packet Transport Routers)	show chassis routing-engine
Syntax (T Series Routers)	show chassis routing-engine <bios <i>slot</i> >
Syntax (TX Matrix Routers)	show chassis routing-engine <bios <i>slot</i> > <lcc <i>number</i> scc>
Syntax (TX Matrix Plus Routers)	show chassis routing-engine <bios <i>slot</i> > <lcc <i>number</i> sfc <i>number</i> >
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release in 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>5 sec CPU Utilization, 1 min CPU Utilization, 5 min CPU Utilization, and 15 min CPU Utilization output fields introduced in Junos OS Release 11.3R1.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>satellite option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 switches.</p>

Description Display the status of the Routing Engine.

Options **none**—Display information about one or more Routing Engines. On a TX Matrix router, display information about all Routing Engines on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display information about all Routing Engines on the TX Matrix Plus router and its attached routers.

all-members—(MX Series routers only) (Optional) Display Routing Engine information for all members of the Virtual Chassis configuration.

bios—(Optional) Display the (BIOS) firmware version.

errors—(Optional) Display routing engine errors.

interconnect-device *number*—(QFabric systems only) (Optional) Display Routing Engine information for a specified Interconnect device.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display Routing Engine information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display Routing Engine information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display Routing Engine information for the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display Routing Engine information for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-device *number*—(QFabric systems only) (Optional) Display Routing Engine information for a specified Node device.

satellite [*slot-id slot-id* [*device-alias alias-name*]]—(Junos Fusion only) (Optional) Display Routing Engine information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc—(TX Matrix routers only) (Optional) Display Routing Engine information for the TX Matrix router (switch-card chassis).

sfc number—(TX Matrix Plus routers only) (Optional) Display Routing Engine information for the TX Matrix Plus router (or switch-fabric chassis). Replace **number** with 0.

slot—(Systems with multiple Routing Engines) (Optional) Display information for an individual Routing Engine. Replace **slot** with 0 or 1. For QFX3500 switches, there is only one Routing Engine, so you do not need to specify the slot number.

Required Privilege Level

view

Related Documentation

- *request chassis routing-engine master*
- *Configuring Routing Engine Redundancy*
- *Switching the Global Master and Backup Roles in a Virtual Chassis Configuration*

List of Sample Output

[show chassis routing-engine \(M5 Router\) on page 704](#)
[show chassis routing-engine \(M10 Router\) on page 705](#)
[show chassis routing-engine \(M20 Router\) on page 705](#)
[show chassis routing-engine \(M40 Router\) on page 706](#)
[show chassis routing-engine \(M120 Router\) on page 706](#)
[show chassis routing-engine \(M160 Router\) on page 707](#)
[show chassis routing-engine \(MX104 Router\) on page 708](#)
[show chassis routing-engine \(MX240 Router\) on page 709](#)
[show chassis routing-engine \(MX480 Router\) on page 709](#)
[show chassis routing-engine \(MX960 Router\) on page 711](#)
[show chassis routing-engine \(MX2010 Router\) on page 712](#)
[show chassis routing-engine \(MX2020 Router\) on page 713](#)
[show chassis routing-engine \(MX10003 Router\) on page 714](#)
[show chassis routing-engine \(MX204 Router\) on page 715](#)
[show chassis routing-engine \(T320 Router\) on page 715](#)
[show chassis routing-engine \(T640 Router\) on page 716](#)
[show chassis routing-engine \(T1600 Router\) on page 717](#)
[show chassis routing-engine \(T4000 Router\) on page 718](#)
[show chassis routing-engine \(TX Matrix Router\) on page 718](#)
[show chassis routing-engine lcc \(TX Matrix Router\) on page 720](#)
[show chassis routing-engine bios \(TX Matrix Router\) on page 720](#)
[show chassis routing-engine \(TX Matrix Plus Router\) on page 720](#)
[show chassis routing-engine lcc \(TX Matrix Plus Router\) on page 722](#)
[show chassis routing-engine bios \(TX Matrix Plus Router\) on page 723](#)
[show chassis routing-engine \(QFX Series\) on page 723](#)
[show chassis routing-engine \(OCX Series\) on page 723](#)
[show chassis routing-engine interconnect-device \(QFabric Systems\) on page 724](#)
[show chassis routing-engine \(PTX Series Packet Transport Router\) on page 724](#)
[show chassis routing-engine \(EX9200 Switch\) on page 725](#)
[show chassis routing-engine \(EX9251 Switch\) on page 726](#)
[show chassis routing-engine \(ACX2000 Universal Metro Router\) on page 726](#)
[show chassis routing-engine \(ACX1000 Universal Metro Router\) on page 727](#)

[show chassis routing-engine](#) (Displaying the guest reboot reason on PTX5000,MX240, MX480, MX960< MX2010, and MX2020) on page 727

Output Fields Table 25 on page 702 lists the output fields for the **show chassis routing-engine** command. Output fields are listed in the approximate order in which they appear.

Table 25: show chassis routing-engine Output Fields

Field Name	Field Description
Slot	(Systems with single and multiple Routing Engines) Slot number.
Current state	(Systems with multiple Routing Engines) Current state of the Routing Engine: Master , Backup , or Disabled .
Election priority	(Systems with multiple Routing Engines) Election priority for the Routing Engine: Master or Backup .
Temperature	Temperature of the air flowing past the Routing Engine.
CPU Temperature	Temperature of the CPU.
DRAM	Total DRAM available to the Routing Engine's processor. Starting with Junos OS Release 12.3R1, the DRAM field displays both available memory and installed memory.
Memory utilization	Percentage of Routing Engine memory being used. NOTE: For platforms running Junos OS with upgraded FreeBSD, the way memory utilization is calculated has changed. Starting in Junos OS Release 15.1R1, inactive memory is no longer included in the calculation for memory utilization. Inactive memory is now considered as free. That is, the value for used memory decreases and results in more memory to be available for other processes. For platforms that run Junos OS with upgraded FreeBSD, see <i>Release Information for Junos OS with Upgraded FreeBSD</i> .
CPU utilization	Information about the Routing Engine's CPU utilization: <ul style="list-style-type: none"> • User—Percentage of CPU time being used by user processes. • Background—Percentage of CPU time being used by background processes. • Kernel—Percentage of CPU time being used by kernel processes. • Interrupt—Percentage of CPU time being used by interrupts. • Idle—Percentage of CPU time that is idle.
5 sec CPU Utilization	Information about the Routing Engine's CPU utilization in the past 5 seconds: <ul style="list-style-type: none"> • User—Percentage of CPU time being used by user processes. • Background—Percentage of CPU time being used by background processes. • Kernel—Percentage of CPU time being used by kernel processes. • Interrupt—Percentage of CPU time being used by interrupts. • Idle—Percentage of CPU time that is idle.

Table 25: show chassis routing-engine Output Fields (continued)

Field Name	Field Description
1 min CPU Utilization	Information about the Routing Engine's CPU utilization in the past 1 minute: <ul style="list-style-type: none"> • User—Percentage of CPU time being used by user processes. • Background—Percentage of CPU time being used by background processes. • Kernel—Percentage of CPU time being used by kernel processes. • Interrupt—Percentage of CPU time being used by interrupts. • Idle—Percentage of CPU time that is idle.
5 min CPU Utilization	Information about the Routing Engine's CPU utilization in the past 5 minutes: <ul style="list-style-type: none"> • User—Percentage of CPU time being used by user processes. • Background—Percentage of CPU time being used by background processes. • Kernel—Percentage of CPU time being used by kernel processes. • Interrupt—Percentage of CPU time being used by interrupts. • Idle—Percentage of CPU time that is idle.
15 min CPU Utilization	Information about the Routing Engine's CPU utilization in the past 15 minutes: <ul style="list-style-type: none"> • User—Percentage of CPU time being used by user processes. • Background—Percentage of CPU time being used by background processes. • Kernel—Percentage of CPU time being used by kernel processes. • Interrupt—Percentage of CPU time being used by interrupts. • Idle—Percentage of CPU time that is idle.
Model	Routing Engine model number.
Serial ID	(Systems with multiple Routing Engines) Identification number of the Routing Engine in this slot.
Start time	Time at which the Routing Engine started running.
Uptime	How long the Routing Engine has been running.
Routing Engine BIOS Version	BIOS version being run by the Routing Engine.

Table 25: show chassis routing-engine Output Fields (continued)

Field Name	Field Description
Last reboot reason	<p>Reason for last reboot, including:</p> <ul style="list-style-type: none"> power cycle/failure—Halt of the Routing Engine using the halt command, powering down using the power button on the chassis or any other method (such as removal of the control board or Routing Engine), and then powering back the Routing Engine. A halt of the operating system also occurs if you enter the request system halt command. You can enter this command to halt the system operations on the chassis or specific Routing Engines. To restart the software, press any key on the keyboard. watchdog—Reboot due to a hardware watchdog. A watchdog is a hardware monitoring process that examines the health and performance of the router to enable the device to recover from failures. A watchdog checks for problems at certain intervals, and reboots the routing engine if a problem is encountered. reset-button reset—(Not available on the EX Series switch) Reboot due to pressing of the reset button on the Routing Engine. power-button hard power off—Reboot due to pressing of the power button on the chassis. A powering down of the software also occurs if you enter the request system power-off command. You can enter this command to power down the chassis or specific Routing Engines; you can then restart the software. misc hardware reason—Reboot due to miscellaneous hardware reasons. thermal shutdown—Reboot due to the router or switch reaching a critical temperature at which point it is unsafe to continue operations. hard disk failure—Reboot due to a hard disk or solid-state drive (SSD) failure. reset from debugger—Reboot due to reset from the debugger. chassis control reset—Restart the chassis process that manages PICs, FPCs, and other hardware components. The chassis control module that runs the Routing Engine performs management and monitoring functions, and it provides a single access point for operational and maintenance functions. A reset of the chassis management process occurs when you enter the restart chassis-control command. bios auto recovery reset—Reboot due to a BIOS auto-recovery reset. could not be determined—Reboot due to an undetermined reason. Router rebooted after a normal shutdown—Reboot due to a normal shutdown. This reason is displayed if the Routing Engine is powered down by pushing and holding the online/offline button on the Routing Engine faceplate for 30 seconds, and then powered back. A reboot of the software also occurs if you enter the request system reboot command. You can enter this command to reboot the chassis or specific Routing Engines. Hypervisor reboot—When both Linux host and Junos OS is rebooted using the request vmhost reboot command. VJUNOS Reboot—When Junos OS is rebooted using the request system reboot command.
Load averages	Routing Engine load averages for the last 1, 5, and 15 minutes.

Sample Output

show chassis routing-engine (M5 Router)

```

user@host> show chassis routing-engine

Routing Engine status:
  Temperature           25 degrees C / 77 degrees F
  DRAM                   768 MB
  Memory utilization     21 percent

```

```

CPU utilization:
  User          0 percent
  Background    0 percent
  Kernel        0 percent
  Interrupt     0 percent
  Idle          100 percent
Model          RE-2.0
Serial ID      31000007349bf701
Start time     2003-12-04 09:42:17 PST
Uptime         26 days, 1 hour, 12 minutes, 27 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute  5 minute 15 minute
                  0.00    0.01    0.00

```

show chassis routing-engine (M10 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Temperature      25 degrees C / 77 degrees F
  DRAM             768 MB
  Memory utilization 21 percent
  CPU utilization:
    User          0 percent
    Background    0 percent
    Kernel        0 percent
    Interrupt     0 percent
    Idle          100 percent
  Model           RE-2.0
  Serial ID       31000007349bf701
  Start time      2003-12-04 09:42:17 PST
  Uptime          26 days, 1 hour, 12 minutes, 27 seconds
  Last reboot reason Router rebooted after a normal shutdown
  Load averages: 1 minute  5 minute 15 minute
                    0.00    0.01    0.00

```

show chassis routing-engine (M20 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Slot 0:
    Current state      Master
    Election priority  Master (default)
    Temperature        29 degrees C / 84 degrees F
    DRAM               768 MB
    Memory utilization  20 percent
    CPU utilization:
      User             1 percent
      Background       0 percent
      Kernel           2 percent
      Interrupt        0 percent
      Idle             97 percent
    Model             RE-2.0
    Serial ID         58000007348d9a01
    Start time        2003-12-30 07:05:47 PST
    Uptime            3 hours, 41 minutes, 14 seconds
    Last reboot reason Router rebooted after a normal shutdown
    Load averages:   1 minute  5 minute 15 minute

```

```

                                0.00      0.02      0.00
Routing Engine status:
  Slot 1:
    Current state                Backup
    Election priority            Backup (default)
    Temperature                  29 degrees C / 84 degrees F
    DRAM                        768 MB
    Memory utilization           0 percent
    CPU utilization:
      User                       0 percent
      Background                 0 percent
      Kernel                     1 percent
      Interrupt                  0 percent
      Idle                       99 percent
    Model                        RE-2.0
    Serial ID                    d800000734745701
    Start time                   2003-06-17 16:37:33 PDT
    Uptime                       195 days, 18 hours, 47 minutes, 9 seconds
    Last reboot reason           Router rebooted after a normal shutdown

```

show chassis routing-engine (M40 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
  Temperature                    25 degrees C / 77 degrees F
  DRAM                          768 MB
  Memory utilization              21 percent
  CPU utilization:
    User                         0 percent
    Background                   0 percent
    Kernel                       0 percent
    Interrupt                    0 percent
    Idle                         100 percent
  Model                          RE-2.0
  Serial ID                      31000007349bf701
  Start time                     2003-12-04 09:42:17 PST
  Uptime                         26 days, 1 hour, 12 minutes, 27 seconds
  Last reboot reason             Router rebooted after a normal shutdown
  Load averages:                1 minute   5 minute  15 minute
                                0.00      0.01      0.00

```

show chassis routing-engine (M120 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
  Slot 0:
    Current state                Master
    Election priority            Master (default)
    Temperature                  46 degrees C / 114 degrees F
    CPU temperature              44 degrees C / 111 degrees F
    DRAM                        2048 MB
    Memory utilization           18 percent
    CPU utilization:
      User                       0 percent
      Background                 0 percent
      Kernel                     5 percent
      Interrupt                  0 percent

```

```

Idle 95 percent
Model RE-A-1000
Serial ID 1000621154
Start time 2006-10-31 17:10:05 PST
Uptime 14 minutes, 31 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute 5 minute 15 minute
                0.02      0.07      0.07

Routing Engine status:
Slot 1:
Current state Backup
Election priority Backup (default)
Temperature 45 degrees C / 113 degrees F
CPU temperature 42 degrees C / 107 degrees F
DRAM 2048 MB
Memory utilization 15 percent
CPU utilization:
  User 0 percent
  Background 0 percent
  Kernel 0 percent
  Interrupt 0 percent
  Idle 100 percent
Model RE-A-1000
Serial ID 1000621151
Start time 2006-10-31 17:10:04 PST
Uptime 14 minutes, 30 seconds
Last reboot reason Router rebooted after a normal shutdown

```

show chassis routing-engine (M160 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
Current state Master
Election priority Master (default)
Temperature 43 degrees C / 109 degrees F
DRAM 2048 MB
Memory utilization 11 percent
CPU utilization:
  User 1 percent
  Background 0 percent
  Kernel 2 percent
  Interrupt 0 percent
  Idle 97 percent
Model RE-3.0
Serial ID 210865700403
Start time 2003-12-23 12:25:55 PST
Uptime 6 days, 22 hours, 33 minutes, 24 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute 5 minute 15 minute
                0.24      0.13      0.04

Routing Engine status:
Slot 1:
Current state Backup
Election priority Backup (default)
Temperature 40 degrees C / 104 degrees F
DRAM 2048 MB
Memory utilization 9 percent
CPU utilization:

```

User	0 percent
Background	0 percent
Kernel	0 percent
Interrupt	0 percent
Idle	100 percent
Model	RE-3.0
Serial ID	210865700332
Start time	2003-12-23 12:25:55 PST
Uptime	6 days, 22 hours, 33 minutes, 21 seconds
Last reboot reason	Router rebooted after a normal shutdown

show chassis routing-engine (MX104 Router)

```
user@host> show chassis routing-engine
```

Routing Engine status:

Slot 0:

Current state	Master
Election priority	Master (default)
Temperature	32 degrees C / 89 degrees F
CPU temperature	42 degrees C / 107 degrees F
DRAM	3840 MB (3840 MB installed)
Memory utilization	18 percent
CPU utilization:	
User	0 percent
Background	0 percent
Kernel	3 percent
Interrupt	2 percent
Idle	94 percent
Model	RE-MX-104
Serial ID	CAAR5925
Start time	2013-06-05 13:17:08 IST
Uptime	1 hour, 15 minutes, 8 seconds
Last reboot reason	0x200:normal shutdown
Load averages:	1 minute 5 minute 15 minute
	0.87 0.90 0.41

Routing Engine status:

Slot 1:

Current state	Backup
Election priority	Backup (default)
Temperature	32 degrees C / 89 degrees F
CPU temperature	38 degrees C / 100 degrees F
DRAM	3840 MB (3840 MB installed)
Memory utilization	13 percent
CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	2 percent
Idle	97 percent
Model	RE-MX-104
Serial ID	CAAM6369
Start time	2013-06-05 13:07:37 IST
Uptime	1 hour, 24 minutes, 34 seconds
Last reboot reason	0x200:normal shutdown
Load averages:	1 minute 5 minute 15 minute
	0.19 0.15 0.06

show chassis routing-engine (MX240 Router)

```
user@host> show chassis routing-engine
```

Routing Engine status:**Slot 0:**

Current state	Master
Election priority	Master (default)
Temperature	36 degrees C / 96 degrees F
CPU temperature	35 degrees C / 95 degrees F
DRAM	3314 MB (8192 MB installed)
Memory utilization	37 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
1 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
5 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
15 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
Model	RE-S-1800x4
Serial ID	9009074155
Start time	2014-10-13 00:35:41 PDT
Uptime	98 days, 2 hours, 6 minutes, 35 seconds
Last reboot reason	Router rebooted after a normal shutdown.
Load averages:	1 minute 5 minute 15 minute
	0.12 0.12 0.13

Routing Engine status:**Slot 1:**

Current state	Present
---------------	---------

show chassis routing-engine (MX480 Router)

```
user@host> show chassis routing-engine
```

Routing Engine status:**Slot 0:**

Current state	Backup
Election priority	Master (default)
Temperature	30 degrees C / 86 degrees F
CPU temperature	32 degrees C / 89 degrees F
DRAM	3314 MB (8192 MB installed)
Memory utilization	51 percent
5 sec CPU utilization:	

User	0 percent
Background	0 percent
Kernel	0 percent
Interrupt	0 percent
Idle	100 percent
1 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	0 percent
Interrupt	0 percent
Idle	0 percent
5 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	0 percent
Interrupt	0 percent
Idle	0 percent
15 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	0 percent
Interrupt	0 percent
Idle	0 percent
Model	RE-S-1800x4
Serial ID	9009079817
Start time	2015-01-19 01:45:58 PST
Uptime	7 minutes, 23 seconds
Last reboot reason	Router rebooted after a normal shutdown.
Load averages:	1 minute 5 minute 15 minute
	0.16 0.16 0.09
Routing Engine status:	
Slot 1:	
Current state	Master
Election priority	Backup (default)
Temperature	31 degrees C / 87 degrees F
CPU temperature	32 degrees C / 89 degrees F
DRAM	8144 MB (8192 MB installed)
Memory utilization	23 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
1 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	98 percent
5 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	98 percent
15 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent

```

Interrupt          0 percent
Idle               98 percent
Model              RE-S-1800x4
Serial ID          9009079838
Start time         2015-01-09 10:52:20 PST
Uptime             9 days, 15 hours, 1 minute, 4 seconds
Last reboot reason Router rebooted after a normal shutdown.
Load averages:     1 minute   5 minute  15 minute
                   0.10      0.16     0.16

```

show chassis routing-engine (MX960 Router)

```
user@host> show chassis routing-engine
```

Routing Engine status:

Slot 0:

```

Current state          Master
Election priority      Master (default)
Temperature            37 degrees C / 98 degrees F
CPU temperature        34 degrees C / 93 degrees F
DRAM                  3313 MB (16384 MB installed)
Memory utilization     31 percent
5 sec CPU utilization:
  User                 0 percent
  Background           0 percent
  Kernel               3 percent
  Interrupt             1 percent
  Idle                 96 percent
1 min CPU utilization:
  User                 0 percent
  Background           0 percent
  Kernel               4 percent
  Interrupt             1 percent
  Idle                 96 percent
5 min CPU utilization:
  User                 0 percent
  Background           0 percent
  Kernel               4 percent
  Interrupt             1 percent
  Idle                 95 percent
15 min CPU utilization:
  User                 0 percent
  Background           0 percent
  Kernel               4 percent
  Interrupt             1 percent
  Idle                 95 percent
Model                  RE-S-1800x4
Serial ID              9013043785
Start time             2015-01-12 23:37:53 PST
Uptime                 6 days, 2 hours, 17 minutes, 3 seconds
Last reboot reason     Router rebooted after a normal shutdown.
Load averages:         1 minute   5 minute  15 minute
                       0.00      0.02     0.00

```

Routing Engine status:

Slot 1:

```

Current state          Backup
Election priority      Backup (default)
Temperature            37 degrees C / 98 degrees F
CPU temperature        34 degrees C / 93 degrees F
DRAM                  3313 MB (16384 MB installed)

```

```

Memory utilization          26 percent
5 sec CPU utilization:
  User                      0 percent
  Background                0 percent
  Kernel                    0 percent
  Interrupt                  0 percent
  Idle                      99 percent
1 min CPU utilization:
  User                      0 percent
  Background                0 percent
  Kernel                    0 percent
  Interrupt                  0 percent
  Idle                      0 percent
5 min CPU utilization:
  User                      0 percent
  Background                0 percent
  Kernel                    0 percent
  Interrupt                  0 percent
  Idle                      0 percent
15 min CPU utilization:
  User                      0 percent
  Background                0 percent
  Kernel                    0 percent
  Interrupt                  0 percent
  Idle                      0 percent
Model                      RE-S-1800x4
Serial ID                   9013037303
Start time                  2015-01-12 23:25:29 PST
Uptime                      6 days, 2 hours, 29 minutes, 21 seconds
Last reboot reason          Router rebooted after a normal shutdown.
Load averages:              1 minute   5 minute   15 minute
                             0.00       0.00       0.00

```

show chassis routing-engine (MX2010 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state              Master
  Election priority          Master (default)
  Temperature                 41 degrees C / 105 degrees F
  CPU temperature             38 degrees C / 100 degrees F
  DRAM                       3313 MB (16384 MB installed)
  Memory utilization          37 percent
  5 sec CPU utilization:
    User                      0 percent
    Background                0 percent
    Kernel                    2 percent
    Interrupt                  2 percent
    Idle                      96 percent
  1 min CPU utilization:
    User                      0 percent
    Background                0 percent
    Kernel                    2 percent
    Interrupt                  2 percent
    Idle                      97 percent
  5 min CPU utilization:
    User                      0 percent
    Background                0 percent

```

```

Kernel                2 percent
Interrupt              2 percent
Idle                  97 percent
15 min CPU utilization:
User                   0 percent
Background             0 percent
Kernel                 2 percent
Interrupt              2 percent
Idle                  97 percent
Model                  RE-S-1800x4
Serial ID              9009146890
Start time             2015-01-18 21:35:12 PST
Uptime                 4 hours, 21 minutes, 34 seconds
Last reboot reason     Router rebooted after a normal shutdown.
Load averages:         1 minute  5 minute 15 minute
                       0.11      0.14    0.14

```

show chassis routing-engine (MX2020 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             2 degrees C / 35 degrees F
  CPU temperature         32 degrees C / 89 degrees F
  DRAM                    32735 MB (32768 MB installed)
  Memory utilization      10 percent
  5 sec CPU utilization:
    User                   0 percent
    Background             0 percent
    Kernel                 1 percent
    Interrupt              1 percent
    Idle                  98 percent
  1 min CPU utilization:
    User                   0 percent
    Background             0 percent
    Kernel                 1 percent
    Interrupt              1 percent
    Idle                  99 percent
  5 min CPU utilization:
    User                   0 percent
    Background             0 percent
    Kernel                 1 percent
    Interrupt              1 percent
    Idle                  99 percent
  15 min CPU utilization:
    User                   0 percent
    Background             0 percent
    Kernel                 1 percent
    Interrupt              1 percent
    Idle                  99 percent
  Model                   RE-S-2X00x8
  Serial ID               CADN0309
  Start time              2015-01-08 16:31:15 PST
  Uptime                  4 days, 22 hours, 59 minutes, 3 seconds
  Last reboot reason      Router rebooted after a normal shutdown.
  Load averages:         1 minute  5 minute 15 minute
                       0.39      0.41    0.34

```

show chassis routing-engine (MX10003 Router)

```
user@host> show chassis routing-engine
```

Routing Engine status:

Slot 0:

Current state	Master
Election priority	Master (default)
Temperature	43 degrees C / 109 degrees F
CPU temperature	40 degrees C / 104 degrees F
DRAM	49112 MB (49152 MB installed)
Memory utilization	4 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	2 percent
Interrupt	0 percent
Idle	98 percent
1 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	98 percent
5 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	98 percent
15 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	96 percent
Model	RE-S-2X00x6
Start time	2017-08-08 23:13:16 PDT
Uptime	53 minutes, 38 seconds
Last reboot reason	0x1:power cycle/failure
Load averages:	1 minute 5 minute 15 minute
	0.23 0.28 0.25

Routing Engine status:

Slot 1:

Current state	Backup
Election priority	Backup (default)
Temperature	38 degrees C / 100 degrees F
CPU temperature	39 degrees C / 102 degrees F
DRAM	49112 MB (49152 MB installed)
Memory utilization	4 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
Model	RE-S-2X00x6
Start time	2017-08-08 23:13:18 PDT
Uptime	53 minutes, 25 seconds

Last reboot reason	0x1:power cycle/failure		
Load averages:	1 minute	5 minute	15 minute
	0.21	0.19	0.17

show chassis routing-engine (MX204 Router)

```
user@host> show chassis routing-engine
```

```
Routing Engine status:
  Temperature          52 degrees C / 125 degrees F
  CPU temperature      52 degrees C / 125 degrees F
  DRAM                 16341 MB (16384 MB installed)
  Memory utilization   11 percent
  5 sec CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  1 min CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  5 min CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  15 min CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  Model                RE-S-2X00x6
  Start time           2017-11-04 00:30:31 PDT
  Uptime                4 days, 7 hours, 17 minutes, 3 seconds
  Last reboot reason   0x1:power cycle/failure
  Load averages:      1 minute   5 minute   15 minute
                      0.17       0.12       0.13
```

show chassis routing-engine (T320 Router)

```
user@host> show chassis routing-engine
```

```
Slot 0:
  Current state        Master
  Election priority     Master (default)
  Temperature          51 degrees C / 123 degrees F
  CPU temperature      55 degrees C / 131 degrees F
  DRAM                 3584 MB
  Memory utilization   11 percent
  CPU utilization:
    User               0 percent
    Background         0 percent
```

```

Kernel                2 percent
Interrupt             0 percent
Idle                 97 percent
Model                RE-A-2000
Serial ID             9009010618
Start time            2012-10-10 01:24:05 PDT
Uptime                5 days, 10 hours, 49 minutes, 23 seconds
Last reboot reason    0x1:power cycle/failure
Load averages:        1 minute   5 minute   15 minute
                       0.00       0.05      0.04

Routing Engine status:
Slot 1:
  Current state        Backup
  Election priority    Backup (default)
  Temperature           45 degrees C / 113 degrees F
  CPU temperature       48 degrees C / 118 degrees F
  DRAM                  3584 MB
  Memory utilization    9 percent
  CPU utilization:
    User                0 percent
    Background          0 percent
    Kernel              0 percent
    Interrupt           0 percent
    Idle                100 percent
  Model                RE-A-2000
  Serial ID             9009003642
  Start time            2012-10-10 01:24:04 PDT
  Uptime                5 days, 10 hours, 49 minutes, 28 seconds
  Last reboot reason    0x1:power cycle/failure

```

show chassis routing-engine (T640 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state        Master
  Election priority    Master (default)
  Temperature           50 degrees C / 122 degrees F
  CPU temperature       58 degrees C / 136 degrees F
  DRAM                  3584 MB
  Memory utilization    14 percent
  CPU utilization:
    User                1 percent
    Background          0 percent
    Kernel              4 percent
    Interrupt           1 percent
    Idle                95 percent
  Model                RE-A-2000
  Serial ID             1000686556
  Start time            2012-10-10 01:24:02 PDT
  Uptime                5 days, 10 hours, 50 minutes, 27 seconds
  Last reboot reason    0x1:power cycle/failure
  Load averages:        1 minute   5 minute   15 minute
                       1.24       0.33      0.12

Routing Engine status:
Slot 1:
  Current state        Backup
  Election priority    Backup (default)
  Temperature           44 degrees C / 111 degrees F

```



```

CPU temperature      49 degrees C / 120 degrees F
DRAM                3584 MB
Memory utilization   12 percent
CPU utilization:
  User               0 percent
  Background         0 percent
  Kernel             0 percent
  Interrupt          1 percent
  Idle               99 percent
Model               RE-A-2000
Serial ID            1000702739
Start time           2012-10-10 01:24:02 PDT
Uptime               5 days, 10 hours, 50 minutes, 26 seconds
Last reboot reason   0x1:power cycle/failure

```

show chassis routing-engine (T1600 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state      Master
  Election priority  Master (default)
  Temperature        48 degrees C / 118 degrees F
  CPU temperature    58 degrees C / 136 degrees F
  DRAM               3584 MB
  Memory utilization 13 percent
  CPU utilization:
    User             0 percent
    Background       0 percent
    Kernel           3 percent
    Interrupt        1 percent
    Idle             96 percent
  Model              RE-A-2000
  Serial ID          1000704521
  Start time         2012-10-10 01:23:41 PDT
  Uptime             5 days, 10 hours, 46 minutes, 56 seconds
  Last reboot reason 0x1:power cycle/failure
  Load averages:    1 minute   5 minute   15 minute
                   0.05       0.03       0.01

Routing Engine status:
Slot 1:
  Current state      Backup
  Election priority  Backup (default)
  Temperature        44 degrees C / 111 degrees F
  CPU temperature    48 degrees C / 118 degrees F
  DRAM               3584 MB
  Memory utilization 12 percent
  CPU utilization:
    User             0 percent
    Background       0 percent
    Kernel           0 percent
    Interrupt        0 percent
    Idle             100 percent
  Model              RE-A-2000
  Serial ID          9009006579
  Start time         2012-10-10 01:23:42 PDT
  Uptime             5 days, 10 hours, 46 minutes, 54 seconds
  Last reboot reason 0x1:power cycle/failure

```

show chassis routing-engine (T4000 Router)

```
user@host> show chassis routing-engine
```

```
Routing Engine status:
```

```
Slot 0:
```

```

Current state           Master
Election priority       Master (default)
Temperature             33 degrees C / 91 degrees F
CPU temperature         50 degrees C / 122 degrees F
DRAM                   8960 MB
Memory utilization      18 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                4 percent
  Interrupt              1 percent
  Idle                  95 percent
Model                  RE-DUO-1800
Serial ID               P737F-002248
Start time              2012-02-09 22:49:53 PST
Uptime                  2 hours, 21 minutes, 35 seconds
Last reboot reason      Router rebooted after a normal shutdown.
Load averages:          1 minute   5 minute  15 minute
                        0.00        0.04    0.00
```

```
Routing Engine status:
```

```
Slot 1:
```

```

Current state           Backup
Election priority       Backup (default)
Temperature             32 degrees C / 89 degrees F
CPU temperature         46 degrees C / 114 degrees F
DRAM                   8960 MB
Memory utilization      24 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                0 percent
  Interrupt              0 percent
  Idle                  99 percent
Model                  RE-DUO-1800
Serial ID               P737F-002653
Start time              2012-02-08 20:12:51 PST
Uptime                  1 day, 4 hours, 58 minutes, 28 seconds
Last reboot reason      Router rebooted after a normal shutdown.
```

show chassis routing-engine (TX Matrix Router)

```
user@host> show chassis routing-engine
```

```
scc-re0:
```

```
-----
Routing Engine status:
```

```
Slot 0:
```

```

Current state           Master
Election priority       Master (default)
Temperature             34 degrees C / 93 degrees F
CPU temperature         33 degrees C / 91 degrees F
DRAM                   2048 MB
Memory utilization      12 percent
CPU utilization:
```

```

User          0 percent
Background    0 percent
Kernel        2 percent
Interrupt     0 percent
Idle          98 percent
Model         RE-4.0
Serial ID     P11123900153
Start time    2004-08-05 18:42:05 PDT
Uptime        9 days, 22 hours, 49 minutes, 50 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute   5 minute   15 minute
                  0.00      0.08      0.07

```

lcc0-re0:

Routing Engine status:

Slot 0:

```

Current state      Master
Election priority  Master (default)
Temperature        33 degrees C / 91 degrees F
CPU temperature    30 degrees C / 86 degrees F
DRAM              2048 MB
Memory utilization 12 percent
CPU utilization:
  User            0 percent
  Background      0 percent
  Kernel          1 percent
  Interrupt       0 percent
  Idle            98 percent
Model            RE-3.0
Serial ID        210865700363
Start time       2004-08-05 18:42:05 PDT
Uptime           9 days, 22 hours, 48 minutes, 20 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages:   1 minute   5 minute   15 minute
                  0.00      0.02      0.00

```

lcc2-re0:

Routing Engine status:

Slot 0:

```

Current state      Master
Election priority  Master (default)
Temperature        34 degrees C / 93 degrees F
CPU temperature    35 degrees C / 95 degrees F
DRAM              2048 MB
Memory utilization 12 percent
CPU utilization:
  User            0 percent
  Background      0 percent
  Kernel          2 percent
  Interrupt       0 percent
  Idle            98 percent
Model            RE-4.0
Serial ID        P11123900126
Start time       2004-08-05 18:42:05 PDT
Uptime           9 days, 22 hours, 49 minutes, 4 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages:   1 minute   5 minute   15 minute
                  0.01      0.01      0.0

```

show chassis routing-engine lcc (TX Matrix Router)

```

user@host> show chassis routing-engine 0 lcc 0
lcc0-re0:
-----
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature              33 degrees C / 91 degrees F
  CPU temperature          30 degrees C / 86 degrees F
  DRAM                     2048 MB
  Memory utilization       12 percent
  CPU utilization:
    User                   0 percent
    Background             0 percent
    Kernel                 1 percent
    Interrupt              0 percent
    Idle                   98 percent
  Model                   RE-3.0
  Serial ID                210865700363
  Start time               2004-08-05 18:42:05 PDT
  Uptime                   7 days, 22 hours, 49 minutes, 6 seconds
  Last reboot reason       Router rebooted after a normal shutdown
  Load averages:          1 minute  5 minute 15 minute
                           0.00      0.00   0.00

```

show chassis routing-engine bios (TX Matrix Router)

```

user@host> show chassis routing-engine bios
scc-re0:
-----
Routing Engine BIOS Version: V1.0.0
lcc0-re0:
-----
Routing Engine BIOS Version: V1.0.17
lcc2-re0:
-----
Routing Engine BIOS Version: V1.0.0

```

show chassis routing-engine (TX Matrix Plus Router)

```

user@host> show chassis routing-engine
sfc0-re0:
-----
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature              27 degrees C / 80 degrees F
  CPU temperature          42 degrees C / 107 degrees F
  DRAM                     3327 MB
  Memory utilization       12 percent
  CPU utilization:
    User                   0 percent
    Background             0 percent
    Kernel                 2 percent

```

```

        Interrupt          0 percent
        Idle              98 percent
        Model             RE-TXP-SFC
        Serial ID         737A-1024
        Start time        2009-05-11 17:39:49 PDT
        Uptime            3 hours, 45 minutes, 25 seconds
        Last reboot reason Router rebooted after a normal shutdown.
        Load averages:    1 minute   5 minute   15 minute
                           0.00       0.00       0.00

```

Routing Engine status:

Slot 1:

```

        Current state      Backup
        Election priority  Backup (default)
        Temperature        29 degrees C / 84 degrees F
        CPU temperature     43 degrees C / 109 degrees F
        DRAM               3327 MB
        Memory utilization  11 percent
        CPU utilization:
            User            0 percent
            Background      0 percent
            Kernel          0 percent
            Interrupt       0 percent
            Idle            100 percent
        Model             RE-TXP-SFC
        Serial ID         737A-1024
        Start time        2009-05-11 17:08:54 PDT
        Uptime            4 hours, 16 minutes, 52 seconds
        Last reboot reason 0x1:power cycle/failure

```

lcc0-re0:

Routing Engine status:

Slot 0:

```

        Current state      Master
        Election priority  Master (default)
        Temperature        30 degrees C / 86 degrees F
        CPU temperature     43 degrees C / 109 degrees F
        DRAM               3327 MB
        Memory utilization  9 percent
        CPU utilization:
            User            0 percent
            Background      0 percent
            Kernel          2 percent
            Interrupt       0 percent
            Idle            98 percent
        Model             RE-TXP-LCC
        Serial ID         737F-1024
        Start time        2009-05-11 17:40:32 PDT
        Uptime            3 hours, 44 minutes, 51 seconds
        Last reboot reason Router rebooted after a normal shutdown.
        Load averages:    1 minute   5 minute   15 minute
                           0.00       0.00       0.00

```

Routing Engine status:

Slot 1:

```

        Current state      Backup
        Election priority  Backup (default)
        Temperature        30 degrees C / 86 degrees F
        CPU temperature     43 degrees C / 109 degrees F
        DRAM               3327 MB
        Memory utilization  9 percent

```

```

CPU utilization:
  User          0 percent
  Background    0 percent
  Kernel        0 percent
  Interrupt     0 percent
  Idle          100 percent
Model          RE-TXP-LCC
Serial ID      737F-1024
Start time     2009-05-06 17:31:32 PDT
Uptime        5 days, 3 hours, 54 minutes, 19 seconds
Last reboot reason Router rebooted after a normal shutdown.

```

show chassis routing-engine lcc (TX Matrix Plus Router)

```
user@host> show chassis routing-engine 0 lcc 0
```

```
lcc0-re0:
```

```
-----
Routing Engine status:
```

```
Slot 0:
```

```

  Current state      Master
  Election priority  Master (default)
  Temperature        30 degrees C / 86 degrees F
  CPU temperature    43 degrees C / 109 degrees F
  DRAM               3327 MB
  Memory utilization 9 percent
  CPU utilization:
    User            0 percent
    Background      0 percent
    Kernel          2 percent
    Interrupt       0 percent
    Idle            98 percent
  Model             RE-TXP-LCC
  Serial ID         737F-1024
  Start time        2009-05-11 17:40:32 PDT
  Uptime            3 hours, 45 minutes, 26 seconds
  Last reboot reason Router rebooted after a normal shutdown.
  Load averages:    1 minute  5 minute  15 minute
                    0.00      0.00      0.00

```

```
Routing Engine status:
```

```
Slot 1:
```

```

  Current state      Backup
  Election priority  Backup (default)
  Temperature        30 degrees C / 86 degrees F
  CPU temperature    43 degrees C / 109 degrees F
  DRAM               3327 MB
  Memory utilization 9 percent
  CPU utilization:
    User            0 percent
    Background      0 percent
    Kernel          0 percent
    Interrupt       0 percent
    Idle            100 percent
  Model             RE-TXP-LCC
  Serial ID         737F-1024
  Start time        2009-05-06 17:31:32 PDT
  Uptime            5 days, 3 hours, 54 minutes, 59 seconds
  Last reboot reason Router rebooted after a normal shutdown.

```

show chassis routing-engine bios (TX Matrix Plus Router)

```
user@host> show chassis routing-engine bios
```

```
sfc0-re0:
```

```
-----
Routing Engine BIOS Version: V0.0.Z
```

```
lcc0-re0:
```

```
-----
Routing Engine BIOS Version: V0.0.N
```

show chassis routing-engine (QFX Series)

```
user@switch> show chassis routing-engine
```

```
Routing Engine status:
```

```
Slot 0:
```

```
Current state Master
```

```
Election priority Master (default)
```

```
DRAM 2820 MB
```

```
Memory utilization 49 percent
```

```
CPU utilization:
```

```
User 1 percent
```

```
Background 0 percent
```

```
Kernel 1 percent
```

```
Interrupt 0 percent
```

```
Idle 97 percent
```

```
Model QFX3500-48S4Q
```

```
Serial ID S/N ED3709
```

```
Uptime 3 days, 4 hours, 29 minutes, 42 seconds
```

```
Last reboot reason 0x200:chassis control reset
```

```
Load averages: 1 minute 5 minute 15 minute
```

```
0.37 0.26 0.19
```

show chassis routing-engine (OCX Series)

```
user@switch> show chassis routing-engine
```

```
Routing Engine status:
```

```
Slot 0:
```

```
Current state Master
```

```
Election priority Master (default)
```

```
DRAM 2820 MB
```

```
Memory utilization 49 percent
```

```
CPU utilization:
```

```
User 1 percent
```

```
Background 0 percent
```

```
Kernel 1 percent
```

```
Interrupt 0 percent
```

```
Idle 97 percent
```

```
Model OCX-1100-48SX-AFI
```

```
Serial ID S/N ED3709
```

```
Uptime 3 days, 4 hours, 29 minutes, 42 seconds
```

```
Last reboot reason 0x200:chassis control reset
```

```
Load averages: 1 minute 5 minute 15 minute
```

```
0.37 0.26 0.19
```

show chassis routing-engine interconnect-device (QFabric Systems)

```
user@switch> show chassis routing-engine
```

Routing Engine status:**Slot 0:**

Current state	Master
Election priority	Master (default)
Temperature	48 degrees C / 118 degrees F
DRAM	3312 MB
Memory utilization	63 percent
CPU utilization:	
User	14 percent
Background	0 percent
Kernel	5 percent
Interrupt	0 percent
Idle	81 percent
Model	RE-QFXC08-CB4S
Serial ID	BUILTIN
Start time	2011-07-06 13:26:15 UTC
Uptime	11 hours, 24 minutes, 57 seconds
Last reboot reason	0x4:reset-button reset
Load averages:	1 minute 5 minute 15 minute
	2.62 2.31 2.28

Routing Engine status:**Slot 1:**

Current state	Backup
Election priority	Backup (default)
Temperature	39 degrees C / 102 degrees F
DRAM	3312 MB
Memory utilization	59 percent
CPU utilization:	
User	9 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	91 percent
Model	RE-QFXC08-CB4S
Serial ID	BUILTIN
Start time	2011-07-06 13:24:58 UTC
Uptime	11 hours, 26 minutes, 18 seconds
Last reboot reason	0x4:reset-button reset

show chassis routing-engine (PTX Series Packet Transport Router)

```
user@switch> show chassis routing-engine
```

Routing Engine status:**Slot 0:**

Current state	Master
Election priority	Master (default)
Temperature	60 degrees C / 140 degrees F
CPU temperature	76 degrees C / 168 degrees F
DRAM	17152 MB
Memory utilization	11 percent
CPU utilization:	
User	0 percent
Background	0 percent
Kernel	4 percent


```

        Interrupt          0 percent
        Idle               95 percent
        Model              RE-DUO-2600
        Serial ID          P737A-002231
        Start time         2011-12-21 16:54:37 PST
        Uptime             25 minutes, 44 seconds
        Last reboot reason  Router rebooted after a normal shutdown.
        Load averages:     1 minute   5 minute   15 minute
                           0.01       0.02       0.06

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature             50 degrees C / 122 degrees F
  CPU temperature         64 degrees C / 147 degrees F
  DRAM                   17152 MB
  Memory utilization      10 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                0 percent
    Interrupt             0 percent
    Idle                  99 percent
  Model                   RE-DUO-2600
  Serial ID               P737A-002438
  Start time              2011-12-21 16:52:26 PST
  Uptime                  27 minutes, 49 seconds
  Last reboot reason      Router rebooted after a normal shutdown.

```

show chassis routing-engine (EX9200 Switch)

```

user@switch> show chassis routing-engine

Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             35 degrees C / 95 degrees F
  CPU temperature         33 degrees C / 91 degrees F
  DRAM                   8157 MB
  Installed Memory        8192 MB
  Memory utilization      18 percent
  CPU utilization:
    User                  1 percent
    Background            0 percent
    Kernel                4 percent
    Interrupt             1 percent
    Idle                  94 percent
  Model                   RE-S-EX9200-1800X4
  Serial ID               9009119555
  Start time              2014-03-12 14:58:05 UTC
  Uptime                  1 hour, 41 minutes, 51 seconds
  Last reboot reason      Router rebooted after a normal shutdown.
  Load averages:         1 minute   5 minute   15 minute
                           0.02       0.02       0.00

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)

```

[...Output truncated...]

show chassis routing-engine (EX9251 Switch)

```
user@switch> show chassis routing-engine
```

```
Routing Engine status:
  Temperature          50 degrees C / 122 degrees F
  CPU temperature      50 degrees C / 122 degrees F
  DRAM                 16340 MB (16384 MB installed)
  Memory utilization    6 percent
  5 sec CPU utilization:
    User                2 percent
    Background          0 percent
    Kernel              19 percent
    Interrupt           0 percent
    Idle                79 percent
  1 min CPU utilization:
    User                2 percent
    Background          0 percent
    Kernel              19 percent
    Interrupt           0 percent
    Idle                79 percent
  5 min CPU utilization:
    User                2 percent
    Background          0 percent
    Kernel              19 percent
    Interrupt           0 percent
    Idle                79 percent
  15 min CPU utilization:
    User                2 percent
    Background          0 percent
    Kernel              19 percent
    Interrupt           0 percent
    Idle                79 percent
  Model                RE-S-2X00x6
  Start time           2018-03-08 05:11:33 PST
  Uptime               10 days, 18 hours, 59 minutes, 15 seconds
  Last reboot reason    0x4000:VJUNOS reboot
  Load averages:       1 minute   5 minute  15 minute
                      1.06       1.09     1.08
```

show chassis routing-engine (ACX2000 Universal Metro Router)

```
user@host> show chassis routing-engine
```

```
Routing Engine status:
  Temperature          53 degrees C / 127 degrees F
  DRAM                 1536 MB
  Memory utilization    25 percent
  CPU utilization:
    User                0 percent
    Background          0 percent
    Kernel              0 percent
    Interrupt           1 percent
    Idle                99 percent
  Model                RE-ACX-2000
  Start time           2012-05-09 00:57:07 PDT
```

```

Uptime                5 days, 3 hours, 16 minutes, 15 seconds
Last reboot reason     Router rebooted after a normal shutdown.
Load averages:         1 minute   5 minute   15 minute
                        0.00        0.03      0.05

```

show chassis routing-engine (ACX1000 Universal Metro Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Temperature          36 degrees C / 96 degrees F
  DRAM                  768 MB
  Memory utilization    50 percent
  CPU utilization:
    User                3 percent
    Background          0 percent
    Kernel              6 percent
    Interrupt           0 percent
    Idle                91 percent
  Model                RE-ACX-1000
  Start time            2012-05-10 07:12:23 PDT
  Uptime                4 days, 10 hours, 46 minutes, 53 seconds
  Last reboot reason    Router rebooted after a normal shutdown.
  Load averages:       1 minute   5 minute   15 minute
                        0.00        0.00      0.00

```

show chassis routing-engine (Displaying the guest reboot reason on PTX5000, MX240, MX480, MX960, MX2010, and MX2020)

```
user@host> show chassis routing-engine re0 | match "Last reboot reason"
```

```
Last reboot reason 0x4000:VJUNOS reboot
```

show chassis satellite

Syntax	<pre>show chassis satellite [device-alias <i>device-alias</i> fpc-slot <i>fpc-slot</i> cluster <i>cluster-name</i>] [brief detail extensive terse] <since <i>time</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	Display the status of the satellite device connections in a Junos Fusion.
Options	<p>none—(Same as brief) Display satellite device connection information</p> <p>device-alias <i>device-alias</i>—(Optional) Display satellite device connection information for the satellite device using the specified device alias only.</p> <p>fpc-slot <i>fpc-slot</i>—(Optional) Display satellite device connection information for the satellite device using the specified FPC slot number only.</p> <p>cluster <i>cluster-name</i>—(Optional) Display satellite device connection information for the satellite devices in the specified satellite device cluster only.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>since <i>time</i>—(Optional) Display the satellite devices that have been added to the Junos Fusion on or after a certain date or time, in YYYY-MM-DD.HH:MM:SS format.</p> <p>To display all satellite devices added since a specified date, enter the specific date. For instance, to display all satellite devices added on or after December 22nd, 2015, enter 2015-12-22 as the <i>time</i>.</p> <p>To display all satellite devices added since a specified time, enter the specific date and time. For instance, to display all satellite devices added on or after 11:01AM on December 22nd, 2015, enter 2015-12-22.11:01:00 as the <i>time</i>.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge
List of Sample Output	<p>show chassis satellite on page 734</p> <p>show chassis satellite device-alias on page 735</p> <p>show chassis satellite fpc-slot 130 on page 735</p> <p>show chassis satellite terse on page 735</p>

[show chassis satellite detail on page 736](#)

Output Fields [Table 26 on page 729](#) lists the output fields for the **show chassis satellite** command. Output fields are listed in the approximate order in which they appear.

Table 26: show chassis satellite Output Fields

Field Name	Field Description	Level of Output
Fields for Interface		
Alias	The satellite device's alias.	brief
	The satellite device's alias is configured using the set chassis satellite-management fpc slot-id alias alias statement.	extensive none
Slot	The slot number of the satellite device.	brief
	The slot number can be configured using the set chassis satellite-management fpc slot-id statement..	terse extensive none

Table 26: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
Device State	<p>The state of the satellite device within the Junos Fusion.</p> <p>The most common device states:</p> <ul style="list-style-type: none"> • Online—the satellite device is online and active. This is the satellite device state during normal operating procedure. • Offline—the satellite device is offline and not detected. This state is typically seen when the satellite device has been disconnected from the aggregation device, or when all cascade or uplink ports connecting the satellite device to the aggregation device are down. • Present—the satellite device is recognized by the aggregation device, but is not online. This state is typically seen before a satellite device goes online, or while satellite device configuration is in progress or finalizing. • Rebooting—the satellite device is rebooting. • Disable—the satellite device has been disabled. • Misconfig—the satellite device is not properly configured. This state is typically seen when the system ID, cascade port, or FPC slot ID defined for the satellite device has a misconfiguration. • Miswire—the satellite device is miswired. This state is typically seen when a satellite device is wired to two aggregation devices but is not configured for multihoming. Use show chassis satellite detail to gather more information on the issue when the device state is Miswire. <p>Other less common device states include:</p> <ul style="list-style-type: none"> • ModeChanging—the device is converting from a standalone device to a satellite device, or from a satellite device to a standalone device. • ModeChangeFail—the mode change operation failed. • MinorUpgradeOn—A minor satellite software upgrade is in progress. • MajorUpgradeOn—A major satellite software upgrade is in progress. • Upgrade-pending—the satellite device is waiting for a satellite software upgrade. • ProvSessionDn—the provisioning session is down. • ReconcileState—the satellite provisioning daemon has restarted and is reconciling the satellite device state. 	<p>brief terse extensive none</p>
Cascade Ports	<p>The cascade port or ports.</p> <p>A cascade port is a port on the aggregation device that connects to a satellite device in a Junos Fusion.</p>	<p>brief extensive none</p>

Table 26: `show chassis satellite` Output Fields (continued)

Field Name	Field Description	Level of Output
Port State	<p>The state of the cascade port on the aggregation device.</p> <p>Port states include:</p> <ul style="list-style-type: none"> • online—the cascade port is online and active. This is the port state during normal operating procedure. • txUpRxDn—Tx or Rx forwarding is disabled on the cascade port. This state is often seen when a second aggregation device is added to a Junos Fusion topology, and the devices in the Junos Fusion are synchronizing to the new topology. • miswire—the cascade port is miswired. This state is typically seen when a satellite device is interconnected to two aggregation devices but multihoming is not configured. Use show chassis satellite detail to gather more information on the issue when the device state is Miswire. • present—The cascade port recognized the satellite device and is up. • misconfig—the cascade port is assigned, but this interface is not working correctly due to a misconfiguration. • down—the cascade port is down. • offline—the satellite device was previously recognized from this interface, but is no longer present. • absent—the cascade port is configured but no satellite device is detected on the interface. 	<p>brief</p> <p>extensive</p> <p>none</p>
Extended Ports Total	<p>The total number of extended ports on the satellite device.</p> <p>An extended port is a network-facing port on the satellite device that sends and receives network traffic for the Junos Fusion.</p>	<p>brief</p> <p>none</p> <p>terse</p>
Extended Ports Up	The number of active extended ports.	<p>brief</p> <p>none</p> <p>terse</p>
Model	The hardware model of the satellite device.	terse
Version	The version of satellite device software running on the satellite device.	terse
Satellite Alias	<p>The satellite device's alias.</p> <p>The satellite device's alias is configured using the set chassis satellite-management fpc slot-id alias alias statement.</p>	detail
FPC slot	<p>The FPC slot number of the satellite device.</p> <p>The slot number can be configured using the set chassis satellite-management fpc slot-id statement.</p>	detail

Table 26: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
Operational State	<p>The operational state of the satellite device.</p> <p>The state UFDDown indicates that uplink failure detection disabled the satellite device's extended ports due to an uplink port failure.</p>	detail
Product Model	The hardware model of the satellite device.	detail
Product Family	The product family of the satellite device.	detail
Serial number	The serial number of the satellite device.	detail
System ID	The system ID of the satellite device. The system ID is also the satellite device's MAC address.	detail
Software package version	The satellite software version running on the satellite device.	detail
Host software version	The host operating system software version running on the satellite device.	detail
Management Address	<p>The management IP address of the satellite device.</p> <p>This management IP address belongs to an internal routing instance. This management address is assigned by the control plane internally based on FPC slot ID and is used for the control plane traffic between the aggregation device and satellite device.</p> <p>All management in a Junos Fusion should be done through the aggregation device. The management IP address of the satellite device is useful for debugging purposes by expert users only.</p>	detail
UFD config state	Uplink failure detection configuration state.	detail
Minimum link	Uplink failure detection minimum active uplink port setting.	detail
Holdddown timer (seconds)	Uplink failure detection holdddown timer setting, in seconds.	detail
UFD operational state	Uplink failure detection operational state.	detail

Table 26: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
Candidate uplink interfaces (pic/port)	Uplink failure detection candidate uplink interfaces.	detail
Extended Ports	The number of extended ports for the satellite device. The number on the left is the total number of extended ports, and the number on the right is the total number of extended ports currently in the up state.	extensive
When	The date and time of the event.	extensive
Event	The event.	extensive
Action	The actions that resulted from the event.	extensive
Fields for Cascade interfaces		
Interface Name	The name of the cascade interface on the aggregation device.	detail
State	The state of the cascade interface.	detail
Uplink Interface	The name of the uplink interface on the satellite device.	detail
Adjacency state	The adjacency state of the cascade to uplink interface link.	detail
Last transition	The amount of time that has passed since the last transition of the cascade to uplink interface link.	detail
Adjacency down count (Interface Name)	The number of times the cascade to uplink interface link has gone into the down state.	detail
RX Packet	The number of packets received on the cascade interface.	detail
Last received packet	The amount of time that has passed since the last packet was received on the cascade interface.	detail
Peer adjacency information	The amount of time that has passed since the last peer adjacency transition.	detail
Adjacency down count (Peer adjacency information)	The number of times the cascade to uplink interface link has gone into the down state.	detail

Table 26: show chassis satellite Output Fields (continued)

Field Name	Field Description	Level of Output
Last down cause	The cause of the last adjacency failure.	detail
SDPD restart detected	The number of times that the satellite device protocol process has restarted.	detail
Fields for Process information		
Process Name	The name of the process.	detail
PID	The process identification number of the process.	detail
State	The current state of the process.	detail
Number of restart detected	The number of times the process has restarted.	detail
Uptime	The amount of time that the process has been running.	detail

Sample Output

show chassis satellite

```
user@aggregation-device> show chassis satellite
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
qfx5100-24q-01	100	Online	xe-0/0/1 xe-0/3/0	online online	9/2
qfx5100-24q-02	101	Online	xe-0/0/2 xe-0/3/1	online online	20/12
qfx5100-24q-03	102	Online	xe-0/0/3 xe-0/3/2	online online	16/6
qfx5100-24q-04	103	Online	xe-0/0/4 xe-0/3/3	online online	16/4
qfx5100-24q-05	104	Online	xe-0/0/5 xe-0/3/4	online online	13/3
qfx5100-24q-06	105	Online	xe-0/0/6 xe-0/3/5	online online	24/15
qfx5100-24q-07	106	Online	xe-0/0/7 xe-0/3/6	online online	24/15
qfx5100-24q-08	107	Online	xe-0/0/8 xe-0/3/7	online online	21/12
ex4300-01	109	Online	xe-1/0/1	online	49/2
ex4300-02	110	Online	xe-1/0/2	online	49/2
ex4300-03	111	Online	xe-1/0/3	online	49/2
ex4300-04	112	Online	xe-1/0/4	online	49/11
ex4300-05	113	Online	xe-1/0/5	online	49/11
ex4300-06	114	Online	xe-1/0/6	online	49/11
ex4300-07	115	Online	xe-1/0/7	online	49/11
ex4300-08	116	Online	xe-1/1/0	online	49/11
ex4300-09	117	Online	xe-1/1/1	online	49/11

ex4300-10	118	Online	xe-1/1/2	online	49/11
ex4300-11	119	Online	xe-1/1/3	online	49/11
ex4300-12	120	Online	xe-1/1/4	online	49/11
ex4300-13	121	Online	xe-1/1/5	online	49/11
ex4300-14	122	Online	xe-1/1/6	online	49/11
ex4300-15	123	Online	xe-1/1/7	online	49/11
ex4300-16	124	Online	xe-1/2/1	online	49/11
ex4300-17	125	Online	xe-1/2/2	online	49/11
ex4300-18	126	Online	xe-1/2/3	online	49/2
ex4300-19	127	Online	xe-1/2/4	online	49/1
ex4300-20	128	Online	xe-1/2/5	online	49/1
ex4300-21	129	Online	xe-1/2/6	online	49/1
ex4300-22	130	Online	xe-1/2/7	online	49/1

Sample Output

show chassis satellite device-alias

```
user@aggregation-device> show chassis satellite device-alias ex4300-22
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
ex4300-22	130	Online	xe-0/2/7	online	49/1

Sample Output

show chassis satellite fpc-slot 130

```
user@aggregation-device> show chassis satellite fpc-slot 130
```

Alias	Slot	Device State	Cascade Ports	Port State	Extended Ports Total/Up
ex4300-22	101	Online	xe-0/0/2 xe-0/3/1	online online	20/12

Sample Output

show chassis satellite terse

```
user@aggregation-device> show chassis satellite terse
```

Slot	Device State	Model	Extended Ports Total/Up	Version
101	Online	QFX5100-48S-6Q	7/7	3.0R1.1
102	Online	QFX5100-48S-6Q	7/7	3.0R1.1
103	Online	QFX5100-48S-6Q	6/5	3.0R1.1
104	Online	QFX5100-48S-6Q	14/14	3.0R1.1
105	Online	QFX5100-48S-6Q	18/18	3.0R1.1
106	Online	QFX5100-48S-6Q	17/16	3.0R1.1
107	Online	EX4300-48T	52/6	3.0R1.1
108	Online	EX4300-48T	52/15	3.0R1.1
109	Online	EX4300-48T	51/14	3.0R1.1
110	Online	EX4300-48T	51/14	3.0R1.1
111	Online	EX4300-48T	51/13	3.0R1.1
112	Online	EX4300-48T	51/12	3.0R1.1
113	Online	EX4300-48T	51/13	3.0R1.1
114	Online	QFX5100-24Q-2P	17/13	3.0R1.1

show chassis satellite detail

```
user@aggregation-device> show chassis satellite detail
```

```
Satellite Alias: qfx5100-48s-02
FPC Slot: 101
Operational State: Online
Product Model: QFX5100-48S-6Q
Product Family: i386
Serial number: ABC123DEF456
System id: 00:11:22:aa:bb:cc
Software package version: 3.0R1.1
Host software version: 1.0.0
Management Address: 172.16.0.101/32
Cascade interfaces:
  Interface Name: xe-0/0/2 State: online
    Uplink Interface: xe-001/0/48:0
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-0/2/1 State: online
    Uplink Interface: xe-001/0/48:1
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 64 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-2/0/0 State: online
    Uplink Interface: xe-001/0/48:2
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Interface Down
      SDPD restart detected: 3
  Interface Name: xe-2/1/6 State: online
    Uplink Interface: xe-001/0/48:3
    Adjacency state: Two-Way
    Last transition: 00:10:22
    Adjacency down count: 0
    Rx Packet: 65 Last received packet: 00:00:02
    Peer adjacency information: 00:10:22
      Adjacency down count: 3
      Last down cause: Hold timer expire
      SDPD restart detected: 3
Process information:
  Process Name: Provisioning PID: 6716 State: Running
    Number of restart detected: 0
    Uptime: 00:10:22
  Process Name: PFE PID: 3194 State: Running
```

```

        Number of restart detected: 0
        Uptime: 00:10:22
    UFD config state: Enable (persist), Minimum link: 1,
    Holdddown timer (seconds): 6
    UFD operational state: Enable
    Candidate uplink interfaces (pic/port):
        1/0
        1/1
        1/2
        1/3
        2/0
        2/1
        2/2
        2/3

    Satellite Alias: qfx5100-48s-03
    FPC Slot: 102
    Operational State: Online
    Product Model: QFX5100-48S-6Q
    Product Family: i386
    Serial number: ABCDEFG12345
    System id: 00:11:22:aa:ba:cc
    Software package version: 3.0R1.1
    Host software version: 1.0.0
    Management Address: 172.16.0.102/32
    Cascade interfaces:
        Interface Name: xe-0/0/3 State: online
            Uplink Interface: xe-002/0/48:0
            Adjacency state: Two-Way
            Last transition: 00:10:22
            Adjacency down count: 0
            Rx Packet: 65 Last received packet: 00:00:02
            Peer adjacency information: 00:10:22
                Adjacency down count: 3
                Last down cause: Interface Down
                SDPD restart detected: 3
        Interface Name: xe-0/2/2 State: online
            Uplink Interface: xe-002/0/48:1
            Adjacency state: Two-Way
            Last transition: 00:10:22
            Adjacency down count: 0
            Rx Packet: 65 Last received packet: 00:00:02
            Peer adjacency information: 00:10:22
                Adjacency down count: 3
                Last down cause: Interface Down
                SDPD restart detected: 3
        Interface Name: xe-2/0/1 State: online
            Uplink Interface: xe-002/0/48:2
            Adjacency state: Two-Way
            Last transition: 00:10:22
            Adjacency down count: 0
            Rx Packet: 65 Last received packet: 00:00:02
            Peer adjacency information: 00:10:22
                Adjacency down count: 3
                Last down cause: Interface Down
                SDPD restart detected: 3
        Interface Name: xe-2/1/7 State: online
            Uplink Interface: xe-002/0/48:3
            Adjacency state: Two-Way
            Last transition: 00:10:22

```

```

Adjacency down count: 0
Rx Packet: 65 Last received packet: 00:00:02
Peer adjacency information: 00:10:22
  Adjacency down count: 3
  Last down cause: Interface Down
  SDPD restart detected: 3
Process information:
  Process Name: Provisioning PID: 6667 State: Running
  Number of restart detected: 0
  Uptime: 00:10:22
  Process Name: PFE PID: 3155 State: Running
  Number of restart detected: 0
  Uptime: 00:10:22
<additional output removed for brevity>

```

show chassis satellite extended-port

Syntax	<pre>show chassis satellite extended-port <i>interface-name</i> <fpc-slot <i>fpc-slot</i>> <interface-name <i>interface-name</i>> [brief detail extensive terse] <since <i>time</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Display the status of the extended ports on the satellite devices in a Junos Fusion.</p> <p>The extended ports are the network-facing ports on satellite devices that send and receive network traffic for a Junos Fusion.</p>
Options	<p>none—(Same as brief and terse) Display extended port status information.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>fpc <i>fpc-slot</i>—Display extended port status information for the specified FPC slot only. In a Junos Fusion, one FPC slot ID is assigned to each satellite device, so you can use this option to display extended port status information for all extended ports on one satellite device.</p> <p>interface-name <i>interface-name</i>—Display extended port status information for the extended port interface only.</p> <p>history—Display extended port history.</p> <p>statistics—Display extended port statistics.</p> <p>since <i>time</i>—(Optional) Display extended port status information for the satellite devices that have been added to the Junos Fusion on or after a certain date or time, which is entered in the YYYY-MM-DD.HH:MM:SS format.</p> <p>To display extended port status information for all satellite devices added since a specified date, enter the specific date as the <i>time</i>. For instance, 2015-12-22.</p> <p>To display extended port status information for all satellite devices added since a specified time, enter the specific date and time as the <i>time</i>. For instance, 2015-12-22.11:01:00.</p>
Required Privilege Level	view

- Related Documentation**
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
 - [Configuring Junos Fusion Provider Edge](#)

List of Sample Output [show chassis satellite extended-port on page 741](#)

Output Fields [Table 27 on page 740](#) lists the output fields for the **show chassis satellite extended-port** command. Output fields are listed in the approximate order in which they appear.

Table 27: show chassis satellite extended-port Output Fields

Field Name	Field Description	Level of Output
Fields for Interface		
Name	The interface name of the extended port.	brief terse detail extensive none
State	The state of the extended port.	brief terse detail extensive none
Rx Request State	The receive request state of the extended port.	brief terse detail extensive none
Tx Request State	The transmit request state of the extended port.	brief terse detail extensive none
Admin State	The administrative state of the extended port.	brief terse detail extensive none
Op State	The operational state of the extended port.	brief terse detail extensive none
IFD Idx	The internal interface index.	brief terse detail extensive none

Table 27: show chassis satellite extended-port Output Fields (continued)

Field Name	Field Description	Level of Output
PCID	The port's E-channel identifier (ECID), abbreviated as PCID.	brief terse detail extensive none
When	The date and time of the event.	detail extensive
Event	The event.	detail extensive
Action	The actions that resulted from the event.	detail extensive

Sample Output

show chassis satellite extended-port

```
user@aggregation-device> show chassis satellite extended-port
```

```
Legend for interface types:
```

```
* -- Uplink interface
```

Name	State	Rx Request	Rx State	Tx Request	Tx State	Admin/Op State	IFD Idx	PCID
et-100/0/2	AddComplete	None		Ready		Up/Dn	838	110
et-104/0/2	AddComplete	None		Ready		Up/Dn	813	110
et-107/0/23	AddComplete	None		Ready		Up/Up	544	194
ge-109/0/0	AddComplete	None		Ready		Up/Up	402	115
ge-109/0/1	AddComplete	None		Ready		Up/Dn	403	114
ge-109/0/10	AddComplete	None		Ready		Up/Dn	412	113
ge-109/0/11	AddComplete	None		Ready		Up/Dn	413	112
ge-109/0/12	AddComplete	None		Ready		Up/Dn	414	123
ge-109/0/13	AddComplete	None		Ready		Up/Dn	415	122
ge-109/0/14	AddComplete	None		Ready		Up/Dn	416	125
ge-109/0/15	AddComplete	None		Ready		Up/Dn	417	124
ge-109/0/16	AddComplete	None		Ready		Up/Dn	418	131
ge-109/0/17	AddComplete	None		Ready		Up/Dn	419	130
ge-109/0/18	AddComplete	None		Ready		Up/Dn	420	133
ge-109/0/19	AddComplete	None		Ready		Up/Dn	421	132
ge-109/0/2	AddComplete	None		Ready		Up/Dn	404	117
ge-109/0/20	AddComplete	None		Ready		Up/Dn	422	127
ge-109/0/21	AddComplete	None		Ready		Up/Dn	423	126
ge-109/0/22	AddComplete	None		Ready		Up/Dn	424	129
ge-109/0/23	AddComplete	None		Ready		Up/Dn	425	128
ge-109/0/24	AddComplete	None		Ready		Up/Dn	426	103
ge-109/0/25	AddComplete	None		Ready		Up/Dn	427	102
ge-109/0/26	AddComplete	None		Ready		Up/Dn	428	105
ge-109/0/27	AddComplete	None		Ready		Up/Dn	429	104
ge-109/0/28	AddComplete	None		Ready		Up/Dn	430	107
ge-109/0/29	AddComplete	None		Ready		Up/Dn	431	106
ge-109/0/3	AddComplete	None		Ready		Up/Dn	405	116
ge-109/0/30	AddComplete	None		Ready		Up/Dn	432	109
ge-109/0/31	AddComplete	None		Ready		Up/Dn	433	108

ge-109/0/32	AddComplete	None	Ready	Up/Dn	434	135
ge-109/0/33	AddComplete	None	Ready	Up/Dn	435	134
ge-109/0/34	AddComplete	None	Ready	Up/Dn	436	137
ge-109/0/35	AddComplete	None	Ready	Up/Dn	437	136
ge-109/0/36	AddComplete	None	Ready	Up/Dn	438	144
ge-109/0/37	AddComplete	None	Ready	Up/Dn	439	143
ge-109/0/38	AddComplete	None	Ready	Up/Dn	440	146
ge-109/0/39	AddComplete	None	Ready	Up/Dn	441	145
ge-109/0/4	AddComplete	None	Ready	Up/Dn	406	119
ge-109/0/40	AddComplete	None	Ready	Up/Dn	442	140
ge-109/0/41	AddComplete	None	Ready	Up/Dn	443	139
ge-109/0/42	AddComplete	None	Ready	Up/Dn	444	142
ge-109/0/43	AddComplete	None	Ready	Up/Dn	445	141
ge-109/0/44	AddComplete	None	Ready	Up/Dn	446	148
ge-109/0/45	AddComplete	None	Ready	Up/Dn	447	147
ge-109/0/46	AddComplete	None	Ready	Up/Dn	448	150
ge-109/0/47	AddComplete	None	Ready	Up/Dn	449	149
ge-109/0/5	AddComplete	None	Ready	Up/Dn	407	118
ge-109/0/6	AddComplete	None	Ready	Up/Dn	408	121
ge-109/0/7	AddComplete	None	Ready	Up/Dn	409	120
ge-109/0/8	AddComplete	None	Ready	Up/Dn	410	111
ge-109/0/9	AddComplete	None	Ready	Up/Dn	411	110
ge-110/0/0	AddComplete	None	Ready	Up/Up	728	115
ge-110/0/1	AddComplete	None	Ready	Up/Dn	729	114

show chassis satellite interface

Syntax	<pre>show chassis satellite interface <interface-name> [brief detail extensive] <since time></pre>
Release Information	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Display the status of the cascade ports as well as the internal satellite interfaces in a Junos Fusion.</p> <p>You might see sd interfaces in the output of this command. These are internal interfaces for the Junos Fusion.</p>
Options	<p>interface-name—Specify the name of the interface.</p> <p>none—(Same as brief) Display aggregation device interface information.</p> <p>brief detail extensive—(Optional) Display the specified level of output.</p> <p>since time—(Optional) Display interface status information for the satellite devices that have been added to the Junos Fusion on or after a certain date or time, which is entered in the <i>YYYY-MM-DD.HH:MM:SS</i> format.</p> <p>To display extended port status information for all satellite devices added since a specified date, enter the specific date as the time as the <i>time</i>. For instance, 2015-12-22.</p> <p>To display extended port status information for all satellite devices added since a specified time, enter the specific date and time as the <i>time</i>. For instance, 2015-12-22.11:01:00.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge
List of Sample Output	<p>show chassis satellite interface on page 744</p> <p>show chassis satellite interface (Junos Fusion Data Center with EVPN-VXLAN) on page 747</p>
Output Fields	<p>Table 28 on page 744 lists the output fields for the show chassis satellite interface command. Output fields are listed in the approximate order in which they appear.</p>

Table 28: show chassis satellite interface Output Fields

Field Name	Field Description	Level of Output
Fields for Interface		
Interface	The interface name.	brief detail extensive none
State	The state of the interface.	brief detail extensive none
Type	The type of interface.	brief detail extensive none
DF-Role	<p>(Junos Fusion Data Center with EVPN-VXLAN architecture) The designated forwarder (DF) role:</p> <ul style="list-style-type: none"> • NA—Not applicable. • NON-DF—This aggregation device is not the designated forwarder for the satellite device • DF—This aggregation device is the designated forwarder for the satellite device. 	brief detail extensive none
Provisioned Addresses	<p>The provisioned IP addresses for the Junos Fusion.</p> <p>This information is primarily useful for debugging purposes by expert users.</p>	detail extensive
Operational Addresses	<p>The operational IP addresses for the Junos Fusion.</p> <p>This information is primarily useful for debugging purposes by expert users.</p>	detail extensive
When	The date and time of the event.	detail extensive
Event	The event.	detail extensive
Action	The actions that resulted from the event.	detail extensive

Sample Output

show chassis satellite interface

```
user@aggregation-device> show chassis satellite interface
```

Interface lo0	State Up	Type Loopback
sd-101/0/0	Up	Satellite
sd-102/0/0	Up	Satellite
sd-103/0/0	Up	Satellite
sd-104/0/0	Up	Satellite
sd-105/0/0	Up	Satellite
sd-106/0/0	Up	Satellite
sd-107/0/0	Up	Satellite
sd-108/0/0	Up	Satellite
sd-109/0/0	Up	Satellite
sd-110/0/0	Up	Satellite
sd-111/0/0	Up	Satellite
sd-112/0/0	Up	Satellite
sd-113/0/0	Up	Satellite
sd-114/0/0	Up	Satellite
xe-0/0/1	Up	Cascade
xe-0/0/2	Up	Cascade
xe-0/0/3	Up	Cascade
xe-0/0/4	Up	Cascade
xe-0/0/5	Up	Cascade
xe-0/0/6	Up	Cascade
xe-0/0/7	Up	Cascade
xe-0/0/8	Up	Cascade
xe-0/0/9	Up	Cascade
xe-0/2/0	Up	Cascade
xe-0/2/1	Up	Cascade
xe-0/2/2	Up	Cascade
xe-0/2/3	Up	Cascade
xe-0/2/4	Up	Cascade

xe-0/2/5	Up	Cascade
xe-0/2/6	Up	Cascade
xe-0/2/7	Up	Cascade
xe-1/0/1	Up	Cascade
xe-1/0/2	Up	Cascade
xe-1/0/3	Up	Cascade
xe-1/2/1	Up	Cascade
xe-1/2/2	Up	Cascade
xe-1/2/3	Up	Cascade
xe-2/0/0	Up	Cascade
xe-2/0/1	Up	Cascade
xe-2/0/2	Up	Cascade
xe-2/0/3	Up	Cascade
xe-2/0/4	Up	Cascade
xe-2/0/5	Up	Cascade
xe-2/0/6	Up	Cascade
xe-2/0/7	Up	Cascade
xe-2/1/0	Up	Cascade
xe-2/1/1	Up	Cascade
xe-2/1/2	Up	Cascade
xe-2/1/3	Up	Cascade
xe-2/1/4	Up	Cascade
xe-2/1/5	Up	Cascade
xe-2/1/6	Up	Cascade
xe-2/1/7	Up	Cascade
xe-2/2/0	Up	Cascade
xe-2/2/1	Up	Cascade
xe-2/2/2	Up	Cascade
xe-2/2/3	Up	Cascade
xe-2/2/4	Up	Cascade

xe-2/2/5	Up	Cascade
xe-2/2/6	Up	Cascade
xe-2/2/7	Up	Cascade
xe-2/3/0	Up	Cascade
xe-2/3/3	Dn	Cascade
xe-2/3/4	Up	Cascade
xe-2/3/5	Up	Cascade
xe-2/3/6	Up	Cascade
xe-2/3/7	Up	Cascade

Sample Output

show chassis satellite interface (Junos Fusion Data Center with EVPN-VXLAN)

```
user@aggregation-device> show chassis satellite interface
```

Interface	State	Type	DF-Role
lo0	Up	Loopback	NA
sd-101/0/0	Up	Satellite	Non-DF
sd-102/0/0	Up	Satellite	Non-DF
sd-103/0/0	Up	Satellite	DF
xe-0/0/1	Up	Cascade	NA
xe-0/0/2	Up	Cascade	NA
xe-0/0/3	Up	Cascade	NA
xe-0/0/4	Up	Cascade	NA
xe-0/0/5	Up	Cascade	NA

show chassis satellite neighbor

Syntax	<pre>show chassis satellite neighbor [<i>interface-name</i>] [brief detail extensive terse] <since <i>time</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	Display the status of the satellite device to aggregation device links in a Junos Fusion.
Options	<p><i>interface-name</i>—Specify the name of the cascade port on the aggregation device.</p> <p>none—(Same as terse) Display satellite device connection information.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>since <i>time</i>—(Optional) Display satellite device connection information for the satellite devices that have been added to the Junos Fusion on or after a certain date or time, which is entered in the <i>YYYY-MM-DD.HH:MM:SS</i> format.</p> <p>To display satellite device connection information for all satellite devices added since a specified date, enter the specific date as the <i>time</i> as the <i>time</i>. For instance, 2015-12-22.</p> <p>To display satellite device connection information for all satellite devices added since a specified time, enter the specific date and time as the <i>time</i>. For instance, 2015-12-22.11:01:00.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge
List of Sample Output	show chassis satellite neighbor on page 751
Output Fields	Table 29 on page 748 lists the output fields for the show chassis satellite neighbor command. Output fields are listed in the approximate order in which they appear.

Table 29: show chassis satellite neighbor Output Fields

Field Name	Field Description	Level of Output
Fields for Interface		

Table 29: show chassis satellite neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
Interface	A cascade port interface on the aggregation device in the Junos Fusion. A cascade port interface on an aggregation device connects to a satellite device in a Junos Fusion.	brief terse detail extensive none
State	The state of the interface.	brief terse detail extensive none
Port Info	The uplink port interface on the satellite device. An uplink port interface on a satellite device connects the satellite device to an aggregation device in a Junos Fusion.	brief terse detail extensive none
System Name	The system name, or alias, of the satellite device. The satellite device's alias is configured using the set chassis satellite-management fpc slot-id alias alias statement.	brief terse detail extensive none
Model	The hardware model of the satellite device.	brief terse detail extensive none
SW Version	The version of satellite software running on the satellite device.	brief terse detail extensive none
Adjacency up-down transition count	The number of times that the adjacency has transitioned between up and down.	brief detail extensive
Last transition	The last transition of the adjacency state.	brief detail extensive
Device Serial Number	The serial number of the satellite device.	brief detail extensive
Chassis ID	The chassis ID of the satellite device. The chassis ID of the satellite device is the satellite's device's MAC address. The chassis ID is also specified as the system ID in some Junos Fusion configuration tasks.	brief detail extensive

Table 29: show chassis satellite neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
Device Family Name	The device family name.	brief detail extensive
Version Sequence Number	The version sequence number.	brief detail extensive
System Description	A plain-text description of the hardware and software currently running on the satellite device.	brief detail extensive
Build date	The date and time that the satellite software was built.	brief detail extensive
Hello interval	The current hello interval configuration.	brief detail extensive
Satellite hello interval	The current satellite device hello interval configuration.	brief detail extensive
Local-end (Local assigned primary address)	The local-end cascade port IP address.	brief detail extensive
Remote-end (Local assigned primary address)	The remote-end uplink port IP address.	brief detail extensive
Cause (Adjacency Down History)	The cause of the last adjacency down event.	brief detail extensive
Timestamp (Adjacency Down History)	The date and time of the last adjacency down event.	brief detail extensive
Information (Adjacency Down History)	Information related to the last adjacency down event.	brief detail extensive
When	The date and time of the event.	detail extensive
Event	The event.	detail extensive

Table 29: show chassis satellite neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
Action	The actions that resulted from the event.	detail extensive

Sample Output

show chassis satellite neighbor

```
user@aggregation-device> show chassis satellite neighbor
```

Interface	State	Port Info	System Name	Model	SW Version
xe-2/3/7	Init				
xe-2/3/6	Init				
xe-2/3/5	Init				
xe-2/3/4	Init				
xe-2/3/3	Dn				
xe-2/3/0	Two-Way	xe-0/2/2	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/7	Two-Way	xe-0/2/2	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/6	Two-Way	xe-0/2/2	ex4300-27	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/5	Two-Way	xe-0/2/2	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/2/4	Init				
xe-2/2/3	Init				
xe-2/2/2	Two-Way	xe-0/0/48:3	qfx5100-48s-06	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/2/1	Two-Way	xe-0/0/48:3	qfx5100-48s-05	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/2/0	Init				
xe-2/1/7	Init				
xe-2/1/6	Init				
xe-2/1/5	Two-Way	xe-0/0/4:2	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18
27_dc-builder					
xe-2/1/4	Two-Way	xe-0/2/1	ex4300-31	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/3	Two-Way	xe-0/2/1	ex4300-30	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/2	Two-Way	xe-0/2/1	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/1	Two-Way	xe-0/2/1	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/1/0	Init				
xe-2/0/7	Two-Way	xe-0/2/1	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-2/0/6	Init				
xe-2/0/5	Init				
xe-2/0/4	Init				
xe-2/0/3	Init				
xe-2/0/2	Two-Way	xe-0/0/48:2	qfx5100-48s-04	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/0/1	Two-Way	xe-0/0/48:2	qfx5100-48s-03	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-2/0/0	Init				
xe-1/2/3	Two-Way	xe-0/0/0:0	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18

27_dc-builder					
xe-1/2/2	Two-Way	xe-0/2/0	ex4300-31	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/2/1	Two-Way	xe-0/2/0	ex4300-30	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/0/3	Two-Way	xe-0/2/0	ex4300-29	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/0/2	Two-Way	xe-0/2/0	ex4300-28	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-1/0/1	Two-Way	xe-0/2/0	ex4300-27	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-0/2/7	Two-Way	xe-0/0/0:1	qfx5100-24q-09	QFX5100-24Q-2P	0.1I20150224_18
27_dc-builder					
xe-0/2/6	Init				
xe-0/2/5	Init				
xe-0/2/4	Two-Way	xe-0/0/48:1	qfx5100-48s-05	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/2/3	Two-Way	xe-0/0/48:1	qfx5100-48s-04	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/2/2	Two-Way	xe-0/0/48:1	qfx5100-48s-03	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/2/1	Init				
xe-0/2/0	Init				
xe-0/0/9	Two-Way	xe-0/2/0	ex4300-26	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-0/0/8	Two-Way	xe-0/2/0	ex4300-25	EX4300-48T	0.1I20150224_182
7_dc-builder					
xe-0/0/7	Two-Way	xe-0/0/48:0	qfx5100-48s-07	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/6	Two-Way	xe-0/0/48:0	qfx5100-48s-06	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/5	Two-Way	xe-0/0/48:0	qfx5100-48s-05	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/4	Two-Way	xe-0/0/48:0	qfx5100-48s-04	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/3	Two-Way	xe-0/0/48:0	qfx5100-48s-03	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/2	Two-Way	xe-0/0/48:0	qfx5100-48s-02	QFX5100-48S-6Q	0.1I20150224_18
27_dc-builder					
xe-0/0/1	Init				

show chassis satellite redundancy-group

Syntax	<pre>show chassis satellite redundancy-group [brief detail extensive terse] <since <i>time</i>></pre>
Release Information	<p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Display the status of the redundancy group in a Junos Fusion.</p> <p>Redundancy groups are used in a Junos Fusion to configure, monitor, and maintain a topology using two aggregation devices.</p>
Options	<p>none—(Same as terse and brief) Display redundancy group information for the Junos Fusion.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>since <i>time</i>—(Optional) Display redundancy group information on or after a certain date or time, in YYYY-MM-DD.HH:MM:SS format.</p> <p>To display all output since a specified date, enter the specific date. For instance, enter 2015-12-22 as the <i>time</i>.</p> <p>To display all output since a specified time, enter the specific date and time. For instance, to display all information on or after 11:01AM on December 22nd, 2015, enter 2015-12-22.11:01:00 as the <i>time</i>.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	show chassis satellite redundancy-group on page 755
Output Fields	<p>Table 30 on page 754 lists the output fields for the show chassis satellite redundancy-groups command. Output fields are listed in the approximate order in which they appear.</p>

Table 30: show chassis satellite redundancy-groups Output Fields

Field Name	Field Description	Level of Output
Name	The name of the redundancy group. The redundancy group name is set using the set chassis satellite-management redundancy-groups redundancy-group-name statement.	none
		terse
		brief
		detail
		extensive
Cluster State	The cluster state.	none
		terse
		brief
		detail
		extensive
Peer Chassis ID	The chassis ID of the peer chassis. In a Junos Fusion using redundancy groups, the peer chassis ID is the chassis ID of the other aggregation device and is required to create an interchassis link (ICL). The chassis ID is set using the set redundancy-group-name chassis-id chassis-id-number statement.	none
		terse
		brief
		detail
		extensive
Peer Chassis SN	The serial number of the peer chassis. In a Junos Fusion using redundancy groups, the peer chassis serial number is the serial number of the other aggregation device.	none
		terse
		brief
		detail
		extensive
Device Count	The device count.	none
		terse
		brief
		detail
		extensive
When	The date and time of the event.	detail
		extensive

Table 30: show chassis satellite redundancy-groups Output Fields (continued)

Field Name	Field Description	Level of Output
Event	The event.	detail
		extensive
Action	The actions that resulted from the event.	detail
		extensive

Sample Output

show chassis satellite redundancy-group

```
user@aggregation-device> show chassis satellite redundancy-group
```

Name	Cluster State	Peer Chassis ID	Peer Chassis SN	Device Count
gr1	Online	2	DC334	143/143/150

show chassis satellite redundancy-group devices

Syntax	show chassis satellite redundancy-group devices [brief detail extensive terse] <history>
Release Information	Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Display the status of the devices in a redundancy group in a Junos Fusion. Redundancy groups are used in a Junos Fusion to configure, monitor, and maintain a topology using two aggregation devices.
Options	none —(Same as terse and brief) Display redundancy group device information for the Junos Fusion. brief detail extensive terse —(Optional) Display the specified level of output. history —(Optional) Display historical output.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	show chassis satellite redundancy-group devices on page 757
Output Fields	Table 31 on page 756 lists the output fields for the show chassis satellite redundancy-groups command. Output fields are listed in the approximate order in which they appear.

Table 31: show chassis satellite redundancy-groups Output Fields

Field Name	Field Description	Level of Output
Cluster Name	The name of the redundancy group.	none
	The redundancy group name is set using the set chassis satellite-management redundancy-groups redundancy-group-name statement.	terse
		brief
		detail
		extensive

Table 31: show chassis satellite redundancy-groups Output Fields (continued)

Field Name	Field Description	Level of Output
Slot ID	The FPC slot ID of the satellite device.	none
		terse
		brief
		detail
		extensive
Local State	The local state of the satellite device.	none
		terse
		brief
		detail
		extensive
Peer State	The peer state.	none
		terse
		brief
		detail
		extensive
When	The date and time of the event.	detail
		extensive
Event	The event.	detail
		extensive
Action	The actions that resulted from the event.	detail
		extensive

Sample Output

show chassis satellite redundancy-group devices

```
user@aggregation-device> show chassis satellite redundancy-group devices
```

Cluster name	Slot-ID	Local State	Peer State
gr1	100	online	online
gr1	101	online	online
gr1	102	online	online

gr1	103	not-provisioned online
gr1	104	not-provisioned online
gr1	105	not-provisioned online
gr1	106	not-provisioned online
gr1	107	not-provisioned online
gr1	108	not-provisioned online
gr1	109	not-provisioned online

show chassis satellite software

Syntax	show chassis satellite software [brief detail]
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Display information related to the satellite software in the Junos Fusion.
Options	none —(Same as brief) Display satellite device software information. brief detail —(Optional) Display the specified level of output.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge
List of Sample Output	show chassis satellite software on page 760 show chassis satellite software detail on page 760
Output Fields	Table 32 on page 759 lists the output fields for the show chassis satellite neighbor command. Output fields are listed in the approximate order in which they appear.

Table 32: show chassis satellite software Output Fields

Field Name	Field Description	Level of Output
Fields for Interface		
Version	The versions of satellite software that are installed and associated with a software upgrade group.	brief none
Platforms	The hardware platform information.	brief none
Group	The name of the assigned satellite software group or groups, if assigned.	brief none
Software Package Version	The satellite software package version.	detail
Platform	The platform type.	detail
Host Version	The host version of software for the platform.	detail

Table 32: show chassis satellite software Output Fields (continued)

Field Name	Field Description	Level of Output
Current Groups	The name or names of the satellite software upgrade groups that are using the software package. This output only appears if the software package is associated with a satellite software upgrade group.	detail
Former Groups	The name or names of satellite software upgrade groups that were previously using the software package. This output only appears if the software package was previously associated with a satellite software upgrade group.	detail

Sample Output

show chassis satellite software

```
user@aggregation-device> show chassis satellite software
```

Version	Platforms	Group
3.0R1.1	i386 ppc	group0

Sample Output

show chassis satellite software detail

```
user@aggregation-device> show chassis satellite software detail
```

```
Software package version: 3.0R1.6
Platforms supported by package: i386 ppc arm arm563xx
Platform      Host Version  Models Supported
i386          3.0.3        QFX5100-24Q-2P
               QFX5100-48C-6Q
               QFX5100-48S-6Q
               QFX5100-48T-6Q
               QFX5100-96S-8Q
               QFX5100-48SH-6Q
               QFX5100-48TH-6Q
ppc           1.1.2        EX4300-24P
               EX4300-24T
               EX4300-48P
               EX4300-48T
               EX4300-48T-BF
               EX4300-48T-DC
               EX4300-48T-DC-BF
arm           1.0.0        EX2300-24P
               EX2300-24T-DC
               EX2300-C-12T
               EX4300-C-12P
arm563xx      1.0.0        EX3400-24P
               EX3400-24T
               EX3400-48T
               EX3400-48P
Current Groups: group1
```

```
group2  
group3  
group4  
group5
```

show chassis satellite statistics

Syntax	<pre>show chassis satellite statistics <device-alias device-alias> <fpc-slot fpc-slot> <cluster cluster-name></pre>
Release Information	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	Display statistics for satellite devices in a Junos Fusion.
Options	<p>device-alias—Display output for the specified satellite device, which is identified by the device alias, only.</p> <p>fpc-slot —Display output for the specified satellite device, which is identified by the FPC slot ID, only.</p> <p>cluster-name—Display output for the satellite devices in the specified satellite device cluster only.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> Configuring or Expanding a Junos Fusion Enterprise on page 45 Configuring Junos Fusion Provider Edge
List of Sample Output	<p>show chassis satellite statistics on page 763</p> <p>show chassis satellite statistics device-alias qfx5100-48s-02 on page 766</p> <p>show chassis satellite statistics fpc-slot 101 on page 766</p>
Output Fields	<p>Table 33 on page 762 lists the output fields for the show chassis satellite statistics command. Output fields are listed in the approximate order in which they appear.</p>

Table 33: show chassis satellite statistics Output Fields

Field Name	Field Description
Fields for Interface	
Serial Number	The serial number of the satellite device.
Slot-ID	The FPC slot ID of the satellite device.
CSP down transition count	The number of times that the Control and Status Protocol (CSP) session has gone down.

Table 33: show chassis satellite statistics Output Fields (continued)

Field Name	Field Description
Last transition (CSP down transition count)	The last time that the Control and Status Protocol (CSP) session transitioned.
Reachability down transition count	The number of times the satellite device has been in the reachability down state.
Reachability change transition count (Reachability down transition count)	The number of times that the satellite device's reachability state has transitioned.
S/W image update count	The number of times that the satellite software has been updated on the satellite device.
Extended Port add/delete/up/down request/response	The number of times an extended port—a network-facing port on the satellite device—has been added, deleted, placed in the up position, received a down request, or received a response.
Extended Port Params change request	The number of times that an extended port—a network-facing port on the satellite device—has had a change request.
Extended Port up/down operational state transition	The number of times that an extended port—a network-facing port on the satellite device—has had an operational state transition to up or down.
Rx sync complete	The number of times the receive synchronization state has been completed.
Uplink ready rx count	The number of times the uplink port—the port on the satellite device that connects to the aggregation device—has been placed in the ready-to-receive state.
Uplink ready tx count	The number of times the uplink port—the port on the satellite device that connects to the aggregation device—has been placed in the ready-to-transmit state.

Sample Output

show chassis satellite statistics

```
user@aggregation-device> show chassis satellite statistics
```

```
Serial Number: TA3714160468 Slot-ID: 101
  CSP down transition count: 0 Last transition: 05:23:56
  Reachability down transition count: 0
  Reachability change transition count: 4 Last transition: 05:23:16
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 7/0/7/2 7/0/7/2
  Extended Port Params change request: 0
  Extended Port up/down operational state transition: 7/0
  Rx sync complete: 1
  Uplink ready rx count: 4
  Uplink ready tx count: 4
Serial Number: TA3714160046 Slot-ID: 102
  CSP down transition count: 0 Last transition: 05:23:55
  Reachability down transition count: 0
  Reachability change transition count: 4 Last transition: 05:23:19
  S/W image update count: 0
```

```
Extended Port add/delete/up/down request/response: 7/0/7/2 7/0/7/2
Extended Port Params change request: 0
Extended Port up/down operational state transition: 7/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: TA3714140404 Slot-ID: 103
CSP down transition count: 0 Last transition: 05:23:57
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:14
S/W image update count: 0
Extended Port add/delete/up/down request/response: 6/0/5/3 6/0/5/3
Extended Port Params change request: 0
Extended Port up/down operational state transition: 5/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: TA3714141327 Slot-ID: 104
CSP down transition count: 0 Last transition: 05:23:57
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:15
S/W image update count: 0
Extended Port add/delete/up/down request/response: 14/0/14/2 14/0/14/2
Extended Port Params change request: 0
Extended Port up/down operational state transition: 14/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: TA3714140200 Slot-ID: 105
CSP down transition count: 0 Last transition: 05:23:59
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:15
S/W image update count: 0
Extended Port add/delete/up/down request/response: 18/0/18/2 18/0/18/2
Extended Port Params change request: 6
Extended Port up/down operational state transition: 18/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: TA3714140904 Slot-ID: 106
CSP down transition count: 0 Last transition: 05:23:57
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:16
S/W image update count: 0
Extended Port add/delete/up/down request/response: 17/0/16/3 17/0/16/3
Extended Port Params change request: 2
Extended Port up/down operational state transition: 16/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4
Serial Number: PE3714040197 Slot-ID: 107
CSP down transition count: 0 Last transition: 05:24:32
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:18
S/W image update count: 0
Extended Port add/delete/up/down request/response: 52/0/7/50 52/0/7/50
Extended Port Params change request: 0
Extended Port up/down operational state transition: 7/1
Rx sync complete: 1
Uplink ready rx count: 4
```



```

Uplink ready tx count: 4
Serial Number: PE3714080398 Slot-ID: 108
  CSP down transition count: 0 Last transition: 05:24:32
  Reachability down transition count: 0
  Reachability change transition count: 4 Last transition: 05:23:18
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 52/0/15/40 52/0/15/40
  Extended Port Params change request: 0
  Extended Port up/down operational state transition: 15/0
  Rx sync complete: 1
  Uplink ready rx count: 4
  Uplink ready tx count: 4
Serial Number: PE3714080103 Slot-ID: 109
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 3 Last transition: 05:23:19
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 51/0/14/37 51/0/14/37
  Extended Port Params change request: 51
  Extended Port up/down operational state transition: 14/0
  Rx sync complete: 1
  Uplink ready rx count: 3
  Uplink ready tx count: 3
Serial Number: PE3714090246 Slot-ID: 110
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 3 Last transition: 05:23:19
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 51/0/14/37 51/0/14/37
  Extended Port Params change request: 42
  Extended Port up/down operational state transition: 14/0
  Rx sync complete: 1
  Uplink ready rx count: 3
  Uplink ready tx count: 3
Serial Number: PE3714080417 Slot-ID: 111
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 3 Last transition: 05:23:19
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 51/0/13/38 51/0/13/38
  Extended Port Params change request: 51
  Extended Port up/down operational state transition: 13/0
  Rx sync complete: 1
  Uplink ready rx count: 3
  Uplink ready tx count: 3
Serial Number: PE3714080018 Slot-ID: 112
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 2 Last transition: 05:23:18
  S/W image update count: 0
  Extended Port add/delete/up/down request/response: 51/0/12/39 51/0/12/39
  Extended Port Params change request: 51
  Extended Port up/down operational state transition: 12/0
  Rx sync complete: 1
  Uplink ready rx count: 2
  Uplink ready tx count: 2
Serial Number: PE3714080030 Slot-ID: 113
  CSP down transition count: 0 Last transition: 05:23:22
  Reachability down transition count: 0
  Reachability change transition count: 3 Last transition: 05:23:18

```

```

S/W image update count: 0
Extended Port add/delete/up/down request/response: 51/0/13/38 51/0/13/38
Extended Port Params change request: 51
Extended Port up/down operational state transition: 13/0
Rx sync complete: 1
Uplink ready rx count: 3
Uplink ready tx count: 3
Serial Number: TB3714070145 Slot-ID: 114
CSP down transition count: 0 Last transition: 05:23:58
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:23:15
S/W image update count: 0
Extended Port add/delete/up/down request/response: 17/0/13/7 17/0/13/7
Extended Port Params change request: 0
Extended Port up/down operational state transition: 13/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4

```

Sample Output

show chassis satellite statistics device-alias qfx5100-48s-02

```

user@aggregation-device> show chassis satellite statistics device-alias qfx5100-48s-02
Serial Number: TA3714160468 Slot-ID: 101
CSP down transition count: 0 Last transition: 05:52:44
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:52:04
S/W image update count: 0
Extended Port add/delete/up/down request/response: 7/0/7/2 7/0/7/2
Extended Port Params change request: 0
Extended Port up/down operational state transition: 7/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4

```

Sample Output

show chassis satellite statistics fpc-slot 101

```

user@aggregation-device> show chassis satellite statistics fpc-slot 101
Serial Number: TA3714160468 Slot-ID: 101
CSP down transition count: 0 Last transition: 05:52:44
Reachability down transition count: 0
Reachability change transition count: 4 Last transition: 05:52:04
S/W image update count: 0
Extended Port add/delete/up/down request/response: 7/0/7/2 7/0/7/2
Extended Port Params change request: 0
Extended Port up/down operational state transition: 7/0
Rx sync complete: 1
Uplink ready rx count: 4
Uplink ready tx count: 4

```

show chassis satellite unprovision

Syntax show chassis satellite unprovision
[brief | detail | extensive]
[cluster *cluster-name*]
<since *time*>

Release Information Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.
Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.
Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.

Description Display information about unprovisioned satellite devices in a Junos Fusion.

An unprovisioned satellite device in a Junos Fusion is a satellite device that is recognized by the aggregation device, but is not participating in a Junos Fusion.

No output appears when this command is entered when a Junos Fusion contains no unprovisioned satellite devices.

This command is helpful in identifying satellite devices that are not participating in a Junos Fusion due to configuration issues. Notably, a satellite device that has not been associated with an FPC ID in a Junos Fusion becomes an unprovisioned satellite device. See *Configuring Junos Fusion Provider Edge* or [“Configuring or Expanding a Junos Fusion Enterprise” on page 45](#) for information on associating an FPC ID with a Junos Fusion.

Options **none**—(Same as **brief**) Display unprovisioned satellite device information.

brief | detail | extensive—(Optional) Display the specified level of output.

cluster *cluster-name*—(Optional) Display unprovisioned satellite device information for the specified satellite device cluster only.

since *time*—(Optional) Display unprovisioned satellite device information for the satellite devices that have been unprovisioned from a Junos Fusion on or after a certain date or time, which is entered in the *YYYY-MM-DD.HH:MM:SS* format.

To display unprovisioned satellite device information for all satellite devices unprovisioned since a specified date, enter the specific date as the *time* as the *time*. For instance, **2015-12-22**.

To display unprovisioned satellite device information for all satellite devices added since a specified time, enter the specific date and time as the *time*. For instance, **2015-12-22.11:01:00**.

Required Privilege Level view

- Related Documentation**
- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)
 - [Configuring Junos Fusion Provider Edge](#)

List of Sample Output [show chassis satellite unprovision on page 769](#)
[show chassis satellite unprovision detail on page 770](#)

Output Fields [Table 34 on page 768](#) lists the output fields for the **show chassis satellite unprovision** command. Output fields are listed in the approximate order in which they appear.

Table 34: show chassis satellite unprovision Output Fields

Field Name	Field Description	Level of Output
System-Id	The MAC address of the satellite device.	brief extensive none
Serial-Number	The serial number of the satellite device.	brief extensive none
Device State	The device state of the unprovisioned satellite device.	brief extensive none
Cascade Ports	The cascade ports on the aggregation device that are connected to the satellite device.	brief extensive none
Port State	The port state of the cascade port.	brief extensive none
Operational State	The operational state of the satellite device.	detail
Product Model	The product model of the satellite device.	detail
Product Family	The product family of the satellite device.	detail
Serial number	The serial number of the satellite device.	detail
System id	The MAC address of the satellite device.	detail
Software package version	The satellite software package version running on the satellite device.	detail
Host software version	The host software version.	detail
Fields for Cascade interfaces		
Interface Name	The interface name of the cascade port on the aggregation device.	detail

Table 34: show chassis satellite unprovision Output Fields (continued)

Field Name	Field Description	Level of Output
State	The state of the cascade port.	detail
Uplink Interface	The uplink interface name. The uplink interface is the interface on the satellite device that connects to the aggregation device.	detail
Adjacency State	The adjacency state of the uplink interface to cascade port link.	detail
Last transition	The amount of time that has passed since the last link transition.	detail
Adjacency down count	The number of times that the uplink interface to cascade port link has gone into the adjacency down count.	detail
Rx Packet	The number of received packets.	detail
Last received packet	The amount of time that has passed since the last received packet.	detail
Peer adjacency information	The amount of time that the adjacency has been active.	detail
Last down cause	The cause of the last time the adjacency went down.	detail
SDPD restart detected	The number of times that the SDPD has restarted.	detail
Fields for process information		
Process Name	The name of the process.	detail
PID	The PID of the process.	detail
State	The current state of the process.	detail
Number of restart detected	The number of times that the process has restarted.	detail
Uptime	The amount of time that the process has been active.	detail
When	The date and time of the event.	extensive
Event	The event.	extensive
Action	The actions that resulted from the event.	extensive

Sample Output

show chassis satellite unprovision

```
user@aggregation-device> show chassis satellite unprovision
```

System-Id	Serial-Number	Device State	Cascade Ports	Port State
AA:BB:CC:aa:bb:cc	TABCDE111111	Present	xe-0/0/1	present
			xe-0/1/2	present
AA:BB:CC:aa:bb:zz	PABCDE111111	Present	xe-0/0/2	present
			xe-0/3/2	present

Sample Output

show chassis satellite unprovision detail

```
user@aggregation-device> show chassis satellite unprovision detail
```

```
Operational State: Present
Product Model: QFX5100-48S-6Q
Product Family: i386
Serial number: TABCDE111111
System id: AA:BB:CC:aa:bb:cc
Software package version: 3.0R1
Host software version: 0.2.3
Cascade interfaces:
  Interface Name: xe-0/0/1 State: present
    Uplink Interface: xe-0/0/25
    Adjacency state: Two-Way
    Last transition: 3d 22:06:55
    Adjacency down count: 0
    Rx Packet: 33875 Last received packet: 00:00:09
    Peer adjacency information: 3d 22:06:55
      Adjacency down count: 3
      Last down cause: TTL is 0
      SDPD restart detected: 3
  Interface Name: xe-0/1/2 State: present
    Uplink Interface: xe-0/0/24
    Adjacency state: Two-Way
    Last transition: 3d 22:06:58
    Adjacency down count: 0
    Rx Packet: 33875 Last received packet: 00:00:09
    Peer adjacency information: 3d 22:06:58
      Adjacency down count: 5
      Last down cause: TTL is 0
      SDPD restart detected: 3
Process information:
  Process Name: Provisioning PID: 2488 State: Running
    Number of restart detected: 0
    Uptime: 3d 22:06:58
  Process Name: PFE PID: 2631 State: Running
    Number of restart detected: 0
    Uptime: 3d 22:06:58
Operational State: Present
Product Model: EX4300-48T
Product Family: ppc
Serial number: PABCDE111111
System id: AA:BB:CC:aa:bb:zz
Software package version: 3.0R1
Host software version: 0.2.4
Cascade interfaces:
  Interface Name: xe-0/0/2 State: present
    Uplink Interface: xe-0/2/1
    Adjacency state: Two-Way
    Last transition: 3d 22:06:56
```

```
Adjacency down count: 0
Rx Packet: 33876 Last received packet: 00:00:05
Peer adjacency information: 3d 22:06:56
  Adjacency down count: 1
  Last down cause: TTL is 0
  SDPD restart detected: 2
Interface Name: xe-0/3/2 State: present
Uplink Interface: xe-0/2/0
Adjacency state: Two-Way
Last transition: 3d 22:06:57
Adjacency down count: 0
Rx Packet: 33876 Last received packet: 00:00:05
Peer adjacency information: 3d 22:06:57
  Adjacency down count: 3
  Last down cause: TTL is 0
  SDPD restart detected: 2
Process information:
  Process Name: Provisioning PID: 1603 State: Running
  Number of restart detected: 0
  Uptime: 3d 22:06:57
  Process Name: PFE PID: 1615 State: Running
  Number of restart detected: 0
  Uptime: 3d 22:06:57
```

show chassis satellite upgrade-group

Syntax	<pre>show chassis satellite upgrade-group <upgrade-group-name> [brief detail extensive terse]</pre>
Release Information	<p>Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge.</p> <p>Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise.</p> <p>Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.</p>
Description	<p>Display information about the satellite software upgrade groups for the Junos Fusion.</p> <p>A satellite software upgrade group is a group of satellite devices that are updated at the same time to the same version of the satellite software. One Junos Fusion can contain multiple software upgrade groups, and multiple software upgrade groups should be configured in most Junos Fusions to avoid network downtimes during satellite software installations.</p> <p>A satellite software upgrade group that contains all satellite devices in a satellite device cluster is automatically created when a satellite device cluster is configured. The software upgrade group name for these automatically created software upgrade groups is the cluster name.</p>
Options	<p>none—(Same as brief and terse) Display satellite software upgrade group information for all satellite software upgrade groups.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>upgrade-group-name—Display satellite software upgrade group information for the specified satellite software upgrade group only.</p> <p>The satellite software upgrade group name is set using the set chassis satellite-management upgrade-groups upgrade-group-name statement for standalone satellite devices and is the cluster name for satellite device clusters.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45 • Configuring Junos Fusion Provider Edge
List of Sample Output	<p>show chassis satellite upgrade-group on page 774</p> <p>show chassis satellite upgrade-group detail on page 774</p>
Output Fields	<p>Table 35 on page 773 lists the output fields for the show chassis satellite upgrade-group command. Output fields are listed in the approximate order in which they appear.</p>

Table 35: show chassis satellite upgrade-group Output Fields

Field Name	Field Description	Level of Output
Fields for Interface		
Group	<p>The satellite software upgrade group name.</p> <p>The satellite software upgrade group name is the name of the satellite device cluster when used with a satellite device cluster. A satellite software upgrade group with the name of the satellite device cluster is created automatically when a satellite device cluster is configured.</p> <p>The satellite software upgrade group name is set using the set chassis satellite-management upgrade-groups upgrade-group-name statement for standalone satellite devices.</p>	<p>brief</p> <p>terse</p> <p>extensive</p> <p>none</p>
Sw-Version	The version of satellite software associated with the satellite software upgrade group.	<p>brief</p> <p>terse</p> <p>extensive</p> <p>none</p>
Group State	The state of the satellite software upgrade group.	<p>brief</p> <p>terse</p> <p>extensive</p> <p>none</p>
Slot	The FPC slot identification number of the satellite device that is a member of the satellite software upgrade group.	<p>brief</p> <p>terse</p> <p>detail</p> <p>extensive</p> <p>none</p>
Device State	<p>The state of the satellite software for the specified member of the satellite software upgrade group.</p> <p>The version-in-sync output appears when the satellite device is running the satellite software version that is associated with the satellite software upgrade group.</p>	<p>brief</p> <p>terse</p> <p>detail</p> <p>extensive</p> <p>none</p>
Software upgrade group	The name of the satellite software upgrade group.	detail
Software package version	The satellite software package associated with the satellite software upgrade group.	detail
Previous software package version	<p>The satellite software package that was previously associated with the satellite software upgrade group.</p> <p>This output only appears if the satellite software upgrade group was previously associated with another version of satellite software.</p>	detail

Sample Output

show chassis satellite upgrade-group

```
user@aggregation-device> show chassis satellite upgrade-group
```

Group	Sw-Version	Group State	Slot	Device State
__ungrouped__ ex4300	3.0R1.0	in-sync	107	version-in-sync
			108	version-in-sync
			109	version-in-sync
			110	version-in-sync
			111	version-in-sync
			112	version-in-sync
qfx	3.0R1.0	in-sync	113	version-in-sync
			102	version-in-sync
			103	version-in-sync
			104	version-in-sync
			105	version-in-sync
			106	version-in-sync
			114	version-in-sync

Sample Output

show chassis satellite upgrade-group detail

```
user@aggregation-device> show chassis satellite upgrade-group detail
```

```
Software upgrade group: ex4300
Software package version: 3.0R1.0
Previous software package version: 3.0R1.1
Slot    Device State
107     version-in-sync
108     version-in-sync
109     version-in-sync
110     version-in-sync
111     version-in-sync
112     version-in-sync
113     version-in-sync

Software upgrade group: qfx
Software package version: 3.0R1.0
Slot    Device State
102     version-in-sync
103     version-in-sync
104     version-in-sync
105     version-in-sync
```

106	version-in-sync
114	version-in-sync

show chassis satellite-cluster

Syntax `show chassis satellite-cluster`
`[cluster cluster-name]`
`[brief | detail | extensive | terse]`

Release Information Command introduced in Junos OS Release 16.1R1.

Description Display the status of the satellite device clusters in a Junos Fusion.

Options **none**—(Same as **brief**) Display satellite device cluster information for satellite device clusters in the Junos Fusion.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

cluster *cluster-name*—Display satellite device cluster information for the specified satellite device cluster only.

Required Privilege Level view

Related Documentation

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

List of Sample Output [show chassis satellite-cluster terse on page 780](#)
[show chassis satellite-cluster on page 780](#)

Output Fields [Table 36 on page 776](#) lists the output fields for the **show chassis satellite-cluster** command. Output fields are listed in the approximate order in which they appear.

Table 36: show chassis satellite-cluster Output Fields

Field Name	Field Description	Level of Output
cluster	The name of the satellite device cluster. The name of the satellite device cluster is assigned using the set chassis satellite-management cluster <i>cluster-name</i> statement.	terse
Provision	The number of provisioned satellite devices in the specified satellite device cluster.	terse
Present	The number of present satellite devices in the specified satellite device cluster.	terse
Online	The number of online satellite devices in the specified satellite device cluster.	terse

Table 36: show chassis satellite-cluster Output Fields (continued)

Field Name	Field Description	Level of Output
Unprovision	The number of unprovisioned satellite devices in the specified satellite device cluster.	terse
Misconfig	The number of misconfigured satellite devices in the specified satellite device cluster.	terse
Cluster Name	The name of the satellite device cluster.	none
	The name of the satellite device cluster is assigned using the set chassis satellite-management cluster cluster-name statement.	detail
		extensive
Number of devices provisioned	The number of provisioned satellite devices in the specified satellite device cluster.	none
		detail
		extensive
Number of devices present	The number of present satellite devices in the specified satellite device cluster.	none
		detail
		extensive
Number of devices unprovisioned	The number of unprovisioned satellite devices in the specified satellite device cluster.	none
		detail
		extensive
Number of devices misconfig/miswired	The number of misconfigured or miswired satellite devices in the specified satellite device cluster.	none
		detail
		extensive
Number of devices online	The number of online satellite devices in the specified satellite device cluster.	none
		detail
		extensive
Number of devices offline	The number of offline satellite devices in the specified satellite device cluster.	none
		detail
		extensive
Slot	The slot number of the satellite device.	none
	The slot number can be configured using the set chassis satellite-management fpc slot-id statement.	detail
		extensive

Table 36: show chassis satellite-cluster Output Fields (continued)

Field Name	Field Description	Level of Output
Device State	The device state of the satellite device in the satellite device cluster.	none
	The most common device states:	detail
	<ul style="list-style-type: none"> • Online—the satellite device is online and active. This is the satellite device state during normal operating procedure. • Offline—the satellite device is offline and not detected. This state is typically seen when the satellite device has been disconnected from the aggregation device, or when all cascade or uplink ports connecting the satellite device to the aggregation device are down. • Present—the satellite device is recognized by the aggregation device. In a satellite device cluster, this state is seen during normal operation for all satellite devices that are not directly cabled to the aggregation device. • Rebooting—the satellite device is rebooting. • Disable—the satellite device has been disabled. • Misconfig—the satellite device is not properly configured. This state is typically seen when the system ID, cascade port, or FPC slot ID defined for the satellite device has a misconfiguration. • Miswire—the satellite device is miswired. This state is typically seen when a satellite device is wired to two aggregation devices but is not configured for multihoming. Use show chassis satellite detail to gather more information on the issue when the device state is Miswire. <p>Other less common device states include:</p> <ul style="list-style-type: none"> • ModeChanging—the device is converting from a standalone device to a satellite device, or from a satellite device to a standalone device. • ModeChangeFail—the mode change operation failed. • MinorUpgradeOn—A minor satellite software upgrade is in progress. • MajorUpgradeOn—A major satellite software upgrade is in progress. • Upgrade-pending—the satellite device is waiting for a satellite software upgrade. • ProvSessionDn—the provisioning session is down. • ReconcileState—the satellite provisioning daemon has restarted and is reconciling the satellite device state. 	extensive
Distance	The distance the satellite device is away from the aggregation device.	none
	In this output, each hop to get from the satellite device to the aggregation device is counted as 4.	detail
	The via output provides the slot number of the satellite device in the satellite device cluster that is directly connected to the aggregation device and passing traffic for the specified satellite device.	extensive

Table 36: show chassis satellite-cluster Output Fields (continued)

Field Name	Field Description	Level of Output
Local Interface	A local interface on the specified satellite device.	none
		detail
		extensive
Remote Interface	A remote interface on the specified satellite device.	none
		detail
		extensive
Interface State	<p>The state of the local and remote interface connection.</p> <p>Port states include:</p> <ul style="list-style-type: none"> • online—the cascade port is online and active. This is the port state during normal operating procedure. • txUpRxDn—Tx or Rx forwarding is disabled on the cascade port. This state is often seen when a second aggregation device is added to a Junos Fusion topology, and the devices in the Junos Fusion are synchronizing to the new topology. • miswire—the cascade port is miswired. This state is typically seen when a satellite device is interconnected to two aggregation devices but multihoming is not configured. Use show chassis satellite detail to gather more information on the issue when the device state is Miswire. • present—The cascade port recognized the satellite device and is up. • misconfig—the cascade port is assigned, but this interface is not working correctly due to a misconfiguration. • down—the cascade port is down. • offline—the satellite device was previously recognized from this interface, but is no longer present. • absent—the cascade port is configured but no satellite device is detected on the interface. 	none
		detail
		extensive
Adj Up/Dn Count	The number of times the satellite device in the satellite device cluster has transitioned to the up or down state.	detail
		extensive
Last Transition	The time of the last transition to the up or down state.	detail
		extensive
When	The date and time of the event.	extensive
Event	The event.	extensive
Action	The actions that resulted from the event.	extensive

Sample Output

show chassis satellite-cluster terse

```
user@aggregation-device> show chassis satellite-cluster terse
```

Cluster	Provision	Present	Online	Unprovision	Misconfig	Offline
cl1	4	4	4	0	0	0

Sample Output

show chassis satellite-cluster

```
user@aggregation-device> show chassis satellite-cluster
```

```
Cluster Name: cluster1
```

```
Number of devices provisioned: 4
```

```
Number of devices present: 4
```

```
Number of devices unprovisioned: 0
```

```
Number of devices misconfig/miwired: 0
```

```
Number of devices online: 4
```

```
Number of devices offline: 0
```

Slot	Device State	Distance	Local Interface	Remote Interface	Interface State
101	Online	0	xe-101/0/0	ge-0/0/0	online
			xe-101/0/1	ge-0/0/1	online
			xe-101/0/4	xe-102/0/0	present
			xe-101/0/5	xe-102/0/1	present
102	Online	4 [via 101]	xe-102/0/0	xe-101/0/4	present
			xe-102/0/1	xe-101/0/5	present
			xe-102/0/2	xe-103/0/0	present
			xe-102/0/3	xe-103/0/1	present
103	Online	8 [via 101]	xe-103/0/0	xe-102/0/2	present
			xe-103/0/1	xe-102/0/3	present
			xe-103/0/2	xe-104/0/4	present
			xe-103/0/3	xe-104/0/5	present
104	Online	12 [via 101]	xe-104/0/4	xe-103/0/2	present
			xe-104/0/5	xe-103/0/3	present

show chassis satellite-cluster route

Syntax `show chassis satellite-cluster route`
`[cluster cluster-name]`
`[fpc-slot slot-id]`

Release Information Command introduced in Junos OS Release 16.1R1.

Description Display information about the route to the aggregation device for a satellite device in a satellite device cluster in a Junos Fusion.

Options **cluster *cluster-name***—Display route information for all satellite devices in the specified cluster.

fpc-slot *slot-id*—Display route information for the satellite device using the specified FPC slot ID.

Required Privilege Level view

Related Documentation

- [Configuring or Expanding a Junos Fusion Enterprise on page 45](#)

List of Sample Output [show chassis satellite-cluster route on page 782](#)

Output Fields [Table 37 on page 781](#) lists the output fields for the **show chassis satellite-cluster route** command. Output fields are listed in the approximate order in which they appear.

Table 37: show chassis satellite-cluster route Output Fields

Field Name	Field Description
Cluster Name	<p>The name of the satellite device cluster.</p> <p>The name of the satellite device cluster is assigned using the set chassis satellite-management cluster <i>cluster-name</i> statement.</p>
Slot	<p>The slot number of the satellite device.</p> <p>The slot number and the FPC ID are the same number in this context.</p>
Interface	Interface on the satellite device that is either interconnected to an aggregation device or another satellite device in the satellite device cluster.
Transit slot	The slot number of the satellite device in the satellite device cluster that is passing traffic to the aggregation device for the specified satellite device.

Table 37: show chassis satellite-cluster route Output Fields (continued)

Field Name	Field Description
Distance	<p>The distance the satellite device is away from the aggregation device.</p> <p>A satellite device in a satellite device cluster that has an uplink port connection to an aggregation device has a distance of 0.</p> <p>The number given in this output counts each hop to a satellite device in the satellite device cluster as 4. For instance, a satellite device that is one aggregation device away from the satellite device with the uplink port has a distance of 4.</p> <p>The via output provides the slot number of the satellite device in the satellite device cluster that is directly connected to the aggregation device and passing traffic for the specified satellite device.</p>

Sample Output

show chassis satellite-cluster route

```
user@aggregation-device> show chassis satellite-cluster route
```

```
Cluster Name: cluster1
```

Slot	Interface	Transit Slot	Distance
101	ge-0/0/1	direct	0
	ge-0/0/0	direct	0
102	ge-0/0/1	101	4
	ge-0/0/0	101	4
103	ge-0/0/1	101	8
	ge-0/0/0	101	8
104	ge-0/0/1	101	12
	ge-0/0/0	101	12

show chassis satellite-cluster statistics

Syntax	<code>show chassis satellite-cluster statistics</code> <code>[cluster <i>cluster-name</i>]</code> <code>[fpc-slot <i>slot-id</i>]</code>
Release Information	Command introduced in Junos OS Release 16.1R1.
Description	Display satellite device cluster statistics for satellite devices in satellite device clusters in a Junos Fusion.
Options	<p>cluster <i>cluster-name</i>—Display satellite device cluster statistics for all satellite devices in the specified cluster.</p> <p>fpc-slot <i>slot-id</i>—Display satellite device cluster statistics for the satellite device using the specified FPC slot ID.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	show chassis satellite-cluster statistics cluster cluster1 on page 784
Output Fields	Table 33 on page 762 lists the output fields for the show chassis satellite-cluster statistics command. Output fields are listed in the approximate order in which they appear.

Table 38: show chassis satellite-cluster statistics Output Fields

Field Name	Field Description
Cluster Name	<p>The name of the satellite device cluster.</p> <p>The name of the satellite device cluster is assigned using the set chassis satellite-management cluster <i>cluster-name</i> statement.</p>
FPC Slot	The FPC slot ID number of the satellite device.
Message Type	The message type.
Received	The number of times the specified message type has been received on the satellite device in the satellite device cluster.
Sent	The number of times the specified message type has been sent on the satellite device in the satellite device cluster.
Rx errors	The number of times the specified message type has experienced a receive error on the satellite device in the satellite device cluster.

Table 38: show chassis satellite-cluster statistics Output Fields (continued)

Field Name	Field Description
Adjacency Up	The total number of Adjacency Up events on the satellite device in the satellite device cluster.
Adjacency Down	The total number of Adjacency Down events on the satellite device in the satellite device cluster.
LLDP Adjacency Up	The total number of LLDP Adjacency Up events on the satellite device in the satellite device cluster.
LLDP Adjacency Down	The total number of LLDP Adjacency Down events on the satellite device in the satellite device cluster.
SD Adjacency Up	The total number of satellite device Adjacency Up events on the satellite device in the satellite device cluster.
SD Adjacency Down	The total number of satellite device Adjacency Down events on the satellite device in the satellite device cluster.
Route Add	The total number of Route Add events on the satellite device in the satellite device cluster.
Route Change	The total number of Route change events on the satellite device in the satellite device cluster.
Route Delete	The total number of Route Delete events on the satellite device in the satellite device cluster.
Provisioned event	The total number of Provisioned events on the satellite device in the satellite device cluster.
Unprovisioned event	The total number of Unprovisioned events on the satellite device in the satellite device cluster.
Delete event	The total number of delete events on the satellite device in the satellite device cluster.
Protocol Session Up	The total number of Protocol Session Up events on the satellite device in the satellite device cluster.
Protocol Session Down	The total number of Protocol Session Down events on the satellite device in the satellite device cluster.

Sample Output

show chassis satellite-cluster statistics cluster cluster1

```
user@aggregation-device> show chassis satellite-cluster statistics cluster cluster1
```

```
Cluster Name: cluster1
```

```
FPC Slot: 101
```

Message type	Received	Sent	Rx errors
Open	0	1	0
Adjacency UP	4	0	0
Adjacency Down	2	0	0
Sync Complete	0	0	0
Provision	0	1	0

Unprovision	0	0	0
Remote SD Route	7	0	0
Mode change Request	0	0	0
Mode change Cancel	0	0	0
Set Policy	0	0	0
Reset Policy	0	0	0
Msg Ack	0	7	0
Keepalive	2568	2567	0

General Statistics:

Adjacency Up	1
Adjacency Down	0
LLDP Adjacency Up	2
LLDP Adjacency Down	0
SD Adjacency Up	2
SD Adjacency Down	0
Route Add	1
Route Change	2
Route Delete	0
Provisioned event	1
Unprovisioned event	0
Delete event	0
Protocol Session Up	1
Protocol Session Down	0

FPC Slot: 102

Message type	Received	Sent	Rx errors
Open	0	2	0
Adjacency UP	8	0	0
Adjacency Down	0	0	0
Sync Complete	0	0	0
Provision	0	2	0
Unprovision	0	0	0
Remote SD Route	0	0	0
Mode change Request	0	0	0
Mode change Cancel	0	0	0
Set Policy	0	0	0
Reset Policy	0	0	0
Msg Ack	0	0	0
Keepalive	2566	2568	0

General Statistics:

Adjacency Up	1
Adjacency Down	0
LLDP Adjacency Up	0
LLDP Adjacency Down	0
SD Adjacency Up	6
SD Adjacency Down	2
Route Add	2
Route Change	6
Route Delete	1
Provisioned event	1
Unprovisioned event	0
Delete event	0
Protocol Session Up	2
Protocol Session Down	1

show chassis temperature-thresholds

List of Syntax [Syntax on page 787](#)
 [Syntax \(TX Matrix Routers\) on page 787](#)
 [Syntax \(TX Matrix Plus Routers\) on page 787](#)
 [Syntax \(MX Series Routers\) on page 787](#)
 [Syntax \(MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms\) on page 787](#)
 [Syntax \(QFX Series\) on page 787](#)
 [Syntax \(PTX Series\) on page 787](#)
 [Syntax \(EX9251, EX9253 Switches\) on page 787](#)

Syntax show chassis temperature-thresholds

Syntax (TX Matrix Routers) show chassis temperature-thresholds
 <lcc *number* | scc>

Syntax (TX Matrix Plus Routers) show chassis temperature-thresholds
 <lcc *number* | sfc *number*>

Syntax (MX Series Routers) show chassis temperature-thresholds
 <all-members>
 <local>
 <member *member-id*>
 <satellite [slot-id *slot-ID* | device-alias *alias-name*]>

Syntax (MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms) show chassis temperature-thresholds

Syntax (QFX Series) show chassis temperature-thresholds
 <interconnect-device *name*>
 <node-device *name*>

Syntax (PTX Series) show chassis temperature-thresholds

Syntax (EX9251, EX9253 Switches) show chassis temperature-thresholds

Release Information Command introduced in Junos OS Release 8.0.
Command introduced in Junos OS Release 9.0 for EX Series switches.
sfc command introduced in Junos OS Release 9.6 for the TX Matrix Plus router.
Command introduced in Junos OS Release 11.1 for QFX Series.
Command introduced in Junos OS Release 12.1 for T4000 Core Routers.
Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.
Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.
satellite option introduced in Junos OS Release 14.2R3.
Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.
Command introduced in Junos OS Release 17.2 for PTX10008 Routers.
Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.
Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.
Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.
Command introduced in Junos OS Release 18.1R1 for EX9251 switches.
Command introduced in Junos OS Release 18.2 for EX9253 Switches.
Command introduced in Junos OS Release 18.2R1 for MX10008 Routers.

Description Display chassis temperature threshold settings, in degrees Celsius.

Options **none**—Display the temperature threshold details.

all-members—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of all member routers in the Virtual Chassis configuration.

interconnect-device *name*—(QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Interconnect device.

lcc *number*—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the temperature threshold details of a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display the temperature threshold details of a specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of the local Virtual Chassis member.

member *member-id*—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device *name*—(QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Node device.

satellite [*slot-id slot-ID* | device-alias *alias-name*]—(Junos Fusion only) (Optional) Display the chassis temperature threshold settings for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

scc—(TX Matrix routers only) (Optional) Display the temperature threshold details of the TX Matrix router (switch-card chassis).

sfc *number*—(TX Matrix Plus routers only) (Optional) On TX Matrix Plus routers, display the temperature threshold details of the TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* with 0.

Required Privilege Level view

List of Sample Output

- [show chassis temperature-thresholds on page 791](#)
- [show chassis temperature-thresholds \(MX150\) on page 791](#)
- [show chassis temperature-thresholds \(MX104 Router\) on page 791](#)
- [show chassis temperature-thresholds \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 792](#)
- [show chassis temperature-thresholds \(MX480 Router with MPC4E\) on page 792](#)
- [show chassis temperature-thresholds \(MX2010 Router with MPC7E, MPC8E, and MPC9E\) on page 792](#)
- [show chassis temperature-thresholds \(MX2010 Router\) on page 796](#)
- [show chassis temperature-thresholds \(MX2020 Router\) on page 798](#)
- [show chassis temperature-thresholds \(MX2020 Router with MPC4E\) on page 801](#)
- [show chassis temperature-thresholds \(MX2008 Routers\) on page 803](#)
- [show chassis temperature-thresholds \(MX10003 Router\) on page 807](#)
- [show chassis temperature-thresholds \(MX10008 Router\) on page 809](#)
- [show chassis temperature-thresholds \(MX204 Router\) on page 817](#)
- [show chassis temperature-thresholds \(PTX10008 Routers\) on page 818](#)
- [show chassis temperature-thresholds \(T4000 Core Routers\) on page 819](#)
- [show chassis temperature-thresholds \(TX Matrix Plus Router\) on page 820](#)
- [show chassis temperature-thresholds lcc \(TX Matrix Plus Router\) on page 821](#)
- [show chassis temperature-thresholds sfc \(TX Matrix Plus Router\) on page 821](#)
- [show chassis temperature-thresholds \(TX Matrix Plus routers with 3D SIBs\) on page 822](#)
- [show chassis temperature-thresholds \(QFX3500 Switch and QFX3600\) on page 824](#)
- [show chassis temperature-thresholds interconnect-device \(QFabric System\) on page 824](#)
- [show chassis temperature-thresholds \(PTX5000 Packet Transport Router\) on page 824](#)

[show chassis temperature-thresholds \(PTX1000 Packet Transport Router\) on page 826](#)
[show chassis temperature-thresholds \(MX Routers with Media Services Blade \[MSB\]\) on page 826](#)
[show chassis temperature-thresholds \(EX9251 Switches\) on page 827](#)
[show chassis temperature-thresholds \(EX9253 switches\) on page 828](#)

Output Fields Table 39 on page 790 lists the output fields for the **show chassis temperature-thresholds** command. Output fields are listed in the approximate order in which they appear.

Table 39: show chassis temperature-thresholds Output Fields

Field name	Field Description
Item	Chassis component. If per FRU per slot thresholds are configured, the components about which information is displayed include the chassis, the Routing Engines, FPCs, and FEBs. If per FRU per slot thresholds are not configured, the components about which information is displayed include the chassis and the Routing Engines.
Fan speed	<p>NOTE: On the QFX3500 switch and QFX3600 switch, there are four fan speeds: low, medium-low, medium-high, and high. The fan speed changes at the threshold when going from a low speed to a higher speed. When the fan speed changes from a higher speed to a lower speed, the temperature changes two degrees below the threshold.</p> <p>Temperature threshold settings, in degrees Celsius, for the fans to operate at normal and high speeds.</p> <ul style="list-style-type: none"> Normal—The fans operate at normal speed if the component is at or below this temperature and all the fans are present and functioning normally. <p>NOTE: On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 70°C for Normal fan speed, which is less than or equal to 4800 RPM.</p> <ul style="list-style-type: none"> High—The fans operate at high speed if the component has exceeded this temperature or a fan has failed or is missing. <p>NOTE: On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 75°C for High fan speed, which is greater than or equal to 5000 RPM.</p> <p>NOTE: For MX480 Routers, there are three fan speeds: Low, Medium, and High.</p> <p>An alarm is not triggered until the temperature exceeds the threshold settings for a yellow alarm or a red alarm.</p>
Yellow alarm	<p>Temperature threshold settings, in degrees Celsius, that trigger a yellow alarm.</p> <ul style="list-style-type: none"> Normal—The temperature that must be exceeded on the component to trigger a yellow alarm when the fans are running at full speed. Bad fan—The temperature that must be exceeded on the component to trigger a yellow alarm when one or more fans have failed or are missing.
Red alarm	<p>Temperature threshold settings, in degrees Celsius, that trigger a red alarm.</p> <ul style="list-style-type: none"> Normal—The temperature that must be exceeded on the component to trigger a red alarm when the fans are running at full speed. Bad fan—The temperature that must be exceeded on the component to trigger a red alarm when one or more fans have failed or are missing.
Fire Shutdown	(T4000 routers, TX Matrix Plus router with 3D SIBs, and PTX Series Packet Transport Routers only)—Temperature threshold settings, in degrees Celsius, for the network device to shut down.

Sample Output

show chassis temperature-thresholds

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	70	80	95	95	110	110
Routing Engine 1	70	80	95	95	110	110
FPC 0	55	60	75	65	90	80
FPC 1	55	60	75	65	90	80
FPC 2	55	60	75	65	90	80
FPC 3	55	60	75	65	90	80
FPC 4	55	60	75	65	90	80
FPC 5	55	60	75	65	90	80
FPC 6	55	60	75	65	90	80
FPC 7	55	60	75	65	90	80
FPC 8	55	60	75	65	90	80
FPC 9	55	60	75	65	90	80
FPC 10	55	60	75	65	90	80
FPC 11	55	60	75	65	90	80

show chassis temperature-thresholds (MX150)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	High	Normal	Bad fan	Normal	Bad fan
FPC 0 Sensor 1	43	65	68	68	70	70		
FPC 0 Sensor 2	43	65	68	68	70	70		
FPC 0 Coretemp	78	94	100	100	105	105		

show chassis temperature-thresholds (MX104 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65		
Routing Engine 0	55	80	95	95	105	100		

show chassis temperature-thresholds (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host> show chassis temperature-thresholds
```

Fan speed (degrees C)	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Item						
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 0	55	60	75	65	90	80
95						
FPC 1	55	60	75	65	90	80
95						
FPC 2	55	60	75	65	90	80
95						
FPC 4	55	60	75	65	90	80
95						
FPC 5	55	60	75	65	90	80
95						

show chassis temperature-thresholds (MX480 Router with MPC4E)

```
user@ host> show chassis temperature-thresholds
```

Fan speed (degrees C)	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Item						
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 2	55	60	75	65	95	80
100						
FPC 3	55	60	75	65	95	80
100						
FPC 4	55	60	75	65	90	80
95						

show chassis temperature-thresholds (MX2010 Router with MPC7E, MPC8E, and MPC9E)

```
user@ host> show chassis temperature-thresholds
```

Fire Shutdown (degrees C)	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Item						
Bad fan	Normal					

FPC 3 Intake	53	59	72	67	80
75 85					
FPC 3 Exhaust A	77	85	98	93	103
98 108					
FPC 3 Exhaust B	54	62	80	75	103
98 108					
FPC 3 EA0 Chip	64	72	90	90	100
100 105					
FPC 3 EA0_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA0_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 EA1 Chip	64	72	90	90	100
100 105					
FPC 3 EA1_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA1_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 PEX Chip	74	82	100	100	105
105 110					
FPC 3 EA2 Chip	64	72	90	90	100
100 105					
FPC 3 EA2_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA2_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 EA3 Chip	64	72	90	90	100
100 105					
FPC 3 EA3_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA3_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 EA0_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA0_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA0_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA0_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA0_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA0_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA1_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA1_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA1_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA1_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA1_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA1_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA2_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA2_HMC0 DRAM botm	76	84	98	98	102
102 106					

FPC 3 EA2_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA2_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA2_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA2_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA3_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA3_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA3_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA3_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA3_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA3_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 4 Intake	46	55	65	60	81
76 90					
FPC 4 Exhaust A	61	70	80	75	100
95 110					
FPC 4 Exhaust B	61	70	80	75	95
90 105					
FPC 4 EA0 Chip	86	95	105	100	117
112 123					
FPC 4 EA0_XR0 Chip	86	95	105	100	110
105 116					
FPC 4 EA0_XR1 Chip	86	95	105	100	115
110 121					
FPC 4 EA1 Chip	86	95	105	100	117
112 123					
FPC 4 EA1_XR0 Chip	86	95	105	100	110
105 116					
FPC 4 EA1_XR1 Chip	86	95	105	100	115
110 121					
FPC 4 PCIE_SW Chip	81	90	105	100	115
110 121					
FPC 4 EA0_HMC0 DRAM botm	86	95	105	100	115
110 121					
FPC 4 EA0_HMC1 DRAM botm	86	95	105	100	115
110 121					
FPC 4 EA1_HMC0 DRAM botm	86	95	105	100	115
110 121					
FPC 4 EA1_HMC1 DRAM botm	86	95	105	100	115
110 121					
FPC 7 Intake	53	59	72	67	80
75 85					
FPC 7 Exhaust A	77	85	98	93	103
98 108					
FPC 7 Exhaust B	54	62	80	75	103
98 108					
FPC 7 EA0 Chip	64	72	90	90	100
100 105					
FPC 7 EA0_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA0_XR1 Chip	79	87	102	102	106
106 108					

FPC 7 EA1 Chip	64	72	90	90	100
100 105					
FPC 7 EA1_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA1_XR1 Chip	79	87	102	102	106
106 108					
FPC 7 PEX Chip	74	82	100	100	105
105 110					
FPC 7 EA2 Chip	64	72	90	90	100
100 105					
FPC 7 EA2_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA2_XR1 Chip	79	87	102	102	106
106 108					
FPC 7 EA3 Chip	64	72	90	90	100
100 105					
FPC 7 EA3_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA3_XR1 Chip	79	87	102	102	106
106 108					
FPC 7 EA0_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA0_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA0_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA0_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA0_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA0_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA1_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA1_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA1_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA1_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA1_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA1_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA2_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA2_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA2_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA2_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA2_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA2_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA3_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA3_HMC0 DRAM botm	76	84	98	98	102
102 106					

FPC 7 EA3_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA3_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA3_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA3_HMC2 DRAM botm	76	84	98	98	102
102 106					

As per the above output, the MPC7E, MPC8E, and MPC9E are installed in the FPC slots 4, 7, and 3, respectively.

show chassis temperature-thresholds (MX2010 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal	
Routing Engine 0	70	80	95	95	110	110	112	
Routing Engine 1	70	80	95	95	110	110	112	
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95	
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95	
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95	
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95	
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95	
CB 0 TCBC-Zone0	60	65	78	75	85	80	95	
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95	
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95	
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95	
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95	
CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95	
CB 1 TCBC-Zone0	60	65	78	75	85	80	95	
SPMB 0 Intake	56	62	75	63	83	76	95	
SPMB 1 Intake	56	62	75	63	83	76	95	
SFB 0 Intake-Zone0	56	62	75	63	82	70	87	
SFB 0 Exhaust-Zone1	56	62	75	63	82	70	87	
SFB 0 IntakeA-Zone0	56	62	75	63	82	70	87	
SFB 0 IntakeB-Zone1	56	62	75	63	82	70	87	
SFB 0 Exhaust-Zone0	56	62	75	63	82	70	87	
SFB 0 SFB-XF2-Zone1	70	80	90	90	107	107	115	
SFB 0 SFB-XF1-Zone0	70	80	90	90	107	107	115	
SFB 0 SFB-XF0-Zone0	70	80	90	90	107	107	115	
SFB 1 Intake-Zone0	56	62	75	63	82	70	87	
SFB 1 Exhaust-Zone1	56	62	75	63	82	70	87	
SFB 1 IntakeA-Zone0	56	62	75	63	82	70	87	
SFB 1 IntakeB-Zone1	56	62	75	63	82	70	87	
SFB 1 Exhaust-Zone0	56	62	75	63	82	70	87	
SFB 1 SFB-XF2-Zone1	70	80	90	90	107	107	115	
SFB 1 SFB-XF1-Zone0	70	80	90	90	107	107	115	
SFB 1 SFB-XF0-Zone0	70	80	90	90	107	107	115	
SFB 2 Intake-Zone0	56	62	75	63	82	70	87	
SFB 2 Exhaust-Zone1	56	62	75	63	82	70	87	
SFB 2 IntakeA-Zone0	56	62	75	63	82	70	87	
SFB 2 IntakeB-Zone1	56	62	75	63	82	70	87	
SFB 2 Exhaust-Zone0	56	62	75	63	82	70	87	
SFB 2 SFB-XF2-Zone1	70	80	90	90	107	107	115	
SFB 2 SFB-XF1-Zone0	70	80	90	90	107	107	115	
SFB 2 SFB-XF0-Zone0	70	80	90	90	107	107	115	

SFB 3 Intake-Zone0	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 3 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 3 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 3 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 3 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 3 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 4 Intake-Zone0	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 4 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 4 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 4 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 4 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 4 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 5 Intake-Zone0	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 5 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 5 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 5 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 5 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 5 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 6 Intake-Zone0	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 6 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 6 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 6 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 6 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 6 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 7 Intake-Zone0	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 7 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 7 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 7 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 7 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 7 SFB-XF0-Zone0	70	80	90	90	107	107	115
FPC 0	55	60	75	65	95	80	100
FPC 1	55	60	75	65	90	80	95
FPC 2	55	60	75	65	95	80	100
FPC 3	55	60	75	65	90	80	95
FPC 4	55	60	75	65	90	80	95
FPC 5	55	60	75	65	95	80	100
FPC 6	55	60	75	65	90	80	95
FPC 7	55	60	75	65	95	80	100
FPC 8	55	60	75	65	90	80	95
FPC 9	55	60	75	65	95	80	100
ADC 0 Intake	56	62	75	63	83	76	95
ADC 0 Exhaust	56	62	75	63	83	76	95
ADC 0 ADC-XF1	70	80	90	90	107	107	115
ADC 0 ADC-XF0	70	80	90	90	107	107	115
ADC 1 Intake	56	62	75	63	83	76	95
ADC 1 Exhaust	56	62	75	63	83	76	95
ADC 1 ADC-XF1	70	80	90	90	107	107	115
ADC 1 ADC-XF0	70	80	90	90	107	107	115
ADC 2 Intake	56	62	75	63	83	76	95
ADC 2 Exhaust	56	62	75	63	83	76	95

ADC 2 ADC-XF1	70	80	90	90	107	107	115
ADC 2 ADC-XF0	70	80	90	90	107	107	115
ADC 3 Intake	56	62	75	63	83	76	95
ADC 3 Exhaust	56	62	75	63	83	76	95
ADC 3 ADC-XF1	70	80	90	90	107	107	115
ADC 3 ADC-XF0	70	80	90	90	107	107	115
ADC 4 Intake	56	62	75	63	83	76	95
ADC 4 Exhaust	56	62	75	63	83	76	95
ADC 4 ADC-XF1	70	80	90	90	107	107	115
ADC 4 ADC-XF0	70	80	90	90	107	107	115
ADC 5 Intake	56	62	75	63	83	76	95
ADC 5 Exhaust	56	62	75	63	83	76	95
ADC 5 ADC-XF1	70	80	90	90	107	107	115
ADC 5 ADC-XF0	70	80	90	90	107	107	115
ADC 6 Intake	56	62	75	63	83	76	95
ADC 6 Exhaust	56	62	75	63	83	76	95
ADC 6 ADC-XF1	70	80	90	90	107	107	115
ADC 6 ADC-XF0	70	80	90	90	107	107	115
ADC 7 Intake	56	62	75	63	83	76	95
ADC 7 Exhaust	56	62	75	63	83	76	95
ADC 7 ADC-XF1	70	80	90	90	107	107	115
ADC 7 ADC-XF0	70	80	90	90	107	107	115
ADC 8 Intake	56	62	75	63	83	76	95
ADC 8 Exhaust	56	62	75	63	83	76	95
ADC 8 ADC-XF1	70	80	90	90	107	107	115
ADC 8 ADC-XF0	70	80	90	90	107	107	115
ADC 9 Intake	56	62	75	63	83	76	95
ADC 9 Exhaust	56	62	75	63	83	76	95
ADC 9 ADC-XF1	70	80	90	90	107	107	115
ADC 9 ADC-XF0	70	80	90	90	107	107	115

show chassis temperature-thresholds (MX2020 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed		Yellow alarm		Red alarm		Fire Shutdown
	(degrees C) Normal	(degrees C) High	(degrees C) Normal	(degrees C) Bad fan	(degrees C) Normal	(degrees C) Bad fan	(degrees C) Normal
Routing Engine 0	70	80	95	95	110	110	112
Routing Engine 1	70	80	95	95	110	110	112
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 0 TCBC-Zone0	60	65	78	75	85	80	95
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 1 TCBC-Zone0	60	65	78	75	85	80	95
SPMB 0 Intake	56	62	75	63	83	76	95
SPMB 1 Intake	56	62	75	63	83	76	95
SFB 0 Intake-Zone0	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 0 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 0 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone0	56	62	75	63	82	70	87

SFB 0 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 0 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 0 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 1 Intake-Zone0	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 1 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 1 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 1 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 1 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 1 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 2 Intake-Zone0	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 2 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 2 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 2 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 2 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 2 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 3 Intake-Zone0	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 3 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 3 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 3 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 3 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 3 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 4 Intake-Zone0	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 4 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 4 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 4 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 4 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 4 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 5 Intake-Zone0	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 5 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 5 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 5 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 5 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 5 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 6 Intake-Zone0	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 6 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 6 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 6 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 6 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 6 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 7 Intake-Zone0	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 7 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 7 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 7 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 7 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 7 SFB-XF0-Zone0	70	80	90	90	107	107	115
FPC 0	55	60	75	65	90	80	95

FPC 1	55	60	75	65	90	80	95
FPC 2	55	60	75	65	90	80	95
FPC 3	55	60	75	65	90	80	95
FPC 4	55	60	75	65	90	80	95
FPC 5	55	60	75	65	90	80	95
FPC 6	55	60	75	65	90	80	95
FPC 7	55	60	75	65	90	80	95
FPC 8	55	60	75	65	90	80	95
FPC 9	55	60	75	65	90	80	95
FPC 10	55	60	75	65	90	80	95
FPC 11	55	60	75	65	90	80	95
FPC 12	55	60	75	65	90	80	95
FPC 13	55	60	75	65	90	80	95
FPC 14	55	60	75	65	90	80	95
FPC 15	55	60	75	65	90	80	95
FPC 16	55	60	75	65	90	80	95
FPC 17	55	60	75	65	90	80	95
FPC 18	55	60	75	65	90	80	95
FPC 19	55	60	75	65	90	80	95
ADC 0 Intake	56	62	75	63	83	76	95
ADC 0 Exhaust	56	62	75	63	83	76	95
ADC 0 ADC-XF1	70	80	90	90	107	107	115
ADC 0 ADC-XF0	70	80	90	90	107	107	115
ADC 1 Intake	56	62	75	63	83	76	95
ADC 1 Exhaust	56	62	75	63	83	76	95
ADC 1 ADC-XF1	70	80	90	90	107	107	115
ADC 1 ADC-XF0	70	80	90	90	107	107	115
ADC 2 Intake	56	62	75	63	83	76	95
ADC 2 Exhaust	56	62	75	63	83	76	95
ADC 2 ADC-XF1	70	80	90	90	107	107	115
ADC 2 ADC-XF0	70	80	90	90	107	107	115
ADC 3 Intake	56	62	75	63	83	76	95
ADC 3 Exhaust	56	62	75	63	83	76	95
ADC 3 ADC-XF1	70	80	90	90	107	107	115
ADC 3 ADC-XF0	70	80	90	90	107	107	115
ADC 4 Intake	56	62	75	63	83	76	95
ADC 4 Exhaust	56	62	75	63	83	76	95
ADC 4 ADC-XF1	70	80	90	90	107	107	115
ADC 4 ADC-XF0	70	80	90	90	107	107	115
ADC 5 Intake	56	62	75	63	83	76	95
ADC 5 Exhaust	56	62	75	63	83	76	95
ADC 5 ADC-XF1	70	80	90	90	107	107	115
ADC 5 ADC-XF0	70	80	90	90	107	107	115
ADC 6 Intake	56	62	75	63	83	76	95
ADC 6 Exhaust	56	62	75	63	83	76	95
ADC 6 ADC-XF1	70	80	90	90	107	107	115
ADC 6 ADC-XF0	70	80	90	90	107	107	115
ADC 7 Intake	56	62	75	63	83	76	95
ADC 7 Exhaust	56	62	75	63	83	76	95
ADC 7 ADC-XF1	70	80	90	90	107	107	115
ADC 7 ADC-XF0	70	80	90	90	107	107	115
ADC 8 Intake	56	62	75	63	83	76	95
ADC 8 Exhaust	56	62	75	63	83	76	95
ADC 8 ADC-XF1	70	80	90	90	107	107	115
ADC 8 ADC-XF0	70	80	90	90	107	107	115
ADC 9 Intake	56	62	75	63	83	76	95
ADC 9 Exhaust	56	62	75	63	83	76	95
ADC 9 ADC-XF1	70	80	90	90	107	107	115
ADC 9 ADC-XF0	70	80	90	90	107	107	115
ADC 10 Intake	56	62	75	63	83	76	95

ADC 10 Exhaust	56	62	75	63	83	76	95
ADC 10 ADC-XF1	70	80	90	90	107	107	115
ADC 10 ADC-XF0	70	80	90	90	107	107	115
ADC 11 Intake	56	62	75	63	83	76	95
ADC 11 Exhaust	56	62	75	63	83	76	95
ADC 11 ADC-XF1	70	80	90	90	107	107	115
ADC 11 ADC-XF0	70	80	90	90	107	107	115
ADC 12 Intake	56	62	75	63	83	76	95
ADC 12 Exhaust	56	62	75	63	83	76	95
ADC 12 ADC-XF1	70	80	90	90	107	107	115
ADC 12 ADC-XF0	70	80	90	90	107	107	115
ADC 13 Intake	56	62	75	63	83	76	95
ADC 13 Exhaust	56	62	75	63	83	76	95
ADC 13 ADC-XF1	70	80	90	90	107	107	115
ADC 13 ADC-XF0	70	80	90	90	107	107	115
ADC 14 Intake	56	62	75	63	83	76	95
ADC 14 Exhaust	56	62	75	63	83	76	95
ADC 14 ADC-XF1	70	80	90	90	107	107	115
ADC 14 ADC-XF0	70	80	90	90	107	107	115
ADC 15 Intake	56	62	75	63	83	76	95
ADC 15 Exhaust	56	62	75	63	83	76	95
ADC 15 ADC-XF1	70	80	90	90	107	107	115
ADC 15 ADC-XF0	70	80	90	90	107	107	115
ADC 16 Intake	56	62	75	63	83	76	95
ADC 16 Exhaust	56	62	75	63	83	76	95
ADC 16 ADC-XF1	70	80	90	90	107	107	115
ADC 16 ADC-XF0	70	80	90	90	107	107	115
ADC 17 Intake	56	62	75	63	83	76	95
ADC 17 Exhaust	56	62	75	63	83	76	95
ADC 17 ADC-XF1	70	80	90	90	107	107	115
ADC 17 ADC-XF0	70	80	90	90	107	107	115
ADC 18 Intake	56	62	75	63	83	76	95
ADC 18 Exhaust	56	62	75	63	83	76	95
ADC 18 ADC-XF1	70	80	90	90	107	107	115
ADC 18 ADC-XF0	70	80	90	90	107	107	115
ADC 19 Intake	56	62	75	63	83	76	95
ADC 19 Exhaust	56	62	75	63	83	76	95
ADC 19 ADC-XF1	70	80	90	90	107	107	115
ADC 19 ADC-XF0	70	80	90	90	107	107	115

show chassis temperature-thresholds (MX2020 Router with MPC4E)

```
user@host> show chassis temperature-thresholds
```

Fan speed	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)		(degrees C)
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal
Routing Engine 0	70	80	95	95	110	110	112
Routing Engine 1	70	80	95	95	110	110	112
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 0 TCBC-Zone0	60	65	78	75	85	80	95
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95

CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 1 TCBC-Zone0	60	65	78	75	85	80	95
SPMB 0 Intake	56	62	75	63	83	76	95
SPMB 1 Intake	56	62	75	63	83	76	95
SFB 0 Intake-Zone0	56	62	70	70	85	85	89
SFB 0 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 0 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 0 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 0 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 0 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 0 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 0 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 1 Intake-Zone0	56	62	70	70	85	85	89
SFB 1 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 1 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 1 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 1 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 1 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 1 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 1 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 2 Intake-Zone0	56	62	70	70	85	85	89
SFB 2 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 2 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 2 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 2 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 2 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 2 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 2 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 3 Intake-Zone0	56	62	70	70	85	85	89
SFB 3 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 3 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 3 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 3 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 3 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 3 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 3 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 4 Intake-Zone0	56	62	70	70	85	85	89
SFB 4 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 4 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 4 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 4 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 4 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 4 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 4 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 5 Intake-Zone0	56	62	70	70	85	85	89
SFB 5 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 5 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 5 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 5 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 5 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 5 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 5 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 6 Intake-Zone0	56	62	70	70	85	85	89
SFB 6 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 6 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 6 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 6 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 6 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 6 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 6 SFB-XF0-Zone0	70	75	90	85	95	90	100

SFB 7 Intake-Zone0	56	62	70	70	85	85	89
SFB 7 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 7 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 7 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 7 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 7 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 7 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 7 SFB-XF0-Zone0	70	75	90	85	95	90	100
FPC 0	55	60	75	65	90	80	95
FPC 9	55	60	75	65	90	80	95
FPC 10	55	60	75	65	90	80	95
FPC 14	55	60	75	65	95	80	100
FPC 19	55	60	75	65	90	80	95
ADC 0 Intake	50	55	60	60	65	65	80
ADC 0 Exhaust	50	55	60	60	65	65	80
ADC 0 ADC-XF1	70	75	90	85	95	90	100
ADC 0 ADC-XF0	70	75	90	85	95	90	100
ADC 9 Intake	50	55	60	60	65	65	80
ADC 9 Exhaust	50	55	60	60	65	65	80
ADC 9 ADC-XF1	70	75	90	85	95	90	100
ADC 9 ADC-XF0	70	75	90	85	95	90	100
ADC 10 Intake	50	55	60	60	65	65	80
ADC 10 Exhaust	50	55	60	60	65	65	80
ADC 10 ADC-XF1	70	75	90	85	95	90	100
ADC 10 ADC-XF0	70	75	90	85	95	90	100
ADC 14 Intake	50	55	60	60	65	65	80
ADC 14 Exhaust	50	55	60	60	65	65	80
ADC 14 ADC-XF1	70	75	90	85	95	90	100
ADC 14 ADC-XF0	70	75	90	85	95	90	100
ADC 19 Intake	50	55	60	60	65	65	80
ADC 19 Exhaust	50	55	60	60	65	65	80
ADC 19 ADC-XF1	70	75	90	85	95	90	100
ADC 19 ADC-XF0	70	75	90	85	95	90	100

show chassis temperature-thresholds (MX2008 Routers)

```
user@host> show chassis temperature-thresholds
```

Shutdown (degrees C) Item	Fan speed		Yellow alarm		Red alarm		Fire
	(degrees C)		(degrees C)		(degrees C)		
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0 CPU	58	63	78	75	93	90	
98							
Routing Engine 1 CPU	58	63	78	75	93	90	
98							
CB 0 Inlet1	55	60	65	62	75	72	
85							
CB 0 Inlet2	45	50	61	58	80	77	
90							
CB 0 Inlet3	57	62	68	65	80	77	
90							
CB 0 Inlet4	55	60	80	77	90	87	
95							
CB 0 Exhaust1	55	60	65	62	75	72	
85							
CB 0 Exhaust2	50	55	60	57	80	77	
90							

CB 0 Exhaust3 96	70	75	81	78	91	88
CB 0 Exhaust4 105	75	80	90	87	100	97
CB 1 Inlet1 85	55	60	65	62	75	72
CB 1 Inlet2 90	45	50	61	58	80	77
CB 1 Inlet3 90	57	62	68	65	80	77
CB 1 Inlet4 95	55	60	80	77	90	87
CB 1 Exhaust1 85	55	60	65	62	75	72
CB 1 Exhaust2 90	50	55	60	57	80	77
CB 1 Exhaust3 96	70	75	81	78	91	88
CB 1 Exhaust4 105	75	80	90	87	100	97
SFB 0 Inlet1 81	49	54	62	59	76	73
SFB 0 Inlet2 88	65	70	71	68	83	80
SFB 0 Exhaust1 80	45	50	61	58	75	72
SFB 0 Exhaust2 85	60	65	69	66	80	77
SFB 0 SFB2-PF-local 100	65	70	75	72	95	92
SFB 0 SFB2-PF-die 120	88	93	98	95	118	115
SFB 1 Inlet1 81	49	54	62	59	76	73
SFB 1 Inlet2 88	65	70	71	68	83	80
SFB 1 Exhaust1 80	45	50	61	58	75	72
SFB 1 Exhaust2 85	60	65	69	66	80	77
SFB 1 SFB2-PF-local 100	65	70	75	72	95	92
SFB 1 SFB2-PF-die 120	88	93	98	95	118	115
SFB 2 Inlet1 81	49	54	62	59	76	73
SFB 2 Inlet2 88	65	70	71	68	83	80
SFB 2 Exhaust1 80	45	50	61	58	75	72
SFB 2 Exhaust2 85	60	65	69	66	80	77
SFB 2 SFB2-PF-local 100	65	70	75	72	95	92
SFB 2 SFB2-PF-die 120	88	93	98	95	118	115
SFB 3 Inlet1 81	49	54	62	59	76	73
SFB 3 Inlet2 88	65	70	71	68	83	80

SFB 3 Exhaust1 80	45	50	61	58	75	72
SFB 3 Exhaust2 85	60	65	69	66	80	77
SFB 3 SFB2-PF-local 100	65	70	75	72	95	92
SFB 3 SFB2-PF-die 120	88	93	98	95	118	115
SFB 4 Inlet1 81	49	54	62	59	76	73
SFB 4 Inlet2 88	65	70	71	68	83	80
SFB 4 Exhaust1 80	45	50	61	58	75	72
SFB 4 Exhaust2 85	60	65	69	66	80	77
SFB 4 SFB2-PF-local 100	65	70	75	72	95	92
SFB 4 SFB2-PF-die 120	88	93	98	95	118	115
SFB 5 Inlet1 81	49	54	62	59	76	73
SFB 5 Inlet2 88	65	70	71	68	83	80
SFB 5 Exhaust1 80	45	50	61	58	75	72
SFB 5 Exhaust2 85	60	65	69	66	80	77
SFB 5 SFB2-PF-local 100	65	70	75	72	95	92
SFB 5 SFB2-PF-die 120	88	93	98	95	118	115
SFB 6 Inlet1 81	49	54	62	59	76	73
SFB 6 Inlet2 88	65	70	71	68	83	80
SFB 6 Exhaust1 80	45	50	61	58	75	72
SFB 6 Exhaust2 85	60	65	69	66	80	77
SFB 6 SFB2-PF-local 100	65	70	75	72	95	92
SFB 6 SFB2-PF-die 120	88	93	98	95	118	115
SFB 7 Inlet1 81	49	54	62	59	76	73
SFB 7 Inlet2 88	65	70	71	68	83	80
SFB 7 Exhaust1 80	45	50	61	58	75	72
SFB 7 Exhaust2 85	60	65	69	66	80	77
SFB 7 SFB2-PF-local 100	65	70	75	72	95	92
SFB 7 SFB2-PF-die 120	88	93	98	95	118	115
FPC 0 95	55	60	75	65	90	80
FPC 3 110	55	60	75	65	105	80

FPC 5 110	55	60	75	65	105	80
FPC 7 95	55	60	75	65	90	80
FPC 9 Intake 95	60	65	75	75	85	85
FPC 9 Exhaust A 95	60	65	75	75	85	85
FPC 9 Exhaust B 95	60	65	75	75	85	85
FPC 9 XL 0 Chip 110	70	75	85	85	102	102
FPC 9 XL 0 XR2 0 Chip 115	75	80	90	90	105	105
FPC 9 XL 0 XR2 1 Chip 115	75	80	90	90	105	105
FPC 9 XL 1 Chip 110	70	75	85	85	102	102
FPC 9 XL 1 XR2 0 Chip 115	75	80	90	90	105	105
FPC 9 XL 1 XR2 1 Chip 115	75	80	90	90	105	105
FPC 9 XM 0 Chip 110	70	75	85	85	100	100
FPC 9 XM 1 Chip 110	70	75	85	85	100	100
FPC 9 XM 2 Chip 110	70	75	85	85	100	100
FPC 9 XM 3 Chip 110	70	75	85	85	100	100
FPC 9 PCIe Switch Chip 120	80	85	95	95	105	105
ADC 0 Intake 80	50	55	65	65	75	75
ADC 0 Exhaust 80	50	55	65	65	75	75
ADC 0 ADC-XF1 100	70	75	90	85	95	90
ADC 0 ADC-XF0 100	70	75	90	85	95	90
ADC 3 Intake 80	50	55	65	65	75	75
ADC 3 Exhaust 80	50	55	65	65	75	75
ADC 3 ADC-XF1 100	70	75	90	85	95	90
ADC 3 ADC-XF0 100	70	75	90	85	95	90
ADC 5 Intake 80	50	55	65	65	75	75
ADC 5 Exhaust 80	50	55	65	65	75	75
ADC 5 ADC-XF1 100	70	75	90	85	95	90
ADC 5 ADC-XF0 100	70	75	90	85	95	90
ADC 7 Intake 80	50	55	65	65	75	75
ADC 7 Exhaust 80	50	55	65	65	75	75

ADC 7 ADC-XF1 100	70	75	90	85	95	90
ADC 7 ADC-XF0 100	70	75	90	85	95	90

show chassis temperature-thresholds (MX10003 Router)

```
user@host> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0	48	54	85	85	100	100	
102							
Routing Engine 1	48	54	85	85	100	100	
102							
CB 0 Exhaust Temp Sensor	60	65	75	75	85	85	
95							
CB 0 Inlet Temp Sensor	60	65	75	75	85	85	
95							
CB 0 CPU DIE Temp Sensor	83	90	98	98	105	105	
110							
CB 1 Exhaust Temp Sensor	60	65	75	75	85	85	
95							
CB 1 Inlet Temp Sensor	60	65	75	75	85	85	
95							
CB 1 CPU DIE Temp Sensor	83	90	98	98	105	105	
110							
FPC 0 Intake Temp Sensor	40	45	75	70	85	80	
95							
FPC 0 Exhaust-A Temp Sensor	55	60	85	80	90	90	
100							
FPC 0 Exhaust-B Temp Sensor	55	60	85	80	90	90	
100							
FPC 0 EA0 Chip	87	92	97	97	105	105	
110							
FPC 0 EA0-XR0 Chip	88	93	98	98	120	120	
125							
FPC 0 EA0-XR1 Chip	88	93	98	98	120	120	
125							
FPC 0 EA1 Chip	87	92	97	97	105	105	
110							
FPC 0 EA1-XR0 Chip	88	93	98	98	120	120	
125							
FPC 0 EA1-XR1 Chip	88	93	98	98	120	120	
125							
FPC 0 EA2 Chip	87	92	97	97	105	105	
110							
FPC 0 EA2-XR0 Chip	88	93	98	98	120	120	
125							
FPC 0 EA2-XR1 Chip	88	93	98	98	120	120	
125							
FPC 0 PF Chip	89	94	104	104	120	120	
120							
FPC 0 EA0_HMC0 Logic die	88	93	103	103	120	120	
125							

FPC 0 EA0_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA0_HMC1 Logic die 125	88	93	103	103	120	120
FPC 0 EA0_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA0_HMC2 Logic die 125	88	93	103	103	120	120
FPC 0 EA0_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA1_HMC0 Logic die 125	88	93	103	103	120	120
FPC 0 EA1_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA1_HMC1 Logic die 125	88	93	103	103	120	120
FPC 0 EA1_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA1_HMC2 Logic die 125	88	93	103	103	120	120
FPC 0 EA1_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA2_HMC0 Logic die 125	88	93	103	103	120	120
FPC 0 EA2_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA2_HMC1 Logic die 125	88	93	103	103	120	120
FPC 0 EA2_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA2_HMC2 Logic die 125	88	93	103	103	120	120
FPC 0 EA2_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 1 Intake Temp Sensor 95	40	45	75	70	85	80
FPC 1 Exhaust-A Temp Sensor 100	55	60	85	80	90	90
FPC 1 Exhaust-B Temp Sensor 100	55	60	85	80	90	90
FPC 1 EA0 Chip 110	87	92	97	97	105	105
FPC 1 EA0-XR0 Chip 125	88	93	98	98	120	120
FPC 1 EA0-XR1 Chip 125	88	93	98	98	120	120
FPC 1 EA1 Chip 110	87	92	97	97	105	105
FPC 1 EA1-XR0 Chip 125	88	93	98	98	120	120
FPC 1 EA1-XR1 Chip 125	88	93	98	98	120	120
FPC 1 EA2 Chip 110	87	92	97	97	105	105
FPC 1 EA2-XR0 Chip 125	88	93	98	98	120	120
FPC 1 EA2-XR1 Chip 125	88	93	98	98	120	120
FPC 1 PF Chip 120	89	94	104	104	120	120

FPC 1 EA0_HMC0 Logic die	88	93	103	103	120	120
125						
FPC 1 EA0_HMC0 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA0_HMC1 Logic die	88	93	103	103	120	120
125						
FPC 1 EA0_HMC1 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA0_HMC2 Logic die	88	93	103	103	120	120
125						
FPC 1 EA0_HMC2 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA1_HMC0 Logic die	88	93	103	103	120	120
125						
FPC 1 EA1_HMC0 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA1_HMC1 Logic die	88	93	103	103	120	120
125						
FPC 1 EA1_HMC1 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA1_HMC2 Logic die	88	93	103	103	120	120
125						
FPC 1 EA1_HMC2 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA2_HMC0 Logic die	88	93	103	103	120	120
125						
FPC 1 EA2_HMC0 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA2_HMC1 Logic die	88	93	103	103	120	120
125						
FPC 1 EA2_HMC1 DRAM botm	83	88	98	98	120	120
125						
FPC 1 EA2_HMC2 Logic die	88	93	103	103	120	120
125						
FPC 1 EA2_HMC2 DRAM botm	83	88	98	98	120	120
125						

show chassis temperature-thresholds (MX10008 Router)

```
user@host> show chassis temperature-thresholds
```

Fire Shutdown		Fan speed		Yellow alarm		Red alarm
		(degrees C)		(degrees C)		(degrees
C)	(degrees C)					
Item		Normal	High	Normal	Bad fan	Normal
Bad fan	Normal					
Routing Engine 0		65	70	95	95	100
100	110					
Routing Engine 1		65	70	95	95	100
100	110					
CB 0 Intake A Temp Sensor		30	35	80	80	85
85	95					
CB 0 Intake B Temp Sensor		30	35	80	80	85
85	95					
CB 0 Exhaust A Temp Sensor		40	45	80	80	85
85	95					
CB 0 Exhaust B Temp Sensor		40	45	80	80	85
85	95					
CB 0 Middle Temp Sensor		40	45	80	80	85

85	95					
CB 1 Intake A Temp Sensor	85	95	30	35	80	80 85
CB 1 Intake B Temp Sensor	85	95	30	35	80	80 85
CB 1 Exhaust A Temp Sensor	85	95	40	45	80	80 85
CB 1 Exhaust B Temp Sensor	85	95	40	45	80	80 85
CB 1 Middle Temp Sensor	85	95	40	45	80	80 85
FPC 0 Intake-A Temp Sensor	85	90	52	62	72	72 85
FPC 0 Exhaust-A Temp Sensor	103	108	75	85	98	98 103
FPC 0 Exhaust-B Temp Sensor	103	108	75	85	98	98 103
FPC 0 EA0 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA0_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA0_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA1 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA1_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA1_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA2 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA2_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA2_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA3 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA3_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA3_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA4 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA4_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA4_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA5 Temp Sensor	100	105	62	72	90	90 100
FPC 0 EA5_XR0 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA5_XR1 Temp Sensor	105	108	77	87	100	100 105
FPC 0 EA0_HMC0 Logic die	110	115	79	89	103	103 110
FPC 0 EA0_HMC0 DRAM botm	105	110	74	84	98	98 105
FPC 0 EA0_HMC1 Logic die	110	115	79	89	103	103 110
FPC 0 EA0_HMC1 DRAM botm			74	84	98	98 105

105	110				
FPC 0 EA0_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA0_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA1_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA1_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA1_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA1_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA1_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA1_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA2_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA2_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA2_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA2_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA2_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA2_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA3_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA3_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA3_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA3_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA3_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA3_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA4_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA4_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA4_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA4_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA4_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 0 EA4_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA5_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 0 EA5_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 0 EA5_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 0 EA5_HMC1 DRAM botm	74	84	98	98	105

105	110					
FPC 0 EA5_HMC2	Logic die	79	89	103	103	110
110	115					
FPC 0 EA5_HMC2	DRAM botm	74	84	98	98	105
105	110					
FPC 2 Intake-A	Temp Sensor	52	62	72	72	85
85	90					
FPC 2 Exhaust-A	Temp Sensor	75	85	98	98	103
103	108					
FPC 2 Exhaust-B	Temp Sensor	75	85	98	98	103
103	108					
FPC 2 EA0	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA0_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA0_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA1	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA1_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA1_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA2	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA2_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA2_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA3	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA3_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA3_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA4	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA4_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA4_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA5	Temp Sensor	62	72	90	90	100
100	105					
FPC 2 EA5_XR0	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA5_XR1	Temp Sensor	77	87	100	100	105
105	108					
FPC 2 EA0_HMC0	Logic die	79	89	103	103	110
110	115					
FPC 2 EA0_HMC0	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA0_HMC1	Logic die	79	89	103	103	110
110	115					
FPC 2 EA0_HMC1	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA0_HMC2	Logic die	79	89	103	103	110
110	115					
FPC 2 EA0_HMC2	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA1_HMC0	Logic die	79	89	103	103	110

110	115				
FPC 2 EA1_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA1_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA1_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA1_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA1_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA2_HMC0	Logic die	79	89	103	103 110
110	115				
FPC 2 EA2_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA2_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA2_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA2_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA2_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA3_HMC0	Logic die	79	89	103	103 110
110	115				
FPC 2 EA3_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA3_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA3_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA3_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA3_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA4_HMC0	Logic die	79	89	103	103 110
110	115				
FPC 2 EA4_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA4_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA4_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA4_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA4_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA5_HMC0	Logic die	79	89	103	103 110
110	115				
FPC 2 EA5_HMC0	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA5_HMC1	Logic die	79	89	103	103 110
110	115				
FPC 2 EA5_HMC1	DRAM botm	74	84	98	98 105
105	110				
FPC 2 EA5_HMC2	Logic die	79	89	103	103 110
110	115				
FPC 2 EA5_HMC2	DRAM botm	74	84	98	98 105
105	110				
FPC 3 Intake-A	Temp Sensor	52	62	72	72 85

85	90				
FPC 3 Exhaust-A Temp Sensor	75	85	98	98	103
103 108					
FPC 3 Exhaust-B Temp Sensor	75	85	98	98	103
103 108					
FPC 3 EA0 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA0_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA0_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA1 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA1_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA1_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA2 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA2_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA2_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA3 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA3_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA3_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA4 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA4_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA4_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA5 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA5_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA5_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA0_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 3 EA0_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA0_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 3 EA0_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA0_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 3 EA0_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA1_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 3 EA1_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA1_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 3 EA1_HMC1 DRAM botm	74	84	98	98	105

105	110					
FPC 3 EA1_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA1_HMC2 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA2_HMC0 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA2_HMC0 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA2_HMC1 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA2_HMC1 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA2_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA2_HMC2 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA3_HMC0 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA3_HMC0 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA3_HMC1 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA3_HMC1 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA3_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA3_HMC2 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA4_HMC0 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA4_HMC0 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA4_HMC1 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA4_HMC1 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA4_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA4_HMC2 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA5_HMC0 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA5_HMC0 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA5_HMC1 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA5_HMC1 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA5_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA5_HMC2 DRAM botm	74	84	98	98	105	
105	110					
SFB 0 Intake-A	65	75	85	85	95	
95	105					
SFB 0 Intake-B	65	75	85	85	95	
95	105					
SFB 0 Exhaust-A	75	85	95	95	95	
95	105					
SFB 0 Exhaust-B	75	85	95	95	95	

95	105					
SFB 0 PF0		65	75	100	100	105
105	115					
SFB 0 PF1		65	75	100	100	105
105	115					
SFB 1 Intake-A		65	75	85	85	95
95	105					
SFB 1 Intake-B		65	75	85	85	95
95	105					
SFB 1 Exhaust-A		75	85	95	95	95
95	105					
SFB 1 Exhaust-B		75	85	95	95	95
95	105					
SFB 1 PF0		65	75	100	100	105
105	115					
SFB 1 PF1		65	75	100	100	105
105	115					
SFB 2 Intake-A		65	75	85	85	95
95	105					
SFB 2 Intake-B		65	75	85	85	95
95	105					
SFB 2 Exhaust-A		75	85	95	95	95
95	105					
SFB 2 Exhaust-B		75	85	95	95	95
95	105					
SFB 2 PF0		65	75	100	100	105
105	115					
SFB 2 PF1		65	75	100	100	105
105	115					
SFB 3 Intake-A		65	75	85	85	95
95	105					
SFB 3 Intake-B		65	75	85	85	95
95	105					
SFB 3 Exhaust-A		75	85	95	95	95
95	105					
SFB 3 Exhaust-B		75	85	95	95	95
95	105					
SFB 3 PF0		65	75	100	100	105
105	115					
SFB 3 PF1		65	75	100	100	105
105	115					
SFB 4 Intake-A		65	75	85	85	95
95	105					
SFB 4 Intake-B		65	75	85	85	95
95	105					
SFB 4 Exhaust-A		75	85	95	95	95
95	105					
SFB 4 Exhaust-B		75	85	95	95	95
95	105					
SFB 4 PF0		65	75	100	100	105
105	115					
SFB 4 PF1		65	75	100	100	105
105	115					
SFB 5 Intake-A		65	75	85	85	95
95	105					
SFB 5 Intake-B		65	75	85	85	95
95	105					
SFB 5 Exhaust-A		75	85	95	95	95
95	105					
SFB 5 Exhaust-B		75	85	95	95	95

95	105					
SFB 5 PF0		65	75	100	100	105
105	115					
SFB 5 PF1		65	75	100	100	105
105	115					

show chassis temperature-thresholds (MX204 Router)

```
user@host> show chassis temperature-thresholds
```

Fire Shutdown		Fan speed		Yellow alarm		Red alarm
		(degrees C)		(degrees C)		(degrees
Item	(degrees C)	Normal	High	Normal	Bad fan	Normal
Bad fan	Normal					
Routing Engine		48	54	85	85	100
100	102					
CB Top Right Inlet Sensor		35	40	63	63	85
85	95					
CB Top Left Inlet Sensor		40	45	65	65	85
85	95					
CB Top Right Exhaust Sensor		45	50	68	68	85
85	95					
CB Top Left Exhaust Sensor		65	70	78	78	85
85	95					
CB CPU Core-0 Temp		65	70	80	80	90
90	100					
CB CPU Core-1 Temp		65	70	80	80	90
90	100					
CB CPU Core-2 Temp		65	70	80	80	90
90	100					
CB CPU Core-3 Temp		65	70	80	80	90
90	100					
CB CPU Core-4 Temp		65	70	80	80	90
90	100					
CB CPU Core-5 Temp		65	70	80	80	90
90	100					
CB CPU Core-6 Temp		65	70	80	80	90
90	100					
CB CPU Core-7 Temp		65	70	80	80	90
90	100					
FPC EA0_HMC0 Logic die		85	90	95	95	105
105	110					
FPC EA0_HMC0 DRAM botm		80	85	90	90	105
105	110					
FPC EA0_HMC1 Logic die		85	90	95	95	105
105	110					
FPC EA0_HMC1 DRAM botm		80	85	90	90	105
105	110					
FPC EA0 Chip		92	97	103	103	109
109	115					
FPC EA0-XR0 Chip		85	90	98	98	103
103	110					
FPC EA0-XR1 Chip		85	90	98	98	103
103	110					

show chassis temperature-thresholds (PTX10008 Routers)

user@host> show chassis temperature-thresholds

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0	48	54	85	85	100	100	
102							
Routing Engine 1	48	54	85	85	100	100	
102							
CB 0 Intake Temp Sensor	30	35	80	80	85	85	
95							
CB 0 Exhaust Temp Sensor	30	35	80	80	85	85	
95							
CB 0 CPU Die Temp Sensor	40	45	95	95	100	100	
110							
CB 1 Intake Temp Sensor	30	35	80	80	85	85	
95							
CB 1 Exhaust Temp Sensor	30	35	80	80	85	85	
95							
CB 1 CPU Die Temp Sensor	40	45	95	95	100	100	
110							
FPC 0 Intake-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Intake-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Exhaust-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Exhaust-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Exhaust-C Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 PE0 Temp Sensor	40	45	100	100	105	105	
115							
FPC 0 PE1 Temp Sensor	40	45	100	100	105	105	
115							
FPC 0 PE2 Temp Sensor	40	45	100	100	105	105	
115							
FPC 0 LCPU Temp Sensor	40	45	95	95	100	100	
110							
FPC 5 Intake-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Intake-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Exhaust-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Exhaust-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Exhaust-C Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 PE0 Temp Sensor	40	45	100	100	105	105	
115							
FPC 5 PE1 Temp Sensor	40	45	100	100	105	105	
115							
FPC 5 PE2 Temp Sensor	40	45	100	100	105	105	
115							
FPC 5 PE3 Temp Sensor	40	45	100	100	105	105	

```

115
FPC 5 PE4 Temp Sensor      40  45  100  100  105  105
115
FPC 5 PE5 Temp Sensor      40  45  100  100  105  105
115
FPC 5 LCPU Temp Sensor     40  45   95   95  100  100
110
FPC 6 Intake-A Temp Sensor  30  35   80   80   85   85
95
FPC 6 Intake-B Temp Sensor  30  35   80   80   85   85
95
FPC 6 Exhaust-A Temp Sensor 30  35   80   80   85   85
95
FPC 6 Exhaust-B Temp Sensor 30  35   80   80   85   85
95
FPC 6 Exhaust-C Temp Sensor 30  35   80   80   85   85
95
FPC 6 PE0 Temp Sensor      40  45  100  100  105  105
115
FPC 6 PE1 Temp Sensor      40  45  100  100  105  105
115
FPC 6 PE2 Temp Sensor      40  45  100  100  105  105
115
FPC 6 PE3 Temp Sensor      40  45  100  100  105  105
115
FPC 6 PE4 Temp Sensor      40  45  100  100  105  105
115
FPC 6 PE5 Temp Sensor      40  45  100  100  105  105
115
FPC 6 LCPU Temp Sensor     40  45   95   95  100  100
110
SIB 0 Intake-A Temp Sensor  40  45   90   90   95   95
105
SIB 0 Intake-B Temp Sensor  40  45   90   90   95   95
105
SIB 0 Exhaust-A Temp Sensor 40  45   90   90   95   95
105
SIB 0 Exhaust-B Temp Sensor 40  45   90   90   95   95
105
SIB 0 PF0 Temp Sensor      50  55  100  100  105  105
115
SIB 0 PF1 Temp Sensor      50  55  100  100  105  105
115
SIB 1 Intake-A Temp Sensor  40  45   90   90   95   95
105
SIB 1 Intake-B Temp Sensor  40  45   90   90   95   95
105
SIB 1 Exhaust-A Temp Sensor 40  45   90   90   95   95
105
SIB 1 Exhaust-B Temp Sensor 40  45   90   90   95   95
105
SIB 1 PF0 Temp Sensor      50  55  100  100  105  105
115
SIB 1 PF1 Temp Sensor      50  55  100  100  105  105
115

```

show chassis temperature-thresholds (T4000 Core Routers)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed		Yellow alarm		Red alarm		Fire Shutdown
	(degrees C)		(degrees C)		(degrees C)		(degrees C)
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal
Chassis default	48	54	65	55	75	65	100
Routing Engine 0	55	65	85	85	100	100	102
Routing Engine 1	55	65	85	85	100	100	102
FPC 0	63	68	75	70	90	83	95
FPC 3	63	68	75	70	90	83	95
FPC 5	56	62	75	63	83	76	95
FPC 6	63	68	75	70	90	83	95
SIB 0	64	70	76	72	87	84	95
SIB 1	64	70	76	72	87	84	95
SIB 2	64	70	76	72	87	84	95
SIB 3	64	70	76	72	87	84	95
SIB 4	64	70	76	72	87	84	95

show chassis temperature-thresholds (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds
```

```
sfc0-re0:
```

Item	Fan speed		Yellow alarm		Red alarm	
	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
SIB F13 0	64	70	76	72	90	84
SIB F13 3	64	70	76	72	90	84
SIB F13 6	64	70	76	72	90	84
SIB F13 8	64	70	76	72	90	84
SIB F13 11	64	70	76	72	90	84
SIB F13 12	64	70	76	72	90	84
SIB F2S 16	64	70	76	72	90	84
SIB F2S 17	64	70	76	72	90	84
SIB F2S 18	64	70	76	72	90	84
SIB F2S 19	64	70	76	72	90	84
SIB F2S 20	64	70	76	72	90	84
SIB F2S 21	64	70	76	72	90	84
SIB F2S 22	64	70	76	72	90	84
SIB F2S 23	64	70	76	72	90	84
SIB F2S 24	64	70	76	72	90	84
SIB F2S 25	64	70	76	72	90	84
SIB F2S 26	64	70	76	72	90	84
SIB F2S 27	64	70	76	72	90	84
SIB F2S 28	64	70	76	72	90	84
SIB F2S 29	64	70	76	72	90	84
SIB F2S 30	64	70	76	72	90	84
SIB F2S 31	64	70	76	72	90	84
SIB F2S 32	64	70	76	72	90	84
SIB F2S 33	64	70	76	72	90	84
SIB F2S 34	64	70	76	72	90	84
SIB F2S 35	64	70	76	72	90	84

```
lcc0-re0:
```

Fan speed		Yellow alarm		Red alarm	
-----------	--	--------------	--	-----------	--

Item	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
FPC 7	56	62	75	63	83	76
SIB 0	48	54	65	60	80	75
SIB 1	48	54	65	60	80	75
SIB 2	48	54	65	60	80	75
SIB 3	48	54	65	60	80	75
SIB 4	48	54	65	60	80	75

lcc1-re0:

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
...						

show chassis temperature-thresholds lcc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds lcc 1
```

lcc1-re0:

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
SIB 0	48	54	65	60	80	75
SIB 1	48	54	65	60	80	75
SIB 2	48	54	65	60	80	75
SIB 3	48	54	65	60	80	75
SIB 4	48	54	65	60	80	75

show chassis temperature-thresholds sfc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds sfc 0
```

sfc0-re0:

Fan speed		Yellow alarm		Red alarm	
-----------	--	--------------	--	-----------	--

Item	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
SIB F13 0	64	70	76	72	90	84
SIB F13 3	64	70	76	72	90	84
SIB F13 6	64	70	76	72	90	84
SIB F13 8	64	70	76	72	90	84
SIB F13 11	64	70	76	72	90	84
SIB F13 12	64	70	76	72	90	84
SIB F2S 16	64	70	76	72	90	84
SIB F2S 17	64	70	76	72	90	84
SIB F2S 18	64	70	76	72	90	84
SIB F2S 19	64	70	76	72	90	84
SIB F2S 20	64	70	76	72	90	84
SIB F2S 21	64	70	76	72	90	84
SIB F2S 22	64	70	76	72	90	84
SIB F2S 23	64	70	76	72	90	84
SIB F2S 24	64	70	76	72	90	84
SIB F2S 25	64	70	76	72	90	84
SIB F2S 26	64	70	76	72	90	84
SIB F2S 27	64	70	76	72	90	84
SIB F2S 28	64	70	76	72	90	84
SIB F2S 29	64	70	76	72	90	84
SIB F2S 30	64	70	76	72	90	84
SIB F2S 31	64	70	76	72	90	84
SIB F2S 32	64	70	76	72	90	84
SIB F2S 33	64	70	76	72	90	84
SIB F2S 34	64	70	76	72	90	84
SIB F2S 35	64	70	76	72	90	84

show chassis temperature-thresholds (TX Matrix Plus routers with 3D SIBs)

```
user@host> show chassis temperature-thresholds
```

```
sfc0-re0:
```

Shutdown (degrees C) Item	Fan speed		Yellow alarm		Red alarm		Fire
	(degrees C)		(degrees C)		(degrees C)		
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Chassis default	48	54	65	55	75	65	
100							
Routing Engine 0	70	75	90	87	102	97	
115							
Routing Engine 1	70	75	90	87	102	97	
115							
SIB F13 0 Board	60	65	78	75	85	80	
95							
SIB F13 0 XF Junction	70	75	82	74	105	100	
107							
SIB F13 4 Board	60	65	78	75	85	80	
95							
SIB F13 4 XF Junction	70	75	82	74	105	100	
107							
SIB F13 6 Board	60	65	78	75	85	80	
95							

SIB F13 6 XF Junction 107	70	75	82	74	105	100
SIB F2S 16 Board 95	60	65	78	75	85	80
SIB F2S 16 XF Junction 107	70	75	82	74	105	100
SIB F2S 17 Board 95	60	65	78	75	85	80
SIB F2S 17 XF Junction 107	70	75	82	74	105	100
SIB F2S 18 Board 95	60	65	78	75	85	80
SIB F2S 18 XF Junction 107	70	75	82	74	105	100
SIB F2S 19 Board 95	60	65	78	75	85	80
SIB F2S 19 XF Junction 107	70	75	82	74	105	100
SIB F2S 24 Board 95	60	65	78	75	85	80
SIB F2S 24 XF Junction 107	70	75	82	74	105	100
SIB F2S 25 Board 95	60	65	78	75	85	80
SIB F2S 25 XF Junction 107	70	75	82	74	105	100
SIB F2S 26 Board 95	60	65	78	75	85	80
SIB F2S 26 XF Junction 107	70	75	82	74	105	100
SIB F2S 27 Board 95	60	65	78	75	85	80
SIB F2S 27 XF Junction 107	70	75	82	74	105	100

lcc0-re0:

Shutdown (degrees C) Item Normal	Fan speed		Yellow alarm		Red alarm		Fire
	(degrees C)		(degrees C)		(degrees C)		
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Chassis default 100	48	54	65	55	75	65	
Routing Engine 0 102	55	65	85	85	100	100	
FPC 0 95	63	68	75	70	90	83	
FPC 1 95	56	62	75	63	83	76	
FPC 7 95	56	62	75	63	83	76	
SIB 0 95	64	70	76	72	87	84	
SIB 0 ASIC Junction 107	63	68	75	70	105	100	
SIB 2 95	64	70	76	72	87	84	
SIB 2 ASIC Junction	63	68	75	70	105	100	

107						
SIB 3	64	70	76	72	87	84
95						
SIB 3 ASIC Junction	63	68	75	70	105	100
107						

show chassis temperature-thresholds (QFX3500 Switch and QFX3600)

```
user@switch> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
rmal						
FPC Sensor TopLeft I	48	56	53	43	56	46
FPC Sensor TopRight I	46	54	51	41	54	44
FPC Sensor TopLeft E	58	65	62	52	65	55
FPC Sensor TopRight E	56	64	61	51	64	54
FPC Sensor TopMiddle I	58	64	61	51	64	54
FPC Sensor TopMiddle E	67	74	71	61	74	64
FPC Sensor Bottom I	59	67	64	54	67	57
FPC Sensor Bottom E	66	73	70	60	73	63
FPC Sensor Die Temp	69	75	72	62	75	65
FPC Sensor Mgmt Brd I	46	54	51	41	54	44
FPC Sensor Switch I	56	63	60	50	63	53

show chassis temperature-thresholds interconnect-device (QFabric System)

```
user@switch> show chassis temperature-thresholds interconnect-device interconnect1
```

Item	Fan speed		Yellow alarm		Red alarm	
	Normal	High	Normal	Bad fan	Normal	Bad fan
temperature-thresholds interconnect-device interconnect1						
Chassis default	48	54	65	55	75	65

show chassis temperature-thresholds (PTX5000 Packet Transport Router)

```
user@switch> show chassis temperature-thresholds
```

```
user@switch> show chassis temperature-thresholds
```

Item	Fan speed		Yellow alarm		Red alarm		Fire
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Shutdown							
(degrees C)							
Routing Engine 0	80	90	95	85	105	95	
115							
CB 0 Exhaust A	60	65	78	75	85	80	
95							
CB 0 Exhaust B	60	65	78	75	85	80	
95							
CB 1 Exhaust A	60	65	78	75	85	80	
95							
CB 1 Exhaust B	60	65	78	75	85	80	
95							
FPC 3 Exhaust A	80	90	95	85	105	95	
115							

FPC 3 Exhaust B 115	80	90	95	85	105	95
FPC 3 TL5 115	80	90	95	85	105	95
FPC 3 TQ5 115	80	90	95	85	105	95
FPC 3 TL6 115	80	90	95	85	105	95
FPC 3 TQ6 115	80	90	95	85	105	95
FPC 3 TL1 115	80	90	95	85	105	95
FPC 3 TQ1 115	80	90	95	85	105	95
FPC 3 TL2 115	80	90	95	85	105	95
FPC 3 TQ2 115	80	90	95	85	105	95
FPC 3 TL4 115	80	90	95	85	105	95
FPC 3 TQ4 115	80	90	95	85	105	95
FPC 3 TL7 115	80	90	95	85	105	95
FPC 3 TQ7 115	80	90	95	85	105	95
FPC 3 TL0 115	80	90	95	85	105	95
FPC 3 TQ0 115	80	90	95	85	105	95
FPC 3 TL3 115	80	90	95	85	105	95
FPC 3 TQ3 115	80	90	95	85	105	95
SIB 0 Exhaust 95	60	65	78	75	85	80
SIB 0 Junction 115	75	80	90	85	105	95
SIB 1 Exhaust 95	60	65	78	75	85	80
SIB 1 Junction 115	75	80	90	85	105	95
SIB 2 Exhaust 95	60	65	78	75	85	80
SIB 2 Junction 115	75	80	90	85	105	95
SIB 3 Exhaust 95	60	65	78	75	85	80
SIB 3 Junction 115	75	80	90	85	105	95
SIB 4 Exhaust 95	60	65	78	75	85	80
SIB 4 Junction 115	75	80	90	85	105	95
SIB 5 Exhaust 95	60	65	78	75	85	80
SIB 5 Junction 115	75	80	90	85	105	95
SIB 6 Exhaust 95	60	65	78	75	85	80

SIB 6 Junction 115	75	80	90	85	105	95
SIB 7 Exhaust 95	60	65	78	75	85	80
SIB 7 Junction 115	75	80	90	85	105	95
SIB 8 Exhaust 95	60	65	78	75	85	80
SIB 8 Junction 115	75	80	90	85	105	95

show chassis temperature-thresholds (PTX1000 Packet Transport Router)

```
user@host> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
FPC 0 Intake Temp Sensor 75	30	65	65	65	70	70	
FPC 0 Exhaust Temp Sensor 75	30	65	65	65	70	70	
FPC 0 Mezz Temp Sensor 0 75	30	65	65	65	70	70	
FPC 0 Mezz Temp Sensor 1 75	30	65	65	65	70	70	
FPC 0 PE2 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE1 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PF0 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE0 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE5 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE4 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PF1 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE3 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 CPU Die Temp Sensor 103	50	90	90	90	100	100	
FPC 0 OCX0 Temp Sensor 103	50	90	90	90	100	100	

show chassis temperature-thresholds (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis temperature-thresholds
```

Fan speed (degrees C)	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
Item	Normal	High	Normal	Bad fan	Normal	Bad fan
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 0	55	60	75	65	90	80
95						
FPC 1	55	60	75	65	90	80
95						
FPC 2	55	60	75	65	90	80
95						
FPC 4	55	60	75	65	90	80
95						
FPC 5	55	60	75	65	90	80
95						

show chassis temperature-thresholds (EX9251 Switches)

```
user@switch> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine			48	54	85	85	100
100 102							
CB Top Right Inlet Sensor			35	40	63	63	85
85 95							
CB Top Left Inlet Sensor			40	45	65	65	85
85 95							
CB Top Right Exhaust Sensor			45	50	68	68	85
85 95							
CB Top Left Exhaust Sensor			65	70	78	78	85
85 95							
CB CPU Core-0 Temp			65	70	80	80	90
90 100							
CB CPU Core-1 Temp			65	70	80	80	90
90 100							
CB CPU Core-2 Temp			65	70	80	80	90
90 100							
CB CPU Core-3 Temp			65	70	80	80	90
90 100							
CB CPU Core-4 Temp			65	70	80	80	90
90 100							
CB CPU Core-5 Temp			65	70	80	80	90
90 100							
CB CPU Core-6 Temp			65	70	80	80	90
90 100							
CB CPU Core-7 Temp			65	70	80	80	90
90 100							

FPC EA0_HMC0 Logic die	85	90	95	95	105
105 110					
FPC EA0_HMC0 DRAM botm	80	85	90	90	105
105 110					
FPC EA0_HMC1 Logic die	85	90	95	95	105
105 110					
FPC EA0_HMC1 DRAM botm	80	85	90	90	105
105 110					
FPC EA0 Chip	92	97	103	103	109
109 115					
FPC EA0-XR0 Chip	85	90	98	98	103
103 110					
FPC EA0-XR1 Chip	85	90	98	98	103
103 110					

show chassis temperature-thresholds (EX9253 witches)

```
user@switch> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
	(degrees C)		(degrees C)		(degrees C)		
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0			48	54	85	85	100
100 102							
CB 0 Exhaust Temp Sensor			60	65	75	75	85
85 95							
CB 0 Inlet Temp Sensor			60	65	75	75	85
85 95							
CB 0 CPU DIE Temp Sensor			83	90	98	98	105
105 110							
CB 1 Exhaust Temp Sensor			60	65	75	75	85
85 95							
CB 1 Inlet Temp Sensor			60	65	75	75	85
85 95							
CB 1 CPU DIE Temp Sensor			83	90	98	98	105
105 110							
FPC 0 Intake Temp Sensor			40	45	75	70	85
80 95							
FPC 0 Exhaust-A Temp Sensor			55	60	85	80	90
90 100							
FPC 0 Exhaust-B Temp Sensor			55	60	85	80	90
90 100							
FPC 0 EA0 Chip			87	92	97	97	105
105 110							
FPC 0 EA0-XR0 Chip			88	93	98	98	120
120 125							
FPC 0 EA0-XR1 Chip			88	93	98	98	120
120 125							
FPC 0 EA1 Chip			87	92	97	97	105
105 110							
FPC 0 EA1-XR0 Chip			88	93	98	98	120
120 125							
FPC 0 EA1-XR1 Chip			88	93	98	98	120
120 125							
FPC 0 EA2 Chip			87	92	97	97	105
105 110							

FPC 0 EA2-XR0 Chip	88	93	98	98	120
120 125					
FPC 0 EA2-XR1 Chip	88	93	98	98	120
120 125					
FPC 0 PF Chip	89	94	104	104	120
120 120					
FPC 0 EA0_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 0 EA0_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA0_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 0 EA0_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA0_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 0 EA0_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA1_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 0 EA1_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA1_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 0 EA1_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA1_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 0 EA1_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA2_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 0 EA2_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA2_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 0 EA2_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA2_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 0 EA2_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 1 Intake Temp Sensor	40	45	75	70	85
80 95					
FPC 1 Exhaust-A Temp Sensor	55	60	85	80	90
90 100					
FPC 1 Exhaust-B Temp Sensor	55	60	85	80	90
90 100					
FPC 1 EA0 Chip	87	92	97	97	105
105 110					
FPC 1 EA0-XR0 Chip	88	93	98	98	120
120 125					
FPC 1 EA0-XR1 Chip	88	93	98	98	120
120 125					
FPC 1 EA1 Chip	87	92	97	97	105
105 110					
FPC 1 EA1-XR0 Chip	88	93	98	98	120
120 125					
FPC 1 EA1-XR1 Chip	88	93	98	98	120
120 125					

FPC 1 EA2 Chip	87	92	97	97	105
105 110					
FPC 1 EA2-XR0 Chip	88	93	98	98	120
120 125					
FPC 1 EA2-XR1 Chip	88	93	98	98	120
120 125					
FPC 1 PF Chip	89	94	104	104	120
120 120					
FPC 1 EA0_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 1 EA0_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA0_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 1 EA0_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA0_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 1 EA0_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA1_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 1 EA1_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA1_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 1 EA1_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA1_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 1 EA1_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA2_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 1 EA2_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA2_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 1 EA2_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA2_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 1 EA2_HMC2 DRAM botm	83	88	98	98	120
120 125					

show interfaces extensive satellite-device

Syntax	<code>show interfaces extensive satellite-device (device-alias all)</code>
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Enterprise.
Description	Display the satellite device extended ports in a Junos Fusion.
Options	<p>device-alias <i>device-alias</i>—Display extended port information for the satellite device using the specified device alias only.</p> <p>all—Display information for all extended ports and aggregated Ethernet interfaces with extended ports as members configured on all of the satellite devices.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	show interfaces extensive satellite-device all on page 837
Output Fields	Table 40 on page 831 lists the output fields for the show interfaces extensive satellite-device command. Output fields are listed in the approximate order in which they appear.

Table 40: show interfaces extensive satellite-device Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
Device flags	Information about the physical device.	All levels
Flow control	Flow control status: Enabled or Disabled .	All levels
	NOTE: This field is only displayed if asymmetric flow control is not configured.	
Pad to minimum frame size	Pad Tx VLAN-tagged frame to minimum of 68 bytes.	
Device flags	Information about the physical device.	All levels
Interface flags	Information about the interface.	All levels

Table 40: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
Current address	Configured MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2008-01-16 10:52:40 UTC (3d 22:58 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Extended port information	Satellite device port ID	
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>NOTE: The bandwidth bps counter is not enabled.</p>	detail extensive
IPv6 transit statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. <p>NOTE: The bandwidth bps counter is not enabled.</p>	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are greater than the giant threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle. • Resource errors—Sum of transmit drops. 	extensive

Table 40: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Queue Number	The CoS queue number and the forwarding classes mapped to the queue number. The Mapped forwarding class column lists the forwarding classes mapped to each CoS queue.	detail extensive
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the switch configuration, an alarm can ring the red or yellow alarm bell on the switch, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link.</p> <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none

Table 40: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem.</p> <ul style="list-style-type: none"> • Total octets and total packets—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. • Unicast packets, Broadcast packets, and Multicast packets—Number of unicast, broadcast, and multicast packets. • CRC/Align errors—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error). • FIFO error—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning. • MAC control frames—Number of MAC control frames. • MAC pause frames—Number of MAC control frames with pause operational code. • Oversized frames—Number of packets that exceeds the configured MTU. • Jabber frames—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms. • Fragment frames—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted. • VLAN tagged frames—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. This counter is not supported on EX Series switches and is always displayed as 0. • Code violations—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error." 	extensive
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem.</p>	extensive

Table 40: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> • Destination slot—FPC slot number. • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface.	All levels
Statistics	<ul style="list-style-type: none"> • Packets • pps • Bytes • bps 	All levels
Bundle	Provide information for each active bundle link. <ul style="list-style-type: none"> • Input <ul style="list-style-type: none"> • Packets— • pps • Bytes • bps • Output <ul style="list-style-type: none"> • Packets— • pps • Bytes • bps 	All levels

Table 40: *show interfaces extensive satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
Adaptive Statistics	<ul style="list-style-type: none"> • Adaptive Adjusts • Adaptive Scans • Adaptive Updates 	All levels
Link	Link state: up or down.	All levels
LACP info	<p>LACP state information for each aggregated interface:</p> <ul style="list-style-type: none"> • Role priority—Role played by the interface. It can be one of the following: <ul style="list-style-type: none"> • Actor—Local device participating in LACP negotiation. • Partner—Remote device participating in LACP negotiation. • System identifier—48-bit (6-byte) globally unique field. • System priority—LACP system priority at the aggregated Ethernet interface level. This system priority value takes precedence over a system priority value configured at the global [edit chassis] hierarchy level. • Port number • Port key • Port 	All levels
LACP Statistics	<p>LACP statistics are returned when the extensive option is used and provides the following information:</p> <ul style="list-style-type: none"> • LACP Rx—LACP received counter that increments for each normal hello. • LACP Tx—Number of LACP transmit packet errors logged. • Unknown Rx—Number of unrecognized packet errors logged. • Illegal Rx—Number of invalid packets received. 	All levels
Marker statistics	<p>Marker statistics are returned when the extensive option is used and provides the following information:</p> <ul style="list-style-type: none"> • Marker Rx—Marker received counter that increments for each normal hello. • Resp Tx—Number of RESP transmit packet errors logged. • Unknown Rx—Number of unrecognized packet errors logged. • Illegal Rx—Number of invalid packets received. 	All levels
Protocol	Protocol family configured on the logical interface.	All levels
MTU	MTU size on the logical interface. If the MTU value is negotiated down to meet the MRRU requirement on the remote side, this value is marked Adjusted.	All levels
Generation	Unique number for use by Juniper Networks technical support only.	All levels
Route table	Routing table in which this address exists. For example, Route table:0 refers to inet.0.	All levels
Mesh table	Information regarding mesh topology.	All levels

Sample Output

show interfaces extensive satellite-device all

```
user@aggregation-device> show interfaces extensive satellite-device all
```

```
Physical interface: ae0 (Extended Port, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 574, Generation: 131
  Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None, MAC-REWRITE
  Error: None, Loopback: Disabled, Source filtering: Disabled,
  Flow control: Disabled
  Pad to minimum frame size: Disabled
  Minimum links needed: 1, Minimum bandwidth needed: 1bps
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Current address: f4:b5:2f:f7:3f:c0, Hardware address: f4:b5:2f:f7:3f:c0
  Last flapped   : 2015-03-31 18:36:43 PDT (07:05:56 ago)
  Statistics last cleared: Never
  Extended port information:
    Satellite device port id : 415
  Traffic statistics:
    Input bytes  :          13515908          2032 bps
    Output bytes :          12289920          2032 bps
    Input packets:           99514           2 pps
    Output packets:         96015           2 pps
  IPv6 transit statistics:
    Input bytes  :              0
    Output bytes :              0
    Input packets:              0
    Output packets:             0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
  0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
  0
  Egress queues: 8 supported, 7 in use
  Queue counters:      Queued packets  Transmitted packets  Dropped packets

    0                   0              95867                  0
    1                   0              0                    0
    2                   0              0                    0
    3                   0              0                    0
    4                   0              0                    0
    5                   0              0                    0
    7                   0              0                    0

  Queue number:      Mapped forwarding classes
    0                 FC0
    1                 FC1
    2                 FC2
    3                 FC3
    4                 FC4
    5                 FC5, be-3
```

```

7                                be-2

Logical interface ae0.0 (Index 337) (SNMP ifIndex 575) (Generation 1194)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics          Packets          pps          Bytes          bps
Bundle:
  Input :             1729             0          601692           0
  Output:              0             0              0           0
Adaptive Statistics:
  Adaptive Adjusts:           0
  Adaptive Scans :           0
  Adaptive Updates:          0
Link:
  ge-104/0/24.0
    Input :              0             0              0           0
    Output:              0             0              0           0
  ge-103/0/0.0
    Input :             1729             0          601692           0
    Output:              0             0              0           0
LACP info:          Role    System              System      Port    Port    Port
                  priority      identifier  priority  number  key

  ge-104/0/24.0  Actor      127    f4:b5:2f:f7:3f:c0      127      31      1
  ge-104/0/24.0  Partner    127    f4:b5:2f:41:0a:40      127      24      1
  ge-103/0/0.0   Actor      127    f4:b5:2f:f7:3f:c0      127       7      1
  ge-103/0/0.0   Partner    127    f4:b5:2f:41:0a:40      127       1      1

LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
  ge-104/0/24.0        25470        25495           0           0
  ge-103/0/0.0         25469        25512           0           0
Marker Statistics:    Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  ge-104/0/24.0           0           0           0           0
  ge-103/0/0.0           0           0           0           0
Protocol bridge, MTU: 1514, Generation: 1229, Route table: 3, Mesh Group:
__all_ces__
Physical interface: ae1 (Extended Port, Enabled, Physical link is Up)
Interface index: 129, SNMP ifIndex: 790, Generation: 132
Link-level type: Ethernet, MTU: 1514, Speed: 200mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c1, Hardware address: f4:b5:2f:f7:3f:c1
Last flapped : 2015-03-31 18:36:44 PDT (07:05:55 ago)
Statistics last cleared: Never
Extended port information:
  Satellite device port id : 431
Traffic statistics:
  Input bytes :             13285288          2032 bps
  Output bytes :            12166400          2032 bps
  Input packets:              98447           2 pps
  Output packets:            95050           2 pps
IPv6 transit statistics:
  Input bytes :              0

```

```

Output bytes :          0
Input  packets:         0
Output packets:         0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0                    0                94909                    0
1                    0                0                      0
2                    0                0                      0
3                    0                0                      0
4                    0                0                      0
5                    0                0                      0
7                    0                0                      0

Queue number:      Mapped forwarding classes
0                  FC0
1                  FC1
2                  FC2
3                  FC3
4                  FC4
5                  FC5, be-3
7                  be-2

Logical interface ae1.0 (Index 338) (SNMP ifIndex 1216) (Generation 1195)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics      Packets      pps      Bytes      bps
Bundle:
Input :          2785          0      688380          0
Output:           0          0          0          0
Adaptive Statistics:
Adaptive Adjusts:          0
Adaptive Scans :          0
Adaptive Updates:         0
Link:
ge-104/0/25.0
Input :           10          0          600          0
Output:           0          0          0          0
ge-103/0/1.0
Input :          2775          0      687780          0
Output:           0          0          0          0
LACP info:      Role      System      System      Port      Port      Port
                priority      identifier      priority      number      key

ge-104/0/25.0  Actor      127  f4:b5:2f:f7:3f:c0      127      32      2
ge-104/0/25.0  Partner    127  f4:b5:2f:41:0a:40      127      25      2

```

```

ge-103/0/1.0 Actor 127 f4:b5:2f:f7:3f:c0 127 8 2
ge-103/0/1.0 Partner 127 f4:b5:2f:41:0a:40 127 2 2

LACP Statistics: LACP Rx LACP Tx Unknown Rx Illegal Rx
ge-104/0/25.0 25470 25494 0 0
ge-103/0/1.0 25469 25513 0 0
Marker Statistics: Marker Rx Resp Tx Unknown Rx Illegal Rx
ge-104/0/25.0 0 0 0 0
ge-103/0/1.0 0 0 0 0
Protocol bridge, MTU: 1514, Generation: 1230, Route table: 3, Mesh Group:
__all_ces__
Physical interface: ae0 (Extended Port, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 574, Generation: 131
Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None, MAC-REWRITE
Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c0, Hardware address: f4:b5:2f:f7:3f:c0
Last flapped : 2015-03-31 18:36:43 PDT (07:05:56 ago)
Statistics last cleared: Never
Extended port information:
Satellite device port id : 415
Traffic statistics:
Input bytes : 13515908 2032 bps
Output bytes : 12289920 2032 bps
Input packets: 99514 2 pps
Output packets: 96015 2 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 0 95867 0
1 0 0 0
2 0 0 0
3 0 0 0
4 0 0 0
5 0 0 0
7 0 0 0

Queue number: Mapped forwarding classes

```

```

0          FC0
1          FC1
2          FC2
3          FC3
4          FC4
5          FC5, be-3
7          be-2

```

Logical interface ae0.0 (Index 337) (SNMP ifIndex 575) (Generation 1194)

Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge

Statistics	Packets	pps	Bytes	bps
Bundle:				
Input :	1729	0	601692	0
Output:	0	0	0	0

Adaptive Statistics:

Adaptive Adjusts:	0
Adaptive Scans :	0
Adaptive Updates:	0

Link:

ge-104/0/24.0

Input :	0	0	0	0
Output:	0	0	0	0

ge-103/0/0.0

Input :	1729	0	601692	0
Output:	0	0	0	0

LACP info:	Role	System	System	Port	Port	Port
		priority	identifier	priority	number	key
ge-104/0/24.0	Actor	127	f4:b5:2f:f7:3f:c0	127	31	1
ge-104/0/24.0	Partner	127	f4:b5:2f:41:0a:40	127	24	1
ge-103/0/0.0	Actor	127	f4:b5:2f:f7:3f:c0	127	7	1
ge-103/0/0.0	Partner	127	f4:b5:2f:41:0a:40	127	1	1

LACP Statistics:	LACP Rx	LACP Tx	Unknown Rx	Illegal Rx
ge-104/0/24.0	25470	25495	0	0
ge-103/0/0.0	25469	25512	0	0

Marker Statistics:	Marker Rx	Resp Tx	Unknown Rx	Illegal Rx
ge-104/0/24.0	0	0	0	0
ge-103/0/0.0	0	0	0	0

Protocol bridge, MTU: 1514, Generation: 1229, Route table: 3, Mesh Group:

__all_ces__

Physical interface: ae1 (Extended Port, Enabled, Physical link is Up)

Interface index: 129, SNMP ifIndex: 790, Generation: 132

Link-level type: Ethernet, MTU: 1514, Speed: 200mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled

Pad to minimum frame size: Disabled

Minimum links needed: 1, Minimum bandwidth needed: 1bps

Device flags : Present Running

Interface flags: SNMP-Traps Internal: 0x4000

Current address: f4:b5:2f:f7:3f:c1, Hardware address: f4:b5:2f:f7:3f:c1

Last flapped : 2015-03-31 18:36:44 PDT (07:05:55 ago)

Statistics last cleared: Never

Extended port information:

Satellite device port id : 431

Traffic statistics:

```

Input bytes :          13285288          2032 bps
Output bytes :          12166400          2032 bps
Input packets:          98447            2 pps
Output packets:         95050            2 pps
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0                   0                94909                0
  1                   0                0                0
  2                   0                0                0
  3                   0                0                0
  4                   0                0                0
  5                   0                0                0
  7                   0                0                0

Queue number:      Mapped forwarding classes
  0                FC0
  1                FC1
  2                FC2
  3                FC3
  4                FC4
  5                FC5, be-3
  7                be-2

Logical interface ae1.0 (Index 338) (SNMP ifIndex 1216) (Generation 1195)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :        2785        0      688380      0
  Output:         0         0         0         0
Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:      0
Link:
  ge-104/0/25.0
    Input :         10         0         600         0
    Output:          0         0          0         0
  ge-103/0/1.0
    Input :        2775         0      687780         0
    Output:         0         0          0         0
LACP info:      Role      System      System      Port      Port      Port

```

```

                                priority      identifier  priority  number  key
ge-104/0/25.0  Actor      127  f4:b5:2f:f7:3f:c0      127      32    2
ge-104/0/25.0  Partner    127  f4:b5:2f:41:0a:40      127      25    2
ge-103/0/1.0   Actor      127  f4:b5:2f:f7:3f:c0      127       8    2
ge-103/0/1.0   Partner    127  f4:b5:2f:41:0a:40      127       2    2

LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
ge-104/0/25.0          25470          25494              0              0
ge-103/0/1.0          25469          25513              0              0
Marker Statistics:    Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
ge-104/0/25.0              0              0              0              0
ge-103/0/1.0              0              0              0              0
Protocol bridge, MTU: 1514, Generation: 1230, Route table: 3, Mesh Group:
__all_ces__

Physical interface: ae0 (Extended Port, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 574, Generation: 131
Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None, MAC-REWRITE
Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c0, Hardware address: f4:b5:2f:f7:3f:c0
Last flapped   : 2015-03-31 18:36:43 PDT (07:05:56 ago)
Statistics last cleared: Never
Extended port information:
  Satellite device port id : 415
Traffic statistics:
Input bytes :          13515908          2032 bps
Output bytes :          12289920          2032 bps
Input packets:           99514           2 pps
Output packets:          96015           2 pps
IPv6 transit statistics:
Input bytes :              0
Output bytes :              0
Input packets:              0
Output packets:              0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets
0                    0                95867                    0
1                    0                0                    0
2                    0                0                    0
3                    0                0                    0

```

```

4              0              0              0
5              0              0              0
7              0              0              0

Queue number:      Mapped forwarding classes
0                  FC0
1                  FC1
2                  FC2
3                  FC3
4                  FC4
5                  FC5, be-3
7                  be-2

Logical interface ae0.0 (Index 337) (SNMP ifIndex 575) (Generation 1194)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics          Packets          pps          Bytes          bps
Bundle:
  Input :           1729             0          601692           0
  Output:            0             0              0           0
Adaptive Statistics:
  Adaptive Adjusts:           0
  Adaptive Scans :           0
  Adaptive Updates:           0
Link:
  ge-104/0/24.0
    Input :            0             0              0           0
    Output:            0             0              0           0
  ge-103/0/0.0
    Input :           1729             0          601692           0
    Output:            0             0              0           0
LACP info:          Role      System          System      Port      Port      Port
                  priority      identifier      priority      number      key

  ge-104/0/24.0  Actor      127  f4:b5:2f:f7:3f:c0      127      31      1
  ge-104/0/24.0  Partner    127  f4:b5:2f:41:0a:40      127      24      1
  ge-103/0/0.0   Actor      127  f4:b5:2f:f7:3f:c0      127      7       1
  ge-103/0/0.0   Partner    127  f4:b5:2f:41:0a:40      127      1       1

LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
  ge-104/0/24.0       25470       25495         0              0
  ge-103/0/0.0       25469       25512         0              0
Marker Statistics:    Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  ge-104/0/24.0         0             0             0              0
  ge-103/0/0.0         0             0             0              0
Protocol bridge, MTU: 1514, Generation: 1229, Route table: 3, Mesh Group:
__all_ces__
Physical interface: ae1 (Extended Port, Enabled, Physical link is Up)
Interface index: 129, SNMP ifIndex: 790, Generation: 132
Link-level type: Ethernet, MTU: 1514, Speed: 200mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags : Present Running

```



```

Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c1, Hardware address: f4:b5:2f:f7:3f:c1
Last flapped : 2015-03-31 18:36:44 PDT (07:05:55 ago)
Statistics last cleared: Never
Extended port information:
  Satellite device port id : 431
Traffic statistics:
  Input bytes :          13285288          2032 bps
  Output bytes :         12166400          2032 bps
  Input packets:          98447           2 pps
  Output packets:         95050           2 pps
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:         0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 7 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0                    0                94909                0
  1                    0                 0                0
  2                    0                 0                0
  3                    0                 0                0
  4                    0                 0                0
  5                    0                 0                0
  7                    0                 0                0

Queue number:      Mapped forwarding classes
  0                FC0
  1                FC1
  2                FC2
  3                FC3
  4                FC4
  5                FC5, be-3
  7                be-2

Logical interface ae1.0 (Index 338) (SNMP ifIndex 1216) (Generation 1195)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :        2785         0      688380       0
  Output:         0         0         0         0
Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:     0
Link:
  ge-104/0/25.0

```

```

        Input :          10          0          600          0
        Output:          0          0          0          0
    ge-103/0/1.0
        Input :        2775          0        687780          0
        Output:          0          0          0          0
    LACP info:      Role      System      System      Port      Port      Port
                  priority      identifier      priority      number      key

    ge-104/0/25.0  Actor      127  f4:b5:2f:f7:3f:c0      127      32      2
    ge-104/0/25.0  Partner    127  f4:b5:2f:41:0a:40      127      25      2
    ge-103/0/1.0   Actor      127  f4:b5:2f:f7:3f:c0      127      8      2
    ge-103/0/1.0   Partner    127  f4:b5:2f:41:0a:40      127      2      2

    LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
    ge-104/0/25.0        25470        25494          0          0
    ge-103/0/1.0         25469        25513          0          0
    Marker Statistics:    Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
    ge-104/0/25.0          0          0          0          0
    ge-103/0/1.0          0          0          0          0
    Protocol bridge, MTU: 1514, Generation: 1230, Route table: 3, Mesh Group:
    __all_ces__
    Physical interface: ge-101/0/7 (Extended Port, Enabled, Physical link is Down
    Interface index: 328, SNMP ifIndex: 1587, Generation: 331
    Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 1000mbps
    Device flags : Present Running
    Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
    Link flags : None
    CoS queues : 8 supported, 8 maximum usable queues
    Hold-times : Up 0 ms, Down 0 ms
    Damping : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
    state: unsuppressed
    Current address: 10:0e:7e:bf:2d:0c, Hardware address: 10:0e:7e:bf:2d:0c
    Last flapped : Never
    Statistics last cleared: Never
    Extended port information:
        Satellite device port id : 143
    Traffic statistics:
    Input bytes :          0          0 bps
    Output bytes :          0          0 bps
    Input packets:          0          0 pps
    Output packets:          0          0 pps
    IPv6 transit statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
    Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
    incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
    Resource errors: 0
    Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
    FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
    Egress queues: 8 supported, 7 in use
    Queue counters:      Queued packets      Transmitted packets      Dropped packets

```

0	0	0	0
1	0	0	0
2	0	0	0
3	0	0	0
4	0	0	0
5	0	0	0
7	0	0	0
Queue number: Mapped forwarding classes			
0	FC0		
1	FC1		
2	FC2		
3	FC3		
4	FC4		
5	FC5, be-3		
7	be-2		
Active alarms : None			
Active defects : None			
MAC statistics:		Receive	Transmit
Total octets		0	0
Total packets		0	0
Unicast packets		0	0
Broadcast packets		0	0
Multicast packets		0	0
CRC/Align errors		0	0
FIFO errors		0	0
MAC control frames		0	0
MAC pause frames		0	0
Oversized frames		0	
Jabber frames		0	
Fragment frames		0	
VLAN tagged frames		0	
Code violations		0	
Total errors		0	0
Filter statistics:			
Input packet count		0	
Input packet rejects		0	
Input DA rejects		0	
Input SA rejects		0	
Output packet count			0
Output packet pad count			0
Output packet error count			0
CAM destination filters: 0, CAM source filters: 0			
Packet Forwarding Engine configuration:			
Destination slot: 0 (0x00)			
CoS information:			
Direction : Output			
CoS transmit queue		Bandwidth	Buffer Priority
Limit			
	%	bps	%
0 FC0	95	950000000	95
0			0
low			
3 FC3	5	50000000	5
0			0
low			

```

Interface transmit statistics: Disabled

Physical interface: ge-101/0/8 (Extended Port, Enabled, Physical link is Down
Interface index: 329, SNMP ifIndex: 1586, Generation: 332
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 1000mbps
Device flags   : Present Running
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 8 supported, 8 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Damping       : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
Current address: 10:0e:7e:bf:2d:0d, Hardware address: 10:0e:7e:bf:2d:0d
Last flapped   : Never
Statistics last cleared: Never
Extended port information:
  Satellite device port id : 159
Traffic statistics:
  Input bytes   : 0 0 bps
  Output bytes  : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 7 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

  0 0 0 0
  1 0 0 0
  2 0 0 0
  3 0 0 0
  4 0 0 0
  5 0 0 0
  7 0 0 0

Queue number:  Mapped forwarding classes
0 FC0
1 FC1
2 FC2
3 FC3
4 FC4
5 FC5, be-3
7 be-2
Active alarms : None

```

```

Active defects : None
MAC statistics:
    Receive      Transmit
Total octets      0          0
Total packets     0          0
Unicast packets   0          0
Broadcast packets 0          0
Multicast packets 0          0
CRC/Align errors  0          0
FIFO errors       0          0
MAC control frames 0          0
MAC pause frames  0          0
Oversized frames  0
Jabber frames     0
Fragment frames   0
VLAN tagged frames 0
Code violations    0
Total errors       0          0
Filter statistics:
Input packet count      0
Input packet rejects    0
Input DA rejects        0
Input SA rejects        0
Output packet count     0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
Destination slot: 0 (0x00)
CoS information:
Direction : Output
CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec      low
0 FC0      95      950000000      95      0
none
3 FC3       5       50000000      5      0
none
Interface transmit statistics: Disabled

```

show interfaces satellite-device

Syntax	<code>show interfaces satellite-device (device-alias all)</code>
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Display the satellite device extended ports in a Junos Fusion.
Options	<p>device-alias <i>device-alias</i>—Display extended port information for the satellite device using the specified device alias only.</p> <p>all—Display information for all extended ports and aggregated Ethernet interfaces with extended ports as members configured on all of the satellite devices.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	show interfaces satellite-device all on page 852
Output Fields	Table 41 on page 850 lists the output fields for the show interfaces satellite-device command. Output fields are listed in the approximate order in which they appear.

Table 41: show interfaces satellite-device Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
Link-level type	Encapsulation being used on the physical interface.	All levels
Device flags	Information about the physical device.	All levels
Flow control	Flow control status: Enabled or Disabled . NOTE: This field is only displayed if asymmetric flow control is not configured.	All levels
Pad to minimum frame size	Pad Tx VLAN-tagged frame to minimum of 68 bytes.	All levels

Table 41: *show interfaces satellite-device Output Fields (continued)*

Field Name	Field Description	Level of Output
Minimum links needed	Minimum number of aggregated links.	All levels
Minimum bandwidth needed	Minimum bandwidth configured for aggregated bundle.	All levels
Device flags	Information about the physical device.	All levels
Interface flags	Information about the interface.	All levels
Current address	Configured MAC address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2008-01-16 10:52:40 UTC (3d 22:58 ago) .	detail extensive none
Input rate	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	All levels
Output rate	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	All levels
Extended port information	Satellite device port ID	All levels
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the switch configuration, an alarm can ring the red or yellow alarm bell on the switch, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value None or Link.</p> <ul style="list-style-type: none"> • None—There are no active defects or alarms. • Link—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning. 	detail extensive none
Interface transmit statistics	All levels	All levels
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 41: *show interfaces satellite-device* Output Fields (continued)

Field Name	Field Description	Level of Output
Flags	Information about the logical interface.	All levels
Statistics	<ul style="list-style-type: none"> • Packets • pps • Bytes • bps 	All levels
Bundle	Provides information for each active bundle link. <ul style="list-style-type: none"> • Input <ul style="list-style-type: none"> • Packets • pps • Bytes • bps • Output <ul style="list-style-type: none"> • Packets— • pps • Bytes • bps 	All levels
Adaptive Statistics	<ul style="list-style-type: none"> • Adaptive Adjusts • Adaptive Scans • Adaptive Updates 	All levels
Protocol	Protocol family configured on the logical interface.	All levels

Sample Output

Sample Output

show interfaces satellite-device all

```

user@aggregation-device> show interfaces satellite-device all

Physical interface: ae0 (Extended Port, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 574
  Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None, MAC-REWRITE
  Error: None, Loopback: Disabled, Source filtering: Disabled,
  Flow control: Disabled
  Pad to minimum frame size: Disabled
  Minimum links needed: 1, Minimum bandwidth needed: 1bps
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Current address: f4:b5:2f:f7:3f:c0, Hardware address: f4:b5:2f:f7:3f:c0
  Last flapped   : 2015-03-31 18:36:43 PDT (06:54:08 ago)
  Input rate     : 2032 bps (2 pps)
  Output rate    : 3048 bps (2 pps)

Logical interface ae0.0 (Index 337) (SNMP ifIndex 575)

```



```

Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics          Packets          pps          Bytes          bps
Bundle:
  Input :           1704             0         592992             0
  Output:             0             0             0             0
Adaptive Statistics:
  Adaptive Adjusts:             0
  Adaptive Scans :             0
  Adaptive Updates:            0
Protocol bridge, MTU: 1514

Physical interface: ae1 (Extended Port, Enabled, Physical link is Up
Interface index: 129, SNMP ifIndex: 790
Link-level type: Ethernet, MTU: 1514, Speed: 200mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled
Pad to minimum frame size: Disabled
Minimum links needed: 1, Minimum bandwidth needed: 1bps
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: f4:b5:2f:f7:3f:c1, Hardware address: f4:b5:2f:f7:3f:c1
Last flapped   : 2015-03-31 18:36:44 PDT (06:54:07 ago)
Input rate     : 2032 bps (2 pps)
Output rate    : 2032 bps (2 pps)

Logical interface ae1.0 (Index 338) (SNMP ifIndex 1216)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Statistics          Packets          pps          Bytes          bps
Bundle:
  Input :           2759             0         679982             0
  Output:             0             0             0             0
Adaptive Statistics:
  Adaptive Adjusts:             0
  Adaptive Scans :             0
  Adaptive Updates:            0
Protocol bridge, MTU: 1514

Physical interface: xe-101/0/31 (Extended Port, Enabled, Physical link is Up
Interface index: 336, SNMP ifIndex: 829
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags   : None
CoS queues   : 8 supported, 8 maximum usable queues
Current address: 10:0e:7e:bf:2d:24, Hardware address: 10:0e:7e:bf:2d:24
Last flapped   : 2015-03-31 08:28:23 PDT (17:02:29 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : None
Active defects : None
Interface transmit statistics: Disabled

Logical interface xe-101/0/31.0 (Index 491) (SNMP ifIndex 926)
Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
Input packets : 0
Output packets: 0
Protocol bridge, MTU: 1514

Physical interface: xe-101/0/32 (Extended Port, Enabled, Physical link is Up
Interface index: 337, SNMP ifIndex: 836
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps

```

```
Device flags      : Present Running
Interface flags:  SNMP-Traps Internal: 0x4000
Link flags       : None
CoS queues       : 8 supported, 8 maximum usable queues
Current address:  10:0e:7e:bf:2d:25, Hardware address: 10:0e:7e:bf:2d:25
Last flapped    : 2015-03-31 08:28:23 PDT (17:02:29 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
Active alarms   : None
Active defects   : None
Interface transmit statistics: Disabled

Logical interface xe-101/0/32.0 (Index 492) (SNMP ifIndex 935)
  Flags: Up SNMP-Traps 0x24024000 Encapsulation: Ethernet-Bridge
  Input packets : 0
  Output packets: 0
  Protocol bridge, MTU: 1514
```

show interfaces statistics

Syntax `show interfaces statistics interface-name`
`<satellite-device [device-alias-name | all]>`
`<detail>`

Release Information Command introduced before Junos OS Release 7.4.
 Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
 Command introduced in Junos OS Release 12.2 for ACX Series Routers.
satellite-device option introduced in Junos OS Release 14.2R3.

Description Display static interface statistics, such as errors.



NOTE: When the `show interfaces statistics` command is executed on an interface that is configured on T4000 Type 5 FPC, the *IPv6 transit statistics* field displays:

- Total statistics (sum of transit and local statistics) at the physical interface level
- Transit statistics at the logical interface level

Options *interface-name*—Name of an interface.

satellite-device [*device-alias-name* | all]—(Junos Fusion only) (Optional) Display interface statistics for interfaces on the specified satellite device in the Junos Fusion, or on all satellite devices in the Junos Fusion.



NOTE: In a Junos Fusion Enterprise, logical interface statistics are not synced across aggregation devices in a dual-aggregation device topology.

detail—(Optional) Display detailed output.

Required Privilege Level view

Related Documentation

- *clear interfaces statistics*

List of Sample Output [show interfaces statistics \(Fast Ethernet\) on page 856](#)
[show interfaces statistics \(Gigabit Ethernet PIC—Egress\) on page 857](#)

[show interfaces statistics detail \(Aggregated Ethernet\) on page 859](#)
[show interfaces statistics detail \(Aggregated Ethernet—Ingress\) on page 860](#)
[show interfaces statistics detail \(Aggregated Ethernet—Egress\) on page 861](#)
[show interfaces statistics \(SONET/SDH\) on page 862](#)
[show interfaces statistics \(Aggregated SONET/SDH—Ingress\) on page 864](#)
[show interfaces statistics \(Aggregated SONET/SDH—Egress\) on page 865](#)
[show interfaces statistics \(MX Series Routers\) on page 866](#)
[show interfaces statistics \(MX Series Routers: Dynamic Interfaces with RPF Check Detail\) on page 866](#)
[show interfaces statistics \(PTX Series Packet Transport Routers\) on page 867](#)
[show interfaces statistics \(ACX Series routers\) on page 867](#)

Output Fields Output from both the **show interfaces *interface-name* detail** and the **show interfaces *interface-name* extensive** commands include all the information displayed in the output from the **show interfaces statistics** command. For more information, see the particular interface type in which you are interested. For information about destination class and source class statistics, see the “Destination Class Field” section and the “Source Class Field” section under *Common Output Fields Description*. For information about the input errors and output errors, see *Fast Ethernet and Gigabit Ethernet Counters*.

Sample Output

show interfaces statistics (Fast Ethernet)

```

user@host> show interfaces fe-1/3/1 statistics

Physical interface: fe-1/3/1, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 1042
  Description: ford fe-1/3/1
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:00:5E:00:53:dc, Hardware address: 00:00:5E:00:53:dc
  Last flapped   : 2006-04-18 03:08:59 PDT (00:01:24 ago)
  Statistics last cleared: Never
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  Input errors: 0, Output errors: 0
  Active alarms  : None
  Active defects : None
  Logical interface fe-1/3/1.0 (Index 69) (SNMP ifIndex 50)
    Flags: SNMP-Traps Encapsulation: ENET2
    Protocol inet, MTU: 1500
      Flags: Is-Primary, DCU, SCU-in

      Destination class      Packets          Bytes
                        (packet-per-second)  (bits-per-second)
      silver1                0                0
      (                      0) (                0)
      silver2                0                0
      (                      0) (                0)
      silver3                0                0
      (                      0) (                0)
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 10.27.245/24, Local: 10.27.245.2,

```

```
Broadcast: 10.27.245.255
Protocol iso, MTU: 1497
Flags: Is-Primary
```

show interfaces statistics (Gigabit Ethernet PIC—Egress)

```
user@host> show interfaces ge-5/2/0 statistics detail
```

```
Physical interface: ge-5/2/0, Enabled, Physical link is Up
Interface index: 146, SNMP ifIndex: 519, Generation: 149
Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:74, Hardware address: 00:00:5E:00:53:74
Last flapped : 2009-11-11 11:24:00 PST (09:23:08 ago)
Statistics last cleared: 2009-11-11 17:50:58 PST (02:56:10 ago)
Traffic statistics:
Input bytes : 271524 0 bps
Output bytes : 37769598 352 bps
Input packets: 3664 0 pps
Output packets: 885790 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 16681118
Input packets: 0
Output packets: 362633
Multicast statistics:
IPv4 multicast statistics:
Input bytes : 112048 0 bps
Output bytes : 20779920 0 bps
Input packets: 1801 0 pps
Output packets: 519498 0 pps
IPv6 multicast statistics:
Input bytes : 156500 0 bps
Output bytes : 16681118 0 bps
Input packets: 1818 0 pps
Output packets: 362633 0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 882558 882558 0

1 expedited-fo 0 0 0

2 assured-forw 0 0 0
```

```

3 network-cont          3232          3232          0

Active alarms : None
Active defects : None

Logical interface ge-5/2/0.0 (Index 71) (SNMP ifIndex 573) (Generation 135)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes :          271524
  Output bytes :        37769598
  Input packets:          3664
  Output packets:       885790
IPv6 transit statistics:
  Input bytes :           0
  Output bytes :       16681118
  Input packets:           0
  Output packets:      362633
Local statistics:
  Input bytes :          271524
  Output bytes :       308560
  Input packets:          3664
  Output packets:        3659
Transit statistics:
  Input bytes :           0
  Output bytes :       37461038
  Input packets:           0
  Output packets:      882131
IPv6 transit statistics:
  Input bytes :           0
  Output bytes :       16681118
  Input packets:           0
  Output packets:      362633
Multicast statistics:
IPv4 multicast statistics:
  Input bytes :          112048
  Output bytes :       20779920
  Input packets:          1801
  Output packets:       519498
IPv6 multicast statistics:
  Input bytes :          156500
  Output bytes :       16681118
  Input packets:          1818
  Output packets:       362633
Protocol inet, MTU: 1500, Generation: 151, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.40.40.0/30, Local: 10.40.40.2, Broadcast: 10.40.40.3,
Generation: 167
  Protocol inet6, MTU: 1500, Generation: 152, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: ::10.40.40.0/126, Local: ::10.40.40.2
Generation: 169
  Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::21d:b5ff:fe61:d974
Protocol multiservice, MTU: Unlimited, Generation: 171
Generation: 153, Route table: 0
  Policer: Input: __default_arp_policer__

```

show interfaces statistics detail (Aggregated Ethernet)

user@host> show interfaces ae0 detail

```

Physical interface: ae0, Enabled, Physical link is Up
  Interface index: 186, SNMP ifIndex: 111, Generation: 187
  Link-level type: Ethernet, MTU: 1514, Speed: 2000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1,
  Minimum bandwidth needed: 0
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Current address: 00:00:5E:0053:f0, Hardware address: 00:00:5E:00:53:f0
  Last flapped   : Never
  Statistics last cleared: 2006-12-23 03:04:16 PST (01:16:24 ago)
Traffic statistics:
  Input bytes :          28544          0 bps
  Output bytes :          39770          0 bps
  Input packets:           508          0 pps
  Output packets:          509          0 pps
  Input bytes :          IPv6 28544
  Output bytes :          IPv6 0
  Input packets:          IPv6 508
  Output packets:          IPv6 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

Logical interface ae0.0 (Index 67) (SNMP ifIndex 139) (Generation 145)
  Flags: SNMP-Traps Encapsulation: ENET2
  Statistics
  Packets      pps      Bytes      bps
Bundle:
  Input :      508      0      28544      0
  Output:      509      0      35698      0
Link:
  ge-3/3/8.0
  Input :      508      0      28544      0
  Output:      0      0      0      0
  ge-3/3/9.0
  Input :      0      0      0      0
  Output:      0      0      0      0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  ge-3/3/8.0      0      0      0      0
  ge-3/3/9.0      0      0      0      0
Egress queues: 8 supported, 8 in use
Queue counters:      Queued packets      Transmitted packets      Dropped packets

  0 best-effort      0      0      0
  1 expedited-fo      0      0      0
  2 assured-forw      0      0      0
  3 network-cont      0      0      0

Protocol inet, MTU: 1500, Generation: 166, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary

```

```

    Destination: 10.1.1/24, Local: 10.1.1.1, Broadcast: 10.1.1.255,
    Generation: 159
  Protocol inet6, MTU: 1500, Generation: 163, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::206:5bff:fe05:c321,
    Broadcast: Unspecified, Generation: 161

```

show interfaces statistics detail (Aggregated Ethernet—Ingress)

```
user@host> show interfaces statistics detail ae0 | no-more
```

```

Physical interface: ae0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 504, Generation: 278
  Link-level type: Ethernet, MTU: 1514, Speed: 1Gbps, BPDU Error: None, MAC-REWRITE
  Error: None, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1,
  Minimum bandwidth needed: 0
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Current address: 00:00:5E:00:53:f0, Hardware address: 00:00:5E:00:53:f0
  Last flapped   : 2009-11-09 03:30:23 PST (00:01:28 ago)
  Statistics last cleared: 2009-11-09 03:26:18 PST (00:05:33 ago)
  Traffic statistics:
    Input bytes :          544009602          54761856 bps
    Output bytes :             3396             0 bps
    Input packets:          11826292          148809 pps
    Output packets:             42             0 pps
  IPv6 transit statistics:
    Input bytes :       350818604
    Output bytes :             0
    Input packets:       7626488
    Output packets:             0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
  0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
  0
  Ingress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	0	0	0

```

  Egress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	21	21	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	451	451	0


```

Logical interface ae0.0 (Index 70) (SNMP ifIndex 574) (Generation 177)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Statistics
Bundle:
  Packets      pps      Bytes      bps
  Input :      11826292    148809    544009602    54761856
  Output:       42         0         3396         0
Link:
  ge-5/2/0.0
  Input :      11826292    148809    544009602    54761856
  Output:       42         0         3396         0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
ge-5/2/0.0          0         0         0         0
Protocol inet, MTU: 1500, Generation: 236, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.30.30.0/30, Local: 10.30.30.2, Broadcast: 10.30.30.3,
Generation: 310
Protocol inet6, MTU: 1500, Generation: 237, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: ::10.30.30.0/126, Local: ::10.30.30.2
Generation: 312
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::21d:b5ff:fe61:dbf0
Protocol multiservice, MTU: Unlimited, Generation: 314
Generation: 238, Route table: 0
Policer: Input: __default_arp_policer__

```

show interfaces statistics detail (Aggregated Ethernet—Egress)

```
user@host> show interfaces statistics detail ae0 | no-more
```

```

Physical interface: ae0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 501, Generation: 319
Link-level type: Ethernet, MTU: 1514, Speed: 1Gbps, BPDU Error: None, MAC-REWRITE
Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Disabled, Minimum links needed: 1,
Minimum bandwidth needed: 0
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: 00:00:5E:00:53:f0, Hardware address: 00:00:5E:00:53:f0
Last flapped : 2009-11-09 03:30:24 PST (00:02:42 ago)
Statistics last cleared: 2009-11-09 03:26:42 PST (00:06:24 ago)
Traffic statistics:
  Input bytes :          440          0 bps
  Output bytes :      1047338120      54635848 bps
  Input packets:           7          0 pps
  Output packets:    22768200      148466 pps
IPv6 transit statistics:
  Input bytes :          288
  Output bytes :      723202616
  Input packets:           4
  Output packets:    15721796
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Ingress queues: 8 supported, 4 in use

```

```

Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort              0              0              0
  1 expedited-fo             0              0              0
  2 assured-forw             0              0              0
  3 network-cont             0              0              0

Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      201985796      201985796              0
  1 expedited-fo             0              0              0
  2 assured-forw             0              0              0
  3 network-cont        65              65              0

Logical interface ae0.0 (Index 72) (SNMP ifIndex 505) (Generation 204)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :          7          0          440          0
  Output:    22768200    148466    1047338120    54635848
Link:
  ge-2/1/6.0
  Input :          7          0          440          0
  Output:    22768200    148466    1047338120    54635848
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
ge-2/1/6.0          0              0              0              0
Protocol inet, MTU: 1500, Generation: 291, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.30.30.0/30, Local: 10.30.30.1, Broadcast: 10.30.30.3,
Generation: 420
Protocol inet6, MTU: 1500, Generation: 292, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: ::/26, Local: ::10.30.30.1
Generation: 422
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::21f:12ff:fec2:37f0
Protocol multiservice, MTU: Unlimited, Generation: 424
Generation: 293, Route table: 0
Policer: Input: __default_arp_policer__

```

show interfaces statistics (SONET/SDH)

```

user@host> show interfaces statistics detail so-3/0/0 | no-more

Physical interface: so-3/0/0, Enabled, Physical link is Up
Interface index: 133, SNMP ifIndex: 538, Generation: 283
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC192,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms

```

```

Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 13 (last seen 00:00:04 ago)
  Output: 14 (last sent 00:00:02 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Opened, iso: Not-configured, mp1s: Not-configured

CHAP state: Closed
PAP state: Closed
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2009-11-09 02:52:34 PST (01:12:39 ago)
Statistics last cleared: 2009-11-09 03:58:54 PST (00:06:19 ago)
Traffic statistics:
  Input bytes :          2559160294          54761720 bps
  Output bytes :             10640             48 bps
  Input packets:          55633975          148809 pps
  Output packets:             216             0 pps
IPv6 transit statistics:
  Input bytes :          647922328
  Output bytes :              0
  Input packets:          14085269
  Output packets:              0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Bucket drops:
0, Policed discards: 0, L3 incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0, HS link
FIFO overflows: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO
underflows: 0, MTU errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          4              4              0
  1 expedited-fo         0              0              0
  2 assured-forw         0              0              0
  3 network-cont        213             213             0

SONET alarms   : None
SONET defects  : None

Logical interface so-3/0/0.0 (Index 72) (SNMP ifIndex 578) (Generation 182)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 244, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.30.30.0/30, Local: 10.30.30.2, Broadcast: 10.30.30.3,
Generation: 322
  Protocol inet6, MTU: 4470, Generation: 245, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: ::10.30.30.0/126, Local: ::10.30.30.2
Generation: 324
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::2a0:a5ff:fe61:9264
Generation: 326

```

show interfaces statistics (Aggregated SONET/SDH—Ingress)

```
user@host> show interfaces statistics detail as0 | no-more
```

```
Physical interface: as0, Enabled, Physical link is Up
Interface index: 132, SNMP ifIndex: 534, Generation: 282
Link-level type: PPP, MTU: 4474, Speed: OC192, Minimum links needed: 1, Minimum
bandwidth needed: 0
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Last flapped : 2009-11-09 03:45:53 PST (00:09:38 ago)
Statistics last cleared: 2009-11-09 03:48:17 PST (00:07:14 ago)
Traffic statistics:
Input bytes :          2969786332          54761688 bps
Output bytes :          11601          0 bps
Input packets:          64560636          148808 pps
Output packets:          225          0 pps
IPv6 transit statistics:
Input bytes :          2086013152
Output bytes :          0
Input packets:          45348114
Output packets:          0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort          3              3              0

1 expedited-fo          0              0              0

2 assured-forw          0              0              0

3 network-cont          222            222            0

Logical interface as0.0 (Index 71) (SNMP ifIndex 576) (Generation 179)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Statistics      Packets      pps      Bytes      bps
Bundle:
Input :          64560550      148808      2969785300      54761688
Output:          139          0          10344          0
Link:
so-3/0/0.0
Input :          64560550      148808      2969785300      54761688
Output:          139          0          10344          0
Protocol inet, MTU: 4470, Generation: 240, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.30.30.0/30, Local: 10.30.30.2, Broadcast: 10.30.30.3,
Generation: 316
Protocol inet6, MTU: 4470, Generation: 241, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: ::10.30.30.0/126, Local: ::10.30.30.2
Generation: 318
Addresses, Flags: Is-Preferred
```

```

Destination: fe80::/64, Local: fe80::2a0:a5ff:fe61:9264
Generation: 320

```

show interfaces statistics (Aggregated SONET/SDH—Egress)

```
user@host> show interfaces statistics detail as0 | no-more
```

```

Physical interface: as0, Enabled, Physical link is Up
  Interface index: 132, SNMP ifIndex: 565, Generation: 323
  Link-level type: PPP, MTU: 4474, Speed: OC192, Minimum links needed: 1, Minimum
  bandwidth needed: 0
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Last flapped   : 2009-11-09 03:43:37 PST (00:12:48 ago)
  Statistics last cleared: 2009-11-09 03:48:54 PST (00:07:31 ago)
  Traffic statistics:
    Input bytes :          11198          392 bps
    Output bytes :       3101452132       54783448 bps
    Input packets:           234           0 pps
    Output packets:       67422937       148868 pps
  IPv6 transit statistics:
    Input bytes :          5780
    Output bytes :       2171015678
    Input packets:           72
    Output packets:       47195993
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
    0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
    0
  Egress queues: 8 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort      67422830          67422830          0

    1 expedited-fo         0              0              0

    2 assured-forw        0              0              0

    3 network-cont        90             90              0

  Logical interface as0.0 (Index 71) (SNMP ifIndex 548) (Generation 206)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  Statistics
    Packets      pps      Bytes      bps
  Bundle:
    Input :       144         0       10118       392
    Output:  67422847   148868   3101450962   54783448
  Link:
    so-0/1/0.0
    Input :       144         0       10118       392
    Output:  67422847   148868   3101450962   54783448
  Protocol inet, MTU: 4470, Generation: 295, Route table: 0
    Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.30.30.0/30, Local: 10.30.30.1, Broadcast: 10.30.30.3,
    Generation: 426
    Protocol inet6, MTU: 4470, Generation: 296, Route table: 0

```

```

Addresses, Flags: Is-Preferred Is-Primary
Destination: ::/26, Local: ::10.30.30.1
Generation: 428
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::2a0:a5ff:fe63:1d0a
Generation: 429

```

show interfaces statistics (MX Series Routers)

```
user@host> show interfaces xe-0/0/0 statistics
```

```

Physical interface: xe-0/0/0, Enabled, Physical link is Up
Interface index: 145, SNMP ifIndex: 592
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None, Source filtering: Disabled, Flow control: Enabled
Pad to minimum frame size: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Current address: 00:00:5E:00:53:f0, Hardware address: 00:00:5E:00:53:f0
Last flapped   : 2013-10-26 03:20:40 test (2w3d 03:29 ago)
Statistics last cleared: Never
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Input errors: 0, Output errors: 0
Active alarms  : LINK
Active defects : LINK
PCS statistics
  Bit errors           Seconds
  Errored blocks       109
Interface transmit statistics: Disabled

```

show interfaces statistics (MX Series Routers: Dynamic Interfaces with RPF Check Detail)

```
user@host> show interfaces statistics pp0.3221225475 detail
```

```

Logical interface pp0.3221225475(Index 536870921)(SNMP ifIndex 200000009)
(Generation 6)
Flags: Up Point-To-Point Encapsulation: PPPoE
PPPoE:
  State: SessionUp, Session ID: 1,
  Session AC name: B, Remote MAC address:00:00:5E:00:53:01,
  Underlying interface: xe-1/0/0.3221225474 (Index 536870919)
  Ignore End-Of-List tag: Disable
Bandwidth: 0
Traffic statistics:
  Input bytes   : 34
  Output bytes  : 0
  Input packets: 1
  Output packets: 1
Local statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes   : 34
  Output bytes  : 0

```

```

    Input  packets:                1                0 pps
    Output packets:                1                0 pps
    Keepalive settings: Interval 30 seconds, Up-count 3, Down-count 3
    LCP state: Opened
    NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
    CHAP state: Success
    PAP state: Closed
    Protocol inet, MTU: 1492
    Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
    Generation: 0, Route table: 0
    Flags: uRPF, Unnumbered
    RPF Failures: Packets: 0, Bytes: 0
    Donor interface: lo0.0 (Index 320)
    Input Filters: upstrm1-inet-pp0.3221225475-in
    Output Filters: dwnstrm1-inet-pp0.3221225475-out
    Addresses, Flags: Is-Primary
    Destination: Unspecified, Local: 10.255.96.19, Broadcast: Unspecified,
Generation: 0

```

show interfaces statistics (PTX Series Packet Transport Routers)

```

user@host> show interfaces statistics em0

Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:1b, Hardware address: 00:00:5E:00:53:1b
  Last flapped   : Never
  Statistics last cleared: Never
Input packets : 212620
Output packets: 71
  Input errors: 0, Output errors: 0

  Logical interface em0.0 (Index 3) (SNMP ifIndex 0)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 212590
  Output packets: 71
  Protocol inet, MTU: 1500
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 192.168.3/24, Local: 192.168.3.30,
  Broadcast: 192.168.3.255

```

show interfaces statistics (ACX Series routers)

```

user@host> show interfaces statistics ge-0/1/7

Physical interface: ge-0/1/7, Enabled, Physical link is Down
  Interface index: 151, SNMP ifIndex: 524
  Link-level type: Ethernet, Media type: Copper, MTU: 1514, Link-mode: Full-duplex,
Speed: 1000mbps, BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,

  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online

```

```
Device flags   : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Current address: 00:00:5E:00:53:a3, Hardware address: 00:00:5E:00:53:a3
Last flapped   : 2012-05-11 04:25:28 PDT (2d 20:23 ago)
Statistics last cleared: 2012-05-13 23:07:23 PDT (01:41:25 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Input errors: 0, Output errors: 0
Active alarms  : LINK
Active defects : LINK
Interface transmit statistics: Disabled
```


show interfaces terse satellite-device

Syntax	<code>show interfaces terse satellite-device (device-alias all)</code>
Release Information	Command introduced in Junos OS Release 14.2R3 for Junos Fusion Provider Edge. Command introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Command introduced in Junos OS Release 17.2R1 for Junos Fusion Data Center.
Description	Display the satellite device extended ports in a Junos Fusion.
Options	<p>device-alias <i>device-alias</i>—Display extended port information for the satellite device using the specified device alias only.</p> <p>all—Display information for all extended ports and aggregated Ethernet interfaces with extended ports as members configured on all of the satellite devices.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Configuring or Expanding a Junos Fusion Enterprise on page 45
List of Sample Output	<p>show interfaces terse satellite-device device-alias on page 870</p> <p>show interfaces terse satellite-device all on page 870</p>
Output Fields	Table 42 on page 869 lists the output fields for the show interfaces terse satellite-device command. Output fields are listed in the approximate order in which they appear.

Table 42: show interfaces terse satellite-device Output Fields

Field Name	Field Description
Interface	Interface name.
Admin	Whether the interface is turned on (up) or off (down).
Link	Link state: up or down .
Proto	Protocol family configured on the logical interface.
Local	Local IP address of the logical interface.
Remote	Remote IP address of the logical interface.

Sample Output

show interfaces terse satellite-device device-alias

```
user@aggregation-device> show interfaces terse satellite-device TOR1
```

Interface	Admin	Link	Proto	Local	Remote
sd-101/0/0	up	up			
sd-101/0/0.32770	up	up	bridge		
xe-101/0/14	up	up			
xe-101/0/15	up	up			
xe-101/0/16	up	up			
xe-101/0/17	up	up			
xe-101/0/24	up	up			
xe-101/0/25	up	up			
xe-101/0/31	up	up			
xe-101/0/31.0	up	up	bridge		
xe-101/0/32	up	down			
xe-101/0/32.0	up	down	bridge		
xe-101/0/33	up	down			
xe-101/0/33.0	up	down	bridge		
ge-101/0/36	up	down			
et-101/0/48	up	down			
xe-101/0/50:0	up	up			
xe-101/0/50:0.0	up	up	bridge		
xe-101/0/50:1	up	up			
xe-101/0/50:2	up	up			
xe-101/0/50:2.0	up	up	bridge		
xe-101/0/50:3	up	up			

Sample Output

show interfaces terse satellite-device all

```
user@aggregation-device> show interfaces terse satellite-device all
```

Interface	Admin	Link	Proto	Local	Remote
ae0	up	up			
ae0.0	up	up	bridge		
ae1	up	up			
ae1.0	up	up	bridge		
ae2	up	up			
ae2.0	up	up	bridge		
ae3	up	up			
ae3.0	up	up	bridge		
ae4	up	up			
ae4.0	up	up	bridge		
ae5	up	up			
ae5.0	up	up	bridge		
ae6	up	up			
ae6.0	up	up	bridge		
ae7	up	up			
ae7.0	up	up	bridge		
ae8	up	up			
ae8.0	up	up	bridge		
ae9	up	up			
ae9.0	up	up	bridge		
ae10	up	down			
ae10.0	up	down	bridge		
xe-101/0/14	up	up			

```

xe-101/0/15      up    up
xe-101/0/16      up    up
xe-101/0/17      up    up
xe-101/0/24      up    up
xe-101/0/25      up    up
xe-101/0/31      up    up
xe-101/0/31.0    up    up    bridge
xe-101/0/32      up    down
xe-101/0/32.0    up    down    bridge
xe-101/0/33      up    down
xe-101/0/33.0    up    down    bridge
ge-101/0/36      up    down
et-101/0/48      up    down
xe-101/0/50:0    up    up
xe-101/0/50:0.0  up    up    bridge
xe-101/0/50:1    up    up
xe-101/0/50:2    up    up
xe-101/0/50:2.0  up    up    bridge
xe-101/0/50:3    up    up
xe-102/0/10      up    up
xe-102/0/11      up    up
xe-102/0/12      up    down
xe-102/0/13      up    up
xe-102/0/14      up    up
xe-102/0/15      up    up
xe-102/0/16      up    up
xe-102/0/17      up    up
xe-102/0/24      up    up
xe-102/0/25      up    up
xe-102/0/31      up    up
xe-102/0/31.0    up    up    bridge
xe-102/0/32      up    up
xe-102/0/32.0    up    up    bridge
xe-102/0/33      up    up
xe-102/0/45      up    down
ge-102/0/46      up    down
xe-102/0/47      up    down
et-102/0/48      up    down
et-102/0/49      up    down
et-102/0/50      up    down
et-102/0/51      up    down
et-102/0/52      up    down
et-102/0/53      up    down
ge-103/0/0       up    up
ge-103/0/0.0     up    up    aenet    --> ae0.0
ge-103/0/1       up    down
ge-103/0/1.0     up    down    aenet    --> ae1.0
ge-103/0/2       up    up
ge-103/0/2.0     up    up    aenet    --> ae2.0
ge-103/0/3       up    up

```

show system core-dumps

List of Syntax	Syntax on page 872 Syntax (Junos OS Evolved) on page 872 Syntax (EX Series Switches) on page 872 Syntax (TX Matrix Router) on page 872 Syntax (TX Matrix Plus Router) on page 872 Syntax (QFX Series and OCX Series) on page 872
Syntax	<pre>show system core-dumps <re0> <re1> <routing-engine> <satellite [<i>fpc-slot-id</i> <i>device-alias alias-name</i>]></pre>
Syntax (Junos OS Evolved)	<pre>show system core-dumps</pre>
Syntax (EX Series Switches)	<pre>show system core-dumps <all-members> <local> <member <i>member-id</i>></pre>
Syntax (TX Matrix Router)	<pre>show system core-dumps <all-chassis all-lcc <i>lcc number</i> scc></pre>
Syntax (TX Matrix Plus Router)	<pre>show system core-dumps <all-chassis all-lcc <i>lcc number</i> <i>sfc number</i>></pre>
Syntax (QFX Series and OCX Series)	<pre>show system core-dumps <component (<i>UUID</i> <i>serial number</i> all)> <display-period (<i>hours</i> <i>minutes</i> <i>seconds</i>)> <display-order> <kernel-crashinfo component (<i>UUID</i> <i>serial number</i>)> <repository (core log)></pre>
Release Information	<p>Command introduced before Junos OS Release 8.5.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>re0, re1, and routing-engine options introduced for dual Routing Engines in Junos OS Release 13.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>satellite option introduced in Junos OS Release 14.2R3.</p>

core-file-info option is deprecated in Junos OS Release 16.1R3.

Description Show core files on all routers or switches running Junos OS. You can use the **show system core-dumps** command to show a list of system core files created when the router or switch has failed. This command can be useful for diagnostic purposes. Each list item includes the file permissions, number of links, owner, group, size, modification date, and path and filename. If dual Routing Engines are present, you can view core-dump files for either routing engine or both routing engines together. On a QFabric system, you can view core-dump files on individual QFabric system devices as well as on the entire QFabric system.

Options **none**—Display a list of all existing core-dump files.



NOTE: If dual Routing Engines are present, then only the core-dump files for the active Routing Engine are listed. For Junos OS Evolved, core-dump files for all Routing Engines are listed.

all-chassis—(TX Matrix and TX Matrix Plus routers only) (Optional) On a routing matrix based on a TX Matrix router, display system core files for the TX Matrix router switch-card chassis [SCC] and all the T640 routers [LCCs] connected to the TX Matrix router.

On a routing matrix based on a TX Matrix Plus router, display system core files for the TX Matrix Plus router (switch-fabric chassis [SFC]) and all the T1600 routers [LCCs] connected to the TX Matrix Plus router.

<all-lcc | lcc number>—(TX Matrix and TX Matrix Plus routers only) (Optional) On a routing matrix based on the TX Matrix router, display core dump files for all T640 routers (line-card chassis [LCCs]) or a specific T640 router [LCC] connected to the TX Matrix router.

On a routing matrix based on the TX Matrix Plus router, display logging information for all T1600 routers (line-card chassis [LCCs]) or a specific T1600 router (LCC) connected to the TX Matrix Plus router. When using the **lcc number** option, replace **number** with a value from 0 through 3.



NOTE: The **all-chassis** option displays system core files for the SCC or SFC and the LCCs connected to the SCC or SFC in the routing matrix while the **all-lcc** option only displays system core files for the LCCs in the routing matrix.

all-members—(EX4200 switches) (Optional) Display system core files on all members of the Virtual Chassis configuration.

component (*UUID | serial number | all*)—(QFabric systems only) (Optional) Display a list of core-dump files located on individual QFabric system device or on the entire QFabric system.

display-order (*timestamp-sort | alphanumeric-sort*)—(QFabric systems only) (Optional) Display list of debug artifacts generated within the specified period—for example, within the last hour, within the last 20 minutes, or within the last 32 seconds—or according to their filename.

display-period (*hours | minutes | seconds*)—(QFabric systems only) (Optional) Display core-dump files generated within the specified period—for example, within the last hour, within the last 20 minutes, or within the last 32 seconds.

kernel-crashinfo component (*UUID | serial number*)—(QFabric systems only) (Optional) Display kernel crash information from the EEPROM on a QFabric system device.

local—(EX4200 switches only) (Optional) Display system core files on the local Virtual Chassis member.

member *member-id*—(EX4200 switches only) (Optional) Display system core files on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value from 0 through 9.

node *node-name*—(Optional) (Junos OS Evolved only) Display system core files generated on the specified node.

re0—(Dual Routing Engines only) Display the core-dump files on re0.

re1—(Dual Routing Engines only) Display the coredump files on re1.

repository (*core | log*)—(QFabric systems only) (Optional) Specify either the core or log repository in which to view core-dump files.

routing-engine (*backup | both | local | master | other*)—(Dual routing engines only) Display a list of core-dump files for either the backup, local, master, or other routing engine or both routing engines.

satellite [*fpc-slot-id | device-alias alias-name*]—(Junos Fusion only) (Optional) Display system core files for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc—(TX Matrix routers only) (Optional) Display system core files on the TX Matrix router (or switch-card chassis).

sfc—(TX Matrix Plus routers only) (Optional) Display system core files on the TX Matrix Plus router (or switch-fabric chassis).

Required Privilege Level

view

List of Sample Output

[show system core-dumps on page 876](#)
[show system core-dumps on page 877](#)

[show system core-dumps routing-engine both on page 877](#)
[show system core-dumps \(TX Matrix Plus Router\) on page 877](#)
[show system core-dumps \(QFX3500 Switch\) on page 879](#)
[show system core-dumps \(QFabric Systems\) on page 879](#)
[show system core-dumps component serial number display-order alphanumeric-sort repository core \(QFabric Systems\) on page 880](#)
[show system core-dumps display-period \(QFabric Systems\) on page 880](#)
[show system core-dumps kernel-crashinfo component serial number \(QFabric Systems\) on page 882](#)
[show system core-dumps repository core \(QFabric Systems\) on page 884](#)
[show system core-dumps repository log \(QFabric Systems\) on page 884](#)

Output Fields Table 43 on page 875 describes the output fields for the **show system core-dumps** command. Output fields are listed in the approximate order in which they appear.

Table 43: show system core-dumps Output Fields

Field Name	Field Description
<i>Permissions</i>	Read/write permissions for the file named.
<i>Links</i>	Number of links to the file.
<i>Owner</i>	Name of the file owner.
<i>Group</i>	Name of the group with file access.
<i>File size</i>	File size in bytes.
<i>Modified</i>	Last file modification date and time.
<i>Path/filename</i>	File path where the file resides and the filename. (MX Series routers only) When you display the core files for an MX Series Virtual Chassis, the show system core-dumps command does not display information about files pertaining to the relayd process.
Repository scope:	Repository where core-dump files and log files are stored. The core-dump files are located in the core repository, and the log files are located in the log repository. The default Repository scope is shared since both the core and log repositories are shared by all of the QFabric system devices.
Repository head:	Path to the top-level repository location.
Repository name:	Name of the repository: core or log .
List of nodes for core repository:	List of core-dump files associated with a particular QFabric system device located in the core repository.
Node Group	Name of the QFabric system device.

Table 43: show system core-dumps Output Fields (continued)

Field Name	Field Description
Node Identifier	UUID or serial number of the QFabric system device.
Num	Number of core-dump and log files.
Model	Model number of the QFabric system device.
Usage	Usage of the repository in megabytes.
Total usage of core repository:	Total usage of core-dump files associated with a particular QFabric system device located in the core repository. Usage is specified in megabytes and as a percentage.
Total usage of log repository:	Total usage of log files associated with a particular QFabric system device located in the log repository. Usage is specified in megabytes and as a percentage.
List of nodes for core repository:	List of core-dump files associated with a particular QFabric system device located in the core repository.
List of nodes for log repository:	List of log files associated with a particular QFabric system device located in the log repository.
Filename	Name of the core-dump file.
Date	Last core-dump file modification date and time.
Size	Size of the core-dump file.
Core filename	Filename of the core-dump file.
Process name	Name of the process that is generating a core-dump file or log file.
Release	Junos OS release.
Build server	Junos OS build server.
Build date	Junos OS build date.
Stack trace	Stack trace of the core-dump file.

Sample Output

show system core-dumps

This example shows the command output if core files exist.

```
user@host> show system core-dumps
```



```
-rw----- 1 root wheel 268369920 Jun 18 17:59 /var/crash/vmcore.0
-rw-rw---- 1 root field 3371008 Jun 18 17:53 /var/tmp/rpd.core.0
-rw-r--r-- 1 root wheel 27775914 Jun 18 17:59 /var/crash/kernel.0
```

show system core-dumps

This example shows the command output if core files do not exist.

```
user@host> show system core-dumps

/var/crash/*core*: No such file or directory
/var/tmp/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
```

show system core-dumps routing-engine both

This example shows the command output if dual Routing Engines are present.

```
user@host> show system core-dumps routing-engine both

re0:
-----
/var/crash/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory

/var/tmp/cores:
total blocks: 496776
-rw-rw---- 1 root field 11910589 Nov 8 13:20 chassisd.core.0.201311081320
...

-rw-rw---- 1 root field 11737227 Oct 28 14:21
rpd.core-tarball.4.tgz.201310281421.3458162
total files: 10

re1:
-----
/var/crash/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory

/var/tmp/cores:
total blocks: 3178420
-rw-rw---- 1 root field 19039721 Nov 8 14:29
chassisd.core.0.201311081429.3485600.gz
-rw-rw---- 1 root field 19039793 Nov 8 14:37
chassisd.core.1.201311081437.3485599.gz
..

-rw-rw---- 1 root field 11710113 Oct 17 15:26
rpd.core-tarball.1.1.tgz.201310171526.3430028
```

show system core-dumps (TX Matrix Plus Router)

```
user@host> show system core-dumps

sfc0-re0:
-----
```

```

/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 1627592
-rw-r--r--  1 root  field  535346090 May 15 07:36
rpd.core-tarball.0.090515.0736.tgz
-rw-r--r--  1 root  field  105632057 May 15 07:37
rpd.core-tarball.1.090515.0737.tgz
-rw-r--r--  1 root  field  101981681 May 15 07:38
rpd.core-tarball.2.090515.0738.tgz
-rw-r--r--  1 root  field  85854573 May 15 07:40
rpd.core-tarball.3.090515.0740.tgz
-rw-r--r--  1 root  field  4157845 May 15 08:18
rpd.core-tarball.4.090515.0818.tgz

lcc0-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 12

lcc1-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 10024
-rw-r--r--  1 root  field  1875794 Apr 22 15:47
chassisd.core-tarball.0.090422.1547.tgz
-rw-r--r--  1 root  field  1894183 Apr 22 19:02
chassisd.core-tarball.0.090422.1902.tgz
-rw-r--r--  1 root  field  1290240 Apr 26 16:01 ksyncd_1558.core.0.090426.1601

lcc2-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 21124008
-rw-r--r--  1 root  wheel  1022376528 May  2  06:43
core-LCC2-EGFPC7.core.0.090502.0643
-rw-r--r--  1 root  wheel  1022376528 May  2  08:13
core-LCC2-EGFPC7.core.0.090502.0813
-rw-r--r--  1 root  wheel  1022376544 May  5  06:15
core-LCC2-EGFPC7.core.0.090505.0615
-rw-r--r--  1 root  wheel  1022376544 May  6  10:59

```

```

core-LCC2-EGFPC7.core.0.090506.1059
-rw-r--r-- 1 root wheel 1022376528 May 2 06:58
core-LCC2-EGFPC7.core.1.090502.0658
-rw-r--r-- 1 root wheel 754271232 May 5 06:33
core-LCC2-EGFPC7.core.1.090505.0633
-rw-r--r-- 1 root wheel 264897536 May 6 11:12
core-LCC2-EGFPC7.core.1.090506.1112
-rw-r--r-- 1 root wheel 1022376528 May 2 07:22
core-LCC2-EGFPC7.core.2.090502.0722
-rw-r--r-- 1 root wheel 163633152 May 5 06:52
core-LCC2-EGFPC7.core.2.090505.0652
-rw-r--r-- 1 root wheel 171312128 May 6 12:13
core-LCC2-EGFPC7.core.2.090506.1213
-rw-r--r-- 1 root wheel 1022376528 May 2 07:39
core-LCC2-EGFPC7.core.3.090502.0739
-rw-r--r-- 1 root wheel 1022376528 May 2 07:55
core-LCC2-EGFPC7.core.4.090502.0755
-rw-r--r-- 1 root wheel 427277312 May 7 04:47
core-LCC2-STFPC4.core.0.090507.0447
-rw-r--r-- 1 root wheel 419609600 May 7 04:47
core-LCC2-STFPC5.core.0.090507.0447
-rw-r--r-- 1 root wheel 432356352 May 7 04:47
core-LCC2-STFPC6.core.0.090507.0447

/var/tmp/cores:
total 2568
-rw-r--r-- 1 root field 1290240 May 14 14:26 ksyncd_1540.core.0.090514.1426
...

```

show system core-dumps (QFX3500 Switch)

```

user@switch> show system core-dumps

/var/crash/*core*: No such file or directory
-rw-rw---- 1 root field 1545143 Jun 4 2012 /var/tmp/pafxpc.core.0.gz
-rw-rw---- 1 root field 1545146 Jun 4 2012 /var/tmp/pafxpc.core.1.gz
-rw-rw---- 1 root field 1545141 Jun 4 2012 /var/tmp/pafxpc.core.2.gz
-rw-rw---- 1 root field 1545146 Jun 4 2012 /var/tmp/pafxpc.core.3.gz
-rw-rw---- 1 root field 1545142 Jun 5 2012 /var/tmp/pafxpc.core.4.gz
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory
total 5

```

show system core-dumps (QFabric Systems)

```

user@switch> show system core-dumps

Repository scope: shared
Repository head: /pbdata/export
List of nodes for core repository: /pbdata/export/r.dumps/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	0	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	0	fx-jvre	OM
NW-NG-0	BBAK0394	0	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	0	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	0	fx-jvre	OM

FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	0	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	0	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YW3803	0	qfxc08-3008	OM
IC-WS001	WS001/YN5999	0	qfxc08-3008	OM
node-device1	BBAK0372	0	qfx3500	OM
node-device1	EE3093	0	qfx3500	OM
Total usage of core repository:0M of 70000M (0.0%)				
List of nodes for log repository: /pbdata/export/rlogs/				
Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	1	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	1	fx-jvre	OM
NW-NG-0	BBAK0394	1	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	1	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	3	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	1	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	1	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YN5999	1	qfxc08-3008	OM
IC-WS001	WS001/YW3803	1	qfxc08-3008	OM
node-device1	BBAK0372	1	qfx3500	OM
node-device1	EE3093	1	qfx3500	OM
Total usage of log repository:0M of 70000M (0.0%)				

show system core-dumps component serial number display-order alphanumeric-sort repository core (QFabric Systems)

```
user@switch> show system core-dumps component BBAK8891 display-order alphanumeric-sort repository core
```

Repository scope: shared				
Repository head: /pbdata/export				
Repository name: core				
List of core dumps for component BBAK8891				
Repository location: /pbdata/export/rdumps/BBAK8891				
Filename	Date			Size
eswd.core.0.1361.11172011214257.gz	Nov 17 21:43:10 2011			4779553
eswd.core.1.80267.11172011214514.gz	Nov 17 21:45:19 2011			3541648
eswd.core.2.80682.11172011214535.gz	Nov 17 21:45:43 2011			2156683
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011			375617
Number of core dumps in repository:4				

show system core-dumps display-period (QFabric Systems)

```
user@switch> show system core-dumps display-period 24h
```

```
show system core-dumps display-period 24h
Repository scope: shared
Repository head: /pbdata/export
List of core dumps at repository: /pbdata/export/rdumps
Delta timespec: Last 24h
Component: BBAK8273
```

Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375794

Component: cedb7b0e-0025-11e1-9a5f-00e081c52990		
Filename	Size	Date
vccpd.core.0.1461.11182011151131.gz	Nov 18 15:11:31 2011	120951
Component: ee19c4f8-0025-11e1-aef6-00e081c52990		
Filename	Size	Date
vccpd.core.0.1462.11182011151131.gz	Nov 18 15:11:31 2011	109420
Component: BBAK8281		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:36 2011	375373
Component: BBAK8891		
Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375617
Component: BBAK8276		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:35 2011	375350
Component: BBAK8868		
Filename	Size	Date
vccpd.core.0.1196.11182011151130.gz	Nov 18 15:11:34 2011	376211
Component: BBAK8835		
Filename	Size	Date
vccpd.core.0.1195.11182011151130.gz	Nov 18 15:11:35 2011	375700
Component: BBAK8283		
Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:36 2011	368298
Component: YW3781/YW3781		
Filename	Size	Date
vccpd.core.0.1220.11182011151131.gz	Nov 18 15:11:38 2011	380002
Component: 09726be2-0026-11e1-82d9-00e081c52990		
Filename	Size	Date
vccpd.core.0.1461.11182011151130.gz	Nov 18 15:11:31 2011	119965
Component: BBAK8309		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:36 2011	378930
Component: 303d476a-0026-11e1-abf4-00e081c52990		
Filename	Size	Date
vccpd.core.0.1460.11182011151131.gz	Nov 18 15:11:31 2011	118385
Component: YW3798/YW3798		
Filename	Size	Date
vccpd.core.0.1219.11182011151131.gz	Nov 18 15:11:36 2011	380455
List of log dumps at repository: /pbdata/export/rlogs		
Delta timespec: Last 24h		
Component: BBAK8273		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:39 2011	20415
Component: cedb7b0e-0025-11e1-9a5f-00e081c52990		
Filename	Size	Date

vccpd.tarball.0.1461.11182011151131.tgz	Nov 18 15:11:33 2011	19651
Component: ee19c4f8-0025-11e1-ae6-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1462.11182011151133.tgz	Nov 18 15:11:36 2011	24650
Component: BBAK8281		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:41 2011	19445
Component: BBAK8891		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:41 2011	21916
Component: BBAK8276		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:39 2011	20461
Component: BBAK8868		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:41 2011	21924
Component: BBAK8835		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151137.tgz	Nov 18 15:11:39 2011	19424
Component: BBAK8283		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:42 2011	31186
Component: YW3781/YW3781		
Filename	Size	Date
vccpd.tarball.0.1220.11182011151141.tgz	Nov 18 15:11:45 2011	27565
Component: 09726be2-0026-11e1-82d9-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1461.11182011151130.tgz	Nov 18 15:11:34 2011	19613
Component: BBAK8309		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151138.tgz	Nov 18 15:11:46 2011	50362
Component: 303d476a-0026-11e1-abf4-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1460.11182011151133.tgz	Nov 18 15:11:33 2011	19360
Component: YW3798/YW3798		
Filename	Size	Date
vccpd.tarball.0.1219.11182011151140.tgz	Nov 18 15:11:49 2011	24473

show system core-dumps kernel-crashinfo component serial number (QFabric Systems)

```

user@switch> show system core-dumps kernel-crashinfo component A0001/YA0197
Node: A0001/YA0197

Information about previous kernel crash:

-- Kernel panic data --

```

```

Panic string: kdb_sysctl_panic
System uptime: 3 day 20 hr 59 min 40 sec Kernel crash time: 2011-11-15 Wed 15:25:17
Kernel build linkstamp: JUNOS 11.3I #0: 2011-11-10 20:42:27 UTC

-- Stacktrace of panicing context --
Processor 1 (crash monarch):
savectx+0x0 (c9552800,80214efc,802a7fbc,c88ad05c) ra 801b93a8 sz 0
kdm_kcore_save_crashinfo+0x254 (c9552800,0,802a7fbc,c88ad05c) ra 801b9f44 sz 784
  kdm_kcore_kern_panic_event_handler+0x4b0 (c9552800,0,802a7fbc,c88ad05c) ra
  8022a9b8 sz 88
panic+0x1d0 (c9552800,0,4,77fed534) ra 802540c0 sz 56
kdb_sysctl_panic+0x70 (c9552800,0,4,77fed534) ra 80237e58 sz 40 sysctl_root+0x12c
  (c9552800,0,4,e8bc5cf8) ra 80238e50 sz 48
userland_sysctl+0x164 (c9552800,0,4,e8bc5cf8) ra 8023956c sz 104
__sysctl+0xe4 (c9552800,0,4,e8bc5cf8) ra 806d62e8 sz 160
trap+0xe1c (c9552800,0,4,e8bc5cf8) ra 80896e68 sz 128
MipsUserGenException+0x1a4 (c9552800,0,4,405cd12c) ra 0 sz 0
pid 82340, process: sysctl

Processor 0:
restoreintr+0x14 (1,81bca820,3,0) ra 806cdc3c sz 0
spinlock_exit+0x30 (1,81bca820,3,0) ra 8025d354 sz 24
sleepq_release+0x64 (1,81bca820,3,0) ra 8025e670 sz 24
sleepq_timeout+0x224 (1,81bca820,3,0) ra 80240294 sz 48
softclock+0x434 (1,81bca820,3,0) ra 802067f8 sz 80
ithread_loop+0x244 (1,81bca820,3,0) ra 80200e28 sz 64 fork_exit+0xc0
  (1,81bca820,3,0) ra 80897c28 sz 48
MipsNMIEException+0x34 (1,81bca820,3,0) ra 0 sz 0
pid 82340, process: sysctl

Processor 2:
cpu_idle+0x20 (80960000,51bbc,2031df,81bca1b8) ra 80204948 sz 24 idle_proc+0x130
  (80960000,51bbc,2031df,81bca1b8) ra 80200e28 sz 56 fork_exit+0xc0
  (80960000,51bbc,2031df,81bca1b8) ra 80897c28 sz 48
MipsNMIEException+0x34 (80960000,51bbc,2031df,81bca1b8) ra 0 sz 0
pid 82340, process: sysctl

Processor 3:
cpu_idle+0x20 (80960000,51bbc,2038df,81bca300) ra 80204948 sz 24 idle_proc+0x130
  (80960000,51bbc,2038df,81bca300) ra 80200e28 sz 56 fork_exit+0xc0
  (80960000,51bbc,2038df,81bca300) ra 80897c28 sz 48
MipsNMIEException+0x34 (80960000,51bbc,2038df,81bca300) ra 0 sz 0
pid 82340, process: sysctl

Processor 4:
cpu_idle+0x20 (80960000,51bbc,2037df,81bca448) ra 80204948 sz 24 idle_proc+0x130
  (80960000,51bbc,2037df,81bca448) ra 80200e28 sz 56 fork_exit+0xc0
  (80960000,51bbc,2037df,81bca448) ra 80897c28 sz 48
MipsNMIEException+0x34 (80960000,51bbc,2037df,81bca448) ra 0 sz 0
pid 82340, process: sysctl

Processor 5:
restoreintr+0x14 (1,51bbc,203edf,81bca590) ra 806cdc3c sz 0
spinlock_exit+0x30 (1,51bbc,203edf,81bca590) ra 80204a34 sz 24 idle_proc+0x21c
  (1,51bbc,203edf,81bca590) ra 80200e28 sz 56 fork_exit+0xc0
  (1,51bbc,203edf,81bca590) ra 80897c28 sz 48
MipsNMIEException+0x34 (1,51bbc,203edf,81bca590) ra 0 sz 0
pid 82340, process: sysctl

```

```

Processor 6:
cpu_idle+0x20 (80960000,51bbc,205cdf,81bca6d8) ra 80204948 sz 24 idle_proc+0x130
(80960000,51bbc,205cdf,81bca6d8) ra 80200e28 sz 56 fork_exit+0xc0
(80960000,51bbc,205cdf,81bca6d8) ra 80897c28 sz 48
MipsNMIException+0x34 (80960000,51bbc,205cdf,81bca6d8) ra 0 sz 0
pid 82340, process: sysctl

Processor 7:
lockmgr+0x5ac (c97e8484,c8dd9800,0,c8dd9800) ra 8c11c81c sz 48
sal_sem_take+0x134 (c97e8484,c8dd9800,0,c8dd9800) ra 8c351108 sz 56
_bcm_esw_linkscan_thread+0x45c (c97e8484,c8dd9800,0,c8dd9800) ra 8c11cdb4 sz 104
sal_thread_start_wrap+0x74 (c97e8484,c8dd9800,0,c8dd9800) ra 80200e28 sz 32
fork_exit+0xc0 (c97e8484,c8dd9800,0,c8dd9800) ra 80897c28 sz 48
MipsNMIException+0x34 (c97e8484,c8dd9800,0,c8dd9800) ra 0 sz 0
pid 82340, process: sysctl
-- End of stacktrace --

```

show system core-dumps repository core (QFabric Systems)

```

user@switch> show system core-dumps repository core

Repository scope: shared
Repository head: /pbdata/export
Repository name: core
List of nodes for core repository: /pbdata/export/rdumps/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	0	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	0	fx-jvre	OM
NW-NG-0	BBAK0394	0	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	0	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	0	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	0	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	0	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YW3803	0	qfxc08-3008	OM
IC-WS001	WS001/YN5999	0	qfxc08-3008	OM
node-device1	BBAK0372	0	qfx3500	OM
node-device1	EE3093	0	qfx3500	OM

Total usage of core repository: 0M of 70000M (0.0%)

show system core-dumps repository log (QFabric Systems)

```

user@switch> show system core-dumps repository log

Repository scope: shared
Repository head: /pbdata/export
Repository name: log
List of nodes for log repository: /pbdata/export/rlogs/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	1	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	1	fx-jvre	OM
NW-NG-0	BBAK0394	1	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	1	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	3	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	1	fx-jvre	OM

FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	1	fx-jvre	0M
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YN5999	1	qfxc08-3008	0M
IC-WS001	WS001/YW3803	1	qfxc08-3008	0M
node-device1	BBAK0372	1	qfx3500	0M
node-device1	EE3093	1	qfx3500	0M
Total usage of log repository:0M of 70000M (0.0%)				

CHAPTER 6

Enabling Layer 3 Support in a Junos Fusion Enterprise

- [Understanding Integrated Routing and Bridging \(IRB\) Interfaces in a Junos Fusion Enterprise on page 887](#)

Understanding Integrated Routing and Bridging (IRB) Interfaces in a Junos Fusion Enterprise

In most campus networking environments, endpoint devices must have a path to send and receive Layer 3 traffic.

In a typical Junos Fusion Enterprise deployment, the EX9200 switch assumes the responsibilities of an aggregation layer switch and is typically the gateway to layer 3. Integrated routing and bridging (IRB) interfaces are, therefore, configured on the EX9200 switches acting as aggregation devices to move traffic between Layer 2 and Layer 3.

See *Understanding Integrated Routing and Bridging* for information on configuring IRB interfaces.

See the [Adding Layer 3 Support to a Junos Fusion Enterprise](#) section of the [Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#) for a sample IRB interface configuration in a Junos Fusion Enterprise.

Related Documentation

- [Understanding Integrated Routing and Bridging](#)

CHAPTER 7

802.1X in a Junos Fusion Enterprise

- [Understanding 802.1X on a Junos Fusion Enterprise on page 889](#)

Understanding 802.1X on a Junos Fusion Enterprise

This topic describes 802.1X in a Junos Fusion Enterprise.

802.1X is an IEEE standard for port-based network access control (PNAC). It provides an authentication mechanism for devices seeking to access a LAN. The 802.1X authentication feature is based upon the IEEE 802.1X standard Port-Based Network Access Control.

The range of 802.1X configuration options are beyond the scope of this document. For additional information on 802.1X, see [802.1X for Switches Overview](#) and the [Access Control Feature Guide for EX9200 Switches](#).

The following requirements should be understood when configuring 802.1X for a Junos Fusion Enterprise:

- The authentication server cannot connect to the Junos Fusion Enterprise through an extended port.
- 802.1X configuration must match on both aggregation devices in a Junos Fusion Enterprise. 802.1X, therefore, should typically be configured using configuration groups that are applied to both aggregation devices using commit synchronization. See [“Understanding Configuration Synchronization in a Junos Fusion” on page 25](#) and [“Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion” on page 77](#).
- 802.1X control is handled by either aggregation device on a per-session basis. Either aggregation device can act as the primary device for 802.1X control for any 802.1X session. If traffic flow through one aggregation device is disrupted during an 802.1X session, the 802.1X session may be interrupted and control could be transferred to the other aggregation device.
- A captive portal cannot be configured on an extended port.

See [Enabling 802.1X](#) in the [Enabling Junos Fusion Enterprise on an Enterprise Campus Network](#) document for an example of 802.1X configuration on a Junos Fusion Enterprise.

CHAPTER 8

Junos Fusion Enterprise Half-Duplex Links on Satellite Devices

- [Understanding Half-Duplex Links on Satellite Devices in a Junos Fusion Enterprise on page 891](#)
- [link-mode on page 893](#)

Understanding Half-Duplex Links on Satellite Devices in a Junos Fusion Enterprise

This topic describes half-duplex links on satellite devices in a Junos Fusion Enterprise.

This topic covers:

- [Half-Duplex Links on Satellite Devices Overview on page 891](#)
- [Understanding Configuration of Full-Duplex Link Mode on a Satellite Device and Verification of Half-Duplex Mode on page 892](#)

Half-Duplex Links on Satellite Devices Overview

Half-duplex communication is supported on all built-in network copper ports on EX2300, EX3400, and EX4300 satellite devices in a Junos Fusion Enterprise (JFE). *Half-duplex* is bidirectional communication, but signals can flow in only one direction at a time. *Full-duplex* communication means that both ends of the communication can send and receive signals at the same time.

The built-in network copper ports are configured by default as full-duplex 1-gigabit links with autonegotiation. If the link partner is set to autonegotiate the link, then the link is autonegotiated to full duplex or half-duplex. If the link is not set to autonegotiation, then the satellite-device link defaults to half-duplex unless the interface is explicitly configured for full duplex.

On EX2300, EX3400, and EX4300 satellite devices, the link mode is handled as follows:

- If the link partner is operating in half-duplex, the satellite device interface goes to half-duplex.
- If the link partner is not capable of autonegotiation, the satellite device interface goes to half duplex.

- If the link partner is capable of autonegotiation and is operating in full duplex, the satellite device interface also works in full duplex.

Understanding Configuration of Full-Duplex Link Mode on a Satellite Device and Verification of Half-Duplex Mode

Like all features in a Junos Fusion Enterprise, link modes are configured and verified from the aggregation devices.

To explicitly configure full duplex:

```
[edit]
user@aggregation-device# set interfaces interface-name link-mode full-duplex
```

To verify a half-duplex setting:

```
user@aggregation-device> show interfaces interface-name extensive
```

Related Documentation

- *Configuring Gigabit Ethernet Interfaces for EX Series Switches with ELS support*

link-mode

Syntax	<code>link-mode <i>mode</i> (automatic full-duplex half-duplex);</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> ether-options],</code> <code>[edit interfaces ge-<i>pim</i>/0/0 switch-options switch-port <i>port-number</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	Set the device's link connection characteristic.
Options	<p><i>mode</i>—Link characteristics:</p> <ul style="list-style-type: none"> • automatic—Link mode is negotiated. This is the default for EX Series switches. • full-duplex—Connection is full duplex. • half-duplex—Connection is half duplex. <p>Default: Fast Ethernet interfaces can operate in either full-duplex or half-duplex mode. The router's or switch's management Ethernet interface, fxp0 or em0, and the built-in Fast Ethernet interfaces on the FIC (M7i router) autonegotiate whether to operate in full-duplex or half-duplex mode. Unless otherwise noted here, all other interfaces operate only in full-duplex mode.</p>



NOTE: On EX Series switches, if **no-auto-negotiation** is specified in `[edit interfaces interface-name ether-options]`, you can select only **full-duplex** or **half-duplex**. If **auto-negotiation** is specified, you can select any mode.



NOTE:

- Member links of an aggregated Ethernet bundle must not be explicitly configured with a link mode. You must remove any such link-mode configuration before committing the aggregated Ethernet configuration.
- Starting with Junos OS release 17.4R1 and later, the link-mode configuration is not supported for 10-Gigabit Ethernet interfaces.
- Starting in Junos OS release 18.4R1, half-duplex mode is supported on SRX340 and SRX345 devices.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

- Related Documentation**
- *Configuring the Link Characteristics on Ethernet Interfaces*
 - *Understanding Management Ethernet Interfaces*
 - *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
 - *Configuring Gigabit Ethernet Interfaces for EX Series Switches with ELS support*

CHAPTER 9

Junos Fusion Enterprise Network Monitoring and Analyzers

- [Understanding sFlow Technology on a Junos Fusion Enterprise on page 895](#)
- [Understanding Port Mirroring Analyzers on a Junos Fusion Enterprise on page 897](#)

Understanding sFlow Technology on a Junos Fusion Enterprise

This topic describes sFlow technology in a Junos Fusion Enterprise.

This topic covers:

- [sFlow Technology on a Junos Fusion Enterprise Overview on page 895](#)
- [Understanding the sFlow Sampling Mechanism on a Junos Fusion Enterprise on page 895](#)
- [Limitations for sFlow on a Junos Fusion Enterprise on page 896](#)

sFlow Technology on a Junos Fusion Enterprise Overview

sFlow technology is a monitoring technology for high-speed switched or routed networks. sFlow technology randomly samples network packets and sends the samples to a monitoring system. In a Junos Fusion Enterprise, you can configure sFlow technology on the aggregation device to continuously monitor traffic on all extended interfaces simultaneously.

Many sFlow technology concepts for standalone switches also apply to sFlow technology on a Junos Fusion Enterprise. See [Understanding How to Use sFlow Technology for Network Monitoring on an EX Series Switch](#) for a detailed overview of sFlow on standalone EX Series switches.

Understanding the sFlow Sampling Mechanism on a Junos Fusion Enterprise

sFlow technology uses the following two sampling mechanisms:

- **Packet-based sampling:** Samples one packet out of a specified number of packets from an interface enabled for sFlow technology.
- **Time-based sampling:** Samples interface statistics at a specified interval from an interface enabled for sFlow technology.

The sampling information is used to create a network traffic visibility picture. The Juniper Networks Junos operating system (Junos OS) fully supports the sFlow standard described in RFC 3176, *InMon Corporation's sFlow: A Method for Monitoring Traffic in Switched and Routed Networks*.



NOTE: sFlow technology on the switches samples only raw packet headers. A raw Ethernet packet is the complete Layer 2 network frame.

An sFlow monitoring system consists of an sFlow agent (embedded in the switch), and a centralized collector. The sFlow agent's two main activities are random sampling and statistics gathering. The sFlow agent combines interface counters and flow samples and sends them across the network to the sFlow collector in UDP datagrams, directing those datagrams to the IP address and UDP destination port of the collector. Each datagram contains the following information:

- The IP address of the sFlow agent
- The number of samples
- The interface through which the packets entered the agent
- The interface through which the packets exited the agent
- The source and destination interface for the packets
- The source and destination VLAN for the packets

Like all features in a Junos Fusion Enterprise, sFlow technology is configured from the aggregation devices.



BEST PRACTICE:

We recommend the following consideration guidelines for sFlow technology in a Junos Fusion Enterprise:

- Configure sFlow technology on both aggregation devices.
- Configure the same sampling rates on all the extended ports. If you configure different sampling rates, then the lowest value is used for all ports. Note that counter samples are sent from both aggregation devices for an extended port.
- Use the configuration sync feature to synchronize the configuration across the aggregation devices.
- After synchronization is finished, make sure that the collector is reachable from both aggregation devices.

Limitations for sFlow on a Junos Fusion Enterprise

Consider the following limitations when you configure sFlow technology on a Junos Fusion Enterprise:

- You cannot configure sFlow technology on a link aggregation group (LAG), but you can configure it individually on a LAG member interface.
- You cannot configure sFlow technology on a cascade port.
- When using the configuration sync feature, sFlow collector statistics are not synced between the aggregation devices.
- Adaptive sampling is not supported for extended ports. Given this limitation, make sure that you configure the appropriate sampling rate for your configuration so that there is no congestion for CPU traffic.

Understanding Port Mirroring Analyzers on a Junos Fusion Enterprise

This topic describes port mirroring analyzers in a Junos Fusion Enterprise.

This topic covers:

- [Port Mirroring Analyzers on a Junos Fusion Enterprise Overview on page 897](#)
- [Understanding the Configuration of Analyzers in a Junos Fusion Enterprise on page 897](#)
- [Limitations for Port Mirroring Analyzers on a Junos Fusion Enterprise on page 898](#)

Port Mirroring Analyzers on a Junos Fusion Enterprise Overview

Port mirroring can be used for traffic analysis on routers and switches that, unlike hubs, do not broadcast packets to every port on the destination device. Port mirroring sends copies of all packets or policy-based sample packets to local or remote analyzers where you can monitor and analyze the data.

In a Junos Fusion Enterprise, analyzers are used to mirror traffic from an extended port on a satellite device to an output interface or VLAN. The output interface or VLAN can be connected to the aggregation device or to an extended port on a satellite device.

You can configure an analyzer to mirror:

- Bridged packets (Layer 2 packets)
- Routed packets (Layer 3 packets)

Many port mirroring analyzer concepts for standalone switches also apply to port mirroring analyzers on Junos Fusion Enterprise. See *Understanding Port Mirroring Analyzers* for a detailed overview of port mirroring analyzers on standalone switches.

Understanding the Configuration of Analyzers in a Junos Fusion Enterprise

Like all features in a Junos Fusion Enterprise, port mirroring analyzers are configured from the aggregation devices.

The mirroring options in a Junos Fusion Enterprise are:

- Mirror traffic from a native interface to an extended port.

- Mirror traffic from an extended port on one satellite device to an extended port on another satellite device.
- Mirror traffic from an extended port to a native interface. Configure remote mirroring for this scenario—that is, configure an analyzer output VLAN with an ICL and a native interface as remote-mirroring VLAN members in one aggregation device and an ICL as a remote-mirroring VLAN member in the peer aggregation device, so that both aggregation devices can mirror to the native interface.



NOTE: Even if the mirroring source and destination are on the same satellite device, the mirrored traffic always goes back to the aggregation device.



BEST PRACTICE:

We recommend the following configuration guidelines for analyzers in a Junos Fusion Enterprise:

- Configure remote mirroring.
 - Configure an analyzer output VLAN with both an ICL (interchassis link) and the mirror destination as VLAN members, so that mirrored traffic can travel through the ICL to the peer aggregation device if the mirror destination is not directly reachable on the local aggregation device. This is applicable in scenarios where the mirror destination is single-homed or a dual-homed satellite device and the cascade port is down on the local aggregation device.
 - Use the configuration sync feature to synchronize the configuration across aggregation devices.
-

Limitations for Port Mirroring Analyzers on a Junos Fusion Enterprise

Consider the following limitations when you configure port mirroring analyzers on a Junos Fusion Enterprise:

- You cannot mirror a cascade port or an ICL. (See the configuration guidelines in *Understanding Port Mirroring Analyzers* for other port types that cannot be mirrored.)
- An analyzer input VLAN mirrors all interfaces in the VLAN *except* the ICL in the VLAN. This limitation keeps mirrored traffic from causing congestion in the ICL.

**Related
Documentation**

- *Understanding Port Mirroring Analyzers*

Junos Fusion Enterprise Private VLANs

- [Understanding Private VLANs on a Junos Fusion Enterprise on page 899](#)

Understanding Private VLANs on a Junos Fusion Enterprise

This topic describes private VLANs (PVLANS) in a Junos Fusion Enterprise.

This topic covers:

- [PVLANS on a Junos Fusion Enterprise Overview on page 899](#)
- [Understanding the Configuration of PVLANS in a Junos Fusion Enterprise on page 900](#)
- [Limitations for PVLANS on a Junos Fusion Enterprise on page 901](#)

PVLANS on a Junos Fusion Enterprise Overview

Junos Fusion Enterprise (JFE) supports private VLANs (PVLANS). PVLANS on a Junos Fusion Enterprise are an extension of PVLANS on standalone switches that enables PVLANS on extended ports on satellite devices.

PVLANS are useful for restricting the flow of broadcast and unknown unicast traffic and for limiting the known communication between known hosts. PVLAN is a standard introduced by RFC 5517 to achieve port or device isolation in a Layer 2 VLAN by partitioning a VLAN broadcast domain (also called a *primary VLAN*) into smaller subdomains (also called *secondary VLANs*).

PVLANS can be used for such purposes as:

- To help ensure the security of service providers sharing a server farm
- To provide security to subscribers of various service providers sharing a common metropolitan area network
- To achieve isolation within the same subnet in a very large enterprise network

In a Junos Fusion Enterprise, PVLANS can be configured on ports belonging to the aggregation device or to an extended port on a satellite device.

PVLAN concepts for standalone switches apply to PVLANS on a Junos Fusion Enterprise. See *Understanding Private VLANs*.



NOTE: Some “Guidelines and Restrictions for PVLANS” in *Understanding Private VLANs*, however, do not apply to PVLANS on a Junos Fusion Enterprise for the following reasons:

- Restrictions on use of MSTP and VSTP—Spanning-tree protocols are not supported on Junos Fusion Enterprise.
- Restrictions on use of *mac-table-size*, *no-mac-learning*, *mac-statistics*, and *interface-mac-limit*—These statements are not supported on Junos Fusion Enterprise.

Understanding the Configuration of PVLANS in a Junos Fusion Enterprise

Like all features in a Junos Fusion Enterprise, PVLANS are configured from the aggregation devices.

Junos Fusion Enterprise PVLAN topologies support the following:

- Multiple satellite devices can be clustered into a group and cabled into the JFE as a group instead of as individual satellite devices.
- Aggregation device *native ports* (that is, ports on the aggregation device that are not acting as cascade ports) or satellite device extended ports can act as promiscuous ports, isolated ports, or community VLAN ports. See *Understanding Private VLANs* for definitions of PVLAN port types. These port types are also described in RFC 5517.
- The promiscuous port can be attached to a core switch or router through physical interfaces or aggregated links.
- PVLANS are supported in dual aggregation device JFEs.



BEST PRACTICE:

We recommend the following configuration guidelines for PVLANS in a Junos Fusion Enterprise:

- In a dual-aggregation device JFE, we recommend that you use the interchassis link (ICL) as the inter-switch link for PVLAN inter-switching. Although any port link in the JFE *could* serve as the inter-switch link, the high-bandwidth requirements on the inter-switch link make the ICL the best choice.
 - PVLAN ports can span across the switches in the JFE. We recommend that you interconnect 10-gigabit or 40-gigabit ports as they provide the high bandwidth needed for PVLAN trunk traffic.
-

Limitations for PVLANS on a Junos Fusion Enterprise

Consider the following limitations when you configure PVLANS on a Junos Fusion Enterprise:

- PVLANS on a JFE do not work if local switching is enabled on satellite devices.
- You cannot change the role of a PVLAN bridge domain from primary VLAN to secondary VLAN or the reverse in a single commit cycle.
- Protocols configured per VLAN cannot be configured on secondary VLANs. Secondary VLANs inherit protocol configurations from the primary VLAN.

Related Documentation

- *Understanding Private VLANs*

CHAPTER 11

Power over Ethernet, LLDP, and LLDP-MED on Junos Fusion Enterprise

- [Understanding Power over Ethernet in a Junos Fusion on page 903](#)
- [Understanding LLDP and LLDP-MED on a Junos Fusion on page 906](#)
- [Configuring Power over Ethernet in a Junos Fusion on page 907](#)
- [Verifying PoE Configuration and Status for a Junos Fusion \(CLI Procedure\) on page 911](#)

Understanding Power over Ethernet in a Junos Fusion

This topic describes Power over Ethernet (PoE) in a Junos Fusion.

This topic covers:

- [Power over Ethernet in a Junos Fusion Overview on page 903](#)
- [Understanding the Role of the Aggregation Devices for PoE Support in a Junos Fusion on page 904](#)
- [Understanding the Role of the Satellite Devices for PoE Support in a Junos Fusion on page 904](#)
- [Understanding PoE Configuration in a Junos Fusion on page 904](#)
- [Understanding PoE Support Standards for Extended Ports in a Junos Fusion on page 905](#)
- [Understanding Maximum PoE Power Budgets in a Junos Fusion on page 905](#)
- [Understanding PoE Controller Software in a Junos Fusion on page 905](#)
- [Understanding PoE Power Allocation Configuration Options in a Junos Fusion on page 906](#)

Power over Ethernet in a Junos Fusion Overview

Power over Ethernet (PoE) enables electric power, along with data, to be passed over a copper Ethernet LAN cable. Powered devices—such as VoIP telephones, wireless access points, video cameras, and point-of-sale devices—that support PoE can receive power safely from the same access ports that are used to connect personal computers to the network. This reduces the amount of wiring in a network, and it also eliminates the need to position a powered device near an AC power outlet, making network design more flexible and efficient.

In a Junos Fusion, PoE is used to carry electric power from an extended port on a satellite device to a connected device. An extended port is any network-facing port on a satellite device in a Junos Fusion.

Many PoE concepts for standalone switches also apply to PoE on Junos Fusion. See *Understanding PoE on EX Series Switches* for a detailed overview of PoE on standalone EX Series switches.

Understanding the Role of the Aggregation Devices for PoE Support in a Junos Fusion

An aggregation device is responsible for configuring, monitoring, and maintaining all configurations for all extended ports in a Junos Fusion, including PoE. Therefore, all commands used to configure, monitor, and maintain PoE in a Junos Fusion are entered from the aggregation device.

An extended port on the satellite device must support PoE to enable PoE in a Junos Fusion. No hardware limitations for PoE support are introduced by the aggregation device in a Junos Fusion.



NOTE: PoE is supported in a Junos Fusion Provide Edge and a Junos Fusion Enterprise despite not being supported in MX series routers or standalone EX9200 switches. All MX series routers and EX9200 switch models, when configured into the aggregation device role in a Junos Fusion, can enable PoE Junos Fusion because the PoE hardware support is supported on the satellite devices.

Understanding the Role of the Satellite Devices for PoE Support in a Junos Fusion

A satellite device in a Junos Fusion provides PoE hardware support in a Junos Fusion. Each satellite device in a Junos Fusion that supports PoE has its own PoE controller. The PoE controller keeps track of the PoE power consumption on the satellite device and allocates power to PoE extended ports. The maximum PoE power consumption for a satellite device—the total amount of power available for the satellite device's PoE controller to allocate to all of the satellite device's PoE interfaces—is determined individually by the switch model of the satellite devices and by the power supply or supplies installed in that satellite device.

In allocating power, the satellite device's PoE controller cannot exceed the satellite device's maximum PoE power availability.

The maximum PoE power consumption varies by satellite device in a Junos Fusion, because the hardware specifications of the satellite devices determine the maximum PoE power availability.

See *Understanding PoE on EX Series Switches* for a listing of the PoE power consumption limit for each EX Series switch model and power supply configuration.

Understanding PoE Configuration in a Junos Fusion

Like all features in a Junos Fusion, PoE is configured from the aggregation devices.

In dual aggregation device topologies, the PoE configurations should match identically on both aggregation devices.

PoE in a Junos Fusion works by periodically checking the PoE configuration on each aggregation device, and updating the configuration when a PoE change is identified. If the aggregation devices have different PoE configurations, the PoE configurations for the Junos Fusion will continually change because the Junos Fusion always uses the PoE configuration of the last aggregation device that was checked.

Understanding PoE Support Standards for Extended Ports in a Junos Fusion

The extended port hardware—specifically, the extended port hardware interface on the satellite device in the Junos Fusion —must support PoE to enable PoE in a Junos Fusion.

All extended ports that support PoE on satellite devices in a Junos Fusion support the IEEE 802.3at PoE+ standard. The IEEE 802.3at PoE+ standard allows an extended port that supports PoE to provide up to 30 W of power to a connected device.

Understanding Maximum PoE Power Budgets in a Junos Fusion

The maximum PoE power budgets are determined for each individual satellite device in a Junos Fusion.

Maximum PoE power budgets for a satellite device vary by the switch model and power supply configuration of the satellite device.

To learn the maximum PoE power supply budget for a satellite device:

- See *Understanding PoE on EX Series Switches* for a table of maximum power supply budgets by switch device model.
- Enter the **show poe controller** command from your aggregation device and view the Maximum Power output.

Understanding PoE Controller Software in a Junos Fusion

All switches that support PoE have a PoE controller that runs PoE controller software, including switches acting as satellite devices in a Junos Fusion.

PoE controller software is bundled with Junos OS. PoE controller software should be updated before installing a switch as a satellite device in a Junos Fusion.

For information on PoE controller software requirements in a Junos Fusion Enterprise, see [“Understanding Junos Fusion Enterprise Software and Hardware Requirements” on page 26](#).

For information on PoE controller software requirements in a Junos Fusion Provider Edge, see *Understanding Junos Fusion Provider Edge Software and Hardware Requirements*

For information on checking or upgrading the PoE controller software version, see *Upgrading the PoE Controller Software*.

Understanding PoE Power Allocation Configuration Options in a Junos Fusion

Junos Fusion supports several optional features that help manage PoE power allocation on the satellite devices.

The PoE power allocation options are discussed in greater detail in *Understanding PoE on EX Series Switches*.

Related Documentation

- [Configuring Power over Ethernet in a Junos Fusion on page 907](#)
- [Verifying PoE Configuration and Status for a Junos Fusion \(CLI Procedure\) on page 911](#)

Understanding LLDP and LLDP-MED on a Junos Fusion

This topic describes Link Layer Discovery Protocol (LLDP) and Link Layer Discovery Protocol–Media Endpoint Discovery (LLDP-MED) in a Junos Fusion.

This topic covers:

- [LLDP and LLDP-MED in a Junos Fusion Overview on page 906](#)
- [Understanding LLDP and LLDP-MED Configuration and Traffic Handling in a Junos Fusion on page 907](#)

LLDP and LLDP-MED in a Junos Fusion Overview

LLDP and LLDP-MED are used to learn and distribute device information on network links. The information enables the switch to quickly identify a variety of devices, resulting in a LAN that interoperates smoothly and efficiently.

LLDP-capable devices transmit information in type, length, and value (TLV) messages to neighbor devices. Device information can include information such as chassis and port identification and system name and system capabilities. The TLVs leverage this information from parameters that have already been configured in the Junos operating system (Junos OS).

Many LLDP and LLDP-MED concepts for standalone EX Series switches that support the features also apply to LLDP and LLDP-MED on Junos Fusion. See *Understanding LLDP and LLDP-MED on EX Series Switches* for a detailed overview of LLDP and LLDP-MED on standalone EX Series switches.



NOTE: LLDP-MED goes one step further than LLDP, exchanging IP-telephony messages between the switch and the IP telephone. LLDP-MED is an important access layer switch feature that is supported in a Junos Fusion despite not being supported on a standalone EX9200 switch.

Understanding LLDP and LLDP-MED Configuration and Traffic Handling in a Junos Fusion

LLDP and LLDP-MED traffic is generally handled the same in a Junos Fusion or a standalone series switch. LLDP and LLDP-MED configuration on an extended port in a Junos Fusion is identical for a standalone EX Series switch. See *Configuring LLDP (CLI Procedure)* or *Configuring LLDP-MED (CLI Procedure)*.

The following specifications apply to the device information transmitted by LLDP and LLDP-MED in a Junos Fusion topology with two or more aggregation devices:

- Management address TLVs are merged into a single packet in such a way that the packet contains two or more management address TLVs.
- The SNMP index used as the port ID TLV is derived so that all aggregation devices receive the same index value for port IDs of extended ports.
- The system name for extended ports is the configured redundancy group name. A redundancy group has to be configured in order to enable a topology with two or more aggregation devices.
- The chassis ID is the same for all aggregation devices. If a system MAC address is defined for the redundancy group, is it used as the chassis ID. The system MAC address is configured using the **set chassis satellite-management redundancy-groups *redundancy-group-name* system-mac-address *system-mac-address*** command. If the system MAC is not configured, the chassis ID is the default MAC address, which is 00:00:00:00:00:01.



BEST PRACTICE: We recommend specifying a system MAC address if you are running LLDP or LLCP-MED traffic in your Junos Fusion topology.

Related Documentation

- [Configuring LLDP \(CLI Procedure\)](#)
- [Configuring LLDP-MED \(CLI Procedure\)](#)

Configuring Power over Ethernet in a Junos Fusion

- [PoE Configurable Options on page 908](#)
- [Enabling PoE on page 908](#)
- [Disabling PoE on page 909](#)
- [Setting the Power Management Mode on page 909](#)
- [Setting the Maximum Power That Can Be Delivered from a PoE Interface on page 910](#)
- [Setting the Guard Band on page 910](#)
- [Setting the PoE Interface Priority on page 910](#)

PoE Configurable Options

Table 44 on page 908 shows the configurable PoE options and their default settings in a Junos Fusion.

Some PoE options can be configured globally and per interface. In cases where a PoE interface setting is different from a global PoE setting, the PoE interface setting is configured on the interface.

Table 44: Configurable PoE Options and Default Settings

Option	Default	Description
disable (Power over Ethernet)	Not included in default configuration. NOTE: PoE ports are disabled by default in a Junos Fusion.	Disables PoE on the interface if PoE was enabled. The interface maintains network connectivity but no longer supplies power to a connected powered device. Power is not allocated to the interface.
guard-band	0 W	Reserves a specified amount of power from the PoE power budget for possible spikes in PoE power consumption. In a Junos Fusion, the guard band can be 0 to 19 W.
management	class	Sets the PoE power management mode for the extended port. The power management mode determines how power to a PoE extended port is allocated: <ul style="list-style-type: none"> • class—In this mode, the power allocated to a PoE extended port is determined by the class of the connected powered device. If there is no powered device connected, standard 15.4W power is allocated on the interface. • static—The maximum power delivered by an interface is statically configured and is independent of the class of the connected powered device. The maximum power is allocated to the interface even if a powered device is not connected.
maximum-power (Interface)	30.0 W (PoE+, IEEE 802.3at)	Sets the maximum power that can be delivered by a PoE interface when the power management mode is static . In a Junos Fusion, all extended ports support PoE+ so the maximum power is up to 30 W. This setting is ignored if the power management mode is class .
priority (Power over Ethernet)	low	Sets an interface's power priority to either low or high . If power is insufficient for all PoE interfaces, the PoE power to low-priority interfaces is shut down before power to high-priority interfaces is shut down. Among interfaces that have the same assigned priority, the power priority is determined by port number, with lower-numbered ports having higher priority.

Enabling PoE

PoE is disabled by default for all extended ports in a Junos Fusion.

To enable PoE on all PoE-supported interfaces:

```
[edit]
user@aggregation-device# set poe interface all-extended
```

To enable PoE on a specific PoE-supported interface:

```
[edit]
user@aggregation-device# set poe interface interface-name
```

For instance, to enable PoE on extended port interface ge-100/0/24:

```
[edit]
user@aggregation-device# set poe interface ge-100/0/24
```

Disabling PoE

PoE is disabled by default in a Junos Fusion. Use this procedure to disable PoE in a Junos Fusion that has PoE previously enabled.

If PoE is enabled globally but disabled on a specific interface, PoE is disabled on the specified interface. This procedure can, therefore, be used to individually disable ports in cases where PoE is globally enabled.

If you want to disable PoE on all extended port interfaces in a Junos Fusion:

```
[edit]
user@aggregation-device# set poe interface all-extended disable
```

If you want to disable PoE on one extended port interface:

```
[edit]
user@aggregation-device# set poe interface interface-name disable
```

For instance, to disable PoE on extended port 101/0/1 in a Junos Fusion:

```
[edit]
user@aggregation-device# set poe interface 101/0/1 disable
```

If you want to enable PoE on all PoE-supported extended ports in a Junos Fusion except 101/0/10, enter the following commands:

```
[edit]
user@aggregation-device# set poe interface all-extended
user@aggregation-device# set poe interface 101/0/10 disable
```

Setting the Power Management Mode

The power management mode in a Junos Fusion is set for all extended ports in a Junos Fusion .

The default power management mode is class.

To set the power management mode to static for all PoE extended ports:

```
[edit]
user@aggregation-device# set poe management static
```

To set the power management mode back to class for all PoE extended ports:

```
[edit]
user@aggregation-device# set poe management class
```

Setting the Maximum Power That Can Be Delivered from a PoE Interface

To set the maximum power that can be delivered to a connected device using PoE when the power management mode is set to static:

```
[edit]
user@aggregation-device# set poe interface interface-name maximum-power watts
```

To configure all extended port interfaces to the same maximum power, enter **all-extended** as the *interface-name*.

For instance, to change the maximum power for all PoE extended ports configured in static power management mode to 25 watts:

```
[edit]
user@aggregation-device# set poe interface all-extended maximum-power 25
```

To change the maximum power for interface 101/0/1 to 25 watts:

```
[edit]
user@aggregation-device# set poe interface 101/0/1 maximum-power 25
```

Setting the Guard Band

One guard band is configured for all extended ports in a Junos Fusion.

To set the guard band for all extended ports in a Junos Fusion:

```
[edit]
user@aggregation-device# set poe guard-band watts
```

For instance, to set the guard-band to 19 watts for all PoE extended ports:

```
[edit]
user@aggregation-device# set poe guard-band 19
```

Setting the PoE Interface Priority

To set a PoE interface priority to high:

```
[edit]
user@aggregation-device# set poe interface interface-name priority high
```

For instance, to assign a high priority to interface 101/0/1:

```
[edit]
```

```
user@aggregation-device# set poe interface 101/0/1 priority high
```

To set a PoE interface priority to low:

```
[edit]
user@aggregation-device# set poe interface interface-name priority low
```

For instance, to assign a low priority to interface 102/0/1:

```
[edit]
user@aggregation-device# set poe interface 102/0/1 priority low
```

- Related Documentation**
- [Verifying PoE Configuration and Status for a Junos Fusion \(CLI Procedure\) on page 911](#)
 - [Understanding Power over Ethernet in a Junos Fusion on page 903](#)

Verifying PoE Configuration and Status for a Junos Fusion (CLI Procedure)

You can verify the Power over Ethernet (PoE) configuration and status on Junos Fusion.

This topic describes how to verify:

- [PoE Power Budgets, Consumption, and Mode on Satellite Devices on page 911](#)
- [PoE Interface Configuration and Status on page 912](#)

PoE Power Budgets, Consumption, and Mode on Satellite Devices

Purpose Verify the PoE configuration and status, such as the PoE power budget, total PoE power consumption, power management mode, and the supported PoE standard.

Action Enter the following command:

```
user@aggregation-device> show poe controller
```

Controller index	Maximum power	Power consumption	Guard band	Management	Status	Lldp Priority
100	925.00W	0.00W	19W	Class	AT_MODE	Disabled
120	125.00W	6.08W	19W	Class	AT_MODE	Disabled

- Meaning**
- Satellite device 100 has a PoE power budget of 925 W, of which 0 W were being used by the PoE extended ports at the time the command was executed. The Guard band field shows that 19 W of power is reserved out of the PoE power budget to protect against spikes in power demand. The power management mode is class. The PoE ports on the switch support PoE+ (IEEE 802.3at).
 - Satellite device 120 has a PoE power budget of 125 W, of which 6.08 W were being used by the PoE extended ports at the time the command was executed. The Guard band field shows that 19 W of power is reserved out of the PoE power budget to protect

against spikes in power demand. The power management mode is class. The PoE ports on the switch support PoE+ (IEEE 802.3at).

PoE Interface Configuration and Status

Purpose Verify that PoE interfaces are enabled and set to the correct maximum power and priority settings. Also verify current operational status and power consumption.

Action To view configuration and status for all PoE interfaces, enter:

```
user@switch> show poe interface
```

Interface	Admin status	Oper status	Max power	Priority	Power consumption	Class
ge-100/0/0	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/1	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/2	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/3	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/4	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/5	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/6	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/7	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/8	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/9	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/10	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/11	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/12	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/13	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/14	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/15	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/16	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/17	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/18	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/19	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/20	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						
ge-100/0/21	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						

ge-100/0/22	Enabled	OFF	16.0W	Low	0.0W	2
not-applicable						
ge-100/0/23	Enabled	OFF	16.0W	Low	0.0W	2
not-applicable						
ge-100/0/24	Enabled	ON	16.0W	Low	3.7W	2
ge-100/0/25	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/26	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/27	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/28	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/29	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/30	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/31	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/32	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/33	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/34	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/35	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/36	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-100/0/37	Enabled	ON	16.0W	Low	2.0W	
ge-100/0/38	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-100/0/39	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-100/0/40	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-100/0/41	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-100/0/42	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-100/0/43	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-100/0/44	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-100/0/45	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-100/0/46	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-100/0/47	Enabled	OFF	16.0W	Low	0.0W	0
not-applicable						
ge-120/0/0	Enabled	ON	16.0W	Low	3.9W	2
ge-120/0/1	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-120/0/2	Enabled	OFF	16.0W	Low	2.0W	
not-applicable						2
ge-120/0/3	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-120/0/4	Enabled	OFF	16.0W	Low	0.0W	
not-applicable						2
ge-120/0/5	Enabled	OFF	16.0W	Low	0.0W	

```

not-applicable
ge-120/0/6   Enabled    ON    16.0W    Low      0.0W      4
ge-120/0/7   Enabled    OFF   0.0W     Low      0.0W
not-applicable
ge-120/0/8   Enabled    OFF   0.0W     Low      0.0W
not-applicable
ge-120/0/9   Enabled    OFF   0.0W     Low      0.0W
not-applicable
ge-120/0/10  Enabled    OFF   0.0W     Low      0.0W
not-applicable
ge-120/0/11  Enabled    OFF   0.0W     Low      0.0W
not-applicable
<additional output removed for brevity>

```

To view configuration and status for a single PoE interface, enter:

```

user@switch> show poe interface ge-120/0/0

PoE interface status:
PoE interface           : ge-120/0/0
Administrative status   : Enabled
Operational status      : ON
Power limit on the interface : 7.0W
Priority                 : Low
Power consumed           : 3.9W
Class of power device    : 2
PoE Mode                 : 802.3at

```

Meaning The command output shows the status and configuration of interfaces. For example, the interface 120/0/0 is administratively enabled. Its operational status is **ON**; that is, the interface is currently delivering power to a connected powered device. The maximum power allocated to the interface is 7.0 W. The interface has a low PoE power priority. At the time the command was executed, the powered device was consuming 3.9 W. The class of the powered device is class 2. If the PoE power management mode is class, the class of the powered device determines the maximum power allocated to the interface, which is 7 W in the case of class 2 devices.

The PoE Mode field indicates that the interface supports IEEE 802.3at (PoE+).

- Related Documentation**
- [Configuring Power over Ethernet in a Junos Fusion on page 907](#)
 - [Understanding Power over Ethernet in a Junos Fusion on page 903](#)

CHAPTER 12

Configuration Statements for Power over Ethernet and Power Supply Management on Junos Fusion Enterprise

- [disable \(Power over Ethernet\) on page 916](#)
- [guard-band on page 917](#)
- [interface \(Power over Ethernet\) on page 918](#)
- [management on page 919](#)
- [maximum-power \(Interface\) on page 920](#)
- [n-plus-n \(satellite-management\) on page 922](#)
- [poe on page 923](#)
- [priority \(Power over Ethernet\) on page 925](#)
- [psu \(satellite-management\) on page 926](#)
- [redundancy \(satellite-management\) on page 927](#)

disable (Power over Ethernet)

Syntax	<code>disable;</code>
Hierarchy Level	<code>[edit poe interface (all all-extended interface-name)],</code> <code>[edit poe interface (all all-extended interface-name) telemetries],</code> <code>[edit poe notification-control fpc slot-number]</code>
Release Information	<p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX2000 Universal Metro Routers.</p> <p>all-extended option introduced in Junos OS Release 16.1R1.</p> <p>Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.</p>
Description	<p>Disable a PoE interface, disable the collection of power consumption data for a PoE interface, or disable the generation of the PoE SNMP traps. The action of the disable statement depends on which statement it is used with:</p> <ul style="list-style-type: none"> When used with interface—Disable the PoE capability of this interface. The interface operates as a standard network access interface, and power is no longer allocated to it from the PoE power budget. Although the PoE capability is disabled, the PoE configuration for the interface is retained. To reenable the PoE capability of this interface, delete the disable statement from the interface entry in the configuration. When used with telemetries—Disable the collection of PoE power consumption records for this interface. Any previously collected records are deleted. However, the telemetries configuration is retained, including the values for interval and duration. To reenable record collection, delete the disable statement from the telemetries entry in the configuration. When used with notification-control—Disable the generation of PoE SNMP traps. To reenable PoE traps, delete the disable statement from the notification-control entry in the configuration.
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Example: Configuring PoE Interfaces with Different Priorities on an EX Series Switch</i> <i>Configuring PoE on EX Series Switches (CLI Procedure)</i> Configuring Power over Ethernet in a Junos Fusion on page 907

guard-band

Syntax	<code>guard-band <i>watts</i>;</code>
Hierarchy Level	<code>[edit poe],</code> <code>[edit poe (all fpc <i>slot-number</i>)]</code>
Release Information	Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX2000 Universal Metro Routers. Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.
Description	Reserve a specified amount of power from the PoE power budget for the switch, line card, or satellite device in case of a spike in PoE consumption.
Options	watts —Amount of power to be reserved in case of a spike in PoE consumption. Range: 0 through 19 for all switches except EX6200 and EX8200 switches. 0 through 19 for ACX2000 routers. 0 through 15 for EX6200 and EX8200 switches. 0 through 19 for satellite devices in a Junos Fusion. Default: 0
Required Privilege Level	system —To view this statement in the configuration. system-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring PoE on EX Series Switches (CLI Procedure) Configuring Power over Ethernet in a Junos Fusion on page 907

interface (Power over Ethernet)

Syntax	<pre>interface (all all-extended <i>interface-name</i>) { af-mode; disable; maximum-power <i>watts</i>; priority (high low); telemetries { disable; duration <i>hours</i>; interval <i>minutes</i>; } }</pre>
Hierarchy Level	[edit poe]
Release Information	<p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.</p>
Description	Specify a PoE interface to be configured.
Options	<p>all—All PoE interfaces on the switch that have not been individually configured for PoE. If a PoE interface has been individually configured, that configuration overrides any settings specified with all.</p> <p>all-extended—(Junos Fusion only) All PoE extended port interfaces in a Junos Fusion that have not been individually configured for PoE. If a PoE interface has been individually configured, that configuration overrides any settings specified with all-extended.</p> <p><i>interface-name</i>—Name of the specific interface being configured.</p> <p>If you use the interface statement without any substatements, default values are used for the remaining statements.</p> <p>The remaining statements are explained separately. See CLI Explorer.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • <i>Example: Configuring PoE Interfaces with Different Priorities on an EX Series Switch</i> • <i>Configuring PoE on EX Series Switches (CLI Procedure)</i> • Configuring Power over Ethernet in a Junos Fusion on page 907

management

Syntax	<code>management (class static high-power);</code>
Hierarchy Level	<code>[edit poe],</code> <code>[edit poe (all fpc slot-number)]</code>
Release Information	Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX2000 Universal Metro Routers. Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.
Description	Designate how the PoE controller allocates power to the PoE interfaces.
Default	class
Options	<ul style="list-style-type: none"> • class—The amount of power allocated to the interface is determined by the class of the connected powered device. If no powered device is connected, standard 15.4 W power is allocated to the interface. See <i>Understanding PoE on EX Series Switches</i> for more information about classes of powered devices. • static—The amount of power allocated to the interface is determined by the value of the <code>maximum-power</code> statement, not the class of the connected powered device. This amount is allocated even when a powered device is not connected to the interface, ensuring that power is available when needed. • high-power—(ACX2000 routers only) ACX2000 PoE interfaces support power delivery of up to 65 W per port using all four pairs of Ethernet RJ45 cables. Traditional PoE ports use only two pairs of Ethernet cable for power delivery. According to the IEEE 802.3af standard, each port can deliver a maximum power of up to 32 W. With high-power mode of power delivery over all four pairs, the power sourcing equipment (PSE) has an option to deliver up to 65 W per port, provided the powered devices request this high power over all four pairs of the Ethernet cable. By default, high-power mode is not enabled and has to be explicitly enabled. When the PoE controller is configured for high-power mode, the PoE controller does not deliver power to normal powered devices that request power over two pairs.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • <i>Configuring PoE on EX Series Switches (CLI Procedure)</i> • Configuring Power over Ethernet in a Junos Fusion on page 907 • <i>Understanding PoE on EX Series Switches</i>

maximum-power (Interface)

Syntax	<code>maximum-power <i>watts</i>;</code>
Hierarchy Level	[edit <code>poe interface</code> (all all-extended <i>interface-name</i>)]
Release Information	Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX2000 routers. Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.
Description	Set the maximum amount of power that the switch can supply to the PoE port.



NOTE: Although you can set this value when PoE power management is in class mode, it does not establish the maximum power for the port. Instead, the IEEE 802.3af (PoE) or IEEE 802.3at (PoE+) class of the connected device determines the maximum power for the port.

A standalone switch's default setting and range for maximum power does not change if the switch is configured as a satellite device in a Junos Fusion. For instance, an EX4300 switch has a 30W default and a range of 0.0 through 30.0 W when configured as a standalone switch and when it is configured into a satellite device in a Junos Fusion.

Options	<p>watts—The maximum power in watts that can be supplied to the ports..</p> <p>For EX2200, EX3300, EX4200, EX4300, EX4600, EX6200, and EX8200 switches:</p> <p>Range: 0.0 through 30.0</p> <p>Default: 15.4 W for ports that support IEEE 802.3af and 30 W for ports that support IEEE 802.3at</p> <p>For EX3200 switches:</p> <p>Range: 0.0 through 18.6</p> <p>Default: 15.4 W</p>
----------------	---



NOTE: EX4600 switches support PoE only when operating in a mixed Virtual Chassis with EX4300 switches.

For ACX2000 routers:

Range: 1 through 65 W

Default: 32 W



NOTE: The maximum-power setting permitted by the CLI might be greater than the maximum power a given PoE port can deliver. For example, the CLI permits you to set any PoE port on an EX8200 line card to 30 W; however, only ports 0 through 11 support 30 W. Similarly, the CLI permits you to set any PoE port on an EX4200 switch to 30 W, but some models of EX4200 switch support only 18.6 W per port. If you configure a maximum-power value that is greater than the maximum power supported by a port, the power allocated to the port will be the maximum supported.

If you use the all option to set maximum-power to a value greater than 15.4 W on all interfaces on an EX8200 line card, the maximum power allocated to all ports is 15.4 W.



NOTE: Support for a maximum of 18.6 W per port instead of 15.4 W per port on EX3200 switches and P and T models of EX4200 switch requires Junos OS Release 11.1 or later. In addition to requiring an upgrade of Junos OS to Release 11.1 or later, switches that are running an earlier release of Junos OS release require the PoE controller software be upgraded as described in *Upgrading the PoE Controller Software*. If the controller software is not upgraded and you set maximum-power to a value greater than 15.4 W, the configuration is accepted when you commit it, but the actual power allocated to the port will be 15.4 W.



NOTE: On ACX2000 routers, the power sourcing equipment (PSE) delivers up to 65 W per port, provided the management mode is set to high-power mode, by using the high-power option at the [edit poe management] hierarchy level. By default, the management mode is set to static. In the static mode, the PSE can deliver power up to 32 W.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Documentation

- [Configuring PoE on EX Series Switches \(CLI Procedure\)](#)
- [Configuring Power over Ethernet in a Junos Fusion on page 907](#)
- [management on page 919](#)

n-plus-n (satellite-management)

Syntax	n-plus-n
Hierarchy Level	[edit chassis satellite-management psu redundancy]
Release Information	Statement introduced in Junos OS Release 16.1R1 for Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.
Description	Configure <i>N+N</i> power supply redundancy for the satellite devices in a Junos Fusion.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding Power over Ethernet in a Junos Fusion on page 903

poe

Syntax For switches other than EX6200 and EX8200 switches:

```
poe {
  guard-band watts;
  interface (all | interface-name) {
    disable;
    maximum-power watts;
    priority (high | low);
    telemetry {
      disable;
      duration hours;
      interval minutes;
    }
  }
  lldp-priority;
  management (class | static);
  notification-control {
    fpc slot-number {
      disable;
    }
  }
}
```

For a Junos Fusion:

```
poe {
  guard-band watts;
  interface (all-extended | interface-name) {
    disable;
    maximum-power watts;
    priority (high | low);
  }
  management (class | static);
}
```

For EX6200 and EX8200 switches:

```
poe {
  fpc (all | slot-number) {
    guard-band watts;
    lldp-priority;
    management (class | static);
    maximum-power watts;
  }
  interface (all | interface-name) {
    af-mode;
    disable;
    maximum-power watts;
    priority (high | low);
    telemetry {
      disable;
    }
  }
}
```

```

        duration hours;
        interval minutes;
    }
}
notification-control {
    fpc slot-number {
        disable;
    }
}
}

```

Hierarchy Level [\[edit\]](#)

Release Information Statement introduced in Junos OS Release 9.0 for EX Series switches.
Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.

Description Configure PoE options. PoE ports on Juniper network switches provide power to PoE-enabled devices only when straight-through cables are used. Power is not provided when crossover cables are used.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Documentation

- *Example: Configuring PoE Interfaces with Different Priorities on an EX Series Switch*
- *Example: Configuring PoE on an EX6200 or EX8200 Switch*
- *Configuring PoE on EX Series Switches (CLI Procedure)*
- [Configuring Power over Ethernet in a Junos Fusion on page 907](#)

priority (Power over Ethernet)

Syntax	<code>priority (low high);</code>
Hierarchy Level	<code>[edit poe interface (<i>interface-name</i> all all-extended)]</code>
Release Information	Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.
Description	Set the power priority for individual interfaces when there is insufficient power for all PoE interfaces. If the switch needs to shut down powered devices because PoE demand exceeds the PoE budget, low-priority devices are shut down before high-priority devices. Among interfaces that have the same assigned priority, priority is determined by port number, with lower-numbered ports having higher priority.
Default	low
Options	<p>high—Specifies that this interface is to be treated as high-priority in terms of power allocation. If the switch needs to shut down powered devices because PoE demand exceeds the PoE budget, power is not shut down on this interface until it has been shut down on all the low-priority interfaces.</p> <p>low—Specifies that this interface is to be treated as low-priority in terms of power allocation. If the switch needs to shut down powered devices because PoE demand exceeds the PoE budget, power is shut down on this interface before it is shut down on high-priority interfaces.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <i>Example: Configuring PoE Interfaces with Different Priorities on an EX Series Switch</i> <i>Configuring PoE on EX Series Switches (CLI Procedure)</i> Configuring Power over Ethernet in a Junos Fusion on page 907

psu (satellite-management)

Syntax	<pre>psu { redundancy { n-plus-n; } }</pre>
Hierarchy Level	[edit chassis satellite-management]
Release Information	Statement introduced in Junos OS Release 16.1R1 for a Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.
Description	Configure N+N power supply redundancy for the satellite devices in a Junos Fusion. The remaining statements are explained separately. See CLI Explorer .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding Power over Ethernet in a Junos Fusion on page 903

redundancy (satellite-management)

Syntax	<pre>redundancy { n-plus-n; }</pre>
Hierarchy Level	[edit chassis satellite-management psu]
Release Information	Statement introduced in Junos OS Release 16.1R1 for a Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.
Description	Configure $N+N$ power supply redundancy for the satellite devices in a Junos Fusion. The remaining statement is explained separately. See CLI Explorer .
Default	$N+1$ power supply redundancy is configured on each satellite device by default.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Understanding Power over Ethernet in a Junos Fusion on page 903

CHAPTER 13

Operational Commands for Power over Ethernet and Power Supply Management on Junos Fusion Enterprise

- `show chassis satellite power-budget-statistics`
- `show poe controller`
- `show poe interface`

show chassis satellite power-budget-statistics

Syntax	show chassis satellite power-budget-statistics <slot-id slot-id-number>
Release Information	Command introduced in Junos OS Release 16.1R1 for a Junos Fusion Enterprise. Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.
Description	Display the power budget statistics of a satellite device or devices in a Junos Fusion.
Options	none —Display power budget statistics for all satellite devices in the Junos Fusion. slot-id slot-id-number —Display power budget statistics for the specified satellite device only. The <i>slot-id-number</i> and the FPC ID are the same number in a Junos Fusion.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • Understanding Power over Ethernet in a Junos Fusion on page 903
List of Sample Output	show chassis satellite power-budget-statistics on page 931
Output Fields	Table 45 on page 930 lists the output fields for the show chassis satellite-management power-budget-statistics command. Output fields are listed in the approximate order in which they appear.

Table 45: show chassis satellite-management power-budget-statistics Output Fields

Field Name	Field Description
FPC <i>n</i>	The FPC slot ID number in the Junos Fusion, where <i>n</i> is the FPC slot ID. The FPC slot ID and the satellite device number are the same thing in a Junos Fusion.
PSU <i>n</i> (supply type)	Capacity rating of the power supply and whether the power supply is currently operating (Online) or not (Offline). If a power supply is offline, the capacity is shown as 0 W.
Total Power supplied by all Online PSUs	Total number of watts supplied by all currently operating power supplies for the satellite device.
Power Redundancy Configuration	Configured power redundancy setting, either <i>N+1</i> or <i>N+N</i> .
Base power reserved	Total number of watts reserved for the satellite device.
Non-PoE power being consumed	The amount of power, in W, currently being consumed for functions other than PoE by the satellite device.

Table 45: show chassis satellite-management power-budget-statistics Output Fields (continued)

Field Name	Field Description
Total Power allocated for PoE	The total of the PoE power budgets allocated to the satellite device.
Total PoE power consumed	The amount of power that has been consumed by PoE by the satellite device.
Total PoE power remaining	The amount of available power remaining that can be used for PoE on the satellite device.

Sample Output

show chassis satellite power-budget-statistics

```

user@aggregation-device> show chassis satellite power-budget-statistics
fpc 100:
-----
PSU 0 (JPSU-550-DC-AFI ) : 550 W Online
PSU 1 (JPSU-550-DC-AFO ) : 550 W Online
Power redundancy configuration : N+N
Total power supplied by all online PSUs : 522 W
Base power reserved : 175 W
Non-PoE power being consumed : 82 W
Total power allocated for PoE : 347 W
Total PoE power consumed : 0 W
Total PoE power remaining : 347 W
fpc 120:
-----
Power redundancy configuration : N+N
Total power supplied by all online PSUs : 170 W
Base power reserved : 0 W
Non-PoE power being consumed : 0 W
fpc 128:
-----
Power redundancy configuration : N+N
Total power supplied by all online PSUs : 0 W
Base power reserved : 0 W
Non-PoE power being consumed : 0 W
fpc 133:
-----
PSU 0 ) : 0 W Offline
PSU 1 (JPSU-1100-AC-AFO ) : 1100 W Online
Power redundancy configuration : N+N
Total power supplied by all online PSUs : 1100 W
Base power reserved : 175 W
Non-PoE power being consumed : 74 W
Total power allocated for PoE : 925 W
Total PoE power consumed : 0 W
Total PoE power remaining : 925 W
fpc 240:
-----
Power redundancy configuration : N+N
Total power supplied by all online PSUs : 0 W

```

Base power reserved	:	0 W
Non-PoE power being consumed	:	0 W

show poe controller

Syntax	<code>show poe controller</code>
Release Information	<p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.2 for ACX2000 routers.</p> <p>Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.</p>
Description	Display configuration and status of the PoE controllers.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show poe interface on page 936 • <i>request system firmware upgrade poe</i> • <i>Verifying PoE Configuration and Status (CLI Procedure)</i> • Verifying PoE Configuration and Status for a Junos Fusion (CLI Procedure) on page 911 • <i>Monitoring PoE Power Consumption (CLI Procedure)</i> • <i>Upgrading the PoE Controller Software</i>
List of Sample Output	<p>show poe controller (EX3200 Switch) on page 934</p> <p>show poe controller (EX8200 Switch) on page 934</p> <p>show poe controller (Controller Software Upgrade in Progress) on page 935</p> <p>show poe controller (ACX2000 Router) on page 935</p>
Output Fields	<p>Table 46 on page 933 lists the output fields for the show poe controller command. Output fields are listed in the approximate order in which they appear.</p>

Table 46: show poe controller Output Fields

Field Name	Field Description
Controller index	<p>PoE controller number:</p> <ul style="list-style-type: none"> • 0 for EX2200, EX3200, standalone EX3300, standalone EX4200 switches, standalone EX4300 switches, and ACX2000 routers. • Member ID for switches in an EX3300 Virtual Chassis, EX4200 Virtual Chassis, EX4300 Virtual Chassis, a mixed EX4200 and EX4500 Virtual Chassis. • Slot number for line cards with a PoE controller in an EX6200 or EX8200 switch.
Maximum power	<p>The maximum PoE power consumption for the switch or line card. This is the total amount of power available to the PoE controller to allocate to the PoE ports.</p>

Table 46: show poe controller Output Fields (continued)

Field Name	Field Description
Power consumption	Total amount of power being consumed by the PoE ports at the time the command is executed. This value, which represents actual power consumption, cannot exceed the value for Maximum power .
Guard Band	Amount of power that has been placed in reserve for power demand spikes and that cannot be allocated to a PoE interface.
Management	Power management mode: class or static or high-power . NOTE: The mode high-power is available on only ACX2000 routers.
Status	Status of the PoE controller: <ul style="list-style-type: none"> • AF_ENHANCE—Controller supports enhanced PoE. The maximum power per PoE port is 18.6 W in static mode (15.4 W in class mode). • DEVICE FAIL—Software download to the controller has failed or the PoE controller is not initialized because of a hardware failure. • DOWNLOAD_INIT—Software download to the controller is in the initial phase. • AF_MODE—Controller supports standard IEEE 802.3af. The maximum power per PoE port is 15.4 W. • AT/AF COMBO—Controller supports a mix of standard IEEE 802.3af and IEEE 802.3at (PoE+) ports. The maximum power per port is 30 W for IEEE 802.3at (PoE+) ports and 15.4 W for the IEEE 802.3af ports. • AT_MODE—Controller supports IEEE 802.3at (PoE+). The maximum power per PoE port is 30 W. • SW_DOWNLOAD (n%)—Software download to the controller is in progress.
Lldp Priority	Link Layer Discovery Protocol (LLDP) priority operating state. The state can be Enabled or Disabled . LLDP priority enables the PoE controller to assign interfaces the power priority provided by the connected powered device by using LLDP power negotiation rather than the power priority configured on the switch interface.

Sample Output

show poe controller (EX3200 Switch)

```
user@switch> show poe controller
```

Controller index	Maximum power	Power consumption	Guard band	Management	Status	Lldp Priority
0	130.00W	81.20W	10W	Static	AF_ENHANCE	Disabled

show poe controller (EX8200 Switch)

```
user@switch> show poe controller
```

Controller index	Maximum power	Power consumption	Guard band	Management	Status	Lldp Priority
0	792.00W	603.50W	0W	Class	AT/AF COMBO	Disabled

4	915.00W	781.00W	0W	Class	AT/AF COMBO	Disabled
7	915.00W	0.00W	0W	Class	AT/AF COMBO	Disabled

show poe controller (Controller Software Upgrade in Progress)

```
user@switch> show poe controller
```

Controller index	Maximum power	Power consumption	Guard band	Management	Status	Lldp Priority
0	130.00W	0.00W	0W	Static	AF_ENHANCE	Disabled
8**	130.00W	0.00W	0W	Static	SW_DOWNLOAD(10%)	Disabled

```
**New PoE software upgrade available.
Use 'request system firmware upgrade poe fpc-slot <slot>'
This procedure will take around 10 minutes (recommended to be performed during
maintenance)
```

show poe controller (ACX2000 Router)

```
user@host> show poe controller
```

Controller index	Maximum power	Power consumption	Guard band	Management	Status	Lldp Priority
0	130.0 W	14.2 W	0 W	high-power	UP	

show poe interface

Syntax	<code>show poe interface <fpc-slot number> <interface-name></code>
Release Information	Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.2 for ACX2000 routers. Statement introduced in Junos OS Release 17.2R1 for a Junos Fusion Provider Edge.
Description	Display the status of PoE interfaces.
Options	<p>none—Display status of all PoE interfaces on the switch or router.</p> <p>fpc-slot number—(Optional) (EX6200 or EX8200 switches only) Display the status of the PoE interfaces on the specified line card.</p> <p>interface-name—(Optional) Display the status of a specific PoE interface on the switch.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> • show poe controller on page 933 • <i>Verifying PoE Configuration and Status (CLI Procedure)</i> • <i>Monitoring PoE Power Consumption (CLI Procedure)</i> • <i>Troubleshooting PoE Interfaces</i>
List of Sample Output	show poe interface on page 938 show poe interface (EX2300 and EX3400) on page 938 show poe interface (with LLDP Negotiation) on page 938 show poe interface (Specific Interface) on page 938 show poe interface (Specific FPC Slot) on page 939 show poe interface (Specific Interface on ACX2000 Universal Metro Routers) on page 939
Output Fields	Table 47 on page 936 lists the output fields for the show poe interface command. Output fields are listed in the approximate order in which they appear.

Table 47: show poe interface Output Fields

Field Name (All Interfaces Output)	Field Name (Single Interface Output)	Field Description
Interface	PoE Interface	Interface name.

Table 47: show poe interface Output Fields (continued)

Field Name (All Interfaces Output)	Field Name (Single Interface Output)	Field Description
Admin status	Administrative status	Administrative state of the PoE interface: Enabled or Disabled . If the PoE interface is disabled, it can provide network connectivity, but it cannot provide power to connected devices.
Oper status	Operational status	Operational state of the PoE interface: <ul style="list-style-type: none"> • ON—The interface is currently supplying power to a powered device. • OFF—PoE is enabled on the interface, but the interface is not currently supplying power to a powered device. • FAULT—PoE interface is in the OFF state due to a fault condition. • Disabled—PoE is disabled on the interface.
	Operational status detail	Additional information for troubleshooting the operational state of the PoE interface: <ul style="list-style-type: none"> • Admin up but disabled on hardware—The interface is disabled due to power budget unavailability. • Overload—Interface is in the fault condition. • IEEE PD Detected—The interface is providing power to the powered device. • Detection In Progress—Detection of the powered device is ongoing.
	FourPair status	Status of high-power mode of power delivery over all four pairs of the Ethernet cable: <ul style="list-style-type: none"> • Enabled—High power mode is enabled. • Disabled—High power mode is disabled.
Pair/Mode status		Shows the mode of power delivery configured on the interface. <ul style="list-style-type: none"> • 4P/AT—Interface is configured for high power mode. • 4P/POH—Interface is configured for ultra-high power mode.
Max power	Power limit on the interface	Maximum power that can be provided by the interface. An (L) next to the value indicates that the value on the port was negotiated by LLDP.
Priority	Priority	Interface power priority: either High or Low . An (L) next to the value indicates that the value on the port was negotiated by LLDP.
Power consumption	Power consumed	Amount of power being used by the interface at the time the command is executed.
Class	Class of power device	IEEE 802.3af (PoE) or IEEE 802.3at (PoE+) class of the powered device. Class 0 is the default class and is used when the class of the powered device is unknown. If no powered device is connected, this field contains not applicable .
	PoE Mode	IEEE PoE standard supported by the interface—either 802.3af , or 802.3at , or ultra-poe .

Sample Output

show poe interface

```
user@switch> show poe interface
```

Interface	Admin status	Oper status	Max power	Priority	Power consumption	Class
ge-0/0/0	Enabled	ON	15.4W	Low	7.9W	0
ge-0/0/1	Enabled	ON	15.4W	Low	3.2W	2
ge-0/0/2	Enabled	ON	15.4W	Low	3.2W	2
ge-0/0/3	Enabled	ON	15.4W	Low	3.2W	2
ge-0/0/4	Enabled	ON	15.4W	Low	3.2W	2
ge-0/0/5	Enabled	ON	15.4W	Low	3.2W	2
ge-0/0/6	Enabled	ON	15.4W	Low	3.2W	2
ge-0/0/7	Enabled	ON	15.4W	Low	3.2W	2

show poe interface (EX2300 and EX3400)

```
user@switch> show poe interface
```

Interface	Admin status	Oper status	Pair/Mode status	Max power	Priority	Power consumption	Class
ge-0/0/0	Enabled	OFF	4P/AT	60.0W	Low	4.5W	2
ge-0/0/1	Enabled	OFF	4P/AT	60.0W	Low	4.5W	2
ge-0/0/2	Enabled	OFF	4P/AT	60.0W	Low	4.5W	2
ge-0/0/3	Enabled	OFF	4P/AT	60.0W	Low	4.5W	2
ge-0/0/4	Enabled	OFF	4P/AT	60.0W	Low	4.5W	2

show poe interface (with LLDP Negotiation)

```
user@switch> show poe interface
```

Interface	Admin status	Oper status	Max power	Priority	Power consumption	Class
ge-0/0/0	Enabled	ON	17.5W(L)	Low(L)	16.2W	4
ge-0/0/1	Enabled	ON	17.5W(L)	Low(L)	16.0W	4
ge-0/0/2	Enabled	ON	17.5W(L)	High(L)	16.0W	4
ge-0/0/3	Enabled	ON	17.5W(L)	Low(L)	16.0W	4
ge-0/0/4	Enabled	ON	10.1W(L)	Low(L)	10.0W	3
ge-0/0/5	Enabled	ON	3.5W(L)	High(L)	3.0W	2

(L) LLDP-negotiated value on the port.

show poe interface (Specific Interface)

```
user@switch> show poe interface ge-0/0/3
```

```
PoE interface status:
PoE interface          : ge-0/0/3
Administrative status  : Enabled
Operational status     : ON
Operational status detail : IEEE PD Detected
Power limit on the interface : 7.0W
Priority                : Low
Power consumed         : 5.3W
Class of power device  : 2
PoE Mode               : 802.3af
```

show poe interface (Specific FPC Slot)

```
user@switch> show poe interface fpc-slot 3
```

Interface	Admin status	Oper status	Max power	Priority	Power consumption	Class
ge-3/0/0	Enabled	ON	30.0W	Low	20.3W	4
ge-3/0/1	Enabled	ON	30.0W	Low	17.8W	4
ge-3/0/2	Enabled	ON	30.0W	High	16.3W	4
ge-3/0/3	Enabled	ON	30.0W	High	16.2W	4
ge-3/0/4	Enabled	ON	30.0W	Low	25.9W	4
ge-3/0/5	Enabled	ON	30.0W	Low	10.1W	4
ge-3/0/6	Enabled	ON	30.0W	Low	16.2W	4
ge-3/0/7	Enabled	ON	30.0W	Low	6.4W	4
ge-3/0/8	Enabled	ON	30.0W	Low	5.2W	4
ge-3/0/9	Enabled	ON	30.0W	Low	5.2W	4
ge-3/0/10	Enabled	ON	30.0W	Low	21.5W	4
ge-3/0/11	Enabled	ON	30.0W	Low	21.7W	4
ge-3/0/12	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/13	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/14	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/15	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/16	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/17	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/18	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/19	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/20	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/21	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/22	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/23	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/24	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/25	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/26	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/27	Enabled	ON	15.4W	Low	9.4W	0
ge-3/0/28	Enabled	ON	15.4W	Low	7.0W	0
ge-3/0/29	Enabled	ON	15.4W	Low	2.2W	1
ge-3/0/30	Enabled	ON	15.4W	Low	2.2W	1
ge-3/0/31	Enabled	ON	15.4W	Low	2.2W	1
ge-3/0/32	Enabled	ON	15.4W	Low	2.0W	1
ge-3/0/33	Enabled	ON	15.4W	Low	2.0W	1
ge-3/0/34	Enabled	ON	15.4W	Low	2.2W	1
ge-3/0/35	Enabled	ON	15.4W	Low	2.2W	1
ge-3/0/36	Enabled	ON	15.4W	Low	2.2W	1
ge-3/0/37	Enabled	ON	15.4W	Low	2.2W	1
ge-3/0/38	Enabled	ON	15.4W	Low	2.2W	1
ge-3/0/39	Enabled	ON	15.4W	Low	2.2W	1

show poe interface (Specific Interface on ACX2000 Universal Metro Routers)

```
user@host> show poe interface ge-0/1/7
```

```
PoE interface status:
PoE interface          : ge-0/1/7
Administrative status   : Enabled
Operational status     : Powered-up
Power limit on the interface : 9.0 W
Priority                : Low
Power consumed          : 14.2 W
Class of power device   : 4
```


Link Aggregation and LACP on Junos Fusion Enterprise

- [Configuring Link Aggregation on Satellite Devices in a Junos Fusion Enterprise on page 941](#)
- [Configuring an Aggregated Ethernet Interface on page 942](#)
- [Configuring Aggregated Ethernet LACP on page 943](#)

Configuring Link Aggregation on Satellite Devices in a Junos Fusion Enterprise

Link aggregation, as defined by IEEE 802.3ad, allows users to bundle multiple Ethernet interfaces into a single logical interface. An aggregated Ethernet interface, also known as a link aggregation group (LAG), balances traffic across its member links within the aggregated Ethernet bundle and effectively increases the uplink bandwidth. Aggregated Ethernet interfaces also increase high availability, because an aggregated Ethernet interface is composed of multiple member links that can continue to carry traffic when one member link fails.

In a Junos Fusion Enterprise, you can configure aggregated Ethernet interfaces using extended port member links to increase uplink bandwidth and high availability for endpoint devices connected to a satellite device. These aggregated Ethernet interfaces can be configured to use Link Aggregation Control Protocol (LACP).

LACP is a subcomponent of the IEEE 802.3ad standard that simplifies management of LAGs. LACP automates the addition and deletion of individual links to the LAG without user intervention, and can also prevent communication failures by detecting misconfigurations within a LAG. LACP-enabled devices exchange LACP protocol data units (PDUs) to monitor links between LAG peers. You can configure Ethernet links to actively transmit LACP PDUs, or you can configure the links to passively transmit them, sending out LACP PDUs only when they receive them from another link.

LAG and LACP configuration on extended ports in a Junos Fusion Enterprise is identical for a standalone EX Series switch. The following guidelines apply to link aggregation in a Junos Fusion Enterprise:

- The member links must be located on the same satellite device.
- Up to 1000 LAGs are supported, with up to 16 members per LAG.
- LAGs are numbered from ae0 through ae4091.

- The LAG must be configured on both sides of the link.
- The interfaces on either side of the link must be set to the same speed and be in full-duplex mode.

To configure link aggregation in a Junos Fusion Enterprise:

1. Configure the maximum number of aggregated Ethernet interfaces:

```
[edit]
user@aggregation-device# set chassis aggregated-devices ethernet device-count number
```

2. Create and name the aggregated Ethernet interface:

```
[edit]
user@aggregation-device# set interfaces aex
```



NOTE: Specify the aggregated Ethernet interface name as aex, where *x* is the interface instance number. The instance number can be from 0 through 4091.

3. Assign interfaces to the aggregated Ethernet interface:

```
[edit]
user@aggregation-device# set interfaces interface-name ether-options 802.3ad aex
```

For example:

```
[edit]
user@aggregation-device# set interfaces xe-100/0/12 ether-options 802.3ad ae0
user@aggregation-device# set interfaces xe-100/0/13 ether-options 802.3ad ae0
user@aggregation-device# set interfaces xe-100/0/46 ether-options 802.3ad ae1
```

4. Enable LACP for the aggregated Ethernet interface:

```
[edit]
user@aggregation-device# set interfaces aex aggregated-ether-options lacp
```

For information on configuring LACP parameters, see [“Configuring Aggregated Ethernet LACP” on page 943](#).

**Related
Documentation**

- [Configuring an Aggregated Ethernet Interface on page 942](#)
- [Configuring Aggregated Ethernet LACP on page 943](#)

Configuring an Aggregated Ethernet Interface

You can associate a physical interface with an aggregated Ethernet interface.

To configure an aggregated Ethernet interface:

1. Specify that you want to configure the link aggregation group interface.

```
user@host# edit interfaces interface-name
```

2. Configure the aggregated Ethernet interface.

```
[edit interfaces interface-name]  
user@host# set ether-options 802.3ad aex
```

You specify the interface instance number *x* to complete the link association; *x* can be from 0 through 480, for a total of 480 aggregated interfaces on MX Series routers or EX9200 switches. You must also include a statement defining *aex* at the **[edit interfaces]** hierarchy level. You can optionally specify other physical properties that apply specifically to the aggregated Ethernet interfaces; for details, see *Ethernet Interfaces Overview*.



NOTE: In general, aggregated Ethernet bundles support the features available on all supported interfaces that can become a member link within the bundle. As an exception, Gigabit Ethernet IQ features and some newer Gigabit Ethernet features are not supported in aggregated Ethernet bundles.

Gigabit Ethernet IQ and SFP interfaces can be member links, but IQ- and SFP-specific features are not supported on the aggregated Ethernet bundle even if all the member links individually support those features.

You need to configure the correct link speed for the aggregated Ethernet interface to eliminate any warning message.



NOTE: Before you commit an aggregated Ethernet configuration, ensure that link mode is not configured on any member interface of the aggregated Ethernet bundle; otherwise, the configuration commit check fails.

Related Documentation

- *Aggregated Ethernet Interfaces Overview*
- *Ethernet Interfaces Feature Guide for Routing Devices*

Configuring Aggregated Ethernet LACP

For aggregated Ethernet interfaces, you can configure the Link Aggregation Control Protocol (LACP). LACP is one method of bundling several physical interfaces to form one logical interface. You can configure both VLAN-tagged and untagged aggregated Ethernet with or without LACP enabled.

For Multichassis Link Aggregation (MC-LAG), you must specify the **system-id** and **admin key**. MC-LAG peers use the same **system-id** while sending the LACP messages. The **system-id** can be configured on the MC-LAG network device and synchronized between peers for validation.

LACP exchanges are made between actors and partners. An actor is the local interface in an LACP exchange. A partner is the remote interface in an LACP exchange.

LACP is defined in IEEE 802.3ad, *Aggregation of Multiple Link Segments*.

LACP was designed to achieve the following:

- Automatic addition and deletion of individual links to the aggregate bundle without user intervention
- Link monitoring to check whether both ends of the bundle are connected to the correct group

The Junos OS implementation of LACP provides link monitoring but not automatic addition and deletion of links.

The LACP mode can be active or passive. If the actor and partner are both in passive mode, they do not exchange LACP packets, which results in the aggregated Ethernet links not coming up. If either the actor or partner is active, they do exchange LACP packets. By default, LACP is turned off on aggregated Ethernet interfaces. If LACP is configured, it is in passive mode by default. To initiate transmission of LACP packets and response to LACP packets, you must configure LACP in active mode.

To enable LACP active mode, include the **lACP** statement at the **[edit interfaces *interface-name* aggregated-ether-options]** hierarchy level, and specify the **active** option:

```
[edit interfaces interface-name aggregated-ether-options]
lACP {
  active;
}
```



NOTE: The LACP process exists in the system only if you configure the system in either active or passive LACP mode.

To restore the default behavior, include the **lACP** statement at the **[edit interfaces *interface-name* aggregated-ether-options]** hierarchy level, and specify the **passive** option:

```
[edit interfaces interface-name aggregated-ether-options]
lACP {
  passive;
}
```

Starting with Junos OS release 12.2, you can also configure LACP to override the IEEE 802.3ad standard and to allow the standby link always to receive traffic. Overriding the default behavior facilitates subsecond failover.

To override the IEEE 802.3ad standard and facilitate subsecond failover, include the **fast-failover** statement at the `[edit interfaces interface-name aggregated-ether-options lacp]` hierarchy level.

For more information, see the following sections:

- [Configuring the LACP Interval on page 945](#)
- [Configuring LACP Link Protection on page 945](#)
- [Configuring LACP System Priority on page 947](#)
- [Configuring LACP System Identifier on page 947](#)
- [Configuring LACP administrative Key on page 947](#)
- [Configuring LACP Port Priority on page 948](#)
- [Tracing LACP Operations on page 948](#)
- [LACP Limitations on page 949](#)
- [Example: Configuring Aggregated Ethernet LACP on page 949](#)

Configuring the LACP Interval

By default, the actor and partner send LACP packets every second. You can configure the interval at which the interfaces send LACP packets by including the **periodic** statement at the `[edit interfaces interface-name aggregated-ether-options lacp]` hierarchy level:

```
[edit interfaces interface-name aggregated-ether-options lacp]
periodic interval;
```

The interval can be fast (every second) or slow (every 30 seconds). You can configure different periodic rates on active and passive interfaces. When you configure the active and passive interfaces at different rates, the transmitter honors the receiver's rate.



NOTE: Source address filtering does not work when LACP is enabled.

Percentage policers are not supported on aggregated Ethernet interfaces with the CCC protocol family configured. For more information about percentage policers, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

Generally, LACP is supported on all untagged aggregated Ethernet interfaces. For more information, see *Configuring Untagged Aggregated Ethernet Interfaces*.

Configuring LACP Link Protection



NOTE: When using LACP link protection, you can configure only two member links to an aggregated Ethernet interface: one active and one standby.

To force active and standby links within an aggregated Ethernet, you can configure LACP link protection and system priority at the aggregated Ethernet interface level using the **link-protection** and **system-priority** statements. Configuring values at this level results in only the configured interfaces using the defined configuration. LACP interface configuration also enables you to override global (chassis) LACP settings.

LACP link protection also uses port priority. You can configure port priority at the Ethernet interface **[ether-options]** hierarchy level using the **port-priority** statement. If you choose not to configure port priority, LACP link protection uses the default value for port priority (127).



NOTE: LACP link protection supports per-unit scheduling configuration on aggregated Ethernet interfaces.

To enable LACP link protection for an aggregated Ethernet interfaces, use the **link-protection** statement at the **[edit interfaces aeX aggregated-ether-options lacp]** hierarchy level:

```
[edit interfaces aeX aggregated-ether-options lacp]
link-protection;
  disable;
  revertive;
  non-revertive;
}
```

By default, LACP link protection reverts to a higher-priority (lower-numbered) link when that higher-priority link becomes operational or a link is added to the aggregator that is determined to be higher in priority. However, you can suppress link calculation by adding the **non-revertive** statement to the LACP link protection configuration. In nonrevertive mode, once a link is active and collecting and distributing packets, the subsequent addition of a higher-priority (better) link does not result in a switch and the current link remains active.

If LACP link protection is configured to be nonrevertive at the global (**[edit chassis]** hierarchy) level, you can add the **revertive** statement to the LACP link protection configuration to override the nonrevertive setting for the interface. In revertive mode, the addition of a higher-priority link to the aggregator results in LACP performing a priority recalculation and switching from the current active link to the new active link.



CAUTION: If both ends of an aggregator have LACP link protection enabled, make sure to configure both ends of the aggregator to use the same mode. Mismatching LACP link protection modes can result in lost traffic.

We strongly recommend you to use LACP on both ends of the aggregator, when you connect an aggregated Ethernet interface with two member interfaces to any other vendor device. Otherwise, the vendor device (say a Layer 2 switch, or a router), will not be able to manage the traffic coming from the two link aggregated Ethernet bundle. As a result, you might observe

the vendor device sending back the traffic to the backup member link of the aggregated Ethernet interface.

Currently, MX-MPC2-3D, MX-MPC2-3D-Q, MX-MPC2-3D-EQ, MX-MPC1-3D, MX-MPC1-3D-Q, and MPC-3D-16XGE-SFP do not drop traffic coming back to the backup link, whereas DPCE-R-Q-20GE-2XGE, DPCE-R-Q-20GE-SFP, DPCE-R-Q-40GE-SFP, DPCE-R-Q-4XGE-XFP, DPCE-X-Q-40GE-SFP, and DPCE-X-Q-4XGE-XFP drop traffic coming to the backup link.

Configuring LACP System Priority

To configure LACP system priority for aggregated Ethernet interfaces on the interface, use the **system-priority** statement at the **[edit interfaces aeX aggregated-ether-options lacp]** hierarchy level:

```
[edit interfaces aeX aggregated-ether-options lacp]
system-priority;
```

The system priority is a 2-octet binary value that is part of the LACP system ID. The LACP system ID consists of the system priority as the two most-significant octets and the interface MAC address as the six least-significant octets. The system with the numerically lower value for system priority has the higher priority. By default, system priority is 127, with a range of 0 to 65,535.

Configuring LACP System Identifier

To configure the LACP system identifier for aggregated Ethernet interfaces, use the **system-id** statement at the **[edit interfaces aeX aggregated-ether-options lacp]** hierarchy level:

```
[edit interfaces aeX aggregated-ether-options lacp]
system-id system-id;
```

The user-defined system identifier in LACP enables two ports from two separate devices to act as though they were part of the same aggregate group.

The system identifier is a 48-bit (6-byte) globally unique field. It is used in combination with a 16-bit system-priority value, which results in a unique LACP system identifier.

Configuring LACP administrative Key

To configure an administrative key for LACP, include the **admin-key number** statement at the **edit interfaces aeX aggregated-ether-options lacp]** hierarchy level:

```
[edit interfaces ae x aggregated-ether-options-lacp]
admin-key number;
```



NOTE: You must configure MC-LAG to configure the `admin-key` statement. For more information about MC-LAG, see *Configuring Multichassis Link Aggregation on MX Series Routers*.

Configuring LACP Port Priority

To configure LACP port priority for aggregated Ethernet interfaces, use the `port-priority` statement at the `[edit interfaces interface-name ether-options 802.3ad aeX lacp]` or `[edit interfaces interface-name ether-options 802.3ad aeX lacp]` hierarchy levels:

```
[edit interfaces interface-name ether-options 802.3ad aeX lacp]
port-priority priority;
```

The port priority is a 2-octet field that is part of the LACP port ID. The LACP port ID consists of the port priority as the two most-significant octets and the port number as the two least-significant octets. The system with the numerically lower value for port priority has the higher priority. By default, port priority is 127, with a range of 0 to 65,535.

Port aggregation selection is made by each system based on the highest port priority and are assigned by the system with the highest priority. Ports are selected and assigned starting with the highest priority port of the highest priority system and working down in priority from there.



NOTE: Port aggregation selection (discussed above) is performed for the active link when LACP link protection is enabled. Without LACP link protection, port priority is not used in port aggregation selection.

Tracing LACP Operations

To trace the operations of the LACP process, include the `traceoptions` statement at the `[edit protocols lacp]` hierarchy level:

```
[edit protocols lacp]
traceoptions {
  file <filename> <files number> <size size> <world-readable | no-world-readable>;
  flag flag;
  no-remote-trace;
}
```

You can specify the following flags in the `protocols lacp traceoptions` statement:

- **all**—All LACP tracing operations
- **configuration**—Configuration code
- **packet**—Packets sent and received
- **process**—LACP process events
- **protocol**—LACP protocol state machine
- **routing-socket**—Routing socket events
- **startup**—Process startup events

For general information about tracing, see the tracing and logging information in the *Junos OS Administration Library*.

LACP Limitations

LACP can link together multiple different physical interfaces, but only features that are supported across all of the linked devices will be supported in the resulting link aggregation group (LAG) bundle. For example, different PICs can support a different number of forwarding classes. If you use link aggregation to link together the ports of a PIC that supports up to 16 forwarding classes with a PIC that supports up to 8 forwarding classes, the resulting LAG bundle will only support up to 8 forwarding classes. Similarly, linking together a PIC that supports WRED with a PIC that does not support it will result in a LAG bundle that does not support WRED.

Example: Configuring Aggregated Ethernet LACP

Configure aggregated Ethernet LACP over a VLAN-tagged interface:

LACP with
VLAN-Tagged
Aggregated Ethernet

```
[edit interfaces]
ge--1/1/1 {
  ether-options {
    802.3ad ae0;
  }
}
ae0 {
  aggregated-ether-options {
    lacp {
      active;
    }
  }
  vlan-tagging;
  unit 0 {
    vlan-id 100;
    family inet {
      address 10.1.1.2/24 {
        vrrp-group 0 {
          virtual-address 10.1.1.4;
          priority 200;
        }
      }
    }
  }
}
```

```
}
}
}
}
```

Configure aggregated Ethernet LACP over an untagged interface:

LACP with Untagged Aggregated Ethernet

```
[edit interfaces]
ge-1/1/1 {
  ether-options-options {
    802.3ad ae0;
  }
}
ae0 {
  aggregated-ether-options {
    lacp {
      active;
    }
  }
  unit 0 {
    family inet {
      address 10.1.1.2/24 {
        vrrp-group 0 {
          virtual-address 10.1.1.4;
          priority 200;
        }
      }
    }
  }
}
```

Related Documentation

- *lacp*
- *link-protection*
- *traceoptions*
- *Ethernet Interfaces Feature Guide for Routing Devices*

SNMP MIB Support on Junos Fusion Enterprise

- [Chassis MIB Support \(Junos Fusion\) on page 951](#)

Chassis MIB Support (Junos Fusion)

The Chassis MIB has been enhanced to enable satellite devices to be represented in the chassis MIB. Satellite devices are represented as FPCs/slots (100, 101, 102,...) in the aggregation device. The support is enabled using a separate range of container indices (CIDX), which allows the SNMP process to redirect relevant SNMP requests to the satellite device management process.

The CIDX for representing satellite device hardware components in Junos Fusion are offset by 100 from indices for hardware components on Junos devices; for example a regular CIDX 2 (Power Supply) is 102 for the power supply of the satellite device. Using these indices you can distinguish the satellite device hardware from the aggregate device. The L1 index for satellite device entries refers to their FPC slot identifiers. As per the chassis MIB convention, identifiers are 1-based. For example, satellite device 100 will have an L1 index of 101, satellite device 101 will have an L1 index of 102, and so on.

[Table 48 on page 951](#) shows the CIDXs used for satellite devices.

Table 48: CIDX's for Satellite Devices

CIDX	Component Type
102	Power Supply
104	Fan
107	FPC
108	PIC

The following tables have been enhanced to include object IDs for satellite devices:

- `jnxContainersTable`
- `jnxContentsTable`

- jnxFilledTable
- jnxOperatingTable
- jnxFRUTable

Examples of new object IDs in the jnxContainersTable:

```
jnxContainersType.102 = jnxSatelliteDeviceSlotPower.0
jnxContainersType.104 = jnxSatelliteDeviceSlotFan.0
jnxContainersType.107 = jnxSatelliteDeviceSlotFPC.0
jnxContainersType.108 = jnxSatelliteDeviceMediaCardSpacePIC.0
...
jnxContainersDescr.102 = SD PEM slot
jnxContainersDescr.104 = SD FAN slot
jnxContainersDescr.107 = SD FPC slot
jnxContainersDescr.108 = SD PIC slot
```

Examples of new object IDs in the jnxContentsTable:

```
jnxContentsType.102.102.1.0 = jnxSatelliteDeviceSlotPower
jnxContentsType.102.102.2.0 = jnxSatelliteDeviceSlotPower
jnxContentsType.104.102.1.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.104.102.2.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.104.102.3.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.104.102.4.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.104.102.5.0 = jnxSatelliteDeviceSlotFan
jnxContentsType.107.102.0.0 = jnxSatelliteDeviceSlotFPC
jnxContentsType.108.102.1.0 = jnxSatelliteDeviceMediaCardSpacePIC
...
jnxContentsDescr.102.102.1.0 = SD101 PEM 0
jnxContentsDescr.102.102.2.0 = SD101 PEM 1
jnxContentsDescr.104.102.1.0 = SD101 Fan Tray 0
jnxContentsDescr.104.102.2.0 = SD101 Fan Tray 1
jnxContentsDescr.104.102.3.0 = SD101 Fan Tray 2
jnxContentsDescr.104.102.4.0 = SD101 Fan Tray 3
jnxContentsDescr.104.102.5.0 = SD101 Fan Tray 4
jnxContentsDescr.107.102.0.0 = SD101 FPC: QFX5100-48S-6Q @ 101/*/*
jnxContentsDescr.108.102.1.0 = SD101 PIC: 48x10G-6x40G @ 101/0/*
```

The following SNMP traps are generated for Satellite Devices, which are also logged as syslog messages:

- Satellite Device (as FPC) add (online) or remove
- Satellite Device Fan add (online) or remove
- Satellite Device PSU add (online) or remove
- Satellite Device PIC add (online) or remove
- Satellite Device FAN failure or status
- Satellite Device PSU failure or status

Table 49 on page 953 shows the SNMP traps that can be generated for satellite devices.

Table 49: SNMP Traps Generated for Satellite Devices

Trap	Condition
jnxFruRemoval	Sent when the specified FRU (FAN/PSU) has been removed from the chassis, or the satellite device has been removed from the aggregation device's database
jnxFruInsertion	Sent when the specified FRU (FAN/PSU) has been inserted into the satellite device
jnxFruPowerOff	Sent when the specified FRU (FAN/PSU) has been powered off in the satellite device
jnxFruPowerOn	Sent when the specified FRU (FAN/PSU) has been powered on in the satellite device
jnxFruFailed	Sent when the specified FRU (FAN/PSU) has failed in the satellite device. Typically, this is due to the FRU not powering up or being unable to load software. FRU replacement might be required
jnxFruOK	
jnxFruOffline	Sent when FPC's new reported state is not online or PSU/FAN/PIC is not present due to satellite device removal
jnxFruOnline	Sent when specified FRU (FPC,PIC,PSU,FAN) gets added in the aggregation device database
jnxFruCheck	Sent when the specified FRU (FAN/PSU) has encountered operational errors

Given below are examples of the system log messages generated:

```
messages:Apr 15 21:28:36 card spmd[6706]: SPMD_SNMP_TRAP10: SNMP trap generated:
  Fru Offline (jnxFruContentsIndex 102, jnxFruL1Index 109, jnxFruL2Index 1,
jnxFruL3Index 0, jnxFruName SD108 PEM 0, jnxFruType 7, jnxFruSlot 0,
jnxFruOfflineReason 1, jnxFruLastPowerOff 0, jnxFruLastPowerOn 0)
```

```
messages:Apr 15 21:28:36 card spmd[6706]: SPMD_SNMP_TRAP10: SNMP trap generated:
  Fru Offline (jnxFruContentsIndex 104, jnxFruL1Index 109, jnxFruL2Index 1,
jnxFruL3Index 1, jnxFruName SD108 Fan Tray 0, jnxFruType 13, jnxFruSlot 0,
jnxFruOfflineReason 1, jnxFruLastPowerOff 0, jnxFruLastPowerOn 0)
```

```
messages:Apr 15 21:28:57 card spmd[8847]: SPMD_SNMP_TRAP7: SNMP trap generated:
  Fru Online (jnxFruContentsIndex 107, jnxFruL1Index 103, jnxFruL2Index 0,
jnxFruL3Index 0, jnxFruName SD102 FPC: @ 102/*/*, jnxFruType 3, jnxFruSlot 102)
```

```
messages:Apr 15 21:28:36 card spmd[6706]: SPMD_SNMP_TRAP10: SNMP trap generated:
  Fru Offline (jnxFruContentsIndex 108, jnxFruL1Index 109, jnxFruL2Index 1,
jnxFruL3Index 0, jnxFruName SD108 PIC: 48x 10/100/1000 Base-T @ 108/0/*, jnxFruType
11, jnxFruSlot 0, jnxFruOfflineReason 1, jnxFruLastPowerOff 0, jnxFruLastPowerOn
0)
```


CHAPTER 16

Media Access Control Security (MACsec) on Junos Fusion Enterprise

- [Understanding Media Access Control Security on a Junos Fusion Enterprise on page 955](#)

Understanding Media Access Control Security on a Junos Fusion Enterprise

Media Access Control Security (MACsec) is widely used in campus deployments to secure network traffic between endpoints and access switches. You can enable MACsec on extended ports in a Junos Fusion Enterprise topology to provide secure communication between the satellite device and connected hosts.

- [MacSec Overview on page 955](#)
- [Enabling MACsec in a Junos Fusion Enterprise on page 955](#)

MacSec Overview

MACsec is an 802.1AE IEEE industry-standard security technology that provides secure communication on Ethernet links between directly-connected nodes. MACsec is capable of identifying and preventing most security threats, including denial of service, intrusion, man-in-the-middle, masquerading, passive wiretapping, and playback attacks. MACsec provides point-to-point integrity and can be used in combination with other security solutions, such as IP Security (IPsec) and Secure Sockets Layer (SSL), to provide end-to-end network security.

See *Understanding Media Access Control Security (MACsec)* for a detailed overview of MACsec.

Enabling MACsec in a Junos Fusion Enterprise

To enable MACsec on a link connecting an endpoint device—such as a server, phone, or personal computer—to an extended port in a Junos Fusion Enterprise, the endpoint device must support MACsec and must be running client software that allows it to enable a MACsec-secured connection. A secure association using dynamic secure association security mode (dynamic SAK) must be configured on the extended port that connects to the host. The secure association keys are retrieved from the RADIUS server as part of the 802.1X authentication process. The keys are exchanged between the MACsec peers to create a secure connection.

MacSec configuration in Junos Fusion is done on the aggregated device and is identical for a standalone EX Series switch. See *Configuring MACsec on EX, SRX and Fusion Devices*.



NOTE: When MACsec is enabled in a Junos Fusion with dual aggregation devices, the exchange of EAPoL packets that takes place during the 802.1X authentication session is limited to one aggregation device (AD). The MKA protocol is triggered only on that (AD), and the keys generated by MKA are not synced across the ADs. If the AD on which the keys are generated fails, then the MACsec sessions must be re-authenticated using the other AD.

**Related
Documentation**

- *Configuring MACsec on EX, SRX and Fusion Devices*

Class of Service on Junos Fusion Enterprise

- [Understanding CoS in Junos Fusion Enterprise on page 957](#)
- [Configuring CoS in Junos Fusion Enterprise on page 961](#)

Understanding CoS in Junos Fusion Enterprise

Junos Fusion provides a method of significantly expanding the number of available network interfaces on an *aggregation device* by allowing the aggregation device to add interfaces through interconnections with *satellite devices*. The entire system—the interconnected aggregation device and satellite devices—is called Junos Fusion. Junos Fusion simplifies network administration by appearing in the network topology as a single device, and the single device is managed from a single IP address.

See [Figure 12 on page 957](#) and [Figure 13 on page 958](#) for illustrations of the Junos Fusion Enterprise topology.

Figure 12: Basic Junos Fusion Topology


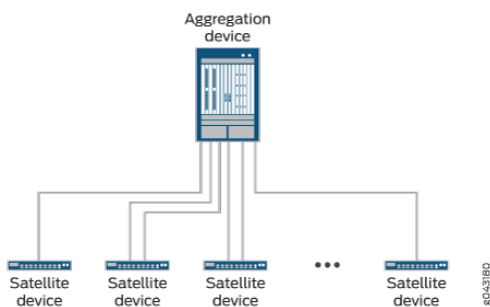


Figure 13: Junos Fusion Topology with Dual Aggregation Devices and Satellite Device Clusters

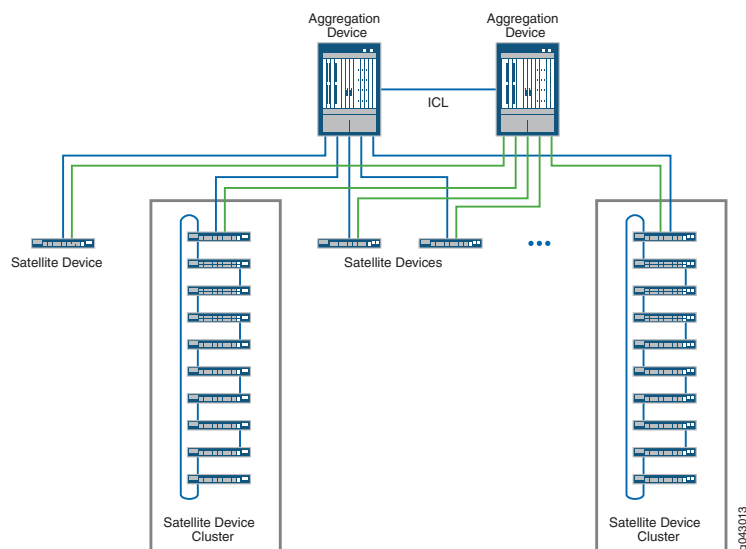

For Junos Fusion Enterprise, an aggregation device is an EX9200 switch that is running Junos OS Release 16.1R1 or later. Beginning with Junos OS Release 17.1R1, Junos Fusion Enterprise supports CoS. CoS configuration is the same on Junos Fusion Enterprise regardless of the selected architecture – single or dual aggregation devices, single or cluster satellite devices.

This topic describes class of service (CoS) on the different types of ports in Junos Fusion.


This topic covers:

- [Overview of CoS on Different Types of Ports in Junos Fusion on page 958](#)
- [CoS on Extended Ports and Uplink Ports in Junos Fusion on page 960](#)
- [CoS on Cascade Ports in Junos Fusion on page 960](#)

Overview of CoS on Different Types of Ports in Junos Fusion

[Figure 14 on page 959](#) provides an overview of packet flow through Junos Fusion and how CoS features are applied at the different ports.

Figure 14: Junos Fusion CoS Feature Application

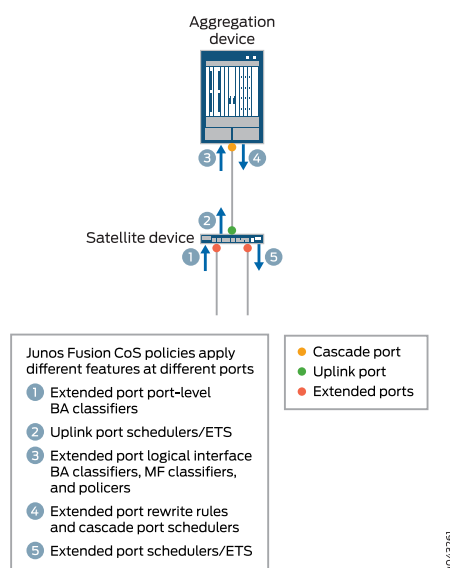

All configuration for CoS policies for Junos Fusion is done on the aggregation device. For CoS policies that you define for extended ports, however, different portions of that policy are applied at different points in a packet's path through Junos Fusion. From [Figure 14 on page 959](#):

1. As a packet enters an extended port, any port-level (physical interface-level) behavior aggregate (BA) classifier you define for that port is applied to derive a forwarding class and packet loss priority.
2. As that packet exits the uplink port, you can apply schedulers or enhanced transmission selection (ETS) based on the port-level BA classifier assigned at the ingress extended port.
3. As the packet enters the aggregation device at the cascade port, any multifield classifiers, policers, or logical interface-level BA classifiers you define for the ingress extended port are applied.
4. As the packet exits the aggregation device at the cascade port, any rewrite rules you define for the egress extended port, as well as any schedulers you define for the cascade port, are applied. Also, the forwarding class determined in the previous step is carried in the 801.2BR header to the satellite device and used to select the output queue at the egress extended port.
5. Finally, as the packet exits an extended port, any schedulers or ETS you define for that port are applied based on the forwarding class determined by the multifield classifiers, policers, or logical interface-level BA classifiers defined for the ingress extended port.

The following sections provide further information about implementing CoS on each port type in Junos Fusion.

CoS on Extended Ports and Uplink Ports in Junos Fusion

All class of service (CoS) scheduling policies for extended ports and uplink ports on the satellite devices are provisioned on the EX9200 aggregation device. Similarly, standard Junos OS CoS commands are issued on the EX9200 aggregation device for retrieving extended port and uplink port CoS states and queue statistics. The EX9200 aggregation device supports configuring the following CoS features for each extended port and uplink port on each satellite device:

- Behavior aggregate classifiers
- Multifield classifiers
- Input and output policers
- Forwarding classes
- Traffic control profiles
- Schedulers and scheduler maps
- Egress rewrite rules



NOTE: Configuring CoS policies on *satellite devices* (on both extended and uplink ports) has the following restrictions:

- IP precedence classifiers are not supported. DSCP classifiers are supported, however.
- Interpolated drop profiles are not supported.
- The **transmit-rate** option is supported for schedulers. However, the **remainder**, **rate-limit**, and **exact** options are not supported under **transmit-rate**.

While CoS features for satellite device ports are configured on the aggregation device, the actual classification, queueing, and scheduling is performed on the satellite devices. Information on actual traffic shaping is not passed back to the aggregation device. Logical interface statistics for the **show interfaces** command are collected on the aggregate device and do not include shaping rate data. For actual traffic statistics gathered on satellite device interfaces, use the statistics for the physical interface and not the logical interface.



NOTE: CoS statistics are not supported on extended ports.

CoS on Cascade Ports in Junos Fusion

When a cascade port is created, two logical interfaces are automatically created:

- One in-band management logical interface (assigned unit 32769) for traffic that only flows between the aggregation device and the satellite devices, such as keepalives, for provisioning information, and for software updates.
- One for data logical interface (assigned unit 32770) for regular traffic that flows into and out of Junos Fusion.

Per-unit scheduling is automatically enabled on the cascade port to support multiple queues on each of the logical interfaces.



NOTE: All cascade ports must be configured on Modular Port Concentrators (MPCs) that support per-unit scheduling.

50 Mbps of bandwidth is reserved for the management logical interface. The remaining bandwidth is available to the data logical interface. A shaping rate of 10 percent is also applied to the management logical interface, which means it can use up to 10 percent of the full interface bandwidth, if available.

The default scheduling policy is applied to the data logical interface. This reserves 95 percent of the available bandwidth and buffer space for the best effort forwarding class (mapped to queue 0) and 5 percent for the network control forwarding class (mapped to queue 3). You can create custom forwarding classes and schedulers by applying a custom scheduler map to this logical interface.

Release History Table

Release	Description
17.1R1	Beginning with Junos OS Release 17.1R1, Junos Fusion Enterprise supports CoS.

Related Documentation

- [Junos Fusion Enterprise Overview on page 3](#)
- [Understanding Junos Fusion Enterprise Components on page 5](#)
- [Configuring CoS in Junos Fusion Enterprise on page 961](#)

Configuring CoS in Junos Fusion Enterprise

Junos Fusion significantly expands the number of available network interfaces on an *aggregation device* by allowing the aggregation device to add interfaces through interconnections with *satellite devices*. The entire system—the interconnected aggregation device and satellite devices—is called Junos Fusion. Junos Fusion simplifies network administration by appearing in the network topology as a single device, and the single device is managed from a single IP address.

This topic describes how to configure CoS on the different types of ports in Junos Fusion.

This topic covers:

- [Configuring Behavior Aggregate Classifiers on Satellite Device Extended Ports on page 962](#)
- [Configuring Rewrite Rules on Satellite Device Extended Ports on page 963](#)
- [Changing the Default Scheduling Policy on an Aggregated Device Cascade Port on page 964](#)

Configuring Behavior Aggregate Classifiers on Satellite Device Extended Ports

Normally, you apply a behavior aggregate (BA) classifier to a logical interface on an EX9200 device at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level. When traffic from a satellite device extended port reaches the aggregation device, the BA classifier configured for the logical interface level of the satellite device extended port is applied the same as it is for traffic from other non-extended ports to help determine the forwarding class of the traffic; policers and multifold classifiers can also factor in determining the forwarding class of the traffic. When the aggregation devices sends the traffic out to the satellite device, the forwarding class is carried in the 801.2BR header. The satellite device then uses the forwarding class to select the output queue at the *egress extended port*.

You can also apply a BA classifier at the physical interface level of an extended port. This classifier is used to determine the output queue at the *uplink port* of the satellite device.



NOTE: IP precedence classifiers are not supported on extended ports at the physical interface level. DSCP classifiers are supported, however.



NOTE: You cannot apply a physical interface-level classifier on an EX9200 local port.

To add a behavior aggregate classifier to the physical interface level of a satellite device extended port in Junos Fusion:

1. Define the classifier.

```
[edit class-of-service]
user@ex9200-agg-device#set classifiers dscp dscp-1 forwarding-class best-effort-3
loss-priority low code-points 001010
```

2. Apply the classifier to the physical extended port.

```
[edit class-of-service]
user@ex9200-agg-device#set interfaces xe-100/0/33 classifiers dscp dscp-1
```

3. Commit the changes and then confirm the configuration.

```
[edit class-of-service]
user@ex9200-agg-device# show
classifiers {
    dscp dscp-1 {
        forwarding-class best-effort-3 {
            loss-priority low code-points 001010;
        }
    }
}
interfaces {
    xe-100/0/33 {
        classifiers {
            dscp dscp-1;
        }
    }
}
```

In the above configuration example, packets entering port xe-100/0/33 with a DSCP value of **001010** will be assigned a forwarding class of **best-effort-3** to select the output queue at the uplink port as the packet travels from the satellite device to the aggregation device.

- See Also**
- [Understanding Junos Fusion Ports on page 17](#)
 - *Understanding How Behavior Aggregate Classifiers Prioritize Trusted Traffic*
 - *Overview of Assigning Service Levels to Packets Based on Multiple Packet Header Fields*

Configuring Rewrite Rules on Satellite Device Extended Ports

You apply rewrite rules to logical interfaces on satellite device extended ports.

To add a rewrite rule to a satellite device extended port in a Junos Fusion:

1. Define the rewrite rule.

```
[edit class-of-service]
user@ex9200-agg-device#set rewrite-rules ieee-802.1 rewrite1p forwarding-class
best-effort loss-priority low code-point 010
```

2. Apply the rewrite rule to a logical interface.

```
[edit class-of-service]
user@ex9200-agg-device#set interfaces xe-108/0/47 unit 0 rewrite-rules ieee-802.1
rewrite1p
```

3. Commit the changes and then confirm the configuration.

```
[edit class-of-service]
user@ex9200-agg-device# show
rewrite-rules {
    ieee-802.1 rewrite1p {
```

```

        forwarding-class best-effort {
            loss-priority low code-point 010;
        }
    }
}
interfaces {
    xe-108/0/47 {
        unit 0 {
            rewrite-rules {
                ieee-802.1 rewrite-1p;
            }
        }
    }
}

```

In Junos OS, rewrite rules only look at the forwarding class and packet loss priority of the packet (as assigned by a behavior aggregate or multifield classifier at ingress), not at the incoming CoS value, to determine the CoS value to write to the packet header at egress. The above configuration means that, for any packet exiting the xe-108/0/47.0 interface that has a forwarding class of **best-effort** and a packet loss priority of **low**, the ieee-802.1 CoS value will be rewritten to **010**.

- See Also**
- [Understanding Junos Fusion Ports on page 17](#)
 - *Rewriting Packet Headers to Ensure Forwarding Behavior*

Changing the Default Scheduling Policy on an Aggregated Device Cascade Port

When a cascade port is created, two logical interfaces are automatically created:

- One in-band management logical interface (assigned unit 32769) for traffic that only flows between the aggregation device and the satellite devices, such as keepalives, for provisioning information, and for software updates.
- One for data logical interface (assigned unit 32770) for regular traffic that flows into and out of Junos Fusion.

Let's say, for example, that interface xe-0/0/1 is configured as a cascade port. The command **show interfaces xe-0/0/1 terse** produces output similar to the following:

```

user@ex9200-agg-device# run show interfaces xe-0/0/1 terse
Interface      Admin Link Proto  Local          Remote
xe-0/0/1       up    up    inet   10.0.0.5/30
xe-0/0/1.32769 up    up    inet
xe-0/0/1.32770 up    up    bridge

```

The control logical interface (unit 32769) is automatically assigned an internal traffic control profile (`__cp_control_tc_prof`) that guarantees 50 Mbps of bandwidth for the

logical interface, a 10 percent shaping rate, and the default scheduling policy. The default scheduling policy is applied to the data logical interface. For example:

```
user@ex9200-agg-device# run show class-of-service interface xe-0/0/1
Physical interface: xe-0/0/1, Index: 144
Maximum usable queues: 8, Queues in use: 4
  Scheduler map: <default>, Index: 2
  Congestion-notification: Disabled

  Logical interface: xe-0/0/1.32769, Index: 344
Object      Name                               Type      Index
Traffic-control-profile  __cp_control_tc_prof      Output    17227
Classifier      ipprec-compatibility      ip        13

  Logical interface: xe-0/0/1.32770, Index: 343
Object      Name                               Type      Index
Scheduler-map  <default>                   Output    2
```

and:

```
user@ex9200-agg-device# run show class-of-service scheduler-hierarchy interface
xe-0/0/1
Interface/
Resource name      Shaping rate      Guaranteed rate      Guaranteed/Excess      Queue weight      Excess weight
                   kbits             kbits                priority              high/low
xe-0/0/1.32770     10000000           0                    Low Low               118                1 1
  BE               10000000           0                    Low Low               6
  NC               10000000           0                    Low Low               6
xe-0/0/1.32769     1000000            50000               Low Low               118                62 62
  BE               1000000            47500               Low Low               6
  NC               1000000            2500                Low Low               6
```

You can create custom forwarding classes and schedulers for the data logical interface by applying a customer scheduler map to that logical interface. For example, to apply a customer scheduler policy to the data logical interface:

1. Create customer schedulers.

```
[edit class-of-service]
user@ex9200-agg-device#set schedulers AF_SCH_CORE transmit-rate percent 40
user@ex9200-agg-device#set schedulers AF_SCH_CORE buffer-size percent 40
user@ex9200-agg-device#set schedulers AF_SCH_CORE priority medium-high
user@ex9200-agg-device#set schedulers BE_SCH_CORE transmit-rate percent 10
user@ex9200-agg-device#set schedulers BE_SCH_CORE buffer-size percent 10
user@ex9200-agg-device#set schedulers BE_SCH_CORE priority low
user@ex9200-agg-device#set schedulers EF_SCH_CORE transmit-rate percent 40
user@ex9200-agg-device#set schedulers EF_SCH_CORE buffer-size percent 40
user@ex9200-agg-device#set schedulers EF_SCH_CORE priority medium-low
user@ex9200-agg-device#set schedulers NC_SCH_CORE transmit-rate percent 10
user@ex9200-agg-device#set schedulers NC_SCH_CORE buffer-size percent 10
user@ex9200-agg-device#set schedulers NC_SCH_CORE priority high
```

2. Create a scheduler map.

```
[edit class-of-service]
user@ex9200-agg-device#set scheduler-maps CORE_SCHED_MAP forwarding-class
BE scheduler BE_SCH_CORE
user@ex9200-agg-device#set scheduler-maps CORE_SCHED_MAP forwarding-class
EF scheduler EF_SCH_CORE
user@ex9200-agg-device#set scheduler-maps CORE_SCHED_MAP forwarding-class
AF scheduler AF_SCH_CORE
user@ex9200-agg-device#set scheduler-maps CORE_SCHED_MAP forwarding-class
NC scheduler NC_SCH_CORE
```

3. Apply the scheduler map to the data logical interface.

```
[edit class-of-service]
user@ex9200-agg-device#set interfaces xe-0/0/1 unit 32770 scheduler-map
CORE_SCHED_MAP
```

4. Commit the changes and then confirm the configuration.

```
[edit class-of-service]
user@ex9200-agg-device# show
interfaces {
  xe-0/0/1 {
    unit 32770 {
      scheduler-map CORE_SCHED_MAP;
    }
  }
}
scheduler-maps {
  CORE_SCHED_MAP {
    forwarding-class BE scheduler BE_SCH_CORE;
    forwarding-class EF scheduler EF_SCH_CORE;
    forwarding-class AF scheduler AF_SCH_CORE;
    forwarding-class NC scheduler NC_SCH_CORE;
  }
}
schedulers {
  BE_SCH_CORE {
    transmit-rate percent 10;
    buffer-size percent 10;
    priority low;
  }
  EF_SCH_CORE {
    transmit-rate percent 40;
    buffer-size percent 40;
    priority medium-low;
  }
  AF_SCH_CORE {
    transmit-rate percent 40;
    buffer-size percent 40;
    priority medium-high;
  }
  NC_SCH_CORE {
    transmit-rate percent 10;
    buffer-size percent 10;
    priority high;
  }
}
```

```
}
}
```

5. Verify your changes.

```
user@ex9200-agg-device# run show class-of-service interface xe-0/0/1
Physical interface: xe-0/0/1, Index: 144
Maximum usable queues: 8, Queues in use: 4
  Scheduler map: <default>, Index: 2
  Congestion-notification: Disabled

  Logical interface: xe-0/0/1.32769, Index: 344
Object      Name                               Type      Index
Traffic-control-profile  __cp_control_tc_prof  Output    17227
Classifier      ipprec-compatibility  ip        13

  Logical interface: xe-0/0/1.32770, Index: 343
Object      Name                               Type      Index
Scheduler-map  CORE_SCHED_MAP       Output    23433
```

and:

```
user@ex9200-agg-device# run show class-of-service scheduler-hierarchy interface
xe-0/0/1
Interface/          Shaping Guaranteed  Guaranteed/  Queue  Excess
Resource name       rate      rate      Excess      weight weight
                    kbits      kbits      priority          high/low

  xe-0/0/1.32770    10000000      0
1
  BE                10000000      0      Low  Low      12
  EF                10000000      0      Medium Low      50
  AF                10000000      0      Medium Low      50
  NC                10000000      0      High  High      12
  xe-0/0/1.32769    1000000      50000
62
  BE                1000000      47500      Low  Low      118
  NC                1000000      2500      Low  Low      6
```

- See Also**
- *How Schedulers Define Output Queue Properties*
 - *Default Schedulers Overview*

- Related Documentation**
- [Understanding CoS in Junos Fusion Enterprise on page 957](#)

CHAPTER 18

Extending a Junos Fusion Enterprise Using EVPN-MPLS

- [Understanding EVPN-MPLS Interworking with Junos Fusion Enterprise and MC-LAG on page 969](#)
- [Example: EVPN-MPLS Interworking With Junos Fusion Enterprise on page 974](#)

Understanding EVPN-MPLS Interworking with Junos Fusion Enterprise and MC-LAG

Starting with Junos OS Release 17.4R1, you can use Ethernet VPN (EVPN) to extend a Junos Fusion Enterprise or multichassis link aggregation group (MC-LAG) network over an MPLS network to a data center or campus network. With the introduction of this feature, you can now interconnect dispersed campus and data center sites to form a single Layer 2 virtual bridge.

[Figure 15 on page 970](#) shows a Junos Fusion Enterprise topology with two EX9200 switches that serve as aggregation devices (PE2 and PE3) to which the satellite devices are multihomed. The two aggregation devices use an interchassis link (ICL) and the Inter-Chassis Control Protocol (ICCP) protocol from MC-LAG to connect and maintain the Junos Fusion Enterprise topology. PE1 in the EVPN-MPLS environment interworks with PE2 and PE3 in the Junos Fusion Enterprise with MC-LAG.

Figure 15: EVPN-MPLS Interworking with Junos Fusion Enterprise


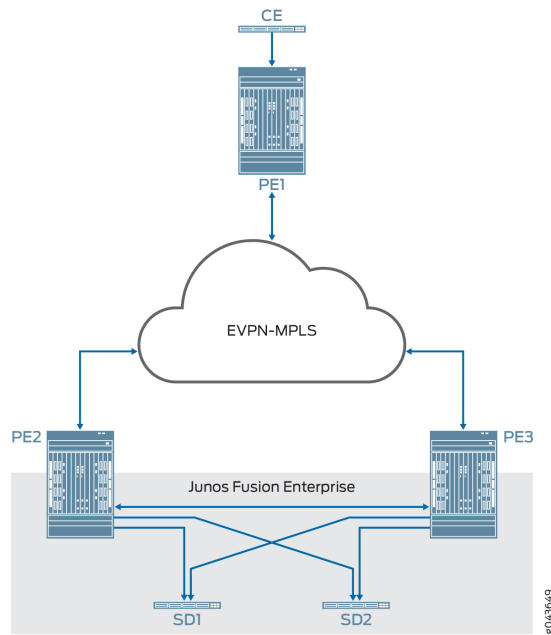


Figure 16 on page 970 shows an MC-LAG topology in which customer edge (CE) device CE1 is multihomed to PE2 and PE3. PE2 and PE3 use an ICL and the ICCP protocol from MC-LAG to connect and maintain the topology. PE1 in the EVPN-MPLS environment interworks with PE2 and PE3 in the MC-LAG environment.

Figure 16: EVPN-MPLS Interworking with MC-LAG

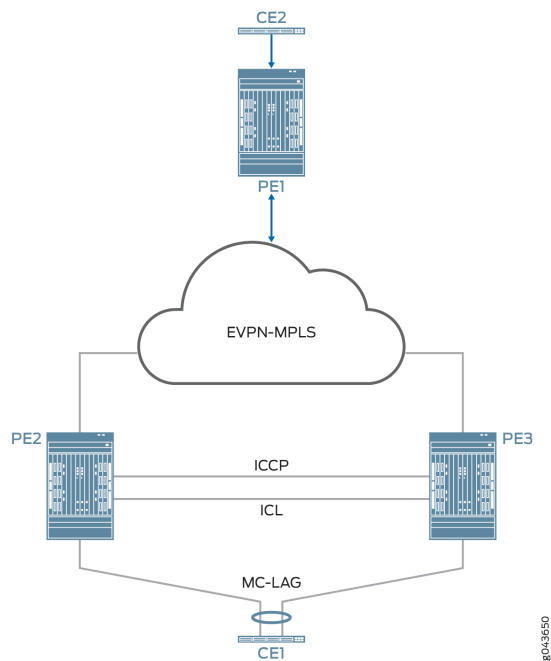

Throughout this topic, [Figure 15 on page 970](#) and [Figure 16 on page 970](#) serve as references to illustrate various scenarios and points.

The use cases depicted in [Figure 15 on page 970](#) and [Figure 16 on page 970](#) require the configuration of both EVPN multihoming in active-active mode and MC-LAG on PE2 and PE3. EVPN with multihoming active-active and MC-LAG have their own forwarding logic for handling traffic, in particular, broadcast, unknown unicast, and multicast (BUM) traffic. At times, the forwarding logic for EVPN with multihoming active-active and MC-LAG contradict each other and causes issues. This topic describes the issues and how the EVPN-MPLS interworking feature resolves these issues.



NOTE:

Other than the EVPN-MPLS interworking-specific implementations described in this topic, EVPN-MPLS, Junos Fusion Enterprise, and MC-LAG offer the same functionality and function the same as the standalone features.

- [Benefits of Using EVPN-MPLS with Junos Fusion Enterprise and MC-LAG on page 971](#)
- [BUM Traffic Handling on page 971](#)
- [Split Horizon on page 972](#)
- [MAC Learning on page 973](#)
- [Handling Down Link Between Cascade and Uplink Ports in Junos Fusion Enterprise on page 973](#)
- [Layer 3 Gateway Support on page 974](#)

Benefits of Using EVPN-MPLS with Junos Fusion Enterprise and MC-LAG

Use EVPN-MPLS with Junos Fusion Enterprise and MC-LAG to interconnect dispersed campus and data center sites to form a single Layer 2 virtual bridge.

BUM Traffic Handling

In the use cases shown in [Figure 15 on page 970](#) and [Figure 16 on page 970](#), PE1, PE2, and PE3 are EVPN peers, and PE2 and PE3 are MC-LAG peers. Both sets of peers exchange control information and forward traffic to each other, which causes issues.

[Table 50 on page 972](#) outlines the issues that arise, and how Juniper Networks resolves the issues in its implementation of the EVPN-MPLS interworking feature.

Table 50: BUM Traffic: Issues and Resolutions

BUM Traffic Direction	EVPN Interworking with Junos Fusion Enterprise and MC-LAG Logic	Issue	Juniper Networks Implementation Approach
North bound (PE2 receives BUM packet from a locally attached single- or dual-homed interfaces).	<p>PE2 floods BUM packet to the following:</p> <ul style="list-style-type: none"> All locally attached interfaces, including the ICL, for a particular broadcast domain. All remote EVPN peers for which PE2 has received inclusive multicast routes. 	Between PE2 and PE3, there are two BUM forwarding paths—the MC-LAG ICL and an EVPN-MPLS path. The multiple forwarding paths result in packet duplication and loops.	<ul style="list-style-type: none"> BUM traffic is forwarded on the ICL only. Incoming traffic from the EVPN core is not forwarded on the ICL. Incoming traffic from the ICL is not forwarded to the EVPN core.
South bound (PE1 forwards BUM packet to PE2 and PE3).	PE2 and PE3 both receive a copy of the BUM packet and flood the packet out of all of their local interfaces, including the ICL.	PE2 and PE3 both forward the BUM packet out of the ICL, which results in packet duplication and loops.	

Split Horizon

In the use cases shown in [Figure 15 on page 970](#) and [Figure 16 on page 970](#), split horizon prevents multiple copies of a BUM packet from being forwarded to a CE device (satellite device). However, the EVPN-MPLS and MC-LAG split horizon implementations contradict each other, which causes an issue. [Table 51 on page 972](#) explains the issue and how Juniper Networks resolves it in its implementation of the EVPN-MPLS interworking feature.

Table 51: BUM Traffic: Split Horizon-Related Issue and Resolution

BUM Traffic Direction	EVPN Interworking with Junos Fusion Enterprise and MC-LAG Logic	Issue	Juniper Networks Implementation Approach
North bound (PE2 receives BUM packet from a locally attached dual-homed interface).	<ul style="list-style-type: none"> Per EVPN-MPLS forwarding logic: <ul style="list-style-type: none"> Only the designated forwarder (DF) for the Ethernet segment (ES) can forward BUM traffic. The local bias rule, in which the local peer forwards the BUM packet and the remote peer drops it, is not supported. Per MC-LAG forwarding logic, local bias is supported. 	The EVPN-MPLS and MC-LAG forwarding logic contradicts each other and can prevent BUM traffic from being forwarded to the ES.	Support local bias, thereby ignoring the DF and non-DF status of the port for locally switched traffic.

Table 51: BUM Traffic: Split Horizon-Related Issue and Resolution (continued)

BUM Traffic Direction	EVPN Interworking with Junos Fusion Enterprise and MC-LAG Logic	Issue	Juniper Networks Implementation Approach
South bound (PE1 forwards BUM packet to PE2 and PE3).	Traffic received from PE1 follows the EVPN DF and non-DF forwarding rules for a multihomed ES.	None.	Not applicable.

MAC Learning

EVPN and MC-LAG use the same method for learning MAC addresses—namely, a PE device learns MAC addresses from its local interfaces and synchronizes the addresses to its peers. However, given that both EVPN and MC-LAG are synchronizing the addresses, an issue arises.

Table 52 on page 973 describes the issue and how the EVPN-MPLS interworking implementation prevents the issue. The use cases shown in Figure 15 on page 970 and Figure 16 on page 970 illustrate the issue. In both use cases, PE1, PE2, and PE3 are EVPN peers, and PE2 and PE3 are MC-LAG peers.

Table 52: MAC Learning: EVPN and MC-LAG Synchronization Issue and Implementation Details

MAC Synchronization Use Case	EVPN Interworking with Junos Fusion Enterprise and MC-LAG Logic	Issue	Juniper Networks Implementation Approach
MAC addresses learned locally on single- or dual-homed interfaces on PE2 and PE3.	<ul style="list-style-type: none"> Between the EVPN peers, MAC addresses are synchronized using the EVPN BGP control plane. Between the MC-LAG peers, MAC addresses are synchronized using the MC-LAG ICCP control plane. 	PE2 and PE3 function as both EVPN peers and MC-LAG peers, which result in these devices having multiple MAC synchronization paths.	<ul style="list-style-type: none"> For PE1: use MAC addresses synchronized by EVPN BGP control plane. For PE2 and PE3: use MAC addresses synchronized by MC-LAG ICCP control plane.
MAC addresses learned locally on single- or dual-homed interfaces on PE1.	Between the EVPN peers, MAC addresses are synchronized using the EVPN BGP control plane.	None.	Not applicable.

Handling Down Link Between Cascade and Uplink Ports in Junos Fusion Enterprise



NOTE: This section applies only to EVPN-MPLS interworking with a Junos Fusion Enterprise.

In the Junos Fusion Enterprise shown in Figure 15 on page 970, assume that aggregation device PE2 receives a BUM packet from PE1 and that the link between the cascade port on PE2 and the corresponding uplink port on satellite device SD1 is down. Regardless of whether the BUM packet is handled by MC-LAG or EVPN multihoming active-active, the

result is the same—the packet is forwarded via the ICL interface to PE3, which forwards it to dual-homed SD1.

To further illustrate how EVPN with multihoming active-active handles this situation with dual-homed SD1, assume that the DF interface resides on PE2 and is associated with the down link and that the non-DF interface resides on PE3. Typically, per EVPN with multihoming active-active forwarding logic, the non-DF interface drops the packet. However, because of the down link associated with the DF interface, PE2 forwards the BUM packet via the ICL to PE3, and the non-DF interface on PE3 forwards the packet to SD1.

Layer 3 Gateway Support

The EVPN-MPLS interworking feature supports the following Layer 3 gateway functionality for extended bridge domains and VLANs:

- Integrated routing and bridging (IRB) interfaces to forward traffic between the extended bridge domains or VLANs.
- Default Layer 3 gateways to forward traffic from a physical (bare-metal) server in an extended bridge domain or VLAN to a physical server or virtual machine in another extended bridge domain or VLAN.

Release History Table

Release	Description
17.4R1	Starting with Junos OS Release 17.4R1, you can use Ethernet VPN (EVPN) to extend a Junos Fusion Enterprise or multichassis link aggregation group (MC-LAG) network over an MPLS network to a data center or campus network.

Example: EVPN-MPLS Interworking With Junos Fusion Enterprise

This example shows how to use Ethernet VPN (EVPN) to extend a Junos Fusion Enterprise over an MPLS network to a geographically distributed campus or enterprise network.

EVPN-MPLS interworking is supported with a Junos Fusion Enterprise, which is based on a multichassis link aggregation group (MC-LAG) infrastructure to provide redundancy for the EX9200 switches that function as aggregation devices.

The aggregation devices in the Junos Fusion Enterprise are connected to a provider edge (PE) device in an MPLS network. The PE device can be either an MX Series router or an EX9200 switch.

This example shows how to configure the aggregation devices in the Junos Fusion Enterprise and the PE device in the MPLS network to interwork with each other.

- Starting with Junos OS Release 19.1R1, the **no-arp-suppression** configuration statement is no longer supported on any device.
- [Requirements on page 975](#)
- [Overview and Topology on page 975](#)

- [Aggregation Device \(PE1 and PE2\) Configuration on page 977](#)
- [PE3 Configuration on page 988](#)

Requirements

This example uses the following hardware and software components:

- Three EX9200 switches:
 - PE1 and PE2, which both function as aggregation devices in the Junos Fusion Enterprise and EVPN BGP peers in the EVPN-MPLS overlay network.
 - PE3, which functions as an EVPN BGP peer in the EVPN-MPLS overlay network.
- The EX9200 switches are running Junos OS Release 17.4R1 or later software.




NOTE: Although the Junos Fusion Enterprise includes three satellite devices, this example focuses on the configuration of the PE1, PE2, and PE3. For more information about configuring satellite devices, see [“Configuring or Expanding a Junos Fusion Enterprise” on page 45](#).

Overview and Topology

[Figure 17 on page 976](#) shows a Junos Fusion Enterprise with dual aggregation devices PE1 and PE2. The aggregation devices are connected using an interchassis link (ICL) and communicate with each other using the Inter-Chassis Control Protocol (ICCP).

Figure 17: EVPN-MPLS Interworking with Junos Fusion Enterprise

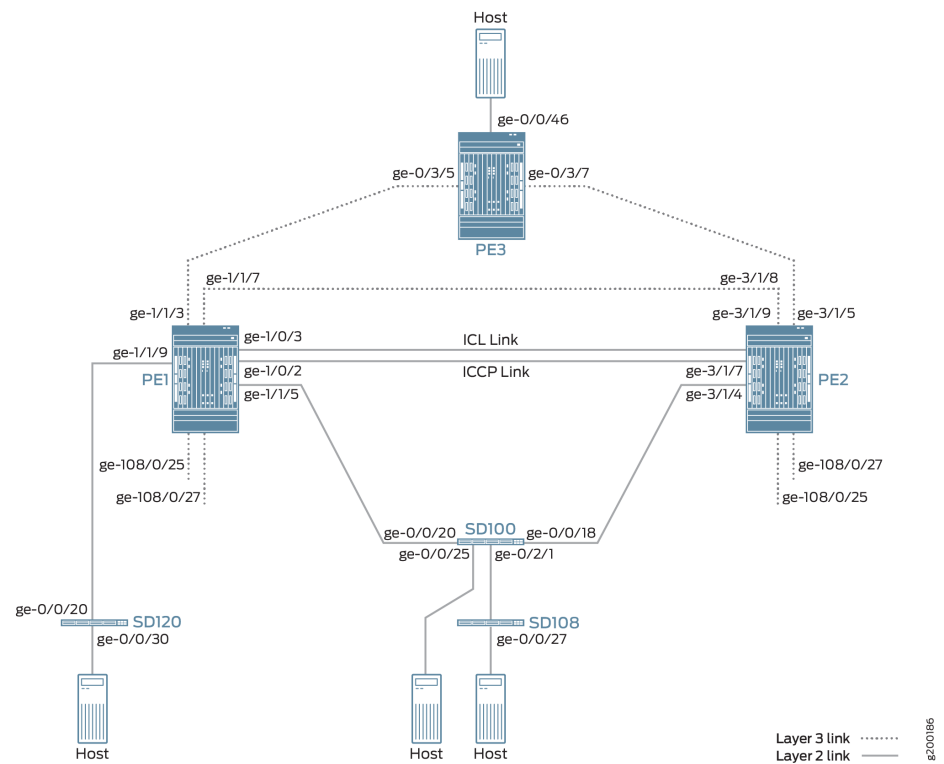

The Junos Fusion Enterprise also includes three satellite devices. Satellite device SD120 is a standalone satellite device that has a single-homed connection to PE1. Satellite devices SD100 and SD108 are included in a cluster named Cluster_100_108. SD100 is the only cluster member with a connection to an aggregation device, in this case, multihomed connections to PE1 and PE2.

The topology in [Figure 17 on page 976](#) also includes PE3, which is positioned at the edge of an MPLS network. PE3 functions as the gateway between the Junos Fusion Enterprise network and a geographically distributed campus or enterprise network. PE1, PE2, and PE3 run EVPN, which enables hosts in the Junos Fusion Enterprise network to communicate with hosts in the campus or enterprise network by way of the intervening MPLS network.

From the perspective of the EVPN-MPLS interworking feature, PE3 functions solely as an EVPN BGP peer, and PE1 and PE2 in the Junos Fusion Enterprise have dual roles:

- Aggregation devices in the Junos Fusion Enterprise.
- EVPN BGP peers in the EVPN-MPLS network.

Because of the dual roles, PE1 and PE2 are configured with Junos Fusion Enterprise, EVPN, BGP, and MPLS attributes.

[Table 53 on page 977](#) outlines key Junos Fusion Enterprise and EVPN (BGP and MPLS) attributes configured on PE1, PE2, and PE3.

Table 53: Key Junos Fusion Enterprise and EVPN (BGP and MPLS) Attributes Configured on PE1, PE2, and PE3

Key Attributes	PE1	PE2	PE3
Junos Fusion Enterprise Attributes			
Interfaces	ICL: ge-1/0/3 ICCP: ge-1/0/2	ICL: ge-3/1/9 ICCP: ge-3/1/7	Not applicable
EVPN-MPLS			
Interfaces	Connection to PE3: ge-1/1/3 Connection to PE2: ge-1/1/7	Connection to PE3: ge-3/1/5 Connection to PE1: ge-3/1/8	Connection to PE1: ge-0/3/5 Connection to PE2: ge-0/3/7
IP addresses	BGP peer address: 10.25.0.1	BGP peer address: 10.25.0.2	BGP peer address: 10.25.0.3
Autonomous system	100	100	100
Virtual switch routing instances	evpn1	evpn1	evpn1

Note the following about the EVPN-MPLS interworking feature and its configuration:

- You must configure Ethernet segment identifiers (ESIs) on the dual-homed extended ports in the Junos Fusion Enterprise. The ESIs enable EVPN to identify the dual-homed extended ports.
- The only type of routing instance that is supported is the virtual switch instance (**set routing-instances *name* instance-type virtual-switch**).
- Only one virtual switch instance is supported with Junos Fusion Enterprise.
- On the aggregation devices in the Junos Fusion Enterprise, you must include the **bgp-peer** configuration statement in the **[edit routing-instances *name* protocols evpn mclag]** hierarchy level. This configuration statement enables the interworking of EVPN-MPLS with Junos Fusion Enterprise on the aggregation devices.
- Address Resolution Protocol (ARP) suppression is not supported.

Aggregation Device (PE1 and PE2) Configuration

To configure aggregation devices PE1 and PE2, perform these tasks.



NOTE: This section focuses on enabling EVPN-MPLS on PE1 and PE2. As a result, the Junos Fusion Enterprise configuration on PE1 and PE2 is performed without the use of the configuration synchronization feature. For information about configuration synchronization, see *Understanding Configuration Synchronization*.

- [PE1: Configuring Junos Fusion Enterprise on page 981](#)
- [PE1: Configuring EVPN-MPLS on page 983](#)
- [PE2: Configuring Junos Fusion Enterprise on page 984](#)
- [PE2: Configuring EVPN-MPLS on page 986](#)

CLI Quick Configuration

PE1: Junos Fusion Enterprise Configuration

```
set interfaces ge-1/1/9 cascade-port
set interfaces ge-1/1/5 cascade-port
set chassis satellite-management fpc 120 cascade-ports ge-1/1/9
set chassis satellite-management cluster Cluster_100_108 cluster-id 2
set chassis satellite-management cluster Cluster_100_108 cascade-ports ge-1/1/5
set chassis satellite-management cluster Cluster_100_108 fpc 100 alias SD100
set chassis satellite-management cluster Cluster_100_108 fpc 100 system-id
  88:e0:f3:1f:3d:50
set chassis satellite-management cluster Cluster_100_108 fpc 108 alias SD108
set chassis satellite-management cluster Cluster_100_108 fpc 108 system-id
  88:e0:f3:1f:c8:d1
set chassis satellite-management cluster Cluster_100_108 fpc 100 member-id 1
set chassis satellite-management cluster Cluster_100_108 fpc 108 member-id 8
set chassis satellite-management upgrade-groups upgrade_120 satellite 120
set chassis satellite-management upgrade-groups upgrade_100 satellite 100
set chassis satellite-management redundancy-groups rg1 redundancy-group-id 2
set chassis satellite-management redundancy-groups chassis-id 1
set chassis satellite-management redundancy-groups rg1 peer-chassis-id 2
  inter-chassis-link ge-1/0/3
set chassis satellite-management redundancy-groups rg1 cluster Cluster_100_108
set interfaces ge-1/0/2 description iccp-link
set interfaces ge-1/0/2 unit 0 family inet address 10.20.20.1/24
set interfaces ge-1/0/3 description icl-link
set interfaces ge-1/0/3 unit 0 family ethernet-switching interface-mode trunk
set interfaces ge-1/0/3 unit 0 family ethernet-switching vlan members 100
set switch-options service-id 1
```

PE1: EVPN-MPLS Configuration

```
set interfaces lo0 unit 0 family inet address 10.25.0.1/32
set interfaces ge-1/1/3 unit 0 family inet address 10.0.1.1/30
set interfaces ge-1/1/3 unit 0 family mpls
set interfaces ge-1/1/7 unit 0 family inet address 10.0.3.1/30
set interfaces ge-1/1/7 unit 0 family mpls
set interfaces ge-108/0/25 unit 0 esi 00:01:02:03:04:00:01:02:04:26
set interfaces ge-108/0/25 unit 0 esi all-active
set interfaces ge-108/0/25 unit 0 family ethernet-switching vlan members v100
```

```

set interfaces ge-108/0/27 unit 0 esi 00:01:02:03:04:00:01:02:04:28
set interfaces ge-108/0/27 unit 0 esi all-active
set interfaces ge-108/0/27 unit 0 family ethernet-switching vlan members v100
set routing-options router-id 10.25.0.1
set routing-options autonomous-system 100
set protocols mpls interface lo0.0
set protocols mpls interface ge-1/1/3.0
set protocols mpls interface ge-1/1/7.0
set protocols bgp local-address 10.25.0.1
set protocols bgp peer-as 100
set protocols bgp local-as 100
set protocols bgp group evpn-mes type internal
set protocols bgp group evpn-mes family evpn signaling
set protocols bgp group evpn-mes peer-as 100
set protocols bgp group evpn-mes neighbor 10.25.0.2
set protocols bgp group evpn-mes neighbor 10.25.0.3
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-1/1/3.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface ge-1/1/7.0
set protocols ldp interface lo0.0
set protocols ldp interface ge-1/1/3.0
set protocols ldp interface ge-1/1/7.0
set routing-instances evpn1 instance-type virtual-switch
set routing-instances evpn1 interface ge-108/0/25.0
set routing-instances evpn1 interface ge-108/0/27.0
set routing-instances evpn1 interface ge-1/0/3.0
set routing-instances evpn1 route-distinguisher 10.25.0.1:1
set routing-instances evpn1 vrf-target target:100:1
set routing-instances evpn1 protocols evpn label-allocation per-instance
set routing-instances evpn1 protocols evpn extended-vlan-list 100
set routing-instances evpn1 protocols evpn mclag bgp-peer 10.25.0.2
set routing-instances evpn1 switch-options service-id 2
set routing-instances evpn1 vlans v100 vlan-id 100

```

PE2: Junos Fusion Enterprise Configuration

```

set interfaces ge-3/1/4 cascade-port
set chassis satellite-management cluster Cluster_100_108 cluster-id 2
set chassis satellite-management cluster Cluster_100_108 cascade-ports ge-3/1/4
set chassis satellite-management cluster Cluster_100_108 fpc 100 alias SD100
set chassis satellite-management cluster Cluster_100_108 fpc 100 system-id
  88:e0:f3:1f:3d:50
set chassis satellite-management cluster Cluster_100_108 fpc 108 alias SD108
set chassis satellite-management cluster Cluster_100_108 fpc 108 system-id
  88:e0:f3:1f:c8:d1
set chassis satellite-management cluster Cluster_100_108 fpc 100 member-id 1
set chassis satellite-management cluster Cluster_100_108 fpc 108 member-id 8
set chassis satellite-management upgrade-groups upgrade_100 satellite 100
set chassis satellite-management redundancy-groups rg1 redundancy-group-id 2
set chassis satellite-management redundancy-groups chassis-id 2
set chassis satellite-management redundancy-groups rg1 peer-chassis-id 1
  inter-chassis-link ge-3/1/9

```

```

set chassis satellite-management redundancy-groups rg1 cluster Cluster_100_108
set interfaces ge-3/1/7 description iccp-link
set interfaces ge-3/1/7 unit 0 family inet address 10.20.20.2/24
set interfaces ge-3/1/9 description icl-link
set interfaces ge-3/1/9 unit 0 family ethernet-switching interface-mode trunk
set interfaces ge-3/1/9 unit 0 family ethernet-switching vlan members 100
set switch-options service-id 1

```

PE2: EVPN-MPLS Configuration

```

set interfaces lo0 unit 0 family inet address 10.25.0.2/32
set interfaces ge-3/1/5 unit 0 family inet address 10.0.4.2/30
set interfaces ge-3/1/5 unit 0 family mpls
set interfaces ge-3/1/8 unit 0 family inet address 10.0.3.2/30
set interfaces ge-3/1/8 unit 0 family mpls
set interfaces irb unit 0 family inet address 10.5.5.1/24 virtual-gateway-address 10.5.5.5
set interfaces ge-108/0/25 unit 0 esi 00:01:02:03:04:00:01:02:04:26
set interfaces ge-108/0/25 unit 0 esi all-active
set interfaces ge-108/0/25 unit 0 family ethernet-switching vlan members v100
set interfaces ge-108/0/27 unit 0 esi 00:01:02:03:04:00:01:02:04:28
set interfaces ge-108/0/27 unit 0 esi all-active
set interfaces ge-108/0/27 unit 0 family ethernet-switching vlan members v100
set routing-options router-id 10.25.0.2
set routing-options autonomous-system 100
set protocols mpls interface lo0.0
set protocols mpls interface ge-3/1/5.0
set protocols mpls interface ge-3/1/8.0
set protocols bgp local-address 10.25.0.2
set protocols bgp peer-as 100
set protocols bgp local-as 100
set protocols bgp group evpn-mes type internal
set protocols bgp group evpn-mes family evpn signaling
set protocols bgp group evpn-mes peer-as 100
set protocols bgp group evpn-mes neighbor 10.25.0.1
set protocols bgp group evpn-mes neighbor 10.25.0.3
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-3/1/5.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface ge-3/1/8.0
set protocols ldp interface lo0.0
set protocols ldp interface ge-3/1/5.0
set protocols ldp interface ge-3/1/8.0
set routing-instances evpn1 instance-type virtual-switch
set routing-instances evpn1 interface ge-108/0/25.0
set routing-instances evpn1 interface ge-108/0/27.0
set routing-instances evpn1 interface ge-3/1/9.0
set routing-instances evpn1 route-distinguisher 10.25.0.2:1
set routing-instances evpn1 vrf-target target:100:1
set routing-instances evpn1 protocols evpn label-allocation per-instance
set routing-instances evpn1 protocols evpn extended-vlan-list 100
set routing-instances evpn1 protocols evpn mclag bgp-peer 10.25.0.1
set routing-instances evpn1 switch-options service-id 2
set routing-instances evpn1 vlans v100 vlan-id 100

```



```
set routing-instances evpn1 vlans v100 l3-interface irb.0
set routing-instances evpn1 vlans v100 no-arp-suppression
```

PE1: Configuring Junos Fusion Enterprise

Step-by-Step Procedure

1. Configure the cascade ports.

```
[edit]
user@switch# set interfaces ge-1/1/9 cascade-port
user@switch# set interfaces ge-1/1/5 cascade-port
```

2. Configure the FPC slot ID for standalone satellite device SD120 and map it to a cascade port.

```
[edit]
user@switch# set chassis satellite-management fpc 120 cascade-ports ge-1/1/9
```

3. Create a satellite device cluster, and assign a name and a cluster ID to it.

```
[edit]
user@switch# set chassis satellite-management cluster Cluster_100_108 cluster-id
2
```

4. Define the cascade ports associated with the satellite device cluster.

```
[edit]
user@switch# set chassis satellite-management cluster Cluster_100_108
cascade-ports ge-1/1/5
user@switch# set chassis satellite-management cluster Cluster_100_108
cascade-ports ge-1/1/9
```

5. Configure the FPC slot ID number, and map it to the MAC address of satellite devices SD100 and SD108, respectively.

```
[edit]
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 100
alias SD100
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 100
system-id 88:e0:f3:1f:3d:50
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 108
alias SD108
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 108
system-id 88:e0:f3:1f:c8:d1
```

6. Assign a member ID to each satellite device in the satellite device cluster.

```
[edit]
```

```

user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 100
member-id 1
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 108
member-id 8

```

7. Create two satellite software upgrade groups—one that includes satellite device SD120 and another that includes satellite device SD100.

```

[edit]
user@switch# set chassis satellite-management upgrade-groups upgrade_120
satellite 120
user@switch# set chassis satellite-management upgrade-groups upgrade_100
satellite 100

```

8. Create and configure a redundancy group, which includes the aggregation devices and satellite devices in Cluster_100_108.

```

[edit]
user@switch# set chassis satellite-management redundancy-groups rg1
redundancy-group-id 2
user@switch# set chassis satellite-management redundancy-groups chassis-id 1
user@switch# set chassis satellite-management redundancy-groups rg1
peer-chassis-id 2 inter-chassis-link ge-1/0/3
user@switch# set chassis satellite-management redundancy-groups rg1 cluster
Cluster_100_108

```

9. Configure the ICL and ICCP links.

```

[edit]
user@switch# set interfaces ge-1/0/2 description iccp-link
user@switch# set interfaces ge-1/0/2 unit 0 family inet address 10.20.20.1/24
user@switch# set interfaces ge-1/0/3 description icl-link
user@switch# set interfaces ge-1/0/3 unit 0 family ethernet-switching
interface-mode trunk
user@switch# set interfaces ge-1/0/3 unit 0 family ethernet-switching vlan members
100
user@switch# set switch-options service-id 1

```



NOTE: While this step shows the configuration of interface ge-1/0/2, which is designated as the ICCP interface, it does not show how to configure the ICCP attributes on interface ge-1/0/2. By default, ICCP is automatically provisioned in a Junos Fusion Enterprise using dual aggregation devices. For more information about the automatic provisioning of ICCP, see [“Configuring or Expanding a Junos Fusion Enterprise” on page 45](#).

PE1: Configuring EVPN-MPLS

Step-by-Step Procedure

1. Configure the loopback interface and the interfaces connected to the other PE devices.

```
[edit]
user@switch# set interfaces lo0 unit 0 family inet address 10.25.0.1/32
user@switch# set interfaces ge-1/1/3 unit 0 family inet address 10.0.1.1/30
user@switch# set interfaces ge-1/1/3 unit 0 family mpls
user@switch# set interfaces ge-1/1/7 unit 0 family inet address 10.0.3.1/30
user@switch# set interfaces ge-1/1/7 unit 0 family mpls
```

2. Configure the extended ports with EVPN multihoming in active-active mode, an ESI, and map the ports to VLAN v100..

```
[edit]
user@switch# set interfaces ge-108/0/25 unit 0 esi 00:01:02:03:04:00:01:02:04:26
user@switch# set interfaces ge-108/0/25 unit 0 esi all-active
user@switch# set interfaces ge-108/0/25 unit 0 family ethernet-switching vlan
members v100
user@switch# set interfaces ge-108/0/27 unit 0 esi 00:01:02:03:04:00:01:02:04:28
user@switch# set interfaces ge-108/0/27 unit 0 esi all-active
user@switch# set interfaces ge-108/0/27 unit 0 family ethernet-switching vlan
members v100
```

3. Assign a router ID and the autonomous system in which PE1, PE2, and PE3 reside.

```
[edit]
user@switch# set routing-options router-id 10.25.0.1
user@switch# set routing-options autonomous-system 100
```

4. Enable MPLS on the loopback interface and interfaces ge-1/1/3.0 and ge-1/1/7.0.

```
[edit]
user@switch# set protocols mpls interface lo0.0
user@switch# set protocols mpls interface ge-1/1/3.0
user@switch# set protocols mpls interface ge-1/1/7.0
```

5. Configure an IBGP overlay that includes PE1, PE2, and PE3.

```
[edit]
user@switch# set protocols bgp local-address 10.25.0.1
user@switch# set protocols bgp peer-as 100
user@switch# set protocols bgp local-as 100
user@switch# set protocols bgp group evpn-mes type internal
user@switch# set protocols bgp group evpn-mes family evpn signaling
user@switch# set protocols bgp group evpn-mes peer-as 100
user@switch# set protocols bgp group evpn-mes neighbor 10.25.0.2
```

```
user@switch# set protocols bgp group evpn-mes neighbor 10.25.0.3
```

6. Configure OSPF as the internal routing protocol for EVPN by specifying an area ID and interfaces on which EVPN-MPLS is enabled.

```
[edit]
user@switch# set protocols ospf traffic-engineering
user@switch# set protocols ospf area 0.0.0.0 interface ge-1/1/3.0
user@switch# set protocols ospf area 0.0.0.0 interface lo0.0
user@switch# set protocols ospf area 0.0.0.0 interface fxp0.0 disable
user@switch# set protocols ospf area 0.0.0.0 interface ge-1/1/7.0
```

7. Configure the Label Distribution Protocol (LDP) on the loopback interface and the interfaces on which EVPN-MPLS is enabled.

```
[edit]
user@switch# set protocols ldp interface lo0.0
user@switch# set protocols ldp interface ge-1/1/3.0
user@switch# set protocols ldp interface ge-1/1/7.0
```

8. Configure a virtual switch routing instance for VLAN v100, and include the interfaces and other entities associated with the VLAN.

```
[edit]
user@switch# set routing-instances evpn1 instance-type virtual-switch
user@switch# set routing-instances evpn1 interface ge-108/0/25.0
user@switch# set routing-instances evpn1 interface ge-108/0/27.0
user@switch# set routing-instances evpn1 interface ge-1/0/3.0
user@switch# set routing-instances evpn1 route-distinguisher 10.25.0.1:1
user@switch# set routing-instances evpn1 vrf-target target:100:1
user@switch# set routing-instances evpn1 protocols evpn label-allocation
    per-instance
user@switch# set routing-instances evpn1 protocols evpn extended-vlan-list 100
user@switch# set routing-instances evpn1 protocols evpn mclag bgp-peer 10.25.0.2
user@switch# set routing-instances evpn1 switch-options service-id 2
user@switch# set routing-instances evpn1 vlans v100 vlan-id 100
```

PE2: Configuring Junos Fusion Enterprise

Step-by-Step Procedure

1. Configure the cascade port.

```
[edit]
user@switch# set interfaces ge-3/1/4 cascade-port
```

2. Create a satellite device cluster, and assign a name and a cluster ID to it.

```
[edit]
```

```
user@switch# set chassis satellite-management cluster Cluster_100_108 cluster-id
2
```

3. Define the cascade port associated with the satellite device cluster.

```
[edit]
user@switch# set chassis satellite-management cluster Cluster_100_108
cascade-ports ge-3/1/4
```

4. Configure the FPC slot ID number, and map it to the MAC address of satellite devices SD100 and SD108, respectively.

```
[edit]
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 100
alias SD100
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 100
system-id 88:e0:f3:1f:3d:50
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 108
alias SD108
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 108
system-id 88:e0:f3:1f:c8:d1
```

5. Assign a member ID to each satellite device in the satellite device cluster.

```
[edit]
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 100
member-id 1
user@switch# set chassis satellite-management cluster Cluster_100_108 fpc 108
member-id 8
```

6. Create a satellite software upgrade group that includes satellite device SD100.

```
[edit]
user@switch# set chassis satellite-management upgrade-groups upgrade_100
satellite 100
```

7. Create and configure a redundancy group, which includes the aggregation devices and satellite devices in Cluster_100_108.

```
[edit]
user@switch# set chassis satellite-management redundancy-groups rg1
redundancy-group-id 2
user@switch# set chassis satellite-management redundancy-groups chassis-id 2
user@switch# set chassis satellite-management redundancy-groups rg1
peer-chassis-id 1 inter-chassis-link ge-3/1/9
user@switch# set chassis satellite-management redundancy-groups rg1 cluster
Cluster_100_108
```

8. Configure the ICL and ICCP links.

```
[edit]
user@switch# set interfaces ge-3/1/7 description iccp-link
user@switch# set interfaces ge-3/1/7 unit 0 family inet address 10.20.20.2/24
user@switch# set interfaces ge-3/1/9 description icl-link
user@switch# set interfaces ge-3/1/9 unit 0 family ethernet-switching
interface-mode trunk
user@switch# set interfaces ge-3/1/9 unit 0 family ethernet-switching vlan members
100
user@switch# set switch-options service-id 1
```



NOTE: While this step shows the configuration of interface ge-3/1/7, which is designated as the ICCP interface, it does not show how to configure the ICCP attributes on interface ge-3/1/7. By default, ICCP is automatically provisioned in a Junos Fusion Enterprise using dual aggregation devices. For more information about the automatic provisioning of ICCP, see [“Configuring or Expanding a Junos Fusion Enterprise” on page 45](#).

PE2: Configuring EVPN-MPLS

Step-by-Step Procedure

1. Configure the loopback interface, the interfaces connected to the other PE devices, and an IRB interface that is also configured as a default Layer 3 gateway.

```
[edit]
user@switch# set interfaces lo0 unit 0 family inet address 10.25.0.2/32
user@switch# set interfaces ge-3/1/5 unit 0 family inet address 10.0.4.2/30
user@switch# set interfaces ge-3/1/5 unit 0 family mpls
user@switch# set interfaces ge-3/1/8 unit 0 family inet address 10.0.3.2/30
user@switch# set interfaces ge-3/1/8 unit 0 family mpls
user@switch# set interfaces irb unit 0 family inet address 10.5.5.1/24
virtual-gateway-address 10.5.5.5
```

2. Configure the extended ports with EVPN multihoming in active-active mode, an ESI, and map the ports to VLAN v100..

```
[edit]
user@switch# set interfaces ge-108/0/25 unit 0 esi 00:01:02:03:04:00:01:02:04:26
user@switch# set interfaces ge-108/0/25 unit 0 esi all-active
user@switch# set interfaces ge-108/0/25 unit 0 family ethernet-switching vlan
members v100
user@switch# set interfaces ge-108/0/27 unit 0 esi 00:01:02:03:04:00:01:02:04:28
user@switch# set interfaces ge-108/0/27 unit 0 esi all-active
user@switch# set interfaces ge-108/0/27 unit 0 family ethernet-switching vlan
members v100
```

3. Assign a router ID and the autonomous system in which PE1, PE2, and PE3 reside.

```
[edit]
user@switch# set routing-options router-id 10.25.0.2
user@switch# set routing-options autonomous-system 100
```

4. Enable MPLS on the loopback interface and interfaces ge-3/1/5.0 and ge-3/1/8.0.

```
[edit]
user@switch# set protocols mpls interface lo0.0
user@switch# set protocols mpls interface ge-3/1/5.0
user@switch# set protocols mpls interface ge-3/1/8.0
```

5. Configure an IBGP overlay that includes PE1, PE2, and PE3.

```
[edit]
user@switch# set protocols bgp local-address 10.25.0.2
user@switch# set protocols bgp peer-as 100
user@switch# set protocols bgp local-as 100
user@switch# set protocols bgp group evpn-mes type internal
user@switch# set protocols bgp group evpn-mes family evpn signaling
user@switch# set protocols bgp group evpn-mes peer-as 100
user@switch# set protocols bgp group evpn-mes neighbor 10.25.0.1
user@switch# set protocols bgp group evpn-mes neighbor 10.25.0.3
```

6. Configure OSPF as the internal routing protocol for EVPN by specifying an area ID and interfaces on which EVPN-MPLS is enabled.

```
[edit]
user@switch# set protocols ospf traffic-engineering
user@switch# set protocols ospf area 0.0.0.0 interface ge-3/1/5.0
user@switch# set protocols ospf area 0.0.0.0 interface lo0.0
user@switch# set protocols ospf area 0.0.0.0 interface fxp0.0 disable
user@switch# set protocols ospf area 0.0.0.0 interface ge-3/1/8.0
```

7. Configure the LDP on the loopback interface and the interfaces on which EVPN-MPLS is enabled.

```
[edit]
user@switch# set protocols ldp interface lo0.0
user@switch# set protocols ldp interface ge-3/1/5.0
user@switch# set protocols ldp interface ge-3/1/8.0
```

8. Configure a virtual switch routing instance for VLAN v100, and include the interfaces and other entities associated with the VLAN.

```
[edit]
user@switch# set routing-instances evpn1 instance-type virtual-switch
```

```

user@switch# set routing-instances evpn1 interface ge-108/0/25.0
user@switch# set routing-instances evpn1 interface ge-108/0/27.0
user@switch# set routing-instances evpn1 interface ge-3/1/9.0
user@switch# set routing-instances evpn1 route-distinguisher 10.25.0.2:1
user@switch# set routing-instances evpn1 vrf-target target:100:1
user@switch# set routing-instances evpn1 protocols evpn label-allocation
per-instance
user@switch# set routing-instances evpn1 protocols evpn extended-vlan-list 100
user@switch# set routing-instances evpn1 protocols evpn mclag bgp-peer 10.25.0.1
user@switch# set routing-instances evpn1 switch-options service-id 2
user@switch# set routing-instances evpn1 vlans v100 vlan-id 100
user@switch# set routing-instances evpn1 vlans v100 l3-interface irb.0
user@switch# set routing-instances evpn1 vlans v100 no-arp-suppression

```

PE3 Configuration

CLI Quick Configuration PE3: EVPN-MPLS Configuration

```

set interfaces lo0 unit 0 family inet address 10.25.0.3/32
set interfaces ge-0/3/5 unit 0 family inet address 10.0.1.2/30
set interfaces ge-0/3/5 unit 0 family mpls
set interfaces ge-0/3/7 unit 0 family inet address 10.0.4.1/30
set interfaces ge-0/3/7 unit 0 family mpls
set interfaces ge-0/0/46 unit 0 esi 00:01:02:03:04:00:01:02:04:12
set interfaces ge-0/0/46 unit 0 esi all-active
set interfaces ge-0/0/46 unit 0 family ethernet-switching vlan members 100
set routing-options router-id 10.25.0.3
set routing-options autonomous-system 100
set routing-options forwarding-table export evpn-pplb
set policy-options policy-statement evpn-pplb from protocol evpn
set policy-options policy-statement evpn-pplb then load-balance per-packet
set protocols mpls interface lo0.0
set protocols mpls interface ge-0/3/5.0
set protocols mpls interface ge-0/3/7.0
set protocols bgp local-address 10.25.0.3
set protocols bgp peer-as 100
set protocols bgp local-as 100
set protocols bgp group evpn-mes type internal
set protocols bgp group evpn-mes family evpn signaling
set protocols bgp group evpn-mes peer-as 100
set protocols bgp group evpn-mes neighbor 10.25.0.2
set protocols bgp group evpn-mes neighbor 10.25.0.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/3/5.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface ge-0/3/7.0
set protocols ldp interface lo0.0
set protocols ldp interface ge-0/3/5.0
set protocols ldp interface ge-0/3/7.0
set routing-instances evpn1 instance-type virtual-switch
set routing-instances evpn1 interface ge-0/0/46.0

```



```

set routing-instances evpn1 route-distinguisher 10.25.0.3:1
set routing-instances evpn1 vrf-target target:100:1
set routing-instances evpn1 protocols evpn label-allocation per-instance
set routing-instances evpn1 protocols evpn extended-vlan-list 100
set routing-instances evpn1 switch-options service-id 2
set routing-instances evpn1 vlans v100 vlan-id 100

```

PE3: Configuring EVPN-MPLS

Step-by-Step Procedure

1. Configure the interfaces on EVPN-MPLS interworking occurs.

```

[edit]
user@switch# set interfaces lo0 unit 0 family inet address 10.25.0.3/32
user@switch# set interfaces ge-0/3/5 unit 0 family inet address 10.0.1.2/30
user@switch# set interfaces ge-0/3/5 unit 0 family mpls
user@switch# set interfaces ge-0/3/7 unit 0 family inet address 10.0.4.1/30
user@switch# set interfaces ge-0/3/7 unit 0 family mpls

```

2. Configure interface ge-0/0/46 with EVPN multihoming in active-active mode, an ESI, and map the ports to VLAN v100..

```

[edit]
user@switch# set interfaces ge-0/0/46 unit 0 esi 00:01:02:03:04:00:01:02:04:12
user@switch# set interfaces ge-0/0/46 unit 0 esi all-active
user@switch# set interfaces ge-0/0/46 unit 0 family ethernet-switching vlan
members 100

```

3. Assign a router ID and the autonomous system in which the PE1, PE2, and PE3 reside.

```

[edit]
user@switch# set routing-options router-id 10.25.0.2
user@switch# set routing-options autonomous-system 100

```

4. Enable per-packet load-balancing for EVPN routes when EVPN multihoming active-active mode is used.

```

[edit]
user@switch# set routing-options forwarding-table export evpn-pplb
user@switch# set policy-options policy-statement evpn-pplb from protocol evpn
user@switch# set policy-options policy-statement evpn-pplb then load-balance
per-packet

```

5. Enable MPLS on the loopback interface and interfaces ge-0/3/5.0 and ge-0/3/7.0.

```

[edit]
user@switch# set protocols mpls interface lo0.0
user@switch# set protocols mpls interface ge-0/3/5.0
user@switch# set protocols mpls interface ge-0/3/7.0

```

6. Configure an IBGP overlay that includes PE1, PE2, and PE3.

```
[edit]
user@switch# set protocols bgp local-address 10.25.0.3
user@switch# set protocols bgp peer-as 100
user@switch# set protocols bgp local-as 100
user@switch# set protocols bgp group evpn-mes type internal
user@switch# set protocols bgp group evpn-mes family evpn signaling
user@switch# set protocols bgp group evpn-mes peer-as 100
user@switch# set protocols bgp group evpn-mes neighbor 10.25.0.2
user@switch# set protocols bgp group evpn-mes neighbor 10.25.0.1
```

7. Configure OSPF as the internal routing protocol for EVPN by specifying an area ID and interfaces on which EVPN-MPLS is enabled.

```
[edit]
user@switch# set protocols ospf traffic-engineering
user@switch# set protocols ospf area 0.0.0.0 interface ge-0/3/5.0
user@switch# set protocols ospf area 0.0.0.0 interface lo0.0
user@switch# set protocols ospf area 0.0.0.0 interface fxp0.0 disable
user@switch# set protocols ospf area 0.0.0.0 interface ge-0/3/7.0
```

8. Configure the LDP on the loopback interface and the interfaces on which EVPN-MPLS is enabled.

```
[edit]
user@switch# set protocols ldp interface lo0.0
user@switch# set protocols ldp interface ge-0/3/5.0
user@switch# set protocols ldp interface ge-0/3/7.0
```

9. Configure a virtual switch routing instance for VLAN v100, and include the interfaces and other entities associated with the VLAN.

```
[edit]
user@switch# set routing-instances evpn1 instance-type virtual-switch
user@switch# set routing-instances evpn1 interface ge-0/0/46.0
user@switch# set routing-instances evpn1 route-distinguisher 10.25.0.3:1
user@switch# set routing-instances evpn1 vrf-target target:100:1
user@switch# set routing-instances evpn1 protocols evpn label-allocation
    per-instance
user@switch# set routing-instances evpn1 protocols evpn extended-vlan-list 100
user@switch# set routing-instances evpn1 switch-options service-id 2
user@switch# set routing-instances evpn1 vlans v100 vlan-id 100
```

Release History Table

Release	Description
19.1R1	Starting with Junos OS Release 19.1R1, the no-arp-suppression configuration statement is no longer supported on any device.

Related
Documentation

- [Understanding EVPN-MPLS Interworking with Junos Fusion Enterprise and MC-LAG on page 969](#)

Storm Control on a Junos Fusion Enterprise

- [Understanding Storm Control on a Junos Fusion Enterprise on page 993](#)

Understanding Storm Control on a Junos Fusion Enterprise

Storm control enables the switch to monitor traffic levels and to drop broadcast, multicast, and unknown unicast packets when a specified traffic level—known as the storm control level or storm control bandwidth—is exceeded, preventing the packets from proliferating and degrading service. As an alternative to having the switch drop packets, you can configure storm control to shut down interfaces or temporarily disable interfaces when the storm control level is exceeded.

Storm control configuration in a Junos Fusion Enterprise is identical for a standalone EX9200 switch. For more information, see [Understanding Storm Control for Managing Traffic Levels on Switching Devices](#).

In a Junos Fusion Enterprise with dual aggregation devices there are special considerations that impact storm control functionality. The following requirements should be understood when configuring storm control for a Junos Fusion Enterprise:

- Broadcast, multicast, and unknown unicast packets received on the extended port of a satellite device can be forwarded to two different aggregation devices, so the storm control profile is applied to the cumulative traffic reaching a particular aggregation device, not the cumulative traffic received on the extended port of the satellite device.
- If the storm control level is exceeded and the resulting action is to shut down the port, the aggregation device which detects the storm brings down the extended port, and the status is synced to the peer aggregation device.
- The shutdown is applied at the physical interface level; in a standalone EX9200 switch, storm control shutdown is applied at the logical interface level.
- Executing the **clear ethernet-switching recovery-timeout** command on one aggregation device also clears the error on the other aggregation device.
- In the event of a shutdown, if the recovery timer is configured, the error is cleared on both aggregation devices when the timer expires.

CHAPTER 20

DHCP Snooping and Port Security on a Junos Fusion Enterprise

- [Understanding Port Security Features on a Junos Fusion Enterprise on page 995](#)

Understanding Port Security Features on a Junos Fusion Enterprise

Port security features help protect the access ports on your device against attacks such as address spoofing (forging) and Layer 2 denial of service. The switching device monitors DHCP messages sent from untrusted hosts and extracts their IP addresses and lease information. This information is used to build and maintain the DHCP snooping database. Only hosts that can be verified using this database are allowed access to the network.

The following port security features are supported in a Junos Fusion Enterprise:

- DHCP snooping
- DHCPv6 snooping
- Dynamic ARP inspection (DAI)
- IP source guard
- IPv6 source guard
- IPv6 neighbor discovery (ND) inspection
- IPv6 router advertisement (RA) guard

Configuration for DHCP snooping and other port security features in a Junos Fusion Enterprise is identical for a standalone EX9200 switch. The range of port security configuration options are beyond the scope of this document. For additional information, see [Configuring Port Security Features](#) and the [Port Security Feature Guide for EX9200 Switches](#).

In a Junos Fusion Enterprise with dual aggregation devices, there are special considerations that impact the DHCP snooping database. The following requirements should be understood when configuring DHCP port security features for a Junos Fusion Enterprise:

- The DHCP snooping database is synchronized across aggregation devices. Synchronization is automatic for all dual-homed clients; there is no manual configuration required to sync the DHCP snooping database.



NOTE: DHCP relay and DHCP server bindings are not synchronized.

- DAI and ND inspection statistics are synchronized on both aggregation devices.
- DHCP port security configuration must match on both aggregation devices, so DHCP port security features should be configured using configuration groups that are applied to both aggregation devices using commit synchronization. See [“Understanding Configuration Synchronization in a Junos Fusion” on page 25](#) and [“Enabling Configuration Synchronization Between Aggregation Devices in a Junos Fusion” on page 77](#).
- Executing the **clear dhcp-security binding** command on one aggregation device also clears the bindings on the other aggregation device.
- DHCP port security features are not supported for single-homed clients in a dual-aggregation device topology, since the DHCP snooping database is synchronized only for dual-homed clients.

CHAPTER 21

MAC Limiting and Persistent MAC Learning on a Junos Fusion Enterprise

- [Understanding MAC Address Limiting and Persistent MAC Learning on a Junos Fusion Enterprise on page 997](#)

Understanding MAC Address Limiting and Persistent MAC Learning on a Junos Fusion Enterprise

MAC limiting enhances port security by limiting the number of MAC addresses that can be learned within a VLAN, which prevents flooding of the Ethernet switching table. You can configure MAC limiting to drop packets or to shut down interfaces when the MAC limit is exceeded.

Persistent MAC learning—also called sticky MAC addresses—enables an interface to retain dynamically learned MAC addresses when the switch is restarted or if the interface goes down and is brought back online, preventing traffic loss for trusted workstations.

MAC limiting and persistent MAC learning configuration in a Junos Fusion Enterprise is identical for a standalone EX9200 switch. For more information on MAC limiting, see [Understanding MAC Limiting](#). For more information on persistent MAC learning, see [Understanding Persistent MAC Learning \(Sticky MAC\)](#).

In a Junos Fusion Enterprise, there are special considerations that impact MAC limiting and persistent MAC learning functionality.

MAC Address Limiting on a Junos Fusion Enterprise

The following actions are possible when the MAC limit is reached on an interface:

- **None**—No impact on functionality of the aggregation device or the satellite device. Traffic is forwarded from the satellite device to the aggregation device.
- **Shutdown**—The extended port on the satellite device is shutdown when the MAC limit is reached on the aggregation device.
- **Drop**—The unlearned source MAC packet is forwarded by the satellite device and dropped on the aggregation device.

The following requirements should be understood when configuring MAC address limiting for a Junos Fusion Enterprise with dual aggregation devices:

- There is the potential for MAC addresses received on an extended port to be forwarded to different aggregation devices. To prevent inconsistency, the learned MAC addresses are synchronized across both aggregation devices. If one aggregation device is not able to install a MAC address due to MAC limiting, that MAC address is deleted from the peer aggregation device.
- For the shutdown action, the shutdown on extended ports is applied at the physical interface level; in a standalone EX9200 switch, MAC limiting shutdown is applied at the logical interface level.
- Executing the **clear ethernet-switching recovery-timeout** command on one aggregation device also clears the error on the other aggregation device.
- In the event of a shutdown, if the recovery timer is configured, the error is cleared on both aggregation devices when the timer expires.

Persistent MAC Learning on a Junos Fusion Enterprise

The following requirements should be understood when configuring persistent MAC learning for a Junos Fusion Enterprise with dual aggregation devices:

- MAC addresses learnt locally or remotely are treated as persistent entries and saved in the persistent file on both aggregation devices.
- Persistent MAC learning cannot be enabled on the ICL interface. This is enforced by commit check.
- When persistent MAC learning is configured on extended ports of a single-homed satellite device, MAC addresses learned locally are learned as persistent addresses, and MAC addresses learned on the peer are learned as remote dynamic addresses.
- Clearing the **persistent-mac** on one aggregation device also deletes the entry from other aggregation device.

If you move a device within your network that has a persistent MAC address entry on the switch, use the **clear ethernet-switching table persistent-mac** command to clear the persistent MAC address entry from the interface. If you move the device and do not clear the persistent MAC address from the original port on which it was learned, then the new port will not learn the MAC address of the device and the device will not be able to connect.

If the original port is down when you move the device, then the new port will learn the MAC address and the device can connect. However, if you do not clear the persistent MAC address on the original port, then when the port restarts, the system reinstalls the persistent MAC address in the forwarding table for that port. If this occurs, the persistent MAC address is removed from the new port and the device loses connectivity.