

# Junos<sup>®</sup> OS

---

## Common Criteria Evaluated Configuration Guide for MX204 and EX9251 Devices

Published  
2019-10-09

Release  
19.2R1

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Junos<sup>®</sup> OS Common Criteria Evaluated Configuration Guide for MX204 and EX9251 Devices*  
19.2R1

Copyright © 2019 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

## YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

## END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

## About the Documentation | vii

Documentation and Release Notes | vii

Documentation Conventions | vii

Documentation Feedback | x

Requesting Technical Support | x

Self-Help Online Tools and Resources | xi

Creating a Service Request with JTAC | xi

1

## Overview

### Understanding the Common Criteria Evaluated Configuration | 15

Understanding Common Criteria | 15

Supported Platforms | 15

### Understanding Junos OS in FIPS Mode | 16

About the Cryptographic Boundary on Your Device | 16

How FIPS Mode Differs from Non-FIPS Mode | 17

Validated Version of Junos OS in FIPS Mode | 17

### Understanding FIPS Terminology and Supported Cryptographic Algorithms | 18

Terminology | 18

Supported Cryptographic Algorithms | 20

### Identifying Secure Product Delivery | 22

### Understanding Management Interfaces | 23

2

## Configuring Roles and Authentication Methods

### Understanding Roles and Services for Junos OS | 27

Security Administrator Role and Responsibilities | 28

FIPS User Role and Responsibilities | 28

What Is Expected of All FIPS Users | 29

## Understanding the Operational Environment for Junos OS in FIPS Mode | 29

Hardware Environment for Junos OS in FIPS Mode | 30

Software Environment for Junos OS in FIPS Mode | 30

Critical Security Parameters | 31

## Understanding Password Specifications and Guidelines for Junos OS in FIPS Mode | 34

## Downloading Software Packages from Juniper Networks | 35

## Installing Software on a MX204 or EX9251 devices with Single Routing Engine | 36

## Understanding Zeroization to Clear System Data for FIPS Mode | 38

Why Zeroize? | 38

When to Zeroize? | 39

## Zeroizing the System | 39

## Enabling FIPS Mode | 40

## Configuring Security Administrator and FIPS User Identification and Access | 42

Configuring Security Administrator Access | 43

Configuring FIPS User Login Access | 44

3

## Configuring Administrative Credentials and Privileges

## Understanding the Associated Password Rules for an Authorized Administrator | 49

## Configuring a Network Device Collaborative Protection Profile Authorized Administrator | 50

4

## Configuring SSH and Console Connection

## Configuring a System Login Message and Announcement | 55

## Configuring SSH on the Evaluated Configuration for NDcPPv2.1 | 56

## Limiting the Number of User Login Attempts for SSH Sessions | 58

5

## Configuring the Remote Syslog Server

## Syslog Server Configuration on a Linux System | 63

Configuring Event Logging to a Local File | 63

Configuring Event Logging to a Remote Server | 63

Configuring Event Logging to a Remote Server when Initiating the Connection from the Remote Server | 64

6

## Configuring Audit Log Options

Configuring Audit Log Options in the Evaluated Configuration | 73

Configuring Audit Log Options for MX204 and EX9251 Devices | 73

Sample Code Audits of Configuration Changes | 74

7

## Configuring Event Logging

Event Logging Overview | 81

Configuring Event Logging to a Local File | 82

Interpreting Event Messages | 82

Logging Changes to Secret Data | 84

Login and Logout Events Using SSH | 85

Logging of Audit Startup | 85

8

## Performing Self-Tests on a Device

Understanding FIPS Self-Tests | 89

9

## Operational Commands

request system zeroize | 95

request vmhost zeroize no-forwarding | 97

# About the Documentation

## IN THIS SECTION

- Documentation and Release Notes | vii
- Documentation Conventions | vii
- Documentation Feedback | x
- Requesting Technical Support | x

Use this guide to configure and evaluate MX204 and EX9251 devices for Common Criteria (CC) compliance. Common Criteria for information technology is an international agreement signed by several countries that permit the evaluation of security products against a common set of standards.

## Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

## Documentation Conventions

[Table 1 on page viii](#) defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page viii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b>  No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
<b>Text like this</b>	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit <b>protocols ospf area area-id</b>] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub</b> <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast   multicast</b>  ( <i>string1</i>   <i>string2</i>   <i>string3</i> )
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members [ community-ids ]</b>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
; (semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

## GUI Conventions




Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

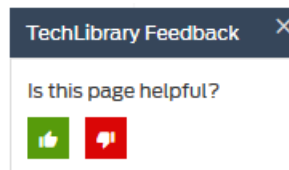

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

## Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.

# 1

CHAPTER

## Overview

---

Understanding the Common Criteria Evaluated Configuration | 15

Understanding Junos OS in FIPS Mode | 16

Understanding FIPS Terminology and Supported Cryptographic Algorithms | 18

Identifying Secure Product Delivery | 22

Understanding Management Interfaces | 23

---



# Understanding the Common Criteria Evaluated Configuration

This document describes the steps required to duplicate the configuration of the device running Junos OS when the device is evaluated. This is referred to as the evaluated configuration. The following list describes the standards to which the device has been evaluated:

- NDcPPv2.1—[https://www.commoncriteriaportal.org/files/ppfiles/CPP\\_ND\\_V2.1.pdf](https://www.commoncriteriaportal.org/files/ppfiles/CPP_ND_V2.1.pdf)

The Archived Protection Profiles documents are available at <https://www.niap-ccevs.org/Profile/PP.cfm?archived=1>.

**NOTE:** On MX204 and EX9251 devices, Junos OS Release 19.2R1 is certified for Common Criteria with FIPS mode enabled on the devices.

For regulatory compliance information about Common Criteria for Juniper Networks products, see the [Juniper Networks Compliance Advisor](#).

## Understanding Common Criteria

Common Criteria for information technology is an international agreement signed by 30 countries that permits the evaluation of security products against a common set of standards. In the Common Criteria Recognition Arrangement (CCRA) at <https://www.commoncriteriaportal.org/ccra/>, the participants agree to mutually recognize evaluations of products performed in other countries. All evaluations are performed using a common methodology for information technology security evaluation.

For more information on Common Criteria, see <https://www.commoncriteriaportal.org/>.

Target of Evaluation (TOE) is a device or system subjected to evaluation based on Collaborative Protection Profile (cPP).

## Supported Platforms

For the features described in this document, the following platforms are supported to qualify NDcPPv2.1:

- MX204 and EX9251 devices.

## RELATED DOCUMENTATION

Identifying Secure Product Delivery | 22

# Understanding Junos OS in FIPS Mode

## IN THIS SECTION

- [About the Cryptographic Boundary on Your Device | 16](#)
- [How FIPS Mode Differs from Non-FIPS Mode | 17](#)
- [Validated Version of Junos OS in FIPS Mode | 17](#)

Federal Information Processing Standards (FIPS) 140-2 defines security levels for hardware and software that perform cryptographic functions. The Juniper Networks MX204 or EX9251 devices running the Juniper Networks Junos operating system (Junos OS) in *FIPS mode* comply with the FIPS 140-2 Level 1 standard.

Operating MX204 or EX9251 devices in a FIPS 140-2 Level 1 environment requires enabling and configuring FIPS mode on the devices from the Junos OS command-line interface (CLI).

The *Security Administrator* enables FIPS mode in Junos OS Release 19.2R1 and sets up keys and passwords for the system and other *FIPS users*.

## About the Cryptographic Boundary on Your Device

FIPS 140-2 compliance requires a defined *cryptographic boundary* around each *cryptographic module* on a device. Junos OS in FIPS mode prevents the cryptographic module from executing any software that is not part of the FIPS-certified distribution, and allows only FIPS-approved cryptographic algorithms to be used. No critical security parameters (CSPs), such as passwords and keys, can cross the cryptographic boundary of the module unencrypted, for example, being displayed on a console or written to an external log file.



**CAUTION:** Virtual Chassis features are not supported in FIPS mode. Do not configure a Virtual Chassis in FIPS mode.

## How FIPS Mode Differs from Non-FIPS Mode

Junos OS in FIPS mode differs in the following ways from Junos OS in non-FIPS mode:

- Self-tests of all cryptographic algorithms are performed at startup.
- Self-tests of random number and key generation are performed continuously.
- Weak cryptographic algorithms such as Data Encryption Standard (DES) and MD5 are disabled.
- Weak or unencrypted management connections must not be configured.
- Passwords must be encrypted with strong one-way algorithms that do not permit decryption.
- Administrator passwords must be at least 10 characters long.

## Validated Version of Junos OS in FIPS Mode

To determine whether a Junos OS release is NIST-validated, see the compliance page on the Juniper Networks Web site (<https://apps.juniper.net/compliance/>).

### RELATED DOCUMENTATION

Identifying Secure Product Delivery | 22

# Understanding FIPS Terminology and Supported Cryptographic Algorithms

## IN THIS SECTION

- Terminology | 18
- Supported Cryptographic Algorithms | 20

Use the definitions of FIPS terms, and supported algorithms to help you understand Junos OS in FIPS mode.

## Terminology

**Common Criteria**—Common Criteria for information technology is an international agreement signed by 30 countries that permits the evaluation of security products against a common set of standards.

**Critical security parameter (CSP)**—Security-related information—for example, secret and private cryptographic keys and authentication data such as passwords and personal identification numbers (PINs)—whose disclosure or modification can compromise the security of a cryptographic module or the information it protects. For details, see *Understanding the Operational Environment for Junos OS in FIPS Mode*.

**Cryptographic module**—The set of hardware, software, and firmware that implements approved security functions (including cryptographic algorithms and key generation) and is contained within the cryptographic boundary. MX204 and EX9251 devices are certified at FIPS 140-2 Level 1. For fixed-configuration devices, the cryptographic module is the device case. For modular devices, the cryptographic module is the Routing Engine.

**ESP**—Encapsulating Security Payload (ESP) protocol. The part of the IPsec protocol that guarantees the confidentiality of packets through encryption. The protocol ensures that if an ESP packet is successfully decrypted, and no other party knows the secret key the peers share, the packet was not wiretapped in transit.

**FIPS**—Federal Information Processing Standards. FIPS 140-2 specifies requirements for security and cryptographic modules. Junos OS in FIPS mode complies with FIPS 140-2 Level 1.



**FIPS maintenance role**—The role the Security Administrator assumes to perform physical maintenance or logical maintenance services such as hardware or software diagnostics. For FIPS 140-2 compliance, the Security Administrator zeroizes the Routing Engine on entry to and exit from the FIPS maintenance role to erase all plain-text secret and private keys and unprotected CSPs.

**NOTE:** The FIPS maintenance role is not supported on Junos OS in FIPS mode.

**Hashing**—A message authentication method that applies a cryptographic technique iteratively to a message of arbitrary length and produces a hash *message digest* or *signature* of fixed length that is appended to the message when sent.

**IKE**—The Internet Key Exchange (IKE) is part of IPsec and provides ways to securely negotiate the shared private keys that the authentication header (AH) and ESP portions of IPsec need to function properly. IKE employs Diffie-Hellman key-exchange methods and is optional in IPsec. (The shared keys can be entered manually at the endpoints.)

**KATs**—Known answer tests. System self-tests that validate the output of cryptographic algorithms approved for FIPS and test the integrity of some Junos OS modules. For details, see [“Understanding FIPS Self-Tests” on page 89](#).

**NDcPPv2.1**—Collaborative Protection Profile for Network Devices.

**SA**—Security association (SA). A connection between hosts that allows them to communicate securely by defining, for example, how they exchange private keys. As Security Administrator, you must manually configure an internal SA on devices running Junos OS in FIPS mode. All values, including the keys, must be statically specified in the configuration. On devices with more than one Routing Engine, the configuration must match on both ends of the connection between the Routing Engines. For communication to take place, each Routing Engine must have the same configured options, which need no negotiation and do not expire.

**Security Administrator**—For Common Criteria, user accounts in the TOE have the following attributes: user identity (user name), authentication data (password), and role (privilege). The Security Administrator is associated with the defined login class “security-admin”, which has the necessary permission set to permit the administrator to perform all tasks necessary to manage the Junos OS.

**SPI**—Security parameter index (SPI). A numeric identifier used with the destination address and security protocol in IPsec to identify an SA. Because you manually configure the SA for Junos OS in FIPS mode, the SPI must be entered as a parameter rather than derived randomly.

**SSH**—A protocol that uses strong authentication and encryption for remote access across a nonsecure network. SSH provides remote login, remote program execution, file copy, and other functions. It is intended as a secure replacement for **rlogin**, **rsh**, and **rcp** in a UNIX environment. To secure the

information sent over administrative connections, use SSHv2 for CLI configuration. In Junos OS, SSHv2 is enabled by default, and SSHv1, which is not considered secure, is disabled.

**Zeroization**—Erasure of all CSPs and other user-created data on a device before its operation as a FIPS cryptographic module—or in preparation for repurposing the devices for non-FIPS operation. The Security Administrator can zeroize the system with a CLI operational command.

## Supported Cryptographic Algorithms

**BEST PRACTICE:** For FIPS 140-2 compliance, use only FIPS-approved cryptographic algorithms in Junos OS in FIPS mode.

The following cryptographic algorithms are supported in FIPS mode. Symmetric methods use the same key for encryption and decryption, while asymmetric methods use different keys for encryption and decryption.

**AES**—The Advanced Encryption Standard (AES), defined in FIPS PUB 197. The AES algorithm uses keys of 128, 192, or 256 bits to encrypt and decrypt data in blocks of 128 bits.

**ECDH**—Elliptic Curve Diffie-Hellman. A variant of the Diffie-Hellman key exchange algorithm that uses cryptography based on the algebraic structure of elliptic curves over finite fields. ECDH allows two parties, each having an elliptic curve public-private key pair, to establish a shared secret over an insecure channel. The shared secret can be used either as a key or to derive another key for encrypting subsequent communications using a symmetric key cipher.

**ECDSA**—Elliptic Curve Digital Signature Algorithm. A variant of the Digital Signature Algorithm (DSA) that uses cryptography based on the algebraic structure of elliptic curves over finite fields. The bit size of the elliptic curve determines the difficulty of decrypting the key. The public key believed to be needed for ECDSA is about twice the size of the security level, in bits. ECDSA using the P-256, P-384, and P-521 curves can be configured under OpenSSH.

**HMAC**—Defined as “Keyed-Hashing for Message Authentication” in RFC 2104, HMAC combines hashing algorithms with cryptographic keys for message authentication. For Junos OS in FIPS mode, HMAC uses the iterated cryptographic hash functions SHA-1, SHA-256, and SHA-512 along with a secret key.

**SHA-256 and SHA-512**—Secure hash algorithms (SHA) belonging to the SHA-2 standard defined in FIPS PUB 180-2. Developed by NIST, SHA-256 produces a 256-bit hash digest, and SHA-512 produces a 512-bit hash digest.

**3DES (3des-cbc)**—Encryption standard based on the original Data Encryption Standard (DES) from the 1970s that used a 56-bit key and was cracked in 1997. The more secure 3DES is DES enhanced with three multiple stages and effective key lengths of about 112 bits. For Junos OS in FIPS mode, 3DES is implemented with cipher block chaining (CBC).

**NOTE:** 3DES is supported only in FIPS.

#### RELATED DOCUMENTATION

[Understanding FIPS Self-Tests | 89](#)

[Understanding Zeroization to Clear System Data for FIPS Mode | 38](#)

# Identifying Secure Product Delivery

There are several mechanisms provided in the delivery process to ensure that a customer receives a product that has not been tampered with. The customer should perform the following checks upon receipt of a device to verify the integrity of the platform.

- Shipping label—Ensure that the shipping label correctly identifies the correct customer name and address as well as the device.
- Outside packaging—Inspect the outside shipping box and tape. Ensure that the shipping tape has not been cut or otherwise compromised. Ensure that the box has not been cut or damaged to allow access to the device.
- Inside packaging—Inspect the plastic bag and seal. Ensure that the bag is not cut or removed. Ensure that the seal remains intact.

If the customer identifies a problem during the inspection, he or she should immediately contact the supplier. Provide the order number, tracking number, and a description of the identified problem to the supplier.

Additionally, there are several checks that can be performed to ensure that the customer has received a box sent by Juniper Networks and not a different company masquerading as Juniper Networks. The customer should perform the following checks upon receipt of a device to verify the authenticity of the device:

- Verify that the device was ordered using a purchase order. Juniper Networks devices are never shipped without a purchase order.
- When a device is shipped, a shipment notification is sent to the e-mail address provided by the customer when the order is taken. Verify that this e-mail notification was received. Verify that the e-mail contains the following information:
  - Purchase order number
  - Juniper Networks order number used to track the shipment
  - Carrier tracking number used to track the shipment
  - List of items shipped including serial numbers
  - Address and contacts of both the supplier and the customer
- Verify that the shipment was initiated by Juniper Networks. To verify that a shipment was initiated by Juniper Networks, you should perform the following tasks:
  - Compare the carrier tracking number of the Juniper Networks order number listed in the Juniper Networks shipping notification with the tracking number on the package received.

- Log on to the Juniper Networks online customer support portal at <https://support.juniper.net/support/> to view the order status. Compare the carrier tracking number or the Juniper Networks order number listed in the Juniper Networks shipment notification with the tracking number on the package received.

## Understanding Management Interfaces

The following management interfaces can be used in the evaluated configuration:

- Local Management Interfaces—The RJ-45 console port on the device is configured as RS-232 data terminal equipment (DTE). You can use the command-line interface (CLI) over this port to configure the device from a terminal.
- Remote Management Protocols—The device can be remotely managed over any Ethernet interface. SSHv2 is the only permitted remote management protocol that can be used in the evaluated configuration. The remote management protocols J-Web and Telnet are not available for use on the device.

# 2

CHAPTER

## Configuring Roles and Authentication Methods

---

Understanding Roles and Services for Junos OS | 27

Understanding the Operational Environment for Junos OS in FIPS Mode | 29

Understanding Password Specifications and Guidelines for Junos OS in FIPS Mode | 34

Downloading Software Packages from Juniper Networks | 35

Installing Software on a MX204 or EX9251 devices with Single Routing Engine | 36

Understanding Zeroization to Clear System Data for FIPS Mode | 38

Zeroizing the System | 39

Enabling FIPS Mode | 40

Configuring Security Administrator and FIPS User Identification and Access | 42

---



# Understanding Roles and Services for Junos OS

## IN THIS SECTION

- [Security Administrator Role and Responsibilities | 28](#)
- [FIPS User Role and Responsibilities | 28](#)
- [What Is Expected of All FIPS Users | 29](#)

The Security Administrator is associated with the defined login class “security-admin”, which has the necessary permission set to permit the administrator to perform all tasks necessary to manage Junos OS. Administrative users (Security Administrator) must provide unique identification and authentication data before any administrative access to the system is granted.

Security Administrator roles and responsibilities are as follows:

1. Security Administrator can administer locally and remotely.
2. Create, modify, delete administrator accounts, including configuration of authentication failure parameters.
3. Re-enable an Administrator account.
4. Responsible for the configuration and maintenance of cryptographic elements related to the establishment of secure connections to and from the evaluated product.

The Juniper Networks Junos operating system (Junos OS) running in non-FIPS mode allows a wide range of capabilities for users, and authentication is identity-based. In contrast, the FIPS 140-2 standard defines two user roles: *Security Administrator* and *FIPS user*. These roles are defined in terms of Junos OS user capabilities.

All other user types defined for Junos OS in FIPS mode (operator, administrative user, and so on) must fall into one of the two categories: Security Administrator or FIPS user. For this reason, user authentication in FIPS mode is role-based rather than identity-based.

Security Administrator performs all FIPS-mode-related configuration tasks and issue all statements and commands for Junos OS in FIPS mode. Security Administrator and FIPS user configurations must follow the guidelines for Junos OS in FIPS mode.



## Security Administrator Role and Responsibilities

The Security Administrator is the person responsible for enabling, configuring, monitoring, and maintaining Junos OS in FIPS mode on a device. The Security Administrator securely installs Junos OS on the device, enables FIPS mode, establishes keys and passwords for other users and software modules, and initializes the device before network connection.

**BEST PRACTICE:** We recommend that the Security Administrator administer the system in a secure manner by keeping passwords secure and checking audit files.

The permissions that distinguish the Security Administrator from other FIPS users are **secret**, **security**, **maintenance**, and **control**. For FIPS compliance, assign the Security Administrator to a login class that contains all of these permissions. A user with the Junos OS maintenance permission can read files containing critical security parameters (CSPs).

**NOTE:** Junos OS in FIPS mode does not support the *FIPS 140-2 maintenance role*, which is different from the Junos OS maintenance permission.

Among the tasks related to Junos OS in FIPS mode, the Security Administrator is expected to:

- Set the initial root password. The length of the password should be at least 10 characters.
- Reset user passwords with FIPS-approved algorithms.
- Examine log and audit files for events of interest.
- Erase user-generated files, keys, and data by zeroizing the device.

## FIPS User Role and Responsibilities

All FIPS users, including the Security Administrator, can view the configuration. Only the user assigned as the Security Administrator can modify the configuration.

FIPS user can view status output but cannot reboot or zeroize the device.

## What Is Expected of All FIPS Users

All FIPS users, including the Security Administrator, must observe security guidelines at all times.

All FIPS users must:

- Keep all passwords confidential.
- Store devices and documentation in a secure area.
- Deploy devices in secure areas.
- Check audit files periodically.
- Conform to all other FIPS 140-2 security rules.
- Follow these guidelines:
  - Users are trusted.
  - Users abide by all security guidelines.
  - Users do not deliberately compromise security.
  - Users behave responsibly at all times.

### RELATED DOCUMENTATION

[Zeroizing the System](#) | 39

# Understanding the Operational Environment for Junos OS in FIPS Mode

## IN THIS SECTION

- [Hardware Environment for Junos OS in FIPS Mode](#) | 30
- [Software Environment for Junos OS in FIPS Mode](#) | 30
- [Critical Security Parameters](#) | 31

A Juniper Networks device running the Juniper Networks Junos operating system (Junos OS) in FIPS mode forms a special type of hardware and software operational environment that is different from the environment of a device in non-FIPS mode:

## Hardware Environment for Junos OS in FIPS Mode

Junos OS in FIPS mode establishes a cryptographic boundary in the device that no critical security parameters (CSPs) can cross using plain text. Each hardware component of the device that requires a cryptographic boundary for FIPS 140-2 compliance is a separate cryptographic module. There are two types of hardware with cryptographic boundaries in Junos OS in FIPS mode: one for each Routing Engine and one for entire chassis. Each component forms a separate cryptographic module. Communications involving CSPs between these secure environments must take place using encryption.

Cryptographic methods are not a substitute for physical security. The hardware must be located in a secure physical environment. Users of all types must not reveal keys or passwords, or allow written records or notes to be seen by unauthorized personnel.

## Software Environment for Junos OS in FIPS Mode

A Juniper Networks device running Junos OS in FIPS mode forms a special type of nonmodifiable operational environment. To achieve this environment on the device, the system prevents the execution of any binary file that was not part of the certified Junos OS in FIPS mode distribution. When a device is in FIPS mode, it can run only Junos OS.

FIPS mode on MX204 and EX9251 devices is available in Junos OS. The Junos OS in FIPS mode software environment is established after the Security Administrator successfully enables FIPS mode on a device. The Junos OS Release 19.2R1 image that includes FIPS mode is available on the Juniper Networks website and can be installed on a functioning device.

For FIPS 140-2 compliance, we recommend that you delete all user-created files and data by *zeroizing* the device before enabling FIPS mode.

Enabling FIPS mode disables many of the usual Junos OS protocols and services. In particular, you cannot configure the following services in Junos OS in FIPS mode:

- finger
- ftp
- rlogin
- telnet

- tftp
- xnm-clear-text

Attempts to configure these services, or load configurations with these services configured, result in a configuration syntax error.

You can use only SSH as a remote access service.

All passwords established for users after upgrading to Junos OS in FIPS mode must conform to Junos OS in FIPS mode specifications. Passwords must be between 10 and 20 characters in length and require the use of at least three of the five defined character sets (uppercase and lowercase letters, digits, punctuation marks, and keyboard characters, such as % and &, not included in the other four categories). Attempts to configure passwords that do not conform to these rules result in an error. All passwords and keys used to authenticate peers must be at least 10 characters in length, and in some cases the length must match the digest size.

**NOTE:** Do not attach the device to a network until the Security Administrator completes configuration from the local console connection.

For strict compliance, do not examine core and crash dump information on the local console in Junos OS in FIPS mode because some CSPs might be shown in plain text.

## Critical Security Parameters

Critical security parameters (CSPs) are security-related information such as cryptographic keys and passwords that can compromise the security of the cryptographic module or the security of the information protected by the module if they are disclosed or modified.

Zeroization of the system erases all traces of CSPs in preparation for operating the device or Routing Engine as a cryptographic module.

Table 3 on page 31 lists CSPs on the devices running Junos OS.

Table 3: Critical Security Parameters

CSP	Description	Zeroize	Use
SSH-2 private host key	ECDSA / RSA key used to identify the host, generated the first time SSH is configured.	Zeroize command.	Used to identify the host.

Table 3: Critical Security Parameters (continued)

CSP	Description	Zeroize	Use
SSH-2 session keys	<p>Session key used with SSH-2. and as a Diffie-Hellman private key.</p> <p>Encryption: AES-128, AES-256.</p> <p>MACs: HMAC-SHA-1, HMAC-SHA-2-256, HMAC-SHA2-512.</p> <p>Key exchange: ECDH-sha2-nistp256, ECDH-sha2-nistp384, and ECDH-sha2-nistp521.</p>	Power cycle and terminate session.	Symmetric key used to encrypt data between host and client.
User authentication key	Hash of the user's password: SHA256, SHA512.	Zeroize command.	Used to authenticate a user to the cryptographic module.
Security Administrator authentication key	Hash of the Security Administrator's password: SHA256, SHA512.	Zeroize command.	Used to authenticate the Security Administrator to the cryptographic module.
HMAC DRBG seed	Seed for deterministic random bit generator (DRBG).	Seed is not stored by the cryptographic module.	Used for seeding DRBG.
HMAC DRBG V value	The value (V) of output block length (outlen) in bits, which is updated each time another outlen bits of outputs are produced.	Power cycle.	A critical value of the internal state of DRBG.
HMAC DRBG key value	The current value of the outlen-bit key, which is updated at least once each time that the DRBG mechanism generates pseudorandom bits.	Power cycle.	A critical value of the internal state of DRBG.
NDRNG entropy	Used as entropy input string to the HMAC DRBG.	Power cycle.	A critical value of the internal state of DRBG.

In Junos OS in FIPS mode, all CSPs must enter and leave the cryptographic module in encrypted form. Any CSP encrypted with a non-approved algorithm is considered plain text by FIPS.

**BEST PRACTICE:** For FIPS compliance, configure the device over SSH connections because they are encrypted connections.

Local passwords are hashed with the SHA256 or SHA512 algorithm. Password recovery is not possible in Junos OS in FIPS mode. Junos OS in FIPS mode cannot boot into single-user mode without the correct root password.

#### RELATED DOCUMENTATION

[Understanding Password Specifications and Guidelines for Junos OS in FIPS Mode | 34](#)

[Understanding Zeroization to Clear System Data for FIPS Mode | 38](#)

# Understanding Password Specifications and Guidelines for Junos OS in FIPS Mode

All passwords established for users by the Security Administrator must conform to the following Junos OS in FIPS mode requirements. Attempts to configure passwords that do not conform to the following specifications result in an error.

- **Length.** Passwords must contain between 10 and 20 characters.
- **Character set requirements.** Passwords must contain at least three of the following five defined character sets:
  - Uppercase letters
  - Lowercase letters
  - Digits
  - Punctuation marks
  - Keyboard characters not included in the other four sets—such as the percent sign (%) and the ampersand (&)
- **Authentication requirements.** All passwords and keys used to authenticate peers must contain at least 10 characters, and in some cases the number of characters must match the digest size.
- **Password encryption.** To change the default encryption method (SHA512) include the **format** statement at the **[edit system login password]** hierarchy level.

**Guidelines for strong passwords.** Strong, reusable passwords can be based on letters from a favorite phrase or word and then concatenated with other unrelated words, along with added digits and punctuation. In general, a strong password is:

- Easy to remember so that users are not tempted to write it down.
- Made up of mixed alphanumeric characters and punctuation. For FIPS compliance include at least one change of case, one or more digits, and one or more punctuation marks.
- Changed periodically.
- Not divulged to anyone.

**Characteristics of weak passwords.** Do not use the following weak passwords:

- Words that might be found in or exist as a permuted form in a system files such as **/etc/passwd**.
- The hostname of the system (always a first guess).

- Any word or phrase that appears in a dictionary or other well-known source, including dictionaries and thesauruses in languages other than English; works by classical or popular writers; or common words and phrases from sports, sayings, movies or television shows.
- Permutations on any of the above—for example, a dictionary word with letters replaced with digits (**r00t**) or with digits added to the end.
- Any machine-generated password. Algorithms reduce the search space of password-guessing programs and so must not be used.

#### RELATED DOCUMENTATION

Understanding the Operational Environment for Junos OS in FIPS Mode | 29

## Downloading Software Packages from Juniper Networks

You can download the following Junos OS software packages from the Juniper Networks website:

- Junos OS for MX and EX Series devices, Release 19.2R1

**NOTE:** For MX204, download **junos-vmhost-install-mx-x86-64-19.2R1.tgz**.

For EX9251, download **junos-vmhost-install-ex92xx-x86-64-19.2R1.tgz**.

Before you begin to download the software, ensure that you have a Juniper Networks Web account and a valid support contract. To obtain an account, complete the registration form at the Juniper Networks website: <https://userregistration.juniper.net/entitlement/setupAccountInfo.do>.

To download software packages from Juniper Networks:

1. Using a Web browser, follow the links to the download URL on the Juniper Networks webpage.  
<https://support.juniper.net/support/downloads/>.
2. Log in to the Juniper Networks authentication system using the username (generally your e-mail address) and password supplied by Juniper Networks representatives.
3. Download the software. See [Downloading Software](#).



## RELATED DOCUMENTATION

[Installation and Upgrade Guide](#)

## Installing Software on a MX204 or EX9251 devices with Single Routing Engine

You can use this procedure to upgrade Junos OS on device with a single Routing Engine.

To install software upgrades on a device with a single Routing Engine:

1. Download the software package as described in [“Downloading Software Packages from Juniper Networks” on page 35](#).
2. If you have not already done so, connect to the console port on the device from your management device, and log in to the Junos OS CLI.
3. (Optional) Back up the current software configuration to a second storage option. See the [Junos OS Installation and Upgrade Guide](#) for instructions on performing this task.
4. (Optional) Copy the software package to the device. We recommend that you use FTP to copy the file to the `/var/tmp/` directory.

This step is optional because Junos OS can also be upgraded when the software image is stored at a remote location. These instructions describe the software upgrade process for both scenarios.

5. Install the new package on the MX device:

```
user@host> request vmhost software add <package>
```

Replace **package** with one of the following paths:

- For a software package in a local directory on the device, use `/var/tmp/package.tgz`.
- For a software package on a remote server, use one of the following paths, replacing *package* with the software package name—for example, `junos-vmhost-install-mx-x86-64-19.2R1.tgz`.
  - `ftp://hostname/pathname/package.tgz`
  - `http://hostname/pathname/package.tgz`

6. Reboot the device to load the installation:

```
user@host> request vmhost reboot
```

**NOTE:** The **set system fips chassis level 1** command should to be added in FIPS mode for the line card to come up.

7. After the reboot has completed, log in and use the **show version** command to verify that the new version of the software is successfully installed. If you installed the Junos FIPS mode package, verify that the FIPS mode utilities are present—as shown in the following example:

```
user@host> show version
Model: mx204 Junos: 19.2R1
JUNOS Base OS boot [19.2R1]
JUNOS Base OS Software Suite [19.2R1] JUNOS Crypto Software Suite [19.2R1]
JUNOS Packet Forwarding Engine Support (TRIO) [19.2R1] JUNOS Web Management
[19.2R1]
JUNOS Online Documentation [19.2R1]
JUNOS SDN Software Suite [19.2R1]
JUNOS Services Application Level Gateways [19.2R1] JUNOS Services COS [19.2R1]
JUNOS Services Jflow Container package [19.2R1] JUNOS Services Stateful Firewall
[19.2R1]
JUNOS Services NAT [19.2R1] JUNOS Services RPM [19.2R1]
JUNOS Services Captive Portal and Content Delivery Container package [19.2R1]
JUNOS Macsec Software Suite [19.2R1] JUNOS Services Crypto [19.2R1]
JUNOS Services IPSec [19.2R1]
JUNOS DP Crypto Software Software Suite [19.2R1] JUNOS py-base-powerpc [19.2R1]
JUNOS py-extensions-powerpc [19.2R1] JUNOS jsd [powerpc-19.2R1-jet-1] JUNOS Kernel
Software Suite [19.2R1] JUNOS Routing Software Suite [19.2R1] JUNOS FIPS mode
utilities [19.2R1]
JUNOS Packet Forwarding Engine FIPS Support [19.2R1] JUNOS FIPS op test utilities
[19.2R1]
```

## RELATED DOCUMENTATION

[Troubleshooting Software Installation](#)

[Understanding Software Installation on EX Series Switches](#)

# Understanding Zeroization to Clear System Data for FIPS Mode

## IN THIS SECTION

- [Why Zeroize? | 38](#)
- [When to Zeroize? | 39](#)

Zeroization completely erases all configuration information on the Routing Engines, including all plain-text passwords, secrets, and private keys for SSH, local encryption, local authentication, and IPsec.

For MX204 and EX9521 devices, Security Administrator initiates the zeroization process by entering the **request vmhost zeroize no-forwarding** operational command.



**CAUTION:** Perform system zeroization with care. After the zeroization process is complete, no data is left on the Routing Engine. The device is returned to the factory default state, without any configured users or configuration files.

Zeroization can be time-consuming. Although all configurations are removed in a few seconds, the zeroization process goes on to overwrite all media, which can take considerable time depending on the size of the media.

## Why Zeroize?

Your device is not considered a valid FIPS cryptographic module until all critical security parameters (CSPs) have been entered—or reentered—while the device is in FIPS mode.

For FIPS 140-2 compliance, you must zeroize the system to remove sensitive information before disabling FIPS mode on the device.

## When to Zeroize?

As Security Administrator, perform zeroization in the following situations:

- **Before enabling FIPS mode of operation:** To prepare your device for operation as a FIPS cryptographic module, perform zeroization before enabling FIPS mode and before FIPS operation.
- **Before disabling FIPS mode of operation:** To begin repurposing your device for non-FIPS operation, perform zeroization before disabling FIPS mode on the device.

**NOTE:** Juniper Networks does not support installing non-FIPS software in a FIPS environment, but doing so might be necessary in certain test environments. Be sure to zeroize the system first.

### RELATED DOCUMENTATION

[Zeroizing the System | 39](#)

## Zeroizing the System

To zeroize your device, follow the below procedure:

1. From the CLI, enter

```
root@device> request vmhost zeroize no-forwarding
VMHost Zeroization : Erase all data, including configuration and log files ?
[yes,no] (no) yes

re0:
```

2. To initiate the zeroization process, type **yes** at the prompt:

```
Erase all data, including configuration and log files?  [yes, no] (no)
yes
re0:
-----
warning: zeroizing re0
```

...

...

The entire operation can take considerable time depending on the size of the media, but all critical security parameters (CSPs) are removed within a few seconds. The physical environment must remain secure until the zeroization process is complete.

## RELATED DOCUMENTATION

[Enabling FIPS Mode | 40](#)

[Understanding Zeroization to Clear System Data for FIPS Mode | 38](#)

# Enabling FIPS Mode

When Junos OS is installed on a device and the device is powered on, it is ready to be configured. Initially, you log in as the user **root** with no password. When you log in as **root**, your SSH connection is enabled by default.

As Security Administrator, you must establish a root password conforming to the FIPS password requirements in [“Understanding Password Specifications and Guidelines for Junos OS in FIPS Mode” on page 34](#). When you enable FIPS mode in Junos OS on the device, you cannot configure passwords unless they meet this standard.

Local passwords are encrypted with the secure hash algorithm SHA256 or SHA512. Password recovery is not possible in Junos OS in FIPS mode. Junos OS in FIPS mode cannot boot into single-user mode without the correct root password.

To enable FIPS mode in Junos OS on the device:

1. Zeroize the device to delete all CSPs before entering FIPS mode. Refer to [“Understanding Zeroization to Clear System Data for FIPS Mode” on page 38](#) section for details.
2. After the device comes up in 'Amnesiac mode', login using username **root** and password "" (blank).

```
FreeBSD/amd64 (Amnesiac) (ttyu0)
login: root
--- JUNOS 19.2-20180131.0 Kernel 64-bit  JNPR-11.0-20180123.155949_fbsd-
```

```
root@:~ # cli
root>
```

3. Configure root authentication.

```
root> edit
  Entering configuration mode
[edit]
root# set system root-authentication plain-text-password
New password:
Retype new password:
[edit]
root# commit
commit complete
```

4. Load configuration onto device and commit new configuration.

5. Install **fips-mode** package needed for Routing Engine KATS.

```
root@hostname> request system software add optional://fips-mode.tgz
Verified fips-mode signed by PackageDevelopmentEc_2017 method ECDSA256+SHA256
```

6. Install **jpfe-fips** package.

```
root@hostname> request system software add optional://jpfe-fips.tgz
```

7. For MX204 and EX9251 devices,

- Configure chassis boundary fips by setting **set system fips chassis level 1** and **commit**.

Device might display the **Encrypted-password must be re-configured to use FIPS compliant hash** warning to delete older CSP in loaded configuration.

8. After deleting and reconfiguring CSPs, commit will go through and device needs reboot to enter FIPS mode.

```
[edit]
root@hostname# commit
Generating RSA key /etc/ssh/fips_ssh_host_key
Generating RSA2 key /etc/ssh/fips_ssh_host_rsa_key
```

```
Generating ECDSA key /etc/ssh/fips_ssh_host_ecdsa_key
[edit]
system
reboot is required to transition to FIPS level 1
commit complete
root@hostname# request vmhost reboot
```

9. After rebooting the device, FIPS self-tests will run and device enters FIPS mode.

```
root@hostname:fips>
```

## RELATED DOCUMENTATION

[Understanding Password Specifications and Guidelines for Junos OS in FIPS Mode | 34](#)

For more information about the root password and root logins, see the [Junos OS System Basics Configuration Guide](#).

# Configuring Security Administrator and FIPS User Identification and Access

## IN THIS SECTION

- [Configuring Security Administrator Access | 43](#)
- [Configuring FIPS User Login Access | 44](#)

Security Administrators and FIPS users perform all configuration tasks for Junos OS in FIPS mode and issue all Junos OS in FIPS mode statements and commands. Security Administrator and FIPS user configurations must follow Junos OS in FIPS mode guidelines.

## Configuring Security Administrator Access

Junos OS in FIPS mode offers a finer granularity of user permissions than those mandated by FIPS 140-2.

For FIPS 140-2 compliance, any FIPS user with the **secret**, **security**, **maintenance**, and **control** permission bits set is a Security Administrator. In most cases the **super-user** class suffices for the Security Administrator.

To configure login access for a Security Administrator:

1. Log in to the device with the root password if you have not already done so, and enter configuration mode:

```
root@host:fips> configure
  Entering configuration mode
[edit]
root@host:fips#
```

2. Name the user **security-administrator** and assign the Security Administrator a user ID (for example, **6400**, which must be a unique number associated with the login account in the range of 100 through 64000) and a class (for example, **super-user**). When you assign the class, you assign the permissions—for example, **secret**, **security**, **maintenance**, and **control**.

For a list of permissions, see [Understanding Junos OS Access Privilege Levels](#).

```
[edit]
root@host:fips# set system login user username uid value class class-name
```

For example:

```
[edit]
root@host:fips# set system login user security-administrator uid 6400 class super-user
```

3. Following the guidelines in [“Understanding Password Specifications and Guidelines for Junos OS in FIPS Mode” on page 34](#), assign the Security Administrator a plain-text password for login authentication. Set the password by typing a password after the prompts **New password** and **Retype new password**.

```
[edit]
root@host:fips# set system login user username uid value class class-name authentication (plain-test-password
| encrypted-password)
```

For example:



```
[edit]
root@host:fips# set system login user security-administrator class super-user authentication
plain-text-password
```

4. Optionally, display the configuration:

```
[edit]
root@host:fips# edit system
[edit system]
root@host:fips# show
login {
  user security-administrator {
    uid 6400;
    authentication {
      encrypted-password "<cipher-text>"; ## SECRET-DATA
    }
    class super-user;
  }
}
```

5. If you are finished configuring the device, commit the configuration and exit:

```
[edit]
root@host:fips# commit
commit complete
root@host:fips# exit
root@host:fips> exit
```

Otherwise, go on to [“Configuring FIPS User Login Access” on page 44](#).

## Configuring FIPS User Login Access

A **fips-user** is defined as any FIPS user that does not have the **secret**, **security**, **maintenance**, and **control** permission bits set.

As the Security Administrator you set up FIPS users. FIPS users cannot be granted permissions normally reserved for the Security Administrator—for example, permission to zeroize the system.

To configure login access for a FIPS user:

1. Log in to the device with your Security Administrator password if you have not already done so, and enter configuration mode:

```
security-administrator@host:fips> configure
  Entering configuration mode
[edit]
security-administrator@host:fips#
```

2. Give the user, a username, and assign the user a user ID (for example, **6401**, which must be a unique number in the range of 1 through 64000) and a class. When you assign the class, you assign the permissions—for example, **clear**, **configure**, **network**, **resetview**, and **view-configuration**.

For a list of permissions, see [Understanding Junos OS Access Privilege Levels](#).

```
[edit]
root@host:fips# set system login user username uid value class read-only
```

3. Following the guidelines in [“Understanding Password Specifications and Guidelines for Junos OS in FIPS Mode” on page 34](#), assign the FIPS user a plain-text password for login authentication. Set the password by typing a password after the prompts **New password** and **Retype new password**.

```
[edit]
root@host:fips# set system login user username uid value class read-only authentication (plain-text-password | encrypted-password)
```

4. Optionally, display the configuration:

```
[edit]
security-administrator@host:fips# edit system
[edit system]
security-administrator@host:fips# show
login {
  user fips-user1 {
    uid 6401;
    authentication {
      encrypted-password "<cipher-text>"; ## SECRET-DATA
    }
    class read-only;
  }
}
```

5. If you are finished configuring the device, commit the configuration and exit:

```
[edit]  
security-administrator@host:fps# commit  
security-administrator@host:fps> exit
```

## RELATED DOCUMENTATION

[Understanding Roles and Services for Junos OS](#) | 27

# 3

CHAPTER

## Configuring Administrative Credentials and Privileges

---

Understanding the Associated Password Rules for an Authorized Administrator | 49

Configuring a Network Device Collaborative Protection Profile Authorized  
Administrator | 50

---



# Understanding the Associated Password Rules for an Authorized Administrator

The authorized administrator is associated with a defined login class, and the administrator is assigned with all permissions. Data is stored locally for fixed password authentication.

**NOTE:** Do not use control characters in passwords.

Use the following guidelines and configuration options for passwords and when selecting passwords for authorized administrator accounts. Passwords should be:

- Easy to remember so that users are not tempted to write it down.
- Changed periodically.
- Private and not shared with anyone.
- Contain a minimum of 10 characters. The minimum password length is 10 characters.

[ edit ]

```
administrator@host# set system login password minimum-length 10
```

- Include both alphanumeric and punctuation characters, composed of any combination of upper and lowercase letters, numbers, and special characters such as, "!", "@", "#", "\$", "%", "^", "&", "\*", "(", and ")". There should be at least a change in one case, one or more digits, and one or more punctuation marks.
- Contain character sets. Valid character sets include uppercase letters, lowercase letters, numbers, punctuation, and other special characters.

[ edit ]

```
administrator@host# set system login password change-type character-sets
```

- Contain the minimum number of character sets or character set changes. The minimum number of character sets required in plain-text passwords in Junos FIPS is 3.

[ edit ]

```
administrator@host# set system login password minimum-changes 3
```

- The hashing algorithm for user passwords can be either SHA256 or SHA512 (SHA512 is the default hashing algorithm).

[ edit ]

```
administrator@host# set system login password format sha512
```

**NOTE:** The device supports ECDSA (P-256, P-384, and P-521) and RSA (2048, 3072, and 4092 modulus bit length) key-types.

Weak passwords are:

- Words that might be found in or exist as a permuted form in a system file such as `/etc/passwd`.
- The hostname of the system (always a first guess).
- Any words appearing in a dictionary. This includes dictionaries other than English, and words found in works such as Shakespeare, Lewis Carroll, Roget's Thesaurus, and so on. This prohibition includes common words and phrases from sports, sayings, movies, and television shows.
- Permutations on any of the above. For example, a dictionary word with vowels replaced with digits (for example f00t) or with digits added to the end.
- Any machine-generated passwords. Algorithms reduce the search space of password-guessing programs and so should not be used.

Strong reusable passwords can be based on letters from a favorite phrase or word, and then concatenated with other, unrelated words, along with additional digits and punctuation.

#### RELATED DOCUMENTATION

[Identifying Secure Product Delivery](#) | 22

## Configuring a Network Device Collaborative Protection Profile Authorized Administrator

An account for **root** is always present in a configuration and is not intended for use in normal operation. In the evaluated configuration, the **root** account is restricted to the initial installation and configuration of the evaluated device.

An NDcPPv2.1 authorized administrator must have all permissions, including the ability to change the device configuration.

To configure an authorized administrator:

1. Create a login class named security-admin with all permissions.

```
[edit]  
root@host# set system login class security-admin permissions all
```

2. Configure the hashed algorithm for plain-text passwords as sha512.

```
[edit]  
root@host# set system login password format sha512
```

3. Commit the changes.

```
[edit]  
root@host# commit
```

4. Define your NDcPPv2.1 user authorized administrator.

```
[edit]  
root@host# set system login user NDcPPv2-user class security-admin authentication encrypted-password
```

or

```
[edit]  
root@host# set system login user NDcPPv2-user class security-admin authentication plain-text-password
```

5. Load an SSH key file that was previously generated using ssh-keygen. This command loads RSA (SSH version 2), or ECDSA (SSH version 2).

```
[edit]  
root@host# set system root-authentication load-key-file url:filename
```

6. Set the log-key-changes configuration statement to log when SSH authentication keys are added or removed.

```
[edit]  
root@host# set system services ssh log-key-changes
```



**NOTE:** When the **log-key-changes** configuration statement is enabled and committed (with the commit command in configuration mode), Junos OS logs the changes to the set of authorized SSH keys for each user (including the keys that were added or removed). Junos OS logs the differences since the last time the **log-key-changes** configuration statement was enabled. If the **log-key-changes** configuration statement was never enabled, then Junos OS logs all the authorized SSH keys.

7. Commit the changes.

```
[edit]  
root@host# commit
```

**NOTE:** The root password should be reset following the change to sha256 / sha512 for the password storage format. This ensures the new password is protected using a sha256 / sha512 hash. To reset the root password, use **set system root-authentication plain-text-password** password command, and confirm the new password when prompted.

## RELATED DOCUMENTATION

[Understanding the Associated Password Rules for an Authorized Administrator](#) | 49

# 4

CHAPTER

## Configuring SSH and Console Connection

---

Configuring a System Login Message and Announcement | 55

Configuring SSH on the Evaluated Configuration for NDcPPv2.1 | 56

Limiting the Number of User Login Attempts for SSH Sessions | 58

---



# Configuring a System Login Message and Announcement

A system login message appears before the user logs in and a system login announcement appears after the user logs in. By default, no login message or announcement is displayed on the device.

To configure a system login message through console or management interface, use the following command:

```
[edit]
user@host# set system login message login-message-banner-text
```

To configure system announcement, use the following command:

```
[edit]
user@host# set system login announcement system-announcement-text
```

## NOTE:

- If the message text contains any spaces, enclose it in quotation marks.
- You can format the message using the following special characters:
  - \n—New line
  - \t—Horizontal tab
  - \'—Single quotation mark
  - \"—Double quotation mark
  - \\—Backslash

# Configuring SSH on the Evaluated Configuration for NDcPPv2.1

SSH through remote management interface allowed in the evaluated configuration. This topic describes how to configure SSH for remote management of TOE. The following algorithms that needs to be configured to validate SSH for NDcPPv2.1.

To configure SSH on the TOE:

1. Specify the permissible SSH host-key algorithms for the system services.

```
[edit]
user@host#set system services ssh hostkey-algorithm ssh-ecdsa
user@host#set system services ssh hostkey-algorithm no-ssh-dss
user@host#set system services ssh hostkey-algorithm ssh-rsa
```

2. Specify the SSH key-exchange for Diffie-Hellman keys for the system services.

```
[edit]
user@host#set system services ssh key-exchange dh-group14-sha1
user@host#set system services ssh key-exchange ecdh-sha2-nistp256
user@host#set system services ssh key-exchange ecdh-sha2-nistp384
user@host#set system services ssh key-exchange ecdh-sha2-nistp521
```

3. Specify all the permissible message authentication code algorithms for SSHv2

```
[edit]
user@host#set system services ssh macs hmac-sha1
user@host#set system services ssh macs hmac-sha2-256
user@host#set system services ssh macs hmac-sha2-512
```

4. Specify the ciphers allowed for protocol version 2.

```
[edit]
user@host#set system services ssh ciphers aes128-cbc
user@host#set system services ssh ciphers aes256-cbc
user@host#set system services ssh ciphers aes128-ctr
user@host#set system services ssh ciphers aes256-ctr
```

## Supported SSH hostkey algorithm:

ssh-ecdsa	Allow generation of ECDSA host-key
ssh-rsa	Allow generation of RSA host-key

## Supported SSH key-exchange algorithm:

dh-group14-sha1	The RFC 4253 mandated group14 with SHA1 hash
ecdh-sha2-nistp256	The EC Diffie-Hellman on nistp256 with SHA2-256
ecdh-sha2-nistp384	The EC Diffie-Hellman on nistp384 with SHA2-384
ecdh-sha2-nistp521	The EC Diffie-Hellman on nistp521 with SHA2-512

## Supported MACs algorithm:

hmac-sha1	Hash-based MAC using Secure Hash Algorithm (SHA1)
hmac-sha2-256	Hash-based MAC using Secure Hash Algorithm (SHA2)
hmac-sha2-512	Hash-based MAC using Secure Hash Algorithm (SHA2)

## Supported SSH ciphers algorithm:

aes128-cbc	128-bit AES with Cipher Block Chaining
aes128-ctr	128-bit AES with Counter Mode
aes256-cbc	256-bit AES with Cipher Block Chaining
aes256-ctr	256-bit AES with Counter Mode

# Limiting the Number of User Login Attempts for SSH Sessions

An administrator may login remotely to a device through SSH. Administrator credentials are stored locally on the device. If the remote administrator presents a valid username and password, access to the TOE is granted. If the credentials are invalid, the TOE allows the authentication to be retried after an interval that starts after 1 second and increases exponentially. If the number of authentication attempts exceed the configured maximum, no authentication attempts are accepted for a configured time interval. When the interval expires, authentication attempts are again accepted.

You configure the amount of time the device gets locked after failed attempts. The amount of time in minutes before the user can attempt to log in to the device after being locked out due to the number of failed login attempts specified in the **tries-before-disconnect** statement. When a user fails to correctly login after the number of allowed attempts specified by the **tries-before-disconnect** statement, the user must wait the configured amount of minutes before attempting to log in to the device again.

The lockout-period must be greater than zero. The range at which you can configure the lockout-period is one through 43,200 minutes.

```
[edit system login]
user@host# set retry-options lockout-period <number>
```

You can configure the device to limit the number of attempts to enter a password while logging through SSH. Using the following command, the connection.

```
[edit system login]
user@host# set retry-options tries-before-disconnect <number>
```

Here, **tries-before-disconnect** is the number of times a user can attempt to enter a password when logging in. The connection closes if a user fails to log in after the number specified. The range is from 1 through 10, and the default value is 10.

You can also configure a delay, in seconds, before a user can try to enter a password after a failed attempt.

```
[edit system login]
user@host# set retry-options backoff-threshold <number>
```

Here, **backoff-threshold** is the threshold for the number of failed login attempts before the user experiences a delay in being able to enter a password again. Use the **backoff-factor** option to specify the length of the delay in seconds. The range is from 1 through 3, and the default value is 2 seconds.

In addition, the device can be configured to specify the threshold for the number of failed attempts before the user experiences a delay in entering the password again.

```
[edit system login]  
user@host# set retry-options backoff-factor <number>
```

Here, **backoff-factor** is the length of time, in seconds, before a user can attempt to log in after a failed attempt. The delay increases by the value specified for each subsequent attempt after the threshold. The range is from 5 through 10, and the default value is 5 seconds.

You can control user access through SSH. By configuring ssh **root-login deny**, you can ensure the root account remains active and continues to have local administrative privileges to the TOE even if other remote users are logged off.

```
[edit system]  
user@host# set services ssh root-login deny
```

The SSH2 protocol provides secure terminal sessions utilizing the secure encryption. The SSH2 protocol enforces running the key-exchange phase and changing the encryption and integrity keys for the session. Key exchange is done periodically, after specified seconds or after specified bytes of data have passed over the connection. You can configure thresholds for SSH rekeying, FCS\_SSHS\_EXT.1.8 and FCS\_SSHC\_EXT.1.8. The TSF ensures that within the SSH connections the same session keys are used for a threshold of no longer than one hour, and no more than one gigabyte of the transmitted data. When either of the thresholds are reached, a rekey must be performed.



# 5

CHAPTER

## Configuring the Remote Syslog Server

---

Syslog Server Configuration on a Linux System | **63**

---



# Syslog Server Configuration on a Linux System

A secure Junos OS environment requires auditing of events and storing them in a local audit file. The recorded events are simultaneously sent to an external syslog server. A syslog server receives the syslog messages streamed from the router. The syslog server must have an SSH client with NETCONF support configured to receive the streamed syslog messages.

The NDcPPv2.1 logs capture the events, few of them are listed below:

- Committed changes
- Login and logout of users
- Failure to establish an SSH session
- Establishment or termination of an SSH session
- Changes to the system time

## Configuring Event Logging to a Local File

Configure audit information to be stored in a local file on the device along with the level of detail using the "syslog" statement. The following must be used to ensure all events detailed in the NDcPPv2.1 are logged and are stored in a local file named Audit\_file in the following example:

```
[edit system]
syslog {
  file Audit_file {
    any any;
  }
}
```

## Configuring Event Logging to a Remote Server

Configure the export of audit information to a secure, remote server by setting up an event trace monitor that sends event log messages by using NETCONF over SSH to the remote system event logging server.

The following procedures show the configuration needed to send system log messages to a secure external server by using NETCONF over SSH.

## Configuring Event Logging to a Remote Server when Initiating the Connection from the Remote Server

The following procedure describes the steps to configure event logging to a remote server when the SSH connection to the TOE is initiated from the remote system log server.

1. Generate an RSA public key on the remote syslog server.

```
$ ssh-keygen -b 2048 -t rsa -C 'syslog-monitor key pair' -f ~/.ssh/syslog-monitor
```

You will be prompted to enter the desired passphrase. The storage location for the **syslog-monitor** key pair is displayed.

2. On the TOE, create a class named **monitor** that has permission to trace events.

```
[edit]
user@host# set system login class monitor permissions trace
```

3. Create a user named **syslog-mon** with the class monitor, and with authentication that uses the **syslog-monitor** key pair from the key pair file located on the remote syslog server.

```
[edit]
user@host# set system login user syslog-mon class monitor authentication ssh-rsa "ssh-rsa xxxxx syslog-monitor
key pair"
```

4. Set up NETCONF with SSH.

```
[edit]
user@host# set system services netconf ssh
```

5. Configure syslog to log all the messages at `/var/log/Audit_file`.

```
[edit]
user@host# set system syslog file Audit_file any any
user@host# commit
```

6. On the remote system log server, start up the SSH agent. The start up is required to simplify the handling of the syslog-monitor key.

```
$ eval `ssh-agent`
```

7. On the remote syslog server, add the **syslog-monitor** key pair to the SSH agent.

```
$ ssh-add ~/.ssh/syslog-monitor
```

You will be prompted to enter the desired passphrase. Enter the same passphrase used in Step 1.

8. After logging in to the **external\_syslog\_server** session, establish a tunnel to the device and start NETCONF.

```
$ ssh syslog-mon@NDcPP_TOE -s netconf > test.out
```

All logging data received by the remote syslog server is placed in the **test.out** file.

9. After NETCONF is established, configure a system log events message stream. This RPC will cause the NETCONF service to start transmitting messages over the SSH connection that is established.

```
<rpc><get-syslog-events><stream>Audit_file</stream></get-syslog-events></rpc>
```

10. The examples for syslog messages are listed below. Monitor the event log generated for admin actions on TOE as received on the syslog server. Examine the traffic that passes between the audit server and the TOE, observing that these data are not viewed during this transfer, and that they are successfully received by the audit server. Match the logs between local event and the remote event logged in a syslog server and record the particular software (such as name, version, and so on) used on the audit server during testing.

The following output shows test log results for syslog server.

```
host@ssh-keygen -b 2048 -t rsa -C 'syslog-monitor key pair' -f ~/.ssh/syslog-monitor

Generating public/private rsa key pair.
Enter passphrase (empty for no passphrase):
Enter same passphrase again:
Your identification has been saved in /home/host/.ssh/syslog-monitor.
Your public key has been saved in /home/host/.ssh/syslog-monitor.pub.
The key fingerprint is:
```

```

ef:75:d7:68:c5:ad:8d:6f:5e:7a:7e:9b:3d:f1:4d:3f syslog-monitor key pair
The key's randomart image is:
+--[ RSA 2048]-----+
|           |
|           |
|           |
|           ..|
|      S      +|
|      .      Bo|
|      . .  *.X|
|      . . o E@|
|      .  .BX|
+-----+
[host@nms5-vm-linux2 ~]$ cat /home/host/.ssh/syslog-monitor.pub
ssh-rsa
AAAAB3NzaClyc2EAAAADAQABAAQCrUREJUBpjwAoIgRrGy9zgt+
D2pikk3Q/Wdf8I5vr+njeqJhCx2bUAkrRbYXNILQQAZbg7kLfi/8TqqL
eon4HOP2e6oCSorKdx/GrOTzLONL4fh0EyuSAk8bs5JuwWNBUokV025
gzpGFsBusGnlj6wqqJ/sjFsMmfxYCbY+pUWb8ml/A9YjOFT+6esw+9S
tF6Gbg+VpbYYk/Oday4z+z7tQHRFSrxj2G92aoliVDBLJpareEMBC8w
LdSUDxmgBTM2oadOmm+kreBUQjrnr6775RJn9H9YwIxKOxGm4SFnX/Vl4
R+lZ9RqmKH2wodIEM34K0wXEHZAzNZ0loLmaAVqT
syslog-monitor key pair
[host@nms5-vm-linux2 ~]$ eval `ssh-agent`
Agent pid 1453
[host@nms5-vm-linux2 ~]$ ssh-add ~/.ssh/syslog-monitor
Enter passphrase for /home/host/.ssh/syslog-monitor:
Identity added: /home/host/.ssh/syslog-monitor (/home/host/.ssh/syslog-monitor)

```

```

host@nms5-vm-linux2 ~]$ ssh syslog-mon@starfire -s netconf > test.out
host@nms5-vm-linux2 ~]$ cat test.out
this is NDCPP test device

<!-- No zombies were killed during the creation of this user interface --
<!-- user syslog-mon, class j-monitor -><hello>
<capabilities>
  <capability>urn:ietf:params:xml:ns:netconf:base:1.0</capability>
  <capability>urn:ietf:params:xml:ns:netconf:capability:candidate:1.0</capability>

<capability>urn:ietf:params:xml:ns:netconf:capability:confirmed-commit:1.0</capability>

  <capability>urn:ietf:params:xml:ns:netconf:capability:validate:1.0</capability>

```

```

<capability>urn:ietf:params:xml:ns:netconf:capability:url:1.0?protocol=http,ftp,file</capability>

    <capability>http://xml.juniper.net/netconf/junos/1.0</capability>
    <capability>http://xml.juniper.net/dmi/system/1.0</capability>
</capabilities>
<session-id4129/session-id>
</hello>
]]>]]>

```

The following output shows event logs generated on the TOE that are received on the syslog server.

```

Jan 20 17:04:51 starfire sshd[4182]: error: Could not load host key:
/etc/ssh/ssh_host_dsa_key
Jan 20 17:04:51 starfire sshd[4182]: error: Could not load host key:
/etc/ssh/ssh_host_ecdsa_key
Jan 20 17:04:53 starfire sshd[4182]: Accepted password for sec-admin from
10.209.11.24 port 55571 ssh2
Jan 20 17:04:53 starfire mgd[4186]: UI_AUTH_EVENT: Authenticated user 'sec-admin'
at permission level 'j-administrator'
Jan 20 17:04:53 starfire mgd[4186]: UI_LOGIN_EVENT: User 'sec-admin' login, class
'j-administrator' [4186], ssh-connection '10.209.11.24 55571 10.209.14.92 22',
client-mode 'cli'

```

The following output shows that the local syslogs and remote syslogs received are similar.

```

Local : an 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation
in progress: Redundancy interface management process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child '/usr/sbin/rdd'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child '/usr/sbin/rdd',
PID 4317, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Dynamic flow capture service checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child '/usr/sbin/dfcd'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child
'/usr/sbin/dfcd', PID 4318, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Connectivity fault management process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child '/usr/sbin/cfmd'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child

```

```

'/usr/sbin/cfmd', PID 4319, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Layer 2 address flooding and learning process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child
'/usr/sbin/l2ald'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child
'/usr/sbin/l2ald', PID 4320, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Layer 2 Control Protocol process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child
'/usr/sbin/l2cpd'
Jan 20 17:09:30 starfire l2cp[4321]: Initializing PNAC state machines
Jan 20 17:09:30 starfire l2cp[4321]: Initializing PNAC state machines complete
Jan 20 17:09:30 starfire l2cp[4321]: Initialized 802.1X module and state
machinesJan 20 17:09:30 starfire l2cp[4321]: Read access profile () config
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child
'/usr/sbin/l2cpd', PID 4321, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Multicast Snooping process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child
'/usr/sbin/mcsnoopd'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child
'/usr/sbin/mcsnoopd', PID 4325, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: commit wrapup...
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: activating '/var/etc/ntp.conf'
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: start ffp activate
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child '/usr/sbin/ffp'
Jan 20 17:09:30 starfire ffp[4326]: "dynamic-profiles": No change to
profiles.....

```

```

Remote : an 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation
in progress: Redundancy interface management process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child '/usr/sbin/rdd'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child '/usr/sbin/rdd',
PID 4317, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Dynamic flow capture service checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child '/usr/sbin/dfcd'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child
'/usr/sbin/dfcd', PID 4318, status 0

```



```

Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Connectivity fault management process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child '/usr/sbin/cfmd'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child
'/usr/sbin/cfmd', PID 4319, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Layer 2 address flooding and learning process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child
'/usr/sbin/l2ald'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child
'/usr/sbin/l2ald', PID 4320, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Layer 2 Control Protocol process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child
'/usr/sbin/l2cpd'
Jan 20 17:09:30 starfire l2cp[4321]: Initializing PNAC state machines
Jan 20 17:09:30 starfire l2cp[4321]: Initializing PNAC state machines complete
Jan 20 17:09:30 starfire l2cp[4321]: Initialized 802.1X module and state
machinesJan 20 17:09:30 starfire l2cp[4321]: Read access profile () config
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child
'/usr/sbin/l2cpd', PID 4321, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: Multicast Snooping process checking new configuration
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child
'/usr/sbin/mcsnoopd'
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_STATUS: Cleanup child
'/usr/sbin/mcsnoopd', PID 4325, status 0
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: commit wrapup...
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: activating '/var/etc/ntp.conf'
Jan 20 17:09:30 starfire mgd[4186]: UI_COMMIT_PROGRESS: Commit operation in
progress: start ffp activate
Jan 20 17:09:30 starfire mgd[4186]: UI_CHILD_START: Starting child '/usr/sbin/ffp'
Jan 20 17:09:30 starfire ffp[4326]: "dynamic-profiles": No change to profiles
.....

```

# 6

CHAPTER

## Configuring Audit Log Options

---

Configuring Audit Log Options in the Evaluated Configuration | **73**

Sample Code Audits of Configuration Changes | **74**

---



# Configuring Audit Log Options in the Evaluated Configuration

## IN THIS SECTION

- [Configuring Audit Log Options for MX204 and EX9251 Devices | 73](#)

The following section describes how to configure audit log options in the evaluated configuration.

## Configuring Audit Log Options for MX204 and EX9251 Devices

To configure audit log options for MX204 and EX9251 devices:

1. Specify the number of files to be archived in the system logging facility.

```
[edit system syslog]
root@host#set archive files 2
```

2. Specify the file in which to log data.

```
[edit system syslog]
root@host#set file syslog any any
```

3. Specify the size of files to be archived.

```
[edit system syslog]
root@host#set file syslog archive size 10000000
```

4. Specify the priority and facility in messages for the system logging facility.

```
[edit system syslog]
root@host#set file syslog explicit-priority
```

5. Log system messages in a structured format.

```
[edit system syslog]
root@host#set file syslog structured-data
```

## Sample Code Audits of Configuration Changes

This sample code audits all changes to the configuration secret data and sends the logs to a file named **Audit-File**:

```
[edit system]
syslog {
  file Audit-File {
    authorization info;
    change-log info;
    interactive-commands info;
  }
}
```

This sample code expands the scope of the minimum audit to audit all changes to the configuration, not just secret data, and sends the logs to a file named **Audit-File**:

```
[edit system]
syslog {
  file Audit-File {
    any any;
    authorization info;
    change-log any;
    interactive-commands info;
    kernel info;
    pfe info;
  }
}
```

**Example: System Logging of Configuration Changes**

This example shows a sample configuration and makes changes to users and secret data. It then shows the information sent to the audit server when the secret data is added to the original configuration and committed with the **load** command.

```
[edit system]
location {
  country-code US;
  building B1;
}
...
login {
  message "UNAUTHORIZED USE OF THIS ROUTER\n\tIS STRICTLY PROHIBITED!";
  user admin {
    uid 2000;
    class super-user;
    authentication {
      encrypted-password "$ABC123";
      # SECRET-DATA
    }
  }
}
radius-server 192.0.2.15 {
  secret "$ABC123" # SECRET-DATA
}
services {
  ssh;
}
syslog {
  user *{
    any emergency;
  }
  file messages {
    any notice;
    authorization info;
  }
  file interactive-commands {
    interactive-commands any;
  }
}
...
...
```

The new configuration changes the secret data configuration statements and adds a new user.

```

user@host# show | compare
[edit system login user admin authentication]
- encrypted-password "$ABC123"; # SECRET-DATA
+ encrypted-password "$ABC123"; # SECRET-DATA
[edit system login]
+ user admin2 {
+   uid 2001;
+   class operator;
+   authentication {
+     encrypted-password "$ABC123";
+     # SECRET-DATA
+   }
+ }
[edit system radius-server 192.0.2.15]
- secret "$ABC123"; # SECRET-DATA
+ secret "$ABC123"; # SECRET-DATA

```

Table 4 on page 76 shows sample for syslog auditing for NDcPPv2.1:

**Table 4: Auditable Events**

Requirement	Auditable Events	Additional Audit Record Contents	How event generated
FCS_SSH_EXT.1	Failure to establish an SSH session.  Establishment/Termination of an SSH session.	Reason for failure.  Non-TOE endpoint of connection (IP address) for both successes and failures.	Identification & Authentication (FIA_UIA_EXT.1 – logging in) Large packet test.
FIA_UIA_EXT.1	All use of the identification and authentication mechanism.	Provided user identity, origin of the attempt (e.g., IP address).	Identification & Authentication (FIA_UIA_EXT.1 – logging in)
FIA_UAU_EXT.2	All use of the authentication mechanism.	Origin of the attempt (e.g., IP address).	Identification & Authentication (FIA_UIA_EXT.1 – logging in)
FPT_STM.1	Changes to the time.	The old and new values for the time. Origin of the attempt (e.g., IP address).	Time updates (FPT_STM.1)
FPT_TUD_EXT.1	Initiation of update.	No additional information.	Proper TOE Updates (FPT_TUD_EXT.1.3)

Table 4: Auditable Events (*continued*)

Requirement	Auditable Events	Additional Audit Record Contents	How event generated
FPT_TST_EXT.1	Indication that TSF self-test was completed.	Any additional information generated by the tests beyond “success” or “failure”.	Entered ‘request system fips self-test’ at command line.
FTA_SSL_EXT.1	Any attempts at unlocking of an interactive session.	No additional information.	Local Interactive Session Timeout Enforcement (FTA_SSL_EXT.1)
FTA_SSL.3	The termination of a remote session by the session locking mechanism.	No additional information.	Remote Session Timeout Enforcement (FTA_SSL.3)
FTA_SSL.4	Initiation of the trusted channel. Termination of the trusted channel.  Failure of the trusted channel functions.	Identification of the initiator and target of failed trusted channels establishment attempt.	Audit Server Configuration (FAU_STG_EXT.1).
FTP_ITC.1	Used as entropy input string to the HMAC DRBG.	Power cycle.	A critical value of the internal state of DRBG.
FTP_TRP.1	Initiation of the trusted channel.  Termination of the trusted channel.  Failures of the trusted path functions.	Identification of the claimed user identity.	See audit results for FCS_SSH_EXT.1.
FIA_AFL.1	Unsuccessful login attempts limit is met or exceeded.	Origin of the attempt (for example, IP address).	Authentication failure during remote authentication.
FMT_MOF.1/ Manual Update	Any attempt to initiate a manual update.	No additional information.	Trigger an update of the firmware on the TOE.
FMT_MTD.1/ Core Data	All management activities of TSF data.	No additional information.	Creation, modification, or deletion of the TOE data.



Table 4: Auditable Events (*continued*)

Requirement	Auditable Events	Additional Audit Record Contents	How event generated
FIA_X509_EXT.1/ Rev	Unsuccessful attempt to validate a certificate.	Reason for failure.	Trigger a firmware update on the TOE.
FPT_TUD_EXT.2	Failure of update.	Reason for failure (including identifier of invalid certificate).	Modification or corruption of an image certificate is detected.
FMT_MOF.1/ Functions	Modification of the behavior of the transmission of audit data to an external IT entity, the handling of audit data, the audit functionality when Local Audit Storage Space is full.	No additional information.	Attempt to modify the transmission or handling behavior of audit data on the TOE.
FMT_MOF.1/ Services	Starting and stopping of services.	No additional information.	Enable or disable of services on the TOE.
FMT_MTD.1/ Crypto Keys	Management of cryptographic keys.	No additional information.	Creation, modification, or deletion of the cryptographic keys.

## RELATED DOCUMENTATION

Configuring Audit Log Options in the Evaluated Configuration | 73

# 7

CHAPTER

## Configuring Event Logging

---

Event Logging Overview | **81**

Configuring Event Logging to a Local File | **82**

Interpreting Event Messages | **82**

Logging Changes to Secret Data | **84**

Login and Logout Events Using SSH | **85**

Logging of Audit Startup | **85**

---



# Event Logging Overview

The evaluated configuration requires the auditing of configuration changes through the system log.

In addition, Junos OS can:

- Send automated responses to audit events (syslog entry creation).
- Allow authorized managers to examine audit logs.
- Send audit files to external servers.
- Allow authorized managers to return the system to a known state.

The logging for the evaluated configuration must capture the following events:

- Changes to secret key data in the configuration.
- Committed changes.
- Login/logout of users.
- System startup.
- Failure to establish an SSH session.
- Establishment/termination of an SSH session.
- Changes to the (system) time.
- Termination of a remote session by the session locking mechanism.
- Termination of an interactive session.

In addition, Juniper Networks recommends that logging also:

- Capture all changes to the configuration.
- Store logging information remotely.

## RELATED DOCUMENTATION

*Interpreting Event Messages*

# Configuring Event Logging to a Local File

You can configure storing of audit information to a local file with the **syslog** statement. This example stores logs in a file named **Audit-File**:

```
[edit system]
syslog {
  file Audit-File;
}
```

## RELATED DOCUMENTATION

[Event Logging Overview](#) | 81

# Interpreting Event Messages

The following output shows a sample event message.

```
Feb 27 02:33:04 bm-a mgd[6520]: UI_LOGIN_EVENT: User 'security-officer' login, class 'j-super-user' [6520],
ssh-connection ", client-mode 'cli'
Feb 27 02:33:49 bm-a mgd[6520]: UI_DBASE_LOGIN_EVENT: User 'security-officer' entering configuration
mode
Feb 27 02:38:29 bm-a mgd[6520]: UI_CMDLINE_READ_LINE: User 'security-officer', command 'run show log
Audit_log | grep LOGIN
```

[Table 5 on page 83](#) describes the fields for an event message. If the system logging utility cannot determine the value in a particular field, a hyphen ( - ) appears instead.

Table 5: Fields in Event Messages

Field	Description	Examples
<b>timestamp</b>	<p>Time when the message was generated, in one of two representations:</p> <ul style="list-style-type: none"> <li>• <b>MMM-DD HH:MM:SS.MS+/-HH:MM</b>, is the month, day, hour, minute, second and millisecond in local time. The hour and minute that follows the plus sign (+) or minus sign (-) is the offset of the local time zone from Coordinated Universal Time (UTC).</li> <li>• <b>YYYY-MM-DDTHH:MM:SS.MSZ</b> is the year, month, day, hour, minute, second and millisecond in UTC.</li> </ul>	<p>Feb 27 02:33:04 is the timestamp expressed as local time in the United States.</p> <p>2012-02-27T09:17:15.719Z is 2:33 AM UTC on 27 Feb 2012.</p>
<b>hostname</b>	Name of the host that originally generated the message.	router1
<b>process</b>	Name of the Junos OS process that generated the message.	mgd
<b>processID</b>	UNIX process ID (PID) of the Junos OS process that generated the message.	4153
<b>TAG</b>	Junos OS system log message tag, which uniquely identifies the message.	UI_DBASE_LOGOUT_EVENT
<b>username</b>	Username of the user initiating the event.	"admin"
<b>message-text</b>	English-language description of the event .	set: [system radius-server 1.2.3.4 secret]

## RELATED DOCUMENTATION

[Event Logging Overview](#) | 81

# Logging Changes to Secret Data

The following are examples of audit logs of events that change the secret data. Whenever there is a change in the configuration example, the syslog event should capture the below logs:

```
Jul 24 17:43:28  router1 mgd[4163]: UI_CFG_AUDIT_SET_SECRET: User 'admin' set:  
[system radius-server 1.2.3.4 secret]  
Jul 24 17:43:28  router1 mgd[4163]: UI_CFG_AUDIT_SET_SECRET: User 'admin' set:  
[system login user admin authentication encrypted-password]  
Jul 24 17:43:28  router1 mgd[4163]: UI_CFG_AUDIT_SET_SECRET: User 'admin' set:  
[system login user admin2 authentication encrypted-password]
```

Everytime a configuration is updated or changed, the syslog should capture these logs:

```
Jul 24 18:29:09  router1 mgd[4163]: UI_CFG_AUDIT_SET_SECRET: User 'admin' replace:  
[system radius-server 1.2.3.4 secret]  
Jul 24 18:29:09  router1 mgd[4163]: UI_CFG_AUDIT_SET_SECRET: User 'admin' replace:  
[system login user admin authentication encrypted-password]  
Jul 24 18:29:09  router1 mgd[4163]: UI_CFG_AUDIT_SET_SECRET: User 'admin' replace:  
[system login user admin authentication encrypted-password]
```

For more information about configuring parameters and managing log files, see the *Junos OS System Log Messages Reference*.

## RELATED DOCUMENTATION

[Interpreting Event Messages](#) | 82

# Login and Logout Events Using SSH

System log messages are generated whenever a user successfully or unsuccessfully attempts SSH access. Logout events are also recorded. For example, the following logs are the result of two failed authentication attempts, then a successful one, and finally a logout:

```
Dec 20 23:17:35 bilbo sshd[16645]: Failed password for op from 172.17.58.45 port
1673 ssh2
Dec 20 23:17:42 bilbo sshd[16645]: Failed password for op from 172.17.58.45 port
1673 ssh2
Dec 20 23:17:53 bilbo sshd[16645]: Accepted password for op from 172.17.58.45
port 1673 ssh2
Dec 20 23:17:53 bilbo mgd[16648]: UI_AUTH_EVENT: Authenticated user 'op' at
permission level 'j-operator'
Dec 20 23:17:53 bilbo mgd[16648]: UI_LOGIN_EVENT: User 'op' login, class
'j-operator' [16648]
Dec 20 23:17:56 bilbo mgd[16648]: UI_CMDLINE_READ_LINE: User 'op', command 'quit
'
Dec 20 23:17:56 bilbo mgd[16648]: UI_LOGOUT_EVENT: User 'op' logout
```

## RELATED DOCUMENTATION

[Interpreting Event Messages | 82](#)

# Logging of Audit Startup

The audit information logged includes startups of Junos OS. This in turn identifies the startup events of the audit system, which cannot be independently disabled or enabled. For example, if Junos OS is restarted, the audit log contains the following information:

```
Dec 20 23:17:35 bilbo syslogd: exiting on signal 14
Dec 20 23:17:35 bilbo syslogd: restart
Dec 20 23:17:35 bilbo syslogd /kernel: Dec 20 23:17:35 init: syslogd (PID 19128)
exited with status=1
Dec 20 23:17:42 bilbo /kernel:
Dec 20 23:17:53 init: syslogd (PID 19200) started
```



## RELATED DOCUMENTATION

[Login and Logout Events Using SSH | 85](#)

# 8

CHAPTER

## Performing Self-Tests on a Device

---

Understanding FIPS Self-Tests | 89

---



# Understanding FIPS Self-Tests

The cryptographic module enforces security rules to ensure that the Juniper Networks Junos operating system (Junos OS) in FIPS mode meets the security requirements of FIPS 140-2 Level 1. To validate the output of cryptographic algorithms approved for FIPS and test the integrity of some system modules, the device performs the following series of known answer test (KAT) self-tests:

- **kernel\_kats**—KAT for kernel cryptographic routines
- **md\_kats**—KAT for libmd and libc
- **openssl\_kats**—KAT for OpenSSL cryptographic implementation

The KAT self-tests are performed automatically at startup. Conditional self-tests are also performed automatically to verify digitally signed software packages, generated random numbers, RSA and ECDSA key pairs, and manually entered keys.

If the KATs are completed successfully, the system log (syslog) file is updated to display the tests that were executed.

The **file show /var/log/messages** command displays the system log.

```

mgd: Running FIPS Self-tests
mgd: Testing kernel KATS:
mgd:   NIST 800-90 HMAC DRBG Known Answer Test:      Passed
mgd:   DES3-CBC Known Answer Test:                    Passed
mgd:   HMAC-SHA1 Known Answer Test:                   Passed
mgd:   HMAC-SHA2-256 Known Answer Test:                Passed
mgd:   SHA-2-384 Known Answer Test:                    Passed
mgd:   SHA-2-512 Known Answer Test:                    Passed
mgd:   AES128-CMAC Known Answer Test:                  Passed
mgd:   AES-CBC Known Answer Test:                      Passed
mgd: Testing MacSec KATS:
mgd:   AES128-CMAC Known Answer Test:                  Passed
mgd:   AES256-CMAC Known Answer Test:                  Passed
mgd:   AES-KEYWRAP Known Answer Test:                  Passed
mgd: Testing libmd KATS:
mgd:   HMAC-SHA1 Known Answer Test:                    Passed
mgd:   HMAC-SHA2-256 Known Answer Test:                Passed
mgd:   SHA-2-512 Known Answer Test:                    Passed
mgd: Testing OpenSSL KATS:
mgd:   FIPS RNG Known Answer Test:                      Passed
mgd:   NIST 800-90 HMAC DRBG Known Answer Test:        Passed
mgd:   FIPS ECDSA Known Answer Test:                    Passed

```

```

mgd: FIPS ECDH Known Answer Test: Passed
mgd: FIPS RSA Known Answer Test: Passed
mgd: DES3-CBC Known Answer Test: Passed
mgd: HMAC-SHA1 Known Answer Test: Passed
mgd: HMAC-SHA2-224 Known Answer Test: Passed
mgd: HMAC-SHA2-256 Known Answer Test: Passed
mgd: HMAC-SHA2-384 Known Answer Test: Passed
mgd: HMAC-SHA2-512 Known Answer Test: Passed
mgd: AES-CBC Known Answer Test: Passed
mgd: AES-GCM Known Answer Test: Passed
mgd: ECDSA-SIGN Known Answer Test: Passed
mgd: KDF-IKE-V1 Known Answer Test: Passed
mgd: KDF-SSH-SHA256 Known Answer Test: Passed
mgd: Testing QuickSec 7.0 KATS:
mgd: NIST 800-90 HMAC DRBG Known Answer Test: Passed
mgd: DES3-CBC Known Answer Test: Passed
mgd: HMAC-SHA1 Known Answer Test: Passed
mgd: HMAC-SHA2-224 Known Answer Test: Passed
mgd: HMAC-SHA2-256 Known Answer Test: Passed
mgd: HMAC-SHA2-384 Known Answer Test: Passed
mgd: HMAC-SHA2-512 Known Answer Test: Passed
mgd: AES-CBC Known Answer Test: Passed
mgd: AES-GCM Known Answer Test: Passed
mgd: SSH-RSA-ENC Known Answer Test: Passed
mgd: SSH-RSA-SIGN Known Answer Test: Passed
mgd: SSH-ECDSA-SIGN Known Answer Test: Passed
mgd: KDF-IKE-V1 Known Answer Test: Passed
mgd: KDF-IKE-V2 Known Answer Test: Passed
mgd: Testing QuickSec KATS:
mgd: NIST 800-90 HMAC DRBG Known Answer Test: Passed
mgd: DES3-CBC Known Answer Test: Passed
mgd: HMAC-SHA1 Known Answer Test: Passed
mgd: HMAC-SHA2-224 Known Answer Test: Passed
mgd: HMAC-SHA2-256 Known Answer Test: Passed
mgd: HMAC-SHA2-384 Known Answer Test: Passed
mgd: HMAC-SHA2-512 Known Answer Test: Passed
mgd: AES-CBC Known Answer Test: Passed
mgd: AES-GCM Known Answer Test: Passed
mgd: SSH-RSA-ENC Known Answer Test: Passed
mgd: SSH-RSA-SIGN Known Answer Test: Passed
mgd: KDF-IKE-V1 Known Answer Test: Passed
mgd: KDF-IKE-V2 Known Answer Test: Passed
mgd: Testing SSH IPsec KATS:
mgd: NIST 800-90 HMAC DRBG Known Answer Test: Passed

```

```
mgd: DES3-CBC Known Answer Test: Passed
mgd: HMAC-SHA1 Known Answer Test: Passed
mgd: HMAC-SHA2-256 Known Answer Test: Passed
mgd: AES-CBC Known Answer Test: Passed
mgd: SSH-RSA-ENC Known Answer Test: Passed
mgd: SSH-RSA-SIGN Known Answer Test: Passed
mgd: KDF-IKE-V1 Known Answer Test: Passed
mgd: Testing file integrity:
mgd: File integrity Known Answer Test: Passed
mgd: Testing crypto integrity:
mgd: Crypto integrity Known Answer Test: Passed
mgd: Expect an everiexec: no signatures for device. file='/sbin/kats/cannot-exec'
    fsid=209 fileid=51404 gen=1 uid=0 pid=4220
xec Authentication error...
mgd: /sbin/kats/run-tests: /sbin/kats/cannot-exec: Authentication error
mgd: FIPS Self-tests Passed
```

# 9

CHAPTER

## Operational Commands

---

[request system zeroize](#) | **95**

[request vmhost zeroize no-forwarding](#) | **97**

---





# request system zeroize

## Syntax

```
request system zeroize
```

## Release Information

Command introduced before Junos OS Release 9.0.

Command introduced in Junos OS Release 12.2 for MX Series devices.

## Description

Remove all configuration information on the Routing Engines and reset all key values. If the device has dual Routing Engines, the command is broadcast to all Routing Engines on the device. The command removes all data files, including customized configuration and log files, by unlinking the files from their directories. The command removes all user-created files from the system including all plain-text passwords, secrets, and private keys for SSH, local encryption, local authentication, IPsec, RADIUS, TACACS+, and SNMP.

This command reboots the device and sets it to the factory default configuration. After the reboot, you cannot access the device through the management Ethernet interface. Log in through the console as **root** and start the Junos OS CLI by typing **cli** at the prompt.

## Required Privilege Level

maintenance

## List of Sample Output

[request system zeroize on page 95](#)

## Sample Output

### request system zeroize

```
user@host> request system zeroize
```

```
warning: System will be rebooted and may not boot without configuration
Erase all data, including configuration and log files? [yes,no] (no) yes

warning: zeroizing re0
Jul 27 22:25:53 jlaunchd: gkd-re (PID 5264) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: inet-process (PID 5267) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: periodic-packet-services (PID 5271) terminate signal 15
```

```

sent
Jul 27 22:25:53 jlaunchd: disk-monitoring (PID 5273) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: neighbor-liveness (PID 5307) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: event-processing (PID 5209) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: clksyncd-service (PID 5316) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: ethernet-link-fault-management (PID 5321) terminate
signal 15 sent
Jul 27 22:25:53 jlaunchd: subscriber-management (PID 5323) terminate signal 15
sent
Jul 27 22:25:53 jlaunchd: shm-rtssdbd (PID 5325) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: gstatd (PID 5326) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: rpcbind-service (PID 5330) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: icmd (PID 5332) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: pmcd (PID 5333) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: ftp-inet-process (PID 5334) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: process-monitor (PID 5338) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: smg-service-telemetry (PID 5340) terminate signal 15
sent
Jul 27 22:25:53 jlaunchd: application-identification (PID 5341) terminate signal
15 sent
Jul 27 22:25:53 jlaunchd: resource-management (PID 5342) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: charged (PID 5346) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: license-service (PID 5351) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: ntp (PID 6120) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: gkd-chassis (PID 6121) terminate signal 15 sent
Jul 27 22:25:53 jlaunchd: gkd-lchassis
.....

```

# request vmhost zeroize no-forwarding

## Syntax

```
request vmhost zeroize no-forwarding
```

## Release Information

Command introduced in Junos OS Release 15.1F3 for the MX204, MX480, and MX960 devices.

## Description

Remove all configuration information on the Routing Engines and reset all key values. If the device has dual Routing Engines, the command is broadcast to both Routing Engines on the device. The command removes all data files, including customized configuration and log files, by unlinking the files from their directories. The command removes all user-created files from the system including all plain-text passwords, secrets, and private keys for SSH, local encryption, local authentication, IPsec, RADIUS, TACACS+, and SNMP.

This command reboots the device and sets it to the factory-default configuration. After the reboot, you cannot access the device through the management Ethernet interface. Log in through the console as the root user and start the Junos OS CLI by typing `cli` at the prompt.

## Required Privilege Level

maintenance

## List of Sample Output

[request vmhost zeroize no-forwarding on page 97](#)

## Sample Output

### request vmhost zeroize no-forwarding

```
user@host> request vmhost zeroize no-forwarding
```

```
VMHost Zeroization : Erase all data, including configuration and log files ?
[yes,no] (no) yes

re0:
-----
warning: Vmhost will reboot and may not boot without configuration
warning: Proceeding with vmhost zeroize
```

```

Zeroize secondary internal disk ...
Proceeding with zeroize on secondary disk
Mounting device in preparation for zeroize...
Cleaning up target disk for zeroize ...
Zeroize done on target disk.
Zeroize of secondary disk completed
Zeroize primary internal disk ...
Proceeding with zeroize on primary disk
/etc/ssh/ssh_host_ecdsa_key.pub
/etc/ssh/ssh_host_rsa_key
/etc/ssh/ssh_host_dsa_key.pub
/etc/ssh/ssh_host_rsa_key.pub
/etc/ssh/ssh_host_ecdsa_key
/etc/ssh/ssh_host_dsa_key
Mounting device in preparation for zeroize...
Cleaning up target disk for zeroize ...
Zeroize done on target disk.
Zeroize of primary disk completed
Zeroize done
---(more)---
Waiting for PIDS: 6135.
.
Feb 16 14:59:33 jlaunchd: periodic-packet-services (PID 6181) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: smg-service (PID 6234) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: application-identification (PID 6236) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: ifstate-tracing-process (PID 6241) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: resource-management (PID 6243) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: charged (PID 6246) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: license-service (PID 6255) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: ntp (PID 6620) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: gkd-chassis (PID 6621) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: gkd-lchassis (PID 6622) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: routing (PID 6625) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: sonet-aps (PID 6626) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: remote-operations (PID 6627) terminate signal 15 sent
Feb 16 14:59:33 jlaunchd: class-of-service
.....

```

Stopping cron.